RISC-V External Debug Support Version 0.11nov12

Tim Newsome <tim@sifive.com>

November 12, 2016

Warning! This draft specification will change before being accepted as standard, so implementations made to this draft specification will likely not conform to the future standard.

Contents

1	Introduction	5
2	About This Document 2.1 Structure 2.2 Terminology 2.3 Register Definitions 2.3.1 Long Name (shortname, at 0x123)	5 5 5 6
3	Background	6
4	Supported Features	6
5	System Overview	7
6	Debug Transport Module (DTM)	9
7	Debug Module(DM) 7.1 Debug Bus 7.2 System Bus 7.3 Debug Interrupt Block 7.4 Halt Notification Block 7.5 Debug ROM 7.6 Debug RAM 7.7 Reset Control 7.8 Bus Access 7.9 Serial Ports 7.10 Security	9 10 11 11 11 12 12 13 13 13 14

	7.11	Debug Module Debug Bus Registers			14
		7.11.1 Control (dmcontrol, at 0x10)			14
		7.11.2 Info (dminfo, at 0x11)			16
		7.11.3 Authentication Data (authdata0, at 0x12) .			18
		7.11.4 Authentication Data (authdata1, at 0x13) .			18
		7.11.5 Serial Data (serdata, at 0x14)			19
		7.11.6 Serial Status (serstatus, at 0x15)			19
		7.11.7 System Bus Address 31:0 (sbaddress0, at 0x)			20
		7.11.8 System Bus Address 63:32 (sbaddress1, at 0s			20
		7.11.9 System Bus Data 31:0 (sbdata0, at 0x18)			20
		7.11.10 System Bus Data 63:32 (sbdata1, at 0x19) .			21
		7.11.11 Halt Notification Summary (haltsum, at 0x1b	o)		21
		7.11.12 System Bus Address 95:64 (sbaddress2, at 02	x3d)		22
		7.11.13 System Bus Data 95:64 (sbdata2, at 0x3e) .			22
		7.11.14 System Bus Data 127.96 (sbdata3, at $0x3f$).			23
	7.12	Debug Module System Bus Registers			23
		7.12.1 Clear Debug Interrupt (cleardebint, at 0x10	(0)		23
		7.12.2 Set Halt Notification (sethaltnot, at 0x10c)			25
		7.12.3 Serial Info (serinfo, at 0x110)			25
		7.12.4 Serial Send 0 (sersend0, at 0x200)			25
		7.12.5 Serial Receive 0 (serrecv0, at 0x204)			25
		7.12.6 Serial Status 0 (serstat0, at $0x208$)		 •	26
8	RIS	C-V Debug			26
	8.1	Hart IDs			26
	8.2	Debug Mode			26
	8.3	Debug ROM Contents			27
	8.4	dret Instruction			27
	8.5	Load-Reserved/Store-Conditional Instructions			28
	8.6	Core Debug Registers			28
		8.6.1 Debug Control and Status (dcsr, at 0x7b0) .			28
		8.6.2 Debug PC (dpc, at 0x7b1)			30
		8.6.3 Debug Scratch Register (dscratch, at 0x7b2)			30
		8.6.4 Privilege Level (priv, at virtual)		 •	30
9	Trig	ger Module			31
	9.1	Trigger Registers			31
		9.1.1 Trigger Select (tselect, at 0x7a0)			31
		9.1.2 Trigger Data 1 (tdata1, at 0x7a1)			32
		9.1.3 Trigger Data 2 (tdata2, at 0x7a2)			33
		9.1.4 Trigger Data 3 (tdata3, at 0x7a3)			33
		9.1.5 Match Control (mcontrol, at 0x7a1)			
		9.1.6 Instruction Count (icount, at 0x7a1)			

10	JTA	G Debug Transport Module	37
	10.1	Background	37
		JTAG Connector	38
	10.3	JTAG Registers	38
		10.3.1 IDCODE (00001)	38
		10.3.2 DTM Control (dtmcontrol, at 10000)	41
		10.3.3 Debug Bus Access (dbus, at 10001)	42
		10.3.4 BYPASS (11111)	44
Δ	Deh	bugger Implementation	45
	A.1	Debug Bus Access	45
	A.2	Debug RAM	45
	A.3	Main Loop	45
	A.4	Reading Memory	46
	A.5	Writing Memory	47
	A.6	Halt	47
	A.7	Reading Registers	49
	A.8	Writing Registers	49
		Running	49
		Single Step	49
		Handling Exceptions	50
В	Deb	oug ROM Source	50
\mathbf{C}	Trac	ce Module	52
\mathbf{C}		ce Module Trace Data Format	52 53
\mathbf{C}	C.1	Trace Data Format	53
C	C.1 C.2	Trace Data Format	53 53
\mathbf{C}	C.1 C.2 C.3	Trace Data Format	53 53 53
\mathbf{C}	C.1 C.2	Trace Data Format	53 53 53 56
C	C.1 C.2 C.3	Trace Data Format	53 53 53 56 56
\mathbf{C}	C.1 C.2 C.3	Trace Data Format Trace Events Synchronization Trace Registers C.4.1 Trace (trace, at 0x728) C.4.2 Trace Buffer Start (tbufstart, at 0x729)	53 53 53 56 56 56
C	C.1 C.2 C.3	Trace Data Format	53 53 53 56 56
	C.1 C.2 C.3 C.4	Trace Data Format	53 53 53 56 56 58 58 58
	C.1 C.2 C.3 C.4	Trace Data Format Trace Events Synchronization Trace Registers C.4.1 Trace (trace, at 0x728) C.4.2 Trace Buffer Start (tbufstart, at 0x729) C.4.3 Trace Buffer End (tbufend, at 0x72a) C.4.4 Trace Buffer Write (tbufwrite, at 0x72b)	53 53 53 56 56 58 58 58
	C.1 C.2 C.3 C.4	Trace Data Format	53 53 53 56 56 58 58 58
D	C.1 C.2 C.3 C.4	Trace Data Format Trace Events Synchronization Trace Registers C.4.1 Trace (trace, at 0x728) C.4.2 Trace Buffer Start (tbufstart, at 0x729) C.4.3 Trace Buffer End (tbufend, at 0x72a) C.4.4 Trace Buffer Write (tbufwrite, at 0x72b)	53 53 53 56 56 58 58 58
D E	C.1 C.2 C.3 C.4 Futu D.1	Trace Data Format Trace Events Synchronization Trace Registers C.4.1 Trace (trace, at 0x728) C.4.2 Trace Buffer Start (tbufstart, at 0x729) C.4.3 Trace Buffer End (tbufend, at 0x72a) C.4.4 Trace Buffer Write (tbufwrite, at 0x72b) are Ideas Lightweight Brainstorming nge Log	53 53 53 56 56 58 58 58 58
D E	C.1 C.2 C.3 C.4 Futu D.1	Trace Data Format Trace Events Synchronization Trace Registers C.4.1 Trace (trace, at 0x728) C.4.2 Trace Buffer Start (tbufstart, at 0x729) C.4.3 Trace Buffer End (tbufend, at 0x72a) C.4.4 Trace Buffer Write (tbufwrite, at 0x72b) are Ideas Lightweight Brainstorming	53 53 53 56 56 58 58 58 58

List of Tables

1	Register Access Abbreviations	6
2	Debug Module Debug Bus Space	10
3	Debug Module System Bus Space	11
4	Debug Module Debug Bus Registers	14
5	Debug Module System Bus Registers	24
6	Debug ROM Contents	27
7	Core Debug Registers	28
8	Privilege Level Encoding	30
9	Trigger Registers	31
10	JTAG Connector Diagram	38
11	JTAG Connector Pinout	39
12	JTAG TAP Registers	40
13	Memory Read Timeline	48
14	Trace Sequence Header Packets	54
15	Trace Data Events	55
16	Trace Registers	56

Acknowledgments

I would like to thank the following people for their time, feedback, and ideas: Bruce Ableidinger, Krste Asanovic, Mark Beal, Monte Dalrymple, Peter Egold, Gajinder Panesar, Klaus Kruse Pedersen, Antony Pavlov, Ken Pettit, Megan Wachs, Stefan Wallentowitz, Ray Van De Walker, Andrew Waterman, and Andy Wright.

1 Introduction

Software contains bugs, and to help find these bugs it is critical to have good debugging tools. Unless a robust OS is running on a core, with convenient access to it (eg. over a network interface), hardware support is required to provide visibility into what is going on in that core. This document outlines how that support should be provided on RISC-V platforms.

2 About This Document

2.1 Structure

This document contains two parts. The main part of the document is the specification, which is given in the numbered sections. The second part of the document is a set of appendices. The information in the appendix is intended to clarify and provide examples, but is not part of the actual specification.

2.2 Terminology

A *platform* is a single integrated circuit consisting of one or more *components*. Some components may be RISC-V cores, while others may have a different function. Typically they will all be connected to a single system bus. A single RISC-V core contains one or more hardware threads, called *harts*.

2.3 Register Definitions

All register definitions in this document follow the format shown in Section 2.3.1. A simple graphic shows which fields are in the register. The upper and lower bit indices are shown to the top left and top right of each field. The total number of bits in the field are shown below it.

After the graphic follows a table which for each field lists its name, description, allowed accesses, and reset value. The allowed accesses are listed in Table 1.

Table 1: Register Access Abbreviations

R	Read-only.
R/W	Read/Write.
R/W0	Read/Write. Only writing 0 has an effect.
R/W1	Read/Write. Only writing 1 has an effect.
W	Write-only. When read this field returns 0.
W1	Write-only. Only writing 1 has an effect.

2.3.1 Long Name (shortname, at 0x123)

31		8	7	0
	0		fie	eld
	24			8

Field	Description	Access	Reset
field	Description of what this field is used for.	R/W	15

3 Background

There are two forms of external debugging. The first is *halt mode* debugging, where an external debugger will halt some or all components of a platform and inspect them while they are in stasis. Then the debugger can allow the hardware to either perform a single step or to run freely.

The second is *run mode* debugging. In this mode there is a software debug agent running on a component (eg. triggered by a timer interrupt on a RISC-V core) which communicates with a debugger without halting the component. This is essential if the component is controlling some real-time system (like a hard drive) where halting the component might lead to physical damage. It requires more software support (both on the chip as well as on the debug client). For this use case the debug interface may include simple serial ports.

A third use for the external debug interface is to use it as a general transport for a component to communicate with the outside world. For instance, it could be used to implement a serial interface that firmware could use to provide a simple CLI. This can use the same serial ports used for run-mode debugging.

4 Supported Features

The debug interface described out here supports the following features:

- 1. RV32, RV64, and future RV128 are all supported.
- 2. Any hart in the platform can be independently debugged.
- 3. Harts can be asked to run a short custom program and immediately return to regular execution afterwards, enabling relatively unintrusive inspection of state.

- 4. Optionally, a bus master can be implemented to allow memory access without involving any hart.
- 5. Debugging can be supported over multiple transports.
- 6. Code can be downloaded efficiently.
- 7. Each hart can be debugged from the very first instruction executed.
- 8. A RISC-V core can be halted when a software breakpoint instruction is executed.
- 9. Hardware can step over any instruction.
- 10. A RISC-V core can be halted when a trigger matches the PC, read/write address/data, or an instruction opcode.
- 11. The debug module may implement serial ports which can be used for communication between debugger and monitor, or as a general protocol between debugger and application.
- 12. Arbitrary instructions can be executed on a halted hart. That means no new debug functionality is needed when a core has custom instructions or registers, as long as there exist programs that can store those registers to memory.
- 13. The debugger doesn't need to know anything about the microarchitecture of the cores it is debugging.
- 14. Minimizes the additional datapath needed in the core to implement debug functionality.
- 15. Don't need to route a special debug bus to each core.
- 16. Cores don't have to become bus slaves.

5 System Overview

Figure 1 shows the main components of External Debug Support. Blocks shown in dotted lines are optional.

The user interacts with the Debug Host, which is running a debugger. The debugger communicates with a Debug Translator (which may include a hardware driver) to communicate with Debug Transport Hardware that's connected to the host. The Debug Transport Hardware connects the Debug Host to the Platform's Debug Transport Module (DTM). The DTM provides access to the Debug Module (DM) which contains much of the debug functionality. This interface is called the Debug Bus.

The DM allows the debugger to interrupt any hart in the platform. When a running RISC-V core is interrupted, it enters Debug Mode and jumps to the

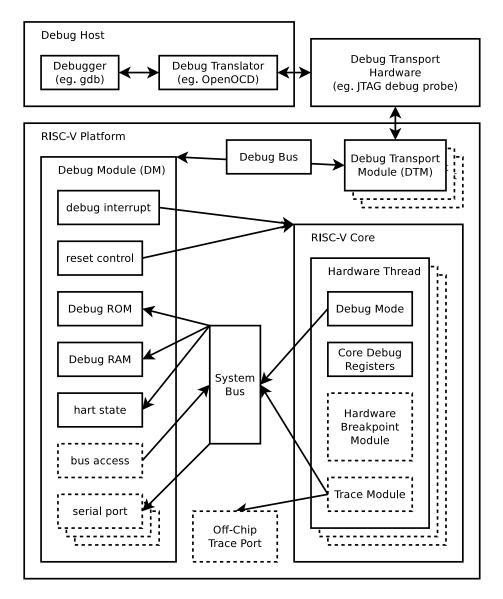


Figure 1: RISC-V Debug System Overview

Debug ROM. Generally this will cause it to execute code which has been written to the Debug RAM. The debugger can use this mechanism to access memory and registers at the cost of briefly halting one of the cores, or it can halt the hart and leave it halted.

Each RISC-V core may implement up to one Trigger Module for each hart. These can detect breakpoints as a hart is executing, which causes a hart to halt spontaneously. When that happens it notifies the DM by communicating over the System Bus. The DM tracks the hart status, and makes it available in its Debug Bus accessible registers so the debugger knows action is required. The debugger can then write appropriate instructions to Debug RAM, and send the hart another interrupt to indicate it should now jump to Debug RAM. This process is repeated until the debugger writes the code that causes the hart to leave Debug Mode.

Almost all this logic can be encoded in the Debug ROM. When a hart enters Debug Mode all it does is change the privilege mode it's running in, and jump to the beginning of Debug ROM. Code in the Debug ROM determines the cause and then either jumps straight to Debug RAM or notifies the debugger and then waits for further input from the debugger.

6 Debug Transport Module (DTM)

Debug Transport Modules provide access to the DM over one or more transports (eg. JTAG or USB).

There may be multiple DTMs in a single platform. Ideally every component that communicates with the outside world includes a DTM, allowing a platform to be debugged through every transport it supports. For instance a USB component could include a DTM. This would trivially allow any platform to be debugged over USB. All that is required is that the USB module already in use also has access to the Debug Bus.

Using multiple DTMs at the same time is not supported. It is left to the user to ensure this does not happen.

7 Debug Module (DM)

The Debug Module contains the shared functionality required to debug a RISC-V hart. It is accessed over two distinct buses that provide access to distinct register sets. DTMs communicate with the DM using the Debug Bus. Harts communicate with the DM using the System Bus. In addition, the DM drives independent reset and interrupt signals to every hart.

A single DM can debug up to 1024 harts. If more harts need to be accessible the best solution is to extend the specification.

DM可以为每个HART输出独 立的复位信号和中断请求

DTM使用调试总线来与DM 通信,HART使用系统总约 来与DM通信 地址线:5~32位 数据线:34位 支持读/写

7.1 Debug Bus

The Debug Bus uses between 5 and 32 address bits, and 34 data bits. It supports both read and write operations. The bottom of the address space is used for the DM. Extra space can be used for custom debug devices, other cores, etc. The space is laid out so that small to medium platforms can get away with just 5 address bits, while DTMs used on large systems will want to use 6 bits. 7 bits are only required for systems that want to use a large Debug RAM or have other debug modules. Details of this bus are implementation-specific.

The registers are 34 bits wide so that simple DTMs can access everything that is essential for efficient operation in a single access. This keeps the DTM simple, at the cost of a slightly awkward bus width. 34 bits are essential for an efficient bus master interface. The serial interface could work with 33 bits by jumping through some hoops involving special data values. The Debug RAM interface could actually work fine with just 33 bits, but it's worth to having extra bit just to make the (hopefully common) bus master extension great.

使用34位数据线的原因

How this bus is implemented is completely left up to the designer, but in larger systems it makes sense to use a standard multi-master bus. TODO: Recommend a specific bus.

Table 2 shows the layout of the Debug Bus address space.

Table 2: Debug Module Debug Bus Space

Address	Description					
0x00 - 0x0f	64 bytes of R/W Debug RAM access. Each unique address					
	accesses 32 bits of the debug RAM, so 0x0 contains the first					
	word, 0x1 the second word, and so on.					
	Bit 32 of every register provides R/W0 access to the halt					
	notification of the hart selected by hartid in dmcontrol. Bit					
	33 of every register provides R/W1 access to the debug					
	interrupt of the hart selected by hartid in dmcontrol.					
0x10 - 0x1b	Debug Module registers described in Section 7.11.					
0x1c - 0x3b	Halt Notification Status registers. Bit 0 of the first register					
	contains halt notification 0, while bit 31 of the last register					
	contains halt notification 1023 (if there are that many harts					
	attached).					
0x3c - 0x3f	Debug Module registers described in Section 7.11.					
0x40 - 0x6f	192 more bytes of R/W Debug RAM access for words $0x10$ –					
	0x3f of the Debug RAM. Only implemented if Debug RAM					
	is larger than 64 bytes. This spec doesn't present any					
	compelling reason to implement that much Debug RAM.					

Some registers might not be present, either because the feature they support doesn't exist or because there's simply empty space in the register map. Those

DTM通过调试总线访问DM 的调试RAM域时,第32位 返回"处理器暂停应答", 第33位返回"调试中断 (标志)"

7.2 System Bus

Harts being debugged communicate with the DM over the System Bus. The Debug Module addresses are fixed across all platforms to reduce the amount of customization required. Table 3 shows which address ranges are handled by the DM.

The debug registers and RAM are placed below 0x800 so that it is possible to access the debug space relative to x0, which allows the Debug ROM code to only save a single register upon entry.

Table 3: Debug Module System Bus Space

Address	Description		
0x0 - 0xff	Reserved for custom use.		
0x100 - 0x2ff	ff Debug Module registers described in Section 7.12.		
0x400 - 0x4ff	4ff Up to 256 bytes of Debug RAM. Each unique address		
	specifies 8 bits.		
0x800 - 0x9ff	Up to 512 bytes of Debug ROM.		

This reliance on the System Bus means that debugging is not possible if the System Bus is hung for some reason. If this is a concern, then it's possible to implement a separate bus that allows each hart to access the registers listed in Table 3.

7.3 Debug Interrupt Block

This block controls interrupts from the Debug Module to a hart. It is used to halt a currently running hart, or to signal that the hart should take an action when it is already halted.

For each hart the block contains a single bit that gets set when 1 is written to interrupt in dmcontrol or Debug RAM registers. The bit gets cleared when its hart id is written to cleardebint. It is unspecified what happens if the bit is set and cleared at the same time.

调试中断(标志)的置位 和清零

The Debug Module conceptually has a direct connection to the debug interrupt signal of every hart that has one. Each hart must receive a signal change in no longer than 1 second. (How this is implemented is not further specified. A few clock cycles will be more typical.)

7.4 Halt Notification Block

This block tracks halt notifications from a hart to the Debug Module. It is used by harts to inform the Debug Module that they halted for a reason other than the Debug Interrupt being asserted.

For each hart, the block contains a single bit that gets set when the corresponding number is written to sethaltnot. The bit can be cleared using haltnot in dmcontrol and Debug RAM registers. It is read over the Debug Bus using haltsum, the halt notification section in the Debug Bus address space, and haltnot in dmcontrol and Debug RAM registers. It is unspecified what happens if the bit is set and cleared at the same time.

It's expected that a hart will write its hart ID to sethaltnot when it halts spontaneously. (Debug ROM code takes care of this.) Any other writes will likely confuse the debugger and should be avoided.

7.5 Debug ROM

The Debug ROM contains code for a RISC-V hart to execute when it enters Debug Mode. This ROM is inside the Debug Module so that it can be shared among all RISC-V harts in the system, and reduces the number of changes required to a RISC-V core to support debugging.

It is described in detail in Section 8.3.

7.6 Debug RAM

The Debug RAM is used by the debugger and the Debug ROM code to execute arbitrary instructions, and to hold data. Debug RAM must be at least 28 bytes to accommodate 32-bit RISC-V cores, 40 bytes to accommodate 64-bit RISC-V cores, and 64 bytes to accommodate 128-bit RISC-V cores.

Debug RAM is accessible over both the Debug Bus and the System Bus. When it is accessed by both simultaneously, reads may return undefined data, while writes may be ignored. If an access over the Debug Bus fails in this way, the result must be 2 (fail).

对于RV32来说, Debug RAM至少有28字节

Debug RAM可以同时被调 试总线和系统总线访问

The minimum Debug RAM size is determined by the smallest debug program that can write an arbitrary value to an arbitrary location in RAM. That program consists of 4 instructions, followed by 3 XLEN-bit values (address, data, and scratch). Code for this program is shown in Section A.5. (When the compressed ISA is supported it would be possible to cut 8 bytes from this requirement, but a debugger may assume that it doesn't need to use the compressed ISA.)

Since Debug RAM resides on the System Bus, it's possible for any component to write to it at any time. Unexpected writes should only happen when a component malfunctions, but if it does happen it will definitely interfere with debugging. At the cost of more hardware, this can be resolved in two ways. If the bus knows an ID for the originator, then the Debug Module can refuse write accesses to originators that don't match the hart ID set in hartid of dmcontrol. If that's not feasible, a more expensive option is to include a separate Debug RAM per hart, which is only accessible from that hart. To achieve this you would likely need a separate bus that gives the DM full access and the harts

access to just their Debug RAM. hartid controls which Debug RAM the DM accesses. This is an expensive solution, but still a valid implementation of this spec.

7.7 Reset Control

This block is connected to global reset signals. The first signal resets every component in the platform. The second signal is optional and resets the non-debug portion of every component in the platform. Both resets exclude any DTMs and the Debug Module itself.

7.8 Bus Access

In a minimal configuration a debugger can access the system bus by having a RISC-V hart perform the accesses it requires. Optionally a Bus Access block may be implemented. Because the Bus Access block performs accesses directly from the DM, it only uses physical addresses.

Implementing a Bus Access block has several benefits. First, it is now possible to inspect a running system with minimal impact. The only impact now is that the bus is busy while the debugger is performing an access. Second, it may improve performance when downloading programs. There is only a benefit if JTAG TCK is a significant fraction of the RISC-V hart's clock speed. Third, it may provide access to devices that a hart does not have access to. A hart may be unable to access all devices in a system (eg. for security reasons) and in this case the debugger needs another path to access them.

To keep implementing, configuring, and using a debugger as simple as possible, systems should use the same memory map for each hart. That means that a given address maps to the same device no matter which hart performs the access. (Different harts may not all have permission to access the same devices.) If different harts do have unique memory maps then the system should provide access to all devices using the Bus Access block. This will make implementing, configuring, and using a debugger more complex so should be avoided if possible.

7.9 Serial Ports

The Debug Module may implement up to 8 serial ports. They support basic flow control and full duplex data transfer between a component and the debugger. They can be used to communicate with a debug monitor running on a hart, for the equivalent of printf debugging, to provide a simple **CLI** without requiring any extra peripherals, or more generally to emulate devices that aren't present. All these uses require software support, and are not further specified here.

命令行接口

可以为DM实现1个访问整 个SOC系统的总线

7.10 Security

To protect intellectual property it may be desirable to lock access to the Debug Module. To allow access during a manufacturing process and not afterwards, a reasonable solution could be to add a fuse bit to the Debug Module that can be used to be permanently disable it. Since this is technology specific, it is not further addressed in this spec.

Another option is to allow the DM to be unlocked only by users who have an access key. A simple mechanism is documented in Section 7.11. When authenticated is clear, the DM must not interact with the rest of the platform in any way.

7.11 Debug Module Debug Bus Registers

Table 4: Debug Module Debug Bus Registers

Address	Name
0x10	Control
0x11	Info
0x12	Authentication Data
0x13	Authentication Data
0x14	Serial Data
0x15	Serial Status
0x16	System Bus Address 31:0
0x17	System Bus Address 63:32
0x18	System Bus Data 31:0
0x19	System Bus Data 63:32
0x1b	Halt Notification Summary
0x3d	System Bus Address 95:64
0x3e	System Bus Data 95:64
0x3f	System Bus Data 127:96


7.11.1 Control (dmcontrol, at 0x10)

	33	32	31	22	21	19	18 16	
	interrupt	haltnot 0 buser		serror	serial			
	1	1		10		3	3	_
	15	14	12	11	2	1	0	
Г	autoincrement access		harti	d	ndrese	t fullres	et	
1 3		10		1	1			

Field	Description	Access	Reset
interrupt	This field contains the Debug Inter-	R/W1	0
	rupt bit for the hart selected by hartid.		
	Writes apply to the new value of hartid.		
	This field is also accessible when access-		
	ing Debug RAM.		
haltnot	This field contains the Halt Notifica-	R/W0	0
	tion bit for the hart selected by hartid.		
	Writes apply to the new value of hartid.		
	This field is also accessible when access-		
L	ing Debug RAM.	D/WO	0
buserror	When the debug bus master causes a	R/W0	0
	bus error, this field gets set. It remains		
	set until 0 is written to any bit in this		
	field. Until that happens, the bus master is busy and no more accesses can be		
	initiated.		
	0: There was no bus error.		
	1: There was a timeout.		
	2: A bad address was accessed.		
	3: There was some other error (eg.		
	alignment).		
serial	Select which serial port is accessed by	R/W	0
	serdata.	,	
autoincrement	When 1, the internal address value	R/W	0
	(used by the bus master) is incremented		
	by the access size (in bytes) selected in		
	access after every bus access.		
access	Select the access size to use for system	R/W	2
	bus accesses triggered by writes to the		
	sbaddress registers or sbdata0.		
	0: 8-bit		
	1: 16-bit		
	2: 32-bit 3: 64-bit		
	4: 128-bit		
	If an unsupported access size is written		
	here, the DM may not perform the ac-		
	cess, or may perform the access with any		
	access size		
hartid	The ID of the hart to select. The halt	R/W	0
	notification and debug interrupt of the	==,	
	selected hart are accessible in haltnot		
	and interrupt in this register as well as		
	every Debug RAM register.		
		ied on nex	xt page

ndreset	Every time this bit is written as 1, it triggers a full reset of the non-debug logic on the platform. This bit exists so that, for debugging purposes, reset behavior can be different from the standard behavior. For instance, a core could be forced into Debug Mode right	W1	0
fullreset	out of reset. Every time this bit is written as 1, it triggers a full reset of the platform, including every component in it and the debug logic for each component. It also resets the DM itself.	W1	0

7.11.2 Info (dminfo, at 0x11)

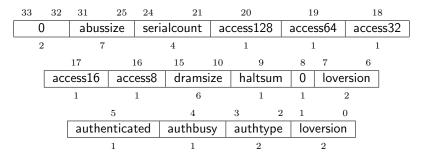

Field	Description	Access	Reset
abussize	Width of the address bus in bits. (0 in-	R	Preset
	dicates there is no bus access support.)		
serialcount	Number of supported serial ports.	R	Preset
access128	1 when 128-bit bus accesses are sup-	R	Preset
	ported.		
access64	1 when 64-bit bus accesses are sup-	R	Preset
	ported.		
access32	1 when 32-bit bus accesses are sup-	R	Preset
	ported.		
access16	1 when 16-bit bus accesses are sup-	R	Preset
	ported.		
access8	1 when 8-bit bus accesses are supported.	R	Preset
dramsize	Size of the Debug RAM, in 32-bit words	R	Preset
	minus 1. Eg. if Debug RAM is 32 bytes,		
	it's encoded here as $7(32/4-1)$.		
	A debugger must not access any De-		
	bug RAM locations that fall outside the		
haltsum 1 when haltsum is implemented.			Preset
loversion	Bits 3:2 of the 4-bit version field.	R	0
authenticated	0 when authentication is required be-	R	Preset
	fore using the DM. 1 when the authen-		
	tication check has passed. On compo-		
	nents that don't implement authentica-		
	tion, this bit must be preset as 1.		
authbusy	While 1, writes to authdata0 and	R	0
	authdata1 may be ignored or may re-		
	sult in authentication failing. Authen-		
	tication mechanisms that are slow (or		
	intentionally delayed) must set this bit		
	when they're not ready to process an-		
	other write.		
	Contin	ued on ne	ext page

authtype	Defines the kind of authentication re-	R	Preset
	quired to use this DM.		
	0: No authentication is required.		
	1: A password is required.		
	2: A challenge-response mechanism is in		
	place.		
	3: Reserved for future use.		
loversion	Bits 1:0 of the 4-bit version field. The	R	1
	combined version field is interpreted as		
	follows:		
	0: There is no Debug Module present.		
	1: There is a Debug Module and it con-		
	forms to version 0.11 of this specifica-		
	tion.		
	Other values are reserved for future use.		

7.11.3 Authentication Data (authdata0, at 0x12)

If authtype is 0, this register is not present.

If authtype is 1, writing a correct password to this register and authdata1 enables the DM. The DM is disabled either by writing an invalid password, or by resetting it. 0 must not be used as a password. If an implementation wants to use a well-known password, the recommended value is 0x5551212. Reading from the register returns 0.

If authtype is 2, things are a bit more complicated. Reading from the register pair reads the last challenge generated. Writing the correct response to authdata1 and authdata0 enables the DM. The DM is disabled either by writing an incorrect response, or by resetting it. Writing to authdata0 triggers validation, so if a 64-bit value is required then authdata1 must be written first. If the combined value in authdata0 and authdata1 is not a valid response after writing authdata0, then a new challenge must be generated. Depending on the implementation, there may not be a valid challenge until the first write to this register.

33	32	31		0
()		data	
-	2		32	

7.11.4 Authentication Data (authdata1, at 0x13)

This register contains the upper 32 bits of a 64-bit password or challenge/response as described in authdata0.

33	32	31		0
()		data	
-)		30	

7.11.5 Serial Data (serdata, at 0x14)

If serialcount is 0, this register is not present.


All the fields in this register apply to the serial port selected by serial in dmcontrol.

33	32	31	0
write/valid	full/overflow	data	
1	1	39	

Field	Description	Access	Reset
write/valid	Set this bit to write data to the	R/W	0
	debugger-to-core queue.		
	Read this bit to determine whether the		
	register contains valid data from the		
	core-to-debugger queue.		
full/overflow	0: The debugger-to-core queue is not	R/W0	0
	full. The next write will be accepted.		
	1: The debugger-to-core queue is cur-		
	rently full, or the debugger has previ-		
	ously attempted to write to the queue		
	when it was full. To clear this state, the		
	debugger must write 0 to this bit. (The		
	queue may still be full, in which case the		
	bit will remain high.)		
data	This field contains the oldest value in	R/W	0
	the core-to-debugger queue if write/valid		
	reads as 1.		

7.11.6 Serial Status (serstatus, at 0x15)

If serialcount is 0, this register is not present.

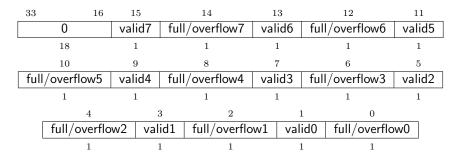

Field	Description	Access	Reset
valid0	1 when the core-to-debugger queue for	R	0
	serial port 0 is not empty.		
full/overflow0	full/overflow for serial port 0.	R/W0	0

7.11.7 System Bus Address 31:0 (sbaddress0, at 0x16)

If abussize is 0, then this register is not present.

33	32	31		0
busy	read		address	
1	1		32	

Field	Description	Access	Reset
busy	When 1, the bus master is busy and will	R	0
	ignore any writes to the System Bus reg-		
	isters. Don't write to this register with-		
	out reading busy as 0 first.		
read	If written as 1, the bus master will start	W	0
	to read after updating the address from		
	address. The access size is controlled by		
	access in dmcontrol.		
address	Accesses the lower 32 bits of the internal	R/W	0
	address.		

7.11.8 System Bus Address 63:32 (sbaddress1, at 0x17)

If abussize is less than 33, then this register is not present.

	33	32	31		0
ſ	busy	read		address	
	1	1		32	

Field	Description	Access	Reset
busy	The same as busy in sbaddress0.	R	0
read	The same as read in sbaddress0.	W	0
address	Accesses bits 63:32 of the internal ad-	R/W	0
	dress (if the system address bus is that		
	wide).		

7.11.9 System Bus Data 31:0 (sbdata0, at 0x18)

If all of the access bits in dminfo are 0, then this register is not present.

33	32	31 0
write/busy	read/valid	data
1	1	32

Field	Description	Access	Reset
write/busy	When 1, the bus master is busy and will	R/W	0
	ignore any writes to the System Bus reg-		
	isters.		
	If written as 1, the bus master will start		
	to write after updating the data from		
	data. The access size is controlled by		
	access in dmcontrol.		
read/valid	When 1, the register contains the result	R/W	0
	of a successful memory read. The valid		
	state is automatically cleared every time		
	a new bus access is started.		
	If written as 1, the bus master will start		
	to read after updating the address from		
	address. The access size is controlled by		
	access in dmcontrol.		
data	Accesses bits 31:0 of the internal data.	R/W	0

7.11.10 System Bus Data 63:32 (sbdata1, at 0x19)

If access64 and access128 are 0, then this register is not present.

33	32	31 0	
write/busy	read/valid	data	
1	1	32	_

Field	Description	Access	Reset
write/busy	The same as write/busy in sbdata0, ex-	R/W	0
	cept if an access is triggered the access		
	size is 64 bits instead of what access se-		
	lects.		
read/valid	The same as read/valid in sbdata0, ex-	R/W	0
	cept if an access is triggered the access		
	size is 64 bits instead of what access se-		
	lects.		
data	Accesses bits 63:32 of the internal data	R/W	0
	(if the system bus is that wide).		

7.11.11 Halt Notification Summary (haltsum, at 0x1b)

If implemented, this register contains a summary of which halt bits are set. This register should be implemented if there are more than 64 harts, or if there are more than 32 harts and more than 0 serial ports.

Each of the lower 32 bits contains the logical OR of 32 consecutive halt bits. When there are a large number of harts in the system, the debugger can first read this register, and then the specific registers to find the exact halt bit that's asserted.

33	;	32		31		30		29		28	
serialfull	seria	lvalid	ack:	1023:992	ac	ck991:960	ac	k959:928	a	ck927:896	
1		1		1		1		1		1	
27		26		25		24		23		22	
ack895:86	4 a	ck863:8	32	ack831:80	0	ack799:76	8	ack767:73	36	ack735:70	4
1		1		1		1		1		1	
21		20		19		18		17		16	
ack703:67	2 a	ck671:6	640	ack639:60	8	ack607:57	6	ack575:54	44	ack543:51	2
1		1		1		1		1		1	_
15		14		13		12		11		10	
ack511:48	0 a	ck479:4	48	ack447:41	6	ack415:38	4	ack383:3!	52	ack351:32	0
1		1		1		1		1		1	
9		8		7		6		5		4	
ack319:28	8 a	ck287:2	256	ack255:22	4	ack223:19	2	ack191:10	60	ack159:12	8
1		1		1		1		1		1	_
		3	3	2		1		0			
		ack12	27:96	ack95:6	4	ack63:32	ac	:k31:0			
		1	L	1		1		1			
T2: 11		D .	, •					Ι Δ		D. /	

Fi	eld	Description	Access	Reset
se	rialfull	Logical OR of all the full bits in	R	0
		serstatus.		
se	rialvalid	Logical OR of all the valid bits in	R	0
		serstatus.		

7.11.12 System Bus Address 95:64 (sbaddress2, at 0x3d)

If abussize is less than 65, then this register is not present.

33	32	31		0
busy	read		address	
1	1		32	

Field	Description	Access	Reset
busy	The same as busy in sbaddress0.	R	0
read	The same as read in sbaddress0.	W	0
address	Accesses bits 95:64 of the internal ad-	R/W	0
	dress (if the system address bus is that		
	wide).		

7.11.13 System Bus Data 95:64 (sbdata2, at 0x3e)

This register only exists if access128 is 1.

33	32	31 0
write/busy	read/valid	data
1	1	32

Field	Description	Access	Reset
write/busy	The same as write/busy in sbdata0, ex-	R/W	0
	cept if an access is triggered the access		
	size is 128 bits instead of what access		
	selects.		
read/valid	The same as read/valid in sbdata0, ex-	R/W	0
	cept if an access is triggered the access		
	size is 128 bits instead of what access		
	selects.		
data	Accesses bits 95:64 of the internal data	R/W	0
	(if the system bus is that wide).		

7.11.14 System Bus Data 127:96 (sbdata3, at 0x3f)

This register only exists if access128 is 1.

33	32	31	0
write/busy	read/valid	data	
1	1	39	

Field	Description	Access	Reset
write/busy	The same as write/busy in sbdata0, ex-	R/W	0
	cept if an access is triggered the access		
	size is 128 bits instead of what access		
	selects.		
read/valid	The same as read/valid in sbdata0, ex-	R/W	0
	cept if an access is triggered the access		
	size is 128 bits instead of what access		
	selects.		
data	Accesses bits 127:96 of the internal data	R/W	0
	(if the system bus is that wide).		

7.12 Debug Module System Bus Registers

7.12.1 Clear Debug Interrupt (cleardebint, at 0x100)

清除调试中断(标志)

Writes to this register clear the debug interrupt corresponding to the number written. To avoid a race, the DM must not complete the write access on the System Bus until the change in the debug interrupt value has been propagated to the relevant hart.

A hart must write its hart ID to this register to indicate that it has completed executing a debug program. (The code to do this is already in the Debug ROM.)

31		10	9		0
	0			id	
	22			10	

完成写传输之前,必须确 保调试中断值已被传递到 指定HART

Table 5: Debug Module System Bus Registers

	o. Debug	Module System Dus Regi
	Address	Name
ĺ	0x100	Clear Debug Interrupt
	0x10c	Set Halt Notification
	0x110	Serial Info
	0x200	Serial Send 0
	0x204	Serial Receive 0
	0x208	Serial Status 0
	0x20c	Serial Send 1
	0x210	Serial Receive 1
	0x214	Serial Status 1
	0x218	Serial Send 2
	0x21c	Serial Receive 2
	0x220	Serial Status 2
	0x224	Serial Send 3
	0x228	Serial Receive 3
	0x22c	Serial Status 3
	0x230	Serial Send 4
	0x234	Serial Receive 4
	0x238	Serial Status 4
İ	0x23c	Serial Send 5
	0x240	Serial Receive 5
	0x244	Serial Status 5
	0x248	Serial Send 6
	0x24c	Serial Receive 6
	0x250	Serial Status 6
	0x254	Serial Send 7
	0x258	Serial Receive 7
	0x25c	Serial Status 7

7.12.2 Set Halt Notification (sethaltnot, at 0x10c)

Writes to this register set the halt notification bit corresponding to the number written.

A hart must write its hart ID to this register to indicate to the debugger that it has halted spontaneously. (The code to do this is already in the Debug ROM.)



7.12.3 Serial Info (serinfo, at 0x110)

31		8 7	6	5	4
	0	serial	7 serial	5 serial5	serial4
	24	1	1	1	1
	3	2	1	0	
	serial3	serial2	serial1	serial0	
	1	1	1	1	

Field	Description	Access	Reset
serial7	Like serial0.	R	Preset
serial6	Like serial0.	R	Preset
serial5	Like serial0.	R	Preset
serial4	Like serial0.	R	Preset
serial3	Like serial0.	R	Preset
serial2	Like serial0.	R	Preset
serial1	Like serial0.	R	Preset
serial0	1 means serial interface 0 is supported.	R	Preset

7.12.4 Serial Send 0 (sersend0, at 0x200)

Values written to this address are added to the core-to-debugger queue, unless the queue is already full.



7.12.5 Serial Receive 0 (serrecv0, at 0x204)

This register contains the oldest value in the debugger-to-core queue. Reading the register removes that value from the queue. If the queue is empty, reading this register returns an undefined value.



7.12.6 Serial Status 0 (serstat0, at 0x208)

31		2	1	0
	0		sendr	recvr
	30		1	1

Field	Description	Access	Reset
sendr	Send ready. 1 when the core-to-	R	1
	debugger queue is not full. 0 otherwise.		
recvr	Receive ready. 1 when the debugger-to-	R	1
	core queue is not empty. 0 otherwise.		

8 RISC-V Debug

Modifications to the RISC-V core to support debug are kept to a minimum. There is a special execution mode (Debug Mode) and a few extra CSRs. The code in Debug ROM and resources in the Debug Module take care of the rest.

8.1 Hart IDs

External debug imposes a few limits on hart IDs. Every hart in the system must have a unique ID. (There could be additional harts that reuse IDs, but only one of the harts that share an ID can be debugged.) One of the harts must use ID 0. The debugger needs this to access the Device Tree to enumerate the remaining harts in the system. Hart IDs should be less than 128 if the Debug Bus address is 5 bits wide, or less than 1024 if that address is 6 or more bits wide.

8.2 Debug Mode

Debug Mode is a special processor mode used only when the core is halted for external debugging.

To enter Debug Mode the hart:

- 1. Saves pc to dpc.
- 2. Sets cause in dcsr.
- 3. Sets pc to 0x800.

While in Debug Mode:

- 1. All operations happen in machine mode.
- 2. mprv in mstatus is ignored.
- 3. All interrupts are masked. Whether slow watchdog timers (10s or longer) are masked is left to the implementation.
- 4. All exceptions don't update any registers, and cause the hart to jump to exception in Debug ROM. That means no cause, epc, and badaddr registers are changed. mstatus isn't updated either.
- 5. No trigger actions are taken.

- 6. Trace is disabled.
- 7. Cycle counters may be stopped, depending on stopcycle in dcsr.
- 8. Timers may be stopped, depending on stoptime in dcsr.
- 9. The wfi instruction either acts as nop, or stalls the hart until the Debug Interrupt is set. It ignores any other interrupts.
- 10. Instructions that change the privilege level have undefined behavior. This includes ecall, ebreak, mret, hret, sret, and uret. The only exception is dret, described in Section 8.4. (To change the privilege level, the debugger can write prv in dcsr.)

8.3 Debug ROM Contents

Table 6: Debug ROM Contents

Address	Name	Pseudocode					
0x800	entry	If cause indicates a debug interrupt, jump to					
		Debug RAM. Otherwise, write mhartid to					
		sethaltnot (to notify the debugger), set halt (to					
		track the reason for entry), wait for debugint to be					
		set, and jump to Debug RAM.					
0x804	resume	Write 0 to the last word in Debug RAM. Write					
		mhartid to cleardebint (to notify the debugger					
		the hart is back in Debug ROM). If halt is set, wait					
		for debugint to be set, and jump to Debug RAM.					
		Otherwise restore saved registers and resume					
		normal execution at dpc.					
0x808	exception	Just like resume, but writes 0xfffffff to the last					
		word in Debug RAM instead of 0.					
0x80c	Reserved	Reserved for future standard use.					

The Debug ROM (part of the Debug Module) contains the code required for a debugger to communicate with a hart while in Debug Mode. Table 6 summarizes the contents of the Debug ROM, while sample Debug ROM source can be found in Appendix B.

When entering Debug RAM, so is saved in dscratch and s1 is saved at the very end of Debug RAM. In between calls to Debug RAM so and s1 will change, but all other registers keep their value. Debug ROM code restores both so and s1 registers from those locations before leaving Debug Mode.

It is expected that the code in Debug RAM finishes with a jump to resume in Debug ROM.

8.4 dret Instruction

To return from Debug Mode, a new instruction is required: dret. It has an encoding of 0x7b200073. Executing the instructions changes pc to the value

Debug ROM里的代码已经 实现了保护/恢复现场 stored in dpc. The current privilege level is changed to what's specified by prv in dcsr. cause in dcsr is cleared since the hart is no longer in Debug Mode.

Executing dret outside of Debug Mode causes an illegal instruction exception.

8.5 Load-Reserved/Store-Conditional Instructions

The reservation registered by an lr instruction on a memory address may be lost when entering Debug Mode or while in Debug Mode. This means that there may be no forward progress if Debug Mode is entered between 1r and sc pairs.

Core Debug Registers 8.6

The Core Debug Registers must be implemented for each hart being debugged. These registers are only accessible from Debug Mode.

step, halt, and prv all lie in the lower 5 bits so a debugger can manipulate them using csrsi and csrci.

debugint and cause all lie within a 12-bit immediate so Debug ROM can check them using integer instructions that use immediates.

	7: Core Debug Registers
11	N.T.

Address	Name
0x7b0	Debug Control and Status
0x7b1	Debug PC
0x7b2	Debug Scratch Register
virtual	Privilege Level

8.6.1 Debug Control and Status (dcsr, at 0x7b0)

31	30	29	28	27		16	15	5	1	14
xdel	ougver	ndreset	fullres	et	0		ebrea	akm	ebre	eakh
	2	1	1		12		1			1
	13	12	11	10)		9	8	6	
	ebreak	s ebreak	ku 0	stopc	ycle	sto	ptime	ca	use	
	1	1	1	1			1		3	
		5	4	3	2	1	0			
		debug	int 0	halt	step		prv			
		1	1	1	1		2			

Field	Description	Access	Reset			
xdebugver	0: There is no Debug Mode support.	R	Preset			
	1: Debug Mode exists as it is described					
	in this document.					
	Other values are reserved for future					
	standards.					
ndreset	Every time this bit is written as 1, it	W1	0			
	triggers a full reset of the hart except					
	for the halt bit in this register. This					
	enables a debugger to reset a hart and					
	debug it from the very first instruction					
	executed.					
fullreset	Every time this bit is written as 1, it	W1	0			
	triggers a full reset of the hart, including					
	the debug logic.					
<mark>ebreakm</mark>	When 1, ebreak instructions in Ma-	R/W	0			
	chine Mode enter Debug Mode.					
ebreakh	When 1, ebreak instructions in Hyper-	R/W	0			
	visor Mode enter Debug Mode.					
ebreaks	When 1, ebreak instructions in Super-	R/W	0			
	visor Mode enter Debug Mode.					
ebreaku	When 1, ebreak instructions in	R/W	0			
	User/Application Mode enter Debug					
	Mode.					
stopcycle	Controls the behavior of any counters	R/W	1			
	while the component is in Debug Mode.					
	This includes the cycle and instret					
	CSRs. When 1, counters are stopped					
	when the component is in Debug Mode.					
	Otherwise, the counters continue to run.					
	An implementation may choose not to					
	support writing to this bit. The debug-					
	ger must read back the value it writes to					
	check whether the feature is supported.					
Continued on next page						

stoptime	Controls the behavior of any timers while the component is in Debug Mode. This includes the time and tt timeh CSRs. When 1, timers are stopped when the component is in Debug Mode. Otherwise, the timers continue to run. An implementation may choose not to support writing to this bit. The debugger must read back the value it writes to check whether the feature is supported.	R/W	0
cause	Explains why Debug Mode was entered. When there are multiple reasons to enter Debug Mode in a single cycle, the cause with the highest priority is the one written. 1: A software breakpoint was hit. (priority 3) 2: The Trigger Module caused a halt. (priority 4) 3: The debug interrupt was asserted by the Debug Module. (priority 2) 4: The hart single stepped because step	R	0
debugint	was set. (priority 1) 5: halt was set. (priority 0) Other values are reserved for future use. This bit contains the current value of	R	0
	the debug interrupt signal.		
halt	When this bit is set, the hart enters Debug Mode immediately if it is not already in Debug Mode. The bit is used to enter Debug Mode straight out of reset, and to ensure that spontaneous entries into Debug Mode don't get lost in a race with the debugger.	R/W	0
step	When set and not in Debug Mode, the hart will only execute a single instruction, and then enter Debug Mode. Interrupts are disabled when this bit is set.	R/W	0
prv	Contains the privilege level the hart was operating in when Debug Mode was entered. The encoding is describe in Table 8. A debugger can change this value to change the hart's privilege level when exiting Debug Mode. Not all privilege levels are supported on all harts. If the encoding written is not supported, the hart may ignore the value, or may change to any supported privilege level.	R/W	0

Table 8: Privilege Level Encoding

Privilege Level
User/Application
Supervisor
Hypervisor
Machine

8.6.2 Debug PC (dpc, at 0x7b1)

When entering Debug Mode, the current PC is copied here. When leaving Debug Mode, execution resumes at this PC.

XLEN-1	0
dpc	
XLEN	

8.6.3 Debug Scratch Register (dscratch, at 0x7b2)

Register reserved for Debug ROM where it can save so.

	XLEN-1	0
ſ	data	
	XLEN	

8.6.4 Privilege Level (priv, at virtual)

Users of the debugger shouldn't need to know about the debug registers, but might want to inspect and change the privilege level that the hart was running in when the hart halted. To facilitate this, debuggers should expose the privilege level in this virtual register. (A virtual register is one that doesn't exist directly in the hardware, but that the debugger exposes as if it does.)

Field	Description	Access	Reset
prv	Contains the privilege level the hart was	R/W	0
	operating in when Debug Mode was en-		
	tered. The encoding is describe in Table		
	8. A user can write this value to change		
	the hart's privilege level when exiting		
	Debug Mode.		

9 Trigger Module

Triggers can cause a debug exception, entry into Debug Mode, or a trace action without having to execute a special instruction. This makes them invaluable when debugging code from ROM. They can trigger on execution of instructions at a given memory address, or on the address/data in loads/stores. These are all features that can be useful without having the Debug Module present, so the Trigger Module is broken out as a separate piece that can be implemented separately.

Each trigger may support a variety of features. A debugger can build a list of all triggers and their features as follows:

- 1. Write 0 to tselect.
- 2. Read back tselect to confirm this trigger exists. If not, exit.
- 3. Read tdata1, and possible tdata2 and tdata3 depending on the trigger type.
- 4. If type in tdata1 was 0, then there are no more triggers.
- 5. Repeat, incrementing the value in tselect.

9.1 Trigger Registers

The trigger registers are only accessible in machine and debug mode to prevent untrusted user code from causing entry into Debug Mode without the OS's permission.

rabic 5.	1118801 1008130013
Address	Name
0x7a0	Trigger Select
0x7a1	Trigger Data 1
0x7a1	Match Control
0x7a1	Instruction Count
0x7a2	Trigger Data 2
0x7a3	Trigger Data 3

Table 9: Trigger Registers

9.1.1 Trigger Select (tselect, at 0x7a0)

This register determines which trigger is accessible through the other trigger registers. The set of accessible triggers must start at 0, and be contiguous.

Writes of values greater than or equal to the number of supported triggers result in an undefined value in tselect. Debuggers should read back the value to confirm that what they wrote was a valid index.

Since triggers can be used both by Debug Mode and M Mode, the debugger must restore this register if it modifies it.

XLEN-1	0
index	
XLEN	

9.1.2 Trigger Data 1 (tdata1, at 0x7a1)

XLEN-1	XLEN-4	XLEN-5	XLEN-6	0
ty _l	ре	dmode	data	
4	1	1	XLEN - 5	

Field	Description	Access	Reset
	0: There is no trigger at this tselect.	R	Preset
type		11	Treset
	1: The trigger is a legacy SiFive ad-		
	dress match trigger. These should not		
	be implemented and aren't further doc-		
	umented here.		
	2: The trigger is an address/data match		
	trigger.		
	3: The trigger is an instruction count		
	trigger.		
	15: This trigger exists (so enumeration		
	shouldn't terminate), but is not cur-		
	rently available.		
	Other values are reserved for future use.		
dmode	0: Both Debug and M Mode can	R/W	0
	write the tdata registers at the selected		
	tselect.		
	1: Only Debug Mode can write the		
	tdata registers at the selected tselect.		
	Writes from other modes are ignored.		
	This bit is only writable from Debug		
	Mode.		
	Contin	ued on ne	ext page

data Tri	gger-specific data.	R/W	Preset
----------	---------------------	-----	--------

9.1.3 Trigger Data 2 (tdata2, at 0x7a2)

Trigger-specific data.

	XLEN-1	0
ſ	data	
	XLEN	

9.1.4 Trigger Data 3 (tdata3, at 0x7a3)

Trigger-specific data.

9.1.5 Match Control (mcontrol, at 0x7a1)

This register is accessible as tdata1 when type is 2.

Writing unsupported values to any field in this register results in the reset value being written instead. When a debugger wants to use a feature, it must write the appropriate value and then read back the register to determine whether it is supported.

Address and data trigger implementation are heavily dependent on how the processor core is implemented. To accommodate various implementations, load and store address and data triggers may fire at whatever point in time is most convenient for the implementation. Following the suggestions in the definitions of store and load will lead to the best user experience, however.

XLE	N-1	XLE.	N-4	XL	EN-5	XL	EN-6	X.	LEN-	-11	XLEN-12		20	19	18	
	ty	эе		dn	node		ma	skma	ax		(0		select	timing	
	4	ŀ			1			6			XLE	N - 31		1	1	
	17	12	1	1	10	7	6	5	4	3	2	1	0			
	act	ion	cha	ain	mat	:ch	m	h	S	u	execute	store	load	d		
-		6	1		4		1	1	1	1	1	1	1			

Field	Description	Access	Reset
maskmax	Specifies the largest naturally aligned	R	0
	powers-of-two (NAPOT) range sup-		
	ported by the hardware. The value is		
	the logarithm base 2 of the number of		
	bytes in that range. A value of 0 in-		
	dicates that only exact value matches		
	are supported (one byte range). A		
	value of 63 corresponds to the maxi-		
	mum NAPOT range, which is 2^{63} bytes		
	in size.	D /111	
select	0: Perform a match on the address.	R/W	0
	1: Perform a match on the data value		
	loaded/stored, or the instruction exe-		
	cuted.	D /111	
timing	0: The action for this trigger will be	R/W	0
	taken just before the instruction that		
	triggered it is executed, but after all pre-		
	ceding instructions are are committed.		
	1: The action for this trigger will be		
	taken after the instruction that trig-		
	gered it is executed. It should be taken		
	before the next instruction is executed, but it is better to implement triggers		
	and not implement that suggestion than		
	to not implement that suggestion than to not implement them at all.		
	Most hardware will only implement one		
	timing or the other, possibly dependent		
	on select, execute, load, and store. This		
	bit primarily exists for the hardware to		
	communicate to the debugger what will		
	happen. Hardware may implement the		
	bit fully writable, in which case the de-		
	bugger has a little more control.		
	Data load triggers with timing of 0 will		
	result in the same load happening again		
	when the debugger lets the core run.		
	For data load triggers debuggers must		
	first attempt to set the breakpoint with		
	timing of 1.		
	A chain of triggers that don't all have		
	the same timing value will never fire (un-		
	less consecutive instructions match the		
	appropriate triggers).		
	Continu	ied on ne	xt page

action	Determines what happens when this	R/W	0
action	trigger matches.	10/ 00	
	0: Raise a debug exception. (Used when		
	software wants to use the trigger module		
	without an external debugger attached.)		
	1: Enter Debug Mode. (Only supported		
	when dmode is 1.)		
	2: Start tracing.		
	3: Stop tracing.		
	4: Emit trace data for this match. If it		
	is a data access match, emit appropriate		
	Load/Store Address/Data. If it is an		
	instruction execution, emit its PC.		
	Other values are reserved for future use.		
chain	0: When this trigger matches, the con-	R/W	0
	figured action is taken.	,	
	1: While this trigger does not match, it		
	prevents the trigger with the next index		
	from matching.		
match	0: Matches when the value equals	R/W	0
	tdata2.		
	1: Matches when the top M bits of		
	the value match the top M bits of		
	tdata2. M is XLEN-1 minus the index		
	of the least-significant bit containing 0		
	in tdata2.		
	2: Matches when the value is greater		
	than or equal to tdata2.		
	3: Matches when the value is less than		
	tdata2.		
	4: Matches when the lower half of the		
	value equals the lower half of tdata2 af-		
	ter the lower half of the value is ANDed		
	with the upper half of tdata2.		
	5: Matches when the upper half of the		
	value equals the lower half of tdata2 af-		
	ter the upper half of the value is ANDed		
	with the upper half of tdata2.		
	Other values are reserved for future use.		
Continued on next page			

m	When set, enable this trigger in M	R/W	0
	mode.		
h	When set, enable this trigger in H mode.	R/W	0
S	When set, enable this trigger in S mode.	R/W	0
u	When set, enable this trigger in U mode.	R/W	0
execute	When set, the trigger fires on the ad-	R/W	0
	dress or opcode of an instruction that is		
	executed.		
store	When set, the trigger fires on the ad-	R/W	0
	dress or data of a store.		
load	When set, the trigger fires on the ad-	R/W	0
	dress or data of a load.		

9.1.6 Instruction Count (icount, at 0x7a1)

This register is accessible as tdata1 when type is 3.

Warning! icount is just a proposal. So far nobody has commented on it, so it could very easily be removed or changed in the future.

Writing unsupported values to any field in this register results in the reset value being written instead. When a debugger wants to use a feature, it must write the appropriate value and then read back the register to determine whether it is supported.

This trigger type is intended to be used as a single step that's useful both for external debuggers and for software monitor programs. As such it is not necessary to support count greater than 1. The only two combinations of the mode bits that are useful in those scenarios are u by itself, or m, h, s, and u all set.

If the hardware limits count to 1, and changes mode bits instead of decrementing count, this register can be implemented with just 2 bits. One for u, and one for m, h, and s tied together. If only the external debugger or only a software monitor needs to be supported, a single bit is enough.

XLEN-1	XLEN-4	XLE	N-5	XI	EN-	3		24	23	10	9	
type		dmo	ode 0			count		m				
4	1	1			3	KLEN	- 29			14	1	
			8	7	6	5	0					
			h	S	u	act	tion					
			1	1	1		6					

Field	Description	Access	Reset
count	When count is decremented to 0, the	R/W	1
	trigger fires. Instead of changing count		
	from 1 to 0, it is also acceptable for		
	hardware to clear m, h, s, and u. This		
	allows count to be hard-wired to 1 if this		
	register just exists for single step.		
m	When set, every instruction completed	R/W	0
	in M mode decrements count by 1.		
h	When set, every instruction completed	R/W	0
	in H mode decrements count by 1.		
S	When set, every instruction completed	R/W	0
	in S mode decrements count by 1.		
u	When set, every instruction completed	R/W	0
	in U mode decrements count by 1.		
action	Determines what happens when this	R/W	0
	trigger matches.		
	0: Raise a debug exception. (Used when		
	software wants to use the trigger module		
	without an external debugger attached.)		
	1: Enter Debug Mode. (Only supported		
	when dmode is 1.)		
	2: Start tracing.		
	3: Stop tracing.		
	4: Emit trace data for this match. If it		
	is a data access match, emit appropriate		
	Load/Store Address/Data. If it is an		
	instruction execution, emit its PC.		
	Other values are reserved for future use.		

10 JTAG Debug Transport Module

This Debug Transport Module is based around a normal JTAG Test Access Port (TAP). The JTAG TAP allows access to arbitrary JTAG registers by first selecting one using the JTAG instruction register (IR), and then accessing it through the JTAG data register (DR).

10.1 Background

JTAG refers to IEEE Std 1149.1-2013. It is a standard that defines test logic that can be included in an integrated circuit to test the interconnections between integrated circuits, test the integrated circuit itself, and observe or modify circuit activity during the components normal operation. We're using it for the third case here. The standard defines a Test Access Port (TAP) that can be used to read and write a few custom registers, which can be used to communicate with

debug hardware in a component.

10.2 JTAG Connector

Every target's JTAG connector seems to have its own pinout. To make it easy to acquire debug hardware, this spec recommends a connector that is compatible with the Cortex Debug Connector, as described below.

The connector is a .05"-spaced, gold-plated male header with .016" thick hardened copper or beryllium bronze square posts (SAMTEC FTSH-105 or equivalent). Female connectors are compatible $20\,\mu m$ gold connectors in order to prevent oxide build-up on tin connectors.

Viewing the male header from above (the pins pointing at your eye), a target's connector looks as it does in Table 10. The function of each pin is described in Table 11.

Table 10: JTAG Connector Diagram

VCC	1	2	TMS
GND	3	4	TCK
GND	5	6	TDO
KEY	7	8	TDI
N/C	9	10	RESET

Target connectors may be shrouded. In that case the key slot should be next to pin 5. Female headers should have a matching key.

Debug adapters should be tagged or marked with their isolation voltage threshold (i.e. unisolated, 250V, etc.).

All debug adapter pins other than GND should be current-limited to 20mA.

10.3 JTAG Registers

JTAG DTMs should use a 5-bit JTAG IR. When the TAP is reset, IR must default to 00001, selecting the IDCODE instruction. A full list of JTAG registers along with their encoding is in Table 12. The only regular JTAG registers a debugger might use are BYPASS and IDCODE, but the JTAG standard recommends a lot of other instructions so we leave IR space for them. If they are not implemented, then they must select the BYPASS register.

10.3.1 IDCODE (00001)

This register is selected (in IR) when the TAP state machine is reset. Its definition is exactly as defined in IEEE Std 1149.1-2013.

31	28	27	12	11	1	0
Version		PartN	umber	Mar	1	
	4 16		.6	1	1	1

	Table 11: JTAG Connector Pinout							
1	VCC	Power provided by the target, which may be used to						
		power the debug adapter. Must be able to source at least						
		25mA. This signal also serves as the reference voltage for						
		ogic high.						
		This pin must be clearly marked in both male and female						
		headers.						
2	TMS	JTAG TMS signal, driven by debug adapter.						
3	GND	Target ground.						
4	TCK	JTAG TCK signal, driven by the debug adapter.						
5	GND	Target ground.						
6	TDO	JTAG TDO signal, driven by the target.						
7	KEY	This pin should be clipped in male connectors, and						
		plugged in female connectors. Electrically it must not be						
		connected.						
8	TDI	JTAG TDI signal, driven by the debug adapter.						
		This pin may be used by a target to sense a debugger at						
		reset by weakly pulling this signal high during a brief						
		detection period at reset. Debuggers should drive TDI low						
		when the interface is idle.						
9	N/C	Not connected in either target or debug adapter. May be						
		used in future specs.						
10	RESET	Reset signal, driven by the debug adapter. This may be						
		active low or active high, depending on the target's						
		requirements. A debug adapter must accommodate either						
		option. Asserting reset should reset any RISC-V cores as						
		well as any other peripherals on the PCB. If not						
		implemented in a target, this pin must not be connected.						

Table 12: JTAG TAP Registers

Table 12: JTAG TAP Registers						
Address	Name	Description				
00000	BYPASS	JTAG recommends this encoding				
00001	IDCODE	JTAG recommends this encoding				
00010	SAMPLE	JTAG requires this instruction				
00011	PRELOAD	JTAG requires this instruction				
00100	EXTEST	JTAG requires this instruction				
00101	CLAMP	JTAG recommends this instruction				
00110	CLAMP_HOLD	JTAG recommends this instruction				
00111	CLAMP_RELEASE	JTAG recommends this instruction				
01000	HIGHZ	JTAG recommends this instruction				
01001	IC_RESET	JTAG recommends this instruction				
01010	TMP_STATUS	JTAG recommends this instruction				
01011	INIT_SETUP	JTAG recommends this instruction				
01100	INIT_SETUP_CLAMP	JTAG recommends this instruction				
01101	INIT_RUN	JTAG recommends this instruction				
01110	Unused (BYPASS)	Reserved for future JTAG				
01111	Unused (BYPASS)	Reserved for future JTAG				
10000	DTM Control	For Debugging				
10001	Debug Bus Access	For Debugging				
10010	Reserved (BYPASS)	Reserved for future RISC-V debugging				
10011	Reserved (BYPASS)	Reserved for future RISC-V debugging				
10100	Reserved (BYPASS)	Reserved for future RISC-V debugging				
10101	Reserved (BYPASS)	Reserved for future RISC-V standards				
10110	Reserved (BYPASS)	Reserved for future RISC-V standards				
10111	Reserved (BYPASS)	Reserved for future RISC-V standards				
11000	Unused (BYPASS)	Reserved for customization				
11001	Unused (BYPASS)	Reserved for customization				
11010	Unused (BYPASS)	Reserved for customization				
11011	Unused (BYPASS)	Reserved for customization				
11100	Unused (BYPASS)	Reserved for customization				
11101	Unused (BYPASS)	Reserved for customization				
11110	Unused (BYPASS)	Reserved for customization				
11111	BYPASS	JTAG requires this encoding				

Field	Description	Access	Reset
Version	Identifies the release version of this part.	R	Preset
PartNumber	Identifies the designer's part number of	R	Preset
	this part.		
Manufld	Identifies the designer/manufacturer of	R	Preset
	this part. Bits 6:0 must be bits 6:0 of		
	the designer/manufacturer's Identifica-		
	tion Code as assigned by JEDEC Stan-		
	dard JEP106. Bits 10:7 contain the		
	modulo-16 count of the number of con-		
	tinuation characters (0x7f) in that same		
	Identification Code.		

10.3.2 DTM Control (dtmcontrol, at 10000)

The size of this register will remain constant in future versions so that a debugger can always determine the version of the DTM.

31		17	16	5	15	14	13	
0			dbusr	eset	0	hiabits		
15		1		1	2			
12	10	9	8	7	4	3	0	
id	idle		usstat	loabits		version		
3			2	4		4		

Field	Description	Access	Reset				
dbusreset	Writing 1 to this bit resets the dbus con-	W1	0				
	troller, clearing any sticky error state.						
hiabits	Bits 5:4 of abits, which describes the size	R	Preset				
	of address in dbus.						
idle	The number of cycles a debugger	R	Preset				
	needs to send the target through Run-						
	Test/Idle after every dbus scan.						
	0: It's not necessary to enter Run-						
	Test/Idle at all.						
	1: Enter Run-Test/Idle and leave it im-						
	mediately.						
	2: Enter Run-Test/Idle and stay there						
	for 1 cycle before leaving.						
	And so on.						
	Continued on next page						

dbusstat	0: No error.	R	0
	2: An operation failed.		
	3: An operation was attempted while a		
	bus access was still in progress.		
loabits	Bits 3:0 of abits, which describes the size	R	Preset
	of address in dbus.		
version	0 indicates the version described in this	R	0
	document. Other values are reserved for		
	future use.		

10.3.3 Debug Bus Access (dbus, at 10001)

This register allows access to the Debug Bus.

In Update-DR, the DTM starts the operation specified in op unless the current status reported in op is sticky.

In Capture-DR, the DTM updates data with the result from that operation, updating op if the current op isn't sticky.

See Section A.1 and Table 13 for examples of how this plays out.

The still in progress status is sticky to accommodate debuggers that batch together a number of scans, which must all be executed or stop as soon as there's a problem.

For instance a series of scans may write a Debug Program and execute it. If one of the writes fails but the execution continues, then the Debug Program may hang, or have other unexpected side effects.

abits+35	36	35		2	1	0
address			data		0	p
abits			34		-	2

Field	Description	Access	Reset
address	Address used for Debug Bus access. In	R/W	0
	Update-DR this value is sent to the DM.		
data	The data to send to the DM during	R/W	0
	Update-DR, and the data returned from		
	the previous operation to the DM.		
ор	When the debugger writes this field, it	R/W	0
	has the following meaning:		
	0: Ignore data. (nop)		
	1: Read from address. (read)		
	2: Read from address. Then write data		
	to address. (write)		
	3: Reserved.		
	When the debugger reads this field, it		
	means the following:		
	0: The previous operation completed		
	successfully.		
	1: Reserved.		
	2: The previous operation failed. The		
	data scanned into dbus in this access		
	will be ignored. This status is sticky		
	and can be cleared by writing dbusreset		
	in dtmcontrol.		
	3: The previous operation is still in		
	progress. The data scanned into dbus		
	in this access will be ignored. This sta-		
	tus is sticky and can be cleared by writ-		
	ing dbusreset in dtmcontrol. If a de-		
	bugger sees this status, it needs to give		
	the target more time between Update-		
	DR and Capture-DR. The simplest way		
	to do that is to add extra transitions in		
	Run-Test/Idle.		

10.3.4 BYPASS (11111)

1-bit register that has no effect. It's used when a debugger wants to talk to a different TAP in the same scan chain as this one.



A Debugger Implementation

This section details how an external debugger might use the described debug interface to perform some common operations on RISC-V cores using the JTAG DTM. All these examples assume a 32-bit core but it should be easy to adapt the examples to 64- or 128-bit cores.

A.1 Debug Bus Access

To read an arbitrary Debug Bus register, select dbus, and scan in a value with op set to 1, and address set to the desired register address. In Update-DR the operation will start, and in Capture-DR its results will be captured into data. If the operation didn't complete in time, op will be 3 and the value in data must be ignored. The error condition must be cleared by writing dbusreset in dtmcontrol, and then the operation must be tried again. This time the debugger should allow for more time between Capture-DR and Update-DR.

To write an arbitrary Debug Bus register, select dbus, and scan in a value with op set to 2, and address and data set to the desired register address and data respectively. From then on everything happens exactly as with a read, except that a write is also performed right after the read. The operation isn't considered complete until the write has happened.

It should almost never be necessary to scan IR, avoiding a big part of the inefficiency in typical JTAG use.

A.2 Debug RAM

All operations are executed by writing a debug program to Debug RAM, and having the core execute it. This comes down to a series of Debug Bus accesses as described above.

First, select the hart of interest by writing its ID to hartid in dmcontrol. Then write the program to Debug RAM with a series of writes to 0x0-0xf. On the last write, set the interrupt bit. This triggers program execution. Perform a read to poll the interrupt bit to wait for it to clear. Typically JTAG will be so slow that the interrupt bit will be clear on the very next scan. An efficient debugger can optimistically assume all operations will complete immediately. If it discovers that is not the case (by seeing interrupt is still set on a scan) it can adapt by increasing the delay between scans.

That means if eg. you are doing a block write and have the program mostly set up, you can write a new data value and set the interrupt bit every time through the loop using a write operation.

A.3 Main Loop

A debugger continuously monitors haltsum to see if any harts have spontaneously halted. While this is going on, a debugger might perform a quick

operation (most likely a memory access) by writing a debug program that ends with a jump to resume, and asserting a hart's Debug Interrupt.

To halt a hart, the debugger writes a debug program that sets halt and ends with a jump to resume. Then it asserts the hart's Debug Interrupt.

Once halted, the debugger can write debug programs in exactly the same way that it can when the hart is running. The only difference is that in this case the jump to resume ends in up in Debug ROM code that waits until the debug interrupt is set again, instead of by continuing normal execution. To resume normal execution, the debugger writes a debug program that clears halt before jumping to resume.

Performing operations then all comes down to writing the appropriate program to Debug RAM, so the sections below mostly consist of short program listings. The Debug ROM already takes care of saving s0 and s1 so those registers can be used without any extra precautions.

A.4 Reading Memory

Execute the following program, and then read the value that was read from data.

```
lw s1, address
lw s0, 0(s1)
sw s0, data
j resume
address:.word ADDRESS
data: .word DATA
```

A shorter program is possible by hardcoding the address in a set of lui/lw instructions, but this technique would be limited to 32-bit cores. This version also has the nice property that to immediately read from a different address, only 1 word in Debug RAM needs to be changed.

A slightly different program can be used to read memory very efficiently:

```
      lw
      s1, data

      lw
      s0, 0(s1)

      sw
      s0, data

      j
      resume

      data:
      .word
      ADDRESS
```

In this case data is used both for the address and data. After this program is executed, the data value is in data. Since a JTAG bus write first performs a read, a single scan can read this data value, write the next address value, and assert the Debug Interrupt. As many of those scans can be used as necessary, and every scan results in 32 bits of data being read. The debugger does need to make sure interrupt is clear in each read. If it is not the data cannot be trusted, and the same address should be read again.

Table 13 shows the scans involved in reading a single word using this method. In this table dram[n] refers to the location in Debug RAM with address n. If more words need to be read, then this can by pipelined, by changing the scan in step 6 to a write of the next address.

A.5 Writing Memory

To write a single word:

```
lw s1, data
lw s0, address
sw s1, 0(s0)
j resume
address:.word ADDRESS
data: .word DATA
```

To efficiently write a block of memory, the debug program can take care of incrementing the address. First save t0 and load the start address into it:

```
sw t0, data
lw t0, address
j resume
address:.word ADDRESS
data: .word 0
```

Then write the following program with the first data value, and assert the Debug Interrupt. Additional words can be written by writing the next data value and asserting the Debug Interrupt.

```
lw s0, data
sw s0, 0(t0)
addi t0, t0, 4
j resume
data: .word DATA
```

After the second program is written, each word can be written to the target in 43 TCK cycles. That's 75% efficient, and translates to a download speed of 908KB/s at a 10MHz TCK. That should be good enough that it's not worth making the JTAG interface more complex to improve the efficiency. (This assumes the Debug Bus uses 5 address bits and that the debugger never has to wait for the core.)

A.6 Halt

To halt a hart, first write the code to be executed to Debug RAM. Then assert the relevant Debug Interrupt.

The code to be executed must set halt. Reading pc and dcsr is optional, but it's extremely common for a debugger to do this immediately after halting.

Table 13: Memory Read Timeline

	Table 13: Memory Read Timeline						
	JTAG State	Activity					
1	Shift-DR	Debugger shifts in write of 0x41002403 to dram[0], and gets back the result of whatever happened previously.					
	Update-DR	DTM starts read from dram[0], followed by write to dram[0].					
2	Capture-DR	JTAG DTM captures results of read from dram[0].					
4	Shift-DR						
	SIIII-DK	Debugger shifts in write of 0x42483 to dram[1], and gets					
	II J. 4. DD	back the old contents of the first word in Debug RAM.					
	Update-DR	DTM starts read from dram[1], followed by write to					
2	Ct DD	dram[1].					
3	Capture-DR	JTAG DTM captures results of read from dram[1].					
	Shift-DR	Debugger shifts in write of 0x40902823 to dram[2], and					
		gets back the old contents of the second word in Debug					
	Undote DD	RAM.					
	Update-DR	DTM starts read from dram[2], followed by write to dram[2].					
4	Capture-DR	JTAG DTM captures results of read from dram[2].					
4	Shift-DR	Debugger shifts in write of 0x3f80006f to dram[3], and					
	Silito-Dit	gets back the old contents of the third word in Debug					
		RAM.					
	Update-DR	DTM starts read from dram[3], followed by write to					
	ораше Би	dram[3].					
5	Capture-DR	JTAG DTM captures results of read from dram[3].					
	Shift-DR	Debugger shifts in write of the address the user wants to					
		read from to dram[4], while also asserting the Debug					
		Interrupt. The old contents of the fourth word in Debug					
		RAM are shifted out.					
	Update-DR	DTM starts read from dram[4], followed by write to					
		dram[4] which also asserts Debug Interrupt. The hart					
		will respond to the Debug Interrupt by executing the					
		program in Debug RAM which in this case will read the					
		address written, and replace the entry in Debug RAM					
		with the data at that address.					
6	Capture-DR	JTAG DTM captures results of read from dram[4].					
	Shift-DR	Debugger shifts in read from dram[4], and gets back the					
		old contents of the fourth word in Debug RAM. (This is					
		the value that was there just before the address was					
		written there.)					
	Update-DR	DTM starts read from dram[4].					
7	Capture-DR	JTAG DTM captures results of read from dram[4].					
	Shift-DR	Debugger shifts in nop, and gets back the contents of					
		the fourth word in Debug RAM. This is the value that					
		was there during the previous Update-DR, which is the					
		result of the Debug Program execution.					

```
dpc:    csrsi    DCSR, DCSR_HALT_MASK
dcsr:    csrr    s1, DPC
    sw    s1, dpc
    csrr    s1, DCSR
    sw    s1, dcsr
    j    resume
```

A.7 Reading Registers

Eg. how to read f1:

```
fsw f1, data
j resume
data: .word 0
```

A.8 Writing Registers

Eg. how to write mepc.

```
lw s0, data
csrw MEPC, s0
j resume
data: .word DATA
```

A.9 Running

To let the core run once it's halted, the debugger needs to first clear the Halt Notification using the debug bus directly. If the debugger used any registers besides ${\tt s0}$ and ${\tt s1}$ as scratch registers, now is the time to restore them. Finally:

```
csrci DCSR, DCSR_HALT_MASK
j resume
```

A.10 Single Step

A debugger can single step the core by setting a breakpoint on the next instruction and letting the core run, or by asking the hardware to perform a single step. The former requires the debugger to have much more knowledge of the hardware than the latter, so the latter is preferred.

Using the hardware single step feature is almost the same as regular running. The debugger just sets step in dcsr before leaving Debug Mode. The core behaves exactly as in the running case, except that interrupts are left off and it only fetches and executes a single instruction before re-entering Debug Mode.

A.11 Handling Exceptions

Generally the debugger can avoid exceptions by being careful with the programs it writes. Sometimes they are unavoidable though, eg. if the user asks to access memory or a CSR that is not implemented. A typical debugger will not know enough about the platform to return an error, and must attempt the access to determine the outcome.

When an exception occurs in Debug Mode no registers are updated, but Debug ROM will write 0xffffffff to the last word of Debug RAM. If the debugger thinks an exception may have occurred it should check for that. If no exception occurred in the last entry to Debug RAM, then the word must contain 0. If there was an exception, it's left to the debugger to know what must have caused it.

B Debug ROM Source

```
#include "riscv/encoding.h"
#define DEBUG_RAM
                                 0x400
#define DEBUG_RAM_SIZE
                                 64
#define CLEARDEBINT
                                 0x100
#define SETHALTNOT
                                 0x10c
        .global entry
        .global resume
        .global exception
        # Automatically called when Debug Mode is first entered.
entry:
        # Should be called by Debug RAM code that has finished execution and
        # wants to return to Debug Mode.
resume:
                _resume
        j
exception:
        # Set the last word of Debug RAM to all ones, to indicate that we hit
        # an exception.
        li
                s0, ~0
                _resume2
        j
_resume:
                s0, 0
_resume2:
        fence
```

```
# Restore s1.
               s1, CSR_MISA
        csrr
       bltz
                s1, restore_not_32
restore_32:
       lw
                s1, (DEBUG_RAM + DEBUG_RAM_SIZE - 4)(zero)
               finish_restore
restore_not_32:
                s1, s1, 1
        slli
       bltz
               s1, restore_128
restore_64:
               s1, (DEBUG_RAM + DEBUG_RAM_SIZE - 8)(zero)
       ld
               finish_restore
        j
restore_128:
                        s1, (DEBUG_RAM + DEBUG_RAM_SIZE - 16)(zero)
       nop
               #lq
finish_restore:
        # s0 contains ~0 if we got here through an exception, and 0 otherwise.
        # Store this to the last word in Debug RAM so the debugger can tell if
        # an exception occurred.
                s0, (DEBUG_RAM + DEBUG_RAM_SIZE - 4)(zero)
        # Clear debug interrupt.
               sO, CSR_MHARTID
        csrr
                s0, CLEARDEBINT(zero)
        SW
check_halt:
               s0, CSR_DCSR
        csrr
               so, so, DCSR_HALT
        andi
       beqz
               s0, exit
               wait_for_interrupt
exit:
        # Restore s0.
        csrr
               sO, CSR_DSCRATCH
        dret
_entry:
        # Save s0 in DSCRATCH
               CSR_DSCRATCH, s0
        csrw
        # Check why we're here
             sO, CSR_DCSR
        csrr
        # cause is in bits 8:6 of dcsr
        andi s0, s0, DCSR_CAUSE
               so, so, -(DCSR_CAUSE_DEBUGINT << 6)
        addi
        bnez
               s0, spontaneous_halt
```

```
jdebugram:
        # Save s1 so that the debug program can use two registers.
        fence.i
        csrr
                s0, CSR_MISA
        bltz
                s0, save_not_32
save_32:
                s1, (DEBUG_RAM + DEBUG_RAM_SIZE - 4)(zero)
                zero, DEBUG_RAM
        jr
save_not_32:
        slli
                s0, s0, 1
                s0, save_128
        bltz
save_64:
                s1, (DEBUG_RAM + DEBUG_RAM_SIZE - 8)(zero)
                zero, DEBUG_RAM
        jr
save_128:
                          s1, (DEBUG_RAM + DEBUG_RAM_SIZE - 16)(zero)
                 #sq
        nop
                zero, DEBUG_RAM
        jr
spontaneous_halt:
                s0, CSR_MHARTID
        csrr
                s0, SETHALTNOT(zero)
        SW
                CSR_DCSR, DCSR_HALT
        csrsi
wait_for_interrupt:
        csrr
                s0, CSR_DCSR
                so, so, DCSR_DEBUGINT
        andi
                s0, wait_for_interrupt
        begz
                jdebugram
```

C Trace Module

This part of the spec needs work before it's ready to be implemented, which is why it's in the appendix. It's left here to give a rough idea of some of the issues to consider.

Aside from viewing the current state of a core, knowing what happened in the past can be incredibly helpful. Capturing an execution trace can give a user that view. Unfortunately processors run so fast that they generate trace data at a very large rate. To help deal with this, the trace data format allows for some simple compression.

The trace functionality described here aims to support 3 different use cases:

1. Full reconstruction of all processor state, including register values etc. To achieve this goal the decoder will have to know what code is being executed, and know the exact behavior of every RISC-V instruction.

- Reconstruct just the instruction stream. Get enough data from the trace stream that it is possible to make a list of every instruction executed. This is possible without knowing anything about the code or the core executing it.
- 3. Watch memory accesses for a certain memory region.

Trace data may be stored to a special on-core RAM, RAM on the system bus, or to a dedicated off-chip interface. Only the system RAM destination is covered here.

C.1 Trace Data Format

Trace data should be both compact and easy to generate. Ideally it's also easy to decode, but since decoding doesn't have to happen in real time and will usually have a powerful workstation to do the work, this is the least important concern.

Trace data consists of a stream of 4-bit packets, which are stored in memory in 32-bit words by putting the first packet in bits 3:0 of the 32-bit word, the second packet into bits 7:4, and so on. Trace packets and their encoding are listed in Table 14.

Several header packets are followed by a Value Sequence, which can encode values between 4 and 64 bits. The sequence consists first of a 4-bit size packet which contains a single number N. It is followed by N+1 4-bit packets which contain the value. The first packet contains bits 3:0 of the value. The next packet contains bits 7:4, and so on.

C.2 Trace Events

Trace events are events that occur when a core is running that result in trace packets being emitted. They are listed in Table 15.

C.3 Synchronization

If a trace buffer wraps, it is no longer clear what in the buffer is a header and what isn't. To guarantee that a trace decoder can sync up easily, each trace buffer must have 8 synchronization points, spaced evenly throughout the buffer, with the first one at the very start of the buffer. A synchronization point is simply an address where there is guaranteed to be a sequence header. To make this happen, the trace source can insert a number of Nop headers into the sequence just before writing to the synchronization point.

Aside from synchronizing a place in the data stream, it's also necessary to send a full PC, Read Address, Write Address, and Timestamp in order for those to be fully decoded. Ideally that happens the first time after every synchronization point, but bandwidth might prevent that. A trace source should attempt to send one full value for each of these (assuming they're enabled) soon after each synchronization point.

Table 14: Trace Sequence Header Packets

Packet that indicates no data. The trace source must use these to ensure that there are source must use these to ensure that there are 8 synchronization points in each buffer.	Table 14: Trace Sequence Header Packets				
8 synchronization points in each buffer. Tollowed by a Value Sequence containing bits XLEN-1:1 of the PC if the compressed ISA is supported, or bits XLEN-1:2 of the PC if the compressed ISA is not supported. Missing bits must be filled in with the last PC value. Onlowed by a single packet indicating the compressed ISA is not supported. Missing bits must be filled in with the last PC value. Onlowed by a single packet indicating the version of the trace data (currently 0).	0000	Nop	Packet that indicates no data. The trace		
Followed by a Value Sequence containing bits XLEN-1:1 of the PC if the compressed ISA is supported, or bits XLEN-1:2 of the PC if the compressed ISA is not supported. Missing bits must be filled in with the last PC value.			source must use these to ensure that there are		
XLEN-1:1 of the PC if the compressed ISA is supported, or bits XLEN-1:2 of the PC if the compressed ISA is not supported. Missing bits must be filled in with the last PC value. 0010 Branch Taken			8 synchronization points in each buffer.		
supported, or bits XLEN-1:2 of the PC if the compressed ISA is not supported. Missing bits must be filled in with the last PC value. 0010 Branch Taken	0001	PC	Followed by a Value Sequence containing bits		
compressed ISA is not supported. Missing bits must be filled in with the last PC value. 0010 Branch Taken			XLEN-1:1 of the PC if the compressed ISA is		
bits must be filled in with the last PC value.			supported, or bits XLEN-1:2 of the PC if the		
0010 Branch Not Taken 0011 Branch Not Taken 0100 Trace Enabled Followed by a single packet indicating the version of the trace data (currently 0). 0101 Trace Disabled Indicates that trace was purposefully disabled, or that some sequences were dropped because the trace buffer overflowed. 0110 Privilege Level Followed by a packet containing whether the cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. 0111 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1000 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101			compressed ISA is not supported. Missing		
0011 Branch Not Taken 0100 Trace Enabled Followed by a single packet indicating the version of the trace data (currently 0). 0101 Trace Disabled Indicates that trace was purposefully disabled, or that some sequences were dropped because the trace buffer overflowed. 0110 Privilege Level Followed by a packet containing whether the cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. 0111 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1000 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1011 Reserved Reserved for future standards. <td></td> <td></td> <td>bits must be filled in with the last PC value.</td>			bits must be filled in with the last PC value.		
Trace Enabled Followed by a single packet indicating the version of the trace data (currently 0).	0010	Branch Taken			
version of the trace data (currently 0). Indicates that trace was purposefully disabled, or that some sequences were dropped because the trace buffer overflowed. Privilege Level Followed by a packet containing whether the cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. Other Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. Touch Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. Touch Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Touch Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Touch Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Touch Timestamp Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Touch Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Reserved for future standards.	0011	Branch Not Taken			
Indicates that trace was purposefully disabled, or that some sequences were dropped because the trace buffer overflowed.	0100	Trace Enabled	Followed by a single packet indicating the		
disabled, or that some sequences were dropped because the trace buffer overflowed. 1010 Privilege Level Followed by a packet containing whether the cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. 1011 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1010 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.			version of the trace data (currently 0).		
disabled, or that some sequences were dropped because the trace buffer overflowed. 1010 Privilege Level Followed by a packet containing whether the cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. 1011 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1010 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.	0101	Trace Disabled	Indicates that trace was purposefully		
Followed by a packet containing whether the cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. O111 Change Hart			disabled, or that some sequences were		
cause of the change was an interrupt (1) or something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. O111 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1010 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1010 Reserved Reserved for future standards. Reserved for custom trace data.			dropped because the trace buffer overflowed.		
something else (0) in bit 3, PRV[1:0] in bits 2:1, and IE in bit 0. O111 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.	0110	Privilege Level	Followed by a packet containing whether the		
2:1, and IE in bit 0. O111 Change Hart Followed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. 1000 Load Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1000 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. Reserved for custom trace data.			cause of the change was an interrupt (1) or		
Tollowed by a Value Sequence containing the hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. Tollowed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. Tollowed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Tollowed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Tollowed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Tollowed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Tollowed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Tollowed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Tollowed By a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Tollowed By a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Tollowed By a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value.			something else (0) in bit 3, PRV[1:0] in bits		
hart ID of the hart whose trace data follows. Missing bits must be filled in with 0. Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Reserved for future standards. Reserved for custom trace data.			2:1, and IE in bit 0.		
Missing bits must be filled in with 0. Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. Tool Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Tollo Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Tollowed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Reserved for future standards. Reserved for custom trace data.	0111	Change Hart	Followed by a Value Sequence containing the		
Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Load Address value. Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Reserved for future standards. Reserved for custom trace data.			hart ID of the hart whose trace data follows.		
address. Missing bits must be filled in with the last Load Address value. 1001 Store Address Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.			Missing bits must be filled in with 0.		
the last Load Address value. Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. Iolo Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Ioli Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Illo Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Illo Reserved Reserved for future standards. Reserved for custom trace data.	1000	Load Address	-		
Followed by a Value Sequence containing the address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
address. Missing bits must be filled in with the last Store Address value. 1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
the last Store Address value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. Reserved for future standards. Reserved for custom trace data.	1001	Store Address			
1010 Load Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
data. Missing bits must be filled in by sign extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
extending the value. 1011 Store Data Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.	1010	Load Data	-		
Followed by a Value Sequence containing the data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
data. Missing bits must be filled in by sign extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
extending the value. 1100 Timestamp Followed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.	1011	Store Data			
1100TimestampFollowed by a Value Sequence containing the timestamp. Missing bits should be filled in with the last Timestamp value.1101ReservedReserved for future standards.1110CustomReserved for custom trace data.					
timestamp. Missing bits should be filled in with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.					
with the last Timestamp value. 1101 Reserved Reserved for future standards. 1110 Custom Reserved for custom trace data.	1100	Timestamp			
1101ReservedReserved for future standards.1110CustomReserved for custom trace data.					
1110 Custom Reserved for custom trace data.					
1111 Custom Reserved for custom trace data.					
	11111	Custom	Reserved for custom trace data.		

Table	15.	Traco	Data	Events


Opcode	Action
jal	If emitbranch is disabled but emitpc is enabled, emit 2
Jai	PC values: first the address of the instruction, then the
	· · · · · · · · · · · · · · · · · · ·
	address being jumped to.
jalr	If emitbranch is disabled but emitpc is enabled, emit 2
	PC values: first the address of the instruction, then the
	address being jumped to. Otherwise, if emitstoredata is
	enabled emit just the destination PC.
BRANCH	If emitbranch is enabled, emit either Branch Taken or
	Branch Not Taken. Otherwise if emitpc is enabled and
	the branch is taken, emit 2 PC values: first the address
	of the branch, then the address being branched to.
LOAD	If emitloadaddr is enabled, emit the address. If
	emitloaddata is enabled, emit the data that was loaded.
STORE	If emitstoreaddr is enabled, emit the address. If
	emitstoredata is enabled, emit the data that is stored.
Traps	scall, sbreak, ecall, ebreak, and eret emit the same
	as if they were jal instructions. In addition they also
	emit a Privilege Level sequence.
Interrupts	Emit PC (if enabled) of the last instruction executed.
_	Emit Privilege Level (if enabled). Finally emit the new
	PC (if enabled).
CSR instructions	For reads emit Load Data (if enabled). For writes emit
	Store Data (if enabled).
Data Dropped	After packet sequences are dropped because data is
	generated too quickly, Trace Disabled must be emitted.
	It's not necessary to follow that up with a Trace
	Enabled sequence.

C.4 Trace Registers

Table 16: Trace Registers

Table 10. Trace registers				
Address	Name			
0x728	Trace			
0x729	Trace Buffer Start			
0x72a	Trace Buffer End			
0x72b	Trace Buffer Write			

C.4.1 Trace (trace, at 0x728)

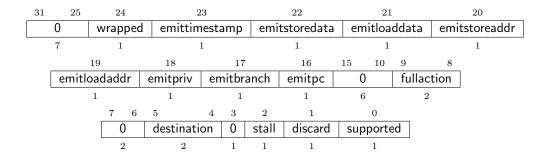

Field	Description	Access	Reset
wrapped	rapped 1 if the trace buffer has wrapped since		0
	the last time discard was written. 0 oth-		
	erwise.		
emittimestamp	Emit Timestamp trace sequences.	R/W	0
emitstoredata	Emit Store Data trace sequences.	R/W	0
emitloaddata	Emit Load Data trace sequences.	R/W	0
emitstoreaddr	Emit Store Address trace sequences.	R/W	0
emitloadaddr	Emit Load Address trace sequences.	R/W	0
emitpriv	Emit Privilege Level trace sequences.	R/W	0
emitbranch	Emit Branch Taken and Branch Not	R/W	0
	Taken trace sequences.		
emitpc	Emit PC trace sequences.	R/W	0
fullaction	Determine what happens when the trace	R/W	0
	buffer is full. 0 means wrap and over-		
	write. 1 means turn off trace until		
	discard is written as 1. 2 means cause		
	a trace full exception. 3 is reserved for		
	future use.		
destination	0: Trace to a dedicated on-core RAM	R/W	Preset
	(which is not further defined in this		
	spec).		
	1: Trace to RAM on the system bus.		
	2: Send trace data to a dedicated off-		
	chip interface (which is not defined in		
	this spec). This does not affect execu-		
	tion speed.		
	3: Reserved for future use.		
	Options 0 and 1 slow down execution		
	(eg. because of system bus contention).		
	Contin	ued on ne	ext page

stall	When 1, the trace logic may stall pro-	R/W	1
	cessor execution to ensure it can emit		
	all the trace sequences required. When		
	0 individual trace sequences may be		
	dropped.		
discard	Writing 1 to this bit tells the trace logic	W1	0
	that any trace collected is no longer re-		
	quired. When tracing to RAM, it resets		
	the trace write pointer to the start of		
	the memory, as well as wrapped.		

C.4.2 Trace Buffer Start (tbufstart, at 0x729)

If destination is 1, this register contains the start address of block of RAM reserved for trace data.



C.4.3 Trace Buffer End (tbufend, at 0x72a)

If destination is 1, this register contains the end address (exclusive) of block of RAM reserved for trace data.

C.4.4 Trace Buffer Write (tbufwrite, at 0x72b)

If destination is 1, this read-only register contains the address that the next trace packet will be written to.

D Future Ideas

Some future version of this spec may implement some of the following features.

- 1. The spec defines several additions to the Device Tree which enable a debugger to discover hart IDs and supported triggers for all the cores in the system.
- $2.\,$ DTMs can function as general bus slaves, so they would look like regular RAM to bus masters.

- 3. Harts can be divided into groups. All the harts in the same group can be halted/run/stepped simultaneously. When a hart hits a breakpoint, all the other harts in the same group also halt within a few clock cycles.
- 4. DTMs are specified for protocols like USB, I2C, SPI, and SWD.
- 5. Core registers can be read without halting the processor.
- 6. The debugger can communicate with the power manager to power cores up or down, and to query their status.
- 7. Serial ports can raise an interrupt when a send/receive queue becomes full/empty.
- 8. The debug interrupt can be masked by running code. If the interrupt is asserted, then deasserted, and then asserted again the debug interrupt happens anyway. This mechanism can be used to eg. read/write memory with minimal interruption, making sure never to interrupt during a critical piece of code.
- 9. The debugger can non-intrusively sample a recent PC value from any running hart.

D.1 Lightweight Brainstorming

At least one person has expressed interest in an absolute minimal gate count debug spec. Here are some ideas that take this existing design, and attempt to minimize its gate count while retaining at least its spirit.

This proposal preserves the focus on having the debugger feed the hart instructions, as well as not adding any slave interfaces to each hart.

Debug Mode is not like other mode changes. (This is a major difference with the full-featured spec.) Instead, in Debug Mode all instruction fetches come from address 0x480 + 8 * hart id regardless of what the PC is. The core will keep updating the PC as usual. (Eg. an ALU instruction will increment it, and a jump instruction will change it to the jump destination.) Caches are disabled, as in the current spec. There may not be any speculative instruction fetching. When the PC hits the max value, it must wrap to 0 when incremented.

While in Debug Mode, the hart can exchange data with the debugger by accessing address 0x484 + 8 * hart id.

0x480 is chosen as a base, so a Debug Module can support a mixture of harts that use the Lightweight and Optimized debug interface.

When the Debug Module has a new instruction for a hart, it returns that instruction on an instruction fetch. Any other time it will return a jump-to-self instruction, or keep the access alive until it has an instruction.

When a data write to the Debug Module happens, it must accept and remember this write. If necessary it must keep the access alive until the value has been seen by the debugger. Likewise for reads it must present the hart with a value it has not yet read.

The Debug Module can tell that a hart is in Debug Mode, because if it is then it'll be performing memory access to it.

A debugger can see this happening, and when it does, it sends:

to save s0, and then to read the PC. Note that the actual PC where the target was halted will be 4 (8?) less than the stored value.

No exceptions are taken in Debug Mode, so there is no way to check whether a load/store raised an exception. Unless we add status bits somewhere? Ditto for accessing non-existent CSRs.

dret instruction leaves debug mode, leaving the PC exactly where it is. So to resume:

```
lw s0, 0x484(zero)
# write "pc" to data slot
jr s0
dret
```

Simple Debug Module will just pass each access onto the DTM. Ie. set some bits indicating what kind of access is pending. Then the polling DTM will come along, read/write a value, and indicate the access can be completed. The DM could just store bits 6:2 of the address and read/write bit.

RV64. It would be nice to keep the Debug Module 32-bit. That does mean to store a register value you have to sw/shift/sw. Keeping the Debug Module 32-bit allows for more harts (since less address space is needed per store), and less bits used for JTAG shift registers etc. It's also one less parameter needed to instantiate it.

Read memory:

```
lw s0, 0x484(zero)
# write address to data slot
lw s1, 0(s0)
sw s1, 0x484(zero)
# read data from data slot
addi s1, s1, 4
# repeat... 3 scans per word
```

E Change Log

Revision Date Author(s) Description

0.10	Jul 11	TN	Version shared for 4th RISC-V Workshop
0.11	Jul 17	TN	Updated Bus Access section
0.11	Jul 29	TN	mcontrol is intended to alias tdata0.
			Remove conditional writes.
0.11	Aug 11	TN	Document wfi behavior in Debug Mode.
	<u> </u>		Core Debug Registers are only accessible
			in Debug Mode. Removed hwbpcount
			field from dcsr.
0.11	Aug 22	TN	Clarify meaning of mode in tselect. All
	<u> </u>		triggers are either locked by the debug-
			ger, or none are.
0.11	Aug 23	TN	Triggers are locked on an individual ba-
			sis again. See dmode in tdata0. The
			definitions of chain in mcontrol has been
			changed to be easier to explain. Changed
			recommendations on when store hard-
			ware breakpoints fire.
0.11	Aug 25	TN	Add timing to mcontrol. Changed en-
			coding of action.
0.11	Aug 26	TN	Document lr/sc behavior. Rename
			tdata0-tdata2 to tdata1-tdata3.
0.11	Sep 6	TN	Change Debug Bus to only support sim-
			ple read and write operations.
0.11	Sep 7	TN	Clarify op in dbus.
0.11	Sep 13	TN	Add rough idea of instruction count trig-
			gers that could be used for single step.
0.11	Sep 27	TN	M-mode writes to triggers with
			dmode=1 are ignored instead of raising
			an exception.
0.11	Oct 24	TN	Change serial full bit to full/overflow.
0.11	Nov 2	TN	There actually can be side effects to
			reading Debug Bus registers (specifically
			reading serial data).