

EnOcean Equipment Profiles

REVISION HISTORY

Ver.	Editor	Change	Date
2.6.8	NM	Last xml edition of the EEP-Specification	Dec 31, 2017

Copyright © EnOcean Alliance Inc. (2019). All rights reserved.

The information within this document is the property of the EnOcean Alliance and its use and disclosure are restricted. Elements of the EnOcean Alliance specifications may also be subject to third party intellectual property rights, including without limitation, patent, copyright or trademark rights (such a third party may or may not be a member of the EnOcean Alliance.)

The EnOcean Alliance is not responsible and shall not be held responsible in any manner for identifying or failing to identify any or all such third party intellectual property rights. This document and the information contained herein are provided on an "as is" basis and the EnOcean Alliance disclaims all warranties express or implied, including but not limited to

- (1) any warranty that the use of the information herein will not infringe any rights of third parties (including any intellectual property rights, patent, copyright or trademark rights, or
- (2) any implied warranties of merchantability, fitness for a particular purpose, title or non-infringement.

In no event will the EnOcean Alliance be liable for any loss of profits, loss of business, loss of use of data, interruption of business, or for any other direct, indirect, special or exemplary, incidental, punitive or consequential damages of any kind, in contract or in tort, in connection with this document or the information contained herein, even if advised of the possibility of such loss or damage. All Company, brand and product names may be trademarks that are the sole property of their respective owners.

The above notice and this paragraph must be included on all copies of this document that are made.

The EnOcean Alliance "EnOcean Equipment Profiles definitions" are available free of charge to companies, individuals and institutions for all non-commercial purposes (including educational research, technical evaluation and development of non-commercial tools or documentation.)

This specification includes intellectual property ("IPR") of the EnOcean Alliance and joint intellectual properties ("joint IPR") with contributing member companies. No part of this

EnOcean Equipment Profiles Page 1/10

enocean°alliance No Wires. No Batteries. No Limits.

System Specification

specification may be used in development of a product or service for sale without being a participant or promoter member of the EnOcean Alliance and/or joint owner of the appropriate joint IPR.

These errata may not have been subjected to an Intellectual Property review, and as such, may contain undeclared Necessary Claims.

EnOcean Alliance Inc. 2400 Camino Ramon, Suite 375 San Ramon, CA 94583 USA Graham Martin Chairman & CEO EnOcean Alliance

EnOcean Equipment Profiles



D2-11: Bidirectional Room Operating Panel

TYPE 01,02,03,04,05,06,07,08 Submitter: Thermokon Sensortechnik GmbH

TYPE 20 Submitter: Menred GmbH

EEP Family Table:

Supported Function of Type	01	02	03	04	05	06	07	08	20
Temperature Measurement	Х	Х	Х	Х	Х	Х	Х	Х	-
Setpoint	Х	Х	Х	Х	Х	Х	Х	Х	-
Humidity Measurement	-	Х	-	Х	-	Х	-	Х	-
Fan Speed	-	-	Х	Х	X	Х	-	-	-
Occupancy	-	-	-	-	Х	Х	Х	Х	-
Air Condition / FanCoil	-	-	-	-	-	-	-	-	Х
Floor Heating	-	-	-	-	1	-	-	-	Х
Fan Ventilation	-	-	-	-	-	-	-	-	Х
Temperature Sensor	-	-	-	-	-	-	-	-	Х
Humidity Sensor	-	-	-	-	-	-	-	-	-
Blind	-	-	-	-	-	-	-	-	-
Dimming	-	-	-	-	-	-	-	-	-
PIR	-	-	-	-	-	-	-	-	-
LUX	-	-	-	-	-	-	-	-	-

For the types 0x01, 0x03, 0x05, 0x07 the value of DB3 at message type C will be 0 = not available. For the types 0x01, 0x02, 0x07, 0x08 the value of DB0.3 ... DB0.1 at message type B and C will be 7 = not available. For the types 0x01, 0x02, 0x03, 0x04 the value of DB0.0 at message type C has to be 0 = not used.

RORG	D2	VLD Telegram
FUNC	11	Bidirectional Room Operating Panel
TYPE	08	Type 0x08 (description: see table)

Submitter: Thermokon Sensortechnik GmbH

Data exchange

Direction: bidirectional (Smart-Ack) Addressing: broadcast and addressed

Communication trigger: event- & time-triggered

Communication interval: time-triggered (configurable at the device) & event-triggered

Trigger event: keypress

Tx delay: -Rx timeout: -

EnOcean Equipment Profiles Page 3/10



Teach-in

Teach-in method: Smart-Ack teach-in without repeater

Security

Encryption required: no Security level format: -

Product Description

The device represented by this EEP is a "Bidirectional Room Operating Panel with Display". It is powered by solar cell.

It may be equipped with the following features (for details please see the EEP-Family table below):

- Temperature Sensor
- · Humidity Sensor
- Temperature Setpoint Adjustment
- Fan Speed Adjustment
- Occupancy-State Adjustment

For pairing the bidirectional "Smart Ack Teach-In without repeater" method is used.


The device transmits the actual sensor values periodically (default: 1000 s) or on the event keypress.

Temperature Sensor, Humidity Sensor

The environmental sensors are updated periodically (adjustable, default: 100 s) and, if there is a change, the updated values will be send immediately.

The Smart Ack functionality will be used for setting display symbols like "window open, heating/cooling, occupancy state" or for overwriting parameters like setpoint, fan speed or occupancy state which are stored at the device.

Communication flow, triggered by a keystroke (first keystroke within inactive state, display state is off):

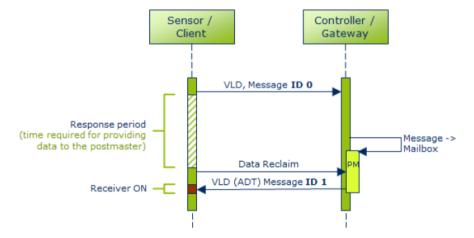


EnOcean Equipment Profiles





Communication flow, triggered by an event like temperature- and or humidity change or heartbeat:

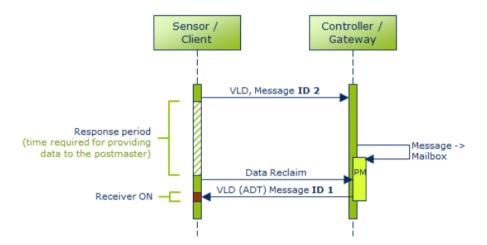

Message type A / ID 0 (First switch press after sleep-mode, request new data)

Direction: Sensor -> Gateway

Bit 0.7 indicates which setpoint type is actual used at the device. The difference is made at the visualization of the setpoint (real temperature setpoint (24.5°C) or setpoint shift (+ 3.0°C)) and this information is needed for interpreting the value of DB2 at Message Type C (ID2).



Offset	Size	Data	ShortCut	Description	Valid Range	Scale	Unit				
0	1	Setpoint	SPT	Setpoint type actual used by the device	Enum:						
		type		(temperature correction / temperature setpoint)	0: Temperatu correction	re					
					1: Temperatu	re setpoir	nt				
1	3	Not Used (=	0)								
4	4	Message ID	MID	Message Type A, ID-0	Enum:						
					0: ID-0						
					1: ID-1						
					2: ID-2						
					315: Reserve	d					

EnOcean Equipment Profiles Page 6/10



16	8	Basesetpoint	BSP	Set basesetpoint for visualization of	Enum		
16	0	basesetpoint	БЭГ	the temperature setpoint	Enum: 014: Reserve	d	
				and temperature serpoint		a	
					1530:	15 20	00
						1530	
					Reserve	ed	
	ļ				31255:		
24	4	Valid temperature	COA	Set valid temperature correction	Enum:		
		correction			0: Reserved	i i	
					1:		K
						-11	
					2:		K
						-22	
					3:		K
						-33	
					4:		K
						-44	
					5:		K
						-55	
					6:		K
						-66	
					7:		K
						-77	
					8:		K
						-88	
					9:		K
						-99	
					10:		K
					10.	-1010	
					1115: Reserved		
28	3	Fan Speed	OFS	Override actual Fan Speed	Enum:	4	
20	٦	ran Speed	013	Override actual rail Speed			
					1: Speed 0		
					2: Speed 1		
					3: Speed 2		
					4: Speed 3		
					56: Reserved		
					7: Not availab	ole	
31	1	Occupancy State	oos	Override actual Occupancy State	Enum:		
					0: State Unocc	upied	
					1: State Occup		
4	4	Message ID	MID	Message Type B, ID-1	Enum:		
1		ricosage 1D	110	ressage type b, 1b-1	0: ID-0		
					1: ID-1		
					2: ID-2		
					315: Reserve		
8	8	Temperature	oso	Override Setpoint offset (linear, min		ording to	K
		correction		max. +)	co	4	
				(valid temperature correction)			

EnOcean Equipment Profiles Page 7/10





Message type C / ID 2 (Transmit actual data)

Direction: Sensor -> Gateway

Bit 5.7 indicates which setpoint type is actual used at the device. The difference is made at the visualization of the setpoint (real temperature setpoint (24.5 °C) or setpoint shift (+ 3.0 °C)) and this information is needed for interpreting the value of DB2.

Byte 4 transmits the actual measured temperature.

Byte 2 transmits the actual setpoint shift. How to interpret this value is a combination of Bit 5.7, Byte 1 and Bit 0.7 ... 0.4.

If the actual setpoint type is setpoint shift, then the value of Byte 2 only represents the scaled valid setpoint shift at $Bit\ 0.7\ ...\ 0.4.$

If the setpoint type is temperature setpoint, then the temperature setpoint is calculated as sum of the internal basesetpoint at Byte 1 and the scaled valid setpoint shift at Bit 0.7 ... 0.4, transmitted at Byte 2.

Byte 1 transmits the actual, at the device stored, basesetpoint.

Bit 0.7 ... 0.4 transmits the actual valid, at the device stored, setpoint shift.

				DB	_5			DB_4						DB_3					DB_2						DB_1						DB_0											
DB Bit	7	6	5	4	3	2 1	1 0	7	6	5	4	3 2	2 1	0	7	6 :	5 4	1 3	2	1	0	7	6	5	4	3	2 1	L O	7	6	5	4	3 2	1	0	7	6	5	4	3	2 1	0
Bit Offset	0	1	2	3	4	5 6	5 7	8	9	10	111	2 1	3 14	4 15	16	17 1	8 1	9 20	21	1 22	23	24	25	26	27	28	29 3	0 31	32	33	34	35	36 3	7 38	39	40	41	42	43	44	45 4	6 47
	5 -		H			+ 8				α. Σ ω					UMI							õ					SP				co.		vo									
	ŝ		-			Ξ					F							Ī							S							H					- 6	ő			ŭ.	0

Offset	Size	Data	ShortCut	Description	Valid Range	Scale	Unit			
0	1	Setpoint type	SPT	Setpoint type actual used by the device (temperature correction / temperature setpoint)	Enum: 0: Temperature correction 1: Temperature setpoint					
1	2	Telegram Type	π	Telegram Trigger	1: Change of temperature- or humidity value 2: User caused parameter change					
3	1	Not Used (= 0)								
4	4	Message ID	MID	Message Type C, ID-2	Enum: 0: ID-0 1: ID-1 2: ID-2 315: Reser					
8	8	Temperature	TEMP	Temperature	0255	0+40	°C			
16	8	Humidity	HUMI	Humidity	0250	0+100	%rH			
24	8	Setpoint offset	SP	Setpoint shift, linear (refers to valid setpoint shift at DB0.7 DB0.4)	0255	according to BSB	K			

EnOcean Equipment Profiles Page 9/10



32	8	Basesetpoint	IBS	Internal basesetpoint, required for	Enum:		
32	١	Базоверопте		setpoint type "temperature	014: Reserve	ed	 -
				setpoint"	1530:	-	°C
					1550.	1530	Ŭ
					31255: Reserve		
40	4	Valid temperature	BSB	Valid temperature correction	Enum:		
		correction		·	0: Reserved	<u> </u>	_
					1:		K
						-11	
					2:		K
						-22	
					3:		K
						-33	
					4:		K
						-44	
					5:		K
						-55	
					6:	-66	K
					7:	-66	
					/.	-77	Κ.
					8:	,,	K
					0.	-88	K
					9:		K
						-99	
					10:		K
						-1010	
					1115: Reserved	t	
44	3	Fan Speed	FS	Fan Speed	Enum:		
					0: Auto		
					1: Speed 0		
					2: Speed 1		
					3: Speed 2		
					4: Speed 3		
					56: Reserved		
					7: Not availab	le	
47	1	Occupancy State	os	Occupancy State	Enum:		
					0: State Unocc		
					1: State Occup	ied	

EnOcean Equipment Profiles Page 10/10