

# EECS151 : Introduction to Digital Design and ICs

## Lecture 3 – Design Process, Verilog I

### Bora Nikolić



August 2021: Esperanto at HotChips

The ET-SoC-1 is fabricated in TSMC 7nm

- 24 billion transistors
- Die-area: 570 mm<sup>2</sup>

1088 ET-Minion energy-efficient 64-bit RISC-V processors

- Each with an attached vector/tensor unit
- Typical operation 500 MHz to 1.5 GHz expected

4 ET-Maxon 64-bit high-performance RISC-V out-of-order processors


- Typical operation 500 MHz to 2 GHz expected

1 RISC-V service processor

Over 160 million bytes of on-die SRAM used for caches and scratchpad memory

Root of trust for secure boot

Power typically < 20 watts, can be adjusted for 10 to 60+ watts under SW control

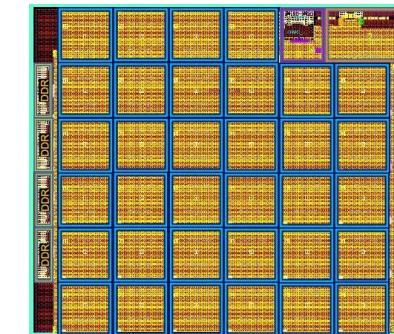

D. Ditzel, HotChips'21

# Review


- Design process involves specification, modeling, architecture design, RTL design, physical design, manufacturing
  - Validation: Have we built the right thing?
  - Verification: Have we built the thing right?
- Combinational logic: Outputs depend only on inputs
- Sequential logic: Outputs depend on the inputs and the state



## How Did We Get Here?

# IC Design in the 70's and early 80's

- Circuit design, layout, and processing tightly linked.
- Logic design and layout was all done by-hand
- Chip design was typically done by vertically integrated companies, who designed and fabricated their own chips
  - fabs weren't that expensive back then

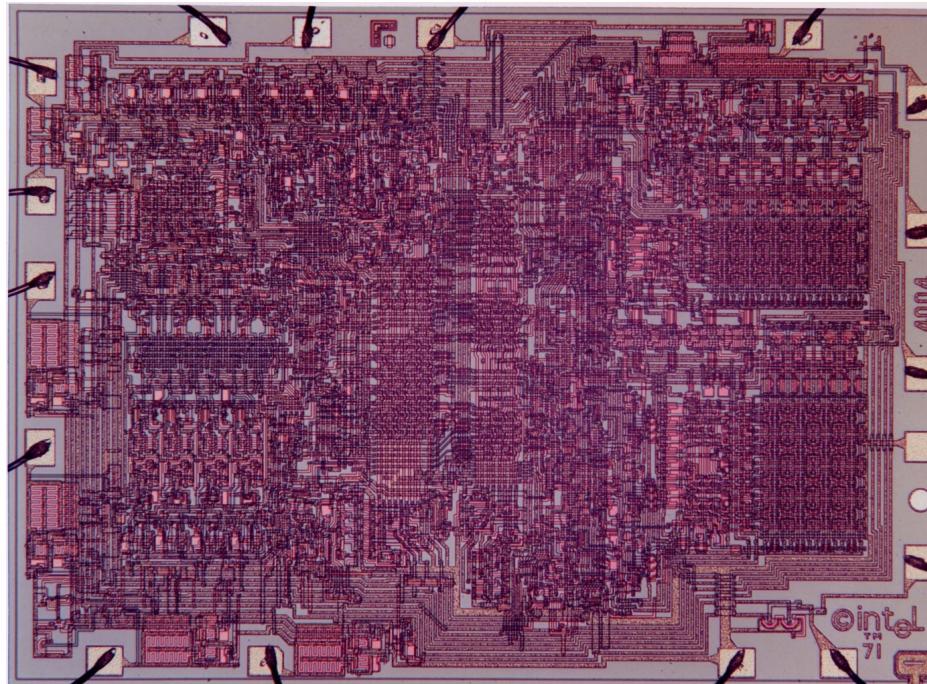

Federico Faggin,  
Ted Hoff,  
Stan Mazor

Introduced to help  
sell memory chips!



The Intel 4004 microprocessor, which was introduced in 1971. The 4004 contained 2300 transistors and performed 60,000 calculations per second. Courtesy: Intel.

# Early Design Practice

- Initially, designs were represented by hand drawings. Then masks where made by transferring drawings to rubylith.
  - Base layer of heavy transparent dimensionally stable Mylar. A thin film of deep red cellophane-like material covers the base layer. Patterns formed by cutting (often by hand) the transparent covering.
- Later transition to an electronic format (CIF, GDS) meant: Layouts easily be stored and transmitted. Written to tape and transferred to manufacturer (tape-out). Transmitted over the network (new idea back then). Software could automatically check for layout errors. Generated from a program - **huge idea**.



# The Start of the IC Design Revolution

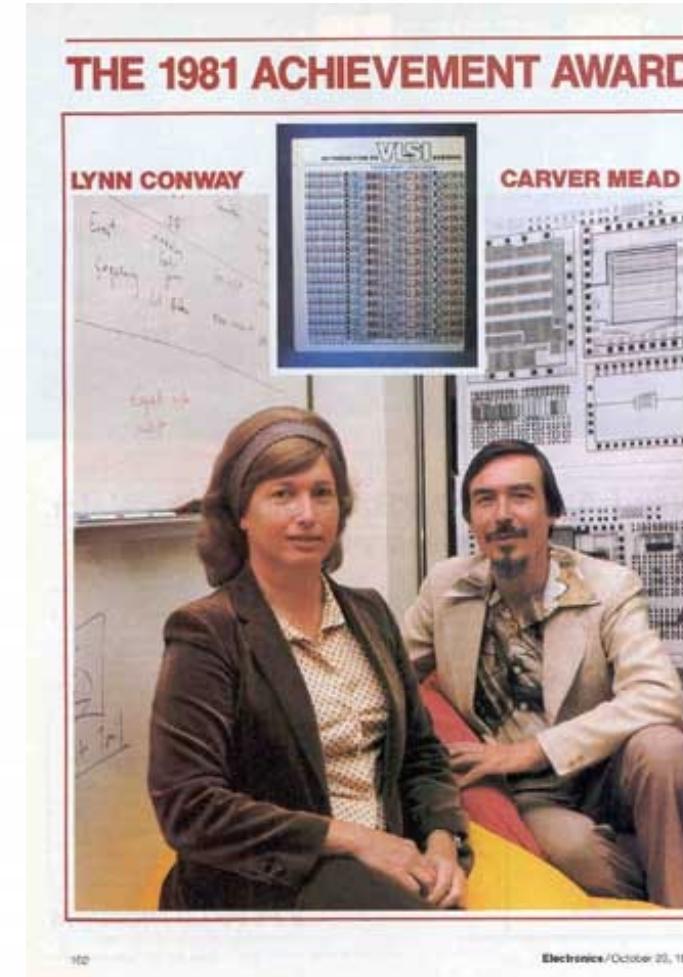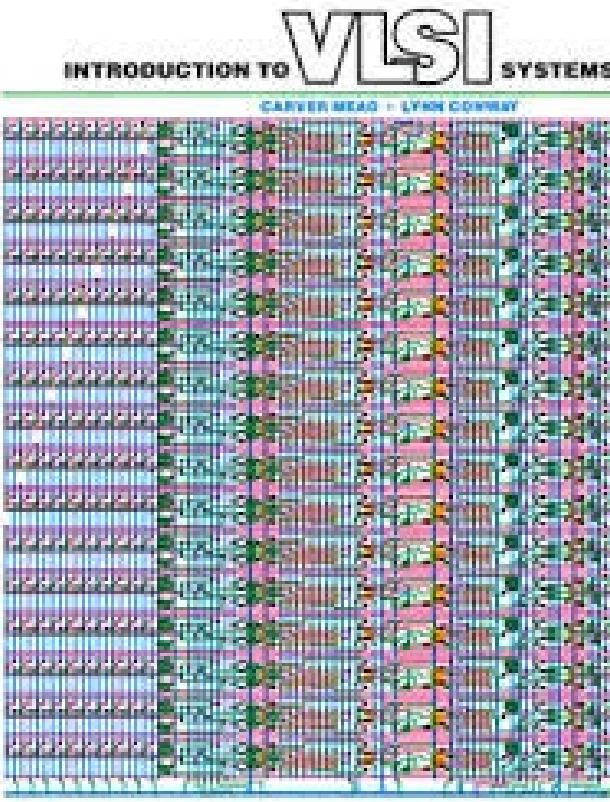

# Geometric Design Rules

- Early on, to generate the mask information for fabrication, the designer needed intimate knowledge of the manufacturing process. Even once this knowledge was distilled to a set of “Geometric Design Rules”, this set of rules was voluminous.
- Academics (C. Mead/L.Conway and others) came up with a much simplified set of design rules (single page description)

► Sufficiently small set that designers could memorize.  
Sufficiently abstract to allow process engineers to shrink the process and preserve existing layouts. Process resolution becomes a “parameter”,  $\lambda$ .

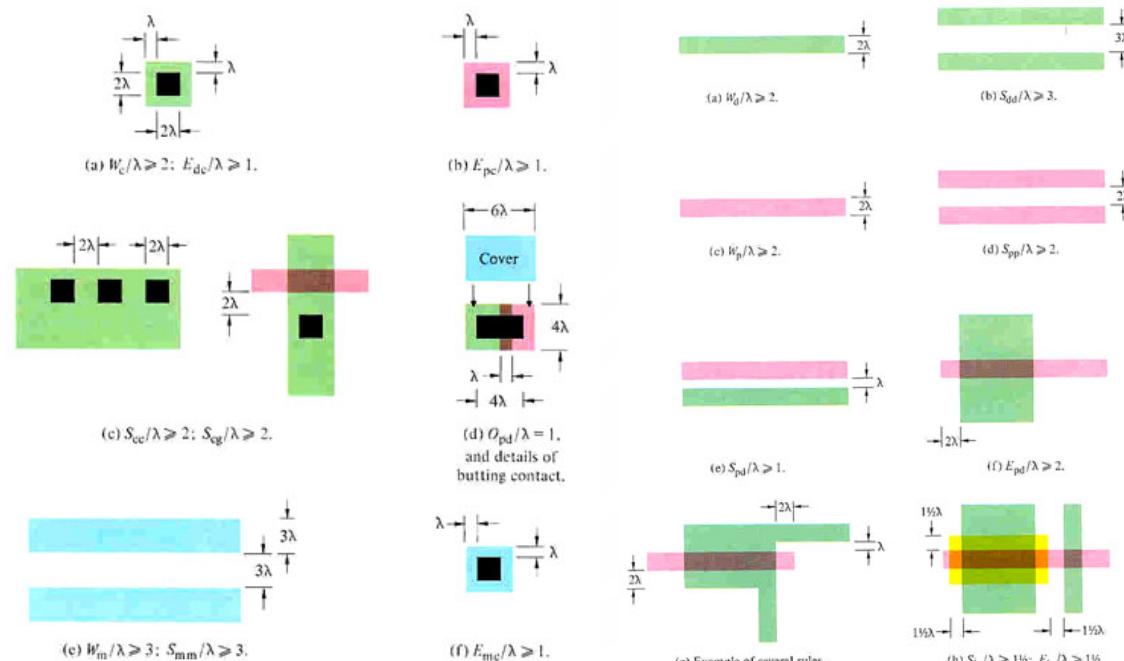


PLATE 3 nMOS design rules (continued)

PLATE 2 nMOS design rules

# Key Development: Silicon Foundries

- Separate the designer from the fabricator: Modeled after the printing industry.  
(Very few authors actually own and run printing presses!)
- Simple standard geometric design rules where the key: these form the “contract” between the designer and manufacturer.
- Designer sends the layout, foundry manufactures the chip and send back.

► **A scalable model for the industry:** IC fab is expensive and complex. Amortizes the expense over many designers. Designers and companies not held back by need to develop and maintain large expensive factories. “Fabless” semiconductor companies - lots of these and very few foundries.



TSMC, Global Foundries, UMC,  
Samsung, SMIC, ...

# Computer Aided Design (1)

Several advances lead to the development of interactive tools for generating layout:

- Computer-based layout representation (CIF, GDS).
- Advances in computer graphics (Ivan Sutherland) and display devices.
- Personal “workstation” (Xerox Alto - Chuck Thacker). “Back room” computers didn’t have the necessary bandwidth to the display.
- Berkeley version - MAGIC




EECS151/251A L03 VERILOG I



# Early '80's Design Methodology and Flow

## Schematic + Full-Custom Layout

- SPICE for timing,
- Switch-level simulation for overall functionality,
- Hand layout,
- No power analysis,
- Layout verified with geometric design rule checker (DRC) and later also layout versus schematic (LVS) checkers

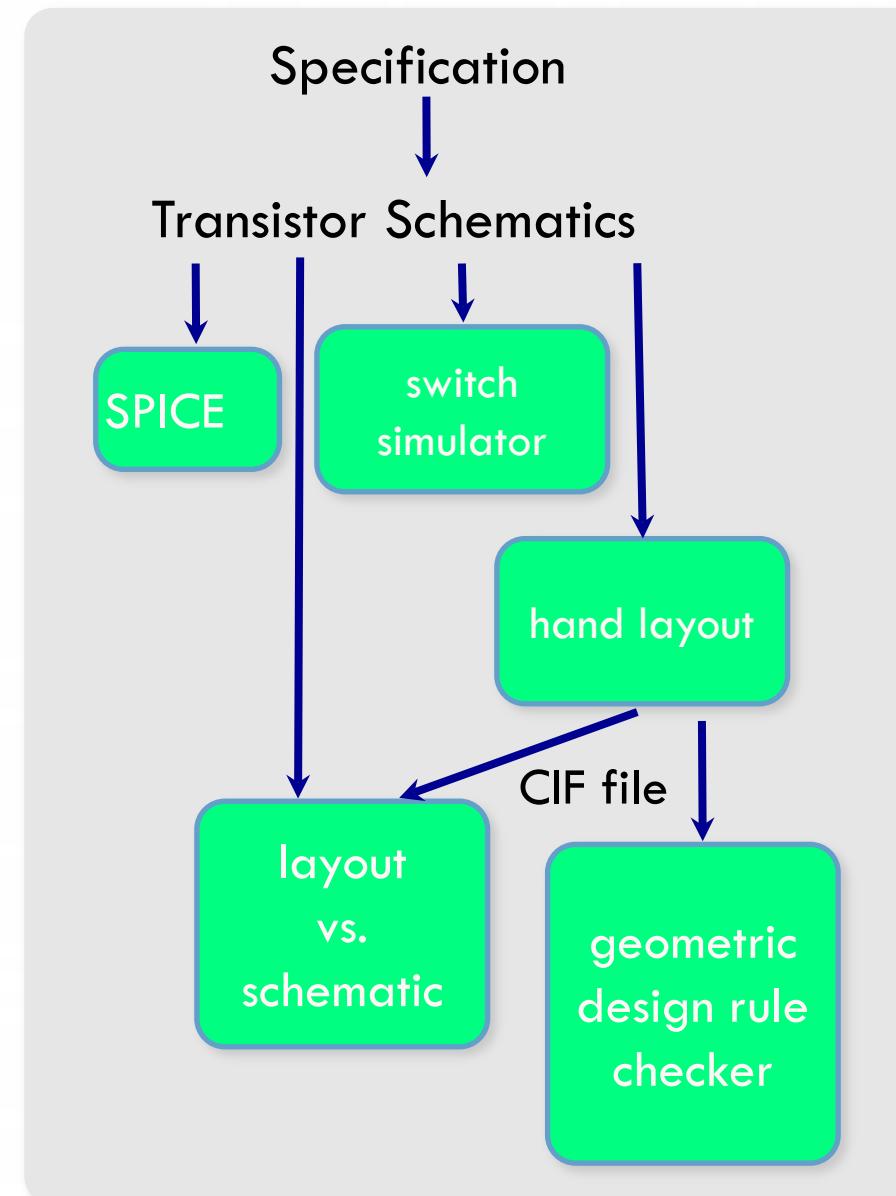

# Computer Aided Design (2)


- For some time after CIF was invented: Layout was generated by hand, then typed in as a CIF file with a text editor.
- Layout compilers
  - Soon some designers started embedding CIF primitives in conventional programming languages: LISP, pascal, fortran, C.
  - This allows designers to write programs that generated layout. Such programs could be parameterized:

```
define GENERATE_RAM(rows, columns) {  
    for I from 1 to rows  
        for J from 1 to columns  
            (GENERATE_BITCELL)}  
GENERATE_RAM(128, 32);
```

- ▶ Lead to circuit/layout generation from higher level descriptions.
- ▶ Eventually, Cadence and Synopsys (formed out of Berkeley) built tools to generate layout from HDLs.

# Administrivia

- Everyone needs to be enrolled by now!
  - If you are still waitlisted, move to a different lab, discussion
- Lab 1 this week
- Lab 2 is more involved
  - Be prepared
  - Verilog primer
- Homework 1 posted this week, due next Friday
  - Start early
- Labor day on Monday, no lecture/discussion

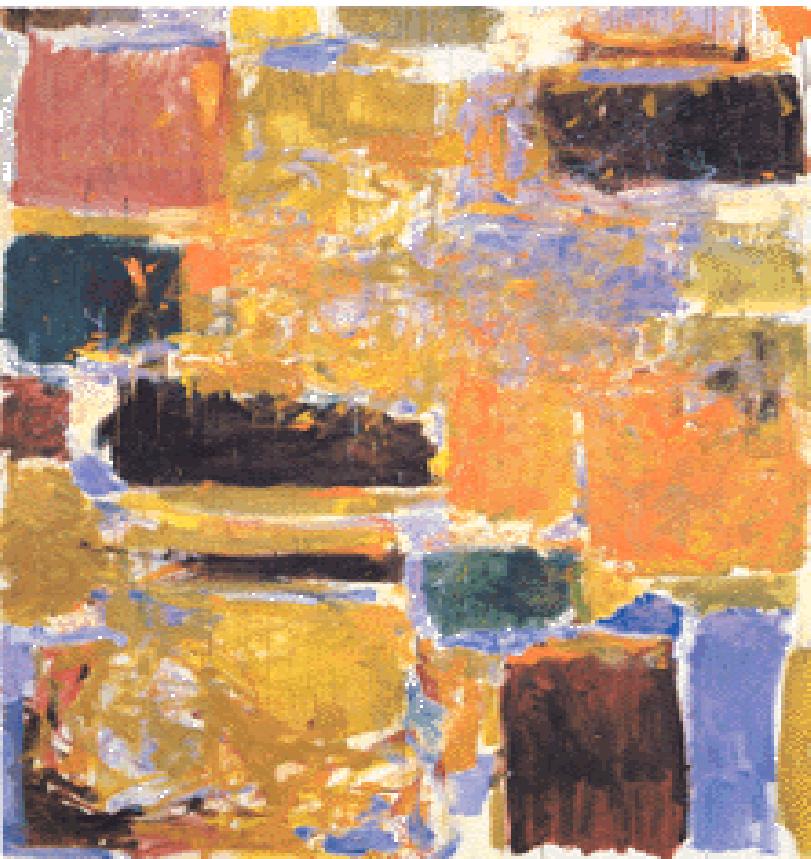

## Implementation Alternatives


# Implementation Alternative Summary

Full-custom:	Every transistors layout hand-drawn and optimized.
Standard-cell:	Logic gates and “macros” automatically placed and routed.
Gate-array (structured ASIC):	Partially prefabricated wafers with arrays of transistors customized with metal layers or vias.
FPGA:	Prefabricated chips that can be customized “in the field”
Microprocessor (e.g. Single-board computers):	Function customized through software.
Domain-specific processor:	Special instruction set interpreters (ex: DSP, NP, GPU).

These days, “ASIC” almost always means standard-cell design.


# Full-Custom

- Circuit styles and transistors are custom sized and drawn to optimize performance and power.
- High NRE (non-recurring engineering) costs
  - Time-consuming layout iterations
- Common today for **analog design**.
- In digital world – for **memories** and **arrays**.

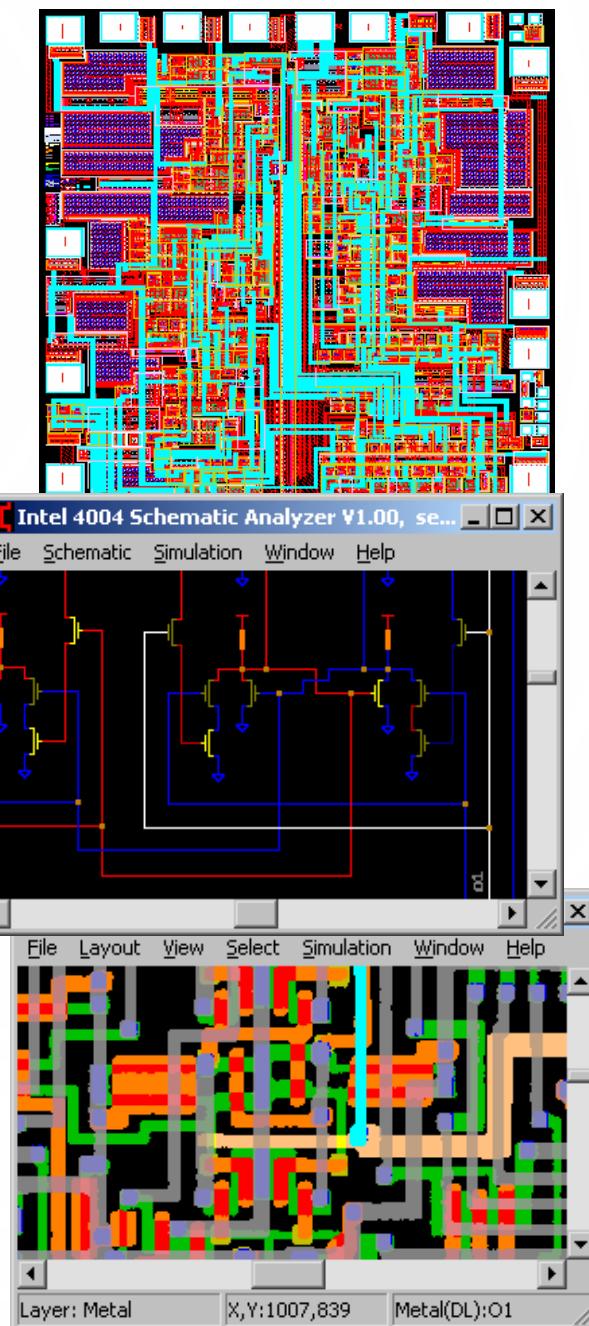


# Standard Cells


- Library of logic gates (1000-2000)
  - Combinational: NANDs, NORs, ... Sequential: Flip-flops, latches, ...
- Each cell comes complete with:
  - layout, schematic, symbol
  - Logic (Verilog), timing, power models.
- Chip layout is automatic, reducing NREs (usually no manual layout).
- Memories, I/O and analog components complete the ASIC

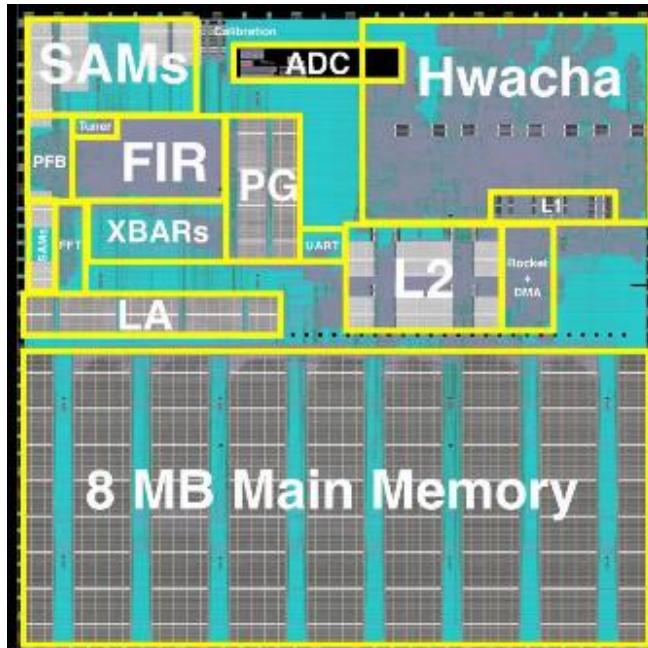

EECS151/251A L03 VERILOG I

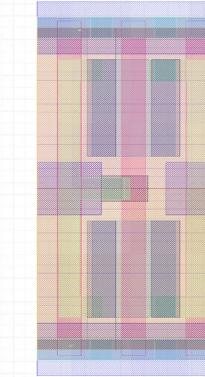

Inverter

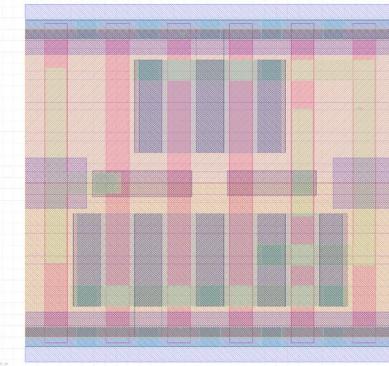


NAND2

ASAP7 – 7nm library from  
Arizona State University

# Gate Array


- Prefabricated wafers of, rows of transistors. Customize as needed with “back-end” metal processing (contact cuts, metal wires). Could use a different factory.
- CAD software understands how to make gates and registers.

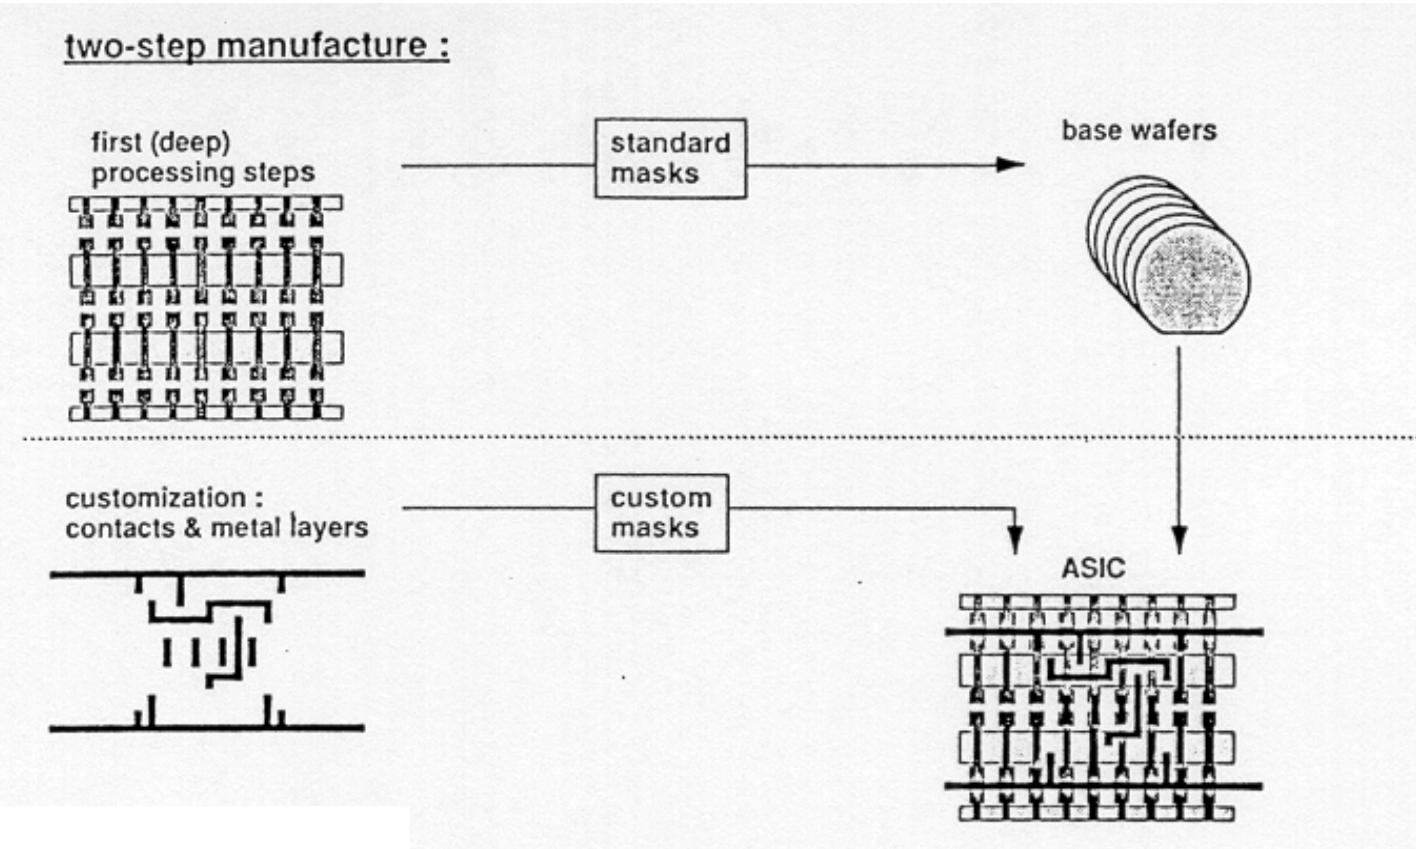

# Gate Array


- Shifts large portion of design and mask NRE to vendor.
- Shorter design and processing times, reduced time to market for user.
- Highly structured layout with fixed size transistors leads to large sub-circuits (ex: Flip-flops) and higher per die costs.
- Memory arrays are particularly inefficient, so often prefabricated.
- Displaced by field-programmable gate arrays

Sea-of-gates,  
structured ASIC,  
master-slice.

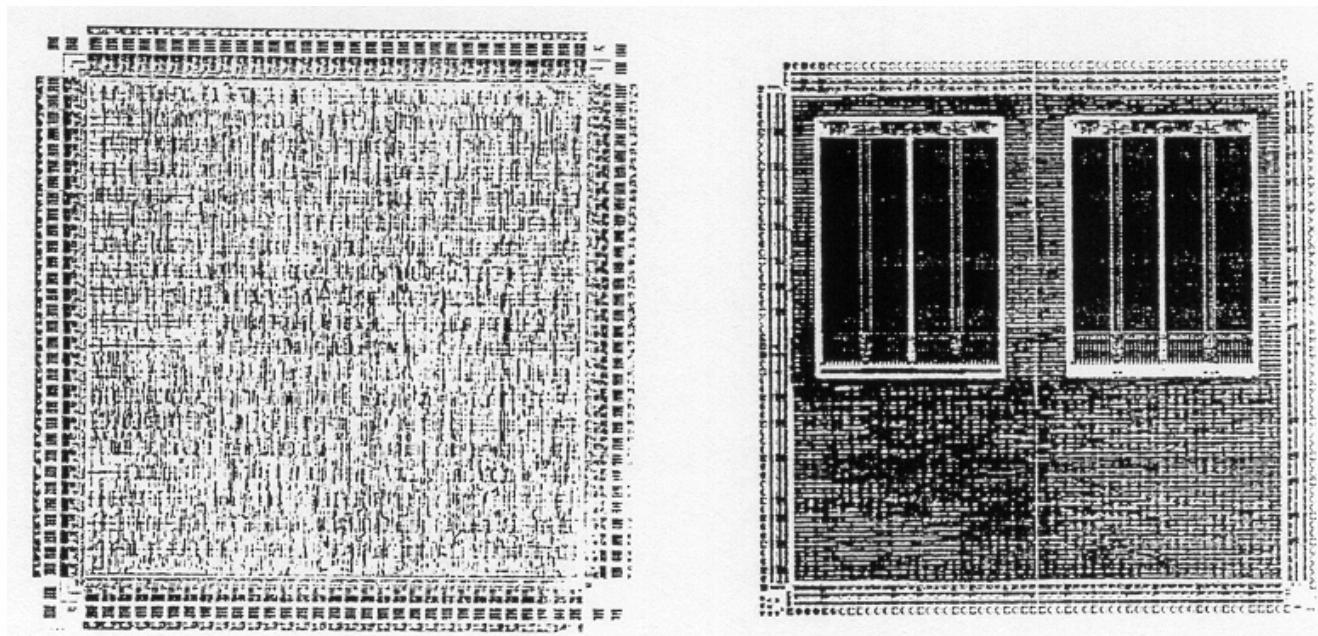


# Field Programmable Gate Arrays (FPGA)

- Two-dimensional array of simple logic- and interconnection-blocks.
- Typical architecture: Look-up-tables (LUTs) implement any function of n-inputs ( $n=3$  in this case).
- Optional flip-flop with each LUT.

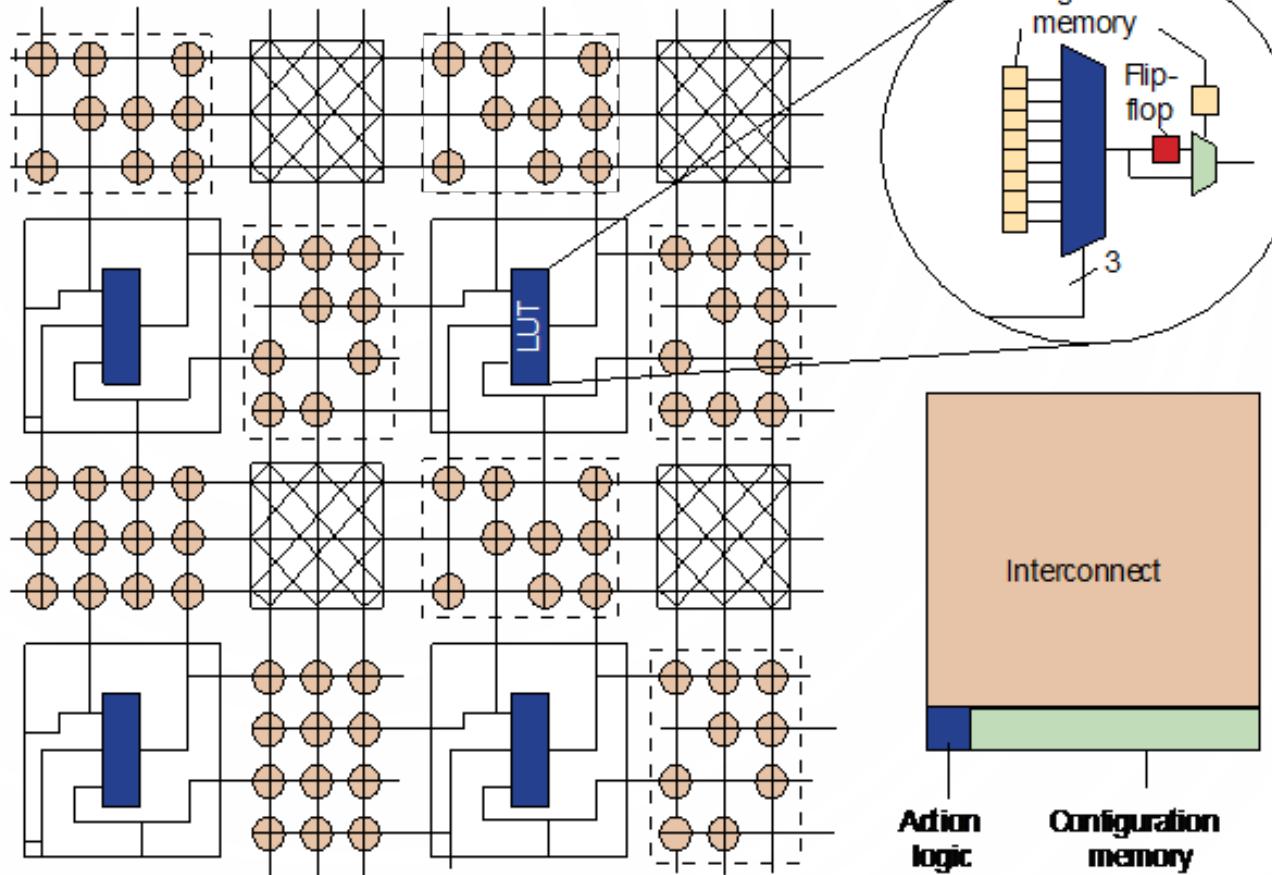

- Fuses, EPROM, or Static RAM cells are used to store the “configuration”.
  - Here, it determines function implemented by LUT, selection of Flip-flop, and interconnection points.
- Many FPGAs include special circuits to accelerate adder carry-chain and many special cores: RAMs, MAC, Ethernetnet, USB, PCIe, CPUs, ...

# FPGA versus ASIC

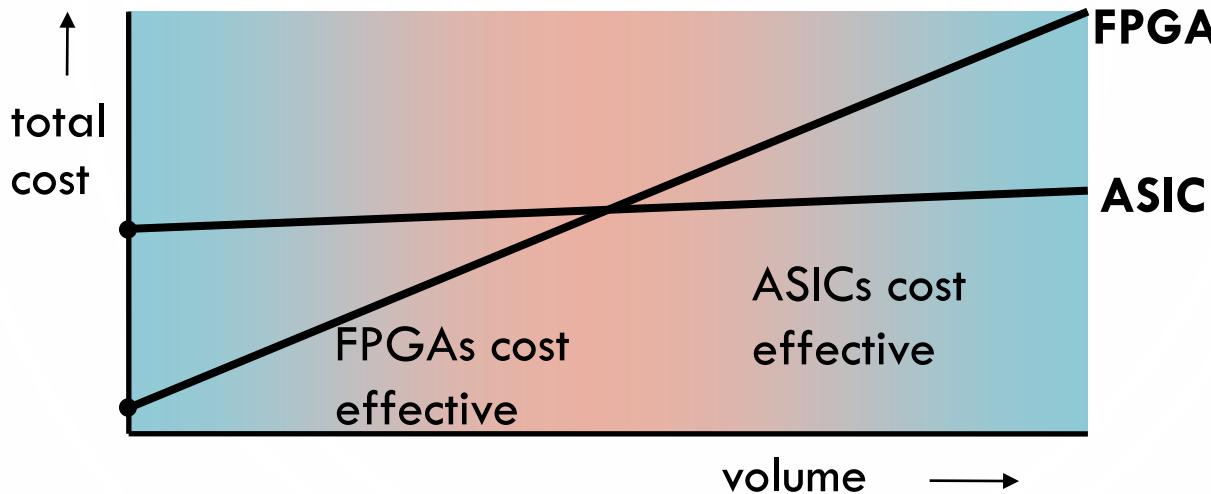

- **ASIC:** Higher NRE costs (10's of \$M). Relatively Low cost per die (10's of \$ or less).
- **FPGAs:** Low NRE costs. Relatively low silicon efficiency  $\Rightarrow$  high cost per part (> 10's of \$ to 1000's of \$).
- **Cross-over volume** from cost effective FPGA design to ASIC was often in the 100K range.
- **ASICs often have >10x higher performance and 10x lower power for the same application.**

# Microprocessors



- Where relatively low performance and/or high flexibility is needed, a viable implementation alternative:
  - Software implements desired function
  - “Microcontroller”, often with built in nonvolatile program memory and used as single function.
- Two “abstraction” levels:
  - Instruction Set Architecture (ISA)
  - “Synthesizable” RTL model (“soft core”, available in HDL)
- Their implementation can be both ASIC or FPGA



§	Assembler
	ADD{cond}{S} Rd, Rn, <Operand2>
	ADC{cond}{S} Rd, Rn, <Operand2>
5E	QADD{cond} Rd, Rm, Rn
5E	QDADD{cond} Rd, Rm, Rn
	SUB{cond}{S} Rd, Rn, <Operand2>
	SBC{cond}{S} Rd, Rn, <Operand2>
	RSB{cond}{S} Rd, Rn, <Operand2>
	RSC{cond}{S} Rd, Rn, <Operand2>
5E	QSUB{cond} Rd, Rm, Rn
5E	QDSUB{cond} Rd, Rm, Rn
2	MUL{cond}{S} Rd, Rm, Rs
2	MLA{cond}{S} Rd, Rm, Rs, Rn
M	UMULL{cond}{S} RdLo, RdHi, Rm, Rs
M	UMLAL{cond}{S} RdLo, RdHi, Rm, Rs
6	UMAAL{cond} RdLo, RdHi, Rm, Rs

# System-on-Chip (SOC)

- Brings together: standard cell blocks, custom analog blocks, processor cores, memory blocks, embedded FPGAs, ...
- Standardized on-chip buses (or hierarchical interconnect) permit “easy” integration of many blocks.
  - Ex: AXI, ...
- “IP Block” business model: Hard- or soft-cores available from third party vendors.
- ARM, inc. is the example. Hard- and “synthesizable” processors.
- ARM and other companies provide, Ethernet, USB controllers, analog functions, memory blocks, ...

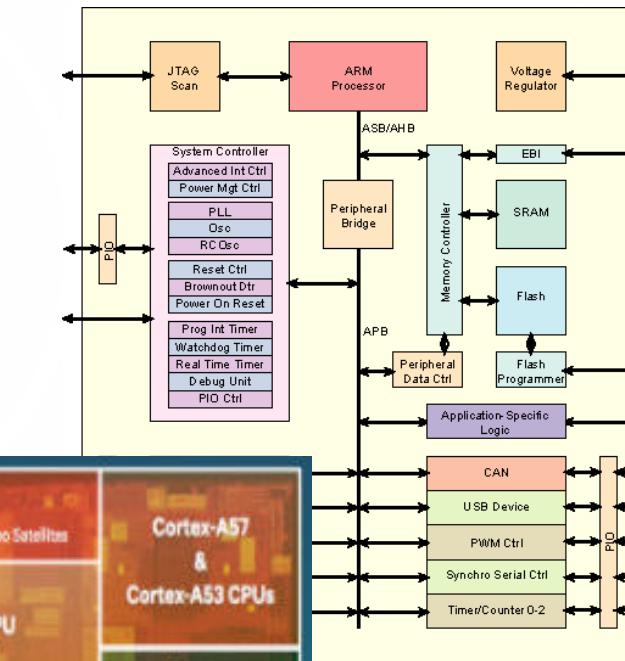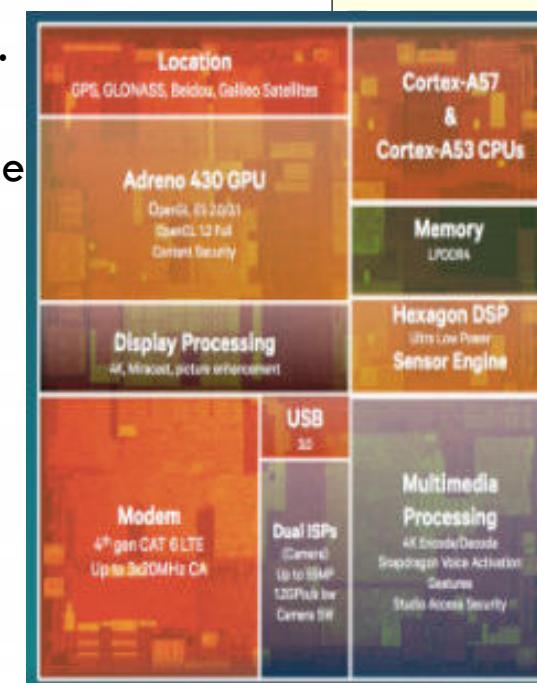

Qualcomm  
Snapdragon


- Pre-verified block designs, standard bus interfaces (or adapters) ease integration - lower NREs, shorten TTM.

# Quiz

True or false?

- a) FPGAs are usually faster than ASICs
- b) Verilog syntax is different for FPGAs and ASICs
- c) One cannot change the FPGA function in a deployed product



<b>abc</b>
1 . <b>FFF</b>
2 . <b>FFT</b>
3 . <b>FTF</b>
4 . <b>FTT</b>
5 . <b>TFF</b>
6 . <b>TFT</b>
7 . <b>TTF</b>
8 . <b>TTT</b>

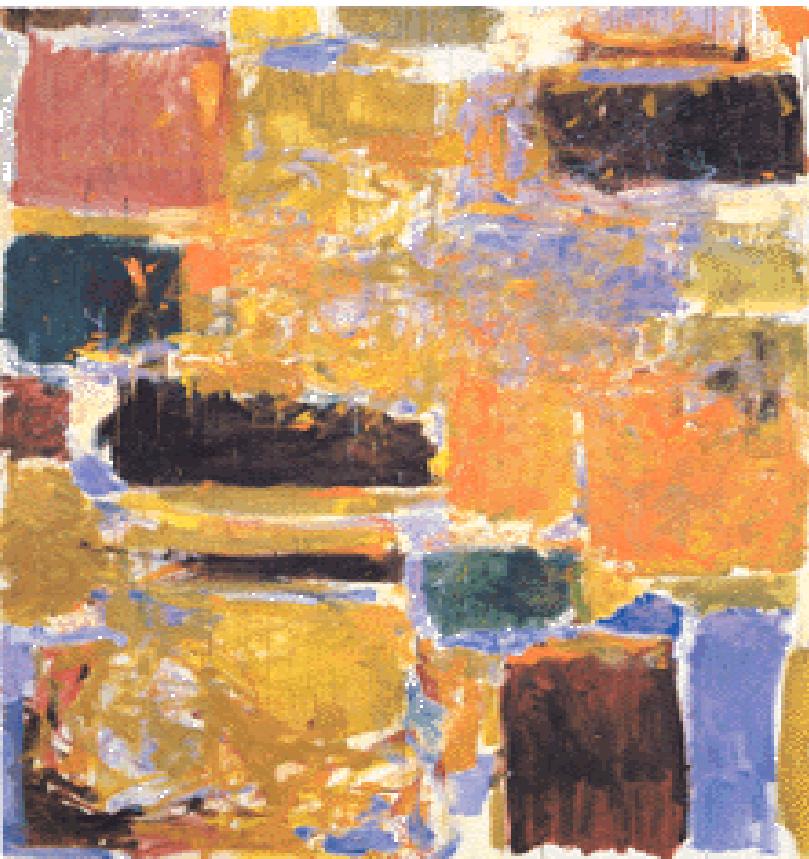


# ASIC Design

# Verilog to ASIC Layout Flow


- “Push-button” approach

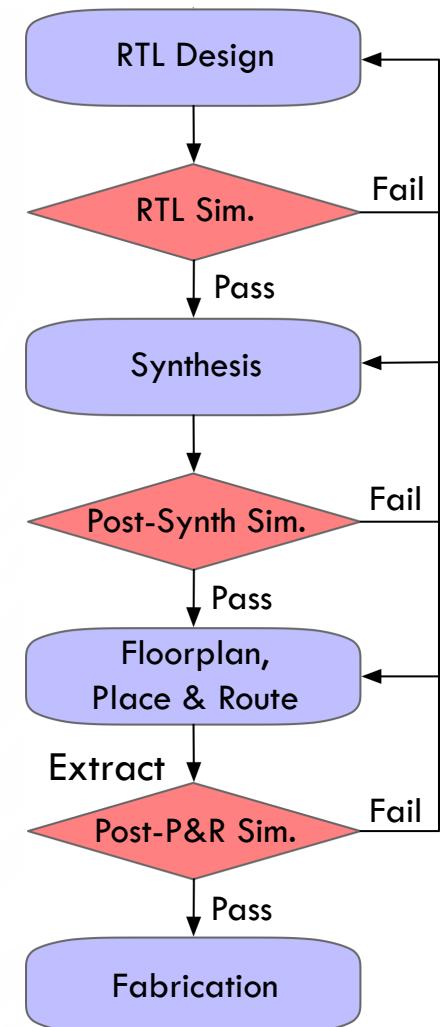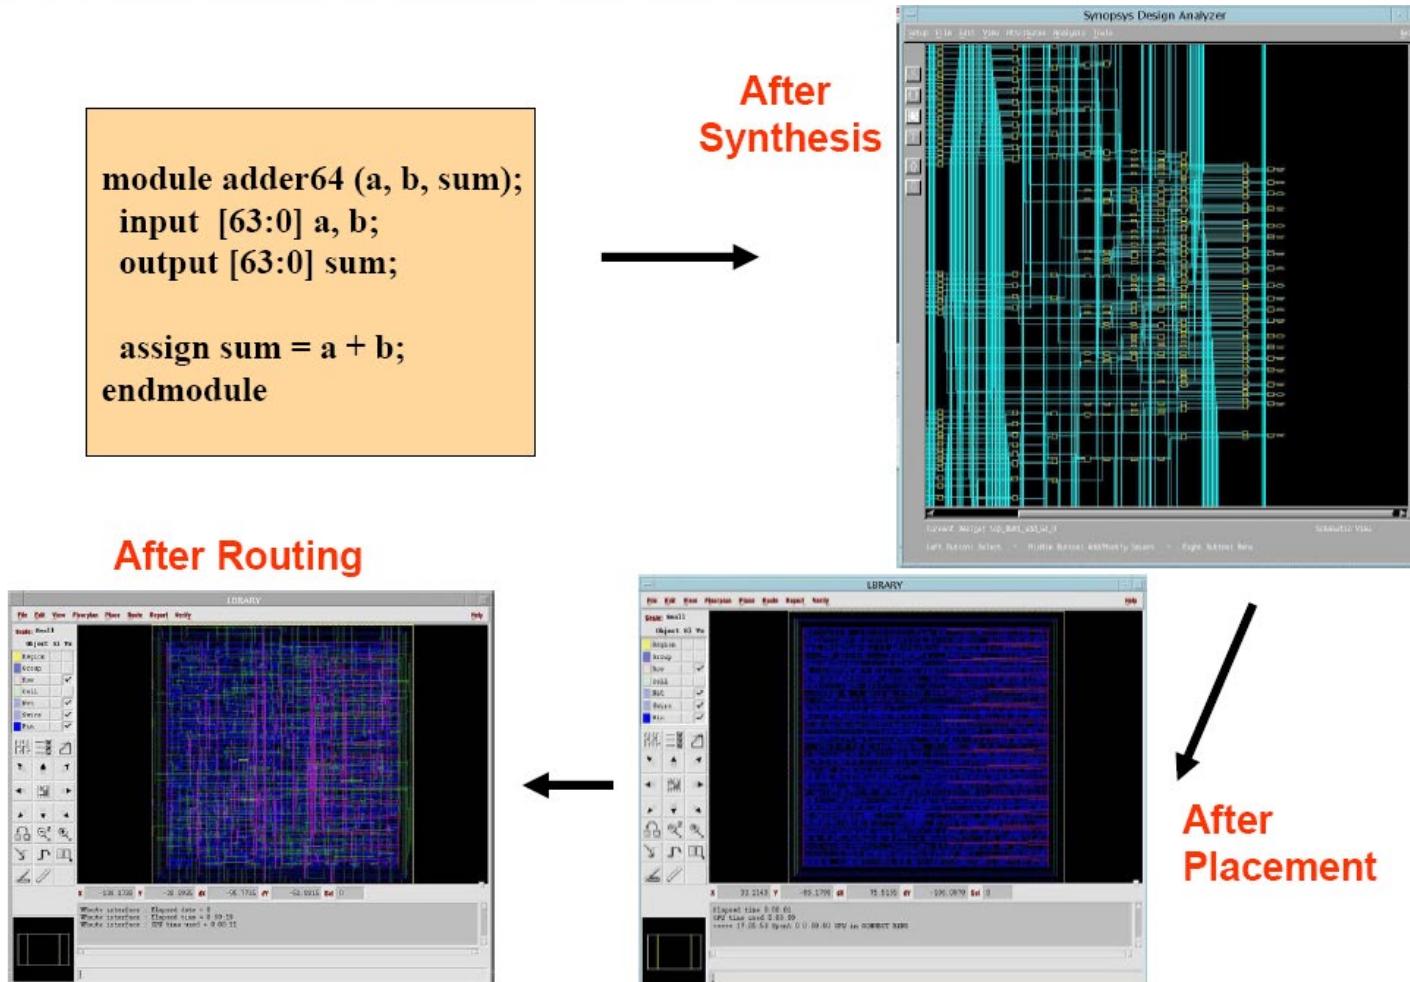

# Standard cell layout methodology

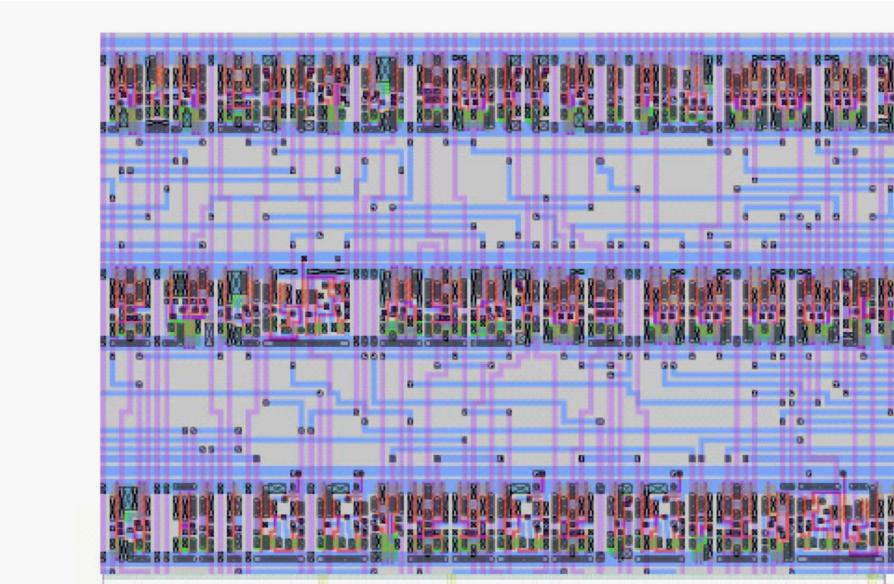

Old times:  $1\text{ }\mu\text{m}$ , 2-metal process

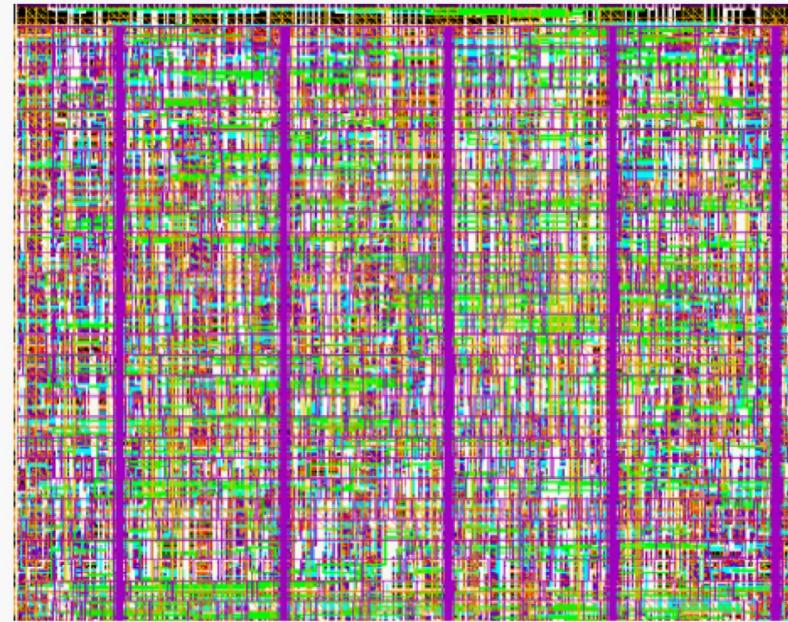

Modern sub-100nm process


“Transistors are free things that fit under wires”

- With limited # metal layers, dedicated routing channels were needed
- Currently area dominated by wires


# Standard Cells (ASAP7)

Name

1x Inverter

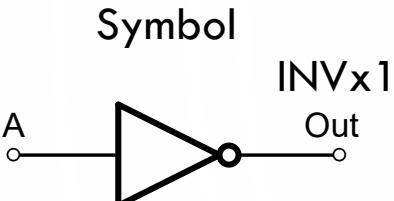

Schematic

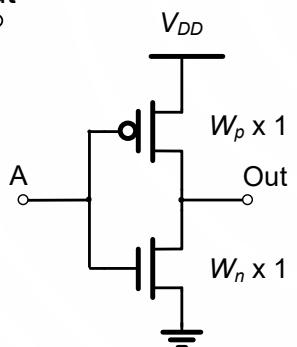

Verilog for logic sim

```
'celldefine
module INVx1_ASAP7_75t_R (Y, A);
    output Y;
    input A;

    // Function
    not (Y, A);


    // Timing
    specify
        (A => Y) = 0;
    endspecify
endmodule
`endcelldefine
```

Netlist for Spice sim

```
.subckt PM_BUFX10_ASAP7_75T_R%A 2 7 10 13 15 23 27 VSS
c21 27 VSS 0.00191995f $X=0.081 $Y=0.135
c22 23 VSS 0.0244917f $X=0.0565 $Y=0.1325
c23 13 VSS 0.00510508f $X=0.135 $Y=0.135
c24 10 VSS 0.0605852f $X=0.135 $Y=0.0675
c25 2 VSS 0.0649407f $X=0.081 $Y=0.0675
r26 23 27 1.66358 $w=1.8e-08 $l=2.45e-08 $layer=M1
$thickness=3.6e-08 $X=0.0565
...
```

+ .lef for place and route, and other files for LVS and DRC

Layout (gds)

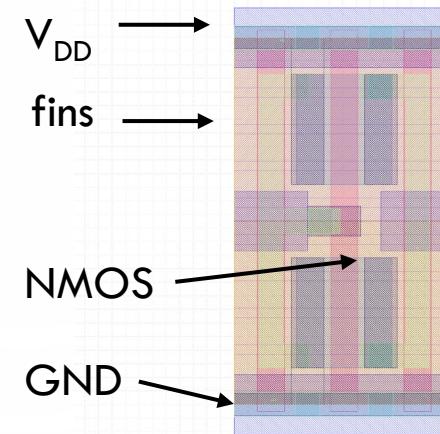

INVx1\_ASAP7\_75T\_R

asap7w7p5t\_24\_INVBUF\_RVT\_IT Cell Library:  
Process , Voltage 0.70, Temp 25.00

Truth Table

INPUT	OUTPUT
A	Y
0	1
1	0

Footprint

Cell Name	Area
INVx1_ASAP7_75t_R	0.69984

Pin Capacitance Information

Cell Name	Pin Cap(fF)	Max Cap(fF)
INVx1_ASAP7_75t_R	0.43869	46.08000

Leakage Information

Cell Name	Leakage(pW)		
	Min.	Avg	Max.
INVx1_ASAP7_75t_R	0.00000	51.15440	53.32100

Delay Information

Cell Name	Timing Arc(Dir)	Delay(ps)		
		Min	Mid	Max
INVx1_ASAP7_75t_R	A->Y (FR)	5.53739	36.47100	284.32000

.lib for synthesis


```
cell (INVx11_ASAP7_75t_R) {
    area : 3.03264;
    cell_leakage_power : 562.699;
    pg_pin (VDD) {
        pg_type : primary_power;
        voltage_name : "VDD";
    }
    pg_pin (VSS) {
        pg_type : primary_ground;
        voltage_name : "VSS";
    }
    leakage_power () {
        value : 538.867;
        when : "(A * !Y)";
        related_pg_pin : VDD;
    }
}
```

# Standard Cells


Name

1x Inverter


Symbol

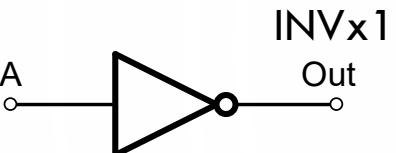



Schematic

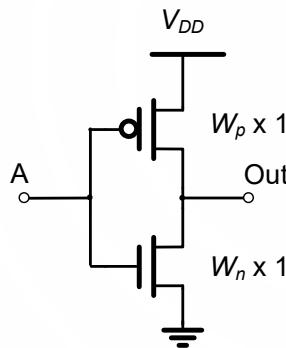



Layout

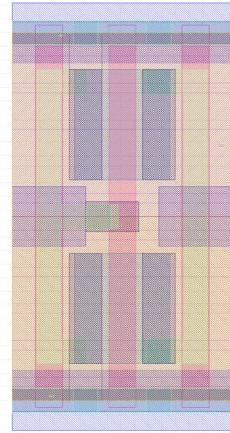


2x Inverter

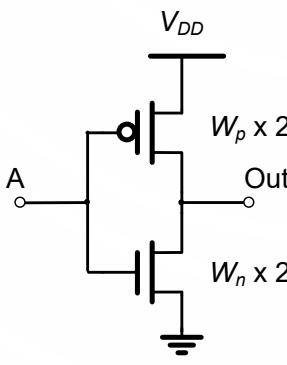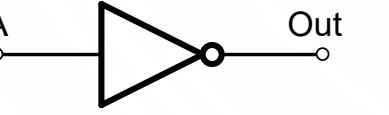

1x NAND2

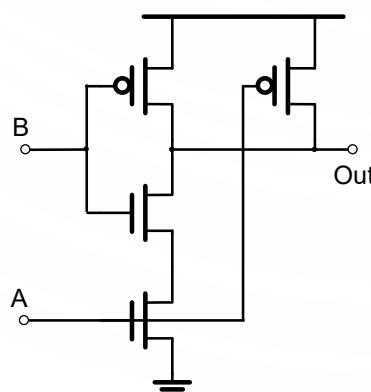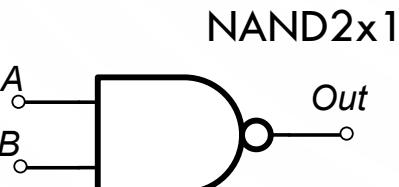


# Standard Cell Placement

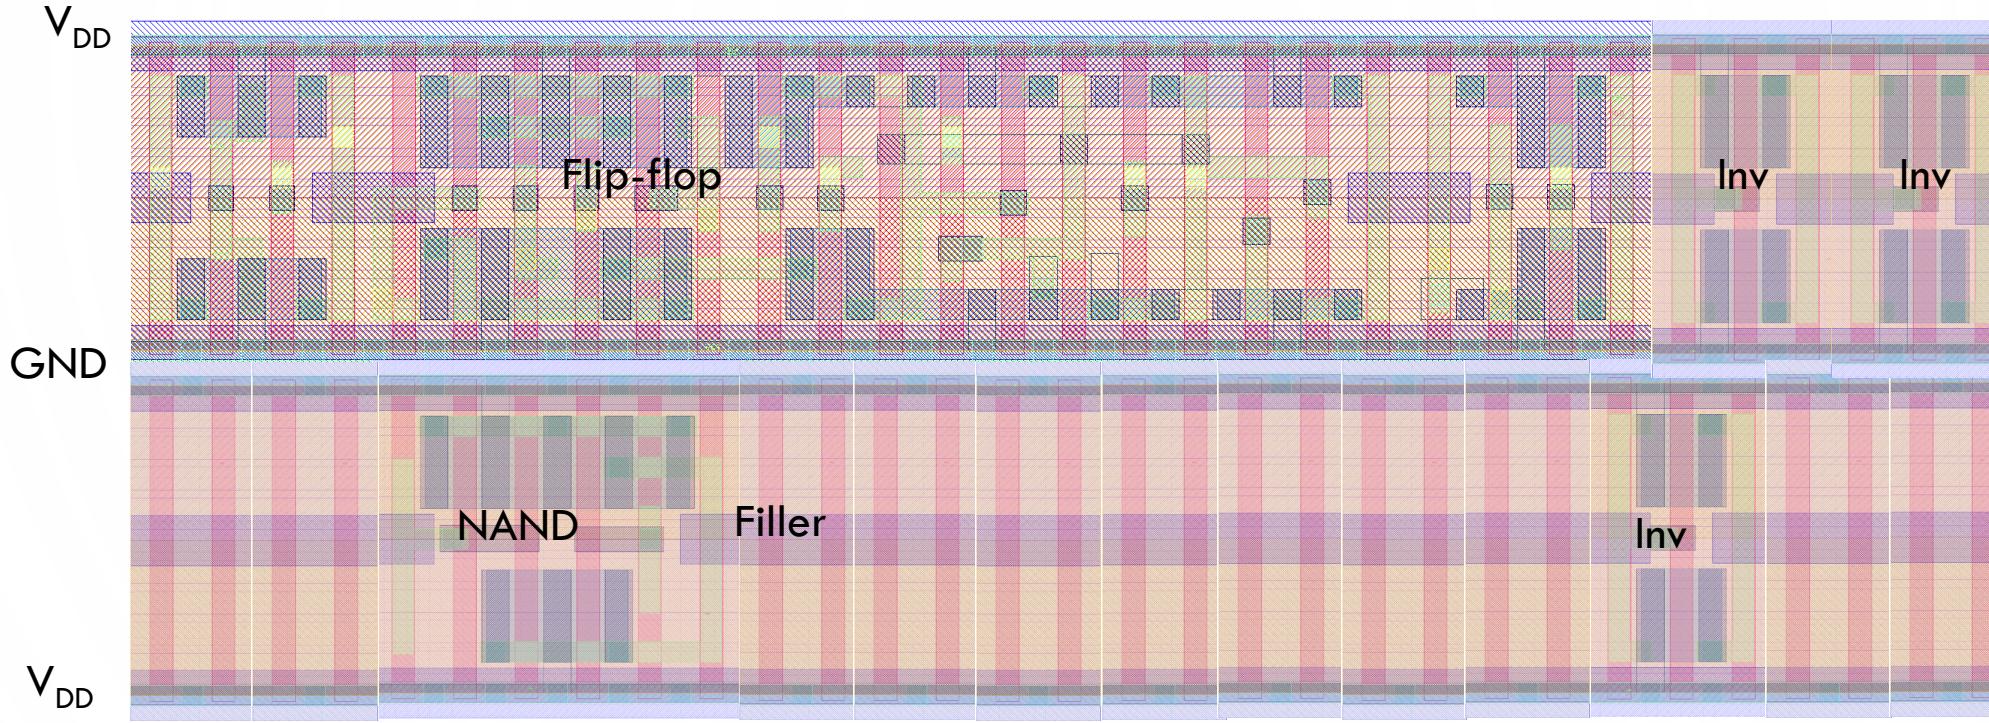

Standard cells abut and flip  
Router connects inputs and outputs

# Macro modules

256×32 (or 8192 bit) SRAM Generated by hard-macro module generator

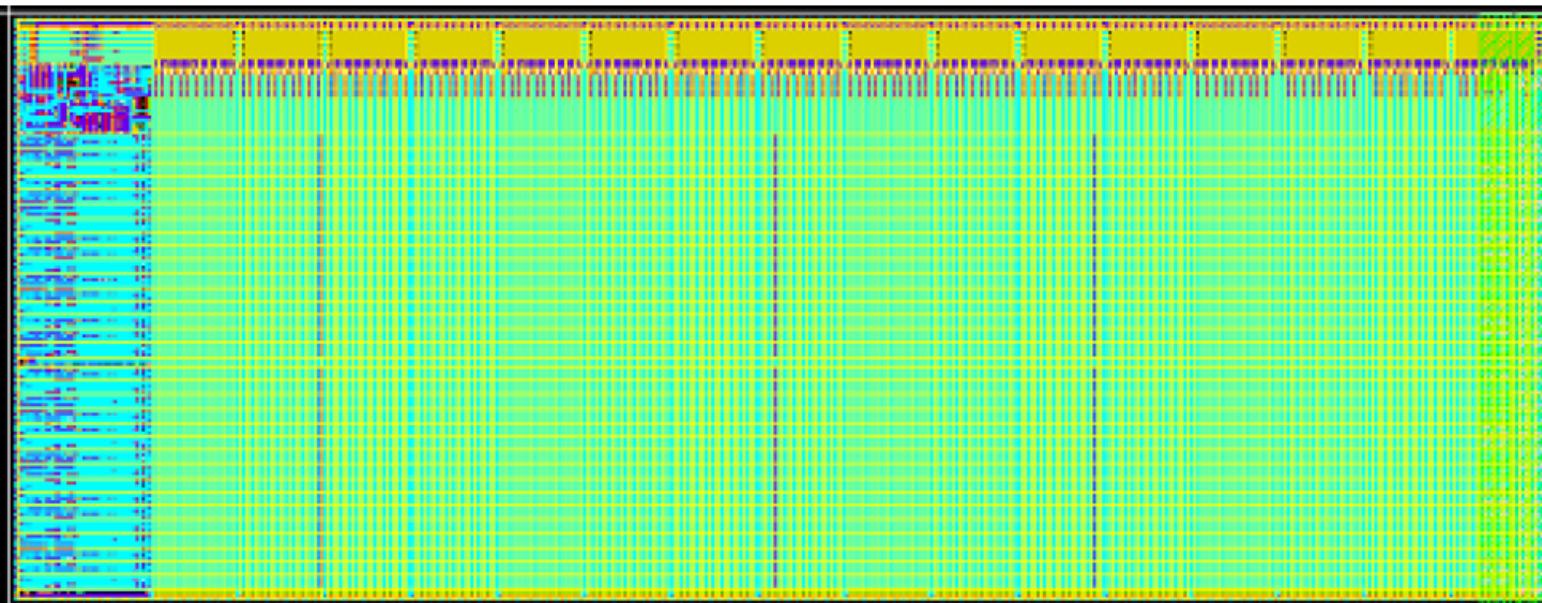

- Generate highly regular structures (entire memories, multipliers, etc.) with **a few lines of code**
- Verilog models for memories **automatically** generated based on size



# Hardware Description Languages

# Hardware Description Languages

## **Verilog:**

- Simple C-like syntax for structural and behavior hardware constructs
- Mature set of commercial tools for synthesis and simulation
- Used in EECS 151 / 251A

## **VHDL:**

- Semantically very close to Verilog
- More syntactic overhead
- Extensive type system for “synthesis time” checking

## **System Verilog:**

- Enhances Verilog with strong typing along with other additions

## **BlueSpec:**


- Invented by Prof. Arvind at MIT
- Originally built within the Haskell programming language
- Proprietary, available commercially: bluespec.edu

## **Chisel:**

- Open, developed at UC Berkeley
- Used in CS152, CS250
- Available at: chisel.eecs.berkeley.edu

# Verilog: Brief History

- Originated at Automated Integrated Design Systems (renamed Gateway) in 1985. Acquired by Cadence in 1989.
- Invented as simulation language. Synthesis was an afterthought. Many of the basic techniques for synthesis were developed at Berkeley in the 80's and applied commercially in the 90's.
- Around the same time as the origin of Verilog, the US Department of Defense developed VHDL (A double acronym! VSIC (Very High-Speed Integrated Circuit) HDL). Because it was in the public domain it began to grow in popularity.
- Afraid of losing market share, Cadence opened Verilog to the public in 1990.
- An IEEE working group was established in 1993, and ratified IEEE Standard 1394 (Verilog) in 1995. We use IEEE Std 1364-2005.
- Verilog is the language of choice of Silicon Valley companies, initially because of high-quality tool support and its similarity to C-language syntax.
- VHDL is still popular within the government, in Europe and Japan, and some Universities.
- Most major CAD frameworks now support both.

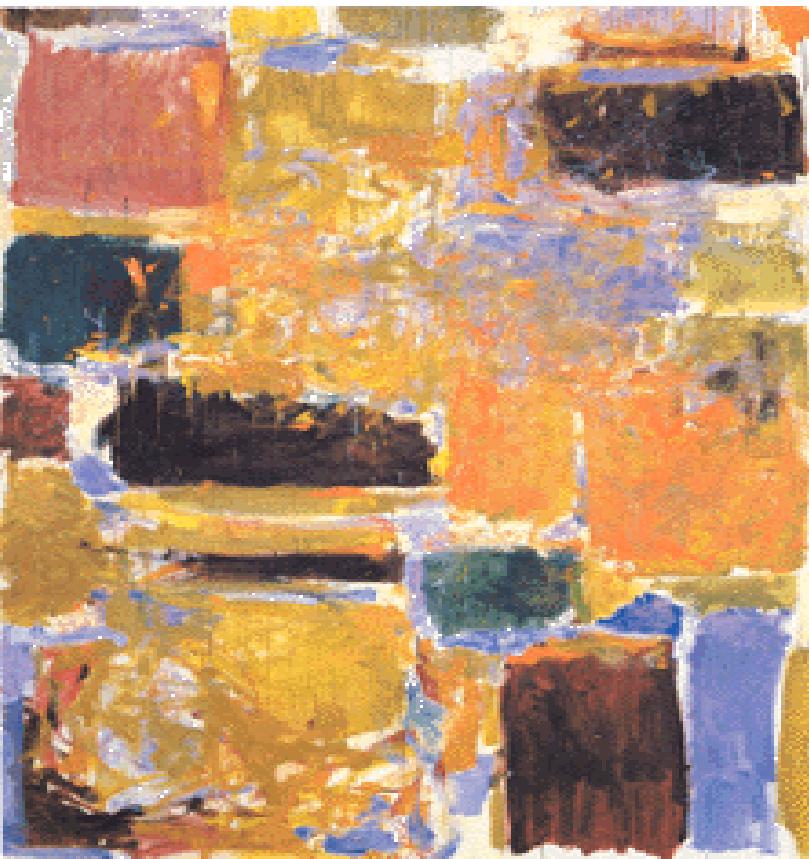


# Verilog

# Verilog Introduction

- A module definition describes a component in a circuit
- Two ways to describe module contents:
  - **Structural Verilog**
    - List of sub-components and how they are connected
    - Just like schematics, but using text
    - tedious to write, hard to decode
    - You get precise control over circuit details
    - May be necessary to map to special resources of the FPGA/ASIC
  - **Behavioral Verilog**
    - Describe what a component does, not how it does it
    - Synthesized into a circuit that has this behavior
    - Result is only as good as the tools
- Build up a hierarchy of modules. Top-level module is your entire design (or the environment to test your design).

# Logic Synthesis

- Verilog and VHDL started out as simulation languages but soon programs were written to automatically convert Verilog code into low-level circuit descriptions (netlists).
- Synthesis converts Verilog (or other HDL) descriptions to a logic mapping by using technology-specific primitives:
  - For FPGAs: LUTs, FlipFlops, and BRAMs.
  - For ASICs: standard cells and memory macros.
- In addition, synthesis algorithms optimize the implementation for delay and power.

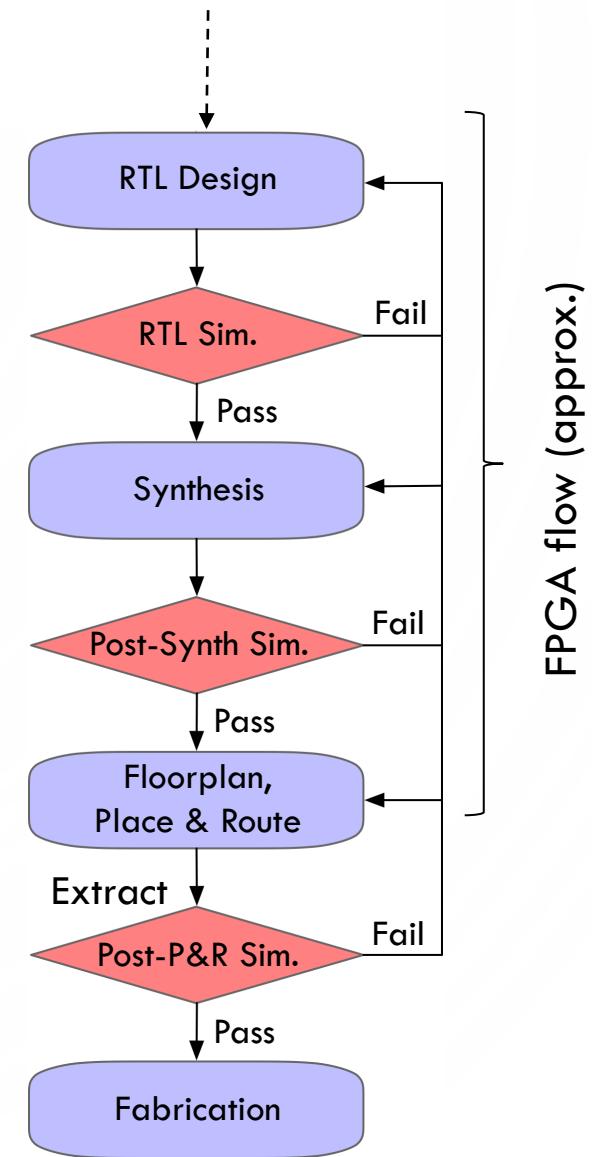

# Verilog Modules and Instantiation

- Modules define circuit components.
- Instantiation defines hierarchy of the design.

```
name          port list
module addr_cell(a, b, cin, s, cout);
  input   a, b, cin;
  output  s, cout;           port declarations (input, output,
                             or inout)
endmodule

module adder (A, B, S);
  addr_cell ac1( ... connections ... );
endmodule
```

keywords

module body

port declarations (input, output, or inout)

Instance of `addr_cell`

`... connections ...`

Note: A module is not a function in the C sense. There is no call and return mechanism. Think of it more like a hierarchical data structure.

# Structural Model - XOR example


```
module xor_gate( out, a, b );
    input a, b;
    output out;
    wire aBar, bBar, t1, t2;
    not invA (aBar, a);
    not invB (bBar, b);
    and and1 (t1, a, bBar);
    and and2 (t2, b, aBar);
    or  or1 (out, t1, t2);
endmodule
```

module name  
port list  
port declarations  
internal signal declarations  
Built-in gates instances  
Instance name  
Interconnections (note output is first)


The circuit diagram shows the internal structure of the xor\_gate module. It takes two inputs, a and b, and produces one output, out. Input a is connected to the non-inverting input of an inverter labeled invA, which outputs aBar. Input b is connected to the non-inverting input of an inverter labeled invB, which outputs bBar. aBar is connected to one input of a two-input AND gate labeled and1, and bBar is connected to its other input. The output of and1 is t1. b is connected to the non-inverting input of invA, and aBar is connected to its inverting input. The output of invA is aBar, which is then connected to one input of a second two-input AND gate labeled and2, and b is connected to its other input. The output of and2 is t2. t1 and t2 are connected to the inputs of an OR gate labeled or1, whose output is the final output, out.

- Notes:
  - The instantiated gates are not “executed”. They are active always.
  - xor gate already exists as a built-in (so really no need to define it).
  - Undeclared variables assumed to be wires. Don’t let this happen to you!

# Structural Example: 2-to1 mux

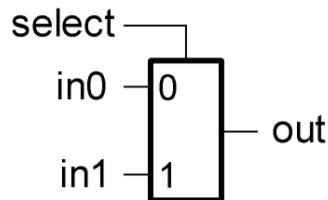

a) 2-input mux symbol

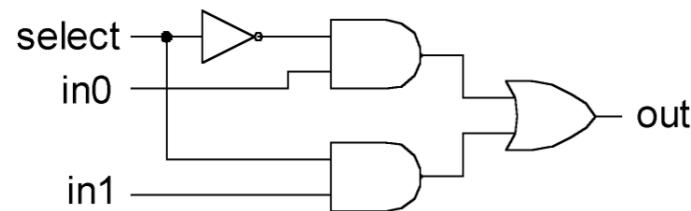

b) 2-input mux gate-level circuit diagram

```
/* 2-input multiplexor in gates */
module mux2 (in0, in1, select, out);
    input in0,in1,select;
    output out;
    wire s0,w0,w1;

    not (s0, select);
    and (w0, s0, in0),
        (w1, select, in1);
    or  (out, w0, w1);

endmodule // mux2
```

C++ style comments


Built-ins don't need instance names

Multiple instances can share the same  
“master” name.


Built-ins gates can have > 2 inputs. Ex:

```
and (w0, a, b, c, d);
```

# Instantiation, Signal Array, Named ports

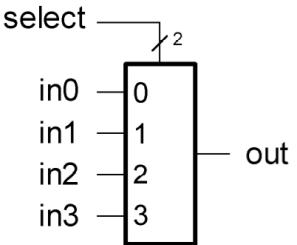

a) 4-input mux symbol

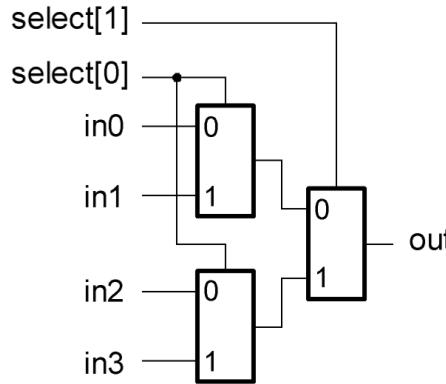

b) 4-input mux implemented with 2-input muxes

```
/* 2-input multiplexor in gates */
module mux2 (in0, in1, select, out);
    input in0,in1,select;
    output out;
    wire s0,w0,w1;
    not (s0, select);
    and (w0, s0, in0),
        (w1, select, in1);
    or (out, w0, w1);
endmodule // mux2
```

```
module mux4 (in0, in1, in2, in3, select, out);
    input in0,in1,in2,in3;
    input [1:0] select; ----- Signal array. Declares select[1], select[0]
    output out;
    wire w0,w1;
    mux2
        m0 (.select(select[0]), .in0(in0), .in1(in1), .out(w0)),
        m1 (.select(select[0]), .in0(in2), .in1(in3), .out(w1)),
        m3 (.select(select[1]), .in0(w0), .in1(w1), .out(out));
endmodule // mux4
```

*----- Named ports. Highly recommended.*

# Summary

- The design process has changed over time
- ASIC design process is dominant today:
  - Logic synthesis
  - Automated place and route
- Abstraction layer: Standard cells
- The design flow involves translating an abstracted RTL design into physical logic gates, and verifying that it has been done correctly
- Verilog is commonly used to describe RTL
  - Structural or
  - Behavioral