Basic System Setup for Measurement

CHARLIE G. TOLLEY^{1, 2}

¹Department of Astronomy, University of California Berkeley, Berkeley, CA 94720, USA ²Radio Astronomy Laboratory, University of California Berkeley, Berkeley, CA 94720, USA

(Dated: Oct 1, 2025)

1. SETUP AND INSTRUCTIONS

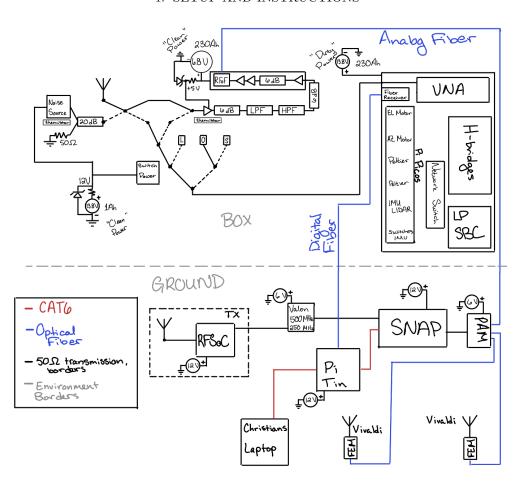


Figure 1. The configuration of the most basic components of the telescope. The only elements that are not included are the IMU, LIDAR, and Peltier devices (thermal control). Note that the DB9 cables are not pictured here - all cables in the box are labeled with their destination DB9 connector. This being said, the only cables needed for basic switching/calibration cycle within the box are the RF Switch DB9, power to the switches, noise source, receiver and panda box. Note also that the Vivaldi feeds are only included for the sake of completion, as they are only used for RFI flagging and unnecessary for running the full calibration cycle. Likewise, the RFSoC external transmitter is not required and not setup in the lab currently.

Corresponding author: Charlie G. Tolley

tolley412@berkeley.edu

1.1. Power

As of now, in the lab, power is provided with power supplies, with the exception of the 1Ah clean battery pack for the switches and noise source. The clean box components all have zener diodes connected to regulate voltage as our batteries are not truly 3V per cell, but closer to 3.4V per cell. To ensure that the voltage levels of the LNAs (which have voltage and temp dependencies) remain consistent between the power supplies and batteries, make sure to set the voltage levels accordingly.

The thermistors, which provide thermal monitoring, are powered through connection to the Pi Pico microcontrollers and do not require an external power source.

1.2. Hardware

You will have to be aware of the SNAP that you are using. In the current setup, the HERA number is C000069, and the other SNAP we have available is C000122. This has implications for which corr_config.yaml you use when initializing the FPGA.

For the PAMs, or Post-Amplification Module, if the optical fiber port is dirty then it will not be able to receive our analog signal. It doesn't matter which fiber input/SMA output pair you use.

To connect to the Pi tin (which talks to the LattePanda SBC), one can connect via wireless connection or a wired connection, which is shown in the figure above.

1.3. Software

In its current configuration, the Raspberry Pi has the IP address 10.10.10.10, and the Panda can be ssh'ed into from the Pi at the IP address 10.10.10.11.

The full *internal* calibration cyle can be run as follows on a system set up as shown above:

1.3.1. Terminal 1

Initialize the FPGA.

```
ssh eigsep@10.10.10.10 (requires password)
python ~/eigsep/eigsep_observing/scripts/fpga_init.py -pasf
```

You may need to specify the config, as mentioned above. The default file is corr_config.yaml and has the correct information for SNAP C000069. If you need to switch to SNAP C000122, you will have to specify the correct config file with argument --config_file ~/eigsep_observing/src/eigsep_observing/config/corr_config_snap122.yaml.

All you need control of are switches and VNA, but thermistor control is highly recommended. Thermistor control is also in troubleshooting stages as of now.

```
1.3.2. Terminal 2
```

Live plotter for real time monitoring. Optional, but useful, and can be run from your local server.

```
python <path to eigsep_observing>/scripts/live_plotter.py --pairs 1
```

The pairs flag is optional, but without it, it will plot all the outputs, including cross-correlations, which is slow. As the system is currently set up, the data we care about is coming out of "pair" 1.

```
1.3.3. Terminal 3
```

Connect to the box. A calibration cycle script is in progress.

```
ssh eigsep@10.10.10.10 (RPi, requires password) ssh eigsep@10.10.10.11 (LattePanda, requires password)
```

```
1.3.4. Terminal 4
```

Capture spectra - again, a script is in progress, being adapted from our field script. Can also be run from local server. The following command will produce an npz file. Can be run at any point.

1.3.5. Steps

You will want to capture spectra in Terminal 4 from the noise source (switch state RFNON) and the ambient load (switch state RFNOFF).

For S11 measurements, the following procedure can be implemented in a script or in IPython.

```
from PicoHost import PicoRFSwitch
from cmt_vna import VNA
sw = SwitchNetwork(serport="/dev/ttyACM2")
vna = VNA(switch_network=sw)
#for feed, load and noise source S11, power_dBm = 0
freqs = vna.setup(fstart=1e6, fstop=250e6, npoints=1000, ifbw=100, power_dBm=0)
vna.add_OSL() #will switch through OSL standards and add to the data attribute
s11s = measure_ant(measure_noise=True, measure_load=True) #dictionary of s11s
vna.data = vna.data | s11s
vna.write_data(<filename>)
#need to do setup again to get different power level for receiver
freqs = vna.setup(fstart=1e6, fstop=250e6, npoints=1000, ifbw=100, power_dBm=-40)
vna.add_OSL()
s11s = measure_rec() #dictionary of s11s
vna.data = vna.data | s11s
vna.write_data(<filename>)
```