#### 10. The Memory Hierarchy

Assignment Project Exam Help

https://eduassistpro.github.io/

Add WeChat edu\_assist\_pro

#### Need for Memory (Lots of it!)

- The trend: new software requires more memory
- Memory gets cheaper, and software developers always prefer to add extra features to software (that require more memory) than to keep software small just for the old machines. Help
- Some applicatio ory (e.g virtual PCs)
- In either case ha https://eduassistpro.gethuenio/es!

F1	Add WeChat edu_	assist pro
Early mainframe	64 Wor	$0 \times 10^{2}$
High-end PC (1986)	640Kbytes	$6 \times 10^{5}$
High-end PC (1996)	32Mbytes	$3 \times 10^7$
High-end PC (now)	64Gbytes	$6 \times 10^{10}$

# Size vs. Speed

- Larger memory (more bytes) is inherently slower than a smaller one:
  - All else equal, larger physically, so signals must traverse longer wires
  - Addresses are bigger, so multiplexers for address decoding have more gate delays
  - Speed enhancements (e.g. multiple interfaces) affordable only for small memory
- Can identify hierarchy of memory in a typical computer

   Registers (First Lam Help
  - Cache RAM (flip
  - Primary memory <a href="https://eduassistpro.github.io/">https://eduassistpro.github.io/</a>
  - Disk (magnetic surface, spinning disk)
- Static RAM (SRAM) is based on storing
- Dynamic RAM (DRAM) stores bits as isolated islands of charge within device
- DRAM has smaller cells than SRAM but cells are significantly slower
  - DRAM builds bigger but slower memories
  - DRAM almost universally used for primary memory
  - Implementation varies (DDR, DDR2, DDR3) but all based on same basic cell.

#### Cache Memory

- Modern CPUs invariably have a small amount of fast static RAM called a cache memory usually integrated with the CPU itself (same chip).
- The cache is *much faster* but *much smaller* than primary memory.
- When data or an instruction is fetched from primary memory for the first time it is also stored in the cache.
- is also stored in the cache.

  Assignment Project Exam Help

  Very often instructions and data that have been used once are used again soon afterwards.
  - This is called loca https://eduassistpro.github.io/
  - If items are in the cache they can be retrieve rimary memory.
- Hardware accesses the dah Wat Chata edu\_assist mphoy is referenced.
  - If the item is in the cache (a cache hit), primary memory access never takes place (fast)
  - If the item is not in the cache (a cache miss) primary memory is accessed anyway (slower)
- Since cache has limited space, need a way of deciding what to throw out when it becomes full, Various options: e.g. least recently used (LRU) item is eliminated.

#### Unassessed Exercise

• Consider the instruction sequence:

```
lea R15,10[R0]
lea R1,1[R0]
lea R2,0[R0]
load R4,array[R2]

Assignment Project Exam Help
ad
cm https://eduassistpro.github.io/
trap R0,R0,R0
Add WeChat edu_assist_pro
```

- What does this loop do?
- How many memory cycles would this loop involve?
- If a primary memory read or write takes 10ns, how long will this program take to execute with no cache? (You may assume that an instruction takes exactly as long as the time to conduct all its memory cycles).
- If a cache is introduced with an access time of 1ns, how many cache hits are there?
- If the cache read or write time is 1ns, how long will the program take to execute.

## Address Space

- The maximum amount of physical primary memory that can be attached to a computer is its physical address space
- The physical address space size is determined by the number of bits that can be carried on the address bus.
- If the address space is large there may be unpopulated regions of it where there is no physical memory (or I/O interfaces) installed. In modern computers this is often the case.
- The opposite problem https://eduassistpro.github.io/
  and even when fully populated there is n

  1. A successful family of computers was edu\_assist\_manufactured by
  - 1. A successful family of computers was CUU\_assequent description between about 1965—1980. But physical addresses were only 18-bits so physical address space was only 256Kbytes. As larger memory became feasible to build, this entire product line was obsoleted for this reason alone.
  - 2. The original IBM PC (1981) allowed access to physical memory of only 640Kbytes. This became a serious limitation before the end of the 1980s.

#### Hard Disks

- Hard disks are so-called secondary memory and are not directly addressable by the CPU.
  - Instead disks are treated as I/O devices and accessed via a special I/O interface called a disk controller.
- Electromechanical: data written on circular tracks on rotating disk. Track is divided into sectors (usually 512 bytes)
- To access data on a distribution to the hard to the am H correct track. This is calle because of the mechanica
  - because of the mechanica

     Then wait for rotation https://eduassistpro.githu

    (rotational latency). Modern desktop disks spin at up
    - At this point data can be treamed tay day at a much edu\_assist\_pro rate. In a modern disk, rates of > 100MBytes/sec are
- Large modern disk size 6TB (6 x 10<sup>12</sup> bytes), access time <10ms
- 1,000 times bigger than RAM, 1,000,000 times slower on access (perhaps 100 times slower on sustained transfer).
- Solid state disks (SSDs) are faster but lower capacity (<1TB) than mechanical drives.
  - Access times  $\sim 100 \, \mu s$
  - DTR up to 600Mbytes/sec (still much slower than RAM)

Above is a disk platter.

Tracks are the concentric circles, each divided into sectors.

#### Tape Storage

- Tape storage systems are also treated by the computer as I/O devices and are another form of secondary memory.
- Common in large data centres, seldom used in small machines.
- Most common usage is for backup and for archiving of old data.
- In backup usags salgmandints Percojacette Expanne Hearphtervals
  - Can mostly just
  - Every so often d https://eduassistpro.github.io/
  - Sequence of full
- A big tape installation has white that edu\_assistle tapes and a more limited number of tape drives. A robot a ght tape and mounts is ght tape and mounts it when needed
- Access time ~ minutes, capacity may be hundreds of TBs or more.

## The Working Set

- Caching keeps instructions and data likely to be used again in fast memory local to the CPU.
  - The rest of the program and data for a process is normally in primary memory.
  - What if several processes are being run at the same time and the total physical primary memory is not enough to how all the transcore to the box am Helps 2
- Most (though not al time using a small https://eduassistpro.gith@pace available to them.
  - Programs have lot of down of propedu assist\_pro repeatedly on a small group of variables structures. Often as little as 1% of the address space accounts for 99% of the accesses
  - This small portion of memory is the working set
  - The working set does change over time but usually not very quickly

Process 1 Address Space 1 GByte 2 GByte Physical Address Memory

S Address

Space

256 MBytes

#### Virtual Memory

- Idea: keep the working set items in primary (physical) memory for all running processes, keep inactive code and data on disk
  - Transfer code data between memory and disk using I/O whenever necessary
  - While this could be done explicitly by each program it is better if it is automatic.
- In a virtual mension gynamenthe rojects Examolic pata item not in primary memory, pr rganises the transfer.
  - The idea is that thhttps://eduassistpro.githubai@/hit though)
  - With virtual memory, a process can seem even when there is not enough physical medu\_assist\_process.
- When the process tries to access an item (instruction or data) that is not in primary memory this is called a memory fault or a page fault.
- Memory faults must be detected by hardware (usually the memory management unit) and the access in question aborted.
- The OS must now get missing items from disk before letting process resume.

## **Pages**

- In a virtual memory system, a process' address space is called a virtual address space. The actual address space containing the real memory is the physical address space.
- The virtual space of each process is divided into fixed size contiguous chunks called pages (~2Kbytes or 4Kbytes each).
  - Divide each virtual aderess into two fields: most significant page number, least si
- The physical address sphttps://eduassistpro.githu frames each able to hold one page, Some pages for a process need not be in primedu\_assist\_pro
  - when that process is running
  - When page is loaded into memory it is placed in a free frame.
- OS (and MMU) must keep track of which page is in which frame (or where on disk)
  - Maintain page table of mappings to page frames or disk storage.
  - Each process needs a page table of its own.

Virtual address


offset

Page number

MMU maps

page into

#### The Page Table

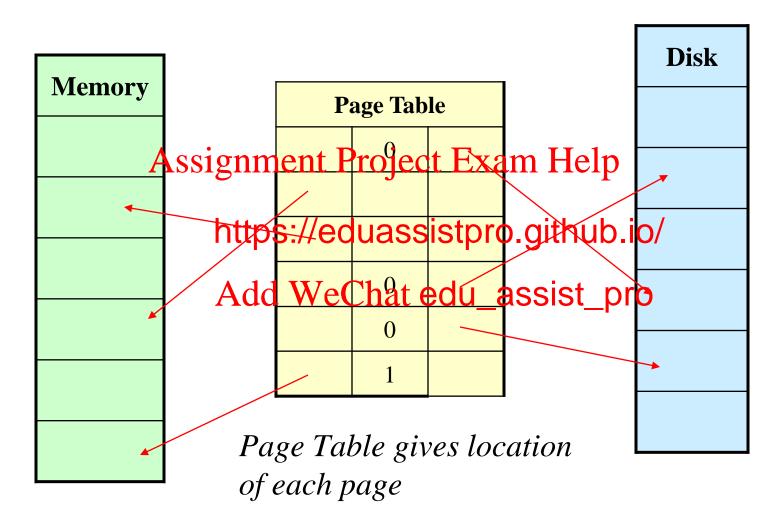

## The Memory Management Unit

- The MMU sits between the CPU and the memory. It examines the page number in every virtual address and consults the page table. There are two possibilities
  - 1. The page is in primary memory. The MMU translates the virtual address to a physical one by replacing its page number with the number of the page frame containing it. This dynamic address translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the MMU hardware and so fast the containing translation is done by the manual containing translation is done by the manual containing translation is done by the containing translation is done by the manual containing t
  - 2. The page is not i from disk before it can be accessed. This is https://eduassistpro.github.io/signal to the CPU which
- On a page fault, M

  aborts the memory cycle and jumps to a

  The handler routine transfers the required edu\_assist\_pro
  - The handler routine transfers the required memory and then allows the process to resume.
  - Very like an interrupt but memory faults occur in the middle of instructions. CPU
     must save all of its state (not just programmer's model) if process is to resume.
- By keeping virtual address spaces separate, MMU protects one process from another
  - However, if desired a page can be shared between two processes.
  - The OS can manipulate and bypass the MMU. It can therefore access anything.

#### Exceptions

- Interrupts and memory faults have much in common. The idea can be generalised as follows.
- An exception is a hardware or software event which causes the CPU to stop executing the current process and jump to an exception handler routine, usually in the OS.
- In addition to interrupts and memory faults other familiar exceptions include system reset and tra
- Every exception ha https://eduassistpro.github.io/ control change to the OS. Traps are used ervices (including I/O). When the handler is finished, the suspen edu\_assist\_pro resume if the CPU
- state has been saved.
  - However, other processes may be allowed to run first
  - Some exceptions (e.g. Reset, some memory faults) do not allow a resume and abort any running process.