

Tutorial on Cadence Genus Synthesis Solution

EE 201A – VLSI Design Automation – Winter 2026 UCLA
Electrical Engineering

Instructor: Prof. Puneet Gupta

TA: Dedeepyo Ray

Based on slides from: Irina Alam/Mark Gottscho/Vishesh Dokani/Shurui Li

Logic Synthesis

- *RTL: Register-Transfer-Level* description of logic design (e.g., $c = a + b$)
 - Allows both *Behavioral* (add two numbers) and *structural* (connect module A to module B) design styles
 - Focus on higher-level functionality, e.g. sequential logic, pipeline stages, maybe even micro-architectural design
 - Verilog/VHDL are industry standard *hardware description languages (HDL)* used for RTL
- *Logic synthesis*: Automatically reduce RTL to *gate-level logic* (e.g., AND, NOT, wires, etc.) with help of a logic library
 - Still represented in Verilog, but lose intuition of higher abstraction. Purely structural design style
 - In fact, you can write your own gate-level logic implementation! Try it ... ;)
 - ... and you will rapidly appreciate the power of logic synthesis!
 - RTL `s1494.v` → gate-level `s1494_synth.v`
- Software analogy: compile C to assembly language

RTL vs. Gate-Level Example in Verilog

- **RTL:**

```
always @ (posedge clock)
if (add1 && add2) r <= r+3;
else if (add2) r <= r+2;
else if (add1) r <= r+1;
```

- **Logic gates:**

```
AOI22_X1 g15017(.A1 (n_212), .A2 (n_249), .B1 (n_237), .B2
(n_210), .ZN (n_322));
NOR2_X1 g15020(.A1 (n_211), .A2 (n_210), .ZN (n_246));
NOR2_X1 g15021(.A1 (n_275), .A2 (n_148), .ZN (n_209));
NOR2_X1 g15023(.A1 (n_258), .A2 (n_117), .ZN (n_208));
INV_X1 g15024(.A (n_207), .ZN (n_289));
```

Nangate* Open Cell Library

*not NANDgate! ☺ www.nangate.com

- Commonly used set of *standard cells* that are treated as primitives in the HDL
 - Needed for logic synthesis as well as physical design
- Includes logic representation
 - AND gate example: $Z_N = (A_1 \And A_2)$;
- Includes physical design information
 - Cell timing
 - Capacitance, Delay, Transition time, etc.
 - Cell power
 - Leakage power, Capacitance, etc.
 - Cell area
- Different libraries for different *design corners*
 - NangateOpenCellLibrary_typical.lib for *typical corner*

Genus

- Industry standard synthesis suite.
- 2019 version of the traditional Cadence Encounter RTL Compiler (RC).
- Logic as well as physical synthesis.
- Genus has a Legacy UI to directly run old commands from RC.
 - Not permitted for Lab 2. You must use updated Genus commands.

Tool Setup & Documentation

- Use same setup files:

```
/w/class.1/ee/ee201a/ee201at2/csh_ee201a_setup
```

- Launch Genus with GUI (if display variable set)

```
$ genus -gui
```

- Launch Genus without GUI using Tcl (Tool Command Language) script of input commands

```
$ genus < synth.tcl
```

- Genus Documentation

```
$ acroread <path>.pdf
```

```
/w/apps3/Cadence/GENUS191/doc/{genus_comref,  
genus_attrref, genus_user_legacy}
```

Example: \$ acroread

```
/w/apps3/Cadence/GENUS191/doc/genus_comref/genus_com  
ref.pdf
```

- Use Legacy User Manual only as a reference methodology guide.

Genus Logic Synthesis (1) - Example

```
set_db information_level 9    # Debug verbosity from 0 to 9
set_db hdl_error_on_blackbox true    # Generate error when cannot map a block (a cell in
    the library is missing)
set_db init_hdl_search_path {./}    # Path to Verilog design files
read_hdl -v2001 verilog_file # Read Verilog design files
set_db init_lib_search_path {./} # Path to .lib (Liberty, not library suffix)
    timing library
set_db library liberty_filename.lib      # Set filename of the Liberty file for our
    Nangate library
elaborate name_of_top_level_module # Initialize design from Verilog file (.v)

# Apply design constraints for logic synthesis
# Define clock with 1000ps period, no external timing slack, clock transition time
    (slew rate) of 100ps
set_clock [define_clock -period 1000 -name ${clkpin} [clock_ports]]
set_input_delay -clock ${clkpin} 0 [vfind /designs/${DESIGN}/ports -port *]
set_output_delay -clock ${clkpin} 0 [vfind /designs/${DESIGN}/ports -port *]
dc::set_clock_transition .1 ${clkpin}

check_design -unresolved  # Check for unresolved refs & empty modules
```

Genus Logic Synthesis (2)

```
# Perform logic synthesis: technology mapping + logic optimization
syn_generic
syn_map
syn_opt

# List possible timing problems
report_timing -lint

# Output some useful results of synthesis
report_timing > output/synth_report_timing.txt
report_gates > output/synth_report_gates.txt
report_power > output/synth_report_power.txt

# Write the synthesized netlist as Verilog HDL
write_hdl > output/s15850_synth.v

# Write design constraints to SDC file
write_sdc > output/s15850.sdc
```

Genus Set Attribute Syntax

- Change of syntax for setting attribute values:

RTL Compiler

set_attribute

Genus

set_db

- Genus: All kinds of object attributes grouped under same command

- Root attributes:

set_db attribute_name value



- Design attributes:

set_db design:\$DESIGN .attribute_name value

- And so on for other object types

Getting Started With Lab 2 (1)

- Cycle time (T) cannot be smaller than longest path delay (T_{max})
- Longest (critical) path delay is a function of:
 - Total gate, wire delays
- **Slack = $T - T_{max}$**

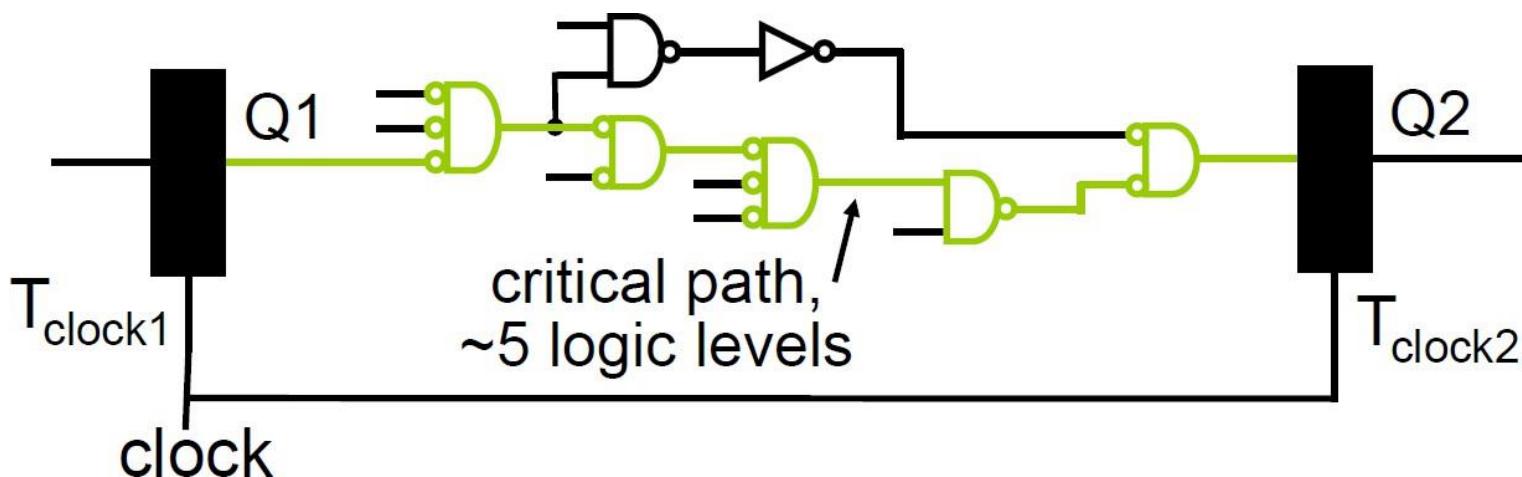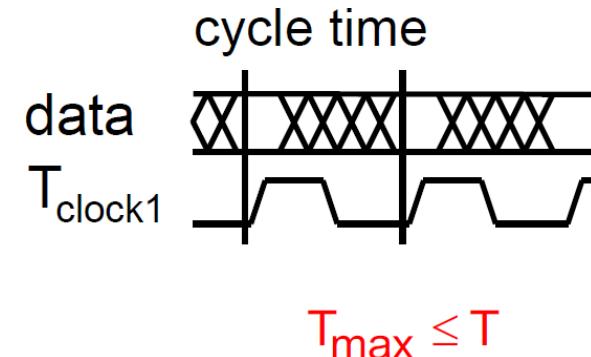

Getting Started With Lab 2 (2)

- Run skeleton script: `$ genus < lab2_skeleton.tcl`

- Change clock period in script

```
set clock [define_clock -period 651 -name clk [clock_ports]]
```

- Check slacks

```
genus:/>report_timing
```

gates	gate	min	avg	max	slack	max_rise
g15025/A1					+19	468
g15025/ZN	NAND2_X1	2	3.6	16	+24	493 F
g15007/A1					+14	507
g15007/ZN	NOR3_X1	1	1.9	28	+38	544 R
g14971/A					+12	556
g14971/ZN	AOI211_X1	1	1.8	20	+19	575 F
g14960/A1					+11	587
g14960/ZN	NAND4_X1	1	1.4	14	+22	608 R
v10_reg/D	DFFR_X1				+9	617
v10_reg/CK	setup			100	+35	652 R
(clock clkname)	capture					651 R
<hr/>						
Timing slack : -1ps (TIMING VIOLATION)						
Start-point : v10_reg/CK						
End-point : v10_reg/D						

- Slack: -1ps (delay of critical path is 652ps)

Getting Started With Lab 2 (3)

- **Check power**

```
genus:/> report_power
```

Instance	Cells	Leakage Power(nW)	Dynamic Power(nW)	Total Power(nW)
<hr/>				
s1494_bench	333	9102.164	368710.751	377812.915

- **Improve your design**

- Read user and command reference manuals
- What Genus commands do you think could improve your delay, area, and/or power?
- Add Genus commands into the “right” positions in script
- Experiment with ordering of commands during synthesis

Lab 2 Goals

- Work with Cadence Genus
 - to understand synthesis flow and familiarize yourself with a useful tool in industry
 - manipulate CAD tool to generate a better design from the same RTL
 - Learn basic Tcl scripting