

# Welcome

Thank you for choosing Freenove products!

## How to Start

When reading this, you should have downloaded the ZIP file for this product.

Unzip it and you will get a folder containing tutorials and related files. Please start with this PDF tutorial.

! Unzip the ZIP file instead of opening the file in the ZIP file directly.

! Do not move, delete or rename files in the folder just unzipped.

## Unpack

Before taking out all the parts, please read the file "Unpack.pdf".

## Get Support

Encounter problems? Don't worry! Refer to "TroubleShooting.pdf" or contact us.

When there are packaging damage, quality problems, questions encountering in use, etc., just send us an email. We will reply to you within one working day and provide a solution.

[support@freenove.com](mailto:support@freenove.com)

## Attention

Pay attention to safety when using and storing this product:

- This product is not suitable for children under 12 years of age because of small parts and sharp parts.
- Minors should use this product under the supervision and guidance of adults.
- This product contains small and sharp parts. Do not swallow, prick and scratch to avoid injury.
- This product contains conductive parts. Do not hold them to touch power supply and other circuits.
- To avoid personal injury, do not touch parts rotating or moving while working.
- The wrong operation may cause overheat. Do not touch and disconnect the power supply immediately.
- Operate in accordance with the requirements of the tutorial. Fail to do so may damage the parts.
- Store this product in a dry and dark environment. Keep away from children.
- Turn off the power of the circuit before leaving.

## About

Freenove provides open source electronic products and services.

Freenove is committed to helping customers learn programming and electronic knowledge, quickly implement product prototypes, realize their creativity and launch innovative products. Our services include:

- Kits for learning programming and electronics
- Kits compatible with Arduino®, Raspberry Pi®, micro:bit®, etc.
- Kits for robots, smart cars, drones, etc.
- Components, modules and tools
- Design and customization

To learn more about us or get our latest information, please visit our website:

<http://www.freenove.com>

## Copyright

All the files provided in the ZIP file are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](#). You can find a copy of the license in the ZIP file.



It means you can use these files on your own derived works, in part or completely. But not for commercial use.

Freenove® brand and logo are trademarks of Freenove Creative Technology Co., Ltd. Must not be used without permission.



Other registered trademarks and their owners appearing in this document:

Arduino® is a trademark of Arduino LLC (<https://www.arduino.cc/>).

Raspberry Pi® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

micro:bit® is a trademark of Micro:bit Educational Foundation (<https://www.microbit.org/>).

# Contents

Welcome .....	i
Contents .....	1
Preface .....	1
Control Board.....	1
Chapter 0 Getting Ready (Important).....	4
Programming Software.....	4
Installation of Development Board Support Package .....	7
First Use .....	8
How to install the library.....	11
Chapter 1 LED Blink .....	13
Project 1.1 Control LED with Control Board .....	13
Chapter 2 LED Blink Smoothly .....	18
Project 2.1 LEDs Emit Different Brightness .....	18
Project 2.2 LED Blinking Smoothly .....	24
Chapter 3 Serial.....	26
Project 3.1 Send Data through Serial .....	26
Project 3.2 Receive Data through Serial Port .....	31
Project 3.3 Application of Serial.....	33
Chapter 4 Timer .....	35
Project 4.1 Serial print using timer .....	35
Project 4.2 Using timer to implement LED blinking .....	39
Chapter 5 RTC .....	41
Project 5.1 RTC.....	41
Chapter 6 Onboard LED Matrix (WiFi Board) .....	44
Project 6.1 LED Matrix .....	44
Project 6.2 LED Matrix .....	50
Chapter 7 WiFi Working Modes (WiFi Board) .....	52
Project 7.1 Station mode .....	52
Project 7.2 AP mode .....	57
Chapter 8 TCP/IP (WiFi Board).....	63
Project 8.1 As Client .....	63
Project 8.2 As Server .....	75
Chapter 9 Control LED with Web (WiFi Board) .....	80
Project 9.1 Control the LED with Web .....	80
Chapter 10 Bluetooth (WiFi Board) .....	88
Project 10.1 Bluetooth Low Energy Data Passthrough.....	88
Project 10.2 Control LED with Bluetooth .....	99
What's Next? .....	106
Appendix .....	107
ASCII Table .....	107
Resistor Color Code .....	108



# Preface

If you want to make some interesting projects or want to learn electronics and programming, this document will greatly help you.

Projects in this document usually contains two parts: the circuit and the code. No experience at all? Don't worry, this document will show you how to start from scratch.

If you encounter any problems, please feel free to send us an email, we will try our best to help you.

Support email: [support@freenove.com](mailto:support@freenove.com)

To complete these projects, you need to use a control board and software to program it, as well as some commonly used components.

## Control Board

The control board is the core of a circuit. After programming, it can be used to control other components in the circuit to achieve intended functions.

There are multiple versions of Freenove control board. Your purchase may be one of the following:


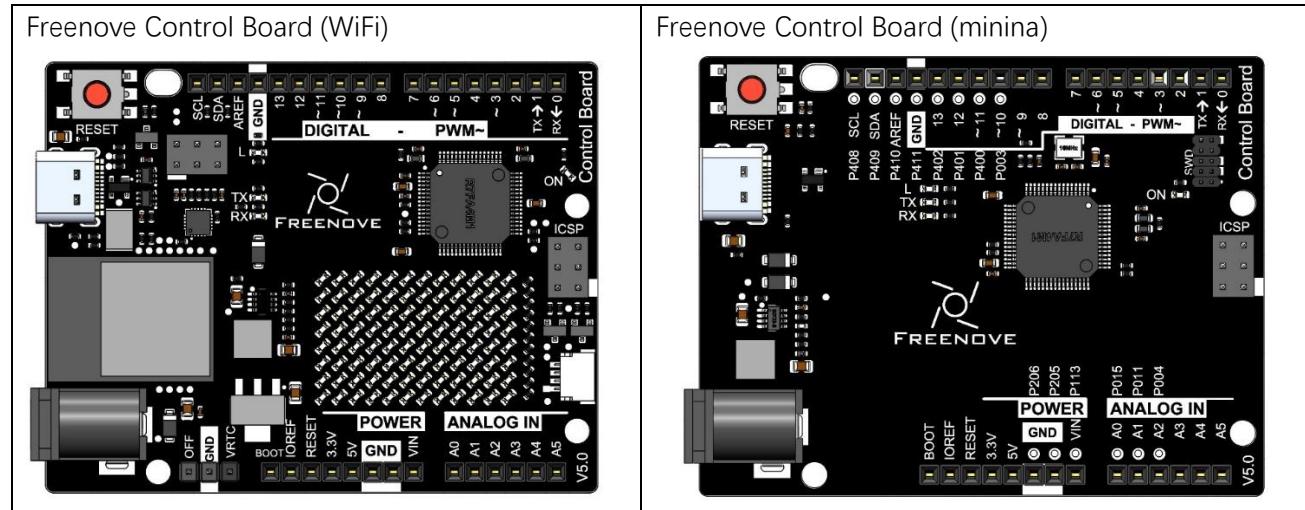


Diagram of the Freenove control board is shown below:

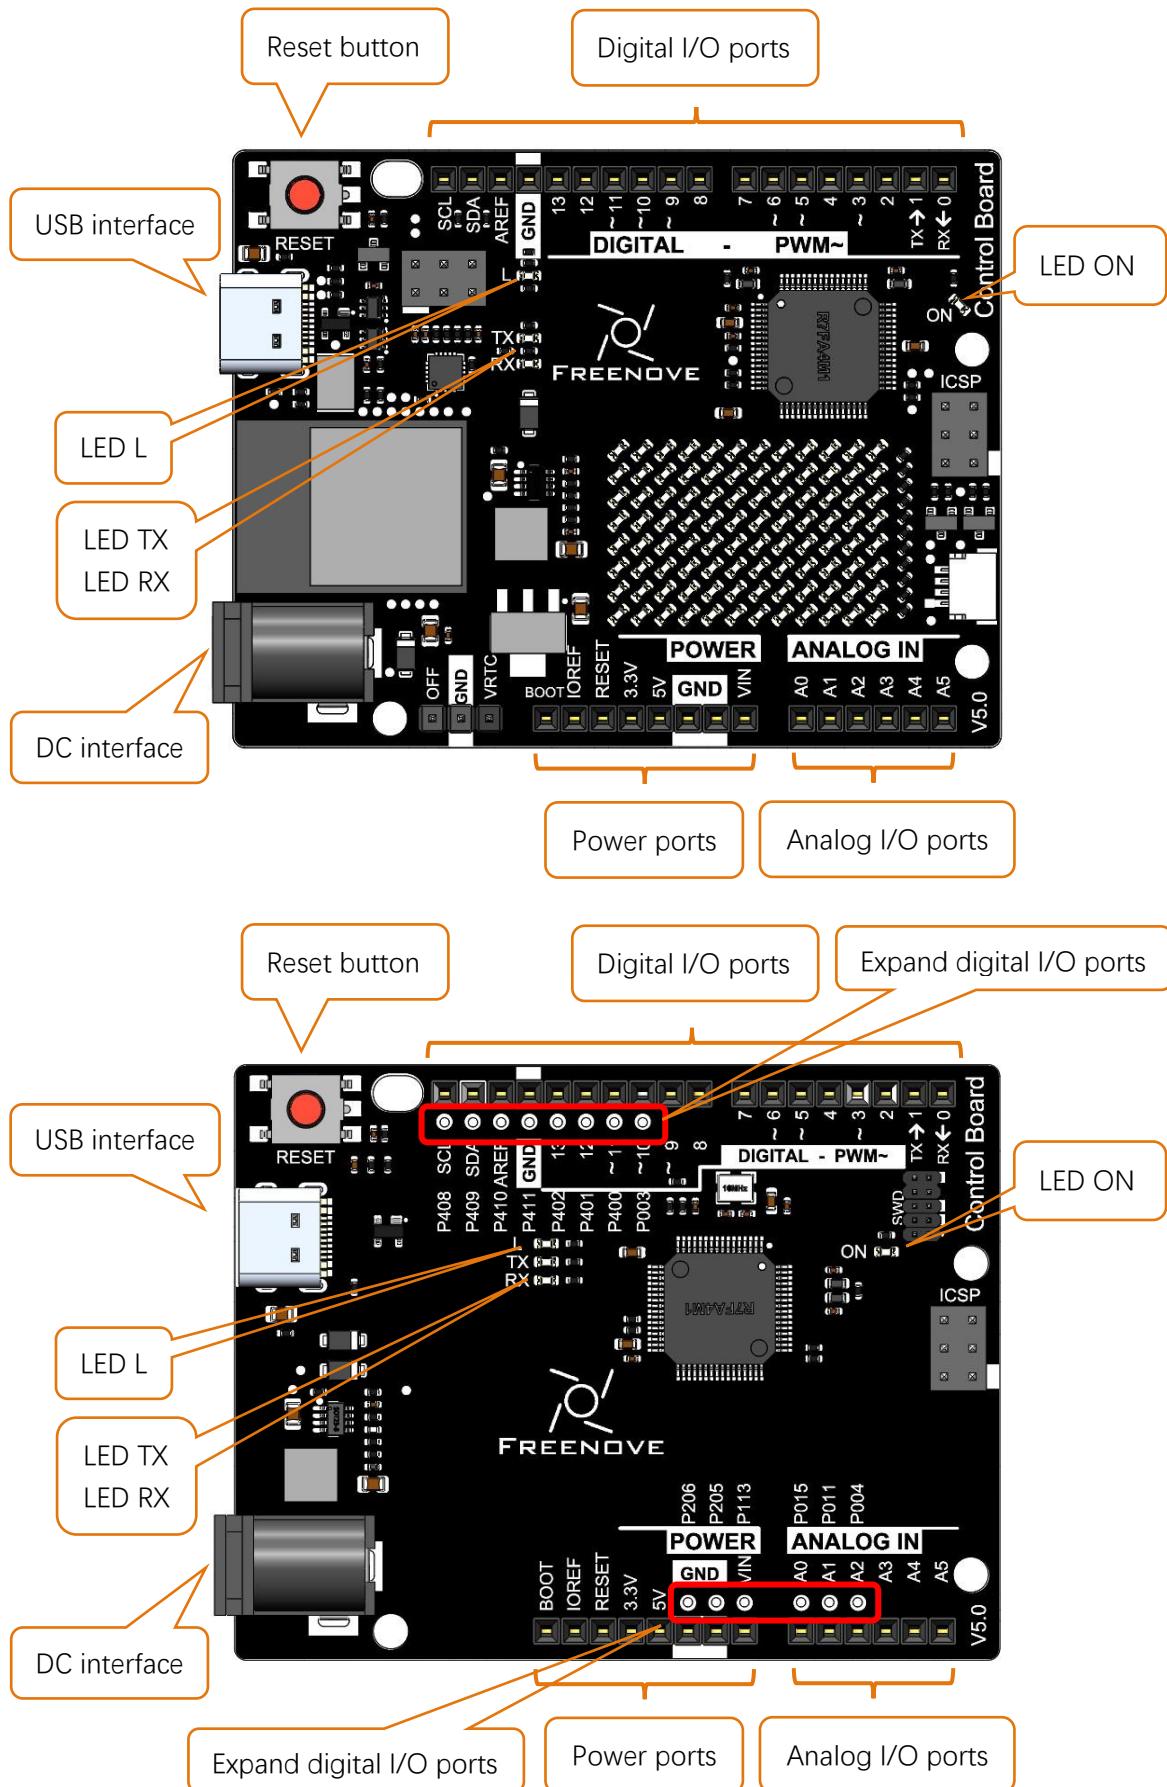

- Digital I/O ports is used to connect to other components or modules, to receive an input signal, or to send a control signal. Usually, we name it by adding a "D" in front of the number, such as D13 (pin 13).
- USB interface is used to provide power, upload code or communicate with PC.
- LED L is connected to digital I/O port 13 (pin 13).
- LED TX, RX is used to indicate the state of the serial communication.
- DC interface is connected DC power to provide power for the board.
- Power ports can provide power for electronic components and modules.
- Analog I/O ports can be used to measure analog signals.
- LED ON is used to indicate the power state.

# Chapter 0 Getting Ready (Important)

Before starting building the projects, you need to make some preparation first, which is so crucial that you must not skip.

## Programming Software

We use Arduino® IDE to write and upload code for the control board, which is a free and open source.  
(Arduino® is a trademark of Arduino LLC.)

Arduino IDE uses C/C++ programming language. Don't worry if you have never used it, because this document contains programming knowledge and detailed explanation of the code.

First, install Arduino IDE. Visit <https://www.arduino.cc/en/software>. Scroll down and find **Arduino IDE (2.3.X)**. Then select and download corresponding installer according to your operating system. If you are a windows user, please select the "Windows Installer".




## Downloads

A screenshot of the Arduino IDE 2.3.2 download page. It shows the Arduino IDE 2.3.2 icon and the title 'Arduino IDE 2.3.2'. Below the title, there's a brief description: 'The new major release of the Arduino IDE is faster and even more powerful! In addition to a more modern editor and a more responsive interface it features autocompletion, code navigation, and even a live debugger.' There's also a link to 'Arduino IDE 2.0 documentation'. Further down, it says 'Nightly builds with the latest bugfixes are available through the section below.' Under 'SOURCE CODE', it states 'The Arduino IDE 2.0 is open source and its source code is hosted on GitHub.' To the right of this content is a 'DOWNLOAD OPTIONS' sidebar with links for Windows (MSI installer and ZIP file), Linux (AppImage and ZIP file), and macOS (Intel and Apple Silicon).

After the downloading completes, run the installer. For Windows users, there may pop up an installation dialog box of driver during the installation process. When it is popped up, please allow the installation. After installation is completed, an shortcut will be generated in the desktop.



Run it. The interface of the software is as follows:

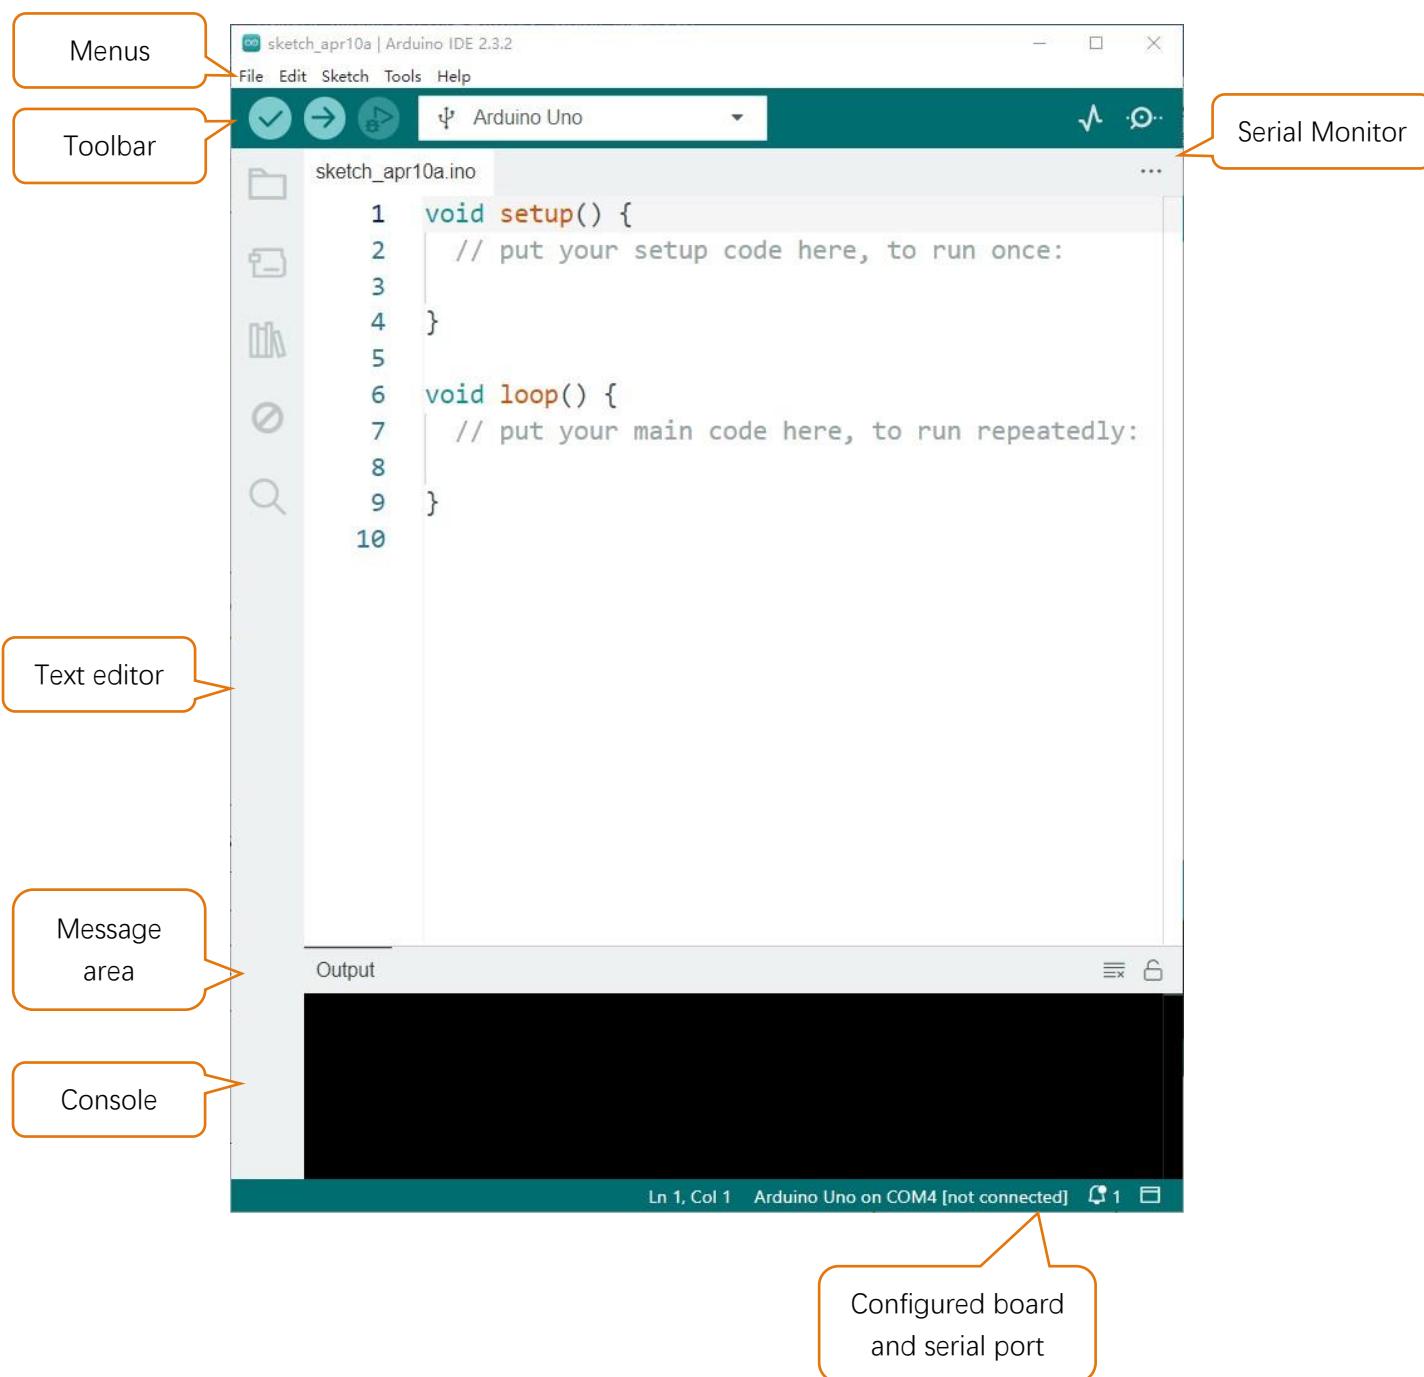


Programs written with Arduino IDE are called **sketches**. These sketches are written in a text editor and are saved with the file extension **.ino**. The editor has features for cutting/pasting and for searching/replacing text. The message area gives feedback while saving and exporting and also displays errors. The console displays text output by the Arduino IDE, including complete error messages and other information. The bottom right-hand corner of the window displays the configured board and serial port. The toolbar buttons allow you to verify and upload programs, create, open, and save sketches, and open the serial monitor.

-  Verify  
Checks your code for errors compiling it.
-  Upload  
Compiles your code and uploads it to the configured board.
-  New  
Creates a new sketch.
-  Open  
Presents a menu of all the sketches in your sketchbook. Clicking one will open it within the current window overwriting its content.
-  Save  
Saves your sketch.
-  Serial Monitor  
Opens the serial monitor.


Additional commands are found within five menus: File, Edit, Sketch, Tools, Help. The menus are context sensitive, which means only those items relevant to the work currently being carried out are available.

In addition, the Arduino 2.X.X version provides a quick search bar for control board management and a quick search bar for libraries, so you can easily install the library files and control board support package you want.

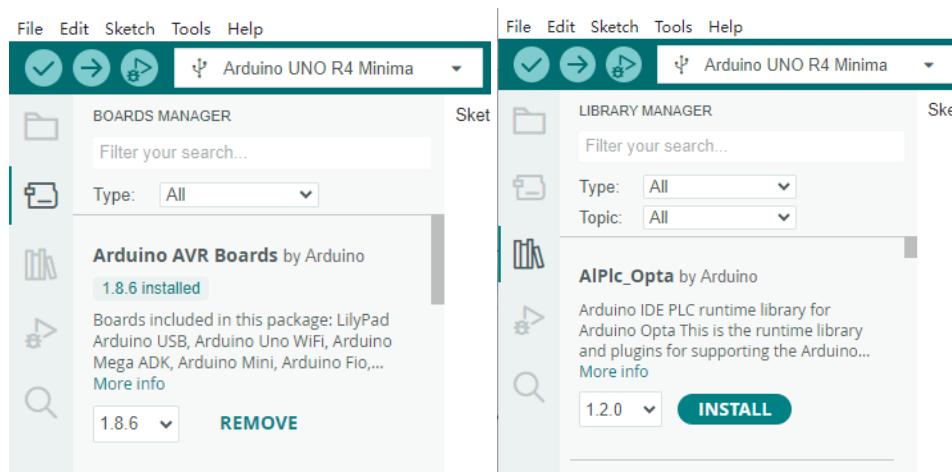


## Installation of Development Board Support Package

1, Open Arduino IDE. Click Tools>Board>Boards Manager...on the menu bar.

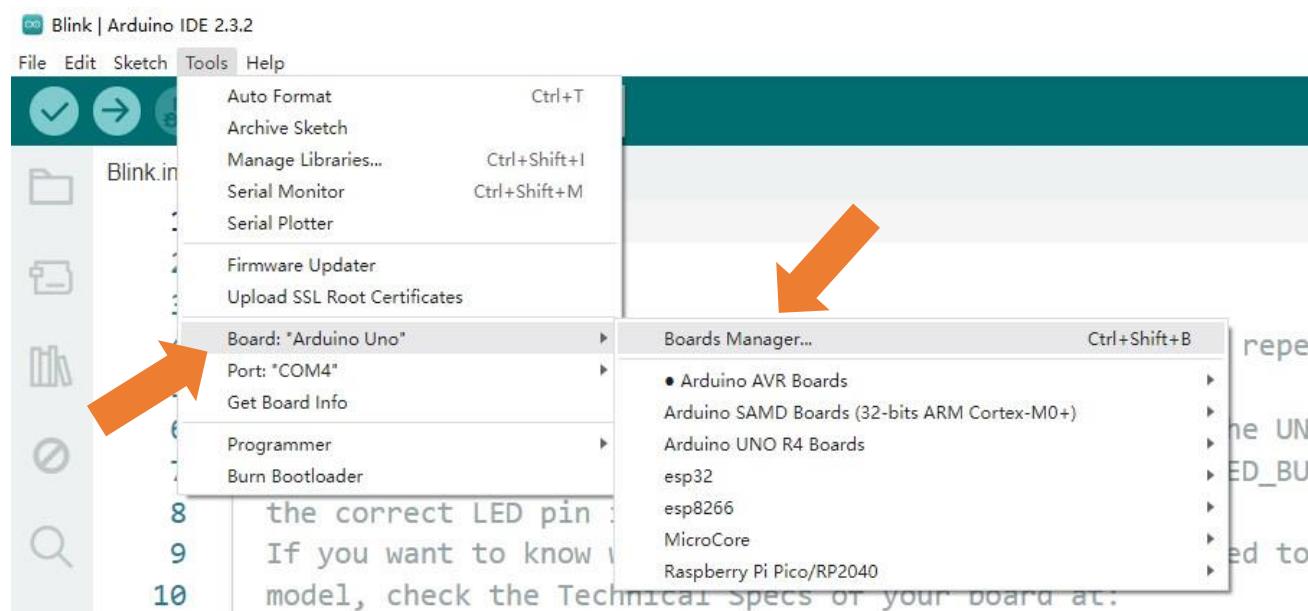


Enter **Arduino UNO R4** in the searching box, and select "**Arduino UNO R4**" and click on Install.

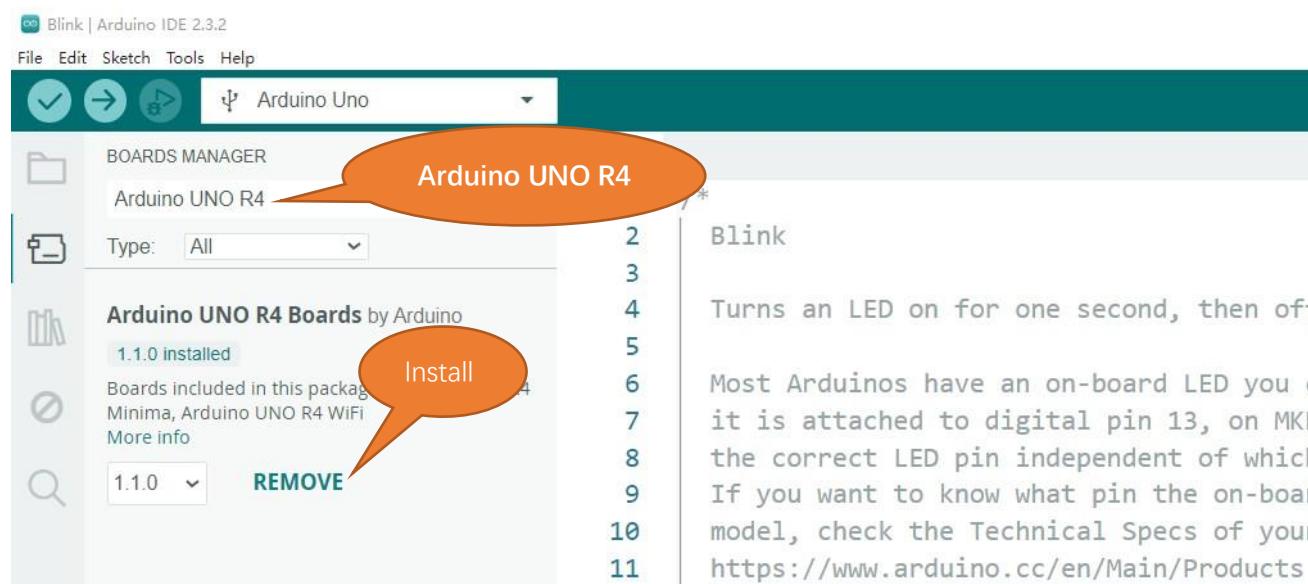

Click Yes in the pop-up "dpinst-amd64.exe" installation window. (Without it, you will fail to communicate with Arduino.) Thus far, we have finished installing the development support package.


## First Use

Open the example sketch "Blink".

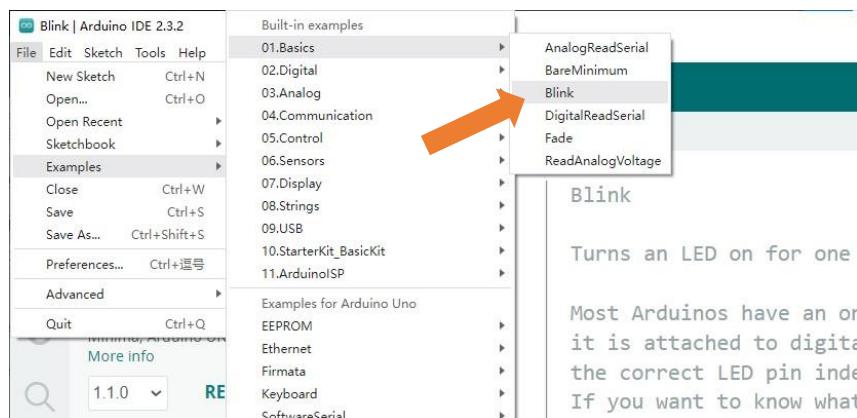


Select the board corresponding to the board you have in hands. Here we take Freenove Control Board (minina) as an example:

Select board "Arduino Uno R4 Minima". (Freenove control board is compatible with this board.)

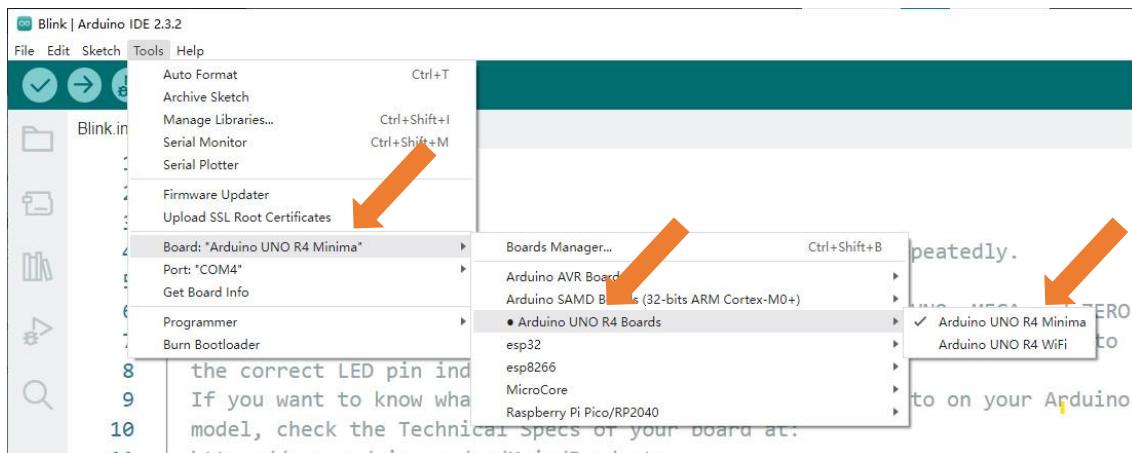

Connect control board to your computer with USB cable.

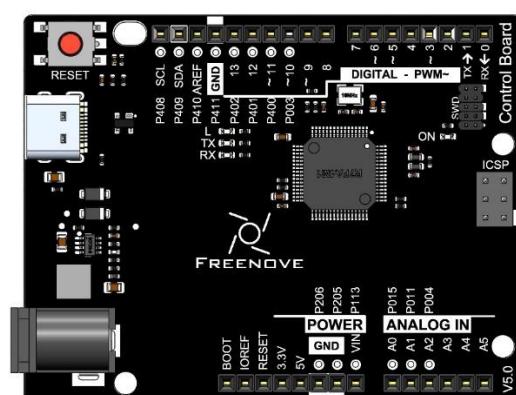


Select the port.

**Note:** Your port may be different from the following figure.

On Windows: It may be COM4, COM5 (Arduino Uno R4 Minima) or something like that.

On Mac: It may be /dev/cu.usbserial-710, /dev/cu.usbmodem7101 (Arduino Uno R4 Minima) or something like that.


On Linux: It may be `/dev/ttyUSB0`, `/dev/ttyACM0` or something like that.

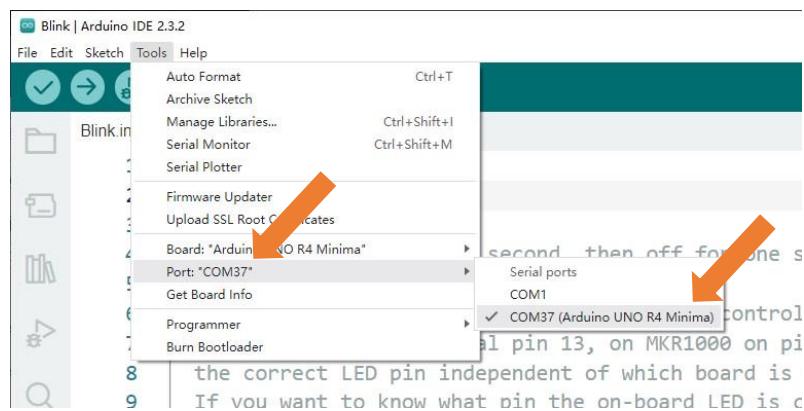


**Note:** If there is more than one port and you cannot decide which one to choose, disconnect the USB cable and check the port. Then connect the USB cable and check the port again. The new one is the correct port.

**Having problems?** Contact us for help! Send mail to: [support@freenove.com](mailto:support@freenove.com)

Click "Verify" button.

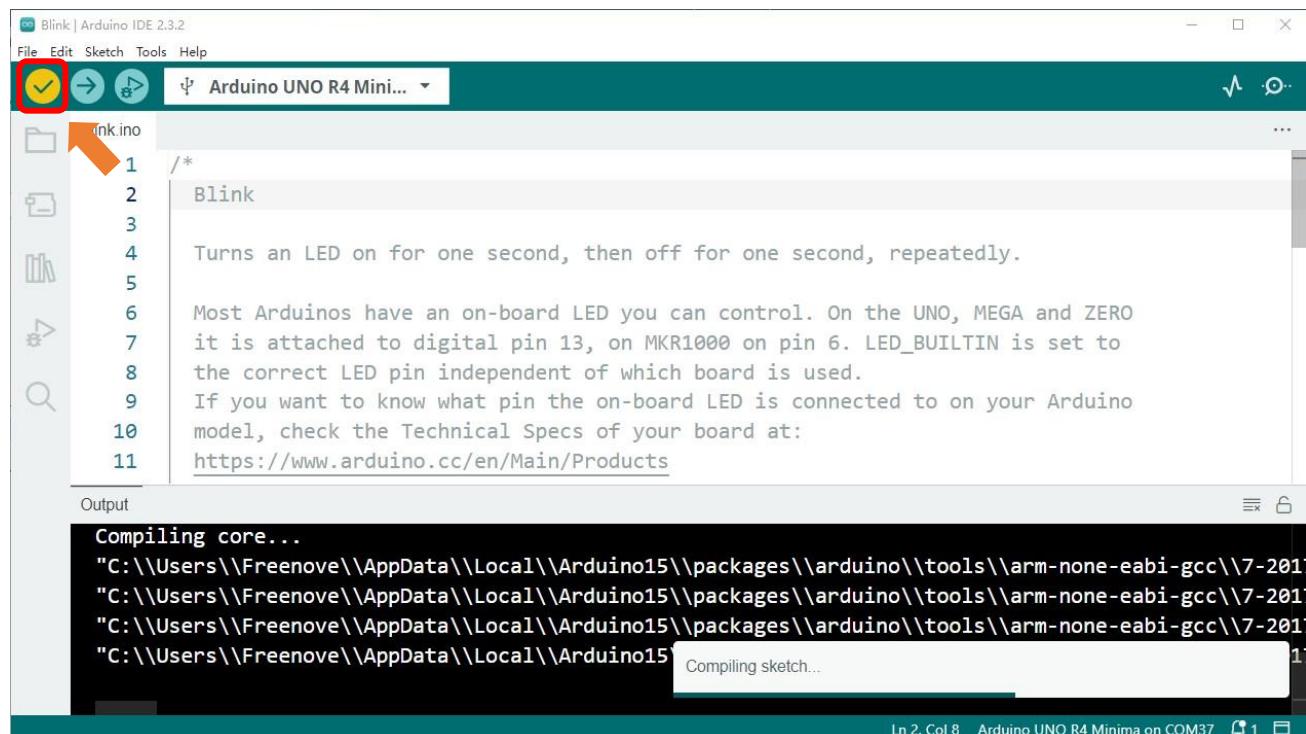


The following figure shows the code being compiled.

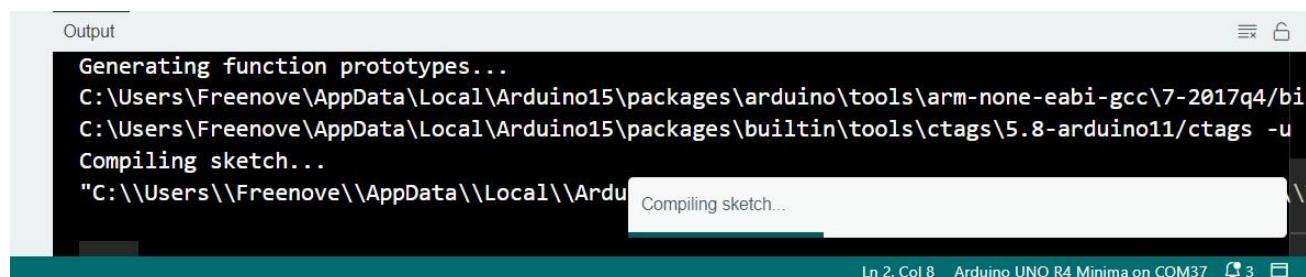

Wait a moment for the compiling to be completed. Figure below shows the code size and percentage of

Need help? Contact [support@freenove.com](mailto:support@freenove.com)

space occupation. If there is an error in the code, the compilation will fail and the details are shown here.

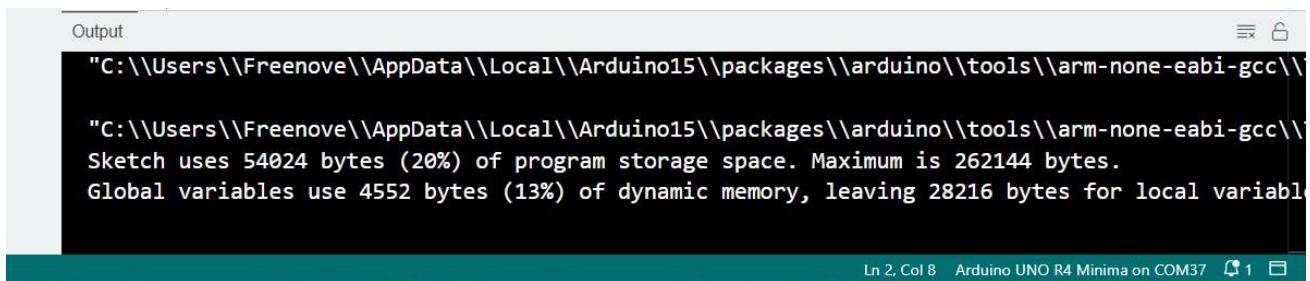

The screenshot shows the Arduino IDE's Output window. It displays the following text:

```
"C:\\\\Users\\\\Freenove\\\\AppData\\\\Local\\\\Arduino15\\\\packages\\\\arduino\\\\tools\\\\arm-none-eabi-gcc\\\\\n\n\"C:\\\\Users\\\\Freenove\\\\AppData\\\\Local\\\\Arduino15\\\\packages\\\\arduino\\\\tools\\\\arm-none-eabi-gcc\\\\\nSketch uses 54024 bytes (20%) of program storage space. Maximum is 262144 bytes.\nGlobal variables use 4552 bytes (13%) of dynamic memory, leaving 28216 bytes for local variabl\n\nLn 2, Col 8  Arduino Uno R4 Minima on COM37  1  1  1
```

Click "Upload" button.


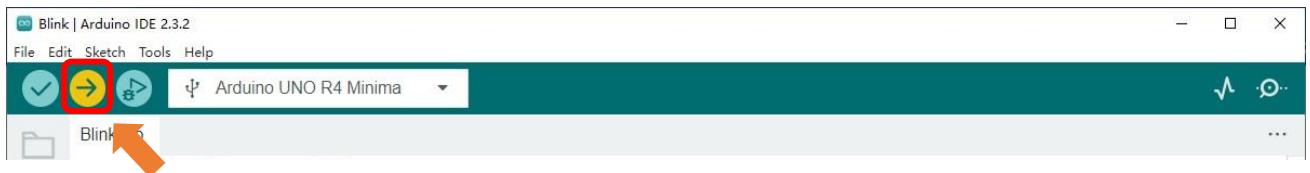


Figure below shows code are uploading.

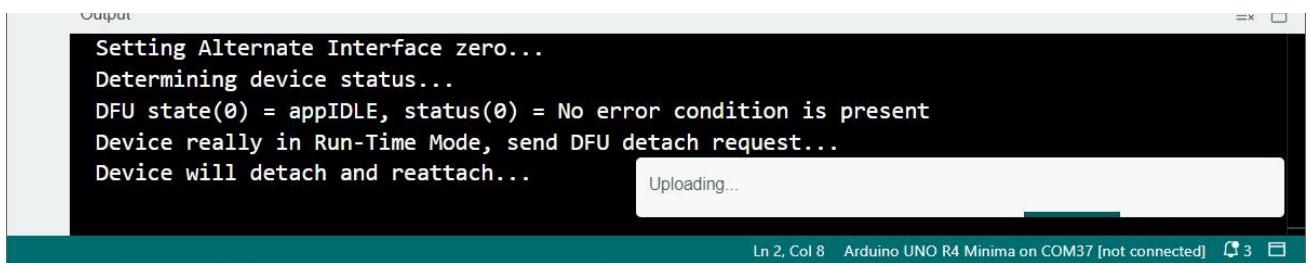


The screenshot shows the Arduino IDE's Output window during the upload process. The text displayed is:

```
Setting Alternate Interface zero...\nDetermining device status...\nDFU state(0) = appIDLE, status(0) = No error condition is present\nDevice really in Run-Time Mode, send DFU detach request...\nDevice will detach and reattach...\nUploading...
```

A progress bar at the bottom of the window indicates the upload is approximately 10% complete.

Wait a moment, and then the uploading is completed.

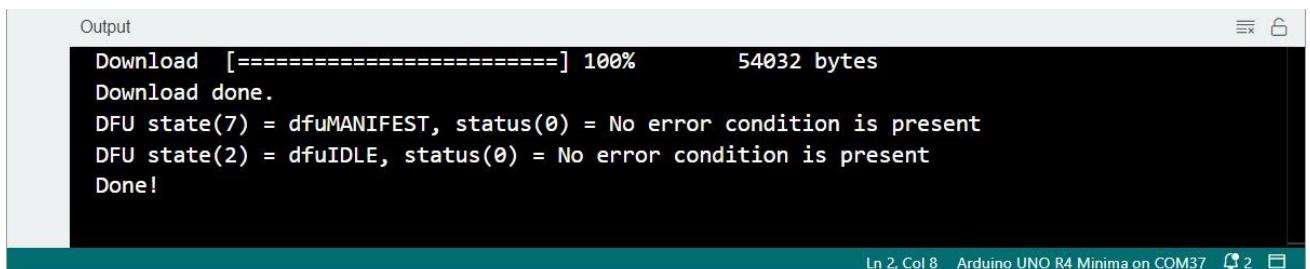


The screenshot shows the Arduino IDE's Output window after the upload is completed. The text displayed is:

```
Download [=====] 100% 54032 bytes\nDownload done.\nDFU state(7) = dfuMANIFEST, status(0) = No error condition is present\nDFU state(2) = dfuIDLE, status(0) = No error condition is present\nDone!
```

**Having problems?** Contact us for help! Send mail to: [support@freenove.com](mailto:support@freenove.com)

After that, we will see the LED marked with "L" on the control board start blinking. It indicates that the code is running now!

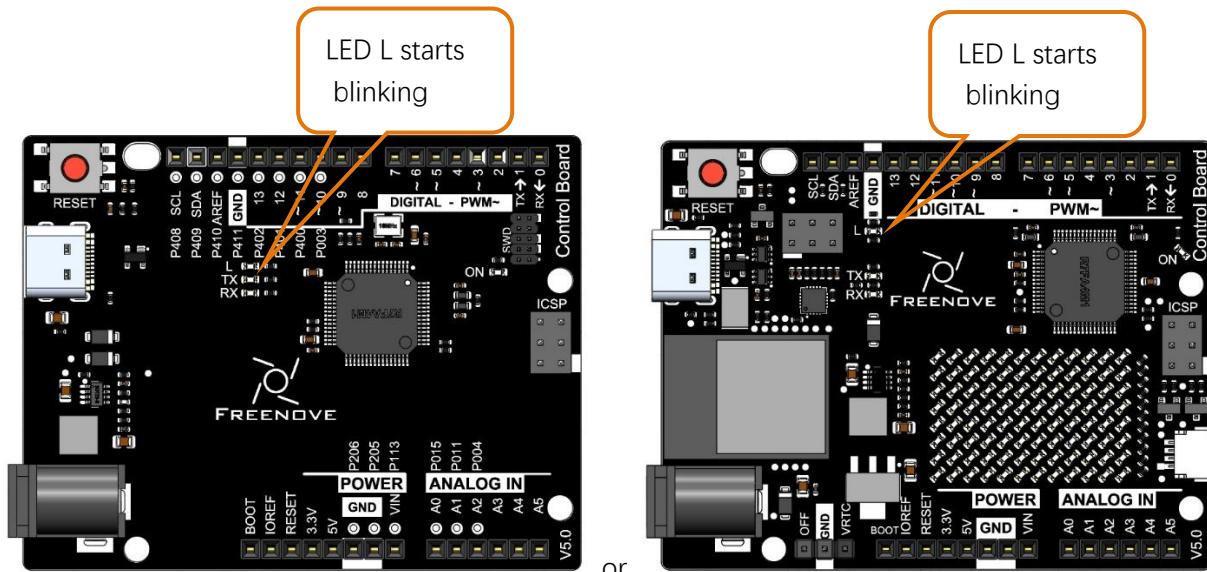


So far, we have completed the first use. I believe you have felt the joy of it. Next, we will carry out a series of projects, from easy to difficult, taking you to learn programming and the building of electronic circuit.


## How to install the library

There are two ways to include libraries on Arduino IDE.


The first way, open the Arduino IDE, click Tools → Manager Libraries.

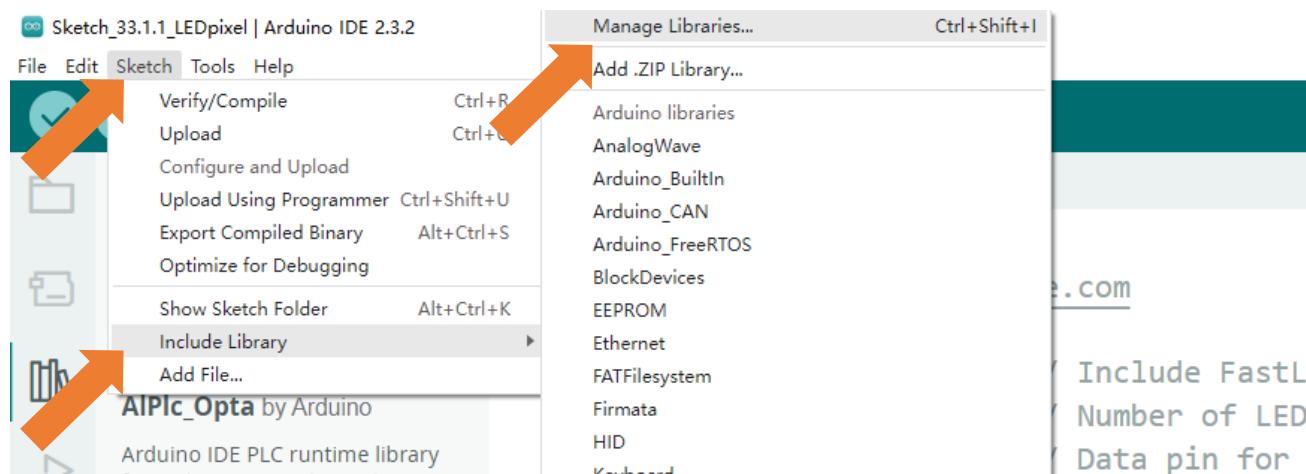


Here we take installing the “FastLED” library as an example. In the pop-up window, Library Manager, search for the name of the Library, “FastLED”. Then click Install.

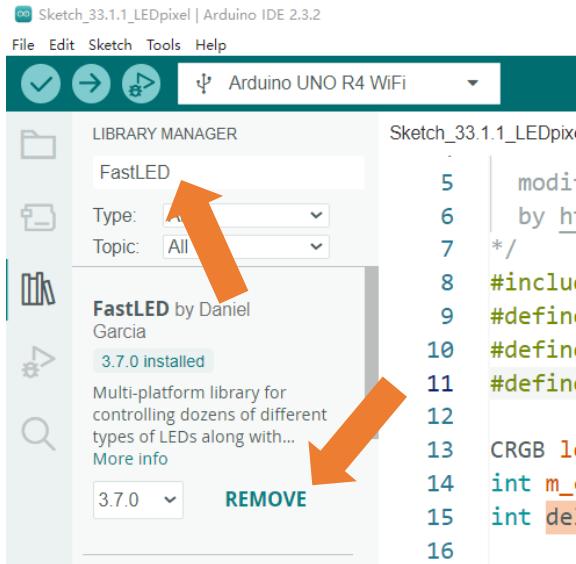

Or, you can click the Library icon on the left of Arduino IDE, and type in "FastLED" on the search bar to install.

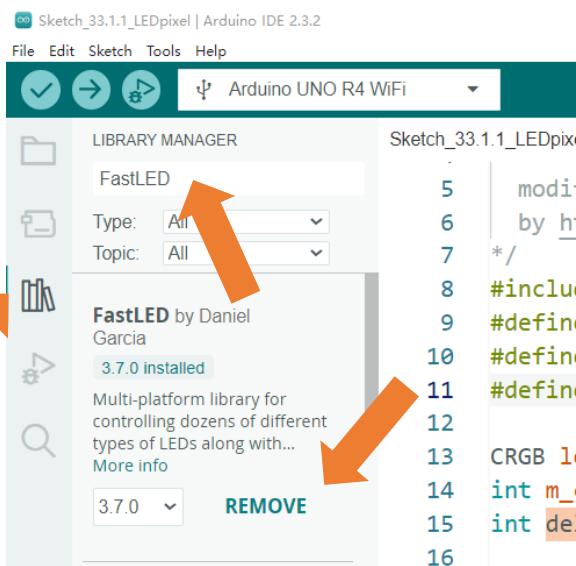

The second way, open Arduino IDE, click Sketch→Include Library→Add .ZIP Library. In the pop-up window, find the file named “./Libraries/FastLED.Zip” which locates in this directory, and click OPEN.

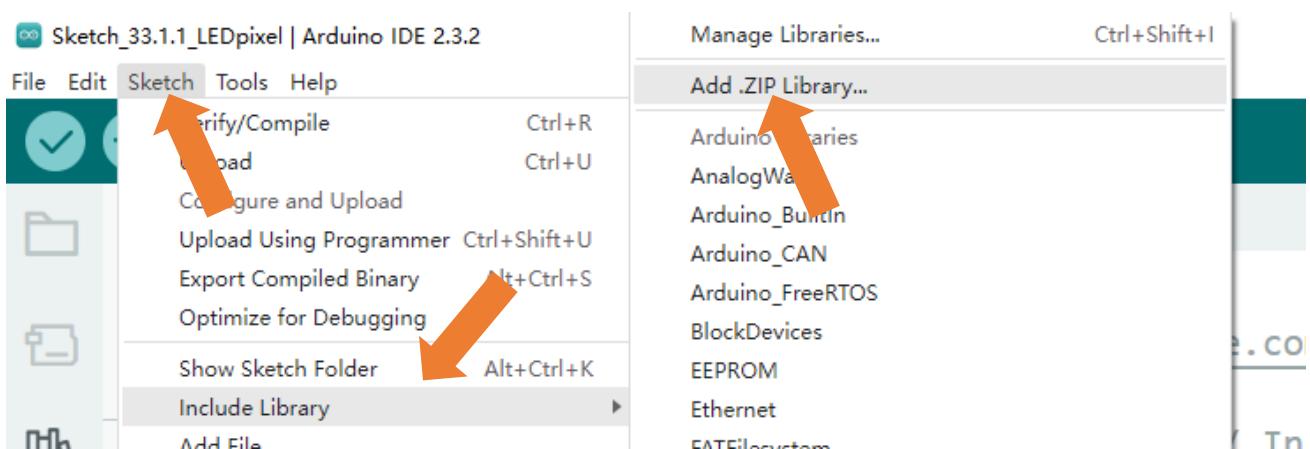

# Chapter 1 LED Blink

We have previously tried to make the LED marked with "L" blink on the control board. Now let us use electronic components and codes to reproduce the phenomenon, and try to understand their principle.

## Project 1.1 Control LED with Control Board

Now, try using control board to make LED blink through programing.

## Component List


Components are basically the same with those in last section. Push button switch is no more needed.

## Circuit Knowledge

### Analog signal and Digital signal

An Analog Signal is a continuous signal in both time and value. On the contrary, a Digital Signal or discrete-time signal is a time series consisting of a sequence of quantities. Most signals in life are analog signals. A familiar example of an Analog Signal would be how the temperature throughout the day is continuously changing and could not suddenly change instantaneously from 0°C to 10°C.

However, Digital Signals can instantaneously change in value. This change is expressed in numbers as 1 and 0 (the basis of binary code). Their differences can more easily be seen when compared when graphed as below.

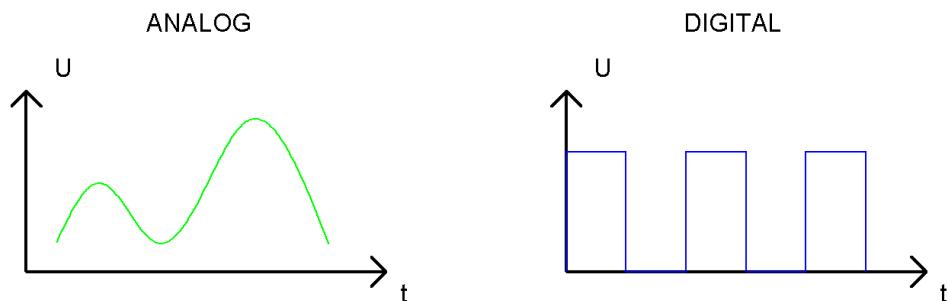


In practical applications, we often use binary as the digital signal, that is a series of 0's and 1's. Since a binary signal only has two values (0 or 1) it has great stability and reliability. Lastly, both analog and digital signals can be converted into the other.

### Low level and high level

In a circuit, the form of binary (0 and 1) is presented as low level and high level.

Low level is generally equal to ground voltage(0V). High level is generally equal to the operating voltage of components.

The low level of the control board is 0V and high level is 5V, as shown below. When IO port on control board outputs high level, components of small power can be directly lit, like LED.

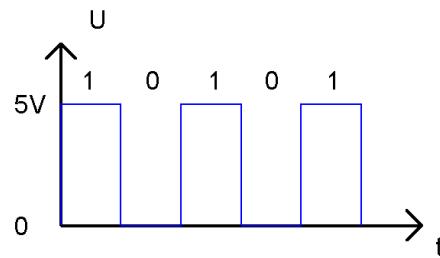

## Code Knowledge

Before start writing code, we should learn about the basic programming knowledge.

### Comments

Comments are the words used to explain for the sketches, and they won't affect the running of code.

There are two ways to use comments of sketches.

#### 1. Symbol "://"

Contents behind "://" comment out the code in a single line.

```
1 // this is a comment area in this line.
```

The content in front of "://" will not be affected.

```
1 delay(1000); // wait for a second
```

#### 2. Symbol "/\*"and "\*/"

Code can also be commented out by the contents starting with a "/\*" and finishing with a "\*/" and you can place it anywhere in your code, on the same line or several lines.

```
1 /* this is comment area. */
```

Or

```
1 /*
2     this is a comment line.
3     this is a comment line.
4 */
```

### Data type

When programming, we often use digital, characters and other data. C language has several basic data types as follows:

**int:** A number that does not have a fractional part, an integer, such as 0, 12, -1;

**float:** A number that has a fractional part, such as 0.1, -1.2;

**char:** It means character, such as 'a', '@', '0';

For more about date types, please visit the website: <https://www.Arduino.cc-Resources-Reference-Data Types>.

### Constant

A constant is a kind of data that cannot be changed, such as int type 0, 1, float type 0.1, -0.1, char type 'a', 'B'.

## Variable

A variable is a kind of data that can be changed. It consists of a name, a value, and a type. Variables need to be defined before using, such as:

```
1 int i;
```

"int" indicates the type, ";" indicates the end of the statement. The statement is usually written in one single line; and these statements form the code.

After declaration of the variable, you can use it. The following is an assignment to a variable:

```
1 i = 0; // after the execution, the value of i is 0
```

"=" is used to pass the value of a variable or constant on the right side to the variable on the left.

A certain number of variables can be declared in one statement, and a variable can be assigned multiple times.

Also, the value of a variable can be passed to other variables. For example:

```
1 int i, j;
2 i = 0; // after the execution, the value of i is 0
3 i = 1; // after the execution, the value of i is 1
4 j = i; // after the execution, the value of j is 1
```

## Function

A function is a collection of statements with a sequence of order, which performs a defined task. Let's define a function void blink() as follows:

```
1 void blink() {
2     digitalWrite(13, HIGH);
3     delay(1000);
4     digitalWrite(13, LOW);
5     delay(1000);
6 }
```


"void" indicates that the function does not return a value (Chapter 2 will detail the return value of functions); "()" its inside is parameters of a function (Chapter 2 will detail the parameters of the functions). No content inside it indicates that this function has no parameters;

"{}" contains the entire code of the function.

After the function is defined, it is necessary to be called before it is executed. Let's call the function void blink(), as shown below.

```
1 blink();
```

When the code is executed to a statement calling the function, the function will be executed. After execution of the function is finished, it will go back to the statement and execute the next statement.

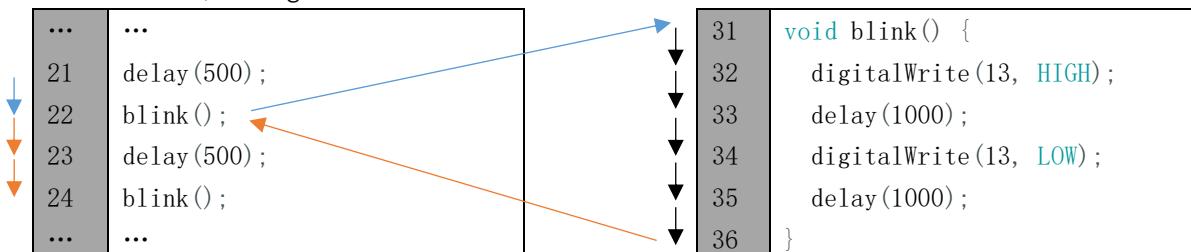

Some functions have one or more parameters. When you call such functions, you need to write parameters inside "()":

```
1 digitalWrite(13, HIGH); // turn the LED on (HIGH is the voltage level)
2 delay(1000); // wait for a second
```

## Sketch

### Sketch 1.1.1

In order to make the LED blink, we need to make pin 13 of the control board output high and low level alternately.

We highly recommend you type the code manually instead of copying and pasting, so that you can develop your coding skills and get more knowledge.

```

1 // the setup function runs once when you press reset or power the board
2 void setup() {
3     // initialize digital pin 13 as an output
4     pinMode(13, OUTPUT);
5 }
6
7 // the loop function runs over and over again forever
8 void loop() {
9     digitalWrite(13, HIGH);    // turn the LED on (HIGH is the voltage level)
10    delay(1000);           // wait for a second
11    digitalWrite(13, LOW);   // turn the LED off by making the voltage LOW
12    delay(1000);           // wait for a second
13 }
```

The code usually contains two basic functions: void setup() and void loop().

After control board is **reset**, the setup() function will be executed first, and then the loop() function will be executed.


setup() function is generally used to write code to initialize the hardware.

And loop() function is used to write code to achieve certain functions.

loop() function is executed repeatedly. When the execution reaches the end of loop(), it will jump to the beginning of loop() to run again.

#### Reset

Reset operation will lead the code to be executed from the beginning. Switching on the power, finishing uploading the code and pressing the reset button will trigger reset operation.

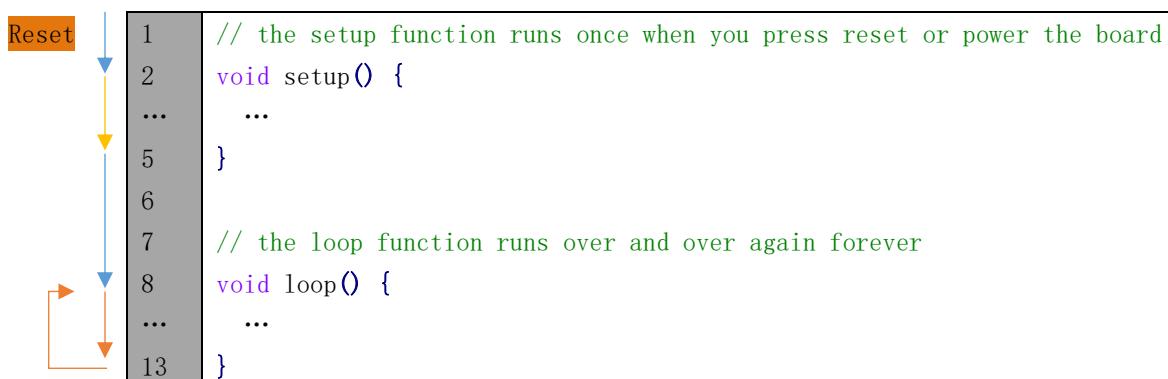

In the setup () function, first, we set pin 13 of the control board as output mode, which can make the port output high level or low level.

```
3 // initialize digital pin 13 as an output
4 pinMode(13, OUTPUT);
```

Then, in the loop () function, set pin 13 of the control board to output high level to make LED light up.

```
9 digitalWrite(13, HIGH); // turn the LED on (HIGH is the voltage level)
```

Wait for 1000ms, which is 1s. delay() function is used to make control board wait for a moment before executing the next statement. The parameter indicates the number of milliseconds to wait for.

```
10 delay(1000); // wait for a second
```


Then set the 13 pint to output low level, and LED light off. One second later, the execution of loop () function will be completed.

```
11 digitalWrite(13, LOW); // turn the LED off by making the voltage LOW
12 delay(1000); // wait for a second
```

The loop() function is constantly being executed, so LED will keep blinking.

The functions called above are standard functions of the Arduino IDE, which have been defined in the Arduino IDE, and they can be called directly. We will introduce more common standard functions in later chapters. For more standard functions and the specific use method, please visit <https://www.arduino.cc-Resources-Reference-Functions>.

Verify and upload the code, then the LED starts blinking.

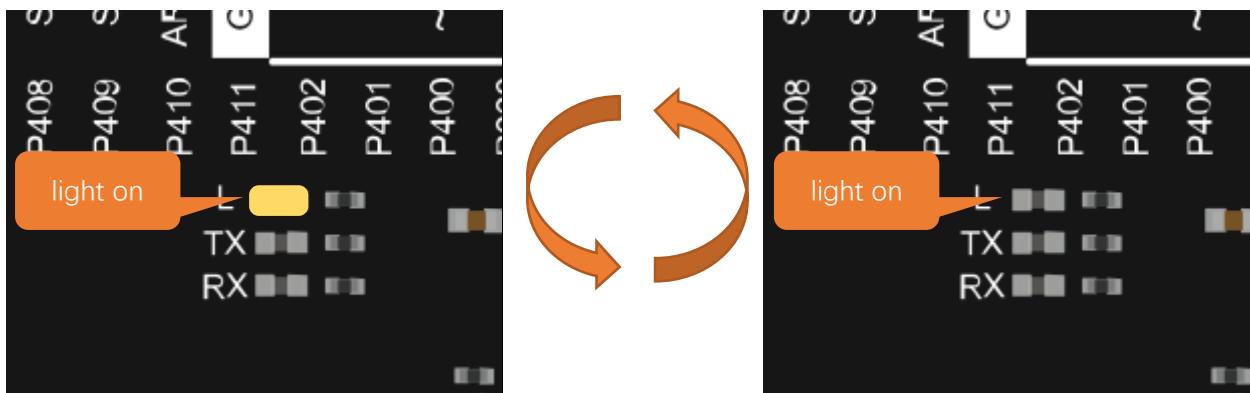

# Chapter 2 LED Blink Smoothly


In the previous chapter, we have used Sketch to control up to 10 LEDs on the control board to blink and learned some basic knowledge of programming. Now, let us try to make LED emit different brightness of light.

## Project 2.1 LEDs Emit Different Brightness

Now, let us use control board to make 4 LED emit different brightness of light.

### Component List

Control board x1

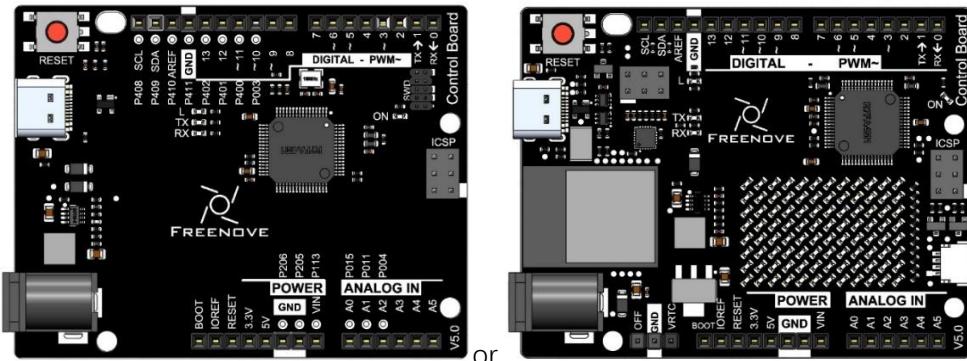

or

USB cable x1



### Circuit Knowledge

At first, let us learn how to use the circuit to make LED emit different brightness of light,


#### PWM

PWM, Pulse-Width Modulation, is a very effective method for using digital signals to control analog circuits. Digital processors cannot directly output analog signals. PWM technology makes it very convenient to achieve this conversion (translation of digital to analog signals).

PWM technology uses digital pins to send certain frequencies of square waves, that is, the output of high levels and low levels, which alternately last for a while. The total time for each set of high levels and low levels

is generally fixed, which is called the period (Note: the reciprocal of the period is frequency). The time of high level outputs are generally called “pulse width”, and the duty cycle is the percentage of the ratio of pulse duration, or pulse width (PW) to the total period (T) of the waveform.

The longer the output of high levels last, the longer the duty cycle and the higher the corresponding voltage in the analog signal will be. The following figures show how the analog signal voltages vary between 0V-5V (high level is 5V) corresponding to the pulse width 0%-100%:

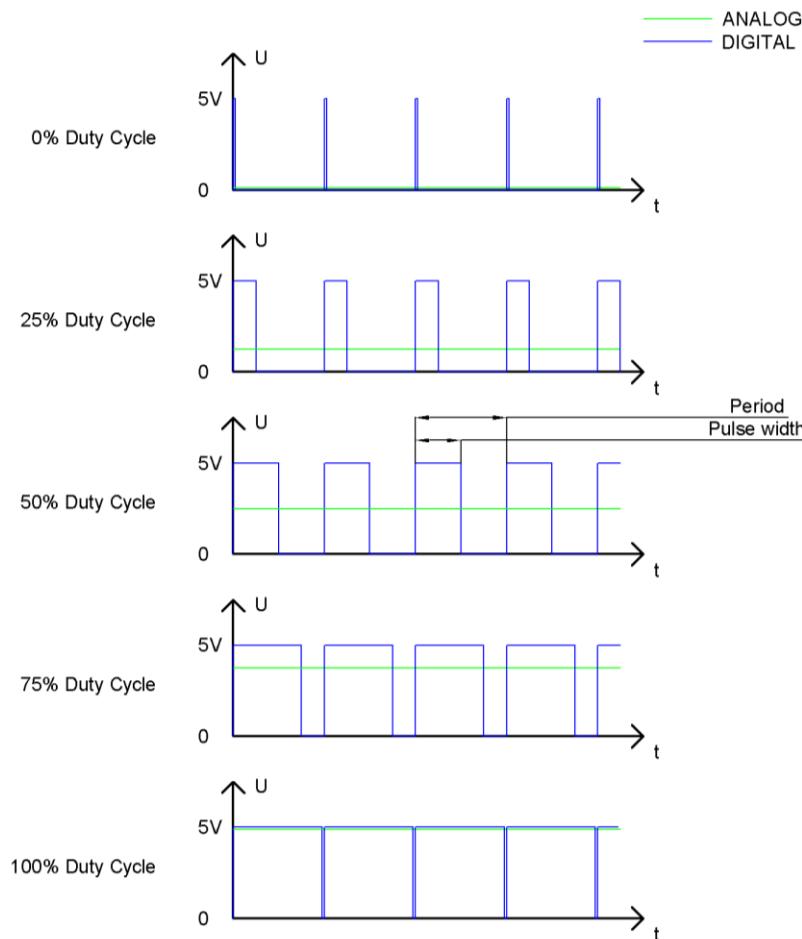

The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of an LED or the speed of DC motor and so on.

## Code Knowledge

We will use new code knowledge in this section.

### Return value of function

We have learned and used the function without return value, now we will learn how to use the function with return value. A function with return value is shown as follow:

```

1 int sum(int i, int j) {
2     int k = i + j;
3     return k;
4 }
```

"int" declares the type of return value of the function sum(int i, int j). If the type of the return value is void, the function does not return a value.

One function can only return one value. It is necessary to use the return statement to return the value of function.

When the return statement is executed, the function will return immediately regardless of code behind the return statement in this function.

A function with return value is called as follows:

```

1 int a = 1, b = 2, c = 0;
2 c = sum(1, 2);           // after the execution the value of c is 3
```

A function with a return value can also be used as a parameter of functions, for example:

```
1 delay(sum(100, 200));
```

It is equivalent to the following code:


```
1 delay(300);
```

### return

We have learned the role of the return statement in a function with a return value. It can also be used in functions without a return value, and there is no data behind the return keyword:


```
1 return;
```

In this case, when the return statement is executed, the function will immediately end its execution rather than return to the end of the function. For example:

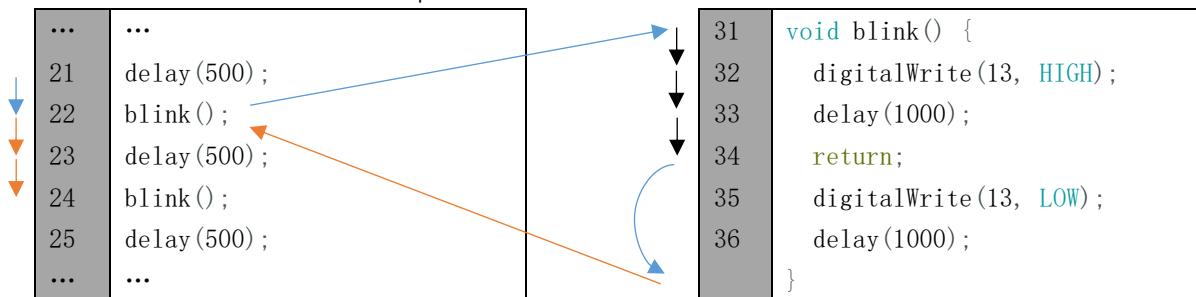

## Schematic

Use pin 13 on the control board to drive LED.

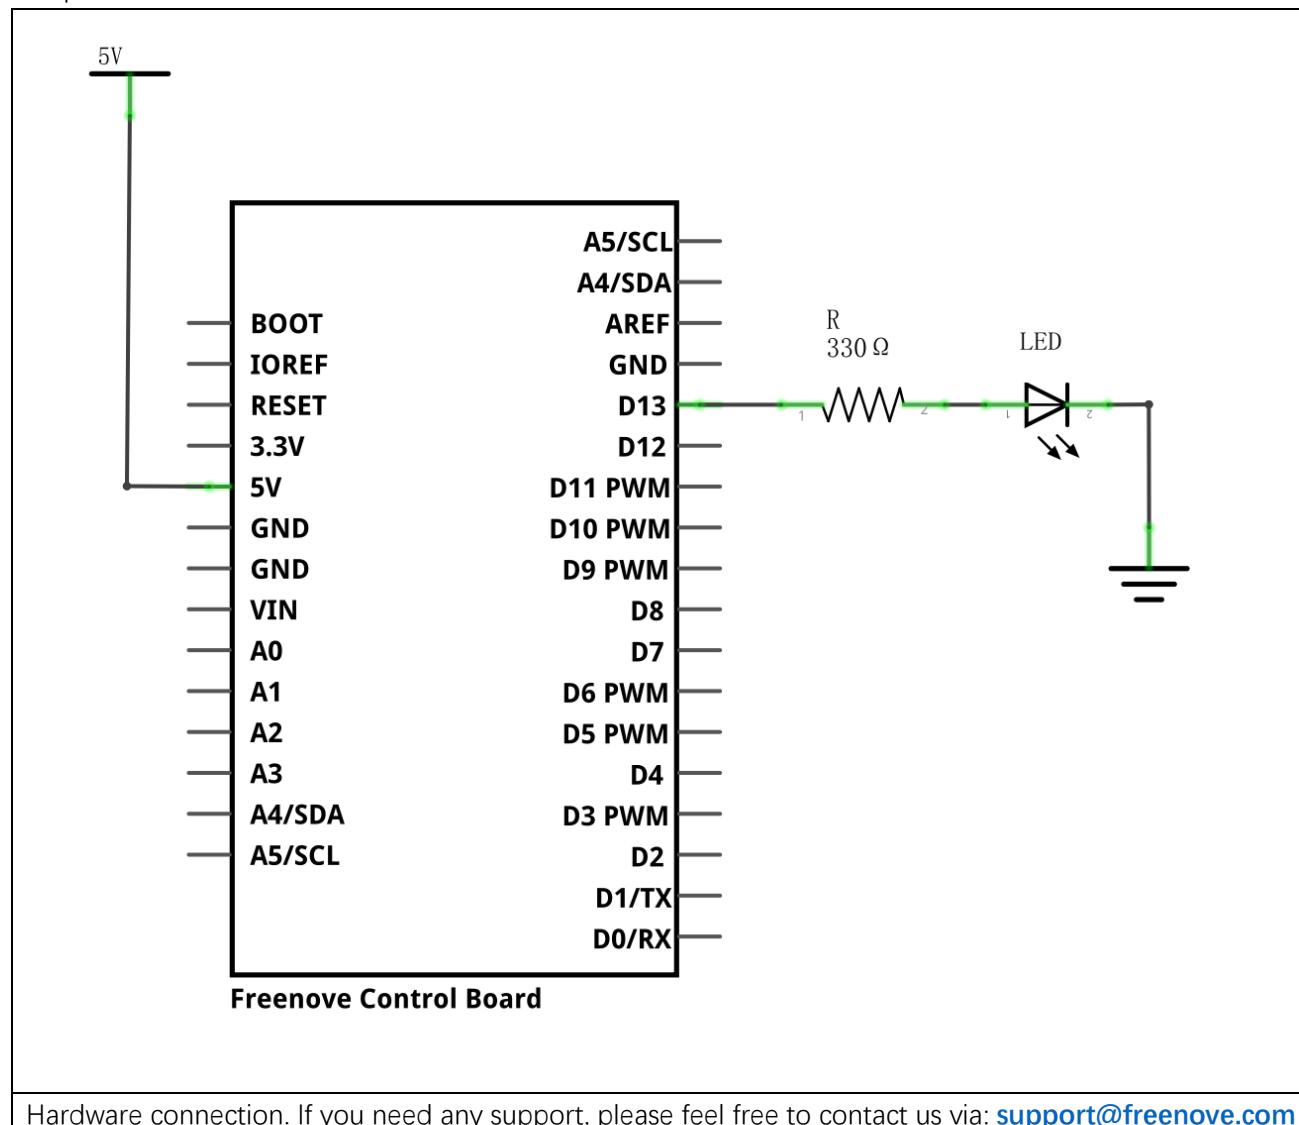

## Sketch

### Sketch 2.1.1

Now let us use sketch to make Board LED emit different brightness of light. We will transmit signal to output the PWM waves with duty cycle of 10%, and 50% to let the LED emit different brightness of the light.

```

1 // set pin numbers:
2 int ledPin = 13;           // the number of the LED pin
3
4 void setup() {
5     // initialize the LED pin as an output:
6     pinMode(ledPin, OUTPUT);
7 }
8
9 void loop()
10 {
11     // set the ports output PWM waves with different duty cycle
12     analogWrite(ledPin, map(10, 0, 100, 0, 255));
13     delay(3000);
14     analogWrite(ledPin, map(50, 0, 100, 0, 255));
15     delay(3000);
16 }
```

We set the ports to output PWM waves with different duty cycle. Firstly map 10% to the range of 0-255, and then output the PWM wave with duty cycle of 10%,

```
1 analogWrite(ledPin, map(10, 0, 100, 0, 255));
```

**analogWrite(pin, value)**


Arduino IDE provides the function, `analogWrite(pin, value)`, which can make ports directly output PWM waves. Only the digital pin marked with "˜" symbol on the control board can use this function to output PWM waves. In the function called `analogWrite(pin, value)`, the parameter "pin" specifies the port used to output PWM wave. The range of value is 0-255, which represents the duty cycle of 0%-100%.

In order to use this function, we need to set the port to output mode.

**map(value, fromLow, fromHigh, toLow, toHigh)**

This function is used to remap a value, which will return a new value whose percentage in the range of toLow-toHigh is equal to the percentage of "value" in the range of fromLow-fromHigh. For example, 1 is the maximum in the range of 0-1 and the maximum value in the scope of 0-2 is 2, that is, the result value of `map (1, 0, 1, 0, 2)` is 2.

Verify and upload the code, and you will see the LED light with different brightness.

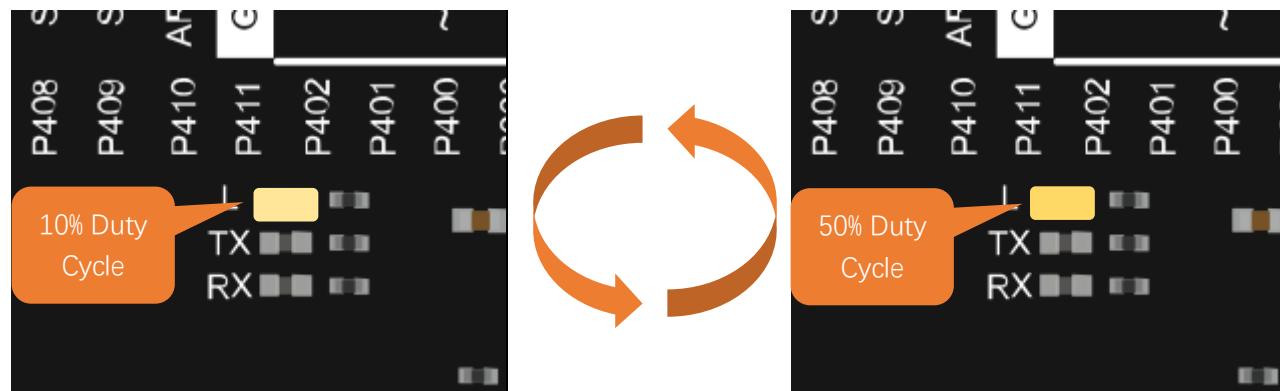

## Project 2.2 LED Blinking Smoothly


We will learn how to make a LED blink smoothly, that is, breathing light.

### Component List

The Component list is the same as those in last section.

### Schematic

Use pin 13 on the control board to drive LED.

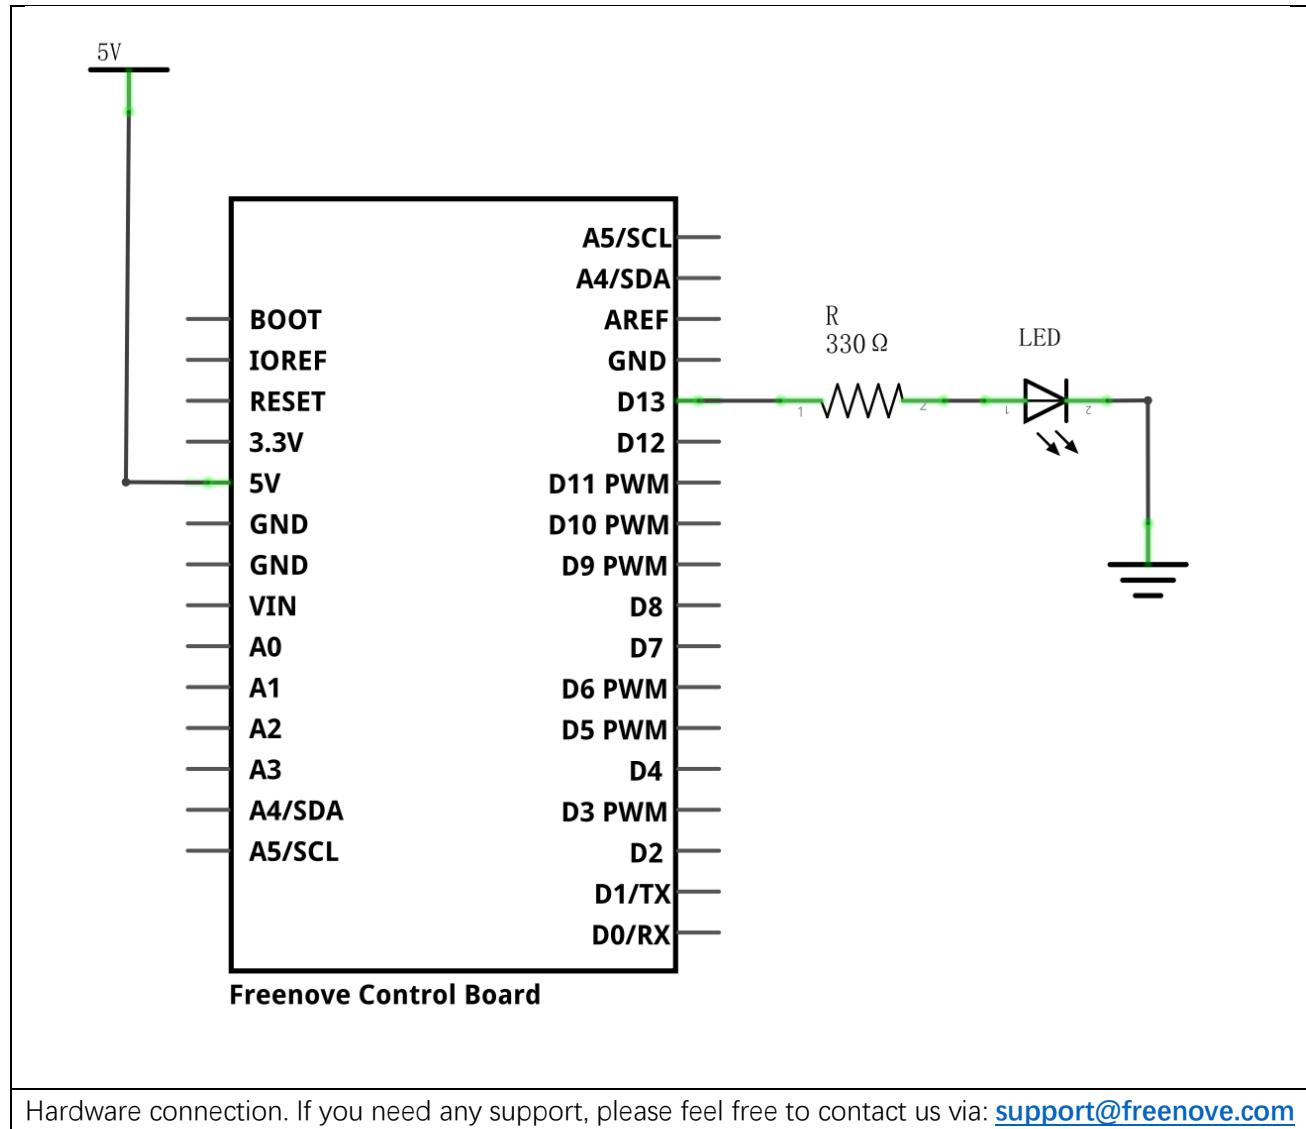

## Sketch

### Sketch 4.4.1


Now complete the sketch to make brightness of LED change from dark to bright, and then from bright to dark. That is to make the duty cycle of the PWM wave change from 0%-100%, and then from 100%-0% cyclically.

```

1 // set pin numbers:
2 int ledPin = 13;           // the number of the LED pin
3
4 void setup() {
5     // initialize the LED pin as an output:
6     pinMode(ledPin, OUTPUT);
7 }
8
9 void loop() {
10    // call breath() cyclically
11    breath(ledPin, 6);
12    delay(500);
13 }
14
15 void breath(int ledPin, int delayMs) {
16     for (int i = 0; i <= 255; i++) { // "i" change from 0 to 255
17         analogWrite(ledPin, i);      // corresponding duty cycle change from 0%-100%
18         delay(delayMs);          // adjust the rate of change of brightness
19     }
20     for (int i = 255; i >= 0; i--) { // "i" change from 255 to 0
21         analogWrite(ledPin, i);      // corresponding duty cycle change from 0%-100%
22         delay(delayMs);          // adjust the rate of change in brightness
23     }
24 }
```

Through two “for” loops, the duty cycle of the PWM wave changes from 0% to 100%, and then from 100% to 0% cyclically. `delay(ms)` function is used to control the change rate in the “for” loop, and you can try to modify the parameters to modify the change rate of brightness.

Verify and upload the code, then you will see that the brightness of the LED changes from dark to light, and from the light to dark cyclically.

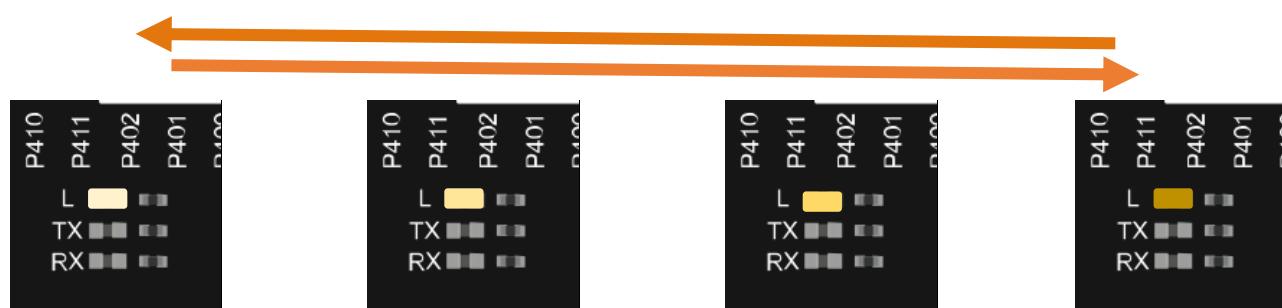

# Chapter 3 Serial


In this chapter, we will get into serial communication, which is a more advanced means of communication.

## Project 3.1 Send Data through Serial

We will use the serial port on control board to send data to computer.

### Component List

Control board x1

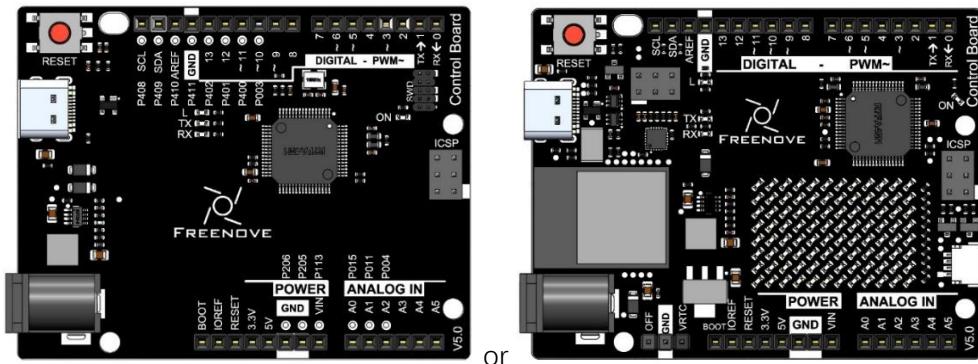

USB cable x1



## Code Knowledge

### Bit and Byte

As mentioned earlier, computers use a binary signal. A binary signal is called 1 bit, and 8 bits organized in order is called 1 byte. Byte is the basic unit of information in computer storage and processing. 1 byte can represent  $2^8=256$  numbers, that is, 0-255. For example:

As to binary number 10010110, "0" usually presents the lowest value in code.

Sequence	7	6	5	4	3	2	1	0
Number	1	0	0	1	0	1	1	0

When a binary number need to be converted to decimal number, first, the nth number of it need be multiplied by n power of 2, then sum all multiplicative results. Take 10010110 as an example:

$$1*2^7+0*2^6+0*2^5+1*2^4+0*2^3+1*2^2+1*2^1+0*2^0=150$$

We can make a decimal number divided by 2 to convert it to binary number. Get the integer quotient for the next iteration and get the remainder for the binary digit. Repeat the steps until the quotient is equal to zero. Arrange all remainders from right to left in a line. Then we complete the conversion. For example:


	Remainder	Sequence
2	150	..... 0
2	75	..... 1
2	37	..... 1
2	18	..... 0
2	9	..... 1
2	4	..... 0
2	2	..... 0
2	1	..... 1
	0	

The result is 10010110.

## Circuit Knowledge


### Serial and parallel communication

Serial communication uses one data cable to transfer data one bit by another in turn, while parallel communication means that the data is transmitted simultaneously on multiple cables. Serial communication takes only a few cables to exchange information between systems, which is especially suitable for computers to computer, long distance communication between computers and peripherals. Parallel communication is faster, but it requires more cables and higher cost, so it is not appropriate for long distance communication.

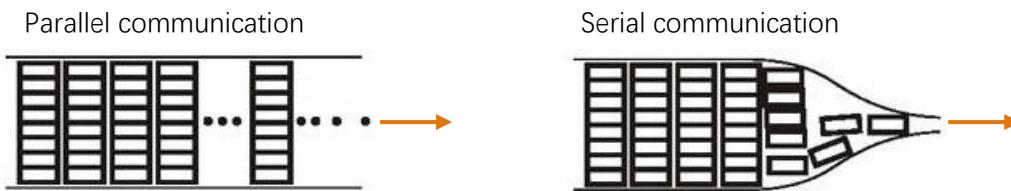

### Serial communication

Serial communication generally refers to the Universal Asynchronous Receiver/Transmitter (UART), which is commonly used in electronic circuit communication. It has two communication lines, one is responsible for sending data (TX line) and the other for receiving data (RX line). The serial communication connections of two devices use is as follows:

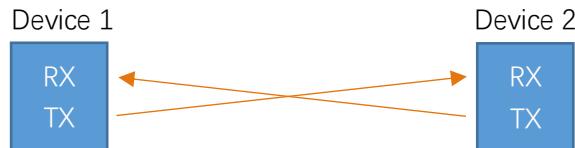


Before serial communication starts, the baud rate in both sides must be the same. Only use the same baud rate can the communication between devices be normal. The baud rates commonly used are 9600 and 115200.


### Serial port on Control board

Control board has integrated USB to serial transfer, so it can communicate with computer when USB cable get connected to it. Arduino IDE also uploads code to control board through the serial connection.

Computer identifies serial devices connected to your computer as COMx. We can use the Serial Monitor window of Arduino IDE to communicate with control board, connect control board to computer through the USB cable, choose the correct device, and then click the Serial Monitor icon to open the Serial Monitor window.

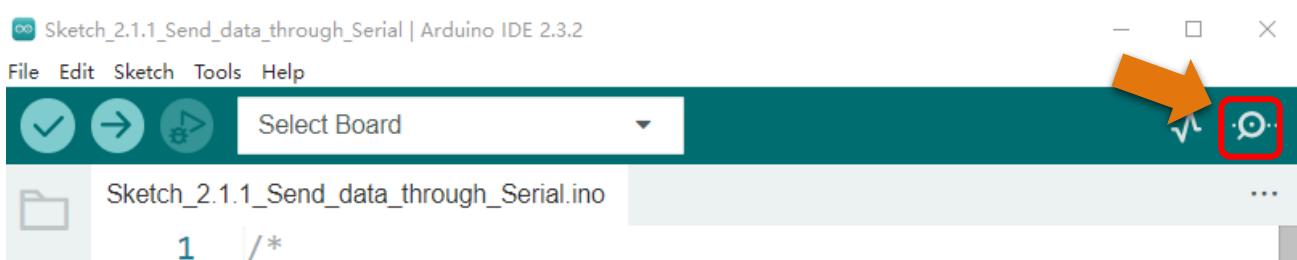


Interface of Serial Monitor window is as follows. If you can't open it, make sure control board had been connected to the computer, and choose the correct serial port in the menu bar "Tools".

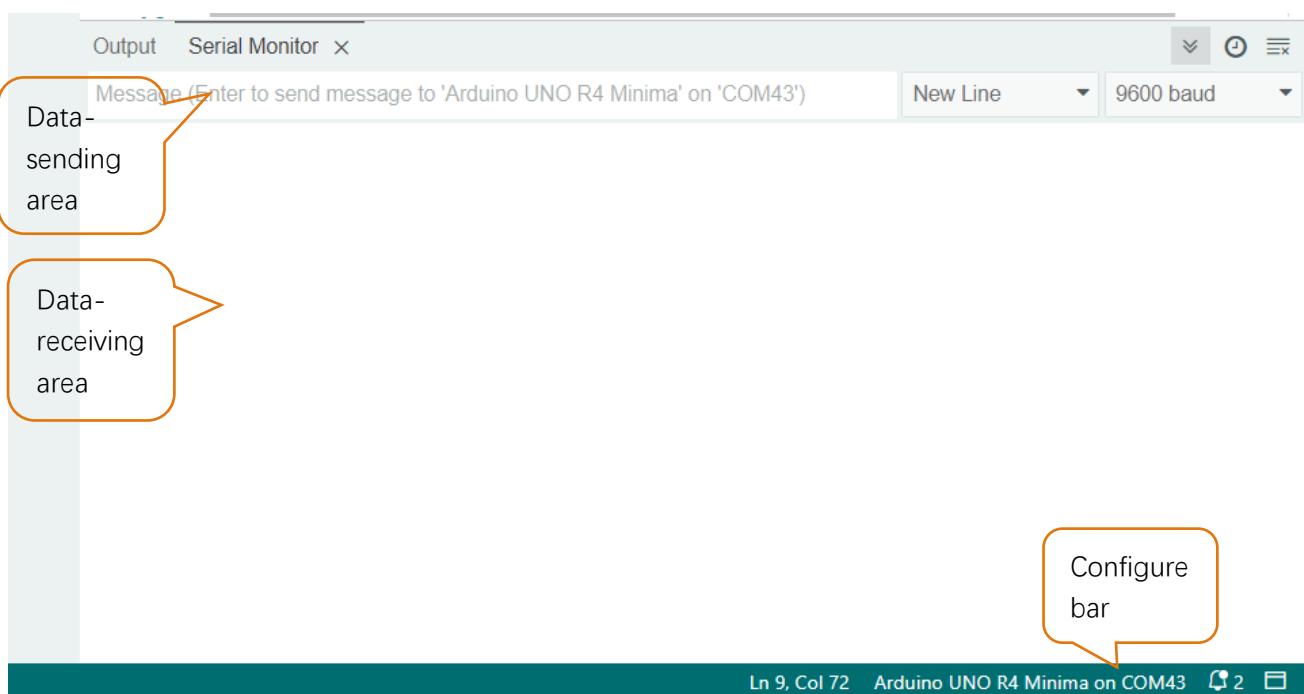

## Circuit

Connect control board to the computer with USB cable.

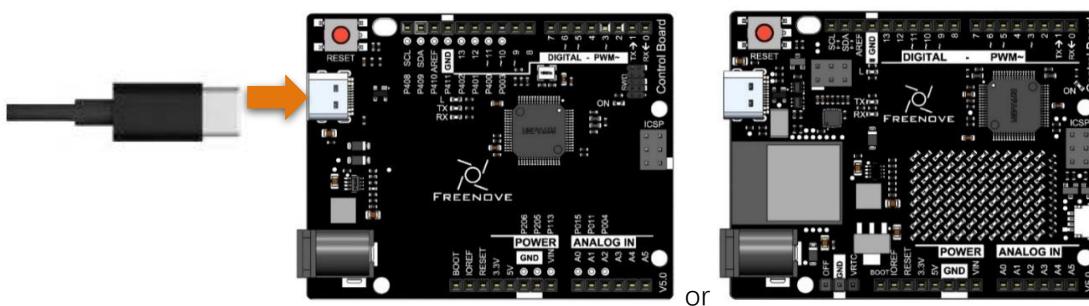

If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

## Sketch

### Sketch 6.1.1

Now, write code to send some texts to the Serial Monitor window

```

1 int counter = 0; // define a variable as a data sending to serial port
2
3 void setup() {
4     Serial.begin(9600);           // initialize the serial port, set the baud rate to 9600
5     Serial.println("UNO is ready!"); // print the string "UNO is ready!"
6 }
```

```

7
8 void loop() {
9   // print variable counter value to serial
10  Serial.print("counter:"); // print the string "counter:"
11  Serial.println(counter); // print the variable counter value
12  delay(500); // wait 500ms to avoid cycling too fast
13  counter++; // variable counter increases 1
14 }
```

setup() function initializes the serial port.

And then continuously sends variable counter values in the loop () function.

### Serial class

Class is a C++ language concept. Arduino IDE supports C++ language, which is a language extension. We don't explain specifically the concept here, but only describe how to use it. If you are interested in it, you can learn by yourself. Serial is a class name, which contains variables and functions. You can use the "." operational character to visit class variables and functions, such as:

Serial.begin(speed): Initialize serial port, the parameter is the serial port baud rate;


Serial.print(val): Send string, the parameter here is what you want to send;

Serial.println(val): Send newline behind string.

Verify and upload the code, open the Serial Monitor, and then you'll see data sent from control board.

If it is not displayed correctly, check whether the configuration of the Serial Monitor in the lower right corner of the window is correct.

Please note: You need to select "**No Line Ending**"

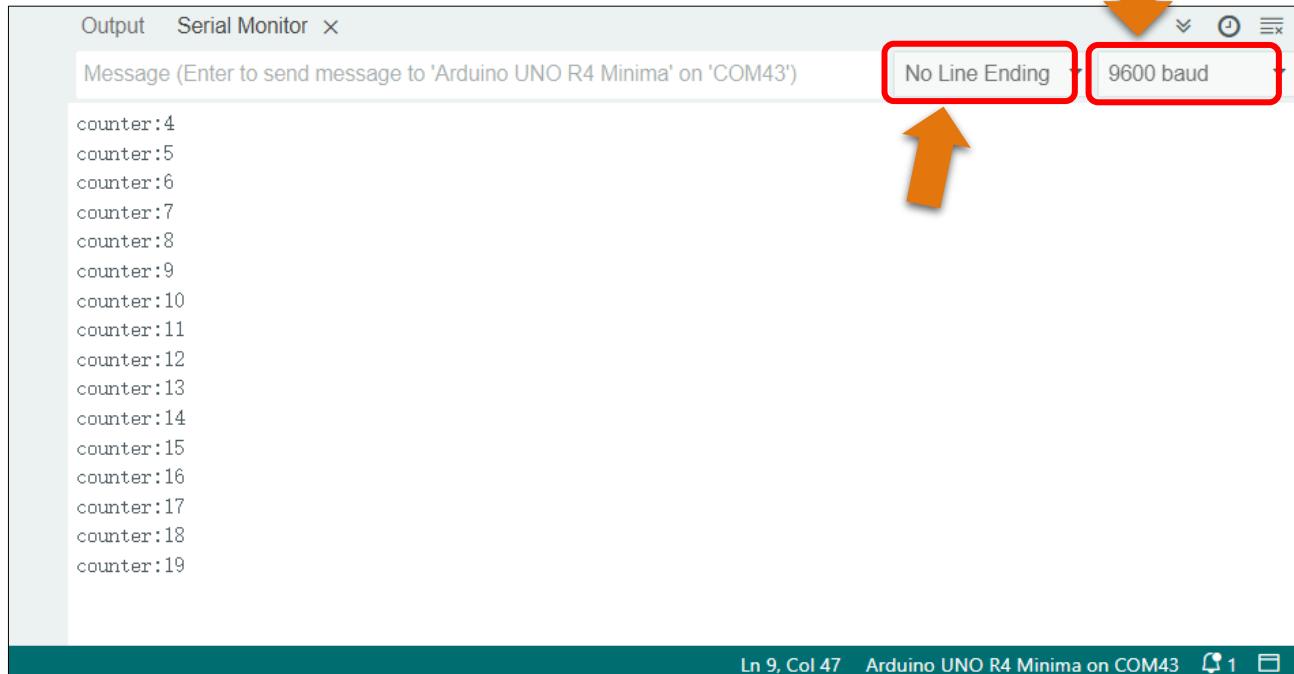

## Project 3.2 Receive Data through Serial Port

In the previous section, we used Serial port on control board to send data to a computer, now we will use it to receive data from computer.

### Component List


Same with the previous section.

### Code Knowledge

#### Interrupt

An interrupt is a controller's response to an event. The event causing an interrupt is an interrupt source. We'll illustrate the interruption concept. For example, suppose you're watching TV while there is water in your kitchen heating, then you have to check whether the water is boiling or not from time to time, so you can't concentrate on watching TV. But if you have an interrupt, things will be different. Interrupt can work as a warning device for your kettle, which will beep when the water is about to boil. So before the water is boiling, you can focus on watching TV until a beep warning comes out.

Advantages of interrupt here: Processor won't need to check whether the event has happened every now and then, but when an event occurs, it informs the controller immediately. When an interrupt occurs, the processor will jump to the interrupt function to handle interrupt events, then return to where the interrupt occurs after finishing it and go on this program.

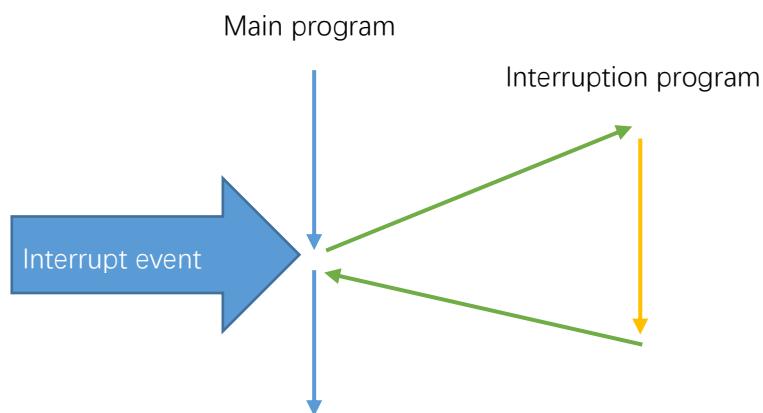

### Circuit

Same with the previous section.

## Sketch

### Sketch 6.2.1

Now, write code to receive the characters from Serial Monitor window, and send it back.

```

1  char inChar;      // define a variable to store characters received from serial port
2
3  void setup() {
4      Serial.begin(9600);          // initialize serial port, set baud rate to 9600
5  }
6
7  void loop() {
8      if (Serial.available()) {    // judge whether data has been received
9          inChar = Serial.read(); // read one character
10         Serial.print("received:");
11         Serial.println(inChar); // print the received character
12     }
13 }
```

In the setup() function, we initialize the serial port. Then, the loop() function will continuously detect whether there are data to read. If so, it will read the character and send it back.


#### Serial Class

Serial.available(): return bytes of data that need to be read by serial port;

Serial.read(): return 1 byte of data that need to be read by serial port.

Verify and upload the code, open the Serial Monitor, write character in the sending area, click Send button, then you'll see information returned from control board.

Please note: You need to select "**No Line Ending**"

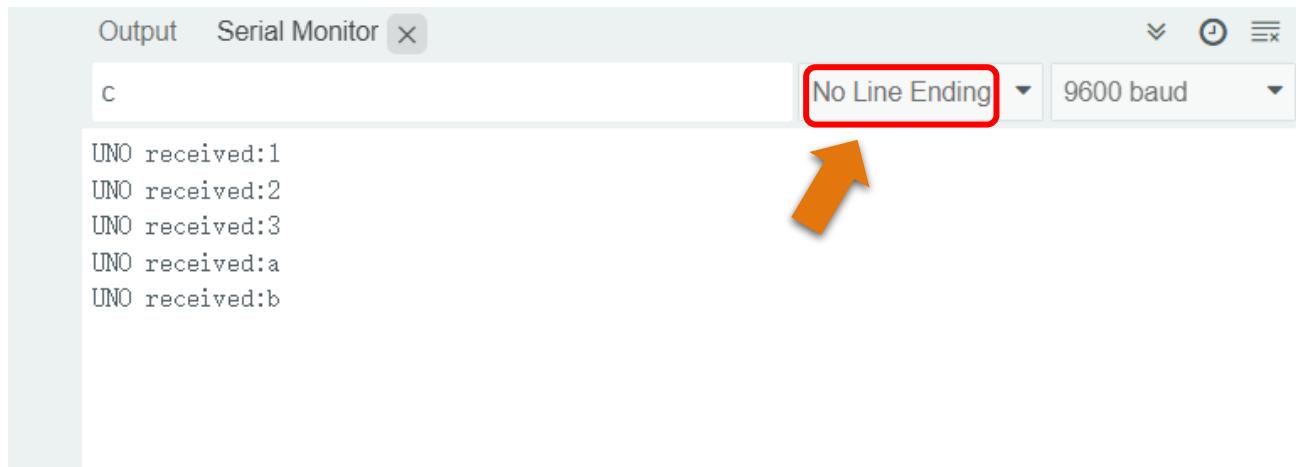

#### char type

char type variable can represent a character, but it cannot store characters directly. It stores numbers to replace characters. char type occupies 1-byte store area, and uses a value 0-127 to correspond to 128 characters. The corresponding relation between number and character is ruled by ASCII table. For more details of ASCII table, please refer to the appendix of this book.

Example: Define char aChar = 'a', bChar = '0', then the decimal value of aChar is 97, bChar will be 48.


## Project 3.3 Application of Serial

We will use the serial port on control board to control one LED.

### Component List

If the kit you bought does not include the following components, you can use only the control board and USB cable to finish this project.

Control board x1

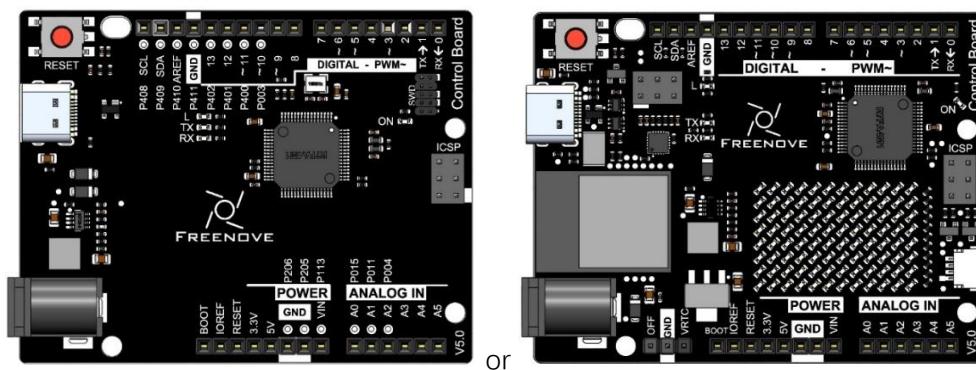

USB cable x1



### Sketch

#### Sketch 3.3.1

Code is basically the same with Sketch 3.3.1. But after receiving the data, control board will convert it into PWM duty cycle of output port.

```

1 int inInt; // define a variable to store the data received from serial
2 int counter = 0; // define a variable as the data sending to serial
3 int ledPin = 13; // the number of the LED pin
4
5 void setup() {
6     pinMode(ledPin, OUTPUT); // initialize the LED pin as an output
7     Serial.begin(9600); // initialize serial port, set baud rate to 9600
8     Serial.println("UNO is ready!"); // print the string "UNO is ready!"
9 }
```

```

10
11 void loop() {
12     if (Serial.available()) {          // judge whether the data has been received
13         inInt = Serial.parseInt();      // read an integer
14         Serial.print("UNO received:"); // print the string "UNO received:"
15         Serial.println(inInt);        // print the received character
16         // convert the received integer into PWM duty cycle of ledPin port
17         analogWrite(ledPin, constrain(inInt, 0, 255));
18     }
19 }
```

When serial receives data, it converts the data into PWM duty cycle of output port to make LED emit light with corresponding brightness.

#### Serial Class

`Serial.parseInt()`: Receive an int type number as the return value.

#### constrain(x, a, b)

Limit x between a and b, if  $x < a$ , return a; if  $x > b$ , return b.

Verify and upload the code, open the Serial Monitor, and put a number in the range of 0-255 into the sending area and click the Send button. Then you'll see information returned from control board, meanwhile, LED can emit light with different brightness according to the number you send.

Please note: You need to select "**No Line Ending**"




# Chapter 4 Timer

In this chapter, we will use the timer of the board, trigger the timer at intervals, thus allowing the serial port to print messages.

## Project 4.1 Serial print using timer

### Component List

Control board x1

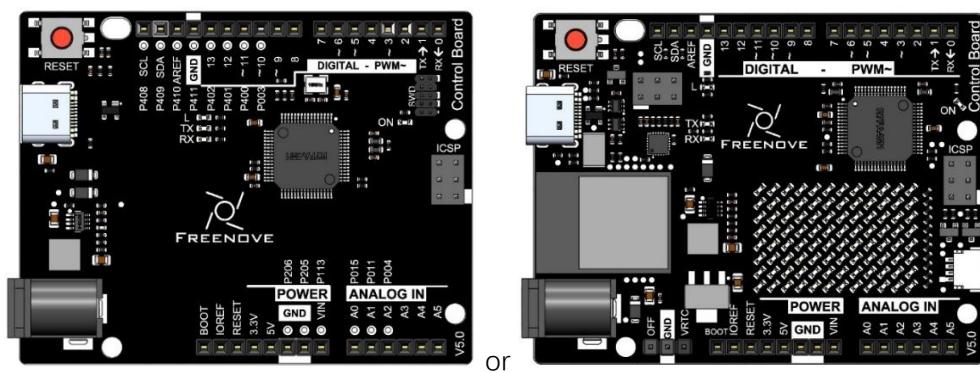

or


USB cable x1



## Code Knowledge


### Timer

A Timer can be set to produce an interrupt after a period of time. When a timer interrupt occurs, the processor will jump to the interrupt function to process the interrupt event. And after completion the processing, execution will return to the interrupted location to go on. If you don't close the timer, interrupt will occur at the intervals you set.

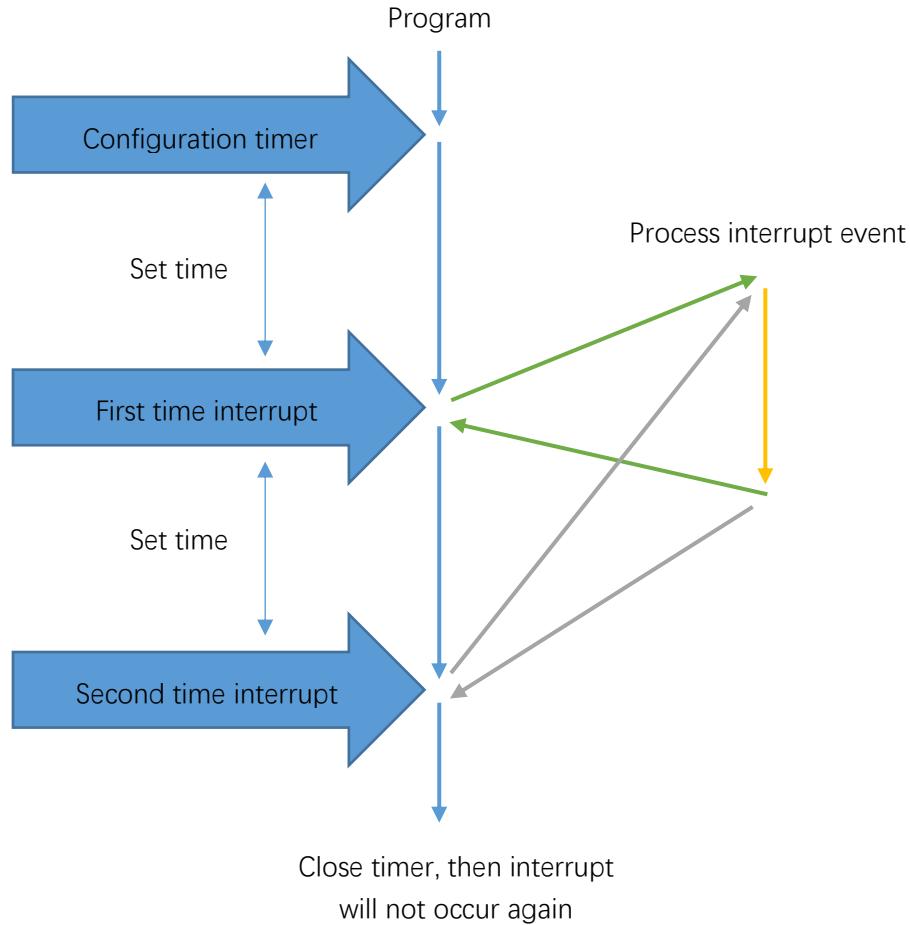

## Circuit

Connect control board to the computer with USB cable.

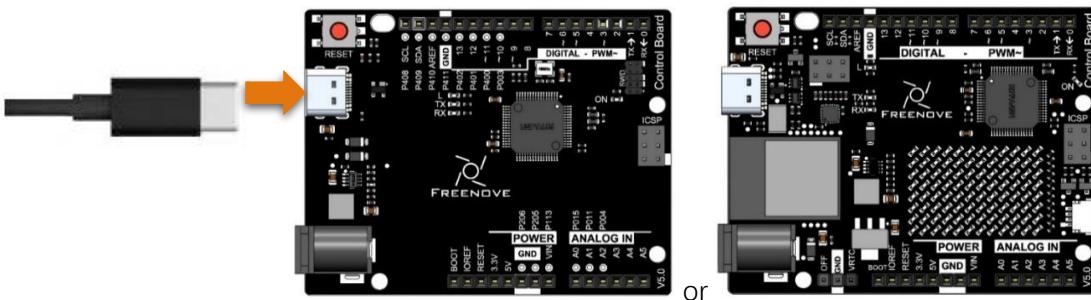

If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

Need help? Contact [support@freenove.com](mailto:support@freenove.com)


## Sketch

This code uses a library named "CallbackTimerR4 ", if you have not installed it, please do so first.

Library is an important feature of the open source world, and we know that Arduino is an open source platform that everyone can contribute to.

### How to install the library

open Arduino IDE, click Sketch→Include Library→Add .ZIP Library, In the pop-up window, find the file named "./Libraries/ **CallbackTimerR4-main.zip**" which locates in this directory, and click OPEN.

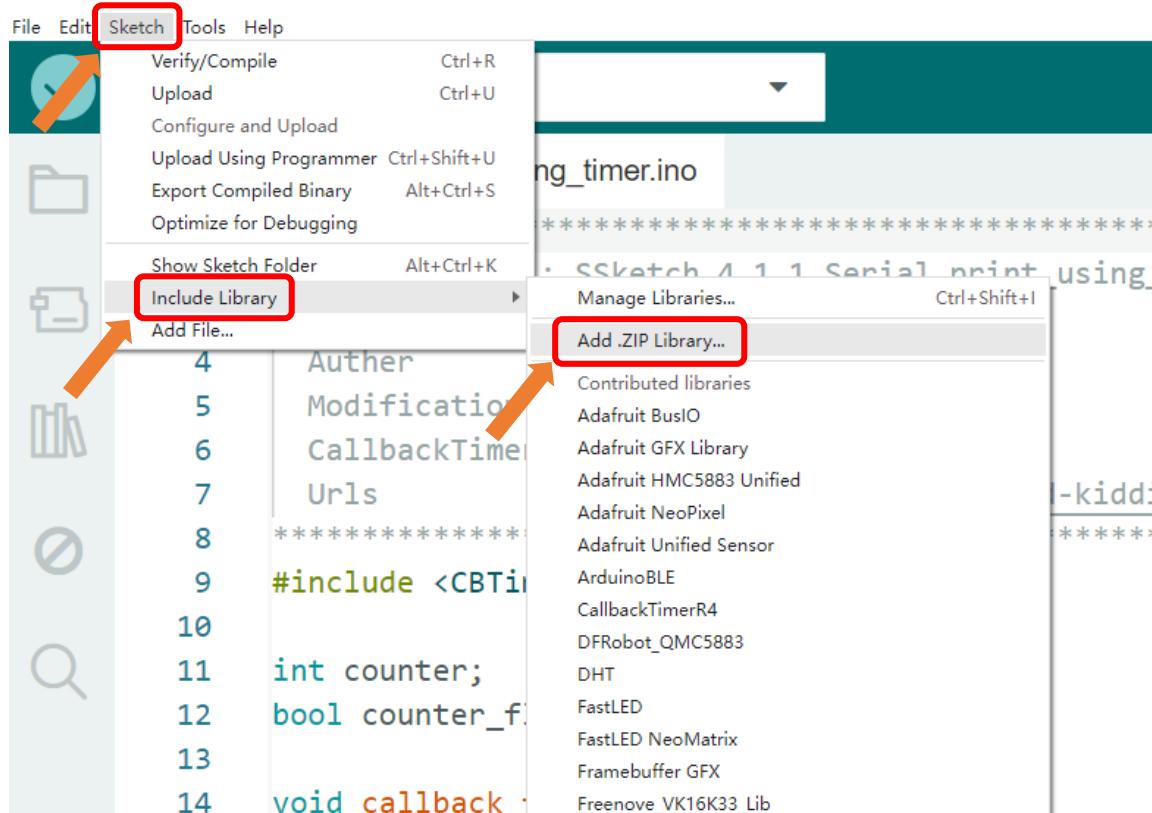

### Sketch 4.1.1

```

1 #include <CBTimer.h>      // Contains CallbackTimerR4 Library
2
3 int counter;
4 bool counter_flag;
5
6 void callback_func(void) {
7     counter_flag = true;
8     counter += 1;
9 }
10
11 void setup() {
12     // put your setup code here, to run once:

```

```
13 Serial.begin(9600);           // initialize serial port, set baud rate to 9600
14 static CBTimer timer;
15 timer.begin(1000, callback_func);
16 }
17
18 void loop() {
19 // put your main code here, to run repeatedly:
20 if(counter_flag == true)
21 {
22     counter_flag = false;
23     Serial.print ("counter:");
24     Serial.println(counter);
25 }
26 }
```


Verify and upload the code, open the Serial Monitor, and then you'll see data sent from control board. If it is not displayed correctly, check whether the configuration of the Serial Monitor in the lower right corner of the window is correct.



## Project 4.2 Using timer to implement LED blinking

### Component List

Control board x1

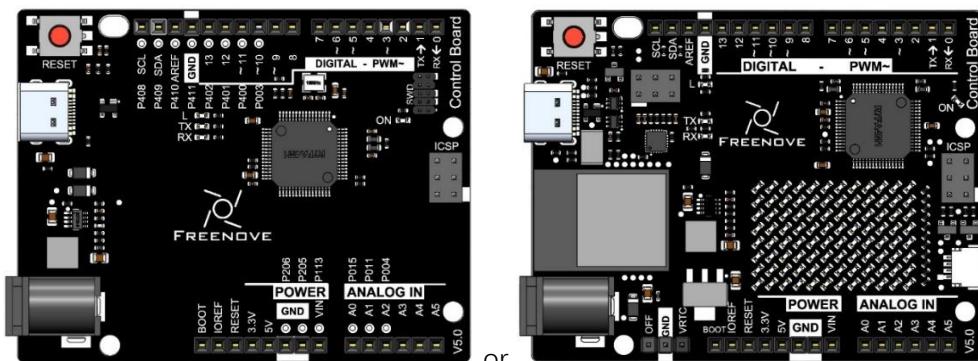


USB cable x1



### Circuit

Connect control board to the computer with USB cable.

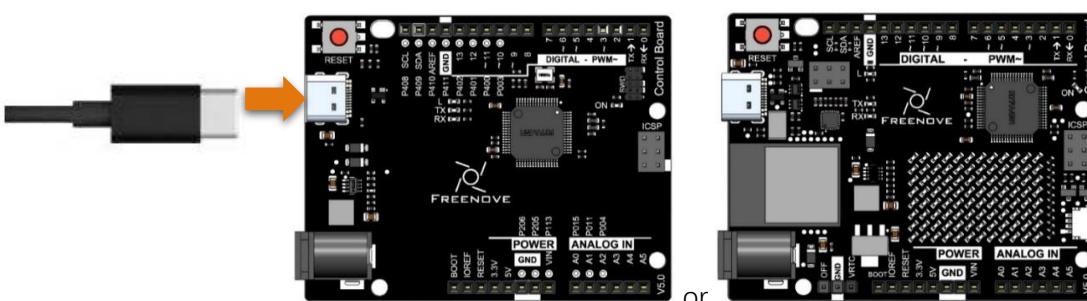

If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)


## Sketch

Sketch 4.2.1

```

1 #include <CBTimer.h>      // Contains CallbackTimerR4 Library
2
3 const int ledpin = 13;
4
5 void callback_func(void) {
6     int ledstate = digitalRead(ledpin);
7     digitalWrite(ledpin, !ledstate);
8 }
9
10 void setup() {
11     Serial.begin(9600);           // initialize serial port, set baud rate to 9600
12     pinMode(ledpin, OUTPUT);
13     static CBTimer timer;
14     timer.begin(1000, callback_func);
15 }
16
17 void loop() {
18     // put your main code here, to run repeatedly:
19 }
```

Verify and upload the code, then you will see the LED light starts to flash with a period of 1 second

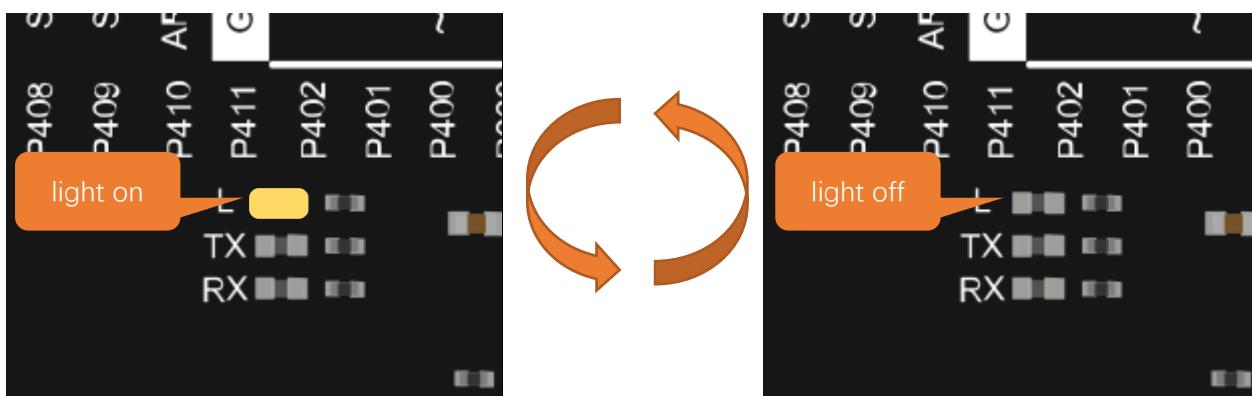

# Chapter 5 RTC



In this chapter, we explore how to access the Real-Time Clock (RTC) on the Control board (V5). The RTC is embedded in the microcontroller (RA4M1) of the Control board (V5).

## Project 5.1 RTC

With this project, let's delve into controlling the RTC function of the control board, applying it to flash the indicator every two seconds.

### Component List

Control board x1

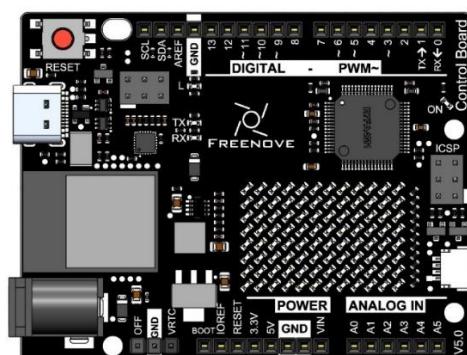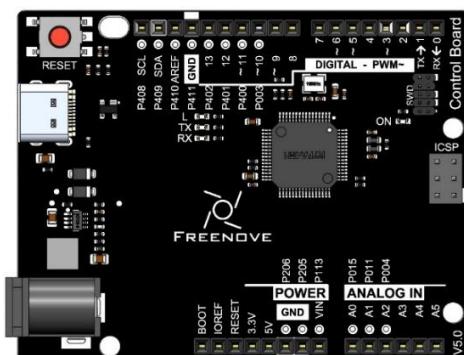

or

USB cable x1



### Component Knowledge


#### RTC

The Real-Time Clock (RTC) is integrated into the microcontroller (RA4M1) of the control board, serving as an independent timekeeping device that continues to operate even when the primary source of power is off or unavailable. This is achieved thanks to a backup power source, such as a battery. Such feature significantly enhances the RTC's utility across a spectrum of applications, from automating tasks in home systems to timestamping data entries in logging applications.

It should be highlighted that the control board (WiFi) is equipped with a VRTC pin that sustains the RTC's functionality when the board is not powered. To engage this functionality, a voltage between 1.6 and 3.6 V must be supplied to the VRTC pin. It is crucial to stay within this voltage range to avoid damaging the board. It is also important to recognize that this advanced feature is exclusive to the control board with WiFi function and is not available in the standard models.

## Circuit

Connect the board to the computer using the USB cable.

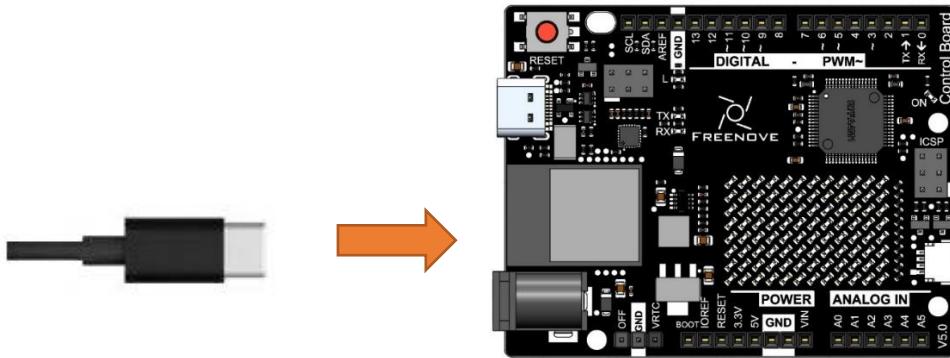

## Sketch

### Sketch 5.1.1

Upload the sketch to the board and you will see the onboard LED flash every two seconds.

```

1 #include "RTC.h"
2
3 volatile bool irqFlag = false; // Flag to indicate a periodic callback.
4 bool ledState = false; // Current LED state: true for ON and false for OFF
5 const int led = LED_BUILTIN; // Pin number for the built-in LED
6
7 void setup() {
8     pinMode(led, OUTPUT); // Configure the LED pin as output
9
10    Serial.begin(9600);
11
12    // Initialize the RTC
13    RTC.begin();
14
15    // Set an arbitrary time to the RTC (required for RTC.setPeriodicCallback to work)
16    RTCTime mytime(13, Month::MAY, 2024, 05, 13, 00, DayOfWeek::MONDAY,
17    SaveLight::SAVING_TIME_ACTIVE);
18
19    RTC.setTime(mytime);
20
21    // Set the periodic callback to trigger every 2 seconds
22    RTC.setPeriodicCallback(2000, &myCallback);
23}
  
```

```
20 if (!RTC.setPeriodicCallback(periodicCallback, Period::ONCE_EVERY_2_SEC)) {
21     Serial.println("ERROR: periodic callback not set");
22 }
23 }
24
25 void loop() {
26     // Check if the periodic callback has been triggered
27     if (irqFlag) {
28         Serial.println("Timed CallBack"); // Output a debugging message
29         ledState = !ledState;           // Toggle the LED state
30         digitalWrite(led, ledState);    // Update the LED
31         irqFlag = false;              // Reset the flag
32     }
33 }
34
35 // This is the callback function to be passed to RTC.setPeriodicCallback()
36 void periodicCallback() {
37     // Set the flag to true to indicate the callback has been triggered
38     irqFlag = true;
39 }
```

Initialize RTC.

```
13 RTC.begin();
```

Configure the time for RTC.

```
15 RTCTime mytime(13, Month::MAY, 2024, 05, 13, 00, DayOfWeek::MONDAY,
16 SaveLight::SAVING_TIME_ACTIVE);
17 RTC.setTime(mytime);
```

A periodic interrupt allows you to set a recurring callback. Set the periodcallback to trigger once every two seconds.

```
20 if (!RTC.setPeriodicCallback(periodicCallback, Period::ONCE_EVERY_2_SEC)) {
21     Serial.println("ERROR: periodic callback not set");
22 }
```

Change the status of the LED every two seconds.

```
27 if (irqFlag) {
28     Serial.println("Timed CallBack"); // Output a debugging message
29     ledState = !ledState;           // Toggle the LED state
30     digitalWrite(led, ledState);    // Update the LED
31     irqFlag = false;              // Reset the flag
32 }
```


# Chapter 6 Onboard LED Matrix (WiFi Board)

In this chapter, we utilize the LED matrix on the control board to display interesting patterns. The control board features a built-in 12x8 LED matrix that can be programmed to display graphics, animations, serve as an interface, and even play games.

## Project 6.1 LED Matrix

In this section, we will use the LED matrix to display static graphics.


### Component List

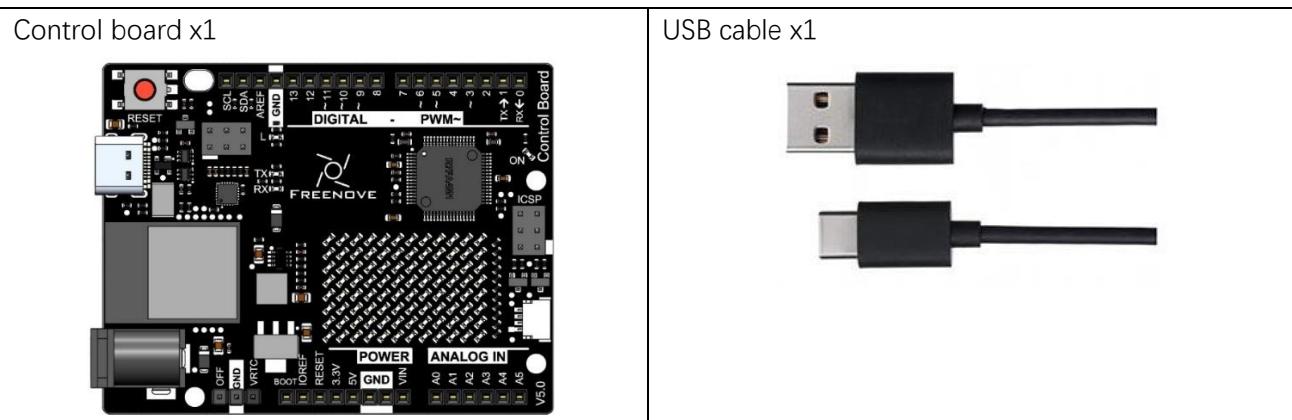

### Component Knowledge


#### LED matrix

The LED matrix on the control board is a rectangular display module composed of a uniform grid of LEDs. Below is an 8x12 monochrome LED matrix, which includes 96 LEDs (8 rows by 12 columns).

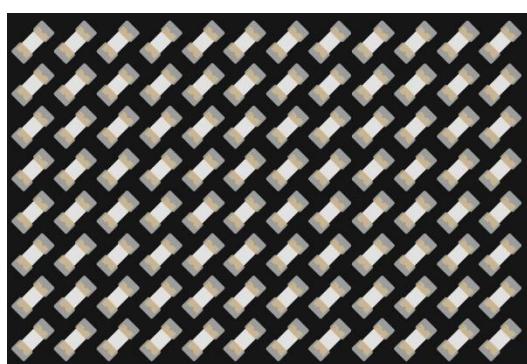

You can call the LED matrix library to display any content you wish. With the LED matrix library, you can quickly display any graphics. For example, to display a smiling face, simply assign a value of 1 to the positions of the

LEDs that need to be lit. Conversely, assigning a value of 0 will turn off the corresponding LEDs, allowing you to set up a variety of interesting patterns.

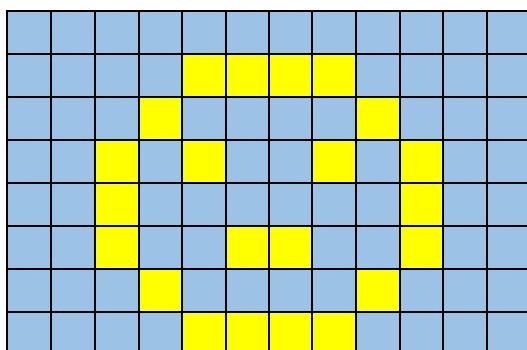

1	0	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	1	1	1	1	0	0	0	0
3	0	0	0	1	0	0	0	0	1	0	0	0
4	0	0	1	0	1	0	0	1	0	1	0	0
5	0	0	1	0	0	0	0	0	0	1	0	0
6	0	0	1	0	0	1	1	0	0	1	0	0
7	0	0	0	1	0	0	0	0	1	0	0	0
8	0	0	0	0	1	1	1	1	0	0	0	0

To control the onboard 12x8 LED matrix, you will need a memory space of at least 96 bits in size, as shown below:

```

1 byte frame[8][12] = {
2 { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
3 { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 },
4 { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
5 { 0, 0, 1, 0, 1, 0, 0, 1, 0, 1, 0, 0 },
6 { 0, 0, 1, 0, 0, 0, 0, 0, 1, 0, 0, 0 },
7 { 0, 0, 1, 0, 0, 1, 1, 0, 0, 1, 0, 0 },
8 { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
9 { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 }};


```

The setup method mentioned above is easy to understand because you can visualize the image in the array pattern, and it is straightforward to edit while running. The elements in the array above form a smiley face, which is the image you see on the screen.

If you need to locate a single pixel, select its address and change the value. Remember to start counting from 0. Thus, the following lines will address the third pixel from the left and the second pixel from the top, and then activate it:

```

1 frame[2][1] = 1;
2
3 matrix.renderBitmap(frame, 8, 12);


```

However, this method consumes more memory than required. Even though each LED only needs one bit to store its state, 8 bits (one byte) are used. There is a more memory-efficient approach for storing frames that employs an array of 32-bit integers.

Unsigned long variables store 32 bits, and dividing 96 by 32 gives us 3, indicating that 96 LEDs can be split into three segments. Thus, an array of unsigned long integers is an efficient way to store all the bits necessary for the LED matrix.

The following is the data of converting the binary values of each row of the LED matrix to hexadecimal from left to right:

Column	Binary	Hexadecimal
1	0000 0000 0000	0x000
2	0000 1111 0000	0x0F0
3	0001 0000 1000	0x108
4	0010 1001 0100	0x294
5	0010 0000 0100	0x204
6	0010 0110 0100	0x264
7	0001 0000 1000	0x108
8	0000 1111 0000	0x0F0

The above 8 sets of data are converted into 3 groups as follows:

1	0000 0000 0000 0000 1111 0000 0001 0000
2	
3	1000 0010 1001 0100 0010 1001 0100 0010
4	
5	0110 0100 0001 0000 1000 0000 1111 0000

1	0x0000F010
2	
3	0x82942042
4	
5	0x641080F0

From this we can conclude that the 32-bit integer array of a smiley face is as follows.

1	unsigned long frame[] = {
2	0x0000F010,
3	0x82942042,
4	0x641080F0
5	};

Uploading the above data to the control board will display the corresponding pattern. Additionally, if you have multiple different frames, you can load and display them as below:

1	const uint32_t happy[] = {
2	0x19819,
3	0x80000001,
4	0x81f8000
5	};
6	const uint32_t heart[] = {
7	0x3184a444,
8	0x44042081,
9	0x100a0040
10	};
11	matrix.loadFrame(happy);
12	delay(500);
13	

```
14     matrix.loadFrame(heart);
15     delay(500);
```

Call the display function and you can see the LED display the above contents.

## Sketch

### Sketch 6.1.1

Upload the sketch to the control board and you should see the entire matrix lights up, turn off after a second, and then display the static expression resembling a smiley face.

The following is the program code:

```
1 #include "Arduino_LED_Matrix.h" // Include the LED_Matrix library
2
3 ArduinoLEDMatrix matrix; // Create an instance of the ArduinoLEDMatrix class
4
5 byte frame[8][12] = {
6     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
7     { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 },
8     { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
9     { 0, 0, 1, 0, 1, 0, 0, 1, 0, 1, 0, 0 },
10    { 0, 0, 1, 0, 0, 0, 0, 0, 0, 1, 0, 0 },
11    { 0, 0, 1, 0, 0, 1, 1, 0, 0, 1, 0, 0 },
12    { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
13    { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 }
14 };
151
16 unsigned long frame2[] = {
17     0x0000F010,
18     0x82942042,
19     0x641080F0
20 };
21
22 const uint32_t fullOn[] = {
23     0xffffffff,
24     0xffffffff,
25     0xffffffff
26 };
27 const uint32_t fullOff[] = {
28     0x00000000,
29     0x00000000,
30     0x00000000
```

```
31 };  
32  
33 void setup() {  
34     matrix.begin(); // Initialize the LED matrix  
35     matrix.loadFrame(fullOn);  
36     delay(250);  
37     matrix.loadFrame(fullOff);  
38     delay(250);  
39 }  
40  
41 void loop() {  
42     //matrix.loadFrame(frame2);  
43     matrix.renderBitmap(frame, 8, 12);  
44     delay(250);  
45 }
```

First, include the library “Arduino\_LED\_Matrix.h” at the beginning of the sketch, as shown below.

```
1 #include "Arduino_LED_Matrix.h" // Include the LED_Matrix library
```

Create an object for the LED matrix in the sketch.

```
3 ArduinoLEDMatrix matrix; // Create an instance of the ArduinoLEDMatrix class
```

Activate the LED matrix by adding the line “matrix.begin();” under void setup() as shown below.

```
34 matrix.begin(); // Initialize the LED matrix
```


After the program initializes, it first lights up the entire LED matrix and then turns off the LED matrix, and subsequently continuously displays the smiling face graphic.

```
34 matrix.begin(); // Initialize the LED matrix  
35 matrix.loadFrame(fullOn);  
36 delay(250);  
37 matrix.loadFrame(fullOff);  
38 delay(250);  
...  
43 matrix.renderBitmap(frame, 8, 12);  
44 delay(250);
```

Arduino has also created an online tool called LED Matrix Editor to simplify frame creation. Each frame can be edited graphically and the duration specified. Once this process is complete, simply name the file and download it for use in your project.

To customize more graphics, you can design via this link: [LED matrix editor \(Arduino cc\)](#)

When using the above tools to customize the graphics, the following examples should be uploaded to the control board first. After uploading, the corresponding device can be connected to the real-time transmission of the graphics to the control board for display.

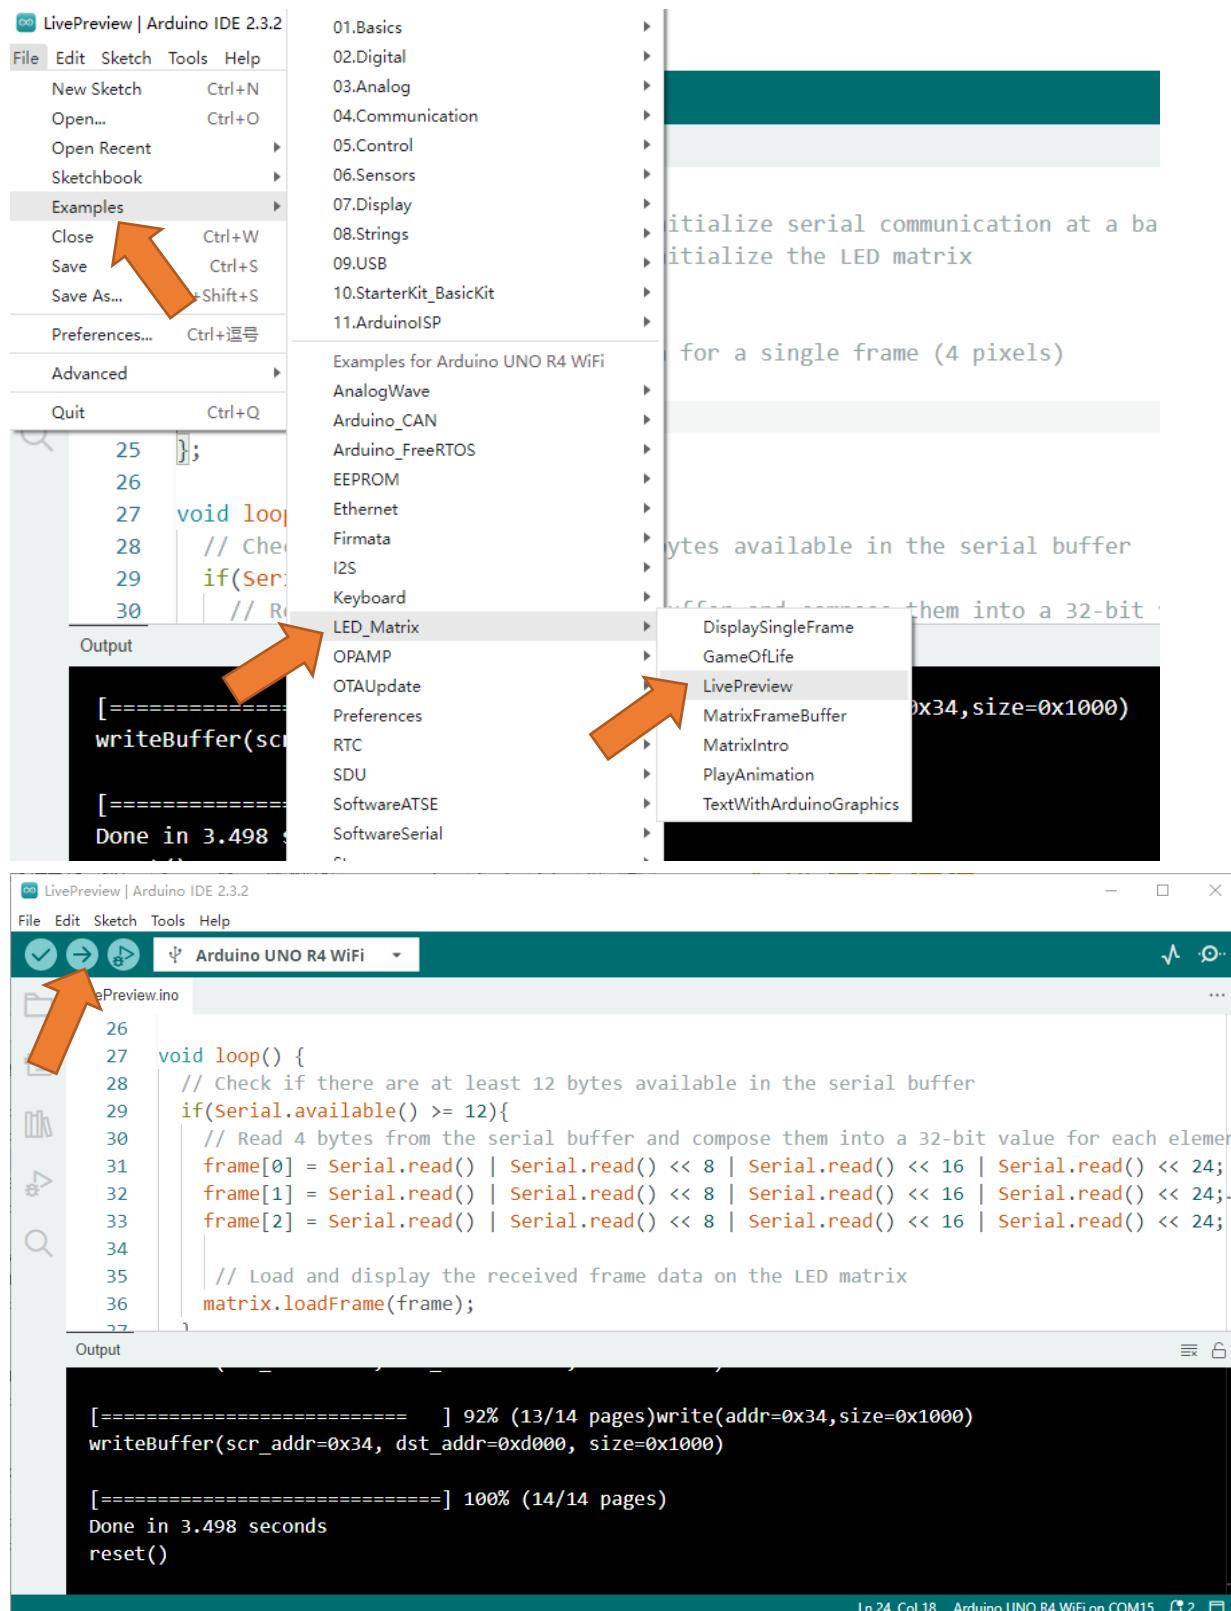


## Project 6.2 LED Matrix

In this segment, we'll harness the onboard LED matrix to showcase dynamic visuals by scrolling the message "**Hello World!**" across the matrix.

### Component List

Control board x1

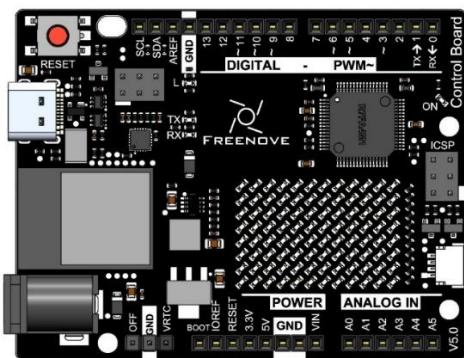

USB cable x1



### Sketch

#### Sketch 19.2.1

When you upload the sketch to the control board, you will observe the onboard LED matrix displaying dynamic scenes. The text "**Hello World!**" will be presented in a scrolling manner.

The following is the program code:

```
1 #include "ArduinoGraphics.h"
2 #include "Arduino_LED_Matrix.h"
3
4 ArduinoLEDMatrix matrix;
5
6 void setup() {
7     Serial.begin(115200);
8     matrix.begin();
9 }
10
11 void loop() {
12
13     // Make it scroll!
14     matrix.beginDraw();
15 }
```

```
16 matrix.stroke(0xFFFFFFFF);
17 matrix.textScrollSpeed(50);
18
19 // add the text
20 const char text[] = "Hello World!";
21 matrix.setFont(Font_5x7);
22 matrix.beginText(0, 1, 0xFFFFFFFF);
23 matrix.println(text);
24 matrix.endText(SCROLL_LEFT);
25
26 matrix.endDraw();
27 }
```

First, include the library “Arduino\_LED\_Matrix.h” at the beginning of the sketch, as shown below.

```
1 #include "ArduinoGraphics.h"
2 #include "Arduino_LED_Matrix.h"
```

Create an object for the LED matrix in the sketch.

```
4 ArduinoLEDMatrix matrix; // Create an instance of the ArduinoLEDMatrix class
```

Activate the LED matrix by adding the line “matrix.begin();” under void setup() as shown below.

```
8 matrix.begin(); // Initialize the LED matrix
```

In the main function, print “Hello World!” on the LED matrix.

```
13 // Make it scroll!
14 matrix.beginDraw();
15
16 matrix.stroke(0xFFFFFFFF);
17 matrix.textScrollSpeed(50);
18
19 // add the text
20 const char text[] = "Hello World!";
21 matrix.setFont(Font_5x7);
22 matrix.beginText(0, 1, 0xFFFFFFFF);
23 matrix.println(text);
24 matrix.endText(SCROLL_LEFT);
25
26 matrix.endDraw();
```

For more examples please refer to:

[Using the Arduino UNO R4 WiFi LED Matrix | Arduino Documentation](#)

# Chapter 7 WiFi Working Modes (WiFi Board)


In this chapter, we'll focus on the WiFi infrastructure for control board.

Control board has 3 different WiFi operating modes: station mode, AP mode and AP+station mode. All WiFi programming projects must be configured with WiFi operating mode before using WiFi, otherwise WiFi cannot be used.

## Project 7.1 Station mode

### Component List

Control board x1

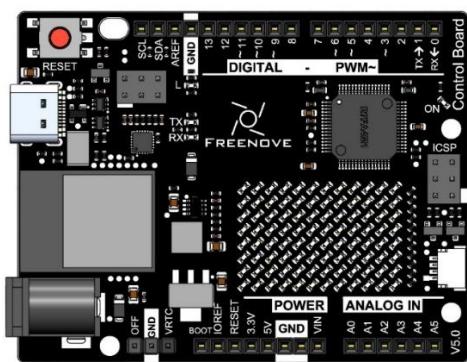


USB cable x1



## Component knowledge


### Station mode

When control board(wifi) selects Station mode, it acts as a WiFi client. It can connect to the router network and communicate with other devices on the router via WiFi connection. As shown below, the PC is connected to the router, and if control board(wifi) wants to communicate with the PC, it needs to be connected to the router.

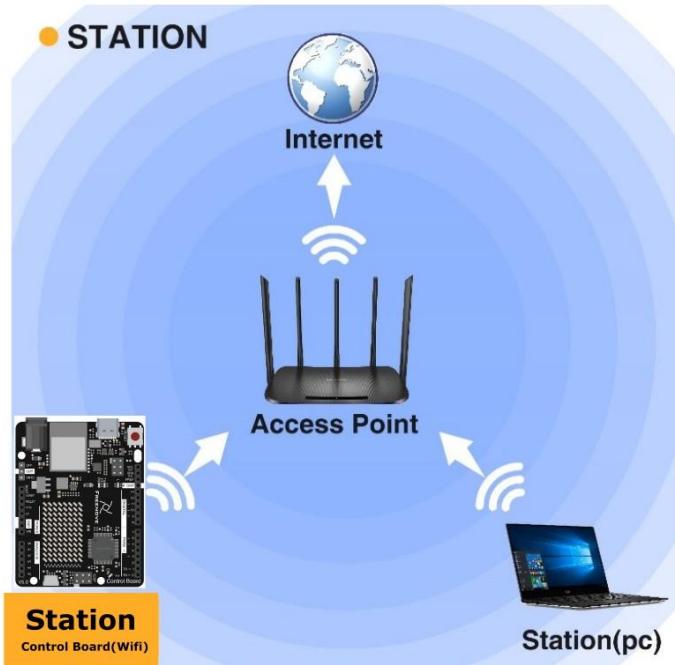

## Circuit

Connect Freenove control board(wifi)to the computer using the USB cable.

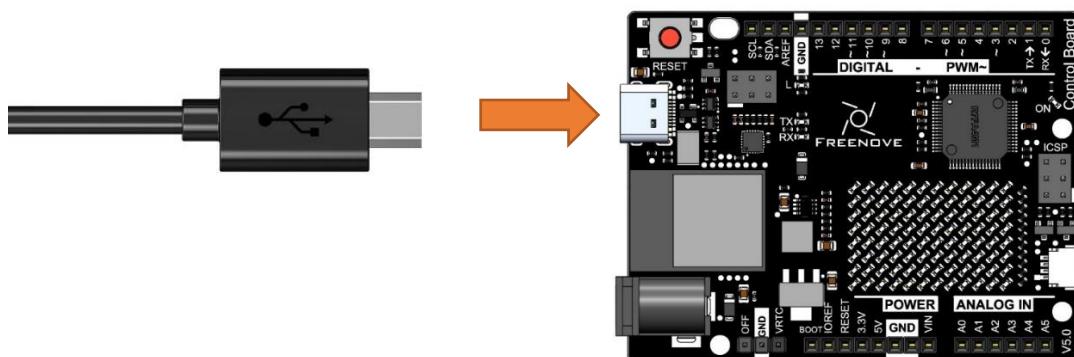

## Sketch

### Sketch\_7.1.1



```

Sketch_37.1.1_WiFi_Station | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Sketch_37.1.1_WiFi_Station.ino Upload
7 #include "WiFiS3.h"
8
9 const char *ssid_Router      = "*****"; //Enter the router name
10 const char *password_Router = "*****"; //Enter the router password
11
12 void setup(){
13     Serial.begin(115200);
14     delay(2000);
15     Serial.println("Setup start");
16     WiFi.begin(ssid_Router, password_Router);
17     Serial.println(String("Connecting to ") +ssid_Router);
18     while (WiFi.status() != WL_CONNECTED){
19         delay(500);
20         Serial.print(".");
21     }
22     Serial.println("\nConnected, IP address: ");
23     Serial.println(WiFi.localIP());
24     Serial.println("Setup End");
25 }

```

Enter the correct Router name and password.

Because the names and passwords of routers in various places are different, before the Sketch runs, users need to enter the correct router's name and password in the box as shown in the illustration above.

After making sure the router name and password are entered correctly, compile and upload codes to control board, open serial monitor and set baud rate to 115200. And then it will display as follows:



```

Output Serial Monitor ×
Message (Enter to send message to 'Arduino UNO R4 WiFi' on 'COM15') No Line Ending 115200 baud
Setup start
Connecting to FYI_2.4G

Connected, IP address:
192.168.1.94
Setup End

```

Ln 23, Col 7 Arduino UNO R4 WiFi on COM15

When control board successfully connects to "ssid\_Router", serial monitor will print out the IP address assigned to control board by the router.

The following is the program code:

```
1 #include "WiFiS3.h"
```

```

2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5
6 void setup() {
7     Serial.begin(115200);
8     delay(2000);
9     Serial.println("Setup start");
10    WiFi.begin(ssid_Router, password_Router);
11    Serial.println(String("Connecting to ") + ssid_Router);
12    while (WiFi.status() != WL_CONNECTED) {
13        delay(500);
14        Serial.print(".");
15    }
16    Serial.println("\nConnected, IP address: ");
17    Serial.println(WiFi.localIP());
18    Serial.println("Setup End");
19 }
20
21 void loop() {
22 }
```

Include the WiFi Library header file of control board.

```
#include "WiFiS3.h"
```

Enter correct router name and password.

```
const char *ssid_Router      = "*****"; //Enter the router name
const char *password_Router = "*****"; //Enter the router password
```

Set control board in Station mode and connect it to your router.

```
WiFi.begin(ssid_Router, password_Router);
```

Check whether control board has connected to router successfully every 0.5s.

```
while (WiFi.status() != WL_CONNECTED) {
    delay(500);
    Serial.print(".");
}
```

Serial monitor prints out the IP address assigned to control board.

```
Serial.println(WiFi.localIP());
```

Reference

### Class Station

Every time when using WiFi, you need to include header file "WiFiS3.h".

**begin(ssid, password,channel, bssid, connect):** control board is used as Station to connect hotspot.

**ssid:** WiFi hotspot name

**password:** WiFi hotspot password

**channel:** WiFi hotspot channel number; communicating through specified channel; optional parameter

**bssid:** mac address of WiFi hotspot, optional parameter

**connect:** boolean optional parameter, defaulting to true. If set as false, then control board won't connect

WiFi.

**config(local\_ip, gateway, subnet, dns1, dns2):** set static local IP address.

**local\_ip:** station fixed IP address.

**subnet:** subnet mask

**dns1,dns2:** optional parameter. define IP address of domain name server

**status:** obtain the connection status of WiFi

**local IP():** obtian IP address in Station mode

**disconnect():** disconnect wifi

**setAutoConnect(boolean):** set automatic connection Every time control board is power on, it will connect WiFi aitomatically.

**setAutoReconnect(boolean):** set automatic reconnection Every time control board disconnects WiFi, it will reconnect to WiFi automatically.

## Project 7.2 AP mode


### Component List & Circuit

Component List & Circuit are the same as in Section 30.1.

### Component knowledge


#### AP mode

When control board selects AP mode, it creates a hotspot network that is separate from the Internet and waits for other WiFi devices to connect. As shown in the figure below, Control board is used as a hotspot. If a mobile phone or PC wants to communicate with control board, it must be connected to the hotspot of control board. Only after a connection is established with control board can they communicate.

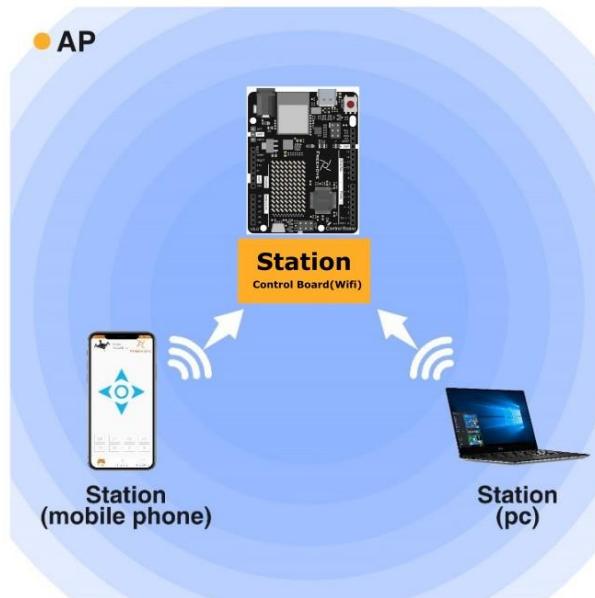


### Circuit

Connect Freenove control board to the computer using the USB cable.

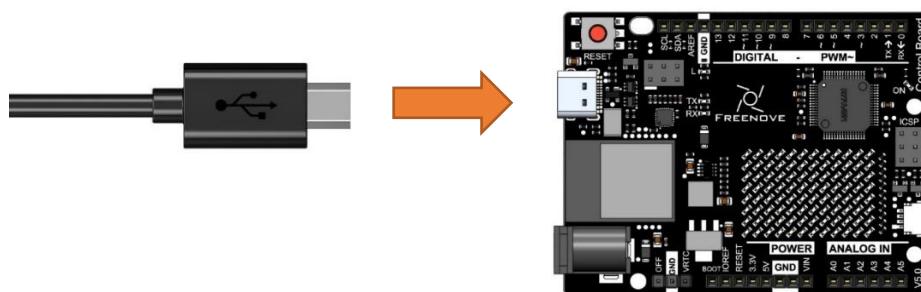

## Sketch

### Sketch\_7.2.1

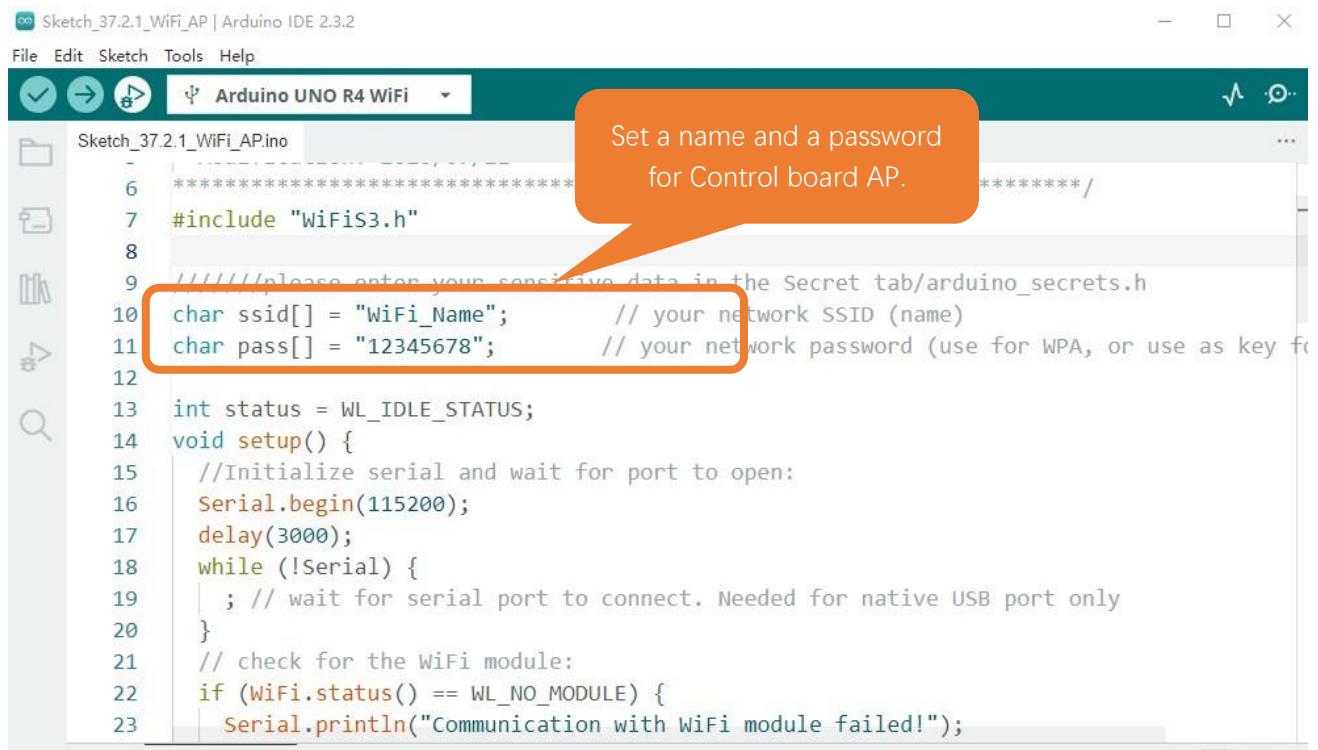

The screenshot shows the Arduino IDE interface with the title bar "Sketch\_7.2.1\_WiFi\_AP | Arduino IDE 2.3.2". The menu bar includes File, Edit, Sketch, Tools, Help, and an "Arduino UNO R4 WiFi" dropdown. The left sidebar has icons for file operations like Open, Save, and Print. The main code editor window displays the following sketch:

```
Sketch_7.2.1_WiFi_AP.ino
6 ****
7 #include "WiFi.h"
8
9 //please enter your sensitive data in the Secret tab/arduino_secrets.h
10 char ssid[] = "WiFi_Name";           // your network SSID (name)
11 char pass[] = "12345678";          // your network password (use for WPA, or use as key for WPS)
12
13 int status = WL_IDLE_STATUS;
14 void setup() {
15     //Initialize serial and wait for port to open:
16     Serial.begin(115200);
17     delay(3000);
18     while (!Serial) {
19         ; // wait for serial port to connect. Needed for native USB port only
20     }
21     // check for the WiFi module:
22     if (WiFi.status() == WL_NO_MODULE) {
23         Serial.println("Communication with WiFi module failed!");
```

An orange callout bubble points to the lines 10 and 11, which define the WiFi SSID and password. The text inside the bubble reads: "Set a name and a password for Control board AP."

Before the Sketch runs, you can make any changes to the AP name and password for control board in the box as shown in the illustration above. Of course, you can leave it alone by default.

Compile and upload codes to control board, open the serial monitor and set the baud rate to 115200. And then it will display as follows.




The screenshot shows the Arduino Serial Monitor window. The title bar says "Output" and "Serial Monitor". The message area displays the following text:

```
Creating access point named: WiFi_Name
SSID: WiFi_Name
IP Address: 192.48.56.2
To see this page in action, open a browser to http://192.48.56.2
```

The bottom status bar shows "Ln 56, Col 36" and "Arduino Uno R4 WiFi on COM15".

When observing the print information of the serial monitor, turn on the WiFi scanning function of your phone, and you can see the ssid\_AP on control board, which is called "WiFi\_Name" in this Sketch. You can enter the password "12345678" to connect it or change its AP name and password by modifying Sketch.

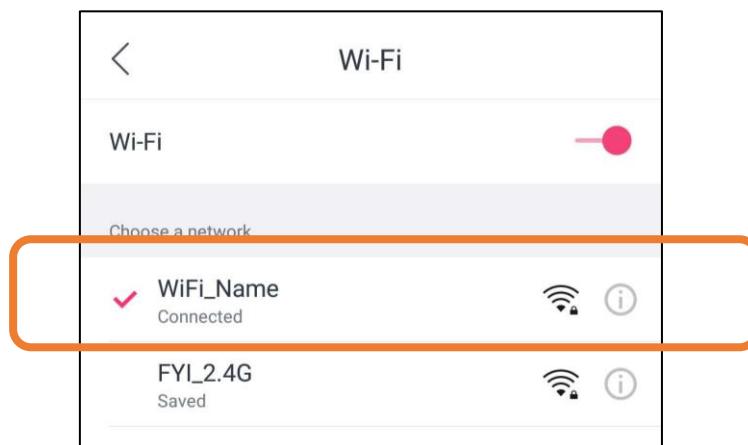

### Sketch\_37.2\_AP\_mode

The following is the program code:

```
1 #include "WiFIS3.h"
2
3 //+++++please enter your sensitive data in the Secret
4 tab/arduino_secrets.h
5 char ssid[] = "WiFi_Name";           // your network SSID (name)
6 char pass[] = "12345678";           // your network password (use for WPA, or
7 use as key for WEP)
8
9 int status = WL_IDLE_STATUS;
10 void setup() {
11     //Initialize serial and wait for port to open:
12     Serial.begin(9600);
13     while (!Serial) {
14         ; // wait for serial port to connect. Needed for native USB port only
15     }
16     // check for the WiFi module:
17     if (WiFi.status() == WL_NO_MODULE) {
18         Serial.println("Communication with WiFi module failed!");
19         // don't continue
20         while (true);
21     }
22
23     String fv = WiFi.firmwareVersion();
24     if (fv < WIFI_FIRMWARE_LATEST_VERSION) {
25         Serial.println("Please upgrade the firmware");
26     }
27     // by default the local IP address will be 192.168.4.1
28     // you can override it with the following:
29     WiFi.config(IPAddress(192,48,56,2));
30     // print the network name (SSID);
31     Serial.print("Creating access point named: ");
32     Serial.println(ssid);
33
34     // Create open network. Change this line if you want to create an WEP
35     network:
36     status = WiFi.beginAP(ssid, pass);
37     if (status != WL_AP_LISTENING) {
38         Serial.println("Creating access point failed");
39         // don't continue
40         while (true);
41     }
42 }
```

```

43 // wait 5 seconds for connection:
44 delay(5000);
45 // you're connected now, so print out the status
46 printWiFiStatus();
47 }
48
49 void loop() {
50 }
51
52 void printWiFiStatus() {
53 // print the SSID of the network you're attached to:
54 Serial.print("SSID: ");
55 Serial.println(WiFi.SSID());
56
57 // print your WiFi shield's IP address:
58 IPAddress ip = WiFi.localIP();
59 Serial.print("IP Address: ");
60 Serial.println(ip);
61
62 // print where to go in a browser:
63 Serial.print("To see this page in action, open a browser to http://");
64 Serial.println(ip);
65 }
66 }
```

Include WiFi Library header file of control board.

```
1 #include "WiFi.h"
```

Enter correct AP name and password.

```

5 char ssid[] = "WiFi_Name";           // your network SSID (name)
6 char pass[] = "12345678";           // your network password (use for WPA, or
use as key for WEP)
```

Check whether the AP is turned on successfully. If yes, print out IP and MAC address of AP established by control board. If no, print out the failure prompt.

```

36     status = WiFi.beginAP(ssid, pass);
37     if (status != WL_AP_LISTENING) {
38         Serial.println("Creating access point failed");
39         // don't continue
40         while (true);
41     }
...
43     // wait 5 seconds for connection:
44     delay(5000);
45     // you're connected now, so print out the status
46     printWiFiStatus();
```

```
47 ...
52 void printWiFiStatus() {
53     // print the SSID of the network you're attached to:
54     Serial.print("SSID: ");
55     Serial.println(WiFi.SSID());
56
57     // print your WiFi shield's IP address:
58     IPAddress ip = WiFi.localIP();
59     Serial.print("IP Address: ");
60     Serial.println(ip);
61
62     // print where to go in a browser:
63     Serial.print("To see this page in action, open a browser to http://");
64     Serial.println(ip);
65
66 }
```


# Chapter 8 TCP/IP (WiFi Board)

In this chapter, we will introduce how control board(wifi) implements network communications based on TCP/IP protocol. There are two roles in TCP/IP communication, namely Server and Client, which will be implemented respectively with two projects in this chapter.

## Project 8.1 As Client

In this section, control board(wifi) is used as Client to connect Server on the same LAN and communicate with it.

## Component List

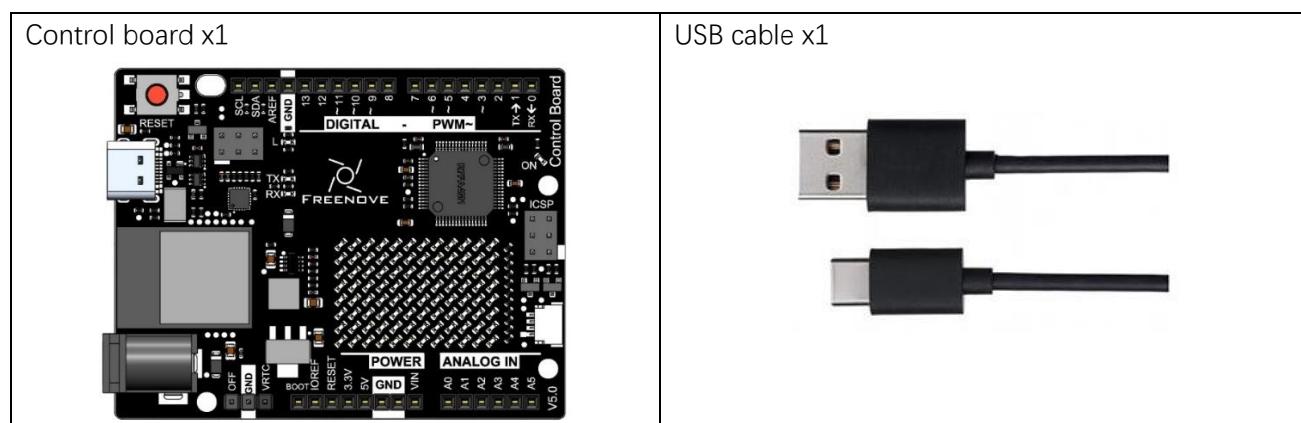


## Component knowledge

### TCP connection


Before transmitting data, TCP needs to establish a logical connection between the sending end and the receiving end. It provides reliable and error-free data transmission between the two computers. In the TCP connection, the client and the server must be clarified. The client sends a connection request to the server, and each time such a request is proposed, a "three-times handshake" is required.

**Three-times handshake:** In the TCP protocol, during the preparation phase of sending data, the client and the server interact three times to ensure the reliability of the connection, which is called "three-times handshake". The first handshake, the client sends a connection request to the server and waits for the server to confirm. The second handshake, the server sends a response back to the client informing that it has received the connection request.

The third handshake, the client sends a confirmation message to the server again to confirm the connection.

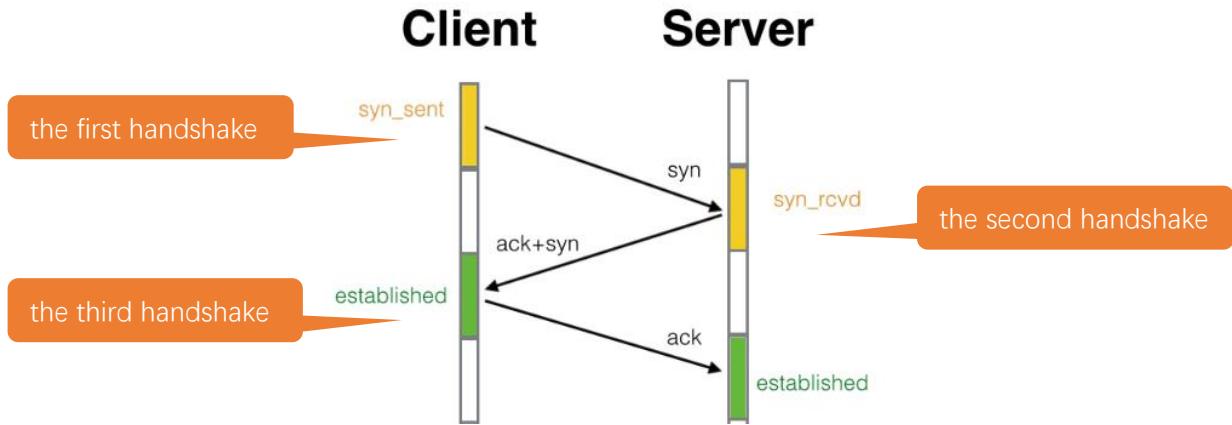

TCP is a connection-oriented, low-level transmission control protocol. After TCP establishes a connection, the client and server can send and receive messages to each other, and the connection will always exist as long as the client or server does not initiate disconnection. Each time one party sends a message, the other party will reply with an ack signal.

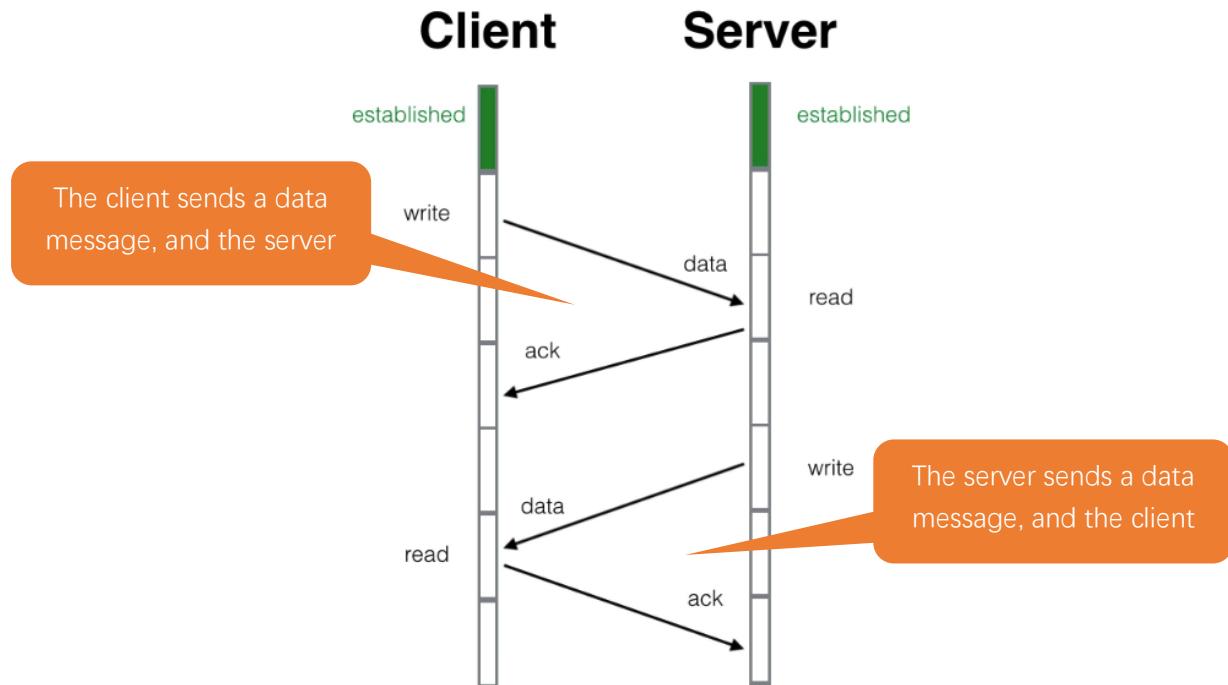

## Install Processing

In this tutorial, we use Processing to build a simple TCP/IP communication platform.

If you've not installed Processing, you can download it by clicking <https://processing.org/download/>. You can choose an appropriate version to download according to your PC system.




The screenshot shows the official Processing website. At the top, there's a navigation bar with links for 'Processing', 'p5.js', 'Processing.py', 'Processing for Android', 'Processing for Pi', and 'Processing Foundation'. Below the navigation bar is a large banner with the word 'Processing' and a search bar. On the left side, there's a sidebar with links for 'Cover', 'Download', 'Donate', 'Exhibition', 'Reference', 'Libraries', 'Tools', 'Environment', 'Tutorials', 'Examples', 'Books', 'Overview', and 'People'. In the center, there's a large 'P' logo. To the right of the logo, it says '3.5.4 (17 January 2020)'. Below that, there are download links for 'Windows 64-bit', 'Windows 32-bit', 'Linux 64-bit', and 'Mac OS X'. At the bottom of the central area, there are links for '» Github', '» Report Bugs', '» Wiki', '» Supported Platforms', and a note about 'Read about the changes in 3.0. The list of revisions covers the differences between releases in detail.'

Unzip the downloaded file to your computer. Click "processing.exe" as the figure below to run this software.


	<b>core</b>	2020/1/17 12:16
	<b>java</b>	2020/1/17 12:17
	<b>lib</b>	2020/1/17 12:16
	<b>modes</b>	2020/1/17 12:16
	<b>tools</b>	2020/1/17 12:16
	<b>processing.exe</b>	2020/1/17 12:16
	<b>processing-java.exe</b>	2020/1/17 12:16
	<b>revisions.txt</b>	2020/1/17 12:16

Use Server mode for communication

Install ControlP5.

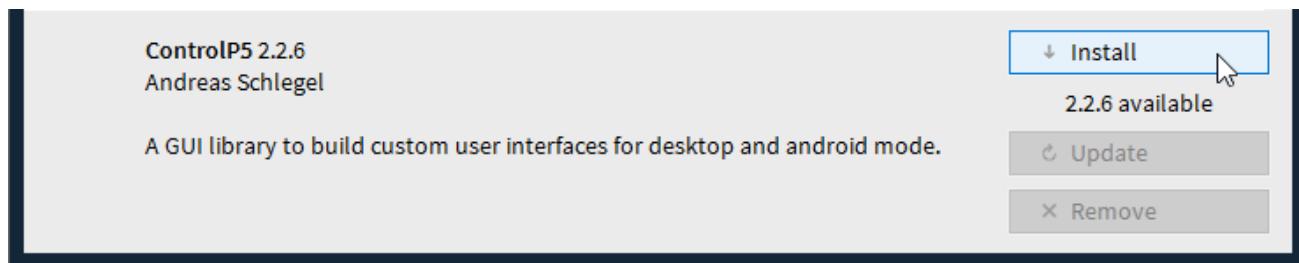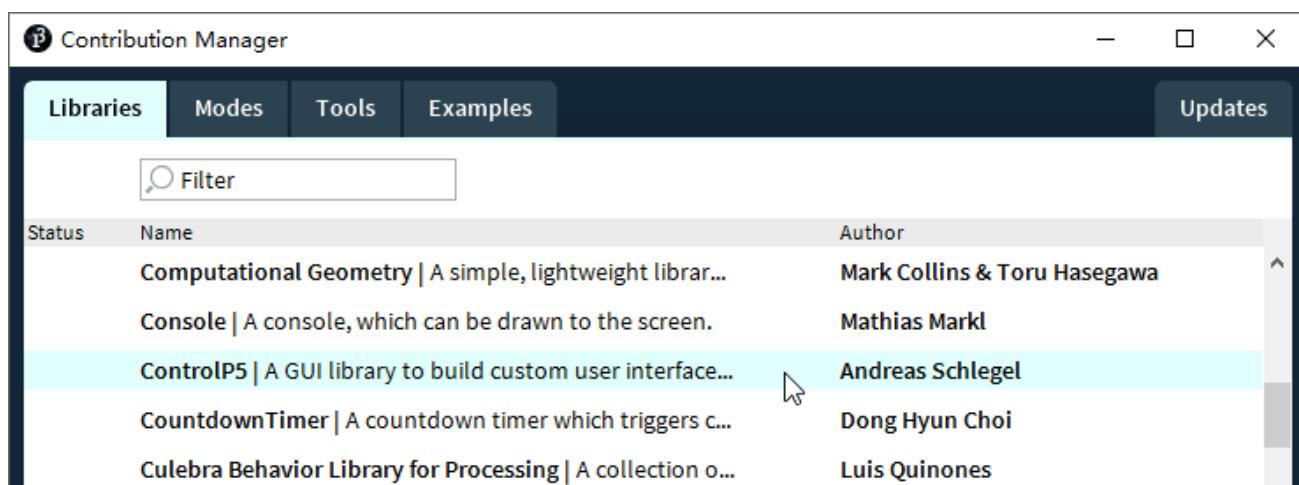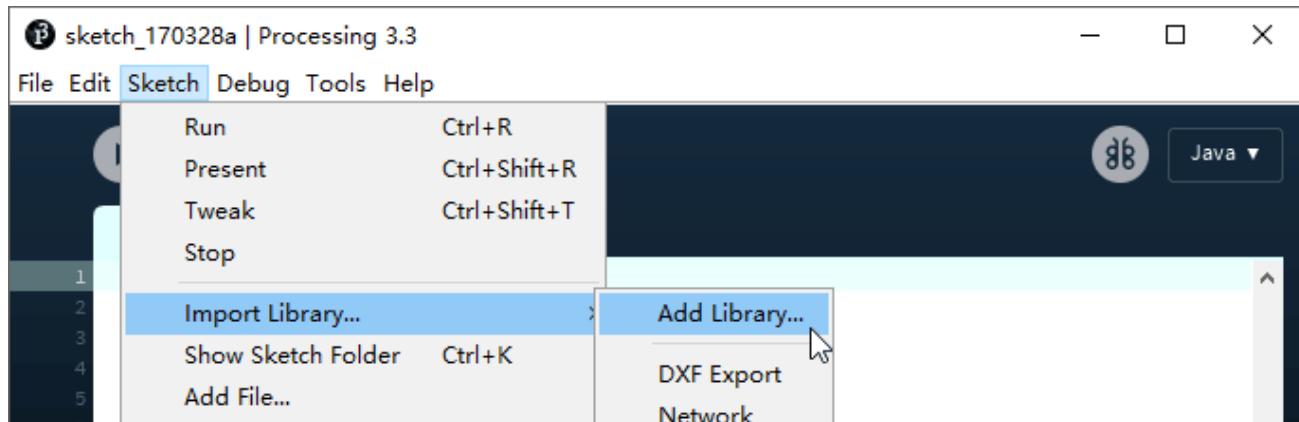

Open the “**Sketches\Sketches\Sketch\_37.1\_WiFiClient\sketchWiFi\sketchWiFi.pde**”, and click “Run”.

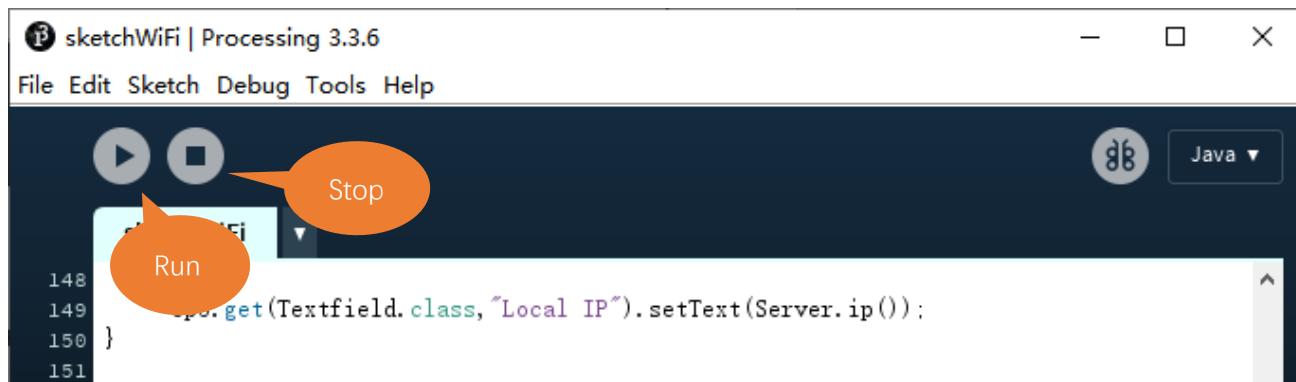


The new pop-up interface is as follows. If control board(wifi) is used as client, select TCP SERVER mode for sketchWiFi.



When sketchWiFi selects TCP SERVER mode, control board(wifi) Sketch needs to be changed according to sketchWiFi's displaying of LOCAL IP or LOCAL PORT.

If ESP32 serves as server, select TCP CLIENT mode for sketchWiFi.

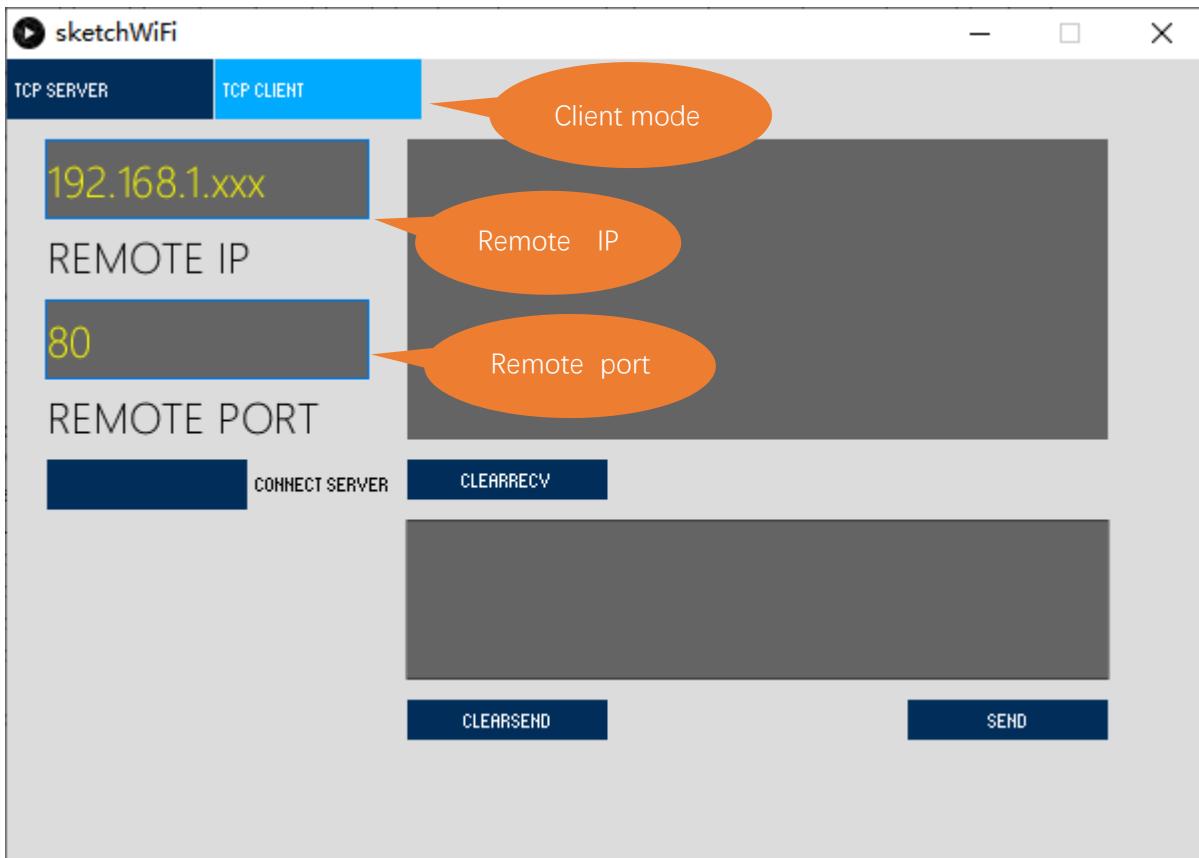

When sketchWiFi selects TCP CLIENT mode, the LOCAL IP and LOCAL PORT of sketchWiFi need to be changed according to the IP address and port number printed by the serial monitor.

#### **Mode selection:** select **Server mode/Client mode**.

**IP address:** In server mode, this option does not need to be filled in, and the computer will automatically obtain the IP address.

In client mode, fill in the remote IP address to be connected.

**Port number:** In server mode, fill in a port number for client devices to make an access connection.

In client mode, fill in port number given by the Server devices to make an access connection.

**Start button:** In server mode, push the button, then the computer will serve as server and open a port number for client to make access connection. During this period, the computer will keep monitoring.

In client mode, before pushing the button, please make sure the server is on, remote IP address and remote port number is correct; push the button, and the computer will make access connection to the remote port number of the remote IP as a client.


**clear receive:** clear out the content in the receiving text box

**clear send:** clear out the content in the sending text box

**Sending button:** push the sending button, the computer will send the content in the text box to others.


## Circuit

Connect Freenove control board to the computer using USB cable.

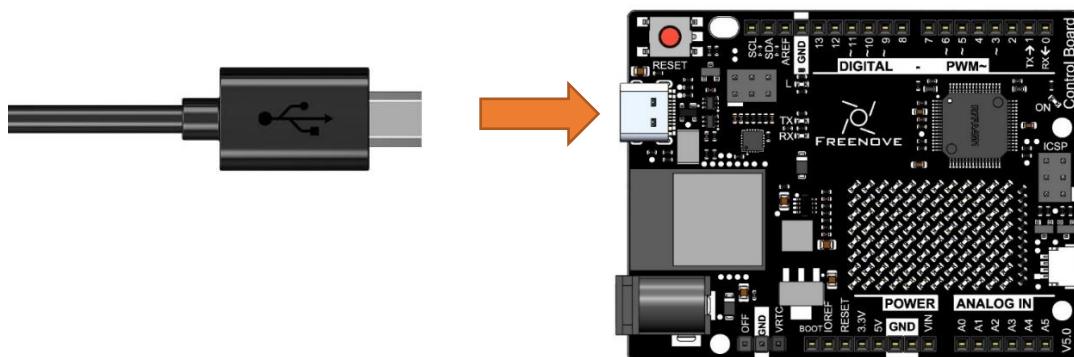

## Sketch

Before running the Sketch, please open “sketchWiFi.pde.” first, and click “Run”.

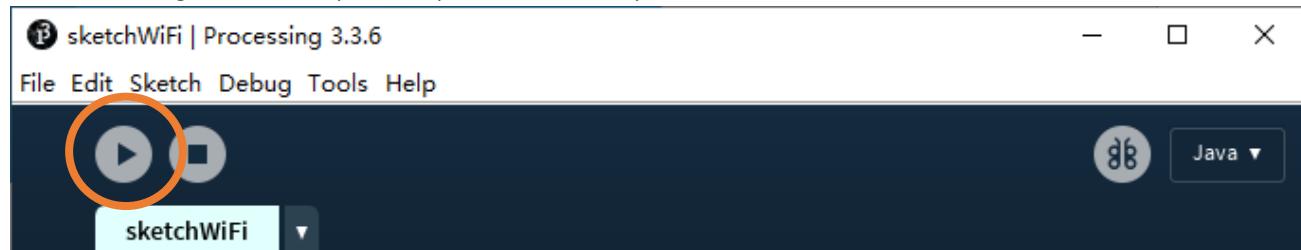

The newly pop up window will use the computer's IP address by default and open a data monitor port.



Next, open WiFiClient.ino. Before running it, please change the following information based on "LOCAL IP" and "LOCAL PORT" in the figure above.


```

Sketch_38.1.1_WiFiClient | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Select Board
Sketch_38.1.1_WiFiClient.ino
7 #include "WiFiS3.h"
8
9 const char *ssid_Router    = "*****"; // Enter the Router name
10 const char *password_Router = "*****"; //Enter the Router password
11 #define REMOTE_IP          "192.168.1.128" //input the remote IP
12 #define REMOTE_PORT         8888           //input the remote port which is the remote server port
13 WiFiClient client;
14


```

REMOTE\_IP needs to be filled in according to the interface of sketchWiFi.pde. Taking this tutorial as an example, its REMOTE\_IP is “192.168.1.128”. Generally, by default, the ports do not need to change its value.

Click LISTENING, turn on TCP SERVER's data listening function and wait for control board(wifi) to connect.

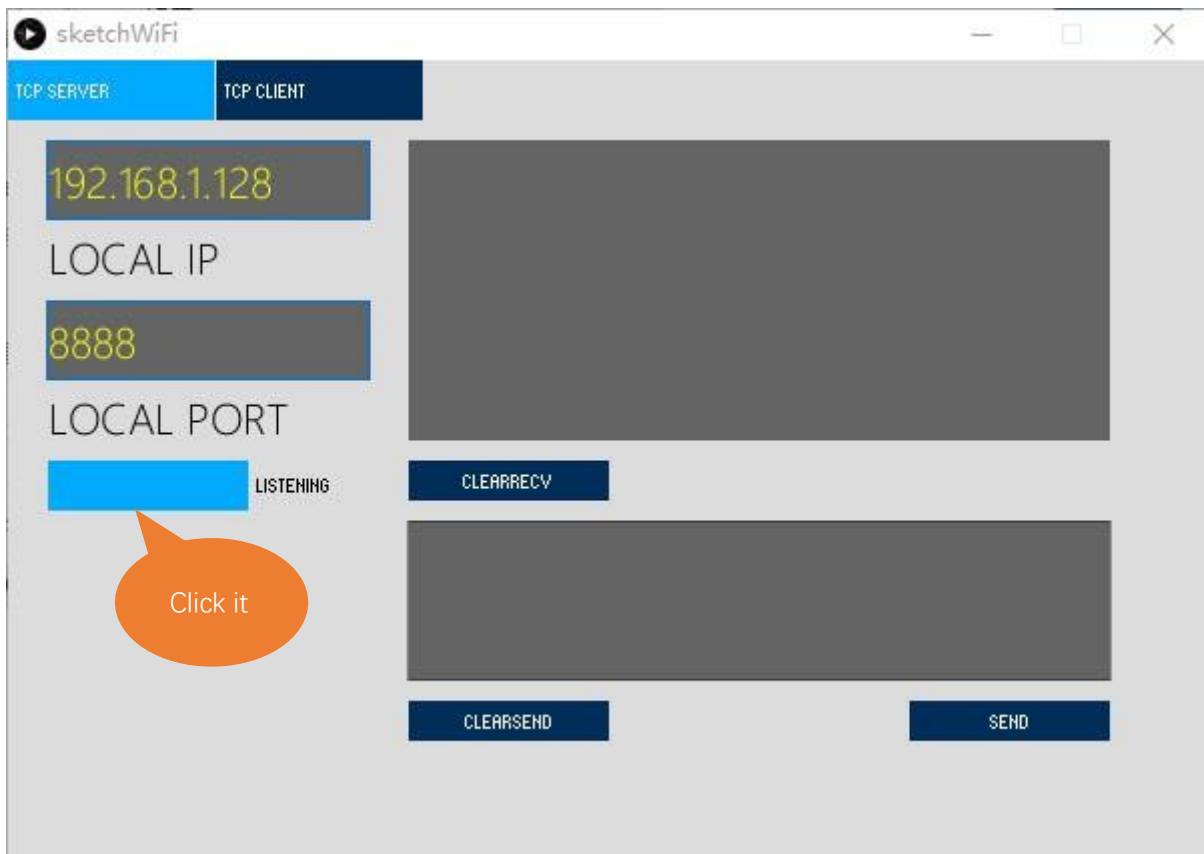

Compile and upload code to control board(wifi), open the serial monitor and set the baud rate to 115200. control board(wifi) connects router, obtains IP address and sends access request to server IP address on the same LAN till the connection is successful. When connect successfully, control board(wifi) can send messages to server.

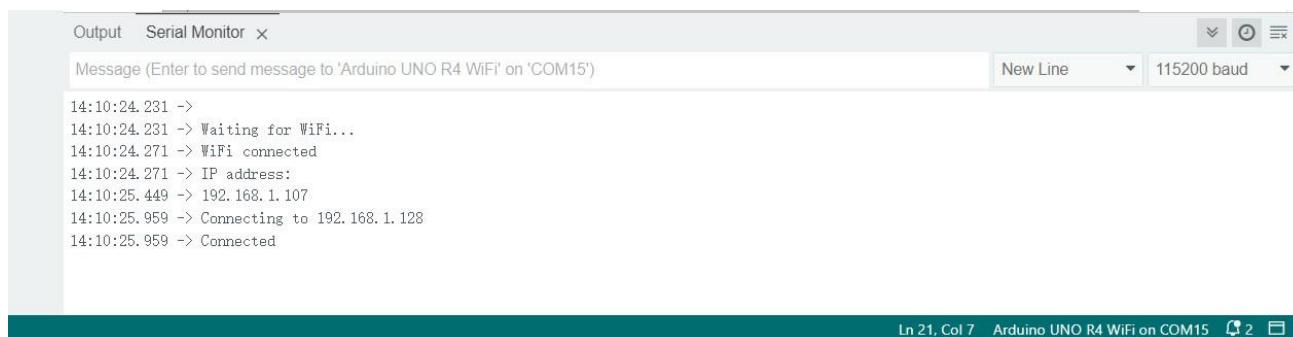


The screenshot shows the Arduino Serial Monitor window. The title bar says "Output Serial Monitor". The message area displays the following log:

```
Message (Enter to send message to 'Arduino UNO R4 WiFi' on 'COM15')
14:10:24.231 ->
14:10:24.231 -> Waiting for WiFi...
14:10:24.271 -> WiFi connected
14:10:24.271 -> IP address:
14:10:25.449 -> 192.168.1.107
14:10:25.959 -> Connecting to 192.168.1.128
14:10:25.959 -> Connected
```

The status bar at the bottom right shows "Ln 21, Col 7" and "Arduino UNO R4 WiFi on COM15".

Control board(wifi) connects with TCP SERVER, and TCP SERVER receives messages from control board(wifi), as shown in the figure below.

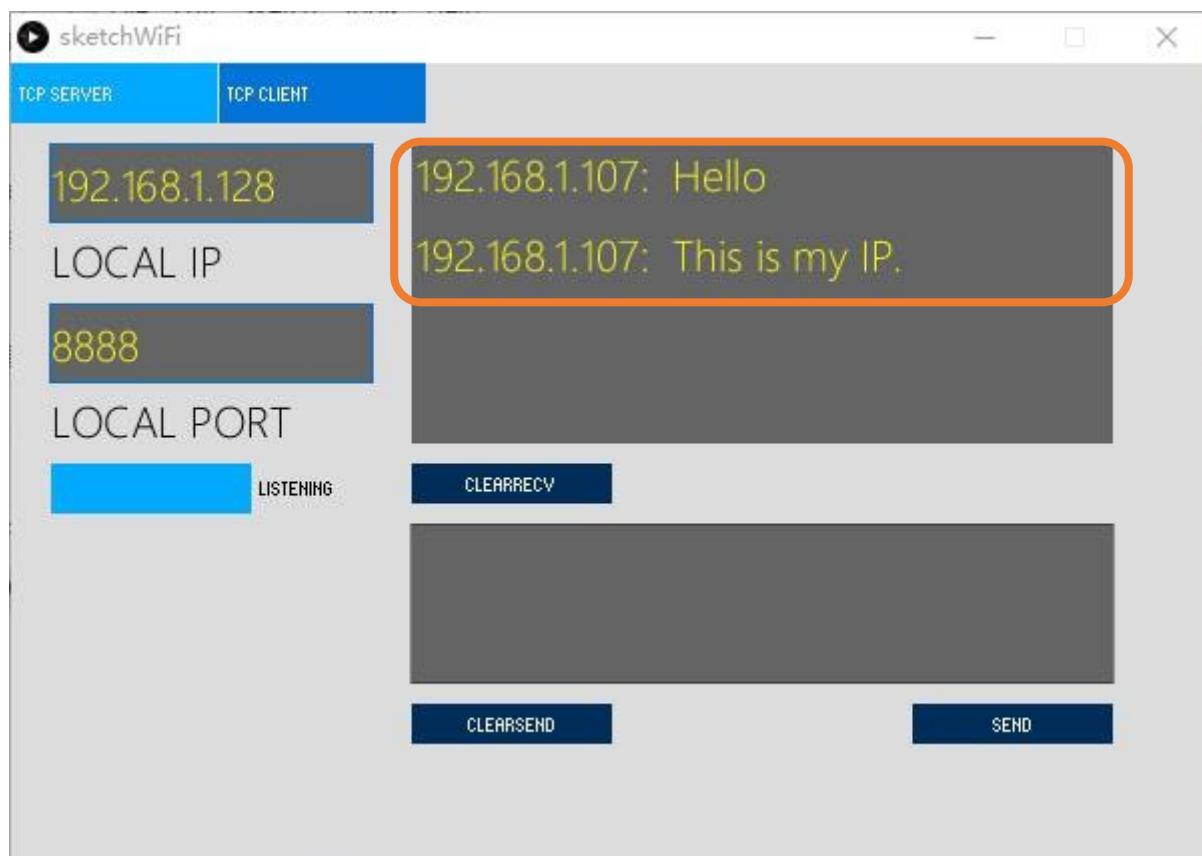

### Sketch\_38.1\_As\_Client

The following is the program code:

```
1 #include "WiFiS3.h"
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****" //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888     //input the remote port which is the remote provide
7 WiFiClient client;
8
9 void setup() {
10   Serial.begin(115200);
11   delay(10);
12
13   WiFi.begin(ssid_Router, password_Router);
14   Serial.print("\nWaiting for WiFi... ");
15   while (WiFi.status() != WL_CONNECTED) {
16     Serial.print(".");
17     delay(500);
18   }
19   Serial.println("");
20   Serial.println("WiFi connected");
21   Serial.println("IP address: ");
22   Serial.println(WiFi.localIP());
23   delay(500);
24
25   Serial.print("Connecting to ");
26   Serial.println(REMOTE_IP);
27
28   while (!client.connect(REMOTE_IP, REMOTE_PORT)) {
29     Serial.println("Connection failed.");
30     Serial.println("Waiting a moment before retrying... ");
31   }
32   Serial.println("Connected");
33   client.print("Hello\n");
34   client.print("This is my IP. \n");
35
36 void loop() {
37   if (client.available() > 0) {
38     delay(20);
39     //read back one line from the server
40     String line = client.readString();
41     Serial.println(REMOTE_IP + String(":") + line);
```

```

42 }
43 if (Serial.available() > 0) {
44     delay(20);
45     String line = Serial.readString();
46     client.print(line);
47 }
48 if (client.connected () == 0) {
49     client.stop();
50     WiFi.disconnect();
51 }
52 }
```

Add WiFi function header file.

```
1 #include "WiFiS3.h"
```

Enter the actual router name, password, remote server IP address, and port number.

```

3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****"   //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888      //input the remote port which is the remote provide
```

Apply for the method class of WiFiClient.

```
7 WiFiClient client;
```

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please push the reset key.

```

13 WiFi.begin(ssid_Router, password_Router);
14 Serial.print("\nWaiting for WiFi... ");
15 while (WiFi.status() != WL_CONNECTED) {
16     Serial.print(".");
17     delay(500);
18 }
```

Send connection request to remote server until connect successfully. When connect successfully, print out the connecting prompt on the serial monitor and send messages to remote server.

```

28 while (!client.connect(REMOTE_IP, REMOTE_PORT)) {//Connect to Server
29     Serial.println("Connection failed.");
30     Serial.println("Waiting a moment before retrying... ");
31 }
32 Serial.println("Connected");
33 client.print("Hello\n");
```

When control board(wifi) receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

```

37 if (client.available() > 0) {
38     delay(20);
39     //read back one line from the server
40     String line = client.readString();
41     Serial.println(REMOTE_IP + String(":") + line);
42 }
```

```
43 if (Serial.available() > 0) {  
44     delay(20);  
45     String line = Serial.readString();  
46     client.print(line);  
47 }
```

If the server is disconnected, turn off WiFi of control board.

```
48 if (client.connected () == 0) {  
49     client.stop();  
50     WiFi.disconnect();  
51 }
```

#### Reference

##### Class Client

Every time when using Client, you need to include header file "WiFiS3.h."

**connect(ip, port, timeout)/connect(\*host, port, timeout)**: establish a TCP connection.

**ip, \*host**: ip address of target server

**port**: port number of target server

**timeout**: connection timeout

**connected()**: judge whether client is connecting. If return value is 1, then connect successfully; If return value is 0, then fail to connect.

**stop()**: stop tcp connection

**print()**: send data to server connecting to client

**available()**: return to the number of bytes readable in receive buffer, if no, return to 0 or -1.

**read()**: read one byte of data in receive buffer


**readString()**: read string in receive buffer

## Project 8.2 As Server

In this section, control board(wifi) is used as a server to wait for the connection and communication of client on the same LAN.

### Component List

Control board x1

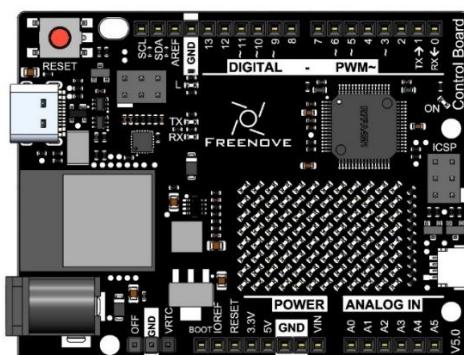


USB cable x1



### Circuit


Connect Freenove control board(wifi) to the computer using a USB cable.

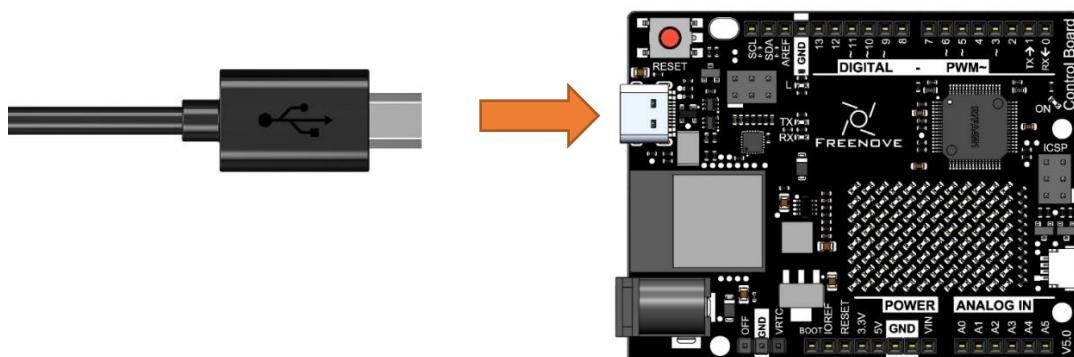

## Sketch

Before running Sketch, please modify the contents of the box below first.

### Sketch\_8.2.1

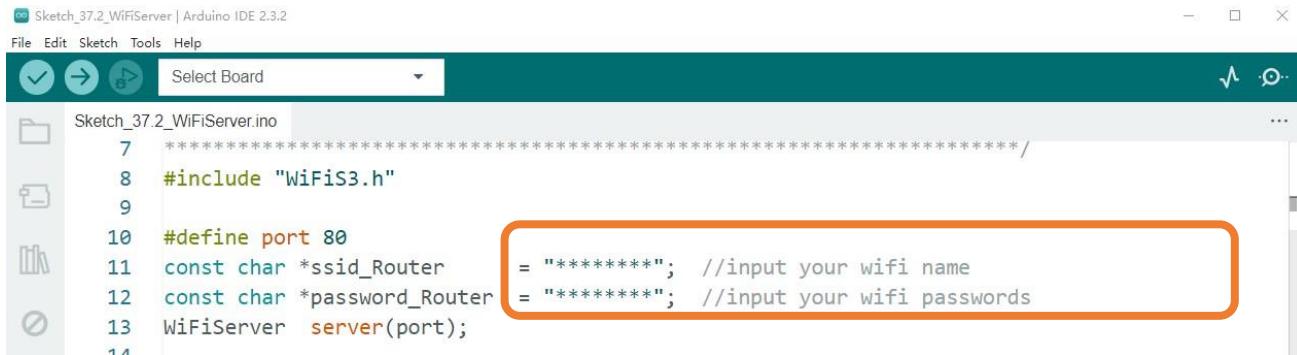


```

Sketch_37.2_WiFiServer | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Select Board
Sketch_37.2_WiFiServer.ino
7 *****
8 #include "WiFiS3.h"
9
10 #define port 80
11 const char *ssid_Router
12 const char *password_Router
13 WiFiServer server(port);
14

```

Compile and upload code to control board(wifi) , open the serial monitor and set the baud rate to 115200. Turn on server mode for control board(wifi), waiting for the connection of other devices on the same LAN. Once a device connects to server successfully, they can send messages to each other. If the control board(wifi) fails to connect to router, press the reset button as shown below and wait for control board(wifi) to run again.

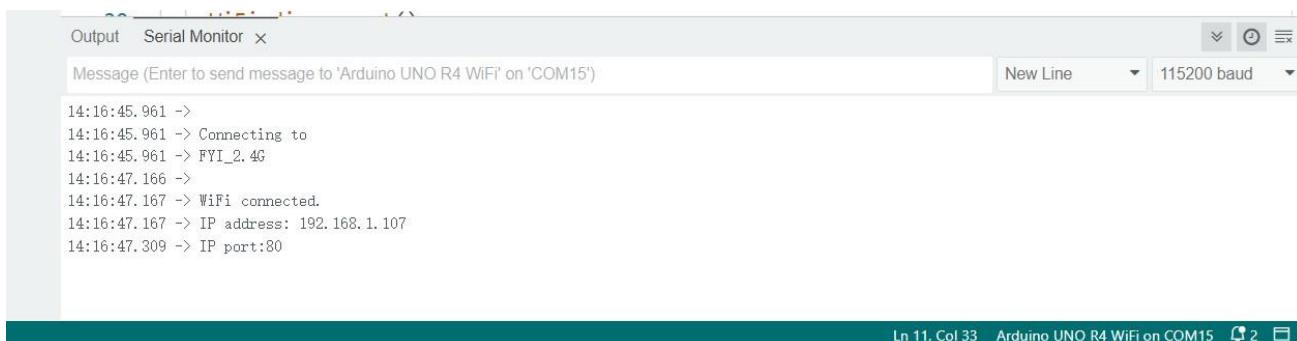


### Serial Monitor



Processing:

Open the “**Sketches\Sketch\_7.2.1\_WiFiServer\sketchWiFi\sketchWiFi.pde**”.

Based on the messages printed by the serial monitor, enter correct IP address and serial port in Processing to establish connection and make communication.

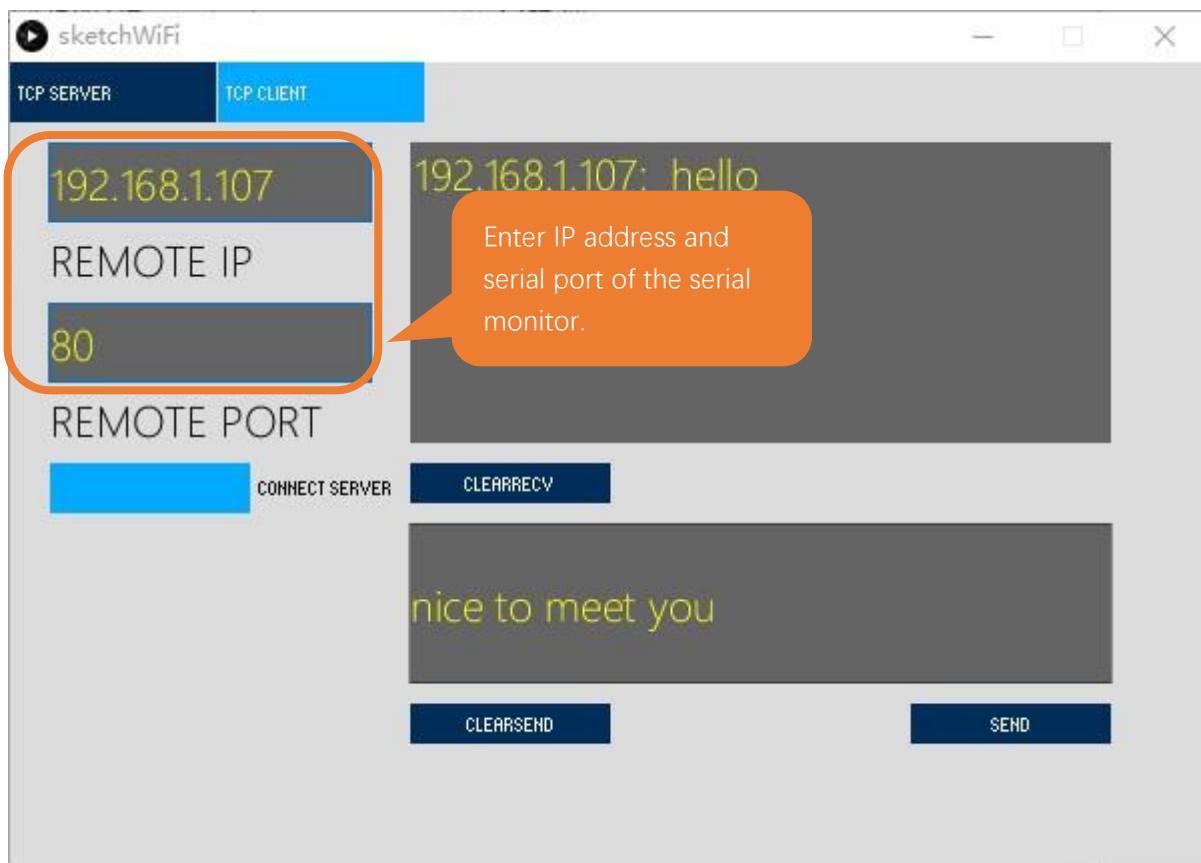

The following is the program code:

```
1 #include "WiFiS3.h"
2
3 #define port 80
4 const char *ssid_Router      = "*****"; //input your wifi name
5 const char *password_Router  = "*****"; //input your wifi passwords
6 WiFiServer server(port);
7
8 void setup()
9 {
10     Serial.begin(115200);
11     Serial.printf("\nConnecting to ");
12     Serial.println(ssid_Router);
13     WiFi.disconnect();
14     WiFi.begin(ssid_Router, password_Router);
15     delay(1000);
16     while (WiFi.status() != WL_CONNECTED) {
17         delay(500);
18         Serial.print(".");
19     }
20     Serial.println("");
21     Serial.println("WiFi connected.");
```

```

22   Serial.print("IP address: ");
23   Serial.println(WiFi.localIP());
24   Serial.printf("IP port: %d\n", port);
25   server.begin(port);
26   WiFi.setAutoConnect(true);
27   WiFi.setAutoReconnect(true);
28 }
29
30 void loop() {
31   WiFiClient client = server.available();           // listen for incoming clients
32   if (client) {                                     // if you get a client
33     Serial.println("Client connected.");
34     while (client.connected()) {                   // loop while the client's connected
35       if (client.available()) {                   // if there's bytes to read from the
36         Serial.println(client.readStringUntil('\n')); // print it out the serial monitor
37         while(client.read()>0);                  // clear the wifi receive area cache
38       }
39       if(Serial.available()){                     // if there's bytes to read from the
36         Serial.println(client.readStringUntil('\n')); // print it out the client.
37         while(Serial.read()>0);                  // clear the wifi receive area cache
38       }
39     }
40     client.stop();                                // stop the client connecting.
41     Serial.println("Client Disconnected.");
42   }
43 }
44 }
```

Apply for method class of WiFiServer.

6	WiFiServer server(port);           //Apply for a Server object whose port number is 80
---	----------------------------------------------------------------------------------------

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please push the reset key.

13	WiFi.disconnect();
14	WiFi.begin(ssid_Router, password_Router);
15	delay(1000);
16	while (WiFi.status() != WL_CONNECTED) {
17	delay(500);
18	Serial.print(".");
19	}
20	Serial.println("");
21	Serial.println("WiFi connected.");

Print out the IP address and port number of control board(wifi).

22	Serial.print("IP address: ");
23	Serial.println(WiFi.localIP());           //print out IP address of ESP32

```
24 Serial.printf("IP port: %d\n", port); //Print out ESP32's port number
```

Turn on server mode of control board(wifi), start automatic connection and turn on automatic reconnection.

```
25 server.begin(); //Turn ON ESP32 as Server mode
26 WiFi.setAutoConnect(true);
27 WiFi.setAutoReconnect(true);
```

When control board(wifi) receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

```
35 if (client.available()) { // if there's bytes to read from the
  client
36   Serial.println(client.readStringUntil('\n')); // print it out the serial monitor
37   while(client.read()>0); // clear the wifi receive area cache
38 }
39   if(Serial.available()){ // if there's bytes to read from the
  serial monitor
40     client.print(Serial.readStringUntil('\n')); // print it out the client.
41     while(Serial.read()>0); // clear the wifi receive area cache
42 }
```

## Reference

### Class Server

Every time use Server functionality, we need to include header file "WiFiS3.h".

**WiFiServer(uint16\_t port=80, uint8\_t max\_clients=4):** create a TCP Server.

**port:** ports of Server; range from 0 to 65535 with the default number as 80.

**max\_clients:** maximum number of clients with default number as 4.

**begin(port):** start the TCP Server.

**port:** ports of Server; range from 0 to 65535 with the default number as 0.

**setNoDelay(bool nodelay):** whether to turn off the delay sending functionality.

**nodelay:** true stands for forbidden Nagle algorithm.

**close():** close tcp connection.

**stop():** stop tcp connection.


# Chapter 9 Control LED with Web (WiFi Board)

In this chapter, we will use control board to make a simple smart home. We will learn how to control LED lights through web pages.

## Project 9.1 Control the LED with Web

In this project, we need to build a Web Service and then use the control board to control the LED through the Web browser of the phone or PC. Through this example, you can remotely control the appliances in your home to achieve smart home.

### Component List

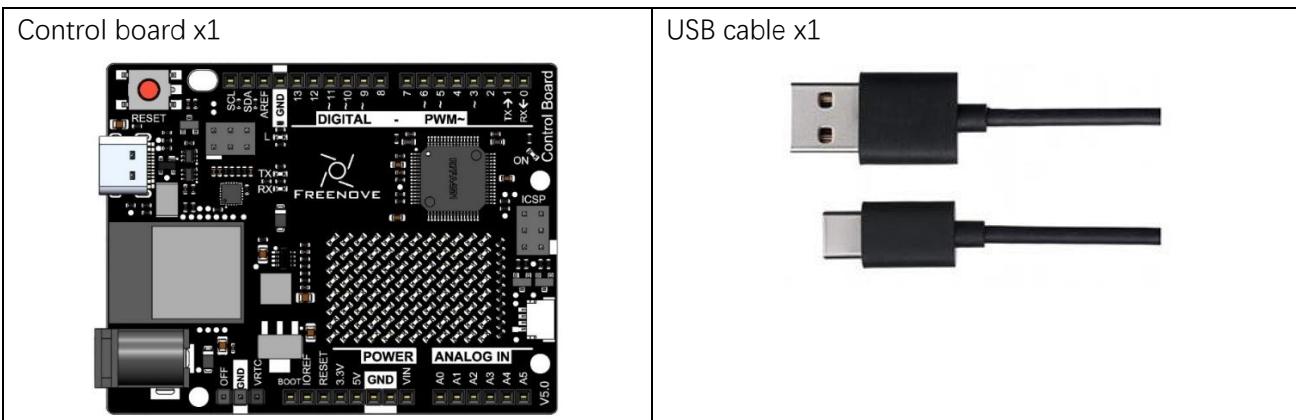

## Component knowledge

### HTML

HyperText Markup Language (HTML) is a standard Markup Language for creating web pages. It includes a set of tags that unify documents on the network and connect disparate Internet resources into a logical whole. HTML text is descriptive text composed of HTML commands that describe text, graphics, animations, sounds, tables, links, etc. The extension of the HTML file is HTM or HTML. Hyper Text is a way to organize information. It uses hyperlinks to associate words and charts in Text with other information media. These related information media may be in the same Text, other files, or files located on a remote computer. This way of organizing information connects the information resources distributed in different places, which is convenient for people to search and retrieve information.

The nature of the Web is hypertext Markup Language (HTML), which can be combined with other Web technologies (e.g., scripting languages, common gateway interfaces, components, etc.) to create powerful Web pages. Thus, HYPERtext Markup Language (HTML) is the foundation of World Wide Web (Web) programming, that is, the World Wide Web is based on hypertext. Hypertext Markup Language is called hypertext Markup language because the text contains so-called "hyperlink" points.

You can build your own WEB site using HTML, which runs on the browser and is parsed by the browser.

Example analysis is shown in the figure below:



**<!DOCTYPE html>**: Declare it as an HTML5 document

**<html>**: Is the root element of an HTML page

**<head>**: Contains meta data for the document, such as &lt; meta charset="utf-8" &gt; Define the web page encoding format to UTF-8.

**<title>**: Notes the title of the document

**<body>**: Contains visible page content


**<h1>**: Define a big heading

**<p>**: Define a paragraph

For more information, please visit: <https://developer.mozilla.org/en-US/docs/Web/HTML>

## Circuit

Connect the board to the computer using the USB cable.

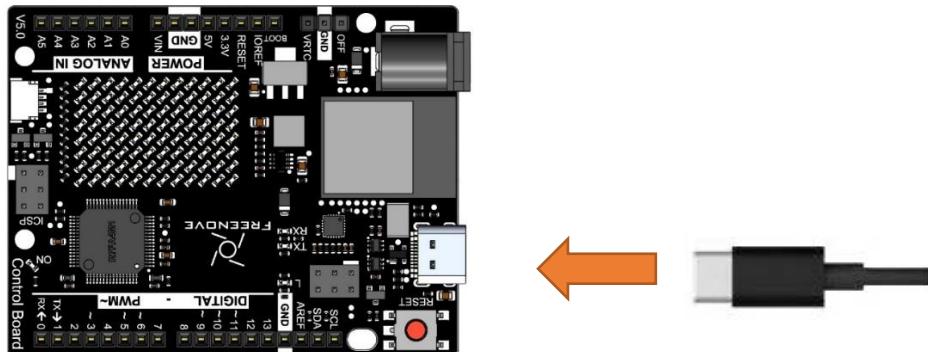

## Sketch

### Sketch\_9.1.1

 A screenshot of the Arduino IDE interface. The title bar shows "Sketch\_38.1.1\_Control\_the\_LED\_with\_Web | Arduino IDE 2.3.2". The menu bar includes File, Edit, Sketch, Tools, and Help. The toolbar on the left has icons for save, upload, and select board. The central workspace shows the code for "Sketch\_38.1.1\_Control\_the\_LED\_with\_Web.ino". The code is as follows:
 

```

11  *****/
12 #include "WiFiS3.h"
13
14 // Replace with your network credentials
15 char* ssid      = "*****";
16 char* password = "*****".
17
18 // Set web server port number to 80
19 WiFiServer server(80);
20 // Variable to store the HTTP request
21 String header;
22 // Auxiliar variables to store the current output state
23 String PIN_LEDState = "OFF";
24
25 // Current time
26 unsigned long currentTime = millis();
27 // Previous time
28 unsigned long previousTime = 0;
29 // Define timeout time in milliseconds (example: 2000ms = 2s)
30 const long timeoutTime = 2000;
31
  
```

 A callout bubble with an orange arrow points to the lines 14-16, which define the WiFi SSID and password. The text inside the bubble says "Enter the correct Router name and password."

Upload the code to the control board, open the serial monitor and set the board rate to 115200. After the board connects to WiFi successfully, the IP address will be printed out, as shown below.



When Control Board successfully connects to "ssid\_Router", serial monitor will print out the IP address assigned to Control Board by the router. Access <http://192.168.1.26> in a computer browser on the LAN. [As shown in the following figure:](#)

The screenshot shows a web browser window with the following details:

- Title bar: Control Board Web Server
- Address bar: http://192.168.1.81
- Content area:
 

**Control Board Web Server**

GPIO state: OFF

**ON**

**OFF**

You can click the corresponding button to control the LED on and off.

The following is the program code:

```

1 #include "WiFiS3.h"
2
3 // Replace with your network credentials
4 char* ssid      = "*****";
5 char* password = "*****";
```

```
6 // Set web server port number to 80
7 WiFiServer server(80);
8 // Variable to store the HTTP request
9 String header;
10 // Auxiliar variables to store the current output state
11 String PIN_LEDState = "OFF";
12
13 // Current time
14 unsigned long currentTime = millis();
15 // Previous time
16 unsigned long previousTime = 0;
17 // Define timeout time in milliseconds (example: 2000ms = 2s)
18 const long timeoutTime = 2000;
19
20 void setup() {
21   Serial.begin(115200);
22   // Initialize the output variables as outputs
23   pinMode(LED_BUILTIN, OUTPUT);
24   digitalWrite(LED_BUILTIN, LOW);
25
26   // Connect to Wi-Fi network with SSID and password
27   Serial.print("Connecting to ");
28   Serial.println(ssid);
29   WiFi.begin(ssid, password);
30   while (WiFi.status() != WL_CONNECTED) {
31     delay(500);
32     Serial.print(".");
33   }
34   // Print local IP address and start web server
35   Serial.println("");
36   Serial.println("WiFi connected.");
37   Serial.println("IP address: ");
38   Serial.println(WiFi.localIP());
39   server.begin();
40 }
41
42 void loop() {
43   WiFiClient client = server.available(); // Listen for incoming clients
44   if (client) { // If a new client connects,
45     Serial.println("New Client.");
46     String currentLine = ""; // make a String to hold incoming data from the
47     client
48     currentTime = millis();
49     previousTime = currentTime;
```

```
49  while (client.connected() && currentTime - previousTime <= timeoutTime) { // loop while
50    the client's connected
51    currentTime = millis();
52    if (client.available()) { // if there's bytes to read from the client,
53      char c = client.read(); // read a byte, then
54      Serial.write(c); // print it out the serial monitor
55      header += c;
56      if (c == '\n') { // if the byte is a newline character
57        // if the current line is blank, you got two newline characters in a row.
58        // that's the end of the client HTTP request, so send a response:
59        if (currentLine.length() == 0) {
60          // HTTP headers always start with a response code (e.g. HTTP/1.1 200 OK)
61          // and a content-type so the client knows what's coming, then a blank line:
62          client.println("HTTP/1.1 200 OK");
63          client.println("Content-type:text/html");
64          client.println("Connection: close");
65          client.println();
66          // turns the GPIOs on and off
67          if (header.indexOf("GET /LED_BUILTIN/ON") >= 0) {
68            Serial.println("LED_BUILTIN ON");
69            PIN_LEDState = "ON";
70            digitalWrite(LED_BUILTIN, HIGH);
71          } else if (header.indexOf("GET /LED_BUILTIN/OFF") >= 0) {
72            Serial.println("LED_BUILTIN OFF");
73            PIN_LEDState = "OFF";
74            digitalWrite(LED_BUILTIN, LOW);
75          }
76          // Display the HTML web page
77          client.println("<!DOCTYPE html><html>");
78          client.println("<head> <title>Control Board Web Server</title> <meta");
79          name="viewport" content="width=device-width, initial-scale=1">");
80          client.println("<link rel="icon" href="data:,>");
81          // CSS to style the on/off buttons
82          // Feel free to change the background-color and font-size attributes to fit your
83          preferences
84          client.println("<style>html {font-family: Helvetica; display:inline-block; margin:");
85          0px auto; text-align: center;}</style>");
86          client.println(" h1{color: #0F3376; padding: 2vh;} p{font-size: 1.5rem;}");
87          client.println(".button{background-color: #4286f4; display: inline-block; border:");
88          none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size:");
89          30px; margin: 2px; cursor: pointer;}");
90          client.println(".button2{background-color: #4286f4;display: inline-block; border:");
91          none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size:");
92          30px; margin: 2px; cursor: pointer;}</style></head>"');
```

```

    // Web Page Heading
    client.println("<body><h1>Control Board Web Server</h1>");
    client.println("<p>GPIO state: " + PIN_LEDState + "</p>");
    client.println("<p><a href=\"/LED_BUILTIN/ON\"><button class=\"button button2\">ON</button></a></p>" );
    client.println("<p><a href=\"/LED_BUILTIN/OFF\"><button class=\"button button2\">OFF</button></a></p>" );
    client.println("</body></html>");
    // The HTTP response ends with another blank line
    client.println();
    // Break out of the while loop
    break;
} else { // if you got a newline, then clear currentLine
    currentLine = "";
}
} else if (c != '\r') { // if you got anything else but a carriage return character,
    currentLine += c;      // add it to the end of the currentLine
}
// Clear the header variable
header = "";
// Close the connection
client.stop();
Serial.println("Client disconnected.");
Serial.println("");
}
}
}
// Replace with your network credentials
char* ssid      = "*****";
char* password = "*****";

```

Include the WiFi Library header file of Control Board.

```
1 #include "WiFi.h"
```

Enter correct router name and password.

```
3 // Replace with your network credentials
4 char* ssid      = "*****";
5 char* password = "*****";
```

Set Control Board in Station mode and connect it to your router.

```
30 WiFi.begin(ssid, password);
```

Check whether Control Board has connected to router successfully every 0.5s.

```
31 while (WiFi.status() != WL_CONNECTED) {
32     delay(500);
33     Serial.print(".");
}
```

```
34 }
```

Serial monitor prints out the IP address assigned to Control Board.

```
39 Serial.println(WiFi.localIP());
```

Click the button on the web page to control the LED light on and off.

```
65 // turns the GPIOs on and off
66 if (header.indexOf("GET /LED_BUILTIN/ON") >= 0) {
67     Serial.println("LED_BUILTIN ON");
68     PIN_LEDState = "ON";
69     digitalWrite(LED_BUILTIN, HIGH);
70 } else if (header.indexOf("GET /LED_BUILTIN/OFF") >= 0) {
71     Serial.println("LED_BUILTIN OFF");
72     PIN_LEDState = "OFF";
73     digitalWrite(LED_BUILTIN, LOW);
74 }
```


# Chapter 10 Bluetooth (WiFi Board)

In this chapter, we engage with the onboard Bluetooth module. Bluetooth and Wi-Fi are common wireless communication technologies.

## Project 10.1 Bluetooth Low Energy Data Passthrough

In this section, we first learn how to make simple data transmission between the control board (Bluetooth) and our phone.

### Component List

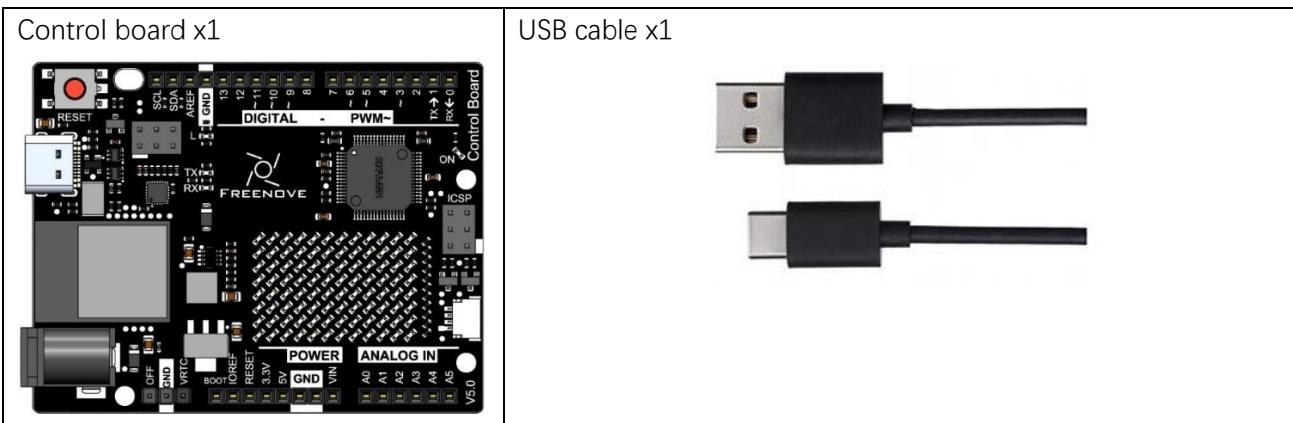

### Component knowledge

Control board's integrated Bluetooth function Bluetooth is a short-distance communication system, which can be divided into two types, namely Bluetooth Low Energy(BLE) and Classic Bluetooth. There are two modes for simple data transmission: master mode and slave mode.

#### Master mode

In this mode, works are done in the master device and it can connect with a slave device. And we can search and select slave devices nearby to connect with. When a device initiates connection request in master mode, it requires information of the other Bluetooth devices including their address and pairing passkey. After finishing pairing, it can connect with them directly.


#### Slave mode

The Bluetooth module in slave mode can only accept connection request from a host computer, but cannot initiate a connection request. After connecting with a host device, it can send data to or receive from the host device.

Bluetooth devices can make data interaction with each other, as one is in master mode and the other in slave mode. When they are making data interaction, the Bluetooth device in master mode searches and selects devices nearby to connect to. When establishing connection, they can exchange data. When mobile phones exchange data with Control board, they are usually in master mode and Control board in slave mode.


The control board is equipped with an ESP32 module, which provides Bluetooth and Wi-Fi functions, supporting speeds up to 2Mbps. The ESP32 module integrates a tracking antenna, which allows you to take advantage of the development board's connectivity without an external antenna.

However, It is worth noting that the Wi-Fi and Bluetooth modules share the same antenna, which means you cannot use Bluetooth and Wi-Fi at the same time.

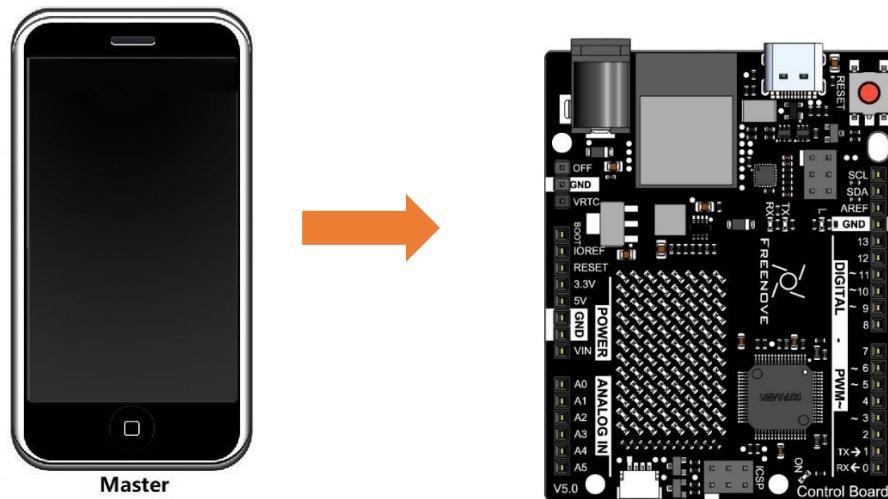

## Circuit

Connect Freenove Control board to the computer using the USB cable.

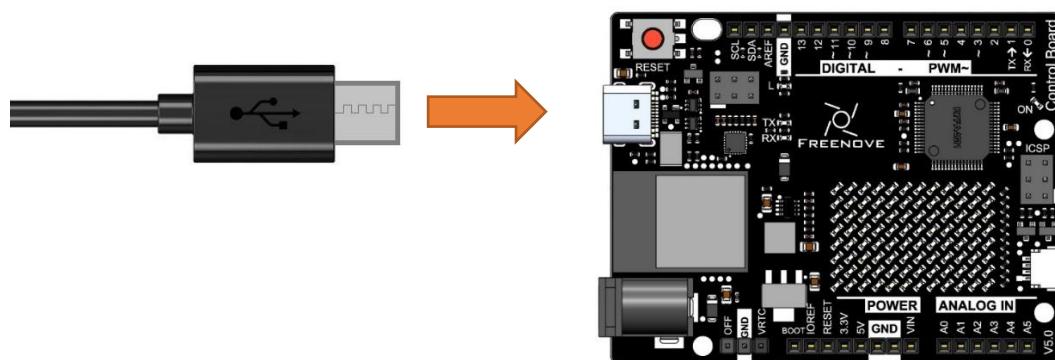


## Sketch

### Lightblue


If you can't install Serial Bluetooth on your phone, try LightBlue. If you do not have this software installed on your phone, you can refer to this link:

<https://apps.apple.com/us/app/lightblue/id557428110#?platform=iphone.>

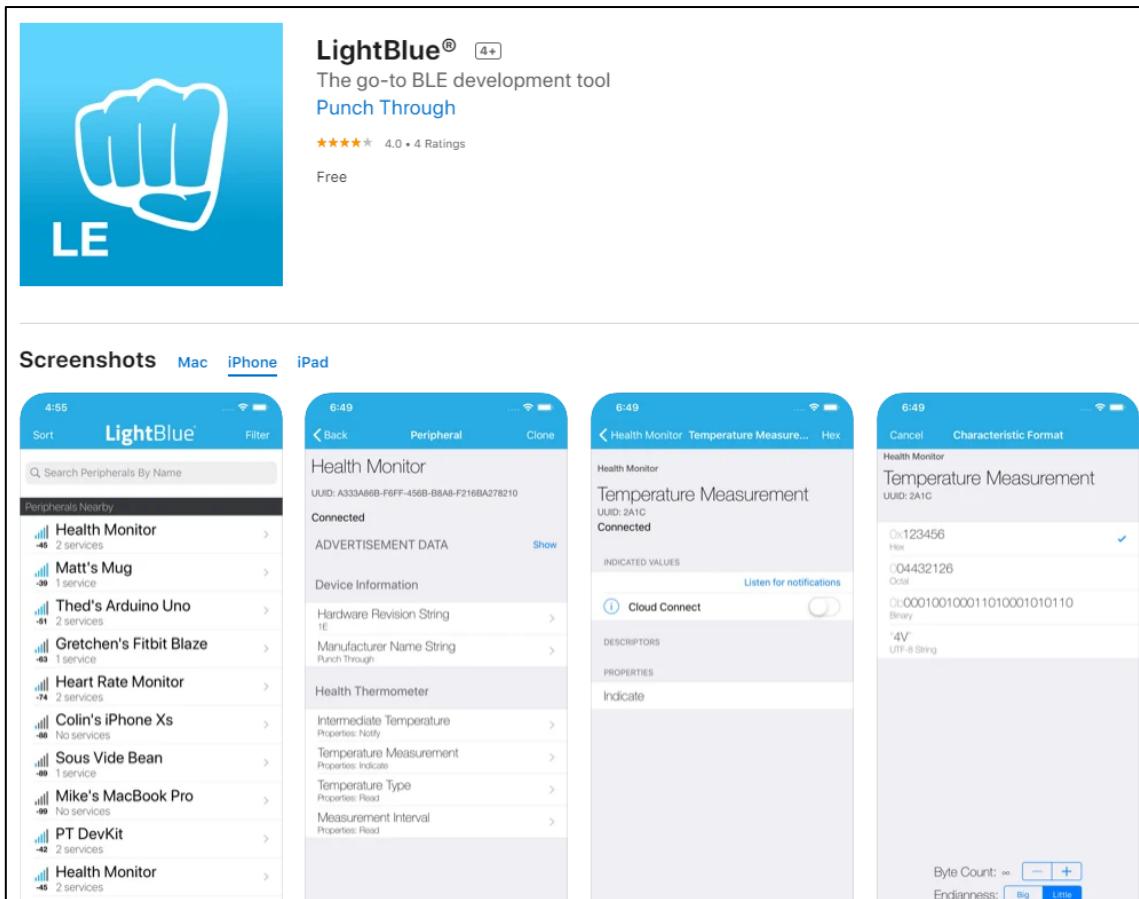

Step1. Upload the code of Project 9.1 to control board.

Step2. Click on serial monitor.

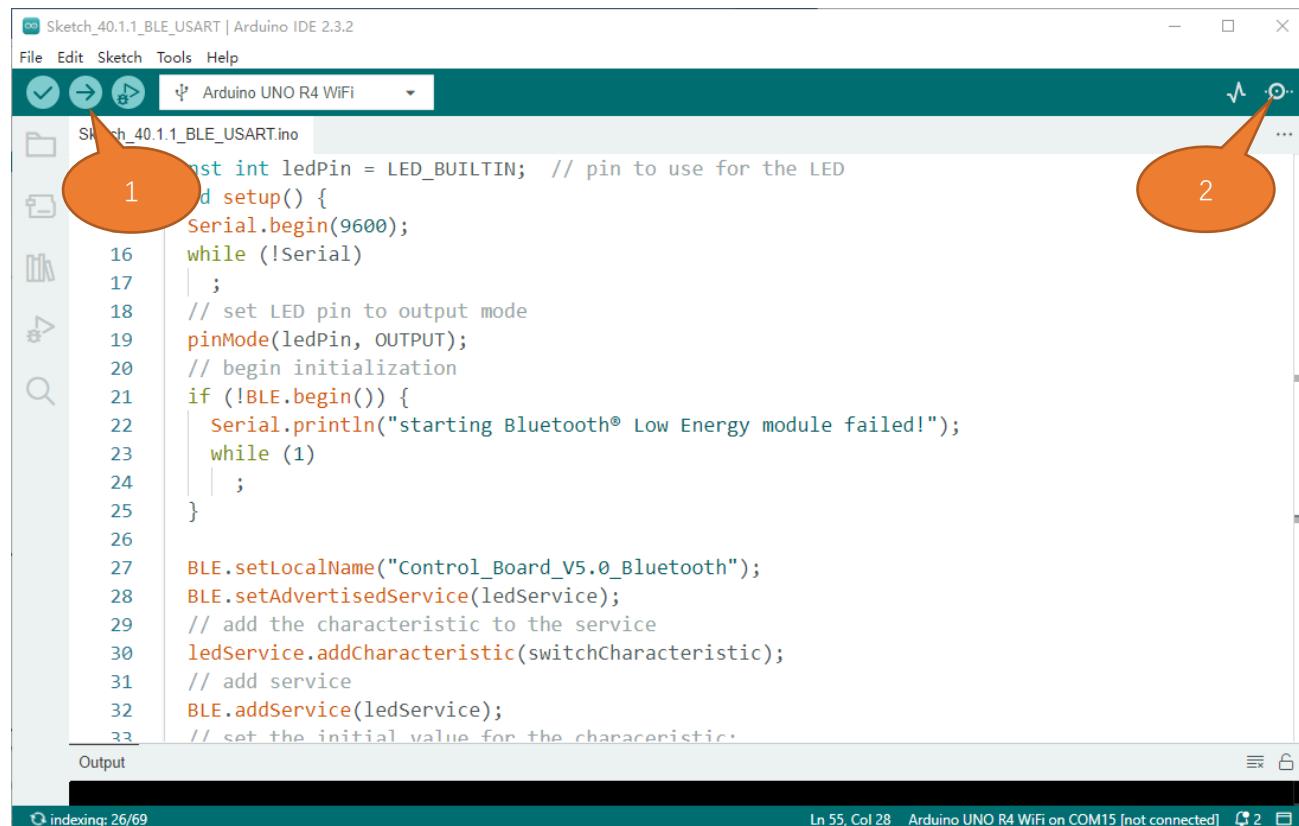

```
Sketch_40.1.1_BLE_USART | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Sketch_40.1.1_BLE_USART.ino
1  int ledPin = LED_BUILTIN; // pin to use for the LED
2  void setup() {
3      Serial.begin(9600);
4      while (!Serial)
5          ;
6      // set LED pin to output mode
7      pinMode(ledPin, OUTPUT);
8      // begin initialization
9      if (!BLE.begin()) {
10         Serial.println("starting Bluetooth® Low Energy module failed!");
11         while (1)
12             ;
13     }
14
15     BLE.setLocalName("Control_Board_V5.0_Bluetooth");
16     BLE.setAdvertisedService(ledService);
17     // add the characteristic to the service
18     ledService.addCharacteristic(switchCharacteristic);
19     // add service
20     BLE.addService(ledService);
21     // set the initial value for the characteristic.
22
23
24
25
26
27
28
29
30
31
32
33
```


Output

indexing: 26/69 Ln 55, Col 28 Arduino UNO R4 WiFi on COM15 [not connected] 2

Step3. Set baud rate to 9600.




Turn ON Bluetooth on your phone, and open the Lightblue APP.

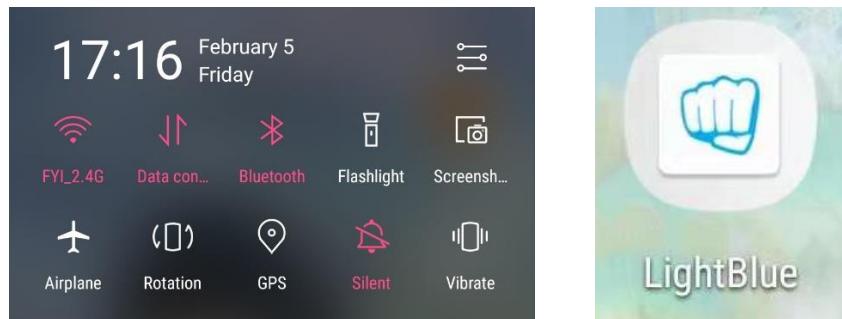

In the Scan page, swipe down to refresh the name of Bluetooth that the phone searches for. Click Control\_Board\_V5.0\_Bluetooth.

Click "Receive". Select the appropriate Data format in the box to the right of Data Format. For example, HEX for hexadecimal, utf-string for character, Binary for Binary, etc. Then click SUBSCRIBE.

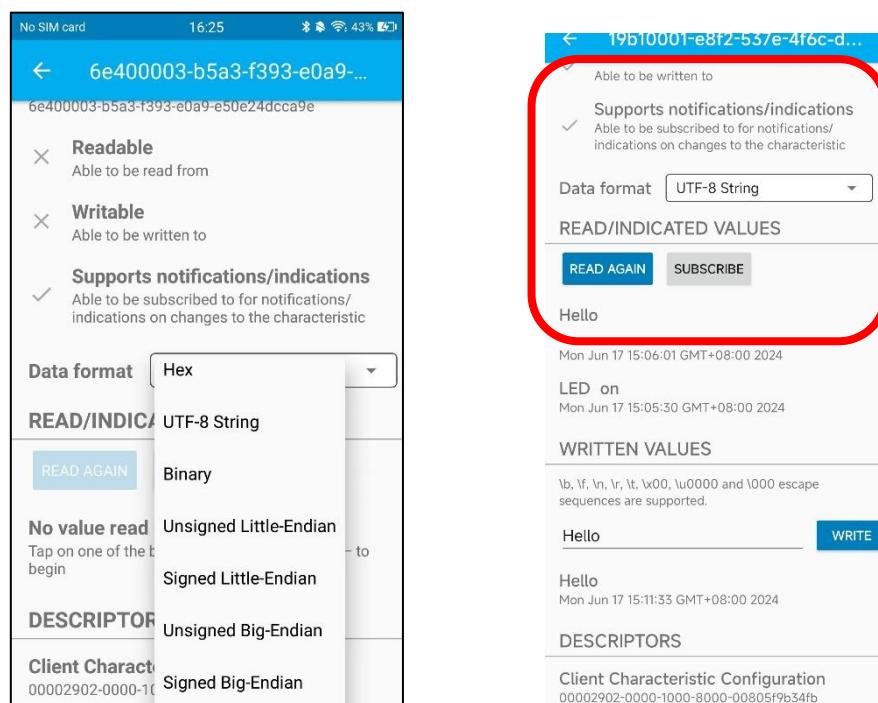

Back to the serial monitor on your computer. You can type anything in the left border of Send, and then click Send.



The last received data will be printed when the READ AGAIN button on the app is tapped.

The screenshot shows a mobile application interface for managing a Bluetooth characteristic. At the top, there's a blue header bar with a back arrow and the identifier "19b10001-e8f2-537e-4f6c-d...". Below the header, there are two sections with checkmarks:

- Able to be written to
- Supports notifications/indications

Under "Supports notifications/indications", it says "Able to be subscribed to for notifications/indications on changes to the characteristic".

The "Data format" is set to "UTF-8 String", which is highlighted with a red rectangle.


In the "READ/INDICATED VALUES" section, there are two entries:

- "Hello" (highlighted with a red rectangle) with a timestamp: Mon Jun 17 15:06:01 GMT+08:00 2024
- "LED on" with a timestamp: Mon Jun 17 15:05:30 GMT+08:00 2024

The "WRITTEN VALUES" section contains a text input field with "Hello" and a "WRITE" button.

The "DESCRIPTORS" section shows the Client Characteristic Configuration value: 00002902-0000-1000-8000-00805f9b34fb.

Similarly, you can select “Send” on your phone. Set Data format, and then enter anything in the sending box and click Write to send.

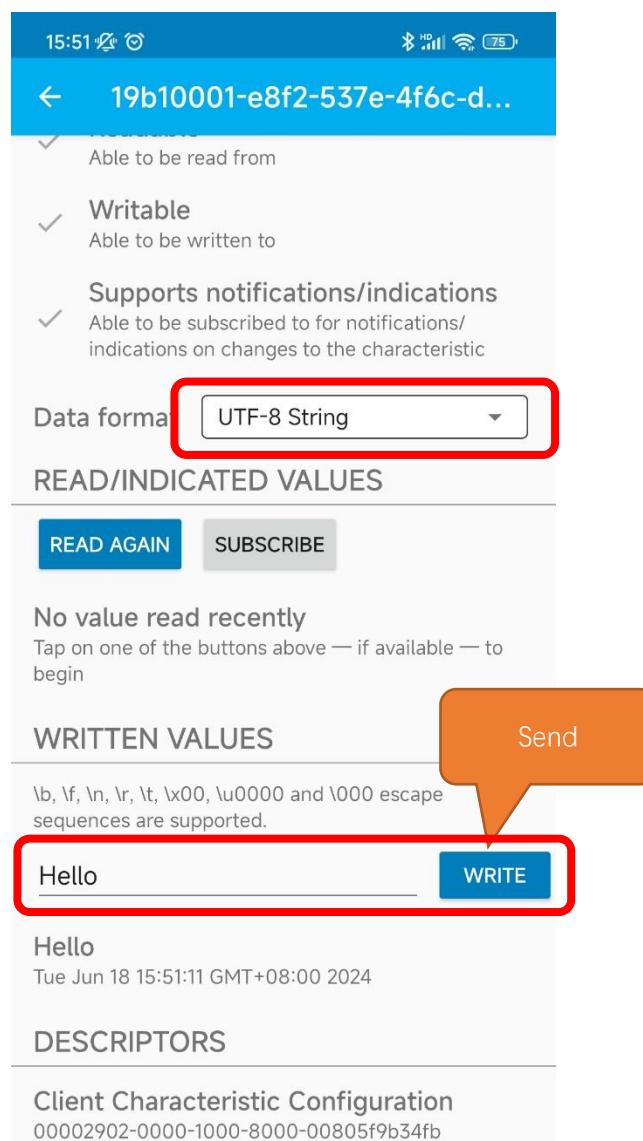

And the computer will receive the message from the mobile Bluetooth.



And now data can be transferred between your mobile phone and computer via control board.

The following is the program code:

```
1 #include <ArduinoBLE.h>
2 #include "String.h"
3
4 BLEService ledService("19B10000-E8F2-537E-4F6C-D104768A1214"); // Bluetooth® Low Energy LED
5 Service
6 // Bluetooth® Low Energy LED Switch Characteristic - custom 128-bit UUID, read and writable by
7 central
8 BLECharacteristic switchCharacteristic("19B10001-E8F2-537E-4F6C-D104768A1214", BLERead | 
9 BLEWrite | BLENotify | BLEBroadcast, 20);
10
11 String inputString = ""; // a String to hold incoming data
12 bool stringComplete = false; // whether the string is complete
13 long lasttime = 0;
14
15 const int ledPin = LED_BUILTIN; // pin to use for the LED
16 void setup() {
17   Serial.begin(9600);
18   while (!Serial)
19     ;
20   // set LED pin to output mode
21   pinMode(ledPin, OUTPUT);
22   // begin initialization
23   if (!BLE.begin()) {
24     Serial.println("starting Bluetooth® Low Energy module failed!");
25     while (1)
26       ;
27   }
28
29   BLE.setLocalName("Control_Board_V5.0_Bluetooth");
30   BLE.setAdvertisedService(ledService);
31   // add the characteristic to the service
32   ledService.addCharacteristic(switchCharacteristic);
33   // add service
34   BLE.addService(ledService);
35   // set the initial value for the characteristic:
36   switchCharacteristic.writeValue("LED");
37
38   BLE.setEventHandler(BLEConnected, blePeripheralConnectHandler);
39   BLE.setEventHandler(BLEDisconnected, blePeripheralDisconnectHandler);
40
41   switchCharacteristic.setEventHandler(BLEWritten, switchCharacteristicWritten);
```

```
41 // start advertising
42 BLE.advertise();
43
44 Serial.println("Bluetooth® device active, waiting for connections..");
45 }
46
47 void loop() {
48 long nowtime = millis();
49 if (nowtime - lasttime > 1000) {
50   BLE.poll();
51   Serial.print(".");
52   if (Serial.available() > 0) {
53     String str = Serial.readString();
54     const char *newValue = str.c_str();
55     switchCharacteristic.writeValue(newValue);
56   }
57   lasttime = nowtime;
58 }
59 }
60
61 void blePeripheralConnectHandler(BLEDevice central) {
62   Serial.print("Connected event, central: ");
63   Serial.println(central.address());
64 }
65
66 void blePeripheralDisconnectHandler(BLEDevice central) {
67   Serial.print("Disconnected event, central: ");
68   Serial.println(central.address());
69 }
70
71 void switchCharacteristicWritten(BLEDevice central, BLECharacteristic characteristic) {
72   Serial.print("Characteristic event, written: ");
73   uint8_t characteristicValue[20];
74   int bytesRead = characteristic.readValue(characteristicValue, sizeof(characteristicValue));
75   Serial.print("Received bytes: ");
76   for (int i = 0; i < bytesRead; i++) {
77     Serial.print(characteristicValue[i], HEX);
78     Serial.print(" ");
79   }
80   Serial.println();
81   String receivedString = "";
82   for (int i = 0; i < bytesRead; i++) {
83     receivedString += (char)characteristicValue[i];
84   }
```

```

85   Serial.println("Value: " + receivedString);
86 }
```

Initialize the BLE function and name it.

```
27   BLE.setLocalName("Control_Board_V5.0_Bluetooth");
```

Write a Callback function for BLE server to manage connection of BLE.

```

61   void blePeripheralConnectHandler(BLEDevice central) {
62     Serial.print("Connected event, central: ");
63     Serial.println(central.address());
64   }
65
66   void blePeripheralDisconnectHandler(BLEDevice central) {
67     Serial.print("Disconnected event, central: ");
68     Serial.println(central.address());
69 }
```

When the mobile phone send data to control board via BLE Bluetooth, it will print them out with serial port;

When the serial port of control board receive data, it will send them to mobile via BLE Bluetooth.

```


52   if (Serial.available() > 0) {
53     String str = Serial.readString();
54     const char *newValue = str.c_str();
55     switchCharacteristic.writeValue(newValue);
56   }
...
71   void switchCharacteristicWritten(BLEDevice central, BLECharacteristic characteristic) {
72     Serial.print("Characteristic event, written: ");
73     uint8_t characteristicValue[20];
74     int bytesRead = characteristic.readValue(characteristicValue, sizeof(characteristicValue));
75     Serial.print("Received bytes: ");
76     for (int i = 0; i < bytesRead; i++) {
77       Serial.print(characteristicValue[i], HEX);
78       Serial.print(" ");
79     }
80     Serial.println();
81     String receivedString = "";
82     for (int i = 0; i < bytesRead; i++) {
83       receivedString += (char)characteristicValue[i];
84     }
85     Serial.println("Value: " + receivedString);
86 }
```

## Project 10.2 Control LED with Bluetooth


In this section, we will further learn how to use Bluetooth to control an LED.

### Component List

Control board x1

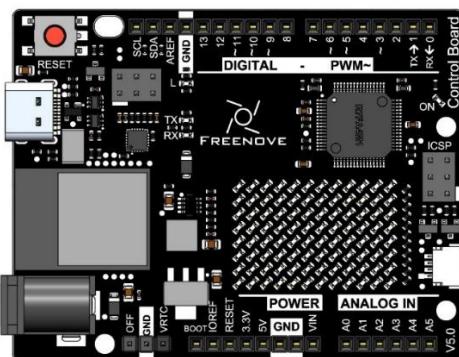

Micro USB Wire x1

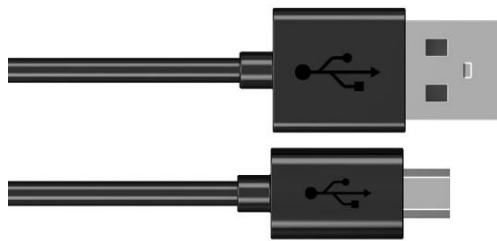

If you do not have the above components in your kit, you can use the control board alone to finish the project. The control pin of the LED in this project is the same as the one controlling the onboard LED.

## Sketch

### Sketch\_41.1.1

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch\_40.2.1\_Control\_LED\_with\_Bluetooth | Arduino IDE 2.3.2
- Toolbar:** File, Edit, Sketch, Tools, Help
- Sketch Name:** Sketch\_40.2.1\_Control\_LED\_with\_Bluetooth.ino
- Code Area:** Contains C++ code for a BLE device. The code includes initializing a BLE service, setting initial values for characteristics, registering event handlers for connection/disconnection and data written, starting advertising, and printing a message to the serial monitor.
- Serial Monitor:** Shows the output of the code execution. It displays progress messages indicating data is being written to memory at address 0x34 with size 0x1000, reaching 100% completion after 5.499 seconds, and then performing a reset.
- Status Bar:** Shows "Ln 60, Col 1" and "Arduino Uno R4 WiFi on COM15".

Compile and upload code to Control board. The operation of the APP is the same as 40.1, you only need to change the sending content to "led\_on" and "led\_off" to operate LEDs on the Control board.

Data sent from mobile APP:

← 19b10001-e8f2-537e-4f6c-d...

Data format UTF-8 String ▾

## READ/INDICATED VALUES

READ AGAIN SUBSCRIBE

No value read recently  
Tap on one of the buttons above — if available — to begin

## WRITTEN VALUES

\b, \f, \n, \r, \t, \x00, \u0000 and \000 escape sequences are supported.

led\_off WRITE

**led\_off**  
Tue Jun 18 16:21:54 GMT+08:00 2024

**led\_on**  
Tue Jun 18 16:21:48 GMT+08:00 2024

**led\_off**  
Tue Jun 18 16:21:44 GMT+08:00 2024

**led\_on**  
Tue Jun 18 16:21:39 GMT+08:00 2024

## DESCRIPTORS

**Client Characteristic Configuration**  
00002902-0000-1000-8000-00805f9b34fb

Display on the serial port of the computer:


Output    Serial Monitor X

Message (Ctrl + Enter to send message to 'ESP32S3 Dev Module' on 'COM3') New Line 115200 baud

```
Serial: 0x4000000000000000
The device started, now you can pair it with Bluetooth!
led_on
led_off
led_on
led_off
led_on
led_off
```

Ln 17, Col 17    UTF-8    ESP32S3 Dev Module on COM3    2

The phenomenon of LED

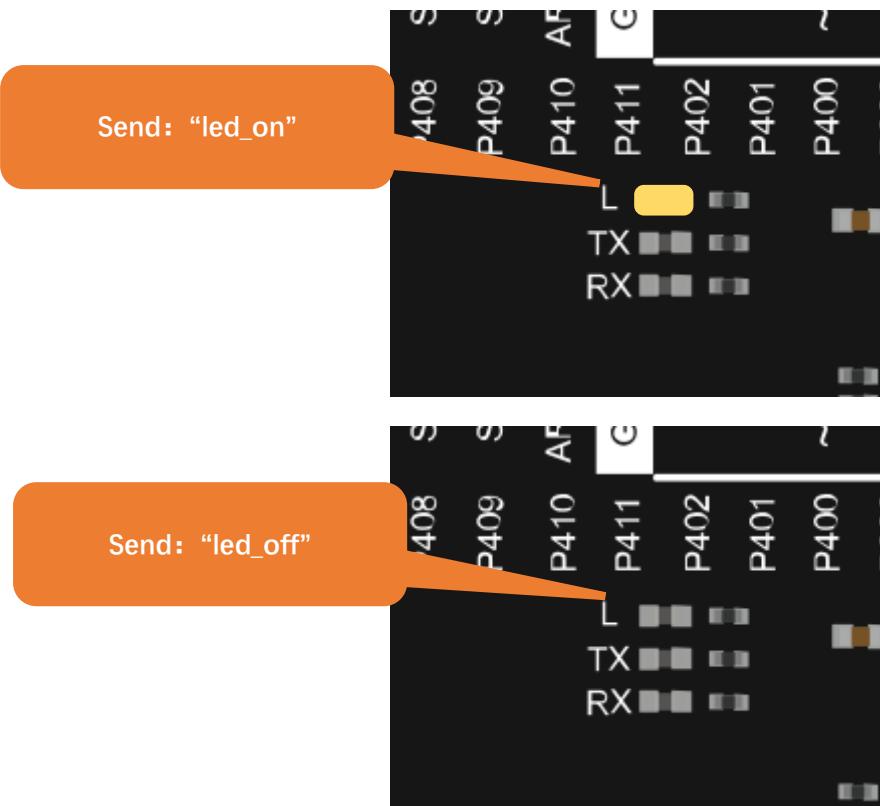

Attention: If the sending content isn't "led-on" or "led-off", then the state of LED will not change. If the LED is on, when receiving irrelevant content, it keeps on; Correspondingly, if the LED is off, when receiving irrelevant content, it keeps off.

With this example you can design more interesting projects.

The following is the program code:

```
1 #include <ArduinoBLE.h>
2 #include "String.h"
3
4 BLEService ledService("19B10000-E8F2-537E-4F6C-D104768A1214"); // Bluetooth® Low Energy LED
5 Service
6 // Bluetooth® Low Energy LED Switch Characteristic - custom 128-bit UUID, read and writable by
7 central
8 BLECharacteristic switchCharacteristic("19B10001-E8F2-537E-4F6C-D104768A1214", BLERead | 
9 BLEWrite | BLENotify | BLEBroadcast, 20);
10
11 const int ledPin = LED_BUILTIN; // pin to use for the LED
12 void setup() {
13     Serial.begin(9600);
14     while (!Serial)
15         ;
16     // set LED pin to output mode
17     pinMode(ledPin, OUTPUT);
18     // begin initialization
19     if (!BLE.begin()) {
20         Serial.println("starting Bluetooth® Low Energy module failed!");
21         while (1)
22             ;
23     }
24
25     BLE.setLocalName("Control_Board_V5.0_Bluetooth");
26     BLE.setAdvertisedService(ledService);
27     // add the characteristic to the service
28     ledService.addCharacteristic(switchCharacteristic);
29     // add service
30     BLE.addService(ledService);
31     // set the initial value for the characteristic:
32     switchCharacteristic.writeValue("Led");
33
34     BLE.setEventHandler(BLEConnected, blePeripheralConnectHandler);
35     BLE.setEventHandler(BLEDDisconnected, blePeripheralDisconnectHandler);
36
37     switchCharacteristic.setEventHandler(BLEWritten, switchCharacteristicWritten);
38
39     // start advertising
40     BLE.advertise();
41
42     Serial.println("Bluetooth® device active, waiting for connections...");
43 }
```

```
44
45 void loop() {
46     BLEDevice central = BLE.central();
47     if (central) {
48         central.poll();
49         delay(1000);
50         Serial.print(".");
51     }
52 }
53
54 void blePeripheralConnectHandler(BLEDevice central) {
55     Serial.print("Connected event, central: ");
56     Serial.println(central.address());
57 }
58
59 void blePeripheralDisconnectHandler(BLEDevice central) {
60     Serial.print("Disconnected event, central: ");
61     Serial.println(central.address());
62 }
63
64 void switchCharacteristicWritten(BLEDevice central, BLECharacteristic characteristic) {
65     Serial.print("Characteristic event, written: ");
66
67     uint8_t characteristicValue[20];
68     int bytesRead = characteristic.readValue(characteristicValue, sizeof(characteristicValue));
69
70     Serial.print("Received bytes: ");
71     for (int i = 0; i < bytesRead; i++) {
72         Serial.print(characteristicValue[i], HEX);
73         Serial.print(" ");
74     }
75     Serial.println();
76
77     String receivedString = "";
78
79     for (int i = 0; i < bytesRead; i++) {
80         receivedString += (char)characteristicValue[i];
81     }
82     Serial.println("Value: " + receivedString);
83     if (receivedString == "led_on") {
84         Serial.println("LED on");
85         digitalWrite(ledPin, HIGH); // will turn the LED on
86     }
87     if (receivedString == "led_off") { // a 0 value
```

```
88     Serial.println(F("LED off"));
89     digitalWrite(ledPin, LOW); // will turn the LED off
90 }
91 }
```

Use character string to handle function header file.

```
2 #include "String.h"
```

Initialize the BLE Bluetooth and name it as "Control\_Board\_V5.0\_Bluetooth"

```
25 BLE.setLocalName("Control_Board_V5.0_Bluetooth");
```

Compare the content in buffer array with "led\_on" and "led\_off" to see whether they are the same. If yes, execute the corresponding operation.

```
83 if (receivedString == "led_on") {
84     Serial.println("LED on");
85     digitalWrite(ledPin, HIGH); // will turn the LED on
86 }
87 if (receivedString == "led_off") { // a 0 value
88     Serial.println(F("LED off"));
89     digitalWrite(ledPin, LOW); // will turn the LED off
90 }
```

## What's Next?

THANK YOU for participating in this learning experience!

We have reached the end of this tutorial. If you find errors, omissions or you have suggestions and/or questions about this tutorial or component contents of this kit, please feel free to contact us:

[support@freenove.com](mailto:support@freenove.com)

We will make every effort to make changes and correct errors as soon as feasibly possible and publish a revised version.

If you are interesting in Processing, you can study the Processing.pdf in the unzipped folder.

If you want to learn more about Arduino, Raspberry Pi, micro:bit, robots, smart cars and other interesting products, please visit our website:

<http://www.freenove.com/>

We will continue to launch fun, cost-effective, innovative and exciting products.

Thank you again for choosing Freenove products.

# Appendix

## ASCII Table

Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char
0	00	Null	32	20	Space	64	40	Ø	96	60	`
1	01	Start of heading	33	21	!	65	41	A	97	61	a
2	02	Start of text	34	22	"	66	42	B	98	62	b
3	03	End of text	35	23	#	67	43	C	99	63	c
4	04	End of transmit	36	24	\$	68	44	D	100	64	d
5	05	Enquiry	37	25	%	69	45	E	101	65	e
6	06	Acknowledge	38	26	&	70	46	F	102	66	f
7	07	Audible bell	39	27	'	71	47	G	103	67	g
8	08	Backspace	40	28	(	72	48	H	104	68	h
9	09	Horizontal tab	41	29	)	73	49	I	105	69	i
10	0A	Line feed	42	2A	*	74	4A	J	106	6A	j
11	0B	Vertical tab	43	2B	+	75	4B	K	107	6B	k
12	0C	Form feed	44	2C	,	76	4C	L	108	6C	l
13	0D	Carriage return	45	2D	-	77	4D	M	109	6D	m
14	0E	Shift out	46	2E	.	78	4E	N	110	6E	n
15	0F	Shift in	47	2F	/	79	4F	O	111	6F	o
16	10	Data link escape	48	30	Ø	80	50	P	112	70	p
17	11	Device control 1	49	31	1	81	51	Q	113	71	q
18	12	Device control 2	50	32	2	82	52	R	114	72	r
19	13	Device control 3	51	33	3	83	53	S	115	73	s
20	14	Device control 4	52	34	4	84	54	T	116	74	t
21	15	Neg. acknowledge	53	35	5	85	55	U	117	75	u
22	16	Synchronous idle	54	36	6	86	56	V	118	76	v
23	17	End trans. block	55	37	7	87	57	W	119	77	w
24	18	Cancel	56	38	8	88	58	X	120	78	x
25	19	End of medium	57	39	9	89	59	Y	121	79	y
26	1A	Substitution	58	3A	:	90	5A	Z	122	7A	z
27	1B	Escape	59	3B	:	91	5B	[	123	7B	{
28	1C	File separator	60	3C	<	92	5C	\	124	7C	
29	1D	Group separator	61	3D	=	93	5D	]	125	7D	}
30	1E	Record separator	62	3E	>	94	5E	^	126	7E	~
31	1F	Unit separator	63	3F	?	95	5F	_	127	7F	□

## Resistor Color Code

The diagram illustrates two resistor color coding schemes:

- 4-Band-Code:** A resistor with four colored bands. The first three bands represent the resistance value (e.g., 560k), and the fourth band represents the tolerance (e.g., ±5%).
- 5-Band-Code:** A resistor with five colored bands. The first four bands represent the resistance value, and the fifth band represents the tolerance.

Below the tables, the resistor values are converted to their decimal equivalents and tolerance ranges.

COLOR	1 <sup>ST</sup> BAND	2 <sup>ND</sup> BAND	3 <sup>RD</sup> BAND	MULTIPLIER	TOLERANCE
Black	0	0	0	1Ω	
Brown	1	1	1	10Ω	± 1% (F)
Red	2	2	2	100Ω	± 2% (G)
Orange	3	3	3	1KΩ	
Yellow	4	4	4	10KΩ	
Green	5	5	5	100KΩ	± 0.5% (D)
Blue	6	6	6	1MΩ	± 0.25% (C)
Violet	7	7	7	10MΩ	± 0.10% (B)
Grey	8	8	8		± 0.05%
White	9	9	9		
Gold				0.1Ω	± 5% (J)
Silver				0.01Ω	± 10% (K)

Conversion from color bands to decimal values:

- Black: 0
- Brown: 1
- Red: 2
- Orange: 3
- Yellow: 4
- Green: 5
- Blue: 6
- Violet: 7
- Grey: 8
- White: 9
- Gold: 0.1
- Silver: 0.01

Final resistor values and tolerances:

- 4-Band-Code: 560k Ω ± 5%
- 5-Band-Code: 237 Ω ± 1%