

Welcome

Thank you for choosing Freenove products!

How to Start

When reading this, you should have downloaded the ZIP file for this product.

Unzip it and you will get a folder containing tutorials and related files. Please start with this PDF tutorial.

! Unzip the ZIP file instead of opening the file in the ZIP file directly.

! Do not move, delete or rename files in the folder just unzipped.

Unpack

Before taking out all the parts, please read the file "Unpack.pdf".

Get Support

Encounter problems? Don't worry! Refer to "TroubleShooting.pdf" or contact us.

When there are packaging damage, quality problems, questions encountering in use, etc., just send us an email. We will reply to you within one working day and provide a solution.

support@freenove.com

Attention

Pay attention to safety when using and storing this product:

- This product is not suitable for children under 12 years of age because of small parts and sharp parts.
- Minors should use this product under the supervision and guidance of adults.
- This product contains small and sharp parts. Do not swallow, prick and scratch to avoid injury.
- This product contains conductive parts. Do not hold them to touch power supply and other circuits.
- To avoid personal injury, do not touch parts rotating or moving while working.
- The wrong operation may cause overheat. Do not touch and disconnect the power supply immediately.
- Operate in accordance with the requirements of the tutorial. Fail to do so may damage the parts.
- Store this product in a dry and dark environment. Keep away from children.
- Turn off the power of the circuit before leaving.

About

Freenove provides open source electronic products and services.

Freenove is committed to helping customers learn programming and electronic knowledge, quickly implement product prototypes, realize their creativity and launch innovative products. Our services include:

- Kits for learning programming and electronics
- Kits compatible with Arduino®, Raspberry Pi®, micro:bit®, etc.
- Kits for robots, smart cars, drones, etc.
- Components, modules and tools
- Design and customization

To learn more about us or get our latest information, please visit our website:

<http://www.freenove.com>

Copyright

All the files provided in the ZIP file are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](#). You can find a copy of the license in the ZIP file.



It means you can use these files on your own derived works, in part or completely. But not for commercial use.

Freenove® brand and logo are trademarks of Freenove Creative Technology Co., Ltd. Must not be used without permission.



Other registered trademarks and their owners appearing in this document:

Arduino® is a trademark of Arduino LLC (<https://www.arduino.cc/>).

Raspberry Pi® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

micro:bit® is a trademark of Micro:bit Educational Foundation (<https://www.microbit.org/>).

Contents

Welcome	i
Contents	1
Preface	1
Control Board.....	1
Chapter 0 Getting Ready (Important).....	4
Programming Software.....	4
Installation of Development Board Support Package	7
First Use.....	8
How to install the library.....	11
Chapter 1 LED Blink.....	13
Project 1.1 Control LED with Manual Button	13
Project 1.2 Control LED with Control Board	21
How to Use the Expanding GPIO Pins	27
Chapter 2 Two LEDs Blink.....	30
Project 2.1 Two LEDs Blink.....	30
Chapter 3 LED Bar Graph	37
Project 3.1 LED Bar Graph Display	37
Chapter 4 LED Blink Smoothly.....	45
Project 4.1 LEDs Emit Different Brightness.....	45
Project 4.2 LED Blinking Smoothly	51
Chapter 5 Control LED with Push Button Switch.....	53
Project 5.1 Control LED with Push Button Switch	53
Project 5.2 Change LED State with Push Button Switch.....	57
Chapter 6 Serial.....	59
Project 6.1 Send Data through Serial	59
Project 6.2 Receive Data through Serial Port	64
Project 6.3 Application of Serial	67
Chapter 7 ADC	70
Project 7.1 ADC.....	70
Project 7.2 Control LED by Potentiometer	76
Project 7.3 Control LED by Potentiometer	79
Chapter 8 RGB LED	83
Project 8.1 Control RGB LED through Potentiometer.....	83
Project 8.2 Multicolored LED	87
Chapter 9 Buzzer	90
Project 9.1 Active Buzzer	90
Project 9.2 Passive Buzzer	96
Chapter 10 DAC.....	100
Project 10.1 DAC	100
Chapter 11 RTC	105
Project 11.1 RTC	105

Chapter 12 Motor	108
Project 12.1 Control Motor with L293D	108
Chapter 13 Servo.....	115
Project 13.1 Servo Sweep.....	115
Project 13.2 Control Servo with Potentiometer.....	119
Chapter 14 Temperature Sensor.....	122
Project 14.1 Detect the Temperature	122
Chapter 15 Joystick.....	126
Project 15.1 Joystick	126
Chapter 16 LED Matrix	130
Project 16.1 74HC595.....	130
Chapter 17 Onboard LED Matrix (WiFi Board)	137
Project 17.1 LED Matrix.....	137
Project 17.2 LED Matrix.....	140
Project 17.3 Play the game with LED matrix	143
Project 17.3.1 LED Matrix Bounce Game	143
Project 17.3.2 LED Matrix Snake Game	147
Chapter 18 I2C LCD1602	154
Project 18.1 Display the String on I2C LCD1602	155
Project 18.2 I2C LCD1602 Clock.....	161
Chapter 19 Digital Display.....	170
Project 19.1 1-digit 7-segment Display	170
Chapter 20 Infrared Remote.....	175
Project 20.1 Infrared Remote Control	175
Project 20.2 Control LED through Infrared Remote	182
Chapter 21 Ultrasonic Ranging.....	187
Project 21.1 Ultrasonic Ranging	187
Chapter 22 WiFi Working Modes	194
Project 22.1 Station mode.....	194
Project 22.2 AP mode.....	199
Chapter 23 TCP/IP.....	205
Project 23.1 As Client.....	205
Project 23.2 As Server.....	218
Chapter 24 Control LED with Web	223
Project 24.1 Control the LED with Web	223
Chapter 25 Bluetooth	231
Project 25.1 Bluetooth Low Energy Data Passthrough.....	231
Project 25.2 Control LED with Bluetooth	242
Chapter 26 USB HID	250
Project 26.1 Mouse control.....	250
Project 26.2 Keypad Control	254
Chapter 27 Soldering Circuit Board	258
Project 27.1 Solder a Buzzer	258
Project 27.2 Solder a Flowing Water Light	262

Other Components.....	267
What's Next?	269
Appendix.....	270
ASCII Table	270
Resistor Color Code	271

Preface

If you want to make some interesting projects or want to learn electronics and programming, this document will greatly help you.

Projects in this document usually contains two parts: the circuit and the code. No experience at all? Don't worry, this document will show you how to start from scratch.

If you encounter any problems, please feel free to send us an email, we will try our best to help you.

Support email: support@freenove.com

To complete these projects, you need to use a control board and software to program it, as well as some commonly used components.

Control Board

The control board is the core of a circuit. After programming, it can be used to control other components in the circuit to achieve intended functions.

There are multiple versions of Freenove control board. Your purchase may be one of the following:


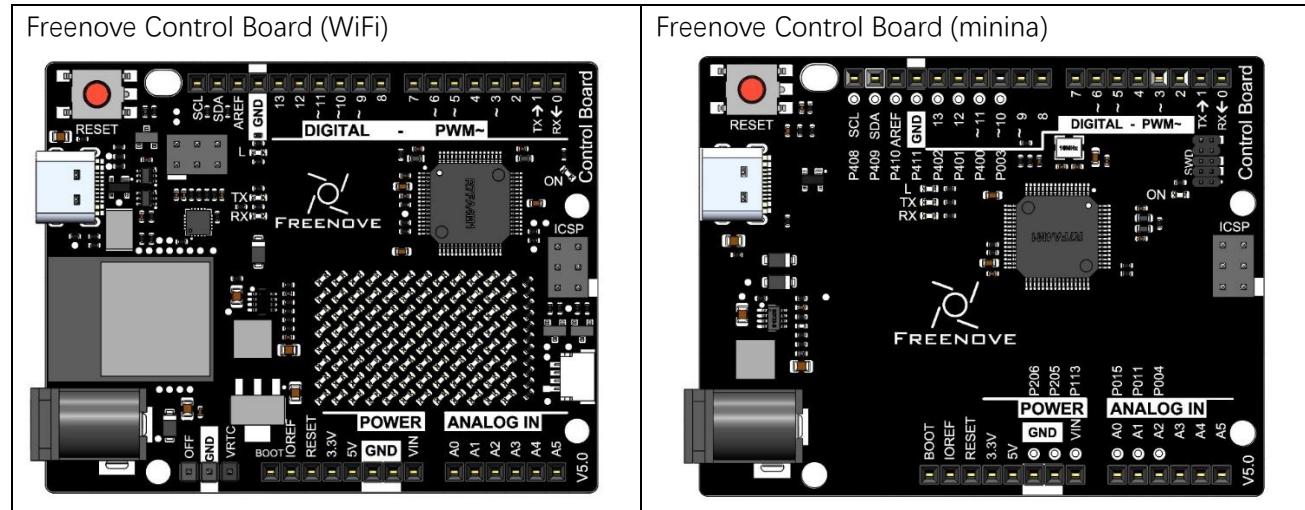


Diagram of the Freenove control board is shown below:

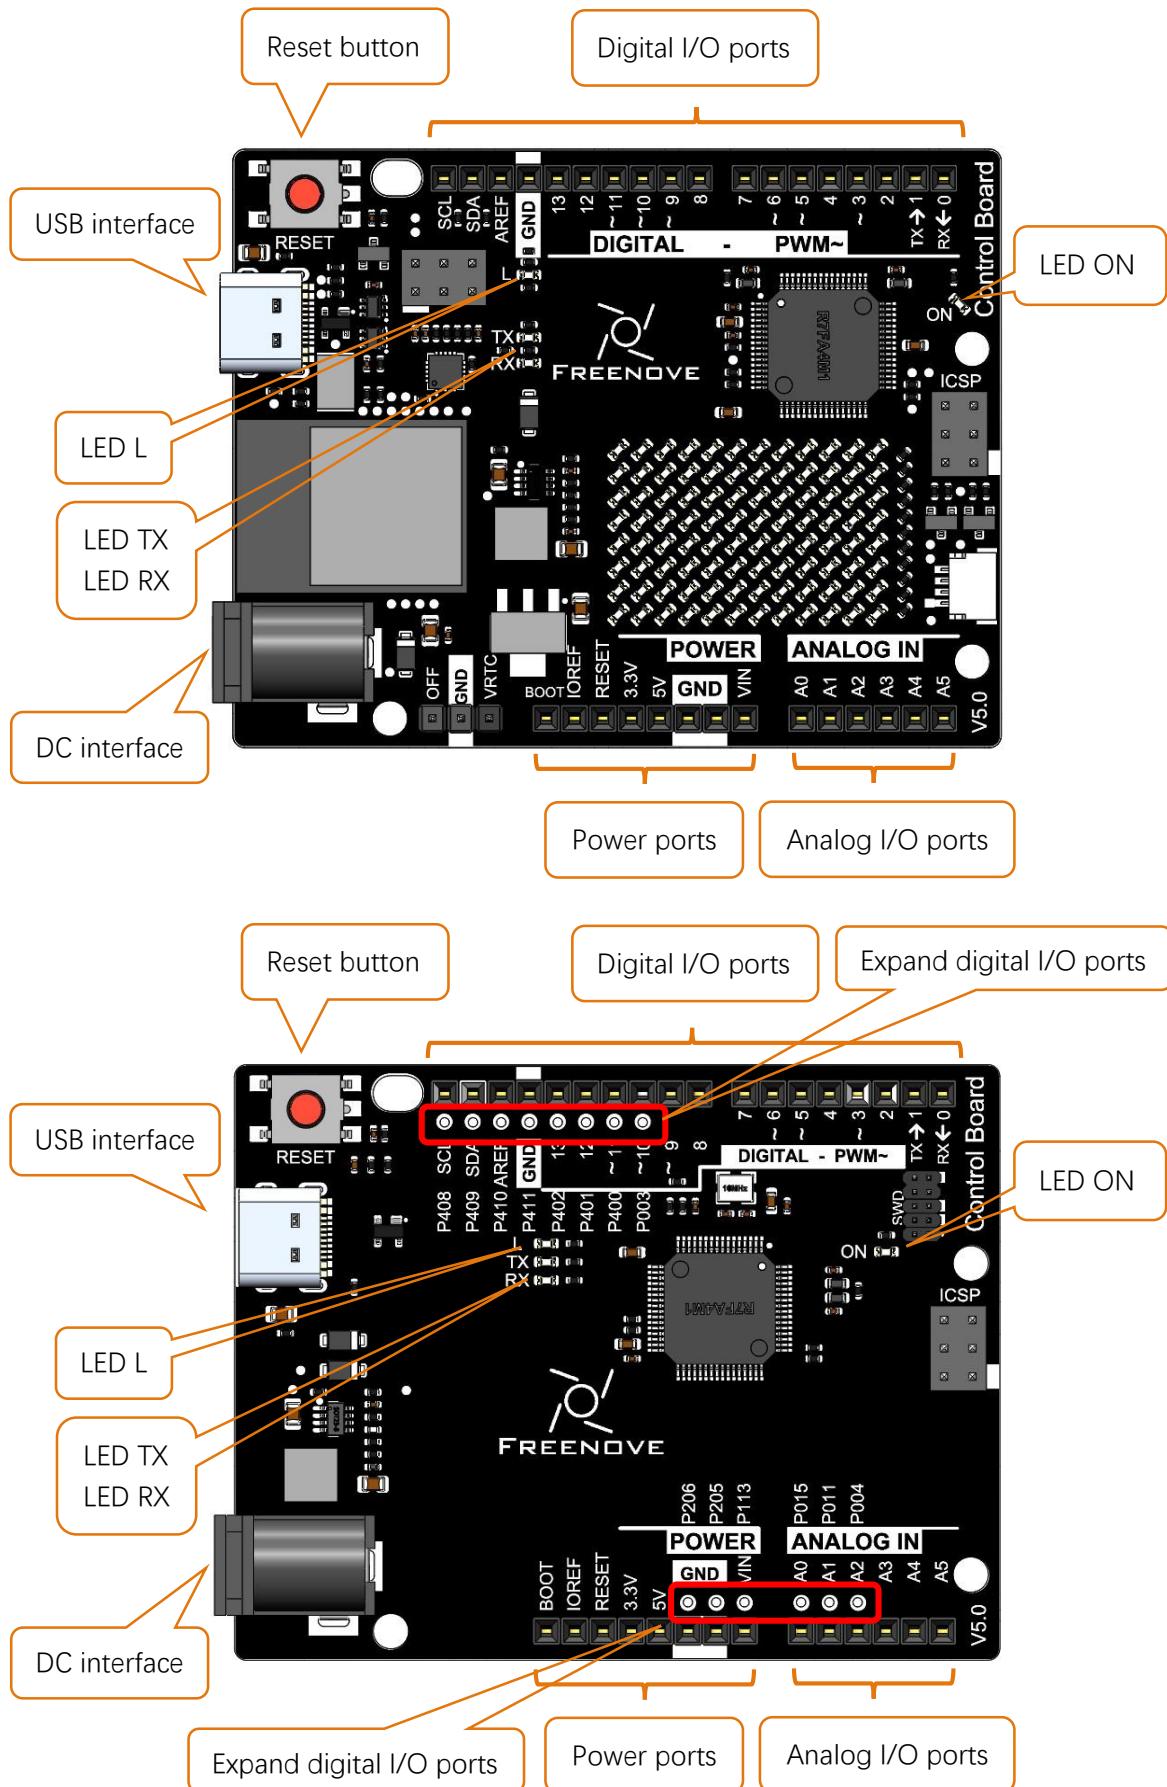

-
- Digital I/O ports is used to connect to other components or modules, to receive an input signal, or to send a control signal. Usually, we name it by adding a "D" in front of the number, such as D13 (pin 13).
 - USB interface is used to provide power, upload code or communicate with PC.
 - LED L is connected to digital I/O port 13 (pin 13).
 - LED TX, RX is used to indicate the state of the serial communication.
 - DC interface is connected DC power to provide power for the board.
 - Power ports can provide power for electronic components and modules.
 - Analog I/O ports can be used to measure analog signals.
 - LED ON is used to indicate the power state.

Chapter 0 Getting Ready (Important)

Before starting building the projects, you need to make some preparation first, which is so crucial that you must not skip.

Programming Software

We use Arduino® IDE to write and upload code for the control board, which is a free and open source.
(Arduino® is a trademark of Arduino LLC.)

Arduino IDE uses C/C++ programming language. Don't worry if you have never used it, because this document contains programming knowledge and detailed explanation of the code.

First, install Arduino IDE. Visit <https://www.arduino.cc/en/software>. Scroll down and find **Arduino IDE (2.3.X)**. Then select and download corresponding installer according to your operating system. If you are a windows user, please select the "Windows Installer".



Downloads

 A screenshot of the Arduino IDE 2.3.2 download page. It features a large blue button with the Arduino logo and the text "Arduino IDE 2.3.2". Below the button, there is a brief description of the new features and a link to the documentation. To the right, there is a sidebar titled "DOWNLOAD OPTIONS" with links for Windows, Linux, and macOS. A red arrow points from the left towards the "Arduino IDE 2.3.2" button, and an orange arrow points from the SOFTWARE tab on the main page towards the "DOWNLOAD OPTIONS" sidebar.

The new major release of the Arduino IDE is faster and even more powerful! In addition to a more modern editor and a more responsive interface it features autocompletion, code navigation, and even a live debugger.

For more details, please refer to the [Arduino IDE 2.0 documentation](#).

Nightly builds with the latest bugfixes are available through the section below.

SOURCE CODE

The Arduino IDE 2.0 is open source and its source code is hosted on [GitHub](#).

DOWNLOAD OPTIONS


- Windows** Win 10 and newer, 64 bits
- Windows** MSI installer
- Windows** ZIP file
- Linux** AppImage 64 bits (X86-64)
- Linux** ZIP file 64 bits (X86-64)
- macOS** Intel, 10.15: "Catalina" or newer, 64 bits
- macOS** Apple Silicon, 11: "Big Sur" or newer, 64 bits

[Release Notes](#)

After the downloading completes, run the installer. For Windows users, there may pop up an installation dialog box of driver during the installation process. When it is popped up, please allow the installation. After installation is completed, an shortcut will be generated in the desktop.



Run it. The interface of the software is as follows:

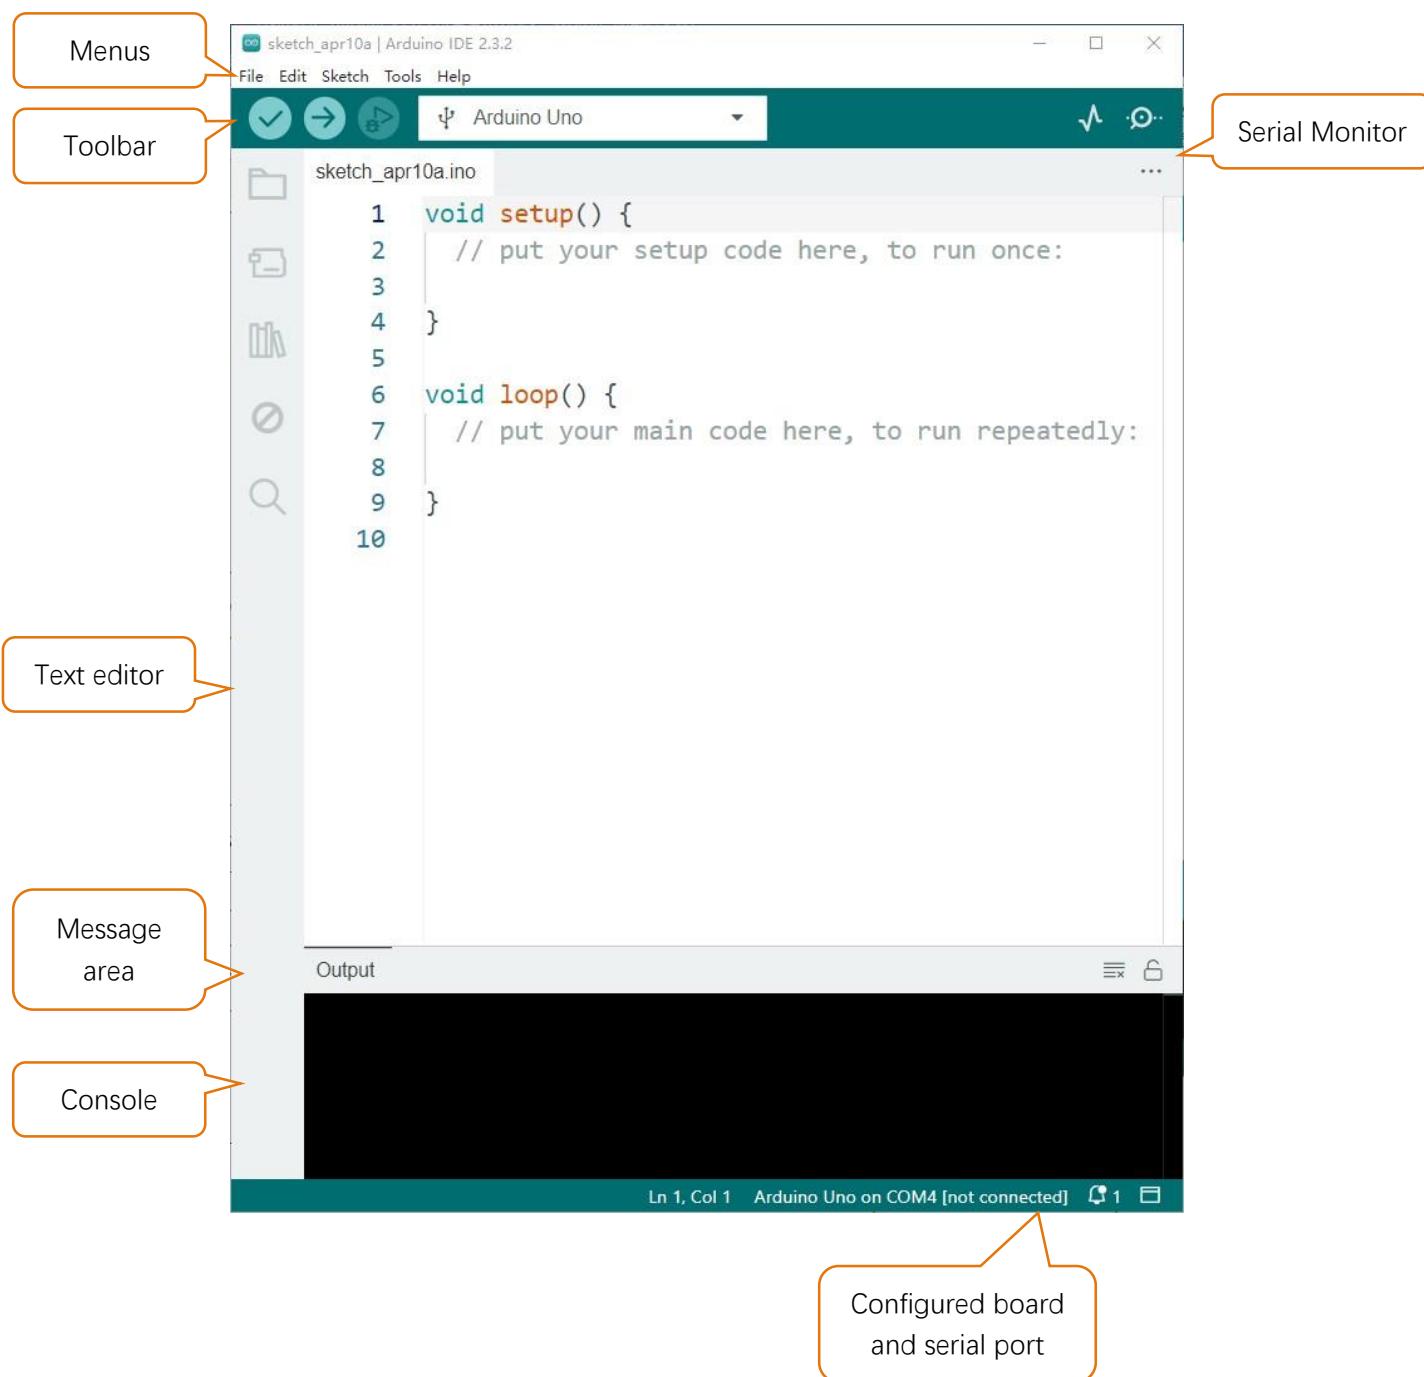


Programs written with Arduino IDE are called **sketches**. These sketches are written in a text editor and are saved with the file extension **.ino**. The editor has features for cutting/pasting and for searching/replacing text. The message area gives feedback while saving and exporting and also displays errors. The console displays text output by the Arduino IDE, including complete error messages and other information. The bottom right-hand corner of the window displays the configured board and serial port. The toolbar buttons allow you to verify and upload programs, create, open, and save sketches, and open the serial monitor.

-  Verify
Checks your code for errors compiling it.
-  Upload
Compiles your code and uploads it to the configured board.
-  New
Creates a new sketch.
-  Open
Presents a menu of all the sketches in your sketchbook. Clicking one will open it within the current window overwriting its content.
-  Save
Saves your sketch.
-  Serial Monitor
Opens the serial monitor.


Additional commands are found within five menus: File, Edit, Sketch, Tools, Help. The menus are context sensitive, which means only those items relevant to the work currently being carried out are available.

In addition, the Arduino 2.X.X version provides a quick search bar for control board management and a quick search bar for libraries, so you can easily install the library files and control board support package you want.

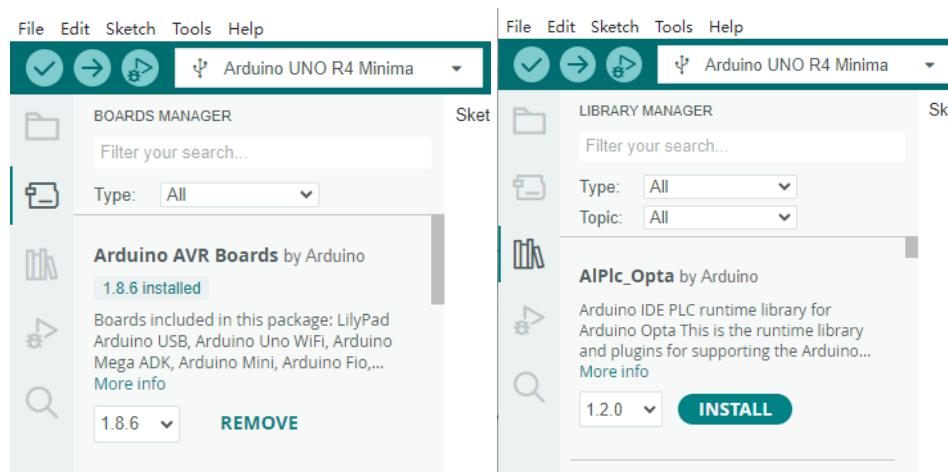


Installation of Development Board Support Package

1, Open Arduino IDE. Click Tools>Board>Boards Manager...on the menu bar.

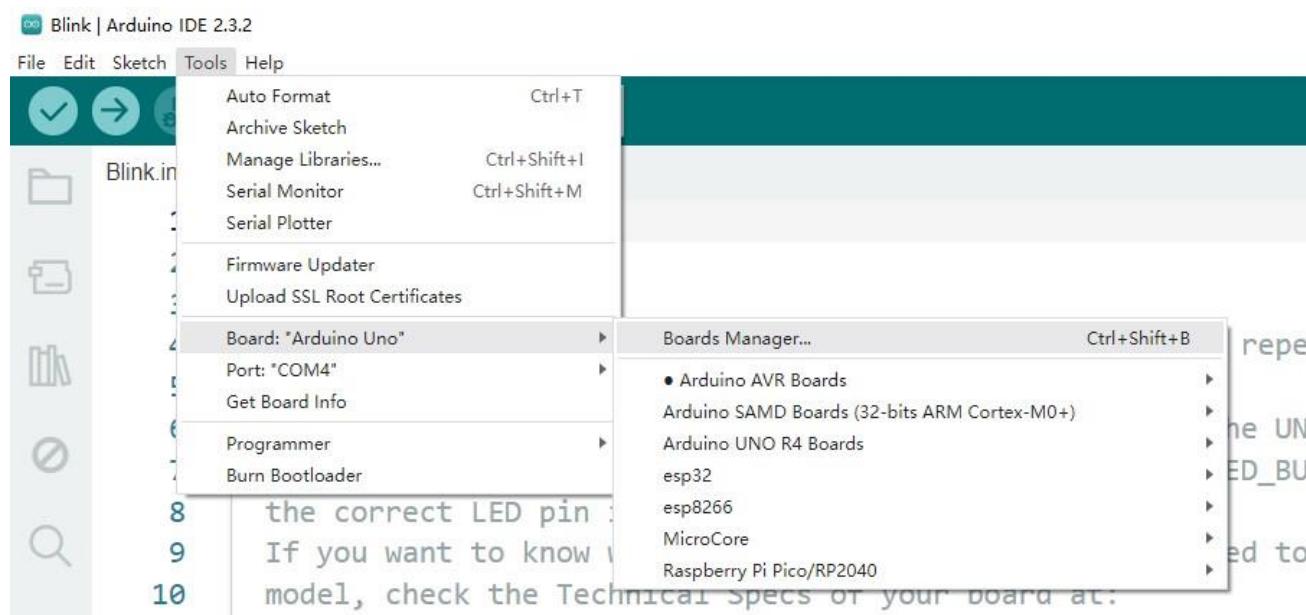


Enter **Arduino UNO R4** in the searching box, and select "**Arduino UNO R4**" and click on Install.

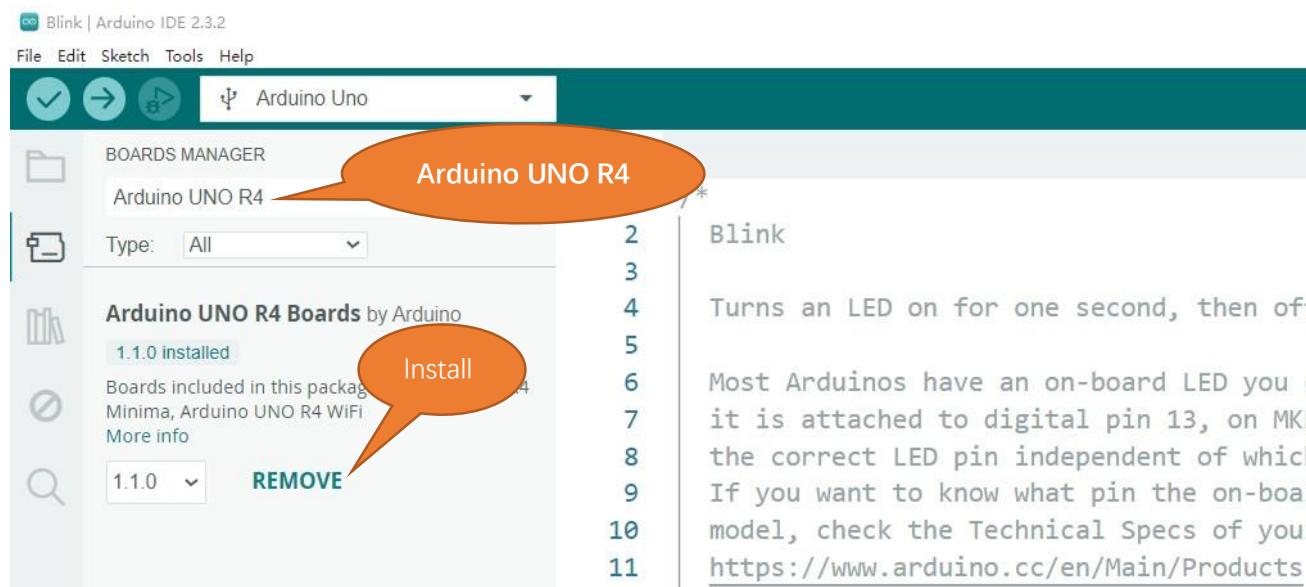

Click Yes in the pop-up "dpinst-amd64.exe" installation window. (Without it, you will fail to communicate with Arduino.) Thus far, we have finished installing the development support package.


First Use

Open the example sketch "Blink".

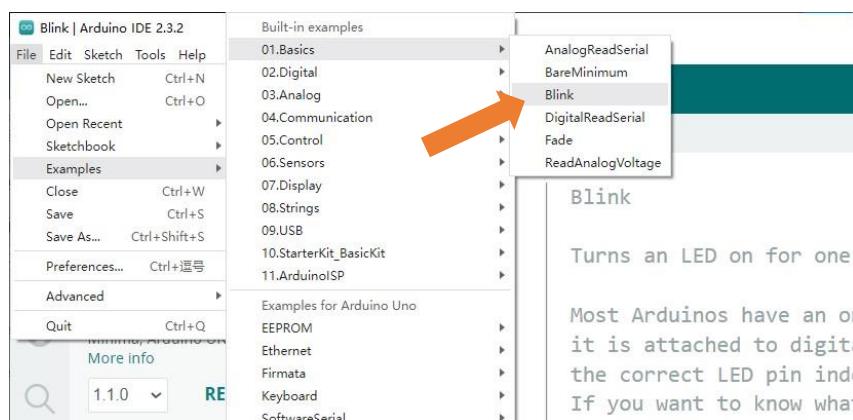


Select the board corresponding to the board you have in hands. Here we take Freenove Control Board (minina) as an example:

Select board "Arduino Uno R4 Minima". (Freenove control board is compatible with this board.)

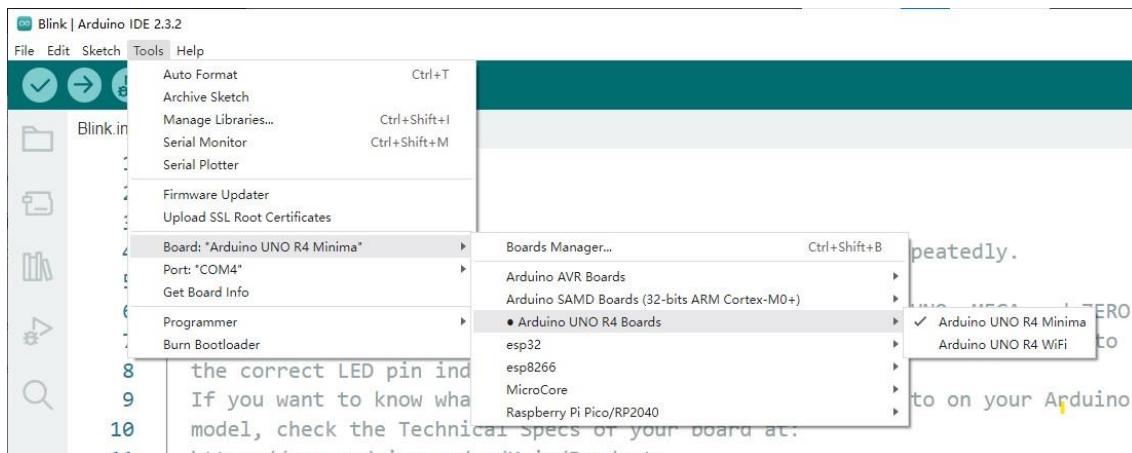

Connect control board to your computer with USB cable.

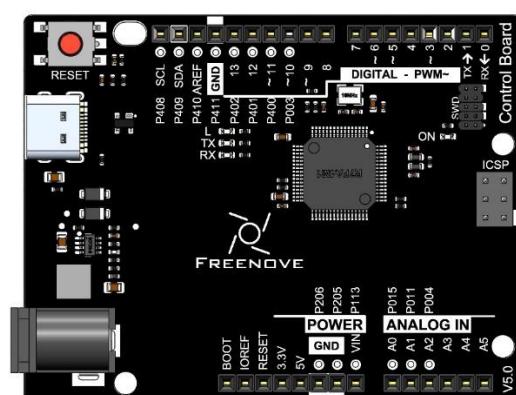


Select the port.

Note: Your port may be different from the following figure.

On Windows: It may be COM4, COM5 (Arduino Uno R4 Minima) or something like that.

On Mac: It may be /dev/cu.usbserial-710, /dev/cu.usbmodem7101 (Arduino Uno R4 Minima) or something like that.


On Linux: It may be `/dev/ttyUSB0`, `/dev/ttyACM0` or something like that.

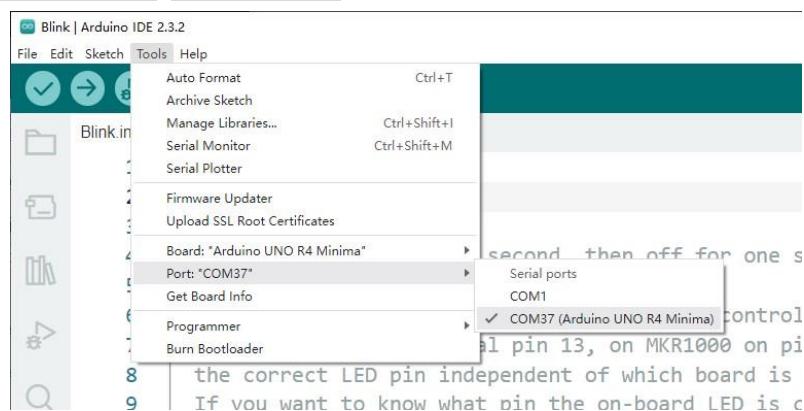


Note: If there is more than one port and you cannot decide which one to choose, disconnect the USB cable and check the port. Then connect the USB cable and check the port again. The new one is the correct port.

Having problems? Contact us for help! Send mail to: support@freenove.com

Click "Verify" button.

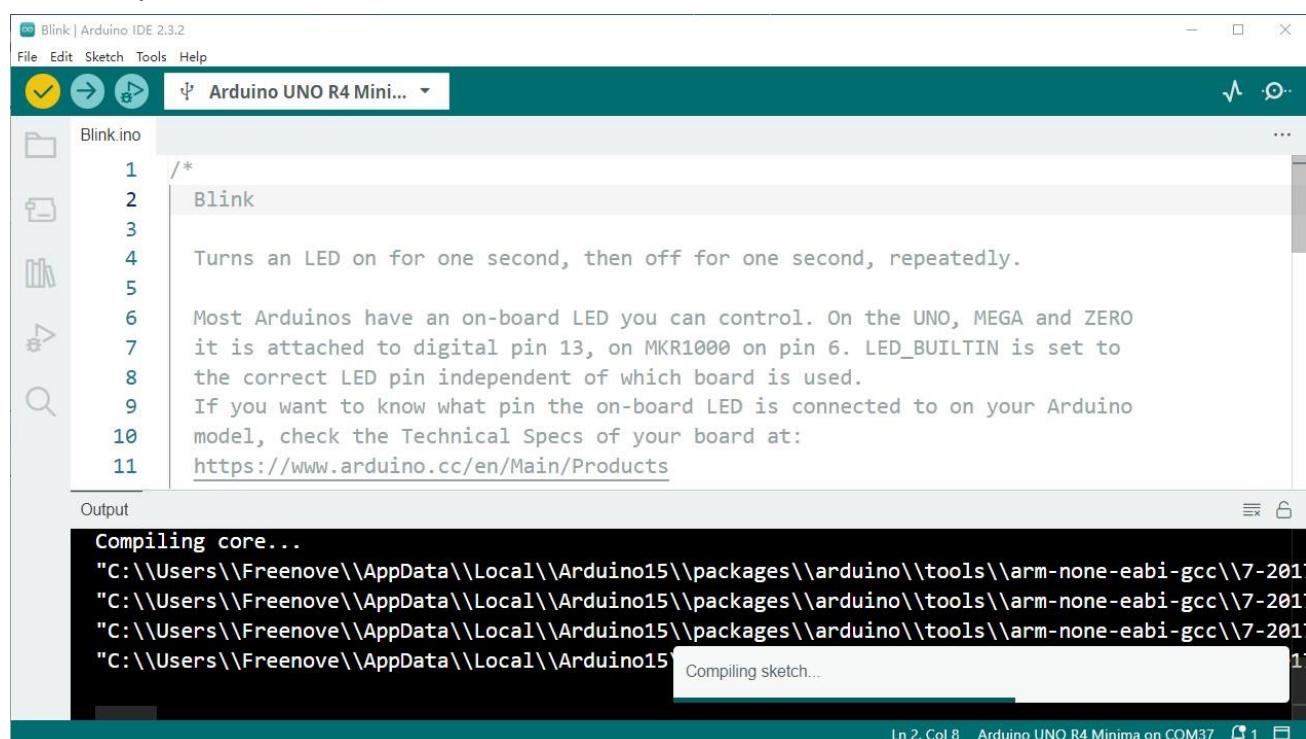

The following figure shows the code being compiled.

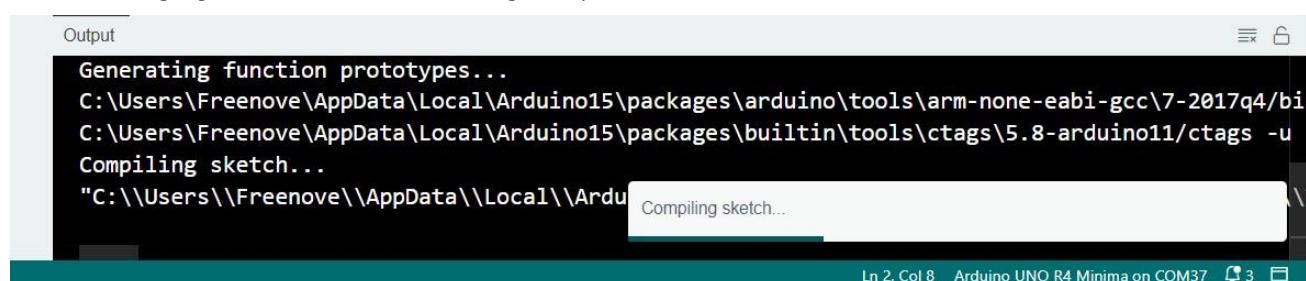

Wait a moment for the compiling to be completed. Figure below shows the code size and percentage of

Need help? Contact support@freenove.com

space occupation. If there is an error in the code, the compilation will fail and the details are shown here.




The screenshot shows the Arduino IDE's Output window. It displays the following text:

```
"C:\\\\Users\\\\Freenove\\\\AppData\\\\Local\\\\Arduino15\\\\packages\\\\arduino\\\\tools\\\\arm-none-eabi-gcc\\\\\n\n\"C:\\\\Users\\\\Freenove\\\\AppData\\\\Local\\\\Arduino15\\\\packages\\\\arduino\\\\tools\\\\arm-none-eabi-gcc\\\\\nSketch uses 54024 bytes (20%) of program storage space. Maximum is 262144 bytes.\nGlobal variables use 4552 bytes (13%) of dynamic memory, leaving 28216 bytes for local variabl\n\nLn 2, Col 8  Arduino Uno R4 Minima on COM37  1  
```

Click "Upload" button.




Figure below shows code are uploading.

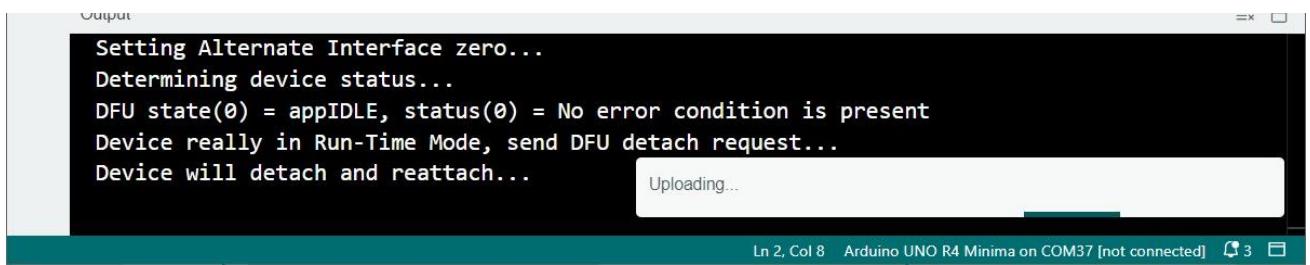

The screenshot shows the Arduino IDE's Output window during the upload process. It displays the following text:

```
Setting Alternate Interface zero...\nDetermining device status...\nDFU state(0) = appIDLE, status(0) = No error condition is present\nDevice really in Run-Time Mode, send DFU detach request...\nDevice will detach and reattach...\nUploading...  [=====] 100%  54032 bytes\nLn 2, Col 8  Arduino Uno R4 Minima on COM37 [not connected]  3  
```

Wait a moment, and then the uploading is completed.

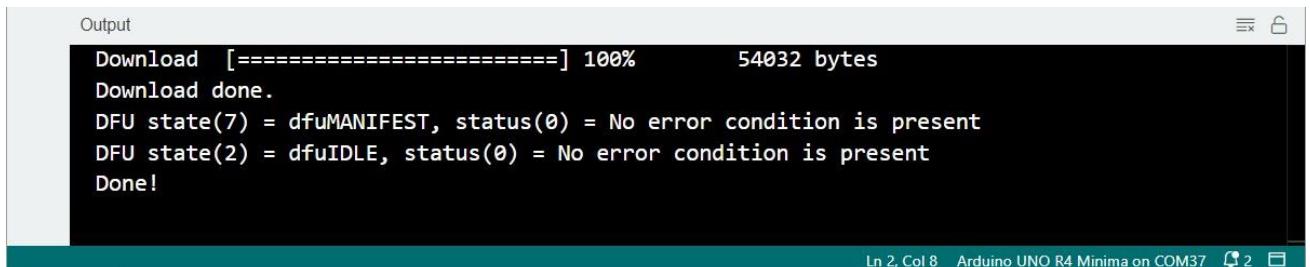


The screenshot shows the Arduino IDE's Output window after the upload is completed. It displays the following text:

```
Download [=====] 100%  54032 bytes\nDownload done.\nDFU state(7) = dfuMANIFEST, status(0) = No error condition is present\nDFU state(2) = dfuIDLE, status(0) = No error condition is present\nDone!\nLn 2, Col 8  Arduino Uno R4 Minima on COM37  2  
```

Having problems? Contact us for help! Send mail to: support@freenove.com

After that, we will see the LED marked with "L" on the control board start blinking. It indicates that the code is running now!

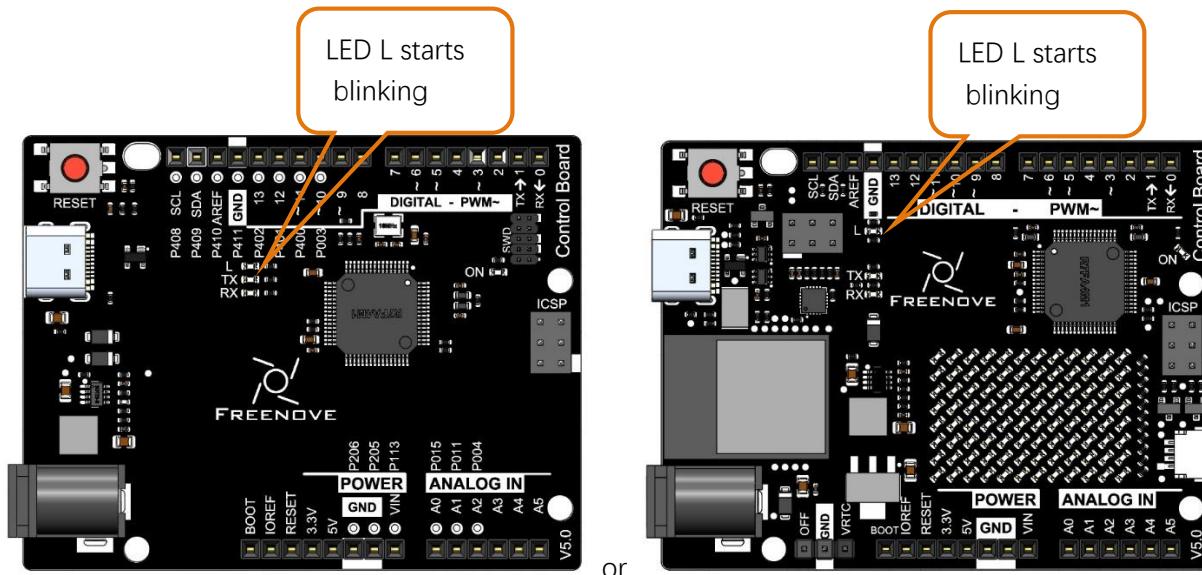


So far, we have completed the first use. I believe you have felt the joy of it. Next, we will carry out a series of projects, from easy to difficult, taking you to learn programming and the building of electronic circuit.


How to install the library

There are two ways to include libraries on Arduino IDE.


The first way, open the Arduino IDE, click Tools → Manager Libraries.

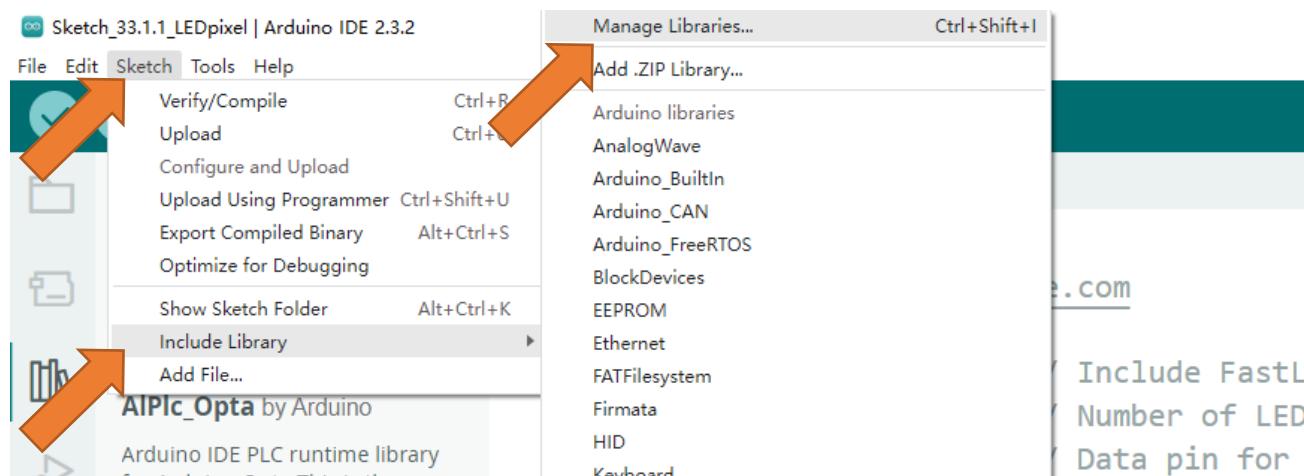


Here we take installing the "FastLED" library as an example. In the pop-up window, Library Manager, search for the name of the Library, "FastLED". Then click Install.

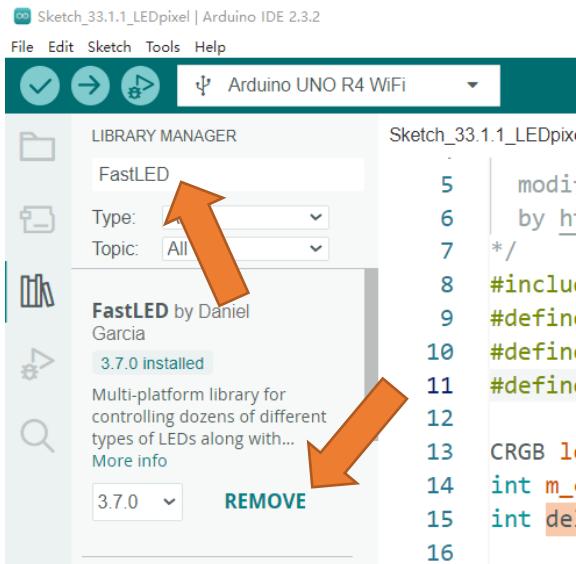

Or, you can click the Library icon on the left of Arduino IDE, and type in "FastLED" on the search bar to install.

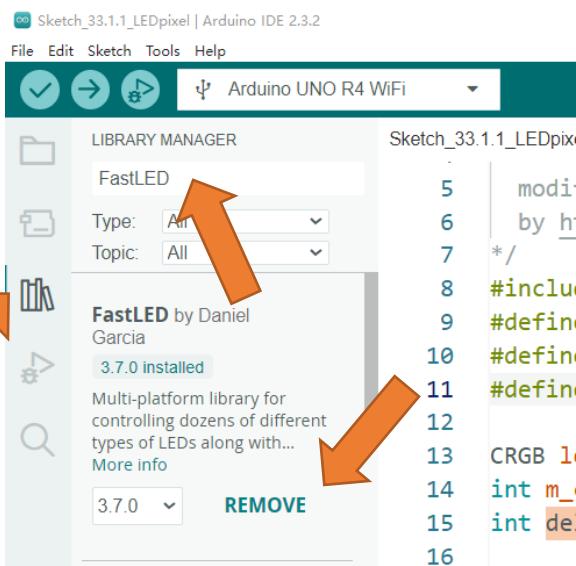

The second way, open Arduino IDE, click Sketch→Include Library→Add .ZIP Library. In the pop-up window, find the file named "./Libraries/FastLED.Zip" which locates in this directory, and click OPEN.

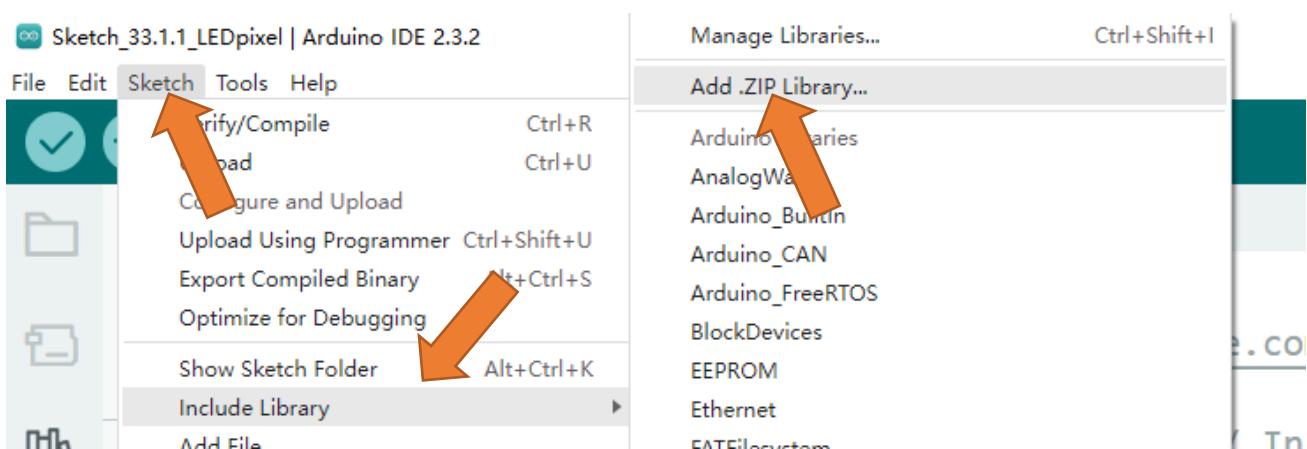

Chapter 1 LED Blink

We have previously tried to make the LED marked with "L" blink on the control board. Now let us use electronic components and codes to reproduce the phenomenon, and try to understand their principle.

Project 1.1 Control LED with Manual Button



First, try using a push button switch to make the LED blink manually.

Component List


Note: It is worth noting that the board is compatible with the Arduino UNO R4 Minima and the Arduino UNO R4 WiFi board, and if you have one of them in hand, you can also use it for experiments in this tutorial.

Only the black control board is used to display the hardware connection in this document.


Control board x1

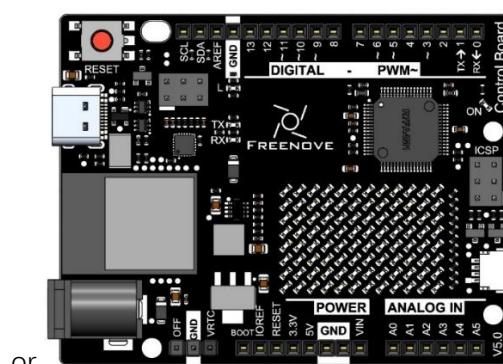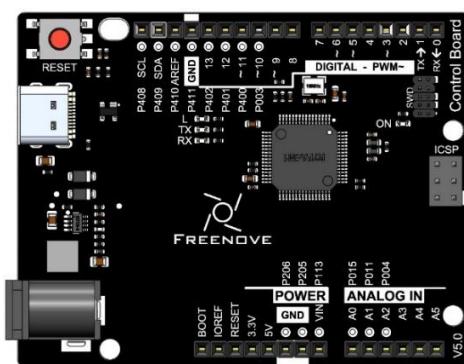


Breadboard x1

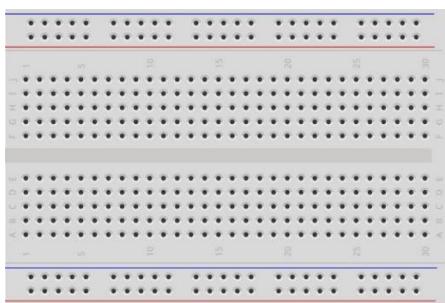

GPIO Extension Board x1

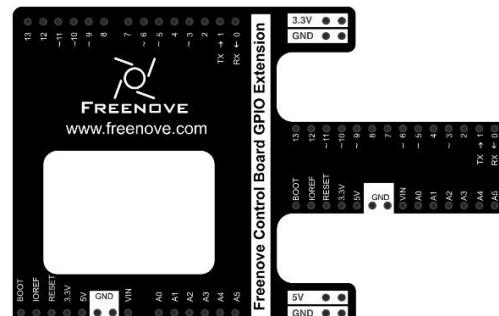

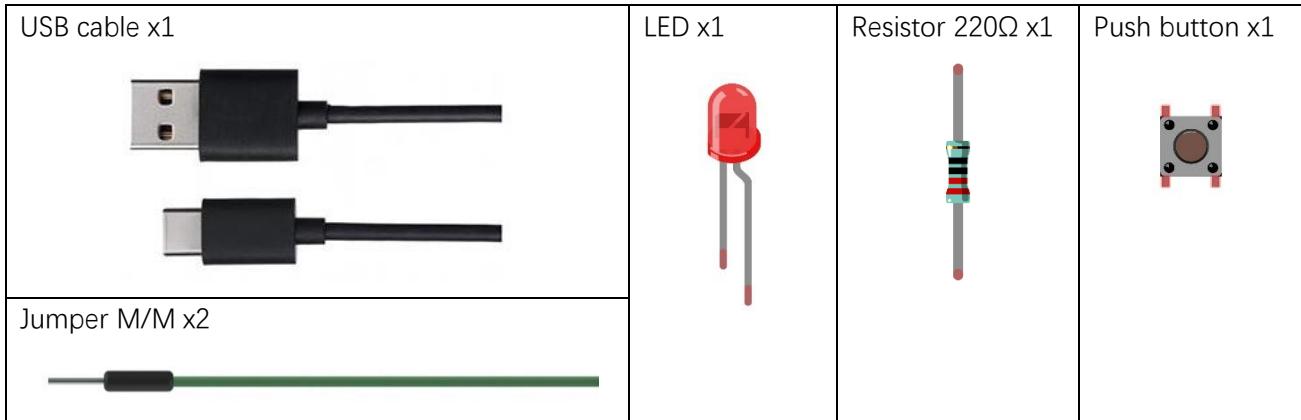


Circuit Knowledge

Power supply

Power supply provides energy for the circuit, and it is divided into DC power and AC power.

Voltage and current of DC power supply remains the same all the time, such as battery, power adapter.

Alternating Current (AC) describes the flow of charge that changes direction periodically. As a result, the voltage level also reverses along with the current. Its basic form is sinusoidal voltage(current). AC power is suitable for long-distance transmission of electric energy and it is used to supply power to houses.

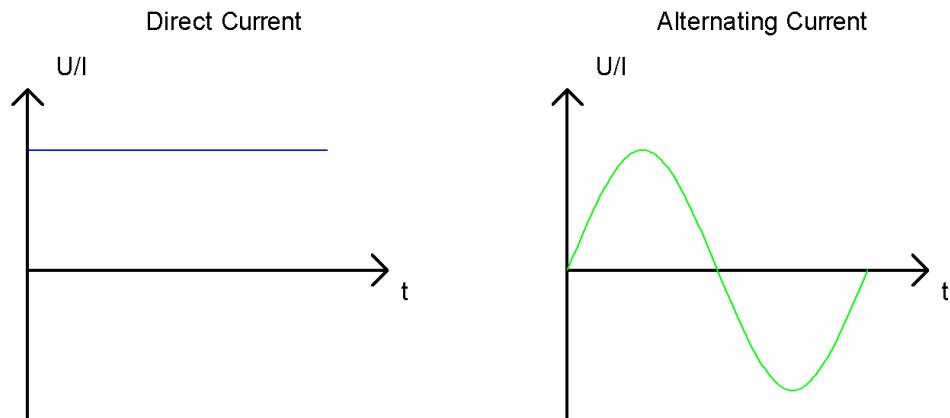

Generally, electronic circuits use DC. Home appliances have rectifiers to convert AC into DC before they are used.

Battery or battery pack can be represented by the following symbols:




The positive and negative poles of the power supply must not be directly connected, otherwise it may scald you and cause damage to the battery.


Voltage

The unit of voltage(U) is volt(V). $1kV=1000V$, $1V=1000mV$, $1mV=1000\mu V$.

Voltage is relative. As to a dry battery marked with "1.5V", its positive (+) voltage is 1.5V higher than the negative (-) voltage. If you specify the negative as reference (0V), the positive voltage will be +1.5V.

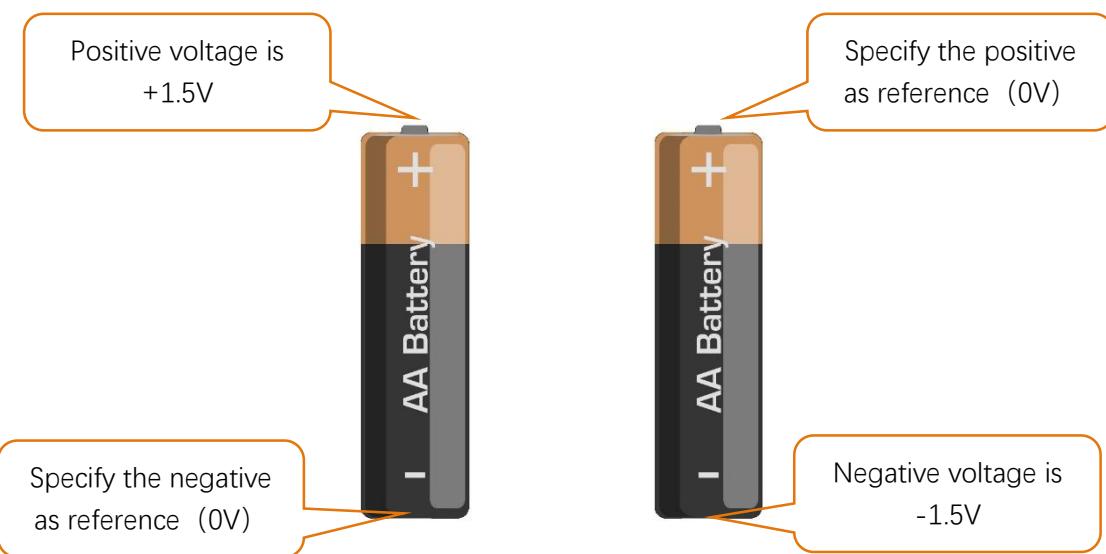

When two dry batteries are connected in series, the voltage of each point is as follows:

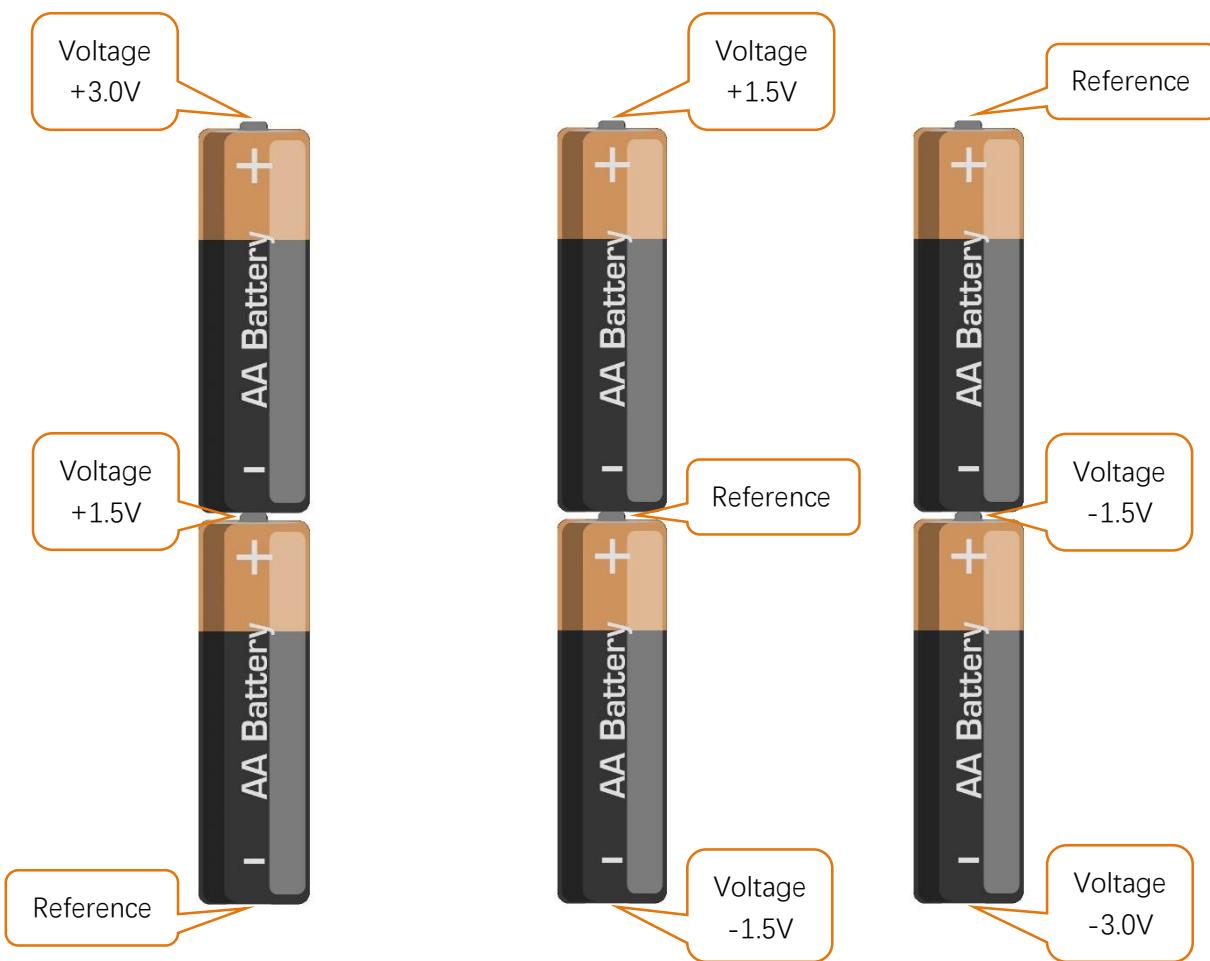

In practical circuits, we usually specify negative as reference voltage (0V), which is called "Ground". The positive is usually called "VCC". The positive and negative poles of power supply is usually represented by the following two symbols:




Current

The unit of current(I) is ampere(A). $1A=1000mA$, $1mA=1000\mu A$.

Closed loop consisting of electronic components is necessary for current to flow.

In the figures below: the left one is a loop circuit, so current flows through the circuit. The right one is not a loop circuit, so there is no current.

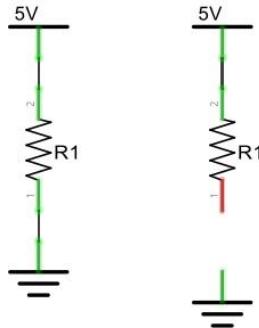


Resistor

Resistors use Ohms (Ω) as the unit of measurement of their resistance (R). $1M\Omega=1000k\Omega$, $1k\Omega=1000\Omega$.

A resistor is a passive electrical component that limits or regulates the flow of current in an electronic circuit.

On the left, we see a physical representation of a resistor, and the right is the symbol used to represent the presence of a resistor in a circuit diagram or schematic.

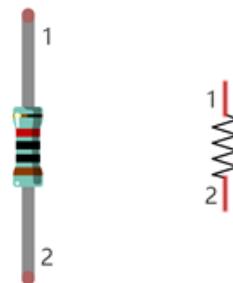

The bands of color on a resistor is a shorthand code used to identify its resistance value. For more details of resistor color codes, please refer to the card in the kit package.

With a fixed voltage, there will be less current output with greater resistance added to the circuit. The relationship between Current, Voltage and Resistance can be expressed by this formula: $I=V/R$ known as Ohm's Law where I = Current, V = Voltage and R = Resistance. Knowing the values of any two of these allows you to solve the value of the third.

In the following diagram, the current through R1 is: $I=U/R=5V/10k\Omega=0.0005A=0.5mA$.



WARNING: Never connect the two poles of a power supply with anything of low resistance value (i.e. a metal object or bare wire) this is a Short and results in high current that may damage the power supply and electronic components.

Component Knowledge

Let us learn about the basic features of components to use them better.

Jumper

Jumper is a kind of wire designed to connect the components together with its two terminals by inserting them onto breadboard or control board.

Jumpers have male end (pin) and female end (slot), so jumpers can be divided into the following 3 types.

Jumper M/M



Jumper F/F




Jumper F/M



Breadboard

There are many small holes on breadboard to connect Jumpers.

Some small holes are connected inside breadboard. The following figure shows the inner links among those holes.

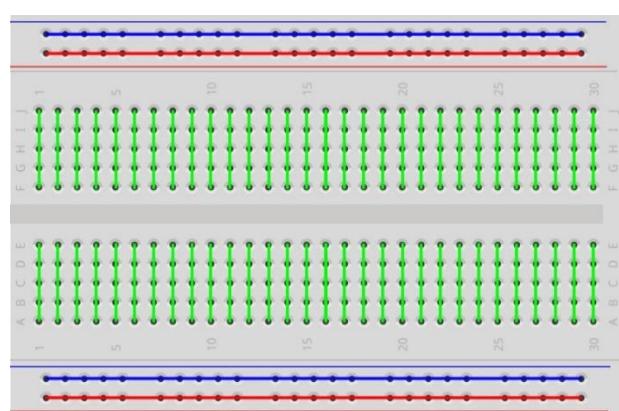

Push Button Switch

This type of Push Button Switch has 4 pins (2 Pole Switch). Two pins on the left are connected, and both left




and right sides are the same per the illustration:

When the button on the switch is pressed, the circuit is completed (your project is Powered ON).

LED

An LED is a type of diode. All diodes only work if current is flowing in the correct direction and have two Poles. An LED will only work (light up) if the longer pin (+) of LED is connected to the positive output from a power source and the shorter pin is connected to the negative (-) negative output also referred to as Ground (GND). This type of component is known as "Polar" (think One-Way Street).


All common 2 lead diodes are the same in this respect. Diodes work only if the voltage of its positive electrode is higher than its negative electrode and there is a narrow range of operating voltage for most all common diodes of 1.9 and 3.4V. If you use much more than 3.3V the LED will be damaged and burn out.

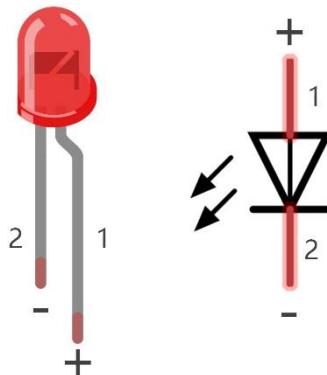


Note: LEDs cannot be directly connected to a power supply, which usually ends in a damaged component. A resistor with a specified resistance value must be connected in series to the LED you plan to use.

GPIO Extension Board

The GPIO extension board facilitates to connect the GPIOs of the microcontroller to the breadboard. The GPIO sequence on the extension board corresponds to that on the microcontroller.

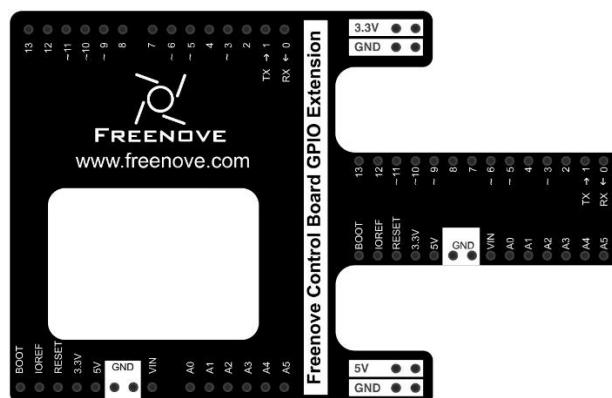

Please pay attention to the outer lines of the breadboard after connecting the GPIO extension board. Now it has one row of 3.3V and one row of 5V power supply respectively. When building circuits, please be careful to avoid damaging the board due to incorrect wiring.

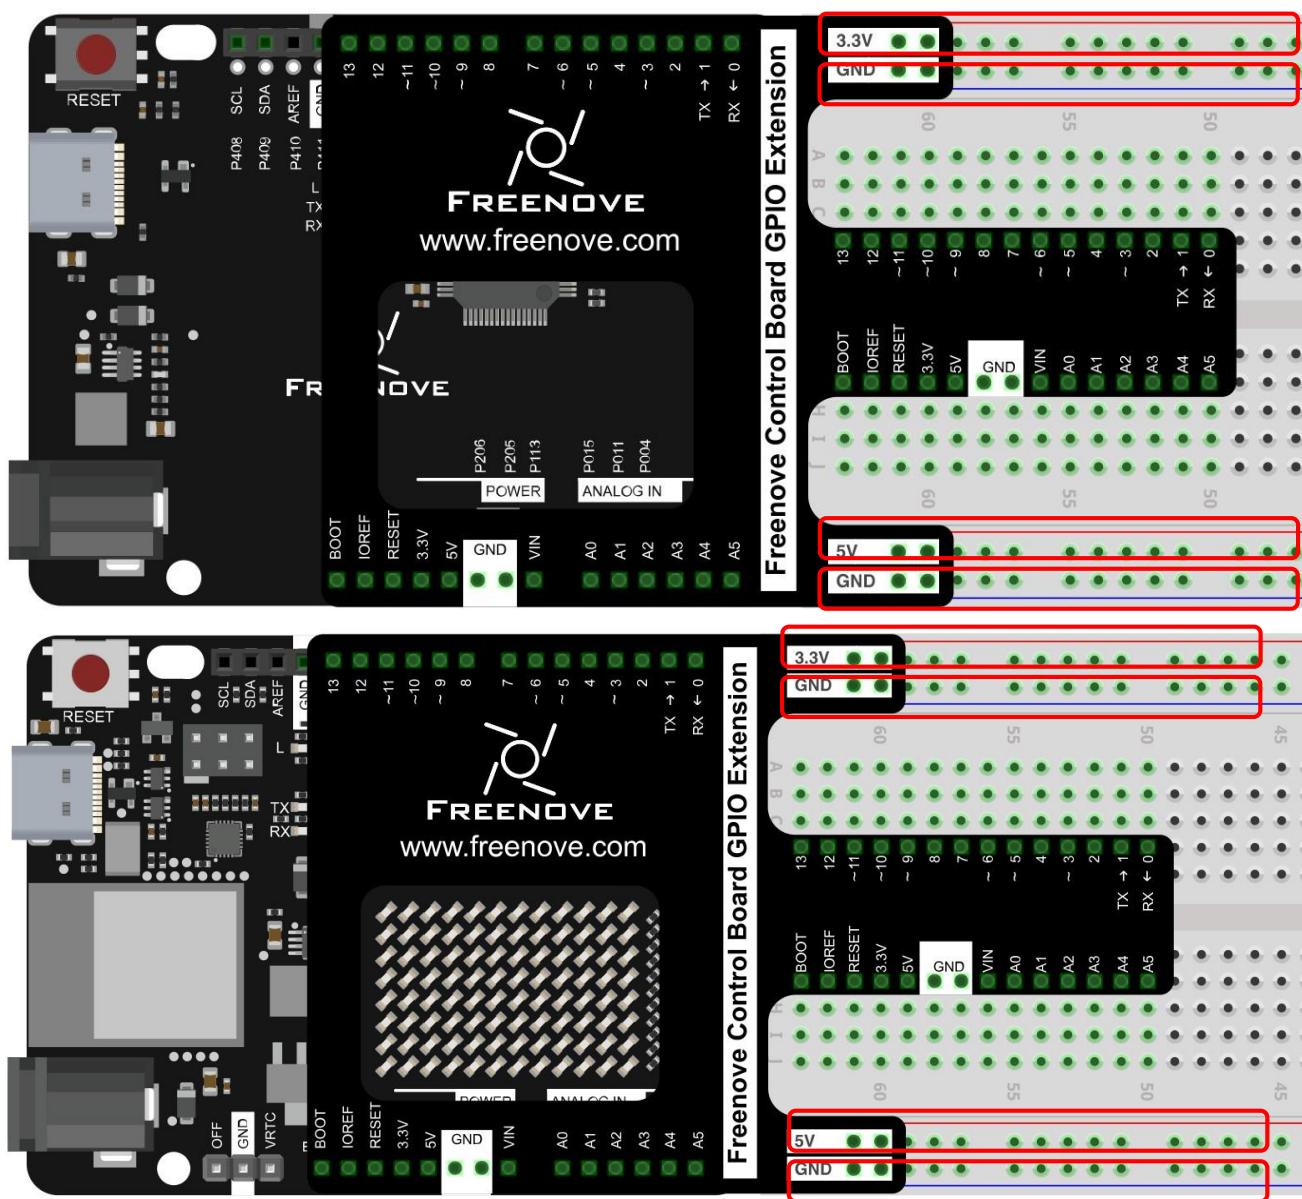


When connecting the circuit, the connection with short circuit should be avoided. If there is a short circuit, please disconnect the power supply, check the circuit again, and make sure the circuit is connected correctly before powering on the test.

Circuit


In this project, the LED is controlled by a push button switch, and the control board here only plays the role of power supply in the circuit.

Firstly, connect components with jumpers according to "hardware connection". Secondly, check the connection to confirm that there are no mistakes. Finally, connect the control board to computer with USB cable to avoid short circuit caused by contacting the wires.

Note: In this book, we use the regular board as an example to make the circuits. The connection is the same on the control board with WiFi function.

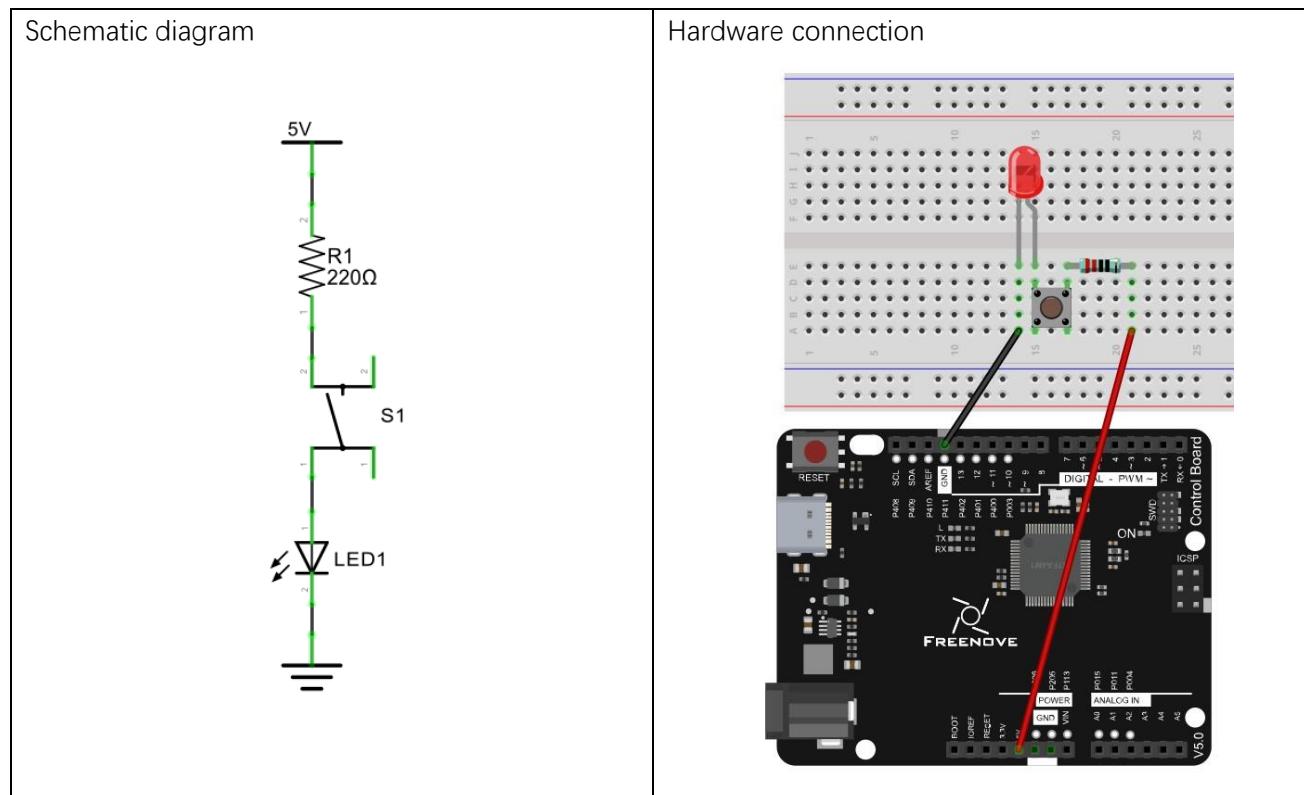

LED lights up when you press the push button switch, and it lights off when you release the button.

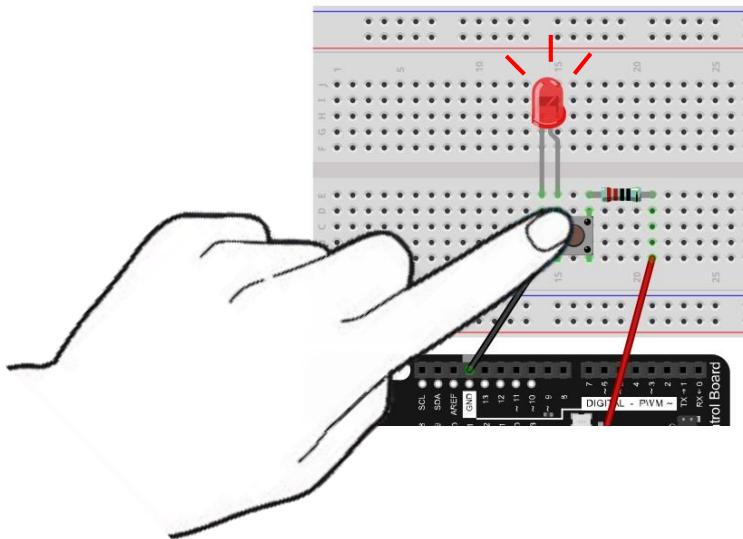

Need help? Contact support@freenove.com

Project 1.2 Control LED with Control Board

Now, try using control board to make LED blink through programming.

Component List


Components are basically the same with those in last section. Push button switch is no more needed.

Circuit Knowledge

Analog signal and Digital signal

An Analog Signal is a continuous signal in both time and value. On the contrary, a Digital Signal or discrete-time signal is a time series consisting of a sequence of quantities. Most signals in life are analog signals. A familiar example of an Analog Signal would be how the temperature throughout the day is continuously changing and could not suddenly change instantaneously from 0°C to 10°C.

However, Digital Signals can instantaneously change in value. This change is expressed in numbers as 1 and 0 (the basis of binary code). Their differences can more easily be seen when compared when graphed as below.

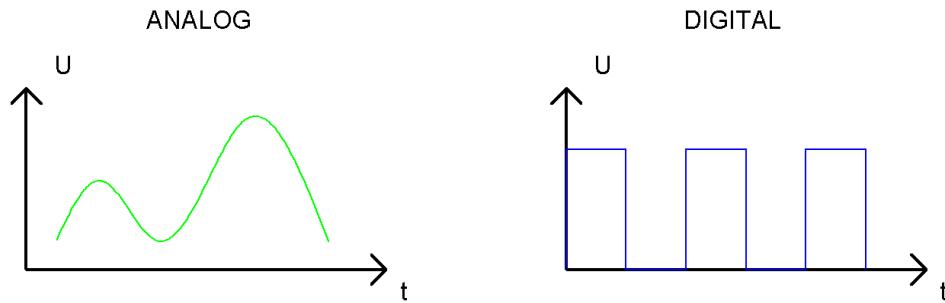


In practical applications, we often use binary as the digital signal, that is a series of 0's and 1's. Since a binary signal only has two values (0 or 1) it has great stability and reliability. Lastly, both analog and digital signals can be converted into the other.

Low level and high level

In a circuit, the form of binary (0 and 1) is presented as low level and high level.

Low level is generally equal to ground voltage(0V). High level is generally equal to the operating voltage of components.

The low level of the control board is 0V and high level is 5V, as shown below. When IO port on control board outputs high level, components of small power can be directly lit, like LED.

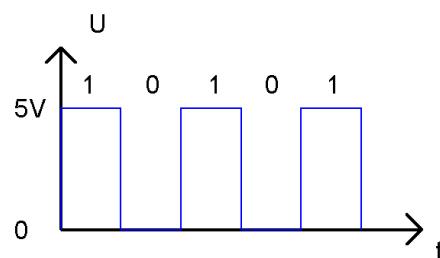

Code Knowledge

Before start writing code, we should learn about the basic programming knowledge.

Comments

Comments are the words used to explain for the sketches, and they won't affect the running of code.

There are two ways to use comments of sketches.

1. Symbol "://"

Contents behind "://" comment out the code in a single line.

```
1 // this is a comment area in this line.
```

The content in front of "://" will not be affected.

```
1 delay(1000); // wait for a second
```

2. Symbol "/*"and "*/"

Code can also be commented out by the contents starting with a "/*" and finishing with a "*/" and you can place it anywhere in your code, on the same line or several lines.

```
1 /* this is comment area. */
```

Or

```
1 /*
2      this is a comment line.
3      this is a comment line.
4 */
```

Data type

When programming, we often use digital, characters and other data. C language has several basic data types as follows:

int: A number that does not have a fractional part, an integer, such as 0, 12, -1;

float: A number that has a fractional part, such as 0.1, -1.2;

char: It means character, such as 'a', '@', '0';

For more about date types, please visit the website: [https://www.Arduino.cc-Resources-Reference-Data Types](https://www.Arduino.cc-Resources-Reference-DataTypes).

Constant

A constant is a kind of data that cannot be changed, such as int type 0, 1, float type 0.1, -0.1, char type 'a', 'B'.

Variable

A variable is a kind of data that can be changed. It consists of a name, a value, and a type. Variables need to be defined before using, such as:

```
1 int i;
```

"int" indicates the type, ";" indicates the end of the statement. The statement is usually written in one single line; and these statements form the code.

After declaration of the variable, you can use it. The following is an assignment to a variable:

```
1 i = 0; // after the execution, the value of i is 0
```

"=" is used to pass the value of a variable or constant on the right side to the variable on the left.

A certain number of variables can be declared in one statement, and a variable can be assigned multiple times. Also, the value of a variable can be passed to other variables. For example:

```

1 int i, j;
2 i = 0;           // after the execution, the value of i is 0
3 i = 1;           // after the execution, the value of i is 1
4 j = i;           // after the execution, the value of j is 1

```

Function

A function is a collection of statements with a sequence of order, which performs a defined task. Let's define a function void blink() as follows:

```

1 void blink() {
2     digitalWrite(13, HIGH);
3     delay(1000);
4     digitalWrite(13, LOW);
5     delay(1000);
6 }


```

"void" indicates that the function does not return a value (Chapter 4 will detail the return value of functions); "()" its inside is parameters of a function (Chapter 2 will detail the parameters of the functions). No content inside it indicates that this function has no parameters;
"{}" contains the entire code of the function.

After the function is defined, it is necessary to be called before it is executed. Let's call the function void blink(), as shown below.

```
1 blink();
```

When the code is executed to a statement calling the function, the function will be executed. After execution of the function is finished, it will go back to the statement and execute the next statement.

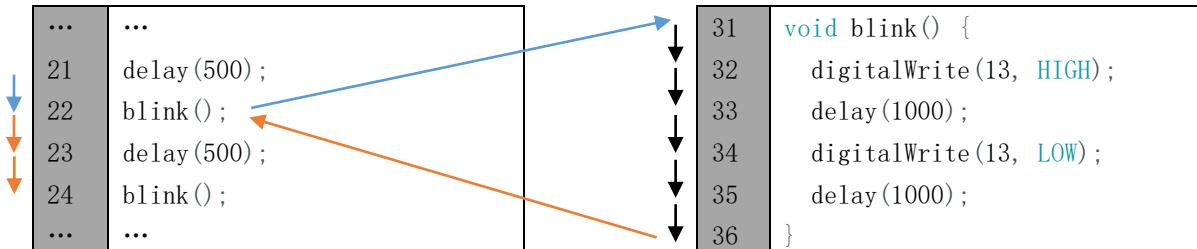

Some functions have one or more parameters. When you call such functions, you need to write parameters inside "()":

```


1 digitalWrite(13, HIGH); // turn the LED on (HIGH is the voltage level)
2 delay(1000);           // wait for a second

```


Circuit

Now, we will use IO port of control board to provide power for the LED. Pin 13 of the control board is the digital pin. It can output high level or low level. In this way, control board can control the state of LED.

Schematic diagram

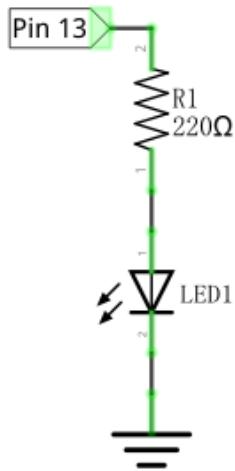

Hardware connection

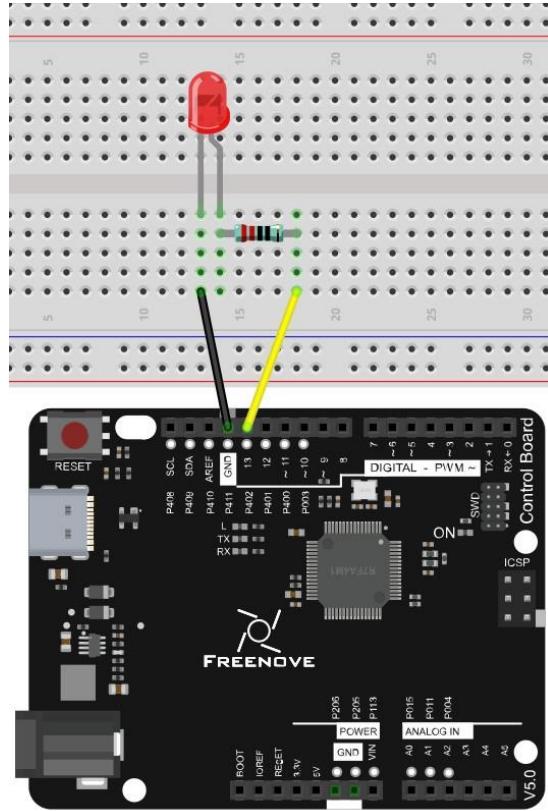

Sketch

Sketch 1.2.1

In order to make the LED blink, we need to make pin 13 of the control board output high and low level alternately.

We highly recommend you type the code manually instead of copying and pasting, so that you can develop your coding skills and get more knowledge.

```

1 // the setup function runs once when you press reset or power the board
2 void setup() {
3     // initialize digital pin 13 as an output
4     pinMode(13, OUTPUT);
5 }
6
7 // the loop function runs over and over again forever
8 void loop() {
9     digitalWrite(13, HIGH);    // turn the LED on (HIGH is the voltage level)
10    delay(1000);             // wait for a second
11    digitalWrite(13, LOW);   // turn the LED off by making the voltage LOW
12    delay(1000);             // wait for a second
13 }
```


The code usually contains two basic functions: void setup() and void loop().

After control board is **reset**, the setup() function will be executed first, and then the loop() function will be executed.

setup() function is generally used to write code to initialize the hardware. And loop() function is used to write code to achieve certain functions. loop() function is executed repeatedly. When the execution reaches the end of loop(), it will jump to the beginning of loop() to run again.

Reset

Reset operation will lead the code to be executed from the beginning. Switching on the power, finishing uploading the code and pressing the reset button will trigger reset operation.

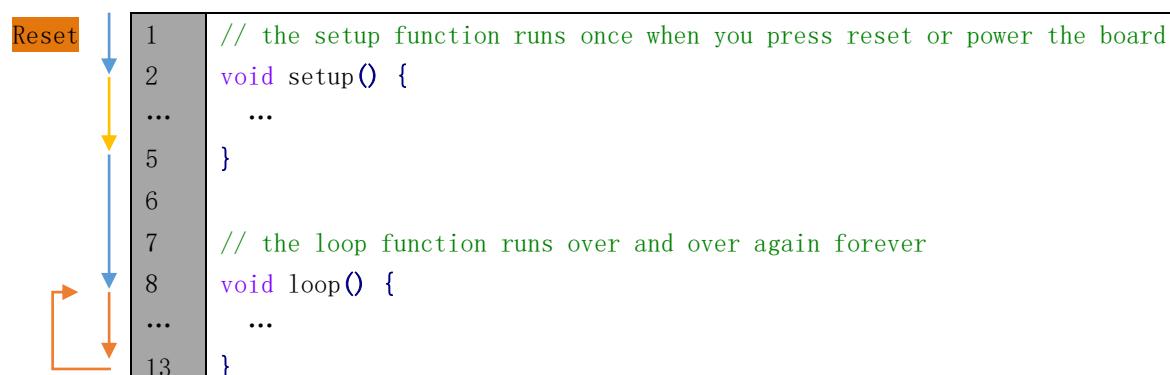

In the setup () function, first, we set pin 13 of the control board as output mode, which can make the port output high level or low level.

```
3 // initialize digital pin 13 as an output  
4 pinMode(13, OUTPUT);
```

Then, in the loop () function, set pin 13 of the control board to output high level to make LED light up.

```
9 digitalWrite(13, HIGH); // turn the LED on (HIGH is the voltage level)
```

Wait for 1000ms, which is 1s. delay() function is used to make control board wait for a moment before executing the next statement. The parameter indicates the number of milliseconds to wait for.

```
10 delay(1000); // wait for a second
```

Then set the 13 pint to output low level, and LED light off. One second later, the execution of loop () function will be completed.


```
11 digitalWrite(13, LOW); // turn the LED off by making the voltage LOW  
12 delay(1000); // wait for a second
```

The loop() function is constantly being executed, so LED will keep blinking.

The functions called above are standard functions of the Arduino IDE, which have been defined in the Arduino IDE, and they can be called directly. We will introduce more common standard functions in later chapters.

For more standard functions and the specific use method, please visit <https://www.arduino.cc>-Resources-Reference-Functions.


Verify and upload the code, then the LED starts blinking.

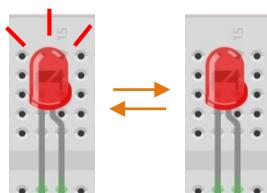

How to Use the Expanding GPIO Pins

In this section, we will learn to use the expanding GPIO pins. If you are working on the board with Bluetooth and WiFi functions, you can skip this section.


The board used in this section is as shown below:

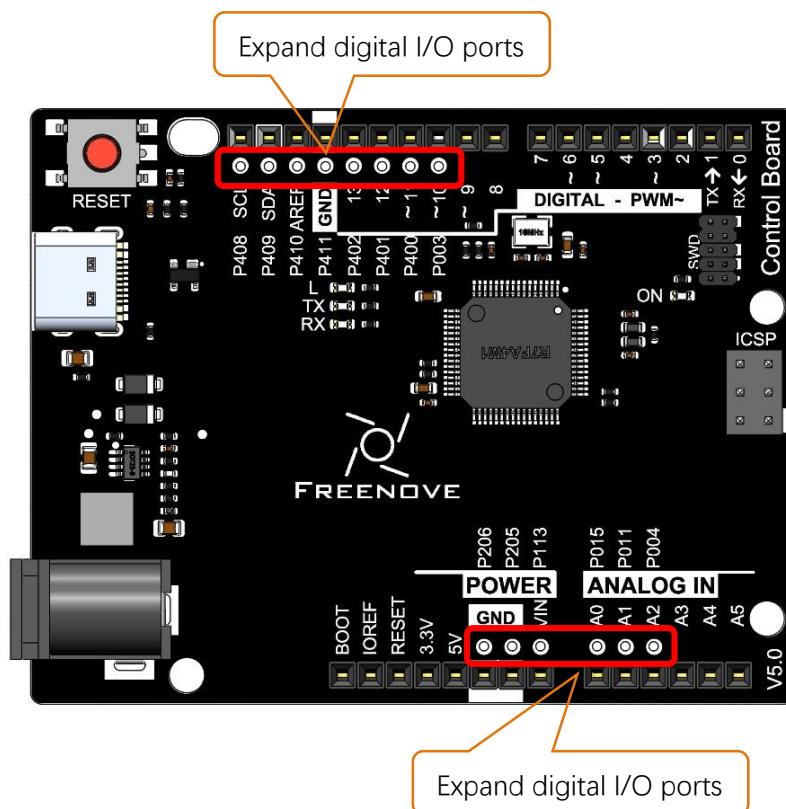

Before using the expanding GPIO pins, please complete the following configuration first.

Copy "pins_arduino.h" and "variant.cpp" under the file path "/Libraries/Expanding_GPIO_Pins" to the file path "C:\Users\Freenove\AppData\Local\Arduino15\packages\arduino\hardware\renesas_arduino\1.1.0\variants\MINIMA".

```
1 > Freenove > AppData > Local > Arduino15 > packages > arduino > hardware > renesas_arduino > 1.1.0 > variants > MINIMA
```

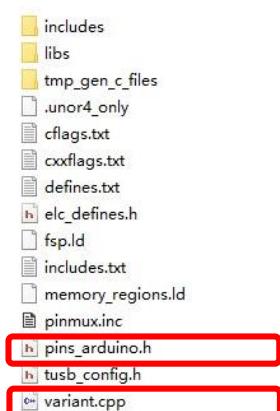



The path may vary due to different versions of board package installed.

The configuration is completed once the files are copied to the above path. The definition of the expanding GPIOs is as shown in the table below.

GPIOs on the control board	Definition of Arduino GPIO
P003	D27
P400	D28
P401	D29
P402	D30
P411	D31
P410	D32
P409	D33
P408	D34
P004	D35
P011	D36
P015	D37
P113	D38
P205	D39
P206	D40

Now, let's try to use the expanding GPIO pins to light up an LED. Open the Blinking sketch, modify the control pin according to the pin definition shown in the above table. Here we take P003 on the control board as an example, so we modify the control pin of the LED to 27.

Build the circuit as below, and upload the sketch to the board.

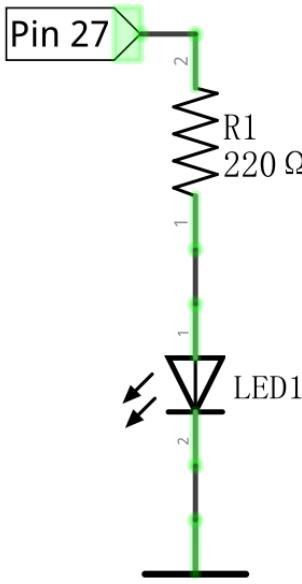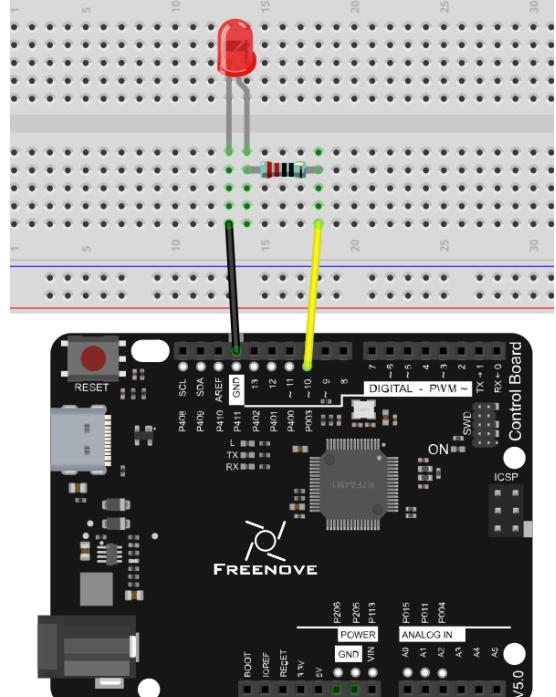Schematic diagram 	Hardware connection 
--	---

```
1 // the setup function runs once when you press reset or power the board
2 void setup() {
3     // initialize digital pin 13 as an output
4     pinMode(27, OUTPUT);
5 }
6
7 // the loop function runs over and over again forever
8 void loop() {
9     digitalWrite(27, HIGH);    // turn the LED on (HIGH is the voltage level)
10    delay(1000);             // wait for a second
11    digitalWrite(27, LOW);    // turn the LED off by making the voltage LOW
12    delay(1000);             // wait for a second
13 }
```

In this way, you can use more GPIOs to design more interesting projects. It is worth noting that all the expansion GPIOs are uniformly defined as ordinary digital I/O interfaces. We do not solder male or female headers to them. When you need to use these pins, you can solder headers yourself.

Chapter 2 Two LEDs Blink



In last chapter, we have already written code to make 1 LED blink on the control board. And now, we will try to make 2 LEDs blink for further programming study.

Project 2.1 Two LEDs Blink

Now, try to make two LEDs blink on control board.


Component List

Control board x1

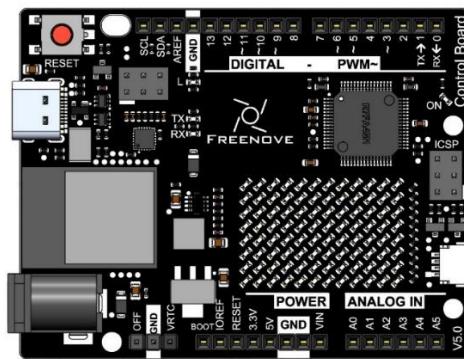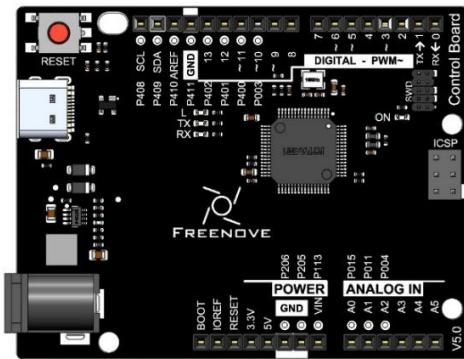


or

Breadboard x1

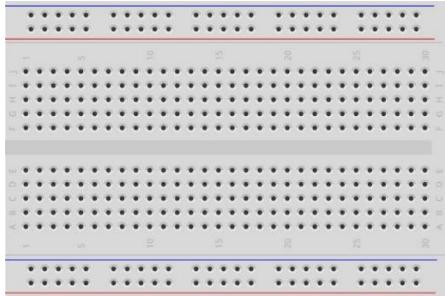

GPIO Extension Board x1

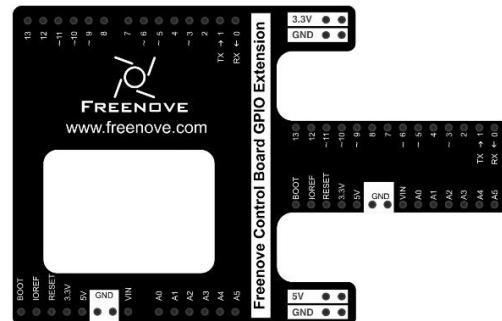

USB cable x1



LED x2



Resistor 220Ω x2



Jumper M/M x4



Code Knowledge

In the last chapter, we have taken a brief look at programming. Now let us learn more about the basic programming knowledge.

Parameters of function

In the last chapter, we have used a function with a parameter, such as:

```
1 delay(1000); // wait for a second
```


Next, we will define a function with a parameter as below:

```
1 void functionA(int i) {  
2     i = i + 1;  
3 }
```

"i" is the parameter of this function. "int" is the type of i. When calling this function, it is necessary to enter the parameter of int type:

```
1 functionA(1);
```

The input parameter will be assigned to "i" and involved in the calculation of the functionA(int i):

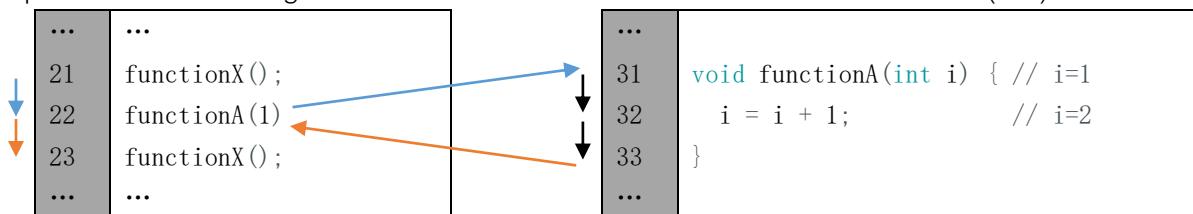

A function can define more than one parameter and the type of the parameters can be different:

```
1 void functionB(int i, char j) {  
2     char k = 'a';  
3     i = i + 1;  
4     k = j;  
5 }
```

Boolean data type

Data of Boolean type can only be assigned to "true" or "false".

"true" generally represents a certain relationship which is tenable and correct, and "false" is the opposite.

```
1 boolean isTrue;  
2 isTrue = true; // after the execution, "isTrue" is assigned to true.  
3 isTrue = false; // after the execution, "isTrue" is assigned to false.
```

In the code, the number 0 can be considered to be false, and nonzero numbers can be considered true.

Logical operator

The logic operators have "&&" (and), "||" (or), "!" (non), and the calculation object of them are boolean type. The result of logic operation is as follows:

&&	true	false
true	true	false
false	false	false

	true	false
true	true	true
false	true	false

!	
true	false
false	true

For example:

```

1 boolean isTrue;
2 isTrue = true && false; // after the execution, "isTrue" is assigned to false.
3 isTrue = true || false; // after the execution, "isTrue" is assigned to true.
4 isTrue = !true;        // after the execution, "isTrue" is assigned to false.

```

Relation operator

Relational operator is used to judge whether the relationship of the two amount is tenable and correct. If the relationship is tenable, the result is true. Otherwise, the result is false.

For example, the results of "1<2" is true and the result of "1>2" is false:

```


1 boolean isTrue;
2 isTrue = 1 < 2;           // after the execution, "isTrue" is true.
3 isTrue = 1 > 2;           // after the execution, "isTrue" is false.

```


There are other relational operators such as "==" (equal to), ">=" (greater than or equal to), "<=" (less than or equal to) and "!=" (not equal to).

Conditional statement


Conditional statements are used to decide whether or not to execute the program based on the result of judgment statement.

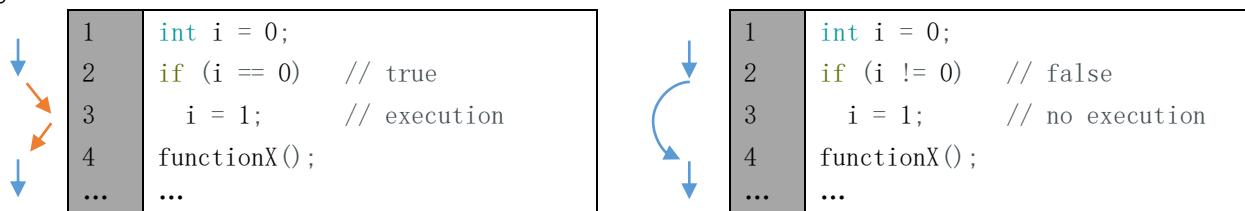


When there are many statements needed to be executed, we can put them into "{}":

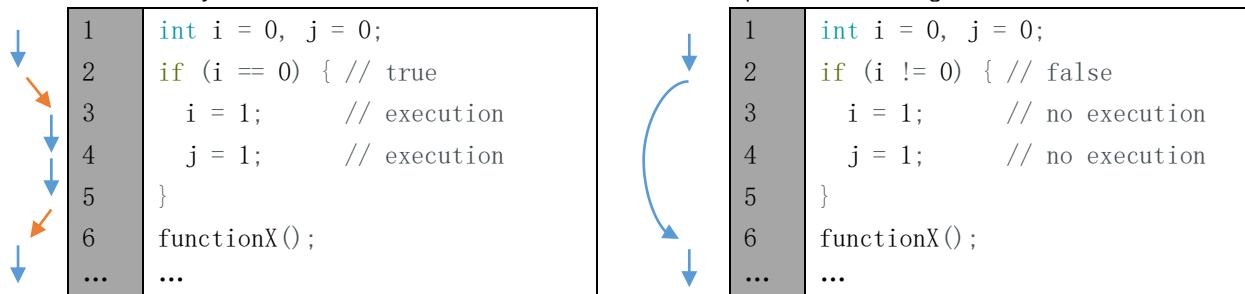

Only the section of code in which conditions are tenable will be executed:

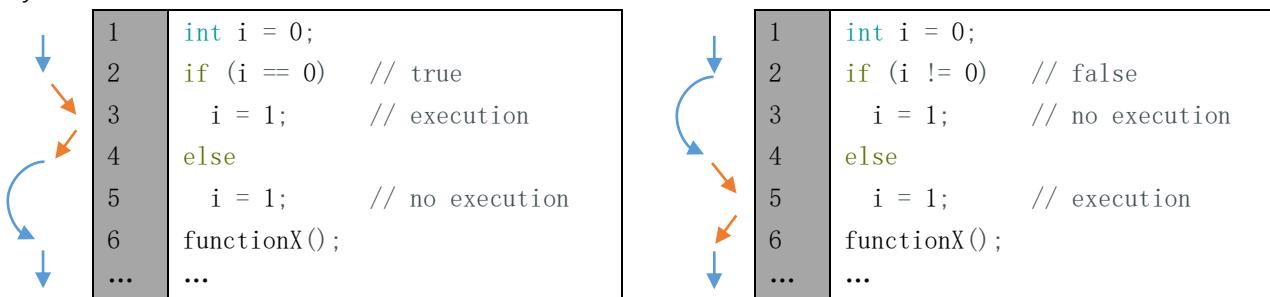


In addition, it can judge multiple conditions.

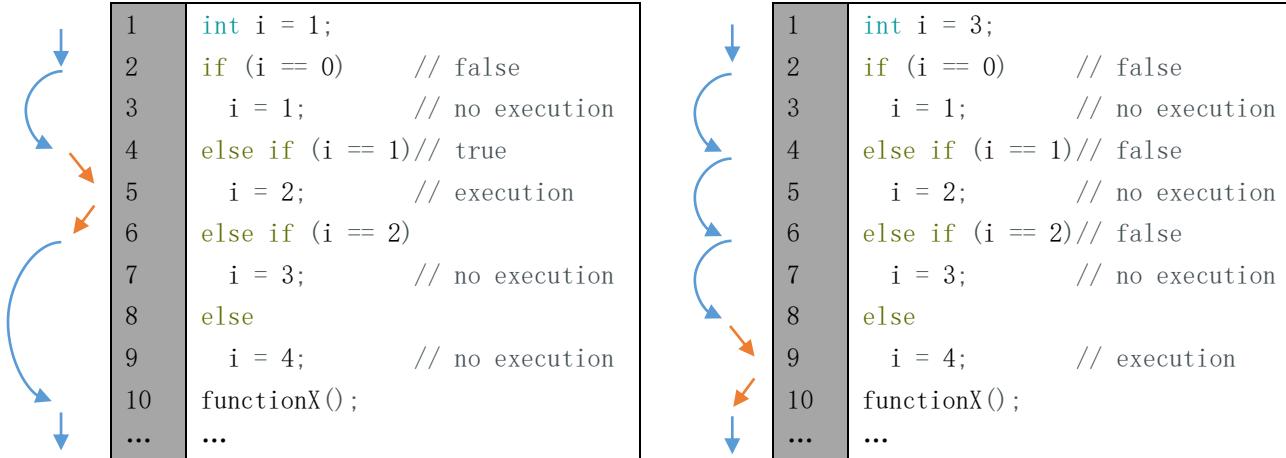


Circuit

Use pin 4 and pin 5 of the control board to drive these two LEDs respectively.

Schematic diagram

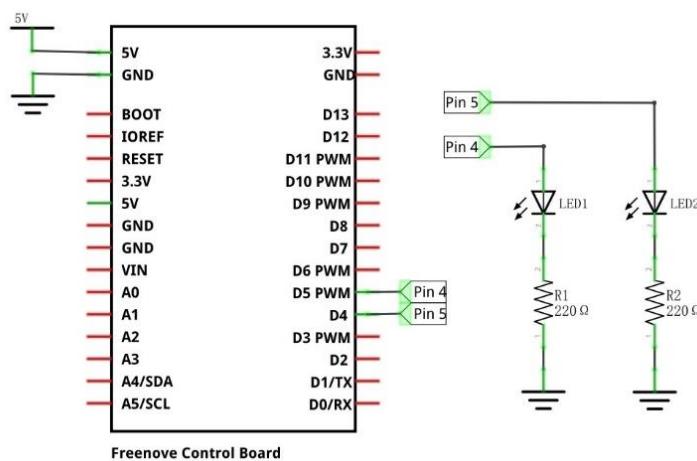

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

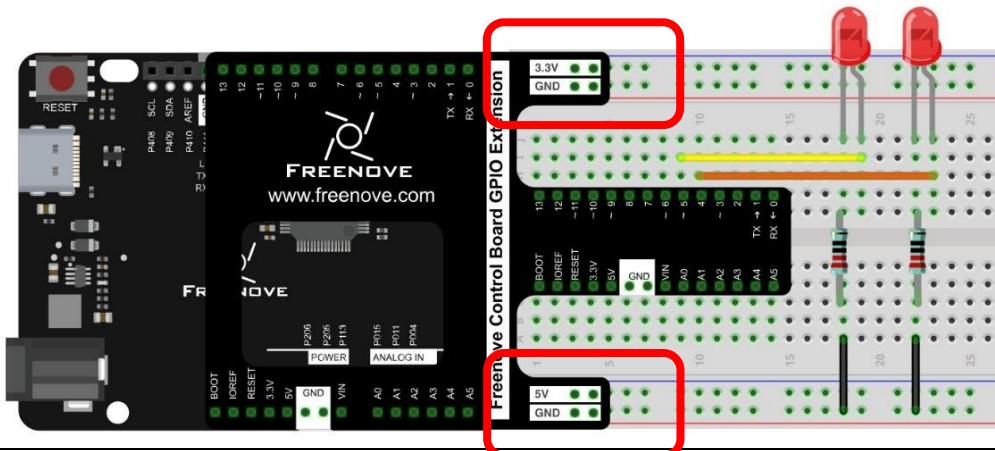

Sketch

In order to show the difference between using function and not using function, we will write two different sketches to make two LEDs blink.

Sketch 2.1.1

At first, use sketch without function to make two LEDs blink alternatively.

```


1 // set pin numbers:
2 int led1Pin = 4;           // the number of the LED1 pin
3 int led2Pin = 5;           // the number of the LED2 pin
4
5 void setup() {
6     // initialize the LED pin as an output:
7     pinMode(led1Pin, OUTPUT);
8     pinMode(led2Pin, OUTPUT);
9 }
10
11 void loop() {
12     digitalWrite(led1Pin, HIGH);    // turn the LED1 on
13     digitalWrite(led2Pin, LOW);    // turn the LED2 off
14     delay(1000);                 // wait for a second
15
16     digitalWrite(led1Pin, LOW);    // turn the LED1 off
17     digitalWrite(led2Pin, HIGH);   // turn the LED2 on
18     delay(1000);                 // wait for a second
19 }
```

This section of code is similar to the previous section. The difference is that the amount of LEDs is two, and the two LEDs blink alternatively.

Variable scope

In the 2nd and 3rd rows of the code above, we define two variables to store the pin number. These two variables defined outside the function are called "Global variable", which can be called by all other functions. Variables defined inside a function is called "local variable", which can be called only by the current function. When local variables and global variables have same names, the global variable is inaccessible within the function.

Verify and upload the code, then you will see the two LEDs blink alternatively.

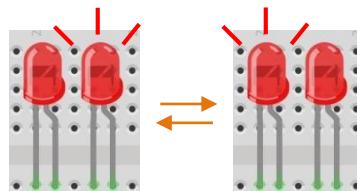

Sketch 2.1.2

In the last sketch, we can see that the following two sections of the code are similar, so we will use one function to replace them to simplify the code.

```

12   digitalWrite(led1Pin, HIGH);    // turn the LED1 on
13   digitalWrite(led2Pin, LOW);    // turn the LED2 off
14   delay(1000);                // wait for a second

16   digitalWrite(led1Pin, LOW);    // turn the LED1 off
17   digitalWrite(led2Pin, HIGH);    // turn the LED2 on
18   delay(1000);                // wait for a second

```

Now, we will use a function to improve the above code.

```

1 // set pin numbers:
2 int led1Pin = 4;           // the number of the LED1 pin
3 int led2Pin = 5;           // the number of the LED2 pin
4
5 void setup() {
6     // initialize the LED pin as an output:
7     pinMode(led1Pin, OUTPUT);
8     pinMode(led2Pin, OUTPUT);
9 }
10
11 void loop() {
12     setLed(HIGH, LOW);      // set LED1 on, and LED2 off.
13     setLed(LOW, HIGH);      // set LED1 off, and LED2 on.
14 }
15
16 void setLed(int led1, int led2) {
17     digitalWrite(led1Pin, led1); // the state of LED1 is determined by variable led1.
18     digitalWrite(led2Pin, led2); // the state of LED2 is determined by variable led2.
19     delay(1000);             // wait for a second
20 }

```

In the sketch above, we integrate the 2 LED statements into one function, void setLed(int led1, int led2), and control two LEDs through the parameters led1 and led2.

```

16 void setLed(int led1, int led2) {
17     digitalWrite(led1Pin, led1); // the state of LED1 is determined by variable led1.
18     digitalWrite(led2Pin, led2); // the state of LED2 is determined by variable led2.
19     delay(1000);             // wait for a second
20 }

```

When the function above is called, we will control the two LEDs by using different parameters as below.

```

12     setLed(HIGH, LOW);      // set LED1 on, and LED2 off.
13     setLed(LOW, HIGH);      // set LED1 off, and LED2 on.

```

Verify and upload the code, then you will see the two LEDs blink alternatively.

HIGH and LOW

The macro is an identifier that represents a number, a statement, or a piece of code. HIGH and LOW are two macros. HIGH and LOW are defined in Arduino IDE as below:

```
#define HIGH 1
#define LOW 0
```

In the code, a macro is used as the content defined by itself. For example, setLed (HIGH, LOW) is equivalent to setLed (1, 0).

Using macros can simplify the code and enhance its readability, such as INPUT, OUTPUT.

Sketch 2.1.3

In the previous section of code, we used a function that integrates two similar paragraphs of code. And we control two LEDs to blink alternatively by using two parameters. Now, let us try to use one parameter to control these two LEDs, which is achieved by conditional statements.

Now, we'll use conditional statement to improve the code above.

```
1 // set pin numbers:
2 int led1Pin = 4;           // the number of the LED1 pin
3 int led2Pin = 5;           // the number of the LED2 pin
4
5 void setup() {
6     // initialize the LED pin as an output:
7     pinMode(led1Pin, OUTPUT);
8     pinMode(led2Pin, OUTPUT);
9 }
10
11 void loop() {
12     setLed1(HIGH);      // set LED1 on, and LED2 off.
13     setLed1(LOW);       // set LED1 off, and LED2 on.
14 }
15
16 void setLed1(int led1) {
17     digitalWrite(led1Pin, led1); // the state of LED1 is determined by variable led1.
18
19     if (led1 == HIGH)        // the state of LED2 is determined by variable led1.
20         digitalWrite(led2Pin, LOW); // if LED1 is turned on, LED2 will be turned off.
21     else
22         digitalWrite(led2Pin, HIGH); // if LED1 is turned off, LED2 will be turned on.
23
24     delay(1000);            // wait for a second
25 }
```

Here, we rewrite the function so that we only need to set the state of LED1, and the state of LED2 can be set automatically.

Verify and upload the code, and then two LEDs blink alternatively.

Chapter 3 LED Bar Graph



We have learned previously how to control 1 or 2 LEDs through Sketch on the control board and learned some basic knowledge of programming. Now let us try to control 10 LEDs and learn how to simplify the code.

Project 3.1 LED Bar Graph Display

Let us use control board to control a bar graph LED consisting of 10 LEDs.


Component List

Control board x1

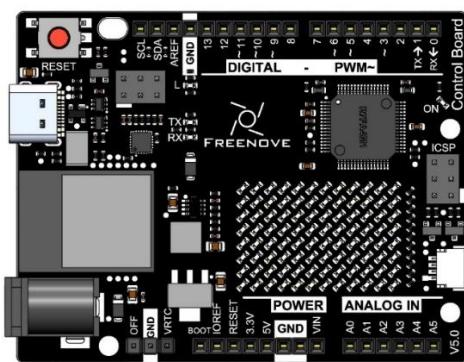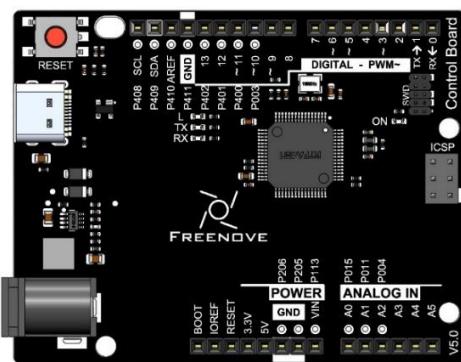


or

Breadboard x1

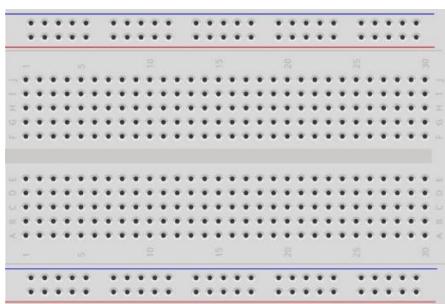

GPIO Extension Board x1

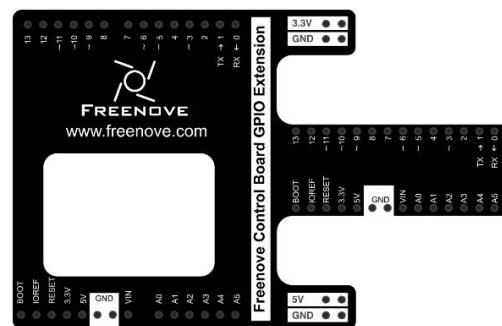

USB cable x1



LED bar graph x1



Resistor 220Ω x10



Jumper M/M x10




Component Knowledge

Let us learn about the basic features of components to use them better.

LED bar graph

LED bar graph is a component integration consisting of 10 LEDs. At the bottom of the LED bar graph, there are two rows of pins, corresponding to positive and negative pole separately. If the LED bar graph cannot work in the circuit, it is probably because the connection between positive and negative pole is wrong. Please try to reverse the LED bar graph connection.

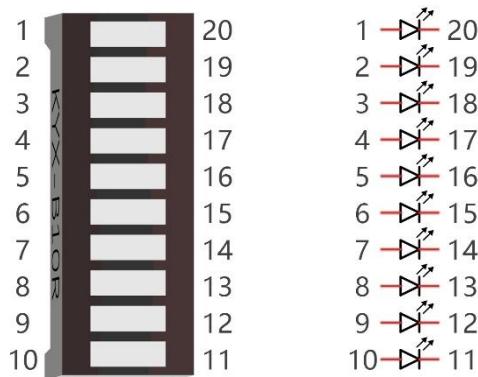

Code Knowledge

This section will use new code knowledge.

Array

Array is used to record a set of variables. An array is defined as below:

```
1 int a[10];
```

"int" is the type of the array and "10" represents the amount of elements of the array. This array can store 10 int types of elements as below.

```
1 int a[10] = {0, 1, 2, 3, 4, 5, 6, 7, 8, 9};
```

Or there is another form that the number of elements is the size of the array:

```
1 int a[] = {0, 1, 2, 3, 4, 5, 6, 7, 8, 9};
```

We can reference elements of an array as below:

```
1 int i, j;
2 i = a[0];
3 j = a[1];
4 a[0] = 0;
```

Among them, "[]" is the array index, with a[0] as the first elements in the array.

For example, now we define an array b[] below:

```
1 int b[] = {5, 6, 7, 8};
```

The value of each element in array b[] is as follows:

b[0]	b[1]	b[2]	b[3]
5	6	7	8

This is just the use of one-dimensional array. And there are two-dimensional arrays, three-dimensional arrays, and multi-dimensional arrays. Readers interested of this part can develop your own learning.

Loop

The loop statement is used to perform repetitive work such as the initialization to all the elements of an array.

```
1 while(expression)
2     functionX();
```

When there is more than one statement to be executed, the form is as follows:

```
1 while(expression) {
2     functionX();
3     functionY();
4 }
```

The first step of the execution is judging the expression inside "()". If the result is false, the statements inside "{}" will not be executed; if result is true, the statements will be executed.

```
1 int i = 0;
2 while (i < 2)
3     i = i + 1;
4 i = 5;
```

First time: i<2, i=0 is tenable, execute i=i+1, then i=1;

Second time: i<2, i=1 is tenable, execute i=i+1, then i=2;

Third time: i<2, i=2 is not tenable, execution of loop statements is completed. Statement i=5 will be executed next.

"do while" and "while" is similar. The difference is that the loop statements of "do while" is executed before judging expression. The result of the judgment will decide whether or not to go on the next execution:

```
1 do {
2     functionX();
3 } while (expression);
```

"for" is another loop statement, and its form is as follows:

```
1 for (expression1; expression2; expression 3)
2     functionX();
```

When there is more than one statement to be executed, the form is as follows:

```
1 for (expression 1; expression 2; expression 3) {
2     functionX();
3     functionY();
4 }
```

Expression 1 is generally used to initialize variables; expression 2 is a judgement which is used to decide whether or not to execute loop statements; the expression 3 is generally used to change the value of variables.

For example:

```
1 int i = 0, j = 0;
2 for (i = 0; i < 2; i++)
3     j++;
4 i = 5;
```

First time: $i=0$, $i < 2$ is tenable, execute $j++$, and execute $i++$, then $i=1$, $j=1$;

Second time: $i=1$, $i < 2$ is tenable, execute $j++$, and execute $i++$, then $i=2$, $j=2$;

Third time: $i < 2$ is tenable, $i=2$ is not tenable. The execution of loop statements is completed. Statement $i=5$ will be executed next.


Operator $++$, $--$

" $i++$ " is equivalent to " $i=i+1$ ". And " $i--$ " equivalent to " $i=i-1$ ".


Circuit

Let us use pin 4, 5, 6, 7, 8, 9, 10, 11, 12 of the control board to drive LED bar graph.

Schematic diagram

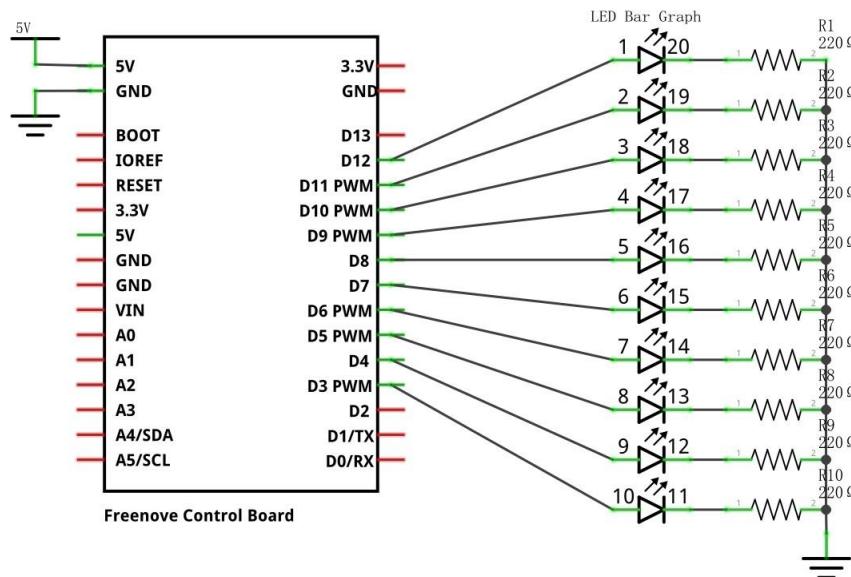

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

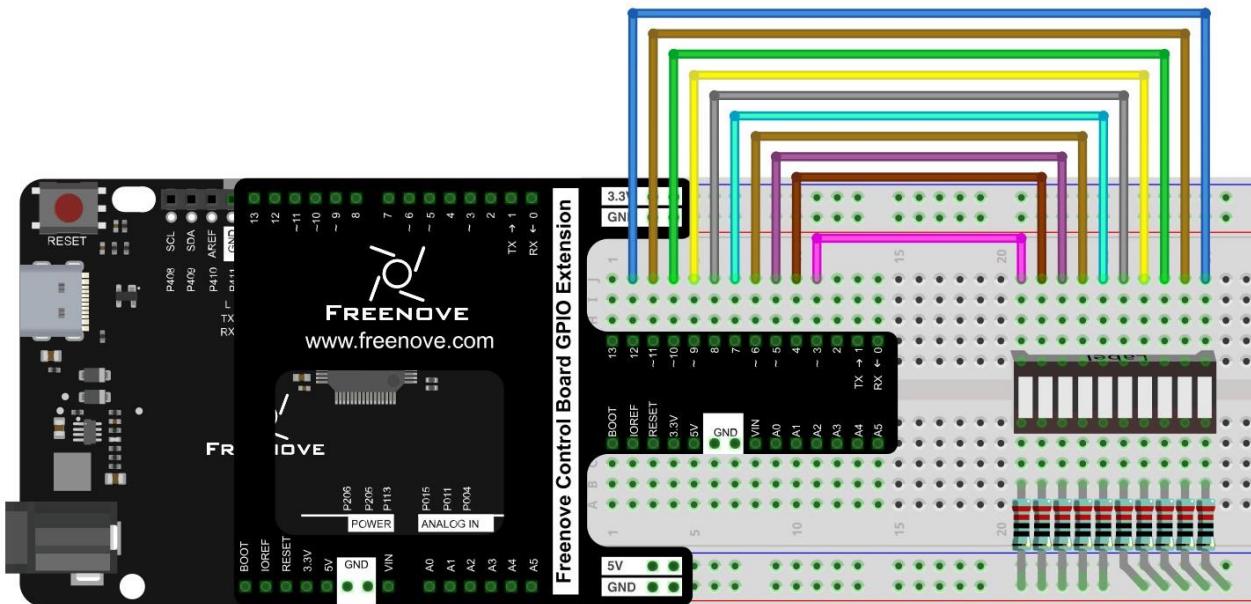

Sketch

Now let us complete the sketch to control LED bar graph.

Sketch 3.1.1

First, write a sketch to achieve the LED light water.

```

1 const int ledCount = 10;      // the number of LEDs in the bar graph
2
3 // an array of pin numbers to which LEDs are attached
4 int ledPins[] = { 3, 4, 5, 6, 7, 8, 9, 10, 11, 12 };
5
6 void setup() {
7     // loop over the pin array and set them all to output:
8     for (int i = 0; i < ledCount; i++) {
9         pinMode(ledPins[i], OUTPUT);
10    }
11 }
12
13 void loop() {
14     // the ith LED of LED bar graph will light up in turn
15     for (int i = 0; i < ledCount; i++) {
16         barGraphDisplay(i);
17     }
18 }
19
20 void barGraphDisplay(int ledOn) {
21     // make the "ledOn"th LED of LED bar graph on and the others off
22     for (int i = 0; i < ledCount; i++) {
23         if (i == ledOn)
24             digitalWrite(ledPins[i], HIGH);
25         else
26             digitalWrite(ledPins[i], LOW);
27     }
28     delay(100);
29 }
```

Firstly, let us define a read-only variable to record the number of LEDs as the number of times in the loop.

```
1 const int ledCount = 10;      // the number of LEDs in the bar graph
```

Read-only variable

"const" keyword is used to define read-only variables, which is called in the same way as other variables. But read-only variables can only be assigned once.

Then we define an array used to store the number of pins connected to LED bar graph. So it is convenient to

manipulate arrays to modify the pin number.

```
3 // an array of pin numbers to which LEDs are attached
4 int ledPins[] = { 3, 4, 5, 6, 7, 8, 9, 10, 11, 12 };
```

Use loop statement to set the pins to output mode in function setup().

```
6 void setup() {
7     // loop over the pin array and set them all to output:
8     for (int i = 0; i < ledCount; i++) {
9         pinMode(ledPins[i], OUTPUT);
10    }
11 }
```


Define a function to turn ON a certain LED on the LED bar graph and turn OFF the other LEDs.

```
20 void barGraphDisplay(int ledOn) {
21     // make the "ledOn"th LED of LED bar graph on and the others off
22     for (int i = 0; i < ledCount; i++) {
23         if (i == ledOn)
24             digitalWrite(ledPins[i], HIGH);
25         else
26             digitalWrite(ledPins[i], LOW);
27     }
28     delay(100);
29 }
```

Finally, when the above function is called cyclically, there will be a formation of flowing water lamp effect in LED bar graph.

```
13 void loop() {
14     // the ith LED of LED bar graph will light up in turn
15     for (int i = 0; i < ledCount; i++) {
16         barGraphDisplay(i);
17     }
18 }
```

Verify and upload the code, then you will see the LED bar graph flashing like flowing water.

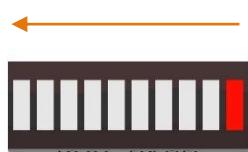

Sketch 3.1.2

Then modify the code to create a reciprocating LED light water.

```

1 const int ledCount = 10;      // the number of LEDs in the bar graph
2
3 // an array of pin numbers to which LEDs are attached
4 int ledPins[] = { 3, 4, 5, 6, 7, 8, 9, 10, 11, 12 };
5
6 void setup() {
7     // loop over the pin array and set them all to output:
8     for (int i = 0; i < ledCount; i++) {
9         pinMode(ledPins[i], OUTPUT);
10    }
11 }
12
13 void loop() {
14     // makes the "i"th LED of LED bar graph bright in turn
15     for (int i = 0; i < ledCount; i++) {
16         barGraphDisplay(i);
17     }
18     // makes the "i"th LED of LED bar graph bright in reverse order
19     for (int i = ledCount; i > 0; i--) {
20         barGraphDisplay(i - 1);
21     }
22 }
23
24 void barGraphDisplay(int ledOn) {
25     // make the "ledOn"th LED of LED bar graph on and the others off
26     for (int i = 0; i < ledCount; i++) {
27         if (i == ledOn)
28             digitalWrite(ledPins[i], HIGH);
29         else
30             digitalWrite(ledPins[i], LOW);
31     }
32     delay(100);
33 }
```

We have modified the code inside the function loop() to make the LED bar graph light up in one direction, and then in a reverse direction repeatedly.

Verify and upload the code, then you will see a reciprocating LED water light on LED bar graph.



Chapter 4 LED Blink Smoothly



In the previous chapter, we have used Sketch to control up to 10 LEDs on the control board to blink and learned some basic knowledge of programming. Now, let us try to make LED emit different brightness of light.

Project 4.1 LEDs Emit Different Brightness

Now, let us use control board to make 4 LED emit different brightness of light.


Component List

Control board x1

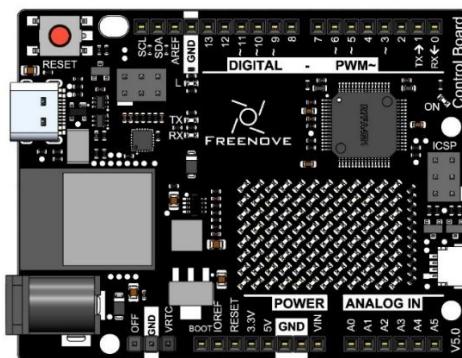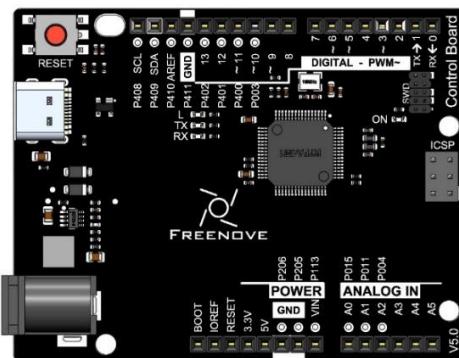


or

Breadboard x1

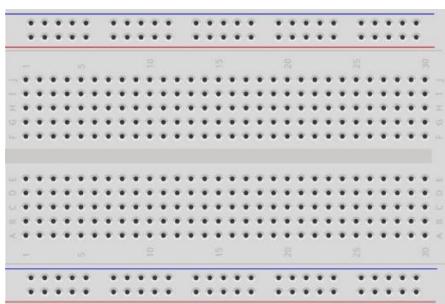

GPIO Extension Board x1

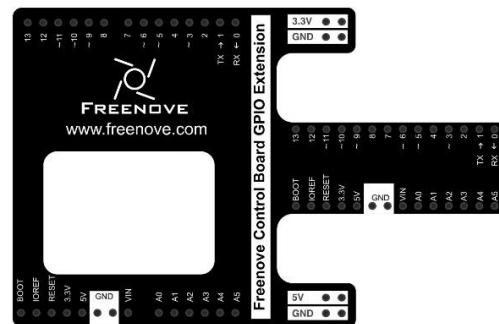

USB cable x1



LED x4



Resistor 220Ω x4



Jumper M/M x8



Circuit Knowledge


At first, let us learn how to use the circuit to make LED emit different brightness of light,

PWM

PWM, Pulse-Width Modulation, is a very effective method for using digital signals to control analog circuits. Digital processors cannot directly output analog signals. PWM technology makes it very convenient to achieve this conversion (translation of digital to analog signals).

PWM technology uses digital pins to send certain frequencies of square waves, that is, the output of high levels and low levels, which alternately last for a while. The total time for each set of high levels and low levels is generally fixed, which is called the period (Note: the reciprocal of the period is frequency). The time of high level outputs are generally called “pulse width”, and the duty cycle is the percentage of the ratio of pulse duration, or pulse width (PW) to the total period (T) of the waveform.

The longer the output of high levels last, the longer the duty cycle and the higher the corresponding voltage in the analog signal will be. The following figures show how the analog signal voltages vary between 0V-5V (high level is 5V) corresponding to the pulse width 0%-100%:

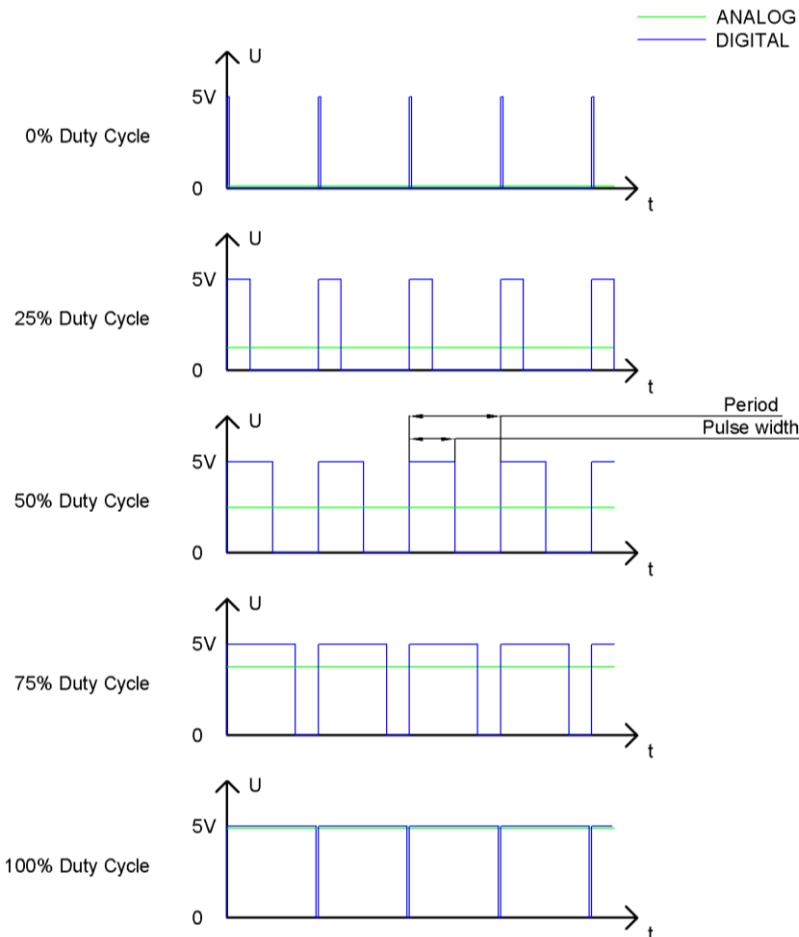

The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of an LED or the speed of DC motor and so on.

Code Knowledge

We will use new code knowledge in this section.

Return value of function

We have learned and used the function without return value, now we will learn how to use the function with return value. A function with return value is shown as follow:

```

1 int sum(int i, int j) {
2     int k = i + j;
3     return k;
4 }
```

"int" declares the type of return value of the function sum(int i, int j). If the type of the return value is void, the function does not return a value.

One function can only return one value. It is necessary to use the return statement to return the value of function.

When the return statement is executed, the function will return immediately regardless of code behind the return statement in this function.

A function with return value is called as follows:

```

1 int a = 1, b = 2, c = 0;
2 c = sum(1, 2);           // after the execution the value of c is 3
```

A function with a return value can also be used as a parameter of functions, for example:

```
1 delay(sum(100, 200));
```

It is equivalent to the following code:


```
1 delay(300);
```

return

We have learned the role of the return statement in a function with a return value. It can also be used in functions without a return value, and there is no data behind the return keyword:

```
1 return;
```


In this case, when the return statement is executed, the function will immediately end its execution rather than return to the end of the function. For example:

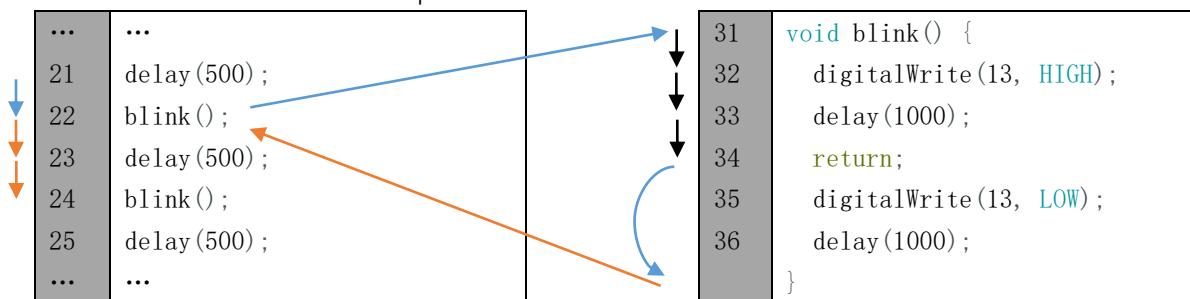


Circuit

Use pin 5, 6, 9, 10 on the control board to drive 4 LEDs.

Schematic diagram

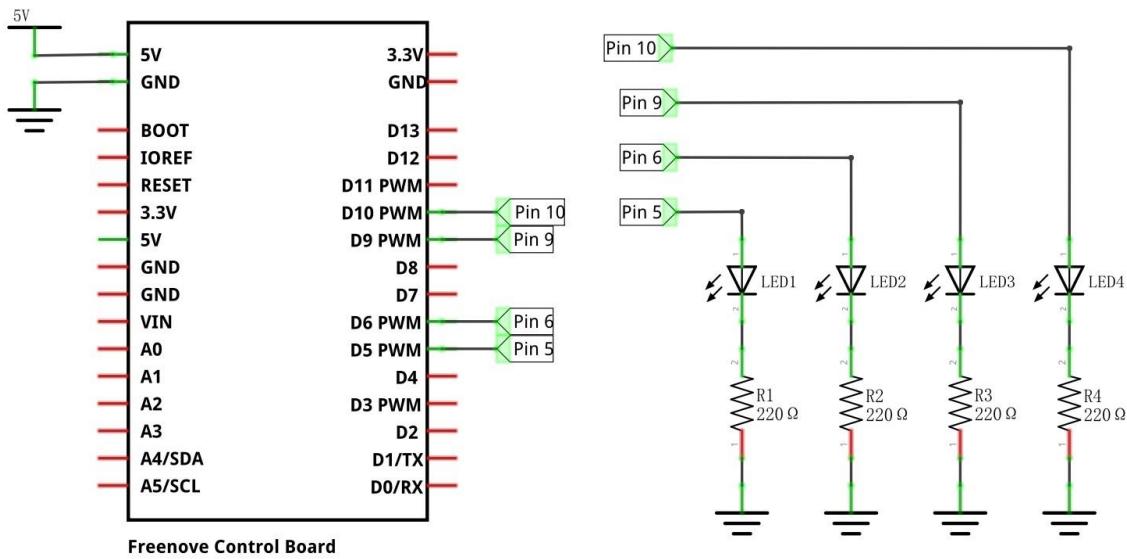

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

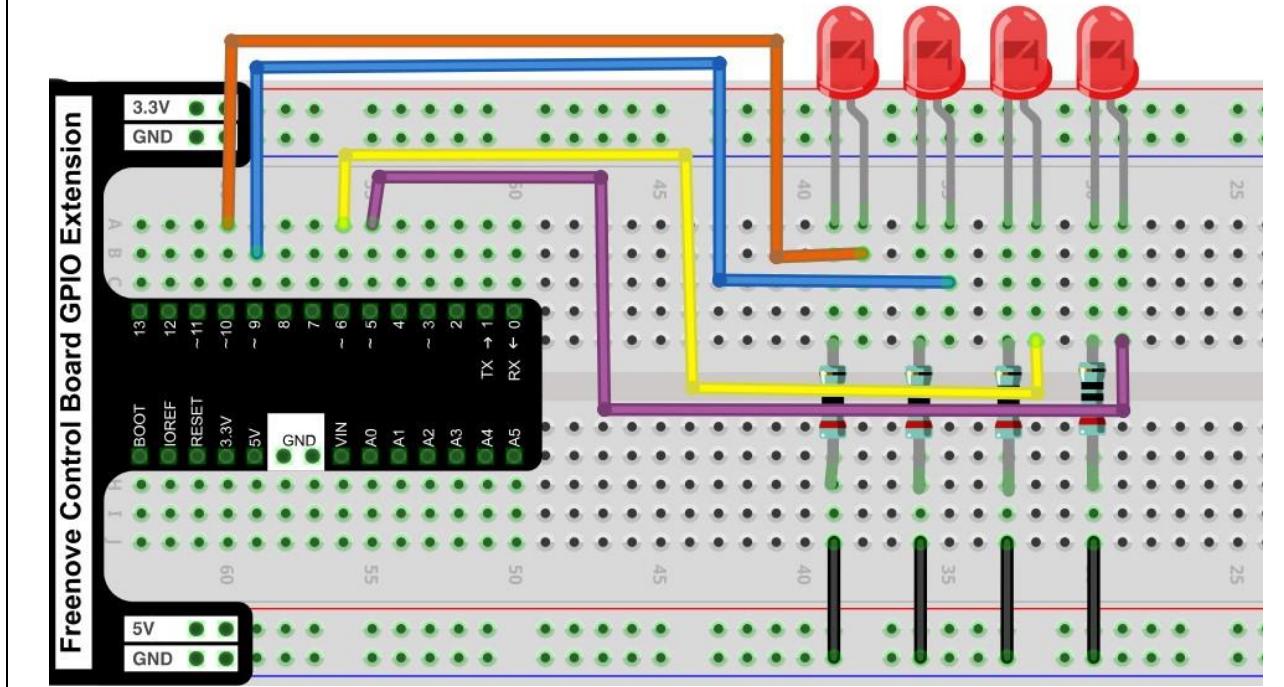

Sketch

Sketch 4.1.1

Now let us use sketch to make 4 LEDs emit different brightness of light. We will transmit signal to make the 4

Need help? Contact support@freenove.com

ports connected to LEDs output the PWM waves with duty cycle of 2%, 10%, 50%, and 100% to let the LEDs emit different brightness of the light.

```
1 // set pin numbers:  
2 int ledPin1 = 5,           // the number of the LED1 pin  
3     ledPin2 = 6,           // the number of the LED2 pin  
4     ledPin3 = 9,           // the number of the LED3 pin  
5     ledPin4 = 10;          // the number of the LED4 pin  
6  
7 void setup() {  
8     // initialize the LED pin as an output:  
9     pinMode(ledPin1, OUTPUT);  
10    pinMode(ledPin2, OUTPUT);  
11    pinMode(ledPin3, OUTPUT);  
12    pinMode(ledPin4, OUTPUT);  
13}  
14  
15 void loop()  
16 {  
17     // set the ports output PWM waves with different duty cycle  
18     analogWrite(ledPin1, map(2, 0, 100, 0, 255));  
19     analogWrite(ledPin2, map(10, 0, 100, 0, 255));  
20     analogWrite(ledPin3, map(50, 0, 100, 0, 255));  
21     analogWrite(ledPin4, map(100, 0, 100, 0, 255));  
22 }
```

After the initialization of the 4 ports, we set the ports to output PWM waves with different duty cycle. Take ledPin1 as an example, firstly map 2% to the range of 0-255, and then output the PWM wave with duty cycle of 2%,

```
1 analogWrite(ledPin1, map(2, 0, 100, 0, 255));
```

analogWrite(pin, value)


Arduino IDE provides the function, `analogWrite(pin, value)`, which can make ports directly output PWM waves. Only the digital pin marked with "˜" symbol on the control board can use this function to output PWM waves. In the function called `analogWrite(pin, value)`, the parameter "pin" specifies the port used to output PWM wave. The range of value is 0-255, which represents the duty cycle of 0%-100%.

In order to use this function, we need to set the port to output mode.

map(value, fromLow, fromHigh, toLow, toHigh)

This function is used to remap a value, which will return a new value whose percentage in the range of toLow-toHigh is equal to the percentage of "value" in the range of fromLow-fromHigh. For example, 1 is the maximum in the range of 0-1 and the maximum value in the scope of 0-2 is 2, that is, the result value of `map (1, 0, 1, 0, 2)` is 2.

Verify and upload the code, and you will see the 4 LEDs emit light with different brightness.

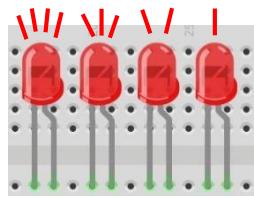

Project 4.2 LED Blinking Smoothly

We will learn how to make a LED blink smoothly, that is, breathing light.


Component List

The Component list is basically the same as those in last section. And we need to get rid of a few LEDs and resistors.


Circuit

Remove some LEDs and resistors connected to pin 6, 9, 10 on the control board in the circuit of the previous section.

Schematic diagram

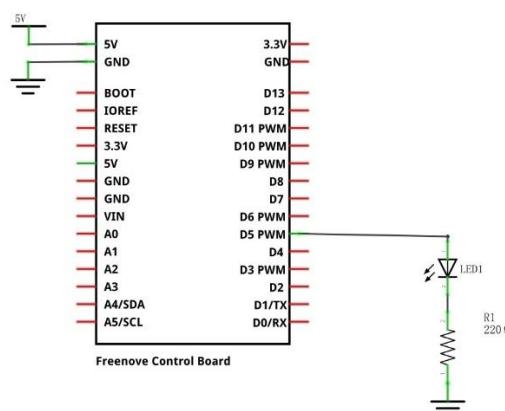

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

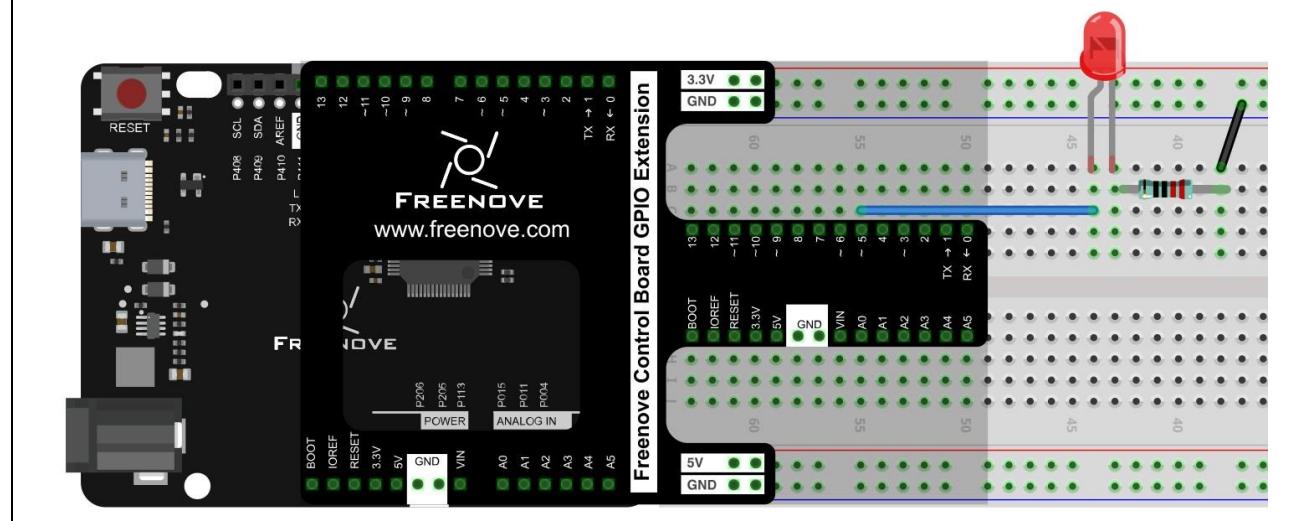

Sketch

Sketch 4.2.1


Now complete the sketch to make brightness of LED change from dark to bright, and then from bright to dark. That is to make the duty cycle of the PWM wave change from 0%-100%, and then from 100%-0% cyclically.

```

1 // set pin numbers:
2 int ledPin = 5;           // the number of the LED pin
3
4 void setup() {
5     // initialize the LED pin as an output:
6     pinMode(ledPin, OUTPUT);
7 }
8
9 void loop() {
10    // call breath() cyclically
11    breath(ledPin, 6);
12    delay(500);
13 }
14
15 void breath(int ledPin, int delayMs) {
16     for (int i = 0; i <= 255; i++) { // "i" change from 0 to 255
17         analogWrite(ledPin, i);      // corresponding duty cycle change from 0%-100%
18         delay(delayMs);          // adjust the rate of change of brightness
19     }
20     for (int i = 255; i >= 0; i--) { // "i" change from 255 to 0
21         analogWrite(ledPin, i);      // corresponding duty cycle change from 0%-100%
22         delay(delayMs);          // adjust the rate of change in brightness
23     }
24 }
```

Through two “for” loops, the duty cycle of the PWM wave changes from 0% to 100%, and then from 100% to 0% cyclically. `delay(ms)` function is used to control the change rate in the “for” loop, and you can try to modify the parameters to modify the change rate of brightness.

Verify and upload the code, then you will see that the brightness of the LED changes from dark to light, and from the light to dark cyclically.

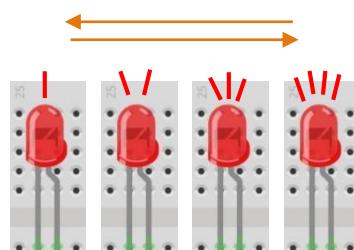

Chapter 5 Control LED with Push Button Switch



In the previous chapter, we have used the control board to output signals to make 10 LEDs flash, and make one LED emit different brightness. Now, let's learn how to get an input signal.

Project 5.1 Control LED with Push Button Switch

We will use the control board to get the status of the push button switch, and show it through LED.


Component List

Control board x1

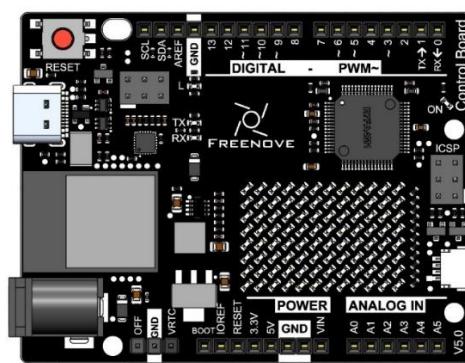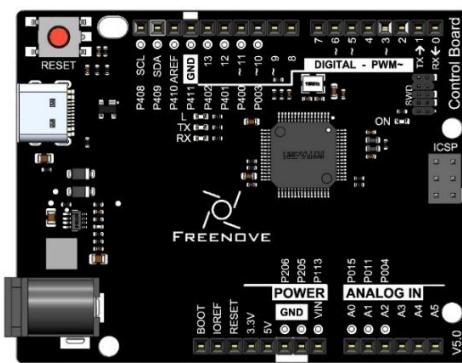


or

Breadboard x1

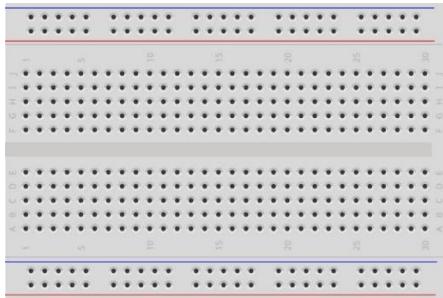

GPIO Extension Board x1

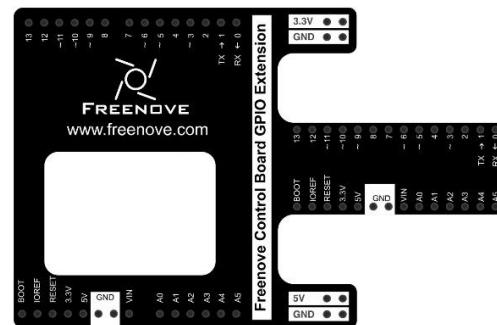


USB cable x1




LED x1



Resistor 220Ω x1

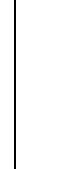

Resistor 10kΩ x2



Push button Switch x1




Jumper M/M x4



Circuit Knowledge


Connection of Push Button Switch

In Chapter 1, we connect push button switch directly to power up the circuit to control the LED to turn on or off. In digital circuits, we need to use the push button switch as an input signal. The recommended connection is as follows:

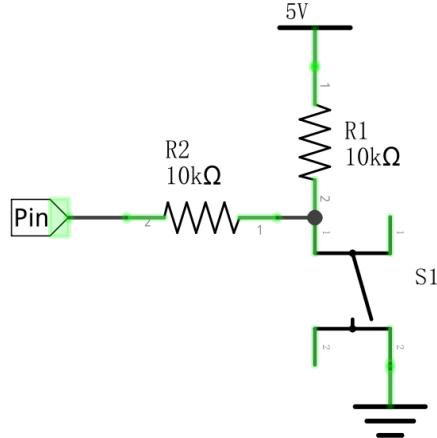

In the above circuit diagram, when the button is not pressed, 5V (high level) will be detected by control board port; and 0V (low level) when the button is pressed. The role of Resistor R2 here is to prevent the port from being set to output high level by accident. Without R2, the port could be connected directly to the cathode and cause a short circuit when the button is pressed.


The following diagram shows another connection, in which the level detected by the control board port is opposite to the above diagram, whenever the button is pressed or not.

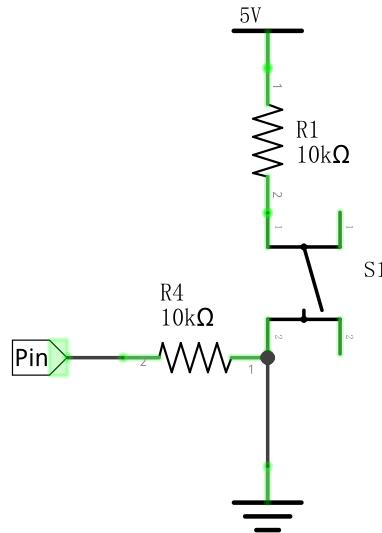


Circuit

Use pin 12 of control board to detect the status of push button, and pin 9 to drive LED.

Schematic diagram

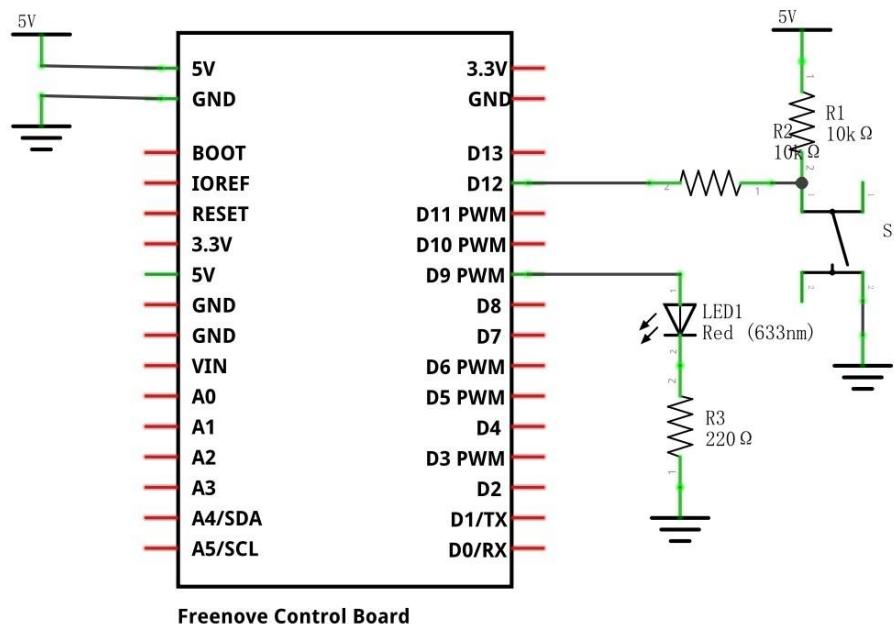

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

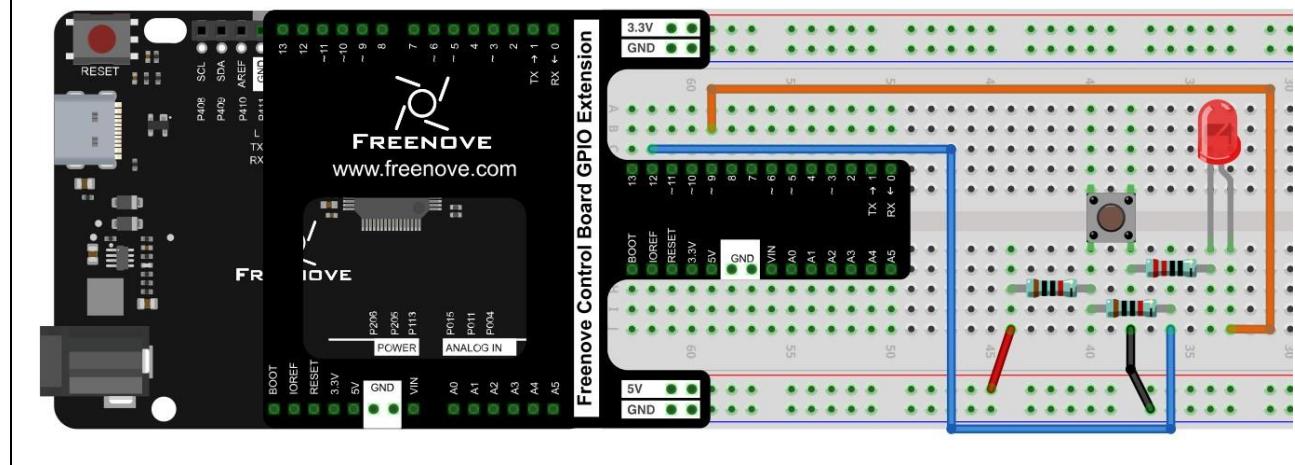

Sketch

Sketch 5.1.1

Now, write code to detect the state of push button, and show it through LED.

```


1 int buttonPin = 12; // the number of the push button pin
2 int ledPin = 9; // the number of the LED pin
3
4 void setup() {
5     pinMode(buttonPin, INPUT); // set push button pin into input mode
6     pinMode(ledPin, OUTPUT); // set LED pin into output mode
7 }
8
9 void loop() {
10    if (digitalRead(buttonPin) == HIGH) // if the button is not pressed
11        digitalWrite(ledPin, LOW); // switch off LED
12    else // if the button is pressed
13        digitalWrite(ledPin, HIGH); // switch on LED
14 }
```

After the port is initialized, the LED will be turned on or off in accordance with the state of the pin connected to push button switch.

digitalRead(pin)

Arduino IDE provides a function `digitalRead(pin)` to obtain the state of the port pin. The return value is HIGH or LOW, that is, high level or low level.

Verify and upload the code, press the button, LED lights up; release the button, LED lights off.

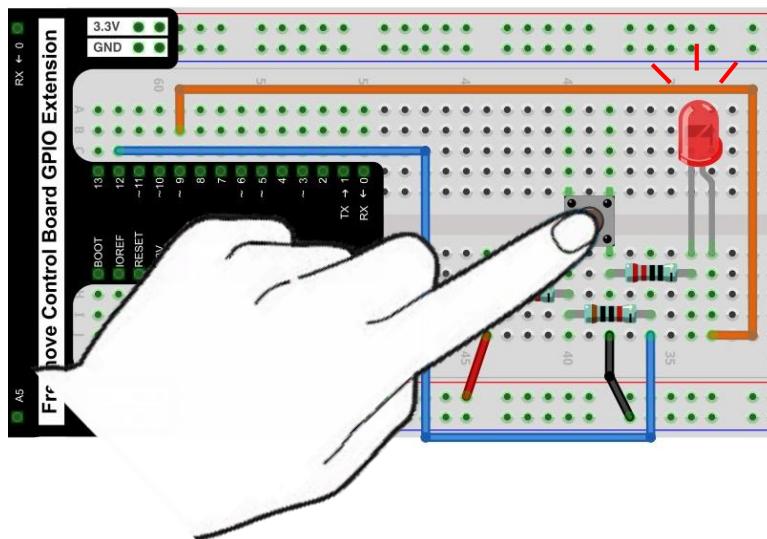

Project 5.2 Change LED State with Push Button Switch

In the previous section, we have finished the experiment that LED lights ON when push button switch is pressed, and lights OFF as soon as it's released. Now, let's try something new: each time you press the button down, the state of LED will be changed.


Component List

Same with the previous section.

Circuit Knowledge

Debounce a push button switch

When a Momentary Push Button Switch is pressed, it will not change from one state to another state immediately. Due to tiny mechanical vibrations, there will be a short period of continuous buffeting before it stabilizes in a new state too fast for Humans to detect but not for computer microcontrollers. The same is true when the push button switch is released. This unwanted phenomenon is known as "bounce".

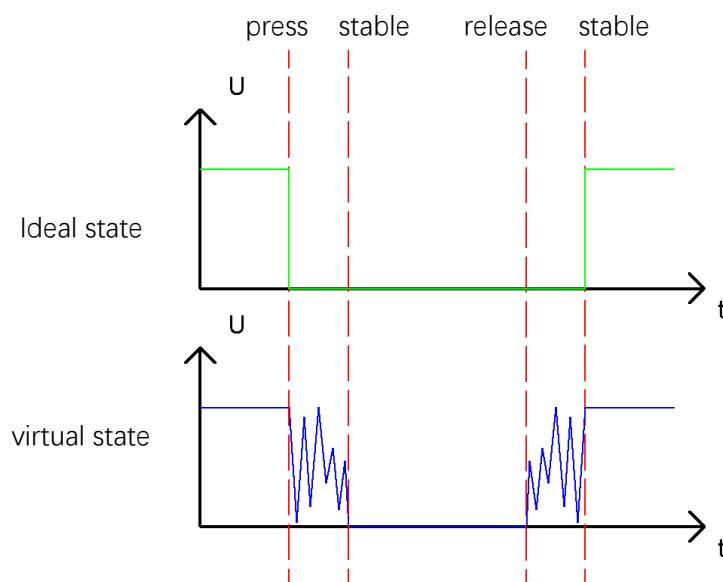

Therefore, if we can directly detect the state of the Push Button Switch, there are multiple pressing and releasing actions in one pressing cycle. This buffeting will mislead the high-speed operation of the microcontroller to cause many false decisions. Therefore, we need to eliminate the impact of buffeting. Our solution: to judge the state of the button multiple times. Only when the button state is stable (consistent) over a period of time, can it indicate that the button is actually in the ON state (being pressed).

Circuit

Same with the previous section.

Sketch

Sketch 5.2.1

Now, write a code to detect the state of the push button switch. Every time you pressed it, the state of LED will be changed.

```
1 int buttonPin = 12; // the number of the push button pin
2 int ledPin = 9; // the number of the LED pin
3 boolean isLighting = false; // define a variable to save the state of LED
4
5 void setup() {
6     pinMode(buttonPin, INPUT); // set push button pin into input mode
7     pinMode(ledPin, OUTPUT); // set LED pin into output mode
8 }
9
10 void loop() {
11     if (digitalRead(buttonPin) == LOW) { // if the button is pressed
12         delay(10); // delay for a certain time to skip the bounce
13         if (digitalRead(buttonPin) == LOW) { // confirm again if the button is pressed
14             reverseLED(); // reverse LED
15             while (digitalRead(buttonPin) == LOW); // wait for releasing
16             delay(10); // delay for a certain time to skip bounce when the button is released
17         }
18     }
19 }
20
21 void reverseLED() {
22     if (isLighting) { // if LED is lighting,
23         digitalWrite(ledPin, LOW); // switch off LED
24         isLighting = false; // store the state of LED
25     }
26     else { // if LED is off,
27         digitalWrite(ledPin, HIGH); // switch LED
28         isLighting = true; // store the state of LED
29     }
30 }
```

Verify and upload the code, then each time you press the button, LED changes its state accordingly.

When judging the push button switch state, if it is detected as "pressed down", wait for a certain time to detect again to eliminate the effect of bounce. When the state is stable, released push button switch, and wait for a certain time to eliminate the effect of bounce after it is released.

Chapter 6 Serial


In this chapter, we will get into serial communication, which is a more advanced means of communication.

Project 6.1 Send Data through Serial

We will use the serial port on control board to send data to computer.

Component List

Control board x1

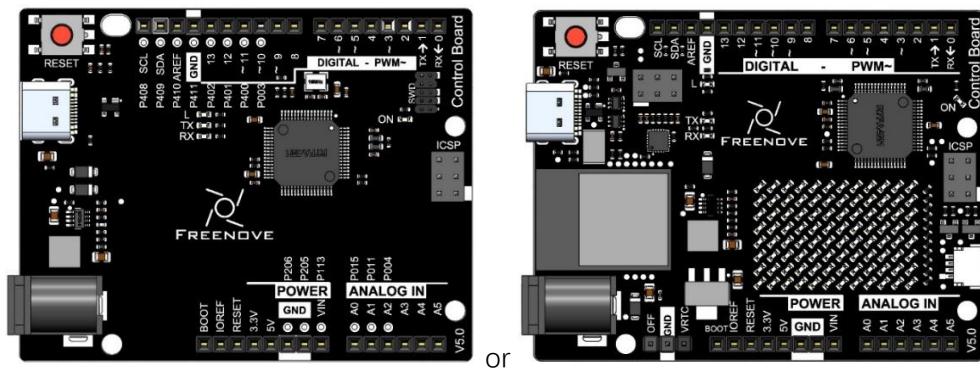

USB cable x1



Code Knowledge

Bit and Byte

As mentioned earlier, computers use a binary signal. A binary signal is called 1 bit, and 8 bits organized in order is called 1 byte. Byte is the basic unit of information in computer storage and processing. 1 byte can represent $2^8=256$ numbers, that is, 0-255. For example:

As to binary number 10010110, "0" usually presents the lowest value in code.

Sequence	7	6	5	4	3	2	1	0
Number	1	0	0	1	0	1	1	0

When a binary number need to be converted to decimal number, first, the nth number of it need be multiplied by n power of 2, then sum all multiplicative results. Take 10010110 as an example:

$$1*2^7+0*2^6+0*2^5+1*2^4+0*2^3+1*2^2+1*2^1+0*2^0=150$$

We can make a decimal number divided by 2 to convert it to binary number. Get the integer quotient for the next iteration and get the remainder for the binary digit. Repeat the steps until the quotient is equal to zero. Arrange all remainders from right to left in a line. Then we complete the conversion. For example:


Remainder	Sequence
0	0
1	1
1	2
0	3
1	4
0	5
0	6
1	7
0	

The result is 10010110.

Circuit Knowledge


Serial and parallel communication

Serial communication uses one data cable to transfer data one bit by another in turn, while parallel communication means that the data is transmitted simultaneously on multiple cables. Serial communication takes only a few cables to exchange information between systems, which is especially suitable for computers to computer, long distance communication between computers and peripherals. Parallel communication is faster, but it requires more cables and higher cost, so it is not appropriate for long distance communication.

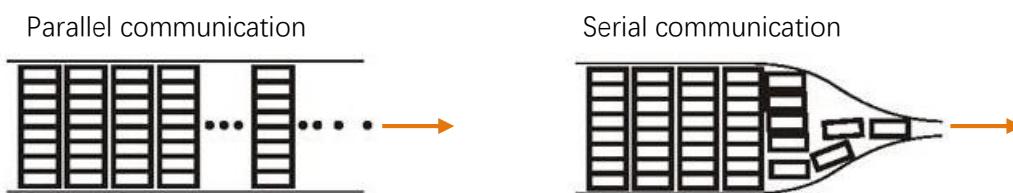

Serial communication

Serial communication generally refers to the Universal Asynchronous Receiver/Transmitter (UART), which is commonly used in electronic circuit communication. It has two communication lines, one is responsible for sending data (TX line) and the other for receiving data (RX line). The serial communication connections of two devices use is as follows:

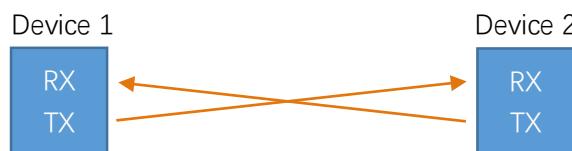

Before serial communication starts, the baud rate in both sides must be the same. Only use the same baud rate can the communication between devices be normal. The baud rates commonly used are 9600 and 115200.


Serial port on Control board

Control board has integrated USB to serial transfer, so it can communicate with computer when USB cable get connected to it. Arduino IDE also uploads code to control board through the serial connection.

Computer identifies serial devices connected to your computer as COMx. We can use the Serial Monitor window of Arduino IDE to communicate with control board, connect control board to computer through the USB cable, choose the correct device, and then click the Serial Monitor icon to open the Serial Monitor window.




Interface of Serial Monitor window is as follows. If you can't open it, make sure control board had been connected to the computer, and choose the correct serial port in the menu bar "Tools".

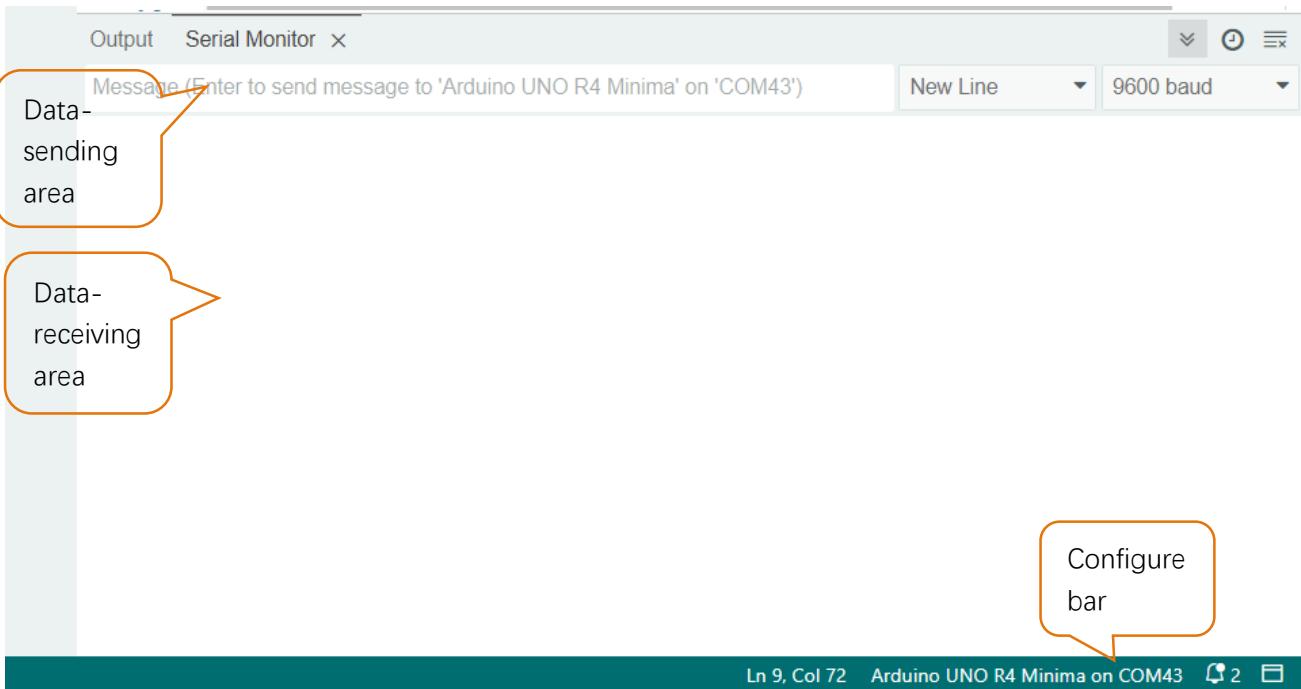

Circuit

Connect control board to the computer with USB cable.

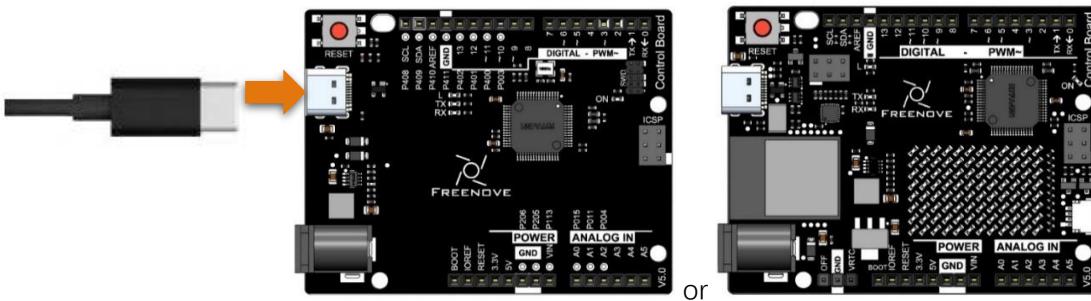

If you need any support, please feel free to contact us via: support@freenove.com

Sketch

Sketch 6.1.1

Now, write code to send some texts to the Serial Monitor window

```

1 int counter = 0; // define a variable as a data sending to serial port
2
3 void setup() {
4     Serial.begin(9600);           // initialize the serial port, set the baud rate to 9600
5     Serial.println("UNO is ready!"); // print the string "UNO is ready!"
6 }
```

```
7
8 void loop() {
9     // print variable counter value to serial
10    Serial.print("counter:"); // print the string "counter:"
11    Serial.println(counter); // print the variable counter value
12    delay(500); // wait 500ms to avoid cycling too fast
13    counter++; // variable counter increases 1
14 }
```

setup() function initializes the serial port.

And then continuously sends variable counter values in the loop () function.

Serial class

Class is a C++ language concept. Arduino IDE supports C++ language, which is a language extension. We don't explain specifically the concept here, but only describe how to use it. If you are interested in it, you can learn by yourself. Serial is a class name, which contains variables and functions. You can use the "." operational character to visit class variables and functions, such as:


Serial.begin(speed): Initialize serial port, the parameter is the serial port baud rate;

Serial.print(val): Send string, the parameter here is what you want to send;

Serial.println(val): Send newline behind string.

Verify and upload the code, open the Serial Monitor, and then you'll see data sent from control board.

If it is not displayed correctly, check whether the configuration of the Serial Monitor in the lower right corner of the window is correct.

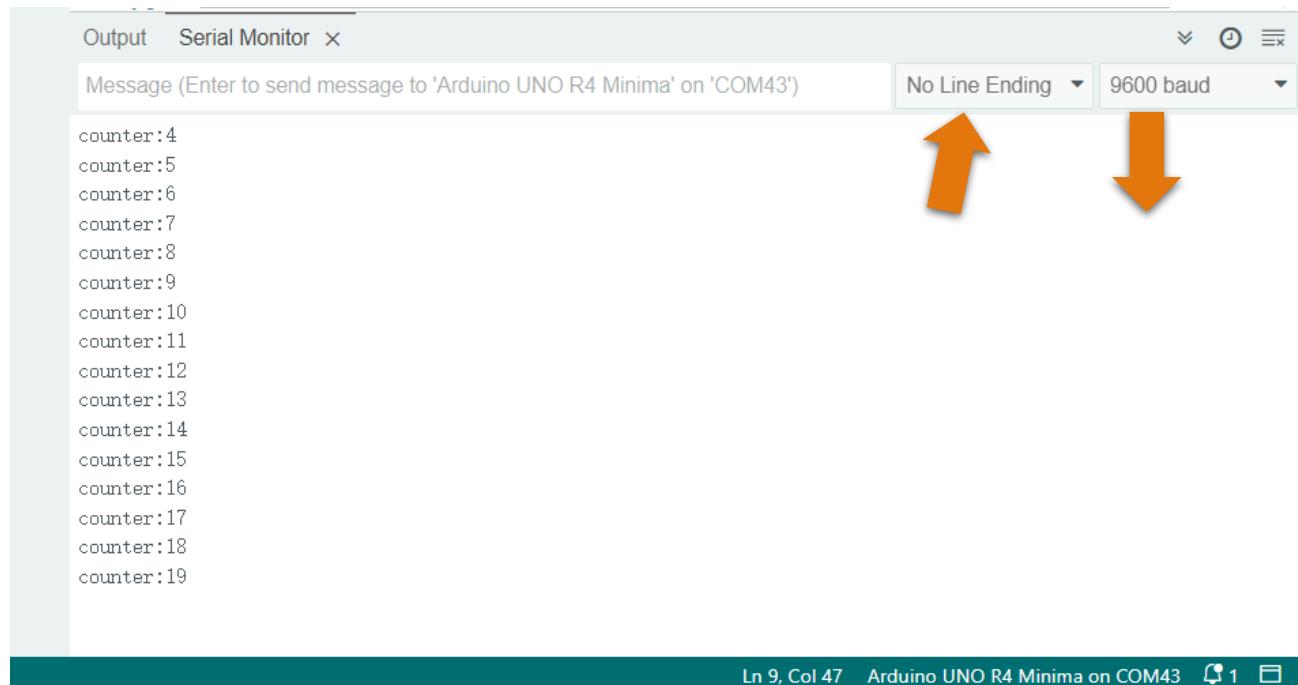

Project 6.2 Receive Data through Serial Port

In the previous section, we used Serial port on control board to send data to a computer, now we will use it to receive data from computer.

Component List


Same with the previous section.

Code Knowledge

Interrupt

An interrupt is a controller's response to an event. The event causing an interrupt is an interrupt source. We'll illustrate the interruption concept. For example, suppose you're watching TV while there is water in your kitchen heating, then you have to check whether the water is boiling or not from time to time, so you can't concentrate on watching TV. But if you have an interrupt, things will be different. Interrupt can work as a warning device for your kettle, which will beep when the water is about to boil. So before the water is boiling, you can focus on watching TV until a beep warning comes out.

Advantages of interrupt here: Processor won't need to check whether the event has happened every now and then, but when an event occurs, it informs the controller immediately. When an interrupt occurs, the processor will jump to the interrupt function to handle interrupt events, then return to where the interrupt occurs after finishing it and go on this program.

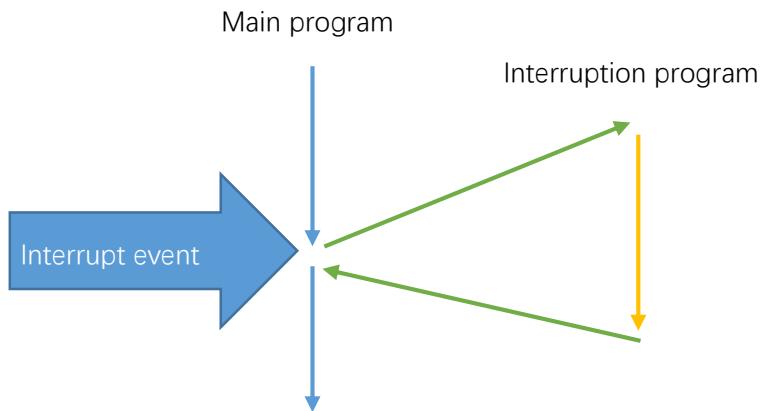

Circuit

Same with the previous section.

Sketch

Sketch 6.2.1

Now, write code to receive the characters from Serial Monitor window, and send it back.

```

1  char inChar;      // define a variable to store characters received from serial port
2
3  void setup() {
4      Serial.begin(9600);          // initialize serial port, set baud rate to 9600
5  }
6
7  void loop() {
8      if (Serial.available()) {    // judge whether data has been received
9          inChar = Serial.read();  // read one character
10         Serial.print("received:");
11         Serial.println(inChar); // print the received character
12     }
13 }
```


In the setup() function, we initialize the serial port. Then, the loop() function will continuously detect whether there are data to read. If so, it will read the character and send it back.

Serial Class

Serial.available(): return bytes of data that need to be read by serial port;

Serial.read(): return 1 byte of data that need to be read by serial port.

Verify and upload the code, open the Serial Monitor, write character in the sending area, click Send button, then you'll see information returned from control board.

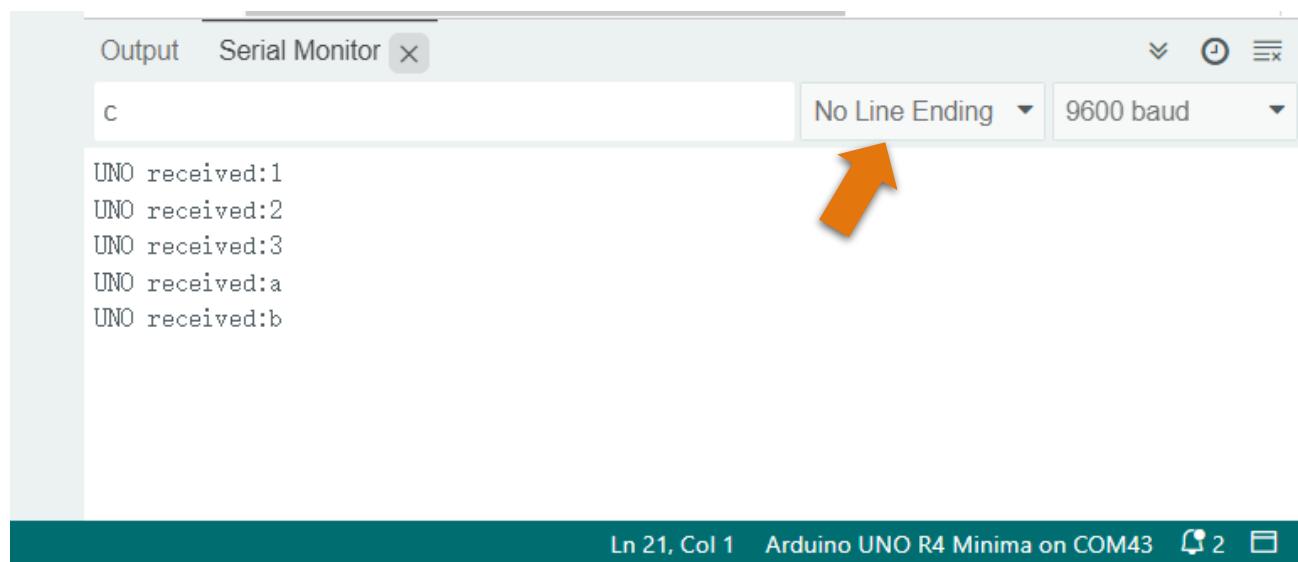

char type

char type variable can represent a character, but it cannot store characters directly. It stores numbers to replace characters. char type occupies 1-byte store area, and use a value 0-127 to correspond to 128

characters. The corresponding relation between number and character is ruled by ASCII table. For more details of ASCII table, please refer to the appendix of this book.

Example: Define char aChar = 'a', bChar = '0', then the decimal value of aChar is 97, bChar will be 48.



Project 6.3 Application of Serial

We will use the serial port on control board to control one LED.

Component List


If the kit you bought does not include the following components, you can use only the control board and USB cable to finish this project.

Control board x1

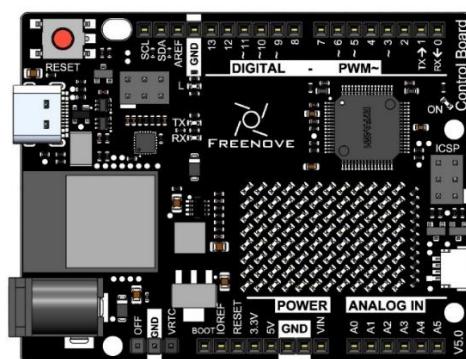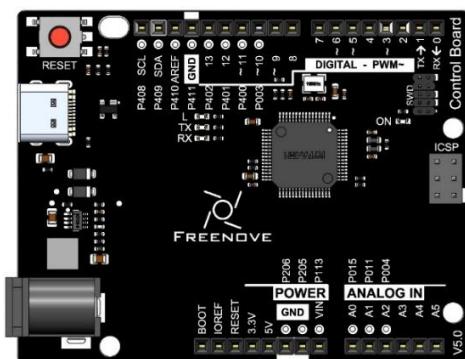


or

Breadboard x1

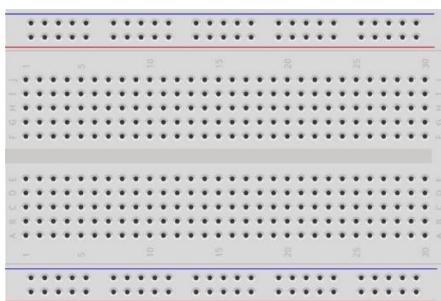

GPIO Extension Board x1

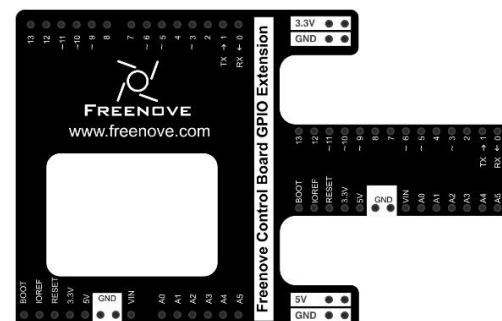

USB cable x1



LED x1



Resistor 220Ω x1




Jumper M/M x2




Circuit

Here we will use pin 11 of the control board to output PWM to drive 1 LED.

Schematic diagram

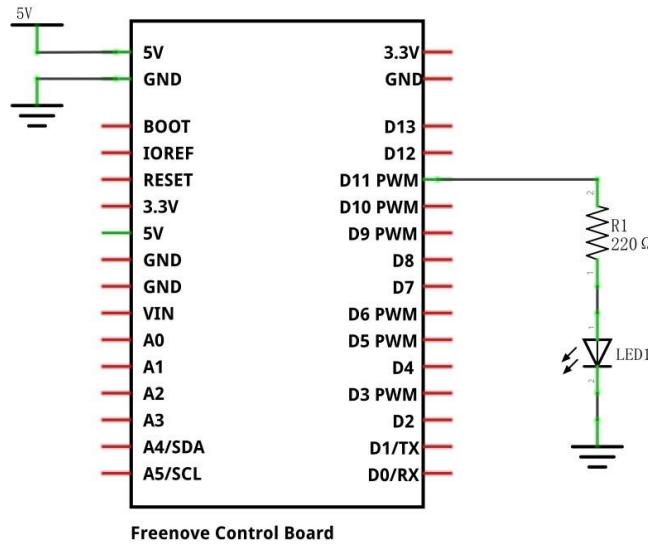

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

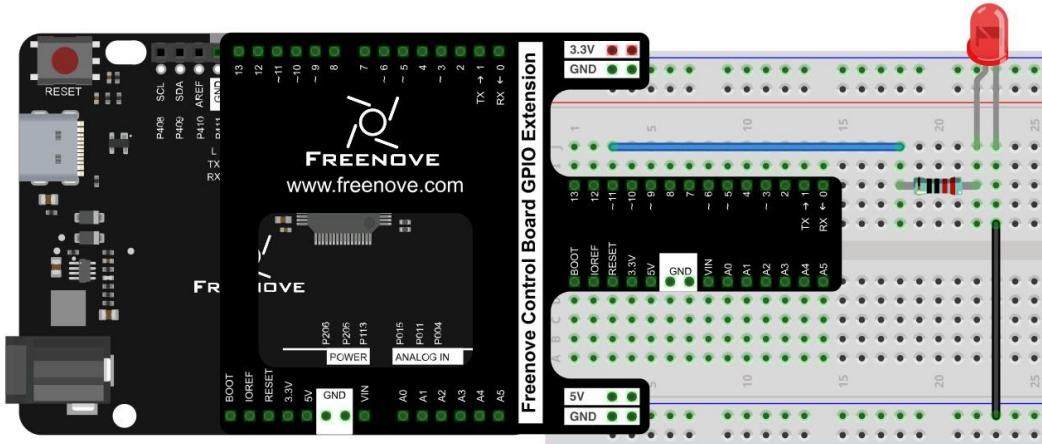

If you only use the control board for this project, the LED being controlled is the onboard LED. You only need to change the LED pin to 13.

Sketch

Sketch 6.3.1

Code is basically the same with Sketch 6.2.1. But after receiving the data, control board will convert it into PWM duty cycle of output port.

```

1 int inInt;      // define a variable to store the data received from serial
2 int counter = 0; // define a variable as the data sending to serial
3 int ledPin = 11; // the number of the LED pin
4

```

```

5 void setup() {
6     pinMode(ledPin, OUTPUT);           // initialize the LED pin as an output
7     Serial.begin(9600);              // initialize serial port, set baud rate to 9600
8     Serial.println("UNO is ready!");   // print the string "UNO is ready!"
9 }
10
11 void loop() {
12     if (Serial.available()) {        // judge whether the data has been received
13         inInt = Serial.parseInt();    // read an integer
14         Serial.print("UNO received:"); // print the string "UNO received:"
15         Serial.println(inInt);       // print the received character
16         // convert the received integer into PWM duty cycle of ledPin port
17         analogWrite(ledPin, constrain(inInt, 0, 255));
18     }
19 }
```

When serial receives data, it converts the data into PWM duty cycle of output port to make LED emit light with corresponding brightness.

Serial Class

`Serial.parseInt()`: Receive an int type number as the return value.

constrain(x, a, b)

Limit x between a and b, if $x < a$, return a; if $x > b$, return b.

Verify and upload the code, open the Serial Monitor, and put a number in the range of 0-255 into the sending area and click the Send button. Then you'll see information returned from control board, meanwhile, LED can emit light with different brightness according to the number you send.



Chapter 7 ADC


Previously we have learned about the digital ports of the control board and tried to output and input signals. Now, let's learn how to use the analog-to-digital converter (ADC) on the control board. By default, the resolution of the control board ADC is set to 10 bits, which can be updated to 12 bits (0-4096) and 14 bits (0-16383) to improve the accuracy of analog readings.

Project 7.1 ADC


ADC is used to convert analog signals into digital signals. Control chip on the control board has integrated this function. Now let us try to use this function to convert analog signals into digital signals.

Component List


Control board x1

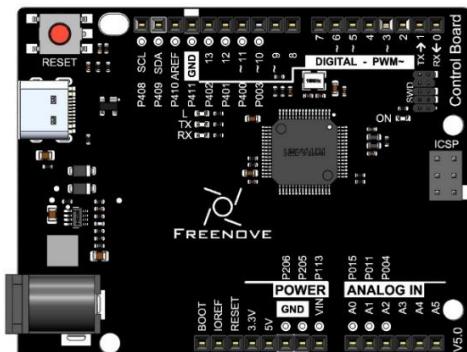


or

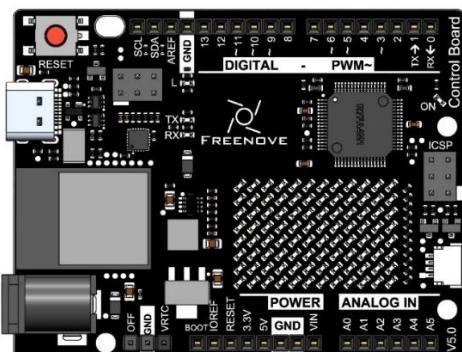


Breadboard x1

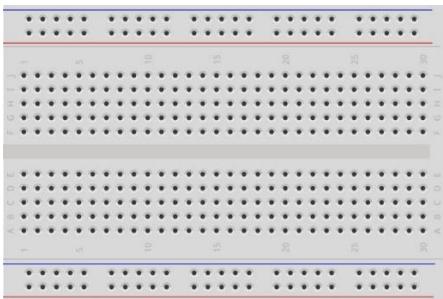

GPIO Extension Board x1

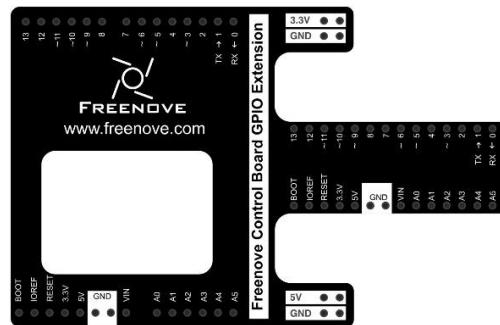


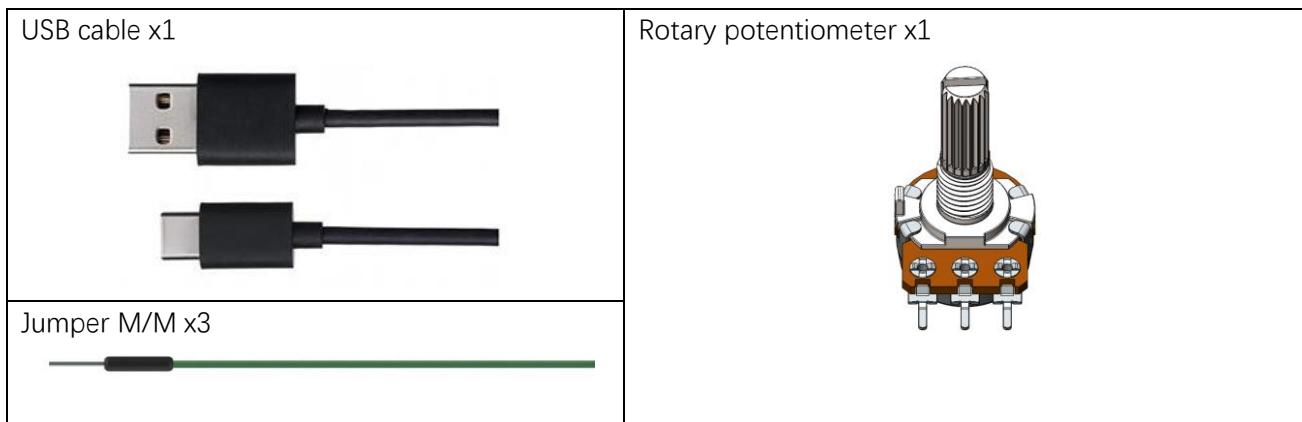

Circuit Knowledge

ADC

An ADC is an electronic integrated circuit used to convert analog signals such as voltages to digital or binary form consisting of 1s and 0s. The onboard ADC module is set to 10 bits by default, which means the resolution is $2^{10}=1024$, so its range (at 5V) will be evenly divided into 1024 parts. By default, the resolution of the onboard ADC is set to 10 bits, which can be updated to 12 bits (0-4096) and 14 bits (0-16383) resolution to improve the accuracy of the analog readings. Any analog value can be mapped to one digital value using the resolution of the converter. So the more bits the ADC has, the denser the partition of analog will be and the greater the precision of the resulting conversion.

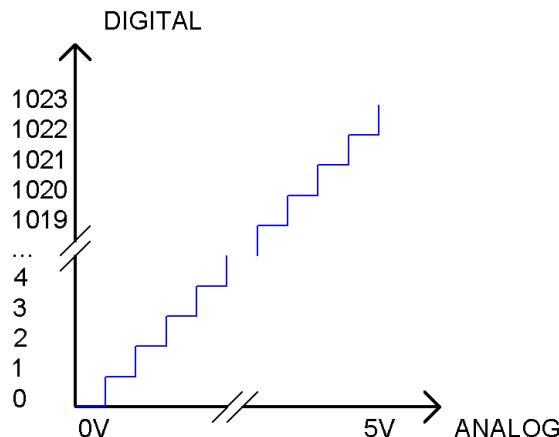

Subsection 1: the analog in rang of 0V-5/1024V corresponds to digital 0;

Subsection 2: the analog in rang of 5 /1024V-2*5/1024V corresponds to digital 1;


The following analog signal will be divided accordingly.

Component Knowledge

Potentiometer


Potentiometer is a resistive element with three Terminal parts. Unlike the resistors that we have used thus far in our project which have a fixed resistance value, the resistance value of a potentiometer can be adjusted. A

potentiometer is often made up by a resistive substance (a wire or carbon element) and movable contact brush. When the brush moves along the resistor element, there will be a change in the resistance of the potentiometer's output side (3) (or change in the voltage of the circuit that is a part). The illustration below represents a linear sliding potentiometer and its electronic symbol on the right.

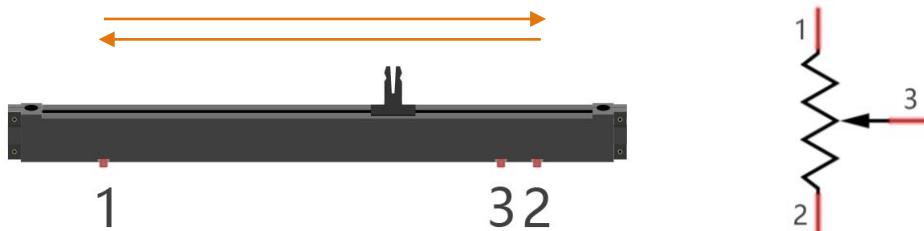


Between potentiometer pin 1 and pin 2 is the resistive element (a resistance wire or carbon) and pin 3 is connected to the brush that makes contact with the resistive element. In our illustration, when the brush moves from pin 1 to pin 2, the resistance value between pin 1 and pin 3 will increase linearly (until it reaches the highest value of the resistive element) and at the same time the resistance between pin 2 and pin 3 will decrease linearly and conversely down to zero. At the midpoint of the slider the measured resistance values between pin 1 and 3 and between pin 2 and 3 will be the same.

In a circuit, both sides of resistive element are often connected to the positive and negative electrodes of power. When you slide the brush "pin 3", you can get variable voltage within the range of the power supply.

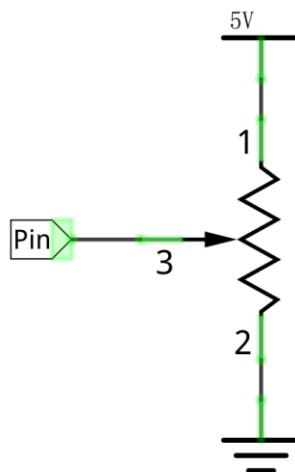

Rotary potentiometer


Rotary potentiometer and linear potentiometer have the same function; the only difference being the physical action being a rotational rather than a sliding movement.

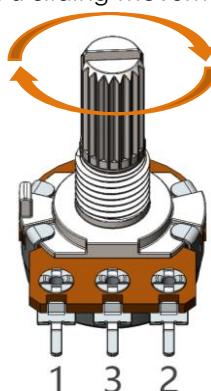


Circuit

Use pin A0 on the control board to detect the voltage of rotary potentiometer.

Schematic diagram

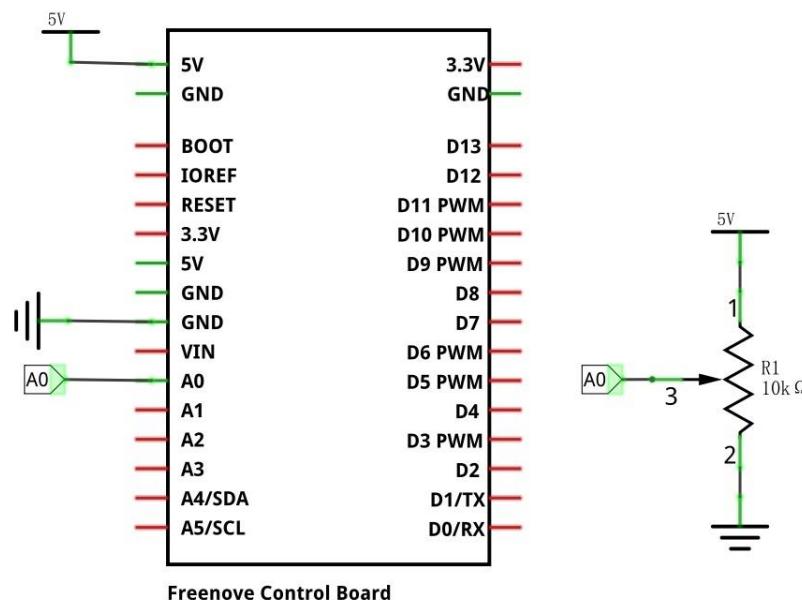

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

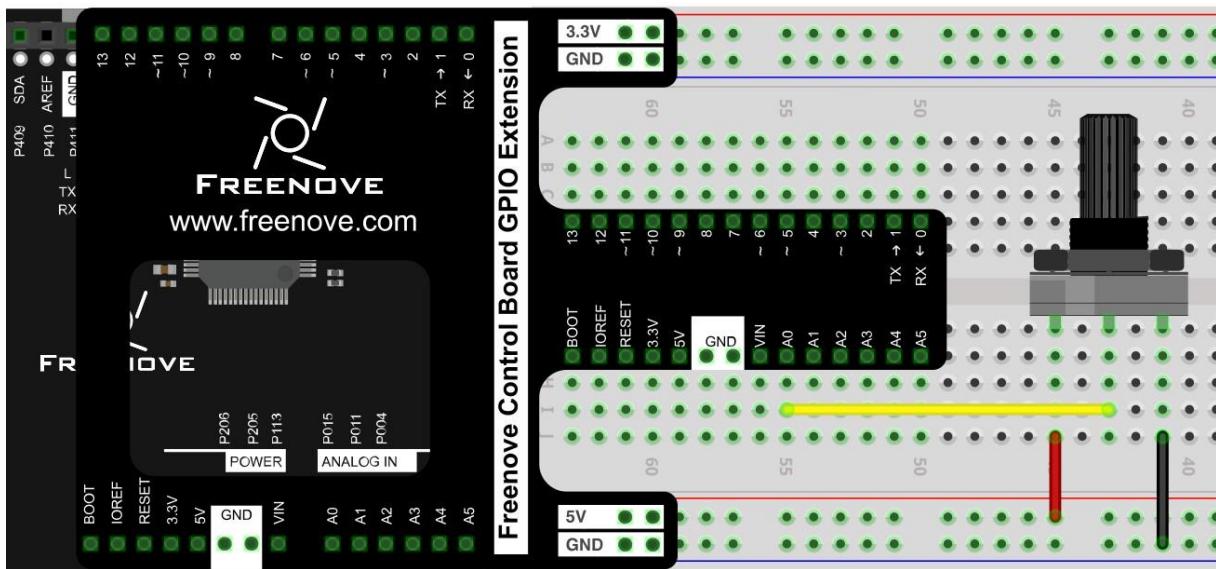

Sketch

Sketch 7.1.1

Now, write code to detect the voltage of rotary potentiometer, and send the data to Serial Monitor window of Arduino IDE through serial port. The code here demonstrates how to set the ADC to 14 bits precision.

```

1 int adcValue; // Define a variable to save ADC value
2 float voltage; // Define a variable to save the calculated voltage value
3
4 void setup() {
5     Serial.begin(9600); // Initialize the serial port and set the baud rate to 9600
6     // analogReadResolution(10); //change to 10-bit resolution
7     // analogReadResolution(12); //change to 12-bit resolution
8     analogReadResolution(14); //change to 14-bit resolution
9 }
10
11 void loop() {
12     // int reading = analogRead(A0); // returns a value between 0-1023
13     // voltage = reading * (5.0 / 16383.0); // Calculate voltage according to digital
14     // int reading = analogRead(A0); // returns a value between 0-4095
15     // voltage = reading * (5.0 / 16383.0); // Calculate voltage according to digital
16     int reading = analogRead(A0); // returns a value between 0-16383
17     voltage = reading * (5.0 / 16383.0); // Calculate voltage according to digital
18     Serial.print("convertValue:");
19     Serial.println(reading);
20     Serial.print("Voltage:");
21     Serial.println(voltage);
22     delay(500);
23 }
```

From the code, we get the ADC value of pin A0, then convert it into voltage and sent to the serial port.

Verify and upload the code, open the Serial Monitor, and then you will see the original ADC value and converted voltage sent from control board.

Turn the rotary potentiometer shaft, and you can see the voltage change.



If you want to change the resolution of the ADC, you only need to modify the parameter of the function `analogReadResolution(int bits)`; among which, bits is the bit number of the ADC. If the parameter is not set, it will be 10 bits by default. As this project applies 10-bit ADC, you do not need to set the parameter for this function.

```
1 // analogReadResolution(10); //change to 10-bit resolution  
2 // analogReadResolution(12); //change to 12-bit resolution  
3 analogReadResolution(14); //change to 14-bit resolution
```

Read the ADC value and calculate the voltage based on the set ADC bit number.



```
// int reading = analogRead(A0); // returns a value between 0-1023  
// voltage = reading * (5.0 / 16383.0); // Calculate voltage according to digital  
// int reading = analogRead(A0); // returns a value between 0-4095  
// voltage = reading * (5.0 / 16383.0); // Calculate voltage according to digital  
int reading = analogRead(A0); // returns a value between 0-16383  
voltage = reading * (5.0 / 16383.0); // Calculate voltage according to digital
```

Project 7.2 Control LED by Potentiometer

In the previous section, we have finished reading ADC value and converting it into voltage. Now, we will try to use potentiometer to control the brightness of LED.


Component List

Control board x1

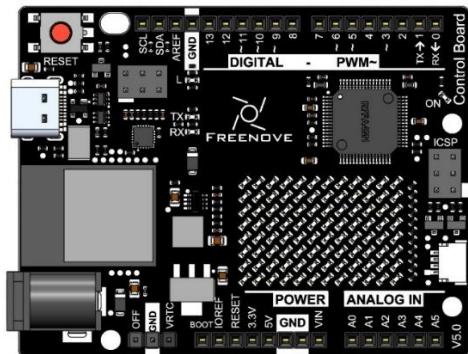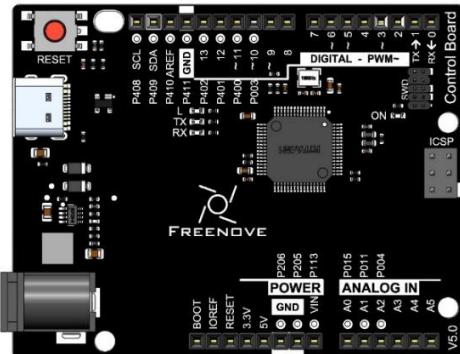


or

Breadboard x1

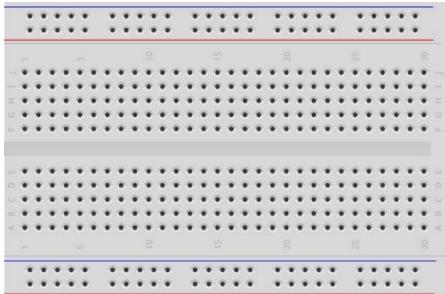


GPIO Extension Board x1

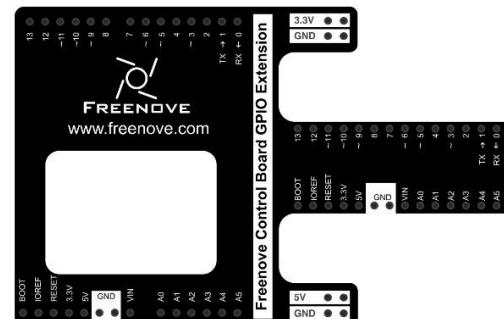

USB cable x1



Rotary potentiometer x1

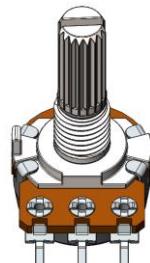

LED x1



Resistor 220Ω x1




Jumper M/M x5




Circuit

Use pin A0 on control board to detect the voltage of rotary potentiometer, and use pin 9 to control one LED.

Schematic diagram

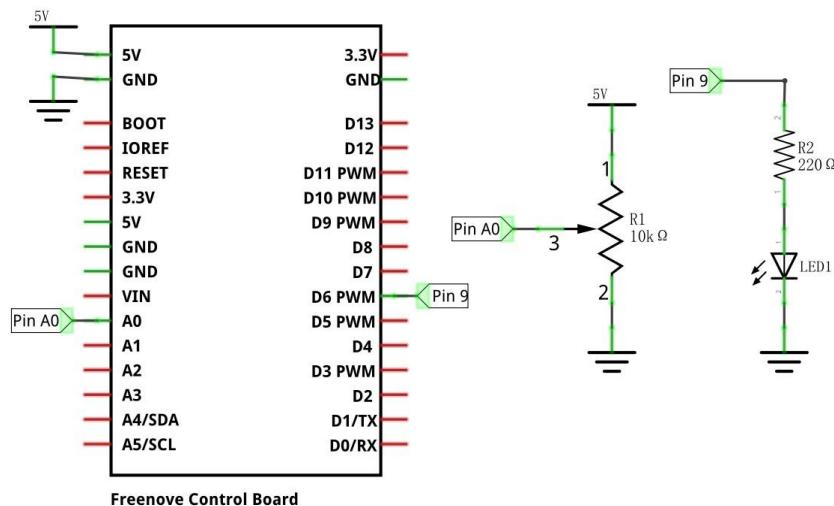

Hardware connection

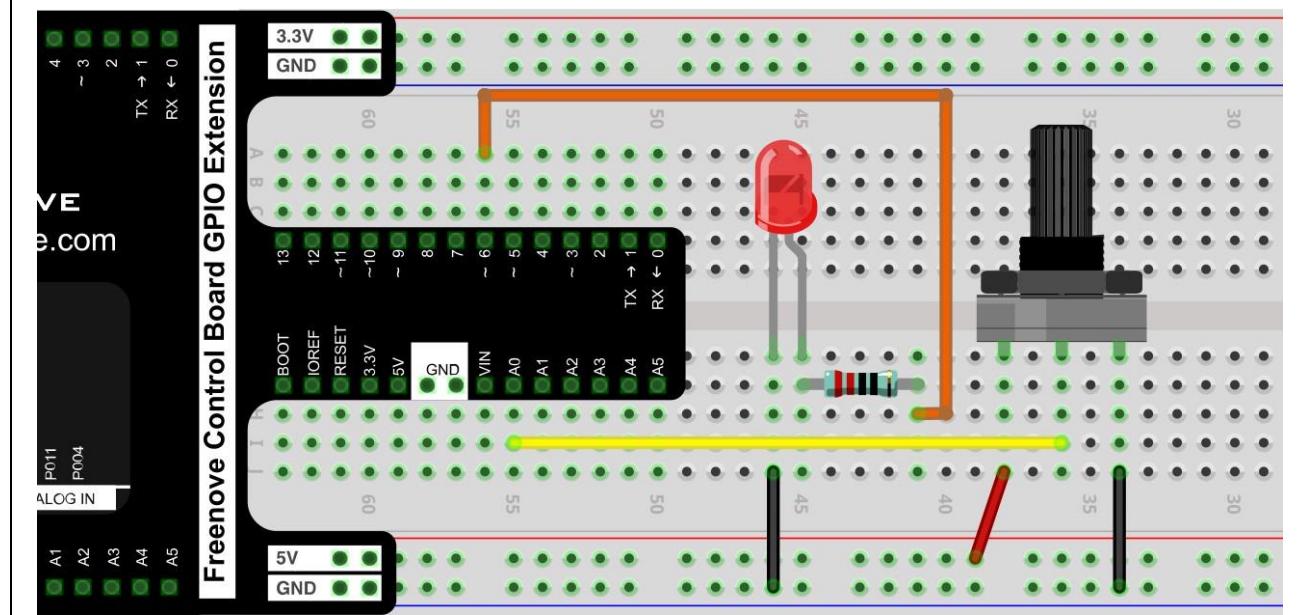

Sketch

Sketch 7.2.1


Now, write the code to detect the voltage of rotary potentiometer, and control LED to emit light with different brightness according to that.

```

1 int adcValue; // Define a variable to save the ADC value
2 int ledPin = 9; // Use D9 on Freenove UNO to control the LED
3
4 void setup() {
5     pinMode(ledPin, OUTPUT); // Initialize the LED pin as an output
6 }
7
8 void loop() {
9     adcValue = analogRead(A0); // Convert the analog of A0 port to digital
10    // Map analog to the 0-255 range, and works as PWM duty cycle of ledPin port
11    analogWrite(ledPin, map(adcValue, 0, 1023, 0, 255));
12 }
```

In the code, we get the ADC value of pin A0 and map it to PWM duty cycle of LED pin port. According to different LED brightness, we can see the changes of voltage easily.

Verify and upload the code, turn the rotary potentiometer shaft, you will see the LED brightness change.

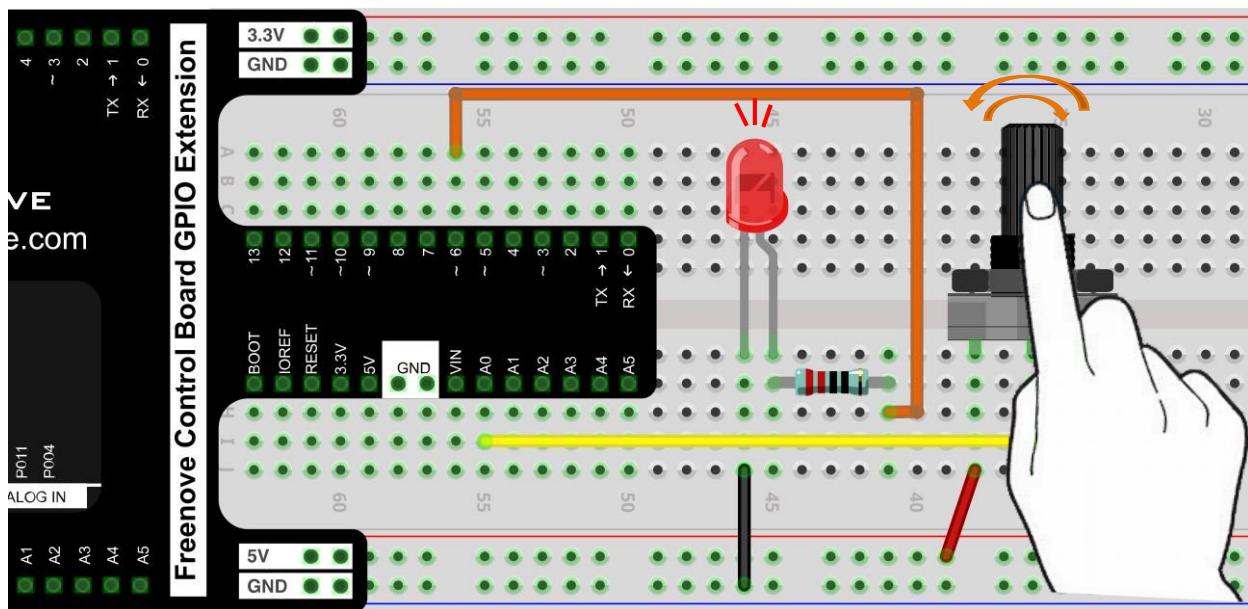


Project 7.3 Control LED by Potentiometer


In the previous section, we have finished reading ADC value and converted it into LED brightness. There are many components, especially the sensor whose output is analog. Now, we will try to use photoresistor to measure the brightness of light.

Component List


Control board x1

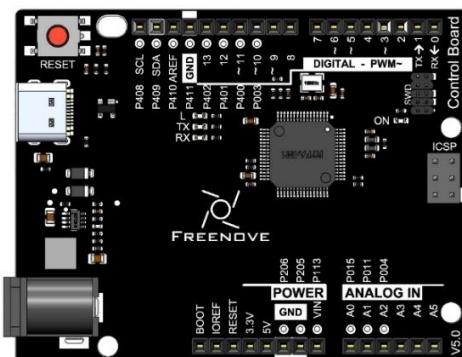


or

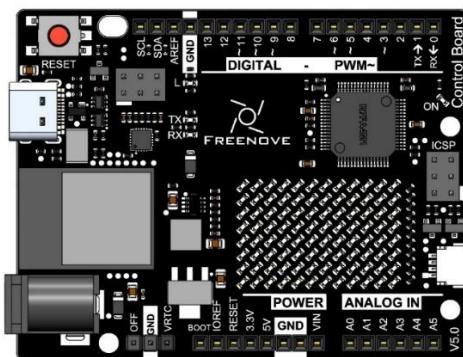

Breadboard x1

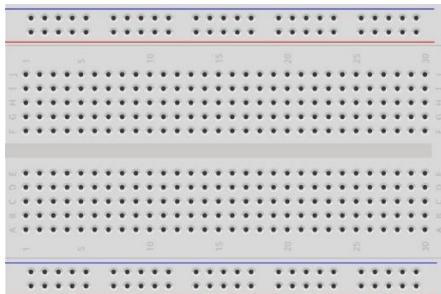

GPIO Extension Board x1

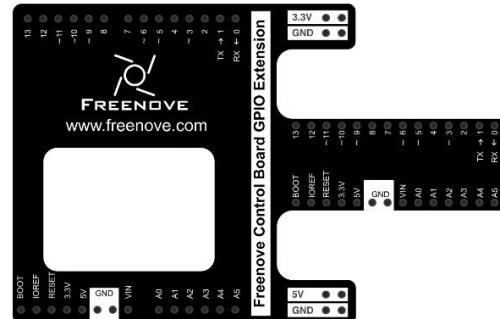

USB cable x1



Photoresistor



LED x1



Resistor
 $10\text{k}\Omega \times 1$



Resistor
220Ω x1




Jumper M/M x5




Component Knowledge

Photoresistor

A Photoresistor is simply a light sensitive resistor. It is an active component that decreases resistance with respect to receiving luminosity (light) on the component's light sensitive surface. A Photoresistor's resistance value will change in proportion to the ambient light detected. With this characteristic, we can use a Photoresistor to detect light intensity. The Photoresistor and its electronic symbol are as follows.

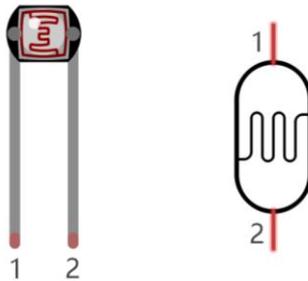

The circuit below is often used to detect the change of photoresistor's resistance value:

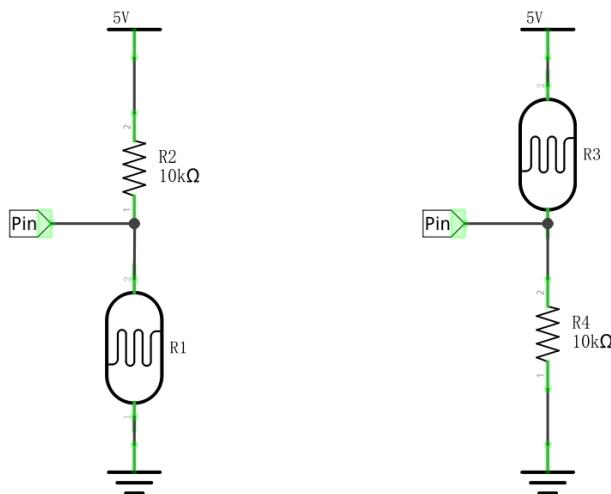


In the above circuit, when a photoresistor's resistance value changes due to a change in light intensity, the voltage between the photoresistor and resistor R1 will also change, so the intensity of the light can be obtained by measuring the voltage.


Circuit

Use pin A0 on control board to detect the voltage of photoresistor, and use pin 9 to control one LED.

Schematic diagram

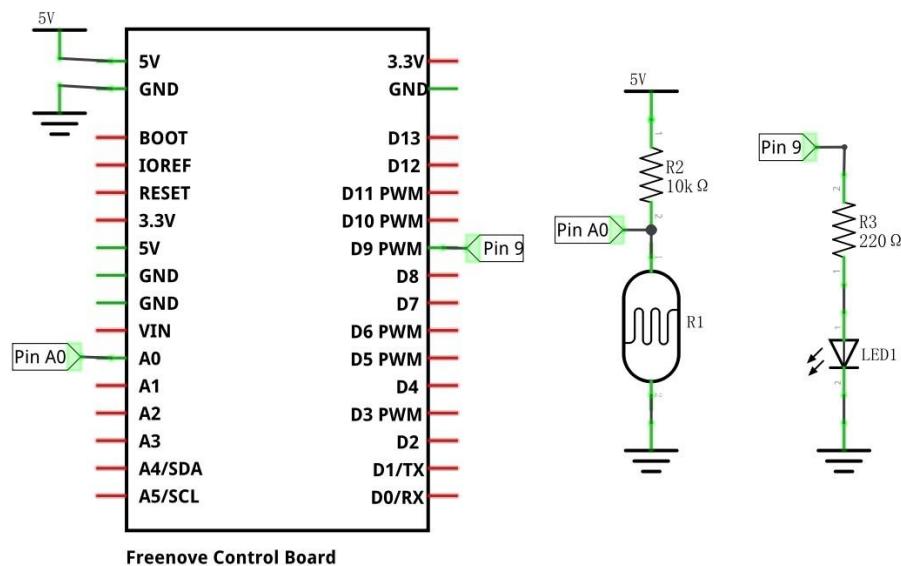

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

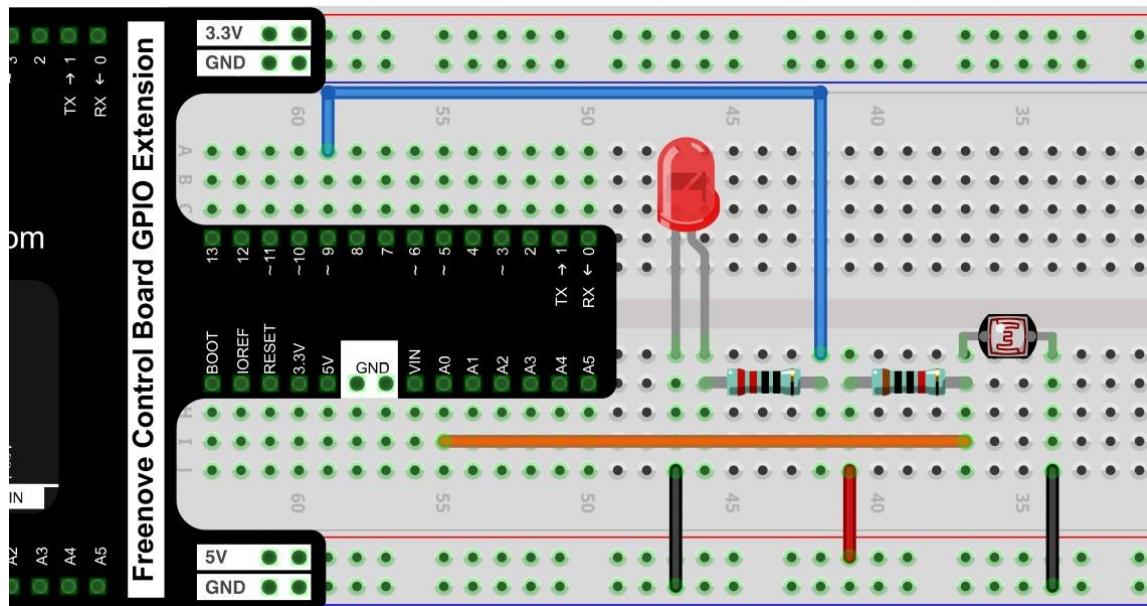

Sketch

Sketch 7.3.1


Now, write code to detect the voltage of rotary potentiometer, and control LED to emit light with different brightness according to that.

```

1 int convertValue; // Define a variable to save the ADC value
2 int ledPin = 9; // The number of the LED pin
3
4 void setup() {
5     pinMode(ledPin, OUTPUT); // Set ledPin into output mode
6 }
7
8 void loop() {
9     convertValue = analogRead(A0); // Read analog voltage value of A0 port, and save
10    // Map analog to the 0-255 range, and works as ledPin duty cycle setting
11    analogWrite(ledPin, map(convertValue, 0, 1023, 0, 255));
12 }
```

In the code, we get the ADC value of pin A0, map it to PWM duty cycle of LED pin port. According to the brightness of LED, we can see the changes of voltage easily.

Verify and upload the code, cover photoresistor with your hand, then you can see the LED brightness change.

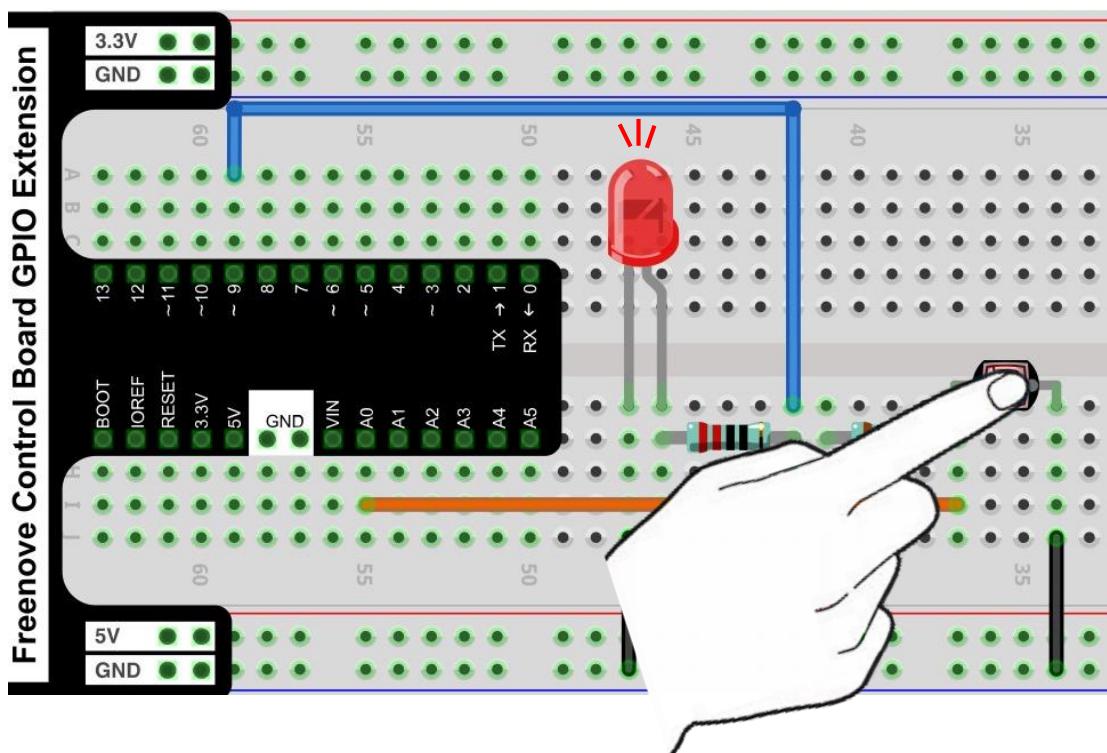

Chapter 8 RGB LED


Earlier, we have learned to apply the analog port and ADC of the control board. Now, we'll use ADC to control RGB LED.

Project 8.1 Control RGB LED through Potentiometer


RGB LED has three different-color LEDs inside, and we will use 3 potentiometers to control these 3 LEDs to emit light with different brightness, and observe what will happen.

Component List


Control board x1

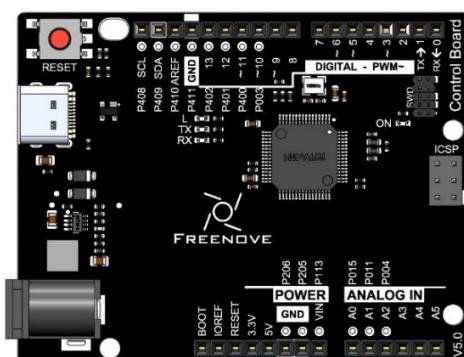


or

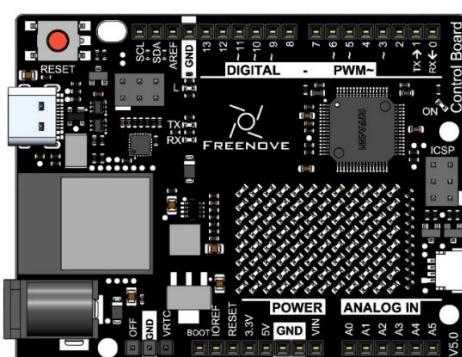

Breadboard x1

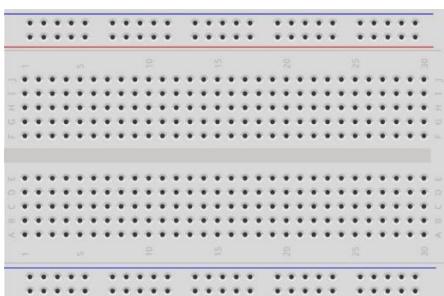

GPIO Extension Board x1

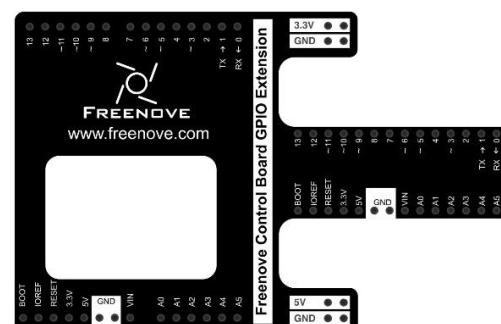


USB cable x1



Rotary potentiometer
x3

RGB LED x1


Resistor 220Ω
x3

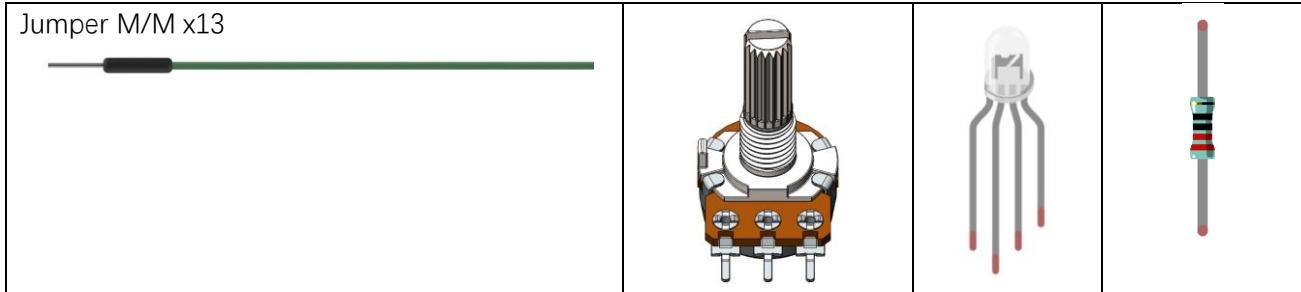


Component Knowledge

RGB LED

A RGB LED has 3 LEDs integrated into one LED component. It can respectively emit Red, Green and Blue light. In order to do this, it requires 4 pins (this is also how you identify it). The long pin (1) is the common which is the Cathode (+) or positive lead, the other 3 are the Anodes (-) or negative leads. A rendering of a RGB LED and its electronic symbol are shown below. We can make RGB LED emit various colors of light and brightness by controlling the 3 Anodes (2, 3 & 4) of the RGB LED

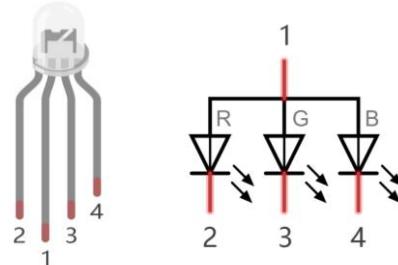

Red, Green, and Blue light are called 3 Primary Colors when discussing light (Note: for pigments such as paints, the 3 Primary Colors are Red, Blue and Yellow). When you combine these three Primary Colors of light with varied brightness, they can produce almost any color of visible light. Computer screens, single pixels of cell phone screens, neon lamps, etc. can all produce millions of colors due to phenomenon.

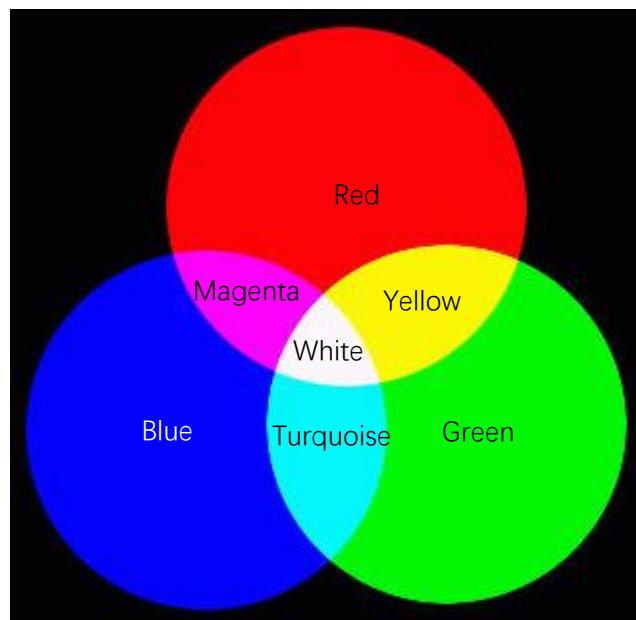


We know from the previous section that, control board controls LED to emit a total of 256(0-255) different brightness via PWM. So, through different combinations of RGB light brightness, we can create $256^3=16777216$ (16Million) colors.


Circuit

Use pin A3, A4, A5 ports of the control board to detect the voltage of rotary potentiometer, and control RGB LED by pin 9, 10, 11.

Schematic diagram

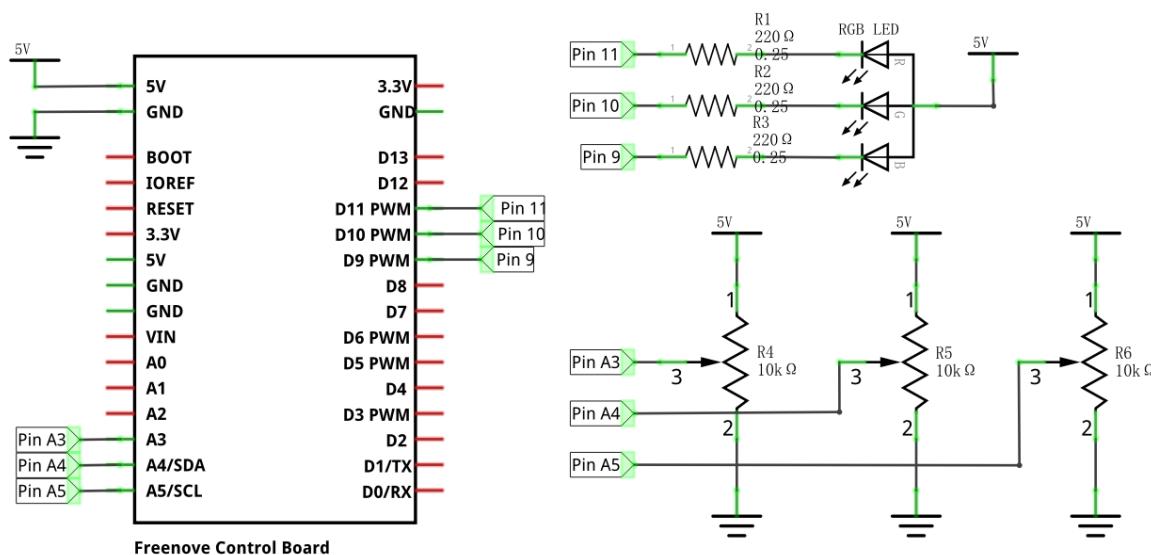

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

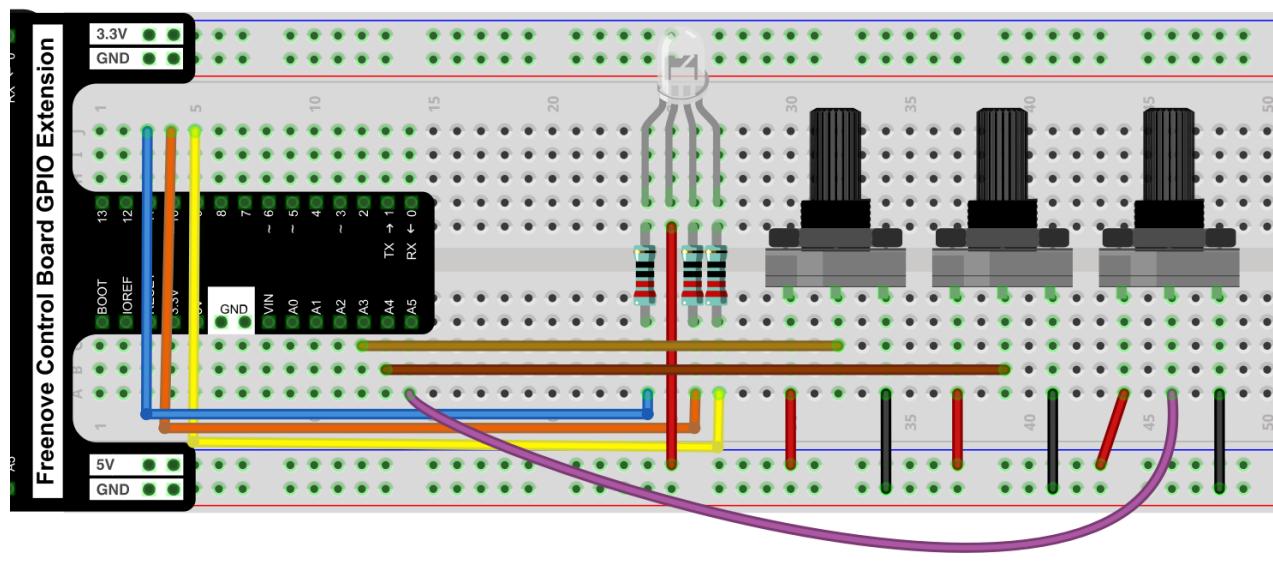

Sketch

Sketch 8.1.1

Now, write code to detect the voltages of these three rotary potentiometers, and convert them into PWM duty cycle to control 3 LEDs inside the RGB LED.

```
1 // set pin numbers:  
2 int ledPinR = 11; // the number of the LED R pin  
3 int ledPinG = 10; // the number of the LED G pin  
4 int ledPinB = 9; // the number of the LED B pin  
5  
6 void setup() {  
7     // initialize the LED pin as an output:  
8     pinMode(ledPinR, OUTPUT);  
9     pinMode(ledPinG, OUTPUT);  
10    pinMode(ledPinB, OUTPUT);  
11}  
12  
13 void loop() {  
14     int adcValue; // Define a variable to save the ADC value  
15     // Convert analog of A3 port into digital, and work as PWM duty cycle of ledPinR port  
16     adcValue = analogRead(A3);  
17     analogWrite(ledPinR, map(adcValue, 0, 1023, 0, 255));  
18     // Convert analog of A4 port into digital, and work as PWM duty cycle of ledPinG port  
19     adcValue = analogRead(A4);  
20     analogWrite(ledPinG, map(adcValue, 0, 1023, 0, 255));  
21     // Convert analog of A5 port into digital, and work as PWM duty cycle of ledPinB port  
22     adcValue = analogRead(A5);  
23     analogWrite(ledPinB, map(adcValue, 0, 1023, 0, 255));  
24 }
```

In the code, we get the voltages of three rotary potentiometers, and convert them into PWM duty cycle to control the three LEDs of the RGB LED to emit light with different brightness.



Verify and upload the code, rotate the three rotary potentiometer shaft, and you can see the LED light change in its color and brightness.

Project 8.2 Multicolored LED

In the previous section, we have finished controlling the RGB LED to emit light with different color and brightness through three potentiometers. Now, we will try to make RGB LED emit multicolored lights automatically.


Component List

Control board x1

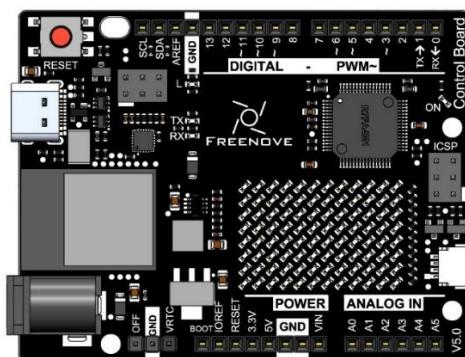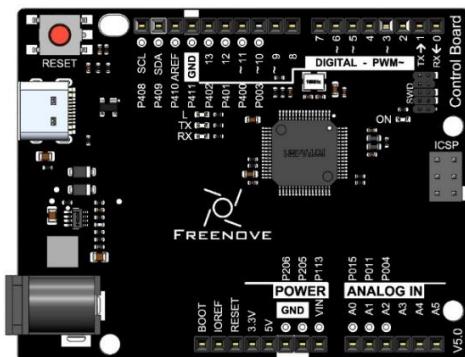


or

Breadboard x1

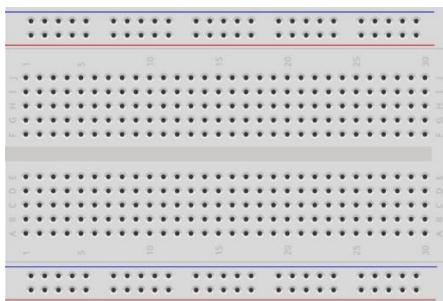

GPIO Extension Board x1

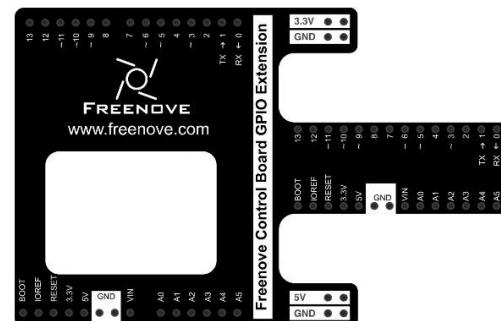

USB cable x1



RGB LED x1



Resistor 220Ω x3




Jumper M/M x4




Circuit

Use pin 9, 10, 11 of the control board to control RGB LED.

Schematic diagram

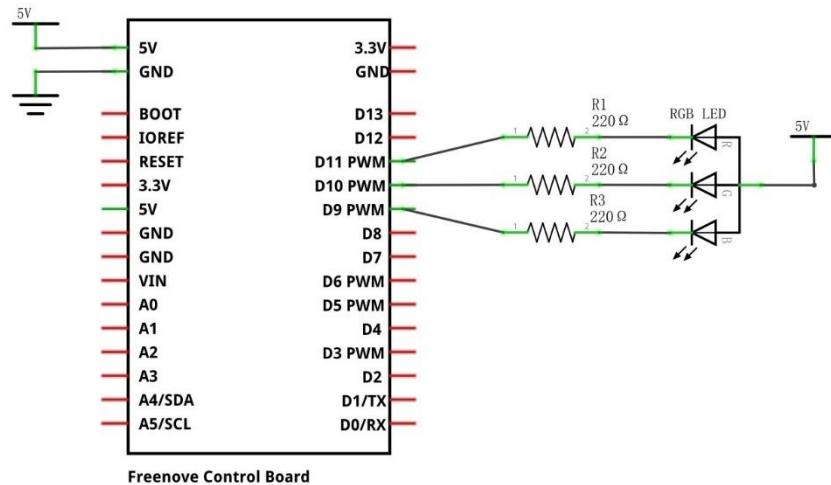

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

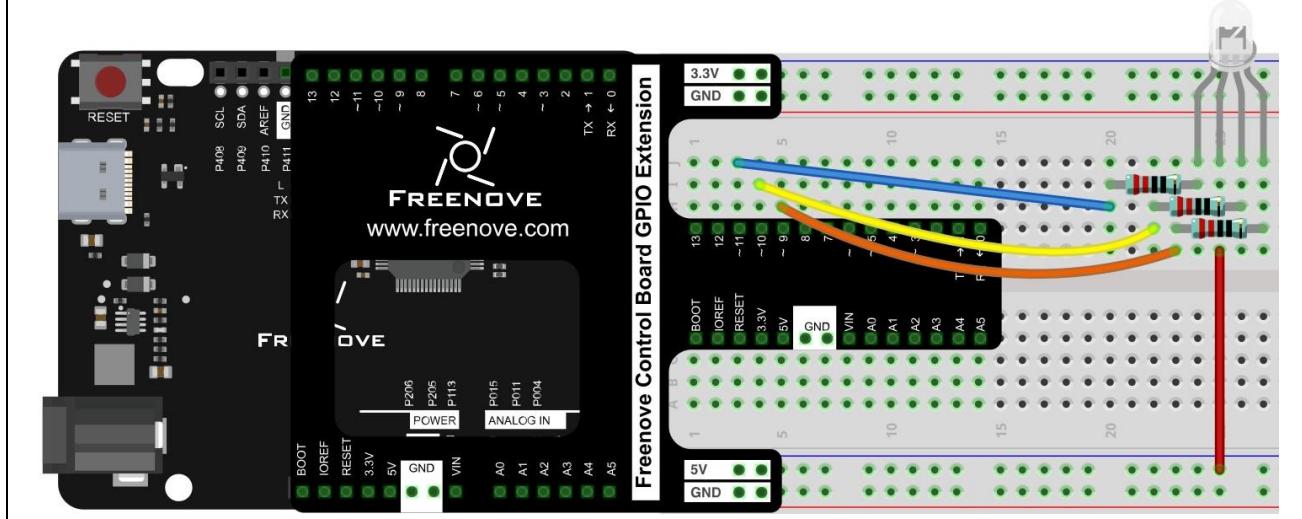

Sketch

Sketch 8.2.1

Now, write code to generate three random numbers, and convert them into PWM duty cycle to control the three LEDs of RGB LED.

```
1 int ledPinR = 11; // the number of the LED R pin
2 int ledPinG = 10; // the number of the LED G pin
3 int ledPinB = 9; // the number of the LED B pin
4
5 void setup() {
6     // initialize the LED pin as an output:
7     pinMode(ledPinR, OUTPUT);
8     pinMode(ledPinG, OUTPUT);
9     pinMode(ledPinB, OUTPUT);
10 }
11
12 void loop() {
13     // Generate three random numbers between 0-255 as the output PWM duty cycle of ledPin
14     rgbLedDisplay(random(256), random(256), random(256));
15     delay(500);
16 }
17
18 void rgbLedDisplay(int red, int green, int blue) {
19     // Set three ledPin to output the PWM duty cycle
20     analogWrite(ledPinR, constrain(red, 0, 255));
21     analogWrite(ledPinG, constrain(green, 0, 255));
22     analogWrite(ledPinB, constrain(blue, 0, 255));
23 }
```

In the code, we create three random numbers, and convert them into PWM duty cycle to control the three LEDs of RGB LED to emit light with different brightness. At regular intervals, a new random number will be created, so RGB LED will start flashing light with different colors and brightness.

random(min, max)

random (min, max) function is used to generate random number, and it will return a random value in the range (min, Max-1).

You can also use random (max) function, the function set the minimum value into 0 by default, and returns a random value in the range (0, Max-1).

Verify and upload the code, and RGB LED starts flashing with different colors and brightness.

Chapter 9 Buzzer


Earlier, we have used control board and basic electronic components to carry out a series of interesting projects. Now, let's learn how to use some integrated electronic components and modules. These modules are usually integrated with a number of electronic components, so they have special features and usages. In this chapter, we'll use a sounding module, buzzer. It has two types: active and passive buzzer.

Project 9.1 Active Buzzer


First, let's study some knowledge about active buzzer.

Component List


Control board x1

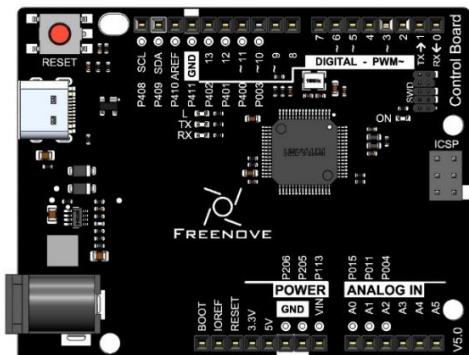

Breadboard x1

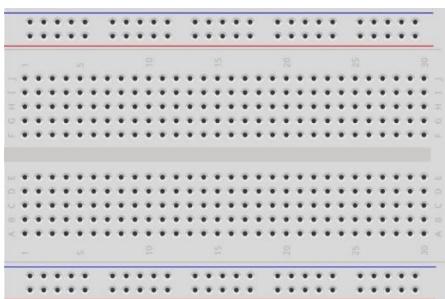

GPIO Extension Board x1

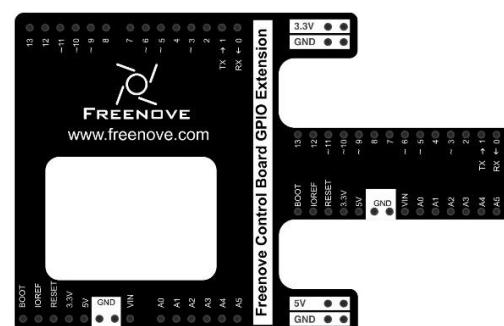

USB cable x1



Jumper M/M x6




NPN transistor x1	Active buzzer x1	Push button x1	Resistor 1kΩ x1	Resistor 10kΩ x2
				

Component knowledge

Transistor

Transistor, the full name: semiconductor transistor, is a semiconductor device that controls current (think of a transistor as an electronic "amplifying or switching device"). Transistors can be used to amplify weak signals, or to work as a switch. Transistors have three electrodes(PINs): base (b), collector (c) and emitter (e). When there is current passing between "be", then "ce" will have a several-fold current increase(transistor magnification), in this configuration the transistor acts as an amplifier. When current produced by "be" exceeds a certain value, "ce" will limit the current output. at this point the transistor is working in its saturation region and acts like a switch. Transistors are available as two types as shown below: PNP and NPN,

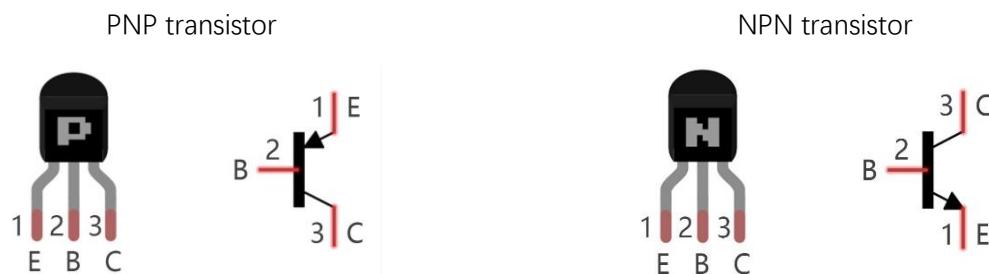


In our kit, the PNP transistor is marked with 8550, and the NPN transistor is marked with 8050.

Thanks to the transistors' characteristics, they are often used as switches in digital circuits. As micro-controllers output current capacity is very weak, we will use a transistor to amplify its current in order to drive components requiring higher current.

Buzzer

A buzzer is an audio component. They are widely used in electronic devices such as calculators, electronic alarm clocks, automobile fault indicators, etc. There are both active and passive types of buzzers. Active buzzers have oscillator inside, these will sound as long as power is supplied. Passive buzzers require an external oscillator signal (generally using PWM with different frequencies) to make a sound.

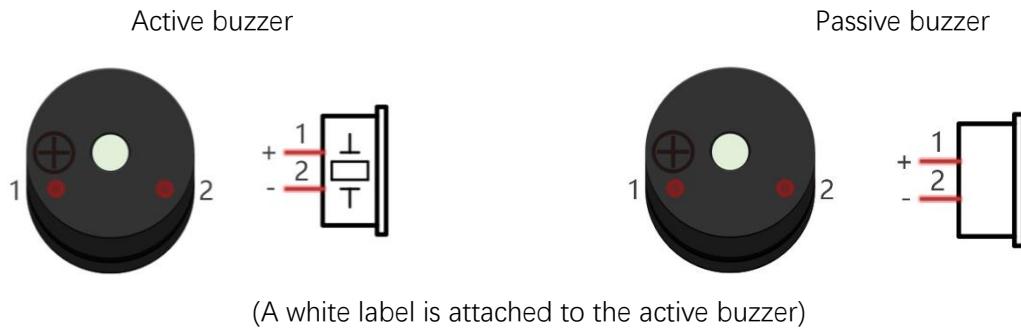

Active buzzers are easier to use. Generally, they only make a specific sound frequency. Passive buzzers require an external circuit to make sounds, but passive buzzers can be controlled to make sounds of various frequencies. The resonant frequency of the passive buzzer in this Kit is 2kHz, which means the passive buzzer is the loudest when its resonant frequency is 2kHz.

How to identify active and passive buzzer?

1. As a rule, there is a label on an active buzzer covering the hole where sound is emitted, but there are exceptions to this rule.
2. Active buzzers are more complex than passive buzzers in their manufacture. There are many circuits and crystal oscillator elements inside active buzzers; all of this is usually protected with a waterproof coating (and a housing) exposing only its pins from the underside. On the other hand, passive buzzers do not have protective coatings on their underside. From the pin holes, view of a passive buzzer, you can see the circuit board, coils, and a permanent magnet (all or any combination of these components depending on the model).




Active buzzer bottom




Passive buzzer bottom

Buzzers need relatively larger current when they work. But generally, microcontroller port can't provide enough current for them. In order to control buzzer by control board, transistor can be used to drive a buzzer indirectly.

When we use a NPN transistor to drive a buzzer, we often use the following method. If control board pin outputs high level, current will flow through R1 (Resistor 1), the transistor conducts current and the buzzer will make sounds. If control board pin outputs low level, no current will flow through R1, the transistor will not conduct current and buzzer will remain silent (no sounds).

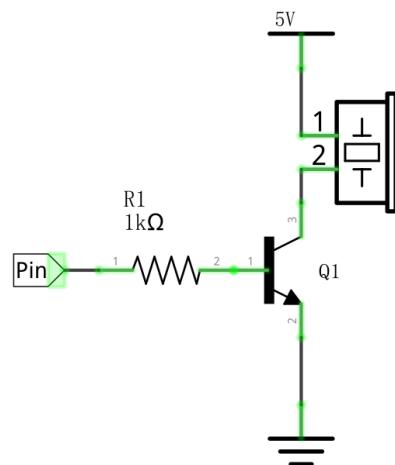


When we use a PNP transistor to drive a buzzer, we often use the following method. If control board pin outputs low level, current will flow through R1. The transistor conducts current and the buzzer will make sounds. If control board pin outputs high level, no current flows through R1, the transistor will not conduct current and buzzer will remain silent (no sounds). Below are the circuit schematics for both a NPN and PNP transistor to power a buzzer.

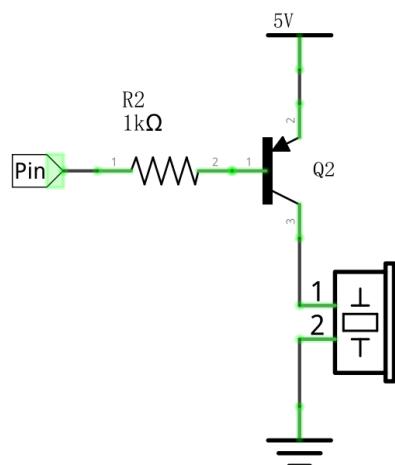


Circuit

Use pin 12 of control board to detect the state of push button switch, and pin 9 to drive active buzzer.

Schematic diagram

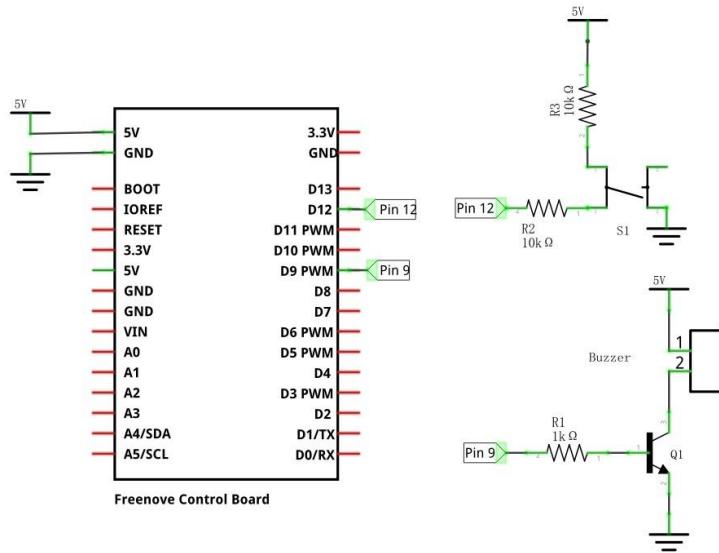

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

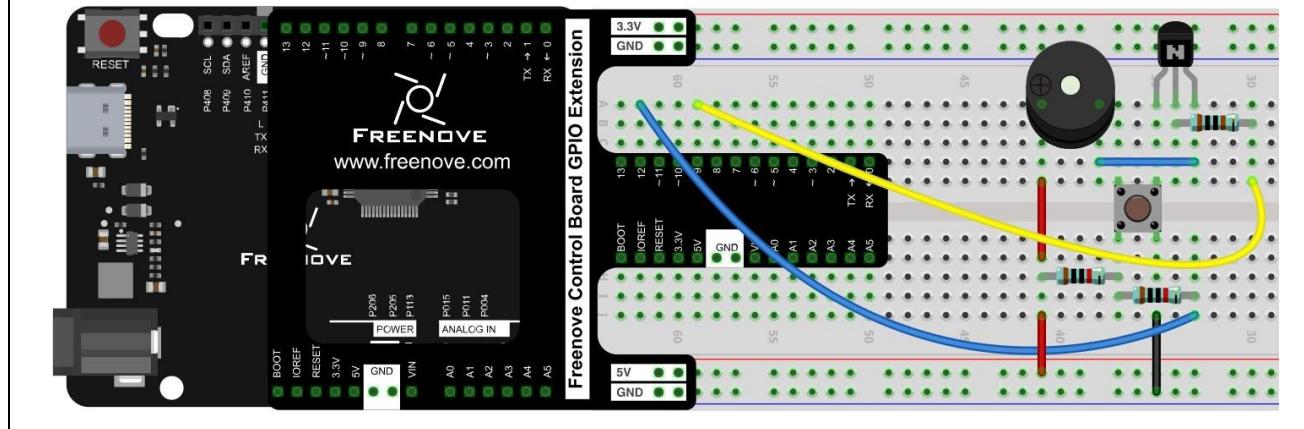

Sketch


Sketch 9.1.1

Now, write code to detect the state of push button, and drive active buzzer to make a sound when it is pressed.

```
1 int buttonPin = 12; // the number of the push button pin
2 int buzzerPin = 9; // the number of the buzzer pin
3
4 void setup() {
5     pinMode(buttonPin, INPUT); // Set push button pin into input mode
6     pinMode(buzzerPin, OUTPUT); // Set Buzzer pin into output mode
7 }
8
9 void loop() {
10    if (digitalRead(buttonPin) == HIGH)// If the pin is high level, the button is not pressed.
11        digitalWrite(buzzerPin, LOW); // Turn off Buzzer
12    else // The button is pressed, if the pin is low level
13        digitalWrite(buzzerPin, HIGH); // Turn on Buzzer
14 }
```

In the code, we check the state of push button switch. When it is pressed, the output high level controls transistor to get conducted, and drives active buzzer to make a sound.

Verify and upload the code, press the push button, and the active buzzer will make a sound.


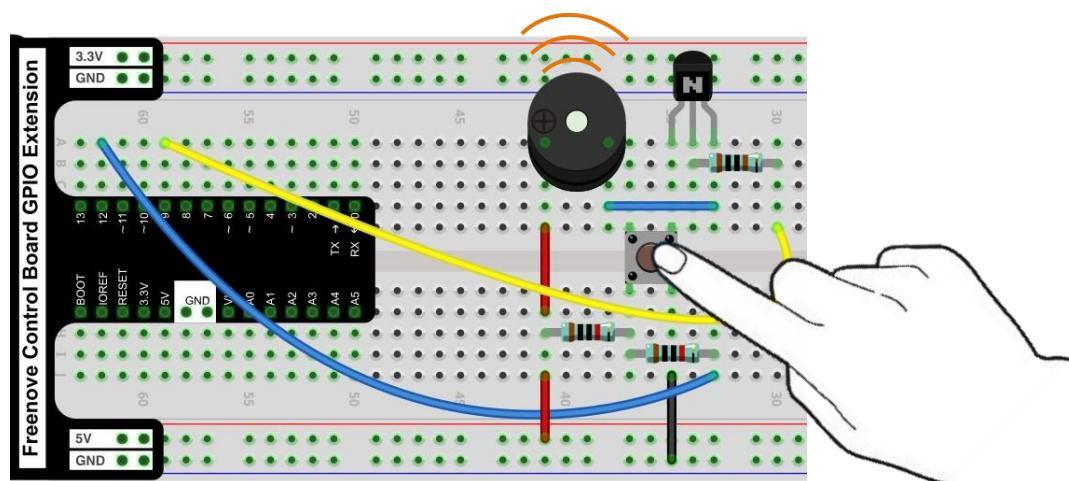


Project 9.2 Passive Buzzer

In the previous section, we have finished using transistor to drive an active buzzer to beep. Now, we will try to use a passive buzzer to make a sound with different frequency.


Component List

Control board x1

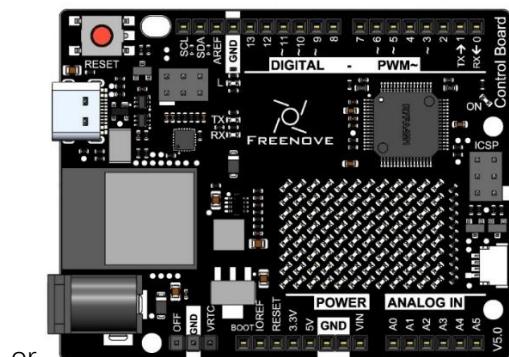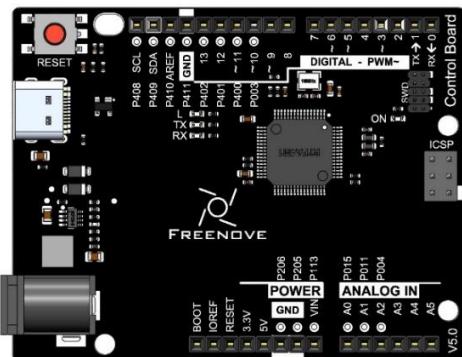


or

Breadboard x1

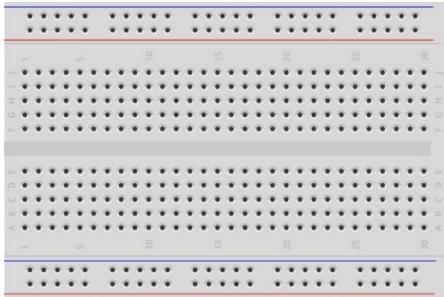

GPIO Extension Board x1

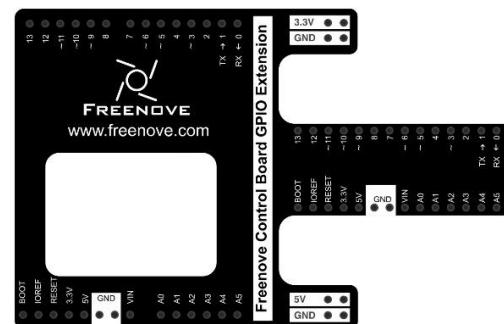

USB cable x1



NPN transistor
x1



Passive buzzer
x1



Resistor 1kΩ x1




Jumper M/M x4




Circuit

Use pin 9 port of control board to drive a passive buzzer.

Schematic diagram

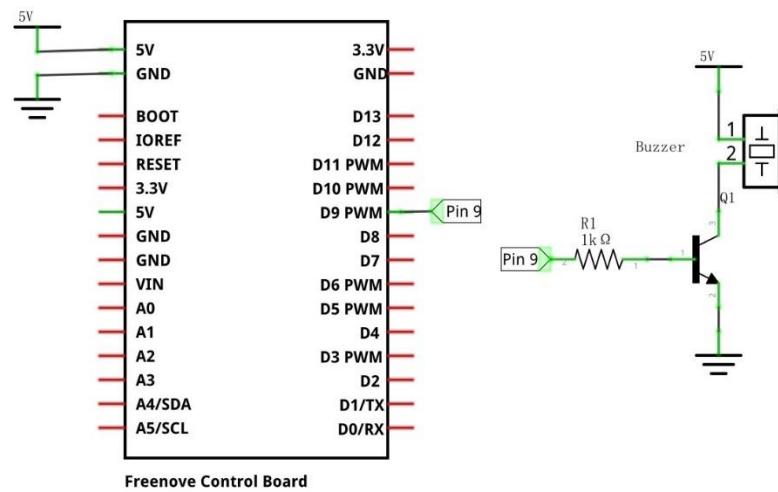


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

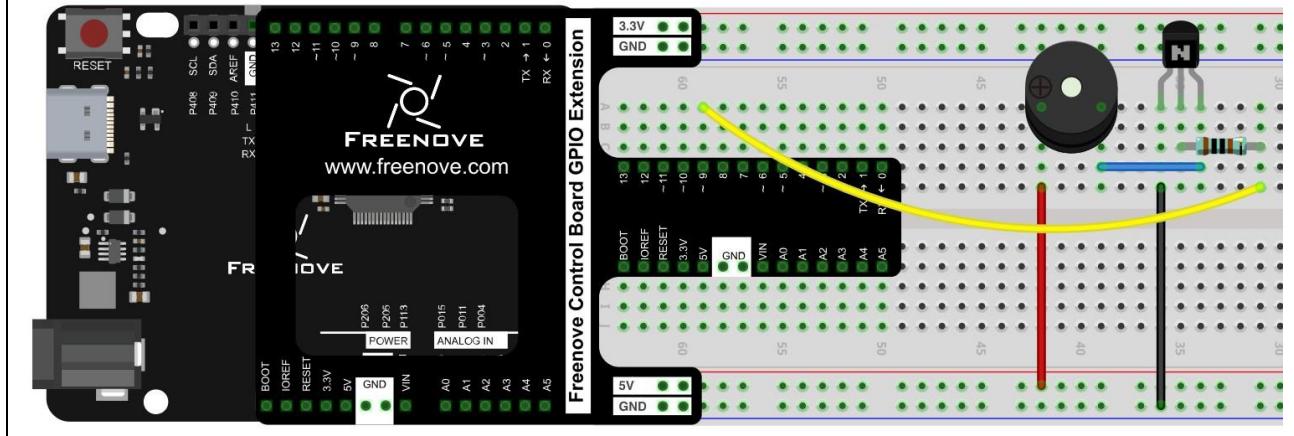

Sketch

Sketch 9.2.1

Now, write code to drive a passive buzzer to make a warning sound. The frequency of the passive buzzer conforms roughly to the following sine curve over time:

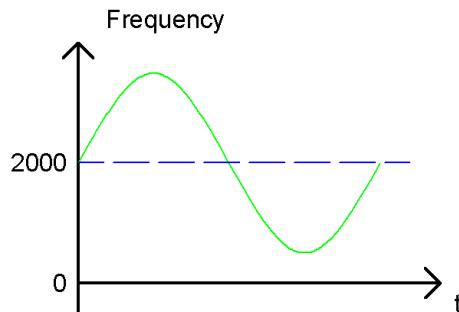

Output PWM waves with different frequency to the port, which is connected to the transistor, to drive buzzer to make a sound with different frequency.

```

1 int buzzerPin = 9;      // the number of the buzzer pin
2 float sinVal;          // Define a variable to save sine value
3 int toneVal;           // Define a variable to save sound frequency
4
5 void setup() {
6     pinMode(buzzerPin, OUTPUT); // Set Buzzer pin to output mode
7 }
8
9 void loop() {
10    for (int x = 0; x < 360; x++) {        // X from 0 degree->360 degree
11        sinVal = sin(x * (PI / 180));       // Calculate the sine of x
12        toneVal = 2000 + sinVal * 500;       // Calculate sound frequency according to the sine of x
13        tone(buzzerPin, toneVal);           // Output sound frequency to buzzerPin
14        delay(1);
15    }
16 }
```

In the code, use one loop to control the sound frequency, varying according to sine curve in the range of 2000 ± 500 .

```

10   for (int x = 0; x < 360; x++) {        // X from 0 degree->360 degree
11       sinVal = sin(x * (PI / 180));       // Calculate the sine of x
12       toneVal = 2000 + sinVal * 500;       // Calculate sound frequency according to the sine of x
13       tone(buzzerPin, toneVal);           // Output sound frequency to buzzerPin
14       delay(1);
15 }
```

The parameter of `sin()` function is radian, so we need convert unit of π from angle to radian first .

tone(pin, frequency)

Generates a square wave of the specified frequency (and 50% duty cycle) on a pin.

Verify and upload the code, passive buzzer starts making a warning sound.

You can try using PNP transistor to complete the project of this chapter again.

Chapter 10 DAC



In this chapter, we learn about DAC (Digital to Analog Converter). The Control board (V5) has a built-in DAC (Digital to Analog Converter) which is used to convert digital signals into analog signals.

Project 10.1 DAC

In this project, let's learn the DAC function of the control board and use it to control a passive buzzer to play music.


Component List

Control board x1

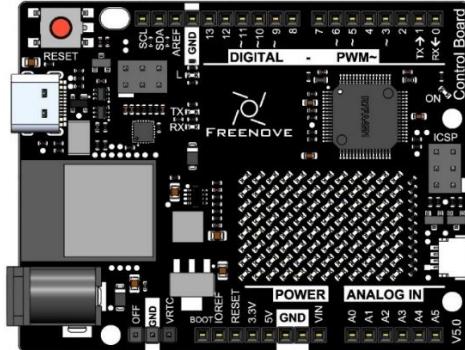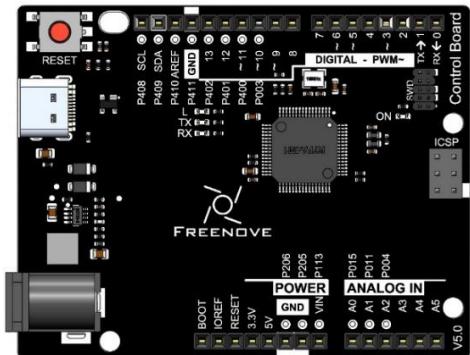


or

Breadboard x1

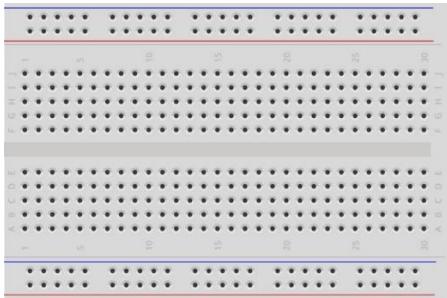

GPIO Extension Board x1

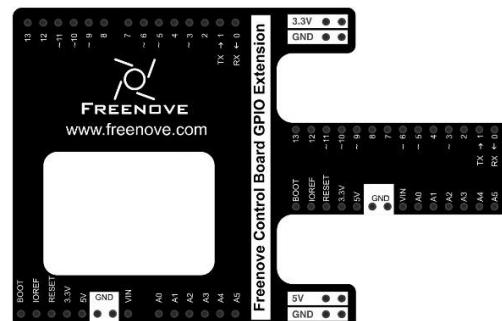

USB cable x1	NPN transistor x1	Passive buzzer or Passive buzzer x1	Resistor 1kΩ x1
Jumper M/M x6			

If you don't have a speaker in your kit, use a passive buzzer instead.

Component Knowledge

DAC

Digital-to-Analog Converters (DACs) are capable of converting digital data into analog signals, making them suitable for a variety of applications. DACs, as the name suggests, are modules that convert digital codes into corresponding analog voltage outputs, functioning in a manner that is opposite to that of ADCs (Analog-to-Digital Converters).

Analog Output vs PWM


For many use cases when analog output is required, using PWM (Pulse Width Modulation) instead of genuine analog output will yield essentially the same results. A digital output pin can only either be fully on (HIGH) or fully off (LOW), but by turning it on and off very quickly with precise timings, the average voltage can be controlled and emulate an analog output. This method is called PWM.

For example when dimming an LED, you can freely use a PWM enabled digital pin as an analog output pin and the LED would dim just the same as if you'd be using a DAC output.

However this will not always be the case, and for many uses you will need to use a genuine analog output to get your desired results. One such case is in audio purposes, where a PWM output simply will not give the same quality of sound as a genuine analog output, and requires some fiddling to work in the first place.


Circuit

Schematic diagram

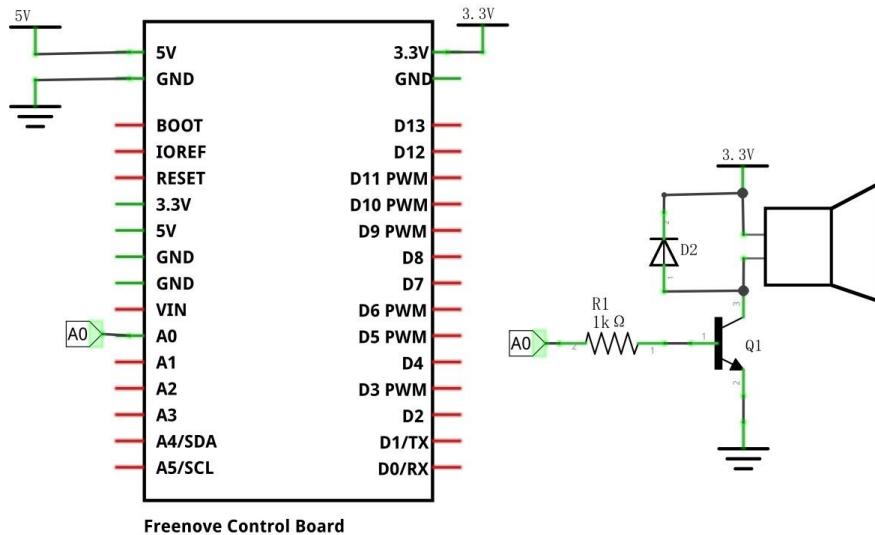

Freenove Control Board

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

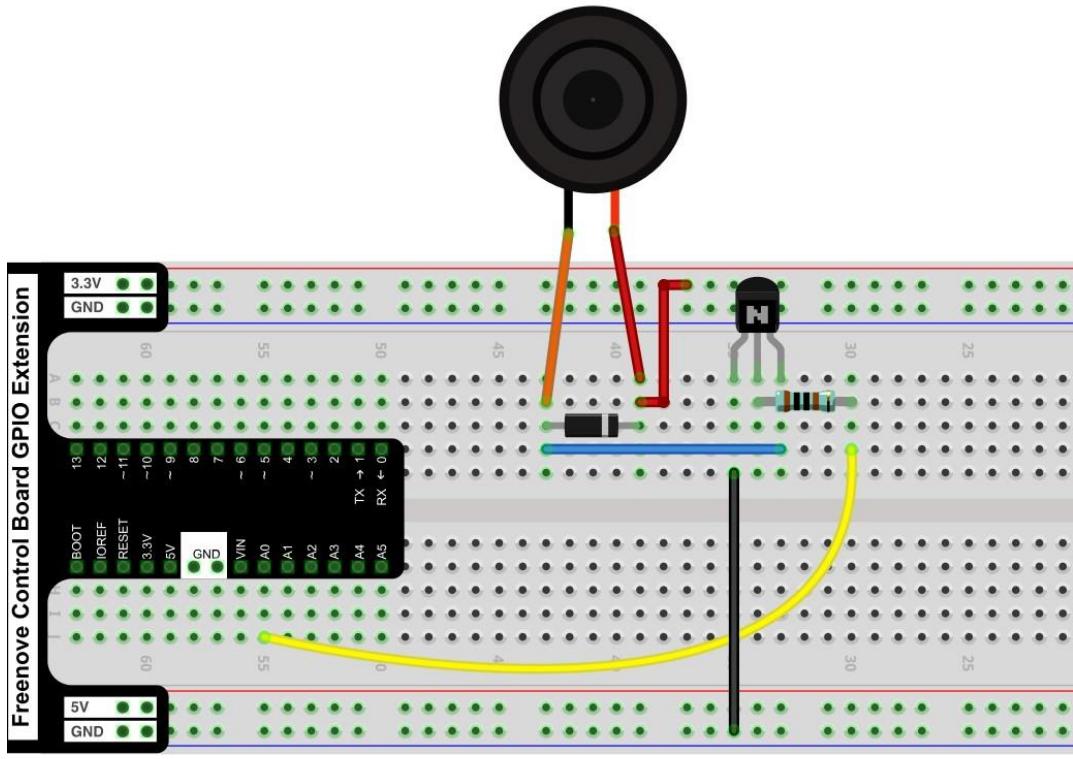

In addition, you can also refer to the above circuit to replace the speaker with a passive buzzer, the experimental effect is basically the same.

Sketch

Sketch 10.1.1

Upload the sketch to the board and you will hear the loudspeaker make sounds.

```
1 #include "analogWave.h"
2 #include "pitches.h"
3
4 // Melody and rhythm defined as an array
5 // Each note is followed by its duration (4 = quarter note, 8 = eighth note, etc.)
6 int melody[] = {
7     // Super Mario Bros theme
8     // Score available at https://musescore.com/user/2123/scores/2145
9     // Theme by Koji Kondo
10    NOTE_E5, 8, NOTE_E5, 8, REST, 8, NOTE_E5, 8, REST, 8, NOTE_C5, 8, NOTE_E5, 8, //1
11    NOTE_G5, 4, REST, 4, NOTE_G4, 8, REST, 4,
12    NOTE_C5, -4, NOTE_G4, 8, REST, 4, NOTE_E4, -4, // 3
13    NOTE_A4, 4, NOTE_B4, 4, NOTE_AS4, 8, NOTE_A4, 4,
14    NOTE_G4, -8, NOTE_E5, -8, NOTE_G5, -8, NOTE_A5, 4, NOTE_F5, 8, NOTE_G5, 8,
15    REST, 8, NOTE_E5, 4, NOTE_C5, 8, NOTE_D5, 8, NOTE_B4, -4,
16 };
17
18 analogWave wave(DAC); // Initialize the analogWave object for DAC(A0)
19
20 int noteCounter = 0; // Index to keep track of which note is being played
21 int tempo = 200; // Set the tempo in BPM (Beats Per Minute)
22 int wholenote = (60000 * 4) / tempo; // Calculate the duration of a whole note in ms
23 int divider = 0, noteDuration = 0; // Variables to hold note duration
24
25 void setup() {
26     wave.sine(10); // Initialize the sine wave generator with a frequency of 10 Hz
27 }
28
29 void loop() {
30     // Calculate the duration of the current note
31     divider = melody[noteCounter + 1];
32     if (divider > 0) {
33         // For regular notes
34         noteDuration = wholenote / divider;
35     } else if (divider < 0) {
36         // For dotted notes (duration increased by 50%)
37         noteDuration = wholenote / abs(divider);
38         noteDuration *= 1.5; // Increase the duration by 50% for dotted notes
39     }
```

```
40
41 // Play the note
42 wave.freq(melody[noteCounter]);
43 delay(noteDuration * 0.85); // Play the note for 85% of its duration
44 wave.stop();
45
46 // Pause between notes
47 delay(noteDuration * 0.15); // Pause for 15% of the note duration
48
49 // Increment the note counter by 2 (because each note is followed by its duration)
50 noteCounter += 2;
51
52 // Reset the counter when reaching the end of the melody
53 int totalNotes = sizeof(melody) / sizeof(melody[0]);
54 noteCounter = noteCounter % totalNotes;
55
56 // Add a delay between repetitions of the melody
57 if (noteCounter == 0) {
58     delay(1000);
59 }
60 }
```

If you want to know more about the DAC Settings of the control panel, please refer to the connection:
<https://docs.arduino.cc/tutorials/uno-r4-minima/dac/>

You can also use the above circuit to play an interesting audio clip by uploading Sketch_10.1.2_DAC_Jacques.ino to your development board. If you don't have a speaker, you can replace it with a passive buzzer.

Chapter 11 RTC


In this chapter, we explore how to access the Real-Time Clock (RTC) on the Control board (V5). The RTC is embedded in the microcontroller (RA4M1) of the Control board (V5).

Project 11.1 RTC

With this project, let's delve into controlling the RTC function of the control board, applying it to flash the indicator every two seconds.

Component List

Control board x1

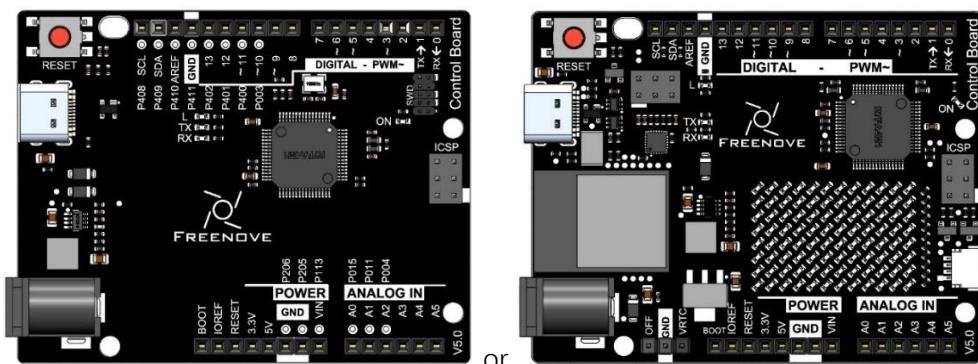

or

USB cable x1



Component Knowledge


RTC

The Real-Time Clock (RTC) is integrated into the microcontroller (RA4M1) of the control board, serving as an independent timekeeping device that continues to operate even when the primary source of power is off or unavailable. This is achieved thanks to a backup power source, such as a battery. Such feature significantly enhances the RTC's utility across a spectrum of applications, from automating tasks in home systems to timestamping data entries in logging applications.

It should be highlighted that the control board (WiFi) is equipped with a VRTC pin that sustains the RTC's functionality when the board is not powered. To engage this functionality, a voltage between 1.6 and 3.6 V must be supplied to the VRTC pin. It is crucial to stay within this voltage range to avoid damaging the board. It is also important to recognize that this advanced feature is exclusive to the control board with WiFi function and is not available in the standard models.

Circuit

Connect the board to the computer using the USB cable.

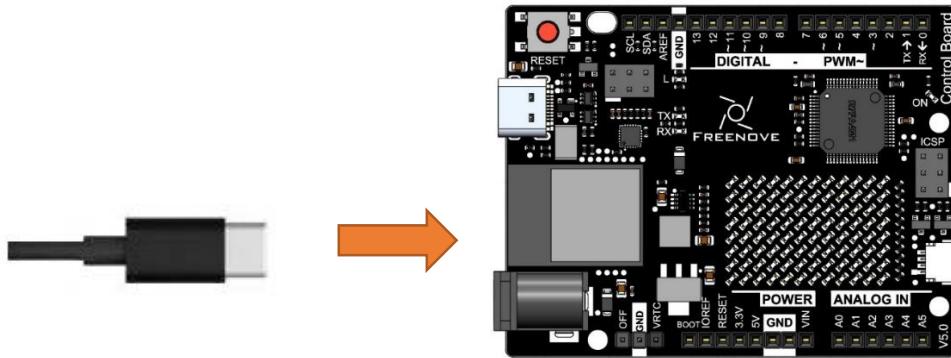

Sketch

Sketch 11.1.1

Upload the sketch to the board and you will see the onboard LED flash every two seconds.

```
1 #include "RTC.h"
2
3 volatile bool irqFlag = false; // Flag to indicate a periodic callback.
4 bool ledState = false; // Current LED state: true for ON and false for OFF
5 const int led = LED_BUILTIN; // Pin number for the built-in LED
6
7 void setup() {
8     pinMode(led, OUTPUT); // Configure the LED pin as output
9
10    Serial.begin(9600);
11
12    // Initialize the RTC
13    RTC.begin();
14
15    // Set an arbitrary time to the RTC (required for RTC.setPeriodicCallback to work)
16    RTCTime mytime(13, Month::MAY, 2024, 05, 13, 00, DayOfWeek::MONDAY,
17    SaveLight::SAVING_TIME_ACTIVE);
18
19    RTC.setTime(mytime);
20
21    // Set the periodic callback to trigger every 2 seconds
```

```

20   if (!RTC.setPeriodicCallback(periodicCallback, Period::ONCE_EVERY_2_SEC)) {
21     Serial.println("ERROR: periodic callback not set");
22   }
23 }
24
25 void loop() {
26   // Check if the periodic callback has been triggered
27   if (irqFlag) {
28     Serial.println("Timed CallBack"); // Output a debugging message
29     ledState = !ledState;           // Toggle the LED state
30     digitalWrite(led, ledState);    // Update the LED
31     irqFlag = false;              // Reset the flag
32   }
33 }
34
35 // This is the callback function to be passed to RTC.setPeriodicCallback()
36 void periodicCallback() {
37   // Set the flag to true to indicate the callback has been triggered
38   irqFlag = true;
39 }
```

Initialize RTC.

13	RTC.begin();
----	--------------

Configure the time for RTC.

15	RTCTime mytime(13, Month::MAY, 2024, 05, 13, 00, DayOfWeek::MONDAY,
16	SaveLight::SAVING_TIME_ACTIVE);
17	RTC.setTime(mytime);

A periodic interrupt allows you to set a recurring callback. Set the periodcallback to trigger once every two seconds.

20	if (!RTC.setPeriodicCallback(periodicCallback, Period::ONCE_EVERY_2_SEC)) {
21	Serial.println("ERROR: periodic callback not set");
22	}

Change the status of the LED every two seconds.

27	if (irqFlag) {
28	Serial.println("Timed CallBack"); // Output a debugging message
29	ledState = !ledState; // Toggle the LED state
30	digitalWrite(led, ledState); // Update the LED
31	irqFlag = false; // Reset the flag
32	}

Chapter 12 Motor



Earlier, we have done a series of interesting projects with control board and basic electronic components. Now, let us study some movable electronic modules. In this chapter, we will learn to control a motor.

Project 12.1 Control Motor with L293D

Now, we will use dedicated chip L293D to control the motor.


Component List

Control board x1

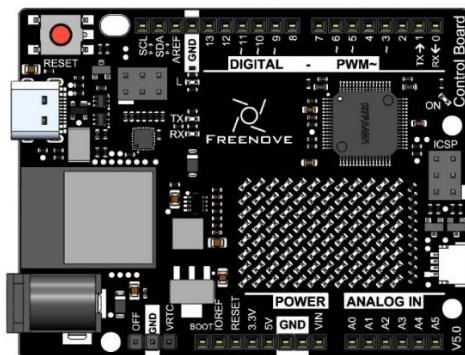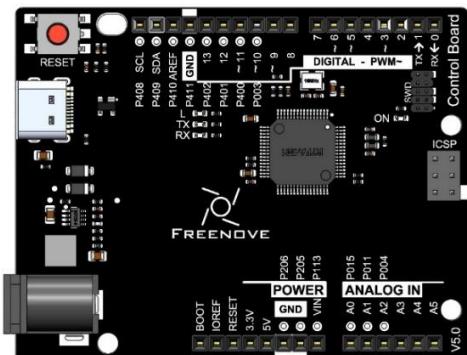


or

Breadboard x1

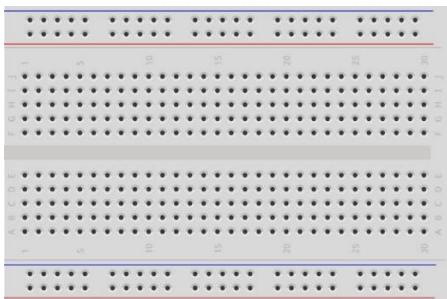

GPIO Extension Board x1

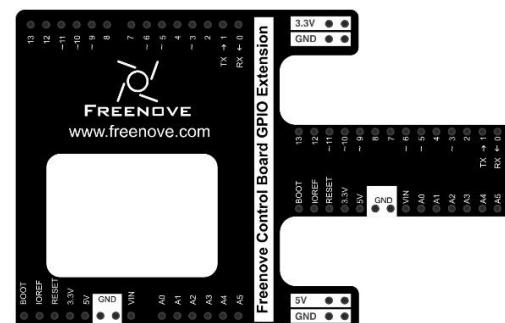


USB cable x1



Jumper M/M x10

Jumper F/M x2




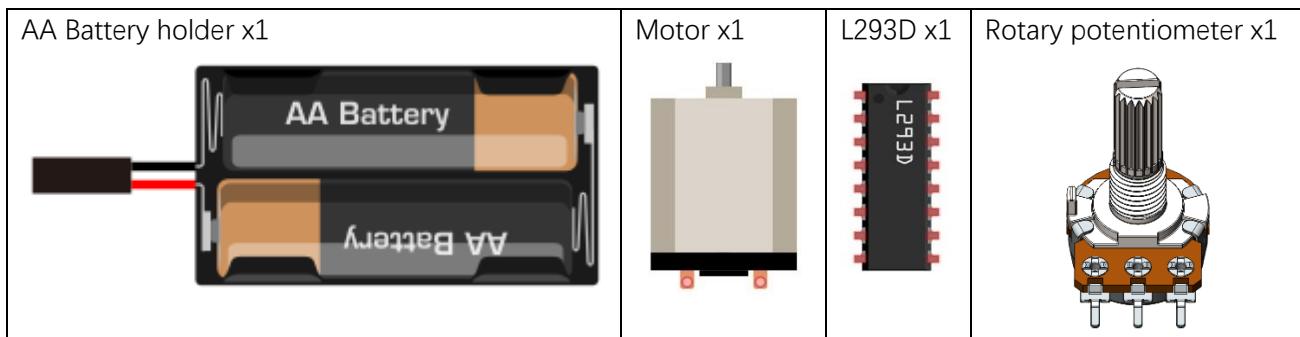

Component Knowledge

L293D

L293D is an IC chip (Integrated Circuit Chip) with a 4-channel motor drive. You can drive a unidirectional DC motor with 4 ports or a bi-directional DC motor with 2 ports or a stepper motor (stepper motors are covered later in this Tutorial).

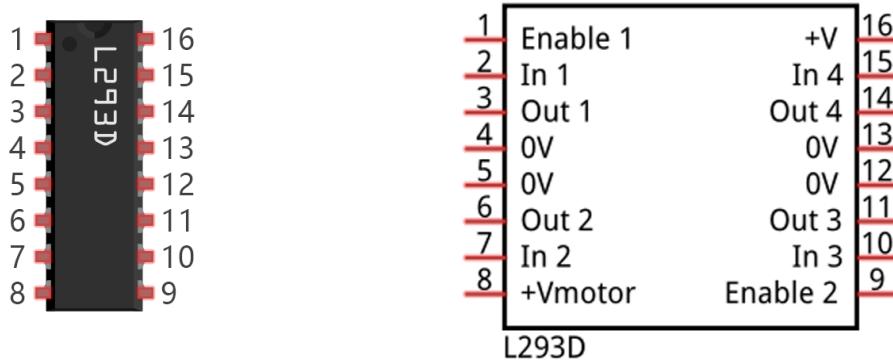


Port description of L293D module is as follows:

Pin name	Pin number	Description
In x	2, 7, 10, 15	Channel x digital signal input pin
Out x	3, 6, 11, 14	Channel x output pin, input high or low level according to In x pin, get connected to +Vmotor or 0V
Enable1	1	Channel 1 and channel 2 enable pin, high level enable
Enable2	9	Channel 3 and channel 4 enable pin, high level enable
0V	4, 5, 12, 13	Power cathode (GND)
+V	16	Positive electrode (VCC) of power supply, supply voltage 4.5~36V
+Vmotor	8	Positive electrode of load power supply, provide power supply for the Out pin x, the supply voltage is +V~36V


For more details, please see datasheet.

When using L293D to drive DC motor, there are usually two kinds of connection.

The following connection option uses one channel of the L293D, which can control motor speed through the PWM, However the motor then can only rotate in one direction.

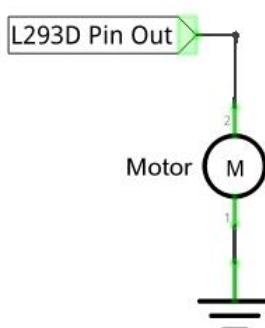

The following connection uses two channels of the L293D: one channel outputs the PWM wave, and the other channel connects to GND. Therefore, you can control the speed of the motor. When these two channel signals are exchanged, not only controls the speed of motor, but also can control the speed of the motor.

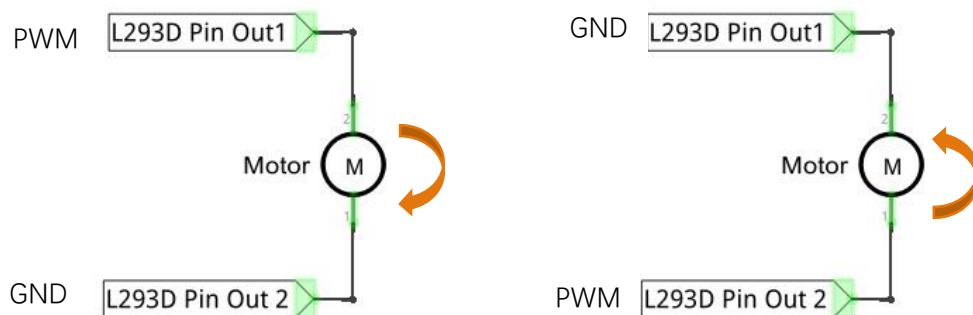


In practical use the motor is usually connected to channel 1 and by outputting different levels to in1 and in2 to control the rotational direction of the motor, and output to the PWM wave to Enable1 port to control the motor's rotational speed. If the motor is connected to channel 3 and 4 by outputting different levels to in3 and in4 to control the motor's rotation direction, and output to the PWM wave to Enable2 pin to control the motor's rotational speed.


Circuit

Use pin A0 of the control board to detect the voltage of rotary potentiometer; pin 9 and pin 10 to control the motor's rotation direction and pin 11 to output PWM wave to control motor speed.

Schematic diagram

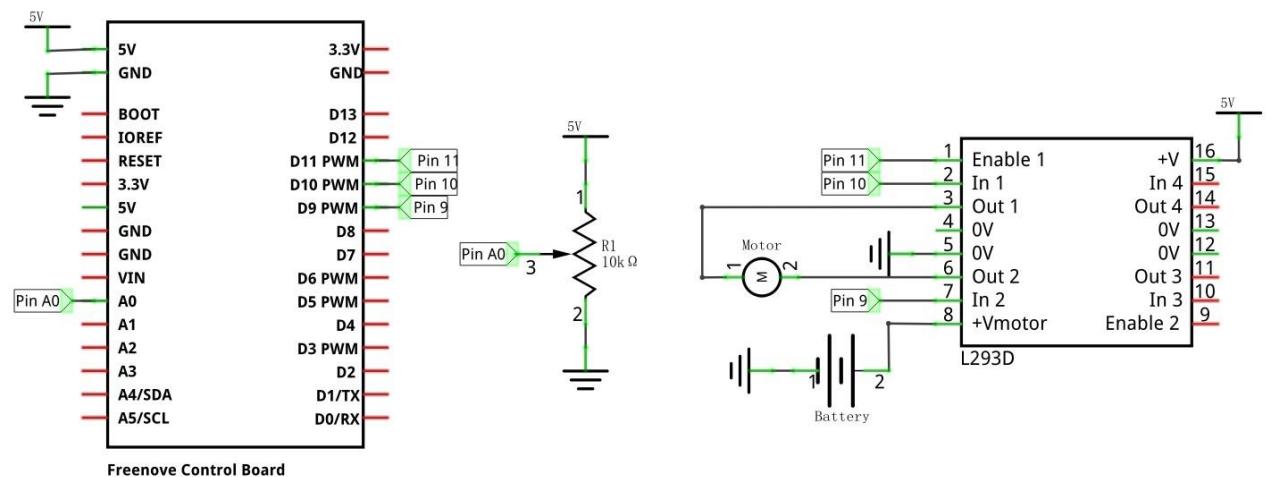

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

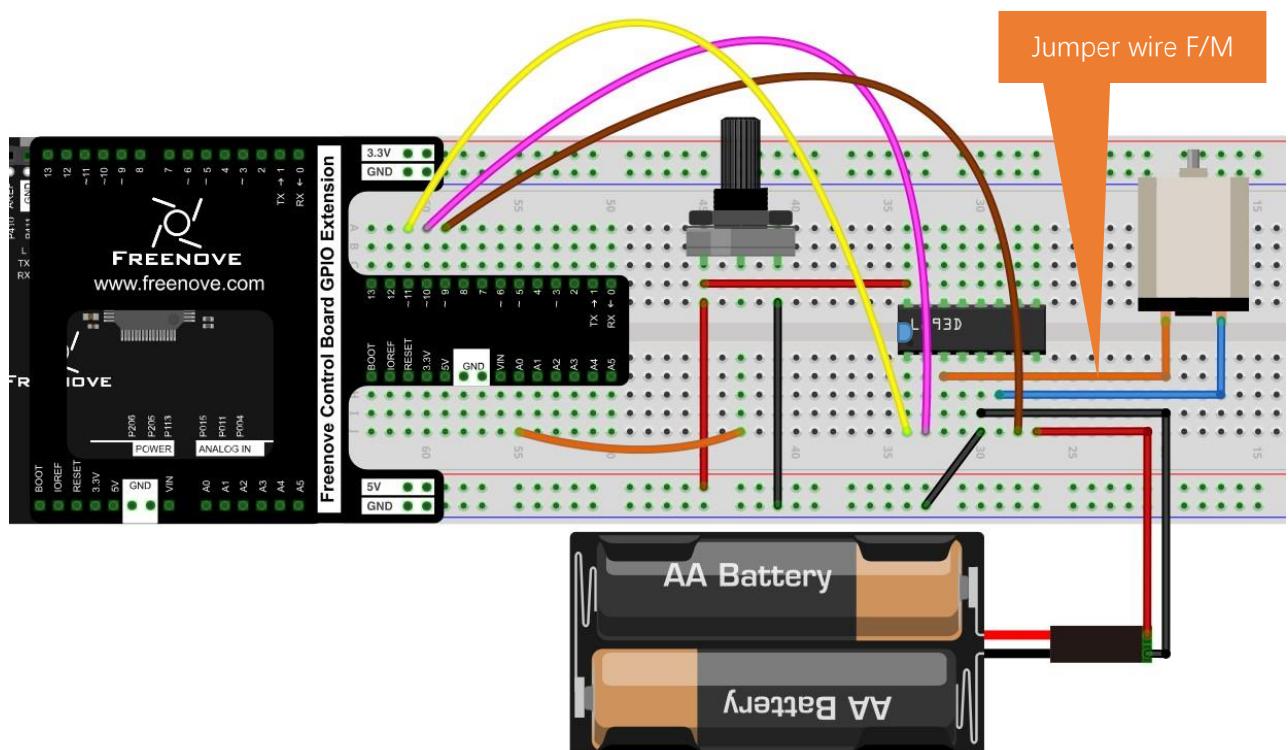

The DC electric power here can also be powered using 5V or 3.3V on the control board.

Sketch

Sketch 12.2.1

Now, write the code to control speed and rotation direction of motor through rotary potentiometer. When the potentiometer stays in the middle position, motor speed will be minimum, and when deviates intermediate position, the speed will increase. Also, if the potentiometer deviates from the middle position of potentiometer clockwise or counterclockwise, the rotation direction of the motor is different.

```
1 int in1Pin = 10;      // Define L293D channel 1 pin
2 int in2Pin = 9;       // Define L293D channel 2 pin
3 int enable1Pin = 11;  // Define L293D enable 1 pin
4 boolean rotationDir; // Define a variable to save the motor's rotation direction, true and false are
                       // represented by positive rotation and reverse rotation.
5 int rotationSpeed;   // Define a variable to save the motor rotation speed
6
7 void setup() {
8     // Initialize the pin into an output mode:
9     pinMode(in1Pin, OUTPUT);
10    pinMode(in2Pin, OUTPUT);
11    pinMode(enable1Pin, OUTPUT);
12 }
13
14 void loop() {
15     int potenVal = analogRead(A0); // Convert the voltage of rotary potentiometer into digital
16     // Compare the number with value 512, if more than 512, clockwise rotates, otherwise, counter
17     // clockwise rotates
18     rotationSpeed = potenVal - 512;
19     if (potenVal > 512)
20         rotationDir = true;
21     else
22         rotationDir = false;
23     // Calculate the motor speed, the far number of deviation from the middle value 512, the faster the
24     // control speed will be
25     rotationSpeed = abs(potenVal - 512);
26     // Control the steering and speed of the motor
27     driveMotor(rotationDir, map(rotationSpeed, 0, 512, 0, 255));
28 }
29
30 void driveMotor(boolean dir, int spd) {
31     // Control motor rotation direction
32     if (rotationDir) {
33         digitalWrite(in1Pin, HIGH);
34         digitalWrite(in2Pin, LOW);
35     }
```

```

34     else {
35         digitalWrite(in1Pin, LOW);
36         digitalWrite(in2Pin, HIGH);
37     }
38     // Control motor rotation speed
39     analogWrite(enable1Pin, constrain(spd, 0, 255));
40 }
```

In the code, we write a function to control the motor, and control the speed and steering through two parameters.

```

28 void driveMotor(boolean dir, int spd) {
29     // Control motor rotation direction
30     if (rotationDir) {
31         digitalWrite(in1Pin, HIGH);
32         digitalWrite(in2Pin, LOW);
33     }
34     else {
35         digitalWrite(in1Pin, LOW);
36         digitalWrite(in2Pin, HIGH);
37     }
38     // Control motor rotation speed
39     analogWrite(enable1Pin, constrain(spd, 0, 255));
40 }
```

In the loop () function, detect the digital value of rotary potentiometer, and convert it into the motor speed and steering through calculation.

```

14 void loop() {
15     int potenVal = analogRead(A0); // Convert the voltage of rotary potentiometer into digital
16     // Compare the digital number with middle value 512, if more than 512, clockwise rotates, otherwise,
17     counter clockwise rotates
18     rotationSpeed = potenVal - 512;
19     if (potenVal > 512)
20         rotationDir = true;
21     else
22         rotationDir = false;
23     // Calculate the motor speed, the far number of deviation from the middle value 512, the faster the
24     control speed will be
25     rotationSpeed = abs(potenVal - 512);
26     // Control the steering and speed of the motor
27     driveMotor(rotationDir, map(rotationSpeed, 0, 512, 0, 255));
28 }
```

abs(x)

Computes the absolute value of a number.

Verify and upload the code, turn the shaft of rotary potentiometer, and then you can see the change of the motor speed and direction.

Chapter 13 Servo



Earlier, we have used control board and L293D module to control the motor speed and steering. Now, we will use another motor, servo, which can rotate to a certain angle.

Project 13.1 Servo Sweep

First, let's get the servo to rotate.


Component List

Control board x1

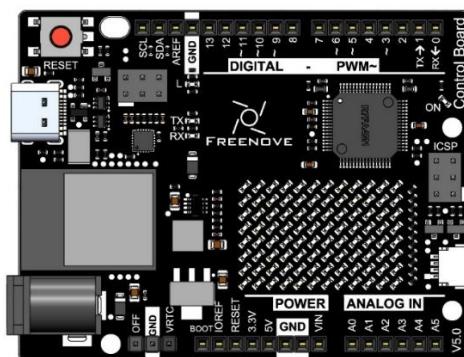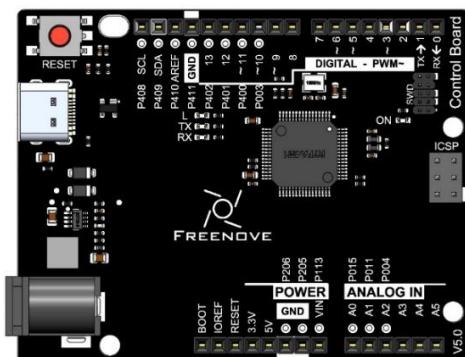


or

Breadboard x1

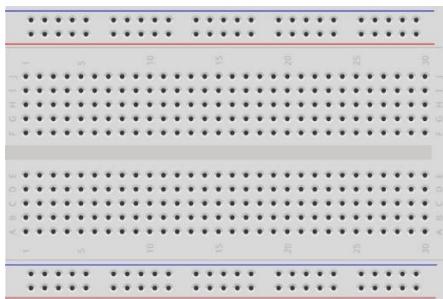

GPIO Extension Board x1

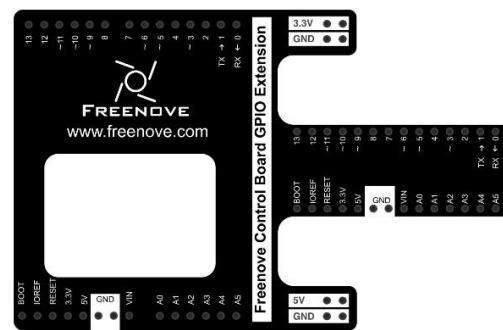


USB cable x1



Jumper M/M x3




Servo x1

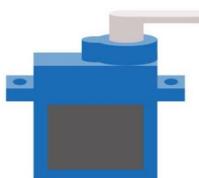

Component Knowledge

Servo

Servo is a compact package which consists of a DC Motor, a set of reduction gears to provide torque, a sensor and control circuit board. Most Servos only have a 180-degree range of motion via their "horn". Servos can output higher torque than a simple DC Motor alone and they are widely used to control motion in model cars, model airplanes, robots, etc. Servos have three wire leads which usually terminate to a male or female 3-pin plug. Two leads are for electric power: Positive (2-VCC, Red wire), Negative (3-GND, Brown wire), and the signal line (1-Signal, Orange wire) as represented in the Servo provided in your Kit.

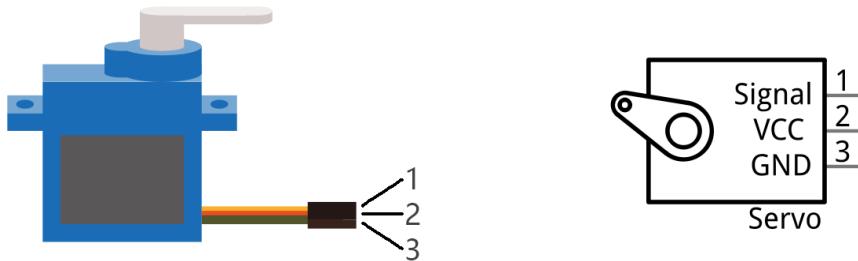

We will use a 50Hz PWM signal with a duty cycle in a certain range to drive the Servo. The lasting time 0.5ms-2.5ms of PWM single cycle high level corresponds to the Servo angle 0 degrees - 180 degree linearly. Part of the corresponding values are as follows:

High level time	Servo angle
0.5ms	0 degree
1ms	45 degree
1.5ms	90 degree
2ms	135 degree
2.5ms	180 degree


When you change the servo signal, the servo will rotate to the designated position.

Circuit


Use pin 3 of the control board to drive the servo.

Pay attention to the color of servo lead wire: VCC (red), GND (brown), and signal line (orange). The wrong connection can cause damage to servo.

Schematic diagram

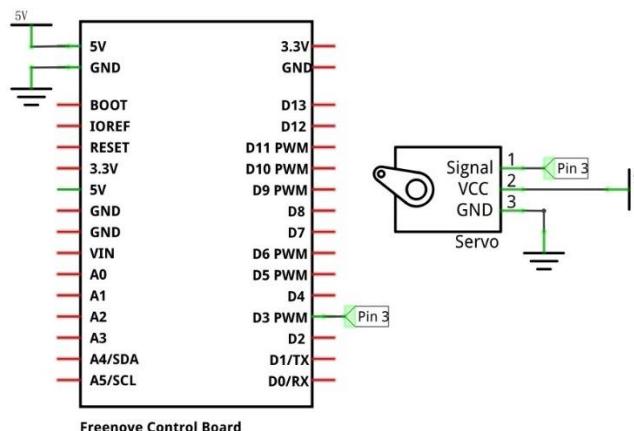

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

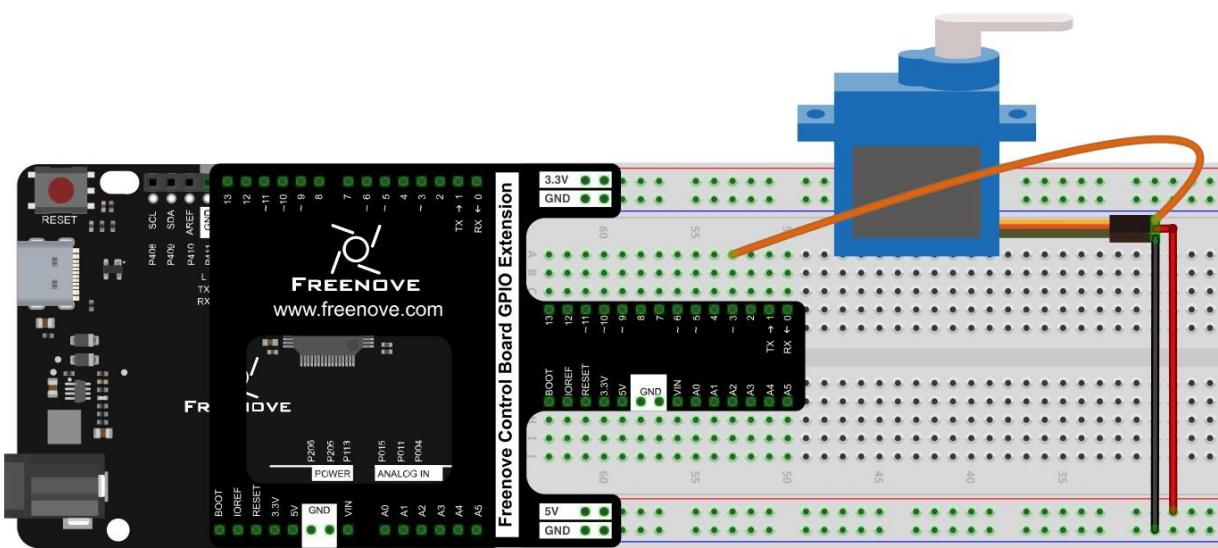

Sketch

Sketch 13.1.1

Now, write the code to control servo, making it sweep in the motion range continuously.

```

1 #include <Servo.h>
2
3 Servo myservo; // create servo object to control a servo
4

```

```

5   int pos = 0;           // variable to store the servo position
6   int servoPin = 3;      // define the pin of servo signal line
7
8   void setup() {
9     myservo.attach(servoPin); // attaches the servo on servoPin to the servo object
10 }
11
12 void loop() {
13   for (pos = 0; pos <= 180; pos += 1) { // goes from 0 degrees to 180 degrees
14     // in steps of 1 degree
15     myservo.write(pos);           // tell servo to go to position in variable "pos"
16     delay(15);                  // waits 15ms for the servo to reach the position
17   }
18   for (pos = 180; pos >= 0; pos -= 1) { // goes from 180 degrees to 0 degrees
19     myservo.write(pos);           // tell servo to go to position in variable "pos"
20     delay(15);                  // waits 15ms for the servo to reach the position
21   }
22 }
```

Servo uses the Servo library, like the following reference to Servo library:

1	#include <Servo.h>
---	--------------------

Servo library provides the Servo class that controls it. Different from previous Serial class, the Servo class must be instantiated before you use it:

3	Servo myservo; // create servo object to control a servo
---	--

The code above defines an object of Servo type, myservo.

Servo Class

Servo class must be instantiated when used, that is, define an object of Servo type, for example:

Servo myservo;

Most other boards can define 12 objects of Servo type, namely, they can control up to 12 servos.

The function commonly used in the servo class is as follows:

myservo.attach(pin): Initialize the servo, the parameter is the port connected to servo signal line;

myservo.write(angle): Control servo to rotate to the specified angle; parameter here is to specify the angle.

After the Servo object is defined, it can refer to the function, such as initializing the servo:

9	myservo.attach(servoPin); // attaches the servo on servoPin to the servo object
---	---

After initializing the servo, you can control the servo to rotate to a specific angle:

15	myservo.write(pos); // tell servo to go to position in variable "pos"
----	---

In the loop () function, we use the loop to control the servo to rotate from 0 degrees to 180 degrees, and then from 180 degrees to 0 degrees, then repeat the cycle all the time.

Verify and upload the code, the servo starts to sweep continuously.




Project 13.2 Control Servo with Potentiometer

In the previous section, we've made the servo sweep continuously. Now, we will use a potentiometer to control the servo's angle.


Component List

Control board x1

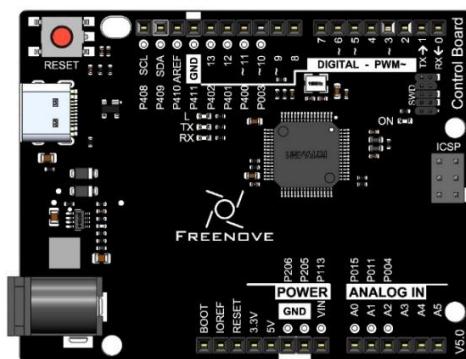


Detailed description: This diagram shows the Freenove Uno R3 microcontroller board. It features a central ATmega328P microcontroller chip. Various pins are labeled: digital pins (D0-D13), PWM pins (D3-D9), analog input pins (A0-A5), power pins (5V, GND, VIN), and ground pins (GND). A USB port is at the top left, and a breadboard area with a 2x14 grid of pins is at the bottom right. A red pushbutton labeled 'RESET' is located near the top center. A large grey component, likely a heat sink or capacitor, is centered on the board.

Breadboard x1

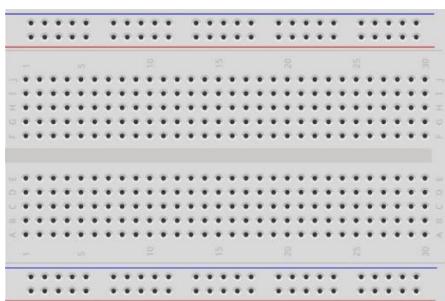


GPIO Extension Board x1

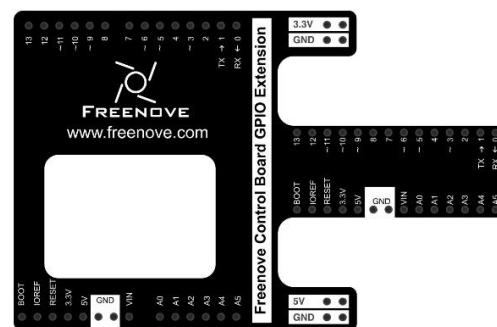

USB cable x1



Rotary potentiometer x1



Servo x1




Jumper M/M x6




Circuit

Use pin A0 of the control board to detect the voltage of rotary potentiometer, and pin 3 to drive the servo.

Schematic diagram

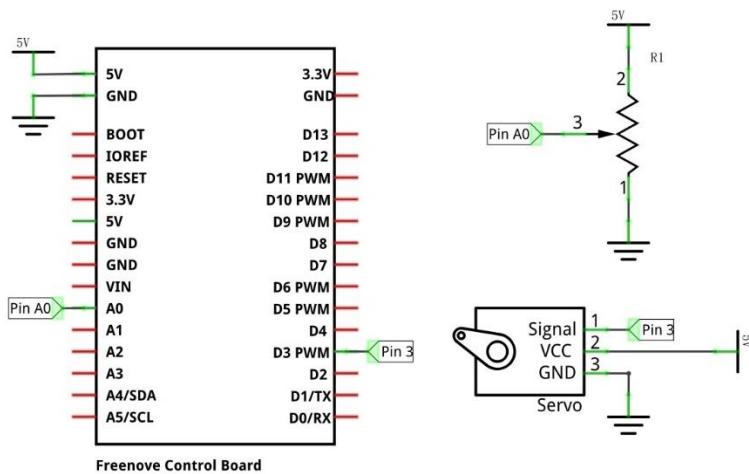

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

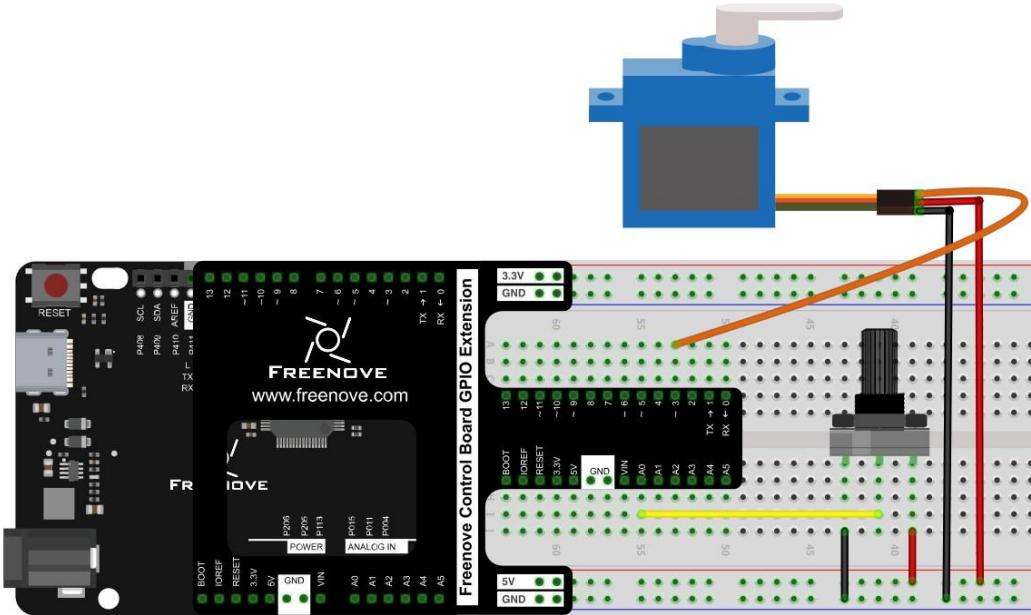

Sketch


Sketch 13.2.1

Now, write the code to detect the voltage of rotary potentiometer, and control servo to rotate to a different angle according to that.

```
1 #include <Servo.h>
2
3 Servo myservo; // create servo object to control a servo
4
5 int servoPin = 3; // define the pin of servo signal line
6 int potPin = 0; // analog pin used to connect the potentiometer
7 int potVal; // variable to read the potValue from the analog pin
8
9 void setup() {
10     myservo.attach(servoPin); // attaches the servo on servoPin to the servo object
11 }
12
13 void loop() {
14     potVal = analogRead(potPin); // reads the potValue of the potentiometer
15     potVal = map(potVal, 0, 1023, 0, 180); // scale it to use it with the servo
16     myservo.write(potVal); // sets the servo position
17     delay(15); // waits for the servo to get there
18 }
```

In the code, we obtain the ADC value of pin A0, and map it to the servo angle.

Verify and upload the code, turn the potentiometer shaft, then the servo will rotate to a corresponding angle.

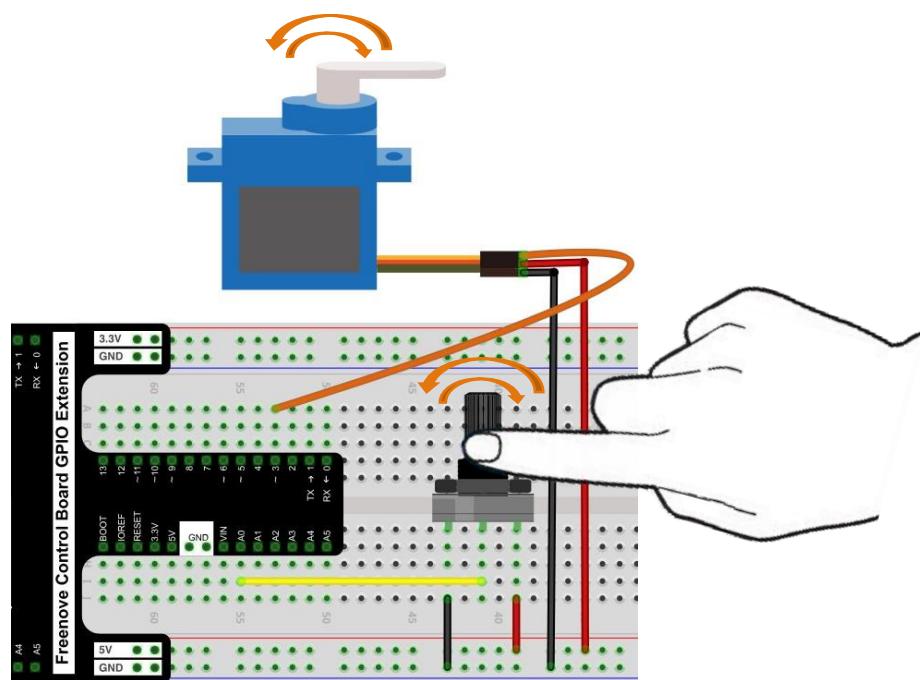

Chapter 14 Temperature Sensor



Earlier, we have used control board and photoresistor to detect the intensity of light. Now, we will learn to use the temperature sensor.

Project 14.1 Detect the Temperature


We will use a thermistor to detect the ambient temperature.

Component List


Control board x1

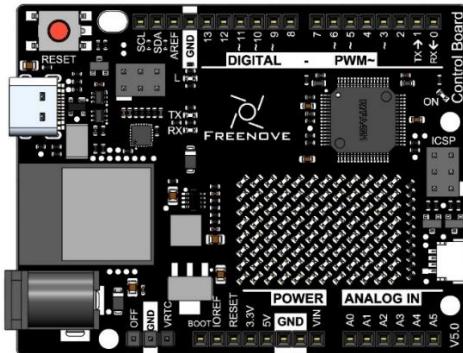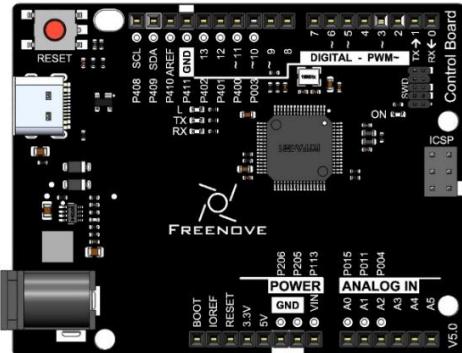

Breadboard x1

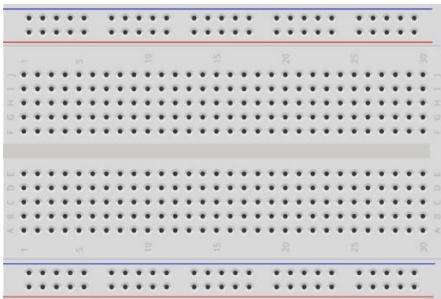

GPIO Extension Board x1

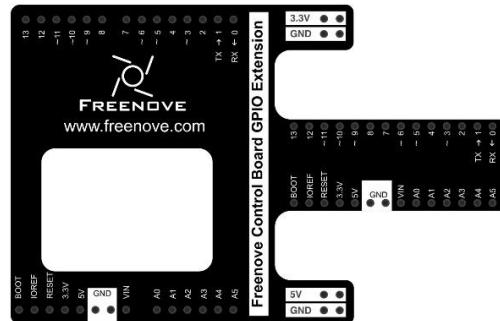

USB cable x1



Thermistor x1



Resistor 10kΩ x1




Jumper M/M x3



Component Knowledge

Thermistor

Thermistor is a temperature sensitive resistor. When it senses a change in temperature, the resistance of the Thermistor will change. We can take advantage of this characteristic by using a Thermistor to detect temperature intensity. A Thermistor and its electronic symbol are shown below.

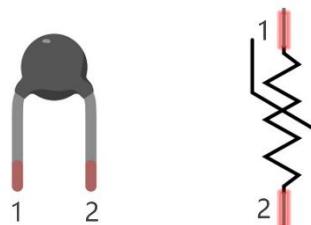

The relationship between resistance value and temperature of thermistor is:

$$R_t = R \cdot \exp[B \cdot (1/T_2 - 1/T_1)]$$

Where:

R_t is the thermistor resistance under T_2 temperature;

R is in the nominal resistance of thermistor under T_1 temperature;


$\exp[n]$ is nth power of e;

B is for thermal index;

T_1, T_2 is Kelvin temperature (absolute temperature). Kelvin temperature = 273.15 + celsius temperature.

Parameters of the thermistor we use is: $B=3950$, $R=10k$, $T_1=25$.

The circuit connection method of the thermistor is similar to photoresistor, as the following:

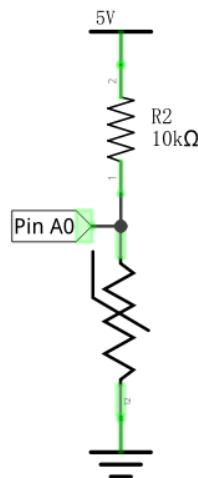


We can use the value measured by the analog pin of control board to obtain resistance value of the thermistor, and then we can use the formula to obtain the temperature value.


Circuit

Use pin A0 on the control board to detect the voltage of thermistor.

Schematic diagram

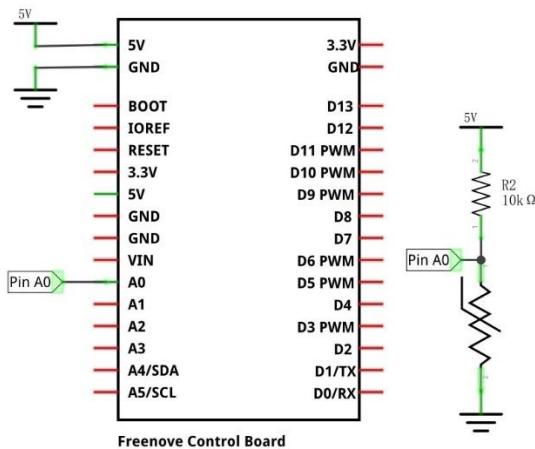

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

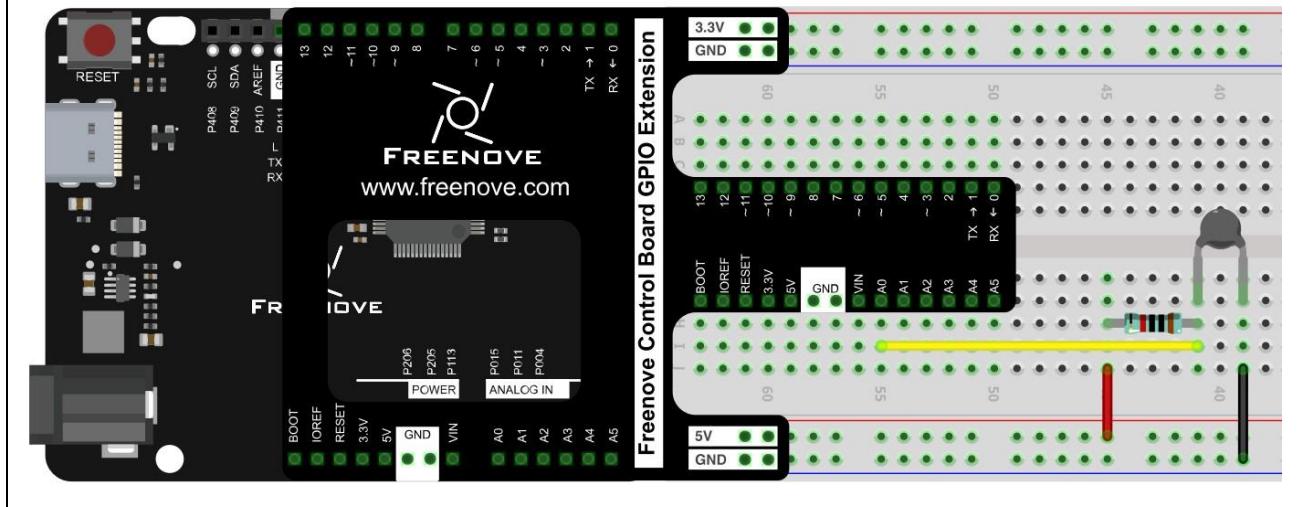

Sketch

Sketch 14.1.1

Now, write the code to detect the voltage value of thermistor, calculate the temperature value, and send it to Serial Monitor.

```


1 void setup() {
2     Serial.begin(9600); // Initialize the serial port, set the baud rate
3     // into 9600
4
5 void loop() {
6     // Convert analog value of A0 port into digital value

```

```
7 int adcVal = analogRead(A0);  
8 // Calculate voltage  
9 float v = adcVal * 5.0 / 1024;  
10 // Calculate resistance value of thermistor  
11 float Rt = 10 * v / (5 - v);  
12 // Calculate temperature (Kelvin)  
13 float tempK = 1 / (log(Rt / 10) / 3950 + 1 / (273.15 + 25));  
14 // Calculate temperature (Celsius)  
15 float tempC = tempK - 273.15;  
16  
17 // Send the result to computer through serial port  
18 Serial.print("Current temperature is: ");  
19 Serial.print(tempK);  
20 Serial.print(" K, ");  
21 Serial.print(tempC);  
22 Serial.println(" C");  
23 delay(500);  
24 }
```

In the code, we obtain the ADC value of pin A0, and convert it into temperature value, and then send it to the serial port.

Verify and upload the code, open the Serial Monitor, and then you will see the temperature value sent from control board.

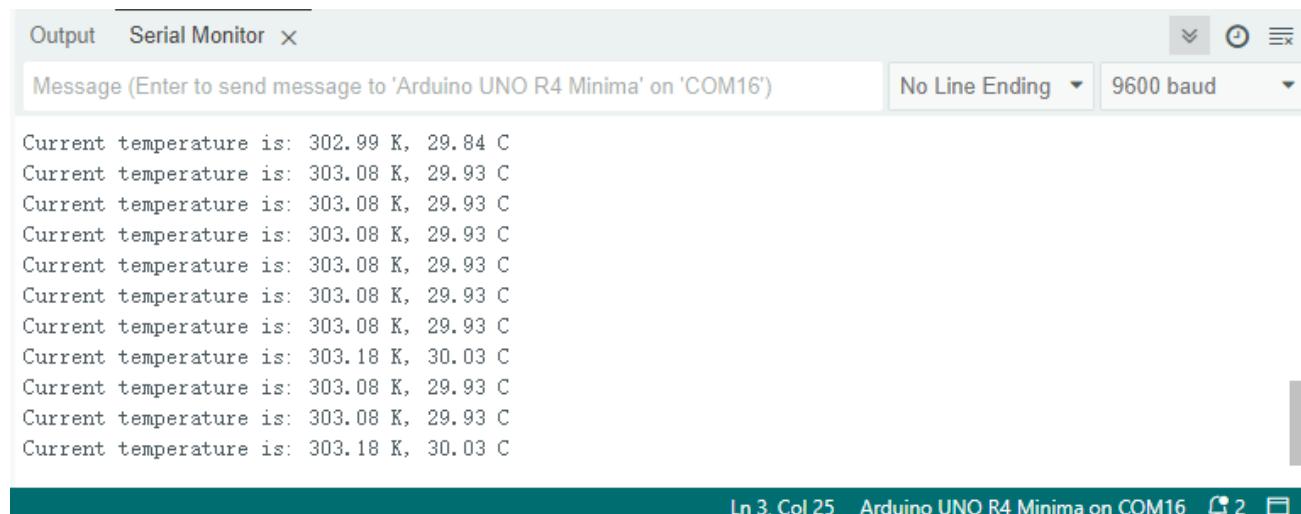

Chapter 15 Joystick



In the previous chapter, we have learned how to use rotary potentiometer. Now, let us learn a new electronic module Joystick that works on the same principle as rotary potentiometer.

Project 15.1 Joystick

We will use the serial port to get Joystick data.


Component List

Control board x1

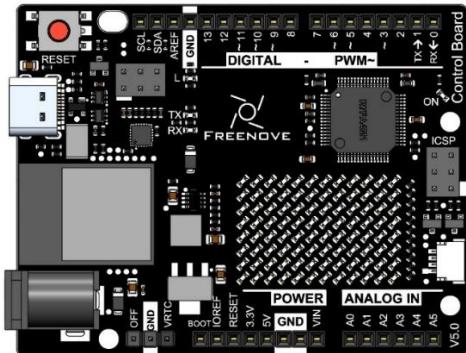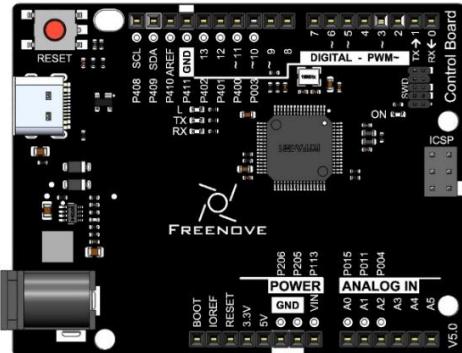


or

Breadboard x1

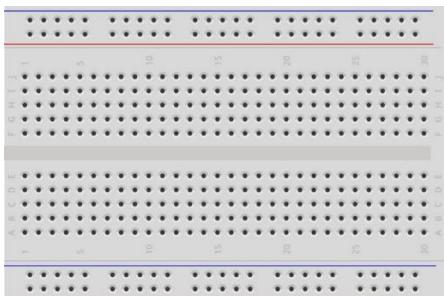

GPIO Extension Board x1

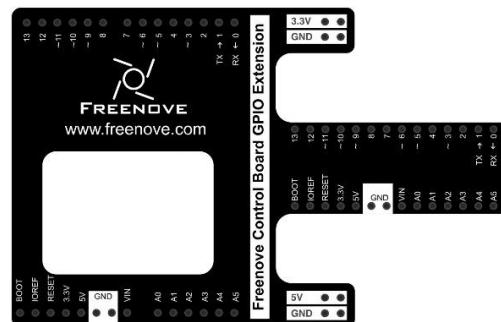

USB cable x1



Joystick x1




Jumper F/M x5




Component Knowledge

Joystick

A Joystick is a kind of input sensor used with your fingers. You should be familiar with this concept already as they are widely used in gamepads and remote controls. It can receive input on two axes (Y and or X) at the same time (usually used to control direction on a two dimensional plane). And it also has a third direction capability by **pressing down (Z axis/direction)**.

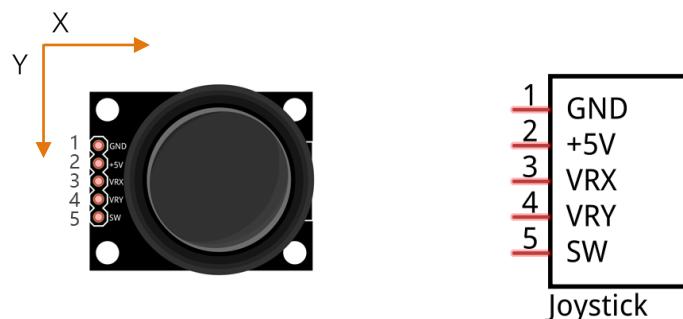


This is accomplished by incorporating two rotary potentiometers inside the Joystick Module at 90 degrees of each other, placed in such a manner as to detect shifts in direction in two directions simultaneously and with a Push Button Switch in the “vertical” axis, which can detect when a User presses on the Joystick.

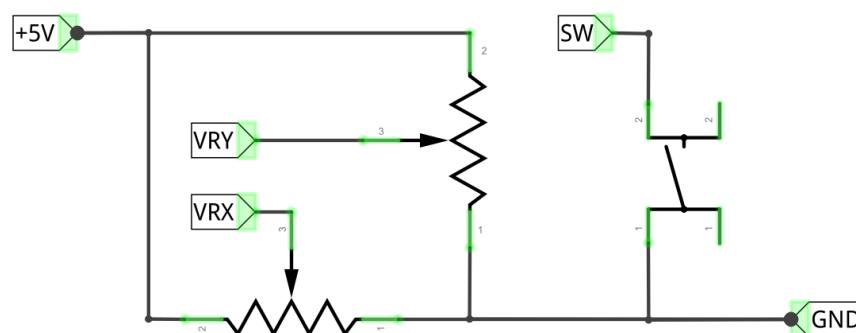


Circuit

Use pin A0 and pin A1 on control board to detect the voltage value of two rotary potentiometers inside Joystick, and use pin 8 port to detect the vertical button.

Schematic diagram

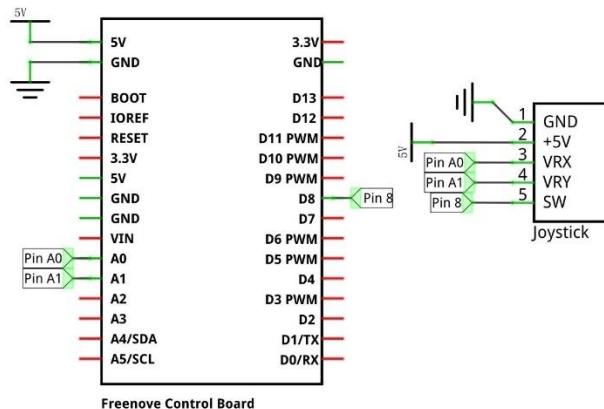

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

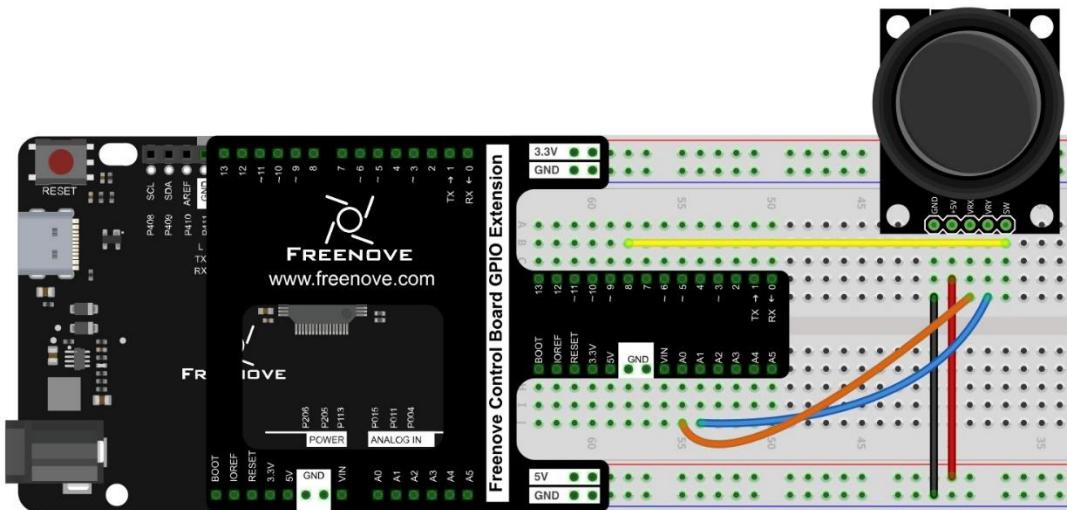

Sketch

Sketch 15.1.1

Now write the sketch to detect the voltage value of these two rotary potentiometers and the state of the button in vertical direction, then sent the data to Serial Monitor window.

```

1 int xAxisPin = 0;           // define X pin of Joystick
2 int yAxisPin = 1;           // define Y pin of Joystick
3 int zAxisPin = 8;           // define Z pin of Joystick
4 int xVal, yVal, zVal;       // define 3 variables to store the values of 3 direction
5
6 void setup() {
7     pinMode(zAxisPin, INPUT_PULLUP); // initialize the port to pull-up input

```

```

8   Serial.begin(9600);           // initialize the serial port with baud rate 9600
9 }
10
11 void loop() {
12   // read analog value in XY axis
13   xVal = analogRead(xAxisPin);
14   yVal = analogRead(yAxisPin);
15   // read digital value of switch in Z axis
16   zVal = digitalRead(zAxisPin);
17   //print the data read above
18   Serial.print("X : ");
19   Serial.print(xVal);
20   Serial.print("\t Y : ");
21   Serial.print(yVal);
22   Serial.print("\t Z : ");
23   Serial.println(zVal);
24   delay(200);
25 }
```

In the code, we get the ADC value of pin A0, A1 and the state of button, and then sent the data to serial port.

INPUT_PULLUP

Set the port to INPUT_PULLUP mode, which is equivalent to configuring the port to INPUT mode, then connect a resistor with high resistance value to VCC behind the port.

Push button of joystick is left hanging when it is not pressed (connected to no circuits with certain voltage value). The results of push button port read by control board are not fixed. So we can set this port to INPUT_PULLUP mode. Then when the push button is not pressed, the state of the port is high. But if it is pressed, the state turns into low level.

Verify and upload the code, open the Serial Monitor, and you can see the Joystick state value sent by control board. Shift and press the rocker of joystick with your finger, and you can see the change of value.



Chapter 16 LED Matrix

In the previous chapter, we have learned how to use some modules and sensors and shows some information on the computer through serial port. Now let us learn some modules which can output images and text.


In this chapter, we will learn how to use the LED matrix to output characters and images.

Project 16.1 74HC595


Firstly, let us learn how to use the 74HC595 chip, which is very helpful for us to control the LED matrix.

Component List


Control board x1

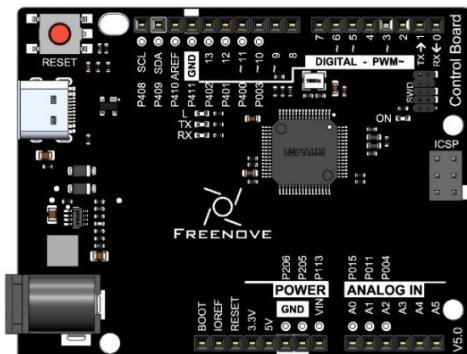


or

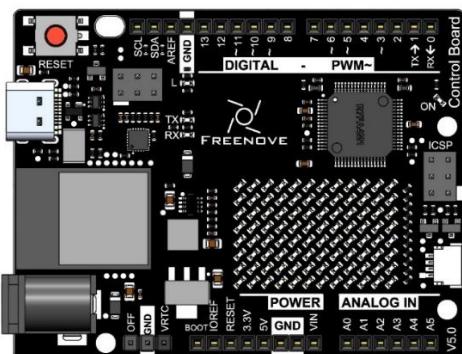


Breadboard x1

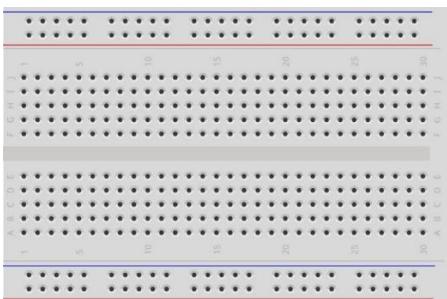

GPIO Extension Board x1

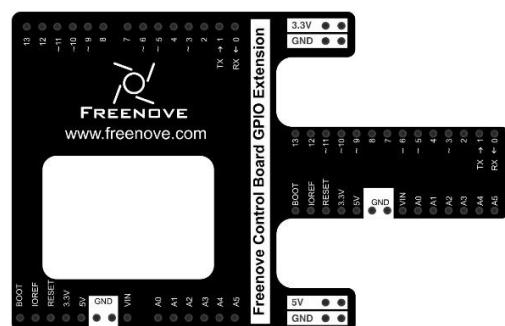

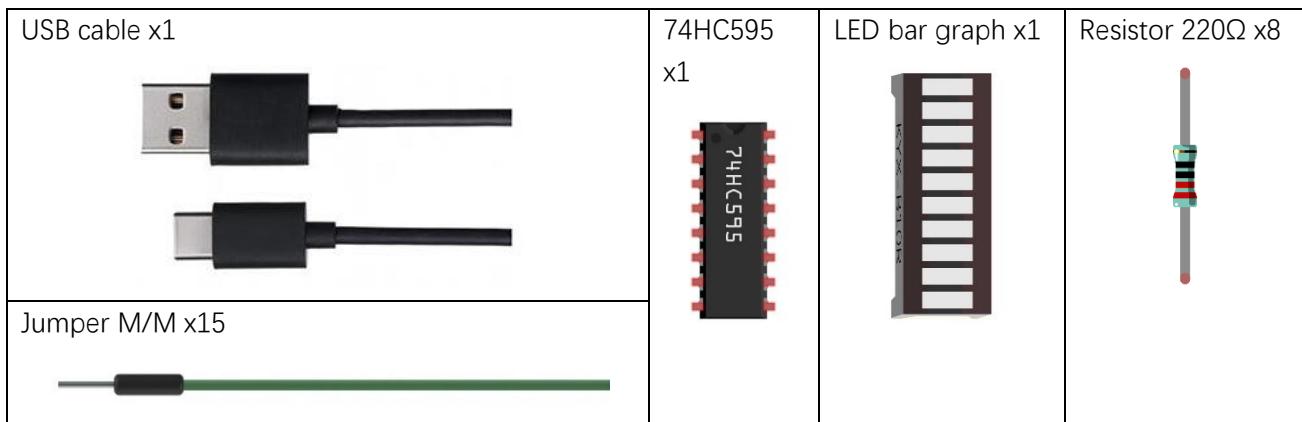

Code Knowledge

Hexadecimal

The conversion between binary and decimal system has been mentioned before. When you write the code, the number is decimal by default. Hexadecimal numbers need to add the 0x prefix in the code, such as 0x01. One Hexadecimal bit can present one number between 0-15. In order to facilitate writing, the numbers greater than 9 are written into the letter A-F (case-insensitive) such as 0x2A. The corresponding relationship is as follows:

Number	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Represent	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F

Conversion between hexadecimal and decimal system is similar to the conversion between hexadecimal and binary such as the sixteen digit 0x12:

Sequence	1	0
Number	1	2

When a hexadecimal number need to be converted to decimal number, first, the nth number of it need be multiplied by n power of 16, then sum all multiplicative results. Take 0x12 as an example:

$$1 * 16^1 + 2 * 16^0 = 18$$

When decimal number is converted to hexadecimal number, decimal number is divided by 16. Then we will get quotient and remainder, and quotient obtained will be continuously divided by 16 until quotient is zero. Arrange all remainders from right to left in a line. Then we complete the conversion. For example:

Remainder	Sequence
2	0
1	1
0	

The result is of the conversion 0x12.

When you write code, sometimes it is convenient to use hexadecimal, especially involving bit operation, because 1 hexadecimal number can be expressed by 4 binary number ($2^4=16$). The corresponding relationship between 4 bit binary numbers and 1 hexadecimal number is shown as follows:

4 bit binary	0000	0001	0010	0011	0100	0101	0110	0111
1 figure of hexadecimal	0	1	2	3	4	5	6	7


4 bit binary	1000	1001	1010	1011	1100	1101	1110	1111
1 figure of hexadecimal	8	9	A	B	C	D	E	F

For example, binary 00010010 is corresponding to hexadecimal 0x12.

Component Knowledge

74HC595

A 74HC595 chip is used to convert serial data into parallel data. A 74HC595 chip can convert the serial data of one byte into 8 bits, and send its corresponding level to each of the 8 ports correspondingly. With this characteristic, the 74HC595 chip can be used to expand the IO ports the control board. At least 3 ports on the RPI board are required to control the 8 ports of the 74HC595 chip.

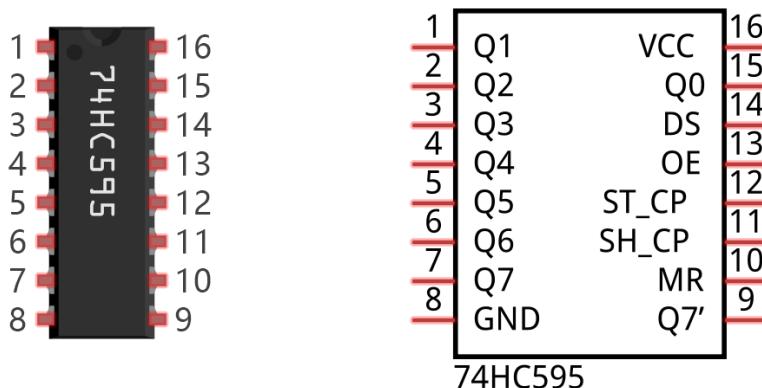

The ports of 74HC595 are described as follows:


Pin name	Pin number	Description
Q0-Q7	15, 1-7	Parallel data output
VCC	16	The positive electrode of power supply, the voltage is 2~6V
GND	8	The negative electrode of power supply
DS	14	Serial data Input
OE	13	Enable output, When this pin is in high level, Q0-Q7 is in high resistance state When this pin is in low level, Q0-Q7 is in output mode
ST_CP	12	Parallel update output: when its electrical level is rising, it will update the parallel data output.
SH_CP	11	Serial shift clock: when its electrical level is rising, serial data input register will do a shift.
MR	10	Remove shift register: When this pin is in low level, the content in shift register will be cleared .
Q7'	9	Serial data output: it can be connected to more 74HC595 in series.

For more detail, please refer to the datasheet.


Circuit

Use pin 11, 12, 13 on the control board to control the 74HC595, and connect it to the 8 LEDs of LED bar graph.

Schematic diagram

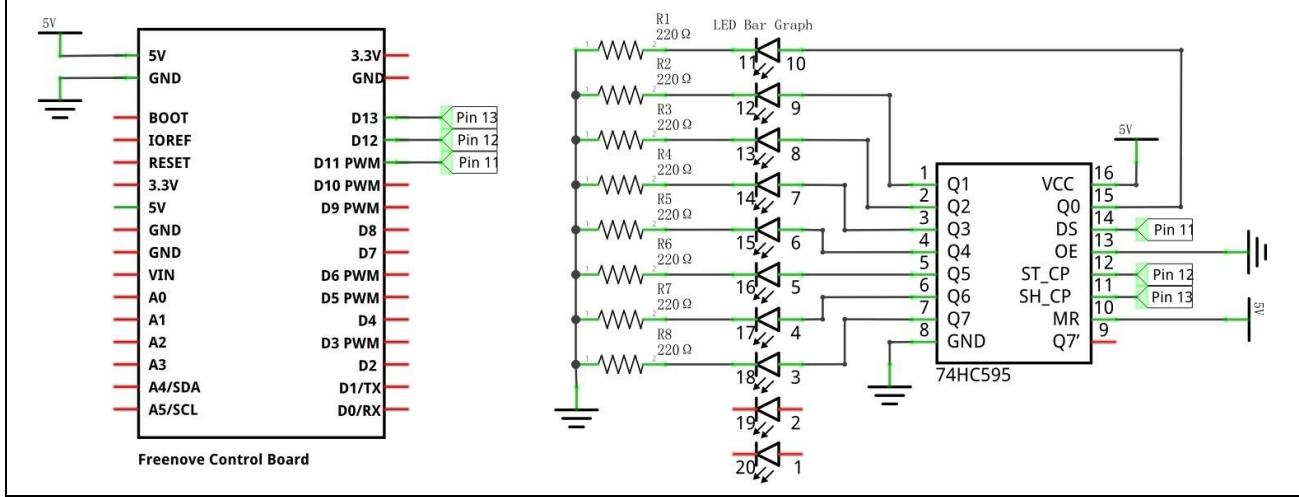

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

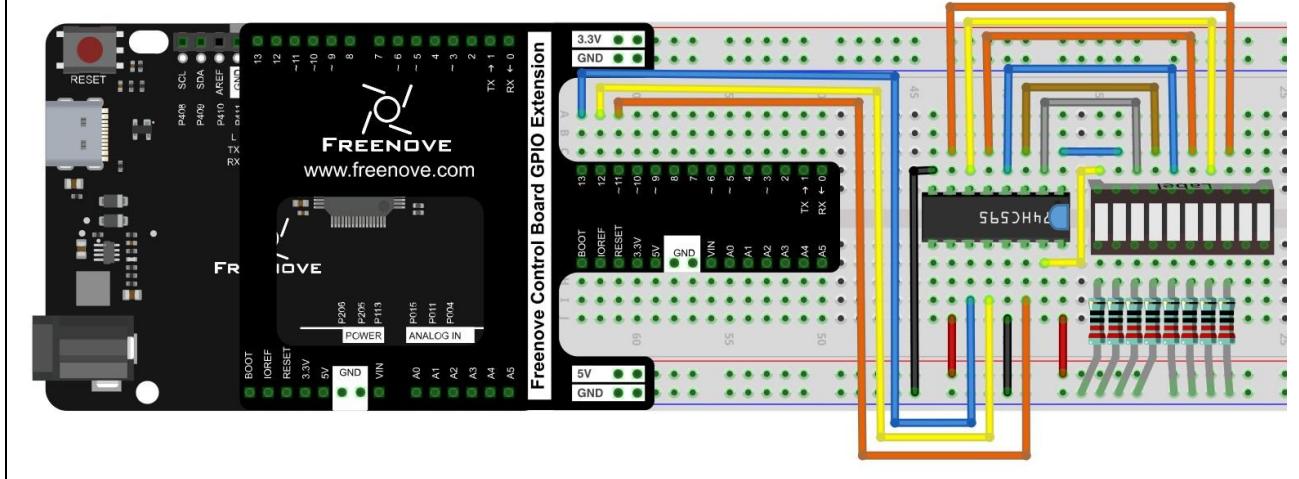

Sketch

Sketch 16.1.1

Now write code to control the 8 LEDs of LED bar graph through 74HC595.

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595 (Pin12)
2 int clockPin = 13;           // Pin connected to SH_CP of 74HC595 (Pin11)
3 int dataPin = 11;            // Pin connected to DS of 74HC595 (Pin14)
4
5 void setup() {
6     // set pins to output
7     pinMode(latchPin, OUTPUT);
8     pinMode(clockPin, OUTPUT);
9     pinMode(dataPin, OUTPUT);

```

```
10  }
11
12 void loop() {
13     // Define a one-byte variable to use the 8 bits to represent the state of 8 LEDs of LED
14     // bar graph.
15     // This variable is assigned to 0x01, that is binary 00000001, which indicates only one
16     // LED light on.
17     byte x = 0x01;
18     for (int j = 0; j < 8; j++) {
19         // Output low level to latchPin
20         digitalWrite(latchPin, LOW);
21         // Send serial data to 74HC595
22         shiftOut(dataPin, clockPin, LSBFIRST, x);
23         // Output high level to latchPin, and 74HC595 will update the data to the parallel
24         // output port.
25         digitalWrite(latchPin, HIGH);
26         // make the variable move one bit to left once, then the bright LED move one step to
27         // the left once.
28         x <<= 1;
29         delay(100);
30     }
31 }
```

In the code, we configure three pins to control the 74HC595. And define a one-byte variable to control the state of 8 LEDs through the 8 bits of the variable. The LED lights on when the corresponding bit is 1. If the variable is assigned to 0x01, that is 00000001 in binary, there will be only one LED on.

```
15 byte x = 0x01;
```

In each loop, the x is sent to 74HC595. The sending process is as follows:

```
17     // Output low level to latchPin
18     digitalWrite(latchPin, LOW);
19     // Send serial data to 74HC595
20     shiftOut(dataPin, clockPin, LSBFIRST, x);
21     // Output high level to latchPin, and 74HC595 will update the data to the parallel
22     // output port.
23     digitalWrite(latchPin, HIGH);
```


The x will be shift 1 bit to left in each cycle, which makes the bright LED of the 8 LEDs move one bit.

```
24 x <<= 1;
```

<< operator

"<<" is the left shift operator, which can make all bits of 1 byte shift by several bits to the left (high) direction and add 0 on the right (low). For example, shift binary 00000001 by 1 bit to left:

byte x = 1 << 1;




The result of x is 2 (binary 00000010).

0	0	0	0	0	0	1	0
---	---	---	---	---	---	---	---

There is another similar operator "">>>". For example, shift binary 00000001 by 1 bit to right:

byte x = 1 >> 1;



The result of x is 0 (00000000).

0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---

X <=> 1 is equivalent to x = x << 1 and x >=> 1 is equivalent to x = x >> 1

Verify and upload the code, and then you will see the LED bar graph with the effect of flowing water.




Chapter 17 Onboard LED Matrix (WiFi Board)

In this chapter, we utilize the LED matrix on the control board to display interesting patterns. The control board features a built-in 12x8 LED matrix that can be programmed to display graphics, animations, serve as an interface, and even play games.

Project 17.1 LED Matrix

In this section, we will use the LED matrix to display static graphics.


Component List

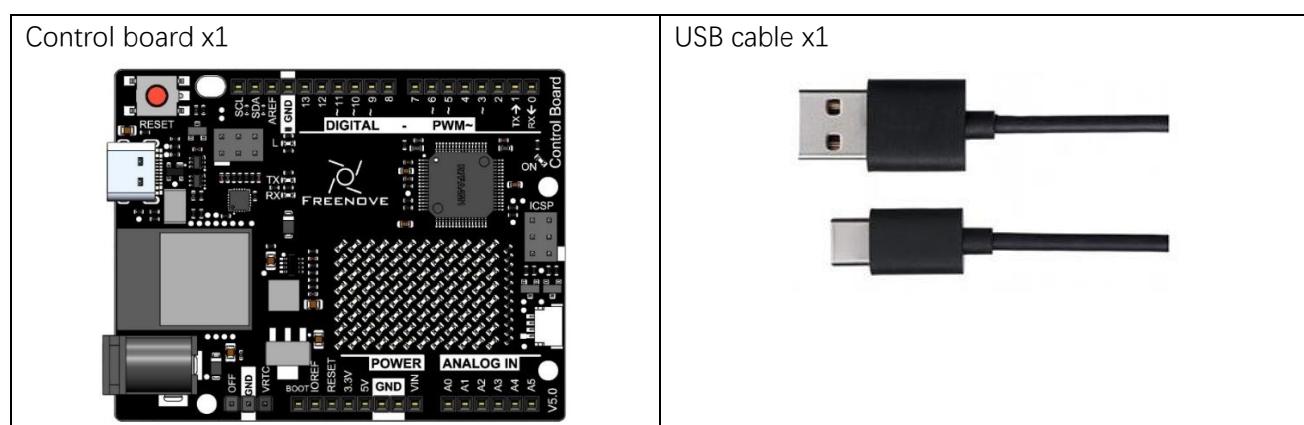

Component Knowledge


LED matrix

The LED matrix on the control board is a rectangular display module composed of a uniform grid of LEDs. Below is an 8x12 monochrome LED matrix, which includes 96 LEDs (8 rows by 12 columns).

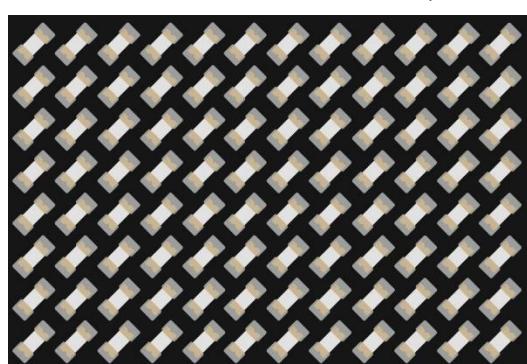

You can call the LED matrix library to display any content you wish. With the LED matrix library, you can quickly display any graphics. For example, to display a smiling face, simply assign a value of 1 to the positions of the

LEDs that need to be lit. Conversely, assigning a value of 0 will turn off the corresponding LEDs, allowing you to set up a variety of interesting patterns.

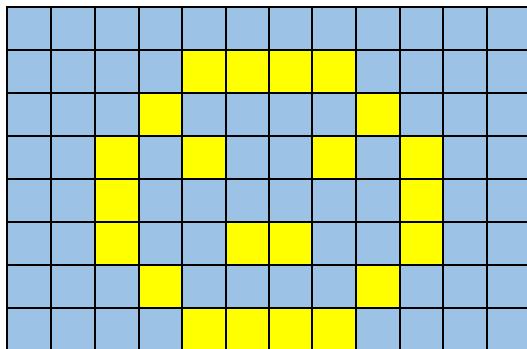

1	0	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	1	1	1	1	0	0	0	0
3	0	0	0	1	0	0	0	0	1	0	0	0
4	0	0	1	0	1	0	0	1	0	1	0	0
5	0	0	1	0	0	0	0	0	0	1	0	0
6	0	0	1	0	0	1	1	0	0	1	0	0
7	0	0	0	1	0	0	0	0	1	0	0	0
8	0	0	0	0	1	1	1	1	0	0	0	0

Line	Binary	Hexadecimal
1	0000 0000 0000	0x000
2	0000 1111 0000	0x0F0
3	0001 0000 1000	0x108
4	0010 0000 0100	0x204
5	0010 0000 0100	0x204
6	0010 0000 0100	0x204
7	0001 0000 1000	0x108
8	0000 1111 0000	0x0F0

To control the onboard 12x8 LED matrix, you will need a memory space of at least 96 bits in size, as shown below:

```
byte frame[8][12] = {
    { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
    { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 },
    { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
    { 0, 0, 1, 0, 1, 0, 0, 1, 0, 1, 0, 0 },
    { 0, 0, 1, 0, 0, 0, 0, 0, 1, 0, 0, 0 },
    { 0, 0, 1, 0, 0, 1, 1, 0, 0, 1, 0, 0 },
    { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
    { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 }
};
```

Call the display function and you can see the LED display the above contents.

Sketch

Sketch 17.1.1

Upload the sketch to the control board and you should see the entire matrix lights up, turn off after a second, and then display the static expression resembling a smiley face.

The following is the program code:

```
1 #include "Arduino_LED_Matrix.h" // Include the LED_Matrix library
2
3 ArduinoLEDMatrix matrix; // Create an instance of the ArduinoLEDMatrix class
4
5 byte frame[8][12] = {
6     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
7     { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 },
8     { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
9     { 0, 0, 1, 0, 1, 0, 0, 0, 1, 0, 0, 0 },
10    { 0, 0, 1, 0, 0, 0, 0, 0, 0, 1, 0, 0 },
11    { 0, 0, 1, 0, 0, 1, 1, 0, 0, 1, 0, 0 },
12    { 0, 0, 0, 1, 0, 0, 0, 0, 1, 0, 0, 0 },
13    { 0, 0, 0, 0, 1, 1, 1, 1, 0, 0, 0, 0 }
14 };
151
16 const uint32_t fullOn[] = {
17     0xffffffff,
18     0xffffffff,
19     0xffffffff
20 };
21 const uint32_t fullOff[] = {
22     0x00000000,
23     0x00000000,
24     0x00000000
25 };
26
27 void setup() {
28     matrix.begin(); // Initialize the LED matrix
29     matrix.loadFrame(fullOn);
30     delay(250);
31     matrix.loadFrame(fullOff);
32     delay(250);
33 }
34
35 void loop() {
```

```

36   matrix.renderBitmap(frame, 8, 12);
37   delay(250);
38 }
```

First, include the library “Arduino_LED_Matrix.h” at the beginning of the sketch, as shown below.

```
1 #include "Arduino_LED_Matrix.h" // Include the LED_Matrix library
```

Create an object for the LED matrix in the sketch.

```
3 ArduinoLEDMatrix matrix; // Create an instance of the ArduinoLEDMatrix class
```

Activate the LED matrix by adding the line “matrix.begin();” under void setup() as shown below.

```
28 matrix.begin(); // Initialize the LED matrix
```

After the program initializes, it first lights up the entire LED matrix and then turns off the LED matrix, and subsequently continuously displays the smiling face graphic.

```

28 matrix.begin(); // Initialize the LED matrix
29 matrix.loadFrame(fullOn);
30 delay(250);
31 matrix.loadFrame(fullOff);
32 delay(250);
...
36 matrix.renderBitmap(frame, 8, 12);
37 delay(250);
```

Arduino has also created an online tool called LED Matrix Editor to simplify frame creation. Each frame can be edited graphically and the duration specified. Once this process is complete, simply name the file and download it for use in your project.

To customize more graphics, you can design via this link: [LED matrix editor \(Arduino cc\)](#)

Project 17.2 LED Matrix


In this segment, we'll harness the onboard LED matrix to showcase dynamic visuals by scrolling the message “**Hello World!**” across the matrix.

Component List

Control board x1

USB cable x1



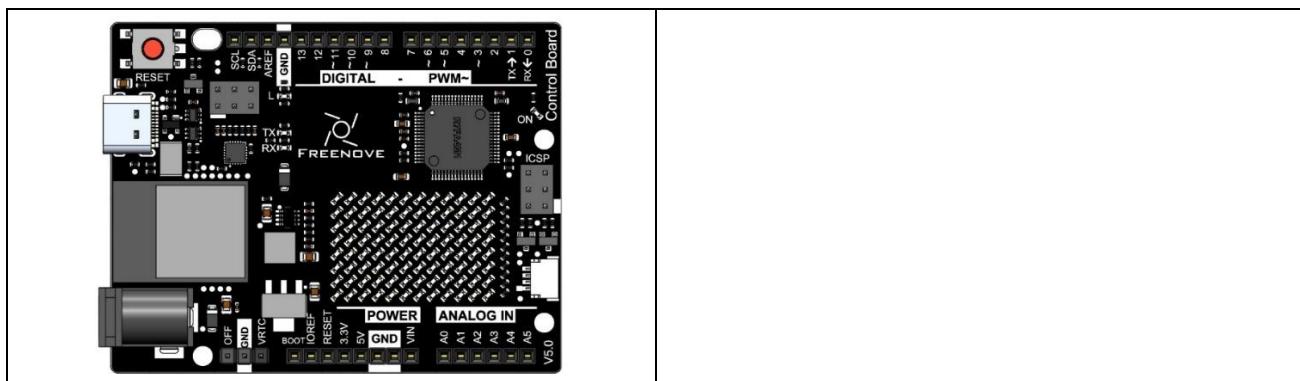

Sketch

Sketch 17.2.1

When you upload the sketch to the control board, you will observe the onboard LED matrix displaying dynamic scenes. The text "**Hello World!**" will be presented in a scrolling manner.

The following is the program code:

```
1 #include "ArduinoGraphics.h"
2 #include "Arduino_LED_Matrix.h"
3
4 ArduinoLEDMatrix matrix;
5
6 void setup() {
7     Serial.begin(115200);
8     matrix.begin();
9 }
10
11 void loop() {
12
13     // Make it scroll!
14     matrix.beginDraw();
15
16     matrix.stroke(0xFFFFFFFF);
17     matrix.textScrollSpeed(50);
18
19     // add the text
20     const char text[] = "Hello World!";
21     matrix.setFont(Font_5x7);
22     matrix.beginText(0, 1, 0xFFFFFFFF);
23     matrix.println(text);
24     matrix.endText(SCROLL_LEFT);
```

```
25  
26     matrix.endDraw();  
27 }
```

First, include the library “Arduino_LED_Matrix.h” at the beginning of the sketch, as shown below.

```
1 #include "ArduinoGraphics.h"  
2 #include "Arduino_LED_Matrix.h"
```

Create an object for the LED matrix in the sketch.

```
4 ArduinoLEDMatrix matrix; // Create an instance of the ArduinoLEDMatrix class
```

Activate the LED matrix by adding the line “matrix.begin();” under void setup() as shown below.

```
8     matrix.begin(); // Initialize the LED matrix
```

In the main function, print “Hello World!” on the LED matrix.

```
13 // Make it scroll!  
14 matrix.beginDraw();  
15  
16 matrix.stroke(0xFFFFFFFF);  
17 matrix.textScrollSpeed(50);  
18  
19 // add the text  
20 const char text[] = " Hello World! ";  
21 matrix.setFont(Font_5x7);  
22 matrix.beginText(0, 1, 0xFFFFFFFF);  
23 matrix.println(text);  
24 matrix.endText(SCROLL_LEFT);  
25  
26 matrix.endDraw();
```

For more examples please refer to:

[Using the Arduino UNO R4 WiFi LED Matrix | Arduino Documentation](#)

Project 17.3 Play the game with LED matrix



In this section, we play the game using the LED matrix.

Project 17.3.1 LED Matrix Bounce Game

Play a bounce game with an LED matrix.


Component List

Control board x1

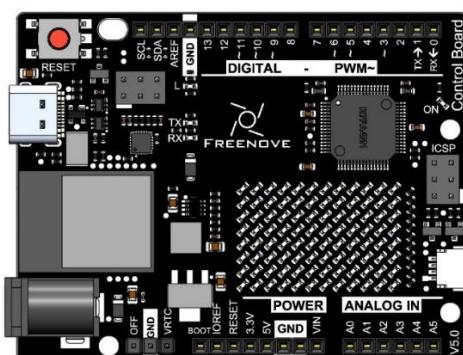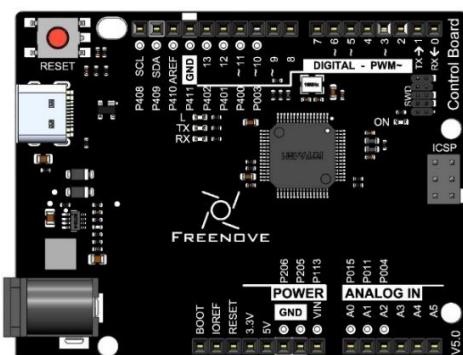


or

Breadboard x1

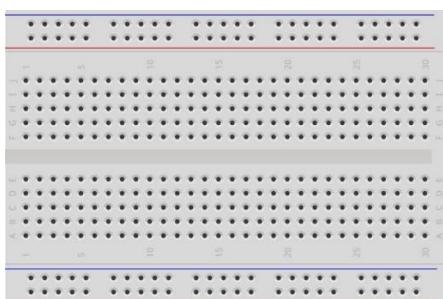


GPIO Extension Board x1

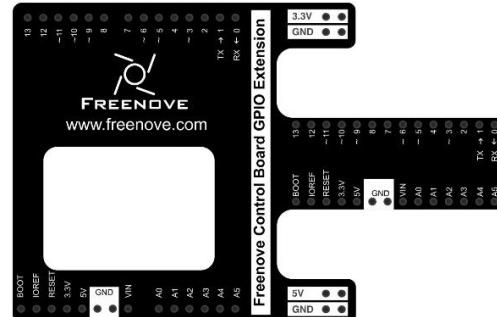

USB cable x1



Rotary potentiometer x1

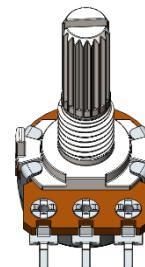


Jumper M/M x3




Circuit

The voltage of the rotary potentiometer is detected with the A0 pin on the control board to control the movement of the bat.

Schematic diagram

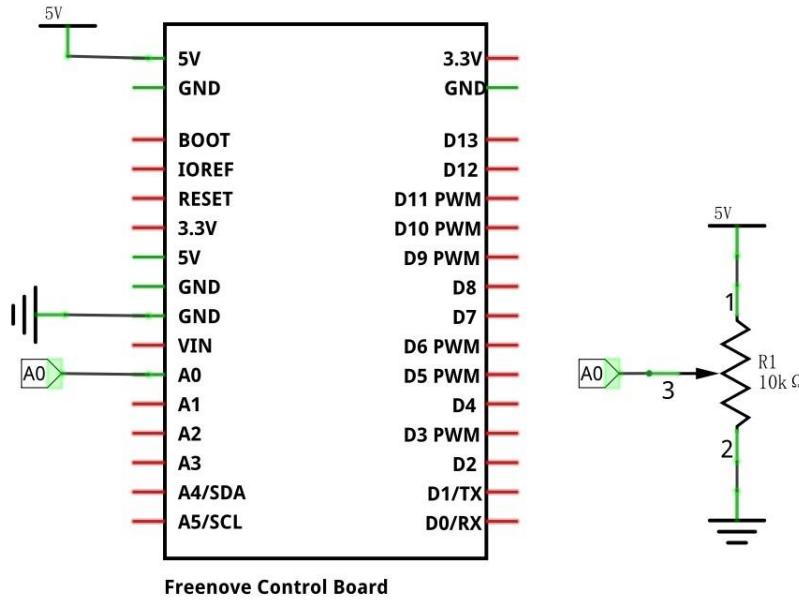

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

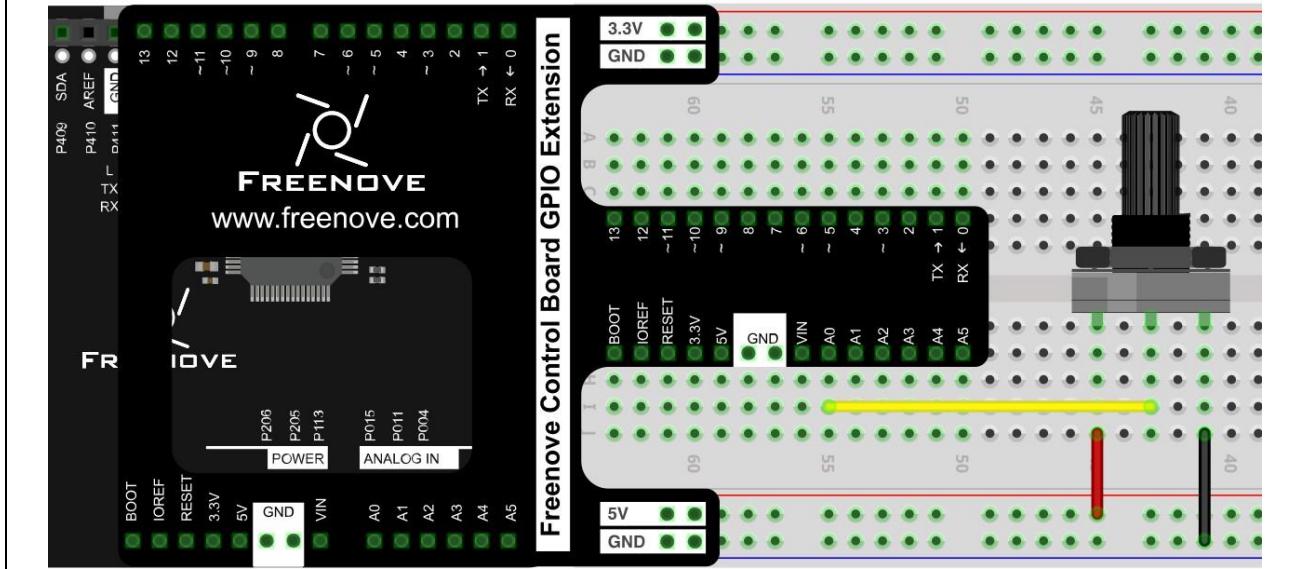

Sketch

Sketch 17.3.1

This is a simple ball bounce game, using a potentiometer to control the movement of the bat, when your bat fails to catch the ball, the game will end and the led matrix will show "OUT", and then start the game again.

The following is the program code:

```
1 #include "Arduino_LED_Matrix.h"
2
3 ArduinoLEDMatrix matrix;
4
5 void setup() {
6     Serial.begin(115200);
7     matrix.begin();
8 }
9
10 uint8_t frame[8][12] = {
11     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
12     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
13     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
14     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
15     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
16     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
17     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
18     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 }
19 };
20
21 uint8_t game_over[8][12] = {
22     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
23     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
24     { 0, 1, 0, 0, 1, 0, 0, 1, 0, 1, 1, 1 },
25     { 1, 0, 1, 0, 1, 0, 0, 1, 0, 0, 1, 0 },
26     { 1, 0, 1, 0, 1, 0, 0, 1, 0, 0, 1, 0 },
27     { 0, 1, 0, 0, 1, 1, 0, 0, 0, 1, 0 },
28     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
29     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 }
30 };
31
32 int y = 4;           // starting y position
33 int x = 4;           // starting x position
34 int b = 1;           // starting y direction
35 int a = 1;           // starting x direction
```

```
36 int anticipate = 5; // variable used to anticipate whether ball hits bat
37 int speed = 300; // initial delay which decreases each time ball hit
38
39
40 void loop() {
41     int batcenter = (analogRead(A0) / 204);
42     frame[batcenter][11] = 1;
43     frame[batcenter + 1][11] = 1;
44     frame[batcenter + 2][11] = 1;
45     frame[y][x] = 1;
46     matrix.renderBitmap(frame, 8, 12);
47     delay(speed);
48     frame[batcenter][11] = 0;
49     frame[batcenter + 1][11] = 0;
50     frame[batcenter + 2][11] = 0;
51     frame[y][x] = 0;
52     matrix.renderBitmap(frame, 8, 12);
53     delay(1);
54
55     if (y == 7) {
56         b = -b;
57     }
58     if (y == 0) {
59         b = -b;
60     }
61     if (x == 10) { // when ball reaches line in front of batcenter, checks if batcenter hit
62         anticipate = (y + b);
63         speed = (speed - 20); // reduces delay each time batcenter hit
64         if ((anticipate == batcenter) or (anticipate == (batcenter + 1)) or (anticipate == (batcenter + 2))) {
65             a = -a;
66         } else { // game over grid
67             matrix.renderBitmap(game_over, 8, 12);
68             delay(2000);
69             x = 4;
70             y = 4;
71             a = -1;
72             b = -1;
73             speed = 300;
74         }
75     }
76 }
77 if (x == 0) {
78     a = -a;
79 }
```



```
80     y = (y + b); // adjusts ball position  
81     x = (x + a);  
82 }  
83
```

Project 17.3.2 LED Matrix Snake Game

Play a snake game with an LED matrix.


Component List

Control board x1

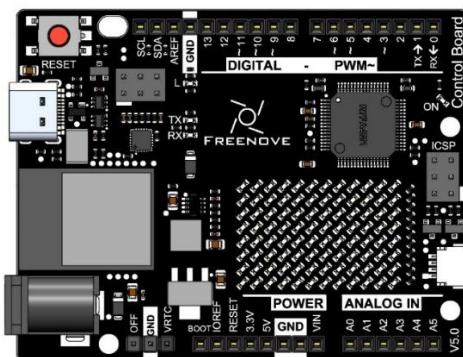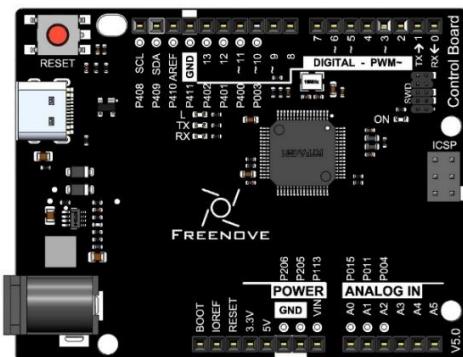


or

Breadboard x1

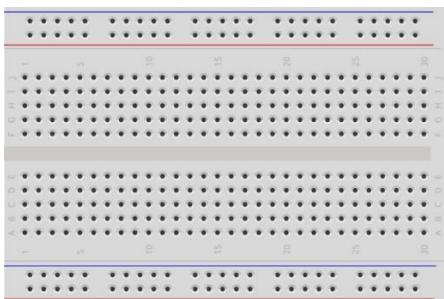

GPIO Extension Board x1

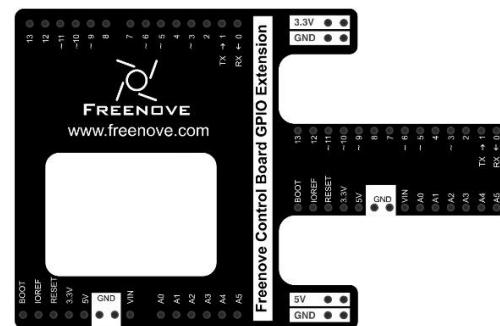

USB cable x1



Joystick x1




Jumper F/M x5




Circuit

Use pin A0 and pin A1 on control board to detect the voltage value of two rotary potentiometers inside Joystick.

Schematic diagram

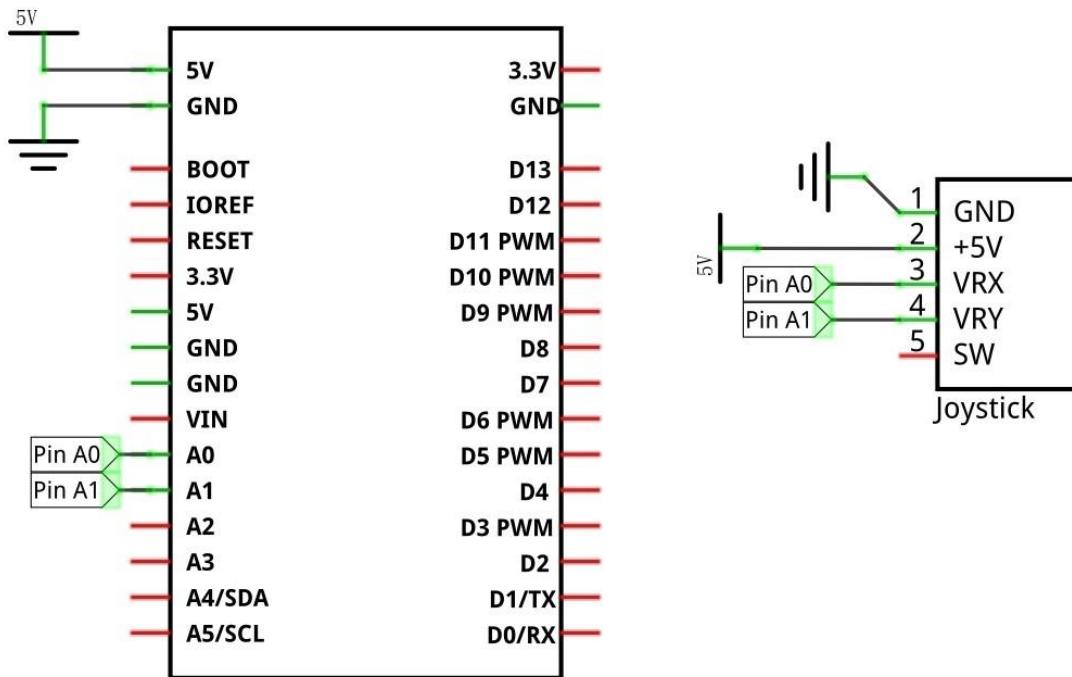

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

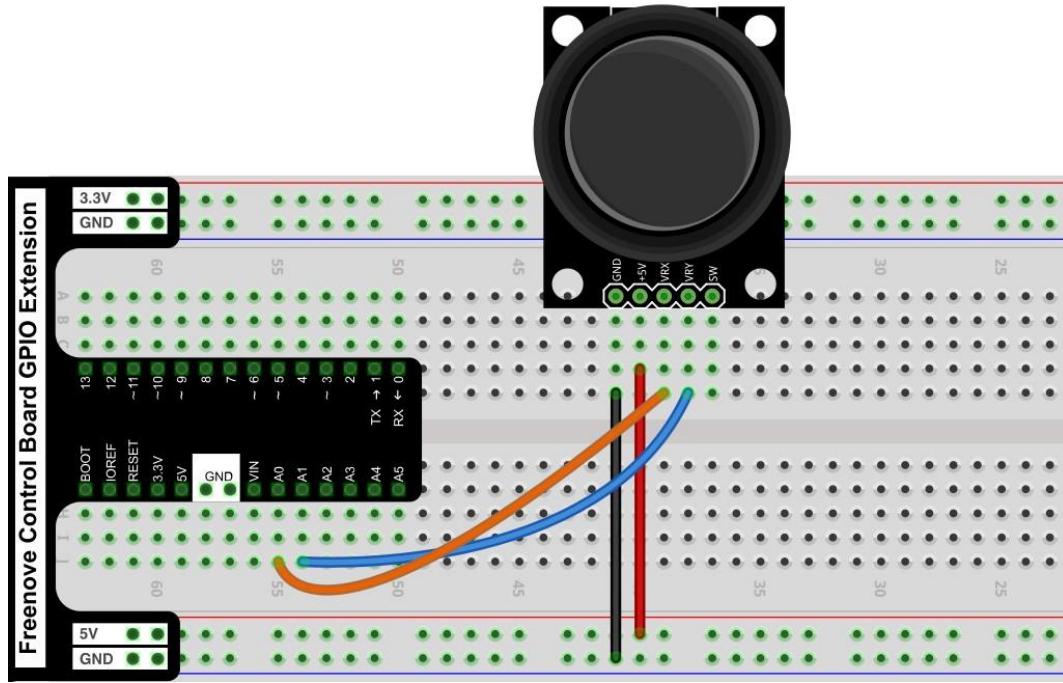

Sketch

Sketch 17.3.1

This is a simple snake game, using a Joystick to control the direction of movement of the snake head, when the snake head contacts the body of the snake, the game will end, the led matrix will show "OUT", and then start the game again.

The following is the program code:

```
1 #include "Arduino_LED_Matrix.h"
2
3 ArduinoLEDMatrix matrix;
4
5 void setup() {
6     matrix.begin();
7 }
8
9 #define LEFT 0
10 #define RIGHT 1
11 #define UP 2
12 #define DOWN 3
13
14 // Global variables
15 byte frame[8][12];
16 byte dir = RIGHT;
17 byte snake_len = 2;
18 byte col_idx[96];
19 byte row_idx[96];
20 byte food_col = random(2, 12);
21 byte food_row = random(1, 8);
22 byte speed = 500;
23 byte food_hit = 1;
24 byte blank_frame[8][12];
25
26 uint8_t gameover[8][12] = {
27     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
28     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
29     { 0, 1, 0, 0, 1, 0, 0, 1, 0, 1, 1, 1 },
30     { 1, 0, 1, 0, 1, 0, 0, 1, 0, 0, 1, 0 },
31     { 1, 0, 1, 0, 1, 0, 0, 1, 0, 0, 1, 0 },
32     { 0, 1, 0, 0, 1, 1, 0, 0, 0, 1, 0 },
33     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 },
34     { 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 }
35 };
```

```
36
37 int get_dir() {
38     // Get values from ADC (joy stick)
39     int x = analogRead(A0);
40     int y = analogRead(A1);
41
42     if((x >= 0) && (x <= 300) && dir != RIGHT) {
43         return LEFT;
44     }
45     else if( (x >= 723) && (x <= 1023) && dir != LEFT) {
46         return RIGHT;
47     }
48     else if((y >= 0) && (y <= 300) && dir != DOWN) {
49         return UP;
50     }
51     else if((y >= 723) && (y <= 1023) && dir != UP) {
52         return DOWN;
53     }
54     else return dir;
55 }
56
57 void display_frame() {
58     // Clear the frame first - Turn off all LEDs
59     for(int i=0; i<8; i++) {
60         for(int j=0; j<12; j++) {
61             frame[i][j] = 0;
62         }
63     }
64
65     // Turn on LEDs for snake
66     for(int i=0; i<snake_len; i++) {
67         // Turn on LED for Body
68         frame[row_idx[i]][col_idx[i]] = 1;
69     }
70
71     // Turn on LEDs for food
72     frame[food_row][food_col] = 1;
73
74     // Display frame value in the LED matrix
75     matrix.renderBitmap(frame, 8, 12);
76 }
77
78 void game_over() {
79     // Pause Snake movement and blink for 5 times
```

```
80  for(int i=0; i<5; i++) {
81      // Display current frame (paused movement)
82      matrix.renderBitmap(frame, 8, 12);
83      delay(100);
84      // Display blank frame (to make LEDs blink)
85      matrix.renderBitmap(blank_frame, 8, 12);
86      delay(100);
87      matrix.renderBitmap(gameover, 8, 12);
88      delay(2000);
89  }
90  // Reset the length of snake
91  snake_len = 2;
92 }
93
94 void chk_snake_body_hit() {
95     for(int i=1; i<snake_len; i++) {
96         // Check if head hit the body
97         if((row_idx[i] == row_idx[0]) && (col_idx[i] == col_idx[0])){
98             game_over();
99         }
100    }
101 }
102
103 void chk_food_hit() {
104     // Logic to detect food is hit
105     if(col_idx[0] == food_col && row_idx[0] == food_row) {
106         // Increment snake length if food is hit
107         snake_len = snake_len + 1;
108         // Set food_hit to 1 to enable generation of new food coordinates
109         food_hit = 1;
110     }
111 }
112
113 void get_snake_position() {
114     // Logic to Calculate the next frame
115     // body
116     for(int i=snake_len-1; i>0; i--) {
117         col_idx[i] = col_idx[i-1];
118         row_idx[i] = row_idx[i-1];
119     }
120     // head
121     if (dir == RIGHT) {
122         // Wrap around to left
123         if(col_idx[0] == 11) {
```

```
124     col_idx[0] = 0;
125 }
126 else {
127     col_idx[0] = col_idx[0] + 1;
128 }
129 }
130 if(dir == LEFT) {
131     // Wrap around to right
132     if(col_idx[0] == 0){
133         col_idx[0] = 11;
134     }
135     else{
136         col_idx[0] = col_idx[0] - 1;
137     }
138 }
139 if (dir == DOWN) {
140     // Wrap around to top
141     if(row_idx[0] == 7){
142         row_idx[0] = 0;
143     }
144     else{
145         row_idx[0] = row_idx[0] + 1;
146     }
147 }
148 if(dir == UP) {
149     // Wrap around to bottom
150     if(row_idx[0] == 0){
151         row_idx[0] = 7;
152     }
153     else{
154         row_idx[0] = row_idx[0] - 1;
155     }
156 }
157 }

158 void gen_food() {
159     // Generate coordinates for food
160     if(food_hit == 1){
161         food_col = random(0, 12);
162         food_row = random(0, 8);
163         // Set food_hit to 0 so it will not randomize food coordinates unless hit
164         food_hit = 0;
165     }
166 }
```

```
168
169 void loop() {
170     // Get the snake direction
171     dir = get_dir();
172     // Display food and snake in the LED Matrix
173     display_frame();
174     // Check if snake body is hit by its head
175     chk_snake_body_hit();
176     // Check if the food is hit
177     chk_food_hit();
178     // Get the snake positions for the next frame
179     get_snake_position();
180     // Generate random coordinates for food
181     gen_food();
182     // Speed of the animation/snake movement
183     delay(speed);
184 }
```

This experiment comes from the Internet. If you want to know more about the experiment, you can visit the following link:

<https://www.eeplayground.com/posts/snake-game-arduino/>


In addition, you can also refer to the following link. This experiment is a more multifunctional snake game experiment, adding scoring and other functions.

<https://github.com/siphyshu/snake-R4>

Chapter 18 I2C LCD1602

In the previous chapter, we have used the LED matrix to display images and characters. Now, let us use a screen module LCD1602 with a higher resolution to display more content.

There are multiple versions of LCD1602. Your purchase may be one of the following:

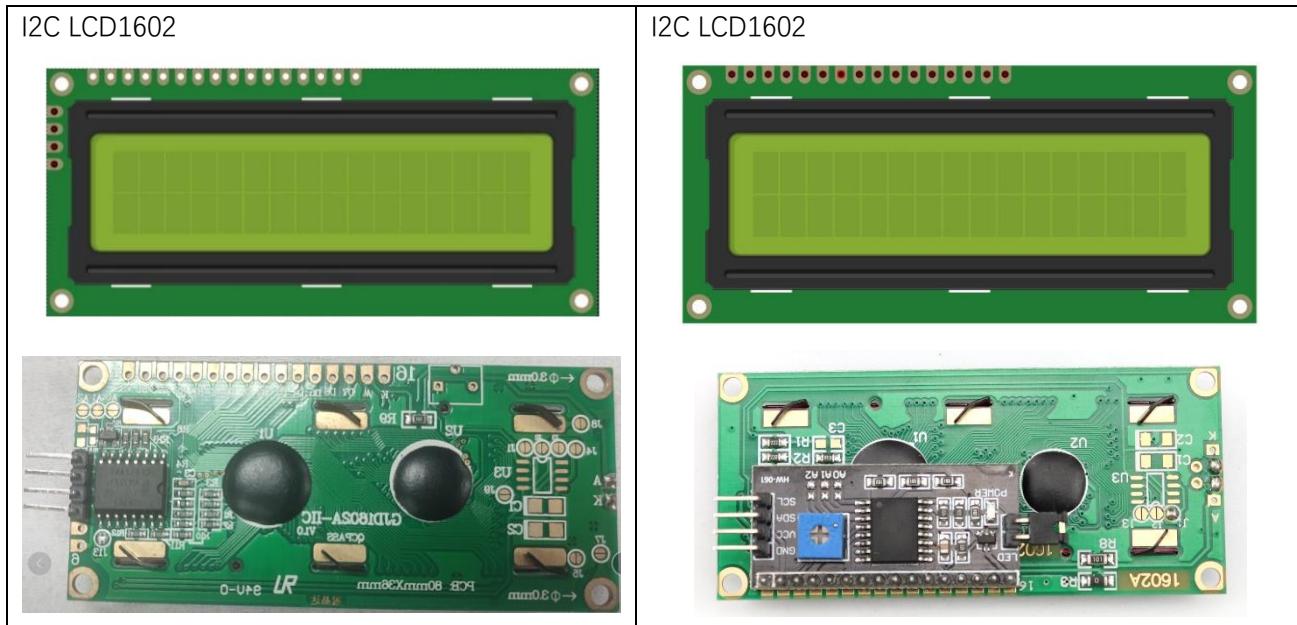


There is a conversion module on the back of the I2C LCD1602 module. Convert parallel interface to I2C serial interface. Although they have different interfaces, their functions are the same.

Project 18.1 Display the String on I2C LCD1602


In this chapter, we will learn about the LCD1602 Display Screen. Firstly, use I2C LCD1602 to display some strings.

Component List


Control board x1

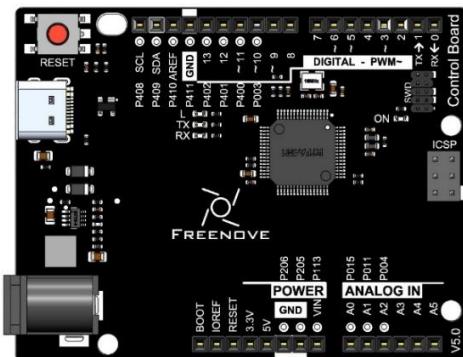


or

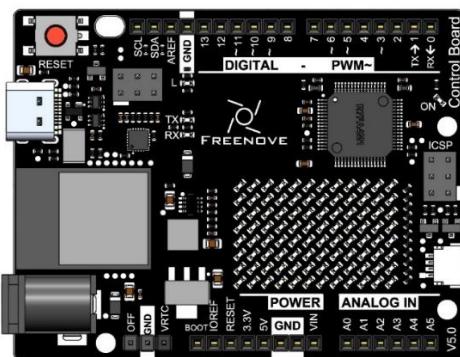

Breadboard x1

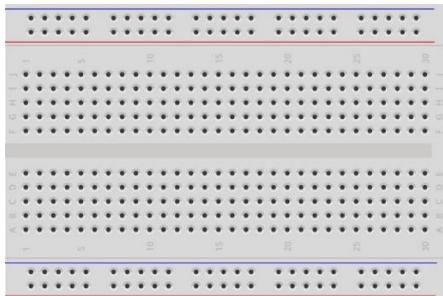


GPIO Extension Board x1

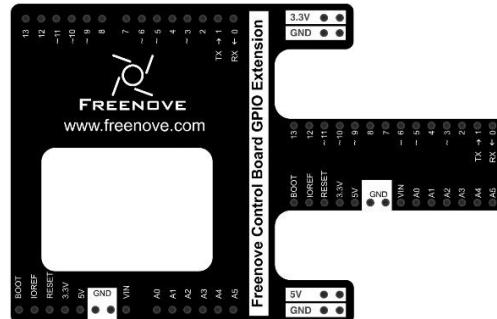

USB cable x1



I2C LCD1602 Module x1

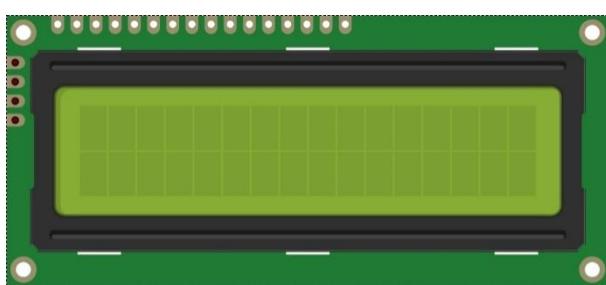

Jumper M/F x4




Component Knowledge

I2C LCD1602

LCD1602 can display 2 lines of characters in 16 columns. It can display numbers, letters, symbols, ASCII code and so on.

I2C LCD1602 Display Screen integrates a I2C interface, which connects the serial-input & parallel-output module to the LCD1602 Display Screen. This allows us to only use 4 lines to the operate the LCD1602.

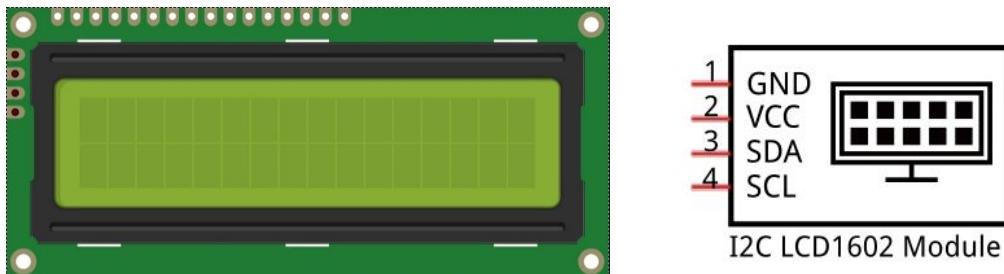


I2C (Inter-Integrated Circuit) is a two-wire serial communication, which is used to connect micro controller with its peripheral equipments. Device that use I2C communication are all connected to the serial data (SDA) line and a serial clock (SCL) line (called I2C bus). Each device among them has a unique address and can be a transmitter or receiver. Additionally, they can communicate with devices connected to the Bus.

Next, let's try to use the LCD1602 I2C module to display characters.


Circuit

The connection of control board and I2C LCD1602 is shown below.

Schematic diagram

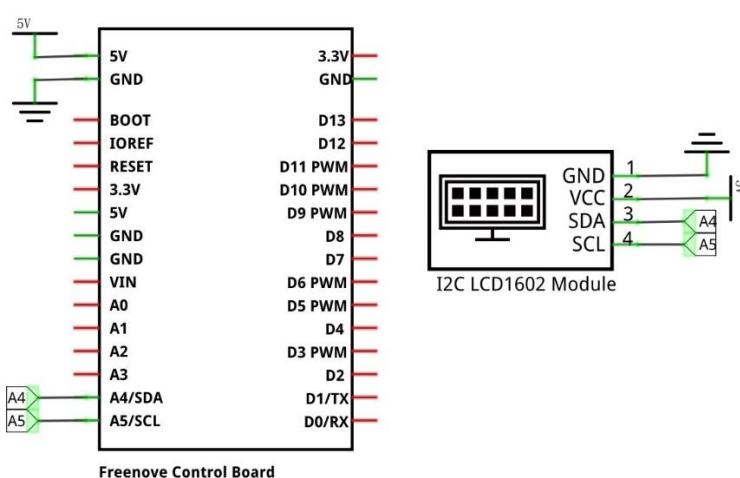

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

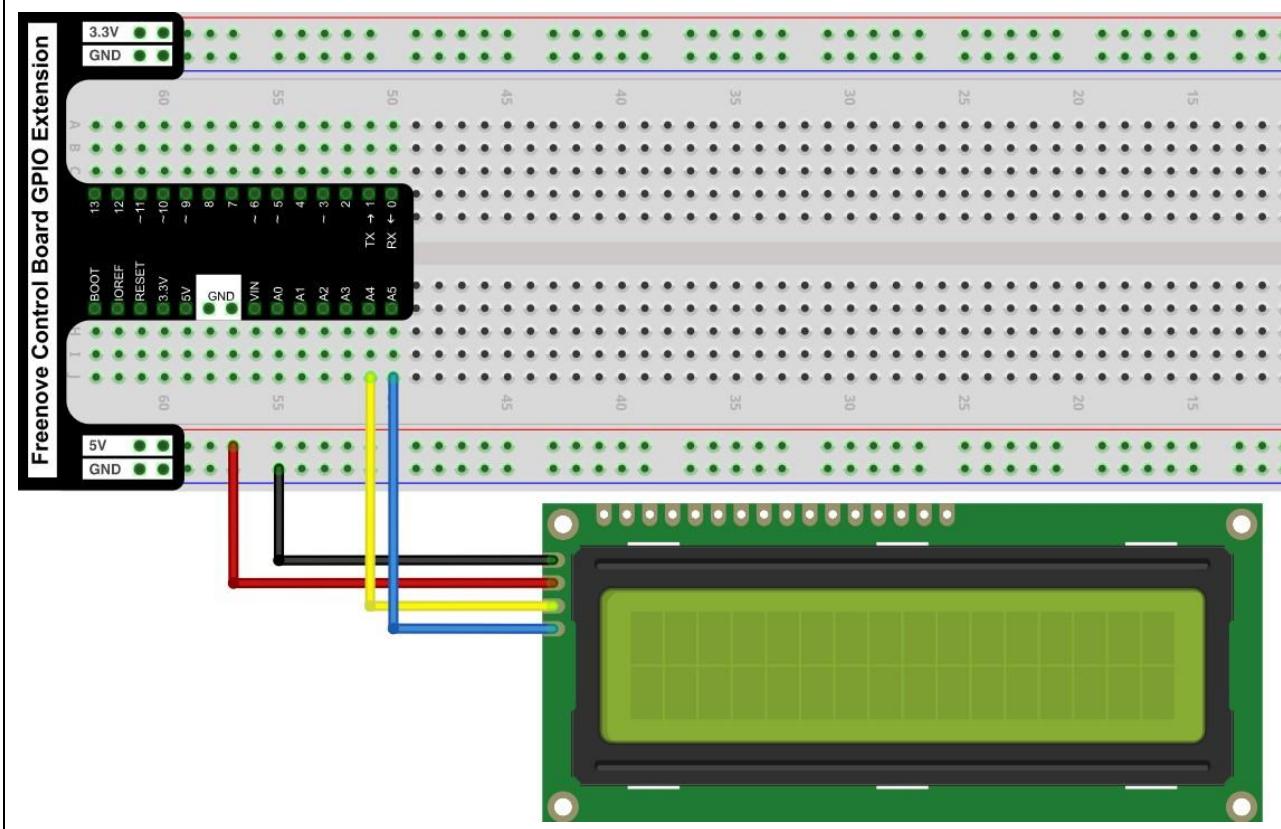

Sketch

Sketch 18.1.1


This code uses a library named "LiquidCrystal_I2C", if you have not installed it, please do so first.

Library is an important feature of the open source world, and we know that Arduino is an open source platform that everyone can contribute to.

How to install the library

There are two ways to add libraries.

you can search "LiquidCrystal_I2C" in library manager to install.

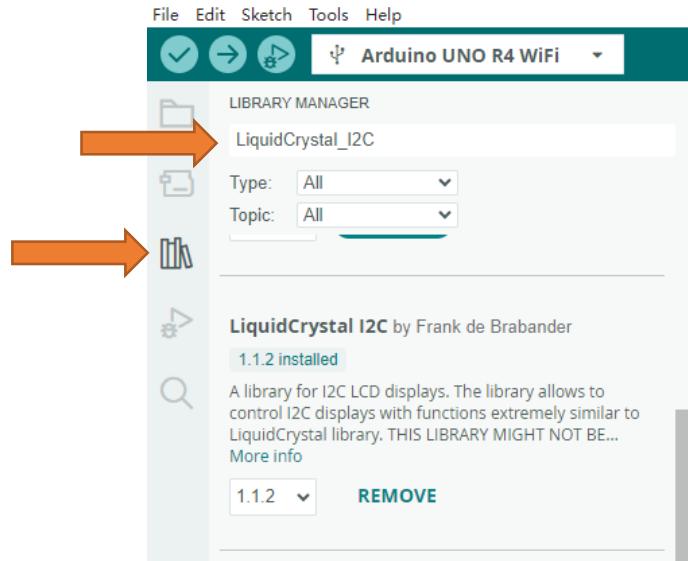

The second way, Click “Add .ZIP Library...” and then find LiquidCrystal_I2C.zip in libraries folder (this folder is in the folder unzipped form the ZIP file we provided). This library can facilitate our operation of I2C LCD1602. Now let's start to write code to use LCD1602 to display static characters and dynamic variables.

```

1 #include <LiquidCrystal_I2C.h>
2
3 // initialize the library with the numbers of the interface pins
4 LiquidCrystal_I2C lcd(0x27, 16, 2);
5
6 void setup() {
7     if (!i2CAddrTest(0x27)) {
8         lcd = LiquidCrystal_I2C(0x3F, 16, 2);
9     }
10    lcd.init();           // initialize the lcd
11    lcd.backlight();      // Turn on backlight
12    lcd.print("hello, world!"); // Print a message to the LCD
13 }
14 void loop() {
15     // (note: line 1 is the second row, since counting begins with 0):
16     lcd.setCursor(0, 1); // set the cursor to column 0, line 1
17     // print the number of seconds since reset:
18     lcd.print("Counter:");
19     lcd.print(millis() / 1000);
20 }
21 bool i2CAddrTest(uint8_t addr) {
22     Wire.begin();
23     Wire.beginTransmission(addr);
24     if (Wire.endTransmission() == 0) {
25         return true;
26     }
27     return false;

```

```
28 }
```

Following are the LiquidCrystal_I2C library used for controlling LCD:

```
1 #include <LiquidCrystal_I2C.h>
```

LiquidCrystal_I2C library provides LiquidCrystal_I2C class that controls LCD1602. When we instantiate a LiquidCrystal_I2C object, we can input some parameters. And these parameters are the row/column numbers of the I2C addresses and screen that connect to LCD1602:

```
4 LiquidCrystal_I2C lcd(0x27, 16, 2); // set the LCD address to 0x27 for a 16 chars and 2 line display
```

First, initialize the LCD and turn on LCD backlight.

```
10 lcd.init(); // initialize the lcd  
11 lcd.backlight(); // Turn on backlight
```

And then print a string:

```
12 lcd.print("hello, world!"); // Print a message to the LCD
```

Print a changing number in the loop () function:

```
14 void loop() {  
15     // (note: line 1 is the second row, since counting begins with 0):  
16     lcd.setCursor(0, 1); // set the cursor to column 0, line 1  
17     // print the number of seconds since reset:  
18     lcd.print("Counter:");  
19     lcd.print(millis() / 1000);  
20 }
```

Before printing characters, we need to set the coordinate of the printed character, that is, in which line and which column:

```
16     lcd.setCursor(0, 1); // set the cursor to column 0, line 1  
LiquidCrystal_I2C Class
```

LiquidCrystal_I2C class can control common LCD screen. First, we need instantiate an object of LiquidCrystal_I2C type, for example:

LiquidCrystal_I2C lcd(0x27, 16, 2);

When an object is instantiated, a constructed function of the class is called a constructor. In the constructor function, we need to fill in the I2C address of the LCD module, as well as the number of columns and rows of the LCD module. The number of columns and rows can also be set in the lcd.begin () .

The functions used in the LiquidCrystal_I2C class are as follows:

lcd.setCursor (col, row): set the coordinates of the to-be-printed character. The parameters are the numbers of columns and rows of the characters (start from 0, the number 0 represents first row or first line).

lcd.print (data): print characters. Characters will be printed on the coordinates set before. If you do not set the coordinates, the string will be printed behind the last printed character.

Verify and upload the code, then observe the LCD screen. If the display is not clear or there is no display, adjust the potentiometer on the back of I2C module to adjust the screen contrast until the character is clearly displayed on the LCD.




You can use the I2C LCD1602 to replace the serial port as a mobile screen when you print the data latter.

Project 18.2 I2C LCD1602 Clock


In the previous chapter, we have used I2C LCD1602 to display some strings, and now let us use I2C LCD1602 to display the temperature sensor value.

Component List


Control board x1

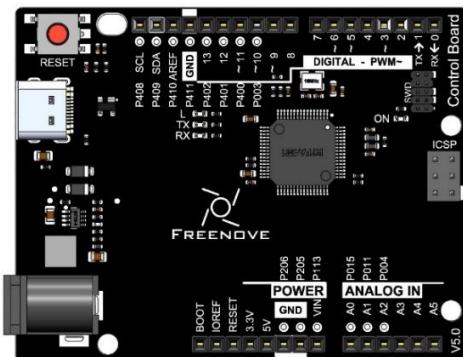


or

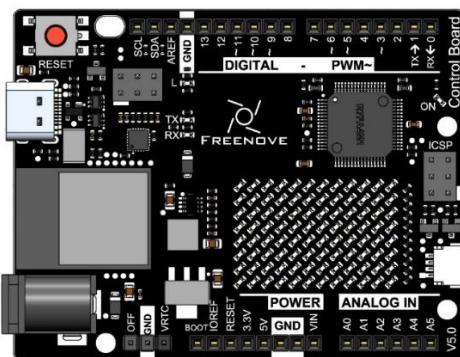

Breadboard x1

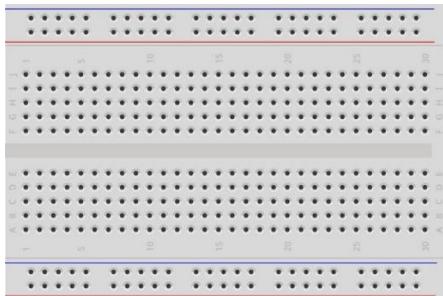

GPIO Extension Board x1

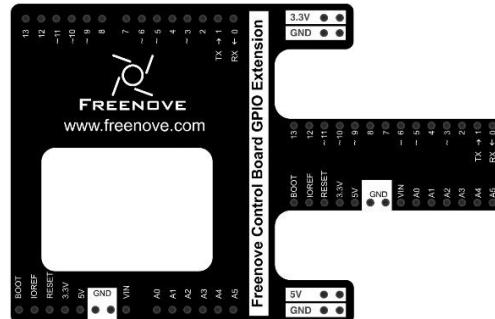


USB cable x1



Jumper M/M x7



I2C LCD1602 Module x1

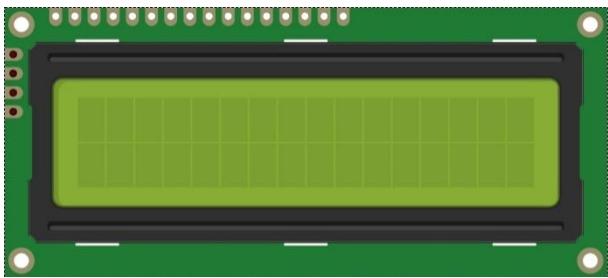

Thermistor x1




Resistor 10k Ω x1



Code Knowledge

Timer


A Timer can be set to produce an interrupt after a period of time. When a timer interrupt occurs, the processor will jump to the interrupt function to process the interrupt event. And after completion the processing, execution will return to the interrupted location to go on. If you don't close the timer, interrupt will occur at the intervals you set.

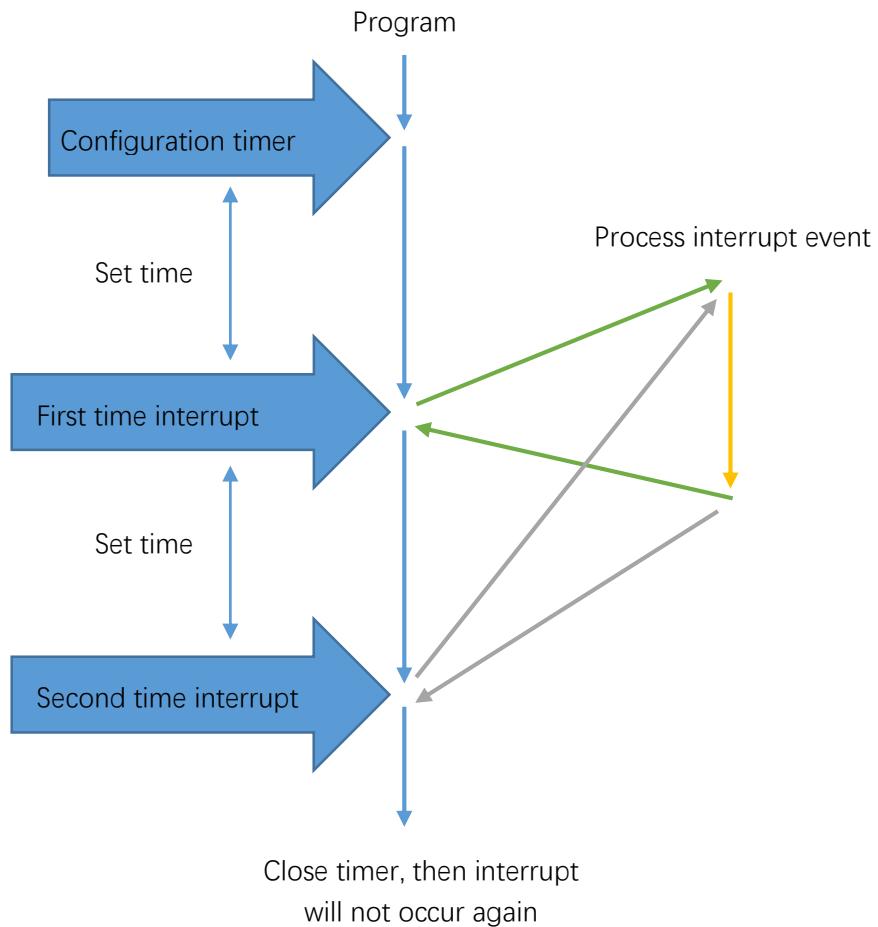


Circuit

The connection is shown below. Pin A0 is used to detect the voltage of thermistor.

Schematic diagram

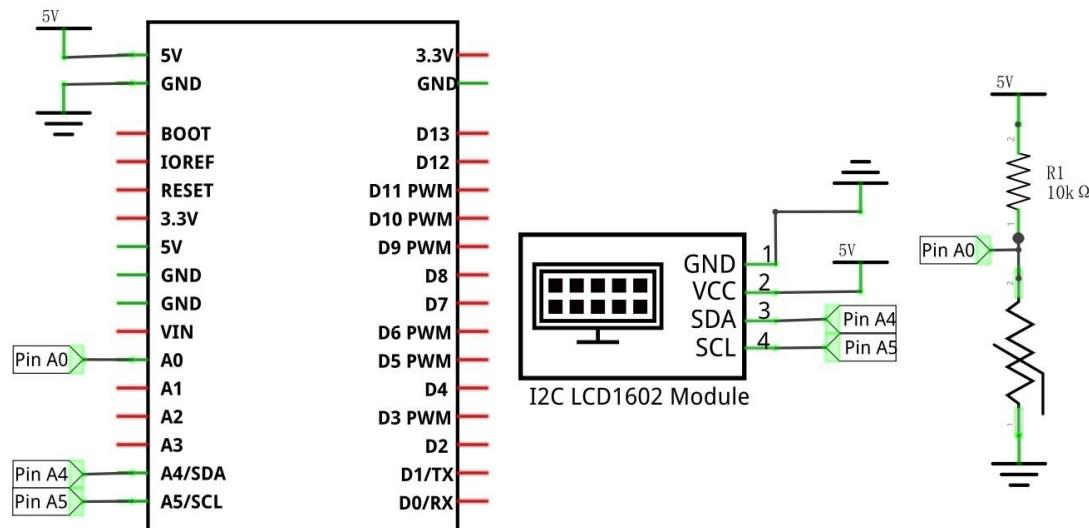

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

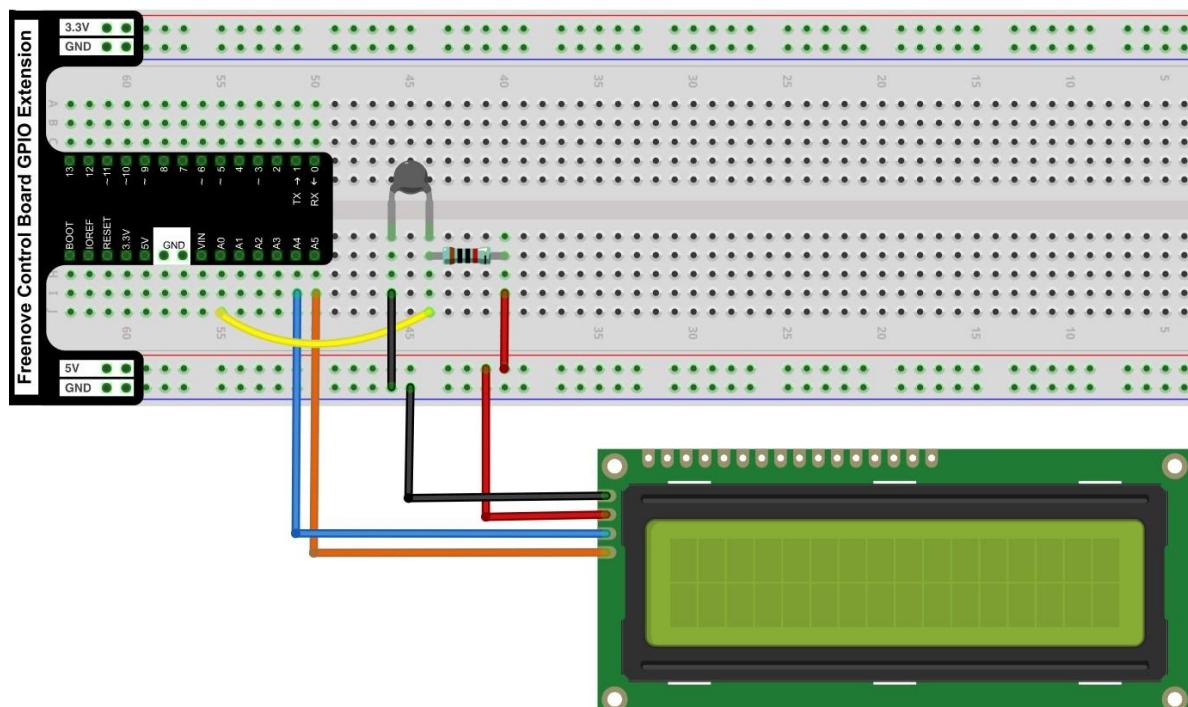

Sketch

Sketch 18.2.1

The CBTimer library is used here to manipulate timers.

Now write code to make LCD1602 display the time and temperature, and the time can be modified through the serial port.

```
1 #include <LiquidCrystal_I2C.h>
2 #include "CBTimer.h"
3
4 // initialize the library with the numbers of the interface pins
5 LiquidCrystal_I2C lcd(0x27, 16, 2);
6 int tempPin = 0; // define the pin of temperature sensor
7 float tempVal; // define a variable to store temperature
8 value
9 int hour, minute, second; // define variables stored record time
10
11 void setup() {
12     if (!i2CAddrTest(0x27)) {
13         lcd = LiquidCrystal_I2C(0x3F, 16, 2);
14     }
15     lcd.init(); // initialize the lcd
16     lcd.backlight(); // Turn on backlight
17     startingAnimation(); // display a dynamic start screen
18     Serial.begin(115200); // initialize serial port with baud
19     rate 9600
20     Serial.println("Input hour,minute,second to set time.");
21     static CBTimer timer;
22     timer.begin(1000, timerInt);
23 }
24
25 void loop() {
26     // Get temperature
27     tempVal = getTemp();
28     if (second >= 60) { // when seconds is equal to 60, minutes plus 1
29         second = 0;
30         minute++;
31         if (minute >= 60) { // when minutes is equal to 60, hours plus 1
32             minute = 0;
33             hour++;
34             if (hour >= 24) { // when hours is equal to 24, hours turn to
35             zero
36                 hour = 0;
37             }
38 }
```

```
38     }
39 }
40 lcdDisplay();           // display temperature and time information on
41 LCD
42 delay(200);
43 serial_Event();
44
45 }
46
47 void startingAnimation() {
48   for (int i = 0; i < 16; i++) {
49     lcd.scrollDisplayRight();
50   }
51 lcd.print("starting...");
52   for (int i = 0; i < 16; i++) {
53     lcd.scrollDisplayLeft();
54     delay(300);
55   }
56 lcd.clear();
57 }
58 // the timer interrupt function of FlexiTimer2 is executed every 1s
59 void timerInt() {
60   second++;      // second plus 1
61 }
62 // serial port interrupt function
63 void serial_Event() {
64   int inInt[3];  // define an array to save the received serial data
65   while (Serial.available()) {
66     for (int i = 0; i < 3; i++) {
67       inInt[i] = Serial.parseInt(); // receive 3 integer data
68     }
69     // print the received data for confirmation
70     Serial.print("Your input is: ");
71     Serial.print(inInt[0]);
72     Serial.print(", ");
73     Serial.print(inInt[1]);
74     Serial.print(", ");
75     Serial.println(inInt[2]);
76     // use received data to adjust time
77     hour = inInt[0];
78     minute = inInt[1];
79     second = inInt[2];
80     // print the modified time
81     Serial.print("Time now is: ");
```

```
82     Serial.print(hour / 10);
83     Serial.print(hour % 10);
84     Serial.print(':');
85     Serial.print(minute / 10);
86     Serial.print(minute % 10);
87     Serial.print(':');
88     Serial.print(second / 10);
89     Serial.println(second % 10);
90 }
91 }
92 // function used by LCD1602 to display time and temperature
93 void lcdDisplay() {
94     lcd.setCursor(0, 0); // set the cursor to (0,0) (first column,first
95     row).
96     lcd.print("TEMP: "); // display temperature information
97     lcd.print(tempVal);
98     lcd.print("C");
99     lcd.setCursor(0, 1); // set the cursor to (0,1) (first column,second
100    row)
101    lcd.print("TIME: "); // display time information
102    lcd.print(hour / 10);
103    lcd.print(hour % 10);
104    lcd.print(':');
105    lcd.print(minute / 10);
106    lcd.print(minute % 10);
107    lcd.print(':');
108    lcd.print(second / 10);
109    lcd.print(second % 10);
110 }
111 // function used to get temperature
112 float getTemp() {
113     // Convert analog value of tempPin into digital value
114     int adcVal = analogRead(tempPin);
115     // Calculate voltage
116     float v = adcVal * 5.0 / 1024;
117     // Calculate resistance value of thermistor
118     float Rt = 10 * v / (5 - v);
119     // Calculate temperature (Kelvin)
120     float tempK = 1 / (log(Rt / 10) / 3950 + 1 / (273.15 + 25));
121     // Calculate temperature (Celsius)
122     return tempK - 273.15;
123 }
124
125 bool i2CAddrTest(uint8_t addr) {
```

```

126     Wire.begin();
127     Wire.beginTransmission(addr);
128     if (Wire.endTransmission() == 0) {
129         return true;
130     }
131     return false;
132 }
```

In the code, we define 3 variables to represent time: second, minute, hour.

```
int hour, minute, second; // define variables stored record time
```

Defines a timer with cycle of 1000 millisecond (1 second). And each interrupt makes the second plus 1. When setting the timer, you need to define a function and pass the function name that works as a parameter to `timer.begin()` function.

In the `timer.begin()` function, there are two parameters to pass. The first parameter is: time, and the second parameter is the function to be executed after the first parameter time.

```

static CBTimer timer;
timer.begin(1000, timerInt);
```

After every interrupt, the second plus 1.

```
void timerInt() {
    second++; // second plus 1
}
```

In the `loop()` function, the information on the LCD display will be refreshed at set intervals.

```

void loop() {
    ...
    lcdDisplay(); // display temperature and time information on LCD
    delay(200);
    ..serial_Event();
}
```

In the `loop` function, we need to control the second, minute, hour. When the second increases to 60, the minute adds 1, and the second is reset to zero; when the minute increases to 60, the hour adds 1, and the minute is reset to zero; when the hour increases to 24, reset it to zero.

```

if (second >= 60) { // when the second increases to 60, the minute adds 1
    second = 0;
    minute++;
    if (minute >= 60) { //when the minute increases to 60, the hour adds 1
        minute = 0;
        hour++;
        if (hour >= 24) { // when the hour increases to 24, turn it to zero
            hour = 0;
        }
    }
}
```

We define a function `lcdDisplay()` to refresh the information on LCD display. In this function, use two bit to display the hour, minute, second on the LCD. For example, `hour/ 10` is the unit, `hour% 10` is the tens.

```
void lcdDisplay() {
```

```
lcd.setCursor(0, 0); // set the cursor to (0,0) (first column, first row).
lcd.print("TEMP: "); // display temperature information
lcd.print(tempVal);
lcd.print("C");
lcd.setCursor(0, 1); // set the cursor to (0,1) (first column, second row)
lcd.print("TIME: "); // display time information
lcd.print(hour / 10);
lcd.print(hour % 10);
lcd.print(':' );
lcd.print(minute / 10);
lcd.print(minute % 10);
lcd.print(':' );
lcd.print(second / 10);
lcd.print(second % 10);
}
```

The serial_Event function is used to receive the data sent by the computer to adjust the time and return the data for confirmation.



```
void serial_Event() {
    int inInt[3]; // define an array to save the received serial data
    while (Serial.available()) {
        for (int i = 0; i < 3; i++) {
            inInt[i] = Serial.parseInt(); // receive 3 integer data
        }
        // print the received data for confirmation
        Serial.print("Your input is: ");
        Serial.print(inInt[0]);
        Serial.print(",");
        Serial.print(inInt[1]);
        Serial.print(",");
        Serial.println(inInt[2]);
        // use the received data to adjust time
        hour = inInt[0];
        minute = inInt[1];
        second = inInt[2];
        // print the modified time
        Serial.print("Time now is: ");
        Serial.print(hour / 10);
        Serial.print(hour % 10);
        Serial.print(':' );
        Serial.print(minute / 10);
        Serial.print(minute % 10);
        Serial.print(':' );
        Serial.print(second / 10);
        Serial.println(second % 10);
    }
}
```

```
}
```

We also define a function that displays a scrolling string when the control board has been just started.

```
void startingAnimation() {
    for (int i = 0; i < 16; i++) {
        lcd.scrollDisplayRight();
    }
    lcd.print("starting... ");
    for (int i = 0; i < 16; i++) {
        lcd.scrollDisplayLeft();
        delay(300);
    }
    lcd.clear();
}
```

Verify and upload the code. The LCD screen will display a scrolling string first, and then displays the temperature and time. We can open Serial Monitor and enter time in the sending area, then click the Send button to set the time.

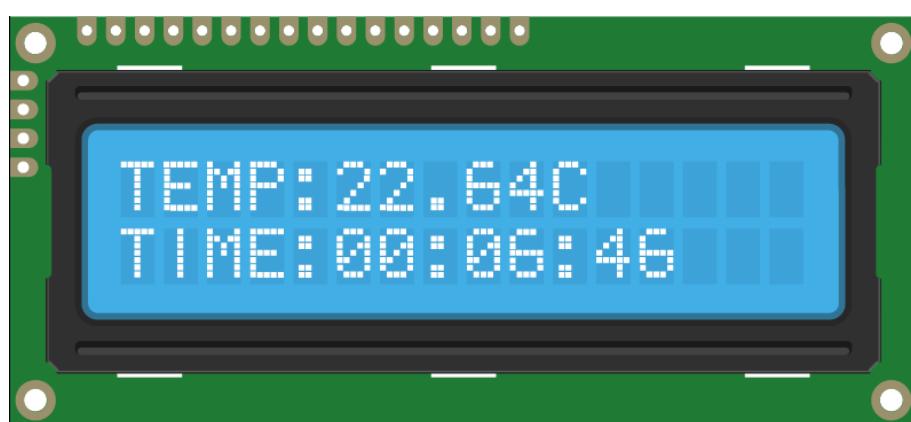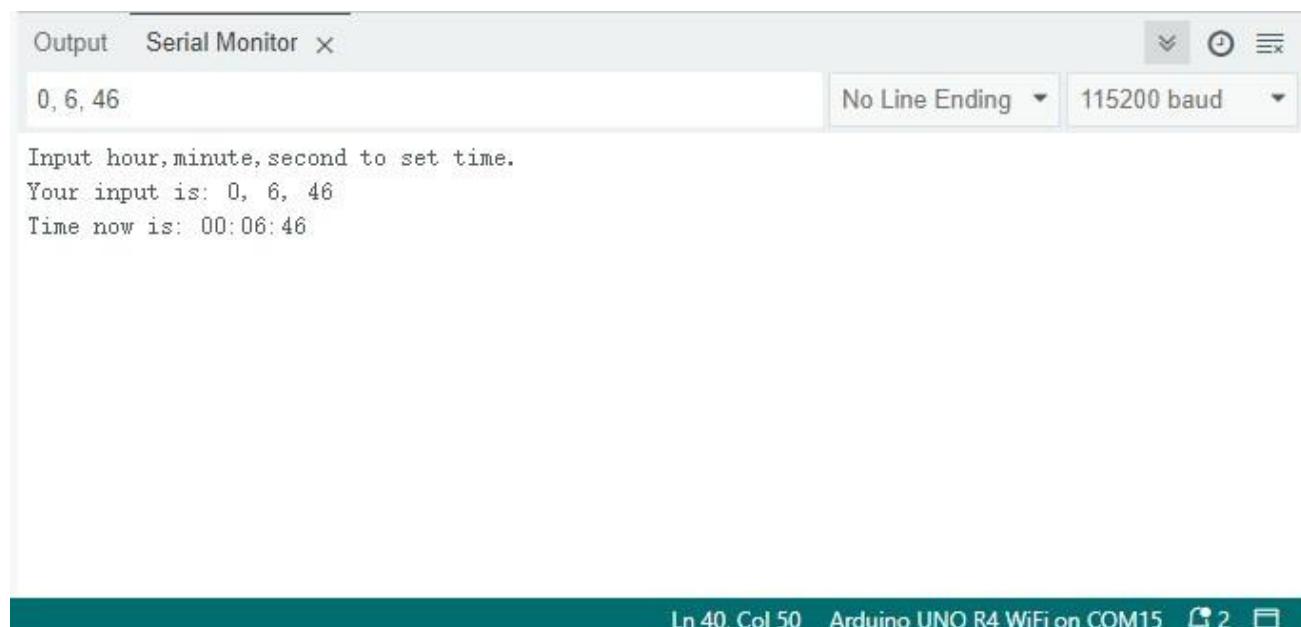

Chapter 19 Digital Display


Digital display is a kind of device that can display one or several digits. We will learn how to use it in this chapter.

Project 19.1 1-digit 7-segment Display

Frist, try to use the digit display that can display 1-digit number.

Component List


Control board x1

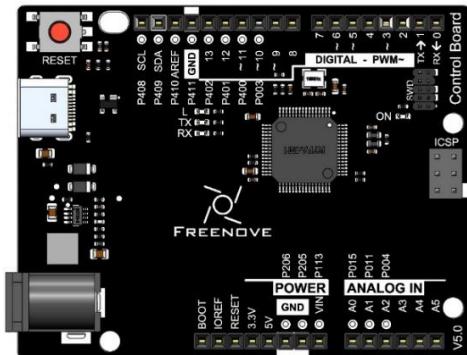


The image shows the front panel of the FREENOVE Control Board. It features a central microcontroller chip with various pins labeled. On the left side, there is a red pushbutton labeled 'RESET'. On the right side, there is a 16-pin DIP package labeled 'MAX232CNE'. The board has several analog input pins (A0-A5) and digital pins (D0-D13). Power pins include 5V, GND, and 3.3V. A USB port is located at the bottom left. A large grey component, likely a heat sink or capacitor, is mounted in the center. The FREENOVE logo is printed on the board.

GPIO Extension Board x1

Breadboard x1

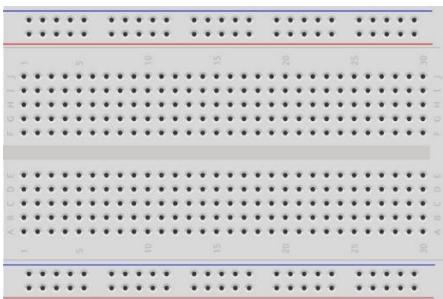


The diagram shows the Freenove Control Board GPIO Extension Breakout Board. It features a central white rectangular area for component placement. On the left side, there are two columns of pins labeled A0 through A5. The top row of pins is labeled 'IREF' and the bottom row is labeled 'GND'. On the right side, there are two columns of pins labeled TX and RX. The top row is labeled '3.3V' and the bottom row is labeled 'GND'. A vertical label 'Freenove Control Board GPIO Extension' is positioned to the left of the central area.

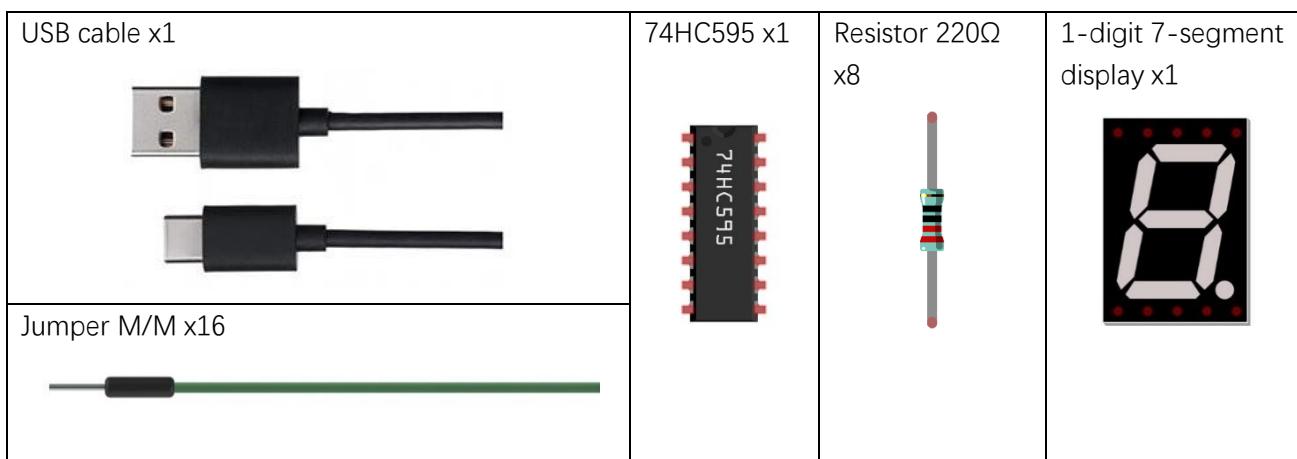

Component Knowledge

1-digit 7-segment display

A 7-Segment Display is a digital electronic display device. There is a figure "8" and a decimal point represented, which consists of 8 LEDs. It can display numbers of 0~9 by lighting some of its LED segment. The LEDs have a Common Anode and individual Cathodes. Its internal structure and pin designation diagram is shown below:

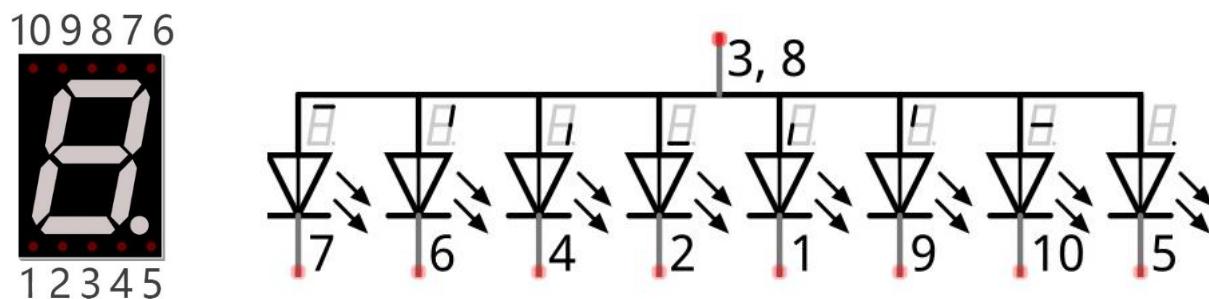

As we can see in the above circuit diagram, we can control the state of each LED separately. Also, by combining LEDs with different states of ON and OFF, we can display different characters (Numbers and Letters). For example, to display a "0": we need to turn ON LED segments 7, 6, 4, 2, 1 and 9, and turn OFF LED segments 5 and 10.



If we use a byte to show the state of the LEDs that connected to pin 5, 10, 9, 1, 2, 4, 6, 7, we can make 0 represent the state of ON and 1 for OFF. Then the number 0 can be expressed as a binary number 11000000, namely hex 0xc0.

The numbers and letters that can be display are shown below:


Number/Letter	Binary number	Hexadecimal number
0	11000000	0xc0
1	11111001	0xf9

2	10100100	0xa4
3	10110000	0xb0
4	10011001	0x99
5	10010010	0x92
6	10000010	0x82
7	11111000	0xf8
8	10000000	0x80
9	10010000	0x90
A	10001000	0x88
b	10000011	0x83
C	11000110	0xc6
d	10100001	0xa1
E	10000110	0x86
F	10001110	0x8e


Circuit

Use pin 11, 12, 13 on control board to control the 74HC595, and connect it to a 1-digit 7-segment display.

Schematic diagram

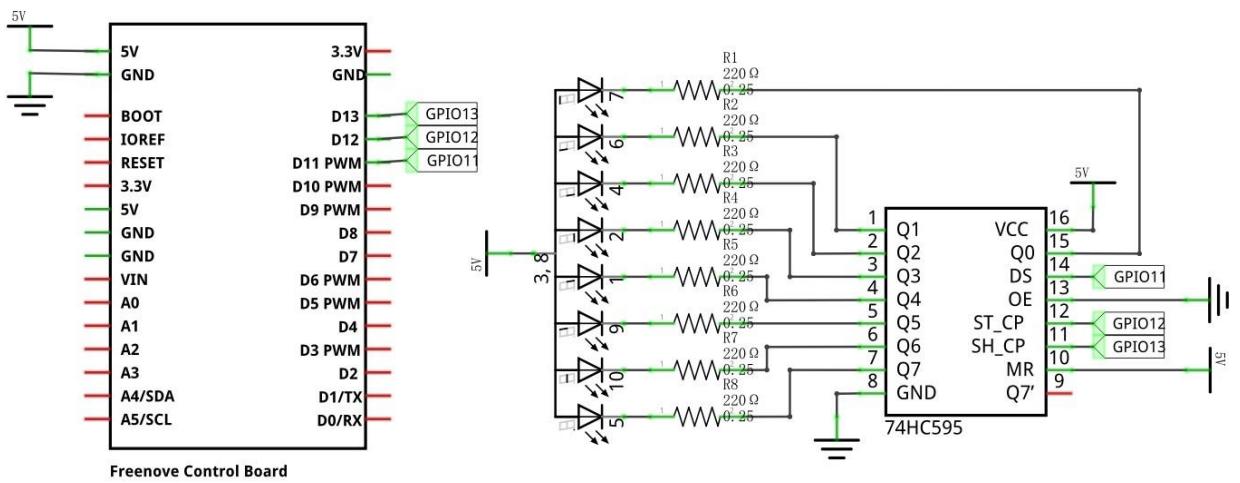

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

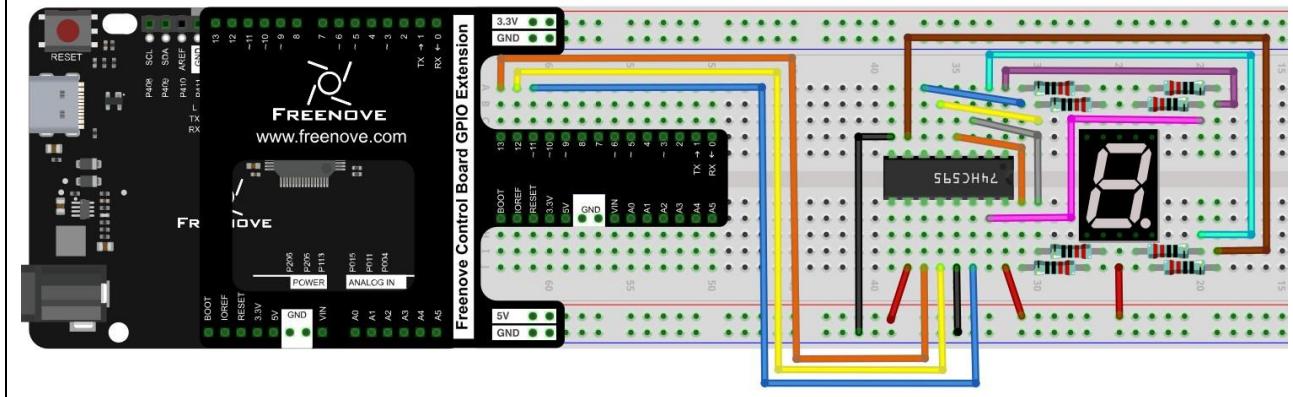

Sketch

Sketch 19.1.1

Now write code to control the 1-digit 7-segment display through 74HC595.

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595 (Pin12)
2 int clockPin = 13;          // Pin connected to SH_CP of 74HC595 (Pin11)
3 int dataPin = 11;           // Pin connected to DS of 74HC595 (Pin14)
4
5 // Define the encoding of characters 0-F of the common-anode 7-segment Display
6 byte num[] = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8, 0x80, 0x90, 0x88, 0x83,
7 0xc6, 0xa1, 0x86, 0x8e};
8
9 void setup() {
10    // set pins to output
11    pinMode(latchPin, OUTPUT);
12    pinMode(clockPin, OUTPUT);
13    pinMode(dataPin, OUTPUT);
14 }
15
16 void loop() {
17    // Cycling display 0-F
18    for (int i = 0; i <= 0x0f; i++) {
19        // Output low level to latchPin
20        digitalWrite(latchPin, LOW);
21        // Send serial data to 74HC595
22        shiftOut(dataPin, clockPin, MSBFIRST, num[i]);
23        // Output high level to latchPin, and 74HC595 will update the data to the parallel
24        // output port.
25        digitalWrite(latchPin, HIGH);
26        delay(1000);
27    }
28 }
```

We define an array to save and display the encoding of character 0-F in this code.

```
6 byte num[] = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8, 0x80, 0x90, 0x88, 0x83,
7 0xc6, 0xa1, 0x86, 0x8e};
```

Initialize the pin connected to 74HC595 in setup() function.


```

8 void setup() {
9    // set pins to output
10   pinMode(latchPin, OUTPUT);
11   pinMode(clockPin, OUTPUT);
12   pinMode(dataPin, OUTPUT);
13 }
```

Then in loop() function, send the encoding of 0-F to 74HC595 circularly.

```
17  for (int i = 0; i <= 0x0f; i++) {  
18      // Output low level to latchPin  
19      digitalWrite(latchPin, LOW);  
20      // Send serial data to 74HC595  
21      shiftOut(dataPin, clockPin, MSBFIRST, num[i]);  
22      // Output high level to latchPin, and 74HC595 will update the data to the parallel  
23      output port.  
24      digitalWrite(latchPin, HIGH);  
25      delay(1000);  
}
```

Verify and upload the code, then you will see the 1-digit 7-segment display show 0-F in a circular manner.

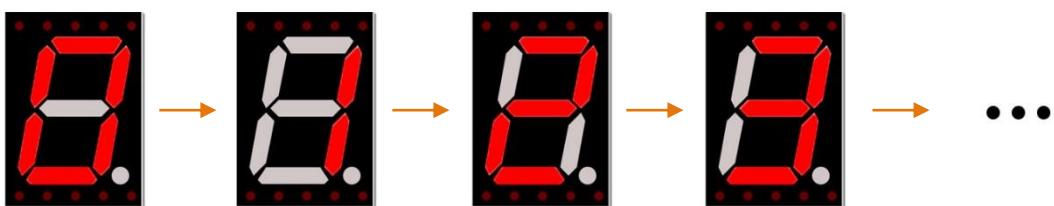

Chapter 20 Infrared Remote



In this chapter, we'll learn how to use an infrared remote control, and control a LED.

Project 20.1 Infrared Remote Control

First, we need to understand how infrared remote control works, and then get the command sent from infrared remote control.


Component List

Control board x1

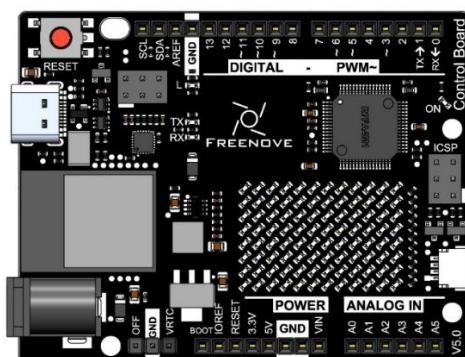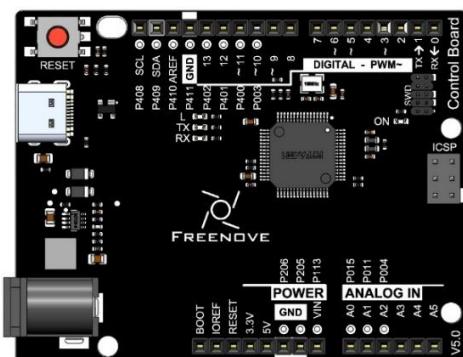


or

Breadboard x1

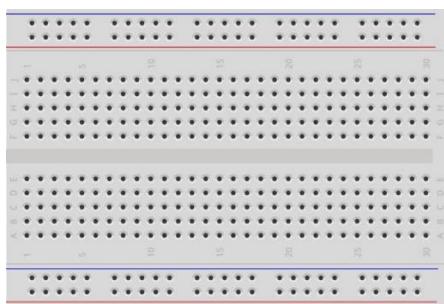

GPIO Extension Board x1

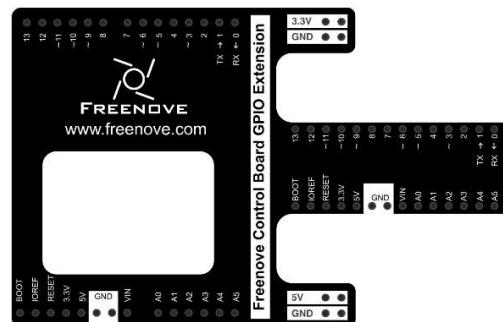


USB cable x1



Jumper M/M x4




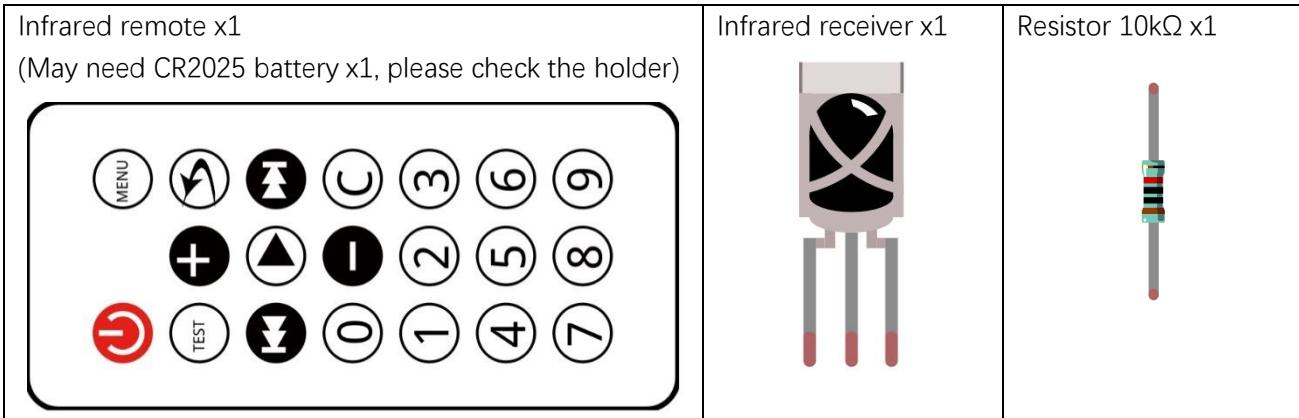

Component Knowledge

Infrared remote


An Infrared(IR) remote control is a device with a certain number of buttons. Pressing down different buttons will make the infrared emission tube, which is located in the front of the remote control, send infrared with different encoding. Infrared remote control technology is widely used in household appliances, such as TV, air conditioning, etc. Thus, it makes it possible for you to switch TV programs and adjust the temperature of the air conditioning away from them. The remote control we use is shown below:

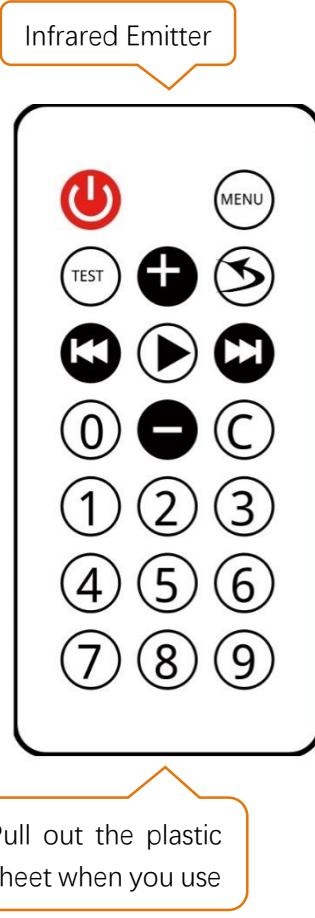

Infrared receiver

Infrared(IR) receiver is a component which can receive the infrared light, so we can use it to detect the signal


emitted by the infrared remote control. DATA pin here outputs the received infrared signal.

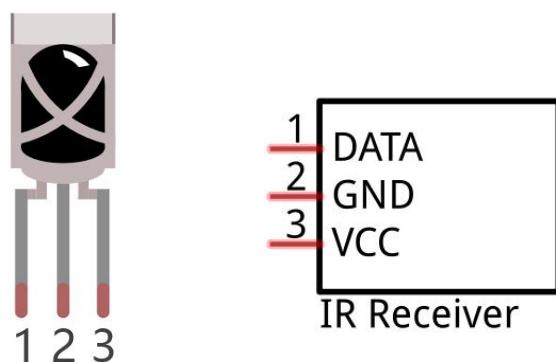


Circuit

Use pin 12 on the control board to connect IR receiver.

Schematic diagram

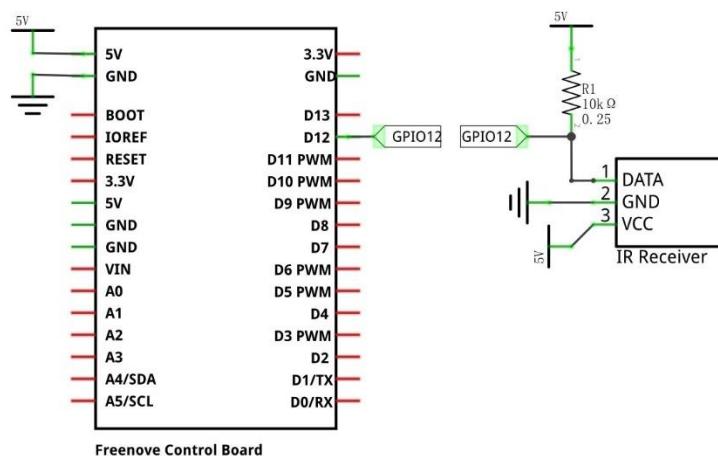

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

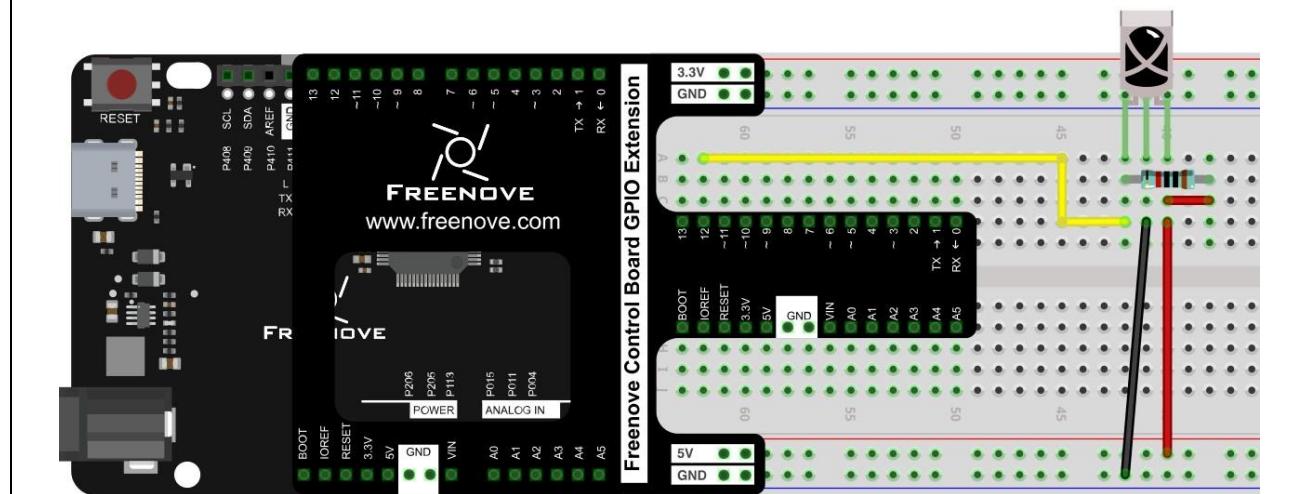


Sketch

Sketch 20.1.1

Before writing code, we need to import the library needed.

Click "Add .ZIP Library..." and then find IRremote.zip in libraries folder (this folder is in the folder unzipped from the ZIP file we provided). This library makes it easy to control IR receiver.

You can also type "IRremote" into the library search bar to install the library.

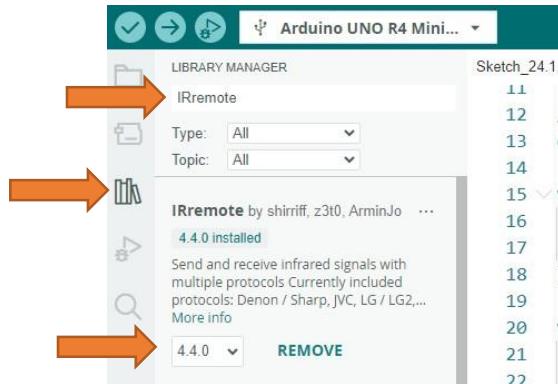

Now, write code to get the command sent from IR remote control, and send it to the serial port.

```

1 // Include the necessary libraries
2 #include <IRremote.hpp>
3
4 // Define the pin numbers for the IR receiver
5 const int IR_RECEIVE_PIN = 12;
6
7 void setup() {
8     Serial.begin(9600); // Start serial communication at
9     9600 baud rate
10    IrReceiver.begin(IR_RECEIVE_PIN, ENABLE_LED_FEEDBACK); // Start the IR receiver
11 }
12
13 void loop() {
14     // Check if there is any incoming IR signal
15     if (IrReceiver.decode()) {
16         // Serial.println(IrReceiver.decodedIRData.command, HEX); // Print the command in
17         // hexadecimal format
18         // Serial.println(IrReceiver.decodedIRData.decodedRawData, HEX); // Map and print the
19         // decoded IR signal to corresponding key value
20         Serial.println(decodeKeyValue(IrReceiver.decodedIRData.command)); // Map and print the
21         // decoded IR signal to corresponding key value
22
23         IrReceiver.resume(); // Enable receiving of the next value
24     }
25 }
```

```
26 // Function to map received IR signals to corresponding keys
27 String decodeKeyValue(long result) {
28     // Each case corresponds to a specific IR command
29     switch (result) {
30         case 69:
31             return "POWER";
32         case 71:
33             return "MENU";
34         case 68: // Receive the number 'TEST'
35             return "TEST";
36         case 64: // Receive the number '+'
37             return "+";
38         case 67:
39             return "Back";
40         case 7: // Receive the number '|<<|
41             return "|<<";
42         case 21: // Receive the number '▶'
43             return "▶";
44         case 9: // Receive the number '>>|'
45             return ">>|";
46         case 22: // Receive the number '0'
47             return "0";
48         case 25: // Receive the number '-'
49             return "-";
50         case 13: // Receive the number 'C'
51             return "C";
52         case 12: // Receive the number '1'
53             return "1";
54         case 24: // Receive the number '2'
55             return "2";
56         case 94: // Receive the number '3'
57             return "3";
58         case 8: // Receive the number '4'
59             return "4";
60         case 28: // Receive the number '5'
61             return "5";
62         case 90: // Receive the number '6'
63             return "6";
64         case 66: // Receive the number '7'
65             return "7";
66         case 82: // Receive the number '8'
67             return "8";
68         case 74: // Receive the number '9'
```

```

70     return "9";
71     default:
72         break;
73     }
74 }
```

First, include header file. Each time you use the infrared sensor, you need to include the header file at the beginning of the program.

```
2 #include <IRremote.hpp>
```

Second, define an infrared receive pin and the infrared sensor is initialized.

```

4 // Define the pin numbers for the IR receiver
5 const int IR_RECEIVE_PIN = 12;
...
10 IrReceiver.begin(IR_RECEIVE_PIN, ENABLE_LED_FEEDBACK); // Start the IR receiver
```

The function decodeKeyValue() is used to map the received IR signal to the corresponding key.

```

27 // Function to map received IR signals to corresponding keys
28 String decodeKeyValue(long result) {
29     // Each case corresponds to a specific IR command
30     switch (result) {
31         case 69:
32             return "POWER";
33         case 71:
34             return "MENU";
35         case 68: // Receive the number 'TEST'
36             return "TEST";
37         case 64: // Receive the number '+'
38             return "+";
39         case 67:
40             return "Back";
41         case 7: // Receive the number '|<<'
42             return "|<<";
43         case 21: // Receive the number '▶'
44             return "▶";
45         case 9: // Receive the number '|>>'
46             return ">>|";
47         case 22: // Receive the number '0'
48             return "0";
49         case 25: // Receive the number '-'
50             return "-";
51         case 13: // Receive the number 'C'
52             return "C";
53         case 12: // Receive the number '1'
54             return "1";
55         case 24: // Receive the number '2'
56             return "2";
```

```


57     case 94: // Receive the number '3'
58         return "3";
59     case 8: // Receive the number '4'
60         return "4";
61     case 28: // Receive the number '5'
62         return "5";
63     case 90: // Receive the number '6'
64         return "6";
65     case 66: // Receive the number '7'
66         return "7";
67     case 82: // Receive the number '8'
68         return "8";
69     case 74: // Receive the number '9'
70         return "9";
71     default:
72         break;
73     }
74 }
```

Finally, **IrReceiver.decode()** is used to determine whether an infrared signal has been received, returning true/1 if an infrared signal has been received, or false/0 if no infrared signal has been received; If an infrared signal is received, the received infrared coded value is printed through the serial port.

Please note that **IrReceiver.resume()** must be applied to release the infrared receiver function each time data are received. Otherwise, the infrared receiver function can only be used once and data cannot be received next time.

```

15     if (IrReceiver.decode()) {
16         // Serial.println(IrReceiver.decodedIRData.command, HEX); // Print the command in
17         // hexadecimal format
18         // Serial.println(IrReceiver.decodedIRData.decodedRawData, HEX); // Map and print the
19         // decoded IR signal to corresponding key value
20         Serial.println(decodeKeyValue(IrReceiver.decodedIRData.command)); // Map and print the
21         // decoded IR signal to corresponding key value
22
23         IrReceiver.resume(); // Enable receiving of the next value
24     }
```


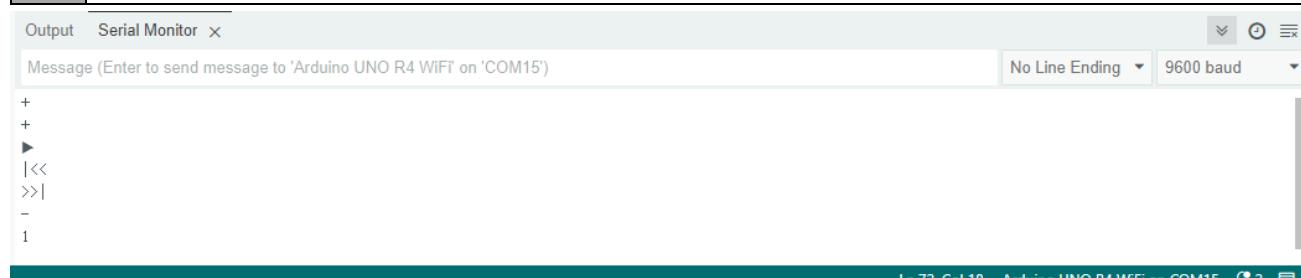


Project 20.2 Control LED through Infrared Remote

Now, let us try to control a LED through infrared remote.


Component List

Control board x1

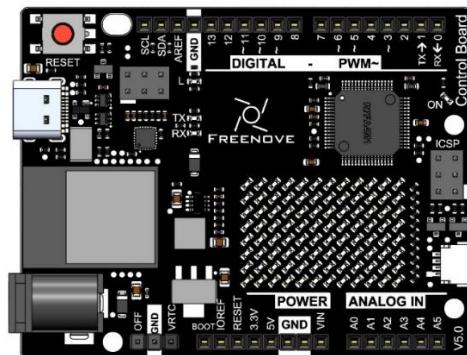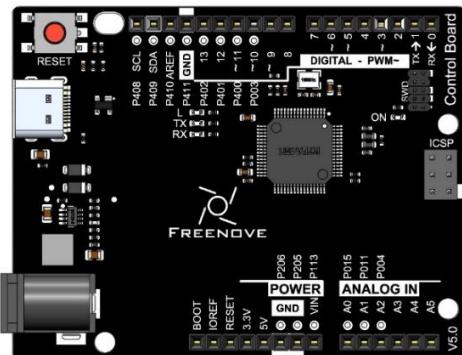


or

Breadboard x1

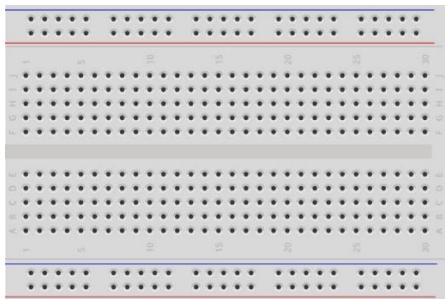


GPIO Extension Board x1

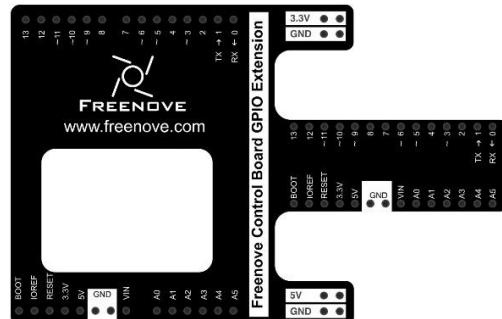

USB cable x1




Infrared remote x1

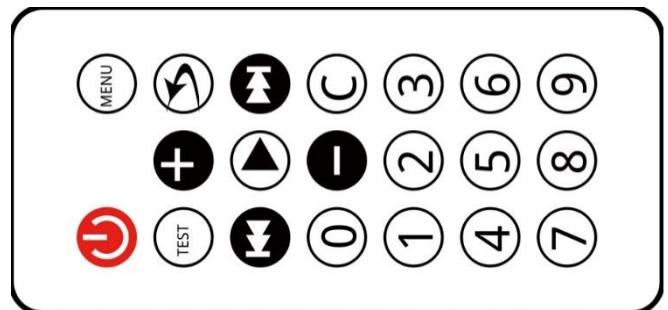

Jumper M/M x11




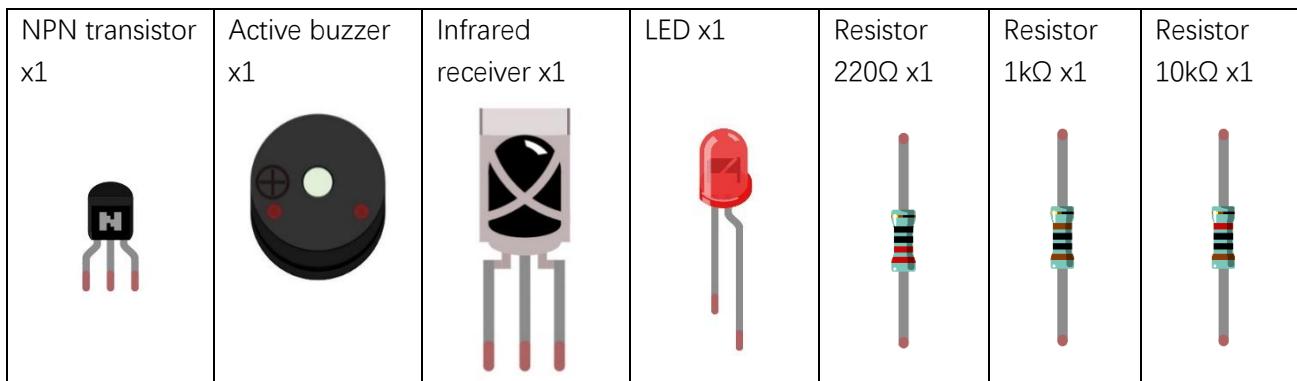


Circuit

Connect pin 12 on the control board to IR receiver to simulate a desk lamp. And drive buzzer through pin 13, drive LED through pin 5.

Schematic diagram

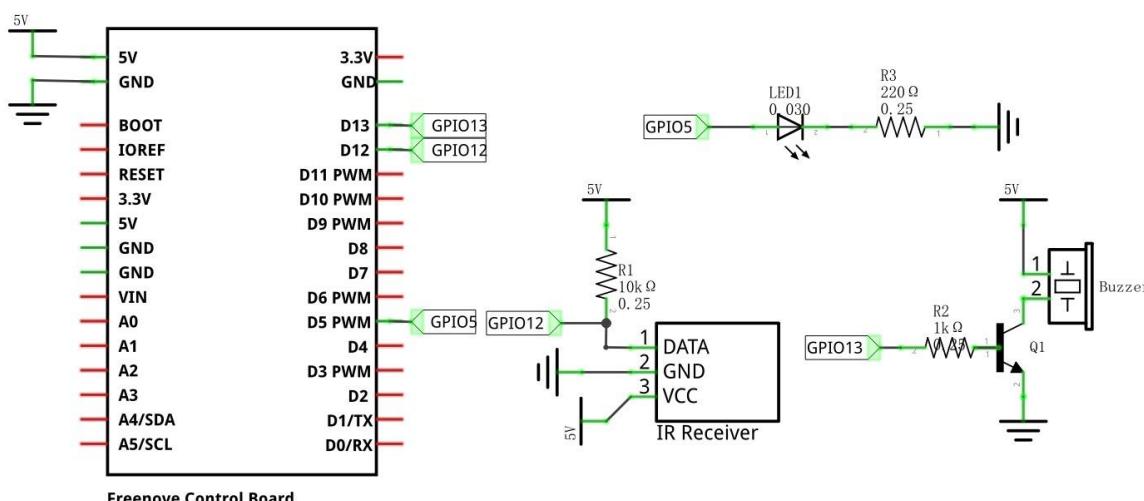

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

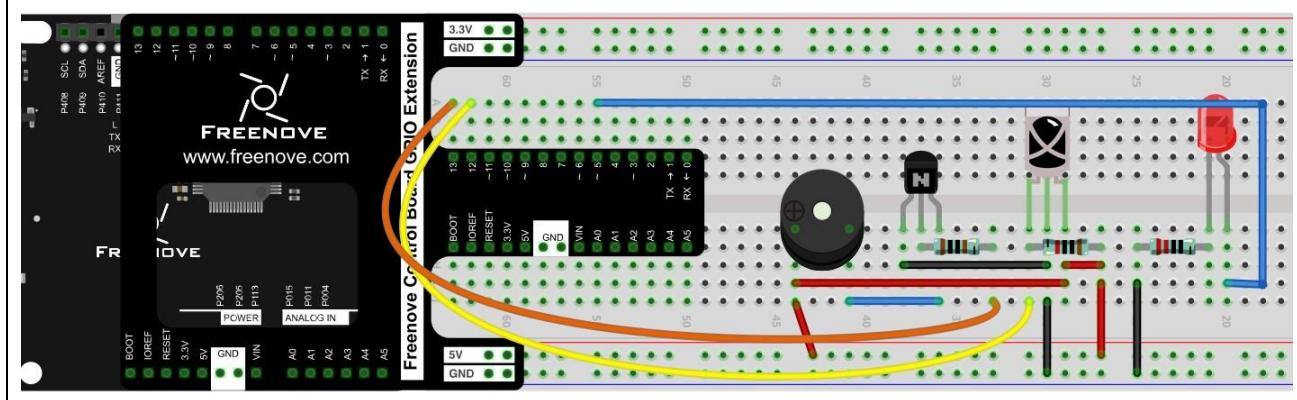

Sketch

Sketch 20.2.1

Now, write code to get the commands sent from IR remote, and control the LED light on/off or emit light with different brightness, and control the buzzer to generate a confirmation sound when it receives the command.

```
1 #include <IRremote.hpp>
2
3 // Define the pin numbers for the IR receiver
4 const int IR_RECEIVE_PIN = 12;
5
6 decode_results results; // Create a decoding results class object
7
8 int ledPin = 5;           // the number of the LED pin
9 int buzzerPin = 13;       // the number of the buzzer pin
10
11 void setup()
12 {
13     Serial.begin(9600); // Initialize the serial port and set the baud rate to 9600
14     Serial.println("UNO is ready!"); // Print the string "UNO is ready!"
15     IrReceiver.begin(IR_RECEIVE_PIN, ENABLE_LED_FEEDBACK); // Start the IR receiver
16     pinMode(ledPin, OUTPUT); // set LED pin into output mode
17     pinMode(buzzerPin, OUTPUT); // set buzzer pin into output mode
18 }
19
20 void loop() {
21     if (IrReceiver.decode()) {
22         Serial.println(IrReceiver.decodedIRData.command); // Print out the decoded results
23         handleControl(IrReceiver.decodedIRData.command); // Handle the commands from remote
24         control
25         IrReceiver.resume(); // Enable receiving of the next value
26     }
27 }
28
29 void handleControl(unsigned long value) {
30     // Make a sound when it receives commands
31     digitalWrite(buzzerPin, HIGH);
32     delay(100);
33     digitalWrite(buzzerPin, LOW);
34     // Handle the commands
35     switch (value) {
36         case 22: // Receive the number '0'
37             analogWrite(ledPin, 0); // Turn off LED
38             break;
```

```

39   case 12: // Receive the number '1'
40     analogWrite(ledPin, 7); // Dimmest brightness
41     break;
42   case 24: // Receive the number '2'
43     analogWrite(ledPin, 63); // Medium brightness
44     break;
45   case 94: // Receive the number '3'
46     analogWrite(ledPin, 255); // Strongest brightness
47     break;
48 }
49 }
```

Based on the last section, we add some new functions: control LED and buzzer.

We define a function that is used to handle the received commands. When this function is executed, make the buzzer beep first, then output PWM signals with different duty cycle to the pin connected to LED according to the receiving commands

```

29 void handleControl(unsigned long value) {
30   // Make a sound when it receives commands
31   digitalWrite(buzzerPin, HIGH);
32   delay(100);
33   digitalWrite(buzzerPin, LOW);
34   // Handle the commands
35   switch (value) {
36     case 22: // Receive the number '0'
37       analogWrite(ledPin, 0); // Turn off LED
38       break;
39     case 12: // Receive the number '1'
40       analogWrite(ledPin, 7); // Dimmest brightness
41       break;
42     case 24: // Receive the number '2'
43       analogWrite(ledPin, 63); // Medium brightness
44       break;
45     case 94: // Receive the number '3'
46       analogWrite(ledPin, 255); // Strongest brightness
47       break;
48   }
49 }
```

Each time when the command is received, the function above will be called in the loop() function.

```

20 void loop() {
21   if (IrReceiver.decode()) {
22     Serial.println(IrReceiver.decodedIRData.command); // Print out the decoded results
23     handleControl(IrReceiver.decodedIRData.command); // Handle the commands from remote
24     control
25     IrReceiver.resume(); // Enable receiving of the next value
26   }
```

27 }

Verify and upload the code, press the button '0', '1', '2', '3' on IR remote, and then you can see LED emit light with different brightness, and the buzzer will start beeping when it receives the signal.

Chapter 21 Ultrasonic Ranging



In this chapter, we learn a module that use ultrasonic to measure distance, HC-SR04 ultrasonic ranging module.

Project 21.1 Ultrasonic Ranging

In this project, we use ultrasonic ranging module to measure distance, and print out the data in the serial port.


Component List

Control board x1

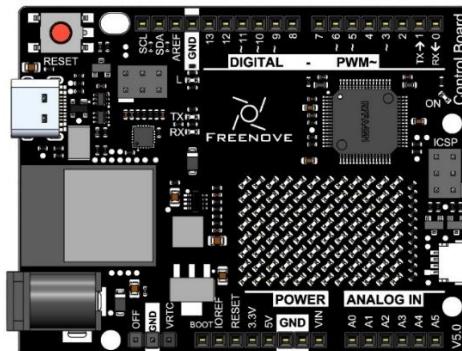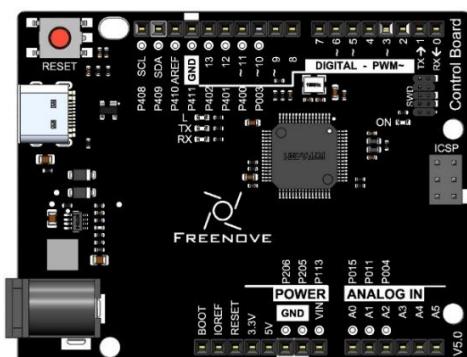


or

Breadboard x1

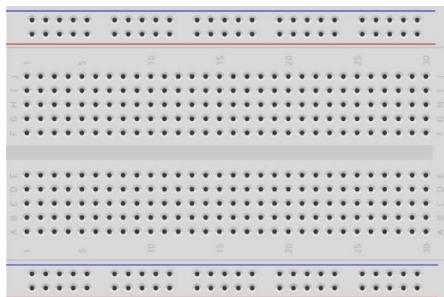

GPIO Extension Board x1

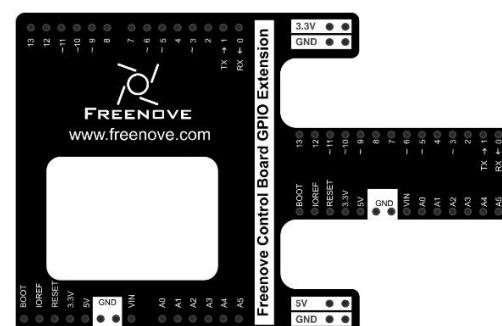


USB cable x1



Jumper F/M x4




Ultrasonic ranging module x1

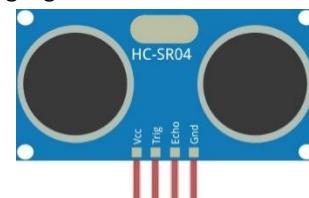


Component Knowledge

Ultrasonic ranging module

The HC-SR04 Ultrasonic Ranging Module integrates both an ultrasonic transmitter and a receiver. The transmitter is used to convert electrical signals (electrical energy) into high frequency (beyond human hearing) sound waves (mechanical energy) and the function of the receiver is opposite of this. The picture and the diagram of the HC SR04 Ultrasonic Ranging Module are shown below:

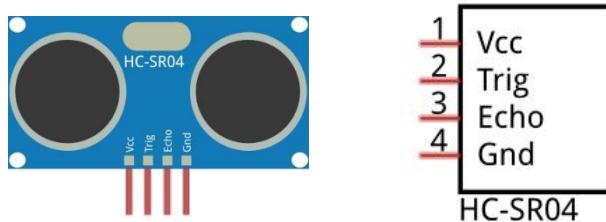

The Ultrasonic Ranging Module uses the principle that ultrasonic waves will reflect when they encounter any obstacles. This is possible by counting the time interval between when the ultrasonic wave is transmitted to when the ultrasonic wave reflects back after encountering an obstacle. Time interval counting will end after an ultrasonic wave is received, and the time difference (delta) is the total time of the ultrasonic wave's journey from being transmitted to being received. Because the speed of sound in air is a constant, and is about $v=340\text{m/s}$, we can calculate the distance between the Ultrasonic Ranging Module and the obstacle: $s=vt/2$.

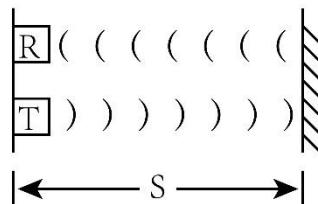

Pin description:


Pin name	Pin number	Description
Vcc	1	Positive electrode of power supply, the voltage is 5V
Trig	2	Trigger pin
Echo	3	Echo pin
Gnd	4	Negative electrode of power supply

Instructions for use: output a high-level pulse in Trig pin lasting for least 10uS, the module begins to transmit ultrasonic waves. At the same time, the Echo pin is pulled up. When the module receives the returned ultrasonic waves from encountering an obstacle, the Echo pin will be pulled down. The duration of high level in the Echo pin is the total time of the ultrasonic wave from transmitting to receiving, $s=vt/2$. This is done constantly.


Circuit

The connection of the control board and HC-SR04 is shown below.

Schematic diagram

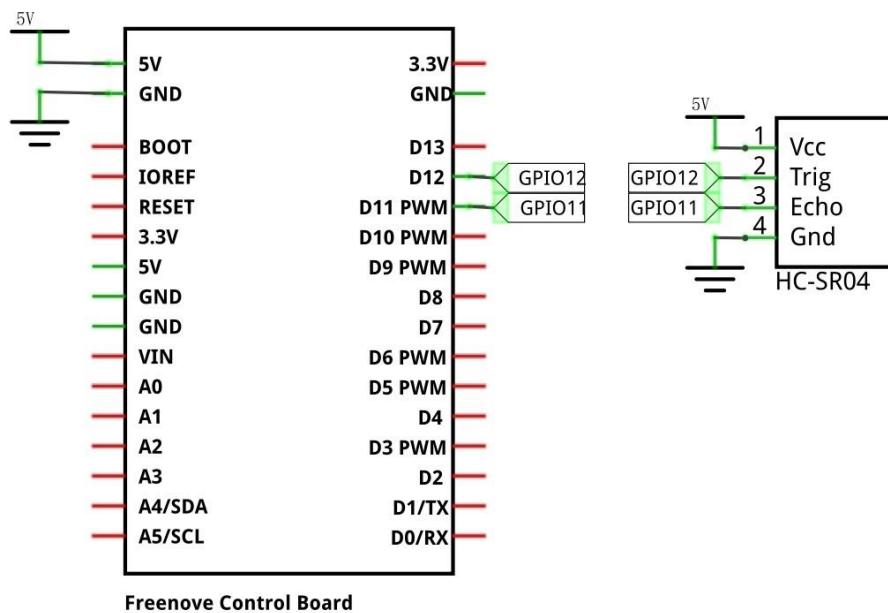

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

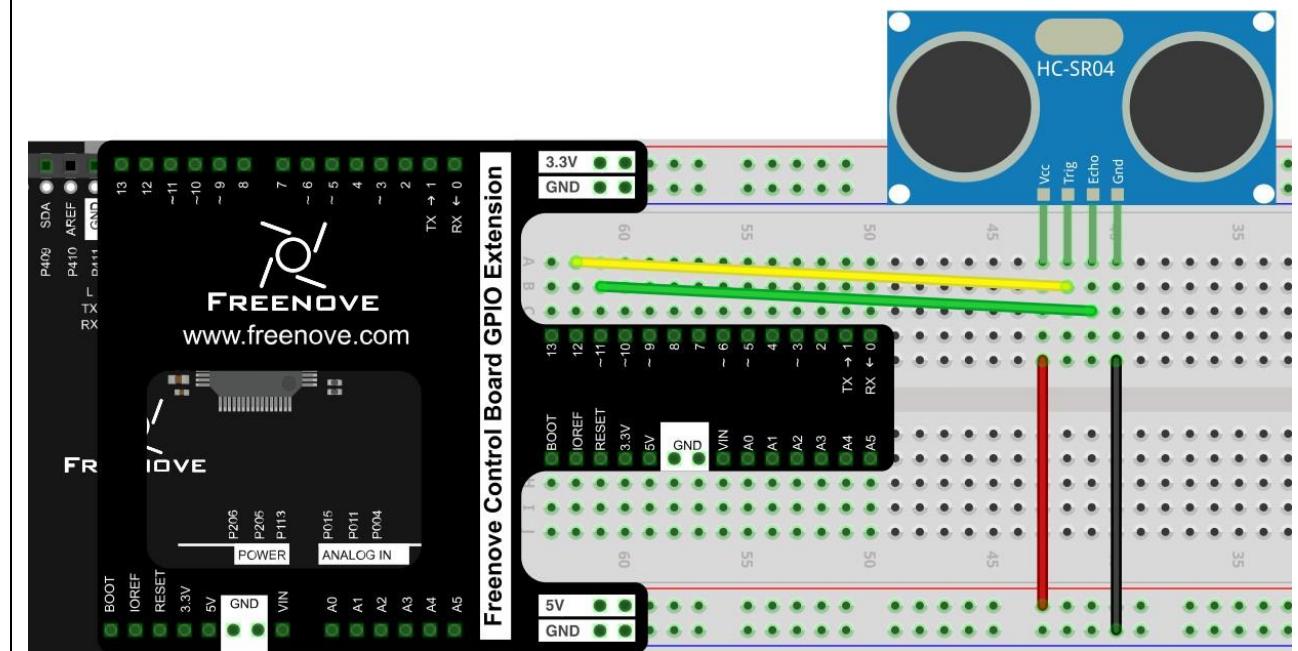

Sketch

Sketch 21.1.1

First, we use the HC-SR04 communication protocol to operate the module, get the range of time, and calculate the distance.

```

1 #define trigPin 12 // define TrigPin
2 #define echoPin 11 // define EchoPin.
3 #define MAX_DISTANCE 200 // Maximum sensor distance is rated at 400-500cm.
4 // define the timeOut according to the maximum range. timeOut= 2*MAX_DISTANCE /100 /340
5 *1000000 = MAX_DISTANCE*58.8
6 float timeOut = MAX_DISTANCE * 60;
7 int soundVelocity = 340; // define sound speed=340m/s
8
9 void setup() {
10     pinMode(trigPin, OUTPUT); // set trigPin to output mode
11     pinMode(echoPin, INPUT); // set echoPin to input mode
12     Serial.begin(9600); // Open serial monitor at 9600 baud to see ping results.
13 }
14
15 void loop() {
16     delay(100); // Wait 100ms between pings (about 20 pings/sec). 29ms should be the
17     shortest delay between pings.
18     Serial.print("Ping: ");
19     Serial.print(getSonar()); // Send ping, get distance in cm and print result (0 =
20     outside set distance range)
21     Serial.println("cm");
22 }
23
24 float getSonar() {
25     unsigned long pingTime;
26     float distance;
27     digitalWrite(trigPin, HIGH); // make trigPin output high level lasting for 10µs to
28     trigger HC_SR04,
29     delayMicroseconds(10);
30     digitalWrite(trigPin, LOW);
31     pingTime = pulseIn(echoPin, HIGH, timeOut); // Wait HC-SR04 returning to the high level
32     and measure out this waiting time
33     distance = (float)pingTime * soundVelocity / 2 / 10000; // calculate the distance
34     according to the time
35     return distance; // return the distance value
36 }
```

First, define the pins and the maximum measurement distance.

```
1 #define trigPin 12 // define TrigPin
2 #define echoPin 11 // define EchoPin.
3 #define MAX_DISTANCE 200 // Maximum sensor distance is rated at 400-500cm.
```

If the module does not return high level, we cannot wait for this forever. So we need to calculate the time period for the maximum distance, that is, timeOut = 2 * MAX_DISTANCE / 100 / 340 * 1000000. The result of the constant part in this formula is approximately equal to 58.8.

```
5 float timeOut = MAX_DISTANCE * 60;
```

Then, in the setup(), set the pin to input or output, and set the serial port. In the loop(), we continue to use serial to print the value of subfunction getSonar(), which is used to return the measured distance of the HC_SR04. Make trigPin output a high level lasting for at least 10 μ s, according to the communication protocol.

```
24 digitalWrite(trigPin, HIGH); // make trigPin output high level lasting for 10  $\mu$ s to
triger HC_SR04,
25 delayMicroseconds(10);
26 digitalWrite(trigPin, LOW);
```

And then the echoPin of HC_SR04 will output a pulse. Time of the pulse is the total time of ultrasonic from transmitting to receiving. We use the pulseIn() function to return the time, and set the timeout.

```
27 pingTime = pulseIn(echoPin, HIGH, timeOut); // Wait HC-SR04 returning to the high level
and measure out this waitting time
```

Calculate the distance according to the time and return the value.

```
28 distance = (float)pingTime * soundVelocity / 2 / 10000; // calculate the distance
according to the time
29 return distance; // return the distance value
```

Finally, the code above will be called in the loop().

pulseIn(pin, value) / pulseIn(pin, value, timeout)

Return the length of the pulse (in microseconds) or 0 if no pulse is completed before the timeout (unsigned long).

Verify and upload the code to the control board, open the serial port monitoring window, turn the HC-SR04 probe towards the object plane, and observe the data in the serial port monitoring window.




Sketch 27.1.2

Before writing code, we need to import the library needed.

Click “Add .ZIP Library...” and then find NewPing.zip in libraries folder (this folder is in the folder unzipped from the ZIP file we provided). This library makes it easy to obtain the measuring distance.

You can also type "NewPing" into the library search bar to install the library.

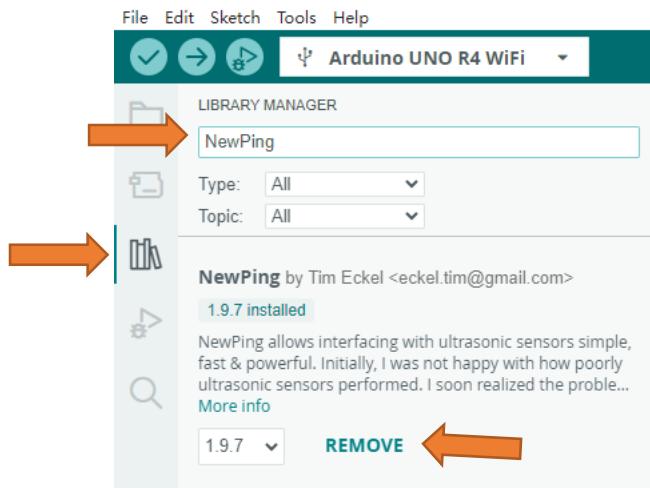

```

1 #include <NewPing.h>
2 #define trigPin 12 // define TrigPin
3 #define echoPin 11 // define EchoPin.
4 #define MAX_DISTANCE 200 // Maximum sensor distance is rated at 400-500cm.
5
6 NewPing sonar(trigPin, echoPin, MAX_DISTANCE); // NewPing setup of pins and maximum
distance.
7
8 void setup() {
9     Serial.begin(9600); // Open serial monitor at 9600 bauds to see ping results.
10 }
11
12 void loop() {
13     delay(50); // Wait 50ms between pings (about 20 pings/sec). 29ms should be the shortest
delay between pings.
14     Serial.print("Ping: ");
15     Serial.print(sonar.ping_cm()); // Send ping, get distance in cm and print result (0 =
outside set distance range)
16     Serial.println("cm");
17 }
```

First, include the header file of library, and then define the HC SR04 pin and the maximum measurement distance. And then write these parameters when we define the NewPing class objects.

```

1 #include <NewPing.h>
2 #define trigPin 12 // define TrigPin
```

```
3 #define echoPin 11 // define EchoPin.  
4 #define MAX_DISTANCE 200 // Maximum sensor distance is rated at 400-500cm.
```

And then, in the loop (), use sonar.ping_cm () to obtain the ultrasonic module detection distance with unit of centimeter. And print the distance out. When the distance exceeds range of 2cm~200cm, the printed data is zero.

NewPing Class

NewPing class can be used for SR04, SRF05, SRF06 and other sensors. An object that needs to be instantiated when the class is used. The three parameters of the constructor function are: trigger pin, echo pin and maximum measurement distance.

```
newPing sonar(trigger_pin, echo_pin [, max_cm_distance])
```

Some member function:

sonar.ping() - Send a ping and get the echo time (in microseconds) as a result.

sonar.ping_in() - Send a ping and get the distance in whole inches.

sonar.ping_cm() - Send a ping and get the distance in whole centimeters.

For more details, please refer to the NewPing.h in the NewPing library.

Verify and upload the code to control board and open the Serial Monitor. When you make ultrasonic probe toward a plane of an object, you can observe the distance between them.



Chapter 22 WiFi Working Modes


In this chapter, we'll focus on the WiFi infrastructure for control board.

Control board has 3 different WiFi operating modes: station mode, AP mode and AP+station mode. All WiFi programming projects must be configured with WiFi operating mode before using WiFi, otherwise WiFi cannot be used.

Project 22.1 Station mode

Component List

Control board x1

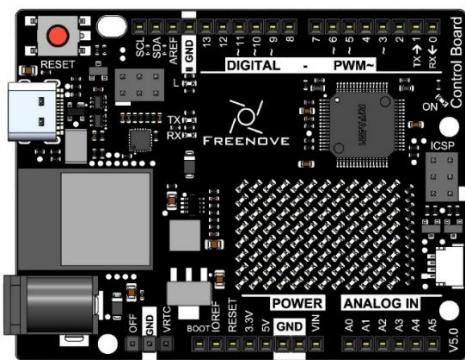

USB cable x1



Component knowledge


Station mode

When control board(wifi) selects Station mode, it acts as a WiFi client. It can connect to the router network and communicate with other devices on the router via WiFi connection. As shown below, the PC is connected to the router, and if control board(wifi) wants to communicate with the PC, it needs to be connected to the router.




Circuit

Connect Freenove control board(wifi)to the computer using the USB cable.

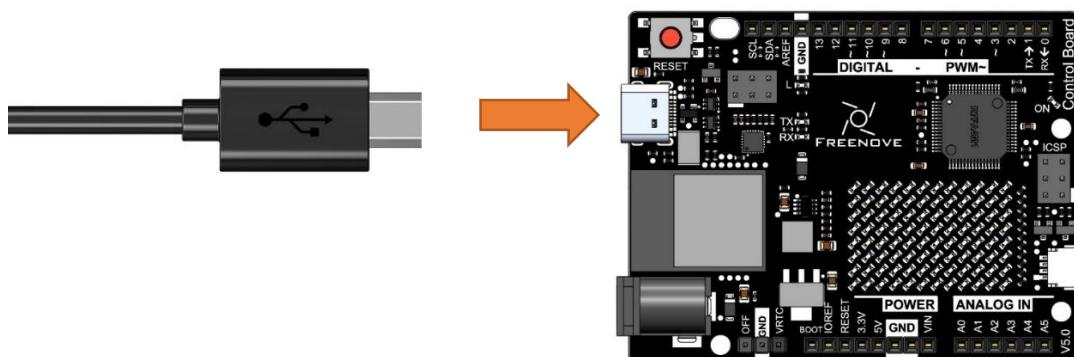

Sketch

Sketch_22.1.1

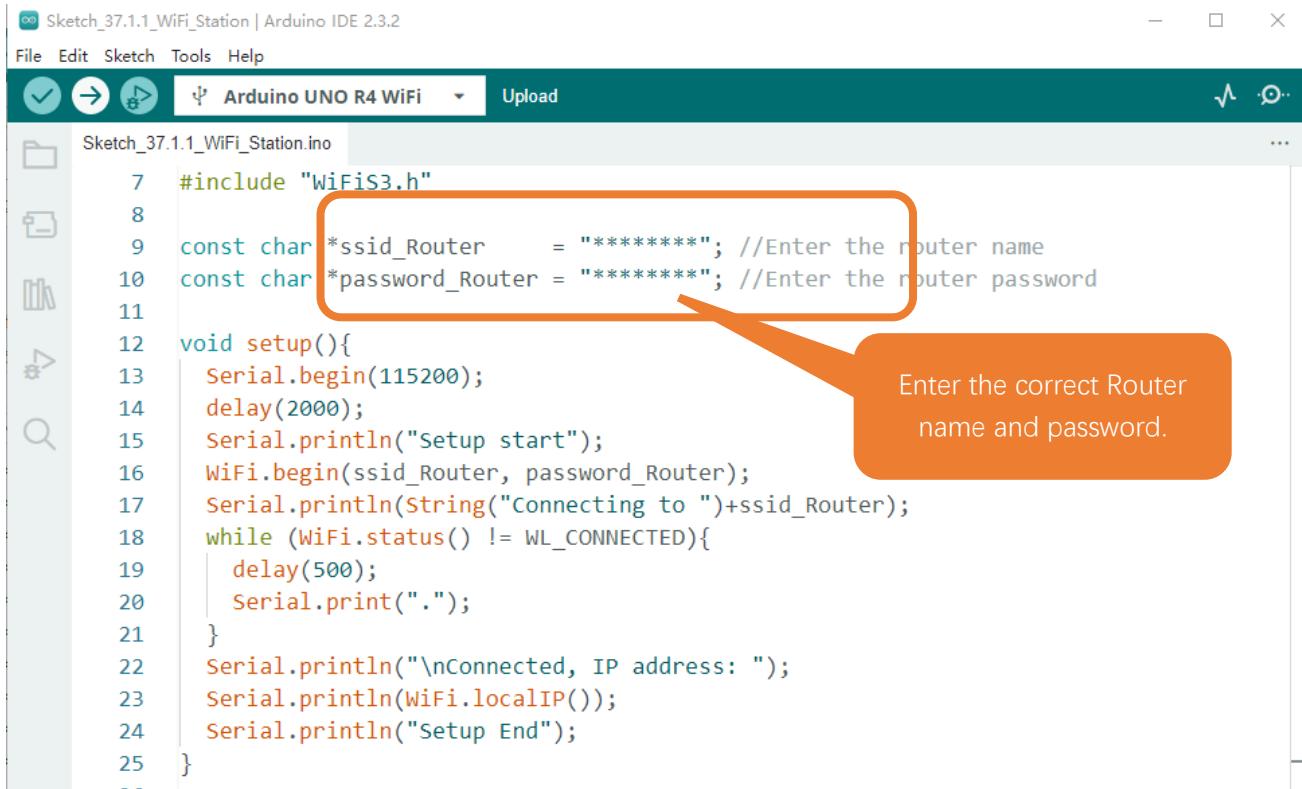

```

Sketch_37.1.1_WiFi_Station | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Sketch_37.1.1_WiFi_Station.ino
1 #include "WiFiS3.h"
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5
6 void setup(){
7     Serial.begin(115200);
8     delay(2000);
9     Serial.println("Setup start");
10    WiFi.begin(ssid_Router, password_Router);
11    Serial.println(String("Connecting to ") + ssid_Router);
12    while (WiFi.status() != WL_CONNECTED){
13        delay(500);
14        Serial.print(".");
15    }
16    Serial.println("\nConnected, IP address: ");
17    Serial.println(WiFi.localIP());
18    Serial.println("Setup End");
19 }
20
21
22
23
24
25 }
```

Enter the correct Router name and password.

Because the names and passwords of routers in various places are different, before the Sketch runs, users need to enter the correct router's name and password in the box as shown in the illustration above.

After making sure the router name and password are entered correctly, compile and upload codes to control board, open serial monitor and set baud rate to 115200. And then it will display as follows:



Output Serial Monitor X

Message (Enter to send message to 'Arduino UNO R4 WiFi' on 'COM15') No Line Ending 115200 baud

```

Setup start
Connecting to FYI_2.4G

Connected, IP address:
192.168.1.94
Setup End
```

Ln 23, Col 7 Arduino UNO R4 WiFi on COM15

When control board successfully connects to "ssid_Router", serial monitor will print out the IP address assigned to control board by the router.

The following is the program code:

```
1 #include "WiFiS3.h"
```

```

2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5
6 void setup() {
7     Serial.begin(115200);
8     delay(2000);
9     Serial.println("Setup start");
10    WiFi.begin(ssid_Router, password_Router);
11    Serial.println(String("Connecting to ") + ssid_Router);
12    while (WiFi.status() != WL_CONNECTED) {
13        delay(500);
14        Serial.print(".");
15    }
16    Serial.println("\nConnected, IP address: ");
17    Serial.println(WiFi.localIP());
18    Serial.println("Setup End");
19 }
20
21 void loop() {
22 }
```

Include the WiFi Library header file of control board.

```
#include "WiFiS3.h"
```

Enter correct router name and password.

```
const char *ssid_Router      = "*****"; //Enter the router name
const char *password_Router = "*****"; //Enter the router password
```

Set control board in Station mode and connect it to your router.

```
WiFi.begin(ssid_Router, password_Router);
```

Check whether control board has connected to router successfully every 0.5s.

```
while (WiFi.status() != WL_CONNECTED) {
    delay(500);
    Serial.print(".");
}
```

Serial monitor prints out the IP address assigned to control board.

```
Serial.println(WiFi.localIP());
```

Reference

Class Station

Every time when using WiFi, you need to include header file "WiFiS3.h".

begin(ssid, password,channel, bssid, connect): control board is used as Station to connect hotspot.

ssid: WiFi hotspot name

password: WiFi hotspot password

channel: WiFi hotspot channel number; communicating through specified channel; optional parameter

bssid: mac address of WiFi hotspot, optional parameter

connect: boolean optional parameter, defaulting to true. If set as false, then control board won't connect

WiFi.

config(local_ip, gateway, subnet, dns1, dns2): set static local IP address.

local_ip: station fixed IP address.

subnet: subnet mask

dns1,dns2: optional parameter. define IP address of domain name server

status: obtain the connection status of WiFi

local IP(): obtian IP address in Station mode

disconnect(): disconnect wifi

setAutoConnect(boolean): set automatic connection Every time control board is power on, it will connect WiFi aitomatically.

setAutoReconnect(boolean): set automatic reconnection Every time control board disconnects WiFi, it will reconnect to WiFi automatically.

Project 22.2 AP mode


Component List & Circuit

Component List & Circuit are the same as in Section 30.1.

Component knowledge


AP mode

When control board selects AP mode, it creates a hotspot network that is separate from the Internet and waits for other WiFi devices to connect. As shown in the figure below, Control board is used as a hotspot. If a mobile phone or PC wants to communicate with control board, it must be connected to the hotspot of control board. Only after a connection is established with control board can they communicate.

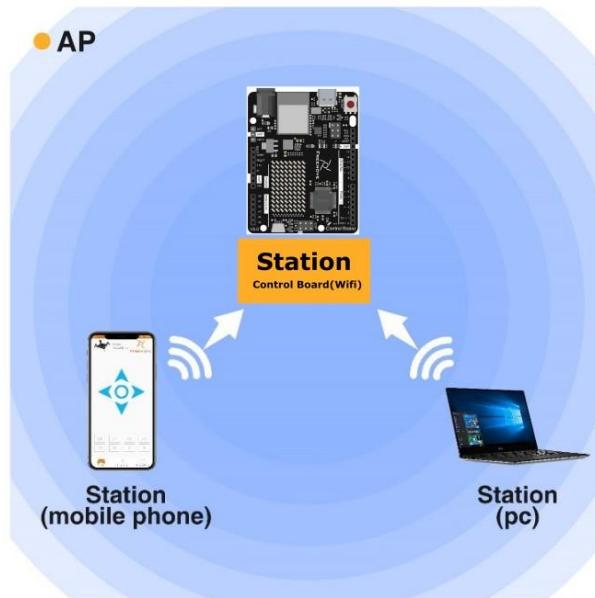


Circuit

Connect Freenove control board to the computer using the USB cable.

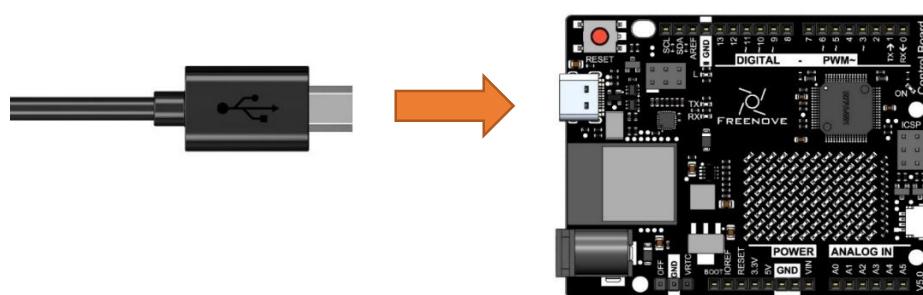

Sketch

Sketch_22.2.1

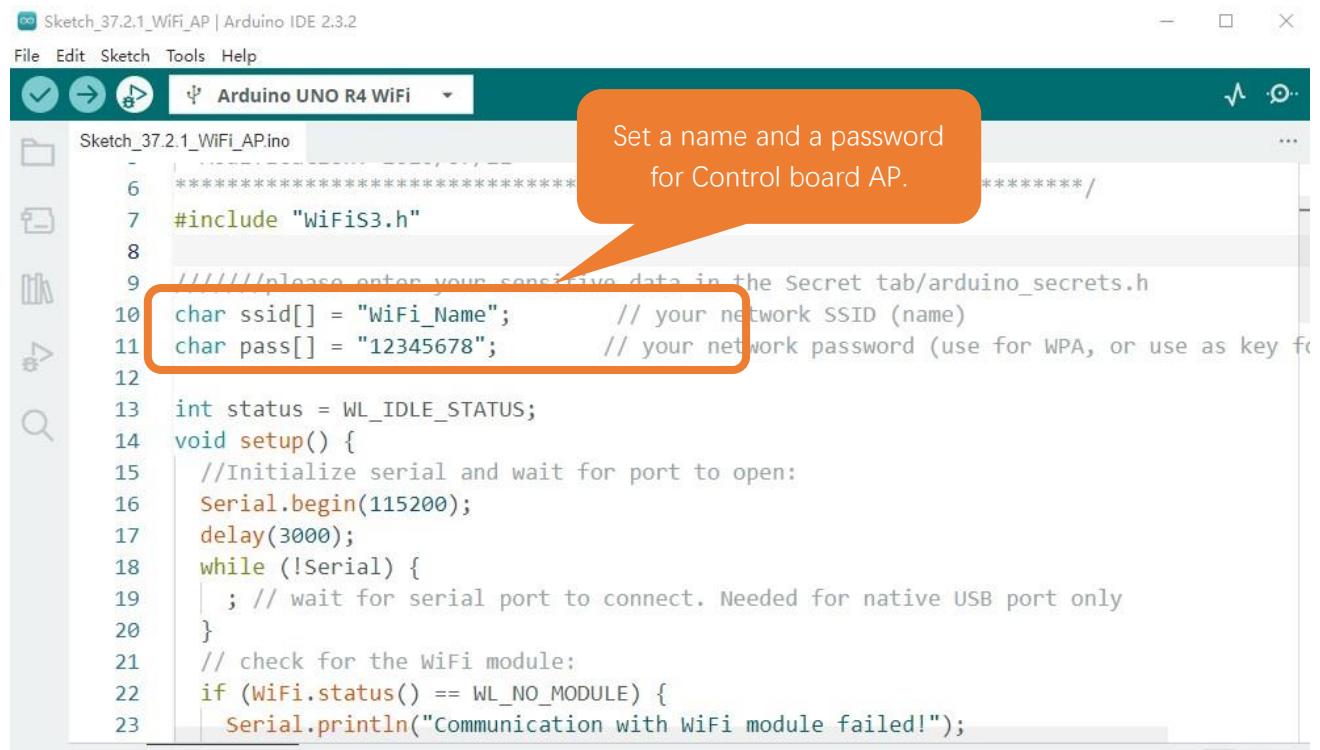

The screenshot shows the Arduino IDE interface with the sketch file "Sketch_22.2.1" open. The code is written in C++ and includes the WiFi library. A callout bubble highlights the lines where WiFi SSID and password are defined:

```
6  ****
7  #include "WiFi.h"
8
9  //please enter your sensitive data in the Secret tab/arduino_secrets.h
10 char ssid[] = "WiFi_Name";           // your network SSID (name)
11 char pass[] = "12345678";          // your network password (use for WPA, or use as key for
12
13 int status = WL_IDLE_STATUS;
14 void setup() {
15     //Initialize serial and wait for port to open:
16     Serial.begin(115200);
17     delay(3000);
18     while (!Serial) {
19         ; // wait for serial port to connect. Needed for native USB port only
20     }
21     // check for the WiFi module:
22     if (WiFi.status() == WL_NO_MODULE) {
23         Serial.println("Communication with WiFi module failed!");
```

Set a name and a password
for Control board AP.

Before the Sketch runs, you can make any changes to the AP name and password for control board in the box as shown in the illustration above. Of course, you can leave it alone by default.

Compile and upload codes to control board, open the serial monitor and set the baud rate to 115200. And then it will display as follows.




The screenshot shows the Arduino Serial Monitor window. The title bar says "Output" and "Serial Monitor". The main area displays the following text:

```
Message (Enter to send message to 'Arduino Uno R4 WiFi' on 'COM15')
Creating access point named: WiFi_Name
SSID: WiFi_Name
IP Address: 192.48.56.2
To see this page in action, open a browser to http://192.48.56.2
```

At the bottom right of the monitor window, it says "Ln 56, Col 36" and "Arduino Uno R4 WiFi on COM15". There are also icons for a speech bubble, a file, and a refresh.

When observing the print information of the serial monitor, turn on the WiFi scanning function of your phone, and you can see the ssid_AP on control board, which is called "WiFi_Name" in this Sketch. You can enter the password "12345678" to connect it or change its AP name and password by modifying Sketch.

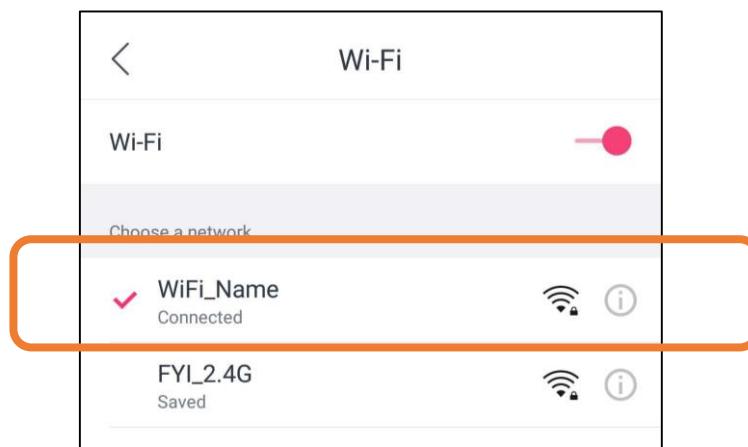

Sketch_37.2_AP_mode

The following is the program code:

```
1 #include "WiFIS3.h"
2
3 //+++++please enter your sensitive data in the Secret
4 tab/arduino_secrets.h
5 char ssid[] = "WiFi_Name";           // your network SSID (name)
6 char pass[] = "12345678";           // your network password (use for WPA, or
7 use as key for WEP)
8
9 int status = WL_IDLE_STATUS;
10 void setup() {
11     //Initialize serial and wait for port to open:
12     Serial.begin(9600);
13     while (!Serial) {
14         ; // wait for serial port to connect. Needed for native USB port only
15     }
16     // check for the WiFi module:
17     if (WiFi.status() == WL_NO_MODULE) {
18         Serial.println("Communication with WiFi module failed!");
19         // don't continue
20         while (true);
21     }
22
23     String fv = WiFi.firmwareVersion();
24     if (fv < WIFI_FIRMWARE_LATEST_VERSION) {
25         Serial.println("Please upgrade the firmware");
26     }
27     // by default the local IP address will be 192.168.4.1
28     // you can override it with the following:
29     WiFi.config(IPAddress(192,48,56,2));
30     // print the network name (SSID);
31     Serial.print("Creating access point named: ");
32     Serial.println(ssid);
33
34     // Create open network. Change this line if you want to create an WEP
35     network:
36     status = WiFi.beginAP(ssid, pass);
37     if (status != WL_AP_LISTENING) {
38         Serial.println("Creating access point failed");
39         // don't continue
40         while (true);
41     }
42 }
```

```

43 // wait 5 seconds for connection:
44 delay(5000);
45 // you're connected now, so print out the status
46 printWiFiStatus();
47 }
48
49 void loop() {
50 }
51
52 void printWiFiStatus() {
53 // print the SSID of the network you're attached to:
54 Serial.print("SSID: ");
55 Serial.println(WiFi.SSID());
56
57 // print your WiFi shield's IP address:
58 IPAddress ip = WiFi.localIP();
59 Serial.print("IP Address: ");
60 Serial.println(ip);
61
62 // print where to go in a browser:
63 Serial.print("To see this page in action, open a browser to http://");
64 Serial.println(ip);
65 }
66 }
```

Include WiFi Library header file of control board.

```
1 #include "WiFi.h"
```

Enter correct AP name and password.

```

5 char ssid[] = "WiFi_Name";           // your network SSID (name)
6 char pass[] = "12345678";           // your network password (use for WPA, or
use as key for WEP)
```

Check whether the AP is turned on successfully. If yes, print out IP and MAC address of AP established by control board. If no, print out the failure prompt.

```

36     status = WiFi.beginAP(ssid, pass);
37     if (status != WL_AP_LISTENING) {
38         Serial.println("Creating access point failed");
39         // don't continue
40         while (true);
41     }
...
43     // wait 5 seconds for connection:
44     delay(5000);
45     // you're connected now, so print out the status
46     printWiFiStatus();
```

```
47 ...
52 void printWiFiStatus() {
53     // print the SSID of the network you're attached to:
54     Serial.print("SSID: ");
55     Serial.println(WiFi.SSID());
56
57     // print your WiFi shield's IP address:
58     IPAddress ip = WiFi.localIP();
59     Serial.print("IP Address: ");
60     Serial.println(ip);
61
62     // print where to go in a browser:
63     Serial.print("To see this page in action, open a browser to http://");
64     Serial.println(ip);
65
66 }
```


Chapter 23 TCP/IP

In this chapter, we will introduce how control board(wifi) implements network communications based on TCP/IP protocol. There are two roles in TCP/IP communication, namely Server and Client, which will be implemented respectively with two projects in this chapter.

Project 23.1 As Client

In this section, control board(wifi) is used as Client to connect Server on the same LAN and communicate with it.

Component List

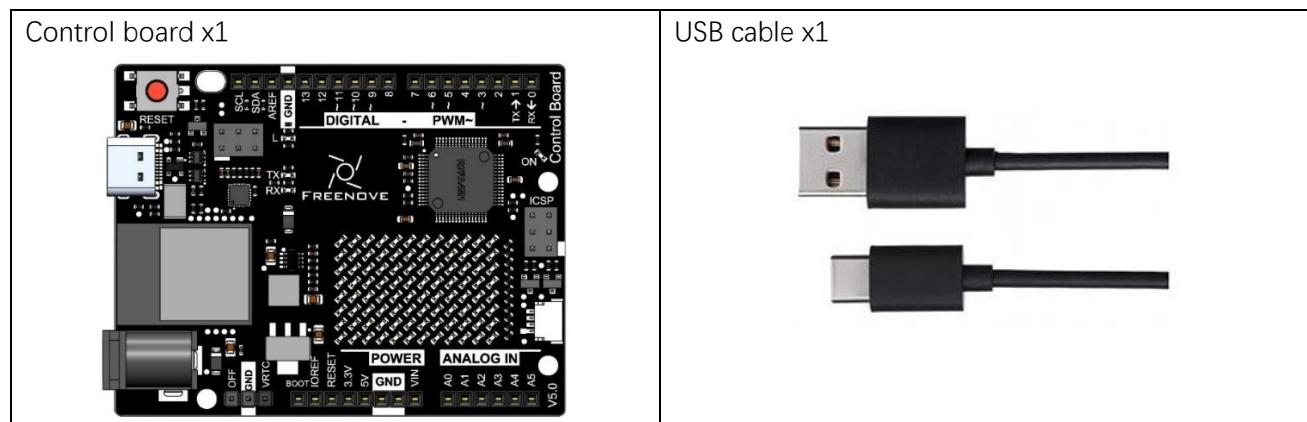


Component knowledge

TCP connection


Before transmitting data, TCP needs to establish a logical connection between the sending end and the receiving end. It provides reliable and error-free data transmission between the two computers. In the TCP connection, the client and the server must be clarified. The client sends a connection request to the server, and each time such a request is proposed, a "three-times handshake" is required.

Three-times handshake: In the TCP protocol, during the preparation phase of sending data, the client and the server interact three times to ensure the reliability of the connection, which is called "three-times handshake". The first handshake, the client sends a connection request to the server and waits for the server to confirm. The second handshake, the server sends a response back to the client informing that it has received the connection request.

The third handshake, the client sends a confirmation message to the server again to confirm the connection.

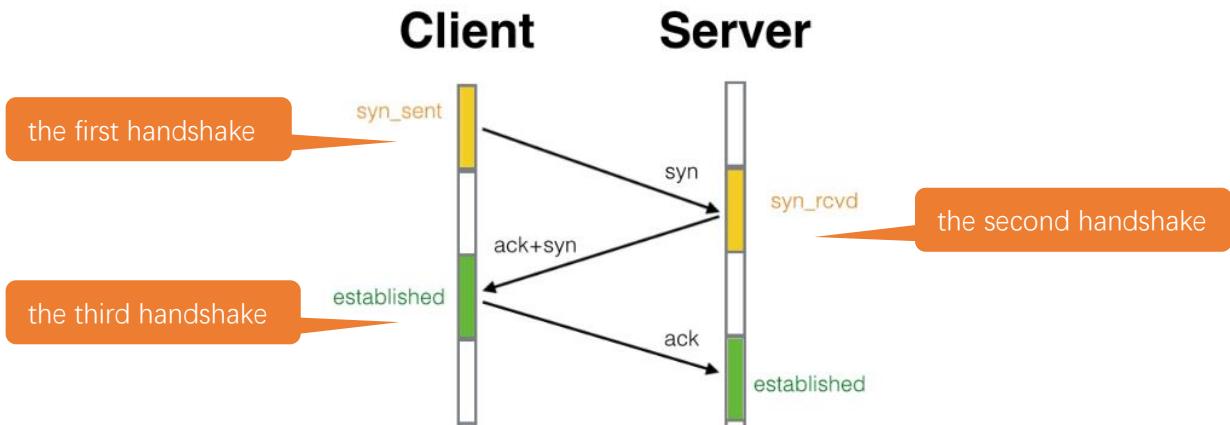

TCP is a connection-oriented, low-level transmission control protocol. After TCP establishes a connection, the client and server can send and receive messages to each other, and the connection will always exist as long as the client or server does not initiate disconnection. Each time one party sends a message, the other party will reply with an ack signal.

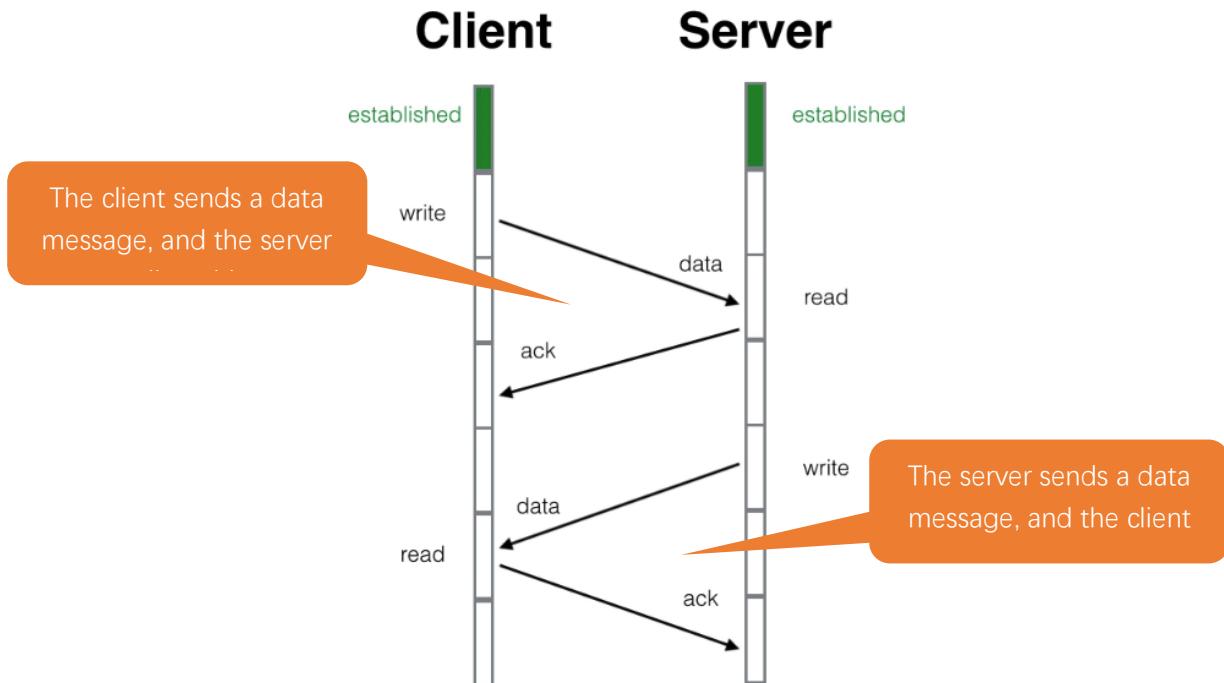

Install Processing

In this tutorial, we use Processing to build a simple TCP/IP communication platform.

If you've not installed Processing, you can download it by clicking <https://processing.org/download/>. You can choose an appropriate version to download according to your PC system.






The screenshot shows the official Processing website. At the top, there's a navigation bar with links for "Processing", "p5.js", "Processing.py", "Processing for Android", "Processing for Pi", and "Processing Foundation". Below the navigation bar is a large banner with the word "Processing" and a search bar. On the left side, there's a sidebar with links for "Cover", "Download", "Donate", "Exhibition", "Reference", "Libraries", "Tools", "Environment", "Tutorials", "Examples", "Books", "Overview", and "People". In the center, there's a large "P" logo inside a circle. To the right of the logo, it says "3.5.4 (17 January 2020)" and provides download links for "Windows 64-bit", "Windows 32-bit", "Linux 64-bit", and "Mac OS X". Below these links, there's a note about changes in 3.0 and a link to the "list of revisions".

Unzip the downloaded file to your computer. Click "processing.exe" as the figure below to run this software.


 core	2020/1/17 12:16
 java	2020/1/17 12:17
 lib	2020/1/17 12:16
 modes	2020/1/17 12:16
 tools	2020/1/17 12:16
 processing.exe	2020/1/17 12:16
 processing-java.exe	2020/1/17 12:16
 revisions.txt	2020/1/17 12:16

Use Server mode for communication

Install ControlP5.

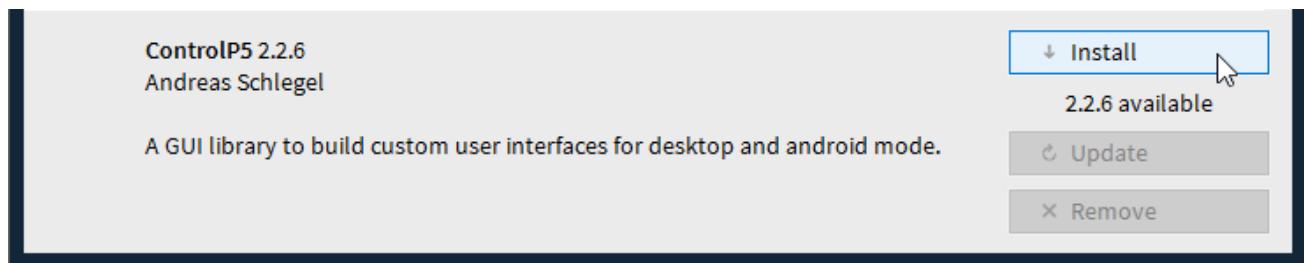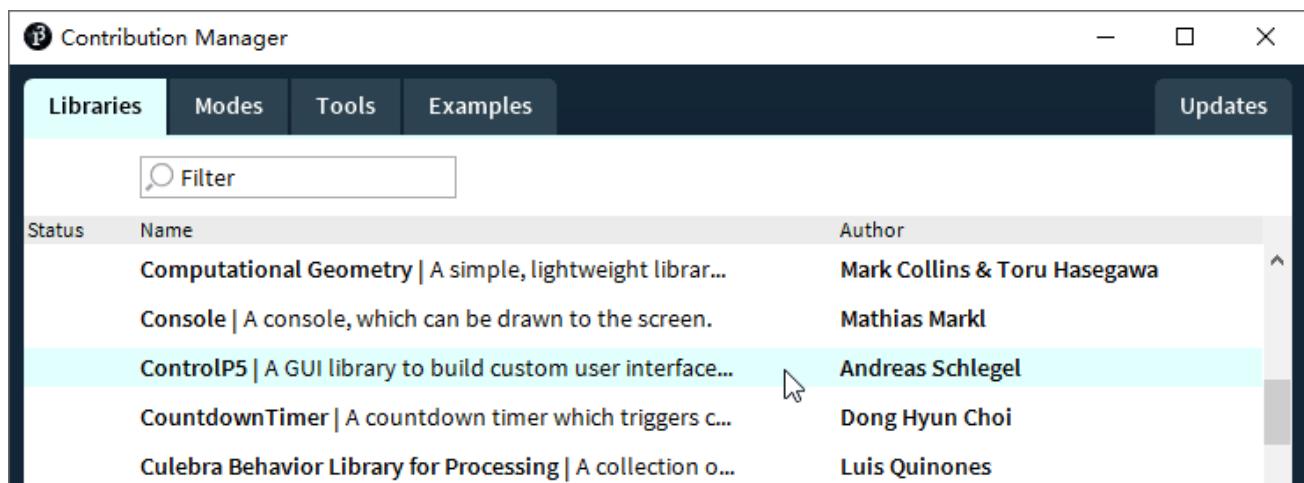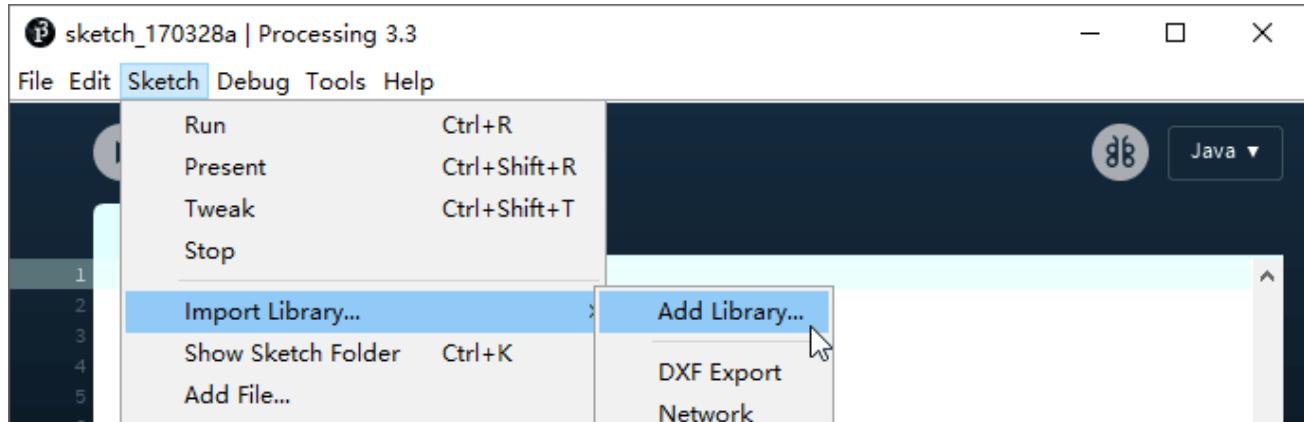

Open the “**Sketches\Sketches\Sketch_37.1_WiFiClient\sketchWiFi\sketchWiFi.pde**”, and click “Run”.

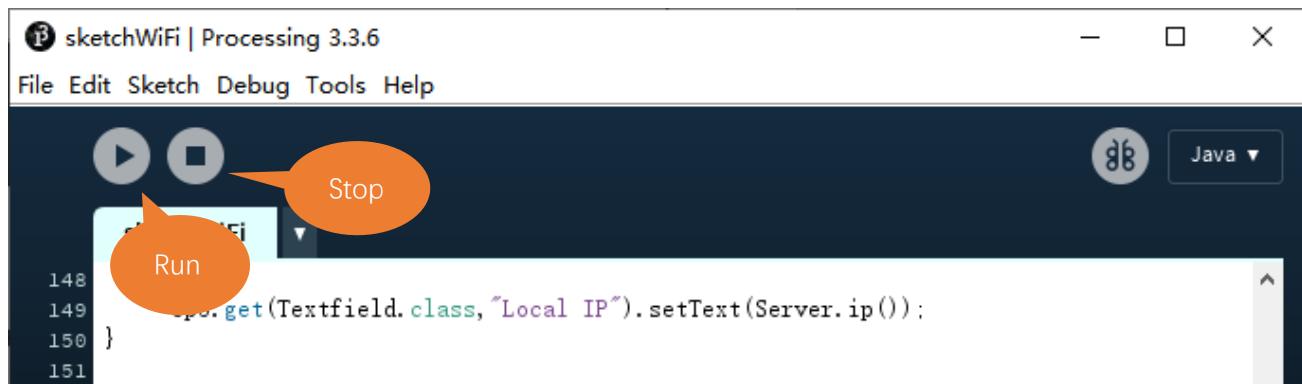


The new pop-up interface is as follows. If control board(wifi) is used as client, select TCP SERVER mode for sketchWiFi.



When sketchWiFi selects TCP SERVER mode, control board(wifi) Sketch needs to be changed according to sketchWiFi's displaying of LOCAL IP or LOCAL PORT.

If ESP32 serves as server, select TCP CLIENT mode for sketchWiFi.

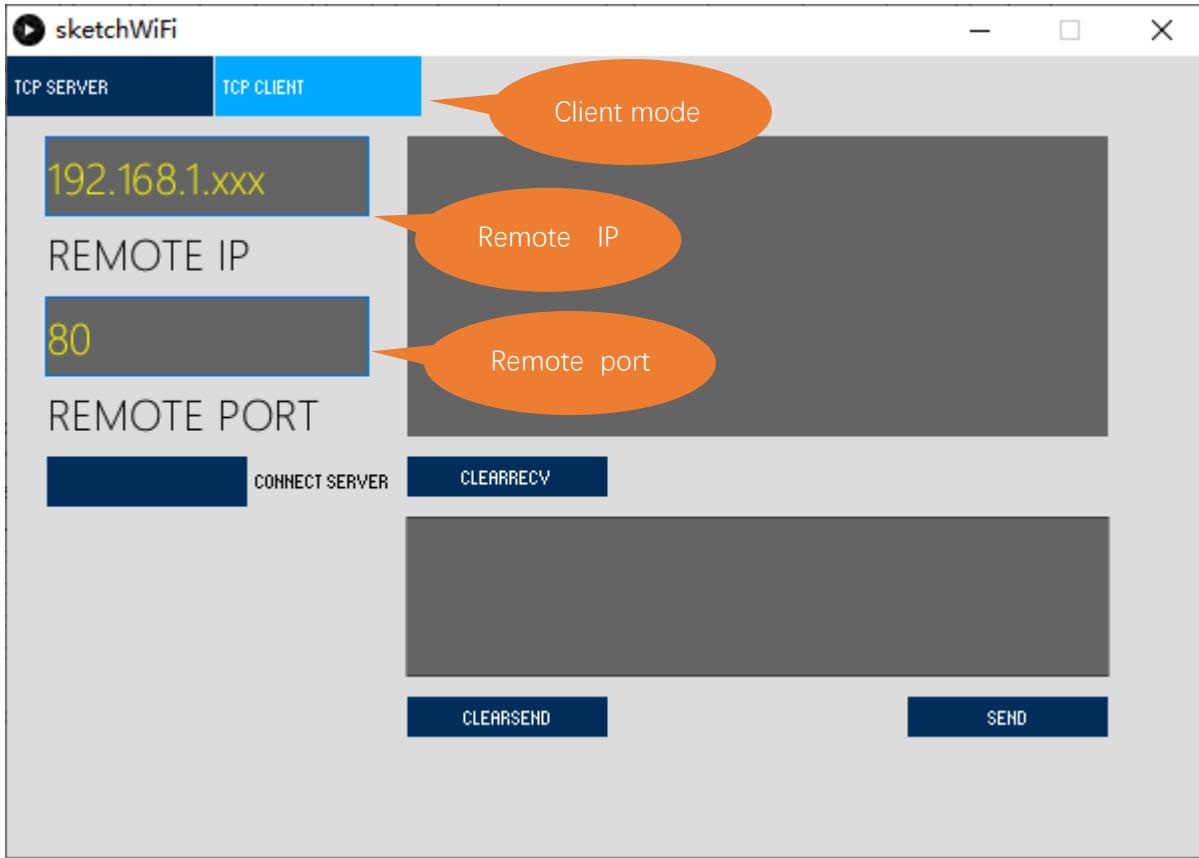

When sketchWiFi selects TCP CLIENT mode, the LOCAL IP and LOCAL PORT of sketchWiFi need to be changed according to the IP address and port number printed by the serial monitor.

Mode selection: select **Server mode/Client mode**.

IP address: In server mode, this option does not need to be filled in, and the computer will automatically obtain the IP address.

In client mode, fill in the remote IP address to be connected.

Port number: In server mode, fill in a port number for client devices to make an access connection.

In client mode, fill in port number given by the Server devices to make an access connection.

Start button: In server mode, push the button, then the computer will serve as server and open a port number for client to make access connection. During this period, the computer will keep monitoring.

In client mode, before pushing the button, please make sure the server is on, remote IP address and remote port number is correct; push the button, and the computer will make access connection to the remote port number of the remote IP as a client.


clear receive: clear out the content in the receiving text box

clear send: clear out the content in the sending text box

Sending button: push the sending button, the computer will send the content in the text box to others.


Circuit

Connect Freenove control board to the computer using USB cable.

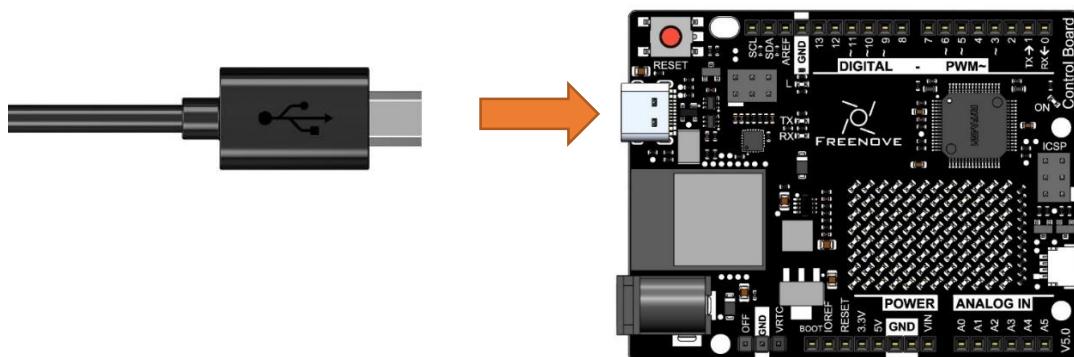

Sketch

Before running the Sketch, please open “sketchWiFi.pde.” first, and click “Run”.

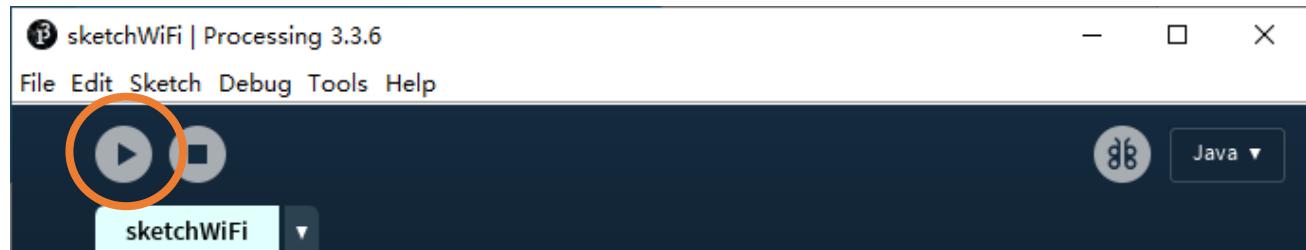

The newly pop up window will use the computer's IP address by default and open a data monitor port.



Next, open WiFiClient.ino. Before running it, please change the following information based on "LOCAL IP" and "LOCAL PORT" in the figure above.


```

Sketch_38.1.1_WiFiClient | Arduino IDE 2.3.2.
File Edit Sketch Tools Help
Select Board
Sketch_38.1.1_WiFiClient.ino
7 #include "WiFiS3.h"
8
9 const char *ssid_Router    = "*****"; //Enter the Router name
10 const char *password_Router = "*****"; //Enter the Router password
11 #define REMOTE_IP          "192.168.1.128" //input the Remote IP
12 #define REMOTE_PORT         8888           //input the remote port which is the remote server port
13 WiFiClient client;
14


```

REMOTE_IP needs to be filled in according to the interface of sketchWiFi.pde. Taking this tutorial as an example, its REMOTE_IP is “192.168.1.128”. Generally, by default, the ports do not need to change its value.

Click LISTENING, turn on TCP SERVER's data listening function and wait for control board(wifi) to connect.

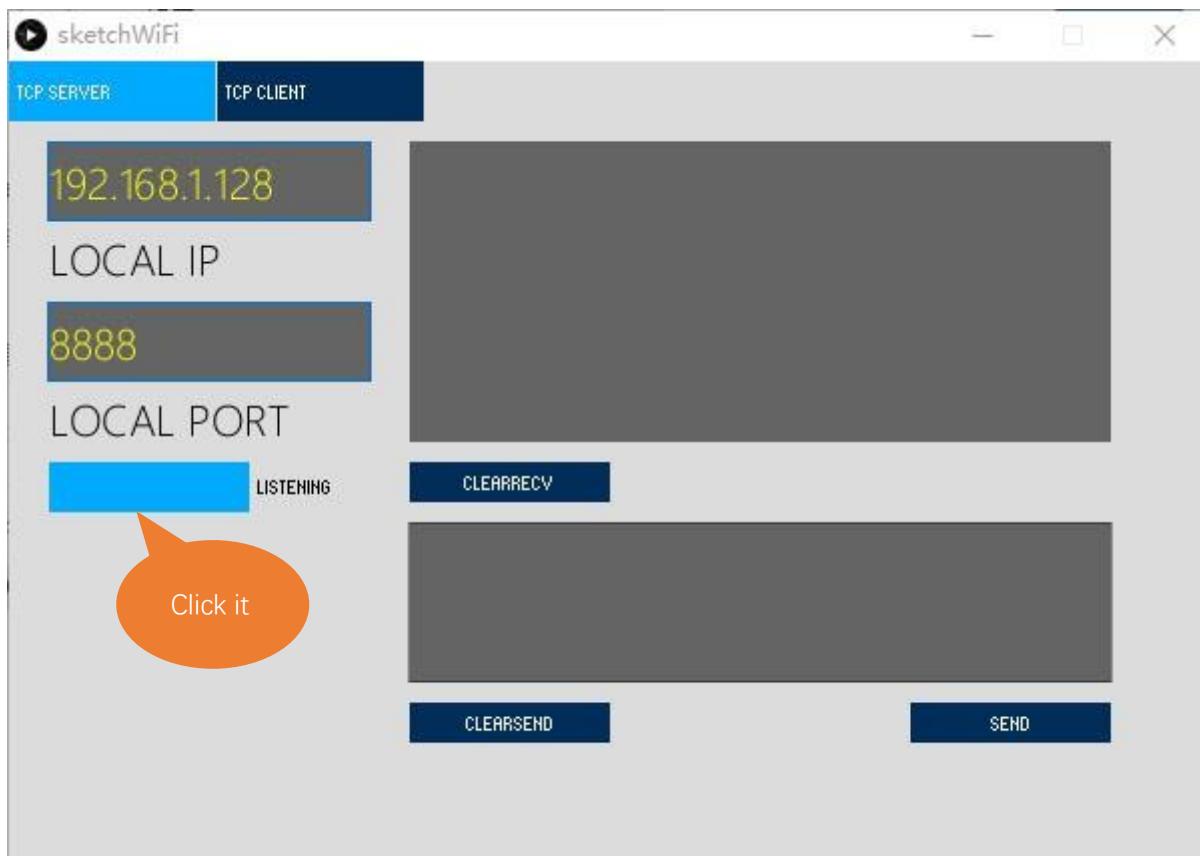

Compile and upload code to control board(wifi) , open the serial monitor and set the baud rate to 115200. control board(wifi) connects router, obtains IP address and sends access request to server IP address on the same LAN till the connection is successful. When connect successfully, control board(wifi) can send messages to server.

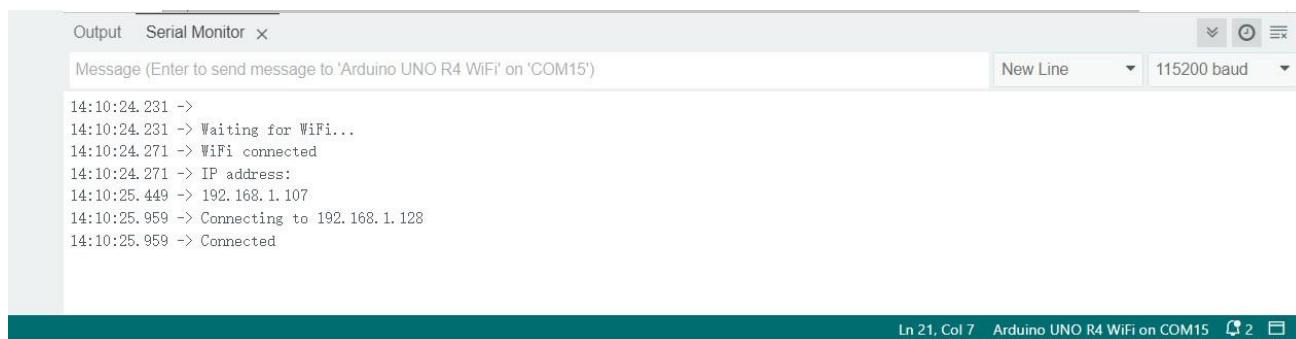


The screenshot shows the Arduino Serial Monitor window. The title bar says "Output Serial Monitor". The main area displays the following log messages:

```
Message (Enter to send message to 'Arduino UNO R4 WiFi' on 'COM15')
14:10:24.231 ->
14:10:24.231 -> Waiting for WiFi...
14:10:24.271 -> WiFi connected
14:10:24.271 -> IP address:
14:10:25.449 -> 192.168.1.107
14:10:25.959 -> Connecting to 192.168.1.128
14:10:25.959 -> Connected
```

The bottom status bar indicates "Ln 21, Col 7" and "Arduino UNO R4 WiFi on COM15".

Control board(wifi) connects with TCP SERVER, and TCP SERVER receives messages from control board(wifi), as shown in the figure below.

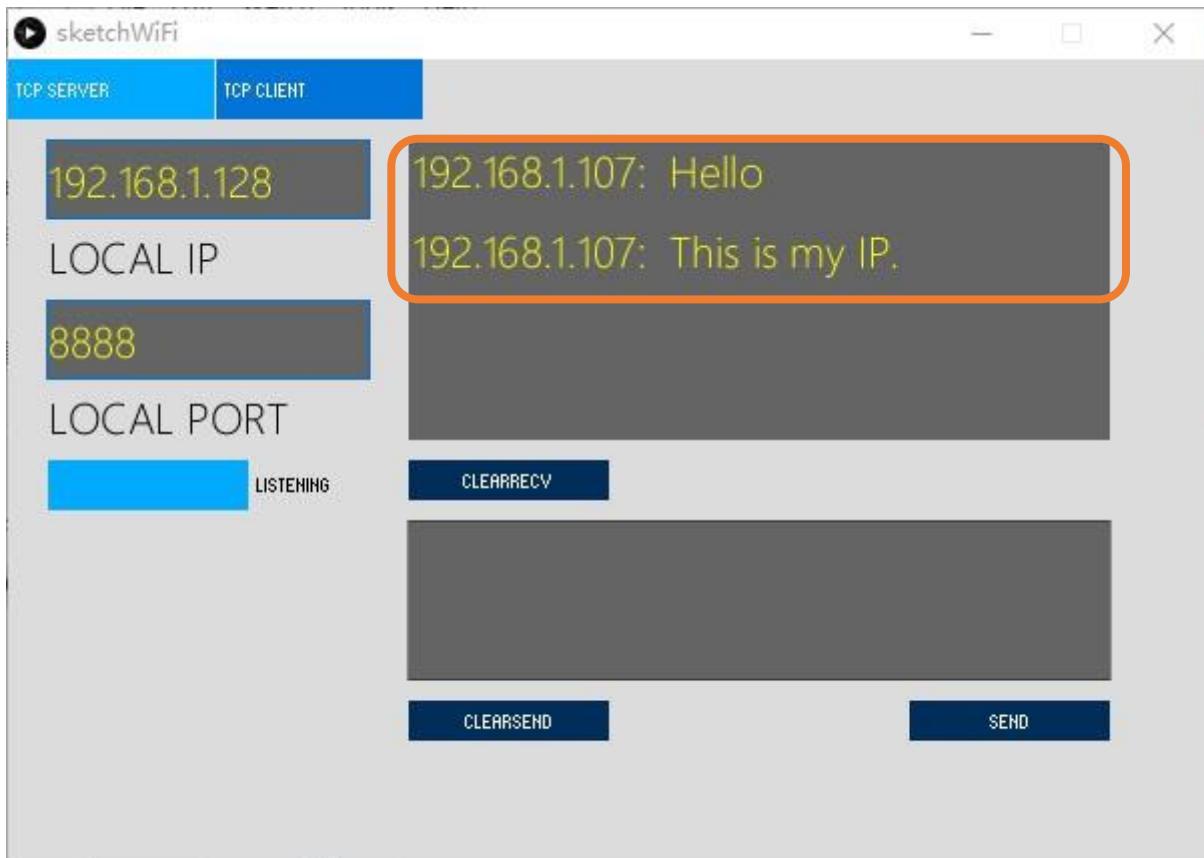

Sketch_38.1_As_Client

The following is the program code:

```
1 #include "WiFiS3.h"
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****" //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888     //input the remote port which is the remote provide
7 WiFiClient client;
8
9 void setup() {
10   Serial.begin(115200);
11   delay(10);
12
13   WiFi.begin(ssid_Router, password_Router);
14   Serial.print("\nWaiting for WiFi... ");
15   while (WiFi.status() != WL_CONNECTED) {
16     Serial.print(".");
17     delay(500);
18   }
19   Serial.println("");
20   Serial.println("WiFi connected");
21   Serial.println("IP address: ");
22   Serial.println(WiFi.localIP());
23   delay(500);
24
25   Serial.print("Connecting to ");
26   Serial.println(REMOTE_IP);
27
28   while (!client.connect(REMOTE_IP, REMOTE_PORT)) {
29     Serial.println("Connection failed.");
30     Serial.println("Waiting a moment before retrying... ");
31   }
32   Serial.println("Connected");
33   client.print("Hello\n");
34   client.print("This is my IP.\n");
35
36 void loop() {
37   if (client.available() > 0) {
38     delay(20);
39     //read back one line from the server
40     String line = client.readString();
41     Serial.println(REMOTE_IP + String(":") + line);
```

```

42 }
43 if (Serial.available() > 0) {
44     delay(20);
45     String line = Serial.readString();
46     client.print(line);
47 }
48 if (client.connected () == 0) {
49     client.stop();
50     WiFi.disconnect();
51 }
52 }
```

Add WiFi function header file.

```
1 #include "WiFiS3.h"
```

Enter the actual router name, password, remote server IP address, and port number.

```

3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****"   //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888      //input the remote port which is the remote provide
```

Apply for the method class of WiFiClient.

```
7 WiFiClient client;
```

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please push the reset key.

```

13 WiFi.begin(ssid_Router, password_Router);
14 Serial.print("\nWaiting for WiFi... ");
15 while (WiFi.status() != WL_CONNECTED) {
16     Serial.print(".");
17     delay(500);
18 }
```

Send connection request to remote server until connect successfully. When connect successfully, print out the connecting prompt on the serial monitor and send messages to remote server.

```

28 while (!client.connect(REMOTE_IP, REMOTE_PORT)) {//Connect to Server
29     Serial.println("Connection failed.");
30     Serial.println("Waiting a moment before retrying... ");
31 }
32 Serial.println("Connected");
33 client.print("Hello\n");
```

When control board(wifi) receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

```

37 if (client.available() > 0) {
38     delay(20);
39     //read back one line from the server
40     String line = client.readString();
41     Serial.println(REMOTE_IP + String(":") + line);
42 }
```

```
43 if (Serial.available() > 0) {  
44     delay(20);  
45     String line = Serial.readString();  
46     client.print(line);  
47 }
```

If the server is disconnected, turn off WiFi of control board.

```
48 if (client.connected () == 0) {  
49     client.stop();  
50     WiFi.disconnect();  
51 }
```

Reference

Class Client

Every time when using Client, you need to include header file "WiFiS3.h."

connect(ip, port, timeout)/connect(*host, port, timeout): establish a TCP connection.

ip, *host: ip address of target server

port: port number of target server

timeout: connection timeout

connected(): judge whether client is connecting. If return value is 1, then connect successfully; If return value is 0, then fail to connect.

stop(): stop tcp connection

print(): send data to server connecting to client

available(): return to the number of bytes readable in receive buffer, if no, return to 0 or -1.


read(): read one byte of data in receive buffer

readString(): read string in receive buffer

Project 23.2 As Server


In this section, control board(wifi) is used as a server to wait for the connection and communication of client on the same LAN.

Component List

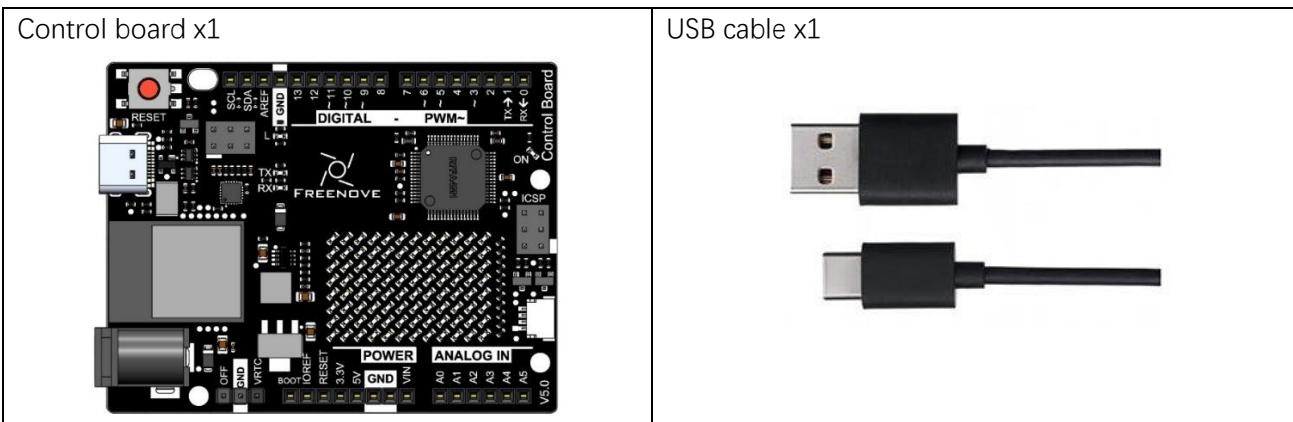

Circuit


Connect Freenove control board(wifi) to the computer using a USB cable.

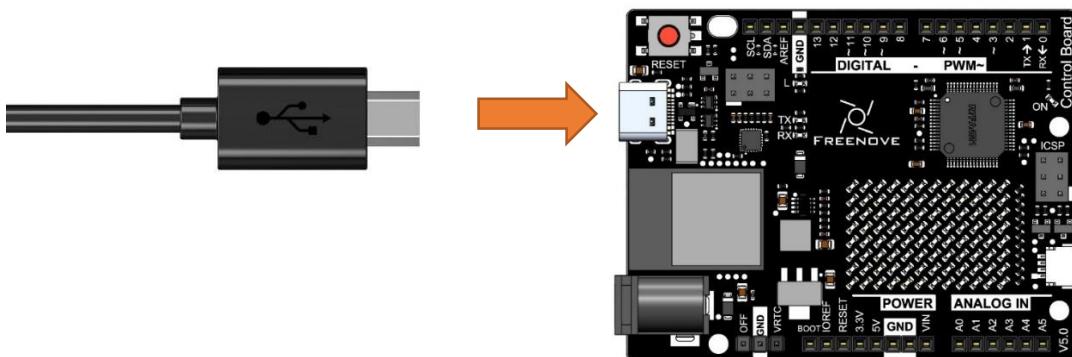

Sketch

Before running Sketch, please modify the contents of the box below first.

Sketch_23.2.1

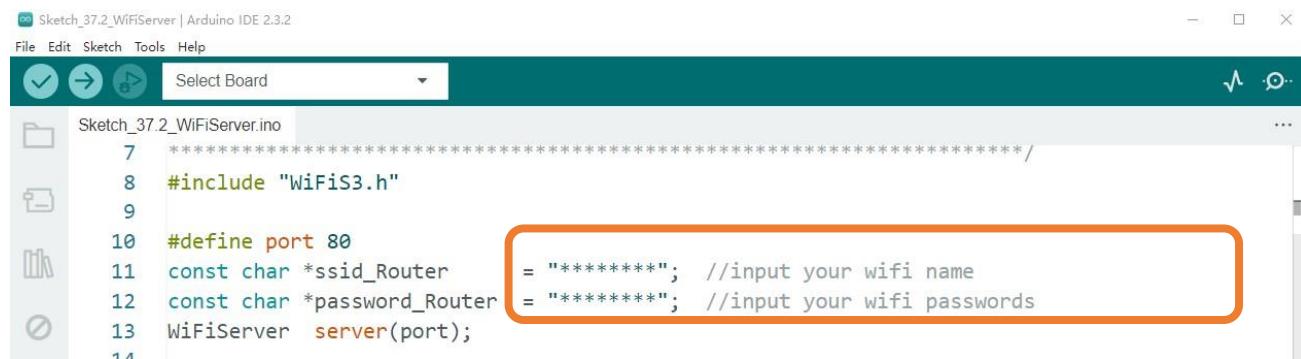


```

Sketch_37.2_WiFiServer | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Select Board
Sketch_37.2_WiFiServer.ino
7 *****
8 #include "WiFiS3.h"
9
10 #define port 80
11 const char *ssid_Router
12 const char *password_Router
13 WiFiServer server(port);
14

```

Compile and upload code to control board(wifi) , open the serial monitor and set the baud rate to 115200. Turn on server mode for control board(wifi), waiting for the connection of other devices on the same LAN. Once a device connects to server successfully, they can send messages to each other. If the control board(wifi) fails to connect to router, press the reset button as shown below and wait for control board(wifi) to run again.

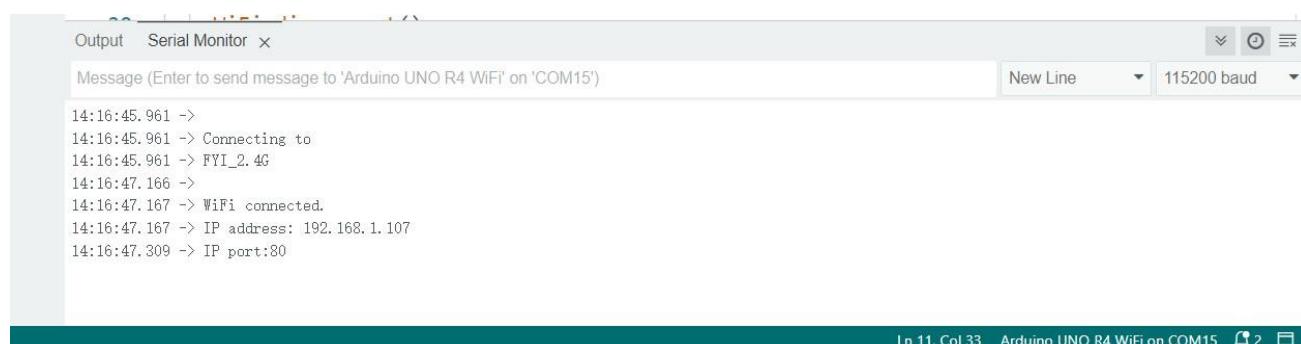


Serial Monitor



Processing:

Open the “**Sketches\Sketch_23.2.1_WiFiServer\sketchWiFi\sketchWiFi.pde**”.

Based on the messages printed by the serial monitor, enter correct IP address and serial port in Processing to establish connection and make communication.

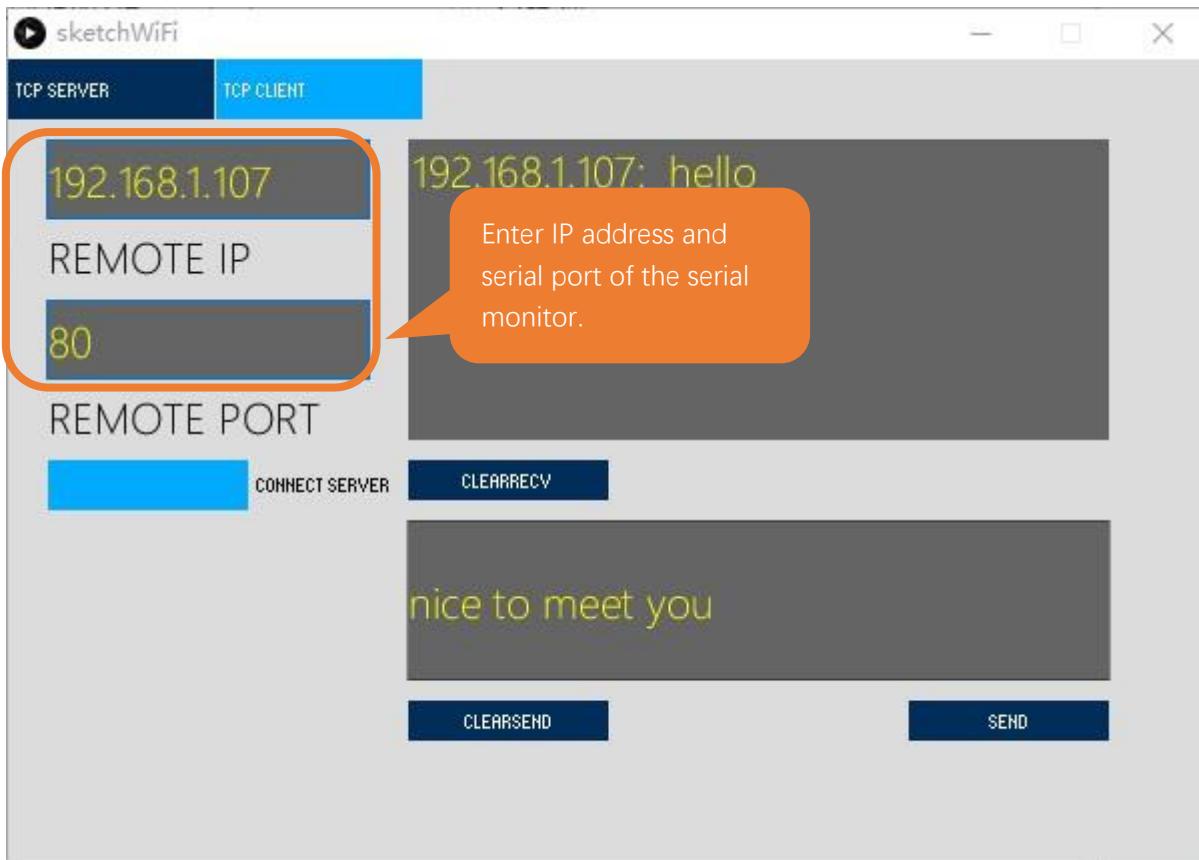

The following is the program code:

```

1 #include "WiFiS3.h"
2
3 #define port 80
4 const char *ssid_Router      = "*****"; //input your wifi name
5 const char *password_Router = "*****"; //input your wifi passwords
6 WiFiServer server(port);
7
8 void setup()
9 {
10     Serial.begin(115200);
11     Serial.printf("\nConnecting to ");
12     Serial.println(ssid_Router);
13     WiFi.disconnect();
14     WiFi.begin(ssid_Router, password_Router);
15     delay(1000);
16     while (WiFi.status() != WL_CONNECTED) {
17         delay(500);
18         Serial.print(".");
19     }
20     Serial.println("");
21     Serial.println("WiFi connected.");

```

```

22   Serial.print("IP address: ");
23   Serial.println(WiFi.localIP());
24   Serial.printf("IP port: %d\n", port);
25   server.begin(port);
26   WiFi.setAutoConnect(true);
27   WiFi.setAutoReconnect(true);
28 }
29
30 void loop() {
31   WiFiClient client = server.available();           // listen for incoming clients
32   if (client) {                                     // if you get a client
33     Serial.println("Client connected.");
34     while (client.connected()) {                   // loop while the client's connected
35       if (client.available()) {                   // if there's bytes to read from the
36         Serial.println(client.readStringUntil('\n')); // print it out the serial monitor
37         while(client.read()>0);                  // clear the wifi receive area cache
38       }
39       if(Serial.available()){                     // if there's bytes to read from the
36         Serial.println(client.readStringUntil('\n')); // print it out the client.
37         while(Serial.read()>0);                  // clear the wifi receive area cache
38       }
39     }
40     client.stop();                                // stop the client connecting.
41     Serial.println("Client Disconnected.");
42   }
43 }
44
45 }
```

Apply for method class of WiFiServer.

6	WiFiServer server(port); //Apply for a Server object whose port number is 80
---	--

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please push the reset key.

13	WiFi.disconnect();
14	WiFi.begin(ssid_Router, password_Router);
15	delay(1000);
16	while (WiFi.status() != WL_CONNECTED) {
17	delay(500);
18	Serial.print(".");
19	}
20	Serial.println("");
21	Serial.println("WiFi connected.");

Print out the IP address and port number of control board(wifi).

22	Serial.print("IP address: ");
23	Serial.println(WiFi.localIP()); //print out IP address of ESP32

24	Serial.printf("IP port: %d\n", port); //Print out ESP32's port number
----	---

Turn on server mode of control board(wifi), start automatic connection and turn on automatic reconnection.

25	server.begin(); //Turn ON ESP32 as Server mode
26	WiFi.setAutoConnect(true);
27	WiFi.setAutoReconnect(true);

When control board(wifi) receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

35	if (client.available()) { // if there's bytes to read from the client
36	Serial.println(client.readStringUntil('\n')); // print it out the serial monitor
37	while(client.read()>0); // clear the wifi receive area cache
38	}
39	if(Serial.available()){ // if there's bytes to read from the serial monitor
40	client.print(Serial.readStringUntil('\n')); // print it out the client.
41	while(Serial.read()>0); // clear the wifi receive area cache
42	}

Reference

Class Server

Every time use Server functionality, we need to include header file "WiFiS3.h".

WiFiServer(uint16_t port=80, uint8_t max_clients=4): create a TCP Server.

port: ports of Server; range from 0 to 65535 with the default number as 80.

max_clients: maximum number of clients with default number as 4.

begin(port): start the TCP Server.

port: ports of Server; range from 0 to 65535 with the default number as 0.

setNoDelay(bool nodelay): whether to turn off the delay sending functionality.

nodelay: true stands for forbidden Nagle algorithm.

close(): close tcp connection.

stop(): stop tcp connection.


Chapter 24 Control LED with Web

In this chapter, we will use control board to make a simple smart home. We will learn how to control LED lights through web pages.

Project 24.1 Control the LED with Web

In this project, we need to build a Web Service and then use the control board to control the LED through the Web browser of the phone or PC. Through this example, you can remotely control the appliances in your home to achieve smart home.

Component List

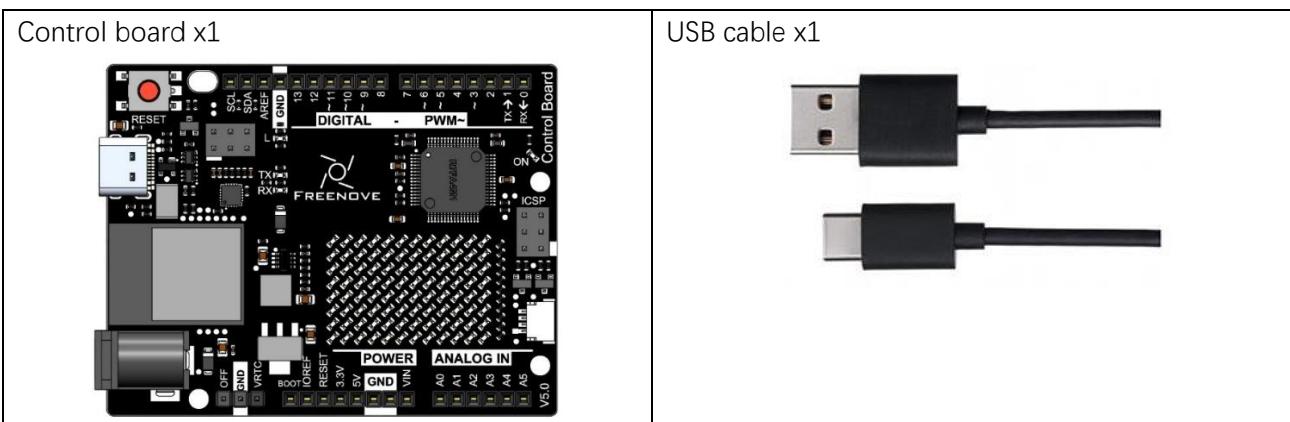

Component knowledge


HTML

HyperText Markup Language (HTML) is a standard Markup Language for creating web pages. It includes a set of tags that unify documents on the network and connect disparate Internet resources into a logical whole. HTML text is descriptive text composed of HTML commands that describe text, graphics, animations, sounds, tables, links, etc. The extension of the HTML file is HTM or HTML. Hyper Text is a way to organize information. It uses hyperlinks to associate words and charts in Text with other information media. These related information media may be in the same Text, other files, or files located on a remote computer. This way of organizing information connects the information resources distributed in different places, which is convenient for people to search and retrieve information.

The nature of the Web is hypertext Markup Language (HTML), which can be combined with other Web technologies (e.g., scripting languages, common gateway interfaces, components, etc.) to create powerful Web pages. Thus, HYPERtext Markup Language (HTML) is the foundation of World Wide Web (Web) programming, that is, the World Wide Web is based on hypertext. Hypertext Markup Language is called hypertext Markup language because the text contains so-called "hyperlink" points.

You can build your own WEB site using HTML, which runs on the browser and is parsed by the browser.

Example analysis is shown in the figure below:

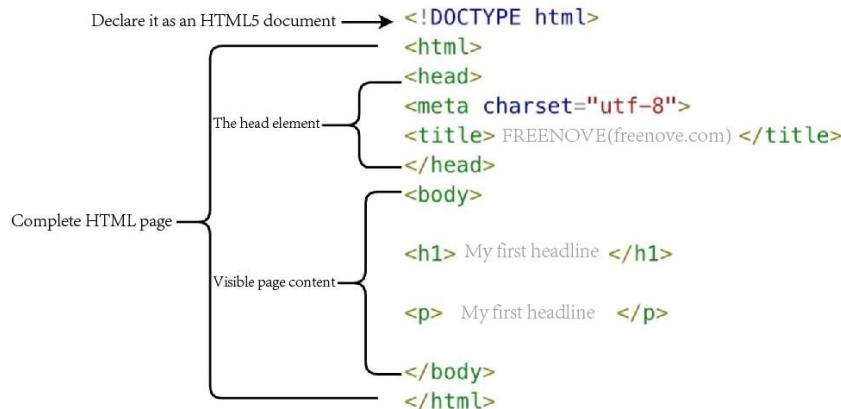

<!DOCTYPE html>: Declare it as an HTML5 document

<html>: Is the root element of an HTML page

<head>: Contains meta data for the document, such as < meta charset="utf-8" > Define the web page encoding format to UTF-8.

<title>: Notes the title of the document

<body>: Contains visible page content


<h1>: Define a big heading

<p>: Define a paragraph

For more information, please visit: <https://developer.mozilla.org/en-US/docs/Web/HTML>

Circuit

Connect the board to the computer using the USB cable.

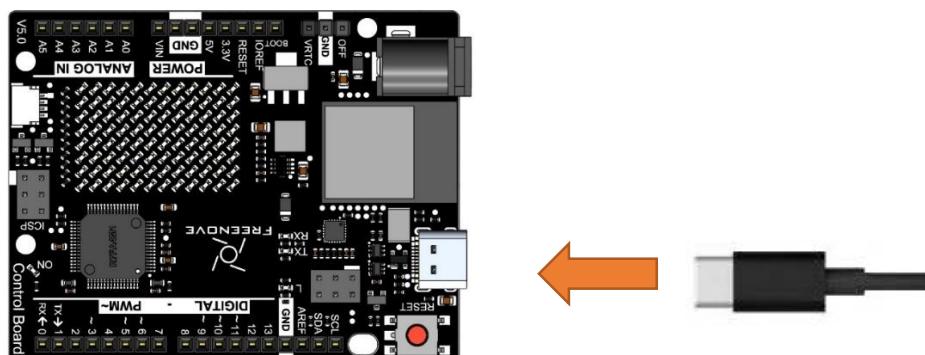

Sketch


Sketch_24.1.1

The screenshot shows the Arduino IDE interface with the sketch file "Sketch_24.1.1.ino" open. The code is as follows:

```
11  *****/
12 #include "WiFiS3.h"
13
14 // Replace with your network credentials
15 char* ssid      = "*****";
16 char* password = "*****".
17
18 // Set web server port number to 80
19 WiFiServer server(80);
20 // Variable to store the HTTP request
21 String header;
22 // Auxiliar variables to store the current output state
23 String PIN_LEDState = "OFF";
24
25 // Current time
26 unsigned long currentTime = millis();
27 // Previous time
28 unsigned long previousTime = 0;
29 // Define timeout time in milliseconds (example: 2000ms = 2s)
30 const long timeoutTime = 2000;
31
```

A callout bubble with the text "Enter the correct Router name and password." points to the line of code where the WiFi SSID and password are defined (lines 15-16).

Upload the code to the control board, open the serial monitor and set the board rate to 115200. After the board connects to WiFi successfully, the IP address will be printed out, as shown below.

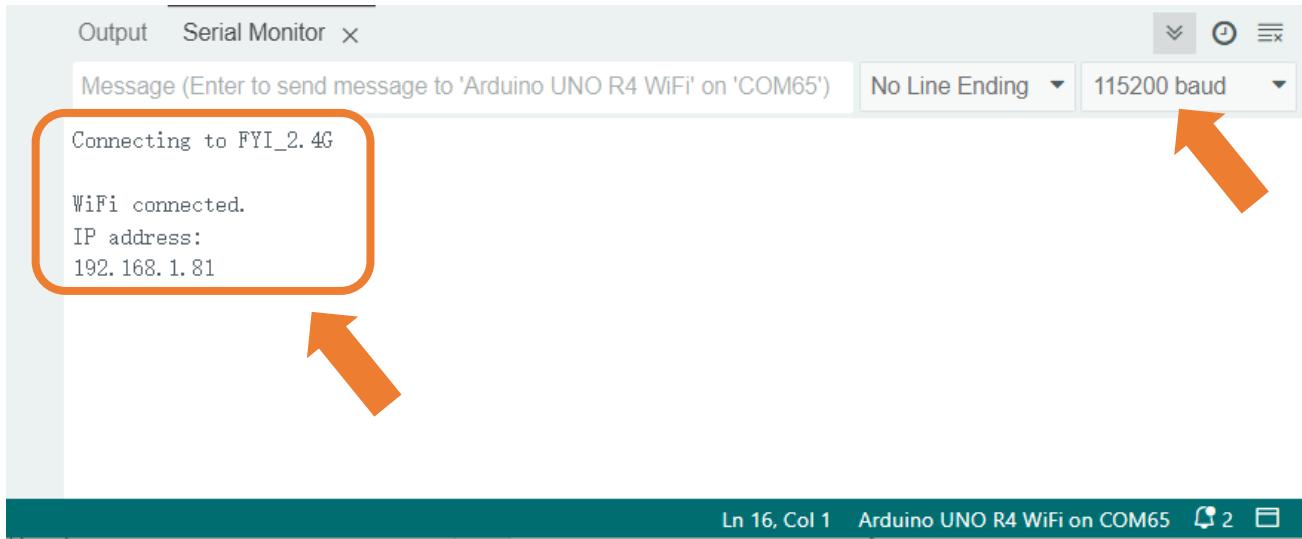

When Control Board successfully connects to "ssid_Router", serial monitor will print out the IP address assigned to Control Board by the router. Access <http://192.168.1.26> in a computer browser on the LAN. As shown in the following figure:



You can click the corresponding button to control the LED on and off.

The following is the program code:

```
1 #include "WiFiS3.h"
2
3 // Replace with your network credentials
4 char* ssid      = "*****";
```

```
5   char* password = "*****";
6
7   // Set web server port number to 80
8   WiFiServer server(80);
9   // Variable to store the HTTP request
10  String header;
11  // Auxiliar variables to store the current output state
12  String PIN_LEDState = "OFF";
13
14  // Current time
15  unsigned long currentTime = millis();
16  // Previous time
17  unsigned long previousTime = 0;
18  // Define timeout time in milliseconds (example: 2000ms = 2s)
19  const long timeoutTime = 2000;
20
21 void setup() {
22   Serial.begin(115200);
23   // Initialize the output variables as outputs
24   pinMode(LED_BUILTIN, OUTPUT);
25   digitalWrite(LED_BUILTIN, LOW);
26
27   // Connect to Wi-Fi network with SSID and password
28   Serial.print("Connecting to ");
29   Serial.println(ssid);
30   WiFi.begin(ssid, password);
31   while (WiFi.status() != WL_CONNECTED) {
32     delay(500);
33     Serial.print(".");
34   }
35   // Print local IP address and start web server
36   Serial.println("");
37   Serial.println("WiFi connected.");
38   Serial.println("IP address: ");
39   Serial.println(WiFi.localIP());
40   server.begin();
41 }
42 void loop() {
43   WiFiClient client = server.available(); // Listen for incoming clients
44   if (client) { // If a new client connects,
45     Serial.println("New Client."); // print a message out in the serial port
46     String currentLine = ""; // make a String to hold incoming data from the
47     client
48     currentTime = millis();
```

```
48     previousTime = currentTime;
49     while (client.connected() && currentTime - previousTime <= timeoutTime) { // loop while
50         // the client's connected
51         currentTime = millis();
52         if (client.available()) { // if there's bytes to read from the client,
53             char c = client.read(); // read a byte, then
54             Serial.write(c); // print it out the serial monitor
55             header += c;
56             if (c == '\n') { // if the byte is a newline character
57                 // if the current line is blank, you got two newline characters in a row.
58                 // that's the end of the client HTTP request, so send a response:
59                 if (currentLine.length() == 0) {
60                     // HTTP headers always start with a response code (e.g. HTTP/1.1 200 OK)
61                     // and a content-type so the client knows what's coming, then a blank line:
62                     client.println("HTTP/1.1 200 OK");
63                     client.println("Content-type:text/html");
64                     client.println("Connection: close");
65                     client.println();
66                     // turns the GPIOs on and off
67                     if (header.indexOf("GET /LED_BUILTIN/ON") >= 0) {
68                         Serial.println("LED_BUILTIN ON");
69                         PIN_LEDState = "ON";
70                         digitalWrite(LED_BUILTIN, HIGH);
71                     } else if (header.indexOf("GET /LED_BUILTIN/OFF") >= 0) {
72                         Serial.println("LED_BUILTIN OFF");
73                         PIN_LEDState = "OFF";
74                         digitalWrite(LED_BUILTIN, LOW);
75                     }
76                     // Display the HTML web page
77                     client.println("<!DOCTYPE html><html>");
78                     client.println("<head> <title>Control Board Web Server</title> <meta");
79                     name="viewport" content="width=device-width, initial-scale=1\">");
80                     client.println("<link rel="icon" href="data:, \">");
81                     // CSS to style the on/off buttons
82                     // Feel free to change the background-color and font-size attributes to fit your
83                     preferences
84                     client.println("<style>html {font-family: Helvetica; display:inline-block; margin:");
85                     0px auto; text-align: center;}</style>");
```

```

86         client.println(".button2{background-color: #4286f4;display: inline-block; border: none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size: 30px; margin: 2px; cursor: pointer;}</style></head>");
87         // Web Page Heading
88         client.println("<body><h1>Control Board Web Server</h1>\"");
89         client.println("<p>GPIO state: " + PIN_LEDState + "</p>\"");
90         client.println("<p><a href=\"/LED_BUILTIN/ON\"><button class=\"button button2\">ON</button></a></p>\"");
91         client.println("<p><a href=\"/LED_BUILTIN/OFF\"><button class=\"button button2\">OFF</button></a></p>\"");
92         client.println("</body></html>\"");
93         // The HTTP response ends with another blank line
94         client.println();
95         // Break out of the while loop
96         break;
97     } else { // if you got a newline, then clear currentLine
98         currentLine = "";
99     }
100    } else if (c != '\r') { // if you got anything else but a carriage return character,
101        currentLine += c;      // add it to the end of the currentLine
102    }
103 }
104 }
105 // Clear the header variable
106 header = "";
107 // Close the connection
108 client.stop();
109 Serial.println("Client disconnected.");
110 Serial.println("");
111 }
112 }
```

Include the WiFi Library header file of Control Board.

```
1 #include "WiFiS3.h"
```

Enter correct router name and password.

```
3 // Replace with your network credentials
4 char* ssid      = "*****";
5 char* password = "*****";
```

Set Control Board in Station mode and connect it to your router.

```
30 WiFi.begin(ssid, password);
```

Check whether Control Board has connected to router successfully every 0.5s.

```
31 while (WiFi.status() != WL_CONNECTED) {
32     delay(500);
```

```
33     Serial.print(".");
34 }
```

Serial monitor prints out the IP address assigned to Control Board.

```
39 Serial.println(WiFi.localIP());
```

Click the button on the web page to control the LED light on and off.

```
65 // turns the GPIOs on and off
66 if (header.indexOf("GET /LED_BUILTIN/ON") >= 0) {
67     Serial.println("LED_BUILTIN ON");
68     PIN_LEDState = "ON";
69     digitalWrite(LED_BUILTIN, HIGH);
70 } else if (header.indexOf("GET /LED_BUILTIN/OFF") >= 0) {
71     Serial.println("LED_BUILTIN OFF");
72     PIN_LEDState = "OFF";
73     digitalWrite(LED_BUILTIN, LOW);
74 }
```


Chapter 25 Bluetooth

In this chapter, we engage with the onboard Bluetooth module. Bluetooth and Wi-Fi are common wireless communication technologies.

Project 25.1 Bluetooth Low Energy Data Passthrough

In this section, we first learn how to make simple data transmission between the control board (Bluetooth) and our phone.

Component List

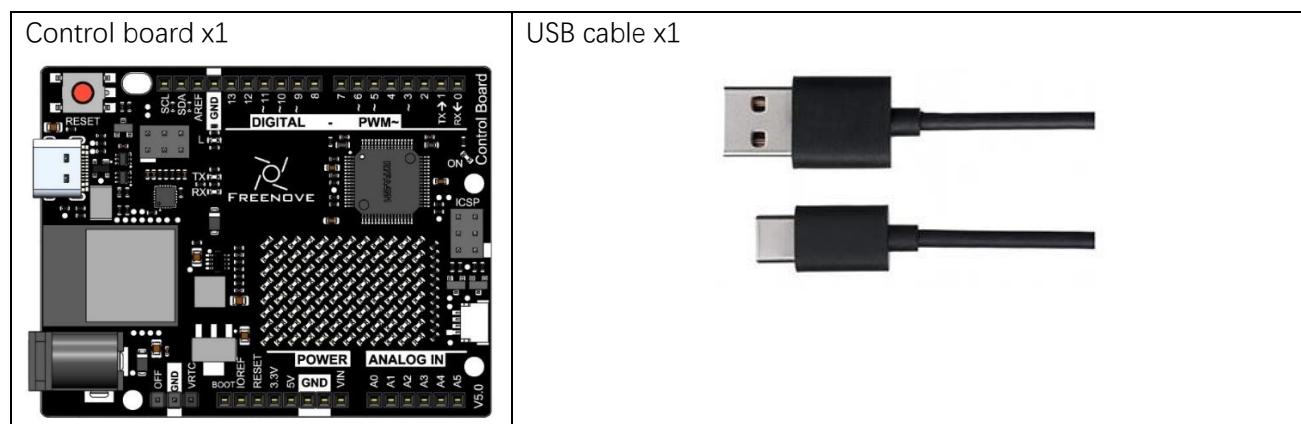

Component knowledge

Control board's integrated Bluetooth function Bluetooth is a short-distance communication system, which can be divided into two types, namely Bluetooth Low Energy(BLE) and Classic Bluetooth. There are two modes for simple data transmission: master mode and slave mode.

Master mode

In this mode, works are done in the master device and it can connect with a slave device. And we can search and select slave devices nearby to connect with. When a device initiates connection request in master mode, it requires information of the other Bluetooth devices including their address and pairing passkey. After finishing pairing, it can connect with them directly.


Slave mode

The Bluetooth module in slave mode can only accept connection request from a host computer, but cannot initiate a connection request. After connecting with a host device, it can send data to or receive from the host device.

Bluetooth devices can make data interaction with each other, as one is in master mode and the other in slave mode. When they are making data interaction, the Bluetooth device in master mode searches and selects devices nearby to connect to. When establishing connection, they can exchange data. When mobile phones exchange data with Control board, they are usually in master mode and Control board in slave mode.


The control board is equipped with an ESP32 module, which provides Bluetooth and Wi-Fi functions, supporting speeds up to 2Mbps. The ESP32 module integrates a tracking antenna, which allows you to take advantage of the development board's connectivity without an external antenna.

However, It is worth noting that the Wi-Fi and Bluetooth modules share the same antenna, which means you cannot use Bluetooth and Wi-Fi at the same time.

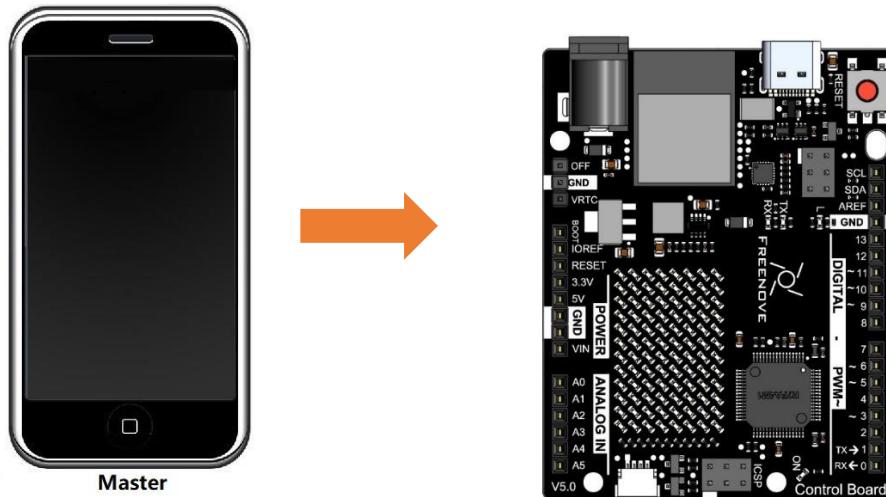

Circuit

Connect Freenove Control board to the computer using the USB cable.

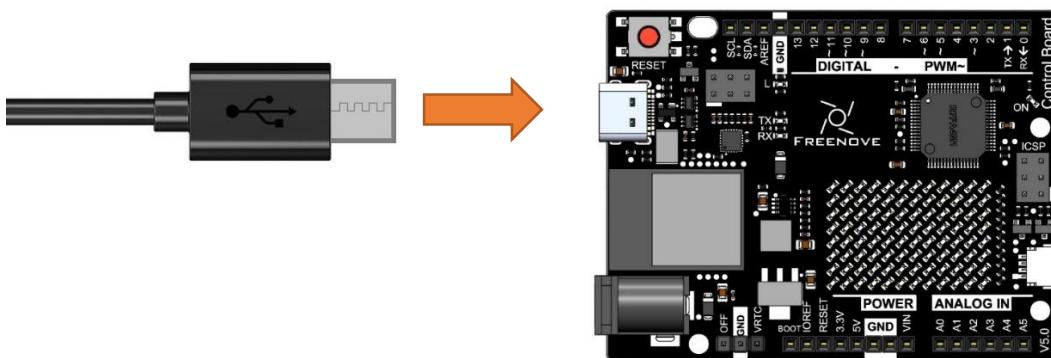


Sketch

Lightblue

If you can't install Serial Bluetooth on your phone, try LightBlue. If you do not have this software installed on your phone, you can refer to this link:

<https://apps.apple.com/us/app/lightblue/id557428110#?platform=iphone.>

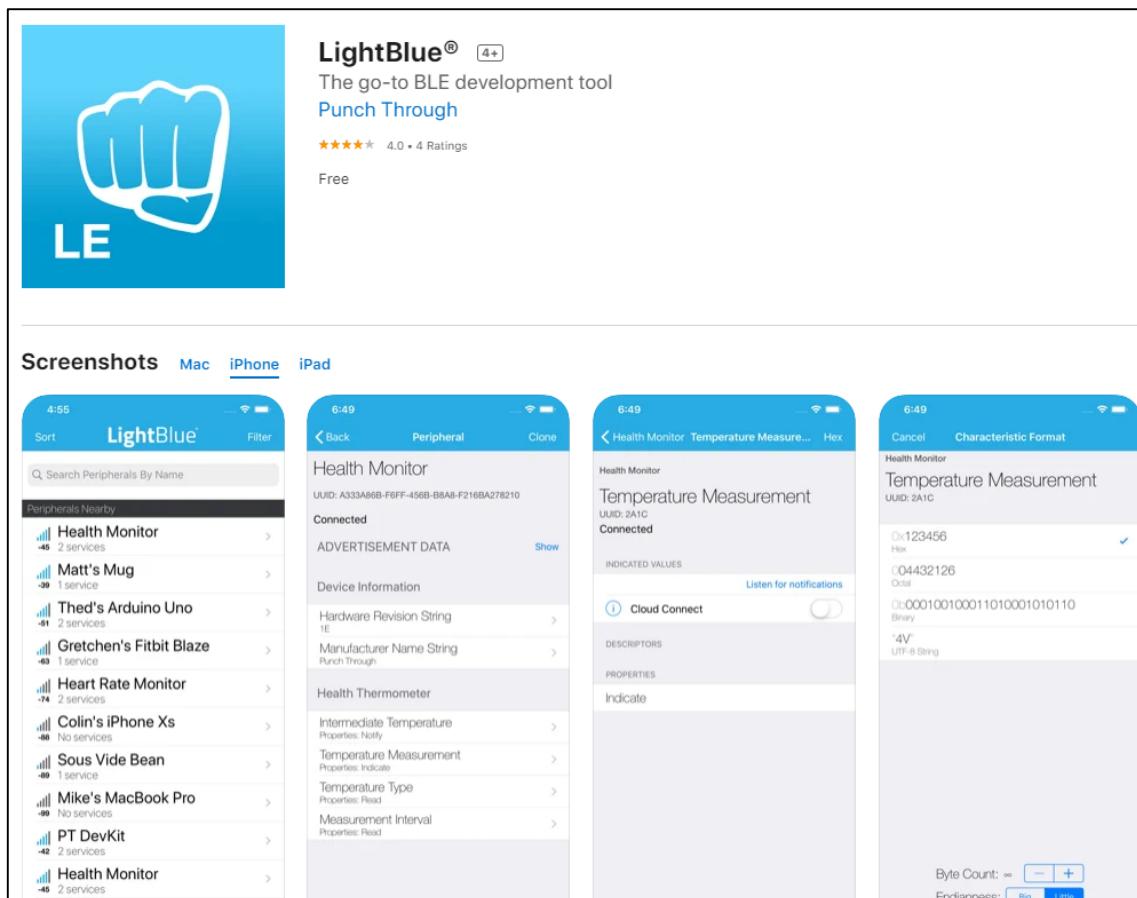



Step1. Upload the code of Project 25.1 to control board.

Step2. Click on serial monitor.

```

Sketch_40.1.1_BLE_USART | Arduino IDE 2.3.2
File Edit Sketch Tools Help
Sketch_40.1.1_BLE_USART.ino
1 const int ledPin = LED_BUILTIN; // pin to use for the LED
2 void setup() {
3     Serial.begin(9600);
4     while (!Serial)
5         ;
6     // set LED pin to output mode
7     pinMode(ledPin, OUTPUT);
8     // begin initialization
9     if (!BLE.begin()) {
10         Serial.println("starting Bluetooth® Low Energy module failed!");
11         while (1)
12             ;
13     }
14
15     BLE.setLocalName("Control_Board_V5.0_Bluetooth");
16     BLE.setAdvertisedService(ledService);
17     // add the characteristic to the service
18     ledService.addCharacteristic(switchCharacteristic);
19     // add service
20     BLE.addService(ledService);
21     // set the initial value for the characteristic.
22
23
24
25
26
27
28
29
30
31
32
33

```

Output

indexing: 26/69 Ln 55, Col 28 Arduino UNO R4 WiFi on COM15 [not connected] 2

Step3. Set baud rate to 9600.

Output Serial Monitor ×


Message (Enter to send message to 'Arduino UNO R4 WiFi' on 'COM15') New Line 9600 baud

15:47:23.293 ->Connected event, central: 76:b4:2c:f3:f2:d6
15:47:59.411 ->

Ln 16, Col 6 Arduino UNO R4 WiFi on COM15 2




Turn ON Bluetooth on your phone, and open the Lightblue APP.

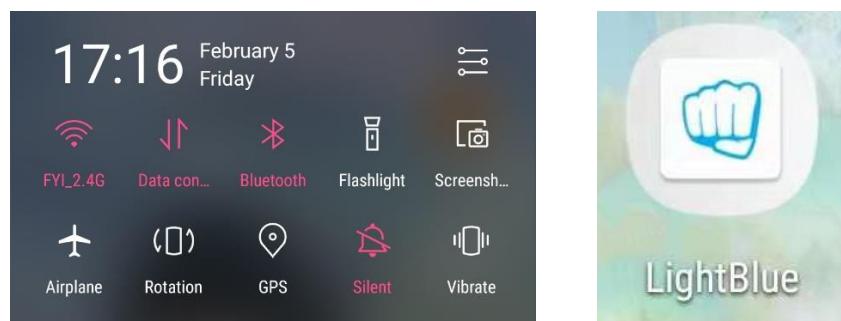

In the Scan page, swipe down to refresh the name of Bluetooth that the phone searches for. Click Control_Board_V5.0_Bluetooth.

Service UUID	Description
19b10000-e8f2-537e-4f6c-d104768a1214	Advertised service UUIDs
0x020106110614128A7604D16C4F7E53F2E80000B119	Raw advertisement packet
1D09436F6E74726F6C5F426F6172645F56352E305F4	
26C7565746F6F7468000000000000000000000000000000	
19b10001-e8f2-537e-4f6c-d104768a1214	Service Changed
214	Indicate
19b10000-e8f2-537e-4f6c-d104768a1214	19b10001-e8f2-537e-4f6c-d104768a1214
214	Readable, Writable, Notify

Click "Receive". Select the appropriate Data format in the box to the right of Data Format. For example, HEX for hexadecimal, utf-string for character, Binary for Binary, etc. Then click SUBSCRIBE.

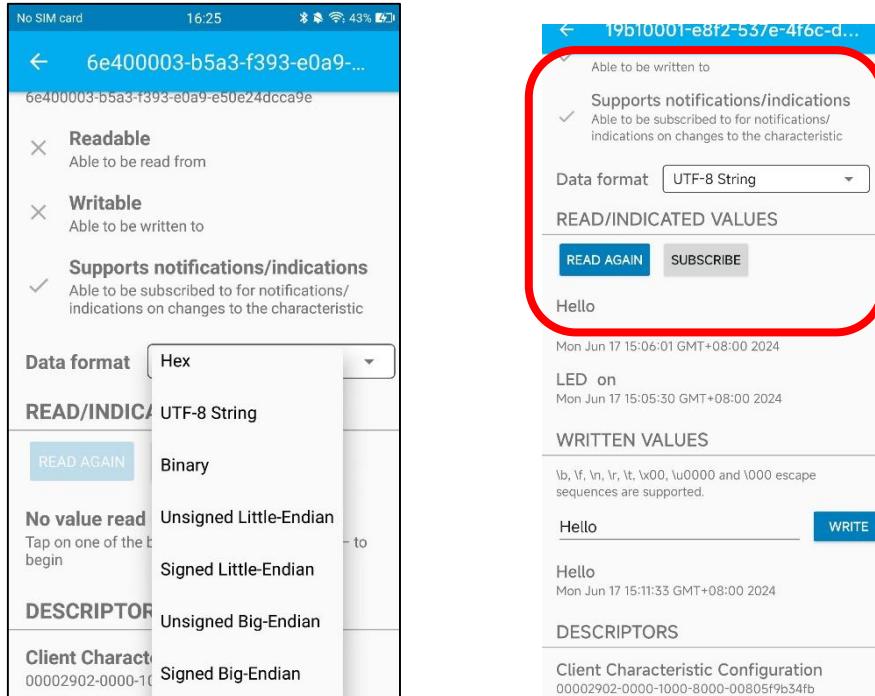

Back to the serial monitor on your computer. You can type anything in the left border of Send, and then click Send.



The last received data will be printed when the READ AGAIN button on the app is tapped.

◀ 19b10001-e8f2-437e-4f6c-d...

✓ Able to be written to

✓ Supports notifications/indications

✓ Able to be subscribed to for notifications/indications on changes to the characteristic

Data format **UTF-8 String**

READ/INDICATED VALUES

READ AGAIN **SUBSCRIBE**

Hello

Mon Jun 17 15:06:01 GMT+08:00 2024

LED on

Mon Jun 17 15:05:30 GMT+08:00 2024

WRITTEN VALUES

\b, \f, \n, \r, \t, \x00, \u0000 and \000 escape sequences are supported.

Hello **WRITE**


Hello

Mon Jun 17 15:11:33 GMT+08:00 2024

DESCRIPTORS

Client Characteristic Configuration
00002902-0000-1000-8000-00805f9b34fb

Similarly, you can select “Send” on your phone. Set Data format, and then enter anything in the sending box and click Write to send.

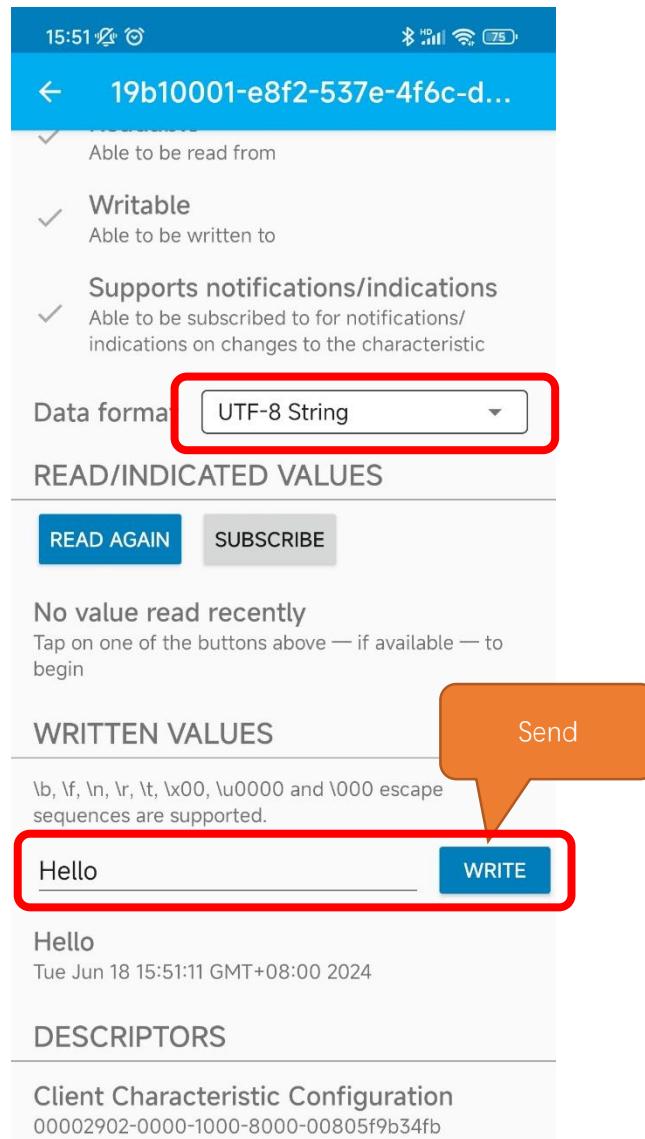

And the computer will receive the message from the mobile Bluetooth.



And now data can be transferred between your mobile phone and computer via control board.

The following is the program code:

```
1 #include <ArduinoBLE.h>
2 #include "String.h"
3
4 BLEService ledService("19B10000-E8F2-537E-4F6C-D104768A1214"); // Bluetooth® Low Energy LED
5 Service
6 // Bluetooth® Low Energy LED Switch Characteristic - custom 128-bit UUID, read and writable by
7 central
8 BLECharacteristic switchCharacteristic("19B10001-E8F2-537E-4F6C-D104768A1214", BLERead |
9 BLEWrite | BLENotify | BLEBroadcast, 20);
10
11 String inputString = ""; // a String to hold incoming data
12 bool stringComplete = false; // whether the string is complete
13 long lasttime = 0;
14
15 const int ledPin = LED_BUILTIN; // pin to use for the LED
16 void setup() {
17   Serial.begin(9600);
18   while (!Serial)
19     ;
20   // set LED pin to output mode
21   pinMode(ledPin, OUTPUT);
22   // begin initialization
23   if (!BLE.begin()) {
24     Serial.println("starting Bluetooth® Low Energy module failed!");
25     while (1)
26       ;
27   }
28
29   BLE.setLocalName("Control_Board_V5.0_Bluetooth");
30   BLE.setAdvertisedService(ledService);
31   // add the characteristic to the service
32   ledService.addCharacteristic(switchCharacteristic);
33   // add service
34   BLE.addService(ledService);
35   // set the initial value for the characteristic:
36   switchCharacteristic.writeValue("LED");
37
38   BLE.setEventHandler(BLEConnected, blePeripheralConnectHandler);
39   BLE.setEventHandler(BLEDisconnected, blePeripheralDisconnectHandler);
40
41   switchCharacteristic.setEventHandler(BLEWritten, switchCharacteristicWritten);
```

```
41 // start advertising
42 BLE.advertise();
43
44 Serial.println("Bluetooth® device active, waiting for connections..");
45 }
46
47 void loop() {
48 long nowtime = millis();
49 if (nowtime - lasttime > 1000) {
50 BLE.poll();
51 Serial.print(".");
52 if (Serial.available() > 0) {
53 String str = Serial.readString();
54 const char *newValue = str.c_str();
55 switchCharacteristic.writeValue(newValue);
56 }
57 lasttime = nowtime;
58 }
59 }
60
61 void blePeripheralConnectHandler(BLEDevice central) {
62 Serial.print("Connected event, central: ");
63 Serial.println(central.address());
64 }
65
66 void blePeripheralDisconnectHandler(BLEDevice central) {
67 Serial.print("Disconnected event, central: ");
68 Serial.println(central.address());
69 }
70
71 void switchCharacteristicWritten(BLEDevice central, BLECharacteristic characteristic) {
72 Serial.print("Characteristic event, written: ");
73 uint8_t characteristicValue[20];
74 int bytesRead = characteristic.readValue(characteristicValue, sizeof(characteristicValue));
75 Serial.print("Received bytes: ");
76 for (int i = 0; i < bytesRead; i++) {
77 Serial.print(characteristicValue[i], HEX);
78 Serial.print(" ");
79 }
80 Serial.println();
81 String receivedString = "";
82 for (int i = 0; i < bytesRead; i++) {
83 receivedString += (char)characteristicValue[i];
84 }
```

```

85   Serial.println("Value: " + receivedString);
86 }
```

Initialize the BLE function and name it.

```

27   BLE.setLocalName("Control_Board_V5.0_Bluetooth");
```

Write a Callback function for BLE server to manage connection of BLE.

```

61   void blePeripheralConnectHandler(BLEDevice central) {
62     Serial.print("Connected event, central: ");
63     Serial.println(central.address());
64   }
65
66   void blePeripheralDisconnectHandler(BLEDevice central) {
67     Serial.print("Disconnected event, central: ");
68     Serial.println(central.address());
69 }
```

When the mobile phone send data to control board via BLE Bluetooth, it will print them out with serial port;

When the serial port of control board receive data, it will send them to mobile via BLE Bluetooth.




```

52   if (Serial.available() > 0) {
53     String str = Serial.readString();
54     const char *newValue = str.c_str();
55     switchCharacteristic.writeValue(newValue);
56   }
...
71   void switchCharacteristicWritten(BLEDevice central, BLECharacteristic characteristic) {
72     Serial.print("Characteristic event, written: ");
73     uint8_t characteristicValue[20];
74     int bytesRead = characteristic.readValue(characteristicValue, sizeof(characteristicValue));
75     Serial.print("Received bytes: ");
76     for (int i = 0; i < bytesRead; i++) {
77       Serial.print(characteristicValue[i], HEX);
78       Serial.print(" ");
79     }
80     Serial.println();
81     String receivedString = "";
82     for (int i = 0; i < bytesRead; i++) {
83       receivedString += (char)characteristicValue[i];
84     }
85     Serial.println("Value: " + receivedString);
86 }
```

Project 25.2 Control LED with Bluetooth

In this section, we will further learn how to use Bluetooth to control an LED.

Component List

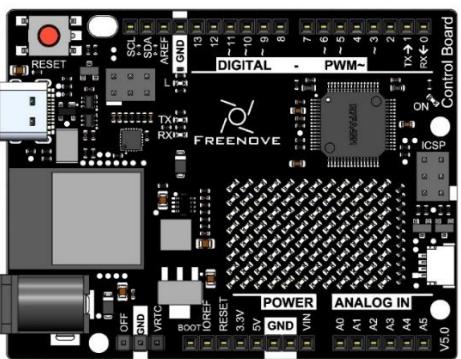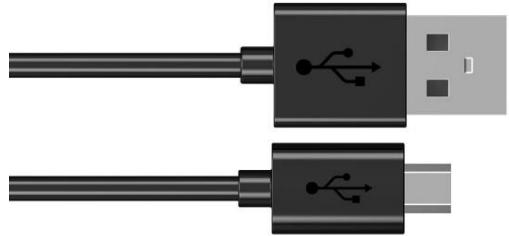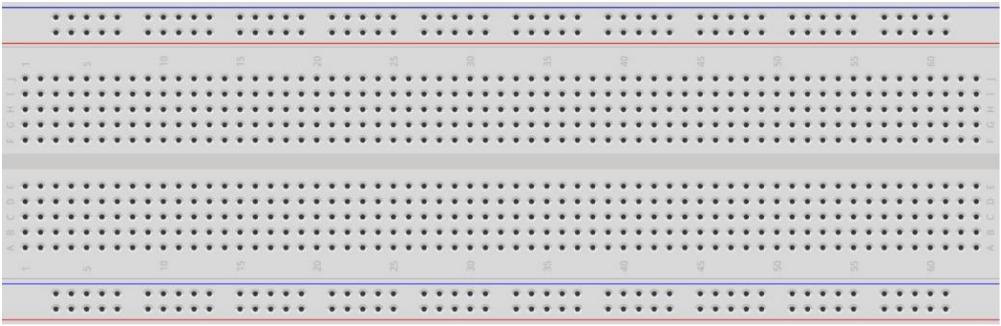
Control board x1	USB cable x1		
			
Micro USB Wire x1	LED x1	Resistor 220Ω x1	Jumper M/M x2
			
Breadboard x1			
			

If you do not have the above components in your kit, you can use the control board alone to finish the project. The control pin of the LED in this project is the same as the one controlling the onboard LED.


Circuit

Connect the control board to your computer with the USB cable.

Schematic diagram

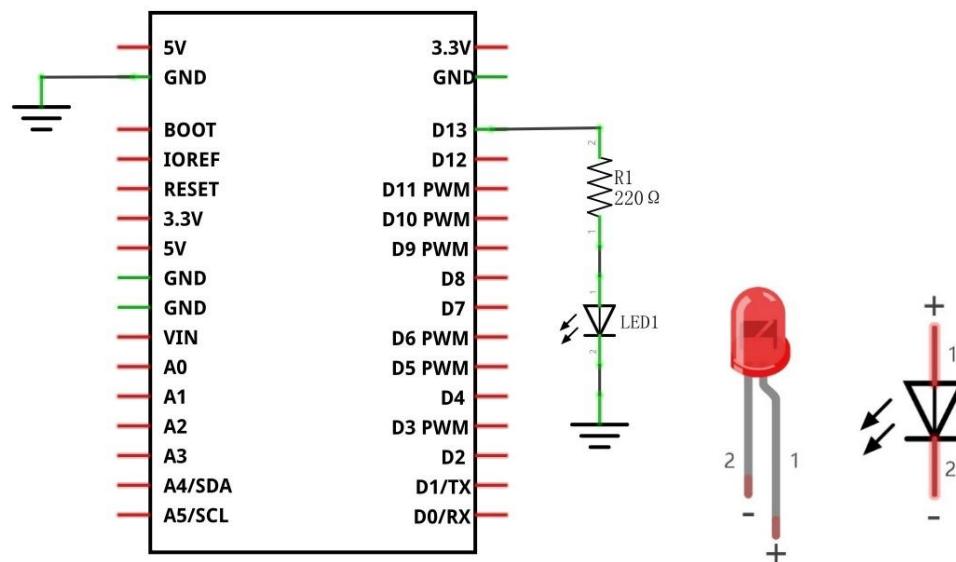

Hardware connection. **If you need any support, please contact us via: support@freenove.com**

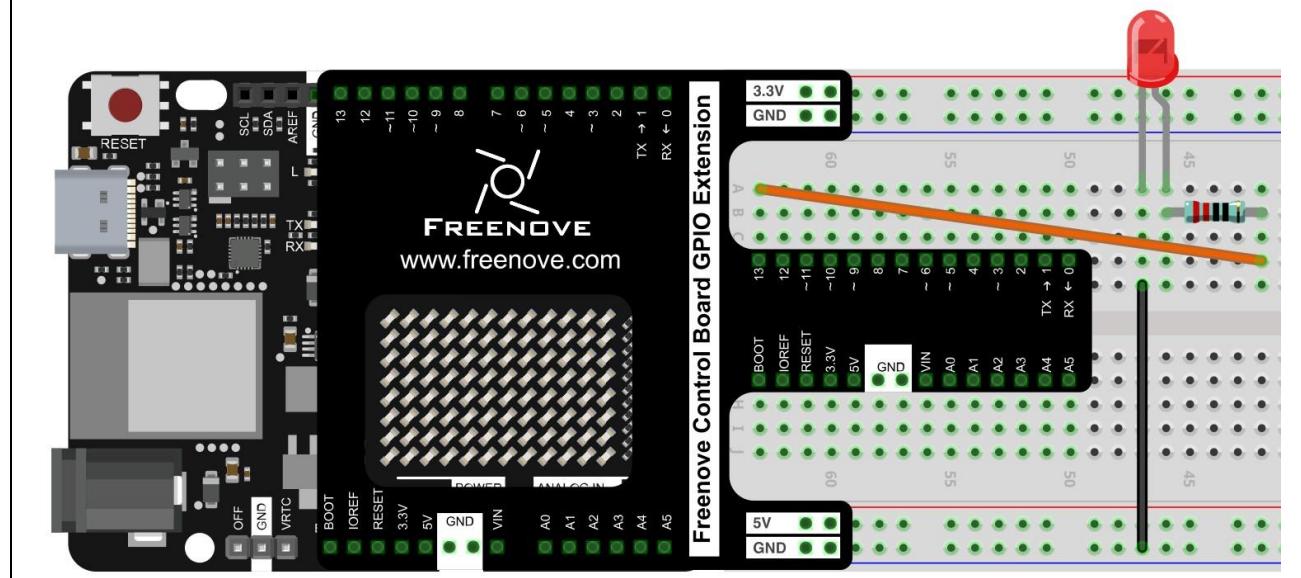

Sketch

Sketch_25.2.1

The screenshot shows the Arduino IDE interface. The top menu bar includes File, Edit, Sketch, Tools, Help, and a device dropdown set to "Arduino UNO R4 WiFi". The left sidebar has icons for file, folder, book, search, and serial monitor. The main code editor window displays the following sketch:

```
Sketch_40.2.1_Control_LED_with_Bluetooth.ino
27     BLE.setService(&bleService);
28     // set the initial value for the characteristic:
29     switchCharacteristic.writeValue("Led");
30
31     BLE.setEventHandler(BLEConnected, blePeripheralConnectHandler);
32     BLE.setEventHandler(BLEDisconnected, blePeripheralDisconnectHandler);
33
34     switchCharacteristic.setEventHandler(BLEWritten, switchCharacteristicWritten);
35
36     // start advertising
37     BLE.advertise();
38
39     Serial.println("Bluetooth® device active, waiting for connections...");
40 }
41
```

The "Serial Monitor" tab is selected at the bottom of the code editor. The serial monitor window shows the following output:

```
[=====] 95% (21/22 pages) write(addr=0x34, size=0x1000)
writeBuffer(scr_addr=0x34, dst_addr=0x15000, size=0x1000)

[=====] 100% (22/22 pages)
Done in 5.499 seconds
reset()
```

At the bottom right of the IDE, status text reads "Ln 60, Col 1 Arduino UNO R4 WiFi on COM15 2 2".

Compile and upload code to Control board. The operation of the APP is the same as 40.1, you only need to change the sending content to "led_on" and "led_off" to operate LEDs on the Control board.

Data sent from mobile APP:

← 19b10001-e8f2-537e-4f6c-d...

Data format UTF-8 String ▾

READ/INDICATED VALUES

READ AGAIN SUBSCRIBE

No value read recently
Tap on one of the buttons above — if available — to begin

WRITTEN VALUES

\b, \f, \n, \r, \t, \x00, \u0000 and \000 escape sequences are supported.

led_off WRITE

led_off
Tue Jun 18 16:21:54 GMT+08:00 2024

led_on
Tue Jun 18 16:21:48 GMT+08:00 2024

led_off
Tue Jun 18 16:21:44 GMT+08:00 2024

led_on
Tue Jun 18 16:21:39 GMT+08:00 2024

DESCRIPTORS

Client Characteristic Configuration
00002902-0000-1000-8000-00805f9b34fb


Display on the serial port of the computer:



```
Message (Ctrl + Enter to send message to 'ESP32S3 Dev Module' on 'COM3')  
The device started, now you can pair it with Bluetooth!  
led_on  
led_off  
led_on  
led_off  
led_on  
led_off
```

Ln 17, Col 17 UTF-8 ESP32S3 Dev Module on COM3 2

The phenomenon of LED

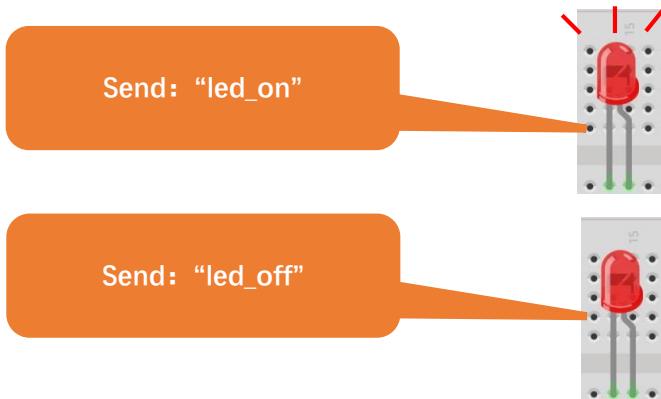

Attention: If the sending content isn't "led-on" or "led-off", then the state of LED will not change. If the LED is on, when receiving irrelevant content, it keeps on; Correspondingly, if the LED is off, when receiving irrelevant content, it keeps off.

If you do not connect external LED circuit, you can check the status of the onboard LED.

With this example you can design more interesting projects.

The following is the program code:

```
1 #include <ArduinoBLE.h>
2 #include "String.h"
3
4 BLEService ledService("19B10000-E8F2-537E-4F6C-D104768A1214"); // Bluetooth® Low Energy LED
5 Service
6 // Bluetooth® Low Energy LED Switch Characteristic - custom 128-bit UUID, read and writable by
7 central
8 BLECharacteristic switchCharacteristic("19B10001-E8F2-537E-4F6C-D104768A1214", BLERead | 
9 BLEWrite | BLENotify | BLEBroadcast, 20);
10
11 const int ledPin = LED_BUILTIN; // pin to use for the LED
12 void setup() {
13     Serial.begin(9600);
14     while (!Serial)
15         ;
16     // set LED pin to output mode
17     pinMode(ledPin, OUTPUT);
18     // begin initialization
19     if (!BLE.begin()) {
20         Serial.println("starting Bluetooth® Low Energy module failed!");
21         while (1)
22             ;
23     }
24
25     BLE.setLocalName("Control_Board_V5.0_Bluetooth");
26     BLE.setAdvertisedService(ledService);
27     // add the characteristic to the service
28     ledService.addCharacteristic(switchCharacteristic);
29     // add service
30     BLE.addService(ledService);
31     // set the initial value for the characteristic:
32     switchCharacteristic.writeValue("Led");
33
34     BLE.setEventHandler(BLEConnected, blePeripheralConnectHandler);
35     BLE.setEventHandler(BLEDDisconnected, blePeripheralDisconnectHandler);
36
37     switchCharacteristic.setEventHandler(BLEWritten, switchCharacteristicWritten);
38
39     // start advertising
40     BLE.advertise();
41
42     Serial.println("Bluetooth® device active, waiting for connections...");
43 }
```

```
44
45 void loop() {
46     BLEDevice central = BLE.central();
47     if (central) {
48         central.poll();
49         delay(1000);
50         Serial.print(".");
51     }
52 }
53
54 void blePeripheralConnectHandler(BLEDevice central) {
55     Serial.print("Connected event, central: ");
56     Serial.println(central.address());
57 }
58
59 void blePeripheralDisconnectHandler(BLEDevice central) {
60     Serial.print("Disconnected event, central: ");
61     Serial.println(central.address());
62 }
63
64 void switchCharacteristicWritten(BLEDevice central, BLECharacteristic characteristic) {
65     Serial.print("Characteristic event, written: ");
66
67     uint8_t characteristicValue[20];
68     int bytesRead = characteristic.readValue(characteristicValue, sizeof(characteristicValue));
69
70     Serial.print("Received bytes: ");
71     for (int i = 0; i < bytesRead; i++) {
72         Serial.print(characteristicValue[i], HEX);
73         Serial.print(" ");
74     }
75     Serial.println();
76
77     String receivedString = "";
78
79     for (int i = 0; i < bytesRead; i++) {
80         receivedString += (char)characteristicValue[i];
81     }
82     Serial.println("Value: " + receivedString);
83     if (receivedString == "led_on") {
84         Serial.println("LED on");
85         digitalWrite(ledPin, HIGH); // will turn the LED on
86     }
87     if (receivedString == "led_off") { // a 0 value
```

```
88     Serial.println(F("LED off"));
89     digitalWrite(ledPin, LOW); // will turn the LED off
90 }
91 }
```

Use character string to handle function header file.

```
2 #include "String.h"
```

Initialize the BLE Bluetooth and name it as "Control_Board_V5.0_Bluetooth"

```
25 BLE.setLocalName("Control_Board_V5.0_Bluetooth");
```

Compare the content in buffer array with "led_on" and "led_off" to see whether they are the same. If yes, execute the corresponding operation.

```
83 if (receivedString == "led_on") {
84     Serial.println("LED on");
85     digitalWrite(ledPin, HIGH); // will turn the LED on
86 }
87 if (receivedString == "led_off") { // a 0 value
88     Serial.println(F("LED off"));
89     digitalWrite(ledPin, LOW); // will turn the LED off
90 }
```

Chapter 26 USB HID



In this chapter, we will learn how to use a control board with keyboard and mouse APIs to emulate mouse and keyboard actions. This feature can be used to create game controllers, keyboard extensions, or other Human Interface Devices (HID).

Project 26.1 Mouse control

In this project, we learn how to emulate a mouse control.


Component List

Control board x1

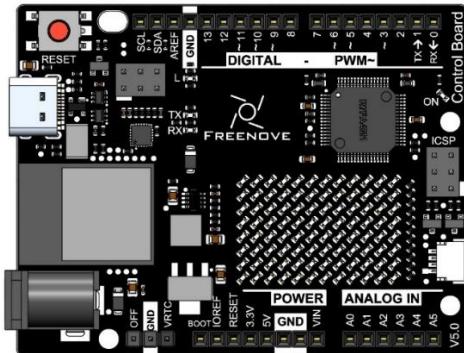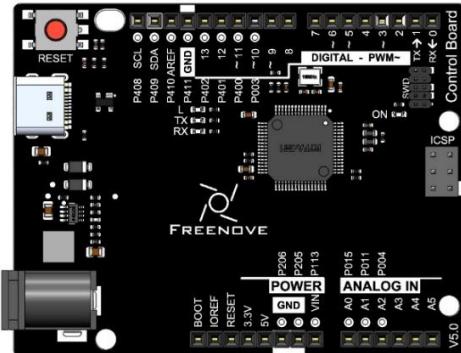


or

Breadboard x1

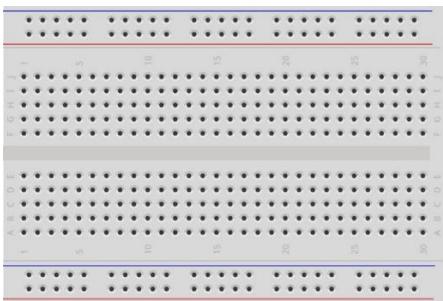

GPIO Extension Board x1

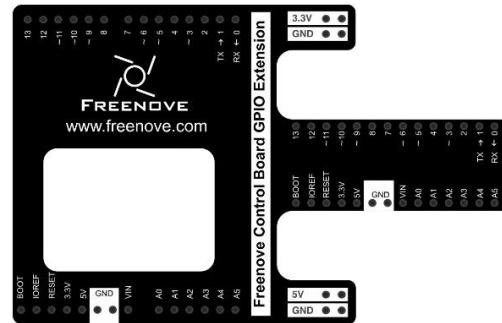

USB cable x1



Resistor 10kΩ x8



Push button Switch x4



Jumper M/M x12



Component knowledge

Human Interface Device (HID)


Human Interface Devices (HID) are devices designed for human use (such as keyboards, mice, game controllers, etc.), which often send data to the computer via USB. When you press a key on the keyboard, you send data to the computer, the computer reads the data and then activates the corresponding key.

HID, or Human-Interface Devices, is a category of computer devices designed for direct interaction with humans and are typically used for input purposes. This category includes devices such as keyboards, mice, and game controllers. With the control board (V5), you can simulate these devices, unlocking a multitude of possibilities for DIY projects.


The control board (V5) has built-in support for HID, a feature found on most modern development boards but not on previous UNO versions.

The control board (V5) is more than just a powerful development board; it also has built-in support for Human-Interface Devices (HID). This allows you to use the board to simulate devices such as mice and keyboards, adding a new level of interactivity to your projects.

Circuit

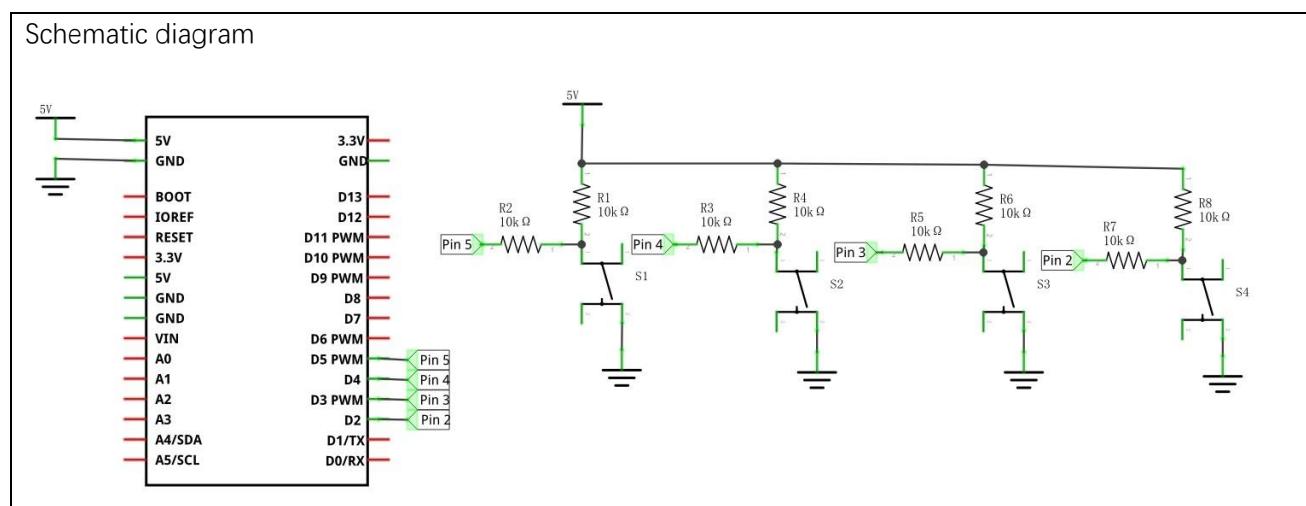

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

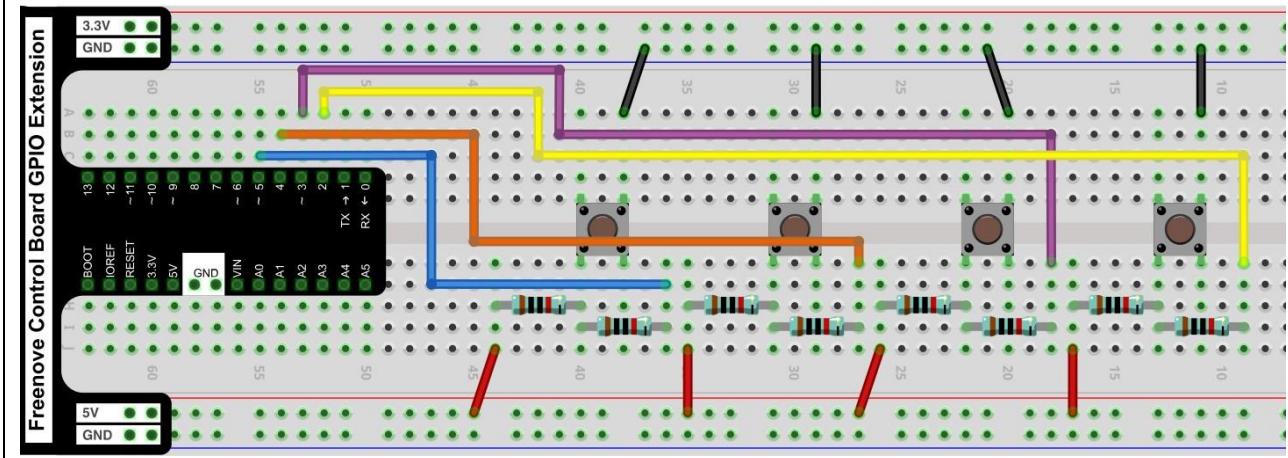

Sketch

Sketch_26.1.1

Upload the code to the control board, and you can easily control the movement of the mouse with the buttons. Here, four buttons are set up to control the mouse for moving up, down, left, and right.

The following is the program code:

```

1 #include <Mouse.h> // Include the Mouse library for mouse control
2
3 const int upButton = 2; // Define the pin where the button is connected
4 const int downButton = 3; // Define the pin where the button is connected
5 const int leftButton = 4; // Define the pin where the button is connected
6 const int rightButton = 5; // Define the pin where the button is connected
7
8 void setup() {
9     pinMode(upButton, INPUT_PULLUP); // Set the button pin as an input
10    pinMode(downButton, INPUT_PULLUP); // Set the button pin as an input
11    pinMode(leftButton, INPUT_PULLUP); // Set the button pin as an input
12    pinMode(rightButton, INPUT_PULLUP); // Set the button pin as an input
13    Mouse.begin(); // Initialize mouse control
14    delay(1000); // Wait for 1 second (1000 milliseconds) for hardware
15    initialization
16 }
17
18 void loop() {
19     // Check if the button is pressed (HIGH)
20     if (digitalRead(rightButton) == LOW) {
21         //right

```

```
22     Mouse.move(10, 0); // Move the mouse 10 units to the right
23     delay(200); // Wait for 200 milliseconds to slow down mouse movement
24 }
25 if (digitalRead(leftButton) == LOW) {
26     //Left
27     Mouse.move(-10, 0);
28     delay(200);
29 }
30 if (digitalRead(downButton) == LOW) {
31     // Down
32     Mouse.move(0, 10);
33     delay(200);
34 }
35 if (digitalRead(upButton) == LOW) {
36     // Up
37     Mouse.move(0, -10);
38     delay(200);
39 }
40 }
```

Include the mouse library for mouse control.

```
1 #include <Mouse.h> // Include the Mouse library for mouse control
```

Determine whether a button is press, and execute corresponding mouse movement.


```
19 // Check if the button is pressed (HIGH)
20 if (digitalRead(rightButton) == LOW) {
21     //right
22     Mouse.move(10, 0); // Move the mouse 10 units to the right
23     delay(200); // Wait for 200 milliseconds to slow down mouse movement
24 }
25 if (digitalRead(leftButton) == LOW) {
26     //Left
27     Mouse.move(-10, 0);
28     delay(200);
29 }
30 if (digitalRead(downButton) == LOW) {
31     // Down
32     Mouse.move(0, 10);
33     delay(200);
34 }
35 if (digitalRead(upButton) == LOW) {
36     // Up
37     Mouse.move(0, -10);
38     delay(200);
39 }
```

Project 26.2 Keypad Control

In this project, we will control keyboard input through buttons.


Component List

Control board x1

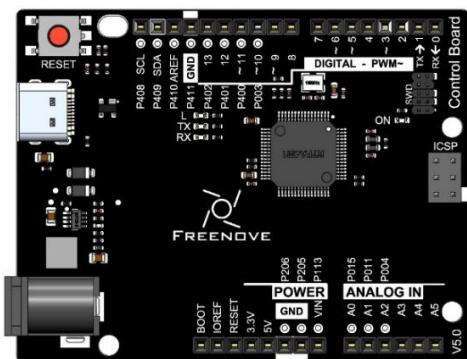


The image shows the front side of the FREENOVE Control Board (V5.0). It features a central microcontroller chip (ATmega328P) surrounded by various components like resistors, capacitors, and a crystal oscillator. On the left, there's a USB port, a red circular button labeled 'RESET', and several digital pins labeled 'DIGITAL' with numbers 13, 12, 11, 10, 9, 8, 7, 6, 5, 4, 3, 2, and 1. On the right, there are analog input pins labeled 'ANALOG IN' with numbers A0 through A5. At the bottom, there are power pins (GND, 5V, VIN), ground pins (GND), and digital pins labeled 'D0' through 'D13'. On the far right, there are serial communication ports labeled 'TX' and 'RX' with labels 'I2C', 'SPI', and 'RS485' above them. The board is labeled 'FREENOVE' in the center.

Breadboard x1

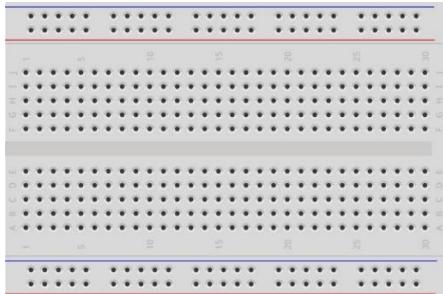

GPIO Extension Board x1

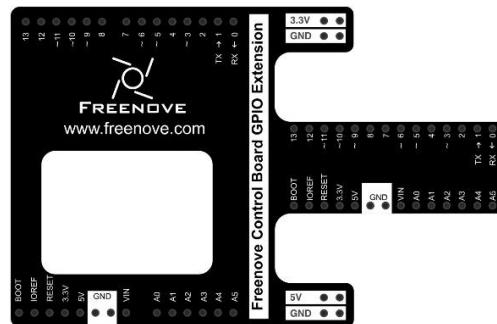

USB cable x1



Resistor 10k Ω x2


Jumper M/M x6



Push button Switch x4



Circuit

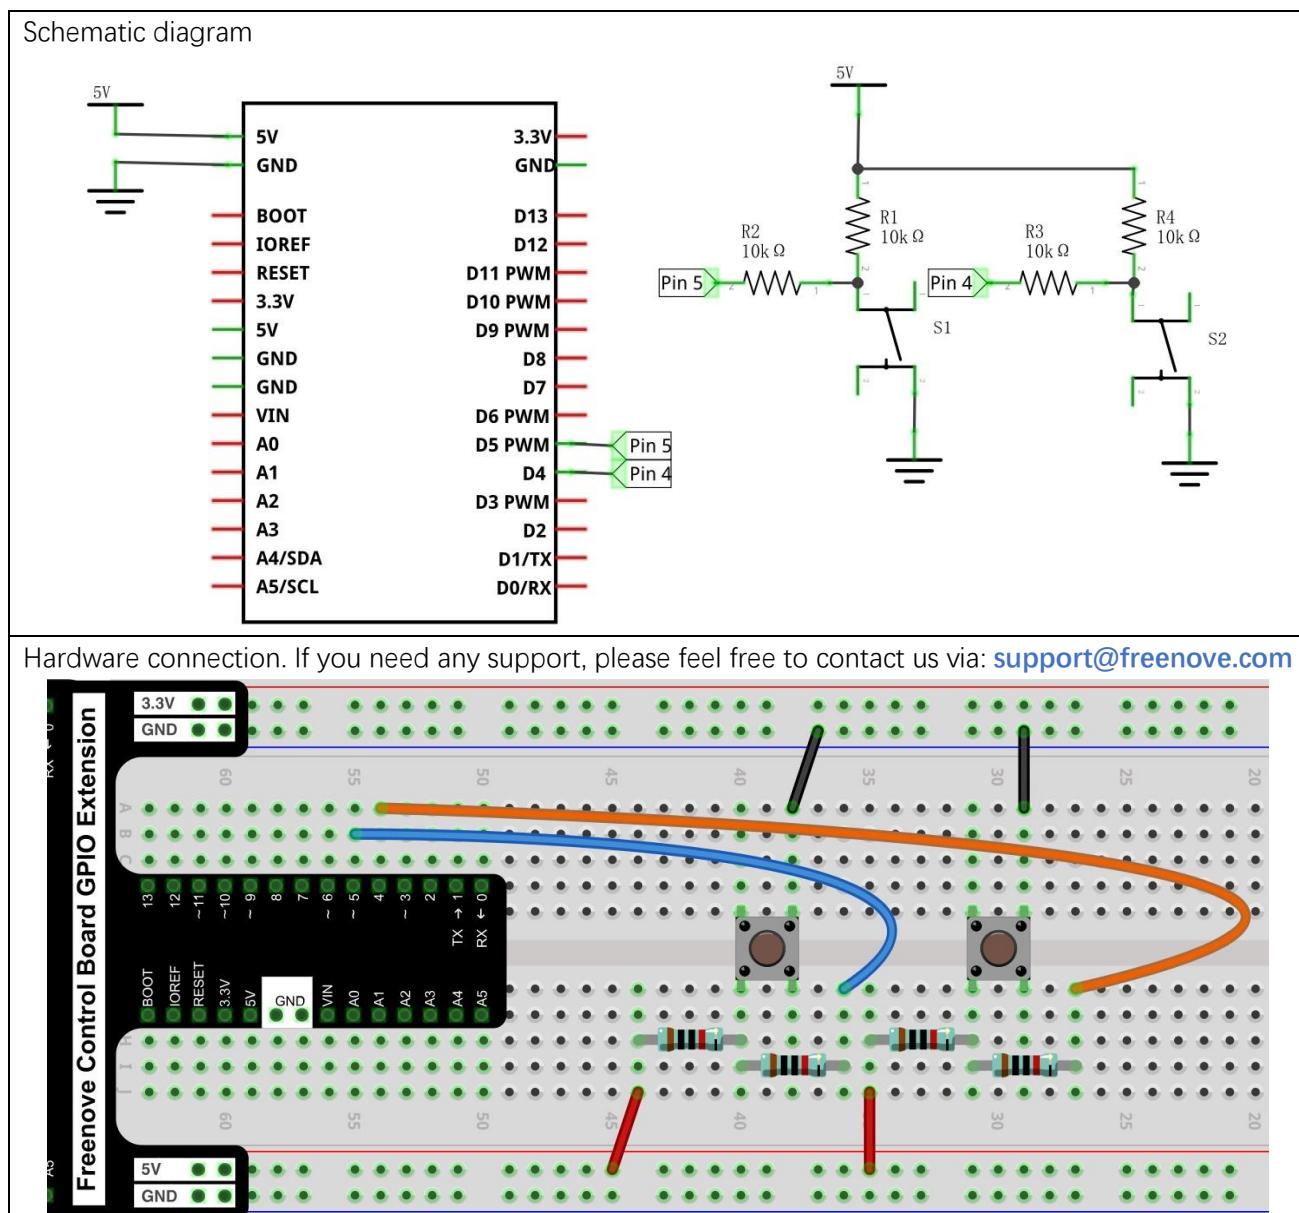

Sketch

Sketch_26.2.1

Upload the code to the control board, and you can easily control keyboard input through buttons. Here, two buttons are set up: one for copying (simultaneously pressing the CTRL and C keys on the keyboard), and the other for pasting (simultaneously pressing the CTRL and V keys on the keyboard). We can use these two buttons to complete the copy and paste of text. For example, to copy the text "Freenove.com" from the file "test.txt," use the mouse to select the text, press the copy button, and then press the paste button to perform the text copy.

Need help? Contact support@freenove.com

freenove.com

freenove.com freenove.com

Select the texts to copy

Press the copy and paste buttons in turn

The following is the program code:

```

1 #include <Keyboard.h> // Include the Keyboard library to enable keyboard functionalities
2
3 const int copyButtonPin = 4; // Pin number for the copy button
4 const int pasteButtonPin = 5; // Pin number for the paste button
5
6 void setup() {
7   Keyboard.begin(); // Initialize the Keyboard library
8   pinMode(copyButtonPin, INPUT_PULLUP); // Set the copy button pin as input
9   pinMode(pasteButtonPin, INPUT_PULLUP); // Set the paste button pin as input
10  delay(1000); // Wait for 1 second to allow hardware initialization
11 }
12
13 void loop() {
14   // Check if the copy button is pressed
15   if (digitalRead(copyButtonPin) == LOW) {
16     Keyboard.press(KEY_LEFT_CTRL); // Press the Ctrl key
17     Keyboard.press('c'); // Press the 'c' key
18     Keyboard.releaseAll(); // Release all keys
19     delay(150); // Wait for 200 milliseconds
20   }
21   // Check if the paste button is pressed
22   else if (digitalRead(pasteButtonPin) == LOW) {
23     Keyboard.press(KEY_LEFT_CTRL); // Press the Ctrl key
24     Keyboard.press('v'); // Press the 'v' key
25     Keyboard.releaseAll(); // Release all keys
26     delay(150); // Wait for 200 milliseconds
27   }
28 }
```

Include the Keyboard library to enable keyboard functionalities

1	#include <Keyboard.h> // Include the Keyboard library to enable keyboard functionalities
---	--

Determine whether a button is pressed, and execute corresponding key input values.

15	if (digitalRead(copyButtonPin) == LOW) {
16	Keyboard.press(KEY_LEFT_CTRL); // Press the Ctrl key
17	Keyboard.press('c'); // Press the 'c' key
18	Keyboard.releaseAll(); // Release all keys
19	delay(150); // Wait for 200 milliseconds

```
20 }
21 // Check if the paste button is pressed
22 else if (digitalRead(pasteButtonPin) == LOW) {
23     Keyboard.press(KEY_LEFT_CTRL); // Press the Ctrl key
24     Keyboard.press('v');          // Press the 'v' key
25     Keyboard.releaseAll();        // Release all keys
26     delay(150);                 // Wait for 200 milliseconds
27 }
```

For more examples of USB HID, please refer to:

<https://docs.arduino.cc/tutorials/uno-r4-minima/usb-hid/>

Chapter 27 Soldering Circuit Board

From previous chapters, we have learned about electronic circuits and components and have built a variety of circuits using a Breadboard device, which is not designed to be used permanently. We now will take a further step to make permanent projects using a Perfboard (a type of Prototype Circuit Board). Note: Perfboard is a stiff, thin sheet of insulated material with holes bored on a grid. The grid is usually a squared off shape with a spacing of 0.1 inches. Square copper pads cover these holes to make soldering electronic components easier.

To finish this chapter, you need to prepare the necessary soldering equipment, including an electric soldering iron (or soldering pencil) and solder. We have already prepared the Perfboard for you.

CAUTION: Please use extreme caution and attention to safety when you operate soldering tools used in these projects.

Project 27.1 Solder a Buzzer

You should be familiar with the Buzzer from our previous project. We will solder a permanent circuit that when a Push Button Switch is pressed a Buzzer sounds

Note: This circuit **does not** require programming and will work when it is powered ON. When the button is not pressed and the Buzzer is not in use, there is no power consumption.


You can install it on your bicycle, your bedroom door or any other place where you want a Buzzer.

Component List

Pin header x2	LED x1	Resistor 220Ω x1	Active buzzer x1	Push button x1
				

Circuit


We will solder the following circuit on the Perfboard.

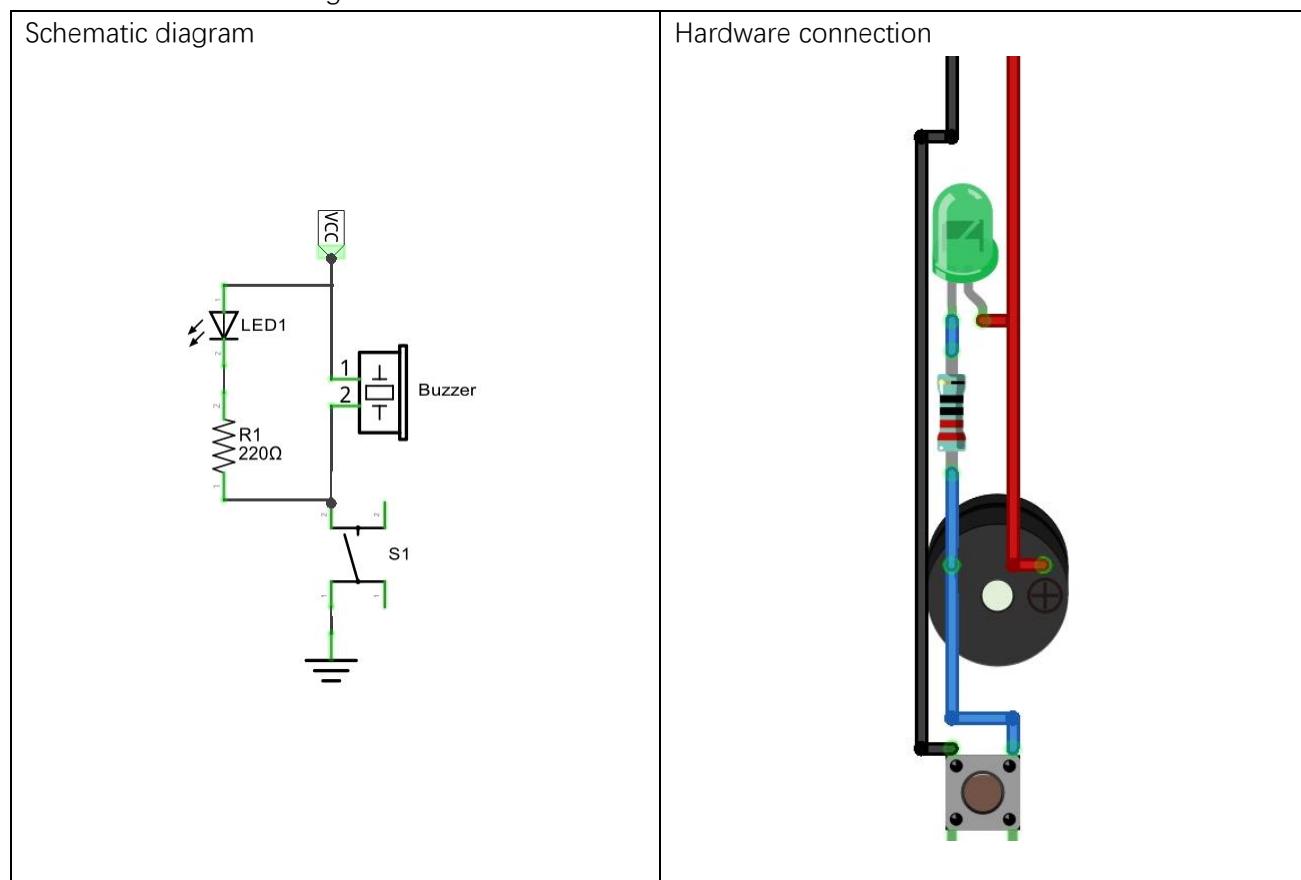


Note: If you are new to soldering electronic components on any type of circuit board we strongly recommend that you watch some instructional How-To videos by doing an Internet search and practice your soldering technique before attempting to solder the following projects. Some components can be damaged by exposure to excessive heat for prolonged times and there are various techniques you can learn that will help with making neater solder joints.

Solder the Circuit

Insert the components in the Perfboard following the Hardware Connection image as a general visual guide. Insert the pins of the components (all from the same side) so that you have only the components on one side of the Perfboard and the pins on the other. Then from the side with the pins carefully solder the circuit on the backside without having excess solder shorting out any portions of the circuit.

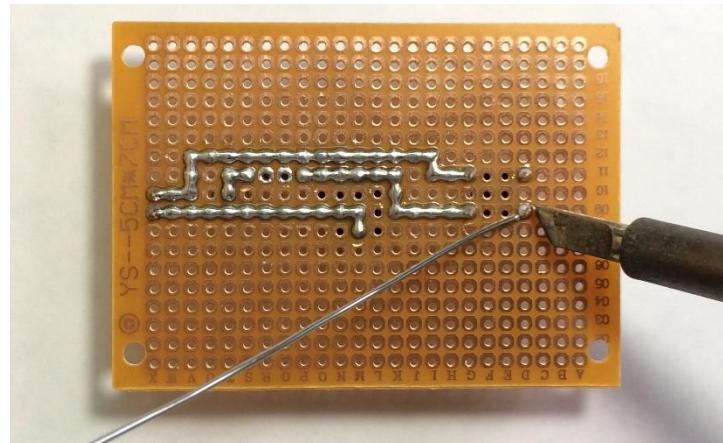


Here is a diagram after soldering from both sides of the Perfboard:

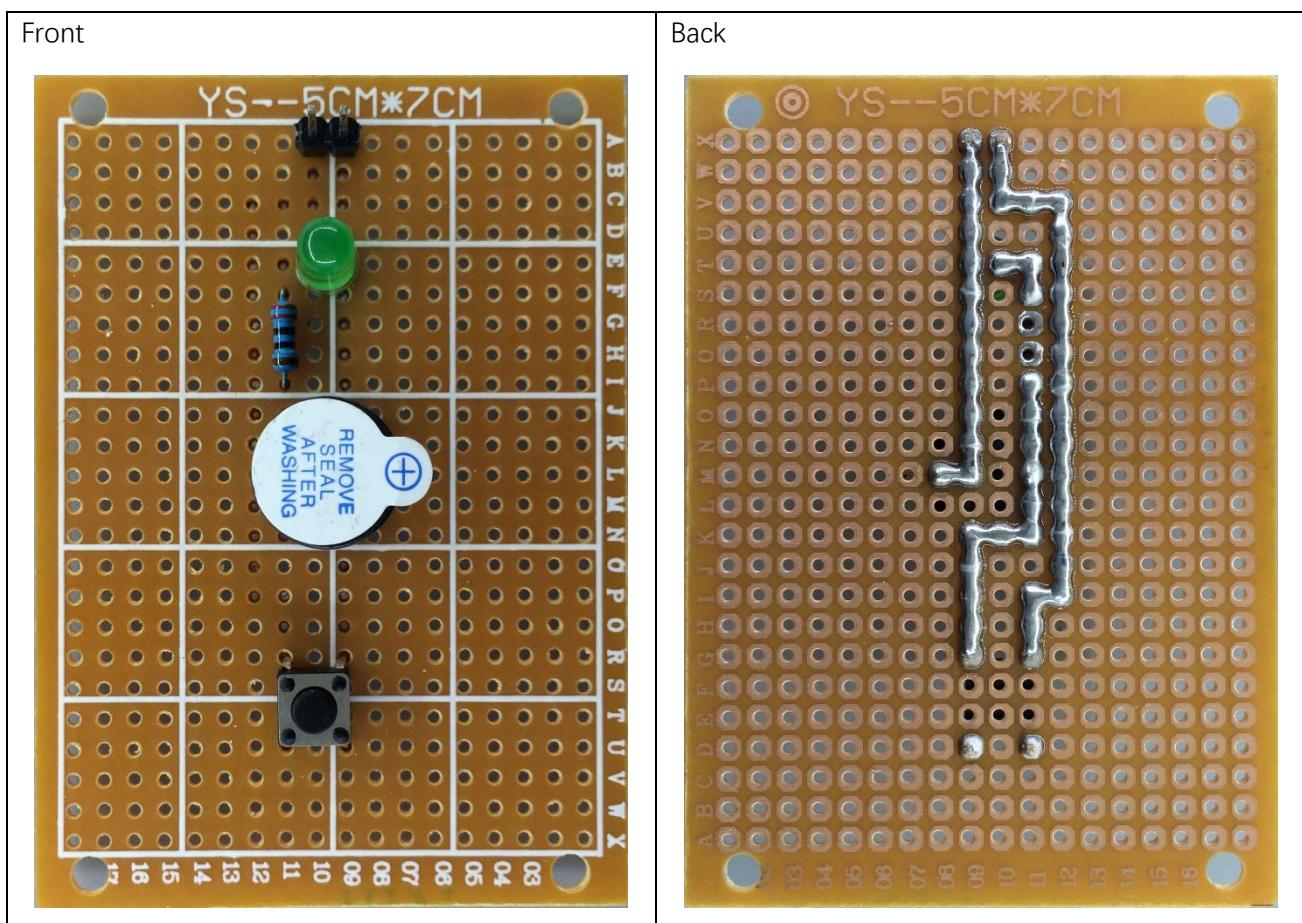

Test Circuit

Connect the circuit board to power supply (3~5V). You can use control board or battery box as the power supply.

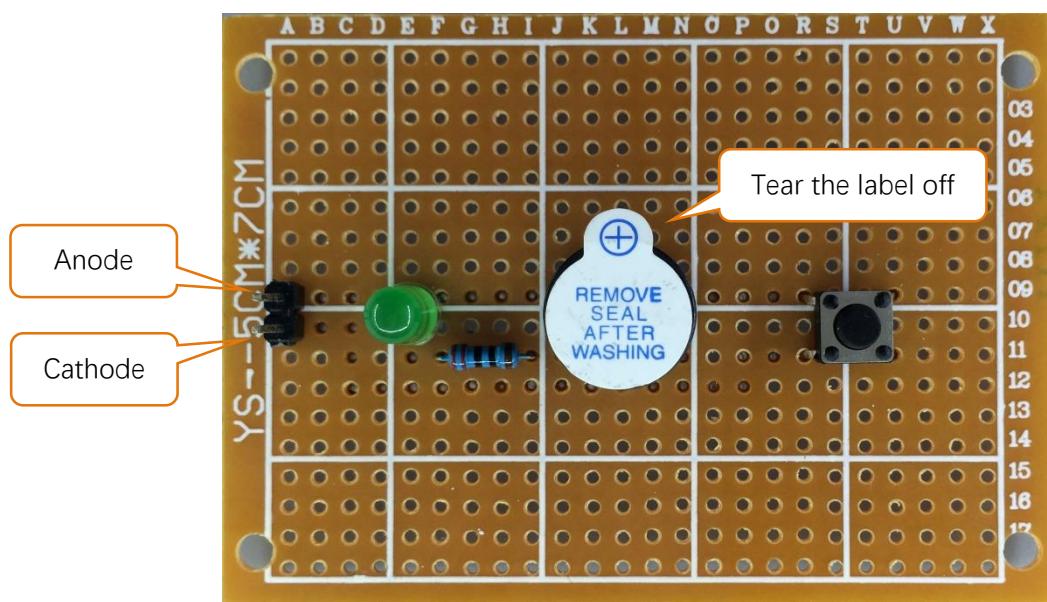

Press the push button switch after connecting the power, and then the buzzer will sound.

Project 27.2 Solder a Flowing Water Light


You should be familiar with the Flowing Water Light from our previous project. We will solder a permanent circuit using improved code to make a more interesting Flowing Water Light.

Component List

Pin header x5	Resistor 220Ω x8	LED x8	74HC595 x1


Circuit

Solder the following circuit on the Perfboard.

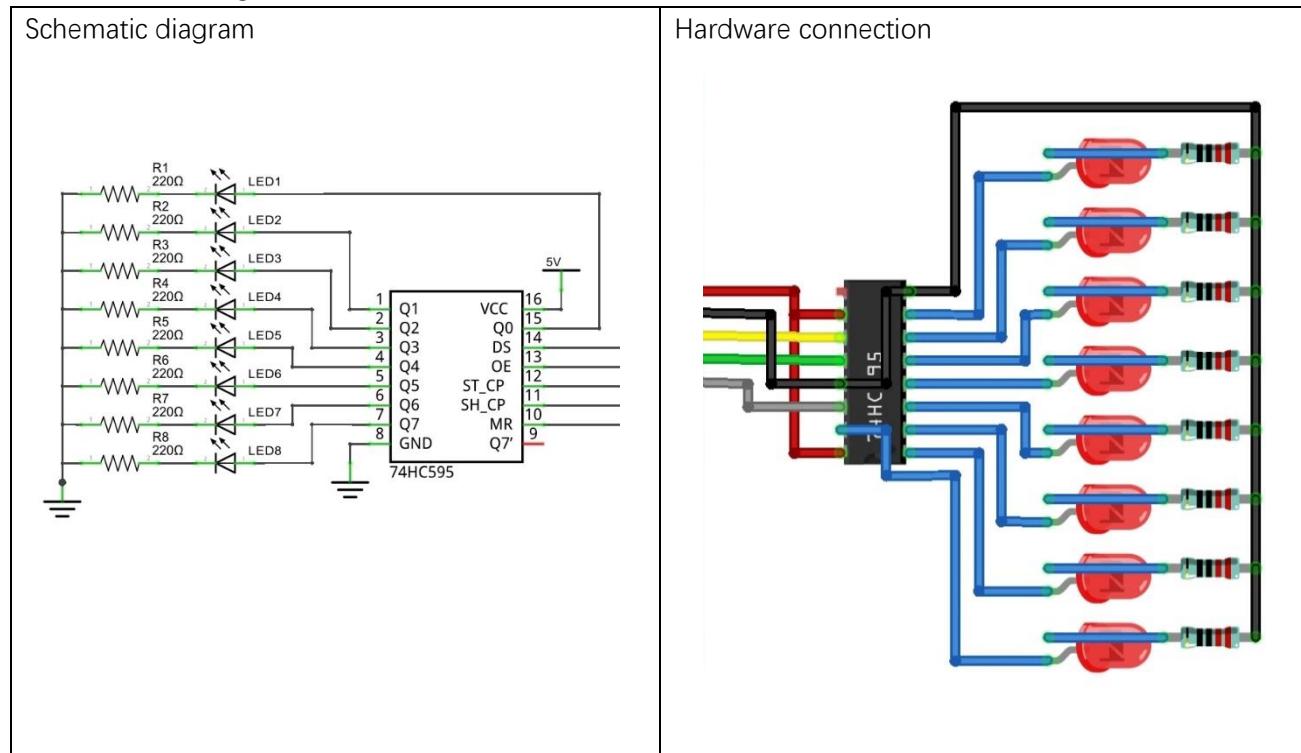


Solder the Circuit

Insert the components in the Perfboard, and solder the circuit on the back per earlier instructions.

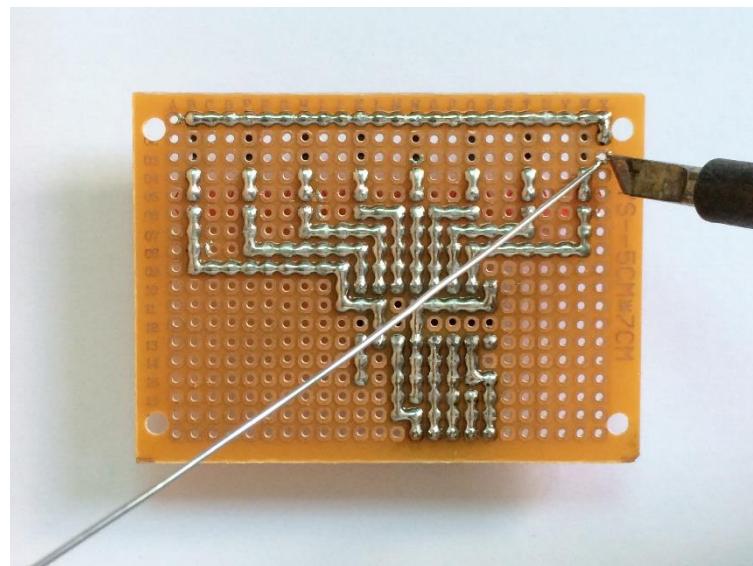


Here is a diagram after soldering from both sides of the Perfboard:

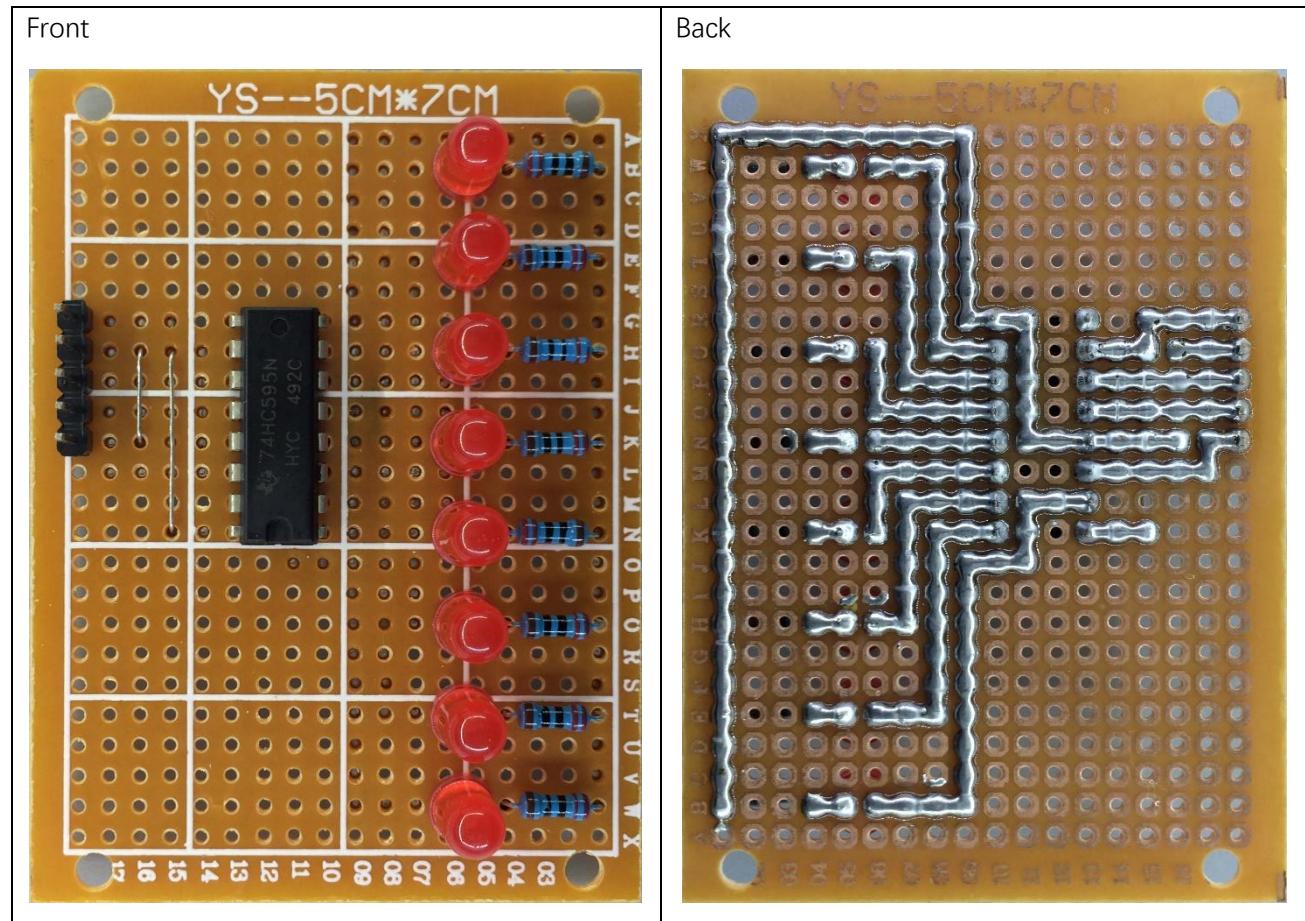

Connect the Circuit

Connect the board to control board with jumper wire in the following way.

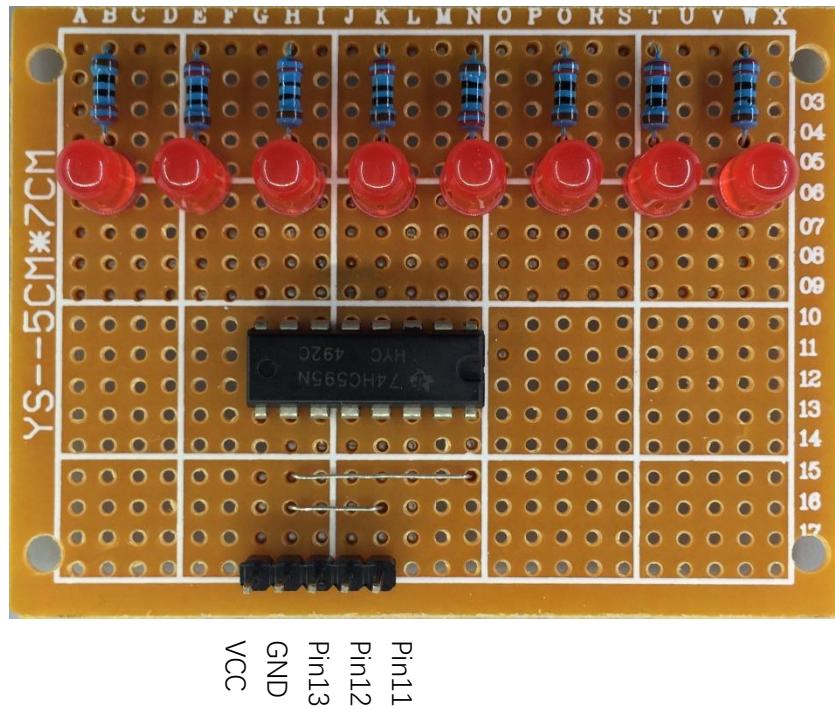

Sketch

Sketch 27.2.1

Now, let's write code to make a dropping-rain effect on our board.

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595 (Pin12)
2 int clockPin = 13;           // Pin connected to SH_CP of 74HC595 (Pin11)
3 int dataPin = 11;            // Pin connected to DS of 74HC595 (Pin14)
4
5 void setup() {
6     // set pins to output
7     pinMode(latchPin, OUTPUT);
8     pinMode(clockPin, OUTPUT);
9     pinMode(dataPin, OUTPUT);
10 }
11
12 void loop() {
13     // Define an array to save the pulse width of LED. Output the signal to the 8 adjacent
        LEDs in order, and then it produces the dropping-rain effect
    
```

```

14   const byte pulse[] = {0, 0, 0, 0, 0, 0, 0, 0, 64, 48, 32, 16, 8, 4, 2, 1, 0, 0, 0, 0,
15   // Define a variable to select 8 contiguous data in the array sequentially
16   static byte offset;
17   // Define a variable to control the speed
18   static unsigned int counter;
19   if (counter++ % 8 == 0)           // Reduce the self-increasing speed of offset
20       offset < 15 ? offset++ : offset = 0;// offset increases
21   // Out put PWM wave
22   for (int i = 0; i < 64; i++) { // The cycle of PWM is 64 cycles
23       byte data = 0;           // Define a variable to represent the output state of
this loop
24       for (int j = 0; j < 8; j++) // Calculate the output state of this loop
25   {
26       if (i < pulse[j + offset]) // Calculate the LED state according to the pulse width
27   {
28           data |= 0x01 << j;    // Represent the LED state with the corresponding bit
of a variable
29       }
30   }
31   // Send the state of LED to 74HC595
32   writeData(data);
33   }
34   }
35
36 void writeData(int value) {
37   // Make latchPin output low level
38   digitalWrite(latchPin, LOW);
39   // Send serial data to 74HC595
40   shiftOut(dataPin, clockPin, MSBFIRST, value);
41   // Make latchPin output high level, then 74HC595 will update the data to parallel
output
42   digitalWrite(latchPin, HIGH);
43 }
```

First we define an array to modulate different PWM pulse widths for LEDs, in doing so different LEDs can emit varied brightness. Starting from the array index 0, take an array of 8 adjacent numbers as the LED duty cycle and output it one at a time. Increasing the starting index number in turn, then it will create a flowing effect.

14	const byte pulse[] = {0, 0, 0, 0, 0, 0, 0, 0, 64, 48, 32, 16, 8, 4, 2, 1, 0, 0, 0, 0,
----	---

Define a variable to select 8 adjacent numbers in an array in turn.

16	static byte offset;
----	---------------------

Define a variable to control the speed of the raindrops.

```
18 static unsigned int counter;
```

Reduce the auto-increment speed of the variable offset with the following code.

```
19 if (counter++ % 8 == 0)           // Reduce the self-increasing speed of offset
20     offset < 15 ? offset++ : offset = 0; // offset increases
```

We use software to output PWM waveform. Define the cycle of PWM to be 64 cycles and determine the pulse width of LED (that is brightness) according to the selected eight numbers of the array in each cycle.

```
22 for (int i = 0; i < 64; i++) { // The cycle of PWM is 64 cycles
23     byte data = 0;             // Define a variable to represent the output state of
this loop.
24     for (int j = 0; j < 8; j++) // Calculate the output state of this loop
{
25         if (i < pulse[j + offset]) // Calculate the LED state according to the pulse width
{
26             data |= 0x01 << j;    // Represent the LED state with the corresponding bit
of variable
27         }
28     }
29 }
30 }
```

Due to the change of the variable offset, the LED will output the brightness that the eight adjacent numbers represents in the array, and form the dropping-rain effect.

Verify and upload the code, and then you will see the dropping-rain effect that LED forms.

Other Components

This kit also includes other common components that can help your ideas come true. Now we will introduce components not mentioned in the previous section.

Component Knowledge

Toggle switch

Like push button switch, toggle switch is also a kind of switching devices. The difference is that toggle switch is suitable for long-time open or close circuits.




When the lever is moved to the left, pin 1, 2 get conducted, and pin 2, 3 are disconnected from each other;
When the lever is moved to the right, pin 2,3 get conducted, and pin 1,2 are disconnected from each other;

Switch diode

There are several types of diodes. We have used 1N4001 before, which is a common rectifier diode and commonly used in ac rectifier.


Here is 1N4148, which is a kind of high-speed switching diodes and is characterized by a relatively rapid switching.

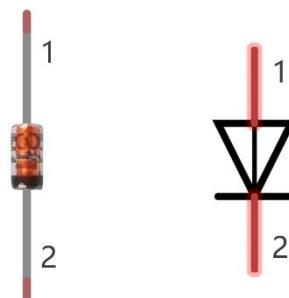


For the switching diode, the changing time from conduction to cut off or from cut off to conduction is shorter than general diode and it is mainly used in electronic computer, pulse and switching circuits.

Motor soft fan blade

This is the fan blade of the motor.

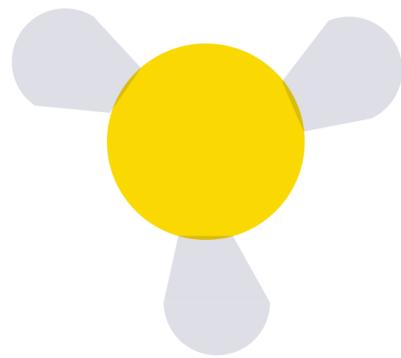

The installation of soft fan blades is as follows:

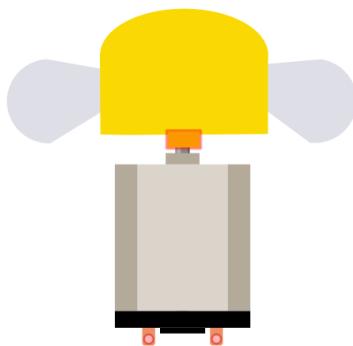


9V battery cable

A 9V battery cable can connect a 9 V battery, which can supply power for control board.



The installation of 9V battery cable is as follows:

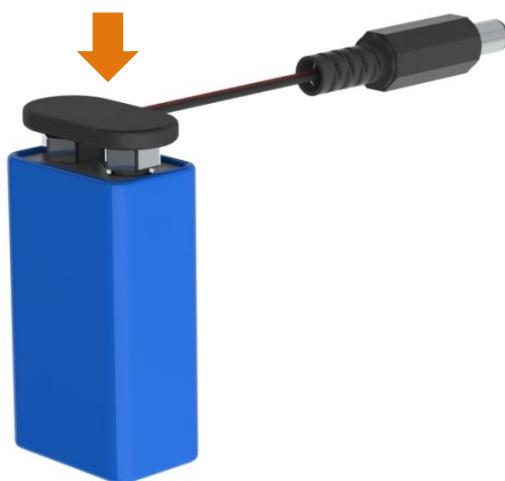

What's Next?

THANK YOU for participating in this learning experience!

We have reached the end of this tutorial. If you find errors, omissions or you have suggestions and/or questions about this tutorial or component contents of this kit, please feel free to contact us:

support@freenove.com

We will make every effort to make changes and correct errors as soon as feasibly possible and publish a revised version.

If you are interesting in Processing, you can study the Processing.pdf in the unzipped folder.

If you want to learn more about Arduino, Raspberry Pi, micro:bit, robots, smart cars and other interesting products, please visit our website:

<http://www.freenove.com/>

We will continue to launch fun, cost-effective, innovative and exciting products.

Thank you again for choosing Freenove products.

Appendix

ASCII Table

Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char
0	00	Null	32	20	Space	64	40	Ø	96	60	`
1	01	Start of heading	33	21	!	65	41	A	97	61	a
2	02	Start of text	34	22	"	66	42	B	98	62	b
3	03	End of text	35	23	#	67	43	C	99	63	c
4	04	End of transmit	36	24	\$	68	44	D	100	64	d
5	05	Enquiry	37	25	%	69	45	E	101	65	e
6	06	Acknowledge	38	26	&	70	46	F	102	66	f
7	07	Audible bell	39	27	'	71	47	G	103	67	g
8	08	Backspace	40	28	(72	48	H	104	68	h
9	09	Horizontal tab	41	29)	73	49	I	105	69	i
10	0A	Line feed	42	2A	*	74	4A	J	106	6A	j
11	0B	Vertical tab	43	2B	+	75	4B	K	107	6B	k
12	0C	Form feed	44	2C	,	76	4C	L	108	6C	l
13	0D	Carriage return	45	2D	-	77	4D	M	109	6D	m
14	0E	Shift out	46	2E	.	78	4E	N	110	6E	n
15	0F	Shift in	47	2F	/	79	4F	O	111	6F	o
16	10	Data link escape	48	30	Ø	80	50	P	112	70	p
17	11	Device control 1	49	31	1	81	51	Q	113	71	q
18	12	Device control 2	50	32	2	82	52	R	114	72	r
19	13	Device control 3	51	33	3	83	53	S	115	73	s
20	14	Device control 4	52	34	4	84	54	T	116	74	t
21	15	Neg. acknowledge	53	35	5	85	55	U	117	75	u
22	16	Synchronous idle	54	36	6	86	56	V	118	76	v
23	17	End trans. block	55	37	7	87	57	W	119	77	w
24	18	Cancel	56	38	8	88	58	X	120	78	x
25	19	End of medium	57	39	9	89	59	Y	121	79	y
26	1A	Substitution	58	3A	:	90	5A	Z	122	7A	z
27	1B	Escape	59	3B	:	91	5B	[123	7B	{
28	1C	File separator	60	3C	<	92	5C	\	124	7C	
29	1D	Group separator	61	3D	=	93	5D]	125	7D	}
30	1E	Record separator	62	3E	>	94	5E	^	126	7E	~
31	1F	Unit separator	63	3F	?	95	5F	_	127	7F	□

Resistor Color Code

The diagram illustrates two methods for resistor color coding:

- 4-Band-Code:** A resistor with four bands. The first three bands represent the resistance value (e.g., 560), and the fourth band represents the tolerance (e.g., ±5%).
- 5-Band-Code:** A resistor with five bands. The first four bands represent the resistance value (e.g., 237), and the fifth band represents the tolerance (e.g., ±1%).

Color Chart:

COLOR	1 ST BAND	2 ND BAND	3 RD BAND	MULTIPLIER	TOLERANCE
Black	0	0	0	1Ω	
Brown	1	1	1	10Ω	± 1% (F)
Red	2	2	2	100Ω	± 2% (G)
Orange	3	3	3	1KΩ	
Yellow	4	4	4	10KΩ	
Green	5	5	5	100KΩ	± 0.5% (D)
Blue	6	6	6	1MΩ	± 0.25% (C)
Violet	7	7	7	10MΩ	± 0.10% (B)
Grey	8	8	8		± 0.05%
White	9	9	9		
Gold				0.1Ω	± 5% (J)
Silver				0.01Ω	± 10% (K)

Example: A resistor with bands **5 6 0** **Gold** has a value of **560Ω** with a **±5%** tolerance.