Table of Contents

Signal K Specification Getting Started		1.1
		1.2
Using	g SK	1.2.1
Devel	loping with SK	1.2.2
Data Model		1.3
Full a	and Delta Models	1.3.1
Multip	ole Values	1.3.2
Metad	data	1.3.3
Perm	issions	1.3.4
API		1.4
Ports	, Urls and Versioning	1.4.1
REST	ГАРІ	1.4.2
Strea	ming WebSocket API	1.4.3
Disco	overy & Connection Establishment	1.4.4
Subso	cription Protocol	1.4.5
Notific	cations	1.4.6
Background and Design Rationale		1.5
How Can I Help?		1.6
Appendix A: Keys Reference		1.7
Appendix B: Changelog		1.8

Introduction

This is the documentation for the Signal K Specification master (latest) version.

- html (this document)
- pdf
- epub
- mobi

What is Signal K?

Signal K is a modern and open data format for marine use. It is an Internet friendly standard built on standard web technologies, such as JSON and WebSockets. Signal K is Free and Open Source software. This document is licensed under the Creative Commons CC-BY-SA license. All Signal K source code is licensed under the Apache License, Version 2.0. Signal K is developed in the open with help from the marine community. Your ideas and feedback are valuable and welcome.

Signal K consists of the Signal K Data Model and the Signal K Message Format.

Signal K Data Model (A.K.A. The Schema)

The Signal K Data Model or schema defines a universal model for marine related information and it is specified as a JSON schema. See the Signal K Data Model section for details.

In traditional marine standards there are many tightly defined messages, each with a specific purpose, but there is no data model to relate them. Furthermore, any device which needs to decode those messages must have a copy of the data dictionary in order to do so. By defining a data model in JSON we can make the messaging layer simpler, and easily extensible. We define consistent units and meta data for each data point in the model. This means that a specific data point (e.g. COG) will always be found at a predictable address.

It also means that a display device such as a chartplotter implementing Signal K does not need to know about the data model beforehand. It can query the central Signal K server on the boat to get all the information it needs to display any data point. This

metadata may include information such as the unit of measure, minimum and maximum permissible values, alarm thresholds and localized display name for every data point in the model.

Signal K Message Format

Signal K defines methods for combining arbitrary data from the Data Model into valid messages. These messages are in UTF-8 JSON format.

Rather than define hundreds of specific messages, Signal K has a few common message formats which can contain any combination of data from the Data Model. This means that we don't need new messages for every new case, just extra data in the payload. It means that any device can read any message and a device can introduce a new data point which can be understood by existing devices without the need for firmware upgrades.

Signal K Transport Layer

Signal K does not define the transport or wire protocol. Signal K messages are JSON text and can be sent over almost any transport layer. However, we do provide guidance on how to make an initial connection, handle negotiation, subscription, and disconnection for a given transport (e.g. TCP/IP or serial).

Where possible we use well established standards like HTTPS, REST, WebSockets, MQTT, STOMP, etc. But within each method there are always many options in message addressing, formating, or transfer (GET, POST), etc.

The goal is to try to establish sensible conventions for each protocol, to make development and interconnection more predictable.

Signal K Implementations

The Signal K project has many implementations of servers, clients, and utilities. These are both proof of concept tests and reference code. The goal is to provide a range of software and utilities to simplify development.

Getting Started Using Signal K

You can start using Signal K by

- connecting to the demo server on the Internet with any web browser
- installing either the Node or Java server on any computer
- getting some hardware for your boat, such as a Raspberry Pi, suitable USB adapters for your boat's network (NMEA 0183, NMEA 2000 or roll your own with I2C sensors) and installing Node or Java server
- purchasing a commercial Signal K gateway such as an iKommunicate by Digital Yacht
- installing OpenPlotter, which includes a Signal K server

Once you have a server running (or you start by using the demo server) you can install some Signal K supporting mobile apps such as

- NMEARemote by Zapfware (iOS)
- OceanIX (Android)

Getting Started in Developing with Signal K

- Example HTML5 Applications
- Signal K JavaScript Client
- iKommunicate Developer's Guide

Signal K Data Model

Signal K defines two data formats, full and delta, for representing and transmitting data.

In additiong the 'sparse' format is the same as the full format, but doesn't contain a full tree, just parts of the full tree.

Full format

The simplest format is the full format, which is the complete Signal K data model as a JSON string. Abbreviated for clarity it looks like this:

Formatted for ease of reading:

```
{
  "vessels": {
    "9334562": {
      "version": "0.1",
      "name": "motu",
      "mmsi": "2345678",
      "source": "self",
      "timezone": "NZDT",
      "navigation": {
        "state": {
          "value": "sailing",
          "source": "self",
          "timestamp": "2014-03-24T00: 15: 41Z"
        },
        "headingTrue": {
          "value": 23,
          "source": {
            "pgn": "128275",
            "device": "/dev/actisense",
            "timestamp": "2014-08-15-16:00:05.538",
            "src": "115"
          },
          "timestamp": "2014-03-24T00: 15: 41Z"
        "more": "a lot more data here...",
        "roll": {
          "value": 0,
          "source": "self",
          "timestamp": "2014-03-24T00: 15: 41Z"
        },
        "rateOfTurn": {
          "value": 0,
          "source": "self",
          "timestamp": "2014-03-24T00: 15: 41Z"
        }
      }
    }
  }
}
```

The message is UTF-8 ASCII text, and the top-level attribute(key) is always "vessels". Below this level is a list of vessels, identified by their MMSI number or a generated unique id. There may be many vessels, if data has been received from AIS or other sources. The format for each vessel's data uses the same standard Signal K structure, but may not have the same content, i.e. you won't have as much data about other vessels as you have about your own.

The values are always SI units, and always the same units for the same key. I.e. speedoverGround is always meters per second, never knots, km/hr, or miles/hr. This means you never have to send 'units' with data, the units are specific for a key, and defined in the data schema.

The ordering of keys is also not important, they can occur in any order. In this area Signal K follows normal JSON standards.

The full format is useful for backups, and for populating a secondary device, or just updating all data, a kind of 'this is the current state' message.

However sending the full data model will be wasteful of bandwidth and CPU, when the majority of data does not change often. So we want to be able to send parts of the model (i.e. parts of the hierarchical tree).

Sparse format

The sparse format is the same as the full format but only contains a limited part of the tree. This can be one or more data values.

Mix and match of misc values are also valid:

```
{
  "vessels": {
    "self": {
      "navigation": {
        "courseOverGroundTrue": {
          "value": 11.9600000381
        },
        "position": {
          "latitude": -41.2936935424,
          "longitude": 173.2470855712,
          "altitude": 0
          }
        }
      }
    }
  }
}
```

This mix of any combination of values means we don't need to create multiple message types to send different combinations of data. Just assemble whatever you want and send it. When parsing an incoming message a device should skip values it has no interest in, or doesn't recognise. Hence we avoid the problem of multiple message definitions for the same or similar data, and we avoid having to decode multiple messages with fixed formats.

Delta format

While building the reference servers and clients it was apparent that a third type of message format was useful. This format specifically sends changes to the full data model. This was useful for a number of technical reasons, especially in clients or sensors that did not hold a copy of the data model.

The format looks like this (pretty printed):

```
{
    "context": "vessels.urn:mrn:imo:mmsi:234567890",
    "updates": [{
        "source": {
            "type": "NMEA2000",
            "src": "017",
            "pgn": 127488,
            "label": "N2000-01.017"
        },
        "timestamp": "2010-01-07T07:18:44Z",
        "values": [{
            "path": "propulsion.0.revolutions",
            "value": 16.341667
        }, {
            "path": "propulsion.0.boostPressure",
            "value": 45500.000000
        }, {
            "path": "propulsion.0.tiltTrim",
            "value": 48
        }]
    }]
}
```

In more detail we have the header section:

The message can be recognised from the other types by the topmost level having "context" and "updates" rather than "vessels".

Context is a path from the root of the full tree. In this case 'vessels.230099999'. All subsequent data is relative to that location. The context could be much more specific, e.g. 'vessels.230099999.navigation', whatever is the common root of the updated data.

The 'updates' holds an array (JSON array) of updates, each of which has a 'source' and JSON array of 'values'.

```
{
   "source": {
     "device": "/dev/actisense",
     "timestamp": "2014-08-15-16:00:00.081",
     "src": "115",
     "pgn": "128267"
},
   "values": [
     {
           "path": "navigation.courseOverGroundTrue",
           "value": 2.971
     },
     {
            "path": "navigation.speedOverGround",
           "value": 3.85
     }
}
```

The 'source' values is the same and applies to each of the 'values' items, which removes data duplication. It also allows rich data to be included with minimal impact on message size.

Each 'value' item is then simply a pair of 'relative path', and 'value'.

Message Integrity

Many messaging systems specify checksums or other forms of message integrity checking. In Signal K we assume a reliable transport will guarantee a valid message. This is true of TCP/IP and some other transports but not always the case. For other transports (eg RS232 serial) a specific extended data format will apply, which is suited to that transport. Hence at the message level no checksum or other tests need to be made.

Encoding/Decoding

The JSON message format is supported across most programming environments and can be handled with any convenient library.

On micro-controllers with limited RAM it is wise to read and write using streaming rather than hold the whole message in precious RAM. There is an implementation of Signal K JSON streaming on an Arduino Mega (4K RAM) in the related Freeboard project, which

will be released in Signal K eventually.

Multiple Values for a Key

There are two use cases for multiple data:

- Multiple instances of a common device eg two engines or multiple batteries
- Multiple devices providing duplicate data multiple values for the same Signal K key from different sensors, eg COG from both compass and gps or multiple depth sounders

Multiple instances of a common device

Some parts of the Signal K schema are device oriented.

For example in electrical domain you have the concept of multiple batteries. Each battery has multiple, common quantities like voltage, current and temperature. Here we have chosen to organise the Signal K data model hierarchy by instance: multiple batteries are represented as for example electrical.batteries.starter and electrical.batteries.house. Then underneath that prefix you have the different properties and quantities.

This organisation allows a user interface to organise the individual readings in meaningul groups and you can query all the values related to that piece of equipment via REST API. It maintains the primary requirement that a given data value have a fixed and unique uri, but gives flexibility in the structure and complexities of data.

The same device centric organisation is used in propulsion subschema, where the most common use case is having dual engine setup with propulsion.port and propulsion.starboard.

The values starter, house, port and starboard are examples and not specified in the schema. You are free to use application specific values within the regexp specified in the JSON schema.

Multiple devices providing duplicate data

It is quite possible for a key value to come from more than one device. eg position (lat/lon) could come from several gps enabled devices, and multiple depth sounders are not uncommon. We need a consistent way to handle this.

All the incoming values may well be valid in their own context, and it is feasible that all of them may be wanted, for instance, displaying depth under each hull on a catamaran.

Hence discarding or averaging is not a solution, and since signalk is unable to derive the best way to handle multiple values it must always fall to a default action, with human over-ride when needed.

The solution presented below has flaws. See

https://github.com/SignalK/specification/issues/48 for discussion.

In signal K we can leverage the above method and simply store all the devices in the tree under the main item, and have the main items source reference the options. Lets consider this for courseOverGroundTrue

If its the first value for the key, it becomes the default value and looks like this:

```
{
  "vessels": {
    "self": {
      "navigation": {
        "courseOverGroundTrue": {
          "value": 102.29,
          "source": "vessels.self.sources.n2k.actisense-115-129026"
        }
      },
      "sources": {
        "n2k": {
          "actisense-115-129026": {
            "value": 102.29,
            "bus": "/dev/actisense",
            "timestamp": "2014-08-15-16: 00: 01.083",
            "src": "115",
            "pgn": "129026"
          }
        }
      }
    }
  }
}
```

It has come from device vessels.self.sources.n2k.actisense-115-129026, where further details can be found.

If another value with different source arrives, we add the source with a unique name, so both values are in there - if its our preferred source (from persistent config) we autoswitch to it, otherwise we just record it. It look like this:

```
{
  "vessels": {
    "self": {
      "navigation": {
        "courseOverGroundTrue": {
          "timestamp": "2014-08-15-16: 00: 01.083",
          "value": 102.29,
          "source": "vessels.self.sources.n2k.actisense-115-129026"
        }
      },
      "sources": {
        "n2k": {
          "actisense-115-129026": {
            "value": 102.29,
            "bus": "/dev/actisense",
            "timestamp": "2014-08-15-16: 00: 01.083",
            "src": "115",
            "pgn": "129026"
          },
          "actisense-201-130577": {
            "value": 102.29,
            "bus": "/dev/actisense",
            "timestamp": "2014-08-15-16: 00: 00.085",
            "src": "201",
            "pgn": "130577"
          }
        }
     }
    }
 }
}
```

Rules

Now simple rules can apply to obtain the default, or any specific value:

- The implementation must ensure that the key.value holds an appropriate value. This will be easy if there is only one, and will probably be user configured if more.
- If the source value is string then it is a reference key to the source object, and can be a relative or absolute signalk key.
- The source (as a reference string) also provides a mechanism to handle deprecated keys.

- If the source value is a json object then it holds meta data on the source of the value.
- Alternate sources must be discovered manually, or by implementation specific meta-data.

To see all the entries, use the REST api or subscribe to the parent object. A given device may choose to subscribe to a specific entry in the object, allowing multiple displays of the key, or users of the various values. The 'list' verb used in a query message can provide available keys.

Unique names

The identifier for each device should be unique within the server, and possibly be constructed as follows:

```
n2k: producerid-sourceid-pgn (producer id from server configuration, others from n 2k data) - NOTE: will change, currently under discussion.

nmea0183: producerid-talkerid-sentence (like n2k)

signalk: any valid string matching regex [a-zA-Z0-9-]. eg alphabet, hyphens, and 0 to 9
```

(The nmea0183 talker id is not in the schema as I write this, it will be added shortly)

Metadata

The Use Cases

Let's assume we have engine1.rpm as a key/value in Signal K. We want to display it on our dashboard, and monitor alarms for temp, oil, rpm etc.

We can drop a generic dial gauge on our dash and display rpm, but it can't know maxRpm, or alarms unless its an engine-specific gauge, and knows where to look in the Signal K schema. So we will end up with a profusion of role specific gauges to maintain. We also have non standard key names for max, min, high, low, etc. which pollute the schema.

Currently the Signal K server has a set of specific alarm keys. These grow over time and are becoming awkward. The server can only monitor these specific keys at present as there is no mechanism for arbitrary alarm definition.

Metadata for a Data Value

Each data key should have an optional .meta object. This holds data in a standard way which enables the max/min/alarm and display to be automatically derived.

Since the settings object is always the same, the tachometer can now limit its range, and display green, yellow, and red sectors. The generic gauge can now perform this role, with correct labels etc.

The alarms problem is also improved, as the server can run a background process to monitor any key that has a .meta object, and raise a generic alarm event. By recursing the tree the alarm monitoring can find the source (engine1), giving the alarm context. See [[Alarm Handling]]

The alarms functionality then becomes generic, and grows with the spec. This is may be the case for other functionality also.

Default Configuration

Other than a few standard keys it is unlikely that the .meta can have global defaults, as it is very vessel specific (e.g. a sail boat will have speeds from 0-15kts, a ski boat will have 0-50kts). So the values will have to be configured by the user on the individual vessel as required.

It is probably possible to have profiles that set a range of default .meta, e.g. sail vessel, or motor vessel, and if two vessels have the same engine, then the engine profiles will also tend to be the same.

Alarm Management

An alarm watch is set by setting the <code>meta.zones</code> array appropriately. A background process on the server checks for alarm conditions on any attribute with a <code>meta.zones</code> array. If the keys value is within a zone the server sets an alarm key similar to <code>vessels.self.notifications.[original_key_suffix]</code>, eg an alarm set on <code>vessels.self.notifications.courseOverGroundTrue</code> will become <code>vessels.self.notifications.navigation.courseOverGroundTrue</code>.

The object found at this key should contain the following:

```
{
  "message": "any text",
  "state": "[normal|alert|warn|alarm|emergency]"
}
```

Other Benefits

The common profiles should be exportable and importable. This would allow manufacturers or other users to create profiles for specific products or use cases, which could then be imported to a vessel.

This may also have possibilities for race control or charter management. For instance a limit on lat/lon would raise an 'Out of Bounds' email on a charter vessel.

A lot of the current max/min/alarm values could be removed to simplify and standardise the spec.

Permissions Model

The permissions model for Signal K is based on the UNIX file permissions model. This was first developed in the late 1970's and is still perfectly suited to the internet today, so its got to be a pretty sound model!

So we adapted it for Signal K. See http://www.tutorialspoint.com/unix/unix-file-permission.htm

Each key in Signal K has an optional _attr value.

By default the <code>vessels.self</code> key has the above <code>_attr</code>. This effectively means that only the current vessels 'owner' can read and write from this key or any of its sub-keys. It also allows users in group <code>self</code> to read the data. This provides a way to give additional programs or users read-only access. In the above case an external user connecting from outside the vessel and requesting vessel data would receive <code>{}</code>, eg nothing.

Note: keys beginning with __ are always stripped from signal k messages

Since the above is a default, Signal K devices that lack the resources to implement security should always be installed behind a suitable gateway that can provide security. Again, the simplest security is the default read-write only within the local vessel (typically the current network). This makes a basic implementation as simple as possible.

The permissions apply recursively to all sub-keys, unless specifically overwritten. You can only provide a **narrowing** change in permissions, eg less than the parent directory. In the above case if the permissions for vessels.self.navigation.position were set to

"_mode": 644, it would have no effect as access is blocked at the vessels.self key. The vessels.self _attr must now also be "_mode": 644, and all its other subkeys explicitly set to "_mode": 640

Hence setting complex permissions are likely beyond the typical user. For this reason we believe there should be a choice of default permission 'templates' for the signal K tree. Users would select their preference from a config screen. A paranoid user may prefer the above setup, another may chose to allow basic data similar to AIS (position, cog, speed, etc), and others may expose much more.

Templates also allow sharing of data for specific uses or needs, like a social group, or a marina.

Exposing everything ("_mode" : 666) would be dangerous - it would potentially allow external users to gain control of the vessels systems, however it is useful for demos and software development. All signal K implementations should always consider the potential danger of such permissions, and protect users if possible.

The implementation of proper security is the responsibility of the Signal K software implementation provider.

By manipulating the _attr values for the Signal K keys, and creating suitable users and groups a sophisticated and well proven security model for vessel data can be created.

Ports, Urls and Versioning

Short Names

self refers to the current vessel. Normally used in vessels.self....

Ports

The Signal K HTTP and WebSocket services SHOULD be found on the usual HTTP/S ports (80 or 443). The services SHOULD be found on the same port, but may be configured for independent ports and MAY be configured for ports other than HTTP/S.

A Signal K server MAY offer Signal K over TCP or UDP, these services SHOULD be on port 55555[1].

If an alternate port is needed it SHOULD be an arbitrary high port in the range 49152–65535[2].

URL Prefix

The Signal K applications start from the <code>/signalk</code> root. This provides some protection against name collisions with other applications on the same server. Therefore the Signal K entry point will always be found by loading <code>http(s)://whost*:wport*/signalk</code>.

Versioning

The version(s) of the Signal K API that a server supports SHALL be available as a JSON object available at /signalk:

This response is defined by the discovery.json schema. In this example, the server supports two versions of the specification: 1.1.2 and 3.0. For each version, the server indicates which transport protocols it supports and the URL that can be used to access that protocol's endpoint; in the example, the 1.1.2 REST endpoint is located at http://192.168.1.2/signalk/v1/api/. Clients should use one of these published endpoints based on the protocol version they wish to use.

The server must only return valid URLs and should use IANA standard protocol names such as http. However, a server may support unofficial protocols and may return additional protocol names; for example, the response above indicates the server supports a signalk-tcp stream over TCP at on port 34568.

A server may return relative URIs that the client must resolve against the base of the original request.

REST/HTTP API: /signalk/v1/api/

Note the trailing slash in the path.

The base URL MUST provide a Signal K document that is valid according to the full Signal K schema specification. The contents SHOULD be all the current values of the data items the server knows.

If the path following the base is a valid Signal K path GET MUST retrieve the Signal K branch named by the path; e.g.

/signalk/v1/api/vessels/123456789/navigation/speedThroughWater returns

Streaming WebSocket API: /signalk/v1/stream

Initiates a WebSocket connection that will start streaming the server's updates as Signal K delta messages. You can specify the contents of the stream by using a specific URL:

- ws://hostname/signalk/v1/stream?subscribe=self
- ws://hostname/signalk/v1/stream?subscribe=all
- ws://hostname/signalk/v1/stream?subscribe=none

With no query parameter the default is self, which will stream the data related to the self object. all will stream all the updates the server sees and none will stream only the heartbeat, until the client issues subscribe messages in the WebSocket stream.

If a server does not support some streaming options listed in here it must respond with http status code 501 Not Implemented.

See Subscription Protocol for more details.

Connection Hello

Upon connection a 'hello' message is sent as follows:

```
{
  "version": "1.1.2",
  "timestamp": "2015-04-13T01:13:50.524Z",
  "self": "123456789"
}
```

Discovery and Connection Establishment

Service Discovery

A Signal K server SHOULD advertise its services using DNS Service Discovery (DNS-SD) via Mutlicast DNS (mDNS); also known as Bonjour. The server MUST provide DNS Service (SRV) Records and Text (TXT) Records describing the Signal K interfaces it provides. These service identifiers are:

- http._tcp for the server's web interface
- _signalk-http._tcp for the Signal K REST API
- _signalk-ws._tcp for the WebSocket data stream

If a server is providing Signal K via secure versions of HTTP or WebSockets then they MUST be able to provide a redirection to the secure versions of these protocols.

If a Signal K server is using DNS-SD, it MUST provide the following parameters (key/value pairs) in the TXT record portion of the DNS-SD advertisement:

- txtvers is a US-ASCII decimal number identifying the version of the DNS-SD record. Currently, this MUST have a value of 1
- roles specifies which roles the server is capable of providing. See Roles below for details

The server MAY provide the following values:

- self is the unique identifier of the vessel using the URN format specified for the
 uuid field in the Signal K schema. It may also use the URN format specified for the
 mmsi field in the Signal K schema if it exists.
- swname is the name of the Signal K server software, e.g. signalk-server-node
- swvers is the version of the Signal K server software

An example DNS-SD record set is shown below.

```
Service data for service 'signalk-http' of type '_signalk-http._tcp' in domain 'lo
cal' on 4.0:
    Host 10-1-1-40.local (10.1.1.40),
    port 80,
    TXT data: [
        'txtvers=1',
        'roles=master, main',
        'self=urn:mrn:signalk:uuid:c0d79334-4e25-4245-8892-54e8ccc8021d',
        'swname=signalk-server',
        'swvers=0.1.23'
        ]
Service data for service 'signalk-ws' of type '_signalk-ws._tcp' in domain 'local'
on 4.0:
    Host 10-1-1-40.local (10.1.1.40),
    port 3000,
    TXT data: [
        'txtvers=1',
        'roles=master, main',
        'self=urn:mrn:signalk:uuid:c0d79334-4e25-4245-8892-54e8ccc8021d',
        'swname=signalk-server',
        'swvers=0.1.23'
        ]
```

These records are advertising a Signal K server with the HTTP REST API on port 80 and the WebSocket data stream on port 3000. The server identifies as having the master and main roles and provides a self identifier as a UUID.

Roles

The four possible values for roles are master, slave, main, and aux. These are defined below.

Master

master is the canonical source for identity and configuration information for the entire vessel.

If there is only one master on the vessel, then it should also provide the main role. The combination of master and main informs a client that this server is actively providing identifying information.

Main and Aux

If there are more than one masters on the vessel, EXACTLY ONE server should advertise both master and main. All other masters should advertise master and aux. Clients should only use the master aux servers for identifying information if the master main is not available.

Any server identifying as master MUST be able to provide at a minimum the unique identifier (self) for the vessel.

Slave

Any server providing the slave role should retrieve identity and configuration information from the master server. Slave servers MAY provide configuration and identity information for themselves, but this identity MUST NOT be considered valid for the entire vesssel.


Main and Aux

The use of main and aux have not been defined for the slave role at this time.

Connection Establishment

Using the information above a web client or HTTP capable device can discover and connect to a Signal K server using the following process:

- Query for Signal K services using mDNS
- Connect to the host and port advertised as 'signalk-http' via HTTP (e.g. http://10.1.1.40:80)
- Per the Ports, Urls and Versioning section, make a GET request for /signalk to retrieve a JSON object containing an endpoints JSON object
- Make further REST calls for more specific data, or open a websocket connection to start streaming updates.

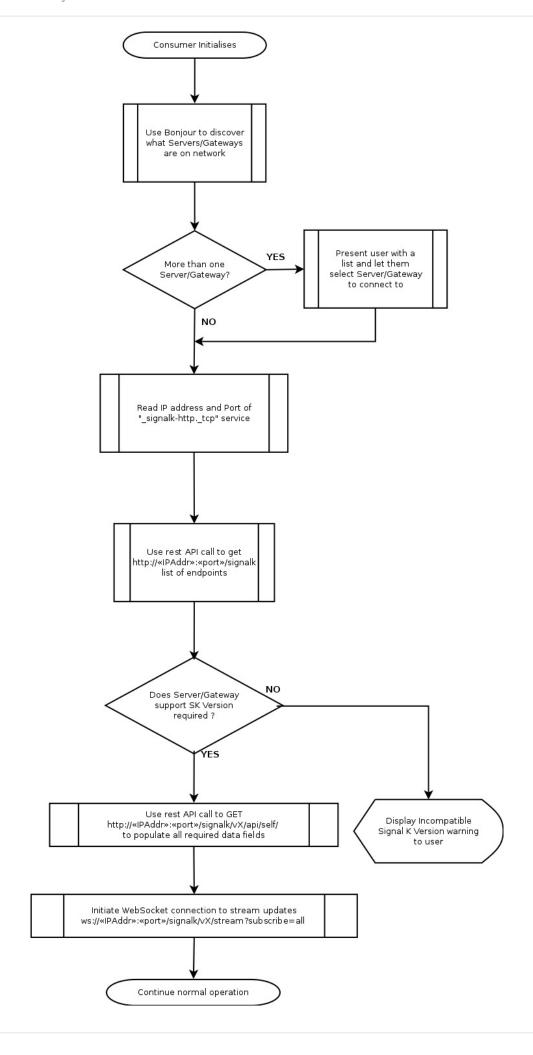

Subscription Protocol

Subcription protocol is currently available only on the Java server.

Introduction

By default a Signal K server will provide a new WebSocket client with a delta stream of the <code>vessels.self</code> record, as updates are received from sources. E.g.

/signalk/v1/stream will provide the following delta stream, every time the log value changes .

```
"context": "vessels",
   "updates": [{
      "source": {
        "pgn": "128275",
        "device": "/dev/actisense",
        "timestamp": "2014-08-15-16:00:05.538",
        "src": "115"
      },
      "values": [
          "path": "navigation.logTrip",
          "value": 43374
        },
          "path": "navigation.log",
          "value": 17404540
        }]
     }
     ]
}
```

Below we refer to WebSockets, but the same process works in the same way over any transport. E.g. for a raw TCP connection the connection causes the above message to be sent, and sending the subscribe messages will have the same effect as described here.

This can be a lot of messages, many you may not need, especially if vessel.self has many sensors, or other data sources. Generally you will want to subscribe to a much smaller range of data.

First you will want to unsubscribe from the current default (or you may have already connected with ws://hostname/signalk/v1/stream?subscribe=none). To unsubscribe all create an unsubscribe message with wildcards and send the message over the websocket connection:

```
{
    "context": "*",
    "unsubscribe": [
        {
            "path": "*"
        }
     ]
}
```

To subscribe to the required criteria send a suitable subscribe message:

path=[path.to.key] is appended to the context to specify subsets of the context.
 The path value can use the wildcard * . A wildcard in the middle of a path
 (propulsion/*/oilTemperature) allows any value for that part and a wildcard at the
 end (propulsion/port/*) matches all paths beginning with the specified prefix.

The following are optional, included above only for example as it uses defaults anyway:

- period=[millisecs] becomes the transmission rate, e.g. every period/1000 seconds. Default=1000
- format=[delta|full] specifies delta or full format. Default: delta
- policy=[instant|ideal|fixed] . Default: ideal

- o instant means send all changes as fast as they are received, but no faster than minPeriod. With this policy the client has an immediate copy of the current state of the server.
- o ideal means use instant policy, but if no changes are received before period, then resend the last known values.eg send changes asap, but send the value every period millisecs anyway, whether changed or not.
- o fixed means simply send the last known values every period .
- minPeriod=[millisecs] becomes the fastest message transmission rate allowed,
 e.g. every minPeriod/1000 seconds. This is only relevant for policy='instant' to avoid swamping the client or network.

You can subscribe to multiple data keys multiple times, from multiple apps or devices. Each app or device simply subscribes to the data it requires, and the server and/or client implementation may combine subscriptions to avoid duplication as it prefers on a per connection basis. At the same time it is good practice to open the minimum connections necessary, for instance one websocket connection shared bewteen an instrument panel with many gauges, rather then one websocket connection per gauge.

When data is required once only, or upon request the subscribe/unsubscribe method should not be used. If the client is http capable the REST api is a good choice, or use get/list/put messages over websockets or tcp.

The get/list/put messages work in the same way as their GET/PUT REST equivalents, returning a json result for the requested path.

Use Cases and Proposed Solutions

Local boat individual instruments

A gauge-type display for just one or a few data items for the 'self' vessel should be able to specify that it only wants those items for the self vessel.

This can be achieved by a default WebSocket connection /signalk/v1/stream? subcribe=none, then sending a JSON message:

```
{
  "context": "vessels.self",
  "subscribe": [
      {
            "path": "environment.depth.belowTransducer"
      },
      {
            "path": "navigation.speedThroughWater"
       }
    ]
}
```

The JSON format is also viable over a simple TCP or serial transport, and is therefore supported as the primary subscription method.

Map display with all known vessel positions & directions, served over 3G cellular connection

```
{
  "context": "vessels.*",
  "subscribe": [
      {
            "path": "navigation.position",
            "period": 120000,
            "policy": "fixed"
      },
      {
             "path": "navigation.courseOverGround",
            "period": 120000,
            "policy": "fixed"
      }
    ]
}
```

The result is a delta message of the Signal K data with just position and courseOverGround branches for all known vessels, sent every 2 minutes (120 seconds) even if no data has been updated.

Position of a certain vessel, immediately it changes, but once per minute at most

The result will be delta position messages for vessel 230029970, broadcast whenever it changes, but with minimum interval of 60 seconds. Messages are delayed to meet the minimum interval with newer messages overriding the previous message in the buffer.

Alarm, Alert, and Notification Handling

Handling alarms, alerts, and notifications in Signal K is a multi-stage process. Alarms, alerts and notifications are all handled the same way, and are all referred to as alarms below.

We need a flexible model to define alarm conditions, and a standard way to announce and record them.

Alarm Process

- Define alarm states as zones in the meta object attached to any Signal K value. See [[Metadata for Data Values]]
- If the value is within an alarm zone raise the defined alarm.
- If the value goes out of the zone, remove the alarm by setting its value to null
- Alarms are raised by placing an alarm object in the vessels.self.notifications tree

Expected implementation behaviour

- The server (or device) should monitor the current value and compare it to the defined zones.
- If a value enters an alarm zone, then a key is written to vessels.self.notifications..
- If a value leaves an alarm zone, then the key is removed from vessels.self.notifications..
- Alarms raised are monitored by an alarm process on the server, which takes appropriate action, sounding alarms, or displaying messages.
- Clients interested in alarms can subcribe to the vessels.self.notifications... tree in the usual way and be informed of alarms in the same way as normal signalk keys.
- When an alarms is removed, a delta should be sent to subscribers with the path and a null value.

Example

eg If we exceed our anchor alarm radius: vessels.self.navigation.anchor.currentRadius enters vessels.self.navigation.anchor.currentRadius.meta.zones[[50,500, "alarm", "Dragging anchor!"]],

The alarm is: vessels.self.notifications.navigation.anchor.currentRadius

The alarm object is

```
{
  "method": ["sound"],
  "state": "alarm",
  "message": "Dragging anchor!",
  "timestamp": ..,
  "source": {..}
}
```

The server alarm manager will see this new entry and turn on the alarm. Using a manager process allows flexibility in situations where multiple alarms are triggered and your vessel is a mass of flashing and beeping. eg A single 'Pause' button can give you 5-10 minutes to take action, stopping annoying noise, and removing popup messages from screens.

Since the vessels.self.notifications tree mirrors the other data in the signal k model, we can selectively watch or react to specific branches or keys. When displaying multiple alarms a screen can also sort and filter them.

Other Alarms

Above we have discussed monitoring existing values and raising alarms. There are other alarms that must be considered, eg MOB, fire, sinking etc, and misc alerts "GPS signal lost".etc.

The vessels.[uuid].notifications tree is the same as any other Signal k branch. Keys can be added and removed as required in the usual way. Since the branch is being monitored we only need to add a key of any sort to create a suitable alarm.

In the case of an emergency, create a unique key: The alarm is : vessels. [uuid].notifications.[alarm.key]

The alarm object is

```
{
  "method": ["visual", "sound"],
  "state": "emergency",
  "message": "Man Overboard!",
  ...
}
```

Alarm objects that have been raised this way must be cleared manually, or by the process that created them. You can use any suitable path, keeping in mind the context of the alarm.

eg In the case of an alert, create a unique key by generating a path: The alarm is : vessels.[uuid].notifications.navigation.gnss

The alarm object is

```
{
  "method": ["visual"],
  "state": "alert",
  "message": "GPS signal lost!",
  ...
}
```

Well Known Names

Some alarms are especially important, eg MOB. This is a list of keys for special alarms.

```
..notifications.mob.*
..notifications.fire.*
..notifications.sinking.*
..notifications.flooding.*
..notifications.collision.*
..notifications.grounding.*
..notifications.listing.*
..notifications.adrift.*
..notifications.piracy.*
..notifications.abandon.*
```

An example to send an MOB alarm from an N2K source, the gateway would convert and send something like:

```
"context": "vessels.urn:mrn:signalk:uuid:c0d79334-4e25-4245-8892-54e8ccc8021d",
  "updates": [
    {
      "source": {
        "timestamp": "2014-08-15-16:00:05.538",
      "values": [
        {
          "path": "notifications.mob",
          "value": {
            "message": "MOB",
            "state": "emergency",
            "method": ["visual", "sound"]
          }
        }
      ]
    }
 }
}
```

The resulting full signalk tree would be:

```
{
  "vessels": {
    "urn:mrn:signalk:uuid:c0d79334-4e25-4245-8892-54e8ccc8021d": {
      "notifications": {
        "mob":{
          "message": "MOB",
          "timestamp": "2014-04-10T08:33:53Z",
          "source": {
             . . .
          },
          "state": "emergency",
          "method": ["visual", "sound"]
        }
      }
    }
 }
}
```

To clear the alarm condition, send:

Multiple cases of the same alarm

Should multiple cases of the same alarm occur (eg a gps loses signal, then a second gps loses signal) the alarms are handled the same as any other multiple values in signalk. However alarms will tend to be re-issued whenever the underlying data changes.

The servers alarm monitoring processes are expected to be smart enough to know that the anchor alarm is triggered, and its not necessary to raise a second copy of the same alarm, after all there is only one boat dragging!

This may be handled differently for notifications. It may be useful to know that your gps's are all failing intermittently, or that. Hence the handling of multiple copies of alarms is an implementation issue, and may vary.

The key should be unique

If we have an alarm <code>vessels.self.notifications.navigation.anchor.currentRadius</code> and we attempt to write another higher in the same tree at <code>vessels.self.notifications</code> it must not replace or remove the existing alarm. Since the <code>meta.zones</code> structure is only valid on signalk leaf values this occurs naturally in most circumstances. But it is possible to set an alarm value arbitrarily (eg MOB) and care should be taken in implementations that keys do not overwrite existing paths.

Background and Design Rationale

Arrays Are Evil

In Signal K every datapoint should have a predictable and unique uri (address). What we want to maintain is to know that vessels.self.data.temp is always at that uri, and what the json form is. So if its an array thats workable. If its a json object with many instance keys, each which has a arbitrary name and the same internal structure that works too.

In fact the two forms represent the same data but have different uris and thats the crux. Essentially the first is data.item[collection], where data.item[1] is instance 1, eg the second (0 based) item in the array.

This is no different from data.item as the json object, and data.item.1 as the instance, with the name '1'.

From a code perspective its similar too, the object just has an array of keys. But with objects data.temp.instanceName.value is reliable and always the same.

Does that apply for data.temp[1].value? eg how do you reliably get data.temp.air.value with arrays?

In signalk or java or js, if I have two values in the array, and add one, then remove the first, suddenly the subscriptions are all wrong. The temp[1] did point to the second (0 based) object in the array, but after removing the first its now temp[0]. Subscriptions to temp[1] are now broken.

For an object temp[air] always gets the temp.air. Adding or removing other keys does not affect 'air'.

The array problem can be overcome by programming - but basically thats just fixing a problem that can be easily avoided by not using arrays.

This is a quick start for any-one that would like to contribute. Its roughly from technically unskilled to skilled, top to bottom. Dont be afraid to ask for help. Each task will probably start with a new thread for more details on the Google groups

(https://groups.google.com/forum/#!forum/signalk). Be patient, civil, and persistent :-)

Completely unskilled at boat electronics:

- Join https://groups.google.com/forum/#!forum/signalk as the user base grows, so does awareness.
- Tell others, spread the word
- Fly a Signal K flag from your boat
- If you have special skills (eg motors, batteries, navigation, etc) help us extend the Signal K protocol by identifying what we need to cover.
- Ask manufacturers about Signal K support
- Ask questions about what you dont understand, and collate the answers for us to put on the website.

Can do own installs, handyman, but not IT skilled.

• Try an install of Raspberry Pi and WIFI, document exactly how you did it, so others can follow.

Website or documentation skills

• Help us maintain the website, and improve the documents

Good computer skills, but not programming

- Download and try the java server (https://github.com/SignalK/signalk-server-java)
 and node server (https://github.com/SignalK/signalk-server-node) and the various
 apps and clients. Help test and identify issues, help improve documents so others
 can follow easier.
- Help with User manuals!

Systems engineer

- Help other users, help with scripts, develop and maintain install processes, managing our web sites, etc.
- Examples:
 - Create Debian packages of the Signal K software for easy installation to Raspbian

Software developer

• Download and test/fix our stuff, add improvements, join the team and help code, develop support in your own software.

Microprocessors

• Improve our Arduino stuff, add your own, incorporate Signal K into your products.

Signal K Data Model Reference

This document is meant as the human-oriented reference to accompany the actual JSON Schema specification and is produced from the schema files. Any changes to the reference material below should be made to the original schema files.

Signal K uses SI units almost everywhere, with the exception of geographic coordinates. The following units are in use:

- A: Ampere
- C: Coulomb
- Hz : Hertz
- ISO-8601 (UTC): ISO-8601 string representation of time in Universal Time Coordinated
- J: Joule
- K : Kelvin
- Pa: Pascal
- V: Volt
- W: Watt
- deg: Degree
- kg : Kilogram
- m: Meter
- m/s: Meters per second
- m2 : Square meter
- m3: Cubic meter
- m3/s : Cubic meter per second
- rad : Radian
- rad/s : Radian per second
- ratio : Ratios : Second

Keys

/self

Description: This holds the key (UUID, MMSI or URL) of this vessel, the actual data is in the vessels array.

/vessels

Description: A wrapper object for vessel objects, each describing vessels in range, including this vessel.

/vessels/<RegExp>

Title: vessel

Description: An object describing an individual vessel. It should be an object in vessels,

named using MMSI or a UUID

/vessels/<RegExp>/url

Description: URL based identity of the vessel, if available.

/vessels/<RegExp>/mmsi

Description: MMSI number of the vessel, if available.

/vessels/<RegExp>/uuid

Description: A unique Signal K flavoured maritime resource identifier, assigned by the server.

/vessels/<RegExp>/name

Description: The common name of the vessel

/vessels/<RegExp>/flag

Description: The country of ship registration, or flag state of the vessel

/vessels/<RegExp>/port

Description: The home port of the vessel

/vessels/<RegExp>/registrations

Description: The various registrations of the vessel.

/vessels/<RegExp>/registrations/imo

Description: The IMO number of the vessel.

/vessels/<RegExp>/registrations/national

Description: The national registration number of the vessel.

/vessels/<RegExp>/registrations/national/<RegExp>

Description: This regex pattern is used for validating the identifier for the registration

/vessels/<RegExp>/registrations/national/<RegExp>/country

Description: The ISO 3166-2 country code.

/vessels/<RegExp>/registrations/national/<RegExp>/registration

Description: The registration code

/vessels/<RegExp>/registrations/national/<RegExp>/description

Description: The registration description

/vessels/<RegExp>/registrations/local

Description: A local or state registration number of the vessel.

/vessels/<RegExp>/registrations/local/<RegExp>

Description: This regex pattern is used for validating the identifier for the registration

/vessels/<RegExp>/registrations/local/<RegExp>/registration

Description: The registration code

/vessels/<RegExp>/registrations/local/<RegExp>/description

Description: The registration description

/vessels/<RegExp>/registrations/other

Description: Other registration or permits for the vessel.

/vessels/<RegExp>/registrations/other/<RegExp>

Description: This regex pattern is used for validating the identifier for the registration

/vessels/<RegExp>/registrations/other/<RegExp>/registration

Description: The registration code

/vessels/<RegExp>/registrations/other/<RegExp>/descript ion

Description: The registration description

/vessels/<RegExp>/communication

Title: communication

Description: Communication data including Radio, Telephone, E-Mail, etc.

/vessels/<RegExp>/communication/callsignVhf

Description: Callsign for VHF communication

/vessels/<RegExp>/communication/callsignHf

Description: Callsign for HF communication

/vessels/<RegExp>/communication/phoneNumber

Description: Phone number of skipper

/vessels/<RegExp>/communication/emailHf

Description: Email address to be used for HF email (Winmail, Airmail, Sailmail)

/vessels/<RegExp>/communication/email

Description: Regular email for the skipper

/vessels/<RegExp>/communication/satPhoneNumber

Description: Satellite phone number for vessel.

/vessels/<RegExp>/communication/skipperName

Description: Full name of the skipper of the vessel.

/vessels/<RegExp>/communication/crewNames

Description: Array with the names of the crew

/vessels/<RegExp>/environment

Title: environment

Description: Environmental data measured locally including Depth, Wind, Temp, etc.

/vessels/<RegExp>/environment/outside

Description: [missing]

/vessels/<RegExp>/environment/outside/temperature

Units: K (Kelvin)

Description: Current outside air temperature

/vessels/<RegExp>/environment/outside/dewPointTemper ature

Units: K (Kelvin)

Description: Current outside dew point temperature

/vessels/<RegExp>/environment/outside/apparentWindCh illTemperature

Units: K (Kelvin)

Description: Current outside apparent wind chill temperature

/vessels/<RegExp>/environment/outside/theoreticalWindC hillTemperature

Units: K (Kelvin)

Description: Current outside theoretical wind chill temperature

/vessels/<RegExp>/environment/outside/heatIndexTempe rature

Units: K (Kelvin)

Description: Current outside heat index temperature

/vessels/<RegExp>/environment/outside/pressure

Units: Pa (Pascal)

Description: Current outside air ambient pressure

/vessels/<RegExp>/environment/outside/humidity

Units: ratio (Ratio)

Description: Current outside air relative humidity

/vessels/<RegExp>/environment/inside

Description: [missing]

/vessels/<RegExp>/environment/inside/temperature

Units: K (Kelvin)

Description: Current inside air temperature

/vessels/<RegExp>/environment/inside/humidity

Units: ratio (Ratio)

Description: Current inside air relative humidity

/vessels/<RegExp>/environment/inside/engineRoom

Description: Current engine room air temperature

/vessels/<RegExp>/environment/inside/engineRoom/temp erature

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/inside/mainCabin

Description: Current main cabin air temperature

/vessels/<RegExp>/environment/inside/mainCabin/temper ature

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/inside/refrigerator

Description: Current refrigerator temperature

/vessels/<RegExp>/environment/inside/refrigerator/tempe rature

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/inside/freezer

Description: Current freezer temperature

/vessels/<RegExp>/environment/inside/freezer/temperatur e

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/inside/heating

Description: Current heating temperature

/vessels/<RegExp>/environment/inside/heating/temperature

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/water

Description: [missing]

/vessels/<RegExp>/environment/water/temperature

Units: K (Kelvin)

Description: Current water temperature

/vessels/<RegExp>/environment/water/salinity

Units: ratio (Ratio)

Description: Water salinity

/vessels/<RegExp>/environment/water/liveWell

Description: Current livewell temperature

/vessels/<RegExp>/environment/water/liveWell/temperature

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/water/baitWell

Description: Current baitwell air temperature

/vessels/<RegExp>/environment/water/baitWell/temperature

Units: K (Kelvin)

Description: Temperature

/vessels/<RegExp>/environment/depth

Title: depth

Description: Depth related data

/vessels/<RegExp>/environment/depth/belowKeel

Units: m (Meter)

Description: Depth below keel

/vessels/<RegExp>/environment/depth/belowTransducer

Units: m (Meter)

Description: Depth below Transducer

/vessels/<RegExp>/environment/depth/belowSurface

Units: m (Meter)

Description: Depth from surface

/vessels/<RegExp>/environment/depth/transducerToKeel

Units: m (Meter)

Description: Depth from the transducer to the bottom of the keel

/vessels/<RegExp>/environment/depth/surfaceToTransducer

Units: m (Meter)

Description: Depth transducer is below the water surface

/vessels/<RegExp>/environment/current

Title: current

Description: Direction and strength of current affecting the vessel

/vessels/<RegExp>/environment/tide

Title: tide

Description: Tide data

/vessels/<RegExp>/environment/tide/heightHigh

Units: m (Meter)

Description: Next high tide height relative to lowest astronomical tide (LAT/Chart

Datum)

/vessels/<RegExp>/environment/tide/heightNow

Units: m (Meter)

Description: The current tide height relative to lowest astronomical tide (LAT/Chart

Datum)

/vessels/<RegExp>/environment/tide/heightLow

Units: m (Meter)

Description: The next low tide height relative to lowest astronomical tide (LAT/Chart

Datum)

/vessels/<RegExp>/environment/tide/timeLow

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time

Coordinated)

Description: Time of the next low tide in UTC

/vessels/<RegExp>/environment/tide/timeHigh

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time

Coordinated)

Description: Time of next high tide in UTC

/vessels/<RegExp>/environment/heave

Units: m (Meter)

Description: Vertical movement of the vessel due to waves

/vessels/<RegExp>/environment/wind

Title: wind

Description: Wind data.

/vessels/<RegExp>/environment/wind/angleApparent

Units: rad (Radian)

Description: Apparent wind angle, negative to port

/vessels/<RegExp>/environment/wind/angleTrueGround

Units: rad (Radian)

Description: True wind angle based on speed over ground, negative to port

/vessels/<RegExp>/environment/wind/angleTrueWater

Units: rad (Radian)

Description: True wind angle based on speed through water, negative to port

/vessels/<RegExp>/environment/wind/directionChangeAlarm

Units: rad (Radian)

Description: The angle the wind needs to shift to raise an alarm

/vessels/<RegExp>/environment/wind/directionTrue

Units: rad (Radian)

Description: The wind direction relative to true north

/vessels/<RegExp>/environment/wind/directionMagnetic

Units: rad (Radian)

Description: The wind direction relative to magnetic north

/vessels/<RegExp>/environment/wind/speedTrue

Units: m/s (Meters per second)

Description: Wind speed over water (as calculated from speedApparent and vessel's

speed through water)

/vessels/<RegExp>/environment/wind/speedOverGround

Units: m/s (Meters per second)

Description: Wind speed over ground (as calculated from speedApparent and vessel's

speed over ground)

/vessels/<RegExp>/environment/wind/speedApparent

Units: m/s (Meters per second)

Description: Apparent wind speed

/vessels/<RegExp>/environment/time

Description: A time reference onboard.

/vessels/<RegExp>/environment/time/millis

Title: Epoch time

Description: Milliseconds since the UNIX epoch (1970-01-01 00:00:00)

/vessels/<RegExp>/environment/time/timezone

Title: Timezone offset

Description: Timezone offset in hours and minutes (-)hhmm

/vessels/<RegExp>/environment/mode

Description: Mode of the vessel based on the current conditions. Can be combined with navigation state to control vessel signals eg switch to night mode for instrumentation and lights, or make sound signals for fog.

/vessels/<RegExp>/navigation

Title: navigation

Description: Navigation data including Position, Course to next WP information, etc.

/vessels/<RegExp>/navigation/lights

Title: Navigation lights

Description: Current state of the vessels navigation lights

/vessels/<RegExp>/navigation/courseOverGroundMagnetic

Units: rad (Radian)

Description: Course over ground (magnetic)

/vessels/<RegExp>/navigation/courseOverGroundTrue

Units: rad (Radian)

Description: Course over ground (true)

/vessels/<RegExp>/navigation/courseRhumbline

Title: Course

Description: Course information computed with Rhumbline

/vessels/<RegExp>/navigation/courseRhumbline/crossTrackError

Units: m (Meter)

Description: The distance from the vessel's present position to the closest point on a line (track) between previousPoint and nextPoint. A negative number indicates that the vessel is currently to the left of this line (and thus must steer right to compensate), a positive number means the vessel is to the right of the line (steer left to compensate).

/vessels/<RegExp>/navigation/courseRhumbline/bearingTrackTrue

Units: rad (Radian)

Description: The bearing of a line between previousPoint and nextPoint, relative to true

north.

/vessels/<RegExp>/navigation/courseRhumbline/bearingTrackMagnetic

Units: rad (Radian)

Description: The bearing of a line between previousPoint and nextPoint, relative to

magnetic north.

/vessels/<RegExp>/navigation/courseRhumbline/activeRoute

Description: [missing]

/vessels/<RegExp>/navigation/courseRhumbline/activeRoute/href

Description: A reference (URL) to the presently active route, in resources.

/vessels/<RegExp>/navigation/courseRhumbline/activeRoute/estimatedTimeOfArrival

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time Coordinated)

Description: The estimated time of arrival at the end of the current route

/vessels/<RegExp>/navigation/courseRhumbline/activeRoute/startTime

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time Coordinated)

Description: The time this route was activated

/vessels/<RegExp>/navigation/courseRhumbline/nextPoint

Description: The point on earth the vessel's presently navigating towards

/vessels/<RegExp>/navigation/courseRhumbline/previous Point

Description: The point on earth the vessel's presently navigating from

/vessels/<RegExp>/navigation/courseGreatCircle

Title: Course

Description: Course information computed with Great Circle

/vessels/<RegExp>/navigation/courseGreatCircle/crossTrackError

Units: m (Meter)

Description: The distance from the vessel's present position to the closest point on a line (track) between previousPoint and nextPoint. A negative number indicates that the vessel is currently to the left of this line (and thus must steer right to compensate), a positive number means the vessel is to the right of the line (steer left to compensate).

/vessels/<RegExp>/navigation/courseGreatCircle/bearing TrackTrue

Units: rad (Radian)

Description: The bearing of a line between previousPoint and nextPoint, relative to true

north.

/vessels/<RegExp>/navigation/courseGreatCircle/bearing TrackMagnetic

Units: rad (Radian)

Description: The bearing of a line between previousPoint and nextPoint, relative to

magnetic north.

/vessels/<RegExp>/navigation/courseGreatCircle/activeR oute

Description: [missing]

/vessels/<RegExp>/navigation/courseGreatCircle/activeR oute/href

Description: A reference (URL) to the presently active route, in resources.

/vessels/<RegExp>/navigation/courseGreatCircle/activeR oute/estimatedTimeOfArrival

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time Coordinated)

Description: The estimated time of arrival at the end of the current route

/vessels/<RegExp>/navigation/courseGreatCircle/activeR oute/startTime

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time Coordinated)

Description: The time this route was activated

/vessels/<RegExp>/navigation/courseGreatCircle/nextPoint

Description: The point on earth the vessel's presently navigating towards

/vessels/<RegExp>/navigation/courseGreatCircle/previousPoint

Description: The point on earth the vessel's presently navigating from

/vessels/<RegExp>/navigation/racing

Description: [missing]

/vessels/<RegExp>/navigation/racing/startLineStb

Description: [missing]

/vessels/<RegExp>/navigation/racing/startLinePort

Description: [missing]

/vessels/<RegExp>/navigation/racing/distanceStartline

Units: m (Meter)

Description: The current distance to the start line

/vessels/<RegExp>/navigation/racing/timeToStart

Units: s (Second)

Description: Time left before start

/vessels/<RegExp>/navigation/racing/timePortDown

Units: s (Second)

Description: Time to arrive at the start line on port, turning downwind

/vessels/<RegExp>/navigation/racing/timePortUp

Units: s (Second)

Description: Time to arrive at the start line on port, turning upwind

/vessels/<RegExp>/navigation/racing/timeStbdDown

Units: s (Second)

Description: Time to arrive at the start line on starboard, turning downwind

/vessels/<RegExp>/navigation/racing/timeStbdUp

Units: s (Second)

Description: Time to arrive at the start line on starboard, turning upwind

/vessels/<RegExp>/navigation/racing/distanceLayline

Units: m (Meter)

Description: The current distance to the layline

/vessels/<RegExp>/navigation/magneticVariation

Units: rad (Radian)

Description: The magnetic variation (declination) at the current position

/vessels/<RegExp>/navigation/magneticVariationAgeOfService

Units: s (Second)

Description: Seconds since the 1st Jan 1970 that the variation calculation was made

/vessels/<RegExp>/navigation/destination

Title: destination

Description: The intended destination of this trip

/vessels/<RegExp>/navigation/destination/eta

Units: ISO-8601 (UTC) (ISO-8601 string representation of time in Universal Time

Coordinated)

Description: ISO-8601 (UTC) string representing date and time.

/vessels/<RegExp>/navigation/destination/waypoint

Description: UUID of destination waypoint

/vessels/<RegExp>/navigation/gnss

Title: gnss

Description: Global satellite navigation meta information

/vessels/<RegExp>/navigation/gnss/methodQuality

Description: Quality of the satellite fix

/vessels/<RegExp>/navigation/gnss/integrity

Description: Integrity of the satellite fix

/vessels/<RegExp>/navigation/gnss/satellites

Description: Number of satellites

/vessels/<RegExp>/navigation/gnss/antennaAltitude

Units: m (Meter)

Description: Altitude of antenna

/vessels/<RegExp>/navigation/gnss/horizontalDilution

Description: Horizontal Dilution of Precision

/vessels/<RegExp>/navigation/gnss/positionDilution

Description: Positional Dilution of Precision

/vessels/<RegExp>/navigation/gnss/geoidalSeparation

Description: Difference between WGS84 earth ellipsoid and mean sea level

/vessels/<RegExp>/navigation/gnss/differentialAge

Units: s (Second)

Description: Age of DGPS data

/vessels/<RegExp>/navigation/gnss/differentialReference

Description: ID of DGPS base station

/vessels/<RegExp>/navigation/headingMagnetic

Units: rad (Radian)

Description: Current magnetic heading of the vessel

/vessels/<RegExp>/navigation/headingTrue

Units: rad (Radian)

Description: The current true heading of the vessel

/vessels/<RegExp>/navigation/position

Description: The position of the vessel in 2 or 3 dimensions (WGS84 datum)

/vessels/<RegExp>/navigation/attitude

Title: Attitude

Description: Vessel attitude: roll, pitch and yaw

/vessels/<RegExp>/navigation/rateOfTurn

Units: rad/s (Radian per second)

Description: Rate of turn (+ve is change to starboard)

/vessels/<RegExp>/navigation/speedOverGround

Units: m/s (Meters per second)

Description: Vessel speed over ground

/vessels/<RegExp>/navigation/speedThroughWater

Units: m/s (Meters per second)

Description: Vessel speed through the water

/vessels/<RegExp>/navigation/log

Units: m (Meter)

Description: Log value

/vessels/<RegExp>/navigation/logTrip

Units: m (Meter)

Description: Trip log value

/vessels/<RegExp>/navigation/state

Title: state

Description: Current navigational state of the vessel

/vessels/<RegExp>/navigation/anchor

Title: anchor

Description: The anchor data, for anchor watch etc

/vessels/<RegExp>/navigation/anchor/maxRadius

Units: m (Meter)

Description: Radius of anchor alarm boundary. The distance from anchor to the center

of the boat

/vessels/<RegExp>/navigation/anchor/currentRadius

Units: m (Meter)

Description: Current distance to anchor

/vessels/<RegExp>/navigation/anchor/position

Description: The actual anchor position of the vessel in 3 dimensions, probably an estimate at best

/vessels/<RegExp>/navigation/datetime

Description: [missing]

/vessels/<RegExp>/propulsion

Title: propulsion

Description: Engine data, each engine identified by a unique name i.e. Port Engine

/vessels/<RegExp>/propulsion/<RegExp>

Description: This regex pattern is used for validation of the identifier for the propulsion unit

/vessels/<RegExp>/propulsion/<RegExp>/label

Description: Human readable label for the propulsion unit

/vessels/<RegExp>/propulsion/<RegExp>/state

Description: The current state of the engine

/vessels/<RegExp>/propulsion/<RegExp>/revolutions

Units: Hz (Hertz)

Description: Engine revolutions (x60 for RPM)

/vessels/<RegExp>/propulsion/<RegExp>/temperature

Units: K (Kelvin)

Description: Engine temperature

/vessels/<RegExp>/propulsion/<RegExp>/oilTemperature

Units: K (Kelvin)

Description: Oil temperature

/vessels/<RegExp>/propulsion/<RegExp>/oilPressure

Units: Pa (Pascal)

Description: Oil pressure

/vessels/<RegExp>/propulsion/<RegExp>/alternatorVoltag

Units: V (Volt)

Description: Alternator voltage

/vessels/<RegExp>/propulsion/<RegExp>/runTime

Units: s (Second)

Description: Total running time for engine (Engine Hours in seconds)

/vessels/<RegExp>/propulsion/<RegExp>/coolantTempera ture

Units: K (Kelvin)

Description: Coolant temperature

/vessels/<RegExp>/propulsion/<RegExp>/coolantPressur e

Units: Pa (Pascal)

Description: Coolant pressure

/vessels/<RegExp>/propulsion/<RegExp>/boostPressure

Units: Pa (Pascal)

Description: Engine boost (turbo, supercharger) pressure

/vessels/<RegExp>/propulsion/<RegExp>/engineLoad

Units: ratio (Ratio)

Description: Engine load ratio, 0<=ratio<=1, 1 is 100%

/vessels/<RegExp>/propulsion/<RegExp>/engineTorque

Units: ratio (Ratio)

Description: Engine torque ratio, 0<=ratio<=1, 1 is 100%

/vessels/<RegExp>/propulsion/<RegExp>/transmission

Description: [missing]

/vessels/<RegExp>/propulsion/<RegExp>/transmission/ge ar

Description: [missing]

/vessels/<RegExp>/propulsion/<RegExp>/transmission/ge arRatio

Units: ratio (Ratio)

Description: Gear ratio, engine rotations per propeller shaft rotation

/vessels/<RegExp>/propulsion/<RegExp>/transmission/oil Temperature

Units: K (Kelvin)

Description: Oil temperature

/vessels/<RegExp>/propulsion/<RegExp>/transmission/oil Pressure

Units: Pa (Pascal)

Description: Oil pressure

/vessels/<RegExp>/propulsion/<RegExp>/drive

Description: [missing]

/vessels/<RegExp>/propulsion/<RegExp>/drive/type

Description: [missing]

Enum values:

- saildrive
- shaft
- outboard
- jet
- pod
- other

/vessels/<RegExp>/propulsion/<RegExp>/drive/trimState

Units: ratio (Ratio)

Description: Trim/tilt state, 0<=ratio<=1, 1 is 100% up

/vessels/<RegExp>/propulsion/<RegExp>/drive/thrustAngle

Units: rad (Radian)

Description: Current thrust angle for steerable drives, +ve is thrust to Starboard

/vessels/<RegExp>/propulsion/<RegExp>/drive/propeller

Description: [missing]

/vessels/<RegExp>/propulsion/<RegExp>/fuel

Description: [missing]

/vessels/<RegExp>/propulsion/<RegExp>/fuel/type

Description: Fuel type

Enum values:

- diesel
- petrol
- electric
- coal/wood
- other

/vessels/<RegExp>/propulsion/<RegExp>/fuel/used

Units: m3 (Cubic meter)

Description: Used fuel since last reset. Resetting is at user discretion

/vessels/<RegExp>/propulsion/<RegExp>/fuel/pressure

Units: Pa (Pascal)

Description: Fuel pressure

/vessels/<RegExp>/propulsion/<RegExp>/fuel/rate

Units: m3/s (Cubic meter per second)

Description: Fuel rate of consumption

/vessels/<RegExp>/propulsion/<RegExp>/fuel/economyRate

Units: m3/s (Cubic meter per second)

Description: Economy fuel rate of consumption

/vessels/<RegExp>/propulsion/<RegExp>/fuel/averageRat e

Units: m3/s (Cubic meter per second)

Description: Average fuel rate of consumption

/vessels/<RegExp>/propulsion/<RegExp>/exhaustTemper ature

Units: K (Kelvin)

Description: Exhaust temperature

/vessels/<RegExp>/electrical

Title: electrical

Description: Electrical data, each electrical device indentified by a unique name i.e.

Battery_1

/vessels/<RegExp>/electrical/batteries

Description: [missing]

/vessels/<RegExp>/electrical/batteries/<RegExp>

Title: Battery keyed by instance id

Description: Batteries, one or many, within the vessel

/vessels/<RegExp>/electrical/batteries/<RegExp>/associat edBus

Description: Name of BUS device is associated with

/vessels/<RegExp>/electrical/batteries/<RegExp>/voltage

Units: V (Volt)

Description: [missing]

/vessels/<RegExp>/electrical/batteries/<RegExp>/current

Units: A (Ampere)

Description: [missing]

/vessels/<RegExp>/electrical/batteries/<RegExp>/temperature

Title: temperature

Description: Additional / unique temperatures associated with a battery

/vessels/<RegExp>/electrical/batteries/<RegExp>/tempera ture/limitDischargeLower

Units: K (Kelvin)

Description: Operational minimum temperature limit for battery discharge

/vessels/<RegExp>/electrical/batteries/<RegExp>/tempera ture/limitDischargeUpper

Units: K (Kelvin)

Description: Operational maximum temperature limit for battery discharge

/vessels/<RegExp>/electrical/batteries/<RegExp>/tempera ture/limitRechargeLower

Units: K (Kelvin)

Description: Operational minimum temperature limit for battery recharging

/vessels/<RegExp>/electrical/batteries/<RegExp>/temperature/limitRechargeUpper

Units: K (Kelvin)

Description: Operational maximum temperature limit for battery recharging

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity

Title: capacity

Description: [missing]

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity /nominal

Units: J (Joule)

Description: The capacity of battery as specified by the manufacturer

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity /actual

Units: J (Joule)

Description: The measured capacity of battery. This may change over time and will

likely deviate from the nominal capacity.

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity/remaining

Units: J (Joule)

Description: Capacity remaining in battery

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity/dischargeLimit

Units: J (Joule)

Description: Minimum capacity to be left in the battery while discharging

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity/stateOfCharge

Units: ratio (Ratio)

Description: State of charge, 1 = 100%

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity/stateOfHealth

Units: ratio (Ratio)

Description: State of Health, 1 = 100%

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity/dischargeSinceFull

Units: C (Coulomb)

Description: Cumulative discharge since battery was last full

/vessels/<RegExp>/electrical/batteries/<RegExp>/capacity /timeRemaining

Units: s (Second)

Description: Time to discharge to discharge limit at current rate

/vessels/<RegExp>/electrical/batteries/<RegExp>/lifetime Discharge

Units: C (Coulomb)

Description: Cumulative charge discharged from battery over operational lifetime of

battery

/vessels/<RegExp>/electrical/batteries/<RegExp>/lifetime Recharge

Units: C (Coulomb)

Description: Cumulative charge recharged into battery over operational lifetime of

battery

/vessels/<RegExp>/electrical/inverters

Description: [missing]

/vessels/<RegExp>/electrical/inverters/<RegExp>

Title: Inverter

Description: DC to AC inverter, one or many, within the vessel

/vessels/<RegExp>/electrical/inverters/<RegExp>/dc

Title: DC Quantities

Description: DC common quantities

/vessels/<RegExp>/electrical/inverters/<RegExp>/dc/asso ciatedBus

Description: Name of BUS device is associated with

/vessels/<RegExp>/electrical/inverters/<RegExp>/dc/voltage

Units: V (Volt)

Description: [missing]

/vessels/<RegExp>/electrical/inverters/<RegExp>/dc/curre nt

Units: A (Ampere)

Description: [missing]

/vessels/<RegExp>/electrical/inverters/<RegExp>/dc/temp erature

Title: temperature

Description: [missing]

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac

Title: AC Quantities

Description: AC equipment common quantities

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/asso ciatedBus

Description: Name of BUS source is assocated with (if applicable, may = NULL)

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/lineN eutralVoltage

Units: V (Volt)

Description: RMS voltage measured between phase and neutral.

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/lineLineVoltage

Units: V (Volt)

Description: RMS voltage measured between phases

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/curre nt

Units: A (Ampere)

Description: RMS current

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/frequency

Units: Hz (Hertz)

Description: AC frequency.

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/reactivePower

Units: W (Watt)

Description: Reactive power

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/powe rFactor

Description: Power factor

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/powerFactorLagging

Description: Lead/lag status.

Enum values:

- leading
- lagging
- error
- not available

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/realP ower

Units: W (Watt)

Description: Real power.

/vessels/<RegExp>/electrical/inverters/<RegExp>/ac/appa rentPower

Units: W (Watt)

Description: Apparent power.

/vessels/<RegExp>/electrical/inverters/<RegExp>/mode

Description: Mode of inverter

/vessels/<RegExp>/electrical/chargers

Description: [missing]

/vessels/<RegExp>/electrical/chargers/<RegExp>

Title: Charger

Description: Battery charger

/vessels/<RegExp>/electrical/chargers/<RegExp>/associat edBus

Description: Name of BUS device is associated with

/vessels/<RegExp>/electrical/chargers/<RegExp>/voltage

Units: V (Volt)

Description: [missing]

/vessels/<RegExp>/electrical/chargers/<RegExp>/current

Units: A (Ampere)

Description: [missing]

/vessels/<RegExp>/electrical/chargers/<RegExp>/tempera ture

Title: temperature

Description: [missing]

/vessels/<RegExp>/electrical/chargers/<RegExp>/mode

Description: [missing]

/vessels/<RegExp>/electrical/ac

Description: AC buses

/vessels/<RegExp>/electrical/ac/<RegExp>

Title: AC bus

Description: [missing]

/vessels/<RegExp>/electrical/ac/<RegExp>/phase

Description: [missing]

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])

Title: AC Quantities

Description: AC equipment common quantities

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/associatedBus

Description: Name of BUS source is assocated with (if applicable, may = NULL)

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/lineNeutralVoltage

Units: V (Volt)

Description: RMS voltage measured between phase and neutral.

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/lineLineVoltage

Units: V (Volt)

Description: RMS voltage measured between phases

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/current

Units: A (Ampere)

Description: RMS current

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/frequency

Units: Hz (Hertz)

Description: AC frequency.

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/reactivePower

Units: W (Watt)

Description: Reactive power

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/powerFactor

Description: Power factor

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/powerFactorLagging

Description: Lead/lag status.

Enum values:

- leading
- lagging
- error
- not available

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/realPower

Units: W (Watt)

Description: Real power.

/vessels/<RegExp>/electrical/ac/<RegExp>/phase/(single)| ([A-C])/apparentPower

Units: W (Watt)

Description: Apparent power.

/vessels/<RegExp>/notifications

Title: notifications

Description: Notifications currently raised. Major categories have well-defined names,

but the tree can be extended by any hierarchical structure

/vessels/<RegExp>/notifications/mob

Title: notifications

Description: Man overboard

/vessels/<RegExp>/notifications/mob/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data. eg [type].[bus].[device]

/vessels/<RegExp>/notifications/fire

Description: Fire onboard

/vessels/<RegExp>/notifications/fire/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data.

eg [type].[bus].[device]

/vessels/<RegExp>/notifications/sinking

Title: notifications

Description: Vessel is sinking

/vessels/<RegExp>/notifications/sinking/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data.

eg [type].[bus].[device]

/vessels/<RegExp>/notifications/flooding

Title: notifications

Description: Vessel is flooding

/vessels/<RegExp>/notifications/flooding/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data.

eg [type].[bus].[device]

/vessels/<RegExp>/notifications/collision

Description: In collision with another vessel or object

/vessels/<RegExp>/notifications/collision/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data. eg [type].[bus].[device]

/vessels/<RegExp>/notifications/grounding

Title: notifications

Description: Vessel grounding

/vessels/<RegExp>/notifications/grounding/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data. eg [type].[bus].[device]

/vessels/<RegExp>/notifications/listing

Title: notifications

Description: Vessel is listing

/vessels/<RegExp>/notifications/listing/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data. eg [type].[bus].[device]

/vessels/<RegExp>/notifications/adrift

Description: Vessel is adrift

/vessels/<RegExp>/notifications/adrift/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data.

eg [type].[bus].[device]

/vessels/<RegExp>/notifications/piracy

Title: notifications

Description: Under attack or danger from pirates

/vessels/<RegExp>/notifications/piracy/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data.

eg [type].[bus].[device]

/vessels/<RegExp>/notifications/abandon

Title: notifications

Description: Abandon ship

/vessels/<RegExp>/notifications/abandon/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data.

eg [type].[bus].[device]

/vessels/<RegExp>/notifications/<RegExp>

Description: Notifications, their state, and actions. The notification limits are set in any Signal K key.meta.zones array.

/vessels/<RegExp>/notifications/<RegExp>/<RegExp>

Description: Reference to the source under /sources. A dot spearated path to the data. eg [type].[bus].[device]

/vessels/<RegExp>/steering

Title: steering

Description: Vessel steering data for steering controls (not Autopilot 'Nav Data')

/vessels/<RegExp>/steering/rudderAngle

Units: rad (Radian)

Description: Current rudder angle, +ve is rudder to Starboard

/vessels/<RegExp>/steering/rudderAngleTarget

Units: rad (Radian)

Description: The angle the rudder should move to, +ve is rudder to Starboard

/vessels/<RegExp>/steering/autopilot

Title: autopilot

Description: Autopilot data

/vessels/<RegExp>/steering/autopilot/state

Description: Autopilot state

/vessels/<RegExp>/steering/autopilot/mode

Description: Operational mode

/vessels/<RegExp>/steering/autopilot/target

Title: target

Description: Autopilot target

/vessels/<RegExp>/steering/autopilot/target/angle

Units: rad (Radian)

Description: Target heading for autopilot, relative to magnetic North or Apparent wind

+port -starboard

/vessels/<RegExp>/steering/autopilot/target/reference

Description: Current source of heading information

/vessels/<RegExp>/steering/autopilot/deadZone

Units: rad (Radian)

Description: Dead zone to ignore for rudder corrections

/vessels/<RegExp>/steering/autopilot/backlash

Units: rad (Radian)

Description: Slack in the rudder drive mechanism

/vessels/<RegExp>/steering/autopilot/gain

Description: Auto-pilot gain, higher number equals more rudder movement for a given

turn

/vessels/<RegExp>/steering/autopilot/maxDriveCurrent

Units: A (Ampere)

Description: Maximum current to use to drive servo

/vessels/<RegExp>/steering/autopilot/maxDriveRate

Units: rad/s (Radian per second)

Description: Maximum rudder rotation speed

/vessels/<RegExp>/steering/autopilot/portLock

Units: rad (Radian)

Description: Position of servo on port lock

/vessels/<RegExp>/steering/autopilot/starboardLock

Units: rad (Radian)

Description: Position of servo on starboard lock

/vessels/<RegExp>/tanks

Title: tanks

Description: Tank data, each tank indentified by a unique name i.e. FreshWater 2

/vessels/<RegExp>/tanks/freshWater

Description: [missing]

/vessels/<RegExp>/tanks/freshWater/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/freshWater/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/freshWater/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water
- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/freshWater/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/freshWater/<RegExp>/currentLe vel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/freshWater/<RegExp>/currentVo

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/tanks/wasteWater

Description: [missing]

/vessels/<RegExp>/tanks/wasteWater/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/wasteWater/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/wasteWater/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water

- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/wasteWater/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/wasteWater/<RegExp>/currentLevel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/wasteWater/<RegExp>/currentV olume

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/tanks/blackWater

Description: [missing]

/vessels/<RegExp>/tanks/blackWater/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/blackWater/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/blackWater/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water
- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/blackWater/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/blackWater/<RegExp>/currentLe vel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/blackWater/<RegExp>/currentV olume

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/tanks/fuelWater

Description: [missing]

/vessels/<RegExp>/tanks/fuelWater/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/fuelWater/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/fuelWater/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water
- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/fuelWater/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/fuelWater/<RegExp>/currentLevel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/fuelWater/<RegExp>/currentVolume

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/tanks/fuel

Description: [missing]

/vessels/<RegExp>/tanks/fuel/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/fuel/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/fuel/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water
- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/fuel/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/fuel/<RegExp>/currentLevel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/fuel/<RegExp>/currentVolume

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/tanks/lubrication

Description: [missing]

/vessels/<RegExp>/tanks/lubrication/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/lubrication/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/lubrication/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water
- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/lubrication/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/lubrication/<RegExp>/currentLe vel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/lubrication/<RegExp>/currentVolume

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/tanks/liveWell

Description: [missing]

/vessels/<RegExp>/tanks/liveWell/<RegExp>

Description: [missing]

/vessels/<RegExp>/tanks/liveWell/<RegExp>/name

Description: The name of the tank. Useful if multiple tanks of a certain type are on

board

/vessels/<RegExp>/tanks/liveWell/<RegExp>/type

Description: The type of tank

Enum values:

- petrol
- fresh water
- greywater
- holding
- lpg
- diesel
- rum

/vessels/<RegExp>/tanks/liveWell/<RegExp>/capacity

Units: m3 (Cubic meter)

Description: Total capacity

/vessels/<RegExp>/tanks/liveWell/<RegExp>/currentLevel

Units: ratio (Ratio)

Description: Level of fluid in tank 0-100%

/vessels/<RegExp>/tanks/liveWell/<RegExp>/currentVolume

Units: m3 (Cubic meter)

Description: Volume of fluid in tank

/vessels/<RegExp>/design

Title: design

Description: Design/dimensional data of this vessel

/vessels/<RegExp>/design/displacement

Units: kg (Kilogram)

Description: The displacement of the vessel

/vessels/<RegExp>/design/draft

Title: draft

Description: The draft of the vessel

/vessels/<RegExp>/design/draft/minimum

Units: m (Meter)

Description: The minimum draft of the vessel

/vessels/<RegExp>/design/draft/maximum

Units: m (Meter)

Description: The maximum draft of the vessel

/vessels/<RegExp>/design/draft/canoe

Units: m (Meter)

Description: The draft of the vessel without protrusions such as keel, centerboard,

rudder

/vessels/<RegExp>/design/length

Title: length

Description: The various lengths of the vessel

/vessels/<RegExp>/design/length/overall

Units: m (Meter)

Description: Length overall

/vessels/<RegExp>/design/length/hull

Units: m (Meter)

Description: Length of hull

/vessels/<RegExp>/design/length/waterline

Units: m (Meter)

Description: Length at waterline

/vessels/<RegExp>/design/keel

Title: keel

Description: Information about the vessel's keel

/vessels/<RegExp>/design/keel/type

Description: The type of keel.

Enum values:

- long
- fin
- flare
- bulb
- wing
- centerboard
- kanting
- lifting
- daggerboard

/vessels/<RegExp>/design/keel/angle

Units: rad (Radian)

Description: A number indicating at which angle the keel currently is (in case of a

canting keel), negative to port.

/vessels/<RegExp>/design/keel/lift

Units: ratio (Ratio)

Description: In the case of a lifting keel, centreboard or daggerboard, the part of the keel which is extended. 0 is 'all the way up' and 1 is 'all the way down'. 0.8 would be 80% down.

/vessels/<RegExp>/design/beam

Units: m (Meter)

Description: Beam length

/vessels/<RegExp>/design/airHeight

Units: m (Meter)

Description: Total height of the vessel

/vessels/<RegExp>/design/rigging

Title: rigging

Description: Information about the vessel's rigging

/vessels/<RegExp>/design/rigging/configuration

Description: The configuration of the rigging

/vessels/<RegExp>/design/rigging/masts

Description: The number of masts on the vessel.

/vessels/<RegExp>/sails

Title: sails

Description: Sails data

/vessels/<RegExp>/sails/inventory

Description: An object containing a description of each sail available to the vessel crew

/vessels/<RegExp>/sails/inventory/<RegExp>

Description: 'sail' data type.

/vessels/<RegExp>/sails/inventory/<RegExp>/name

Description: An unique identifier by which the crew identifies a sail

/vessels/<RegExp>/sails/inventory/<RegExp>/type

Description: The type of sail

/vessels/<RegExp>/sails/inventory/<RegExp>/material

Description: The material the sail is made from (optional)

/vessels/<RegExp>/sails/inventory/<RegExp>/brand

Description: The brand of the sail (optional)

/vessels/<RegExp>/sails/inventory/<RegExp>/active

Description: Indicates wether this sail is currently in use or not

/vessels/<RegExp>/sails/inventory/<RegExp>/area

Units: m2 (Square meter)

Description: The total area of this sail in square meters

/vessels/<RegExp>/sails/inventory/<RegExp>/minimumWind

Units: m/s (Meters per second)

Description: The minimum wind speed this sail can be used with

/vessels/<RegExp>/sails/inventory/<RegExp>/maximumWind

Units: m/s (Meters per second)

Description: The maximum wind speed this sail can be used with

/vessels/<RegExp>/sails/area

Description: An object containing information about the vessels' sails.

/vessels/<RegExp>/sails/area/total

Units: m2 (Square meter)

Description: The total area of all sails on the vessel

/vessels/<RegExp>/sails/area/active

Units: m2 (Square meter)

Description: The total area of the sails currently in use on the vessel

/vessels/<RegExp>/sensors

Title: sensors

Description: Sensors, their state, and data.

/vessels/<RegExp>/sensors/<RegExp>

Title: sensor

Description: An object describing an individual sensor. It should be an object in vessel,

named using a unique name or UUID

/vessels/<RegExp>/sensors/<RegExp>/name

Description: The common name of the sensor

/vessels/<RegExp>/sensors/<RegExp>/sensorType

Description: The datamodel definition of the sensor data. FIXME - need to create a definitions lib of sensor datamodel types

/vessels/<RegExp>/sensors/<RegExp>/sensorData

Description: The data of the sensor data. FIXME - need to ref the definitions of sensor types

/vessels/<RegExp>/sensors/<RegExp>/fromBow

Description: The distance from the bow to the sensor location

/vessels/<RegExp>/sensors/<RegExp>/fromCenter

Description: The distance from the centerline to the sensor location, -ve to starboard, +ve to port

/vessels/<RegExp>/performance

Title: performance

Description: Performance Sailing data including VMG, Polar Speed, tack angle, etc.

/vessels/<RegExp>/performance/polarSpeed

Units: m/s (Meters per second)

Description: The current polar speed based on current polar diagram, trueWindSpeed

and truewindAngle.

/vessels/<RegExp>/performance/polarSpeedRatio

Units: ratio (Ratio)

Description: The ratio of current speed through water to the polar speed.

/vessels/<RegExp>/performance/velocityMadeGood

Units: m/s (Meters per second)

Description: The current velocity made good derived from the speed through water and appearant wind angle. A positive value is heading to upwind, negative to downwind.

/vessels/<RegExp>/performance/velocityMadeGoodToWa ypoint

Units: m/s (Meters per second)

Description: The current velocity made good to the next waypoint derived from the speedOverGround, courseOverGround.

/vessels/<RegExp>/performance/beatAngle

Units: rad (Radian)

Description: The true wind beat angle for the best velocity made good based on current

current polar diagram and trueWindSpeed.

/vessels/<RegExp>/performance/beatAngleVelocityMadeG ood

Units: m/s (Meters per second)

Description: The velocity made good for the beat angle.

/vessels/<RegExp>/performance/beatAngleTargetSpeed

Units: m/s (Meters per second)

Description: The target speed for the beat angle.

/vessels/<RegExp>/performance/gybeAngle

Units: rad (Radian)

Description: The true wind gybe angle for the best velocity made good downwind based on current polar diagram and trueWindSpeed.

/vessels/<RegExp>/performance/gybeAngleVelocityMade Good

Units: m/s (Meters per second)

Description: The velocity made good for the gybe angle

/vessels/<RegExp>/performance/gybeAngleTargetSpeed

Units: m/s (Meters per second)

Description: The target speed for the gybe angle.

/vessels/<RegExp>/performance/targetAngle

Units: rad (Radian)

Description: The true wind gybe or beat angle for the best velocity made good

downwind or upwind based on current polar diagram and trueWindSpeed.

/vessels/<RegExp>/performance/targetSpeed

Units: m/s (Meters per second)

Description: The target speed for the beat angle or gybe angle, which ever is

applicable.

/vessels/<RegExp>/performance/leeway

Units: rad (Radian)

Description: Current leeway

/vessels/<RegExp>/performance/tackMagnetic

Units: rad (Radian)

Description: Magnetic heading on opposite tack.

/vessels/<RegExp>/performance/tackTrue

Units: rad (Radian)

Description: True heading on opposite tack.

/resources

Title: resources

Description: Resources to aid in navigation and operation of the vessel including

waypoints, routes, notes, etc.

/resources/charts

Title: chart

Description: A holder for charts, each named with their chart code

/resources/charts/<RegExp>

Description: A chart

/resources/charts/<RegExp>/name

Description: Chart common name

/resources/charts/<RegExp>/identifier

Description: Chart number

/resources/charts/<RegExp>/description

Description: A description of the chart

/resources/charts/<RegExp>/tilemapUrl

Description: A url to the tilemap of the chart for use in TMS chartplotting apps

/resources/charts/<RegExp>/region

Description: Region related to note. A pointer to a region UUID. Alternative to geohash

/resources/charts/<RegExp>/geohash

Description: Position related to chart. Alternative to region

/resources/charts/<RegExp>/chartUrl

Description: A url to the chart file's storage location

/resources/charts/<RegExp>/scale

Description: The scale of the chart, the larger number from 1:200000

/resources/charts/<RegExp>/chartFormat

Description: The format of the chart

Enum values:

- gif
- geotiff
- kap
- png
- jpg

- kml
- wkt
- topojson
- geojson
- gpx
- tms
- S-57
- S-63
- svg
- other

/resources/routes

Title: route

Description: A holder for routes, each named with a UUID

/resources/routes/<RegExp>

Description: A route, named with a UUID

/resources/routes/<RegExp>/name

Description: Route's common name

/resources/routes/<RegExp>/description

Description: A description of the route

/resources/routes/<RegExp>/distance

Units: m (Meter)

Description: Total distance from start to end

/resources/routes/<RegExp>/start

Description: The waypoint UUID at the start of the route

/resources/routes/<RegExp>/end

Description: The waypoint UUID at the end of the route

/resources/routes/<RegExp>/feature

Title: Feature

Description: A Geo JSON feature object which describes the route between the

waypoints

/resources/routes/<RegExp>/feature/type

Description: [missing]

Enum values:

* Feature

/resources/routes/<RegExp>/feature/geometry

Title: LineString

Description: [missing]

/resources/routes/<RegExp>/feature/geometry/type

Description: [missing]

Enum values:

* LineString

/resources/routes/<RegExp>/feature/geometry/coordinate s

Description: [missing]

/resources/routes/<RegExp>/feature/properties

Description: Additional data of any type

/resources/routes/<RegExp>/feature/id

Description: [missing]

/resources/notes

Title: notes

Description: A holder for notes about regions, each named with a UUID. Notes might

include navigation or cruising info, images, or anything

/resources/notes/<RegExp>

Description: A note about a region, named with a UUID. Notes might include navigation or cruising info, images, or anything

/resources/notes/<RegExp>/title

Description: Note's common name

/resources/notes/<RegExp>/description

Description: A textual description of the note

/resources/notes/<RegExp>/region

Description: Region related to note. A pointer to a region UUID. Alternative to position

or geohash

/resources/notes/<RegExp>/position

Title: position

Description: Position related to note. Alternative to region or geohash

/resources/notes/<RegExp>/geohash

Description: Position related to note. Alternative to region or position

/resources/notes/<RegExp>/mimeType

Description: MIME type of the note

/resources/notes/<RegExp>/url

Description: Location of the note

/resources/regions

Title: region

Description: A holder for regions, each named with UUID

/resources/regions/<RegExp>

Description: A region of interest, each named with a UUID

/resources/regions/<RegExp>/geohash

Description: geohash of the approximate boundary of this region

/resources/regions/<RegExp>/feature

Title: Feature

Description: A Geo JSON feature object which describes the regions boundary

/resources/regions/<RegExp>/feature/type

Description: [missing]

Enum values:

* Feature

/resources/regions/<RegExp>/feature/geometry

Description: [missing]

/resources/regions/<RegExp>/feature/properties

Description: Additional data of any type

/resources/regions/<RegExp>/feature/id

Description: [missing]

/resources/waypoints

Title: waypoints

Description: A holder for waypoints, each named with a UUID

/resources/waypoints/<RegExp>

Description: A waypoint, an object with a signal k position object, and GeoJSON

Feature object (see geojson.org, and https://github.com/fge/sample-json-

schemas/tree/master/geojson)

/resources/waypoints/<RegExp>/position

Title: position

Description: The position in 3 dimensions

/resources/waypoints/<RegExp>/feature

Title: Feature

Description: A Geo JSON feature object

/resources/waypoints/<RegExp>/feature/type

Description: [missing]

Enum values:

* Feature

/resources/waypoints/<RegExp>/feature/geometry

Title: Point

Description: [missing]

/resources/waypoints/<RegExp>/feature/geometry/type

Description: [missing]

Enum values:

* Point

/resources/waypoints/<RegExp>/feature/geometry/coordinates

Description: A single position, in x,y order (Lon, Lat)

/resources/waypoints/<RegExp>/feature/properties

Description: Additional data of any type

/resources/waypoints/<RegExp>/feature/id

Description: [missing]

/version

Description: Version of the schema and APIs that this data is using in Canonical format i.e. V1.0.0.

Signal K Specification Changelog

- Version 0.0.1
 - o Change 1
 - o Change 2
- Version 0.0.0