Sampling Systems

Scope and Background Reading

This session is an introduction to sampling theory. It reviews the important ideas that pertain to sampling but leaves the detailed mathematics for your further study.

The material in this presentation and notes is based on Chapter 15 of Benoit Boulet, Fundamentals of Signals and Systems (http://site.ebrary.com/lib/swansea/docDetail.action?docID=10228195) from the **Recommended Reading List** and you'll find the mathematical treatments there. There is much more detail in Chapter 9 of Steven T. Karris, Signals and Systems: with Matlab Computation and Simulink Modelling, 5th Edition (http://site.ebrary.com/lib/swansea/docDetail.action? docID=10547416) from the **Required Reading List**.

Agenda

- · Sampling of Continuous-Time Signals
- · Signal Reconstruction
- Discrete-time Processing of Continuous-Time Signals
- · Sampling of Discrete-Time Systems

Acknowledgements

We will be using an adaptation of a pair of demo scripts to illustrate *alialising*. These scripts were published by Prof. Charles A. Bouman, School of Electrical and Computer Engineering, Purdue University as part of the course materials for <u>ECE438</u>: <u>Digital Signal Processing</u> (https://engineering.purdue.edu/VISE/ee438/demos/).

Introduction

- The sampling process provides the bridge between continuous-time (CT) and discrete-time (DT) signals
- Sampling records discrete values of a CT signal at periodic instants of time.
- · Sampled data can be used in real-time or off-line processing
- Sampling opens up possibility of processing CT signals through *finite impulse response* (FIR) and *infinite impulse response* IIR filters.

A Real Example

I need a volunteer to provide a sound sample

- 1. I will use this script sampling demo.m (matlab/sampling demo.m) to sample your voice.
- 2. I will then playback the recording.
- 3. I will the plot the data.

Technical Details

- Sampling rate: 8000 samples per second (fs = 8 kHz)
- Resolution: 8 bits per sample
- Channels: 1 channel.
- Reconstruction: Matlab plays the audio back at 8192 samples per second.

Question

What will the bit-rate be for playback?				

Answer

bit rate = [number of samples per second] x [number of bits per sample] x [number of channels]

bit rate = $8192 \times 8 \times 1$ bits/second [baud]


bit rate = 65,536 bits/second

Sampling CT Signals

What is going on here?

Time domain

Sampling can be modelled as the multiplication of a continuous-time signal by a sequence of periodic impulses as illustrated here.

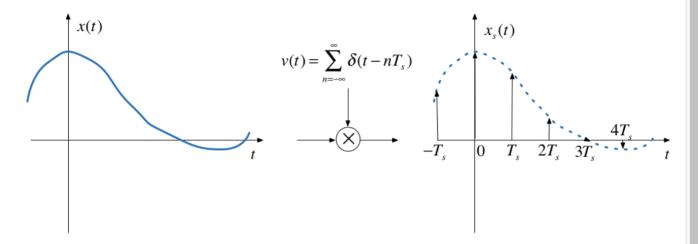


This is a form of modulation

 T_s is the period of the periodic sampling function.

Frequency domain

Multiplication in time domain is convolution in the frequency domain

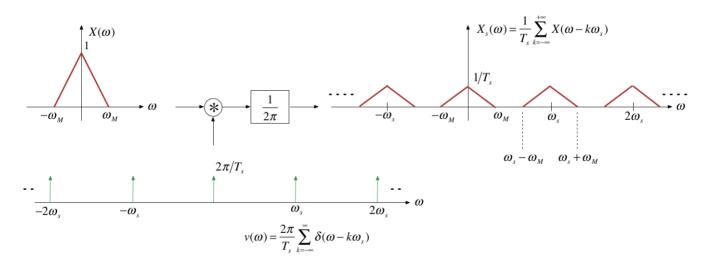

 ω_s is the frequency of the periodic sampling function = $2\pi/T_s$.

The Mathematics

The Sampled signal:

$$x_s(t) = \sum_{n=-\infty}^{+\infty} x(nT_s)\delta(t - nT_s)$$

Frequency convolution:

$$X_s(\omega) = \frac{1}{T_s} \int_{-\infty}^{+\infty} X(v) \sum_{n=-\infty}^{+\infty} \delta(t - v - k\omega_s) dv$$

Sampling property:

$$X_s(\omega) = \frac{1}{T_s} \int_{-\infty}^{+\infty} \sum_{n=-\infty}^{+\infty} X(\omega - k\omega_s) \delta(t - v - k\omega_s) dv$$

Sifting property:

$$X_s(\omega) = \frac{1}{T_s} \sum_{n=-\infty}^{+\infty} X(\omega - k\omega_s)$$

Nyquist-Shannon Sampling Theorem


Gives a sufficient condition to recover a continuous time signal from its samples $x(nT_s)$, n is an integer.


Sampling Theoreom

Let x(t) be a band-limited signal with $X(\omega) = 0$ for $|\omega| > \omega_M$.


where $\omega_s = 2\pi/T_s$ is the sampling frequency.

Recovery of signal by flitering

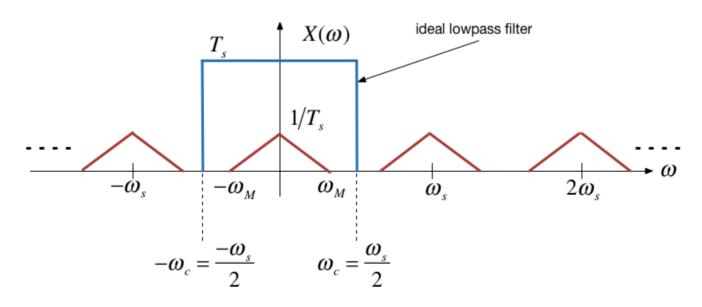

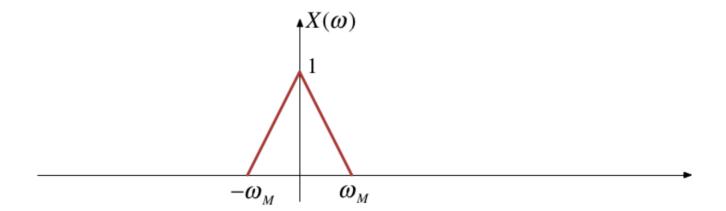


Ideal Lowpass Filter for CT Recovery from DT Sampled Signal

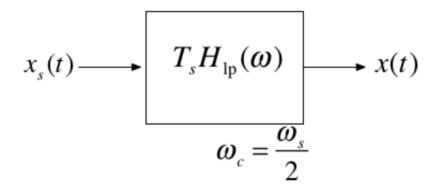



This is of course theoretical only!

Sample-and-hold

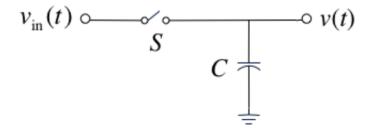



Sample-and-hold operator

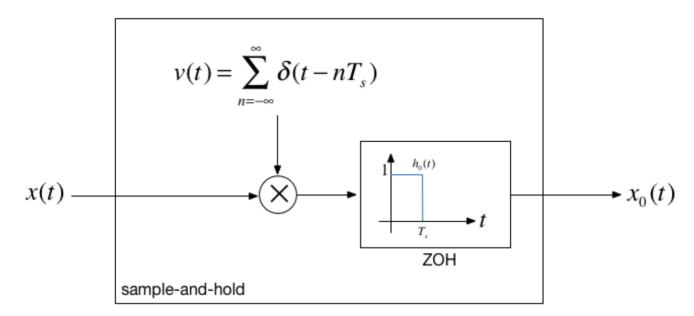

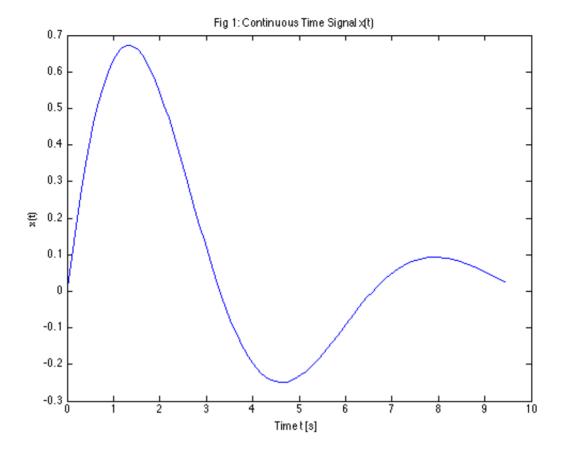

This image was generated by the Matlab script: sampling.m (matlab/sampling.m)

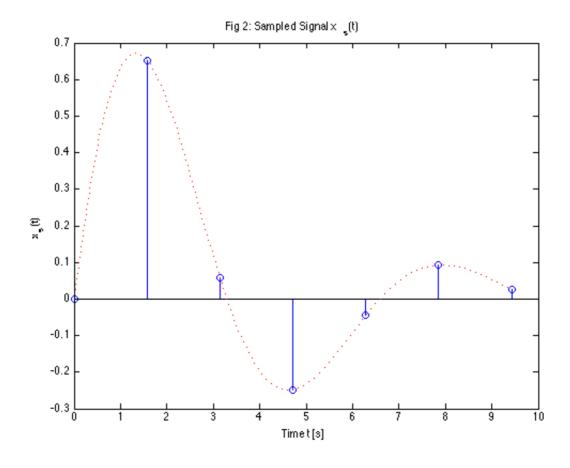

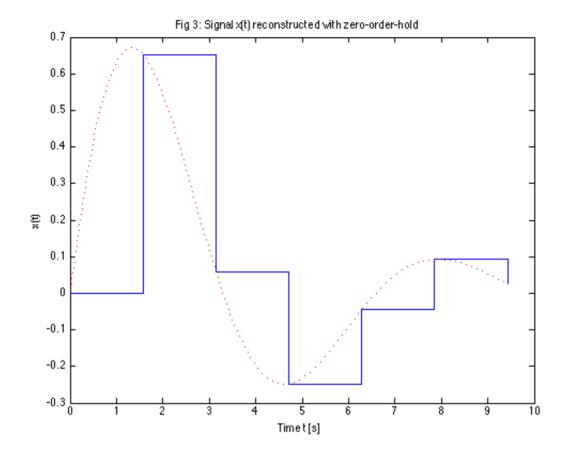

Notes

The sampled signal $x_0(t)$ carries the same information as the samples themselves, so we should be able to recover the entire signal x(t).

From the block diagram of the sample-and-hold operator, what we would need to do is find the inverse of the ZOH system with impulse response $h_0(t)$ and then use a perfect lowpass filter.

The frequency response $H_0(\omega)$ is given by the usual sinc function for an even rectangular pulse signal, multiplied by $e^{-j\omega T_s/2}$ because we need a time delay of $T_s/2$ to make the signal causal:


$$H_0(\omega) = T_s e^{-j\omega T_s/2} \frac{\sin\left(\pi \frac{T_s}{2\pi}\omega\right)}{\pi \frac{T_s}{2\pi}\omega} = 2e^{-j\omega T_s/2} \frac{\sin(\omega T_s/2)}{\omega}$$

The inverse of $H_0(\omega)$ is given by

$$H_1(\omega) = H^{-1}(\omega) = \frac{1}{2} e^{i\omega \frac{T_s}{2}} \frac{\omega}{\sin(\frac{T_s}{2}\omega)}$$

The reconstruction filter is the cascade of the inverse filter and the lowpass filter:

$$H_r(\omega) = T_s H_{lp}(\omega) H_1(\omega)$$

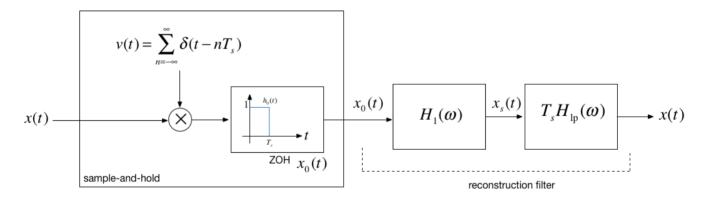

The frequency response of this filter and additional notes are to be found on Page 546 of Boulet.


Signal Reconstruction


Problem

- We have a bandlimited signal that is sampled at the Nyquist-Shannon sampling frequency $\omega_s = 2\pi/T_s$.
- We therefore have a discrete-time (DT) signal $x(nT_s)$ from which we want to reconstruct the original signal.

Perfect Signal Interpolation Using sinc Functions

- In the *frequency domain*, the ideal way to reconstruct the signal would be to construct a chain of impulse $x_s(t)$ and then to filter this signal with an ideal lowpass filter.
- In the *time domain*, this is equivalent to interpolating the samples using time-shifted sinc functions with zeros at nT_s for $\omega_c=\omega_s$.

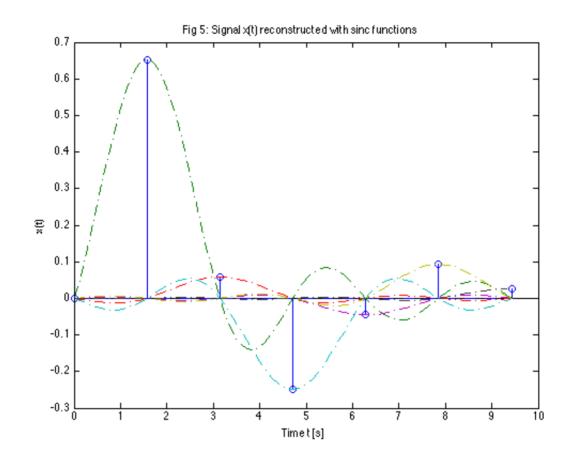

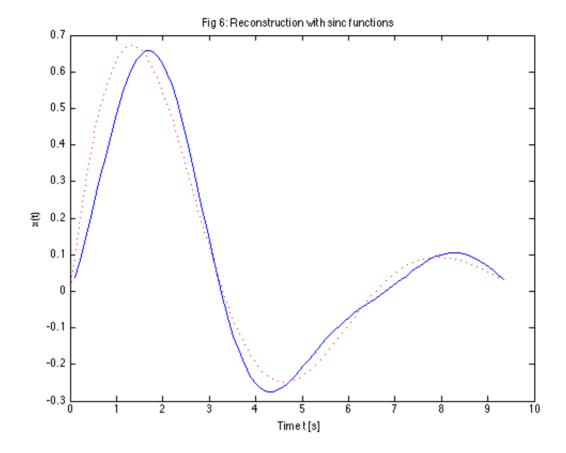

Each impulse in $x_s(t)$ triggers the impulse reponse of the lowpass filter (the sinc signal), the the resulting signal x(t) at the output of the filter is the sum of all the time-shifted sinc signals with amplitudes equal to the samples $x(nT_s)$.

$$x(t) = \sum_{k=-\infty}^{+\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$


(Note we have defined $\operatorname{sinc}(x)$ as $\sin(\pi x)/(\pi x)$.)

This is clearly unfeasible, at least in real-time, so we have to resort to approximations of the ideal low-pass filter.


A couple of examples are given below. Boulet gives more information including an evaluation of the quality of the approximation.

In practice, the zero-order-hold is often used in practice and a low-pass filter with a flat passband (such as the Butterworth filter discussed in the last lecture) would be used. In audio applications, for example, the low-pass nature of speakers and the human ear add additional smoothing and for non HiFi applications (e.g. an MP3 player) may be all that is actually used!

Zero-Order-Hold

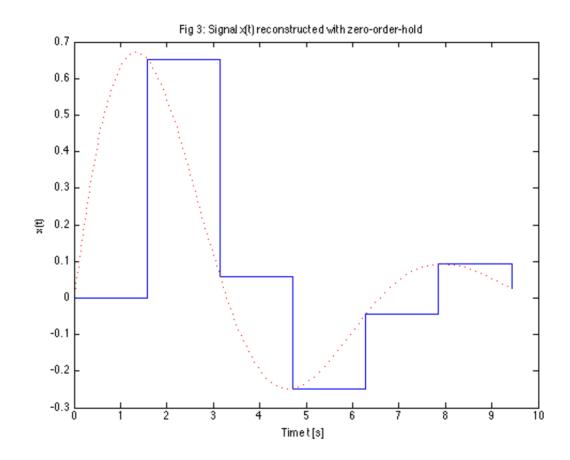

First-order Hold

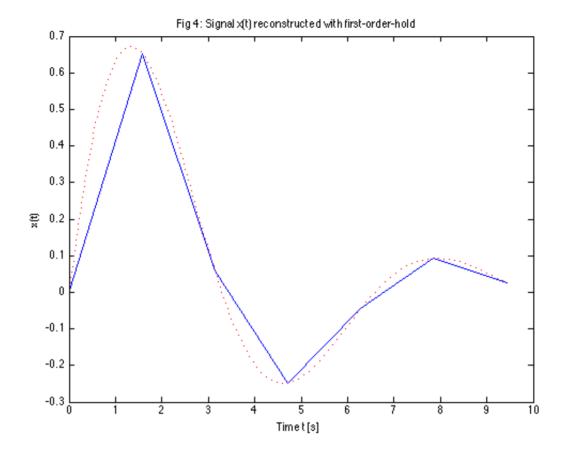


This image was generated by the Matlab script: sampling.m (matlab/sampling.m)

Aliasing

- Aliasing Occurs when the sampling frequency is too low to ovoid overlapping between the spectra.
- When aliasing oucus, we have violated the sampling theorem that is $\omega_s < 2\omega_m$.
- When aliasing occurs, the original signal cannot be recovered by lowpass filtering.

An Aliased Signal

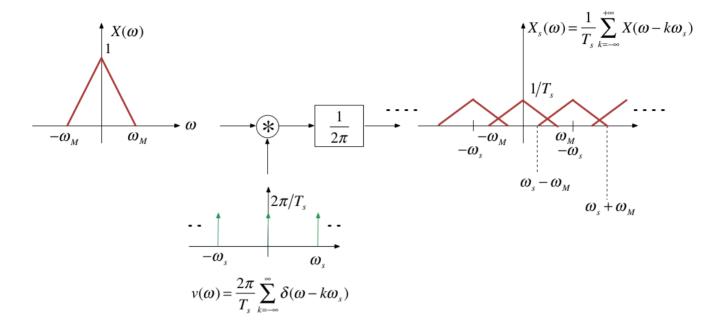

Example 1

We use the recording made at the start and run it through a script that effectively aliases the original signal be reducing the sampling frequency to less than half the original sampling frequency.

Here's the script: aliaseq1.m (matlab/aliaseq1.m) that I'll be using.

Example 2

Assume signal $x(t) = \cos(\omega_0 t)$ is sampled at a rate of $\omega_s = 1.5\omega_s$, violating the sampling theorem.

We can see the effect on the plot below:

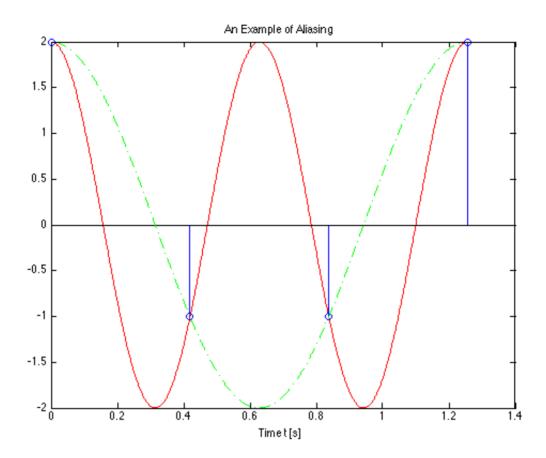


Image generated by aliasing.m (matlab/aliasing.m)

You should confirm for yourself that after lowpass filtering the spectrum with a filter with cutofff frequency $\omega_c = \omega_s/2$ that the signal returned is the spectrum of $x(t) = \cos(\omega_0 t/2)$

Antialising Filters

- Most real signals are not band-limited so we have to artificially make them bandlimited using an anti-aliasing filter.
- An antialiasing filter is a low-pass filter whose cutoff frequency is lower than half the sampling frequency.
- This can produce some distortion at high-frequencies but this is often better than the distortion that would occus at low frequencies if aliasing was allowed to happen.
- For more on this topic see Pages 551 552 of Boulet.

Example 3


This example uses anti-aliasing to downsample the audio. You should hear that the sound is less distorted as we sample below the sampling frequency of 8 kHz.

Script: aliaseg2.m (matlab/aliaseg2.m)

Practical application - digital audio

Human beings can hear sounds with frequencies up to around 20 kHz so when recording music in the modern sound studio (or phone or PC for that matter) the audio signal is antialiased with a 22 kHz filter. The signal is then sampled at 44.1 kHz before being stored for later processing and/or playback.

DT Processing of CT Signals

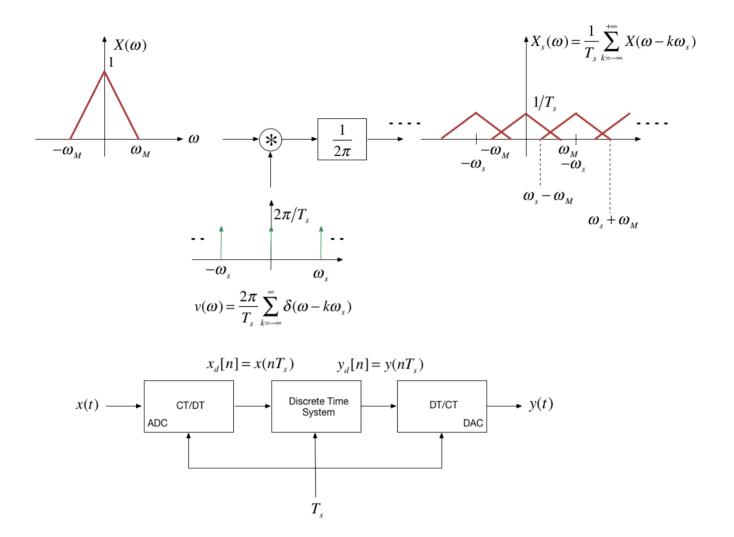

The concepts presented in this session provide a model that allows us to cross the bridge between the theoretical concept of impulse chain sampling through to a representation of a signal as discrete sequence x[n] (to be introduced next lecture) and back to a continuous-time signal via reconstruction.

The mathematics predicts the nature of the signals that are processed in the ideal case, but we will leave it with you to study these for yourself. (See Boulet pp 552-557).

In practice, modern digital processing relies on the use of an analogue-to-digital converter (ADC) (which also introduces amplitude quantization), finite-length arithmetic inside the discrete-time system (usually a microprocessor, microcontroller or digital signal processor), followed by conversion back to a step-wise continuous signal via a digital to analogue converter (DAC) that operates like a zero-order-hold.

Sampling of DT Signals

- In modern signal processing and digital communications many of the operations that were once done in continuous time are now done entirely in discrete time.
- For example, we can implement sampling and modulation in discrete time.
- We can also upsample (interpolate between samples) or downsample (reduce the number of samples in a discrete-time signal)

These topics are left to you for further study.

Summary

- · Sampling of Continuous-Time Signals
- Signal Reconstruction
- Discrete-time Processing of Continuous-Time Signals
- · Sampling of Discrete-Time Systems

Next session

• The Z-Transform

Matlab Functions used

- The matlab recorder command is: recorder = audiorecorder(Fs,nBits,nChannels);
- Sound is recorded using: recordblocking(recObj, time);
- Recorded sound is played back: play(recorder);
- Sound is extracted as Matlab data using: x = getaudiodata(recorder);
- Sound is plotted against sample number using: plot(x)
- I extracted 50 points for the stem plot using stem([1000:1049],myRecording(1000:1049))
- Sound is saved as an audio file using: audiowrite(audioFile,myRecording,Fs); where audiofile is a filename in form name.extension. Supported extensions are '.wav','.ogg', and '.flac' on all platforms. Windows and Mac support '.m4m' and '.mp4'.
- Sound is loaded using [x,Fs]=audioread(audioFile);. Additional file formats are supported for reading including '.mp3'.
- Frequency response spectra were generated using the fast Fourier transform (fft) function.
- Multiple graphs in one figure window is achieved using subplot.

For more information use doc *command* from the command-line.