
Application Report





MSP430 Software Coding Techniques

Keith Quiring MSP430 Applications

ABSTRACT

This application report covers software techniques and topics of interest to all MSP430™ programmers. The first part of the document discusses the MSP430 standard interrupt-based code flow model, recommended for the vast majority of applications. The next part discusses a handful of techniques that should be considered by any developer that sets out to develop an MSP430 application. Using these methods can greatly reduce debug time and/or provide additional robustness in the field. They include initialization procedures, validation of supply rails before performing voltage-sensitive operations, and use of special functions. Code examples are available from http://www.ti.com/lit/zip/slaa294.

Contents 1 Introduction 1 2 MSP430 Top-Level Code Flow 2 3 Techniques 3 4 References 6 List of Figures 1 MSP430 Top-Level Code Flow 2

1 Introduction

This application report covers software techniques that are widely applicable in MSP430 applications. Some should be used in every program, while some are situation dependent. All are designed to save time for the developer and/or increase system robustness.

The first part of the document discusses the MSP430 standard code flow model, recommended for the vast majority of applications. The next part discusses a selection of techniques that should be considered by any developer that sets out to develop an MSP430 application.

As with all MSP430 application reports, this document is designed to support the user's guides, so please refer to the relevant user's guide while reading this report.

MSP430 is a trademark of Texas Instruments. All other trademarks are the property of their respective owners.



2 MSP430 Top-Level Code Flow

Most MSP430 software applications are best served by adhering to a flow similar to the one portrayed in Figure 1. This flow is designed to maximize power efficiency.

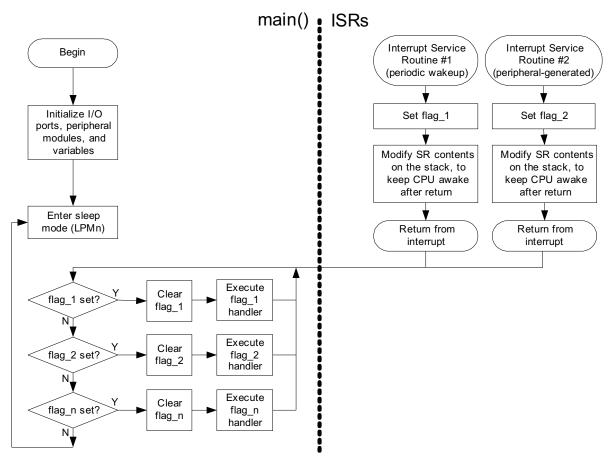


Figure 1. MSP430 Top-Level Code Flow

The code architecture is interrupt driven, because doing so provides the most opportunities to power down the device. The device sleeps until an interrupt is received, thereby maximizing power efficiency.

To understand the way the interrupt service routines (ISRs) in Figure 1 are implemented, it is beneficial to review the way in which the MSP430 handles low-power modes. The power modes are controlled by bits within the status register (SR). The advantage of this is that the power mode in place prior to ISR execution is saved onto the stack. When the ISR reloads that value upon completing execution, program flow returns to that saved power mode. However, by manipulating the saved SR value on the stack from within the ISR, program flow after the ISR can be diverted to a different power mode.

This mechanism is an integral part of the MSP430 low-power operation, because it allows the device to quickly wake up in response to an interrupt. As an example, suppose a device is in the LPM0 low-power mode when an interrupt occurs. The MSP430 prepares for ISR execution, including the saving of the SR to the stack and clearing the SR. Clearing the SR causes an exit from LPM0 into active mode. Within the ISR, the code developer places a statement that modifies the saved SR value by clearing the low-power bits. When the ISR completes, it reloads the values from the stack to their respective registers. Without having modified the bits, this action would put the device back into LPM0. Because the SR value has been modified to reflect a fully active device, the device stays active, and execution resumes at the PC value that had been saved to the stack prior to ISR execution.



www.ti.com Techniques

Given this ability to change the power mode from the ISR, the developer can choose to implement the full functionality of the ISR within the routine itself, or use the ISR to wake up the processor and let the main loop handle all or part of the resulting functionality. Handling within the ISR ensures that the response to the interrupt event is immediate, provided that interrupts are enabled at the time of the event. However, while handling an ISR, interrupts are not enabled and will not be enabled until the ISR is completed. As a result, long ISRs may decrease system responsiveness. The developer must choose which of these options best fits the application.

Applying this understanding to the flow in Figure 1, the figure shows two interrupts that allow their functionality to be handled within the main loop. These ISRs execute two tasks. First, they change the saved SR value on the stack to reflect a device in active mode. This allows one run through the main loop, before returning to sleep again. The interrupt can be any applicable event, such as a timer, pushbutton, or completion of an analog-to-digital conversion. The second task of the ISR is to set a flag that communicates to the main loop what action needs to be taken.

If the action to be taken in response to an interrupt is brief enough to be placed within the ISR itself, there may be no need to handle it in the main loop. In this case, there is no need for the ISR to set a flag or alter the SR power mode bits. The CPU would return to sleep upon exiting the ISR.

This flow can be adapted according to the complexity of the application. For example, if only one interrupt has the ability to wake the main loop, a flag system is unnecessary. In this case, the interrupt wakes the main loop, and the main loop performs its one function and puts the CPU back to sleep. An application that requires the CPU never sleep may have no need for interrupts at all.

The generalized sleep mode "LPMn" is shown in Figure 1. The actual mode to be used depends on the modules that must stay awake during the sleep mode. If a timer is responsible for waking up the device, and the timer is driven by ACLK, then ACLK must be kept active; LPM3 can be used. However, if the timer is driven from the DCO, then LPM0 must be used.

All the techniques in this application report assume that some version of this code structure is in place. Nearly every piece of code provided by TI, whether in the code examples or application reports, reflects this architecture and can be referenced for further study.

It is beneficial to gain a solid understanding of this interrupt-driven code flow as it pertains to a particular program. Consider where program execution might be when a given interrupt occurs, and what effect the interrupt will have on the code that was originally being executed.

3 Techniques

3.1 First Things First: Configure the Watchdog and Oscillator

Configuring the watchdog should be among the first actions taken by any MSP430 program. If it is not handled quickly, the watchdog expires, and a PUC system reset occurs. This then occurs iteratively to form an endless loop. To prevent this, the watchdog should be configured at the beginning of the program, either by resetting the timer value, setting the hold bit, or disabling watchdog mode

Similarly, when using a low-frequency crystal on LFXT1 with a device from the 4xx or 2xx families, the code should configure the internal load capacitance using the FLL_CTL0 register, very early in the code. Without this, the oscillator may not run properly. Note that it could still be a relatively long time after this before the clock is stable see Section 3.4.

These techniques can be found in most MSP430 code examples available from TI.

3.2 Always Use Standard Definitions From TI Header Files

TI provides header files for every MSP430 device in production. These header files have constants for all the registers and bits in a given device, which match the names provided in the user's guides. Using these constants within code greatly enhances its readability. It also gives any code that uses them a similar lookand-feel that enables another engineer familiar with MSP430, including TI's support team, to more quickly grasp the code. Every code example and application report from TI uses these headers where applicable.



Techniques www.ti.com

3.3 Using Intrinsic Functions to Handle Low Power Modes and Other Functions

Several intrinsic functions are made available in MSP430 development environments when writing in C. Sometimes, the only way to accomplish a critical task is to use an intrinsic function. Other intrinsics provide an opportunity to do things more efficiently.

The most common example of a critical task that can only be done using intrinsic functions is entering/exiting low power modes. Doing so requires manipulation of bit values not otherwise accessible at the level of C, since they reside within the CPU's status register. If entering LPM3 within the IAR development environment, an intrinsic function is used:

_BIS_SR(LPM3_bits + GIE);

Other intrinsic functions provide opportunity for optimization, such as those that provide access to the MSP430 BCD math assembly instructions. Doing BCD math without these instructions requires a considerable amount of C code, and the compiler will not automatically translate this code to the MSP430 BCD math instructions. Using the intrinsic functions allows the C programmer to take advantage of these instructions, maximizing memory and power efficiency.

The documentation for the development environment includes a list of these functions. Please refer to this list during development, and check it whenever new versions of the environment are released.

3.4 Write Handlers for Oscillator Faults

The MSP430 has circuitry that checks the integrity of the clocks. All the families provide this function for the DCO and high-frequency crystal sources. The 4xx and 2xx families also provide this function for a low-frequency (32.768 kHz) source. The specifics are covered in the user's guides.

Two kinds of oscillator faults should be considered, and a decision made regarding whether or not to handle them:

- 1. Stabilization of a crystal oscillator as it powers up. This happens every time the device runs. The time to stabilization is particularly long for low-frequency crystals, often in the hundreds of milliseconds.
- 2. Failure during operation. This can occur if a conductive substance is allowed to short the leads of the crystal. Some applications may be particularly susceptible to failure and/or intolerant of it and, therefore, need to handle it in a particular way. If a crystal oscillator fails, the DCO is available to drive the CPU while it handles the failure.

If an oscillator sourcing ACLK or SMCLK fails or has not yet stabilized, any peripherals supplied by those clocks are affected, and the only way to prevent this is to catch and handle it in software. A common problem is for a timing-sensitive peripheral (i.e., a timer), sourced by a low-frequency crystal, to produce poor initial results because the crystal has not yet stabilized. If the code does not wait for the crystal to stabilize, the output of the peripheral may be corrupted.

If LFXT1 or XT2 sourcing MCLK fails, supply of MCLK reverts to the DCO. While this is an intelligent and robust fail-safe, it may have a negative effect on operation of the circuit and, therefore, needs to be caught and handled by software, rather than continuing as if nothing happened.

An easy way to handle initial stabilization is to repeatedly clear, wait, and check the fault flags until they stay cleared, as shown in the user's guides. (For the 1xx family, which cannot detect low-frequency oscillator faults on LFXT1, a fixed delay can be used, with a period sufficient for the worst-case stabilization length.) This method does not catch a fault during normal operation. A method that can catch both scenarios is to set the OFIE bit and implement a handler in the NMI interrupt service routine.

Fault-init.c in the accompanying zip file shows a check performed at startup to ensure the clock has stabilized. An example of using the OFIE bit and NMI service routine to trap and handle oscillator failures during operation can be found in code example *FET410_LFxtal_nmi.c*, in the file SLAC071.zip, available from the TI website.



www.ti.com Techniques

3.5 Increasing the MCLK Frequency

MCLK can be configured up to 8 MHz (16 MHz on the 2xx family devices). However, the V_{CC} requirement increases with frequency. If MCLK is set for a frequency that requires a V_{CC} level higher than what is applied to the device, unpredictable behavior can occur. The data sheet for a given device indicates the V_{CC} required for a particular MCLK frequency.

Even if the stabilized V_{CC} value is high enough for a given frequency, a slow V_{CC} ramp could prevent that level from being reached before the program increases the MCLK frequency. This is one reason it is good for the programmer to have knowledge of the power-up characteristics of the supply rail, not just on a single prototype, but characterized thoroughly for the device being produced.

If the device in question possesses an SVS module, it can be used to alert the system when V_{CC} has reached the necessary level. If the device does not contain SVS, but does contain an available analog-to-digital conversion (ADC) module, the ADC module can be used to sample the V_{CC} level and determine if its high enough before proceeding with the change.

If the device has neither SVS nor an available ADC, a fixed delay period can be used to wait until V_{CC} has reached the necessary level. Note that the delay period must be sufficiently long to handle the worst-case ramp scenario, taking into account variability over production windows, temperature, etc.

A code example showing the use of the SVS module for this purpose is given as mclk.c in the accompanying zip file.

3.6 Using a Low-Level Initialization Function

By default, when a C compiler generates assembly code, it creates code that initializes all declared memory and inserts it before the first instruction of the main() function. In the event that the amount of declared memory is large (either a large number of variables, or one or more large memory spaces) this could pose a problem with the watchdog. The time required to initialize the long list of variables may be so long that the watchdog expires before the first line of main() can be executed. This means the watchdog configuration code will never be executed, and an endless loop will result. Generally this can happen only on devices containing more than 2K of RAM.

The easiest way to prevent this is to use a compiler directive that disables the initialization of memory elements that don't need pre-initialization. For example, if using IAR, and a single large array is contributing to a watchdog-expiration problem, it could be handled as such:

```
__no_init int x_array[2500];
```

If this directive is not available in a given development environment, another possibility is to use a compiler-defined low-level initialization function to handle the watchdog before memory is initialized. The memory would be initialized as usual, but the watchdog configuration would happen first. In the IAR environment, this is accomplished by adding a function by the name of __low_level_init() and inserting the watchdog configuration code. For example:

```
void __low_level_init(void) { WDTCTL = WDTPW+WDTHOLD; }
```

A code example portraying the low-level init function is given as init.c in the accompanying zip file.

If neither of these functions is available in the compiler environment being used, one more option is to edit the startup file the compiler inserts at the beginning of every C program. See the compiler documentation for more information on these options.

If large amounts of memory are being defined on a device from the 4xx family, it is also a good idea to configure the LFXT1 oscillator capacitance within the low-level init function (or the startup file) (see Section 3.1). This gives extra time for the oscillator to stabilize before main execution begins.



Techniques www.ti.com

3.7 In-System Programming (ISP)

If using the MSP430 ISP functionality to write to flash memory, there are a few actions that must be taken to ensure proper results:

- 1. Set the correct f_{FTG} value, as specified in the data sheet. Without this, the results are unpredictable. If the clock is too slow, there is the potential for overstressed flash cells. If the clock is too fast, there is the potential for incomplete write/erase operations.
- 2. Set the flash lock bit after the ISP operation is complete. This prevents accidental writes.
- 3. Take care that the cumulative programming time for a flash block is not exceeded.
- Provide sufficient V_{CC}. The level required for flash write/erase is higher than what is required for CPU
 operation.

The user's guides and data sheets contain more information on these points.

V_{CC} must be above the minimum specified by the device data sheet for flash erase/programming. Common ways in which this could be violated include a power-up ramp that has not yet completed, or a battery that has drifted too low for flash programming but is still high enough for CPU operation. Even if the level is high enough initially, the current draw associated with flash erase/programming could potentially stress smaller power supplies, pulling the voltage below the minimum threshold.

 $V_{\rm CC}$ can be checked using the SVS module, if available, or with analog-to-digital conversion (ADC). SVS makes it advantageous in that it provides continuous checking of the rail during the operation. The code example given in Section 3.5 (mclk.c) can be used as a reference for how to configure the SVS prior to performing a $V_{\rm CC}$ -sensitive operation. The code example sets available from the TI website show how to use the ADC modules.

3.8 Using Checksums to Verify Flash Integrity

To ensure integrity of the data in flash memory during critical applications, a checksum function can be implemented that periodically verifies the data. The checksum value can be stored in one or more locations, depending on the redundancy needed. The value provided by a checksum scheme is that it provides the device an opportunity to handle an error if one should occur.

A code example showing the use of flash checksum verify is given as *checksum.c* in the accompanying zip file.

4 References

- 1. MSP430x1xx Family User's Guide (literature number SLAU049)
- 2. MSP430x2xx Family User's Guide (literature number SLAU144)
- 3. MSP430x4xx Family User's Guide (literature number SLAU056)
- 4. MSP430 Code Examples (see http://www.ti.com/msp430)

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products	Applications
Products	Applications

logic.ti.com

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive **Amplifiers** amplifier.ti.com Communications and Telecom www.ti.com/communications **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps DSP dsp.ti.com **Energy and Lighting** www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical

Power Mgmt power.ti.com Space, Avionics and Defense www.ti.com/space-avionics-defense

Security

www.ti.com/security

Microcontrollers microcontroller.ti.com Video and Imaging www.ti.com/video

RFID www.ti-rfid.com

Logic

OMAP Applications Processors www.ti.com/omap TI E2E Community e2e.ti.com

Wireless Connectivity www.ti.com/wirelessconnectivity