PDP-11 Phase 2

Team Number 3

Team Members


Ahmed Mostafa

Seif El Din El Said

Omar Ibrahim

Naiera Magdy

Bus System Schematic:

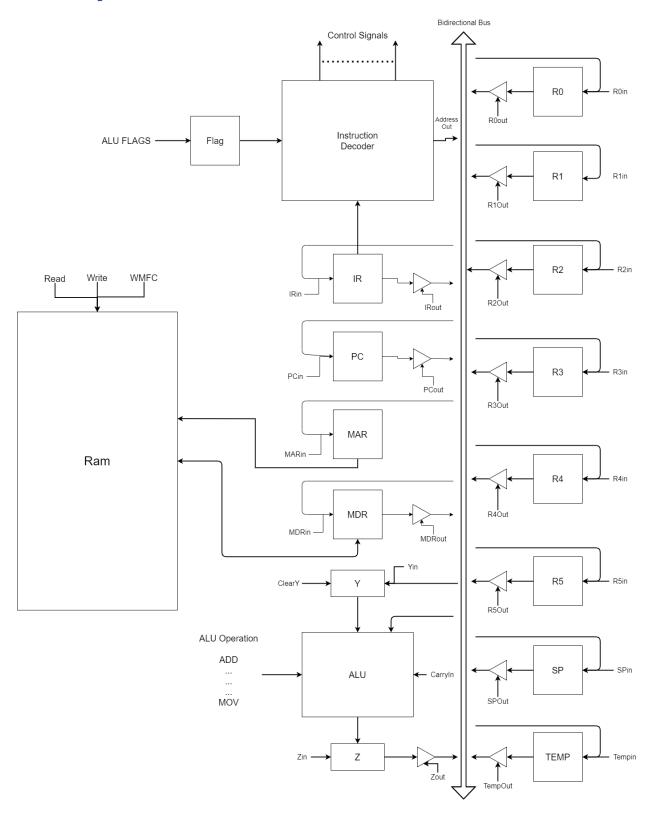

Micro-Instructions:

Some microinstructions are changed and marked with yellow color in the next table.

octal	Instructions	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10
"000"	PCout,MARin,Read,Yin,Clr-Carry-in,INC,Z-in	"0001"	"011"	"01"	"1"	"1101"	"01"	"0"	"0"	"0"	"0"
"001"	Zout,PCin,WMFC	"0011"	"001"	"00"	"0"	"0000"	"00"	"0"	"0"	"1"	"0"
"002"	MDRout,IRin	"0010"	"010"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
"003"	uBranch[uPc <- [PLA]]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"004"	PCout,Yin,Branch else uPC <- [PLA] = 0	"0001"	"111"	"00"	"1"	"0000"	"00"	"0"	"0"	"0"	"0"
"005"	IR-Address-Out,Add,Zin	"0111"	"011"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
"006"	Zout,PCin,End	"0011"	"001"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"1"
"007"	HLT,End	"1000"	"000"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"1"
"010"	Reset,End	"1001"	"000"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"1"
"011"	NOP,End	"0000"	"000"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"1"
"012"	Temp out, Carry-in =0, ADD, Z in	"0110"	"011"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
"013"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"014"	Temp out, Carry-in =0, ADC, Z in	"0110"	"011"	"00"	"0"	"0001"	"00"	"0"	"0"	"0"	"0"
"015"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"016"	Temp out, Carry-in =0, SUB, Z in	"0110"	"011"	"00"	"0"	"0010"	"00"	"0"	"0"	"0"	"0"
"017"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"020"	Temp out, Carry-in =0, SBC, Z in	"0110"	"011"	"00"	"0"	"0011"	"00"	"0"	"0"	"0"	"0"
"021"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"022"	Temp out, Carry-in =0, AND, Z in	"0110"	"011"	"00"	"0"	"0100"	"00"	"0"	"0"	"0"	"0"
"023"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"024"	Temp out, Carry-in =0, OR, Z in	"0110"	"011"	"00"	"0"	"0101"	"00"	"0"	"0"	"0"	"0"
"025"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"026"	Temp out, Carry-in =0, XOR, Z in	"0110"	"011"	"00"	"0"	"0110"	"00"	"0"	"0"	"0"	"0"
"027"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"030"	INV, Z in	"0000"	"011"	"00"	"0"	"0111"	"00"	"0"	"0"	"0"	"0"
"031"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"032"	LSR, Z in	"0000"	"011"	"00"	"0"	"1000"	"00"	"0"	"0"	"0"	"0"
"033"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"034"	ROR, Z in	"0000"	"011"	"00"	"0"	"1001"	"00"	"0"	"0"	"0"	"0"
"035"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"036"	ASR, Z in	"0000"	"011"	"00"	"0"	"1010"	"00"	"0"	"0"	"0"	"0"
"037"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"040"	LSL, Z in	"0000"	"011"	"00"	"0"	"1011"	"00"	"0"	"0"	"0"	"0"
"041"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"042"	ROL, Z in	"0000"	"011"	"00"	"0"	"1100"	"00"	"0"	"0"	"0"	"0"
"043"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"044"	INC, Z in	"0000"	"011"	"00"	"0"	"1101"	"00"	"0"	"0"	"0"	"0"
"045"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
	UBranch uPc <- 2/4 J	"0000"	"011"	"00"	"0"	"1110"	"00"	"0"	"0"	"0"	"0"
"046" "047"				"00"	"0"	"0000"	"11"	"0"	"0"		"0"
"047"	uBranch[uPc <- 274]	"0000"	"000"	"00"				"0"	"0"	"0"	"0"
"050"	CLR-Y, MOV, Z in (CLR instruction)	"0000"	"011"		"0"	"1111"	"00"			"0"	
"051"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"052"	Temp out, Yin, MOV, Zin (MOV instruction)	"0110"	"011"	"00"	"1"	"1111"	"00"	"0"	"0"	"0"	"0"
"053"	uBranch[uPc <- 274]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
"054"	(CMP)>Temp out, SUB, END	"0110"	"000"	"00"	"0"	"0010"	"00"	"0"	"0"	"0"	"1"
101	Rsrc -> [Temp]	"0100"	"110"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
102	uBranch [uPC <- 170]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"

111	Rsrc -> MAR ; Read	"0100"	"000"	"01"	"0"	"0000"	"01"	"0"	"0"	"0"	"0"
112	uBranch [uPC <- 167]; WMFC	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
121	RsrcOut, MAR in; Read; Yin, INC, Zin	"0100"	"011"	"01"	"1"	"1101"	"01"	"0"	"0"	"0"	"0"
122	[Z] -> Rsrc	"0011"	"100"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
123	uBranch [uPC <- 166; uPC0 <- [IR9]]; WMFC	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
141	Rsrc_out, Yin, DEC, Z_in	"0100"	"011"	"00"	"1"	"1110"	"00"	"0"	"0"	"0"	"0"
142	Z -> ([Rsrc] & MAR); Read	"0011"	"100"	"01"	"0"	"0000"	"01"	"0"	"0"	"0"	"0"
143	uBranch [uPC <- 166; uPC0 <- [IR9]]; WMFC	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
161	PCout, MAR in, Read, Yin, INC, Zin	"0001"	"011"	"01"	"1"	"1101"	"01"	"0"	"0"	"0"	"0"
162	[Z] -> PC; WMFC	"0011"	"001"	"00"	"0"	"0000"	"00"	"0"	"0"	"1"	"0"
163	[MDR] -> Y	"0010"	"000"	"00"	"1"	"0000"	"00"	"0"	"0"	"0"	"0"
164	[Rsrc] + [Y] -> Z	"0100"	"011"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
165	[Z] -> MAR; Read; WMFC	"0011"	"000"	"01"	"0"	"0000"	"01"	"0"	"0"	"1"	"0"
166	[MDR] -> MAR; Read; WMFC	"0010"	"000"	"01"	"0"	"0000"	"01"	"0"	"0"	"1"	"0"
167	[MDR] -> Temp	"0010"	"110"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
170	uBranch [uPC <- 201; uPC5, 4 <- [IR5, 4] ; uPC3 <- [IR5] .[IR4].[IR3]	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
201	Rdistout,Yin	"0101"	"000"	"00"	"1"	"0000"	"00"	"0"	"0"	"0"	"0"
202	uBranch {mPC ← PLA(ALUs)}	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
211	Rdistout,MARin,Read	"0101"	"000"	"01"	"0"	"0000"	"01"	"0"	"0"	"0"	"0"
212	uBranch {mPC ← 267 },WMFC	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
221	Rdistout, MARin, Read, Yin, INC, Zin	"0101"	"011"	"01"	"1"	"1101"	"01"	"0"	"0"	"0"	"0"
222	Zout,Rdestin	"0011"	"101"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
223	uBranch {mPC ← 266, mPC0 ← IR3 },WMFC	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
241	Rdistout, Yin, Dec, Zin	"0101"	"011"	"00"	"1"	"1110"	"00"	"0"	"0"	"0"	"0"
242	Zout,Rdestin,Marin,Read	"0011"	"101"	"01"	"0"	"0000"	"01"	"0"	"0"	"0"	"0"
243	uBranch {mPC ← 266, mPC0 ← IR3 },WMFC	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"1"	"0"
261	PCout,MARin,Read, Yin, INC, Zin	"0001"	"011"	"01"	"1"	"1101"	"01"	"0"	"0"	"0"	"0"
262	Zout,PCin,WMFC	"0011"	"001"	"00"	"0"	"0000"	"00"	"0"	"0"	"1"	"0"
263	MDRout, Yin	"0010"	"000"	"00"	"1"	"0000"	"00"	"0"	"0"	"0"	"0"
264	Rdistout,Add,Zin	"0101"	"011"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"0"
265	Zout,MARin,Read,WMFC	"0011"	"000"	"01"	"0"	"0000"	"01"	"0"	"0"	"1"	"0"
266	$MDRout, MARin, Read, WMFC \ \{mPC0 \leftarrow IR3\}$	"0010"	"000"	"01"	"0"	"0000"	"01"	"0"	"0"	"1"	"0"
267	MDRout,Yin	"0010"	"000"	"00"	"1"	"0000"	"00"	"0"	"0"	"0"	"0"
270	uBranch {mPC ← PLA(ALUs)}	"0000"	"000"	"00"	"0"	"0000"	"11"	"0"	"0"	"0"	"0"
274	Zout,MDRin,Write,end {mPC0 \leftarrow IR9}	"0011"	"000"	"10"	"0"	"0000"	"10"	"0"	"0"	"0"	"1"
275	Zout,Rdistin,end	"0011"	"101"	"00"	"0"	"0000"	"00"	"0"	"0"	"0"	"1"