



Programming the ivy engine

July 12, 2019

Allart Ian Vogelesang <u>ian.vogelesang@hitachivantara.com</u> Stephen Morgan <u>stephen.morgan@hitachivantara.com</u>

The ivyscript wrapper and the ivy engine



- 1. ivyscript programming language wrapper and library (separate presentation)
 - Automate workflow, embody expertise in code library
 - Do something, analyze what happened, decide what to do next
 - Similar to a subset of C/C++, with some minor differences.
 - Extensible parser auto-generated from language grammar. (Flex+Bison)
 - Each ivyscript ivy engine control statement maps to an underlying ivy engine control API call.
- 2. ivyscript ivy engine control statements (this material)
 - Each ivyscript engine control statement maps to an underlying ivy engine control C++ API.
 - See "ivy_engine_API.txt" output file to see what calls to the ivy engine API your ivyscript program makes.
 - There is also an ivy REST API, with corresponding ivy REST API calls mapping one-to-one to ivy engine C++ API calls.
 - Thus it's possible to use Python instead of ivyscript to operate the ivy engine.

Invoking ivy on the Linux command line



- ivy [options] ivyscript_filename
 - Ivyscript filenames must end in .ivyscript.

If you leave off the .ivyscript suffix, ivy will add it before looking for the file.

- Options: (case insensitive, ignores underscores, e.g. -noLDEV same as -no ldev.)
 - -log turns on detailed logging useful when a problem is encountered.
 - -no cmd stops ivy from automatically connecting to a command device.
 - -spinloop ivy I/O driving subthreads will continuously check for work to do without ever waiting.

(Useful at very low I/O rates to keep ivydriver pages resident in test host CPU L1/L2 cache.)

```
-one_thread_per_core
```

Normally ivydriver on each test host starts an I/O driving subthread on all hyperthreads of every Linux CPU core_id, except core 0. The <code>-one_thread_per_core</code> option only starts an I/O driving subthread on the first hyperthread of every <code>core_id</code> except core 0. This option should only be used when measuring service times at very low I/O rates, along with the <code>-spinlock</code> option.

```
-no_wrap
```

In csv files, ivy wraps PG names e.g. 1-1 and LDEV names like 10:00 as character string formulas like ="1-1" to stop Excel from interpreting them as dates and times. -no wrap suppresses this.

-suppress_perf, -skip_LDEV, & -no_check_failed_component - covered later in the [Go] parameter section.

ivyscript engine control statements




Each maps to its corresponding underlying ivy engine C++ API call.

- [OutputFolderRoot] "/ivy_output";
- [Hosts] "sun159, cb[24-31]" [Select] %% "serial number" : 123456, LDEV : 00:00-01:FF %%;
- [SetIosequencerTemplate] "random steady" [parameters] "IOPS = 20, blocksize = 4KiB";
- [CreateWorkload] "cat" [iosequencer] "sequential" [parameters] "IOPS=max, maxTags=1";
- [DeleteWorkload] "cat" [select] "LDEV : 00:04";
- [CreateRollup] "host" [nocsv] [quantity] 8 [MaxDroop] 25%;
- [EditRollup] "serial number+Port = { 410123+1A, 410123+2A }" [parameters] "maxTags=128";
- [DeleteRollup] "serial_number+Port";
- [Go] "stepname=whole LUN staggered start, measure seconds = 60";

ivy engine startup – specify test host names, select LUNs



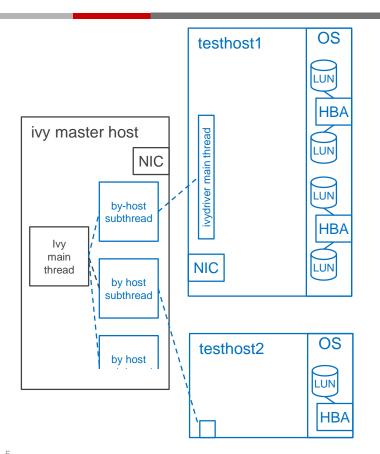

```
[Hosts] "testhost[1-8]"
[Select] %% "serial number" : 123456,
LDEV : 00:00-01:FF %%;
```

- Executing the ivyscript [Hosts] statement invokes the ivy engine API startup() method to use ssh to fire up the ivydriver executable remotely on the test hosts.
- Each test host runs a SCSI Inquiry tool to report back the decoded attributes of "all discovered LUNs".
 - The master "all discovered LUNs" LUN attribute list is written as a csv file with a header line for attribute names, and a detail line for each host LUN. Look here to see what you can select from.
- The [select] clause specifies a JSON-format* LUN attribute value filter to select "available test LUNs" from "all discovered LUNs".
 - Must specify at least "serial number" or "vendor" for safety reasons.
 - * ivy relaxes JSON OK to omit surrounding braces {}, OK to omit double quotes around identifiers, LDEV ranges, parity group names, etc.

ivy engine startup - the "test name"



- When ivy is invoked on the command line like
 - ivy some/path/henri.ivyscript
- The part of the ivyscript filename discarding the path and the .ivyscript suffix, is called the "test name".
 - This must be composed entirely of letters a-zA-Z, Japanese hiragana / katakana / kanji, digits 0-9, hyphens -, and underscores _.
 - Note: test names (output filenames) using Japanese characters in Linux are encoded in UTF-8 which may not display properly on Windows systems.
- The test name is used as the subfolder name off of the [OutputFolderRoot]
 folder, and is used as part of the filenames of ivy output csv files.

"test name" – used in output filename prefixes



- The test name is also used as part of the prefix of ivy output filenames.
 - Fully qualified csv files names incorporate test name, and other fields so you can combine together in one folder any files from multiple ivy runs without name collisions as long as the test names are different.



"step name" and "step number"



- Later we'll also see things like "step name" and "step number".
 - Ivyscript has some handy builtin functions to retrieve things like this to build csv file names and then load a csv file into an object to retrieve rows, columns, and cells including identifying columns by column header title.
 - This is how you retrieve the result of a previous test step to see what happened and decide what to do next.
 - There's also a built-in function to let you write to ivy master log file.

Statements - [OutputFolderRoot]



- [OutputFolderRoot] <string literal>;
 - Specifies a root folder which must already exist.
 - The default is "." (the current folder).
 - Specifies the root folder in which ivy will make a subfolder to record the output from running an .ivyscript program.
- A string literal (string constant) is required, because the output root folder name is captured at compile time.
 - This way, the output folder structure and log files can be all in place before the ivyscript program starts running.
 - At most one [OutputFolderRoot] statement, anywhere in your program.

Specifying host names



[Hosts] "sun159, horde[33-64], 192.168.0.0"
[Select] "xxx";

Host name forms


– sun159 single host

Horde [33-64]
 range of hosts with consecutive numeric suffixes

- 192.168.0.0 **IPV4 dotted quad**

Vendor-independent LUN attribute discovery



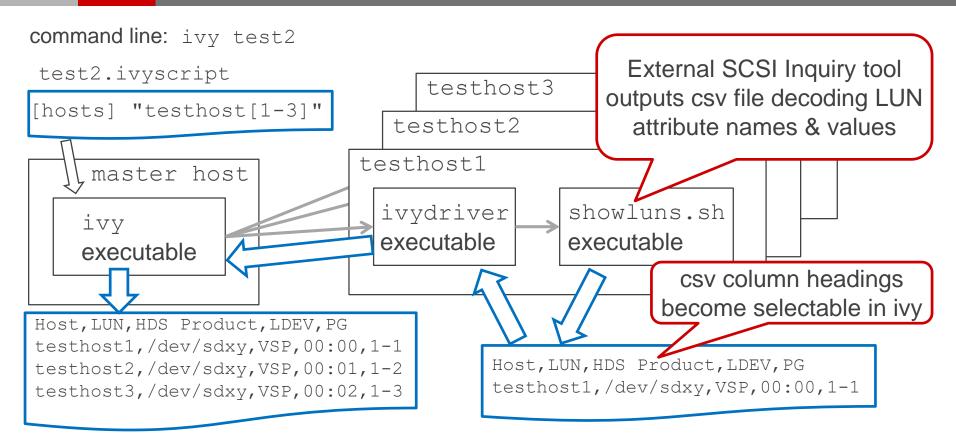

Sample attribute values from LUN lister tool



```
hostname = cb23
LUN Name = /\text{dev/sdbu}
Hitachi Product = HM700
Hitachi Vantara Product = "HUS VM" Size TB = 0.001074
Serial Number = 210030
Port = 1A
LDEV = 00:00
Nickname = James
LDEV type = Internal
RAID level = RAID-6(6+2)
PG Names = 1-1/1-2
Pool ID = 2
CLPR = CLPR0
Max LBA = 2097151
Size MB = 1073.741824
```

```
Size MiB = 1024.000000
Size GB = 1.073742
Size GiB = 1.000000
Size TiB = 0.000977
Vendor = HITACHT
Product = OPEN-V
```

There are more attributes on newer subsystem types.

Get the latest version of the Hitachi LUN discovery tool, open source software, found at https://github.com/Hitachi-Data-Systems/LUN_discovery

LUN attribute matching



- The LUN discovery (SCSI Inquiry) tool output csv file header line defines the LUN attribute names:
 - e.g. "Hitachi Vantara Product, Serial Number, LDEV, ..."
- Each header line csv column title automatically becomes selectable as a LUN attribute in ivy.
 - This is what makes ivy vendor independent. To support another vendor's architecture and terminology in ivy, all you need is a SCSI Inquiry tool that makes a csv file with a header line defining the LUN attribute names, and a data line for each LUN showing the attribute values for that LUN.
- There are a handful of "custom" attribute value matchers matching specific token types for Hitachi subsystems, shown in the following charts.
 - Other vendors are encouraged to write their own.

LUN attribute [Select] uses JSON syntax



JSON format is used to describe attribute names and selected values

```
- { "LDEV type" : "DP-Vol", "port" : [ "1A", "3A" ] }
```

• In ivyscript, to make typing character strings containing double quote marks easy, use "raw strings" surrounded by %%, as in:

```
[select] %% { "LDEV type" : "DP-Vol", "port" : [ "1A", "3A" ] } %%

Otherwise, you would need to type:
[select] "{ \"LDEV type\" : \"DP-Vol\", \"port\" : [ \"1A\", \"3A\" ] }"
```

ivy supports a "relaxed" JSON syntax



- Strict JSON format is welcome, but to spare some typing and make ivy a little friendlier, some types of things don't have to be in quotes. (But anything containing commas or spaces does need to be in quotes.)
 - robert
 - 00:00
 - A single Hitachi LDEV (logical device)
 - 00:00-01:FF
 - A range of LDEVs
 - -1-1
 - A Hitachi parity group name
 - 1A
 - A Hitachi subsystem port name
 - All integer/floating point values (not just JSON-specific numeric values)

[Select] LDEV



- There is a custom matcher for LDEV which understands
 - "00:1A-00:3F, 01:00, 05:00 05:FF"
 - Commas and / or spaces are used as delimiters between single LDEVs like
 00:10, or consecutive LDEV subranges like 00:1A-00:3F
 - Spaces are optional around the hyphen in a consecutive range.
- These LDEV specifications don't need to be in quotes. Note they don't contain spaces or commas:
 - 01:FF
 - -00:1A-00:3F

[Select] **PG**



- Single PGs like 1-1 don't need to be in quotes.
 - [select] "PG: [1-1, 2-3] "
- There is a custom matcher for "PG" which understands
 - "1-*" matches PG names starting with 1-
 - "1-2:4" matches 1-2, 1-3, 1-4 (or 01-02, 01-03, 01-04)
 - "1-2:" matches 1-2, 1-3, ...
 - "1-:2" matches 1-1, 1-2
 - These special matching ranges do need to be in quotes, unlike a single PG constant like 1-1.

[hosts] - use of command devices is automatic



- After we have "available test LUNs", (which excludes command devices)
 - The [hosts] statement looks through the command devices that were part of "all discovered LUNs".
 - For each unique subsystem serial number represented in "available test LUNs",
 - For the first command device found that goes to that subsystem on a host where the Hitachi proprietary command device connector "ivy_cmddev" (not part of the ivy open source project) is available, and where the ivy_cmddev license key and RMLIB are installed, we fire the ivy command device connector ivy_cmddev up remotely on the test host that has the command device, and retrieve the RMLIB API data on the configuration of the subsystem. This is completely transparent to an ivyscript program.
 - To disable the use of command devices, use the "-no_cmd" command line option when running ivy. To only collect configuration data from a command device, but not performance data while ivy is running, use the "-no_perf" option.
- For each available test LUN, if we have subsystem configuration data for the LDEV behind that LUN, the subsystem LDEV configuration attribute value pairs are merged into the LUN's attributes – add attribute name suffix upon collision with different attribute value.
 - That means that if you have a command device, you can select on drive_type to create a
 workload.
 - "drive_type" even works for DP-Vols, as ivy follows the config info to find the pool vols and use
 their drive type.

Real time subsystem data filtered by rollup instance



- Later we will show you how to perform dynamic feedback control at the granularity of each instance of a rollup
 - DFC can be performed on real-time subsystem data at the granularity of the rollup instance using "subsystem component filters", which list the names of each port, each MP_core, each PG, etc. that are associated with the workloads and their underlying LUNs that comprise the rollup instance.
- This is done with a combination of having the configuration data and knowing the fixed relationships in all instances of a subsystem model.
 - The knowledge of which MP_cores comprise an MPU together with the LDEV MPU assignment allow us to filter MP_core data by rollup instance.

Statements - [SetIosequencerTemplate]



[SetIosequencerTemplate] "random steady"

[param

set iosequen

- Sets the def
- If you are go USE [SetIos vou create e
 - Handy if yd the LUN or

The use of [SetIosequencerTemplate] is deprecated, meaning it's old thing that still works, but users are requested to avoid using it.

Instead, please use [EditRollup] to set the same parameters across a selection of existing workloads once they have been created.

At some point in the future, [SetIosequencerTemplate] may be removed from ivy.

fraction read actionRead, etc.

rariations, you could nmon, and then when orkload.

tarting at a different point in en reading the program, it's more clear what's going on if the [CreateWorkload] only sets what's different each time.

[iosequencer] some common [parameters]



- RangeStart default 0.0 same as 0%
 RangeEnd default 1.0 same as 100%
 - Establishes the "coverage zone" within the LUN. You can layer different workloads in different parts of the same LUN.
- blocksize default "4 KiB" same as "4096" also supports "MiB" units.
- maxTags default 1.
 - The maximum number of I/Os that this workload on this LUN is allowed to try to issue at one time.
 - OS call to start I/Os may block if underlying HBA/device driver is out of tags. Workloads share LUNs and share the underlying HBA/device driver.
- IOPS default 5
 - IOPS = "max" keep starting I/Os trying to keep queue depth at "maxTags".
- fractionRead default 1.0 same as 100%.

[iosequencer] random – two types



- random_steady
 - I/Os are issued to random locations on a steady drumbeat in time.
 - A "location" means an LBA (Logical Block Address, or sector number) that is aligned on a multiple
 of the blocksize being generated.
- random_independent
 - I/Os occur at random times as well as to random locations.
 - Random independent distributions are easier to model mathematically.
 - The lower the IOPS rate or the shorter the observation period, the more erratic random_independent IOPS will appear.
 - In general, random_independent I/O patterns will have a slightly higher service time compared to random_steady workloads, because scheduled I/O start times are independent and in general can collide (bursty), whereas random_steady workloads space out I/O scheduled start times evenly.

[iosequencer] "sequential"



- In ivy, a sequential workload must be all reads (fractionRead=1.0 or fractionRead=100%) or all writes (fractionRead=0%).
- But, you can use a for loop to create a series of sequential threads starting at different points along the LUN, where each of the threads is either a read thread or a write thread
 - SeqStartPoint = 0.23
 - Range is from 0.0 to less than 1.0 this is relative to the volume coverage zone defined from RangeStart to RangeEnd.
 - More commonly use the volume coverage parameters to have sequential threads wrap around in their own areas.

Workload placement in part of the LUN



Use a loop to create 10 sequential threads where each of the 10 threads operates within its own 1/10th of the LUN – its own "zone", so that when it gets to the end of its own zone, it should wrap around to the beginning of that zone. You can layer different workload types in different parts of a LUN.

```
[hosts] "sun159" [select] %% { "serial number" : 83011441 } %%;
    zones = 10;
int.
int.
       zone;
double start, end;
for (zone = 0; zone < zones; zone = zone + 1)
        start = double(zone)/double(zones);
        end = double(zone+1)/double(zones);
        [CreateWorkload] "zone" + string(zone)
                    [iosequencer] "sequential"
                    [parameters] "RangeStart=" + string(start)
                                + ", RangeEnd=" + string(end)
                                + ",IOPS=max, blocksize=64KiB, fractionRead=100%, maxTags=1";
[CreateRollup] "workload"; // this is to give us data by zone across all LUNs
[Go] "stepname=separate zones, measure seconds = 60";
```

Start a sequential thread at a point

SeqStartPoint



Use a loop to create 10 sequential threads where each of the threads covers the entire LUN, wrapping
around from the end of the entire LUN to the beginning of the LUN, but where each thread starts at a
different equally spaced point.

```
[hosts] "sun159" [select] %% { "serial number" : 83011441 } %%;
     zones = 10;
int.
int
       zone;
double start;
for (zone = 0; zone < zones; zone = zone + 1)
        start = double(zone)/double(zones);
        [CreateWorkload] "zone" + string(zone)
                    [iosequencer] "sequential"
                    [parameters] "SeqStartPoint=" + string(start)
                               + ",IOPS=max, blocksize=64KiB, fractionRead=100%, maxTags=1";
[CreateRollup] "workload"; // this is to give us data by zone across all LUNs
[go] "stepname=whole LUN staggered start, measure seconds = 60";
```

Sequential – mixing read threads & write threads



 Use a loop to create a group of sequential workload threads each operating within its own "zone", and where some threads do writes and some do reads.

```
[hosts] "sun159" [select] %% { "serial number" : 83011441 } %%;
int zones = 12; int zone; double start, end; double seg percent read = 75%;
for (zone = 0; zone < zones; zone = zone + 1) {
    start = double(zone)/double(zones); end = double(zone+1)/double(zones);
    double rw; string p;
    if ( (double(zone) / double(zones) ) < seq percent read ) { rw = 100%; p = "read "; }
                                                                 \{ rw = 0\%; p = "write "; \}
    else
    [CreateWorkload] p + "zone" + string(zone)
                 [iosequencer] "sequential"
                 [parameters] "RangeStart=" + string(start)
                            + ", RangeEnd=" + string(end)
                            + ", IOPS=max, blocksize=64KiB, maxTags=1"
                            + ", fractionRead=" + string(rw);
[Go] "stepname=read and write zones, measure seconds = 60";
```


Sequential workloads and maxTags



- The default maxTags value is 1.
- ivy iosequencers generate a sequence of I/Os in scheduled start time order.
- For IOPS=max, the scheduled start time for each I/O is zero.
- For all iosequencers, if you specify, for example, maxTags=4, this means "keep issuing I/Os when it's their scheduled time, except wait to start the next I/O if there are already 4 I/Os running".
 - For a sequential workload, IOPS=max, maxTags=4 means "issue I/Os for 4 consecutive blocks at once, and then when one of these completes, keep issuing more to try to keep 4 running at all times."
- Note: The ivy method is was chosen so as not to suffer from the issue with vdbench when specifying "threads = n" for n > 1 with sequential workloads, where each vdbench thread reads block 0, then block 1, reading each block multiple times which is clearly not what customer workloads would be expected to do.
 O Hitachi Vantara 2019. All rights reserved.

Statements - [CreateWorkload]



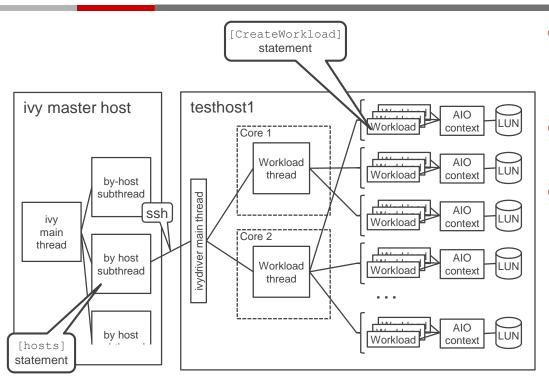

```
[CreateWorkload] "r_steady"
    [select] %% {"LDEV":"00:00-00:1F"} %%
    [iosequencer] "random_steady"
    [parameters] "fractionRead = 75%"
```

- Apply a [select] filter matching against "available test LUN" attribute values.
- On each selected LUN, create an identical workload with the specified workload name.
 - Each type of iosequencer has its own set of valid parameter names.

.ivyscript dedupe syntax



- The dedupe parameter (default dedupe = 1.0) controls the average number of copies of a generated pattern that are written.
 - dedupe must set to a value greater than or equal to 1.0
 - For dedupe_method=serpentine it is an error if some workload threads are set to a different dedupe value than other workload threads with the same name.
 - The dedupe parameter is ignored for fraction_read = 100%.

dedupe method



- constant ratio
 - For each block address within the LUN, flips back and forth between a set of fixed patterns.
 - When writing sequentially to fill and then writing randomly, the achieved dedupe ratio remains constant.
- static (default)
 - For each location in the LUN, always writes a fixed pattern for that location.
- Both constant_ratio & static
 - blocksize must be a multiple of dedupe_unit_bytes. (Default dedupe_unit_bytes = "8 KiB".)
 - Specify fraction_zero_pattern = 15% to have 15% of all 8 KiB (sub-)blocks to be written with an all zeros pattern.
 - The dedupe ratio applies to the sub-blocks that are not all zeros.
 - For example, with fraction_zero_pattern = 25% and dedupe = 1.5, 25% of all 8 KiB (sub-) blocks will be all zeros, of the remaining 75% of all (sub-)blocks, one third will be additional duplicate copies.
 - The duplicate copies are written within a single workload instance, i.e. within the same LUN.

dedupe method



- serpentine
 - Generates a new unique pattern each time.
 - Writes the specified "dedupe" number of multiple copies at the same time, whether randomly or sequentially.
 - When writing sequentially to fill, achieved dedupe ratio is "dedupe", then when subsequently writing randomly, achieved dedupe ratio decays.
 - The serpentine method's "scope", meaning the range over which the duplicate copies are written, covers all the workloads across all LUNs, all ports, all subsystems which share the same workload name.
- target_spread
 - Some patterns are unique, some repeat, targeting to achieve an average of "dedupe" copies.

.ivyscript compressibility syntax



- The pattern parameter selects a pattern generator to fill the contents of a block before it is written to the LUN.
- The default is pattern = random.
- Don't use pattern = zeros or pattern = all_0xFF or pattern = all_0x0F with dedupe & compression.

.ivyscript pattern parameter



- pattern = random
 - Random binary noise. Not compressible. This is the ivy default.
- pattern = trailing blanks, compressibility = 50%
 - Each 8 KiB part of block has an incompressible section and a section with repeated blanks.
 - compressibility specifies the % of the block that is repeating blanks.
- pattern = ascii
 - Random ascii characters. Fixed degree of compressibility
- pattern = gobbledegook
 - Pseudo-English text generated by randomly selecting words from a dictionary.
 - Fixed degree of compressibility.
- pattern = zeros, pattern = all 0x0F, pattern = all 0xFF
 - Self explanatory

Using the first 32 Ki Words appearing in the 1913 public domain edition of Webster's dictionary.

pattern=random



```
0 "..G.n...:%.~wuH/...f.cM.....6." (ffd44709 6ecaf4c6 fb3a25be 7e777548 2fa3c79b 66a2634d 9b04101f 1dab36ef)
offset 0x0000
              offset 0x0020
              64 "~.p...!<.Z.=..#;P....7...|>*..Q." (7e89701e bf84213c 1d5ae83d e184233b 50e6aeff 0f370bec
offset 0x0040
              96 "..}..Z/.:}q.../.$..2...p....JE." (b81d7d87 135a2fc7 3b7d71fc 10e62fce 24b60532 96d58370
offset 0x0060
                                                                                                  Random binary data
              128 ".4.I3.M....h].....I0...;..V$".l" (8434e949 33d64d02 dbed9d68 5df512ee 97a51949 3098881e
offset 0x0080
offset 0x00a0
              160 ".....h.#l[..G.n...<....be.:.e" (d7e40db2 9b0fc868 1a236c5b e29147d5 6e9ba8c3 ef3c10aa
                                                                                                     (incompressible)
              192 ".../....w...y~W%; Ao..[x..Y.A" (d2c9a32f 17c099c2 b092779a e9c2f8af 797e5725 3b416f15
offset 0x00c0
offset 0x00e0
              224 "...?\..{.H/mw.}F.....G.P.Y.v+.\." (f4e1913f 5cd1147b c1482f6d 77b27d46 8d97a484 ba478d50
              256 "..+M..Q.+..n~.t...v..i...s.^=k.G" (92152b4d 95d251dc 2b10b76e 7ea87409 ede576ed 0869cfa9
offset 0x0100
              288 "...b.8r`P{9....a.\]@@.*P%....$.=" (94aff162 9a387260 507b390c ee80e961 1e5c5d40 408c2a50 عصححا
offset 0x0120
offset 0x0140
              66c45ff1)
offset 0x0160
              مصرة "...H..z.AB......$.....=.CZ....|" (890948a3 d07aee41 42b91aed 2c9de494 2497ccc2 1da
                                                                                                 o2435aa2 cdd08f7c)
              offset 0x0180
              416 "....^.R..|.....stq$....| (a9a6d3d3 5e8c527f 817cc7e8 d88c92be 73747124 c19ae1b3 7ce3d6fe f00d98a5)
offset 0x01a0
              448 ".lt...I.A[S[.c....\......l .x" (8a3174a6 0ddd49e6 415b535b 9b638f05 d1f08d5c 8d97a9db 85181698 6c5fae78)
offset 0x01c0
offset 0x01e0
              480 ".Y.P.<...w.hb>.n&..d.IE}e.w..q.b" (f0590f50 cc3ceffe bb77e368 623eb26e 2612f664 db49457d 65ae77a2 9467f462)
              512 "W..q...L&V#....+.q}..,3......" (57e49d67 b18cd74c 26562304 8094ba2b 06717dea d72c33cc ddf5b4c1 098f0b1e)
offset 0x0200
offset 0x0220
              544 "..[.m...dN..lw...50....f..C...." (d0c85ba9 6de71307 9c644ead fe6c7704 c8ac356f ba12d7d3 66b6c543 84e717e7)
offset 0x0240
              576 "....*u../4.0.q..4....w...x..m." (cld71713 2a75c5b6 2f34fa4f 1271e980 34cf9b00 18d377c0 dcla78be 1ba16dea)
offset 0x0260
              608 "#..6.>...i.....P.l.qiv...|.5.." (23bc1f36 ec3efe10 a169f489 ae0fd68c 50eaad6c b3676976 b310fd7c 8a35e1e3)
offset 0x0280
              640 ".....N..Bs......J^{<.k.cp..b..SU" (e6861bf1 a54ee8a1 4273c0c8 d3dffef7 4a5e7b3c fb6be163 70afb362 de955355)
offset 0x02a0
              672 ".-B}.}..a<9.....k....v.8.<.7.a" (a32d427d 907d0ca5 613c39f7 a98b90d3 6b17c2f6 19088c79 9e380a3c a237c861)
              offset 0x02c0
              736 "..p....u6...5}..U....~...b.." (d10770ca 0c86f111 b0fe7536 ca99bc35 7db9ee55 8fc7db8b 7ef8065f 8e62c6a5)
offset 0x02e0
              768 "...3.MsP.4N.u.Y..*..@...C#....g." (0fed0433 d34d7350 bc344e0f 75be5918 e12afdd5 40dd99f8 4323a5fc a6086717)
offset 0x0300
              800 ".e..jbd..E......q..>K..%.9.`." (8f65f999 6a6264e7 e845f916 97dbceea 9ea58371 cdab3e4b e4e725da 390a60b9)
offset 0x0320
              832 "o..cM.....c...s..5.E.ro..71Z." (6fb2ac63 4dc3b00c eb1713b5 e36397dd 0973cdfc 350645b6 726f0587 37315ac2)
offset 0x0340
              864 "c..."...B.r.x,.e.o..No.K...L..[." (63939ac6 22c5b295 42e672b9 782cb865 986feef2 4e6ff34b bde6e04c 11c45bd0)
offset 0x0360
offset 0x0380
              896 ".(h..8\.Vw..\.Tc.? `.Q......" (062868d4 fc385c19 5677e9c6 5ca75463 ab3f5f60 95517fe4 dd8ae4e5 f884d519)
              928 ".$......Q,-....C,..&....." (b1249cfa 88a1cbbf 07fc512c 2d93a7e1 09ebe643 2cdcb026 960bc381 c6d19b04)
offset 0x03a0
              960 "....7hF.9.l.08.... .....3j5." (ccdb8f07 3768461e 39ed6cf2 4f38e3ec f4e0209d a15fe560 a8fe1cdd 336a359c)
offset 0x03c0
              992 "..6...P7.[.;....)..K.....oi..." (edd6367f ele45037 ae5b923b d78ef3b2 e729b1fe 4b1fa79f 05e7f96f 69dcef9a)
offset 0x03e0
```

pattern=trailing_blanks,compressibility=33%,blocksize="1 KiB"



```
buffer contents:
offset 0x0
                   "[.....7hHlL.U=.....~OPC...W.H.$." (5b81c8e7 f3193768 486c4cc4 553df104 93e1937e 5150431e 05f457ce 48b024d0)
                   ".4......(89348d95 018b9d06 c8cff3ba 88a5113c e133bb01 fd2fbfb7 f5001d23 1a089c11)
offset 0x20
offset 0x40
             (64)
                   "X..W.&.K.?.v.....g.z..d.....]ge" (58ccfe57 b926a94b 063fa276 d719abb0 0d1d67e8 7ab5b064 c49bd00e c05d7165)
                                                                                                                                     Leading part of block is
                   "4....+..M..!B35.I..j...1.a..K..." (34d7bc0f db2bd11b 4deea721 42333596 49cbd96a 98f4c331 f461b512 4bd4f501)
offset 0x60
             (128) ".g..vv...0...|....6..f..o.b..(." (c0678a03 7676d299 a75108ce 057cea9a dfe81336 cba3660f d86fff62 d7b97b11)
                                                                                                                                       random binary data
offset 0x80
offset 0xA0
             (160) ".....fQ.:;}k..Z.3...fA".....X..." (12b00084 de6651cc 3a3b7d6b f8a85abe 33d4b2cb 6641220f baf4e815 5809c61
                                                                                                                                         (incompressible)
             (192) "..&E=;q.w-.~.^q...8...jJ.{...yD." (08c62645 3d3b719f 772da47e 0b5e71c0 df843884 19866a4a 867ba1f4 b5ر
offset 0xC0
offset 0xE0 (224) ".C$......+&...~|a..."2.Z..6." (d84324f2 b0f517c1 96b7e0f7 012b2601 8ab57e5d 61ecd68a 2232d65a bb9036a0)
offset 0x100 (256) ".a...[Y..pl.......%IN.Z(....3.." (cf610004 cf5b5913 bc706c19 0d92ebcb laaaad25 494e125a 28adedd4 a233efe3)
offset 0x120 (288) "..v0....:..Y7....|..}.. 5.\.(+i" (c7d9764f 94d9ceb1 923afbe0 5937b2b0 aff07c1a 8f7d160d 2035ce5c cc282b69)
offset 0x140 (320) "..\.....M...(y/%F...L.=..m..." (e5d85cd8 a0ae13e2 144d84d8 027b792f 25461ac6 1a4caefb 3ddc816d bdabbb85)
offset 0x160 (352) "...o....9.....*.j.s..%......A\.." (cab2c06f a3e8d79a 399edda9 ccbf2abc 6a98f173 b5bd25a2 d2e6cf86 415ce5d3)
offset 0x180 (384) "SZ...x.S/+.b,<.A6...,...F..|p^5" (535ab9ee c778eb53 2f2b0362 2c3c1d41 3699b693 0b2c92ea 9a46f5b8 7c705e35)
offset 0x1A0 (416) ". F......0&......qVP.J...e'...n." (e22046ce b98dd817 ba4f26b6 de7fb8fa 80675650 aa4ab6f4 806527ce f49c6eb4)
offset 0x1C0 (448) " .N..G...3 ...L...*.t.db.#..!.." (5fe34eb8 1147d115 d4332020 10ea0f4c ead6a62a b074a664 62df2311 c32100cf)
offset 0x1E0 (480) ".W....A.(.DA....axy]....h9'....)" (a557019d b6e34190 28974441 1fa2bca0 6178595d 0ff416af 683927c2 acc9f229)
offset 0x200 (512) ">0...i,..9^....K;+...@^....K<." (3e4f0a02 5fa4f66a 04a6d239 5eafdda7 0c4b3b2b 8782ff40 5e9019a4 194b3cd6)
offset 0x220 (544) "DL|N..... uV(.0q.... q.%...v.." (444c7c4e 8b96f9fd 148f5f04 7556288e 4f67c5c8 9acb2071 ed25acc4 8f769cc4)
offset 0x240 (576) "M...r.x..F.v ....4 .P....0.z..K2" (4dflade6 72c978f5 d846fb76 20940cc6 ed345ff1 500dal0a 8930ef7a 0bb14b32)
offset 0x260 (608) "e...[:v.P..H.^*.dX......M..Ye" (65f2f5e8 b45b3a79 a650e78e 488f5e2a c8645883 87ebef0e 929aae4d 0aef5965)
offset 0x280 (640) "j.....H)P8....e...........9N." (6abfd4c8 fe06c648 295038e4 fae3b165 ecc390b7 f7e799a3 fd1ca8e5 c4394eb5)
offset 0x2A0 (672) "\d..{.\..y
                                                     " (5c6418cb 7bff6015 df792020 20202020 20202020 20202020 20202020 20202020 20202020)
                                                                                                                                         compressibility = 33%
offset 0x2C0 (704) "
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
                                                                                                                                           means 33% trailing
offset 0x2E0 (736) "
                                                       (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
                                                                                                                                                 blanks
offset 0x300 (768) "
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
offset 0x320 (800) "
offset 0x340 (832) "
                                                       (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
offset 0x360 (864) "
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
offset 0x380 (896) "
offset 0x3A0 (928) "
                                                       (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
offset 0x3C0 (960) "
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)
                                                     " (20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020 20202020)—
offset 0x3E0 (992) "
```

pattern=ascii



```
offset 0x0000
                  0 "aPJYuQcQ4yaW>Oa}LGc7;z[[9PF0j{\4" (61504a59 75516351 34796157 3e4f617d 4c476337 3b7a5b5b 3950464f 6a7b5c34)
offset 0x0020
                 32 "b|n=Vp%]iWLB^JIYRkXiH-$b%qBjz(b!" (627c6e3d 5670255d 69574c42 5e4a4959 526b5869 482d2462 2571426a 7a286221)
offset 0x0040
                 64 "A+>/bf.%nu^GV(t ZFT7 AlZ76Y)Ran " (412b3e2f 62662e25 6e755e47 5628745f 5a465437 20416c5a 37365929 52616e20)
                 96 "ngxq??<Clv?'?M&w !po=ouj3fI/cnR=" (6e677871 3f3f3c43 6c763f27 3f4d2677 2021<u>706f 3d6f756a 3366402f 6366523d</u>)
offset 0x0060
                128 "DI<:\?*([:Znm %5i*olN<'\%!4"EQiVt" (44493c3a 6c3f2a28 5b3a5a6e 6d202535 692/
offset 0x0080
                160 "UE]pNzawt<![XfUaB$`;~yQ/t8,0)*HE" (55455d70 4e7a6177 743c215b 58665561 422
                                                                                                       Randomly selected
offset 0x00a0
offset 0x00c0
                192 ",/~IB|V02w ym`XZ`xRIn{S#mpe RQ )" (2c2f7e49 427c564f 32772079 6d60585a 607
                                                                                                 printable ASCII characters
offset 0x00e0
                224 "U/>LPMdpl>FzJZY(3K=FYo}DD+eM:wU/" (552f3e4c 504d6470 6c3e467a 4a5a5928 334
offset 0x0100
                256 "NQjVxX{YQ50]NMQ`SYG7t|3k<u@H1hsR" (4e516a56 78587b59 5135305d 4e4d5160 535
                                                                                                         (fixed degree of
offset 0x0120
                288 "AKphT Y?pq+ xs#xo8)-ExmlwSrw:%]H" (414b7068 545f593f 70712b5f 7873237&
                320 "8D.f`.9/FE%HV7#$[. `1^MB[7 m!nZ(" (38442c66 602c392f 46452548_56
offset 0x0140
offset 0x0160
                عمر 352 "0\7afoGRP/iX ;8?<{)E a:[L|?4 K{)" (4f5c3761 666f4752 عمر 500)
                                                                                                         compressibility)
                معدد Z+]o9Is7q0$" (7a4b7148 معدد 384 "zKgHz8%+W/oca,%J*(C%`Z+]o9Is7q0$"
offset 0x0180
offset 0x01a0
                416 "CVz/Z%cqy3|@"R.<Tsc7=/!SEyD:(2lq" (4356
                                                                448 " OevIIX31`1?wP}n]WOK['T}YbU@$<del>8\ri \(\frac{204f6576}{204f6576}\) 49495833 3160313f 77507d6e 5d574f4b 5b27547d 59625540 5338683f)</del>
offset 0x01c0
offset 0x01e0
                480 "7XVR9[sD"k^Xt%u/B>(wAwZv91[Qsk~S" (37585652 395b7344 226b5e58 7425752f 423e2877 41775a76 39315b51 736b7e53)
offset 0x0200
                512 "q{m*=uU8WD6xXHvBz09hKqBHTCib+]Sf" (717b6d2a 3d755538 57443678 58487642 7a4f3968 4b674248 54436962 2b5d5366)
                544 "E`.z}^!6I-LX)X9kDW}%VT(lixGC6`)K" (45602e7a 7d5e2136 492d4c58 2958396b 44577d25 56542831 69784743 3660294b)
offset 0x0220
offset 0x0240
                576 "JkN^pNd@/}e+,3,HNA9W*-k\mzD~4i*V" (4a6b4e5e 704e6440 2f7d652b 2c332c48 4e413957 2a2d6b5c 6d7a447e 34692a56)
offset 0x0260
                608 "FFb+sE0W&JE`kLL))9S1J\Y^-fV3":)}" (4646622b 73455157 264a4560 6b4c4c29 29395331 4a5c595e 2d665633 223a297d)
offset 0x0280
                640 "{uIM9 >\9XUHp&UoOJH~.iT9H}{f'<io" (7b75494d 39203e5c 39585548 7026556f 4f4a487e 2e695439 487d7b66 273c696f)
offset 0x02a0
                672 "1Ubl)&\RcmQ~,%2"XB!tOds#=+s%VGlm" (3155626c 29265c52 636d517e 2c253222 58422174 4f647323 3d2b7325 56476c6d)
offset 0x02c0
                704 "v{=S\\hEJ7}&'qJqK{1)>BF,HW`/C(?P" (767b3d53 5c5c6845 4a377d26 27714a71 4b7b3129 3e42462c 4857602f 43283f50)
                736 "*(Bp.p">t=5XQBdU48@'\+. Z8$!1cv?" (2a284270 2e70223e 743d3558 51426455 34384027 5c2b2e5f 5a382421 3163763f)
offset 0x02e0
offset 0x0300
                768 "|n}SR;^->+n5f}taf5U=$f=po|FBG/L%" (7c6e7d53 523b5e2d 3e2b6e35 667d7461 6635553d 24663d70 6f7c4642 472f4c25)
                800 ""<8*"7/yNR |DW|Sqamv\k]3i1bV0-Zl" (223c382a 22372f79 4e52207c 44577c53 67616d76 5c6b5d33 69316256 4f2d5a6c)
offset 0x0320
offset 0x0340
                832 "dBogZ&1 7L6f6s.F"VNC08..mD1*?40V" (64426f67 5a263120 374c3666 36732e46 22564e43 4f382e2e 6d44312a 3f344f56)
offset 0x0360
                864 "w%?ODQ&imX}W:e}c(9\]tN+`p+66Wi!l" (77253f4f 44512669 6d587d57 3a657d63 28395c5d 744e2b60 702b3636 5769216c)
                896 "Su, cHdCRXx>.0/QK$mFqy6~b#.}?B2" (53752c20 63486443 5258783e 2e4f2f51 514b246d 46677936 7e62232e 7d3f4232)
offset 0x0380
offset 0x03a0
                928 "QnYH&:.l&xvoho58(I`h*U~`;|rt`+W}" (516e5948 263a2e6c 2678766f 686f3538 28496068 2a557e60 3b7c7274 602b577d)
offset 0x03c0
                960 "6J**<hVYXQ0(]wa<bV7JwP[-U{yd F<A" (364a2a2a 3c685659 58513028 5d77613c 6256374a 77505b2d 557b7964 20463c41)
                992 "I=FaNDTK7FP-P{qJMjYfkbnnVH- J3qn" (493d4661 4e44544b 3746502d 507b714a 4d6a5966 6b626e6e 56482d5f 4a33716e)
offset 0x03e0
```

pattern=gobbledegook



```
0 "agens fever APPLICATORY indignan" (6167656e 73206665 76657220 4150504c 49434154 4f525920 696e6469 676e616e)
offset 0x0000
offset 0x0020
                 32 "t bacoro anamnestic ADVERTENCE W" (74206261 636f726f 20616e61 6d6e6573 74696320 41445645 5254454e 43452057)
                 64 "EBSTER weighed DELEGATE ail radi" (45425354 45522077 65696768 65642044 454c4547 41544520 61696c20 72616469)
offset 0x0040
                 96 "ant ANGLOMANIAC publicity fixus " (616e7420 414e474c 4f4d414e 49414320 7075636c 60636074 70306660 70757330
offset 0x0060
                128 "alouer reality arma satiety aumo" (616c6f75 65722072 65616c69 74792
offset 0x0080
                                                                                             Randomly selected words from
offset 0x00a0
                160 "snier isotropic Seeley actinism " (736e6965 72206973 6f74726f 70696
                192 "hatched addicere extrinsically p" (68617463 68656420 61646469 63657
offset 0x00c0
                                                                                                 Webster's 1913 dictionary.
                224 "arlance fell aquiline passed ant" (61726c61 6e636520 66656c6c 20617
offset 0x00e0
offset 0x0100
                عور 256 "iquarian rot AGGRANDIZER AFTERBI" (69717561 7269616e 20726f74 عود 256 "iquarian rot AGGRANDIZER AFTERBI"
                                                                                            (fixed degree of compressibility)
offset 0x0120
                288 "RTH ANALYTICS yearly occultation" (52544820 414e414c 5954492
offset 0x0140
                320 " nathra Notwithstanding discrimi" (206e6174 68726120
                352 "nate CHAMBER mongst tacitly prom" (6e617465 20
offset 0x0160
                                                                             424552 206d6f6e 67737420 74616369 746c7920 70726f6d)
offset 0x0180
                384 "inences ambulacral designs avail" (696e656
                                                                     (320 616d6275 6c616372 616c2064 65736967 6e732061 7661696c)
                416 " aberrating Argillaceous making " 1200 5 72726174 696e6720 41726769 6c6c6163 656f7573 206d616b 696e6720)
offset 0x01a0
                448 "prose apostele tro ALLODIARY bord 70726f73 65206170 6f737465 6c652074 726f2041 4c4c4f44 49415259 20626f77) 480 "lines malonyl exists Per bases a" (6c696e65 73206d61 6c6f6e79 6c206578 69737473 20506572 20626173 65732061)
offset 0x01c0
offset 0x01e0
                512 "cuminate ciere legumes necessary" (63756d69 6e617465 20636965 7265206c 6567756d 6573206e 65636573 73617279)
offset 0x0200
offset 0x0220
                544 " onward Bombax APPLY exploit sym" (206f6e77 61726420 426f6d62 61782041 50504c59 20657870 6c6f6974 2073796d)
offset 0x0240
                576 "pathy ANGELICALNESS ALGAROBA gai" (70617468 7920414e 47454c49 43414c4e 45535320 414c4741 524f4241 20676169)
offset 0x0260
                608 "ning Alpes ACTIVITY buoyancy wit" (6e696e67 20416c70 65732041 43544956 49545920 62756f79 616e6379 20776974)
offset 0x0280
                640 "her filaments Blackfeet opponent" (68657220 66696c61 6d656e74 7320426c 61636b66 65657420 6f70706f 6e656e74)
offset 0x02a0
                672 "s footing cannon anai APTLY arge" (7320666f 6f74696e 67206361 6e6e6f6e 20616e61 69204150 544c5920 61726765)
offset 0x02c0
                704 "ntic ALLUSION appropringuatus apo" (6e746963 20414c4c 5553494f 4e206170 70726f70 696e7175 61747573 2061706f)
offset 0x02e0
                736 "stel ARCHIEPISCOPATE AGGLOMERATE" (7374656c 20415243 48494550 4953434f 50415445 20414747 4c4f4d45 52415445)
offset 0x0300
                768 "D nightingale aphol ACCUSTOMABLE" (44206e69 67687469 6e67616c 65206170 686f6c20 41434355 53544f4d 41424c45)
offset 0x0320
                800 " law centripetal AMIABLE rin AMN" (206c6177 2063656e 74726970 6574616c 20414d49 41424c45 2072696e 20414d4e)
offset 0x0340
                832 "ESIA yardarm deserving jure argu" (45534941 20796172 6461726d 20646573 65727669 6e67206a 75726520 61726775)
offset 0x0360
                864 "mentatio Num flushed Abas APRICA" (6d656e74 6174696f 204e756d 20666c75 73686564 20416261 73204150 52494341)
offset 0x0380
                896 "TION AFFLUENTLY old affected Hud" (54494f4e 20414646 4c55454e 544c5920 6f6c6420 61666665 63746564 20487564)
offset 0x03a0
                928 "ibras ACROTISM ARAEOSYSTYLE Gall" (69627261 73204143 524f5449 534d2041 5241454f 53595354 594c4520 47616c6c)
offset 0x03c0
                960 "icism PEAR ACHIEVEMENT reclining" (69636973 6d205045 41522041 43484945 56454d45 4e542072 65636c69 6e696e67)
                992 " mechanism Amalgamating cooperat" (206d6563 68616e69 736d2041 6d616c67 616d6174 696e6720 636f6f70 65726174)
offset 0x03e0
```

Random workload "hot zone"



- The random_steady and random_independent iosequencer types support optional "hot zone" parameter settings
 - hot_zone_size_bytes = "1 GiB"
 - KiB/MiB/GiB/TiB suffixes OK.
- The random I/O "hot zone" receives a specified fraction of all I/Os.
 - The hot zone fraction of I/Os is a number from 0.0 to 1.0 or from 0% to 100%.
 - If neither of hot_zone_read_fraction nor hot_zone_write_fraction are specified, then the value of hot_zone_IOPS_fraction is applied to both reads and writes.

"hot zone" I/O patterns and queue depth



- The purpose of the random workload "hot zone" is to be able to use a single set of concurrent I/O "tags" (i.e. an ivy "workload") to force an otherwise random location distribution to put a certain number of I/Os into the "hot zone".
- This is an open-loop method of achieving a target subsystem cache hit ratio with a perfectly even random distribution.
- I/Os are random within the "hot zone" and random within the remaining extent, all of which are within the "LUN coverage" parameter settings.

"hot zone" notes



- The value the user specifies for hot_zone_size_bytes is rounded up to the next higher multiple of the blocksize parameter value.
- The "hot zone" starts at the beginning of the LUN coverage area specified by RangeStart (default 0%) and RangeEnd (default 100%) expressed as a percentage of the way from the beginning to the end of the LUN.
- The "hot zone" is designed to service hot zone hits as well as non-hot zone misses with the same set of tags, that is, within the same ivy workload. There is no separate reporting of the hot zone as the csv files are by workload.

Statements - [DeleteWorkload]



- [DeleteWorkload] "r steady" [select] "LDEV : 00:04";
- [DeleteWorkload] "r_steady";
 - Deletes all instances of the r_steady workload on all test hosts / all LUNS.
- [DeleteWorkload];
 - Deletes all workloads. (All workloads are automatically deleted when ivy ends.)

Workload parameter - "skew" or "skew_weight"



- The "skew" or "skew_weight" (use either name) parameter must be set to a non-zero number, defaulting to -1.0,
- Skew is used for two distinct purposes:
 - 1. With "Edit Rollup", skew governs the distribution of a fixed total_IOPS value across LUNs and the workloads on those LUNs.
 - Works identically whether skew is positive or negative.
 - Total_IOPS value is first evenly distributed over LUNs, and then within the LUN proportional to each workload's skew value.
 - 2. Where there are multiple IOPS=max workloads on a LUN, a positive skew value for a workload causes the ratio of the IOPS of each positive-skew with IOPS=max workload to be proportional to that workload's positive skew value.
 - If an IOPS=max workload has a negative skew, it will run independently without reference to any other IOPS=max workloads.

Skew example with Edit Rollup & total IOPS



```
[hosts] "sun159" [select] %% { "serial number" : 83011441 } %%;
                                                              "skew" not specified,
[CreateWorkload] "r steady"
                                                                defaults to -1.0
          [select]
          [iogenerator] "random steady"
          [parameters] %% blocksize=4KiB, maxtags=1, fractionread=0.5,
                          RangeStart=0.0, RangeEnd=0.5 %%;
[CreateWorkload] "r independent"
          [select]
          [iogenerator] "random independent"
          [parameters] %% blocksize=4KiB, maxtags=1, fractionread=0.5,
                          RangeStart=0.5, RangeEnd=1.0,
                          skew = 2 %%:---
                                                                   "skew" specified
                                                                       as 2.0
[edit rollup] "all=all" [parameters] "total IOPS=1000";
[Go] "stepname=step eh, measure seconds = 30";
```

total_IOPS is first divided by the number of LUNs on all hosts behind the "all=all" rollup, then the IOPS per LUN is divided up in the ratio to 1 part r_steady to 2 parts r_independent.

Skew example with IOPS=max



```
[hosts] "sun159" [select] %% { "serial number" : 83011441 } %%;
[CreateWorkload] "r steady"
                                               "skew" = 1
          [select]
          [iogenerator] "random steady"
          [parameters] %% IOPS=max, skew = 1, blocksize=4KiB, maxtags=8, fractionread=0.5,
                          RangeStart=0.0, RangeEnd=0.5 %%;
[CreateWorkload] "r independent"
                                               "skew" = 2
          [select]
          [iogenerator] "random independent"
          [parameters] %% IOPS=max, skew = 2, blocksize=4KiB, maxtags=1, fractionread=0.5,
                          RangeStart=0.5, RangeEnd=1.0 %%;
[Go] __"stepname=step eh, measure seconds = 30";
```

One third of the IOPS will come from the workload with skew=1, and two thirds will come from the workload with skew=2

Statements - [CreateRollup]



- [CreateRollup] "Serial Number+Port";
- [CreateRollup] "host" [nocsv] [quantity] 8 [MaxDroop] "25%";
- A rollup is a grouping of all workload threads by value of a LUN attribute or a combination of LUN attributes.
- Every workload thread belongs to exactly one instance of each rollup.
- There is always an "all" rollup which only has one instance "all".
- [nocsv], [quantity], [MaxDroop] are optional, but if they appear they must be in that order
- To get individual data for each workload thread, say "workloadID " which is comprised of "host + LUN name + workload".

You make rollups for four reasons



- To get an output csv file with a csv folder by rollup type (e.g. Port+CLPR) and csv files by rollup instance (e.g. Port+CLPR = 1A+CLPR0)
 - This is how you get custom "sliced & diced" data.
- 2. To perform dynamic feedback control (dfc=PID) at the granularity of the rollup instance.
- 3. To identify a valid measurement period at the granularity of the rollup instance using measure=on.
- 4. To validate the test configuration as operating correctly
 - E.g. test that the number of ports reporting was what you expected
 - E.g. validate that no one port had an IOPS too far below the highest IOPS seen on any port.

Rollups are key to how the ivy engine works



- [CreateRollup] "Serial Number+Port";
 - Both Serial Number and Port must be valid LUN header attributes, or built-in layers on top of those attributes
- Then for all existing WorkloadIDs, we build a data structure that looks like this

```
"serial_number+Port"
- "410123+1A" The rollup type
- "sun159+/dev/sdd+workload_name", "cb28+/dev/sdd+workload_name",
- "410321+1A" The rollup instance. It's the rollup instance that has the rolled up data.
- "sun159+/dev/sdf+workload_name", "cb28+/dev/sdf+workload_name"
- "host"
- "sun159"
- "sun159"
- "sun159+/dev/sdd+workload_name", "sun159+/dev/sdf+workload_name"
- "cb28"
- "cb28+/dev/sdd+workload_name", "cb28+/dev/sdf+workload_name"
```

Every WorkloadID appears exactly once in each rollup type

[CreateRollup] combines LUN attribute names



- If you would like to see a rollup instance for each unique LDEV across two or more subsystems, make "serial number+LDEV".
- [nocsv] prevents csv files from being created.
- The [quantity] <int expression> clause can enforce that the right number of distinct rollup instances are reporting in this rollup.
 - If not, even if the DFC reports "success" and designates a subinterval subsequence representing a successful measurement, no measurement rollup csv data will be produced – instead error msg.
 - Make a rollup by "port" and use the [quantity] rollup to validate you have the number of paths
 you think you have.
- [MaxDroop] <double expression>
 - "25%" means invalidate test if any one rollup instance has an average IOPS more then 25% below the highest average IOPS over all rollup instances.

[DeleteRollup]



- [DeleteRollup] "serial number+Port";
- [DeleteRollup] ;
 - Deletes all rollups except the "all" rollup.

[EditRollup]



- [EditRollup]
 "serial_number+Port = { 410123+1A, 410123+2A }"
 [parameters] "fractionRead = 100%";
- The [EditRollup] statement operates in between test steps while the workload threads are in "waiting for command" state.
- It gives you access to the same mechanism used by Dynamic Feedback Control to send out real time parameter updates to running workload threads.
- You specify a set of rollup instances to send to, such as "all=all", or "Port={1A, 3A, 5A, 7A}" and you specify the text [parameters] string to send to the remote iosequencer to parse and apply.

[EditRollup]



- [EditRollup] is typically used at the top of a do-loop, to change whatever parameters vary by loop pass.
- Use [EditRollup] "all=all" to send to all workload threads.
- There is a special parameter name that is only recognized by [EditRollup] total_IOPS - where the numeric value you specify is first evenly divided amongst all test LUNs, and then within each LUN, proportional to the absolute value of each workload's skew parameter before being sent out as IOPS=xxx to each workload.
 - [EditRollup] "all=all" [parameters] "total_IOPS = 1000000";

[EditRollup] attributes names containing spaces



- Many attributes names contain spaces, like "serial number".
- Inside the ivy engine, when making rollups, these attribute names are "normalized"
 - All alphabetic characters A-Z are converted to lower case a-z.
 - All sequences of one or more non-alphanumeric characters (not A-Z, not a-z, not 0-9) are replaced with a single underscore _.
- When creating, deleting, or editing rollups with attribute names containing spaces, you can either put quotes around the attribute combo name, like

```
[EditRollup] %% "Serial Number+Port" = { 410123+1A, 410123+2A } %% ...
```

or else to avoid using quotes, you can spell the attribute names using underscores instead of spaces and special characters. Once the attribute names haves been normalized, these are equivalent.

```
[EditRollup] %% Serial Number+Port = { 410123+1A, 410123+2A } %% ...
```


Statement - [Go]



- [Go] "stepname = random4K, subinterval_seconds = 5, ..."
- The [Go] statement starts the workload threads running a "test step", which is a sequence of "subintervals" each of a duration specified in the subinterval_seconds parameter, defaulting to 5 seconds.
 - If you have a case for using ivy to measure a restricted set of things much more frequently, we can talk about putting in support.
 - Most of the time 5 seconds is plenty short and if you are going to be doing any tests
 that will run for hours you may want to consider a longer subinterval just to mercifully
 cut down on the size of the csv files by subinterval.
 - Sometimes when you say you want an answer to +/- 1% and the behaviour is a bit noisy, it can take time to see enough to say you are sufficiently confident statistically. (Did you say you wanted "valid" data?)

Test step = warmup, measure, cooldown



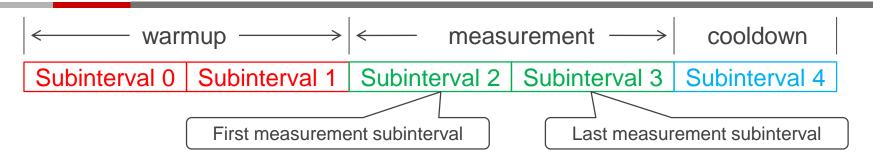

- There must be at least one warmup, one measurement, and one cooldown subinterval.
- Parameter defaults
 - warmup_seconds defaults to the value of subinterval_seconds, which itself defaults to 5 seconds.
 warmup_seconds is divided by subinterval_seconds, and rounded up to get the (minimum) number of warmup subintervals.
 - measure seconds = 60 also rounded up to the minimum number of measurement subintervals.
 - cooldown_by_wp = on If a command device is available for the subsystem under test, the cooldown period is extended until write pending is below subsystem WP threshold which defaults to 1.5%.
 - cooldown_by_MP_busy = on If a command device is available for the subsystem under test, the cooldown period is extended until average subsystem MP_core % busy is below subsystem_busy_threshold which defaults to 5%.
 © Hitachi Vantara 2019. All rights reserved.

MM:SS or HH:MM:SS are OK



■ For warmup_seconds, measure_seconds, and also for a parameter we haven't discussed yet, for timeout_seconds, it's OK to specify a value as a character string in double quotes like "10:00" meaning 10 minutes, or "10:00:00" meaning 10 hours.

Sequential fill



To ensure that a test step runs at least until all sequential write threads have wrapped around and have written to all possible blocks:

```
[Go!] " ... sequential fill = on ... ";
```

- At the point where a successful measurement (of either fixed or variable duration) would have been declared, with sequential_fill=on the measurement period is automatically extended from then until sequential fill is complete.
- Sequential fill progress is 40.46% after 0:02:51. Estimated remaining 0:04:11 to complete fill at 2017-04-22 11:24:19.

For each test step you get:



- A subfolder of the overall test output folder that contains the csv files with one line for each subinterval in that test step. (suppress this with -no stepcsv.)
 - Nested subfolders for each workload data rollup
 - Containing a csv file for each rollup instance, with one line per subinterval.
 - For internal Hitachi lab use with command device connector and license key, a nested subfolder with raw RAID_subsystem RMLIB API data. (Suppress with -no_storcsv.)
 - Collected time-synchronized "just before" the end of each subinterval.
- A single line in the overall test results "summary.csv" files.
 - In ivy terminology, this is called a "measurement" line, which represents the rollup from the first to last measurement subintervals.
 - Unless "measure=on" with specified accuracy timed out then you get an error message line

cooldown by wp & cooldown by MP busy



- These are available for Hitachi internal lab use with a command device connector and license key. The command device connector is not part of the ivy open source project.
- During the first cooldown subinterval, ivy keeps driving I/O so as to ensure the measurement period is a clean "mid stream sample" due to possible time jitter between test hosts.
- When cooldown_by_wp and/or cooldown_by_MP_busy are being used, additional cooldown subintervals run at IOPS=0 until Write Pending is empty, and/or subsystem MP % busy has dropped below the threshold, respectively.
- Defaults: cooldown_by_wp = on and subsystem_WP_threshold = 1.5%
 - Set cooldown_by_wp = off
 - When it is valid to carry forward dirty data in cache (Write Pending) from one test step to the next.
 - This can speed up the next test step tremendously if the next step doesn't stabilize until WP is full, AND if both steps place the SAME things into WP that destage to the SAME place.
- Defaults: cooldown by MP busy = on and subsystem busy threshold = 5%
 - This extends cooldown until any residual subsystem microprocessor activity has ended.
 - cooldown_by_MP_busy_stay_down_time_seconds (default one subinterval) specifies how long MP busy must remain below the threshold. Can be specified as "1:00" meaning a minute.

suppress perf = on



- With a command device (Hitachi lab use only), this suppresses collecting performance data from the subsystem only while ivy is driving I/O.
- This can be useful if every subsystem port is being driven intensively, and thus would interfere with communicating with the command device, which is on one of the ports.
- When used with cooldown_by_wp or cooldown_by_MP_busy, after the first cooldown subinterval while I/O is still being driven, during subsequent subintervals at IOPS=0, even with suppress_perf=on, collection of performance data from the subsystem resumes to provide the necessary Write Pending % and subsystem MP % busy information to support the cooldown_by_wp and cooldown_by_MP_busy features.
- The -suppress_perf ivy command line option sets the default [Go] statement suppress perf parameter to "on" instead of "off".

$$skip LDEV = on$$



- For Hitachi internal lab use with a command device, this [Go] statement parameter will suppress collection of LDEV and PG performance data.
- This can reduce the amount of communication with the subsystem required, if the command device LUN is on the same port as very-heavily driven data LUNs.
- This still lets you do dynamic feedback control on other metrics such as subsystem MP % busy.
- The -skip_LDEV ivy command line option sets the [Go] statement default skip_LDEV parameter value to "on" instead of "off".

check failed component = on / off



- For Hitachi internal lab use with a command device, this [Go] statement parameter controls whether ivy checks the subsystem for a failed component.
- With check_failed_component = on, as each [Go] statement is executed, a check for a failed subsystem component is made immediately before I/O starts to be driven, and also immediately after the subinterval sequence is done and before csv files are printed. Ivy aborts when one of these checks detects a failed subsystem component.
- The default is check_failed_component = on, except if the command line parameter -no_check_failed_component is used, which sets the default for check_failed_component to off.

The default [Go] statement



- Useful when you are developing an ivyscript workflow and you just want to see quick sample csv files.
 - Default subinterval_seconds = 5
 - warmup seconds defaults to the value of subinterval seconds.
 - Default measure_seconds = 60
 - Runs at least one cooldown subinterval.
 - Defaults cooldown_by_wp = "on" and subsystem_WP_threshold=1.5%
 - If you have a command device and the proprietary command device connector software, continuing more cooldown subintervals until WP is below threshold.
 - Defaults cooldown_by_MP_busy="on" and subsystem_busy_threshold=5%
 - If you have a command device and the proprietary command device connector software, continuing more cooldown subintervals until MP_core % busy is below the threshold.

stepname



- On the [Go] statement to start a test step, you can optionally specify "stepname=", which defaults to "step" followed by a four digit step number starting with 0000, so the default name for the first step is step0000.
- Giving a test step a meaningful name is useful when looking at overall measurement summary csv files, where you get one csv line for each test step.
- Those labels are handy when making Excel charts, as you can use the stepname column as the series name on a chart.

measure shorthand



- The ivy engine was designed to offer the user access to its mechanisms for flexibility.
- To make things easier for the user that only needs to measure on things like "overall service time", some shorthand settings were added.
- Using the shorthand, you don't need to know about the ivy internal mechanisms.
- The next two charts show you the shorthand settings, but the remainder of this presentation discusses the detailed settings that the shorthand settings stand for.

measure shorthand



measure = MB per second

is short for

- measure=on, focus_rollup=all, source=workload, category=overall, accumulator type=bytes transferred, accessor=sum
- measure = IOPS

is short for

- measure=on, focus_rollup=all, source=workload, category=overall, accumulator type=bytes transferred, accessor=count
- measure = service_time_seconds is short for
 - measure=on, focus_rollup=all, source=workload, category=overall, accumulator_type=service_time, accessor=avg
- measure = response_time_seconds is short for
 - measure=on, focus_rollup=all, source=workload, category=overall, accumulator type=response time, accessor=avg

measure shorthand - with command device



- measure = MP core busy percent is short for
 - measure=on, focus_rollup=all, source=RAID_subsystem, subsystem_element=MP_core, element_metric=busy_percent
- measure = PG_busy_percent is short for
 - measure=on, focus_rollup=all, source=RAID_subsystem, subsystem_element=PG, element_metric=busy_percent
- measure = CLPR WP percent is short for
 - measure=on, focus_rollup=all, source=RAID_subsystem, subsystem_element=CLPR, element_metric=WP_percent

[Go] "focus metric"



- If you want to run a fixed workload for a fixed number of subintervals, all you need is measure seconds.
- Otherwise, we need to specify the "focus metric".
 - 1. The focus metric is what we are making a valid measurement of using measure and accuracy_plus_minus.
 - Measure the focus metric to a required plus/minus accuracy with a specified % confidence level.
 - 2. When dynamically adjusting total_IOPS using the PID loop dynamic feedback controller (dfc=pid), the focus metric is the "feedback" in dynamic feedback control.

Granularity of the "focus metric"



- When measure and/or dfc = pid are used, measurement or PID loop DFC is performed at the granularity of each instance of the focus_rollup.
- For the default, focus_rollup = all, the measurement or DFC is at the overall level.
- When a focus rollup is used that has multiple rollup instances,
 - With measure, a successful measurement identifies a subsequence of subintervals where for every rollup instance within the focus_rollup, the measurement is valid for that rollup instance.
 - When dfc=pid is used, dynamic feedback control is performed independently for each rollup instance in the focus_rollup.

source of the focus metric (without shorthand)



- source = workload
 - Specifies that we are selecting a focus metric from data collected by ivy workload threads on test hosts.
 - We always have rollup data from test host workload threads (more next page)
- source = RAID_subsystem
 - Requires the proprietary command device connector that is not part of the ivy open source project.
 - Specifies that we are selecting the focus metric from real time performance data collected from a command device.
 - There's a small list of subsystem metrics specified in an ivy source code table that are filtered and rolled up from the raw bulk RMLIB data by rollup instance, and from which you select the focus metric. (more even later after we explain source=workload)

Selecting a "source=workload" metric



- category =
 - overall, read, write, random, sequential,
 random_read, random_write, sequential_read, sequential_write
- accumulator_type =
 - bytes_transferred, service_time, response_time
- accessor =
 - avg, count, min, max, sum, variance, standardDeviation
- It will be easier to explain first accessor then category, then accumulator type

Accumulators and "accessor" (without shorthand)



- An accumulator is an object that you push numbers into in order to be able to compute summary values.
- Every time that an I/O completes, ivy posts the service time into one accumulator, the bytes transferred into another accumulator, and if we are not running IOPS=max, it posts the response time into another accumulator.
- The selectable values for "accessor" are the names of the methods that you can use to retrieve something from an accumulator
 - avg, count, min, max, sum, variance, standardDeviation
 - avg gives you the average of the numbers that were pushed in the accumulator
 - count gives you how many numbers were pushed in.
 - Et cetera.

Attributes of individual I/Os:



- read vs. write
- blocksize
- LBA
 - Logical Block Address = sector number from 0 within LUN
- service_time (in seconds)
 - The duration from when ivy launched an I/O until ivy received the notification that the I/O was complete.
- response_time* (in seconds) (analogue to application-level response time)
 - The duration from the scheduled start time of an I/O until the time the I/O is complete.
 - An I/O may not be started at the scheduled time if there are no idle asynchronous I/O "slots" (~tags) available.
 - *only I/Os with a non-zero scheduled start time will have a response_time attribute.
 - When running iops=max, all I/Os have a scheduled start time of zero, meaning you don't get response_time

Ivy uses the Linux nanosecond resolution clock for all timing

How ivy posts results of each I/O



- Based on the attributes of each I/O, an accumulator category is selected.
 - Then the I/O is posted into the selected category "bucket" (into two or three accumulators in that bucket – more in a moment.)
- Currently, the breakdown for the array of categories for which there are accumulators are
 - read vs. write
 - random vs. sequential (The I/O sequencer tells you if it's a random or sequential sequencer.)
 - For each of those 4 there is a further breakdown as a histogram by service time and by response time
 - You see the histograms in the csv files.
 - Ivy doesn't currently expose the histogram in the PID loop, but if there is interest it can be added.

Other category breakdowns could be defined



- The rollup mechanism operates on a view of the categories as an array, and is blind to the significance of each position in the array.
 - It is easy to define a different mapping from the attributes of an individual I/O to the category bucket the I/O will be recorded in.

Future:

- We could just as easily define a histogram of a 100 buckets by LBA range we could break out the data by each 1% of the LBA range across the volume.
 - If we had an I/O sequencer that was playing back a customer I/O trace, we could show if workload characteristics were different in different areas of the LUN.
 - If we simply run sequential transfers across the LUN, we could see the sustained data rate "staircase" showing the zones in underlying HDDs.

During rollups, the categories are preserved



- For the all=all rollup instance, you still have all the category breakdowns.
- Then in addition to the category bucket array, there are virtual categories, implemented as functions, which rollup underlying category buckets.
 - overall sum over all categories in the bucket array
 - read, write
 - random, sequential
 - random_read, random_write, sequential_read, sequential_write
- You can see these virtual category rollups in column groups in ivy csv files.

source=workload available category values



- overall
 read, write
 random, sequential
 random read, random write, sequential read, sequential write
- These are actually the virtual categories, representing the rollup over the underlying service time / response time bucket arrays (histograms).
 - If there is a need, we could provide access to the more fine-grained underlying category bucket array, or we could define other virtual categories as aggregations of the buckets.

source=workload - selecting accumulator



- Category buckets have 3 accumulators
- accumulator_type = bytes_transferred
 - For every I/O, the blocksize is posted to bytes_transferred.
 - Use sum attribute and divide by elapsed seconds to get bytes per second. Use count instead and get IOPS.
- accumulator_type = service_time
 - For every I/O the duration from when ivy started it to when it completed.
 - service time and response time values for I/Os are posted in units of seconds, with nanosecond resolution.
 - Use "avg" and multiply by 1000 to get average service time in ms.
- accumulator_type = response_time (~ application response time)
 - Only posted for those I/Os that have a non-zero "scheduled time".
 - Duration from scheduled time to I/O completion time.
 - The I/O sequencer computes the scheduled time, and when that time is reached, the I/O is started if there is an idle Asynchronous I/O "slot" (~tag) available. If not, it waits.
 - For IOPS=max, I/Os have a scheduled time of 0 (zero), so then you don't get any response time events.

Summary: source=workload



- category =
 - overall, read, write, random, sequential, random_read, random_write, sequential_read, sequential_write
- accumulator_type =
 - bytes transferred, service time, response time
- accessor =
 - avg, count, min, max, sum, variance, standardDeviation

source = RAID subsystem



- Subsystem performance data is collected from a command device, and for each subsystem with a command device, there is a subfolder within the test step folder, where each csv file has one line per subinterval within that test step.
 - You cannot select the focus metric from this raw, bulk subsystem performance data.
- A small subset of metrics are extracted from the bulk subsystem data, and filtered and summarized by rollup instance
 - 1. To serve as candidates for selection as the focus metric
 - 2. To be printed as columns in rollup instance csv files side-by-side with the columns of host-workload data.
- This is controlled by a table in "ivy_engine.h" in ivy source code, which has two levels that you pick
 from
 - subsystem_element, and within that, element_metric.
- For each metric in the table, you can optionally set a flag to have the value inserted a column side by side with the normal workload data for each rollup instance.

Subsystem metrics by rollup instance



- MP_core
 - busy percent, io buffers
- CLPR
 - WP percent
- PG
 - busy_percent, random_read_busy_percent, random_write_busy_percent, seq_read_busy_percent, seq write busy percent
- LDEV
 - read_service_time_ms, write_service_time_ms,
 random_blocksize_KiB, sequential_blocksize_KiB,
 random_read_IOPS, random_read_decimal_MB_per_second , random_read_blocksize_KiB,
 random_read_hit_percent,
 random_write_IOPS, random_write_decimal_MB_per_second, random_write_blocksize_KiB,
 sequential_read_IOPS, sequential_read_decimal_MB_per_second, sequential_read_blocksize_KiB,
 sequential_write_IOPS, sequential_write_decimal_MB_per_second,
 sequential_write_blocksize_KiB,

Subsystem data filtered by rollup instance



- The way this works is via a "config filter" that is prepared in advance before a subinterval sequence starts.
- For each thing you get data for, such as PG, or LDEV, or MPU, etc., the config filter has
 the set of instances of PG or LDEV or MPU names that were either
 - directly observed as a SCSI Inquiry attribute of the LUNs underlying the workloads in the rollup instance, or
 - observed as an attribute of an underlying LDEV obtained via the RMLIB API, or
 - which were inferred from static tables of relationships for the particular subsystem model.

Subsystem data by rollup instance – csv columns



We know how many drives underlie the each workload rollup Shows you if the OS / device driver are breaking up your large block application-level I/O into smaller pieces Matching subsystem vs. application data validates that both host-workload rollups and subsystem data rollups are working correctly

Subsyste Path

m service latency =

Shows you if there is delay between when the application issues the I/O and when the device driver issues the I/O.

Shows you the amount of that delay in ms.

subsyste	subsy	subsyste				V	time as %	applicati				
m avg	m avg	, avg		,	Subsyste	Subsyste	of	on minus				
LDEV	LDEV	LDEV		host	m IOPS	m MB/s	applicati	subsyste			Overall	Overall
sequenti	read_ser	write_se		decimal	as % of	as % of	on	m service		Overall	Average	Little's
al_blocks	vice_tim	vice_tim	host IOPS	MB/s per	applicati	applicati	service	time	Overall	Decimal	Blocksize	Law Avg
ize_KiB	e_ms	e_ms	per drive	drive	on IOPS	on MB/s	time	(ms)	IOPS	MB/s	(KiB)	Q
0	6.82666	0	1.90	-	98.22%	98.22%	98.69%	0.091	30	0.12288	4	0.207528
4	0	60.5501	98.30	0.40	99.99%	99.99%	99.08%	0.563	1572.9	6.4426	4	96.1246
4	50.0142	49.0471	120.70	0.50	100.43%	100.43%	99.27%	0.364	1931.98	7.91339	4	95.9223
4	41.4719	32.018	162.00	0.70	99.99%	99.99%	99.24%	0.283	2592.74	10.6199	4	95.9846
4	39.3228	3.90259	194.90	0.80	99.68%	99.68%	99.02%	0.303	3118.22	12.7722	4	96.0234
0	20.9364	0	283.10	1.20	100.51%	100.51%	98.79%	0.257	4529.76	18.5539	4	95.9988

RMLIB API candidates flagged to display



												cubaucto	subsusta	cubaucta
												subsyste	subsyste	subsyste
						subsyste		subsyste				m avg	m avg	m avg
	IOPS			test host	subsyste	m avg		m avg		subsyste		LDEV	LDEV	LDEV
	input			avg core	m	MP_core	subsyste	CLPR	subsyste	m avg PG	subsyste	random_	random_	random_
	paramet	fractionR	test host	CPU %	MP_core	busy_per	m CLPR	WP_perc	m PG	busy_per	m LDEV	read_IOP	write_IO	blocksize
maxTags	er setting	ead	cores	busy	count	cent	count	ent	count	cent	count	S	PS	_KiB
16	5	1	16	0.10%	12	2.52%	1	0%	4	1.12%	6	4.91	-	4.00
16	max	0	16	0.00%	12	5.39%	1	68.78%	4	99.83%	6	-	261.42	4.00
16	max	0.25	16	0.00%	12	5.63%	1	68.84%	4	99.82%	6	80.11	242.82	4.00
16	max	0.5	16	0.00%	12	6.06%	1	68.27%	4	99.85%	6	215.46	216.43	4.00
16	max	0.75	16	0.10%	12	6.23%	1	62.59%	4	99.80%	6	388.87	128.99	4.00
16	max	1	16	0.10%	12	4.34%	1	0.20%	4	95.16%	6	758.77	-	4.00

- The "subsystem" columns are automatically generated according to the focus metric RMLIB API candidate table.
- As raw data comes in for each MP_core, CLPR, PG, LDEV, etc., ivy filters the data to aggregate for each rollup only the data for the MP_cores, etc. that map to LDEVs/LUNs underlying workloads in that rollup.
- Make a rollup by MPU, and each MPU rollup instance will show data for 4 MP_cores.

Examples of data for each rollup – drive / PG type



									IOPS	
									input	
Rollup	Rollup		drive	RAID		iogenerator			paramet	fraction
Туре	Instance	drive type	quantity	level	PG layout	type	blocksize	maxTags	er setting	Read
all	all	DKR2E-H4R0SS+DKR5D-J600SS	8+8=16	RAID-5	3+1	random_steady	4 KiB	16	5	1
all	all	DKR2E-H4R0SS+DKR5D-J600SS	8+8=16	RAID-5	3+1	random_steady	4 KiB	16	max	0
all	all	DKR2E-H4R0SS+DKR5D-J600SS	8+8=16	RAID-5	3+1	random_steady	4 KiB	16	max	0.25
all	all	DKR2E-H4R0SS+DKR5D-J600SS	8+8=16	RAID-5	3+1	random_steady	4 KiB	16	max	0.5
all	all	DKR2E-H4R0SS+DKR5D-J600SS	8+8=16	RAID-5	3+1	random_steady	4 KiB	16	max	0.75
all	all	DKR2E-H4R0SS+DKR5D-J600SS	8+8=16	RAID-5	3+1	random_steady	4 KiB	16	max	1

- Information comes from RMLIB API configuration data, filtered / aggregated for each rollup instance.
- (There are also dedicated csv folders that contain detailed RMLIB API subsystem configuration and performance data csv files.)

Now that we know how to specify the focus metric



- We will look at
 - The [go] statement measure=on option and its subparameters
 - Specifying measure=on on a Go statement means "watch the focus metric and when you have seen enough to make a measurement of the specified accuracy, stop. Timeout if it takes too long."
 - The [go] statement dfc=pid option and its subparameters
 - If you don't specify a dfc, the workload settings remain constant through the test.
 - If you specify a dfc (dynamic feedback controller), it gets called at the end of every subinterval once all the rollups are done.
 - The DFC looks at what has happened so far, looking at all workload data and all subsystem data, and then may use the ivy engine real time edit rollup mechanism to send out parameter updates to rollup instances (to the workload threads belonging to the rollup instance).

measure = on



- accuracy plus minus = 5%
 - Any numeric value with an optional trailing % sign maybe specified.
- confidence = 95%
 - How confident you need to be that your measurement falls within the specified plus or minus range around the long term average that you would get measuring forever.
 - Default is 95%
 - Ivy has a menu of 11 specific pre-loaded confidence values that you pick from.
 - 50%, 60%, 70%, 80%, 90%, 95%, 98%, 99%, 99.5%, 99.8%, and 99.9%
 - http://en.wikipedia.org/wiki/Student%27s_t-distribution

measure Write Pending-based stability criteria




- max wp = 2% default 100%
 - A subinterval sequence will be rejected if WP is above the limit at any point in the sequence.
 - Set this to "1%' or so for read tests to ensure WP is empty during the test.
- min_wp = 67% default 0%
 - A subinterval sequence will be rejected if WP is below the limit at any point in the sequence.
 - Use this for write tests to ensure WP is full during the test.
- max wp change = 3% default 3%
 - A subinterval sequence will be rejected if WP varies up and down by more than the specified (absolute) amount at any point in the sequence. max_wp_range="3%" matches from 0% to 3% Write Pending, as well as from 67% to 70% Write Pending. (not a percent OF the WP value)
 - Use this in general all the time so you reject periods with major movement in Write Pending.

dfc=pid dynamically adjusts total IOPS




See separate presentation "ivy adaptive PID".

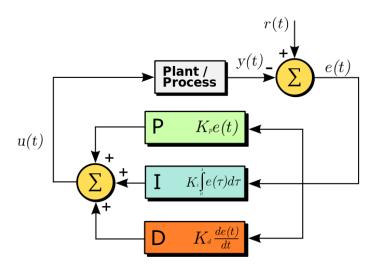




- Normally, each ivy "step" runs a subinterval sequence to make one measurement, and then pauses for a very brief time to write csv files before the next step.
- DFC = IOPS_staircase is used to make a series of "IOPS staircase step" measurements in one unbroken series of subintervals, continuously driving I/O.

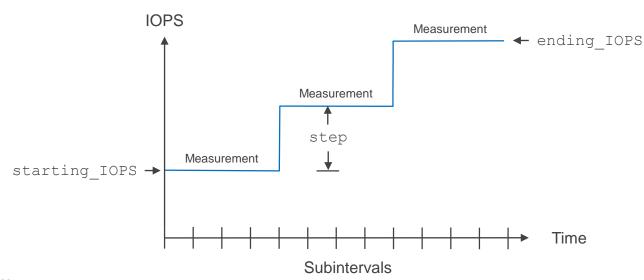




- Each measurement is comprised of zero or more warmup subintervals (warmup_seconds) and one or more measurement subintervals (measure_seconds).
- The measure feature can be used with DFC=IOPS_staircase, in which case the duration of each step on the staircase is variable, and warmup_seconds & measure_seconds become minimums.

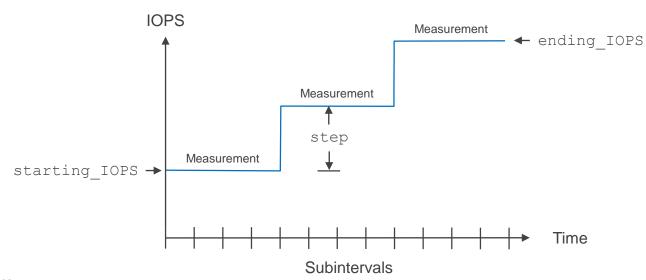




- Use starting IOPS, ending IOPS and steps, and that many equal height steps are made (shown below).
- Use step="+50%" to increase the IOPS by 50% on each step.
- You can provide both step (size of step) and steps (number of steps) instead of ending_IOPS.
- If "ending IOPS" is not provided, staircase steps continue until the requested IOPS can no longer be attained.

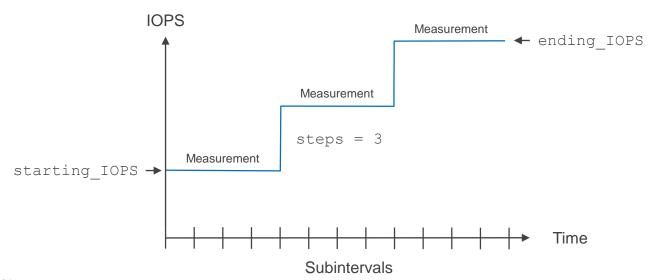



 cooldown_by_WP and cooldown_by_MP_busy only apply at the end of the test step, that is, after the last measurement in the staircase.

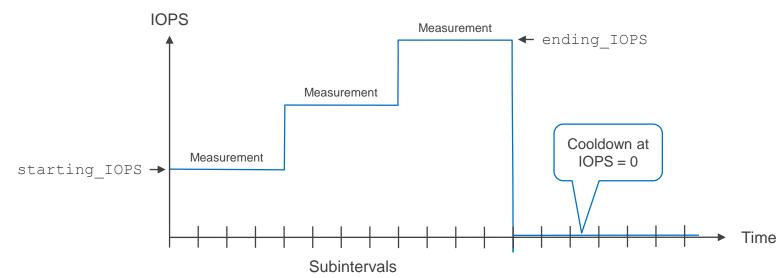



starting IOPS = nnn, etc. are values used with

```
[EditRollup] "all=all" [parameters] "total IOPS = nnn";
```

- With edit rollup "total_IOPS", the total IOPS value is first distributed evenly over all test
 host LUNs that have workloads defined. These are called "test LUNs".
- Then within each test LUN, its share of total_IOPS is divided up between the workloads on that LUN proportional to the absolute value of the skew parameter of each workload. The resulting value is set as the IOPS for the workload.
 - skew defaults to -1.0. The negative value means "don't apply this skew with IOPS=max".
- One of the implications of this is that with DFC=IOPS_staircase, there can be no workloads running at IOPS=max. Every workload gets a share of the total_IOPS setting.

[Go] parameter summary with defaults 1/2



Overall

- stepname = stepNNNN
- subintervalseconds = 5
- warmup count = 1
- measure count = 1
- cooldown by wp = on
- subsystem WP threshold = 1.5%
- cooldown by MP busy = on
- subsystem_busy_threshold = 5%

• For dfc = pid

- low_IOPS, low_target,
 high_IOPS, high_target,
 target value
- max_ripple,gain_step,
 max monotone, ballpark seconds

- For DFC = IOPS staircase
 - starting IOPS
 - ending IOPS
 - step
 - steps
- For measure = on
 - accuracy plus minus = 2%
 - confidence = 95%
 - 50%, 60%, 70%, 80%, 90%, 95%, 98%, 99%, 99.5%, 99.8%, **or** 99.9%
 - max wp = 100%
 - min wp = 0%
 - max_wp_change = 3%

[Go] parameter summary with defaults 2/2



Focus metric

```
- focus rollup = all
- source = ""

    or workload / RAID subsystem

- subsystem element = ""
- element metric = ""
- category = overall
  - Or read, write, random,
     sequential, random read,
     random write, sequential read,
     sequential write
- accumulator type = ""
  - or bytes transferred,
     service time, response time
- accessor = ""
  - avg, count, min, max, sum,
     variance, standardDeviation
```

A general note on ivy parameter names



- Ivy "normalizes" all user-specified parameter names by converting to lower case and removing underscore _ characters
 - For example, maxTags may also be written max_tags or MAXTAGS.
- You can also say [create workload] instead of [CreateWorkload].





The remainer of this presentation is a draft section describing dedupe=target_spread

Original serpentine dedupe method



- The serpentine method writes and average of "dedupe" copies of each new unique data pattern, writes these at the same time regardless of the location being written to.
- When writing / filling sequentially, the achieved dedupe ratio is "dedupe".
- When subsequently writing new patterns randomly, each copy goes to a new random location, possibly over-writing one copy of a previous pattern, causing the achieved dedupe ratio to fall over time to an asymptotic limit.

serpentine method, continued



- The serpentine asymptotic dedupe ratio (target dedupe ratio = R) at equilibrium is given by the formula (R / HarmonicNumber (R)).
- Asymptotic $Dedupe_ratio(R) = R / (1 + \frac{1}{2} + \frac{1}{3} + ... + \frac{1}{R})$
- The approximation for this is $\sim R/\log_e(2R+1)$

target spread method



- Pattern Generation changed to achieve the target dedupe ratio with a mix of unique patterns and patterns with higher number of duplicates (target + spread) following a predefined distribution.
- For example: Generated pattern sequence for target dedupe ratio of 2.0
- P1, P2, P3, P4, P11, P11, P11, P11, P11, P11, P11
- Dedupe ratio = (total # of blocks = 12) / (unique blocks = 6) = 2.0

Pattern generation at the "dedupe unit" size



- Hitachi Advanced Data Reduction deduplicates at the fixed 8 KiB block size. i.e., at a conceptual "dedupe unit".
- target spread pattern generation is at the 8 KiB dedupe unit level.
- The target_spread pattern sequence generated is based on the distribution (mix of unique blocks and duplicate blocks repeating in a sequence) corresponding to a target dedupe ratio and at the dedupe unit size. The pattern sequence is the same for Sequential or Random writes.
- For larger block sizes, the larger block will be filled with blocks of dedupe unit size with the distribution based pattern sequence.

target spread (continued)



- For example, for blocksize = 256 KiB, 32 dedupe unit size blocks are generated and filled – the 32 dedupe unit sized blocks will follow the pattern sequence.
- Pattern generation is to be consistent at each LUN and for any reasonably sized (>= 1 GiB) sample set of contiguous blocks.
- Unique starting seed for each LUN based off of a universal fixed seed i.e., no deduplication across LUNs (unlike serpentine sequence).
- Probabilistic Pattern reuse for Random writes.

Pattern sequence generation algorithm



- Each block of data starts with the block_seed and the Eyeo data generator repeatedly runs xorshitft64 to generate a pseudorandom noise as data.
- block_seed = pattern_seed ^ pattern_number.
- pattern_seed and pattern_number is changed based on a serpentine sequence (old method) or using a distribution (new method) when a new pattern is generated.

Pattern reuse in random writes



- Use of universal starter seed
 - #define universal_seed 1234567 in include/ivydefines.h
- Using a generated pod of seeds with the universal seed as a starting seed using the distribution for the target dedupe ratio.
- Reuse patterns by readjusting starting pattern_seed and pattern_number.
- Pattern seeds are reused with probabilities based on the target dedupe ratio and expected dedupe ratio steady state after multiple random write workloads.

pattern_number_reuse_threshold heuristics



- Dedupe ratio dependent threshold to keep pattern numbers in the range:
 [0..pattern_number_reuse_threshold]
- The numeric threshold values in italics were determined based on running modified 6D2P_debup.ivyscript, and dedupe ratios measured using DRE tool.

target spread dedupe method implementation



- DedupePatternRegulator.{h, cpp}
 - Responsible for the pattern distribution for target dedupe ratio
 - Generates a pod of starting seeds on instantiation for reuse in the case of random write workloads
 - Probabilistic random or reuse of starting seed decision (decide_reuse() method)
- Eyeo.cpp
 - pattern filling with dedupe unit size based blocks from an array of block seeds spanning the xfer size block size
- Workload.cpp
 - Build an array of block seeds spanning an xfer block at dedupe unit boundary for consumption by Eyeo





Thank You

@Hitachi Data Systems