

OPC Unified Architecture

Specification

Part 3: Address Space Model

Release 1.04

November 22, 2017

Specification Type:	Industry Standard Specification	Comments:	Report or view errata: http://www.opcfoundation.org/errat a
Title:	OPC Unified Architecture Part 3 :Address Space Model	Date:	November 22, 2017
Version:	Release 1.04	Software: Source:	MS-Word OPC UA Part 3 - Address Space Model Release 1.04 Specification.docx
Author:	OPC Foundation	Status:	Release

CONTENTS

FΙ	GURES		ix
TA	ABLES		xi
1	Scop	e	1
2	•	ative references	
3		s, definitions, abbreviations and conventions	
J	3.1	Terms and definitions	
	3.1	Abbreviations	
	_	Conventions	
	3.3	Conventions for AddressSpace figures	
	3.3.1 3.3.2		
4		essSpace concepts	
4		·	
	4.1	Overview	
	4.2	Object Model	
	4.3	Node Model	
	4.3.1	General	
	4.3.2		
	4.3.3	Attributes	
	4.3.4	References	
		Variables	
	4.4.1	General	
	4.4.2	•	
	4.4.3		
	4.5	TypeDefinitionNodes	
	4.5.1	General	
	4.5.2	1 71	
	4.5.3	Subtyping	
	4.5.4	Instantiation of complex TypeDefinitionNodes	
	4.6	Event Model	
	4.6.1	General	
	4.6.2	EventTypes	
	4.6.3	Event Categorization	
	4.7	Methods	
	4.8 4.8.1	Overview	
	4.8.2		
	4.8.3	Well Known Roles Evaluating Permissions with Roles	
5		lard NodeClasses	
5			
	5.1	Overview	
	5.2	Base NodeClass	
	5.2.1	General	
	5.2.2	Nodeld	
	5.2.3	NodeClass	
	5.2.4	BrowseName	
	5.2.5	DisplayName	
	5.2.6	Description	. 16

6

5.2.7	WriteMask	. 16
5.2.8	UserWriteMask	. 17
5.2.9	RolePermissions	. 17
5.2.10	UserRolePermissions	. 18
5.2.11	AccessRestrictions	. 18
5.3 Ref	erenceType NodeClass	. 18
5.3.1	General	. 18
5.3.2	Attributes	. 19
5.3.3	References	. 20
5.4 Vie	w NodeClass	. 21
5.5 Obj	ects	. 23
5.5.1	Object NodeClass	. 23
5.5.2	ObjectType NodeClass	. 25
5.5.3	Standard ObjectType FolderType	. 26
5.5.4	Client-side creation of Objects of an ObjectType	. 26
5.6 Var	iables	. 26
5.6.1	General	. 26
5.6.2	Variable NodeClass	. 27
5.6.3	Properties	. 30
5.6.4	DataVariable	
5.6.5	VariableType NodeClass	. 31
5.6.6	Client-side creation of Variables of an VariableType	. 33
	hod NodeClass	
5.8 Dat	aTypes	. 35
5.8.1	DataType Model	. 35
5.8.2	Encoding Rules for different kinds of DataTypes	
5.8.3	DataType NodeClass	
5.8.4	DataTypeEncoding and Encoding Information	. 39
	nmary of Attributes of the NodeClasses	
Type Mod	del for ObjectTypes and VariableTypes	. 40
6.1 Ove	erview	. 40
6.2 Def	initions	. 40
6.2.1	InstanceDeclaration	. 40
6.2.2	Instances without ModellingRules	. 40
6.2.3	InstanceDeclarationHierarchy	. 41
6.2.4	Similar Node of InstanceDeclaration	
6.2.5	BrowsePath	. 41
6.2.6	Attribute Handling of InstanceDeclarations	. 41
6.2.7	Attribute Handling of Variable and VariableTypes	. 41
6.2.8	Nodelds of InstanceDeclarations	. 41
6.3 Sub	typing of ObjectTypes and VariableTypes	. 41
6.3.1	Overview	. 41
6.3.2	Attributes	. 42
6.3.3	InstanceDeclarations	
6.4 Inst	ances of ObjectTypes and VariableTypes	
6.4.1	Overview	. 45
6.4.2	Creating an Instance	. 45
6.4.3	Constraints on an Instance	
6.4.4	ModellingRules	. 46

	6.5	Changing Type Definitions that are already used	
7	Stand	dard ReferenceTypes	. 54
	7.1	General	. 54
	7.2	References ReferenceType	. 55
	7.3	HierarchicalReferences ReferenceType	. 55
	7.4	NonHierarchicalReferences ReferenceType	
	7.5	HasChild ReferenceType	
	7.6	Aggregates ReferenceType	
	7.7	HasComponent ReferenceType	
	7.8	HasProperty ReferenceType	
	7.9	HasOrderedComponent ReferenceType	
	7.10	HasSubtype ReferenceType	
	7.11	Organizes ReferenceType	
	7.12	HasModellingRule ReferenceType	
	7.12	HasTypeDefinition ReferenceType	
	7.13	HasEncoding ReferenceType	
	7.14	GeneratesEvent	
	7.15		
	-	AlwaysGeneratesEvent	
	7.17	HasEventSource	
_	7.18	HasNotifier	
8		dard DataTypes	
	8.1	General	
	8.2	Nodeld	
	8.2.1		
	8.2.2	•	
	8.2.3	, i	
	8.2.4		
	8.3	QualifiedName	
	8.4	LocaleId	. 62
	8.5	LocalizedText	. 62
	8.6	Argument	. 62
	8.7	BaseDataType	. 63
	8.8	Boolean	63
	8.9	Byte	. 63
	8.10	ByteString	. 63
	8.11	DateTime	. 63
	8.12	Double	63
	8.13	Duration	63
	8.14	Enumeration	63
	8.15	Float	64
	8.16	Guid	. 64
	8.17	SByte	. 64
	8.18	IdType	. 64
	8.19	Image	
	8.20	ImageBMP	
	8.21	ImageGIF	
	8.22	ImageJPG	
	8.23	ImagePNG	
	8.24	Integer	

9

8.25	Int16	64
8.26	Int32	
8.27	Int64	
8.28	TimeZoneDataType	
8.29	NamingRuleType	
8.30	NodeClass	
8.31	Number	
8.32	String	
8.33	Structure	
8.34	UInteger	
8.35	UInt16	
8.36	UInt32	
8.37	UInt64	
8.38	UtcTime	
8.39	XmlElement	
8.40	EnumValueType	
8.41	OptionSet	
8.42	Union	
8.43	DateString	
8.44	DecimalString	
8.45	DurationString	
8.46	NormalizedString	
8.47	TimeString	
8.48	DataTypeDefinition	
8.49	StructureDefinition	
8.50	EnumDefinition	
8.51	StructureField	
8.52	EnumField	
8.53	AudioDataType	
8.54	Decimal	
8.55	PermissionType	
8.56	AccessRestrictionsType	
8.57	AccessLevelType	
8.58	AccessLevelExType	
8.59	EventNotifierType	
8.60	AttributeWriteMask	
	dard EventTypes	
9.1	General	
9.2	BaseEventType	
9.3	SystemEventType	
9.4	ProgressEventType	
9.5	AuditEventType	
9.6	AuditSecurityEventType	
9.7	AuditGecunyEventType	
9.8	AuditOpenSecureChannelEventType	
9.9	AuditSessionEventType	
9.10	AuditGessionEventType	
9.10	AuditUrlMismatchEventType	
9.11	AuditActivateSessionEventType	
J. 14	- / wair/ wit vata Occoolon ⊑ valit i ypt	

9.13	AuditCancelEventType	77
9.14	AuditCertificateEventType	77
9.15	AuditCertificateDataMismatchEventType	77
9.16	AuditCertificateExpiredEventType	77
9.17	AuditCertificateInvalidEventType	77
9.18	AuditCertificateUntrustedEventType	77
9.19	AuditCertificateRevokedEventType	77
9.20	AuditCertificateMismatchEventType	77
9.21	AuditNodeManagementEventType	77
9.22	AuditAddNodesEventType	77
9.23	AuditDeleteNodesEventType	78
9.24	AuditAddReferencesEventType	78
9.25	AuditDeleteReferencesEventType	78
9.26	AuditUpdateEventType	78
9.27	AuditWriteUpdateEventType	78
9.28	AuditHistoryUpdateEventType	78
9.29	AuditUpdateMethodEventType	78
9.30	DeviceFailureEventType	78
9.31	SystemStatusChangeEventType	78
9.32	ModelChangeEvents	78
9.32.	1 General	78
9.32.	2 NodeVersion Property	78
9.32.	3 Views	79
9.32.	4 Event Compression	79
9.32.	5 BaseModelChangeEventType	79
9.32.	6 GeneralModelChangeEventType	79
9.32.	7 Guidelines for ModelChangeEvents	79
9.33	SemanticChangeEventType	80
9.33.	1 General	80
9.33.	2 ViewVersion and NodeVersion Properties	80
9.33.	3 Views	80
9.33.	4 Event Compression	80
Annex A (informative) How to use the Address Space Model	81
A.1	Overview	81
A.2	Type definitions	81
A.3	ObjectTypes	81
A.4	VariableTypes	81
A.4.1	General	81
A.4.2	Properties or DataVariables	81
A.4.3	Many Variables and / or structured DataTypes	82
A.5	Views	82
A.6	Methods	83
A.7	Defining ReferenceTypes	83
A.8	Defining ModellingRules	83
Annex B (informative) OPC UA Meta Model in UML	84
B.1	Background	84
B.2	Notation	
B.3	Meta Model	
B 3 1		25

B.3.2	ReferenceType	86
B.3.3	Predefined ReferenceTypes	87
B.3.4	Attributes	87
B.3.5	Object and ObjectType	88
B.3.6	EventNotifier	89
B.3.7	Variable and VariableType	89
B.3.8	Method	
B.3.9	DataType	91
B.3.10	View	
Annex C (norn	native) Graphical Notation	93
C.1 Gen	eral	93
C.2 Nota	ation	
C.2.1	Overview	93
C.2.2	Simple Notation	93
C.2.3	Extended Notation	94

FIGURES

Figure 1 – AddressSpace Node diagrams	3
Figure 2 – OPC UA Object Model	5
Figure 3 – AddressSpace Node Model	6
Figure 4 – Reference Model	7
Figure 5 – Example of a Variable defined by a VariableType	8
Figure 6 – Example of a Complex TypeDefinition	9
Figure 7 – Object and its Components defined by an ObjectType	. 10
Figure 8 – Permissions in the Address Space	. 18
Figure 9 – Symmetric and Non-Symmetric References	. 20
Figure 10 – Variables, VariableTypes and their DataTypes	. 35
Figure 11 – DataType Model	. 36
Figure 12 – Example of DataType Modelling	. 39
Figure 13 – Subtyping TypeDefinitionNodes	. 42
Figure 14 – The Fully-Inherited InstanceDeclarationHierarchy for BetaType	. 44
Figure 15 – An Instance and its TypeDefinitionNode	. 45
Figure 16 – Example for several References between InstanceDeclarations	. 46
Figure 17 – Example on changing instances based on InstanceDeclarations	. 48
Figure 18 – Example on changing InstanceDeclarations based on an InstanceDeclaration.	. 49
Figure 19 – Use of the Standard ModellingRule Mandatory	. 50
Figure 20 – Example using the Standard ModellingRules Optional and Mandatory	. 51
Figure 21 – Example on using ExposesItsArray	. 52
Figure 22 – Complex example on using ExposesItsArray	. 52
Figure 23 – Example using OptionalPlaceholder with an Object and Variable	. 52
Figure 24 – Example using OptionalPlaceholder with a Method	. 53
Figure 25 – Example on using MandatoryPlaceholder for Object and Variable	. 54
Figure 26 – Standard ReferenceType Hierarchy	. 55
Figure 27 – Event Reference Example	. 59
Figure 28 – Complex Event Reference Example	. 60
Figure 29 – Standard EventType Hierarchy	. 74
Figure 30 – Audit Behaviour of a Server	. 75
Figure 31 – Audit Behaviour of an Aggregating Server	. 76
Figure B.1 – Background of OPC UA Meta Model	. 84
Figure B.2 – Notation (I)	. 85
Figure B.3 – Notation (II)	. 85
Figure B.4 – Base	. 86
Figure B.5 – Reference and ReferenceType	. 86
Figure B.6 – Predefined ReferenceTypes	. 87
Figure B.7 – Attributes	. 88
Figure B.8 – Object and ObjectType	. 89
Figure B.9 – EventNotifier	. 89
Figure B.10 – Variable and VariableType	. 90

Figure B.11 – Method	91
Figure B.12 – DataType	92
Figure B.13 – View	92
Figure C.1 – Example of a Reference connecting two Nodes	94
Figure C.2 – Example of using a TypeDefinition inside a Node	95
Figure C.3 – Example of exposing Attributes	95
Figure C.4 – Example of exposing Properties inline	96

TABLES

Table 1 – NodeClass Table Conventions	4
Table 2 – Well-Known Roles	12
Table 3 – Example Roles	13
Table 4 – Example Nodes	14
Table 5 – Example Role Assignment	14
Table 6 – Examples of Evaluating Access	14
Table 7 – Base NodeClass	15
Table 9 – ReferenceType NodeClass	19
Table 10 – View NodeClass	22
Table 11 – Object NodeClass	24
Table 12 – ObjectType NodeClass	25
Table 13 – Variable NodeClass	27
Table 14 – VariableType NodeClass	32
Table 15 – Method NodeClass	34
Table 16 – DataType NodeClass	38
Table 17 – Overview of Attributes	40
Table 18 – The InstanceDeclarationHierarchy for BetaType	43
Table 19 – The Fully-Inherited InstanceDeclarationHierarchy for BetaType	43
Table 20 – Rule for ModellingRules Properties when Subtyping	47
Table 21 – Properties of ModellingRules	49
Table 22 – Nodeld Definition	60
Table 23 – IdentifierType Values	61
Table 24 – Nodeld Null Values	61
Table 25 – QualifiedName Definition	62
Table 26 – Localeld Examples	62
Table 27 – LocalizedText Definition	62
Table 28 – Argument Definition	63
Table 29 – TimeZoneDataType Definition	65
Table 30 - NamingRuleType Values	65
Table 31 – NodeClass Values	65
Table 32 – EnumValueType Definition	66
Table 33 – OptionSet Definition	67
Table 34 – StructureDefinition Structure	69
Table 35 – EnumDefinition Structure	69
Table 36 – StructureField Structure	69
Table 37 – EnumField Structure	70
Table 38 – PermissionType Definition	70
Table 39 – AccessRestrictionsType Definition	71
Table 40 – AccessLevelType Definition	72
Table 41 – AccessLevelExType Definition	72
Table 42 – EventNotifierType Definition	73

Table 43 – Bit mask for WriteMask and UserWriteMask	73
Table C.1 – Notation of Nodes depending on the NodeClass	93
Table C.2 – Simple Notation of Nodes depending on the NodeClass	94

OPC FOUNDATION

UNIFIED ARCHITECTURE -

FOREWORD

This specification is the specification for developers of OPC UA applications. The specification is a result of an analysis and design process to develop a standard interface to facilitate the development of applications by multiple vendors that shall inter-operate seamlessly together.

Copyright © 2006-2018, OPC Foundation, Inc.

AGREEMENT OF USE

COPYRIGHT RESTRICTIONS

Any unauthorized use of this specification may violate copyright laws, trademark laws, and communications regulations and statutes. This document contains information which is protected by copyright. All Rights Reserved. No part of this work covered by copyright herein may be reproduced or used in any form or by any means--graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems--without permission of the copyright owner.

OPC Foundation members and non-members are prohibited from copying and redistributing this specification. All copies must be obtained on an individual basis, directly from the OPC Foundation Web site http://www.opcfoundation.org.

PATENTS

The attention of adopters is directed to the possibility that compliance with or adoption of OPC specifications may require use of an invention covered by patent rights. OPC shall not be responsible for identifying patents for which a license may be required by any OPC specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. OPC specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

WARRANTY AND LIABILITY DISCLAIMERS

WHILE THIS PUBLICATION IS BELIEVED TO BE ACCURATE, IT IS PROVIDED "AS IS" AND MAY CONTAIN ERRORS OR MISPRINTS. THE OPC FOUDATION MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH REGARD TO THIS PUBLICATION, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR USE. IN NO EVENT SHALL THE OPC FOUNDATION BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, RELIANCE OR COVER DAMAGES, INCLUDING LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY ANY USER OR ANY THIRD PARTY IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The entire risk as to the quality and performance of software developed using this specification is borne by you.

RESTRICTED RIGHTS LEGEND

This Specification is provided with Restricted Rights. Use, duplication or disclosure by the U.S. government is subject to restrictions as set forth in (a) this Agreement pursuant to DFARs 227.7202-3(a); (b) subparagraph (c)(1)(i) of the Rights in Technical Data and Computer Software clause at DFARs 252.227-7013; or (c) the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 subdivision (c)(1) and (2), as applicable. Contractor / manufacturer are the OPC Foundation,. 16101 N. 82nd Street, Suite 3B, Scottsdale, AZ, 85260-1830

COMPLIANCE

The OPC Foundation shall at all times be the sole entity that may authorize developers, suppliers and sellers of hardware and software to use certification marks, trademarks or other special designations to indicate compliance with these materials. Products developed using this specification may claim compliance or conformance with this specification if and only if the software satisfactorily meets the certification requirements set by the OPC Foundation. Products that do not meet these requirements may claim only that the product was based on this specification and must not claim compliance or conformance with this specification.

TRADEMARKS

Most computer and software brand names have trademarks or registered trademarks. The individual trademarks have not been listed here.

GENERAL PROVISIONS

Should any provision of this Agreement be held to be void, invalid, unenforceable or illegal by a court, the validity and enforceability of the other provisions shall not be affected thereby.

This Agreement shall be governed by and construed under the laws of the State of Minnesota, excluding its choice or law rules.

This Agreement embodies the entire understanding between the parties with respect to, and supersedes any prior understanding or agreement (oral or written) relating to, this specification.

ISSUE REPORTING

The OPC Foundation strives to maintain the highest quality standards for its published specifications, hence they undergo constant review and refinement. Readers are encouraged to report any issues and view any existing errata here: http://www.opcfoundation.org/errata.

Revision 1.04 Highlights

The following table includes the Mantis issues resolved with this revision.

Mantis ID	Summary	Resolution
3163	Reference broken	In section 8.22 the reference to spec was fixed.
3127	Element order of LocalizedText different from Part 6	Changed order in 8.5 from text / locale to locale / text to match Part 6 and implementations
3018	Handling of DataType Encoding Information	Added Property to DataType NodeClass in 5.8.3 containing information about data type definition. Added DataTypes for handling the information in 8.48, 8.49, 8.50, 8.51, and 8.52. Removed the old approach having DataTypeDictionaries. This effects 5.6.2, where Properties have been removed, 5.8, where the old approach was defined in detail, and 5.5.1 as
		well as 7, where the ReferenceType HasDefinition and its usage was removed. The old approach is moved to an annex of Part 5
		and can still be applied by OPC UA Applications.
3243	Clarification on SemanticChange bit	Changed description in 5.6.2 explaining that SemanticChange bit also requires triggering SementicsChanged bit in subscription and does not have to be set if Property cannot change.
<u>3535</u>	Need attribute to indicate atomicity	Added a new Attribute AccessLevelEx which contains a bits to indicate atomic access capability in 5.6.2
<u>3306</u>	Clarification of Server and Source Time stamps	Added clarifying text to section 8.38
3161, 3181	Clarification of OptionSet Value and ValueBits	Added clarifying text to Table 33 and 8.52
3681	User Authentication Addition	Added Roles sections 4.8, 5.2.9,5.2.10 and 5.2.11
3416	Instance declaration nodes can have an abstract type	Added clarifying text to section 6.2.1
2994 2995	Meta data to indicate encryption is required	Added AccessRestrictions Attribute
<u>3536</u>	No access level flag for optional IndexRange write	Added a new Attribute AccessLevelEx which contains a bit to indicate array index range write capability in 5.6.2
<u>3676</u>	AccessRestrictions requires "Session required" flag	Added a new flag "SessionRequired" to AccessRestrictions in 5.2.11
3652	Audio Data Type for Part 9	Added new DataType AudioDataType in 8.53
3504	AccessLevel StatusWrite bit	Clarifying text added in 5.6.2
<u>3511</u>	Subtyping Unions needs clarification	Clarifying text added in 8.42
3722	Decimal DataType	Added new DataType Decimal in 8.54
<u>3602</u>	UserAccess, UserExecutable and UserWriteMask clarification	Added clarification text to 5.2.8, 5.6.2 and 5.7.

<u>3665</u>	Application of Modelling rules for Methods	Added text to OptionalPlaceholder 6.4.4.5.5 and ManditoryPlaceholder 6.4.4.5.6 modelling rules describing their use with Methods.
<u>3797</u>	MaxStringLength	Added clarification text to 5.6.4.
<u>3818</u>	ValueAsText applicability	Added clarification text to Table 13
3827	BrowseNames for component variables for structures	Added BrowseName description to 5.6.4
3888	Array Dimensions for StructureField fields	Added arrayDimensions to StructureField Table 36
3923	ArrayDimensions description does not have meaning	Added clarification of ArrayDImensions in Variable NodeClass Table 13, VariableType NodeClass Table 14. Added arrayDimensions in Argument DataType Table 28

OPC Unified Architecture Specification

Part 3: Address Space Model

1 Scope

This specification describes the OPC Unified Architecture (OPC UA) *AddressSpace* and its *Objects*. This Part is the OPC UA meta model on which OPC UA information models are based.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application.

Part 1: OPC UA Specification: Part 1 - Overview and Concepts

http://www.opcfoundation.org/UA/Part1/

Part 2: OPC UA Specification: Part 2 – Security Model

http://www.opcfoundation.org/UA/Part2/

Part 4: OPC UA Specification: Part 4 - Services

http://www.opcfoundation.org/UA/Part4/

Part 5: OPC UA Specification: Part 5 - Information Model

http://www.opcfoundation.org/UA/Part5/

Part 6: OPC UA Specification: Part 6 – Mappings

http://www.opcfoundation.org/UA/Part6/

Part 8: OPC UA Specification: Part 8 - Data Access

http://www.opcfoundation.org/UA/Part8/

Part 9: OPC UA Specification: Part 9 - Alarms and conditions

http://www.opcfoundation.org/UA/Part9/

Part 11: OPC UA Specification: Part 11 - Historical Access

http://www.opcfoundation.org/UA/Part11/

ISO/IEC 10918-1: Information technology – Digital compression and coding of continuous-tone still images: Requirements and guidelines

https://www.iso.org/standard/18902.html

ISO/IEC 15948: Information technology – Computer graphics and image processing – Portable Network Graphics (PNG): Functional specification

https://www.iso.org/standard/29581.html

ISO 639 (all parts): Codes for the representation of names of languages

https://www.iso.org/iso-639-language-codes.html

ISO 3166 (all parts): Codes for the representation of names of countries and their subdivisions https://www.iso.org/iso-3166-country-codes.html ISO/IEC/IEEE 60559:2011: Information technology – Microprocessor Systems – Floating-Point arithmetic

https://www.iso.org/standard/57469.html

IETF RFC 5646: Tags for Identifying Languages

http://tools.ietf.org/html/rfc5646

ISO 8601-2000: Data elements and interchange formats

https://www.iso.org/standard/26780.html

Unicode Annex15: Unicode Standard Annex #15: Unicode Normalization Forms

http://www.unicode.org/reports/tr15/

W3C XML Schema Definition Language (XSD) Part 2: DataTypes

http://www.w3.org/TR/xmlschema-2/

TAI: International Atomic Time

http://www.bipm.org/en/bipm-services/timescales/tai.html

3 Terms, definitions, abbreviations and conventions

3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in Part 1 as well as the following apply.

3.1.1

DataType

instance of a *DataType Node* that is used together with the *ValueRank Attribute* to define the data type of a *Variable*

3.1.2

DataTypeld

Nodeld of a DataType Node

3.1.3

DataVariable

Variables that represent values of Objects, either directly or indirectly for complex Variables, where the Variables are always the TargetNode of a HasComponent Reference

3.1.4

EventType

ObjectType Node that represents the type definition of an Event

3.1.5

Hierarchical Reference

Reference that is used to construct hierarchies in the AddressSpace

Note 1 to entry: All hierarchical ReferenceTypes are derived from HierarchicalReferences.

3 1 6

InstanceDeclaration

Node that is used by a complex TypeDefinitionNode to expose its complex structure

Note 1 to entry: It is an instance used by a type definition.

3.1.7

ModellingRule

metadata of an *InstanceDeclaration* that defines how the *InstanceDeclaration* will be used for instantiation and also defines subtyping rules for an *InstanceDeclaration*

3.1.8

Property

Variables that are the TargetNode for a HasProperty Reference

Note 1 to entry: Properties describe the characteristics of a Node.

3.1.9

SourceNode

Node having a Reference to another Node

EXAMPLE: In the Reference "A contains B", "A" is the SourceNode.

3.1.10

TargetNode

Node that is referenced by another Node

EXAMPLE: In the Reference "A Contains B", "B" is the TargetNode.

3.1.11

TypeDefinitionNode

Node that is used to define the type of another Node

Note 1 to entry: ObjectType and VariableType Nodes are TypeDefinitionNodes.

3.1.12

VariableType

Node that represents the type definition for a Variable

3.2 Abbreviations

UA Unified Architecture

UML Unified Modeling LanguageURI Uniform Resource IdentifierW3C World Wide Web ConsortiumXML Extensible Markup Language

3.3 Conventions

3.3.1 Conventions for AddressSpace figures

Nodes and their *References* to each other are illustrated using figures. Figure 1 illustrates the conventions used in these figures.

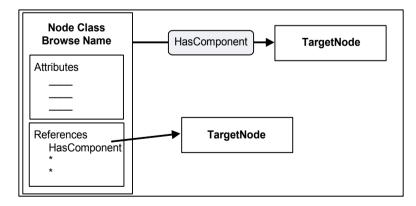


Figure 1 - AddressSpace Node diagrams

In these figures, rectangles represent *Nodes*. *Node* rectangles may be titled with one or two lines of text. When two lines are used, the first text line in the rectangle identifies the *NodeClass* and the second line contains the *BrowseName*. When one line is used, it contains the *BrowseName*.

Node rectangles may contain boxes used to define their Attributes and References. Specific names in these boxes identify specific Attributes and References.

Shaded rectangles with rounded corners and with arrows passing through them represent References. The arrow that passes through them begins at the SourceNode and points to the TargetNode. References may also be shown by drawing an arrow that starts at the Reference name in the "References" box and ends at the TargetNode.

3.3.2 Conventions for defining NodeClasses

Clause 5 defines *AddressSpace NodeClasses*. Table 1 describes the format of the tables used to define *NodeClasses*.

Name Πea Data Type Description **Attributes** "M" or "O" "Attribute name" Data type of the Defines the Attribute Attribute References "Reference name" "1", "0..1" Not used Describes the use of the Reference by the NodeClass or "0..*" **Standard Properties** "Property name" "M" or "O" Data type of the Defines the Property **Property**

Table 1 - NodeClass Table Conventions

The Name column contains the name of the *Attribute*, the name of the *ReferenceType* used to create a *Reference* or the name of a *Property* referenced using the *HasProperty Reference*.

The Use column defines whether the *Attribute* or *Property* is mandatory (M) or optional (O). When mandatory the *Attribute* or *Property* shall exist for every *Node* of the *NodeClass*. For *References* it specifies the cardinality. The following values may apply:

- "0..*" identifies that there are no restrictions, that is, the *Reference* does not have to be provided but there is no limitation how often it can be provided;
- "0..1" identifies that the *Reference* is provided at most once;
- "1" identifies that the Reference shall be provided exactly once.

The Data Type column contains the name of the *DataType* of the *Attribute* or *Property*. It is not used for *References*.

The Description column contains the description of the Attribute, the Reference or the Property.

Only this standard may define *Attributes*. Thus, all *Attributes* of the *NodeClass* are specified in the table and can only be extended by other parts of this series of standards.

This standard also defines ReferenceTypes, but ReferenceTypes can also be specified by a Server or by a client using the NodeManagement Services specified in Part 4. Thus, the NodeClass tables contained in this standard can contain the base ReferenceType called References identifying that any ReferenceType may be used for the NodeClass, including system specific ReferenceTypes. The NodeClass tables only specify how the NodeClasses can be used as SourceNodes of References, not as TargetNodes. If a NodeClass table allows a ReferenceType for its NodeClass to be used as SourceNode, this is also true for subtypes of the ReferenceType may restrict its SourceNodes.

This standard defines *Properties*, but *Properties* can be defined by other standard organizations or vendors and *Nodes* can have *Properties* that are not standardised. *Properties* defined in this standard are defined by their name, which is mapped to the *BrowseName* having the *NamespaceIndex* 0, which represents the *Namespace* for OPC UA.

The Use column (optional or mandatory) does not imply a specific *ModellingRule* for *Properties*. Different *Server* implementations will choose to use *ModellingRules* appropriate for them.

4 AddressSpace concepts

4.1 Overview

The remainder of 4 defines the concepts of the *AddressSpace*. Clause 5 defines the *NodeClasses* of the *AddressSpace* representing the *AddressSpace* concepts. Clause 6 defines details on the type model for *ObjectTypes* and *VariableTypes*. Standard *ReferenceTypes*, *DataTypes* and *EventTypes* are defined in Clauses 7 to 9.

The informative Annex A describes general considerations on how to use the Address Space Model and the informative Annex B provides a UML Model of the Address Space Model. The normative Annex C defines a graphical notation for OPC UA data.

4.2 Object Model

The primary objective of the OPC UA *AddressSpace* is to provide a standard way for *Servers* to represent *Objects* to *Clients*. The OPC UA Object Model has been designed to meet this objective. It defines *Objects* in terms of *Variables* and *Methods*. It also allows relationships to other *Objects* to be expressed. Figure 2 illustrates the model.

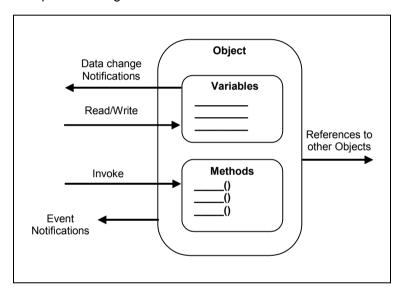


Figure 2 - OPC UA Object Model

The elements of this model are represented in the *AddressSpace* as *Nodes*. Each *Node* is assigned to a *NodeClass* and each *NodeClass* represents a different element of the Object Model. Clause 5 defines the *NodeClasses* used to represent this model.

4.3 Node Model

4.3.1 General

The set of *Objects* and related information that the OPC UA *Server* makes available to *Clients* is referred to as its *AddressSpace*. The model for *Objects* is defined by the OPC UA Object Model (see 4.2).

Objects and their components are represented in the *AddressSpace* as a set of *Nodes* described by *Attributes* and interconnected by *References*. Figure 3 illustrates the model of a *Node* and the remainder of 4.3 discusses the details of the Node Model.

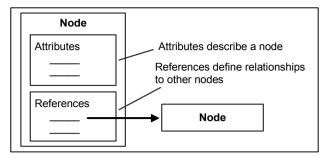


Figure 3 - AddressSpace Node Model

4.3.2 NodeClasses

NodeClasses are defined in terms of the Attributes and References that shall be instantiated (given values) when a Node is defined in the AddressSpace. Attributes are discussed in 4.3.3 and References in 4.3.4.

Clause 5 defines the *NodeClasses* for the OPC UA *AddressSpace*. These *NodeClasses* are referred to collectively as the metadata for the *AddressSpace*. Each *Node* in the *AddressSpace* is an instance of one of these *NodeClasses*. No other *NodeClasses* shall be used to define *Nodes*, and as a result, *Clients* and *Servers* are not allowed to define *NodeClasses* or extend the definitions of these *NodeClasses*.

4.3.3 Attributes

Attributes are data elements that describe Nodes. Clients can access Attribute values using Read, Write, Query, and Subscription/MonitoredItem Services. These Services are defined in Part 4.

Attributes are elementary components of NodeClasses. Attribute definitions are included as part of the NodeClass definitions in Clause 5 and, therefore, are not included in the AddressSpace.

Each Attribute definition consists of an attribute id (for attribute ids of Attributes, see Part 6), a name, a description, a data type and a mandatory/optional indicator. The set of Attributes defined for each NodeClass shall not be extended by Clients or Servers.

When a *Node* is instantiated in the *AddressSpace*, the values of the *NodeClass Attributes* are provided. The mandatory/optional indicator for the *Attribute* indicates whether the *Attribute* has to be instantiated.

4.3.4 References

References are used to relate *Nodes* to each other. They can be accessed using the browsing and querying *Services* defined in Part 4.

Like Attributes, they are defined as fundamental components of Nodes. Unlike Attributes, References are defined as instances of ReferenceType Nodes. ReferenceType Nodes are visible in the AddressSpace and are defined using the ReferenceType NodeClass (see 5.3).

The Node that contains the Reference is referred to as the SourceNode and the Node that is referenced is referred to as the TargetNode. The combination of the SourceNode, the ReferenceType and the TargetNode are used in OPC UA Services to uniquely identify References. Thus, each Node can reference another Node with the same ReferenceType only once. Any subtypes of concrete ReferenceTypes are considered to be equal to the base concrete ReferenceTypes when identifying References (see 5.3 for subtypes of ReferenceTypes). Figure 4 illustrates this model of a Reference.

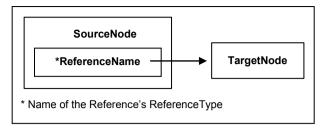


Figure 4 - Reference Model

The TargetNode of a Reference may be in the same AddressSpace or in the AddressSpace of another OPC UA Server. TargetNodes located in other Servers are identified in OPC UA Services using a combination of the remote Server name and the identifier assigned to the Node by the remote Server.

OPC UA does not require that the TargetNode exists, thus References may point to a Node that does not exist.

4.4 Variables

4.4.1 General

Variables are used to represent values. Two types of Variables are defined, Properties and DataVariables. They differ in the kind of data that they represent and whether they can contain other Variables.

4.4.2 Properties

Properties are Server-defined characteristics of Objects, DataVariables and other Nodes. Properties differ from Attributes in that they characterise what the Node represents, such as a device or a purchase order. Attributes define additional metadata that is instantiated for all Nodes from a NodeClass. Attributes are common to all Nodes of a NodeClass and only defined by this specification whereas Properties can be Server-defined.

For example, an *Attribute* defines the *DataType* of *Variables* whereas a *Property* can be used to specify the engineering unit of some *Variables*.

To prevent recursion, *Properties* are not allowed to have *Properties* defined for them. To easily identify *Properties*, the *BrowseName* of a *Property* shall be unique in the context of the *Node* containing the *Properties* (see 5.6.3 for details).

A *Node* and its *Properties* shall always reside in the same *Server*.

4.4.3 DataVariables

DataVariables represent the content of an Object. For example, a file Object may be defined that contains a stream of bytes. The stream of bytes may be defined as a DataVariable that is an array of bytes. Properties may be used to expose the creation time and owner of the file Object.

For example, if a *DataVariable* is defined by a data structure that contains two fields, "startTime" and "endTime" then it might have a *Property* specific to that data structure, such as "earliestStartTime".

As another example, function blocks in control systems might be represented as *Objects*. The parameters of the function block, such as its setpoints, may be represented as *DataVariables*. The function block *Object* might also have *Properties* that describe its execution time and its type.

DataVariables may have additional DataVariables, but only if they are complex. In this case, their DataVariables shall always be elements of their complex definitions. Following the example introduced by the description of Properties in 4.4.2, the Server could expose "startTime" and "endTime" as separate components of the data structure.

As another example, a complex *DataVariable* may define an aggregate of temperature values generated by three separate temperature transmitters that are also visible in the *AddressSpace*. In this case, this complex *DataVariable* could define *HasComponent References* from it to the individual temperature values that it is composed of.

4.5 TypeDefinitionNodes

4.5.1 General

OPC UA Servers shall provide type definitions for Objects and Variables. The HasTypeDefinition Reference shall be used to link an instance with its type definition represented by a TypeDefinitionNode. Type definitions are required; however, Part 5 defines a BaseObjectType, a PropertyType, and a BaseDataVariableType so a Server can use such a base type if no more specialised type information is available. Objects and Variables inherit the Attributes specified by their TypeDefinitionNode (see 6.4 for details).

In some cases, the *Nodeld* used by the *HasTypeDefinition Reference* will be well-known to *Clients* and *Servers*. Organizations may define *TypeDefinitionNodes* that are well-known in the industry. Well-known *Nodelds* of *TypeDefinitionNodes* provide for commonality across OPC UA *Servers* and allow *Clients* to interpret the *TypeDefinitionNode* without having to read it from the *Server*. Therefore, *Servers* may use well-known *Nodelds* without representing the corresponding *TypeDefinitionNodes* in their *AddressSpace*. However, the *TypeDefinitionNodes* shall be provided for generic *Clients*. These *TypeDefinitionNodes* may exist in another *Server*.

The following example, illustrated in Figure 5, describes the use of the *HasTypeDefinition Reference*. In this example, a setpoint parameter "SP" is represented as a *DataVariable* in the *AddressSpace*. This *DataVariable* is part of an *Object* not shown in the figure.

To provide for a common setpoint definition that can be used by other *Objects*, a specialised *VariableType* is used. Each setpoint *DataVariable* that uses this common definition will have a *HasTypeDefinition Reference* that identifies the common "SetPoint" *VariableType*.

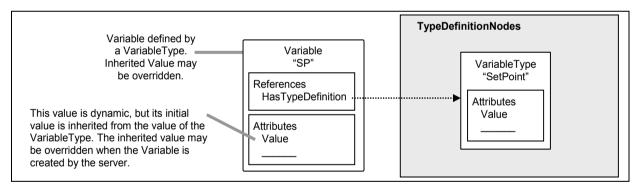


Figure 5 - Example of a Variable defined by a VariableType

4.5.2 Complex TypeDefinitionNodes and their InstanceDeclarations

TypeDefinitionNodes can be complex. A complex TypeDefinitionNode also defines References to other Nodes as part of the type definition. The ModellingRules defined in 6.4.4 specify how those Nodes are handled when creating an instance of the type definition.

A *TypeDefinitionNode* references instances instead of other *TypeDefinitionNodes* to allow unique names for several instances of the same type, to define default values and to add *References* for those instances that are specific to this complex *TypeDefinitionNode* and not to the *TypeDefinitionNode* of the instance. For example, in Figure 6 the *ObjectType* "Al_BLK_TYPE", representing a function block, has a *HasComponent Reference* to a *Variable* "SP" of the *VariableType* "SetPoint". "Al_BLK_TYPE" could have an additional setpoint *Variable* of the same type using a different name. It could add a *Property* to the *Variable* that was not defined by its *TypeDefinitionNode* "SetPoint". And it could define a default value for "SP", that is, each instance of "Al_BLK_TYPE" would have a *Variable* "SP" initially set to this value.

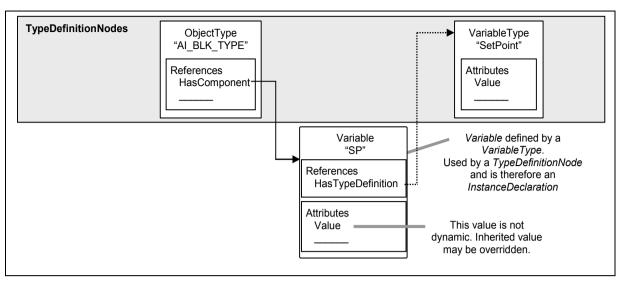


Figure 6 - Example of a Complex TypeDefinition

This approach is commonly used in object-oriented programming languages in which the variables of a class are defined as instances of other classes. When the class is instantiated, each variable is also instantiated, but with the default values (constructor values) defined for the containing class. That is, typically, the constructor for the component class runs first, followed by the constructor for the containing class. The constructor for the containing class may override component values set by the component class.

To distinguish instances used for the type definitions from instances that represent real data, those instances are called *InstanceDeclarations*. However, this term is used to simplify this specification, if an instance is an *InstanceDeclaration* or not is only visible in the *AddressSpace* by following its *References*. Some instances may be shared and therefore referenced by *TypeDefinitionNodes*, *InstanceDeclarations* and instances. This is similar to class variables in object-oriented programming languages.

4.5.3 Subtyping

This standard allows subtyping of type definitions. The subtyping rules are defined in Clause 6. Subtyping of *ObjectTypes* and *VariableTypes* allows:

- Clients that only know the supertype to handle an instance of the subtype as if it were an instance of the supertype;
- instances of the supertype to be replaced by instances of the subtype;
- specialised types that inherit common characteristics of the base type.

In other words, subtypes reflect the structure defined by their supertype but may add additional characteristics. For example, a vendor may wish to extend a general "TemperatureSensor" *VariableType* by adding a *Property* providing the next maintenance interval. The vendor would do this by creating a new *VariableType* which is a *TargetNode* for a *HasSubtype* reference from the original *VariableType* and adding the new *Property* to it.

4.5.4 Instantiation of complex TypeDefinitionNodes

The instantiation of complex *TypeDefinitionNodes* depends on the *ModellingRules* defined in 6.4.4. However, the intention is that instances of a type definition will reflect the structure defined by the *TypeDefinitionNode*. Figure 7 shows an instance of the *TypeDefinitionNode* "AI_BLK_TYPE", where the *ModellingRule Mandatory*, defined in 6.4.4.5.2, was applied for its containing *Variable*. Thus, an instance of "AI_BLK_TYPE", called AI_BLK_1", has a *HasTypeDefinition Reference* to "AI_BLK_TYPE". It also contains a *Variable* "SP" having the same *BrowseName* as the *Variable* "SP" used by the *TypeDefinitionNode* and thereby reflects the structure defined by the *TypeDefinitionNode*.

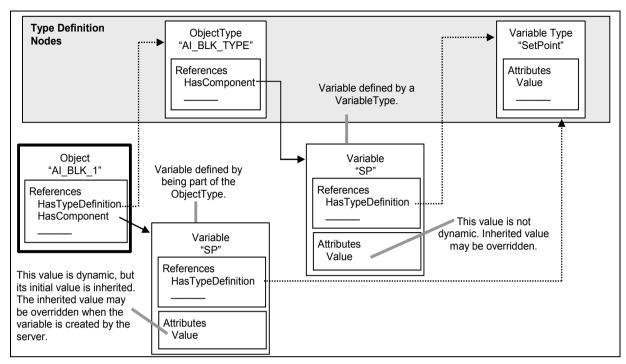


Figure 7 - Object and its Components defined by an ObjectType

A client knowing the *ObjectType* "Al_BLK_TYPE" can use this knowledge to directly browse to the containing *Nodes* for each instance of this type. This allows programming against the *TypeDefinitionNode*. For example, a graphical element may be programmed in the client that handles all instances of "Al BLK TYPE" in the same way by showing the value of "SP".

There are several constraints related to programming against the *TypeDefinitionNode*. A *TypeDefinitionNode* or an *InstanceDeclaration* shall never reference two *Nodes* having the same *BrowseName* using forward *hierarchical References*. Instances based on *InstanceDeclarations* shall always keep the same *BrowseName* as the *InstanceDeclaration* they are derived from. A special *Service* defined in Part 4 called TranslateBrowsePathsToNodelds may be used to identify the instances based on the *InstanceDeclarations*. Using the simple Browse *Service* might not be sufficient since the uniqueness of the *BrowseName* is only required for *TypeDefinitionNodes* and *InstanceDeclarations*, not for other instances. Thus, "AI_BLK_1" may have another *Variable* with the *BrowseName* "SP", although this one would not be derived from an *InstanceDeclaration* of the *TypeDefinitionNode*.

Instances derived from an *InstanceDeclaration* shall be of the same *TypeDefinitionNode* or a subtype of this *TypeDefinitionNode*.

A *TypeDefinitionNode* and its *InstanceDeclarations* shall always reside in the same *Server*. However, instances may point with their *HasTypeDefinition Reference* to a *TypeDefinitionNode* in a different *Server*.

4.6 Event Model

4.6.1 General

The Event Model defines a general purpose eventing system that can be used in many diverse vertical markets.

Events represent specific transient occurrences. System configuration changes and system errors are examples of Events. Event Notifications report the occurrence of an Event. Events defined in this document are not directly visible in the OPC UA AddressSpace. Objects and Views can be used to subscribe to Events. The EventNotifier Attribute of those Nodes identifies if the Node allows subscribing to Events. Clients subscribe to such Nodes to receive Notifications of Event occurrences.

Event Subscriptions use the Monitoring and Subscription *Services* defined in Part 4 to subscribe to the *Event Notifications* of a *Node*.

Any OPC UA Server that supports eventing shall expose at least one Node as EventNotifier. The Server Object defined in Part 5 is used for this purpose. Events generated by the Server are available via this Server Object. A Server is not expected to produce Events if the connection to the event source is down for some reason (i.e. the system is offline).

Events may also be exposed through other Nodes anywhere in the AddressSpace. These Nodes (identified via the EventNotifier Attribute) provide some subset of the Events generated by the Server. The position in the AddressSpace dictates what this subset will be. For example, a process area Object representing a functional area of the process would provide Events originating from that area of the process only. It should be noted that this is only an example and it is fully up to the Server to determine what Events should be provided by which Node.

4.6.2 EventTypes

Each Event is of a specific EventType. A Server may support many types. This part defines the BaseEventType that all other EventTypes derive from. It is expected that other companion specifications will define additional EventTypes deriving from the base types defined in this part.

The EventTypes supported by a Server are exposed in the AddressSpace of a Server. EventTypes are represented as ObjectTypes in the AddressSpace and do not have a special NodeClass associated to them. Part 5 defines how a Server exposes the EventTypes in detail.

EventTypes defined in this document are specified as abstract and therefore never instantiated in the AddressSpace. Event occurrences of those EventTypes are only exposed via a Subscription. EventTypes exist in the AddressSpace to allow Clients to discover the EventType. This information is used by a client when establishing and working with Event Subscriptions. EventTypes defined by other parts of this series of standards or companion specifications as well as Server specific EventTypes may be defined as not abstract and therefore instances of those EventTypes may be visible in the AddressSpace although Events of those EventTypes are also accessible via the Event Notification mechanisms.

Standard *EventTypes* are described in Clause 9. Their representation in the *AddressSpace* is specified in Part 5.

4.6.3 Event Categorization

Events can be categorised by creating new EventTypes which are subtypes of existing EventTypes but do not extend an existing type. They are used only to identify an event as being of the new EventType. For example, the EventType DeviceFailureEventType could be subtyped into TransmitterFailureEventType and ComputerFailureEventType. These new subtypes would not add new Properties or change the semantic inherited from the DeviceFailureEventType other than purely for categorization of the Events.

Event sources can also be organised into groups by using the Event ReferenceTypes described in 7.16 and 7.18. For example, a Server may define Objects in the AddressSpace representing Events related to physical devices, or Event areas of a plant or functionality contained in the Server. Event References would be used to indicate which Event sources represent physical devices and which ones represent some Server-based functionality. In addition, References can be used to group the physical devices or Server-based functionality into hierarchical Event areas. In some cases, an Event source may be categorised as being both a device and a Server function. In this case, two relationships would be established. Refer to the description of the Event ReferenceTypes for additional examples.

Clients can select a category or categories of *Events* by defining content filters that include terms specifying the *EventType* of the *Event* or a grouping of *Event* sources. The two mechanisms allow for a single *Event* to be categorised in multiple manners. A client could obtain all *Events* related to a physical device or all failures of a particular device.

4.7 Methods

Methods are "lightweight" functions, whose scope is bounded by an owning (see Note) Object, similar to the methods of a class in object-oriented programming or an owning ObjectType, similar to static methods of a class. Methods are invoked by a client, proceed to completion on

the *Server* and return the result to the client. The lifetime of the *Method's* invocation instance begins when the client calls the *Method* and ends when the result is returned.

NOTE The owning Object or ObjectType is specified in the service call when invoking the Method.

While *Methods* may affect the state of the owning *Object*, they have no explicit state of their own. In this sense, they are stateless. *Methods* can have a varying number of input arguments and return resultant arguments. Each *Method* is described by a *Node* of the *Method NodeClass*. This *Node* contains the metadata that identifies the *Method's* arguments and describes its behaviour.

Methods are invoked by using the Call Service defined in Part 4.

Clients discover the Methods supported by a Server by browsing for the owning Objects References that identify their supported Methods.

4.8 Roles

4.8.1 Overview

A *Role* is a function assumed by a *Client* when it accesses a *Server. Roles* are used to separate authentication (determining who a *Client* is) from authorization (determining what the *Client* is allowed to do). By separating these tasks *Servers* can allow centralized services to manage user identities and credentials while the *Server* only manages the *Permissions* on its *Nodes* assigned to *Roles*.

The set of *Roles* supported by a *Server* are published as components of the *Roles Object* defined in Part 5. Servers should define a base set of *Roles* and allow configuration *Clients* to add system specific *Roles*.

When a *Session* is created, the *Server* must determine what *Roles* are granted to that *Session*. This specification defines standard mapping rules which *Servers* may support. *Servers* may also use vendor specific mapping rules in addition to or instead of the standard rules.

The standard mapping rules allow Roles to be granted based on:

- · User identity;
- Application identity;
- Endpoint:

User identity mappings can be based on user names, user certificates or user groups. Well known groups include 'AuthenticatedUser' (any user with valid credentials) and 'Anonymous' (no user credentials provided).

Application identity mappings are based on the *ApplicationUri* specified in the *Client Certificate*. Application identity can only be enforced if the *Client* proves possession of a trusted *Certificate* by using it to create a *Secure Channel* or by providing a signature in *ActivateSession* (see Part 4).

Endpoint identity mappings are based on the URL used to connect to the Server. Endpoint identity can be used to restrict access to Clients running on particular networks.

Part 5 defines the *Objects*, *Methods* and *DataTypes* used to represent and manage these mapping rules in the *Address Space*.

4.8.2 Well Known Roles

All Servers should support the well-known Roles which are defined in Table 2. The NodeIds for the well-known Roles are defined in Part 6.

Table 2 - Well-Known Roles

BrowseName	Suggested Permissions
Anonymous	The Role has very limited access for use when a Session has anonymous credentials.

AuthenticatedUser	The Role has limited access for use when a Session has valid non-anonymous credentials but has not been explicitly granted access to a Role.
Observer	The Role is allowed to browse, read live data, read historical data/events or subscribe to data/events.
Operator	The Role is allowed to browse, read live data, read historical data/events or subscribe to data/events. In addition, the Session is allowed to write some live data and call some Methods.
Engineer	The Role is allowed to browse, read/write configuration data, read historical data/events, call Methods or subscribe to data/events.
Supervisor	The <i>Role</i> is allowed to browse, read live data, read historical data/events, call Methods or subscribe to data/events.
ConfigureAdmin	The Role is allowed to change the non-security related configuration settings.
SecurityAdmin	The Role is allowed to change security related settings.

4.8.3 Evaluating Permissions with Roles

When a *Client* attempts to access a *Node*, the *Server* goes through the list of *Roles* granted to the *Session* and logically ORs the *Permissions* for the *Role* on the *Node*. If there are no *Node* specific *Permissions* then the default *Permissions* for the *Role* in the *DefaultRolePermissions Property* of the *NamespaceMetadata* for the namespace the *Node* belongs to are used (see Part 5). The resulting mask is the effective *Permissions*. If the bits corresponding to current operation are set, then the operation can proceed. If they are not set the *Server* returns *Bad_UserAccessDenied*.

Roles appear under the Roles Object in the Server Address Space. Each Role has mapping rules defined which appear as Properties of the Role Object (see Part 5). The examples shown in Table 3 illustrate how the standard mapping rules can be used to determine which Roles a Session has access to and, consequently, the Permissions that are granted to the Session.

Table 3 – Example Roles

Role	Mapping Rules	Description
Anonymous	Identities = Anonymous Applications = Endpoints =	An identity mapping rule that specifies the <i>Role</i> applies to anonymous users.
AuthenticatedUser	Identities = AuthenticatedUser Applications = Endpoints =	
Operator1	Identities = User with name 'Joe' Applications = urn:OperatorStation1 Endpoints =	An identity mapping rule that specifies specific users that have access to the <i>Role</i> with a application rule that restricts access to a single Client application.
Operator2	Identities = Users with name 'Joe' or 'Ann' Applications = urn:OperatorStation2 Endpoints =	An identity mapping rule that specifies specific users that have access to the Role with a application rule that restricts access to a single Client application.
Supervisor	Identities = User with name 'Root' Applications = Endpoints =	An identity mapping rule that specifies specific users that have access to the Role
Administrator	Identities = User with name 'Root' Applications = Endpoints = opc.tcp://127.0.0.1:48000	An identity mapping rule that specifies specific users that have access to the Role when they connect via a specific Endpoint.

The examples also make use of the *Nodes* defined in Table 4. The table specifies the value of the *RolePermissions Attribute* for each *Node*.

Table 4 - Example Nodes

Node	Role Permissions	
Unit1.Measurement	AuthenticatedUser = Browse Operator1 = Browse, Read	
Unit2.Measurement	AuthenticatedUser = Browse Operator2 = Browse, Read	
SetPoint	AuthenticatedUser = Browse Operator1 and Operator2 = Browse, Read, Write Supervisor = Browse, Read	
DisableDevice	AuthenticatedUser = Browse Operator1 and Operator2 = Browse, Read Administrator = Browse, Read, Write	

When a *Client* creates a *Session* the *Roles* assigned to the *Session* depend on the rules defined for each *Role*. Table 5 lists the assigned *Roles* for different *Sessions* created with different *Users*, *Client* applications and *Endpoints*.

Table 5 - Example Role Assignment

User Provided by Client	Roles Assigned to Session
Anonymous	Anonymous
Sam	AuthenticatedUser
Joe using OperatorStation1 application.	AuthenticatedUser, Operator1
Joe using OperatorStation2 application.	AuthenticatedUser, Operator2
Joe using generic application.	AuthenticatedUser
Root using OperatorStation1 application.	AuthenticatedUser, Supervisor
Root using generic application and 127.0.0.1 endpoint.	AuthenticatedUser, Supervisor, Administrator
Root using generic application and another endpoint.	AuthenticatedUser, Supervisor

When a *Client* application accesses a *Node* the *RolePermissions* for the *Node* are compared to the *Roles* assigned to the *Session*. Any *Permissions* available to at least one *Role* is granted to the *Client*. Table 6 provides a number of scenarios and examples and the resulting decision on access.

Table 6 - Examples of Evaluating Access

Use Case	Role Permissions	
Anonymous user on localhost browses Unit1.Measurement Node.	Access denied because no rule defined for Anonymous users.	
User 'Sam' using OperatorStation1 application browses Unit1.Measurement Node.	Allowed because AuthenticatedUser is granted Browse Permission.	
User 'Sam' using OperatorStation2 application reads <i>Value</i> of Unit1.Measurement <i>Node</i> .	Access denied because AuthenticatedUser is not granted Read Permission.	
User 'Joe' using OperatorStation1 application reads <i>Value</i> of Unit1.Measurement <i>Node</i> .	Allowed because Operator1 is granted Read <i>Permission</i> .	
User 'Joe' using OperatorStation2 application reads <i>Value</i> of Unit1.Measurement <i>Node</i> .	Access denied because AuthenticatedUser and Operator2 are not granted Read <i>Permission</i> .	

User 'Joe' using generic OPC UA application reads <i>Value</i> of Measurement <i>Node</i> .	Access denied because AuthenticatedUser is not granted Read Permission.
User 'Joe' using OperatorStation1 application write Value of SetPoint Node.	Allowed because Operator1 is granted Write Permission.
User 'Root' using OperatorStation1 application write the <i>Value</i> of SetPoint <i>Node</i> .	Denied because AuthenticatedUser and Supervisor are not granted Write <i>Permission</i> .
User 'Joe' using OperatorStation1 application write Value of DisableDevice Node.	Access denied because AuthenticatedUser and Operator1 are not granted Write <i>Permission</i> .
User 'Root' using OperatorStation1 application write the <i>Value</i> of DisableDevice <i>Node</i> .	Access denied because AuthenticatedUser and Supervisor are not granted Write <i>Permission</i> .
User 'Root' using endpoint 127.0.0.1 to write Value of DisableDevice Node.	Allowed because Administrator is granted Write Permission.

5 Standard NodeClasses

5.1 Overview

Clause 5 defines the *NodeClasses* used to define *Nodes* in the OPC UA *AddressSpace*. *NodeClasses* are derived from a common *Base NodeClass*. This *NodeClass* is defined first, followed by those used to organise the *AddressSpace* and then by the *NodeClasses* used to represent *Objects*.

The *NodeClasses* defined to represent *Objects* fall into three categories: those used to define instances, those used to define types for those instances and those used to define data types. Subclause 6.3 describes the rules for subtyping and 6.4 the rules for instantiation of the type definitions.

5.2 Base NodeClass

5.2.1 General

The OPC UA Address Space Model defines a *Base NodeClass* from which all other *NodeClasses* are derived. The derived *NodeClasses* represent the various components of the OPC UA Object Model (see 4.2). The *Attributes* of the *Base NodeClass* are specified in Table 7. There are no *References* specified for the *Base NodeClass*.

Name Use Data Type Description **Attributes** Nodeld Μ Nodeld See 5.2.2 NodeClass NodeClass See 5.2.3 Μ BrowseName Μ QualifiedName See 5.2.4 DisplayName Μ LocalizedText See 5.2.5 Description LocalizedText О See 5.2.6 See 5.2.7 WriteMask 0 **AttributeWriteMask** UserWriteMask 0 **AttributeWriteMask** See 5.2.8 RolePermissions 0 RolePermissionType[] See 5.2.9 UserRolePermissions 0 See 5.2.10 RolePermissionType[] See 5.2.11 AccessRestrictions 0 AccessRestrictionsType References No References specified for this NodeClass

Table 7 - Base NodeClass

5.2.2 Nodeld

Nodes are unambiguously identified using a constructed identifier called the Nodeld. Some Servers may accept alternative Nodelds in addition to the canonical Nodeld represented in this Attribute. A Server shall persist the Nodeld of a Node, that is, it shall not generate new Nodelds when rebooting. The structure of the Nodeld is defined in 8.2.

5.2.3 NodeClass

The NodeClass Attribute identifies the NodeClass of a Node. Its data type is defined in 8.30.

5.2.4 BrowseName

Nodes have a BrowseName Attribute that is used as a non-localised human-readable name when browsing the AddressSpace to create paths out of BrowseNames. The TranslateBrowsePathsToNodelds Service defined in Part 4 can be used to follow a path constructed of BrowseNames.

A *BrowseName* should never be used to display the name of a *Node*. The *DisplayName* should be used instead for this purpose.

Unlike *Nodelds*, the *BrowseName* cannot be used to unambiguously identify a *Node*. Different *Nodes* may have the same *BrowseName*.

Subclause 8.3 defines the structure of the *BrowseName*. It contains a namespace and a string. The namespace is provided to make the *BrowseName* unique in some cases in the context of a *Node* (e.g. *Properties* of a *Node*) although not unique in the context of the *Server*. If different organizations define *BrowseNames* for *Properties*, the namespace of the *BrowseName* provided by the organization makes the *BrowseName* unique, although different organizations may use the same string having a slightly different meaning.

Servers may often choose to use the same namespace for the Nodeld and the BrowseName. However, if they want to provide a standard Property, its BrowseName shall have the namespace of the standards body although the namespace of the Nodeld reflects something else, for example the local Server.

It is recommended that standard bodies defining standard type definitions use their namespace for the *Nodeld* of the *TypeDefinitionNode* as well as for the *BrowseName* of the *TypeDefinitionNode*.

The string-part of the *BrowseName* is case sensitive. That is, *Clients* shall consider them case sensitive. *Servers* are allowed to handle *BrowseNames* passed in *Service* requests as case insensitive. Examples are the *TranslateBrowsePathsToNodeIds Service* or *Event* filter.

5.2.5 DisplayName

The *DisplayName Attribute* contains the localised name of the *Node*. *Clients* should use this *Attribute* if they want to display the name of the *Node* to the user. They should not use the *BrowseName* for this purpose. The *Server* may maintain one or more localised representations for each *DisplayName*. *Clients* negotiate the locale to be returned when they open a session with the *Server*. Refer to Part 4 for a description of session establishment and locales. Subclause 8.5 defines the structure of the *DisplayName*. The string part of the *DisplayName* is restricted to 512 characters.

5.2.6 Description

The optional *Description Attribute* shall explain the meaning of the *Node* in a localised text using the same mechanisms for localisation as described for the *DisplayName* in 5.2.5.

5.2.7 WriteMask

The optional *WriteMask Attribute* exposes the possibilities of a client to write the *Attributes* of the *Node*. The *WriteMask Attribute* does not take any user access rights into account, that is, although an *Attribute* is writable this may be restricted to a certain user/user group.

If the OPC UA Server does not have the ability to get the WriteMask information for a specific Attribute from the underlying system, it should state that it is writable. If a write operation is called on the Attribute, the Server should transfer this request and return the corresponding StatusCode if such a request is rejected. StatusCodes are defined in Part 4.

The AttributeWriteMask DataType is defined in 0.

5.2.8 UserWriteMask

The optional *UserWriteMask Attribute* exposes the possibilities of a client to write the *Attributes* of the *Node* taking user access rights into account. It uses the *AttributeWriteMask DataType* which is defined in 0.

The *UserWriteMask Attribute* can only further restrict the *WriteMask Attribute*, when it is set to not writable in the general case that applies for every user.

Clients cannot assume an Attribute can be written based on the UserWriteMask Attribute. It is possible that the Server may return an access denied error due to some server specific change which was not reflected in the state of this Attribute at the time the Client accessed it.

5.2.9 RolePermissions

The optional RolePermissions Attribute specifies the Permissions that apply to a Node for all Roles which have access to the Node. The value of the Attribute is an array of RolePermissionType Structures (see Table 8).

 Name
 Type
 Description

 RolePermissionType
 Structure
 Specifies the Permissions for a Role

 roleId
 NodeId
 The NodeId of the Role Object.

 permissions
 PermissionType
 A mask specifying which Permissions are available to the Role.

Table 8 - RolePermissionType

Servers may allow administrators to write to the RolePermissions Attribute.

If not specified, the value of *DefaultRolePermissions Property* from the *NamespaceMetadata Object* associated with the *Node* shall be used instead. If the *NamespaceMetadata Object* does not define the *Property* or does not exist, then the *Server* should not publish any information about how it manages *Permissions*.

If a Server supports Permissions for a particular Namespace it shall add the DefaultRolePermissions Property to the NamespaceMetadata Object for that Namespace (see Figure 8). If a particular Node in the Namespace needs to override the default values, the Server adds the RolePermissions Attribute to the Node. The DefaultRolePermissions Property and RolePermissions Attribute shall only be readable by administrators. If a Server allows the Permissions to be changed these values shall be writeable. If the Server allows the Permissions to be overridden for a particular Node but does not currently have any Node Permissions configured, then the value of the Attribute shall be an empty array. If the administrator wishes to remove overridden Permissions, an empty array shall be written to this Attribute. Server shall prevent Permissions from being changed in such a way as to render the Server inoperable.

If a Server publishes information about the Roles for a Namespace assigned to the current Session, it shall add the DefaultUserRolePermissions Property to the NamespaceMetadata Object for that Namespace. The value of this Property shall be a readonly list of Permissions for each Role assigned to the current Session. If a particular Node in the Namespace overrides the default RolePermissions the Server shall also override the DefaultUserRolePermissions by adding the UserRolePermissions Attribute to the Node. If the Server allows the Permissions to be overridden for a particular Node but does not currently have any Node Permissions configured, then the Server shall return the value of the DefaultUserRolePermissions Property for the Node Namespace.

If a Server implements a vendor specific Role Permission model for a Namespace, it shall not add the DefaultRolePermissions or DefaultUserRolePermissions Properties to the Namespace Metadata Object.

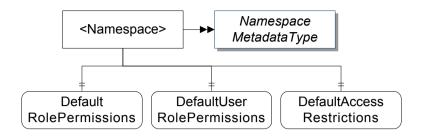


Figure 8 - Permissions in the Address Space

5.2.10 UserRolePermissions

The optional *UserRolePermissions Attribute* specifies the *Permissions* that apply to a *Node* for all *Roles* granted to current *Session*. The value of the *Attribute* is an array of *RolePermissionType Structures* (see Table 8).

Clients may determine their effective *Permissions* by logically ORing the *Permissions* for each *Role* in the array.

The value of this *Attribute* is derived from the rules used by the *Server* to map *Sessions* to *Roles*. This mapping may be vendor specific or it may use the standard *Role* model defined in 4.8.

This Attribute shall not be writeable.

If not specified, the value of *DefaultUserRolePermissions Property* from the *Namespace Metadata Object* associated with the *Node* is used instead. If the *NamespaceMetadata Object* does not define the *Property* or does not exist, then the *Server* does not publish any information about *Roles* mapped to the current *Session*.

5.2.11 AccessRestrictions

The optional AccessRestrictions Attribute specifies the AccessRestrictions that apply to a Node. Its data type is defined in 8.56. If a Server supports AccessRestrictions for a particular Namespace it adds the DefaultAccessRestrictions Property to the NamespaceMetadata Object for that Namespace (see Figure 8). If a particular Node in the Namespace needs to override the default value the Server adds the AccessRestrictions Attribute to the Node.

If a Server implements a vendor specific access restriction model for a Namespace, it does not add the DefaultAccessRestrictions Property to the NamespaceMetadata Object.

5.3 ReferenceType NodeClass

5.3.1 General

References are defined as instances of ReferenceType Nodes. ReferenceType Nodes are visible in the AddressSpace and are defined using the ReferenceType NodeClass as specified in Table 9. In contrast, a Reference is an inherent part of a Node and no NodeClass is used to represent References.

This standard defines a set of *ReferenceTypes* provided as an inherent part of the OPC UA Address Space Model. These *ReferenceTypes* are defined in Clause 7 and their representation in the *AddressSpace* is defined in Part 5. *Servers* may also define *ReferenceTypes*. In addition, Part 4 defines *NodeManagement Services* that allow *Clients* to add *ReferenceTypes* to the *AddressSpace*.

Table 9 - ReferenceType NodeClass

Name	Use	Data Type	Description	
Attributes				
Base NodeClass Attributes	М		Inherited from the Base NodeClass. See 5.2.	
IsAbstract	M	Boolean	A boolean Attribute with the following values: TRUE it is an abstract ReferenceType, i.e. no Reference of this type shall exist, only of its subtypes. FALSE it is not an abstract ReferenceType, i.e. References of this type can exist.	
Symmetric	M	Boolean	A boolean Attribute with the following values: TRUE the meaning of the ReferenceType is the same as seen from both the SourceNode and the TargetNode. FALSE the meaning of the ReferenceType as seen from the TargetNode is the inverse of that as seen from the SourceNode.	
InverseName	0	LocalizedText	The inverse name of the Reference, which is the meaning of the ReferenceType as seen from the TargetNode.	
References				
HasProperty	0*		Used to identify the Properties (see 5.3.3.2).	
HasSubtype	0*		Used to identify subtypes (see 5.3.3.3).	
Standard Properties				
NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed.	

5.3.2 Attributes

The ReferenceType NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2. The inherited BrowseName Attribute is used to specify the meaning of the ReferenceType as seen from the SourceNode. For example, the ReferenceType with the BrowseName "Contains" is used in References that specify that the SourceNode contains the TargetNode. The inherited DisplayName Attribute contains a translation of the BrowseName.

The BrowseName of a ReferenceType shall be unique in a Server. It is not allowed that two different ReferenceTypes have the same BrowseName.

The *IsAbstract Attribute* indicates if the *ReferenceType* is abstract. Abstract *ReferenceTypes* cannot be instantiated and are used only for organizational reasons, for example to specify some general semantics or constraints that its subtypes inherit.

The Symmetric Attribute is used to indicate whether or not the meaning of the ReferenceType is the same for both the SourceNode and TargetNode.

If a ReferenceType is symmetric, the InverseName Attribute shall be omitted. Examples of symmetric ReferenceTypes are "Connects To" and "Communicates With". Both imply the same semantic coming from the SourceNode or the TargetNode. Therefore both directions are considered to be forward References.

If the ReferenceType is non-symmetric and not abstract, the InverseName Attribute shall be set. The InverseName Attribute specifies the meaning of the ReferenceType as seen from the TargetNode. Examples of non-symmetric ReferenceTypes include "Contains" and "Contained In", and "Receives From" and "Sends To".

References that use the *InverseName*, such as "Contained In" References, are referred to as inverse References.

Figure 9 provides examples of symmetric and non-symmetric *References* and the use of the *BrowseName* and the *InverseName*.

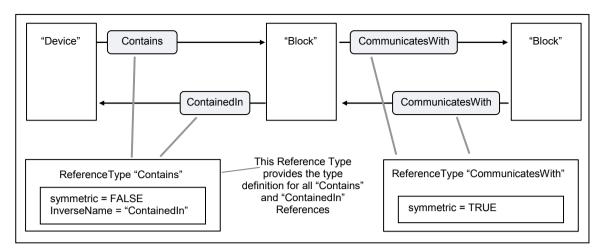


Figure 9 - Symmetric and Non-Symmetric References

It might not always be possible for *Servers* to instantiate both forward and inverse *References* for non-symmetric *ReferenceTypes* as shown in Figure 9. When they do, the *References* are referred to as *bidirectional*. Although not required, it is recommended that all *hierarchical References* be instantiated as bidirectional to ensure browse connectivity. A bidirectional *Reference* is modelled as two separate *References*.

As an example of a *unidirectional Reference*, it is often the case that a signal sink knows its signal source, but this signal source does not know its signal sink. The signal sink would have a "Sourced By" *Reference* to the signal source, without the signal source having the corresponding "Sourced To" inverse *References* to its signal sinks.

The *DisplayName* and the *InverseName* are the only standardised places to indicate the semantic of a *ReferenceType*. There may be more complex semantics associated with a *ReferenceType* than can be expressed in those *Attributes* (e.g. the semantic of *HasSubtype*). This standard does not specify how this semantic should be exposed. However, the *Description Attribute* can be used for this purpose. This standard provides a semantic for the *ReferenceTypes* specified in Clause 7.

A ReferenceType can have constraints restricting its use. For example, it can specify that starting from Node A and only following References of this ReferenceType or one of its subtypes, it shall never be able to return to A, that is, a "No Loop" constraint.

This standard does not specify how those constraints could or should be made available in the *AddressSpace*. Nevertheless, for the standard *ReferenceTypes*, some constraints are specified in Clause 7. This standard does not restrict the kind of constraints valid for a *ReferenceType*. It can, for example, also affect an *ObjectType*. The restriction that a *ReferenceType* can only be used by relating *Nodes* of some *NodeClasses* with a defined cardinality is a special constraint of a *ReferenceType*.

5.3.3 References

5.3.3.1 General

HasSubtype References and HasProperty References are the only ReferenceTypes that may be used with ReferenceType Nodes as SourceNode. ReferenceType Nodes shall not be the SourceNode of other types of References.

5.3.3.2 HasProperty References

HasProperty References are used to identify the Properties of a ReferenceType and shall only refer to Nodes of the Variable NodeClass.

The *Property NodeVersion* is used to indicate the version of the *ReferenceType*.

There are no additional *Properties* defined for *ReferenceTypes* in this standard. Additional parts this series of standards may define additional *Properties* for *ReferenceTypes*.

5.3.3.3 HasSubtype References

HasSubtype References are used to define subtypes of ReferenceTypes. It is not required to provide the HasSubtype Reference for the supertype, but it is required that the subtype provides the inverse Reference to its supertype. The following rules for subtyping apply.

- a) The semantic of a *ReferenceType* (e.g. "spans a hierarchy") is inherited to its subtypes and can be refined there (e.g. "spans a special hierarchy"). The *DisplayName*, and also the *InverseName* for non-symmetric *ReferenceTypes*, reflect the specialization.
- b) If a *ReferenceType* specifies some constraints (e.g. "allow no loops") this is inherited and can only be refined (e.g. inheriting "no loops" could be refined as "shall be a tree only one parent") but not lowered (e.g. "allow loops").
- c) The constraints concerning which *NodeClasses* can be referenced are also inherited and can only be further restricted. That is, if a *ReferenceType* "A" is not allowed to relate an *Object* with an *ObjectType*, this is also true for its subtypes.
- d) A ReferenceType shall have exactly one supertype, except for the References ReferenceType defined in 7.2 as the root type of the ReferenceType hierarchy. The ReferenceType hierarchy does not support multiple inheritances.

5.4 View NodeClass

Underlying systems are often large and *Clients* often have an interest in only a specific subset of the data. They do not need, or want, to be burdened with viewing *Nodes* in the *AddressSpace* for which they have no interest.

To address this problem, this standard defines the concept of a *View*. Each *View* defines a subset of the *Nodes* in the *AddressSpace*. The entire *AddressSpace* is the default *View*. Each *Node* in a *View* may contain only a subset of its *References*, as defined by the creator of the *View*. The *View Node* acts as the root for the *Nodes* in the *View*. *Views* are defined using the *View NodeClass*, which is specified in Table 10.

All *Nodes* contained in a *View* shall be accessible starting from the *View Node* when browsing in the context of the *View*. It is not expected that all containing *Nodes* can be browsed directly from the *View Node* but rather browsed from other *Nodes* contained in the *View*.

A View Node may not only be used as additional entry point into the AddressSpace but as a construct to organize the AddressSpace and thus as the only entry point into a subset of the AddressSpace. Therefore Clients shall not ignore View Nodes when exposing the AddressSpace. Simple Clients that do not deal with Views for filtering purposes can, for example, handle a View Node like an Object of type FolderType (see 5.5.3).

Table 10 - View NodeClass

Name	Use	Data Type	Description	Description	
Attributes					
Base NodeClass	М		Inherited from t	he <i>Base</i>	NodeClass. See 5.2.
Attributes					
ContainsNoLoops	M	Boolean	If set to "true" this <i>Attribute</i> indicates that by following the <i>References</i> in the context of the <i>View</i> there are no loops, i.e. starting from a <i>Node</i> "A" contained in the <i>View</i> and following the forward <i>References</i> in the context of the <i>View Node</i> "A" will not be reached again. It does not specify that there is only one path starting from the <i>View Node</i> to reach a <i>Node</i> contained in the <i>View</i> . If set to "false" this <i>Attribute</i> indicates that following <i>References</i> in the context of the <i>View</i> may lead to loops.		
EventNotifier	М	Byte	to subscribe to	<i>Events</i> ier is an	oute is used to indicate if the Node can be used or to read / write historic Events. 8-bit unsigned integer with the structure table.
			Et. Li	D:4	I Bassadattan
			Field SubscribeTo	Bit 0	Description Indicates if it can be used to subscribe to
			Events	0	Events (0 means cannot be used to subscribe to Events, 1 means can be used to subscribe to Events)
			Reserved	1	Reserved for future use. Shall always be zero.
			HistoryRead	2	Indicates if the history of the <i>Events</i> is readable (0 means not readable, 1 means readable)
			HistoryWrite	3	Indicates if the history of the <i>Events</i> is writable
			Reserved	4:7	(0 means not writable, 1 means writable) Reserved for future use. Shall always be zero
				bits als	so indicate if the history of the <i>Events</i> is
References					
HierarchicalReferences	0*		Top level Node (see 7.3).	s in a V	iew are referenced by hierarchical References
HasProperty	0*		HasProperty Re	eference	es identify the <i>Properties</i> of the <i>View</i> .
Standard Duamantica		-			
Standard Properties		Ctrin -	The Medal/air-	on D::=:	article used to indicate the visualism of a Nii-
NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed.		
ViewVersion	0	UInt32	The version number for the <i>View</i> . When <i>Nodes</i> are added to or removed from a <i>View</i> , the value of the <i>ViewVersion Property</i> is updated. <i>Clients</i> may detect changes to the composition of a <i>View</i> using this <i>Property</i> . The value of the ViewVersion shall always be greater than 0.		

The *View NodeClass* inherits the base *Attributes* from the *Base NodeClass* defined in 5.2. It also defines two additional *Attributes*.

The mandatory *ContainsNoLoops Attribute* is set to false if the *Server* is not able to identify if the *View* contains loops or not.

The mandatory *EventNotifier Attribute* identifies if the *View* can be used to subscribe to *Events* that either occur in the content of the *View* or as *ModelChangeEvents* (see 9.32) of the content of the *View* or to read / write the history of the *Events*. A *View* that supports *Events* shall provide all *Events* that occur in any *Object* used as *EventNotifier* that is part of the content of the *View*. In addition, it shall provide all *ModelChangeEvents* that occur in the context of the *View*.

To avoid recursion, i.e. getting all *Events* of the *Server*, the *Server Object* defined in Part 5 shall never be part of any *View* since it provides all *Events* of the *Server*.

Views are defined by the *Server*. The browsing and querying *Services* defined in Part 4 expect the *NodeId* of a *View Node* to provide these *Services* in the context of the *View*.

HasProperty References are used to identify the Properties of a View. The Property NodeVersion is used to indicate the version of the View Node. The ViewVersion Property indicates the version of the content of the View. In contrast to the NodeVersion, the ViewVersion Property is updated even if Nodes not directly referenced by the View Node are added to or deleted from the View. This Property is optional because it might not be possible for Servers to detect changes in the View contents. Servers may also generate a ModelChangeEvent, described in 9.32, if Nodes are added to or deleted from the View. There are no additional Properties defined for Views in this document. Additional parts of this series of standards may define additional Properties for Views.

Views can be the SourceNode of any hierarchical Reference. They shall not be the SourceNode of any non-hierarchical Reference.

5.5 Objects

5.5.1 Object NodeClass

Objects are used to represent systems, system components, real-world objects and software objects. Objects are defined using the Object NodeClass, specified in Table 11.

Table 11 - Object NodeClass

Name	Use	Data Type	Description
Attributes			
Base NodeClass Attributes	М		Inherited from the Base NodeClass. See 5.2.
EventNotifier	М	EventNotifierType	The EventNotifier Attribute is used to indicate if the Node can be used to subscribe to Events or the read / write historic Events. The EventNotifierType is defined in 0.
References			
HasComponent	0*		HasComponent References identify the DataVariables, the Methods and Objects contained in the Object.
HasProperty	0*		HasProperty References identify the Properties of the Object.
HasModellingRule	01		Objects can point to at most one ModellingRule Object using a HasModellingRule Reference (see 6.4.4 for details on ModellingRules).
HasTypeDefinition	1		The HasTypeDefinition Reference points to the type definition of the Object. Each Object shall have exactly one type definition and therefore be the SourceNode of exactly one HasTypeDefinition Reference pointing to an ObjectType. See 4.5 for a description of type definitions.
HasEventSource	0*		The HasEventSource Reference points to event sources of the Object. References of this type can only be used for Objects having their "SubscribeToEvents" bit set in the EventNotifier Attribute. See 7.17 for details.
HasNotifier	0*		The HasNotifier Reference points to notifiers of the Object. References of this type can only be used for Objects having their "SubscribeToEvents" bit set in the EventNotifier Attribute. See 7.18 for details.
Organizes	0*		This Reference should be used only for Objects of the ObjectType FolderType (see 5.5.3).
<other References></other 	0*		Objects may contain other References.
Standard Properties			
NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed.
Icon	0	Image	The <i>Icon Property</i> provides an image that can be used by <i>Clients</i> when displaying the <i>Node</i> . It is expected that the <i>Icon Property</i> contains a relatively small image.
NamingRule	0	NamingRuleType	The NamingRule Property defines the NamingRule of a ModellingRule (see 6.4.4.2.1 for details). This Property shall only be used for Objects of the type ModellingRuleType defined in 6.4.4.

The Object NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2.

The mandatory *EventNotifier Attribute* identifies whether the *Object* can be used to subscribe to *Events* or to read and write the history of the *Events*.

The Object NodeClass uses the HasComponent Reference to define the DataVariables, Objects and Methods of an Object.

It uses the *HasProperty Reference* to define the *Properties* of an *Object*. The *Property NodeVersion* is used to indicate the version of the *Object*. The *Property Icon* provides an icon of the *Object*. The *Property NamingRule* defines the *NamingRule* of a *ModellingRule* and shall only be applied to *Objects* of type *ModellingRuleType*. There are no additional *Properties* defined for *Objects* in this document. Additional parts of this series of standards may define additional *Properties* for *Objects*.

To specify its *ModellingRule*, an *Object* can use at most one *HasModellingRule Reference* pointing to a *ModellingRule Object*. *ModellingRules* are defined in 6.4.4.

HasNotifier and HasEventSource References are used to provide information about eventing and can only be applied to Objects used as event notifiers. Details are defined in 7.16 and 7.18.

The HasTypeDefinition Reference points to the ObjectType used as type definition of the Object.

Objects may use any additional References to define relationships to other Nodes. No restrictions are placed on the types of References used or on the NodeClasses of the Nodes that may be referenced. However, restrictions may be defined by the ReferenceType excluding its use for Objects. Standard ReferenceTypes are described in Clause 7.

If the *Object* is used as an *InstanceDeclaration* (see 4.5) then all *Nodes* referenced with forward *hierarchical References* direction shall have unique *BrowseNames* in the context of this *Object*.

If the *Object* is created based on an *InstanceDeclaration* then it shall have the same *BrowseName* as its *InstanceDeclaration*.

5.5.2 ObjectType NodeClass

ObjectTypes provide definitions for Objects. ObjectTypes are defined using the ObjectType NodeClass, which is specified in Table 12.

Name	Use	Data Type	Description
Attributes			
Base NodeClass Attributes	М	-	Inherited from the Base NodeClass. See 5.2.
IsAbstract	M	Boolean	A boolean Attribute with the following values: TRUE it is an abstract ObjectType, i.e. no Objects of this type shall exist, only Objects of its subtypes. FALSE it is not an abstract ObjectType, i.e. Objects of this type can exist.
References			
HasComponent	0*		HasComponent References identify the DataVariables, the Methods, and Objects contained in the ObjectType. If and how the referenced Nodes are instantiated when an Object of this type is instantiated, is specified in 6.4.
HasProperty	0*		HasProperty References identify the Properties of the ObjectType. If and how the Properties are instantiated when an Object of this type is instantiated, is specified in 6.4.
HasSubtype	0*		HasSubtype References identify ObjectTypes that are subtypes of this type. The inverse SubtypeOf Reference identifies the parent type of this type.
GeneratesEvent	0*		GeneratesEvent References identify the type of Events instances of this type may generate.
<other references=""></other>	0*		ObjectTypes may contain other References that can be instantiated by Objects defined by this ObjectType.
Standard Properties			
NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed.
Icon	0	Image	The <i>lcon Property</i> provides an image that can be used by <i>Clients</i> when displaying the <i>Node</i> . It is expected that the <i>lcon Property</i> contains a relatively small image.

Table 12 - ObjectType NodeClass

The ObjectType NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2. The additional IsAbstract Attribute indicates if the ObjectType is abstract or not.

The ObjectType NodeClass uses the HasComponent References to define the DataVariables, Objects, and Methods for it.

The HasProperty Reference is used to identify the Properties. The Property NodeVersion is used to indicate the version of the ObjectType. The Property Icon provides an icon of the ObjectType. There are no additional Properties defined for ObjectTypes in this document. Additional parts of this series of standards may define additional Properties for ObjectTypes.

HasSubtype References are used to subtype ObjectTypes. ObjectType subtypes inherit the general semantics from the parent type. The general rules for subtyping apply as defined in Clause 6. It is not required to provide the HasSubtype Reference for the supertype, but it is required that the subtype provides the inverse Reference to its supertype.

GeneratesEvent References identify the type of Events that instances of the ObjectType may generate. These Objects may be the source of an Event of the specified type or one of its subtypes. Servers should make GeneratesEvent References bidirectional References. However, it is allowed to be unidirectional when the Server is not able to expose the inverse direction pointing from the EventType to each ObjectType supporting the EventType. Note that the EventNotifier Attribute of an Object and the GeneratesEvent References of its ObjectType are completely unrelated. Objects that can generate Events might not be used as Objects to which Clients subscribe to get the corresponding Event notifications.

GeneratesEvent References are optional, i.e. Objects may generate Events of an EventType that is not exposed by its ObjectType.

ObjectTypes may use any additional References to define relationships to other Nodes. No restrictions are placed on the types of References used or on the NodeClasses of the Nodes that may be referenced. However, restrictions may be defined by the ReferenceType excluding its use for ObjectTypes. Standard ReferenceTypes are described in Clause 7.

All *Nodes* referenced with forward *hierarchical References* shall have unique *BrowseNames* in the context of an *ObjectType* (see 4.5).

5.5.3 Standard ObjectType FolderType

The ObjectType FolderType is formally defined in Part 5. Its purpose is to provide Objects that have no other semantic than organizing of the AddressSpace. A special ReferenceType is introduced for those Folder Objects, the Organizes ReferenceType. The SourceNode of such a Reference should always be a View or an Object of the ObjectType FolderType; the TargetNode can be of any NodeClass. Organizes References can be used in any combination with HasChild References (HasComponent, HasProperty, etc.; see 7.5) and do not prevent loops. Thus, they can be used to span multiple hierarchies.

5.5.4 Client-side creation of Objects of an ObjectType

Objects are always based on an ObjectType, i.e. they have a HasTypeDefinition Reference pointing to its ObjectType.

Clients can create Objects using the AddNodes Service defined in Part 4. The Service requires specifying the TypeDefinitionNode of the Object. An Object created by the AddNodes Service contains all components defined by its ObjectType dependent on the ModellingRules specified for the components. However, the Server may add additional components and References to the Object and its components that are not defined by the ObjectType. This behaviour is Server dependent. The ObjectType only specifies the minimum set of components that shall exist for each Object of an ObjectType.

In addition to the AddNodes Service ObjectTypes may have a special Method with the BrowseName "Create". This Method is used to create an Object of this ObjectType. This Method may be useful for the creation of Objects where the semantic of the creation should differ from the default behaviour expected in the context of the AddNodes Service. For example, the values should directly differ from the default values or additional Objects should be added, etc. The input and output arguments of this Method depend on the ObjectType; the only commonality is the BrowseName identifying that this Method will create an Object based on the ObjectType. Servers should not provide a Method on an ObjectType with the BrowseName "Create" for any other purpose than creating Objects of the ObjectType.

5.6 Variables

5.6.1 General

Two types of *Variables* are defined, *Properties* and *DataVariables*. Although they differ in the way they are used as described in 4.4 and have different constraints described in the remainder

of 5.6 they use the same *NodeClass* described in 5.6.2. The constraints of *Properties* based on this *NodeClass* are defined in 5.6.3, the constraints of *DataVariables* in 5.6.4.

5.6.2 Variable NodeClass

Variables are used to represent values which may be simple or complex. *Variables* are defined by *VariableTypes*, as specified in 5.6.5.

Variables are always defined as *Properties* or *DataVariables* of other *Nodes* in the *AddressSpace*. They are never defined by themselves. A *Variable* is always part of at least one other *Node*, but may be related to any number of other *Nodes*. *Variables* are defined using the *Variable NodeClass*, specified in Table 13.

Table 13 - Variable NodeClass

Name	Use	Data Type	Description
Attributes			
Base NodeClass Attributes	М		Inherited from the Base NodeClass. See 5.2.
Value	M	Defined by the DataType Attribute	The most recent value of the <i>Variable</i> that the <i>Server</i> has. Its data type is defined by the <i>DataType Attribute</i> . It is the only <i>Attribute</i> that does not have a data type associated with it. This allows all <i>Variables</i> to have a value defined by the same <i>Value Attribute</i> .
DataType	М	Nodeld	Nodeld of the DataType definition for the Value Attribute. Standard DataTypes are defined in Clause 8.
ValueRank	М	Int32	This Attribute indicates whether the Value Attribute of the Variable is an array and how many dimensions the array has. It may have the following values: n > 1: the Value is an array with the specified number of dimensions. OneDimension (1): The value is an array with one dimension. OneOrMoreDimensions (0): The value is an array with one or more dimensions. Scalar (-1): The value is not an array. Any (-2): The value can be a scalar or an array with any number of dimensions. ScalarOrOneDimension (-3): The value can be a scalar or a one dimensional array. All DataTypes are considered to be scalar, even if they have array-like semantics like ByteString and String.
ArrayDimensions	0	UInt32[]	This Attribute specifies the maximum supported length of each dimension. If the maximum is unknown the value shall be 0. The number of elements shall be equal to the value of the ValueRank Attribute. This Attribute shall be null if ValueRank ≤ 0. For example, if a Variable is defined by the following C array: Int32 myArray[346]; then this Variable's DataType would point to an Int32 and the Variable's ValueRank has the value 1 and the ArrayDimensions is an array with one entry having the value 346. The maximum number of elements of an array transferred on the wire is 2147483647 (max Int32).
AccessLevel	М	AccessLevelType	The AccessLevel Attribute is used to indicate how the Value of a Variable can be accessed (read/write) and if it contains current and/or historic data. The AccessLevel does not take any user access rights into account, i.e. although the Variable is writable this may be restricted to a certain user / user group. The AccessLevelType is defined in 8.57.
UserAccessLevel	М	AccessLevelType	The UserAccessLevel Attribute is used to indicate how the Value of a Variable can be accessed (read/write) and if it contains current or historic data taking user access rights into account. The AccessLevelType is defined in 8.57.
MinimumSamplingInterval	0	Duration	The MinimumSamplingInterval Attribute indicates how "current" the Value of the Variable will be kept. It specifies (in milliseconds) how fast the Server can reasonably sample the value for changes (see Part 4 for a detailed description of sampling interval).

Name	Use	Data Type	Description
		,,,	A MinimumSamplingInterval of 0 indicates that the Server is to monitor the item continuously. A MinimumSamplingInterval of - 1 means indeterminate.
Historizing	M	Boolean	The Historizing Attribute indicates whether the Server is actively collecting data for the history of the Variable. This differs from the AccessLevel Attribute which identifies if the Variable has any historical data. A value of TRUE indicates that the Server is actively collecting data. A value of FALSE indicates the Server is not actively collecting data. Default value is FALSE.
AccessLevelEx	0	AccessLevelExTy pe	The AccessLevelEx Attribute is used to indicate how the Value of a Variable can be accessed (read/write), if it contains current and/or historic data and its atomicity. The AccessLevelEx does not take any user access rights into account, i.e. although the Variable is writable this may be restricted to a certain user / user group. The AccessLevelEx is an extended version of the AccessLevel attribute and as such contains the 8 bits of the AccessLevel attribute as the first 8 bits. The AccessLevelEx is a 32-bit unsigned integer with the structure defined in the 8.58. If this Attribute is not provided the information provided by these additional Fields is unknown.
References HasModellingRule	01		Variables can point to at most one ModellingRule Object using a HasModellingRule Reference (see 6.4.4 for details on ModellingRules).
HasProperty	0*		HasProperty References are used to identify the Properties of a DataVariable. Properties are not allowed to be the SourceNode of HasProperty References.
HasComponent	0*		HasComponent References are used by complex DataVariables to identify their composed DataVariables. Properties are not allowed to use this Reference.
HasTypeDefinition	1		The HasTypeDefinition Reference points to the type definition of the Variable. Each Variable shall have exactly one type definition and therefore be the SourceNode of exactly one HasTypeDefinition Reference pointing to a VariableType. See 4.5 for a description of type definitions.
<other references=""></other>	0*		Data Variables may be the SourceNode of any other References. Properties may only be the SourceNode of any non-hierarchical Reference.
Standard Properties NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a DataVariable. It does not apply to Properties. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes except for the DataType Attribute do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed. Although the relationship of a Variable to its DataType is not modelled using References, changes to the DataType Attribute of a Variable lead to an update of the NodeVersion Property.
LocalTime	0	TimeZone DataType	The LocalTime Property is only used for DataVariables. It does not apply to Properties. This Property is a structure containing the Offset and the DaylightSavingInOffset flag. The Offset specifies the time difference (in minutes) between the SourceTimestamp (UTC) associated with the value and the time at the location in which the value was obtained. The SourceTimestamp is defined in Part 4. If DaylightSavingInOffset is TRUE, then Standard/Daylight savings time (DST) at the originating location is in effect and Offset includes the DST correction. If FALSE then the Offset does not include DST correction and DST may or may not have been in effect.

Name	Use	Data Type	Description
AllowNulls	0	Boolean	The AllowNulls Property is only used for DataVariables. It does not apply to Properties. This Property specifies if a null value is allowed for the Value Attribute of the DataVariable. If it is set to true, the Server may return null values and accept writing of null values. If it is set to false, the Server shall never return a null value and shall reject any request writing a null value. If this Property is not provided, it is Server-specific if null values are allowed or not.
ValueAsText	0	Localized Text	It is used for <i>DataVariables</i> with a finite set of <i>LocalizedTexts</i> associated with its value. For example any <i>DataVariables</i> having an <i>Enumeration DataType</i> . This optional <i>Property</i> provides the localized text representation of the value. It can be used by <i>Clients</i> only interested in displaying the text to subscribe to the <i>Property</i> instead of the value attribute.
MaxStringLength	0	UInt32	Only used for <i>DataVariables</i> having a <i>String DataType</i> . This optional <i>Property</i> indicates the maximum number of bytes supported by the <i>DataVariable</i> .
MaxCharacters	0	UInt32	Only used for <i>DataVariables</i> having a <i>String DataType</i> . This optional <i>Property</i> indicates the maximum number of Unicode characters supported by the <i>DataVariable</i> .
MaxByteStringLength	0	UInt32	Only used for <i>DataVariables</i> having a <i>ByteString DataType</i> . This optional <i>Property</i> indicates the maximum number of bytes supported by the <i>DataVariable</i> .
MaxArrayLength	0	UInt32	Only used for <i>DataVariables</i> having its <i>ValueRank Attribute</i> not set to scalar. This optional <i>Property</i> indicates the maximum length of an array supported by the <i>DataVariable</i> . In a multidimensional array it indicates the overall length. For example, a three-dimensional array of 2 x 3 x 10 has the array length of 60. NOTE In order to expose the length of an array of bytes do not use the <i>DataType ByteString</i> but an array of the <i>DataType Byte</i> . In that case the <i>MaxArrayLength</i> applies.
EngineeringUnits	0	EU Information	Only used for <i>DataVariables</i> having a <i>Number DataType</i> . This optional <i>Property</i> indicates the engineering units for the value of the <i>DataVariable</i> (e.g. hertz or seconds). Details about the <i>Property</i> and what engineering units should be used are defined in Part 8. The <i>DataType EUInformation</i> is also defined in Part 8.

The Variable NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2.

The Variable NodeClass also defines a set of Attributes that describe the Variable's Runtime value. The Value Attribute represents the Variable value. The DataType, ValueRank and ArrayDimensions Attributes provide the capability to describe simple and complex values.

The AccessLevel Attribute indicates the accessibility of the Value of a Variable not taking user access rights into account. If the OPC UA Server does not have the ability to get the AccessLevel information from the underlying system then it should state that it is readable and writable. If a read or write operation is called on the Variable then the Server should transfer this request and return the corresponding StatusCode even if such a request is rejected. StatusCodes are defined in Part 4.

The SemanticChange flag of the AccessLevel Attribute is used for Properties that may change and define semantic aspects of the parent Node. For example, the EngineeringUnit Property describes the semantic of a DataVariable, whereas the Icon Property does not. In this example, if the EngineeringUnit Property may change while the Server is running, the SemanticChange flag shall be set for it.

Servers that support Event subscriptions shall generate a SemanticChangeEvent whenever a Property with SemanticChange flag set changes.

If a Variable having a Property with SemanticChange flag set is used in a Subscription and the Property value changes, then the SemanticsChanged bit of the StatusCode shall be set as defined in Part 4. Clients subscribing to a Variable should look at the StatusCode to identify if the semantic has changed and retrieve the relevant Properties before processing the value returned from the Subscription.

The *UserAccessLevel Attribute* indicates the accessibility of the *Value* of a *Variable* taking user access rights into account. If the OPC UA *Server* does not have the ability to get any user access rights related information from the underlying system then it should use the same bit mask as used in the *AccessLevel Attribute*. The *UserAccessLevel Attribute* can restrict the accessibility indicated by the *AccessLevel Attribute*, but not exceed it. *Clients* should not assume access rights based on the *UserAccessLevel Attribute*. For example it is possible that the *Server* returns an error due to some server specific change which was not reflected in the state of this *Attribute* at the time the *Client* accessed the *Variable*.

The *MinimumSamplingInterval Attribute* specifies how fast the *Server* can reasonably sample the *value* for changes. The accuracy of this value (the ability of the *Server* to attain "best case" performance) can be greatly affected by system load and other factors.

The *Historizing Attribute* indicates whether the *Server* is actively collecting data for the history of the *Variable*. See Part 11 for details on historizing *Variables*.

Clients may read or write *Variable* values, or monitor them for value changes, as specified in Part 4. Part 8 defines additional rules when using the *Services* for automation data.

To specify its *ModellingRule*, a *Variable* can use at most one *HasModellingRule Reference* pointing to a *ModellingRule Object*. *ModellingRules* are defined in 6.4.4.

If the *Variable* is created based on an *InstanceDeclaration* (see 4.5) it shall have the same *BrowseName* as its *InstanceDeclaration*.

The other *References* are described separately for *Properties* and *DataVariables* in the remainder of 5.6

5.6.3 Properties

Properties are used to define the characteristics of *Nodes. Properties* are defined using the *Variable NodeClass*, specified in Table 13. However, they restrict their use.

Properties are the leaf of any hierarchy; therefore they shall not be the SourceNode of any hierarchical References. This includes the HasComponent or HasProperty Reference, that is, Properties do not contain Properties and cannot expose their complex structure. However, they may be the SourceNode of any non-hierarchical References.

The HasTypeDefinition Reference points to the VariableType of the Property. Since Properties are uniquely identified by their BrowseName, all Properties shall point to the PropertyType defined in Part 5.

Properties shall always be defined in the context of another Node and shall be the TargetNode of at least one HasProperty Reference. To distinguish them from DataVariables, they shall not be the TargetNode of any HasComponent Reference. Thus, a HasProperty Reference pointing to a Variable Node defines this Node as a Property.

The BrowseName of a Property is always unique in the context of a Node. It is not permitted for a Node to refer to two Variables using HasProperty References having the same BrowseName.

5.6.4 DataVariable

DataVariables represent the content of an Object. DataVariables are defined using the Variable NodeClass, specified in Table 13.

DataVariables identify their Properties using HasProperty References. Complex DataVariables use HasComponent References to expose their component DataVariables.

The *Property NodeVersion* indicates the version of the *DataVariable*.

The *Property LocalTime* indicates the difference between the SourceTimestamp of the value and the standard time at the location in which the value was obtained.

The Property AllowNulls indicates if null values are allowed for the Value Attribute.

The *Property ValueAsText* provides a localized text representation for enumeration values.

The *Property MaxStringLength* indicates the maximum number of bytes of a *String* value. If a *Server* does not impose a maximum number of bytes or is not able to determine the maximum number of bytes this *Property* shall not be provided. If this *Property* is provided then the *MaxCharacters Property* shall not be provided.

The *Property MaxCharacters* indicates the maximum number of Unicode characters of a string value. If a *Server* does not impose a maximum number of Unicode characters or is not able to determine the maximum number of Unicode characters this *Property* shall not be provided. If this *Property* is provided then the *MaxStringLength Property* shall not be provided.

The *Property MaxByteStringLength* indicates the maximum number of bytes of a *ByteString* value. If a *Server* does not impose a maximum number of bytes or is not able to determine the maximum number of bytes this *Property* shall not be provided.

The *Property MaxArrayLength* indicates the maximum allowed array length of the value.

The *Property EngineeringUnits* indicates the engineering units of the value. There are no additional *Properties* defined for *DataVariables* in this part of this document. Additional parts of this series of standards may define additional *Properties* for *DataVariables*. Part 8 defines a set of *Properties* that can be used for *DataVariables*.

DataVariables may use additional References to define relationships to other Nodes. No restrictions are placed on the types of References used or on the NodeClasses of the Nodes that may be referenced. However, restrictions may be defined by the ReferenceType excluding its use for DataVariables. Standard ReferenceTypes are described in Clause 7.

A DataVariable is intended to be defined in the context of an Object. However, complex DataVariables may expose other DataVariables, and ObjectTypes and complex VariableTypes may also contain DataVariables. Therefore each DataVariable shall be the TargetNode of at least one HasComponent Reference coming from an Object, an ObjectType, a DataVariable or a VariableType. DataVariables shall not be the TargetNode of any HasProperty References. Therefore, a HasComponent Reference pointing to a Variable Node identifies it as a DataVariable.

The HasTypeDefinition Reference points to the VariableType used as type definition of the DataVariable.

If the *DataVariable* is used as *InstanceDeclaration* (see 4.5) all *Nodes* referenced with forward *hierarchical References* shall have unique *BrowseNames* in the context of this *DataVariable*.

5.6.5 VariableType NodeClass

Variable Types are used to provide type definitions for Variables. Variable Types are defined using the Variable Type Node Class, as specified in Table 14.

Table 14 - VariableType NodeClass

Name	Use	Data Type	Description
Attributes Attributes			Inheritad form the Bose M. J. O
Base NodeClass Attributes	M		Inherited from the Base NodeClass. See 5.2
Value	0	Defined by the	The default Value for instances of this type.
		DataType	
		attribute	
DataType	M	Nodeld	Nodeld of the data type definition for instances of this type.
ValueRank	M	Int32	This Attribute indicates whether the Value Attribute of the VariableType
			is an array and how many dimensions the array has.
			It may have the following values:
			n > 1: the Value is an array with the specified number of dimensions.OneDimension (1): The value is an array with one dimension.
			OneOrMoreDimensions (0): The value is an array with one or more
			dimensions.
			Scalar (-1): The value is not an array.
			Any (-2): The value can be a scalar or an array with any number of
			dimensions. ScalarOrOneDimension (-3): The value can be a scalar or a one
			dimensional array.
			NOTE All DataTypes are considered to be scalar, even if they have
			array-like semantics like ByteString and String.
ArrayDimensions	0	UInt32[]	This Attribute specifies the length of each dimension for an array
			value. The Attribute specifies the maximum supported length of each
			dimension. If the maximum is unknown the value is 0. The number of elements shall be equal to the value of the ValueRank
			Attribute. This Attribute shall be null if ValueRank ≤ 0.
			For example, if a VariableType is defined by the following C array:
			Int32 myArray[346];
			then this Variable Type's Data Type would point to an Int32, the
			VariableType's ValueRank has the value 1 and the ArrayDimensions is an array with one entry having the value 346.
IsAbstract	М	Boolean	A boolean <i>Attribute</i> with the following values:
10/10011401	'''	Boolean	TRUE it is an abstract <i>VariableType</i> , i.e. no <i>Variable</i> of this
			type shall exist, only of its subtypes.
			FALSE it is not an abstract VariableType, i.e. Variables of this type can exist.
			type can exist.
References			
HasProperty	0*		HasProperty References are used to identify the Properties of the
, ,			VariableType. The referenced Nodes may be instantiated by the
			instances of this type, depending on the ModellingRules defined in
Llas Carrera rant	0*		6.4.4.
HasComponent	0"		HasComponent References are used for complex VariableTypes to identify their containing DataVariables. Complex VariableTypes can
			only be used for <i>DataVariables</i> . The referenced <i>Nodes</i> may be
			instantiated by the instances of this type, depending on the
			ModellingRules defined in 6.4.4.
HasSubtype	0*		HasSubtype References identify VariableTypes that are subtypes of this type. The inverse subtype of Reference identifies the parent type
			of this type.
GeneratesEvent	0*		GeneratesEvent References identify the type of Events instances of
			this type may generate.
<other references=""></other>	0*		VariableTypes may contain other References that can be instantiated
I			by Variables defined by this VariableType. ModellingRules are defined
			in 6.4.4.
Standard Properties			
NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node.
.104010/00/01		Curig	The NodeVersion Property is updated each time a Reference is added
			or deleted to the Node the Property belongs to. Attribute value
			changes except for the DataType Attribute do not cause the
			NodeVersion to change. Clients may read the NodeVersion Property
			or subscribe to it to determine when the structure of a <i>Node</i> has changed.
			Although the relationship of a <i>VariableType</i> to its <i>DataType</i> is not
			modelled using References, changes to the DataType Attribute of a
			VariableType lead to an update of the NodeVersion Property.

The VariableType NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2. The VariableType NodeClass also defines a set of Attributes that describe the default or initial value of its instance Variables. The Value Attribute represents the default value. The DataType, ValueRank and ArrayDimensions Attributes provide the capability to describe simple and complex values. The IsAbstract Attribute defines if the type can be directly instantiated.

The VariableType NodeClass uses HasProperty References to define the Properties and HasComponent References to define DataVariables. Whether they are instantiated depends on the ModellingRules defined in 6.4.4.

The *Property NodeVersion* indicates the version of the *VariableType*. There are no additional *Properties* defined for *VariableTypes* in this document. Additional parts of this series of standards may define additional *Properties* for *VariableTypes*. Part 8 defines a set of *Properties* that can be used for *VariableTypes*.

HasSubtype References are used to subtype VariableTypes. VariableType subtypes inherit the general semantics from the parent type. The general rules for subtyping are defined in Clause 6. It is not required to provide the HasSubtype Reference for the supertype, but it is required that the subtype provides the inverse Reference to its supertype.

GeneratesEvent References identify that Variables of the VariableType may be the source of an Event of the specified EventType or one of its subtypes. Servers should make GeneratesEvent References bidirectional References. However, it is allowed to be unidirectional when the Server is not able to expose the inverse direction pointing from the EventType to each VariableType supporting the EventType.

GeneratesEvent References are optional, i.e. Variables may generate Events of an EventType that is not exposed by its VariableType.

Variable Types may use any additional References to define relationships to other Nodes. No restrictions are placed on the types of References used or on the Node Classes of the Nodes that may be referenced. However, restrictions may be defined by the Reference Type excluding its use for Variable Types. Standard Reference Types are described in Clause 7.

All *Nodes* referenced with forward *hierarchical References* shall have unique *BrowseNames* in the context of the *VariableType* (see 4.5).

5.6.6 Client-side creation of Variables of an VariableType

Variables are always based on a VariableType, i.e. they have a HasTypeDefinition Reference pointing to its VariableType.

Clients can create Variables using the AddNodes Service defined in Part 4. The Service requires specifying the TypeDefinitionNode of the Variable. A Variable created by the AddNodes Service contains all components defined by its VariableType dependent on the ModellingRules specified for the components. However, the Server may add additional components and References to the Variable and its components that are not defined by the VariableType. This behaviour is Server dependent. The VariableType only specifies the minimum set of components that shall exist for each Variable of a VariableType.

5.7 Method NodeClass

Methods define callable functions. Methods are invoked using the Call Service defined in Part 4. Method invocations are not represented in the AddressSpace. Method invocations always run to completion and always return responses when complete. Methods are defined using the Method NodeClass, specified in Table 15.

Table 15 - Method NodeClass

Name	Use	Data Type	Description
Attributes			
Base NodeClass Attributes	М		Inherited from the Base NodeClass. See 5.2.
Executable	М	Boolean	The Executable Attribute indicates if the Method is currently executable ("False" means not executable, "True" means executable). The Executable Attribute does not take any user access rights into account, i.e. although the Method is executable this may be restricted to a certain user / user group.
UserExecutable	M	Boolean	The UserExecutable Attribute indicates if the Method is currently executable taking user access rights into account ("False" means not executable, "True" means executable).
References			
HasProperty	0*		HasProperty References identify the Properties for the Method.
HasModellingRule	01		Methods can point to at most one ModellingRule Object using a HasModellingRule Reference (see 6.4.4 for details on ModellingRules).
GeneratesEvent	0*		GeneratesEvent References identify the type of Events that will be generated whenever the Method is called.
AlwaysGeneratesEvent	0*		AlwaysGeneratesEvent References identify the type of Events that shall be generated whenever the Method is called.
<other references=""></other>	0*		Methods may contain other References.
0, 1, 15, 1;			
Standard Properties NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed.
InputArguments	0	Argument[]	The <i>InputArguments Property</i> is used to specify the arguments that shall be used by a client when calling the <i>Method</i> .
OutputArguments	0	Argument[]	The OutputArguments Property specifies the result returned from the Method call.

The Method NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2. The Method NodeClass defines no additional Attributes.

The Executable Attribute indicates whether the Method is executable, not taking user access rights into account. If the OPC UA Server cannot get the Executable information from the underlying system, it should state that it is executable. If a Method is called then the Server should transfer this request and return the corresponding StatusCode even if such a request is rejected. StatusCodes are defined in Part 4.

The *UserExecutable Attribute* indicates whether the *Method* is executable, taking user access rights into account. If the OPC UA *Server* cannot get any user rights related information from the underlying system, it should use the same value as used in the *Executable Attribute*. The *UserExecutable Attribute* can be set to "False", even if the *Executable Attribute* is set to "True", but it shall be set to "False" if the *Executable Attribute* is set to "False". *Clients* cannot assume a *Method* can be executed based on the *UserExecutable Attribute*. It is possible that the *Server* may return an access denied error due to some *Server* specific change which was not reflected in the state of this *Attribute* at the time the *Client* accessed it.

Properties may be defined for Methods using HasProperty References. The Properties InputArguments and OutputArguments specify the input arguments and output arguments of the Method. Both contain an array of the DataType Argument as specified in 8.6. An empty array or a Property that is not provided indicates that there are no input arguments or output arguments for the Method.

The *Property NodeVersion* indicates the version of the *Method*. There are no additional *Properties* defined for *Methods* in this document. Additional parts of this series of standards may define additional *Properties* for *Methods*.

To specify its *ModellingRule*, a *Method* can use at most one *HasModellingRule Reference* pointing to a *ModellingRule Object*. *ModellingRules* are defined in 6.4.4.

GeneratesEvent References identify that Methods may generate an Event of the specified EventType or one of its subtypes for every call of the Method. A Server may generate one Event for each referenced EventType when a Method is successfully called.

AlwaysGeneratesEvent References identify that Methods will generate an Event of the specified EventType or one of its subtypes for every call of the Method. A Server shall always generate one Event for each referenced EventType when a Method is successfully called.

Servers should make GeneratesEvent References bidirectional References. However, it is allowed to be unidirectional when the Server is not able to expose the inverse direction pointing from the EventType to each Method generating the EventType.

GeneratesEvent References are optional, i.e. the call of a Method may produce Events of an EventType that is not referenced with a GeneratesEvent Reference by the Method.

Methods may use additional References to define relationships to other Nodes. No restrictions are placed on the types of References used or on the NodeClasses of the Nodes that may be referenced. However, restrictions may be defined by the ReferenceType excluding its use for Methods. Standard ReferenceTypes are described in Clause 7.

A Method shall always be the TargetNode of at least one HasComponent Reference. The SourceNode of these HasComponent References shall be an Object or an ObjectType. If a Method is called then the Nodeld of one of those Nodes shall be put into the Call Service defined in Part 4 as parameter to detect the context of the Method operation.

If the *Method* is used as *InstanceDeclaration* (see 4.5) all *Nodes* referenced with forward *hierarchical References* shall have unique *BrowseNames* in the context of this *Method*.

5.8 DataTypes

5.8.1 DataType Model

The DataType Model is used to define simple and structured data types. Data types are used to describe the structure of the *Value Attribute* of *Variables* and their *VariableTypes*. Therefore each *Variable* and *VariableType* is pointing with its *DataType Attribute* to a *Node* of the *DataType NodeClass* as shown in Figure 10.

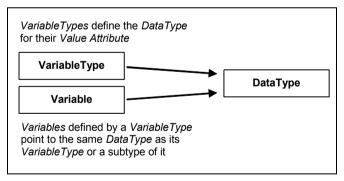


Figure 10 - Variables, VariableTypes and their DataTypes

In many cases, the *Nodeld* of the *DataType Node* – the *DataTypeld* – will be well-known to *Clients* and *Servers*. Clause 8 defines *DataTypes* and Part 6 defines their *DataTypelds*. In addition, other organizations may define *DataTypes* that are well-known in the industry. Well-known *DataTypelds* provide for commonality across OPC UA *Servers* and allow *Clients* to interpret values without having to read the type description from the *Server*. Therefore, *Servers* may use well-known *DataTypelds* without representing the corresponding *DataType Nodes* in their *AddressSpaces*.

In other cases, *DataTypes* and their corresponding *DataTypeIds* may be vendor-defined. Servers should attempt to expose the *DataType Nodes* and the information about the structure of those *DataTypes* for *Clients* to read, although this information might not always be available to the *Server*.

Figure 11 illustrates the *Nodes* used in the *AddressSpace* to describe the structure of a *DataType*. The *DataType* points to an *Object* of type *DataTypeEncodingType*. Each *DataType* can have several *DataTypeEncoding*, for example "Default", "UA Binary" and "XML" encoding. Services in Part 4 allow *Clients* to request an encoding or choosing the "Default" encoding. Each *DataTypeEncoding* is used by exactly one *DataType*, that is, it is not permitted for two *DataTypes* to point to the same *DataTypeEncoding*.

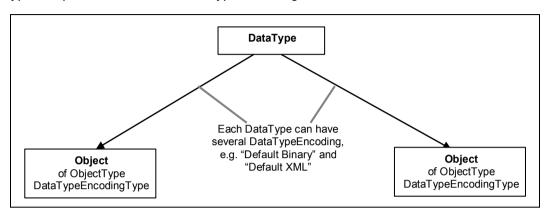


Figure 11 - DataType Model

Since the *Nodeld* of the *DataTypeEncoding* will be used in some Mappings to identify the *DataType* and it's encoding as defined in Part 6, those *Nodelds* may also be well-known for well-known *DataTypelds*.

5.8.2 Encoding Rules for different kinds of DataTypes

Different kinds of *DataTypes* are handled differently regarding their encoding and according to whether this encoding is represented in the *AddressSpace*.

Built-in DataTypes are a fixed set of DataTypes (see Part 6 for a complete list of Built-in DataTypes). They have no encodings visible in the AddressSpace since the encoding should be known to all OPC UA products. Examples of Built-in DataTypes are Int32 (see 8.26) and Double (see 8.12).

Simple DataTypes are subtypes of the Built-in DataTypes. They are handled on the wire like the Built-in DataType, i.e. they cannot be distinguished on the wire from their Built-in supertypes. Since they are handled like Built-in DataTypes regarding the encoding they cannot have encodings defined in the AddressSpace. Clients can read the DataType Attribute of a Variable or VariableType to identify the Simple DataType of the Value Attribute. An example of a Simple DataType is Duration. It is handled on the wire as a Double but the Client can read the DataType Attribute and thus interpret the value as defined by Duration (see 8.13).

Structured DataTypes are DataTypes that represent structured data and are not defined as Built-in DataTypes. Structured DataTypes inherit directly or indirectly from the DataType Structure defined in 8.33. Structured DataTypes may have several encodings and the encodings are exposed in the AddressSpace. How the encoding of Structured DataTypes is handled on the wire is defined in Part 6. The encoding of the Structured DataType is transmitted with each value, thus Clients are aware of the DataType without reading the DataType Attribute. The encoding has to be transmitted so the Client is able to interpret the data. An example of a Structured DataType is Argument (see 8.6).

Enumeration DataTypes are DataTypes that represent discrete sets of named values. Enumerations are always encoded as Int32 on the wire as defined in Part 6. Enumeration DataTypes inherit directly or indirectly from the DataType Enumeration defined in 8.14. Enumerations have no encodings exposed in the AddressSpace. To expose the human-readable representation of an enumerated value the DataType Node may have the EnumStrings Property that contains an array of LocalizedText. The Integer representation of the enumeration value points to a position within that array. EnumValues Property can be used instead of the EnumStrings to support integer representation of enumerations that are not zero-based or have gaps. It contains an array of a Structured DataType containing the integer representation as

well as the human-readable representation. An example of an enumeration *DataType* containing a sparse list of Integers is *NodeClass* which is defined in 8.30.

In addition to the *DataTypes* described above, abstract *DataTypes* are also supported, which do not have any encodings and cannot be exchanged on the wire. *Variables* and *VariableTypes* use abstract *DataTypes* to indicate that their *Value* may be any one of the subtypes of the abstract *DataType*. An example of an abstract *DataType* is Integer which is defined in 8.24.

5.8.3 DataType NodeClass

The *DataType NodeClass* describes the syntax of a *Variable Value*. *DataTypes* are defined using the *DataType NodeClass*, as specified in Table 16.

Table 16 - DataType NodeClass

Name	Use	Data Type	Description
Attributes			
Base NodeClass Attributes	М		Inherited from the Base NodeClass. See 5.2.
IsAbstract	М	Boolean	A boolean Attribute with the following values: TRUE it is an abstract DataType. FALSE it is not an abstract DataType.
DataTypeDefinition	0	DataTypeDefinition	The DataTypeDefinition Attribute is used to provide the meta data and encoding information for custom DataTypes. The abstract DataTypeDefinition DataType is defined in 8.48. Structure and Union DataTypes The Attribute is mandatory for DataTypes derived from Structure and Union. For such DataTypes, the Attribute contains a structure of the DataType StructureDefinition. The StructureDefinition DataType is defined in 8.49. It is a subtype of DataTypeDefinition. Enumeration and OptionSet DataTypes The Attribute is mandatory for DataTypes derived from Enumeration,
			OptionSet and subtypes of UInteger representing an OptionSet. For such DataTypes, the Attribute contains a structure of the DataType EnumDefinition. The EnumDefinition DataType is defined in 8.50. It is a subtype of DataTypeDefinition.
References			
HasProperty	0*		HasProperty References identify the Properties for the DataType.
HasSubtype	0*		HasSubtype References may be used to span a data type hierarchy.
HasEncoding	0*		HasEncoding References identify the encodings of the DataType represented as Objects of type DataTypeEncodingType. Only concrete Structured DataTypes may use HasEncoding References. Abstract, Built-in, Enumeration, and Simple DataTypes are not allowed to be the SourceNode of a HasEncoding Reference. Each concrete Structured DataType shall point to at least one DataTypeEncoding Object with the BrowseName "Default Binary" or "Default XML" having the NamespaceIndex 0. The BrowseName of the DataTypeEncoding Objects shall be unique in the context of a DataType, i.e. a DataType shall not point to two DataTypeEncodings having the same BrowseName.
Standard Properties			
NodeVersion	0	String	The NodeVersion Property is used to indicate the version of a Node. The NodeVersion Property is updated each time a Reference is added or deleted to the Node the Property belongs to. Attribute value changes do not cause the NodeVersion to change. Clients may read the NodeVersion Property or subscribe to it to determine when the structure of a Node has changed. Clients shall not use the content for programmatic purposes except for equality comparisions.
EnumStrings	0	LocalizedText[]	The EnumStrings Property only applies for Enumeration DataTypes. It shall not be applied for other DataTypes. If the EnumValues Property is provided, the EnumStrings Property shall not be provided. Each entry of the array of LocalizedText in this Property represents the human-readable representation of an enumerated value. The Integer representation of the enumeration value points to a position of the array.
EnumValues	0	EnumValueType[]	The EnumValues Property only applies for Enumeration DataTypes. It shall not be applied for other DataTypes. If the EnumStrings Property is provided, the EnumValues Property shall not be provided. Using the EnumValues Property it is possible to represent Enumerations with integers that are not zero-based or have gaps (e.g. 1, 2, 4, 8, and 16). Each entry of the array of EnumValueType in this Property represents one enumeration value with its integer notation, human-readable representation and help information.
OptionSetValues	0	LocalizedText[]	The OptionSetValues Property only applies for OptionSet DataTypes and UInteger DataTypes. An OptionSet DataType is used to represent a bit mask and the OptionSetValues Property contains the human-readable representation for each bit of the bit mask. The OptionSetValues Property provides an array of LocalizedText containing the human-readable representation for each bit.

The DataType NodeClass inherits the base Attributes from the Base NodeClass defined in 5.2. The IsAbstract Attribute specifies if the DataType is abstract or not. Abstract DataTypes can be used in the AddressSpace, i.e. Variables and VariableTypes can point with their DataType Attribute to an abstract DataType. However, concrete values can never be of an abstract DataType and shall always be of a concrete subtype of the abstract DataType.

HasProperty References are used to identify the Properties of a DataType. The Property NodeVersion is used to indicate the version of the DataType. The Property EnumStrings contains human-readable representations of enumeration values and is only applied to Enumeration DataTypes. Instead of the EnumStrings Property an Enumeration DataType can also use the EnumValues Property to represent Enumerations with integer values that are not zero-based or containing gaps. There are no additional Properties defined for DataTypes in this standard. Additional parts of this series of standards may define additional Properties for DataTypes.

HasSubtype References may be used to expose a data type hierarchy in the AddressSpace. The semantic of subtyping is only defined to the point, that a Server may provide instances of the subtype instead of the DataType. Clients should not make any assumptions about any other semantic with that information. For example, it might not be possible to cast a value of one data type to its base data type. Servers need not provide HasSubtype References, even if their DataTypes span a type hierarchy. Some restrictions apply for subtyping enumeration DataTypes as defined in 8.14.

HasEncoding References point from the DataType to its DataTypeEncodings. Each concrete Structured DataType can point to many DataTypeEncodings, but each DataTypeEncoding shall belong to one DataType, that is, it is not permitted for two DataType Nodes to point to the same DataTypeEncoding Object using HasEncoding References.

An abstract *DataType* is not the *SourceNode* of a *HasEncoding Reference*. The *DataTypeEncoding* of an abstract *DataType* is provided by its concrete subtypes.

DataType Nodes shall not be the SourceNode of other types of References. However, they may be the TargetNode of other References.

5.8.4 DataTypeEncoding and Encoding Information

If a DataType Node is exposed in the AddressSpace, it shall provide its DataTypeEncodings using HasEncoding References. These References shall be bi-directional. Figure 12 provides an example how DataTypes are modelled in the AddressSpace.

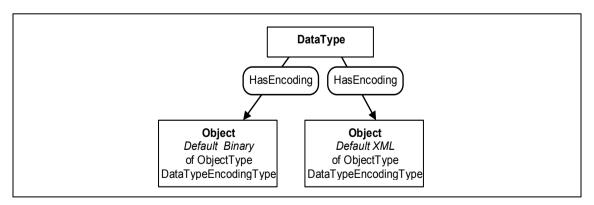


Figure 12 - Example of DataType Modelling

The information on how to encode the *DataType* is provided in the *Attribute DataTypeDefinition* of the *DataType Node*. The content of this *Attribute* shall not be changed once it had been provided to *Clients* since *Clients* might persistently cache this information. If the encoding of a *DataType* needs to be changed conceptually a new *DataType* needs to be provided, meaning that a new *NodeId* shall be used for the *DataType*. Since *Clients* identify the *DataType* via the *DataTypeEncodings*, also the *NodeIds* for the *DataTypeEncodings* of the *DataType* shall be changed, when the encoding changes.

5.9 Summary of Attributes of the NodeClasses

Table 17 summarises all *Attributes* defined in this document and points out which *NodeClasses* use them either in an optional (O) or mandatory (M) way.

Attribute Reference Type DataType Variable Variable Type Method Object View AccessLevel Μ AccessLevelEx 0 ArrayDimensions 0 0 AccessRestrictions 0 0 0 0 0 0 \cap \cap М BrowseName Μ Μ Μ Μ Μ Μ Μ ContainsNoLoops Μ М М DataType 0 DataTypeDefinition Description 0 0 0 0 0 0 0 0 DisplayName Μ Μ Μ Μ Μ Μ Μ Μ EventNotifier M Μ Executable Μ М Historizing InverseName 0 IsAbstract М М М М MinimumSamplingInterval 0 NodeClass Μ Μ Μ Μ М M Μ Μ Μ Nodeld Μ Μ Μ Μ M Μ Μ RolePermissions 0 0 0 0 0 0 0 0 М Symmetric UserAccessLevel Μ UserExecutable Μ UserRolePermissions 0 0 0 0 0 0 0 0 UserWriteMask 0 0 0 0 0 0 0 0 Value Μ 0 ValueRank М М WriteMask 0 0 0 0 0 0 0 0

Table 17 - Overview of Attributes

6 Type Model for ObjectTypes and VariableTypes

6.1 Overview

In the remainder of 6 the type model of *ObjectTypes* and *VariableTypes* is defined regarding subtyping and instantiation.

6.2 Definitions

6.2.1 InstanceDeclaration

An InstanceDeclaration is an Object, Variable or Method that references a ModellingRule with a HasModellingRule Reference and is the TargetNode of a hierarchical Reference from a TypeDefinitionNode or another InstanceDeclaration. The type of an InstanceDeclaration may be abstract, however the instance must be of a concrete type.

6.2.2 Instances without ModellingRules

If no *ModellingRule* exists then the *Node* is neither considered for instantiation of a type nor for subtyping.

If a Node referenced by a TypeDefinitionNode does not reference a ModellingRule it indicates that this Node only belongs to the TypeDefinitionNode and not to the instances. For example, an ObjectType Node may contain a Property that describes scenarios where the type could be used. This Property would not be considered when creating instances of the type. This is also true for subtyping, that is, subtypes of the type definition would not inherit the referenced Node.

6.2.3 InstanceDeclarationHierarchy

The InstanceDeclarationHierarchy of a TypeDefinitionNode contains the TypeDefinitionNode and all InstanceDeclarations that are directly or indirectly referenced from the TypeDefinitionNode using forward hierarchical References.

6.2.4 Similar Node of InstanceDeclaration

A similar Node of an InstanceDeclaration is a Node that has the same BrowseName and NodeClass as the InstanceDeclaration and in cases of Variables and Objects the same TypeDefinitionNode or a subtype of it.

6.2.5 BrowsePath

All targets of forward hierarchical References from a TypeDefinitionNode shall have a BrowseName that is unique within the TypeDefinitionNode. The same restriction applies to the targets of forward hierarchical References from any InstanceDeclaration. This means that any InstanceDeclaration within the InstanceDeclarationHierarchy can be uniquely identified by a sequence of BrowseNames. This sequence of BrowseNames is called a BrowsePath.

6.2.6 Attribute Handling of InstanceDeclarations

Some restrictions exist regarding the *Attributes* of *InstanceDeclarations* when the *InstanceDeclaration* is overridden or instantiated. The *BrowseName* and the *NodeClass* shall never change and always be the same as the original *InstanceDeclaration*.

In addition, the rules defined in 6.2.7 apply for *InstanceDeclarations* of the *NodeClass Variable*.

6.2.7 Attribute Handling of Variable and VariableTypes

Some restrictions exist regarding the *Attributes* of a *VariableType* or a *Variable* used as an *InstanceDeclaration* with regard to the data type of the *Value Attribute*.

When a *Variable* used as *InstanceDeclaration* or a *VariableType* is overridden or instantiated the following rules apply:

- a) The *DataType Attribute* can only be changed to a new *DataType* if the new *DataType* is a subtype of the *DataType* originally used.
- b) The ValueRank Attribute may only be further restricted
 - 1) 'Any' may be set to any other value;
 - 2) 'ScalarOrOneDimension' may be set to 'Scalar' or 'OneDimension';
 - 3) 'OneOrMoreDimensions' may be set to a concrete number of dimensions (value > 0).
 - 4) All other values of this Attribute shall not be changed.
- c) The ArrayDimensions Attribute may be added if it was not provided or when modifying the value of an entry in the array from 0 to a different value. All other values in the array shall remain the same.

6.2.8 Nodelds of InstanceDeclarations

InstanceDeclarations are identified by their BrowsePath. Different Servers might use different Nodelds for the InstanceDeclarations of common TypeDefinitionNodes, unless the definition of the TypeDefinitionNode already defines a Nodeld for the InstanceDeclaration. All TypeDefinitionNodes defined in Part 5 already define the Nodelds for their InstanceDeclarations and therefore shall be used in all Servers.

6.3 Subtyping of ObjectTypes and VariableTypes

6.3.1 Overview

The HasSubtype ReferenceType defines subtypes of types. Subtyping can only occur between Nodes of the same NodeClass. Rules for subtyping ReferenceTypes are described in 5.3.3.3. There is no common definition for subtyping DataTypes, as described in 5.8.3. The remainder of 6.3 specify subtyping rules for single inheritance on ObjectTypes and VariableTypes.

6.3.2 Attributes

Subtypes inherit the parent type's *Attribute* values, except for the *Nodeld*. Inherited *Attribute* values may be overridden by the subtype, the *BrowseName* and *DisplayName* values should be overridden. Special rules apply for some *Attributes* of *VariableTypes* as defined in 6.2.7. Optional *Attributes*, not provided by the parent type, may be added to the subtype.

6.3.3 InstanceDeclarations

6.3.3.1 Overview

Subtypes inherit the fully-inherited parent type's *InstanceDeclarations*.

As long as those *InstanceDeclarations* are not overridden they are not referenced by the subtype. *InstanceDeclarations* can be overridden by adding *References*, changing *References* to reference different *Nodes*, changing *References* to be subtypes of the original *ReferenceType*, changing values of the *Attributes* or adding optional *Attributes*. In order to get the full information about a subtype, the inherited *InstanceDeclarations* have to be collected from all types that can be found by recursively following the inverse *HasSubtype References* from the subtype. This collection of *InstanceDeclarations* is called the fully-inherited *InstanceDeclarationHierarchy* of a subtype.

The remainder of 6.3.3 define how to construct the fully-inherited *InstanceDeclarationHierarchy* and how *InstanceDeclarations* can be overridden.

6.3.3.2 Fully-inherited InstanceDeclarationHierarchy

An instance of a *TypeDefinitionNode* is described by the fully-inherited *InstanceDeclaration-Hierarchy* of the *TypeDefinitionNode*. The fully-inherited *InstanceDeclarationHierarchy* can be created by starting with the *InstanceDeclarationHierarchy* of the *TypeDefinitionNode* and merging the fully-inherited *InstanceDeclarationHierarchy* of its parent type.

The process of merging *InstanceDeclarationHierarchies* is straightforward and can be illustrated with the example shown in Figure 13 which specifies a *TypeDefinitionNode* "BetaType" which is a subtype of "AlphaType". The name in each box is the *BrowseName* and the number is the *Nodeld*.

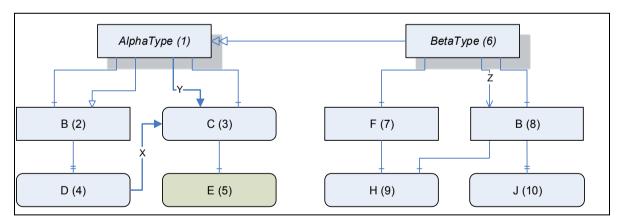


Figure 13 - Subtyping TypeDefinitionNodes

An InstanceDeclarationHierarchy can be fully described as a table of Nodes identified by their BrowsePaths with a corresponding table of References. The InstanceDeclarationHierarchy for "BetaType" is described in Table 18 where the top half of the table is the table of Nodes and the bottom half is the table of References (the HasModellingRule references have been omitted from the table for the sake of clarity; all Nodes except for 1, 6, and 5 have ModellingRules). All InstanceDeclarations of the InstanceDeclarationHierarchy and all Nodes referenced with a non-hierarchical Reference from such an InstanceDeclaration are added to the table. Hierarchical References to Nodes without a ModellingRule are not considered.

Table 18 - The InstanceDeclarationHierarchy for BetaType

BrowsePath	Nodeld
1	6
/F	7
/B	8
/F/H	9
/B/J	10
/B/H	9

Source Path	ReferenceType	Target Path	TargetNodeld
1	HasComponent	/F	-
1	HasComponent	/B	-
1	Z	/B	-
1	HasTypeDefinition	-	BetaType
/F	HasComponent	/F/H	-
/F	HasTypeDefinition	-	BaseObjectType
/B	HasProperty	/B/J	-
/B	HasTypeDefinition	-	BaseObjectType
/F/H	HasTypeDefinition	-	PropertyType
/B/J	HasTypeDefinition	-	PropertyType
/B	HasComponent	/B/H	-
/B/H	HasTypeDefinition	-	BaseDataVariableType

Multiple *BrowsePaths* to the same *Node* shall be treated as separate *Nodes*. An *Instance* may provide different *Nodes* for each *BrowsePath*.

The fully-inherited *InstanceDeclarationHierarchy* for "BetaType" can now be constructed by merging the *InstanceDeclarationHierarchy* for "AlphaType". The result is shown in Table 19 where the entries added from "AlphaType" are shaded with grey.

Table 19 - The Fully-Inherited InstanceDeclarationHierarchy for BetaType

BrowsePath	Nodeld
1	6
/F	7
/B	8
/F/H	9
/B/J	10
/B/H	9
/B/D	4
/C	3

Source Path	ReferenceType	Target Path	TargetNodeld
1	HasComponent	/F	-
1	HasComponent	/B	-
1	Z	/B	-
1	HasTypeDefinition	-	BetaType
/F	HasComponent	/F/H	-
/F	HasTypeDefinition	•	BaseObjectType
/B	HasProperty	/B/J	-
/B	HasTypeDefinition	-	BaseObjectType
/F/H	HasTypeDefinition	-	PropertyType
/B/J	HasTypeDefinition	•	PropertyType
/B	HasComponent	/B/H	-
/B/H	HasTypeDefinition	-	BaseDataVariableType
1	HasNotifier	/B	-
/B	HasProperty	/B/D	-
1	HasComponent	/C	-
1	Υ	/C	-
/C	HasTypeDefinition	1	BaseDataVariableType
/B/D	HasTypeDefinition	-	PropertyType
/B/D	X	/C	-

The *BrowsePath* "/B" already exists in the table so it does not need to be added. However, the *HasNotifier* reference from "/" to "/B" does not exist and was added.

The Nodes and References defined in Table 19 can be used to create the fully-inherited InstanceDeclarationHierarchy shown in Figure 14. The fully-inherited InstanceDeclarationHierarchy contains all necessary information about a TypeDefinitionNode regarding its complex structure without needing any additional information from its supertypes.

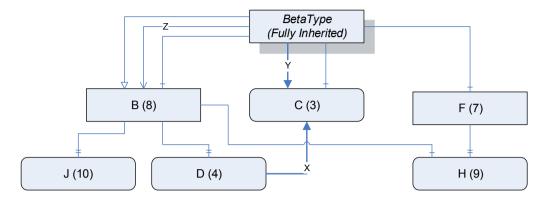


Figure 14 - The Fully-Inherited InstanceDeclarationHierarchy for BetaType

6.3.3.3 Overriding InstanceDeclarations

A subtype overrides an *InstanceDeclaration* by specifying an *InstanceDeclaration* with the same *BrowsePath*. An overridden *InstanceDeclaration* shall have the same *NodeClass* and *BrowseName*. The *TypeDefinitionNode* of the overridden *InstanceDeclaration* shall be the same or a subtype of the *TypeDefinitionNode* specified in the supertype.

When overriding an *InstanceDeclaration* it is necessary to provide *hierarchical References* that link the new *Node* back to the subtype (the *References* are used to determine the *BrowsePath* of the *Node*).

It is only possible to override *InstanceDeclarations* that are directly referenced from the *TypeDefinitionNode*. If an indirect referenced *InstanceDeclaration*, such as "J" in Figure 14, has to be overridden, then the directly referenced *InstanceDeclarations* that includes "J", in that case "B", have to be overridden first and then "J" can be overridden in a second step.

A Reference is replaced if it goes between two overridden Nodes and has the same ReferenceType as a Reference defined in the supertype. The Reference specified in the subtype may be a subtype of the ReferenceType used in the parent type.

Any non-hierarchical References specified for the overridden InstanceDeclaration are treated as new References unless the ReferenceType only allows a single Reference per SourceNode. If this situation exists the subtype can change the target of the Reference but the new target shall have the same NodeClass and for Objects and Variables also the same type or a subtype of the type specified in the parent.

The overriding *Node* may specify new values for the *Node Attributes* other than the *NodeClass* or *BrowseName*, however, the restrictions on *Attributes* specified in 6.2.6 apply. Any *Attribute* provided by the overriding *InstanceDeclaration*, additional optional *Attributes* may be added.

The ModellingRule of the overriding InstanceDeclaration may be changed as defined in 6.4.4.3.

Each overriding *InstanceDeclaration* needs its own *HasModellingRule* and *HasTypeDefinition References*, even if they have not been changed.

A subtype should not override a *Node* unless it needs to change it.

The semantics of certain *TypeDefinitionNodes* and *ReferenceTypes* may impose additional restrictions with regard to overriding *Nodes*.

6.4 Instances of ObjectTypes and VariableTypes

6.4.1 Overview

Any Instance of a TypeDefinitionNode will be the root of a hierarchy which mirrors the InstanceDeclarationHierarchy for the TypeDefinitionNode. Each Node in the hierarchy of the Instance will have a BrowsePath which may be the same as the BrowsePath for one of the InstanceDeclarations in the hierarchy of the TypeDefinitionNode. The InstanceDeclaration with the same BrowsePath is called the InstanceDeclaration for the Node. If a Node has an InstanceDeclaration then it shall have the same BrowseName and NodeClass as the InstanceDeclaration and, in cases of Variables and Objects, the same TypeDefinitionNode or a subtype of it.

Instances may reference several *Nodes* with the same *BrowsePath*. *Clients* that need to distinguish between the *Nodes* based on the *InstanceDeclarationHierarchy* and the *Nodes* that are not based on the *InstanceDeclarationHierarchy* can accomplish this using the TranslateBrowsePathsToNodelds service defined in Part 4.

6.4.2 Creating an Instance

Instances inherit the initial values for the *Attributes* that they have in common with the *TypeDefinitionNode* from which they are instantiated, with the exceptions of the *NodeClass* and *NodeId*.

When a Server creates an instance of a TypeDefinitionNode it shall create the same hierarchy of Nodes beneath the new Object or Variable depending on the ModellingRule of each InstanceDeclaration. Standard ModellingRules are defined in 6.4.4.5. The Nodes within the newly created hierarchy may be copies of the InstanceDeclarations, the InstanceDeclaration itself or another Node in the AddressSpace that has the same TypeDefinitionNode and BrowseName. If new copies are created, then the Attribute values of the InstanceDeclarations are used as the initial values.

Figure 15 provides a simple example of a *TypeDefinitionNode* and an *Instance*. *Nodes* referenced by the *TypeDefinitionNode* without a *ModellingRule* do not appear in the instance. *Instances* may have children with duplicate *BrowseNames*; however, only one of those children will correspond to the *InstanceDeclaration*.

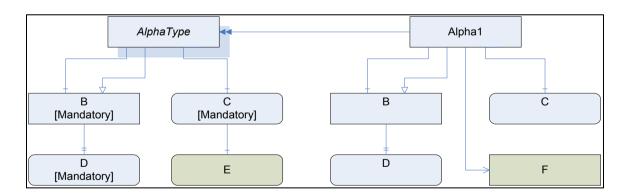


Figure 15 - An Instance and its TypeDefinitionNode

It is up to the *Server* to decide which *InstanceDeclarations* appear in any single instance. In some cases, the *Server* will not define the entire instance and will provide remote references to *Nodes* in another *Server*. The *ModellingRules* described in 6.4.4.5 allow *Servers* to indicate that some *Nodes* are always present; however, the *Client* shall be prepared for the case where the *Node* exists in a different *Server*.

A Client can use the information of TypeDefinitionNodes to access Nodes which are in the hierarchy of the instance. It shall pass the NodeId of the instance and the BrowsePath of the child Nodes based on the TypeDefinitionNode to the TranslateBrowsePathsToNodeIds service (see Part 4). This Service returns the NodeId for each of the child Nodes. If a child Node exists then the BrowseName and NodeClass shall match the InstanceDeclaration. In the case of

Objects or Variables, also the TypeDefinitionNode shall either match or be a subtype of the original TypeDefinitionNode.

6.4.3 Constraints on an Instance

Objects and Variables may change their Attribute values after being created. Special rules apply for some Attributes as defined in 6.2.6.

Additional References may be added to the Nodes, and References may be deleted as long as the ModellingRules defined on the InstanceDeclarations of the TypeDefinitionNode are still fulfilled.

For Variables and Objects the HasTypeDefinition Reference shall always point to the same TypeDefinitionNode as the InstanceDeclaration or a subtype of it.

If two *InstanceDeclarations* of the fully-inherited *InstanceDeclarationHierarchy* have been connected directly with several *References*, all those *References* shall connect the same *Nodes*. An example is given in Figure 16. The instances A1 and A2 are allowed since B1 references the same *Node* with both *References*, whereas A3 is not allowed since two different *Nodes* are referenced. Note that this restriction only applies for directly connected *Nodes*. For example, A2 references a C1 directly and a different C1 via B1.

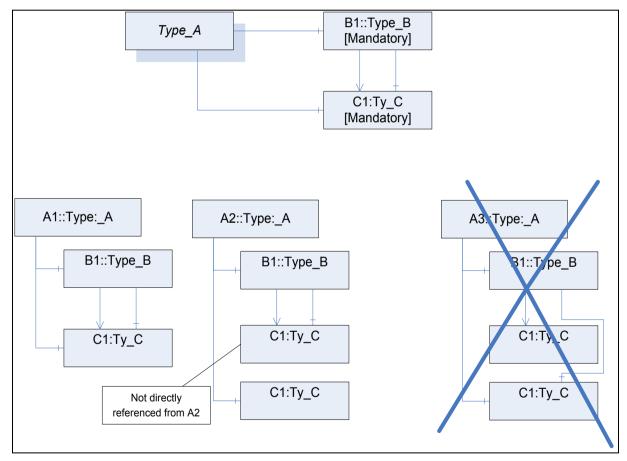


Figure 16 – Example for several References between InstanceDeclarations

6.4.4 ModellingRules

6.4.4.1 General

For a definition of *ModellingRules*, see 6.4.4.5. Other parts of this series of standards may define additional *ModellingRules*. *ModellingRules* are an extendable concept in OPC UA; therefore vendors may define their own *ModellingRules*.

Note that the *ModellingRules* defined in this standard do not define how to deal with non-hierarchical *References* between *InstanceDeclarations*, i.e. it is *Server*-specific if those

References exist in an instance hierarchy or not. Other *ModellingRules* may define behaviour for non-hierarchical *References* between *InstanceDeclaration* as well.

ModellingRules are represented in the AddressSpace as Objects of the ObjectType ModellingRuleType. There are some Properties defining common semantic of ModellingRules. This edition of this standard only specifies one Property for ModellingRules. Future editions may define additional Properties for ModellingRules. Part 5 specifies the representation of the ModellingRule Objects, their Properties and their type in the AddressSpace. The semantic of the Properties for ModellingRules is defined in 6.4.4.2.

Subclause 6.4.4.4 defines how the *ModellingRule* may be changed when instantiating *InstanceDeclarations* with respect to the *Properties*. Subclause 6.4.4.3 defines how the *ModellingRule* may be changed when overriding *InstanceDeclarations* in subtypes with respect to the *Properties*.

6.4.4.2 Properties describing ModellingRules

6.4.4.2.1 NamingRule

NamingRule is a mandatory Property of a ModellingRule. It specifies the purpose of an InstanceDeclaration. Each InstanceDeclaration references a ModellingRule and thus the NamingRule is defined per InstanceDeclaration.

Three values are allowed for the *NamingRule* of a *ModellingRule*: *Optional*, *Mandatory*, and *Constraint*.

The following semantic is valid for the entire life-time of an instance that is based on a *TypeDefinitionNode* having an *InstanceDeclaration*.

For an instance A1 of a *TypeDefinitionNode* AlphaType with an *InstanceDeclaration* B1 having a *ModellingRule* using the *NamingRule Optional* the following rule applies: For each *BrowsePath* from AlphaType to B1 the instance A1 may or may not have a *similar Node* (see 6.2.4) for B1 with the same *BrowsePath*. If such a *Node* exists then the TranslateBrowsePathsToNodelds *Service* (see Part 4) returns this *Node* as the first entry in the list.

For an instance A1 of a *TypeDefinitionNode* AlphaType with an *InstanceDeclaration* B1 having a *ModellingRule* using the *NamingRule Mandatory* the following rule applies: For each *BrowsePath* from AlphaType to B1 the instance A1 shall have a *similar Node* (see 6.2.4) for B1 using the same *BrowsePath* if all *Nodes* of the *BrowsePath* exist. For example, if a *Node* in the *BrowsePath* has a *NamingRule Optional* and is omitted in the instance, then all children of this *Node* would also be omitted, independent of their *ModellingRules*.

If an *InstanceDeclaration* has a *ModellingRule* using the *NamingRule Constraint* it identifies that the *BrowseName* of the *InstanceDeclaration* is of no significance but other semantic is defined with the *ModellingRule*. The TranslateBrowsePathsToNodelds *Service* (see Part 4) can typically not be used to access instances based on those *InstanceDeclarations*.

6.4.4.3 Subtyping Rules for Properties of ModellingRules

It is allowed that subtypes override *ModellingRules* on their *InstanceDeclarations*. As a general rule for subtyping, constraints shall only be tightened, not loosened. Therefore, it is not allowed to specify on the supertype that an instance shall exist with the name (*NamingRule Mandatory*) and on the subtype make this optional (*NamingRule Optional*). Table 20 specifies the allowed changes on the *Properties* when exchanging the *ModellingRules* in the subtype.

Table 20 – Rule for ModellingRules Properties when Subtyping

	Value on supertype	Value on subtype
NamingRule	Mandatory	Mandatory
NamingRule	Optional	Mandatory or Optional
NamingRule	Constraint	Constraint

6.4.4.4 Instantiation Rules for Properties of ModellingRules

There are two different use cases when creating an instance 'A' based on a *TypeDefinitionNode* 'A_Type'. Either 'A' is used as normal instance or it is used as *InstanceDeclaration* of another *TypeDefinitionNode*.

In the first case, it is not required that newly created or referenced instances based on *InstanceDeclarations* have a *ModellingRule*, however, it is allowed that they have any *ModellingRule* independent of the *ModellingRule* of their *InstanceDeclaration*.

In Figure 17 an example is given. The instances A1, A2, and A3 are all valid instances of Type_A, although B of A1 has no *ModellingRule* and B of A3 has a different *ModellingRule* than B of Type_A.

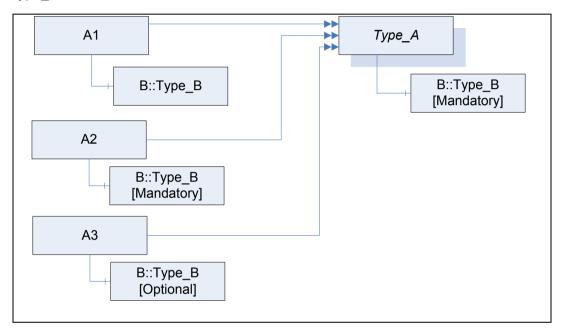


Figure 17 - Example on changing instances based on InstanceDeclarations

In the second case, all instances that are referenced directly or indirectly from 'A' based on *InstanceDeclarations* of 'A_Type' initially maintain the same *ModellingRule* as their *InstanceDeclarations*. The *ModellingRules* may be updated; the allowed changes to the *ModellingRules* of these *Nodes* are the same as those defined for subtyping in 6.4.4.3.

In Figure 18 an example of such a scenario is given. Type_B uses an *InstanceDeclaration* based on Type_A (upper part of the Figure). Later on the *ModellingRule* of the *InstanceDeclaration* A1 is changed (lower part of the Figure). A1 has become the *NamingRule* of *Mandatory* (changed from *Optional*).

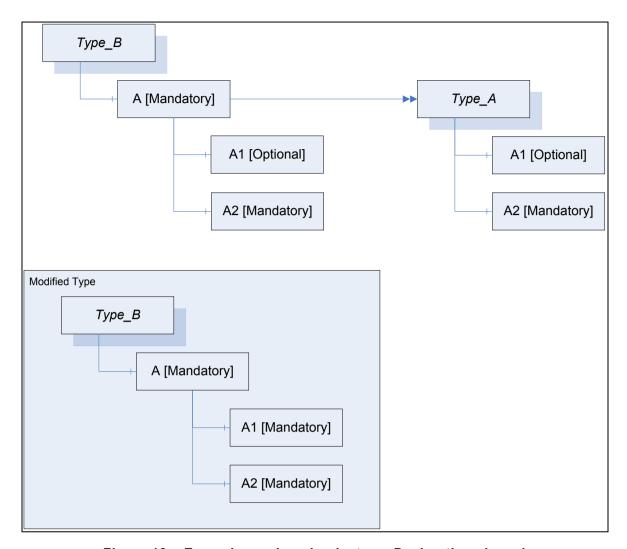


Figure 18 – Example on changing InstanceDeclarations based on an InstanceDeclaration

6.4.4.5 Standard ModellingRules

6.4.4.5.1 Titles of Standard ModellingRules

Optional

ExposesItsArray

OptionalPlaceholder

MandatoryPlaceholder

The remainder of 6.4.4.5 defines *ModellingRules*. In Table 21 the *Properties* of those *ModellingRules* are summarized.

Title NamingRule

Mandatory Mandatory

Optional

Constraint

Constraint

Constraint

Table 21 - Properties of ModellingRules

6.4.4.5.2 Mandatory

An InstanceDeclaration marked with the ModellingRule Mandatory fulfils exactly the semantic defined for the NamingRule Mandatory. That means that for each existing BrowsePath on the instance a similar Node shall exist, but it is not defined whether a new Node is created or an existing Node is referenced.

For example, the *TypeDefinitionNode* of a functional block "Al_BLK_TYPE" will have a setpoint "SP1". An instance of this type "Al_BLK_1" will have a newly-created setpoint "SP1" as a similar Node to the *InstanceDeclaration* SP1. Figure 19 illustrates the example.

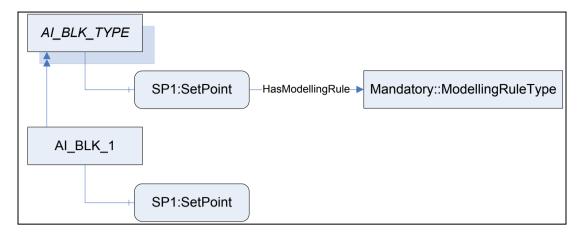


Figure 19 - Use of the Standard ModellingRule Mandatory

In 6.4.4.5.3 a complex example combining the *Mandatory* and *Optional ModellingRules* is given.

6.4.4.5.3 Optional

An InstanceDeclaration marked with the ModellingRule Optional fulfils exactly the semantic defined for the NamingRule Optional. That means that for each existing BrowsePath on the instance a similar Node may exist, but it is not defined whether a new Node is created or an existing Node is referenced.

In Figure 20 an example using the *ModellingRules Optional* and *Mandatory* is shown. The example contains an *ObjectType* Type_A and all valid combinations of instances named A1 to A13. Note that if the optional B is provided, the mandatory E has to be provided as well, otherwise not. F is referenced by C and D. On the instance, this can be the same *Node* or two different *Nodes* with the same *BrowseName* (similar *Node* to *InstanceDeclaration* F). Not considered in the example is if the instances have *ModellingRules* or not. It is assumed that each F is similar to the *InstanceDeclaration* F, etc.

If there would be a non-hierarchical *Reference* between E and F in the *InstanceDeclaration-Hierarchy*, it is not specified if it occurs in the instance hierarchy or not. In the case of A10, there could be a reference from E to one F but not to the other F, or to both or none of them.

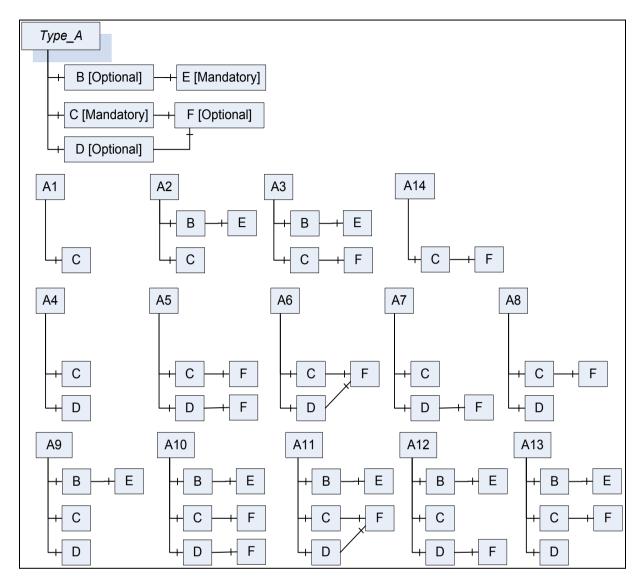


Figure 20 – Example using the Standard ModellingRules Optional and Mandatory

6.4.4.5.4 ExposesItsArray

The *ExposesItsArray ModellingRule* exposes a special semantic on *VariableTypes* having a single- or multidimensional array as the data type. It indicates that each value of the array will also be exposed as a *Variable* in the *AddressSpace*.

The ExposesItsArray ModellingRule can only be applied on InstanceDeclarations of NodeClass Variable that are part of a VariableType having a single- or multidimensional array as its data type.

The Variable A having this ModellingRule shall be referenced by a forward hierarchical Reference from a VariableType B. B shall have a ValueRank value that is equal to or larger than zero. A should have a data type that reflects at least parts of the data that is managed in the array of B. Each instance of B shall reference one instance of A for each of its array elements. The used Reference shall be of the same type as the hierarchical Reference that connects B with A or a subtype of it. If there are more than one forward hierarchical References between A and B, then all instances based on B shall be referenced with all those References.

Figure 21 gives an example. A is an instance of Type_A having two entries in its value array. Therefore it references two instances of the same type as the *InstanceDeclaration* ArrayExpose. The *BrowseNames* of those instances are not defined by the *ModellingRule*. In general, it is not possible to get a *Variable* representing a specific entry in the array (e.g. the second). *Clients* will typically either get the array or access the *Variables* directly, so there is no need to provide that information.

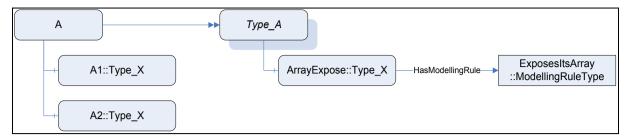


Figure 21 - Example on using ExposesItsArray

It is allowed to reference A by other *InstanceDeclarations* as well. Those *References* have to be reflected on each instance based on A.

Figure 22 gives an example. The *Property* EUUnit is referenced by ArrayExpose and therefore each instance based on ArrayExpose references the instance based on the *InstanceDeclaration* EUUnit.

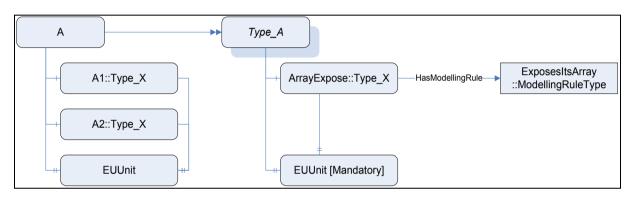


Figure 22 - Complex example on using ExposesItsArray

6.4.4.5.5 OptionalPlaceholder

For Object and Variable the intention of the ModellingRule OptionalPlaceholder is to expose the information that a complex TypeDefinition expects from instances of the TypeDefinition to add instances with specific References without defining BrowseNames for the instances. For example, a Device might have a Folder for DeviceParameters, and the DeviceParameters should be connected with a HasComponent Reference. However, the names of the DeviceParameters are specific to the instances. The example is shown in Figure 23, where an instance Device A adds two DeviceParameters in the Folder.

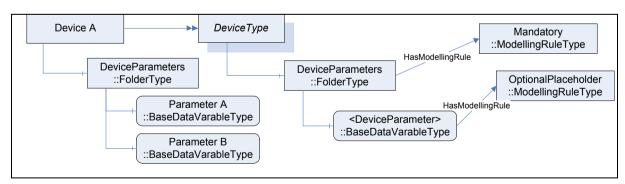


Figure 23 - Example using Optional Placeholder with an Object and Variable

The ModellingRule OptionalPlaceholder adds no additional constraints on instances of the TypeDefinition. It just provides useful information when exposing a TypeDefinition. When the InstanceDeclaration is complex, i.e. it references other InstanceDeclarations with hierarchical References, these InstanceDeclarations are not further considered for instantiating the TypeDefinition.

It is recommended that the *BrowseName* and the *DisplayName* of *InstanceDeclarations* having the *OptionalPlaceholder ModellingRule* should be enclosed within angle brackets.

When overriding the InstanceDeclaration, the ModellingRule shall remain OptionalPlaceholder.

For Methods, the ModellingRule OptionalPlaceholder is used to define the BrowseName where subtypes and instances provide more information. The Method definition with the OptionalPlaceholder only defines the BrowseName. An instance or subtype defines the InputArguments and OutputArguments. A subtype shall also change the ModellingRule to Optional or Mandatory. The Method is optional for instances. For example, a Device might have a Method to perform calibration however the specific arguments for the Method depend on the instance of the Device. In this example Device A does not implement the Method, Device B implements the Method with no arguments and Device C implements the Method accepting a mode argument to select how the calibration is to be performed. The example is shown in Figure 24

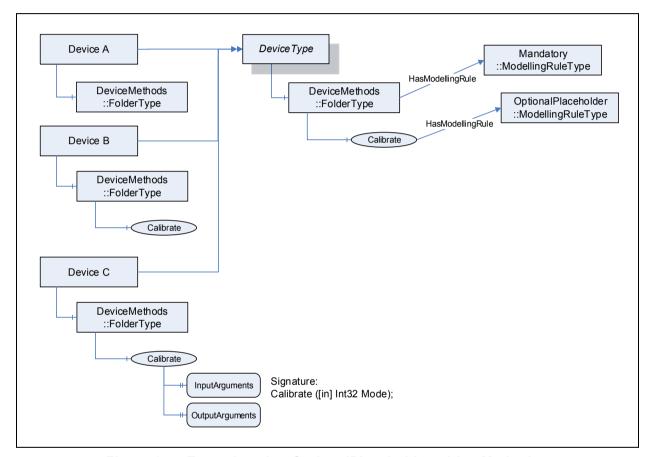


Figure 24 - Example using OptionalPlaceholder with a Method

6.4.4.5.6 MandatoryPlaceholder

For Object and Variable the ModellingRule MandatoryPlaceholder has a similar intention as the ModellingRule OptionalPlaceholder. It exposes the information that a TypeDefinition expects of instances of the TypeDefinition to add instances defined by the InstanceDeclaration. However, MandatoryPlaceholder requires that at least one of those instances shall exist.

For example, when the DeviceType requires that at least one DeviceParameter shall exist without specifying the *BrowseName* for it, it uses *MandatoryPlaceholder* as shown in Figure 25. Device A is a valid instance as it has the required DeviceParameter. Device B is not valid as it uses the wrong *ReferenceType* to reference a DeviceParameter (*Organizes* instead of *HasComponent*) and Device C is not valid because it does not provide a DeviceParameter at all.

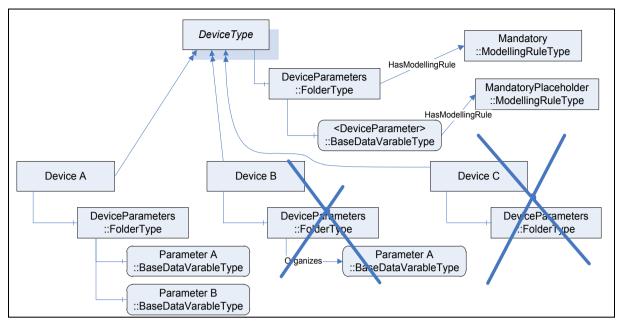


Figure 25 - Example on using MandatoryPlaceholder for Object and Variable

The ModellingRule MandatoryPlaceholder requires that each instance provides at least one instance with the TypeDefinition of the InstanceDeclaration or a subtype, and is referenced with the same ReferenceType or a subtype as the InstanceDeclaration. It does not require a specific BrowseName and thus cannot be used for the TranslateBrowsePathsToNodelds Service (see Part 4).

When the *InstanceDeclaration* is complex, i.e. it references other *InstanceDeclarations* with hierarchical *References*, these *InstanceDeclarations* are not further considered for instantiating the *TypeDefinition*.

It is recommended that the *BrowseName* and the *DisplayName* of *InstanceDeclarations* having the *MandatoryPlaceholder ModellingRule* should be enclosed within angle brackets.

When overriding the *InstanceDeclaration*, the *ModellingRule* shall remain *MandatoryPlaceholder*.

For Methods, the ModellingRule MandatoryPlaceholder is used to define the BrowseName where subtypes and instances provide more information. The Method definition with the MandatoryPlaceholder only defines the BrowseName. An instance or subtype defines the InputArguments and OutputArguments. A subtype shall also change the ModellingRule to Mandatory. The Method is mandatory for instances.

6.5 Changing Type Definitions that are already used

There is no behaviour specified regarding subtypes and instances when changing *ObjectTypes* and *VariableTypes*. It is *Server*-dependent, if those changes are reflected on the subtypes and instances of the types. However, all constraints defined for subtypes and instances have to be fulfilled. For example, it is not allowed to add a *Property* using the *ModellingRule Mandatory* on a type if instances of this type exist without the *Property*. In that case, the *Server* either has to add the *Property* to all instances of the type or adding the *Property* on the type has to be rejected.

7 Standard ReferenceTypes

7.1 General

This standard defines *ReferenceTypes* as an inherent part of the OPC UA Address Space Model. Figure 26 informally describes the hierarchy of these *ReferenceTypes*. Other parts of this series of standards may specify additional *ReferenceTypes*. The remainder of 7 defines the *ReferenceTypes*. Part 5 defines their representation in the *AddressSpace*.

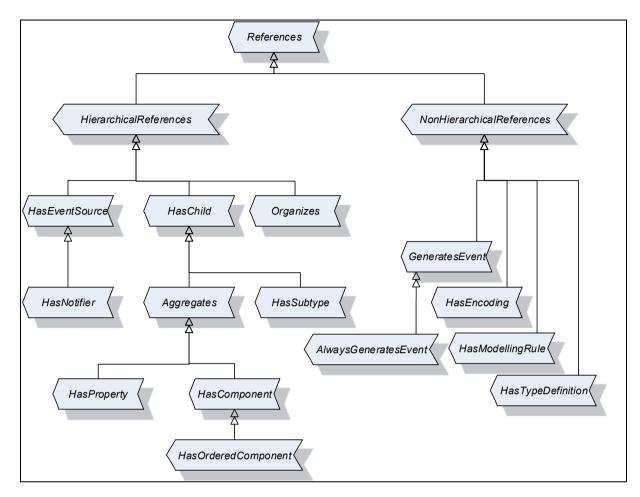


Figure 26 - Standard ReferenceType Hierarchy

7.2 References ReferenceType

The Reference Type is an abstract Reference Type; only subtypes of it can be used.

There is no semantic associated with this *ReferenceType*. This is the base type of all *ReferenceTypes*. All *ReferenceTypes* shall be a subtype of this base *ReferenceType* – either direct or indirect. The main purpose of this *ReferenceType* is allowing simple filter and queries in the corresponding *Services* of Part 5.

There are no constraints defined for this abstract ReferenceType.

7.3 HierarchicalReferences ReferenceType

The HierarchicalReferences ReferenceType is an abstract ReferenceType; only subtypes of it can be used.

The semantic of *HierarchicalReferences* is to denote that *References* of *HierarchicalReferences* span a hierarchy. It means that it may be useful to present *Nodes* related with *References* of this type in a hierarchical-like way. *HierarchicalReferences* does not forbid loops. For example, starting from *Node* "A" and following *HierarchicalReferences* it may be possible to browse to *Node* "A", again.

It is not permitted to have a *Property* as *SourceNode* of a *Reference* of any subtype of this abstract *ReferenceType*.

It is not allowed that the *SourceNode* and the *TargetNode* of a *Reference* of the *ReferenceType HierarchicalReferences* are the same, that is, it is not allowed to have self-references using *HierarchicalReferences*.

7.4 NonHierarchicalReferences ReferenceType

The NonHierarchicalReferences ReferenceType is an abstract ReferenceType; only subtypes of it can be used.

The semantic of NonHierarchicalReferences is to denote that its subtypes do not span a hierarchy and should not be followed when trying to present a hierarchy. To distinguish hierarchical and non-hierarchical References, all concrete ReferenceTypes shall inherit from either hierarchical References or non-hierarchical References, either direct or indirect.

There are no constraints defined for this abstract ReferenceType.

7.5 HasChild ReferenceType

The *HasChild ReferenceType* is an abstract *ReferenceType*; only subtypes of it can be used. It is a subtype of *HierarchicalReferences*.

The semantic is to indicate that *References* of this type span a non-looping hierarchy.

Starting from *Node* "A" and only following *References* of the subtypes of the *HasChild ReferenceType* it shall never be possible to return to "A". But it is allowed that following the *References* there may be more than one path leading to another *Node* "B".

7.6 Aggregates ReferenceType

The Aggregates ReferenceType is an abstract ReferenceType; only subtypes of it can be used. It is a subtype of HasChild.

The semantic is to indicate a part (the *TargetNode*) belongs to the *SourceNode*. It does not specify the ownership of the *TargetNode*.

There are no constraints defined for this abstract *ReferenceType*.

7.7 HasComponent ReferenceType

The HasComponent ReferenceType is a concrete ReferenceType that can be used directly. It is a subtype of the Aggregates ReferenceType.

The semantic is a part-of relationship. The *TargetNode* of a *Reference* of the *HasComponent ReferenceType* is a part of the *SourceNode*. This *ReferenceType* is used to relate *Objects* or *ObjectTypes* with their containing *Objects*, *DataVariables*, and *Methods*. This *ReferenceType* is also used to relate complex *Variables* or *VariableTypes* with their *DataVariables*.

Like all other ReferenceTypes, this ReferenceType does not specify anything about the ownership of the parts, although it represents a part-of relationship semantic. That is, it is not specified if the TargetNode of a Reference of the HasComponent ReferenceType is deleted when the SourceNode is deleted.

The TargetNode of this ReferenceType shall be a Variable, an Object or a Method.

If the *TargetNode* is a *Variable*, the *SourceNode* shall be an *Object*, an *ObjectType*, a *DataVariable* or a *VariableType*. By using the *HasComponent Reference*, the *Variable* is defined as *DataVariable*.

If the TargetNode is an Object or a Method, the SourceNode shall be an Object or ObjectType.

7.8 HasProperty ReferenceType

The HasProperty ReferenceType is a concrete ReferenceType that can be used directly. It is a subtype of the Aggregates ReferenceType.

The semantic is to identify the *Properties* of a *Node*. *Properties* are described in 4.4.2.

The SourceNode of this ReferenceType can be of any NodeClass. The TargetNode shall be a Variable. By using the HasProperty Reference, the Variable is defined as Property. Since

Properties shall not have Properties, a Property shall never be the SourceNode of a HasProperty Reference.

7.9 HasOrderedComponent ReferenceType

The HasOrderedComponent ReferenceType is a concrete ReferenceType that can be used directly. It is a subtype of the HasComponent ReferenceType.

The semantic of the *HasOrderedComponent ReferenceType* – besides the semantic of the *HasComponent ReferenceType* – is that when browsing from a *Node* and following *References* of this type or its subtype all *References* are returned in the Browse *Service* defined in Part 4 in a well-defined order. The order is *Server*-specific, but the *Client* can assume that the *Server* always returns them in the same order.

There are no additional constraints defined for this *ReferenceType*.

7.10 HasSubtype ReferenceType

The HasSubtype ReferenceType is a concrete ReferenceType that can be used directly. It is a subtype of the HasChild ReferenceType.

The semantic of *this ReferenceType* is to express a subtype relationship of types. It is used to span the *ReferenceType* hierarchy, whose semantic is specified in 5.3.3.3; a *DataType* hierarchy is specified in 5.8.3, and other subtype hierarchies are specified in Clause 6.

The SourceNode of References of this type shall be an ObjectType, a VariableType, a DataType or a ReferenceType and the TargetNode shall be of the same NodeClass as the SourceNode. Each ReferenceType shall be the TargetNode of at most one Reference of type HasSubtype.

7.11 Organizes ReferenceType

The Organizes ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of HierarchicalReferences.

The semantic of this *ReferenceType* is to organise *Nodes* in the *AddressSpace*. It can be used to span multiple hierarchies independent of any hierarchy created with the non-looping *Aggregates References*.

The *SourceNode* of *References* of this type shall be an *Object* or a *View*. If it is an *Object* then it should be an *Object* of the *ObjectType FolderType* or one of its subtypes (see 5.5.3).

The TargetNode of this ReferenceType can be of any NodeClass.

7.12 HasModellingRule ReferenceType

The *HasModellingRule ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to bind the *ModellingRule* to an *Object*, *Variable* or *Method*. The *ModellingRule* mechanisms are described in 6.4.4.

The SourceNode of this ReferenceType shall be an Object, Variable or Method. The TargetNode shall be an Object of the ObjectType "ModellingRule" or one of its subtypes.

Each Node shall be the SourceNode of at most one HasModellingRule Reference.

7.13 HasTypeDefinition ReferenceType

The HasTypeDefinition ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of NonHierarchicalReferences.

The semantic of this *ReferenceType* is to bind an *Object* or *Variable* to its *ObjectType* or *VariableType*, respectively. The relationships between types and instances are described in 4.5.

The SourceNode of this ReferenceType shall be an Object or Variable. If the SourceNode is an Object, then the TargetNode shall be an ObjectType; if the SourceNode is a Variable, then the TargetNode shall be a VariableType.

Each Variable and each Object shall be the SourceNode of exactly one HasTypeDefinition Reference.

7.14 HasEncoding ReferenceType

The HasEncoding ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of NonHierarchicalReferences.

The semantic of this *ReferenceType* is to reference *DataTypeEncodings* of a subtype of the *Structure DataType*.

The SourceNode of References of this type shall be a subtype of the Structure DataType.

The TargetNode of this ReferenceType shall be an Object of the ObjectType DataTypeEncodingType or one of its subtypes (see 5.8.4).

7.15 Generates Event

The GeneratesEvent ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of NonHierarchicalReferences.

The semantic of this *ReferenceType* is to identify the types of *Events* instances of *ObjectTypes* or *VariableTypes* may generate and *Methods* may generate on each *Method* call.

The SourceNode of References of this type shall be an ObjectType, a VariableType or a Method.

The *TargetNode* of this *ReferenceType* shall be an *ObjectType* representing *EventTypes*, that is, the *BaseEventType* or one of its subtypes.

7.16 AlwaysGeneratesEvent

The AlwaysGeneratesEvent ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of GeneratesEvent.

The semantic of this *ReferenceType* is to identify the types of *Events Methods* have to generate on each *Method* call.

The SourceNode of References of this type shall be a Method.

The *TargetNode* of this *ReferenceType* shall be an *ObjectType* representing *EventTypes*, that is, the *BaseEventType* or one of its subtypes.

7.17 HasEventSource

The HasEventSource ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of HierarchicalReferences.

The semantic of this *ReferenceType* is to relate event sources in a hierarchical, non-looping organization. This *ReferenceType* and any subtypes are intended to be used for discovery of *Event* generation in a *Server*. They are not required to be present for a *Server* to generate an *Event* from its source (causing the *Event*) to its notifying *Nodes*. In particular, the root notifier of a *Server*, the *Server Object* defined in Part 5, is always capable of supplying all *Events* from a *Server* and as such has implied *HasEventSource References* to every event source in a *Server*.

The SourceNode of this ReferenceType shall be an Object that is a source of event subscriptions. A source of event subscriptions is an Object that has its "SubscribeToEvents" bit set within the EventNotifier Attribute.

The *TargetNode* of this *ReferenceType* can be a *Node* of any *NodeClass* that can generate event notifications via a subscription to the reference source.

Starting from *Node* "A" and only following *References* of the *HasEventSource ReferenceType* or of its subtypes it shall never be possible to return to "A". But it is permitted that, following the *References*, there may be more than one path leading to another *Node* "B".

7.18 HasNotifier

The HasNotifier ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of HasEventSource.

The semantic of this ReferenceType is to relate Object Nodes that are notifiers with other notifier Object Nodes. The ReferenceType is used to establish a hierarchical organization of event notifying Objects. It is a subtype of the HasEventSource ReferenceType defined in 7.16.

The SourceNode of this ReferenceType shall be Objects or Views that are a source of event subscriptions. The TargetNode of this ReferenceType shall be Objects that are a source of event subscriptions. A source of event subscriptions is an Object that has its "SubscribeToEvents" bit set within the EventNotifier Attribute.

If the *TargetNode* of a *Reference* of this type generates an *Event*, then this *Event* shall also be provided in the *SourceNode* of the *Reference*.

An example of a possible organization of *Event References* is represented in Figure 27. In this example an unfiltered *Event* subscription directed to the "Pump" *Object* will provide the *Event* sources "Start" and "Stop" to the subscriber. An unfiltered *Event* subscription directed to the "Area 1" *Object* will provide *Event* sources from "Machine B", "Tank A" and all notifier sources below "Tank A".

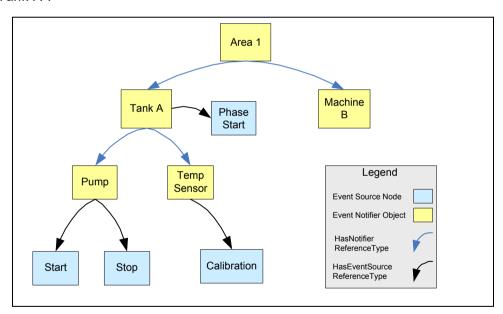


Figure 27 - Event Reference Example

A second example of a more complex organization of *Event References* is represented in Figure 28. In this example, explicit *References* are included from the *Server's Server Object*, which is a source of all *Server Events*. A second *Event* organization has been introduced to collect the *Events* related to "Tank Farm 1". An unfiltered *Event* subscription directed to the "Tank Farm 1" *Object* will provide *Event* sources from "Tank B", "Tank A" and all notifier sources below "Tank B" and "Tank A".

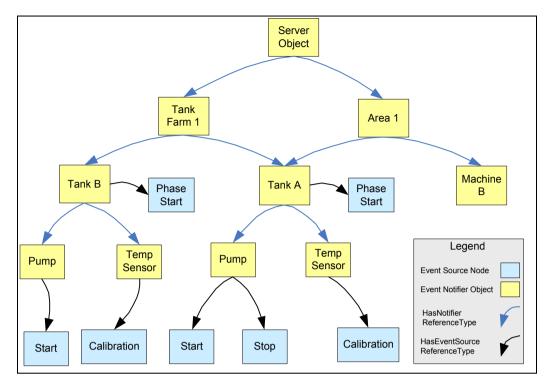


Figure 28 - Complex Event Reference Example

8 Standard DataTypes

8.1 General

The remainder of 8 defines *DataTypes*. Their representation in the *AddressSpace* and the *DataType* hierarchy is specified in Part 5. Other parts of this series of standards may specify additional *DataTypes*.

8.2 Nodeld

8.2.1 General

This *Built-in DataType* is composed of three elements that identify a *Node* within a *Server*. They are defined in Table 22.

 Name
 Type
 Description

 NodeId
 structure

 namespaceIndex
 UInt16
 The index for a namespace URI (see 8.2.2).

 identifierType
 Enum
 The format and data type of the identifier (see 8.2.3).

 identifier
 *
 The identifier for a Node in the AddressSpace of an OPC UA Server (see 8.2.4).

Table 22 - Nodeld Definition

See Part 6 for a description of the encoding of the identifier into OPC UA Messages.

8.2.2 NamespaceIndex

The namespace is a URI that identifies the naming authority responsible for assigning the identifier element of the *Nodeld*. Naming authorities include the local *Server*, the underlying system, standards bodies and consortia. It is expected that most *Nodes* will use the URI of the *Server* or of the underlying system.

Using a namespace URI allows multiple OPC UA Servers attached to the same underlying system to use the same identifier to identify the same Object. This enables Clients that connect to those Servers to recognise Objects that they have in common.

Namespace URIs, like *Server* names, are identified by numeric values in OPC UA *Services* to permit more efficient transfer and processing (e.g. table lookups). The numeric values used to

identify namespaces correspond to the index into the *NamespaceArray*. The *NamespaceArray* is a *Variable* that is part of the *Server Object* in the *AddressSpace* (see Part 5 for its definition).

The URI for the OPC UA namespace is:

"http://opcfoundation.org/UA/"

Its corresponding index in the namespace table is 0.

The namespace URI is case sensitive.

8.2.3 IdentifierType

The IdentifierType element identifies the type of the *Nodeld*, its format and its scope. Its values are defined in Table 23.

 Value
 Description

 NUMERIC_0
 Numeric value

 STRING_1
 String value

 GUID_2
 Globally Unique Identifier

 OPAQUE_3
 Namespace specific format

Table 23 - IdentifierType Values

Normally the scope of *Nodelds* is the *Server* in which they are defined. For certain types of *Nodelds*, *Nodelds* can uniquely identify a *Node* within a system, or across systems (e.g. GUIDs). System-wide and globally-unique identifiers allow *Clients* to track *Nodes*, such as work orders, as they move between OPC UA *Servers* as they progress through the system.

Opaque identifiers are identifiers that are free-format byte strings that might or might not be human interpretable.

String identifiers are case sensitive. That is, *Clients* shall consider them case sensitive. *Servers* are allowed to provide alternative *Nodelds* (see 5.2.2) and using this mechanism severs can handle *Nodelds* as case insensitive.

8.2.4 Identifier value

The identifier value element is used within the context of the first three elements to identify the *Node*. Its data type and format is defined by the IdType.

Identifier values of IdType STRING_1 are restricted to 4 096 characters. Identifier values of IdType OPAQUE 3 are restricted to 4 096 bytes.

A null *Nodeld* has special meaning. For example, many services defined in Part 4 define special behaviour if a null *Nodeld* is passed as a parameter. Each IdType has a set of identifier values that represent a null *Nodeld*. These values are summarised in Table 24.

Table 24 - Nodeld Null Values

IdType	Identifier		
NUMERIC_0	0		
STRING_1	A null or Empty String ("")		
GUID_2	A Guid initialised with zeros (e.g. 00000000-0000-0000-000000000)		
OPAQUE_3	A ByteString with Length=0		

A null Nodeld always has a NamespaceIndex equal to 0.

A Node in the AddressSpace shall not have a null as its Nodeld.

8.3 QualifiedName

This *Built-in DataType* contains a qualified name. It is, for example, used as *BrowseName*. Its elements are defined in Table 25. The name part of the *QualifiedName* is restricted to 512 characters.

Table 25 - QualifiedName Definition

Name	Type	Description
QualifiedName	structure	
namespaceIndex	UInt16	Index that identifies the namespace that defines the name. This index is the index of that namespace in the local Server's NamespaceArray. The Client may read the NamespaceArray Variable to access the string value of the namespace.
name	String	The text portion of the QualifiedName.

8.4 Localeld

This Simple DataType is specified as a string that is composed of a language component and a country/region component as specified by https://www.iso.org/standard/57469.html

IETF RFC 5646. The <country/region> component is always preceded by a hyphen. The format of the *LocaleId* string is shown below:

The rules for constructing *LocaleIds* defined by https://www.iso.org/standard/57469.html IETF RFC 5646 are restricted as follows:

- a) this specification permits only zero or one <country/region> component to follow the <language> component;
- b) this specification also permits the "-CHS" and "-CHT" three-letter <country/region> codes for "Simplified" and "Traditional" Chinese locales;
- c) this specification also allows the use of other <country/region> codes as deemed necessary by the *Client* or the *Server*.

Table 26 shows examples of OPC UA *LocaleIds*. *Clients* and *Servers* always provide *LocaleIds* that explicitly identify the language and the country/region.

Table 26 - Localeld Examples

Locale	OPC UA LocaleId
English	en
English (US)	en-US
German	de
German (Germany)	de-DE
German (Austrian)	de-AT

An empty or null string indicates that the Localeld is unknown.

8.5 LocalizedText

This *Built-in DataType* defines a structure containing a String in a locale-specific translation specified in the identifier for the locale. Its elements are defined in Table 27.

Table 27 - LocalizedText Definition

Name	Туре	Description
LocalizedText	structure	
locale	LocaleId	The identifier for the locale (e.g. "en-US").
text	String	The localized text.

8.6 Argument

This Structured DataType defines a Method input or output argument specification. It is for example used in the input and output argument Properties for Methods. Its elements are described in Table 28.

Table 28 - Argument Definition

Name	Туре	Description
Argument	structure	
name	String	The name of the argument.
dataType	Nodeld	The Nodeld of the DataType of this argument.
valueRank	Int32	Indicates whether the <i>dataType</i> is an array and how many dimensions the array has. It may have the following values: n > 1: the dataType is an array with the specified number of dimensions. OneDimension (1): The dataType is an array with one dimension. OneOrMoreDimensions (0): The dataType is an array with one or more dimensions. Scalar (-1): The dataType is not an array. Any (-2): The dataType can be a scalar or an array with any number of dimensions. ScalarOrOneDimension (-3): The dataType can be a scalar or a one dimensional array. NOTE All DataTypes are considered to be scalar, even if they have array-like semantics like ByteString and String.
arrayDimensions	UInt32[]	This field specifies the maximum supported length of each dimension. If the maximum is unknown the value shall be 0. The number of elements shall be equal to the value of the valueRank field. This field shall be null if valueRank ≤ 0. The maximum number of elements of an array transferred on the wire is 2147483647 (max Int32).
description	LocalizedText	A localised description of the argument.

8.7 BaseDataType

This abstract *DataType* defines a value that can have any valid *DataType*.

It defines a special value null indicating that a value is not present.

8.8 Boolean

This Built-in DataType defines a value that is either TRUE or FALSE.

8.9 Byte

This Built-in DataType defines a value in the range of 0 to 255.

8.10 ByteString

This Built-in DataType defines a value that is a sequence of Byte values.

8.11 DateTime

This *Built-in DataType* defines a Gregorian calendar date. Details about this *DataType* are defined in Part 6.

8.12 Double

This *Built-in DataType* defines a value that adheres to the <u>ISO/IEC/IEEE 60559:2011</u> double precision data type definition.

8.13 Duration

This Simple DataType is a Double that defines an interval of time in milliseconds (fractions can be used to define sub-millisecond values). Negative values are generally invalid but may have special meanings where the Duration is used.

8.14 Enumeration

This abstract *DataType* is the base *DataType* for all enumeration *DataTypes* like *NodeClass* defined in 8.30. All *DataTypes* inheriting from this *DataType* have special handling for the encoding as defined in Part 6. All enumeration *DataTypes* shall inherit from this *DataType*.

Some special rules apply when subtyping enumerations. Any enumeration *DataType* not directly inheriting from the *Enumeration DataType* can only restrict the enumeration values of its

supertype. That is, it shall neither add enumeration values nor change the text associated to the enumeration value. As an example, the enumeration Days having {'Mo', 'Tu', 'We', 'Th', 'Fr', 'Sa', 'Su'} as values can be subtyped to the enumeration Workdays having {'Mo', 'Tu', 'We', 'Th', 'Fr'}. The other direction, subtyping Workdays to Days would not be allowed as Days has values not allowed by Workdays ('Sa' and 'Su').

8.15 Float

This *Built-in DataType* defines a value that adheres to the ISO/IEC/IEEE 60559:2011 single precision data type definition.

8.16 **Guid**

This *Built-in DataType* defines a value that is a 128-bit Globally Unique Identifier. Details about this *DataType* are defined in Part 6.

8.17 SBvte

This Built-in DataType defines a value that is a signed integer between −128 and 127 inclusive.

8.18 IdType

This *DataType* is an enumeration that identifies the IdType of a *NodeId*. Its values are defined in Table 23. See 8.2.3 for a description of the use of this *DataType* in *NodeIds*.

8.19 Image

This abstract *DataType* defines a *ByteString* representing an image.

8.20 ImageBMP

This Simple DataType defines a ByteString representing an image in BMP format.

8.21 ImageGIF

This Simple DataType defines a ByteString representing an image in GIF format.

8.22 ImageJPG

This Simple DataType defines a ByteString representing an image in JPG format.

8.23 ImagePNG

This Simple DataType defines a ByteString representing an image in PNG format.

8.24 Integer

This abstract *DataType* defines an integer whose length is defined by its subtypes.

8.25 Int16

This *Built-in DataType* defines a value that is a signed integer between −32 768 and 32 767 inclusive.

8.26 Int32

This *Built-in DataType* defines a value that is a signed integer between −2 147 483 648 and 2 147 483 647 inclusive.

8.27 Int64

This *Built-in DataType* defines a value that is a signed integer between -9 223 372 036 854 775 808 and 9 223 372 036 854 775 807 inclusive.

8.28 TimeZoneDataType

This Structured DataType defines the local time that may or may not take daylight saving time into account. Its elements are described in Table 29.

Table 29 - TimeZoneDataType Definition

Name	Type	Description
TimeZoneDataType	structure	
offset	Int16	The offset in minutes from UtcTime
daylightSavingInOffset	Boolean	If TRUE, then daylight saving time (DST) is in effect and offset includes the DST correction. If FALSE then the offset does not include the DST correction and DST may or may not have been in effect.

8.29 NamingRuleType

This *DataType* is an enumeration that identifies the *NamingRule* (see 6.4.4.2.1). Its values are defined in Table 30.

Table 30 - NamingRuleType Values

Name
MANDATORY_1
OPTIONAL_2
CONSTRAINT_3

8.30 NodeClass

This DataType is an enumeration that identifies a NodeClass. Its values are defined in Table 31.

Table 31 - NodeClass Values

Name
OBJECT_1
VARIABLE_2
METHOD_4
OBJECT_TYPE_8
VARIABLE_TYPE_16
REFERENCE_TYPE_32
DATA_TYPE_64
VIEW_128

8.31 Number

This abstract *DataType* defines a number. Details are defined by its subtypes.

8.32 String

This *Built-in DataType* defines a Unicode character string that should exclude control characters that are not whitespaces.

8.33 Structure

This abstract *DataType* is the base *DataType* for all *Structured DataTypes* like *Argument* defined in 8.6. All *DataTypes* inheriting from this *DataType* have special handling for the encoding as defined in Part 6.

8.34 UInteger

This abstract *DataType* defines an unsigned integer whose length is defined by its subtypes.

8.35 UInt16

This *Built-in DataType* defines a value that is an unsigned integer between 0 and 65 535 inclusive.

8.36 UInt32

This *Built-in DataType* defines a value that is an unsigned integer between 0 and 4 294 967 295 inclusive.

8.37 UInt64

This *Built-in DataType* defines a value that is an unsigned integer between 0 and 18 446 744 073 709 551 615 inclusive.

8.38 UtcTime

This *simple DataType* is a *DateTime* used to define Coordinated Universal Time (UTC) values. All time values conveyed between OPC UA *Servers* and *Clients* are UTC values. *Clients* shall provide any conversions between UTC and local time.

UTC has the concept of leap seconds. Leap seconds can lead to repeating seconds. Therefore applications are allowed to use TAI (International Atomic Time) instead of UTC in any place where UtcTime is used. Details on time synchronization are discussed in Part 6.

It should be noted that the Source and Server Timestamps may originate from different clocks that have no synchronization. It is also possible that one may use UTC while the other uses TAI.

8.39 XmlElement

This Built-in DataType is used to define XML elements. Part 6 defines details about this DataType.

XML data can always be modelled as a subtype of the *Structure DataType* with a single *DataTypeEncoding* that represents the XML complexType that defines the XML element (it is not necessary to have access to the XML Schema to define a *DataTypeEncoding*). For this reason a *Server* should never define *Variables* that use the *XmlElement DataType* unless the *Server* has no information about the XML elements that might be in the *Variable Value*.

8.40 EnumValueType

This Structured DataType is used to represent a human-readable representation of an Enumeration. Its elements are described in Table 32. When this type is used in an array representing human-readable representations of an enumeration, each Value shall be unique in that array.

Table 32 - EnumValueType Definition

Name	Type	Description
EnumValueType	structure	
value	Int64	The Integer representation of an Enumeration.
displayName	LocalizedText	A human-readable representation of the Value of the Enumeration.
description	LocalizedText	A localized description of the enumeration value. This field can contain an empty string if no description is available.

Note that the *EnumValueType* has been defined with an Int64 Value to meet a variety of usages. When it is used to define the string representation of an Enumeration *DataType*, the value range is limited to Int32, because the Enumeration *DataType* is a subtype of Int32. Part 8 specifies other usages where the actual value might be between 8 and 64 Bit.

8.41 OptionSet

This abstract *DataType* is the base *DataType* for all *DataTypes* representing a bit mask. All *OptionSet DataTypes* representing bit masks shall inherit from this *DataType*. Its elements are described in Table 33.

Table 33 – OptionSet Definition

Name	Туре	Description
OptionSet	structure	
value	ByteString	Array of bytes representing the bits in the option set. The length of the ByteString depends on the number of bits. The number of bytes may be larger than needed for the valid bits in the case of a spare allocation.
validBits	ByteString	Array of bytes with same size as value representing the valid bits in the value parameter. When the Server returns the value to the Client, the validBits provides information of which bits in the bit mask have a meaning. If a bit is 1 then the corresponding bit in the value is used by the Server. If it is set to a 0 it should be ignored as it has no meaning. When the Client passes the value to the Server, the validBits defines which bits should be written. Only those bits defined in validBits are changed in the bit mask, all others are not written.

The *DataType Nodes* representing concrete subtypes of the *OptionSet* shall have an *OptionSetValues Property* defined in Table 16.

8.42 Union

This abstract *DataType* is the base *DataType* for all union *DataTypes*. The *DataType* is a subtype of *Structure DataType*. All *DataTypes* inheriting from this *DataType* have special handling for the encoding as defined in Part 6. All union *DataTypes* shall inherit directly from this *DataType*.

8.43 DateString

This Simple DataType defines a value which is a day in the Gregorian calendar in string. Lexical representation of the string shall conform to calendar date defined in ISO 8601-2000.

NOTE: According to ISO 8601-2000, 'calendar date representations are in the form [YYYY-MM-DD]. [YYYY] indicates a four-digit year, 0000 through 9999. [MM] indicates a two-digit month of the year, 01 through 12. [DD] indicates a two-digit day of that month, 01 through 31. For example, "the 5th of April 1981" may be represented as either "1981-04-05" in the extended format or "19810405" in the basic format.'

NOTE: ISO 8601-2000 also allows for calendar dates to be written with reduced precision. For example, one may write "1981-04" to mean "1981 April", and one may simply write "1981" to refer to that year or "19" to refer to the century from 1900 to 1999 inclusive.

NOTE: Although ISO 8601-2000 allows both the YYYY-MM-DD and YYYYMMDD formats for complete calendar date representations, if the day [DD] is omitted then only the YYYY-MM format is allowed. By disallowing dates of the form YYYYMM, ISO 8601-2000 avoids confusion with the truncated representation YYMMDD (still often used).

8.44 DecimalString

This Simple DataType defines a value that represents a decimal number as a string. Lexical representation of the string shall conform to decimal type defined in W3C XML Schema Definition Language (XSD) 1.1 Part 2: DataTypes.

The *DecimalString* is a numeric string with an optional sign and decimal point.

8.45 DurationString

This Simple DataType defines a value that represents a duration of time as a string. It shall conform to duration as defined in ISO 8601-2000.

NOTE: According to ISO 8601-2000 'Durations are represented by the format P[n]Y[n]M[n]DT[n]H[n]M[n]S or P[n]W as shown to the right. In these representations, the [n] is replaced by the value for each of the date and time elements that follow the [n]. Leading zeros are not required, but the maximum number of digits for each element should be agreed to by the communicating parties. The capital letters P, Y, M, W, D, T, H, M, and S are designators for each of the date and time elements and are not replaced.

• P is the duration designator (historically called "period") placed at the start of the duration representation.

- Y is the year designator that follows the value for the number of years.
- *M* is the month designator that follows the value for the number of months.
- W is the week designator that follows the value for the number of weeks.
- D is the day designator that follows the value for the number of days.
- T is the time designator that precedes the time components of the representation.
- *H* is the hour designator that follows the value for the number of hours.
- M is the minute designator that follows the value for the number of minutes.
- S is the second designator that follows the value for the number of seconds.

For example, "P3Y6M4DT12H30M5S" represents a duration of "three years, six months, four days, twelve hours, thirty minutes, and five seconds". Date and time elements including their designator may be omitted if their value is zero, and lower order elements may also be omitted for reduced precision. For example, "P23DT23H" and "P4Y" are both acceptable duration representations.'

8.46 NormalizedString

This *Simple DataType* defines a string value that shall be normalized according to Unicode Annex 15, Version 7.0.0, Normalization Form C.

NOTE: Some Unicode characters have multiple equivalent binary representations consisting of sets of combining and/or composite Unicode characters. Unicode defines a process called normalization that returns one binary representation when given any of the equivalent binary representations of a character. The Win32 and the .NET Framework currently support normalization forms C, D, KC, and KD, as defined in Annex 15 of Unicode. NormalizedString uses Normalization Form C for all content, because this form avoids potential interoperability problems caused by the use of canonically equivalent, yet different, character sequences in document formats.

8.47 TimeString

This Simple DataType defines a value that represents a time as a string. It shall conform to time of day as defined in ISO 8601-2000.

NOTE: ISO 8601-2000 uses the 24-hour clock system. The *basic format* is [hh][mm][ss] and the *extended format* is [hh]:[mm]:[ss].

- [hh] refers to a zero-padded hour between 00 and 24 (where 24 is only used to notate midnight at the end of a calendar day).
- [mm] refers to a zero-padded minute between 00 and 59.
- [ss] refers to a zero-padded second between 00 and 60 (where 60 is only used to notate an added leap second).

So a time might appear as either "134730" in the basic format or "13:47:30" in the extended format.

It is also acceptable to omit lower order time elements for reduced accuracy: [hh]:[mm], [hh][mm] and [hh] are all used.

Midnight is a special case and can be referred to as both "00:00" and "24:00". The notation "00:00" is used at the beginning of a calendar day and is the more frequently used. At the end of a day use "24:00"

8.48 DataTypeDefinition

This abstract DataType is the base type for all *DataTypes* used to provide the meta data for custom *DataTypes* like *Structures and Enumerations*.

8.49 StructureDefinition

This Structured DataType is used to provide the meta data for a custom Structure DataType. It is derived from the DataType DataTypeDefinition. The StructureDefinition is formally defined in Table 34.

Table 34 - Structure Definition Structure

Name	Туре	Description	
StructureDefinition	Structure		
defaultEncodingId	Nodeld	The Nodeld of the default DataTypeEncoding for the DataType. The default depends on the message encoding, Default Binary for UA Binary encoding, Default JSON for JSON encoding and Default XML for XML encoding. If the DataType is only used inside nested Structures and is not directly contained in an ExtensionObject, the encoding Nodeld is null.	
baseDataType	Nodeld	The Nodeld of the direct supertype of the DataType. This might be the abstract Structure or the Union DataType.	
structureType	Enum StructureType	An enumeration that specifies the type of Structure defined by the <i>DataType</i> . It has the following values Structure_0 Structure without optional fields. StructureWithOptionalFields_1 Union_2 A Structure with optional fields. A Union DataType Only one of the fields defined for the data type is encoded into a value if the data type is a Union.	
fields	StructureField []	The list of fields that make up the data type. This definition assumes the structure has a sequential layout. The StructureField DataType is defined in 8.51. For Structures derived from another Structure DataType this list shall begin with the fields of the baseDataType followed by the fields of this StructureDefinition.	

8.50 EnumDefinition

This Structured DataType is used to provide the metadata for a custom Enumeration or OptionSet DataType. It is derived from the DataType DataTypeDefinition. The EnumDefinition is formally defined in Table 35.

Table 35 - EnumDefinition Structure

Name	Туре	Description
EnumDefinition	Structure	
fields	EnumField []	The list of fields that make up the data type. The EnumField DataType is defined in 8.52.

8.51 StructureField

This Structured DataType is used to provide the metadata for a field of a custom Structure DataType. The StructureField is formally defined in Table 36.

Table 36 - StructureField Structure

Name	Туре	Description
StructureField	Structure	
name	String	A name for the field that is unique within the StructureDefinition.
description	LocalizedText	A localized description of the field
dataType	Nodeld	The Nodeld of the DataType for the field.
valueRank	Int32	The value rank for the field. It shall be Scalar (-1) or a fixed rank Array (>=1).
arrayDimensions	UInt32[]	This field specifies the maximum supported length of each dimension. If the maximum is unknown the value shall be 0. The number of elements shall be equal to the value of the valueRank field. This field shall be null if valueRank ≤ 0. The maximum number of elements of an array transferred on the wire is 2147483647 (max Int32).
maxStringLength	UInt32	If the dataType field is a String or ByteString then this field specifies the maximum supported length. If the maximum is unknown the value shall be 0. If the dataType field is not a String or ByteString the value shall be 0. If the valueRank is greater than 0 this field applies to each element of the array.
isOptional	Boolean	The field indicates if a data type field in a <i>Structure</i> is optional. If the <i>structureType</i> is <i>Union_2</i> this field shall be ignored. If the <i>structureType</i> is <i>Structure_0</i> this field shall be false.

StructureFields can be exposed as DataVariables that are children of the Variable that contains the Structure Value. In this case the BrowseName of the DataVariable shall be the same as the

StructureField name and the NamespaceIndex of the BrowseName shall be the same as the Structure DataType Node NamespaceIndex.

8.52 EnumField

This Structured DataType is used to provide the metadata for a field of a custom Enumeration or OptionSet DataType. It is derived from the DataType EnumValueType. If used for an OptionSet, the corresponding Value in the base type contains the number of the bit associated with the field. The EnumField is formally defined in Table 37.

Table 37 - EnumField Structure

Name	Туре	Description
EnumField	Structure	
name	String	A name for the field that is unique within the EnumDefinition.

8.53 AudioDataType

This abstract *DataType* defines a *ByteString* representing audio data. The audio stored in the *ByteString* could be formats like WAV or MP3 or any number of other audio formats. These formats are self-describing as part of the *ByteString* and are not specified in this specification.

8.54 Decimal

This Simple DataType defines a high-precision signed number. It consists of an arbitrary precision integer unscaled value and an integer scale. The scale is the inverse power of ten that is applied to the unscaled value.

8.55 PermissionType

This is a subtype of the *UInt32 DataType* with the *OptionSetValues Property* defined. It is used to define the permissions of a *Node*. The *PermissionType* is formally defined in Table 38.

Table 38 – PermissionType Definition

Name	Bit	Description	
Browse	0	The Client is allowed to see the references to and from the Node. This implies that the Client is able to Read to Attributes other than the Value or the RolePermissions Attribute. This Permission is valid for all NodeClasses.	
ReadRolePermissions	1	The Client is allowed to read the RolePermissions Attribute. This Permission is valid for all NodeClasses.	
WriteAttribute	2	The Client is allowed to write to Attributes other than the Value, Historizing or RolePermissions Attribute if the WriteMask indicates that the Attribute is writeable. This bit affects the value of a UserWriteMask Attribute. This Permission is valid for all NodeClasses.	
WriteRolePermissions	3	The Client is allowed to write to the RolePermissions Attribute if the WriteMask indicates that the Attribute is writeable. This bit affects the value of the UserWriteMask Attribute. This Permission is valid for all NodeClasses.	
WriteHistorizing	4	The Client is allowed to write to the Historizing Attributes if the WriteMask indicates that the Attribute is writeable. This bit affects the value of the UserWriteMask Attribute. This Permission is only valid for Variables.	
Read	5	The Client is allowed to read the Value Attribute. This bit affects the CurrentRead bit of the UserAccessLevel Attribute. This Permission is only valid for Variables.	
Write	6	The Client is allowed to write the Value Attribute. This bit affects the CurrentWrite bit of the UserAccessLevel Attribute. This Permission is only valid for Variables.	

ReadHistory	7	The Client is allowed to read the history associated with a Node. This bit affects the HistoryRead bit of the UserAccessLevel Attribute. This Permission is only valid for Variables, Objects or Views.		
InsertHistory	8	The Client is allowed to insert the history associated with a Node. This bit affects the HistoryWrite bit of the UserAccessLevel Attribute. This Permission is only valid for Variables, Objects or Views.		
ModifyHistory	9	The Client is allowed to modify the history associated with a Node. This bit affects the HistoryWrite bit of the UserAccessLevel Attribute. This Permission is only valid for Variables, Objects or Views.		
DeleteHistory	10	The Client is allowed to delete the history associated with a Node. This bit affects the HistoryWrite bit of the UserAccessLevel Attribute. This Permission is only valid for Variables, Objects or Views.		
ReceiveEvents	11	A Client only receives an Event if this bit is set on the Node identified by the EventTypeId field and on the Node identified by the SourceNode field. This Permission is only valid for EventType Nodes or SourceNodes.		
Call	12	The Client is allowed to call the Method if this bit is set on the Object or ObjectType Node passed in the Call request and the Method Instance associated with that Object or ObjectType. This bit affects the UserExecutable Attribute when set on Method Node. This Permission is only valid for Objects, ObjectType or Methods.		
AddReference	13	The Client is allowed to add references to the Node. This Permission is valid for all NodeClasses.		
RemoveReference	14	The Client is allowed to remove references from the Node. This Permission is valid for all NodeClasses.		
DeleteNode	15	The Client is allowed to delete the Node. This Permission is valid for all NodeClasses.		
AddNode	16	The Client is allowed to add Nodes to the Namespace. This Permission is only used in the DefaultRolePermissions and DefaultUserRolePermissions Properties of a NamespaceMetadata Object		
Reserved	17-31	These bits are reserved for use by OPC UA.		

8.56 AccessRestrictionsType

This is a subtype of the *UInt16 DataType* with the *OptionSetValues Property* defined. It is used to define the access restrictions of a *Node*. The *AccessRestrictionsType* is formally defined in Table 39.

Table 39 - AccessRestrictionsType Definition

Name	Bit	Description	
SigningRequired	0	The Client can only access the Node when using a SecureChannel which digitally signs all messages.	
EncryptionRequired	1	The Client can only access the Node when using a SecureChannel which encrypts all messages.	
SessionRequired	2	The Client cannot access the Node when using SessionlessInvoke Service invocation.	

8.57 AccessLevelType

This is a subtype of the *Byte DataType* with the *OptionSetValues Property* defined. It is used to indicate how the *Value* of a *Variable* can be accessed (read/write) and if it contains current and/or historic data. The *AccessLevelType* is formally defined in Table 40.

Table 40 - AccessLevelType Definition

Name	Bit	Description	
CurrentRead	0	Indicates if the current value is readable. It also indicates if the current value of the <i>Variable</i> is available. (0 means not readable, 1 means readable).	
CurrentWrite	1	Indicates if the current value is writable. It also indicates if the current value of the <i>Variable</i> is available (0 means not writable, 1 means writable).	
HistoryRead	2	Indicates if the history of the value is readable. It also indicates if the history of the <i>Variable</i> is available via the OPC UA <i>Server</i> . (0 means not readable, 1 means readable).	
HistoryWrite	3	Indicates if the history of the value is writable It also indicates if the history of the <i>Variable</i> is available via the OPC UA <i>Server</i> . (0 means not writable, 1 means writable).	
SemanticChange	4	This flag is set for <i>Properties</i> that define semantic aspects of the parent <i>Node</i> of the <i>Property</i> and where the <i>Property Value</i> , and thus the semantic, may change during operation. (0 means is not a semantic, 1 means is a semantic).	
StatusWrite	5	Indicates if the current StatusCode of the value is writable (0 means only StatusCode Good is writable, 1 means any StatusCode is writable).	
TimestampWrite	6	Indicates if the current <i>SourceTimestamp</i> is writable (0 means only null timestamps are writable, 1 means any timestamp value is writeable).	
Reserved	7	Reserved for future use. Shall always be zero.	

8.58 AccessLevelExType

This is a subtype of the *UInt32 DataType* with the *OptionSetValues Property* defined. It is used to indicate how the *Value* of a *Variable* can be accessed (read/write), if it contains current and/or historic data and its atomicity.

The AccessLevelExType DataType is an extended version of the AccessLevelType DataType and as such contains the 8 bits of the AccessLevelType as the first 8 bits.

The *NonatomicRead*, and *NonatomicWrite Fields* represent the atomicity of a *Variable*. In general Atomicity is expected of OPC UA read and write operations. These Fields are used by systems, in particular hard-realtime controllers, which can not ensure atomicity.

The AccessLevelExType is formally defined in Table 41.

Table 41 - AccessLevelExType Definition

Name	Bit	Description	
	0:7	Formally defined by the AccessLevelType in Table 40.	
NonatomicRead	8	Indicates non-atomicity for Read access (0 means that atomicity is assured).	
NonatomicWrite	9	Indicates non-atomicity for Write access (0 means that atomicity is assured).	
WriteFullArrayOnly	10	Indicates if Write of IndexRange is supported. (0 means Write of IndexRange is supported)	
	11:31	Reserved for future use. Shall always be zero.	

8.59 EventNotifierType

This is a subtype of the *Byte DataType* with the *OptionSetValues Property* defined. It is used to indicate if a Node can be used to subscribe to *Events* or read / write historic *Events*.

The *EventNotifierType* is formally defined in Table 42.

Table 42 - EventNotifierType Definition

Name	Bit	Description
SubscribeTo Events	0	Indicates if it can be used to subscribe to <i>Events</i> (0 means cannot be used to subscribe to <i>Events</i> , 1 means can be used to subscribe to <i>Events</i>).
	1	Reserved for future use. Shall always be zero.
HistoryRead	2	Indicates if the history of the <i>Events</i> is readable. (0 means not readable, 1 means readable).
HistoryWrite	3	Indicates if the history of the <i>Events</i> is writable. (0 means not writable, 1 means writable).
	4:7	Reserved for future use. Shall always be zero.

8.60 AttributeWriteMask

This is a subtype of the *UInt32 DataType* with the *OptionSetValues Property* defined. It is used to define the *Attribute* access restrictions of a *Node*. The *AttributeWriteMask* is formally defined in Table 43.

If a bit is set to 0, it means the *Attribute* is not writable. If a bit is set to 1, it means it is writable. If a *Node* does not support a specific *Attribute*, the corresponding bit has to be set to 0.

Table 43 - Bit mask for WriteMask and UserWriteMask

Field	Bit	Description	
AccessLevel	0	Indicates if the AccessLevel Attribute is writable.	
ArrayDimensions	1	Indicates if the ArrayDimensions Attribute is writable.	
BrowseName	2	Indicates if the BrowseName Attribute is writable.	
ContainsNoLoops	3	Indicates if the ContainsNoLoops Attribute is writable.	
DataType	4	Indicates if the DataType Attribute is writable.	
Description	5	Indicates if the Description Attribute is writable.	
DisplayName	6	Indicates if the DisplayName Attribute is writable.	
EventNotifier	7	Indicates if the EventNotifier Attribute is writable.	
Executable	8	Indicates if the Executable Attribute is writable.	
Historizing	9	Indicates if the Historizing Attribute is writable.	
InverseName	10	Indicates if the InverseName Attribute is writable.	
IsAbstract	11	Indicates if the IsAbstract Attribute is writable.	
MinimumSamplingInterval	12	Indicates if the MinimumSamplingInterval Attribute is writable.	
NodeClass	13	Indicates if the NodeClass Attribute is writable.	
Nodeld	14	Indicates if the Nodeld Attribute is writable.	
Symmetric	15	Indicates if the Symmetric Attribute is writable.	
UserAccessLevel	16	Indicates if the UserAccessLevel Attribute is writable.	
UserExecutable	17	Indicates if the UserExecutable Attribute is writable.	
UserWriteMask	18	Indicates if the UserWriteMask Attribute is writable.	
ValueRank	19	Indicates if the ValueRank Attribute is writable.	
WriteMask	20	Indicates if the WriteMask Attribute is writable.	
ValueForVariableType	21	Indicates if the Value Attribute is writable for a Variable Type. It does not apply for	
		Variables since this is handled by the AccessLevel and UserAccessLevel	
		Attributes for the Variable. For Variables this bit shall be set to 0.	
DataTypeDefinition	22	Indicates if the DataTypeDefinition Attribute is writable.	
RolePermissions	23	Indicates if the RolePermissions Attribute is writable.	
AccessRestrictions	24	Indicates if the AccessRestrictions Attribute is writable.	
AccessLevelEx	25	Indicates if the AccessLevelEx Attribute is writable.	
Reserved	26:31	Reserved for future use. Shall always be zero.	

9 Standard EventTypes

9.1 General

The remainder of 9 defines *EventTypes*. Their representation in the *AddressSpace* is specified in Part 5. Other parts of this series of standards may specify additional *EventTypes*. Figure 29 informally describes the hierarchy of these *EventTypes*.

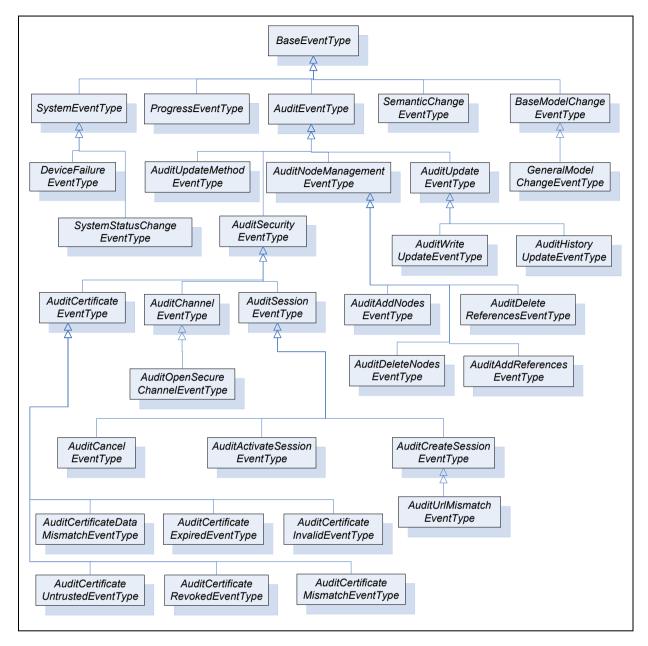


Figure 29 - Standard EventType Hierarchy

9.2 BaseEventType

The BaseEventType defines all general characteristics of an Event. All other EventTypes derive from it. There is no other semantic associated with this type.

9.3 SystemEventType

SystemEvents are Events of SystemEventType that are generated as a result of some Event that occurs within the Server or by a system that the Server is representing.

9.4 ProgressEventType

ProgressEvents are *Events* of *ProgressEventType* that are generated to identify the progress of an operation. An operation can be a service call or something application specific like a program execution.

9.5 AuditEventType

AuditEvents are Events of AuditEventType that are generated as a result of an action taken on the Server by a Client of the Server. For example, in response to a Client issuing a write to a

Variable, the Server would generate an AuditEvent describing the Variable as the source and the user and Client session as the initiators of the Event.

Figure 30 illustrates the defined behaviour of an OPC UA Server in response to an auditable action request. If the action is accepted, then an action AuditEvent is generated and processed by the Server. If the action is not accepted due to security reasons, a security AuditEvent is generated and processed by the Server. The Server may involve the underlying device or system in the process but it is the Server's responsibility to provide the Event to any interested Clients. Clients are free to subscribe to Events from the Server and will receive the AuditEvents in response to normal Publish requests.

All action requests include a human readable *AuditEntryld*. The *AuditEntryld* is included in the *AuditEvent* to allow human readers to correlate an *Event* with the initiating action. The *AuditEntryld* typically contains who initiated the action and from where it was initiated.

The Server may elect to optionally persist the AuditEvents in addition to the mandatory Event Subscription delivery to Clients.

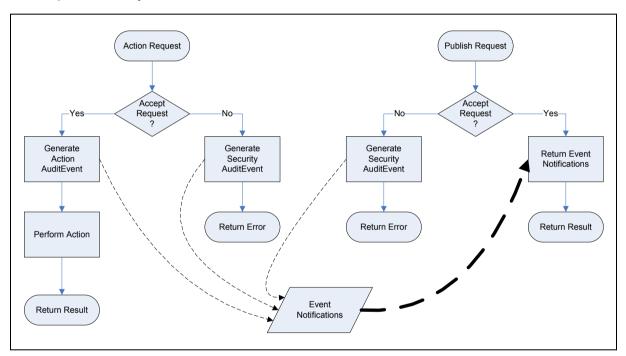


Figure 30 - Audit Behaviour of a Server

Figure 31 illustrates the expected behaviour of an aggregating *Server* in response to an auditable action request. This use case involves the aggregating *Server* passing on the action to one of its aggregated *Servers*. The general behaviour described above is extended by this behaviour and not replaced. That is, the request could fail and generate a security *AuditEvent* within the aggregating *Server*. The normal process is to pass the action down to an aggregated *Server* for processing. The aggregated *Server* will, in turn, follow this behaviour or the general behaviour and generate the appropriate *AuditEvents*. The aggregating *Server* periodically issues publish requests to the aggregated *Servers*. These collected *Events* are merged with self-generated *Events* and made available to subscribing *Clients*. If the aggregating *Server* supports the optional persisting of *AuditEvent*, then the collected *Events* are persisted along with locally-generated *Events*.

The aggregating Server may map the authenticated user account making the request to one of its own accounts when passing on the request to an aggregated Server. It shall, however, preserve the AuditEntryld by passing it on as received. The aggregating Server may also generate its own AuditEvent for the request prior to passing it on to the aggregated Server, in particular, if the aggregating Server needs to break a request into multiple requests that are each directed to separate aggregated Servers or if part of a request is denied due to security on the aggregating Server.

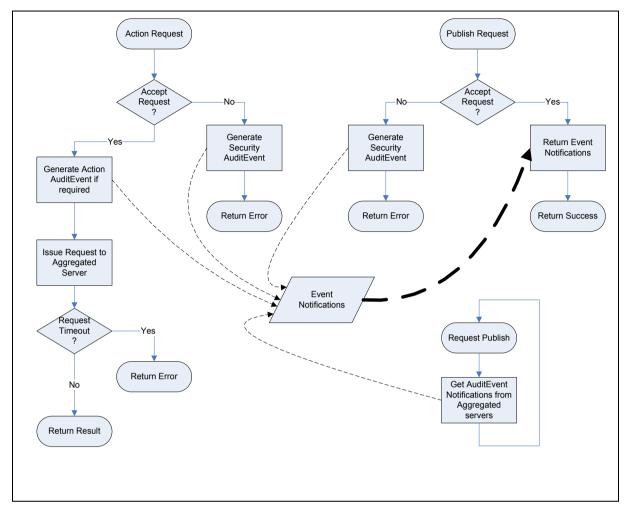


Figure 31 - Audit Behaviour of an Aggregating Server

9.6 AuditSecurityEventType

This is a subtype of *AuditEventType* and is used only for categorization of security-related *Events*. This type follows all behaviour of its parent type.

9.7 AuditChannelEventType

This is a subtype of *AuditSecurityEventType* and is used for categorization of security-related *Events* from the *SecureChannel Service Set* defined in Part 4.

9.8 AuditOpenSecureChannelEventType

This is a subtype of *AuditChannelEventType* and is used for *Events* generated from calling the OpenSecureChannel *Service* defined in Part 4.

9.9 AuditSessionEventType

This is a subtype of *AuditSecurityEventType* and is used for categorization of security-related *Events* from the *Session Service Set* defined in Part 4.

9.10 AuditCreateSessionEventType

This is a subtype of *AuditSessionEventType* and is used for *Events* generated from calling the CreateSession *Service* defined in Part 4.

9.11 AuditUrlMismatchEventType

This is a subtype of *AuditCreateSessionEventType* and is used for *Events* generated from calling the CreateSession *Service* defined in Part 4 if the EndpointUrl used in the service call does not match the *Server's HostNames* (see Part 4 for details).

9.12 AuditActivateSessionEventType

This is a subtype of *AuditSessionEventType* and is used for *Events* generated from calling the ActivateSession *Service* defined in Part 4.

9.13 AuditCancelEventType

This is a subtype of *AuditSessionEventType* and is used for *Events* generated from calling the Cancel *Service* defined in Part 4.

9.14 AuditCertificateEventType

This is a subtype of *AuditSecurityEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. These *AuditEvents* will be generated for Certificate errors in addition to other *AuditEvents* related to service calls.

9.15 AuditCertificateDataMismatchEventType

This is a subtype of *AuditCertificateEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. This *AuditEvent* is generated if the HostName in the URL used to connect to the *Server* is not the same as one of the HostNames specified in the Certificate or if the Application and Software Certificates contain an application or product URI that does not match the URI specified in the ApplicationDescription provided with the Certificate. For more details on Certificates see Part 4.

9.16 AuditCertificateExpiredEventType

This is a subtype of *AuditCertificateEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. This *AuditEvent* is generated if the current time is outside the validity period's start date and end date.

9.17 AuditCertificateInvalidEventType

This is a subtype of *AuditCertificateEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. This *AuditEvent* is generated if the certificate structure is invalid or if the Certificate has an invalid signature.

9.18 AuditCertificateUntrustedEventType

This is a subtype of *AuditCertificateEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. This *AuditEvent* is generated if the Certificate is not trusted, that is, if the Issuer Certificate is unknown.

9.19 AuditCertificateRevokedEventType

This is a subtype of *AuditCertificateEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. This *AuditEvent* is generated if a Certificate has been revoked or if the revocation list is not available (i.e. a network interruption prevents the Application from accessing the list).

9.20 AuditCertificateMismatchEventType

This is a subtype of *AuditCertificateEventType* and is used only for categorization of Certificate related *Events*. This type follows all behaviours of its parent type. This *AuditEvent* is generated if a Certificate set of uses does not match the requested use for the Certificate (i.e. Application, Software or Certificate Authority).

9.21 AuditNodeManagementEventType

This is a subtype of *AuditEventType* and is used for categorization of node management related *Events*. This type follows all behaviours of its parent type.

9.22 AuditAddNodesEventType

This is a subtype of *AuditNodeManagementEventType* and is used for *Events* generated from calling the AddNodes *Service* defined in Part 4.

9.23 AuditDeleteNodesEventType

This is a subtype of *AuditNodeManagementEventType* and is used for *Events* generated from calling the DeleteNodes *Service* defined in Part 4.

9.24 AuditAddReferencesEventType

This is a subtype of *AuditNodeManagementEventType* and is used for *Events* generated from calling the AddReferences *Service* defined in Part 4.

9.25 AuditDeleteReferencesEventType

This is a subtype of *AuditNodeManagementEventType* and is used for *Events* generated from calling the DeleteReferences *Service* defined in Part 4.

9.26 AuditUpdateEventType

This is a subtype of *AuditEventType* and is used for categorization of update related *Events*. This type follows all behaviours of its parent type.

9.27 AuditWriteUpdateEventType

This is a subtype of *AuditUpdateEventType* and is used for categorization of write update related *Events*. This type follows all behaviours of its parent type.

9.28 AuditHistoryUpdateEventType

This is a subtype of *AuditUpdateEventType* and is used for categorization of history update related *Events*. This type follows all behaviours of its parent type.

9.29 AuditUpdateMethodEventType

This is a subtype of *AuditEventType* and is used for categorization of *Method* related *Events*. This type follows all behaviours of its parent type.

9.30 DeviceFailureEventType

A DeviceFailureEvent is an Event of DeviceFailureEventType that indicates a failure in a device of the underlying system.

9.31 SystemStatusChangeEventType

A SystemStatusChangeEvent is an Event of SystemStatusChangeEventType that indicates a status change in a system. For example, if the status indicates an underlying system is not running, then a Client cannot expect any Events from the underlying system. A Server can identify its own status changes using this EventType.

9.32 ModelChangeEvents

9.32.1 General

ModelChangeEvents are generated to indicate a change of the AddressSpace structure. The change may consist of adding or deleting a Node or Reference. Although the relationship of a Variable or VariableType to its DataType is not modelled using References, changes to the DataType Attribute of a Variable or VariableType are also considered as model changes and therefore a ModelChangeEvent is generated if the DataType Attribute changes.

9.32.2 NodeVersion Property

There is a correlation between *ModelChangeEvents* and the *NodeVersion Property* of *Nodes*. Every time a *ModelChangeEvent* is issued for a *Node*, its *NodeVersion* shall be changed, and every time the *NodeVersion* is changed, a *ModelChangeEvent* shall be generated. A *Server* shall support both the *ModelChangeEvent* and the *NodeVersion Property* or neither, but never only one of the two mechanisms.

This relation also implies that only those *Nodes* of the *AddressSpace* having a *NodeVersion* shall trigger a *ModelChangeEvent*. Other *Nodes* shall not trigger a *ModelChangeEvent*.

9.32.3 Views

A ModelChangeEvent is always generated in the context of a View, including the default View where the whole AddressSpace is considered. Therefore the only Notifiers which report the ModelChangeEvents are View Nodes and the Server Object representing the default View. Each action generating a ModelChangeEvent may lead to several Events since it may affect different Views. If, for example, a Node was deleted from the AddressSpace, and this Node was also contained in a View "A", there would be one Event having the AddressSpace as context and another having the View "A" as context. If a Node would only be removed from View "A", but still exists in the AddressSpace, it would generate only a ModelChangeEvent for View "A".

If a *Client* does not want to receive duplicates of changes then it shall use the filter mechanisms of the *Event* subscription to filter only for the default *View* and suppress the *ModelChangeEvents* having other *Views* as the context.

When a *ModelChangeEvent* is issued on a *View* and the *View* supports the *ViewVersion Property*, then the *ViewVersion* shall be updated.

9.32.4 Event Compression

An implementation is not required to issue an *Event* for every update as it occurs. An OPC UA *Server* may be capable of grouping a series of transactions or simple updates into a larger unit. This series may constitute a logical grouping or a temporal grouping of changes. A single *ModelChangeEvent* may be issued after the last change of the series, to cover all of the changes. This is referred to as *Event compression*. A change in the *NodeVersion* and the *ViewVersion* may thus reflect a group of changes and not a single change.

9.32.5 BaseModelChangeEventType

BaseModelChangeEvents are Events of the BaseModelChangeEventType. The BaseModelChangeEventType is the base type for ModelChangeEvents and does not contain information about the changes but only indicates that changes occurred. Therefore the Client shall assume that any or all of the Nodes may have changed.

9.32.6 GeneralModelChangeEventType

GeneralModelChangeEvents are Events of the GeneralModelChangeEventType. The GeneralModelChangeEventType is a subtype of the BaseModelChangeEventType. It contains information about the Node that was changed and the action that occurred to cause the ModelChangeEvent (e.g. add a Node, delete a Node, etc.). If the affected Node is a Variable or Object, then the TypeDefinitionNode is also present.

To allow Event compression, a GeneralModelChangeEvent contains an array of changes.

9.32.7 Guidelines for ModelChangeEvents

Two types of *ModelChangeEvents* are defined: the *BaseModelChangeEvent* that does not contain any information about the changes and the *GeneralModelChangeEvent* that identifies the changed *Nodes* via an array. The precision used depends on both the capability of the OPC UA *Server* and the nature of the update. An OPC UA *Server* may use either *ModelChangeEvent* type depending on circumstances. It may also define subtypes of these *EventTypes* adding additional information.

To ensure interoperability, the following guidelines for *Events* should be observed.

- If the array of the *GeneralModelChangeEvent* is present, then it should identify every *Node* that has changed since the preceding *ModelChangeEvent*.
- The OPC UA Server should emit exactly one ModelChangeEvent for an update or series of updates. It should not issue multiple types of ModelChangeEvent for the same update.
- Any Client that responds to ModelChangeEvents should respond to any Event of the BaseModelChangeEventType including its subtypes like the GeneralModelChangeEventType.

If a *Client* is not capable of interpreting additional information of the subtypes of the *BaseModelChangeEventType*, it should treat *Events* of these types the same way as *Events* of the *BaseModelChangeEventType*.

9.33 SemanticChangeEventType

9.33.1 General

SemanticChangeEvents are Events of SemanticChangeEventType that are generated to indicate a change of the AddressSpace semantics. The change consists of a change to the Value Attribute of a Property.

The SemanticChangeEvent contains information about the Node owning the Property that was changed. If this is a Variable or Object, the TypeDefinitionNode is also present.

The SemanticChange bit of the *AccessLevel Attribute* of a *Property* indicates whether changes of the *Property* value are considered for *SemanticChangeEvents* (see 5.6.2).

9.33.2 ViewVersion and NodeVersion Properties

The ViewVersion and NodeVersion Properties do not change due to the publication of a SemanticChangeEvent.

9.33.3 Views

SemanticChangeEvents are handled in the context of a View the same way as ModelChangeEvents. This is defined in 9.32.3.

9.33.4 Event Compression

SemanticChangeEvents can be compressed the same way as ModelChangeEvents. This is defined in 9.32.4.

Annex A (informative)

How to use the Address Space Model

A.1 Overview

Annex A points out some general considerations on how the Address Space Model can be used. Annex A is for information only, that is, each *Server* vendor can model its data in the appropriate way that fits its needs. However, it gives some hints the *Server* vendor may consider.

Typically OPC UA Servers will offer data provided by an underlying system like a device, a configuration database, an OPC COM Server, etc. Therefore the modelling of the data depends on the model of the underlying system as well as the requirements of the Clients accessing the OPC UA Server. It is also expected that companion specifications will be developed on top of OPC UA with additional rules on how to model the data. However, the remainder of Annex A will give some general considerations about the different concepts of OPC UA to model data and when they should be used, and when not.

Part 5:-, Annex A, provides an overview of the design decisions made when modelling the information about the *Server* defined in Part 5.

A.2 Type definitions

Type definitions should be used whenever it is expected that the type information may be used more than once in the same system or for interoperability between different systems supporting the same type definitions.

A.3 ObjectTypes

Subclause 5.5.1 states: "Objects are used to represent systems, system components, real-world objects, and software objects." Therefore ObjectTypes should be used if a type definition of those ObjectTypes is useful (see A.2).

From a more abstract point of view *Objects* are used to group *Variables* and other *Objects* in the *AddressSpace*. Therefore *ObjectTypes* should be used when some common structures/groups of *Objects* and/or *Variables* should be described. *Clients* can use this knowledge to program against the *ObjectType* structure and use the TranslateBrowsePathsToNodelds *Service* defined in Part 4 on the instances.

Simple objects only having one value (e.g. a simple heat sensor) can also be modelled as *VariableTypes*. However, extensibility mechanisms should be considered (e.g. a complex heat sensor subtype could have several values) and whether that object should be exposed as an object in the *Client*'s GUI or just as a value. Whenever a modeller is in doubt as to which solution to use the *ObjectType* having one *Variable* should be preferred.

A.4 VariableTypes

A.4.1 General

Variable Types are only used for Data Variables 1 and should be used when there are several Variables having the same semantic (e.g. set point). It is not necessary to define a Variable Type that only reflects the Data Type of a Variable, e.g. an "Int32 Variable Type".

A.4.2 Properties or DataVariables

Besides the semantic differences of *Properties* and *DataVariables* described in Clause 4 there are also syntactical differences. A *Property* is identified by its *BrowseName*, that is, if *Properties*

¹ VariableTypes other than the PropertyType which is used for all Properties.

having the same semantic are used several times, they should always have the same *BrowseName*. The same semantic of *DataVariables* is captured in the *VariableType*.

If it is not clear which concept to use based on the semantic described in Clause 4, then the different syntax can help. The following points identify when it shall be a *DataVariable*.

- If it is a complex Variable or it should contain additional information in the form of Properties.
- If the type definition may be refined (subtyping).
- If the type definition should be made available so the *Client* can use the AddNodes *Service* defined in Part 4 to create new instances of the type definition.
- If it is a component of a complex *Variable* exposing a part of the value of the complex *Variable*.

A.4.3 Many Variables and / or structured DataTypes

When structured data structures should be made available to the *Client* there are basically three different approaches:

- a) Create several simple *Variables* using simple *DataTypes* always reflecting parts of the simple structure. *Objects* are used to group the *Variables* according to the structure of the data.
- b) Create a structured *DataType* and a simple *Variable* using this *DataType*.
- c) Create a structured *DataType* and a complex *Variable* using this *DataType* and also exposing the structured data structure as *Variables* of the complex *Variable* using simple *DataTypes*.

The advantages of the first approach are that the complex structure of the data is visible in the *AddressSpace*. A generic *Client* can easily access the data without knowledge of user-defined *DataTypes* and the *Client* can access individual parts of the structured data. The disadvantages of the first approach are that accessing the individual data does not provide any transactional context and for a specific *Client* the *Server* first has to convert the data and the *Client* has to convert the data, again, to get the data structure the underlying system provides.

The advantages of the second approach are, that the data is accessed in a transactional context and the structured <code>DataType</code> can be constructed in a way that the <code>Server</code> does not have to convert the data and can pass directly to the specific <code>Client</code> that can directly use them. The disadvantages are that the generic <code>Client</code> might not be able to access and interpret the data or has at least the burden to read the <code>DataTypeDefinition</code> to interpret the data. The structure of the data is not visible in the <code>AddressSpace</code>; additional <code>Properties</code> describing the data structure cannot be added to the adequate places since they do not exist in the <code>AddressSpace</code>. Individual parts of the data cannot be read without accessing the whole data structure.

The third approach combines the other two approaches. Therefore a specific *Client* can access data in its native format in a transactional context, whereas a generic *Client* can access simple *DataTypes* of the components of the complex *Variable*. The disadvantage is that the *Server* must be able to provide the native format and also interpret it to be able to provide the information in simple *DataTypes*.

It is recommended to use the first approach. When a transactional context is needed or the *Client* should be able to get a large amount of data instead of subscribing to several individual values, then the third approach is suitable. However, the *Server* might not always have the knowledge to interpret the structured data of the underlying system and therefore has to use the second approach just passing the data to the specific *Client* who is able to interpret the data.

A.5 Views

Server-defined Views can be used to present an excerpt of the AddressSpace suitable for a special class of Clients, for example maintenance Clients, engineering Clients, etc. The View only provides the information needed for the purpose of the Client and hides unnecessary information.

A.6 Methods

Methods should be used whenever some input is expected and the Server delivers a result. One should avoid using Variables to write the input values and other Variables to get the output results as it was necessary to do in OPC COM since there was no concept of a Method available. However, a simple OPC COM wrapper might not be able to do this.

Methods can also be used to trigger some execution in the *Server* that does not require input and / or output parameters.

Global *Methods*, that is, *Methods* that cannot directly be assigned to a special *Object*, should be assigned to the *Server Object* defined in Part 5.

A.7 Defining ReferenceTypes

Defining new *ReferenceTypes* should only be done if the predefined *ReferenceTypes* are not suitable. Whenever a new *ReferenceType* is defined, the most appropriate *ReferenceType* should be used as its supertype.

It is expected that *Servers* will have new defined hierarchical *ReferenceTypes* to expose different hierarchies, and new non-hierarchical *References* to expose relationships between *Nodes* in the *AddressSpace*.

A.8 Defining ModellingRules

New *ModellingRules* have to be defined if the predefined *ModellingRules* are not appropriate for the model exposed by the *Server*.

Depending on the model used by the underlying system the *Server* may need to define new *ModellingRules*, since the OPC UA *Server* may only pass the data to the underlying system and this system may use its own internal rules for instantiation, subtyping, etc.

Beside this, the predefined *ModellingRules* might not be sufficient to specify the required behaviour for instantiation and subtyping.

Annex B (informative)

OPC UA Meta Model in UML

B.1 Background

The OPC UA Meta Model (the OPC UA Address Space Model) is represented by UML classes and UML objects marked with the stereotype <<TypeExtension>>. Those stereotyped UML objects represent *DataTypes* or *ReferenceTypes*. The domain model can contain user-defined *ReferenceTypes* and *DataTypes*, also marked as <<TypeExtension>>. In addition, the domain model contains *ObjectTypes*, *VariableTypes* etc. represented as UML objects (see Figure B.1).

The OPC Foundation specifies not only the OPC UA Meta Model, but also defines some *Nodes* to organise the *AddressSpace* and to provide information about the *Server* as specified in Part 5.

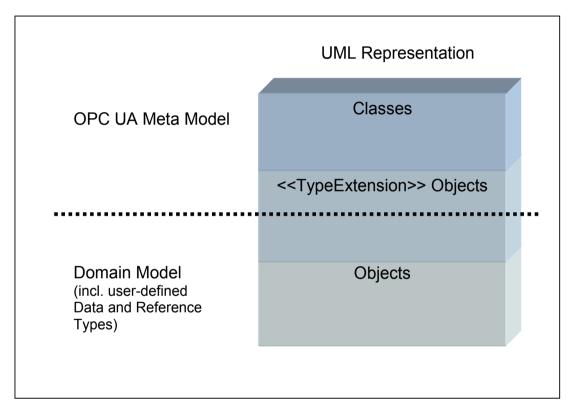


Figure B.1 - Background of OPC UA Meta Model

B.2 Notation

An example of a UML class representing the OPC UA concept *Base* is given in the UML class diagram in Figure B.2. OPC Attributes inherit from the abstract class Attribute and have a value identifying their data type. They are composed of a *Node* which is either optional (0..1) or required (1), such as *BrowseName* to *Base* in Figure B.2.

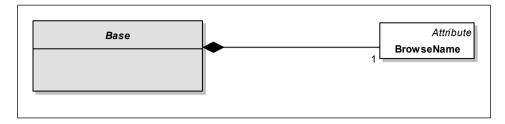


Figure B.2 - Notation (I)

UML object diagrams are used to display <<TypeExtension>> objects (e.g. *HasComponent* in Figure B.3). In object diagrams, OPC *Attributes* are represented as UML attributes without data types and marked with the stereotype <<Attribute>>, like *InverseName* in the UML object *HasComponent*. They have values, like *InverseName* = *ComponentOf* for *HasComponent*. To keep the object diagrams simple, not all *Attributes* are shown (e.g. the *NodeId* of *HasComponent*).

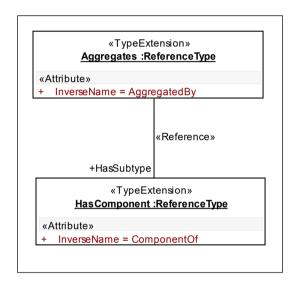


Figure B.3 – Notation (II)

OPC References are represented as UML associations marked with the stereotype <<Reference>>. If a particular ReferenceType is used, its name is used as the role name, identifying the direction of the Reference (e.g. Aggregates has the subtype HasComponent). For simplicity, the inverse role name is not shown (in the example SubtypeOf). When no role name is provided, it means that any ReferenceType can be used (only valid for class diagrams).

There are some special *Attributes* in OPC UA containing a *NodeId* and thereby referencing another *Node*. Those *Attributes* are represented as associations marked with the stereotype <<Attribute>>. The name of the *Attribute* is displayed as the role name of the *TargetNode*.

The value of the OPC Attribute BrowseName is represented by the UML object name, for example the BrowseName of the UML object HasComponent in Figure B.3 is "HasComponent".

To highlight the classes explained in a class diagram, they are marked in grey (e.g. *Base* in Figure B.2). Only those classes have all of their relationships to other classes and attributes shown in the diagram. For the other classes, we provide only those attributes and relationships needed to understand the main classes of the diagram.

B.3 Meta Model

NOTE: Other parts of this series of standards can extend the OPC UA Meta Model by adding *Attributes* and defining new *ReferenceTypes*.

B.3.1 Base

Base is shown in Figure B.4.

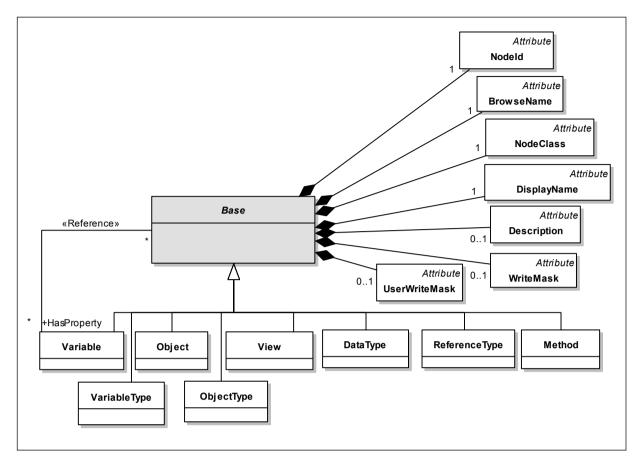


Figure B.4 - Base

B.3.2 ReferenceType

ReferenceType is shown in Figure B.5 and predefined ReferenceTypes in Figure B.6.

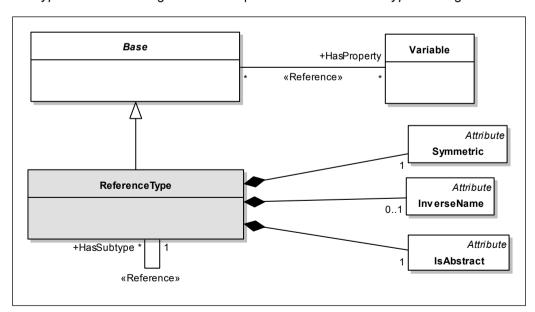


Figure B.5 - Reference and ReferenceType

If Symmetric is "false" and IsAbstract is "false" an InverseName shall be provided.

B.3.3 Predefined ReferenceTypes

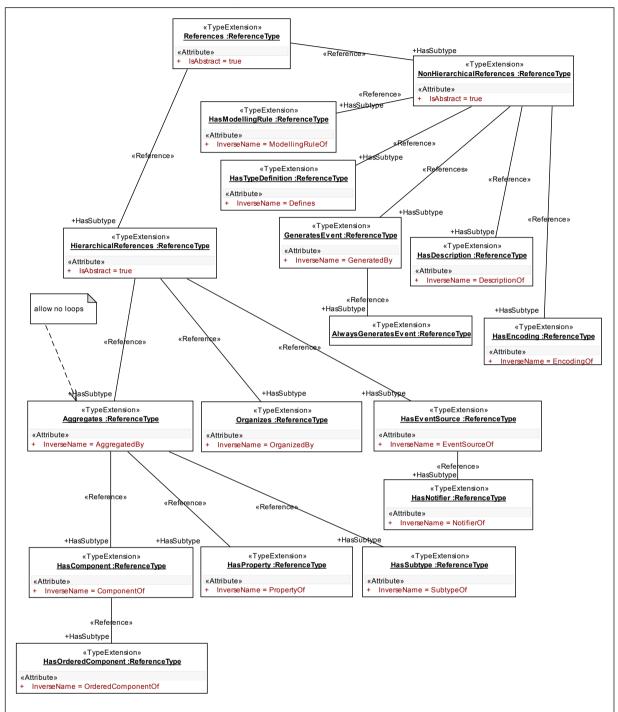


Figure B.6 - Predefined ReferenceTypes

B.3.4 Attributes

Attributes are shown in Figure B.7.

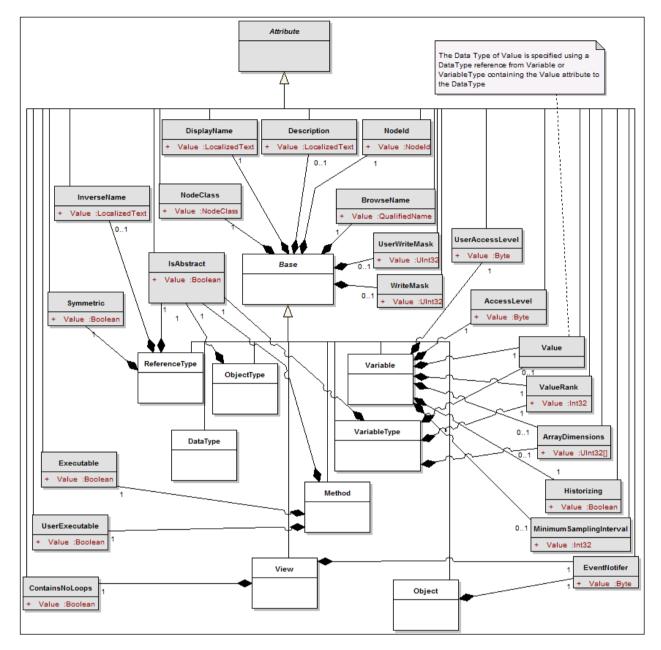


Figure B.7 - Attributes

There may be more Attributes defined in other parts of this series of standards.

Attributes used for references, which have a Nodeld as DataType, are not shown in this diagram but are shown as stereotyped associations in the other diagrams.

B.3.5 Object and ObjectType

Objects and ObjectTypes are shown in Figure B.8.

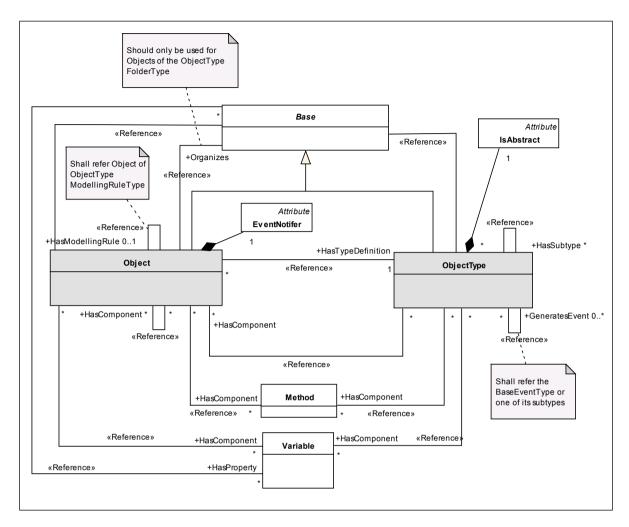


Figure B.8 - Object and ObjectType

B.3.6 EventNotifier

EventNotifier are shown in Figure B.9.

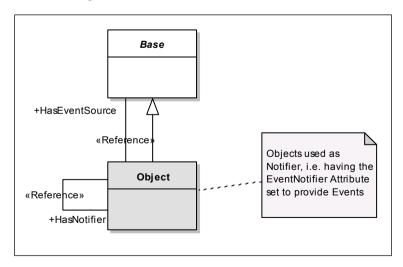


Figure B.9 - EventNotifier

B.3.7 Variable and VariableType

Variable and VariableType are shown in Figure B.10.

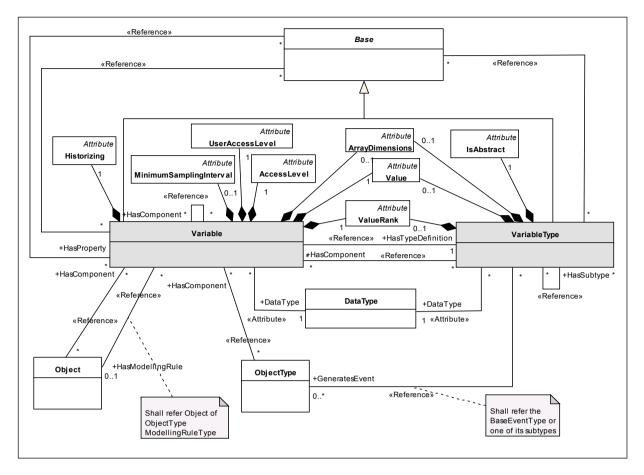


Figure B.10 - Variable and VariableType

The *DataType* of a *Variable* shall be the same as or a subtype of the *DataType* of its *VariableType* (referred with *HasTypeDefinition*).

If a HasProperty points to a Variable from a Base "A" then the following constraints apply:

- The Variable shall not be the SourceNode of a HasProperty or any other HierarchicalReferences Reference.
- All Variables having "A" as the SourceNode of a HasProperty Reference shall have a unique BrowseName in the context of "A".

B.3.8 Method

Method is shown in Figure B.11

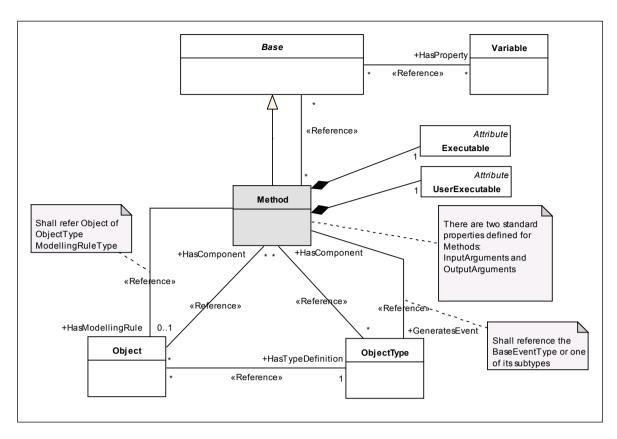


Figure B.11 – Method

B.3.9 DataType

DataType is shown in Figure B.12.

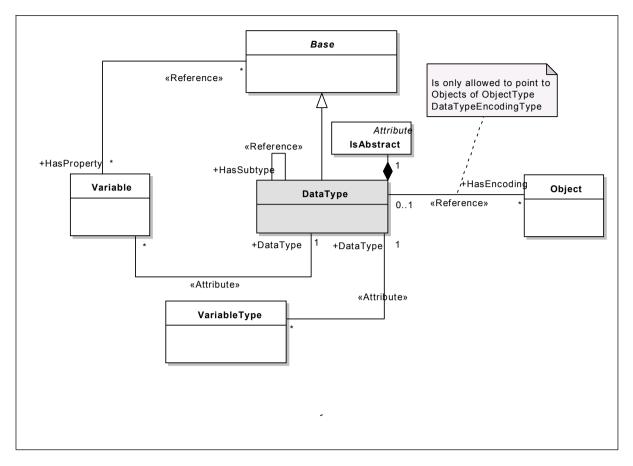


Figure B.12 - DataType

B.3.10 View

View is shown in Figure B.13.

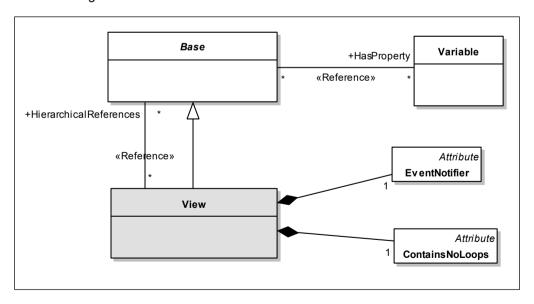


Figure B.13 - View

Annex C (normative)

Graphical Notation

C.1 General

Annex D defines a graphical notation for OPC UA data. Annex D is normative, that is, the notation is used in this standard to expose examples of OPC UA data. However, it is not required to use this notation to expose OPC UA data.

The graphical notation is able to expose all structural data of OPC UA. *Nodes*, their *Attributes* including their current value and *References* between the *Nodes* including the *ReferenceType* can be exposed. The graphical notation provides no mechanism to expose events or historical data.

C.2 Notation

C.2.1 Overview

The notation is divided into two parts. The simple notation only provides a simplified view on the data hiding some details like *Attributes*. The extended notation allows exposing all structure information of OPC UA, including *Attribute* values. The simple and the extended notation can be combined to expose OPC UA data in one figure.

Common to both notations is that neither any colour nor the thickness or style of lines is relevant for the notation. Those effects can be used to highlight certain aspects of a figure.

C.2.2 Simple Notation

Depending on their *NodeClass Nodes* are represented by different graphical forms as defined in Table C.1.

Table C.1 – Notation of Nodes depending on the NodeClass

NodeClass	Graphical Representation	Comment
Object	Object	Rectangle including text representing the string-part of the <i>DisplayName</i> of the <i>Object</i> . The font shall not be set to italic.
ObjectType	ObjectType	Shadowed rectangle including text representing the string-part of the <i>DisplayName</i> of the <i>ObjectType</i> . The font shall be set in italic.
Variable	Variable	Rectangle with rounded corners including text representing the string-part of the <i>DisplayName</i> of the <i>Variable</i> . The font shall not be set in italic.
VariableType	VariableType	Shadowed rectangle with rounded corners including text representing the string-part of the <i>DisplayName</i> of the <i>VariableType</i> . The font shall be set in italic.
DataType	DataType	Shadowed hexagon including text representing the string-part of the <i>DisplayName</i> of the <i>DataType</i> .
ReferenceType	ReferenceType	Shadowed six-sided polygon including text representing the string-part of the <i>DisplayName</i> of the <i>ReferenceType</i> .
Method	Method	Oval including text representing the string-part of the DisplayName of the Method.
View	View	Trapezium including text representing the string-part of the <i>DisplayName</i> of the <i>View</i> .

References are represented as lines between *Nodes* as exemplified in Figure C.1. Those lines can vary in their form. They do not have to connect the *Nodes* with a straight line; they can have angles, arches, etc.



Figure C.1 – Example of a Reference connecting two Nodes

Table C.2 defines how symmetric and asymmetric *References* are represented in general, and also defines shortcuts for some *ReferenceTypes*. Although it is recommended to use those shortcuts, it is not required. Thus, instead of using the shortcut, the generic solution can also be used.

Table C.2 – Simple Notation of Nodes depending on the NodeClass

ReferenceType	Graphical Representation	Comment
Any symmetric ReferenceType	ReferenceType →	Symmetric ReferenceTypes are represented as lines between Nodes with closed and filled arrows on both sides pointing to the connected Nodes. Near the line has to be a text containing the string-part of the BrowseName of the ReferenceType.
Any asymmetric ReferenceType	——ReferenceType →	Asymmetric ReferenceTypes are represented as lines between Nodes with a closed and filled arrow on the side pointing to the TargetNode. Near the line has to be a text containing the string-part of the BrowseName of the ReferenceType.
Any hierarchical ReferenceType	——ReferenceType →	Asymmetric ReferenceTypes that are subtypes of HierarchicalReferences should be exposed the same way as asymmetric ReferenceTypes except that an open arrow is used.
HasComponent	+	The notation provides a shortcut for <i>HasComponent References</i> shown on the left. The single hashed line has to be near the <i>TargetNode</i> .
HasProperty		The notation provides a shortcut for <i>HasProperty References</i> shown on the left. The double hashed lines have to be near the <i>TargetNode</i> .
HasTypeDefinition		The notation provides a shortcut for <i>HasTypeDefinition References</i> shown on the left. The double closed and filled arrows have to point to the <i>TargetNode</i> .
HasSubtype	< </td <td>The notation provides a shortcut for <i>HasSubtype</i> References shown on the left. The double closed arrows have to point to the <i>SourceNode</i>.</td>	The notation provides a shortcut for <i>HasSubtype</i> References shown on the left. The double closed arrows have to point to the <i>SourceNode</i> .
HasEventSource	─	The notation provides a shortcut for <i>HasEventSource References</i> shown on the left. The closed arrow has to point to the <i>TargetNode</i> .

C.2.3 Extended Notation

In the extended notation some additional concepts are introduced. It is allowed only to use some of those concepts on elements of a figure.

The following rules define some special handling of structures.

- In general, values of all *DataTypes* should be represented by an appropriate string representation. Whenever a *NamespaceIndex* or *LocaleId* is used in those structures they can be omitted.
- The *DisplayName* contains a *LocaleId* and a *String*. Such a structure can be exposed as [<LocaleId>:]<String> where the *LocaleId* is optional. For example, a *DisplayName* can be "en:MyName". Instead of that, "MyName" can also be used. This rule applies whenever a *DisplayName* is shown, including the text used in the graphical representation of a *Node*.
- The BrowseName contains the NamespaceIndex and a String. Such a structure can be exposed as [<NamespaceIndex>:]<String> where the NamespaceIndex is optional. For example, a BrowseName can be "1:MyName". Instead of that, "MyName" can also be used. This rule applies whenever a BrowseName is shown, including the text used in the graphical representation of a Node.

Instead of using the <code>HasTypeDefinition</code> reference to point from an <code>Object</code> or <code>Variable</code> to its <code>ObjectType</code> or <code>VariableType</code> the name of the <code>TypeDefinition</code> can be added to the text used in the <code>Node</code>. The <code>TypeDefinition</code> shall either be prefixed with "::" or it is put in italic as the top line. Figure C.2 gives an example, where "Node1" uses a <code>Reference</code> and "Node2" the shortcut in both notation variants. A figure can contain <code>HasTypeDefinition</code> <code>References</code> for some <code>Nodes</code> and the shortcut for other <code>Nodes</code>. It is not allowed that a <code>Node</code> uses the shortcut and additionally is the <code>SourceNode</code> of a <code>HasTypeDefinition</code>.

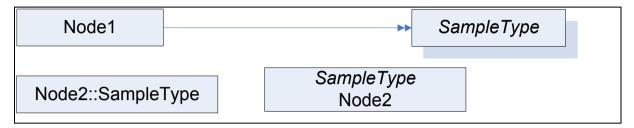


Figure C.2 - Example of using a TypeDefinition inside a Node

To display Attributes of a Node additional text can be put inside the form representing the Node under the text representing the DisplayName. The DisplayName and the text describing the Attributes have to be separated using a horizontal line. Each Attribute has to be set into a new text line. Each text line shall contain the Attribute name followed by an "=" and the value of the Attribute. On top of the first text line containing an Attribute shall be a text line containing the underlined text "Attribute". It is not required to expose all Attributes of a Node. It is allowed to show only a subset of Attributes. If an optional Attribute is not provided, the Attribute can be marked by a strike-through line, for example "Description". Examples of exposing Attributes are shown in Figure C.3.

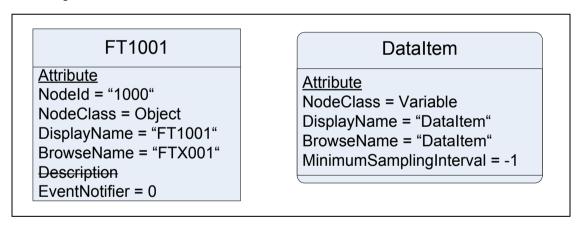


Figure C.3 - Example of exposing Attributes

To avoid too many *Nodes* in a figure it is allowed to expose *Properties* inside a *Node*, similar to *Attributes*. Therefore, the text field used for exposing *Attributes* is extended. Under the last text line containing an *Attribute* a new text line containing the underlined text "Property" has to be added. If no *Attribute* is provided, the text has to start with this text line. After this text line, each new text line shall contain a *Property*, starting with the *BrowseName* of the *Property* followed by "=" and the value of the *Value Attribute* of the *Property*. Figure C.4 shows some examples exposing *Properties* inline. It is allowed to expose some *Properties* of a *Node* inline, and other *Properties* as *Nodes*. It is not allowed to show a *Property* inline as well as an additional *Node*.

FT1001

Attribute

Nodeld = "1000"

DisplayName = "FT1001"

BrowseName = "FTX001"

Description

EventNotifier = 0

Property

Prop1 = 12

Prop2 = "PropValue"

DataItem

Attribute

NodeClass = Variable

DisplayName = "DataItem"

BrowseName = "DataItem"

MinimumSamplingInterval = -1

Property

Prop1 = 12

Prop2 = "PropValue"

FT1002

Property

Prop1 = 12

Prop2 = "PropValue"

DataItemX

Property

Prop1 = 12

Prop2 = "PropValue"

Figure C.4 – Example of exposing Properties inline

It is allowed to add additional information to a figure using the graphical representation, for example callouts.