



31 Days Before Your **CCNA** Exam (200-301)

A Day-By-Day Review Guide for the
CCNA 200-301 Certification Exam

CCNA Countdown Calendar

The lines after the countdown number allow you to add the actual calendar days for reference.

31

Networking
Models, Devices,
and Components

30

Ethernet
Switching

29

Switch
Configuration
Basics

28

IPv4
Addressing

24

EtherChannel
and HSRP

23

DHCP and
DNS

22

Wireless
Concepts

21

WLAN
Configuration

17

The Routing
Table

16

Inter-VLAN
Routing

15

Static and
Default Route
Configuration

14

OSPF
Operation

10

ACL Concepts

9

ACL
Implementation

8

NAT

7

WAN, VPN, and
IPsec

3

Cloud,
Virtualization,
and SDN

2

SDA and Cisco
DNA Center

1

Network
Automation

EXAM

Time

Location

27

IPv6
Addressing

26

VLAN and
Trunking
Concepts and
Configuration

25

STP

20

LAN Security
and Device
Hardening

19

Basic Routing
Concepts

18

Basic Router
Configuration

13

Single-Area
OSPF
Implementation

12

Fine-Tuning and
Troubleshooting
OSPF

11

Network
Security
Concepts

6

QoS

5

CDP and LLDP

4

Device
Monitoring,
Management,
and Maintenance

DAY

27

IPv6
Addressing

26

VLAN and
Trunking
Concepts and
Configuration

25

STP

20

LAN Security
and Device
Hardening

19

Basic Routing
Concepts

18

Basic Router
Configuration

13

Single-Area
OSPF
Implementation

12

Fine-Tuning and
Troubleshooting
OSPF

11

Network
Security
Concepts

6

QoS

5

CDP and LLDP

4

Device
Monitoring,
Management,
and Maintenance

DAY

31 Days Before Your CCNA Exam

A Day-By-Day Review Guide
for the CCNA 200-301
Certification Exam

Allan Johnson

31 Days Before Your CCNA Exam

Allan Johnson

Copyright © 2020 Cisco Systems, Inc.

Published by:

Cisco Press
221 River Street
Hoboken, NJ 07030 USA

All rights reserved. This publication is protected by copyright, and permission must be obtained from the publisher prior to any prohibited reproduction, storage in a retrieval system, or transmission in any form or by any means, electronic, mechanical, photocopying, recording, or likewise. For information regarding permissions, request forms, and the appropriate contacts within the Pearson Education Global Rights & Permissions Department, please visit www.pearson.com/permissions.

No patent liability is assumed with respect to the use of the information contained herein. Although every precaution has been taken in the preparation of this book, the publisher and author assume no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein.

ScoutAutomatedPrintCode

Library of Congress Control Number: 2019919835

ISBN-13: 978-0-13-596408-8

ISBN-10: 0-13-596408-3

Warning and Disclaimer

This book is designed to provide information about exam topics for the Cisco Certified Networking Associate (CCNA) certification. Every effort has been made to make this book as complete and as accurate as possible, but no warranty or fitness is implied.

The information is provided on an “as is” basis. The authors, Cisco Press, and Cisco Systems, Inc. shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising from the information contained in this book or from the use of the discs or programs that may accompany it.

The opinions expressed in this book belong to the author and are not necessarily those of Cisco Systems, Inc.

Microsoft and/or its respective suppliers make no representations about the suitability of the information contained in the documents and related graphics published as part of the services for any purpose. All such documents and related graphics are provided “as is” without warranty of any kind. Microsoft and/or its respective suppliers hereby disclaim all warranties and conditions with regard to this information, including all warranties and conditions of merchantability, whether express, implied or statutory, fitness for a particular purpose, title and non-infringement. In no event shall Microsoft and/or its respective suppliers be liable for any special, indirect or consequential damages or any damages whatsoever resulting from loss of use, data or profits, whether in an action of contract, negligence or other tortious action, arising out of or in connection with the use or performance of information available from the services.

The documents and related graphics contained herein could include technical inaccuracies or typographical errors. Changes are periodically added to the information herein. Microsoft and/or its respective suppliers may make improvements and/or changes in the product(s) and/or the program(s) described herein at any time. Partial screen shots may be viewed in full within the software version specified.

Trademark Acknowledgments

All terms mentioned in this book that are known to be trademarks or service marks have been appropriately capitalized. Cisco Press or Cisco Systems, Inc., cannot attest to the accuracy of this information. Use of a term in this book should not be regarded as affecting the validity of any trademark or service mark.

Microsoft® Windows®, and Microsoft Office® are registered trademarks of the Microsoft Corporation in the U.S.A. and other countries. This book is not sponsored or endorsed by or affiliated with the Microsoft Corporation.

Special Sales

For information about buying this title in bulk quantities, or for special sales opportunities (which may include electronic versions; custom cover designs; and content particular to your business, training goals, marketing focus, or branding interests), please contact our corporate sales department at corpsales@pearsoned.com or (800) 382-3419.

For government sales inquiries, please contact governmentsales@pearsoned.com.

For questions about sales outside the U.S., please contact intlcs@pearson.com.

Feedback Information

At Cisco Press, our goal is to create in-depth technical books of the highest quality and value. Each book is crafted with care and precision, undergoing rigorous development that involves the unique expertise of members from the professional technical community.

Readers' feedback is a natural continuation of this process. If you have any comments regarding how we could improve the quality of this book, or otherwise alter it to better suit your needs, you can contact us through email at feedback@ciscopress.com. Please make sure to include the book title and ISBN in your message.

We greatly appreciate your assistance.

Editor-in-Chief

Mark Taub

Production Line Manager

Brett Bartow

Alliances Manager, Cisco Press

Arezou Gol

Senior Editor

James Manly

Managing Editor

Sandra Schroeder

Development Editor

Chris Cleveland

Project Editor

Mandie Frank

Copy Editor

Kitty Wilson

Technical Editor

Steve Stiles

Editorial Assistant

Cindy Teeters

Designer

Chuti Prasertsith

Composition

codeMantra

Indexer

Cheryl Ann Lenser

Proofreader

Charlotte Kughen



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

 Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

About the Author

Allan Johnson entered the academic world in 1999, after 10 years as a business owner/operator to dedicate his efforts to his passion for teaching. He holds both an MBA and an MEd in occupational training and development. He taught a variety of technology courses to high school students and is an adjunct instructor at Del Mar College in Corpus Christi, Texas. Since 2006, Allan has worked full time for Cisco Networking Academy in several roles. He is currently engaged as curriculum lead.

About the Technical Reviewer

Steve Stiles is a 20-year Cisco Network Academy Instructor for Rhodes State College and a Cisco Certified Instructor Trainer, having earned Cisco CCNA Security, CCNA CyberOps, and CCNP-level certifications, as well as numerous CompTIA certifications. He was the recipient of the 2012 Outstanding Teacher of the Year by the Ohio Association of Two Year Colleges and co-recipient for the Outstanding Faculty of the Year at Rhodes State College. Steve has a Bachelor's Degree from Western Governors in Information Technology–Security.

Dedications

For my wife, Becky. Thank you for all your support during this crazy whirlwind of a year.
You are the stabilizing force that keeps me grounded.

Acknowledgments

As a technical author, I rely heavily on my technical editor; Steve Stiles had my back for this work. Thankfully, when James Manly contacted him, he was willing and able to do the arduous review work necessary to make sure that you get a book that is both technically accurate and unambiguous.

Wendell Odom's *CCNA 200-301 Official Cert Guide, Volume 1* and *Volume 2* were two of my main sources. These two books have the breadth and depth needed to master the CCNA exam topics.

The Cisco Networking Academy authors for the online curriculum and series of Companion Guides take the reader deeper, past the CCNA exam topics, with the ultimate goal of preparing the student not only for CCNA certification but for more advanced college-level technology courses and degrees as well. Thank you especially to Rick Graziani, Bob Vachon, John Pickard, Dave Holzinger, Jane Gibbons, Martin Benson, Suk-Yi Pennock, Allan Reid, Jane Brooke, Anna Bolen, Teletchia Willis, and the rest of the ACE team. Their excellent treatment of the material is reflected throughout this book.

James Manly, senior editor, has effectively assumed the mantle of juggling multiple projects simultaneously, steering each from beginning to end. This is my third project with James, and he is competently filling big shoes. Thank you, James, for shepherding this project for me.

Thank you to the professional and thorough review of this work by development editor Christopher Cleveland, project editor Mandie Frank, and copy editor Kitty Wilson. I've worked with the stellar Chris and Mandie on many previous projects. Their combined efforts ensure that what I authored is ready for publication. This is my first time working with Kitty. Her attention to the clarity of what you read plays no small part in making this the best edition to date.

And to the rest of the Pearson family who contributes in countless ways to bring a book to the reader, thank you for all your hard work.

Credits

Figure 23-10 Screenshot of Windows 10 © Microsoft 2019

Figure 23-11 Screenshot reprinted with permission from Apple Inc.

Figure 23-12 Screenshot of Linux Ubuntu © Ubuntu 2019

PostExam Matthew Moran, *Building Your I.T. Career: A Complete Toolkit for a Dynamic Career in Any Economy*, 2nd Edition (Pearson IT Certification, 2013, ISBN: 9780789749437)

Contents at a Glance

Introduction	xxviii
Day 31: Networking Models, Devices, and Components	1
Day 30: Ethernet Switching	29
Day 29: Switch Configuration Basics	41
Day 28: IPv4 Addressing	55
Day 27: IPv6 Addressing	65
Day 26: VLAN and Trunking Concepts and Configurations	83
Day 25: STP	99
Day 24: EtherChannel and HSRP	113
Day 23: DHCP and DNS	127
Day 22: Wireless Concepts	149
Day 21: WLAN Configuration	163
Day 20: LAN Security and Device Hardening	173
Day 19: Basic Routing Concepts	195
Day 18: Basic Router Configuration	209
Day 17: The Routing Table	227
Day 16: Inter-VLAN Routing	233
Day 15: Static and Default Route Configuration	241
Day 14: OSPF Operation	255
Day 13: Single-Area OSPF Implementation	265
Day 12: Fine-Tuning and Troubleshooting OSPF	275
Day 11: Network Security Concepts	285

Day 10: ACL Concepts	295
Day 9: ACL Implementation	301
Day 8: NAT	315
Day 7: WAN, VPN, and IPsec	325
Day 6: QoS	343
Day 5: CDP and LLDP	351
Day 4: Device Monitoring, Management, and Maintenance	361
Day 3: Cloud, Virtualization, and SDN	379
Day 2: SDA and Cisco DNA Center	389
Day 1: Network Automation	397
Exam Day	407
Post-Exam Information	409
Index	411

Contents

Introduction xxviii

Day 31: Networking Models, Devices, and Components 1

CCNA 200-301 Exam Topics 1

Key Points 1

The OSI and TCP/IP Models 1

 OSI Layers 2

 TCP/IP Layers and Protocols 3

 Protocol Data Units and Encapsulation 4

The TCP/IP Application Layer 5

 The TCP/IP Transport Layer 5

 TCP Header 6

 Port Numbers 7

 Error Recovery 7

 Flow Control 8

 Connection Establishment and Termination 9

 UDP 9

 The TCP/IP Internet Layer 10

 The TCP/IP Network Access Layer 10

 Data Encapsulation Summary 12

Networking Icons 13

Devices 13

 Switches 14

 Access Layer Switches 14

 Distribution Layer Switches 14

 Core Layer Switches 14

 Routers 15

 Specialty Devices 16

 Firewalls 16

 IDS and IPS 17

 Next-Generation Firewalls 17

 Access Points and Wireless LAN Controllers 18

Physical Layer 20

 Network Media Forms and Standards 20

LAN Device Connection Guidelines 22

LANs and WANs 23

Small Office/Home Office (SOHO) 23
 SOHO Routers 24

Physical and Logical Topologies 24

Hierarchical Campus Designs 25

Study Resources 27

Day 30: Ethernet Switching 29

CCNA 200-301 Exam Topics 29

Key Topics 29

Evolution to Switching 29

Switching Logic 30

Collision and Broadcast Domains 31

Frame Forwarding 31

 Switch Forwarding Methods 31

 Symmetric and Asymmetric Switching 32

 Memory Buffering 32

 Layer 2 and Layer 3 Switching 32

Ethernet Overview 32

Legacy Ethernet Technologies 33

 CSMA/CD 34

 Legacy Ethernet Summary 35

Current Ethernet Technologies 35

UTP Cabling 36

Benefits of Using Switches 37

Ethernet Addressing 37

Ethernet Framing 38

The Role of the Physical Layer 39

Study Resources 40

Day 29: Switch Configuration Basics 41

CCNA 200-301 Exam Topics 41

Key Topics 41

Accessing and Navigating the Cisco IOS 41

 Connecting to Cisco Devices 41

 CLI EXEC Sessions 42

 Using the Help Facility 42

CLI Navigation and Editing Shortcuts	43
Command History	44
IOS Examination Commands	44
Subconfiguration Modes	45
Basic Switch Configuration Commands	45
Half Duplex, Full Duplex, and Port Speed	47
Automatic Medium-Dependent Interface Crossover (auto-MDIX)	47
Verifying Network Connectivity	48
Troubleshoot Interface and Cable Issues	50
Media Issues	51
Interface Status and Switch Configuration	51
Interface Status Codes	51
Duplex and Speed Mismatches	52
Common Layer 1 Problems On "Up" Interfaces	53
Study Resources	54

Day 28: IPv4 Addressing 55

CCNA 200-301 Exam Topics	55
Key Topics	55
IPv4 Addressing	55
Header Format	55
Classes of Addresses	56
Purpose of the Subnet Mask	57
Private and Public IP Addressing	58
Subnetting in Four Steps	58
Determine How Many Bits to Borrow	59
Determine the New Subnet Mask	60
Determine the Subnet Multiplier	60
List the Subnets, Host Ranges, and Broadcast Addresses	60
Subnetting Example 1	61
Subnetting Example 2	61
Subnetting Example 3	62
VLSM	62
Study Resources	64

Day 27: IPv6 Addressing 65

CCNA 200-301 Exam Topics	65
Key Topics	65
Overview and Benefits of IPv6	65

The IPv6 Protocol	66
IPv6 Address Types	67
Unicast	68
Global Unicast Address	68
Link-Local Address	71
Loopback Address	71
Unspecified Address	71
Unique Local Address	72
IPv4 Embedded Address	72
Multicast	73
Assigned Multicast	73
Solicited-Node Multicast	74
Anycast	75
Representing the IPv6 Address	76
Conventions for Writing IPv6 Addresses	76
Conventions for Writing IPv6 Prefixes	76
IPv6 Subnetting	77
Subnetting the Subnet ID	78
Subnetting into the Interface ID	78
EUI-64 Concept	78
Stateless Address Autoconfiguration	79
Migration to IPv6	80
Study Resources	81

Day 26: VLAN and Trunking Concepts and Configurations 83

CCNA 200-301 Exam Topics	83
Key Points	83
VLAN Concepts	83
Traffic Types	84
Types of VLANs	84
Voice VLAN Example	85
Trunking VLANs	86
Dynamic Trunking Protocol	87
VLAN Configuration and Verification	88
Trunking Configuration and Verification	92
VLAN Troubleshooting	94
Disabled VLANs	96

Trunking Troubleshooting	96
Check Both Ends of a Trunk	97
Check Trunking Operational States	98
Study Resources	98

Day 25: STP 99

CCNA 200-125 Exam Topics	99
Key Topics	99
STP Concepts and Operation	99
STP Algorithm	100
STP Convergence	101
STP Varieties	102
PVST Operation	103
Port States	104
Extended System ID	104
Rapid PVST+ Operation	105
RSTP Interface Behavior	105
RSTP Port Roles	106
Edge Ports	107
Configuring and Verifying Varieties of STP	108
STP Configuration Overview	108
Configuring and Verifying the BID	108
Configuring PortFast and BPDU Guard	110
Configuring Rapid PVST+	111
Verifying STP	111
Study Resources	112

Day 24: EtherChannel and HSRP 113

CCNA 200-301 Exam Topics	113
Key Topics	113
EtherChannel Operation	113
Benefits of EtherChannel	114
Implementation Restrictions	114
EtherChannel Protocols	115
Port Aggregation Protocol	115
Link Aggregation Control Protocol	115
Configuring EtherChannel	116
Verifying EtherChannel	117

Troubleshooting EtherChannel	119
First-Hop Redundancy Concepts	119
FHRPs	120
HSRP Operation	121
HSRP Versions	121
HSRP Priority and Preemption	122
HSRP Configuration and Verification	122
HSRP Load Balancing	123
Troubleshooting HSRP	126
Study Resources	126

Day 23: DHCP and DNS 127

CCNA 200-301 Exam Topics	127
Key Topics	127
DHCPv4	127
DHCPv4 Configuration Options	128
Configuring a Router as a DHCPv4 Server	128
Configuring a Router to Relay DHCPv4 Requests	132
Configuring a Router as a DHCPv4 Client	133
DHCPv6	134
SLAAC	134
Stateless DHCPv6	136
Stateful DHCPv6	136
Stateless and Stateful DHCPv6 Operation	136
DHCPv6 Configuration Options	137
Configuring a Router as a Stateless DHCPv6 Server	137
Configuring a Router as a Stateful DHCPv6 Server	139
DHCP Troubleshooting	140
Resolving IPv4 Address Conflicts	140
Testing Connectivity Using a Static IP Address	140
Verifying Switch Port Configuration	140
Testing DHCPv4 Operation on the Same Subnet or VLAN	140
DNS Operation	140
Troubleshooting DNS	142
Verifying Host IP Configuration	143
IP Settings	143
Host IP Settings on Windows	143

Host IP Settings on macOS 145
Host IP Settings on Linux 146

Study Resources 148

Day 22: Wireless Concepts 149

CCNA 200-301 Exam Topics 149

Key Topics 149

Wireless Standards 149
 RF Spectrum 149
 Channels 150
 802.11 Standards 151

Wireless Topologies 152
 Infrastructure Mode 152
 IBSS, or Ad Hoc Mode 154
 Mesh 154

AP Architectures 155
 Autonomous AP Architecture 155
 Cloud-Based AP Architecture 155
 Lightweight AP Architectures 156
 CAPWAP Operation 157

Wireless Security Protocols 158
 Wireless Authentication Methods 158
 WPA and WPA2 160
 802.1X/EAP 160
 WPA3 160
 Wireless Encryption Methods 161

Study Resources 162

Day 21: WLAN Configuration 163

CCNA 200-301 Exam Topics 163

Key Topics 163

Logging Into a Cisco WLC 163

Configuring a WLC with a WLAN 165
 Configuring a RADIUS Server 166
 Configuring a New Interface 166
 Configuring a WPA2 Enterprise WLAN 168

Study Resources 171

Day 20: LAN Security and Device Hardening 173

CCNA 200-301 Exam Topics 173

Key Topics 173

Endpoint Security 173

Cisco ESA 173

Cisco WSA 174

Access Control 175

Local Authentication 175

SSH Configuration 176

Switch Port Hardening 178

AAA 178

802.1X 179

Port Security 181

Port Security Configuration 181

Port Security Aging 183

Port Restoration After a Violation 184

LAN Threat Mitigation 185

Native and Management VLAN Modification 185

VLAN Attacks 186

VLAN Attack Mitigation 187

DHCP Attacks 188

DHCP Starvation Attacks 188

DHCP Spoofing Attacks 188

DHCP Snooping 188

ARP Attacks 190

Dynamic ARP Inspection 191

Study Resources 193

Day 19: Basic Routing Concepts 195

CCNA 200-301 Exam Topics 195

Key Topics 195

Packet Forwarding 195

Path Determination and Switching Function Example 196

Routing Methods 197

Classifying Dynamic Routing Protocols 198

IGP and EGP 198

Distance Vector Routing Protocols 198

Link-State Routing Protocols 199

Classful Routing Protocols 200

Classless Routing Protocols 200

Dynamic Routing Metrics	200
Administrative Distance	201
IGP Comparison Summary	203
Routing Loop Prevention	203
Link-State Routing Protocol Features	204
Building the LSDB	204
Calculating the Dijkstra Algorithm	205
Convergence with Link-State Protocols	206
Study Resources	207

Day 18: Basic Router Configuration 209

CCNA 200-301 Exam Topics	209
Key Topics	209
Basic Router Configuration with IPv4	209
Command Syntax	210
Configuration Example	210
Verification Example	212
Basic Router Configuration with IPv6	217
Command Syntax	217
Configuration Example	218
Verifying IPv4 and IPv6 Network Connectivity	220
Small Office or Home Office Routers	223
Basic IP Addressing Troubleshooting	224
Default Gateway	224
Duplicate IP Addresses	225
Study Resources	225

Day 17: The Routing Table 227

CCNA 200-301 Exam Topics	227
Key Topics	227
Two Router Functions	227
Longest Match Determines Best Path	227
Three Packet Forwarding Decisions	228
Components of the Routing Table	228
Routing Table Principles	231
Route Entry Structure	232
Study Resources	232

Day 16: Inter-VLAN Routing 233

CCNA 200-301 Exam Topics 233

Key Points 233

Inter-VLAN Routing Concepts 233

Legacy Inter-VLAN Routing 233

Router on a Stick 234

Multilayer Switching 235

Router on a Stick Configuration and Verification 235

Multilayer Switching Inter-VLAN Routing Configuration and Verification 238

Creating Additional SVIs 238

Configuring a Layer 3 Routed Port 240

Study Resources 240

Day 15: Static and Default Route Configuration 241

CCNA 200-301 Exam Topics 241

Key Topics 241

Static and Default Routing Overview 241

IPv4 Static Route Configuration 242

IPv4 Static Routes Using the Next-Hop Parameter 244

IPv4 Static Routes Using the Exit Interface Parameter 244

IPv4 Default Route Configuration 245

IPv4 Summary Static Route Configuration 248

IPv6 Static Routing 249

IPv6 Static Route Configuration 251

IPv6 Default Route Configuration 252

IPv6 Summary Static Route Configuration 253

Study Resources 254

Day 14: OSPF Operation 255

CCNA 200-301 Exam Topics 255

Key Topics 255

Single-Area OSPF Operation 255

OSPF Message Format 255

OSPF Packet Types 256

Neighbor Establishment 256

Link-State Advertisements 258

OSPF DR and BDR 259

OSPF Algorithm 259

Link-State Routing Process 260

OSPFv2 Versus OSPFv3	261
Similarities Between OSPFv2 and OSPFv3	261
Differences Between OSPFv2 and OSPFv3	262
Multiarea OSPF Operation	262
Multiarea OSPF Design	262
Multiarea OSPF Improves Performance	264
Study Resources	264

Day 13: Single-Area OSPF Implementation 265

CCNA 200-301 Exam Topics	265
Key Topics	265
Single-Area OSPFv2 Configuration	265
The router ospf Command	266
Router ID	266
The network Command	267
Passive Interfaces	268
Modifying the OSPF Metric	268
Verifying OSPFv2	270
Study Resources	274

Day 12: Fine-Tuning and Troubleshooting OSPF 275

CCNA 200-125 Exam Topics	275
Key Topics	275
OSPFv2 Configuration Example	275
Modifying OSPFv2	277
Redistributing a Default Route	277
Modifying Hello and Dead Intervals	278
OSPF Network Types	278
DR/BDR Election	279
Controlling the DR/BDR Election	279
Troubleshooting OSPF	281
OSPF States	281
OSPF Adjacency	282
OSPF Troubleshooting Commands	282
Study Resources	283

Day 11: Network Security Concepts 285

CCNA 200-301 Exam Topics	285
Key Topics	285

Security Fundamentals	285
Security Terms	285
Attack Vectors and Data Exfiltration	286
Penetration Testing Tools	286
Attack Types	287
Types of Malware	288
Network Attacks	289
Reconnaissance Attacks	289
Access Attacks	290
Social Engineering Attacks	290
DoS and DDoS Attacks	291
IP Attacks	291
Transport Layer Attacks	292
Security Program	293
Study Resources	293

Day 10: ACL Concepts 295

CCNA 200-301 Exam Topics	295
Key Topics	295
ACL Operation	295
Defining an ACL	295
Processing Interface ACLs	295
List Logic with IP ACLs	296
Planning to Use ACLs	297
Types of ACLs	298
ACL Identification	298
ACL Design Guidelines	299
Study Resources	300

Day 9: ACL Implementation 301

CCNA 200-301 Exam Topics	301
Key Topics	301
Configuring Standard Numbered IPv4 ACLs	301
Standard Numbered IPv4 ACL: Permit Specific Network	302
Standard Numbered IPv4 ACL: Deny a Specific Host	302
Standard Numbered IPv4 ACL: Deny a Specific Subnet	303
Standard Numbered IPv4 ACL: Deny Telnet or SSH Access to the Router	303

Configuring Extended Numbered IPv4 ACLs	303
Extended Numbered IPv4 ACL: Deny FTP from Subnets	304
Extended Numbered IPv4 ACL: Deny Only Telnet from Subnet	304
Configuring Named IPv4 ACLs	305
Standard Named IPv4 ACL Steps and Syntax	305
Standard Named IPv4 ACL: Deny a Single Host from a Given Subnet	305
Extended Named IPv4 ACL Steps and Syntax	306
Adding Comments to Named or Numbered IPv4 ACLs	306
Verifying IPv4 ACLs	307
Comparing IPv4 and IPv6 ACLs	308
Configuring IPv6 ACLs	309
Step 1: Name the IPv6 ACL	309
Step 2: Create the IPv6 ACL	309
Step 3: Apply the IPv6 ACL	310
Standard IPv6 ACL: Allow SSH Remote Access	310
Extended IPv6 ACL: Allow Only Web Traffic	310
Verifying IPv6 ACLs	311
Troubleshooting ACLs	313
Study Resources	314

Day 8: NAT 315

CCNA 200-301 Exam Topics	315
Key Topics	315
NAT Concepts	315
A NAT Example	317
Dynamic and Static NAT	318
NAT Overload	318
NAT Benefits	319
NAT Limitations	319
Configuring Static NAT	319
Configuring Dynamic NAT	320
Configuring NAT Overload	321
Verifying NAT	322
Troubleshooting NAT	323
Study Resources	324

Day 7: WAN, VPN, and IPsec 325

CCNA 200-301 Exam Topics	325
Key Topics	325
WAN Topologies	325
WAN Connection Options	326
Dedicated Connection Options	327
Circuit-Switched Connection Options	328
Packet-Switched Connection Options	329
Metro Ethernet	329
MPLS	330
Internet Connection Options	330
DSL	330
Cable Modem	331
Wireless	332
Choosing a WAN Link Option	332
VPN Technology	333
VPN Benefits	333
Types of VPN Access	333
VPN Components	336
Establishing Secure VPN Connections	337
VPN Tunneling	337
VPN Encryption Algorithms	338
Hashes	338
VPN Authentication	340
IPsec Security Protocols	340
Study Resources	342

Day 6: QoS 343

CCNA 200-301 Exam Topics	343
Key Topics	343
QoS	343
Classification and Marking	344
DSCP and IPP	345
EF and AF	346
Congestion Management	347
Policing, Shaping, and TCP Discards	347
QoS and TCP	349
Study Resources	350

Day 5: CDP and LLDP 351

CCNA 200-301 Exam Topics 351

Key Topics 351

CDP Overview 351

 CDP Configuration 352

 CDP Verification 354

LLDP Overview 357

 LLDP Configuration 357

 LLDP Verification 358

Study Resources 360

Day 4: Device Monitoring, Management, and Maintenance 361

CCNA 200-301 Exam Topics 361

Key Topics 361

SNMP Operation 361

 SNMP Components 361

 SNMP Messages 361

 SNMP Versions 362

 The Management Information Base 362

Configuring SNMP 364

Verifying SNMP 364

Syslog 365

 Syslog Operation 366

 Configuring and Verifying Syslog 367

Network Time Protocol 370

Cisco IOS File System and Devices 371

 IFS Commands 371

 URL Prefixes for Specifying File Locations 373

 Commands for Managing Configuration Files 374

Managing Cisco IOS Images 375

 Backing Up a Cisco IOS Image 376

 Restoring a Cisco IOS Image 376

Password Recovery 377

Study Resources 378

Day 3: Cloud, Virtualization, and SDN 379

CCNA 200-301 Exam Topics 379

Key Topics 379

Cloud Computing 379

 Server Virtualization 379

 Cloud Computing Services 381

 Virtual Network Infrastructure 382

Software-Defined Networking 383

 Data, Control, and Management Planes 383

 Controllers 384

 SDN Examples: Open SDN and OpenFlow 385

 SDN Examples: The Cisco Application Centric Infrastructure 386

 SDN Examples: Spine and Leaf 387

 SDN Examples: The Cisco APIC Enterprise Module (APIC-EM) 387

Study Resources 388

Day 2: SDA and Cisco DNA Center 389

CCNA 200-301 Exam Topics 389

Key Topics 389

SDA Architecture 389

 Fabric 390

 Underlay 390

 Overlay 391

Cisco DNA Center 391

 Cisco DNA Center and SDA 392

 Cisco DNA Center Network Management Platform 394

Study Resources 395

Day 1: Network Automation 397

CCNA 200-301 Exam Topics 397

Key Topics 397

Data Formats 397

 JSON Data Format 398

 JSON Syntax Rules 399

RESTful APIs 400

 RESTful Implementation 400

 RESTful API Requests 400

Configuration Management Tools 402

Ansible 403

Puppet 403

Chef 405

Study Resources 405

Exam Day 407

What You Need for the Exam 407

What You Should Receive After Completion 407

Summary 407

Post-Exam Information 409

Receiving Your Certificate 409

Determining Career Options 409

Examining Certification Options 410

If You Did Not Pass the Exam 410

Summary 410

Index 411

Command Syntax Conventions

The conventions used to present command syntax in this book are the same conventions used in the IOS Command Reference. The Command Reference describes these conventions as follows:

- **Boldface** indicates commands and keywords that are entered literally as shown. In actual configuration examples and output (not general command syntax), boldface indicates commands that are manually input by the user (such as a **show** command).
- *Italic* indicates arguments for which you supply actual values.
- Vertical bars (|) separate alternative, mutually exclusive elements.
- Square brackets ([]) indicate an optional element.
- Braces ({ }) indicate a required choice.
- Braces within brackets ({{ }}) indicate a required choice within an optional element.

Reader Services

Register your copy at www.ciscopress.com/title/9780135964088 for convenient access to downloads, updates, and corrections as they become available. To start the registration process, go to www.ciscopress.com/register and log in or create an account. (Be sure to check the box indicating that you would like to hear from us to receive exclusive discounts on future editions of this product.) Enter the product ISBN **9780135964088** and click **Submit**. When the process is complete, you will find any available bonus content under Registered Products.

Introduction

If you're reading this introduction, you've probably already spent a considerable amount of time and energy pursuing your CCNA 200-301 certification. Regardless of how you got to this point in your travels through your CCNA studies, *31 Days Before Your CCNA Exam* most likely represents the last leg of your journey on your way to the destination: to become a Cisco Certified Network Associate. However, if you are like me, you might be reading this book at the *beginning* of your studies. If so, this book provides an excellent overview of the material you must now spend a great deal of time studying and practicing. But I must warn you: Unless you are extremely well versed in networking technologies and have considerable experience configuring and troubleshooting Cisco routers and switches, this book will *not* serve you well as the sole resource for your exam preparations. Therefore, let me spend some time discussing my recommendations for study resources.

Study Resources

Cisco Press and Pearson IT Certification offer an abundance of CCNA-related books to serve as your primary source for learning how to install, configure, operate, and troubleshoot small to medium-size routed and switched networks.

Primary Resources

First on the list of important resources is Wendell Odom's *CCNA 200-301 Official Cert Guide Library* (ISBN: 9781587147142). If you do not buy any other books, buy these. Wendell's method of teaching, combined with his technical expertise and down-to-earth style, is unsurpassed in our industry. As you read through his books, you sense that he is sitting right there next to you, walking you through the material. With your purchase, you get access to practice exams and study materials and other online resources that are worth the price of the book. There is no better resource on the market for a CCNA candidate.

If you are a Cisco Networking Academy student, you are blessed with access to the online version of the CCNA version 7 curriculum and the wildly popular Packet Tracer network simulator. The Cisco Network Academy curriculum has three courses. To learn more about CCNAv7 courses and to find an Academy near you, visit <http://www.netacad.com>.

However, if you are not an Academy student but want to benefit from the extensive authoring done for these courses, you can buy any or all of CCNAv7 Companion Guides (CGs) and Labs & Study Guides (LSGs) of the Academy's popular online curriculum. Although you will not have access to the Packet Tracer files, you will have access to the tireless work of an outstanding team of Cisco Academy instructors dedicated to providing students with comprehensive and engaging CCNA preparation course material. The titles and ISBNs for the CCNAv7 CGs and LSGs follow:

- *Introduction to Networks v7 Companion Guide* (ISBN: 9780136633662)
- *Introduction to Networks v7 Labs & Study Guide* (ISBN: 9780136634454)
- *Switching, Routing, and Wireless Essentials v7 Companion Guide* (ISBN: 9780136729358)
- *Switching, Routing, and Wireless Essentials v7 Labs & Study Guide* (ISBN: 9780136634386)

- *Enterprise Networking, Security, and Automation v7 Companion Guide* (ISBN: 9780136634324)
- *Enterprise Networking, Security, and Automation v7 Labs & Study Guide* (ISBN: 9780136634690)

You can find these books at <http://www.ciscopress.com> by clicking the Cisco Networking Academy link.

Supplemental Resources

In addition to the book you hold in your hands, I recommend three supplemental resources to augment your final 31 days of review and preparation.

First is Scott Empson's very popular *CCNA 200-301 Portable Command Guide* (ISBN: 9780135937822). This guide is much more than just a listing of commands and what they do. Yes, it summarizes all the CCNA certification-level IOS commands, keywords, command arguments, and associated prompts. It also provides you with tips and examples of how to apply the commands to real-world scenarios. Configuration examples throughout the book provide you with a better understanding of how these commands are used in simple network designs.

Second, Kevin Wallace's *CCNA 200-301 Complete Video Course and Practice Test* (ISBN: 9780136582755) is a comprehensive training course that brings Cisco CCNA exam topics to life through the use of real-world demonstrations, animations, live instruction, and configurations, making learning these foundational networking topics easy and fun. Kevin's engaging style and love for the technology are infectious. The course also includes excellent practice tests.

Third, Wendell Odom's *IP Subnetting LiveLessons* (ISBN: 9780135497777) and *IP Subnetting Practice Questions Kit* (ISBN: 9780135647288) will help you master this crucial skill. Subnetting is not only an IPv4 address design skill, it is also crucial skill for troubleshooting situations where IPv4 addressing has been misconfigured. You are likely to have both types of questions on the CCNA exam.

The Cisco Learning Network

Finally, if you have not done so already, you should register with The Cisco Learning Network at <https://learningnetwork.cisco.com>. Sponsored by Cisco, The Cisco Learning Network is a free social learning network where IT professionals can engage in the common pursuit of enhancing and advancing their IT careers. Here you can find many resources to help you prepare for your CCNA exam, in addition to a community of like-minded people ready to answer your questions, help you with your struggles, and share in your triumphs.

So which resources should you buy? The answer to that question depends largely on how deep your pockets are and how much you like books. If you're like me, you must have it all! I admit it; my bookcase is a testament to my Cisco "geekness." But if you are on a budget, choose one of the primary study resources and one of the supplemental resources (such as Wendell Odom's certification library and Scott Empson's command guide). Whatever you choose, you will be in good hands. Any or all of these authors will serve you well.

Goals and Methods

The main goal of this book is to provide you with a clear and succinct review of the CCNA objectives. Each day's exam topics are grouped into a common conceptual framework and use the following format:

- A title for the day that concisely states the overall topic
- A list of one or more CCNA 200-301 exam topics to be reviewed
- A "Key Topics" section that introduces the review material and quickly orients you to the day's focus
- An extensive review section consisting of short paragraphs, lists, tables, examples, and graphics
- A "Study Resources" section to give you a quick reference for locating more in-depth treatment of the day's topics

The book counts down starting with Day 31 and continues through exam day to provide post-test information. Inside this book is also a calendar and checklist that you can tear out and use during your exam preparation.

Use the calendar to enter each actual date beside the countdown day and the exact day, time, and location of your CCNA exam. The calendar provides a visual for the time you can dedicate to each CCNA exam topic.

The checklist highlights important tasks and deadlines leading up to your exam. Use it to help you map out your studies.

Who Should Read This Book?

The audience for this book is anyone finishing preparation for taking the CCNA 200-301 exam. A secondary audience is anyone needing a refresher review of CCNA exam topics—possibly before attempting to recertify or sit for another certification for which the CCNA is a prerequisite.

Getting to Know the CCNA 200-301 Exam

For the current certification announced in June 2019, Cisco created the CCNA 200-301 exam. This book focuses on the entire list of topics published for the CCNA 200-301 exam.

The CCNA 200-301 exam is a 120-minute exam associated with the CCNA certification. This exam tests a candidate's knowledge and skills related to network fundamentals, network access, IP connectivity, IP services, security fundamentals, and automation and programmability. Use the following steps to access a tutorial at home that demonstrates the exam environment before you go to take the exam:

Step 1. Visit <http://learningnetwork.cisco.com>.

Step 2. Search for "cisco certification exam tutorial".

Step 3. Look through the top results to find the page with videos that walk you through each exam question type.

When you get to the testing center and check in, the proctor verifies your identity, gives you some general instructions, and takes you into a quiet room containing a PC. When you're at the PC, you have a few things to do before the timer starts on your exam. For instance, you can take the tutorial to get accustomed to the PC and the testing engine. Every time I sit for an exam, I go through the tutorial even though I know how the test engine works. It helps me settle my nerves and get focused. Anyone who has user-level skills in getting around a PC should have no problem with the testing environment.

When you start the exam, you are asked a series of questions. The questions are presented one at a time and must be answered before moving on to the next question. The exam engine does not let you go back and change any answers. Each exam question is in one of the following formats:

- Multiple choice
- Fill in the blank
- Drag and drop
- Testlet
- Simlet
- Simulation

The multiple-choice format simply requires that you point and click a circle or check box next to the correct answer(s). Cisco traditionally tells you how many answers you need to choose, and the testing software prevents you from choosing too many or too few.

Fill-in-the-blank questions usually require you only to type numbers. However, if words are requested, the case does not matter unless the answer is a command that is case sensitive (such as passwords and device names, when configuring authentication).

Drag-and-drop questions require you to click and hold, move a button or an icon to another area, and release the mouse button to place the object somewhere else—usually in a list. For some questions, to get the question correct, you might need to put a list of five things in the proper order.

A testlet contains one general scenario and several multiple-choice questions about the scenario. Testlets are ideal if you are confident in your knowledge of the scenario's content because you can leverage your strength over multiple questions.

A simlet is similar to a testlet, in that you are given a scenario with several multiple-choice questions. However, a simlet uses a network simulator to allow you access to a simulation of the command line of Cisco IOS Software. You can use **show** commands to examine a network's current behavior and answer the question.

A simulation also involves a network simulator, but you are given a task to accomplish, such as implementing a network solution or troubleshooting an existing network implementation. You do this by configuring one or more routers and switches. The exam grades the question based on the configuration you changed or added. A newer form of the simulation question is the GUI-based simulation, which simulates a graphical interface such as that found on a Linksys router or the Cisco Security Device Manager.

Topics Covered on the CCNA Exam

Table I-1 summarizes the seven domains of the CCNA 200-301 exam:

Table I-1 CCNA 200-301 Exam Domains and Weightings

Domain	Percentage of Exam
1.0 Network Fundamentals	20%
2.0 Network Access	20%
3.0 IP Connectivity	25%
4.0 IP Services	10%
5.0 Security Fundamentals	15%
6.0 Automation and Programmability	10%

Although Cisco outlines general exam topics, not all topics might appear on the CCNA exam; likewise, topics that are not specifically listed might appear on the exam. The exam topics that Cisco provides and that this book covers provide a general framework for exam preparation. Be sure to check Cisco's website for the latest exam topics.

Registering for the CCNA 200-301 Exam

If you are starting this book 31 days before you take the CCNA 200-301 exam, register for the exam right now. In my testing experience, there is no better motivator than a scheduled test date staring me in the face. I'm willing to bet the same holds true for you. Don't worry about unforeseen circumstances. You can cancel your exam registration for a full refund up to 24 hours before taking the exam. So if you're ready, gather the following information and register right now!

- Legal name
- Social Security or passport number
- Company name
- Valid email address
- Method of payment

You can schedule your exam at any time by visiting www.pearsonvue.com/cisco/. I recommend that you schedule it for 31 days from now. The process and available test times vary based on the local testing center you choose.

Remember, there is no better motivation for study than an actual test date. *Sign up today.*

Networking Models, Devices, and Components

CCNA 200-301 Exam Topics

- Explain the role and function of network components
- Describe characteristics of network topology architectures
- Compare physical interface and cabling types
- Identify interface and cable issues (collisions, errors, mismatch duplex and/or speed)
- Compare TCP to UDP

Key Points


Both the Open Systems Interconnection (OSI) and Transmission Control Protocol/Internet Protocol (TCP/IP) networking models are important conceptual frameworks for understanding networks. Today we review the layers and functions of each model, along with the process of data flow from source to destination. We also spend some time on Transmission Control Protocol (TCP) and the User Datagram Protocol (UDP). Then we wrap up the day with a look at devices used in today's networks, the media used to interconnect those devices, and the different types of network topologies.

NOTE: This day might seem a bit long. However, you need to be very familiar with all of this content. Scan the day, focusing on areas where you feel least confident in your knowledge.

The OSI and TCP/IP Models

To understand how communication occurs across the network, you can use layered models as a framework for representing and explaining networking concepts and technologies. Layered models, such as the TCP/IP and OSI models, support interoperability between competing vendor product lines.

The OSI model principally serves as a tool for explaining networking concepts and troubleshooting. However, the protocols of the TCP/IP suite are the rules by which networks now operate. Because both models are important, you should be well versed in each model's layers and know how the models map to each other. Figure 31-1 summarizes the two models.

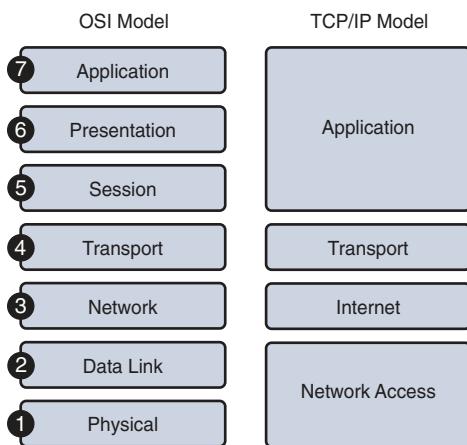Figure 31-1 OSI and TCP/IP Models

Using two models can be confusing; however, these simple guidelines might help:

- When discussing layers of a model, we are usually referring to the OSI model.
- When discussing protocols, we are usually referring to the TCP/IP model.

The next sections quickly review the OSI layers and the TCP/IP protocols.

OSI Layers

Table 31-1 summarizes the layers of the OSI model and provides a brief functional description.

Table 31-1 OSI Model Layers and Functions

Layer	Functional Description
Application (7)	Refers to interfaces between network and application software. Also includes authentication services.
Presentation (6)	Defines the format and organization of data. Includes encryption.
Session (5)	Establishes and maintains end-to-end bidirectional flows between endpoints. Includes managing transaction flows.
Transport (4)	Provides a variety of services between two host computers, including connection establishment and termination, flow control, error recovery, and segmentation of large data blocks into smaller parts for transmission.
Network (3)	Refers to logical addressing, routing, and path determination.
Data link (2)	Formats data into frames appropriate for transmission onto some physical medium. Defines rules for when the medium can be used. Defines the means by which to recognize transmission errors.
Physical (1)	Defines the electrical, optical, cabling, connectors, and procedural details required for transmitting bits, represented as some form of energy passing over a physical medium.

The following mnemonic phrase, in which the first letter represents the layer (*A* stands for *application*), can help in memorizing the name and order of the layers from top to bottom:

All People Seem To Need Data Processing

TCP/IP Layers and Protocols

The TCP/IP model defines four categories of functions that must occur for communications to succeed. Most protocol models describe vendor-specific protocol stacks. However, because the TCP/IP model is an open standard, one company does not control the definition of the model.

Table 31-2 summarizes the TCP/IP layers, their functions, and the most common protocols.

Table 31-2 TCP/IP Layer Functions

TCP/IP Layer	Function	Example Protocols
Application	Represents data to the user and controls dialogue	DNS, Telnet, SMTP, POP3, IMAP, DHCP, HTTP, FTP, SNMP
Transport	Supports communication between diverse devices across diverse networks	TCP, UDP
Internet	Determines the best path through the network	IP, ARP, ICMP
Network access	Controls the hardware devices and media that make up the network	Ethernet, Wireless

In the coming days, we review these protocols in more detail. For now, a brief description of the main TCP/IP protocols follows:

- **Domain Name System (DNS):** Provides the IP address of a website or domain name so that a host can connect to it
- **Telnet:** Enables administrators to log in to a host from a remote location
- **Simple Mail Transfer Protocol (SMTP), Post Office Protocol (POP3), and Internet Message Access Protocol (IMAP):** Facilitate the sending of email messages between clients and servers
- **Dynamic Host Configuration Protocol (DHCP):** Assigns IP addressing to requesting clients
- **Hypertext Transfer Protocol (HTTP):** Transfers information between web clients and web servers
- **File Transfer Protocol (FTP):** Facilitates the download and upload of files between an FTP client and an FTP server
- **Simple Network Management Protocol (SNMP):** Enables network management systems to monitor devices attached to the network
- **Transmission Control Protocol (TCP):** Supports virtual connections between hosts on the network to provide reliable delivery of data

- **User Datagram Protocol (UDP):** Supports faster, unreliable delivery of lightweight or time-sensitive data
- **Internet Protocol (IP):** Provides a unique global address to computers for communicating over the network
- **Address Resolution Protocol (ARP):** Finds a host's hardware address when only the IP address is known
- **Internet Control Message Protocol (ICMP):** Sends error and control messages, including reachability of another host and availability of services
- **Ethernet:** Serves as the most popular LAN standard for framing and preparing data for transmission onto the media
- **Wireless:** Includes both IEEE 802.11 standards for wireless local-area networks (WLANs) and cellular access options.

Protocol Data Units and Encapsulation

As application data is passed down the protocol stack on its way to be transmitted across the network media, various protocols add information to it at each level. This is commonly known as the *encapsulation process*. The data structure at any given layer is called a *protocol data unit (PDU)*. Table 31-3 lists the PDUs at each layer of the OSI model.

Table 31-3 PDUs at Each Layer of the OSI Model

OSI Layer	PDU
Application	Data
Presentation	Data
Session	Data
Transport	Segment
Network	Packet
Data link	Frame
Physical	Bits

The following steps summarize the communication process from any source to any destination:

- Step 1.** Data is created at the application layer of the originating source device.
- Step 2.** As the data passes down the protocol stack in the source device, it is segmented and encapsulated.
- Step 3.** The data is generated onto the media at the network access layer of the stack.
- Step 4.** The data is transported through the internetwork, which consists of media and any intermediary devices.
- Step 5.** The destination device receives the data at the network access layer.

Step 6. As the data passes up the stack in the destination device, it is decapsulated and reassembled.

Step 7. The data is passed to the destination application at the application layer of the destination device.

The TCP/IP Application Layer

The application layer of the TCP/IP model provides an interface between software such as a web browser and the network itself. The process of requesting and receiving a web page works like this:

Step 1. An HTTP request is sent, including an instruction to “get” a file (which is often a website’s home page).

Step 2. An HTTP response is sent from the web server with a code in the header, usually either 200 (request succeeded, and information is returned in response) or 404 (page not found).

The HTTP request and the HTTP response are encapsulated in headers. The content of the headers allows the application layers on each end device to communicate. Regardless of the application layer protocol (HTTP, FTP, DNS, and so on), all headers use the same general process for communicating between application layers on the end devices.

The TCP/IP Transport Layer

The transport layer, through TCP, provides a mechanism to guarantee delivery of data across the network. TCP supports error recovery to the application layer through the use of basic acknowledgment logic. Adding to the process for requesting a web page, TCP operation works like this:

Step 1. The web client sends an HTTP request for a specific web server down to the transport layer.

Step 2. TCP encapsulates the HTTP request with a TCP header and includes the destination port number for HTTP.

Step 3. Lower layers process and send the request to the web server.

Step 4. The web server receives HTTP requests and sends a TCP acknowledgment back to the requesting web client.

Step 5. The web server sends the HTTP response down to the transport layer.

Step 6. TCP encapsulates the HTTP data with a TCP header.

Step 7. Lower layers process and send the response to the requesting web client.

Step 8. The requesting web client sends an acknowledgment back to the web server.

If data is lost at any point during this process, TCP must recover the data. HTTP at the application layer does not get involved in error recovery.

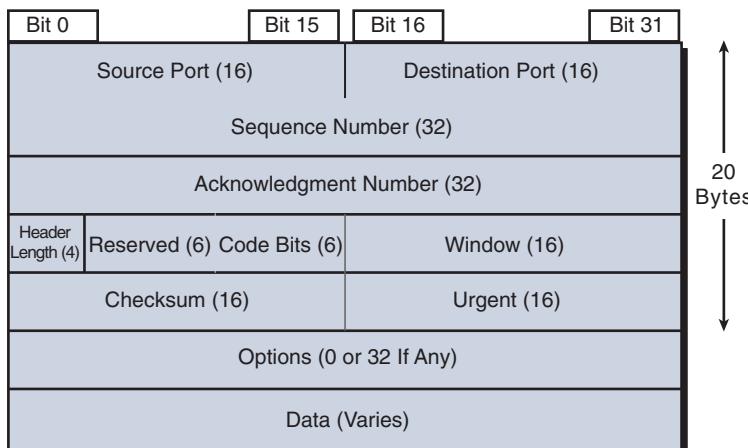
In addition to providing TCP, the transport layer provides UDP, a connectionless, unreliable protocol for sending data that does not require or need error recovery. Table 31-4 lists the main features that the transport protocols support. Both TCP and UDP support the first function; only TCP supports the rest.

Table 31-4 TCP/IP Transport Layer Features

Function	Description
Multiplexing using ports	Function that enables receiving hosts to choose the correct application for which the data is destined, based on the destination port number.
Error recovery (reliability)	Process of numbering and acknowledging data with Sequence and Acknowledgment header fields.
Flow control using windowing	Process that involves a sliding window size that the two end devices dynamically agree upon at various points during the virtual connection. The window size, represented in bytes, is the maximum amount of data the source will send before receiving an acknowledgment from the destination.
Connection establishment and termination	Process used to initialize port numbers and Sequence and Acknowledgment fields.
Ordered data transfer and data segmentation	A continuous stream of bytes from an upper-layer process that is “segmented” for transmission and delivered to upper-layer processes at the receiving device, with the bytes in the same order.

TCP Header

TCP provides error recovery, but to do so, it consumes more bandwidth and uses more processing cycles than UDP. TCP and UDP rely on IP for end-to-end delivery. TCP is concerned with providing services to the applications of the sending and receiving computers. To provide all these services, TCP uses a variety of fields in its header (see Figure 31-2).

Figure 31-2 TCP Header

Port Numbers

The first two fields of the TCP header—the source and destination ports—are also part of the UDP header (shown later, in Figure 31-7). Port numbers provide TCP (and UDP) with a way to multiplex multiple applications on the same computer. Web browsers now support multiple tabs or pages. Each time you open a new tab and request another web page, TCP assigns a different source port number and sometimes multiple port numbers. For example, you might have five web pages open. TCP almost always assigns destination port 80 for all five sessions. However, the source port for each is different. This is how TCP (and UDP) multiplexes the conversation so that the web browser knows in which tab to display the data.

TCP and UDP usually dynamically assign the source ports, starting at 1024 up to a maximum of 65535. Port numbers below 1024 are reserved for well-known applications. Table 31-5 lists several popular applications and their well-known port numbers.

Table 31-5 Popular Applications and Their Well-Known Port Numbers

Port Number	Protocol	Application
20	TCP	FTP data
21	TCP	FTP control
22	TCP	SSH
23	TCP	Telnet
25	TCP	SMTP
53	UDP, TCP	DNS
67, 68	UDP	DHCP
69	UDP	TFTP
80	TCP	HTTP (WWW)
110	TCP	POP3
161	UDP	SNMP
443	TCP	HTTPS (SSL)
16384–32767	UDP	RTP-based voice (VoIP) and video

Error Recovery

TCP provides error recovery, also known as *reliability*, during data transfer sessions between two end devices that have established a connection. The Sequence and Acknowledgment fields in the TCP header track every byte of data transfer and ensure that missing bytes are retransmitted.

In Figure 31-3, the Acknowledgment field sent by the web client (4000) implies the next byte to be received; this is called *positive acknowledgment*.

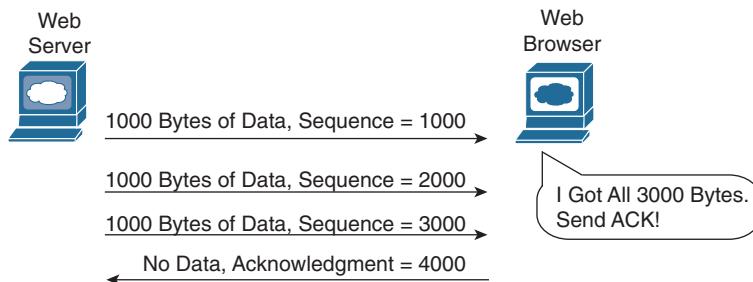
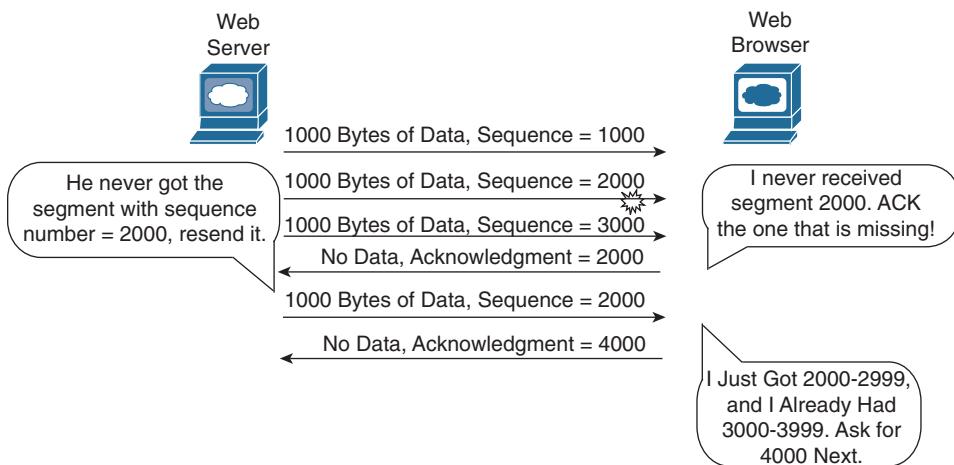
Figure 31-3 TCP Acknowledgment Without Errors

Figure 31-4 shows the same scenario, except now with some errors. The second TCP segment was lost in transmission. Therefore, the web client replies with an ACK field set to 2000. This is called a *positive acknowledgment with retransmission (PAR)* because the web client is requesting that some of the data be retransmitted. The web server now re-sends data starting at segment 2000. In this way, lost data is recovered.

Figure 31-4 TCP Acknowledgment with Errors

Although not shown, the web server also sets a retransmission timer and awaits acknowledgment, just in case the acknowledgment is lost or all transmitted segments are lost. If that timer expires, the web server sends all segments again.

Flow Control

TCP handles flow control through a process called *windowing*. The two end devices negotiate the window size when initially establishing the connection; then they dynamically renegotiate window size during the life of the connection, increasing its size until it reaches the maximum window size of 65,535 bytes or until errors occur. Window size is specified in the Window field of the TCP header. After sending the amount of data specified in the window size, the source must receive an acknowledgment before sending the next window size of data.

Connection Establishment and Termination

Connection establishment is the process of initializing Sequence and Acknowledgment fields and agreeing on port numbers and window size. The three-way connection establishment phase shown in Figure 31-5 must occur before data transfer can proceed.


Figure 31-5 TCP Connection Establishment



In the figure, DPORT and SPORT are the destination and source ports. SEQ is the sequence number. In bold are SYN and ACK, each representing a 1-bit flag in the TCP header used to signal connection establishment. TCP initializes the Sequence Number and Acknowledgment Number fields to any number that fits into the 4-byte fields. The initial Sequence Number is a random 32-bit number generated with each new transmission. The Acknowledgment Number is received back and increments the sender's sequence number by 1.

When data transfer is complete, a four-way termination sequence occurs. This sequence uses an additional flag, called the FIN bit (see Figure 31-6).

Figure 31-6 TCP Connection Termination

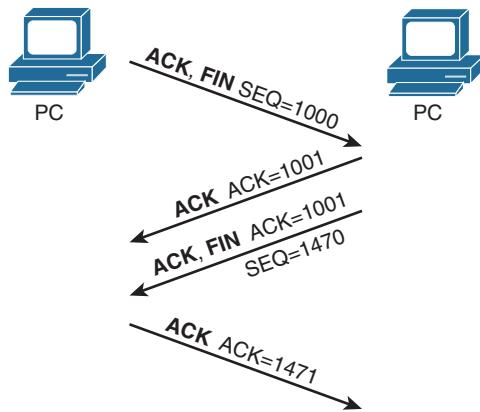

UDP

TCP establishes and terminates connections between endpoints, whereas UDP does not. Therefore, UDP is called a *connectionless protocol*. It provides no reliability, no windowing, and no reordering of the data. However, UDP does provide data transfer and multiplexing using port numbers, and it does so with fewer bytes of overhead and less processing than TCP. Applications that use UDP, such as VoIP, trade the possibility of some data loss for less delay. Figure 31-7 compares the two headers.

Figure 31-7 TCP and UDP Headers

* Unless Specified, Lengths Shown
Are the Numbers of Bytes

The TCP/IP Internet Layer

The Internet layer of the TCP/IP model and its Internet Protocol (IP) define addresses so that each host computer can have a different IP address. In addition, the Internet layer defines the process of routing so that routers can determine the best path for sending packets to the destination. Continuing with the web page example, IP addresses the data as it passes from the transport layer to the Internet layer:

- Step 1.** The web client sends an HTTP request.
- Step 2.** TCP encapsulates the HTTP request.
- Step 3.** IP encapsulates the transport segment into a packet, adding source and destination addresses.
- Step 4.** Lower layers process and send the request to the web server.
- Step 5.** The web server receives HTTP requests and sends a TCP acknowledgment back to the requesting web client.
- Step 6.** The web server sends the HTTP response down to the transport layer.
- Step 7.** TCP encapsulates the HTTP data.
- Step 8.** IP encapsulates the transport segment into a packet, adding source and destination addresses.
- Step 9.** Lower layers process and send the response to the requesting web client.
- Step 10.** The requesting web client sends an acknowledgment back to the web server.

The operation of IP includes not only addressing but also the process of routing the data from source to destination. IP is further discussed and reviewed in the upcoming days.

The TCP/IP Network Access Layer

IP depends on the network access layer to deliver IP packets across a physical network. Therefore, the network access layer defines the protocols and hardware required to deliver data across some physical network by specifying exactly how to physically connect a networked device to the physical media over which data can be transmitted.

The network access layer includes many protocols to deal with the different types of media that data can cross on its way from source device to destination device. For example, data might need to travel first on an Ethernet link and then cross a Point-to-Point (PPP) link, then a Frame Relay link, then a Multiprotocol Label Switching (MPLS) link, and then finally an Ethernet link to reach the destination. At each transition from one media type to another, the network access layer provides the protocols, cabling standards, headers, and trailers to send data across the physical network.

Many times, a local link address is needed to transfer data from one hop to the next. For example, in an Ethernet LAN, Media Access Control (MAC) addresses are used between the sending device and its local gateway router. At the gateway router (depending on the needs of the outbound interface), the Ethernet header might be replaced with an MPLS label. The label serves the same purpose as MAC addresses in Ethernet: to get the data across the link from one hop to the next so that the data can continue its journey to the destination. Some protocols, such as PPP, do not need a link address because only one other device on the link can receive the data.

With the network access layer, we can now finalize our web page example. The following greatly simplifies and summarizes the process of requesting and sending a web page:

- Step 1.** The web client sends an HTTP request.
- Step 2.** TCP encapsulates the HTTP request.
- Step 3.** IP encapsulates the transport segment into a packet, adding source and destination addresses.
- Step 4.** The network access layer encapsulates the packet in a frame, addressing it for the local link.
- Step 5.** The network access layer sends the frame as bits on the media.
- Step 6.** Intermediary devices process the bits at the network access and Internet layers and then forward the data toward the destination.
- Step 7.** The web server receives the bits on the physical interface and sends them up through the network access and Internet layers.
- Step 8.** The web server sends a TCP acknowledgment back to the requesting web client.
- Step 9.** The web server sends the HTTP response down to the transport layer.
- Step 10.** TCP encapsulates the HTTP data.
- Step 11.** IP encapsulates the transport segment into a packet, adding source and destination addresses.
- Step 12.** The network access layer encapsulates the packet in a frame, addressing it for the local link.
- Step 13.** The network access layer sends the frame as bits on the media.
- Step 14.** Lower layers process and send the response to the requesting web client.
- Step 15.** The response travels back to the source over multiple data links.
- Step 16.** The requesting web client receives the response on the physical interface and sends the data up through the network access and Internet layers.

Step 17. The requesting web client sends a TCP acknowledgment back to the web server.

Step 18. The web page is displayed in the requesting device's browser.


Data Encapsulation Summary

Each layer of the TCP/IP model adds its own header information. As the data travels down through the layers, it is encapsulated with a new header. At the network access layer, a trailer is also added. This encapsulation process is described in five steps:

- Step 1.** Create and encapsulate the application data with any required application layer headers. For example, the HTTP OK message can be returned in an HTTP header, followed by part of the contents of a web page.
- Step 2.** Encapsulate the data supplied by the application layer inside a transport layer header. For end-user applications, a TCP or UDP header is typically used.
- Step 3.** Encapsulate the data supplied by the transport layer inside an Internet layer (IP) header. IP is the only protocol available in the TCP/IP network model at the Internet layer.
- Step 4.** Encapsulate the data supplied by the Internet layer inside a network access layer header and trailer. This is the only layer that uses both a header and a trailer.
- Step 5.** Transmit the bits. The physical layer encodes a signal onto the medium to transmit the frame.

The numbers in Figure 31-8 correspond to the five steps in the list, graphically showing the same encapsulation process.

Figure 31-8 Five Steps of Data Encapsulation

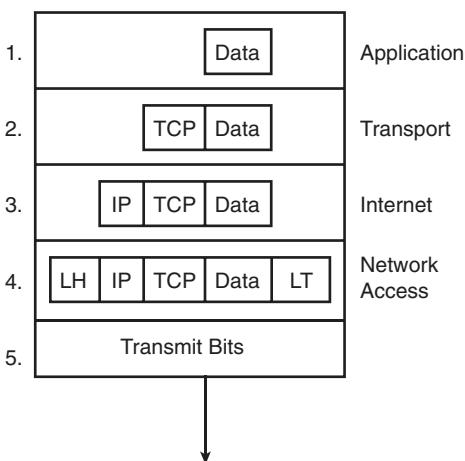


NOTE: The letters LH and LT stand for link header and link trailer, respectively, and refer to the data link layer header and trailer.

Networking Icons

In order to interpret networking diagrams or topologies, you must understand the symbols or icons used to represent different networking devices and media. The icons in Figure 31-9 are the most common networking symbols for CCNA studies.

Figure 31-9 Networking Icons

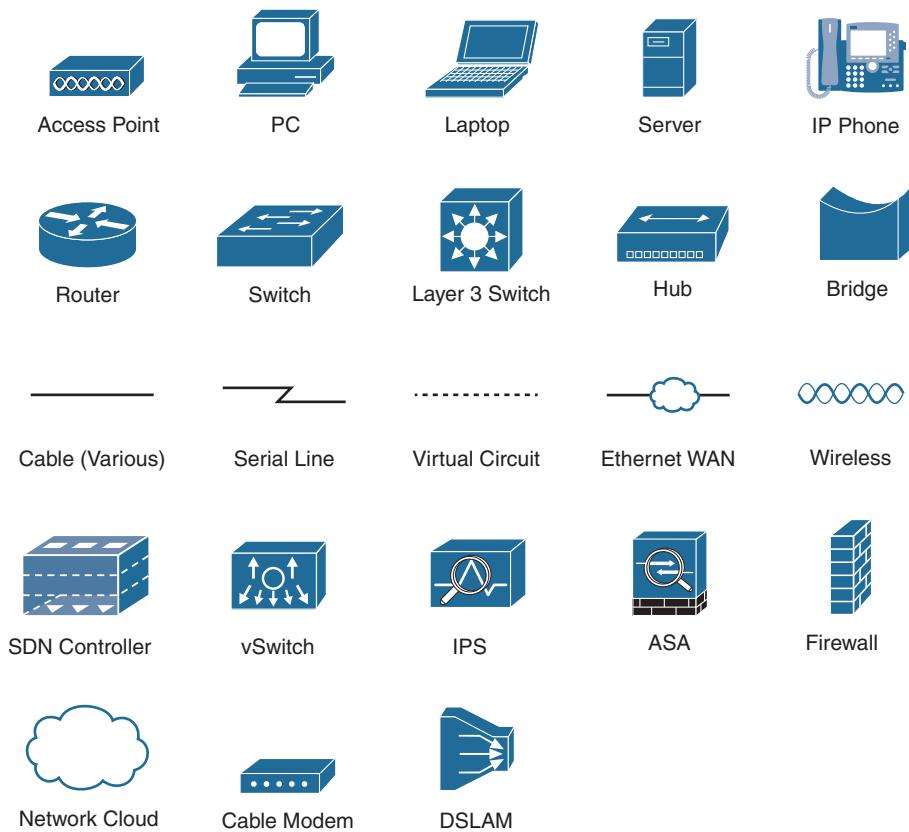

Devices

In today's wired networks, switches are almost exclusively used to connect end devices to a single LAN. Occasionally, you might see a hub connecting end devices, but hubs are really legacy devices. The following are the differences between a hub and a switch:

- Hubs were typically chosen as intermediary devices within very small LANs, in which bandwidth usage was not an issue or cost limitations were a factor. In today's networks, switches have replaced hubs.
- Switches replaced hubs as local-area network (LAN) intermediary devices because a switch can segment collision domains and provide enhanced security.

Switches

When choosing a switch, these are the main factors to consider:

- **Cost:** The cost is determined by the number and type of ports, network management capabilities, embedded security technologies, and optional advanced switching technologies.
- **Interface characteristics:** The number of ports must be sufficient both for now and for future expansion. Other characteristics include uplink speeds, a mixture of UTP and fiber, and modularity.
- **Hierarchical network layer:** Switches at the access layer have different requirements than switches at the distribution or core layers.

Access Layer Switches

Access layer switches facilitate the connection of end devices to the network. Features of access layer switches include the following:

- Port security
- VLANs
- Fast Ethernet/Gigabit Ethernet
- Power over Ethernet (PoE)
- Link aggregation
- Quality of service (QoS)

Distribution Layer Switches

Distribution layer switches receive the data from the access layer switches and forward it to the core layer switches. Features of distribution layer switches include the following:

- Layer 3 support
- High forwarding rate
- Gigabit Ethernet/10 Gigabit Ethernet
- Redundant components
- Security policies/access control lists
- Link aggregation
- QoS

Core Layer Switches

Core layer switches make up the backbone and are responsible for handling the majority of data on a switched LAN. Features of core layer switches include the following:

- Layer 3 support
- Very high forwarding rate
- Gigabit Ethernet/10 Gigabit Ethernet

- Redundant components
- Link aggregation
- QoS

Routers


Routers are the primary devices used to interconnect networks—LANs, WANs, and WLANs. When choosing a router, the main factors to consider are as follows:

- **Expandability:** Provides flexibility to add new modules as needs change.
- **Media:** Determines the type of interfaces the router needs to support for the various network connections.
- **Operating system features:** Determines the version of IOS loaded on the router. Different IOS versions support different feature sets. Features to consider include security, QoS, VoIP, and routing complexity, among others.

Figure 31-10 shows a Cisco 4321 router, which provides the following connections:

- **Console ports:** Two console ports for the initial configuration, using a regular RJ-45 port and a USB Type-B (mini-B USB) connector.
- **AUX port:** An RJ-45 port for remote management access.
- **LAN interfaces:** Two Gigabit Ethernet interfaces for LAN access (G0/0/0 and G0/0/1). If the RJ-45 G0/0/0 port is used, then the small form-factor pluggable (SFP) port cannot be used. WAN services would then be provided through an expansion card in the network interface module (NIM) slots.
- **Ethernet WAN:** The other G0/0/0 physical port, an SFP port that would support various Ethernet WAN connections, typically fiber. If it is used, the Gi0/0 RJ-45 port is disabled.
- **NIM slots:** Two slots that support different types of interface modules, including serial (shown in Figure 31-10), digital subscriber line (DSL), switch port, and wireless.

Figure 31-10 Backplane of the Cisco 4321 Integrated Services Router (ISR)

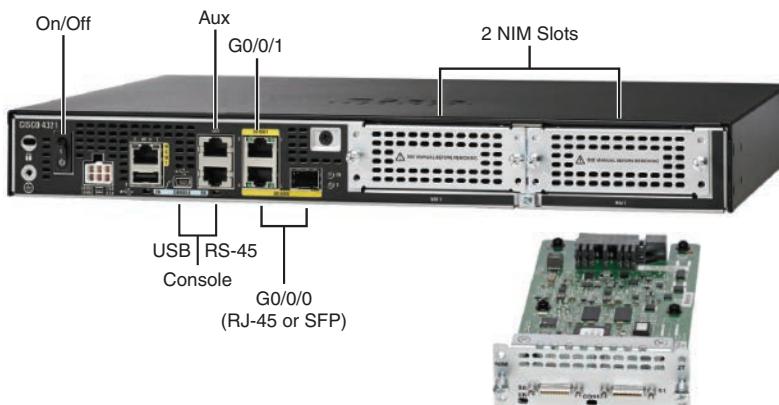

2-Port Serial NIM

Specialty Devices

Switches and routers make up the backbone of a network. In addition, many networks integrate various specialized network devices.


Firewalls

A firewall is a networking device, either hardware or software based, that controls access to the organization's network. This controlled access is designed to protect data and resources from outside threats.

Organizations implement software firewalls through a network operating system (NOS) such as Linux/UNIX, Windows servers, and macOS servers. The firewall is configured on the server to allow or block certain types of network traffic. Hardware firewalls are often dedicated network devices that can be implemented with little configuration.

Figure 31-11 shows a basic stateful firewall.

Figure 31-11 The Function of a Firewall

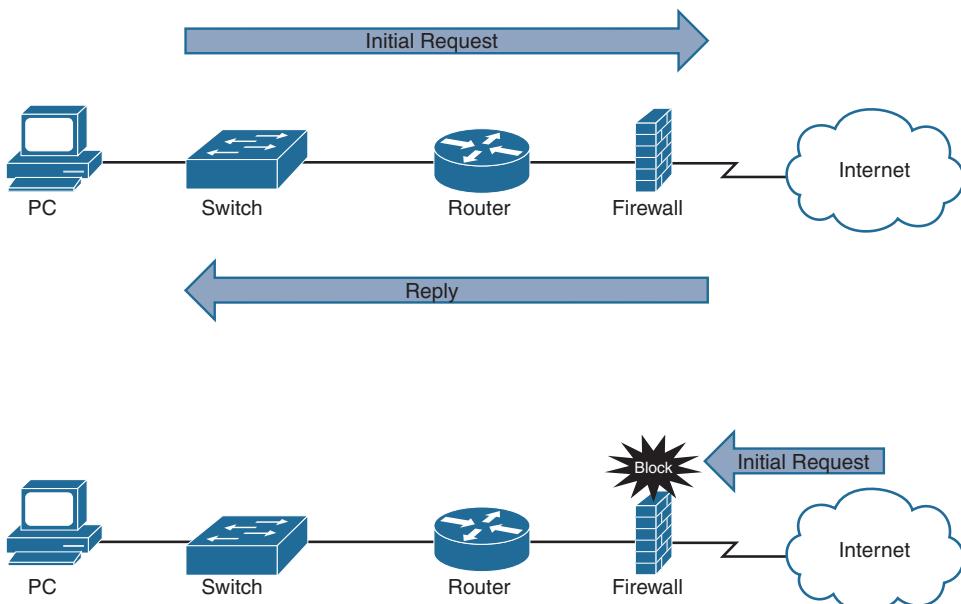


A stateful firewall allows traffic to originate from an inside, trusted network and go out to an untrusted network, such as the Internet. The firewall allows return traffic that comes back from the untrusted network to the trusted network. However, the firewall blocks traffic that originates from an untrusted network.

IDS and IPS

Both intrusion detection systems (IDS) and intrusion prevention systems (IPS) can recognize network attacks; they differ primarily in their network placement. An IDS device receives a copy of traffic to be analyzed. An IPS device is placed inline with the traffic, as Figure 31-12 shows.

Figure 31-12 IPS and IDS Comparison

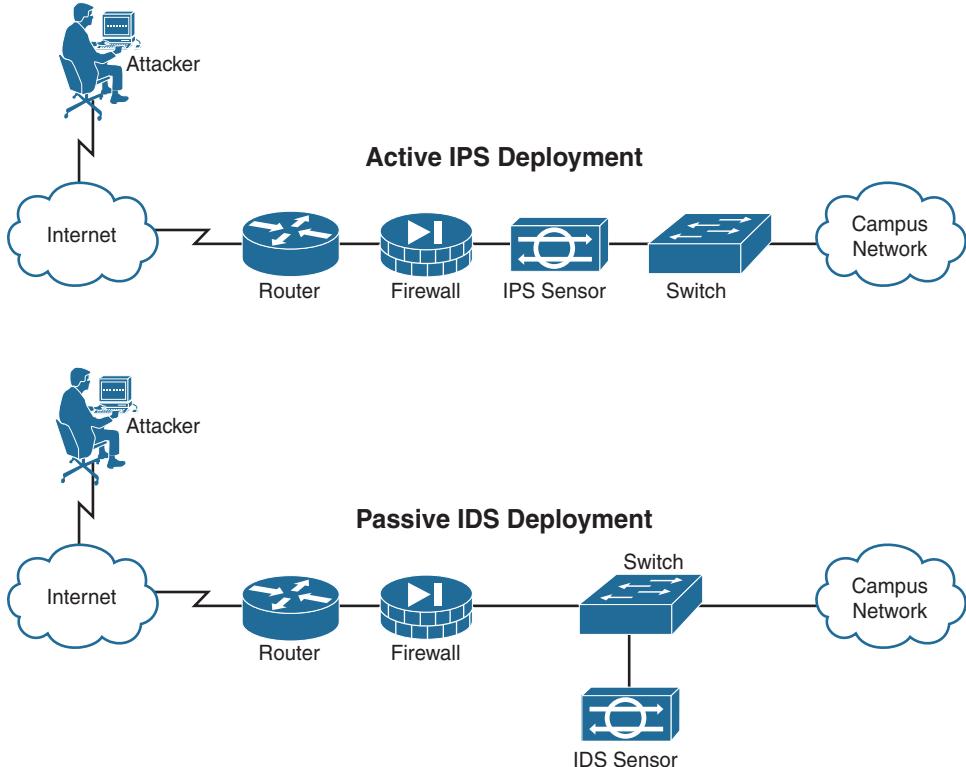

An IDS is a passive detection system. It can detect the presence of an attack, log the information, and send an alert.

An IPS has the same functionality as an IDS, but in addition, an IPS is an active device that continually scans the network, looking for inappropriate activity. It can shut down any potential threats. The IPS looks for any known signatures of common attacks and automatically tries to prevent those attacks.


Next-Generation Firewalls

Although the term *next-generation* in relation to firewalls has been around at least since the earlier 2010s, it can be misleading. Next-generation firewalls (NGFWs) or next-generation IPSs (NGIPSSs) are actually what Cisco currently sells as its Cisco Adaptive Security Appliance (ASA) and Firepower product lines. Be sure to visit www.cisco.com/go/firewalls for more information on Cisco's current firewall offerings.

An NGFW typically has the following features:

- **Traditional firewall:** An NGFW performs traditional firewall functions, such as stateful firewall filtering, NAT/PAT, and VPN termination.
- **Application Visibility and Control (AVC):** AVC makes it possible to look deeply into the application layer data to identify the application to defend against attacks that use random port numbers.
- **Advanced Malware Protection (AMP):** AMP can block file transfers that would install malware and save copies of files for later analysis.
- **Uniform resource locator (URL) filtering:** URL filtering examines the URLs in each web request, categorizes the URLs, and either filters or rate limits the traffic based on rules. The Cisco Talos security group monitors and creates reputation scores for each domain known in the Internet, and URL filtering can use those scores in its decisions to categorize, filter, or rate limit.
- **NGIPS:** Cisco's NGFW products can also run their NGIPS feature along with the firewall, as shown in Figure 31-13.


Figure 31-13 NGFW with NPIPS Module

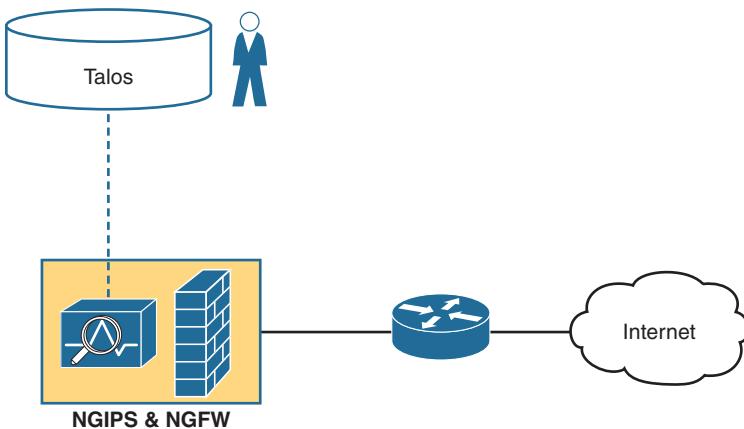

Access Points and Wireless LAN Controllers


Wireless LANs (WLANs) are commonly used in networks. Users expect to be able to connect seamlessly as they move from location to location within a home, a small business, or an enterprise campus network. To enable this connectivity, network administrators manage a collection of wireless access points (APs) and wireless LAN controllers (WLCs).

In small networks, APs are typically used when a router is already providing Layer 3 services, as in Figure 31-14.

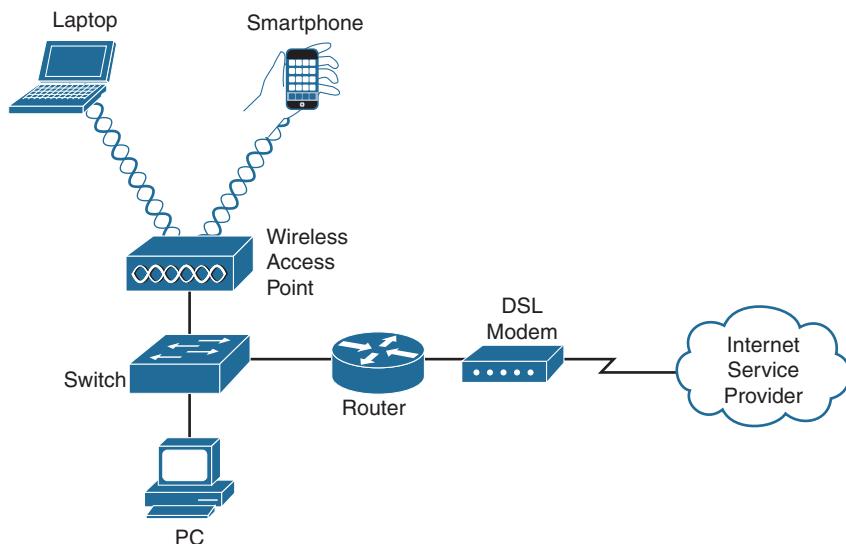Figure 31-14 Small Network with an AP

An AP has an Ethernet port that enables it to be connected to a switch port. In a home or small office network, an AP can be another wireless router with all the Layer 3 services turned off: You simply connect one of the AP's switch ports to one of the switch ports on the wireless router.

APs are also used when the coverage area of an existing WLAN needs to be extended. In larger networks, a wireless LAN controller (WLC) is typically used to manage multiple APs, as in Figure 31-15.

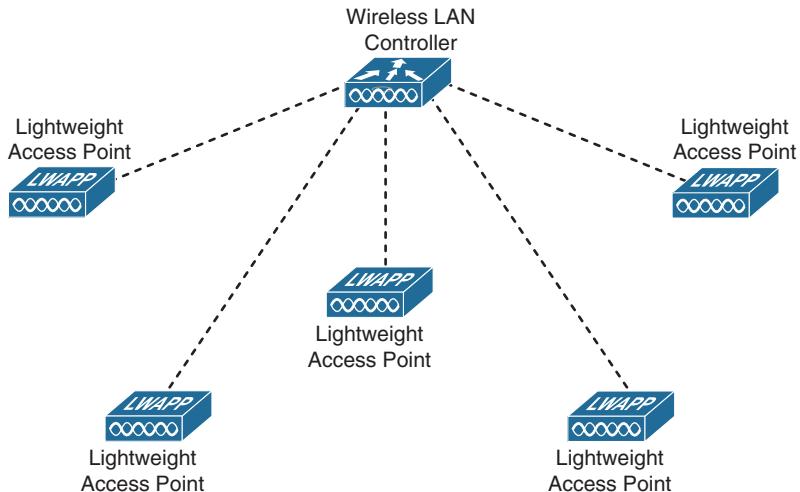Figure 31-15 Example of a Wireless LAN Controller Implementation

WLCs can use the older Lightweight Access Point Protocol (LWAPP) or the more current Control and Provisioning of Wireless Access Points (CAPWAP). With a WLC, VLAN pooling can be used to assign IP addresses to wireless clients from a pool of IP subnets and their associated VLANs.

Physical Layer

Before any network communications can occur, a wired or wireless physical connection must be established. The type of physical connection depends on the network setup. In larger networks, switches and APs are often two separate dedicated devices. In a very small business (three or four employees) or home network, wireless and wired connections are combined into one device and include a broadband method of connecting to the Internet. These wireless broadband routers offer a switching component with multiple ports and an AP, which allows wireless devices to connect as well. Figure 31-16 shows the backplane of a Cisco WRP500 Wireless Broadband Router.

Figure 31-16 Cisco RV160W Wireless-AC VPN Router



Network Media Forms and Standards

Three basic forms of network media exist:

- **Copper cable:** The signals are patterns of electrical pulses.
- **Fiber-optic cable:** The signals are patterns of light.
- **Wireless:** The signals are patterns of microwave transmissions.

Messages are encoded and then placed onto the media. Encoding is the process of converting data into patterns of electrical, light, or electromagnetic energy so that it can be carried on the media.

Table 31-6 summarizes the three most common networking media in use today.

Table 31-6 Networking Media

Media	Physical Components	Frame Encoding Technique	Signaling Methods
Copper cable	UTP	Manchester encoding	Changes in the electromagnetic field.
	Coaxial	Nonreturn to zero (NRZ) techniques	Intensity of the electromagnetic field.
	Connectors	4B/5B codes used with Multi-Level Transition Level 3 (MLT-3) signaling	Phase of the electromagnetic wave.
	NICs	8B/10B	
	Ports		
	Interfaces	PAM5	
Fiber-optic cable	Single-mode fiber	Pulses of light	A pulse equals 1.
	Multimode fiber	Wavelength multiplexing using different colors	No pulse is 0.
	Connectors		
	NICs		
	Interfaces		
	Lasers and LEDs		
Wireless	Photoreceptors		
	Access points	Direct Sequence Spread Spectrum (DSSS)	Radio waves.
	NICs		
	Radio	Orthogonal Frequency Division Multiplexing (OFDM)	
	Antennas		

Each media type has advantages and disadvantages. When choosing the media, consider each of the following:

- **Cable length:** Does the cable need to span a room or run from building to building?
- **Cost:** Does the budget allow for using a more expensive media type?
- **Bandwidth:** Does the technology used with the media provide adequate bandwidth?
- **Ease of installation:** Does the implementation team have the capability to install the cable, or is a vendor required?
- **Susceptible to EMI/RFI:** Will the local environment interfere with the signal?

Table 31-7 summarizes the media standards for LAN cabling.

Table 31-7 Media Standard, Cable Length, and Bandwidth

Ethernet Type	Bandwidth	Cable Type	Maximum Distance
10BASE-T	10 Mbps	Cat3/Cat5 UTP	100 m
100BASE-TX	100 Mbps	Cat5 UTP	100 m
100BASE-TX	200 Mbps	Cat5 UTP	100 m
100BASE-FX	100 Mbps	Multimode fiber	400 m
100BASE-FX	200 Mbps	Multimode fiber	2 km
1000BASE-T	1 Gbps	Cat5e UTP	100 m
1000BASE-TX	1 Gbps	Cat6 UTP	100 m
1000BASE-SX	1 Gbps	Multimode fiber	550 m
1000BASE-LX	1 Gbps	Single-mode fiber	2 km
10GBASE-T	10 Gbps	Cat6a/Cat7 UTP	100 m
10GBASE-SX4	10 Gbps	Multimode fiber	550 m
10GBASE-LX4	10 Gbps	Single-mode fiber	2 km

LAN Device Connection Guidelines

End devices are pieces of equipment that are either the original source or the final destination of a message. Intermediary devices connect end devices to the network to assist in getting a message from the source end device to the destination end device.

Connecting devices in a LAN is usually done with unshielded twisted pair (UTP) cabling. Although many newer devices have an automatic crossover feature that enables you to connect either a straight-through or a crossover cable, you still need to know the following basic rules:

Use straight-through cables for the following connections:

- Switch to router Ethernet port
- Computer to switch
- Computer to hub

Use crossover cables for the following connections:

- Switch to switch
- Switch to hub
- Hub to hub
- Router to router (Ethernet ports)
- Computer to computer
- Computer to router Ethernet port

LANs and WANs

A local-area network (LAN) is a network of computers and other components located relatively close together in a limited area. LANs can vary widely in size, from one computer connected to a router in a home office, to hundreds of computers in a corporate office. However, in general, a LAN spans a limited geographic area. The fundamental components of a LAN include the following:

- Computers
- Interconnections (NICs and the media)
- Networking devices (hubs, switches, and routers)
- Protocols (Ethernet, IP, ARP, DHCP, DNS, and so on)

A wide-area network (WAN) generally connects LANs that are geographically separated. A collection of LANs connected by one or more WANs is called an *internetwork*; thus, we have the Internet. The term *intranet* is often used to refer to a privately owned connection of LANs and WANs.


Depending on the type of service, connecting to the WAN normally works in one of the following ways:

- 60-pin serial connection to a CSU/DSU (legacy)
- RJ-45 T1 controller connection to a CSU/DSU (legacy)
- RJ-11 connection to a dialup or DSL modem
- Cable coaxial connection to a cable modem
- Fiber Ethernet connection to service provider's switch

Small Office/Home Office (SOHO)

With the growing number of remote workers, enterprises have an increasing need for secure, reliable, and cost-effective ways to connect people working in small offices or home offices (SOHO) or other remote locations to resources on corporate sites. For SOHO workers, this is typically done through a cable or DSL connection, as shown in Figure 31-17.

Figure 31-17 SOHO Connections to the Internet

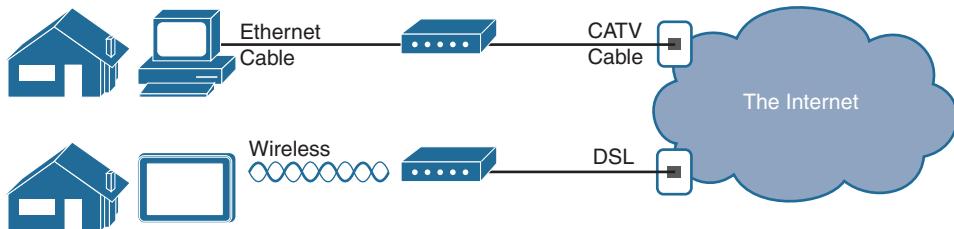

Remote connection technologies to support teleworkers include the following:

- Traditional private WAN technologies, including Frame Relay, ATM, and leased lines, although these technologies are now considered legacy
- Remote secure virtual private network (VPN) access through a broadband connection over the public Internet

Components needed for teleworker connectivity include the following:


- **Home office components:** Computer, broadband access (cable or DSL), and a VPN router or VPN client software installed on the computer
- **Corporate components:** VPN-capable routers, VPN concentrators, multifunction security appliances, authentication, and central management devices for resilient aggregation and termination of the VPN connections

SOHO Routers

The gateway to the Internet for a SOHO is typically an integrated multifunction routers. SOHO routers have the following features:

- Use the Internet and VPN technology for their WAN connections to send data back and forth to the rest of the enterprise.
- Use a multifunction device that handles routing, LAN switching, VPN, wireless, and other features, as shown in Figure 31-18.

Figure 31-18 Internal Functions of a SOHO Router

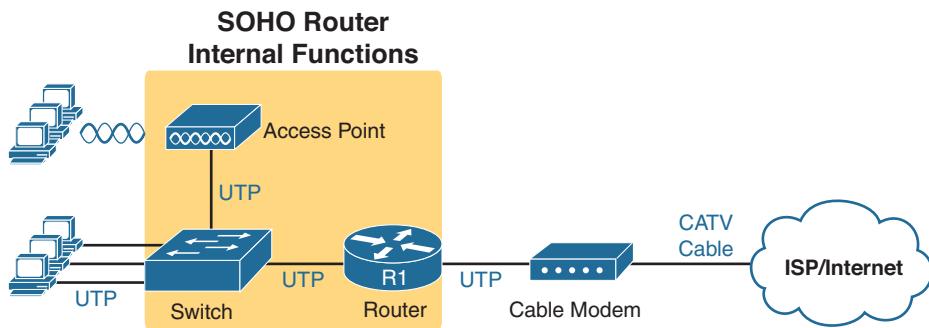


In reality, the access point and switch are integrated into the router.

Physical and Logical Topologies

Network diagrams are usually referred to as *topologies*. A topology graphically displays the interconnection methods used between devices.

Physical topologies refer to the physical layout of devices and how they are cabled. Seven basic physical topologies exist (see Figure 31-19).

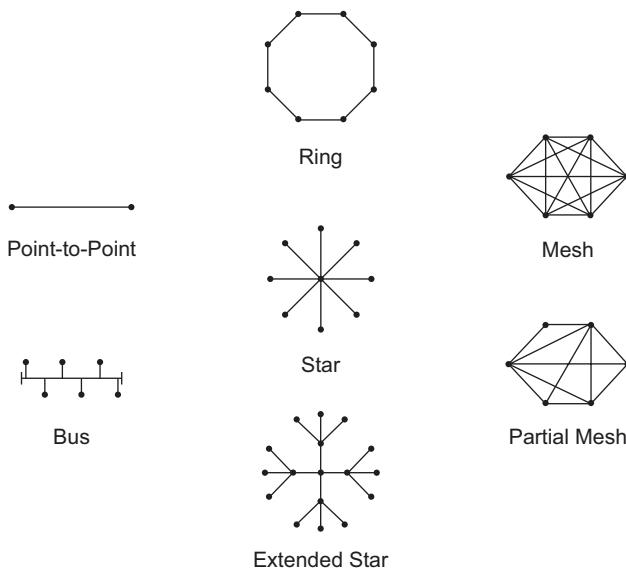Figure 31-19 Physical Topologies

Logical topologies refer to the way that a signal travels from one point on the network to another and are largely determined by the access method—deterministic or nondeterministic. Ethernet is a nondeterministic access method. Logically, Ethernet operates as a bus topology. However, Ethernet networks are almost always physically designed as star or extended star topologies.


Other access methods use a deterministic access method. Token Ring and Fiber Distributed Data Interface (FDDI) both logically operate as ring topologies, passing data from one station to the next. Although these networks can be designed as physical rings, like Ethernet, they are often designed as star or extended star topologies. Logically, however, they operate like ring topologies.

Hierarchical Campus Designs


Hierarchical campus design involves dividing the network into discrete layers. Each layer provides specific functions that define its role within the overall network. By separating the various functions that exist on a network, the network design becomes modular, which facilitates scalability and performance. The hierarchical design model is divided into three layers:

- **Access layer:** Provides local and remote user access
- **Distribution layer:** Controls the flow of data between the access and core layers
- **Core layer:** Acts as the high-speed redundant backbone

Figure 31-20 shows an example of the three-tier hierarchical campus network design.

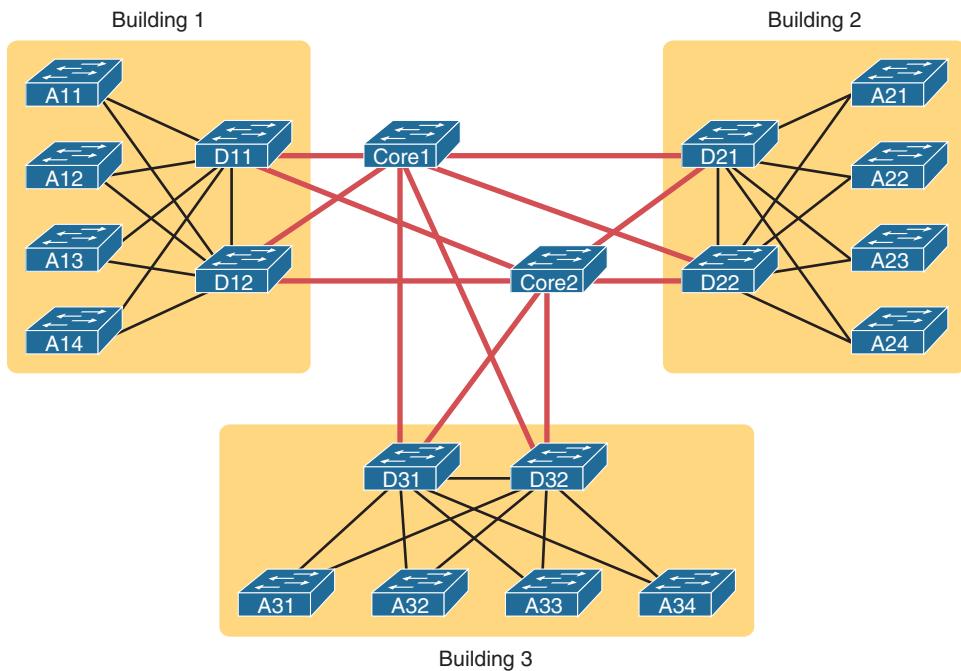Figure 31-20 Three-Tier Campus Design

For smaller networks, the core is often collapsed into the distribution layer for a two-tier design, as in Figure 31-21.

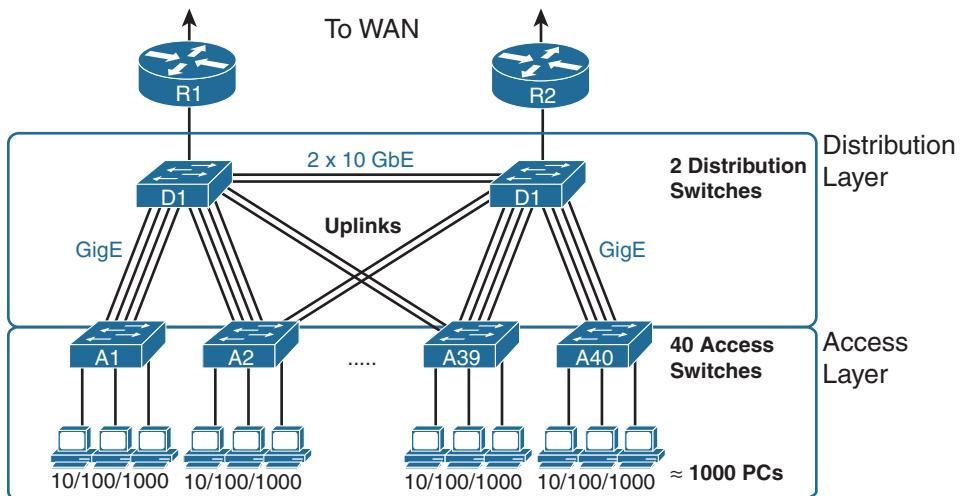Figure 31-21 Two-Tier Campus Design

A two-tier design solves two major design needs:

- Provides a place to connect end-user devices (the access layer, with access switches)
- Connects the switches with a reasonable number of cables and switch ports by connecting all 40 access switches to two distribution switches

For very small networks and home networks, all three tiers can be seen in one device, such as the wireless broadband router shown earlier in Figure 31-16.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7	1
	3
	4
CCNA 200-301 Official Cert Guide, Volume 1	1
	2
	3
	5
	15
	26
CCNA 200-301 Official Cert Guide, Volume 2	5
	13
Portable Command Guide	6

This page intentionally left blank

Ethernet Switching

CCNA 200-301 Exam Topics

- Explain the role and function of network components
- Describe switching concepts

Key Topics

Today we review the concepts behind Ethernet switching, including the history of switching development, how switching actually works, and the variety of switch features. We also review the details of Ethernet operation.

Evolution to Switching

Today's LANs almost exclusively use switches to interconnect end devices; however, this was not always the case. Initially, devices were connected to a physical bus, a long run of coaxial backbone cabling. With the introduction of 10BASE-T and UTP cabling, the hub gained popularity as a cheaper, easier way to connect devices. But even 10BASE-T with hubs had the following limitations:

- A frame sent from one device can collide with a frame sent by another device attached to that LAN segment. Devices were in the same collision domain sharing the bandwidth.
- Broadcasts sent by one device were heard and processed by all other devices on the LAN. Devices were in the same broadcast domain. Much like to hubs, switches forward broadcast frames out all ports except for the incoming port.

Ethernet bridges were soon developed to solve some of the inherent problems in a shared LAN. A bridge basically segmented a LAN into two collision domains, which reduced the number of collisions in a LAN segment. This increased the performance of the network by decreasing unnecessary traffic from another segment.

When switches arrived on the scene, these devices provided the same benefits of bridges, as well as the following:

- A larger number of interfaces to break up the collision domain into more segments
- Hardware-based switching instead of using software to make the decision

In a LAN where all nodes are connected directly to the switch, the throughput of the network increases dramatically. With each computer connected to a separate port on the switch, each is in a separate collision domain and has its own dedicated segment. There are three primary reasons for this increase:

- Dedicated bandwidth to each port
- Collision-free environment
- Full-duplex operation

Switching Logic

Ethernet switches selectively forward individual frames from a receiving port to the port where the destination node is connected. During this instant, the switch creates a full-bandwidth, logical, point-to-point connection between the two nodes.


Switches create this logical connection based on the source and destination Media Access Control (MAC) addresses in the Ethernet header. Specifically, the primary job of a LAN switch is to receive Ethernet frames and then make a decision to either forward the frame or ignore the frame. To accomplish this, the switch performs three actions:

- Step 1.** Decides when to forward a frame or when to filter (not forward) a frame, based on the destination MAC address
- Step 2.** Learns MAC addresses by examining the source MAC address of each frame the switch receives
- Step 3.** Creates a (Layer 2) loop-free environment with other switches by using Spanning Tree Protocol (STP)

To make the decision to forward or filter, the switch uses a dynamically built MAC address table stored in RAM. By comparing the frame's destination MAC address with the fields in the table, the switch decides how to forward and/or filter the frame.

For example, in Figure 30-1, the switch receives a frame from Host A with the destination MAC address OC. The switch looks in its MAC table, finds an entry for the MAC address, and forwards the frame out port 6. The switch also filters the frame by not forwarding it out any other port, including the port on which the frame was received.

Figure 30-1 Switch Forwarding Based on MAC Address

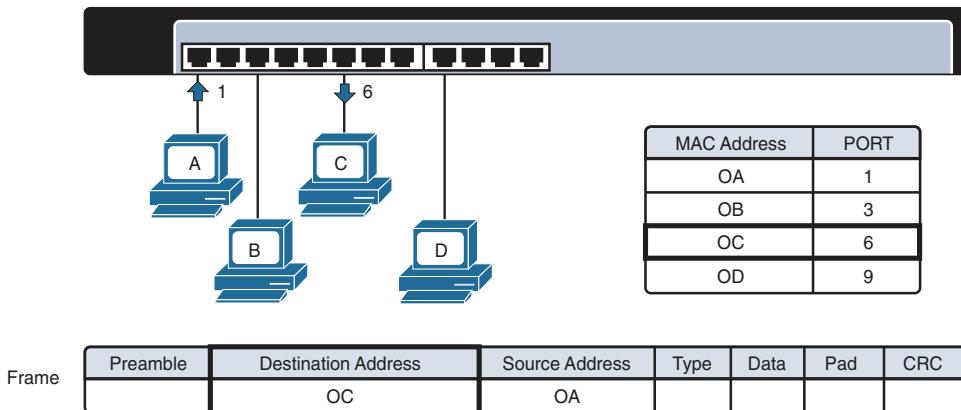

In addition to forwarding and filtering frames, the switch refreshes the timestamp for the source MAC address of the frame. In Figure 30-1, the MAC address for Host A, OA, is already in the MAC table, so the switch refreshes the entry. Entries that are not refreshed eventually are removed (after the default 300 seconds in Cisco IOS).

Continuing the example in Figure 30-1, assume that another device, Host E, is attached to port 10. Host B then sends a frame to the new Host E. The switch does not yet know where Host E is located, so it forwards the frame out all active ports (in a process known as flooding) except for the port on which the frame was received. The new Host E receives the frame. When it replies to Host B, the switch learns Host E's MAC address and port for the first time and stores it in the MAC address table. Subsequent frames destined for Host E then are sent out only port 10.

Finally, LAN switches must have a method for creating a loop-free path for frames to take within the LAN. STP provides loop prevention in Ethernet networks where redundant physical links exist.

Collision and Broadcast Domains

A collision domain is the set of LAN interfaces whose frames could collide with each other. All shared media environments, such as those created by using hubs, are collision domains. When one host is attached to a switch port, the switch creates a dedicated connection, thereby eliminating the potential for a collision. Switches reduce collisions and improve bandwidth use on network segments because they provide full-duplex, dedicated bandwidth to each network segment.

Out of the box, however, a switch cannot provide relief from broadcast traffic. A collection of connected switches forms one large broadcast domain. If a frame with the destination address FFFF.FFFF.FFFF crosses a switch port, that switch must flood the frame out all other active ports. Each attached device must then process the broadcast frame at least up to the network layer. Routers and VLANs are used to segment broadcast domains. Day 26, “VLAN and Trunking Concepts and Configurations,” reviews the use of VLANs to segment broadcast domains.

Frame Forwarding

Switches operate in several ways to forward frames. They can differ in forwarding methods, port speeds, memory buffering, and the OSI layers used to make the forwarding decision. The following sections discuss these concepts in greater detail.

Switch Forwarding Methods

Switches use one of the following forwarding methods to switch data between network ports:

- **Store-and-forward switching:** The switch stores received frames in its buffers, analyzes each frame for information about the destination, and evaluates the data integrity using the cyclic redundancy check (CRC) in the frame trailer. The entire frame is stored, and the CRC is calculated before any of the frame is forwarded. If the CRC passes, the frame is forwarded to the destination.
- **Cut-through switching:** The switch buffers just enough of the frame to read the destination MAC address so that it can determine which port to forward the data to. When the switch determines a match between the destination MAC address and an entry in the MAC address table, the frame is forwarded out the appropriate port(s). This happens as the rest of the initial frame is still being received. The switch does not perform any error checking on the frame.

- **Fragment-free mode:** The switch waits for the collision window (64 bytes) to pass before forwarding the frame. This means that each frame is checked into the data field to make sure that no fragmentation has occurred. Fragment-free mode provides better error checking than cut-through, with practically no increase in latency.

Symmetric and Asymmetric Switching

Symmetric switching provides switched connections between ports with the same bandwidth, such as all 100-Mbps ports or all 1000-Mbps ports. An asymmetric LAN switch provides switched connections between ports of unlike bandwidth, such as a combination of 10-Mbps, 100-Mbps, and 1000-Mbps ports.

Memory Buffering

Switches store frames for a brief time in a memory buffer. Two methods of memory buffering exist:

- **Port-based memory:** Frames are stored in queues that are linked to specific incoming ports.
- **Shared memory:** Frames are deposited into a common memory buffer that all ports on the switch share.

Layer 2 and Layer 3 Switching


A Layer 2 LAN switch performs switching and filtering based only on MAC addresses. A Layer 2 switch is completely transparent to network protocols and user applications. A Layer 3 switch functions similarly to a Layer 2 switch. But instead of using only the Layer 2 MAC address information for forwarding decisions, a Layer 3 switch can also use IP address information. Layer 3 switches are also capable of performing Layer 3 routing functions, reducing the need for dedicated routers on a LAN. Because Layer 3 switches have specialized switching hardware, they can typically route data as quickly as they can switch data.

Ethernet Overview

802.3 is the IEEE standard for Ethernet, and the two terms are commonly used interchangeably. The terms *Ethernet* and *802.3* both refer to a family of standards that together define the physical and data link layers of the definitive LAN technology. Figure 30-2 shows a comparison of Ethernet standards to the OSI model.

Ethernet separates the functions of the data link layer into two distinct sublayers:

- **Logical Link Control (LLC) sublayer:** Defined in the 802.2 standard
- **Media Access Control (MAC) sublayer:** Defined in the 802.3 standard

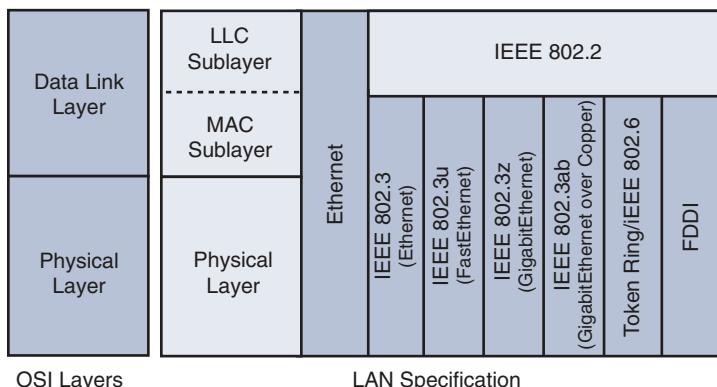Figure 30-2 Ethernet Standards and the OSI Model

The LLC sublayer handles communication between the network layer and the MAC sublayer. In general, LLC provides a way to identify the protocol that is passed from the data link layer to the network layer. In this way, the fields of the MAC sublayer are not populated with protocol type information, as was the case in earlier Ethernet implementations.

The MAC sublayer has two primary responsibilities:


- **Data encapsulation:** Included here is frame assembly before transmission, frame parsing upon reception of a frame, data link layer MAC addressing, and error detection.
- **Media Access Control:** Because Ethernet is a shared medium and all devices can transmit at any time, media access is controlled by a method called Carrier Sense Multiple Access/Collision Detect (CSMA/CD) when operating in half-duplex mode.

At the physical layer, Ethernet specifies and implements encoding and decoding schemes that enable frame bits to be carried as signals across both unshielded twisted pair (UTP) copper cables and optical fiber cables. In early implementations, Ethernet used coaxial cabling.


Legacy Ethernet Technologies

Ethernet is best understood by first considering the two early Ethernet specifications, 10BASE-5 and 10BASE-2. With these two specifications, the network engineer installs a series of coaxial cables connecting each device on the Ethernet network, as in Figure 30-3.

The series of cables creates an electrical circuit, called a *bus*, that is shared among all devices on the Ethernet. When a computer wants to send some bits to another computer on the bus, it sends an electrical signal, and the electricity propagates to all devices on the Ethernet.

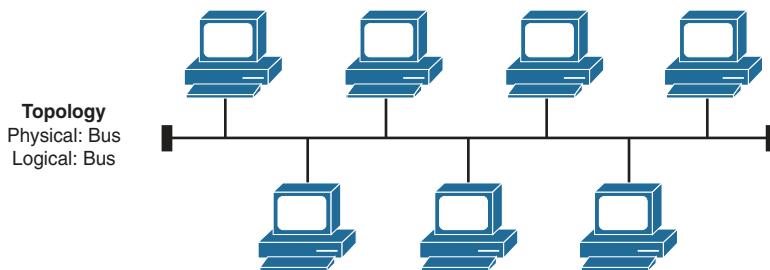Figure 30-3 Ethernet Physical and Logical Bus Topology

With the change of media to UTP and the introduction of the first hubs, Ethernet physical topologies migrated to a star, as shown in Figure 30-4.

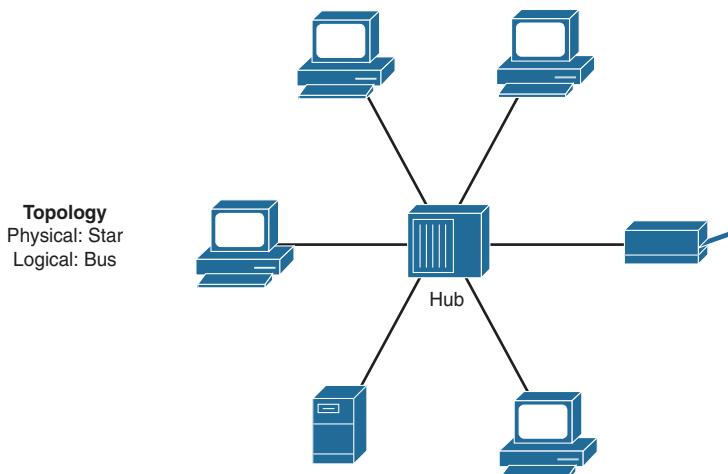Figure 30-4 Ethernet Physical Star and Logical Bus Topology

Regardless of the change in the physical topology from a bus to a star, hubs logically operate similarly to a traditional bus topology and require the use of CSMA/CD.

CSMA/CD

Because Ethernet is a shared medium in which every device has the right to send at any time, it also defines a specification to ensure that only one device sends traffic at a time. The CSMA/CD algorithm defines how the Ethernet logical bus is accessed.

CSMA/CD logic helps prevent collisions and also defines how to act when a collision does occur. The CSMA/CD algorithm works like this:

- Step 1.** A device with a frame to send listens until the Ethernet is not busy.
- Step 2.** When the Ethernet is not busy, the sender(s) begin(s) sending the frame.
- Step 3.** The sender(s) listen(s) to make sure that no collision occurs.

- Step 4.** If a collision occurs, the devices that were sending a frame each send a jamming signal to ensure that all stations recognize the collision.
- Step 5.** When the jamming is complete, each sender randomizes a timer and waits until the timer expires before trying to resend the collided frame.
- Step 6.** When each random timer expires, the process starts again from the beginning.

When CSMA/CD is in effect, a device's network interface card (NIC) operates in half-duplex mode, either sending or receiving frames. CSMA/CD is disabled when a NIC autodetects that it can operate in—or is manually configured to operate in—full-duplex mode. In full-duplex mode, a NIC can send and receive simultaneously.

Legacy Ethernet Summary

LAN hubs occasionally appear, but switches generally are used instead of hubs. Keep in mind the following key points about the history of Ethernet:

- The original Ethernet LANs created an electrical bus to which all devices connected.
- 10BASE-2 and 10BASE-5 repeaters extended the length of LANs by cleaning up the electrical signal and repeating it (a Layer 1 function) but without interpreting the meaning of the electrical signal.
- Hubs are repeaters that provide a centralized connection point for UTP cabling—but they still create a single electrical bus that the various devices share, just as with 10BASE-5 and 10BASE-2.
- Because collisions can occur in any of these cases, Ethernet defines the CSMA/CD algorithm, which tells devices how to both avoid collisions and take action when collisions do occur.

Current Ethernet Technologies

Refer to Table 30-1 and notice the different 802.3 standards. Each new physical layer standard from the IEEE requires many differences at the physical layer. However, each of these physical layer standards uses the same 802.3 header, and each uses the upper LLC sublayer as well. Table 30-1 lists today's most commonly used IEEE Ethernet physical layer standards.

Table 30-1 Today's Most Common Types of Ethernet

Common Name	Speed	Alternative Name	Name of IEEE Standard	Cable Type, Maximum Length
Ethernet	10 Mbps	10BASE-T	802.3	Copper, 100 m
Fast Ethernet	100 Mbps	100BASE-TX	802.3u	Copper, 100 m
Gigabit Ethernet	1000 Mbps	1000BASE-LX	802.3z	Fiber, 550 m
Gigabit Ethernet	1000 Mbps	1000BASE-T	802.3ab	Copper, 100 m
10GigE (Gigabit Ethernet)	10 Gbps	10GBASE-T	802.3an	Copper, 100 m
10GigE (Gigabit Ethernet)	10 Gbps	10GBASE-S	802.3ae	Fiber, 400 m


UTP Cabling

The three most common Ethernet standards used today—10BASE-T (Ethernet), 100BASE-TX (Fast Ethernet, or FE), and 1000BASE-T (Gigabit Ethernet, or GE)—use UTP cabling. Some key differences exist, particularly with the number of wire pairs needed in each case and the type (category) of cabling.

The UTP cabling in popular Ethernet standards includes either two or four pairs of wires. The cable ends typically use an RJ-45 connector. The RJ-45 connector has eight specific physical locations into which the eight wires in the cable can be inserted; these are called pin positions or, simply, pins.

The Telecommunications Industry Association (TIA) and the Electronics Industry Alliance (EIA) define standards for UTP cabling, with color coding for wires and standard pinouts on the cables. Figure 30-5 shows two TIA/EIA pinout standards, with the color coding and pair numbers listed.

Figure 30-5 TIA/EIA Standard Ethernet Cabling Pinouts

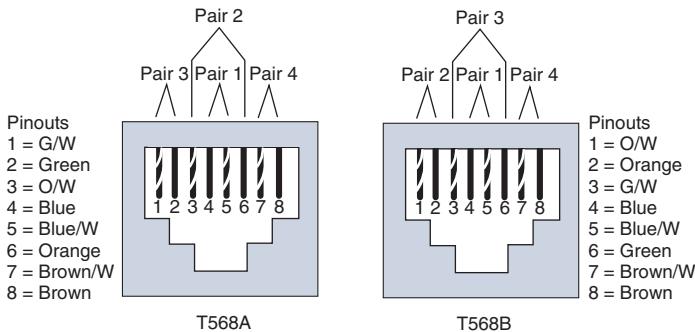

For the exam, you should be well prepared to choose which type of cable (straight-through or crossover) is needed in each part of the network. In short, devices on opposite ends of a cable that use the same pair of pins to transmit need a crossover cable. Devices that use an opposite pair of pins to transmit need a straight-through cable. Table 30-2 lists typical devices and the pin pairs they use, assuming that they use 10BASE-T and 100BASE-TX.

Table 30-2 10BASE-T and 100BASE-TX Pin Pairs Used

Devices That Transmit on 1,2 and Receive on 3,6	Devices That Transmit on 3,6 and Receive on 1,2
PC NICs	Hubs
Routers	Switches
Wireless access points (Ethernet interfaces)	—
Networked printers (printers that connect directly to the LAN)	—

1000BASE-T requires four wire pairs because Gigabit Ethernet transmits and receives on each of the four wire pairs simultaneously.

However, Gigabit Ethernet does have a concept of straight-through and crossover cables, with a minor difference in the crossover cables. The pinouts for a straight-through cable are the same—pin 1 to pin 1, pin 2 to pin 2, and so on.

A crossover cable has the 568A standard on one end and the 568B standard on the other end. This crosses the pairs at pins 1,2 and 3,6.

Benefits of Using Switches

A collision domain is a set of devices whose frames may collide. All devices on a 10BASE-2, 10BASE-5, or other network using a hub risk collisions between the frames that they send. Thus, devices on one of these types of Ethernet networks are in the same collision domain and use CSMA/CD to detect and resolve collisions.

LAN switches significantly reduce, or even eliminate, the number of collisions on a LAN. Unlike a hub, a switch does not create a single shared bus. Instead, a switch does the following:

- It interprets the bits in the received frame so that it can typically send the frame out the one required port instead of out all other ports.
- If a switch needs to forward multiple frames out the same port, the switch buffers the frames in memory, sending one at a time and thereby avoiding collisions.


In addition, switches with only one device cabled to each port of the switch allow the use of full-duplex operation. Full-duplex operation means that the NIC can send and receive concurrently, effectively doubling the bandwidth of a 100-Mbps link to 200 Mbps—100 Mbps for sending and 100 Mbps for receiving.

These seemingly simple switch features provide significant performance improvements compared with using hubs. In particular, consider these points:

- If only one device is cabled to each port of a switch, no collisions can occur.
- Devices connected to one switch port do not share their bandwidth with devices connected to another switch port. Each has its own separate bandwidth, meaning that a switch with 100-Mbps ports has 100 Mbps of bandwidth per port.

Ethernet Addressing

The IEEE defines the format and assignment of LAN addresses. To ensure a unique MAC address, the first half of the address identifies the manufacturer of the card. This code is called the organizationally unique identifier (OUI). Each manufacturer assigns a MAC address with its own OUI as the first half of the address. The second half of the address is assigned by the manufacturer and is never used on another card or network interface with the same OUI. Figure 30-6 shows the structure of a unicast Ethernet address.

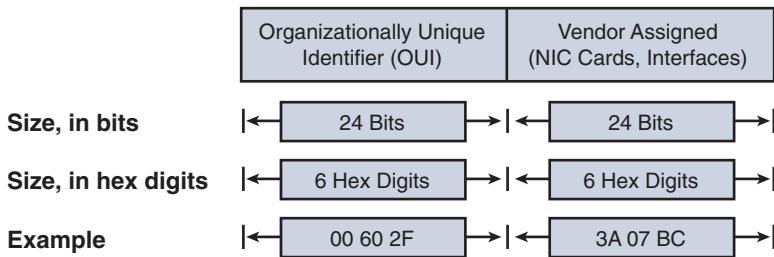Figure 30-6 Structure of a Unicast Ethernet Address

Ethernet also has group addresses, which identify more than one NIC or network interface. The IEEE defines two general categories of group addresses for Ethernet:

- **Broadcast addresses:** A broadcast address implies that all devices on the LAN should process the frame and has the value FFFF.FFFF.FFFF.
- **Multicast addresses:** A multicast address allows a subset of devices on a LAN to communicate. When IP multicasts over an Ethernet network, the multicast MAC addresses that IP uses follow this format: 0100.5exx.xxxx. The xx.xxxx portion is divided between IPv4 multicast (00:0000–7FFFFF) and MPLS multicast (80:0000–8F:FFFF). Multiprotocol Label Switching (MPLS) is a CCNP topic.

Ethernet Framing

The physical layer helps you get a string of bits from one device to another. The framing of the bits allows the receiving device to interpret the bits. The term *framing* refers to the definition of the fields assumed to be in the data that is received. Framing defines the meaning of the bits transmitted and received over a network.

The framing used for Ethernet has changed a couple times over the years. Figure 30-7 shows each iteration of Ethernet, with the current version shown at the bottom.

Figure 30-7 Ethernet Frame Formats

DIX						
Preamble 8	Destination 6	Source 6	Type 2	Data and Pad 46 – 1500	FCS 4	
IEEE 802.3 (Original)						
Preamble 7	SFD 1	Destination 6	Source 6	Length 2	Data and Pad 46 – 1500	FCS 4
IEEE 802.3 (Revised 1997)						
Bytes	Preamble 7	SFD 1	Destination 6	Source 6	Length/ Type 2	Data and Pad 46 – 1500
						FCS 4

Table 30-3 further explains the fields in the last version shown in Figure 30-7.

Table 30-3 IEEE 802.3 Ethernet Field Descriptions

Field	Field Length, in Bytes	Description
Preamble	7	Synchronization
Start Frame Delimiter (SFD)	1	Signifies that the next byte begins the Destination MAC field
Destination MAC Address	6	Identifies the intended recipient of this frame
Source MAC Address	6	Identifies the sender of this frame
Length	2	Defines the length of the data field of the frame (either length or type is present, but not both)
Type	2	Defines the type of protocol listed inside the frame (either length or type is present, but not both)
Data and Pad	46–1500	Holds data from a higher layer, typically a Layer 3 PDU (generic) and often an IP packet
Frame Check Sequence (FCS)	4	Provides a method for the receiving NIC to determine whether the frame experienced transmission errors

The Role of the Physical Layer

We have already discussed the most popular cabling used in LANs: UTP. To fully understand the operation of the network, you should know some additional basic concepts of the physical layer.

The OSI physical layer accepts a complete frame from the data link layer and encodes it as a series of signals that are transmitted onto the local media.

The delivery of frames across the local media requires the following physical layer elements:

- The physical media and associated connectors
- A representation of bits on the media
- Encoding of data and control information
- Transmitter and receiver circuitry on the network devices

Data is represented on three basic forms of network media:

- Copper cable
- Fiber
- Wireless (IEEE 802.11)

Bits are represented on the medium by changing one or more of the following characteristics of a signal:

- Amplitude
- Frequency
- Phase

The nature of the actual signals representing the bits on the media depends on the signaling method in use. Some methods use one attribute of a signal to represent a single 0 and use another attribute of a signal to represent a single 1. The actual signaling method and its detailed operation are not important to your CCNA exam preparation.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7	4
	6
	7
CCNA 200-301 Official Cert Guide, Volume 1	5
	8

Switch Configuration Basics

CCNA 200-301 Exam Topics

- Identify interface and cable issues (collisions, errors, mismatched duplex and/or speed)
- Configure and verify IPv4 addressing and subnetting

Key Topics

Today we review Cisco IOS basics and the commands necessary to perform a basic initial configuration of a switch. Although not explicitly called out in the exam topics, you can expect to see questions that assume you have this skill. We review verification techniques such as the **ping**, **traceroute**, and **show** commands. And we review interface and cable issues.

Accessing and Navigating the Cisco IOS

By now, you are very familiar with connecting to Cisco devices and configuring them using the command-line interface (CLI). Here we quickly review methods for accessing and navigating the CLI.

Connecting to Cisco Devices


You can access a device directly or from a remote location. Figure 29-1 shows the many ways you can connect to Cisco devices.

The two ways to configure Cisco devices are as follows:

- **Console terminal:** Use an RJ-45-to-RJ-45 rollover cable and a computer with the terminal communications software (such as HyperTerminal or Tera Term) to establish a direct connection. Optionally, you can connect a mini-USB cable to the mini-USB console port, if available.
- **Remote terminal:** Use an external modem connected to the auxiliary port (routers only) to remotely configure the device.

After a device is configured, you can access it using three additional methods:

- Establish a terminal (vty) session using Telnet.
- Configure the device through the current connection (console or auxiliary) or download a previously written startup config file from a Trivial File Transfer Protocol (TFTP) server on the network.
- Download a configuration file using a network management software application.

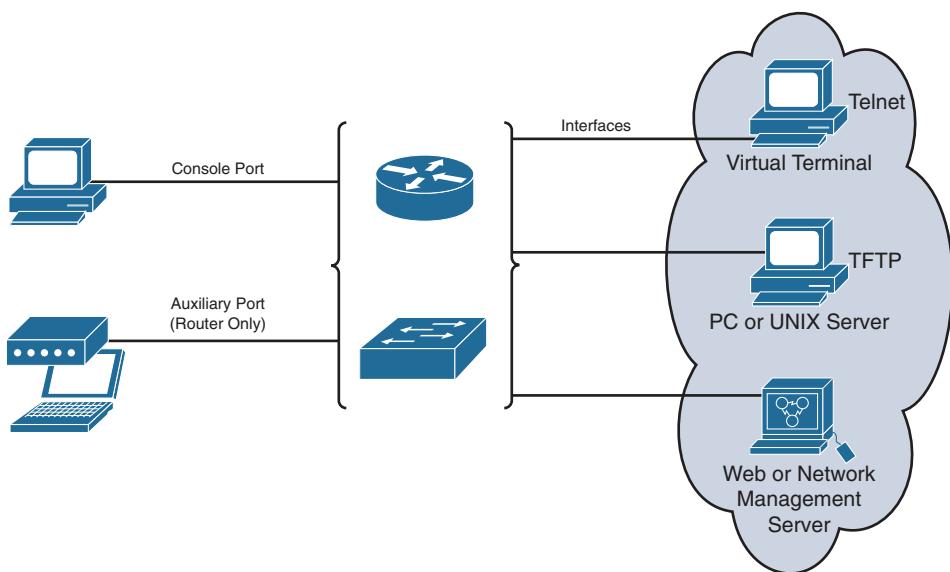Figure 29-1 Sources for Cisco Device Configuration

CLI EXEC Sessions

Cisco IOS separates the EXEC session into two basic access levels:

- **User EXEC mode:** Access to only a limited number of basic monitoring and troubleshooting commands, such as `show` and `ping`
- **Privileged EXEC mode:** Full access to all device commands, including configuration and management

Using the Help Facility

Cisco IOS has extensive command-line input help facilities, including context-sensitive help. Two types of help are available:

- **Word help:** Enter a character sequence of an incomplete command immediately followed by a question mark (for example, `sh?`) to get a list of available commands that start with the character sequence.
- **Command syntax help:** Enter the `?` command to get command syntax help to see all the available arguments to complete a command (for example, `show ?`). Cisco IOS then displays a list of available arguments.

As part of the help facility, Cisco IOS displays console error messages when incorrect command syntax is entered. Table 29-1 shows sample error messages, what they mean, and how to get help.

Table 29-1 Console Error Messages

Example Error Message	Meaning	How to Get Help
switch# cl % Ambiguous command: "cl"	You did not enter enough characters for your device to recognize the command.	Reenter the command, followed by a question mark (?), without a space between the command and the question mark. The possible keywords that you can enter with the command appear.
switch# clock % Incomplete command.	You did not enter all the keywords or values required by this command.	Reenter the command, followed by a question mark (?), with a space between the command and the question mark.
switch# clock ste ^ % Invalid input detected at '^' marker.	You entered the command incorrectly. The caret (^) marks the point of the error.	Enter a question mark (?) to display all the available commands or parameters.

CLI Navigation and Editing Shortcuts

Table 29-2 summarizes the shortcuts for navigating and editing commands in the CLI. Although not specifically tested on the CCNA exam, these shortcuts can save you time when using the simulator during the exam.

Table 29-2 Hot Keys and Shortcuts

Keyboard Command	What Happens
Navigation Key Sequences	
Up arrow or Ctrl+P	Displays the most recently used command. If you press the sequence again, the next most recent command appears, until the history buffer is exhausted. (The P stands for <i>previous</i> .)
Down arrow or Ctrl+N	Moves forward to the more recently entered commands, in case you have gone too far back into the history buffer. (The N stands for <i>next</i> .)
Left arrow or Ctrl+B	Moves the cursor backward in the currently displayed command without deleting characters. (The B stands for <i>back</i> .)
Right arrow or Ctrl+F	Moves the cursor forward in the currently displayed command without deleting characters. (The F stands for <i>forward</i> .)
Tab	Completes a partial command name entry.
Backspace	Moves the cursor backward in the currently displayed command, deleting characters.
Ctrl+A	Moves the cursor directly to the first character of the currently displayed command.
Ctrl+E	Moves the cursor directly to the end of the currently displayed command.
Ctrl+R	Redisplays the command line with all characters. This command is useful when messages clutter the screen.
Ctrl+D	Deletes a single character.
Esc+B	Moves back one word.
Esc+F	Moves forward one word.

Keyboard Command	What Happens
At the --More Prompt	
Enter key	Displays the next line.
Spacebar	Displays the next screen.
Any other alphanumeric key	Returns to the EXEC prompt.
Break Keys	
Ctrl+C	When in any configuration mode, ends the configuration mode and returns to privileged EXEC mode. When in setup mode, reverts to the command prompt.
Ctrl+Z	When in any configuration mode, ends the configuration mode and returns to privileged EXEC mode. When in user or privileged EXEC mode, logs you out of the router.
Ctrl+Shift+6	Acts as an all-purpose break sequence. Use to abort DNS lookups, traceroutes, and pings.

Command History

By default, the Cisco IOS stores in a history buffer the 10 commands you have most recently entered. This gives you a quick way to move backward and forward in the history of commands, choose one, and then edit it before reissuing the command. To view or configure the command history buffer, use the commands in Table 29-3. Although this table shows the switch prompt, these commands are also appropriate for a router.


Table 29-3 Command History Buffer Commands

Command Syntax	Description
switch# show history	Displays the commands currently stored in the history buffer.
switch# terminal history	Enables terminal history. This command can be run from either user or privileged EXEC mode.
switch# terminal history size 50	Configures the terminal history size. The terminal history can maintain 0–256 command lines.
switch# terminal no history size	Resets the terminal history size to the default value of 20 command lines in Cisco IOS 15.
switch# terminal no history	Disables terminal history.

IOS Examination Commands

To verify and troubleshoot network operation, you use **show** commands. Figure 29-2 delineates the different **show** commands, as follows:

- Commands applicable to Cisco IOS (stored in RAM)
- Commands that apply to the backup configuration file stored in NVRAM
- Commands that apply to Flash or specific interfaces

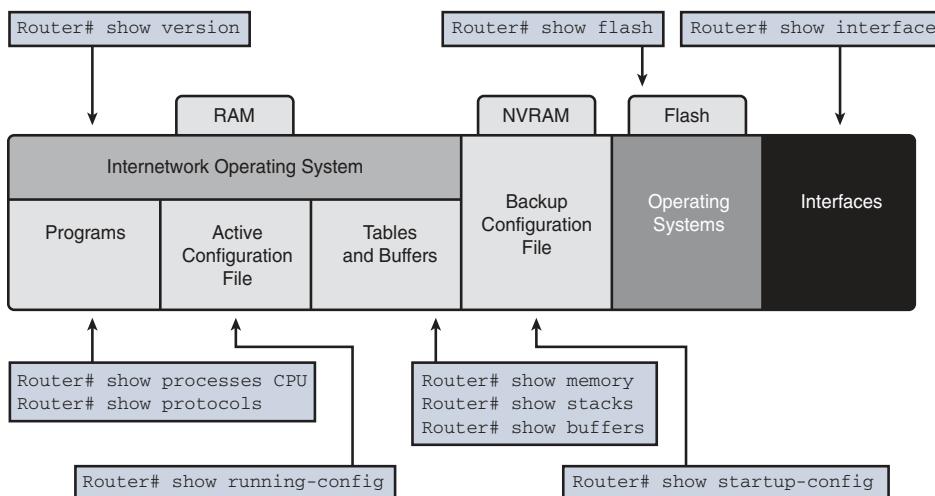Figure 29-2 Typical show Commands and the Information Provided

Subconfiguration Modes

To enter global configuration mode, enter the **configure terminal** command. From global configuration mode, Cisco IOS provides a multitude of subconfiguration modes. Table 29-4 summarizes the most common subconfiguration modes pertinent to the CCNA exam.

Table 29-4 Cisco Device Subconfiguration Modes

Prompt	Name of Mode	Examples of Commands Used to Reach This Mode
hostname(config) #	Global	configure terminal
hostname(config-line) #	Line	line console 0 line vty 0 15
hostname(config-if) #	Interface	interface fastethernet 0/0
hostname(config-router) #	Router	router rip router eigrp 100

Basic Switch Configuration Commands

Table 29-5 reviews basic switch configuration commands.

Table 29-5 Basic Switch Configuration Commands

Command Description	Command Syntax
Enter global configuration mode.	Switch# configure terminal
Configure a name for the device.	Switch(config)# hostname S1
Enter the interface configuration mode for the VLAN 1 interface.	S1(config)# interface vlan 1
Configure the interface IP address.	S1(config-if)# ip address 172.17.99.11 255.255.255.0

Command Description	Command Syntax
Enable the interface.	<code>S1(config-if)# no shutdown</code>
Return to global configuration mode.	<code>S1(config-if)# exit</code>
Enter the interface to assign the VLAN.	<code>S1(config)# interface fastethernet 0/6</code>
Define the VLAN membership mode for the port.	<code>S1(config-if)# switchport mode access</code>
Assign the port to a VLAN.	<code>S1(config-if)# switchport access vlan 123</code>
Configure the interface duplex mode to enable AUTO duplex configuration.	<code>S1(config-if)# duplex auto</code>
Configure the interface speed and enable AUTO speed configuration.	<code>S1(config-if)# speed auto</code>
Enable auto-MDIX on the interface.	<code>S1(config-if)# mdix auto</code>
Return to global configuration mode.	<code>S1(config-if)# exit</code>
Configure the default gateway on the switch.	<code>S1(config)# ip default-gateway 172.17.50.1</code>
Configure the HTTP server for authentication using the enable password, which is the default method of HTTP server user authentication.	<code>S1(config)# ip http authentication enable</code>
Enable the HTTP server.	<code>S1(config)# ip http server</code>
Switch from global configuration mode to line configuration mode for console 0.	<code>S1(config)# line console 0</code>
Set cisco as the password for the console 0 line on the switch.	<code>S1(config-line)# password cisco</code>
Set the console line to require the password to be entered before access is granted.	<code>S1(config-line)# login</code>
Return to global configuration mode.	<code>S1(config-if)# exit</code>
Switch from global configuration mode to line configuration mode for vty terminals 0–15.	<code>S1(config)# line vty 0 15</code>
Set cisco as the password for the vty lines on the switch.	<code>S1(config-line)# password cisco</code>
Set the vty line to require the password to be entered before access is granted.	<code>S1(config-line)# login</code>
Return to global configuration mode.	<code>S1(config-line)# exit</code>
Configure cisco as the enable password to enter privileged EXEC mode.	<code>S1(config)# enable password cisco</code>
Configure class as the enable secret password to enter privileged EXEC mode. This password overrides enable password .	<code>S1(config)# enable secret class</code>
Encrypt all the system passwords that are stored in plaintext.	<code>S1(config)# service password-encryption</code>
Configure a login banner. The # character delimits the beginning and end of the banner.	<code>S1(config)# banner login #Authorized Personnel Only!#</code>

Command Description	Command Syntax
Configure a message of the day (MOTD) login banner. The # character delimits the beginning and end of the banner.	S1(config)# banner motd #Device maintenance will be occurring on Friday!#
Return to privileged EXEC mode.	S1(config)# end
Save the running configuration to the switch startup configuration.	S1# copy running-config startup-config

To configure multiple ports with the same command, use the **interface range** command. For example, to configure ports 6–10 as access ports belonging to VLAN 10, you enter the following:

```
Switch(config)# interface range FastEthernet 0/6 - 10
Switch(config-if-range)# switchport mode access
Switch(config-if-range)# switchport access vlan 10
```

Half Duplex, Full Duplex, and Port Speed

Half-duplex communication is unidirectional data flow in which a device can either send or receive on an Ethernet LAN—but not both at the same time. Today’s LAN networking devices and end device network interface cards (NICs) operate at full duplex as long as the device is connected to another device capable of full-duplex communication. Full-duplex communication increases the effective bandwidth by allowing both ends of a connection to transmit and receive data simultaneously; this is known as *bidirectional*. This microsegmented LAN is collision free. Gigabit Ethernet and 10-Gbps NICs require full-duplex connections to operate. Port speed is simply the bandwidth rating of the port. The most common speeds today are 100 Mbps, 1 Gbps, and 10 Gbps.

Although the default duplex and speed setting for Cisco Catalyst 2960 and 3560 switches is **auto**, you can manually configure speed with the **speed** and **duplex** commands.

NOTE: Setting the duplex mode and speed of switch ports can cause issues if one end is mismatched or set to autonegotiation. In addition, all fiber-optic ports, such as 100BASE-FX ports, operate only at one preset speed and are always full duplex.

Automatic Medium-Dependent Interface Crossover (auto-MDIX)

In the past, switch-to-switch or switch-to-router connections required using different Ethernet cables (crossover or straight-through). Using the automatic medium-dependent interface crossover (auto-MDIX) feature on an interface eliminates this problem. When auto-MDIX is enabled, the interface automatically detects the required cable connection type (straight-through or crossover) and configures the connection appropriately.

The auto-MDIX feature is enabled by default on Catalyst 2960 and Catalyst 3560 switches. The Gigabit Ethernet standard requires auto-MDIX, so any 1000-Mbps port has this capability. When using auto-MDIX on an interface, the interface speed and duplex must be set to **auto** so that the feature operates correctly.

Verifying Network Connectivity

Using and interpreting the output of various testing tools is often the first step in isolating the cause of a network connectivity issue. The **ping** command can systematically test connectivity by looking for answers to the following questions, in this order:

- Step 1.** Can an end device ping itself?
- Step 2.** Can an end device ping its default gateway?
- Step 3.** Can an end device ping the destination?

By using the **ping** command in this ordered sequence, you can isolate problems more quickly. If local connectivity is not an issue—in other words, if the end device can successfully ping its default gateway—using the **traceroute** utility can help isolate the point in the path from source to destination where the traffic stops.

As a first step in the testing sequence, verify the operation of the TCP/IP stack on the local host by pinging the loopback address, 127.0.0.1, as Example 29-1 demonstrates.

Example 29-1 Testing the TCP/IP Stack on a Windows PC

```
C:\> ping 127.0.0.1

Pinging 127.0.0.1 with 32 bytes of data:

Reply from 127.0.0.1: bytes=32 time<1ms TTL=64

Ping statistics for 127.0.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

This test should succeed regardless of whether the host is connected to the network, so a failure indicates a software or hardware problem on the host itself. Either the network interface is not operating properly or support for the TCP/IP stack has been inadvertently removed from the operating system.

Next, verify connectivity to the default gateway. Determine the default gateway address by using **ipconfig** and then attempt to ping it, as in Example 29-2.

Example 29-2 Testing Connectivity to the Default Gateway on a Windows PC

```
C:\> ipconfig

Windows IP Configuration
```

```

Ethernet adapter Local Area Connection:

      Connection-specific DNS Suffix . : cisco.com
      IP Address . . . . . : 192.168.1.25
      Subnet Mask . . . . . : 255.255.255.0
      Default Gateway . . . . . : 192.168.1.1

C:\> ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:

Reply from 192.168.1.1: bytes=32 time=162ms TTL=255
Reply from 192.168.1.1: bytes=32 time=69ms TTL=255
Reply from 192.168.1.1: bytes=32 time=82ms TTL=255
Reply from 192.168.1.1: bytes=32 time=72ms TTL=255

Ping statistics for 192.168.1.1:
      Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
      Minimum = 69ms, Maximum = 162ms, Average = 96ms

```

Failure here can indicate several problems, which must be checked in a systematic sequence. One possible order might be the following:

- Step 1.** Is the cabling from the PC to the switch correct? Are link lights lit?
- Step 2.** Is the configuration on the PC correct according to the logical map of the network?
- Step 3.** Are the affected interfaces on the switch the cause of the problem? Is there a duplex, speed, or auto-MDIX mismatch? Are there VLAN misconfigurations?
- Step 4.** Is the cabling from the switch to the router correct? Are link lights lit?
- Step 5.** Is the configuration on the router interface correct according to the logical map of the network? Is the interface active?

Finally, verify connectivity to the destination by pinging it. Assume that you are trying to reach a server at 192.168.3.100. Example 29-3 shows a successful **ping** test to the destination.

Example 29-3 Testing Connectivity to the Destination on a Windows PC

```

PC> ping 192.168.3.100

Pinging 192.168.3.100 with 32 bytes of data:

Reply from 192.168.3.100: bytes=32 time=200ms TTL=126
Reply from 192.168.3.100: bytes=32 time=185ms TTL=126
Reply from 192.168.3.100: bytes=32 time=186ms TTL=126

```

```
Reply from 192.168.3.100: bytes=32 time=200ms TTL=126

Ping statistics for 192.168.3.100:
  Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
  Minimum = 185ms, Maximum = 200ms, Average = 192ms
```

Failure here indicates a failure in the path beyond the default gateway interface because you already successfully tested connectivity to the default gateway. From a Windows PC, the best tool to use to find the break in the path is the **tracert** command (see Example 29-4).

NOTE: Both macOS and Linux use the **traceroute** command rather than **tracert**.

Example 29-4 Tracing the Route from a Windows PC

```
C:\> tracert 192.168.3.100

Tracing route to 192.168.3.100 over a maximum of 30 hops:

 1  97 ms    75 ms    72 ms  192.168.1.1
 2  104 ms   119 ms   117 ms  192.168.2.2
 3  *         *         *      Request timed out.
 4  *         *         *      Request timed out.
 5  *         *         *      Request timed out.
 6  ^C
```

NOTE: Failure at hops 3, 4, and 5 in Example 29-4 could indicate that these routers are configured to not send ICMP messages back to the source.

As shown in Example 29-4, the last successful hop on the way to the destination was 192.168.2.2. If you have administrator rights to 192.168.2.2, you can continue your research by remotely accessing the command line on 192.168.2.2 and investigating why traffic will not go any further. In addition, other devices between 192.168.2.2 and 192.168.3.100 could be the source of the problem. The point is, you want to use your **ping** and **tracert** tests, as well as your network documentation, to proceed in a logical sequence from source to destination.

Regardless of how simple or complex your network is, using **ping** and **tracert** from the source to the destination is a simple yet powerful way to systematically verify end-to-end connectivity, as well as locate breaks in a path from one source to one destination.

Troubleshoot Interface and Cable Issues

The physical layer is often the reason a network issue exists—power outage, disconnected cable, power-cycled devices, hardware failures, and so on. This section looks at some troubleshooting tools,

in addition to the approach of actually walking over to the wiring closet or network device and “physically” checking Layer 1.


Media Issues

Besides failing hardware, common physical layer issues occur with media. Consider a few examples:

- New equipment is installed that introduces electromagnetic interference (EMI) sources into the environment.
- Cable runs too close to powerful motors, such as an elevator.
- Poor cable management puts a strain on some RJ-45 connectors, causing one or more wires to break.
- New applications change traffic patterns.
- When new equipment is connected to a switch, the connection operates in half-duplex mode or a duplex mismatch occurs, which can lead to an excessive number of collisions.

Figure 29-3 shows an excellent troubleshooting flowchart that you can use in troubleshooting switch media issues.

Figure 29-3 Troubleshooting Switch Media Issues

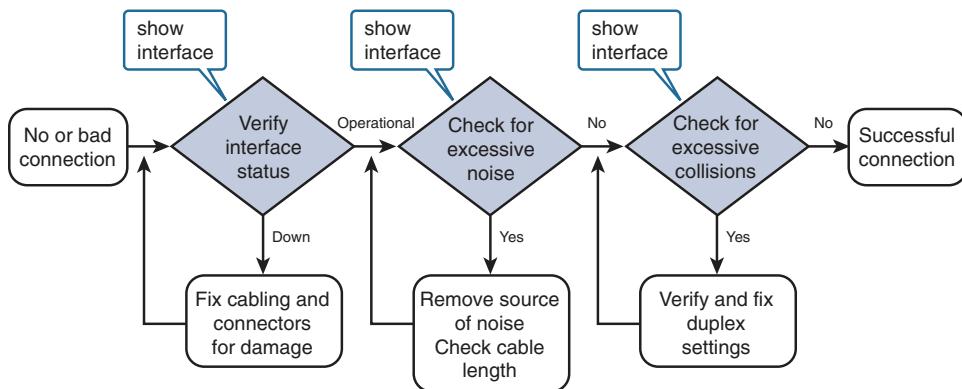

Next, examine the output from the **show interface** and **show interface status** commands, as described in the next section.

Interface Status and Switch Configuration

Because today we are focusing on switch troubleshooting, we look at the **show** commands that help in troubleshooting the basic configuration.

Interface Status Codes

In general, interfaces are either “up” or “down.” However, when an interface is “down” and you don’t know why, the code in the **show interfaces** command provides more information to help you determine the reason. Table 29-6 lists the code combinations and some possible causes for each status.

Table 29-6 LAN Switch Interface Status Codes

Line Status	Protocol Status	Interface Status	Typical Root Cause
Administratively down	Down	disabled	The interface is configured with the shutdown command.
Down	Down	notconnect	No cable exists, the cable is bad, incorrect cable pinouts are used, the two connected devices have mismatched speeds, or the device on the other end of the cable is powered off or the other interface is shut down.
Up	Down	notconnect	An interface up/down state is not expected on LAN switch interfaces. This indicates a Layer 2 problem on Layer 3 devices.
Down	Down (err-disabled)	err-disabled	Port security has disabled the interface. The network administrator must manually reenable the interface.
Up	Up	connect	The interface is working.

Duplex and Speed Mismatches

One of the most common problems is issues with speed and/or duplex mismatches. On switches and routers, the **speed {10 | 100 | 1000}** interface subcommand and the **duplex {half | full}** interface subcommand set these values. Note that configuring both speed and duplex on a switch interface disables the IEEE-standard autonegotiation process on that interface.

The **show interfaces status** and **show interfaces** commands list both the speed and duplex settings on an interface, as Example 29-5 shows.

Example 29-5 Commands to Verify Speed and Duplex Settings

```
S1# show interface status

Port Name Status      Vlan   Duplex Speed Type
Fa0/1  connected    trunk   full    100   10/100BaseTX
Fa0/2  connected    1       half    100   10/100BaseTX
Fa0/3  connected    1       a-full  a-100  10/100BaseTX
Fa0/4  disabled     1       auto   auto   10/100BaseTX
Fa0/5  disabled     1       auto   auto   10/100BaseTX
Fa0/6  notconnect   1       auto   auto   10/100BaseTX

!Remaining output omitted
S1# show interface fa0/3

FastEthernet0/1 is up, line protocol is up (connected)
  Hardware is Fast Ethernet, address is 001b.5302.4e81 (bia 001b.5302.4e81)
    MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec,
      reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
```

```

Keepalive set (10 sec)
Full-duplex, 100Mb/s, media type is 10/100BaseTX
input flow-control is off, output flow-control is unsupported
ARP type: ARPA, ARP Timeout 04:00:00
Last input never, output 00:00:00, output hang never
Last clearing of "show interface" counters never
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 1000 bits/sec, 1 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
 2745 packets input, 330885 bytes, 0 no buffer
  Received 1386 broadcasts (0 multicast)
  0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
  0 watchdog, 425 multicast, 0 pause input
  0 input packets with dribble condition detected
  56989 packets output, 4125809 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  0 babbles, 0 late collision, 0 deferred
  0 lost carrier, 0 no carrier, 0 PAUSE output
  0 output buffer failures, 0 output buffers swapped out

```

Notice that both commands show the duplex and speed settings of the interface. However, the **show interface status** command is preferred for troubleshooting duplex or speed mismatches because it shows exactly how the switch determined the duplex and speed of the interface. In the duplex column, **a-full** means the switch autonegotiated full duplex. The setting **full** or **half** means that the switch was configured at that duplex setting. Autonegotiation has been disabled. In the speed column, **a-100** means the switch autonegotiated 100 Mbps as the speed. The setting **10** or **100** means that the switch was configured at that speed setting.

Finding a duplex mismatch can be much more difficult than finding a speed mismatch because if the duplex settings do not match on the ends of an Ethernet segment, the switch interface will still be in a connect (up/up) state. In this case, the interface works, but the network might work poorly, with hosts experiencing poor performance and intermittent communication problems. To identify duplex mismatch problems, check the duplex setting on each end of the link and watch for incrementing collision and late collision counters, as highlighted in the output at the end of Example 29-5.

Common Layer 1 Problems On “Up” Interfaces

When a switch interface is “up,” it does not necessarily mean that the interface is operating in an optimal state. For this reason, Cisco IOS tracks certain counters to help identify problems that can occur even though the interface is in a connect state. The output in Example 29-5 highlights these counters. Table 29-7 summarizes three general types of Layer 1 interface problems that can occur while an interface is in the “up,” connected, state.

Table 29-7 Common LAN Layer 1 Problem Indicators

Type of Problem	Counter Values Indicating This Problem	Common Root Causes
Excessive noise	Many input errors, few collisions	Wrong cable category (Cat5, Cat5E, Cat6), damaged cables, EMI
Collisions	More than roughly 0.1% of all frames are collisions	Duplex mismatch (seen on the half-duplex side), jabber, DoS attack
Late collisions	Increasing late collisions	Collision domain or single cable too long, duplex mismatch

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7	2
	17
CCNA 200-301 Official Cert Guide, Volume 1	2
	4
	6
	7
Portable Command Guide	8

IPv4 Addressing

CCNA 200-301 Exam Topics

- Configure and verify IPv4 addressing and subnetting
- Describe the need for private IPv4 addressing

Key Topics

Today we focus on reviewing the structure of an IPv4 address, the classes, and private and public IPv4 addresses. Then we turn our focus to IPv4 subnetting.

By now, you should be able to subnet quickly. For example, you should be able to quickly answer a question such as the following: If you are given a /16 network, what subnet mask would you use to maximize the total number of subnets while still providing enough addresses for the largest subnet with 500 hosts? The answer is 255.255.254.0, or /23. This gives you 128 subnets with 510 usable hosts per subnet. You should be able to quickly calculate this information.

The CCNA exam promises to contain many subnetting and subnetting-related questions. Therefore, we devote some time to this necessary skill and also look at designing addressing schemes using variable-length subnet masking (VLSM).

IPv4 Addressing

Although IPv6 is rapidly permeating the networks of the world, most networks still have large IPv4 implementations. Especially on private networks, migration away from IPv4 will take years to complete. Clearly, IPv4 and your skill in its use are still in demand.

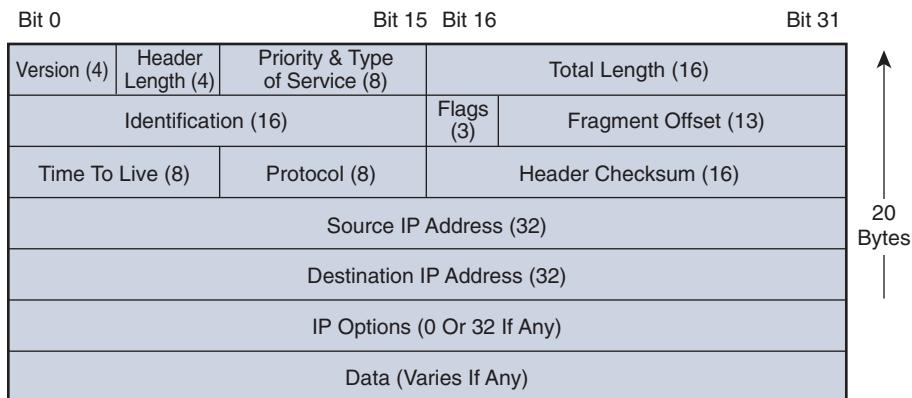
Header Format

Figure 28-1 shows the layout of the IPv4 header.

Note that each IP packet carries this header, which includes a source IP address and destination IP address.

An IP address consists of two parts:

- **Network ID:** The high-order, or leftmost, bits specify the network address component of the address.
- **Host ID:** The low-order, or rightmost, bits specify the host address component of the address.

Figure 28-1 IPv4 Header Format

Classes of Addresses

From the beginning, IPv4 was designed with class structure: Classes A, B, C, D, and E. Class D is used for multicasting addresses, and Class E is reserved for experimentation. Classes A, B, and C are assigned to network hosts. To provide a hierarchical structure, these classes are divided into network and host portions, as Figure 28-2 shows. The high-order bits specify the network ID, and the low-order bits specify the host ID.

Figure 28-2 Network/Host Boundary for Each Class of IPv4 Address

	8 Bits	8 Bits	8 Bits	8 Bits
Class A:	Network	Host	Host	Host
Class B:	Network	Network	Host	Host
Class C:	Network	Network	Network	Host

Class D: Multicast

Class E: Research

In a classful addressing scheme, devices that operate at Layer 3 can determine the address class of an IP address from the format of the first few bits in the first octet. Initially, this was important so that a networking device could apply the default subnet mask for the address and determine the host address. Table 28-1 summarizes how addresses are divided into classes, the default subnet mask, the number of networks per class, and the number of hosts per classful network address.

Table 28-1 IPv4 Address Classes

Address Class	First Octet Range (Decimal)	First Octet Bits (Highlighted)	Network (N) and Host (H) Portions of Addresses	Default Subnet Mask (Decimal and Binary)	Number of Possible Networks and Hosts per Network
A	1–127	00000000– 10111111	N.H.H.H	255.0.0.0 11111111.00000000. 00000000.00000000	2^7 , or 128, networks $2^{24}-2$, or 16,777,214, hosts per network
B	128–191	10000000– 10111111	N.N.H.H	255.255.0.0 11111111.11111111. 00000000.00000000	2^{14} , or 16,384, networks $2^{16}-2$, or 65,534, hosts per network
C	192–223	11000000– 11011111	N.N.N.H	255.255.255.0 11111111.11111111. 11111111.00000000	2^{21} , or 2,097,152, networks 2^8-2 , or 254, hosts per network
D	224–239	11100000– 11101111		Not used for host addressing	
E	240–255	11110000– 11111111		Not used for host addressing	

In the last column of Table 28-1, the –2 for hosts per network accounts for the reserved network and broadcast addresses for each network. These two addresses cannot be assigned to hosts.

NOTE: We do not review the process of converting between binary and decimal. At this point in your studies, you should be comfortable moving between the two numbering systems. If not, take some time to practice this necessary skill. You can search the Internet for binary conversion tricks, tips, and games to practice. The Cisco Learning Network has a fun game you can play, at <https://learningnetwork.cisco.com/docs/DOC-1803>.

Purpose of the Subnet Mask

Subnet masks are always a series of 1 bits followed by a series of 0 bits. The boundary where the series changes from 1s to 0s is the boundary between the network and the host. This is how a device that operates at Layer 3 determines the network address for a packet: by finding the bit boundary where the series of 1 bits ends and the series of 0 bits begins. The bit boundary for default subnet masks breaks on the octet boundary. Determining the network address for an IP address that uses a default mask is easy.

Say that a router receives a packet destined for 192.168.1.51. By ANDing the IP address and the subnet mask, the router determines the network address for the packet. By the ANDing rules, a 1 AND a 1 equals 1. All other possibilities equal 0. Table 28-2 shows the results of the ANDing operation. Notice that the host bits in the last octet are ignored.

Table 28-2 ANDing an IP Address and Subnet Mask to Find the Network Address

Destination address	192.168.1.51	11000000.10101000.00000001.00110011
Subnet mask	255.255.255.0	11111111.11111111.11111111.00000000
Network address	192.168.1.0	11000000.10101000.00000001.00000000

The bit boundary can now occur in just about any place in the 32 bits. Table 28-3 summarizes the values for the last nonzero octet in a subnet mask.

Table 28-3 Subnet Mask Binary Values

Mask (Decimal)	Mask (Binary)	Network Bits	Host Bits
0	00000000	0	8
128	10000000	1	7
192	11000000	2	6
224	11100000	3	5
240	11110000	4	4
248	11111000	5	3
252	11111100	6	2
254	11111110	7	1
255	11111111	8	0

Private and Public IP Addressing

RFC 1918, “Address Allocation for Private Internets,” eased the demand for IP addresses by reserving the following addresses for use in private internetworks:

- **Class A:** 10.0.0.0/8 (10.0.0.0–10.255.255.255)
- **Class B:** 172.16.0.0/12 (172.16.0.0–172.31.255.255)
- **Class C:** 192.168.0.0/16 (192.168.0.0–192.168.255.255)

If you are addressing a nonpublic intranet, these private addresses are normally used instead of globally unique public addresses. This provides flexibility in your addressing design. Any organization can take full advantage of an entire Class A address (10.0.0.0/8). Forwarding traffic to the public Internet requires translation to a public address using Network Address Translation (NAT). But by overloading an Internet-routable address with many private addresses, a company needs only a handful of public addresses. Day 8, “NAT,” reviews NAT operation and configuration in greater detail.

Subnetting in Four Steps

Everyone has a preferred method of subnetting. Each teacher uses a slightly different strategy to help students master this crucial skill, and each of the suggested study resources has a slightly different way of approaching this subject.

The method I prefer consists of four steps:

- Step 1.** Determine how many bits to borrow, based on the host requirements.
- Step 2.** Determine the new subnet mask.
- Step 3.** Determine the subnet multiplier.
- Step 4.** List the subnets, including the subnetwork address, host range, and broadcast address.

The best way to demonstrate this method is to use an example. Assume that you are given the network address 192.168.1.0 with the default subnet mask 255.255.255.0. The network address and subnet mask can be written as 192.168.1.0/24. The /24 represents the subnet mask in a shorter notation and means that the first 24 bits are network bits.

Now further assume that you need 30 hosts per network and want to create as many subnets for the given address space as possible. With these network requirements, you can now subnet the address space.

Determine How Many Bits to Borrow

To determine the number of bits you can borrow, you first must know how many host bits you have to start with. Because the first 24 bits are network bits in this example, the remaining 8 bits are host bits.

Because our requirement specifies 30 host addresses per subnet, we need to first determine the minimum number of host bits to leave. The remaining bits can be borrowed:

$$\text{Host Bits} = \text{Bits Borrowed} + \text{Bits Left}$$

To provide enough address space for 30 hosts, we need to leave 5 bits. Use the following formula:

$$2^{\text{BL}} - 2 = \text{number of host addresses}$$

The exponent BL is bits left in the host portion.

Remember, the -2 accounts for the network and broadcast addresses that cannot be assigned to hosts.

In this example, leaving 5 bits in the host portion provides the right number of host addresses:

$$2^5 - 2 = 30$$

Because we have 3 bits remaining in the original host portion, we borrow all these bits to satisfy the requirement to “create as many subnets as possible.” To determine how many subnets we can create, use the following formula:

$$2^{\text{BB}} = \text{number of subnets}$$

The exponent BB is bits borrowed from the host portion.

In this example, borrowing 3 bits from the host portion creates eight subnets: $2^3 = 8$.

As Table 28-4 shows, the 3 bits are borrowed from the leftmost bits in the host portion. The highlighted bits in the table show all possible combinations of manipulating the 8 bits borrowed to create the subnets.

Table 28-4 Binary and Decimal Value of the Subnetted Octet

Subnet Number	Last Octet Binary Value	Last Octet Decimal Value
0	00000000	.0
1	00100000	.32
2	01000000	.64
3	01100000	.96
4	10000000	.128
5	10100000	.160
6	11000000	.192
7	11100000	.224

Determine the New Subnet Mask

Notice in Table 28-4 that the network bits now include the 3 borrowed host bits in the last octet. Add these 3 bits to the 24 bits in the original subnet mask, and you have a new subnet mask, /27. In decimal format, you turn on the 128, 64, and 32 bits in the last octet, for a value of 224. The new subnet mask is thus 255.255.255.224.

Determine the Subnet Multiplier

Notice in Table 28-4 that the last octet decimal value increments by 32 with each subnet number. The number 32 is the subnet multiplier. You can quickly find the subnet multiplier by using one of two methods:

- **Method 1:** Subtract the last nonzero octet of the subnet mask from 256. In this example, the last nonzero octet is 224. The subnet multiplier is therefore $256 - 224 = 32$.
- **Method 2:** The decimal value of the last bit borrowed is the subnet multiplier. In this example, we borrowed the 128 bit, the 64 bit, and the 32 bit. The 32 bit is the last bit we borrowed and is, therefore, the subnet multiplier.

By using the subnet multiplier, you no longer have to convert binary subnet bits to decimal.

List the Subnets, Host Ranges, and Broadcast Addresses

Listing the subnets, host ranges, and broadcast addresses helps you see the flow of addresses within one address space. Table 28-5 documents our subnet addressing scheme for the 192.168.1.0/24 address space.

Table 28-5 Subnet Addressing Scheme for 192.168.1.0/24: 30 Hosts per Subnet

Subnet Number	Subnet Address	Host Range	Broadcast Address
0	192.168.1.0	192.168.1.1–192.168.1.30	192.168.1.31
1	192.168.1.32	192.168.1.33–192.168.1.62	192.168.1.63
2	192.168.1.64	192.168.1.65–192.168.1.94	192.168.1.95

Subnet Number	Subnet Address	Host Range	Broadcast Address
3	192.168.1.96	192.168.1.97–192.168.1.126	192.168.1.127
4	192.168.1.128	192.168.1.129–192.168.1.158	192.168.1.159
5	192.168.1.160	192.168.1.161–192.168.1.190	192.168.1.191
6	192.168.1.192	192.168.1.193–192.168.1.222	192.168.1.223
7	192.168.1.224	192.168.1.225–192.168.1.254	192.168.1.255

Following are three examples using the four subnetting steps. For brevity, step 4 lists only the first three subnets.

Subnetting Example 1

Subnet the address space 172.16.0.0/16 to provide at least 80 host addresses per subnet while creating as many subnets as possible.

Step 1. There are 16 host bits. Leave 7 bits for host addresses ($2^7 - 2 = 126$ host addresses per subnet). Borrow the first 9 host bits to create as many subnets as possible ($2^9 = 512$ subnets).

Step 2. The original subnet mask is /16, or 255.255.0.0. Turn on the next 9 bits starting in the second octet, for a new subnet mask of /25 or 255.255.255.128.

Step 3. The subnet multiplier is 128, which can be found as $256 - 128 = 128$, or because the 128 bit is the last bit borrowed.

For step 4, Table 28-6 lists the first three subnets, host ranges, and broadcast addresses.

Table 28-6 Subnet Addressing Scheme for Example 1

Subnet Number	Subnet Address	Host Range	Broadcast Address
0	172.16.0.0	172.16.0.1–172.16.0.126	172.16.0.127
1	172.16.0.128	172.16.0.129–172.16.0.254	172.16.0.255
2	172.16.1.0	172.16.1.1–172.16.1.126	172.16.1.127

Subnetting Example 2

Subnet the address space 172.16.0.0/16 to provide at least 80 subnet addresses.

Step 1. There are 16 host bits. Borrow the first 7 host bits to create at least 80 subnets ($2^7 = 128$ subnets). That leaves 9 bits for host addresses, or $2^9 - 2 = 510$ host addresses per subnet.

Step 2. The original subnet mask is /16, or 255.255.0.0. Turn on the next 7 bits starting in the second octet, for a new subnet mask of /23, or 255.255.254.0.

Step 3. The subnet multiplier is 2, which can be found as $256 - 254 = 2$, or because the 2 bit is the last bit borrowed.

For step 4, Table 28-7 lists the first three subnets, host ranges, and broadcast addresses.

Table 28-7 Subnet Addressing Scheme for Example 2

Subnet Number	Subnet Address	Host Range	Broadcast Address
0	172.16.0.0	172.16.0.1–172.16.1.254	172.16.1.255
1	172.16.2.0	172.16.2.1–172.16.3.254	172.16.3.255
2	172.16.4.0	172.16.4.1–172.16.5.254	172.16.5.255

Subnetting Example 3

Subnet the address space 172.16.10.0/23 to provide at least 60 host addresses per subnet while creating as many subnets as possible.

- Step 1.** There are 9 host bits. Leave 6 bits for host addresses ($2^6 - 2 = 62$ host addresses per subnet). Borrow the first 3 host bits to create as many subnets as possible ($2^3 = 8$ subnets).
- Step 2.** The original subnet mask is /23, or 255.255.254.0. Turn on the next 3 bits starting with the last bit in the second octet, for a new subnet mask of /26, or 255.255.255.192.
- Step 3.** The subnet multiplier is 64, which can be found as $256 - 192 = 64$, or because the 64 bit is the last bit borrowed.

For step 4, Table 28-8 lists the first three subnets, host ranges, and broadcast addresses.

Table 28-8 Subnet Addressing Scheme for Example 3

Subnet Number	Subnet Address	Host Range	Broadcast Address
0	172.16.10.0	172.16.10.1–172.16.10.62	172.16.10.63
1	172.16.10.64	172.16.10.65–172.16.10.126	172.16.10.127
2	172.16.10.128	172.16.10.129–172.16.10.190	172.16.10.191


VLSM

You probably noticed that the starting address space in Subnetting Example 3 is not an entire classful address. In fact, it is subnet 5 from Subnetting Example 2. In Subnetting Example 3, therefore, we “subnetted a subnet.” In a nutshell, VLSM is subnetting a subnet.

With VLSM, you can customize subnets to fit your network. Subnetting works the same way. You just have to do it more than once to complete your addressing scheme. To avoid overlapping address spaces, start with your largest host requirement, create a subnet for it, and then continue with the next-largest host requirement.

Consider a small example. Given the address space 172.30.4.0/22 and the network requirements in Figure 28-3, apply an addressing scheme that conserves the most addresses for future growth.

We need five subnets: four LAN subnets and one WAN subnet. Starting with the largest host requirement on LAN 3, begin subnetting the address space.

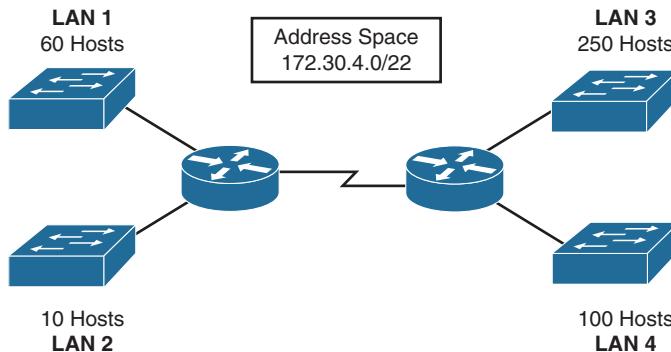Figure 28-3 VLSM Example Topology

To satisfy the 250-host requirement, we leave 8 host bits ($2^8 - 2 = 254$ hosts per subnet). Because we have 10 host bits total, we borrow 2 bits to create the first round of subnets ($2^2 = 4$ subnets). The starting subnet mask is /22, or 255.255.252.0. We turn on the next 2 bits in the subnet mask to get /24, or 255.255.255.0. The multiplier is 1. The four subnets are as follows:

- **Subnet 0:** 172.30.4.0/24
- **Subnet 1:** 172.30.5.0/24
- **Subnet 2:** 172.30.6.0/24
- **Subnet 3:** 172.30.7.0/24

Assigning Subnet 0 to LAN 3, we are left with three /24 subnets. Continuing on to the next-largest host requirement on LAN 4, we further subnet Subnet 1, 172.30.5.0/24.

To satisfy the 100-host requirement, we leave 7 bits ($2^7 - 2 = 128$ hosts per subnet). Because we have 8 host bits total, we can borrow only 1 bit to create the subnets ($2^1 = 2$ subnets). The starting subnet mask is /24, or 255.255.255.0. We turn on the next bit in the subnet mask to get /25, or 255.255.255.128. The multiplier is 128. The two subnets are as follows:

- **Subnet 0:** 172.30.5.0/25
- **Subnet 1:** 172.30.5.128/25

Assigning Subnet 0 to LAN 4, we are left with one /25 subnet and two /24 subnets. Continuing on to the next-largest host requirement on LAN 1, we further subnet Subnet 1, 172.30.5.128/25.

To satisfy the 60-host requirement, we leave 6 bits ($2^6 - 2 = 62$ hosts per subnet). Because we have 7 host bits total, we borrow 1 bit to create the subnets ($2^1 = 2$ subnets). The starting subnet mask is /25, or 255.255.255.128. We turn on the next bit in the subnet mask to get /26, or 255.255.255.192. The multiplier is 64. The two subnets are as follows:

- **Subnet 0:** 172.30.5.128/26
- **Subnet 1:** 172.30.5.192/26

Assigning Subnet 0 to LAN 1, we are left with one /26 subnet and two /24 subnets. Finishing our LAN subnetting with LAN 2, we further subnet Subnet 1, 172.30.5.192/26.

To satisfy the 10-host requirement, we leave 4 bits ($2^4 - 2 = 14$ hosts per subnet). Because we have 6 host bits total, we borrow 2 bits to create the subnets ($2^2 = 4$ subnets). The starting subnet mask is /26, or 255.255.255.192. We turn on the next 2 bits in the subnet mask to get /28, or 255.255.255.240. The multiplier is 16. The four subnets are as follows:

- **Subnet 0:** 172.30.5.192/28
- **Subnet 1:** 172.30.5.208/28
- **Subnet 2:** 172.30.5.224/28
- **Subnet 3:** 172.30.5.240/28

Assigning Subnet 0 to LAN 2, we are left with three /28 subnets and two /24 subnets. To finalize our addressing scheme, we need to create a subnet for the WAN link, which needs only two host addresses. We further subnet Subnet 1, 172.30.5.208/28.

To satisfy the two-host requirement, we leave 2 bits ($2^2 - 2 = 2$ hosts per subnet). Because we have 4 host bits total, we borrow 2 bits to create the subnets ($2^2 = 4$ subnets). The starting subnet mask is /28, or 255.255.255.240. We turn on the next 2 bits in the subnet mask to get /30, or 255.255.255.252. The multiplier is 4. The four subnets are as follows:

- **Subnet 0:** 172.30.5.208/30
- **Subnet 1:** 172.30.5.212/30
- **Subnet 2:** 172.30.5.216/30
- **Subnet 3:** 172.30.5.220/30

We assign Subnet 0 to the WAN link. We are left with three /30 subnets, two /28 subnets, and two /24 subnets.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA1	11
CCNA 200-301 Official Cert Guide, Volume 1	11
	12
	13
	14
CCNA 200-301 Official Cert Guide, Volume 2	7
Portable Command Guide	1
	2
	3
	4

IPv6 Addressing

CCNA 200-301 Exam Topics

- Configure and verify IPv6 addressing and prefix
- Compare IPv6 address types

Key Topics

In the early 1990s, the Internet Engineering Task Force (IETF) grew concerned about the exhaustion of IPv4 network addresses and began to look for a replacement for this protocol. This activity led to the development of what is now known as IPv6. Today's review focuses on the IPv6 protocol and IPv6 address types. We also review the various ways to implement IPv6 addressing, including subnetting, autoconfiguring hosts, and running IPv6 and IPv4 in a dual-stack configuration. IPv6 configuration on routers will be reviewed on Day 18, "Basic Router Configuration."

NOTE: If you have not yet purchased a copy of Rick Graziani's *IPv6 Fundamentals* to add to your library of study tools, now is the time to do so. His book is my definitive source for everything IPv6.

Overview and Benefits of IPv6

Scaling networks today requires a limitless supply of IP addresses and improved mobility that private addressing and NAT alone cannot meet. IPv6 satisfies the increasingly complex requirements of hierarchical addressing that IPv4 does not provide. The main benefits and features of IPv6 include the following:

- **Extended address space:** A 128-bit address space represents about 340 trillion trillion trillion addresses.
- **Stateless address autoconfiguration:** IPv6 provides host devices with a method for generating their own routable IPv6 addresses. IPv6 also supports stateful configuration using DHCPv6.
- **Eliminates the need for NAT/PAT:** NAT/PAT was conceived as part of the solution to IPv4 address depletion. With IPv6, address depletion is no longer an issue. NAT64, however, does play an important role in providing backward compatibility with IPv4.
- **Simpler header:** A simpler header offers several advantages over IPv4:
 - Better routing efficiency for performance and forwarding-rate scalability
 - No broadcasts and, thus, no potential threat of broadcast storms

- No requirement for processing checksums
- Simpler and more efficient extension header mechanisms
- **Mobility and security:** Mobility and security help ensure compliance with mobile IP and IPsec standards:
 - IPv4 does not automatically enable mobile devices to move without breaks in established network connections.
 - In IPv6, mobility is built in, which means that any IPv6 node can use mobility when necessary.
 - IPsec is enabled on every IPv6 node and is available for use, making the IPv6 Internet more secure.
- **Transition strategies:** You can incorporate existing IPv4 capabilities with the added features of IPv6 in several ways:
 - You can implement a dual-stack method, with both IPv4 and IPv6 configured on the interface of a network device.
 - You can use tunneling, which will become more prominent as the adoption of IPv6 grows.

The IPv6 Protocol

Table 27-1 compares the binary and alphanumeric representations of IPv4 and IPv6 addresses.



Table 27-1 IPv4 and IPv6 Address Comparison

	IPv4 (4 Octets)	IPv6 (16 Octets)
Binary representation	11000000.101010 00.00001010.01100101	10100101.00100100.01110010.11010011.0010110 0.10000000.11011101.00000010.00000000.0010101 01.11101100.01111010.00000000.00101011.11101 010.01110011
Alphanumeric representation	192.168.10.101	2001:0DB8:2C80:DD02:0029:EC7A:002B:EA73
Total IP addresses	4,294,967,296, or 2^{32}	3.4×10^{38} , or 2^{128}

Figure 27-1 compares the IPv4 header with the main IPv6 header. Notice that the IPv6 header is represented in 64-bit words instead of the 32-bit words used by IPv4.

NOTE: Refer to RFC 2460 and the “Study Resources” section for the full specification of IPv6.


Figure 27-1 IPv6 Header Format

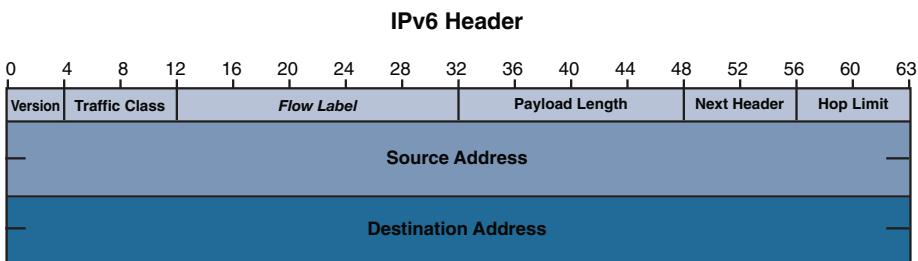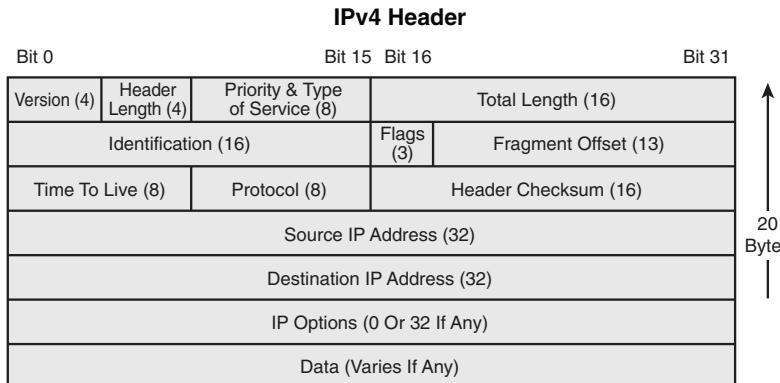

IPv6 Address Types

IPv4 has three address types: unicast, multicast, and broadcast. IPv6 does not use broadcast addresses. Instead, IPv6 uses unicast, multicast, and anycast addresses. Figure 27-2 illustrates these three types of IPv6 addresses.

Figure 27-2 IPv6 Address Types

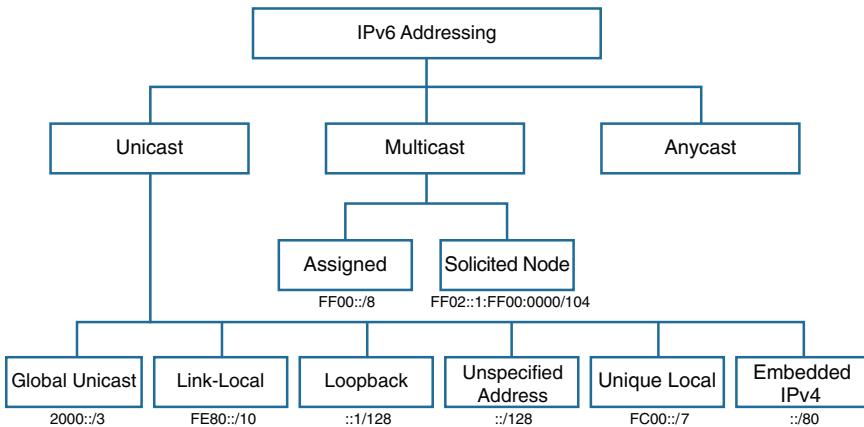


Unicast

The first classification of IPv6 address types shown in Figure 27-2 is the unicast address. A unicast address uniquely identifies an interface on an IPv6 device. A packet sent to a unicast address is received by the interface that is assigned to that address. Much as with IPv4, source IPv6 addresses must be unicast addresses. Because unicast addressing—as opposed to multicast and anycast addressing—is the major focus for a CCNA candidate, we spend some time reviewing the Unicast branch in Figure 27-2.

Global Unicast Address

IPv6 has an address format that enables aggregation upward, eventually to the ISP. An IPv6 global unicast address is globally unique. Like a public IPv4 address, it can be routed in the Internet without modification. An IPv6 global unicast address consists of a 48-bit global routing prefix, a 16-bit subnet ID, and a 64-bit interface ID. Use Rick Graziani's method of breaking down the IPv6 address with the 3-1-4 rule (also known as the *pi rule*, for 3.14), shown in Figure 27-3.


Figure 27-3 Graziani's 3-1-4 Rule for Remembering the Global Unicast Address Structure

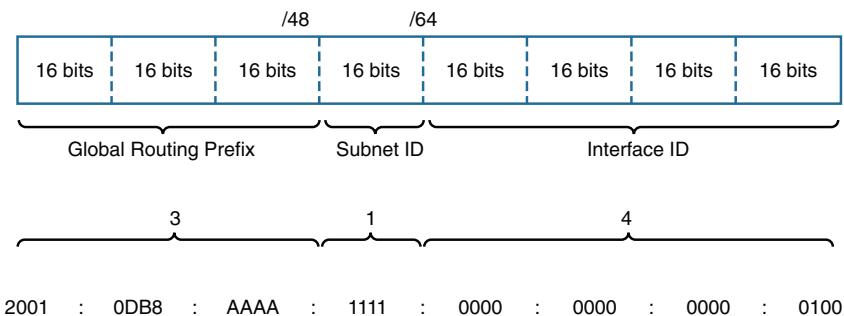


Each number refers to the number of hextets, or 16-bit segments, of that portion of the address:

- **3:** Three hextets for the global routing prefix
- **1:** One hextet for the subnet ID
- **4:** Four hextets for the interface ID

Global unicast addresses that are currently assigned by the Internet Assigned Numbers Authority (IANA) use the range of addresses that start with binary value 001 (2000::/3). This range represents one-eighth of the total IPv6 address space and is the largest block of assigned addresses. Figure 27-4 shows how the IPv6 address space is divided into an eight-piece pie based on the value of the first 3 bits.

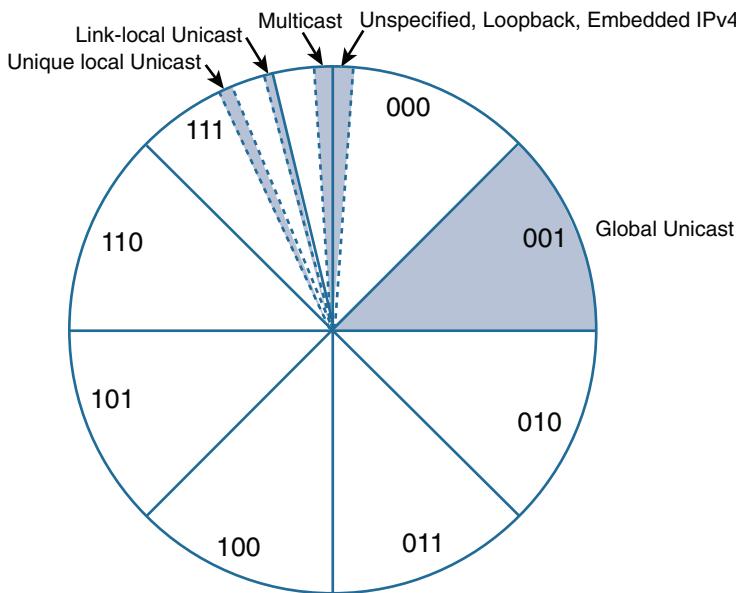Figure 27-4 Allocation of IPv6 Address Space

Using the 2000::/3 pie piece, the IANA assigns /23 or shorter address blocks to the five Regional Internet Registries (RIRs). From there, ISPs are assigned /32 or shorter address blocks. ISPs then assign each site—that is, each customer—a /48 or shorter address block. Figure 27-5 shows the breakdown of global routing prefixes.

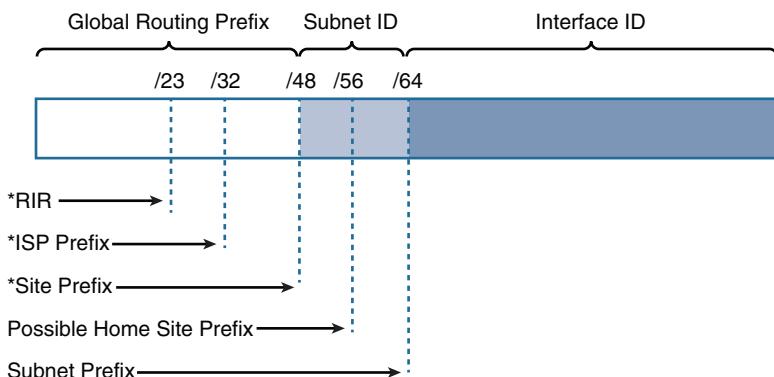
Figure 27-5 Classification of Global Routing Prefix Sizes

*This is a minimum allocation. The prefix-length may be less if it can be justified.

In IPv6, an interface can be configured with multiple global unicast addresses, which can be on the same or different subnets. In addition, an interface does not have to be configured with a global unicast address, but it must at least have a link-local address.

A global unicast address can be further classified into the various configuration options available, as Figure 27-6 shows.

Figure 27-6 Global Unicast Address Configuration Options

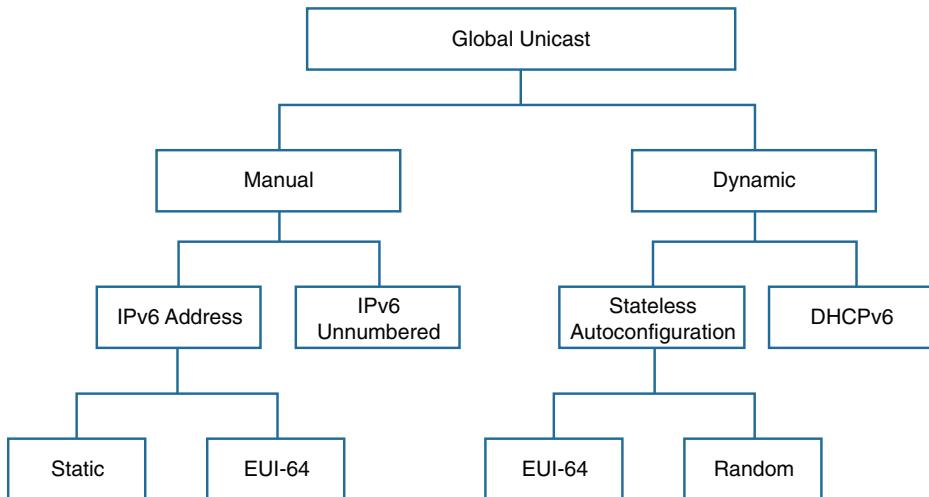

We review EUI-64 and stateless address autoconfiguration in more detail later in this day. In upcoming days, we review the rest of the configuration options in Figure 27-6 in more detail. For now, Table 27-2 summarizes them.

Table 27-2 Summary of Global Unicast Configuration Options

Global Unicast	Configuration Option	Description
Manual	Static	Much as with IPv4, the IPv6 address and prefix are statically configured on the interface.
	EUI-64	The prefix is configured manually. The EUI-64 process uses the MAC address to generate the 64-bit interface ID.
	IPv6 unnumbered	Much as with IPv4, an interface can be configured to use the IPv6 address of another interface on the same device.
Dynamic	Stateless address autoconfiguration	SLAAC determines the prefix and prefix length from neighbor discovery router advertisement messages and then creates the interface ID using the EUI-64 method.
	DHCPv6	Much as with IPv4, a device can receive some or all of its addressing from a DHCPv6 server.

Link-Local Address

As Figure 27-2 shows, link-local addresses are a type of unicast address. Link-local addresses are confined to a single link. They need to be unique only to that link because packets with a link-local source or destination address are not routable off the link.

Link-local addresses are configured in one of three ways:

- Dynamically, using EUI-64
- Using a randomly generated interface ID
- Statically, entering the link-local address manually


Link-local addresses provide a unique benefit in IPv6. A device can create its link-local address completely on its own. Link-local unicast addresses are in the range FE80::/10 to FEBF::/10, as Table 27-3 shows.

Table 27-3 Range of Link-Local Unicast Addresses

Link-Local Unicast Address	Range of First Hextet	Range of First Hextet in Binary
FE80::/10	FE80	1111 1110 10 00 0000
	FEBF	1111 1110 10 11 1111

Figure 27-7 shows the format of a link-local unicast address.

Figure 27-7 Link-Local Unicast Address

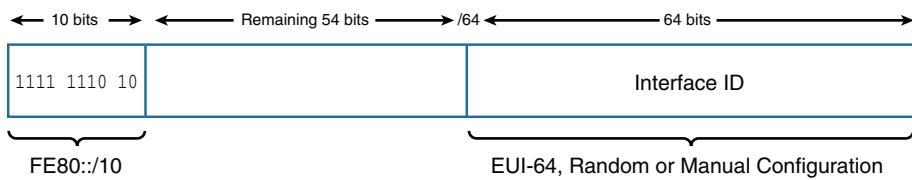

Loopback Address

The loopback address for IPv6 is an all-0s address except for the last bit, which is set to 1. As in IPv4, an end device uses the IPv6 loopback address to send an IPv6 packet to itself to test the TCP/IP stack. The loopback address cannot be assigned to an interface and is not routable outside the device.


Unspecified Address

The unspecified unicast address is the all-0s address, represented as ::. It cannot be assigned to an interface but is reserved for communications when the sending device does not have a valid IPv6 address yet. For example, a device uses :: as the source address when using the duplicate address detection (DAD) process. The DAD process ensures a unique link-local address. Before a device can begin using its newly created link-local address, it sends out an all-nodes multicast to all devices on the link, with its new address as the destination. If the device receives a response, it knows that link-local address is in use and, therefore, needs to create another link-local address.

Unique Local Address

Unique local addresses (ULA) are defined by RFC 4193, “Unique Local IPv6 Unicast Addresses.” Figure 27-8 shows the format for ULAs.

Figure 27-8 Unique Local Address

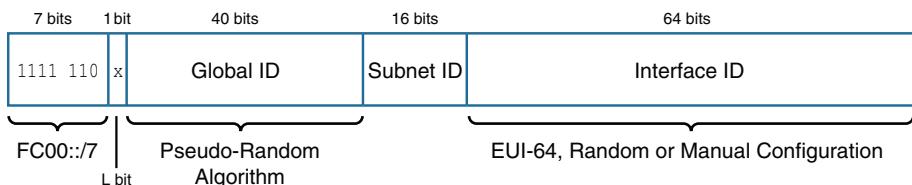

These are private addresses. However, unlike in IPv4, IPv6 ULAs are globally unique. This is possible because of the relatively large amount of address space in the Global ID portion shown in Figure 27-8: 40 bits, or more than 1 trillion unique global IDs. As long as a site uses the pseudo-random global ID algorithm, it will have a very high probability of generating a unique global ID.

Unique local addresses have the following characteristics:


- Possess a globally unique prefix or at least have a very high probability of being unique
- Allow sites to be combined or privately interconnected without address conflicts or addressing renumbering
- Remain independent of any Internet service provider and can be used within a site without having Internet connectivity
- If accidentally leaked outside a site by either routing or the Domain Name System (DNS), don't cause a conflict with any other addresses
- Can be used just like a global unicast address

IPv4 Embedded Address

IPv4 and IPv6 packets are not compatible. Features such as NAT-PT (now deprecated) and NAT64 are required to translate between the two address families. IPv4-mapped IPv6 addresses are used by transition mechanisms on hosts and routers to create IPv4 tunnels that deliver IPv6 packets over IPv4 networks.

NOTE: NAT64 is beyond the scope of the CCNA exam topics.

To create an IPv4-mapped IPv6 address, the IPv4 address is embedded within the low-order 32 bits of IPv6. Basically, IPv6 just puts an IPv4 address at the end, adds 16 all-1 bits, and pads the rest of the address. The address does not have to be globally unique. Figure 27-9 illustrates this IPv4-mapped IPv6 address structure.

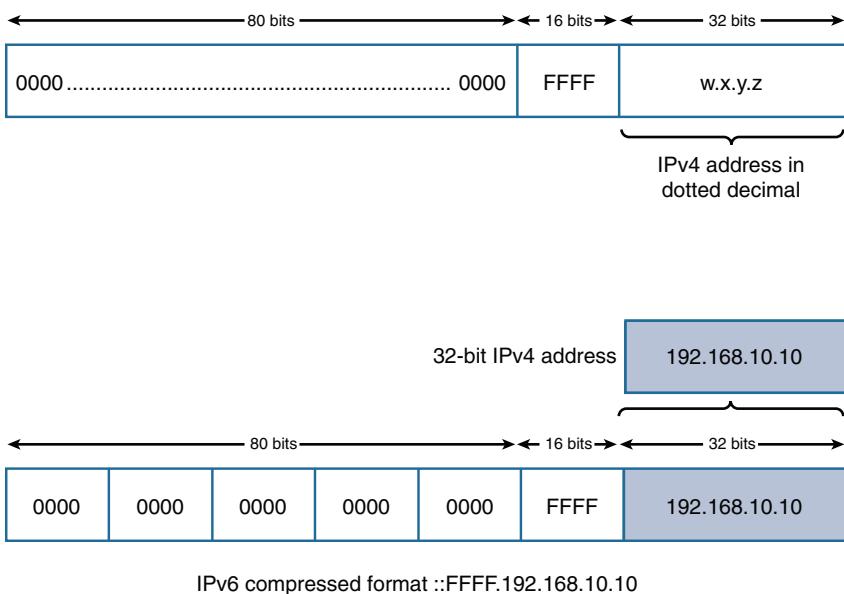Figure 27-9 IPv4-Mapped IPv6 Address

Multicast

The second major classification of IPv6 address types in Figure 27-2 is multicast. Multicast is a technique by which a device sends a single packet to multiple destinations simultaneously. An IPv6 multicast address defines a group of devices known as a *multicast group* and is equivalent to IPv4 224.0.0.0/4. IPv6 multicast addresses have the prefix FF00::/8.

Two types of IPv6 multicast addresses are used:

- Assigned multicast
- Solicited-node multicast

Assigned Multicast

Assigned multicast addresses are used in context with specific protocols.

Two common IPv6 assigned multicast groups include the following:

- **FF02::1 All-nodes multicast group:** This is a multicast group that all IPv6-enabled devices join. As with a broadcast in IPv4, all IPv6 interfaces on the link process packets sent to this address. For example, a router sending an ICMPv6 Router Advertisement (RA) uses the all-nodes FF02::1 address. IPv6-enabled devices can then use the RA information to learn the link's address information, such as prefix, prefix length, and default gateway.
- **FF02::2 All-routers multicast group:** This is a multicast group that all IPv6 routers join. A router becomes a member of this group when it is enabled as an IPv6 router with the **ipv6 unicast-routing** global configuration command. A packet sent to this group is received and


processed by all IPv6 routers on the link or network. For example, IPv6-enabled devices send ICMPv6 Router Solicitation (RS) messages to the all-routers multicast address requesting an RA message.

Solicited-Node Multicast

In addition to every unicast address assigned to an interface, a device has a special multicast address known as a solicited-node multicast address (refer to Figure 27-2). These multicast addresses are automatically created using a special mapping of the device's unicast address with the solicited-node multicast prefix FF02:0:0:0:0:1:FF00::/104.

As Figure 27-10 shows, solicited-node multicast addresses are used for two essential IPv6 mechanisms, both part of Neighbor Discovery Protocol (NDP):

Figure 27-10 Uses of Solicited-Node Multicasts

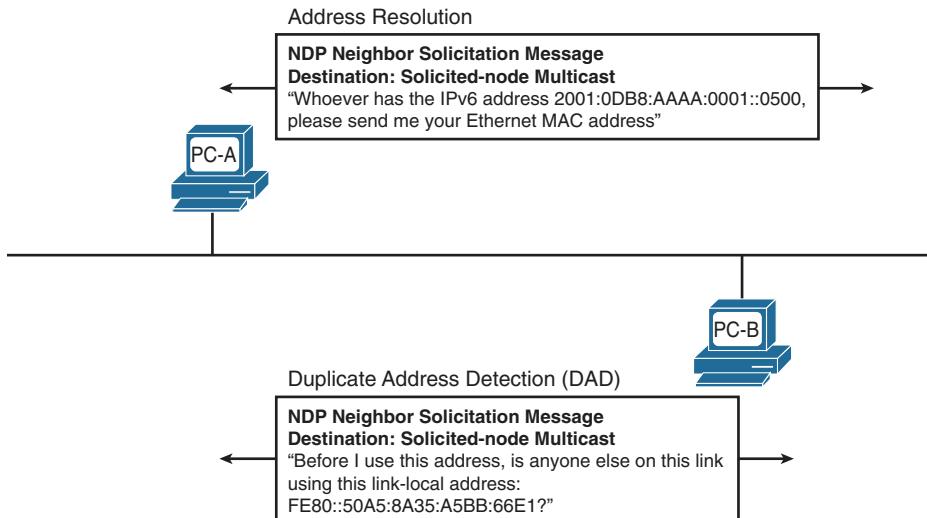


- **Address resolution:** In this mechanism, which is equivalent to ARP in IPv4, an IPv6 device sends an NS message to a solicited-node multicast address to learn the link layer address of a device on the same link. The device recognizes the IPv6 address of the destination on that link but needs to know its data link address.
- **Duplicate address detection (DAD):** As mentioned earlier, DAD allows a device to verify that its unicast address is unique on the link. An NS message is sent to the device's own solicited-node multicast address to determine whether anyone else has this same address.

As Figure 27-11 shows, the solicited-node multicast address consists of two parts:

Figure 27-11 Solicited-Node Multicast Address Structure

Unicast/Anycast Address

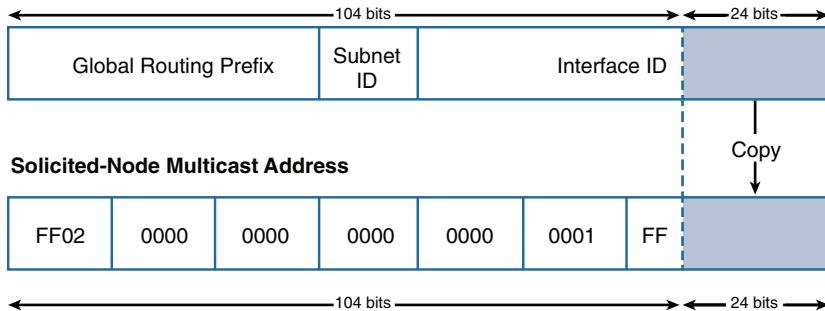


FF02:0:0:0:0:1:FF00::/104

- **FF02:0:0:0:0:1:FF00::/104 multicast prefix:** This is the first 104 bits of the all solicited-node multicast address.
- **Least significant 24 bits:** These bits are copied from the far-right 24 bits of the global unicast or link-local unicast address of the device.

Anycast

The last major classification of IPv6 address types in Figure 27-2 is the anycast address. An anycast address can be assigned to more than one device or interface. A packet sent to an anycast address is routed to the “nearest” device that is configured with the anycast address, as Figure 27-12 shows.

Figure 27-12 Example of Anycast Addressing

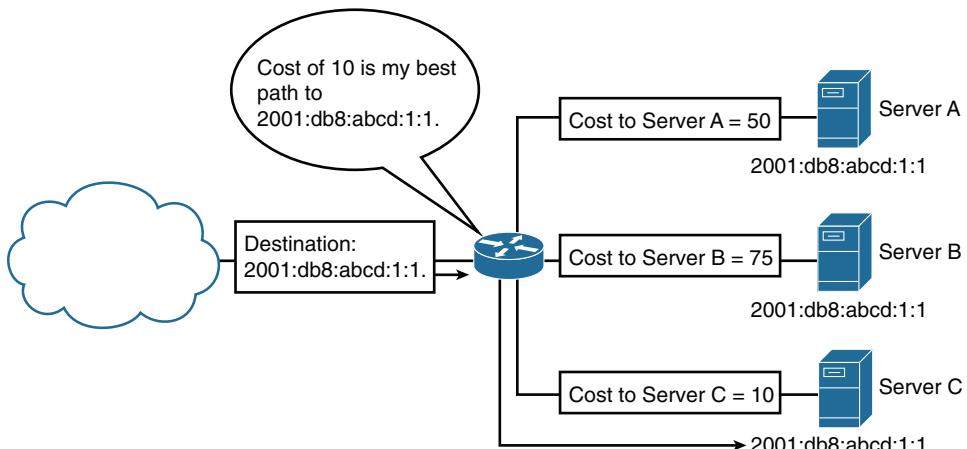

Representing the IPv6 Address

An IPv6 address can look rather intimidating to someone who is used to IPv4 addressing. However, an IPv6 address can be easier to read and is much simpler to subnet than IPv4.

Conventions for Writing IPv6 Addresses

IPv6 conventions use 32 hexadecimal numbers, organized into eight hexets of four hex digits separated by colons, to represent a 128-bit IPv6 address. For example:

2340:1111:AAAA:0001:1234:5678:9ABC

To make things a little easier, two rules allow you to shorten what must be configured for an IPv6 address:

- **Rule 1:** Omit the leading 0s in any given hexet.
- **Rule 2:** Omit the all-0s hexets. Represent one or more consecutive hexets of all hex 0s with a double colon (::), but only for one such occurrence in a given address.

For example, in the following address, the highlighted hex digits represent the portion of the address that can be abbreviated:

FE00:0000:0000:0001:0000:0000:0000:0056

This address has two locations in which one or more hexets have four hex 0s, so two main options work for abbreviating this address with the :: abbreviation in one of the locations. The following two options show the two briefest valid abbreviations:

- FE00::1:0:0:0:56
- FE00:0:0:1::56

In the first example, the second and third hexets preceding 0001 were replaced with ::. In the second example, the fifth, sixth, and seventh hexets were replaced with ::. In particular, note that the :: abbreviation, meaning “one or more hexets of all 0s,” cannot be used twice because that would be ambiguous. Therefore, the abbreviation FE00::1::56 would not be valid.

Conventions for Writing IPv6 Prefixes

An IPv6 prefix represents a range or block of consecutive IPv6 addresses. The number that represents the range of addresses, called a *prefix*, is usually seen in IP routing tables, just as you see IP subnet numbers in IPv4 routing tables.

As with IPv4, when writing or typing a prefix in IPv6, the bits past the end of the prefix length are all binary 0s. The following IPv6 address is an example of an address assigned to a host:

2000:1234:5678:9ABC:1234:5678:9ABC:1111/64

The prefix in which this address resides is as follows:

2000:1234:5678:9ABC:**0000:0000:0000:0000**/64

When abbreviated, this is:

2000:1234:5678:9ABC::/64

If the prefix length does not fall on a hextet boundary (that is, is not a multiple of 16), the prefix value should list all the values in the last hextet. For example, assume that the prefix length in the previous example is /56. By convention, the rest of the fourth hextet is written, after being set to binary 0s, as follows:

2000:1234:5678:9A00::/56

The following list summarizes some key points about how to write IPv6 prefixes:

- The prefix has the same value as the IP addresses in the group for the first number of bits, as defined by the prefix length.
- Any bits after the prefix length number of bits are binary 0s.
- The prefix can be abbreviated with the same rules as for IPv6 addresses.
- If the prefix length is not on a hextet boundary, write down the value for the entire hextet.

Table 27-4 shows several sample prefixes, their formats, and a brief explanation.


Table 27-4 Example IPv6 Prefixes and Their Meanings

Prefix	Explanation	Incorrect Alternative
2000::/3	All addresses whose first 3 bits are equal to the first 3 bits of hex number 2000 (bits are 001)	2000/3 (omits ::) 2::/3 (omits the rest of the first hextet)
2340:1140:/26	All addresses whose first 26 bits match the listed hex number	2340:114:/26 (omits the last digit in the second hextet)
2340:1111:/32	All addresses whose first 32 bits match the listed hex number	2340:1111/32 (omits ::)

IPv6 Subnetting

In many ways, subnetting IPv6 addresses is much simpler than subnetting IPv4 addresses. A typical site is assigned an IPv6 address space with a /48 prefix length. Because the least significant bits are used for the interface ID, that leaves 16 bits for the subnet ID and a /64 subnet prefix length, as Figure 27-13 shows.

Figure 27-13 /64 Subnet Prefix

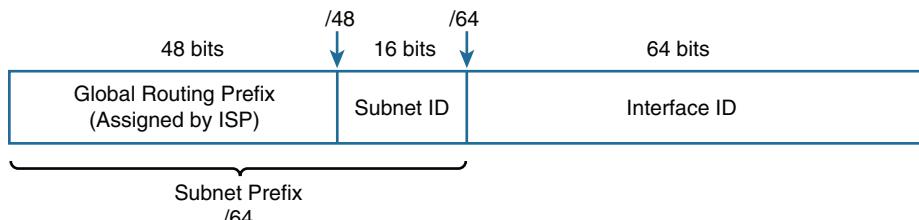

For our subnetting examples, we use 2001:0DB8:000A::/48, or simply 2001:DB8:A::/48, which includes subnets 2001:DB8:A::/64 through 2001:DB8:A:FFFF::/64. That's 2^{16} , or 65,536 subnets, each with 2^{64} , or 18 quintillion, interface addresses.

Subnetting the Subnet ID

To subnet in a small to medium-size business, simply increment the least significant bits of the subnet ID (as in Example 27-1) and assign /64 subnets to your networks.

Example 27-1 Subnetting the Subnet ID

```
2001:DB8:A:0001::/64
2001:DB8:A:0002::/64
2001:DB8:A:0003::/64
2001:DB8:A:0004::/64
2001:DB8:A:0005::/64
```

Of course, if you are administering a larger implementation, you can use the four hexadecimal digits of the subnet ID to design a quick and simple four-level hierarchy. Most large enterprise networks have plenty of room to design a logical address scheme that aggregates addresses for an optimal routing configuration. In addition, applying for and receiving another /48 address is not difficult.

Subnetting into the Interface ID

If you extend your subnetting into the interface ID portion of the address, it is a best practice to subnet on the nibble boundary. A nibble is 4 bits, or one hexadecimal digit. For example, let's borrow the first 4 bits from the interface ID portion of the network address 2001:DB8:A:1::/64. That means the network 2001:DB8:A:1::/64 would now have 2^4 , or 16, subnets from 2001:DB8:A:1:0000::/68 to 2001:DB8:A:1:F000::/68. Listing the subnets is easy, as Example 27-2 shows.

Example 27-2 Subnetting into the Interface ID

```
2001:DB8:A:1:0000::/68
2001:DB8:A:1:1000::/68
2001:DB8:A:1:2000::/68
2001:DB8:A:1:3000::/68
      thru
2001:DB8:A:1:F000::/68
```

EUI-64 Concept

Day 18 reviews static IPv6 addressing, including how to configure a router to use EUI-64 addressing (EUI stands for Extended Unique Identifier). Today we are reviewing the concept behind the EUI-64 configuration.


Recall from Figure 27-13 that the second half of the IPv6 address is called the *interface ID*. The value of the interface ID portion of a global unicast address can be set to any value, as long as no other host in the same subnet attempts to use the same value. However, the size of the interface ID was chosen to allow easy autoconfiguration of IP addresses by plugging the MAC address of a network card into the interface ID field in an IPv6 address.

MAC addresses are 6 bytes (48 bits) in length. To complete the 64-bit interface ID, IPv6 fills in 2 more bytes by separating the MAC address into two 3-byte halves. It then inserts hex FFFE between the halves and sets the seventh bit in the first byte to binary 1 to form the interface ID field. Figure 27-14 shows this format, called the EUI-64 format.

For example, the following two lines list a host's MAC address and corresponding EUI-64 format interface ID, assuming the use of an address configuration option that uses the EUI-64 format:

- **MAC address:** 0034:5678:9ABC
- **EUI-64 interface ID:** 0234:56FF:FE78:9ABC

Figure 27-14 IPv6 Address Format with Interface ID and EUI-64

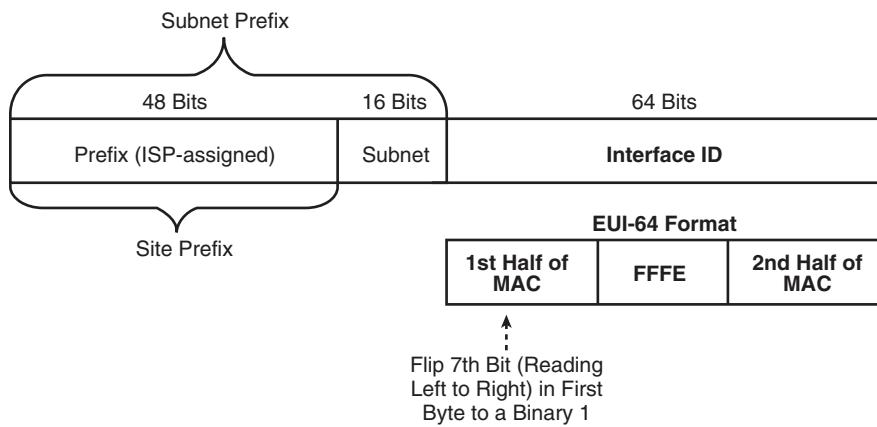


NOTE: To change the seventh bit (reading left to right) in the example, convert hex 00 to binary 00000000, change the seventh bit to 1 (00000010), and then convert back to hex, for hex 02 as the first two digits.

Stateless Address Autoconfiguration

IPv6 supports two methods of dynamic configuration of IPv6 addresses:

- **Stateless address autoconfiguration (SLAAC):** A host dynamically learns the /64 prefix through the IPv6 Neighbor Discovery Protocol (NDP) and then calculates the rest of its address by using the EUI-64 method.
- **DCHPv6:** This works the same conceptually as DHCP in IPv4. We review DCHPv6 on Day 23, “DHCP and DNS.”

By using the EUI-64 process and Neighbor Discovery Protocol (NDP), SLAAC allows a device to determine its entire global unicast address without any manual configuration and without a DCHPv6 server. Figure 27-15 illustrates the SLAAC process between a host and a router configured with the **ipv6 unicast-routing** command, which means it will send and receive NDP messages.

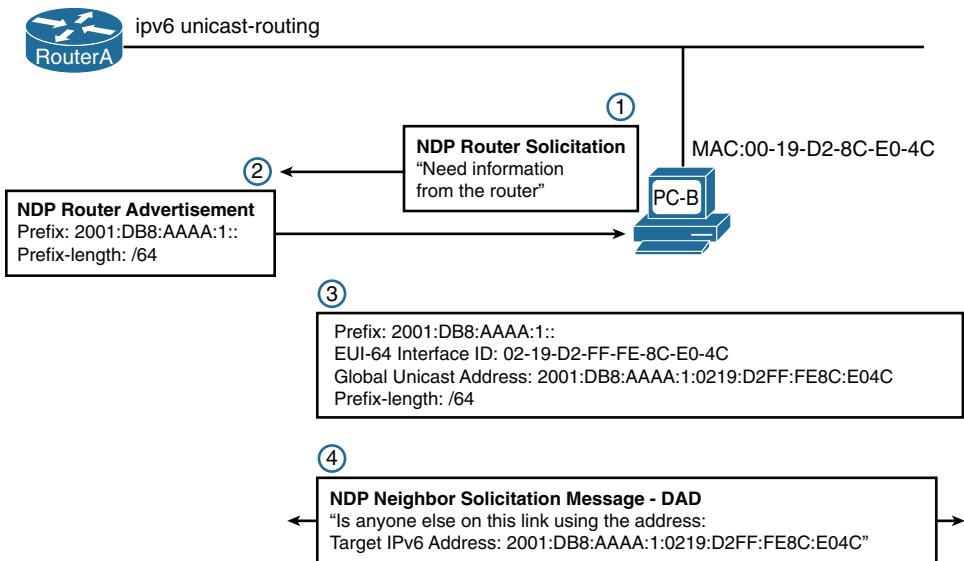Figure 27-15 Neighbor Discovery and the SLAAC Process


Migration to IPv6

Two major transition strategies are currently used to migrate to IPv6:

- **Dual-stacking:** In this integration method, a node has implementation and connectivity to both an IPv4 network and an IPv6 network. This is the recommended option and involves running IPv4 and IPv6 at the same time.
- **Tunneling:** Tunneling is a method for transporting IPv6 packets over IPv4-only networks by encapsulating the IPv6 packet inside IPv4. Several tunneling techniques are available.

Because of the simplicity of running dual-stacking, it will most likely be the preferred strategy as IPv4-only networks begin to disappear. But it will probably still be decades before we see enterprise networks running exclusively IPv6. Figure 27-16 illustrates one way Wendell Odom thinks about the transition to IPv6: “But who knows how long it will take?”

Remember this advice: “Dual-stack where you can; tunnel where you must.” These two methods are the most common techniques to transition from IPv4 to IPv6. Dual-stacking is easy enough: Just configure all your devices to use both IPv4 and IPv6 addressing. Tunneling is more complex and beyond the scope of the CCNA exam topics.

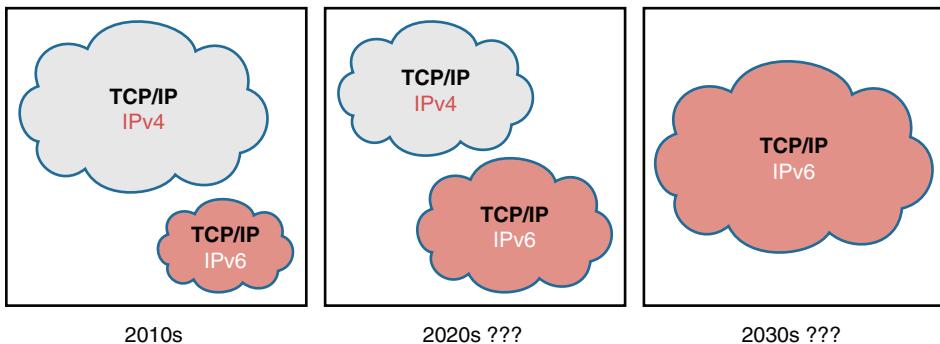Figure 27-16 Transition to IPv6 Using Dual-Stacking

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 1	4 6 7
CCNA 200-301 Official Cert Guide, Volume 1	5 8
Portable Command Guide	5

This page intentionally left blank

VLAN and Trunking Concepts and Configurations

CCNA 200-301 Exam Topics

- Configure and verify VLANs (normal range) spanning multiple switches
- Configure and verify interswitch connectivity

Key Points

Most large networks today implement virtual local-area networks (VLANs). Without VLANs, a switch considers every port to be in the same broadcast domain. With VLANs, switch ports can be grouped into different VLANs, essentially segmenting the broadcast domain. Today we review VLAN concepts, consider traffic types, discuss VLAN types, and review the concept of trunking, including Dynamic Trunking Protocol (DTP). Then we review the commands to configure and verify VLANs, trunking, and inter-VLAN routing.

VLAN Concepts

Although a switch comes out of the box with only one VLAN, normally a switch is configured to have two or more VLANs. With such a switch, you can create multiple broadcast domains by putting some interfaces into one VLAN and other interfaces into other VLANs.

Consider these reasons for using VLANs:

- Grouping users by department instead of by physical location
- Segmenting devices into smaller LANs to reduce processing overhead for all devices on the LAN
- Reducing the workload of STP by limiting a VLAN to a single access switch
- Enforcing better security by isolating sensitive data to separate VLANs
- Separating IP voice traffic from data traffic
- Assisting troubleshooting by reducing the size of the failure domain (that is, the number of devices that can cause a failure or that can be affected by one)

Benefits of using VLANs include the following:

- Security:** Sensitive data can be isolated to one VLAN, separated from the rest of the network.
- Cost reduction:** Reduced need for expensive network upgrades and more efficient use of existing bandwidth and uplinks lead to cost savings.
- Higher performance:** Dividing flat Layer 2 networks into multiple logical broadcast domains reduces unnecessary traffic on the network and boosts performance.

- **Broadcast storm mitigation:** VLAN segmentation prevents broadcast storms from propagating throughout the entire network.
- **Ease of management and troubleshooting:** A hierarchical addressing scheme groups network addresses contiguously. Because a hierarchical IP addressing scheme makes problematic components easier to locate, network management and troubleshooting are more efficient.

Traffic Types

The key to successful VLAN deployment is understanding the traffic patterns and the various traffic types in the organization. Table 26-1 lists the common types of network traffic to evaluate before placing devices and configuring VLANs.

Table 26-1 Traffic Types

Traffic Type	Description
Network management	Many types of network management traffic can be present on the network. To make network troubleshooting easier, some designers assign a separate VLAN to carry certain types of network management traffic.
IP telephony	Two types of IP telephony traffic exist: signaling information between end devices and the data packets of the voice conversation. Designers often configure the data to and from the IP phones on a separate VLAN designated for voice traffic so that they can apply quality-of-service measures to give high priority to voice traffic.
IP multicast	Multicast traffic can produce a large amount of data streaming across the network. Switches must be configured to keep this traffic from flooding to devices that have not requested it, and routers must be configured to ensure that multicast traffic is forwarded to the network areas where it is requested.
Normal data	Normal data traffic is typical application traffic that is related to file and print services, email, Internet browsing, database access, and other shared network applications.
Scavenger class	Scavenger class includes all traffic with protocols or patterns that exceed their normal data flows. Applications assigned to this class have little or no contribution to the organizational objectives of the enterprise and are typically entertainment oriented.

Types of VLANs

Some VLAN types are defined by the type of traffic they support; others are defined by the specific functions they perform. The principal VLAN types and their descriptions follow:

- **Data VLAN:** Configured to carry only user-generated traffic, ensuring that voice and management traffic is separated from data traffic.
- **Default VLAN:** All the ports on a switch are members of the default VLAN when the switch is reset to factory defaults. The default VLAN for Cisco switches is VLAN 1. VLAN 1 has all the features of any VLAN, except that you cannot rename it, and you cannot delete it. It is a security best practice to restrict VLAN 1 to serve as a conduit only for Layer 2 control traffic (for example, CDP) and support no other traffic.
- **Black hole VLAN:** A security best practice is to define a black hole VLAN to be a dummy VLAN distinct from all other VLANs defined in the switched LAN. All unused switch ports

are assigned to the black hole VLAN so that any unauthorized device connecting to an unused switch port is prevented from communicating beyond the switch to which it is connected.


- **Native VLAN:** This VLAN type serves as a common identifier on opposing ends of a trunk link. A security best practice is to define a native VLAN to be a dummy VLAN distinct from all other VLANs defined in the switched LAN. The native VLAN is not used for any traffic in the switched network unless legacy bridging devices happen to be present in the network or a multiaccess interconnection exists between switches joined by a hub.
- **Management VLAN:** The network administrator defines this VLAN as a means to access the management capabilities of a switch. By default, VLAN 1 is the management VLAN. It is a security best practice to define the management VLAN to be a VLAN distinct from all other VLANs defined in the switched LAN. You do this by configuring and activating a new VLAN interface.
- **Voice VLANs:** A voice VLAN enables switch ports to carry IP voice traffic from an IP phone. The network administrator configures a voice VLAN and assigns it to access ports. Then when an IP phone is connected to the switch port, the switch sends CDP messages that instruct the attached IP phone to send voice traffic tagged with the voice VLAN ID.

Voice VLAN Example

Figure 26-1 shows an example of using one port on a switch to connect a user's IP phone and PC. The switch port is configured to carry data traffic on VLAN 20 and voice traffic on VLAN 150. The Cisco IP Phone contains an integrated three-port 10/100 switch to provide the following dedicated connections:

- Port 1 connects to the switch or other VoIP device.
- Port 2 is an internal 10/100 interface that carries the IP Phone traffic.
- Port 3 (access port) connects to a PC or other device.

Figure 26-1 Cisco IP Phone Switching Voice and Data Traffic

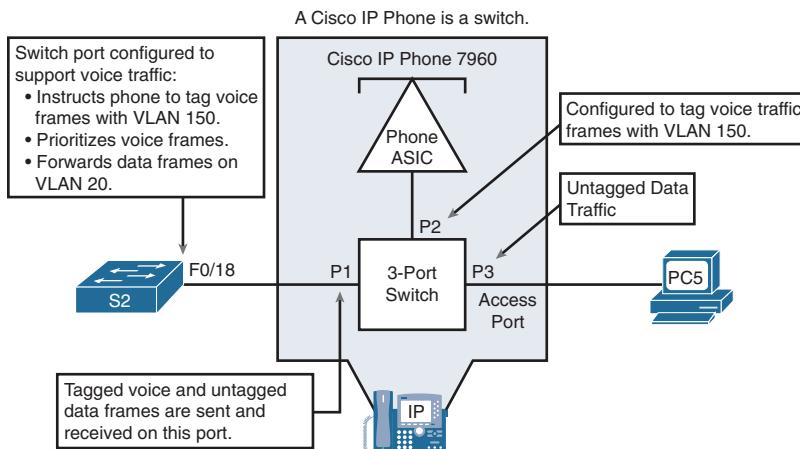


The traffic from PC5 attached to the IP Phone passes through the IP Phone untagged. The link between S2 and the IP Phone acts as a modified trunk to carry both the tagged voice traffic and the untagged data traffic.

Trunking VLANs


A VLAN trunk is an Ethernet point-to-point link between an Ethernet switch interface and an Ethernet interface on another networking device, such as a router or a switch, carrying the traffic of multiple VLANs over the singular link. A VLAN trunk enables you to extend the VLANs across an entire network. A VLAN trunk does not belong to a specific VLAN; instead, it serves as a conduit for VLANs between switches. Figure 26-2 shows a small switched network with a trunk link between S1 and S2 carrying multiple VLAN traffic.

Figure 26-2 Example of a VLAN Trunk

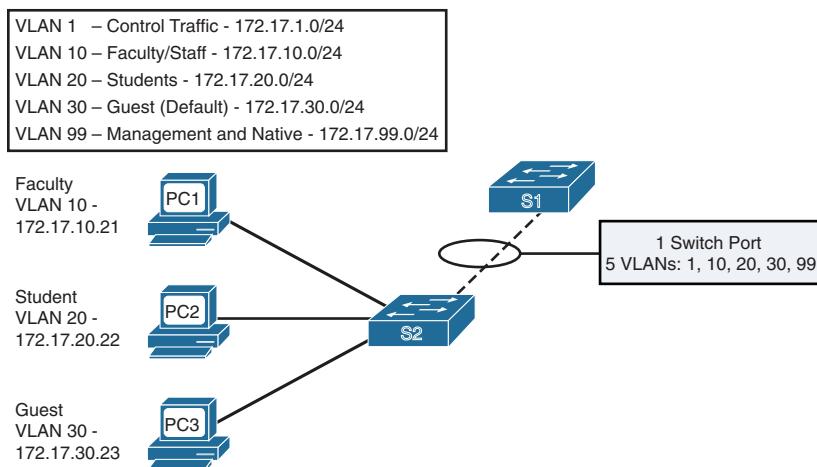

When a frame is placed on a trunk link, information about the VLAN it belongs to must be added to the frame. This is accomplished by using IEEE 802.1Q frame tagging. When a switch receives a frame on a port configured in access mode and destined for a remote device through a trunk link, the switch takes apart the frame and inserts a VLAN tag, recalculates the frame check sequence (FCS), and sends the tagged frame out the trunk port. Figure 26-3 shows the 802.1Q tag inserted in an Ethernet frame.

Figure 26-3 Fields of the 802.1Q Tag Inside an Ethernet Frame

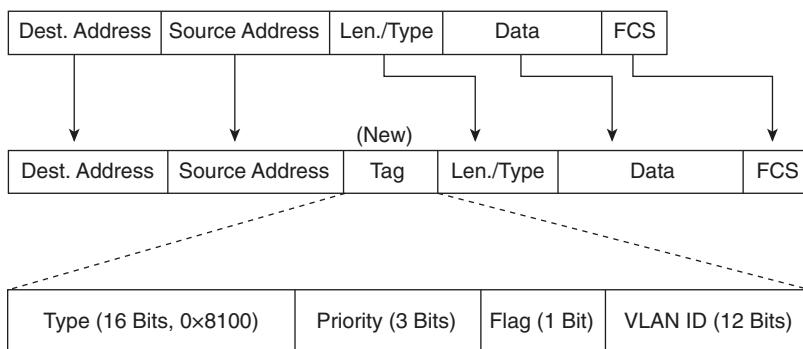

The VLAN tag field consists of a 16-bit Type field called the EtherType field and a Tag control information field. The EtherType field is set to the hexadecimal value 0x8100. This value is called the tag protocol ID (TPID) value. With the EtherType field set to the TPID value, the switch receiving the frame knows to look for information in the Tag control information field. The Tag control information field contains the following:

- **3 bits of user priority:** Provides expedited transmission of Layer 2 frames, such as voice traffic
- **1 bit of Canonical Format Identifier (CFI):** Enables Token Ring frames to be easily carried across Ethernet links
- **12 bits of VLAN ID (VID):** Provides VLAN identification numbers

NOTE: Although 802.1Q is the recommended method for tagging frames, you should be aware of the Cisco proprietary legacy trunking protocol called Inter-Switch Link (ISL).

Dynamic Trunking Protocol

Dynamic Trunking Protocol (DTP) is a Cisco-proprietary protocol that negotiates both the status of trunk ports and the trunk encapsulation of trunk ports. DTP manages trunk negotiation only if the port on the other switch is configured in a trunk mode that supports DTP. A switch port on a Cisco Catalyst switch supports a number of trunking modes. The trunking mode defines how the port negotiates using DTP to set up a trunk link with its peer port. The following is a brief description of each trunking mode:

- If the switch is configured with the **switchport mode trunk** command, the switch port periodically sends DTP messages to the remote port, advertising that it is in an unconditional trunking state.
- If the switch is configured with the **switchport mode trunk dynamic auto** command, the local switch port advertises to the remote switch port that it is able to trunk but does not request to go to the trunking state. After a DTP negotiation, the local port ends up in the trunking state only if the remote port trunk mode has been configured so that the status is **on** or **desirable**. If both ports on the switches are set to **auto**, they do not negotiate to be in a trunking state. They negotiate to be in the access mode state.
- If the switch is configured with the **switchport mode dynamic desirable** command, the local switch port advertises to the remote switch port that it is able to trunk and asks the remote switch port to go to the trunking state. If the local port detects that the remote port has been configured as **on**, **desirable**, or **auto** mode, the local port ends up in the trunking state. If the remote switch port is in the **nonegotiate** mode, the local switch port remains as a nontrunking port.
- If the switch is configured with the **switchport nonegotiate** command, the local port is considered to be in an unconditional trunking state. Use this feature when you need to configure a trunk with a switch from another switch vendor.

Table 26-2 summarizes the results of DTP negotiations based on the different DTP configuration commands on local and remote ports.


Table 26-2 Trunk Negotiation Results Between a Local Port and a Remote Port

	Dynamic Auto	Dynamic Desirable	Trunk	Access
Dynamic Auto	Access	Trunk	Trunk	Access
Dynamic Desirable	Trunk	Trunk	Trunk	Access
Trunk	Trunk	Trunk	Trunk	Not recommended
Access	Access	Access	Not recommended	Access

VLAN Configuration and Verification

Refer to the topology in Figure 26-4 as you review the commands in this section for configuring, verifying, and troubleshooting VLAN and trunking. The packet tracer activity later in the day uses this same topology.

Figure 26-4 Day 26 Sample Topology

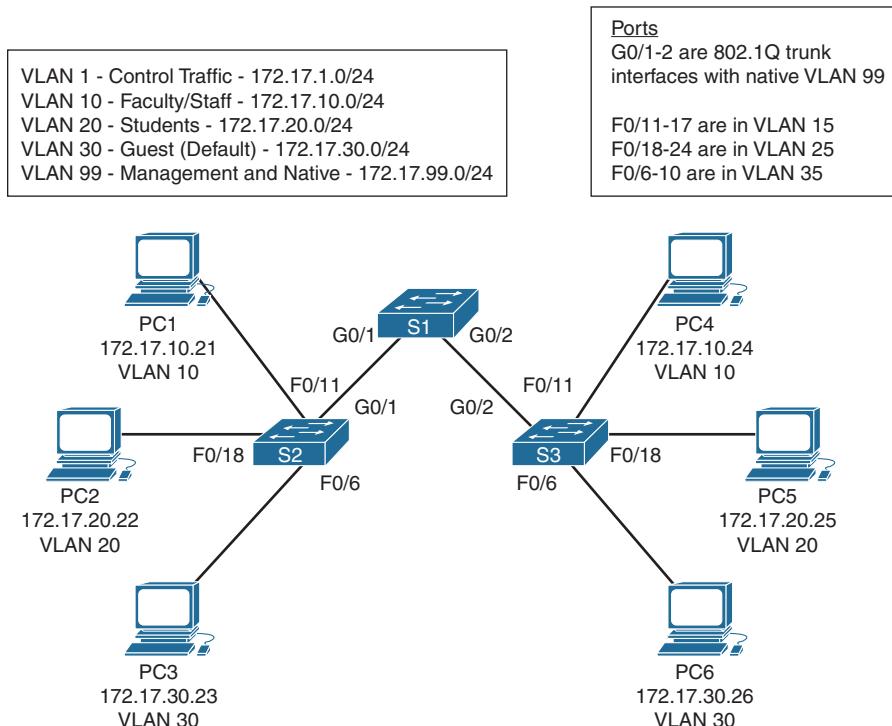

The default configuration of a Cisco switch is to put all interfaces in VLAN 1. You can verify this with the **show vlan brief** command, as demonstrated for S2 in Example 26-1.

Example 26-1 Default VLAN Configuration

```
S2# show vlan brief

VLAN Name Status Ports
-----
1    default      active   Fa0/1, Fa0/2, Fa0/3, Fa0/4
                           Fa0/5, Fa0/6, Fa0/7, Fa0/8
                           Fa0/9, Fa0/10, Fa0/11, Fa0/12
                           Fa0/13, Fa0/14, Fa0/15, Fa0/16
                           Fa0/17, Fa0/18, Fa0/19, Fa0/20
                           Fa0/21, Fa0/22, Fa0/23, Fa0/24
                           Gig0/1, Gig0/2
1002 fddi-default  active
1003 token-ring-default active
1004 fddinet-default  active
1005 trnet-default   active
S2#
```

A VLAN is created in one of two ways: either in global configuration mode or directly under the interface. The advantage to configuring in global configuration mode is that you can then assign a name with the **name *vlan-name*** command. The advantage to configuring the VLAN in interface configuration mode is that you assign the VLAN to the interface and create the VLAN with just one command. However, to name the VLAN, you still have to go back to the global configuration method. Example 26-2 shows the creation of VLANs 10 and 20 using these two methods. VLAN 20 is then named, and the remaining VLANs are created in global configuration mode.

Example 26-2 Creating VLANs

```
S2# config t
Enter configuration commands, one per line. End with CNTL/Z.
S2(config)# vlan 10
S2(config-vlan)# name Faculty/Staff
S2(config-vlan)# interface fa0/18
S2(config-if)# switchport access vlan 20
% Access VLAN does not exist. Creating vlan 20
S2(config-if)# vlan 20
S2(config-vlan)# name Students
S2(config-vlan)# vlan 30
S2(config-vlan)# name Guest(Default)
S2(config-vlan)# vlan 99
S2(config-vlan)# name Management&Native
S2(config-vlan)# end
%SYS-5-CONFIG_I: Configured from console by console
S2#
```

Notice in Example 26-3 that all the VLANs are created, but only VLAN 20 is assigned to an interface.

Example 26-3 Verifying VLAN Creation

```
S2# show vlan brief

VLAN Name          Status      Ports
----- -----
1 default          active     Fa0/1, Fa0/2, Fa0/3, Fa0/4
                           Fa0/5, Fa0/6, Fa0/7, Fa0/8
                           Fa0/9, Fa0/10, Fa0/11, Fa0/12
                           Fa0/13, Fa0/14, Fa0/15, Fa0/16
                           Fa0/17, Fa0/19, Fa0/20, Fa0/21
                           Fa0/22, Fa0/23, Fa0/24, Gig1/1
                           Gig1/2
10 Faculty/Staff    active
20 Students         active     Fa0/18
30 Guest(Default)  active
99 Management&Native active
1002 fddi-default  active
1003 token-ring-default active
1004 fddinet-default active
1005 trnet-default  active
S2#
```

To assign the remaining interfaces to the VLANs specified in Figure 26-4, either you can configure one interface at a time or you can use the **range** command to configure all the interfaces that belong to a VLAN with one command, as shown in Example 26-4.

Example 26-4 Assigning VLANs to Interfaces

```
S2# config t
Enter configuration commands, one per line. End with CNTL/Z.
S2(config)# interface range fa 0/11 - 17
S2(config-if-range)# switchport access vlan 10
S2(config-if-range)# interface range fa 0/18 - 24
S2(config-if-range)# switchport access vlan 20
S2(config-if-range)# interface range fa 0/6 - 10
S2(config-if-range)# switchport access vlan 30
S2(config-if-range)# end
%SYS-5-CONFIG_I: Configured from console by console
S2#
```

The **show vlan brief** command in Example 26-5 verifies that all interfaces specified in Figure 26-4 have been assigned to the appropriate VLAN. Notice that unassigned interfaces still belong to the default VLAN 1.

Example 26-5 Verifying VLAN Assignments to Interfaces

```
S2# show vlan brief

VLAN Name Status Ports
-----
1 default active Fa0/1, Fa0/2, Fa0/3, Fa0/4
Fa0/5, Gig0/1, Gig0/2
10 Faculty/Staff active Fa0/11, Fa0/12, Fa0/13, Fa0/14
Fa0/15, Fa0/16, Fa0/17
20 Students active Fa0/18, Fa0/19, Fa0/20, Fa0/21
Fa0/22, Fa0/23, Fa0/24
30 Guest(Default) active Fa0/6, Fa0/7, Fa0/8, Fa0/9
Fa0/10
99 Management&Native active
1002 fddi-default active
1003 token-ring-default active
1004 fddinet-default active
1005 trnet-default active
S2#
```

You can also verify a specific interface's VLAN assignment with the **show interfaces type number switchport** command, as shown for FastEthernet 0/11 in Example 26-6.

Example 26-6 Verifying an Interface's VLAN Assignment

```
S2# show interfaces fastethernet 0/11 switchport
Name: Fa0/11
Switchport: Enabled
Administrative Mode: dynamic auto
Operational Mode: static access
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: native
Negotiation of Trunking: On
Access Mode VLAN: 10 (Faculty/Staff)
Trunking Native Mode VLAN: 1 (default)
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
```

```

Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk private VLANs: none
Operational private-vlan: none
Trunking VLANs Enabled: ALL
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL
Protected: false
Appliance trust: none
S2#

```

For the sample topology shown in Figure 26-4, you would configure the VLANs on S1 and S3 as well, but only S3 needs VLANs assigned to interfaces.

Trunking Configuration and Verification

Following security best practices, we are configuring a different VLAN for the management and default VLAN. In a production network, you would want to use a different one for each: one for the management VLAN and one for the native VLAN. For expediency here, we are using VLAN 99 for both.

We first define a new management interface for VLAN 99, as in Example 26-7.

Example 26-7 Defining a New Management Interface

```

S1# config t
Enter configuration commands, one per line. End with CNTL/Z.
S1(config)# interface vlan 99
%LINK-5-CHANGED: Interface Vlan99, changed state to up
S1(config-if)# ip address 172.17.99.31 255.255.255.0
S1(config-if)# end
%SYS-5-CONFIG_I: Configured from console by console
S1#

```

Then we repeat the configuration on S2 and S3. The IP address is used to test connectivity to the switch, as is the IP address the network administrator uses for remote access (Telnet, SSH, SDM, HTTP, and so on).

Depending on the switch model and Cisco IOS version, DTP might have already established trunking between two switches that are directly connected. For example, the default trunk configuration for 2950 switches is **dynamic desirable**. Therefore, a 2950 initiates trunk negotiations. For our purposes, assume that the switches are all 2960s. The 2960 default trunk configuration is **dynamic auto**, and in this configuration, the interface does not initiate trunk negotiations.

In Example 26-8, the first five interfaces on S1 are configured for trunking. Also notice that the native VLAN is changed to VLAN 99.

Example 26-8 Trunk Configuration and Native VLAN Assignment

```
S1# config t
Enter configuration commands, one per line. End with CNTL/Z.
S1(config)# interface range g0/1 - 2
S1(config-if-range)# switchport mode trunk
S1(config-if-range)# switchport trunk native vlan 99
S1(config-if-range)# end
%SYS-5-CONFIG_I: Configured from console by console
S1#
%CDP-4-NATIVE_VLAN_MISMATCH: Native VLAN mismatch discovered on FastEthernet0/1
(99), with S2 FastEthernet0/1 (1).
%CDP-4-NATIVE_VLAN_MISMATCH: Native VLAN mismatch discovered on FastEthernet0/3
(99), with S3 FastEthernet0/3 (1).
```

If you wait for the next round of CDP messages, you should get the error message shown in Example 26-8. Although the trunk is working between S1 and S2 and between S1 and S3, the switches do not agree on the native VLAN. Repeat the trunking commands on S2 and S3 to correct the native VLAN mismatch.

NOTE: The encapsulation type—dot1q or isl—might need to be configured, depending on the switch model. The syntax for configuring the encapsulation type is as follows:

Switch(config-if)# switchport trunk encapsulation { dot1q | isl | negotiate }

The 2960 Series supports only 802.1Q, so this command is not available.

To verify that trunking is operational, use the commands in Example 26-9.

Example 26-9 Verifying Trunk Configuration

```
S1# show interfaces trunk
Port      Mode      Encapsulation  Status      Native vlan
Gig0/1    on        802.1q         trunking   99
Gig0/2    on        802.1q         trunking   99

Port      Vlans allowed on trunk
Gig0/1    1-1005
Gig0/2    1-1005
Port      Vlans allowed and active in management domain
Gig0/1    1,10,20,30,99
Gig0/2    1,10,20,30,99
```


```
Port      Vlans in spanning tree forwarding state and not pruned
Gig0/1   1,10,20,30,99
Gig0/2   1,10,20,30,99

S1# show interface g0/1 switchport
Name: Gig0/1
Switchport: Enabled
Administrative Mode: trunk
Operational Mode: trunk
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: dot1q
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 99 (Management&Native)
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk private VLANs: none
Operational private-vlan: none
Trunking VLANs Enabled: ALL
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL
Protected: false
Appliance trust: none
S1#
```

Remember that hosts on the same VLAN must be configured with an IP address and subnet mask on the same subnet. The ultimate test of your configuration, then, is to verify that end devices on the same VLAN can now ping each other. If they can't, use the verification commands to systematically track down the problem with your configuration.

VLAN Troubleshooting

If connectivity issues arise between VLANs and you have already resolved potential IP addressing issues, you can use the flowchart in Figure 26-5 to methodically track down any issues related to VLAN configuration errors.

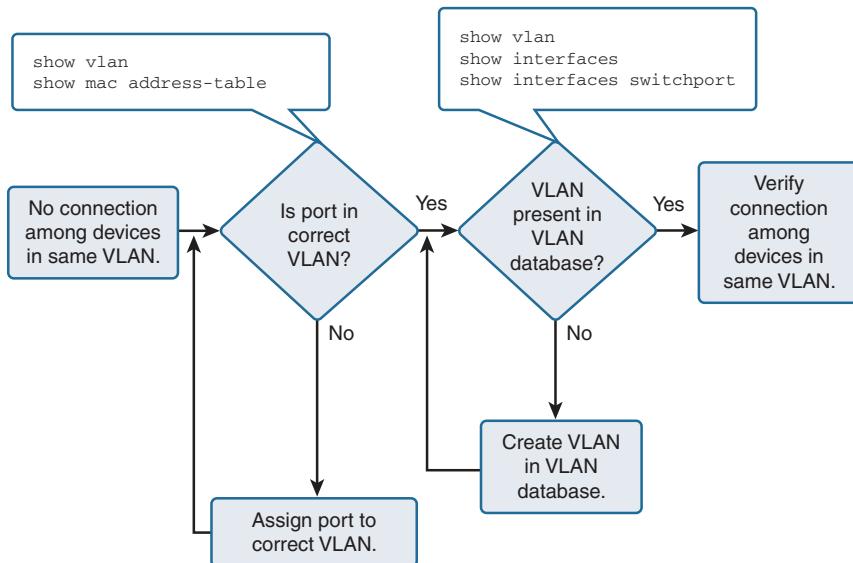Figure 26-5 VLAN Troubleshooting Flowchart

The flowchart in Figure 26-5 works in this way:

- Step 1.** Use the **show vlan** command to check whether the port belongs to the expected VLAN. If the port is assigned to the wrong VLAN, use the **switchport access vlan** command to correct the VLAN membership. Use the **show mac address-table** command to check which addresses were learned on a particular port of the switch and see the VLAN to which that port is assigned.
- Step 2.** If the VLAN to which the port is assigned is deleted, the port becomes inactive. Use the **show vlan** or **show interfaces switchport** command to discover issues with deleted VLANs. If the port is inactive, it is not functional until the missing VLAN is created using the **vlan *vlan_id*** command.

Table 26-3 summarizes these commands, which can be particularly helpful in troubleshooting VLAN issues.

Table 26-3 VLAN Troubleshooting Commands

EXEC Command	Description
show vlan	Lists each VLAN and all interfaces assigned to that VLAN (but does not include operational trunks)
show vlan brief	
show vlan id num	Lists both access and trunk ports in the VLAN
show interfaces switchport	Identifies the interface's access VLAN and voice VLAN, the configured and operational mode (access or trunk), and the state of the port (up or down)
show interfaces type number switchport	
show mac address-table	Lists MAC table entries, including the associated VLAN
show interface status	Summarizes the status listing for all interfaces (connected, notconnect, err-disabled), the VLAN, duplex, speed, and type of port

Disabled VLANs

VLANs can be manually disabled. You can verify that VLANs are active by using the **show vlan** command. As Example 26-10 shows, VLANs can be in one of two states: either *active* or *act/lshut*. The second of these states means that the VLAN is shut down.

Example 26-10 Enabling and Disabling VLANs on a Switch

```
S1# show vlan brief
VLAN Name          Status      Ports
----- 
1 default          active      Fa0/1, Fa0/2, Fa0/3, Fa0/4
                           Fa0/5, Fa0/6, Fa0/7, Fa0/8
                           Fa0/9, Fa0/10, Fa0/11, Fa0/12
                           Fa0/14, Fa0/15, Fa0/16, Fa0/17
                           Fa0/18, Fa0/19, Fa0/20, Fa0/21
                           Fa0/22, Fa0/23, Fa0/24, Gi0/1
10 VLAN0010        act/lshut Fa0/13
20 VLAN0020        active
30 VLAN0030        act/lshut
40 VLAN0040        active
S1# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
S1(config)# no shutdown vlan 10
S1(config)# vlan 30
S1(config-vlan)# no shutdown
S1(config-vlan)#

```

The highlighted commands in Example 26-10 show the two configuration methods you can use to enable a VLAN that had been shut down.

Trunking Troubleshooting

To summarize issues with VLANs and trunking, you need to check for four potential issues, in this order:

- Step 1.** Identify all access interfaces and their assigned access VLANs and reassign them into the correct VLANs, as needed.
- Step 2.** Determine whether the VLANs exist and are active on each switch. If needed, configure and activate the VLANs to resolve problems.
- Step 3.** Check the allowed VLAN lists on the switches on both ends of the trunk and ensure that the lists of allowed VLANs are the same.
- Step 4.** Ensure that, for any links that should use trunking, one switch does not think it is trunking, while the other switch does not think it is trunking.


The previous section reviewed steps 1 and 2. Next, we review steps 3 and 4.

Check Both Ends of a Trunk

For the CCNA exam, you should be ready to notice a couple oddities that happen with some unfortunate configuration choices on trunks.

It is possible to configure a different allowed VLAN list on the opposite ends of a VLAN trunk. As Figure 26-6 shows, when the VLAN lists do not match, the trunk cannot pass traffic for that VLAN.

Figure 26-6 Mismatched VLAN-Allowed Lists on a Trunk

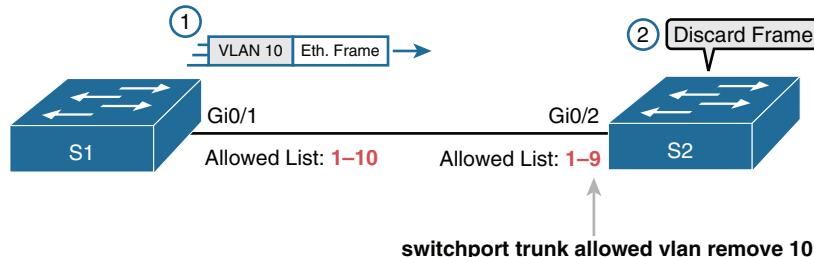

You can isolate this problem only by comparing the allowed lists on both ends of the trunk. Example 26-9 displays the output of the **show interfaces trunk** command on S2.

To compare the allowed VLANs on each switch, you need to look at the second of three lists of VLANs listed by the **show interfaces trunk** command. See the output in Example 26-11.

Example 26-11 Verifying the Allowed VLANs on S2

```
S2# show interfaces trunk
Port      Mode       Encapsulation Status      Native vlan
Gi0/2    desirable   802.1q        trunking    1

Port      Vlans allowed on trunk
Gi0/2    1-4094

Port      Vlans allowed and active in management domain
Gi0/2    1-9

Port      Vlans in spanning tree forwarding state and not pruned
Gi0/2    1-9
```

To add VLAN 10 to S2's trunk, enter the following commands:

```
S2(config)# interface g0/2
S2(config-if)# switchport trunk allowed vlan add 10
```

The keyword **add** provides the capability to add one or more VLANs to the trunk without having to specify again all the existing VLANs that are already allowed.

Check Trunking Operational States

Trunks can be misconfigured. In some cases, both switches conclude that their interfaces do not trunk. In other cases, one switch believes that its interface is correctly trunking, while the other switch does not.

The most common incorrect configuration—which results in both switches not trunking—is a configuration that uses the **switchport mode dynamic auto** command on both switches on the link. The keyword **auto** does not mean that trunking happens automatically. Instead, both switches passively wait on the other device on the link to begin negotiations.

With this particular incorrect configuration, the **show interfaces switchport** command on both switches confirms both the administrative state (auto) and the fact that both switches operate as static access ports. Example 26-12 highlights those parts of the output for S2.

Example 26-12 Verifying the Trunking State for a Specific Interface

```
SW2# show interfaces gigabit0/2 switchport
Name: Gi0/2
Switchport: Enabled
Administrative Mode: dynamic auto
Operational Mode: static access
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: native
! lines omitted for brevity
```

Always check the trunk's operational state on both sides of the trunk. The best commands for checking trunking-related facts are **show interfaces trunk** and **show interfaces switchport**.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 2	3
CCNA 200-301 Official Cert Guide, Volume 1	8
Portable Command Guide	9
	10

STP

CCNA 200-125 Exam Topics

- Configure, verify, and troubleshoot STP protocols
- Configure, verify, and troubleshoot STP-related optional features
- Describe the benefits of switch stacking and chassis aggregation

Key Topics


Today's review covers the operation and configuration of Spanning Tree Protocol (STP). The original STP IEEE 802.1D standard allowed for only one instance of STP to run for an entire switched network. Today's network administrators can implement Per-VLAN Spanning Tree (PVST) and Rapid STP (RSTP), both of which improve the original standard.

STP Concepts and Operation

A key characteristic of a well-built communications network is its resiliency. A resilient network is capable of handling a device or link failure through redundancy. A redundant topology can eliminate a single point of failure by using multiple links, multiple devices, or both. STP helps prevent loops in a redundant switched network. Figure 25-1 shows an example of a three-layer topology (core, distribution, access) with redundant links.

Without STP, redundancy in a switched network can introduce the following issues:

- **Broadcast storms:** Each switch floods broadcasts endlessly.
- **Multiple-frame transmission:** Multiple copies of unicast frames are delivered to the destination, causing unrecoverable errors.
- **MAC database instability:** Instability in the content of the MAC address table results from different ports of the switch receiving copies of the same frame.

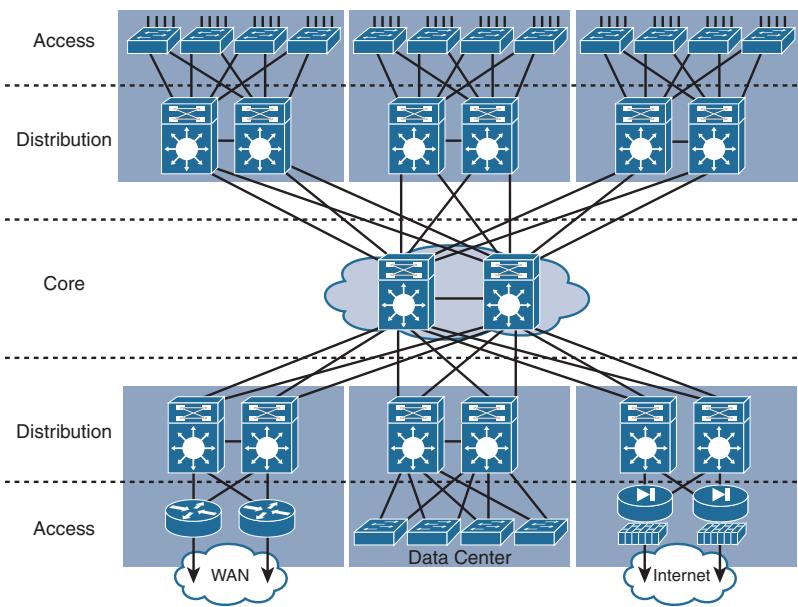Figure 25-1 Redundant Switched Topology


STP Algorithm

STP is an IEEE Committee standard defined as 802.1D. STP places certain ports in the blocking state so that they do not listen to, forward, or flood data frames. STP creates a tree that ensures that only one path exists for each network segment at any one time. If any segment experiences a disruption in connectivity, STP rebuilds a new tree by activating the previously inactive but redundant path.

The algorithm STP uses chooses the interfaces that should be placed into a forwarding state. For any interfaces not chosen to be in a forwarding state, STP places the interfaces in blocking state.

Switches exchange STP configuration messages every 2 seconds, by default, using a multicast frame called the bridge protocol data unit (BPDU). Blocked ports listen for these BPDUs to detect whether the other side of the link is down, thus requiring an STP recalculation. One piece of information included in the BPDU is the bridge ID (BID).

As Figure 25-2 shows, the BID is unique to each switch. It consists of a priority value (2 bytes) and the bridge MAC address (6 bytes).

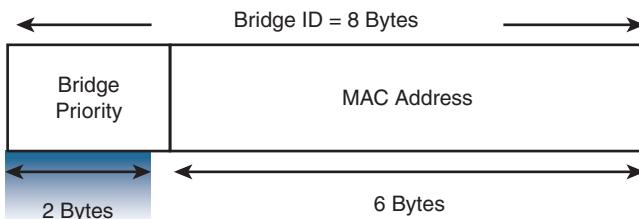Figure 25-2 Bridge ID

The default priority is 32,768. The root bridge is the bridge with the lowest BID. Therefore, if the default priority value is not changed, the switch with the lowest MAC address becomes the root.

STP Convergence

STP convergence is the process by which switches collectively realize that something has changed in the LAN topology. The switches determine whether they need to change which ports block and which ports forward. The following steps summarize the STP algorithm used to achieve convergence:

- Step 1.** Elect a root bridge (that is, the switch with the lowest BID). Only one root bridge can exist per network. All ports on the root bridge are forwarding ports.
- Step 2.** Elect a root port for each nonroot switch, based on the lowest root path cost. Each nonroot switch has one root port. The root port is the port through which the nonroot bridge has its best path to the root bridge.
- Step 3.** Elect a designated port for each segment, based on the lowest root path cost. Each link has one designated port.
- Step 4.** The root ports and designated ports transition to the forwarding state, and the other ports stay in the blocking state.

Table 25-1 summarizes the reasons STP places a port in forwarding or blocking state.

Table 25-1 STP: Reasons for Forwarding or Blocking

Characterization of Port	STP State	Description
All the root switch's ports	Forwarding	The root switch is always the designated switch on all connected segments.
Each nonroot switch's root port	Forwarding	This is the port through which the switch has the least cost to reach the root switch.
Each LAN's designated port	Forwarding	The switch forwarding the lowest-cost BPDU onto the segment is the designated switch for that segment.
All other working ports	Blocking	The port is not used for forwarding frames, nor are any frames received on these interfaces considered for forwarding. BPDUs are still received.


Port bandwidth is used to determine the cost to reach the root bridge. Table 25-2 lists the default port costs defined by the IEEE; these had to be revised with the advent of 10-Gbps ports.

Table 25-2 Default IEEE Port Costs

Ethernet Speed	Original IEEE Cost	Revised IEEE Cost
10 Mbps	100	100
100 Mbps	10	19
1 Gbps	1	4
10 Gbps	1	2

STP uses the four states in Figure 25-3 as port transitions from blocking to forwarding.

Figure 25-3 Spanning Tree Port States

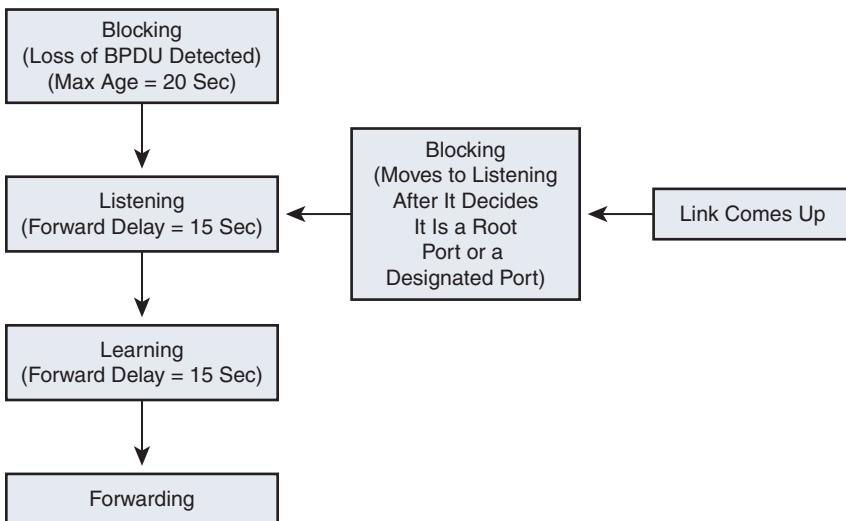

A fifth state, disabled, occurs either when a network administrator manually disables the port or when a security violation disables the port.

STP Varieties

Several varieties of STP emerged after the original IEEE 802.1D:

- **STP:** The original specification of STP, defined in 802.1D, provides a loop-free topology in a network with redundant links. STP is sometimes referred to as Common Spanning Tree (CST) because it assumes one spanning tree instance for the entire bridged network, regardless of the number of VLANs.
- **PVST+:** Per-VLAN Spanning Tree Plus (PVST+) is a Cisco enhancement of STP that provides a separate 802.1D spanning tree instance for each VLAN configured in the network.
- **RSTP:** Rapid STP (RSTP), or IEEE 802.1w, is an evolution of STP that provides faster convergence than STP. However, RSTP still provides for only a single instance of STP.
- **Rapid PVST+:** Rapid PVST+ is a Cisco enhancement of RSTP that uses PVST+. Rapid PVST+ provides a separate instance of 802.1w per VLAN.
- **MSTP and MST:** Multiple Spanning Tree Protocol (MSTP) is an IEEE standard inspired by the earlier Cisco-proprietary Multiple Instance STP (MISTP) implementation. MSTP maps multiple VLANs into the same spanning tree instance. The Cisco implementation of MSTP is Multiple Spanning Tree (MST), which provides up to 16 instances of RSTP and combines many VLANs with the same physical and logical topology into a common RSTP instance.

Part of your switch administration skill set is the ability to decide which type of STP to implement. Table 25-3 summarizes the features of the various STP flavors.


Table 25-3 Features of STP Varieties

Protocol	Standard	Resources Needed	Convergence	Tree Calculation
STP	802.1D	Low	Slow	All VLANs
PVST+	Cisco	High	Slow	Per VLAN
RSTP	802.1w	Medium	Fast	All VLANs
Rapid PVST+	Cisco	Very high	Fast	Per VLAN
MSTP	802.1s, Cisco	Medium or high	Fast	Per instance

PVST Operation

PVST Plus (PVST+) is the default setting on all Cisco Catalyst switches. In a PVST+ environment, you can tune the spanning-tree parameters so that half the VLANs forward on each uplink trunk. You do this by configuring one switch to be elected the root bridge for half of the VLANs in the network and a second switch to be elected the root bridge for the other half of the VLANs. In the example in Figure 25-4, S1 is the root bridge for VLAN 10, and S3 is the root bridge for VLAN 20.

Figure 25-4 PVST+ Topology Example

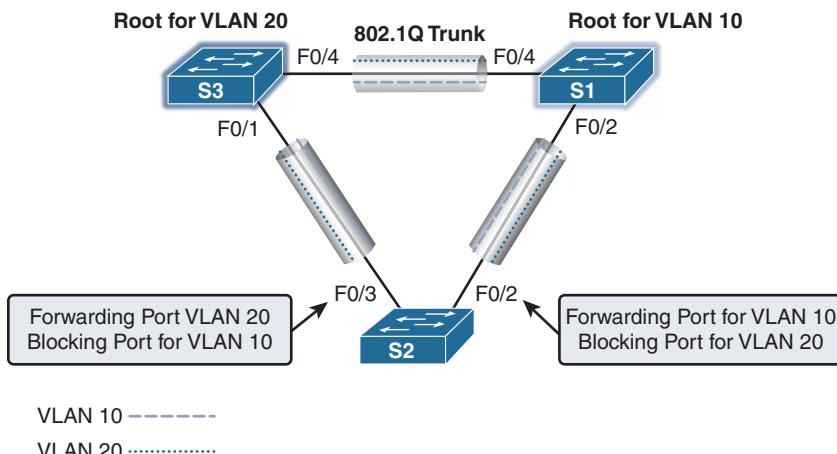

From the perspective of S2, a port is forwarding or blocking depending on the VLAN instance. After convergence, port F0/2 will be forwarding VLAN 10 frames and blocking VLAN 20 frames. Port F0/3 will be forwarding VLAN 20 frames and blocking VLAN 10 frames.

Switched networks running PVST+ have the following characteristics:

- Configured PVST per VLAN allows redundant links to be fully utilized.
 - Each additional spanning tree instance for a VLAN adds more CPU cycles to all switches in the network.

Port States

The spanning tree is determined immediately after a switch is finished booting. If a switch port transitions directly from the blocking state to the forwarding state without information about the full topology during the transition, the port can temporarily create a data loop. For this reason, STP introduces the five port states. Table 25-4 describes the port states that ensure that no loops are created during the creation of the logical spanning tree.

Table 25-4 PVST Port States


Operation Allowed	Blocking	Listening	Learning	Forwarding	Disabled
Can receive and process BPDUs	Yes	Yes	Yes	Yes	No
Can forward data frames received on the interface	No	No	No	Yes	No
Can forward data frames switched from another interface	No	No	No	Yes	No
Can learn MAC addresses	No	No	Yes	Yes	No

Extended System ID

PVST+ requires a separate instance of spanning tree for each VLAN. The BID field in the BPDU must carry VLAN ID (VID) information, as Figure 25-5 shows.

Figure 25-5 Bridge ID for PVST+ with Extended System ID

System ID = VLAN

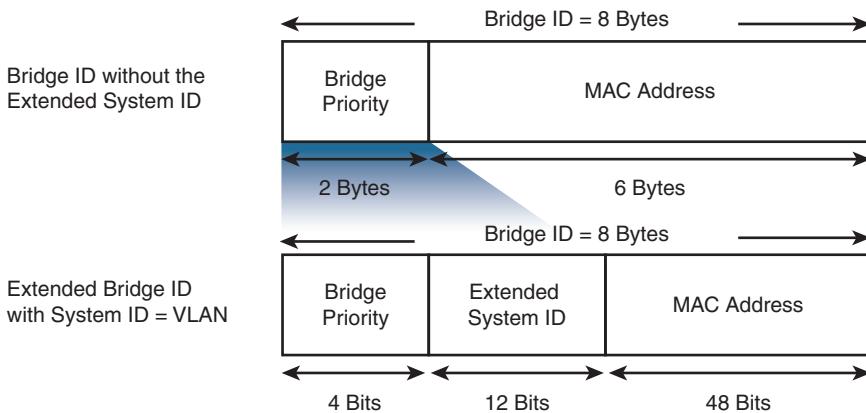

The BID includes the following fields:

- **Bridge Priority:** A 4-bit field is still used to carry bridge priority. However, the priority is conveyed in discrete values in increments of 4096 instead of discrete values in increments of 1 because only the first 4 most-significant bits are available from the 16-bit field.
- **Extended System ID:** A 12-bit field carrying the VID for PVST+.
- **MAC Address:** A 6-byte field with the MAC address of a single switch.

Rapid PVST+ Operation

In Rapid PVST+, a single instance of RSTP runs for each VLAN. This is why Rapid PVST+ has a very high demand for switch resources (CPU cycles and RAM).

NOTE: Rapid PVST+ is simply the Cisco implementation of RSTP on a per-VLAN basis. The rest of this review uses the terms *RSTP* and *Rapid PVST+* interchangeably.

With RSTP, the IEEE improved the convergence performance of STP from 50 seconds to less than 10 seconds with its definition of Rapid STP (RSTP) in the standard 802.1w. RSTP is identical to STP in the following ways:

- It elects the root switch by using the same parameters and tiebreakers.
- It elects the root port on nonroot switches by using the same rules.
- It elects designated ports on each LAN segment by using the same rules.
- It places each port in either forwarding or discarding state, although RSTP calls the blocking state the discarding state.

RSTP Interface Behavior

The main changes with RSTP can be seen when changes occur in the network. RSTP acts differently on some interfaces based on what is connected to the interface:

- **Edge-type behavior and PortFast:** RSTP improves convergence for edge-type connections by immediately placing the port in forwarding state when the link is physically active.
- **Link-type shared:** RSTP does not do anything differently from STP on link-type shared links. However, because most links between switches today are full duplex, point-to-point, and not shared, this does not matter.
- **Link-type point-to-point:** RSTP improves convergence over full-duplex links between switches. RSTP recognizes the loss of the path to the root bridge through the root port in 6 seconds (based on three times the hello timer value of 2 seconds). RSTP thus recognizes a lost path to the root much more quickly.

RSTP uses different terminology to describe port states. Table 25-5 lists the port states for RSTP and STP.

Table 25-5 RSTP and STP Port States

Operational State	STP State (802.1D)	RSTP State (802.1w)	Forwards Data Frames in This State?
Enabled	Blocking	Discarding	No
Enabled	Listening	Discarding	No
Enabled	Learning	Learning	No
Enabled	Forwarding	Forwarding	Yes
Disabled	Disabled	Discarding	No

RSTP removes the need for listening state and reduces the time required for learning state by actively discovering the network's new state. STP passively waits on new BPDUs and reacts to them during the listening and learning states. With RSTP, the switches negotiate with neighboring switches by sending RSTP messages. The messages enable the switches to quickly determine whether an interface can be immediately transitioned to a forwarding state. In many cases, the process takes only a second or two for the entire RSTP domain.


RSTP Port Roles

RSTP adds three more port roles in addition to the root port and designated port roles defined in STP. Table 25-6 lists and defines the port roles.

Table 25-6 RSTP and STP Port Roles


RSTP Role	STP Role	Definition
Root port	Root port	A single port on each nonroot switch in which the switch hears the best BPDU out of all the received BPDUs
Designated port	Designated port	Of all switch ports on all switches attached to the same segment/collision domain, the port that advertises the “best” BPDU
Alternate port	—	A port on a switch that receives a suboptimal BPDU
Backup port	—	A nondesignated port on a switch that is attached to the same segment/collision domain as another port on the same switch
Disabled	—	A port that is administratively disabled or that is not capable of working for other reasons

Figure 25-6 shows an example of these RSTP port roles.

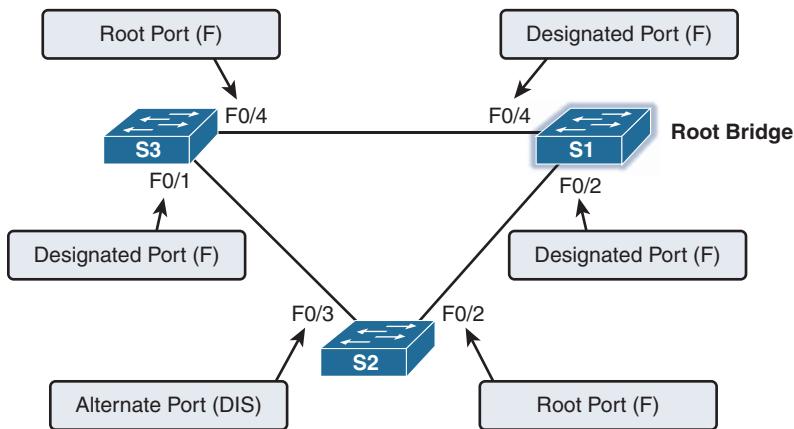Figure 25-6 RSTP Port Roles

Edge Ports

In addition to the port roles just described, RSTP uses an edge port concept that corresponds to the PVST+ PortFast feature. An edge port connects directly to an end device. Therefore, the switch assumes that no other switch is connected to it. RSTP edge ports should immediately transition to the forwarding state, thereby skipping the time-consuming original 802.1D listening and learning port states. The only caveat is that the port must be a point-to-point link. If it is a shared link, the port is not an edge port, and PortFast should not be configured. Why? Another switch could be added to a shared link—on purpose or inadvertently. Figure 25-7 shows examples of edge ports.

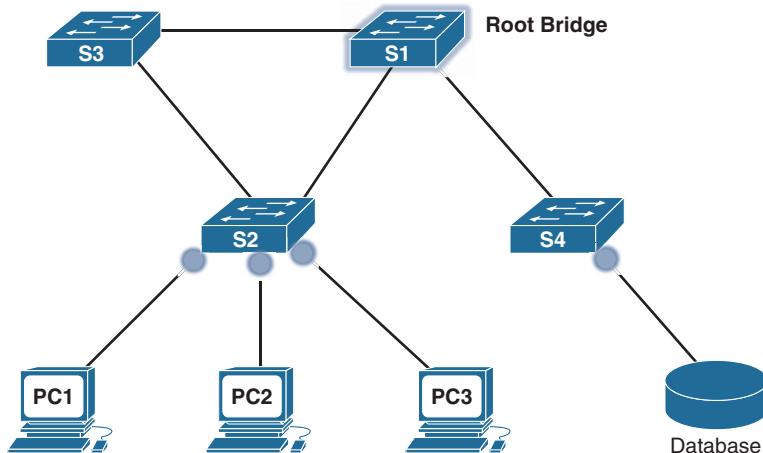Figure 25-7 Edge Ports in RSTP

Configuring and Verifying Varieties of STP

By default, all Cisco switches use STP without any configuration by the network administrator. However, because STP runs on a per-VLAN basis, you can take advantage of several options to load balance traffic across redundant links.

STP Configuration Overview

Before you configure or alter the behavior of STP, it is important to know the current default settings listed in Table 25-7.

Table 25-7 Default STP Configuration on the Cisco Catalyst 2960

Feature	Default Setting
Enable state	Enables STP on VLAN 1
Spanning tree mode	PVST+ (Rapid PVST+ and MSTP disabled)
Switch priority	32768
Spanning tree port priority (configurable on a per-interface basis)	128
Spanning tree port cost (configurable on a per-interface basis)	1000 Mbps: 4 100 Mbps: 19 10 Mbps: 100
Spanning tree VLAN port priority (configurable on a per-VLAN basis)	128
Spanning tree VLAN port cost (configurable on a per-VLAN basis)	1000 Mbps: 4 100 Mbps: 19 10 Mbps: 100
Spanning tree timers	Hello time: 2 seconds Forward-delay time: 15 seconds Maximum-aging time: 20 seconds Transmit hold count: 6 BPDUs

Configuring and Verifying the BID

Regardless of which PVST you use, two main configuration options can help you achieve load balancing: the bridge ID and the port cost manipulation. The bridge ID influences the choice of root switch and can be configured per VLAN. Each interface's (per-VLAN) STP cost to reach the root influences the choice of designated port on each LAN segment. Because PVST requires that a separate instance of spanning tree run for each VLAN, the BID field is required to carry VLAN ID (VID) information. This is accomplished by reusing a portion of the Priority field as the extended system ID to carry a VID.

To change the bridge ID, use one of the following commands:


```
Switch(config)# spanning-tree vlan vlan-id root {primary | secondary}
Switch(config)# spanning-tree vlan vlan-id priority
```

To change the interface cost, use the following command:

```
Switch(config-if)# spanning-tree vlan vlan-id cost cost
```

Figure 25-8 shows a simple three-switch STP topology without redundant links.

Figure 25-8 STP Topology

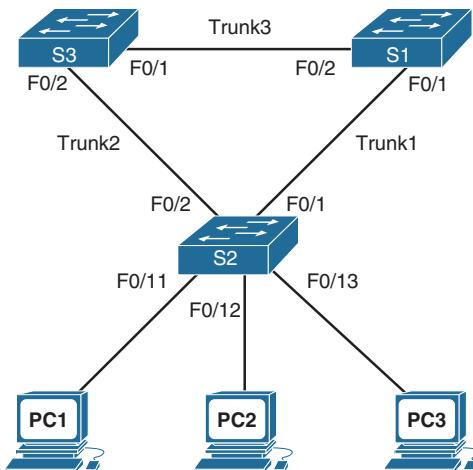

The network administrator wants to ensure that S1 is always the root bridge and S2 is the backup root bridge. The following commands achieve this objective:

```
S1(config)# spanning-tree vlan 1 root primary
!-----
S2(config)# spanning-tree vlan 1 root secondary
```

The **primary** keyword automatically sets the priority to 24576 or to the next 4096 increment value below the lowest bridge priority detected on the network.

The **secondary** keyword automatically sets the priority to 28672, assuming that the rest of the network is set to the default priority of 32768.

Alternatively, the network administrator can explicitly configure the priority value in increments of 4096 between 0 and 65536 using the following command:

```
S1(config)# spanning-tree vlan 1 priority 24576
!-----
S2(config)# spanning-tree vlan 1 priority 28672
```

NOTE: In this example, these commands changed the priority values only for VLAN 1. Additional commands must be entered for each VLAN to take advantage of load balancing.

To verify the current spanning tree instances and root bridges, use the **show spanning-tree** command (see Example 25-1).

Example 25-1 Verifying Spanning Tree Configurations

```
S1# show spanning-tree

VLAN0001
  Spanning tree enabled protocol ieee
  Root ID    Priority    24577
              Address     001b.5302.4e80
              This bridge is the root
              Hello Time   2 sec Max Age 20 sec Forward Delay 15 sec

  Bridge ID Priority    24577 (priority 24576 sys-id-ext 1)
              Address     001b.5302.4e80
              Hello Time   2 sec Max Age 20 sec Forward Delay 15 sec
              Aging Time   300

  Interface      Role Sts Cost      Prio.NbrType
  -----          --- --  --  -----
  Fa0/1          Desg FWD 19      128.1 P2p
  Fa0/2          Desg FWD 19      128.2 P2p
```

Because an extended system ID is used in the BID, the value of the priority includes the addition of the VLAN ID. Therefore, a priority of 24576 plus a VLAN of 1 results in a priority output of 24577.

Configuring PortFast and BPDU Guard

To speed convergence for access ports when they become active, you can use Cisco's proprietary PortFast technology. After PortFast is configured and a port is activated, the port immediately transitions from the blocking state to the forwarding state.

In a valid PortFast configuration, BPDUs should never be received because receipt of a BPDU indicates that another bridge or switch is connected to the port, potentially causing a spanning tree loop. When it is enabled, BPDU Guard puts the port in an errdisabled (error-disabled) state upon receipt of a BPDU. This effectively shuts down the port. The BPDU Guard feature provides a secure response to invalid configurations because you must manually put the interface back into service.

Example 25-2 shows the interface commands to configure PortFast and BPDU Guard on S2 in Figure 25-8.

Example 25-2 Configuring PortFast and BPDU Guard

```
S2# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
S2(config)# interface range f0/11 - f0/13
S2(config-if-range)# switchport mode access
S2(config-if-range)# spanning-tree portfast
S2(config-if-range)# spanning-tree bpduguard enable
```

Alternatively, you can configure the global commands **spanning-tree portfast default** and **spanning-tree bpduguard default**, which enable PortFast and BPDU Guard on all access ports.

Configuring Rapid PVST+

Remember that PVST+ is the default operation of Cisco switches. To change to Rapid PVST+, use a single global command on all switches: **spanning-tree mode rapid-pvst**.

Table 25-8 summarizes all the commands related to Rapid PVST+.

Table 25-8 Commands for Rapid PVST+

Description	Command
Configure Rapid PVST+ and the spanning tree mode	Switch(config)# spanning-tree mode rapid-pvst
Specify a link type as point-to-point (not normally necessary because the shared link type is unusual)	Switch(config-if)# spanning-tree link-type point-to-point
Force the renegotiation with neighboring switches on all interfaces or the specified interface	Switch# clear spanning-tree detected protocols [interface interface-id]

Verifying STP

Several commands enable you to verify the state of the current STP implementation. Table 25-9 summarizes commands most likely to appear on the CCNA exam.

Table 25-9 STP Verification Commands

Description	Command
Displays STP information	Switch# show spanning-tree
Displays STP information for active interfaces only	Switch# show spanning-tree active
Displays abbreviated information for all STP instances	Switch# show spanning-tree bridge
Displays detailed information for all STP instances	Switch# show spanning-tree detail
Displays STP information for the specified interface	Switch# show spanning-tree interface interface-id
Displays STP information for the specified VLAN	Switch# show spanning-tree vlan vlan-id
Displays a summary of STP port states	Switch# show spanning-tree summary

NOTE: Ideally, you should review the output of these commands today on lab equipment or a simulator. At the very least, refer to the examples in your study resources.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 1	4
	6
	7
CCNA 200-301 Official Cert Guide, Volume 1	5
	8
Portable Command Guide	11

EtherChannel and HSRP

CCNA 200-301 Exam Topics

- Configure and verify (Layer 2/Layer 3) EtherChannel (LACP)
- Describe the purpose of first hop redundancy protocol

Key Topics


EtherChannel technology enables you to bundle multiple physical interfaces into one logical channel to increase the bandwidth on point-to-point links. In addition, EtherChannel provides a way to prevent the need for Spanning Tree Protocol (STP) convergence when only a single port or cable failure occurs.

Most end devices do not store routes to reach remote networks. Instead, an end device is typically configured with a default gateway that handles routing for the device. But what if that default gateway fails? To ensure that a device will still have access to remote networks, you should implement some type of default gateway redundancy in the network. That is the role of first-hop redundancy protocols (FHRPs).

EtherChannel Operation

EtherChannel, a technology that Cisco developed, can bundle up to eight equal-speed links between two switches, as you can see between the two distribution layer switches in Figure 24-1.

Figure 24-1 Sample EtherChannel Topology

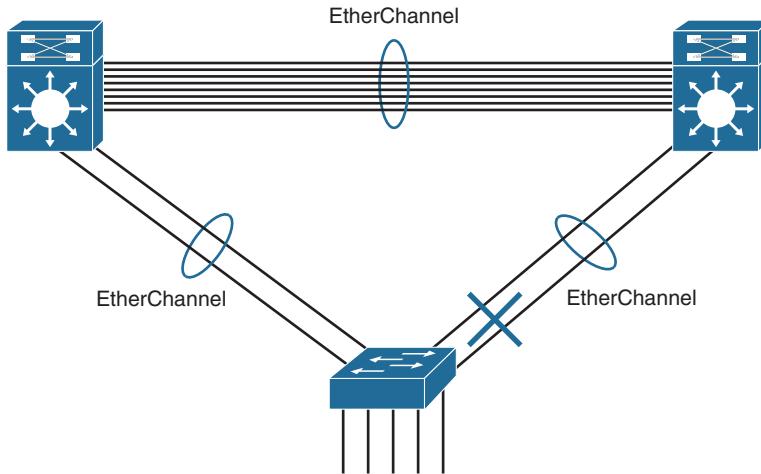

STP sees the bundle of links as a single interface. As a result, if at least one of the links is up, STP convergence does not have to occur. This makes much better use of available bandwidth while reducing the number of times STP must converge. Without the use of EtherChannel or modification of the STP configuration, STP would block all the links except one.

Benefits of EtherChannel

When EtherChannel is configured, the resulting virtual interface is called a *port channel*. The physical interfaces are bundled together into a port channel interface. EtherChannel has the following benefits:

- Most configuration tasks can be done on the EtherChannel interface instead of on each individual port, thus ensuring configuration consistency throughout the links.
- EtherChannel relies on the existing switch ports to increase bandwidth. No hardware upgrades are needed.
- Load balancing is possible between links that are part of the same EtherChannel. (Load balancing configuration is beyond the scope of the CCNA exam.)
- EtherChannel creates an aggregation that STP recognizes as one logical link.
- EtherChannel provides redundancy. The loss of one physical link does not create a change in the topology.

Implementation Restrictions

Keep in mind a few limitations when implementing EtherChannel on Cisco 2960 Catalyst switches:

- Interface types, such as Fast Ethernet and Gigabit Ethernet, cannot be mixed within the same EtherChannel.
- Each EtherChannel can consist of up to eight compatibly configured Ethernet ports.
- Cisco IOS Software currently supports up to six EtherChannels.
- Some servers also support EtherChannel to the switch to increase bandwidth; however, the server then needs at least two EtherChannels to provide redundancy because it can send traffic to only one switch through the EtherChannel.
- The EtherChannel configuration must be consistent on the two switches. The trunking configuration (native VLAN, allowed VLANs, and so on) must be the same. All ports also must be Layer 2 ports.
- All ports in the EtherChannel must be Layer 2 ports, or all ports within the EtherChannel must be Layer 3 ports.

NOTE: You can configure Layer 3 EtherChannels on multilayer switches; however, that is beyond the scope of the CCNA exam.

EtherChannel Protocols

You can configure EtherChannel as static or unconditional; however, you also can use two protocols to configure the negotiation process: Port Aggregation Protocol (PAgP, which is Cisco proprietary) and Link Aggregation Control Protocol (LACP, which is IEEE 802.3ad). These two protocols ensure that the two sides of the link have compatible configurations—same speed, duplex setting, and VLAN information. The modes for each differ slightly.

Port Aggregation Protocol

PAgP is a Cisco-proprietary protocol that aids in the automatic creation of EtherChannel links. PAgP checks for configuration consistency and manages link additions and failures between two switches. It ensures that when an EtherChannel is created, all ports have the same type of configuration. PAgP uses the following modes:

- **On:** This mode forces the interface to channel without PAgP.
- **Desirable:** The interface initiates negotiations with other interfaces by sending PAgP packets.
- **Auto:** The interface responds to the PAgP packets that it receives but does not initiate PAgP negotiation.

The modes must be compatible on the two sides of the EtherChannel. For example, Sw1 and Sw2 in Figure 24-2 must be configured with a particular combination of settings, as shown in Table 24-1.

Figure 24-2 Two-Switch EtherChannel Topology

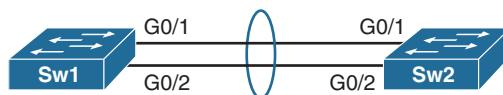


Table 24-1 PAgP Mode Settings

Sw1	Sw2	Channel Established?
On	On	Yes
Auto/Desirable	Desirable	Yes
On/Auto/Desirable	Not configured	No
On	Desirable	No
Auto/On	Auto	No

Link Aggregation Control Protocol

The Link Aggregation Control Protocol (LACP) is part of an IEEE specification (802.3ad) that allows a switch to negotiate an automatic bundle by sending LACP packets to the peer. It performs a function similar to PAgP with Cisco EtherChannel. Cisco devices support both PAgP and LACP. LACP uses the following modes:

- **On:** This mode forces the interface to channel without LACP.
- **Active:** The interface initiates negotiations with other interfaces by sending LACP packets.

- **Passive:** The interface responds to the LACP packets that it receives but does not initiate LACP negotiation.

As with PAgP, the LACP modes must be compatible on the two sides of the EtherChannel. For example, Sw1 and Sw2 in Figure 24-2 must be configured with a particular combination of settings, as shown in Table 24-2.

Table 24-2 LACP Mode Settings

Sw1	Sw2	Channel Established?
On	On	Yes
Active/Passive	Active	Yes
On/Active/Passive	Not configured	No
On	Active	No
Passive/On	Passive	No

NOTE: For both the PAgP and LACP protocols, the **on** mode creates the EtherChannel configuration unconditionally, without PAgP or LACP dynamic negotiation. You should probably memorize the mode settings for both PAgP and LACP in preparation for the CCNA exam.

Configuring EtherChannel

To implement EtherChannel, follow these steps:

- Step 1.** Specify the interfaces that you want to bundle together in one link by using the **interface range *interfaces*** command.
- Step 2.** Create a port channel by using the **channel-group *identifier* mode *mode*** command. *identifier* can be any number between 1 and 6, inclusive, and does not have to match the other switch. The mode is either **on** or one of the PAgP or LACP modes.
- Step 3.** Enter interface configuration mode for the new port channel with the **interface port-channel *identifier*** command. *identifier* is the same number used with the **channel-group** command.
- Step 4.** Configure the trunking and VLAN settings.

Using the topology in Figure 24-2, assume that Sw1 is already configured for EtherChannel with G0/1 and G0/2 trunking. The native VLAN is 86. The allowed VLANs are 1, 10, 20, and 86. EtherChannel is forced on. No PAgP or LACP is needed. Example 24-1 shows the configuration for Sw2.

Example 24-1 EtherChannel Configuration

```
Sw2(config)# interface range g0/1-2
Sw2(config-if-range)# channel-group 1 mode on
Creating a port-channel interface Port-channel 1
Sw2(config-if-range)# interface port-channel 1
Sw2(config-if)# switchport mode trunk
Sw2(config-if)# switchport trunk native vlan 86
Sw2(config-if)# switchport trunk allowed vlan 1,10,20,86
```

In configuring PAgP or LACP, use the appropriate mode keyword for the **channel-group** command. Just ensure that the commands on both sides of the channel are compatible, according to Tables 24-1 and 24-2.

Verifying EtherChannel

If you configured management addressing, you can quickly verify both sides of an EtherChannel bundle by pinging across the trunk. The two switches should be able to ping each other. Devices configured as members of the various VLANs also should be able to ping each other.

To verify the configuration, use the **show run** command (see Example 24-2).

Example 24-2 Verifying the EtherChannel Configuration

```
Sw2# show run | begin interface Port
interface Port-channel1
  switchport trunk native vlan 86
  switchport trunk allowed vlan 1,10,20,86
  switchport mode trunk
!
<output omitted>
interface GigabitEthernet0/1
  switchport trunk native vlan 86
  switchport trunk allowed vlan 1,10,20,86
  switchport mode trunk
  channel-group 1 mode on
!
interface GigabitEthernet0/2
  switchport trunk native vlan 86
  switchport trunk allowed vlan 1,10,20,86
  switchport mode trunk
  channel-group 1 mode on
```

To get an overall summary of the EtherChannel configuration, use the **show etherchannel summary** command (see Example 24-3).

Example 24-3 Verifying That EtherChannel Is Operational

```

Sw2# show etherchannel summary
Flags: D - down          P - bundled in port-channel
      I - stand-alone    S - suspended
      H - Hot-standby   (LACP only)
      R - Layer3         S - Layer2
      U - in use         f - failed to allocate aggregator

      M - not in use, minimum links not met
      u - unsuitable for bundling
      w - waiting to be aggregated
      d - default port

Number of channel-groups in use:  1
Number of aggregators:           1

Group  Port-channel  Protocol     Ports
-----+-----+-----+
1      Po1(SU)       -          Gig0/1(P) Gig0/2(P)

```

To verify the operational status of a specific interface in the EtherChannel bundle, use the **show interface switchport** command (see Example 24-4).

Example 24-4 Verifying an Interface's Port Channel Settings

```

Sw2# show interface fa0/1 switchport
Name: Fa0/1
Switchport: Enabled
Administrative Mode: trunk
Operational Mode: trunk (member of bundle Po1)
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: dot1q
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 86 (VLAN0086)
Administrative Native VLAN tagging: enabled
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk Native VLAN tagging: enabled
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk associations: none

```

```

Administrative private-vlan trunk mappings: none
Operational private-vlan: none
Trunking VLANs Enabled: 1,10,20,86
Pruning VLANs Enabled: 2-1001

```

Troubleshooting EtherChannel

All interfaces within an EtherChannel must have the same configuration of speed for the duplex mode, native and allowed VLANs on trunks, and access VLAN on access ports:


- Assign all ports in the EtherChannel to the same VLAN or configure them as trunks. Ports with different native VLANs cannot form an EtherChannel.
- When configuring a trunk on an EtherChannel, verify the trunking mode on the EtherChannel. Configuring trunking mode on individual ports that make up the EtherChannel is not recommended. However, if it is done, verify that the trunking configuration is the same on all interfaces.
- An EtherChannel supports the same allowed range of VLANs on all the ports. If the allowed range of VLANs is not the same, the ports do not form an EtherChannel even when PAgP is set to **auto** or **desirable** mode.
- The dynamic negotiation options for PAgP and LACP must be compatibly configured on both ends of the EtherChannel.

Configuration issues with the **channel-group** command include the following:

- Configuring the **on** keyword on one switch and **desirable**, **auto**, **active**, or **passive** on the other switch. The **on** keyword does not enable PAgP or LACP. Both switches should be configured on one of the acceptable PAgP or LACP modes.
- Configuring the **auto** keyword on both switches. This enables PAgP, but each switch waits on the other to begin negotiations.
- Configuring the **passive** keyword on both switches. This enables LACP, but each switch waits on the other to begin negotiations.
- Mixing keywords from PAgP and LACP, which are not compatible (for example, configuring **active** (LACP) on one switch and **desirable** or **auto** (PAgP) on the other switch).

First-Hop Redundancy Concepts

FHRPs enable you to install multiple routers in a subnet to collectively act as a single default router. These routers share a virtual IP address, as Figure 24-3 shows.

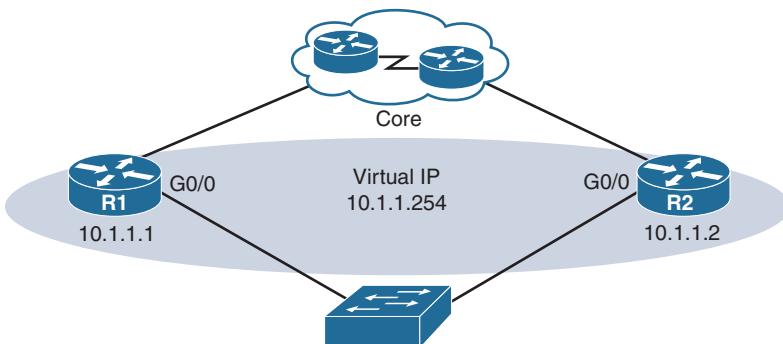Figure 24-3 Redundant Default Gateway Example

In the figure, the G0/0 interfaces on R1 and R2 are configured with the IP addresses shown. However, both routers are also configured with the virtual IP address. This virtual IP address is the default gateway address configured on end devices. A redundancy protocol provides the mechanism for determining which router should take the active role in forwarding traffic. It also determines when a standby router must take over the forwarding role. The transition from one forwarding router to another is transparent to the end devices. This capability of a network to dynamically recover from the failure of a device acting as a default gateway is known as *first-hop redundancy*.

Regardless of which FHRP is implemented, the following steps take place when the active router fails:

- Step 1.** The standby router stops seeing hello messages from the forwarding router.
- Step 2.** The standby router assumes the role of the forwarding router.
- Step 3.** Because the new forwarding router assumes both the IP and MAC addresses of the virtual router, the end stations do not recognize a disruption in service.

FHRPs

The following list defines the three options available for FHRPs:

- **Hot Standby Router Protocol (HSRP):** A Cisco-proprietary FHRP designed to allow for transparent failover of a first-hop IPv4 device. The function of the HSRP standby router is to monitor the operational status of the HSRP group and to quickly assume packet-forwarding responsibility if the active router fails. HSRP for IPv6 provides support for IPv6 networks.
- **Virtual Router Redundancy Protocol (VRRP):** An IETF standard that dynamically assigns responsibility for one or more virtual routers to the VRRP routers on an IPv4 LAN. Its operation is similar to that of HSRP. VRRPv3 supports IPv4 and IPv6.
- **Gateway Load Balancing Protocol (GLBP):** A Cisco-proprietary FHRP that protects data traffic from a failed router or circuit, as in HSRP and VRRP, while also allowing load balancing (also called load sharing) between a group of redundant routers. GLBP for IPv6 provides support for IPv6 networks.

The CCNA exam covers HSRP.

HSRP Operation

HSRP uses an active/standby model in which one router actively assumes the role of default gateway for devices on the subnet. One or more routers on the same subnet are then in standby mode. The HSRP active router implements a virtual IP address and matching virtual MAC address. This virtual IP address is part of the HSRP configuration and belongs to the same subnet as the physical interface IP address, but it is a different IP address. The router then automatically creates the virtual MAC address. All the cooperating HSRP routers know these virtual addresses, but only the HSRP active router uses these addresses at any one point in time.

Assume that you have two HSRP routers similar to R1 and R2 in Figure 24-3. These HSRP routers send each other messages to negotiate which router should be active. Then they continue to send each other messages so that the standby router can detect when the active router fails. If the active router fails, the standby router automatically assumes the virtual IP and MAC addresses and serves as the default gateway for the LAN. The new active router then sends out a gratuitous ARP so that the switches on the subnet will change their MAC address tables to reflect the correct port to reach the virtual MAC. This failover process is transparent to end devices, which are all configured with the virtual IP address as the default gateway.

So what about load balancing? Aren't we wasting the capacity of the standby router and the links connecting to it? Yes, if the routers are connected to only one subnet. However, if VLANs are configured, the routers can share the load by each serving as the active router for some of the VLANs. For example, in Figure 24-3, R1 is the active router for VLAN 10, and R2 is the active router for VLAN 20. Both routers are configured with subinterfaces for inter-VLAN routing and the two virtual IP addresses so that each can assume the role of active router if the other router fails.

HSRP Versions

Cisco IOS defaults to HSRP version 1. Table 24-3 compares HSRP version 1 and version 2.

Table 24-3 HSRP Version 1 and Version 2 Features

HSRP Feature	Version 1	Version 2
Group numbers supported	0–255	0–4095
Authentication	None	MD5
Multicast addresses	IPv4: 224.0.0.2	IPv4: 224.0.0.102 IPv6: FF02::66
Virtual MAC ranges	0000.0C07.AC00 to 0000.0C07.ACFF	IPv4: 0000.0C9FF000 to 0000.0C9FFFFF IPv6: 0005.73A0.0000 to 0005.73A0.0FFF

NOTE: The last three hexadecimal digits of the virtual MAC address indicate the configured group number. Group numbers are important for more advanced HSRP configurations, which are beyond the scope of the CCNA exam.

HSRP Priority and Preemption

By default, the router with the numerically highest IPv4 address is elected as the active HSRP router. To configure a router to be the active router, regardless of IPv4 addressing, use the **standby priority** interface configuration command. The default priority is 100. The router with the highest priority will be the active HSRP router, assuming that no election has already occurred.

To force a new HSRP election, preemption must be enabled with the **standby preempt** interface configuration command.

HSRP Configuration and Verification

Let's look at how to configure the topology in Figure 24-3. HSRP requires only one command on both routers:

```
Router(config-if)# standby group ip ip-address
```

The interface must be on the same subnet as the other HSRP router or routers. The *group* number and virtual *ip-address* must be the same on all HSRP routers.

Unless the **priority** command is used, the first router configured becomes the HSRP active router. Therefore, even though in Example 24-5 R1 is configured first, it includes a priority configuration to make sure that R1 is always the active router. Also, to make sure that R1 resumes the active router role after losing connectivity, the **standby preempt** command is configured.

Example 24-5 Configuring HSRP

```
R1(config)# interface g0/0
R1(config-if)# ip address 10.1.1.1 255.255.0.0
R1(config-if)# standby 1 ip 10.1.1.254
R1(config-if)# standby 1 priority 200
R1(config-if)# standby 1 preempt

R2(config)# interface g0/0
R2(config-if)# ip address 10.1.1.2 255.255.0.0
R2(config-if)# standby 1 ip 10.1.1.254
```

To verify that HSRP is up and running, use the **show standby** command or the **brief** version of the command, as in Example 24-6.

Example 24-6 Verifying HSRP

```
R1# show standby
GigabitEthernet0/0 - Group 1
  State is Active
    2 state changes, last state change 00:11:51
    Virtual IP address is 10.1.1.254
    Active virtual MAC address is 0000.0c07.ac01
```

```

Local virtual MAC address is 0000.0c07.ac01 (v1 default)
Hello time 3 sec, hold time 10 sec
Next hello sent in 1.232 secs
Preemption enabled
Active router is local
Standby router is 10.1.1.2, priority 100 (expires in 9.808 sec)
Priority 200 (configured 200)
Group name is "hsrp-Gi0/0-1" (default)

R1# show standby brief
          P indicates configured to preempt.

Interface   Grp Pri P State      Active Standby    Virtual IP
Gi0/0        1   200  Active     local  10.1.1.2  10.1.1.254

R2# show standby
GigabitEthernet0/0 - Group 1
State is Standby
  1 state change, last state change 00:15:23
Virtual IP address is 10.1.1.254
Active virtual MAC address is 0000.0c07.ac01
  Local virtual MAC address is 0000.0c07.ac01 (v1 default)
Hello time 3 sec, hold time 10 sec
  Next hello sent in 1.008 secs
Preemption disabled
Active router is 10.1.1.1, priority 200 (expires in 8.624 sec)
Standby router is local
Priority 100 (default 100)
Group name is "hsrp-Gi0/0-1" (default)

R2# show standby brief
          P indicates configured to preempt.


Interface   Grp Pri P State      Active Standby    Virtual IP
Gi0/0        1   100  Standby  10.1.1.1  local   10.1.1.254

```

The **show standby brief** command displays the most pertinent information you might need in a few lines of output. The more verbose **show standby** command provides additional information, such as the number of state changes, the virtual MAC address, hellos, and the group name.

HSRP Load Balancing

As with STP, you might want your HSRP routers to be configured in active/active state, with one router active for one set of VLANs and the other router active for the remaining VLANs. Figure 24-4 shows a topology with multiple VLANs.

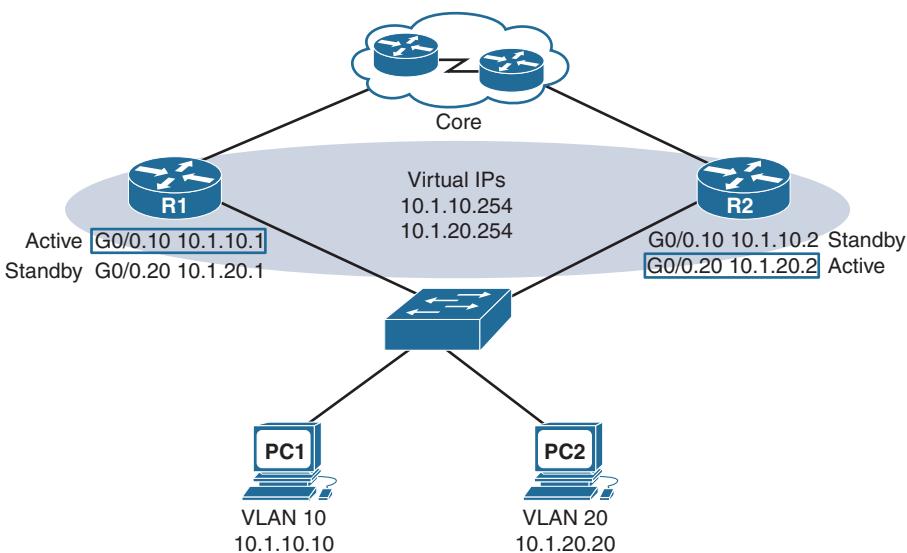Figure 24-4 HSRP Load Balancing Example

To implement HSRP load balancing for different VLANs, configure R1 as the active router for half the VLANs and R2 as the active router for the other half of the VLANs (see Example 24-7).

Example 24-7 Configuring HSRP Load Balancing

```
R1# show run | begin interface G

interface GigabitEthernet0/0
no ip address
duplex auto
speed auto
!

interface GigabitEthernet0/0.10
encapsulation dot1Q 10
ip address 10.1.10.1 255.255.255.0
standby version 2
standby 1 ip 10.1.10.254
standby 1 priority 150
standby 1 preempt
!

interface GigabitEthernet0/0.20
encapsulation dot1Q 20
ip address 10.1.20.1 255.255.255.0
standby version 2
standby 1 ip 10.1.20.254
```

```
R2# show run | begin interface G

interface GigabitEthernet0/0
    no ip address
    duplex auto
    speed auto
!
interface GigabitEthernet0/0.10
    encapsulation dot1Q 10
    ip address 10.1.10.2 255.255.255.0
    standby version 2
    standby 1 ip 10.1.10.254
!
interface GigabitEthernet0/0.20
    encapsulation dot1Q 20
    ip address 10.1.20.2 255.255.255.0
    standby version 2
    standby 1 ip 10.1.20.254
    standby 1 priority 150
    standby 1 preempt
!
```

To verify that HSRP with load balancing is operational, use the **show standby** command or the **brief** version of the command (see Example 24-8).

Example 24-8 Verifying HSRP Load Balancing

R1# show standby brief							
P indicates configured to preempt.							
Interface	Grp	Pri	P	State	Active	Standby	Virtual IP
	1	150		Active	local	10.1. 10.2	10.1.10.254
	1	100		Standby	10.1.20.2	local	10.1.20.254

R2# show standby brief							
P indicates configured to preempt.							
Interface	Grp	Pri	P	State	Active	Standby	Virtual IP
	1	100		Standby	10.1.10.1	local	10.1.20.254
	1	150		Active	local	10.1.20.1	10.1.20.254

Troubleshooting HSRP

Issues with HSRP most likely result from one or more of the following:

- The active router that controls the virtual IP address for the group was not successfully elected.
- The standby router did not successfully keep track of the active router.
- No decision was made regarding when to hand another router control of the virtual IP for the group.
- End devices failed to successfully configure the virtual IP address as the default gateway.

Common HSRP configuration issues include the following:

- The HSRP routers are not connected to the same network segment.
- The HSRP routers are not configured with IPv4 addresses from the same subnet.
- The HSRP routers are not configured with the same virtual IPv4 address.
- The HSRP routers are not configured with the same HSRP group number.
- End devices are not configured with the correct default gateway address.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 2	6
	9
CCNA 200-301 Official Cert Guide, Volume 1	9
	10
	17
CCNA 200-301 Official Cert Guide, Volume 2	7
Portable Command Guide	17

DHCP and DNS

CCNA 200-301 Exam Topics

- Explain the role of DHCP and DNS within the network
- Configure and verify DHCP client and relay
- Verify IP parameters for Client OS (Windows, Mac OS, Linux)

Key Topics

Imagine that you have to manually configure the IP addressing for every device you want to connect to the network. Furthermore, imagine that you have to type in the IP address for every website you want to visit. Today we review the two protocols that automate this process: Dynamic Host Configuration Protocol (DHCP) and Domain Name System (DNS). DHCP and DNS make the life of Internet users easier. We also review how to verify IP configuration of end devices for Windows, macOS, and Linux.


DHCPv4

DHCPv4 allows a host to obtain an IP address dynamically when it connects to the network. The DHCPv4 client contacts the DHCPv4 server by sending a request for an IP address. The DHCPv4 server chooses an address from a configured range of addresses called a *pool* and assigns it to the host client for a set period. Figure 23-1 graphically shows the process by which a DHCPv4 server fulfills a request from a DHCPv4 client.

When a DHCPv4-configured device boots up or connects to the network, the client broadcasts a DHCPDISCOVER packet to identify any available DHCPv4 servers on the network. A DHCPv4 server replies with a DHCPOFFER, which is a lease offer message with an assigned IP address, subnet mask, DNS server, and default gateway information, as well as the duration of the lease.

The client can receive multiple DHCPOFFER packets if the local network has more than one DHCPv4 server. The client chooses the first offer and broadcasts a DHCPREQUEST packet that identifies the explicit server and lease offer that it is accepting.

Assuming that the IP address is still valid, the chosen server returns a DHCPACK (acknowledgment) message, finalizing the lease. If the offer is no longer valid for some reason, the chosen server responds to the client with a DHCPNAK (negative acknowledgment) message. After it is leased, the client renews before the lease expiration through another DHCPREQUEST. If the client is powered down or taken off the network, the address is returned to the pool for reuse.

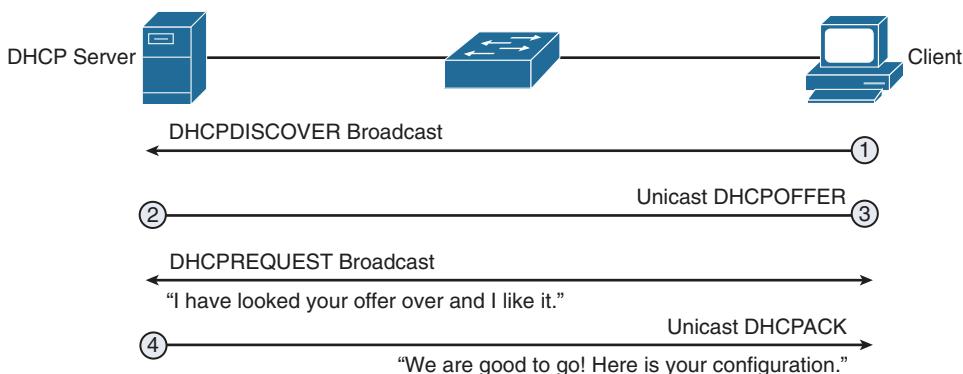Figure 23-1 Allocating IP Addressing Information Using DHCPv4

DHCPv4 Configuration Options

A Cisco router can be configured to handle DHCP requests in two ways: as a DHCP server or as a DHCP relay agent. A Cisco router can also be configured as a DHCP client, requesting an IPv4 address from a DHCP server for one or more of its interfaces. All these options can be configured at the same time on the same device. For example, a router might be the DHCP server for a directly connected LAN while at the same time forwarding DHCP server requests to another DHCP server for other LANs. In addition, the router could have one or more of its interfaces configured to request DHCP addressing from a remote server.

Configuring a Router as a DHCPv4 Server

A Cisco router running Cisco IOS Software can be configured to act as a DHCPv4 server. The Cisco IOS DHCPv4 server assigns and manages IPv4 addresses from specified address pools within the router to DHCPv4 clients.

The steps to configure a router as a DHCPv4 server follow:

- Step 1.** Use the **ip dhcp excluded-address low-address [high-address]** command to identify an address or range of addresses to exclude from the DHCPv4 pool. For example:

```
R1(config)# ip dhcp excluded-address 192.168.10.1 192.168.10.9
R1(config)# ip dhcp excluded-address 192.168.10.254
```

- Step 2.** Create the DHCPv4 pool by using the **ip dhcp pool pool-name** command, which places you in DHCP configuration mode:

```
R1(config)# ip dhcp pool LAN-POOL-10
R1(dhcp-config) #
```

- Step 3.** Configure the IP addressing parameter you need to automatically assign to requesting clients. Table 23-1 lists the required commands.

Table 23-1 Required DHCPv4 Configuration Commands

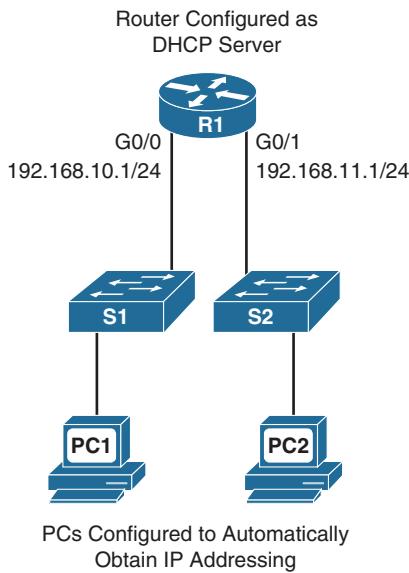
Required Task	Command
Define the address pool	<code>network network-number [mask /prefix-length]</code>
Define the default router or gateway	<code>default-router address [address2...address8]</code>

Table 23-2 lists some of the common optional DHCPv4 tasks.

Table 23-2 Optional DHCPv4 Configuration Commands

Optional Task	Command
Define a DNS server	<code>dns-server address [address2...address8]</code>
Define the domain name	<code>domain-name domain</code>
Define the duration of the DHCPv4 lease	<code>lease {days [hours] [minutes] infinite}</code>
Define the NetBIOS WINS server	<code>netbios-name-server address [address2...address8]</code>

Figure 23-2 shows a sample DHCPv4 topology.

Figure 23-2 DHCPv4 Sample Topology

Example 23-1 shows DHCPv4 required and optional commands to configure R1 as the DHCPv4 server for both LANs in Figure 23-2.

Example 23-1 DHCPv4 Configuration Example

```
!Configure IP addresses that you want excluded from the DHCPv4 pool of addresses
R1(config)# ip dhcp excluded-address 192.168.10.1 192.168.10.9
R1(config)# ip dhcp excluded-address 192.168.10.254
R1(config)# ip dhcp excluded-address 192.168.11.1 192.168.11.9
R1(config)# ip dhcp excluded-address 192.168.11.254
```

```
R1 needs two DHCPv4 pools for the two LANs. Each pool is configured with required
and optional commands.

R1(config)# ip dhcp pool LAN-POOL-10
R1(dhcp-config)# network 192.168.10.0 255.255.255.0
R1(dhcp-config)# default-router 192.168.10.1
R1(dhcp-config)# dns-server 192.168.50.195 209.165.202.158
R1(dhcp-config)# domain-name cisco.com
R1(dhcp-config)# lease 2
R1(dhcp-config)# netbios-name-server 192.168.10.254
R1(dhcp-config)# ip dhcp pool LAN-POOL-11
R1(dhcp-config)# network 192.168.11.0 255.255.255.0
R1(dhcp-config)# default-router 192.168.11.1
R1(dhcp-config)# dns-server 192.168.50.195 209.165.202.158
R1(dhcp-config)# domain-name cisco.com
R1(dhcp-config)# lease 2
R1(dhcp-config)# netbios-name-server 192.168.11.254
R1(dhcp-config)# end
```

Cisco IOS Software supports DHCPv4 service by default. To disable it, use the global command **no service dhcp**.

To verify DHCPv4 operations on R1 in Figure 23–2, use the commands in Example 23–2.

Example 23-2 Verifying DHCPv4 Operation

```
R1# show ip dhcp binding
Bindings from all pools not associated with VRF:
IP address     Client-ID/          Lease expiration      Type
               Hardware address/
               User name
192.168.10.10  0100.1641.aea5.a7    Jul 18 2008 08:17 AM Automatic
192.168.11.10  0100.e018.5bdd.35    Jul 18 2008 08:17 AM Automatic

R1# show ip dhcp server statistics
Memory usage           26455
Address pools          2
Database agents         0
Automatic bindings      2
Manual bindings         0
Expired bindings        0

Malformed messages     0
Secure arp entries     0
Message                Received
```

```

BOOTREQUEST          0
DHCPDISCOVER        2
DHCPREQUEST         2
DHCPDECLINE         0
DHCPRELEASE          0
DHCPINFORM           0

Message              Sent
BOOTREPLY            0
DHCPOFFER            2
DHCPACK              2
DHCPNAK              0
R1#

```

Because PC1 and PC2 are connected to the LANs, each automatically receives its IP addressing information from the router's DHCPv4 server. Example 23-3 shows the output from the **ipconfig/all** command on PC1.

Example 23-3 DHCPv4 Client Configuration

```

C:\> ipconfig/all

Windows IP Configuration

    Host Name . . . . . : ciscolab
    Primary Dns Suffix . . . . . :
    Node Type . . . . . : Hybrid
    IP Routing Enabled. . . . . : No
    WINS Proxy Enabled. . . . . : No

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix . . . . . : cisco.com
    Description . . . . . : Intel(R) PRO/1000 PL
    Physical Address. . . . . : 00-7-41-AE-A5-A7
    Dhcp Enabled. . . . . : Yes
    Autoconfiguration Enabled . . . . . : Yes
    IP Address. . . . . : 192.168.10.11
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.10.1

    DHCP Server . . . . . : 192.168.10.1
    DNS Servers . . . . . : 192.168.50.195
    209.165.202.158

```

```

Primary WINS Server . . . . . : 192.168.10.254
Lease Obtained. . . . . . . . . : Wednesday, July 16, 2008 8:16:59 AM
Lease Expires . . . . . . . . . : Friday, July 18, 2008 8:16:59 AM

```

C:\>


To release the DHCPv4 configuration on a Windows-based client, enter the **ipconfig/release** command. To renew the DHCPv4 configuration, enter the **ipconfig/renew** command.

Configuring a Router to Relay DHCPv4 Requests

In a complex network, the DHCPv4 servers are usually contained in a server farm. Therefore, clients typically are not on the same subnet as the DHCPv4 server, as in the previous example. To ensure that broadcasted DHCPDISCOVER messages are sent to the remote DHCPv4 server, use the **ip helper-address** command.

For example, in Figure 23-3, the DHCPv4 server is located on the 192.168.11.0/24 LAN and is serving IP addressing information for both LANs.

Figure 23-3 DHCPv4 Relay Topology

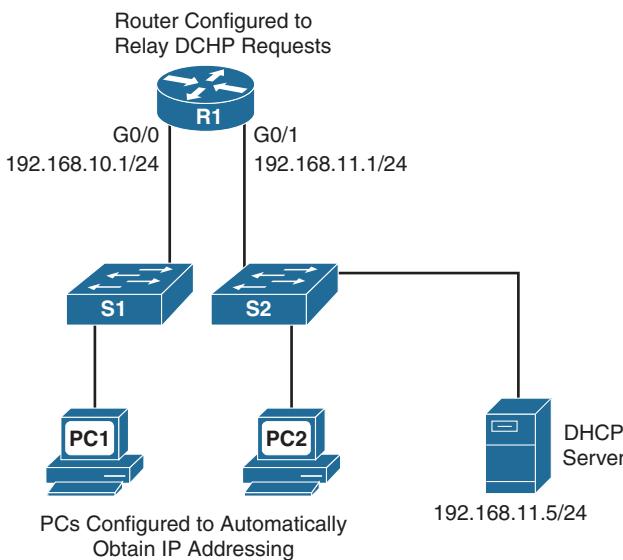

Without the **ip helper-address** command, R1 would discard any broadcasts from PC1 requesting DHCPv4 services. To configure R1 to relay DHCPDISCOVER messages, enter the following commands:

```

R1(config)# interface gigabitethernet 0/0
R1(config-if)# ip helper-address 192.168.11.5

```

Notice that the commands are entered on the interface that will receive DHCPv4 broadcasts. R1 then forwards DHCPv4 broadcast messages as a unicast to 192.168.11.5. By default, the **ip helper-address** command forwards the following eight UDP services:

- **Port 37:** Time
- **Port 49:** TACACS
- **Port 53:** DNS
- **Port 67:** DHCP/BOOTP server
- **Port 68:** DHCP/BOOTP client
- **Port 69:** TFTP
- **Port 137:** NetBIOS name service
- **Port 138:** NetBIOS datagram service

To specify additional ports, use the global command **ip forward-protocol udp [port-number | protocol]**. To disable broadcasts of a particular protocol, use the **no** form of the command.

Configuring a Router as a DHCPv4 Client

Cisco routers in small offices or branch sites are often configured as DHCPv4 clients. The method used depends on the ISP. However, in its simplest configuration, the interface used to connect to a cable or DSL modem is configured with the **ip address dhcp** interface configuration command.

For example, in Figure 23-4, the BRANCH router's GigabitEthernet 0/1 interface can be configured to request addressing from the ISP router.

Figure 23-4 Router as a DHCP Client



Example 23-4 shows the configuration and verification of DHCP addressing on BRANCH.

Example 23-4 Configuring a Router as a DHCP Client

```
BRANCH(config)# interface g0/1
BRANCH(config-if)# ip address dhcp
BRANCH(config-if)# no shutdown
*Mar 15 08:45:34.632: %DHCP-6-ADDRESS_ASSIGN: Interface GigabitEthernet0/1
assigned
    DHCP address 209.165.201.12, mask 255.255.255.224, hostname BRANCH
BRANCH(config-if)# end
```

```
BRANCH# show ip interface g0/1
GigabitEthernet0/1 is up, line protocol is up
  Internet address is 209.165.201.12/27
  Broadcast address is 255.255.255.255
  Address determined by DHCP
<output omitted>
BRANCH#
```

DHCPv6

IPv6 has two methods for automatically obtaining a global unicast address:


- Stateless address autoconfiguration (SLAAC)
- Stateful DHCPv6 (Dynamic Host Configuration Protocol for IPv6)

SLAAC

SLAAC uses ICMPv6 Router Solicitation (RS) and Router Advertisement (RA) messages to provide addressing and other configuration information. A client then uses the RA information to build an IPv6 address and verify it with a special type of Neighbor Solicitation (NS) message through duplicate address detection (DAD). These three message types—RS, RA, and NS—belong to the Neighbor Discovery Protocol:

- **Router Solicitation (RS) message:** When a client is configured to obtain its addressing information automatically using SLAAC, the client sends an RS message to the router. The RS message is sent to the IPv6 all-routers multicast address, FF02::2.
- **Router Advertisement (RA) message:** A client uses this information to create its own IPv6 global unicast address. A router sends RA messages periodically or in response to RS messages. An RA message includes the prefix and prefix length of the local segment. By default, Cisco routers send RA messages every 200 seconds. RA messages are sent to the IPv6 all-nodes multicast address, FF02::1.
- **Neighbor Solicitation (NS) message:** An NS message is normally used to learn the data link layer address of a neighbor on the same network. In the SLAAC process, a host uses DAD by inserting its own IPv6 address as the destination address in an NS message. The NS message is sent out on the network to verify that a newly minted IPv6 address is unique. If a Neighbor Advertisement message is received, the host knows that the IPv6 address is not unique.

Figure 23-5 shows the SLAAC process using three messages of NDP.

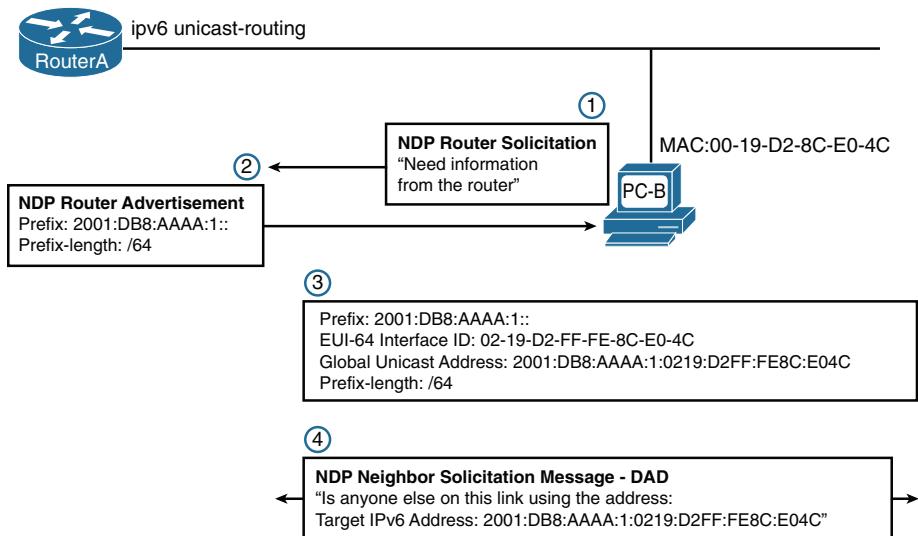Figure 23-5 Neighbor Discovery and the SLAAC Process

Let's briefly review the steps in Figure 23-5.

- Step 1.** PC-B sends an RS message to the all-routers multicast address, FF02::2, to inform the local IPv6 router that it needs an RA message.
- Step 2.** RouterA receives the RS message and responds with an RA message. Included in the RA message are the prefix and prefix length of the network. The RA message is sent to the IPv6 all-nodes multicast address, FF02::1, with the link-local address of the router as the IPv6 source address.
- Step 3.** PC-B uses this information to create its own IPv6 global unicast address. It appends the 64-bit prefix address to its own locally generated 64-bit interface ID, which it creates using either the EUI process (see Figure 23-5) or a random number generator. It uses RouterA's link-local address as the default gateway.
- Step 4.** Before PC-B can use this newly created IPv6 address, it uses the DAD process, sending out an NS message to verify that the address is unique.

NOTE: A client's operating system can be configured to ignore RA messages, in which case the client always opts to use the services of a DHCPv6 server.

An RA message informs a client how to obtain automatic IPv6 addressing: using SLAAC, DHCPv6, or a combination of the two. The RA message contains two flags to indicate the configuration option: the Managed Address Configuration flag (M flag) and the Other Configuration flag (O flag).

The default setting for these flags is 0, or both bits off. To the client, this means it is to use the SLAAC process exclusively to obtain all of its IPv6 addressing information. If either of these flags is set to 1 for some reason, you can use the **no** form of the following **ipv6 nd** commands in interface configuration mode to reset them to 0:

```
Router(config-if)# no ipv6 nd managed-config-flag
Router(config-if)# no ipv6 nd other-config-flag
```

Stateless DHCPv6

In stateless DHCPv6, the client uses the RA message from the router to generate its global unicast address. However, the client then sends a request to the DHCPv6 server to obtain any additional information that the RA has not already supplied.

For stateless DHCPv6, the O flag is set to 1 so that the client is informed that additional configuration information is available from a stateless DHCPv6 server. Use the following command on the interface to modify the RA message:

```
Router(config-if)# ipv6 nd other-config-flag
```

Stateful DHCPv6


For stateful DHCPv6, the RA message tells the client to obtain all its addressing information from a DHCPv6 server. The M flag must be set on the interface with the following command:

```
Router(config-if)# ipv6 nd managed-config-flag
```

Stateless and Stateful DHCPv6 Operation

Figure 23-6 shows the full operation of DHCPv6, regardless of the method used: SLAAC, stateless DHCPv6, or stateful DHCPv6.

Figure 23-6 DHCPv6 Operations

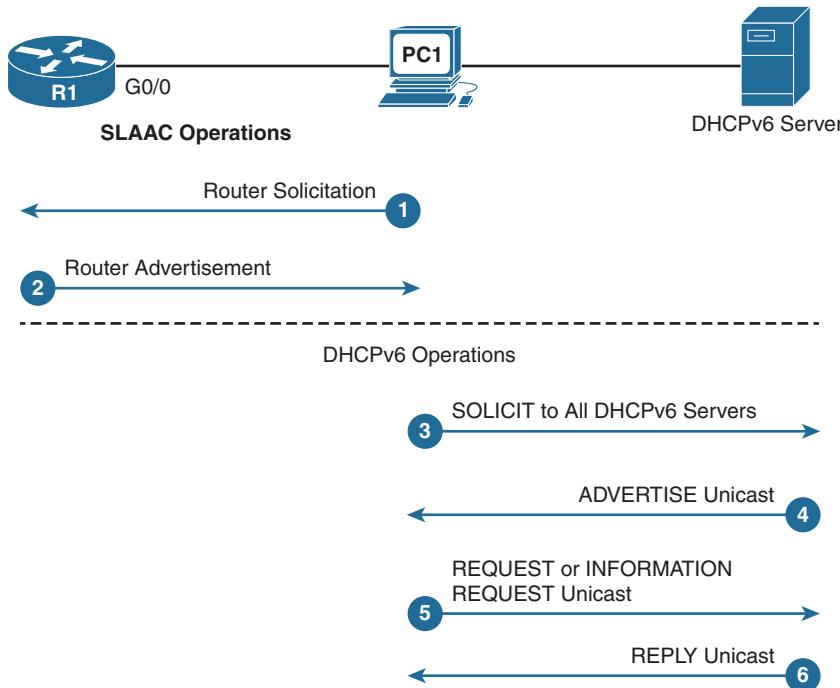

The following steps occur in Figure 23-6:

- Step 1.** PC1 sends an RS message on bootup to begin the process of obtaining IPv6 addressing.
- Step 2.** R1 replies with an RA message. If the M and O flags are not set, PC1 uses SLAAC. If either the M flag or the O flag is set, PC1 begins the DHCPv6 process.
- Step 3.** PC1 sends a DHCPv6 SOLICIT message to the all-DHCPv6-servers address, FF02::1:2—a link-local multicast address that will not be forwarded by routers.
- Step 4.** A DHCPv6 server responds with a DHCPv6 ADVERTISE unicast message informing the client of its presence.
- Step 5.** The client sends either a unicast DHCPv6 REQUEST (the M flag was set, and the client is using stateful DHCPv6) or a unicast DHCPv6 INFORMATION-REQUEST (the O flag was set, and the client is using stateless DHCPv6).
- Step 6.** The server replies with the information requested.


DHCPv6 Configuration Options

A router can be configured as a stateless DHCPv6 server, a stateful DHCPv6 server, and a DHCPv6 client. As in DHCPv4, the router can be configured with all three, depending on what role it plays for its various interfaces.

Configuring a Router as a Stateless DHCPv6 Server

We use Figure 23-7 for all the examples in this section. R1 is the DHCPv6 server, and R3 is the DHCPv6 client.

Figure 23-7 DHCPv6 Server and Client Topology

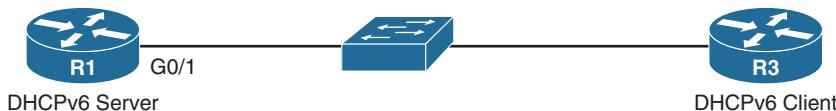

To configure R1 as a stateless DHCP server, you need to make sure that **ipv6 unicast-routing** is enabled. Then, in global configuration mode, configure the pool name, DNS server, and domain name. Finally, enable the DHCPv6 pool on the appropriate interface and set the O flag so that clients on that interface know to request DHCPv6 services from the router. Example 23-5 shows the configuration for R1.

Example 23-5 Configuring a Router as a Stateless DHCPv6 Server

```
R1(config)# ipv6 unicast-routing
R1(config)# ipv6 dhcp pool O-FLAG-SET
R1(config-dhcpv6)# dns-server 2001:db8:acad:1::5
R1(config-dhcpv6)# domain-name cisco.com
R1(config-dhcpv6)# exit
R1(config)# interface g0/1
R1(config-if)# ipv6 address 2001:db8:1:1::1/64
R1(config-if)# ipv6 dhcp server O-FLAG-SET
R1(config-if)# ipv6 nd other-config-flag
R1(config-if)# end
R1# show ipv6 dhcp pool
DHCPv6 pool: O-FLAG-SET
  DNS server: 2001:DB8:ACAD:1::5
  Domain name: cisco.com
  Active clients: 0
R1#
```

To configure a router interface as a DHCPv6 client, enable IPv6 on the interface and enter the **ipv6 address autoconfig** command, as in Example 23-6. Verify the configuration with the **show ipv6 interface** command.

Example 23-6 Configuring an Interface as a DHCPv6 Client

```
R3(config)# interface g0/1
R3(config-if)# ipv6 enable
R3(config-if)# ipv6 address autoconfig
R3(config-if)# end
R3# show ipv6 interface g0/1
GigabitEthernet0/1 is up, line protocol is up
  IPv6 is enabled, link-local address is FE80::32F7:DFF:FE25:2DE1
  No Virtual link-local address(es):
  Stateless address autoconfig enabled
  Global unicast address(es):
    2001:DB8:1:1:32F7:DFF:FE25:2DE1, subnet is 2001:DB8:1:1::/64 [EUI/CAL/PRE]
      valid lifetime 2591935 preferred lifetime 604735
  Joined group address(es):
    FF02::1
    FF02::1:FF25:2DE1
  MTU is 1500 bytes
  ICMP error messages limited to one every 100 milliseconds
  ICMP redirects are enabled
  ICMP unreachables are sent
```

```

ND DAD is enabled, number of DAD attempts: 1
ND reachable time is 30000 milliseconds (using 30000)
ND NS retransmit interval is 1000 milliseconds
Default router is FE80::D68C:B5FF:FECE:A0C1 on GigabitEthernet0/1
R3#

```

Configuring a Router as a Stateful DHCPv6 Server

The main difference between a stateless configuration and a stateful configuration is that a stateful server includes IPv6 addressing information and keeps a record of the IPv6 addresses that are leased out. Also, for the client side, the **ipv6 address dhcp** command is used instead of the **ipv6 address autoconfig** command. Example 23-7 shows the stateful DHCPv6 server configuration with stateful address information added and the M bit set instead of the O bit.

Example 23-7 Configuring a Router as a Stateful DHCPv6 Server

```

R1(config)# ipv6 unicast-routing
R1(config)# ipv6 dhcp pool M-FLAG-SET
R1(config-dhcpv6)# address prefix 2001:db8:1:1::/64 lifetime infinite infinite
R1(config-dhcpv6)# dns-server 2001:db8:acad:1::5
R1(config-dhcpv6)# domain-name cisco.com
R1(config-dhcpv6)# exit
R1(config)# interface g0/1
R1(config-if)# ipv6 address 2001:db8:1:1::1/64
R1(config-if)# ipv6 nd managed-config-flag
R1(config-if)# end
!After R3 is configured as a DHCP client, verify DHCP with the following
commands:
R1# show ipv6 dhcp pool
DHCPv6 pool: M-FLAG-SET
  Address allocation prefix: 2001:DB8:1:1::/64 valid 4294967295 preferred
  4294967295 (1 in use, 0 conflicts)
  DNS server: 2001:DB8:ACAD:1::5
  Domain name: cisco.com
  Active clients: 1
R1# show ipv6 dhcp binding
Client: FE80::32F7:DFF:FEA3:1640
  DUID: 0003000130F70DA31640
  Username: unassigned
  IA NA: IA ID 0x00060001, T1 43200, T2 69120
  Address: 2001:DB8:1:1:8902:60D6:E76:6C16
    preferred lifetime INFINITY, , valid lifetime INFINITY,
R1#

```

DHCP Troubleshooting

DHCP problems can arise for a multitude of reasons, such as software defects in operating systems, NIC drivers, or DHCP relay agents. However, the most common problems are configuration issues.

Resolving IPv4 Address Conflicts

An IPv4 address lease can expire on a client that is still connected to a network. If the client does not renew the lease, the DHCP server can reassign that IPv4 address to another client. When the client reboots, it requests an IPv4 address. If the DHCP server does not respond quickly, the client uses the last IPv4 address. Then two clients begin using the same IPv4 address, creating a conflict.

The **show ip dhcp conflict** command displays all address conflicts recorded by the DHCP server. The server uses the **ping** command to detect conflicts. The client uses Address Resolution Protocol (ARP) to detect clients. If an address conflict is detected, the address is removed from the pool and is not assigned until an administrator resolves the conflict.

Testing Connectivity Using a Static IP Address

When troubleshooting any DHCP issue, verify network connectivity by configuring static IPv4 address information on a client workstation. If the workstation cannot reach network resources with a statically configured IPv4 address, the root cause of the problem is not the DHCP server. At this point, network connectivity troubleshooting is required.

Verifying Switch Port Configuration


If the DHCP client cannot obtain an IPv4 address from the DHCP server at startup, attempt to obtain an IPv4 address from the DHCP server by manually forcing the client to send a DHCP request. If a switch lies between the client and the DHCP server and the client cannot obtain the DHCP configuration, switch port configuration issues might be the cause. These causes can include issues from trunking and channeling to STP and RSTP. PortFast configuration and edge port configurations resolve the most common DHCPv4 client issues that occur with an initial installation of a Cisco switch.

Testing DHCPv4 Operation on the Same Subnet or VLAN

Distinguishing whether DHCP is functioning correctly is important when the client is on the same subnet or VLAN as the DHCP server. If DHCP is working correctly when the client is on the same subnet or VLAN, the problem might be the DHCP relay agent. If the problem persists even when testing DHCP on the same subnet or VLAN as the DHCP server, the problem might be with the DHCP server.


DNS Operation

DNS is a distributed system of servers that resolve domain names to IP addresses. The domain name is part of the uniform resource identifier (URI), as Figure 23-8 shows.

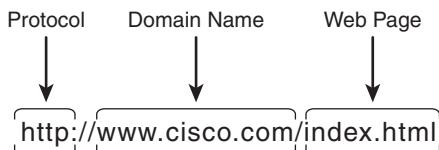Figure 23-8 URI Structure

NOTE: Many people use the terms *web address* and *universal (or uniform) resource locator (URL)*. However, *uniform resource identifier (URI)* is the correct formal term.

When you type a new URI in your browser, your computer uses DNS to send out a request to resolve the URI into an IP address. Figure 23-9 summarizes the DNS process.

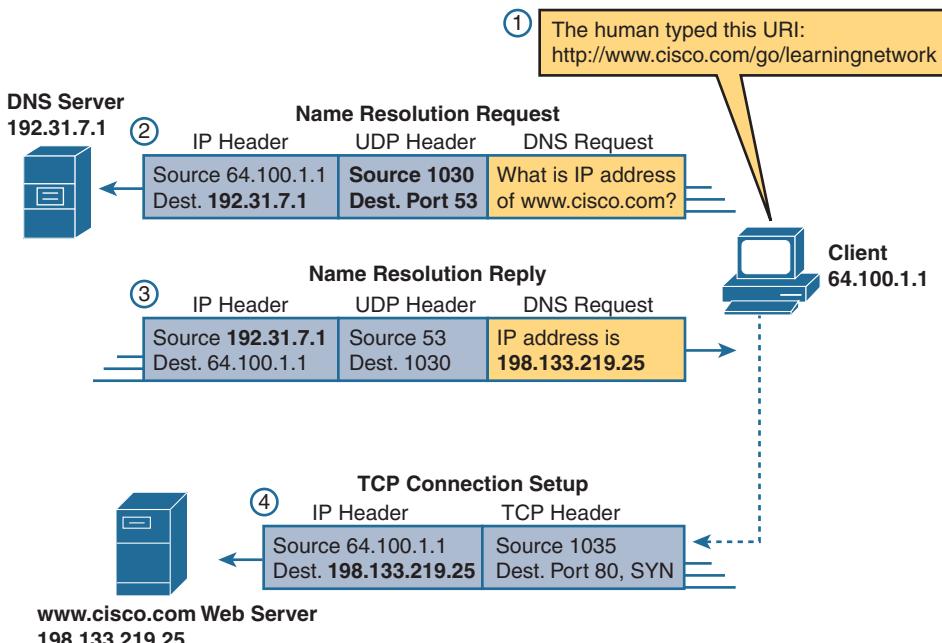Figure 23-9 DNS Process

The DNS server stores different types of resource records used to resolve names. These records contain the name, address, and type of record. Some of these record types follow:

- **A:** An end device IPv4 address
- **NS:** An authoritative name server
- **AAAA:** An end device IPv6 address (pronounced “quad-A”)
- **MX:** A mail exchange record

When a client makes a query, the server's DNS process first looks at its own records to resolve the name. If it cannot resolve the name using its stored records, it contacts other servers to resolve the name.

DNS root servers manage the top-domain suffixes, such as these:

- **.com:** Commercial businesses
- **.edu:** Educational organizations
- **.gov:** Government organizations
- **.mil:** Military organizations
- **.net:** Networking organizations, such as ISPs
- **.org:** Noncommercial organizations

Top-level DNS servers also exist for each country code, such as .ca (Canada), .de (Germany), .ru (Russia), and .cn (China).

Troubleshooting DNS

As a network administrator, your control over DNS issues is limited to two basic issues: DHCP server configurations and DNS server configurations.

In a small branch office, you are most likely using your ISP for all your DNS resolutions. Therefore, all the clients on your network will most likely have the IP address of the default gateway configured as the DNS server, as shown in the **ipconfig /all** output in Example 23-8.

Example 23-8 DNS Server As the Default Gateway

```
C:\> ipconfig /all

Windows IP Configuration
<output omitted>

DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
IPv4 Address. . . . . : 10.10.10.2 (Preferred)
Subnet Mask . . . . . : 255.255.255.0
Lease Obtained. . . . . : Sunday, November 13, 2016 1:28:51 PM
Lease Expires . . . . . : Monday, November 14, 2016 1:28:50 PM
Default Gateway . . . . . : 10.10.10.1
DHCP Server . . . . . : 10.10.10.1
DNS Servers . . . . . : 10.10.10.1
```

Therefore, issues with DNS are most likely due to issues with the default gateway router or the connection to your ISP. If you know the IP address of a publicly available server, you can verify that DNS is the issue if you can ping the IP address but not the URI.

In larger organizations, the network administrator is responsible for making sure the DHCP server is configured with accurate DNS IP addresses. Those DNS servers are most likely managed in-house to reduce the amount of outbound traffic to the public DNS servers. DNS server misconfiguration

could be the cause if end-user devices cannot resolve URIs. Therefore, the hierarchy of DNS servers within the organization should ensure that there are backup DNS servers and that, when a record doesn't exist, the DNS server can accurately forward the request to another DNS server.

Verifying Host IP Configuration

Whether manually configured or dynamically learned, every device on the network must have a valid IP address configuration. The following are some examples of those settings on Windows, Linux, and macOS.

IP Settings


To work correctly, an IP host needs to know these values:

- DNS server IP addresses
- Default gateway (router) IP address
- Device's own IP address
- Device's own subnet mask

Host IP Settings on Windows

In Windows 10, you can access IP address details from the Network and Sharing Center, as shown in Figure 23-10, to quickly view the four important settings: address, mask, router, and DNS.

Figure 23-10 Windows 10 Network Connection Details

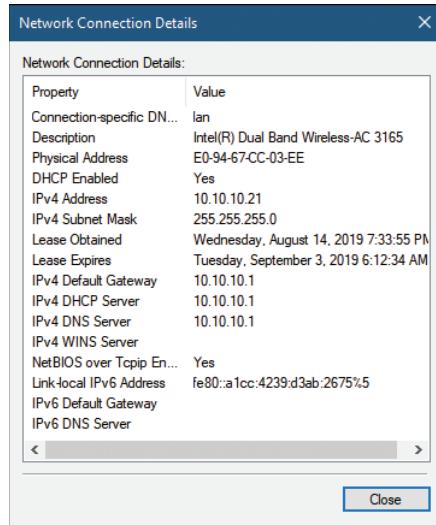

However, network administrators typically open a command line window to verify IP settings. All Windows versions support **ipconfig** and **ipconfig /all**, as shown in Example 23-9. Both list the address, mask, and default gateway. But you need **ipconfig /all** to see DNS server settings.

Also notice in Example 23-9 that the Ethernet adapter does not have a default gateway. That is because the computer is currently using the wireless adapter for network connectivity.

Example 23-9 Windows Command Line IP Settings Verification

```
C:\> ipconfig
<some output omitted>

Windows IP Configuration

Ethernet adapter Ethernet 2:

Connection-specific DNS Suffix . : cisco.com
IPv6 Address . . . . . : 2001:db8:acad:1008::3d
Link-local IPv6 Address . . . . . : fe80::ad66:4abd:d554:f703%20
IPv4 Address . . . . . : 10.24.247.53
Subnet Mask . . . . . : 255.255.255.255
Default Gateway . . . . . : ::

                                0.0.0.0

Wireless LAN adapter Wi-Fi:

Connection-specific DNS Suffix . : lan
Link-local IPv6 Address . . . . . : fe80::90cb:adf9:9331:8ded%13
IPv4 Address . . . . . : 10.10.10.73
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 10.10.10.1

C:\> ipconfig /all
<some output omitted>

Windows IP Configuration

Host Name . . . . . : ALLANJ
Primary Dns Suffix . . . . . : cisco.com
Node Type . . . . . : Hybrid
IP Routing Enabled. . . . . : No
WINS Proxy Enabled. . . . . : No
DNS Suffix Search List. . . . . : cisco.com
                                         lan

Wireless LAN adapter Wi-Fi:

Connection-specific DNS Suffix . : lan
Description . . . . . : Intel(R) Dual Band Wireless-AC 8265
```


```
Physical Address . . . . . : 88-B1-11-77-4A-D9
DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . . : Yes
Link-local IPv6 Address . . . . . : fe80::90cb:adf9:9331:8ded%13 (Preferred)
IPv4 Address. . . . . : 10.10.10.73 (Preferred)
Subnet Mask . . . . . : 255.255.255.0
Lease Obtained. . . . . : Saturday, August 31, 2019 12:17:12 PM
Lease Expires . . . . . : Tuesday, September 3, 2019 11:03:11 AM
Default Gateway . . . . . : 10.10.10.1
DHCP Server . . . . . : 10.10.10.1
DHCPv6 IAID . . . . . : 92844305
DHCPv6 Client DUID. . . . . : 00-01-00-01-21-8E-02-90-54-E1-AD-83-2C-77
DNS Servers . . . . . : 10.10.10.1
NetBIOS over Tcpip. . . . . : Enabled
```

C:\Users\allan>

Host IP Settings on macOS

On a Mac, open **Network Preferences > Advanced** to get the IP addressing information shown in Figure 23-11. The router IP address is the default gateway and also serves as the DNS server for this device.

Figure 23-11 macOS Network Settings

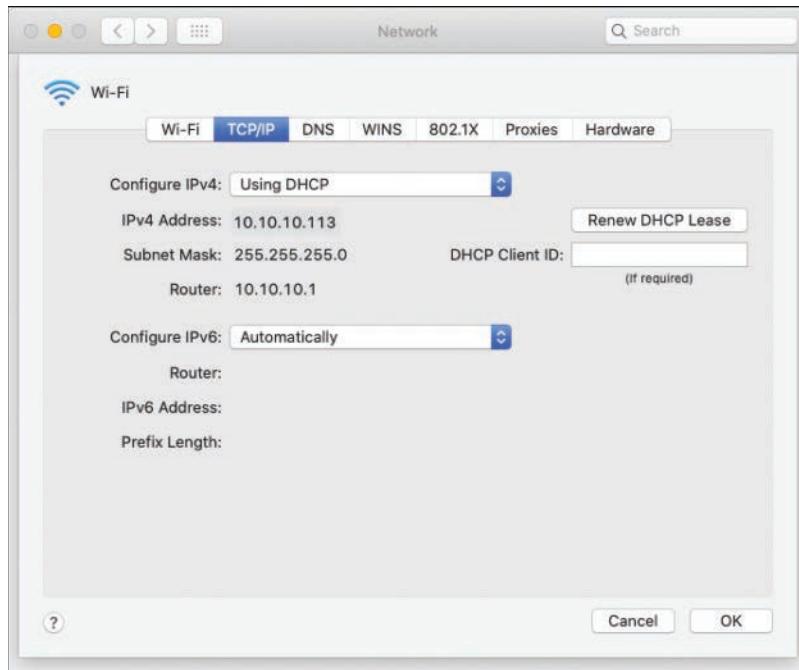

On the command line for macOS, use the **ifconfig** command to view IP addressing information, as shown in Example 23-10. Other useful commands include **networksetup -listallnetworkservices**, **networksetup -getinfo <network service>**, and **networksetup -getdnsservers <network service>** (not shown).

Example 23-10 macOS Command Line IP Settings Verification

```
MacBook-Air:~ Becky$ ifconfig en0
en0: flags=8863 mtu 1500
    ether c4:b3:01:a0:64:98
    inet6 fe80::c0f:1bf4:60b1:3adb%en0 prefixlen 64 secured scopeid 0x5
        inet 10.10.10.113 netmask 0xffffffff broadcast 10.10.10.255
            nd6 options=201
            media: autoselect
            status: active


MacBook-Air:~ Becky$ networksetup -listallnetworkservices
An asterisk (*) denotes that a network service is disabled.

iPhone USB
Wi-Fi
Bluetooth PAN
Thunderbolt Bridge

MacBook-Air:~ Becky$ networksetup -getinfo Wi-Fi
DHCP Configuration
IP address: 10.10.10.113
Subnet mask: 255.255.255.0
Router: 10.10.10.1
Client ID:
IPv6: Automatic
IPv6 IP address: none
IPv6 Router: none
Wi-Fi ID: c4:b3:01:a0:64:98
MacBook-Air:~ Becky$
```

Host IP Settings on Linux

Verifying IP settings using the GUI on a Linux machine differs depending on the Linux distribution and desktop interface. Figure 23-12 shows the Connection Information dialog box on the Ubuntu distro running the Gnome desktop.

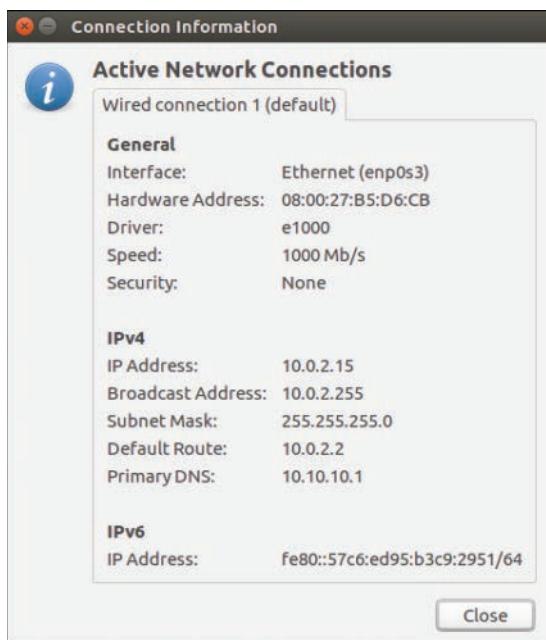Figure 23-12 Linux Ubuntu Connection Information

Example 23-11 shows the commands to verify the IP settings on a Linux machine.

Example 23-11 Linux OS Command Line IP Settings Verification

```
allan@allan-VirtualBox:~$ ifconfig enp0s3
enp0s3      Link encap:Ethernet HWaddr 08:00:27:b5:d6:cb
             inet addr:10.0.2.15 Bcast:10.0.2.255 Mask:255.255.255.0
               inet6 addr: fe80::57c6:ed95:b3c9:2951/64 Scope:Link
                     UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
                     RX packets:1332239 errors:0 dropped:0 overruns:0 frame:0
                     TX packets:105910 errors:0 dropped:0 overruns:0 carrier:0
                     collisions:0 txqueuelen:1000
                     RX bytes:1855455014 (1.8 GB)   TX bytes:13140139 (13.1 MB)

allan@allan-VirtualBox:~$ ip address
1: lo: <LOOPBACK,UP,LOWER_UP> mtu 65536 qdisc noqueue state UNKNOWN group default
  qlen 1000
    link/loopback 00:00:00:00:00:00 brd 00:00:00:00:00:00
    inet 127.0.0.1/8 scope host lo
      valid_lft forever preferred_lft forever
    inet6 ::1/128 scope host
      valid_lft forever preferred_lft forever
```

```
2: enp0s3: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast state UP
group default qlen 1000
    link/ether 08:00:27:b5:d6:cb brd ff:ff:ff:ff:ff:ff
    inet 10.0.2.15/24 brd 10.0.2.255 scope global dynamic enp0s3
        valid_lft 86130sec preferred_lft 86130sec
    inet6 fe80::57c6:ed95:b3c9:2951/64 scope link
        valid_lft forever preferred_lft forever
```

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 1	4
	6
	7
CCNA 200-301 Official Cert Guide, Volume 1	5
	8
Portable Command Guide	17

Wireless Concepts

CCNA 200-301 Exam Topics

- Explain the role and function of network components
- Describe wireless principles
- Compare Cisco Wireless Architectures and AP modes
- Describe physical infrastructure connections of WLAN components (AP, WLC, access/trunk ports, LAG)
- Describe AP and WLC management access connections (Telnet, SSH, HTTP, HTTPS, console, TACACS+/Radius)
- Describe wireless security protocols (WPA, WPA2, and WPA3)

Key Topics


Wireless specifications are detailed in the IEEE 802.11 family of standards, including wireless topologies, spectrum allocation, and wireless security. Today we review basic wireless network concepts.

Wireless Standards

The IEEE 802.11 WLAN standards define how radio frequencies (RFs) are used for wireless links. To avoid interference, different channels within an RF can be used.

RF Spectrum

The RF spectrum, shown in Figure 22-1, includes all types of radio communications, including the 2.4-GHz and 5-GHz frequencies used by wireless devices.

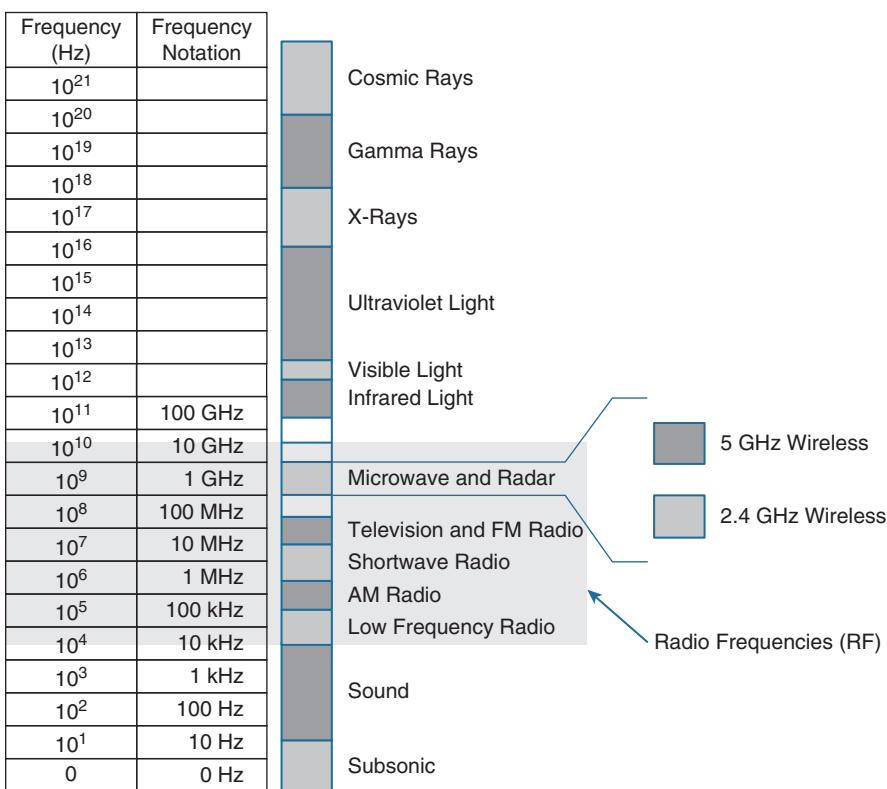Figure 22-1 RF Spectrum

Channels

A frequency range is typically called a *band* of frequencies. For example, a wireless LAN device with a 2.4-GHz antenna can actually use any frequency from 2.4000 to 2.4835 GHz. The 5-GHz band lies between 5.150 and 5.825 GHz.

The bands are further subdivided into frequency channels. Channels become particularly important when the wireless devices in a specific area become saturated. Each channel is known by a channel number and is assigned to a specific frequency. As long as the channels are defined by a national or international standards body, they can be used consistently in all locations. Figure 22-2 and Figure 22-3 show the channel layouts for the 2.4- and 5-GHz bands, respectively.

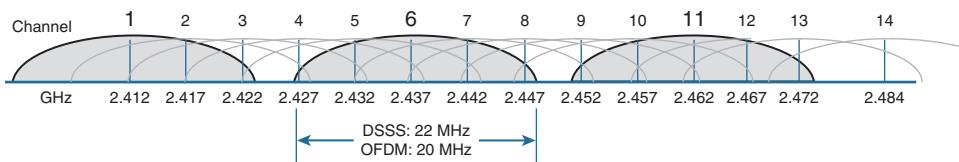
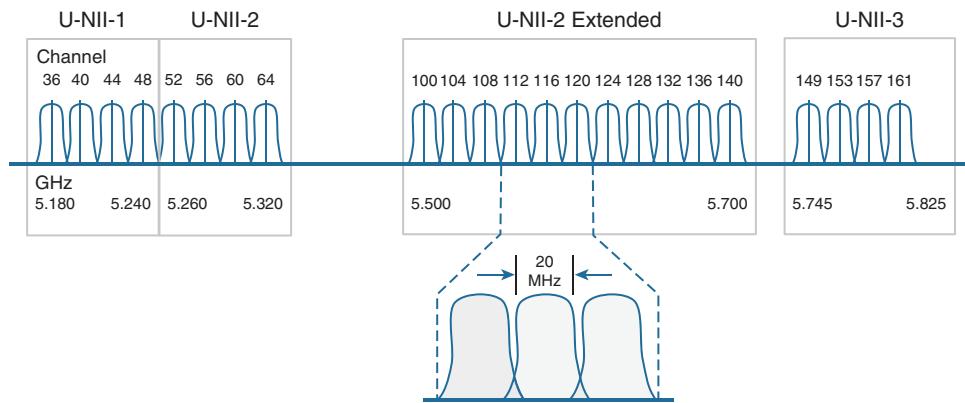
Figure 22-2 2.4-GHz Channels

Figure 22-3 5-GHz Channels

Notice in Figure 22-3 that the 5-GHz band consists of nonoverlapping channels. Each channel is allocated a frequency range that does not encroach on or overlap the frequencies allocated for any other channel. The same is not true of the 2.4-GHz band in Figure 22-2. The only way to avoid any overlap between adjacent channels is to configure access points (APs) to use only channels 1, 6, and 11.

802.11 Standards

Most of the standards specify that a wireless device must have one antenna to transmit and receive wireless signals on the specified radio frequency (2.4 GHz or 5 GHz). Some of the newer standards that transmit and receive at higher speeds require APs and wireless clients to have multiple antennas using the multiple input, multiple output (MIMO) technology. MIMO uses multiple antennas as both the transmitter and receiver to improve communication performance. Up to four antennas can be supported.

Various implementations of the IEEE 802.11 standard have been developed over the years. Table 22-1 highlights these standards.

Table 22-1 Summary of 802.11 Standards

IEEE WLAN Standard	Radio Frequency	Description
802.11	2.4 GHz	Speeds of up to 2 Mbps
802.11a	5 GHz	Speeds of up to 54 Mbps Small coverage area Less effective at penetrating building structures Not interoperable with 802.11b and 802.11g


IEEE WLAN Standard	Radio Frequency	Description
802.11b	2.4 GHz	<p>Speeds of up to 11 Mbps</p> <p>Longer range than 802.11a</p> <p>Better able to penetrate building structures</p>
802.11g	2.4 GHz	<p>Speeds of up to 54 Mbps</p> <p>Backward compatible with 802.11b with reduced bandwidth capacity</p>
802.11n	2.4 GHz 5 GHz	<p>Data rates ranging from 150 Mbps to 600 Mbps with a distance range of up to 70 m (230 feet)</p> <p>APs and wireless clients require multiple antennas using MIMO technology</p> <p>Backward compatible with 802.11a/b/g devices with limiting data rates</p>
802.11ac	5 GHz	<p>Provides data rates ranging from 450 Mbps to 1.3 Gbps (1300 Mbps) using MIMO technology</p> <p>Up to eight antennas can be supported</p> <p>Backward compatible with 802.11a/n devices with limiting data rates</p>
802.11ax	2.4 GHz 5 GHz	<p>Released in 2019 (latest standard)</p> <p>Also known as High-Efficiency Wireless (HEW)</p> <p>Higher data rates and increased capacity</p> <p>Handles many connected devices</p> <p>Improved power efficiency</p> <p>1 GHz and 7 GHz capable when those frequencies become available</p>

Wireless Topologies

The 802.11 standard identifies two main wireless topology modes: infrastructure mode and Independent Basic Service Set (IBSS). IBSS is also known as ad hoc mode. With the ubiquity of wireless networks, mesh topologies are now common.

Infrastructure Mode

With infrastructure mode, wireless clients interconnect via an AP. Figure 22-4 illustrates infrastructure mode terminology. Notice that the configuration of the APs to share the same SSID allows wireless clients to roam between BSAs.

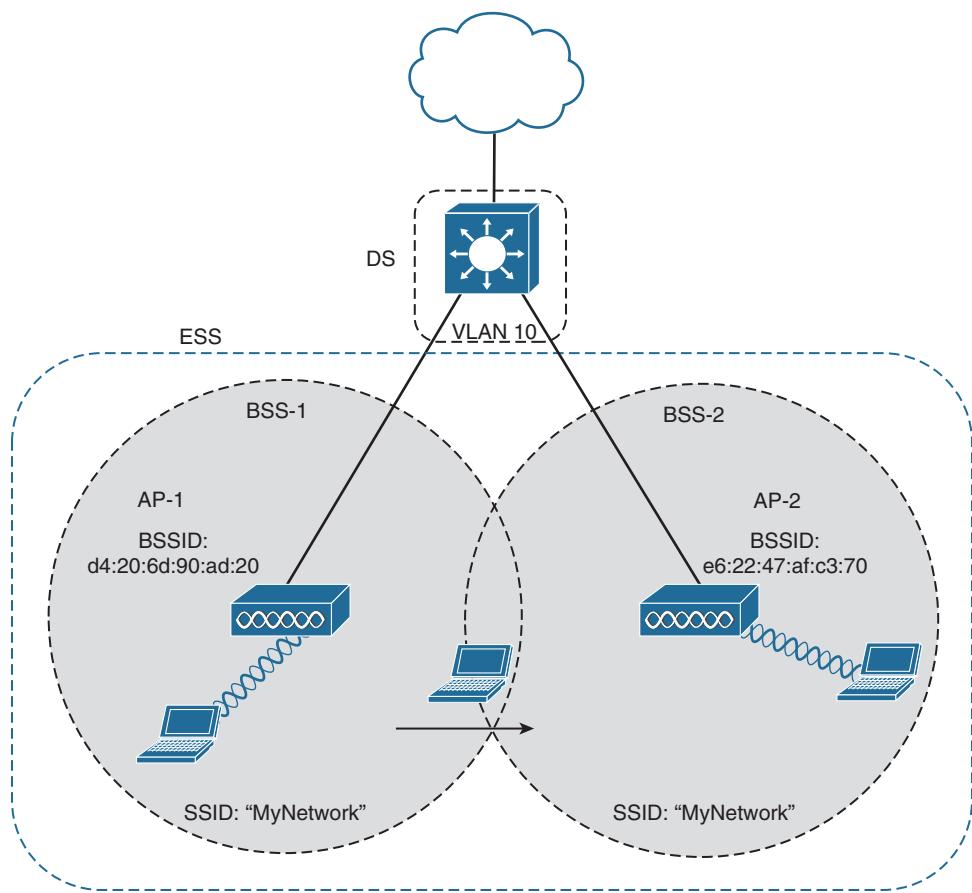Figure 22-4 Example of ESS Infrastructure Mode

Infrastructure mode terminology includes the following:


- **Basic service set (BSS):** This consists of a single AP interconnecting all associated wireless clients.
- **Basic service area (BSA):** This is the area that is bound by the reach of the AP's signal. The BSA is also called a *cell* (the gray area in Figure 22-4).
- **Basic service set identifier (BSSID):** This is the unique, machine-readable identifier for the AP that is in the format of a MAC address and is usually derived from the AP's wireless MAC address.
- **Service set identifier (SSID):** This is a human-readable, non-unique identifier used by the AP to advertise its wireless service.
- **Distribution system (DS):** APs connect to the network infrastructure using the wired DS, such as Ethernet. An AP with a wired connection to the DS is responsible for translating frames between 802.3 Ethernet and 802.11 wireless protocols.

- **Extended service set (ESS):** When a single BSS provides insufficient coverage, two or more BSSs can be joined through a common DS into an ESS. An ESS is the union of two or more BSSs interconnected by a wired DS. Each ESS is identified by its SSID, and each BSS is identified by its BSSID.

IBSS, or Ad Hoc Mode

In the 802.11 standard, Independent Basic Service Set (IBSS) is defined as two devices connected wirelessly in a peer-to-peer (P2P) manner without the use of an AP. One device takes the role of advertising the wireless network to clients. The IBSS allows two devices to communicate directly without the need for any other wireless devices, as shown in Figure 22-5. IBSSs do not scale well beyond 8 to 10 devices.


Figure 22-5 802.11 Independent Basic Service Set

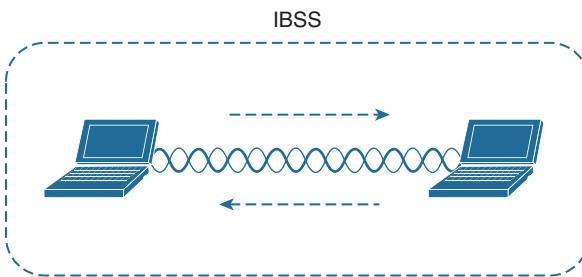

Mesh

Having a wired DS connecting all APs is not always practical or necessary. Instead, APs can be configured to connect in mesh mode. In this mode, APs bridge client traffic between each other, as shown in Figure 22-6.

Figure 22-6 Example of a Wireless Mesh Network

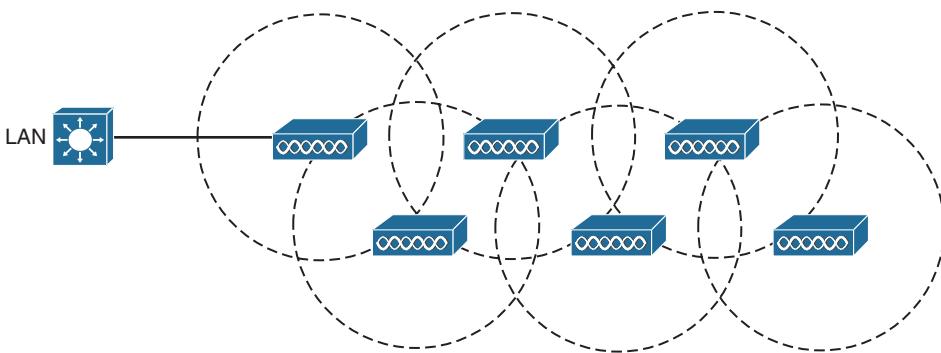

Each AP in the mesh maintains a BSS on one channel used by wireless clients. Then the APs bridge between each other using other channels. The mesh network runs its own dynamic routing protocol to determine the best path to the wired network.


AP Architectures

APs can be networked together in a variety of architectures. The size and scalability of the network determine which architecture is most suited for a given implementation.

Autonomous AP Architecture


An autonomous AP is a self-contained device with both wired and wireless hardware so that it can bridge to the wired VLAN infrastructure wireless clients that belong to SSIDs, as shown in Figure 22-7. Each autonomous AP must be configured with a management IP address so that it can be remotely accessed using Telnet, SSH, or a web interface. Each AP must be individually managed and maintained unless you use a management platform such as Cisco DNA Center.

Figure 22-7 Autonomous APs

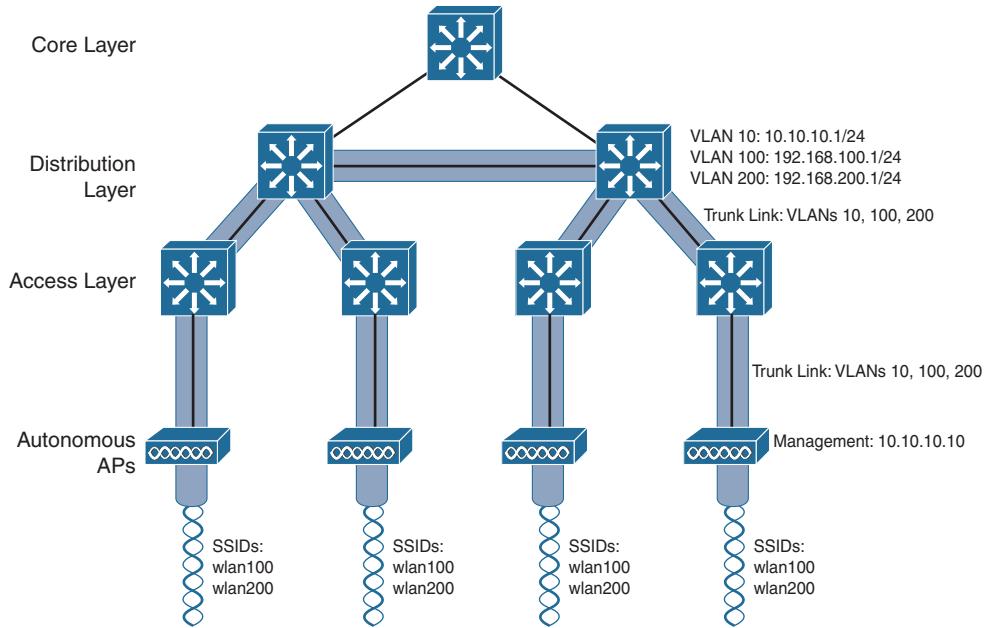

Cloud-Based AP Architecture

Cloud-based AP management is an alternative to purchasing a management platform. The AP management function is pushed into the Internet cloud. For example, Cisco Meraki is a cloud-based AP management service that allows you to automatically deploy Cisco Meraki APs. These APs can then be managed from the Meraki cloud web interface (dashboard). In Figure 22-8, the same APs shown in Figure 22-7 are now managed in the cloud.

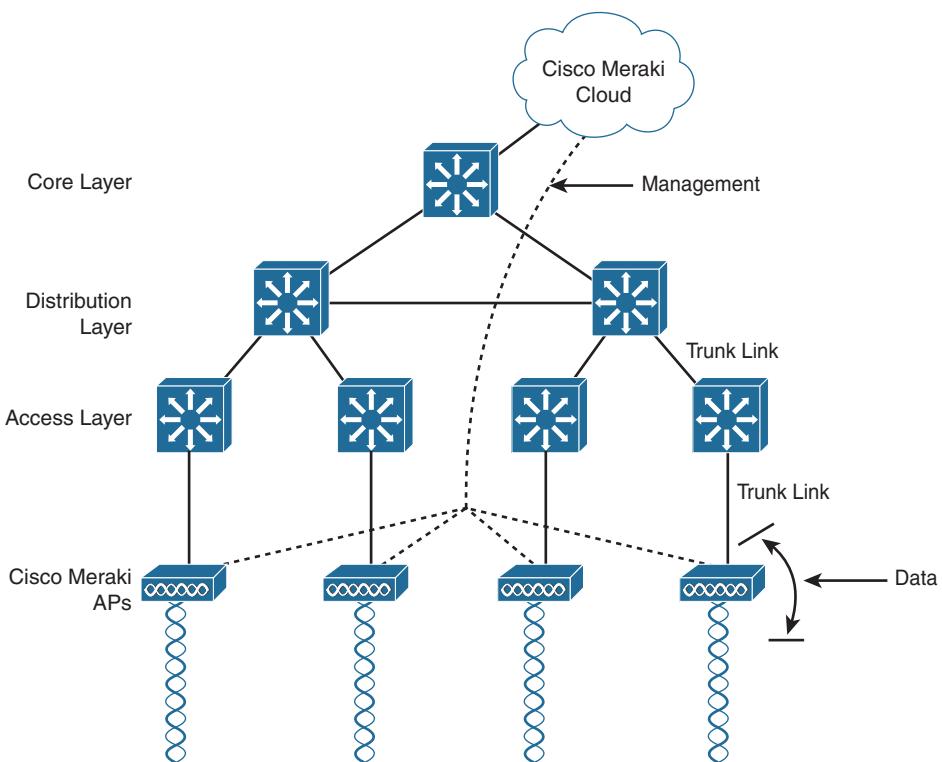
Figure 22-8 Cisco Meraki Cloud-Based AP Management

Notice that there are two distinct paths for data traffic and for management traffic, corresponding to the following two functions:

- **A control plane:** Traffic used to control, configure, manage, and monitor the AP itself
- **A data plane:** End-user traffic passing through the AP

Lightweight AP Architectures

Wireless LAN controllers (WLCs) use Lightweight Access Point Protocol (LWAPP) to communicate with lightweight access points (LAPs), as shown in Figure 22-9. LAPs are useful in situations where many APs are required in the network. They are “lightweight” because they only perform the 802.11 wireless operation for wireless clients. Each LAP is automatically configured and managed by the WLC.

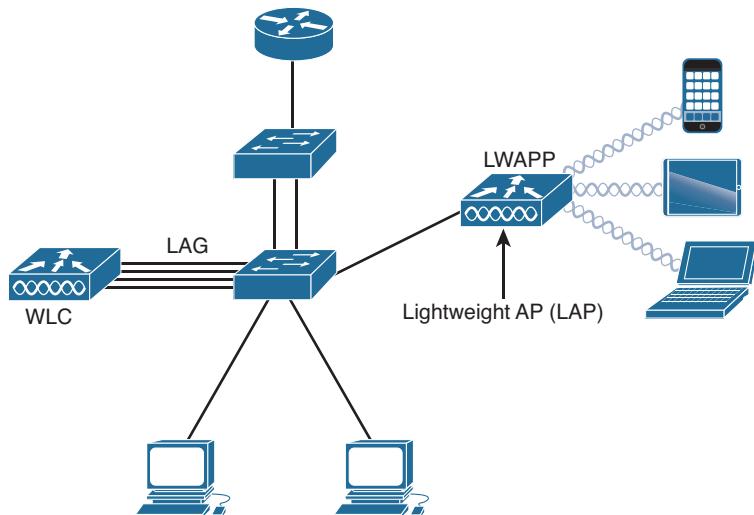Figure 22-9 Controller-Based AP Architecture

Notice in Figure 22-9 that the WLC has four ports connected to the switching infrastructure. These four ports are configured as a link aggregation group (LAG) so they can be bundled together. Much like EtherChannel, LAG provides redundancy and load balancing.

CAPWAP Operation


The division of labor between the WLC and LAPs is known as *split-MAC architecture*. The LAP must interact with wireless clients on some low level, known as the Media Access Control (MAC) layer. These functions must stay with the LAP hardware, closest to the clients. The management functions are not integral to handling frames but are things that should be centrally administered. Therefore, those functions can be moved to a centrally located platform away from the AP. Table 22-2 summarizes MAC functions of the LAP and WLC.

Table 22-2 Split-MAC Functions of the AP and WLC

AP MAC Functions	WLC MAC Functions
Beacons and probe responses	Authentication
Packet acknowledgments and retransmissions	Association and re-association of roaming clients
Frame queueing and packet prioritization	Frame translation to other protocols
MAC layer data encryption and decryption	Termination of 802.11 traffic on a wired interface

LWAPP has been replaced with the Control and Provisioning of Wireless Access Points (CAPWAP) tunneling protocol to implement these split-MAC functions. CAPWAP uses two tunnels—one for control and one for data—as shown in Figure 22-10 and described in the list that follows:

Figure 22-10 CAPWAP Control and Data Tunnels

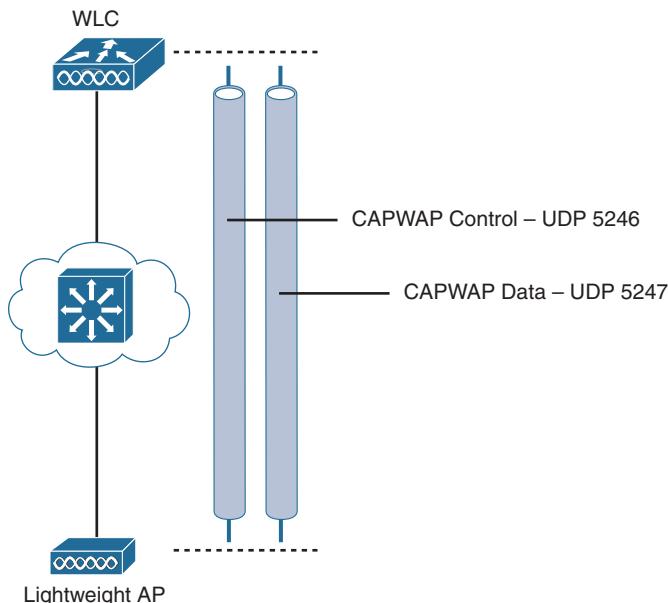

- **CAPWAP control message tunnel:** Carries exchanges that are used to configure the LAP and manage its operation. The control messages are authenticated and encrypted, so the LAP is securely controlled by only the appropriate WLC and then transported over the control tunnel using UDP port 5246.
- **CAPWAP data tunnel:** Used for packets traveling to and from wireless clients that are associated with the AP. Data packets are transported over the data tunnel using UDP port 5247 but are not encrypted by default. When data encryption is enabled for a LAP, packets are protected with Datagram Transport Layer Security (DTLS).

Wireless Security Protocols


Wireless traffic is inherently different from traffic traveling over a wired infrastructure. Any wireless device operating in the same frequency can hear the frames and potentially read them. Therefore, WLANs need to be secured to allow only authorized users and devices and to prevent eavesdropping and tampering of wireless traffic.

Wireless Authentication Methods

For wireless devices to communicate over a network, they must first associate with the AP. An important part of the 802.11 process is discovering a WLAN and subsequently connecting to it.

During this process, transmitted frames can reach any device within range. If the wireless connection is not secured, then others can read the traffic, as shown in Figure 22-11.

Figure 22-11 Open Wireless Network

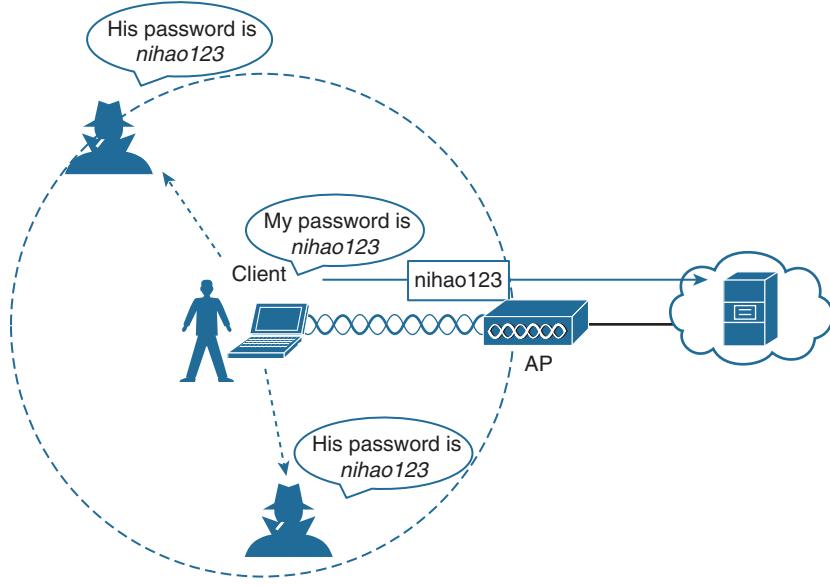

The best way to secure a wireless network is to use authentication and encryption systems.

Two types of authentication were introduced with the original 802.11 standard:

- **Open system authentication:** Should only be used in situations where security is of no concern. The wireless client is responsible for providing security such as by using a virtual private network (VPN) to connect securely.
- **Shared key authentication:** Provides mechanisms shown in Table 22-3 to authenticate and encrypt data between a wireless client and an AP. However, the password must be pre-shared between the parties to allow connection.

Table 22-3 Shared Key Authentication Methods

Authentication Method	Description
Wired Equivalent Privacy (WEP)	The original 802.11 specification designed to secure the data using the Rivest Cipher 4 (RC4) encryption method with a static key. However, the key never changes when exchanging packets. This makes WEP easy to hack. WEP is no longer recommended and should never be used.
Wi-Fi Protected Access (WPA)	A Wi-Fi Alliance standard that uses WEP but secures the data with the much stronger Temporal Key Integrity Protocol (TKIP) encryption algorithm. TKIP changes the key for each packet, making it much more difficult to hack.

Authentication Method	Description
WPA2	The current industry standard for securing wireless networks. It uses the Advanced Encryption Standard (AES) for encryption. AES is currently considered the strongest encryption protocol.
WPA3	The next generation of Wi-Fi security. All WPA3-enabled devices use the latest security methods, disallow outdated legacy protocols, and require the use of Protected Management Frames (PMF). However, devices with WPA3 are not yet readily available.

WPA and WPA2

Home routers typically have two choices for authentication: WPA and WPA2. WPA2 is the stronger of the two. WPA2 authentication methods included the following:

- **Personal:** Intended for home or small office networks, users authenticate using a pre-shared key (PSK). Wireless clients authenticate with the wireless router using a pre-shared password. No special authentication server is required.
- **Enterprise:** Intended for enterprise networks but requires a Remote Authentication Dial-In User Service (RADIUS) authentication server. Although more complicated to set up, it provides additional security. The device must be authenticated by the RADIUS server, and then users must authenticate using the 802.1X standard, which uses Extensible Authentication Protocol (EAP) for authentication.

802.1X/EAP

With open and WEP authentication, wireless clients are authenticated locally at the AP without further intervention. The scenario changes with 802.1X: The client uses open authentication to associate with the AP, and then the client authentication process occurs at a dedicated authentication server. Figure 22-11 shows the three-party 802.1X arrangement, which consists of the following entities:

- **Suplicant:** The client device that is requesting access.
- **Authenticator:** The network device that provides access to the network. In Figure 22-11, the AP forwards the supplicant's message to the WLC.
- **Authentication server (AS):** The device that permits or denies network access based on a user database and policies (usually a RADIUS server).

WPA3

WPA3 includes four features:

- **WPA3-Personal:** In WPA2-Personal, threat actors can listen in on the “handshake” between a wireless client and the AP and use brute-force attacks to try to guess the PSK. WPA3-Personal thwarts such attacks by using Simultaneous Authentication of Equals (SAE), a feature specified in the IEEE 802.11-2016. The PSK is never exposed, making it impossible for the threat actor to guess.

- **WPA3-Enterprise:** WPA3-Enterprise still uses 802.1X/EAP authentication. However, it requires the use of a 192-bit cryptographic suite and eliminates the mixing of security protocols for previous 802.11 standards. WPA3-Enterprise adheres to the Commercial National Security Algorithm (CNSA) suite, which is commonly used in high-security Wi-Fi networks.
- **Open networks:** Open networks in WPA2 send user traffic in unauthenticated plaintext. In WPA3, open or public Wi-Fi networks still do not use any authentication. However, they do use Opportunistic Wireless Encryption (OWE) to encrypt all wireless traffic.
- **IoT onboarding:** Although WPA2 included Wi-Fi Protected Setup (WPS) to quickly onboard devices that were not previously configured, WPS is vulnerable to a variety of attacks and is not recommended. Furthermore, IoT devices are typically headless, meaning they have no built-in GUI for configuration and need any easy way to get connected to the wireless network. Device Provisioning Protocol (DPP) was designed to address this need. Each headless device has a hard-coded public key. The key is typically stamped on the outside of the device or its packaging as a Quick Response (QR) code. The network administrator can scan the QR code and quickly onboard the device. Although DPP is not strictly part of the WPA3 standard, it will replace WPS over time.

Wireless Encryption Methods

Encryption is used to protect data. An intruder may be able to capture encrypted data, but he or she would not be able to decipher it in any reasonable amount of time. The following encryption protocols are used with wireless authentication:

- **Temporal Key Integrity Protocol (TKIP):** TKIP is the encryption method used by WPA. It provides support for legacy WLAN equipment and addresses the original flaws associated with the 802.11 WEP encryption method. It makes use of WEP but encrypts the Layer 2 payload using TKIP and carries out a message integrity check (MIC) in the encrypted packet to ensure that the message has not been altered.
- **Advanced Encryption Standard (AES):** AES is the encryption method used by WPA2. It is the preferred method because it is a very strong method of encryption. It uses Counter Cipher Mode with Block Chaining Message Authentication Code Protocol (CCMP), which allows destination hosts to recognize if the encrypted and nonencrypted bits have been altered.
- **The Galois/Counter Mode Protocol (GCMP):** This is a robust authenticated encryption suite that is more secure and more efficient than CCMP. GCMP is used in WPA3.

Table 22-4 summarizes the basic differences between WPA, WPA2, and WPA3. Each successive version is meant to replace prior versions and offer better security features. You should avoid using WPA and use WPA2 instead—at least until WPA3 becomes widely available on wireless client devices, APs, and WLCs.

Table 22-4 Wireless Authentication and Encryption Comparison

Feature	WPA	WPA2	WPA3
Authentication with pre-shared keys?	Yes	Yes	Yes
Authentication with 802.1X?	Yes	Yes	Yes
Encryption and MIC with TKIP?	Yes	No	No
Encryption and MIC with AES and CCMP?	Yes	Yes	No
Encryption and MIC with AES and GCMP?	No	No	Yes

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Switching, Routing, and Wireless Essentials	12
CCNA 200-301 Official Cert Guide, Volume 1	26
	27
	28
Portable Command Guide	23

WLAN Configuration

CCNA 200-301 Exam Topics

- Describe AP and WLC management access connections (Telnet, SSH, HTTP, HTTPS, console, TACACS+/RADIUS)
- Configure the components of a wireless LAN access for client connectivity using GUI only such as WLAN creation, security settings, QoS profiles, and advanced WLAN settings
- Configure WLAN using WPA2 PSK using the GUI

Key Topics

Today we review the steps to configure a wireless LAN controller (WLC). The figures show the graphical user interface (GUI) and menus from a Cisco 3504 Wireless Controller (see Figure 21-1). However, other WLC models have similar menus and features.


Figure 21-1 Cisco 3504 Wireless Controller




Logging Into a Cisco WLC

In order to configure a WLC, you need to be able to access it. The WLC requires an initial configuration and a management IP address before you can access it with a web browser through HTTP or HTTPS. This initial configuration requires a console connection. The WLC can also be further configured from the command-line interface (CLI) using Telnet or SSH. However, the CCNA exam focuses on GUI access to the WLC. Therefore, the rest of this day focuses on logging into and configuring a WLC that already has its basic configuration.

Log in to the WLC web interface, as shown in Figure 21-2.

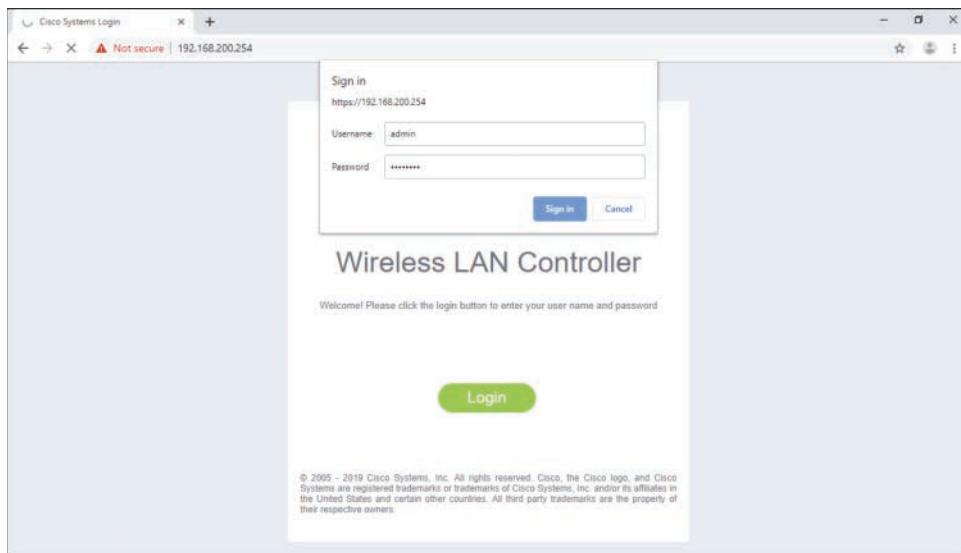Figure 21-2 WLC Login Window

The Network Summary page is a dashboard that provides a quick overview of the number of configured wireless networks, associated access points (APs), and active clients, as shown in Figure 21-3.

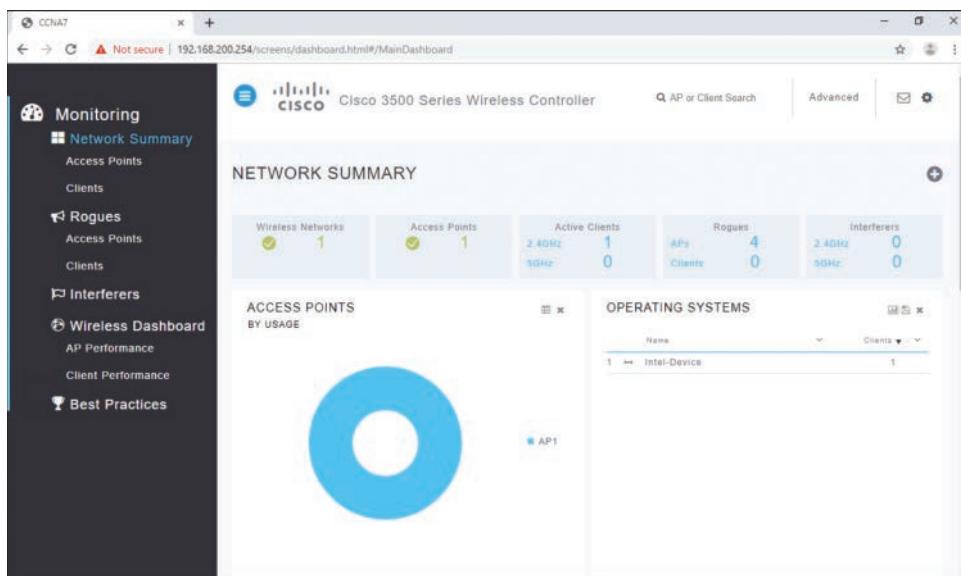Figure 21-3 Network Summary Dashboard

In the menu on the left side of the Network Summary page, click **Access Points** to view an overall picture of AP system information and performance, as shown in Figure 21-4.

Figure 21-4 Access Points

The screenshot shows the Cisco Wireless Controller (WLC) interface. On the left, there's a navigation sidebar with icons for Monitoring, Network Summary, Clients, Rogues, Interferers, Wireless Dashboard, AP Performance, Client Performance, and Best Practices. The main area is titled 'ACCESS POINT VIEW' and contains two tabs: 'GENERAL' and 'PERFORMANCE SUMMARY'. The 'GENERAL' tab displays details like AP Name (AP1), Location (default location), MAC Address (2c:4f:52:60:37:e8), IP Address (192.168.200.3), and Model / Domain (AIR-AP1815I-B-K9 / 802.11bg-A). The 'PERFORMANCE SUMMARY' tab provides a detailed look at 2.4GHz and 5GHz performance metrics such as Number of clients, Configured Rate, Usage Traffic, Throughput, Transmit Power, Noise, Channel Utilization, Interference, Traffic, Air Quality, Admin Status, and Clean Air Status.

Click **Advanced** to access the advanced Summary page, as shown in Figure 21-5. From here, you can access all the features of the WLC.

Figure 21-5 WLC Advanced Features

This screenshot shows the 'Monitor' tab of the Cisco WLC Advanced Features page. The top navigation bar includes links for MONITOR, WLAN, CONTROLLER, WIRELESS, SECURITY, MANAGEMENT, COMMANDS, HELP, and FEEDBACK. The left sidebar has a tree view with nodes like Summary, Access Points, Cisco CleanAir, Statistics, CDP, Rogues, Clients, Sleeping Clients, Multicast, Applications, and Lync. The main content area shows a summary of 1 Access Points Supported, featuring a graphic of a Cisco 3500 Series Wireless Controller with various ports and indicators. Below this are sections for Controller Summary (Management IP Address: 192.168.200.254, Service Port: 0.0.0.0, Version: 8.5.140.0) and Rogue Summary (Active Rogue APs: 35, Active Rogue Clients: 10, Adhoc Rogues: 0, Rogues on Wired Network: 0). A Session Timeout section is also present.


Configuring a WLC with a WLAN

You can configure a WLAN directly on the Cisco 3504 Wireless Controller so that it serves as an AP for wireless clients. However, a WLC is more commonly used in enterprise networks to manage a number of APs.

Configuring a RADIUS Server

An enterprise WLAN typically uses a RADIUS server for user and device authentication before allowing wireless clients to associate with an AP. To configure the WLC with the RADIUS server information, click the **SECURITY** tab > **RADIUS** > **Authentication** to navigate to the screen in Figure 21-6. Click **New** to add the RADIUS server.

Figure 21-6 Accessing a RADIUS Authentication Server's Configuration

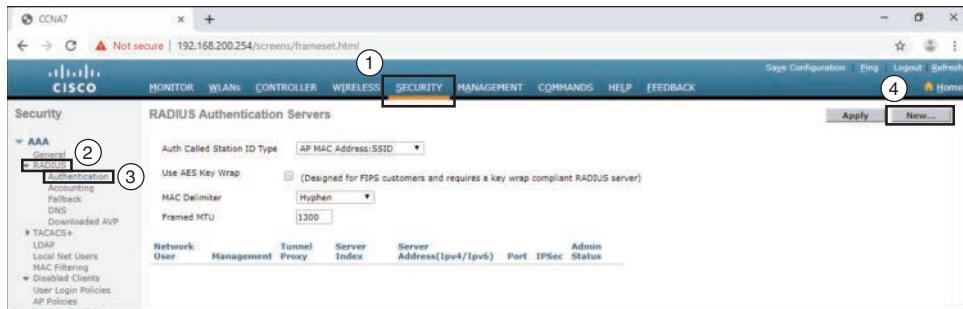

Configuring a New Interface

Each WLAN configured on the WLC needs its own virtual interface. The WLC has five physical ports for data traffic. Each physical port can be configured to support multiple WLANs, each on its own virtual interface. The virtual interface is typically named with a VLAN number and associated to that VLAN. Use the following steps to configure a new interface:

- Step 1.** Create a new interface by clicking **CONTROLLER** > **Interfaces** > **New**, as shown in Figure 21-7.


Figure 21-7 Creating a New Virtual Interface




- Step 2.** Configure an interface name and VLAN ID as shown in Figure 21-8, which shows the interface name being set to **vlan5** and the VLAN ID being set to **5**. Click **Apply** to create the new interface.

Figure 21-8 Configuring the Interface Name and VLAN ID

- Step 3.** On the Edit page for the interface, configure the physical port number and IP addressing information (see Figure 21-9).

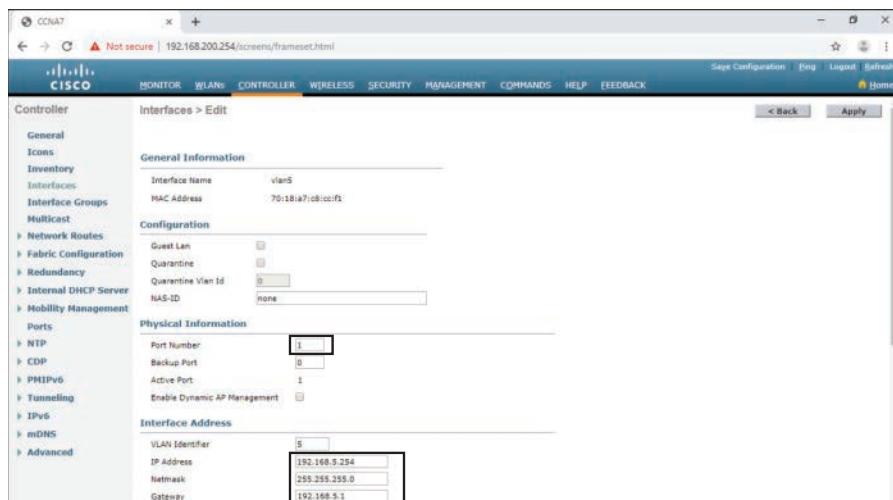
Figure 21-9 Configuring Port and IP Addressing

- Step 4.** In order to forward DHCP messages to a dedicated DHCP server, configure the DHCP server address as shown in Figure 21-10.

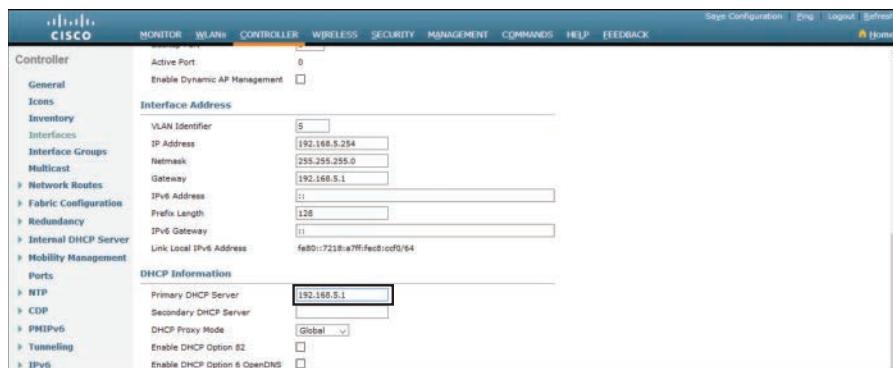Figure 21-10 Configuring the DHCP Server Address

Step 5. Scroll to the top and click **Apply**, as shown in Figure 21-11. Click **OK** in the warning message.

Figure 21-11 Applying a New Virtual Interface

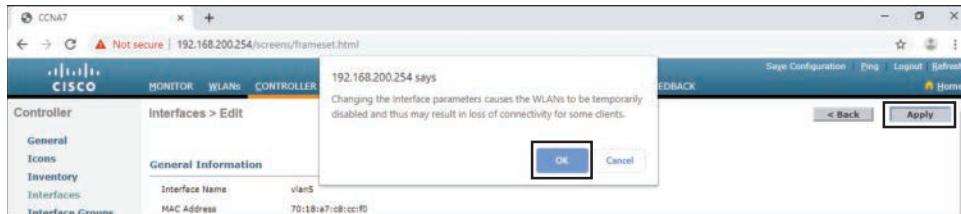

Step 6. To verify the newly configured virtual interface, click **Interfaces**. The new `vlan5` interface is now shown in the list of interfaces with its IPv4 address, as shown in Figure 21-12.

Figure 21-12 Verifying a New Virtual Interface

Controller Interfaces							Entries 1 - 7 of 7
General	Interface Name	VLAN Identifier	IP Address	Interface Type	Dynamic AP Management	IPv6 Address	
Icons	management	untagged	192.168.200.254	Static	Enabled	::/128	
Inventory	redundancy-management	untagged	0.0.0.0	Static	Not Supported		
Interfaces	redundancy-port	untagged	0.0.0.0	Static	Not Supported		
Interface Groups	service-port	N/A	0.0.0.0	DHCP	Disabled	::/128	
Multicast	user_wlan	10	192.168.10.254	Dynamic	Disabled	::/128	
Network Routes	virtual	N/A	1.1.1.1	Static	Not Supported		
Fabric Configuration	vlan5	5	192.168.5.254	Dynamic	Disabled	::/128	
Redundancy							

Configuring a WPA2 Enterprise WLAN

By default, all newly created WLANs on the WLC use WPA2 with Advanced Encryption System (AES). 802.1X is the default key management protocol used to communicate with the RADIUS server. The WLC is already configured with the IP address of the RADIUS server.

Configuring a new WLAN for interface `vlan5` on the WLC involves the following steps:


Step 1. To create a new WLAN, click the **WLANs** tab and then **Go**, as shown Figure 21-13.

Figure 21-13 Creating a New WLAN

WLANs							Entries 1 - 1 of 1
WLANs	WLANS	Current Filter:	None	[Change Filter] [Clear Filter]	Create New	Go	
WLANs	WLANS						
WLANs	WLANS						
Advanced	Advanced						


- Step 2.** Configure the WLAN name and SSID. In Figure 21-14, the SSID is also used as the profile name and uses the same ID as vlan5, created earlier.

Figure 21-14 Setting the Profile Name and SSID

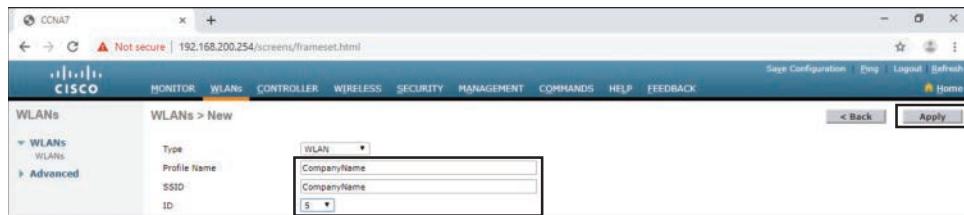


- Step 3.** To enable the WLAN for vlan5, change the status to **Enabled** and choose **vlan5** from the Interface/Interface Group(G) dropdown list. Click **Apply** and click **OK** to accept the popup message, as shown Figure 21-15.


Figure 21-15 Enabling the WLAN

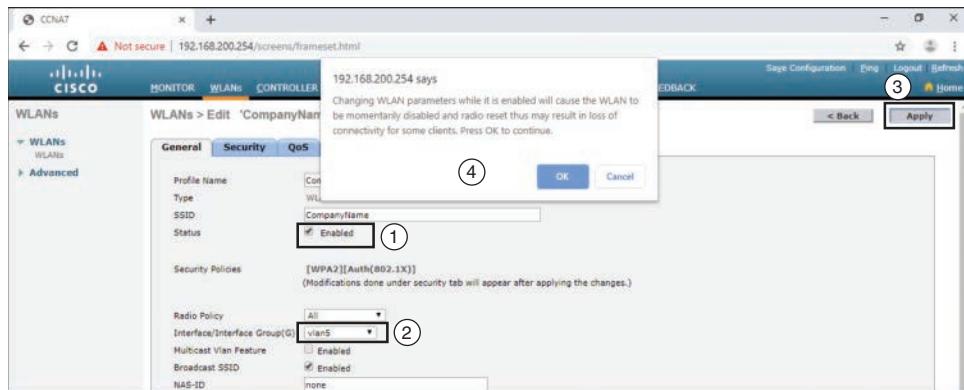


- Step 4.** To verify AES and the 802.1X defaults, click the **Security** tab to view the default security configuration for the new WLAN, as shown in Figure 21-16. The WLAN should use WPA2 security with AES encryption. Authentication traffic is handled by 802.1X between the WLC and the RADIUS server.

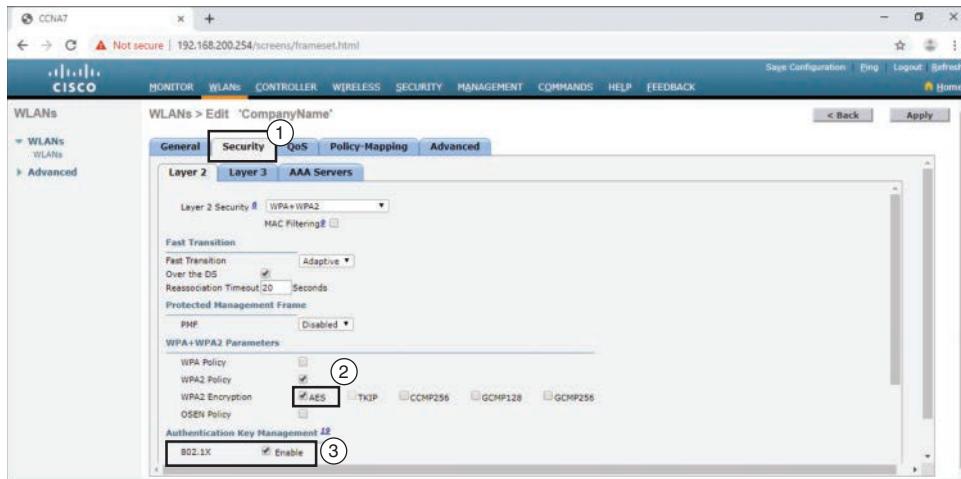Figure 21-16 Verifying Security

Step 5. To configure WLAN security to use the RADIUS server, click the **AAA Servers** tab, as shown in Figure 21-17. In the dropdown box, select the RADIUS server that was configured on the WLC previously.

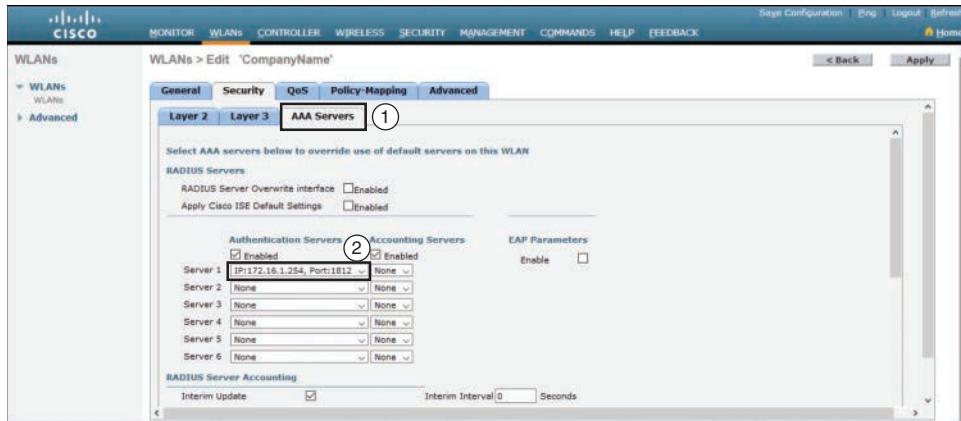Figure 21-17 Associating the RADIUS Server to the WLAN

Step 6. To configure a QoS profile, click the **QoS** tab, as shown in Figure 21-18. From here, you can configure a QoS profile that adheres to the company policy. Silver (best effort) is currently selected. Click **Apply** to apply the changes.

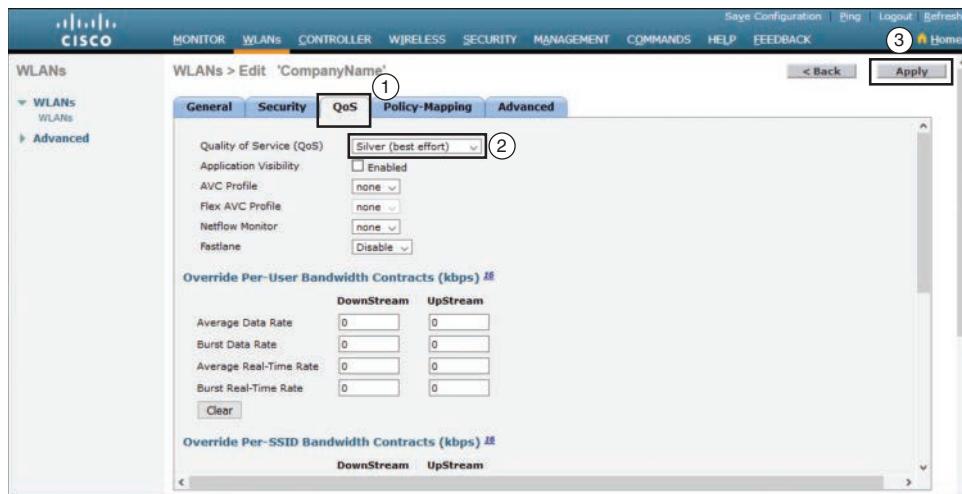Figure 21-18 Configuring a QoS Profile

Step 7. To verify that the new WLAN is listed and enabled, click the **WLANs** submenu on the left. In Figure 21-19, notice that the WLAN **CompanyName** is enabled and is using WPA2 security with 802.1X authentication.

Figure 21-19 Verifying the New WLAN

WLANS						
WLANS						
Current Filter:		None [Change Filter] [Clear Filter]				
		[Create New] Go				
WLAN ID	Type	Profile Name	WLAN SSID	Admin Status	Security Policies	
1	WLAN	Wireless_LAN	Wireless_LAN	Enabled	[WPA2][Auth(PSK)]	<input type="checkbox"/>
5	WLAN	CompanyName	CompanyName	Enabled	[WPA2][Auth(802.1X)]	<input type="checkbox"/>

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Switching, Routing, and Wireless Essentials	13
CCNA 200-301 Official Cert Guide, Volume 1	29
Portable Command Guide	23

This page intentionally left blank

LAN Security and Device Hardening

CCNA 200-301 Exam Topics

- Configure device access control using local passwords
- Configure network devices for remote access using SSH
- Differentiate authentication, authorization, and accounting concepts
- Configure Layer 2 security features (DHCP snooping, dynamic ARP inspection, and port security)

Key Topics

Today's review is a whirlwind of topics related to LAN security and device hardening. We will review endpoint security, access control, port security, and LAN threat mitigation techniques.

Endpoint Security

Endpoints are hosts including laptops, desktops, servers, and IP phones. In addition, a network that has a bring your own device (BYOD) policy includes employee-owned devices. Endpoints are particularly susceptible to malware-related attacks that originate through email or web browsing. If an endpoint is infiltrated, it can become a point from which a threat actor can gain access to critical system devices, such as servers and sensitive information.

Endpoints are best protected by host-based Cisco Advanced Malware Protection (AMP) software. AMP products include endpoint solutions such as Cisco AMP for Endpoints. In addition, content security appliances provide fine-grained control over email and web browsing for an organization's users.

Cisco has two content security appliance products:

- Cisco Email Security Appliance (ESA)
- Cisco Web Security Appliance (WSA)

Cisco ESA


Cisco ESA is special device designed to monitor email's primary protocol, Simple Mail Transfer Protocol (SMTP). Cisco ESA can do the following:

- Block known threats
- Remediate against stealth malware that evades initial detection
- Discard emails with bad links

- Block access to newly infected sites
- Encrypt content in outgoing email to prevent data loss

Figure 20-1 shows the Cisco ESA process of discarding a targeted phishing attack.

Figure 20-1 Cisco ESA Discards Bad Emails

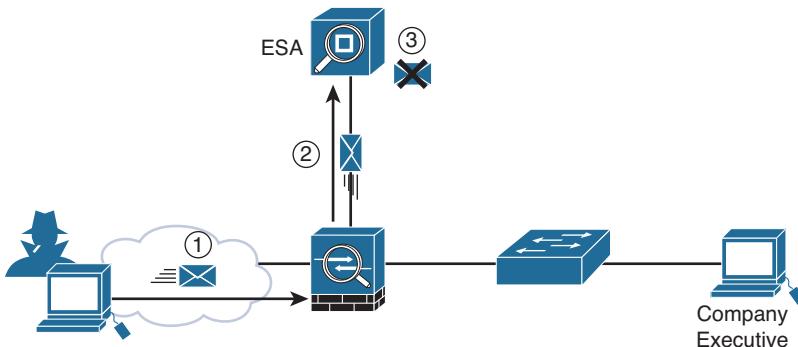

The process shown in Figure 20-1 is as follows:


- Step 1.** Threat actor sends a phishing attack to an important host on the network.
- Step 2.** The firewall forwards all email to the ESA.
- Step 3.** The ESA analyzes the email, logs it, and discards it.

Cisco WSA

Cisco WSA combines advanced malware protection, application visibility and control, acceptable use policy controls, and reporting. Cisco WSA provides complete control over how users access the Internet. Certain features and applications, such as chat, messaging, video, and audio can be allowed, restricted with time and bandwidth limits, or blocked, according to the organization's requirements. WSA can perform blacklisting of URLs, URL filtering, malware scanning, URL categorization, Web application filtering, and encryption and decryption of web traffic.

Figure 20-2 shows a corporate user attempting to connect to a known blacklisted site.

Figure 20-2 Cisco WSA Discard Packet Destined for a Blacklisted Site

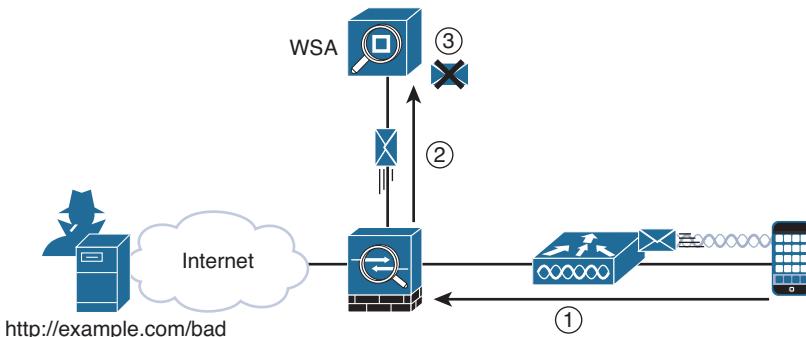

The process shown in Figure 20-2 is as follows:

- Step 1.** A user attempts to connect to a website.
- Step 2.** The firewall forwards the website request to the WSA.
- Step 3.** The WSA evaluates the URL and determines it is a known blacklisted site. The WSA discards the packet and sends an access denied message to the user.

Access Control

Many types of authentication can be performed on networking devices to control access, and each method offers varying levels of security.

Local Authentication

The simplest method of remote access authentication is to configure a login and password combination on console, vty lines, and aux ports, as shown in Example 20-1. This method, however, provides no accountability, and the password is sent in plaintext. Anyone with the password can gain entry to the device.

Example 20-1 Local Password Only Authentication

```
R1(config)# line vty 0 4
R1(config-line)# password ci5c0
R1(config-line)# login
```

Instead of using a shared password with no usernames, you can use the **username username secret password** command to configure local username/password pairs. Require a username/password pair with the **login local** line configuration command. Use the **no password** line configuration command to remove any configured passwords. In Example 20-2, a username/password pair is configured and applied to the lines, and then Telnet access is tested from a switch. Notice that the password has been hashed using MD5 encryption, indicated by the **5** following **secret** in the output from the **show run** command.

Example 20-2 Local Username/Password Authentication

```
R1(config)# username allanj secret 31daysCCNA
R1(config)# line console 0
R1(config-line)# login local
R1(config-line)# no password
R1(config-line)# line vty 0 15
R1(config-line)# login local
R1(config-line)# no password
```

```
S1# telnet 10.10.10.1
```

```

Trying 10.10.10.1 ...Open

User Access Verification

Username: allanj
Password:
R1> enable
Password:
R1# show run | include username
username allanj secret 5 $1$mERr$e/edsAr7D0CyM/z3tMvyL/
R1#

```

SSH Configuration

Secure Shell (SSH) is considered a security best practice because Telnet (port 23) uses insecure plaintext transmission of both the login and the data across the connection. SSH (port 22) is a more secure form of remote access:

- It requires a username and a password, both of which are encrypted during transmissions.
- The username and password can be authenticated using the local database method.
- It provides more accountability because the username is recorded when a user logs in.

Example 20-3 illustrates SSH and local database methods of remote access.

Example 20-3 Configuring SSH Remote Access on a Switch

```

S1# show ip ssh
SSH Disabled-version 1.99
%Please create RSA keys to enable SSH (of at least 768 bits size) to enable SSH v2.
Authentication timeout: 120 secs; Authentication retries:3
S1# conf t
S1(config)# ip domain-name cisco.com
S1(config)# crypto key generate rsa
The name for the keys will be: S1.cisco.com
Choose the size of the key modulus in the range of 360 to 4096 for your
General Purpose Keys. Choosing a key modulus greater than 512 may take
a few minutes.

How many bits in the modulus [512]:1024
% Generating 1024 bit RSA keys, keys will be non-exportable...
[OK] (elapsed time was 4 seconds)

```

```
*Mar 1 02:20:18.529: %SSH-5-ENABLED: SSH 1.99 has been enabled
S1(config)# line vty 0 15
S1(config-line)# login local
S1(config-line)# transport input ssh
S1(config-line)# username allanj secret 31daysCCNA
!The following commands are optional SSH configurations.
S1(config)# ip ssh version2
S1(config)# ip ssh authentication-retries 5
S1(config)# ip ssh time-out 60
S1(config)# end
S1# show ip ssh
SSH Enabled - version 2.0
Authentication timeout: 60 secs; Authentication retries: 5
S1#
```

The following steps occur in Example 20-3:

- Step 1.** Verify that the switch supports SSH using the **show ip ssh** command. If the command is not recognized, you know that SSH is not supported.
- Step 2.** Configure a DNS domain name with the **ip domain-name** global configuration command.
- Step 3.** Configure the switch using the **crypto key generate rsa** command to generate an RSA key pair and automatically enable SSH. When generating RSA keys, you are prompted to enter a modulus length. Cisco recommends a minimum modulus size of 1024 bits, as in Example 20-3.

NOTE: To remove the RSA key pair, use the **crypto key zeroize rsa** command. This disables the SSH service.

- Step 4.** Change the vty lines to use usernames, with either locally configured usernames or an authentication, authorization, and accounting (AAA) server. In Example 20-3, the **login local** vty subcommand defines the use of local usernames, replacing the **login vty** subcommand.
- Step 5.** Configure the switch to accept only SSH connections with the **transport input ssh** vty subcommand. (The default is **transport input telnet**.)
- Step 6.** Add one or more **username password** global configuration commands to configure username/password pairs.
- Step 7.** If desired, modify the default SSH configuration to change the SSH version to 2.0, the number of authentication tries, and the timeout, as in Example 20-3.
- Step 8.** Verify your SSH parameters by using the **show ip ssh** command.

Switch Port Hardening

Router interfaces must be activated with the **no shutdown** command before they become operational. The opposite is true for Cisco Catalyst switches: an interface is activated when a device is connected to the port. To provide out-of-the-box functionality, Cisco chose a default configuration that includes interfaces that work without any configuration, including automatically negotiating speed and duplex. In addition, all interfaces are assigned to the default VLAN 1.

This default configuration exposes switches to some security threats. The following are security best practices for unused interfaces:

- Administratively disable the interface by using the **shutdown** interface subcommand.
- Prevent VLAN trunking by making the port a nontrunking interface using the **switchport mode** access interface subcommand.
- Assign the port to an unused VLAN by using the **switchport access vlan number** interface subcommand.
- Set the native VLAN to not be VLAN 1 but to instead be an unused VLAN, using the **switchport trunk native vlan *vlan-id*** interface subcommand.

Even when you shut down unused ports on the switches, if a device is connected to one of those ports and the interface is enabled, trunking can occur. In addition, all ports are in VLAN 1 by default. A good practice is to put all unused ports in a black hole VLAN. Example 20-4 demonstrates this best practice, assuming that ports 20–24 are unused.

Example 20-4 Assigning Unused Ports to a Black Hole VLAN

```
S1(config)# vlan 999
S1(config-vlan)# name BlackHole
S1(config-vlan)# interface range fa0/20 - 24
S1(config-if-range)# shutdown
S1(config-if-range)# switchport mode access
S1(config-if-range)# switchport access vlan 999
S1(config-if-range)#+
```

AAA

Configuring usernames and passwords on all your network devices is not very scalable. A better option is to use an external server to centralize and secure all username/password pairs. To address this issue, Cisco devices support the authentication, authorization, and accounting (AAA) framework to help secure device access.

Cisco devices support two AAA authentication protocols:

- Terminal Access Controller Access Control System Plus (TACACS+, pronounced as “tack-axe plus”)
- Remote Authentication Dial-In User Service (RADIUS)


The choice of TACACS+ or RADIUS depends on the needs of the organization. For example, a large ISP might select RADIUS because it supports the detailed accounting required for billing users. An organization with various user groups might select TACACS+ because it requires authorization policies to be applied on a per-user or per-group basis. Table 20-1 compares TACACS+ and RADIUS.

Table 20-1 Comparison of TACACS+ and RADIUS

Feature	TACACS+	RADIUS
Most often used for	Network devices	Users
Transport protocol	TCP	UDP
Authentication port number(s)	49	1645, 1812
Protocol encrypts the password	Yes	Yes
Protocol encrypts entire packet	Yes	No
Supports function to authorize each user to a subset of CLI commands	Yes	No
Defined by	Cisco	RFC 2865

Both TACACS+ and RADIUS use a client/server model, where an authenticating device is the client talking to an AAA server. Figure 20-3 shows a simplified view of the process, where a user is attempting to connect to a switch for management purposes.

Figure 20-3 A Simplified View of AAA

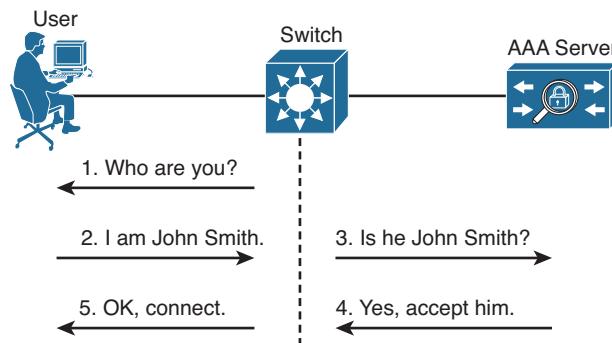


802.1X

IEEE 802.1X is a standard port-based access control and authentication protocol. It is ideal for restricting unauthorized access through publicly available LAN devices, such as switches and wireless access points.

802.1X defines three roles for devices in the network, as Figure 20-4 shows:


Figure 20-4 802.1X Roles

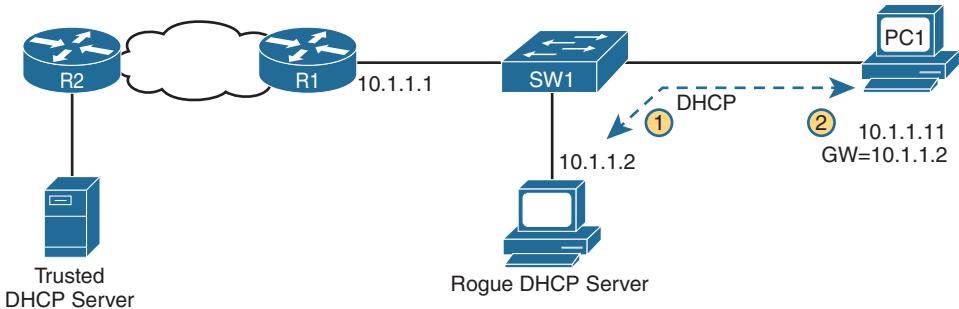

- **Client (supplicant):** This is usually the 802.1X-enabled port on the device that requests access to LAN and switch services and responds to requests from the switch. In Figure 20-4, the device is a PC running 802.1X-compliant client software.
- **Switch (authenticator):** The switch controls physical access to the network, based on the authentication status of the client. The switch acts as a proxy between the client and the authentication server. It requests identifying information from the client, verifies that information with the authentication server, and relays a response to the client.
- **Authentication server:** The authentication server performs the actual authentication of the client. The authentication server validates the identity of the client and notifies the switch about whether the client is authorized to access the LAN and switch services. Because the switch acts as the proxy, the authentication service is transparent to the client. RADIUS is the only supported authentication server.

Figure 20-5 shows the authentication flows for a typical 802.1X process.

Figure 20-5 802.1X Authentication Flows

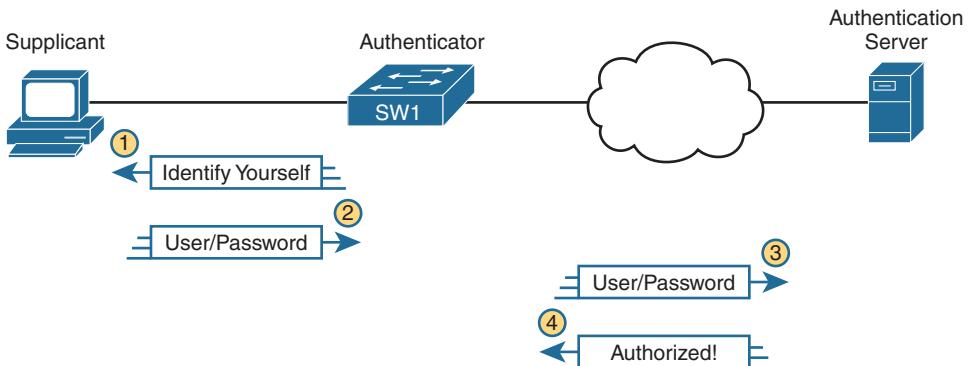

The 802.1X process is summarized as follows:

- The RADIUS authentication server is configured with usernames and passwords.
- Each LAN switch is enabled as an 802.1X authenticators, is configured with the IP address of the authentication server, and has 802.1X enabled on all required ports.

- Users that connect devices to 802.1X-enabled ports must know the username/password before they can access the network.

Port Security

If you know which devices should be cabled and connected to particular interfaces on a switch, you can use port security to restrict that interface so that only the expected devices can use it. This reduces exposure to some types of attacks in which the attacker connects a laptop to the wall socket or uses the cable attached to another end device to gain access to the network.

Port Security Configuration

Port security configuration involves several steps. Basically, you need to make the port an access port, which means the port is not doing any VLAN trunking. You then need to enable port security and configure the Media Access Control (MAC) addresses of the devices allowed to use that port. The following list outlines the steps in port security configuration, including the configuration commands used:

- Step 1.** Configure the interface for static access mode by using the **switchport mode access** interface subcommand.
- Step 2.** Enable port security by using the **switchport port-security** interface subcommand.
- Step 3.** (Optional) Override the maximum number of allowed MAC addresses associated with the interface (1) by using the **switchport port-security maximum *number*** interface subcommand.
- Step 4.** (Optional) Override the default action when there is a security violation (shutdown) by using the **switchport port-security violation {protect | restrict | shutdown}** interface subcommand.
- Step 5.** (Optional) Predefine any allowed source MAC address(es) for this interface by using the **switchport port-security mac-address *mac-address*** command. Use the command multiple times to define more than one MAC address.
- Step 6.** (Optional) Instead of taking step 5, configure the interface to dynamically learn and configure the MAC addresses of currently connected hosts by configuring the **switchport port-security mac-address sticky** interface subcommand.

When an unauthorized device attempts to send frames to the switch interface, the switch can issue informational messages, discard frames from that device, or even discard frames from all devices by effectively shutting down the interface. Exactly which action the switch port takes depends on the option you configure in the **switchport port-security violation** command. Table 20-2 lists actions that the switch will take based on whether you configure the option **protect**, **restrict**, or **shutdown** (default).

Table 20-2 Actions When Port Security Violation Occurs

Option on the switchport port-security violation Command	protect	restrict	shutdown
Discards offending traffic	Yes	Yes	Yes
Sends log and SNMP messages	No	Yes	Yes
Disables the interface, discarding all traffic	No	No	Yes

Example 20-5 shows a port security configuration in which each access interface is allowed a maximum of three MAC addresses. If a fourth MAC address is detected, only the offending device's traffic is discarded. If the violation option is not explicitly configured, the traffic for devices that are allowed on the port also is discarded because the port would be shut down by default.

Example 20-5 Port Security Configuration Example

```
S1(config)# interface range fa 0/5 - fa 0/24
S1(config-if-range)# switchport mode access
S1(config-if-range)# switchport port-security
S1(config-if-range)# switchport port-security maximum 3
S1(config-if-range)# switchport port-security violation restrict
S1(config-if-range)# switchport port-security mac-address sticky
```

To verify port security configuration, use the more general **show port-security** command or the more specific **show port-security interface type number** command. Example 20-6 demonstrates the use of both commands. In the examples, notice that only one device is currently attached to an access port on S1.

Example 20-6 Port Security Verification Command Output Examples

S1# show port-security				
Secure Port	MaxSecureAddr	CurrentAddr	SecurityViolation	Action
	(Count)	(Count)	(Count)	
Fa0/5	3	1	0	Restrict
Fa0/6	3	0	0	Restrict
Fa0/7	3	0	0	Restrict
Fa0/8	3	0	0	Restrict
Fa0/9	3	0	0	Restrict
Fa0/10	3	0	0	Restrict
Fa0/11	3	0	0	Restrict
Fa0/12	3	0	0	Restrict
Fa0/13	3	0	0	Restrict
Fa0/14	3	0	0	Restrict
Fa0/15	3	0	0	Restrict
Fa0/16	3	0	0	Restrict
Fa0/17	3	0	0	Restrict
Fa0/18	3	0	0	Restrict
Fa0/19	3	0	0	Restrict

```

Fa0/20      3          0          0          Restrict
Fa0/21      3          0          0          Restrict
Fa0/22      3          0          0          Restrict
Fa0/23      3          0          0          Restrict
Fa0/24      3          0          0          Restrict
Total Addresses in System (excluding one mac per port) : 0
Max Addresses limit in System (excluding one mac per port) : 8320
S1# show port-security interface fastethernet 0/5
Port Security           :Enabled
Port Status              :Secure-down
Violation Mode           :Restrict
Aging Time               :0 mins
Aging Type               :Absolute
SecureStatic Address Aging :Disabled
Maximum MAC Addresses    :3
Total MAC Addresses       :1
Configured MAC Addresses :0
Sticky MAC Addresses     :1
Last Source Address:Vlan :0014.22dd.37a3:1
Security Violation Count :0

```

Port Security Aging

Port security aging can be used to set the aging time for static and dynamic secure addresses on a port. Two types of aging are supported per port:

- **Absolute:** The secure addresses on the port are deleted after the specified aging time.
- **Inactivity:** The secure addresses on the port are deleted only if they are inactive for the specified aging time.

Use the **switchport port-security aging** command to enable or disable static aging for the secure port or to set the aging time or type:

```
Switch(config-if)# switchport port-security aging { static | time time |
type {absolute | inactivity}}
```

Table 20-3 describes the parameters for this command.

Table 20-3 Parameters for the *port-security aging* Command

Parameter	Description
static	Enable aging for statically configured secure addresses on this port.
time time	Specify the aging time for this port. The range is 0 to 1440 minutes. If the time is 0, aging is disabled for this port.
type absolute	Set the absolute aging time. All the secure addresses on this port age out exactly after the time (in minutes) specified and are removed from the secure address list.
type inactivity	Set the inactivity aging type. The secure addresses on this port age out only if there is no data traffic from the secure source address for the specified time period.

Example 20-7 shows an administrator configuring the aging type to 10 minutes of inactivity and using the **show port-security interface** command to verify the configuration.

Example 20-7 Configuring and Verifying Port Security Aging

```
S1(config)# interface fa0/1
S1(config-if)# switchport port-security aging time 10
S1(config-if)# switchport port-security aging type inactivity
S1(config-if)# end
S1# show port-security interface fa0/1
Port Security          : Enabled
Port Status             : Secure-shutdown
Violation Mode         : Restrict
Aging Time              : 10 mins
Aging Type              : Inactivity
SecureStatic Address Aging : Disabled
Maximum MAC Addresses   : 4
Total MAC Addresses     : 1
Configured MAC Addresses : 1
Sticky MAC Addresses    : 0
Last Source Address:Vlan : 0050.56be.e4dd:1
Security Violation Count : 1
```

Port Restoration After a Violation

When port security is activated on an interface, the default action when a violation occurs is to shut down the port. A security violation can occur in one of two ways:

- The maximum number of secure MAC addresses has been added to the address table for that interface, and a station whose MAC address is not in the address table attempts to access the interface.
- An address learned or configured on one secure interface is seen on another secure interface in the same VLAN.

When a violation occurs, a syslog message is sent to the console, stating that the interface is now in the **err-disable** state. The console messages include the port number and the MAC address that caused the violation, as Example 20-8 shows.

Example 20-8 Port Security Violation Verification and Restoration

```
S1#
Sep 20 06:44:54.966: %PM-4-ERR_DISABLE: psecure-violation error detected on
Fa0/18,
    putting Fa0/18 in err-disable state
Sep 20 06:44:54.966: %PORT_SECURITY-2-PSECURE_VIOLATION: Security violation
    occurred, caused by MAC address 000c.292b.4c75 on port FastEthernet0/18.
Sep 20 06:44:55.973: %LINEPROTO-5-PPDOWN: Line protocol on Interface
```

```

FastEthernet0/18, changed state to down
Sep 20 06:44:56.971: %LINK-3-UPDOWN: Interface FastEthernet0/18, changed state
to down
!The two following commands can be used to verify the port status.
S1# show interface fa0/18 status
Port      Name    Status        Vlan Duplex   Speed   Type
Fa0/18     err-disabled  5      auto      auto    10/100BaseTX
S1# show port-security interface fastethernet 0/18
Port Security          : Enabled
Port Status             : Secure-shutdown
Violation Mode         : Shutdown
Aging Time              : 0 mins
Aging Type              : Absolute
SecureStatic Address Aging : Disabled
Maximum MAC Addresses   : 1
Total MAC Addresses     : 0
Configured MAC Addresses: 0
Sticky MAC Addresses    : 0
Last Source Address:Vlan : 000c.292b.4c75:1
Security Violation Count: 1
!To restore a port, manually shut it down and then reactivate it.
S1(config)# interface FastEthernet 0/18
S1(config-if)# shutdown
Sep 20 06:57:28.532: %LINK-5-CHANGED: Interface FastEthernet0/18, changed state to
administratively down
S1(config-if)# no shutdown
Sep 20 06:57:48.186: %LINK-3-UPDOWN: Interface FastEthernet0/18, changed state to up
Sep 20 06:57:49.193: %LINEPROTO-5-UPDOWN: Line protocol on Interface
FastEthernet0/18, changed state to up

```

You can use the **show interface type number status** or **show port-security interface type number** command to verify the current state of the port. To restore the port, you must first manually shut down the interface and then reactivate it, as in Example 20-8.

LAN Threat Mitigation

This section reviews LAN threats and mitigation techniques for VLAN attacks, DHCP attacks, and ARP attacks.

Native and Management VLAN Modification

The IEEE 802.1Q specification defines a native VLAN to maintain backward compatibility with untagged traffic that is common in legacy LAN scenarios. A native VLAN serves as a common identifier on opposite ends of a trunk link. VLAN 1 is the native VLAN by default.

A management VLAN is any VLAN configured to access the management capabilities of a switch. VLAN 1 is the management VLAN by default. The management VLAN is assigned an IP address and subnet mask, allowing the switch to be managed through HTTP, Telnet, SSH, or SNMP.

It is a best practice to configure the native VLAN as an unused VLAN distinct from VLAN 1 and other VLANs. In fact, it is not unusual to dedicate a fixed VLAN to serve the role of the native VLAN for all trunk ports in the switched domain. Likewise, the management VLAN should be configured as something other than VLAN 1. The management and native VLANs can be configured as the same VLAN, as in Example 20-9.

Example 20-9 Configuring the Native and Management VLAN

```
S1(config)# vlan 86
S1(config-vlan)# name Management&Native
S1(config-vlan)# interface vlan 86
*Jul 13 14:14:04.840: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan86,
    changed state to down
S1(config-if)# ip address 10.10.86.10 255.255.255.0
S1(config-if)# no shutdown
S1(config-if)# ip default-gateway 10.10.86.254
S1(config)# interface range fa0/21 - 24
S1(config-if-range)# switchport mode trunk
S1(config-if-range)# switchport trunk native vlan 86
S1(config-if-range)#
*Jul 13 14:15:55.499: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan86,
    changed state to up
S1(config-if-range)#
```

First, a VLAN is created that will be used for the management and native VLAN. Next, by activating interface VLAN 86, the switch can be remotely managed. Finally, the trunk ports are statically configured, and VLAN 86 is set as the native VLAN for all untagged traffic. After it is configured, the interface VLAN 86 comes up.

VLAN Attacks

VLAN attacks can be launched in one of three ways:

- **Spoofing Dynamic Trunking Protocol (DTP) messages:** Spoofing DTP messages from the attacking host can cause the switch to enter trunking mode. From here, the attacker can send traffic tagged with the target VLAN, and the switch then delivers the packets to the destination.
- **Introducing a rogue switch and enabling trunking:** After doing this, an attacker can access all the VLANs on the victim switch from the rogue switch.
- **Mounting a double-tagging (or double-encapsulated) attack:** This type of VLAN hopping attack takes advantage of the way hardware on most switches operates. A threat actor in specific situations could embed a hidden 802.1Q tag inside the frame that already has an 802.1Q tag. This tag allows the frame to go to a VLAN that the original 802.1Q tag did not specify.

VLAN Attack Mitigation

Use the following steps to mitigate VLAN hopping attacks:

- Step 1.** Disable DTP (auto trunking) negotiations on non-trunking ports by using the **switchport mode access** interface configuration command.
- Step 2.** Disable unused ports and put them in an unused VLAN.
- Step 3.** Manually enable the trunk link on a trunking port by using the **switchport mode trunk** command.
- Step 4.** Disable DTP (auto trunking) negotiations on trunking ports by using the **switchport nonegotiate** command.
- Step 5.** Set the native VLAN to a VLAN other than VLAN 1 by using the **switchport trunk native vlan *vlan_number*** command.

For example, assume the following:

- FastEthernet ports 0/1 through fa0/16 are active access ports.
- FastEthernet ports 0/17 through 0/24 are not currently in use.
- FastEthernet ports 0/21 through 0/24 are trunk ports.

VLAN hopping can be mitigated by implementing the following configuration, as shown in Example 20-10:

- Trunking is disabled on FastEthernet ports 0/1 to 0/16.
- FastEthernet ports 0/17 to 0/20 are assigned an unused VLAN.
- FastEthernet ports 0/21 to 0/24 are manually enabled as trunks with DTP disabled. The native VLAN is also changed from the default VLAN 1 to VLAN 86.

Example 20-10 VLAN Hopping Attack Mitigation

```
S1(config)# interface range fa0/1 - 16
S1(config-if-range)# switchport mode access
S1(config-if-range)# exit
S1(config)#
S1(config)# interface range fa0/17 - 20
S1(config-if-range)# switchport mode access
S1(config-if-range)# switchport access vlan 999
S1(config-if-range)# exit
S1(config)#
S1(config)# interface range fa0/21 - 24
S1(config-if-range)# switchport mode trunk
S1(config-if-range)# switchport nonegotiate
S1(config-if-range)# switchport trunk native vlan 86
S1(config-if-range)# end
S1#
```

DHCP Attacks

Two types of DHCP attacks are DHCP starvation and DHCP spoofing. Both attacks are mitigated by implementing DHCP snooping.


DHCP Starvation Attacks

The goal of a DHCP starvation attack is to create a denial-of-service condition for connecting clients. DHCP starvation attacks require an attack tool such as Gobbler. Gobbler looks at the entire scope of leaseable IP addresses and tries to lease them all. Specifically, it creates DHCP discovery messages with bogus MAC addresses.

DHCP Spoofing Attacks

A DHCP spoofing attack occurs when a rogue DHCP server is connected to the network and provides false IP configuration parameters to legitimate clients. For example, in Figure 20-6, R1 is configured to relay DHCP requests to the DHCP server attached to R2.

Figure 20-6 Rogue DHCP Server Intercepting DHCP Requests

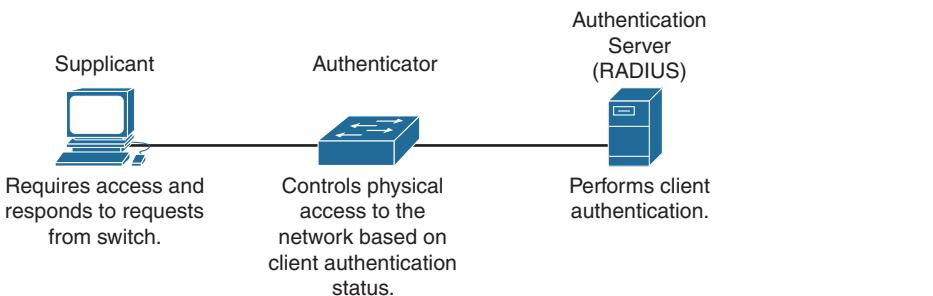


However, the rogue DHCP server attached to SW1 responds to the DHCP request from PC1 first. PC1 accepts the DHCP offer and sets the rogue DHCP server as the default gateway.

DHCP Snooping

To protect against DHCP attacks, DHCP snooping uses the concept of trusted and untrusted ports. As Figure 20-7 shows, SW2, R1, and the DHCP server are attached to trusted ports on SW1. The other devices, including the wireless access point, are connected to untrusted ports.

Figure 20-7 Trusted and Untrusted Ports

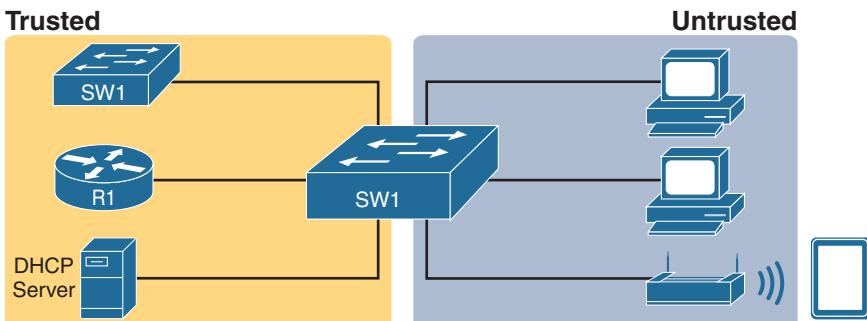

Some critical features of a DHCP snooping configuration include the following:


- **Trusted ports:** Trusted ports allow all incoming DHCP messages.
- **Untrusted ports, server messages:** Untrusted ports discard all incoming messages that are considered server messages.
- **Untrusted ports, client messages:** Untrusted ports apply more complex logic for messages considered client messages. They check whether each incoming DHCP message conflicts with existing DHCP binding table information; if so, they discard the DHCP message. If the message has no conflicts, the switch allows the message through, which typically results in the addition of new DHCP binding table entries.
- **Rate limiting:** This feature optionally limits the number of received DHCP messages per second per port.

Use the following steps to enable DHCP snooping:

- Step 1.** Enable DHCP snooping by using the **ip dhcp snooping** global configuration command.
- Step 2.** On trusted ports, use the **ip dhcp snooping trust** interface configuration command.
- Step 3.** Limit the number of DHCP discovery messages that can be received per second on untrusted ports by using the **ip dhcp snooping limit rate number** interface configuration command. This helps mitigate DHCP starvation attacks.
- Step 4.** Enable DHCP snooping by VLAN or by a range of VLANs by using the **ip dhcp snooping vlan** global configuration command.

For a simple scenario, consider the topology in Figure 20-8.

Figure 20-8 DHCP Snooping Configuration Topology

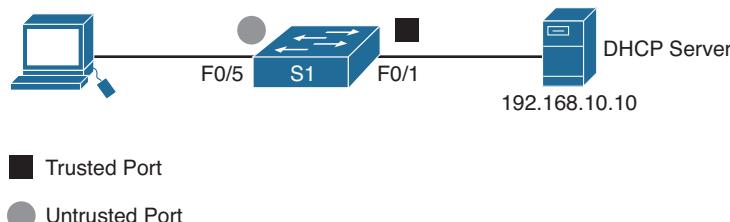

■ Trusted Port

● Untrusted Port

Example 20-11 shows how to configure and verify DHCP snooping on S1.

Example 20-11 Configuring and Verifying DHCP Snooping

```
S1(config)# ip dhcp snooping
S1(config)# interface f0/1
S1(config-if)# ip dhcp snooping trust
S1(config-if)# exit
S1(config)# interface range f0/5 - 24
```

```

S1(config-if-range)# ip dhcp snooping limit rate 6
S1(config-if)# exit
S1(config)# ip dhcp snooping vlan 5,10,50-52
S1(config)# end
S1# show ip dhcp snooping
Switch DHCP snooping is enabled
DHCP snooping is configured on following VLANs:
5,10,50-52
DHCP snooping is operational on following VLANs:
none
DHCP snooping is configured on the following L3 Interfaces:
Insertion of option 82 is enabled
  circuit-id default format: vlan-mod-port
    remote-id: 0cd9.96d2.3f80 (MAC)
Option 82 on untrusted port is not allowed
Verification of hwaddr field is enabled
Verification of giaddr field is enabled
DHCP snooping trust/rate is configured on the following Interfaces:
Interface          Trusted     Allow option   Rate limit (pps)
-----          -----      -----      -----
FastEthernet0/1      yes        yes        unlimited
  Custom circuit-ids:
FastEthernet0/5      no         no         6
  Custom circuit-ids:
FastEthernet0/6      no         no         6
  Custom circuit-ids:
S1# show ip dhcp snooping binding
MacAddress          IpAddress      Lease(sec)  Type      VLAN Interface
-----          -----      -----      -----      -----
00:03:47:B5:9F:AD  192.168.10.10  193185    dhcp-snooping 5  FastEthernet0/5
S1#

```


ARP Attacks

On Ethernet LANs, hosts are allowed to send an unsolicited Address Resolution Protocol (ARP) reply called a *gratuitous ARP* message. These ARP messages cause all other hosts on the LAN to store the MAC address and IP address in their ARP caches. The problem is that an attacker can send a gratuitous ARP message containing a spoofed MAC address to a switch, and the switch would update its MAC table accordingly. Therefore, any host can claim to be the owner of any IP and MAC address combination.

For example, in Figure 20-9, R1 and PC1 have removed the correct entry for each other's MAC address and replaced it with PC2's MAC address. The threat actor has poisoned the ARP caches of all devices on the subnet. ARP poisoning leads to various man-in-the-middle attacks, posing a

serious security threat to the network. All traffic between R1 and PC1 will now flow through the threat actor's PC2.

Figure 20-9 Successful ARP Poisoning Attack

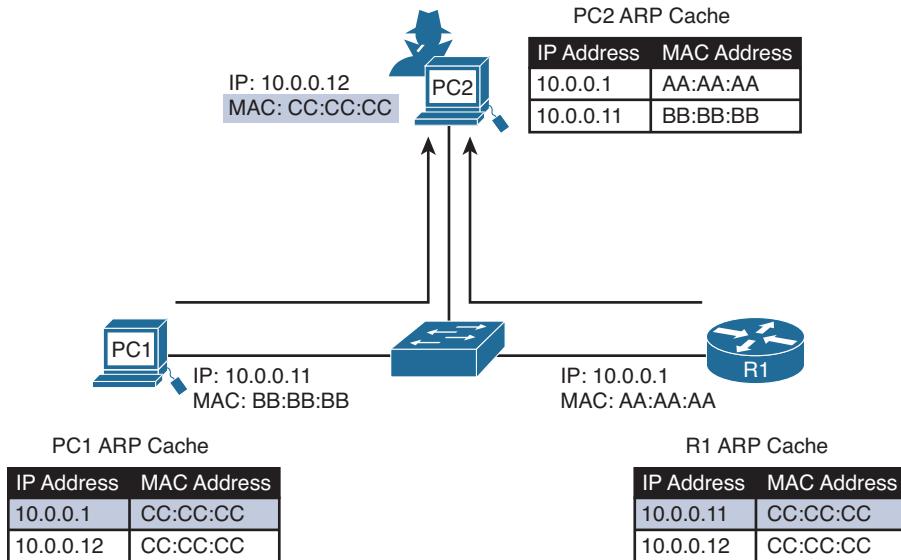

Note: MAC addresses are shown as 24 bits for simplicity.

Dynamic ARP Inspection

To prevent ARP spoofing and then ARP poisoning, a switch must ensure that only valid ARP requests and replies are relayed. Dynamic ARP inspection (DAI) requires DHCP snooping and helps prevent ARP attacks by doing the following:

- Not relaying invalid or gratuitous ARP replies out to other ports in the same VLAN
- Intercepting all ARP requests and replies on untrusted ports
- Verifying each intercepted packet for a valid IP-to-MAC binding
- Dropping and logging ARP replies coming from invalid source to prevent ARP poisoning
- Error disabling the interface if the configured DAI number of ARP packets is exceeded


To mitigate the chances of ARP spoofing and ARP poisoning, follow these DAI implementation guidelines:

- Enable DHCP snooping globally.
- Enable DHCP snooping on selected VLANs.

- Enable DAI on selected VLANs.
- Configure trusted interfaces for DHCP snooping and ARP inspection.

The topology in Figure 20-10 identifies trusted and untrusted ports

Figure 20-10 Trusted and Untrusted Ports for DAI Configuration

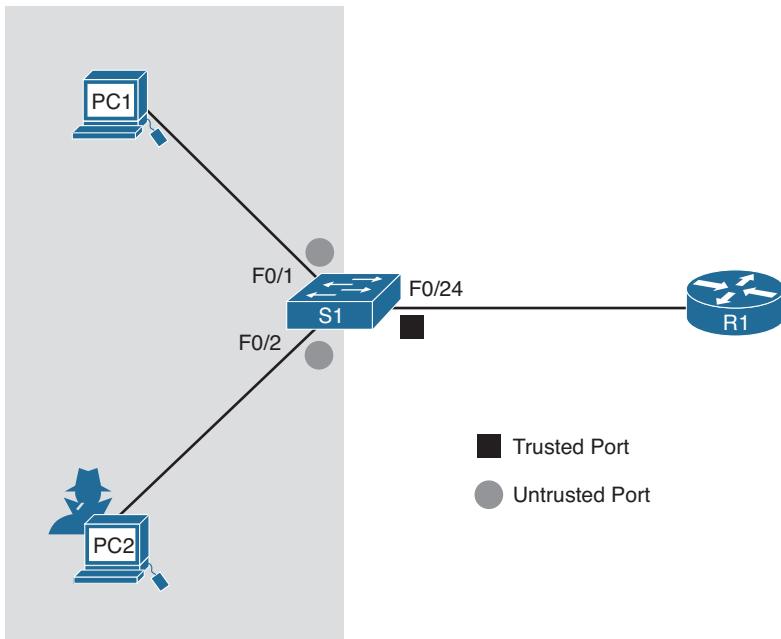

In Figure 20-10, S1 is connecting two users on VLAN 10. In Example 20-12, DAI is configured to mitigate against ARP spoofing and ARP poisoning attacks. Notice that DHCP snooping is enabled because DAI requires the DHCP snooping binding table to operate.

Example 20-12 DAI Configuration

```
S1(config)# ip dhcp snooping
S1(config)# ip dhcp snooping vlan 10
S1(config)# ip arp inspection vlan 10
S1(config)# interface fa0/24
S1(config-if)# ip dhcp snooping trust
S1(config-if)# ip arp inspection trust
```

DAI can also be configured to check for both destination or source MAC and IP addresses with the **ip arp inspection validate** command. Only one command can be configured. Entering multiple **ip arp inspection validate** commands overwrites the previous command. To include more than one validation method, enter them on the same command line, as shown and verified in Example 20-13.

Example 20-13 Configuring DAI to Validate MAC and IP Addresses

```
S1(config)# ip arp inspection validate ?
dst-mac  Validate destination MAC address
ip       Validate IP addresses
src-mac  Validate source MAC address
S1(config)# ip arp inspection validate src-mac
S1(config)# ip arp inspection validate dst-mac
S1(config)# ip arp inspection validate ip
S1(config)# do show run | include validate
ip arp inspection validate ip
S1(config)# ip arp inspection validate src-mac dst-mac ip
S1(config)# do show run | include validate
ip arp inspection validate src-mac dst-mac ip
S1(config)#

```

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA2	10
	11
CCNA 200-301 Official Cert Guide, Volume 1	6
CCNA 200-301 Official Cert Guide, Volume 2	4
	8
Portable Command Guide	20
	22

This page intentionally left blank

Basic Routing Concepts

CCNA 200-301 Exam Topics

- Explain the role and function of network components
- Determine how a router makes a forwarding decision by default

Key Topics

Today we review basic routing concepts, including exactly how a packet is processed by intermediary devices (routers) on its way from source to destination. We then review the basic routing methods, including connected, static, and dynamic routes. We conclude the day's review with a deep dive into the operation of dynamic routing protocols.

Packet Forwarding

Packet forwarding by routers is accomplished through path determination and switching functions. The path determination function is the process the router uses to determine which path to use when forwarding a packet. To determine the best path, the router searches its routing table for a network address that matches the packet's destination IP address.

This search results in one of three path determinations:


- **Directly connected network:** If the destination IP address of the packet belongs to a device on a network that is directly connected to one of the router's interfaces, that packet is forwarded directly to that device. This means the destination IP address of the packet is a host address on the same network as this router's interface.
- **Remote network:** If the destination IP address of the packet belongs to a remote network, the packet is forwarded to another router. Remote networks can be reached only by forwarding packets to another router.
- **No route determined:** If the destination IP address of the packet does not belong to a connected or remote network and the router does not have a default route, the packet is discarded. The router sends an Internet Control Message Protocol (ICMP) Unreachable message to the source IP address of the packet.

In the first two results, the router completes the process by switching the packet out the correct interface. It does this by reencapsulating the IP packet into the appropriate Layer 2 data-link frame format for the exit interface. The type of interface determines the type of Layer 2 encapsulation. For example, if the exit interface is Fast Ethernet, the packet is encapsulated in an Ethernet frame. If the exit interface is a serial interface configured for PPP, the IP packet is encapsulated in a PPP frame.

Path Determination and Switching Function Example

Let's review the process of path determination and switching functions that routers perform as a packet travels from source to destination. Consider the topology in Figure 19-1 and the following steps:

Figure 19-1 Packet Forwarding Sample Topology

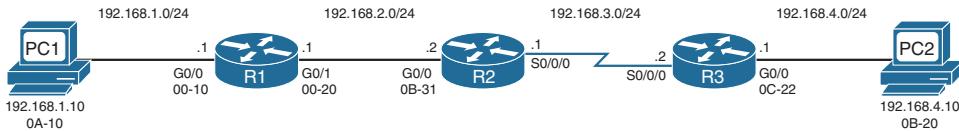

NOTE: For brevity, Figure 19-1 shows only the last two octets of the MAC address.

- Step 1.** PC1 has a packet to send to PC2. Using the AND operation on the destination's IP address and PC1's subnet mask, PC1 has determined that the IP source and IP destination addresses are on different networks. Therefore, PC1 checks its Address Resolution Protocol (ARP) table for the IP address of the default gateway and its associated MAC address. It then encapsulates the packet in an Ethernet header and forwards it to R1.
- Step 2.** Router R1 receives the Ethernet frame. Router R1 examines the destination MAC address, which matches the MAC address of the receiving interface, G0/0. R1 therefore copies the frame into its buffer to be processed.
R1 decapsulates the Ethernet frame and reads the destination IP address. Because it does not match any of R1's directly connected networks, the router consults its routing table to route this packet.
R1 searches the routing table for a network address and subnet mask that include this packet's destination IP address as a host address on that network. It selects the entry with the longest match (longest prefix). R1 encapsulates the packet in the appropriate frame format for the exit interface and switches the frame to the interface (G0/1 in this example). The interface then forwards it to the next hop.
- Step 3.** The packet arrives at router R2. R2 performs the same functions as R1, but this time, the exit interface is a serial interface—not Ethernet. Therefore, R2 encapsulates the packet in the appropriate frame format for the serial interface and sends it to R3. For this example, assume that the interface is using High-Level Data Link Control (HDLC), which uses the data-link address 0x8F. Remember that serial interfaces do not use MAC addresses.
- Step 4.** The packet arrives at R3. R3 decapsulates the data-link HDLC frame. The search of the routing table results in a network that is one of R3's directly connected networks. Because the exit interface is a directly connected Ethernet network, R3 needs to resolve the destination IP address of the packet with a destination MAC address.

R3 searches for the packet's destination IP address, 192.168.4.10, in its ARP cache. If the entry is not in the ARP cache, R3 sends an ARP request out its G0/0 interface.

PC2 sends back an ARP reply with its MAC address. R3 updates its ARP cache with an entry for 192.168.4.10 and the MAC address returned in the ARP reply.

The IP packet is encapsulated into a new data-link Ethernet frame and sent out R3's G0/0 interface.

- Step 5.** The Ethernet frame with the encapsulated IP packet arrives at PC2. PC2 examines the destination MAC address, which matches the MAC address of the receiving interface—that is, its own Ethernet NIC. PC2 therefore copies the rest of the frame. PC2 sees that the Ethernet Type field is 0x800, which means that the Ethernet frame contains an IP packet in the data portion of the frame. PC2 decapsulates the Ethernet frame and passes the IP packet to its operating system's IP process.

Routing Methods

A router can learn routes from three basic sources:

- **Directly connected routes:** Automatically entered in the routing table when an interface is activated with an IP address
- **Static routes:** Manually configured by the network administrator and entered in the routing table if the exit interface for the static route is active
- **Dynamic routes:** Learned by the routers through sharing routes with other routers that use the same routing protocol

In many cases, the complexity of the network topology, the number of networks, and the need for the network to automatically adjust to changes require the use of a dynamic routing protocol. Dynamic routing certainly has several advantages over static routing; however, networks still use static routing. In fact, networks typically use a combination of static and dynamic routing.

Table 19-1 compares dynamic and static routing features. From this comparison, you can list the advantages of each routing method. The advantages of one method are the disadvantages of the other.


Table 19-1 Dynamic Versus Static Routing

Feature	Dynamic Routing	Static Routing
Configuration complexity	Generally remains independent of the network size	Increases with network size
Required administrator knowledge	Requires advanced knowledge	Requires no extra knowledge
Topology changes	Automatically adapts to topology changes	Requires administrator intervention
Scaling	Suitable for simple and complex topologies	Suitable for simple topologies
Security	Less secure	More secure
Resource usage	Uses CPU, memory, and link bandwidth	Requires no extra resources
Predictability	Uses a route that depends on the current topology	Always uses the same route to the destination

Classifying Dynamic Routing Protocols

Figure 19-2 shows a timeline of IP routing protocols, along with a chart to help you memorize the various ways to classify routing protocols.

Figure 19-2 Evolution and Classification of Routing Protocols

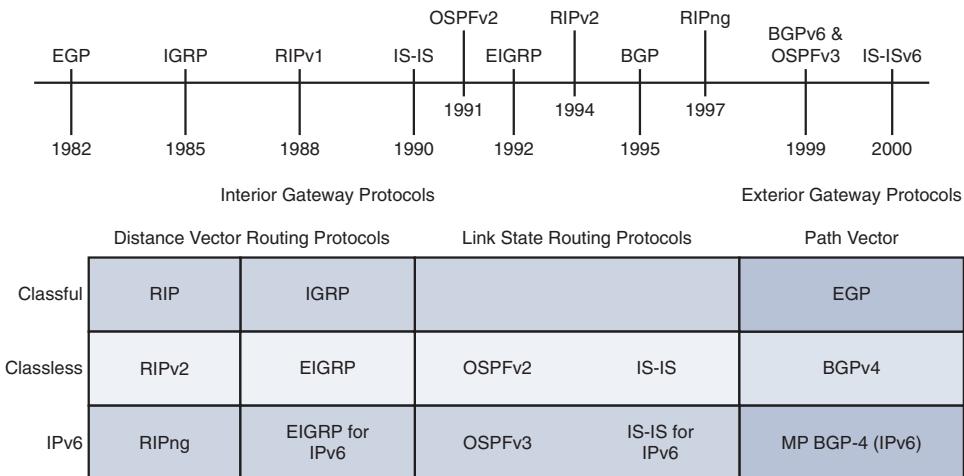

Routing protocols are classified into different groups according to their characteristics:

- IGP or EGP
- Distance vector or link state
- Classful or classless

IGP and EGP

An autonomous system (AS) is a collection of routers under a common administration that presents a common, clearly defined routing policy to the Internet. Typical examples are a large company's internal network and an ISP's network. Most company networks are not autonomous systems; in most cases, a company network is a network within its ISP's autonomous system. Because the Internet is based on the autonomous system concept, two types of routing protocols are required:

- **Interior gateway protocols (IGP):** Used for intra-AS routing—that is, routing inside an AS
- **Exterior gateway protocols (EGP):** Used for inter-AS routing—that is, routing between autonomous systems

Distance Vector Routing Protocols

Distance vector means that routes are advertised as vectors of distance and direction. Distance is defined in terms of a metric such as hop count, and direction is the next-hop router or exit interface. Distance vector protocols typically use the Bellman-Ford algorithm for the best-path route determination.

Some distance vector protocols periodically send complete routing tables to all connected neighbors. In large networks, these routing updates can become enormous, causing significant traffic on the links.

Although the Bellman-Ford algorithm eventually accumulates enough knowledge to maintain a database of reachable networks, the algorithm does not allow a router to know the exact topology of an internetwork. The router knows only the routing information received from its neighbors.

Distance vector protocols use routers as signposts along the path to the final destination. The only information a router knows about a remote network is the distance or metric to reach that network and which path or interface to use to get there. A distance vector routing protocol does not have a map of the network topology.

Distance vector protocols work best in these situations:

- When the network is simple and flat and does not require a hierarchical design
- When the administrators do not have enough knowledge to configure and troubleshoot link-state protocols
- When specific types of networks, such as hub-and-spoke networks, are being implemented
- When worst-case convergence times in a network are not a concern

Link-State Routing Protocols

In contrast to distance vector routing protocol operation, a router configured with a link-state routing protocol can create a complete view, or topology, of the network by gathering information from all the other routers. Think of a link-state routing protocol as having a complete map of the network topology. The signposts along the way from source to destination are not necessary because all link-state routers are using an identical map of the network. A link-state router uses the link-state information to create a topology map and to select the best path to each destination network in the topology.

With some distance vector routing protocols, routers periodically send updates of their routing information to their neighbors. Link-state routing protocols do not use periodic updates. After the network has converged, a link-state update is sent only when the topology changes.

Link-state protocols work best in these situations:

- When the network design is hierarchical, which is typically the case in large networks
- When the administrators have good knowledge of the implemented link-state routing protocol
- When fast convergence of the network is crucial

Classful Routing Protocols

Classful routing protocols do not send subnet mask information in routing updates. The first routing protocols, such as Routing Information Protocol (RIP), were classful. When those protocols were created, network addresses were allocated based on class: Class A, B, or C. A routing protocol did not need to include the subnet mask in the routing update because the network mask could be determined based on the first octet of the network address.

Classful routing protocols can still be used in some of today's networks, but because they do not include the subnet mask, they cannot be used in all situations. Classful routing protocols cannot be used when a network is subnetted using more than one subnet mask. In other words, classful routing protocols do not support variable-length subnet masking (VLSM).

Other limitations come into play with classful routing protocols, including their inability to support discontiguous networks and supernets. Classful routing protocols include Routing Information Protocol version 1 (RIPv1) and Interior Gateway Routing Protocol (IGRP). CCNA exam topics do not include either RIPv1 or IGRP.

Classless Routing Protocols

Classless routing protocols include the subnet mask with the network address in routing updates. Today's networks are no longer allocated based on class, and the subnet mask cannot be determined by the value of the first octet. Classless routing protocols are required in most networks today because of their support for VLSM and discontiguous networks and supernets. Classless routing protocols include Routing Information Protocol version 2 (RIPv2), Enhanced IGRP (EIGRP), Open Shortest Path First (OSPF), Intermediate System-to-Intermediate System (IS-IS), and Border Gateway Protocol (BGP).

Dynamic Routing Metrics

In some cases, a routing protocol learns of more than one route to the same destination from the same routing source. To select the best path, the routing protocol must be capable of evaluating and differentiating among the available paths. A *metric* is used for this purpose. Two different routing protocols might choose different paths to the same destination because they use different metrics. Metrics used in IP routing protocols include the following:

- **RIP—Hop count:** The best path is chosen by the route with the lowest hop count.
- **IGRP and EIGRP—Bandwidth, delay, reliability, and load:** The best path is chosen by the route with the smallest composite metric value calculated from these multiple parameters. By default, only bandwidth and delay are used.
- **IS-IS and OSPF—Cost:** The best path is chosen by the route with the lowest cost. The Cisco implementation of OSPF uses bandwidth to determine the cost.

The metric associated with a certain route can best be viewed using the **show ip route** command. The metric value is the second value in the brackets for a routing table entry. In Example 19-1, R2 has a route to the 192.168.8.0/24 network that is two hops away.

Example 19-1 Routing Table for R2

```
R2# show ip route

<output omitted>

Gateway of last resort is not set

R    192.168.1.0/24 [120/1] via 192.168.2.1, 00:00:20, Serial0/0/0
      192.168.2.0/24 is variably subnetted, 2 subnets, 2 masks
C      192.168.2.0/24 is directly connected, Serial0/0/0
L      192.168.2.2/32 is directly connected, Serial0/0/0
      192.168.3.0/24 is variably subnetted, 2 subnets, 2 masks
C      192.168.3.0/24 is directly connected, GigabitEthernet0/0
L      192.168.3.1/32 is directly connected, GigabitEthernet0/0
      192.168.4.0/24 is variably subnetted, 2 subnets, 2 masks
C      192.168.4.0/24 is directly connected, Serial0/0/1
L      192.168.4.2/32 is directly connected, Serial0/0/1
R  192.168.5.0/24 [120/1] via 192.168.4.1, 00:00:25, Serial0/0/1
R  192.168.6.0/24 [120/1] via 192.168.2.1, 00:00:20, Serial0/0/0
      [120/1] via 192.168.4.1, 00:00:25, Serial0/0/1
R  192.168.7.0/24 [120/1] via 192.168.4.1, 00:00:25, Serial0/0/1
R  192.168.8.0/24 [120/2] via 192.168.4.1, 00:00:25, Serial0/0/1
```

Notice in the output that one network, 192.168.6.0/24, has two routes. RIP will load balance between these equal-cost routes. All the other routing protocols are capable of automatically load balancing traffic for up to four equal-cost routes, by default. EIGRP is also capable of load balancing across unequal-cost paths.

Administrative Distance

Sometimes a router learns a route to a remote network from more than one routing source. For example, a static route might have been configured for the same network/subnet mask that was learned dynamically by a dynamic routing protocol, such as RIP. The router must choose which route to install.

Although it is less common, more than one dynamic routing protocol can be deployed in the same network. In some situations, it might be necessary to route the same network address using multiple routing protocols, such as RIP and OSPF. Because different routing protocols use different metrics—for example, RIP uses hop count and OSPF uses bandwidth—it is not possible to compare metrics to determine the best path.

Administrative distance (AD) defines the preference of a routing source. Each routing source—including specific routing protocols, static routes, and even directly connected networks—is prioritized in order of most preferable to least preferable, using an AD value. Cisco routers use the AD feature to select the best path when they learn about the same destination network from two or more different routing sources.

The AD value is an integer value from 0 to 255. The lower the value, the more preferred the route source. An administrative distance of 0 is the most preferred. Only a directly connected network has an AD of 0, which cannot be changed. An AD of 255 means the router will not believe the source of that route, and it will not be installed in the routing table.

In the routing table in Example 19-1, the AD value is the first value listed in the brackets. You can see that the AD value for RIP routes is 120. You can also verify the AD value with the **show ip protocols** command, as Example 19-2 demonstrates.

Example 19-2 Verifying the AD Value with the *show ip protocols* Command

```
R2# show ip protocols

Routing Protocol is "rip"
  Outgoing update filter list for all interfaces is not set
  Incoming update filter list for all interfaces is not set
  Sending updates every 30 seconds, next due in 21 seconds
  Invalid after 180 seconds, hold down 180, flushed after 240
  Redistributing: rip
  Default version control: send version 1, receive any version
    Interface      Send Recv Triggered RIP Key-chain
    GigabitEthernet0/0  1    1 2
    Serial0/0/0       1    1 2
    Serial0/0/1       1    1 2
  Automatic network summarization is in effect
  Maximum path: 4
  Routing for Networks:
    192.168.2.0
    192.168.3.0
    192.168.4.0
  Routing Information Sources:
    Gateway      Distance  Last Update
    192.168.2.1      120      00:00:01
    192.168.4.1      120      00:00:01
  Distance: (default is 120)

R2#
```

Table 19-2 shows the different administrative distance values for various routing protocols.

Table 19-2 Default Administrative Distances

Route Source	AD
Connected	0
Static	1
EIGRP summary route	5

Route Source	AD
External BGP	20
Internal EIGRP	90
IGRP	100
OSPF	110
IS-IS	115
RIP	120
External EIGRP	170
Internal BGP	200

IGP Comparison Summary

Table 19-3 compares several features of the IGPs that are currently most popular: RIPv2, OSPF, and EIGRP.

Table 19-3 Comparing Features of IGPs: RIPv2, OSPF, and EIGRP

Features	RIPv2	OSPF	EIGRP
Metric	Hop count	Bandwidth	Function of bandwidth, delay
Sends periodic updates	Yes (30 seconds)	No	No
Full or partial routing updates	Full	Partial	Partial
Where updates are sent	(224.0.0.9)	(224.0.0.5, 224.0.0.6)	(224.0.0.10)
Route considered unreachable	16 hops	Depends on MaxAge of LSA, which is never incremented past 3600 seconds	A delay of all 1s
Supports unequal-cost load balancing	No	No	Yes

Routing Loop Prevention

Without preventive measures, distance vector routing protocols can cause severe routing loops in a network. A routing loop is a condition in which a packet is continuously transmitted within a series of routers without ever reaching its intended destination network. A routing loop can occur when two or more routers have inaccurate routing information to a destination network.

Several mechanisms are available to eliminate routing loops, primarily with distance vector routing protocols. These mechanisms include the following:

- **A maximum metric to prevent count to infinity:** To eventually stop the incrementing of a metric during a routing loop, infinity is defined by setting a maximum metric value. For example, RIP defines infinity as 16 hops, an unreachable metric. When the routers “count to infinity,” they mark the route as unreachable.

- **Hold-down timers:** Routers are instructed to hold any changes that might affect routes for a specified period of time. If a route is identified as down or possibly down, any other information for that route containing the same status, or worse, is ignored for a predetermined amount of time (the hold-down period) so that the network has time to converge.
- **Split horizon:** A routing loop is prevented by not allowing advertisements to be sent back through the interface where they originated. The split horizon rule stops a router from incrementing a metric and then sending the route back to its source.
- **Route poisoning or poison reverse:** The route is marked as unreachable in a routing update that is sent to other routers. *Unreachable* is interpreted as a metric that is set to the maximum.
- **Triggered updates:** A routing table update is sent immediately in response to a routing change. Triggered updates do not wait for update timers to expire. The detecting router immediately sends an update message to adjacent routers.
- **TTL field in the IP header:** The Time To Live (TTL) field avoids a situation in which an undeliverable packet circulates endlessly on the network. With TTL, the source device of the packet sets the 8-bit field with a value. This TTL value is decreased by 1 by every router in the path until the packet reaches its destination. If the TTL value reaches 0 before the packet arrives at its destination, the packet is discarded, and the router sends an ICMP error message back to the source of the IP packet.

Link-State Routing Protocol Features

Just as distance vector protocols send routing updates to their neighbors, link-state protocols send link-state updates to neighboring routers, which then forward that information to their neighbors, and so on. Also as with distance vector protocols, at the end of the process, routers that use link-state protocols add the best routes to their routing tables, based on metrics. However, beyond this level of explanation, these two types of routing protocol algorithms have little in common.


Building the LSDB

Link-state routers flood detailed information about the internetwork to all the other routers so that every router has the same information about the internetwork. Routers use this link-state database (LSDB) to calculate the current best routes to each subnet.

OSPF, the most popular link-state IP routing protocol, advertises information in routing update messages of various types. The updates contain information called link-state advertisements (LSA).

Figure 19-3 shows the general idea of the flooding process. R8 is creating and flooding its router LSA. Note that Figure 19-3 shows only a subset of the information in R8's router LSA.

Figure 19-3 shows the basic flooding process. R8 is sending the original LSA for itself, and the other routers are flooding the LSA by forwarding it until every router has a copy.

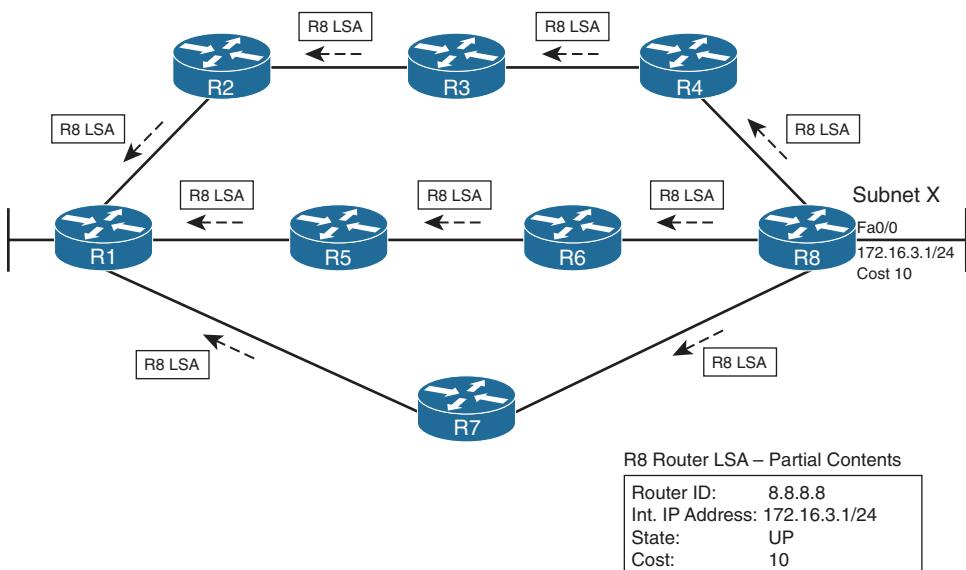Figure 19-3 Flooding LSAs Using a Link-State Routing Protocol

After the LSA has been flooded, even if the LSAs do not change, link-state protocols require periodic reflooding of the LSAs by default every 30 minutes. However, if an LSA changes, the router immediately floods the changed LSA. For example, if Router R8's LAN interface failed, R8 would need to reflood the R8 LSA, stating that the interface is now down.

Calculating the Dijkstra Algorithm

The flooding process alone does not cause a router to learn what routes to add to the IP routing table. Link-state protocols must then find and add routes to the IP routing table by using the Dijkstra shortest path first (SPF) algorithm.

The SPF algorithm is run on the LSDB to create the SPF tree. The LSDB holds all the information about all the possible routers and links. Each router must view itself as the starting point and each subnet as the destination, and it must use the SPF algorithm to build its own SPF tree to pick the best route to each subnet.

Figure 19-4 shows a graphical view of route possibilities from the results of the SPF algorithm run by router R1 when trying to find the best route to reach subnet 172.16.3.0/24 (based on Figure 19-3).

To pick the best route, a router's SPF algorithm adds the cost associated with each link between itself and the destination subnet over each possible route. Figure 19-4 shows the costs associated with each route beside the links. The dashed lines show the three routes R1 finds between itself and subnet X (172.16.3.0/24).

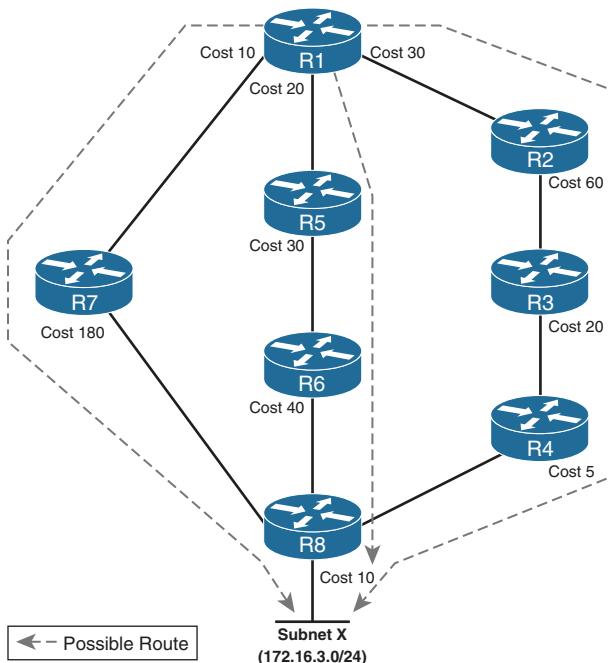
Figure 19-4 SPF Tree to Find R1's Route to 172.16.3.0/24

Table 19-4 lists the three routes shown in Figure 19-2, with their cumulative costs. You can see that R1's best route to 172.16.3.0/24 starts by going through R5.

Table 19-4 Comparing R1's Three Alternatives for the Route to 172.16.3.0/24

Route	Location in Figure 19-2	Cumulative Cost
R1-R7-R8	Left	$10 + 180 + 10 = 200$
R1-R5-R6-R8	Middle	$20 + 30 + 40 + 10 = 100$
R1-R2-R3-R4-R8	Right	$30 + 60 + 20 + 5 + 10 = 125$

As a result of the SPF algorithm's analysis of the LSDB, R1 adds to its routing table a route to subnet 172.16.3.0/24, with R5 as the next-hop router.

Convergence with Link-State Protocols

Remember that when an LSA changes, link-state protocols react swiftly, converging the network and using the current best routes as quickly as possible. For example, imagine that the link between R5 and R6 fails in the internetwork in Figures 25-3 and 25-4. R1 then uses the following process to switch to a different route:

- Step 1.** R5 and R6 flood LSAs, stating that their interfaces are now in a down state.
- Step 2.** All routers run the SPF algorithm again to see if any routes have changed.

Step 3. All routers replace routes, as needed, based on the results of SPF. For example, R1 changes its route for subnet X (172.16.3.0/24) to use R2 as the next-hop router.

These steps allow the link-state routing protocol to converge quickly—much more quickly than distance vector routing protocols.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7.0	8
Switching, Routing, and Wireless Essentials	14
Enterprise Networking, Security, and Automation	1
CCNA 200-301 Official Cert Guide, Volume 1	3

This page intentionally left blank

Basic Router Configuration

CCNA 200-301 Exam Topics

- Describe characteristics of network topology architectures
- Identify interface and cable issues (collisions, errors, mismatch duplex and/or speed)
- Configure and verify IPv4 addressing and subnetting
- Configure and verify IPv6 addressing and prefix


Key Topics

Today we review basic router configuration. First, we focus on configuring and verifying initial settings, including IPv4 addressing. We look at the details of the **show interface** command to understand how it can help in identifying interface and cable issues. Then we review IPv6 addressing and network connectivity verification. Most of this should be very familiar at this point in your studies because these skills are fundamental to all other router configuration tasks. We also review small office or home office (SOHO) setup and configuration.

Basic Router Configuration with IPv4

Figure 18-1 shows the topology and IPv4 addressing scheme that we use today to review basic router configuration and verification tasks.

Figure 18-1 IPv4 Example Topology

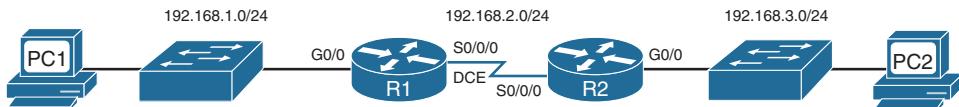

Device	Interface	IP Address	Subnet Mask	Default Gateway
R1	G0/0	192.168.1.1	255.255.255.0	N/A
	S0/0/0	192.168.2.1	255.255.255.0	N/A
R2	G0/0	192.168.3.1	255.255.255.0	N/A
	S0/0/0	192.168.2.2	255.255.255.0	N/A
PC1	N/A	192.168.1.10	255.255.255.0	192.168.1.1
PC2	N/A	192.168.3.10	255.255.255.0	192.168.3.1

When configuring a router, certain basic tasks are performed:

- Naming the router
- Setting passwords

- Configuring interfaces
- Configuring a banner
- Saving changes on a router
- Verifying basic configuration and router operations

Command Syntax

Table 18-1 shows the basic router configuration command syntax used to configure R1 in the following example.

Table 18-1 Basic Router Configuration Command Syntax

Configuration Task	Commands
Naming the router	Router(config)# hostname name
Setting passwords	Router(config)# enable secret password Router(config)# line console 0 Router(config-line)# password password Router(config-line)# login Router(config)# line vty 0 15 Router(config-line)# transport input ssh Router(config-line)# login local Router(config)# username name password password
Configuring a message-of-the-day banner	Router(config)# banner motd # message #
Configuring an interface	Router(config)# interface type number Router(config-if)# ip address address mask Router(config-if)# description description Router(config-if)# no shutdown
Saving changes on a router	Router# copy running-config startup-config
Examining the output of show commands	Router# show running-config Router# show ip route Router# show ip interface brief Router# show interfaces

Configuration Example

Let's walk through a basic configuration for R1. First, enter privileged EXEC mode and then global configuration mode:

```
Router> enable
Router# config t
```

Next, name the router and enter the encrypted password for entering privileged EXEC mode. This command overrides the older **enable password** command, so you are not entering that one:

```
Router(config)# hostname R1
R1(config)# enable secret class
```

Next, configure the console password and require that it be entered with the login password:

```
R1(config)# line console 0
R1(config-line)# password cisco
R1(config-line)# login
```

Configuring SSH and disabling Telnet are security best practices, so configure the vty lines to use only SSH:

NOTE: SSH configuration is not shown here; assume that it is already configured.

```
R1(config)# line vty 0 15
R1(config-line)# transport input ssh
R1(config-line)# login local
R1(config-line)# exit
R1(config)# username admin password cisco
```

Encrypt all the plaintext passwords in the running configuration by using the **service-password encryption** command:

```
R1(config)# service-password encryption
```

Configure the message-of-the-day (MOTD) banner. A delimiting character such as a # is used at both the beginning and the end of the message. At a minimum, a banner should warn against unauthorized access. A good security policy prohibits configuring a banner that welcomes an unauthorized user:

```
R1(config)# banner motd #
Enter TEXT message.   End with the character '#'.
*****
WARNING!! Unauthorized Access Prohibited!!
*****
#
#
```

Now configure the individual router interfaces with IP addresses and other information. First, enter interface configuration mode by specifying the interface type and number and then configure the IP address and subnet mask:

```
R1(config)# interface Serial0/0/0
R1(config-if)# ip address 192.168.2.1 255.255.255.0
```

It is good practice to configure a description on each interface to help document the network information:

```
R1(config-if)# description Circuit#VBN32696-123 (help desk:1-800-555-1234)
```

Activate the interface:

```
R1(config-if)# no shutdown
```

Assuming that the other side of the link is activated on R2, the serial interface is now up. Finish R1 by configuring the GigabitEthernet 0/0 interface:

```
R1(config-if)# interface GigabitEthernet0/0
R1(config-if)# ip address 192.168.1.1 255.255.255.0
R1(config-if)# description R1 LAN
R1(config-if)# no shutdown
```

Assume that R2 is fully configured and can route back to the 192.168.1.0/24 LAN attached to R1. You need to add a static route to R1 to ensure connectivity to R2's LAN. Static routing is reviewed in more detail on Day 19, "Basic Routing Concepts." For now, enter the following command to configure a directly attached static route to R2's LAN:

```
R1(config)# ip route 192.168.3.0 255.255.255.0 Serial 0/0/0
```

NOTE: Using a next-hop address is generally recommended when configuring static routes. Directly connected static routes should be used only with point-to-point serial interfaces, as in this example.

To save the configuration, enter the **copy running-config startup-config** command or the **copy run start** command.

Verification Example

You can use the **show running-config** command to verify the full current configuration on the router. However, a few other basic commands can help you verify your configuration and also begin troubleshooting any potential problems.

Make sure that the networks for your interfaces are now in the routing table by using the **show ip route** command, as shown in Example 18-1.

Example 18-1 The **show ip route** Command

```
R1# show ip route
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
      D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
      N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
      E1 - OSPF external type 1, E2 - OSPF external type 2
      i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
      ia - IS-IS inter area, * - candidate default, U - per-user static route
      o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
      + - replicated route, % - next hop override
```

```

Gateway of last resort is not set

      192.168.1.0/24 is variably subnetted, 2 subnets, 2 masks
C        192.168.1.0/24 is directly connected, GigabitEthernet0/0
L        192.168.1.1/32 is directly connected, GigabitEthernet0/0
      192.168.2.0/24 is variably subnetted, 2 subnets, 2 masks
C        192.168.2.0/24 is directly connected, Serial0/0/0
L        192.168.2.1/32 is directly connected, Serial0/0/0
S  192.168.3.0/24 is directly connected, Serial0/0/0
R1#

```

If a network is missing, check your interface status with the **show ip interface brief** command, as shown in Example 18-2.

Example 18-2 The *show ip interface brief* Command

```

R1# show ip interface brief
Interface          IP-Address      OK?    Method   Status   Protocol
Embedded-Service-Engine0/0 unassigned YES unset administratively down down
GigabitEthernet0/0      192.168.1.1 YES manual up     up
GigabitEthernet0/1      unassigned YES unset administratively downdown
Serial0/0/0            192.168.2.1 YES manual up     up
Serial0/0/1            unassigned YES unset administrativelydown down
R1#

```

The output from the **show ip interface brief** command provides three important pieces of information:

- IP address
- Line status (column 5)
- Protocol status (column 6)

The IP address should be correct, and the status codes should be up and up. Table 18-2 summarizes the two status codes and their meanings.

Table 18-2 Interface Status Codes

Code	Location	General Meaning
Line status	First status code	Refers to the Layer 1 status—for example, is the cable installed, is it the right/wrong cable, is the device on the other end powered on?
Protocol status	Second status code	Refers generally to the Layer 2 status. It is always down if the line status is down. If the line status is up, a protocol status of down is usually caused by mismatched data link layer configuration.

Four combinations of settings are possible for the status codes when troubleshooting a network. Table 18-3 lists the four combinations and explains the typical reasons an interface might be in that state.

Table 18-3 Combinations of Interface Status Codes

Line and Protocol Status	Typical Reason(s)
Administratively down, down	The interface has a shutdown command configured on it.
down, down	The interface has a no shutdown command configured, but the physical layer has a problem. For example, no cable has been attached to the interface (or with Ethernet), the switch interface on the other end of the cable is shut down, or the switch is powered off.
up, down	This almost always refers to data link layer problems, most often configuration problems. For example, serial links have this combination when one router was configured to use PPP and the other defaults to use HDLC. However, a clocking or hardware issue can also be to blame.
up, up	All is well and the interface is functioning.

If necessary, use the more verbose **show interface** command if you need to track down a problem with an interface and get the output for every physical and virtual interface. You can also specify one interface. Example 18-3 shows the output for GigabitEthernet 0/0.

Example 18-3 The *show interface gigabitethernet 0/0* Command

```
R1# show interface gigabitethernet 0/0
GigabitEthernet0/0 is up, line protocol is up
  Hardware is CN Gigabit Ethernet, address is 30f7.0da3.0da0 (bia 30f7.0da3.0da0)
  Description: R1 LAN
  Internet address is 192.168.1.1/24
  MTU 1500 bytes, BW 100000 Kbit/sec, DLY 100 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Full Duplex, 100Mbps, media type is RJ45
  output flow-control is unsupported, input flow-control is unsupported
  ARP type: ARPA, ARP Timeout 04:00:00
  Last input 00:00:00, output 00:00:01, output hang never
  Last clearing of "show interface" counters never
  Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
  Queueing strategy: fifo
  Output queue: 0/40 (size/max)
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
    387 packets input, 59897 bytes, 0 no buffer
    Received 252 broadcasts (0 IP multicasts)
    0 runts, 0 giants, 0 throttles
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
    0 watchdog, 86 multicast, 0 pause input
```

```

281 packets output, 35537 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  56 unknown protocol drops
  0 babbles, 0 late collision, 0 deferred
  0 lost carrier, 0 no carrier, 0 pause output
  0 output buffer failures, 0 output buffers swapped out
R1#

```

This command has a lot of output. However, wading through all this information is sometimes the only way to find a problem. Table 18-4 parses and explains each important part of the **show interface** output.

Table 18-4 show interface Output Explanation

Output	Description
GigabitEthernet...is {up down administratively down}	Whether the interface hardware is currently active or down or whether an administrator has taken it down.
line protocol is {up down}	Whether the software processes that handle the line protocol consider the interface usable (that is, whether keepalives are successful). If the interface misses three consecutive keepalives, the line protocol is marked as down.
Hardware	Hardware type (for example, MCI Ethernet, serial communications interface [SCI], cBus Ethernet) and address.
Description	Text string description configured for the interface (with a maximum of 240 characters).
Internet address	IP address followed by the prefix length (subnet mask).
MTU	Maximum transmission unit (MTU) of the interface.
BW	Bandwidth of the interface, in kilobits per second. The BW parameter is used to compute routing protocol metrics and other calculations.
DLY	Delay of the interface, in microseconds.
rely	Reliability of the interface as a fraction of 255 (where 255/255 is 100% reliability), calculated as an exponential average over 5 minutes.
load	Load on the interface as a fraction of 255 (where 255/255 is completely saturated), calculated as an exponential average over 5 minutes.
Encapsulation	Encapsulation method assigned to an interface.
Loopback	Whether the loopback is set. Can indicate a problem with the carrier.
Keepalive	Whether keepalives are set.
ARP type	Type of Address Resolution Protocol (ARP) assigned.
Last input	Number of hours, minutes, and seconds since the last packet was successfully received by an interface. Useful for knowing when a dead interface failed.
output	Number of hours, minutes, and seconds since the last packet was successfully transmitted by an interface. Useful for knowing when a dead interface failed.
output hang	Number of hours, minutes, and seconds (or never) since the interface was last reset because of a transmission that took too long. When the number of hours in any of the previous fields exceeds 24, the number of days and hours is printed. If that field overflows, asterisks are printed.


Output	Description
Last clearing	Time at which the counters that measure cumulative statistics shown in this report (such as number of bytes transmitted and received) were last reset to 0. Note that variables that might affect routing (for example, load and reliability) are not cleared when the counters are cleared. Asterisks indicate elapsed time too large to be displayed. Reset the counters with the clear interface command.
Output queue, input queue, drops queue	Number of packets in output and input queues. Each number is followed by a slash (/), the maximum size of the queue, and the number of packets dropped because of a full queue.
Five minute input rate, Five minute output rate	Average number of bits and packets transmitted per second in the past 5 minutes. If the interface is not in promiscuous mode, it senses network traffic that it sends and receives (instead of all network traffic). The 5-minute input and output rates should be used only as an approximation of traffic per second during a given 5-minute period. These rates are exponentially weighted averages with a time constant of 5 minutes. A period of four time constants must pass before the average will be within 2% of the instantaneous rate of a uniform stream of traffic over that period.
packets input	Total number of error-free packets the system received.
bytes input	Total number of bytes, including data and MAC encapsulation, in the error-free packets received by the system.
no buffers	Number of received packets discarded because the main system had no buffer space. Compare with ignored count. Broadcast storms on Ethernet are often responsible for no input buffer events.
Received...broadcasts	Total number of broadcast or multicast packets received by the interface. The number of broadcasts should be kept as low as practicable. An approximate threshold is less than 20% of the total number of input packets.
runts	Number of Ethernet frames that are discarded because they are smaller than the minimum Ethernet frame size. Any Ethernet frame that is less than 64 bytes is considered a runt. Runts are usually caused by collisions. If more than one runt per million bytes is received, it should be investigated.
giants	Number of Ethernet frames discarded because they exceed the maximum Ethernet frame size. Any Ethernet frame that is larger than 1518 bytes is considered a giant.
input error	Runts, giants, no buffer, cyclic redundancy check (CRC), frame, overrun, and ignored counts. Other input-related errors can also increase the input error count, and some datagrams can have more than one error. Therefore, this sum might not balance with the sum of enumerated input error counts.
CRC	CRC generated by the originating LAN station or far-end device not matching the checksum calculated from the data received. On a LAN, this usually indicates noise or transmission problems on the LAN interface or the LAN bus itself. A high number of CRCs is usually the result of collisions or a station transmitting bad data.
frame	Number of packets received as incorrectly having a CRC error and a noninteger number of octets. On a LAN, this is usually the result of collisions or a malfunctioning Ethernet device.
overrun	Number of times the receiver hardware could not hand-receive data to a hardware buffer because the input rate exceeded the capability of the receiver to handle the data.
ignored	Number of received packets ignored by the interface because the interface hardware ran low on internal buffers. These buffers are different from the system buffers mentioned in the buffer description. Broadcast storms and bursts of noise can cause the ignored count to increase.

Output	Description
input packets with dribble condition detected	Dribble bit error indicates that a frame is slightly too long. This frame error counter is incremented just for informational purposes; the router accepts the frame.
packets output	Total number of messages transmitted by the system.
bytes	Total number of bytes, including data and MAC encapsulation, transmitted by the system.
underruns	Number of times the transmitter has been running faster than the router can handle. This might never be reported on some interfaces.
output errors	Sum of all errors that prevented the final transmission of datagrams out the interface being examined. Note that this might not balance with the sum of the enumerated output errors because some datagrams might have more than one error and others might have errors that do not fall into any of the specifically tabulated categories.
collisions	Number of messages retransmitted because of an Ethernet collision. This is usually the result of an overextended LAN (too-long Ethernet or transceiver cable, more than two repeaters between stations, or too many cascaded multiport transceivers). A packet that collides is counted only once in output packets.
interface resets	Number of times an interface has been completely reset. This can happen if packets queued for transmission were not sent within several seconds. On a serial line, this can be caused by a malfunctioning modem that is not supplying the transmit clock signal, or it can be caused by a cable problem. If the system notices that the carrier detect line of a serial interface is up but the line protocol is down, it periodically resets the interface in an effort to restart it. Interface resets can also occur when an interface is looped back or shut down.

Basic Router Configuration with IPv6

In this section, we use the topology shown in Figure 18-2 to review the basic commands for enabling IPv6 on a router.

Figure 18-2 IPv6 Sample Topology

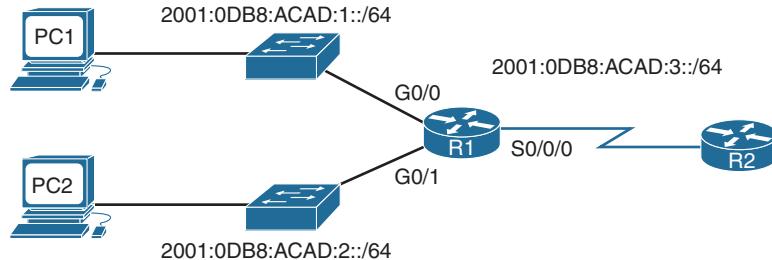

Command Syntax

You enable IPv6 routing by using the following command in global configuration mode:

```
R1(config)# ipv6 unicast-routing
```

Among other actions, this command configures the router to begin listening for and responding to Neighbor Discovery (ND) messages on all active IPv6 interfaces.

To configure an IPv6 address on a router's interface, you have one of several options:

- Configure the interface to use the EUI-64 method of addressing:

```
Router(config)# ipv6 address ipv6-prefix/prefix-length eui-64
```

- Configure the full global unicast address. To manually configure a full IPv6 address, use the following command syntax:

```
Router(config)# ipv6 address ipv6-address/prefix-length
```

- Configure the interface as unnumbered (see Day 27, "IPv6 Addressing").

- Configure the interface as a DHCPv6 client (see Day 23, "DHCP and DNS").

NOTE: To manually configure an interface's link-local address, use the following command syntax:

```
Router(config)# ipv6 address ipv6-address/prefix-length link-local
```

Configuration Example

The preferred IPv6 configuration method often is to manually configure the full IPv6 address because you can control the number of hexadecimal digits you must type when testing connectivity or troubleshooting a problem. You can see this by comparing the EUI-64 method to a full configuration. In Example 18-4, the interfaces on R1 are all configured using the EUI-64 method.

Example 18-4 Configuring Interfaces Using the EUI-64 Method

```
R1(config)# interface g0/0
R1(config-if)# ipv6 address 2001:db8:acad:1::/64 eui-64
R1(config-if)# interface g0/1
R1(config-if)# ipv6 address 2001:db8:acad:2::/64 eui-64
R1(config-if)# interface s0/0/0
R1(config-if)# ipv6 address 2001:db8:acad:3::/64 eui-64
R1(config-if)# do show ipv6 interface brief
GigabitEthernet0/0 [up/up]
    FE80::2D0:97FF:FE20:A101
    2001:DB8:ACAD:1:2D0:97FF:FE20:A101
GigabitEthernet0/1      [up/up]
    FE80::2D0:97FF:FE20:A102
    2001:DB8:ACAD:2:2D0:97FF:FE20:A102
Serial0/0/0            [down/down]
    FE80::20C:FFFF:FE77:A401
    2001:DB8:ACAD:3:20C:FFFF:FE77:A401
<output omitted>
```

Notice the number of hexadecimal digits in the IPv6 addresses highlighted in the output from the **show ipv6 interface brief** command. Imagine having to ping the GigabitEthernet 0/0 address 2001:DB8:ACAD:1:2D0:97FF:FE20:A101.

Furthermore, notice that the link-local addresses are also rather complex. To reduce the complexity of the router's configuration, verification, and troubleshooting, it is a good practice to manually configure the link-local address as well as the IPv6 global unicast address. In Example 18-5, R1 is reconfigured with simpler IPv6 addresses and with FE80::1 as the link-local address on all interfaces. Remember that the link-local address needs to be unique only on that interface's link.

Example 18-5 Full IPv6 Address and Link-Local Address Configuration

```
R1(config-if)# interface g0/0
R1(config-if)# no ipv6 address 2001:db8:acad:1::/64 eui-64
R1(config-if)# ipv6 address 2001:db8:acad:1::1/64
R1(config-if)# ipv6 address fe80::1 link-local
R1(config-if)# interface g0/1
R1(config-if)# no ipv6 address 2001:db8:acad:2::/64 eui-64
R1(config-if)# ipv6 address 2001:db8:acad:2::1/64
R1(config-if)# ipv6 address fe80::1 link-local
R1(config-if)# interface s0/0/0
R1(config-if)# no ipv6 address 2001:db8:acad:3::/64 eui-64
R1(config-if)# ipv6 address 2001:db8:acad:3::1/64
R1(config-if)# ipv6 address fe80::1 link-local
R1(config-if)# do show ipv6 interface brief
GigabitEthernet0/0      [up/up]
  FE80::1
  2001:DB8:ACAD:1::1
GigabitEthernet0/1      [up/up]
  FE80::1
  2001:DB8:ACAD:2::1
Serial0/0/0            [down/down]
  FE80::1
  2001:DB8:ACAD:3::1
<output omitted>
```

NOTE: If you do not remove the previous IPv6 address configuration, each interface will have two IPv6 global unicast addresses. This is different than in IPv4, where simply configuring another IPv4 address with the **ip address** command overwrites any previous configuration. However, only one link-local address can exist per interface.

Compare the highlighted output from the **show ipv6 interface brief** command in Example 18-5 with the output in Example 18-4. You can see that simplifying the IPv6 addressing implementation can make your verification and troubleshooting job much easier.

To verify the full configuration of an interface, use the **show ipv6 interface** command. Example 18-6 shows the output for R1's GigabitEthernet 0/0 interface.

Example 18-6 The *show ipv6 interface gigabitethernet 0/0* Command

```
R1# show ipv6 interface gigabitethernet 0/0
GigabitEthernet0/0 is up, line protocol is up
  IPv6 is enabled, link-local address is FE80::1
  No Virtual link-local address(es):
  Global unicast address(es):
    2001:DB8:ACAD:1::1, subnet is 2001:DB8:ACAD:1::/64
  Joined group address(es):
    FF02::1
    FF02::1:FF00:1
  MTU is 1500 bytes
  ICMP error messages limited to one every 100 milliseconds
  ICMP redirects are enabled
  ICMP unreachables are sent
  ND DAD is enabled, number of DAD attempts: 1
  ND reachable time is 30000 milliseconds
  ND advertised reachable time is 0 milliseconds
  ND advertised retransmit interval is 0 milliseconds
  ND router advertisements are sent every 200 seconds
  ND router advertisements live for 1800 seconds
  ND advertised default router preference is Medium
  Hosts use stateless autoconfig for addresses.
```

Focus on the highlighted output in Example 18-6. IPv6 is enabled on this interface with a nice, short link-local address. The global unicast address and its subnet are listed, as is the address of multicast groups that this interface automatically joined. Do you remember what the FF02::1 and FF02::1:FF00:1 addresses are used for? If not, revisit Day 27.

That's all the IPv6 configurations for today. As we continue to review the exam topics in the upcoming days, we will incorporate IPv6 topics.

Verifying IPv4 and IPv6 Network Connectivity

As reviewed on Day 29, “Switch Configuration Basics,” **ping** and **traceroute** are helpful tools for verifying network connectivity. Example 18-7 demonstrates successful **ping** output on the router.

Example 18-7 Successful *ping* Output on a Router

```
R1# ping 192.168.3.10

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 192.168.3.10, timeout is 2 seconds:
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/4 ms
!Pinging an IPv6 destination
```

```
R1# ping 2001:db8:acad:1:290:dff:fee5:8095

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 2001:DB8:ACAD:1:290:CFF:FE05:8095, timeout is 2
seconds:
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 0/9/46 ms

R1#
```

Unsuccessful **ping** output shows periods (.) instead of exclamation points (!), as Example 18-8 demonstrates. The output would be the same in IPv6.

Example 18-8 Unsuccessful *ping* Output on a Router

```
R1# ping 192.168.3.2

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 192.168.3.2, timeout is 2 seconds:
.....
Success rate is 0 percent (0/5)

R1#
```

Example 18-9 shows output from a successful **traceroute** command.

Example 18-9 Successful *traceroute* Output on a Router

```
R1# traceroute 192.168.3.10
Type escape sequence to abort.
Tracing the route to 192.168.3.10

 1  192.168.2.2      71 msec    70 msec    72 msec
 2  192.168.3.10    111 msec   133 msec   115 msec
R1#
!Tracing to an IPv6 destination.

R2# traceroute 2001:db8:acad:1:290:cff:fee5:8095
Type escape sequence to abort.
Tracing the route to 2001:DB8:ACAD:1:290:CFF:FE05:8095

 1 2001:DB8:ACAD:3::1 1 msec 1 msec 1 msec
 2 2001:DB8:ACAD:1:290:CFF:FE05:8095 1 msec 1 msec 0 msec
R2#
```

Unsuccessful traces show the last successful hop and the asterisks for each attempt until the user cancels. To cancel the **traceroute** command on a router, use the key combination **Ctrl+Shift+6** and then press the **x** key. Example 18-10 shows unsuccessful **traceroute** output. The output would be the same with IPv6.

Example 18-10 Unsuccessful traceroute Output on a Router

```
R1# traceroute 192.168.3.2
Type escape sequence to abort.
Tracing the route to 192.168.3.2

 1 192.168.2.2 71 msec 70 msec 72 msec
 2 *      *      *
 3 *      *      *
 4 *      *      *
 5 *

R1#
```

Using Telnet or SSH to remotely access another device also tests connectivity. More important, these remote access methods test whether a device has been correctly configured so that you can access it for management purposes. This can be important when a device is truly remote (for example, across town or in another city). Day 20, “LAN Security and Device Hardening” reviews SSH configuration and verification in greater detail.

During the basic configuration tasks earlier, you entered the commands to properly configure the vty lines for SSH remote access. If you are accessing a device configured with SSH from a PC, you use the SSH setting in your terminal client. However, you can use the **ssh** command on a router or switch to access another device configured with SSH. Example 18-11 shows how to use SSH to remotely access R2 from R1.

Example 18-11 Remote Access Using SSH

```
R1# ssh ?
  -c Select encryption algorithm
  -l Log in using this user name
  -m Select HMAC algorithm
  -o Specify options
  -p Connect to this port
  -v Specify SSH Protocol Version
  -vrf Specify vrf name
  WORD IP address or hostname of a remote system

R1# ssh -l ?
  WORD Login name
R1# ssh -l admin ?
  -c Select encryption algorithm
  -m Select HMAC algorithm
  -o Specify options
  -p Connect to this port
  -v Specify SSH Protocol Version
  -vrf Specify vrf name
  WORD IP address or hostname of a remote system
```

```
R1# ssh -l admin 192.168.2.2
Password:

*****
WARNING!! Unauthorized Access Prohibited!!
*****
```


R2>

NOTE: During your CCNA studies and lab practice, you most likely used a Telnet configuration to remotely access your lab equipment. Although Telnet is easier to use than SSH, remember that using SSH is considered best practice. Therefore, during the CCNA exam, be ready to use SSH to remotely access devices on simulation questions because Telnet might not be configured or allowed.

Small Office or Home Office Routers

Figure 18-3 shows the common options for small office or home office (SOHO) Internet connections.

Figure 18-3 Common SOHO Internet Connections

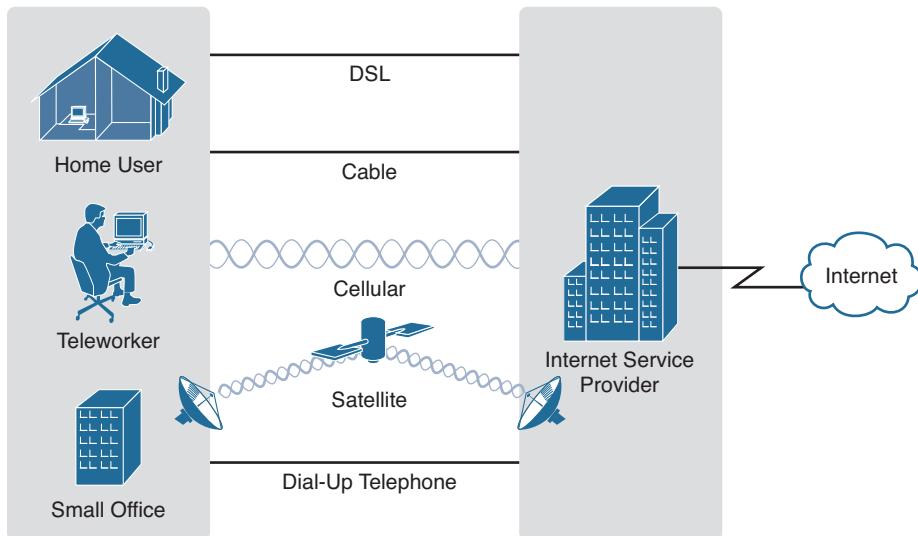

The connection options shown in Figure 18-3 are as follows:

- **Cable:** Typically offered by cable television (CATV) service providers, cable transmits the Internet data signal on the same cable that delivers cable television. It provides high bandwidth, high availability, and an always-on connection to the Internet.
- **DSL:** Digital Subscriber Line, which runs over telephone lines, provides high bandwidth, high availability, and an always-on connection to the Internet.


- **Cellular:** Cellular Internet access uses a cell phone network to connect. Wherever you can get a cellular signal, you can get cellular Internet access. Performance is limited by the capabilities of the phone and the cell tower to which it is connected.
- **Satellite:** Satellite Internet access is used in areas that would otherwise have no Internet connectivity at all. Satellite dishes require a clear line of sight to the satellite.
- **Dial-up telephone:** Dial-up is a low-bandwidth option that uses any phone line and a modem. Dial-up is considered a legacy technology, but you might see it on the exam.

A SOHO router is typically used to create the connection to the home user and small office connections in Figure 18-4. SOHO routers typically have two features that an enterprise router would be less likely to have:

- SOHO routers almost always use the Internet and virtual private network (VPN) technology for their WAN connections to send data back and forth to the rest of the enterprise.
- A SOHO router is almost always a multifunction device that does routing, LAN switching, VPN, wireless, and maybe other features.

Figure 18-4 shows a typical SOHO site. The three icons that represent a router, a switch, and an access point actually all exist inside one box. The UTP cables are shown only to indicate that these devices are connected. The actual connection is in the hardware of the SOHO router. On the left, the SOHO router provides wired and wireless LAN servers, and on the right, it provides WAN access through a cable Internet connection.

Figure 18-4 Internal Functions SOHO Router

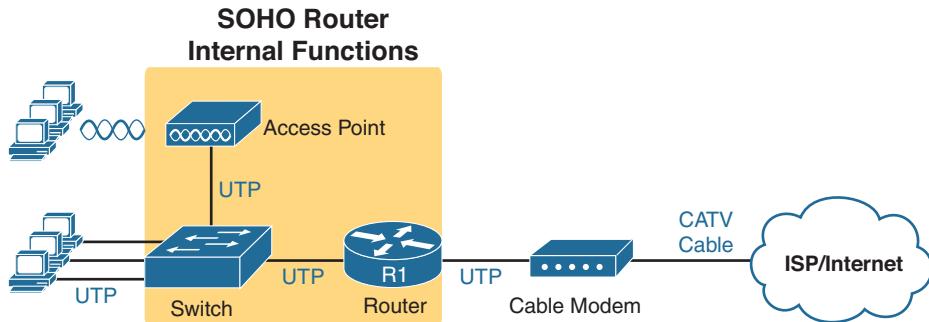

Basic IP Addressing Troubleshooting

If you are sure you manually configured the correct IP address and subnet mask (IPv4) or network prefix (IPv6), then any basic IP addressing issue is likely to be the result of a misconfigured default gateway or duplicate addresses.

Default Gateway

A misconfigured default gateway is one of the most common problems in either a static or dynamically assigned IP addressing scheme. For a device to communicate across multiple networks, it must be configured with an IP address, a subnet mask or network prefix, and a default gateway.

The default gateway is used when the host wants to send a packet to a device on another network. The default gateway address is generally the router interface address attached to the local network to which the host is connected.

To resolve a default gateway that was manually configured incorrectly, consult the topology and addressing documentation to verify what the device's default gateway should be; it is normally a router attached to the same LAN.

NOTE: A misconfigured DHCP server can also cause a default gateway issue. Some DHCP server configurations, such as the Easy IP IOS feature, might require the administrator to manually configure the default gateway address. If this is configured incorrectly, no devices will have access beyond the LAN. DHCP is reviewed on Day 23.

Duplicate IP Addresses

Under some circumstances, duplicate IP address conflicts can occur between a statically configured network device and a PC obtaining automatic IP addressing information from the DHCP server. To resolve such an IP addressing conflict, you can do one of the following:

- Convert the network device with the static IP address to a DHCP client
- On the DHCP server, exclude the static IP address of the end device from the DHCP pool of addresses

The first solution is a quick fix that you can do in the field. However, the device more than likely needs a static configuration. The second solution might be the better long-term choice. However, it requires that you have administrative privileges to configure the DHCP server.

You might also encounter IP addressing conflicts when manually configuring IP on an end device in a network that uses only static IP addresses. In this case, you must determine which IP addresses are available on the particular IP subnet and configure accordingly. This case illustrates why it is so important for a network administrator to maintain detailed documentation, including IP address assignments and topologies, for end devices.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7	10
	17
Switching, Routing, and Wireless Essentials	1
CCNA 200-301 Official Cert Guide, Volume 1	15
Portable Command Guide	14

This page intentionally left blank

The Routing Table

CCNA 200-301 Exam Topics

- Interpret the components of routing table
- Determine how a router makes a forwarding decision by default

Key Topics

Today we review the two router functions: path determination and packet forwarding. Routers use routing tables to determine the best path. A router either uses a directly connected route, a route to a remote network, or a default route. Today, we review the structure of the routing table and its entries.

Two Router Functions

When a router receives an IP packet on one interface, it determines which interface to use to forward the packet to the destination. The primary functions of a router are to

- Determine the best path for forwarding packets, based on the information in its routing table
- Forward packets toward their destinations

Longest Match Determines Best Path

The best path in the routing table is also known as the *longest match*. The router uses the longest match process to find a match between the destination IP address of the packet and a routing entry in the routing table. The prefix length of the route in the routing table is used to determine the minimum number of far-left bits that must match. The longest match is the route in the routing table that has the greatest number of far-left bits matching the destination IP address of the packet. The route with the greatest number of equivalent far-left bits, or the longest match, is always the preferred route.

In Table 17-1, an IPv4 packet has the destination IPv4 address 172.16.0.10. The router has three route entries in its IPv4 routing table that match this packet: 172.16.0.0/12, 172.16.0.0/18, and 172.16.0.0/26. Of the three routes, 172.16.0.0/26 has the longest match and would be chosen to forward the packet.

Table 17-1 IPv4 Address Longest Match Example

Destination IPv4 Address		Address in Binary
172.16.0.10		10101100.000010000.00000000.00001010
Route Entry	Prefix/Prefix Length	Address in Binary
1	172.16.0.0/12	10101100.000010000.00000000.00001010
2	172.16.0.0/18	10101100.000010000.00000000.00001010
3	172.16.0.0/26	10101100.000010000.00000000.00001010

In Table 17-2, an IPv6 packet has the destination IPv6 address 2001:db8:c000::99. This example shows three route entries, but only two of them are valid matches; one of those is the longest match. The first two route entries have prefix lengths that have the required number of matching bits, as indicated by the prefix length. The third route entry is not a match because its /64 prefix requires 64 matching bits. For the prefix 2001:db8:c000:5555::/64 to be a match, the first 64 bits must match the destination IPv6 address of the packet. Only the first 48 bits match, so this route entry is not considered a match.

Table 17-2 IPv6 Address Longest Match Example

Route Entry	Prefix/Prefix Length	Does it match?
1	2001:db8:c000::/40	Match of 40 bits
2	2001:db8:c000::/48	Match of 48 bits (longest match)
3	2001:db8:c000:5555::/64	Does not match 64 bits

Three Packet Forwarding Decisions

After a router has determined the best path based on the longest match in the routing table, it can do one of three things:

- Forward the packet to a device on a directly connected network
- Forward the packet to a next-hop router
- Drop the packet because there is no match in the routing table

The primary responsibility of the packet forwarding function is to encapsulate packets in the appropriate data link frame type for the outgoing interface. For example, the data link frame format for a serial link could be Point-to-Point Protocol (PPP), High-Level Data Link Control (HDLC) protocol, or some other Layer 2 protocol.

Components of the Routing Table


A router examines the destination IP address of a packet and searches its routing table to determine where to forward the packet. The routing table contains a list of all known network addresses (prefixes) and where to forward the packet. These entries are known as *route entries*, or *routes*. The router forwards a packet using the best (longest) matching route entry.

Recall that a routing table stores three types of routing entries:

- **Directly connected networks:** These network route entries are active router interfaces. In Figure 17-1, the directly connected networks in the R1 IPv4 routing table are 10.0.1.0/24, 10.0.2.0/24, and 10.0.3.0/24.
- **Remote networks:** These network route entries are connected to other routers. Routers learn about remote networks either by being explicitly configured by an administrator or by exchanging route information using a dynamic routing protocol. In Figure 17-1, the remote networks in the R1 IPv4 routing table are 10.0.4.0/24 and 10.0.5.0/24.

- Default route:** The default route is used when there is no better (longer) match in the IP routing table. In Figure 17-1, the R1 IPv4 routing table has a default route to forward all packets to R2 for any remote network for which it does not have a more explicit route.

Figure 17-1 Topology for Route Types

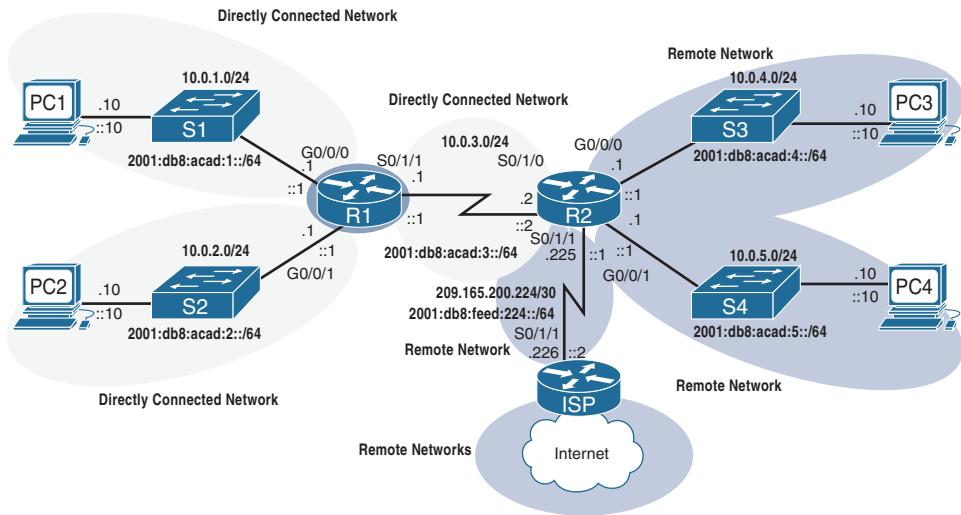

In Figure 17-1, R1 and R2 are using OSPF routing to advertise directly connected networks. R2 is connected to the Internet. The administrator configured a default route on R2 and propagated it to R1 in the OSPF routing process. R1 uses this propagated default route (O^*E2) to send packets to R2 when there is not a more specific entry in the routing table that matches the destination IP address. The routing table in Example 17-1 displays all the known IPv4 destination routes for R1.

Example 17-1 IPv4 Routing Table for R1

```
R1# show ip route
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
      D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
      N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
      E1 - OSPF external type 1, E2 - OSPF external type 2
      i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
      ia - IS-IS inter area, * - candidate default, U - per-user static route
      o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
      a - application route
      + - replicated route, % - next hop override, p - overrides from PfR
Gateway of last resort is 209.165.200.226 to network 0.0.0.0
O*E2  0.0.0.0/0 [110/1] via 10.0.3.2, 00:51:34, Serial0/1/1
      10.0.0.0/8 is variably subnetted, 8 subnets, 2 masks
C        10.0.1.0/24 is directly connected, GigabitEthernet0/0/0
```

```

L      10.0.1.1/32 is directly connected, GigabitEthernet0/0/0
C      10.0.2.0/24 is directly connected, GigabitEthernet0/0/1
L      10.0.2.1/32 is directly connected, GigabitEthernet0/0/1
C      10.0.3.0/24 is directly connected, Serial0/1/1
L      10.0.3.1/32 is directly connected, Serial0/1/1
O      10.0.4.0/24 [110/50] via 10.0.3.2, 00:24:22, Serial0/1/1
O      10.0.5.0/24 [110/50] via 10.0.3.2, 00:24:15, Serial0/1/1
R1#

```

The IPv6 routing table for R1 is shown in Example 17-2.

Example 17-2 IPv6 Routing Table for R1

```

R1# show ipv6 route
IPv6 Routing Table - 10 entries
Codes: C - Connected, L - Local, S - Static, R - RIP, B - BGP
      U - Per-user Static route
      I1 - ISIS L1, I2 - ISIS L2, IA - ISIS interarea, IS - ISIS summary
      O - OSPF intra, OI - OSPF inter, OE1 - OSPF ext 1, OE2 - OSPF ext 2
      ON1 - OSPF NSSA ext 1, ON2 - OSPF NSSA ext 2
      D - EIGRP, EX - EIGRP external
OE2 ::/0 [110/1], tag 2
      via FE80::2:C, Serial0/0/1
C  2001:DB8:ACAD:1::/64 [0/0]
      via GigabitEthernet0/0/0, directly connected
L  2001:DB8:ACAD:1::1/128 [0/0]
      via GigabitEthernet0/0/0, receive
C  2001:DB8:ACAD:2::/64 [0/0]
      via GigabitEthernet0/0/1, directly connected
L  2001:DB8:ACAD:2::1/128 [0/0]
      via GigabitEthernet0/0/1, receive
C  2001:DB8:ACAD:3::/64 [0/0]
      via Serial0/1/1, directly connected
L  2001:DB8:ACAD:3::1/128 [0/0]
      via Serial0/1/1, receive
O  2001:DB8:ACAD:4::/64 [110/50]
      via FE80::2:C, Serial0/1/1
O  2001:DB8:ACAD:5::/64 [110/50]
      via FE80::2:C, Serial0/1/1
L  FF00::/8 [0/0]
      via Null0, receive
R1#

```

At the beginning of each routing table entry is a code that is used to identify the type of route or how the route was learned. Common route sources (codes) include these:

- **L:** Directly connected local interface IP address
- **C:** Directly connected network
- **S:** Static route manually configured by an administrator
- **O:** OSPF
- **D:** EIGRP

For directly connected routes, R1 adds three route entries with the codes **C** (for the connected network) and **L** (for the local interface IP address of the connected network). The route entries also identify the exit interface to use to reach the network.

R1 and R2 are also using the OSPF dynamic routing protocol to exchange router information. Therefore, R1 has a route entry, designated with the code **O**, for the 10.0.4.0/24 and 10.0.5.0/24 networks.

A default route has a network address of all zeros. For example, the IPv4 network address is 0.0.0.0. Instead of being statically configured, the default route was learned through OSPF and coded as **O***E2 for IPv4 and **OE2** for IPv6. The asterisk (*) in IPv4 means that this is a candidate for a default route. The E2 in IPv6 designates this route as an external type 2 route. In OSPF, this means the route is to another routing domain outside OSPF. In this case, the route is to the ISP router connected to the network, as shown in the topology in Figure 17-1. R2 is configured with a static default route and is propagating that route in OSPF with the **default-information originate** command configured in routing configuration mode.

Routing Table Principles

Table 17-3 describes three routing table principles. These issues are addressed by the proper configuration of dynamic routing protocols or static routes on all the routers between the source and destination devices. The examples in the table refer to the R1 and R2 in Figure 17-1.

Table 17-3 Routing Principles and Examples


Routing Table Principle	Example
Every router makes its decision alone, based on the information it has in its own routing table.	R1 can only forward packets using its own routing table. R1 does not know what routes are in the routing tables of other routers.
The information in the routing table of one router does not necessarily match the information in the routing table of another router.	Just because R1 has routed in its routing table to a network on the Internet through R2 does not mean that R2 knows about that same network.
Routing information about a path does not provide return routing information.	R1 receives a packet with the destination IP address of PC1 and the source IP address of PC3. Just because R1 knows to forward the packet out its G0/0/0 interface doesn't necessarily mean that R1 knows how to forward packets originating from PC1 back to the remote network of PC3.

Route Entry Structure


Figure 17-2 shows IPv4 and IPv6 routing table entries on R1 for the route to remote network 10.0.4.0/24 and 2001:db8:acad:4::/64. Both of these routes were learned dynamically from the OSPF routing protocol.

Figure 17-2 IPv4 and IPv6 Route Entry Examples

IPv4 Routing Table Entry

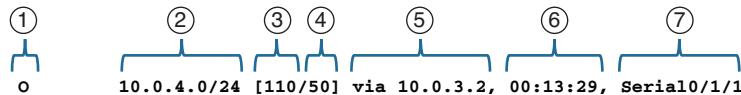

IPv6 Routing Table Entry

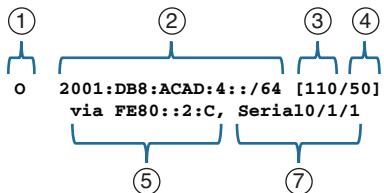

In the Figure 17-2, the numbers identify the following information:

1. **Route source:** This indicates how the route was learned.
2. **Destination network (prefix and prefix length):** This identifies the address of the remote network.
3. **Administrative distance:** This identifies the trustworthiness of the route source. Lower values indicate preferred route sources.
4. **Metric:** This identifies the value assigned to reach the remote network. Lower values indicate preferred routes.
5. **Next hop:** This identifies the IP address of the next router to forward the packet to.
6. **Route timestamp:** This identifies how much time has passed since the route was learned.
7. **Exit interface:** This identifies the egress interface to use for outgoing packets to reach their final destination.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7	6
Switching, Routing, and Wireless Essentials	14
CCNA 200-301 Official Cert Guide, Volume 1	16

Inter-VLAN Routing

CCNA 200-301 Exam Topics

- Configure and verify IPv4 addressing and subnetting
- Configure and verify interswitch connectivity

Key Points

Today we review inter-VLAN routing. Because Layer 2 switches cannot perform the routing function, it is necessary to implement a Layer 3 device to route between VLANs.

Inter-VLAN Routing Concepts


Inter-VLAN communications cannot occur without a Layer 3 device. Three options are available when implementing inter-VLAN routing:

- Traditional or legacy inter-VLAN routing
- Router on a stick
- Multilayer switching

Let's briefly review the concept of each method.


Legacy Inter-VLAN Routing

Legacy inter-VLAN routing requires multiple physical interfaces on both the router and the switch. When using a router to facilitate inter-VLAN routing, the router interfaces can be connected to separate VLANs. Devices on those VLANs send traffic through the router to reach other VLANs. For example, in Figure 16-1, each S2 interface connected to R1 is assigned to a VLAN. The router is already configured with the appropriate IP addressing on each of its interfaces, so no additional configuration is required. However, you can see that if you used a separate interface for each VLAN on a router, you would quickly run out of interfaces.

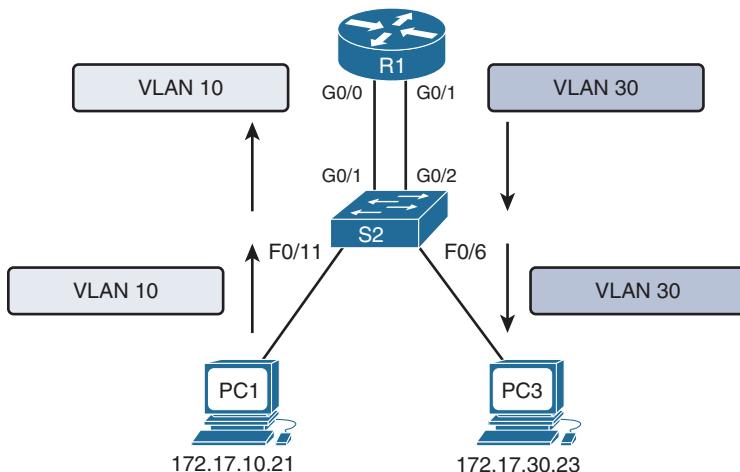Figure 16-1 Legacy Inter-VLAN Routing

Router on a Stick


Today router software makes it possible to configure one router interface as multiple trunks by using subinterfaces. In Figure 16-2, the physical GigabitEthernet 0/0 interface is logically subdivided into two logical interfaces. The one switch trunk is configured to trunk both VLAN 10 and VLAN 30, and each subinterface on the router is assigned a separate VLAN. The router performs inter-VLAN routing by accepting VLAN-tagged traffic on the trunk interface coming from the adjacent switch. The router then forwards the routed traffic, VLAN-tagged for the destination VLAN, out the same physical interface that it used to receive the traffic.

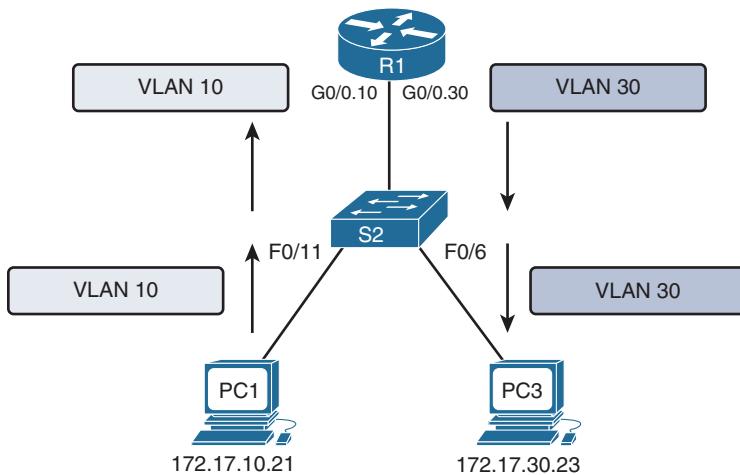Figure 16-2 Router on a Stick

Multilayer Switching

Router on a stick works fine in a small business with one or two routers. But the most scalable solution in enterprise networks today is to use a multilayer switch to replace both the router and the switch, as in Figure 16-3. A multilayer switch performs both functions: switching traffic within the same VLAN and routing traffic between VLANs.

Figure 16-3 Multilayer Switching

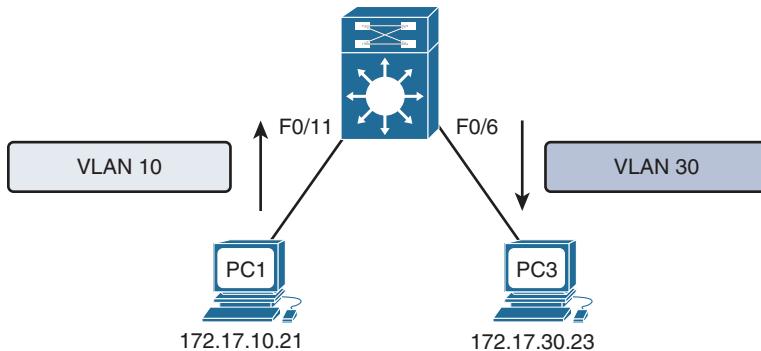

Multilayer switching is more scalable than any other inter-VLAN routing implementation for two main reasons:


- Routers have a limited number of available interfaces to connect to networks.
- Limited amounts of traffic can be accommodated on the physical link at one time.

With a multilayer switch, packets are forwarded down a single trunk line to obtain new VLAN tagging information. A multilayer switch does not completely replace the functionality of a router but can be thought of as a Layer 2 device that is upgraded to have some routing capabilities.

Router on a Stick Configuration and Verification

When configuring inter-VLAN routing using the router on a stick model, the physical interface of the router must be connected to a trunk link on the adjacent switch. On the router, subinterfaces are created for each unique VLAN on the network. Each subinterface is assigned an IP address specific to its subnet/VLAN and is also configured to tag frames for that VLAN. This way, the router can keep the traffic from the different subinterfaces separated as it traverses the trunk link back to the switch.

Configuring inter-VLAN routing is pretty straightforward. Refer to the sample topology in Figure 16-4 to review the commands.

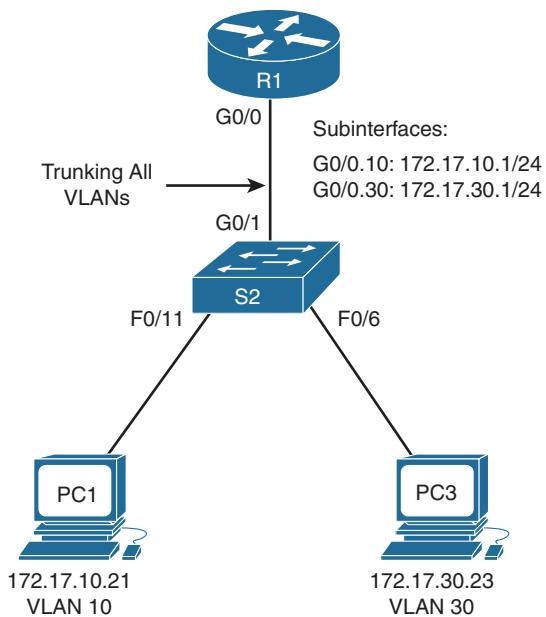Figure 16-4 Topology for Inter-VLAN Routing

This router-on-a-stick topology is configured using the following steps on the router:

- Step 1.** Activate the physical interface that is trunking with the switch by using the **no shutdown** command.
- Step 2.** Enter subinterface configuration mode for the first VLAN that needs routing. One convention is to use the VLAN number as the subinterface number. For example, the **interface g0/1.10** command enters subinterface configuration mode for VLAN 10.
- Step 3.** Configure the trunking encapsulation type by using the subinterface configuration command **encapsulation {dot1q | isl} vlan-number [native]**. Set the encapsulation to **dot1q**.
 - Inter-switch link (ISL) encapsulation, a Cisco proprietary trunking method, existed before the IEEE 802.1Q standard, which is now the recommended best practice. However, older switches that are still in use might support only ISL. In those cases, you substitute the **dot1q** keyword for **isl**.
 - On some routers, the optional keyword **native** must be configured for the native VLAN before the router will route native VLAN traffic. The following examples do not use native VLAN routing; refer to your study resources for more on this topic.
- Step 4.** Configure the IP address and subnet mask.
- Step 5.** Repeat steps 2–4 for each additional VLAN that needs routing.

Assuming that the switch is already configured with VLANs and trunking, Example 16-1 shows the commands to configure R1 to provide routing between VLAN 10 and VLAN 30.

Example 16-1 Configuring R1 to Route Between VLANs

```
R1(config)# interface g0/0
R1(config-if)# no shutdown
R1(config-if)# interface g0/0.10
R1(config-subif)# encapsulation dot1q 10
R1(config-subif)# ip address 172.17.10.1 255.255.255.0
R1(config-subif)# interface g0/0.30
R1(config-subif)# encapsulation dot1q 30
R1(config-subif)# ip address 172.17.30.1 255.255.255.0
```

To verify the configuration, use the **show vlans**, **show ip route**, and **show ip interface brief** commands to make sure the new networks are in the routing table and the subinterfaces are up and up, as in Example 16-2.

Example 16-2 Verifying the Inter-VLAN Routing Configuration

```
R1# show vlans
<output omitted>
Virtual LAN ID: 10 (IEEE 802.1Q Encapsulation)
  VLAN Trunk Interface: GigabitEthernet0/0.10
  Protocols Configured: Address: Received: Transmitted:
    IP          172.17.10.1      0      0
<output omitted>
Virtual LAN ID: 30 (IEEE 802.1Q Encapsulation)
  VLAN Trunk Interface: GigabitEthernet0/0.30
  Protocols Configured: Address: Received: Transmitted:
    IP          172.17.30.1      0      0
<output omitted>
R1# show ip route
<output omitted>

Gateway of last resort is not set

  172.17.0.0/16 is variably subnetted, 4 subnets, 2 masks
C    172.17.10.0/24 is directly connected, GigabitEthernet0/0.10
L    172.17.10.1/32 is directly connected, GigabitEthernet0/0.10
C    172.17.30.0/24 is directly connected, GigabitEthernet0/0.30
L    172.17.30.1/32 is directly connected, GigabitEthernet0/0.30
R1# show ip interface brief
Interface      IP-Address  OK? Method Status  Protocol
GigabitEthernet0/0   unassigned YES unset   up       up
GigabitEthernet0/0.10 172.17.10.1 YES manual  up       up
GigabitEthernet0/0.30 172.17.30.1 YES manual  up       up
```

GigabitEthernet0/1	unassigned	YES	unset	administratively down	down
Serial0/0/0	unassigned	YES	manual	administratively down	down
Serial0/0/1	unassigned	YES	manual	administratively down	down
Vlan1	unassigned	YES	manual	administratively down	down
R1#					

Assuming that the switch and PCs are configured correctly, the two PCs should now be able to ping each other. R1 should route the traffic between VLAN 10 and VLAN 30.

Multilayer Switching Inter-VLAN Routing Configuration and Verification

Most enterprise networks use multilayer switches to achieve high-packet processing rates using hardware-based switching. All Catalyst multilayer switches support the following types of Layer 3 interfaces:


- **Switch virtual interface (SVI):** Virtual VLAN interface used for inter-VLAN routing
- **Routed port:** Similar to a physical interface on a Cisco IOS router

All Layer 3 Cisco Catalyst switches (3500, 4500, and 6500 Series) support routing protocols. Catalyst 2960 Series switches running Cisco IOS Release 12.2(55) or later support static routing.

Creating Additional SVIs

The SVI for the default VLAN (VLAN 1) already exists to permit remote switch administration. For a topology such as the one in Figure 16-5, additional SVIs must be explicitly created.

Figure 16-5 Switched Virtual Interfaces

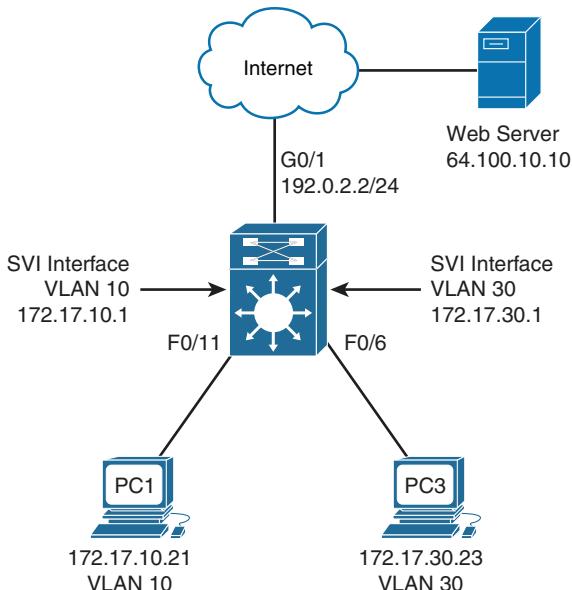

Create an SVI by using the **interface vlan *vlan-id*** command. The *vlan-id* used corresponds to the VLAN tag associated with data frames coming from that VLAN. For example, when creating an SVI as a gateway for VLAN 10, use the **interface VLAN 10** command. Assign an IP address and enable the new SVI with the **no shutdown** command.

In addition, the switch must be configured to do Layer 3 routing with the **ip routing** global configuration command.

The following are some advantages of SVIs (and the only disadvantage is that multilayer switches are more expensive):

- They are much faster than routers on a stick because everything is hardware switched and routed.
- No external links are needed from the switch to the router for routing.
- They are not limited to one link. Layer 2 EtherChannels can be used between the switches to get more bandwidth.
- Latency is much lower because it does not need to leave the switch.

Example 16-3 shows the configuration for the Layer 3 switch in Figure 16-5.

Example 16-3 Configuring a Switch to Use SVIs for Routing

```
MLS(config)# ip routing
MLS(config)# vlan 10
MLS(config)# vlan 30
MLS(config)# interface vlan 10
MLS(config-if)# ip address 172.17.10.1 255.255.255.0
MLS(config-if)# interface vlan 30
MLS(config-if)# ip address 172.30.10.1 255.255.255.0
MLS(config-if)# interface f0/11
MLS(config-if)# switchport mode access
MLS(config-if)# switchport access vlan 10
MLS(config-if)# interface f0/6
MLS(config-if)# switchport mode access
MLS(config-if)# switchport access vlan 30
MLS(config-if)# end
MLS# show ip route
<Code output omitted>

Gateway of last resort is not set

    172.17.0.0/24 is subnetted, 2 subnets
C      172.17.10.0 is directly connected, Vlan10
C      172.17.30.0 is directly connected, Vlan30
MLS#
```

Because the command **ip routing** is configured, MLS has a routing table. PC1 and PC3 can now ping each other.

Configuring a Layer 3 Routed Port

In Figure 16-5, notice that the GigabitEthernet 0/1 interface has an IP address assigned to it. To configure this interface as a routed port, turn off switching with the **no switchport** interface configuration command. Then configure the IP address as normal. The **ip routing** command was enabled in the previous step. However, the Layer 3 switch still needs a default route to send traffic to the Internet. Example 16-4 shows the commands to configure the routed port and default route.

Example 16-4 Configuring a Switch with a Routed Port

```
MLS(config)# interface g0/1
MLS(config-if)# no switchport
MLS(config-if)# ip address 192.0.2.2 255.255.255.0
!The no shutdown command is not required because switch interfaces are already activated.
MLS(config-if)# exit
MLS(config)# ip route 0.0.0.0 0.0.0.0 g0/1
MLS(config)# exit
MLS# show ip route
<Code output omitted>

Gateway of last resort is 0.0.0.0 to network 0.0.0.0

      172.17.0.0/24 is subnetted, 2 subnets
C        172.17.10.0 is directly connected, Vlan10
C        172.17.30.0 is directly connected, Vlan30
C        192.0.2.0/24 is directly connected, GigabitEthernet0/1
S*      0.0.0.0/0 is directly connected, GigabitEthernet0/1
MLS#
```

The **show ip route** command verifies that the Layer 3 switch has a route to the Internet. PC1 and PC3 can now access the web server.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Switching, Routing, and Wireless Essentials	4
CCNA 200-301 Official Cert Guide, Volume 1	17
Portable Command Guide	10

Static and Default Route Configuration

CCNA 200-301 Exam Topics

- Configure and verify IPv4 and IPv6 static routing

Key Topics

Today we focus on static and default routing for IPv4 and IPv6. Static routes are a common part of an enterprise's routing policy. Static routes can be used to force traffic to use a specific path or to establish a default route out of the enterprise. The network administrator hard-codes static routes into the routing table. Thus, a network administrator must monitor and maintain static routes to ensure connectivity.

Static and Default Routing Overview

When a router configured with a dynamic routing protocol can learn routes from other routers without additional input from the network administrator, why would you use static routing?

Situations vary, and other reasons might be unique to a particular implementation, but, in general, you use static routing in these cases:


- In a small network that requires only simple routing
- In a hub-and-spoke network topology
- When you want to create a quick ad hoc route
- As a backup when the primary route fails

In general, you do not use static routes in these cases:

- In a large network
- When the network is expected to scale

Static routes are commonly used when you are routing from a larger network to a stub network (a network that is accessed by a single link). Static routes can also be useful for specifying a default route or gateway of last resort. For example, in Figure 15-1, R2 is attached to a stub network.

In Figure 15-1, no other route out of the stub network exists except to send packets to HQ. Therefore, it makes sense to configure R2 with a default route pointing out the interface attached to HQ. Similarly, HQ has only one way to route packets destined for the stub network attached to R2. Therefore, it makes sense to configure HQ with a static route pointing out the interface attached to R2. Yes, you could configure both routers with a dynamic routing protocol, but that could introduce a level of complexity that might not be necessary in a stub network situation.

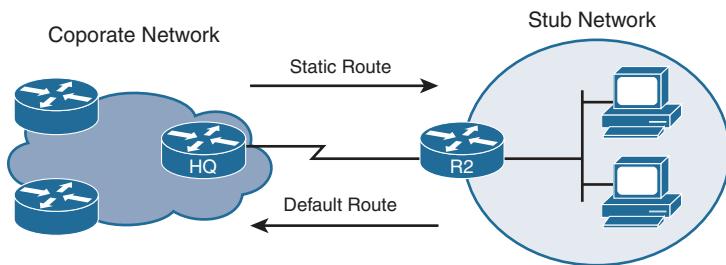Figure 15-1 Example of a Stub Network

IPv4 Static Route Configuration

To configure a static route, use the **ip route** command with the following relevant syntax:

```
Router(config)# ip route network-address subnet-mask {ip-address | exit-interface}
[administrative-distance]
```

The explanation for each parameter follows:

- **network-address:** The destination network address of the remote network to be added to the routing table.
- **subnet-mask:** The subnet mask of the remote network to be added to the routing table. The subnet mask can be modified to summarize a group of networks.

One or both of the following parameters are used:

- **ip-address:** Commonly referred to as the next-hop router's IP address
- **exit-interface:** The outgoing interface used in forwarding packets to the destination network

In addition, the optional **administrative-distance** parameter is used when configuring a floating static route, as you see later in today's review.

Figure 15-2 shows the topology we use today in reviewing IPv4 static and default routing.

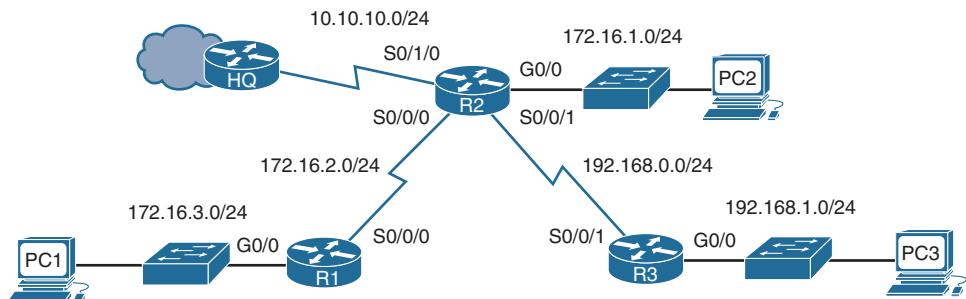
Figure 15-2 IPv4 Static and Default Routing Topology

Table 15-1 shows the IPv4 addressing scheme used with the topology in Figure 15-2.

Table 15-1 IPv4 Addressing Scheme

Device	Interface	IP Address	Subnet Mask	Default Gateway
HQ	S0/0/0	10.10.10.1	255.255.255.0	—
R1	G0/0	172.16.3.1	255.255.255.0	—
	S0/0/0	172.16.2.2	255.255.255.0	—
R2	G0/0	172.16.1.1	255.255.255.0	—
	S0/0/0	172.16.2.1	255.255.255.0	—
	S0/0/1	192.168.0.1	255.255.255.0	—
	S0/1/0	10.10.10.2	255.255.255.0	—
R3	G0/0	192.168.1.1	255.255.255.0	—
	S0/0/1	192.168.0.2	255.255.255.0	—
PC1	NIC	172.16.3.10	255.255.255.0	172.16.3.1
PC2	NIC	172.16.1.10	255.255.255.0	172.16.1.1
PC3	NIC	192.168.2.10	255.255.255.0	192.168.2.1

Assume that R1 is configured and knows about its own directly connected networks. Example 15-1 shows the routing table for R1 before any static routing is configured.

Example 15-1 R1 Routing Table Before Static Routes Are Configured

```
R1# show ip route
<output omitted>

Gateway of last resort is not set

      172.16.0.0/16 is variably subnetted, 4 subnets, 2 masks
C        172.16.2.0/24 is directly connected, Serial0/0/0
L        172.16.2.2/32 is directly connected, Serial0/0/0
C        172.16.3.0/24 is directly connected, GigabitEthernet0/0
L        172.16.3.1/32 is directly connected, GigabitEthernet0/0
R1#
```

R1 does not know about these remote networks:

- **172.16.1.0/24:** The LAN on R2
- **192.168.0.0/24:** The serial network between R2 and R3
- **192.168.1.0/24:** The LAN on R3
- **10.10.10.0/24:** The serial network between R2 and HQ
- **0.0.0.0/0:** All other networks accessible through HQ

IPv4 Static Routes Using the Next-Hop Parameter

Using the next-hop parameter, R1 can be configured with three static routes—one for each network R1 does not yet know about. Example 15-2 shows the command syntax.

Example 15-2 Static Route Configuration with the Next-Hop Parameter

```
R1(config)# ip route 172.16.1.0 255.255.255.0 172.16.2.1
R1(config)# ip route 192.168.0.0 255.255.255.0 172.16.2.1
R1(config)# ip route 192.168.1.0 255.255.255.0 172.16.2.1
R1(config)# ip route 10.10.10.0 255.255.255.0 172.16.2.1
```

The interface that routes to the next hop must be up and up before the static routes can be entered in the routing table. Example 15-3 verifies that the static routes are now in the routing table.

Example 15-3 R1 Routing Table After Static Routes Are Configured

```
R1# show ip route
<output omitted>

Gateway of last resort is not set

    10.0.0.0/24 is subnetted, 1 subnets
S      10.10.10.0/24 [1/0] via 172.16.2.1
    172.16.0.0/16 is variably subnetted, 5 subnets, 2 masks
S      172.16.1.0/24 [1/0] via 172.16.2.1
C      172.16.2.0/24 is directly connected, Serial0/0/0
L      172.16.2.2/32 is directly connected, Serial0/0/0
C      172.16.3.0/24 is directly connected, GigabitEthernet0/0
L      172.16.3.1/32 is directly connected, GigabitEthernet0/0
S      192.168.0.0/24 [1/0] via 172.16.2.1
S      192.168.1.0/24 [1/0] via 172.16.2.1
R1#
```

When using the next-hop parameter, the router must have a route in the table to the network that the next-hop address belongs to. In the highlighted line in Example 15-3, we see that R1 does indeed have a route to the 172.16.2.0/24 network, which includes the next-hop address 172.16.2.1. However, configuring a next-hop address requires the router to perform a recursive lookup to find the exit interface before it can send the packet out the Serial 0/0/0 interface.

IPv4 Static Routes Using the Exit Interface Parameter

To avoid a recursive lookup and have a router immediately send packets to the exit interface, configure the static route using the *exit-interface* parameter instead of the *ip-address* next-hop parameter.

For example, on R2, we can configure static routes to the R1 and R3 LANs by specifying the exit interface:

```
R2(config)# ip route 172.16.3.0 255.255.255.0 serial 0/0/0
R2(config)# ip route 192.168.1.0 255.255.255.0 serial 0/0/1
```

Any previous static routes to this network using a next-hop IP address should be removed. R2 now has two static routes in its routing table (see Example 15-4) that it can use immediately to route to the 172.16.3.0/24 and 192.168.1.0/24 networks without having to do a recursive route lookup.

Example 15-4 R2 Routing Table After the Static Route Is Configured

```
R2# show ip route
<output omitted>

Gateway of last resort is not set

    10.0.0.0/8 is variably subnetted, 2 subnets, 2 masks
C      10.10.10.0/24 is directly connected, Serial0/1/0
L      10.10.10.2/32 is directly connected, Serial0/1/0
    172.16.0.0/16 is variably subnetted, 5 subnets, 2 masks
C      172.16.1.0/24 is directly connected, GigabitEthernet0/0
L      172.16.1.1/32 is directly connected, GigabitEthernet0/0
C      172.16.2.0/24 is directly connected, Serial0/0/0
L      172.16.2.1/32 is directly connected, Serial0/0/0
S      172.16.3.0/24 is directly connected, Serial0/0/0
    192.168.0.0/24 is variably subnetted, 2 subnets, 2 masks
C      192.168.0.0/24 is directly connected, Serial0/0/1
L      192.168.0.1/32 is directly connected, Serial0/0/1
S      192.168.1.0/24 is directly connected, Serial0/0/1

R2#
```

NOTE: Although the highlighted output in Example 15-4 shows that the routes are directly connected, technically, that is not true. However, as far as R2 is concerned, the exit interface is the way to get to the destination, much as with truly directly connected routes. Another benefit to using the exit interface configuration instead of the next-hop address configuration is that the static route does not depend on the IP address stability of the next hop. Most of the time, using the exit interface configuration is the best practice, so we use the exit interface configuration for all static and default routes as we continue with the reviews.

IPv4 Default Route Configuration

A default route is a special kind of static route used to represent all routes with zero or no bits matching. In other words, when no routes have a more specific match in the routing table, the default route is a match.

The destination IP address of a packet can match multiple routes in the routing table. For example, consider having the following two static routes in the routing table:

```
172.16.0.0/24 is subnetted, 3 subnets
S      172.16.1.0 is directly connected, Serial0/0/0
S      172.16.0.0/16 is directly connected, Serial0/0/1
```

A packet destined for 172.16.1.10, the packet's destination IP address, matches both routes. However, the 172.16.1.0 route is the more specific route because the destination matches the first 24 bits, whereas the destination matches only the first 16 bits of the 172.16.0.0 route. Therefore, the router uses the route with the most specific match.

A default route is a route that matches all packets. Commonly called a quad-zero route, a default route uses 0.0.0.0 (thus the term *quad-zero*) for both the *network-address* and the *subnet-mask* parameters, as in this syntax:

```
Router(config)# ip route 0.0.0.0 0.0.0.0 {ip-address | exit-interface}
```

Referring to the topology in Figure 15–2, assume that HQ has a connection to the Internet. From the perspective of R2, all default traffic can be sent to HQ for routing outside the domain known to R2.

The following command configures R2 with a default route pointing to HQ:

```
R2(config)# ip route 0.0.0.0 0.0.0.0 serial 0/1/0
```

R2 now has a gateway of last resort listed in the routing table—a candidate default route indicated by the asterisk (*) next to the S code (see Example 15–5).

Example 15–5 R2 Routing Table After the Default Route Is Configured

```
R2# show ip route
<some codes omitted>
    * - candidate default, U - per-user static route, o - ODR
    P - periodic downloaded static route

Gateway of last resort is 0.0.0.0 to network 0.0.0.0

    10.0.0.0/8 is variably subnetted, 2 subnets, 2 masks
C      10.10.10.0/24 is directly connected, Serial0/1/0
L      10.10.10.2/32 is directly connected, Serial0/1/0
    172.16.0.0/16 is variably subnetted, 5 subnets, 2 masks
C      172.16.1.0/24 is directly connected, GigabitEthernet0/0
L      172.16.1.1/32 is directly connected, GigabitEthernet0/0
C      172.16.2.0/24 is directly connected, Serial0/0/0
L      172.16.2.1/32 is directly connected, Serial0/0/0
S      172.16.3.0/24 is directly connected, Serial0/0/0
    192.168.0.0/24 is variably subnetted, 2 subnets, 2 masks
C      192.168.0.0/24 is directly connected, Serial0/0/1
L      192.168.0.1/32 is directly connected, Serial0/0/1
S      192.168.1.0/24 is directly connected, Serial0/0/1
S*  0.0.0.0/0 is directly connected, Serial0/1/0
R2#
```

From R1's and R3's perspective, R2 is the default route. The following commands configure R1 and R3 with a default route pointing to R2:

```
R1(config)# ip route 0.0.0.0 0.0.0.0 serial 0/0/0
!
R3(config)# ip route 0.0.0.0 0.0.0.0 serial 0/0/1
```

Again, we can verify that the default route is now in the routing table for R1 (see Example 15-6).

Example 15-6 R1 and R3 Routing Tables After the Default Route Is Configured

```
!R1!!!!!!!
R1# show ip route
<some codes omitted>
    * - candidate default, U - per-user static route, o - ODR
    P - periodic downloaded static route

Gateway of last resort is 0.0.0.0 to network 0.0.0.0

    172.16.0.0/16 is variably subnetted, 4 subnets, 2 masks
C        172.16.2.0/24 is directly connected, Serial0/0/0
L        172.16.2.2/32 is directly connected, Serial0/0/0
C        172.16.3.0/24 is directly connected, GigabitEthernet0/0
L        172.16.3.1/32 is directly connected, GigabitEthernet0/0
S* 0.0.0.0/0 is directly connected, Serial0/0/0

R1#
!

!R3!!!!!!!
R3# show ip route
<some codes omitted>
    * - candidate default, U - per-user static route, o - ODR
    P - periodic downloaded static route

Gateway of last resort is 0.0.0.0 to network 0.0.0.0

    192.168.0.0/24 is variably subnetted, 2 subnets, 2 masks
C        192.168.0.0/24 is directly connected, Serial0/0/1
L        192.168.0.2/32 is directly connected, Serial0/0/1
    192.168.1.0/24 is variably subnetted, 2 subnets, 2 masks
C        192.168.1.0/24 is directly connected, GigabitEthernet0/0
L        192.168.1.1/32 is directly connected, GigabitEthernet0/0
S* 0.0.0.0/0 is directly connected, Serial0/0/1

R3#
```

After evaluating the complete routing tables for R1, R2, and R3 shown in Examples 15-5 and 15-6, you can see that R1 and R3 need only one route out—a default route. R2 acts as a hub router to the R1 and R3 spokes. Therefore, it needs two static routes pointing to the R1 and R3 LANs.

R2 also has a route out to HQ for any destinations it does not know about. But what about HQ? Currently, HQ does not have routes back to any of the networks accessible through R2. Any traffic from PC1, PC2, and PC3 is thus currently confined to the R1, R2, and R3 networks. None of these PCs can ping the HQ interface address 10.10.10.1. In the traceroute output in Example 15-7, failure occurs after R2 responds. This is because HQ receives the ICMP requests from PC1 but does not have a route back to the 172.16.3.0/24 network. Therefore, HQ drops the packets.

Example 15-7 A Failed traceroute from PC1 to HQ

```
C:\> tracert 10.10.10.1

Tracing route to 10.10.10.1 over a maximum of 30 hops:

 1  0 ms    0 ms    1 ms    172.16.3.1
 2  0 ms    0 ms    1 ms    172.16.2.1
 3  *         *         *      Request timed out.
 4  ^C

C:\>
```

In the next section, we configure HQ with static routes to complete the static route configuration for the topology in Figure 15-2.

IPv4 Summary Static Route Configuration

Before configuring five separate static routes for each of the networks in Figure 15-2, notice that the 172.16 networks can be summarized into one route and that the 192.168 networks can be summarized into one route. Example 15-8 shows the five routes in binary, with the bits in common highlighted.

Example 15-8 Summary Route Calculation for HQ Static Routes

```
Summary calculation for the 172.16 networks:
10101100.00010000.00000001.00000000
10101100.00010000.00000010.00000000
10101100.00010000.00000011.00000000

Summary calculation for the 192.168 networks:
11000000.10101000.00000000.00000000
11000000.10101000.00000001.00000000
```

The summary route for the 172.16 networks is 172.16.0.0/22 because the three network addresses have 22 bits in common. Although this summary static route is not part of the current addressing scheme, it also includes the route 172.16.0.0/24. The summary route for the 192.168 networks is 192.168.0.0/23 because the two network addresses have 23 bits in common.

We can now configure HQ with two summary static routes instead of five individual static routes:

```
HQ(config)# ip route 172.16.0.0 255.255.252.0 serial 0/0/0
HQ(config)# ip route 192.168.0.0 255.255.254.0 Serial0/0/0
```

Now PC1 can successfully trace a route to the HQ interface, as Example 15-9 shows.

Example 15-9 A Successful traceroute from PC1 to HQ

```
C:\> tracert 10.10.10.1

Tracing route to 10.10.10.1 over a maximum of 30 hops:

 1       1 ms      0 ms      0 ms      172.16.3.1
 2       0 ms      1 ms      2 ms      172.16.2.1
 3       1 ms      2 ms      1 ms      10.10.10.1

Trace complete.

C:\>
```

The trace is successful because HQ now has a route back to PC1's network, as shown in Example 15-10.

Example 15-10 HQ Routing Table with IPv4 Summary Static Routes

```
HQ# show ip route
<output omitted>

Gateway of last resort is not set

  10.0.0.0/8 is variably subnetted, 2 subnets, 2 masks
C      10.10.10.0/24 is directly connected, Serial0/0/0
L      10.10.10.1/32 is directly connected, Serial0/0/0
  172.16.0.0/22 is subnetted, 1 subnets
S      172.16.0.0/22 is directly connected, Serial0/0/0
S      192.168.0.0/23 is directly connected, Serial0/0/0
HQ#
```

IPv6 Static Routing

Static routing with IPv6 is similar to static routing with IPv4. We can use the same topology but change the addressing to IPv6, as shown in Figure 15-3.

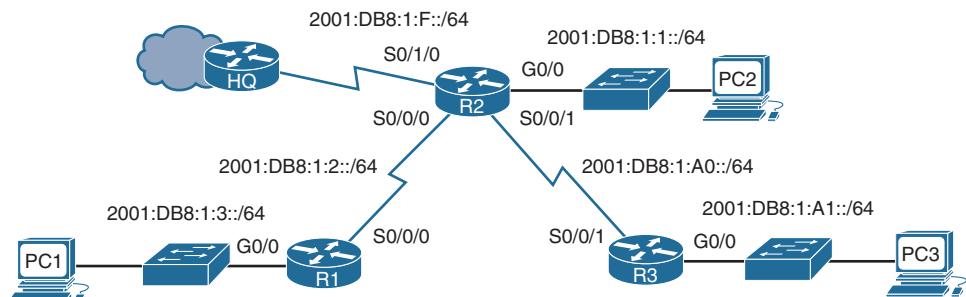
Figure 15-3 Static and Default Routing IPv6 Topology

Table 15-2 shows the IPv6 addressing scheme used with the topology in Figure 15-3.

Table 15-2 IPv6 Addressing Scheme

Device	Interface	IPv6 Address/Prefix	Default Gateway
HQ	S0/0/0	2001:DB8:1:F::1/64	—
	Link-local	FE80::F	—
R1	G0/0	2001:DB8:1:3::1/64	—
	S0/0/0	2001:DB8:1:2::2/64	—
R2		FE80::1	—
	G0/0	2001:DB8:1:1::1/64	—
	S0/0/0	2001:DB8:1:2::1/64	—
	S0/0/1	2001:DB8:1:A0::1/64	—
	S0/1/0	2001:DB8:1:F::2/64	—
	Link-local	FE80::2	—
R3	G0/0	2001:DB8:1:A1::1/64	—
	S0/0/1	2001:DB8:1:A0::2/64	—
	Link-local	FE80::3	—
PC1	NIC	2001:DB8:1:3:209:7CFF:FE9A:1A87/64	FE80::1
PC2	NIC	2001:DB8:1:1:204:9AFF:FE3:C943/64	FE80::2
PC3	NIC	2001:DB8:1:A1:201:C9FF:FE5:D3A/64	FE80::3

NOTE: The IPv6 addressing for the PCs is set to autoconfiguration. Pinging from PC to PC would not really be much fun. However, the IPv6 addresses are not manually set so that you can practice your knowledge of how EUI-64 works. Can you figure out the MAC address for each PC? If not, review Day 27, “IPv6 Addressing.” (Hint: FFFE and flip the bit.) If you are following along using a simulator, you might want to consider manually configuring the PCs with easier IPv6 addresses—such as 2001:DB8:1:3::A/64 on PC1. Doing so will greatly improve your pinging experience.

IPv6 Static Route Configuration

The command syntax for IPv6 static routing is similar to the syntax for IPv4:

```
Router(config)# ipv6 route ipv6-prefix/prefix-length {ipv6-address |  
exit-interface} [administrative-distance]
```

Therefore, the following commands configure R2 with static routes to the R1 and R3 LANs:

```
R2(config)# ipv6 route 2001:DB8:1:3::/64 Serial0/0/0  
R2(config)# ipv6 route 2001:DB8:1:A1::/64 Serial0/0/1
```

As highlighted in the output from the **show ipv6 route** command in Example 15-11, R2 now has routes in the routing table to the R1 and R3 LANs.

Example 15-11 R2 IPv6 Routing Table After Static Routes Are Configured

```
R2# show ipv6 route  
IPv6 Routing Table - 11 entries  
<code output omitted>  
C 2001:DB8:1:1::/64 [0/0]  
    via ::, GigabitEthernet0/0  
L  2001:DB8:1:1::1/128 [0/0]  
    via ::, GigabitEthernet0/0  
C  2001:DB8:1:2::/64 [0/0]  
    via ::, Serial0/0/0  
L  2001:DB8:1:2::1/128 [0/0]  
    via ::, Serial0/0/0  
S  2001:DB8:1:3::/64 [1/0]  
    via ::, Serial0/0/0  
C  2001:DB8:1:F::/64 [0/0]  
    via ::, Serial0/1/0  
L  2001:DB8:1:F::2/128 [0/0]  
    via ::, Serial0/1/0  
C  2001:DB8:1:A0::/64 [0/0]  
    via ::, Serial0/0/1  
L  2001:DB8:1:A0::1/128 [0/0]  
    via ::, Serial0/0/1  
S  2001:DB8:1:A1::/64 [1/0]  
    via ::, Serial0/0/1  
L  FF00::/8 [0/0]  
    via ::, Null0
```

IPv6 Default Route Configuration

The following is the command syntax for an IPv6 default route:

```
Router(config)# ipv6 route ::/0 {ipv6-address | exit-interface}
```

Just as with the quad-zero in IPv4, the double colon (::) means all 0s or any address, and the /0 means any prefix length.

Continuing with the example in Figure 15-3, we can configure R1, R2, and R3 with the following default routes:

```
R1(config)# ipv6 route ::/0 serial 0/0/0
R2(config)# ipv6 route ::/0 serial 0/1/0
R3(config)# ipv6 route ::/0 serial 0/0/1
```

The highlights in Example 15-12 show the default routes for R1, R2, and R3.

Example 15-12 Default Routes in the Routing Tables for R1, R2, and R3

```
!R1!!!!!!!
R1# show ipv6 route
IPv6 Routing Table - 6 entries
<code output omitted>
S  ::/0 [1/0]
    via ::, Serial0/0/0
<output for connected and local routes omitted>

!R2!!!!!!!
R2# show ipv6 route
IPv6 Routing Table - 12 entries
<code output omitted>
S  ::/0 [1/0]
    via ::, Serial0/1/0
S  2001:DB8:1:3::/64 [1/0]
    via ::, Serial0/0/0
S  2001:DB8:1:A1::/64 [1/0]
    via ::, Serial0/0/1
<output for connected and local routes omitted>

!R3!!!!!!!
R3# show ipv6 route
IPv6 Routing Table - 6 entries
<code output omitted>
S  ::/0 [1/0]
    via ::, Serial0/0/1
<output for connected and local routes omitted>
```

IPv6 Summary Static Route Configuration

Much as in the IPv4 static routing scenario, HQ can be configured with two summary static routes to the R1, R2, and R3 LANs. Example 15-13 shows the first four hexets (64 bits) of the five routes in binary, with the bits in common highlighted.

Example 15-13 Summary Route Calculation for HQ Static Routes

```
Summary calculation for the first four hexets of 2001:DB8:1:1::/64,
2001:DB8:1:2::/64, and 2001:DB8:1:3::/64 networks:
0010000000000001:0000110110111000:0000000000000001:0000000000000001::
0010000000000001:0000110110111000:0000000000000001:0000000000000010::
0010000000000001:0000110110111000:0000000000000001:0000000000000011::
Summary calculation for the first four hexets of 2001:DB8:1:A0::/64 and
2001:DB8:1:A1::/64 networks:
0010000000000001:0000110110111000:0000000000000001:0000000101000000::
0010000000000001:0000110110111000:0000000000000001:000000010100001::
```

The first summary route is 2001:DB8:1::/62 because the three network addresses have 62 bits in common. Although this summary static route is not part of the current addressing scheme, it also includes the network 2001:DB8:1::/64. The second summary route is 2001:DB8:1:A0::/63 because the two network addresses have 63 bits in common.

You can now configure HQ with the following two summary static routes:

```
HQ(config)# ipv6 route 2001:DB8:1::/62 Serial0/0/0
HQ(config)# ipv6 route 2001:DB8:1:A0::/63 Serial0/0/0
```

Now HQ has two summary routes, as you can see in the highlighted entries in Example 15-14.

Example 15-14 HQ Routing Table with IPv6 Summary Static Routes

```
HQ# show ipv6 route
IPv6 Routing Table - 5 entries
<output omitted>
S  2001:DB8:1::/62 [1/0]
    via ::, Serial0/0/0
C  2001:DB8:1:F::/64 [0/0]
    via ::, Serial0/0/0
L  2001:DB8:1:F::1/128 [0/0]
    via ::, Serial0/0/0
S  2001:DB8:1:A0::/63 [1/0]
    via ::, Serial0/0/0
L  FF00::/8 [0/0]
    via ::, Null0
HQ#
```

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Switching, Routing, and Wireless Essentials	15
CCNA 200-301 Official Cert Guide, Volume 1	16
	18
	25
Portable Command Guide	15

OSPF Operation

CCNA 200-301 Exam Topics

- Determine how a router makes a forwarding decision by default
- Configure and verify single-area OSPFv2

Key Topics

Today we review the basic operation of OSPF. OSPFv2 is used for IPv4 routing, and OSPFv3 is used for IPv6 routing. Although the two versions share the same basic operation principles, we also review how they differ. Tomorrow, we will review single-area OSPFv2 configuration.


Single-Area OSPF Operation

The Internet Engineering Task Force (IETF) chose OSPF over Intermediate System-to-Intermediate System (IS-IS) as its recommended interior gateway protocol (IGP). In 1998, the OSPFv2 specification was updated in RFC 2328, “OSPF Version 2” (see <http://www.ietf.org/rfc/rfc2328>). Cisco IOS Software chooses OSPF routes over RIP routes because OSPF has an administrative distance (AD) of 110 versus RIP’s AD of 120.

OSPF Message Format

The data portion of an OSPF message is encapsulated in a packet. This data field can include one of five OSPF packet types. Figure 14-1 shows an encapsulated OSPF message in an Ethernet frame.

The OSPF packet header is included with every OSPF packet, regardless of its type. The OSPF packet header and packet type-specific data are then encapsulated in an IP packet. In the IP packet header, the protocol field is set to 89 to indicate OSPF, and the destination address is typically set to one of two multicast addresses: 224.0.0.5 or 224.0.0.6. If the OSPF packet is encapsulated in an Ethernet frame, the destination MAC address is also a multicast address: 01-00-5E-00-00-05 or 01-00-5E-00-00-06.

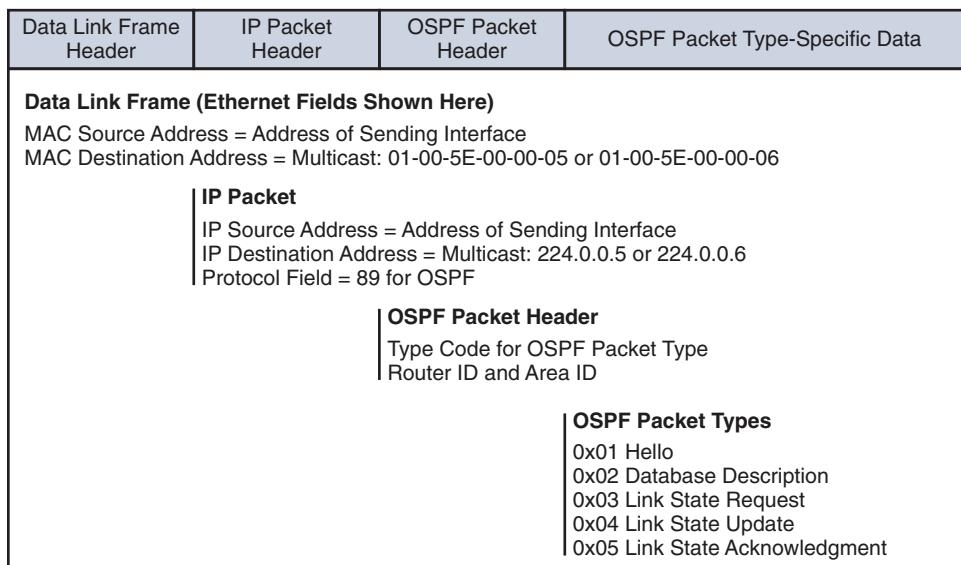Figure 14-1 Encapsulated OSPF Message


OSPF Packet Types

Each of the five OSPF packet types serves a specific purpose in the routing process:

- **Hello:** Hello packets establish and maintain adjacency with other OSPF routers.
- **DBD:** The database description (DBD) packet contains an abbreviated list of the sending router's link-state database. Receiving routers use it to check against the local link-state database.
- **LSR:** Receiving routers can request more information about any entry in the DBD by sending a link-state request (LSR).
- **LSU:** Link-state update (LSU) packets reply to LSRs and announce new information. LSUs contain 11 types of link-state advertisements (LSAs).
- **LSAck:** When an LSU is received, the router sends a link-state acknowledgment (LSAck) to confirm receipt of the LSU.

Neighbor Establishment

OSPF neighbors exchange hello packets to establish adjacency. Figure 14-2 shows the OSPF header and hello packet.

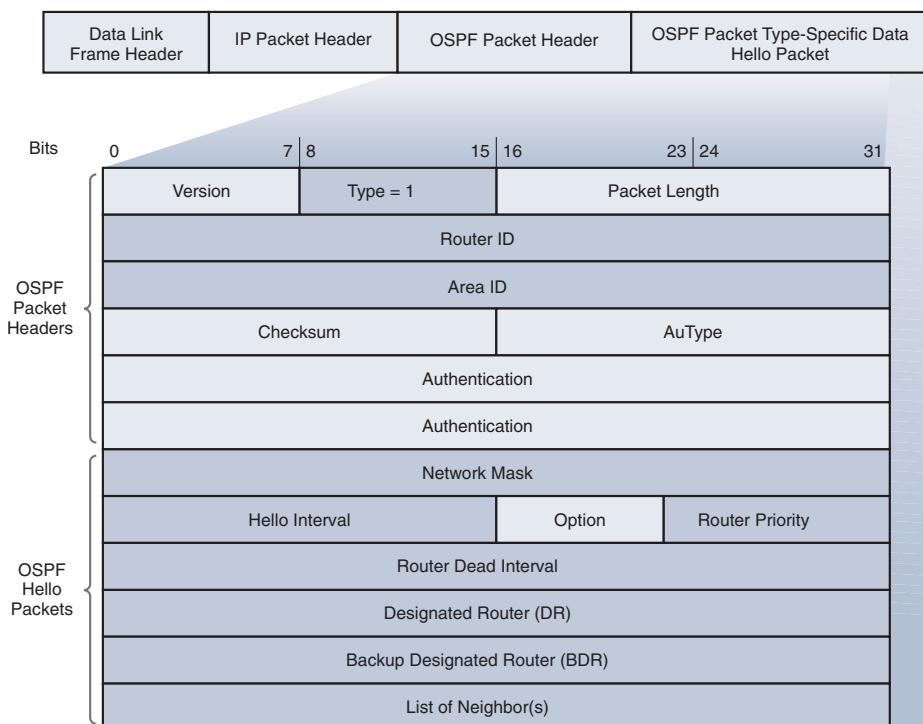Figure 14-2 OSPF Packet Header and Hello Packet

Important fields shown in the figure include the following:

- **Type:** OSPF packet type: Hello (Type 1), DBD (Type 2), LS Request (Type 3), LS Update (Type 4), LS ACK (Type 5)
- **Router ID:** ID of the originating router
- **Area ID:** Area from which the packet originated
- **Network Mask:** Subnet mask associated with the sending interface
- **Hello Interval:** Number of seconds between the sending router's hellos
- **Router Priority:** Used in DR/BDR election
- **Designated Router (DR):** Router ID of the DR, if any
- **Backup Designated Router (BDR):** Router ID of the BDR, if any
- **List of Neighbors:** The OSPF router ID of the neighboring router(s)

Hello packets are used to do the following:

- Discover OSPF neighbors and establish neighbor adjacencies
- Advertise parameters on which two routers must agree to become neighbors
- Elect the DR and BDR on multiaccess networks such as Ethernet and Frame Relay

Receiving an OSPF hello packet on an interface confirms for a router that another OSPF router exists on this link. OSPF then establishes adjacency with the neighbor. To establish adjacency, two OSPF routers must have the following matching interface values:

- Hello Interval
- Dead Interval
- Network Type
- Area ID

Before the two routers can establish adjacency, both interfaces must be part of the same network, including the same subnet mask. Full adjacency happens after the two routers have exchanged any necessary LSUs and have identical link-state databases. By default, OSPF hello packets are sent to the multicast address 224.0.0.5 (*ALLSPFRouters*) every 10 seconds on multiaccess and point-to-point segments and every 30 seconds on nonbroadcast multiaccess (NBMA) segments (Frame Relay, X.25, ATM). The default dead interval is four times the hello interval.

Link-State Advertisements

LSUs are the packets used for OSPF routing updates. An LSU packet can contain 11 types of LSAs, as Figure 14-3 shows.

Figure 14-3 LSUs Contain LSAs

Type	Packet Name	Description
1	Hello	Discovers neighbors and builds adjacencies between them.
2	DBD	Checks for database synchronization between routers.
3	LSR	Requests specific link-state records from router to router.
4	LSU	Sends specifically requested link-state records.
5	LSAck	Acknowledges the other packet types.



LSA Type	Description
1	Router LSAs
2	Network LSAs
3 or 4	Summary LSAs
5	Autonomous System External LSAs
6	Multicast OSPF LSAs
7	Defined for Not-So-Stubby Areas
8	External Attributes LSA for Border Gateway Protocol (BGP)
9, 10, 11	Opaque LSAs

The acronyms LSA and LSU are often used interchangeably.

An LSU contains one or more LSAs.

LSAs contain route information for destination networks.

LSA specifics are discussed in CCNP.

OSPF DR and BDR

Multiaccess networks create two challenges for OSPF regarding the flooding of LSAs:

- Creation of multiple adjacencies, with one adjacency for every pair of routers
- Extensive flooding of LSAs

The solution to managing the number of adjacencies and the flooding of LSAs on a multiaccess network is the designated router (DR). To reduce the amount of OSPF traffic on multiaccess networks, OSPF elects a DR and a backup DR (BDR). The DR is responsible for updating all other OSPF routers when a change occurs in the multiaccess network. The BDR monitors the DR and takes over as DR if the current DR fails. All other routers become DROTHERs. A DROTHER is a router that is neither the DR nor the BDR.

OSPF Algorithm

Each OSPF router maintains a link-state database containing the LSAs received from all other routers. When a router has received all the LSAs and built its local link-state database, OSPF uses Dijkstra's shortest path first (SPF) algorithm to create an SPF tree. This algorithm accumulates costs along each path, from source to destination. The SPF tree is then used to populate the IP routing table with the best paths to each network.

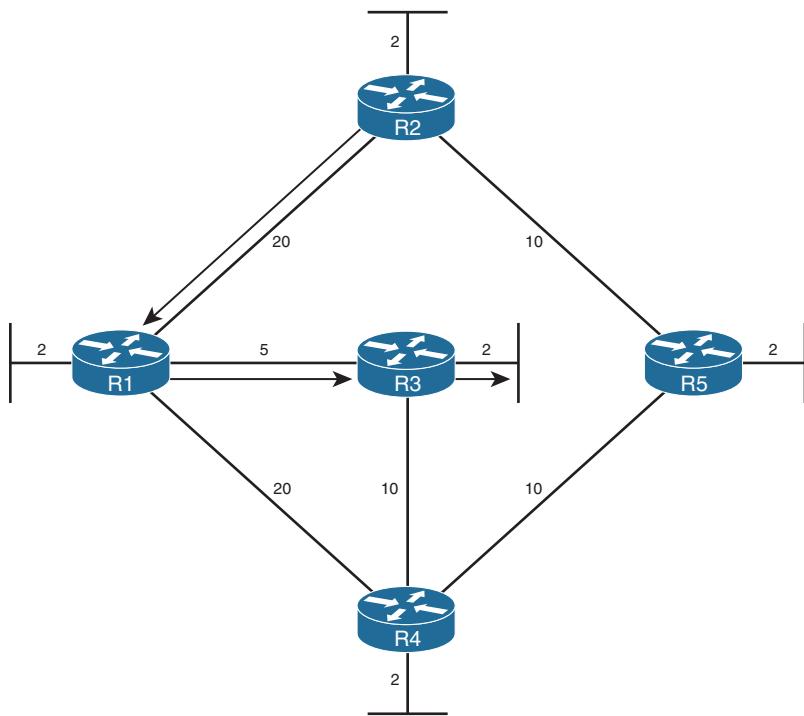
For example, in Figure 14-4, each path is labeled with an arbitrary value for cost. The cost of the shortest path for R2 to send packets to the LAN attached to R3 is 27 ($20 + 5 + 2 = 27$). Notice that this cost is not 27 for all routers to reach the LAN attached to R3. Each router determines its own cost to each destination in the topology. In other words, each router uses the SPF algorithm to calculate the cost of each path to a network and determines the best path to that network from its own perspective.

Table 14-1 lists the shortest path to each LAN for R1, along with the cost.

Table 14-1 SPF Tree for R1

Destination	Shortest Path	Cost
R2 LAN	R1 to R2	22
R3 LAN	R1 to R3	7
R4 LAN	R1 to R3 to R4	17
R5 LAN	R1 to R3 to R4 to R5	27

You should be able to create a similar table for each of the other routers in Figure 14-4.

Figure 14-4 Dijkstra's Shortest Path First Algorithm

Shortest Path for Host on R2 LAN to Reach Host on R3 LAN:
 $R2 \text{ to } R1 (20) + R1 \text{ to } R3 (5) + R3 \text{ to } \text{LAN} (2) = 27$

Link-State Routing Process

The following list summarizes the link-state routing process OSPF uses. All OSPF routers complete the following generic link-state routing process to reach a state of convergence:

- Step 1.** Each router learns about its own links and its own directly connected networks. This is done by detecting that an interface has a Layer 3 address configured and is in the up state.
- Step 2.** Each router is responsible for establishing adjacency with its neighbors on directly connected networks by exchanging hello packets.
- Step 3.** Each router builds a link-state packet (LSP) containing the state of each directly connected link. This is done by recording all the pertinent information about each neighbor, including neighbor ID, link type, and bandwidth.
- Step 4.** Each router floods the LSP to all neighbors, which then store all LSPs received in a database. Neighbors then flood the LSPs to their neighbors until all routers in the

area have received the LSPs. Each router stores a copy of each LSP received from its neighbors in a local database.

- Step 5.** Each router uses the database to construct a complete map of the topology and computes the best path to each destination network. The SPF algorithm is used to construct the map of the topology and determine the best path to each network. All routers have a common map or tree of the topology, but each router independently determines the best path to each network within that topology.

OSPFv2 Versus OSPFv3

In 1999, OSPFv3 for IPv6 was published in RFC 2740. In 2008, OSPFv3 was updated in RFC 5340 as OSPF for IPv6. However, it is still referred to as OSPFv3.

OSPFv3 has the same functionality as OSPFv2 but uses IPv6 as the network layer transport, communicating with OSPFv3 peers and advertising IPv6 routes. OSPFv3 also uses the SPF algorithm as the computation engine to determine the best paths throughout the routing domain.

As with all other IPv6 routing protocols, OSPFv3 has separate processes from its IPv4 counterpart. OSPFv2 and OSPFv3 each have separate adjacency tables, OSPF topology tables, and IP routing tables.

Similarities Between OSPFv2 and OSPFv3

OSPFv3 operates much like OSPFv2. Table 14-2 summarizes the operational features that OSPFv2 and OSPFv3 share.

Table 14-2 OSPFv2 and OSPFv3 Similarities

Feature	OSPFv2 and OSPFv3
Link state	Yes
Routing algorithm	SPF
Metric	Cost
Areas	Support the same two-level hierarchy
Packet types	Use the same hello, DBD, LSR, LSU, and LSAck packets
Neighbor discovery	Transition through the same states using hello packets
LSDB synchronization	Exchange contents of their LSDB between two neighbors
DR and BDR	Use the same function and election process
Router ID	Use a 32-bit router ID and the same process in determining the 32-bit router ID

Differences Between OSPFv2 and OSPFv3

Table 14-3 lists the major differences between OSPFv2 and OSPFv3.

Table 14-3 OSPFv2 and OSPFv3 Differences

Feature	OSPFv2	OSPFv3
Advertising	IPv4 networks	IPv6 prefixes
Source address	IPv4 source address	IPv6 link-local address
Destination address	Choice of Neighbor IPv4 unicast address 224.0.0.5, all-OSPF-routers multicast address 224.0.0.6, DR/BDR multicast address	Choice of Neighbor IPv6 link-local address FF02::5, all-OSPFv3-routers multicast address FF02::6, DR/BDR multicast address
Advertising networks	Configured using the network router configuration command	Configured using the ipv6 ospf area interface configuration command
IP unicast routing	IPv4 unicast routing enabled by default	Requires configuration of the ipv6 unicast- routing global configuration command
Authentication	Plain text and MD5	IPsec

Multiarea OSPF Operation

Single-area OSPF works fine in smaller networks in which the number of links is manageable. However, consider an OSPF single-area network with 900 routers and several thousand subnets. In this situation, the single-area design causes the following problems:

- **Large routing tables:** By default, OSPF does not summarize routing updates.
- **Large link-state database (LSDB):** In a single area, each router must maintain a database of all active links in the routing domain, regardless of whether that router is currently using a particular link.
- **Frequent SPF calculations:** In a large network, changes to the LSDB can cause routers to spend many CPU cycles recalculating the SPF algorithm and updating the routing table.

To address these issues, OSPF supports hierarchical design through the uses of multiple OSPF areas. Multiarea OSPF is useful in larger network deployments to reduce processing and memory overhead. This involves breaking the one large LSDB into several smaller LSDBs by using multiple OSPF areas.

Multiarea OSPF Design


Multiarea OSPF design follows a couple basic rules:

- Put all interfaces connected to the same subnet inside the same area.
- An area should be contiguous.

- Some routers might be internal to an area, with all interfaces assigned to that single area.
- Some routers might be area border routers (ABRs) because some interfaces connect to the backbone area and some connect to nonbackbone areas.
- All nonbackbone areas must connect to the backbone area (Area 0) by having at least one ABR connected to both the backbone area and the nonbackbone area.

Figure 14-5 shows a simple multiarea OSPF design with two areas (Area 1 and Area 2) connected to a backbone, Area 0.

Figure 14-5 Sample Multiarea OSPF Design

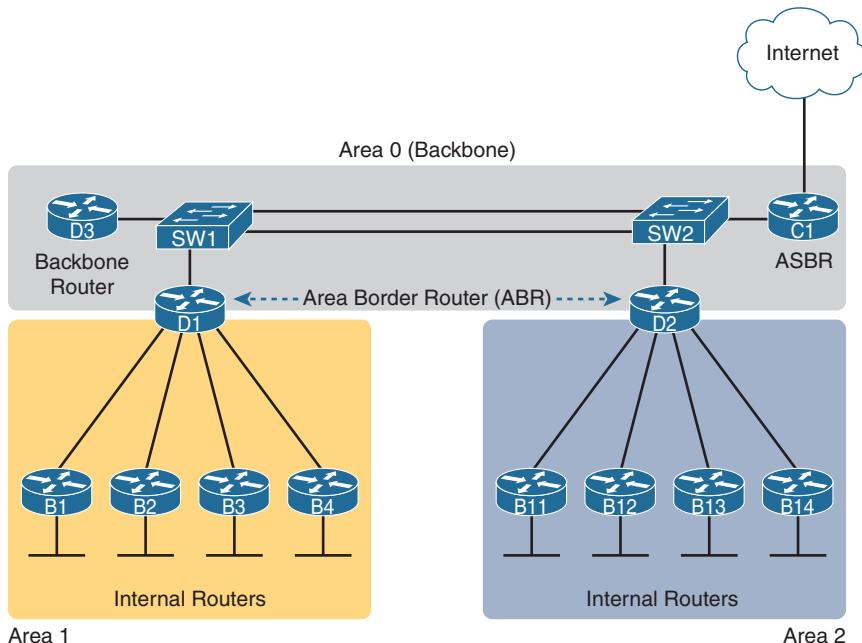

The figure also shows a few important multiarea OSPF design terms. Table 14-4 describes these terms.

Table 14-4 Multiarea OSPF Design Terminology

Term	Description
Area border router (ABR)	An OSPF router with interfaces connected to the backbone area and to at least one other area.
Backbone router	A router connected to the backbone area (includes ABRs).
Internal router	A router in one area (not the backbone area).
Autonomous system boundary router (ASBR)	A router that has at least one interface connected to an external network. An external network is a network that is not part of the routing domain, such as EIGRP, BGP, or one with static routing to the Internet, as Figure 14-5 shows.

Term	Description
Area	A set of routers and links that shares the same detailed LSDB information—but not with routers in other areas—for better efficiency
Backbone area	A special OSPF area to which all other areas must connect, such as Area 0
Intra-area route	A route to a subnet inside the same area as the router
Interarea route	A route to a subnet in an area the router is not a part of

Multiarea OSPF Improves Performance

In multiarea OSPF, all areas must connect to the backbone area. Routing still occurs between the areas. ABRs send interarea routes between areas. However, the CPU intensive routing operation of recalculating the SPF algorithm is done only for routes within an area. A change in one area does not cause an SPF algorithm recalculation in other areas.

In Figure 14–5, assume that a link fails in Area 1. Only the routers in Area 1 exchange LSAs. D1, the ABR for Area 1, will send one update to Area 0 after Area 1 has converged on the new information.

The following list summarizes how multiarea OSPF improves OSPF performance:

- The smaller per-area LSDB requires less memory.
- Routers require fewer CPU cycles to process the smaller per-area LSDB with the SPF algorithm, reducing CPU overhead and improving convergence time.
- Changes in the network (for example, links failing and recovering) require SPF calculations only on routers connected to the area where the link changed state, reducing the number of routers that must rerun SPF.
- Less information must be advertised between areas, reducing the bandwidth required to send LSAs.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	1
CCNA 200-301 Official Cert Guide, Volume 1	19
	21
Portable Command Guide	16

Single-Area OSPF Implementation

CCNA 200-301 Exam Topics

- Configure and verify single area OSPFv2

Key Topics

In Day 14, “OSPF Operation,” we reviewed the basic implementation of multiarea OSPF. Today we review the basic implementation of OSPFv2 for single-area network designs. We review the commands to configure and verify the implementation.

Single-Area OSPFv2 Configuration

To review the single-area OSPFv2 configuration commands, we use the topology in Figure 13-1 and the addressing scheme in Table 13-1.

Figure 13-1 OSPFv2 Configuration Topology

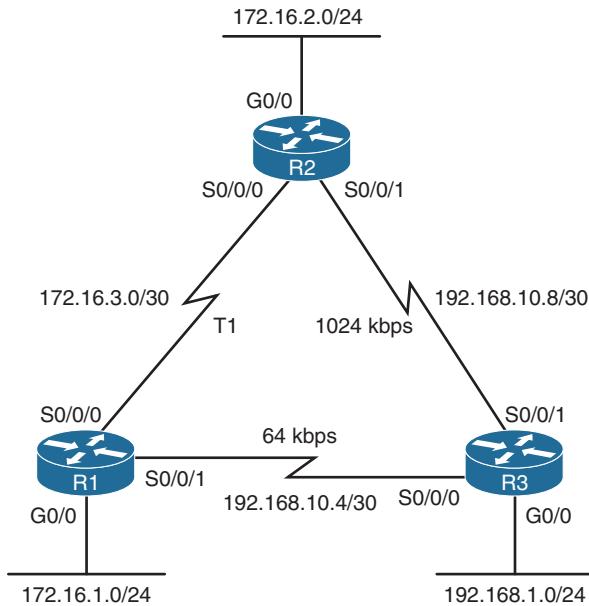


Table 13-1 Addressing Scheme for OSPFv2

Device	Interface	IP Address	Subnet Mask
R1	G0/0	172.16.1.1	255.255.255.0
	S0/0/0	172.16.3.1	255.255.255.252
	S0/0/1	192.168.10.5	255.255.255.252
R2	G0/0	172.16.2.1	255.255.255.0
	S0/0/0	172.16.3.2	255.255.255.252
	S0/0/1	192.168.10.9	255.255.255.252
R3	G0/0	192.168.1.1	255.255.255.0
	S0/0/0	192.168.10.6	255.255.255.252
	S0/0/1	192.168.10.10	255.255.255.252

The router ospf Command

OSPF is enabled with the **router ospf process-id** global configuration command:

```
R1(config)# router ospf process-id
```

process-id is a number between 1 and 65535 and is chosen by the network administrator. The process ID is locally significant. It does not have to match other OSPF routers to establish adjacencies with those neighbors. This differs from Enhanced Interior Gateway Routing Protocol (EIGRP). The EIGRP process ID and autonomous system number must match before two EIGRP neighbors can become adjacent.

For our review, we enable OSPF on all three routers using the same process ID, 10.

Router ID

The router ID plays an important role in OSPF, uniquely identifying each router in the OSPF routing domain. Cisco routers derive the router ID as follows:

- Step 1.** The router uses the IP address configured with the OSPF **router-id** command.
- Step 2.** If the router ID is not configured, the router chooses the highest IP address of any of its loopback interfaces.
- Step 3.** If no loopback interfaces are configured, the router chooses the highest active IP address of any of its physical interfaces.

The router IID can be viewed with several commands, including **show ip ospf interfaces**, **show ip protocols**, and **show ip ospf**.

Because the network administrator can control the OSPF **router-id** command and because loopback interfaces clutter the routing table, it is a best practice to configure the **router-id** command. The **router-id** command accepts an IPv4 address as its only argument. Example 13-1 shows the router ID configurations for the routers in our topology.

Example 13-1 Router ID Configurations

```
R1(config-router)# router-id 1.1.1.1
R2(config-router)# router-id 2.2.2.2
R3(config-router)# router-id 3.3.3.3
```

The router ID is selected when OSPF is configured with its first OSPF **network** command, so the **router-id** command should already be configured. However, you can force OSPF to release its current ID and use the configured router ID by clearing the OSPF routing process:

```
Router# clear ip ospf process
```

The network Command

The **network** command is used in router configuration mode:

```
Router(config-router)# network network-address wildcard-mask area area-id
```

The OSPF **network** command uses a combination of *network-address* and *wildcard-mask*. The network address, along with the wildcard mask, specifies the interface or range of interfaces that will be enabled for OSPF using this **network** command.

The wildcard mask is customarily configured as the inverse of a subnet mask. For example, R1's Serial 0/0/0 interface is on the 172.16.3.0/30 network. The subnet mask for this interface is /30, or 255.255.255.252. The inverse of the subnet mask results in the wildcard mask 0.0.0.3.

area area-id refers to the OSPF area. An OSPF area is a group of routers that share link-state information. All OSPF routers in the same area must have the same link-state information in their link-state databases. Therefore, all the routers within the same OSPF area must be configured with the same area ID on all routers. By convention, the area ID is 0.

As an alternative, OSPFv2 can be enabled using the **network intf-ip-address 0.0.0.0 area area-id** router configuration mode command.

Example 13-2 shows the **network** commands for all three routers, enabling OSPF on all interfaces. For R1, the alternative interface IP address and quad zero wildcard mask is configured.

Example 13-2 Configuring OSPF Networks

```
R1(config)# router ospf 10
R1(config-router)# network 172.16.1.1 0.0.0.0 area 0
R1(config-router)# network 172.16.3.1 0.0.0.0 area 0
R1(config-router)# network 192.168.10.5 0.0.0.0 area 0

R2(config)# router ospf 10
R2(config-router)# network 172.16.2.0 0.0.0.255 area 0
R2(config-router)# network 172.16.3.0 0.0.0.3 area 0
R2(config-router)# network 192.168.10.8 0.0.0.3 area 0
```

```
R3(config)# router ospf 10
R3(config-router)# network 192.168.1.0 0.0.0.255 area 0
R3(config-router)# network 192.168.10.4 0.0.0.3 area 0
R3(config-router)# network 192.168.10.8 0.0.0.3 area 0
```

Passive Interfaces

By default, OSPF messages are forwarded out all OSPF-enabled interfaces. However, these messages really need to be sent out only interfaces that connect to other OSPF-enabled routers. Sending out unneeded messages on a LAN affects the network in three ways:

- **Inefficient use of bandwidth:** Available bandwidth is consumed by transporting unnecessary messages.
- **Inefficient use of resources:** All devices on the LAN must process the message.
- **Increased security risk:** OSPF messages can be intercepted, and routing updates can be modified, corrupting the routing table.

Use the **passive-interface** command to prevent OSPF updates from being sent out unnecessary interfaces. For our topology in Figure 13-1, each router's GigabitEthernet 0/0 interface should be set to passive with the following command:

```
Router(config)# passive-interface gigabitethernet 0/0
```

As an alternative, you can make all interfaces passive by using the **passive-interface default** command. Then you can reenable interfaces that should not be passive by using the **no passive-interface interface** command.

Modifying the OSPF Metric

Cisco IOS Software uses the cumulative bandwidths of the outgoing interfaces from the router to the destination network as the cost value. At each router, the cost for an interface is calculated using the following formula:

$\text{Cisco IOS Cost for OSPF} = 10^8/\text{bandwidth in bps}$

In this calculation, the value 10^8 is known as the *reference bandwidth*. Table 13-2 shows the default OSPF costs using the default reference bandwidth for several types of interfaces.

Table 13-2 Cisco Default OSPF Cost Values

Interface Type	$10^8/\text{bps} = \text{Cost}$	Cost
10 Gigabit Ethernet (10 Gbps)	$10^8/10,000,000,000 \text{ bps} = 1$	1
Gigabit Ethernet (1 Gbps)	$10^8/1,000,000,000 \text{ bps} = 1$	1
Fast Ethernet (100 Mbps)	$10^8/100,000,000 \text{ bps} = 1$	1
Ethernet (10 Mbps)	$10^8/10,000,000 \text{ bps} = 10$	10

Interface Type	$10^8/\text{bps} = \text{Cost}$	Cost
T1 (1.544 Mbps)	$10^8/1,544,000 \text{ bps} = 64$	64
128 kbps	$10^8/128,000 \text{ bps} = 781$	781
64 kbps	$10^8/64,000 \text{ bps} = 1562$	1562

In Table 13-2, 10GigE, Gigabit Ethernet, and Fast Ethernet all have the same cost. That is because the OSPF cost value must be an integer. This was not an issue before the introduction of gigabit and higher data rates.

However, today's networks are certainly running at gigabit speeds. Therefore, as a matter of policy, you should change the reference bandwidth to accommodate networks with links faster than 100,000,000 bps (100 Mbps). Use the following command to change the reference bandwidth:

```
Router(config-router)# auto-cost reference-bandwidth Mbps
```

Because the value entered is in megabits per second, changing the reference bandwidth to 10000 ensures that all OSPF routers are ready to accurately calculate the cost for 10GigE networks. When used, this command should be entered on all routers so that the OSPF routing metric remains consistent. In fact, the Cisco IOS replies with the follow syslog message when you configure the **auto-cost reference-bandwidth** command:

```
% OSPF: Reference bandwidth is changed.  
Please ensure reference bandwidth is consistent across all routers.
```

For our topology in Figure 13-1, we enter the commands shown in Example 13-3.

Example 13-3 Changing the OSPF Reference Bandwidth

R1(config-router)# auto-cost reference-bandwidth 10000
R2(config-router)# auto-cost reference-bandwidth 10000
R3(config-router)# auto-cost reference-bandwidth 10000

Table 13-3 shows the modified cost values with the new reference bandwidth of 10,000,000,000 bps, or 10^{10} .

Table 13-3 OSPF Cost Values with Modified Reference Bandwidth = 10000

Interface Type	$10^{10}/\text{bps} = \text{Cost}$	Cost
10 Gigabit Ethernet (10 Gbps)	$10^{10}/10,000,000,000 \text{ bps} = 1$	1
Gigabit Ethernet (1 Gbps)	$10^{10}/1,000,000,000 \text{ bps} = 10$	10
Fast Ethernet (100 Mbps)	$10^{10}/100,000,000 \text{ bps} = 1$	100
Ethernet (10 Mbps)	$10^{10}/10,000,000 \text{ bps} = 10$	1000
T1 (1.544 Mbps)	$10^{10}/1,544,000 \text{ bps} = 64$	6477
128 kbps	$10^{10}/128,000 \text{ bps} = 781$	78125
64 kbps	$10^{10}/64,000 \text{ bps} = 1562$	156250 (see the Note)

NOTE: Although the cost for a 64-kbps speed calculates to 156250, the maximum OSPF cost for a Cisco router interface is 65535.

But we are not done: We still have one more adjustment to make to ensure that OSPF is using accurate costs. On Cisco routers, the default bandwidth on most serial interfaces is set to T1 speed, or 1.544 Mbps. But in our topology in Figure 13-1, we have the following actual speeds:

- The link between R1 and R2 is running at 1544 kbps (default value).
- The link between R2 and R3 is running at 1024 kbps.
- The link between R1 and R3 is running at 64 kbps.

You can modify the OSPF metric in two ways:

- Use the **bandwidth** command to modify the bandwidth value the Cisco IOS Software uses in calculating the OSPF cost metric.
- Use the **ip ospf cost** command, which enables you to directly specify the cost of an interface.

An advantage of configuring a cost over setting the interface bandwidth is that the router does not have to calculate the metric when the cost is manually configured. Also, the **ip ospf cost** command is useful in multivendor environments, where non-Cisco routers can use a metric other than bandwidth to calculate the OSPF costs.

Table 13-4 shows the two alternatives that can be used in modifying the costs of the serial links in the topology in Figure 13-1. The right side of the figure shows the **ip ospf cost** command equivalents of the **bandwidth** commands on the left.

Table 13-4 Comparing the *bandwidth* and *ip ospf cost* Commands

Adjusting the Interface Bandwidth	=	Manually Setting the OSPF Cost
R1(config)# interface S0/0/1	=	R1(config)# interface S0/0/1
R1(config-if)# bandwidth 64	=	R1(config-if)# ip ospf cost 65535
R2(config)# interface S0/0/1	=	R2(config)# interface S0/0/1
R2(config-if)# bandwidth 1024	=	R2(config-if)# ip ospf cost 9765
R3(config)# interface S0/0/0	=	R3(config)# interface S0/0/0
R3(config-if)# bandwidth 64	=	R3(config-if)# ip ospf cost 65535
R3(config)# interface S0/0/1	=	R3(config)# interface S0/0/1
R3(config-if)# bandwidth 1024	=	R3(config-if)# ip ospf cost 9765

NOTE: The 64-kbps interface is set to the maximum cost of 65535.

Verifying OSPFv2

To verify any routing configuration, you will most likely depend on the **show ip interface brief**, **show ip route**, and **show ip protocols** commands. All the expected interfaces should be up and

up, and they should be configured with the correct IP addresses. The routing table should have all the expected routes. The protocol status should show routing for all expected networks, and it should also show all expected routing sources. Example 13-4 shows R1's output from these three basic commands.

Example 13-4 R1 Basic Routing Verification Commands

```
R1# show ip route
<output omitted>

Gateway of last resort is not set

  172.16.0.0/16 is variably subnetted, 5 subnets, 3 masks
C      172.16.1.0/24 is directly connected, GigabitEthernet0/0
L      172.16.1.1/32 is directly connected, GigabitEthernet0/0
O      172.16.2.0/24 [110/6576] via 172.16.3.2, 00:04:57, Serial0/0/0
C      172.16.3.0/30 is directly connected, Serial0/0/0
L      172.16.3.1/32 is directly connected, Serial0/0/0
O      192.168.1.0/24 [110/16341] via 172.16.3.2, 00:00:41, Serial0/0/0
        192.168.10.0/24 is variably subnetted, 3 subnets, 2 masks
C      192.168.10.4/30 is directly connected, Serial0/0/1
L      192.168.10.5/32 is directly connected, Serial0/0/1
O      192.168.10.8/30 [110/16241] via 172.16.3.2, 00:00:41, Serial0/0/0
R1# show ip interface brief
Interface                  IP-Address OK? Method Status Protocol
Embedded-Service-Engine0/0 unassigned YES unset   administratively down down
GigabitEthernet0/0          172.16.1.1 YES manual   up        up
GigabitEthernet0/1          unassigned YES unset   administratively down down
Serial0/0/0                 172.16.3.1 YES manual   up        up
Serial0/0/1                 192.168.10.5 YES manual   up        up
R1# show ip protocols
*** IP Routing is NSF aware ***
Routing Protocol is "ospf 10"
  Outgoing update filter list for all interfaces is not set
  Incoming update filter list for all interfaces is not set
  Router ID 1.1.1.1
  Number of areas in this router is 1. 1 normal 0 stub 0 nssa
  Maximum path: 4
  Routing for Networks:
    172.16.1.0 0.0.0.255 area 0
    172.16.3.0 0.0.0.3 area 0
    192.168.10.4 0.0.0.3 area 0
```

```
Passive Interface(s) :
```

```
    GigabitEthernet0/0
```

```
Routing Information Sources:
```

```
    Gateway Distance Last Update
```

```
        3.3.3.3 110 00:09:00
```

```
        2.2.2.2 110 00:09:00
```

```
Distance: (default is 110)
```

You can verify that expected neighbors have established adjacency with the **show ip ospf neighbor** command. Example 13-5 shows the neighbor tables for all three routers.

Example 13-5 Verifying Neighbor Adjacency

```
R1# show ip ospf neighbor
```

Neighbor ID	Pri	State	Dead Time	Address	Interface
3.3.3.3	0	FULL/ -	00:00:37	192.168.10.6	Serial0/0/1
2.2.2.2	0	FULL/ -	00:00:37	172.16.3.2	Serial0/0/0

```
R2# show ip ospf neighbor
```

Neighbor ID	Pri	State	Dead Time	Address	Interface
3.3.3.3	0	FULL/ -	00:00:38	192.168.10.10	Serial0/0/1
1.1.1.1	0	FULL/ -	00:00:37	172.16.3.1	Serial0/0/0

```
R3# show ip ospf neighbor
```

Neighbor ID	Pri	State	Dead Time	Address	Interface
2.2.2.2	0	FULL/ -	00:00:37	192.168.10.9	Serial0/0/1
1.1.1.1	0	FULL/ -	00:00:30	192.168.10.5	Serial0/0/0

For each neighbor, the **show ip ospf neighbor** command displays the following output:

- **Neighbor ID:** The router ID of the neighboring router.
- **Pri:** The OSPF priority of the interface. Example 13-5 shows 0 for this column because point-to-point links do not elect a DR or BDR.
- **State:** The OSPF state of the interface. FULL state means that the router's interface is fully adjacent with its neighbor, and they have identical OSPF link-state databases.
- **Dead Time:** The amount of time remaining that the router will wait to receive an OSPF hello packet from the neighbor before declaring the neighbor down. This value is reset when the interface receives a hello packet.
- **Address:** The IP address of the neighbor's interface to which this router is directly connected.
- **Interface:** The interface on which this router has formed adjacency with the neighbor.

The **show ip ospf** command in Example 13-6 for R1 can also be used to examine the OSPF process ID and router ID. In addition, this command displays the OSPF area information and the last time that the SPF algorithm was calculated.

Example 13-6 The *show ip ospf* Command

```
R1# show ip ospf
Routing Process "ospf 10" with ID 1.1.1.1
  Start time: 00:29:52.316, Time elapsed: 00:45:15.760
  Supports only single TOS(TOS0) routes
  Supports opaque LSA
  Supports Link-local Signaling (LLS)
  Supports area transit capability
  Supports NSSA (compatible with RFC 3101)
  Event-log enabled, Maximum number of events: 1000, Mode: cyclic
  Router is not originating router-LSAs with maximum metric
  Initial SPF schedule delay 5000 msecs
  Minimum hold time between two consecutive SPFs 10000 msecs
  Maximum wait time between two consecutive SPFs 10000 msecs
  Incremental-SPF disabled
  Minimum LSA interval 5 secs
  Minimum LSA arrival 1000 msecs
  LSA group pacing timer 240 secs
  Interface flood pacing timer 33 msecs
  Retransmission pacing timer 66 msecs
  Number of external LSA 0. Checksum Sum 0x000000
  Number of opaque AS LSA 0. Checksum Sum 0x000000
  Number of DCbitless external and opaque AS LSA 0
  Number of DoNotAge external and opaque AS LSA 0
  Number of areas in this router is 1. 1 normal 0 stub 0 nssa
  Number of areas transit capable is 0
  External flood list length 0
  IETF NSF helper support enabled
  Cisco NSF helper support enabled
  Reference bandwidth unit is 10000 mbps

  Area BACKBONE(0)
    Number of interfaces in this area is 3
    Area has no authentication
    SPF algorithm last executed 00:18:32.788 ago
    SPF algorithm executed 7 times
    Area ranges are
    Number of LSA 3. Checksum Sum 0x01BB59
```

```

Number of opaque link LSA 0. Checksum Sum 0x000000
Number of DCbitless LSA 0
Number of indication LSA 0
Number of DoNotAge LSA 0
Flood list length 0

```

The quickest way to verify OSPF interface settings is to use the **show ip ospf interface brief** command. As shown in the output for R1 in Example 13-7, this command provides a detailed list for every OSPF-enabled interface. The command is also useful for quickly viewing the cost of each interface and determining whether the network statements were correctly configured.

Example 13-7 The *show ip ospf interface brief* Command

```

R1# show ip ospf interface brief
Interface PID Area IP Address/Mask Cost State Nbrs F/C
Se0/0/1 10 0 192.168.10.5/30 65535 P2P 1/1
Se0/0/0 10 0 172.16.3.1/30 6476 P2P 1/1
Gi0/0 10 0 172.16.1.1/24 100 DR 0/0

```

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	2
CCNA 200-301 Official Cert Guide, Volume 1	20
Portable Command Guide	16

Fine-Tuning and Troubleshooting OSPF

CCNA 200-125 Exam Topics

- Configure and verify single-area OSPFv2

Key Topics

Today's review focuses on fine-tuning and troubleshooting OSPFv2. Fine-tuning OSPF involves modifying timers, conducting DR/BDR elections, and propagating a default route. We also turn our focus to troubleshooting the OSPF process.

OSPFv2 Configuration Example

To fine-tune OSPFv2, we use the topology in Figure 12-1 and the addressing scheme in Table 12-1.

Figure 12-1 OSPFv2 Configuration Topology

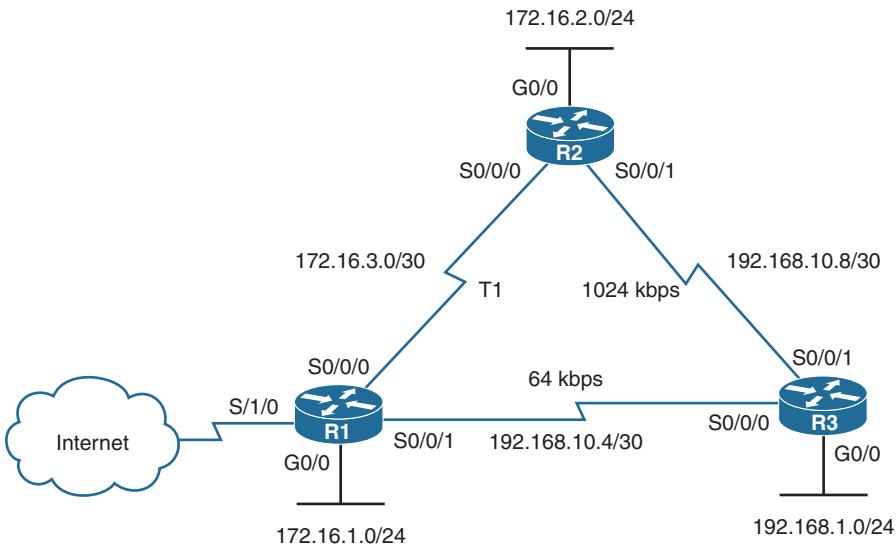


Table 12-1 Addressing Scheme for OSPFv2

Device	Interface	IP Address	Subnet Mask
R1	G0/0	172.16.1.1	255.255.255.0
	S0/0/0	172.16.3.1	255.255.255.252
	S0/0/1	192.168.10.5	255.255.255.252
	S0/1/0	209.165.200.226	255.255.255.224
R2	G0/0	172.16.2.1	255.255.255.0
	S0/0/0	172.16.3.2	255.255.255.252
	S0/0/1	192.168.10.9	255.255.255.252
R3	G0/0	192.168.1.1	255.255.255.0
	S0/0/0	192.168.10.6	255.255.255.252
	S0/0/1	192.168.10.10	255.255.255.252

Example 12-1 shows the network commands for all three routers to enable OSPFv2 on all interfaces.

Example 12-1 Configuring OSPF Networks

```
R1(config)# router ospf 10
R1(config-router)# router-id 1.1.1.1
R1(config-router)# network 172.16.1.0 0.0.0.255 area 0
R1(config-router)# network 172.16.3.0 0.0.0.3 area 0
R1(config-router)# network 192.168.10.4 0.0.0.3 area 0
R1(config-router)# passive-interface g0/0
R1(config-router)# auto-cost reference-bandwidth 10000
R1(config-router)# interface S0/0/1
R1(config-if)# bandwidth 64

R2(config)# router ospf 10
R2(config-router)# router-id 2.2.2.2
R2(config-router)# network 172.16.2.0 0.0.0.255 area 0
R2(config-router)# network 172.16.3.0 0.0.0.3 area 0
R2(config-router)# network 192.168.10.8 0.0.0.3 area 0
R2(config-router)# passive-interface g0/0
R2(config-router)# auto-cost reference-bandwidth 10000
R2(config-router)# interface S0/0/1
R2(config-if)# bandwidth 1024

R3(config)# router ospf 10
R3(config-router)# router-id 3.3.3.3
R3(config-router)# network 192.168.1.0 0.0.0.255 area 0
```

```
R3(config-router)# network 192.168.10.4 0.0.0.3 area 0
R3(config-router)# network 192.168.10.8 0.0.0.3 area 0
R3(config-router)# passive-interface g0/0
R3(config-router)# auto-cost reference-bandwidth 10000
R3(config-router)# interface S0/0/0
R3(config-if)# bandwidth 64
R3(config-if)# interface S0/0/1
R3(config-if)# bandwidth 1024
```

Modifying OSPFv2

This section reviews concepts related to and commands for redistributing a default route, tuning OSPF interfaces, and manipulating the designated router/backup designated router (DR/BDR) election process.

Redistributing a Default Route

In Figure 12-1, R1 has a link to the Internet that makes R1 an autonomous system boundary router (ASBR). We therefore configure a default route to the Internet and redistribute the default static route to R2 and R3 with the **default-information originate** command, as in Example 12-2.

Example 12-2 ASBR Static Default Route Configuration

```
R1(config)# ip route 0.0.0.0 0.0.0.0 Serial 0/1/0
R1(config)# router ospf 10
R1(config-router)# default-information originate
```

Both R2 and R3 should now have default routes identified with the O*E2 code, as in Example 12-3.

Example 12-3 R2 and R3 OSPF Routes with Default Route

```
R2# show ip route ospf
    172.16.0.0/16 is variably subnetted, 5 subnets, 3 masks
O        172.16.1.0 [110/6477] via 172.16.3.1, 00:02:45, Serial0/0/0
O        192.168.1.0 [110/6486] via 192.168.10.10, 00:00:55, Serial0/0/1
          192.168.10.0/24 is variably subnetted, 3 subnets, 2 masks
O        192.168.10.4 [110/12952] via 192.168.10.10, 00:00:55, Serial0/0/1
O*E2 0.0.0.0/0 [110/1] via 172.16.3.1, 00:00:09, Serial0/0/0

R3# show ip route ospf
    172.16.0.0/16 is variably subnetted, 3 subnets, 2 masks
O        172.16.1.0 [110/6477] via 192.168.10.5, 00:26:01, Serial0/0/0
O        172.16.2.0 [110/6486] via 192.168.10.9, 00:26:01, Serial0/0/1
O        172.16.3.0 [110/6540] via 192.168.10.5, 00:26:01, Serial0/0/0
O*E2 0.0.0.0/0 [110/1] via 192.168.10.9, 00:01:19, Serial0/0/1
```

Modifying Hello and Dead Intervals

The default hello interval on multiaccess and point-to-point networks is 10 seconds. Nonbroadcast multiaccess (NBMA) networks default to a 30-second hello interval. The default dead interval is four times the hello interval.

It might be desirable to change the OSPF timers so that routers detect network failures in less time. Doing this increases traffic, but sometimes a need for quick convergence outweighs the extra traffic.

You can modify OSPF hello and dead intervals manually by using the following interface commands:

```
Router(config-if)# ip ospf hello-interval seconds
Router(config-if)# ip ospf dead-interval seconds
```

Although the dead interval defaults to four times the hello interval and does not have to be explicitly configured, it is a good practice to document the new dead interval in the configuration. Example 12-4 shows the hello interval and dead interval modified to 5 seconds and 20 seconds, respectively, on the Serial 0/0/0 interface for R1.

Example 12-4 Modifying Hello and Dead Intervals on R1

```
R1(config)# interface serial 0/0/0
R1(config-if)# ip ospf hello-interval 5
R1(config-if)# ip ospf dead-interval 20
R1(config-if)# end
```

Remember that, unlike with Enhanced Interior Gateway Routing Protocol (EIGRP), with OSPF hello and dead intervals must be equivalent between neighbors. Therefore, R2 should be configured with the same intervals as R1.

OSPF Network Types

OSPF defines five network types:

- **Point-to-point:** Two routers interconnected over a common link. No other routers are on the link. This is often the configuration in WAN links.
- **Broadcast multiaccess:** Multiple routers interconnected over an Ethernet network.
- **NBMA:** Multiple routers interconnected in a network that does not allow broadcasts, such as Frame Relay.
- **Point-to-multipoint:** Multiple routers interconnected in a hub-and-spoke topology over an NBMA network. Often used to connect branch sites (spokes) to a central site (hub).
- **Virtual links:** Special OSPF network used to interconnect distant OSPF areas to the backbone area.

Multiaccess networks create two challenges for OSPF regarding the flooding of LSAs:

- **Creation of multiple adjacencies:** Ethernet networks can potentially interconnect many OSPF routers over a common link. Using the formula $n(n - 1) / 2$, where n equals the number of routers, 5 routers would require 10 separate neighbor adjacencies; 10 routers would require 45.

- **Extensive flooding of LSAs:** Link-state routers flood their link-state packets when OSPF is initialized or when the topology changes. This flooding can become excessive without a mechanism to reduce the number of adjacencies.

DR/BDR Election

The solution to managing the number of adjacencies and the flooding of LSAs on a multiaccess network is the designated router (DR). To reduce the amount of OSPF traffic on multiaccess networks, OSPF elects a DR and backup DR (BDR). The DR is responsible for updating all other OSPF routers when a change occurs in the multiaccess network. The BDR monitors the DR and takes over as DR if the current DR fails.

The following criteria are used to elect the DR and BDR:

- The DR is the router with the highest OSPF interface priority.
- The BDR is the router with the second-highest OSPF interface priority.
- If OSPF interface priorities are equal, the highest router ID breaks the tie.

When the DR is elected, it remains the DR until one of the following conditions occurs:

- The DR fails.
- The OSPF process on the DR fails.
- The multiaccess interface on the DR fails.

If the DR fails, the BDR assumes the role of DR, and an election is held to choose a new BDR. If a new router enters the network after the DR and BDR have been elected, it will not become the DR or the BDR even if it has a higher OSPF interface priority or router ID than the current DR or BDR. The new router can be elected the BDR if the current DR or BDR fails. If the current DR fails, the BDR becomes the DR, and the new router can be elected the new BDR.

Without additional configuration, you can control the routers that win the DR and BDR elections by doing either of the following:

- Boot the DR first, followed by the BDR, and then boot all other routers.
- Shut down the interface on all routers and then issue **no shutdown** on the DR, then the BDR, and then all other routers.

The recommended way to control DR/BDR elections, however, is to change the interface priority.

Controlling the DR/BDR Election


Because the DR becomes the focal point for the collection and distribution of LSAs in a multiaccess network, this router must have sufficient CPU and memory capacity to handle the responsibility. Instead of relying on the router ID to decide which routers are elected the DR and BDR, it is better to control the election of these routers with the **ip ospf priority** interface command:

```
Router(config-if)# ip ospf priority {0 - 255}
```

The priority value defaults to 1 for all router interfaces, which means the router ID determines the DR and BDR. If you change the default value from 1 to a higher value, however, the router with the highest priority becomes the DR, and the router with the next highest priority becomes the BDR. A value of 0 makes the router ineligible to become a DR or BDR.

All the routers in Figure 12-2 booted at the same time with a complete OSPF configuration. In such a situation, R3 is elected the DR, and R2 is elected the BDR, based on the highest router IDs, as you can see in the output for the neighbor table on R1 in Example 12-5.

Figure 12-2 Multiaccess Topology

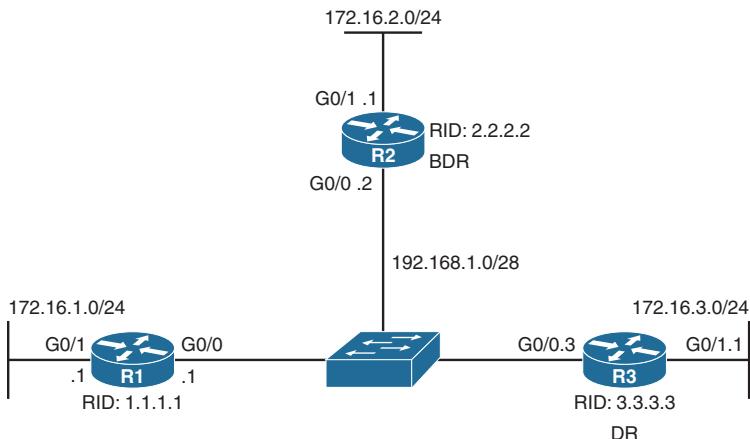

Example 12-5 Verifying the DR and BDR

```
R1# show ip ospf neighbor
Neighbor ID Pri State      Dead Time Address      Interface
2.2.2.2       1 FULL/BDR  00:00:32  192.168.1.2 GigabitEthernet0/0
3.3.3.3       1 FULL/DR   00:00:38  192.168.1.3 GigabitEthernet0/0
R1#
```

Assume that R1 is the better candidate to be DR and that R2 should be BDR. Example 12-6 shows a way to control the DR/BDR election in the topology in Figure 12-2.

Example 12-6 Modifying the OSPF Interface Priority

```
R1(config)# interface gigabitethernet 0/0
R1(config-if)# ip ospf priority 200
R2(config)# interface gigabitethernet 0/0
R2(config-if)# ip ospf priority 100
```

Notice that we changed both routers. Although R2 was the BDR without doing anything, it would lose this role to R3 if we had not configured R2's priority to be higher than the default.

Before R1 can become DR, the OSPF process needs to restart. We can make this happen by shutting down the interfaces or simply by entering the **clear ip ospf process** command in privileged EXEC mode, as in Example 12-7. The neighbor table on R3 shows that R1 is now the DR, and R2 is the BDR.

Example 12-7 Restarting the OSPF Process and Verifying New DR and BDR

```
R1# clear ip ospf process
Reset ALL OSPF processes? [no]: y
R1#

R2# clear ip ospf process
Reset ALL OSPF processes? [no]: y
R2#

R3# clear ip ospf process
Reset ALL OSPF processes? [no]: y
R2#
R3# show ip ospf neighbor


Neighbor ID Pri State      Dead Time   Address          Interface
2.2.2.2       100 FULL/BDR  00:00:38   192.168.1.2 GigabitEthernet0/0
1.1.1.1       200 FULL/DR   00:00:30   192.168.1.1 GigabitEthernet0/0
R3#
```

Troubleshooting OSPF

Understanding how OSPF operates is fundamental to troubleshooting any OSPF issues. Key to this understanding is the concept of the states OSPF transitions through on its way to adjacency with a neighbor.

OSPF States

Figure 12-3 lists the OSPF states. When troubleshooting OSPF neighbors, be aware that the FULL and TWO-WAY states are normal. All other states are transitory.

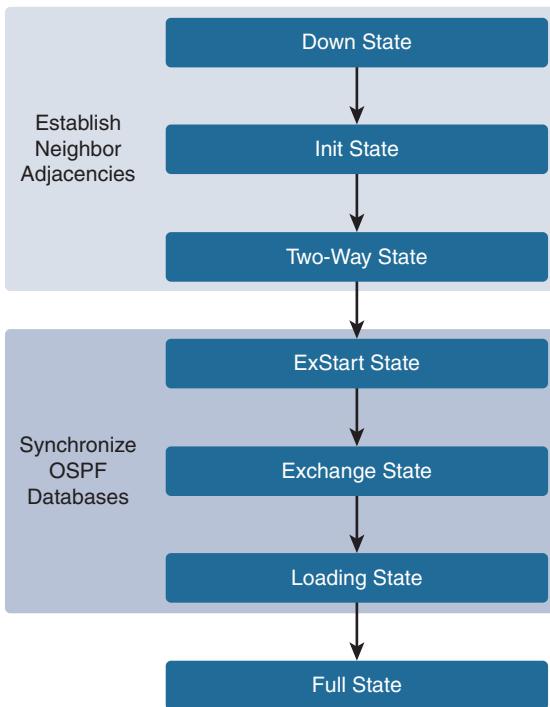Figure 12-3 Transitioning Through the OSPF States

OSPF Adjacency

Lack of adjacency is a common issue in OSPF troubleshooting because the two OSPF neighbors must agree on several settings. OSPF adjacencies do not form for several reasons:

- The interfaces are not on the same network.
- OSPF network types do not match.
- OSPF hello or dead timers do not match.
- The interface to the neighbor is incorrectly configured as passive.
- An OSPF **network** command is missing or incorrect.
- Authentication is misconfigured.

OSPF Troubleshooting Commands


When trying to isolate an OSPFv2 routing issue, the following commands are useful:

- **show ip protocols:** Verifies vital OSPF configuration information, including the OSPF process ID, the router ID, networks the router is advertising, neighbors the router is receiving updates from, and the default administrative distance, which is 110 for OSPF.
- **show ip ospf neighbor:** Verifies that the router has formed an adjacency with its neighboring routers.

- **show ip ospf interface:** Displays the OSPF parameters configured on an interface, such as the OSPF process ID, area, cost, and timer intervals.
- **show ip ospf:** Examines the OSPF process ID and router ID. This command also displays the OSPF area information and the last time the SPF algorithm was calculated.
- **show ip route ospf:** Displays only the OSPF learned routes in the routing table.
- **clear ip ospf process:** Resets the OSPFv2 neighbor adjacencies.

Figure 12-4 illustrates a method for using these commands in a systematic way.

Figure 12-4 Systematic Method for Troubleshooting OSPFv2

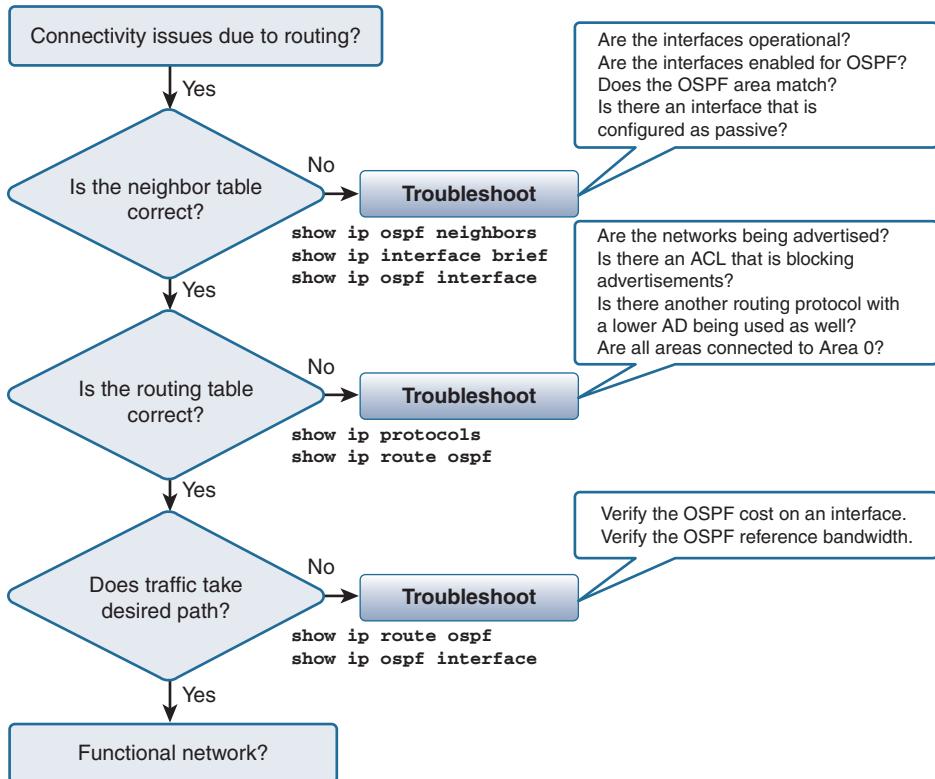

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	2
CCNA 200-301 Official Cert Guide, Volume 1	20
Portable Command Guide	16

This page intentionally left blank

Network Security Concepts

CCNA 200-301 Exam Topics

- Define key security concepts (threats, vulnerabilities, exploits and mitigation techniques)
- Describe Security program elements (user awareness and training, physical access control)
- Describe Security password policies elements such as management, complexity and password alternatives (multi-factor authentication, certificates, biometrics)

Key Topics

Wired and wireless computer networks are essential to everyday activities. Individuals and organizations depend on their computers and networks. Intrusion by an unauthorized person can result in costly network outages and loss of work. Attacks on a network can be devastating and can result in lost time and money due to damage or theft of important information or assets. Today we review security fundamentals including threats, vulnerabilities, and attacks.

Security Fundamentals

Cyber criminals now have the expertise and tools necessary to take down critical infrastructure and systems. Specific terminology is used to describe their tools and attacks.

Security Terms

Assets must be identified and protected. Vulnerabilities must be addressed before they become threats and are exploited. Mitigation techniques are required before, during, and after an attack. Review the security terms in Table 11-1.

Table 11-1 Security Terms

Term	Description
Assets	Anything of value to the organization, including people, equipment, resources, and data.
Vulnerability	A weakness in a system or its design that could be exploited by a threat.
Threat	A potential danger to a company's assets, data, or network functionality.
Exploit	A mechanism that takes advantage of a vulnerability.
Mitigation	The process of taking countermeasures to reduce the likelihood or severity of a potential threat or risk.
Risk	The likelihood of a threat exploiting the vulnerability of an asset, with the aim of negatively affecting an organization.

Attack Vectors and Data Exfiltration

An *attack vector* is a path by which a threat actor can gain access to a server, host, or network. Attack vectors originate outside or inside a network. For example, threat actors may target a network through the Internet to disrupt network operations and create a denial of service (DoS) attack. An internal user, such as an employee, might accidentally or intentionally disrupt the network or steal confidential data. Internal threats have the potential to cause greater damage than external threats because internal users have direct access to the building and its infrastructure devices.

Employees may also have knowledge of the corporate network, its resources, and its confidential data. Data loss or data exfiltration occurs when data is intentionally or unintentionally lost, stolen, or leaked to the outside world. Network security professionals must protect the organization's data. Various data loss prevention (DLP) controls must be implemented, combining strategic, operational, and tactical measures. Common data loss vectors are shown in Table 11-2.

Table 11-2 Data Loss Vectors

Vector	Description
Email/social networking	Intercepted email or IM messages could be captured and reveal confidential information.
Unencrypted devices	If data is not stored using an encryption algorithm, the thief may be able to retrieve valuable confidential data.
Cloud storage devices	Sensitive data can be lost if access to the cloud is compromised due to weak security settings.
Removable media	An employee could perform an unauthorized transfer of data to a USB drive or a USB drive containing valuable corporate data could be lost.
Hard copy	Confidential data should be shredded when no longer required.
Improper access control	Passwords or weak passwords that have been compromised can provide a threat actor with easy access to corporate data.

Penetration Testing Tools

To validate the security of a network and its systems, many network penetration testing tools have been developed (see Table 11-3). Unfortunately, threat actors can also use many of these tools for exploitation.

Table 11-3 Types of Penetration Tools

Tool	Description
Password crackers	Password cracking tools are often referred to as password recovery tools and can be used to crack or recover a password. Password crackers repeatedly make guesses in order to crack the password.
Wireless hacking tools	Wireless hacking tools are used to intentionally hack into a wireless network to detect security vulnerabilities.
Network scanning and hacking tools	Network scanning tools are used to probe network devices, servers, and hosts for open TCP or UDP ports.

Tool	Description
Packet crafting tools	These tools are used to probe and test a firewall's robustness using specially crafted forged packets.
Packet sniffers	These tools are used to capture and analyze packets in traditional Ethernet LANs or WLANs.
Rootkit detectors	This is a directory and file integrity checker used by white hats to detect installed rootkits.
Forensic tools	These tools are used by white hat hackers to sniff out any trace of evidence existing in a computer.
Debuggers	These tools are used by black hats to reverse engineer binary files when writing exploits. They are also used by white hats when analyzing malware.
Hacking operating systems	These are specially designed operating systems preloaded with tools optimized for hacking.
Encryption tools	Encryption tools use algorithm schemes to encode data to prevent unauthorized access to the encrypted data.
Vulnerability exploitation tools	These tools identify whether a remote host is vulnerable to security attack.
Vulnerability scanners	These tools scan a network or system to identify open ports. They can also be used to scan for known vulnerabilities and scan virtual machines (VMs), devices brought to work by individuals in a bring-your-own-device (BYOD) situation, and client databases.

Attack Types

Threat actors can use tools to create a variety of attacks. Table 11-4 displays common types of attacks.

Table 11-4 Common Types of Attacks

Attack Type	Description
Eavesdropping attack	A threat actor captures and "listens" to network traffic. This attack is also referred to as <i>sniffing</i> or <i>snooping</i> .
Data modification attack	If threat actors have captured enterprise traffic, they can alter the data in the packet without the knowledge of the sender or receiver.
IP address spoofing attack	A threat actor constructs an IP packet that appears to originate from a valid address inside the corporate intranet.
Password-based attacks	A threat actor who discovers a valid user account has the same rights as the real user. A threat actor can use a valid account to obtain lists of other users or network information, change server and network configurations, and modify, reroute, or delete data.
Denial of service attack	A DoS attack prevents normal use of a computer or network by valid users. A DoS attack can flood a computer or an entire network with traffic until a shutdown occurs because of the overload. A DoS attack can also block traffic, which results in a loss of access to network resources by authorized users.

Attack Type	Description
Man-in-the-middle attack	This attack occurs when threat actors have positioned themselves between a source and destination. They can actively monitor, capture, and control the communication transparently.
Compromised-key attack	If a threat actor obtains a secret key, that key is referred to as a <i>compromised key</i> . A compromised key can be used to gain access to secured communication without the sender or receiver being aware of the attack.
Sniffer attack	A sniffer is an application or device that can read, monitor, and capture network data exchanges and read network packets. If packets are not encrypted, a sniffer provides a full view of the data inside the packet.

Types of Malware

Malware, which is short for *malicious software*, is code or software specifically designed to damage, disrupt, steal, or inflict “bad” or illegitimate action on data, hosts, or networks. Viruses, worms, and Trojan horses are types of malware:

- A *worm* executes arbitrary code and installs copies of itself in the memory of the infected computer. The main purpose of a worm is to automatically replicate itself and spread across the network from system to system.
- A *virus* is malicious software that executes a specific, unwanted, often harmful function on a computer.
- A *Trojan horse* is a non-self-replicating type of malware. It often contains malicious code that is designed to look like something else, such as a legitimate application or file. When an infected application or file is downloaded and opened, the Trojan horse can attack the end device from within.

Table 11-5 describes some other types of malware.

Table 11-5 Other Types of Malware

Malware	Description
Adware	<p>Adware is usually distributed by downloading online software.</p> <p>Adware can display unsolicited advertising using popup web browser windows or new toolbars, or it can unexpectedly redirect a user from a web page to a different website.</p> <p>Popup windows may be difficult to control as new windows can pop up faster than the user can close them.</p>
Ransomware	<p>Ransomware typically denies a user access to his or her files by encrypting the files and then displaying a message demanding a ransom for the decryption key.</p> <p>Users without up-to-date backups must pay the ransom to decrypt their files.</p> <p>Payment is usually made using wire transfer or cryptocurrencies such as bitcoin.</p>

Malware	Description
Rootkit	<p>Threat actors use rootkits to gain administrator account-level access to a computer.</p> <p>They are very difficult to detect because they can alter firewall, antivirus protection, system files, and even OS commands to conceal their presence.</p> <p>A rootkit can provide a backdoor to threat actors, giving them access to the PC and allowing them to upload files and install new software to be used in a distributed DoS (DDoS) attack.</p> <p>Special rootkit removal tools must be used to remove them, or a complete OS re-install may be required.</p>
Spyware	<p>Spyware is similar to adware but is used to gather information about the user and send it to threat actors without the user's consent.</p> <p>Spyware can be a low threat, gathering browsing data, or it can be a high threat, capturing personal and financial information.</p>

Network Attacks

Network attacks include reconnaissance attacks, access attacks, DoS attacks, social engineering attacks, and attacks to exploit the vulnerabilities of the TCP/IP protocol suite.

Reconnaissance Attacks

Reconnaissance is information gathering. Threat actors use reconnaissance (or recon) attacks to do unauthorized discovery and mapping of systems, services, or vulnerabilities. Recon attacks precede access attacks or DoS attacks. Table 11-6 describes some common reconnaissance attack techniques.

Table 11-6 Reconnaissance Attack Techniques

Technique	Description
Perform an information query of a target	The threat actor looks for initial information about a target. Various tools can be used, including a Google search, the organization's website, and whois.
Initiate a ping sweep of the target network	The information query usually reveals the target's network address. The threat actor can then initiate a ping sweep to determine which IP addresses are active.
Initiate a port scan of active IP addresses	A port scan can be used to determine which ports or services are available. Examples of port scanners include Nmap, SuperScan, Angry IP Scanner, and NetScanTools.
Run vulnerability scanners	A vulnerability scanner can query the identified ports to determine the type and version of the application and operating system running on the host. Examples of such tools include Nipper, Secunia PSI, Core Impact, Nessus v6, SAINT, and Open VAS.
Run exploitation tools	The threat actor attempts to discover vulnerable services that can be exploited. A variety of vulnerability exploitation tools exist, including Metasploit, Core Impact, sqlmap, Social-Engineer Toolkit, and Netsparker.

Access Attacks

The purpose of access attacks is to gain entry to web accounts, confidential databases, and other sensitive information. Threat actors use access attacks on network devices and computers to retrieve data, gain access, or escalate access privileges to administrator status. Table 11-7 describes access attacks.

Table 11-7 Types of Access Attacks

Access Attack	Description
Password attack	The threat actor attempts to discover critical system passwords using various methods. Password attacks are very common and can be launched using a variety of password cracking tools.
Spoofing attack	The threat actor has a device pose as another device by falsifying data. Common spoofing attacks include IP spoofing, MAC spoofing, and DHCP spoofing.
Trust exploitation	The threat actor uses unauthorized privileges to gain access to a system, possibly compromising the target.
Port redirection	The threat actor uses a compromised system as a base for attacks against other targets.
Man-in-the-middle attack	The threat actor is positioned between two legitimate entities in order to read or modify the data that passes between the two parties.
Buffer overflow attack	The threat actor exploits the buffer memory and overwhelms it with unexpected values. This usually renders the system inoperable, creating a DoS attack.

Social Engineering Attacks

In social engineering attacks, threat actors attempt to manipulate individuals into performing actions or divulging confidential information. Table 11-8 describes social engineering techniques.

Table 11-8 Types of Social Engineering Attacks

Social Engineering Attack	Description
Pretexting	An attack in which a threat actor pretends to need personal or financial data to confirm the identity of the target.
Phishing	An attack in which a threat actor sends fraudulent email that is disguised as being from a legitimate, trusted source to trick the recipient into installing malware on his or her device or into sharing personal or financial information.
Spear phishing	An attack in which a threat actor creates a targeted phishing attack tailored for a specific individual or organization.
Spam	Unsolicited email, also known as junk mail, that often contains harmful links, malware, or deceptive content.

Social Engineering Attack	Description
Something for something	Sometimes called <i>quid pro quo</i> , an attack in which a threat actor requests personal information from a party in exchange for something such as a gift.
Baiting	An attack in which a threat actor leaves a malware-infected flash drive in a public location. A victim finds the drive and inserts it into a laptop, unintentionally installing malware.
Impersonation	An attack in which a threat actor pretends to be someone he or she is not to gain the trust of a victim.
Tailgating	An attack in which a threat actor quickly follows an authorized person into a secure location to gain access to a secure area.
Shoulder surfing	An attack in which a threat actor inconspicuously looks over someone's shoulder to steal passwords or other information.
Dumpster diving	An attack in which a threat actor rummages through trash bins to discover confidential documents.

DoS and DDoS Attacks

A DoS attack creates some sort of interruption of network services to users, devices, or applications. DoS attacks are created in two ways:

- **Overwhelming quantity of traffic:** The threat actor sends an enormous quantity of data at a rate that the network, host, or application cannot handle. This causes transmission and response times to slow down. It can also crash a device or service.
- **Maliciously formatted packets:** The threat actor sends a maliciously formatted packet to a host or an application, and the receiver is unable to handle it. This causes the receiving device to run very slowly or crash.

DoS attacks are relatively simple to conduct, even by an unskilled threat actor. A DDoS attack is similar to a DoS attack, but it originates from multiple, coordinated sources. For example, a threat actor may build a network of infected hosts, known as *zombies*. A network of zombies is called a *botnet*. The threat actor can then use a command-and-control (CnC) program to instruct the botnet of zombies to carry out a DDoS attack.

IP Attacks

IP does not validate whether the source IP address contained in a packet actually came from that source. For this reason, threat actors can send packets using a spoofed source IP address. Threat actors can also tamper with the other fields in the IP header to carry out their attacks. Security analysts must understand the different fields in both the IPv4 and IPv6 headers. Table 11-9 describes some of the most common IP-related attacks.

Table 11-9 Types of IP Attacks

IP Attack Technique	Description
ICMP attacks	Threat actors use Internet Control Message Protocol (ICMP) echo packets (pings) to discover subnets and hosts on a protected network, to generate DoS flood attacks, and to alter host routing tables.
Amplification and reflection attack	Threat actors attempt to prevent legitimate users from accessing information or services using DoS and DDoS attacks. In one type of amplification and reflection attack, the threat actor forwards ICMP echo request messages to many hosts. These messages contain the source IP address of the victim. Therefore, these hosts all reply to the spoofed IP address of the victim and overwhelm it.
Address spoofing attack	Threat actors spoof the source IP address in an IP packet to perform blind spoofing or non-blind spoofing. In non-blind spoofing, the threat actor can see the traffic that is being sent between the host and the target. The threat actor uses non-blind spoofing to inspect the reply packet from the target victim. Non-blind spoofing determines the state of a firewall and sequence-number prediction. It can also be done to hijack an authorized session. In blind spoofing, the threat actor cannot see the traffic that is being sent between the host and the target. Blind spoofing is used in DoS attacks.
Man-in-the-middle (MITM) attack	Threat actors position themselves between a source and destination to transparently monitor, capture, and control the communication. They can eavesdrop by inspecting captured packets or alter packets and forward them to their original destination.
Session hijacking	Threat actors gain access to the physical network and then use an MITM attack to hijack a session.

Transport Layer Attacks

Threat actors conduct port scans of target devices to discover which services are available. A threat actor can exploit TCP and UDP in the following ways:

- **TCP SYN flood attack:** This type of attack exploits the TCP three-way handshake. The threat actor continually sends TCP SYN session request packets with a randomly spoofed source IP address to a target. The target device replies with a TCP SYN-ACK packet to the spoofed IP address and waits for a TCP ACK packet. The responses never arrive. Eventually the target host is overwhelmed with half-open TCP connections, and TCP services are denied to legitimate users.
- **TCP reset attack:** A threat actor could use a TCP reset attack to send a spoofed packet containing a TCP RST to one or both endpoints. This creates a DoS condition for the connection.
- **TCP session hijacking:** A threat actor takes over an already-authenticated host as it communicates with the target. The threat actor must spoof the IP address of one host, predict the next sequence number, and send an ACK to the other host. If successful, the threat actor could send, but not receive, data from the target device.
- **UDP flood attack:** The threat actor uses a tool to send a flood of UDP packets, often from a spoofed host, to a server on the subnet. The program sweeps through all the known ports, trying to find closed ports. This causes the server to reply with an ICMP port unreachable message. Because there are many closed ports on the server, there is a lot of traffic on the segment, which uses up most of the bandwidth. The result is very similar to the result of a DoS attack.

Security Program

An organization should educate its user community through a security program. An effective security program includes the following basic elements:

- **User awareness:** All users should be made aware of the need for data confidentiality to protect corporate information, as well as their own credentials and personal information. They should also be made aware of potential threats, schemes to mislead, and proper procedures to report security incidents. Users should also be instructed to follow strict guidelines regarding data loss.
- **User training:** All users should be required to participate in periodic formal training so that they become familiar with all corporate security policies.
- **Physical access control:** Infrastructure locations, such as network closets and data centers, should remain securely locked. Administrators should control physical access and quickly remove access when an employee is dismissed.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Introduction to Networks v7	16
Enterprise Networking, Security, and Automation	3
CCNA 200-301 Official Cert Guide, Volume 2	4

This page intentionally left blank

ACL Concepts

CCNA 200-301 Exam Topics

- Configure and verify access control lists

Key Topics

One of the most important skills a network administrator needs is mastery of access control lists (ACLs). Administrators use ACLs to stop traffic or permit only specified traffic on their networks. Standard and extended ACLs can apply a number of security features, including policy-based routing, quality of service (QoS), Network Address Translation (NAT), and Port Address Translation (PAT).

You can also configure standard and extended ACLs on router interfaces to control the type of traffic that is permitted through a given router. Today we review ACL concepts, including what they are, how a router uses them to filter traffic, and what types of ACLs are available.

ACL Operation


A router's default operation is to forward all packets, as long as a route exists for the packet and the link is up. ACLs can help implement a basic level of security. However, they are not the only security solution a large organization should implement. In fact, ACLs increase the latency of routers. If an organization is very large, with routers managing the traffic of hundreds or thousands of users, the administrator more than likely will use a combination of other security implementations that are beyond the scope of the CCNA.

Defining an ACL

An ACL is a router configuration script (that is, a list of statements) that controls whether a router permits or denies packets to pass, based on criteria in the packet header. To determine whether a packet is permitted or denied, it is tested against the ACL statements in sequential order. When a statement matches, no more statements are evaluated; the packet is either permitted or denied. There is an implicit deny any statement at the end of an ACL. If a packet does not match any of the statements in the ACL, it is dropped.

Processing Interface ACLs

ACLs can be applied to an interface for inbound and outbound traffic. However, you need a separate ACL for each direction. The flowchart in Figure 10-1 details the steps a router takes when evaluating an ACL on inbound and outbound interfaces.

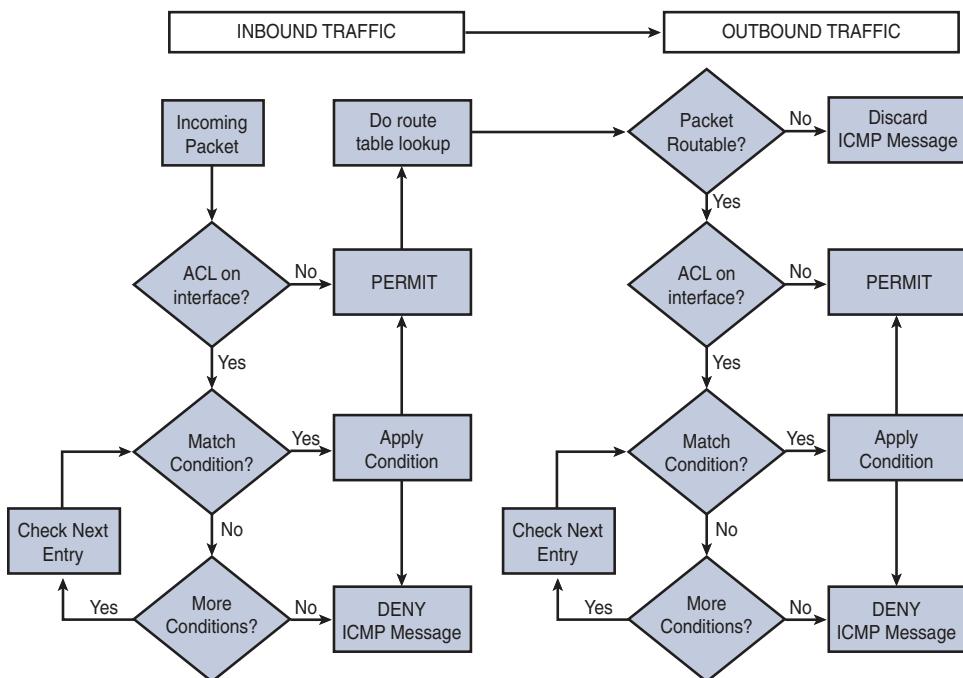Figure 10-1 ACL Interface Processing for Inbound and Outbound Traffic



For inbound traffic, the router checks for an inbound ACL applied to the interface before doing a route table lookup. Then, for outbound traffic, the router makes sure that a route to the destination exists before checking for ACLs. Finally, if an ACL statement results in a dropped packet, the router sends an ICMP destination unreachable message.

The choice of using an inbound or outbound ACL is easy to make if, first, you place yourself inside the router—that is, be the router. From such a stance, you can visualize processing a packet coming into a router interface (inbound), deciding what to do with the packet (Is there an inbound ACL? Is there a route to the destination?), and forwarding the packet (What is the outbound interface? Is there an ACL on the interface?).

List Logic with IP ACLs

An ACL is a list of commands that are processed in order, from the first statement in the list to the last statement. Each command has different matching logic that the router must apply to each packet when filtering is enabled. ACLs use first-match logic. If a packet matches one line in the ACL, the router takes the action listed in that line of the ACL and ignores the rest of the ACL statements.

For example, Figure 10-2 shows ACL 1 with three lines of pseudocode. The ACL is applied to R2's S0/0/1 interface, as the arrow indicates. Inbound traffic from R1 will be filtered using ACL 1.

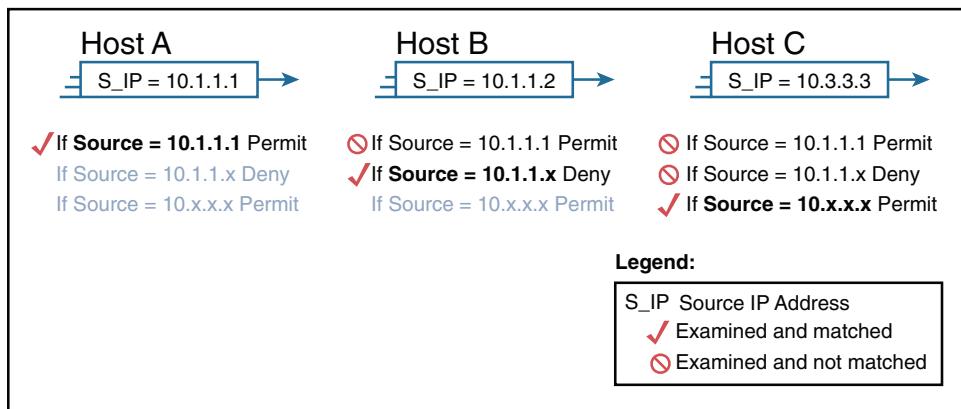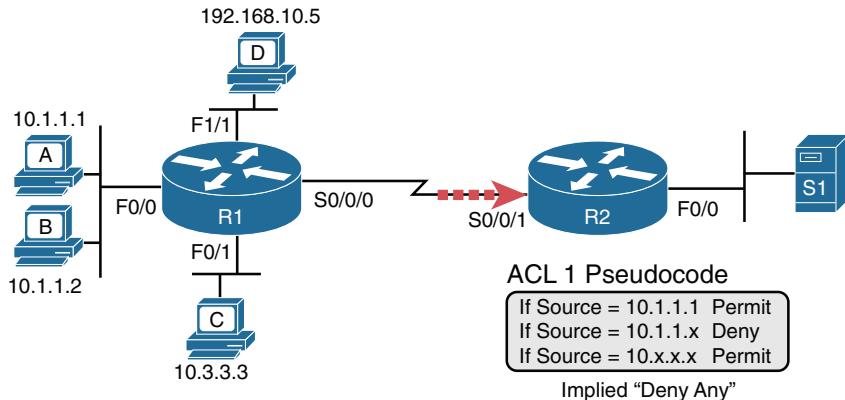Figure 10-2 Example of ACL Matching Logic

The box below the topology shows the logic for how packets from each host source address (labeled S_IP in the figure) are processed. Notice that when a match is made for Host A and Host B, the condition is applied (Host A is permitted and Host B is denied), and no further statements are evaluated. Host C matches the last statement in the list and is permitted.

Host D does not match any of the items in the ACL, so the packet is discarded. The reason is that every IP ACL has an implied deny any at the end of the ACL.

Planning to Use ACLs

Because an ACL can be used to filter traffic, it is important that you thoroughly plan the implementation of an ACL before actually configuring it.

Types of ACLs

ACLs can be configured to filter any type of protocol traffic, including other network layer protocols such as AppleTalk and IPX. For the CCNA exam, we focus on IPv4 and IPv6 ACLs, which come in the following types:

- **Standard IPv4 ACLs:** Filter traffic based on source address only
- **Extended IPv4 and IPv6 ACLs:** Can filter traffic based on source and destination address, specific protocols, and source and destination TCP and UDP ports

You can use two methods to identify both standard and extended ACLs:

- **Numbered IPv4 ACLs:** Use a number for identification
- **Named IPv4 and IPv6 ACLs:** Use a descriptive name or number for identification

Named ACLs must be used with some types of Cisco IOS configurations, including IPv6 ACLs. However, they provide two basic benefits for standard and extended IPv4 ACLs:

- By using a descriptive name (such as BLOCK-HTTP), a network administrator can more quickly determine the purpose of an ACL. This is particularly helpful in larger networks, where a router can have many ACLs with hundreds of statements.
- They reduce the amount of typing you must do to configure each statement in a named ACL, as you see in Day 9, “ACL Implementation.”

Both numbered and named ACLs can be configured for standard as well as extended ACL implementations. Figure 10-3 summarizes the categories of IPv4 ACLs.

Figure 10-3 Comparisons of IPv4 ACL Types

Standard Numbered	Standard Named	Standard: Matching - Source IP
Extended Numbered	Extended Named	Extended: Matching - Source & Dest. IP - Source & Dest. Port - Others
Numbered: - ID with Number - Global Commands		Named: - ID with Name - Subcommands

ACL Identification

Table 10-1 lists the different ACL number ranges for the IPv4 protocol. The table is not exhaustive. Other ACL numbers are available for other types of protocols that are either rarely used or beyond the scope of the CCNA. IPv6 uses only named ACLs.

Table 10-1 IPv4 ACL Numbers

Protocol	Range
IP	1–99
Extended IP	100–199
Standard IP (expanded)	1300–1999
Extended IP (expanded)	2000–2699

Named IP ACLs give you more flexibility in working with the ACL entries. In addition to using more memorable names, using named ACLs instead of numbered ACLs enables you to delete individual statements in a named IP access list.

Cisco IOS Software Release 12.3 introduced IP access list entry sequence numbering for both numbered and named ACLs. IP access list entry sequence numbering provides the following benefits:

- You can edit the order of ACL statements.
- You can remove individual statements from an ACL.
- You can use the sequence number to insert new statements into the middle of the ACL.

Sequence numbers are automatically added to the ACL if they are not entered explicitly at the time the ACL is created.

ACL Design Guidelines

Well-designed and -implemented ACLs add an important security component to your network. Follow these general principles to ensure that the ACLs you create have the intended results:

- Based on the test conditions, choose a standard or extended, numbered, or named ACL.
- Only one ACL is allowed per protocol, per direction, and per interface.
- Organize the ACL to enable processing from the top down. Organize your ACL so that more specific references to a network, subnet, or host appear before more general ones. Place conditions that occur more frequently before conditions that occur less frequently.
- All ACLs contain an implicit deny any statement at the end.
- Create the ACL before applying it to an interface.
- Depending on how you apply the ACL, the ACL filters traffic either going through the router or going to and from the router, such as traffic to or from the vty lines.
- You typically should place extended ACLs as close as possible to the source of the traffic that you want to deny. Because standard ACLs do not specify destination addresses, you must put the standard ACL as close as possible to the destination of the traffic you want to deny so that the source can reach intermediary networks.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	4
CCNA 200-301 Official Cert Guide, Volume 2	2
	3
Portable Command Guide	21

ACL Implementation

CCNA 200-301 Exam Topics

- Configure and verify access control lists

Key Topics

On Day 10, “ACL Concepts,” we reviewed ACL concepts. Today we focus on the configuration, verification, and troubleshooting of IPv4 and IPv6 ACLs.

Configuring Standard Numbered IPv4 ACLs


Standard IPv4 ACLs, which are numbered ACLs in the ranges 1 to 99 and 1300 to 1999 or are named ACLs, filter packets based on a source address and mask. They permit or deny the entire TCP/IP protocol suite. Configuring an ACL requires two steps:

Step 1. Create the ACL.

Step 2. Apply the ACL.

Let’s use the simple topology in Figure 9-1 to demonstrate how to configure both standard and extended IPv4 ACLs.

Figure 9-1 IPv4 ACL Configuration Topology

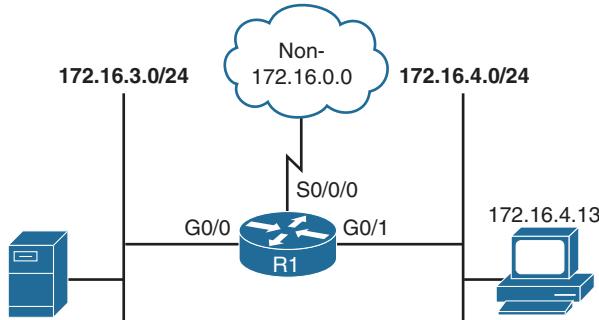

Standard Numbered IPv4 ACL: Permit Specific Network

Create an ACL to prevent traffic that is not part of the internal networks (172.16.0.0/16) from traveling out either of the Gigabit Ethernet interfaces:

- Step 1.** Create the ACL. Use the **access-list** global configuration command to create an entry in a standard IPv4 ACL:

```
R1(config)# access-list 1 permit 172.16.0.0 0.0.255.255
```

The sample statement matches any address that starts with 172.16.x.x. You can use the **remark** option to add a description to the ACL.

- Step 2.** Apply the ACL. Use the interface configuration command to select an interface to which to apply the ACL. Then use the **ip access-group** interface configuration command to activate the existing ACL on an interface for a specific direction (in or out):

```
R1(config)# interface gigabitethernet 0/0
R1(config-if)# ip access-group 1 out
R1(config-if)# interface gigabitethernet 0/1
R1(config-if)# ip access-group 1 out
```

This step activates the standard IPv4 ACL 1 on both the interfaces as an outbound filter.

This ACL allows only traffic from source network 172.16.0.0 to be forwarded out on G0/0 and G0/1. Traffic from networks other than 172.16.0.0 is blocked with the implied deny any.

Standard Numbered IPv4 ACL: Deny a Specific Host

Create an ACL to prevent traffic that originates from host 172.16.4.13 from traveling out G0/0. Create and apply the ACL with the commands in Example 9-1.

Example 9-1 ACL Preventing Traffic Originating from a Specific Host

```
R1(config)# access-list 1 deny 172.16.4.13 0.0.0.0
R1(config)# access-list 1 permit 0.0.0.0 255.255.255.255
R1(config)# interface gigabitethernet 0/0
R1(config-if)# ip access-group 1 out
```

This ACL is designed to block traffic from a specific address, 172.16.4.13, and to allow all other traffic to be forwarded on interface G0/0. The first statement can also be written with the keyword **host** replacing the 0.0.0.0 wildcard mask, as follows:

```
R1(config)# access-list 1 deny host 172.16.4.13
```

In fact, starting with Cisco IOS Software Release 12.3, you can enter the following:

```
R1(config)# access-list 1 deny 172.16.4.13
```

The second statement can be written with the keyword **any** replacing the source address 0.0.0.0 and wildcard mask 255.255.255.255, as follows:

```
R1(config)# access-list 1 permit any
```

Standard Numbered IPv4 ACL: Deny a Specific Subnet

Create an ACL to prevent traffic that originates from the subnet 172.16.4.0/24 from traveling out the G0/0 interface. Create and apply the ACL with the commands in Example 9-2.

Example 9-2 ACL Preventing Traffic Originating from a Specific Subnet

```
R1(config)# access-list 1 deny 172.16.4.0 0.0.0.255
R1(config)# access-list 1 permit any
R1(config)# interface g0/0
R1(config-if)# ip access-group 1 out
```

This ACL is designed to block traffic from a specific subnet, 172.16.4.0, and to allow all other traffic to be forwarded out G0/0.

Standard Numbered IPv4 ACL: Deny Telnet or SSH Access to the Router

For traffic into and out of the router (not through the router), filter Telnet or SSH access to the router by applying an ACL to the vty ports. Restricting vty access is primarily a technique for increasing network security and defining which addresses are allowed Telnet access to the router EXEC process. Create and apply the ACL with the commands in Example 9-3.

Example 9-3 Access List Allowing One Host Only Remote Access to R1

```
R1(config)# access-list 12 permit host 172.16.4.13
R1(config)# line vty 0 15
R1(config-line)# access-class 12 in
```

In this example, only host 172.16.4.13 is allowed to Telnet into R1. All other IP addresses are denied implicitly.

Configuring Extended Numbered IPv4 ACLs

For more precise traffic filtering control, use extended IPv4 ACLs. Extended IPv4 ACLs can be named or numbered in the ranges 100 to 199 and 2000 to 2699. Extended ACLs check for source and destination IP addresses. In addition, at the end of the extended ACL statement, you can specify the protocol and optional TCP or UDP application to filter more precisely. To configure numbered extended IPv4 ACLs on a Cisco router, create an extended IP ACL and activate that ACL on an interface. For CCNA exam purposes, the extended IPv4 ACL command syntax is as follows:

```
Router(config)# access-list access-list-number {permit | deny} protocol
source source-wildcard [operator port] destination destination-wildcard
[operator port] [established] [log]
```

Table 9-1 explains the syntax of the command.

Table 9-1 Command Parameters for a Numbered Extended IPv4 ACL

Command Parameter	Description
<i>access-list-number</i>	Identifies the list using a number in the range 100–199 or 2000–2699.
permit deny	Indicates whether this entry allows or blocks the specified address.
protocol	If ip is specified, the entire TCP/IP protocol suite is filtered. Other protocols you can filter include TCP, UDP, ICMP, EIGRP, and OSPF. Use ? after the permit deny argument to see all the available protocols.
<i>source and destination</i>	Identifies source and destination IP addresses.
<i>source-wildcard</i> and <i>destination-wildcard</i>	Wildcard mask. 0s indicate positions that must match, and 1s indicate “don’t care” positions.
<i>operator [port app_name]</i>	The operator can be lt (less than), gt (greater than), eq (equal to), or neq (not equal to). The port number referenced can be either the source port or the destination port, depending on where in the ACL the port number is configured. As an alternative to the port number, well-known application names can be used, such as Telnet, FTP, and SMTP.
established	For inbound TCP only. Allows TCP traffic to pass if the packet is a response to an outbound-initiated session. This type of traffic has the acknowledgment (ACK) bits set.
log	Sends a logging message to the console.

Extended Numbered IPv4 ACL: Deny FTP from Subnets

For the network in Figure 9-1, we now create an ACL to prevent FTP traffic originating from the subnet 172.16.4.0/24 and going to the 172.16.3.0/24 subnet from traveling out G0/0. Create and apply the ACL with the commands in Example 9-4.

Example 9-4 Access List Preventing FTP Traffic from Specific Subnets

```
R1(config)# access-list 101 deny tcp 172.16.4.0 0.0.0.255 172.16.3.0 0.0.0.255 eq 21
R1(config)# access-list 101 deny tcp 172.16.4.0 0.0.0.255 172.16.3.0 0.0.0.255 eq 20
R1(config)# access-list 101 permit ip any any
R1(config)# interface g0/0
R1(config-if)# ip access-group 101 out
```

The **deny** statements block FTP traffic originating from subnet 172.16.4.0 to subnet 172.16.3.0. The **permit** statement allows all other IP traffic out interface G0/0. Two statements must be entered for the FTP application because port 21 is used to establish, maintain, and terminate an FTP session, while port 20 is used for the actual file transfer task.

Extended Numbered IPv4 ACL: Deny Only Telnet from Subnet

Create an ACL to prevent Telnet traffic that originates from the subnet 172.16.4.0/24 from traveling out interface G0/0. Create and apply the ACL with the commands in Example 9-5.

Example 9-5 Access List Preventing Telnet Traffic from a Specific Subnet

```
R1(config)# access-list 101 deny tcp 172.16.4.0 0.0.0.255 any eq 23
R1(config)# access-list 101 permit ip any any
R1(config)# interface g0/0
R1(config-if)# ip access-group 101 out
```

This example denies Telnet traffic from 172.16.4.0 that is being sent out interface G0/0. All other IP traffic from any other source to any destination is permitted out G0/0.

Configuring Named IPv4 ACLs

With a named ACL, you can identify standard and extended ACLs with an alphanumeric string (name) instead of the current numeric representations.

Because you can delete individual entries with named ACLs, you can modify an ACL without having to delete and then reconfigure the entire ACL. With Cisco IOS Software Release 12.3 and later, you can insert individual entries using an appropriate sequence number.

Standard Named IPv4 ACL Steps and Syntax

The following steps and syntax are used to create a standard named ACL:

- Step 1.** Name the ACL. Starting from global configuration mode, use the **ip access-list standard** command to name the standard ACL. ACL names are alphanumeric and must be unique:

```
Router(config)# ip access-list standard name
```

- Step 2.** Create the ACL. From standard named ACL configuration mode, use **permit** or **deny** statements to specify one or more conditions for determining whether a packet is forwarded or dropped:

```
Router(config-std-nacl)# [sequence-number] {permit | deny} source
source-wildcard
```

If you do not specify a sequence number, Cisco IOS increments the sequence number by 10 for every statement you enter.

- Step 3.** Apply the ACL. Activate the named ACL on an interface with the **ip access-group name** command:

```
Router(config-if)# ip access-group name [in | out]
```

Standard Named IPv4 ACL: Deny a Single Host from a Given Subnet

For the network shown previously in Figure 9-1, create a standard ACL named TROUBLEMAKER to prevent traffic that originates from the host 172.16.4.13 from traveling out interface G0/0. Create and apply the ACL with the commands in Example 9-6.

Example 9-6 Named ACL Preventing Traffic from a Specific Host

```
R1(config)# ip access-list standard TROUBLEMAKER
R1(config-std-nacl)# deny host 172.16.4.13
R1(config-std-nacl)# permit 172.16.4.0 0.0.0.255
R1(config-std-nacl)# interface g0/0
R1(config-if)# ip access-group TROUBLEMAKER out
```

Extended Named IPv4 ACL Steps and Syntax

The following steps and syntax are used to create an extended named ACL:

- Step 1.** Name the ACL. Starting from global configuration mode, use the **ip access-list extended** command to name the extended ACL:

```
Router(config)# ip access-list extended name
```

- Step 2.** Create the ACL. From extended named ACL configuration mode, use **permit** or **deny** statements to specify one or more conditions for determining whether a packet is forwarded or dropped:

```
Router(config-ext-nacl)# [sequence-number] {deny | permit} protocol
source source-wildcard [operator port] destination destination-wildcard
[operator port] [established] [log]
```

- Step 3.** Apply the ACL. Activate the named ACL on an interface with the **ip access-group name** command:

```
Router(config-if)# ip access-group name [in | out]
```

Adding Comments to Named or Numbered IPv4 ACLs

You can add comments to ACLs by using the **remark** argument in place of **permit** or **deny**. Remarks are descriptive statements that you can use to better understand and troubleshoot either named or numbered ACLs.

Example 9-7 shows how to add a comment to a numbered ACL.

Example 9-7 Adding Comments to a Numbered ACL

```
R1(config)# access-list 101 remark Permitting John to Telnet to Server
R1(config)# access-list 101 permit tcp host 172.16.4.13 host 172.16.3.10 eq telnet
```

Example 9-8 shows how to add a comment to a named ACL.

Example 9-8 Adding Comments to a Named ACL

```
R1(config)# ip access-list standard PREVENTION
R1(config-std-nacl)# remark Do not allow Jones subnet through
R1(config-std-nacl)# deny 172.16.4.0 0.0.0.255
```

Verifying IPv4 ACLs

When you finish configuring an ACL, use **show** commands to verify the configuration. Use the **show access-lists** command to display the contents of all ACLs, as in Example 9-9. By entering the ACL name or number as an option for this command, you can display a specific ACL.

Example 9-9 Verifying Access List Configuration

```
R1# show access-lists
Standard IP access list SALES
    10 permit 10.3.3.1
    20 permit 10.4.4.1
    30 permit 10.5.5.1
    40 deny 10.1.1.0, wildcard bits 0.0.0.255
    50 permit any
Extended IP access list ENG
    10 permit tcp host 10.22.22.1 any eq telnet (25 matches)
    20 permit tcp host 10.33.33.1 any eq ftp
    30 permit tcp host 10.33.33.1 any eq ftp-data
```

Notice in the output from the **show access-lists** command in Example 9-9 that sequence numbers are incremented by 10—most likely because the administrator did not enter a sequence number. Also notice that this command tells you how many times Cisco IOS has matched a packet to a statement—25 times, in the case of the first statement in the named ACL ENG.

The **show ip interface** command displays IP interface information and indicates whether any IP ACLs are set on the interface. In the **show ip interface g0/0** command output in Example 9-10, IP ACL 1 has been configured on the G0/0 interface as an inbound ACL. No outbound IP ACL has been configured on the G0/0 interface.

Example 9-10 Verifying Access List Configuration on a Specific Interface

```
R1# show ip interface g0/0
GigabitEthernet0/0 is up, line protocol is up
  Internet address is 10.1.1.11/24
  Broadcast address is 255.255.255.255
  Address determined by setup command
  MTU is 1500 bytes
  Helper address is not set
  Directed broadcast forwarding is disabled
  Outgoing access list is not set
  Inbound access list is 1
  Proxy ARP is enabled
<output omitted>
```

Finally, you can also verify your ACL creation and application with the **show running-config** command (see Example 9-11).

Example 9-11 Verifying ACL Creation and Application in the Running Configuration

```
R1# show running-config
Building configuration...
!
<output omitted>
!
interface GigabitEthernet0/0
    ip address 10.44.44.1 255.255.255.0
    ip access-group ENG out
!
<output omitted>
!
interface Serial0/0/0
    ip address 172.16.2.1 255.255.255.252
    ip access-group SALES in
!
<output omitted>
ip access-list standard SALES
    permit 10.3.3.1
    permit 10.4.4.1
    permit 10.5.5.1
    deny 10.1.1.0 0.0.0.255
    permit any
!
ip access-list extended ENG
    permit tcp host 10.22.22.1 any eq telnet
    permit tcp host 10.33.33.1 any eq ftp
    permit tcp host 10.33.33.1 any eq ftp-data
!
<output omitted>
```

Comparing IPv4 and IPv6 ACLs

IPv4 and IPv6 ACLs have some subtle differences (see Table 9-2).

Table 9-2 IPv4 and IPv6 ACLs

Feature	IPv4 Only	IPv6 Only	Both
Match source and/or destination address		X	
Match host addresses or subnets/prefixes		X	
Applied directionally on an interface		X	
Match TCP or UDP source and/or destination ports		X	
Match ICMP codes		X	

Feature	IPv4 Only	IPv6 Only	Both
Include implicit deny at end of ACL			X
Match IPv4 packets only	X		
Match IPv6 packets only		X	
Use numbers to identify the ACL	X		
Use names to identify the ACL		X	
Include some implicit permit statements at end of ACL		X	

Configuring IPv6 ACLs

The basic steps to configure IPv6 ACLs are the same as for named IPv4 ACLs:

Step 1. Name the ACL.

Step 2. Create the ACL.

Step 3. Apply the ACL.

Step 1: Name the IPv6 ACL

To name an IPv6 ACL, enter the **ipv6 access-list** command in global configuration mode:

```
Router(config)# ipv6 access-list name
```

Notice that the command syntax to name an IPv6 ACL is the same whether you are configuring standard or extended IPv6 ACLs. However, standard and extended IPv6 ACLs are different from standard and extended IPv4 ACLs.

Step 2: Create the IPv6 ACL

A standard IPv6 ACL includes both source and destination address information, but it does not include TCP, UDP, or ICMPv6 information. The syntax for a standard IPv6 ACL follows:

```
Router(config-ipv6-acl)# [permit | deny] ipv6 {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address} [log]
```

Extended IPv6 ACLs match on many more IPv6 packet header fields, as well as TCP, UDP, and ICMPv6 messages and IPv6 extension headers. The syntax for extended IPv6 ACLs follows:

```
Router(config-ipv6-acl)# [permit | deny] protocol {source-ipv6-prefix/ prefix-length | any | host source-ipv6-address} [operator {port-number}] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address} [operator {port-number}] [dest-option-type {doh-number | doh-type}] [dscp value] [flow-label value] [fragments] [log] [log-input] [mobility] [mobility-type] [mh-number | mh-type] [reflect name {timeout value}] [routing] [routing-type] [routing-number] [sequence value] [time-range name]
```

If you choose **icmp**, **tcp**, or **udp** as the *protocol*, additional filtering options are available to match those specific headers. For example, configuring **icmp** as the *protocol* enables you to filter the

icmp-type. Configuring **tcp** as the *protocol* enables you to filter the six TCP flags, ACK, FIN, PSH, RST, SYN, and URG. Configuring **udp** as the *protocol* enables you to filter IPv6 extension headers, such as IPsec.

Step 3: Apply the IPv6 ACL

The syntax to apply an IPv6 ACL to an interface follows:

```
Router(config-if)# ipv6 traffic-filter access-list-name { in | out }
```


The syntax to apply an IPv6 ACL to vty lines is similar to that of IPv4. Just replace **ip** with **ipv6**, as follows:

```
Router(config-line)# ipv6 access-class access-list-name
```

Standard IPv6 ACL: Allow SSH Remote Access

The topology in Figure 9-2 is used here for IPv6 ACL configuration scenarios.

Figure 9-2 IPv6 ACL Configuration Topology

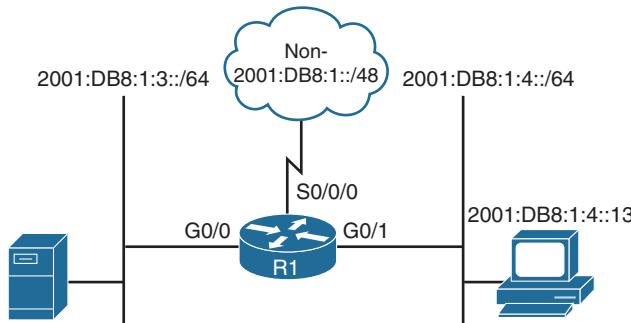

Example 9-12 demonstrates how to create and apply an IPv6 ACL to allow only 2001:DB8:1:4::13 to remotely connect to R1 vty lines.

Example 9-12 Access List Allowing Only One Host to Access R1

```
R1(config)# ipv6 access-list SSH-HOST
R1(config-ipv6-acl)# permit ipv6 host 2001:db8:1:4::13 any
R1(config-ipv6-acl)# deny ipv6 any any
R1(config-ipv6-acl)# exit
R1(config)# line vty 0 4
R1(config-line)# ipv6 access-class SSH-HOST in
```

The **permit** statement allows only one host, 2001:DB8:1:4::13. All other IPv6 traffic is denied. The IPv6 ACL is then applied to the first five vty lines with the **ipv6 access-class** command.

Extended IPv6 ACL: Allow Only Web Traffic

Example 9-13 demonstrates how to create and apply an IPv6 ACL to allow only web traffic originating from the subnet 2001:DB8:1:4::/64 and going to the 2001:DB8:1:3::/64 subnet.

Example 9-13 Access List Preventing Web Traffic from Specific Subnets

```
R1(config)# ipv6 access-list WEB-ONLY
R1(config-ipv6-acl)# permit tcp 2001:DB8:1:4::/64 2001:DB8:1:3::/64 eq www
R1(config-ipv6-acl)# deny ipv6 2001:DB8:1:4::/64 2001:DB8:1:3::/64
R1(config-ipv6-acl)# permit ipv6 2001:DB8:1:4::/64 any
R1(config-ipv6-acl)# exit
R1(config)# interface g0/1
R1(config-if)# ipv6 traffic-filter WEB-ONLY in
```

The first **permit** statement allows traffic from prefix 2001:DB8:1:4::/64 to access web services on any device in prefix 2001:DB8:1:3::/64. The **deny** statement ensures that all other traffic from 2001:DB8:1:4::/64 to 2001:DB8:1:3::/64 is blocked. The last **permit** statement allows all other inbound traffic from 2001:DB8:1:4::/64 to any destination.

Verifying IPv6 ACLs

As with IPv4 ACLs, you can view the configuration and application of IPv6 ACLs with the **show run** command (see Example 9-14).

Example 9-14 Examining ACLs in the Configuration

```
R1# show run
Building configuration...
<some output omitted>
!
interface GigabitEthernet0/1
    ipv6 traffic-filter WEB-ONLY in
    ipv6 address FE80::1 link-local
    ipv6 address 2001:DB8:1:4::1/64
!
ipv6 access-list WEB-ONLY
    permit tcp 2001:DB8:1:4::/64 2001:DB8:1:3::/64 eq www
    deny ipv6 2001:DB8:1:4::/64 2001:DB8:1:3::/64
    permit ipv6 2001:DB8:1:4::/64 any
ipv6 access-list SSH-HOST
    permit ipv6 host 2001:DB8:1:4::13 any
    deny ipv6 any any
!
line vty 0 4
    ipv6 access-class SSH-HOST in
    login local
    transport input ssh
!
R1#
```

However, the configuration of production routers is usually long and complex. For the simulation questions on the CCNA exam, you might not even have access to the **show run** command. Therefore, you should use verification commands that more precisely and efficiently provide the information you need.

For example, **show access-lists** quickly reveals all IPv4 and IPv6 ACLs configured on the device, as Example 9-15 shows.

Example 9-15 Verifying All ACLs Configured

```
R1# show access-lists
Standard IP access list SALES
  10 permit 10.3.3.1
  20 permit 10.4.4.1
  30 permit 10.5.5.1
  40 deny 10.1.1.0, wildcard bits 0.0.0.255
  50 permit any
Extended IP access list ENG
  10 permit tcp host 10.22.22.1 any eq telnet
  20 permit tcp host 10.33.33.1 any eq ftp
  30 permit tcp host 10.33.33.1 any eq ftp-data
IPv6 access list SSH-HOST
  permit ipv6 host 2001:DB8:1:4::13 any sequence 10
  deny ipv6 any any sequence 20
IPv6 access list WEB-ONLY
  permit tcp 2001:DB8:1:4::/64 2001:DB8:1:3::/64 eq www sequence 10
  deny ipv6 2001:DB8:1:4::/64 2001:DB8:1:3::/64 sequence 20
  permit ipv6 2001:DB8:1:4::/64 any sequence 30
R1#
```

Notice that Cisco IOS added sequence numbers to the end of the IPv6 ACLs instead of at the beginning, as it does for IPv4 ACLs.

In Example 9-16, only the IPv6 ACLs are shown. This output was generated after multiple packets matched each of the statements in the ACLs.

Example 9-16 Verifying IPv6 ACL Match Statistics

```
R1# show ipv6 access-list
IPv6 access list SSH-HOST
  permit ipv6 host 2001:DB8:1:4::13 any (1 match(es)) sequence 10
  deny ipv6 any any (5 match(es)) sequence 20
IPv6 access list WEB-ONLY
  permit tcp 2001:DB8:1:4::/64 2001:DB8:1:3::/64 eq www (5 match(es))
    sequence 10
  deny ipv6 2001:DB8:1:4::/64 2001:DB8:1:3::/64 (4 match(es)) sequence 20
  permit ipv6 2001:DB8:1:4::/64 any (75 match(es)) sequence 30
R1#
```

To verify the placement of an IPv6 ACL on an interface, you can use the **show ipv6 interface** command. If an ACL is applied, the output will have a line entry like the one highlighted in Example 9-17.

Example 9-17 Verifying an IPv6 ACL Applied to an Interface

```
R1# show ipv6 interface g0/1
GigabitEthernet0/1 is up, line protocol is up
  IPv6 is enabled, link-local address is FE80::1
    No Virtual link-local address(es):
    Global unicast address(es):
      2001:DB8:1:4::1, subnet is 2001:DB8:1:4::/64
    Joined group address(es):
      FF02::1
      FF02::2
      FF02::1:FF00:1
  MTU is 1500 bytes
  ICMP error messages limited to one every 100 milliseconds
  ICMP redirects are enabled
  ICMP unreachables are sent
  Input features: Access List
  Inbound access list WEB-ONLY
  ND DAD is enabled, number of DAD attempts: 1
  ND reachable time is 30000 milliseconds (using 30000)
  ND advertised reachable time is 0 (unspecified)
  ND advertised retransmit interval is 0 (unspecified)
  ND router advertisements are sent every 200 seconds
  ND router advertisements live for 1800 seconds
  ND advertised default router preference is Medium
  Hosts use stateless autoconfig for addresses.

R1#
```

Troubleshooting ACLs

Your network can be configured correctly with all hosts receiving DHCP addressing, fully populated routing tables, and a fully operating physical layer, but an ACL somewhere in the data path can still be causing a problem. Troubleshooting a problem caused by an ACL can make your job more difficult.

ACLs can block normal troubleshooting tools such as **ping** and **traceroute** while still allowing normal traffic. Therefore, a network administrator might need to rely on other tools to find a problem.

Say that you have determined that a problem is with the ACL configuration. The following three steps summarize a structured troubleshooting process you can use to track down the issue:

- Step 1.** Because ACL configurations cannot cause a problem until they are applied, determine what interfaces are impacted by ACLs by using the **show run** or **show ip interfaces** command.
- Step 2.** Verify the ACL configuration by using the **show access-lists**, **show ip access-lists**, or **show run** command.
- Step 3.** Analyze the ACLs to determine which packets will match. The **show access-lists** and **show ip access-lists** commands help by identifying the number of times packets have matched a statement.

Some common ACL configuration errors include the following:

- ACL statements are out of order.
- The source and destination addresses and/or ports are reversed.
- The ACL is applied in the wrong direction.
- Syntax or spelling errors cause the ACL to have the wrong intended effect or no effect.
- Standard ACLs are close to the source instead of to the destination.

Refer to your study resources for several excellent troubleshooting examples for both IPv4 and IPv6 ACLs.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	5
CCNA 200-301 Official Cert Guide, Volume 2	2
	3
Portable Command Guide	21

NAT

CCNA 200-301 Exam Topics

- Configure and verify inside source NAT using static and pools


Key Topics

To cope with the depletion of IPv4 addresses, several short-term solutions were developed. One short-term solution is to use private addresses and Network Address Translation (NAT). NAT enables inside network hosts to borrow a legitimate Internet IPv4 address while accessing Internet resources. When the requested traffic returns, the legitimate IPv4 address is repurposed and available for the next Internet request by an inside host. Using NAT, network administrators need only one or a few IPv4 addresses for the router to provide to the hosts instead of one unique IPv4 address for every client joining the network. Although IPv6 ultimately solves the problem of IPv4 address space depletion that NAT was created to address, it is still in wide use in current network implementation strategies. Today we review the concepts, configuration, and troubleshooting of NAT.

NAT Concepts


NAT, defined in RFC 3022, has many uses. Its key use is to conserve IPv4 addresses by allowing networks to use private IPv4 addresses. NAT translates nonroutable, private, internal addresses into routable public addresses. NAT also has the benefit of hiding internal IPv4 addresses from outside networks.

A NAT-enabled device typically operates at the border of a stub network. Figure 8-1 shows the master topology used during today's review. R2 is the border router and is the device used for today's example configurations.

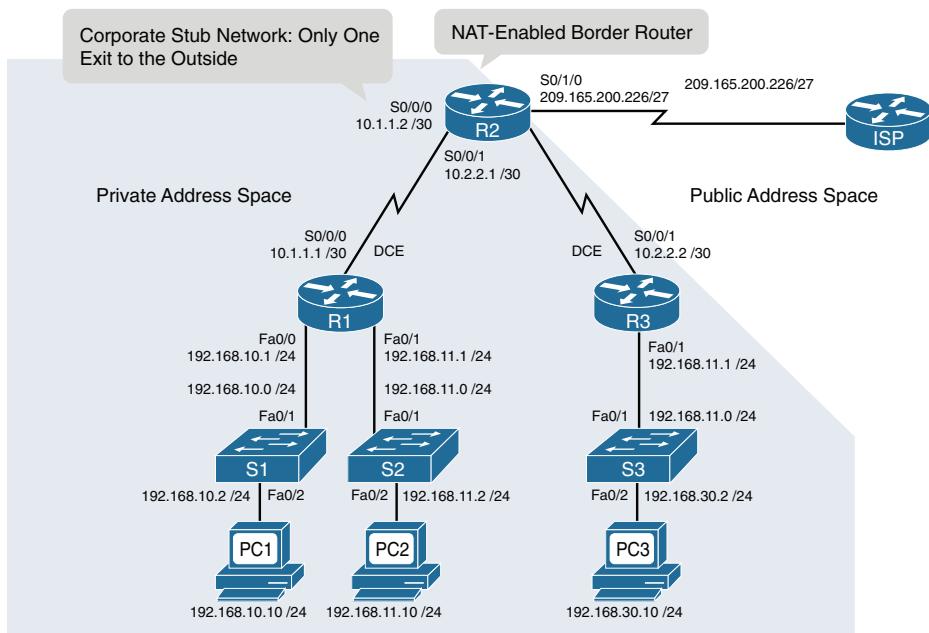Figure 8-1 NAT Topology

In NAT terminology, the *inside network* is the set of networks that are subject to translation (every network in the shaded region in Figure 8-1). The *outside network* is all other addresses. Figure 8-2 shows how to refer to the addresses when configuring NAT:

- **Inside local address:** Most likely a private address. In the figure, the IPv4 address 192.168.10.10 assigned to PC1 is an inside local address.
- **Inside global address:** A valid public address that the inside host is given when it exits the NAT router. When traffic from PC1 is destined for the web server at 209.165.201.1, R2 must translate the inside local address to an inside global address, which is 209.165.200.226 in this case.
- **Outside global address:** A reachable IPv4 address assigned to a host on the Internet. For example, the web server can be reached at IPv4 address 209.165.201.1.
- **Outside local address:** The local IPv4 address assigned to a host on the outside network. In most situations, this address is identical to the outside global address of that outside device. (Outside local addresses are beyond the scope of the CCNA.)

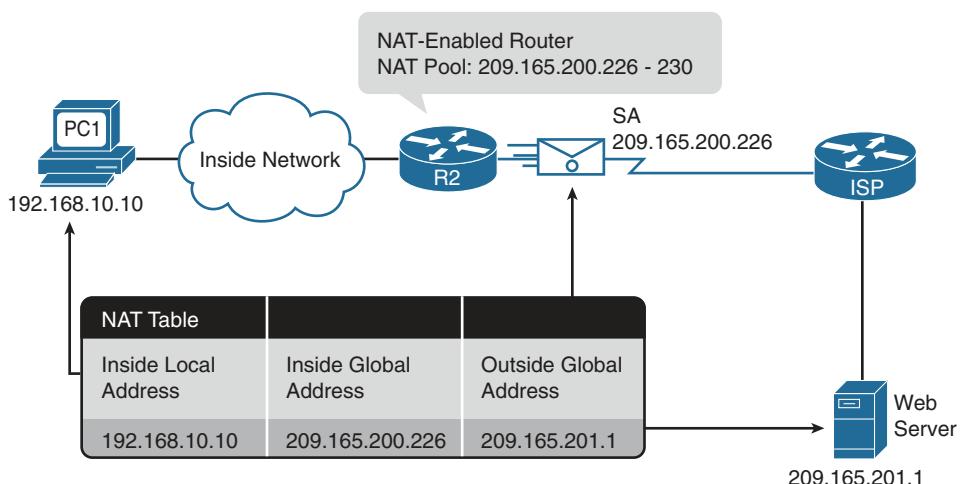Figure 8-2 NAT Terminology

A NAT Example

Referring to Figure 8-1, the following steps illustrate the NAT process when PC1 sends traffic to the Internet:

- Step 1.** PC1 sends a packet destined for the Internet to R1, the default gateway.
- Step 2.** R1 forwards the packet to R2, as directed by its routing table.
- Step 3.** R2 refers to its routing table and identifies the next hop as the ISP router. It then checks to see whether the packet matches the criteria specified for translation. R2 has an ACL that identifies the inside network as a valid host for translation. Therefore, it translates an inside local IPv4 address to an inside global IPv4 address, which, in this case, is 209.165.200.226. It stores this mapping of the local address to global address in the NAT table.
- Step 4.** R2 modifies the packet with the new source IPv4 address (the inside global address) and sends it to the ISP router.
- Step 5.** The packet eventually reaches its destination, which then sends its reply to the inside global address 209.165.200.226.
- Step 6.** When R2 receives replies from the destination, it consults the NAT table to match the inside global address to the correct inside local address. R2 then modifies the packet, inserting the inside local address (192.168.10.10) as the destination address and sending it to R1.
- Step 7.** R1 receives the packet and forwards it to PC1.

Dynamic and Static NAT

The two types of NAT translation are as follows:


- **Dynamic NAT:** Uses a pool of public addresses and assigns them on a first-come, first-served basis or reuses an existing public address configured on an interface. When a host with a private IPv4 address requests access to the Internet, dynamic NAT chooses an IPv4 address from the pool that another host is not already using. Instead of using a pool, dynamic NAT can be configured to overload an existing public address configured on an interface.
- **Static NAT:** Uses a one-to-one mapping of local and global addresses. These mappings remain constant. Static NAT is particularly useful for web servers or hosts that must have a consistent address that is accessible from the Internet.

NAT Overload

NAT overloading (also called Port Address Translation [PAT]) maps multiple private IPv4 addresses to a single public IPv4 address or a few addresses. To do this, a port number also tracks each private address. When a response comes back from the outside, source port numbers determine the correct client for the NAT router to translate the packets.

Figure 8-3 and the following steps illustrate the NAT overload process:

Figure 8-3 NAT Overload Example

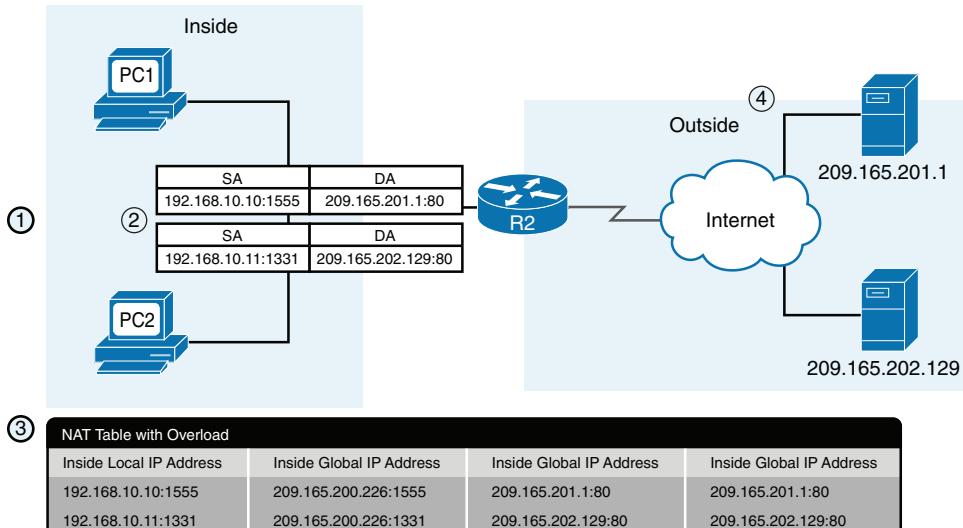

Step 1. PC1 and PC2 send packets destined for the Internet.

Step 2. When the packets arrive at R2, NAT overload changes the source address to the inside global IPv4 address and keeps a record of the assigned source port numbers (1555 and 1331, in this example) to identify the client from which the packets originated.

Step 3. R2 updates its NAT table. Notice the assigned ports. R2 then routes the packets to the Internet.

Step 4. When the web server replies, R2 uses the destination source port to translate the packet to the correct client.

NAT overload attempts to preserve the original source port. However, if this source port is already used, NAT overload assigns the first available port number, starting from the beginning of the appropriate port group 0–511, 512–1023, or 1024–65535.

NAT Benefits

Using NAT offers the following benefits:

- NAT conserves registered IPv4 address space because, with NAT overload, internal hosts can share a single public IPv4 address for all external communications.
- NAT increases the flexibility of connections to the public network. Multiple pools, backup pools, and load-balancing pools can be implemented to ensure reliable public network connections.
- NAT allows the existing scheme to remain while supporting a new public addressing scheme. This means that an organization can change ISPs without needing to change any of its inside clients.
- NAT provides a layer of network security because private networks do not advertise their inside local addresses outside the organization. However, the phrase *NAT firewall* is misleading; NAT does not replace firewalls.

NAT Limitations

The limitations of using NAT include the following:

- **Performance is degraded:** NAT increases switching delays because translating each IPv4 address within the packet headers takes time.
- **End-to-end functionality is degraded:** Many Internet protocols and applications depend on end-to-end functionality, with unmodified packets forwarded from the source to the destination.
- **End-to-end IP traceability is lost:** Tracing packets that undergo numerous packet address changes over multiple NAT hops becomes much more difficult, making troubleshooting challenging.
- **Tunneling is more complicated:** Using NAT also complicates tunneling protocols, such as IPsec, because NAT modifies values in the headers that interfere with the integrity checks that IPsec and other tunneling protocols do.
- **Services can be disrupted:** Services that require the initiation of TCP connections from the outside network, or stateless protocols such as those using UDP, can be disrupted.

Configuring Static NAT

Static NAT is a one-to-one mapping between an inside address and an outside address. Static NAT allows connections initiated by external devices to access inside devices. For example, you might

want to map an inside global address to a specific inside local address that is assigned to your inside web server. The steps and syntax to configure static NAT follow:

- Step 1.** Configure the static translation of an inside local address to an inside global address:

```
Router(config)# ip nat inside source static local-ip global-ip
```

- Step 2.** Specify the inside interface:


```
Router(config)# interface type number
Router(config-if)# ip nat inside
```

- Step 3.** Specify the outside interface:

```
Router(config)# interface type number
Router(config-if)# ip nat outside
```

Figure 8-4 shows a sample static NAT topology.

Figure 8-4 Static NAT Topology

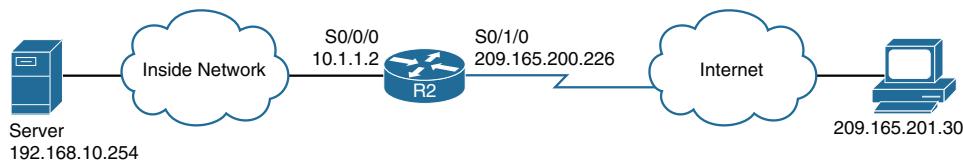

Example 8-1 shows the static NAT configuration.

Example 8-1 Static NAT Configuration

```
R2(config)# ip nat inside source static 192.168.10.254 209.165.200.254
R2(config)# interface serial0/0/0
R2(config-if)# ip nat inside
R2(config-if)# interface serial 0/1/0
R2(config-if)# ip nat outside
```

This configuration statically maps the inside private IPv4 address 192.168.10.254 to the outside public IPv4 address 209.165.200.254. This allows outside hosts to access the internal web server by using the public IPv4 address 209.165.200.254.

Configuring Dynamic NAT

Dynamic NAT maps private IPv4 addresses to public addresses drawn from a NAT pool. The steps and syntax to configure dynamic NAT are as follows:

- Step 1.** Define a pool of global addresses to be allocated:

```
Router(config)# ip nat pool name start-ip end-ip {netmask | prefix-length
prefix-length}
```

Step 2. Define a standard access list permitting addresses that are to be translated:

```
Router(config)# access-list access-list-number source source-wildcard
```

Step 3. Bind the pool of addresses to the access list:

```
Router(config)# ip nat inside source list access-list-number pool name
```

Step 4. Specify the inside interface:

```
Router(config)# interface type number
```

```
Router(config-if)# ip nat inside
```


Step 5. Specify the outside interface:

```
Router(config)# interface type number
```

```
Router(config-if)# ip nat outside
```

Figure 8-5 shows a sample dynamic NAT topology.

Figure 8-5 Dynamic NAT Topology

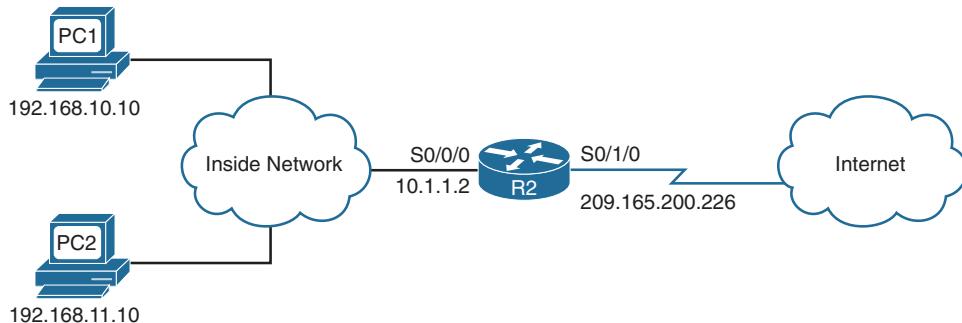

Example 8-2 shows the dynamic NAT configuration.

Example 8-2 Dynamic NAT Configuration

```
R2(config)# ip nat pool NAT-POOL1 209.165.200.226 209.165.200.240 netmask
255.255.255.224
R2(config)# access-list 1 permit 192.168.0.0 0.0.255.255
R2(config)# ip nat inside source list 1 pool NAT-POOL1
R2(config)# interface serial 0/0/0
R2(config-if)# ip nat inside
R2(config-if)# interface serial s0/1/0
R2(config-if)# ip nat outside
```

Configuring NAT Overload

Commonly with home networks and small to medium-size businesses, the ISP assigns only one registered IPv4 address to the router. Therefore, it is necessary to overload that one IPv4 address so that multiple inside clients can use it simultaneously.

The configuration is similar to the use of dynamic NAT, except that instead of using a pool of addresses, the interface keyword is used to identify the outside IPv4 address. The **overload** keyword enables PAT so that source port numbers are tracked during translation.

Example 8-3 shows how R2 in Figure 8-5 is configured to overload its registered IPv4 address on the serial interface.

Example 8-3 Configuring NAT to Overload an Interface Address

```
R2(config)# access-list 1 permit 192.168.0.0 0.0.255.255
R2(config)# ip nat inside source list 1 interface serial 0/1/0 overload
R2(config)# interface serial 0/0/0
R2(config-if)# ip nat inside
R2(config-if)# interface serial s0/1/0
R2(config-if)# ip nat outside
```

You can also overload a NAT pool of addresses, which might be necessary in organizations that potentially have many clients that simultaneously need translations. In Example 8-2, NAT is configured with a pool of 15 addresses (209.165.200.226–209.165.200.240). If R2 is translating all 15 addresses at any given moment, packets for the 16th client will be queued for processing and will possibly time out. To avoid this problem, add the keyword **overload** to the command that binds the access list to the NAT pool, as follows:

```
R2(config)# ip nat inside source list 1 pool NAT-POOL1 overload
```

Interestingly, Cisco IOS uses the first IPv4 address in the pool until it runs out of available port numbers. Then it moves to the next IPv4 address in the pool.

Verifying NAT

Assume that both the static and dynamic NAT topologies in Figures 6-4 and 6-5 are configured on R2, with the inside server statically translated to 209.165.200.254 and **NAT-POOL1** configured with the **overload** keyword. Furthermore, assume that two inside clients have connected to an outside host. You can use the **show ip nat translations** command to verify the current translations in the R2 NAT table, as Example 8-4 shows.

Example 8-4 Verifying NAT Operations with *show ip nat translations*

```
R2# show ip nat translations
Pro Inside global           Inside local     Outside local   Outside global
--- 209.165.200.254        192.168.10.254  ---          ---
tcp 209.165.200.226:47392  192.168.10.10:47392 209.165.201.30:80 209.165.201.30:80
tcp 209.165.200.226:50243  192.168.11.10:50243 209.165.201.30:80 209.165.201.30:80
```

The static entry is always in the table. Currently, the table has two dynamic entries. Notice that both inside clients received the same inside global address, but the source port numbers are different (47392 for PC1 and 50243 for PC2).

The **show ip nat statistics** command, shown in Example 8-5, displays information about the total number of active translations, NAT configuration parameters, the number of addresses in the pool, and how many have been allocated.

Example 8-5 Verifying NAT Operations with *show ip nat statistics*

```
R2# show ip nat statistics
Total translations: 3 (1 static, 2 dynamic, 2 extended)
Outside Interfaces: Serial0/1/0
Inside Interfaces: FastEthernet0/0 , Serial0/0/0 , Serial0/0/1
Hits: 29 Misses: 7
Expired translations: 5
Dynamic mappings:
-- Inside Source
access-list 1 pool NAT-POOL1 refCount 2
    pool NAT-POOL1: netmask 255.255.255.224
        start 209.165.200.226 end 209.165.200.240
        type generic, total addresses 3 , allocated 1 (7%), misses 0
```

Alternatively, use the **show run** command and look for NAT, access command list, interface, or pool-related commands with the required values. Carefully examine the output from these commands to discover any errors.

It is sometimes useful to clear the dynamic entries sooner than the default. This is especially true when testing the NAT configuration. To clear dynamic entries before the timeout has expired, use the **clear ip nat translation *** privileged EXEC command.

Troubleshooting NAT

When you have IP connectivity problems in a NAT environment, determining the cause of a problem is often difficult. The first step in solving your problem is to rule out NAT as the cause. Follow these steps to verify that NAT is operating as expected:

- Step 1.** Based on the configuration, clearly define what NAT is supposed to achieve. This might reveal a problem with the configuration.
- Step 2.** Verify that correct translations exist in the translation table by using the **show ip nat translations** command.
- Step 3.** Use the **clear** and **debug** commands to verify that NAT is operating as expected. Check to see whether dynamic entries are re-created after they are cleared.
- Step 4.** Review in detail what is happening to the packet and verify that routers have the correct routing information to forward the packet.

Use the **debug ip nat** command to verify the operation of the NAT feature by displaying information about every packet that the router translates, as in Example 8-6.

Example 8-6 Troubleshooting NAT with debug ip nat

```
R2# debug ip nat
IP NAT debugging is on
R2#
NAT: s=192.168.10.10->209.165.200.226, d=209.165.201.30[8]
NAT*: s=209.165.201.30, d=209.165.200.226->192.168.10.10[8]
NAT: s=192.168.10.10->209.165.200.226, d=209.165.201.30[8]
NAT: s=192.168.10.10->209.165.200.226, d=209.165.201.30[8]
NAT*: s=209.165.201.30, d=209.165.200.226->192.168.10.10[8]
NAT*: s=209.165.201.30, d=209.165.200.226->192.168.10.10[8]
NAT: s=192.168.10.10->209.165.200.226, d=209.165.201.30[8]
NAT: s=192.168.10.10->209.165.200.226, d=209.165.201.30[8]
NAT*: s=209.165.201.30, d=209.165.200.226->192.168.10.10[8]
NAT*: s=209.165.201.30, d=209.165.200.226->192.168.10.10[8]
NAT: s=192.168.10.10->209.165.200.226, d=209.165.201.30[8]
R2#
```

You can see that inside host 192.168.10.10 initiated traffic to outside host 209.165.201.30 and has been translated into address 209.165.200.226.

When decoding the debug output, note what the following symbols and values indicate:

- *****: The asterisk next to NAT indicates that the translation is occurring in the fast-switched path. The first packet in a conversation is always process switched, which is slower. The remaining packets go through the fast-switched path if a cache entry exists.
- **s=**: This refers to the source IPv4 address.
- **a.b.c.d->w.x.y.z**: This indicates that source address **a.b.c.d** is translated into **w.x.y.z**.
- **d=**: This refers to the destination IPv4 address.
- **[xxxx]**: The value in brackets is the IP identification number. This information can be useful for debugging because it enables correlation with other packet traces from protocol analyzers.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	6
CCNA 200-301 Official Cert Guide, Volume 2	10
Portable Command Guide	18

WAN, VPN, and IPsec

CCNA 200-301 Exam Topics

- Describe characteristics of network topology architectures
- Describe remote access and site-to-site VPNs

Key Topics


Today is a whirlwind review of WAN topologies, WAN connection options, virtual private networks (VPNs), and Internet Protocol Security (IPsec). Most of these exam topics are conceptual in nature and require no configuration skills, so read through this review several times and refer to your study resources for more in-depth review.

WAN Topologies

Figure 7-1 shows the four basic WAN topology options that a business can select for its WAN infrastructure:


- **Point-to-point:** Typically uses a dedicated leased-line connection, such as T1/E1.
- **Hub-and-spoke:** Offers a single-homed, point-to-multipoint topology in which a single interface on the hub router can be shared with multiple spoke routers through the use of virtual interfaces.
- **Full mesh:** Gives each router a connection to every other router. Requires a large number of virtual interfaces.
- **Dual-homed:** Provides redundancy for a single-homed hub-and-spoke topology by providing a second hub to connect to spoke routers.

A business can choose to implement a variety of these topologies. For example, an enterprise might choose to implement a full mesh topology between its regional headquarters. It might use a hub-and-spoke topology between regional headquarters and branch offices. If two of the branch offices communicate frequently, the network administrators might contract for a point-to-point link to reduce the traffic load on the hub routers. Using dual-homed connections to the Internet ensures that customers, partners, and teleworkers can always access the enterprise's resources.

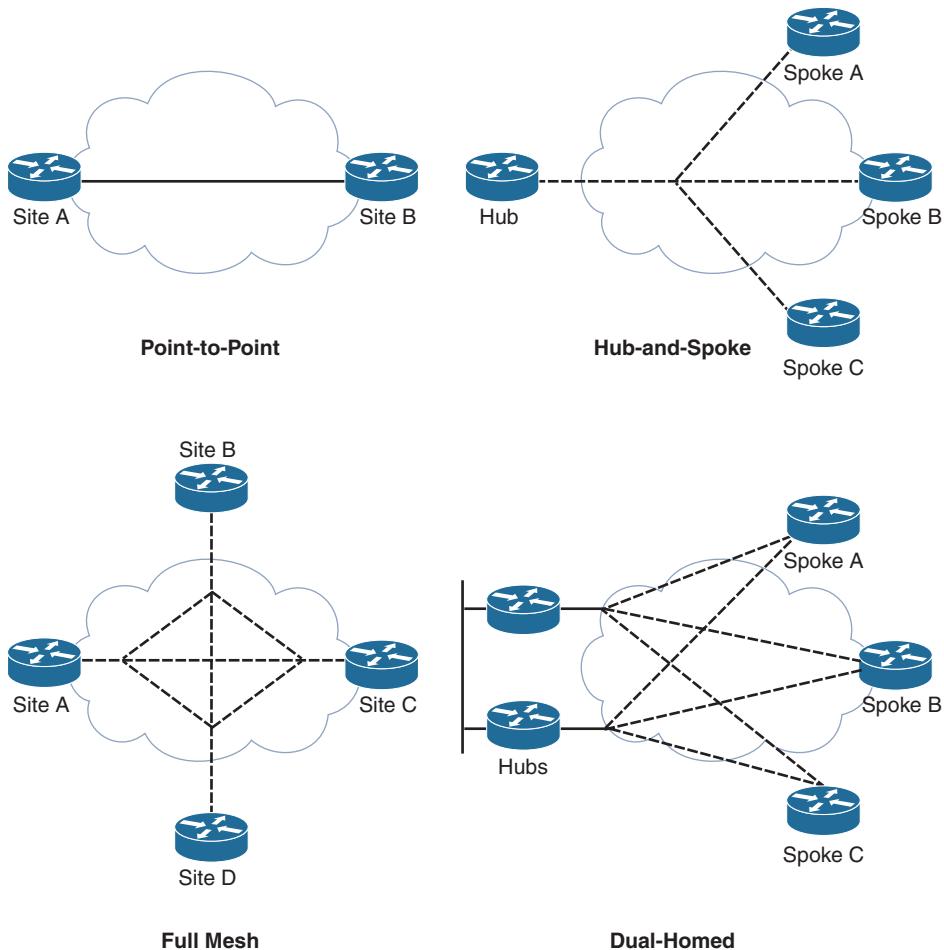Figure 7-1 WAN Topology Options


WAN Connection Options

Many options for implementing WAN solutions are currently available. They differ in technology, speed, and cost. Figure 7-2 provides a high-level view of the various WAN link connection options. The following subsections describe these options in more detail.

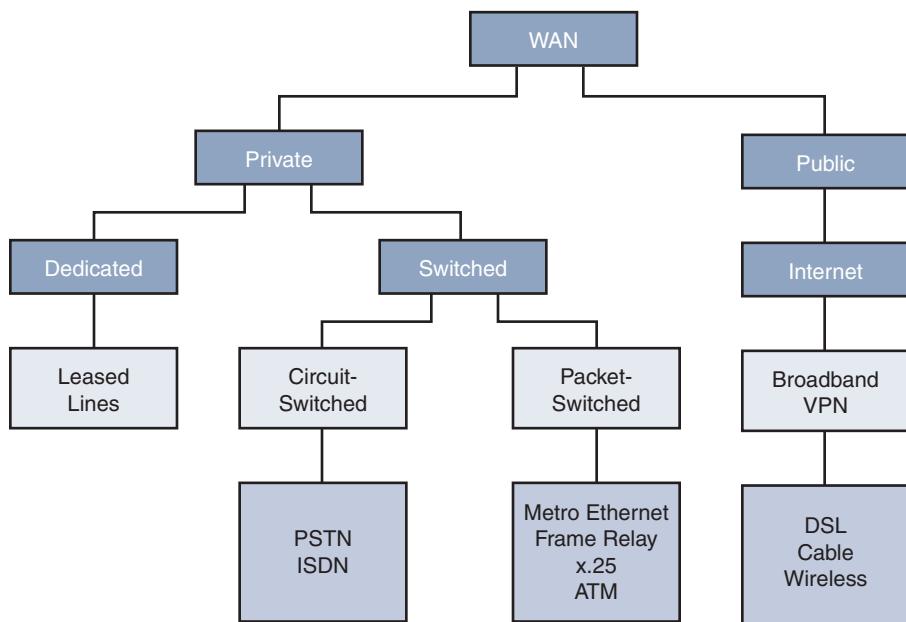Figure 7-2 WAN Link Connection Options

Dedicated Connection Options

Also called leased lines, dedicated connections are pre-established point-to-point WAN connections from the customer premises through the provider network to a remote destination (see Figure 7-3).

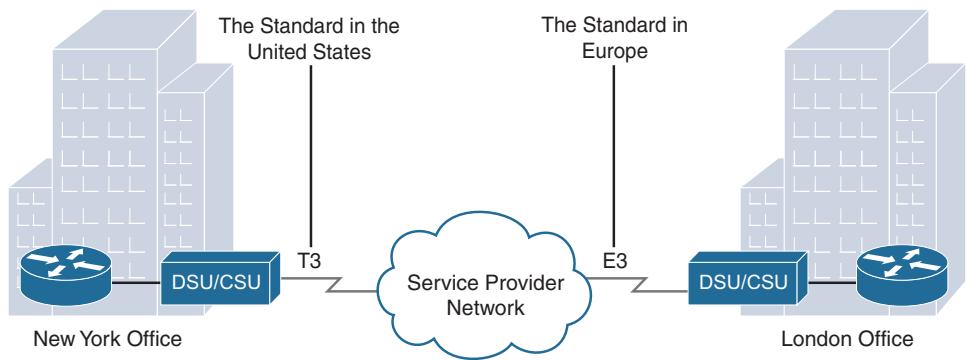Figure 7-3 Leased Lines

Leased lines are usually more expensive than switched services because of the dedicated, always-on cost of providing WAN service to the customer. The dedicated capacity removes latency and jitter and provides a layer of security because only the customer's traffic is allowed on the link. Table 7-1 lists the available leased line types and their bit-rate capacities.

Table 7-1 Leased Line Types and Capacities

Line Type	Bit-Rate Capacity	Line Type	Bit-Rate Capacity
56k	56 kbps	OC-9	466.56 Mbps
64k	64 kbps	OC-12	622.08 Mbps
T1	1.544 Mbps	OC-18	933.12 Mbps
E1	2.048 Mbps	OC-24	1244.16 Mbps
J1	2.048 Mbps	OC-36	1866.24 Mbps
E3	34.064 Mbps	OC-48	2488.32 Mbps
T3	44.736 Mbps	OC-96	4976.64 Mbps
OC-1	51.84 Mbps	OC-192	9953.28 Mbps
OC-3	155.54 Mbps	OC-768	39,813.12 Mbps

Circuit-Switched Connection Options


The two main types of circuit-switched connections are analog dialup and ISDN. Both technologies have limited implementation bases in today's networks. However, they are both still used in remote rural areas and other areas of the globe where more recent technologies are not yet available.

Analog dialup uses modems at very low-speed connections that might be adequate for the exchange of sales figures, prices, routine reports, and email, or as an emergency backup link.

ISDN turns the local loop into a TDM digital connection, which enables it to carry digital signals that result in higher-capacity switched connections than are available with analog modems. Two types of ISDN interfaces exist:

- **Basic Rate Interface (BRI):** Provides two 64-kbps B-channels for voice or data transfer and a 16-kbps D-channel for control signaling.
- **Primary Rate Interface (PRI):** Provides 23 B-channels with 64 kbps and 1 D-channel with 64 kbps in North America, for a total bit rate of up to 1.544 Mbps. Europe uses 30 B-channels and 1 D-channel, for a total bit rate of up to 2.048 Mbps.

Figure 7-4 illustrates the various differences between ISDN BRI and PRI lines.

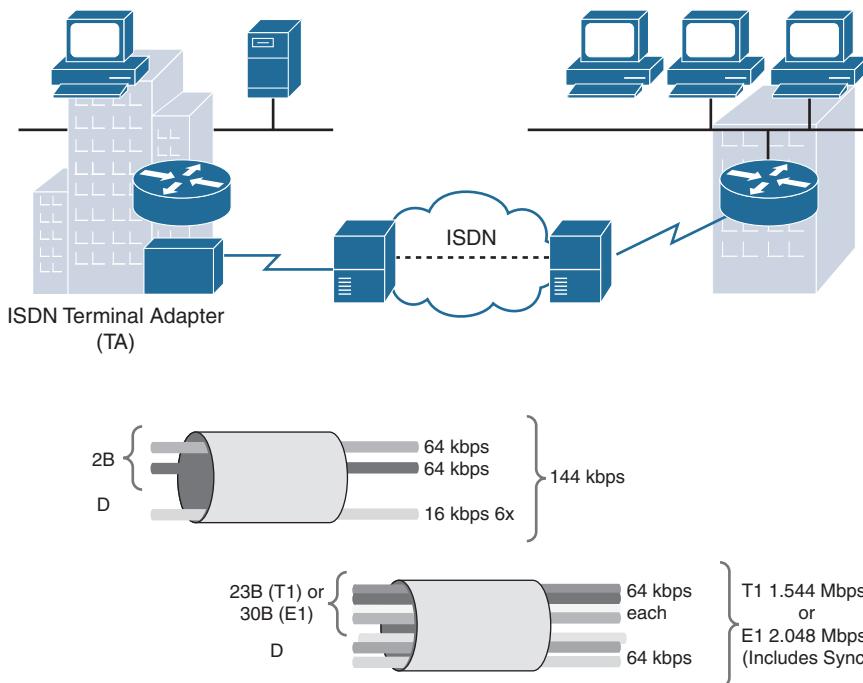Figure 7-4 ISDN Network Infrastructure and PRI/BRI Line Capacity

Packet-Switched Connection Options

The most common packet-switching technologies used in today's enterprise WANs include Metro Ethernet and MPLS. Legacy technologies include X.25 and ATM.

NOTE: Frame Relay is also a packet-switched technology that still has some market share. However, the CCNA exam no longer covers it.

Metro Ethernet

Metro Ethernet (MetroE) uses IP-aware Ethernet switches in the service provider's network cloud to offer enterprises converged voice, data, and video services at Ethernet speeds. Consider some benefits of Metro Ethernet:

- **Reduced expenses and administration:** Enables businesses to inexpensively connect numerous sites in a metropolitan area to each other and to the Internet without the need for expensive conversions to ATM or Frame Relay
- **Easy integration with existing networks:** Connects easily to existing Ethernet LANs
- **Enhanced business productivity:** Enables businesses to take advantage of productivity-enhancing IP applications that are difficult to implement on TDM or Frame Relay networks, such as hosted IP communications, VoIP, and streaming and broadcast video


MPLS

Multiprotocol Label Switching (MPLS) has the following characteristics:

- **Multiprotocol:** MPLS can carry any payload, including IPv4, IPv6, Ethernet, ATM, DSL, and Frame Relay traffic.
- **Labels:** MPLS uses labels inside the service provider's network to identify paths between distant routers instead of between endpoints.
- **Switching:** MPLS actually routes IPv4 and IPv6 packets, but everything else is switched.

As Figure 7-5 shows, MPLS supports a wide range of WAN technologies, including serial leased lines, Metro Ethernet, ATM, Frame Relay, and DSL (not shown).

Figure 7-5 Popular MPLS Connection Options

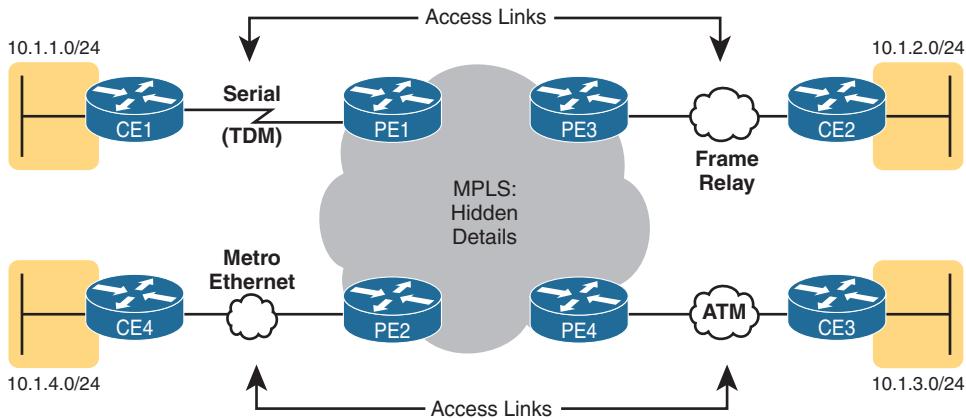

In Figure 7-5, CE refers to the customer edge routers. PE is the provider edge routers that add and remove labels.


NOTE: MPLS is primarily a service provider WAN technology.

Internet Connection Options

Broadband connection options typically are used to connect telecommuting employees to a corporate site over the Internet. These options include Digital Subscriber Line (DSL), cable, and wireless.

DSL


DSL technology, shown in Figure 7-6, is an always-on connection technology that uses existing twisted-pair telephone lines to transport high-bandwidth data and provides IP services to subscribers.

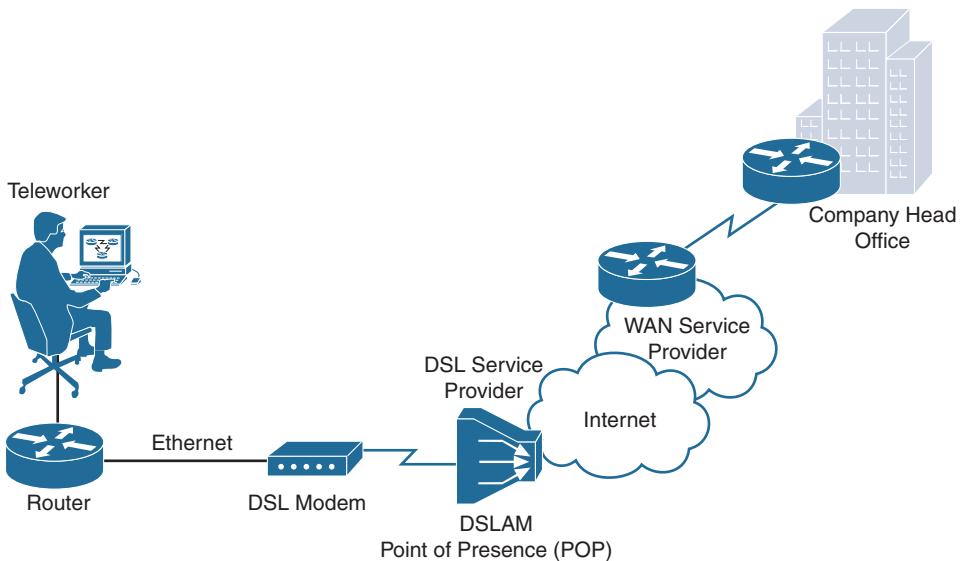Figure 7-6 Teleworker DSL Connection

Current DSL technologies use sophisticated coding and modulation techniques to achieve data rates of up to 8.192 Mbps. A variety of DSL types, standards, and emerging technologies exist. DSL is a popular choice for enterprise IT departments to support home workers.

Cable Modem

A cable modem provides an always-on connection and simple installation. Figure 7-7 shows how a subscriber connects a computer or LAN router to the cable modem, which translates the digital signals into the broadband frequencies used for transmitting on a cable television network.

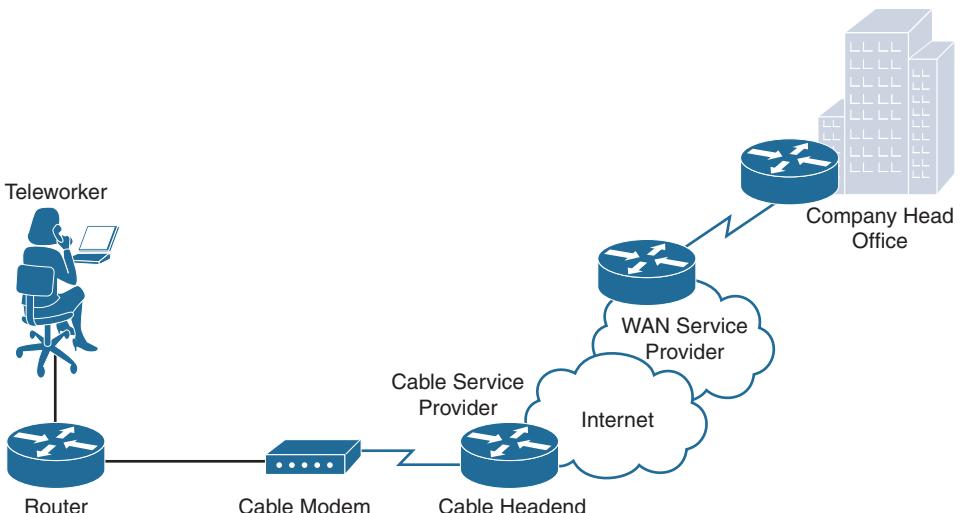Figure 7-7 Teleworker Cable Modem Connection

Wireless

In the past, the main limitation of wireless access was the need to be within range of a wireless router or a wireless modem with a wired connection to the Internet; however, the following wireless technologies enable users to connect to the Internet from almost any location:

- **Municipal Wi-Fi:** Many cities have begun setting up municipal wireless networks. Some of these networks provide high-speed Internet access for free or for substantially less than the price of other broadband services.
- **WiMAX:** Worldwide Interoperability for Microwave Access (WiMAX) is an IEEE 802.16 technology that is just beginning to come into use. It provides high-speed broadband service with wireless access and provides broad coverage similar to a cell phone network instead of through small Wi-Fi hotspots.
- **Satellite Internet:** This technology is typically used in rural areas where cable and DSL are unavailable.
- **Cellular service:** Cellular service is an option for connecting users and remote locations where no other WAN access technology is available. Common cellular access methods include 3G/4G (third generation and fourth generation) and Long-Term Evolution (LTE) cellular access.

Choosing a WAN Link Option

Table 7-2 compares the advantages and disadvantages of the various WAN connection options reviewed.

Table 7-2 Choosing a WAN Link Connection

Option	Description	Advantages	Disadvantages	Sample Protocols
Leased line	Point-to-point connection between two LANs.	Most secure	Expensive	PPP, HDLC, SDLC
Circuit switching	Dedicated circuit path created between endpoints. The best example is dialup connections.	Inexpensive	Call setup	PPP, ISDN
Packet switching	Devices transporting packets via a shared single point-to-point or point-to-multipoint link across a carrier internet-work. Variable-length packets are transmitted over PVCs or SVCs.	Highly efficient use of bandwidth	Shared media across link	Frame Relay, MetroE
Internet	Connectionless packet switching using the Internet as the WAN infrastructure. Uses network addressing to deliver packets. Because of security issues, VPN technology must be used.	Least expensive, globally available	Least secure	DSL, cable modem, wireless

VPN Technology

A virtual private network (VPN) is an encrypted connection between private networks over a public network such as the Internet. Instead of using a dedicated Layer 2 connection such as a leased line, a VPN uses virtual connections called VPN tunnels, which are routed through the Internet from the company's private network to the remote site or employee host.

VPN Benefits

Benefits of VPN include the following:


- **Cost savings:** Eliminates the need for expensive dedicated WAN links and modem banks
- **Security:** Uses advanced encryption and authentication protocols that protect data from unauthorized access
- **Scalability:** Can add large amounts of capacity without adding significant infrastructure
- **Compatibility with broadband technology:** Supported by broadband service providers, so mobile workers and telecommuters can take advantage of their home high-speed Internet service to access their corporate networks

Types of VPN Access

The following describes the types of VPN access methods:


- **Site-to-site VPNs:** Site-to-site VPNs connect entire networks to each other. For example, a site-to-site VPN can connect a branch office network to a company headquarters network, as in Figure 7-8. Each site is equipped with a VPN gateway, such as a router, firewall, VPN concentrator, or security appliance. In the figure, a remote branch office uses a site-to-site VPN to connect with the corporate head office.

Figure 7-8 Site-to-Site VPNs

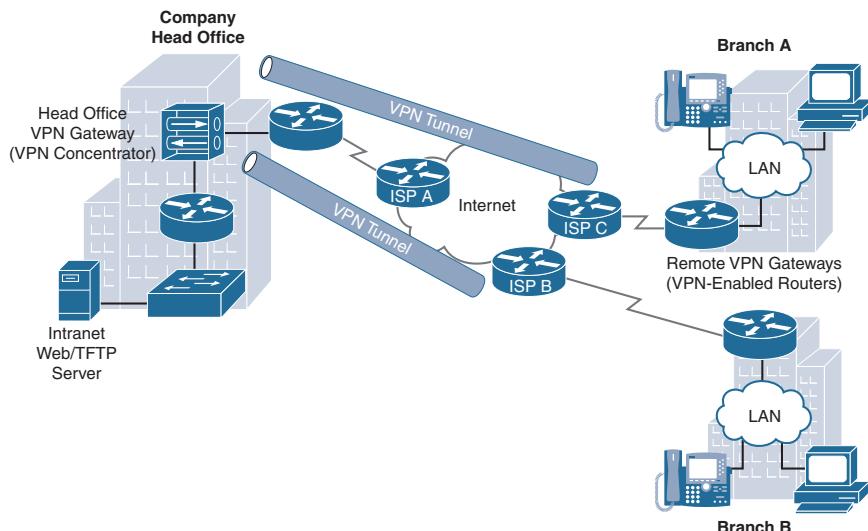


- **Remote-access VPNs:** Remote-access VPNs enable individual hosts, such as telecommuters, mobile users, and extranet consumers, to access a company network securely over the Internet, as in Figure 7-9. Each host typically has client software for a client-based VPN connection or uses a web browser for clientless VPN connection. Web-based clientless VPNs are also typically called *clientless Secure Sockets Layer (SSL) connections*. However, the VPN is actually established using Transport Layer Security (TLS). TLS is the newer version of SSL and is sometimes expressed as SSL/TLS.


Figure 7-9 Remote-Access VPNs

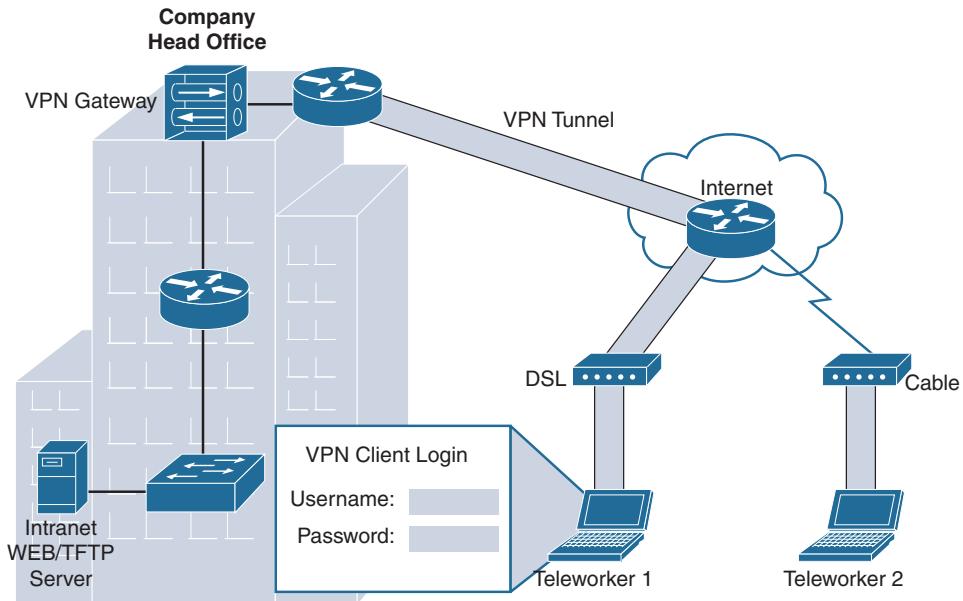

- **Generic Routing Encapsulation (GRE):** A standard IPsec VPN (non-GRE) can only create secure tunnels for unicast traffic. GRE is a nonsecure site-to-site VPN tunneling protocol that can support multicast and broadcast traffic needed for network layer protocols. However, GRE does not by default support encryption; therefore, it does not provide a secure VPN tunnel. To solve this problem, you can encapsulate routing protocol traffic by using a GRE packet and then encapsulate the GRE packet into an IPsec packet to forward it securely to the destination VPN gateway. The terms used to describe the encapsulation of GRE over IPsec tunnel are *passenger protocol* for the routing protocol, *carrier protocol* for GRE, and *transport protocol* for IPsec, as shown in Figure 7-10.

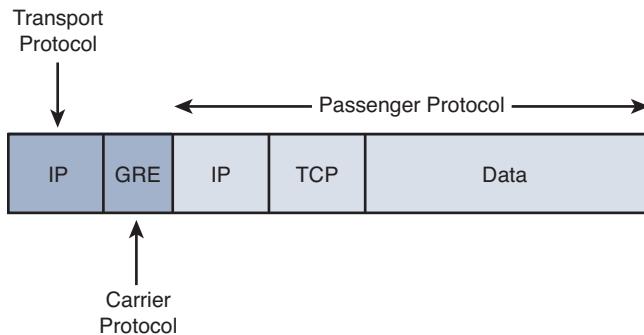Figure 7-10 Transport, Carrier, and Passenger Protocols

- **Dynamic Multipoint VPN (DMVPN):** DMVPN is a Cisco-proprietary solution for building many VPNs in an easy, dynamic, and scalable manner. DMVPN allows a network administrator to dynamically form hub-to-spoke tunnels and spoke-to-spoke tunnels, as in Figure 7-11. DMVPN simplifies the VPN tunnel configuration and provides a flexible option for connecting a central site with branch sites. It uses a hub-and-spoke configuration to establish a full mesh topology. Spoke sites establish secure VPN tunnels with the hub site. Each site is configured using Multipoint Generic Routing Encapsulation (mGRE). The mGRE tunnel interface allows a single GRE interface to dynamically support multiple IPsec tunnels.

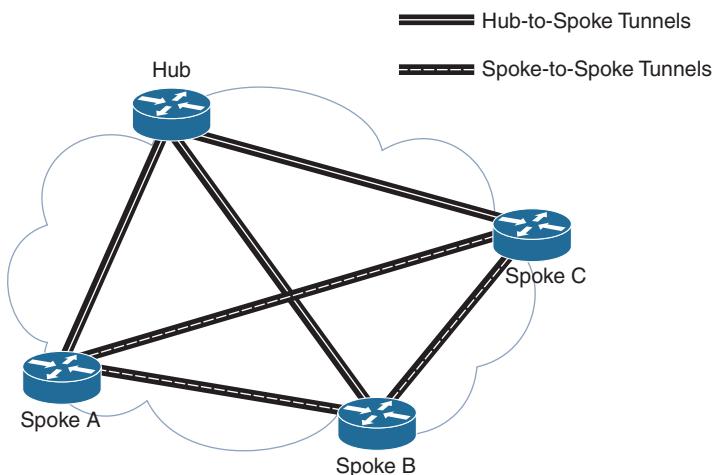Figure 7-11 DMVPN Sample Topology


DMVPN uses the following technologies:

- **Next Hop Resolution Protocol (NHRP):** Maps public IP addresses for all tunnel spokes
- **IPsec encryption:** Provides the security to transport private information over public networks
- **mGRE:** Allows a single interface to support multiple IPsec tunnels
- **IPsec Virtual Tunnel Interface (VTI):** Like DMVPN, VTI simplifies the configuration process required to support multiple sites and remote access. IPsec VTI is capable of sending and receiving both IP unicast and multicast encrypted traffic. Therefore, routing protocols are automatically supported without the need to configure GRE tunnels.
- **Service provider MPLS VPNs:** MPLS can provide clients with managed VPN solutions; therefore, securing traffic between client sites is the responsibility of the service provider. Two types of MPLS VPN solutions are supported by service providers:
 - **Layer 3 MPLS VPN:** The service provider participates in customer routing, redistributing the routes through the MPLS network to the customer's remote locations.
 - **Layer 2 MPLS VPN:** The service provider is not involved in the customer routing. Instead, the provider deploys Virtual Private LAN Service (VPLS) to emulate an Ethernet multiaccess LAN segment over the MPLS network. No routing is involved. The customer's routers effectively belong to the same multiaccess network.

VPN Components

Figure 7-12 illustrates a typical VPN topology. Components required to establish this VPN include the following:

- An existing enterprise network with servers and workstations
- A connection to the Internet
- VPN gateways, such as routers, firewalls, VPN concentrators, and Adaptive Security Appliances (ASAs), that act as endpoints to establish, manage, and control VPN connections
- Appropriate software to create and manage VPN tunnels

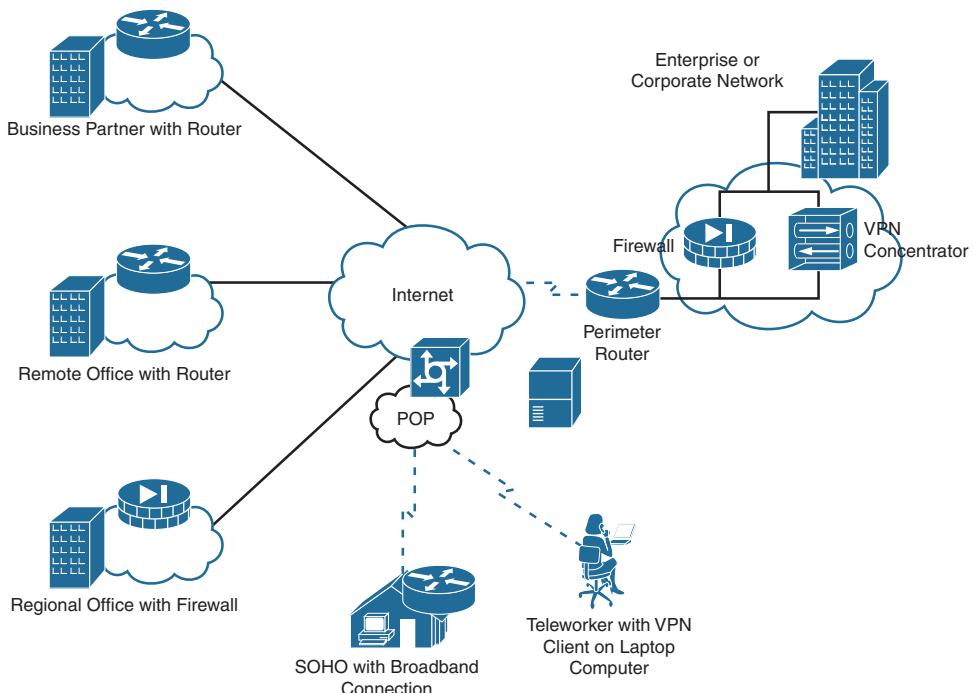Figure 7-12 VPN Components

Establishing Secure VPN Connections

VPNs secure data by encapsulating and encrypting it. With regard to VPNs, encapsulation and encryption are defined as follows:


- Encapsulation is also called *tunneling* because encapsulation transmits data transparently from source network to destination network through a shared network infrastructure.
- Encryption codes data into a different format by using a secret key, which is then used on the other side of the connection for decryption.

VPN Tunneling

Tunneling uses three classes of protocols:

- **Carrier protocol:** The protocol over which information travels, such as Frame Relay, PPP, or MPLS
- **Encapsulating protocol:** The protocol that is wrapped around the original data, such as GRE, IPsec, L2F, PPTP, or L2TP
- **Passenger protocol:** The protocol over which the original data was carried, such as IPX, AppleTalk, IPv4, or IPv6

Figure 7-13 illustrates an email message traveling through the Internet over a VPN connection.

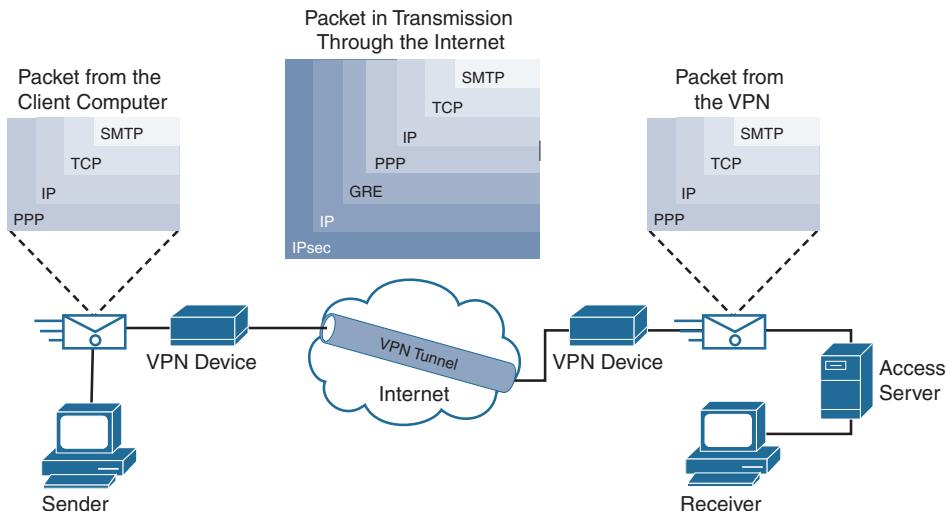Figure 7-13 Packet Encapsulation in a VPN Tunnel

VPN Encryption Algorithms

The degree of security provided by any encryption algorithm depends on the key's length. Some of the most common encryption algorithms and the lengths of the keys they use are as follows:

- **Data Encryption Standard (DES) algorithm:** Uses a 56-bit key and ensures high-performance encryption. DES is a symmetric key cryptosystem.
- **Triple DES (3DES) algorithm:** A newer variant of DES that encrypts with one key, decrypts with a different key, and then encrypts a final time with another key.
- **Advanced Encryption Standard (AES):** Provides stronger security than DES and is computationally more efficient than 3DES. AES offers three key lengths: 128-, 192-, and 256-bit keys.
- **Rivest, Shamir, and Adleman (RSA):** An asymmetric key cryptosystem. The keys use a bit length of 512, 768, 1024, or larger.

With symmetric encryption, the encryption key and decryption key are the same. With asymmetric encryption, they are different.

Hashes


VPNs use a keyed hashed message authentication code (HMAC) data-integrity algorithm to guarantee a message's integrity and authenticity without any additional mechanisms.

The cryptographic strength of the HMAC depends on the cryptographic strength of the underlying hash function, the key's size and quality, and the size of the hash output length, in bits. There are two common HMAC algorithms:

- **Message Digest 5 (MD5):** Uses a 128-bit shared secret key
- **Secure Hash Algorithm 1 (SHA-1):** Uses a 160-bit secret key

Figure 7-14 shows an example using MD5 as the HMAC algorithm.

Figure 7-14 Creating and Verifying a Message Digest

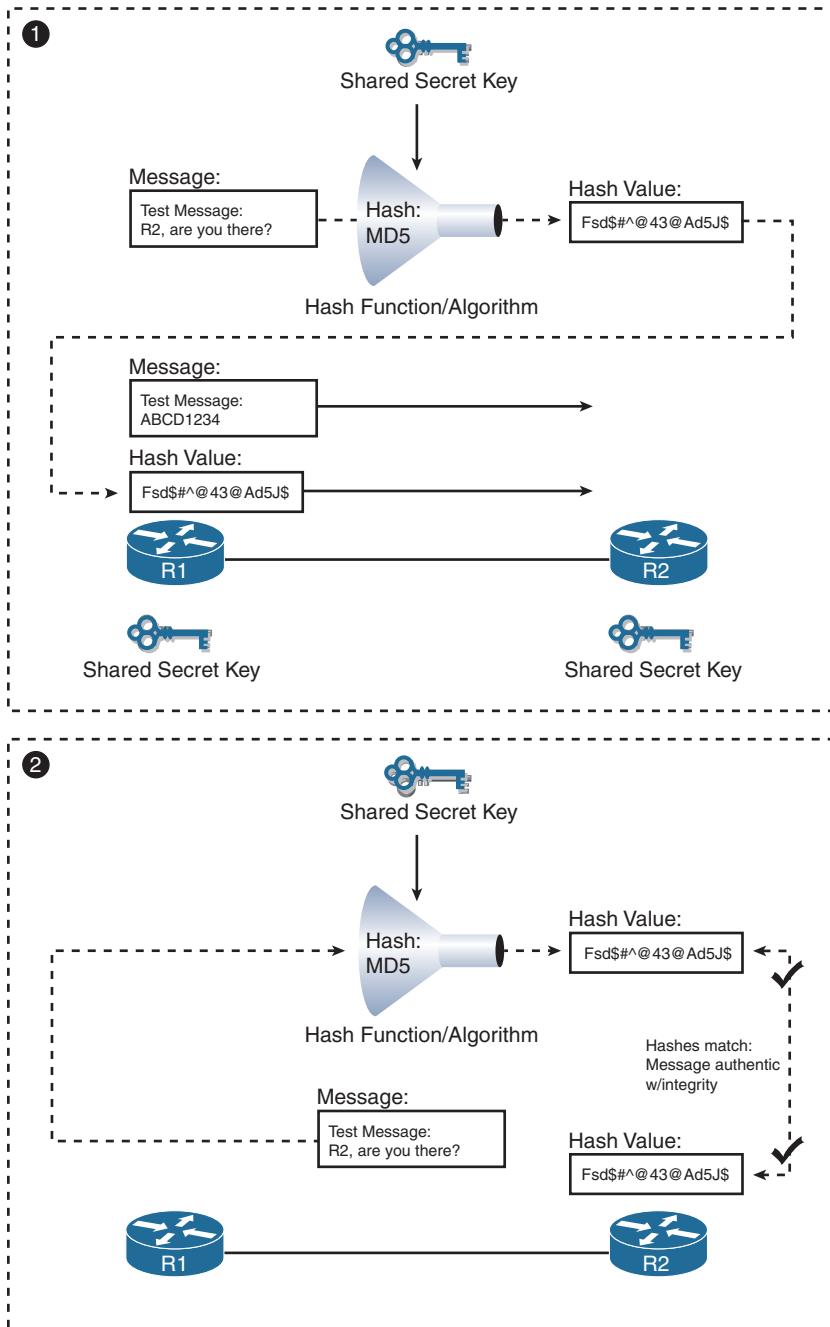

An HMAC has two parameters: a message input and a shared secret key known only to the message originator and intended recipients. In Figure 7-14, both R1 and R2 know the shared secret key. The process in Figure 7-14 uses the following steps:

- Step 1.** R1 uses MD5 to perform the hashing function, which outputs a hash value. This hash value is then appended to the original message and sent to R2.
- Step 2.** R2 removes the hash value from the original message, runs the same hash operation, and then compares its hash value with the hash value sent by R1. If the two hashes match, data integrity has not been compromised.

VPN Authentication

The device on the other end of the VPN tunnel must be authenticated before the communication path is considered secure. The two peer authentication methods are as follows:

- **Pre-Shared Key (PSK):** A secret key is shared between the two parties using a secure channel before it needs to be used.
- **RSA signature:** This method uses the exchange of digital certificates to authenticate the peers.

IPsec Security Protocols

Both IPsec and SSL VPN technologies offer access to virtually any network application or resource. However, when security is an issue, IPsec is the superior choice. Table 7-3 compares IPsec and SSL remote access deployments.

Table 7-3 IPsec and SSL for Remote Access

Feature	IPsec	SSL
Applications supported	Extensive—All IP-based applications are supported.	Limited—Only web-based applications and file sharing are supported.
Authentication strength	Strong—Uses two-way authentication with shared keys or digital certificates.	Moderate—Using one-way or two-way authentication.
Encryption strength	Strong—Uses key lengths from 56 bits to 256 bits.	Moderate to strong—With key lengths from 40 bits to 256 bits.
Connection complexity	Medium—Requires that a VPN client be pre-installed on a host.	Low—Requires a web browser only on a host.
Connection option	Limited—Only specific devices with specific configurations can connect.	Extensive—Any device with a web browser can connect.

IPsec spells out the messaging necessary to secure VPN communications but relies on existing algorithms. The two main IPsec framework protocols are as follows:

- **Authentication Header (AH):** Used when confidentiality is not required or permitted. AH provides data authentication and integrity for IP packets passed between two systems. It verifies the originators of any messages and that any message passed has not been modified during transit. AH does not provide data confidentiality (encryption) of packets. Used alone, the AH protocol provides weak protection. Consequently, it is used with the ESP protocol to provide data encryption and tamper-aware security features.


- **Encapsulating Security Payload (ESP):** Provides confidentiality and authentication by encrypting the IP packet. Although both encryption and authentication are optional in ESP, at a minimum, one of them must be selected.

IPsec relies on existing algorithms to implement encryption, authentication, and key exchange. Figure 7-15 shows how IPsec is structured.

IPsec provides the framework, and the administrator chooses the algorithms used to implement the security services within that framework. As Figure 7-15 illustrates, the administrator must fill the four IPsec framework squares:

- Choose an IPsec protocol.
- Choose the encryption algorithm that is appropriate for the desired level of security.
- Choose an authentication algorithm to provide data integrity.
- The last square is the Diffie-Hellman (DH) algorithm group, which establishes the sharing of key information between peers. Choose which group to use: DH1, DH2, or DH5.

Figure 7-15 IPsec Framework

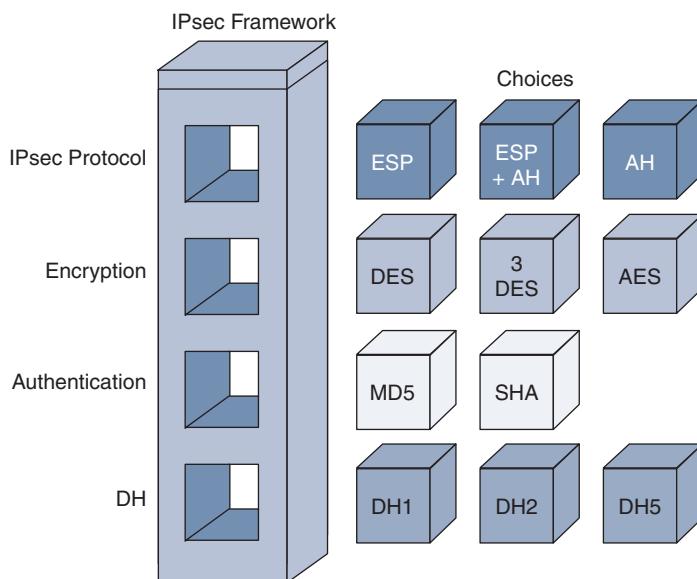

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 3	7
	8
CCNA 200-301 Official Cert Guide, Volume 2	14

QoS

CCNA 200-301 Exam Topics

- Explain the forwarding per-hop behavior (PHB) for QoS such as classification, marking, queuing, congestion, policing, shaping

Key Topics

Today, we review quality of service (QoS), which refers to the tools and techniques network administrators can use to prioritize traffic on a network.

QoS

Normal default operation for switches and routers is to process frames and packets in the order in which they are received. This first-in, first-out (FIFO) queueing mechanism does not discriminate between traffic types.

QoS tools are used to classify traffic types based on the following four characteristics:

- **Latency (delay):** Latency, or delay, is the amount of time it takes for data to be sent to the receiver. QoS tools can reduce the delay for time-sensitive packets, such as voice and video.
- **Jitter:** Jitter is the variance in the delay of packets. QoS tools can even out the delay of packets to improve end-user experience.
- **Loss:** Loss refers to the number of lost messages, usually as a percentage of the packets sent. QoS tools reduce packet loss, especially for time-sensitive traffic.
- **Bandwidth:** Bandwidth is a measure of the amount of data an interface can send every second. QoS tools can manage which traffic type gets to use the bandwidth next and how much of the bandwidth each type of traffic gets over time.

Figure 6-1 lists the three major traffic types. For voice and video, the minimum traffic characteristic values are shown.

Figure 6-1 Characteristics of Major Traffic Types

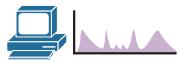
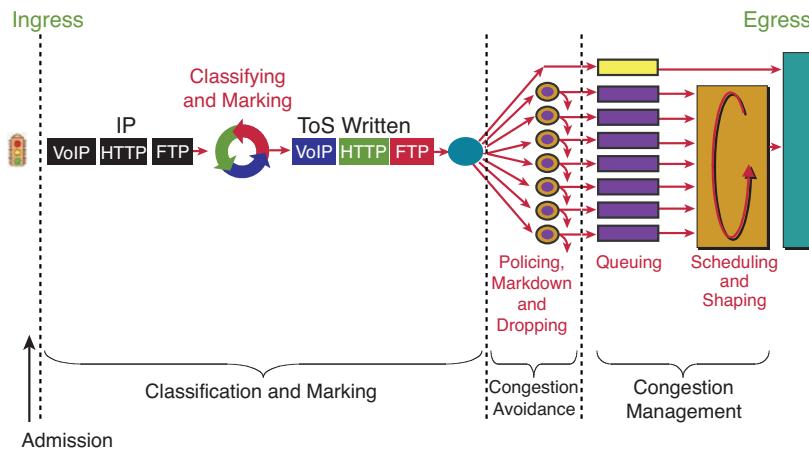
Voice	Video	Data
 <ul style="list-style-type: none"> Smooth Benign Drop sensitive Delay sensitive UDP priority 	 <ul style="list-style-type: none"> Bursty Greedy Drop sensitive Delay sensitive UDP priority 	 <ul style="list-style-type: none"> Smooth/bursty Benign/greedy Drop insensitive Delay insensitive TCP retransmits
One-Way Requirements	One-Way Requirements	
<ul style="list-style-type: none"> Latency ≤ 150 ms Jitter ≤ 30 ms Loss ≤ 1% Bandwidth (30–128 kbps) 	<ul style="list-style-type: none"> Latency ≤ 200–400 ms Jitter ≤ 30–50 ms Loss ≤ 0.1–1% Bandwidth (384 kbps–20+Mbps) 	

Figure 6-2 shows the sequence of QoS events as traffic is forwarded out an interface.

Figure 6-2 Overview of QoS Tools

QoS tools shown in Figure 6-2 include the following:

- Classification and marking:** QoS tools monitor traffic flows and classify packets based on the header contents. Messages are then marked by changing bits in the header.
- Congestion avoidance:** When traffic exceeds available network resources, some traffic might be selectively dropped, delayed, or re-marked to avoid congestion.
- Congestion management:** QoS tools manage the scheduling and shaping of traffic while packets wait their turn in a queue to exit the interface.

Classification and Marking

Classification refers to the process of matching fields in the headers to take some type of QoS action on the packet. These fields can include all the normal fields filtered by ACLs, as well as the Type of Service (ToS) field in an IPv4 packet or Traffic Class field in an IPv6 packet.

Marking refers to the process of changing bit values in the ToS or Traffic Class field. The contents of these two fields are identical, as Figure 6-3 shows.

Figure 6-3 The ToS and Traffic Class Fields in IPv4 and IPv6

IPv4 Header

Version	IHL	Type of Service	Total Length	
Identification		Flags Fragment Offset		
TTL	Protocol	Header Checksum		
Source Address				
Destination Address				
Options		Padding		

IPv6 Header

Version	Traffic Class	Flow Label	
Payload Length		Next Header	Hop Limit
Source Address			
Destination Address			


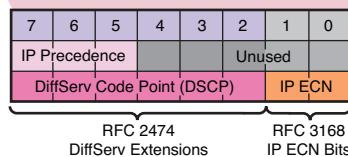


Figure 6-3 highlights the Differentiated Services Code Point (DSCP) bits, which are the core of the Differentiated Services (DiffServ) model for QoS. QoS tools can use the 2 bits allotted for IP Explicit Congestion Notification (ECN) to inform downstream routers of congestion in the traffic flow.


DSCP and IPP

As standardized in RFC 2474, the 8 DSCP bits provide 64 different classifications that QoS can use. This is a vast improvement over the eight classifications allotted for the 3 bits in the previous IP Precedence (IPP) field (RFC 791). For backward compatibility, the DSCP bits include the Class Selector (CS) values that are designated to match the IPP bits, as in Figure 6-4.

Figure 6-4 The Class Selector Values

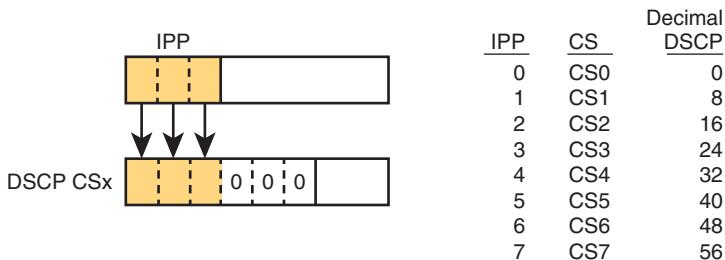

For Layer 2 trunk links, the third byte of the 4-byte 802.1Q header is reserved for Class of Service (CoS), and QoS tools can use it to mark frames. However, this field exists only as long as the frame is traversing trunk links, as Figure 6-5 shows. To continue the same level of service as traffic is routed on Layer 3, the ToS field must be marked.

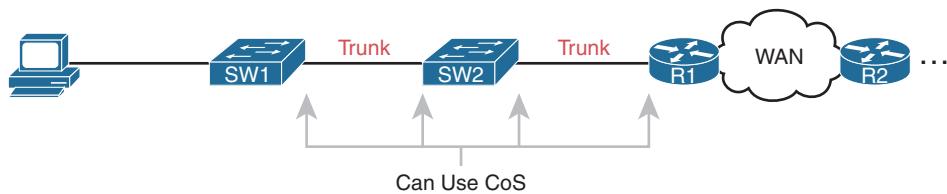Figure 6-5 CoS Marking Example

Additional fields that can be marked for QoS include the Traffic Identifier (TID) field in the 802.11 frame and the EXP field in MPLS. Table 6-1 lists all the QoS fields.

Table 6-1 QoS Marking Fields


Field	Name Header(s)	Length (bits)	Where Used
DSCP	IPv4, IPv6	6	End-to-end packet
IPP	IPv4, IPv6	3	End-to-end packet
CoS	802.1Q	3	Over VLAN trunk
TID	802.11	3	Over Wi-Fi
EXP	MPLS Label	3	Over MPLS WAN

NOTE: The MPLS EXP field was renamed the Traffic Class field in RFC 5462. However, EXP is still commonly used. The EXP name comes from the designation “experimental use.”

EF and AF

Expedited Forwarding (EF) is a single DSCP decimal value of 46 that is suggested for use with packets that require low latency, low jitter, and low loss. QoS implementations typically use EF to mark voice packets.

Assured Forwarding (AF), specified in RFC 2597, defines a set of 12 DSCP values that are arranged in a matrix, as in Figure 6-6.

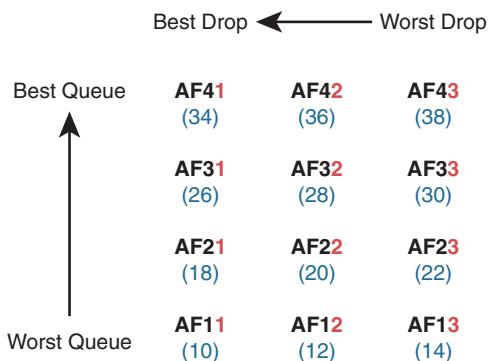Figure 6-6 AF DSCP Values


The four rows in Figure 6-6 show the queue priorities. The three columns show the drop priority. The AF names follow the format AFXY, where X refers to the queue and Y refers to the drop priority.

Congestion Management

Congestion management refers to the QoS tools used to manage queues as packets wait to exit an interface. Most networking devices can have a queuing system that can classify packets into multiple queues. A scheduler then decides which message to take next when the interface becomes available.


A popular tool is Class-Based Weighted Fair Queueing (CBWFQ), which assigns classes of traffic to queues and guarantees a minimum bandwidth for a queue. The scheduler then uses a round-robin algorithm to cycle through the queues in order, as in Figure 6-7.

Figure 6-7 CBWFQ Round-Robin Scheduling

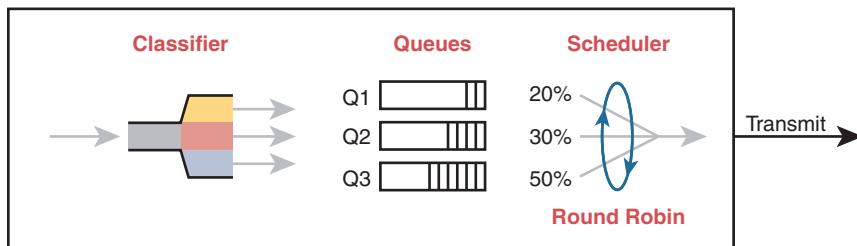

However, CBWFQ alone does not satisfy the needs of the most time-sensitive traffic type during periods of heavy bandwidth congestion. Each voice call needs between 30 and 320 kbps, maximum delay of 150 ms, maximum jitter of 30 ms, and less than 1% packet loss. The solution is to add Low Latency Queueing (LLQ) to CBWFQ. The scheduler always takes the next voice packet from the LLQ, as Figure 6-8 shows.

Figure 6-8 Low Latency Queueing

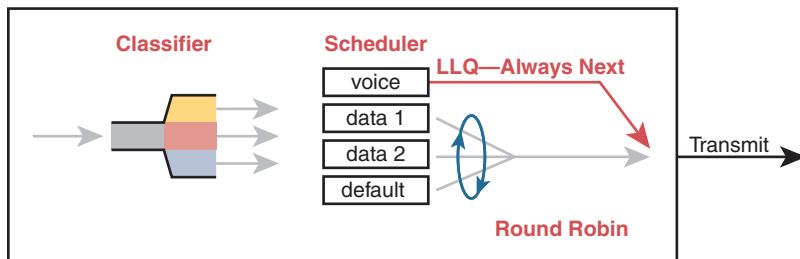


Policing, Shaping, and TCP Discards

Two tools that can help manage and avoid congestion on heavily utilized links are policing and shaping. Although these tools are not commonly used throughout the enterprise, they are particularly helpful at the WAN edge. Both tools attempt to keep the bit rate at or below a specified speed. Policers drop packets, and shapers delay packets by placing them in a queue.

Policing makes sense at the WAN edge. For example, consider a Metro Ethernet WAN link that is contracted to allow no more than 200 Mbps, as in Figure 6-9.

Figure 6-9 WAN Edge with a CIR Below Link Speed

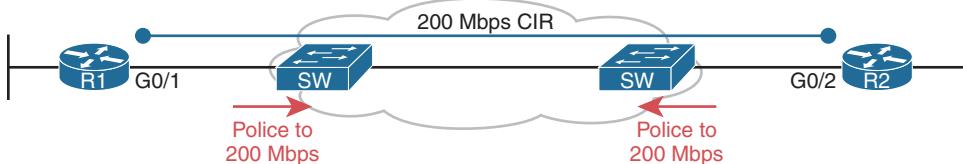


The service provider (SP) uses policing to match the Committed Information Rate (CIR). If the customer exceeds the 200-Mbps CIR, the SP can drop the excess packets or remark the excess packets but still allow them through. Later, the excess packets can be discarded if the SP's network experiences congestion. Policing features include the following:

- Measure traffic over time and compare to a configured policing rate
- Allow for bursting traffic during slow times
- Discard excess messages or remark for discard later if congestion occurs downstream

On the customer side of the link in Figure 6-9, the network administrator can use a shaper to slow traffic to match the 200-Mbps CIR. The shaper slows traffic by queuing packets and then scheduling packets based on the shaping rate, as Figure 6-10 shows.

Figure 6-10 Shaping with LLQ and CBWFQ

Router Internals

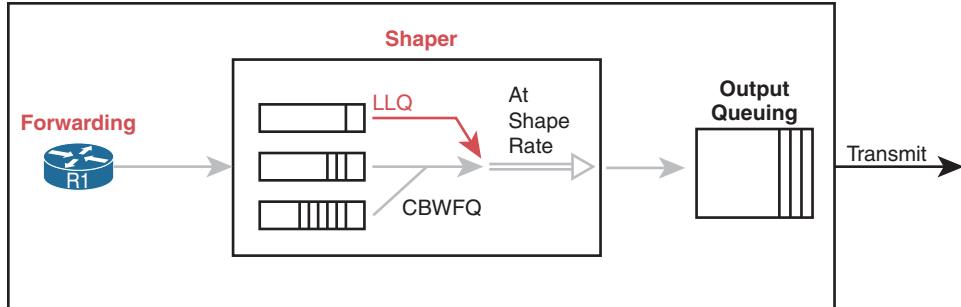

Shaping cannot slow the physical speed of an interface. Instead, it sends and waits. For example, with a 200-Mbps CIR and a 1000-Mbps interface, the shaper sends traffic at 1000 Mbps 20% of the time. The other 80% of the time, the shaper is waiting.

This send-wait tactic can adversely impact time-sensitive voice and video traffic. Therefore, it is recommended that you set the time interval to 10 ms. Then the shaper will send 1000 Mbps for 2 ms and wait for 8 ms. This ensures that a voice packet will not have to wait more than 10 ms before being sent, which is well below the 150 ms maximum delay requirement.


The key features of shapers follow:

- Measure traffic over time and compare it to a configured shaping rate
- Allow for bursting traffic during slow times
- Slow packets by queuing them and, over time, releasing them from the queue at the shaping rate

QoS and TCP

Without congestion-avoidance tools, tail drop can occur (see Figure 6-11).

Figure 6-11 Tail Drop Example

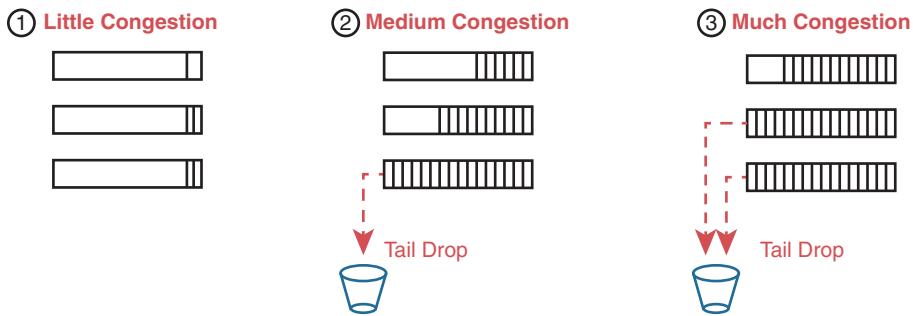


As the lower queues fill up, the packets received last are dropped.

TCP's connection-oriented services help QoS tools minimize tail drop. Recall that TCP uses a windowing process between sender and receiver to dynamically change the amount of data that is sent before an acknowledgment must be received. QoS tools can exploit this windowing feature by discarding some TCP segments before the queues fill. This forces the TCP connections to slow, reduces congestion, and avoids tail drop.

QoS tools monitor the depth of the queues over time. Configured thresholds specify what percentage of TCP packets should be dropped as the queue fills, as in Figure 6-12.

Figure 6-12 Queue Thresholds for Discarding TCP Packets

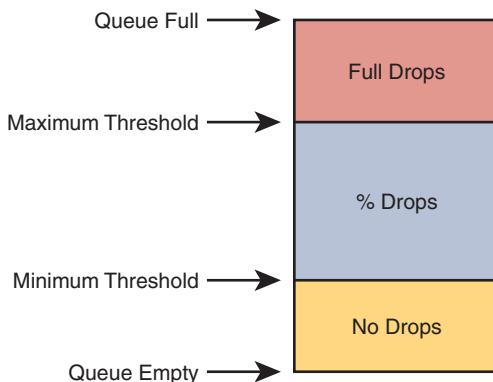

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	9
CCNA 200-301 Official Cert Guide, Volume 2	11

CDP and LLDP

CCNA 200-301 Exam Topics

- Configure and verify Layer 2 discovery protocols (Cisco Discovery Protocol and LLDP).

Key Topics

Cisco Discovery Protocol (CDP) is a Cisco-proprietary Layer 2 protocol used to gather information about Cisco devices on the same data link. Cisco devices also support Link Layer Discovery Protocol (LLDP), which is a standards-based neighbor discovery protocol similar to CDP. Today we review the configuration and verification of CDP and LLDP.

CDP Overview

As Figure 5-1 shows, CDP sends advertisements to directly connected devices.

Figure 5-1 CDP Sends Advertisements Between Directly Connected Devices



CDP runs on all Cisco-manufactured equipment. It gathers the protocol addresses of neighboring devices and discovers the platforms of those devices. CDP runs over the data link layer only. This means that two systems that support different Layer 3 protocols can learn about each other. Table 5-1 summarizes the CDP defaults.

Table 5-1 CDP Defaults

Parameter	Default
CDP	Enabled globally and on all interfaces
CDP version	Version 2
CDP timer	60 seconds
CDP holdtime	180 seconds

CDP can assist in network discovery and troubleshooting. CDP advertises the following helpful information:

- Device ID:** The hostname of the neighboring device
- Addresses:** The IPv4 and IPv6 addresses used by the device

- **Port ID:** The name of the local port or the remote port
- **Capabilities:** Whether the device is a router or a switch or has other capabilities
- **Version:** The version of CDP running on the device
- **Platform:** The hardware platform of the device, such as a Cisco 1941 router or 2960 switch

CDP Configuration

CDP is enabled on a device for all interfaces, as Example 5-1 shows.

Example 5-1 CDP Running on All Interfaces

```
Router# show cdp interface
Embedded-Service-Engine0/0 is administratively down, line protocol is down
  Encapsulation ARPA
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
GigabitEthernet0/0 is administratively down, line protocol is down
  Encapsulation ARPA
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
GigabitEthernet0/1 is up, line protocol is up
  Encapsulation ARPA
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
Serial0/0/0 is administratively down, line protocol is down
  Encapsulation HDLC
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
Serial0/0/1 is administratively down, line protocol is down
  Encapsulation HDLC
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds

  cdp enabled interfaces : 5
  interfaces up          : 1
  interfaces down        : 4
Router# show ip interface brief
Interface IP-Address OK? Method Status Protocol
Embedded-Service-Engine0/0 unassigned YES unset administratively down down
GigabitEthernet0/0 unassigned YES unset administratively down down
GigabitEthernet0/1 unassigned YES unset up up
Serial0/0/0 unassigned YES unset administratively down down
Serial0/0/1 unassigned YES unset administratively down down
Router#
```

Notice in the output in Example 5-1 that an interface does not have to be configured with a Layer 3 address to send or receive CDP advertisements. The interface only needs to be activated with the **no shutdown** command. In Example 5-2, the switch connected to the router in Example 5-1 has gathered CDP information about the router. The two devices are communicating across the Layer 2 link without any Layer 3 addressing.

Example 5-2 Sending Layer 2 Messages

```
Switch# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone,
                  D - Remote, C - CVTA, M - Two-port Mac Relay

Device ID  Local  Intrfce   Holdtme   Capability  Platform  Port ID
Router     Fas 0/5      155        R B S I    CISCO1941 Gig 0/1
Switch#
```

To disable CDP on the device, use the CDP global configuration command **no cdp run**:

```
Router(config)# no cdp run
```

Verify that the device is no longer running CDP by using the **show cdp** command:

```
Router# show cdp
% CDP is not enabled
Router#
```

After waiting for the 180-second holdtime to expire on the switch, you can verify that the switch is no longer receiving information about the router (see Example 5-3).

Example 5-3 Verifying That a Switch Has No CDP Neighbors

```
Switch# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone,
                  D - Remote, C - CVTA, M - Two-port Mac Relay

Device ID          Local  Intrfce  Holdtme  Capability Platform Port ID
Switch#
```

You can also disable CDP on a per-interface basis. This configuration option is a security best practice for interfaces that are connected to untrusted networks. To disable CDP on an interface, use the **no cdp enable** command (see Example 5-4).

Example 5-4 Disabling CDP on an Interface

```

Router(config)# interface s0/0/0
Router(config-if)# no cdp enable
Router(config-if)# end
Router# show cdp interface
Embedded-Service-Engine0/0 is administratively down, line protocol is down
  Encapsulation ARPA
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
GigabitEthernet0/0 is administratively down, line protocol is down
  Encapsulation ARPA
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
GigabitEthernet0/1 is up, line protocol is up
  Encapsulation ARPA
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
Serial0/0/1 is administratively down, line protocol is down
  Encapsulation HDLC
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds

  cdp enabled interfaces : 4
  interfaces up          : 1
  interfaces down        : 3
Router#

```

Notice in the output of the **show cdp interface** command that the Serial 0/0/0 interface is no longer listed, as it was in Example 5-1.

To adjust the time for CDP advertisements, use the **cdp timer** global configuration command:

```
Router(config)# cdp timer seconds
```

The range is 5 to 254 seconds, and the default is 60 seconds. If you modify the CDP timer, you should also modify the holdtime with the **cdp holdtime** global configuration command:

```
Router(config)# cdp holdtime seconds
```

The range is from 10 to 255, and the default is 180 seconds.

CDP Verification

You have already seen examples of **show cdp**, **show cdp neighbors**, and **show cdp interface**. The **show cdp neighbors detail** command lists all the information CDP gathers about directly connected neighbors. In Example 5-5, switch S3 knows a variety of information about R1, including the IP address and Cisco IOS version running on the router.

Example 5-5 CDP Detailed Information

```
S3# show cdp neighbors detail
-----
Device ID: R3.31days.com
Entry address(es):
    IP address: 192.168.1.1
Platform: Cisco CISCO1941/K9, Capabilities: Router Source-Route-Bridge Switch
IGMP
Interface: FastEthernet0/5, Port ID (outgoing port): GigabitEthernet0/1
Holdtime : 162 sec

Version :
Cisco IOS Software, C1900 Software (C1900-UNIVERSALK9-M), Version 15.4(3)M2,
RELEASE SOFTWARE (fc2)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2015 by Cisco Systems, Inc.
Compiled Fri 06-Feb-15 17:01 by prod_rel_team

advertisement version: 2
Duplex: full
Power Available TLV:

    Power request id: 0, Power management id: 0, Power available: 0, Power
    management level: 0
Management address(es):
    IP address: 192.168.1.1

S3#
```

NOTE: The Device ID value shows R3.31days.com because R3 is configured with the **ip domain-name** command and SSH remote access.

When documentation is lacking or incomplete, you can use CDP to gather information about devices and discover the network topology. Example 5-6 shows how to remotely access R3 and discover that R2 is connected to R3.

Example 5-6 Discovering More Devices

```
S3# ssh -l admin 192.168.1.1
Password:
R3> show cdp neighbors detail
-----
Device ID: S3.31days.com
Entry address(es):
    IP address: 192.168.1.2
Platform: cisco WS-C2960-24TT-L, Capabilities: Switch IGMP
Interface: GigabitEthernet0/1, Port ID (outgoing port): FastEthernet0/5
Holdtime : 126 sec

Version :
```

```

Cisco IOS Software, C2960 Software (C2960-LANBASEK9-M), Version 15.0(2)SE7,
 RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2014 by Cisco Systems, Inc.
Compiled Thu 23-Oct-14 14:49 by prod_rel_team

advertisement version: 2
Protocol Hello: OUI=0x00000C, Protocol ID=0x0112; payload len=27, value=00000000FF
    FFFFFF010221FF000000000000CD996E87400FF0000
VTP Management Domain: ''
Native VLAN: 1
Duplex: full
Management address(es):
    IP address: 192.168.1.2

-----
Device ID: R2.31days.com
Entry address(es):
    IP address: 192.168.10.1
Platform: Cisco CISCO1941/K9, Capabilities: Router Source-Route-Bridge Switch IGMP
Interface: Serial0/0/1, Port ID (outgoing port): Serial0/0/1
Holdtime : 148 sec
Version :
Cisco IOS Software, C1900 Software (C1900-UNIVERSALK9-M), Version 15.4(3)M2,
 RELEASE SOFTWARE (fc2)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2015 by Cisco Systems, Inc.
Compiled Fri 06-Feb-15 17:01 by prod_rel_team

advertisement version: 2
Management address(es):
    IP address: 192.168.10.1

Total cdp entries displayed : 2
R3>

```

You can now access router R2, with authentication, and continue discovering the network.

As Example 5-7 shows, you use the **show cdp traffic** command to verify how many CDP packets a device has sent and received.

Example 5-7 Verifying the Number of CDP Packets

```

R3# show cdp traffic
CDP counters :
    Total packets output: 758, Input: 724
    Hdr syntax: 0, Chksum error: 0, Encaps failed: 1
    No memory: 0, Invalid packet: 0,
    CDP version 1 advertisements output: 0, Input: 0
    CDP version 2 advertisements output: 758, Input: 724
R3#

```

LLDP Overview

In addition to supporting CDP, Cisco devices also support LLDP, which is a vendor-neutral open standard (IEEE 802.1AB). LLDP works with routers, switches, and wireless LAN access points. As with CDP, LLDP is a neighbor discovery protocol that is used for network devices to advertise information about themselves to other devices on the network. Also as with CDP, LLDP enables two systems running different network layer protocols to learn about each other.

Table 5-2 summarizes the CDP defaults.

Table 5-2 LLDP Defaults

Parameter	Default
LLDP	Disabled globally and on all interfaces
LLDP timer	30 seconds
LLDP holdtime	120 seconds
LLDP reinitialization delay	2 seconds

NOTE: The reinitialization delay is the number of seconds the device waits after LLDP is disabled on a port before it accepts a configuration to reenable LLDP.

LLDP Configuration

To enable LLDP globally, enter the **lldp run** command:

```
Router(config)# lldp run
```

When enabled globally, LLDP is enabled on all interfaces. To disable LLDP on an interface, use the **no lldp transmit** and **no lldp receive** commands:

```
Router(config)# interface interface-id
Router(config-if)# no lldp transmit
Router(config-if)# no lldp receive
Router(config-if)# end
Router#
```

To adjust the time for LLDP advertisements, use the **lldp timer** global configuration command:

```
Router(config)# lldp timer seconds
```

The range is 5 to 65534 seconds, and the default is 30 seconds. If you modify the CDP timer, you should also modify the holdtime with the **cdp holdtime** global configuration command:

```
Router(config)# lldp holdtime seconds
```

The range is from 0 to 65535, and the default is 120 seconds. You can also modify the delay time for LLDP to initialize on any interface with the **lldp reinit** global configuration command:

```
Router(config)# lldp reinit seconds
```

The range is 2 to 5 seconds, and the default is 2 seconds.

For the topology in Figure 5-2, the policy is that LLDP should have the same timers as CDP. Routers should not transmit LLDP messages out LAN interfaces.

Figure 5-2 LLDP Configuration Topology



Example 5-8 shows the commands to implement the LLDP policy.

Example 5-8 LLDP Configuration

```
R1(config)# lldp run
R1(config)# lldp timer 60
R1(config)# lldp holdtime 180
R1(config)# interface g0/1
R1(config-if)# no lldp transmit
R1(config-if)# end
R1#
S1(config)# lldp run
S1(config)# lldp timer 60
S1(config)# lldp holdtime 180
S1(config)# end
S1#
```

LLDP Verification

The LLDP verification commands are similar to those in CDP. Simply replace the keyword **cdp** with **lldp**. Example 5-9 shows output from the LLDP verification commands.

Example 5-9 LLDP Verification Commands

```
R1# show lldp
Global LLDP Information:
  Status: ACTIVE
  LLDP advertisements are sent every 60 seconds
  LLDP hold time advertised is 180 seconds
  LLDP interface reinitialization delay is 2 seconds
R1# show lldp interface
<output omitted>
GigabitEthernet0/0:
  Tx: enabled
  Rx: enabled
  Tx state: INIT
  Rx state: WAIT PORT OPER
```

```

GigabitEthernet0/1:
  Tx: disabled
  Rx: enabled
  Tx state: INIT
  Rx state: WAIT FOR FRAME
<output omitted>
R1# show lldp neighbors
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Device ID  Local Intf  Hold-time Capability Port ID
S1          Gi0/1      180        B            Fa0/5

Total entries displayed: 1

R1# show lldp neighbors detail
-----
Local Intf: Gi0/1
Chassis id: 0cd9.96e8.8a00
Port id: Fa0/5
Port Description: FastEthernet0/5
System Name: S1.31days.com

System Description:
Cisco IOS Software, C2960 Software (C2960-LANBASEK9-M), Version 15.0(2)SE7,
 RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2014 by Cisco Systems, Inc.
Compiled Thu 23-Oct-14 14:49 by prod_rel_team

Time remaining: 127 seconds
System Capabilities: B
Enabled Capabilities: B
Management Addresses:
  IP: 172.16.1.2
Auto Negotiation - supported, enabled
Physical media capabilities:
  100base-TX(FD)
  100base-TX(HD)
  10base-T(FD)
  10base-T(HD)
Media Attachment Unit type: 16
Vlan ID: 1

Total entries displayed: 1

R1# show lldp traffic

LLDP traffic statistics:
  Total frames out: 171
  Total entries aged: 0

```

```
Total frames in: 34
Total frames received in error: 0
Total frames discarded: 0
Total TLVs discarded: 0
Total TLVs unrecognized: 0
R1#
```

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	10
CCNA 200-301 Official Cert Guide, Volume 2	9
	12
Portable Command Guide	13

Device Monitoring, Management, and Maintenance

CCNA 200-301 Exam Topics

- Explain the function of SNMP in network operations
- Describe the use of syslog features including facilities and levels
- Configure and verify NTP operating in a Client and Server mode
- Describe the capabilities and function of TFTP/FTP in the network

Key Topics

The review today covers tools used to monitor, manage, and maintain routers and switches. For device monitoring, we review how to configure and verify Simple Network Management Protocol (SNMP), syslog, and Network Time Protocol (NTP). For device management, we review backing up and restoring your device configuration and Cisco IOS licensing. For device maintenance, we review file system management, Cisco IOS upgrades, and password recovery.

SNMP Operation

SNMP is an application layer protocol that provides a message format for communication between managers and agents.

SNMP Components

The SNMP system consists of three elements:

- SNMP manager
- SNMP agents (managed node)
- Management Information Base (MIB)

SNMP Messages

The SNMP manager is part of a network management system (NMS) and runs SNMP management software. SNMP agents are managed devices. The MIB stores SNMP variables. SNMP uses three basic messages between SNMP managers and agents: get, set, and trap messages. The SNMP manager uses get messages to poll a device for information and set messages to change a device parameter. An SNMP agent can use SNMP traps to independently notify the NMS when a problem occurs.

For example, SNMP can monitor the CPU utilization on a Cisco router. The NMS can sample this value periodically and warn the network administrator when the value deviates from the baseline. An SNMP agent can also be configured to send a trap message when CPU utilization is driving away from normal values for the network. Table 4-1 summarizes the get and set actions.

Table 4-1 get and set SNMP Operations

Operation	Description
get-request	Retrieves a value from a specific variable.
get-next-request	Retrieves a value from a variable within a table. The SNMP manager does not need to know the exact variable name. A sequential search is performed to find the needed variable from within a table.
get-bulk-request	Retrieves large blocks of data, such as multiple rows in a table, that would otherwise require the transmission of many small blocks of data. (This works only with SNMPv2 or later.)
get-response	Replies to a get-request , get-next-request , or set-request sent by an NMS.
set-request	Stores a value in a specific variable.

SNMP Versions

Several versions of SNMP exist:

- **SNMPv1:** The original SNMP, defined in RFC 1157.
- **SNMPv2c:** Defined in RFCs 1901 to 1908. Utilizes a community string-based administrative framework.
- **SNMPv3:** Interoperable standards-based protocol originally defined in RFCs 2273 to 2275. Provides secure access to devices by authenticating and encrypting packets over the network.


SNMPv1 and SNMPv2c use community strings that control access to the MIB. Community strings are plaintext passwords. Two types of community strings exist:

- **Read-only (ro):** Provides access to the MIB variables but does not allow these variables to be changed (only read)
- **Read-write (rw):** Provides read and write access to all objects in the MIB

The Management Information Base

The MIB organizes variables hierarchically. MIB variables enable the management software to monitor and control the network device. Formally, the MIB defines each variable as an object ID (OID). OIDs uniquely identify managed objects in the MIB hierarchy. The MIB organizes the OIDs based on RFC standards into a hierarchy of OIDs, usually shown as a tree.

RFCs define some common public variables. Figure 4-1 shows portions of the MIB structure defined by Cisco Systems.

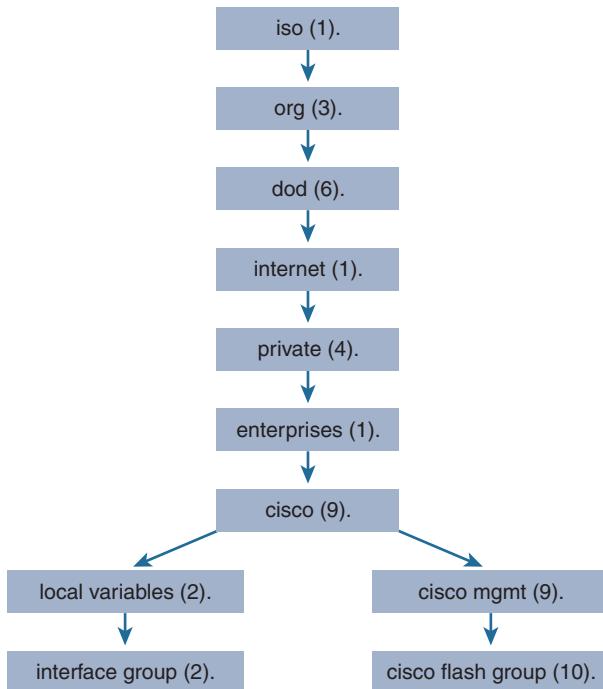Figure 4-1 Management Information Base Object IDs

Note that the OID can be described in words or numbers to help locate a particular variable in the tree. For example, OIDs belonging to Cisco are numbered as follows: iso (1).org (3).dod (6).internet (1).private (4).enterprises (1).cisco (9.). This is displayed or configured as 1.3.6.1.4.1.9.

One way to demonstrate using these OIDs is to look at how they can be implemented in the freeware SNMPGET utility. Example 4-1 shows how you might configure SNMPGET to obtain a 5-minute exponential moving average of the CPU busy percentage from a router.

Example 4-1 Obtaining an MIB Value with SNMPGET

```
[13:22] [cisco@NMS~ ]$ snmpget -v2c -c community 10.250.250.14
 1.3.6.1.4.1.9.2.1.58.0
SNMPv2-SMI::enterprises.9.2.1.58.0 = INTEGER: 11
```

The bold text shows a rather long command with several parameters highlighted:

- **-v2c:** The version of SNMP in use
- **-c community:** The SNMP password, called a *community string*
- **10.250.250.14:** The IP address of the monitored device
- **1.3.6.1.4.1.9.2.1.58.0:** The numeric OID of the MIB variable

The last line shows the response. The output shows a shortened version of the MIB variable. It then lists the actual value in the MIB location; in this example, it means that the CPU is at 11% utilization.

Configuring SNMP

Configuring SNMPv2c on a Cisco router or switch requires only one global configuration command: **snmp-server community**. The following steps include some optional commands:

- Step 1.** (Required) Configure the community string and access level (read-only or read-write) with the **snmp-server community string {RO|RW}** global command.
- Step 2.** (Optional) Document the location of the device by using the **snmp-server location text-describing-location** global configuration command.
- Step 3.** (Optional) Document the location of the device by using the **snmp-server contact contact-name** global configuration command.
- Step 4.** (Optional) Restrict SNMP access to NMS hosts that are permitted by an access control list (ACL) by defining an ACL and referencing the ACL on the **snmp-server community string acl** global configuration command.

Example 4-2 demonstrates the use of the required and optional commands.

Example 4-2 Configuring SNMPv2c for Read-Only Access

```
R1(config)# ip access-list standard SNMP_ACCESS
R1(config-std-nacl)# permit host 172.16.3.110
R1(config-std-nacl)# exit
R1(config)# snmp-server community 4md!n0nly RO SNMP_ACCESS
R1(config)# snmp-server location Austin, TX
R1(config)# snmp-server contact Bob Smith
R1(config)# end
```

Verifying SNMP

To verify the SNMP configuration, use the **show snmp** command (see Example 4-3).

Example 4-3 Verifying SNMP

```
R1# show snmp
Chassis: FTX1636848Z
Contact: Bob Smith
Location: Lima, OH
0 SNMP packets input
  0 Bad SNMP version errors
  0 Unknown community name
  0 Illegal operation for community name supplied
  0 Encoding errors
  0 Number of requested variables
  0 Number of altered variables
  0 Get-request PDUs
  0 Get-next PDUs
```

```

0 Set-request PDUs
0 Input queue packet drops (Maximum queue size 1000)
359 SNMP packets output
0 Too big errors (Maximum packet size 1500)
0 No such name errors
0 Bad values errors
0 General errors
0 Response PDUs
359 Trap PDUs
SNMP Dispatcher:
queue 0/75 (current/max), 0 dropped
SNMP Engine:
queue 0/1000 (current/max), 0 dropped

SNMP logging: enabled
Logging to 172.16.3.10, 0/10, 359 sent, 0 dropped.

```

The **show snmp** command output does not display information related to the SNMP community string or the associated ACL (if applicable). Example 4-4 shows the use of the **show snmp community** command to display the SNMP community string and ACL information.

Example 4-4 Verifying SNMP Community Strings

```

R1# show snmp community

Community name: ILM
Community Index: cisco0
Community SecurityName: ILM
storage-type: read-only active

Community name: 4md!n0nly
Community Index: cisco7
Community SecurityName: 4md!n0nly
storage-type: nonvolatile active access-list: SNMP_ACCESS

Community name: 4md!n0nly
Community Index: cisco8
Community SecurityName: 4md!n0nly
storage-type: nonvolatile active
access-list: SNMP_ACCESS

```


Syslog

Syslog is a term used to describe a standard that the IETF first documented in RFC 3164 in 2001. It is a popular protocol that many networking devices use, including routers, switches, application servers, firewalls, and other network appliances. These devices can send their messages across the network to be stored on syslog servers for later access by network administrators.

Syslog Operation

Syslog uses UDP port 514 to send event notification messages across IP networks to event message collectors, as Figure 4-2 illustrates.

Figure 4-2 Syslog Server Example

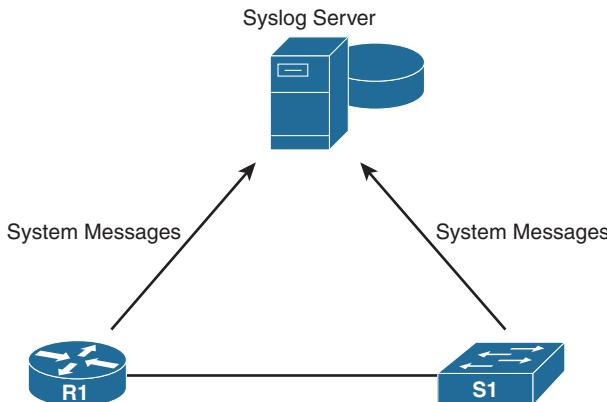

The syslog logging service provides three primary capabilities:

- Gathering logging information for monitoring and troubleshooting
- Selecting the type of logging information that is captured
- Specifying the destinations of captured syslog messages

On Cisco network devices, the syslog protocol starts by sending system messages and debug output to a local logging process internal to the device. It is possible to remotely monitor system messages by viewing the logs on a syslog server or by accessing the device through Telnet, Secure Shell (SSH), or the console port.

Cisco devices produce syslog messages as a result of network events. Every syslog message contains a severity level and a facility. Table 4-2 shows the complete list of syslog severity levels.

Table 4-2 Syslog Severity Level

Severity Name	Severity Level	Explanation
Emergency	Level 0	System unusable
Alert	Level 1	Immediate action needed
Critical	Level 2	Critical condition
Error	Level 3	Error condition
Warning	Level 4	Warning condition
Notification	Level 5	Normal but significant condition
Informational	Level 6	Informational message
Debugging	Level 7	Debugging message

In addition to specifying the severity, syslog messages contain information on the facility. Syslog facilities are service identifiers that identify and categorize system state data for error and event message reporting. The logging facility options that are available are specific to the networking device. Common syslog message facilities reported on Cisco IOS routers include the following:

- IP
- OSPF protocol
- SYS operating system
- IP Security (IPsec)
- Interface IP (IF)

The default format for syslog messages follows:

```
seq no: timestamp: %facility-severity-MNEMONIC: description
```

Table 4-3 describes the fields in a syslog message.

Table 4-3 Syslog Message Format

Field	Explanation
seq no	Sequence number stamped on the log message. Appears only if the service sequence-numbers global configuration command is configured.
timestamp	Date and time of the message or event. Appears only if the service timestamps global configuration command is configured.
facility	The facility to which the message refers.
severity	Single-digit code from 0 to 7 indicating the severity of the message.
MNEMONIC	Text string that uniquely describes the message.
description	Text string containing detailed information about the event being reported.

Using the message format and Table 4-3, you can easily interpret the following message:

```
00:00:46: %LINK-3-UPDOWN: Interface Port-channel1, changed state to up
```

In this message, you can see that the **service sequence-numbers** command was not configured, but the **service timestamps** command was configured. The facility is LINK, the severity is 3, and MNEMONIC is UPDOWN. The rest of the message provides a description of the event.

Configuring and Verifying Syslog

By default, Cisco routers and switches send log messages for all severity levels to the console. On some Cisco IOS versions, the device also buffers log messages by default. To enable these two settings, use the **logging console** and **logging buffered** global configuration commands, respectively.

The **show logging** command displays the default logging service settings on a Cisco router, as Example 4-5 shows.

Example 4-5 Default Logging Service Settings

```
R1# show logging

Syslog logging: enabled (0 messages dropped, 2 messages rate-limited, 0 flushes,
 0 overruns, xml disabled, filtering disabled)

No Active Message Discriminator.

No Inactive Message Discriminator.

Console logging: level debugging, 32 messages logged, xml disabled,
  filtering disabled
Monitor logging: level debugging, 0 messages logged, xml disabled,
  filtering disabled
Buffer logging: level debugging, 32 messages logged, xml disabled,
  filtering disabled
Exception Logging: size (4096 bytes)
Count and timestamp logging messages: disabled
Persistent logging: disabled

No active filter modules.

Trap logging: level informational, 34 message lines logged
  Logging Source-Interface:          VRF Name:

Log Buffer (8192 bytes):

*Jan 2 00:00:02.527: %LICENSE-6-EULA_ACCEPT_ALL: The Right to Use End User
 License Agreement is accepted
*Jan 2 00:00:02.631: %IOS_LICENSE_IMAGE_APPLICATION-6-LICENSE_LEVEL:
  Module name = c1900 Next reboot level = ipbasek9 and License = ipbasek9
*Jan 2 00:00:02.851: %IOS_LICENSE_IMAGE_APPLICATION-6-LICENSE_LEVEL:
  Module name = c1900 Next reboot level = securityk9 and License = securityk9
*Jan 2 00:01:01.619: %IFMGR-7-NO_IFINDEX_FILE: Unable to open
  nvram:/ifIndex- table No such file or directory
<output omitted>
```

To configure the router to send system messages to a syslog server, complete the following three steps:

Step 1. Configure the IP address of the syslog server in global configuration mode:

```
R1(config)# logging 192.168.1.3
```

Step 2. Control the messages that will be sent to the syslog server with the **logging trap level** global configuration mode command. For example, to limit the messages to levels 4 and lower (0 to 4), use one of the following two equivalent commands:

```
R1(config)# logging trap 4
```

or:

```
R1(config)# logging trap warning
```

- Step 3.** Optionally, configure the source interface with the **logging source-interface interface-type interface-number** global configuration mode command. This specifies that syslog packets contain the address of a specific interface, regardless of which interface the packet uses to exit the router. For example, to set the source interface to g0/0, use the following command:

```
R1(config)# logging source-interface g0/0
```

Example 4-6 shows the output from the **show logging** command. The default settings have been changed, as noted by the highlights.

Example 4-6 Verify the Logging Service After Configuration Check

```
R1# show logging
Syslog logging: enabled (0 messages dropped, 2 messages rate-limited, 0 flushes,
 0 overruns, xml disabled, filtering disabled)

No Active Message Discriminator.

No Inactive Message Discriminator.

Console logging: level debugging, 41 messages logged, xml disabled,
  filtering disabled
Monitor logging: level debugging, 0 messages logged, xml disabled,
  filtering disabled
Buffer logging: level debugging, 41 messages logged, xml disabled,
  filtering disabled
Exception Logging: size (4096 bytes)
Count and timestamp logging messages: disabled
Persistent logging: disabled


No active filter modules.

Trap logging: level warnings, 43 message lines logged
  Logging to 192.168.1.3 (udp port 514, audit disabled,
    link up),
    4 message lines logged,
    0 message lines rate-limited,
    0 message lines dropped-by-MD,
    xml disabled, sequence number disabled
    filtering disabled
  Logging Source-Interface:      VRF Name:
    GigabitEthernet0/0
<output omitted>
```

Network Time Protocol

As you know, routers and switches issue log messages in response to different events. For example, when an interface fails, the device creates log messages. With default settings, Cisco IOS sends these messages to the console port. But Cisco IOS can be configured also to send messages to a syslog server, where they can be stored for administration review and troubleshooting. Figure 4-3 shows a topology with a syslog server.

Figure 4-3 Sample Network with a Syslog Server

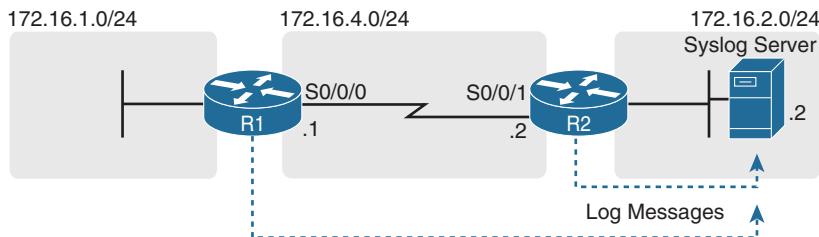

A log message typically lists the date and time as part of the message so that a network engineer who looks back at the message knows exactly when that message occurred.

Network Time Protocol (NTP) provides a way to synchronize the time-of-day clock so that timestamps are consistent across devices, making troubleshooting easier.

To configure a router or switch to synchronize its time with an existing NTP server, use the **ntp server** command, as in Example 4-7.

Example 4-7 Configuring and Verifying an NTP Client

```

R1(config)# ntp server 172.16.2.2
R1(config)# ^z
R1#
R1# show ntp status
Clock is synchronized, stratum 8, reference is 172.16.2.2
nominal freq is 250.0000 Hz, actual freq is 250.0000 Hz, precision is 2**21
ntp uptime is 4700 (1/100 of seconds), resolution is 4000
reference time is D42BD899.5FFCE014 (13:48:09.374 UTC Fri Oct 19 2016)
clock offset is -0.0033 msec, root delay is 1.28 msec
root dispersion is 3938.51 msec, peer dispersion is 187.59 msec
loopfilter state is 'CTRL' (Normal Controlled Loop), drift is 0.000000000 s/s
system poll interval is 64, last update was 42 sec ago.
R1# show ntp associations
address ref clock st when poll reach delay offset disp
*172.16.2.2 127.127.1.1 7 36 64 1 1.261 -0.001 7937.5
 * sys.peer, # selected, + candidate, - outlyer, x falseticker, configured
  
```

The output of the **show ntp status** command gives the NTP status in the very first line; in Example 4-7, you can see that R1 is synchronized with the NTP server at 172.16.2.2. The **show**

ntp associations command lists a single line of output for every other NTP device with which the router has associated.

A router or a switch can actually be the NTP server with just one command (**ntp master**) as well. In addition, NTP can use authentication so that a router or switch does not get fooled into changing its timestamp.

Cisco IOS File System and Devices

Cisco IOS devices provide a feature called the Cisco IOS Integrated File System (IFS). This system enables you to create, navigate, and manipulate directories on a Cisco device. The directories available depend on the platform.

IFS Commands

Example 4-8 shows output from the **show file systems** command.

Example 4-8 Router Default File System Router

```
Router# show file systems
File Systems:

      Size(b)   Free(b)    Type   Flags   Prefixes
      -         -       opaque  rw     archive:
      -         -       opaque  rw     system:
      -         -       opaque  rw     tmpsys:
      -         -       opaque  rw     null:
      -         -       network rw     tftp:
      262136   251594    nvram   rw     nvram:
      -         -       opaque  wo     syslog:
      -         -       opaque  rw     xmodem:
      -         -       opaque  rw     ymodem:
      -         -       network rw     rcp:
      -         -       network rw     http:
      -         -       network rw     ftp:
      -         -       network rw     scp:
      -         -       opaque  ro     tar:
      -         -       network rw     https:
      -         -       opaque  ro     cns:
  1002143744 683163648    usbflash rw     usbflash1:
* 255537152 183939072    usbflash rw     usbflash0: flash:
Router#
```

The columns show the amount of available and free memory, in bytes, and the type of file system and its permissions. Permissions include read-only (ro), write-only (wo), and read and write (rw).

Although several file systems are listed, of interest to us are the TFTP, Flash, and NVRAM file systems.

Notice that the Flash file system has an asterisk (*) preceding it, which indicates that this is the current default file system. For the 1900 router in Example 4-8, the file system is booted from USB Flash. The alias **flash:** is associated with `usbflash0` so that you can use **flash:** in your commands (such as in **show flash:**).

As Example 4-9 shows, the **dir** command lists the main directory of the default file systems, whereas **show flash:** lists the entire contents of the default file system.

Example 4-9 Default File System Directories and Files in Flash

```
Router# dir
Directory of usbflash0:/

 1 -rw-  68831808 Jun  5 2013 18:43:02 +00:00 c1900-universalk9-mz.SPA.152-
4.M3.bin
 2 -rw-      3064 Jun  5 2013 18:54:10 +00:00 cpconfig-19xx.cfg
 3 drw-        0 Nov  6 2013 12:40:56 +00:00 ipsdir
10 drw-        0 Jun  5 2013 18:54:32 +00:00 ccpexp
246 -rw-      2464 Jun  5 2013 18:56:14 +00:00 home.shtml
247 -rw-      813 Nov  6 2013 12:44:22 +00:00 realm-cisco.pub.key
248 -rw-      2465 Nov  7 2013 11:22:20 +00:00 pre_autosec.cfg
255537152 bytes total (183939072 bytes free)

Router# show flash
-#- --length-- ----date/time----- path
1     68831808 Jun  5 2013 18:43:02 +00:00 c1900-universalk9-mz.SPA.152-4.M3.bin
2         3064 Jun  5 2013 18:54:10 +00:00 cpconfig-19xx.cfg
3             0 Nov  6 2013 12:40:56 +00:00 ipsdir
4         462 Nov  6 2013 13:14:52 +00:00 ipsdir/iosips-sig-delta.xmz
5     14978 Nov  6 2013 12:55:56 +00:00 ipsdir/iosips-sig-typedef.xmz
6     38523 Nov  6 2013 12:55:58 +00:00 ipsdir/iosips-sig-category.xmz
7         304 Nov  6 2013 12:53:40 +00:00 ipsdir/iosips-seap-delta.xmz
8         835 Nov  6 2013 12:53:40 +00:00 ipsdir/iosips-seap-typedef.xmz
9     500751 Nov  6 2013 12:56:28 +00:00 ipsdir/iosips-sig-default.xmz
10        0 Jun  5 2013 18:54:32 +00:00 ccpexp
11        0 Jun  5 2013 18:54:32 +00:00 ccpexp/external
<output omitted>
245        72 Jun  5 2013 18:56:12 +00:00 ccpexp/version.txt
246        2464 Jun  5 2013 18:56:14 +00:00 home.shtml
247        813 Nov  6 2013 12:44:22 +00:00 realm-cisco.pub.key
248        2465 Nov  7 2013 11:22:20 +00:00 pre_autosec.cfg

183939072 bytes available (71598080 bytes used)
```

Router#

Of particular interest is the first listing, which is the filename for the Cisco IOS image.

Notice that the output does not show the configuration files stored in NVRAM. To see these files, first change directories (**cd**) to the NVRAM directory (**nvram:**) and then list the contents with the **dir** command, as in Example 4-10.

Example 4-10 Listing Directory Contents for NVRAM

```
Router# cd nvram:
Router# dir
Directory of nvram:/

 253 -rw- 1269      <no date> startup-config
 254 ---- 5        <no date> private-config
 255 -rw- 1269      <no date> underlying-config
 1 -rw- 2945       <no date> cwmp_inventory
 4 ---- 0        <no date> rf_cold_starts
 5 ---- 76       <no date> persistent-data
 6 -rw- 17        <no date> ecfm_ieee_mib
 7 -rw- 559       <no date> IOS-Self-Sig#1.cer
 8 -rw- 559       <no date> IOS-Self-Sig#2.cer
 9 -rw- 0         <no date> ifIndex-table

262136 bytes total (251594 bytes free)
Router#
```


NOTE: You can also simply use the command **dir nvram:** to list the contents of the **nvram:** directory.

The file you are most interested in as CCNA exam candidates is the **startup-config** file.

URL Prefixes for Specifying File Locations

File locations are specified in Cisco IFS using the URL convention shown in Figure 4-4.

Figure 4-4 Using a URL to Specify the TFTP Location

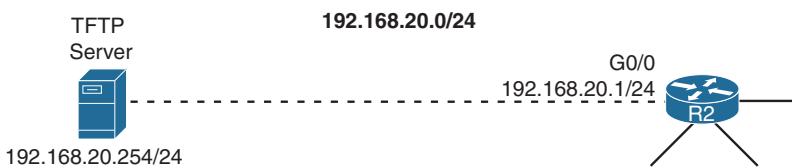

Prefix	URL Path
tftp:	[[[//location]/directory]/filename]
tftp://192.168.20.254/configs/backup-config	

In Figure 4-4, the parts of the URL `tftp://192.168.20.254/configs/backup-config` can be dissected as follows:

- `tftp`: is the prefix specifying the protocol.
- Everything after the double slash (`//`) defines the file location.
- `192.168.20.254` is the location of the TFTP server.
- `configs` is the master directory on the TFTP server.
- `backup-config` is a sample filename.

The TFTP URL in Figure 4-4 is an example of a remote URL. Examples of URLs for accessing the local Cisco IFS include the following:


- `flash:configs/backup-config`
- `system:running-config` (which accesses RAM)
- `nvram:startup-config`

Commands for Managing Configuration Files

Knowing the URL structure is important because you use it when copying configuration files from one location to another. The Cisco IOS Software `copy` command enables you to move configuration files from one component or device to another, such as RAM, NVRAM, or a TFTP server. Figure 4-5 shows the command syntax.

Figure 4-5 copy Command Syntax

command source-url: destination-url:

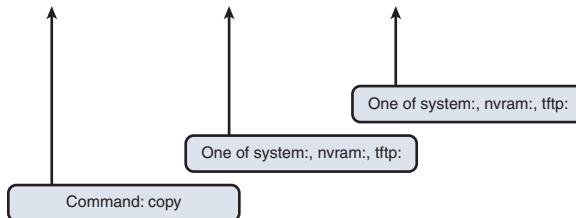

The source URL is where you are copying from. The destination URL is where you are copying to. For example, you are already familiar with the abbreviated command `copy run start`; however, in its most verbose form, this command specifies the file locations:

```
Router# copy system:running-config nvram:startup-config
```

The command says to “copy the running configuration from the system’s RAM to NVRAM and save it with the filename `startup-config`.”

Example 4-11 demonstrates how to copy the current running configuration to a new local directory named `configs` that you create.

Example 4-11 Copying Files to a Local Directory

```
Router# mkdir configs
Create directory filename [configs]? <Enter>
Created dir usbflash0:/configs
Router# copy system:running-config configs/backup-config
Destination filename [/configs/backup-config]? <Enter>
1269 bytes copied in 0.648 secs (1958 bytes/sec)
```

You can also copy from RAM to TFTP:

```
Router# copy system:running-config tftp:
```

or simply:

```
Router# copy run tftp
```

You can also copy from TFTP to RAM:

```
Router# copy tftp: system:running-config
```

or simply:

```
Router# copy tftp run
```

You can also copy from TFTP to the startup configuration file:

```
Router# copy tftp: nvram:startup-config
```

or simply:

```
Router# copy tftp nvram
```

The **copy** commands using TFTP require more configuration (covered in the next section) after you enter them to carry out the instruction.

Managing Cisco IOS Images

As a network grows, storing Cisco IOS Software images and configuration files on the central TFTP server gives you control over the number and revision level of Cisco IOS images and configuration files that must be maintained. Use the **show version** command to verify the Cisco IOS image currently running on the device. Figure 4-6 shows a sample topology with a TFTP server.

Figure 4-6 TFTP Topology



Backing Up a Cisco IOS Image

Make sure that a TFTP server is configured and running on the network. Then follow these steps to copy a Cisco IOS Software image from Flash memory to the network TFTP server:

- Step 1.** Ping the TFTP server to ensure that you have access to it:

```
R1# ping 172.16.1.100
```

```
Type escape sequence to abort.
```

```
Sending 5, 100-byte ICMP Echos to 172.16.1.100, timeout is 2 seconds:
```

```
!!!!!!
```

```
Success rate is 100 percent (5/5), round-trip min/avg/max = 31/31/32 ms
```

```
R1#
```

- Step 2.** Copy the current system image file from the router to the network TFTP server by using the **copy flash: tftp:** command in privileged EXEC mode. You then are prompted to enter the IP address of the remote host and the name of the source and destination system image files:

```
R1# copy flash: tftp:  
Source filename []? c1900-universalk9-mz.SPA.152-4.M3.bin  
Address or name of remote host []? 172.16.1.100  
Destination filename [c1900-universalk9-mz.SPA.152-4.M3.bin]? <Enter>  
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!  
<Output omitted>  
68831808 bytes copied in 113.061 secs (608802 bytes/sec)  
R1#
```

During the copy process, exclamation points (!) indicate the progress. Each exclamation point signifies that one User Datagram Protocol (UDP) segment has successfully been transferred.

Restoring a Cisco IOS Image

You can use the **dir** command or **show flash:** command to verify that the router has sufficient disk space to accommodate the new Cisco IOS Software image, as in Example 4-12.

Example 4-12 Output from the **dir** Command

```
R1# dir  
Directory of usbflash0:/  
  
 1  -rw-  68831808 Jun      5 2013  18:43:02 +00:00 c1900-universalk9-  
mz.SPA.152-4.M3.bin  
 2  -rw-   3064     Jun      5 2013  18:54:10 +00:00 cpconfig-19xx.cfg  
 3  drw-     0     Nov      6 2013  12:40:56 +00:00 ipsdir
```

```

10 drw- 0 Jun 5 2013 18:54:32 +00:00 ccpexp
246 -rw- 2464 Jun 5 2013 18:56:14 +00:00 home.shtml
247 -rw- 813 Nov 6 2013 12:44:22 +00:00 realm-cisco.pub.key
248 -rw- 2465 Nov 7 2013 11:22:20 +00:00 pre_autosec.cfg
249 drw- 0 Feb 8 2014 19:49:08 +00:00 configs

255537152 bytes total (183926784 bytes free)
R1#

```

The **show flash:** and **dir** commands help you determine the following:

- The total amount of Flash memory on the router
- The amount of Flash memory available
- The names of all the files stored in the Flash memory and the amount of Flash occupied

Example 4-13 shows the commands necessary to copy an image stored on the TFTP server to Flash.

Example 4-13 Upgrading the Cisco IOS Image from a TFTP Server

```

R1# copy tftp flash
Address or name of remote host []? 172.16.1.100
Source filename []? c1900-universalk9-mz.SPA.152-4.M3.bin
Destination filename [c1900-universalk9-mz.SPA.152-4.M3.bin]? <Enter>

Loading c1900-universalk9-mz.SPA.152-4.M3.bin from 172.16.1.100: !!!!!!!!!!!!!!!
!!!!!!!!!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!!
!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!!
!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!!
!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!! !!!!!!!
[OK - 68831808 bytes]

68831808 bytes copied in 9.656 secs (7128397 bytes/sec)
R1#

```

The command asks for the IP address of the TFTP server and then the Cisco IOS image filename stored on the TFTP server that you want to copy over. When asked for the destination filename, you can change it, but doing so is not recommended.

Password Recovery

Password recovery procedures for any Cisco router or switch are readily available online. For example, search for “1941 password recovery,” and you will quickly find the procedures you need to follow to reset the password. This is why physical security is a must for all networking devices. Routers and switches should be behind locked doors.

The following steps are common to most Cisco routers. Switches have a similar process.

- Step 1.** Use the power switch to turn off the router and then turn the router back on.
- Step 2.** Press the break key specified by your terminal software within 60 seconds of powerup to access the ROMmon prompt. For Tera Term, for example, use the key combination **Alt+b**.
- Step 3.** Enter **confreg 0x2142** at the ROMmon prompt. This causes the router to bypass the startup configuration, where the forgotten password is stored.
- Step 4.** Enter **reset** at the prompt. The router reboots, but it ignores the saved configuration. However, the file still exists in NVRAM.
- Step 5.** Press **Ctrl+C** to skip the initial setup procedure.
- Step 6.** Enter **enable** at the Router> prompt to enter privileged EXEC mode, where you should be able to see the Router# prompt.
- Step 7.** Enter **copy startup-config running-config** to copy the backup NVRAM config file into memory.
- Step 8.** Enter **configure terminal**.
- Step 9.** Enter the **enable secret password** command to change the enable secret password.
- Step 10.** Issue the **no shutdown** command on every interface that you want to activate.
- Step 11.** From global configuration mode, enter **config-register 0x2102** to restore the original configuration registry setting.
- Step 12.** Press **Ctrl+Z** or enter **end** to leave configuration mode.
- Step 13.** Enter **copy running-config startup-config** to commit the changes. You can issue the **show ip interface brief** command to confirm that your interface configuration is correct. Every interface that you want to use should display up and up.

You have now completed password recovery. You can enter the **show version** command to confirm that the router will use the configured config register setting on the next reboot.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	10
CCNA 200-301 Official Cert Guide, Volume 2	9
Portable Command Guide	12
	19

Day 3

Cloud, Virtualization, and SDN

CCNA 200-301 Exam Topics

- Describe characteristics of network topology architectures
- Explain virtualization fundamentals (virtual machines)
- Describe Controller-based and software defined architectures (overlay, underlay, fabric)
- Compare traditional networks with controller-based networking

Key Topics

Cloud computing and virtualization are increasingly important services that networks offer to end users. Enterprise networks can use a number of different cloud offerings to enhance productivity and lower costs.

Network programmability through software-defined networking (SDN) is becoming integral to enterprise networks as network administrators can quickly and efficiently manage thousands of networking devices.

Today we review the technologies behind cloud computing, virtualization, and SDN.

Cloud Computing


Cloud computing involves large numbers of computers connected through a network that can be physically located anywhere. Cloud computing provides the following benefits:

- Enables access to organizational data anywhere and at any time
- Streamlines IT operations by making it possible to subscribe to only needed services
- Eliminates or reduces the need for onsite IT equipment, maintenance, and management
- Reduces costs for equipment, energy, physical plant requirements, and personnel training needs
- Enables rapid responses to increasing data volume requirements

Cloud providers rely heavily on virtualization to enable the solutions they offer to clients.

Server Virtualization

Historically, organizations bought multiple hardware servers, and the server administrator installed one or more network applications on the server, such as an email server or a file server (see Figure 3-1).

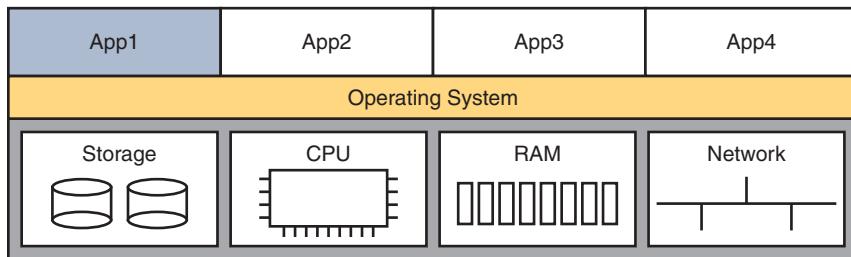
Figure 3-1 Dedicated Server with One OS

Each of these servers had its own CPU, memory, NIC, and disk space. However, this model faces several challenges:


- If a component fails, the service is unavailable until the component is repaired or replaced.
- Servers sometimes sit idle for long periods of time, waiting for clients to use them.
- Servers take up space and waste energy.

Server virtualization takes advantage of idle resources and consolidates the number of required servers. Virtualization separates the operating system (OS) from the hardware. This also makes it possible for multiple OSs to exist on a single hardware platform. Each instance of an OS is called a *virtual machine (VM)*.


A server with multiple VMs uses a hypervisor to manage access to the server's physical resources. The hypervisor sits between the VMs and the hardware, as in Figure 3-2.

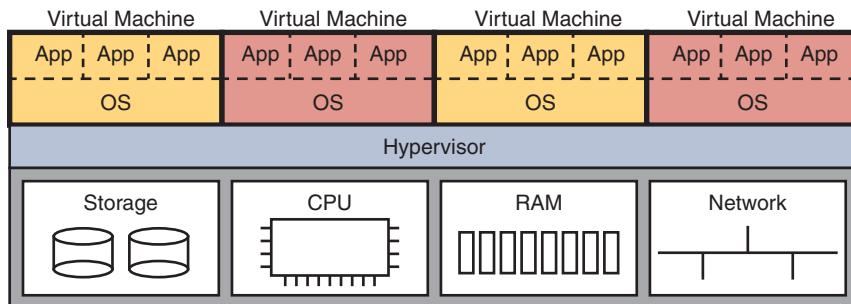Figure 3-2 Hypervisor Managing Four VMs

Another method for managing a set of VMs on a server, especially in a data center environment, is to use a virtual switch that connects the VMs to physical NICs, as in Figure 3-3. An external controller (not shown) manages the server hardware.

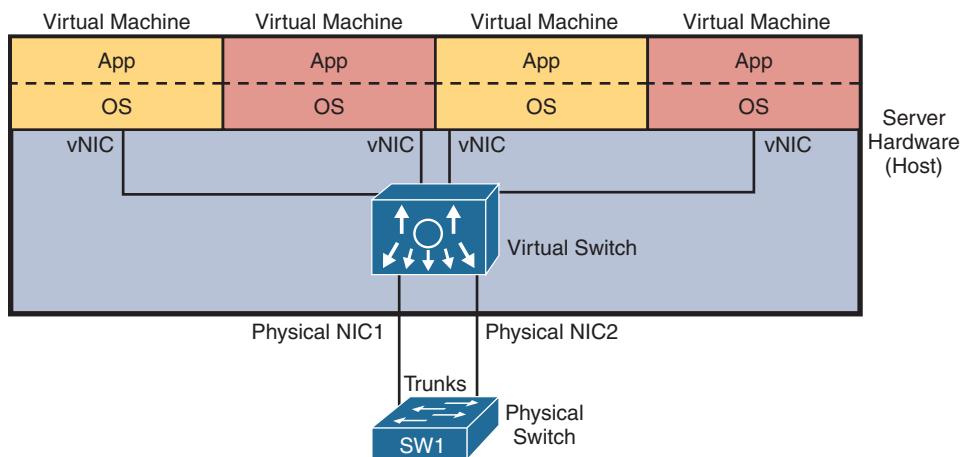Figure 3-3 Virtual Switch and VMs

In a data center, multiple servers are placed in a rack. The two physical NICs in Figure 3-3 are attached to two redundant top of rack (ToR) switches. Racks are lined up in rows and managed by two redundant end of row (EoR) switches. Figure 3-4 shows this physical layout of a traditional data center.

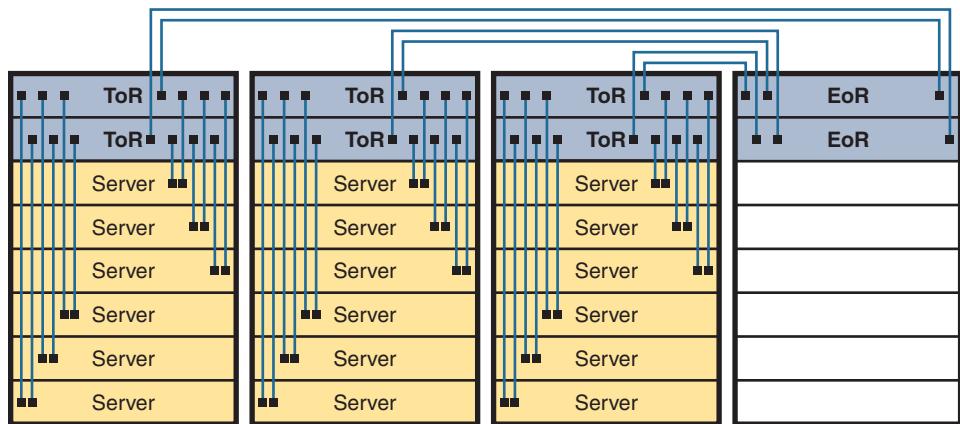Figure 3-4 Traditional Data Center Physical Topology

Cloud Computing Services

To understand the value of cloud computing, consider the effort it takes to manage VMs in a traditional data center. The workflow follows:

- Step 1.** A customer requests a VM or a new set of VMs.
- Step 2.** The data center engineer configures virtualization software.
- Step 3.** Virtualization software creates VMs.

Although this process works, it does not have the characteristics of a cloud computing service as defined by the U.S. National Institute of Standards and Technology (NIST):

- **On-demand self-service:** The user can order, modify, and end service without human interaction.
- **Broad network access:** The service can be accessed from a variety of devices across any network.
- **Resource pooling:** The provider has a pool of resources that can be dynamically allocated to users. The user typically requires no awareness of the physical location of the resources.
- **Rapid elasticity:** To the user, the resource pool appears to be unlimited; it can expand and contract as needed.
- **Measured service:** The provider can measure the usage and then report that usage to the consumer, for both transparency and billing.

Cloud providers can offer a variety of services to meet the needs of customers, including these:


- **Software as a Service (SaaS):** The cloud provider is responsible for access to services that are delivered over the Internet, such as email, communication, and Office 365. Users only need to provide their data.
- **Platform as a Service (PaaS):** The cloud provider is responsible for access to the development tools and services used to deliver the applications. Customers can customize the virtualized hardware.
- **Infrastructure as a Service (IaaS):** The cloud provider is responsible for access to the network equipment, virtualized network services, and network infrastructure support.

Four primary cloud models exist:

- **Public clouds:** Cloud-based applications and services offered in a public cloud are made available to the general population. The public cloud uses the Internet to provide services.
- **Private clouds:** Cloud-based applications and services offered in a private cloud are intended for a specific organization or entity, such as the government. A private cloud uses the organization's private network.
- **Hybrid clouds:** A hybrid cloud is made up of two or more clouds (for example, part private and part public). Each part remains a distinct object, but the two parts are connected using a single architecture.
- **Community clouds:** A community cloud is created for exclusive use by a specific community. The differences between public clouds and community clouds are the functional needs that have been customized for the community.

Virtual Network Infrastructure

A virtual network infrastructure consists of a collection of virtual network functions (VNFs), including virtual switches, virtual server load balancers (SLBs), virtual routers, and virtual firewalls (see Figure 3-5).

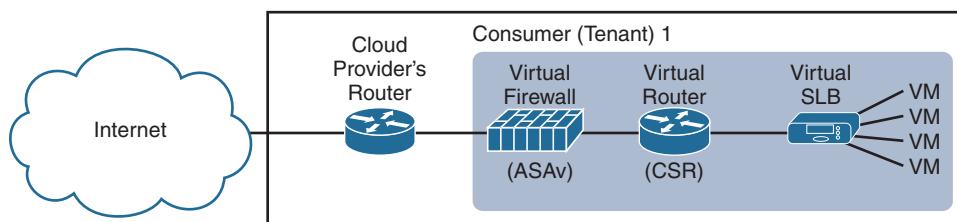Figure 3-5 Virtual Network Installed by a Cloud Provider's Tenant

A cloud provider could offer to a customer (tenant) an IaaS solution that includes a virtual SLB. The customer could then install VNFs, such as a virtual version of the Cisco Adaptive Security Appliance (ASAv) and Cisco Cloud Services Router (CSR), to manage network traffic.

Software-Defined Networking


Network programmability refers to the trend toward software-defined networking (SDN). At its core, SDN decouples the data, control, and management planes from the physical device, virtualizes them, and defines the networking functions in software. This creates an architecture that can be more efficiently and effectively managed through programmatic control.

Data, Control, and Management Planes

A traditional networking device contains two planes. The data plane is responsible for forwarding data as quickly as possible. To do so, it relies on tables built by the control plane. Actions taken by the data plane include the following:

- Layer 2 and Layer 3 de-encapsulation/encapsulation
- Addition or removal of an 802.1Q trunking header
- MAC address table lookups
- IP routing table lookups
- Data encryption and addition of a new IP header (as in VPNs)
- Change to the source or destination IP address (with NAT)
- Message discard due to a filter (such as an ACL or port security)


The control plane does all the calculations for populating tables used by the data plane and manages control messages between other networking devices. Figure 3-6 provides an example of OSPF operating on the control plane while the data plane is responsible for forwarding packets using the best route.

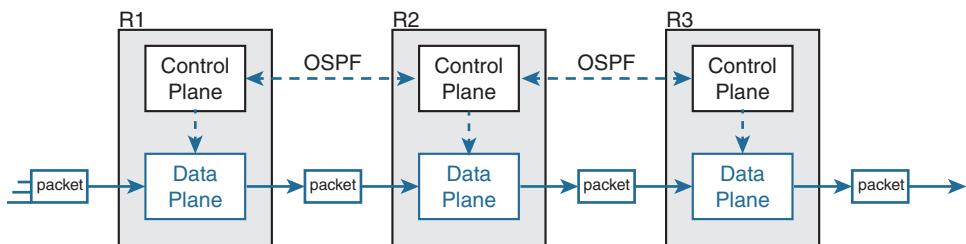Figure 3-6 Control and Data Plane Example

The following are the most common control plane protocols:

- Routing protocols (OSPF, EIGRP, RIP, BGP)
- IPv4 ARP
- IPv6 NDP
- Switch MAC learning
- STP

The management plane is responsible for all functions that are not directly related to controlling the data plane. Management protocols, such as the ones in Figure 3-7, are examples of management plane functions.

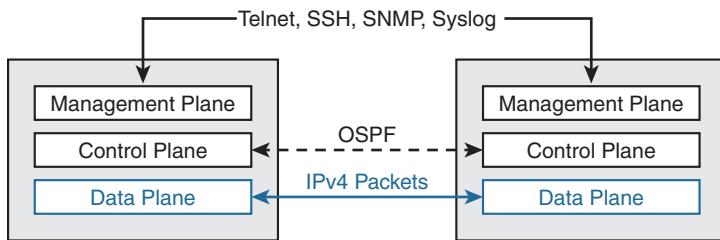
Figure 3-7 Management Plane Example

Controllers

Traditionally, the control plane has been part of the device OS and has been distributed across every device. That means every device must spend some resources calculating and maintaining Layer 2 and Layer 3 data structures (ARP tables, routing tables, and so on). When viewed as a whole, the network's control plane is distributed across all the networking devices.

In SDN, the functions of the control plane can be completely removed from the physical networking devices and placed in a centralized application called a *controller*. This frees up the devices to focus on data plane tasks.

The controller sits at the top of a network topology diagram, and the connections to the networking devices are called the *southbound interface (SBI)* (see Figure 3-8).

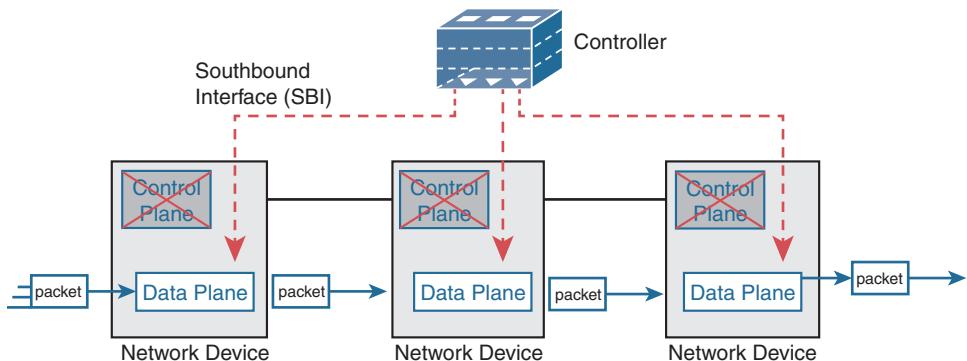Figure 3-8 Centralized Controller and Distributed Data Plane


A *northbound interface (NBI)* also exists between the SDN controller and the applications that are installed on the controller. These applications are what enable network programmability.

SDN Examples: Open SDN and OpenFlow

The Open Networking Foundation (ONF) model of SDN uses an SBI called OpenFlow.

OpenFlow is a protocol used between the controller and the networking devices to manage traffic flows. ONF's controller, OpenDaylight, is the result of a collaborative effort among many vendors, including Cisco.

Figure 3-9 shows an OpenDaylight SDN controller with examples of NBI and SBI application programming interfaces (APIs).

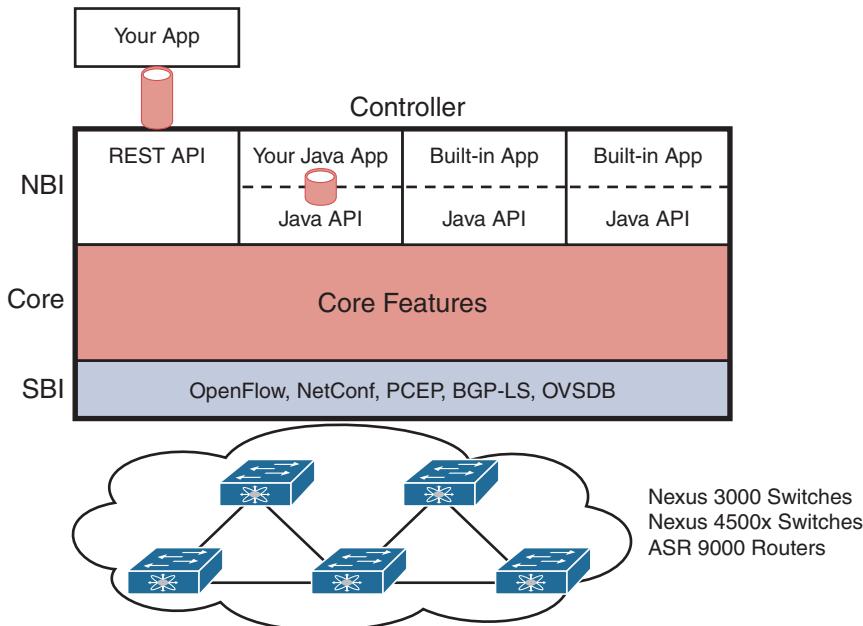Figure 3-9 ONF OpenDaylight Controller

In addition to OpenFlow, the controller has SBIs for other activities, such as configuring network devices (NetConf), managing routing (BGP-LS and PCEP), and switching traffic between VMs (OVSDB).

NBIs typically include Java APIs for applications and the RESTful API. REST (Representational State Transfer) uses HTTP messages to transfer data to other applications that are not running on the controller.

The definition and operation of these SBI and NBI protocols is beyond the scope of the exam. Just know that the ONF is continuously researching better protocols for implementation in the OpenDaylight project.


The Cisco commercial version of the OpenDaylight controller is the Cisco Open SDN Controller (OSC). OSC is available in a limited number of Cisco routers and switches.

SDN Examples: The Cisco Application Centric Infrastructure

The Cisco in-house SDN solution for data centers is Application Centric Infrastructure (ACI). ACI uses the concept of endpoint groups and policies. An endpoint group is a collection of similar VMs, such as a set of virtual switches for one of the data center's tenants. Policies define which endpoint groups can communicate with whom.

The Cisco Application Policy Infrastructure Controller (APIC) uses the endpoint topology and policies to direct the network regarding what needs to be in the forwarding tables and how to easily react to VM changes. ACI uses a partially centralized control plane, RESTful and native APIs, and OpFlex as an SBI, as in Figure 3-10.

Figure 3-10 Cisco ACI for Data Centers

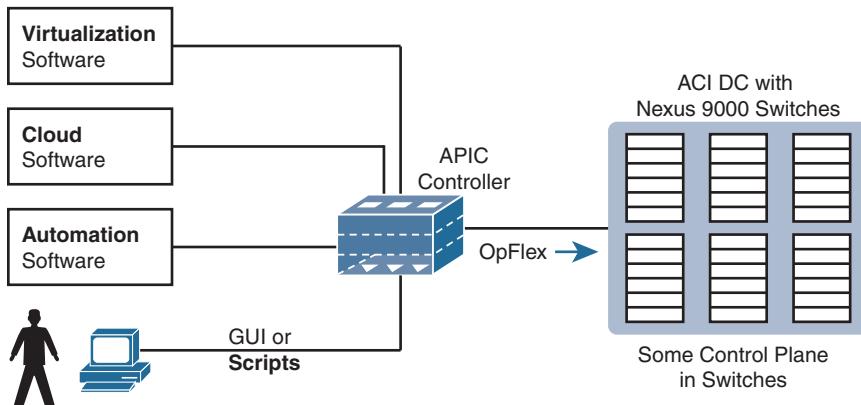


OpFlex is the Cisco solution for SBI communication with networking devices. Whereas OpenFlow centralizes the network control by pushing commands directly from the SDN controller, OpFlex uses policies to push command implementation down to a distributed network of controllers.

SDN Examples: Spine and Leaf

Cisco ACI uses a spine and leaf design. The physical network has a number of spine switches and a number of leaf switches, as shown in Figure 3-11. The figure shows the links between switches, which can be single links or multiple parallel links. Spine and leaf switches are connected using the following design guidelines:

- Each leaf switch must connect to every spine switch.
- Each spine switch must connect to every leaf switch.
- Leaf switches cannot connect to each other.
- Spine switches cannot connect to each other.
- Endpoints connect only to the leaf switches.

Figure 3-11 Spine and Leaf Network Design

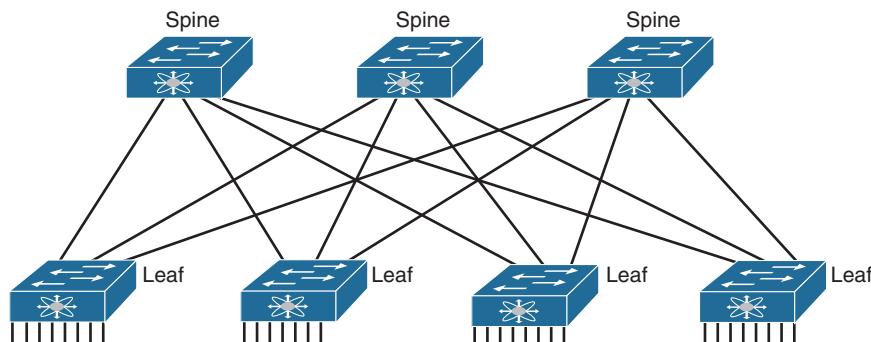

SDN Examples: The Cisco APIC Enterprise Module (APIC-EM)

APIC-EM is the Cisco SDN offering for enterprises. The APIC-EM solution uses a controller to manage existing network devices but also attempts to support new generations of Cisco enterprise routers and switches by using SBIs that are familiar to network administrators, such as remote access to the CLI (Telnet and SSH) and SNMP support.

Cisco also supplies a variety of applications that reside on the controller—some that use information gathered by the controller and some that control the operation of the network devices. A RESTful northbound API makes it easy to collect information about the entire network.

To support the existing enterprise infrastructure of switches and routers, the control and data planes remain unchanged.

Figure 3-12 shows a general view of the APIC-EM controller architecture, with a few of the APIC-EM apps, the REST API, and a list of the SBIs.

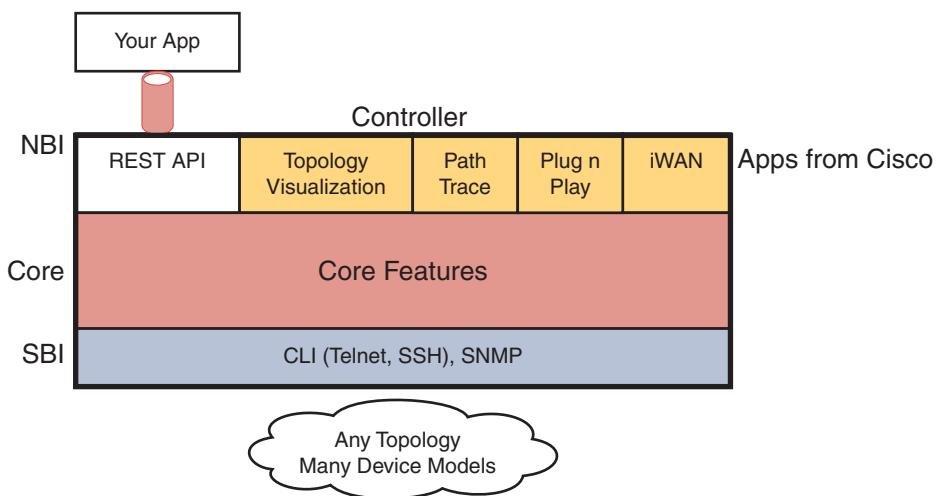
Figure 3-12 APIC-EM Controller

Table 3-1 compares the three examples of SDN.

Table 3-1 Comparing Characteristics of Three SDN Controllers

Characteristic	OpenDaylight, Cisco OSC	APIC	APIC-EM
Changes how the device control plane works compared to in traditional networking	Yes	Yes	No
Creates a centralized point from which humans and automation control the network	Yes	Yes	Yes
Determines the degree to which the architecture centralizes the control plane	Mostly	Partially	Not at all
Determines the SBIs used	OpenFlow	OpFlex	CLI, SNMP
Identifies the organization that is the primary definer/owner	ONF	Cisco	Cisco

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Cisco Network Academy: CCNA 3	13
CCNA 200-301 Official Cert Guide, Volume 2	15
	16
	17

SDA and Cisco DNA Center

CCNA 200-301 Exam Topics

- Explain the role and function of network components
- Compare traditional campus device management with Cisco DNA Center enabled device management


Key Topics

Today we review the role Cisco DNA Center plays in the world of software-defined access. To do so, it is necessary to also review Cisco Software-Defined Access (SDA), which provides a new way to build campus networks compared to traditional network design and deployment.

SDA Architecture

SDA uses a controller and application programming interfaces (APIs) to communicate via southbound interfaces (SBIs) with the network infrastructure, as shown in Figure 2-1. Cisco DNA Center is an example of a controller. SBIs include Telnet/SSH, SNMP, NETCONF, and RESTCONF.

Figure 2-1 SDA Architecture with DNA Center

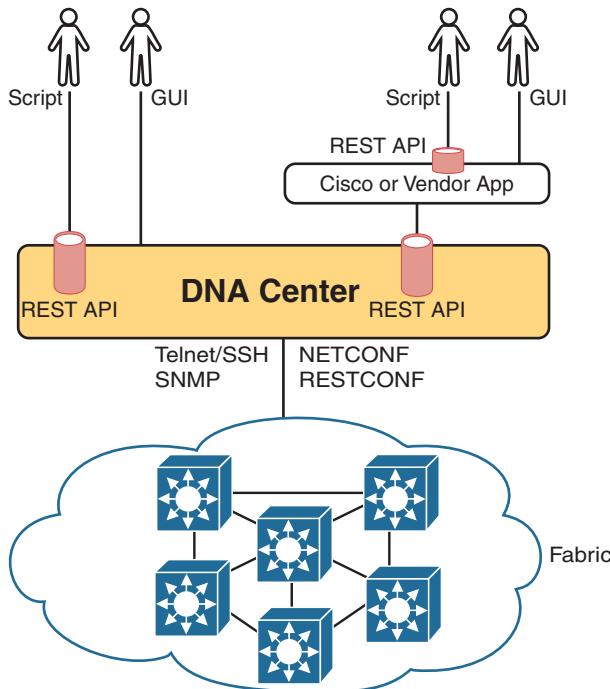


Fabric

The network infrastructure, called the *fabric*, is divided into two parts:

- **Underlay:** This is most closely associated with the physical network. The underlay reveals additional devices and specifies how these devices are connected. Endpoints access the network through the Layer 2 devices. The underlay control plane is responsible for simple forwarding tasks.
- **Overlay:** This is where tunneling protocols like Virtual Extensible LAN (VXLAN) are implemented to transport Layer 3 protocols such as IP Security (IPsec) and Control and Provisioning of Wireless Access Points (CAPWAP). The overlay is where policies are specified. The overlay is not concerned with how the devices are physically or logically connected. Its job is to abstract these inherent complexities and limitations.

For example, in Figure 2-2 the two switches, SW1 and SW2, dynamically create a VXLAN tunnel between the endpoints in the overlay. The exact path the data takes between the two switches is determined by the underlay's Layer 2 and Layer 3 process.

Figure 2-2 Overlay and Underlay

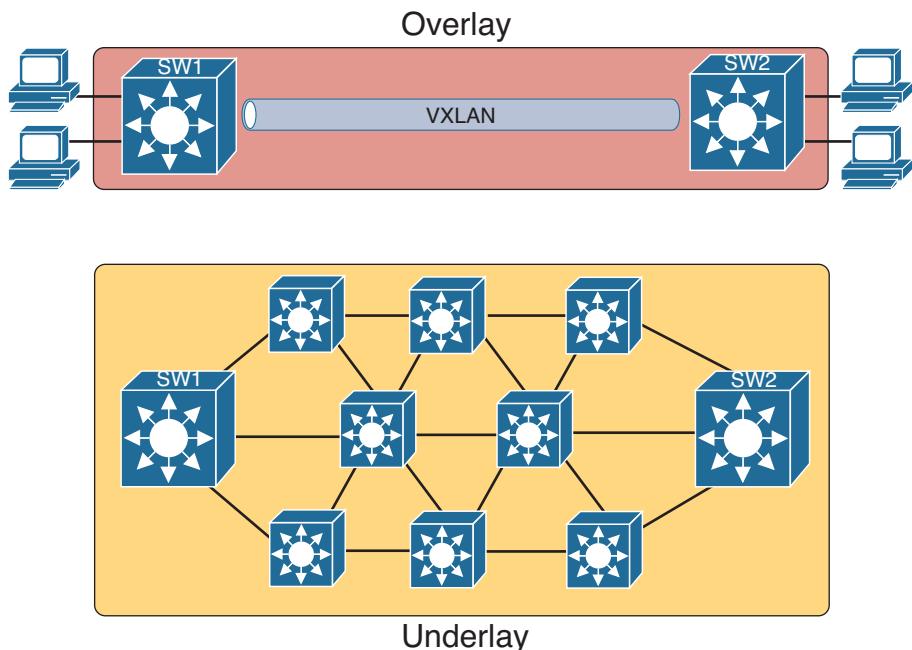

Underlay

The underlay includes the switches, routers, cables, and wireless links used to create the physical network. It also includes the configuration and operation of the underlay to support the work of the overlay network.


The SDA underlay configuration includes different SDA roles filled by each device. These roles include

- **Fabric edge node:** A switch that connects to endpoint devices
- **Fabric border node:** A switch that connects to devices outside SDA's control, such as switches that connect to the WAN routers
- **Fabric control node:** A switch that performs special control plane functions for the underlay, requiring more CPU and memory

Overlay

Cisco chose the VXLAN protocol to create the tunnels used by SDA. When an SDA endpoint (for example, an end-user computer) sends a data link frame to an SDA edge node, the ingress edge node encapsulates the frame and sends it across a VXLAN tunnel to the egress edge node, as shown in Figure 2-3.

Figure 2-3 VXLAN Tunneling Protocol Operation

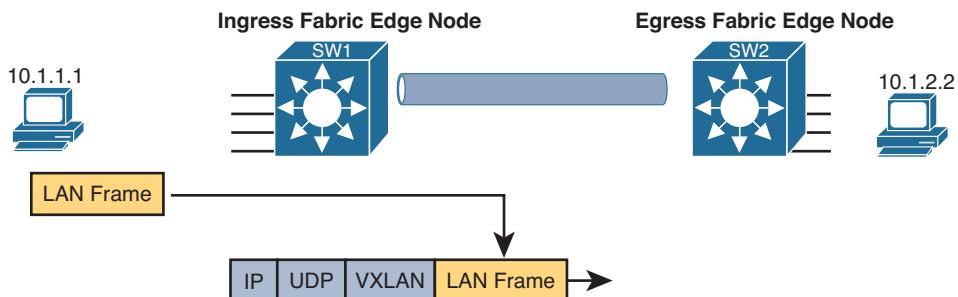

The VXLAN tunnel in the overlay works like this:

- Step 1.** An endpoint sends a frame.
- Step 2.** The frame is encapsulated in the VXLAN tunneling specification.
- Step 3.** The frame is forwarded to the underlay fabric.
- Step 4.** The other nodes in the underlay forward the frame based on the VXLAN tunnel details.
- Step 5.** The last SDA node removes the VXLAN details.
- Step 6.** The frame is forwarded to the destination endpoint.

Cisco DNA Center

Cisco DNA Center has two roles:

- A controller in a network that uses Cisco SDA
- A network management platform for traditional (non-SDA) network devices


Cisco DNA Center supports several southbound APIs so that the controller can communicate with the devices it manages:

- Telnet, SSH, and SNMP to support traditional networking devices
- NETCONF and RESTCONF to support newer devices

Cisco DNA Center and SDA


Cisco DNA Center and SDA make managing policies, such as access control lists (ACLs), much easier. For example, consider the ACL in Figure 2-4. Each number represents a new policy implemented over the life of the ACL.

Figure 2-4 ACEs in an ACL After Six Changes

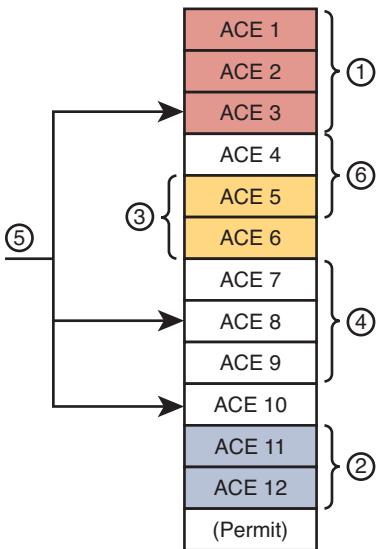

Determining where to place the new access control entries (ACEs) within the existing ACL can be a complex and risky process. Also, unless an ACL is fully documented, you are never quite sure what effects a new policy will have on existing policies—or even if the existing policy is still valid.


However, with SDA security groups, you can enforce a policy without even thinking about IP address ranges and ACLs. Instead of writing new ACEs each time a policy needs to be implemented, the policy is defined in DNA Center. Then, as needed, DNA Center configures the devices in the fabric to enforce the security, as shown in Figure 2-5.

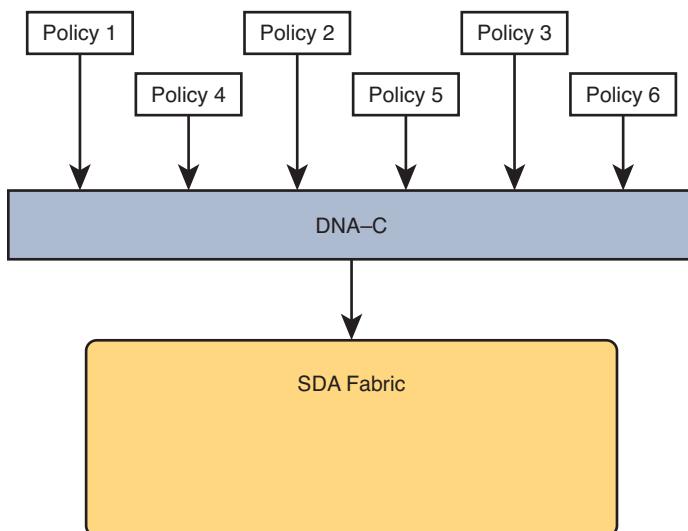Figure 2-5 Six Policies Implemented by DNA Center

The SDA policy model solves the challenges with traditional ACLs:

- Each new security requirement can be considered separately, without analysis of an existing ACLs.
- Each new requirement can be considered without searching for all the ACLs in the likely paths between endpoints and analyzing each and every ACL.
- DNA Center keeps the policies separate.
- Each policy can be removed without fear of impacting the logic of the other policies.

To implement policies in SDA, you tie them to security groups. A security group is identified with a tag (SGT). If DNA Center sees a permit action between the source/destination pair of SGTs, DNA Center directs the edge nodes to create the VXLAN tunnel. The SGTs for source and destination are added to the VXLAN header, along with the VXLAN IDs (VNIDs), as shown in Figure 2-6.

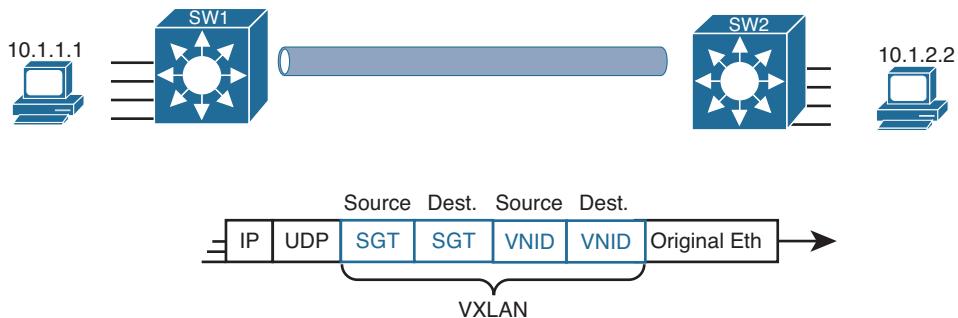
Figure 2-6 VXLAN Header with SGTs and VNIDs

Cisco DNA Center Network Management Platform

Cisco DNA Center supports the expression of intent for multiple use cases, including basic automation capabilities, fabric provisioning, and policy-based segmentation (SGTs) in the enterprise network. Cisco DNA Center is a network management and command center for provisioning and configuring network devices. It is a hardware and software platform that provides a “single pane of glass”(also called a *dashboard*) that focuses on assurance, analytics, and automation.

The DNA Center interface launch page gives you an overall health summary and network snapshot, as shown in Figure 2-7. From there, a network administrator can quickly drill down into areas of interest.

Figure 2-7 Cisco DNA Center Dashboard

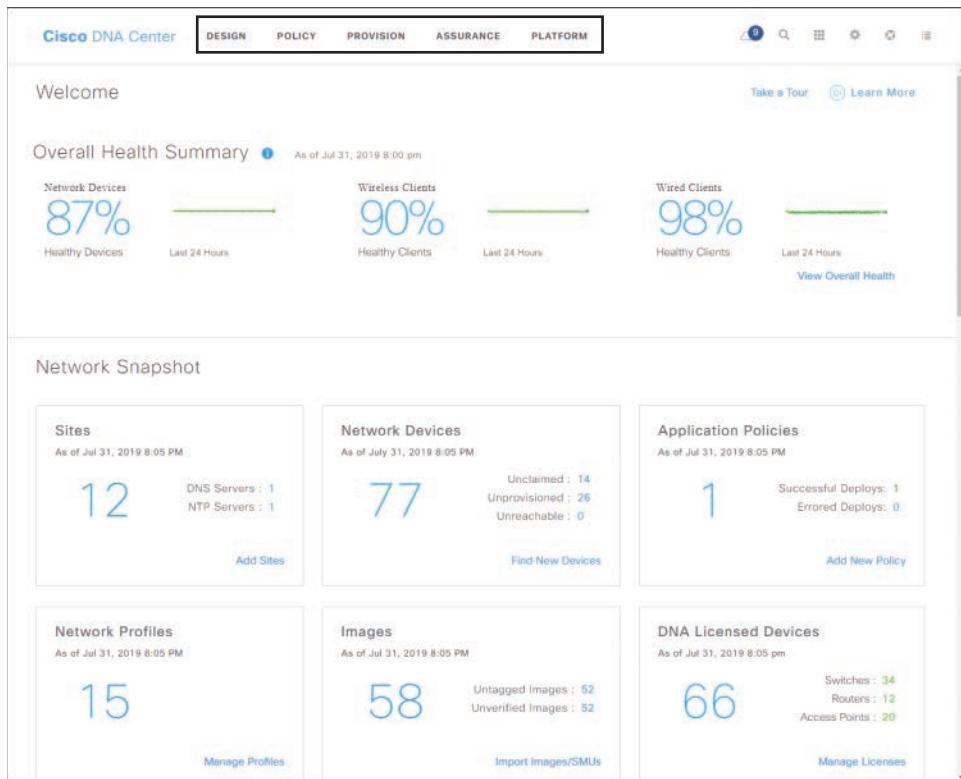

Five menus at the top of the screen provide access to DNA Center's five main areas:

- **Design:** Model your entire network, from sites and buildings to devices and links, both physical and virtual, across campus, branch, WAN, and cloud.
- **Policy:** Use policies to automate and simplify network management, reducing cost and risk while speeding rollout of new and enhanced services.
- **Provision:** Provide new services to users with ease, speed, and security across the enterprise network, regardless of network size and complexity.

- **Assurance:** Use proactive monitoring and insights from the network, devices, and applications to predict problems faster and ensure that policy and configuration changes achieve the business intent and the user experience you want.
- **Platform:** Use APIs to integrate with your preferred IT systems to create end-to-end solutions and add support for multivendor devices.

Cisco DNA Center features focus on simplifying the work done by enterprises, with a goal of reducing costs and deployment time. Some of the features unique to Cisco DNA Center include the following:

- **EasyQoS:** Enables deployment of quality of service (QoS) with just a few simple choices from Cisco DNA Center.
- **Encrypted Traffic Analysis:** Uses algorithms to recognize security threats even in encrypted traffic.
- **Device 360 and Client 360:** Give comprehensive (360-degree) views of the health of the device.
- **Network Time Travel:** Shows past client performance in a timeline for comparison to current behavior.
- **Path Trace:** Discovers the actual path that packets would take from source to destination, based on current forwarding tables.

Be sure to search the Internet for Cisco DNA Center demos or tutorials to review this tool before you take the certification exam.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	14
CCNA 200-301 Official Cert Guide, Volume 2	17

This page intentionally left blank

Network Automation

CCNA 200-301 Exam Topics

- Explain how automation impacts network management
- Describe characteristics of REST based APIs (CRUD, HTTP verbs, data encoding)
- Recognize the capabilities of configuration management mechanisms Puppet, Chef, and Ansible
- Interpret JSON encoded data

Key Topics

Today we review how network automation impacts network management. Specifically, we review the configuration management tools Puppet, Chef, and Ansible. These tools, as well as other network management tools, make use of Representational State Transfer application programming interfaces (REST APIs) and JavaScript Object Notation (JSON) data.

Data Formats

Data formats provide a way to store and exchange data in a structured format. These are some common data formats used in network automation and programmability:

- JavaScript Object Notation (JSON)
- Extensible Markup Language (XML)
- YAML Ain't Markup Language (YAML)

Table 1-1 compares the main purposes and common uses of these data formats.

Table 1-1 Data Format Comparison

Data Format	Origin/Definition	Central Purpose	Common Use
JSON	JavaScript (JS) language; RFC 8259	General data modeling and serialization	REST APIs
XML	World Wide Web Consortium (W3C.org)	Data-focused text markup, which allows data modeling	REST APIs, web pages
YAML	YAML.org	General data modeling	Ansible

Each data format has specific characteristics:

- Syntax, which includes the types of brackets used, such as [], (), and { }, the use of whitespace, indentation, quotes, commas, and more.
- How objects are represented, such as characters, strings, lists, and arrays.
- How key/value pairs are represented. The key, which is usually on the left side, identifies or describes the data. The value on the right is the data itself and can be a character, a string, a number, a list, or another type of data.

The data format that is selected depends on the format used by the application, tool, or script involved. However, the CCNA exam focuses specifically on the interpretation of JSON data.

JSON Data Format

JSON is a human-readable data format used by applications for storing, transferring, and reading data. It is easy to parse and can be used with most modern programming languages, including Python.

Example 1-1 shows partial IOS output from the **show interface GigabitEthernet0/0/0** command on a router.

Example 1-1 IOS Router Output

```
GigabitEthernet0/0/0 is up, line protocol is up (connected)
  Description: Wide Area Network
  Internet address is 172.16.0.2/24
```

Example 1-2 shows how this information can be represented in JSON format.

Example 1-2 JSON Output

```
{
  "ietf-interfaces:interface": {
    "name": "GigabitEthernet0/0/0",
    "description": "Wide Area Network",
    "enabled": true,
    "ietf-ip:ipv4": {
      "address": [
        {
          "ip": "172.16.0.2",
          "netmask": "255.255.255.0"
        }
      ]
    }
  }
}
```

JSON Syntax Rules

JSON data is a collection of key:value pairs that follow these rules:

- **Key:value pair:** One key:value pair
- **Key:** Text inside double quotes and before the colon that is used as the name that references a value
- **Value:** The item after the colon that represents the value of the key, which can be
 - **Text:** Listed in double quotes
 - **Numeric:** Listed without quotes
 - **Array:** A list of values enclosed in square brackets []
 - **Object:** One or more key:value pairs enclosed in braces { }
- **Multiple Pairs:** When listing multiple key:value pairs, separate the pairs with a comma at the end of each pair (except the last one)

A list of IPv4 addresses might look as shown in Example 1-3. The key here is addresses. The value is an array. Inside the array, each item is a separate object, and those objects are separated by braces { }. The objects are two key:value pairs: an IPv4 address (ip) and a subnet mask (netmask) separated by a comma. The objects in the array are also separated by commas, with a comma following the closing brace for each object. After all the items in the array are defined, the array is closed with the right bracket.

Example 1-3 JSON List of IPv4 Addresses

```
{
  "addresses": [
    {
      "ip": "172.16.0.2",
      "netmask": "255.255.255.0"
    },
    {
      "ip": "172.16.0.3",
      "netmask": "255.255.255.0"
    },
    {
      "ip": "172.16.0.4",
      "netmask": "255.255.255.0"
    }
  ]
}
```

RESTful APIs

APIs exist to allow two programs to exchange data. Some APIs are for interprogram communications within a single operating system (OS). Other APIs are available to programs that run on other computers. These APIs must define the networking protocol. Many are based on REST.

REST is an architectural style for designing web service applications. A REST API is an API that works on top of the HTTP protocol. It defines a set of functions developers can use to perform requests and receive responses through HTTP, such as GET and POST. An API can be considered RESTful if it has the following features:

- **Client/server:** The client handles the front end, and the server handles the back end. Either can be replaced independently of the other.
- **Stateless:** No client data is stored on the server between requests. The session state is stored on the client.
- **Cacheable:** Clients can cache responses to improve performance.

RESTful Implementation

A RESTful web service is a collection of resources with four defined aspects:

- The data format supported by the web service, which is often JSON, XML, or YAML
- The set of operations supported by the web service using HTTP methods
- The API, which must be hypertext driven
- The base uniform resource identifier (URI) for the web service, such as <http://example.com/> resources

RESTful APIs use common HTTP methods, including POST, GET, PUT, PATCH, and DELETE. As shown in Table 1-2, these methods correspond to RESTful operations: create, read, update, and delete (or CRUD).

Table 1-2 HTTP Methods and RESTful Operation

HTTP Method	RESTful Operation
POST	Create
GET	Read
PUT/PATCH	Update
DELETE	Delete


RESTful API Requests

A RESTful API is requested by using a URI, which is a string of characters that identifies a specific network resource. As shown in the Figure 1-1, a URI has two specializations:

- **Uniform resource name (URN):** Identifies only the namespace of the resource without reference to the protocol.

- **Uniform resource locator (URL):** Defines the network location of a specific resource on the network.

Figure 1-1 Structure of a URI

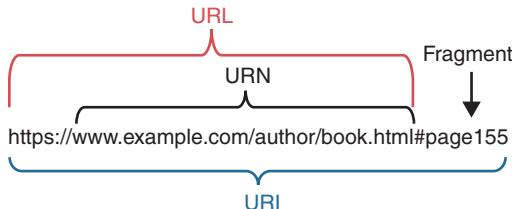


These are the parts of a URI, as shown in Figure 1-1:

- **Protocol/scheme:** HTTPS or another protocol, such as FTP, SFTP, mailto, or NNTP
- **Hostname:** In this case, www.example.com
- **Path and file name:** In this case, /author/book.html
- **Fragment:** In this case, #page155

A RESTful API request elicits a response from the API server. For example, the URI in Figure 1-2 is a properly formed GET request to the MapQuest API server for directions from San Jose to Monterey in JSON format.

Figure 1-2 RESTful API Request to the MapQuest API Server

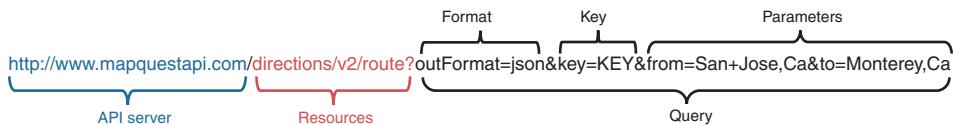

These are the different parts of the API request:

- **API server:** The URL for the server that answers REST requests.
- **Resources:** Specifies the API that is being requested.
- **Query:** Specifies the data format and information the client is requesting from the API service. Queries can include
 - **Format:** This is usually JSON but can be YAML or XML.
 - **Key:** The key is for authorization, if required.
 - **Parameters:** Parameters are used to send information pertaining to the request.

The beginning of the JSON payload delivered by the request in Figure 1-2 would look as shown in Example 1-4.

Example 1-4 JSON Payload Received from an API Request

```
{  
    "route": {  
        "hasTollRoad": false,  
        "hasBridge": true,  
        "boundingBox": {  
            "lr": {  
                "lng": -121.667061,  
                "lat": 36.596809  
            },  
            "ul": {  
                "lng": -121.897125,  
                "lat": 37.335358  
            }  
        },  
        "distance": 71.712,  
        "hasTimedRestriction": false,  
        "hasTunnel": false,  
        "hasHighway": true,  
        "computedWaypoints": [],  
        "routeError": {  
            "errorCode": -400,  
            "message": ""  
        },  
        (output omitted)  
    }  
}
```

NOTE: Access to the MapQuest API is free for limited use. Visit <https://developer.mapquest.com> to sign up for an account. Investigate the Documentation section of the website for a wealth of examples.

Configuration Management Tools

A company with one network engineer might be fine managing device configurations, especially if the configurations do not change often. The manual per-device configuration model makes great sense. With that model, the one network engineer can use the on-device startup-config as the intended ideal configuration, and he or she can make changes as needed. However, this method does not work as well for larger networks, with hundreds or even thousands of network devices and multiple network engineers. Larger networks typically make use of configuration management tools.


Configuration management tools provide different methods to define logic and processes that indicate what changes the tools should make, to which devices, and when. For each tool, engineers use a language of some kind to define the action steps. The language is often a language defined by the company offering the tool, but the tool's language is generally much easier to learn than a programming language.

Configuration tools specified for the CCNA exam are Ansible, Puppet, and Chef.

Ansible

Ansible uses an agentless architecture to manage network devices. *Agentless* means that the network device does not need code. Ansible uses SSH or NETCONF to make changes and extract information. Ansible uses a push model, as shown in Figure 1-3.

Figure 1-3 Ansible Push Model

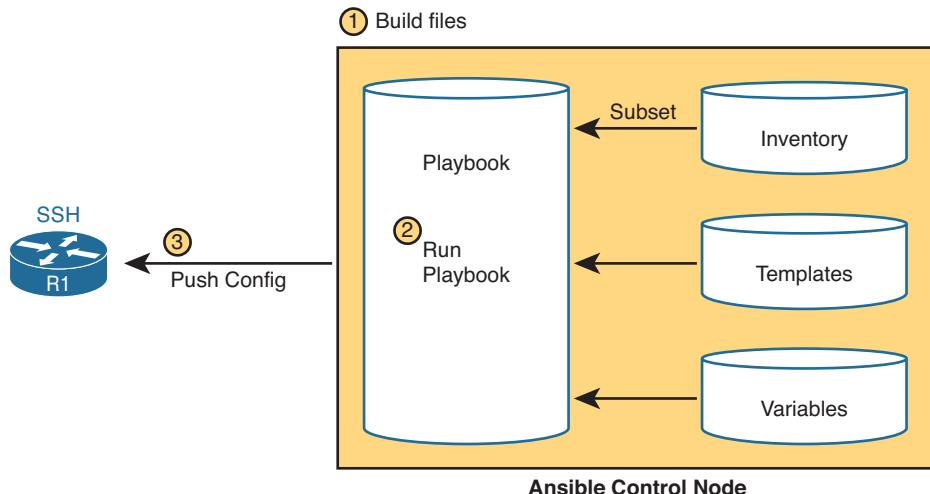


Ansible uses several text files, as shown in Figure 1-3:

- **Playbooks:** Files with actions and logic about what Ansible should do
- **Inventory:** Device hostnames along with information about each device, such as device roles, so Ansible can perform functions for subsets of the inventory
- **Templates:** A device configuration with variables
- **Variables:** A list of YAML variables that Ansible will substitute into templates


In Figure 1-3, the engineer builds all the necessary files (1). Then the engineer tells the Ansible control server to run a playbook (2), which then gets pushed to the device (3) or devices.

Puppet

Puppet typically uses an agent-based architecture for network device support. Some network devices enable Puppet support through an on-device agent. However, not every Cisco OS supports Puppet agents, and Puppet solves that problem using a proxy agent running on some external host (called *agentless operation*). The external agent then uses SSH to communicate with the network device, as shown in Figure 1-4.

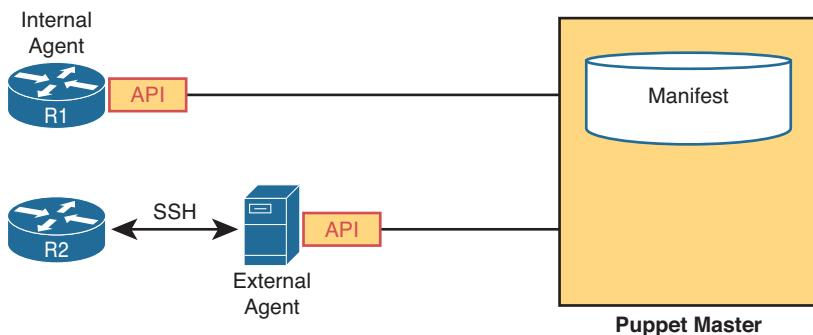Figure 1-4 Agent-Based or Agentless Operation for Puppet

Puppet uses a pull model to get a configuration to appear in the device, as shown in Figure 1-5.

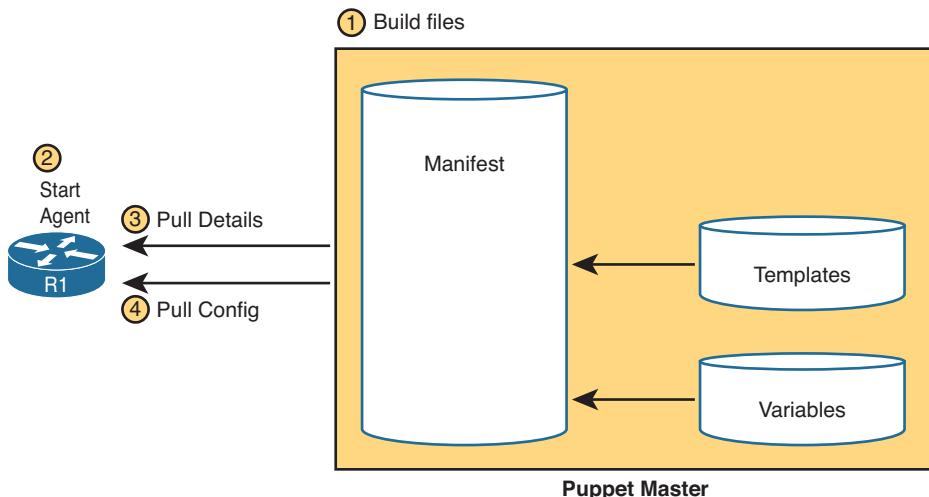Figure 1-5 Puppet Pull Model

Puppet uses several important text files with different components (refer to Figure 1-5):

- **Manifest:** A human-readable text file that defines the desired configuration state of a device
- **Resource, class, and module:** Components of the manifest, with the largest component (module) being comprised of smaller classes, which are in turn comprised of resources
- **Template:** A file used to create a manifest, with variable names that will be substituted

In Figure 1-5, the engineer builds all the necessary files (1) and configures the device agent or external agent (2). The agent or its proxy then pulls the configuration details (3) and updates the configuration (4), when needed.

Chef

Chef, like Puppet, uses an agent-based architecture. Chef uses several important text files:

- **Resource:** A configuration object whose state is managed by Chef (for instance, a set of configuration commands for a network device)
- **Recipe:** The Chef logic applied to resources to determine when, how, and whether to act against the resources
- **Cookbook:** A set of recipes about the same kinds of work, grouped together for easier management and sharing
- **Runlist:** An ordered list of recipes that should be run against a given device

Chef requires on-device Chef client code, and many Cisco devices do not support Chef clients, so you will likely see more use of Ansible and Puppet for Cisco device configuration management.

Table 1-3 summarizes some of the most important features of Ansible, Puppet, and Chef.

Table 1-3 Ansible, Puppet, and Chef Comparison

Feature	Ansible	Puppet	Chef
Term for the file that lists actions	Playbook	Manifest	Recipe, runlist
Protocol used to communicate with network devices	SSH, NETCONF	HTTP (REST)	HTTP (REST)
Uses agent or agentless model?	Agentless	Agent*	Agent
Uses a push or pull model?	Push	Pull	Pull

* Puppet can use an in-device agent or an external proxy agent for network devices.

Study Resources

For today's exam topics, refer to the following resources for more study.

Resource	Module or Chapter
Enterprise Networking, Security, and Automation	14
CCNA 200-301 Official Cert Guide, Volume 2	16
	17
	18
	19

This page intentionally left blank

Exam Day

Today is your opportunity to prove that you have what it takes to manage a small enterprise branch network. Just 120 minutes stand between you and your CCNA certification. Use the following information to focus on the process details for the day of your CCNA exam.

What You Need for the Exam

Write down the exam location, date, exam time, exam center phone number, and proctor's name. Here's what will happen when you get to the exam center:

- You must have two forms of ID that include a photo and signature, such as a driver's license, passport, or military identification. In addition, the test center admission process requires the capture of a digital photo and digital signature.
- The test proctor will take you through the agreement and set up your testing station after you have signed the agreement.
- The test proctor will give you a sheet for scratch paper or a dry erase pad. Do not take these out of the room.
- The testing center will store any personal items while you take the exam. It is best to bring only what you need.
- You will be monitored during the entire exam.

What You Should Receive After Completion

When you complete the exam, you will see an immediate electronic response about whether you passed or failed. The proctor will give you a certified score report with the following important information:

- The minimum passing score, your score on the exam, and a breakout displaying your percentage for each general exam topic
- Identification information required to track your certification

Do not lose your certified examination score report.

Summary

Your state of mind is a key factor in your success on the CCNA exam. If you know the details of the exam topics and the details of the exam process, you can begin the exam with confidence and focus. Arrive early to the exam. Bring earplugs just in case a testing neighbor has a bad cough or any loud nervous habits. Do not let an extremely difficult or specific question impede your progress. You cannot return to questions on the exam that you have already answered, so answer each question confidently and move on.

This page intentionally left blank

Post-Exam Information

Signing up for and actually taking the CCNA exam is no small accomplishment. Many network engineers have avoided certification exams for years. The following sections discuss your options after exam day.

Receiving Your Certificate

If you passed the exam, you will receive your official CCNA certificate in about 6 weeks (8 weeks internationally) after exam day. Your certificate will be mailed to the address you provided when you registered for the exam.

You need your examination score report to access the certification tracking system and set up a login to check your certification status. If you do not receive your certificate, you can open a case in the certificate online support located at the following web address:

<https://ciscocert.secure.force.com/english/MainPage>

When you receive your certificate, you might want to frame it and put it on a wall. A certificate on a wall is much harder to lose than a certificate in a filing cabinet or random folder. You never know when an employer or academic institution could request a copy.

Your CCNA is valid for 3 years. To keep your certificate valid, you must either pass the CCNA exam again or pass a more advanced certification before the end of the 3-year period.

Determining Career Options

After you pass the CCNA exam, be sure to add your CCNA certification to your resumé. Matthew Moran provides the following advice for adding certifications to a resumé in his book *Building Your I.T. Career: A Complete Toolkit for a Dynamic Career in Any Economy*, 2nd edition (Pearson IT Certification, 2013, ISBN: 9780789749437):

I don't believe you should place your certifications after your name. It is presumptuous to pretend that your latest certification is the equivalent to someone who has spent 4–7 years pursuing a Ph.D. or some other advanced degree. Instead, place your certifications or degrees in a section titled *Education and Certifications*. A master's degree might be the exception to this rule.

Moran also discusses good strategies for breaking into the IT industry after you have earned your CCNA:

The most important factor is that you are moving toward a career goal. You might not get the title or job you want right out of school. If you can master those skills at your current position, while simultaneously building your network of contacts that lead to your dream position, you should be satisfied. You must build your career piece by piece. It won't happen all at once.

Moran outlines in his book that certifications such as the CCNA are part of an overall professional skill set that you must continually enhance to further your IT career.

Your CCNA certificate proves that you are disciplined enough to commit to a rigorous course of study and follow through with your professional goals. You won't likely be hired simply because you have a CCNA, but you will be placed ahead of other candidates. To supplement the CCNA certification on your resumé, be sure to highlight any networking skills that pertain to the CCNA in the job and skills descriptions on your resumé.

Examining Certification Options

Passing the CCNA exam is no easy task, but it is the starting point for more advanced Cisco certifications, such as CCNP-level exams. When you log in to the online certification tracking tool (use the exam report to do this), be sure to view the Certification Progress link. This link provides specific information about certifications you can achieve with CCNA as the base.

If You Did Not Pass the Exam

If you did not pass your first attempt at the CCNA, you must wait at least 5 calendar days after the day of the exam to retest. Stay motivated and sign up to take the exam again within 30 days of your first attempt. The score report outlines your weaknesses. Find a study group and use The Cisco Learning Network (<http://learningnetwork.cisco.com>) online community to help you with those topics.

If you are familiar with the general concepts, focus on taking practice exams and memorizing the small details that make the exam so difficult. If you are a Cisco Networking Academy alumnus, you have access to the curriculum. Packet Tracer also provides an excellent network simulator. Consider your first attempt as a formal practice exam and excellent preparation to pass the second attempt.

Summary

Whether you display your certificate and update your resumé or prepare to conquer the exam on your second attempt, remember to marvel at the innovation and creativity behind each concept you learn. The ability of our society to continually improve communication will keep you learning, discovering, and employed for a lifetime.

Index

SYMBOLS

3DES (Triple DES), 338
10BASE-2, 33–35
10BASE-5, 33–35
10BASE-T, 35
pin pairs, 36
10GBASE-S, 35
10GBASE-T, 35
100BASE-TX, 35
pin pairs, 36
802.1X, 179–181
802.1X/EAP, 160
802.11 standards, 151–152
802.3. *See* Ethernet
1000BASE-LX, 35
1000BASE-T, 35

A

AAA (authentication, authorization, and accounting), 178–179
access attacks, 290
access control, 175
802.1X, 179–181
AAA, 178–179
local authentication, 175–176
SSH configuration, 176–177
switch port hardening, 178
access layer (hierarchical campus design), 25
access layer switches, 14
ACI (Application Centric Infrastructure), 386
ACLs (access control lists)
defining, 295
design guidelines, 299
extended named IPv4
adding comments, 306
configuring, 306
verifying, 307–308
extended numbered IPv4
adding comments, 306
configuring, 303–305
verifying, 307–308
identification, 298–299
inbound/outbound, 295–296
IPv6 ACLs
configuring, 309–311
IPv4 ACLs versus, 308–309
verifying, 311–313
list logic, 296–297
operational overview, 295
standard named IPv4
adding comments, 306
configuring, 305–306
verifying, 307–308
standard numbered IPv4
adding comments, 306
configuring, 301–303
verifying, 307–308
troubleshooting, 313–314
types of, 298
ad hoc mode, 154
addressing (Ethernet), 37–38
addressing (IPv4). *See* IPv4 addressing
addressing (IPv6). *See* IPv6 addressing
administrative distance, 201–203
advanced certifications, 410
adware, 288
AES (Advanced Encryption Standard), 161, 338
AF (Assured Forwarding), 346–347
aging port security, 183–184
AH (Authentication Header), 340
allowing. *See* permitting
AMP (Advanced Malware Protection), 173
amplification and reflection attacks, 292
Ansible, 403
anycast addresses, 75
AP architectures, 155–157
APIC (Application Policy Infrastructure Controller), 386
APIC-EM (APIC Enterprise Module), 387–388
APIs, RESTful, 400–402
Application Centric Infrastructure (ACI), 386
application layer (OSI), 2

application layer (TCP/IP), 3, 5
Application Policy Infrastructure Controller (APIC), 386
APs (wireless access points), 18–20
ARP (Address Resolution Protocol), 4
 attack mitigation, 191–193
 types of attacks, 190–191
assets, 285
assigned multicast addresses, 73–74
Assured Forwarding (AF), 346–347
asymmetric switching, 32
attack vectors, 286
attacks. *See also threat mitigation*
 access attacks, 290
 DoS and DDoS attacks, 291
 IP attacks, 291–292
 reconnaissance attacks, 289
 social engineering attacks, 290–291
 transport layer attacks, 292
 types of, 287–288
authentication
 802.1X, 179–181
 AAA, 178–179
 local, 175–176
 VPNs, 340
 WLANs, 158–161
Authentication Header (AH), 340
auto-cost reference-bandwidth command, 269
automation. *See network automation*
auto-MDIX, 47–48
autonomous AP architecture, 155

B

backing up Cisco IOS images, 376
baiting, 291
band of frequencies, 150–151
bandwidth, 343
bandwidth command, 270
banner command, 210
BDR (backup designated router), 259, 279–281
BID (bridge ID)
 configuring and verifying, 108–110
 PVST+, 104–105
binary, converting to/from decimal, 57

black hole VLANs, 84–85
botnet, 291
BPDU Guard, configuring, 110–111
BRI (Basic Rate Interface), 328
bridges, 29
broadcast addresses, 38
 listing, 60–61
broadcast domains, 31
BSA (basic service area), 153
BSS (basic service set), 153
BSSID (basic service set identifier), 153
buffer overflow attacks, 290

C

cable modems, 331
cabling
 connection guidelines, 22
 copper, 21
 fiber-optic, 21
 standards, 22
 UTP, 36–37
 wireless, 21
CAPWAP (Control and Provisioning of Wireless Access Points), 157–158
career options, 409–410
CBWFQ (Class-Based Weighted Fair Queueing), 347
CDP (Cisco Discovery Protocol)
 configuring, 352–354
 operational overview, 351–352
 verifying, 354–356
cdp holdtime command, 354
cdp time command, 354
cellular service, 332
certificate, receiving, 409
certifications
 advanced, 410
 on resumé, 409–410
certified score report, 407
channels, 150–151
Chef, 405
choosing
 network media, 21
 routers, 15
 switches, 14
 WAN connections, 332

- circuit-switched WAN connections**, 328–329
- Cisco DNA Center**
network management platform, 394–395
purpose of, 391–392
SDA and, 392–393
- Cisco ESA**, 173–174
- Cisco IOS**
basic configuration commands, 45–47
command history, 44
console error messages, 43
EXEC sessions, 42
help facilities, 42–43
IFS (Integrated File System), 371
commands, 371–373
configuration file management, 374–375
URL prefixes, 373–374
images, 375
backing up, 376
restoring, 376–377
navigating and editing commands, 43–44
show commands, 44–45
subconfiguration modes, 45
- Cisco WSA**, 174–175
- Class-Based Weighted Fair Queueing (CBWFQ)**, 347
- classes (IPv4 addressing)**, 56–57
- classful routing protocols**, 200
- classification**, 344–347
- classless routing protocols**, 200
- clear ip nat translation command**, 323
- clear ip ospf process command**, 281, 283
- clients (DHCPv4), configuring**, 133–134
- cloud computing**
benefits of, 379
services, 381–382
virtual network infrastructure, 382–383
- cloud-based AP architecture**, 155–156
- collision domains**, 31
- commands (Cisco IOS)**
basic configuration commands, 45–47
command history, 44
navigating and editing, 43–44
show commands, 44–45
subconfiguration modes, 45
- comments, adding to IPv4 ACLs**, 306
- community clouds**, 382
- compromised-key attacks**, 288
- configuration management tools**, 402
Ansible, 403
Chef, 405
comparison of, 405
Puppet, 403–404
- configure terminal command**, 45
- configuring**
ACLs
extended named IPv4, 306
extended numbered IPv4, 303–305
IPv6, 309–311
standard named IPv4, 305–306
standard numbered IPv4, 301–303
CDP, 352–354
default routing
IPv4, 245–248
IPv6, 252
DHCP snooping, 189–190
DHCPv4
as client, 133–134
options, 128
to relay requests, 132–133
as server, 128–132
DHCPv6
options, 137
as stateful server, 139
as stateless server, 137–139
dynamic ARP inspection (DAI), 192–193
dynamic NAT, 320–321
EtherChannel, 116–117
HSRP, 122–123
Layer 3 routed ports, 240
LLDP, 357–358
multilayer switching, 238
NAT overload, 321–322
NTP, 370–371
OSPFv2, 275–277
port security, 181–183
Rapid PVST+, 111
router on a stick, 235–238
routers
command syntax, 210, 217–218
EUI-64 configuration, 218
with IPv4, 209–217
with IPv6, 217–220
link-local addresses, 219
verification, 212–217
single-area OSPF, 265–270
metrics, 268–270
network command, 267–268

passive interfaces, 268
router ID, 266–267
router ospf command, 266
SNMP, 364
SSH, 176–177
static NAT, 319–320
static routing
 IPv4, 242–243
 IPv6, 251
STP, 108
 bridge ID (BID), 108–110
 PortFast and BPDU Guard, 110–111
summary routing
 IPv4, 248–249
 IPv6, 253
switches, 41
 auto-MDIX, 47–48
 basic configuration commands, 45–47
 command history, 44
 EXEC sessions, 42
 half duplex, full duplex, port speed, 47
 help facilities, 42–43
 navigating and editing commands, 43–44
 show commands, 44–45
 subconfiguration modes, 45
 verifying connectivity, 48–51
syslog, 367–369
trunking, 92–94
VLANs, 88–92, 185–186
WLANs, 165
 RADIUS server, 166
 virtual interface, 166–168
 WPA2 Enterprise, 168–171
congestion management, 347
connecting to switches, 41–42
connection establishment (TCP), 9
connection termination (TCP), 9
connectionless protocols, 9–10
connections
 for VPNs, 337–340
 for WANs, 23, 326–327
 choosing, 332
 circuit-switched, 328–329
 dedicated, 327–328
 Internet, 330–332
 packet-switched, 329–330
connectivity, verifying, 48–51, 220–223
console error messages, 43

control plane, 383–384
controllers, 384–385
convergence
 with link-state protocols, 206–207
 in STP, 101–102
converting binary/decimal numbers, 57
copper cable, 20, 21
copy command, 374–375
copy run start command, 212
copy running-config startup-config command, 210, 212
core layer (hierarchical campus design), 25
core layer switches, 14–15
CSMA/CD, 34–35
cut-through switching, 31

D

DAI (dynamic ARP inspection), 191–193
data encapsulation. *See* encapsulation
Data Encryption Standard (DES), 338
data exfiltration, 286
data formats
 comparison of, 397–398
 JSON, 398–399
data link layer (OSI), 2
data modification attacks, 287
data plane, 383–384
data VLANs, 84
DDoS (distributed denial of service) attacks, 291
dead intervals, modifying, 278
debug ip nat command, 323–324
debuggers, 287
decimal, converting to/from binary, 57
dedicated WAN connections, 327–328
default gateways, troubleshooting, 224–225
default IEEE port costs, 101–102
default routing
 IPv4, configuring, 245–248
 IPv6, configuring, 252

- operational overview, 241
- redistribution, 277
- default VLANs**, 84
- default-information originate command**, 277
- denial of service (DoS) attacks**, 287, 291
- denying**
 - FTP, 304
 - hosts, 302, 305–306
 - SSH, 303
 - subnets, 303
 - Telnet, 303, 304–305
- DES (Data Encryption Standard)**, 338
- description command**, 210
- designated router (DR)**, 259, 279–281
- device hardening**. *See security*
- devices**
 - connection guidelines, 22
 - firewalls, 16
 - hubs versus switches, 13
 - IDS/IPS, 17
 - next-generation firewalls, 17–18
 - physical connections, 20
 - routers. *See routers*
 - switches. *See switches*
 - wireless access points/LAN controllers, 18–20
- DHCP (Dynamic Host Configuration Protocol)**, 3
 - attacks
 - mitigation*, 188–190
 - types of*, 188
 - troubleshooting, 140
- DHCPv4**
 - configuring
 - as client*, 133–134
 - options*, 128
 - to relay requests*, 132–133
 - as server*, 128–132
 - operational overview, 127–128
- DHCPv6**
 - stateful, 136
 - configuring*, 139
 - operational overview*, 136–137
 - stateless, 136
 - configuring*, 137–139
 - operational overview*, 136–137
- Differentiated Services Code Point (DSCP)**, 345–346
- Digital Subscriber Line (DSL)**, 330–331
- Dijkstra algorithm**, 205–206
- dir command**, 372–373, 376–377
- disabling VLANs**, 96
- distance vector protocols**, 198–199
 - administrative distance, 201–203
 - IGP comparison summary, 203
 - metrics, 200–201
- distributed denial of service (DDoS) attacks**, 291
- distribution layer (hierarchical campus design)**, 25
- distribution layer switches**, 14
- distribution system (DS)**, 153
- DMVPN (Dynamic Multipoint VPN)**, 335–336
- DNS (Domain Name System)**, 3
 - operational overview, 140–142
 - troubleshooting, 142–143
- DoS (denial of service) attacks**, 287, 291
- DR (designated router)**, 259, 279–281
- DS (distribution system)**, 153
- DSCP (Differentiated Services Code Point)**, 345–346
- DSL (Digital Subscriber Line)**, 330–331
- DTP (Dynamic Trunking Protocol)**, 87–88
- dual-homed WANs**, 325
- dual-stacking**, 80–81
- dumpster diving**, 291
- duplex command**, 47, 52
- duplicate IP addresses, troubleshooting**, 225
- dynamic ARP inspection (DAI)**, 191–193
- Dynamic Host Configuration Protocol**. *See DHCP (Dynamic Host Configuration Protocol)*
- Dynamic Multipoint VPN (DMVPN)**, 335–336
- dynamic NAT**, 318
 - configuring, 320–321
- dynamic routing**
 - administrative distance, 201–203
 - classful protocols, 200
 - classless protocols, 200

convergence, 206–207
 Dijkstra algorithm, 205–206
 distance vector protocols, 198–199
 IGP and EGP, 198
 IGP comparison summary, 203
 link-state protocols, 199, 204–207
 LSDB, building, 204–205
 metrics, 200–201
 protocol types, 198
 routing loop prevention, 203–204
 static routing versus, 197

Dynamic Trunking Protocol (DTP), 87–88

E

eavesdropping attacks, 287
 edge ports, RSTP, 107
 editing Cisco IOS commands, 43–44
EF (Expedited Forwarding), 346–347
EGP (exterior gateway protocols), 198
EIGRP (Enhanced Interior Gateway Routing Protocol), 203
enable secret command, 210
encapsulation, 4–5, 12
encryption
 tools, 287
 VPNs, 338
 WLANs, 161–162
endpoint security, 173
 Cisco ESA, 173–174
 Cisco WSA, 174–175
error recovery, 7–8
ESP (Encapsulating Security Payload), 341
ESS (extended service set), 154
EtherChannel
 benefits of, 114
 configuring, 116–117
 operational overview, 113–114
 protocols, 115–116
 restrictions, 114
 troubleshooting, 119
 verifying, 117–119
Ethernet, 4
 addressing, 37–38
 current technologies, 35
 framing, 38–39

legacy technologies, 33–35
 operational overview, 32–33
 switches. *See* switches
 UTP cabling, 36–37

EUI-64 configuration, 78–79, 218

exam

after completion, 407
 certified score report, 407
 failed, 410
 receiving certificate, 409
 what to bring, 407

EXEC sessions, 42

exit-interface parameter, IPv4 static routing, 244–245

Expedited Forwarding (EF), 346–347

exploits, 285

extended IPv6 ACLs, configuring, 310–311

extended named IPv4 ACLs

adding comments, 306
 configuring, 306
 verifying, 307–308

extended numbered IPv4 ACLs

adding comments, 306
 configuring, 303–305
 verifying, 307–308

extended service set (ESS), 154

extended system ID, PVST+, 104–105

exterior gateway protocols (EGP), 198

F

fabric, 390
failed exam, 410
Fast Ethernet, 35
FHRPs (first-hop redundancy protocols), 119–120
fiber-optic cable, 20, 21
firewalls, 16
 next-generation, 17–18
flow control, 8
forensic tools, 287
fragment-free mode, 32
frame forwarding, 31–32
framing (Ethernet), 38–39

FTP (File Transfer Protocol), 3
denying, 304
full duplex, 47
full mesh WANs, 325

G

GCMP (Galois/Counter Mode Protocol), 161
Gigabit Ethernet, 35
GLBP (Gateway Load Balancing Protocol), 120
global unicast addresses, 68–70
GRE (Generic Routing Encapsulation), 334

H

hacking operating systems, 287
half duplex, 47
hashes, 338–340
header (TCP), 6
header format (IPv4), 55
hello intervals, modifying, 278
help facilities in Cisco IOS, 42–43
hierarchical campus designs, 25–27
host ID (IPv4), 55
host IP settings, 143
 on Linux, 146–148
 on macOS, 145–146
 on Windows, 143–145
host ranges, listing, 60–61
hostname command, 210
hosts, denying, 302, 305–306
hot keys for Cisco IOS commands, 43–44
HSRP (Hot Standby Router Protocol), 120
 configuring and verifying, 122–123
 load balancing, 123–125
 operational overview, 121
 priority and preemption, 122
 troubleshooting, 126
 versions, 121
HTTP (Hypertext Transfer Protocol), 3
HTTP methods, RESTful APIs and, 400

hub-and-spoke WANs, 325
hubs
 limitations, 29
 switches versus, 13
hybrid clouds, 382

I

IaaS (Infrastructure as a Service), 382
IBSS (Independent Basic Service Set), 154
ICMP (Internet Control Message Protocol), 4
ICMP attacks, 292
icons for networking diagrams, 13
IDS (intrusion detection systems), 17
IFS (Integrated File System), 371
 commands, 371–373
 configuration file management, 374–375
 URL prefixes, 373–374
IGP (interior gateway protocols), 198, 203
IMAP (Internet Message Access Protocol), 3
impersonation, 291
inbound ACLs, 295–296
infrastructure mode, 152–154
interface ACLs, 295–296
interface command, 210
interface IDs, subnetting, 78
interface range command, 47
interface status codes, 52, 213–214
Internet layer (TCP/IP), 3, 10
Internet Protocol (IP), 4
Internet WAN connections, 330–332
internetworks, 23
inter-VLAN routing
 Layer 3 routed port configuration, 240
 legacy inter-VLAN routing, 233–234
 multilayer switching, 235
 configuring and verifying, 238
 router on a stick, 234
 configuring and verifying, 235–238
 SVIs, creating, 238–240
 types of, 233
intranets, 23
intrusion detection systems (IDS), 17

intrusion prevention systems (IPS), 17

IP (Internet Protocol), 4

ip address command, 210

IP address spoofing attacks, 287, 292

IP attacks, 291–292

ip helper-address command, 132–133

IP host settings. *See host IP settings*

ip ospf cost command, 270

ip ospf priority command, 279

ip route command, 242

ipconfig command, 48–49

IPP (IP Precedence), 345–346

IPS (intrusion prevention systems), 17

IPSec, 340–341

IPv4 addressing

- ACLs
 - adding comments,* 306
 - extended named configuration,* 306
 - extended numbered configuration,* 303–305
 - IPv6 ACLs versus,* 308–309
 - standard named configuration,* 305–306
 - standard numbered configuration,* 301–303
 - verifying,* 307–308
- classes of addresses, 56–57
- default routing, configuring, 245–248
- header format, 55
- IPv6 addressing versus, 66
- JSON format, 399
- migrating to IPv6, 80–81
- private/public addressing, 58
- resolving conflicts, 140
- router configuration, 209–217
 - command syntax,* 210
 - verification,* 212–217
 - verifying connectivity,* 220–223
- routing table, 229–230
- static routing
 - configuring,* 242–243
 - exit-interface parameter,* 244–245
 - next-hop parameter,* 244
- subnetting
 - addressing scheme, listing,* 60–61
 - bits to borrow, determining,* 59–60
 - examples,* 61–62
 - purpose of subnet masks,* 57–58
 - steps in,* 58–59
 - subnet masks, determining new,* 60
 - subnet multiplier, determining,* 60
 - VLSM,* 62–64

summary routing, configuring, 248–249
troubleshooting, 224–225

IPv4 embedded addresses, 72–73

ipv6 access-list command, 309

ipv6 address autoconfig command, 138

ipv6 address dhcp command, 139

IPv6 addressing

ACLs

configuring, 309–311

IPv4 ACLs versus, 308–309

verifying, 311–313

address conventions, 76

address types, 67–68

anycast addresses, 75

benefits of, 65–66

default routing, configuring, 252

EUI-64 configuration, 78–79

IPv4 addressing versus, 66

migrating to, 80–81

multicast addresses, 73–75

assigned, 73–74

solicited-node, 74–75

prefix conventions, 76–77

router configuration, 217–220

command syntax, 217–218

EUI-64 configuration, 218

link-local addresses, 219

verifying connectivity, 220–223

routing table, 230

SLAAC, 79–80

static routing

configuring, 251

operational overview, 249–250

subnetting, 77–78

summary routing, configuring, 253

troubleshooting, 224–225

unicast addresses, 68–73

global, 68–70

IPv4 embedded, 72–73

link-local, 71

loopback, 71

unique local, 72

unspecified, 71

ipv6 route command, 251

J

jitter, 343

JSON (JavaScript Object Notation), 398–399

L

LACP (Link Aggregation Control Protocol), 115–116

LANs (local-area networks)

- components of, 23
- threat mitigation
 - ARP*, 190–193
 - DHCP*, 188–190
 - VLANs*, 185–187
- latency (delay), 343
- Layer 1 problem indicators, 54
- Layer 2 switching, 32
- Layer 3 routed ports, configuring, 240
- Layer 3 switching, 32
- layers (hierarchical campus design), 25–27
- layers (OSI)
 - list of, 2–3
 - PDUs, 4–5
 - physical, 39–40
- layers (TCP/IP)
 - application, 5
 - encapsulation summary, 12
 - Internet, 10
 - list of, 3
 - network access, 10–12
 - transport, 5–10
- leased lines, 327–328
- legacy Ethernet technologies, 33–35
- legacy inter-VLAN routing, 233–234
- lightweight AP architecture, 156–157
- line console command, 210
- line vty 0 15 command, 210
- Link Aggregation Control Protocol (LACP), 115–116
- link-local addresses, 71, 219
- link-state advertisements (LSAs), 258–261, 278–279
- link-state database (LSDB), 204–205
- link-state protocols, 199, 204–207
 - convergence, 206–207
 - Dijkstra algorithm, 205–206
 - LSDB, building, 204–205
- link-state routing process, OSPF, 260–261
- Linux, verifying host IP settings, 146–148

list logic of ACLs, 296–297

LLC (Logical Link Control) sublayer, 32–33

LLDP (Link Layer Discovery Protocol)

configuring, 357–358

operational overview, 357

verifying, 358–360

lldp holdtime command, 357

lldp reinit command, 357

lldp run command, 357

lldp timer command, 357

LLQ (Low Latency Queueing), 347

load balancing HSRP, 123–125

local authentication, 175–176

local-area networks. *See LANs (local-area networks)*

logging into WLC, 163–165

logical topologies, 24–25

login command, 210

login local command, 210

longest match, 227–228

loopback addresses, 71

loss, 343

LSAs (link-state advertisements), 258–261, 278–279

LSDB (link-state database), 204–205

M

MAC (Media Access Control) sublayer, 32, 33

macOS, verifying host IP settings, 145–146

malware, 288–289

management plane, 383–384

management VLANs, 85, 185–186

man-in-the-middle attacks, 288, 290, 292

marking, 344–347

media issues, troubleshooting, 51–52

memory buffering, 32

mesh topology, 154

messages (SNMP), 361–362

metrics

dynamic routing, 200–201

single-area OSPF, 268–270

Metro Ethernet, 329

MIB (Management Information Base), 362–363

mitigation. *See threat mitigation*

modifying OSPFv2

- default route redistribution, 277
- DR/BDR election, 279–281
- hello and dead intervals, 278

Moran, Matthew, 409–410

MPLS (Multiprotocol Label Switching), 330

MST (Multiple Spanning Tree), 102

MSTP (Multiple Spanning Tree Protocol), 102

multiarea OSPF, 262

- design, 262–264
- performance, 264

multicast addresses, 38, 73–75

- assigned, 73–74
- solicited-node, 74–75

multilayer switching, 235

- configuring and verifying, 238

municipal Wi-Fi, 332

N

named IPv4 ACLs

- adding comments, 306
- extended configuration, 306
- standard configuration, 305–306
- verifying, 307–308

NAT (Network Address Translation)

- benefits of, 319
- dynamic, 318
 - configuring*, 320–321
 - limitations, 319
 - overloading, 318–319
 - configuring*, 321–322
 - process overview, 317
 - static, 318
 - configuring*, 319–320
 - terminology, 315–317
 - troubleshooting, 323–324
 - verifying, 322–323

native VLANs, 85, 185–186

navigating Cisco IOS commands, 43–44

Neighbor Solicitation (NS) messages, 134

network access layer (TCP/IP), 3, 10–12

Network Address Translation. *See NAT (Network Address Translation)*

network attacks, 289

- access attacks, 290
- DoS and DDoS attacks, 291
- IP attacks, 291–292
- reconnaissance attacks, 289
- social engineering attacks, 290–291
- transport layer attacks, 292

network automation

- configuration management tools, 402
 - Ansible*, 403
 - Chef*, 405
 - comparison of*, 405
 - Puppet*, 403–404
- data formats
 - comparison of*, 397–398
 - JSON*, 398–399
- RESTful APIs, 400–402

network command, 267–268

network ID (IPv4), 55

network layer (OSI), 2

network media, 20–22

- choosing, 21
- copper, 21
- fiber-optic, 21
- standards, 22
- wireless, 21

network scanning/hacking tools, 286

networking icons, 13

networks, permitting, 302

next-hop parameter, IPv4 static routing, 244

NGFWs (next-generation firewalls), 17–18

no cdp enable command, 353–354

no cdp run command, 353

no lldp receive command, 357

no lldp transmit command, 357

no service dhcp command, 130

no shutdown command, 210

NS (Neighbor Solicitation) messages, 134

NTP (Network Time Protocol), 370–371

ntp server command, 370

numbered IPv4 ACLs

adding comments, 306
extended configuration, 303–305
standard configuration, 301–303
verifying, 307–308

O**Open Shortest Path First. *See* OSPF**

(Open Shortest Path First)

open system authentication, 159**OpenDaylight, 385–386****OpenFlow, 385–386****OpFlex, 386****OSI (Open Systems Interconnection) model, 1–2**

layers
list of, 2–3
physical, 39–40

PDUs, 4–5

OSPF (Open Shortest Path First), 203

multiarea, 262

design, 262–264

performance, 264

network types, 278–279

OSPFv2, OSPFv3 versus, 261–262

single-area, 255

algorithm, 259–260

configuring, 265–270

DR and BDR, 259

link-state advertisements, 258–261

link-state routing process, 260–261

message format, 255–256

neighbor establishment, 256–258

packet types, 256

verifying, 270–274

troubleshooting, 281–283

OSPFv2

configuration example, 275–277

modifying

default route redistribution, 277

DR/BDR election, 279–281

hello and dead intervals, 278

OSPFv3 versus, 261–262

single-area

configuring, 265–270

verifying, 270–274

OSPFv3, OSPFv2 versus, 261–262**outbound ACLs, 295–296****overlay, 390, 391****overloading NAT, 318–319, 321–322****P****PaaS (Platform as a Service), 382****packet crafting tools, 287****packet forwarding, 195, 228**

longest match, 227–228

path determination and switching functions, 196–197

packet sniffers, 287**packet-switched WAN connections, 329–330****PAgP (Port Aggregation Protocol), 115****passive interfaces, OSPF, 268****passive-interface command, 268****password command, 210****password crackers, 286****password recovery, 377–378****password-based attacks, 287, 290****path determination and switching functions, 196–197****PDUs (protocol data units), 4–5****penetration testing tools, 286–287****permitting**

networks, 302

SSH, 310

web traffic, 310–311

Per-VLAN Spanning Tree Plus. *See* PVST+ (Per-VLAN Spanning Tree Plus)**phishing, 290****physical connections, 20**

troubleshooting, 51–52

physical layer (OSI), 2, 39–40**physical topologies, 24–25****ping command, 48, 49–50**

successful, 220–221

unsuccessful, 221

Platform as a Service (PaaS), 382**point-to-point WANs, 325****policing, 347–349****POP3 (Post Office Protocol), 3****Port Aggregation Protocol (PAgP), 115****port hardening, 178**

port numbers, 7
port redirection, 290
port roles, RSTP, 106–107

port security, 181
aging, 183–184
configuring, 181–183
restoration, 184–185

port speed, 47

port states
PVST+, 104
RSTP, 105–106

port-based memory, 32
PortFast, configuring, 110–111

positive acknowledgment, 7
positive acknowledgment with retransmission, 8

Post Office Protocol (POP3), 3
preemption, HSRP, 122

prefixes (IPv6), 76–77
presentation layer (OSI), 2
pretexting, 290

PRI (Primary Rate Interface), 328
priority, HSRP, 122
private clouds, 382

private IP addressing, 58
protocol data units (PDUs), 4–5
protocols (TCP/IP), list of, 3–4

public clouds, 382

public IP addressing, 58

Puppet, 403–404

PVST+ (Per-VLAN Spanning Tree Plus), 102
extended system ID, 104–105
operational overview, 103–104
port states, 104

Q

QoS (quality of service)
classification and marking, 344–347
congestion management, 347
policing and shaping, 347–349
TCP discards, 349
tools, 344
traffic types, 343–344
quid pro quo attacks, 291

R

RA (Router Advertisement) messages, 134

radio frequencies. *See RF spectrum*

RADIUS (Remote Authentication Dial-In User Service), 178–179

RADIUS server, configuring, 166

ransomware, 288

Rapid PVST+, 102

configuring, 111
edge ports, 107
interface behavior, 105
operational overview, 105
port roles, 106–107
port states, 105–106

Rapid STP. *See RSTP (Rapid STP)*

receiving certificate, 409

reconnaissance attacks, 289

redundancy, 99–100

reference bandwidth, 268–269

relaying requests, DHCPv4, 132–133

reliability, 7–8

remote access with SSH, 222–223

remote-access VPNs, 334

RESTful APIs, 400–402

restoring

Cisco IOS images, 376–377
ports, 184–185

résumé, certifications on, 409–410

RF spectrum, 149–150

channels, 150–151

RIPv2 (Routing Information Protocol version 2), 203

risk, 285

Rivest, Shamir, and Adleman (RSA), 338

rootkit detectors, 287

rootkits, 289

Router Advertisement (RA) messages, 134

router ID, 266–267

router on a stick, 234

configuring and verifying, 235–238

router ospf command, 266

Router Solicitation (RS) messages, 134

router-id command, 266–267

routers, 15

configuring

- command syntax*, 210, 217–218
- EUI-64 configuration*, 218
- with IPv4*, 209–217
- with IPv6*, 217–220
- link-local addresses*, 219
- verification*, 212–217

default routing

- IPv4 configuration*, 245–248
- IPv6 configuration*, 252
- operational overview*, 241
- redistribution*, 277

dynamic routing

- administrative distance*, 201–203
- classful protocols*, 200
- classless protocols*, 200
- convergence*, 206–207
- Dijkstra algorithm*, 205–206
- distance vector protocols*, 198–199
- IGP and EGP*, 198
- IGP comparison summary*, 203
- link-state protocols*, 199, 204–207
- LSDB, building*, 204–205
- metrics*, 200–201
- protocol types*, 198
- routing loop prevention*, 203–204
- static routing versus*, 197

packet forwarding, 195, 228

- longest match*, 227–228

path determination and switching functions, 196–197

password recovery, 377–378

purpose of, 227

SOHO, 24, 223–224

static routing

- exit-interface parameter*, 244–245
- IPv4 configuration*, 242–243
- IPv6 configuration*, 249–251
- next-hop parameter*, 244
- operational overview*, 241

summary routing

- IPv4 configuration*, 248–249
- IPv6 configuration*, 253

verifying connectivity, 220–223

Routing Information Protocol

version 2 (RIPv2), 203

routing loop prevention, 203–204

routing tables

- components of*, 228–231
- entry structure*, 232
- longest match*, 227–228
- principles*, 231

RS (Router Solicitation) messages, 134

RSA (Rivest, Shamir, and Adleman), 338

RSTP (Rapid STP), 102

- configuring*, 111
- edge ports*, 107
- interface behavior*, 105
- operational overview*, 105
- port roles*, 106–107
- port states*, 105–106

S

SaaS (Software as a Service), 382

satellite Internet, 332

SDA (Software-Defined Access)

- architecture*, 389
- Cisco DNA Center and, 392–393
- fabric, 390
- overlay, 391
- underlay, 390–391

SDN (software-defined networking), 383

- ACI, 386
- APIC-EM, 387–388
- controllers, 384–385
- data, control, management planes, 383–384
- OpenFlow, 385–386
- spine and leaf design, 387

Secure Shell. See SSH (Secure Shell)

Secure Socket Layer (SSL), IPSec versus, 340

security

- access control*, 175
- 802.1X*, 179–181
- AAA*, 178–179
- local authentication*, 175–176
- SSH configuration*, 176–177
- switch port hardening*, 178
- attack types, 287–288
- attack vectors, 286
- data exfiltration, 286

- endpoint security, 173
 Cisco ESA, 173–174
 Cisco WSA, 174–175
IPSec, 340–341
malware types, 288–289
network attacks, 289
 access attacks, 290
 DoS and DDoS attacks, 291
 IP attacks, 291–292
 reconnaissance attacks, 289
 social engineering attacks, 290–291
 transport layer attacks, 292
password recovery, 377–378
penetration testing tools, 286–287
port security, 181
 aging, 183–184
 configuring, 181–183
 restoration, 184–185
programs, 293
terminology, 285
VPN connections, 337–340
WLANs, 158
 authentication, 158–161
 encryption, 161–162
- selecting.** *See choosing*
- server virtualization**, 379–381
- servers (DHCPv4)**, configuring, 128–132
- servers (DHCPv6)**, configuring stateless, 137–139
- service sequence-numbers command**, 367
- service set identifier (SSID)**, 153
- service timestamps command**, 367
- service-password encryption command**, 211
- session hijacking**, 292
- session layer (OSI)**, 2
- shaping**, 347–349
- shared key authentication**, 159–160
- shared memory**, 32
- shortcut keys for Cisco IOS commands**, 43–44
- shoulder surfing**, 291
- show access-lists command**, 307, 312
- show cdp command**, 353
- show cdp interface command**, 352, 354
- show cdp neighbors command**, 353
- show cdp neighbors detail command**, 354–356
- show cdp traffic command**, 356
- show commands (Cisco IOS)**, 44–45
- show etherchannel summary command**, 117–118
- show file systems command**, 371
- show flash: command**, 372, 376–377
- show history command**, 44
- show interface command output**, 215–217
- show interface gigabitethernet 0/0 command**, 214–215
- show interface GigabitEthernet0/0/0 command**, 398
- show interface status command**, 95
- show interface switchport command**, 118–119
- show interfaces command**, 210
- duplex and speed mismatches, 52–54
- interface status codes, 52
- interface VLAN assignment, 91–92
- show interfaces status command**, 52–54
- show interfaces switchport command**, 95, 98
- show interfaces trunk command**, 93–94, 97
- show ip dhcp binding command**, 130
- show ip dhcp conflict command**, 140
- show ip dhcp server statistics command**, 130
- show ip interface brief command**, 210, 213, 237–238, 270–272
- show ip interface command**, 307
- show ip nat statistics command**, 323
- show ip nat translations command**, 322
- show ip ospf command**, 266, 273–274, 283
- show ip ospf interface brief command**, 274
- show ip ospf interface command**, 283
- show ip ospf interfaces command**, 266
- show ip ospf neighbor command**, 272, 282
- show ip protocols command**, 202, 266, 270–272, 282

show ip route command, 200–201, 210, 212–213, 237–238, 270–272
show ip route ospf command, 283
show ipv6 access-list command, 312
show ipv6 interface command, 138, 313
show ipv6 interface gigabitethernet 0/0 command, 220
show ipv6 route command, 251
show lldp command, 358–360
show lldp interface command, 358–360
show lldp neighbors command, 358–360
show lldp neighbors detail command, 358–360
show lldp traffic command, 358–360
show logging command, 367–369
show mac address-table command, 95
show ntp associations command, 370–371
show ntp status command, 370–371
show port-security command, 182–183
show port-security interface command, 184
show run command, 117, 311–312, 323
show running-config command, 210, 212, 307–308
show snmp command, 364–365
show snmp community command, 365
show spanning-tree active command, 111
show spanning-tree bridge command, 111
show spanning-tree command, 110, 111
show spanning-tree detail command, 111
show spanning-tree interface command, 111
show spanning-tree summary command, 111
show spanning-tree vlan command, 111
show standby command, 122–123
show version command, 375
show vlan brief command, 88–89, 90, 91, 95
show vlan command, 95, 96
show vlan id command, 95
show vlans command, 237–238
Simple Mail Transfer Protocol (SMTP), 3
Simple Network Management Protocol. *See* **SNMP (Simple Network Management Protocol)**
single-area OSPF, 255
algorithm, 259–260
configuring, 265–270
metrics, 268–270
network command, 267–268
passive interfaces, 268
router ID, 266–267
router ospf command, 266
DR and BDR, 259
link-state advertisements, 258–261
link-state routing process, 260–261
message format, 255–256
neighbor establishment, 256–258
packet types, 256
verifying, 270–274
site-to-site VPNs, 333
SLAAC (stateless address autoconfiguration), 79–80, 134–135
SMTP (Simple Mail Transfer Protocol), 3
sniffer attacks, 288
SNMP (Simple Network Management Protocol), 3, 361
components of, 361
configuring, 364
messages, 361–362
MIB, 362–363
verifying, 364–365
versions, 362
snmp-server community command, 364
snooping (DHCP), 188–190
social engineering attacks, 290–291
Software as a Service (SaaS), 382
Software-Defined Access. *See* **SDA (Software-Defined Access)**
software-defined networking. *See* **SDN (software-defined networking)**
SOHO (small office/home office), 23–24, 223–224
solicited-node multicast addresses, 74–75

something for something attacks, 291

spam, 290

Spanning Tree Protocol. *See* **STP (Spanning Tree Protocol)**

spanning-tree mode rapid-pvst command, 111

spear phishing, 290

speed command, 47, 52

spine and leaf design, 387

split-MAC architecture, 157–158

spoofing attacks (DHCP), 188, 290

spyware, 289

SSH (Secure Shell)

- configuring, 176–177
- denying, 303
- permitting, 310
- remote access with, 222–223

SSID (service set identifier), 153

SSL (Secure Socket Layer), IPSec versus, 340

standard IPv6 ACLs, configuring, 310

standard named IPv4 ACLs

- adding comments, 306
- configuring, 305–306
- verifying, 307–308

standard numbered IPv4 ACLs

- adding comments, 306
- configuring, 301–303
- verifying, 307–308

starvation attacks (DHCP), 188

stateful DHCPv6, 136

- configuring, 139
- operational overview, 136–137

stateless address autoconfiguration (SLAAC), 79–80, 134–135

stateless DHCPv6, 136

- configuring, 137–139
- operational overview, 136–137

static IP addresses, testing connectivity, 140

static NAT, 318

- configuring, 319–320

static routing. *See also* **default routing; summary routing**

- dynamic routing versus, 197
- IPv4
 - configuring, 242–243

exit-interface parameter, 244–245

next-hop parameter, 244

IPv6

- configuring*, 251
- operational overview*, 249–250

operational overview, 241

store-and-forward switching, 31

STP (Spanning Tree Protocol)

- algorithm, 100–101
- benefits of, 99–100
- configuring, 108
 - bridge ID (BID)*, 108–110
 - PortFast and BPDU Guard*, 110–111
- convergence, 101–102
- varieties, 102–103
- verifying, 111

subconfiguration modes (Cisco IOS), 45

subnet addresses, listing, 60–61

subnet IDs, subnetting, 78

subnet masks

- determining new, 60
- purpose of, 57–58

subnets, denying, 303

subnetting

- examples, 61–62
- in IPv6 addressing, 77–78
- steps in, 58–59
 - addressing scheme, listing*, 60–61
 - bits to borrow, determining*, 59–60
 - subnet masks, determining new*, 60
 - subnet multiplier, determining*, 60
- VLSM, 62–64

summary routing

- IPv4, configuring, 248–249
- IPv6, configuring, 253

SVIs (switch virtual interfaces), creating, 238–240

switches

- access layer, 14
- benefits of, 37
- choosing, 14
- collision/broadcast domains, 31
- configuring, 41
 - auto-MDIX*, 47–48
 - basic configuration commands*, 45–47
 - command history*, 44
 - EXEC sessions*, 42
 - half duplex, full duplex, port speed*, 47

- help facilities*, 42–43
 - navigating and editing commands*, 43–44
 - show commands*, 44–45
 - subconfiguration modes*, 45
 - verifying connectivity*, 48–51
 - connecting to, 41–42
 - core layer, 14–15
 - distribution layer, 14
 - evolution to, 29
 - frame forwarding, 31–32
 - hubs versus, 13
 - Layer 2/Layer 3, 32
 - memory buffering, 32
 - operational overview, 30–31
 - password recovery, 377–378
 - port hardening, 178
 - symmetric/asymmetric, 32
 - troubleshooting, 51–54
 - duplex and speed mismatches*, 52–54
 - interface status codes*, 52
 - Layer 1 problem indicators*, 54
 - media issues*, 51–52
 - verifying port configuration, 140
 - switchport port-security aging command**, 183
 - switchport port-security violation command**, 181
 - symmetric switching**, 32
 - syslog**
 - configuring and verifying, 367–369
 - message format, 367
 - operational overview, 365–367
 - severity levels, 366
- T**
- TACACS+ (Terminal Access Controller Access Control System Plus)**, 178–179
 - tailgating**, 291
 - TCP (Transmission Control Protocol)**, 3
 - attacks, 292
 - connection establishment/termination, 9
 - error recovery, 7–8
 - flow control, 8
 - header, 6
 - port numbers, 7
 - QoS and, 349
 - TCP/IP (Transmission Control Protocol/Internet Protocol) model**, 1–2
 - layers
 - application*, 5
 - encapsulation summary*, 12
 - Internet*, 10
 - list of*, 3
 - network access*, 10–12
 - transport*, 5–10
 - protocols, list of, 3–4
 - Telnet**, 3
 - denying, 303, 304–305
 - terminal history command**, 44
 - terminal history size 50 command**, 44
 - terminal no history command**, 44
 - terminal no history size command**, 44
 - threat mitigation**, 285
 - ARP, 190–193
 - DHCP, 188–190
 - VLANs, 185–187
 - threats**, 285
 - TKIP (Temporal Key Integrity Protocol)**, 161
 - topologies**, 24–25
 - WANs, 325
 - traceroute command**
 - successful, 221
 - unsuccessful, 222
 - tracert command**, 50–51
 - traffic types**, 84
 - Transmission Control Protocol**. *See* **TCP (Transmission Control Protocol)**
 - transport input ssh command**, 210
 - transport layer attacks**, 292
 - transport layer (OSI)**, 2
 - transport layer (TCP/IP)**, 3, 5–10
 - Triple DES (3DES)**, 338
 - Trojan horses**, 288
 - troubleshooting**
 - ACLs, 313–314
 - DHCP, 140
 - DNS, 142–143
 - EtherChannel, 119
 - HSRP, 126
 - IP addressing, 224–225
 - NAT, 323–324
 - OSPF, 281–283

- switches, 51–54
 - duplex and speed mismatches*, 52–54
 - interface status codes*, 52
 - Layer 1 problem indicators*, 54
 - media issues*, 51–52
 - trunking, 96–98
 - VLANs, 94–95
 - trunking**
 - configuring, 92–94
 - DTP, 87–88
 - troubleshooting, 96–98
 - verifying, 92–94
 - VLANs, 86–87
 - trust exploitation**, 290
 - tunneling**, 80–81
 - VPNs, 337–338
- U**
- UDP (User Datagram Protocol)**, 4
 - attacks, 292
 - as connectionless, 9–10
 - port numbers, 7
 - ULAs (unique local addresses)**, 72
 - underlay**, 390–391
 - unicast addresses**, 68–73
 - global, 68–70
 - IPv4 embedded, 72–73
 - link-local, 71
 - loopback, 71
 - unique local, 72
 - unspecified, 71
 - unspecified unicast addresses**, 71
 - URIs (uniform resource identifiers)**, 400–401
 - User Datagram Protocol**. *See UDP (User Datagram Protocol)*
 - username password command**, 210
 - username secret command**, 175–176
 - UTP (unshielded twisted pair) cabling**, 36–37
- V**
- variable-length subnet masking (VLSM)**, 62–64
 - verifying**
 - bridge ID (BID), 108–110
 - CDP, 354–356
 - DHCP snooping, 189–190
 - EtherChannel, 117–119
 - host IP settings
 - on Linux*, 146–148
 - on macOS*, 145–146
 - on Windows*, 143–145
 - HSRP, 122–123
 - IPv4 ACLs, 307–308
 - IPv6 ACLs, 311–313
 - LLDP, 358–360
 - multilayer switching, 238
 - NAT, 322–323
 - network connectivity, 220–223
 - NTP, 370–371
 - router configuration with IPv4, 212–217
 - router on a stick, 235–238
 - single-area OSPF, 270–274
 - SNMP, 364–365
 - STP, 111
 - switch connectivity, 48–51
 - switch port configuration, 140
 - syslog, 367–369
 - trunking, 92–94
 - VLANs, 88–92
 - virtual local-area networks**. *See VLANs (virtual local-area networks)*
 - virtual machines (VMs)**, 380–381
 - virtual network infrastructure**, 382–383
 - virtual private networks**. *See VPNs (virtual private networks)*
 - Virtual Router Redundancy Protocol (VRRP)**, 120
 - virtualization**, 379–381
 - viruses**, 288
 - VLANs (virtual local-area networks)**.
 - See also inter-VLAN routing*
 - attacks
 - mitigation*, 187
 - types of*, 186
 - benefits of, 83–84
 - configuring, 88–92, 185–186
 - disabling, 96
 - traffic types, 84
 - troubleshooting, 94–95
 - trunking, 86–87
 - types of, 84–85
 - verifying, 88–92
 - VLSM (variable-length subnet masking)**, 62–64
 - VMs (virtual machines)**, 380–381

voice VLANs, 85
VPNs (virtual private networks), 333
 benefits of, 333
 components of, 336–337
 secure connections, 337–340
 types of access, 333–336
VRRP (Virtual Router Redundancy Protocol), 120
vulnerability, 285
vulnerability exploitation tools, 287
vulnerability scanners, 287

W

WANs (wide-area networks)
 connections, 23, 326–327
choosing, 332
circuit-switched, 328–329
dedicated, 327–328
Internet, 330–332
packet-switched, 329–330
 topologies, 325
web traffic, permitting, 310–311
WEP (Wired Equivalent Privacy), 159
Wi-Fi Protected Access (WPA), 159, 160
WiMAX, 332
windowing, 8
Windows, verifying host IP settings, 143–145
wireless access points (APs), 18–20
wireless hacking tools, 286
wireless LAN controller. *See WLC (wireless LAN controller)*
wireless LANs. *See WLANs (wireless LANs)*
wireless network media, 20, 21

wireless protocols, 4
wireless standards
 802.11 standards, 151–152
 channels, 150–151
 RF spectrum, 149–150
wireless topologies
 AP architectures, 155–157
 CAPWAP, 157–158
 IBSS, 154
 infrastructure mode, 152–154
 mesh, 154
wireless WAN connections, 332
WLANs (wireless LANs), 18–20
 configuring
RADIUS server, 166
virtual interface, 166–168
WPA2 Enterprise, 168–171
 security, 158
authentication, 158–161
encryption, 161–162
WLC (wireless LAN controller)
 configuring with WLAN, 165
RADIUS server, 166
virtual interface, 166–168
WPA2 Enterprise, 168–171
 logging into, 163–165
worms, 288
WPA (Wi-Fi Protected Access), 159, 160
WPA2, 160
WPA2 Enterprise WLANs, configuring, 168–171
WPA3, 160–161

Z

zombies, 291

This page intentionally left blank

Exclusive Offer – 40% OFF

Cisco Press Video Training

livelessons®

ciscopress.com/video

Use coupon code **CPVIDEO40** during checkout.



Video Instruction from Technology Experts



Advance Your Skills

Get started with fundamentals, become an expert, or get certified.



Train Anywhere

Train anywhere, at your own pace, on any device.



Learn

Learn from trusted author trainers published by Cisco Press.

Try Our Popular Video Training for FREE!

ciscopress.com/video

Explore hundreds of **FREE** video lessons from our growing library of Complete Video Courses, LiveLessons, networking talks, and workshops.

Cisco Press

ciscopress.com/video

Exam Checklist

CCNA Checklist Days 31–21

✓	Objective
	Schedule to take the CCNA 200-301 exam at http://www.vue.com .
	Take at least one practice CCNA exam.
	Create a diagram of the layered models.
	Describe the details of sending an email from source to destination. Use a topology with several routers and switches.
	Describe the CSMA/CD process to someone who knows nothing about networking.
	Design a set of requirements to configure a basic switched network, including SSH for remote access. Implement your design and verify the configurations.
	Show someone the MAC address on his or her Smartphone or other connected device. Explain the purpose of the MAC address and the meaning of each part.
	Describe the structure and operation of IPv4. List and describe the uses for the various types of IPv4 addresses.
	Develop several VLSM addressing schemes with various host requirements and implement them in a lab or simulator.
	Describe the structure and operation of IPv6. List and describe the uses for the various types of IPv6 addresses.
	Design a set of requirements to configure a two-switch network with VLANs and trunking.
	List and describe the uses for various types of VLANs.
	Describe how trunking works and the impact of Dynamic Trunking Protocol.
	Design a set of requirements to configure a three-switch network with trunking and VLANs. Implement your design and verify the configurations.
	Describe the process of STP convergence.
	Compare the varieties of STP.
	Explain the difference between PVST+ and Rapid PVST+.
	Describe the benefits of EtherChannel. Compare the two EtherChannel protocols.
	Design a set of requirements to implement a two-switch topology with EtherChannel. Review implementation issues by changing the configuration parameters.
	Describe how HSPR provides default gateway redundancy.
	Explain to a friend how wireless networks operate.
	Practice configuring a wireless router. Use a simulator like Packet Tracer to practice configuring a WLC.
	Read and review Days 31–21 in this book.

CCNA Checklist Days 20–14

✓	Objective
	Take at least two practice CCNA exams.
	Describe the various methods that a router can use to learn about and share knowledge of remote networks.
	Design a set of requirements to configure a three-router network with both IPv4 and IPv6 addressing, using only static and default routes. Implement your design and verify the configurations.
	Describe how a router uses the routing table to determine the best path to the destination.
	Design and configure a one-router, two-switch topology for router-on-a-stick inter-VLAN routing.
	Describe the types of OSPF packets and how they are used to reach the full state of OSPF convergence.
	Describe the ways to modify OSPFv2, including redistributing a default route, modifying timers, and controlling the DR/BDR election.
	Read and review Days 20–14 in this book.

CCNA Checklist Days 13–7

✓ Objective

Take an additional CCNA practice exam.
Design a set of requirements to configure a three-router network with IPv4 addressing and OSPFv2. Implement your design and verify the configurations.
Design a set of requirements to configure a two-router, two-switch network with IPv4 addressing and inter-VLAN routing. Include default routing and OSPFv2. Implement your design and verify the configurations.
Describe basic security threats and the methods used to mitigate them.
Describe how access control lists work and the various types used by Cisco IOS Software.
Search the Internet for various scenarios to practice designing and implementing ACLs. Most of the study resources have excellent examples.
Design a set of requirements to implement a routed network that includes basic device security, IPv4 and IPv6 addressing, VLANs, DHCP, NAT, ACLs, and routing. Implement your design and verify the configurations.
Design a set of requirements to implement DHCP service on a router. Dual-stack the design to include IPv4 and IPv6. Implement your design and verify the configurations.
Design a set of requirements to implement NAT on a router. Include static, dynamic, and PAT considerations. Implement your design and verify the configurations.
Define common WAN terminology.
Compare various WAN connection options.
Describe the characteristics of GRE.
Read and review Days 13–7 in this book.

CCNA Checklist Days 6–1

✓ Objective

Describe to a friend how QoS prioritizes Netflix streaming data over web browsing data.
Compare and contrast the implementations of CDP and LLDP.
Describe the Cisco IOS file system and the process for backing up and restoring files.
Explain the basics of SNMP, NTP, and syslog operation.
Design a set of requirements to implement SNMP, NTP, and syslog in a two-router, one-server topology.
Describe to a friend the concept of cloud computing. Include a discussion of virtualization.
Describe software-defined networking.
Describe the fabric of the network infrastructure and the difference between overlay and underlay.
Describe how Cisco DNA Center helps network administrators automate network configuration and monitoring tasks.
Describe to a friend how data formats are used to store and exchange information between systems.
Describe the JSON data format, including how brackets, braces, and commas are used to distinguish key/value pairs, arrays, and objects.
Describe the structure of a properly formatted RESTful API request.
Compare the configuration management tools Ansible, Puppet, and Chef.
Read and review Days 6–1 in this book.
Visit the testing center and talk with the proctor at least 2 days before the exam.
Eat a decent meal, watch a good movie, and get a good night's rest before the exam.



REGISTER YOUR PRODUCT at CiscoPress.com/register Access Additional Benefits and SAVE 35% on Your Next Purchase

- Download available product updates.
- Access bonus material when applicable.
- Receive exclusive offers on new editions and related products.
(Just check the box to hear from us when setting up your account.)
- Get a coupon for 35% for your next purchase, valid for 30 days.
Your code will be available in your Cisco Press cart. (You will also find it in the Manage Codes section of your account page.)

Registration benefits vary by product. Benefits will be listed on your account page under Registered Products.

CiscoPress.com – Learning Solutions for Self-Paced Study, Enterprise, and the Classroom

Cisco Press is the Cisco Systems authorized book publisher of Cisco networking technology, Cisco certification self-study, and Cisco Networking Academy Program materials.

At CiscoPress.com you can

- Shop our books, eBooks, software, and video training.
- Take advantage of our special offers and promotions (ciscopress.com/promotions).
- Sign up for special offers and content newsletters (ciscopress.com/newsletters).
- Read free articles, exam profiles, and blogs by information technology experts.
- Access thousands of free chapters and video lessons.

Connect with Cisco Press – Visit CiscoPress.com/community

Learn about Cisco Press community events and programs.



Cisco Press