

**Faculty Environmnetal Sciences** 

# Hydrodynamics in porous media

# Seminar notes

doc. Ing. Michal Kuráž, PhD.

Ing. Johanna Bloecher

2017

# . Contents

9	1	$\mathbf{Intr}$	oductio	on	2
10		1.1	Expect	tations	2
11		1.2	Softwa	re	2
12	2	Hea	t modi	ule	3
13		2.1	Heat n	nodule - Part 1	3
14			2.1.1	Goal and Complexity	3
15			2.1.2	Scenarios	5
16			2.1.3	Outcome	18
17		2.2	Heat n	nodule - Part 2	18
18			2.2.1	Goal and Complexity	18
19			2.2.2	Scenarios	20
20			2.2.3	Outcome	29
21	3	Wat	er flow	v module	31
22		3.1	Infiltra	ation - Part 1	31
23			3.1.1	Goal and Complexity	31
24			3.1.2	Scenarios	33
25			3.1.3	Outcome	42
26		3.2	Infiltra	ation - Part 2	42
27			3.2.1	Goal and Complexity	42
28			3.2.2	Scenarios	42
20			3 2 3	Outcome	52

30	4	Cou	pled n	models	53
31		4.1	Couple	ed water and heat flow	53
32			4.1.1	Goal and Complexity	53
33			4.1.2	Scenarios	55
34			4.1.3	Outcome	62
35		4.2	Couple	ed water flow and contaminant transport	63
36			4.2.1	Goal and Complexity	63
37			4.2.2	Scenarios	65
38			4.2.3	Outcome	75

# Chapter 1

# <sub>2</sub> Introduction

## 3 1.1 Expectations

## 4 1.2 Software

- $_{5}$  1. Install DRUtES. You can get DRUtES from the github repository drutes-dev or
- download it from the drutes.org website.
- <sup>7</sup> 2. Follow website instructions on drutes.org for the installation.
- 3. Working R installation (optional, to generate plots you can execute freely distributed
- 9 R script)

# <sup>10</sup> Chapter 2

## Heat module

## $_{12}$ 2.1 Heat module - Part 1


## <sup>13</sup> 2.1.1 Goal and Complexity

14 Complexity: Beginner

15 Prerequisites: None

The goal of this tutorial is to get familiar with the DRUtES heat module and DRUtES

configuration in 1D by simulating heat conduction through a wall.

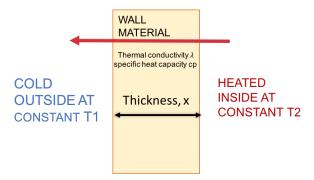

- Heat flow is important in the soil. To simplify, we're assuming heat flow through a wall.
- We test different insulation materials by assigning different heat capacities and thermal
- conductivity values of several real-world materials.
- In this tutorial three configuration files will be modified step by step. All configuration
- files are located in the folder *drutes.conf* and respective subfolders.

- 23 1. For selection of the module, dimension and time information we require *global.conf*.

  24 *global.conf* is located in *drutes.conf* / *global.conf*.
- 25 2. To define the mesh or spatial discretization in 1D, we require drumesh1D.conf. drumesh1D.conf is located in drutes.conf / mesh / drumesh1D.conf.
- 3. To define heat conduction, we require heat.conf. heat.conf is located in drutes.conf / heat / heat.conf.
- DRUtES works with configuration input file with the file extension .conf. Blank lines and
- # lines starting with # are ignored. The input mentioned in this tutorial therefore needs to
- be placed one line below the mentioned keyword, unless stated otherwise.

#### $_{32}$ 2.1.2 Scenarios

- For all scenarios, we assume that the wall is between a heated room, which is maintaining
- <sup>34</sup> a constant temperature of 20 °C, and the outside world during winter, which for the sake of
- simplicity is at a constant temperature of 0 °C.

Table 2.1: Material properties needed for scenarios.

	specific heat capacity	density	thermal conductivity
	$\mathrm{c}_p$	ho	$\lambda$
Material	$[{\rm J~kg^{-1}~K^{-1}}]$	$[{\rm kg~m^{-3}}]$	$[{ m W} { m m}^{-1} { m K}^{-1}]$
Stone concrete	750	1400	1.7
Sand stone	920	2800	1.7
Cotton	1340	1550	0.04

## Scenario 1

42

- Heat conduction through a 20 cm thick stone concrete wall.
- global.conf: Choose correct model, dimension, time discretization and observation times.
- 1. Open *global.conf* in a text editor of your choice.
- 2. Model type: Your first input is the module. Input is **heat**.
- 3. Initial mesh configuration
  - (a) The dimension of our problem is 1. Input: 1.
- (b) We use the internal mesh generator. Input: 1.
- 4. Error criterion (not needed here, leave at default value)
- (a) Maximum number of iteration of the Picard method: 20
- (b) h tolerance: 1e-2.
- 5. Time information

- (a) Time units are in hours: input h
- (b) Initial time: 1e-3.
- (c) End time: 24.
- (d) Minimum time step: 1e-6.
- (e) Maximum time step: 0.1.
- 6. Observation time settings

54

- (a) Observation time method: 2
- 55 (b) Set file format of observation: pure. Output in 1D is always in raw data. Different options will not impact output in 1D.
- (c) Make sequence of observation time: n
- (d) Number of observation times: 11
- 60 (e) Observation time values: 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22. Use a new line for each input. *DRUtES* automatically generates output for the initial time and final time. DRUtES will generate 13 output files, e.g. *heat\_temperature-x.dat*, where x is the number of the file and not the output time. The initial time is assigned an x value of 0.
- 7. Observation point settings
- 65 (a) Observation point coordinates: 0.0, 0.2. Use a new line for each input. *DRUtES*66 will generate 2 output files, e.g. *obspt\_heat-x.out*, where x is the ID of the obser67 vation point.
- 8. Ignore other settings for now.
- 9. Save qlobal.con f
- drumesh1D.conf: Mesh definition, i.e. number of materials and spatial discretization
- 1. Open *drumesh1D.conf* in a text editor of your choice.
- 2. Geometry information: 0.2 m domain length

- 3. Amount of intervals: 1
- 5. number of materials: 1
- *heat.conf*: Heat module after Sophocleous (1979).
- 1. Open *heat.conf* in a text editor of your choice.
- 2. Couple with Richards equation: n
- 3. Number of materials or layers: 1
- 4. Specific heat capacity of the wall material:
- 750 J kg<sup>-1</sup> K<sup>-1</sup> x 1400 kg m<sup>-3</sup> = 1.05E6 J m<sup>-3</sup> K<sup>-1</sup> =  $\frac{1.05E6 \text{ W s m}^{-3} \text{ K}^{-1}}{3600 \text{ s h}^{-1}}$
- $= 291~{
  m W}~{
  m h}~{
  m m}^{-3}~{
  m K}^{-1}.$
- 5. Specific heat capacity of liquid: 0
- 6. Anisotropy: There is no anisotropy. The value is 0.
- 7. Heat conductivity of the wall material:  $1.7 \text{ W m}^{-1} \text{ K}^{-1}$ .
- 8. There is NO heat convection of water: 0.
- 9. The initial temperature is 0°C across the entire domain: 0.
- 10. There is no heat source: 0.
- of 0 °C outside. We assume the inside is heated and the temperature maintained at exactly 20°C. We therefore know the temperature at the boundaries. We also know that these values do not change in time. They can be describes as time-constant

Dirichlet boundary conditions.

boundary id	boundary type	use bc.dat	value
101	1	n	20.0
102	1	n	0.0

96 12. Save heat.conf.

94

95

## 97 Run scenario 1

- 98 Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$\sin/drutes
- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/heat/heatplots.R concrete
- 4. The output of the simulation can be found in the folder out

## Tasks for scenario 1

- 1. How long does it take for the temperature distribution to become linear between the two observation points?
- 2. How large is the steady state heat flux through the wall?
- 3. Let's assume a wall area of A=15 m<sup>2</sup>. Use the observation point at the boundary between the wall and the inside of room. How large was the cumulated heat loss 24 h. How much will be lost after 48 h when the set-up does not change?

## Result of scenario 1

#### Question 1

Figure 2.1 shows that the temperature distribution becomes linear quite quickly and reaches a steady state after observation time 2, which was set to 4 h. Figure 2.2 shows the heat flux  $\phi_{\rm p}$  in observation points 1 (red) and 2 (blue) bordering the wall to the outside and heated inside, respectively. The heat flux is extremely large at observation point 2 in the beginning. Observation point 2 evidently defines the boundary between the wall and the heated inside. After approximately 3 hours, the heat flux of observation point 1 and 2 become identical. This occurs when the simulation reaches steady state and a linear temperature distribution. Figure 2.2 allows a more exact estimation of when the system becomes steady state.

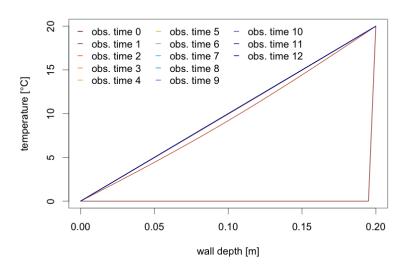


Figure 2.1: Plot of observation times for stone concrete generated with Rscript heatplots.R

#### $_{122}$ Question 2

The constant heat flux value is at  $\phi_p=170~\mathrm{W~m^{-2}}$ . This value can also be calculated using the equation:

$$\phi_{\rm p} = -\lambda \frac{dT}{dx} = -1.7 \frac{20 - 0}{0.2} = 170 \text{ W m}^{-2}$$


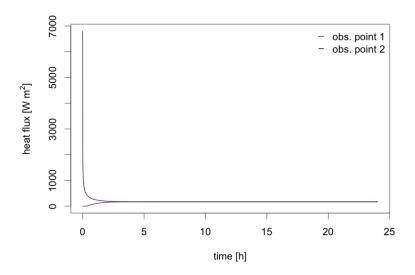


Figure 2.2: Heat flux at observation points 1 and 2 for stone concrete generated with Rscript heatplots.R

Figure 2.3 shows the cumulative heat flux in observation points 1 and 2, both ends of the wall. The cumulative heat flux after 24 h at observation point is 4468 W m<sup>-2</sup>. With a wall area of 15 m<sup>2</sup> this results in Q = 4468 W h m<sup>-2</sup> · 15 m<sup>2</sup> = 67020 W h. For the next 24 h, the heat flux will be constant at 170 W m<sup>-2</sup>. The total heat loss will therefore be Q = 170 W m<sup>-2</sup> · 24 h · 15 m<sup>2</sup> = 61200 W h.

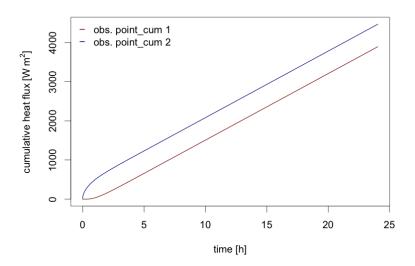

**Figure 2.3:** Cumulated heat flux at observation points 1 and 2 for stone concrete generated with Rscript heatplots.R

## Scenario 2

- 130 Heat conduction through a 20 cm thick sandstone wall.
- 131 1. Open *heat.conf* in a text editor of your choice.
- 2. Leave all settings the same, except for specific heat capacity.
- 3. Replace the specific heat capacity with values of sand stone.
- 4. Save heat.conf.

## Run scenario 2

- Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$ bin/drutes

- 3. After the simulation finishes, to generate png plots execute provided R script:
  - \$ Rscript drutes.conf/heat/heatplots.R sandstone
    - 4. The output of the simulation can be found in the folder out

## Tasks for scenario 2

1. Answer the same questions as for scenario 1. What is different?

## Result of scenario 2

## Question 1

142

144

Figure 2.4 shows that it takes longer for the temperature distribution to become linear in sandstone than in concrete sand. Also taking Fig. 2.5 into account, it takes approximately 5 h. This is because sandstone has a larger specific heat capacity than stone concrete.

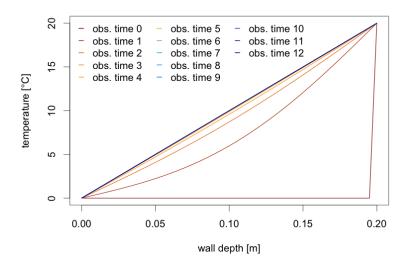


Figure 2.4: Plot of observation times for sandstone generated with Rscript heatplots.R

The constant heat flux when the system is in steady state is also at  $\phi_p=170~\mathrm{W}~\mathrm{m}^{-2}$ . Both materials have the same thermal conductivity and therefore the same thermal heat flux.


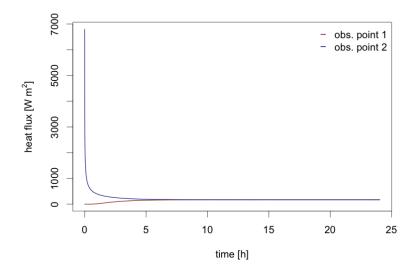


Figure 2.5: Heat flux at observation points 1 and 2 for sandstone generated with Rscript heatplots.R

#### Question 3

Heat conduction through a 20 cm thick cotton fibre wall.

The cumulative heat flux after 24 h at observation point 2 in sandstone is higher than in concrete stone, namely 5014 W m<sup>-2</sup>. With a wall area of 15 m<sup>2</sup> this results in Q= 5014 W h m<sup>-2</sup> · 15 m<sup>2</sup> = 75210 W h. For the next 24 h, the heat flux will be constant at 170 W m<sup>-2</sup>. The total heat loss will therefore also be Q=170 W m<sup>-2</sup> · 24 h · 15 m<sup>2</sup> = 61200 W h.

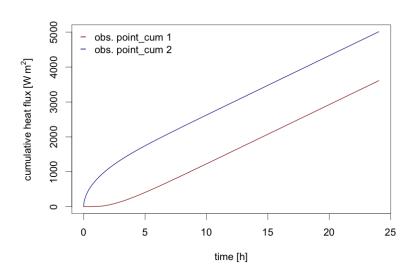

**Figure 2.6:** Cumulated heat flux at observation points 1 and 2 for sandstone generated with Rscript heatplots.R

## Scenario 3

- 1. Open *heat.conf* in a text editor of your choice.
- 2. Change the specific heat capacity and thermal conductivity with values of cotton.
- 3. Save heat.conf.

#### Run scenario 3

- Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$ bin/drutes
- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/heat/heatplots.R cotton
- 4. The output of the simulation can be found in the folder out

## 172 Tasks for scenario 3

1. Answer the same questions as for scenario 1. What is different to scenario 1 and 2?

## Result of scenario 3

## Question 1

In contrary to scenario 1 and 2, figure 2.7 and 2.8 show that we have not reached steady-state

within 24 h. This is because of the very low thermal heat conductivity of cotton fibre.

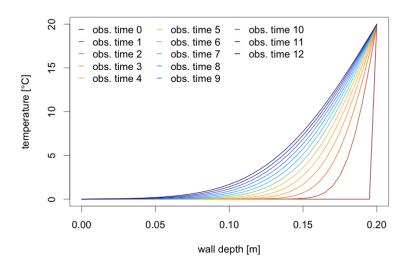


Figure 2.7: Plot of observation times for cotton generated with Rscript heatplots.R

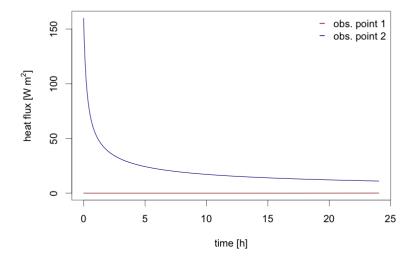



Figure 2.8: Heat flux at observation points 1 and 2 for cotton generated with Rscript heatplots.R

We cannot estimate the constant heat flux during steady-state with our results. Using the heat flux equation mentioned during scenario 1, we can calculate the heat flux during steady state:

$$\phi_{\rm p} = -\lambda \frac{dT}{dx} = -0.04 \frac{20 - 0}{0.2} = 4 \text{ W m}^{-2}$$

The cumulative heat flux after 24 h at observation point 2 in sandstone is higher than in concrete stone, namely 503 W m<sup>-2</sup>, so about a tenth of sandstone and stone concrete. With a wall area of 15 m<sup>2</sup> this results in Q = 503 W h m<sup>-2</sup> · 15 m<sup>2</sup> = 7545 W h.

Since the system is not in steady state, it is difficult to estimate the heat loss for the next 24 h. The answer has to be evaluated numerically by increasing the end time to 48 h.

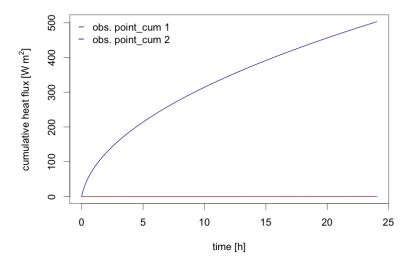

**Figure 2.9:** Cumulated heat flux at observation points 1 and 2 for sandstone generated with Rscript heatplots.R

#### $_{185}$ 2.1.3 Outcome

- 1. You got familiar with the DRUtES heat module in 1D.
- 2. You simulated heat conduction through a wall with different materials
- 3. You understand the effects of different heat capacities and thermal conductivities.
- 4. You understand the term *Dirichlet boundary condition*, initial condition and steady state.


## <sup>191</sup> 2.2 Heat module - Part 2

## 192 2.2.1 Goal and Complexity

193 Complexity: Beginner

## 194 Prerequisites: Tutorial: heat module - part 1.

The goal of this tutorial is to show further applicability of the *DRUtES* heat module in 196 1D. We simulate heat conduction in a wall with two materials to understand the effects of layering of materials with different thermal properties.

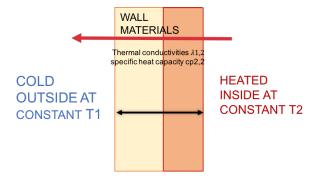

- Similar to tutorial 1, three configuration files will be modified step by step. All configuration files are located in the folder *drutes.conf* and respective subfolders.
- 200 1. For selection of the module, dimension and time information we require global.conf.

  201 global.conf is located in drutes.conf / global.conf.

- 202 2. To define the mesh or spatial discretization in 1D, we require drumesh1D.conf. drumesh1D.conf is located in drutes.conf / mesh / drumesh1D.conf.
- 3. To define heat conduction, we require heat.conf. heat.conf is located in drutes.conf / heat / heat.conf.
- DRUtES works with configuration input file with the file extension .conf. Blank lines and lines starting with # are ignored. The input mentioned in this tutorial therefore needs to be placed one line below the mentioned keyword, unless stated otherwise.

#### $_{209}$ 2.2.2 Scenarios

For all scenarios, we assume that the wall is between a heated room, which is maintaining a constant temperature of 20 °C, and the outside world during winter, which for the sake of simplicity is at a constant temperature of 0 °C.

	Table 2.2. Material properties needed for seenarios.			
	specific heat capacity	density	thermal conductivity	
	$\mathrm{c}_p$	ho	$\lambda$	
Material	$[{ m J~kg^{-1}~K^{-1}}]$	$[\mathrm{kg}\ \mathrm{m}^{-3}]$	$[{ m W} { m m}^{-1} { m K}^{-1}]$	
Stone concrete	750	1400	1.7	
Cotton	1340	1550	0.04	

Table 2.2: Material properties needed for scenarios

## Scenario 1

- Heat conduction through a 20 cm wall. 15 cm are made of stone concrete and 5 cm are made of cotton fibre.
- global.conf: Choose correct model, dimension, time discretization and observation times.
- This is the same as in heat tutorial 1.
- 1. Open *global.conf* in a text editor of your choice.
- 2. Model type: Your first input is the module. Input is **heat**.
- 3. Initial mesh configuration
- (a) The dimension of our problem is 1. Input: 1.
  - (b) We use the internal mesh generator. Input: 1.
- 4. Error criterion (not needed here, leave at default value)
- (a) Maximum number of iteration of the Picard method: 20
- (b) h tolerance: 1e-2.

222

#### 5. Time information

226

236

243

- (a) Time units are in hours: input h
- (b) Initial time: 1e-3.
- (c) End time: 24.
- (d) Minimum time step: 1e-6.
- (e) Maximum time step: 0.1.
- 6. Observation time settings
  - (a) Observation time method: 2
- 234 (b) Set file format of observation: pure. Output in 1D is always in raw data. Different options will not impact output in 1D.
  - (c) Make sequence of observation time: n
- (d) Number of observation times: 11
- 238 (e) Observation time values: 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22. Use a new line for
  239 each input. *DRUtES* automatically generates output for the initial time and final
  240 time. DRUtES will generate 13 output files, e.g. *heat\_temperature-x.dat*, where
  241 x is the number of the file and not the output time. The initial time is assigned
  242 an x value of 0.

#### 7. Observation point settings

- (a) Observation point coordinates: 0.0, 0.2. Use a new line for each input. *DRUtES*will generate 2 output files, e.g. *obspt\_heat-x.out*, where x is the ID of the observation point.
- 8. Ignore other settings for now.
- 9. Save global.conf
- drumesh1D.conf: Mesh definition, i.e. number of materials and spatial discretization.
- Here is were the configuration files are different to heat tutorial one.

- 1. Open *drumesh1D.conf* in a text editor of your choice.
- 252 2. Geometry information: 0.2 m domain length
- 3. Amount of intervals: 1
- 5. Number of materials: 2
- id bottom top

  1 0 0.15
  2 0.15 0.2

heat.conf: Heat module after Sophocleous (1979). Here, it is important to make sure everything is defined for 2 layers. 2 lines of input are required, even when the input is identical.

- 1. Open *heat.conf* in a text editor of your choice.
- 2. Couple with Richards equation: n
- 3. Number of materials or layers: 2
- 4. Specific heat capacity of the wall material: Material 1 is stone concrete:

750 J kg<sup>-1</sup> K<sup>-1</sup> x 1400 kg m<sup>-3</sup> = 1.05E6 J m<sup>-3</sup> K<sup>-1</sup> = 
$$\frac{1.05E6 \text{ W s m}^{-3} \text{ K}^{-1}}{3600 \text{ s h}^{-1}}$$

- $= 291 \text{ W h m}^{-3} \text{ K}^{-1}.$
- Material 2 is cotton fibre:

1340 J kg<sup>-1</sup> K<sup>-1</sup> x 1550 kg m<sup>-3</sup> = 
$$2.08E6$$
 J m<sup>-3</sup> K<sup>-1</sup> =  $\frac{2.08E6$  W s m<sup>-3</sup> K<sup>-1</sup>  $\frac{1}{3600}$  s h<sup>-1</sup>

- $= 576 \text{ W h m}^{-3} \text{ K}^{-1}.$
- 5. Specific heat capacity of liquid: 0 (for both materials)
- 6. Anisotropy: There is no anisotropy. The value is 0 (for both materials)
- 7. Heat conductivity of the wall material:
- Material 1:  $1.7 \text{ W m}^{-1} \text{ K}^{-1}$
- Material 2:  $0.04 \text{ W m}^{-1} \text{ K}^{-1}$

- 8. There is NO heat convection of water: 0 (for both materials)
- 9. The initial temperature is 0°C across the entire domain: 0 (for both materials)
- 276 10. There is no heat source: 0 (for both materials)
- 277 11. This is identical to heat tutorial 1. We have 2 boundaries at both ends of the wall. We
  278 assume a constant temperature of 0°C outside. We assume the inside is heated and
  279 the temperature maintained at exactly 20°C. We therefore know the temperature at
  280 the boundaries. We also know that these values do not change in time. They can be
  281 describes as time-constant Dirichlet boundary conditions.

boundary id	boundary type	use bc.dat	value
101	1	n	20.0
102	1	n	0.0

12. Save heat.conf.

282

283

291

### Run scenario 1

- 285 Run the simulation in the terminal console.
- 286 1. Make sure you are in the right directory.
- 287 2. To execute DRUtES:
- \$ bin/drutes
- 3. After the simulation finishes, to generate png plots execute provided R script:
- - 4. The output of the simulation can be found in the folder out

#### $_{\scriptscriptstyle{292}}$ Tasks for scenario 1

1. Describe the temperature distribution. How long does it take for the temperature distribution to become linear between the two observation points?

- 2. How large is the steady state heat flux through the wall?
- 3. Let's assume a wall area of A=15 m<sup>2</sup>. Use the observation point at the boundary between the wall and the inside of room. How large was the cumulated heat loss 24 h. How much will be lost after 48 h when the set-up does not change?

## Result of scenario 1

## Question 1


295

296


297

298

Figure 2.10 shows two distinct linear temperature distributions. The temperature distributions appears to have not changed significantly over the last observation times indicating a
steady state. A 5 cm thick cotton fibre wall is between the concrete stone and the heated
inside. The overall heat flux at the inside border is therefore quite low as the input of heat
has to travel through badly conducting material first.

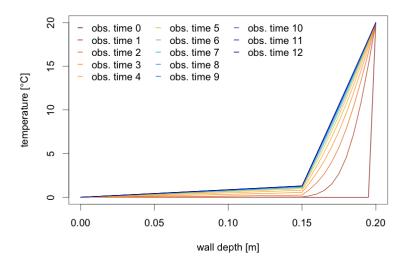


**Figure 2.10:** Plot of observation times for a wall with a 15 cm outer stone concrete layer and an inner 5 cm cotton fibre layer generated with Rscript heatplots.R

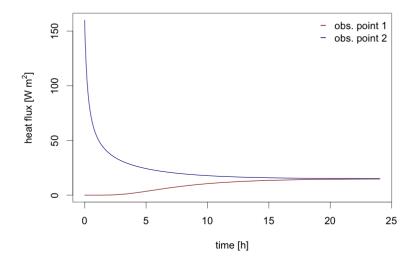

**Figure 2.11:** Heat flux at observation points 1 and 2 for a wall with a 15 cm outer stone concrete layer and an inner 5 cm cotton fibre layer generated with Rscript heatplots.R

Looking at the raw data, it appears that steady-state has not actually been reached, but that the change in heat flux is becoming slower and is converging towards 15 W m $^{-2}$ .

Figure 2.12 shows the cumulative heat flux in observation points 1 and 2, both ends of the wall. The cumulative heat flux after 24 h at observation point is 538 W m<sup>-2</sup>. With a wall area of 15 m<sup>2</sup> this results in Q = 538 W h m<sup>-2</sup> · 15 m<sup>2</sup> = 8070 W h. For the next 24 h, the heat flux will be constant at 15 W m<sup>-2</sup>. The total heat loss will therefore be Q = 15 W m<sup>-2</sup> · 24 h · 15 m<sup>2</sup> = 5400 W h.

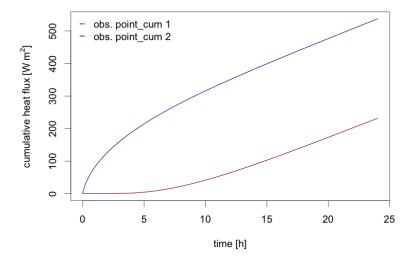

**Figure 2.12:** Cumulated heat flux at observation points 1 and 2 for a wall with a 15 cm outer stone concrete layer and an inner 5 cm cotton fibre layer generated with Rscript heatplots.R

## Scenario 2

- 1. Open *heat.conf* in a text editor of your choice.
- 2. Swap the order of materials for specific heat capacity and thermal conductivity. Now, the the outer wall layer is made of cotton fibre and the inner layer is made of concrete.
- 3. Save heat.conf.

#### Run scenario 2

- Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- $\sin/drutes$
- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/heat/heatplots.R cottonconcrete
- 4. The output of the simulation can be found in the folder out

## Tasks for scenario 2


1. Answer the same questions as for scenario 1. What is different?

## Result of scenario 2

#### Question 1

Figure 2.13 shows the inner concrete layer becomes linear quite quickly, but that the outer

cotton fibre layer has not reached linearity after 24 h. Also taking Fig. 2.14

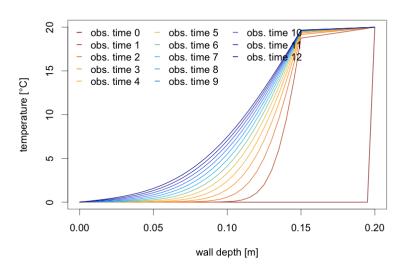


**Figure 2.13:** Plot of observation times for a wall with a 15 cm thick outer cotton layer and a 5 cm inner concrete stone layer generated with Rscript heatplots.R


The system has not reached a constant heat flux, but the heat flux will be between 0.7 and  $111 \text{ W m}^{-2}$ . A long simulation (not shown) of 240 h shows that the steady state hea flux converges towards 53 W m<sup>-2</sup>.

## 338 Question 3

The cumulative heat flux after 24 h at the inner boundary is higher than in scenario 1, namely 797 W m<sup>-2</sup>. With a wall area of 15 m<sup>2</sup> this results in Q = 797 W h m<sup>-2</sup>· 15 m<sup>2</sup> = 11955 W h. For the next 24 h, the heat flux will not be constant and needs to be numerically simulated.

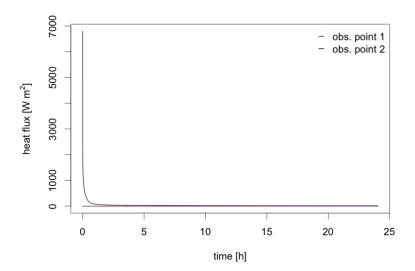

**Figure 2.14:** Heat flux at observation points for a wall with a 15 cm thick outer cotton layer and a 5 cm inner concrete stone layer generated with Rscript heatplots.R

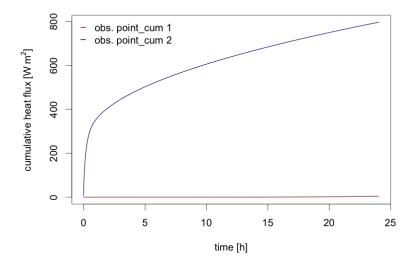

**Figure 2.15:** Cumulated heat flux at observation points for a wall with a 15 cm thick outer cotton layer and a 5 cm inner concrete stone layer generated with Rscript heatplots.R

#### $_{42}$ 2.2.3 Outcome

- $^{343}$  1. You got familiar with the DRUtES heat module in 1D with 2 layers.
  - 2. You simulated heat conduction through a wall with layered materials.

- 3. You understand the effects of layering of materials with different heat capacities and thermal conductivities.
- 4. You understand how layering affects when a system is in *steady state*.

1 -

# <sup>2</sup> Chapter 3

# 3 Water flow module


## 4 3.1 Infiltration - Part 1

## 5 3.1.1 Goal and Complexity

6 Complexity: Beginner

<sup>7</sup> Prerequisites: None

- $^{8}$  The goal of this tutorial is to get familiar with the DRUtES standard Richards equation
- module and DRUtES configuration in 1D by simulating infiltration into different soil

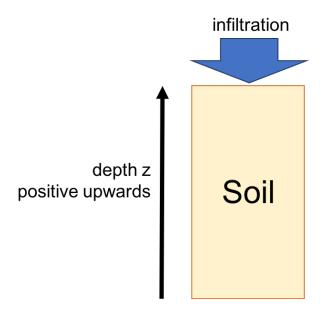

- The process of infiltration is fundamental and yet very important in soil science. Infiltration into the soil determines water, heat and contaminant transport. Infiltration experiments can be used to determine some parameters describing soil hydraulic properties.
- In this tutorial three configuration files will be modified step by step. All configuration files are located in the folder *drutes.conf* and respective subfolders.
- 1. For selection of the module, dimension and time information we require *global.conf*.

  global.conf is located in *drutes.conf* / *global.conf*.
- 2. To define the mesh or spatial discretization in 1D, we require drumesh1D.conf. drumesh1D.conf is located in drutes.conf / mesh / drumesh1D.conf.
- 3. To define the infiltration, we require matrix.conf. matrix.conf is located in drutes.conf


  /water.conf/ matrix.conf.
- 21 DRUtES works with configuration input file with the file extension .conf. Blank lines and
- $_{22}$  lines starting with # are ignored. The input mentioned in this tutorial therefore needs to
- be placed one line below the mentioned keyword, unless stated otherwise.


#### $_{24}$ 3.1.2 Scenarios

We are using the well-known van Genuchten-Mualem parameterization to describe the soil hydraulic properties of our soils. The parameters describe clay, silt and sand (Tab. 3.1). We assume a constant flow of water infiltrating over the top boundary. We can also look at this as a constant rate of water and it therefore describes the temporal derivative. This type of boundary is called a **Neumann condition**. We assume that the groundwater table is at the bottom of our profile. We therefore assume a constant state of saturation at the bottom profile. In these scenarios we want to investigate the effect of spatial and temporal discretization.

Table 3.1: Material properties needed for scenarios.

Parameter	Description	Sand	Silt	Clay
$\alpha  [\mathrm{cm}^{-1}]$	inverse of the air entry value	0.10	0.08	0.01
n [-]	shape parameter	2.2	1.8	1.5
m [-]	shape parameter	0.55	0.44	0.33
$\theta_s$ [-]	saturated vol. water content	0.4	0.45	0.5
$ heta_r$ [-]	residual vol. water content	0.0	0.05	0.1
$Ss [cm^{-1}]$	specific storage	1e-9	1e-9	1e-10
$K_s [\mathrm{cm d}^{-1}]$	saturated hydraulic conductivity	400	40	4

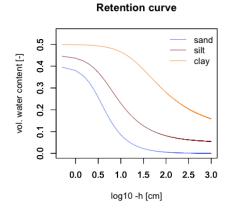

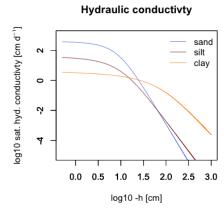

## Scenario 1

- Infiltration into sandy soil.
- global.conf: Choose correct model, dimension, time discretization and observation times.
- 1. Open *global.conf* in a text editor of your choice.
- 2. Model type: Your first input is the module. Input is **RE**.
- 3. Initial mesh configuration
- (a) The dimension of our problem is 1. Input: 1.
- (b) We use the internal mesh generator. Input: 1.
- 4. Error criterion
- (a) Maximum number of iteration of the Picard method: 20.
- (b) h tolerance: 1e-1.
- 5. Time information
- (a) Time units are in hours: input d.
- (b) Initial time: 1e-4.
- (c) End time: 1.
- (d) Minimum time step: 1e-4.
- (e) Maximum time step: 0.1.
- 50 6. Observation time settings
- (a) Observation time method: 2.
- 52 (b) Set file format of observation: pure. Output in 1D is always in raw data. Different options will not impact output in 1D.
- (c) Make sequence of observation time: n.
- (d) Number of observation times: 10.

- observation time values: 0.001, 0.005, 0.01, 0.05, 0.1, 0.2, 0.3, 0.4, 0.6, 0.8. Use
  a new line for each input. DRUtES automatically generates output for the initial
  time and final time. DRUtES will generate 12 output files, e.g. RE\_matrix\_press\_headx.dat, RE\_matrix\_theta-x.dat where x is the number of the file and not the output
  time. The initial time is assigned an x value of 0.
- 7. Observation point settings
- 62 (a) Observation point coordinates: 0, 200. Use a new line for each input. DRUtES
  63 will generate 2 output files, e.g. obspt\_RE\_matrix-1.out, where x is the ID of the
  64 observation point.
- 8. Ignore other settings for now.
- 9. Save global.conf
- drumesh1D.conf: Mesh definition, i.e. number of materials and spatial discretization
- 1. Open drumesh1D.conf in a text editor of your choice.
- 2. Geometry information: 200 cm domain length
- 3. Amount of intervals: 1
- 5. Number of materials: 1
- *matrix.conf*: Configuration file for water flow
- 1. Open *matrix.conf* in a text editor of your choice.
- 2. How-to use constitutive relations? [integer]: 1
- 3. Length of interval for precalculating the constitutive functions: 200

- 4. Discretization step for constituitive function precalculation: 0.1
- 5. Number of soil layers [integer]: 1

6	alpha	n	m	theta_r	theta_s	specific storage	
80 0.	0.1	2.2	0.55	0.00	0.40	1e-9	

- 7. The angle of the anistropy determines the angle of the reference coordinate system.
- 0 means vertical flow. Anisothpropy description. Anisothpropy description and hy-
- draulic conductivity

angle [degrees]	K_11
0	400

- 8. sink(-) / source(+) term per layer: 0
- 9.  $\frac{\text{init. cond [real]}}{0.0}$  type of init. cond RCZA method [y/n] RCZA method val.
- 10. number of boundaries: 2

		boundary ID	boundary type	use rain.dat [y/n]	value
88	11.	101	1	n	0.0
		102	2	n	4

12. Save matrix.conf.

### 90 Run scenario 1

- Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$ bin/drutes
- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/water.conf/waterplots.R -name sand
- 4. The output of the simulation can be found in the folder out

### 98 Scenario 2

- 99 Infiltration into silty soil
- 1. global.conf and drumesh1D.conf remain the same.
- 2. Open *matrix.conf* in a text editor of your choice.
- 3. Use the same set-up, but change the van Genuchten parameters to:

102	1	alpha	n	m	theta_r	theta_s	specific storage	
103	4.	0.08	1.8	0.44	0.05	0.45	1e-9	

5. anisothprophy description and hydraulic conductivity

angle [degrees]	K_11
0	40

6. Save matrix.conf.

105

### 107 Run scenario 2

- 108 Run the simulation in the terminal console.
- 1. To execute DRUtES:
- $\sin \sin / drutes$
- 2. generate png plots with R script:
- \$\frac{\\$}{\} \\$ Rscript drutes.conf/water.conf/waterplots.R -name silt

## Scenario 3

- 114 Infiltration into clay soil
- 1. global.conf and drumesh1D.conf remain the same.
- 2. Open *matrix.conf* in a text editor of your choice.
- 3. Use the same set-up, but change the van Genuchten parameters to:

 alpha
 n
 m
 theta\_r
 theta\_s
 specific storage

 0.01
 1.5
 0.33
 0.1
 0.5
 1e-10

5. anisothprophy description and hydraulic conductivity

angle [degrees]	K_11
0	4

6. Save matrix.conf.

### Run scenario 3

120

124

127

Run the simulation in the terminal console.

- 1. To execute DRUtES:
- \$ bin/drutes
- 2. generate png plots with R script:
  - \$ Rscript drutes.conf/water.conf/waterplots.R -name clay

### 128 Tasks

- 1. Describe the infiltration fronts for sand, silt and clay.
- 2. The results of the fluxes look horrible. This is because of insufficient discretization.

  Improve the discretization. With what set-up are the results better? Possibilities are:
- in global.conf: Decrease the pressure head tolerance, Decrease the initial time step, Decrease the maximum time step.
  - in drumesh1D.conf: Decrease the mesh density.

## 135 Results

134

In the following time series of the infiltration into sand, silt and clay are presented. The infiltration front has moved furthest in clay, followed by sand and then silt. However, the time
series show that their numerical approximation is insufficient, especially for sand. This is

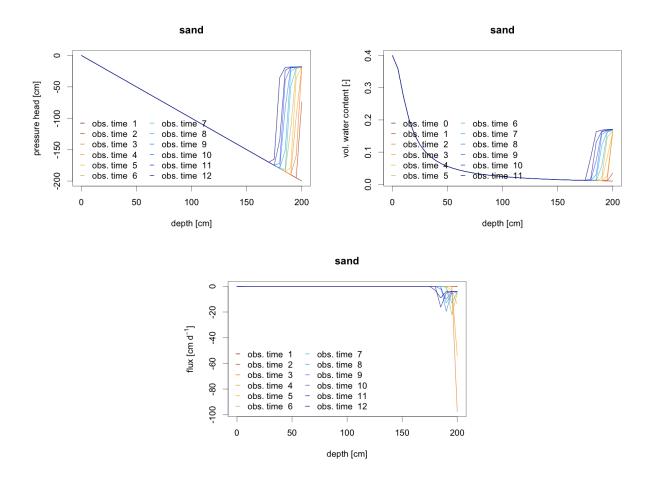


Figure 3.1: Observation time series of pressure head, vol. water content and flux of infiltration into sand.

because sand is the numerically most difficult to model as it has the steepest retention properties (largest n and largest alpha). In the beginning, the flux in sand is 100 cm d<sup>-1</sup>, which is 20 times the size of the assigned flux. For silt, the flux is overestimated approximately 12 times and for clay, the flux is overestimated twice.

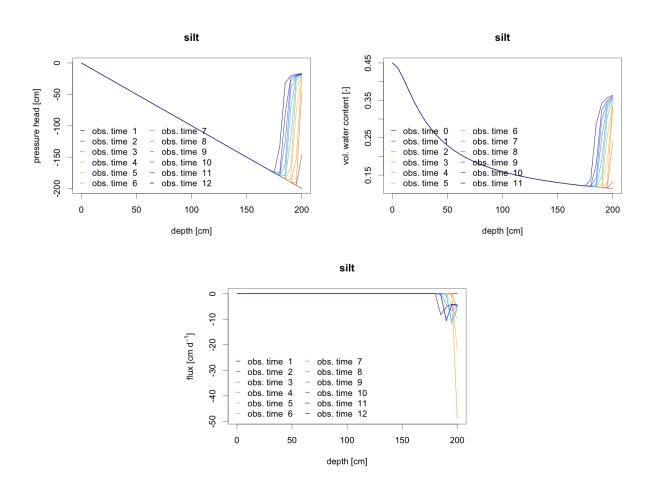


Figure 3.2: Observation time series of pressure head, vol. water content and flux of infiltration into silt.

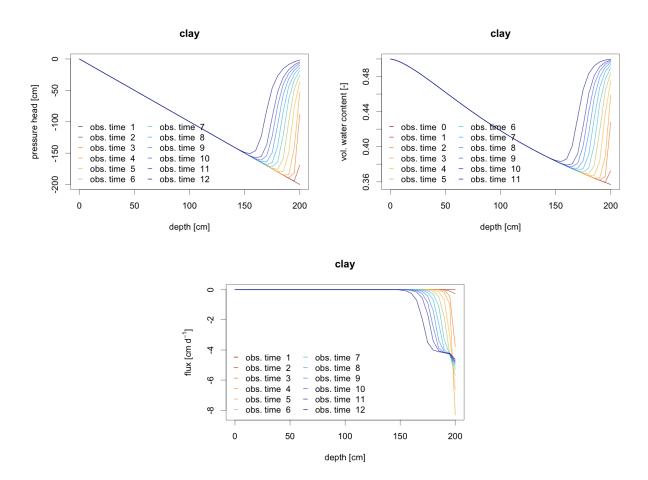


Figure 3.3: Observation time series of pressure head, vol. water content and flux of infiltration into clay.

#### $_3$ 3.1.3 Outcome

- 1. You got familiar with the *DRUtES* standard Richards Equation modules in 1D.
- 2. You understand basic parameterization of a typical sand, silt and clay with the van Genuchten-Mualem model.
- 3. You simulated infiltration in different soils.
- 4. You understand the term Neumann boundary condition and initial condition.
- 5. You understand the effects of different discretizations.

# $_{\circ}$ 3.2 Infiltration - Part 2

## $_{51}$ 3.2.1 Goal and Complexity

152 Complexity: Beginner


## 153 Prerequisites: None

The goal of this tutorial is to get familiar with the DRUtES standard Richards equation module and DRUtES configuration in 1D by simulating infiltration into different soil

## 3.2.2 Scenarios

We use the same parameters as in the previous infiltration scenario (Tab. 3.1). We assume
a constant ponding depth at the top boundary. Similar to the state of saturation in the
previous scenario at the bottom boundary, where we knew the solution of the water table,
we can assume the height of the water table, the ponding depth, to be defined with a Dirichlet
condition, where the value is similar to the height of the ponding depth. At the bottom,
we assume that only gravitational force acts on the bottom drainage. This also means
that the pressure head gradient is zero. This boundary condition is called **free drainage**.
The set-up of these scenarios are the same as in the previous infiltration scenarios, except

for the boundary conditions. In these scenarios, we also want to investigate the effects on discretization, especially on the flux over the top boundary.

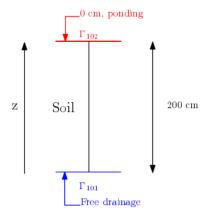

**Figure 3.4:** 1D domain set-up of infiltration scenario with top and bottom boundary conditions. A constant ponding is assigned to the top, defined with a Dirichlet condition of 0 cm. Free drainage occurs at the bottom, which indicates that the pressure head gradient is 0 and water flows only due to gravity.

## Scenario 1

Infiltration into sandy soil. global.con f: Choose correct model, dimension, time discretization and observation times. 1. Open *global.conf* in a text editor of your choice. 2. Model type: Your first input is the module. Input is **RE**. 171 3. Initial mesh configuration 172 (a) The dimension of our problem is 1. Input: 1. (b) We use the internal mesh generator. Input: 1. 174 4. Error criterion 175 (a) Maximum number of iteration of the Picard method: 20 (b) h tolerance: 1e-1. 177 5. Time information 178 (a) Time units are in hours: input d (b) Initial time: 1e-4. 180 (c) End time: 1. 181 (d) Minimum time step: 1e-4. 182 (e) Maximum time step: 0.1. 183 6. Observation time settings 184 (a) Observation time method: 2 185 (b) Set file format of observation: pure. Output in 1D is always in raw data. Different 186 options will not impact output in 1D. 187 (c) Make sequence of observation time: n 188

(d) Number of observation times: 10

- (e) Observation time values: 0.001, 0.005, 0.01, 0.05, 0.1, 0.2, 0.3, 0.4, 0.6, 0.8. Use
  a new line for each input. DRUtES automatically generates output for the initial
  time and final time. DRUtES will generate 12 output files, e.g. RE\_matrix\_press\_headx.dat, RE\_matrix\_theta-x.dat where x is the number of the file and not the output
  time. The initial time is assigned an x value of 0.
  - 7. Observation point settings
- (a) Observation point coordinates: 0, 200. Use a new line for each input. *DRUtES*will generate 2 output files, e.g. *obspt\_RE\_matrix-1.out*, where x is the ID of the observation point.
- 8. Ignore other settings for now.
- 9. Save global.conf

- drumesh1D.conf: Mesh definition, i.e. number of materials and spatial discretization
- 202 1. Open *drumesh1D.conf* in a text editor of your choice.
- 203 2. Geometry information: 200 cm domain length
- 3. Amount of intervals: 1
  - $4. \frac{\text{density}}{5} \frac{\text{bottom}}{0} \frac{\text{top}}{200}$
- 5. number of materials: 1
- 207 6. id bottom top 5 0 200
- matrix.conf: Configuration file for water flow
- 209 1. Open matrix.conf in a text editor of your choice.
- 2. How-to use constitutive relations? [integer]: 1
- 3. Length of interval for precalculating the constitutive functions: 200

- 4. Discretization step for constituitive function precalculation: 0.1
- 5. number of soil layers [integer]: 1

214	6	alpha	n	m	$theta\_r$	theta_s	specific storage	
214	0.	0.1	2.2	0.55	0.00	0.40	0	

- 7. The angle of the anisotropy determines the angle of the reference coordinate system.
- 216 0 means vertical flow. Anisotropy description. Anisotropy description and hydraulic

217 conductivity

215

219

221

angle [degrees]	K_11
0	400

- 8. sink(-) / source(+) term per layer: 0
- 9. Initial condition is a constant pressure head of -200 cm across the soil.

init. cond [real]	type of init. cond	RCZA method $[y/n]$	RCZA method val.
-200.0	hpres	n	0

10. number of boundaries: 2

		boundary ID	boundary type	use rain.dat $[y/n]$	value
223	11.	101	3	n	0.0
		102	1	n	0.0

12. Save matrix.conf.

# Run scenario 1

- 226 Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$ bin/drutes

- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/water.conf/waterplots.R -name sand
  - 4. The output of the simulation can be found in the folder out

# Scenario 2

- 234 Infiltration into silty soil
- 235 1. global.conf and drumesh1D.conf remain the same.
- 236 2. Open matrix.conf in a text editor of your choice.
- 3. Use the same set-up, but change the van Genuchten parameters to:

000	1	alpha	n	m	theta_r	theta_s	specific storage	
238	4.	0.08	1.8	0.44	0.05	0.45	0	

5. anisothprophy description and hydraulic conductivity

angle [degrees]	K_11
0	40

6. Save matrix.conf.

240

## Run scenario 2

- 243 Run the simulation in the terminal console.
- 1. To execute DRUtES:
- \$ bin/drutes
- 2. generate png plots with R script:
- \$ Rscript drutes.conf/water.conf/waterplots.R -name silt

# Scenario 3

- 249 Infiltration into clay soil
- 250 1. global.conf and drumesh1D.conf remain the same.
- 2. Open *matrix.conf* in a text editor of your choice.
- 3. Use the same set-up, but change the van Genuchten parameters to:

252	4	alpha	n	m	$theta\_r$	$theta\_s$	specific storage	
253	т.	0.01	1.5	0.33	0.1	0.5	0	

5. anisothprophy description and hydraulic conductivity

angle [degrees]	K_11
0	4

6. Save matrix.conf.

255

256

## 257 Run scenario 3

258 Run the simulation in the terminal console.

- 1. To execute DRUtES:
- \$ bin/drutes
- 2. generate png plots with R script:
  - \$ Rscript drutes.conf/water.conf/waterplots.R -name clay

# $_{263}$ Tasks

262

- 1. Describe the infiltration fronts for sand, silt and clay.
- 265 2. The results do not look very smooth. This is because of insufficient discretization. Improve the discretization for sand. With what set-up are the results better? Possibilities are:
- in global.conf: Decrease the pressure head tolerance, Decrease the initial time step, Decrease the maximum time step.
  - in drumesh1D.conf: Decrease the mesh density.
- 3. Why is the flux at the top so huge in the beginning?

# Results

### $_{\scriptscriptstyle 273}$ ${ m Task}~1$

In the following time series of the infiltration into sand, silt and clay are presented. The infiltration front has moved furthest in sand, followed by silt and then clay. This is because of the assigned boundary conditions. The flux into sandy soil is very large. However, the time series show the numerical approximation is insufficient, especially for sand. This is because sand is the numerically most difficult to model as it has the steepest retention properties (largest n and largest alpha).

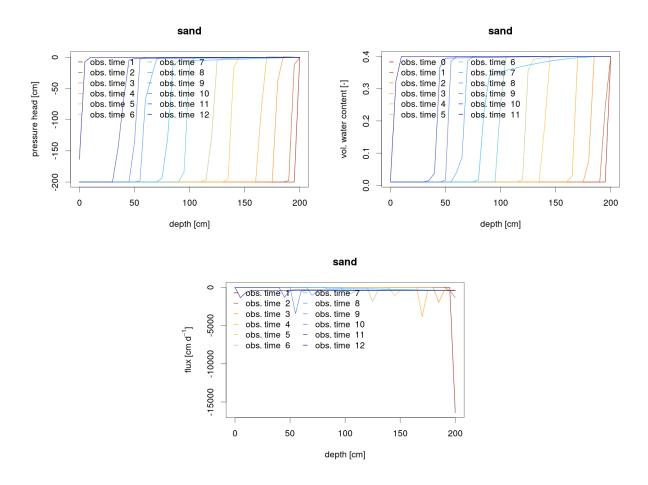


Figure 3.5: Observation time series of pressure head, vol. water content and flux of infiltration into sand.

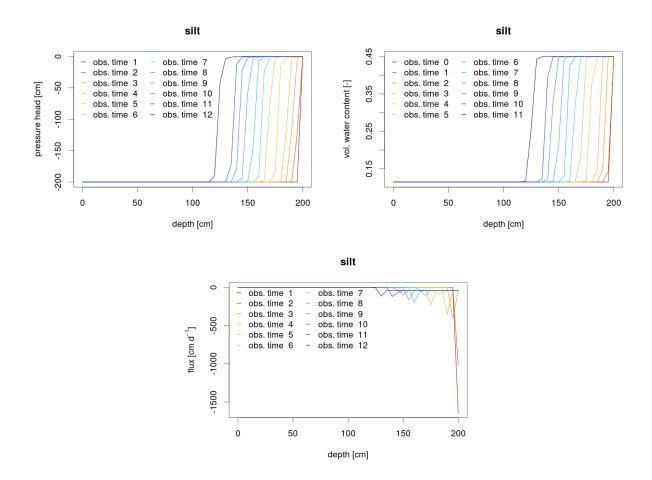


Figure 3.6: Observation time series of pressure head, vol. water content and flux of infiltration into silt.

### Task 2

The solution for sand the water content and hydraulic pressure become a lot smoother with 281 finer spatial discretization, eg. dz=0.5 and a finer temporal discretization by setting the 282 lower minimal time step to 0.01. The fluxes are still spiky, but correlate with the infiltration front. Different solutions can be found by decreasing the minimal time step even further and 284 also the h tolerance criterion. This, however, increases the simulation time substantially. 285 For a reliable solution, the numerical solution should converge. This means that decreasing 286 the time step, or discretization, should not lead to an entirely different solution. We notice, 287 that reducing the h tolerance criterion improves the solution locally, but that reducing the 288 maximum time step changes the depth of the infiltration front. This is because the mass balance is very much connected to the temporal discretization.


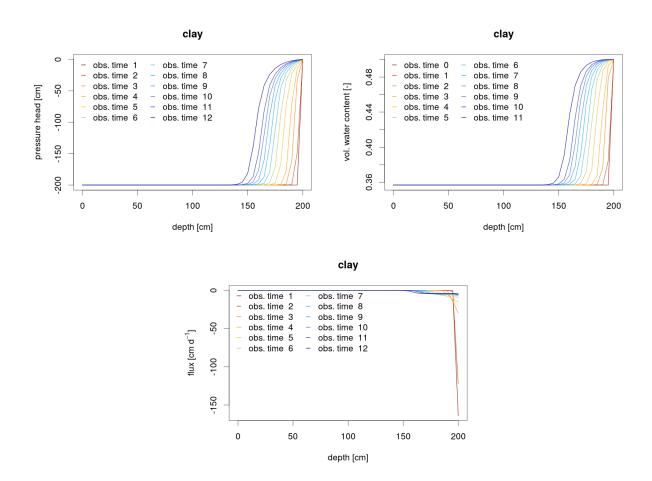


Figure 3.7: Observation time series of pressure head, vol. water content and flux of infiltration into clay.

### 1 Task 3

With the initial set-up, the flux at the top in sand is 15000 cm  $d^{-1}$  in the beginning of the simulation. For silt, the flux was numerically calculated to be at 1500 cm  $d^{-1}$  and for clay at 150 cm  $d^{-1}$ . The flux estimation becomes a lot larger with finer spatial discretization.

This is due to the large hydraulic gradient between the saturated top boundary and the next node of  $\nabla h = \frac{-200-0}{\text{dz}}$ . The smaller the nodal distance dz is, the greater is the gradient. According to the Darcy-Buckingham law, the flux is proportional to the hydraulic conductivity. The hydraulic conductivity is highest for sand. This is why the flux is largest for sand and lowest for clay.

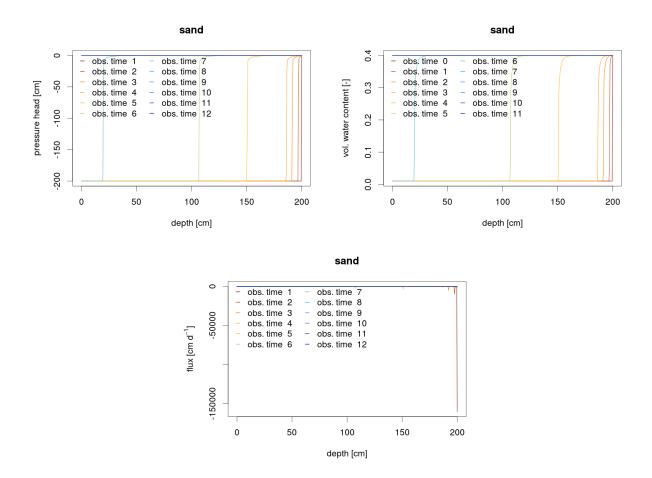

**Figure 3.8:** Observation time series of pressure head, vol. water content and flux of infiltration into sand with improved discretization.

## 3.2.3 Outcome

- 1. You got familiar with the DRUtES standard Richards Equation modules in 1D.
- 2. You understand basic parameterization of a typical sand, silt and clay with the van Genuchten-Mualem model.
- 3. You simulated infiltration in different soils.
- 4. You understand the term Free drainage and initial condition.
- 5. You understand the effects of different discretizations.

# <sup>1</sup> Chapter 4

# 2 Coupled models

# 3 4.1 Coupled water and heat flow

- 4.1.1 Goal and Complexity
- 5 Complexity: Medium
- 6 Prerequisites: Heat and Water Flow
- <sup>7</sup> The goal of this tutorial is to get familiar with the idea of coupled models in 1D. For this we
- 8 couple the DRUtES standard Richards equation module and the heat module. We apply
- 9 solar radiation data and rain and evaporation data as input.
- In the real world many coupled processes occur. In our model, heat conduction is de-
- pendent on the water flow as it transports the heat in the soil. In reality, heat and water
- is even more closely coupled as soil hydraulic properties are also dependent on temperature,
- e.g. surface tension and density change with temperature.
- In this tutorial three configuration files will be modified step by step. All configuration
- files are located in the folder *drutes.conf* and respective subfolders.
- 1. For selection of the module, dimension and time information we require global.conf.
- global.conf is located in drutes.conf / global.conf.
  - 2. To define the mesh or spatial discretization in 1D, we require drumesh1D.conf. drumesh1D.conf

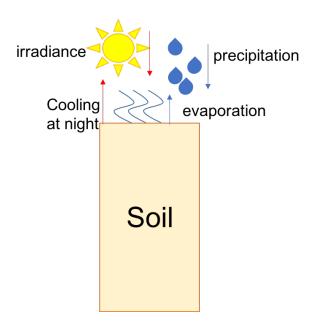


Figure 4.1: Simplified scheme of coupled model.


- is located in drutes.conf / mesh / drumesh1D.conf.
- 3. To define the radiation and cooling, we require heat.conf. heat.conf is located in drutes.conf /heat/ heat.conf.
- 4. To define the precipitation and evaporation, we require matrix.conf. matrix.conf is located in drutes.conf /water.conf/ matrix.conf.
- DRUtES works with configuration input file with the file extension .conf. Blank lines and
- 25 lines starting with # are ignored. The input mentioned in this tutorial therefore needs to
- be placed one line below the mentioned keyword, unless stated otherwise.

### $_{7}$ 4.1.2 Scenarios

- For these coupled scenarios we need to define four boundary conditions, two for the heat
- 29 flow and two for the water flow. We assume simplifying conditions for the bottom boundary.
- We assume the groundwater table to be at the bottom boundary. This condition does not
- change over time. Therefore we assign a constant Dirichlet condition for the water flow.
- We also assume that the temperature of the groundwater remains constant for the given
- simulation time. This means that we know the temperature, the solution of the heat flow
- equation and therefore assign a Dirichlet condition for the heat flow.
- In the following scenarios, the water flow is determined by evaporation and precipitation,
- or more generally time-varying rates of water, therefore the top boundary for the water flow
- is a Neumann condition. The heat flow over the top boundary is determined by radiation
- by the sun during the day and radiative cooling during the night. This condition can be
- understood as a Neumann condition. In these scenarios we want to investigate patterns of
- 40 temperature oscillations.
- We use time-varying boundary conditions for the heat and water flow, which need to be
- read from files. The file meteo heat.bc needs to be renamed to 102.bc in the heat folder.
- The file meteo water.bc needs to be renamed to 102.bc in the water.conf folder.
- The material properties needed for scenarios are in Tab. 4.1.

Parameter	Description	Soil
$\alpha  [\mathrm{cm}^{-1}]$	inverse of the air entry value	0.05
n [-]	shape parameter	2
m [-]	shape parameter	0.5
$ heta_s$ [-]	saturated vol. water content	0.45
$ heta_r$ [-]	residual vol. water content	0.05
$Ss [cm^{-1}]$	specific storage	0
$K_s$ [cm d <sup>-1</sup> ]	saturated hydraulic conductivity	100
$c_l  [\mathrm{Wd}  \mathrm{cm}^{-3}  \mathrm{K}^{-1}  ]$	specific heat capacity of soil	2.545e-5
$c_w$ [Wd cm <sup>-3</sup> K <sup>-1</sup> ]	specific heat capacity of water	4.843e-5
$\lambda \; [\mathrm{W} \; \mathrm{cm}^{-1} \; \mathrm{K}^{-1}]$	thermal conductivity	0.02

Table 4.1: Material properties needed for scenarios.

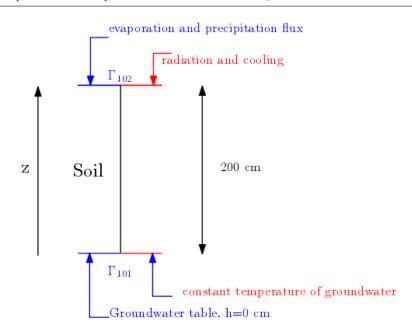

**Figure 4.2:** 1D domain set-up of coupled scenario with top and bottom boundary conditions. There are now two boundary conditions at the top and two boundary conditions at the bottom: heat and water flow. The top boundary is defined by the interactions with the atmosphere and the bottom boundary is defined by the constant groundwater table.

## Scenario 1

### 46 Coupled model

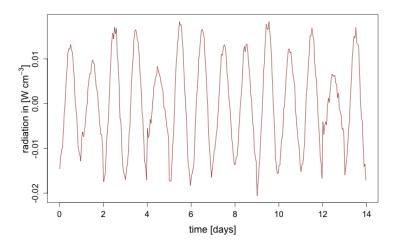


Figure 4.3: Heat flow data used for the top boundary

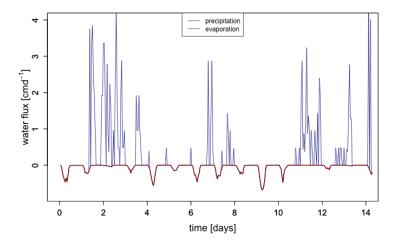


Figure 4.4: Water flow data used for the top boundary

- 47 global.conf: Choose correct model, dimension, time discretization and observation times.
- 1. Open *global.conf* in a text editor of your choice.
- 2. Model type: Your first input is the module. Input is **heat**.
- 50 3. Initial mesh configuration

- (a) The dimension of our problem is 1. Input: 1.
  - (b) We use the internal mesh generator. Input: 1.

- 4. Error criterion
- (a) Maximum number of iteration of the Picard method: 20
- (b) h tolerance: 1.
- 5. Time information
- 57 (a) Time units are in hours: input d
- (b) Initial time: 1e-6.
- (c) End time: 14.
- (d) Minimum time step: 1e-6.
- (e) Maximum time step: 0.001.
- 6. Observation time settings
- (a) Observation time method: 2
- (b) Set file format of observation: pure. Output in 1D is always in raw data. Different options will not impact output in 1D.
- (c) Make sequence of observation time: n
- (d) Number of observation times: 0
- (e) Observation time values: #
- 7. Observation point settings
- 70 (a) Number of observation points: 6
- 71 (b) Observation point coordinates: 200, 195,180,160,140, 120. Use a new line for each input. DRUtES will generate 6 output files, e.g. obspt\_RE\_matrix-1.out, where x is the ID of the observation point.
- 8. Ignore other settings for now.
- 9. Save global.conf
- drumesh1D.conf: Mesh definition, i.e. number of materials and spatial discretization

- 1. Open *drumesh1D.conf* in a text editor of your choice.
- 2. Geometry information: 200 cm domain length
- 3. Amount of intervals: 1
- 4.  $\frac{\text{density bottom top}}{4} \quad 0 \quad 200$
- 5. number of materials: 1
- matrix.conf: Configuration file for water flow
- 1. Open *matrix.conf* in a text editor of your choice.
- 2. How-to use constitutive relations? [integer]: 1
- 3. Length of interval for precalculating the constitutive functions: 200
- 4. Discretization step for constituitive function precalculation: 0.1
- 5. number of soil layers [integer]: 1
- 7. The angle of the anisotropy determines the angle of the reference coordinate system.
- 91 0 means vertical flow. Anisotropy description. Anisotropy description and hydraulic
- 92 conductivity

angle [degrees]	K_11
0	100

- 8. sink(-) / source(+) term per layer: 0
- 9. Initial condition is a constant pressure head of -200 cm across the soil.

0.5	init. cond [real]	type of init. cond	RCZA method $[y/n]$	RCZA method val.
96	0.0	$H\_{ m tot}$	n	0

97 10. number of boundaries: 2

		boundary ID	boundary type	use rain.dat [y/n]	value
98	11.	101	1	n	0.0
		102	2	у	0.0

- 99 12. Save matrix.conf.
- heat.conf: Heat module after Sophocleous (1979).
- 101 1. Open *heat.conf* in a text editor of your choice.
- 2. Couple with Richards equation: y
- 3. Number of materials or layers: 1
- 4. Specific heat capacity of the wall material: 2.545e-5 Wd cm<sup>-3</sup> K<sup>-1</sup>
- 5. Specific heat capacity of liquid: 4.843e-5 Wd cm<sup>-3</sup> K<sup>-1</sup>
- 6. Anisotropy: There is no anisotropy. The value is 0.
- 7. Heat conductivity of the soil material:  $0.02 \text{ W cm}^{-1} \text{ K}^{-1}$ .
- 8. There is NO heat convection of water: 0.
- 9. The initial temperature is 0°C across the entire domain: 0.
- 110 10. There is no heat source: 0.
- 11. We have 2 boundaries at top and bottom of the soil column. We assume a constant temperature of 15 °C at the bottom where the groundwater table is. We assume the the top to be influenced by radiation and cooling, which are both flux or Neumann conditions.

boundary id	boundary type	use bc.dat	value
101	1	n	15.0
102	2	y	0.0

12. Save heat.conf.

# 117 Run scenario 1

- Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$ bin/drutes
- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/water.conf/waterplots.R -name coupled
- \$\\$\\$\ Rscript drutes.conf/heat/heatplots.R coupled
- 4. The output of the simulation can be found in the folder out

# $_{126}$ Tasks

1. Describe the temperature and water content distribution.

# 128 Results

- The water content at the top follows the flux input. The lower the observation point, the less
- 130 fluctuations can be observed. The temperature follows the heat flux input. The temperature
- 131 fluctuations become smaller with depth, but also show a lag time.

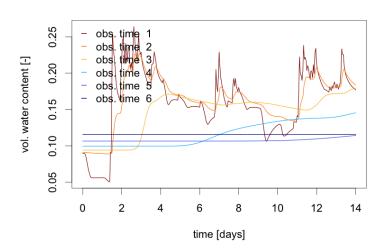


Figure 4.5: Water content at the observation points

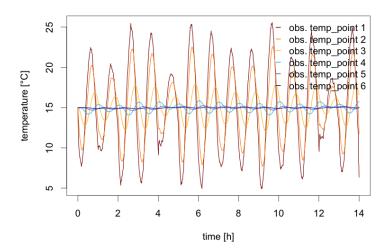


Figure 4.6: Temperature at the observation points.

### 132 4.1.3 Outcome

- 1. You got familiar with the idea of coupled models.
- 2. You simulated coupled water flow and heat flow.
- 3. You understand the influence of distance to input flux and how the top is the most varying layer.

# 4.2 Coupled water flow and contaminant transport

## $_{138}$ 4.2.1 Goal and Complexity

# 139 Complexity: Medium

## 140 Prerequisites: Water flow module

The goal of this tutorial is to introduce contaminant transport. For this we couple the DRUtES standard Richards equation module with the ADE module. ADE stands for Advection-Dispersion-Equation. The advection will be calculated through the RichardsEquation (water flow).

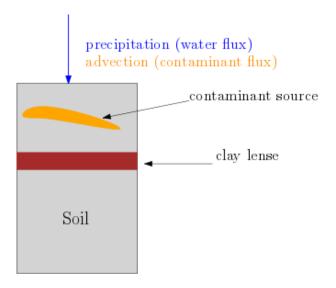


Figure 4.7: Simplified scheme of coupled model.

- In this example we assume that the contaminant is soluble and in the water. No adsorption or desorption occurs.
- In this tutorial five configuration files will be modified step by step. All configuration files are located in the folder *drutes.conf* and respective subfolders.
- 1. For selection of the module, dimension and time information we require *global.conf*.

  global.conf is located in *drutes.conf* / *global.conf*.
- 2. To define the mesh or spatial discretization in 1D, we require drumesh1D.conf. drumesh1D.conf is located in drutes.conf / mesh / drumesh1D.conf.

- 3. To define the precipitation, we require matrix.conf. matrix.conf is located in drutes.conf

  /water.conf/ matrix.conf.
- 4. To select the ADE module and link it to the water module, we require ADE.conf.

  ADE.conf is located in drutes.conf /ADE/ ADE.conf.
- 5. To define the contaminant transport, we require *contaminant.conf.* contaminant.conf is located in *drutes.conf* /*ADE*/ contaminant.conf.
- DRUtES works with configuration input file with the file extension .conf. Blank lines and lines starting with # are ignored. The input mentioned in this tutorial therefore needs to be placed one line below the mentioned keyword, unless stated otherwise.


### $_{2}$ 4.2.2 Scenarios

In the following scenario, there is a contaminant of a known concentration in the soil, which 163 we can set with appropriate layering of our domain and the initial condition. This coupled 164 model also requires four boundary conditions, two for the water flow and two for the con-165 taminant transport. We assume that the contaminant does not reach the bottom of our domain, nor the top boundary. The boundary conditions for the contaminant transport at 167 both boundaries are constant Dirichlet conditions. The bottom boundary represents the 168 groundwater table. We assign a Dirichlet condition for the water flow at the bottom of the profile. We assume precipitation occurs at the top boundary and therefore, we assign a 170 Neumann condition at the top boundary. In these scenarios we want to investigate the effect 171 of a soil layer with different hydraulic properties below the contaminant.

Table 4.2: Material properties needed for scenarios.

Parameter	Description	Sand	Clay	Contaminant
$\alpha  [\mathrm{cm}^{-1}]$	inverse of the air entry value	0.05	0.01	
n [-]	shape parameter	2	1.4	
m [-]	shape parameter	0.5	0.2857	
$ heta_s$ [-]	saturated vol. water content	0.45	0.45	
$ heta_r$ [-]	residual vol. water content	0.05	0.05	
$Ss [cm^{-1}]$	specific storage	0	0	
$K_s [\mathrm{cm} \ \mathrm{d}^{-1}]$	saturated hydraulic conductivity	100	1	
$D \left[ cm^2 d^{-1} \right]$	diffusion	10e-3	10e-3	
$D_v$ [cm ]	dispersivity	30	100	
$c_{\rm init} \ [{\rm mg\ cm^{-3}}]$	initial concentration			2

The domain scheme is shown in Fig. 4.8. We need to define 4 boundary conditions. Our mesh requires 5 different layers to accommodate for the contaminantion, the extra soil and the layers in between.

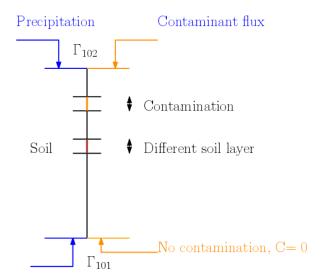

Groundwater table, h=0 cm

**Figure 4.8:** 1D domain set-up of coupled scenario with top and bottom boundary conditions. There are now two boundary conditions at the top and two boundary conditions at the bottom: contaminant transport and water flow. The top boundary is defined by the interactions with the atmosphere and the bottom boundary is defined by the constant groundwater table.

# Scenario 1

- 177 We first assume that the soil is homogeneous.
- global.conf: Choose correct model, dimension, time discretization and observation times.
- 1. Open *global.conf* in a text editor of your choice.
- 2. Model type: Your first input is the module. Input is ADE.
- 3. Initial mesh configuration
  - (a) The dimension of our problem is 1. Input: 1.
- (b) We use the internal mesh generator. Input: 1.
- 4. Error criterion
- (a) Maximum number of iteration of the Picard method: 20
- (b) h tolerance: 1e-3.
- 5. Time information

- (a) Time units are in hours: input d
- (b) Initial time: 1e-4.
- (c) End time: 10.
- (d) Minimum time step: 1e-12.
- (e) Maximum time step: 0.005.
- 6. Observation time settings
- (a) Observation time method: 2
- (b) Set file format of observation: pure. Output in 1D is always in raw data. Different
   options will not impact output in 1D.
- (c) Make sequence of observation time: n
- (d) Number of observation times: 9
- (e) Observation time values: 1, 2, 3,4,5,6,7,8,9. Use a new line for each input.

  DRUtES will generate 11 output files for each modeled component, e.g. RE\_matrix\_press\_head

  x.dat, where x is the ID of the observation point. The initial and final time value

  will be automatically be printed.
  - 7. Observation point settings
  - (a) Number of observation points: 6
- 205 (b) Observation point coordinates: 200, 195,187.5,182.5,175, 150. Use a new line for each input. *DRUtES* will generate 6 output files for each modeled component, e.g. *obspt RE matrix-1.out*, where x is the ID of the observation point.
  - 8. Ignore other settings for now.
- 9. Save global.conf

204

- drumesh1D.con f: Mesh definition, i.e. number of materials and spatial discretization
- 1. Open *drumesh1D.conf* in a text editor of your choice.

- 2. Geometry information: 200 cm domain length
- 3. Amount of intervals: 1
- 5. number of materials: 5

	id	bottom	top
	1	0	170
6.	2	170	180
0.	3	180	185
	4	185	190
	5	190	200

- 7. Save drumesh1D.conf
- matrix.conf: Configuration file for water flow
- 1. Open matrix.conf in a text editor of your choice.
- 2. How-to use constitutive relations? [integer]: 1
- 3. Length of interval for precalculating the constitutive functions: 200
- 4. Discretization step for constituitive function precalculation: 0.1
- 5. number of soil layers [integer]: 5

	alpha	n	m	theta_r	theta_s	specific storage
	0.05	2	0.5	0.05	0.45	0
6.	0.05	2	0.5	0.05	0.45	0
0.	0.05	2	0.5	0.05	0.45	0
	0.05	2	0.5	0.05	0.45	0
	0.05	2	0.5	0.05	0.45	0

7. The angle of the anisotropy determines the angle of the reference coordinate system.

0 means vertical flow. Anisotropy description. Anisotropy description and hydraulic

227 conductivity

angle [degrees]	K_11
0	100
0	100
0	100
0	100
0	100

8. sink(-) /source (+) term per layer:

230

228

231

232

233

234

235

236

9. Initial condition is a constant pressure head of -200 cm across the soil.

init. cond [real]	type of init. cond	RCZA method [y/n]	RCZA method val.
0.0	H_tot	n	0
0.0	H_tot	n	0
0.0	H_tot	n	0
0.0	H_tot	n	0
0.0	H_tot	n	0

10. number of boundaries: 2

		boundary ID	boundary type	use rain.dat $[y/n]$	value
238	11.	101	1	n	0.0
		102	2	n	0.5

12. Save matrix.conf.

240 Contaminant transport ADE.conf

- 1. Open *ADE.conf* in a text editor of your choice.
- 2. specify coupling with Richards equation [y/n]: y

- 3. use sorption: n
- 4. Save ADE.conf.
- contaminant.conf
- 1. Open *contaminant.conf* in a text editor of your choice.
- 2. number of layers: 5
- 3. molecular diffusion:
- 10e-3
- 250 10e-3
- 251 10e-3
- 252 10e-3
- 253 10e-3

257

4. dispersivity:

angle [degrees]	D_11
0	30
0	30
0	30
0	30
0	30

5. initial condition:

value	type
0	ca
0	ca
0	ca
2	ca
0	ca

- 6. number of different orders of reactions: 1
- 7. orders of reaction:
- 260 1

262 1

263 1

264 1

8. reaction coefficients:

266

267

268

269

270

9. number of boundaries: 2

		boundary ID	boundary type	use rain.dat $[y/n]$	value
272	10.	101	1	n	0.0
		102	2	n	0.0

11. save contaminant.conf

# Run scenario 1

275 Run the simulation in the terminal console.

1. Make sure you are in the right directory.

2. To execute DRUtES:

\$ bin/drutes

276

281

282

3. After the simulation finishes, to generate png plots execute provided R script:

\$ Rscript drutes.conf/makeplot.R -name coupled\_samesoil

4. The output of the simulation can be found in the folder out

# Scenario 2

286

287

288

289

290

291

293

294

296

297

In scenario 2 we introduce a clay layer in depth 170-180 cm. For this, we need to change matrix.conf and contaminant.conf.

Changes in matrix.conf

1. Change the 2nd van Genuchten parameter set:

alpha	n	m	theta_r	theta_s	specific storage
0.05	2	0.5	0.05	0.45	0
0.01	1.4	0.2857	0.05	0.45	0
0.05	2	0.5	0.05	0.45	0
0.05	2	0.5	0.05	0.45	0
0.05	2	0.5	0.05	0.45	0

2. Change the 2nd hydraulic conductivity. The angle of the anisotropy determines the angle of the reference coordinate system. 0 means vertical flow. Anisotropy description.

Anisotpropy description and hydraulic conductivity

angle [degrees]	K_11
0	100
0	1
0	100
0	100
0	100

3. save matrix.conf

Changes in contaminant.conf

1. Change the second dispersivity value to 100. dispersivity:

angle [degrees]	D_11
0	30
0	100
0	30
0	30
0	30

2. save contaminant.conf

# <sup>299</sup> Run scenario 2

298

- 300 Run the simulation in the terminal console.
- 1. Make sure you are in the right directory.
- 2. To execute DRUtES:
- \$ bin/drutes
- 3. After the simulation finishes, to generate png plots execute provided R script:
- \$ Rscript drutes.conf/makeplot.R -name coupled\_claylense


4. The output of the simulation can be found in the folder out

# 308 Tasks


- 1. Describe the distribution of the contaminant without and with the clay layer.
- 2. Investigate how the simulation differs: (i) With a different soil material (ii) when you include a reaction in contaminant.conf

# Simulation Results

The simulation nicely shows how the contamination moves downwards into the soil and disperses to compensate for concentration differences. The clay layer hinders the water flow into deeper layers and therefore also the advection. Due to the high dispersion in the clay layer the contaminant concentration becomes more evenly distributed in that layer.

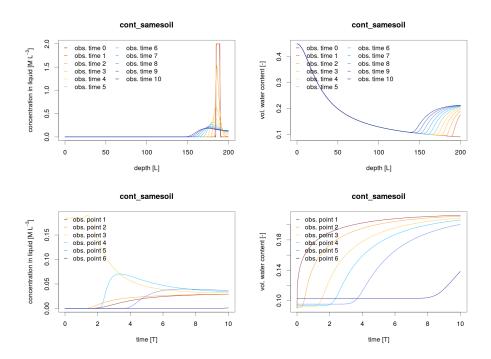

**Figure 4.9:** Water content and contaminant concentration at the observation points and observation times the homogeneous soil.

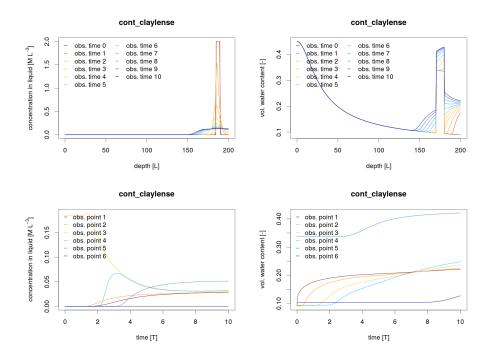

**Figure 4.10:** Water content and contaminant concentration at the observation points and observation times with a clay layer.

## 317 **4.2.3** Outcome

- 1. You got familiar with simple contaminant transport.
- 2. You simulated coupled water flow and contamination transport.
- 3. You understand the difference between advection and dispersion.