

# INTEROP NAMESPACE

**Quick Start Guide** 



AUGUST 12, 2020 MICHAEL WALKER Version 0.0.1

# QUICK START GUIDE FOR THE INTEROP NAMESPACE INFORMATION

# TABLE OF CONTENTS

Quick Start Guide for the Interop Namespace information	0
Introduction	1
WHAT IS A QUICK START GUIDE	1
TOOL USED FOR THE QUICK START GUIDE ILLUSTRATION	1
THE MOCK IMPLEMENTATIONS	2
HOW A GUIDE WORKS	2
THE QUICK START GUIDE FOR THE INTEROP NAMESPACE	2
REGISTERED PROFILES	3
ACCOUNTS AND IDENTITIES	10
ROLES	12
INDICATIONS	13
WREM PROTOCOL MANAGEMENT	18

# Introduction

#### WHAT IS A QUICK START GUIDE

SMI-S is 2516 pages of reading spread across 8 books, plus it references another 14 or so DMTF profiles which amount to another 660 pages of reading. So, the question is where do you start? We have come up with a series of Quick Start Guides that are designed to help you get started by illustrating how to find useful SMI-S information in mock servers (mock ups of SMI-S server implementations). The Quick Start Guides don't illustrate EVERYTHING in the 3176 pages, but they give you a head start at finding some important items in SMI-S.

We currently have quick start guides for:

- 1. The Interop Namespace What is it and what does it tell us?
- 2. Performance Information Where do I find performance information in an SMI-S Server?
- 3. Capacity Information Where do I find storage capacity information in an SMI-S Server?
- 4. Hardware Information Where do I find hardware information in an SMI-S Server?
- 5. Product Information Where do I find product information in an SMI-S Server?
- 6. Software Information Where do I find software information in an SMI-S Server?

# TOOL USED FOR THE QUICK START GUIDE ILLUSTRATION

The tool used for illustrating how to find information in SMI-S is the pywbemcli (part of pywbemtools). It is a command line interface for accessing any WBEM Server. It uses pywbem, an interface for python program access to any WBEM Server. The pywbemtools (and the pywbemcli) and pywbem are python

programs that use a set of python packages. Pywbem and the pywbemtools are actively being maintained and are available on Github.

We will be using the latest version of the pywbemcli in these guides. You can find documentation on the pywbemcli at the following website:

https://pywbemtools.readthedocs.io/en/latest/

#### THE MOCK IMPLEMENTATIONS

The mock implementations mock selected autonomous profiles and some of their component profiles in SMI-S 1.8.0.

We currently have mock ups for the following autonomous profiles:

- 1. The SNIA Server Profile
- 2. The DMTF WBEM Server Profile
- 3. The Array Profile
- 4. The NAS Head Profile

And we plan on doing a Fabric (and Switch) mock up.

We chose to do mock ups of the SMI-S 1.8.0 versions of these profiles to illustrate differences between 1.8.0 and 1.6.1. We don't mock everything that is new in 1.8.0, but we do highlight some key changes ... like the DMTF WBEM Server profile, new indications and Advance Metrics (performance) for Arrays.

#### **HOW A GUIDE WORKS**

The guide is a sequence of text explaining what we are looking for, followed by the command to obtain the information, followed by command output and then text that explains the output.

# THE QUICK START GUIDE FOR THE INTEROP NAMESPACE

In this guide we will be exploring the interop namespace and explaining why it is important to any CIM implementation. The interop namespace contains common elements for any CIM Server. It contains profile definitions, accounts for who can access the server, the Roles they play and Indications supported by the server.

This 20-page document highlights information that can be found in about 400 pages of SMI-S, spread across one SMI-S book (the Common Profiles book) and 5 DMTF profile documents.

In this script we will be working with beta3 of pywbem 1.0.0 and version 0.7.1 of pywbemtools (pywbemcli).

So, let's begin. First, we go to our virtual environment for beta3:

## C:\Users\FarmerMike>workon beta3

(beta3) c:\Users\FarmerMike\devenv>

We are now in our virtual environment for beta3.

We will be working with a mock server that supports an SMI-S 1.8.0 Array. We will point out items that were introduced after 1.6.1. So, we need to establish a connection to the Array mock up:

# (beta3) c:\Users\FarmerMike\devenv>pywbemcli -o table --name ArrayMock

Enter 'help' for help, <CTRL-D> or ':q' to exit pywbemcli or <CTRL-r> to search history, pywbemcli>

In our command, I requested the default format of output to be in "table" format (-o table) and name the mock that I want (--name ArrayMock). The command worked and we get a pywbemcli prompt to start entering commands on the ArrayMock.

#### **REGISTERED PROFILES**

The first thing we will look at are instances of CIM\_RegisteredProfile. Each instance defines standard behavior supported by the CIM Server.

pywbemcli>instance enumerate CIM_RegisteredProfilepl							
Registered Organization, Registered Name, Registered Version, Advertise Types							
/Loading classes into the Mock Repository							
\Loading instances into the Mock Repository							
-DONE Loading instar	-DONE Loading instances into the Mock Repository						
Instances: CIM_Regis	teredProfile						
+	<del> </del>		++				
AdvertiseTypes	RegisteredName	RegisteredOrganization	RegisteredVersion				
3 (SLP)	+   "Array"	   11 (SNIA)	+    "1.8.0"				
•	•	11 (SNIA)	"1.8.0"				
2 (Not Advertised)		11 (SNIA)	"1.8.0"				
•	"DMTF Profile Registration"	2 (DMTF)	"1.0"				
2 (Not Advertised)	"Disk Drive Lite"	11 (SNIA)	"1.8.0"				
2 (Not Advertised)	"FC Target Ports"	' ' '					
	"IP Interface"   2 (DMTF)   "1.1.1"						
2 (Not Advertised)	"Indications"	2 (DMTF)	"1.2.2"				
	"Job Control"	2 (DMTF)	"1.0.0"				
2 (Not Advertised)	"Multiple Computer System"	11 (SNIA)	"1.2.0"				
2 (Not Advertised)	2 (Not Advertised)   "Physical Package"   11 (SNIA)   "1.8.0"						
2 (Not Advertised)	2 (Not Advertised)   "Profile Registration"   11 (SNIA)   "1.7.0"						
1	"Role Based Authorization"	2 (DMTF)	"1.0.0"				
2 (Not Advertised)	"SMI-S"	11 (SNIA)	"1.8.0"				
3 (SLP)	"Server"   11 (SNIA)   "1.7.0"						
1	Simple Identity Management"	2 (DMTF)	"1.1.0"				
2 (Not Advertised)		11 (SNIA)	"1.8.0"				
3 (SLP)	"WBEM Server"	2 (DMTF)	"1.0.1i"				
++   pywbemcli>							
P 7							

We see there are a lot of profiles (18). Some are autonomous profiles, some are component profiles (that support the autonomous profiles) and one represents SMI-S itself. The 14th profile in this list is the RegisteredProfile for SMI-S. You can tell which are autonomous profiles because SMI-S requires autonomous profiles be advertised using SLP.

We see that the autonomous profiles in this list are Array, Server and WBEM Server. Technically, the DMTF Profile Registration profile is also an autonomous profile. But in SMI-S, this profile is treated as a component profile.

Of these profiles, the WBEM Server profile and three of its component profiles (IP Interface, Role Based Authorization and Simple Identity Management) were introduced after 1.6.1. Just to verify that all the profiles support SMI-S 1.8.0 we will run the following command:

# pywbemcli>-o mof instance shrub CIM\_RegisteredProfile.? --ac CIM\_ElementConformsToProfile

This command is a shrub command. It is looking for everything that is directly related to CIM\_RegisteredProfile. The -o mof option says we want to switch to the mof format for the output for this command. The suffix .? means we want to select the registered profile on which to report. We will get a list of registered profiles and we select the one we want. The –ac CIM\_ElementConformsToProfile, restricts the report to just items related via CIM\_ElementConformsToProfile. So, when we run the command we get:

#### Pick Instance name to process

- 0: root/cimv2:CIM\_RegisteredProfile.InstanceID="SMI-S+1.8.0"
- 1: root/cimv2:CIM RegisteredProfile.InstanceID="Server+1.7.0"
- 2: root/cimv2:CIM\_RegisteredProfile.InstanceID="Profile Registration+1.7.0"
- 3: root/cimv2:CIM RegisteredProfile.InstanceID="Indications+1.2.2"
- 4: root/cimv2:CIM RegisteredProfile.InstanceID="Array+1.8.0"
- 5: root/cimv2:CIM RegisteredProfile.InstanceID="Physical Package+1.8.0"
- 6: root/cimv2:CIM RegisteredProfile.InstanceID="Block Services+1.8.0"
- 7: root/cimv2:CIM\_RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
- 8: root/cimv2:CIM RegisteredProfile.InstanceID="Software+1.8.0"
- 9: root/cimv2:CIM RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
- 10: root/cimv2:CIM\_RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
- 11: root/cimv2:CIM RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
- 12: root/cimv2:CIM\_RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
- 13: root/cimv2:CIM\_RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
- 14: root/cimv2:CIM RegisteredProfile.InstanceID="IP Interface 1.1.1"
- 15: root/cimv2:CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
- 16: root/cimv2:CIM RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
- 17: root/cimv2:CIM RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
- Input integer between 0 and 17 or Ctrl-C to exit selection:

Since we want to know which profiles conform to SMI-S 1.8.0, we select the SMI-S registered profile (the first registered profile)

## Input integer between 0 and 17 or Ctrl-C to exit selection: 0

RegisteredProfile.InstanceID="SMI-S+1.8.0"

onformantStandard(Role)

CIM ElementConformsToProfile(AssocClass)

- +-- ManagedElement(ResultRole)
- +-- CIM\_RegisteredProfile(ResultClass)(17 insts)

```
+-- /: CIM RegisteredProfile.InstanceID="Array+1.8.0"
  +-- /: CIM_RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
  +-- /: CIM RegisteredProfile.InstanceID="Block Services+1.8.0"
  +-- /: CIM RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
  +-- /: CIM RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
  +-- /: CIM_RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
  +-- /: CIM_RegisteredProfile.InstanceID="IP Interface 1.1.1"
  +-- /: CIM RegisteredProfile.InstanceID="Indications+1.2.2"
  +-- /: CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
  +-- /: CIM RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
  +--/:CIM RegisteredProfile.InstanceID="Physical Package+1.8.0"
  +-- /: CIM RegisteredProfile.InstanceID="Profile Registration+1.7.0"
  +-- /: CIM RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
  +-- /: CIM RegisteredProfile.InstanceID="Server+1.7.0"
  +-- /: CIM RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
  +-- /: CIM RegisteredProfile.InstanceID="Software+1.8.0"
  +--/:CIM_RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
pywbemcli>
```

We see that all the instances conform to SMI-S 1.8.0.

SMI-S uses something called the "Scoping Methodology". That means the autonomous profiles must have a CIM\_ElementConformsToProfile to their central instance. That is a CIM class instance that is central to the implementation of the autonomous profile.

So, let's look at the central instances of our autonomous profiles.

```
pywbemcli>-o mof instance shrub CIM_RegisteredProfile.? --ac CIM_ElementConformsToProfile
Pick Instance name to process
0: root/cimv2:CIM_RegisteredProfile.InstanceID="SMI-S+1.8.0"
1: root/cimv2:CIM RegisteredProfile.InstanceID="Server+1.7.0"
2: root/cimv2:CIM RegisteredProfile.InstanceID="Profile Registration+1.7.0"
3: root/cimv2:CIM_RegisteredProfile.InstanceID="Indications+1.2.2"
4: root/cimv2:CIM RegisteredProfile.InstanceID="Array+1.8.0"
5: root/cimv2:CIM_RegisteredProfile.InstanceID="Physical Package+1.8.0"
6: root/cimv2:CIM RegisteredProfile.InstanceID="Block Services+1.8.0"
7: root/cimv2:CIM_RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
8: root/cimv2:CIM RegisteredProfile.InstanceID="Software+1.8.0"
9: root/cimv2:CIM RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
10: root/cimv2:CIM RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
11: root/cimv2:CIM_RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
12: root/cimv2:CIM_RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
13: root/cimv2:CIM RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
14: root/cimv2:CIM_RegisteredProfile.InstanceID="IP Interface 1.1.1"
15: root/cimv2:CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
16: root/cimv2:CIM_RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
17: root/cimv2:CIM RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
Input integer between 0 and 17 or Ctrl-C to exit selection:
```

The first autonomous profile in the list is the Server profile, so we ask for selection 1:

```
Input integer between 0 and 17 or Ctrl-C to exit selection: 1

CIM_RegisteredProfile.InstanceID="Server+1.7.0"
+-- ConformantStandard(Role)
| +-- CIM_ElementConformsToProfile(AssocClass)
| +-- ManagedElement(ResultRole)
| +-- CIM_ObjectManager(ResultClass)(1 insts)
| +-- /:CIM_ObjectManager.~,Name="ACME:10.336.643.144",~,~
+-- ManagedElement(Role)
+-- CIM_ElementConformsToProfile(AssocClass)
+-- ConformantStandard(ResultRole)
+-- CIM_RegisteredProfile(ResultClass)(1 insts)
+-- /:CIM_RegisteredProfile.InstanceID="SMI-S+1.8.0"
pywbemcli>
```

In this output we are interested in the first association where the ConformantStandard is the Server Profile and the ManagedElement identifies the central instance for the Server Profile. For the Server profile, the central instance is an instance of CIM\_ObjectManager.

The next autonomous profile in the list is the Array Profile.

```
pywbemcli>-o mof instance shrub CIM RegisteredProfile.? --ac CIM ElementConformsToProfile
Pick Instance name to process
0: root/cimv2:CIM RegisteredProfile.InstanceID="SMI-S+1.8.0"
1: root/cimv2:CIM RegisteredProfile.InstanceID="Server+1.7.0"
2: root/cimv2:CIM RegisteredProfile.InstanceID="Profile Registration+1.7.0"
3: root/cimv2:CIM_RegisteredProfile.InstanceID="Indications+1.2.2"
4: root/cimv2:CIM RegisteredProfile.InstanceID="Array+1.8.0"
5: root/cimv2:CIM_RegisteredProfile.InstanceID="Physical Package+1.8.0"
6: root/cimv2:CIM_RegisteredProfile.InstanceID="Block Services+1.8.0"
7: root/cimv2:CIM_RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
8: root/cimv2:CIM RegisteredProfile.InstanceID="Software+1.8.0"
9: root/cimv2:CIM RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
10: root/cimv2:CIM_RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
11: root/cimv2:CIM RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
12: root/cimv2:CIM RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
13: root/cimv2:CIM RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
14: root/cimv2:CIM RegisteredProfile.InstanceID="IP Interface 1.1.1"
15: root/cimv2:CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
16: root/cimv2:CIM RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
17: root/cimv2:CIM_RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
Input integer between 0 and 17 or Ctrl-C to exit selection:
```

For the Array profile, we ask for selection 4:

```
Input integer between 0 and 17 or Ctrl-C to exit selection: 4

CIM_RegisteredProfile.InstanceID="Array+1.8.0"
+-- ConformantStandard(Role)
| +-- CIM_ElementConformsToProfile(AssocClass)
| +-- ManagedElement(ResultRole)
| +-- CIM_ComputerSystem(ResultClass)(1 insts)
| +-- /:CIM_ComputerSystem.~,Name="ACME+CF2A5091300089"
+-- ManagedElement(Role)
+-- CIM_ElementConformsToProfile(AssocClass)
+-- CIM_ElementConformsToProfile(AssocClass)
+-- ConformantStandard(ResultRole)
+-- CIM_RegisteredProfile(ResultClass)(1 insts)
+-- /:CIM_RegisteredProfile.InstanceID="SMI-S+1.8.0"
pywbemcli>
```

For the Array profile, the central instance is an instance of CIM\_ComputerSystem. It is sometimes referred to as the top level system of the Array.

The last autonomous profile in the list is the DMTF WBEM Server profile.

```
pywbemcli>-o mof instance shrub CIM RegisteredProfile.? --ac CIM ElementConformsToProfile
Pick Instance name to process
0: root/cimv2:CIM_RegisteredProfile.InstanceID="SMI-S+1.8.0"
1: root/cimv2:CIM RegisteredProfile.InstanceID="Server+1.7.0"
2: root/cimv2:CIM_RegisteredProfile.InstanceID="Profile Registration+1.7.0"
3: root/cimv2:CIM RegisteredProfile.InstanceID="Indications+1.2.2"
4: root/cimv2:CIM_RegisteredProfile.InstanceID="Array+1.8.0"
5: root/cimv2:CIM RegisteredProfile.InstanceID="Physical Package+1.8.0"
6: root/cimv2:CIM RegisteredProfile.InstanceID="Block Services+1.8.0"
7: root/cimv2:CIM RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
8: root/cimv2:CIM RegisteredProfile.InstanceID="Software+1.8.0"
9: root/cimv2:CIM_RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
10: root/cimv2:CIM RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
11: root/cimv2:CIM_RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
12: root/cimv2:CIM RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
13: root/cimv2:CIM_RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
14: root/cimv2:CIM RegisteredProfile.InstanceID="IP Interface 1.1.1"
15: root/cimv2:CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
16: root/cimv2:CIM RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
17: root/cimv2:CIM RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
Input integer between 0 and 17 or Ctrl-C to exit selection:
```

For the WBEM Server profile, we ask for selection 12:

```
Input integer between 0 and 17 or Ctrl-C to exit selection: 12

CIM_RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
+-- ConformantStandard(Role)
| +-- CIM_ElementConformsToProfile(AssocClass)
```

```
| +-- ManagedElement(ResultRole)
| +-- CIM_System(ResultClass)(1 insts)
| +-- /:CIM_System.~,Name="10.336.643.144"
+-- ManagedElement(Role)
+-- CIM_ElementConformsToProfile(AssocClass)
+-- ConformantStandard(ResultRole)
+-- CIM_RegisteredProfile(ResultClass)(1 insts)
+-- /:CIM_RegisteredProfile.InstanceID="SMI-S+1.8.0"
pywbemcli>
```

For the WBEM Server profile, the central instance is an instance of CIM\_System. But it is a different instance than the Array computer system.

And we see that both the DMTF WBEM Server and the SNIA Server have been implemented. The means the Interop requirements for both servers should be present. The DMTF WBEM Server is new in SMI-S 1.8.0. The SNIA Server was the profile for the Interop Namespace for the first six releases of SMI-S.

Let's start by inspecting what the DMTF WBEM Server standard calls for:

```
pywbemcli> -o mof instance shrub CIM RegisteredProfile.? --ac CIM ReferencedProfile
Pick Instance name to process
0: root/cimv2:CIM RegisteredProfile.InstanceID="SMI-S+1.8.0"
1: root/cimv2:CIM_RegisteredProfile.InstanceID="Server+1.7.0"
2: root/cimv2:CIM RegisteredProfile.InstanceID="Profile Registration+1.7.0"
3: root/cimv2:CIM RegisteredProfile.InstanceID="Indications+1.2.2"
4: root/cimv2:CIM_RegisteredProfile.InstanceID="Array+1.8.0"
5: root/cimv2:CIM RegisteredProfile.InstanceID="Physical Package+1.8.0"
6: root/cimv2:CIM RegisteredProfile.InstanceID="Block Services+1.8.0"
7: root/cimv2:CIM RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
8: root/cimv2:CIM_RegisteredProfile.InstanceID="Software+1.8.0"
9: root/cimv2:CIM RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
10: root/cimv2:CIM_RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
11: root/cimv2:CIM RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
12: root/cimv2:CIM RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
13: root/cimv2:CIM RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
14: root/cimv2:CIM RegisteredProfile.InstanceID="IP Interface 1.1.1"
15: root/cimv2:CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
16: root/cimv2:CIM RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
17: root/cimv2:CIM RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
Input integer between 0 and 17 or Ctrl-C to exit selection:
```

For this command we are looking for CIM\_ReferencedProfile associations to component profiles from the DMTF WBEM Server profile. So, we select profile number 12.

```
Input integer between 0 and 17 or Ctrl-C to exit selection: 12

CIM_RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
+-- Antecedent(Role)
```

```
+-- CIM_ReferencedProfile(AssocClass)
+-- Dependent(ResultRole)
+-- CIM_RegisteredProfile(ResultClass)(6 insts)
+-- /:CIM_RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
+-- /:CIM_RegisteredProfile.InstanceID="IP Interface 1.1.1"
+-- /:CIM_RegisteredProfile.InstanceID="Indications+1.2.2"
+-- /:CIM_RegisteredProfile.InstanceID="Job Control 1.0.0"
+-- /:CIM_RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
+-- /:CIM_RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
pywbemcli>
```

We see that the DMTF WBEM Server profile has six component profiles (the DMTF Profile Registration, IP Interface, Job Control, Role Based Authorization, Simple Identity Management and Indications profiles).

So, let compare that to the SNIA Server profile component profiles.

```
pywbemcli> -o mof instance shrub CIM_RegisteredProfile.? --ac CIM_ReferencedProfile
Pick Instance name to process
0: root/cimv2:CIM RegisteredProfile.InstanceID="SMI-S+1.8.0"
1: root/cimv2:CIM RegisteredProfile.InstanceID="Server+1.7.0"
2: root/cimv2:CIM RegisteredProfile.InstanceID="Profile Registration+1.7.0"
3: root/cimv2:CIM RegisteredProfile.InstanceID="Indications+1.2.2"
4: root/cimv2:CIM RegisteredProfile.InstanceID="Array+1.8.0"
5: root/cimv2:CIM RegisteredProfile.InstanceID="Physical Package+1.8.0"
6: root/cimv2:CIM RegisteredProfile.InstanceID="Block Services+1.8.0"
7: root/cimv2:CIM RegisteredProfile.InstanceID="FC Target Ports+1.8.0"
8: root/cimv2:CIM RegisteredProfile.InstanceID="Software+1.8.0"
9: root/cimv2:CIM RegisteredProfile.InstanceID="Disk Drive Lite+1.8.0"
10: root/cimv2:CIM RegisteredProfile.InstanceID="Block Server Performance+1.8.0"
11: root/cimv2:CIM RegisteredProfile.InstanceID="Multiple Computer System+1.2.0"
12: root/cimv2:CIM_RegisteredProfile.InstanceID="WBEM Server 1.0.1i"
13: root/cimv2:CIM RegisteredProfile.InstanceID="DMTF Profile Registration+1.0"
14: root/cimv2:CIM RegisteredProfile.InstanceID="IP Interface 1.1.1"
15: root/cimv2:CIM RegisteredProfile.InstanceID="Job Control 1.0.0"
16: root/cimv2:CIM RegisteredProfile.InstanceID="Role Based Authorization 1.0.0"
17: root/cimv2:CIM RegisteredProfile.InstanceID="Simple Identity Management 1.1.0"
Input integer between 0 and 17 or Ctrl-C to exit selection:
```

In this case we are looking for CIM\_ReferencedProfile associations to component profiles from the SNIA Server profile. So, we select profile number 1.

```
Input integer between 0 and 17 or Ctrl-C to exit selection: 1

CIM_RegisteredProfile.InstanceID="Server+1.7.0"
+-- Antecedent(Role)
+-- CIM_ReferencedProfile(AssocClass)
+-- Dependent(ResultRole)
+-- CIM_RegisteredProfile(ResultClass)(2 insts)
```

```
+-- /:CIM_RegisteredProfile.InstanceID="Indications+1.2.2"
+-- /:CIM_RegisteredProfile.InstanceID="Profile Registration+1.7.0"
pywbemcli>
```

We see that the SNIA Server profile has two component profiles (the Indications and Profile Registration).

Notice the SNIA Server profile uses the SNIA Profile Registration, whereas the WBEM Server Profile uses the DMTF Profile Registration. The SNIA Profile Registration augments the DMTF Profile Registration by adding the requirement for a CIM\_ElementConformsToProfile to the SMI-S RegisteredProfile and Software information about what software supports the interop namespace.

Since the mock server is claiming to support BOTH the DMTF WBEM Server AND the SNIA Server, the SNIA augmentation also applies to the WBEM Server (and vice versa). But SMI-S only requires one of the servers to be implemented.

#### **ACCOUNTS AND IDENTITIES**

Accounts and Identities are managed by the DMTF Simple Identity Management profile, which is a new profile (after SMI-S 1.6.1). So, first let's see what the interop namespace has for Accounts with the following command:

pywbemcli>instance enumerate CIM_Accountpl Name,Userid,UserPassword,OrganizationName,RequestedState,EnabledState					
Instances: CIM_Account	t				
+   Name 	EnabledState	OrganizationName	RequestedState	UserID	UserPassword
"10.336.643.144+00"   2 (Enabled)   "Storage Systems"   2 (Enabled)   "Jane"   "0o173"     "10.336.643.144+01"   2 (Enabled)   "Client Lib"   2 (Enabled)   "John"   "0o710"					
pywbemcli>					

We have two accounts (Jane and John).

Let's see what the accounts are related to:

```
pywbemcli> -o mof instance shrub CIM_Account.?

Pick Instance name to process
0:
root/cimv2:CIM_Account.CreationClassName="CIM_Account",Name="10.336.643.144+00",SystemCreationClassName="CIM_System",SystemName="10.336.643.144"
1:
root/cimv2:CIM_Account.CreationClassName="CIM_Account",Name="10.336.643.144+01",SystemCreationClassName="CIM_System",SystemName="10.336.643.144"
Input integer between 0 and 1 or Ctrl-C to exit selection:
```

We will look at the shrub for the first account:

```
Input integer between 0 and 1 or Ctrl-C to exit selection: 0
```

```
CIM_Account.CreationClassName="CIM_Account",Name="10.336.643.144+00",SystemCreationClass
Name="CIM_System",SystemName="10.336.643.144"
+-- PartComponent(Role)
| +-- CIM_AccountOnSystem(AssocClass)
| +-- GroupComponent(ResultRole)
| +-- CIM_System(ResultClass)(1 insts)
| +-- /:CIM_System.~,Name="10.336.643.144"
+-- ManagedElement(Role)
+-- CIM_AssignedIdentity(AssocClass)
+-- IdentityInfo(ResultRole)
+-- CIM_Identity(ResultClass)(1 insts)
+-- /:CIM_Identity.InstanceID="Ident00"
pywbemcli>
```

We see that the CIM\_Account is defined on the WBEM Server system and has an assigned identity.

Let's look at the assigned identities.

We see there are two identities, one for Jane (Jane Doe) and one for John (John Doe).

Let's see what the identities are related to.

```
pywbemcli> -o mof instance shrub CIM_Identity.?

Pick Instance name to process
0: root/cimv2:CIM_Identity.InstanceID="Ident00"
1: root/cimv2:CIM_Identity.InstanceID="Ident01"
Input integer between 0 and 1 or Ctrl-C to exit selection:
```

Again, we will look at the shrub for the first identity:

```
Input integer between 0 and 1 or Ctrl-C to exit selection: 0

CIM_Identity.InstanceID="Ident00"
+-- IdentityInfo(Role)
| +-- CIM_AssignedIdentity(AssocClass)
| +-- ManagedElement(ResultRole)
| +-- CIM_Account(ResultClass)(1 insts)
| +-- /:CIM_Account.~,Name="10.336.643.144+00",~,~
```

```
+-- Antecedent(Role)
| +-- CIM_ConcreteDependency(AssocClass)
| +-- Dependent(ResultRole)
| +-- CIM_Role(ResultClass)(1 insts)
| +-- /:CIM_Role.~,Name="Admin"
+-- AffectedElement(Role)
+-- CIM_ServiceAffectsElement(AssocClass)
+-- AffectingElement(ResultRole)
+-- CIM_AccountManagementService(ResultClass)(1 insts)
+-- /:CIM_AccountManagementService.~,Name="Account Management Service",~,~
pywbemcli>
```

In addition to being the assigned identity for a CIM\_Account, we see that it has a dependency to a CIM\_Role and is managed by an account management service.

#### **ROLES**

Roles are defined by the Role Based Authorization profile. Another profile that is new in SMI-S 1.7.0 (and SMI-S 1.8.0).

Now let's see what the interop namespace has for Roles with the following command.

pywbemcli> instance e Instances: CIM_Role			<b>+</b>	
CreationClassName	Name	CommonName	ElementName	RoleCharacteristics
"CIM_Role"   "CIM_Role"	"Admin"   "User"	"Administrator"     "User"	"Storage Administrator"	2 (Static)
pywbemcli>	-+	<del></del>	<del></del>	tt

We see there is a role of "Admin" and a role of "User".

Let's see what the roles are related to.

```
pywbemcli> -o mof instance shrub CIM_Role.?

Pick Instance name to process

0: root/cimv2:CIM_Role.CreationClassName="CIM_Role",Name="Admin"

1: root/cimv2:CIM_Role.CreationClassName="CIM_Role",Name="User"

Input integer between 0 and 1 or Ctrl-C to exit selection: 0

CIM_Role.CreationClassName="CIM_Role",Name="Admin"

+-- Dependent(Role)

| +-- CIM_ConcreteDependency(AssocClass)

| +-- Antecedent(ResultRole)

| +-- CIM_Identity(ResultClass)(1 insts)

| +-- /:CIM_Identity.InstanceID="Ident00"

+-- OwnedElement(Role)

| +-- CIM_OwningCollectionElement(AssocClass)
```

```
+-- OwningElement(ResultRole)
       +-- CIM_System(ResultClass)(1 insts)
         +-- /:CIM System.~,Name="10.336.643.144"
+-- DefiningRole(Role)
  +-- CIM RoleLimitedToTarget(AssocClass)
    +-- TargetElement(ResultRole)
       +-- CIM_ComputerSystem(ResultClass)(1 insts)
       +--/:CIM_ComputerSystem.~,Name="ACME+CF2A5091300089"
       +-- CIM_System(ResultClass)(2 insts)
         +-- /:CIM_ComputerSystem.~,Name="ACME+CF2A5091300089"
         +-- /:CIM_System.~,Name="10.336.643.144"
+-- AffectedElement(Role)
  +-- CIM_ServiceAffectsElement(AssocClass)
    +-- AffectingElement(ResultRole)
      +-- CIM RoleBasedAuthorizationService(ResultClass)(1 insts)
        +--/:CIM RoleBasedAuthorizationService.~,Name="RBA Service",~,~
pywbemcli>
```

We see that a CIM\_ConcreteDependency relates a CIM\_Role to CIM\_Identity instances that play that role. We also see that the CIM\_Role is owned by the server system (via CIM\_OwnedElement). And there the role applies to two systems (the Server system and the top level system of the array). And we see that the CIM\_Role instance is managed by an instance of CIM\_RoleBasedAuthorizationService.

#### **INDICATIONS**

Next both the DMTF WBEM Server profile and the SNIA Server profile support the DMTF Indications profile. An indication is an unsolicited message that is sent FROM the CIM Server to anyone that might be listening for the indication. It is the CIM equivalent of an SNMP alert. The messages supported by a CIM Server are defined by instances of CIM IndicationFilter.

Indication filters can be static (pre-defined by the CIM Server) or dynamic (created by a user of the CIM Server). In either case, we can see all of them by enumerating instances of CIM\_IndicationFilter. So, let's do that.

pywbemcli> instance enumerate CIM_IndicationFilterpl SystemName,Name,SourceNamespaces,IndividualSubscriptionSupported Instances: CIM_IndicationFilter						
   Name	SystemName	   IndividualSubscriptionSupported	+	+ 		
   "Change in Pool TotalManagedSpace"	-+	   true	+   "cim/v2"	 		
"Disk Drive Creation"	"10.336.643.144"	l true	"cim/v2"	i		
"Disk Drive Deletion"	"10.336.643.144"	l true	"cim/v2"	i		
"Disk Drive Status change"	"10.336.643.144"	true	"cim/v2"	Ĺ		
"FC Port Creation"	"10.336.643.144"	true	"cim/v2"	Ĺ		
"FC Port Deletion"	"10.336.643.144"	true	"cim/v2"	Ĺ		
"FC Port Status change"	"10.336.643.144"	true	"cim/v2"	ĺ		
"Pool Creation"	"10.336.643.144"	true	"cim/v2"	ĺ		
"Pool Deletion"	"10.336.643.144"	true	"cim/v2"	i		

"Pool capacity condition has been "	"10.336.643.144"	true	"cim/v2"	1
"cleared"				1
"Pool capacity has run out"	"10.336.643.144"	true	"cim/v2"	1
"Pool capacity is running low."	"10.336.643.144"	true	"cim/v2"	1
"Status of System Redundancy has "	"10.336.643.144"	true	"cim/v2"	1
"changed"		l		1
"Storage Volume has failed"	"10.336.643.144"	true	"cim/v2"	1
"Storage Volume returned to normal "	"10.336.643.144"	true	"cim/v2"	1
"service"			1	1
"StorageVolume has degraded"	"10.336.643.144"	true	"cim/v2"	1
"System Creation"	"10.336.643.144"	true	"cim/v2"	1
"System Deletion"	"10.336.643.144"	true	"cim/v2"	1
"System Status Change"	"10.336.643.144"	true	"cim/v2"	1
+	+	+	-+	+
pywbemcli>				

We see that there are 19 indications defined for this CIM Server. That is there are 19 different events that this CIM Server may send to clients that are listening for the indications. In this list a number of them are new since 1.6.1. They include the "Change in Pool TotalManagedSpace", "Pool capacity condition has been cleared" and "Storage Volume returned to normal service".

Next let's look at what elements are related to these indication filters:

# pywbemcli> -o mof instance shrub CIM IndicationFilter.? Pick Instance name to process 0: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="System Creation", SystemCreationClassName="CIM\_System", SystemName="10.336.643.144" 1: root/cimv2:CIM\_IndicationFilter.CreationClassName="CIM\_IndicationFilter",Name="System Deletion", SystemCreationClassName="CIM\_System", SystemName="10.336.643.144" 2: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="System Status Change", System Creation Class Name = "CIM\_System", System Name = "10.336.643.144" root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="StorageVolume has degraded", SystemCreationClassName="CIM System", SystemName="10.336.643.144" 4: root/cimv2:CIM\_IndicationFilter.CreationClassName="CIM\_IndicationFilter",Name="Storage Volume has failed", SystemCreationClassName="CIM System", SystemName="10.336.643.144" 5: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Storage Volume returned to normal service", SystemCreationClassName="CIM\_System", SystemName="10.336.643.144" 6: root/cimv2:CIM\_IndicationFilter.CreationClassName="CIM\_IndicationFilter",Name="Pool Creation", System Creation Class Name = "CIM System", System Name = "10.336.643.144" 7: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Pool Deletion", SystemCreationClassName="CIM System", SystemName="10.336.643.144" 8: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Change in Pool TotalManagedSpace",SystemCreationClassName="CIM System",SystemName="10.336.643.144" 9: root/cimv2:CIM\_IndicationFilter.CreationClassName="CIM\_IndicationFilter",Name="Pool capacity is running low.",SystemCreationClassName="CIM System",SystemName="10.336.643.144" 10: root/cimv2:CIM\_IndicationFilter.CreationClassName="CIM\_IndicationFilter",Name="Pool capacity has run out", SystemCreationClassName="CIM\_System", SystemName="10.336.643.144"

```
11: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Pool capacity
condition has been
cleared", System Creation Class Name = "CIM System", System Name = "10.336.643.144"
12: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Disk Drive
Creation",SystemCreationClassName="CIM System",SystemName="10.336.643.144"
13: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Disk Drive
Deletion", SystemCreationClassName="CIM_System", SystemName="10.336.643.144"
14: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Disk Drive
Status change", System Creation Class Name = "CIM System", System Name = "10.336.643.144"
15: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="FC Port
Creation",SystemCreationClassName="CIM System",SystemName="10.336.643.144"
16: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="FC Port
Status change", System Creation Class Name = "CIM_System", System Name = "10.336.643.144"
17: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="FC Port
Deletion", SystemCreationClassName="CIM System", SystemName="10.336.643.144"
18: root/cimv2:CIM IndicationFilter.CreationClassName="CIM IndicationFilter",Name="Status of
System Redundancy has
changed", SystemCreationClassName="CIM_System", SystemName="10.336.643.144"
Input integer between 0 and 18 or Ctrl-C to exit selection:
```

We will look at the shrub for item 12 (Disk Drive Creation):

```
Input integer between 0 and 18 or Ctrl-C to exit selection: 12

CIM_IndicationFilter.CreationClassName="CIM_IndicationFilter",Name="Disk Drive Creation",SystemCreationClassName="CIM_System",SystemName="10.336.643.144" +-- Member(Role)

| +-- CIM_MemberOfCollection(AssocClass)

| +-- CIM_FilterCollection(ResultClass)(1 insts)

| +-- CIM_FilterCollection(ResultClass)(1 insts)

| +-- /:CIM_FilterCollection.InstanceID="10.336.643.144:DDLFilterCollection" +-- AffectedElement(Role)

+-- CIM_ServiceAffectsElement(AssocClass)

+-- AffectingElement(ResultRole)


+-- CIM_IndicationService(ResultClass)(1 insts)

+-- /:CIM_IndicationService.~,Name="Indication Service",~,~

pywbemcli>
```

We see that indication filters are related to two other elements: A FilterCollection and an IndicationService.

Let's first look at the service. For readability, this will be broken into 2 commands.

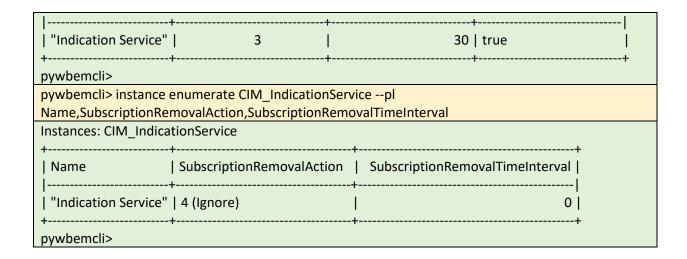

We see that filter creation is enabled and there will be three attempts to deliver an indication and 30 seconds between the attempts. We also see that the subscription removal action is 4 (Ignore) and the time interval before removal is 0 seconds.

Now let's look at the Filter Collections:

pywbemcli> instance enumerate CIM_FilterCollection					
Instances: CIM_FilterCollection					
InstanceID	CollectionName				
"10.336.643.144:BSFilterCollection"   "10.336.643.144:DDLFilterCollection"   "10.336.643.144:FCPFilterCollection"   "10.336.643.144:MCSFilterCollection"	"SNIA:Array:FilterCollection"     "SNIA:Block Services:FilterCollection"     "SNIA:Disk Drive Lite:FilterCollection"     "SNIA:FC Target Ports:FilterCollection"     "SNIA:Multiple Computer System:FilterCollection"     "StaticFilterCollection"				
pywbemcli>	TT				

Each of the Indication Filters can be related to a FilterCollection for profiles that support indications, or they may be related to a GlobalFilterCollection. If the filter is related to a specific profile, then it is generated for that specific profile elements. If it is in the Global Filter Collection, it can be generated from multiple profiles.

These filter collections are actually associated to the RegisteredProfiles. Each of the Indication Filters can be related to a FilterCollection for profiles that support indications, or they may be related to a GlobalFilterCollection. If the filter is related to a specific profile, then it is generated for that specific profile elements. If it is in the Global Filter Collection, it can be generated from multiple profiles.

These filter collections are actually associated to the RegisteredProfiles. We see this from the following command:

# pywbemcli> -o mof instance shrub CIM\_FilterCollection.? --ac CIM\_ConcreteDependency Pick Instance name to process 0: root/cimv2:CIM\_FilterCollection.InstanceID="10.336.643.144:StaticFilterCollection" 1: root/cimv2:CIM\_FilterCollection.InstanceID="10.336.643.144:ArrayFilterCollection" 2: root/cimv2:CIM\_FilterCollection.InstanceID="10.336.643.144:BSFilterCollection" 3: root/cimv2:CIM\_FilterCollection.InstanceID="10.336.643.144:DDLFilterCollection" 4: root/cimv2:CIM\_FilterCollection.InstanceID="10.336.643.144:FCPFilterCollection" 5: root/cimv2:CIM\_FilterCollection.InstanceID="10.336.643.144:MCSFilterCollection" Input integer between 0 and 5 or Ctrl-C to exit selection:

We will see what registered profile for the Array FilterCollection is by selecting 1.

```
Input integer between 0 and 5 or Ctrl-C to exit selection: 1

CIM_FilterCollection.InstanceID="10.336.643.144:ArrayFilterCollection"
+-- Dependent(Role)
+-- CIM_ConcreteDependency(AssocClass)
+-- Antecedent(ResultRole)
+-- CIM_RegisteredProfile(ResultClass)(1 insts)
+-- /:CIM_RegisteredProfile.InstanceID="Array+1.8.0"
pywbemcli>
```

And we see the ArrayFilterCollection is associated to the RegisteredProfile for Array via the ConcreteDependency association.

You can look at the indications supported by specific profiles by inspecting the member of collection association from the filter collection.

```
pywbemcli> -o mof instance shrub CIM_FilterCollection.? --ac CIM_MemberOfCollection

Pick Instance name to process

0: root/cimv2:CIM_FilterCollection.InstanceID="10.336.643.144:StaticFilterCollection"

1: root/cimv2:CIM_FilterCollection.InstanceID="10.336.643.144:ArrayFilterCollection"

2: root/cimv2:CIM_FilterCollection.InstanceID="10.336.643.144:BSFilterCollection"

3: root/cimv2:CIM_FilterCollection.InstanceID="10.336.643.144:DDLFilterCollection"

4: root/cimv2:CIM_FilterCollection.InstanceID="10.336.643.144:FCPFilterCollection"

5: root/cimv2:CIM_FilterCollection.InstanceID="10.336.643.144:MCSFilterCollection"

Input integer between 0 and 5 or Ctrl-C to exit selection:
```

If we select item 3 we will see the indication filters for disk drive lite:

```
Input integer between 0 and 5 or Ctrl-C to exit selection: 3

CIM_FilterCollection.InstanceID="10.336.643.144:DDLFilterCollection"
+-- Collection(Role)
| +-- CIM_MemberOfCollection(AssocClass)
| +-- Member(ResultRole)
| +-- CIM_IndicationFilter(ResultClass)(3 insts)
| +-- /:CIM_IndicationFilter.~,Name="Disk Drive Creation",~,~
| +-- /:CIM_IndicationFilter.~,Name="Disk Drive Deletion",~,~
```


```
| +-- /:CIM_IndicationFilter.~,Name="Disk Drive Status change",~,~
+-- Member(Role)
+-- CIM_MemberOfCollection(AssocClass)
+-- Collection(ResultRole)
+-- CIM_FilterCollection(ResultClass)(1 insts)
+-- /:CIM_FilterCollection.InstanceID="10.336.643.144:StaticFilterCollection"
pywbemcli>
```

And we see the three indication filters for the Disk Drive Lite profile. We also see the disk drive lite filter collection is a member of the static filter collection.

#### WBEM PROTOCOL MANAGEMENT

Finally, we have the IP Interface profile as a component of the DMTF WBEM Server profile. This profile is required if WBEM Protocol Management is supported. This can be determined by looking for an instance of CIM\_WBEMProtocolServiceCapabilities with a value of true for the ListeningPortManagementSupported.

The following command checks to see if this condition is met.

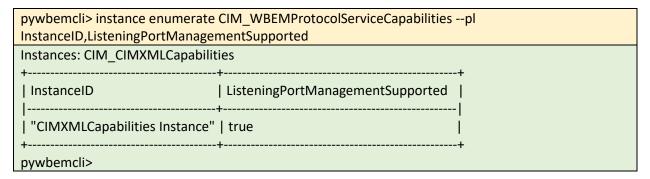

And we see that a CIM\_WBEMProtocolServiceCapabilities exists and it has ListeningPortManagementSupported = true.

So, let's see what else we have in the capabilities (we will do this in tthree requests for readability):

We see the AuthenticationMechanismsSupported is unknown, MaxConnections are 1 and the RequestedStatesSupported are Enabled, Disabled and Reset. And we see the ProtocolVersionsSupported is 2.0.0, which means any version 2 release. And we see FQL and CQL are not supported and a whole bunch of generic operations are supported.

Next, we will look at the protocol service

pywbemcli> instance enumerate CIM_ProtocolServicepl Name,MaxConnections,OperationalStatus,HealthState						
Instances: CIM_ProtocolService						
++   Name						
   "CIMXML Protocol Service"   5 (OK)   1   2 (OK)   +						
pywbemcli>						

We see that it is a CIMXML protocol service (as opposed to WS Management) with a maximum of 1 connection. The HealthState and OperationalStatus are OK.

Next, let's see what the protocol service manages.

```
pywbemcli> -o mof instance shrub CIM_ProtocolService.?

CIM_ProtocolService.CreationClassName="CIM_ProtocolService",Name="CIMXML ProtocolService",SystemCreationClassName="CIM_System",SystemName="10.336.643.144" +-- ManagedElement(Role)

| +-- CIM_ElementCapabilities(AssocClass)

| +-- Capabilities(ResultRole)

| +-- CIM_CIMXMLCapabilities(ResultClass)(1 insts)

| +-- /:CIM_CIMXMLCapabilities.InstanceID="CIMXMLCapabilities Instance"
```

```
+-- Dependent(Role)

| +-- CIM_HostedService(AssocClass)

| | +-- Antecedent(ResultRole)

| | +-- CIM_System(ResultClass)(1 insts)

| | +-- /:CIM_System.~,Name="10.336.643.144"

| +-- CIM_ServiceServiceDependency(AssocClass)

| +-- Antecedent(ResultRole)

| +-- CIM_WBEMServer(ResultClass)(1 insts)

| +-- /:CIM_WBEMServer.~,Name="WBEM Server Instance",~,~

+-- Antecedent(Role)

+-- CIM_ServiceAccessBySAP(AssocClass)

+-- CIM_ServiceAccessBySAP(AssocClass)

+-- CIM_TCPProtocolEndpoint(ResultClass)(1 insts)

+-- /:CIM_TCPProtocolEndpoint.~,Name="10.336.643.144+TCP11",~,~

pywbemcli>
```

We see that the protocol service has capabilities (CIM\_CIMXMLCapabilities), which we have already looked at. We also see from the CIM\_ProtocolService shrub report that the CIM\_ProtocolService is managing a CIM\_TCPProtocolEndpoint instance.

So, let's look at that.

pywbemcli> instance enumerate CIM_TCPProtocolEndpointpl InstanceID,Name,NameFormat Instances: CIM_TCPProtocolEndpoint					
Name	InstanceID	•	OperationalStatus	•	
"10.336.643.144+TCP11"   "TCPPE11"   " <portaddress>+<protocol>"   2 (OK)</protocol></portaddress>					
pywbemcli>		+	<b></b>	++	

This is the protocol endpoint for communicating to the CIM Server.