

The ARM Architecture

Agenda



Introduction to ARM Ltd

Programmers Model

Instruction Set

System Design

Development Tools

ARM Ltd

ARM

- Founded in November 1990
 - Spun out of Acorn Computers
- Designs the ARM range of RISC processor cores
- Licenses ARM core designs to semiconductor partners who fabricate and sell to their customers.
 - ARM does not fabricate silicon itself
- Also develop technologies to assist with the design-in of the ARM architecture
 - Software tools, boards, debug hardware, application software, bus architectures, peripherals etc





ARM Partnership Model





ARM Powered Products





Intellectual Property

- ARM provides hard and soft views to licencees
 - RTL and synthesis flows
 - GDSII layout
- Licencees have the right to use hard or soft views of the IP
 - soft views include gate level netlists
 - hard views are DSMs
- OEMs must use hard views
 - to protect ARM IP



Introduction to ARM Ltd

Programmers Model

Instruction Sets

System Design

Development Tools

Data Sizes and Instruction Sets

- The ARM is a 32-bit architecture.
- When used in relation to the ARM:
 - Byte means 8 bits
 - Halfword means 16 bits (two bytes)
 - Word means 32 bits (four bytes)
- Most ARM's implement two instruction sets
 - 32-bit ARM Instruction Set
 - 16-bit Thumb Instruction Set
- Jazelle cores can also execute Java bytecode

ARM[°]

Processor Modes


- The ARM has seven basic operating modes:
 - User: unprivileged mode under which most tasks run
 - FIQ: entered when a high priority (fast) interrupt is raised
 - IRQ : entered when a low priority (normal) interrupt is raised
 - Supervisor : entered on reset and when a Software Interrupt instruction is executed
 - Abort : used to handle memory access violations
 - Undef: used to handle undefined instructions
 - System: privileged mode using the same registers as user mode




The ARM Register Set

Current Visible Registers

Abort Mode



Banked out Registers

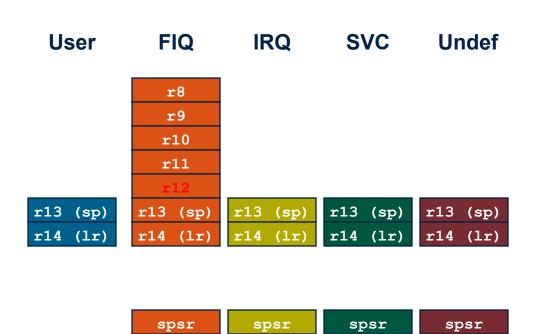



Register Organization Summary

	User	FIQ	IRQ		SVC	Undef	Abort	
••••	r0 r1 r2 r3 r4 r5 r6 r7 r8 r9 r10 r11 r12 r13 (sp) r14 (lr) r15 (pc)	User mode r0-r7, r15, and cpsr r8 r9 r10 r11 r12 r13 (sp) r14 (lr)	User mode r0-r12, r15, and cpsr r13 (sp) r14 (lr)	••••	User mode r0-r12, r15, and cpsr r13 (sp) r14 (lr)	User mode r0-r12, r15, and cpsr r13 (sp) r14 (lr)	User mode r0-r12, r15, and cpsr r13 (sp) r14 (lr)	Thumb state Low registers Thumb state High registers

Note: System mode uses the User mode register set

The Registers




- ARM has 37 registers all of which are 32-bits long.
 - 1 dedicated program counter
 - 1 dedicated current program status register
 - 5 dedicated saved program status registers
 - 30 general purpose registers
- The current processor mode governs which of several banks is accessible. Each mode can access
 - a particular set of r0-r12 registers
 - a particular r13 (the stack pointer, sp) and r14 (the link register, lr)
 - the program counter, r15 (pc)
 - the current program status register, cpsr

Privileged modes (except System) can also access

a particular spsr (saved program status register)

Program Status Registers



Condition code flags

- N = Negative result from ALU
- Z = Zero result from ALU
- C = ALU operation Carried out
- V = ALU operation oVerflowed

Sticky Overflow flag - Q flag

- Architecture 5TE/J only
- Indicates if saturation has occurred

J bit

- Architecture 5TEJ only
- J = 1: Processor in Jazelle state

Interrupt Disable bits.

- I = 1: Disables the IRQ.
- F = 1: Disables the FIQ.

■ TBit

- Architecture xT only
- T = 0: Processor in ARM state
- T = 1: Processor in Thumb state

Mode bits

Specify the processor mode

ARM[°]

Program Counter (r15)

When the processor is executing in ARM state:

- All instructions are 32 bits wide
- All instructions must be word aligned
- Therefore the pc value is stored in bits [31:2] with bits [1:0] undefined (as instruction cannot be halfword or byte aligned).

When the processor is executing in Thumb state:

- All instructions are 16 bits wide
- All instructions must be halfword aligned
- Therefore the pc value is stored in bits [31:1] with bit [0] undefined (as instruction cannot be byte aligned).

When the processor is executing in Jazelle state:


- All instructions are 8 bits wide
- Processor performs a word access to read 4 instructions at once



Exception Handling

- When an exception occurs, the ARM:
 - Copies CPSR into SPSR_<mode>
 - Sets appropriate CPSR bits
 - Change to ARM state
 - Change to exception mode
 - Disable interrupts (if appropriate)
 - Stores the return address in LR_<mode>
 - Sets PC to vector address
- To return, exception handler needs to:
 - Restore CPSR from SPSR_<mode>
 - Restore PC from LR_<mode>

This can only be done in ARM state.

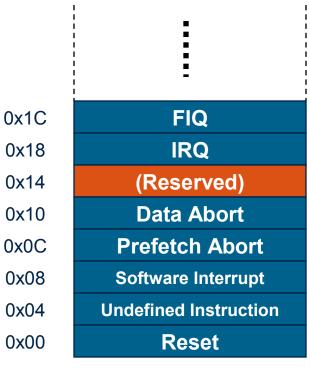

Vector Table

Vector table can be at 0xFFFF0000 on ARM720T and on ARM9/10 family devices



Development of the ARM Architecture







Early ARM architectures :



System mode



SA-1110

Thumb instruction set

ARM7TDMI

ARM9TDMI

ARM720T

ARM940T



CLZ

Saturated maths

DSP multiplyaccumulate instructions

ARM1020E

XScale

ARM9E-S

ARM966E-S

Jazelle

Java bytecode execution



ARM9EJ-S

ARM926EJ-S

ARM7EJ-S

ARM1026EJ-S

SIMD Instructions

Multi-processing

V6 Memory architecture (VMSA)

Unaligned data support

ARM1136EJ-S

Agenda

ARM

Introduction to ARM Ltd

Programmers Model

Instruction Sets

System Design

Development Tools

Conditional Execution and Flags

- ARM instructions can be made to execute conditionally by postfixing them with the appropriate condition code field.
 - This improves code density and performance by reducing the number of forward branch instructions.

```
CMP r3,#0
BEQ skip
ADD r0,r1,r2
skip
```

```
CMP r3,#0
ADDNE r0,r1,r2
```

By default, data processing instructions do not affect the condition code flags but the flags can be optionally set by using "S". CMP does not need "S".

```
decrement r1 and set flags

SUBS r1,r1,#1

BNE loop

if Z flag clear then branch
```



Condition Codes

- The possible condition codes are listed below:
 - Note AL is the default and does not need to be specified

Suffix	Description	Flags tested
EQ	Equal	Z=1
NE	Not equal	Z=0
CS/HS	Unsigned higher or same	C=1
CC/LO	Unsigned lower	C=0
MI	Minus	N=1
PL	Positive or Zero	N=0
VS	Overflow	V=1
VC	No overflow	V=0
HI	Unsigned higher	C=1 & Z=0
LS	Unsigned lower or same	C=0 or Z=1
GE	Greater or equal	N=V
LT	Less than	N!=V
GT	Greater than	Z=0 & N=V
LE	Less than or equal	Z=1 or N=!V
AL	Always	



Examples of conditional execution

Use a sequence of several conditional instructions

```
if (a==0) func(1);
    CMP     r0,#0
    MOVEQ     r0,#1
    BLEQ     func
```

Set the flags, then use various condition codes


```
if (a==0) x=0;
if (a>0) x=1;
    CMP     r0,#0
    MOVEQ     r1,#0
    MOVGT     r1,#1
```

Use conditional compare instructions

```
if (a==4 || a==10) x=0;
    CMP      r0,#4
    CMPNE     r0,#10
    MOVEQ     r1,#0
```

Branch instructions

- Branch: B{<cond>} label
- Branch with Link: BL{<cond>} subroutine_label

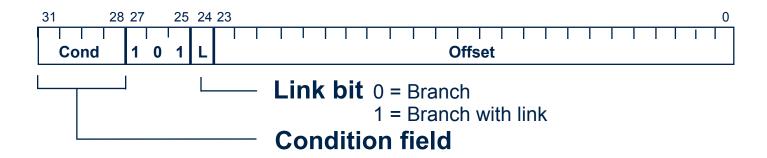

- The processor core shifts the offset field left by 2 positions, sign-extends it and adds it to the PC
 - ± 32 Mbyte range
 - How to perform longer branches?

Data processing Instructions

Consist of :

```
Arithmetic:
                            ADC
                                    SUB
                                            SBC
                                                    RSB
                                                            RSC
                    ADD
  Logical:
                   AND
                            ORR
                                    EOR
                                            BIC
Comparisons:
                   CMP
                            CMN
                                    TST
                                            TEO
```

- Data movement: MOV MVN
- These instructions only work on registers, NOT memory.
- Syntax:

```
<Operation>{<cond>}{S} Rd, Rn, Operand2
```

- Comparisons set flags only they do not specify Rd
- Data movement does not specify Rn
- Second operand is sent to the ALU via barrel shifter.



The Barrel Shifter

LSL: Logical Left Shift



Multiplication by a power of 2

LSR: Logical Shift Right



Division by a power of 2

ASR: Arithmetic Right Shift



Division by a power of 2, preserving the sign bit

ROR: Rotate Right



Bit rotate with wrap around from LSB to MSB


RRX: Rotate Right Extended



Single bit rotate with wrap around from CF to MSB



Using the Barrel Shifter: The Second Operand

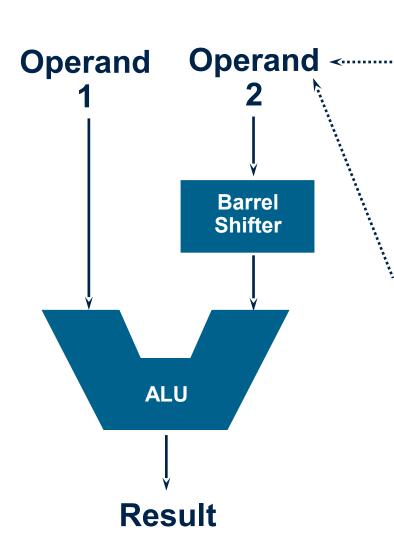

Register, optionally with shift operation

- Shift value can be either be:
 - 5 bit unsigned integer
 - Specified in bottom byte of another register.
- Used for multiplication by constant


Immediate value

- 8 bit number, with a range of 0-255.
 - Rotated right through even number of positions
- Allows increased range of 32-bit constants to be loaded directly into registers



Immediate constants (1)


- No ARM instruction can contain a 32 bit immediate constant
 - All ARM instructions are fixed as 32 bits long
- The data processing instruction format has 12 bits available for operand2

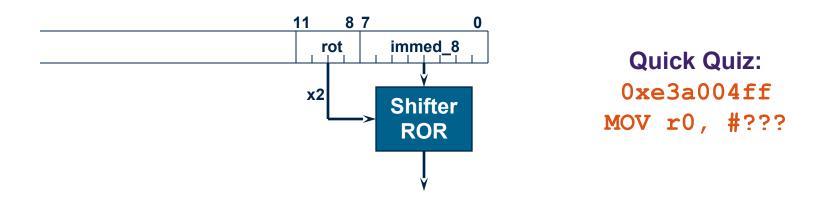

- 4 bit rotate value (0-15) is multiplied by two to give range 0-30 in steps of 2
- Rule to remember is "8-bits shifted by an even number of bit positions".

Immediate constants (2)

Examples:

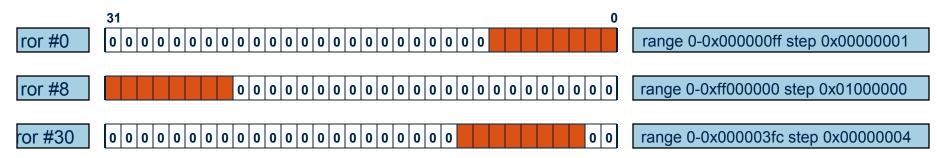

- The assembler converts immediate values to the rotate form:
 - MOV r0,#4096 ; uses 0x40 ror 26
 - ADD r1,r2,#0xFF0000 ; uses 0xFF ror 16
- The bitwise complements can also be formed using MVN:
- Values that cannot be generated in this way will cause an error.

Loading 32 bit constants

- To allow larger constants to be loaded, the assembler offers a pseudo-instruction:
 - LDR rd, =const
- This will either:
 - Produce a MOV or MVN instruction to generate the value (if possible).

or

- Generate a LDR instruction with a PC-relative address to read the constant from a literal pool (Constant data area embedded in the code).
- For example

```
■ LDR r0,=0xFF => MOV r0,#0xFF

■ LDR r0,=0x55555555 => LDR r0,[PC,#Imm12]

...
DCD 0x55555555
```

This is the recommended way of loading constants into a register



Syntax:

MUL{<cond>}{S} Rd, Rm, Rs

MLA{<cond>}{S} Rd,Rm,Rs,Rn

[U|S]MULL{<cond>}{S} RdLo, RdHi, Rm, Rs

[U|S]MLAL{<cond>}{S} RdLo, RdHi, Rm, Rs

Rd = Rm * Rs

Rd = (Rm * Rs) + Rn

RdHi,RdLo := Rm*Rs

RdHi,RdLo := (Rm*Rs)+RdHi,RdLo

Cycle time

- Basic MUL instruction
 - 2-5 cycles on ARM7TDMI
 - 1-3 cycles on StrongARM/XScale
 - 2 cycles on ARM9E/ARM102xE
- +1 cycle for ARM9TDMI (over ARM7TDMI)
- +1 cycle for accumulate (not on 9E though result delay is one cycle longer)
- +1 cycle for "long"
- Above are "general rules" refer to the TRM for the core you are using for the exact details



Single register data transfer

LDR STR Word

LDRB STRB Byte

LDRH STRH Halfword

LDRSB Signed byte load

LDRSH Signed halfword load

- Memory system must support all access sizes
- Syntax:
 - LDR{<cond>}{<size>} Rd, <address>
 - STR{<cond>}{<size>} Rd, <address>

e.g. LDREQB

Address accessed

- Address accessed by LDR/STR is specified by a base register plus an offset
- For word and unsigned byte accesses, offset can be
 - An unsigned 12-bit immediate value (ie 0 4095 bytes).

```
LDR r0,[r1,#8]
```

A register, optionally shifted by an immediate value

```
LDR r0, [r1,r2]
LDR r0, [r1,r2,LSL#2]
```


This can be either added or subtracted from the base register:

```
LDR r0,[r1,#-8]
LDR r0,[r1,-r2]
LDR r0,[r1,-r2,LSL#2]
```

- For halfword and signed halfword / byte, offset can be:
 - An unsigned 8 bit immediate value (ie 0-255 bytes).
 - A register (unshifted).
- Choice of pre-indexed or post-indexed addressing

ARM[®] Pre or Pos

Pre or Post Indexed Addressing?

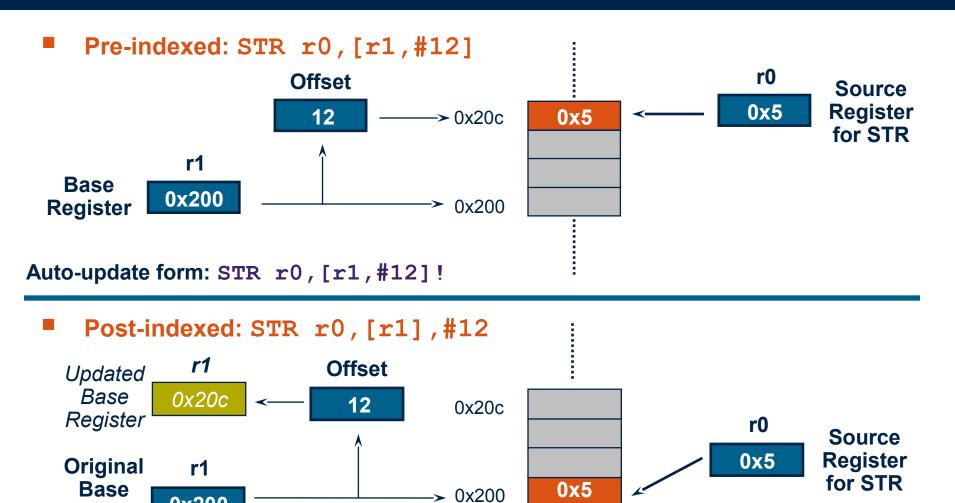

Register

0x200




LDM / STM operation

Syntax:

<LDM | STM>{<cond>}<addressing_mode> Rb{!}, <register list>


4 addressing modes:

LDMIA / STMIAincrement afterLDMIB / STMIBincrement beforeLDMDA / STMDAdecrement afterLDMDB / STMDBdecrement before

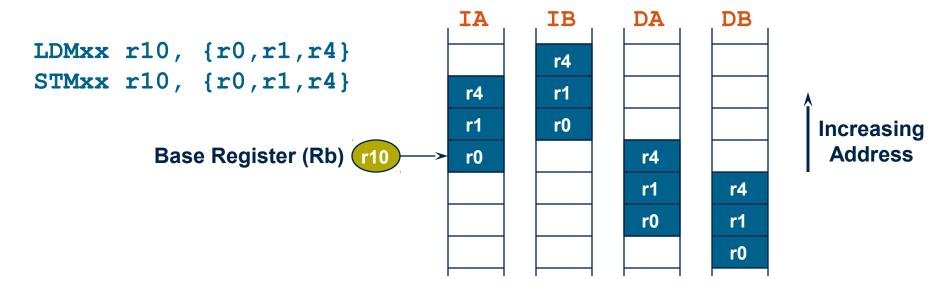




Software Interrupt (SWI)

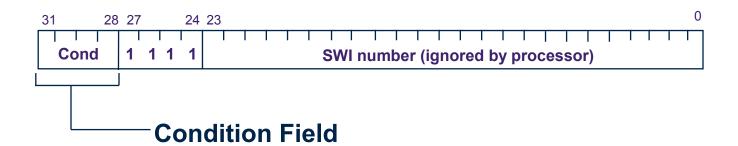

- Causes an exception trap to the SWI hardware vector
- The SWI handler can examine the SWI number to decide what operation has been requested.
- By using the SWI mechanism, an operating system can implement a set of privileged operations which applications running in user mode can request.
- Syntax:
 - SWI{<cond>} <SWI number>

PSR Transfer Instructions




- MRS and MSR allow contents of CPSR / SPSR to be transferred to / from a general purpose register.
- Syntax:
 - MRS { < cond > } Rd , < psr > ; Rd = < psr >
 - MSR{<cond>} <psr[fields]>,Rm ; <psr[fields]> = Rm

where

- <psr> = CPSR or SPSR
- [_fields] = any combination of 'fsxc'
- Also an immediate form
 - MSR{<cond>} <psr_fields>,#Immediate
- In User Mode, all bits can be read but only the condition flags (_f) can be written.

ARM Branches and Subroutines

- B < label>
 - PC relative. ±32 Mbyte range.
- **BL <subroutine>**
 - Stores return address in LR
 - Returning implemented by restoring the PC from LR
 - For non-leaf functions, LR will have to be stacked

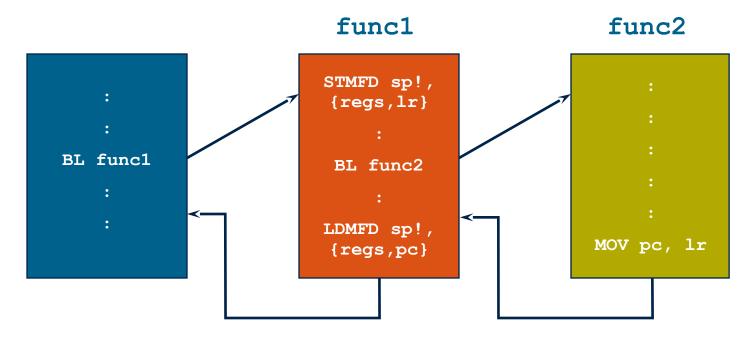


Thumb



- Thumb is a 16-bit instruction set
 - Optimised for code density from C code (~65% of ARM code size)
 - Improved performance from narrow memory
 - Subset of the functionality of the ARM instruction set
- Core has additional execution state Thumb
 - Switch between ARM and Thumb using Bx instruction

ADDS r2,r2,#1

32-bit ARM Instruction

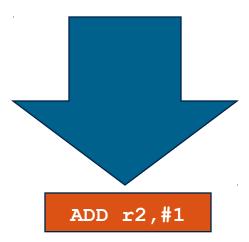

16-bit Thumb Instruction

For most instructions generated by compiler:

- Conditional execution is not used
- Source and destination registers identical
- Only Low registers used
- Constants are of limited size
- Inline barrel shifter not used

Agenda



Introduction

Programmers Model


Instruction Sets

System Design

Development Tools




Example ARM-based System

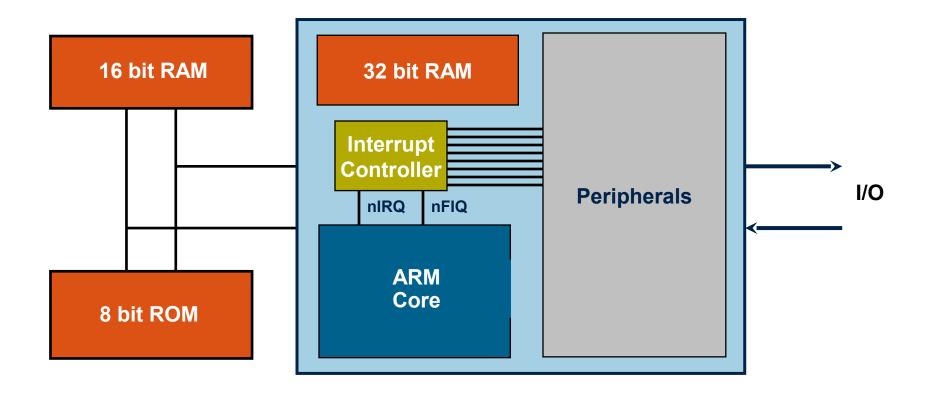

AMBA



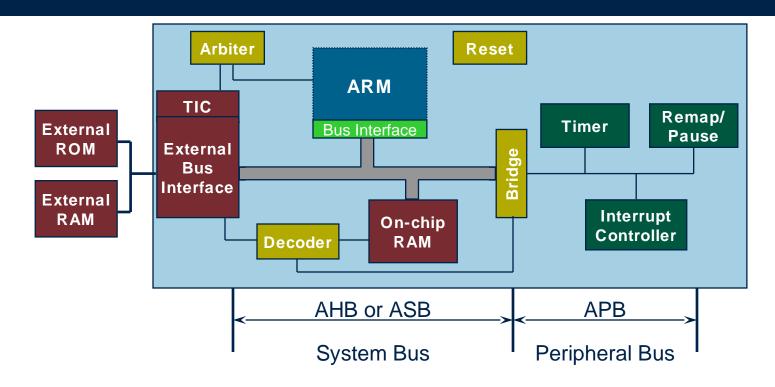

- AMBA
 - Advanced Microcontroller Bus Architecture
- ADK
 - Complete AMBA Design Kit

- ACT
 - AMBA Compliance Testbench
- PrimeCell
 - ARM's AMBA compliant peripherals

Agenda

ARM

Introduction
Programmers Model
Instruction Sets

System Design

Development Tools



The RealView Product Families

Compilation Tools


ARM Developer Suite (ADS) – Compilers (C/C++ ARM & Thumb), Linker & Utilities



RealView Compilation Tools (RVCT)

Debug Tools

AXD (part of ADS)
Trace Debug Tools
Multi-ICE

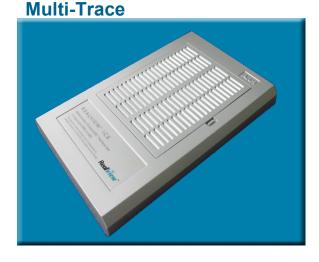


RealView Debugger (RVD)
RealView ICE (RVI)

RealView Trace (RVT)

Platforms

ARMulator (part of ADS) Integrator™ Family

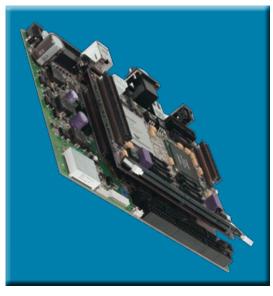


RealView ARMulator ISS (RVISS)



ARM Debug Architecture

Debugger (+ optional trace tools)

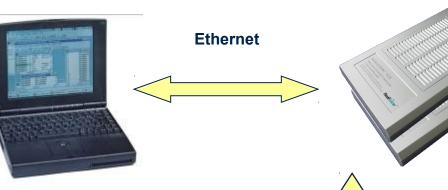

EmbeddedICE Logic

- Provides breakpoints and processor/system access
- JTAG interface (ICE)
 - Converts debugger commands to JTAG signals
- Embedded trace Macrocell (ETM)
 - Compresses real-time instruction and data access trace
 - Contains ICE features (trigger & filter logic)
- Trace port analyzer (TPA)
 - Captures trace in a deep buffer

