

PM0214 Programming manual

STM32 Cortex[®]-M4 MCUs and MPUs programming manual

Introduction

This programming manual provides information for application and system-level software developers. It gives a full description of the STM32 Cortex[®]-M4 processor programming model, instruction set and core peripherals. The applicable products are listed in the table below.

The Cortex®-M4 processor used in STM32F3 Series, STM32F4 Series, STM32G4 Series, STM32H745/755 and STM32H747/757 Lines, STM32L4 Series, STM32L4+ Series, STM32WB Series, STM32WL Series and STM32MP1 Series, is a high performance 32-bit processor designed for the microcontroller and microprocessor market. It offers significant benefits to developers, including:

- Outstanding processing performance combined with fast interrupt handling
- · Enhanced system debug with extensive breakpoint and trace capabilities
- · Efficient processor core, system and memories
- Ultra-low power consumption with integrated sleep modes
- · Platform security

Table 1. Applicable products

| Туре | Product Series and Lines | | |
|------------------|---|--|--|
| Microcontrollers | STM32F3 Series, STM32F4 Series, STM32G4 Series, STM32L4 Series, STM32L4+ Series, STM32WB Series, STM32WL Series STM32H745/755 and STM32H747/757 Lines | | |
| Microprocessors | STM32MP1 Series | | |

Reference documents

Available from STMicroelectronics web site www.st.com:

- Datasheets of STM32F3 Series, STM32F4 Series, STM32G4 Series, STM32H745/755 and STM32H747/757 Lines, STM32L4 Series, STM32L4+ Series, STM32MP1 Series, STM32WB Series and STM32WL Series
- Reference manuals of STM32F3 Series, STM32F4 Series, STM32G4 Series, STM32H745/755 and STM32H747/757 Lines, STM32L4 Series, STM32L4+ Series, STM32MP1 Series, STM32WB Series and STM32WL Series

March 2020 PM0214 Rev 10 1/262

Contents PM0214

Contents

| 1 | Abo | ut this d | document | 12 |
|---|-----|-----------|--|----|
| | 1.1 | Typog | raphical conventions | 12 |
| | 1.2 | List of | abbreviations for registers | 12 |
| | 1.3 | About | the STM32 Cortex-M4 processor and core peripherals | 13 |
| | | 1.3.1 | System level interface | 14 |
| | | 1.3.2 | Integrated configurable debug | 14 |
| | | 1.3.3 | Cortex-M4 processor features and benefits summary | 15 |
| | | 1.3.4 | Cortex-M4 core peripherals | |
| 2 | The | Cortex- | M4 processor | 17 |
| | 2.1 | Progra | ammers model | 17 |
| | | 2.1.1 | Processor mode and privilege levels for software execution | 17 |
| | | 2.1.2 | Stacks | |
| | | 2.1.3 | Core registers | 18 |
| | | 2.1.4 | Exceptions and interrupts | 26 |
| | | 2.1.5 | Data types | 26 |
| | | 2.1.6 | The Cortex microcontroller software interface standard (CMSIS) | 26 |
| | 2.2 | Memo | ry model | 28 |
| | | 2.2.1 | Memory regions, types and attributes | 29 |
| | | 2.2.2 | Memory system ordering of memory accesses | 29 |
| | | 2.2.3 | Behavior of memory accesses | 30 |
| | | 2.2.4 | Software ordering of memory accesses | 31 |
| | | 2.2.5 | Bit-banding | 32 |
| | | 2.2.6 | Memory endianness | 34 |
| | | 2.2.7 | Synchronization primitives | 34 |
| | | 2.2.8 | Programming hints for the synchronization primitives | 36 |
| | 2.3 | Excep | tion model | 37 |
| | | 2.3.1 | Exception states | 37 |
| | | 2.3.2 | Exception types | 37 |
| | | 2.3.3 | Exception handlers | 39 |
| | | 2.3.4 | Vector table | 40 |
| | | 2.3.5 | Exception priorities | 41 |
| | | 2.3.6 | Interrupt priority grouping | 41 |
| | | 2.3.7 | Exception entry and return | 42 |



PM0214 Contents

| | 2.4 | Fault h | nandling | 44 |
|---|-----|---------|---|----|
| | | 2.4.1 | Fault types | 45 |
| | | 2.4.2 | Fault escalation and hard faults | 46 |
| | | 2.4.3 | Fault status registers and fault address registers | 47 |
| | | 2.4.4 | Lockup | 47 |
| | 2.5 | Power | management | 47 |
| | | 2.5.1 | Entering sleep mode | 48 |
| | | 2.5.2 | Wakeup from sleep mode | 48 |
| | | 2.5.3 | External event input / extended interrupt and event input | 49 |
| | | 2.5.4 | Power management programming hints | 49 |
| 3 | The | STM32 | Cortex-M4 instruction set | 50 |
| | 3.1 | Instruc | ction set summary | 50 |
| | 3.2 | CMSIS | S intrinsic functions | 58 |
| | 3.3 | About | the instruction descriptions | 60 |
| | | 3.3.1 | Operands | 60 |
| | | 3.3.2 | Restrictions when using PC or SP | 60 |
| | | 3.3.3 | Flexible second operand | 60 |
| | | 3.3.4 | Shift operations | 62 |
| | | 3.3.5 | Address alignment | 65 |
| | | 3.3.6 | PC-relative expressions | 65 |
| | | 3.3.7 | Conditional execution | 65 |
| | | 3.3.8 | Instruction width selection | 68 |
| | 3.4 | Memo | ry access instructions | 69 |
| | | 3.4.1 | ADR | 70 |
| | | 3.4.2 | LDR and STR, immediate offset | 71 |
| | | 3.4.3 | LDR and STR, register offset | 73 |
| | | 3.4.4 | LDR and STR, unprivileged | 74 |
| | | 3.4.5 | LDR, PC-relative | 75 |
| | | 3.4.6 | LDM and STM | 76 |
| | | 3.4.7 | PUSH and POP | 78 |
| | | 3.4.8 | LDREX and STREX | 79 |
| | | 3.4.9 | CLREX | 80 |
| | 3.5 | Gener | al data processing instructions | 81 |
| | | 3.5.1 | ADD, ADC, SUB, SBC, and RSB | 83 |
| | | 3.5.2 | AND, ORR, EOR, BIC, and ORN | 85 |



| | 3.5.3 | ASR, LSL, LSR, ROR, and RRX8 | 36 |
|-----|----------|----------------------------------|----------------|
| | 3.5.4 | CLZ8 | 37 |
| | 3.5.5 | CMP and CMN | 38 |
| | 3.5.6 | MOV and MVN | 39 |
| | 3.5.7 | MOVT9 | }1 |
| | 3.5.8 | REV, REV16, REVSH, and RBIT |) 2 |
| | 3.5.9 | SADD16 and SADD8 | }3 |
| | 3.5.10 | SHADD16 and SHADD89 |) 4 |
| | 3.5.11 | SHASX and SHSAX9 |) 5 |
| | 3.5.12 | SHSUB16 and SHSUB89 | ∂ 6 |
| | 3.5.13 | SSUB16 and SSUB89 |) 7 |
| | 3.5.14 | SASX and SSAX9 | 98 |
| | 3.5.15 | TST and TEQ | 99 |
| | 3.5.16 | UADD16 and UADD810 |)0 |
| | 3.5.17 | UASX and USAX |)1 |
| | 3.5.18 | UHADD16 and UHADD810 |)2 |
| | 3.5.19 | UHASX and UHSAX10 |)3 |
| | 3.5.20 | UHSUB16 and UHSUB810 |)4 |
| | 3.5.21 | SEL10 |)5 |
| | 3.5.22 | USAD810 |)6 |
| | 3.5.23 | USADA810 |)7 |
| | 3.5.24 | USUB16 and USUB8 |)8 |
| 3.6 | Multiply | and divide instructions |)9 |
| | 3.6.1 | MUL, MLA, and MLS | 10 |
| | 3.6.2 | UMULL, UMAAL and UMLAL | 11 |
| | 3.6.3 | SMLA and SMLAW11 | 12 |
| | 3.6.4 | SMLAD11 | 14 |
| | 3.6.5 | SMLAL and SMLALD | 15 |
| | 3.6.6 | SMLSD and SMLSLD11 | 17 |
| | 3.6.7 | SMMLA and SMMLS11 | 19 |
| | 3.6.8 | SMMUL12 | 20 |
| | 3.6.9 | SMUAD and SMUSD | 21 |
| | 3.6.10 | SMUL and SMULW12 | 22 |
| | 3.6.11 | UMULL, UMLAL, SMULL, and SMLAL12 | 23 |
| | 3.6.12 | SDIV and UDIV12 | 24 |
| 3.7 | Saturati | ng instructions 12 | 25 |
| | 3.7.1 | SSAT and USAT | 26 |

PM0214 Contents

| | 3.7.2 | SSAT16 and USAT16 | 127 |
|-----|------------|---|-----|
| | 3.7.3 | QADD and QSUB | 128 |
| | 3.7.4 | QASX and QSAX | 129 |
| | 3.7.5 | QDADD and QDSUB | 130 |
| | 3.7.6 | UQASX and UQSAX | 131 |
| | 3.7.7 | UQADD and UQSUB | 132 |
| 3.8 | Packing | g and unpacking instructions | 134 |
| | 3.8.1 | PKHBT and PKHTB | 135 |
| | 3.8.2 | SXT and UXT | 136 |
| | 3.8.3 | SXTA and UXTA | 137 |
| 3.9 | Bitfield | instructions | 138 |
| | 3.9.1 | BFC and BFI | 139 |
| | 3.9.2 | SBFX and UBFX | 140 |
| | 3.9.3 | SXT and UXT | 141 |
| | 3.9.4 | Branch and control instructions | 142 |
| | 3.9.5 | B, BL, BX, and BLX | 142 |
| | 3.9.6 | CBZ and CBNZ | 144 |
| | 3.9.7 | IT | 145 |
| | 3.9.8 | TBB and TBH | 147 |
| 3.1 | 0 Floating | g-point instructions | 149 |
| | 3.10.1 | VABS | 151 |
| | 3.10.2 | VADD | 152 |
| | 3.10.3 | VCMP, VCMPE | 153 |
| | 3.10.4 | VCVT, VCVTR between floating-point and integer | 154 |
| | 3.10.5 | VCVT between floating-point and fixed-point | 155 |
| | 3.10.6 | VCVTB, VCVTT | 156 |
| | 3.10.7 | VDIV | 157 |
| | 3.10.8 | VFMA, VFMS | 158 |
| | 3.10.9 | VFNMA, VFNMS | 159 |
| | 3.10.10 | VLDM | 160 |
| | 3.10.11 | VLDR | 161 |
| | 3.10.12 | VLMA, VLMS | 162 |
| | 3.10.13 | VMOV immediate | 163 |
| | 3.10.14 | VMOV register | 164 |
| | 3.10.15 | VMOV scalar to Arm core register | 165 |
| | 3.10.16 | VMOV Arm core register to single precision | 166 |
| | 3.10.17 | VMOV two Arm core registers to two single precision | 167 |

| | | 4.2.8 | MPU region base address register (MPU_RBAR) | 203 |
|---|------|--------------------|---|-----|
| | | 4.2.7 | MPU region number register (MPU_RNR) | |
| | | 4.2.6 | MPU control register (MPU_CTRL) | |
| | | 4.2.5 | MPU type register (MPU_TYPER) | |
| | | 4.2.4 | MPU design hints and tips | |
| | | 4.2.3 | Updating an MPU region | |
| | | 4.2.2 | MPU mismatch | |
| | | 4.2.1 | MPU access permission attributes | |
| | 4.2 | • | y protection unit (MPU) | 193 |
| | 4.1 | | he STM32 Cortex-M4 core peripherals | |
| 4 | | | | 193 |
| | | J. 11.1Z | VVI I | 192 |
| | | _ | WFI | |
| | | 3.11.10 3.11.11 | SVC | |
| | | 3.11.9 | SEV | |
| | | 3.11.8 | NOP | |
| | | 3.11.7 | MSR | |
| | | 3.11.6 | MRS | |
| | | 3.11.5 | ISB | |
| | | 3.11.4 | DSB | |
| | | 3.11.3 | DMB | |
| | | 3.11.2 | CPS | |
| | | 3.11.1 | BKPT | |
| | 3.11 | | aneous instructions | |
| | 0.44 | | VSUB | |
| | | | VSTR | |
| | | | VSTM | |
| | | | VSQRT | |
| | | | VPUSH | |
| | | | VPOP | |
| | | | VNMLA, VNMLS, VNMUL | |
| | | | VNEG | |
| | | | VMUL | |
| | | | | |
| | | 3.10.19 | | |
| | | 3.10.18 | VMOV Arm Core register to scalar | |

PM0214 Contents

| | 4.2.9 | MPU region attribute and size register (MPU_RASR) | . 204 |
|-----|---------|--|-------|
| | 4.2.10 | MPU register map | . 206 |
| 4.3 | Nested | vectored interrupt controller (NVIC) | 208 |
| | 4.3.1 | Accessing the Cortex-M4 NVIC registers using CMSIS | . 209 |
| | 4.3.2 | Interrupt set-enable register x (NVIC_ISERx) | . 210 |
| | 4.3.3 | Interrupt clear-enable register x (NVIC_ICERx) | . 211 |
| | 4.3.4 | Interrupt set-pending register x (NVIC_ISPRx) | . 212 |
| | 4.3.5 | Interrupt clear-pending register x (NVIC_ICPRx) | . 213 |
| | 4.3.6 | Interrupt active bit register x (NVIC_IABRx) | . 214 |
| | 4.3.7 | Interrupt priority register x (NVIC_IPRx) | . 215 |
| | 4.3.8 | Software trigger interrupt register (NVIC_STIR) | . 216 |
| | 4.3.9 | Level-sensitive and pulse interrupts | . 217 |
| | 4.3.10 | NVIC design hints and tips | . 218 |
| | 4.3.11 | NVIC register map | . 219 |
| 4.4 | System | control block (SCB) | 221 |
| | 4.4.1 | Auxiliary control register (ACTLR) | . 222 |
| | 4.4.2 | CPUID base register (CPUID) | . 224 |
| | 4.4.3 | Interrupt control and state register (ICSR) | . 225 |
| | 4.4.4 | Vector table offset register (VTOR) | . 227 |
| | 4.4.5 | Application interrupt and reset control register (AIRCR) | . 228 |
| | 4.4.6 | System control register (SCR) | . 230 |
| | 4.4.7 | Configuration and control register (CCR) | . 231 |
| | 4.4.8 | System handler priority registers (SHPRx) | . 233 |
| | 4.4.9 | System handler control and state register (SHCSR) | . 235 |
| | 4.4.10 | Configurable fault status register (CFSR; UFSR+BFSR+MMFSR) | . 237 |
| | 4.4.11 | Usage fault status register (UFSR) | . 238 |
| | 4.4.12 | Bus fault status register (BFSR) | . 239 |
| | 4.4.13 | Memory management fault address register (MMFSR) | . 240 |
| | 4.4.14 | Hard fault status register (HFSR) | . 241 |
| | 4.4.15 | Memory management fault address register (MMFAR) | . 242 |
| | 4.4.16 | Bus fault address register (BFAR) | . 242 |
| | 4.4.17 | Auxiliary fault status register (AFSR) | . 243 |
| | 4.4.18 | System control block design hints and tips | . 243 |
| | 4.4.19 | SCB register map | . 244 |
| 4.5 | SysTick | timer (STK) | 246 |
| | 4.5.1 | SysTick control and status register (STK_CTRL) | . 247 |
| | 4.5.2 | SysTick reload value register (STK_LOAD) | . 248 |
| | | | |



Contents PM0214

| 5 | Revis | sion his | story | 260 |
|---|-------|----------|---|-----|
| | | 4.6.7 | Enabling and clearing FPU exception interrupts | 258 |
| | | 4.6.6 | Enabling the FPU | 257 |
| | | 4.6.5 | Floating-point default status control register (FPDSCR) | 257 |
| | | 4.6.4 | Floating-point status control register (FPSCR) | 255 |
| | | 4.6.3 | Floating-point context address register (FPCAR) | 255 |
| | | 4.6.2 | Floating-point context control register (FPCCR) | 253 |
| | | 4.6.1 | Coprocessor access control register (CPACR) | 253 |
| | 4.6 | Floatir | ng point unit (FPU) | 252 |
| | | 4.5.6 | SysTick register map | 251 |
| | | 4.5.5 | SysTick design hints and tips | 250 |
| | | 4.5.4 | SysTick calibration value register (STK_CALIB) | 250 |
| | | 4.5.3 | SysTick current value register (STK_VAL) | 249 |
| | | | | |

PM0214 List of tables

List of tables

| Table 1. | Applicable products | |
|-----------|---|-----|
| Table 2. | Summary of processor mode, execution privilege level, and stack usage | 18 |
| Table 3. | Core register set summary | 18 |
| Table 4. | PSR register combinations | 20 |
| Table 5. | APSR bit definitions | 21 |
| Table 6. | IPSR bit definitions | 22 |
| Table 7. | EPSR bit definitions | 23 |
| Table 8. | PRIMASK register bit definitions | |
| Table 9. | FAULTMASK register bit definitions | |
| Table 10. | BASEPRI register bit assignment | |
| Table 11. | CONTROL register bit definitions | |
| Table 12. | Ordering of memory accesses | |
| Table 13. | Memory access behavior | |
| Table 14. | SRAM memory bit-banding regions | |
| Table 15. | Peripheral memory bit-banding regions | |
| Table 16. | CMSIS functions for exclusive access instructions | |
| Table 17. | Properties of the different exception types | |
| Table 17. | Exception return behavior | |
| Table 19. | Faults | |
| Table 19. | Fault status and fault address registers | |
| Table 20. | Cortex-M4 instructions | |
| Table 21. | CMSIS intrinsic functions to generate some Cortex-M4 instructions | |
| Table 22. | · · · · · · · · · · · · · · · · · · · | |
| Table 23. | CMSIS intrinsic functions to access the special registers | |
| | | |
| Table 25. | Memory access instructions | |
| Table 26. | Immediate, pre-indexed and post-indexed offset ranges | |
| Table 27. | label-PC offset ranges | |
| Table 28. | Data processing instructions | |
| Table 29. | Multiply and divide instructions | |
| Table 30. | Saturating instructions | |
| Table 31. | Packing and unpacking instructions | |
| Table 32. | Instructions that operate on adjacent sets of bits | |
| Table 33. | Branch and control instructions | |
| Table 34. | Branch ranges | |
| Table 35. | Floating-point instructions | |
| Table 36. | Miscellaneous instructions | |
| Table 37. | STM32 core peripheral register regions | |
| Table 38. | Memory attributes summary | |
| Table 39. | TEX, C, B, and S encoding | |
| Table 40. | Cache policy for memory attribute encoding | |
| Table 41. | AP encoding | |
| Table 42. | Memory region attributes for STM32 | |
| Table 43. | Example SIZE field values | |
| Table 44. | MPU register map and reset values | |
| Table 45. | NVIC register summary | |
| Table 46. | CMSIS access NVIC functions | |
| Table 47. | NVIC_IPRx bit assignment | |
| Table 48. | CMSIS functions for NVIC control | 218 |



List of tables PM0214

| Table 49. | NVIC register map and reset values | . 219 |
|-----------|--|-------|
| Table 50. | Summary of the system control block registers | . 221 |
| Table 51. | Priority grouping | . 229 |
| Table 52. | System fault handler priority fields | . 233 |
| Table 53. | SCB register map and reset values | |
| Table 54. | System timer registers summary | . 246 |
| Table 55. | SysTick register map and reset values | . 251 |
| Table 56. | Cortex-M4F floating-point system registers | . 252 |
| Table 57. | Effect of a Floating-point comparison on the condition flags | . 256 |
| Table 58 | Document revision history | 260 |



PM0214 List of figures

List of figures

| Figure 1. | STM32 Cortex-M4 implementation | . 13 |
|------------|--|------|
| Figure 2. | Processor core registers | . 18 |
| Figure 3. | APSR, IPSR and EPSR bit assignment | . 20 |
| Figure 4. | PSR bit assignment | |
| Figure 5. | PRIMASK bit assignment | |
| Figure 6. | FAULTMASK bit assignment | . 24 |
| Figure 7. | BASEPRI bit assignment | . 25 |
| Figure 8. | Memory map | . 28 |
| Figure 9. | Bit-band mapping | . 33 |
| Figure 10. | Little-endian example | |
| Figure 11. | Vector table | . 40 |
| Figure 12. | Cortex-M4 stack frame layout | . 43 |
| Figure 13. | ASR #3 | . 62 |
| Figure 14. | LSR #3 | . 63 |
| Figure 15. | LSL #3 | . 63 |
| Figure 16. | ROR #3 | . 64 |
| Figure 17. | RRX #3 | . 64 |
| Figure 18. | Subregion example | 198 |
| Figure 19. | Mapping of IP[N] fields in NVIC_IPRx registers | 215 |
| Figure 20. | CFSR subregisters | 237 |



PM0214 Rev 10 11/262

About this document PM0214

1 About this document

This document provides the information required for application and system-level software development. It does not provide information on debug components, features, or operation.

This material is for microcontroller software and hardware engineers, including those who have no experience of Arm products.

This document applies to Arm^{®(a)}-based devices.



1.1 Typographical conventions

The typographical conventions used in this document are:

italic Highlights important notes, introduces special terminology, denotes

internal cross-references, and citations.

< and > Enclose replaceable terms for assembler syntax where they appear in

code or code fragments. For example: LDRSB<cond> <Rt>, [<Rn>, #<offset>]

bold Highlights interface elements, such as menu names. Denotes signal

names. Also used for terms in descriptive lists, where appropriate.

monospace Denotes text that you can enter at the keyboard, such as commands,

file and program names, and source code.

monospace Denotes a permitted abbreviation for a command or option. You can

enter the underlined text instead of the full command or option name.

monospace italic Denotes arguments to monospace text where the argument is to be

replaced by a specific value.

monospace bold Denotes language keywords when used outside example code.

1.2 List of abbreviations for registers

The following abbreviations are used in register descriptions:

read/write (rw) Software can read and write to these bits.

read-only (r) Software can only read these bits.
write-only (w) Software can only write to this bit.

Reading the bit returns the reset value.



a. Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

PM0214 About this document

read/clear (rc_w1) Software can read as well as clear this bit by writing 1.

Writing '0' has no effect on the bit value.

read/clear (rc w0) Software can read as well as clear this bit by writing 0.

Writing '1' has no effect on the bit value.

toggle (t) Software can only toggle this bit by writing '1'. Writing '0' has no effect.

Reserved (Res.) Reserved bit, must be kept at reset value.

1.3 About the STM32 Cortex-M4 processor and core peripherals

The Cortex-M4 processor is a high performance 32-bit processor designed for the microcontroller market. It offers significant benefits to developers, including:

- outstanding processing performance combined with fast interrupt handling
- enhanced system debug with extensive breakpoint and trace capabilities
- · efficient processor core, system and memories
- ultra-low power consumption with integrated sleep modes
- platform security robustness, with integrated memory protection unit (MPU).

The Cortex-M4 processor is built on a high-performance processor core, with a 3-stage pipeline Harvard architecture, making it ideal for demanding embedded applications. The processor delivers exceptional power efficiency through an efficient instruction set and extensively optimized design, providing high-end processing hardware including IEEE754-compliant single-precision floating-point computation, a range of single-cycle and SIMD multiplication and multiply-with-accumulate capabilities, saturating arithmetic and dedicated hardware division.

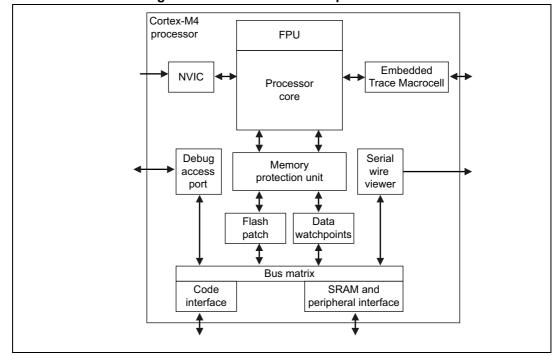


Figure 1. STM32 Cortex-M4 implementation

5

PM0214 Rev 10 13/262

About this document PM0214

To facilitate the design of cost-sensitive devices, the Cortex-M4 processor implements tightly-coupled system components that reduce processor area while significantly improving interrupt handling and system debug capabilities. The Cortex-M4 processor implements a version of the Thumb[®] instruction set based on Thumb-2 technology, ensuring high code density and reduced program memory requirements. The Cortex-M4 instruction set provides the exceptional performance expected of a modern 32-bit architecture, with the high code density of 8-bit and 16-bit microcontrollers.

The Cortex-M4 processor closely integrates a configurable nested interrupt controller (NVIC), to deliver industry-leading interrupt performance. The NVIC includes a non-maskable interrupt (NMI), and provides up to 256 interrupt priority levels. The tight integration of the processor core and NVIC provides fast execution of interrupt service routines (ISRs), dramatically reducing the interrupt latency. This is achieved through the hardware stacking of registers, and the ability to suspend load-multiple and store-multiple operations. Interrupt handlers do not require any assembler stubs, removing any code overhead from the ISRs. Tail-chaining optimization also significantly reduces the overhead when switching from one ISR to another.

To optimize low-power designs, the deep sleep function, included in the sleep mode integrated in the NVIC, enables the STM32 to enter Stop or Standby mode.

1.3.1 System level interface

The Cortex-M4 processor provides multiple interfaces using AMBA® technology to provide high speed, low latency memory accesses. It supports unaligned data accesses and implements atomic bit manipulation that enables faster peripheral controls, system spinlocks and thread-safe Boolean data handling.

The Cortex-M4 processor has a memory protection unit (MPU) that provides fine grain memory control, enabling applications to utilize multiple privilege levels, separating and protecting code, data and stack on a task-by-task basis. Such requirements are critical in many embedded applications such as automotive.

1.3.2 Integrated configurable debug

The Cortex-M4 processor implements a complete hardware debug solution. This provides high system visibility of the processor and memory through either a traditional JTAG port or a 2-pin *Serial Wire Debug* (SWD) port that is ideal for small package devices.

For system trace the processor integrates an *Instrumentation Trace Macrocell* (ITM) alongside data watchpoints and a profiling unit. To enable simple and cost-effective profiling of the system events these generate, a *Serial Wire Viewer* (SWV) can export a stream of software-generated messages, data trace, and profiling information through a single pin.

The optional *Embedded Trace Macrocell*[™] (ETM) delivers unrivalled instruction trace capture in an area far smaller than traditional trace units.

PM0214 About this document

1.3.3 Cortex-M4 processor features and benefits summary

- Tight integration of system peripherals reduces area and development costs
- Thumb instruction set combines high code density with 32-bit performance
- IEEE754-compliant single-precision FPU implemented in all STM32 Cortex-M4 microcontrollers
- Power control optimization of system components
- Integrated sleep modes for low power consumption
- Fast code execution permits slower processor clock or increases sleep mode time
- Hardware division and fast multiplier
- Deterministic, high-performance interrupt handling for time-critical applications
- Memory protection unit (MPU) for safety-critical applications
- Extensive debug and trace capabilities: Serial Wire Debug and Serial Wire Trace reduce the number of pins required for debugging and tracing.



PM0214 Rev 10 15/262

About this document PM0214

1.3.4 Cortex-M4 core peripherals

The peripherals are:

Nested vectored interrupt controller

The *nested vectored interrupt controller* (NVIC) is an embedded interrupt controller that supports low latency interrupt processing.

System control block

The *system control block* (SCB) is the programmer's model interface to the processor. It provides system implementation information and system control, including configuration, control, and reporting of system exceptions.

System timer

The system timer (SysTick) is a 24-bit count-down timer. Use this as a Real Time Operating System (RTOS) tick timer or as a simple counter.

Memory protection unit

The *Memory protection unit* (MPU) improves system reliability by defining the memory attributes for different memory regions. It provides up to eight different regions, and an optional predefined background region.

Floating-point unit

The *Floating-point unit* (FPU) provides IEEE754-compliant operations on single-precision, 32-bit, floating-point values.

2 The Cortex-M4 processor

2.1 Programmers model

This section describes the Cortex-M4 programmer's model. In addition to the individual core register descriptions, it contains information about the processor modes and privilege levels for software execution and stacks.

2.1.1 Processor mode and privilege levels for software execution

The processor modes are:

Thread mode: Used to execute application software.

The processor enters Thread mode when it comes out of reset. The CONTROL register controls whether software execution is privileged or unprivileged, see CONTROL register on page 25.

Handler mode: Used to handle exceptions.

The processor returns to Thread mode when it has finished exception processing.

Software execution is always privileged.

The privilege levels for software execution are:

Unprivileged: *Unprivileged software* executes at the unprivileged level and:

- Has limited access to the MSR and MRS instructions, and cannot use the CPS instruction.
- Cannot access the system timer, NVIC, or system control block.
- Might have restricted access to memory or peripherals.
- Must use the SVC instruction to make a supervisor call to transfer control to privileged software.

Privileged:

Privileged software executes at the privileged level and can use all the instructions and has access to all resources.

Can write to the CONTROL register to change the privilege level for software execution.

2.1.2 Stacks

The processor uses a full descending stack. This means the stack pointer indicates the last stacked item on the stack memory. When the processor pushes a new item onto the stack, it decrements the stack pointer and then writes the item to the new memory location. The processor implements two stacks, the *main stack* and the *process stack*, with independent copies of the stack pointer, see *Stack pointer on page 19*.

In Thread mode, the CONTROL register controls whether the processor uses the main stack or the process stack, see *CONTROL register on page 25*. In Handler mode, the processor always uses the main stack. The options for processor operations are:



PM0214 Rev 10 17/262

Table 2. Summary of processor mode, execution privilege level, and stack usage

| Processor mode | Used to execute | Privilege level for software execution | Stack used |
|----------------|--------------------|---|--|
| Thread | Applications | Privileged or unprivileged ⁽¹⁾ | Main stack or process stack ⁽¹⁾ |
| Handler | Exception handlers | Always privileged | Main stack |

^{1.} See CONTROL register on page 25.

2.1.3 Core registers

Figure 2. Processor core registers



Table 3. Core register set summary

| Name | Type ⁽¹⁾ | Required privilege (2) | Reset value | Description |
|--------|---------------------|------------------------|-----------------|--------------------------------------|
| R0-R12 | read-write | Either | Unknown | General-purpose registers on page 19 |
| MSP | read-write | Privileged | See description | Stack pointer on page 19 |
| PSP | read-write | Either | Unknown | Stack pointer on page 19 |
| LR | read-write | Either | 0xFFFFFFF | Link register on page 19 |
| PC | read-write | Either | See description | Program counter on page 19 |



| Name | Type ⁽¹⁾ | Required privilege (2) | Reset value | Description |
|-----------|---------------------|------------------------|----------------|--|
| PSR | read-write | Privileged | 0x01000000 | Program status register on page 19 |
| ASPR | read-write | Either | Unknown | Application program status register on page 21 |
| IPSR | read-only | Privileged | 0x00000000 | Interrupt program status register on page 22 |
| EPSR | read-only | Privileged | 0x01000000 | Execution program status register on page 22 |
| PRIMASK | read-write | Privileged | 0x00000000 | Priority mask register on page 24 |
| FAULTMASK | read-write | Privileged | 0x00000000 | Fault mask register on page 24 |
| BASEPRI | read-write | Privileged | 0x00000000 | Base priority mask register on page 25 |
| CONTROL | read-write | Privileged | 0x00000000 | CONTROL register on page 25 |

Table 3. Core register set summary (continued)

General-purpose registers

R0-R12 are 32-bit general-purpose registers for data operations.

Stack pointer

The *Stack Pointer* (SP) is register R13. In Thread mode, bit[1] of the CONTROL register indicates the stack pointer to use:

- 0: Main Stack Pointer (MSP). This is the reset value.
- 1: Process Stack Pointer (PSP).

On reset, the processor loads the MSP with the value from address 0x00000000.

Link register

The *Link Register* (LR) is register R14. It stores the return information for subroutines, function calls, and exceptions. On reset, the processor loads the LR value 0xFFFFFFF.

Program counter

The *Program Counter* (PC) is register R15. It contains the current program address. On reset, the processor loads the PC with the value of the reset vector, which is at address 0x00000004. Bit[0] of the value is loaded into the EPSR T-bit at reset and must be 1.

Program status register

The Program Status Register (PSR) combines:

- Application Program Status Register (APSR)
- Interrupt Program Status Register (IPSR)
- Execution Program Status Register (EPSR)



PM0214 Rev 10 19/262

Describes access type during program execution in thread mode and Handler mode. Debug access can differ

^{2.} An entry of either means privileged and unprivileged software can access the register.

These registers are mutually exclusive bitfields in the 32-bit PSR. The bit assignment is shown in *Figure 3* and *Figure 4*.

Figure 3. APSR, IPSR and EPSR bit assignment

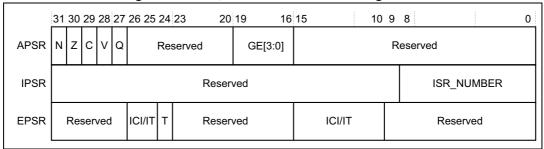


Figure 4. PSR bit assignment



Access these registers individually or as a combination of any two or all three registers, using the register name as an argument to the MSR or MRS instructions. For example:

- Read all of the registers using PSR with the MRS instruction.
- Write to the APSR N, Z, C, V, and Q bits using APSR_nzcvq with the MSR instruction.

The PSR combinations and attributes are:

Table 4. PSR register combinations

| Register | Туре | Combination |
|----------|---------------------------|----------------------|
| PSR | read-write(1), (2) | APSR, EPSR, and IPSR |
| IEPSR | read-only | EPSR and IPSR |
| IAPSR | read-write ⁽¹⁾ | APSR and IPSR |
| EAPSR | read-write(2) | APSR and EPSR |

- 1. The processor ignores writes to the IPSR bits.
- 2. Reads of the EPSR bits return zero, and the processor ignores writes to the these bits

See the instruction descriptions *MRS on page 186* and *MSR on page 187* for more information about how to access the program status registers.

Application program status register

The APSR contains the current state of the condition flags from previous instruction executions. See the register summary in *Table 3 on page 18* for its attributes. The bit assignment is:

Table 5. APSR bit definitions

| Bits | Description |
|------------|---|
| Bit 31 | N: Negative or less than flag: 0: Operation result was positive, zero, greater than, or equal 1: Operation result was negative or less than. |
| Bit 30 | Z: Zero flag: 0: Operation result was not zero 1: Operation result was zero. |
| Bit 29 | C: Carry or borrow flag: 0: Add operation did not result in a carry bit or subtract operation resulted in a borrow bit 1: Add operation resulted in a carry bit or subtract operation did not result in a borrow bit. |
| Bit 28 | V: Overflow flag: 0: Operation did not result in an overflow 1: Operation resulted in an overflow. |
| Bit 27 | Q: DSP overflow and saturation flag: Sticky saturation flag. 0: Indicates that saturation has not occurred since reset or since the bit was last cleared to zero 1: Indicates when an SSAT or USAT instruction results in saturation, or indicates a DSP overflow. This bit is cleared to zero by software using an MRS instruction. |
| Bits 26:20 | Reserved. |
| Bits 19:16 | GE[3:0]: Greater than or Equal flags. See SEL on page 105 for more information. |
| Bits 15:0 | Reserved. |



PM0214 Rev 10 21/262

Interrupt program status register

The IPSR contains the exception type number of the current *Interrupt Service Routine* (ISR). See the register summary in *Table 3 on page 18* for its attributes. The bit assignment is:

Table 6. IPSR bit definitions

| Bits | Description | | | |
|-----------|--|--|--|--|
| Bits 31:9 | Reserved | | | |
| Bits 8:0 | ISR_NUMBER: | | | |
| | This is the number of the current exception: | | | |
| | 0: Thread mode | | | |
| | 1: Reserved | | | |
| | 2: NMI | | | |
| | 3: Hard fault | | | |
| | 4: Memory management fault | | | |
| | 5: Bus fault | | | |
| | 6: Usage fault | | | |
| | 7: Reserved | | | |
| | | | | |
| | 10: Reserved | | | |
| | 11: SVCall | | | |
| | 12: Reserved for Debug 13: Reserved | | | |
| | | | | |
| | 14: PendSV | | | |
| | 15: SysTick | | | |
| | 16: IRQ0 ⁽¹⁾ | | | |
| | | | | |
| | | | | |
| | 255: IRQ240 ⁽¹⁾ | | | |
| | see Exception types on page 37 for more information. | | | |

Depends on product. Refer to reference manual/datasheet of relevant STM32 product for related information.

Execution program status register

The EPSR contains the Thumb state bit, and the execution state bits for either the:

- If-Then (IT) instruction
- Interruptible-Continuable Instruction (ICI) field for an interrupted load multiple or store multiple instruction.

See the register summary in *Table 3 on page 18* for the EPSR attributes. The bit assignment is:

| Bits | Description | | |
|-------------------|---|--|--|
| Bits 31:27 | Reserved. | | |
| Bits 26:25, 15:10 | ICI: Interruptible-continuable instruction bits, see Interruptible-continuable instructions on page 23. | | |
| Bits 26:25, 15:10 | IT: Indicates the execution state bits of the IT instruction, see IT on page 145. | | |
| Bit 24 | T: Thumb state bit. | | |
| Bits 23:16 | Reserved. | | |

Table 7. EPSR bit definitions

Attempts to read the EPSR directly through application software using the MSR instruction always return zero. Attempts to write the EPSR using the MSR instruction in application software are ignored. Fault handlers can examine EPSR value in the stacked PSR to indicate the operation that is at fault. See *Section 2.3.7: Exception entry and return on page 42*.

Interruptible-continuable instructions

Reserved.

Bits 9:0

When an interrupt occurs during the execution of an LDM STM, PUSH, POP, VLDM, VSTM, VPUSH, or VPOP instruction, the processor:

- Stops the load multiple or store multiple instruction operation temporarily
- Stores the next register operand in the multiple operation to EPSR bits[15:12].

After servicing the interrupt, the processor:

- Returns to the register pointed to by bits[15:12]
- Resumes execution of the multiple load or store instruction.

When the EPSR holds ICI execution state, bits[26:25,11:10] are zero.

If-Then block

The If-Then block contains up to four instructions following a 16-bit IT instruction. Each instruction in the block is conditional. The conditions for the instructions are either all the same, or some can be the inverse of others. See *IT on page 145* for more information.

Thumb state

The Cortex-M4 processor only supports execution of instructions in Thumb state. The following can clear the T bit to 0:

- Instructions BLX, BX and POP{PC}
- Restoration from the stacked xPSR value on an exception return
- Bit[0] of the vector value on an exception entry or reset

Attempting to execute instructions when the T bit is 0 results in a fault or lockup. See *Lockup* on page 47 for more information.

Exception mask registers

The exception mask registers disable the handling of exceptions by the processor. Disable exceptions where they might impact on timing critical tasks.



PM0214 Rev 10 23/262

To access the exception mask registers use the MSR and MRS instructions, or the CPS instruction to change the value of PRIMASK or FAULTMASK. See *MRS on page 186*, *MSR on page 187*, and *CPS on page 182* for more information.

Priority mask register

The PRIMASK register prevents the activation of all exceptions with configurable priority. See the register summary in *Table 3 on page 18* for its attributes. *Figure 5* shows the bit assignment.

Figure 5. PRIMASK bit assignment



Table 8. PRIMASK register bit definitions

| Bits | Description | | |
|-----------|---|--|--|
| Bits 31:1 | Reserved | | |
| Bit 0 | PRIMASK: 0: No effect 1: Prevents the activation of all exceptions with configurable priority. | | |

Fault mask register

The FAULTMASK register prevents activation of all exceptions except for *Non-Maskable Interrupt* (NMI). See the register summary in *Table 3 on page 18* for its attributes. *Figure 6* shows the bit assignment.

Figure 6. FAULTMASK bit assignment



Table 9. FAULTMASK register bit definitions

| Bits | Function |
|-----------|---|
| Bits 31:1 | Reserved |
| | FAULTMASK: 0: No effect 1: Prevents the activation of all exceptions except for NMI. |

The processor clears the FAULTMASK bit to 0 on exit from any exception handler except the NMI handler.

Base priority mask register

The BASEPRI register defines the minimum priority for exception processing. When BASEPRI is set to a nonzero value, it prevents the activation of all exceptions with same or lower priority level as the BASEPRI value. See the register summary in *Table 3 on page 18* for its attributes. *Figure 7* shows the bit assignment.

Figure 7. BASEPRI bit assignment



Table 10. BASEPRI register bit assignment

| Bits | Function |
|-----------|--|
| Bits 31:8 | Reserved |
| Bits 7:4 | BASEPRI[7:4] Priority mask bits ⁽¹⁾ 0x00: no effect Nonzero: defines the base priority for exception processing. The processor does not process any exception with a priority value greater than or equal to BASEPRI. |
| Bits 3:0 | Reserved |

This field is similar to the priority fields in the interrupt priority registers. See *Interrupt priority register x* (NVIC_IPRx) on page 215 for more information. Remember that higher priority field values correspond to lower exception priorities.

CONTROL register

The CONTROL register controls the stack used and the privilege level for software execution when the processor is in Thread mode and indicates whether the FPU state is active. See the register summary in *Table 3 on page 18* for its attributes.

Table 11. CONTROL register bit definitions

| Bits | Function |
|-----------|--|
| Bits 31:3 | Reserved |
| Bit 2 | FPCA: Indicates whether floating-point context currently active: 0: No floating-point context active 1: Floating-point context active. The Cortex-M4 uses this bit to determine whether to preserve floating-point state when processing an exception. |
| Bit 1 | SPSEL: Active stack pointer selection. Selects the current stack: 0: MSP is the current stack pointer 1: PSP is the current stack pointer. In Handler mode this bit reads as zero and ignores writes. The Cortex-M4 updates this bit automatically on exception return. |
| Bit 0 | nPRIV: Thread mode privilege level. Defines the Thread mode privilege level. 0: Privileged 1: Unprivileged. |



PM0214 Rev 10 25/262

Handler mode always uses the MSP, so the processor ignores explicit writes to the active stack pointer bit of the CONTROL register when in Handler mode. The exception entry and return mechanisms update the CONTROL register.

In an OS environment, it is recommended that threads running in Thread mode use the process stack, and the kernel and exception handlers use the main stack.

By default, Thread mode uses the MSP. To switch the stack pointer used in Thread mode to the PSP, either:

- use the MSR instruction to set the Active stack pointer bit to 1, see MSR on page 187.
- perform an exception return to Thread mode with the appropriate EXC_RETURN value, see Exception return behavior on page 44.

When changing the stack pointer, software must use an ISB instruction immediately after the MSR instruction. This ensures that instructions after the ISB execute using the new stack pointer. See ISB on page 185

2.1.4 Exceptions and interrupts

The Cortex-M4 processor supports interrupts and system exceptions. The processor and the *Nested Vectored Interrupt Controller* (NVIC) prioritize and handle all exceptions. An exception changes the normal flow of software control. The processor uses handler mode to handle all exceptions except for reset. See *Exception entry on page 42* and *Exception return on page 44* for more information.

The NVIC registers control interrupt handling. See *Nested vectored interrupt controller* (NVIC) on page 208 for more information.

2.1.5 Data types

The processor:

- Supports the following data types:
 - 32-bit words
 - 16-bit halfwords
 - 8-bit bytes
- manages all memory accesses as little-endian. See Memory regions, types and attributes on page 29 for more information.

2.1.6 The Cortex microcontroller software interface standard (CMSIS)

For a Cortex-M4 microcontroller system, the *Cortex Microcontroller Software Interface Standard* (CMSIS) defines:

- A common way to:
 - Access peripheral registers
 - Define exception vectors
- The names of:
 - The registers of the core peripherals
 - The core exception vectors
- A device-independent interface for RTOS kernels, including a debug channel



The CMSIS includes address definitions and data structures for the core peripherals in the Cortex-M4 processor.

CMSIS simplifies software development by enabling the reuse of template code and the combination of CMSIS-compliant software components from various middleware vendors. Software vendors can expand the CMSIS to include their peripheral definitions and access functions for those peripherals.

This document includes the register names defined by the CMSIS, and gives short descriptions of the CMSIS functions that address the processor core and the core peripherals.

This document uses the register short names defined by the CMSIS. In a few cases these differ from the architectural short names that might be used in other documents.

The following sections give more information about the CMSIS:

- Section 2.5.4: Power management programming hints on page 49
- CMSIS intrinsic functions on page 58
- Interrupt set-enable register x (NVIC_ISERx) on page 210
- NVIC programming hints on page 218



PM0214 Rev 10 27/262

2.2 Memory model

This section describes the processor memory map, the behavior of memory accesses, and the bit-banding features. The processor has a fixed memory map that provides up to 4 GB of addressable memory.

0xFFFFFFF Vendor-specific 511MB memory 0xE0100000 0xE00FFFFF Private peripheral 1.0MB bus 0xE0000000 0xDFFFFFFF External device 1.0GB 0xA0000000 0x9FFFFFF External RAM 1.0GB 0x43FFFFF 32MB Bit band alias 0x60000000 0x5FFFFFF 0x42000000 Peripheral 0.5GB 0x400FFFFF 1MB Bit band region 0x40000000 0x40000000 0x3FFFFFF 0x23FFFFFF SRAM 0.5GB 32MB Bit band alias 0x20000000 0x22000000 0x1FFFFFF Code 0.5GB 0x200FFFFF 1MB Bit band region 0x20000000 0x00000000

Figure 8. Memory map

The regions for SRAM and peripherals include bit-band regions. Bit-banding provides atomic operations to bit data, see Section 2.2.5: Bit-banding on page 32.

The processor reserves regions of the *Private peripheral bus* (PPB) address range for core peripheral registers, see *Section 4.1: About the STM32 Cortex-M4 core peripherals on page 193.*

2.2.1 Memory regions, types and attributes

The memory map and the programming of the MPU splits the memory map into regions. Each region has a defined memory type, and some regions have additional memory attributes. The memory type and attributes determine the behavior of accesses to the region.

The memory types are:

Normal The processor can re-order transactions for efficiency, or

perform speculative reads.

Device The processor preserves transaction order relative to other

transactions to Device or Strongly-ordered memory.

Strongly-ordered The processor preserves transaction order relative to all other

transactions.

The different ordering requirements for Device and Strongly-ordered memory mean that the memory system can buffer a write to Device memory, but must not buffer a write to Strongly-ordered memory.

The additional memory attributes include:

Execute Never (XN) Means that the processor prevents instruction accesses. Any

attempt to fetch an instruction from an XN region causes a

memory management fault exception.

2.2.2 Memory system ordering of memory accesses

For most memory accesses caused by explicit memory access instructions, the memory system does not guarantee that the order, in which the accesses complete, matches the program order of the instructions, providing this does not affect the behavior of the instruction sequence. Normally, if correct program execution depends on two memory accesses completing in program order, software must insert a memory barrier instruction between the memory access instructions, see *Section 2.2.4: Software ordering of memory accesses on page 31*.

However, the memory system does guarantee some ordering of accesses to Device and Strongly-ordered memory. For two memory access instructions A1 and A2, if A1 occurs before A2 in program order, the ordering of the memory accesses caused by two instructions is:

Table 12. Ordering of memory accesses⁽¹⁾

| | A2 | | | | |
|------------------------------|---------------|---------------|---------------------|--------|--|
| A1 | Normal access | Device | Strongly ordered | | |
| | Normal access | Non-shareable | Shareable | access | |
| Normal access | - | - | - | - | |
| Device access, non-shareable | - | < | - | < | |
| Device access, shareable | - | - | < | < | |
| Strongly ordered access | - | < | < | < | |

 ⁻ means that the memory system does not guarantee the ordering of the accesses.
 < means that accesses are observed in program order, that is, A1 is always observed before A2.



PM0214 Rev 10 29/262

2.2.3 Behavior of memory accesses

The behavior of accesses to each region in the memory map is:

Table 13. Memory access behavior

| Address range | Memory region | Memory type | XN | Description |
|---------------------------|---------------------------------|-------------------------------------|-------------------|--|
| 0x00000000- 0x1FFFFFF | Code | Normal ⁽¹⁾ | - | Executable region for program code. Can also put data here. |
| 0x20000000- 0x3FFFFFF | SRAM | Normal ⁽¹⁾ | - | Executable region for data. Can also put code here. This region includes bit band and bit band alias areas, see <i>Table 14 on page 32</i> . |
| 0x40000000- 0x5FFFFFF | Peripheral | Device ⁽¹⁾ | XN ⁽¹⁾ | This region includes bit band and bit band alias areas, see <i>Table 15 on page 32</i> . |
| 0x60000000- 0x9FFFFFF | External RAM | Normal ⁽¹⁾ | - | Executable region for data. |
| 0xA0000000- 0xDFFFFFF | External device | Device ⁽¹⁾ | XN ⁽¹⁾ | External Device memory |
| 0xED000000- 0xED0FFFFF | Private Peripheral Bus | Strongly- ordered ⁽¹⁾ | XN ⁽¹⁾ | This region includes the NVIC, system timer, and system control block. |
| 0xED100000- 0xFFFFFFF | Memory mapped peripherals | Device ⁽¹⁾ | XN ⁽¹⁾ | This region includes all the STM32 standard peripherals. |

^{1.} See *Memory regions, types and attributes on page 29* for more information.

The Code, SRAM, and external RAM regions can hold programs. However, it is recommended that programs always use the Code region. The reason of this is that the processor has separate buses that enable instruction fetches and data accesses to occur simultaneously.

The MPU can override the default memory access behavior described in this section. For more information, see *Memory protection unit (MPU) on page 193*.

Instruction prefetch and branch prediction

The Cortex-M4 processor:

- · Prefetches instructions ahead of execution
- Speculatively prefetches from branch target addresses.



2.2.4 Software ordering of memory accesses

The order of instructions in the program flow does not always guarantee the order of the corresponding memory transactions. The reason for this is that:

- The processor can reorder some memory accesses to improve efficiency, providing this
 does not affect the behavior of the instruction sequence.
- The processor has multiple bus interfaces.
- Memory or devices in the memory map have different wait states.
- Some memory accesses are buffered or speculative.

Section 2.2.2: Memory system ordering of memory accesses on page 29 describes the cases where the memory system guarantees the order of memory accesses. Otherwise, if the order of memory accesses is critical, software must include memory barrier instructions to force that ordering. The processor provides the following memory barrier instructions:

- DMB The *Data Memory Barrier* (DMB) instruction ensures that outstanding memory transactions complete before subsequent memory transactions. See *DMB on page 183*.
- DSB The *Data Synchronization Barrier* (DSB) instruction ensures that outstanding memory transactions complete before subsequent instructions execute. See *DSB* on page 184.
- ISB The *Instruction Synchronization Barrier* (ISB) ensures that the effect of all completed memory transactions is recognizable by subsequent instructions. See *ISB on page 185*.

Use memory barrier instructions in, for example:

- Vector table. If the program changes an entry in the vector table, and then enables the
 corresponding exception, use a DMB instruction between the operations. This ensures
 that if the exception is taken immediately after being enabled the processor uses the
 new exception vector.
- **Self-modifying code.** If a program contains self-modifying code, use an ISB instruction immediately after the code modification in the program. This ensures that the subsequent instruction execution uses the updated program.
- **Memory map switching.** If the system contains a memory map switching mechanism, use a DSB instruction after switching the memory map in the program. This ensures that the subsequent instruction execution uses the updated memory map.
- **Dynamic exception priority change.** When an exception priority has to change when the exception is pending or active, use DSB instructions after the change. This ensures that the change takes effect on completion of the DSB instruction.
- Using a semaphore in multi-master system. If the system contains more than one
 bus master, for example, if another processor is present in the system, each processor
 must use a DMB instruction after any semaphore instructions, to ensure other bus
 masters see the memory transactions in the order in which they were executed.

Memory accesses to Strongly-ordered memory, such as the system control block, do not require the use of DMB instructions.

For MPU programming, use a DSB followed by an ISB instruction or exception return to ensure that the new MPU configuration is used by subsequent instructions.



PM0214 Rev 10 31/262

2.2.5 Bit-banding

A bit-band region maps each word in a *bit-band alias* region to a single bit in the *bit-band region*. The bit-band regions occupy the lowest 1 Mbyte of the SRAM and peripheral memory regions.

The memory map has two 32 Mbyte alias regions that map to two 1 Mbyte bit-band regions:

- Accesses to the 32 Mbyte SRAM alias region map to the 1 Mbyte SRAM bit-band region, as shown in *Table 14*
- Accesses to the 32 MB peripheral alias region map to the 1 MB peripheral bit-band region, as shown in *Table 15*.

| · · · · · · · · · · · · · · · · · · · | | | |
|---------------------------------------|----------------------|---|--|
| Address range | Memory region | Instruction and data accesses | |
| 0x20000000- 0x200FFFF | SRAM bit-band region | Direct accesses to this memory range behave as SRAM memory accesses, but this region is also bit addressable through bit-band alias. | |
| 0x22000000- 0x23FFFFF | SRAM bit-band alias | Data accesses to this region are remapped to bit band region. A write operation is performed as read-modify-write. Instruction accesses are not remapped. | |

Table 14. SRAM memory bit-banding regions

Table 15. Peripheral memory bit-banding regions

| Address range | Memory region | Instruction and data accesses |
|---------------------------|-------------------------------|--|
| 0x40000000- 0x400FFFFF | Peripheral bit-band region | Direct accesses to this memory range behave as peripheral memory accesses, but this region is also bit addressable through bit-band alias. |
| 0x42000000- 0x43FFFFF | Peripheral bit-band alias | Data accesses to this region are remapped to bit-band region. A write operation is performed as read-modify-write. Instruction accesses are not permitted. |

Note:

A word access to the SRAM or peripheral bit-band alias regions map to a single bit in the SRAM or peripheral bit-band region.

Bit band accesses can use byte, halfword, or word transfers. The bit band transfer size matches the transfer size of the instruction making the bit band access.

The following formula shows how the alias region maps onto the bit-band region:

```
bit_word_offset = (byte_offset x 32) + (bit_number x 4)
bit_word_addr = bit_band_base + bit_word_offset
```

Where:

- Bit_word_offset is the position of the target bit in the bit-band memory region.
- Bit_word_addr is the address of the word in the alias memory region that maps to the targeted bit.
- Bit_band_base is the starting address of the alias region.
- Byte_offset is the number of the byte in the bit-band region that contains the targeted bit
- Bit number is the bit position, 0-7, of the targeted bit.

Figure 9 on page 33 shows examples of bit-band mapping between the SRAM bit-band alias region and the SRAM bit-band region:

- The alias word at 0x23FFFFED maps to bit[0] of the bit-band byte at 0x200FFFFF: 0x23FFFFED = 0x22000000 + (0xFFFFF*32) + (0*4).
- The alias word at 0x23FFFFC maps to bit[7] of the bit-band byte at 0x200FFFFF: 0x23FFFFC = 0x22000000 + (0xFFFFF*32) + (7*4).
- The alias word at 0x22000000 maps to bit[0] of the bit-band byte at 0x20000000: 0x22000000 = 0x22000000 + (0*32) + (0 *4).
- The alias word at 0x2200001C maps to bit[7] of the bit-band byte at 0x20000000: 0x2200001C = 0x22000000+ (0*32) + (7*4).



Figure 9. Bit-band mapping

Directly accessing an alias region

Writing to a word in the alias region updates a single bit in the bit-band region.

Bit[0] of the value written to a word in the alias region determines the value written to the targeted bit in the bit-band region. Writing a value with bit[0] set to 1 writes a 1 to the bit-band bit, and writing a value with bit[0] set to 0 writes a 0 to the bit-band bit.

Bits[31:1] of the alias word have no effect on the bit-band bit. Writing 0x01 has the same effect as writing 0xFF. Writing 0x00 has the same effect as writing 0x0E.

PM0214 Rev 10 33/262

Reading a word in the alias region:

- 0x00000000 indicates that the targeted bit in the bit-band region is set to zero
- 0x00000001 indicates that the targeted bit in the bit-band region is set to 1

Directly accessing a bit-band region

Behavior of memory accesses on page 30 describes the behavior of direct byte, halfword, or word accesses to the bit-band regions.

2.2.6 Memory endianness

The processor views memory as a linear collection of bytes numbered in ascending order from zero. For example, bytes 0-3 hold the first stored word, and bytes 4-7 hold the second stored word.

Little-endian format

In little-endian format, the processor stores the least significant byte of a word at the lowest-numbered byte, and the most significant byte at the highest-numbered byte. See *Figure 10* for an example.

Memory Register 0 31 2423 1615 8 7 **B**3 B2 В1 B0 Address A B0 Isbyte R1 A+1 B2 A+2 В3 A+3 msbyte

Figure 10. Little-endian example

2.2.7 Synchronization primitives

The Cortex-M4 instruction set includes pairs of *synchronization primitives*. These provide a non-blocking mechanism that a thread or process can use to obtain exclusive access to a memory location. Software can use them to perform a guaranteed read-modify-write memory update sequence, or for a semaphore mechanism.

A pair of synchronization primitives comprises:

- Load-Exclusive instruction: used to read the value of a memory location, requesting exclusive access to that location.
- Store-Exclusive instruction: used to attempt to write to the same memory location, returning a status bit to a register. If this bit is:
 - 0: the thread or process gained exclusive access to memory, and the write succeeds.
 - 1: the thread or process did not gain exclusive access to memory, and no write is performed.



The pairs of Load-Exclusive and Store-Exclusive instructions are:

- The word instructions LDREX and STREX
- The halfword instructions LDREXH and STREXH
- The byte instructions LDREXB and STREXB.

Software must use a Load-Exclusive instruction with the corresponding Store-Exclusive instruction.

To perform a guaranteed read-modify-write of a memory location, software must:

- 1. Use a Load-Exclusive instruction to read the value of the location.
- 2. Update the value, as required.
- 3. Use a Store-Exclusive instruction to attempt to write the new value back to the memory location.
- 4. Test the returned status bit. If this bit is:
 - 0: The read-modify-write completed successfully.
 - 1: No write was performed. This indicates that the value returned at step 1 might be out of date. The software must retry the read-modify-write sequence.

Software can use the synchronization primitives to implement a semaphores as follows:

- 1. Use a Load-Exclusive instruction to read from the semaphore address to check whether the semaphore is free.
- 2. If the semaphore is free, use a Store-Exclusive to write the claim value to the semaphore address.
- 3. If the returned status bit from step 2 indicates that the Store-Exclusive succeeded then the software has claimed the semaphore. However, if the Store-Exclusive failed, another process might have claimed the semaphore after software performed step 1.

The Cortex-M4 includes an exclusive access monitor, that tags the fact that the processor has executed a Load-Exclusive instruction. If the processor is part of a multiprocessor system, the system also globally tags the memory locations addressed by exclusive accesses by each processor.

The processor removes its exclusive access tag if:

- It executes a CLREX instruction.
- It executes a Store-Exclusive instruction, regardless of whether the write succeeds.
- An exception occurs. This means the processor can resolve semaphore conflicts between different threads.

In a multiprocessor implementation, executing a:

- CLREX instruction removes only the local exclusive access tag for the processor.
- Store-Exclusive instruction, or an exception, removes the local exclusive access tags, and global exclusive access tags for the processor.

For more information about the synchronization primitive instructions, see *LDREX* and *STREX* on page 79 and *CLREX* on page 80.

57

PM0214 Rev 10 35/262

2.2.8 Programming hints for the synchronization primitives

ISO/IEC C cannot directly generate the exclusive access instructions. CMSIS provides intrinsic functions for generation of these instructions:

Table 16. CMSIS functions for exclusive access instructions

| Instruction | CMSIS function |
|-------------|---|
| LDREX | uint32_tLDREXW (uint32_t *addr) |
| LDREXH | uint16_tLDREXH (uint16_t *addr) |
| LDREXB | uint8_tLDREXB (uint8_t *addr) |
| STREX | uint32_tSTREXW (uint32_t value, uint32_t *addr) |
| STREXH | uint32_tSTREXH (uint16_t value, uint16_t *addr) |
| STREXB | uint32_tSTREXB (uint8_t value, uint8_t *addr) |
| CLREX | voidCLREX (void) |

For example:

2.3 **Exception model**

This section describes the exception model.

2.3.1 **Exception states**

Each exception is in one of the following states:

Inactive The exception is not active and not pending.

Pending The exception is waiting to be serviced by the processor. An interrupt

request from a peripheral or from software can change the state of the

corresponding interrupt to pending.

Active An exception that is being serviced by the processor but has not

completed.

Note: An exception handler can interrupt the execution of another exception

handler. In this case both exceptions are in the active state.

Active and pending The exception is being serviced by the processor and there is a

pending exception from the same source.

2.3.2 **Exception types**

The exception types are:

Reset

Reset is invoked on power up or a warm reset. The exception model treats reset as a special form of exception. When reset is asserted, the operation of the processor stops, potentially at any point in an instruction. When reset is deasserted, execution restarts from the address provided by the reset entry in the vector table. Execution

restarts as privileged execution in Thread mode.

NMI A NonMaskable Interrupt (NMI) can be signalled by a peripheral or

> triggered by software. This is the highest priority exception other than reset. It is permanently enabled and has a fixed priority of -2. NMIs

cannot be:

Masked or prevented from activation by any other exception

Preempted by any exception other than Reset.

Hard fault A hard fault is an exception that occurs because of an error during

> exception processing, or because an exception cannot be managed by any other exception mechanism. Hard faults have a fixed priority of -1, meaning they have higher priority than any exception with configurable

priority.

Memory

A memory management fault is an exception that occurs because of a management fault memory protection related fault. The MPU or the fixed memory protection constraints determines this fault, for both instruction and data memory transactions. This fault is used to abort instruction

accesses to Execute Never (XN) memory regions.



PM0214 Rev 10 37/262 **Bus fault**

A bus fault is an exception that occurs because of a memory related fault for an instruction or data memory transaction. This might be from an error detected on a bus in the memory system.

Usage fault

A usage fault is an exception that occurs in case of an instruction execution fault. This includes:

- An undefined instruction
- An illegal unaligned access
- Invalid state on instruction execution
- An error on exception return.

The following can cause a usage fault when the core is configured to report it:

- An unaligned address on word and halfword memory access
- Division by zero

SVCall A supervisor call (SVC) is an exception that is triggered by the SVC

instruction. In an OS environment, applications can use SVC instructions to access OS kernel functions and device drivers.

PendSV PendSV is an interrupt-driven request for system-level service. In an

OS environment, use PendSV for context switching when no other

exception is active.

SysTick A SysTick exception is an exception the system timer generates when

it reaches zero. Software can also generate a SysTick exception. In an OS environment, the processor can use this exception as system tick.

Interrupt (IRQ) An interrupt, or IRQ, is an exception signalled by a peripheral, or

generated by a software request. All interrupts are asynchronous to instruction execution. In the system, peripherals use interrupts to

communicate with the processor.

Table 17. Properties of the different exception types

| Exception number ⁽¹⁾ | IRQ number ⁽¹⁾ | Exception type | Priority | Vector address or offset ⁽²⁾ | Activation |
|---------------------------------|------------------------------|-------------------------|------------------|--|--|
| 1 | - | Reset | -3, the highest | 0x00000004 | Asynchronous |
| 2 | -14 | NMI | -2 | 0x00000008 | Asynchronous |
| 3 | -13 | Hard fault | -1 | 0x000000C | - |
| 4 | -12 | Memory management fault | Configurable (3) | 0x0000010 | Synchronous |
| 5 | -11 | Bus fault | Configurable (3) | 0x00000014 | Synchronous when precise Asynchronous when imprecise |
| 6 | -10 | Usage fault | Configurable (3) | 0x00000018 | Synchronous |
| 7-10 | - | - | - | Reserved | - |
| 11 | -5 | SVCall | Configurable (3) | 0x0000002C | Synchronous |
| 12-13 | - | - | - | Reserved | - |
| 14 | -2 | PendSV | Configurable (3) | 0x00000038 | Asynchronous |



| Exception number ⁽¹⁾ | IRQ number ⁽¹⁾ | Exception type | Priority | Vector address or offset ⁽²⁾ | Activation |
|---------------------------------|------------------------------|-----------------|-----------------------------|--|--------------|
| 15 | -1 | SysTick | Configurable (3) | 0x0000003C | Asynchronous |
| 16 and above | 0 and above | Interrupt (IRQ) | Configurable ⁽⁴⁾ | 0x00000040 and above ⁽⁵⁾ | Asynchronous |

Table 17. Properties of the different exception types (continued)

- To simplify the software layer, the CMSIS only uses IRQ numbers and therefore uses negative values for exceptions other than interrupts. The IPSR returns the Exception number. For further information see *Interrupt program status register on* page 22
- 2. See Vector table on page 40 for more information.
- 3. See System handler priority registers (SHPRx) on page 233.
- 4. See Interrupt priority register x (NVIC_IPRx) on page 215.
- 5. Increasing in steps of 4.

For an asynchronous exception other than reset, the processor can execute another instruction between when the exception is triggered and when the processor enters the exception handler.

Privileged software can disable the exceptions that *Table 17 on page 38* shows as having configurable priority. For further information, see:

- System handler control and state register (SHCSR) on page 235
- Interrupt clear-enable register x (NVIC_ICERx) on page 211

For more information about hard faults, memory management faults, bus faults, and usage faults, see *Section 2.4: Fault handling on page 44*.

2.3.3 Exception handlers

The processor handles exceptions using:

Interrupt Service Interrupts IRQ0 to IRQ81 are the exceptions handled by ISRs. Routines (ISRs)

Fault handlers Hard fault, memory management fault, usage fault, bus fault are fault

exceptions handled by the fault handlers.

System handlers NMI, PendSV, SVCall SysTick, and the fault exceptions are all

system exceptions that are handled by system handlers.



PM0214 Rev 10 39/262

2.3.4 **Vector table**

The vector table contains the reset value of the stack pointer, and the start addresses, also called exception vectors, for all exception handlers. Figure 11 on page 40 shows the order of the exception vectors in the vector table. The least-significant bit of each vector must be 1, indicating that the exception handler is Thumb code.

Figure 11. Vector table

| Figure 11. Vector table | | | | |
|-------------------------|----------------|------------------|-------------------------|-----------|
| Exception number | IRQ number | Offset | Vector | |
| 255 | 239 | 0x03FC | IRQ239 | |
| | | 0.0001 0 | • | |
| • | | • | • | |
| | | 0x004C | · | |
| 18 | 2 | 0x0048 | IRQ2 | |
| 17 | 1 | 0x0044 | IRQ1 | |
| 16 | 0 | 0x0040 | IRQ0 | |
| 15 | -1 | 0x003C | Systick | |
| 14 | - 2 | 0x0038 | PendSV | |
| 13 | | 0,0000 | Reserved | |
| 12 | | | Reserved for Debug | |
| 11 | -5 | 0x002C | SVCall | |
| 10 | | 0x002C | | |
| 9 | | | Desembled | |
| 8 | | | Reserved | |
| 7 | | | | |
| 6 | -10 | 0x0018 | Usage fault | |
| 5 | -11 | | Bus fault | |
| 4 | -12 | 0x0014 | Memory management fault | |
| 3 | -13 | 0x0010 | Hard fault | |
| 2 | -14 | 0x000C | NMI | |
| 1 | | 0x0008 | Reset | |
| | | 0x0004 0x0000 | Initial SP value | |
| | | 0,0000 | N | 1S30018V1 |

On system reset, the vector table is fixed at address 0x0000000. Privileged software can write to the VTOR to relocate the vector table start address to a different memory location, in the range 0x00000080 to 0x3FFFFF80. For further information see Vector table offset register (VTOR) on page 227.



2.3.5 Exception priorities

Table 17 on page 38 shows that all exceptions have an associated priority, in details:

- A lower priority value indicating a higher priority
- Configurable priorities for all exceptions except Reset, Hard fault, and NMI.

If software does not configure any priorities, then all exceptions with a configurable priority have a priority of 0. For information about configuring exception priorities see

- System handler priority registers (SHPRx) on page 233
- Interrupt priority register x (NVIC_IPRx) on page 215

Configurable priority values are in the range 0-15. This means that the Reset, Hard fault, and NMI exceptions, with fixed negative priority values, always have higher priority than any other exception.

For example, assigning a higher priority value to IRQ[0] and a lower priority value to IRQ[1] means that IRQ[1] has higher priority than IRQ[0]. If both IRQ[1] and IRQ[0] are asserted, IRQ[1] is processed before IRQ[0].

If multiple pending exceptions have the same priority, the pending exception with the lowest exception number takes precedence. For example, if both IRQ[0] and IRQ[1] are pending and have the same priority, then IRQ[0] is processed before IRQ[1].

When the processor is executing an exception handler, the exception handler is preempted if a higher priority exception occurs. If an exception occurs with the same priority as the exception being handled, the handler is not preempted, irrespective of the exception number. However, the status of the new interrupt changes to pending.

2.3.6 Interrupt priority grouping

To increase priority control in systems with interrupts, the NVIC supports priority grouping. This divides each interrupt priority register entry into two fields:

- An upper field that defines the group priority
- A lower field that defines a subpriority within the group.

Only the group priority determines preemption of interrupt exceptions. When the processor is executing an interrupt exception handler, another interrupt with the same group priority as the interrupt being handled does not preempt the handler,

If multiple pending interrupts have the same group priority, the subpriority field determines the order in which they are processed. If multiple pending interrupts have the same group priority and subpriority, the interrupt with the lowest IRQ number is processed first.

For information about splitting the interrupt priority fields into group priority and subpriority, see *Application interrupt and reset control register (AIRCR) on page 228*.



PM0214 Rev 10 41/262

2.3.7 **Exception entry and return**

Descriptions of exception handling use the following terms:

Preemption

When the processor is executing an exception handler, an exception can preempt the exception handler if its priority is higher than the priority of the exception being handled. See Section 2.3.6: Interrupt priority grouping for more information about preemption by an interrupt.

When one exception preempts another, the exceptions are called nested exceptions. See Exception entry on page 42 more information.

Return

This occurs when the exception handler is completed, and:

- There is no pending exception with sufficient priority to be serviced
- The completed exception handler was not handling a late-arriving exception.

The processor pops the stack and restores the processor state to the state it had before the interrupt occurred. See Exception return on page 44 for more information.

Tail-chaining This mechanism speeds up exception servicing. On completion of an exception handler, if there is a pending exception that meets the requirements for exception entry, the stack pop is skipped and control transfers to the new exception handler.

Late-arriving This mechanism speeds up preemption. If a higher priority exception occurs during state saving for a previous exception, the processor switches to handle the higher priority exception and initiates the vector fetch for that exception. State saving is not affected by late arrival because the state saved is the same for both exceptions. Therefore the state saving continues uninterrupted. The processor can accept a late arriving exception until the first instruction of the exception handler of the original exception enters the execute stage of the processor. On return from the exception handler of the late-arriving exception, the normal tail-chaining rules apply.

Exception entry

Exception entry occurs when there is a pending exception with sufficient priority and either:

- The processor is in Thread mode
- The new exception is of higher priority than the exception being handled, in which case the new exception preempts the original exception.

When one exception preempts another, the exceptions are nested.

Sufficient priority means the exception has more priority than any limits set by the mask registers. For more information see Exception mask registers on page 23. An exception with less priority than this is pending but is not handled by the processor.

When the processor takes an exception, unless the exception is a tail-chained or a latearriving exception, the processor pushes information onto the current stack. This operation is referred as stacking and the structure of eight data words is referred as stack frame.

When using floating-point routines, the Cortex-M4 processor automatically stacks the architected floating-point state on exception entry. Figure 12 on page 43 shows the Cortex-M4 stack frame layout when floating-point state is preserved on the stack as the result of an interrupt or an exception. Where stack space for floating-point state is not allocated, the



stack frame is the same as that of Armv7-M implementations without an FPU. *Figure 12 on page 43* also shows this stack frame.

Pre-IRQ top of stack {aligner} **FPSCR** S15 S14 S13 S12 S11 S10 S9 S8 S7 S6 S5 S4 S3 S2 S1 Pre-IRQ top of stack S0 {aligner} *x*PSR Decreasing **xPSR** memory PC PC address LR LR R12 R12 R3 R3 R2 R2 R1 R1 R0 R0 IRQ top of stack IRQ top of stack Exception frame with Exception frame without floating-point storage floating-point storage MS30019V1

Figure 12. Cortex-M4 stack frame layout

Immediately after stacking, the stack pointer indicates the lowest address in the stack frame. The alignment of the stack frame is controlled via the STKALIGN bit of the Configuration Control Register (CCR).

The stack frame includes the return address. This is the address of the next instruction in the interrupted program. This value is restored to the PC at exception return so that the interrupted program resumes.

In parallel to the stacking operation, the processor performs a vector fetch that reads the exception handler start address from the vector table. When stacking is complete, the processor starts executing the exception handler. At the same time, the processor writes an EXC_RETURN value to the LR. This indicates which stack pointer corresponds to the stack frame and what operation mode the was processor was in before the entry occurred.

If no higher priority exception occurs during exception entry, the processor starts executing the exception handler and automatically changes the status of the corresponding pending interrupt to active.

If another higher priority exception occurs during exception entry, the processor starts executing the exception handler for this exception and does not change the pending status of the earlier exception. This is the late arrival case.



PM0214 Rev 10 43/262

Exception return

Exception return occurs when the processor is in Handler mode and executes one of the following instructions to load the EXC RETURN value into the PC:

- an LDM or POP instruction that loads the PC
- an LDR instruction with PC as the destination
- a BX instruction using any register.

EXC_RETURN is the value loaded into the LR on exception entry. The exception mechanism relies on this value to detect when the processor has completed an exception handler. The lowest five bits of this value provide information on the return stack and processor mode. *Table 18* shows the EXC_RETURN values with a description of the exception return behavior.

All EXC_RETURN values have bits[31:5] set to one. When this value is loaded into the PC it indicates to the processor that the exception is complete, and the processor initiates the appropriate exception return sequence.

| EXC_RETURN[31:0] | Description |
|------------------|--|
| 0xFFFFFF1 | Return to Handler mode, exception return uses non-floating-point state from the MSP and execution uses MSP after return. |
| 0xFFFFFF9 | Return to Thread mode, exception return uses non-floating-point state from MSP and execution uses MSP after return. |
| 0xFFFFFFD | Return to Thread mode, exception return uses non-floating-point state from the PSP and execution uses PSP after return. |
| 0xFFFFFE1 | Return to Handler mode, exception return uses floating-point-state from MSP and execution uses MSP after return. |
| 0xFFFFFE9 | Return to Thread mode, exception return uses floating-point state from MSP and execution uses MSP after return. |
| 0xFFFFFED | Return to Thread mode, exception return uses floating-point state from PSP and execution uses PSP after return. |

Table 18. Exception return behavior

2.4 Fault handling

Faults are a subset of the exceptions. For more information, see *Exception model on page 37*. The following elements generate a fault:

- A bus error on:
 - An instruction fetch or vector table load
 - A data access
- An internally-detected error such as an undefined instruction
- Attempting to execute an instruction from a memory region marked as *Non-Executable* (XN).
- A privilege violation or an attempt to access an unmanaged region causing an MPU fault.



2.4.1 Fault types

Table 19 shows the types of fault, the handler used for the fault, the corresponding fault status register, and the register bit that indicates that the fault has occurred. See Configurable fault status register (CFSR; UFSR+BFSR+MMFSR) on page 237 for more information about the fault status registers.

Table 19. Faults

| Fault | Handler | Bit name | Fault status register |
|---|-------------|-------------------------|---|
| Bus error on a vector read | Hard fault | VECTTBL | Hard fault status register |
| Fault escalated to a hard fault | Haiù iauit | FORCED | (HFSR) on page 241 |
| MPU or default memory map mismatch: | | - | |
| - on instruction access | | IACCVIOL ⁽¹⁾ | |
| - on data access | MamManaga | DACCVIOL | Memory management fault |
| - during exception stacking | MemManage | MSTKERR | address register (MMFAR) on page 242 |
| - during exception unstacking | | MUNSKERR | |
| during lazy floating-point state preservation | | MLSPERR | |
| Bus error: | - | | - |
| During exception stacking | | STKERR | |
| During exception unstacking | | UNSTKERR | |
| During instruction prefetch | Bus fault | IBUSERR | Bus fault address register |
| During lazy floating-point state preservation | | LSPERR | (BFAR) on page 242 |
| Precise data bus error | | PRECISERR | |
| Imprecise data bus error | | IMPRECISERR | |
| Attempt to access a coprocessor | | NOCP | |
| Undefined instruction | | UNDEFINSTR | |
| Attempt to enter an invalid instruction set state (2) | Usage fault | INVSTATE | Configurable fault status register (CFSR; UFSR+BFSR+MMFSR) on |
| Invalid EXC_RETURN value | | INVPC | page 237 |
| Illegal unaligned load or store | | UNALIGNED | |
| Divide By 0 | | DIVBYZERO | |

^{1.} Occurs on an access to an XN region even if the MPU is disabled.



PM0214 Rev 10 45/262

Attempting to use an instruction set other than the Thumb instruction set, or returns to a non load/storemultiple instruction with ICI continuation.

2.4.2 Fault escalation and hard faults

All faults exceptions except for hard fault have configurable exception priority, as described in *System handler priority registers (SHPRx)* on page 233. Software can disable execution of the handlers for these faults, as described in *System handler control and state register (SHCSR)* on page 235.

Usually, the exception priority, together with the values of the exception mask registers, determines whether the processor enters the fault handler, and whether a fault handler can preempt another fault handler, as described in Section 2.3: Exception model on page 37.

In some situations, a fault with configurable priority is treated as a hard fault. This is called *priority escalation*, and the fault is described as *escalated to hard fault*. Escalation to hard fault occurs when:

- A fault handler causes the same kind of fault as the one it is servicing. This escalation
 to hard fault occurs when a fault handler cannot preempt itself because it must have
 the same priority as the current priority level.
- A fault handler causes a fault with the same or lower priority as the fault it is servicing.
 This is because the handler for the new fault cannot preempt the currently executing fault handler.
- An exception handler causes a fault for which the priority is the same as or lower than the currently executing exception.
- A fault occurs and the handler for that fault is not enabled.

If a bus fault occurs during a stack push when entering a bus fault handler, the bus fault does not escalate to a hard fault. This means that if a corrupted stack causes a fault, the fault handler executes even though the stack push for the handler failed. The fault handler operates but the stack contents are corrupted.

Only Reset and NMI can preempt the fixed priority hard fault. A hard fault can preempt any exception other than Reset, NMI, or another hard fault.

2.4.3 Fault status registers and fault address registers

The fault status registers indicate the cause of a fault. For bus faults and memory management faults, the fault address register indicates the address accessed by the operation that caused the fault, as shown in *Table 20*.

| Handler | Status register name | Address register name | Register description |
|-------------------------|----------------------|-----------------------|---|
| Hard fault | HFSR | - | Hard fault status register (HFSR) on page 241 |
| Memory management fault | MMFSR | MMFAR | Memory management fault address register (MMFAR) on page 242 |
| Bus fault | BFSR | BFAR | Bus fault address register (BFAR) on page 242 |
| Usage fault | UFSR | - | Configurable fault status register (CFSR; UFSR+BFSR+MMFSR) on page 237 |

Table 20. Fault status and fault address registers

2.4.4 Lockup

The processor enters a lockup state if a hard fault occurs when executing the NMI or hard fault handlers. When the processor is in lockup state it does not execute any instructions. The processor remains in lockup state until either:

- It is reset
- An NMI occurs
- It is halted by a debugger

If lockup state occurs from the NMI handler a subsequent NMI does not cause the processor to leave lockup state.

2.5 Power management

The STM32 and Cortex-M4 processor sleep modes reduce power consumption:

- Sleep mode stops the processor clock. All other system and peripheral clocks may still be running.
- Deep sleep mode stops most of the STM32 system and peripheral clocks. At product level, this corresponds to either the Stop or the Standby mode. For more details, please refer to the "Power modes" Section in the STM32 reference manual.

The SLEEPDEEP bit of the SCR selects which sleep mode is used, as described in *System control register (SCR) on page 230*. For more information about the behavior of the sleep modes see the STM32 product reference manual.

This section describes the mechanisms for entering sleep mode, and the conditions for waking up from sleep mode.



PM0214 Rev 10 47/262

2.5.1 Entering sleep mode

This section describes the mechanisms software can use to put the processor into sleep mode.

The system can generate spurious wakeup events, for example a debug operation that wakes up the processor. Therefore software must be able to put the processor back into sleep mode after such an event. A program might have an idle loop to put the processor back to sleep mode.

Wait for interrupt

The wait for interrupt instruction, WFI, causes immediate entry to sleep mode (unless the wake-up condition is true, as shown in Wakeup from WFI or sleep-on-exit on page 48). When the processor executes a WFI instruction, it stops executing instructions and enters sleep mode. See WFI on page 192 for more information.

Wait for event

The *wait for event* instruction, WFE, causes entry to sleep mode depending on the value of a one-bit event register. When the processor executes a WFE instruction, it checks the value of the event register:

- 0: the processor stops executing instructions and enters sleep mode
- 1: the processor clears the register to 0 and continues executing instructions without entering sleep mode.

See WFE on page 191 for more information.

If the event register is 1, this indicates that the processor must not enter sleep mode on execution of a WFE instruction. Typically, this is because an external event signal is asserted, or a processor in the system has executed an SEV instruction, as shown in *SEV* on page 189. Software cannot access this register directly.

Sleep-on-exit

If the SLEEPONEXIT bit of the SCR is set to 1, when the processor completes the execution of an exception handler, it returns to Thread mode and immediately enters sleep mode. Use this mechanism in applications that only require the processor to run when an exception occurs.

2.5.2 Wakeup from sleep mode

The conditions for the processor to wakeup depend on the mechanism that caused it to enter sleep mode.

Wakeup from WFI or sleep-on-exit

Normally, the processor wakes up only when it detects an exception with sufficient priority to cause exception entry.

Some embedded systems might have to execute system restore tasks after the processor wakes up, and before it executes an interrupt handler. To achieve this set the PRIMASK bit to 1 and the FAULTMASK bit to 0. If an interrupt arrives that is enabled and has a higher priority than current exception priority, the processor wakes up but does not execute the interrupt handler until the processor sets PRIMASK to zero. For more information about PRIMASK and FAULTMASK see *Exception mask registers on page 23*.



Wakeup from WFE

The processor wakes up if:

- it detects an exception with sufficient priority to cause exception entry
- it detects an external event signal, see Section 2.5.3: External event input / extended interrupt and event input
- in a multiprocessor system, another processor in the system executes an SEV instruction.

In addition, if the SEVONPEND bit in the SCR is set to 1, any new pending interrupt triggers an event and wakes up the processor, even if the interrupt is disabled or has insufficient priority to cause exception entry. For more information about the SCR see *System control register (SCR) on page 230*.

2.5.3 External event input / extended interrupt and event input

The processor provides an external event input signal.

This signal is generated by the External or Extended Interrupt/event Controller (EXTI) on asynchronous event detection (from external input pins or asynchronous peripheral event).

This signal can wakeup the processor from WFE, or set the internal WFE event register to one to indicate that the processor must not enter sleep mode on a later WFE instruction, as described in *Wait for event on page 48*. Fore more details please refer to the STM32 reference manual, Low power modes section.

2.5.4 Power management programming hints

ISO/IEC C cannot directly generate the WFI and WFE instructions. The CMSIS provides the following functions for these instructions:

```
void __WFE(void) // Wait for Event
void WFI(void) // Wait for Interrupt
```



PM0214 Rev 10 49/262

3 The STM32 Cortex-M4 instruction set

This chapter is the reference material for the Cortex-M4 instruction set description in a User Guide. The following sections give general information:

Section 3.1: Instruction set summary on page 50

Section 3.2: CMSIS intrinsic functions on page 58

Section 3.3: About the instruction descriptions on page 60

Each of the following sections describes a functional group of Cortex-M4 instructions. Together they describe all the instructions supported by the Cortex-M4 processor:

Section 3.4: Memory access instructions on page 69

Section 3.5: General data processing instructions on page 81

Section 3.6: Multiply and divide instructions on page 109

Section 3.7: Saturating instructions on page 125

Section 3.8: Packing and unpacking instructions on page 134

Section 3.9: Bitfield instructions on page 138

Section 3.10: Floating-point instructions on page 149

Section 3.11: Miscellaneous instructions on page 180

3.1 Instruction set summary

The processor implements a version of the thumb instruction set. *Table 21* lists the supported instructions.

In Table 21:

- Angle brackets, <>, enclose alternative forms of the operand.
- Braces, {}, enclose optional operands.
- The operands column is not exhaustive.
- Op2 is a flexible second operand that can be either a register or a constant.
- Most instructions can use an optional condition code suffix.

For more information on the instructions and operands, see the instruction descriptions.

Mnemonic Operands Brief description Flags Page ADC. ADCS {Rd,} Rn, Op2 N,Z,C,V 3.5.1 on page 83 Add with carry ADD, ADDS {Rd,} Rn, Op2 Add N,Z,C,V 3.5.1 on page 83 N.Z.C.V ADD, ADDW {Rd,} Rn, #imm12 Add 3.5.1 on page 83 **ADR** Rd, label Load PC-relative address 3.4.1 on page 70

Table 21. Cortex-M4 instructions



Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|-----------------|-------------------------|--|---------|--------------------|
| AND, ANDS | {Rd,} Rn, Op2 | Logical AND | N,Z,C | 3.5.2 on page 85 |
| ASR, ASRS | Rd, Rm, <rs #n></rs #n> | Arithmetic shift right | N,Z,C | 3.5.3 on page 86 |
| В | label | Branch | _ | 3.9.5 on page 142 |
| BFC | Rd, #Isb, #width | Bit field clear | - | 3.9.1 on page 139 |
| BFI | Rd, Rn, #Isb, #width | Bit field insert | _ | 3.9.1 on page 139 |
| BIC, BICS | {Rd,} Rn, Op2 | Bit clear | N,Z,C | 3.5.2 on page 85 |
| BKPT | #imm | Breakpoint | _ | 3.11.1 on page 181 |
| BL | label | Branch with link | _ | 3.9.5 on page 142 |
| BLX | Rm | Branch indirect with link | _ | 3.9.5 on page 142 |
| ВХ | Rm | Branch indirect | _ | 3.9.5 on page 142 |
| CBNZ | Rn, label | Compare and branch if non zero | _ | 3.9.6 on page 144 |
| CBZ | Rn, label | Compare and branch if zero | _ | 3.9.6 on page 144 |
| CLREX | _ | Clear exclusive | _ | 3.4.9 on page 80 |
| CLZ | Rd, Rm | Count leading zeros | _ | 3.5.4 on page 87 |
| CMN | Rn, Op2 | Compare negative | N,Z,C,V | 3.5.5 on page 88 |
| CMP | Rn, Op2 | Compare | N,Z,C,V | 3.5.5 on page 88 |
| CPSID | iflags | Change processor state, disable interrupts | _ | 3.11.2 on page 182 |
| CPSIE | iflags | Change processor state, enable interrupts | _ | 3.11.2 on page 182 |
| DMB | _ | Data memory barrier | _ | 3.11.4 on page 184 |
| DSB | _ | Data synchronization barrier | _ | 3.11.4 on page 184 |
| EOR, EORS | {Rd,} Rn, Op2 | Exclusive OR | N,Z,C | 3.5.2 on page 85 |
| ISB | _ | Instruction synchronization barrier | _ | 3.11.5 on page 185 |
| IT | _ | If-then condition block | _ | 3.9.7 on page 145 |
| LDM | Rn{!}, reglist | Load multiple registers, increment after | | 3.4.6 on page 76 |
| LDMDB, LDMEA | Rn{!}, reglist | Load multiple registers, decrement before | _ | 3.4.6 on page 76 |
| LDMFD, LDMIA | Rn{!}, reglist | Load multiple registers, increment after | _ | 3.4.6 on page 76 |
| LDR | Rt, [Rn, #offset] | Load register with word | _ | 3.4 on page 69 |
| LDRB, LDRBT | Rt, [Rn, #offset] | Load register with byte | _ | 3.4 on page 69 |
| LDRD | Rt, Rt2, [Rn, #offset] | Load register with two bytes | _ | 3.4.2 on page 71 |
| LDREX | Rt, [Rn, #offset] | Load register exclusive | _ | 3.4.8 on page 79 |
| | | | | |



PM0214 Rev 10 51/262

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|------------------|-------------------------|--|---------|--------------------|
| LDREXB | Rt, [Rn] | Load register exclusive with byte | _ | 3.4.8 on page 79 |
| LDREXH | Rt, [Rn] | Load register exclusive with halfword | _ | 3.4.8 on page 79 |
| LDRH, LDRHT | Rt, [Rn, #offset] | Load register with halfword | _ | 3.4 on page 69 |
| LDRSB, LDRSBT | Rt, [Rn, #offset] | Load register with signed byte | _ | 3.4 on page 69 |
| LDRSH, LDRSHT | Rt, [Rn, #offset] | Load register with signed halfword | _ | 3.4 on page 69 |
| LDRT | Rt, [Rn, #offset] | Load register with word | _ | 3.4 on page 69 |
| LSL, LSLS | Rd, Rm, <rs #n></rs #n> | Logical shift left | N,Z,C | 3.5.3 on page 86 |
| LSR, LSRS | Rd, Rm, <rs #n></rs #n> | Logical shift right | N,Z,C | 3.5.3 on page 86 |
| MLA | Rd, Rn, Rm, Ra | Multiply with accumulate, 32-bit result | _ | 3.6.1 on page 110 |
| MLS | Rd, Rn, Rm, Ra | Multiply and subtract, 32-bit result | _ | 3.6.1 on page 110 |
| MOV, MOVS | Rd, Op2 | Move | N,Z,C | 3.5.6 on page 89 |
| MOVT | Rd, #imm16 | Move top | _ | 3.5.7 on page 91 |
| MOVW, MOV | Rd, #imm16 | Move 16-bit constant | N,Z,C | 3.5.6 on page 89 |
| MRS | Rd, spec_reg | Move from special register to general register | _ | 3.11.6 on page 186 |
| MSR | spec_reg, Rm | Move from general register to special register | N,Z,C,V | 3.11.7 on page 187 |
| MUL, MULS | {Rd,} Rn, Rm | Multiply, 32-bit result | N,Z | 3.6.1 on page 110 |
| MVN, MVNS | Rd, Op2 | Move NOT | N,Z,C | 3.5.6 on page 89 |
| NOP | _ | No operation | _ | 3.11.8 on page 188 |
| ORN, ORNS | {Rd,} Rn, Op2 | Logical OR NOT | N,Z,C | 3.5.2 on page 85 |
| ORR, ORRS | {Rd,} Rn, Op2 | Logical OR | N,Z,C | 3.5.2 on page 85 |
| PKHTB, PKHBT | {Rd,} Rn, Rm, Op2 | Pack Halfword | - | 3.8.1 on page 135 |
| POP | reglist | Pop registers from stack | _ | 3.4.7 on page 78 |
| PUSH | reglist | Push registers onto stack | _ | 3.4.7 on page 78 |
| QADD | {Rd,} Rn, Rm | Saturating double and add | - | 3.7.3 on page 128 |
| QADD16 | {Rd,} Rn, Rm | Saturating add 16 | - | 3.7.3 on page 128 |
| QADD8 | {Rd,} Rn, Rm | Saturating add 8 | - | 3.7.3 on page 128 |
| QASX | {Rd,} Rn, Rm | Saturating add and subtract with exchange | - | 3.7.4 on page 129 |

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|---|-------------------------|---|---------|--------------------|
| QDADD | {Rd,} Rn, Rm | Saturating add | - | 3.7.5 on page 130 |
| QDSUB | {Rd,} Rn, Rm | Saturating double and subtract | - | 3.7.5 on page 130 |
| QSAX | {Rd,} Rn, Rm | Saturating subtract and add with exchange | - | 3.7.4 on page 129 |
| QSUB | {Rd,} Rn, Rm | Saturating subtract | - | 3.7.3 on page 128 |
| QSUB16 | {Rd,} Rn, Rm | Saturating subtract 16 | - | 3.7.4 on page 129 |
| QSUB8 | {Rd,} Rn, Rm | Saturating subtract 8 | - | 3.7.4 on page 129 |
| RBIT | Rd, Rn | Reverse bits | _ | 3.7.4 on page 129 |
| REV | Rd, Rn | Reverse byte order in a word | _ | 3.5.8 on page 92 |
| REV16 | Rd, Rn | Reverse byte order in each halfword | _ | 3.5.8 on page 92 |
| REVSH | Rd, Rn | Reverse byte order in bottom halfword and sign extend | _ | 3.5.8 on page 92 |
| ROR, RORS | Rd, Rm, <rs #n></rs #n> | Rotate right | N,Z,C | 3.5.3 on page 86 |
| RRX, RRXS | Rd, Rm | Rotate right with extend | N,Z,C | 3.5.3 on page 86 |
| RSB, RSBS | {Rd,} Rn, Op2 | Reverse subtract | N,Z,C,V | 3.5.1 on page 83 |
| SADD16 | {Rd,} Rn, Rm | Signed add 16 | - | 3.5.9 on page 93 |
| SADD8 | {Rd,} Rn, Rm | Signed add 8 | - | 3.5.9 on page 93 |
| SASX | {Rd,} Rn, Rm | Signed add and subtract with exchange | - | 3.5.14 on page 98 |
| SBC, SBCS | {Rd,} Rn, Op2 | Subtract with carry | N,Z,C,V | 3.5.1 on page 83 |
| SBFX | Rd, Rn, #lsb, #width | Signed bit field extract | _ | 3.9.2 on page 140 |
| SDIV | {Rd,} Rn, Rm | Signed divide | _ | 3.6.3 on page 112 |
| SEV | _ | Send event | _ | 3.11.9 on page 189 |
| SHADD16 | {Rd,} Rn, Rm | Signed halving add 16 | _ | 3.5.10 on page 94 |
| SHADD8 | {Rd,} Rn, Rm | Signed halving add 8 | _ | 3.5.10 on page 94 |
| SHASX | {Rd,} Rn, Rm | Signed halving add and subtract with exchange | _ | 3.5.11 on page 95 |
| SHSAX | {Rd,} Rn, Rm | Signed halving subtract and add with exchange | _ | 3.5.11 on page 95 |
| SHSUB16 | {Rd,} Rn, Rm | Signed halving subtract 16 | _ | 3.5.12 on page 96 |
| SHSUB8 | {Rd,} Rn, Rm | Signed halving subtract 8 | _ | 3.5.12 on page 96 |
| SMLABB, SMLABT, SMLATB, SMLATT | Rd, Rn, Rm, Ra | Signed multiply accumulate long (halfwords) | Q | 3.6.3 on page 112 |
| SMLAD, SMLADX | Rd, Rn, Rm, Ra | Signed multiply accumulate dual | Q | 3.6.4 on page 114 |



PM0214 Rev 10 53/262

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|---|------------------------|---|-------|--------------------|
| SMLAL | RdLo, RdHi, Rn, Rm | Signed multiply with accumulate (32 x 32 + 64), 64-bit result | _ | 3.6.2 on page 111 |
| SMLALBB, SMLALBT, SMLALTB, SMLALTT | RdLo, RdHi, Rn, Rm | Signed multiply accumulate long, halfwords | _ | 3.6.5 on page 115 |
| SMLALD, SMLALDX | RdLo, RdHi, Rn, Rm | Signed multiply accumulate long dual | _ | 3.6.5 on page 115 |
| SMLAWB, SMLAWT | Rd, Rn, Rm, Ra | Signed multiply accumulate, word by halfword | Q | 3.6.3 on page 112 |
| SMLSD | Rd, Rn, Rm, Ra | Signed multiply subtract dual | Q | 3.6.6 on page 117 |
| SMLSLD | RdLo, RdHi, Rn, Rm | Signed multiply subtract long dual | _ | 3.6.6 on page 117 |
| SMMLA | Rd, Rn, Rm, Ra | Signed most significant word multiply accumulate | _ | 3.6.7 on page 119 |
| SMMLS, SMMLR | Rd, Rn, Rm, Ra | Signed most significant word multiply subtract | _ | 3.6.7 on page 119 |
| SMMUL, SMMULR | {Rd,} Rn, Rm | Signed most significant word multiply | _ | 3.6.8 on page 120 |
| SMUAD | {Rd,} Rn, Rm | Signed dual multiply add | Q | 3.6.9 on page 121 |
| SMULBB, SMULBT SMULTB, SMULTT | {Rd,} Rn, Rm | Signed multiply (halfwords) | _ | 3.6.10 on page 122 |
| SMULL | RdLo, RdHi, Rn, Rm | Signed multiply (32 x 32), 64-bit result | _ | 3.6.2 on page 111 |
| SSAT | Rd, #n, Rm {,shift #s} | Signed saturate | Q | 3.7.1 on page 126 |
| SSAT16 | Rd, #n, Rm | Signed saturate 16 | Q | 3.7.2 on page 127 |
| SSAX | {Rd,} Rn, Rm | Signed subtract and add with exchange | GE | 3.5.14 on page 98 |
| SSUB16 | {Rd,} Rn, Rm | Signed subtract 16 | _ | 3.5.13 on page 97 |
| SSUB8 | {Rd,} Rn, Rm | Signed subtract 8 | _ | 3.5.13 on page 97 |
| STM | Rn{!}, reglist | Store multiple registers, increment after | _ | 3.4.6 on page 76 |
| STMDB, STMEA | Rn{!}, reglist | Store multiple registers, decrement before | _ | 3.4.6 on page 76 |
| STMFD, STMIA | Rn{!}, reglist | Store multiple registers, increment after | _ | 3.4.6 on page 76 |
| STR | Rt, [Rn, #offset] | Store register word | _ | 3.4 on page 69 |
| STRB, STRBT | Rt, [Rn, #offset] | Store register byte | _ | 3.4 on page 69 |

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|----------------|------------------------|---|---------|------------------------|
| STRD | Rt, Rt2, [Rn, #offset] | Store register two words | _ | 3.4.2 on page 71 |
| STREX | Rd, Rt, [Rn, #offset] | Store register exclusive | _ | 3.4.8 on page 79 |
| STREXB | Rd, Rt, [Rn] | Store register exclusive byte | _ | 3.4.8 on page 79 |
| STREXH | Rd, Rt, [Rn] | Store register exclusive halfword | _ | 3.4.8 on page 79 |
| STRH, STRHT | Rt, [Rn, #offset] | Store register halfword | _ | 3.4 on page 69 |
| STRT | Rt, [Rn, #offset] | Store register word | _ | 3.4 on page 69 |
| SUB, SUBS | {Rd,} Rn, Op2 | Subtract | N,Z,C,V | 3.5.1 on page 83 |
| SUB, SUBW | {Rd,} Rn, #imm12 | Subtract | N,Z,C,V | 3.5.1 on page 83 |
| SVC | #imm | Supervisor call | _ | 3.11.10 on page 190 |
| SXTAB | {Rd,} Rn, Rm,{,ROR #} | Extend 8 bits to 32 and add | _ | 3.8.3 on page 137 |
| SXTAB16 | {Rd,} Rn, Rm,{,ROR #} | Dual extend 8 bits to 16 and add | _ | 3.8.3 on page 137 |
| SXTAH | {Rd,} Rn, Rm,{,ROR #} | Extend 16 bits to 32 and add | _ | 3.8.3 on page 137 |
| SXTB16 | {Rd,} Rm {,ROR #n} | Signed extend byte 16 | _ | 3.8.2 on page 136 |
| SXTB | {Rd,} Rm {,ROR #n} | Sign extend a byte | _ | 3.9.3 on page 141 |
| SXTH | {Rd,} Rm {,ROR #n} | Sign extend a halfword | _ | 3.9.3 on page 141 |
| ТВВ | [Rn, Rm] | Table branch byte | _ | 3.9.8 on page 147 |
| ТВН | [Rn, Rm, LSL #1] | Table branch halfword | _ | 3.9.8 on page 147 |
| TEQ | Rn, Op2 | Test equivalence | N,Z,C | 3.5.9 on page 93 |
| TST | Rn, Op2 | Test | N,Z,C | 3.5.9 on page 93 |
| UADD16 | {Rd,} Rn, Rm | Unsigned add 16 | GE | 3.5.16 on page 100 |
| UADD8 | {Rd,} Rn, Rm | Unsigned add 8 | GE | 3.5.16 on page 100 |
| USAX | {Rd,} Rn, Rm | Unsigned subtract and add with exchange | GE | 3.5.17 on page 101 |
| UHADD16 | {Rd,} Rn, Rm | Unsigned halving add 16 | _ | 3.5.18 on page 102 |
| UHADD8 | {Rd,} Rn, Rm | Unsigned halving add 8 | _ | 3.5.18 on page 102 |
| UHASX | {Rd,} Rn, Rm | Unsigned halving add and subtract with exchange | _ | 3.5.19 on page 103 |
| UHSAX | {Rd,} Rn, Rm | Unsigned halving subtract and add with exchange | _ | 3.5.19 on page 103 |
| UHSUB16 | {Rd,} Rn, Rm | Unsigned halving subtract 16 | _ | 3.5.20 on page 104 |
| UHSUB8 | {Rd,} Rn, Rm | Unsigned halving subtract 8 | _ | 3.5.20 on page 104 |
| UBFX | Rd, Rn, #Isb, #width | Unsigned bit field extract | _ | 3.9.2 on page 140 |



PM0214 Rev 10 55/262

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|----------|------------------------|--|-------|--------------------|
| UDIV | {Rd,} Rn, Rm | Unsigned divide | _ | 3.6.3 on page 112 |
| UMAAL | RdLo, RdHi, Rn, Rm | Unsigned multiply accumulate accumulate long (32 x 32 + 32 +32), 64-bit result | _ | 3.6.2 on page 111 |
| UMLAL | RdLo, RdHi, Rn, Rm | Unsigned multiply with accumulate (32 x 32 + 64), 64-bit result | _ | 3.6.2 on page 111 |
| UMULL | RdLo, RdHi, Rn, Rm | Unsigned multiply (32 x 32), 64-bit result | _ | 3.6.2 on page 111 |
| UQADD16 | {Rd,} Rn, Rm | Unsigned saturating add 16 | _ | 3.7.7 on page 132 |
| UQADD8 | {Rd,} Rn, Rm | Unsigned saturating add 8 | _ | 3.7.7 on page 132 |
| UQASX | {Rd,} Rn, Rm | Unsigned saturating add and subtract with exchange | _ | 3.7.6 on page 131 |
| UQSAX | {Rd,} Rn, Rm | Unsigned saturating subtract and add with exchange | _ | 3.7.6 on page 131 |
| UQSUB16 | {Rd,} Rn, Rm | Unsigned saturating subtract 16 | _ | 3.7.7 on page 132 |
| UQSUB8 | {Rd,} Rn, Rm | Unsigned saturating subtract 8 | _ | 3.7.7 on page 132 |
| USAD8 | {Rd,} Rn, Rm | Unsigned sum of absolute differences | _ | 3.5.22 on page 106 |
| USADA8 | {Rd,} Rn, Rm, Ra | Unsigned sum of absolute differences and accumulate | _ | 3.5.23 on page 107 |
| USAT | Rd, #n, Rm {,shift #s} | Unsigned saturate | Q | 3.7.1 on page 126 |
| USAT16 | Rd, #n, Rm | Unsigned saturate 16 | Q | 3.7.2 on page 127 |
| UASX | {Rd,} Rn, Rm | Unsigned add and subtract with exchange | GE | 3.5.17 on page 101 |
| USUB16 | {Rd,} Rn, Rm | Unsigned subtract 16 | GE | 3.5.24 on page 108 |
| USUB8 | {Rd,} Rn, Rm | Unsigned subtract 8 | GE | 3.5.24 on page 108 |
| UXTAB | {Rd,} Rn, Rm,{,ROR #} | Rotate, extend 8 bits to 32 and add | _ | 3.8.3 on page 137 |
| UXTAB16 | {Rd,} Rn, Rm,{,ROR #} | Rotate, dual extend 8 bits to 16 and add | _ | 3.8.3 on page 137 |
| UXTAH | {Rd,} Rn, Rm,{,ROR #} | Rotate, unsigned extend and add halfword | _ | 3.8.3 on page 137 |
| UXTB | {Rd,} Rm {,ROR #n} | Zero extend a byte | _ | 3.8.2 on page 136 |
| UXTB16 | {Rd,} Rm {,ROR #n} | Unsigned extend byte 16 | _ | 3.8.2 on page 136 |
| UXTH | {Rd,} Rm {,ROR #n} | Zero extend a halfword | _ | 3.8.2 on page 136 |
| VABS.F32 | Sd, Sm | Floating-point absolute | | 3.10.1 on page 151 |
| VADD.F32 | {Sd,} Sn, Sm | Floating-point add | _ | 3.10.2 on page 152 |

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|-------------------------------------|----------------------------|--|---|------------------------|
| VCMP.F32 | Sd, <sm #0.0="" =""></sm> | Compare two floating-point registers, or one floating-point register and zero | FPSCR | 3.10.3 on page 153 |
| VCMPE.F32 | Sd, <sm #0.0="" =""></sm> | Compare two floating-point registers, or one floating-point register and zero with Invalid Operation check | registers, or one floating-point register and zero with Invalid | |
| VCVT.S32.F 32 | Sd, Sm | Convert between floating-point and integer | _ | 3.10.4 on page 154 |
| VCVT.S16.F 32 | Sd, Sd, #fbits | Convert between floating-point and fixed point | _ | 3.10.4 on page 154 |
| VCVTR.S32. F32 | Sd, Sm | Convert between floating-point and integer with rounding | _ | 3.10.4 on page 154 |
| VCVT <b h>. F32.F16</b h> | Sd, Sm | Converts half-precision value to single-precision | _ | 3.10.5 on page 155 |
| VCVTT <b t >.F32.F16</b t | Sd, Sm | Converts single-precision register to half-precision | _ | 3.10.6 on page 156 |
| VDIV.F32 | {Sd,} Sn, Sm | Floating-point divide | _ | 3.10.7 on page 157 |
| VFMA.F32 | {Sd,} Sn, Sm | Floating-point fused multiply accumulate | _ | 3.10.8 on page 158 |
| VFNMA.F32 | {Sd,} Sn, Sm | Floating-point fused negate multiply accumulate | _ | 3.10.9 on page 159 |
| VFMS.F32 | {Sd,} Sn, Sm | Floating-point fused multiply subtract | _ | 3.10.8 on page 158 |
| VFNMS.F32 | {Sd,} Sn, Sm | Floating-point fused negate multiply subtract | _ | 3.10.9 on page 159 |
| VLDM.F<32 64> | Rn{!}, list | Load multiple extension registers | _ | 3.10.10 on page 160 |
| VLDR.F<32 64> | <dd sd>, [Rn]</dd sd> | Load an extension register from memory | _ | 3.10.11 on page 161 |
| VLMA.F32 | {Sd,} Sn, Sm | Floating-point multiply accumulate | _ | 3.10.12 on page 162 |
| VLMS.F32 | {Sd,} Sn, Sm | Floating-point multiply subtract | _ | 3.10.12 on page 162 |
| VMOV.F32 | Sd, #imm | Floating-point move immediate | _ | 3.10.13 on page 163 |
| VMOV | Sd, Sm | Floating-point move register | _ | 3.10.14 on page 164 |
| VMOV | Sn, Rt | Copy Arm core register to single precision | _ | 3.10.18 on page 168 |
| VMOV | Sm, Sm1, Rt, Rt2 | Copy 2 Arm core registers to 2 single precision | _ | 3.10.17 on page 167 |



PM0214 Rev 10 57/262

Table 21. Cortex-M4 instructions (continued)

| Mnemonic | Operands | Brief description | Flags | Page |
|-----------|--------------|---|-------|------------------------|
| VMOV | Dd[x], Rt | Copy Arm core register to scalar | _ | 3.10.15 on page 165 |
| VMOV | Rt, Dn[x] | Copy scalar to Arm core register | _ | 3.10.16 on page 166 |
| VMRS | Rt, FPSCR | Move FPSCR to Arm core register or APSR N,Z,C,V | | 3.10.19 on page 169 |
| VMSR | FPSCR, Rt | Move to FPSCR from Arm Core register | FPSCR | 3.10.20 on page 170 |
| VMUL.F32 | {Sd,} Sn, Sm | Floating-point multiply | _ | 3.10.21 on page 171 |
| VNEG.F32 | Sd, Sm | Floating-point negate | _ | 3.10.22 on page 172 |
| VNMLA.F32 | Sd, Sn, Sm | Floating-point multiply and add | _ | 3.10.23 on page 173 |
| VNMLS.F32 | Sd, Sn, Sm | Floating-point multiply and subtract | _ | 3.10.23 on page 173 |
| VNMUL | {Sd,} Sn, Sm | Floating-point multiply | _ | 3.10.23 on page 173 |
| VPOP | list | Pop extension registers | _ | 3.10.24 on page 174 |
| VPUSH | list | Push extension registers | _ | 3.10.25 on page 175 |
| VSQRT.F32 | Sd, Sm | Calculates floating-point square root | _ | 3.10.26 on page 176 |
| VSTM | Rn{!}, list | Floating-point register store multiple | _ | 3.10.27 on page 177 |
| WFE | _ | Wait for event | _ | 3.11.11 on page 191 |
| WFI | _ | Wait for interrupt | _ | 3.11.12 on page 192 |

3.2 CMSIS intrinsic functions

ISO/IEC C code cannot directly access some Cortex-M4 instructions. This section describes intrinsic functions that can generate these instructions, provided by the CMIS, and that might be provided by a C compiler. If a C compiler does not support an appropriate intrinsic function, you might have to use an inline assembler to access some instructions.

The CMSIS provides the intrinsic functions listed in *Table 22* to generate instructions that ANSI cannot directly access.



Table 22. CMSIS intrinsic functions to generate some Cortex-M4 instructions

| Instruction CMSIS intrinsic function | |
|--------------------------------------|-----------------------------------|
| CPSIE I | voidenable_irq(void) |
| CPSID I | voiddisable_irq(void) |
| CPSIE F | voidenable_fault_irq(void) |
| CPSID F | voiddisable_fault_irq(void) |
| ISB | voidISB(void) |
| DSB | voidDSB(void) |
| DMB | voidDMB(void) |
| REV | uint32_tREV(uint32_t int value) |
| REV16 | uint32_tREV16(uint32_t int value) |
| REVSH | uint32_tREVSH(uint32_t int value) |
| RBIT | uint32_tRBIT(uint32_t int value) |
| SEV | voidSEV(void) |
| WFE | voidWFE(void) |
| WFI | voidWFI(void) |

The CMSIS also provides a number of functions for accessing the special registers using MRS and MSR instructions (see *Table 23*).

Table 23. CMSIS intrinsic functions to access the special registers

| Special register | Access | CMSIS function | |
|------------------|--------|---------------------------------------|--|
| PRIMASK | Read | uint32_tget_PRIMASK (void) | |
| PRIMASK | Write | voidset_PRIMASK (uint32_t value) | |
| FAULTMASK | Read | uint32_tget_FAULTMASK (void) | |
| PAOLIWASK | Write | voidset_FAULTMASK (uint32_t value) | |
| BASEPRI | Read | uint32_tget_BASEPRI (void) | |
| BASEFRI | Write | voidset_BASEPRI (uint32_t value) | |
| CONTROL | Read | uint32_tget_CONTROL (void) | |
| CONTROL | Write | voidset_CONTROL (uint32_t value) | |
| MSP | Read | uint32_tget_MSP (void) | |
| IVIOF | Write | voidset_MSP (uint32_t TopOfMainStack) | |
| PSP | Read | uint32_tget_PSP (void) | |
| 1 31 | Write | voidset_PSP (uint32_t TopOfProcStack) | |



PM0214 Rev 10 59/262

3.3 About the instruction descriptions

The following sections give more information about using the instructions:

- Operands on page 60
- Restrictions when using PC or SP on page 60
- Flexible second operand on page 60
- Shift operations on page 62
- Address alignment on page 65
- PC-relative expressions on page 65
- Conditional execution on page 65
- Instruction width selection on page 68

3.3.1 **Operands**

An instruction operand can be an Arm register, a constant, or another instruction-specific parameter. Instructions act on the operands and often store the result in a destination register. When there is a destination register in the instruction, it is usually specified before the operands.

Operands in some instructions are flexible in that they can either be a register or a constant (see Flexible second operand).

3.3.2 Restrictions when using PC or SP

Many instructions have restrictions on whether you can use the program counter (PC) or stack pointer (SP) for the operands or destination register. See instruction descriptions for more information.

Bit[0] of any address written to the PC with a BX, BLX, LDM, LDR, or POP instruction must be 1 for correct execution, because this bit indicates the required instruction set, and the Cortex-M4 processor only supports thumb instructions.

3.3.3 Flexible second operand

Many general data processing instructions have a flexible second operand. This is shown as operand2 in the description of the syntax of each instruction.

Operand2 can be a:

- Constant
- Register with optional shift

PM0214 Rev 10 60/262



Constant

You specify an operand2 constant in the form #constant, where constant can be:

- Any constant that can be produced by shifting an 8-bit value left by any number of bits within a 32-bit word.
- Any constant of the form 0x00XY00XY
- Any constant of the form 0xXY00XY00
- Any constant of the form 0xXYXYXYXY

In the constants shown above, X and Y are hexadecimal digits.

In addition, in a small number of instructions, *constant* can include a wider range of values. These are described in the individual instruction descriptions.

When an operand2 constant is used with the instructions MOVS, MVNS, ANDS, ORRS, ORNS, EORS, BICS, TEQ or TST, the carry flag is updated to bit[31] of the constant, if the constant is greater than 255 and can be produced by shifting an 8-bit value. These instructions do not affect the carry flag if operand2 is any other constant.

Instruction substitution

The assembler might be able to produce an equivalent instruction if a not permitted constant is specified. For example, the instruction CMP Rd, #0xFFFFFFE might be assembled as the equivalent of instruction CMN Rd, #0x2.

Register with optional shift

An operand2 register is specified in the form *Rm* {, *shift*}, where:

- Rm is the register holding the data for the second operand
- Shift is an optional shift to be applied to Rm. It can be one of the following:

ASR #n: Arithmetic shift right n bits, $1 \le n \le 32$

LSL #n: Logical shift left n bits, $1 \le n \le 31$

LSR #n: Logical shift right n bits, $1 \le n \le 32$

ROR #n: Rotate right n bits, $1 \le n \le 31$

RRX: Rotate right one bit, with extend

—: If omitted, no shift occurs, equivalent to LSL #0

If you omit the shift, or specify LSL #0, the instruction uses the value in *Rm*.

If you specify a shift, the shift is applied to the value in Rm, and the resulting 32-bit value is used by the instruction. However, the contents in the Rm register remain unchanged. Specifying a register with shift also updates the carry flag when used with certain instructions. For information on the shift operations and how they affect the carry flag, see *Shift operations*.



PM0214 Rev 10 61/262

3.3.4 Shift operations

Register shift operations move the bits in a register left or right by a specified number of bits, the *shift length*. Register shift can be performed:

- Directly by the instructions ASR, LSR, LSL, ROR, and RRX. The result is written to a destination register.
- During the calculation of operand2 by the instructions that specify the second operand as a register with shift (see *Flexible second operand on page 60*). The result is used by the instruction.

The permitted shift lengths depend on the shift type and the instruction (see the individual instruction description or *Flexible second operand*). If the shift length is 0, no shift occurs. Register shift operations update the carry flag except when the specified shift length is 0. The following sub-sections describe the various shift operations and how they affect the carry flag. In these descriptions, *Rm* is the register containing the value to be shifted, and *n* is the shift length.

ASR

Arithmetic shift right by n bits moves the left-hand 32-n bits of the Rm register to the right by n places, into the right-hand 32-n bits of the result. And it copies the original bit[31] of the register into the left-hand n bits of the result (see *Figure 13: ASR #3 on page 62*).

You can use the ASR #n operation to divide the value in the Rm register by 2^n , with the result being rounded towards negative-infinity.

When the instruction is ASRS or when ASR #n is used in operand2 with the instructions MOVS, MVNS, ANDS, ORRS, ORNS, EORS, BICS, TEQ or TST, the carry flag is updated to the last bit shifted out, bit[*n*-1], of the *Rm* register.

Note: 1 If n is 32 or more, all the bits in the result are set to the value of bit[31] of Rm.

2 If n is 32 or more and the carry flag is updated, it is updated to the value of bit[31] of Rm.



Figure 13. ASR #3



LSR

Logical shift right by n bits moves the left-hand 32-n bits of the Rm register to the right by n places, into the right-hand 32-n bits of the result. And it sets the left-hand n bits of the result to 0 (see *Figure 14*).

You can use the LSR #n operation to divide the value in the Rm register by 2^n , if the value is regarded as an unsigned integer.

When the instruction is LSRS or when LSR #n is used in *operand2* with the instructions MOVS, MVNS, ANDS, ORRS, ORNS, EORS, BICS, TEQ or TST, the carry flag is updated to the last bit shifted out, bit[*n*-1], of the *Rm* register.

- Note: 1 If n is 32 or more, then all the bits in the result are cleared to 0.
 - 2 If n is 33 or more and the carry flag is updated, it is updated to 0.



LSL

Logical shift left by n bits moves the right-hand 32-n bits of the Rm register to the left by n places, into the left-hand 32-n bits of the result. And it sets the right-hand n bits of the result to 0 (see *Figure 15: LSL #3*).

The LSL #n operation can be used to multiply the value in the Rm register by 2^n , if the value is regarded as an unsigned integer or a two's complement signed integer. Overflow can occur without warning.

When the instruction is LSLS or when LSL #n, with non-zero n, is used in *operand2* with the instructions MOVS, MVNS, ANDS, ORRS, ORNS, EORS, BICS, TEQ or TST, the carry flag is updated to the last bit shifted out, bit[32-n], of the *Rm* register. These instructions do not affect the carry flag when used with LSL #0.

Note: 1 If n is 32 or more, then all the bits in the result are cleared to 0.

2 If n is 33 or more and the carry flag is updated, it is updated to 0.



577

PM0214 Rev 10

ROR

Rotate right by n bits moves the left-hand 32-n bits of the Rm register to the right by n places, into the right-hand 32-n bits of the result. It also moves the right-hand n bits of the register into the left-hand n bits of the result (see *Figure 16*).

When the instruction is RORS or when ROR #n is used in *operand2* with the instructions MOVS, MVNS, ANDS, ORRS, ORNS, EORS, BICS, TEQ or TST, the carry flag is updated to the last bit rotation, bit[n-1], of the Rm register.

- Note: 1 If n is 32, then the value of the result is same as the value in Rm, and if the carry flag is updated, it is updated to bit[31] of Rm.
 - 2 ROR with shift length, n, more than 32 is the same as ROR with shift length n-32.



RRX

Rotate right with extend moves the bits of the *Rm* register to the right by one bit. And it copies the carry flag into bit[31] of the result (see *Figure 17*).

When the instruction is RRXS or when RRX is used in operand2 with the instructions MOVS, MVNS, ANDS, ORRS, ORNS, EORS, BICS, TEQ or TST, the carry flag is updated to bit[0] of the *Rm* register.

Figure 17. RRX #3





3.3.5 Address alignment

An aligned access is an operation where a word-aligned address is used for a word, dual word, or multiple word access, or where a halfword-aligned address is used for a halfword access. Byte accesses are always aligned.

The Cortex-M4 processor supports unaligned access only for the following instructions:

- LDR. LDRT
- LDRH, LDRHT
- LDRSH, LDRSHT
- STR, STRT
- STRH, STRHT

All other load and store instructions generate a usage fault exception if they perform an unaligned access, and therefore their accesses must be address aligned. For more information about usage faults see *Fault handling on page 44*.

Unaligned accesses are usually slower than aligned accesses. In addition, some memory regions might not support unaligned accesses. Therefore, Arm recommends that programmers to ensure that accesses are aligned. To avoid accidental generation of unaligned accesses, use the UNALIGN_TRP bit in the configuration and control register to trap all unaligned accesses, see *Configuration and control register (CCR) on page 231*.

3.3.6 PC-relative expressions

A PC-relative expression or *label* is a symbol that represents the address of an instruction or literal data. It is represented in the instruction as the PC value plus or minus a numeric offset. The assembler calculates the required offset from the label and the address of the current instruction. If the offset is too big, the assembler produces an error.

- For the B, BL, CBNZ, and CBZ instructions, the value of the PC is the address of the current instruction plus four bytes.
- For all other instructions that use labels, the value of the PC is the address of the current instruction plus four bytes, with bit[1] of the result cleared to 0 to make it wordaligned.
- Your assembler might permit other syntaxes for PC-relative expressions, such as a label plus or minus a number, or an expression of the form [PC, #number].

3.3.7 Conditional execution

Most data processing instructions can optionally update the condition flags in the *application* program status register (APSR) according to the result of the operation (see *Application* program status register on page 21). Some instructions update all flags, and some only update a subset. If a flag is not updated, the original value is preserved. See the instruction descriptions for the flags they affect.

You can execute an instruction conditionally, based on the condition flags set in another instruction:

- Immediately after the instruction that updated the flags
- After any number of intervening instructions that have not updated the flags



PM0214 Rev 10 65/262

Conditional execution is available by using conditional branches or by adding condition code suffixes to instructions. See *Table 24: Condition code suffixes on page 67* for a list of the suffixes to add to instructions to make them conditional instructions. The condition code suffix enables the processor to test a condition based on the flags. If the condition test of a conditional instruction fails, the instruction:

- Does not execute.
- Does not write any value to its destination register.
- Does not affect any of the flags.
- Does not generate any exception.

Conditional instructions, except for conditional branches, must be inside an If-then instruction block. See *IT on page 145* for more information and restrictions when using the IT instruction. Depending on the vendor, the assembler might automatically insert an IT instruction if you have conditional instructions outside the IT block.

Use the CBZ and CBNZ instructions to compare the value of a register against zero and branch on the result.

This section describes:

- The condition flags
- Condition code suffixes on page 67

The condition flags

The APSR contains the following condition flags:

- N: Set to 1 when the result of the operation is negative, otherwise cleared to 0.
- Z: Set to 1 when the result of the operation is zero, otherwise cleared to 0.
- C: Set to 1 when the operation results in a carry, otherwise cleared to 0.
- V: Set to 1 when the operation causes an overflow, otherwise cleared to 0.

For more information about the APSR see Program status register on page 19.

A carry occurs:

- If the result of an addition is greater than or equal to 2³².
- If the result of a subtraction is positive or zero.
- As the result of an inline barrel shifter operation in a move or logical instruction.

Overflow occurs if the sign of a result does not match the sign of the result had the operation been performed at infinite precision, for example:

- if adding two negative values results in a positive value.
- if adding two positive values results in a negative value.
- if subtracting a positive value from a negative value generates a positive value.
- if subtracting a negative value from a positive value generates a negative value.

The Compare operations are identical to subtracting, for CMP, or adding, for CMN, except that the result is discarded. See the instruction descriptions for more information.

Most instructions update the status flags only if the S suffix is specified. See the instruction descriptions for more information.



Condition code suffixes

The instructions that can be conditional have an optional condition code, shown in syntax descriptions as {cond}. Conditional execution requires a preceding IT instruction. An instruction with a condition code is only executed if the condition code flags in the APSR meet the specified condition. *Table 24* shows the condition codes to use.

You can use conditional execution with the IT instruction to reduce the number of branch instructions in code.

Table 24 also shows the relationship between condition code suffixes and the N, Z, C, and V flags.

| Suffix | Flags | Meaning |
|----------|--------------------|--|
| EQ | Z = 1 | Equal |
| NE | Z = 0 | Not equal |
| CS or HS | C = 1 | Higher or same, unsigned ≥ |
| CC or LO | C = 0 | Lower, unsigned < |
| MI | N = 1 | Negative |
| PL | N = 0 | Positive or zero |
| VS | V = 1 | Overflow |
| VC | V = 0 | No overflow |
| HI | C = 1 and Z = 0 | Higher, unsigned > |
| LS | C = 0 or Z = 1 | Lower or same, unsigned ≤ |
| GE | N = V | Greater than or equal, signed ≥ |
| LT | N != V | Less than, signed < |
| GT | Z = 0 and N = V | Greater than, signed > |
| LE | Z = 1 and N != V | Less than or equal, signed ≤ |
| AL | Can have any value | Always. This is the default when no suffix is specified. |

Table 24. Condition code suffixes

Specific example 1: Absolute value shows the use of a conditional instruction to find the absolute value of a number. R0 = ABS(R1).

Specific example 1: Absolute value

```
MOVSRO, R1; R0 = R1, setting flags

IT MI;

IT instruction for the negative condition

RSBMIRO, R1, #0;

If negative, R0 = -R1
```

Specific example 2: Compare and update value shows the use of conditional instructions to update the value of R4 if the signed value R0 and R2 are greater than R1 and R3 respectively.

Specific example 2: Compare and update value

```
CMP R0, R1; compare R0 and R1, setting flags
ITT GT; IT instruction for the two GT conditions
```



PM0214 Rev 10 67/262

```
CMPGT R2, R3; if 'greater than', compare R2 and R3, setting flags MOVGT R4, R5; if still 'greater than', do R4 = R5
```

3.3.8 Instruction width selection

There are many instructions that can generate either a 16-bit encoding or a 32-bit encoding depending on the specified operands and destination register. For some of these instructions, you can force a specific instruction size by using an instruction width suffix. The .W suffix forces a 32-bit instruction encoding. The .N suffix forces a 16-bit instruction encoding.

If you specify an instruction width suffix and the assembler cannot generate an instruction encoding of the requested width, it generates an error.

In some cases it might be necessary to specify the .W suffix, for example if the operand is the label of an instruction or literal data, as in the case of branch instructions. The reason for this is that the assembler might not automatically generate the right size encoding.

To use an instruction width suffix, place it immediately after the instruction mnemonic and condition code, if any. *Specific example 3: Instruction width selection* shows instructions with the instruction width suffix.

Specific example 3: Instruction width selection

```
BCS.W label; creates 32-bit instruction even for a short branch ADDS.W RO, RO, R1; creates a 32-bit instruction even though the same ; operation can be done by a 16-bit instruction
```

3.4 Memory access instructions

Table 25 shows the memory access instructions:

Table 25. Memory access instructions

| Mnemonic | Brief description | See |
|-------------|---|--|
| ADR | Load PC-relative address | ADR on page 70 |
| CLREX | Clear exclusive | CLREX on page 80 |
| LDM{mode} | Load multiple registers | LDM and STM on page 76 |
| LDR{type} | Load register using immediate offset | LDR and STR, immediate offset on page 71 |
| LDR{type} | Load register using register offset | LDR and STR, register offset on page 73 |
| LDR{type}T | Load register with unprivileged access | LDR and STR, unprivileged on page 74 |
| LDR | Load register using PC-relative address | LDR, PC-relative on page 75 |
| LDRD | Load register dual | LDR and STR, immediate offset on page 71 |
| LDREX{type} | Load register exclusive | LDREX and STREX on page 79 |
| POP | Pop registers from stack | PUSH and POP on page 78 |
| PUSH | Push registers onto stack | PUSH and POP on page 78 |
| STM{mode} | Store multiple registers | LDM and STM on page 76 |
| STR{type} | Store register using immediate offset | LDR and STR, immediate offset on page 71 |
| STR{type} | Store register using register offset | LDR and STR, register offset on page 73 |
| STR{type}T | Store register with unprivileged access | LDR and STR, unprivileged on page 74 |
| STREX{type} | Store register exclusive | LDREX and STREX on page 79 |



PM0214 Rev 10 69/262

3.4.1 ADR

Load PC-relative address.

Syntax

ADR{cond} Rd, label

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register
- 'label' is a PC-relative expression (see PC-relative expressions on page 65)

Operation

ADR determines the address by adding an immediate value to the PC. It writes the result to the destination register.

ADR produces position-independent code, because the address is PC-relative.

If you use ADR to generate a target address for a BX or BLX instruction, you must ensure that bit[0] of the address you generate is set to 1 for correct execution.

Values of label must be within the range -4095 to 4095 from the address in the PC.

Note:

70/262

You might have to use the .W suffix to get the maximum offset range or to generate addresses that are not word-aligned (see Instruction width selection on page 68).

Restrictions

Rd must be neither SP nor PC.

Condition flags

This instruction does not change the flags.

Examples

ADR R1, TextMessage; write address value of a location labelled as ; TextMessage to R1

PM0214 Rev 10

3.4.2 LDR and STR, immediate offset

Load and Store with immediate offset, pre-indexed immediate offset, or post-indexed immediate offset.

Syntax

```
op{type}{cond} Rt, [Rn {, #offset}]; immediate offset
op{type}{cond} Rt, [Rn, #offset]!; pre-indexed
op{type}{cond} Rt, [Rn], #offset; post-indexed
opD{cond} Rt, Rt2, [Rn {, #offset}]; immediate offset, two words
opD{cond} Rt, Rt2, [Rn, #offset]!; pre-indexed, two words
opD{cond} Rt, Rt2, [Rn], #offset; post-indexed, two words
```

Where:

- 'op' is either LDR (load register) or STR (store register)
- 'type' is one of the following:
 - B: Unsigned byte, zero extends to 32 bits on loads
 - SB: Signed byte, sign extends to 32 bits (LDR only)
 - H: Unsigned halfword, zero extends to 32 bits on loads
 - SH: Signed halfword, sign extends to 32 bits (LDR only)
 - -: Omit, for word
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rt' is the register to load or store
- 'Rn' is the register on which the memory address is based
- 'offset' is an offset from Rn. If offset is omitted, the address is the contents of Rn
- 'Rt2' is the additional register to load or store for two-word operations

Operation

LDR instructions load one or two registers with a value from memory. STR instructions store one or two register values to memory.

Load and store instructions with immediate offset can use the following addressing modes:

Offset addressing

The offset value is added to or subtracted from the address obtained from the register *Rn*. The result is used as the address for the memory access. The register *Rn* is unaltered. The assembly language syntax for this mode is: [*Rn*, #offset].

Pre-indexed addressing

The offset value is added to or subtracted from the address obtained from the register Rn. The result is used as the address for the memory access and written back into the register Rn. The assembly language syntax for this mode is: [Rn, #offset]!

Post-indexed addressing

The address obtained from the register Rn is used as the address for the memory access. The offset value is added to or subtracted from the address, and written back into the register Rn. The assembly language syntax for this mode is: [Rn], #offset.



PM0214 Rev 10 71/262

The value to load or store can be a byte, halfword, word, or two words. Bytes and halfwords can either be signed or unsigned (see *Address alignment on page 65*).

Table 26 shows the range of offsets for immediate, pre-indexed and post-indexed forms.

Table 26. Immediate, pre-indexed and post-indexed offset ranges

| Instruction type | Immediate offset | Pre-indexed | Post-indexed |
|---|--|--|--|
| Word, halfword, signed halfword, byte, or signed byte | -255 to 4095 | -255 to 255 | -255 to 255 |
| Two words | Multiple of 4 in the range -1020 to 1020 | Multiple of 4 in the range -1020 to 1020 | Multiple of 4 in the range -1020 to 1020 |

Restrictions

- For load instructions:
 - Rt can be SP or PC for word loads only.
 - Rt must be different from Rt2 for two-word loads.
 - Rn must be different from Rt and Rt2 in the pre-indexed or post-indexed forms.
- When Rt is PC in a word load instruction.
 - bit[0] of the loaded value must be 1 for correct execution.
 - A branch occurs to the address created by changing bit[0] of the loaded value to 0.
 - If the instruction is conditional, it must be the last instruction in the IT block.
- For store instructions:
 - Rt can be SP for word stores only.
 - Rt must not be PC.
 - Rn must not be PC.
 - Rn must be different from Rt and Rt2 in the pre-indexed or post-indexed forms

Condition flags

These instructions do not change the flags.

Examples

```
LDR R8, [R10] ; loads R8 from the address in R10.

LDRNE R2, [R5, #960]!; loads (conditionally) R2 from a word ; 960 bytes above the address in R5, and ; increments R5 by 960.

STR R2, [R9, #const-struc]; const-struc is an expression evaluating ; to a constant in the range 0-4095.

STRH R3, [R4], #4; Store R3 as halfword data into address in ; R4, then increment R4 by 4

LDRD R8, R9, [R3, #0x20]; Load R8 from a word 32 bytes above the ; address in R3, and load R9 from a word 36 ; bytes above the address in R3

STRD R0, R1, [R8], #-16; Store R0 to address in R8, and store R1 to ; a word 4 bytes above the address in R8, ; and then decrement R8 by 16.
```



3.4.3 LDR and STR, register offset

Load and Store with register offset.

Syntax

```
op\{type\}\{cond\}\ Rt, [Rn, Rm \{, LSL \#n\}] Where:
```

- 'op' is either LDR (load register) or STR (store register).
- 'type' is one of the following:
 - B: Unsigned byte, zero extends to 32 bits on loads.
 - SB: Signed byte, sign extends to 32 bits (LDR only).
 - H: Unsigned halfword, zero extends to 32 bits on loads.
 - SH: Signed halfword, sign extends to 32 bits (LDR only).
 - —: Omit, for word.
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rt' is the register to load or store.
- 'Rn' is the register on which the memory address is based.
- 'Rm' is a register containing a value to be used as the offset.
- 'LSL #n' is an optional shift, with n in the range 0 to 3.

Operation

LDR instructions load a register with a value from memory. STR instructions store a register value into memory. The memory address to load from or store to is at an offset from the register *Rn*. The offset is specified by the *Rm* register and can be shifted left by up to 3 bits using LSL. The value to load or store can be a byte, halfword, or word. For load instructions, bytes and halfwords can either be signed or unsigned (see *Address alignment on page 65*).

Restrictions

In these instructions:

- Rn must not be PC.
- Rm must be neither SP nor PC.
- Rt can be SP only for word loads and word stores.
- Rt can be PC only for word loads.

When Rt is PC in a word load instruction:

- bit[0] of the loaded value must be 1 for correct execution, and a branch occurs to this halfword-aligned address.
- If the instruction is conditional, it must be the last instruction in the IT block.

Condition flags

These instructions do not change the flags.

Examples

```
STR R0, [R5, R1]; store value of R0 into an address equal to ; sum of R5 and R1

LDRSB R0, [R5, R1, LSL #1]; read byte value from an address equal to ; sum of R5 and two times R1, sign extended it
```



PM0214 Rev 10 73/262

```
; to a word value and put it in R0 STR R0, [R1, R2, LSL \#2]; stores R0 to an address equal to sum of R1 ; and four times R2
```

3.4.4 LDR and STR, unprivileged

Load and Store with unprivileged access.

Syntax

```
op\{type\}T\{cond\} Rt, [Rn \{, \#offset\}]; immediate offset Where:
```

- 'op' is either LDR (load register) or STR (store register).
- 'type' is one of the following:
 - B: Unsigned byte, zero extends to 32 bits on loads.
 - SB: Signed byte, sign extends to 32 bits (LDR only).
 - H: Unsigned halfword, zero extends to 32 bits on loads.
 - SH: Signed halfword, sign extends to 32 bits (LDR only).
 - —: Omit, for word.
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rt' is the register to load or store.
- 'Rn' is the register on which the memory address is based.
- 'offset' is an offset from Rn and can be 0 to 255. If offset is omitted, the address is the value in Rn.

Operation

These load and store instructions perform the same function as the memory access instructions with immediate offset (see *LDR* and *STR*, immediate offset on page 71). The difference is that these instructions have only unprivileged access even when used in privileged software.

When used in unprivileged software, these instructions behave in exactly the same way as normal memory access instructions with immediate offset.

Restrictions

In these instructions:

- Rn must not be PC.
- Rt must be neither SP nor PC.

Condition flags

These instructions do not change the flags.

Examples

```
STRBTEQ R4, [R7] ; conditionally store least significant byte in ; R4 to an address in R7, with unprivileged access LDRHT R2, [R2, #8]; load halfword value from an address equal to ; sum of R2 and 8 into R2, with unprivileged access
```



3.4.5 LDR, PC-relative

Load register from memory.

Syntax

```
LDR{type}{cond} Rt, label
LDRD{cond} Rt, Rt2, label; load two words
```

Where:

- 'type' is one of the following:
 - B: Unsigned byte, zero extends to 32 bits.
 - SB: Signed byte, sign extends to 32 bits.
 - H: Unsigned halfword, sign extends to 32 bits.
 - SH: Signed halfword, sign extends to 32 bits.
 - —: Omit, for word.
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rt' is the register to load or store.
- 'Rt2' is the second register to load or store.
- 'label' is a PC-relative expression, see PC-relative expressions on page 65.

Operation

LDR loads a register with a value from a PC-relative memory address.

The memory address is specified by a label or by an offset from the PC.

The value to load or store can be a byte, halfword, or word. For load instructions, bytes and halfwords can either be signed or unsigned (see *Address alignment on page 65*).

'label' must be within a limited range of the current instruction. *Table 27* shows the possible offsets between *label* and the PC. You might have to use the .W suffix to get the maximum offset range (see *Instruction width selection on page 68*).

Table 27. label-PC offset ranges

| Instruction type | Offset range |
|--|---------------|
| Word, halfword, signed halfword, byte, signed byte | -4095 to 4095 |
| Two words | -1020 to 1020 |

Restrictions

In these instructions:

- Rt2 must be neither SP nor PC
- Rt must be different from Rt2
- Rt can be SP or PC only for word loads
- When Rt is PC in a word load instruction: bit[0] of the loaded value must be 1 for correct execution, and a branch occurs to this halfword-aligned address. If the instruction is conditional, it must be the last instruction in the IT block.



PM0214 Rev 10 75/262

Condition flags

These instructions do not change the flags.

Examples

```
LDR R0, LookUpTable; load R0 with a word of data from an address; labelled as LookUpTable

LDRSB R7, localdata; load a byte value from an address labelled; as localdata, sign extend it to a word; value, and put it in R7
```

3.4.6 LDM and STM

Load and Store Multiple registers.

Syntax

```
op{addr_mode}{cond} Rn{!}, reglist
```

Where:

- 'op' is either LDM (load multiple register) or STM (store multiple register).
- 'addr_mode' is any of the following:
 - IA: Increment address after each access (this is the default).
 - DB: Decrement address before each access.
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rn' is the register on which the memory addresses are based.
- '!' is an optional writeback suffix. If! is present, the final address that is loaded from or stored to is written back into Rn.
- 'reglist' is a list of one or more registers to be loaded or stored, enclosed in braces. It can contain register ranges. It must be comma-separated if it contains more than one register or register range, see Examples on page 77.

LDM and LDMFD are synonyms for LDMIA. LDMFD refers to its use for popping data from full descending stacks.

LDMEA is a synonym for LDMDB, and refers to its use for popping data from empty ascending stacks.

STM and STMEA are synonyms for STMIA. STMEA refers to its use for pushing data onto empty ascending stacks.

STMFD is s synonym for STMDB, and refers to its use for pushing data onto full descending stacks

Operation

LDM instructions load the registers in *reglist* with word values from memory addresses based on *Rn*.

STM instructions store the word values in the registers in *reglist* to memory addresses based on *Rn*.

For LDM, LDMIA, LDMFD, STM, STMIA, and STMEA the memory addresses used for the accesses are at 4-byte intervals ranging from Rn to Rn + 4*(n-1), where n is the number of registers in *reglist*. The accesses happen in order of increasing register numbers, with the



lowest numbered register using the lowest memory address and the highest number register using the highest memory address. If the writeback suffix is specified, the value of Rn + 4*(n-1) is written back to Rn.

For LDMDB, LDMEA, STMDB, and STMFD the memory addresses used for the accesses are at 4-byte intervals ranging from Rn to Rn - 4 * (n-1), where n is the number of registers in *reglist*. The accesses happen in order of decreasing register numbers, with the highest numbered register using the highest memory address and the lowest number register using the lowest memory address. If the writeback suffix is specified, the value Rn - 4 * (n) is written back to Rn.

The PUSH and POP instructions can be expressed in this form (see *PUSH* and *POP* for details).

Restrictions

In these instructions:

- Rn must not be PC.
- reglist must not contain SP.
- In any STM instruction, reglist must not contain PC.
- In any LDM instruction, reglist must not contain PC if it contains LR.
- reglist must not contain Rn if you specify the writeback suffix.

When PC is in *reglist* in an LDM instruction:

- bit[0] of the value loaded to the PC must be 1 for correct execution, and a branch occurs to this halfword-aligned address.
- If the instruction is conditional, it must be the last instruction in the IT block.

Condition flags

These instructions do not change the flags.

Examples

```
LDM R8, \{R0,R2,R9\}; LDMIA is a synonym for LDM STMDB R1!, \{R3-R6,R11,R12\}
```

Incorrect examples

```
STM R5!,{R5,R4,R9} ; value stored for R5 is unpredictable
LDM R2, {} ; there must be at least one register in the list
```

57

PM0214 Rev 10 77/262

3.4.7 PUSH and POP

Push registers onto, and pop registers off a full-descending stack. PUSH and POP are synonyms for STMDB and LDM (or LDMIA) with the memory addresses for the access based on SP, and with the final address for the access written back to the SP. PUSH and POP are the preferred mnemonics in these cases.

Syntax

```
PUSH{cond} reglist
POP{cond} reglist
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'reglist' is a non-empty list of registers (or register ranges), enclosed in braces. Commas must separate register lists or ranges (see Examples on page 77).

Operation

- PUSH stores registers on the stack in order of decreasing register numbers, with the highest numbered register using the highest memory address and the lowest numbered register using the lowest memory address.
- POP loads registers from the stack in order of increasing register numbers, with the lowest numbered register using the lowest memory address and the highest numbered register using the highest memory address.
- PUSH uses the value in the SP register minus four as the highest memory address, POP uses the SP register value as the lowest memory address, implementing a fulldescending stack. On completion, PUSH updates the SP register to point to the location of the lowest store value, and POP updates the SP register to point to the location above the highest location loaded.
- If a POP instruction includes PC in its reglist, a branch to this location is performed
 when the POP instruction has completed. Bit[0] of the value read for the PC is used to
 update the APSR T-bit. This bit must be 1 to ensure correct operation. See LDM and
 STM on page 76 for more information.

Restrictions

In these instructions:

- 'reglist' must not contain SP.
- For the PUSH instruction, reglist must not contain PC.
- For the POP instruction, reglist must not contain PC if it contains LR.
 When PC is in reglist in a POP instruction: bit[0] of the value loaded to the PC must be 1 for correct execution, and a branch occurs to this halfword-aligned address. If the instruction is conditional, it must be the last instruction in the IT block.

Condition flags

These instructions do not change the flags.

Examples

```
PUSH \{R0,R4-R7\}; Push R0,R4,R5,R6,R7 onto the stack PUSH \{R2,LR\}; Push R2 and the link-register onto the stack POP \{R0,R6,PC\}; Pop r0,r6 and PC from the stack, then branch to new PC.
```



3.4.8 LDREX and STREX

Load and Store Register Exclusive.

Syntax

```
LDREX{cond} Rt, [Rn {, #offset}]
STREX{cond} Rd, Rt, [Rn {, #offset}]
LDREXB{cond} Rt, [Rn]
STREXB{cond} Rd, Rt, [Rn]
LDREXH{cond} Rt, [Rn]
STREXH{cond} Rt, [Rn]
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register for the returned status.
- 'Rt' is the register to load or store.
- 'Rn' is the register on which the memory address is based.
- 'offset' is an optional offset applied to the value in *Rn*. If offset is omitted, the address is the value in *Rn*.

Operation

LDREX, LDREXB, and LDREXH load a word, byte, and halfword respectively from a memory address.

STREX, STREXB, and STREXH attempt to store a word, byte, and halfword respectively to a memory address. The address used in any store-exclusive instruction must be the same as the address in the most recently executed load-exclusive instruction. The value stored by the store-exclusive instruction must also have the same data size as the value loaded by the preceding load-exclusive instruction. This means software must always use a load-exclusive instruction and a matching store-exclusive instruction to perform a synchronization operation, see *Synchronization primitives on page 34*.

If a store-exclusive instruction performs the store, it writes 0 to its destination register. If it does not perform the store, it writes 1 to its destination register.

If the store-exclusive instruction writes 0 to the destination register, it is guaranteed that no other process in the system has accessed the memory location between the load-exclusive and store-exclusive instructions.

For reasons of performance, keep the number of instructions between corresponding loadexclusive and store-exclusive instruction to a minimum.

Note:

The result of executing a store-exclusive instruction to an address that is different from that used in the preceding load-exclusive instruction is unpredictable.



PM0214 Rev 10 79/262

Restrictions

In these instructions:

- Do not use PC.
- Do not use SP for Rd and Rt.
- For STREX. Rd must be different from both Rt and Rn.
- The value of offset must be a multiple of four in the range 0-1020.

Condition flags

These instructions do not change the flags.

Examples

```
MOV R1, #0x1 ; initialize the 'lock taken' value try
LDREX R0, [LockAddr] ; load the lock value

CMP R0, #0 ; is the lock free?

ITT EQ ; IT instruction for STREXEQ and CMPEQ

STREXEQ R0, R1, [LockAddr] ; try and claim the lock

CMPEQ R0, #0 ; did this succeed?

BNE try ; no - try again

; yes - we have the lock
```

3.4.9 CLREX

Clear Exclusive.

Syntax

CLREX { cond }

Where:

'cond' is an optional condition code (see Conditional execution on page 65)

Operation

Use CLREX to make the next STREX, STREXB, or STREXH instruction write 1 to its destination register and fail to perform the store. It is useful in exception handler code to force the failure of the store exclusive if the exception occurs between a load exclusive instruction and the matching store exclusive instruction in a synchronization operation.

See Synchronization primitives on page 34 for more information.

Condition flags

These instructions do not change the flags.

Examples

CLREX



3.5 General data processing instructions

Table 28 shows the data processing instructions.

Table 28. Data processing instructions

| Mnemonic | Brief description | See |
|----------|---|--|
| ADC | Add with carry | ADD, ADC, SUB, SBC, and RSB on page 83 |
| ADD | Add | ADD, ADC, SUB, SBC, and RSB on page 83 |
| ADDW | Add | ADD, ADC, SUB, SBC, and RSB on page 83 |
| AND | Logical AND | AND, ORR, EOR, BIC, and ORN on page 85 |
| ASR | Arithmetic Shift Right | ASR, LSL, LSR, ROR, and RRX on page 86 |
| BIC | Bit Clear | AND, ORR, EOR, BIC, and ORN on page 85 |
| CLZ | Count leading zeros | CLZ on page 87 |
| CMN | Compare Negative | CMP and CMN on page 88 |
| CMP | Compare | CMP and CMN on page 88 |
| EOR | Exclusive OR | AND, ORR, EOR, BIC, and ORN on page 85 |
| LSL | Logical Shift Left | ASR, LSL, LSR, ROR, and RRX on page 86 |
| LSR | Logical Shift Right | ASR, LSL, LSR, ROR, and RRX on page 86 |
| MOV | Move | MOV and MVN on page 89 |
| MOVT | Move Top | MOVT on page 91 |
| MOVW | Move 16-bit constant | MOV and MVN on page 89 |
| MVN | Move NOT | MOV and MVN on page 89 |
| ORN | Logical OR NOT | AND, ORR, EOR, BIC, and ORN on page 85 |
| ORR | Logical OR | AND, ORR, EOR, BIC, and ORN on page 85 |
| RBIT | Reverse Bits | REV, REV16, REVSH, and RBIT on page 92 |
| REV | Reverse byte order in a word | REV, REV16, REVSH, and RBIT on page 92 |
| REV16 | Reverse byte order in each halfword | REV, REV16, REVSH, and RBIT on page 92 |
| REVSH | Reverse byte order in bottom halfword and sign extend | REV, REV16, REVSH, and RBIT on page 92 |
| ROR | Rotate Right | ASR, LSL, LSR, ROR, and RRX on page 86 |
| RRX | Rotate Right with Extend | ASR, LSL, LSR, ROR, and RRX on page 86 |
| RSB | Reverse Subtract | ADD, ADC, SUB, SBC, and RSB on page 83 |
| SADD16 | Signed Add 16 | SADD16 and SADD8 on page 93 |
| SADD8 | Signed Add 8 | SADD16 and SADD8 on page 93 |
| SASX | Signed Add and Subtract with Exchange | SASX and SSAX on page 98 |
| SSAX | Signed Subtract and Add with Exchange | SASX and SSAX on page 98 |
| SBC | Subtract with Carry | ADD, ADC, SUB, SBC, and RSB on page 83 |
| SHADD16 | Signed Halving Add 16 | SHADD16 and SHADD8 on page 94 |
| SHADD8 | Signed Halving Add 8 | SHADD16 and SHADD8 on page 94 |



PM0214 Rev 10 81/262

Table 28. Data processing instructions (continued)

| Mnemonic | Brief description | See |
|----------|---|--|
| SHASX | Signed Halving Add and Subtract with Exchange | SHASX and SHSAX on page 95 |
| SHSAX | Signed Halving Subtract and Add with exchange | SHASX and SHSAX on page 95 |
| SHSUB16 | Signed Halving Subtract 16 | SHSUB16 and SHSUB8 on page 96 |
| SHSUB8 | Signed Halving Subtract 8 | SHSUB16 and SHSUB8 on page 96 |
| SSUB16 | Signed Subtract 16 | SSUB16 and SSUB8 on page 97 |
| SSUB8 | Signed subtract 8 | SSUB16 and SSUB8 on page 97 |
| SUB | Subtract | ADD, ADC, SUB, SBC, and RSB on page 83 |
| SUBW | Subtract | ADD, ADC, SUB, SBC, and RSB on page 83 |
| TEQ | Test Equivalence | SADD16 and SADD8 on page 93 |
| TST | Test | SADD16 and SADD8 on page 93 |
| UADD16 | Unsigned Add 16 | UADD16 and UADD8 on page 100 |
| UADD8 | Unsigned Add 8 | UADD16 and UADD8 on page 100 |
| UASX | Unsigned Add and Subtract with Exchange | UASX and USAX on page 101 |
| USAX | Unsigned Subtract and Add with Exchange | UASX and USAX on page 101 |
| UHADD16 | Unsigned Halving Add 16 | UHADD16 and UHADD8 on page 102 |
| UHADD8 | Unsigned Halving Add 8 | UHADD16 and UHADD8 on page 102 |
| UHASX | Unsigned Halving Add and Subtract with Exchange | UHASX and UHSAX on page 103 |
| UHSAX | Unsigned Halving Subtract and Add with Exchange | UHASX and UHSAX on page 103 |
| UHSUB16 | Unsigned Halving Subtract 16 | UHSUB16 and UHSUB8 on page 104 |
| UHSUB8 | Unsigned Halving Subtract 8 | UHSUB16 and UHSUB8 on page 104 |
| USAD8 | Unsigned Sum of Absolute Differences | USAD8 on page 106 |
| USADA8 | Unsigned Sum of Absolute Differences and accumulate | USADA8 on page 107 |
| USUB16 | Unsigned Subtract 16 | USUB16 and USUB8 on page 108 |
| USUB8 | Unsigned Subtract 8 | USUB16 and USUB8 on page 108 |

3.5.1 ADD, ADC, SUB, SBC, and RSB

Add, Add with Carry, Subtract, Subtract with Carry, and Reverse Subtract.

Syntax

```
op{S}{cond} {Rd,} Rn, Operand2 op{cond} {Rd,} Rn, #imm12; ADD and SUB only
```

Where:

'op' is one of the following:

ADD: Add

ADC: Add with carry

SUB: Subtract

SBC: Subtract with carry

RSB: Reverse subtract

- 'S' is an optional suffix. If S is specified, the condition code flags are updated on the result of the operation (see *Conditional execution on page 65*)
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register. If Rd is omitted, the destination register is Rn
- 'Rn' is the register holding the first operand
- 'Operand2' is a flexible second operand (see Flexible second operand on page 60 for details of the options)
- 'imm12' is any value in the range 0—4095

Operation

The ADD instruction adds the value of *operand2* or *imm12* to the value in *Rn*.

The ADC instruction adds the values in Rn and operand2, together with the carry flag.

The SUB instruction subtracts the value of *operand2* or imm12 from the value in *Rn*.

The SBC instruction subtracts the value of *operand2* from the value in *Rn*. If the carry flag is clear, the result is reduced by one.

The RSB instruction subtracts the value in *Rn* from the value of *operand2*. This is useful because of the wide range of options for *operand2*.

Use ADC and SBC to synthesize multiword arithmetic (see *Multiword arithmetic examples on page 84* and *ADR on page 70*).

ADDW is equivalent to the ADD syntax that uses the *imm12* operand. SUBW is equivalent to the SUB syntax that uses the *imm12* operand.



PM0214 Rev 10 83/262

Restrictions

In these instructions:

- Operand2 must be neither SP nor PC
- Rd can be SP only in ADD and SUB, and only with the following additional restrictions:
 - Rn must also be SP.
 - Any shift in operand2 must be limited to a maximum of three bits using LSL.
- Rn can be SP only in ADD and SUB.
- Rd can be PC only in the ADD{cond} PC, PC, Rm instruction where:
 - You must not specify the S suffix.
 - Rm must be neither PC nor SP.
 - If the instruction is conditional, it must be the last instruction in the IT block.
- With the exception of the ADD{cond} PC, PC, Rm instruction, Rn can be PC only in ADD and SUB, and only with the following additional restrictions:
 - You must not specify the S suffix.
 - The second operand must be a constant in the range 0 to 4095.

Note:

- When using the PC for an addition or a subtraction, bits[1:0] of the PC are rounded to b00 before performing the calculation, making the base address for the calculation word-aligned.
- 2 If you want to generate the address of an instruction, you have to adjust the constant based on the value of the PC. Arm recommends that you use the ADR instruction instead of ADD or SUB with Rn equal to the PC, because your assembler automatically calculates the correct constant for the ADR instruction.

When *Rd* is PC in the ADD{cond} PC, PC, *Rm* instruction:

- Bit[0] of the value written to the PC is ignored.
- A branch occurs to the address created by forcing bit[0] of that value to 0.

Condition flags

If S is specified, these instructions update the N, Z, C and V flags according to the result.

Examples

```
ADD R2, R1, R3

SUBS R8, R6, #240 ; sets the flags on the result

RSB R4, R4, #1280 ; subtracts contents of R4 from 1280

ADCHI R11, R0, R3 ; only executed if C flag set and Z flag clear
```

Multiword arithmetic examples

Specific example 4: 64-bit addition shows two instructions that add a 64-bit integer contained in R2 and R3 to another 64-bit integer contained in R0 and R1, and place the result in R4 and R5.

Specific example 4: 64-bit addition

```
ADDS R4, R0, R2 ; add the least significant words
ADC R5, R1, R3 ; add the most significant words with carry
```



Multiword values do not have to use consecutive registers. *Specific example 5: 96-bit subtraction* shows instructions that subtract a 96-bit integer contained in R9, R1, and R11 from another contained in R6, R2, and R8. The example stores the result in R6, R9, and R2.

Specific example 5: 96-bit subtraction

```
SUBS R6, R6, R9 ; subtract the least significant words
SBCS R9, R2, R1 ; subtract the middle words with carry
SBC R2, R8, R11 ; subtract the most significant words with carry
```

3.5.2 AND, ORR, EOR, BIC, and ORN

Logical AND, OR, Exclusive OR, Bit Clear, and OR NOT.

Syntax

```
op{S}{cond} {Rd,} Rn, Operand2 Where:
```

• 'op' is one of:

AND: Logical AND.

ORR: Logical OR or bit set. EOR: Logical exclusive OR.

BIC: Logical AND NOT or bit clear.

ORN: Logical OR NOT.

- 'S' is an optional suffix. If S is specified, the condition code flags are updated on the result of the operation, see *Conditional execution on page 65*.
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rd' is the destination register.
- 'Rn' is the register holding the first operand.
- 'Operand2' is a flexible second operand, see Flexible second operand on page 60 for details of the options.

Operation

The AND, EOR, and ORR instructions perform bitwise AND, exclusive OR, and OR operations on the values in *Rn* and *operand2*.

The BIC instruction performs an AND operation on the bits in *Rn* with the complements of the corresponding bits in the value of *operand2*.

The ORN instruction performs an OR operation on the bits in *Rn* with the complements of the corresponding bits in the value of *operand2*.

Restrictions

Do not use either SP or PC.



PM0214 Rev 10 85/262

Condition flags

If S is specified, these instructions:

- Update the N and Z flags according to the result.
- Can update the C flag during the calculation of *operand2*, see *Flexible second operand* on page 60.
- Do not affect the V flag.

Examples

```
AND R9, R2,#0xFF00

ORREQ R2, R0, R5

ANDS R9, R8, #0x19

EORS R7, R11, #0x18181818

BIC R0, R1, #0xab

ORN R7, R11, R14, ROR #4

ORNS R7, R11, R14, ASR #32
```

3.5.3 ASR, LSL, LSR, ROR, and RRX

Arithmetic Shift Right, Logical Shift Left, Logical Shift Right, Rotate Right, and Rotate Right with Extend.

Syntax

```
op{S}{cond} Rd, Rm, Rs op{S}{cond} Rd, Rm, #n RRX{S}{cond} Rd, Rm
```

Where:

86/262

• 'op' is one of the following:

ASR: Arithmetic Shift Right

LSL: Logical Shift Left

LSR: Logical Shift Right

ROR: Rotate Right

- 'S' is an optional suffix. If S is specified, the condition code flags are updated on the result of the operation, see *Conditional execution on page 65*.
- 'Rd' is the destination register.
- 'Rm' is the register holding the value to be shifted.
- 'Rs' is the register holding the shift length to apply to the value Rm. Only the least significant byte is used and can be in the range 0 to 255.
- 'n' is the shift length. The range of shift lengths depends on the instruction as follows:

ASR: Shift length from 1 to 32 LSL: Shift length from 0 to 31

LSR: Shift length from 1 to 32

ROR: Shift length from 1 to 31

Note: MOVS Rd, Rm is the preferred syntax for LSLS Rd, Rm, #0.

PM0214 Rev 10

Operation

ASR, LSL, LSR, and ROR move the bits in the *Rm* register to the left or right by the number of places specified by constant *n* or register *Rs*.

RRX moves the bits in *Rm* register to the right by 1.

In all these instructions, the result is written to *Rd*, but the value in *Rm* register remains unchanged. For details on what result is generated by the different instructions see *Shift* operations on page 62.

Restrictions

Do not use either SP or PC.

Condition flags

If S is specified:

- These instructions update the N and Z flags according to the result
- The C flag is updated to the last bit shifted out, except when the shift length is 0 (see *Shift operations on page 62*).

Examples

```
ASR R7, R8, #9 ; arithmetic shift right by 9 bits
LSLS R1, R2, #3 ; logical shift left by 3 bits with flag update
LSR R4, R5, #6 ; logical shift right by 6 bits
ROR R4, R5, R6 ; rotate right by the value in the bottom byte of R6
RRX R4, R5 ; rotate right with extend
```

3.5.4 CLZ

Count leading zeros.

Syntax

```
CLZ{cond} Rd, Rm
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rm' is the operand register.

Operation

The CLZ instruction counts the number of leading zeros in the value in *Rm* and returns the result in *Rd*. The result value is 32 if no bits are set in the source register, and zero if bit[31] is set.

Restrictions

Do not use either SP or PC.

Condition flags

This instruction does not change the flags.



PM0214 Rev 10 87/262

Examples

```
CLZ R4,R9
CLZNE R2,R3
```

3.5.5 CMP and CMN

Compare and Compare Negative.

Syntax

```
CMP{cond} Rn, Operand2
CMN{cond} Rn, Operand2
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rn' is the register holding the first operand.
- 'Operand2' is a flexible second operand (see Flexible second operand on page 60) for details of the options.

Operation

These instructions compare the value in a register with *operand2*. They update the condition flags on the result, but do not write the result to a register.

The CMP instruction subtracts the value of *operand2* from the value in *Rn*. This is the same as a SUBS instruction, except that the result is discarded.

The CMN instruction adds the value of *operand2* to the value in *Rn*. This is the same as an ADDS instruction, except that the result is discarded.

Restrictions

In these instructions:

- Do not use PC.
- Operand2 must not be SP.

Condition flags

These instructions update the N, Z, C and V flags according to the result.

Examples

```
CMP R2, R9
CMN R0, #6400
CMPGT SP, R7, LSL #2
```

89/262

3.5.6 MOV and MVN

Move and Move NOT.

Syntax

```
MOV{S}{cond} Rd, Operand2
MOV{cond} Rd, #imm16
MVN{S}{cond} Rd, Operand2
```

Where:

- 'S' is an optional suffix. If S is specified, the condition code flags are updated on the result of the operation (see *Conditional execution on page 65*).
- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Operand2' is a flexible second operand (see Flexible second operand on page 60) for details of the options.
- 'imm16' is any value in the range 0—65535.

Operation

The MOV instruction copies the value of *operand2* into *Rd*.

When *operand2* in a MOV instruction is a register with a shift other than LSL #0, the preferred syntax is the corresponding shift instruction:

- ASR{S}{cond} Rd, Rm, #n is the preferred syntax for MOV{S}{cond} Rd, Rm, ASR #n
- LSL{S}{cond} Rd, Rm, #n is the preferred syntax for MOV{S}{cond} Rd, Rm, LSL #n if n
 != 0
- LSR{S}{cond} Rd, Rm, #n is the preferred syntax for MOV{S}{cond} Rd, Rm, LSR #n
- ROR{S}{cond} Rd, Rm, #n is the preferred syntax for MOV{S}{cond} Rd, Rm, ROR #n
- RRX{S}{cond} Rd, Rm is the preferred syntax for MOV{S}{cond} Rd, Rm, RRX

Also, the MOV instruction permits additional forms of *operand2* as synonyms for shift instructions:

- MOV{S}{cond} Rd, Rm, ASR Rs is a synonym for ASR{S}{cond} Rd, Rm, Rs
- MOV{S}{cond} Rd, Rm, LSL Rs is a synonym for LSL{S}{cond} Rd, Rm, Rs
- MOV{S}{cond} Rd, Rm, LSR Rs is a synonym for LSR{S}{cond} Rd, Rm, Rs
- MOV{S}{cond} Rd, Rm, ROR Rs is a synonym for ROR{S}{cond} Rd, Rm, Rs

See ASR, LSL, LSR, ROR, and RRX on page 86.

The MVN instruction takes the value of *operand2*, performs a bitwise logical NOT operation on the value, and places the result into *Rd*.

Note:

The MOVW instruction provides the same function as MOV, but is restricted to use of the imm16 operand.



Restrictions

You can use SP and PC only in the MOV instruction, with the following restrictions:

- The second operand must be a register without shift
- You must not specify the S suffix

When Rd is PC in a MOV instruction:

- bit[0] of the value written to the PC is ignored
- A branch occurs to the address created by forcing bit[0] of that value to 0.

Note:

Though it is possible to use MOV as a branch instruction, Arm strongly recommends the use of a BX or BLX instruction to branch for software portability to the Arm instruction set.

Condition flags

If S is specified, these instructions:

- Update the N and Z flags according to the result
- Can update the C flag during the calculation of *operand2* (see *Flexible second operand on page 60*).
- Do not affect the V flag

Example

```
MOVS R11, #0x000B ; write value of 0x000B to R11, flags get updated
MOV R1, #0xFA05 ; write value of 0xFA05 to R1, flags not updated
MOVS R10, R12 ; write value in R12 to R10, flags get updated
MOV R3, #23 ; write value of 23 to R3
MOV R8, SP ; write value of stack pointer to R8
MVNS R2, #0xF ; write value of 0xFFFFFFFF0 (bitwise inverse of 0xF)
; to the R2 and update flags
```

3.5.7 MOVT

Move Top.

Syntax

```
MOVT{cond} Rd, #imm16
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'imm16' is a 16-bit immediate constant.

Operation

MOVT writes a 16-bit immediate value, *imm16*, to the top halfword, *Rd*[31:16], of its destination register. The write does not affect *Rd*[15:0].

The MOV, MOVT instruction pair enables you to generate any 32-bit constant.

Restrictions

Rd must be neither SP nor PC.

Condition flags

This instruction does not change the flags.

Examples

```
MOVT R3, #0xF123 ; write 0xF123 to upper halfword of R3, ; lower halfword and APSR are unchanged
```

577

PM0214 Rev 10 91/262

3.5.8 REV, REV16, REVSH, and RBIT

Reverse bytes and Reverse bits.

Syntax

```
op{cond} Rd, Rn
```

Where:

• 'op' is one of the following:

REV: Reverse byte order in a word.

REV16: Reverse byte order in each halfword independently.

REVSH: Reverse byte order in the bottom halfword, and sign extends to 32 bits.

RBIT: Reverse the bit order in a 32-bit word.

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rd' is the destination register.
- 'Rn' is the register holding the operand.

Operation

Use these instructions to change endianness of data:

- REV: Converts either:
 - 32-bit big-endian data into little-endian data
 - or 32-bit little-endian data into big-endian data.
- REV16: Converts either:
 - 16-bit big-endian data into little-endian data
 - or 16-bit little-endian data into big-endian data.
- REVSH: Converts either:
 - 16-bit signed big-endian data into 32-bit signed little-endian data
 - or 16-bit signed little-endian data into 32-bit signed big-endian data.

Restrictions

Do not use either SP or PC.

Condition flags

These instructions do not change the flags.

Examples

```
REV R3, R7 ; reverse byte order of value in R7 and write it to R3
REV16 R0, R0 ; reverse byte order of each 16-bit halfword in R0
REVSH R0, R5 ; reverse Signed Halfword
REVHS R3, R7 ; reverse with Higher or Same condition
RBIT R7, R8 ; reverse bit order of value in R8 and write result to R7
```



3.5.9 SADD16 and SADD8

Signed Add 16 and Signed Add 8

Syntax

```
op\{cond\}\{Rd,\} Rn, Rm
```

Where:

• op is any of the following:

SADD16: Performs two 16-bit signed integer additions.

SADD8: Performs four 8-bit signed integer additions.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the register holding the operand.
- 'Rm' is the second register holding the operand.

Operation

Use these instructions to perform a halfword or byte add in parallel:

The SADD16 instruction:

- Adds each halfword from the first operand to the corresponding halfword of the second operand.
- 2. Writes the result in the corresponding halfwords of the destination register.

The SADD8 instruction:

- Adds each byte of the first operand to the corresponding byte of the second operand.
- 2. Writes the result in the corresponding bytes of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
SADD16 R1, R0 ; Adds the halfwords in R0 to the corresponding halfword ; of R1 and writes to corresponding halfword of R1.

SADD8 R4, R0, R5 ; Adds bytes of R0 to the corresponding byte in R5 and ; writes to the corresponding byte in R4.
```

PM0214 Rev 10 93/262

3.5.10 SHADD16 and SHADD8

Signed Halving Add 16 and Signed Halving Add 8

Syntax

```
op\{cond\}\{Rd,\} Rn, Rm
```

Where:

op is any of the following:

SHADD16: Signed halving add 16. SHADD8: Signed halving add 8.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the register holding the operand.
- 'Rm' is the second operand register.

Operation

Use these instructions to add 16-bit and 8-bit data and then to halve the result before writing the result to the destination register:

The SHADD16 instruction:

- Adds each halfword from the first operand to the corresponding halfword of the second operand.
- 2. Shuffles the result by one bit to the right, halving the data.
- 3. Writes the halfword results in the destination register.

The SHADDB8 instruction:

- 1. Adds each byte of the first operand to the corresponding byte of the second operand.
- 2. Shuffles the result by one bit to the right, halving the data.
- Writes the byte results in the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
SHADD16 R1, R0 ; Adds halfwords in R0 to corresponding halfword of R1 & ; writes halved result to corresponding halfword in R1 SHADD8 R4, R0, R5 ; Adds bytes of R0 to corresponding byte in R5 and ; writes halved result to corresponding byte in R4.
```



3.5.11 SHASX and SHSAX

Signed Halving Add and Subtract with Exchange / Signed Halving Subtract and Add with Exchange.

Syntax

```
op{cond} {Rd}, Rn, Rm
```

Where:

- op is any of the following:
 - SHASX: Add and subtract with exchange and halving. SHSAX: Subtract and add with exchange and halving.
- 'cond' is an optional condition code (see Conditional execution on page 65):
- 'Rd' is the destination register:
- 'Rn' is the register holding the operand:
- 'Rn', 'Rm' are the registers holding the first and second operands:

Operation

The SHASX instruction:

- 1. Adds the top halfword of the first operand to the bottom halfword of second operand.
- 2. Writes the halfword result of the addition to the top halfword of the destination register, shifted by one bit to the right, causing a divide by two, or halving.
- 3. Subtracts the top halfword of the second operand from the bottom highword of the first operand.
- 4. Writes the halfword result of the division in the bottom halfword of the destination register, shifted by one bit to the right, causing a divide by two, or halving.

The SHSAX instruction:

- 1. Subtracts the bottom halfword of the second operand from the top highword of the first operand.
- 2. Writes the halfword result of the addition to the bottom halfword of the destination register, shifted by one bit to the right, causing a divide by two, or halving.
- 3. Adds the bottom halfword of the first operand to the top halfword of the second operand.
- 4. Writes the halfword result of the division in the top halfword of the destination register, shifted by one bit to the right, causing a divide by two, or halving.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
SHASX R7, R4, R2; Adds top halfword of R4 to bottom halfword of R2; and writes halved result to top halfword of R7; Subtracts top halfword of R2 from bottom halfword of
```



PM0214 Rev 10 95/262

```
; R4 and writes halved result to bottom halfword of R7 SHSAX R0, R3, R5; Subtracts bottom halfword of R5 from top halfword ; of R3 and writes halved result to top halfword of R0; Adds top halfword of R5 to bottom halfword of R3 and ; writes halved result to bottom halfword of R0.
```

3.5.12 SHSUB16 and SHSUB8

Signed Halving Subtract 16 and Signed Halving Subtract 8

Syntax

```
op{cond}{Rd,} Rn, Rm
```

Where:

· op is any of the following:

SHSUB16: Signed halving subtract 16 SHSUB8: Signed halving subtract 8

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register
- 'Rn' is the register holding the operand
- 'Rm' is the second operand register

Operation

Use these instructions to add 16-bit and 8-bit data and then to halve the result before writing the result to the destination register:

The SHSUB16 instruction:

- Subtracts each halfword of the second operand from the corresponding halfwords of the first operand.
- 2. Shuffles the result by one bit to the right, halving the data.
- 3. Writes the halved halfword results in the destination register.

The SHSUBB8 instruction:

- 1. Subtracts each byte of the second operand from the corresponding byte of the first operand,
- 2. Shuffles the result by one bit to the right, halving the data,
- 3. Writes the corresponding signed byte results in the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
SHSUB16 R1, R0 ; Subtracts halfwords in R0 from corresponding halfword ; of R1 and writes to corresponding halfword of R1 SHSUB8 R4, R0, R5 ; Subtracts bytes of R0 from corresponding byte in R5,
```



; and writes to corresponding byte in R4.

3.5.13 SSUB16 and SSUB8

Signed Subtract 16 and Signed Subtract 8

Syntax

```
op{cond}{Rd,} Rn, Rm
```

Where:

- op is one of the following:
- SSUB16: Performs two 16-bit signed integer subtractions.
 - SSUB8: Performs four 8-bit signed integer subtractions.
- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the register holding the operand.
- 'Rm' is the second operand register.

Operation

Use these instructions to change endianness of data:

The SSUB16 instruction:

- 1. Subtracts each halfword from the second operand from the corresponding halfword of the first operand.
- 2. Writes the difference result of two signed halfwords in the corresponding halfword of the destination register.

The SSUB8 instruction:

- 1. Subtracts each byte of the second operand from the corresponding byte of the first operand.
- 2. Writes the difference result of four signed bytes in the corresponding byte of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
SSUB16 R1, R0 ; Subtracts halfwords in R0 from corresponding halfword ; of R1 and writes to corresponding halfword of R1 SSUB8 R4, R0, R5 ; Subtracts bytes of R5 from corresponding byte in ; R0, and writes to corresponding byte of R4.
```

PM0214 Rev 10 97/262

3.5.14 SASX and SSAX

Signed Add and Subtract with Exchange and Signed Subtract and Add with Exchange.

Syntax

```
op{cond} {Rd}, Rm, Rn
```

Where:

- op is any of the following:
 - SASX: Signed add and subtract with exchange.
 - SSAX: Signed subtract and add with exchange.
- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn', 'Rm' are the registers holding the first and second operands.

Operation

The SASX instruction:

- Adds the signed top halfword of the first operand with to the signed bottom halfword of the second operand.
- 2. Writes the signed result of the addition to the top halfword of the destination register.
- 3. Subtracts the signed bottom halfword of the second operand from the top signed highword of the first operand.
- 4. Writes the signed result of the subtraction to the bottom halfword of the destination register.

The SSAX instruction:

- 1. Subtracts the signed bottom halfword of the second operand from the top signed highword of the first operand.
- 2. Writes the signed result of the addition to the bottom halfword of the destination register.
- 3. Adds the signed top halfword of the first operand to the signed bottom halfword of the second operand.
- Writes the signed result of the subtraction to the top halfword of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
SASX R0, R4, R5 ; Adds top halfword of R4 to bottom halfword of R5 and ; writes to top halfword of R0 ; Subtracts bottom halfword of R5 from top halfword of R4 ; and writes to bottom halfword of R0 SSAX R7, R3, R2 ; Subtracts top halfword of R2 from bottom halfword of R3 ; and writes to bottom halfword of R7
```



```
; Adds top halfword of R3 with bottom halfword of R2 and ; writes to top halfword of R7.
```

3.5.15 TST and TEQ

Test bits and Test Equivalence.

Syntax

```
TST{cond} Rn, Operand2
TEQ{cond} Rn, Operand2
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rn' is the register holding the first operand.
- 'Operand2' is a flexible second operand (see Flexible second operand on page 60) for details of the options.

Operation

These instructions test the value in a register against *operand2*. They update the condition flags based on the result, but do not write the result to a register.

The TST instruction performs a bitwise AND operation on the value in *Rn* and the value of *operand2*. This is the same as the ANDS instruction, except that it discards the result.

To test whether a bit of *Rn* is 0 or 1, use the TST instruction with an *operand2* constant that has that bit set to 1 and all other bits cleared to 0.

The TEQ instruction performs a bitwise exclusive OR operation on the value in *Rn* and the value of *operand2*. This is the same as the EORS instruction, except that it discards the result.

Use the TEQ instruction to test if two values are equal without affecting the V or C flags.

TEQ is also useful for testing the sign of a value. After the comparison, the N flag is the logical exclusive OR of the sign bits of the two operands.

Restrictions

Do not use either SP or PC.

Condition flags

These instructions:

- Update the N and Z flags according to the result
- Can update the C flag during the calculation of operand2 (see Flexible second operand on page 60).
- Do not affect the V flag

Examples

```
TST R0, #0x3F8 ; perform bitwise AND of R0 value to 0x3F8,
; APSR is updated but result is discarded
TEQEQ R10, R9 ; conditionally test if value in R10 is equal to
; value in R9, APSR is updated but result is discarded
```



PM0214 Rev 10 99/262

3.5.16 **UADD16** and **UADD8**

Unsigned Add 16 and Unsigned Add 8

Syntax

```
op{cond}{Rd,} Rn, Rm
```

Where:

• op is one of the following:

UADD16: Performs two 16-bit unsigned integer additions.

UADD8: Performs four 8-bit unsigned integer additions.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the first register holding the operand.
- 'Rm' is the second register holding the operand.

Operation

Use these instructions to add 16- and 8-bit unsigned data:

The UADD16 instruction:

- Adds each halfword from the first operand to the corresponding halfword of the second operand.
- 2. Writes the unsigned result in the corresponding halfwords of the destination register.

The UADD16 instruction:

- Adds each byte of the first operand to the corresponding byte of the second operand.
- 2. Writes the unsigned result in the corresponding byte of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
UADD16 R1, R0 ; Adds halfwords in R0 to corresponding halfword of R1, ; writes to corresponding halfword of R1

UADD8 R4, R0, R5 ; Adds bytes of R0 to corresponding byte in R5 and writes ; to corresponding byte in R4.
```



3.5.17 UASX and USAX

Add and Subtract with Exchange and Subtract and Add with Exchange.

Syntax

```
op{cond} {Rd}, Rn, Rm
```

Where:

- op is one of:
 - UASX: Add and subtract with exchange.
 - USAX: Subtract and add with exchange.
- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' 'Rm' are registers holding the first and second operands.

Operation

The UASX instruction:

- Subtracts the top halfword of the second operand from the bottom halfword of the first operand.
- 2. Writes the unsigned result from the subtraction to the bottom halfword of the destination register.
- 3. Adds the top halfword of the first operand with bottom halfword of the second operand.
- Writes the unsigned result of the addition to the top halfword of the destination register.

The USAX instruction:

- Adds the bottom halfword of the first operand to the top halfword of the second operand.
- 2. Writes the unsigned result of the addition to the bottom halfword of the destination register.
- 3. Subtracts the bottom halfword of the second operand from the top halfword of the first operand.
- 4. Writes the unsigned result from the subtraction to the top halfword of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
UASX R0, R4, R5 ; Adds top halfword of R4 to bottom halfword of R5 and ; writes to top halfword of R0 ; Subtracts bottom halfword of R5 from top halfword of R0 ; and writes to bottom halfword of R0 USAX R7, R3, R2 ; Subtracts top halfword of R2 from bottom halfword of R3 ; and writes to bottom halfword of R7 ; Adds top halfword of R3 to bottom halfword of R2 and
```

577

PM0214 Rev 10 101/262

; writes to top halfword of R7.

3.5.18 **UHADD16** and **UHADD8**

Unsigned Halving Add 16 and Unsigned Halving Add 8

Syntax

```
op{cond}{Rd,} Rn, Rm
```

Where:

- op is any of the following:
 - UHADD16: Unsigned halving add 16.
 - UHADD8: Unsigned halving add 8.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn' is the register holding the first operand.
- 'Rm' is the register holding the second operand.

Operation

Use these instructions to add 16- and 8-bit data and then to halve the result before writing the result to the destination register:

The UHADD16 instruction:

- Adds each halfword from the first operand to the corresponding halfword of the second operand.
- 2. Shuffles the halfword result by one bit to the right, halving the data.
- 3. Writes the unsigned results to the corresponding halfword in the destination register.

The UHADD8 instruction:

- 1. Adds each byte of the first operand to the corresponding byte of the second operand.
- 2. Shuffles the byte result by one bit to the right, halving the data.
- 3. Writes the unsigned results in the corresponding byte in the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
UHADD16 R7, R3 ; Adds halfwords in R7 to corresponding halfword of R3 & ; writes halved result to corresponding halfword in R7 UHADD8 R4, R0, R5; Adds bytes of R0 to corresponding byte in R5 and writes ; halved result to corresponding byte in R4.
```



3.5.19 UHASX and UHSAX

Unsigned Halving Add and Subtract with Exchange and Unsigned Halving Subtract and Add with Exchange.

Syntax

```
op{cond} {Rd}, Rn, Rm
```

Where:

- op is one of the following:
 - UHASX: Add and subtract with exchange and halving.
 - UHSAX: Subtract and add with exchange and halving.
- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' 'Rm' are registers holding the first and second operands.

Operation

The UHASX instruction:

- Adds the top halfword of the first operand to the bottom halfword of second operand.
- Shifts the result by one bit to the right, causing a divide by two, or halving.
- Writes the halfword result of the addition to the top halfword of the destination register.
- 4. Subtracts top halfword of second operand from bottom highword of the first operand.
- 5. Shifts the result by one bit to the right, causing a divide by two, or halving.
- Writes halfword result of the division in the bottom halfword of the destination register.

The UHSAX instruction:

- 1. Subtracts the bottom halfword of the second operand from the top highword of the first operand.
- 2. Shifts the result by one bit to the right, causing a divide by two, or halving.
- 3. Writes halfword result of the subtraction in the top halfword of the destination register.
- 4. Adds the bottom halfword of the first operand to the top halfword of the second operand.
- 5. Shifts the result by one bit to the right, causing a divide by two, or halving.
- 6. Writes halfword result of the addition to the bottom halfword of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
UHASX R7, R4, R2 ; Adds top halfword of R4 with bottom halfword of R2 ; and writes halved result to top halfword of R7 ; Subtracts top halfword of R2 from bottom halfword of ; R7 and writes halved result to bottom halfword of R7
```



PM0214 Rev 10 103/262

```
UHSAX R0, R3, R5 ; Subtracts bottom halfword of R5 from top halfword of ; R3 and writes halved result to top halfword of R0 ; Adds top halfword of R5 to bottom halfword of R3 and ; writes halved result to bottom halfword of R0.
```

3.5.20 UHSUB16 and UHSUB8

Unsigned Halving Subtract 16 and Unsigned Halving Subtract 8

Syntax

```
op{cond}{Rd,} Rn, Rm
```

Where:

op is any of the following:

UHSUB16: Performs two unsigned 16-bit integer additions, halves the results, and writes the results to the destination register.

UHSUB8: Performs four unsigned 8-bit integer additions, halves the results, and writes the results to the destination register.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the first register holding the operand.
- 'Rm' is the second register holding the operand.

Operation

Use these instructions to add 16-bit and 8-bit data and then to halve the result before writing the result to the destination register:

The UHSUB16 instruction:

- 1. Subtracts each halfword of the second operand from the corresponding halfword of the first operand.
- 2. Shuffles each halfword result to the right by one bit, halving the data.
- 3. Writes each unsigned halfword result to corresponding halfword in destination register.

The UHSUB8 instruction:

- 1. Subtracts each byte of second operand from the corresponding byte of the first operand.
- Shuffles each byte result by one bit to the right, halving the data.
- 3. Writes the unsigned byte results to the corresponding byte of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
UHSUB16 R1, R0 ; Subtracts halfwords in R0 from corresponding R1 halfword ; and writes halved result to corresponding halfword in R1
```



UHSUB8 R4, R0, R5; Subtracts bytes of R5 from corresponding byte in R0 and ; writes halved result to corresponding byte in R4.

3.5.21 SEL

Select bytes. Selects each byte of its result from either its first operand or its second operand, according to the values of the GE flags.

Syntax

Where:

- <c>, <q> are standard assembler syntax fields.
- <Rd> is the destination register.
- <Rn> is the first operand register.
- <Rm> is the second operand register.

Operation

The SEL instruction:

- 1. Reads the value of each bit of APSR.GE.
- 2. Assigns the destination register the value of either the first or second operand register, depending on the value of APSR.GE.

Restrictions

None.

Condition flags

These instructions do not change the flags.

Examples

```
SADD16 R0, R1, R2 ; Set GE bits based on result SEL R0, R0, R3 ; Select bytes from R0 or R3, based on GE.
```

57

PM0214 Rev 10 105/262

3.5.22 USAD8

Unsigned Sum of Absolute Differences

Syntax

```
USAD8{cond}{Rd,} Rn, Rm
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the first operand register.
- 'Rm' is the second operand register.

Operation

The USAD8 instruction:

- Subtracts each byte of the second operand register from the corresponding byte of the first operand register.
- 2. Adds the absolute values of the differences together.
- 3. Writes the result to the destination register.

Restrictions

Do not use either SP or use PC.

Condition flags

These instructions do not change the flags.

Examples

```
USAD8 R1, R4, R0 ; Subtracts each byte in R0 from corresponding byte of ; R4 adds the differences and writes to R1

USAD8 R0, R5 ; Subtracts bytes of R5 from corresponding byte in R0, ; adds the differences and writes to R0.
```



3.5.23 USADA8

Unsigned Sum of Absolute Differences and Accumulate

Syntax

```
USADA8{cond}{Rd,} Rn, Rm, Ra
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the first operand register.
- 'Rm' is the second operand register.
- 'Ra' is the register that contains the accumulation value.

Operation

The USADA8 instruction:

- Subtracts each byte of the second operand register from the corresponding byte of the first operand register.
- 2. Adds the unsigned absolute differences together.
- 3. Adds the accumulation value to the sum of the absolute differences.
- 4. Writes the result to the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not change the flags.

Examples

```
USADA8 R1, R0, R6 ; Subtracts bytes in R0 from corresponding halfword of R1 ; adds differences, adds value of R6, writes to R1

USADA8 R4, R0, R5, R2 ; Subtracts bytes of R5 from corresponding byte in R0 ; adds differences, adds value of R2 writes to R4.
```

PM0214 Rev 10 107/262

3.5.24 USUB16 and USUB8

Unsigned Subtract 16 and Unsigned Subtract 8

Syntax

```
op{cond}{Rd,} Rn, Rm
```

Where:

• op is any of:

USUB16: Unsigned Subtract 16. USUB8: Unsigned Subtract 8.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register
- 'Rn' is the register holding the operand
- 'Rm' is the second operand register

Operation

Use these instructions to subtract 16-bit and 8-bit data before writing the result to the destination register:

The USUB16 instruction:

- Subtracts each halfword from the second operand register from the corresponding halfword of the first operand register.
- 2. Writes the unsigned result in the corresponding halfwords of the destination register.

The USUB8 instruction:

- 1. Subtracts each byte of the second operand register from the corresponding byte of the first operand register.
- 2. Writes the unsigned byte result in the corresponding byte of the destination register.

Restrictions

Do not use either SP or PC.

Condition flags

These instructions do not change the flags.

Examples

```
USUB16 R1, R0 ; Subtracts halfwords in R0 from corresponding halfword of ; R1 and writes to corresponding halfword in R1

USUB8 R4, R0, R5 ; Subtracts bytes of R5 from corresponding byte in R0 and ; writes to the corresponding byte in R4.
```



3.6 Multiply and divide instructions

Table 29 shows the multiply and divide instructions.

Table 29. Multiply and divide instructions

| Mnemonic | Brief description | See |
|-----------------|---|------------------------------------|
| MLA | Multiply with Accumulate, 32-bit result | MUL, MLA, and MLS on page 110 |
| MLS | Multiply and Subtract, 32-bit result | MUL, MLA, and MLS on page 110 |
| MUL | Multiply, 32-bit result | MUL, MLA, and MLS on page 110 |
| SDIV | Signed Divide | SDIV and UDIV on page 124 |
| SMLA[B,T] | Signed Multiply Accumulate (halfwords) | SMLA and SMLAW on page 112 |
| SMLAD, SMLADX | Signed Multiply Accumulate dual | SMLAD on page 114 |
| SMLAL | Signed Multiply with Accumulate (32x32+64), 64-bit result | SMLAL and SMLALD on page 115 |
| SMLAL[B,T] | Signed Multiply Accumulate Long (halfwords) | SMLAL and SMLALD on page 115 |
| SMLALD, SMLALDX | Signed Multiply Accumulate Long Dual | SMLAL and SMLALD on page 115 |
| SMLAW[B T] | Signed Multiply Accumulate (word by halfword) | SMLA and SMLAW on page 112 |
| SMLSD | Signed Multiply Subtract Dual | SMLSD and SMLSLD on page 117 |
| SMLSLD | Signed Multiply Subtract Long Dual | SMLSD and SMLSLD on page 117 |
| SMMLA | Signed Most Significant Word Multiply Accumulate | SMMLA and SMMLS on page 119 |
| SMMLS, SMMLSR | Signed Most Significant Word Multiply Subtract | SMMLA and SMMLS on page 119 |
| SMUAD, SMUADX | Signed dual multiply add | SMUAD and SMUSD on page 121 |
| SMUL[B,T] | Signed multiply (word by halfword) | SMUL and SMULW on page 122 |
| SMMUL, SMMULR | Signed most significant word multiply | SMMUL on page 120 |
| SMULL | Signed multiply (32x32), 64-bit result | SMMUL on page 120 |
| SMULWB, SMULWT | Signed multiply (word by halfword) | SMUL and SMULW on page 122 |
| SMUSD, SMUSDX | Signed dual multiply subtract | SMUAD and SMUSD on page 121 |
| UDIV | Unsigned Divide | SMLA and SMLAW on page 112 |
| UMAAL | Unsigned Multiply Accumulate Accumulate Long (32x32+32+32), 64-bit result | UMULL, UMAAL and UMLAL on page 111 |
| UMLAL | Unsigned Multiply with Accumulate (32x32+64), 64-bit result | UMULL, UMAAL and UMLAL on page 111 |
| UMULL | Unsigned Multiply (32x32), 64-bit result | UMULL, UMAAL and UMLAL on page 111 |



PM0214 Rev 10 109/262

3.6.1 MUL, MLA, and MLS

Multiply, Multiply with Accumulate, and Multiply with Subtract, using 32-bit operands, and producing a 32-bit result.

Syntax

```
MUL{S}{cond} {Rd,} Rn, Rm ; Multiply
MLA{cond} Rd, Rn, Rm, Ra ; Multiply with accumulate
MLS{cond} Rd, Rn, Rm, Ra ; Multiply with subtract
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'S' is an optional suffix. If S is specified, the condition code flags are updated on the result of the operation (see *Conditional execution on page 65*).
- 'Rd' is the destination register. If Rd is omitted, the destination register is Rn.
- 'Rn', 'Rm' are registers holding the values to be multiplied.
- 'Ra' is a register holding the value to be added to or subtracted from.

Operation

The MUL instruction multiplies the values from *Rn* and *Rm*, and places the least significant 32 bits of the result in *Rd*.

The MLA instruction multiplies the values from Rn and Rm, adds the value from Ra, and places the least significant 32 bits of the result in Rd.

The MLS instruction multiplies the values from Rn and Rm, subtracts the product from the value from Ra, and places the least significant 32 bits of the result in Rd.

The results do not depend on whether the operands are signed or unsigned.

Restrictions

In these instructions, do not use either SP or PC.

If you use the S suffix with the MUL instruction:

- Rd, Rn, and Rm must all be in the range R0 to R7
- Rd must be the same as Rm
- You must not use the cond suffix

Condition flags

If S is specified, the MUL instruction:

- Updates the N and Z flags according to the result.
- Does not affect the C and V flags.

Examples

```
MUL R10, R2, R5 ; multiply, R10 = R2 \times R5 
MLA R10, R2, R1, R5 ; multiply with accumulate, R10 = (R2 \times R1) + R5 
MULS R0, R2, R2 ; multiply with flag update, R0 = R2 \times R2 
MULLT R2, R3, R2 ; conditionally multiply, R2 = R3 \times R2 
MLS R4, R5, R6, R7 ; multiply with subtract, R4 = R7 - (R5 \times R6)
```



3.6.2 UMULL, UMAAL and UMLAL

Unsigned Long Multiply, with Optional Accumulate, 32-bit operands, producing a 64-bit result.

Syntax

```
op{cond} RdLo, RdHi, Rn, Rm
```

Where:

'op' is one of the following:

UMULL: Unsigned long multiply.

UMAAL: Unsigned long multiply, with accumulate accumulate.

UMLAL: Unsigned long multiply, with accumulate

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'RdHi, RdLo' are the destination registers. They also hold the accumulating value.
- 'Rn, Rm' are registers holding the first and second operands.

Operation

The UMULL instruction:

- 1. Multiplies the two unsigned integers in the first and second operands.
- 2. Writes the least significant 32 bits of the result in RdLo.
- 3. Writes the most significant 32 bits of the result in *RdHi*.

The UMAAL instruction:

- 1. Multiplies the two unsigned 32-bit integers in the first and second operands.
- 2. Adds the unsigned 32-bit integer in *RdHi* to the 64-bit result of the multiplication.
- 3. Adds the unsigned 32-bit integer in RdLo to the 64-bit result of the addition.
- 4. Writes the top 32-bits of the result to *RdHi*.
- 5. Writes the lower 32-bits of the result to RdLo.

The UMLAL instruction:

- 1. Multiplies the two unsigned integers in the first and second operands.
- 2. Adds the 64-bit result to the 64-bit unsigned integer contained in RdHi and RdLo.
- 3. Writes the result back to RdHi and RdLo.

Restrictions

In these instructions:

- Do not use either SP or PC.
- RdHi and RdLo must be different registers.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
UMULL R0, R4, R5, R6; Multiplies R5 and R6, writes the top 32 bits to R4; and the bottom 32 bits to R0

UMAAL R3, R6, R2, R7; Multiplies R2 and R7, adds R6, adds R3, writes the
```



PM0214 Rev 10 111/262

```
; top 32 bits to R6, and the bottom 32 bits to R3 UMLAL R2, R1, R3, R5; Multiplies R5 and R3, adds R1:R2, writes to R1:R2.
```

3.6.3 SMLA and SMLAW

Signed Multiply Accumulate (halfwords).

Syntax

```
op{XY}{cond} Rd, Rn, Rm
op{Y}{cond} Rd, Rn, Rm, Ra
```

Where

op is one of the following:

SMLA: Signed multiply accumulate long (halfwords). X and Y specifies which half of the source registers *Rn* and *Rm* are used as the first and second multiply operand.

- If X is B, then the bottom halfword, bits [15:0], of Rn is used.
- If X is T, then the top halfword, bits [31:16], of Rn is used.
- If Y is B, then the bottom halfword, bits [15:0], of Rm is used.
- If Y is T, then the top halfword, bits [31:16], of Rm is used.

SMLAW: Signed multiply accumulate (word by halfword). Y specifies which half of the source *Rm* register is used as the second multiply operand.

- If Y is T, then the top halfword, bits [31:16] of Rm is used.
- If Y is B, then the bottom halfword, bits [15:0] of Rm is used.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register. If Rd is omitted, the destination register is Rn.
- 'Rn', 'Rm' are registers holding the values to be multiplied.
- 'Ra' is a register holding the value to be added to or subtracted from.

Operation

The SMALBB, SMLABT, SMLATB, SMLATT instructions:

- 1. Multiply the specified signed halfword, top or bottom, values from *Rn* and *Rm*.
- 2. Add the value in Ra to the resulting 32-bit product.
- 3. Write the result of the multiplication and addition in Rd.
- 4. The non-specified halfwords of the source registers are ignored.

The SMLAWB and SMLAWT instructions:

- 1. Multiply the 32-bit signed values in Rn with:
 - a) The top signed halfword of Rm, T instruction suffix.
 - b) The bottom signed halfword of Rm, B instruction suffix.
- 2. Add the 32-bit signed value in Ra to the top 32 bits of the 48-bit product.
- 3. Write the result of the multiplication and addition in Rd.
- 4. The bottom 16 bits of the 48-bit product are ignored.
- 5. If overflow occurs during the addition of the accumulate value, the instruction sets the Q flag in the APSR. No overflow can occur during the multiplication.

Restrictions

In these instructions, do not use SP or PC.



Condition flags

If an overflow is detected, the Q flag is set.

Examples

```
SMLABB R5, R6, R4, R1; Multiplies bottom halfwords of R6 and R4, adds; R1 and writes to R5

SMLATB R5, R6, R4, R1; Multiplies top halfword of R6 with bottom halfword; of R4, adds R1 and writes to R5

SMLATT R5, R6, R4, R1; Multiplies top halfwords of R6 and R4, adds; R1 and writes the sum to R5

SMLABT R5, R6, R4, R1; Multiplies bottom halfword of R6 with top halfword; of R4, adds R1 and writes to R5

SMLABT R4, R3, R2; Multiplies bottom halfword of R4 with top halfword; of R3, adds R2 and writes to R4

SMLAWB R10, R2, R5, R3; Multiplies R2 with bottom halfword of R5, adds; R3 to the result and writes top 32-bits to R10

SMLAWT R10, R2, R1, R5; Multiplies R2 with top halfword of R1, adds R5; and writes top 32-bits to R10.
```



PM0214 Rev 10 113/262

3.6.4 SMLAD

Signed Multiply Accumulate Long Dual

Syntax

```
op{X}{cond} Rd, Rn, Rm, Ra ;
Where:
```

op is one of the following:

SMLAD: Signed multiply accumulate dual.

SMLADX: Signed multiply accumulate dual reverse. X specifies which halfword of the source register *Rn* is used as the multiply operand.

If X is omitted, the multiplications are bottom \times bottom and top \times top.

If X is present, the multiplications are bottom × top and top × bottom.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn' is the first operand register holding the values to be multiplied.
- 'Rm' is the second operand register.
- 'Ra' is the accumulate value.

Operation

The SMLAD and SMLADX instructions regard the two operands as four halfword 16-bit values. The SMLAD and SMLADX instructions:

- 1. Either:
 - a) If X is not present, multiply the top signed halfword value in *Rn* with the top signed halfword of *Rm* and the bottom signed halfword values in *Rn* with the bottom signed halfword of *Rm*.
 - b) If X is present, multiply the top signed halfword value in *Rn* with the bottom signed halfword of *Rm* and the bottom signed halfword values in *Rn* with the top signed halfword of *Rm*.
- 2. Add both multiplication results to the signed 32-bit value in *Ra*.
- 3. Write the 32-bit signed result of the multiplication and addition to Rd.

Restrictions

Do not use either SP or PC.

Condition flags

These instructions do not change the flags.

Examples

```
SMLAD R10, R2, R1, R5; Multiplies two halfword values in R2 with

; corresponding halfwords in R1, adds R5 and writes

; to R10

SMLALDX R0, R2, R4, R6; Multiplies top halfword of R2 with bottom halfword

; of R4, multiplies bottom halfword of R2 with top

; halfword of R4, adds R6 and writes to R0.
```



3.6.5 SMLAL and SMLALD

Signed Multiply Accumulate Long, Signed Multiply Accumulate Long (halfwords) and Signed Multiply Accumulate Long Dual.

Syntax

```
op{cond} RdLo, RdHi, Rn, Rm
op{XY}{cond} RdLo, RdHi, Rn, Rm
op{X}{cond} RdLo, RdHi, Rn, Rm
```

Where:

- op is one of the following:
 - SMLAL: Signed multiply accumulate long.
 - SMLAL: Signed multiply accumulate long (halfwords, X and Y). X and Y specify which halfword of the source registers Rn and Rm are used as the first and second multiply operand:

If X is B, then the bottom halfword, bits [15:0], of Rn is used.

If X is T, then the top halfword, bits [31:16], of Rn is used.

If Y is B, then the bottom halfword, bits [15:0], of Rm is used.

If Y is T, then the top halfword, bits [31:16], of Rm is used.

- SMLALD: Signed multiply accumulate long Dual.
- SMLALDX: Signed multiply accumulate long dual reversed:
 If the X is omitted, the multiplications are bottom × bottom and top × top.
 If X is present, the multiplications are bottom × top and top × bottom.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'RdHi, RdLo' are the destination registers. RdLo is the lower 32 bits and RdHi is the upper 32 bits of the 64-bit integer. For SMLAL, SMLALBB, SMLALBT, SMLALTB, SMLALTT, SMLALD and SMLALDX, they also hold the accumulating value.
- 'Rn', 'Rm' are registers holding the first and second operands

Operation

The SMLAL instruction:

- 1. Multiplies the two's complement signed word values from *Rn* and *Rm*.
- 2. Adds the 64-bit value in *RdLo* and *RdHi* to the resulting 64-bit product.
- 3. Writes the 64-bit result of the multiplication and addition in RdLo and RdHi.

The SMLALBB, SMLALBT, SMLALTB and SMLALTT instructions:

- 1. Multiplies the specified signed halfword, top or bottom, values from *Rn* and *Rm*.
- 2. Adds the resulting sign-extended 32-bit product to the 64-bit value in RdLo and RdHi.
- 3. Writes the 64-bit result of the multiplication and addition in RdLo and RdHi.

The non-specified halfwords of the source registers are ignored.



PM0214 Rev 10 115/262

The SMLALD and SMLALDX instructions interpret the values from *Rn* and *Rm* as four halfword two's complement signed 16-bit integers. These instructions:

- If X is not present, multiply the top signed halfword value of *Rn* with the top signed halfword of *Rm* and the bottom signed halfword values of *Rn* with the bottom signed halfword of *Rm*.
- Or if X is present, multiply the top signed halfword value of *Rn* with the bottom signed halfword of *Rm* and the bottom signed halfword values of *Rn* with the top signed halfword of *Rm*.
- Add the two multiplication results to the signed 64-bit value in RdLo and RdHi to create the resulting 64-bit product.
- Write the 64-bit product in RdLo and RdHi.

Restrictions

In these instructions:

Do not use either SP or PC.

RdHi and RdLo must be different registers.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
SMLAL
       R4, R5, R3, R8; Multiplies R3 and R8, adds R5:R4 and writes to
                       ; R5:R4
SMLALBT R2, R1, R6, R7; Multiplies bottom halfword of R6 with top
                       ; halfword of R7, sign extends to 32-bit, adds
                       ; R1:R2 and writes to R1:R2
SMLALTB R2, R1, R6, R7; Multiplies top halfword of R6 with bottom
                       ; halfword of R7, sign extends to 32-bit, adds R1:R2
                       ; and writes to R1:R2
SMLALD R6, R8, R5, R1; Multiplies top halfwords in R5 and R1 and bottom
                       ; halfwords of R5 and R1, adds R8:R6 and writes to
                       ; R8:R6
SMLALDX R6, R8, R5, R1; Multiplies top halfword in R5 with bottom
                       ; halfword of R1, and bottom halfword of R5 with
                       ; top halfword of R1, adds R8:R6 and writes to
                       ; R8:R6.
```

3.6.6 SMLSD and SMLSLD

Signed Multiply Subtract Dual and Signed Multiply Subtract Long Dual

Syntax

 $op{X}{cond}$ Rd, Rn, Rm, Ra

Where:

· op is one of:

SMLSD: Signed multiply subtract dual.

SMLSDX: Signed multiply subtract dual reversed

SMLSLD: Signed multiply subtract long dual.

SMLSLDX: Signed multiply subtract long dual reversed.

- If X is present, the multiplications are bottom × top and top × bottom.
- If the X is omitted, the multiplications are bottom × bottom and top × top.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn', 'Rm' are registers holding the first and second operands
- 'Ra' is the register holding the accumulate value

Operation

The SMLSD instruction interprets the values from the first and second operands as four signed halfwords. This instruction:

- 1. Optionally rotates the halfwords of the second operand.
- 2. Performs two signed 16 × 16-bit halfword multiplications.
- Subtracts the result of the upper halfword multiplication from the result of the lower halfword multiplication.
- 4. Adds the signed accumulate value to the result of the subtraction.
- 5. Writes the result of the addition to the destination register.

The SMLSLD instruction interprets the values from *Rn* and *Rm* as four signed halfwords.

This instruction:

- 1. Optionally rotates the halfwords of the second operand.
- 2. Performs two signed 16 × 16-bit halfword multiplications.
- Subtracts the result of the upper halfword multiplication from the result of the lower halfword multiplication.
- 4. Adds the 64-bit value in *RdHi* and *RdLo* to the result of the subtraction.
- 5. Writes the 64-bit result of the addition to the *RdHi* and *RdLo*.

Restrictions

In these instructions: Do not use either SP or PC.

Condition flags

This instruction sets the Q flag if the accumulate operation overflows. Overflow cannot occur during the multiplications or subtraction.



PM0214 Rev 10 117/262

For the Thumb instruction set, these instructions do not affect the condition code flags.

Examples

```
SMLS
       RO, R4, R5, R6; Multiplies bottom halfword of R4 with bottom
                       ; halfword of R5, multiplies top halfword of R4
                       ; with top halfword of R5, subtracts second from
                       ; first, adds R6, writes to R0
SMLSDX R1, R3, R2, R0 ; Multiplies bottom halfword of R3 with top
                       ; halfword of R2, multiplies top halfword of R3
                       ; with bottom halfword of R2, subtracts second from
                       ; first, adds R0, writes to R1
SMLSLD R3, R6, R2, R7; Multiplies bottom halfword of R6 with bottom
                       ; halfword of R2, multiplies top halfword of R6
                       ; with top halfword of R2, subtracts second from
                       ; first, adds R6:R3, writes to R6:R3
SMLSLDX R3, R6, R2, R7; Multiplies bottom halfword of R6 with top
                       ; halfword of R2, multiplies top halfword of R6
                       ; with bottom halfword of R2, subtracts second from
                       ; first, adds R6:R3, writes to R6:R3.
```



3.6.7 SMMLA and SMMLS

Signed Most Significant Word Multiply Accumulate and Signed Most Significant Word Multiply Subtract.

Syntax

```
op{R}{cond} Rd, Rn, Rm, RaWhere:
```

op is one of the following:

SMMLA: Signed most significant word multiply accumulate. SMMLS: Signed most significant word multiply subtract.

- R is a rounding error flag. If R is specified, the result is rounded instead of being truncated, 0x80000000 is added to the product before the high word is extracted.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn', 'Rm' are registers holding the first and second multiply operands
- 'Ra' is the register holding the accumulate value

Operation

The SMMLA instruction interprets the values from Rn and Rm as signed 32-bit words:

- 1. Multiplies the values in Rn and Rm.
- 2. Optionally rounds the result by adding 0x80000000.
- 3. Extracts the most significant 32 bits of the result.
- 4. Adds the value of Ra to the signed extracted value.
- Writes the result of the addition in Rd.

The SMMLS instruction interprets the values from *Rn* and *Rm* as signed 32-bit words:

- 1. Multiplies the values in Rn and Rm.
- 2. Optionally rounds the result by adding 0x80000000.
- 3. Extracts the most significant 32 bits of the result.
- 4. Subtracts the extracted value of the result from the value in Ra.
- 5. Writes the result of the subtraction in Rd.

Restrictions

In these instructions: Do not use either SP or PC.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
SMMLA R0, R4, R5, R6 ; Multiplies R4 and R5, extracts top 32 bits, ; adds R6, truncates and writes to R0

SMMLAR R6, R2, R1, R4 ; Multiplies R2 and R1, extracts top 32 bits, ; adds R4, rounds and writes to R6

SMMLSR R3, R6, R2, R7 ; Multiplies R6 and R2, extracts top 32 bits, ; subtracts R7, rounds and writes to R3
```

57

PM0214 Rev 10 119/262

```
SMMLS R4, R5, R3, R8 ; Multiplies R5 and R3, extracts top 32 bits, ; subtracts R8, truncates and writes to R4.
```

3.6.8 **SMMUL**

Signed most significant word multiply

Syntax

```
op{R}{cond} Rd, Rn, Rm
```

Where:

op is one of the following:

SMMUL: Signed most significant word multiply.

R: a rounding error flag. If R is specified, the result is rounded instead of being truncated. In this case the constant 0x80000000 is added to the product before the high word is extracted.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'Rn', 'Rm' are registers holding the first and second operands.

Operation

The SMMUL instruction interprets the values from *Rn* and *Rm* as two's complement 32-bit signed integers. The SMMUL instruction:

- 1. Multiplies the values from Rn and Rm.
- 2. Optionally rounds the result, otherwise truncates the result.
- 3. Writes the most significant signed 32 bits of the result in Rd.

Restrictions

In this instruction: Do not use either SP or PC.

Condition flags

This instruction does not affect the condition code flags.

Examples

```
SMULL R0, R4, R5 ; Multiplies R4 and R5, truncates top 32 bits ; and writes to R0

SMULLR R6, R2 ; Multiplies R6 and R2, rounds the top 32 bits ; and writes to R6.
```



3.6.9 SMUAD and SMUSD

Signed Dual Multiply Add and Signed Dual Multiply Subtract

Syntax

```
op{X}{cond} Rd, Rn, Rm
Where:
```

op is one of:

SMUAD: Signed dual multiply add.

SMUADX: Signed dual multiply add reversed.

SMUSD: Signed dual multiply subtract.

SMUSDX: Signed dual multiply subtract reversed.

- If X is present, the multiplications are bottom × top and top × bottom.
 If the X is omitted, the multiplications are bottom × bottom and top × top.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn', 'Rm' are registers holding the first and second operands

Operation

SMUAD interprets first and second operand values as two signed halfwords:

- 1. Optionally rotates the halfwords of the second operand.
- Performs two signed 16 × 16-bit multiplications.
- 3. Adds the two multiplication results together.
- Writes the result of the addition to the destination register.

SMUSD interprets the values from the first and second operands as two's complement signed integers:

- Optionally rotates the halfwords of the second operand.
- 2. Performs two signed 16 × 16-bit multiplications.
- 3. Subtracts the result of the top halfword multiplication from the result of the bottom halfword multiplication.
- 4. Writes the result of the subtraction to the destination register.

Restrictions

In these instructions: Do not use either SP or PC.

Condition flags

Sets the Q flag if the addition overflows. The multiplications cannot overflow.

Examples

```
SMUAD R0, R4, R5; Multiplies bottom halfword of R4 with the bottom; halfword of R5, adds multiplication of top halfword; of R4 with top halfword of R5, writes to R0

SMUADX R3, R7, R4; Multiplies bottom halfword of R7 with top halfword; of R4, adds multiplication of top halfword of R7; with bottom halfword of R4, writes to R3
```



PM0214 Rev 10 121/262

```
SMUSD R3, R6, R2; Multiplies bottom halfword of R4 with bottom halfword ; of R6, subtracts multiplication of top halfword of R6; with top halfword of R3, writes to R3

SMUSDX R4, R5, R3; Multiplies bottom halfword of R5 with top halfword of ; R3, subtracts multiplication of top halfword of R5; with bottom halfword of R3, writes to R4.
```

3.6.10 SMUL and SMULW

Signed Multiply (halfwords) and Signed Multiply (word by halfword)

Syntax

```
op{XY}{cond} Rd, Rn, Rm op{Y}{cond} Rd. Rn, Rm
```

op is one of:

SMUL{XY} Signed multiply (halfwords). X and Y specify which halfword of the source registers *Rn* and *Rm* is used as the first and second multiply operand.

```
If X is B, then the bottom halfword, bits [15:0] of Rn is used.
```

If X is T, then the top halfword, bits [31:16] of Rn is used.

If Y is B, then the bottom halfword, bits [15:0], of Rm is used.

If Y is T, then the top halfword, bits [31:16], of Rm is used.

SMULW{Y} Signed multiply (word by halfword). Y specifies which halfword of the source *Rm* register is used as the second multiply operand.

If Y is B, then the bottom halfword (bits [15:0]) of Rm is used.

If Y is T, then the top halfword (bits [31:16]) of *Rm* is used.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn', 'Rm' are registers holding the first and second operands

Operation

The SMULBB, SMULTB, SMULBT and SMULTT instructions interprets the values from *Rn* and *Rm* as four signed 16-bit integers. These instructions:

- 1. Multiply the specified signed halfword, top or bottom, values from *Rn* and *Rm*.
- 2. Write the 32-bit result of the multiplication in Rd.

The SMULWT and SMULWB instructions interprets the values from *Rn* as a 32-bit signed integer and *Rm* as two halfword 16-bit signed integers. These instructions:

- 1. Multiply the first operand and the top, T suffix, or the bottom, B suffix, halfword of the second operand.
- 2. Write the 32 signed most significant bits of the 48-bit result in the destination register.

Restrictions

Do not use either SP or PC.

Examples

```
SMULBT R0, R4, R5; Multiplies the bottom halfword of R4 with the top
; halfword of R5, multiplies results and writes to R0
```



```
SMULBB R0, R4, R5; Multiplies the bottom halfword of R4 with the bottom; halfword of R5, multiplies results and writes to R0

SMULTT R0, R4, R5; Multiplies the top halfword of R4 with the top; halfword of R5, multiplies results and writes to R0

SMULTB R0, R4, R5; Multiplies the top halfword of R4 with the bottom; halfword of R5, multiplies results and writes to R0

SMULWT R4, R5, R3; Multiplies R5 with the top halfword of R3,; extracts top 32 bits and writes to R4

SMULWB R4, R5, R3; Multiplies R5 with the bottom halfword of R3,; extracts top 32 bits and writes to R4.
```

3.6.11 UMULL, UMLAL, SMULL, and SMLAL

Signed and Unsigned Long Multiply, with optional Accumulate, using 32-bit operands and producing a 64-bit result.

Syntax

```
op{cond} RdLo, RdHi, Rn, Rm
Where:
```

op' is one of:

UMULL: Unsigned long multiply.

UMLAL: Unsigned long multiply, with accumulate.

SMULL: Signed long multiply.

SMLAL: Signed long multiply, with accumulate.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'RdHi, RdLo' are the destination registers. For UMLAL and SMLAL they also hold the accumulating value.
- 'Rn', 'Rm' are registers holding the operands

Operation

The UMULL instruction interprets the values from *Rn* and *Rm* as unsigned integers. It multiplies these integers and places the least significant 32 bits of the result in *RdLo*, and the most significant 32 bits of the result in *RdHi*.

The UMLAL instruction interprets the values from *Rn* and *Rm* as unsigned integers. It multiplies these integers, adds the 64-bit result to the 64-bit unsigned integer contained in *RdHi* and *RdLo*, and writes the result back to *RdHi* and *RdLo*.

The SMULL instruction interprets the values from *Rn* and *Rm* as two's complement signed integers. It multiplies these integers and places the least significant 32 bits of the result in *RdLo*, and the most significant 32 bits of the result in *RdHi*.

The SMLAL instruction interprets the values from *Rn* and *Rm* as two's complement signed integers. It multiplies these integers, adds the 64-bit result to the 64-bit signed integer contained in *RdHi* and *RdLo*, and writes the result back to *RdHi* and *RdLo*.



PM0214 Rev 10 123/262

Restrictions

In these instructions:

- Do not use either SP or PC
- RdHi and RdLo must be different registers.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
UMULL R0, R4, R5, R6 ; Unsigned (R4,R0) = R5 \times R6
SMLAL R4, R5, R3, R8 ; Signed (R5,R4) = (R5,R4) + R3 \times R8
```

3.6.12 SDIV and UDIV

Signed Divide and Unsigned Divide.

Syntax

```
 \begin{array}{lll} & & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ &
```

Where:

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register. If Rd is omitted, the destination register is Rn.
- 'Rn,' is the register holding the value to be divided.
- 'Rm' is a register holding the divisor.

Operation

SDIV performs a signed integer division of the value in Rn by the value in Rm.

UDIV performs an unsigned integer division of the value in Rn by the value in Rm.

For both instructions, if the value in *Rn* is not divisible by the value in *Rm*, the result is rounded towards zero.

Restrictions

Do not use either SP or PC.

Condition flags

These instructions do not change the flags.

Examples

```
SDIV R0, R2, R4; signed divide, R0 = R2/R4 UDIV R8, R8, R1; unsigned divide, R8 = R8/R1
```

3.7 Saturating instructions

This section describes the saturating instructions.

Table 30. Saturating instructions

| Mnemonic | Brief description | See |
|----------|--|-------------------------------|
| SSAT | Signed Saturate | SSAT and USAT on page 126 |
| SSAT16 | Signed Saturate Halfword | SSAT16 and USAT16 on page 127 |
| USAT | Unsigned Saturate | SSAT and USAT on page 126 |
| USAT16 | Unsigned Saturate Halfword | SSAT16 and USAT16 on page 127 |
| QADD | Saturating Add | QADD and QSUB on page 128 |
| QSUB | Saturating Subtract | QADD and QSUB on page 128 |
| QSUB16 | Saturating Subtract 16 | QADD and QSUB on page 128 |
| QASX | Saturating Add and Subtract with Exchange | QASX and QSAX on page 129 |
| QSAX | Saturating Subtract and Add with Exchange | QASX and QSAX on page 129 |
| QDADD | Saturating Double and Add | QDADD and QDSUB on page 130 |
| QDSUB | Saturating Double and Subtract | QDADD and QDSUB on page 130 |
| UQADD16 | Unsigned Saturating Add 16 | UQADD and UQSUB on page 132 |
| UQADD8 | Unsigned Saturating Add 8 | UQADD and UQSUB on page 132 |
| UQASX | Unsigned Saturating Add and Subtract with Exchange | UQASX and UQSAX on page 131 |
| UQSAX | Unsigned Saturating Subtract and Add with Exchange | UQASX and UQSAX on page 131 |
| UQSUB16 | Unsigned Saturating Subtract 16 | UQADD and UQSUB on page 132 |
| UQSUB8 | Unsigned Saturating Subtract 8 | UQADD and UQSUB on page 132 |

For signed *n*-bit saturation, this means that:

- if the value to be saturated is less than -2^{n-1} , the result returned is -2^{n-1}
- if the value to be saturated is greater than $2^{n-1}-1$, the result returned is $2^{n-1}-1$
- otherwise, the result returned is the same as the value to be saturated.

For unsigned *n*-bit saturation, this means that:

- if the value to be saturated is less than 0, the result returned is 0
- if the value to be saturated is greater than 2^{n-1} , the result returned is 2^{n-1}
- otherwise, the result returned is the same as the value to be saturated.

If the returned result is different from the value to be saturated, it is called saturation. If saturation occurs, the instruction sets the Q flag to 1 in the APSR. Otherwise, it leaves the Q flag unchanged. To clear the Q flag to 0, you must use the MSR instruction, see *MSR on page 187*.

To read the state of the Q flag, use the MRS instruction, see MRS on page 186.



PM0214 Rev 10 125/262

3.7.1 SSAT and USAT

Signed Saturate and Unsigned Saturate to any bit position, with optional shift before saturating.

Syntax

```
\texttt{op}\{\texttt{cond}\} \texttt{ Rd, \#n, Rm } \{\texttt{, shift \#s}\}
```

Where:

op' is one of:

SSAT: Saturates a signed value to a signed range.

USAT: Saturates a signed value to an unsigned range.

- 'cond' is an optional condition code (see Conditional execution on page 65).
- 'Rd' is the destination register.
- 'n' specifies the bit position to saturate to:

n ranges from 1 to 32 for SSAT

n ranges from 0 to 31 for USAT.

- 'Rm' is the register containing the value to saturate.
- 'shift #s' is an optional shift applied to Rm before saturating. It must be one of the following:

ASR #s: where s is in the range 1 to 31.

LSL #s: where s is in the range 0 to 31.

Operation

These instructions saturate to a signed or unsigned n-bit value.

The SSAT instruction applies the specified shift, then saturates to the signed range $-2^{n-1} \le x \le 2^{n-1}-1$.

The USAT instruction applies the specified shift, then saturates to the unsigned range $0 \le x \le 2^{n-1}$.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

If saturation occurs, these instructions set the Q flag to 1.

Examples

```
SSAT R7, #16, R7, LSL #4 ; Logical shift left value in R7 by 4, then ; saturate it as a signed 16-bit value and ; write it back to R7

USATNE R0, #7, R5; Conditionally saturate value in R5 as an ; unsigned 7 bit value and write it to R0.
```



3.7.2 SSAT16 and USAT16

Signed Saturate and Unsigned Saturate to any bit position for two halfwords.

Syntax

```
op{cond} Rd, #n, Rm
Where:
```

op' is one of:

SSAT16 Saturates a signed halfword value to a signed range. USAT16 Saturates a signed halfword value to an unsigned range.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'n' specifies the bit position to saturate to:

```
n ranges from 1 to 16 for SSAT.
```

n ranges from 0 to 15 for USAT.

'Rm' is the register containing the value to saturate.

Operation

The SSAT16 instruction:

- 1. Saturates two signed 16-bit halfword values of the register with the value to saturate from selected by the bit position in *n*.
- 2. Writes the results as two signed 16-bit halfwords to the destination register.

The USAT16 instruction:

- 1. Saturates two unsigned 16-bit halfword values of the register with the value to saturate from selected by the bit position in *n*.
- 2. Writes the results as two unsigned halfwords in the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

If saturation occurs, these instructions set the Q flag to 1.

Examples

```
SSAT16 R7, #9, R2 ; Saturates the top and bottom highwords of R2 ; as 9-bit values, writes to corresponding halfword ; of R7

USAT16NE R0, #13, R5 ; Conditionally saturates the top and bottom ; halfwords of R5 as 13-bit values, writes to ; corresponding halfword of R0.
```



PM0214 Rev 10 127/262

3.7.3 QADD and QSUB

Saturating Add and Saturating Subtract, signed.

Syntax

```
op\{cond\} {Rd}, Rn, Rm op\{cond\} {Rd}, Rn, Rm
```

Where:

op' is one of:

QADD: Saturating 32-bit add.

QADD8: Saturating four 8-bit integer additions.

QADD16: Saturating two 16-bit integer additions.

QSUB: Saturating 32-bit subtraction.

QSUB8: Saturating four 8-bit integer subtraction.

QSUB16: Saturating two 16-bit integer subtraction.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn, Rm' are registers holding the first and second operands.

Operation

These instructions add or subtract two, four or eight values from the first and second operands and then write a signed saturated value in the destination register.

The QADD and QSUB instructions apply the specified add or subtract, and then saturate the result to the signed range $-2^{n-1} \le x \le 2^{n-1}$ -1, where x is given by the number of bits applied in the instruction, 32, 16 or 8.

If the returned result is different from the value to be saturated, it is called saturation. If saturation occurs, the QADD and QSUB instructions set the APSR Q flag to 1. Otherwise, Q flag is unchanged. The 8-bit and 16-bit QADD and QSUB instructions always leave Q flag unchanged.

To clear the Q flag to 0, you must use the MSR instruction, see *MSR* on page 187. To read the state of the Q flag, use the MRS instruction, see *MRS* on page 186.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags. If saturation occurs, these instructions set the Q flag to 1.

Examples

```
QADD16 R7, R4, R2; Adds halfwords of R4 with corresponding halfword of ; R2, saturates to 16 bits and writes to corresponding ; halfword of R7

QADD8 R3, R1, R6; Adds bytes of R1 to corresponding bytes of R6, saturates ; to 8 bits and writes to corresponding byte of R3

QSUB16 R4, R2, R3; Subtracts halfwords of R3 from corresponding halfword
```



```
; of R2, saturates to 16 bits, writes to corresponding ; halfword of R4

QSUB8 R4, R2, R5; Subtracts bytes of R5 from the corresponding byte in R2 ; saturates to 8 bits, writes to corresponding byte ofR4.
```

3.7.4 QASX and QSAX

Saturating Add and Subtract with Exchange and Saturating Subtract and Add with Exchange, signed.

Syntax

```
op{cond} {Rd}, Rm, Rn
```

Where:

- op' is one of:
 - QASX Add and Subtract with Exchange and Saturate.
 - QSAX Subtract and Add with Exchange and Saturate.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn, Rm' are registers holding the first and second operands.

Operation

The QASX instruction:

- 1. Adds the top halfword of the source operand with bottom halfword of second operand.
- 2. Subtracts the top halfword of second operand from bottom highword of first operand.
- 3. Saturates the result of the subtraction and writes a 16-bit signed integer in the range $2^{15} \le x \le 2^{15} 1$, where x equals 16, to the bottom halfword of the destination register.
- 4. Saturates the results of the sum and writes a 16-bit signed integer in the range
- 5. $-2^{15} \le x \le 2^{15} 1$, where x equals 16, to the top halfword of the destination register.

The QSAX instruction:

- 1. Subtracts the bottom halfword of second operand from top highword of first operand.
- Adds the bottom halfword of source operand with top halfword of second operand.
- 3. Saturates the results of the sum and writes a 16-bit signed integer in the range
- 4. $-2^{15} \le x \le 2^{15} 1$, where x equals 16, to the bottom halfword of the destination register.
- 5. Saturates the result of the subtraction and writes a 16-bit signed integer in the range $2^{15} \le x \le 2^{15} 1$, where x equals 16, to the top halfword of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples

```
QASX R7, R4, R2 ; Adds top halfword of R4 to bottom halfword of R2, ; saturates to 16 bits, writes to top halfword of R7
```



PM0214 Rev 10 129/262

```
; Subtracts top highword of R2 from bottom halfword of ; R4, saturates to 16 bits and writes to bottom halfword ; of R7

QSAX R0, R3, R5 ; Subtracts bottom halfword of R5 from top halfword of ; R3, saturates to 16 bits, writes to top halfword of R0 ; Adds bottom halfword of R3 to top halfword of R5, ; saturates to 16 bits, writes to bottom halfword of R0.
```

3.7.5 QDADD and QDSUB

Saturating Double and Add and Saturating Double and Subtract, signed.

Syntax

```
op{cond} {Rd}, Rm, Rn
```

Where:

• op' is one of:

QDADD Saturating Double and Add.

QDSUB Saturating Double and Subtract.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn, Rm' are registers holding the first and second operands.

Operation

The QDADD instruction:

- Doubles the second operand value.
- 2. Adds the result of the doubling to the signed saturated value in the first operand.
- 3. Writes the result to the destination register.

The QDSUB instruction:

- 1. Doubles the second operand value.
- 2. Subtracts the doubled value from the signed saturated value in the first operand.
- Writes the result to the destination register.

Both the doubling and the addition or subtraction have their results saturated to the 32-bit signed integer range $-2^{31} \le x \le 2^{31} - 1$. If saturation occurs in either operation, it sets the Q flag in the APSR.

Restrictions

Do not use SP and do not use PC.

Condition flags

If saturation occurs, these instructions set the Q flag to 1.

Examples

```
QDADD R7, R4, R2; Doubles and saturates R4 to 32 bits, adds R2, ; saturates to 32 bits, writes to R7
QDSUB R0, R3, R5; Subtracts R3 doubled and saturated to 32 bits
```



; from R5, saturates to 32 bits, writes to R0.

3.7.6 UQASX and UQSAX

Saturating Add and Subtract with Exchange and Saturating Subtract and Add with Exchange, unsigned.

Syntax

```
op{cond} {Rd}, Rm, Rn
```

Where:

- op' is one of:
 - UQASX Add and Subtract with Exchange and Saturate.
 - UQSAX Subtract and Add with Exchange and Saturate.
- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn, Rm' are registers holding the first and second operands.

Operation

The UQASX instruction:

- 1. Adds the bottom halfword of the source operand with top halfword of second operand.
- 2. Subtracts the bottom halfword of the second operand from the top highword of the first operand.
- 3. Saturates the results of the sum and writes a 16-bit unsigned integer in the range
- 4. $0 \le x \le 2^{16} 1$, where x equals 16, to the top halfword of the destination register.
- 5. Saturates the result of the subtraction and writes a 16-bit unsigned integer in the range $0 \le x \le 2^{16} 1$, where x equals 16, to the bottom halfword of the destination register.

The UQSAX instruction:

- 1. Subtracts the bottom halfword of second operand from top highword of first operand.
- 2. Adds the bottom halfword of the first operand with the top halfword of the second operand.
- 3. Saturates the result of the subtraction and writes a 16-bit unsigned integer in the range $0 \le x \le 2^{16} 1$, where x equals 16, to the top halfword of the destination register.
- 4. Saturates the results of the addition and writes a 16-bit unsigned integer in the range $0 \le x \le 2^{16} 1$, where x equals 16, to the bottom halfword of the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples



PM0214 Rev 10 131/262

```
; R4, saturates to 16 bits, writes to bottom halfword of R7
UQSAX R0, R3, R5; Subtracts bottom halfword of R5 from top halfword of
; R3, saturates to 16 bits, writes to top halfword of R0
; Adds bottom halfword of R4 to top halfword of R5
; saturates to 16 bits, writes to bottom halfword of R0.
```

3.7.7 UQADD and UQSUB

Saturating Add and Saturating Subtract Unsigned.

Syntax

```
op\{cond\} {Rd}, Rn, Rm op\{cond\} {Rd}, Rn, Rm
```

Where:

• op' is one of:

UQADD8 Saturating four unsigned 8-bit integer additions.

UQADD16 Saturating two unsigned 16-bit integer additions.

UDSUB8 Saturating four unsigned 8-bit integer subtractions.

UQSUB16 Saturating two unsigned 16-bit integer subtractions.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn, Rm' are registers holding the first and second operands.

Operation

These instructions add or subtract two or four values and then writes an unsigned saturated value in the destination register.

The UQADD16 instruction:

- Adds the respective top and bottom halfwords of the first and second operands.
- 2. Saturates the result of the additions for each halfword in the destination register to the unsigned range $0 \le x \le 2^{16}$ -1, where x is 16.

The UQADD8 instruction:

- 1. Adds each respective byte of the first and second operands.
- 2. Saturates the result of the addition for each byte in the destination register to the unsigned range $0 \le x \le 2^8$ -1, where x is 8.

The UQSUB16 instruction:

- Subtracts both halfwords of the second operand from the respective halfwords of the first operand.
- 2. Saturates the result of the differences in the destination register to the unsigned range $0 \le x \le 2^{16}$ -1, where x is 16.

The UQSUB8 instructions:

- Subtracts the respective bytes of the second operand from the respective bytes of the first operand.
- 2. Saturates the results of the differences for each byte in the destination register to the unsigned range $0 \le x \le 2^8$ -1, where x is 8.



Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the condition code flags.

Examples



PM0214 Rev 10 133/262

3.8 Packing and unpacking instructions

Table 31 shows the instructions that operate on packing and unpacking data:

Table 31. Packing and unpacking instructions

| Mnemonic | Brief description | See |
|----------|---------------------------------------|-----------------------------|
| PKH | Pack Halfword | PKHBT and PKHTB on page 135 |
| SXTAB | Extend 8 bits to 32 and add | SXTA and UXTA on page 137 |
| SXTAB16 | Dual extend 8 bits to 16 and add | SXTA and UXTA on page 137 |
| SXTAH | Extend 16 bits to 32 and add | SXTA and UXTA on page 137 |
| SXTB | Sign extend a byte | SXT and UXT on page 136 |
| SXTB16 | Dual extend 8 bits to 16 and add | SXT and UXT on page 136 |
| SXTH | Sign extend a halfword | SXT and UXT on page 136 |
| UXTAB | Extend 8 bits to 32 and add | SXTA and UXTA on page 137 |
| UXTAB16 | Dual extend 8 bits to 16 and add | SXTA and UXTA on page 137 |
| UXTAH | Extend 16 bits to 32 and add | SXTA and UXTA on page 137 |
| UXTB | Zero extend a byte | SXT and UXT on page 136 |
| UXTB16 | Dual zero extend 8 bits to 16 and add | SXT and UXT on page 136 |
| UXTH | Zero extend a halfword | SXT and UXT on page 136 |

3.8.1 PKHBT and PKHTB

Pack Halfword

Syntax

```
op{cond} {Rd}, Rn, Rm {, LSL #imm}
op{cond} {Rd}, Rn, Rm {, ASR #imm}
```

Where:

op' is one of:

PKHBT Pack Halfword, bottom and top with shift.

PKHTB Pack Halfword, top and bottom with shift.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn' is the first operand register.
- 'Rm' is the second operand register holding the value to be optionally shifted.
- 'imm' is the shift length. The type of shift length depends on the instruction:

For PKHBT: LSL: a left shift with a shift length from 1 to 31, 0 means no shift.

For PKHTB: ASR: an arithmetic shift right with a shift length from 1 to 32,a shift of 32-bits is encoded as 0b00000.

Operation

The PKHBT instruction:

- Writes the value of the bottom halfword of the first operand to the bottom halfword of the destination register.
- 2. If shifted, the shifted value of the second operand is written to the top halfword of the destination register.

The PKHTB instruction:

- 1. Writes the value of the top halfword of the first operand to the top halfword of the destination register.
- 2. If shifted, the shifted value of the second operand is written to the bottom halfword of the destination register.

Restrictions

Rd must not be SP and must not be PC.

Condition flags

This instruction does not change the flags.

Examples

```
PKHBT R3, R4, R5 LSL #0; Writes bottom halfword of R4 to bottom halfword
; of R3, writes top halfword of R5, unshifted, to top
; halfword of R3

PKHTB R4, R0, R2 ASR #1; Writes R2 shifted right by 1 bit to bottom half
; word of R4, and writes top halfword of R0 to top
; halfword of R4.
```



PM0214 Rev 10 135/262

3.8.2 SXT and UXT

Sign extend and Zero extend.

Syntax

Where:

op' is one of:

SXTB Sign extends an 8-bit value to a 32-bit value. SXTH Sign extends a 16-bit value to a 32-bit value. SXTB16 Sign extends two 8-bit values to two 16-bit values. UXTB Zero extends an 8-bit value to a 32-bit value. UXTH Zero extends a 16-bit value to a 32-bit value. UXTB16 Zero extends two 8-bit values to two 16-bit values.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rm' is the register holding the value to extend.
- 'ROR #n' is one of:

ROR #8 Value from Rm is rotated right 8 bits. ROR #16 Value from Rm is rotated right 16 bits. ROR #24 Value from Rm is rotated right 24 bits. If ROR #n is omitted, no rotation is performed.

Operation

These instructions do the following:

- 1. Rotate the value from Rm right by 0, 8, 16 or 24 bits.
- Extract bits from the resulting value:

SXTB extracts bits[7:0] and sign extends to 32 bits. UXTB extracts bits[7:0] and zero extends to 32 bits. SXTH extracts bits[15:0] and sign extends to 32 bits. UXTH extracts bits[15:0] and zero extends to 32 bits. SXTB16 extracts bits[7:0] and sign extends to 16 bits, and extracts bits [23:16] and sign extends to 16 bits. UXTB16 extracts bits[7:0] and zero extends to 16 bits, and extracts bits [23:16] and zero extends to 16 bits.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the flags.



Examples

```
SXTH R4, R6, ROR #16; Rotates R6 right by 16 bits, obtains bottom halfword ; of result, sign extends to 32 bits and writes to R4 UXTB R3, R10; Extracts lowest byte of value in R10, zero extends, and ; writes to R3.
```

3.8.3 SXTA and UXTA

Signed and Unsigned Extend and Add

Syntax

Where:

op' is one of:

SXTAB Sign extends an 8-bit value to a 32-bit value and add. SXTAH Sign extends a 16-bit value to a 32-bit value and add. SXTAB16 Sign extends two 8-bit values to two 16-bit values and add. UXTAB Zero extends an 8-bit value to a 32-bit value and add. UXTAH Zero extends a 16-bit value to a 32-bit value and add. UXTAB16 Zero extends two 8-bit values to two 16-bit values and add.

- 'cond' is an optional condition code (see Conditional execution on page 65)
- 'Rd' is the destination register.
- 'Rn' is the first operand register.
- 'Rm' is the register holding the value to rotate and extend.
- 'ROR #n' is one of:

ROR #8 Value from Rm is rotated right 8 bits. ROR #16 Value from Rm is rotated right 16 bits. ROR #24 Value from Rm is rotated right 24 bits. If ROR #n is omitted, no rotation is performed.

Operation

These instructions do the following:

- 1. Rotate the value from Rm right by 0, 8, 16 or 24 bits.
- Extract bits from the resulting value:

SXTAB extracts bits[7:0] from Rm and sign extends to 32 bits. UXTAB extracts bits[7:0] from Rm and zero extends to 32 bits. SXTAH extracts bits[15:0] from Rm and sign extends to 32 bits. UXTAH extracts bits[15:0] from Rm and zero extends to 32 bits. SXTAB16 extracts bits[7:0] from Rm and sign extends to 16 bits, and extracts bits [23:16] from Rm and sign extends to 16 bits. UXTAB16 extracts bits[7:0] from Rm and zero extends to 16 bits, and extracts bits [23:16] from Rm and zero extends to 16 bits.

Adds the signed or zero extended value to the word or corresponding halfword of Rn and writes the result in Rd.

577

PM0214 Rev 10 137/262

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the flags.

Examples

```
SXTAH R4, R8, R6, ROR #16; Rotates R6 right by 16 bits, obtains bottom; halfword, sign extends to 32 bits, adds R8, and; writes to R4

UXTAB R3, R4, R10; Extracts bottom byte of R10 and zero extends to 32; bits, adds R4, and writes to R3.
```

3.9 Bitfield instructions

Table 32 shows the instructions that operate on adjacent sets of bits in registers or bitfields.

Table 32. Instructions that operate on adjacent sets of bits

| Mnemonic | Brief description | See |
|----------|----------------------------|---------------------------|
| BFC | Bit field clear | BFC and BFI on page 139 |
| BFI | Bit field insert | BFC and BFI on page 139 |
| SBFX | Signed bit field extract | SBFX and UBFX on page 140 |
| SXTB | Sign extend a byte | SXT and UXT on page 141 |
| SXTH | Sign extend a halfword | SXT and UXT on page 141 |
| UBFX | Unsigned bit field extract | SBFX and UBFX on page 140 |
| UXTB | Zero extend a byte | SXT and UXT on page 141 |
| UXTH | Zero extend a halfword | SXT and UXT on page 141 |

3.9.1 BFC and BFI

Bit Field Clear and Bit Field Insert.

Syntax

```
BFC{cond} Rd, #lsb, #width
BFI{cond} Rd, Rn, #lsb, #width
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rd' is the destination register.
- 'Rn' is the source register.
- 'Isb' is the position of the least significant bit of the bitfield. Isb must be in the range 0 to 31.
- 'width' is the width of the bitfield and must be in the range 1 to 32-lsb.

Operation

BFC clears a bitfield in a register. It clears width bits in *Rd*, starting at the low bit position *lsb*. Other bits in *Rd* are unchanged.

BFI copies a bitfield into one register from another register. It replaces width bits in *Rd* starting at the low bit position *Isb*, with width bits from *Rn* starting at bit[0]. Other bits in *Rd* are unchanged.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the flags.

Examples

```
BFC R4, #8, #12 ; Clear bit 8 to bit 19 (12 bits) of R4 to 0
BFI R9, R2, #8, #12 ; Replace bit 8 to bit 19 (12 bits) of R9 with
; bit 0 to bit 11 from R2
```

57

PM0214 Rev 10 139/262

3.9.2 SBFX and UBFX

Signed Bit Field Extract and Unsigned Bit Field Extract.

Syntax

```
SBFX{cond} Rd, Rn, #lsb, #width UBFX{cond} Rd, Rn, #lsb, #width
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rd' is the destination register.
- 'Rn' is the source register.
- 'Isb' is the position of the least significant bit of the bitfield. Isb must be in the range 0 to 31.
- 'width' is the width of the bitfield and must be in the range 1 to 32-lsb.

Operation

SBFX extracts a bitfield from one register, sign extends it to 32 bits, and writes the result to the destination register.

UBFX extracts a bitfield from one register, zero extends it to 32 bits, and writes the result to the destination register.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the flags.

Examples

```
SBFX R0, R1, #20, #4; Extract bit 20 to bit 23 (4 bits) from R1 and sign ; extend to 32 bits and then write the result to R0. UBFX R8, R11, #9, #10; Extract bit 9 to bit 18 (10 bits) from R11 and zero ; extend to 32 bits and then write the result to R8
```



3.9.3 SXT and UXT

Sign extend and Zero extend.

Syntax

```
SXTextend\{cond\} \{Rd,\} Rm \{, ROR \#n\} UXTextend\{cond\} \{Rd\}, Rm \{, ROR \#n\}
```

Where:

- 'extend' is one of:
 - B: Extends an 8-bit value to a 32-bit value.
 - H: Extends a 16-bit value to a 32-bit value.
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rd' is the destination register.
- 'Rm' is the register holding the value to extend.
- ROR #n is one of:

```
ROR #8: Value from Rm is rotated right 8 bits.
```

ROR #16: Value from *Rm* is rotated right 16 bits.

ROR #24: Value from Rm is rotated right 24 bits.

If ROR #n is omitted, no rotation is performed.

Operation

These instructions do the following:

- 1. Rotate the value from *Rm* right by 0, 8, 16 or 24 bits.
- 2. Extract bits from the resulting value:
 - SXTB extracts bits[7:0] and sign extends to 32 bits.
 - UXTB extracts bits[7:0] and zero extends to 32 bits.
 - SXTH extracts bits[15:0] and sign extends to 32 bits.
 - UXTH extracts bits[15:0] and zero extends to 32 bits.

Restrictions

Do not use SP and do not use PC.

Condition flags

These instructions do not affect the flags.

Examples

```
SXTH R4, R6, ROR #16 ; Rotate R6 right by 16 bits, then obtain the lower ; halfword of the result and then sign extend to ; 32 bits and write the result to R4.

UXTB R3, R10 ; Extract lowest byte of the value in R10 and zero ; extend it, and write the result to R3
```



PM0214 Rev 10 141/262

3.9.4 Branch and control instructions

Table 33 shows the branch and control instructions:

Table 33. Branch and control instructions

| Mnemonic | Brief description | See |
|----------|-----------------------------------|--------------------------------|
| В | Branch | B, BL, BX, and BLX on page 142 |
| BL | Branch with Link | B, BL, BX, and BLX on page 142 |
| BLX | Branch indirect with Link | B, BL, BX, and BLX on page 142 |
| ВХ | Branch indirect | B, BL, BX, and BLX on page 142 |
| CBNZ | Compare and Branch if Non Zero | CBZ and CBNZ on page 144 |
| CBZ | Compare and Branch if Non Zero | CBZ and CBNZ on page 144 |
| IT | If-Then | IT on page 145 |
| ТВВ | Table Branch Byte | TBB and TBH on page 147 |
| ТВН | Table Branch Halfword | TBB and TBH on page 147 |

3.9.5 B, BL, BX, and BLX

Branch instructions.

Syntax

```
B{cond} label
BL{cond} label
BX{cond} Rm
BLX{cond} Rm
```

Where:

- 'B' is branch (immediate).
- 'BL' is branch with link (immediate).
- 'BX' is branch indirect (register).
- 'BLX' is branch indirect with link (register).
- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'label' is a PC-relative expression. See PC-relative expressions on page 65.
- 'Rm' is a register that indicates an address to branch to. Bit[0] of the value in Rm must be 1, but the address to branch to is created by changing bit[0] to 0.

Operation

All these instructions cause a branch to *label*, or to the address indicated in *Rm*. In addition:

- The BL and BLX instructions write the address of the next instruction to LR (the link register, R14).
- The BX and BLX instructions cause a UsageFault exception if bit[0] of Rm is 0.



B *cond label* is the only conditional instruction that can be either inside or outside an IT block. All other branch instructions must be conditional inside an IT block, and must be unconditional outside the IT block, see *IT on page 145*.

Table 34 shows the ranges for the various branch instructions.

Table 34. Branch ranges

| Instruction | Branch range |
|--------------------------------|-----------------------|
| B label | -16 MB to +16 MB |
| Bcond label (outside IT block) | -1 MB to +1 MB |
| Bcond label (inside IT block) | -16 MB to +16 MB |
| BL{cond} label | -16 MB to +16 MB |
| BX{cond} Rm | Any value in register |
| BLX{cond} Rm | Any value in register |

You might have to use the .W suffix to get the maximum branch range. See *Instruction width* selection on page 68.

Restrictions

The restrictions are:

- Do not use PC in the BLX instruction
- For BX and BLX, bit[0] of *Rm* must be 1 for correct execution but a branch occurs to the target address created by changing bit[0] to 0
- When any of these instructions is inside an IT block, it must be the last instruction of the IT block.

B*cond* is the only conditional instruction that is not required to be inside an IT block. However, it has a longer branch range when it is inside an IT block.

Condition flags

These instructions do not change the flags.

Examples

```
loopA ; Branch to loopA
BLE
             ; Conditionally branch to label ng
      target; Branch to target within 16MB range
B.W
      target; Conditionally branch to target
BEQ
{\tt BEQ.W}\  target ; Conditionally branch to target within 1MB
             ; Branch with link (Call) to function funC, return address
BL
      funC
             ; stored in LR
BX
      LR
             ; Return from function call
BXNE RO
             ; Conditionally branch to address stored in RO
```



PM0214 Rev 10 143/262

```
BLX R0 ; Branch with link and exchange (Call) to a address stored ; in R0 \,
```

3.9.6 CBZ and CBNZ

Compare and Branch on Zero, Compare and Branch on Non-Zero.

Syntax

```
CBZ Rn, label
CBNZ Rn, label
```

Where:

- 'Rn' is the register holding the operand.
- 'label' is the branch destination.

Operation

Use the CBZ or CBNZ instructions to avoid changing the condition code flags and to reduce the number of instructions.

CBZ Rn, label does not change condition flags but is otherwise equivalent to:

```
CMP Rn, #0
BEQ label
```

CBNZ Rn, label does not change condition flags but is otherwise equivalent to:

```
CMP Rn, #0
BNE label
```

Restrictions

The restrictions are:

- Rn must be in the range of R0 to R7.
- The branch destination must be within 4 to 130 bytes after the instruction.
- These instructions must not be used inside an IT block.

Condition flags

These instructions do not change the flags.

Examples

```
CBZ R5, target; Forward branch if R5 is zero CBNZ R0, target; Forward branch if R0 is not zero
```

3.9.7 IT

If-Then condition instruction.

Syntax

 $IT{x{y{z}}}$ cond

Where:

- 'x' specifies the condition switch for the second instruction in the IT block.
- 'y' specifies the condition switch for the third instruction in the IT block.
- 'z' specifies the condition switch for the fourth instruction in the IT block.
- 'cond' specifies the condition for the first instruction in the IT block.

The condition switch for the second, third and fourth instruction in the IT block can be either:

- T: Then. Applies the condition cond to the instruction.
- E: Else. Applies the inverse condition of *cond* to the instruction.
- a) It is possible to use AL (the *always* condition) for *cond* in an IT instruction. If this is done, all of the instructions in the IT block must be unconditional, and each of *x*, *y*, and *z* must be T or omitted but not E.

Operation

The IT instruction makes up to four following instructions conditional. The conditions can be all the same, or some of them can be the logical inverse of the others. The conditional instructions following the IT instruction form the *IT block*.

The instructions in the IT block, including any branches, must specify the condition in the *{cond}* part of their syntax.

Your assembler might be able to generate the required IT instructions for conditional instructions automatically, so that you do not need to write them yourself. See your assembler documentation for details.

A BKPT instruction in an IT block is always executed, even if its condition fails.

Exceptions can be taken between an IT instruction and the corresponding IT block, or within an IT block. Such an exception results in entry to the appropriate exception handler, with suitable return information in LR and stacked PSR.

Instructions designed for use for exception returns can be used as normal to return from the exception, and execution of the IT block resumes correctly. This is the only way that a PC-modifying instruction is permitted to branch to an instruction in an IT block.

Restrictions

The following instructions are not permitted in an IT block:

- IT
- CBZ and CBNZ
- CPSID and CPSIE.



PM0214 Rev 10 145/262

Other restrictions when using an IT block are:

- a branch or any instruction that modifies the PC must either be outside an IT block or must be the last instruction inside the IT block. These are:
 - ADD PC, PC, Rm
 - MOV PC. Rm
 - B, BL, BX, BLX
 - any LDM, LDR, or POP instruction that writes to the PC
 - TBB and TBH
- Do not branch to any instruction inside an IT block, except when returning from an exception handler
- All conditional instructions except Bcond must be inside an IT block. Bcond can be either outside or inside an IT block but has a larger branch range if it is inside one
- Each instruction inside the IT block must specify a condition code suffix that is either the same or logical inverse as for the other instructions in the block.

Your assembler might place extra restrictions on the use of IT blocks, such as prohibiting the use of assembler directives within them.

Condition flags

This instruction does not change the flags.

Example

```
ITTE
       NE
                   ; Next 3 instructions are conditional
ANDNE RO, RO, R1 ; ANDNE does not update condition flags ADDSNE R2, R2, #1 ; ADDSNE updates condition flags
MOVEQ R2, R3
                    ; Conditional move
CMP
       RO, #9
                   ; Convert RO hex value (0 to 15) into ASCII
                    ; ('0'-'9', 'A'-'F')
ITE GT ; Next 2 instructions are conditional ADDGT R1, R0, #55 ; Convert 0xA -> 'A'
ADDLE R1, R0, #48 ; Convert 0x0 -> '0'
                    ; IT block with only one conditional instruction
ADDGT R1, R1, #1 ; Increment R1 conditionally
                    ; Next 4 instructions are conditional
ITTEE EQ
                     ; Conditional move
MOVEQ RO, R1
ADDEQ R2, R2, #10 ; Conditional add
ANDNE R3, R3, #1 ; Conditional AND
                   ; Branch instruction can only be used in the last
BNE.W dloop
                     ; instruction of an IT block
IT
       NE
                    ; Next instruction is conditional
       RO, RO, R1 ; Syntax error: no condition code used in IT block
ADD
```



3.9.8 TBB and TBH

Table Branch Byte and Table Branch Halfword.

Syntax

```
TBB [Rn, Rm]
TBH [Rn, Rm, LSL #1]
```

Where:

- 'Rn' is the register containing the address of the table of branch lengths.
 If Rn is PC, then the address of the table is the address of the byte immediately following the TBB or TBH instruction.
- *'Rm'* is the index register. This contains an index into the table. For halfword tables, LSL #1 doubles the value in *Rm* to form the right offset into the table.

Operation

These instructions cause a PC-relative forward branch using a table of single byte offsets for TBB, or halfword offsets for TBH. *Rn* provides a pointer to the table, and *Rm* supplies an index into the table. For TBB the branch offset is twice the unsigned value of the byte returned from the table. and for TBH the branch offset is twice the unsigned value of the halfword returned from the table. The branch occurs to the address at that offset from the address of the byte immediately after the TBB or TBH instruction.

Restrictions

The restrictions are:

- Rn must not be SP
- Rm must not be SP and must not be PC
- When any of these instructions is used inside an IT block, it must be the last instruction
 of the IT block.

Condition flags

These instructions do not change the flags.

Examples

```
ADR.W RO, BranchTable Byte
TBB [R0, R1] ; R1 is the index, R0 is the base address of the branch table
Case1
             ; an instruction sequence follows
Case2
             ; an instruction sequence follows
Case3
             ; an instruction sequence follows
BranchTable_Byte
                              ; Casel offset calculation
   DCB
           ((Case2-Case1)/2) ; Case2 offset calculation
   DCB
    DCB
           ((Case3-Case1)/2); Case3 offset calculation
    TBH
           [PC, R1, LSL #1]
                              ; R1 is the index, PC is used as base of the
                              ; branch table
```

577

PM0214 Rev 10 147/262

3.10 Floating-point instructions

These instructions are only available if the FPU is included, and enabled, in the system. See *Enabling the FPU on page 257* for information about enabling the floating-point unit.

Table 35. Floating-point instructions

| Mnemonic | Brief description | See |
|----------|--|---|
| VABS | Floating-point Absolute | VABS on page 151 |
| VADD | Floating-point Add | VADD on page 152 |
| VCMP | Compare two floating-point registers, or one floating-point register and zero | VCMP, VCMPE on page 153 |
| VCMPE | Compare two floating-point registers, or one floating-point register and zero with Invalid Operation check | VCMP, VCMPE on page 153 |
| VCVT | Convert between floating-point and integer | VCVT, VCVTR between floating- point and integer on page 154 |
| VCVT | Convert between floating-point and fixed point | VCVT between floating-point and fixed-point on page 155 |
| VCVTR | Convert between floating-point and integer with rounding | VCVT, VCVTR between floating- point and integer on page 154 |
| VCVTB | Converts half-precision value to single-precision | VCVTB, VCVTT on page 156 |
| VCVTT | Converts single-precision register to half-precision | VCVTB, VCVTT on page 156 |
| VDIV | Floating-point Divide | VDIV on page 157 |
| VFMA | Floating-point Fused Multiply Accumulate | VFMA, VFMS on page 158 |
| VFNMA | Floating-point Fused Negate Multiply Accumulate | VFNMA, VFNMS on page 159 |
| VFMS | Floating-point Fused Multiply Subtract | VFMA, VFMS on page 158 |
| VFNMS | Floating-point Fused Negate Multiply Subtract | VFNMA, VFNMS on page 159 |
| VLDM | Load Multiple extension registers | VLDM on page 160 |
| VLDR | Loads an extension register from memory | VLDR on page 161 |
| VLMA | Floating-point Multiply Accumulate | VLMA, VLMS on page 162 |
| VLMS | Floating-point Multiply Subtract | VLMA, VLMS on page 162 |
| VMOV | Floating-point Move Immediate | VMOV immediate on page 163 |
| VMOV | Floating-point Move Register | VMOV register on page 164 |
| VMOV | Copy Arm core register to single precision | VMOV scalar to Arm core register on page 165 |
| VMOV | Copy 2 Arm core registers to 2 single precision | VMOV Arm core register to single precision on page 166 |
| VMOV | Copies between Arm core register to scalar | VMOV two Arm core registers to two single precision on page 167 |
| VMOV | Copies between Scalar to Arm core register | VMOV Arm Core register to scalar on page 168 |
| VMRS | Move to Arm core register from floating-point System Register | VMRS on page 169 |



PM0214 Rev 10 149/262

Table 35. Floating-point instructions

| Mnemonic | Brief description | See |
|----------|---|---------------------------------|
| VMSR | Move to floating-point System Register from Arm Core register | VMSR on page 170 |
| VMUL | Multiply floating-point | VMUL on page 171 |
| VNEG | Floating-point negate | VNEG on page 172 |
| VNMLA | Floating-point multiply and add | VNMLA, VNMLS, VNMUL on page 173 |
| VNMLS | Floating-point multiply and subtract | VNMLA, VNMLS, VNMUL on page 173 |
| VNMUL | Floating-point multiply | VNMLA, VNMLS, VNMUL on page 173 |
| VPOP | Pop extension registers | VPOP on page 174 |
| VPUSH | Push extension registers | VPUSH on page 175 |
| VSQRT | Floating-point square root | VSQRT on page 176 |
| VSTM | Store Multiple extension registers | VSTM on page 177 |
| VSTR | Stores an extension register to memory | VSTR on page 178 |
| VSUB | Floating-point Subtract | VSUB on page 179 |

3.10.1 VABS

Floating-point Absolute.

Syntax

VABS{cond}.F32 Sd, Sm

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd, Sm' are the destination floating-point value and the operand floating-point value.

Operation

This instruction:

- 1. Takes the absolute value of the operand floating-point register.
- 2. Places the results in the destination floating-point register.

Restrictions

There are no restrictions.

Condition flags

The floating-point instruction clears the sign bit.

Examples

VABS.F32 S4, S6



PM0214 Rev 10 151/262

3.10.2 VADD

Floating-point Add

Syntax

```
VADD{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sn, Sm' are the operand floating-point values.

Operation

This instruction:

- 1. Adds the values in the two floating-point operand registers.
- Places the results in the destination floating-point register.

Restrictions

There are no restrictions.

Condition flags

This instruction does not change the flags.

Examples

```
VADD.F32 S4, S6, S7
```

3.10.3 VCMP, VCMPE

Compares two floating-point registers, or one floating-point register and zero.

Syntax

```
VCMP{E}{cond}.F32 Sd, Sm
VCMP{E}{cond}.F32 Sd, #0.0
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'E' If present, any NaN operand causes an Invalid Operation exception. Otherwise, only a signaling NaN causes the exception.
- 'Sd' is the floating-point operand to compare.
- 'Sm' is the floating-point operand that is compared with

Operation

This instruction:

1. Compares:

Two floating-point registers.

One floating-point register and zero.

1. Writes the result to the FPSCR flags.

Restrictions

This instruction can raise an Invalid Operation exception if either operand is any type of NaN. It always raises an Invalid **Operation** exception if either operand is a signaling NaN.

Condition flags

When this instruction writes the result to the FPSCR flags, the values are normally transferred to the Arm flags by a subsequent VMRS instruction, see *VMRS on page 169*.

Examples

```
VCMP.F32 S4, #0.0
VCMP.F32 S4, S2
```



PM0214 Rev 10 153/262

3.10.4 VCVT, VCVTR between floating-point and integer

Converts a value in a register from floating-point to a 32-bit integer.

Syntax

```
VCVT{R}{cond}.Tm.F32 Sd, Sm
VCVT{cond}.F32.Tm Sd, Sm
```

Where:

• 'R'.

If R is specified, the operation uses the rounding mode specified by the FPSCR. If R is omitted. the operation uses the Round towards Zero rounding mode.

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Tm' is the data type for the operand. It must be one of:
 - S32 signed 32-bit value.
 - U32 unsigned 32-bit value.
- 'Sd, Sm' are the destination register and the operand register.

Operation

These instructions:

- Either
- Converts a value in a register from floating-point value to a 32-bit integer.
- Converts from a 32-bit integer to floating-point value.
- 2. Places the result in a second register.

The floating-point to integer operation normally uses the Round towards Zero rounding mode, but can optionally use the rounding mode specified by the FPSCR.

The integer to floating-point operation uses the rounding mode specified by the FPSCR.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.

3.10.5 VCVT between floating-point and fixed-point

Converts a value in a register from floating-point to and from fixed-point.

Syntax

```
VCVT{cond}.Td.F32 Sd, Sd, #fbits
VCVT{cond}.F32.Td Sd, Sd, #fbits
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Td' is the data type for the fixed-point number. It must be one of:
 - S16 signed 16-bit value.
 - U16 unsigned 16-bit value.
 - S32 signed 32-bit value.
 - U32 unsigned 32-bit value.
- 'Sd' is the destination register and the operand register.
- 'fbits' is the number of fraction bits in the fixed-point number:
 - If Td is S16 or U16, fbits must be in the range 0-16.
 - If Td is S32 or U32, fbits must be in the range 1-32.

Operation

These instructions:

Either

Converts a value in a register from floating-point to fixed-point.

Converts a value in a register from fixed-point to floating-point.

Places the result in a second register.

The floating-point values are single-precision.

The fixed-point value can be 16-bit or 32-bit. Conversions from fixed-point values take their operand from the low-order bits of the source register and ignore any remaining bits.

Signed conversions to fixed-point values sign-extend the result value to the destination register width.

Unsigned conversions to fixed-point values zero-extend the result value to the destination register width.

The floating-point to fixed-point operation uses the Round towards Zero rounding mode. The fixed-point to floating-point operation uses the Round to Nearest rounding mode.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 155/262

3.10.6 VCVTB, VCVTT

Converts between a half-precision value and a single-precision value.

Syntax

```
VCVT{y}{cond}.F32.F16 Sd, Sm
VCVT{y}{cond}.F16.F32 Sd, Sm
```

Where:

• 'y' Specifies which half of the operand register Sm or destination register Sd is used for the operand or destination:

If y is B, then the bottom half, bits [15:0], of Sm or Sd is used.

If y is T, then the top half, bits [31:16], of Sm or Sd is used.

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination register
- 'Sm' is the operand register.

Operation

This instruction with the .F16.32 suffix:

- 1. Converts the half-precision value in the top or bottom half of a single-precision. register to single-precision.
- 2. Writes the result to a single-precision register.

This instruction with the .F32.F16 suffix:

- 1. Converts the value in a single-precision register to half-precision.
- 2. Writes the result into the top or bottom half of a single-precision register, preserving the other half of the target register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.

3.10.7 VDIV

Divides floating-point values.

Syntax

```
VDIV{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination register
- 'Sn, Sm' are the operand registers.

Operation

This instruction:

- 1. Divides one floating-point value by another floating-point value.
- 2. Writes the result to the floating-point destination register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 157/262

3.10.8 **VFMA**, **VFMS**

Floating-point Fused Multiply Accumulate and Subtract.

Syntax

```
VFMA{cond}.F32 {Sd,} Sn, Sm
VFMS{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination register
- 'Sn, Sm' are the operand registers.

Operation

The VFMA instruction:

- 1. Multiplies the floating-point values in the operand registers.
- 2. Accumulates the results into the destination register.
- 3. The result of the multiply is not rounded before the accumulation.

The VFMS instruction:

- 1. Negates the first operand register.
- 2. Multiplies the floating-point values of the first and second operand registers.
- 3. Adds the products to the destination register.
- 4. Places the results in the destination register.
- 5. The result of the multiply is not rounded before the addition.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.

3.10.9 VFNMA, VFNMS

Floating-point Fused Negate Multiply Accumulate and Subtract.

Syntax

```
VFNMA{cond}.F32 {Sd,} Sn, Sm
VFNMS{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination register
- 'Sn, Sm' are the operand registers.

Operation

The VFNMA instruction:

- 1. Negates the first floating-point operand register.
- 2. Multiplies the first floating-point operand with second floating-point operand.
- 3. Adds the negation of the floating -point destination register to the product
- 4. Places the result into the destination register.

The result of the multiply is not rounded before the addition.

The VFNMS instruction:

- Multiplies the first floating-point operand with second floating-point operand.
- 2. Adds the negation of the floating-point value in the destination register to the product.
- 3. Places the result in the destination register.

The result of the multiply is not rounded before the addition.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 159/262

3.10.10 **VLDM**

Floating-point Load Multiple

Syntax

VLDM{mode}{cond}{.size} Rn{!}, list

Where:

'mode' is the addressing mode:

IA: Increment After. The consecutive addresses start at the address specified in Rn. DB: Decrement Before. The consecutive addresses end just before the address specified in Rn.

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Size' is an optional data size specifier.
- 'Rn' is the base register. The SP can be used
- " is the command to the instruction to write a modified value back to Rn. This is required if mode == DB, and is optional if mode == IA.
- 'list' is the list of extension registers to be loaded, as a list of consecutively numbered doubleword or singleword registers, separated by commas and surrounded by brackets.

Operation

This instruction loads multiple extension registers from consecutive memory locations using an address from an Arm core register as the base address.

Restrictions

The restrictions are:

- If size is present, it must be equal to the size in bits, 32 or 64, of the registers in list.
- For the base address, the SP can be used.
- In the Arm instruction set, if ! is not specified the PC can be used.
- list must contain at least one register. If it contains doubleword registers, it must not contain more than 16 registers.
- If using the Decrement Before addressing mode, the write back flag, !, must be appended to the base register specification.

Condition flags

These instructions do not change the flags.

PM0214 Rev 10 160/262



3.10.11 VLDR

Loads a single extension register from memory

Syntax

```
VLDR{cond}{.64} Dd, [Rn{#imm}]
VLDR{cond}{.64} Dd, label
VLDR{cond}{.64} Dd, [PC, #imm]]
VLDR{cond}{.32} Sd, [Rn {, #imm}]
VLDR{cond}{.32} Sd, label
VLDR{cond}{.32} Sd, [PC, #imm]
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- '64, 32 are the optional data size specifiers.
- Dd is the destination register for a doubleword load.
- Sd is the destination register for a singleword load.
- Rn is the base register. The SP can be used.
- *imm* is the + or immediate offset used to form the address.

 Permitted address values are multiples of 4 in the range 0 to 1020.
- label is the label of the literal data item to be loaded.

Operation

This instruction loads a single extension register from memory, using a base address from an Arm core register, with an optional offset.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 161/262

3.10.12 VLMA, VLMS

Multiplies two floating-point values, and accumulates or subtracts the results.

Syntax

```
VLMA{cond}.F32 Sd, Sn, Sm
VLMS{cond}.F32 Sd, Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sn, Sm' are the operand floating-point values.

Operation

The floating-point Multiply Accumulate instruction:

- 1. Multiplies two floating-point values.
- 2. Adds the results to the destination floating-point value.

The floating-point Multiply Subtract instruction:

- 1. Multiplies two floating-point values.
- 2. Subtracts the products from the destination floating-point value.

Places the results in the destination register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.

3.10.13 VMOV immediate

Move floating-point immediate

Syntax

VMOV{cond}.F32 Sd, #imm

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the branch destination
- 'imm' is a floating-point constant.

Operation

This instruction copies a constant value to a floating-point register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 163/262

3.10.14 VMOV register

Copies the contents of one register to another.

Syntax

```
VMOV{cond}.F64 Dd, Dm
VMOV{cond}.F32 Sd, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Dd' is the destination register, for a doubleword operation.
- 'Dm' is the source register, for a doubleword operation.
- 'Sd' is the destination register, for a singleword operation.
- 'Sm' is the source register, for a singleword operation.

Operation

This instruction copies the contents of one floating-point register to another.

Restrictions

There are no restrictions

Condition flags

These instructions do not change the flags.

PM0214 Rev 10

3.10.15 VMOV scalar to Arm core register

Transfers one word of a doubleword floating-point register to an Arm core register.

Syntax

VMOV{cond} Rt, Dn[x]

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rt' is the destination Arm core register.
- 'Dn' is the 64-bit doubleword register.
- 'x' Specifies which half of the doubleword register to use: If x is 0, use lower half, if x is 1, use upper half.

Operation

This instruction transfers one word from the upper or lower half of a doubleword floating-point register to an Arm core register.

Restrictions

Rt cannot be PC or SP.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 165/262

3.10.16 VMOV Arm core register to single precision

Transfers a single-precision register to and from an Arm core register.

Syntax

```
VMOV{cond} Sn, Rt
VMOV{cond} Rt, Sn
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sn' is the single-precision floating-point register.
- 'Rt' is the Arm core register.

Operation

This instruction transfers:

- The contents of a single-precision register to an Arm core register.
- The contents of an Arm core register to a single-precision register.

Restrictions

Rt cannot be PC or SP.

Condition flags

These instructions do not change the flags.

3.10.17 VMOV two Arm core registers to two single precision

Transfers two consecutively numbered single-precision registers to and from two Arm core registers.

Syntax

```
VMOV{cond} Sm, Sm1, Rt, Rt2
VMOV{cond} Rt, Rt2, Sm, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sm' is the first single-precision register.
- 'Sm1' is a second single-precision register (the next single-precision register after Sm).
- 'Rt' is the Arm core register that Sm is transferred to or from.
- 'Rt2' is the Arm core register that Sm1 is transferred to or from.

Operation

This instruction transfers:

- 1. Contents of two consecutively numbered single-precision registers to two Arm core registers.
- 2. Contents of two Arm core registers to a pair of single-precision registers.

Restrictions

The restrictions are:

- The floating-point registers must be contiguous, one after the other.
- The Arm core registers do not have to be contiguous.
- Rt cannot be PC or SP.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 167/262

3.10.18 VMOV Arm Core register to scalar

Transfers one word to a floating-point register from an Arm core register.

Syntax

```
VMOV\{cond\}\{.32\} Dd[x], Rt
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 32 is an optional data size specifier.
- Dd[x] is the destination, where [x] defines which half of the doubleword is transferred, as follows:

If x is 0, the lower half is extracted

If x is 1, the upper half is extracted.

Rt is the source Arm core register.

Operation

This instruction transfers one word to the upper or lower half of a doubleword floating-point register from an Arm core register.

Restrictions

Rt cannot be PC or SP.

Condition flags

These instructions do not change the flags.

3.10.19 VMRS

Move to Arm Core register from floating-point System Register.

Syntax

```
VMRS{cond} Rt, FPSCR
VMRS{cond} APSR_nzcv, FPSCR
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rt' is the destination Arm core register. This register can be R0-R14.
- 'APSR_nzcv' Transfer floating-point flags to the APSR flags.

Operation

This instruction performs one of the following actions:

- 1. Copies the value of the FPSCR to a general-purpose register.
- 2. Copies the value of the FPSCR flag bits to the APSR N, Z, C, and V flags.

Restrictions

Rt cannot be PC or SP.

Condition flags

These instructions optionally change the flags: N, Z, C, V



PM0214 Rev 10 169/262

3.10.20 VMSR

Move to floating-point System Register from Arm Core register.

Syntax

VMSR{cond} FPSCR, Rt

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rt' is the general-purpose register to be transferred to the FPSCR.

Operation

This instruction moves the value of a general-purpose register to the FPSCR. See *Floating-point status control register (FPSCR) on page 255* for more information.

Restrictions

The restrictions are Rt cannot be PC or SP.

Condition flags

This instruction updates the FPSCR.

3.10.21 VMUL

Floating-point Multiply.

Syntax

```
VMUL{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sn, Sm' are the operand floating-point values.

Operation

This instruction:

- 1. Multiplies two floating-point values.
- 2. Places the results in the destination register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 171/262

3.10.22 VNEG

Floating-point Negate.

Syntax

VNEG{cond}.F32 Sd, Sm

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sm' is the operand floating-point value.

Operation

This instruction:

- 1. Negates a floating-point value.
- 2. Places the results in a second floating-point register.
- 3. The floating-point instruction inverts the sign bit.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.

3.10.23 VNMLA, VNMLS, VNMUL

Floating-point multiply with negation followed by add or subtract.

Syntax

```
VNMLA{cond}.F32 Sd, Sn, Sm
VNMLS{cond}.F32 Sd, Sn, Sm
VNMUL{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sn, Sm' are the operand floating-point values.

Operation

The VNMLA instruction:

- 1. Multiplies two floating-point register values.
- 2. Adds the negation of the floating-point value in the destination register to the negation of the product.
- 3. Writes the result back to the destination register.

The VNMLS instruction:

- 1. Multiplies two floating-point register values.
- 2. Adds the negation of the floating-point value in the destination register to the product.
- 3. writes the result back to the destination register.

The VNMUL instruction:

- 1. Multiplies together two floating-point register values.
- 2. Writes the negation of the result to the destination register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 173/262

3.10.24 VPOP

Floating-point extension register Pop.

Syntax

```
VPOP{cond}{.size} list
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'size' is an optional data size specifier. If present, it must be equal to the size in bits, 32 or 64, of the registers in list.
- 'list' is a list of extension registers to be loaded, as a list of consecutively numbered doubleword or singleword registers, separated by commas and surrounded by brackets.

Operation

This instruction loads multiple consecutive extension registers from the stack.

Restrictions

The list must contain at least one register, and not more than sixteen registers.

Condition flags

These instructions do not change the flags.

57/

3.10.25 VPUSH

Floating-point extension register Push.

Syntax

VPUSH{cond}{.size} list

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'size' is an optional data size specifier. If present, it must be equal to the size in bits, 32 or 64, of the registers in list.
- 'list' is a list of the extension registers to be stored, as a list of consecutively numbered doubleword or singleword registers, separated by commas and surrounded by brackets.

Operation

This instruction stores multiple consecutive extension registers to the stack.

Restrictions

The restrictions are list must contain at least one register, and not more than sixteen.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 175/262

3.10.26 VSQRT

Floating-point Square Root.

Syntax

VSQRT{cond}.F32 Sd, Sm

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sm' is the operand floating-point value.

Operation

This instruction:

- 1. Calculates the square root of the value in a floating-point register.
- 2. Writes the result to another floating-point register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.

3.10.27 VSTM

Floating-point Store Multiple.

Syntax

VSTM{mode}{cond}{.size} Rn{!}, list

Where:

• 'mode' is the addressing mode:

IA Increment After. The consecutive addresses start at the address specified in Rn. This is the default and can be omitted.

DB Decrement Before. The consecutive addresses end just before the address specified in Rn.

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'size' is an optional data size specifier. If present, it must be equal to the size in bits, 32 or 64, of the registers in list.
- 'Rn' is the base register. The SP can be used.
- '?' is the function that causes the instruction to write a modified value back to Rn. Required if mode == DB.
- 'list' is a list of the extension registers to be stored, as a list of consecutively numbered doubleword or singleword registers, separated by commas and surrounded by brackets.

Operation

This instruction stores multiple extension registers to consecutive memory locations using a base address from an Arm core register.

Restrictions

The restrictions are:

- list must contain at least one register.
- If it contains doubleword registers it must not contain more than 16 registers.
- Use of the PC as Rn is deprecated.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 177/262

3.10.28 VSTR

Floating-point Store.

Syntax

```
VSTR{cond}{.32} Sd, [Rn{, #imm}]
VSTR{cond}{.64} Dd, [Rn{, #imm}]
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- '32, 64' are the optional data size specifiers.
- 'Sd' is the source register for a singleword store.
- 'Dd' is the source register for a doubleword store.
- 'Rn' is the base register. The SP can be used.
- 'imm' is the + or immediate offset used to form the address. Values are multiples of 4 in the range 0-1020. imm can be omitted, meaning an offset of +0.

Operation

This instruction stores a single extension register to memory, using an address from an Arm core register, with an optional offset, defined in imm.

Restrictions

The restrictions are the use of PC for Rn is deprecated.

Condition flags

These instructions do not change the flags.

3.10.29 VSUB

Floating-point Subtract.

Syntax

```
VSUB{cond}.F32 {Sd,} Sn, Sm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Sd' is the destination floating-point value
- 'Sn, Sm' are the operand floating-point values.

Operation

This instruction:

- 1. Subtracts one floating-point value from another floating-point value.
- 2. Places the results in the destination floating-point register.

Restrictions

There are no restrictions.

Condition flags

These instructions do not change the flags.



PM0214 Rev 10 179/262

3.11 Miscellaneous instructions

Table 36 shows the remaining Cortex-M4 instructions:

Table 36. Miscellaneous instructions

| Mnemonic | Brief description | See |
|----------|--|------------------|
| BKPT | Breakpoint | BKPT on page 181 |
| CPSID | Change Processor State, Disable Interrupts | CPS on page 182 |
| CPSIE | Change Processor State, Enable Interrupts | CPS on page 182 |
| DMB | Data Memory Barrier | DMB on page 183 |
| DSB | Data Synchronization Barrier | DSB on page 184 |
| ISB | Instruction Synchronization Barrier | ISB on page 185 |
| MRS | Move from special register to register | MRS on page 186 |
| MSR | Move from register to special register | MSR on page 187 |
| NOP | No Operation | NOP on page 188 |
| SEV | Send Event | SEV on page 189 |
| SVC | Supervisor Call | SVC on page 190 |
| WFE | Wait For Event | WFE on page 191 |
| WFI | Wait For Interrupt | WFI on page 192 |

3.11.1 BKPT

Breakpoint.

Syntax

BKPT #imm

Where:

• 'imm' is an expression evaluating to an integer in the range 0-255 (8-bit value).

Operation

The BKPT instruction causes the processor to enter Debug state. Debug tools can use this to investigate system state when the instruction at a particular address is reached.

imm is ignored by the processor. If required, a debugger can use it to store additional information about the breakpoint.

The BKPT instruction can be placed inside an IT block, but it executes unconditionally, unaffected by the condition specified by the IT instruction.

Condition flags

This instruction does not change the flags.

Examples

```
BKPT 0xAB ; Breakpoint with immediate value set to 0xAB (debugger can ; extract the immediate value by locating it using the PC)
```



PM0214 Rev 10 181/262

3.11.2 CPS

Change processor state.

Syntax

```
CPSeffect iflags
```

Where:

- 'effect' is one of:
 - IE: Clears the special purpose register.
 - ID: Sets the special purpose register.
- 'iflags' is a sequence of one or more flags:
 - i: Set or clear PRIMASK.
 - f: Set or clear FAULTMASK.

Operation

CPS changes the PRIMASK and FAULTMASK special register values. See *Exception mask* registers on page 23 for more information about these registers.

Restrictions

The restrictions are:

- Use CPS only from privileged software, it has no effect if used in unprivileged software
- CPS cannot be conditional and so must not be used inside an IT block.

Condition flags

This instruction does not change the condition flags.

Examples

```
CPSID i ; Disable interrupts and configurable fault handlers (set PRIMASK)
CPSID f ; Disable interrupts and all fault handlers (set FAULTMASK)
CPSIE i ; Enable interrupts and configurable fault handlers(clear PRIMASK)
CPSIE f ; Enable interrupts and fault handlers (clear FAULTMASK)
```



3.11.3 DMB

Data memory barrier.

Syntax

DMB{cond}

Where: 'cond' is an optional condition code, see Conditional execution on page 65.

Operation

DMB acts as a data memory barrier. It ensures that all explicit memory accesses that appear, in program order, before the DMB instruction are completed before any explicit memory accesses that appear, in program order, after the DMB instruction. DMB does not affect the ordering or execution of instructions that do not access memory.

Condition flags

This instruction does not change the flags.

Examples

DMB ; Data Memory Barrier



PM0214 Rev 10 183/262

3.11.4 DSB

Data synchronization barrier.

Syntax

DSB{cond}

Where: 'cond' is an optional condition code, see Conditional execution on page 65.

Operation

DSB acts as a special data synchronization memory barrier. Instructions that come after the DSB, in program order, do not execute until the DSB instruction completes. The DSB instruction completes when all explicit memory accesses before it complete.

Condition flags

This instruction does not change the flags.

Examples

DSB ; Data Synchronisation Barrier



3.11.5 ISB

Instruction synchronization barrier.

Syntax

ISB{cond}

Where: 'cond' is an optional condition code, see Conditional execution on page 65.

Operation

ISB acts as an instruction synchronization barrier. It flushes the pipeline of the processor, so that all instructions following the ISB are fetched from cache or memory again, after the ISB instruction is completed.

Condition flags

This instruction does not change the flags.

Examples

ISB ; Instruction Synchronisation Barrier



PM0214 Rev 10 185/262

3.11.6 MRS

Move the contents of a special register to a general-purpose register.

Syntax

MRS{cond} Rd, spec_reg

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rd' is the destination register.
- *'spec_reg'* can be any of: APSR, IPSR, EPSR, IEPSR, IAPSR, EAPSR, PSR, MSP, PSP, PRIMASK, BASEPRI, BASEPRI_MAX, FAULTMASK, or CONTROL.

Operation

Use MRS in combination with MSR as part of a read-modify-write sequence for updating a PSR, for example to clear the Q flag. See *MSR* on page 187.

In process swap code, the programmers model state of the process being swapped out must be saved, including relevant PSR contents. Similarly, the state of the process being swapped in must also be restored. These operations use MRS in the state-saving instruction sequence and MSR in the state-restoring instruction sequence.

BASEPRI MAX is an alias of BASEPRI when used with the MRS instruction.

Restrictions

Rd must not be SP and must not be PC.

Condition flags

This instruction does not change the flags.

Examples

MRS RO, PRIMASK; Read PRIMASK value and write it to RO

3.11.7 MSR

Move the contents of a general-purpose register into the specified special register.

Syntax

 $MSR\{cond\}$ spec_reg, Rn

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'Rn' is the source register.
- *'spec_reg'* can be any of: APSR, IPSR, EPSR, IEPSR, IAPSR, EAPSR, PSR, MSP, PSP, PRIMASK, BASEPRI, BASEPRI_MAX, FAULTMASK, or CONTROL.

Operation

The register access operation in MSR depends on the privilege level. Unprivileged software can only access the APSR, see *Table 5: APSR bit definitions on page 21*. Privileged software can access all special registers.

In unprivileged software writes to unallocated or execution state bits in the PSR are ignored.

When you write to BASEPRI_MAX, the instruction writes to BASEPRI only if either:

- Rn is non-zero and the current BASEPRI value is 0
- Rn is non-zero and less than the current BASEPRI value.

See MRS on page 186.

Restrictions

Rn must not be SP and must not be PC.

Condition flags

This instruction updates the flags explicitly based on the value in *Rn*.

Examples

MSR CONTROL, R1; Read R1 value and write it to the CONTROL register



PM0214 Rev 10 187/262

3.11.8 NOP

No Operation.

Syntax

NOP{cond}

Where:

• 'cond' is an optional condition code, see Conditional execution on page 65.

Operation

NOP does nothing. NOP is not necessarily a time-consuming NOP. The processor might remove it from the pipeline before it reaches the execution stage.

Use NOP for padding, for example to place the following instruction on a 64-bit boundary.

Condition flags

This instruction does not change the flags.

Examples

NOP ; No operation



3.11.9 SEV

Send Event.

Syntax

SEV{cond}

Where:

'cond' is an optional condition code, see Conditional execution on page 65.

Operation

SEV is a hint instruction that causes an event to be signaled to all processors within a multiprocessor system. It also sets the local event register to 1, see *Power management on page 47*.

Condition flags

This instruction does not change the flags.

Examples

SEV ; Send Event



PM0214 Rev 10 189/262

3.11.10 SVC

Supervisor Call.

Syntax

```
SVC{cond} #imm
```

Where:

- 'cond' is an optional condition code, see Conditional execution on page 65.
- 'imm' is an expression evaluating to an integer in the range 0-255 (8-bit value).

Operation

The SVC instruction causes the SVC exception. *imm* is ignored by the processor. If required, it can be retrieved by the exception handler to determine what service is being requested.

Condition flags

This instruction does not change the flags.

Examples

```
SVC 0x32 ; Supervisor Call (SVC handler can extract the immediate value $\rm : by locating it via the stacked PC)
```

3.11.11 WFE

Wait For Event. WFE is a hint instruction.

Syntax

WFE{cond}

Where: 'cond' is an optional condition code, see Conditional execution on page 65.

Operation

If the event register is 0, WFE suspends execution until one of the following events occurs:

- An exception, unless masked by exception mask registers or the current priority level
- An exception enters Pending state, if SEVONPEND in System Control Register is set
- A Debug Entry request, if Debug is enabled
- An event signaled by a peripheral or another processor in a multiprocessor system using the SEV instruction.

If the event register is 1, WFE clears it to 0 and returns immediately.

For more information see Power management on page 47.

Condition flags

This instruction does not change the flags.

Examples

WFE ; Wait for event



PM0214 Rev 10 191/262

3.11.12 WFI

Wait for Interrupt.

Syntax

WFI{cond}

Where:

• 'cond' is an optional condition code, see Conditional execution on page 65.

Operation

WFI is a hint instruction that suspends execution until one of the following events occurs:

- An exception
- A Debug Entry request, regardless of whether Debug is enabled.

Condition flags

This instruction does not change the flags.

Examples

WFI ; Wait for interrupt

4 Core peripherals

4.1 About the STM32 Cortex-M4 core peripherals

The address map of the Private peripheral bus (PPB) is:

Table 37. STM32 core peripheral register regions

| Address | Core peripheral | Description |
|-----------------------|--|----------------------|
| 0xE000E010-0xE000E01F | System timer | Table 55 on page 251 |
| 0xE000E100-0xE000E4EF | Nested vectored interrupt controller | Table 49 on page 219 |
| 0xE000ED00-0xE000ED3F | System control block | Table 53 on page 244 |
| 0xE000ED88-0xE000ED8B | Floating point unit coprocessor access control | Table 56 on page 252 |
| 0xE000ED90-0xE000EDB8 | Memory protection unit | Table 44 on page 206 |
| 0xE000EF00-0xE000EF03 | Nested vectored interrupt controller | Table 49 on page 219 |
| 0xE000EF30-0xE000EF44 | Floating point unit | Table 56 on page 252 |

In register descriptions,

- Register type is described as follows:
 - RW: Read and write.
 - RO: Read-only.
 - WO: Write-only.
- Required privilege gives the privilege level required to access the register, as follows:
 - Privileged: Only privileged software can access the register.
 - Unprivileged: Both unprivileged and privileged software can access the register.

4.2 Memory protection unit (MPU)

This section describes the Memory protection unit (MPU) which is implemented in some STM32 microcontrollers. Refer to the corresponding device datasheet to see if the MPU is present in the STM32 type you are using.

The MPU divides the memory map into a number of regions, and defines the location, size, access permissions, and memory attributes of each region. It supports:

- Independent attribute settings for each region
- Overlapping regions
- Export of memory attributes to the system.

The memory attributes affect the behavior of memory accesses to the region. The Cortex-M4 MPU defines:

- Eight separate memory regions, 0-7
- A background region.



PM0214 Rev 10 193/262

When memory regions overlap, a memory access is affected by the attributes of the region with the highest number. For example, the attributes for region 7 take precedence over the attributes of any region that overlaps region 7.

The background region has the same memory access attributes as the default memory map, but is accessible from privileged software only.

The Cortex-M4 MPU memory map is unified. This means instruction accesses and data accesses have same region settings.

If a program accesses a memory location that is prohibited by the MPU, the processor generates a memory management fault. This causes a fault exception, and might cause termination of the process in an OS environment.

In an OS environment, the kernel can update the MPU region setting dynamically based on the process to be executed. Typically, an embedded OS uses the MPU for memory protection.

Configuration of MPU regions is based on memory types, see *Section 2.2.1: Memory regions, types and attributes on page 29*.

Table 38 shows the possible MPU region attributes.

Table 38. Memory attributes summary

| Memory type | Shareability | Other attributes | Description |
|------------------|--------------|--|--|
| Strongly-ordered | - | - | All accesses to Strongly-ordered memory occur in program order. All Strongly-ordered regions are assumed to be shared. |
| Device | Shared | - | Memory-mapped peripherals that several processors share. |
| Device | Non-shared | - | Memory-mapped peripherals that only a single processor uses. |
| Normal | Shared | Non-cacheable Write-through Cacheable Write-back Cacheable | Normal memory that is shared between several processors. |
| INOTHIA | Non-shared | Non-cacheable Write-through Cacheable Write-back Cacheable | Normal memory that only a single processor uses. |

4.2.1 MPU access permission attributes

This section describes the MPU access permission attributes. The access permission bits, TEX, C, B, S, AP, and XN, of the MPU_RASR register, control access to the corresponding memory region. If an access is made to an area of memory without the required permissions, then the MPU generates a permission fault.

Table 39 shows the encodings for the TEX, C, B, and S access permission bits.

TEX С В S Memory type **Shareability** Other attributes x (1) 0 Shareable Strongly-ordered 0 x⁽¹⁾ 1 Device Shareable Not shareable 0 Outer and inner write-through. No b000 0 Normal write allocate. 1 Shareable 1 Not shareable 0 Outer and inner write-back. No write 1 Normal allocate. 1 Shareable 0 0 Not shareable Outer and inner noncacheable. Normal Shareable 0 1 x⁽¹⁾ 1 Reserved encoding b001 x⁽¹⁾ 0 Implementation defined attributes. 1 0 Not shareable Outer and inner write-back. Write Normal 1 and read allocate. 1 Shareable x⁽¹⁾ Device Not shareable Nonshared Device. 0 x⁽¹⁾ b010 1 Reserved encoding $x^{(1)}$ $x^{(1)}$ 1 Reserved encoding 0 Not shareable Cached memory⁽²⁾, BB = outer b1BB Α Α Normal policy, AA = inner policy. 1 Shareable

Table 39. TEX, C, B, and S encoding

Table 40 shows the cache policy for memory attribute encodings with a TEX value is in the range 4-7.

Table 40. Cache policy for memory attribute encoding

| Encoding, AA or BB | Corresponding cache policy |
|--------------------|-------------------------------------|
| 00 | Non-cacheable |
| 01 | Write back, write and read allocate |
| 10 | Write through, no write allocate |
| 11 | Write back, no write allocate |



PM0214 Rev 10 195/262

^{1.} THe MPU ignores the value fo this bit.

^{2.} See Table 40 for the encoding of the AA and BB bits.

Table 41 shows the AP encodings that define the access permissions for privileged and unprivileged software.

| AP[2:0] | Privileged permissions | Unprivileged permissions | Description |
|---------|------------------------|--------------------------|---|
| 000 | No access | No access | All accesses generate a permission fault |
| 001 | RW | No access | Access from privileged software only |
| 010 | RW | RO | Writes by unprivileged software generate a permission fault |
| 011 | RW | RW | Full access |
| 100 | Unpredictable | Unpredictable | Reserved |
| 101 | RO | No access | Reads by privileged software only |
| 110 | RO | RO | Read only, by privileged or unprivileged software |
| 111 | RO | RO | Read only, by privileged or unprivileged software |

Table 41. AP encoding

4.2.2 MPU mismatch

When an access violates the MPU permissions, the processor generates a memory management fault, see Section 2.1.4: Exceptions and interrupts on page 26. The MMFSR indicates the cause of the fault. See Section 4.4.15: Memory management fault address register (MMFAR) on page 242 for more information.

4.2.3 Updating an MPU region

To update the attributes for an MPU region, update the MPU_RNR, MPU_RBAR and MPU_RASR registers. You can program each register separately, or use a multiple-word write to program all of these registers. You can use the MPU_RBAR and MPU_RASR aliases to program up to four regions simultaneously using an STM instruction.

Updating an MPU region using separate words

Simple code to configure one region:

```
; R1 = region number
; R2 = size/enable
; R3 = attributes
; R4 = address

LDR R0,=MPU_RNR ; 0xE000ED98, MPU region number register
STR R1, [R0, #0x0] ; Region Number

STR R4, [R0, #0x4] ; Region Base Address
STRH R2, [R0, #0x8] ; Region Size and Enable
STRH R3, [R0, #0xA] ; Region Attribute
```

Disable a region before writing new region settings to the MPU if you have previously enabled the region being changed. For example:

```
; R1 = region number
; R2 = size/enable
```



```
; R3 = attributes
                       ; R4 = address
                         ; 0xE000ED98, MPU region number register
LDR R0,=MPU RNR
STR R1, [R0, #0x0]
                         ; Region Number
BIC R2, R2, #1
                         ; Disable
STRH R2, [R0, #0x8]
                         ; Region Size and Enable
STR R4, [R0, #0x4]
                         ; Region Base Address
STRH R3, [R0, #0xA]
                        ; Region Attribute
ORR R2, #1
                         ; Enable
STRH R2, [R0, #0x8]
                         ; Region Size and Enable
```

Software must use memory barrier instructions:

- Before MPU setup if there might be outstanding memory transfers, such as buffered writes, that might be affected by the change in MPU settings
- After MPU setup if it includes memory transfers that must use the new MPU settings.

However, memory barrier instructions are not required if the MPU setup process starts by entering an exception handler, or is followed by an exception return, because the exception entry and exception return mechanism cause memory barrier behavior.

Software does not need any memory barrier instructions during MPU setup, because it accesses the MPU through the PPB, which is a Strongly-Ordered memory region.

For example, if you want all of the memory access behavior to take effect immediately after the programming sequence, use a DSB instruction and an ISB instruction:

- A DSB is required after changing MPU settings, such as at the end of context switch.
- An ISB is required if the code that programs the MPU region or regions is entered using a branch or call. If the programming sequence is entered using a return from exception, or by taking an exception, then you do not require an ISB.

Updating an MPU region using multi-word writes

You can program directly using multi-word writes, depending on how the information is divided. Consider the following reprogramming:

```
; R1 = region number
; R2 = address
; R3 = size, attributes in one

LDR R0, =MPU_RNR ; 0xE000ED98, MPU region number register

STR R1, [R0, #0x0] ; Region Number

STR R2, [R0, #0x4] ; Region Base Address

STR R3, [R0, #0x8] ; Region Attribute, Size and Enable
```

Use an STM instruction to optimize this:

```
; R1 = region number
; R2 = address
; R3 = size, attributes in one
LDR R0, =MPU_RNR ; 0xE000ED98, MPU region number register
STM R0, {R1-R3} ; Region Number, address, attribute, size and enable
```

You can do this in two words for pre-packed information. This means that the RBAR contains the required region number and had the VALID bit set to 1, see *MPU region base address register (MPU_RBAR) on page 203*. Use this when the data is statically packed, for example in a boot loader:



PM0214 Rev 10 197/262

```
; R1 = address and region number in one
; R2 = size and attributes in one

LDR R0, =MPU_RBAR ; 0xE000ED9C, MPU Region Base register

STR R1, [R0, #0x0] ; Region base address and
; region number combined with VALID (bit 4) set to 1

STR R2, [R0, #0x4] ; Region Attribute, Size and Enable

Use an STM instruction to optimize this:

; R1 = address and region number in one
; R2 = size and attributes in one

LDR R0,=MPU_RBAR ; 0xE000ED9C, MPU Region Base register

STM R0, {R1-R2} ; Region base address, region number and VALID bit,
; and Region Attribute, Size and Enable
```

Subregions

Regions of 256 bytes or more are divided into eight equal-sized subregions. Set the corresponding bit in the SRD field of the RASR to disable a subregion, see Section 4.2.9: MPU region attribute and size register (MPU_RASR) on page 204. The least significant bit of SRD controls the first subregion, and the most significant bit controls the last subregion. Disabling a subregion means another region overlapping the disabled range matches instead. If no other enabled region overlaps the disabled subregion the MPU issues a fault.

Regions of 32, 64, and 128 bytes do not support subregions, With regions of these sizes, you must set the SRD field to 0x00, otherwise the MPU behavior is Unpredictable.

Example of SRD use:

Two regions with the same base address overlap. Region one is 128KB, and region two is 512KB. To ensure the attributes from region one apply to the first128KB region, set the SRD field for region two to b00000011 to disable the first two subregions, as the figure shows.



Figure 18. Subregion example

4.2.4 MPU design hints and tips

To avoid unexpected behavior, disable the interrupts before updating the attributes of a region that the interrupt handlers might access.

Ensure software uses aligned accesses of the correct size to access MPU registers:

- Except for the RASR, it must use aligned word accesses
- For the RASR it can use byte or aligned halfword or word accesses.

The processor does not support unaligned accesses to MPU registers.

When setting up the MPU, and if the MPU has previously been programmed, disable unused regions to prevent any previous region settings from affecting the new MPU setup.

Recommended MPU configuration

The STM32 microcontroller system has only a single processor, so you should program the MPU as follows:

| | | | | | , , |
|---------------|------|---|---|---|--|
| Memory region | TEX | С | В | S | Memory type and attributes |
| Flash memory | b000 | 1 | 0 | 0 | Normal memory, Non-shareable, write-through |
| Internal SRAM | b000 | 1 | 0 | 1 | Normal memory, Shareable, write-through |
| External SRAM | b000 | 1 | 1 | 1 | Normal memory, Shareable, write-back, write-allocate |
| Peripherals | b000 | 0 | 1 | 1 | Device memory. Shareable |

Table 42. Memory region attributes for STM32

In STM32 implementations, the shareability and cache policy attributes do not affect the system behavior. However, using these settings for the MPU regions can make the application code more portable. The values given are for typical situations.

Note:

The MPU attributes don't affect DMA data accesses to the memory/peripherals address spaces, therefore, in order to protect the memory areas against inadvertent DMA accesses, the MPU must control the SW/CPU access to the DMA registers.



PM0214 Rev 10 199/262

4.2.5 MPU type register (MPU_TYPER)

Address offset: 0x00

Reset value: 0x0000 0800 Required privilege: Privileged

The MPU TYPER register indicates whether the MPU is present, and if so, how many

regions it supports.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|---------|-------|----|----|----|----|----|------|-------|---------|----|----|--------------|
| | | | Res | erved | | | | | | | IREGI | ON[7:0] | | | |
| | | | | | | | | r | r | r | r | r | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | DF | REGION[| 7:0] | | | | | | Rese | erved | | | _ | SEPA RATE |
| r | r | r | r | r | r | r | | | | | | | | | r |

Bits 31:24 Reserved.

Bits 23:16 IREGION[7:0]: Number of MPU instruction regions.

These bits indicates the number of supported MPU instruction regions.

Always contains 0x00. The MPU memory map is unified and is described by the DREGION field

Bits 15:8 **DREGION[7:0]**: Number of MPU data regions.

These bits indicates the number of supported MPU data regions.

0x08: Eight MPU regions 0x00: MPU not present

Bits 7:1 Reserved.

Bit 0 SEPARATE: Separate flag.

This bit indicates support for unified or separate instruction and data memory maps:

0 = Unified 1 = Separate



4.2.6 MPU control register (MPU_CTRL)

Address offset: 0x04

Reset value: 0x0000 0000
Required privilege: Privileged
The MPU_CTRL register:

• Enables the MPU

- Enables the default memory map background region
- Enables use of the MPU when in the hard fault, Non-maskable Interrupt (NMI), and FAULTMASK escalated handlers.

When ENABLE and PRIVDEFENA are both set to 1:

- For privileged accesses, the default memory map is as described in Section 2.2:
 Memory model on page 28. Any access by privileged software that does not address an enabled memory region behaves as defined by the default memory map.
- Any access by unprivileged software that does not address an enabled memory region causes a memory management fault.

XN and Strongly-ordered rules always apply to the System Control Space regardless of the value of the ENABLE bit.

When the ENABLE bit is set to 1, at least one region of the memory map must be enabled for the system to function unless the PRIVDEFENA bit is set to 1. If the PRIVDEFENA bit is set to 1 and no regions are enabled, then only privileged software can operate.

When the ENABLE bit is set to 0, the system uses the default memory map. This has the same memory attributes as if the MPU is not implemented, see *Table 13: Memory access behavior on page 30*. The default memory map applies to accesses from both privileged and unprivileged software.

When the MPU is enabled, accesses to the System Control Space and vector table are always permitted. Other areas are accessible based on regions and whether PRIVDEFENA is set to 1.

Unless HFNMIENA is set to 1, the MPU is not enabled when the processor is executing the handler for an exception with priority –1 or –2. These priorities are only possible when handling a hard fault or NMI exception, or when FAULTMASK is enabled. Setting the HFNMIENA bit to 1 enables the MPU when operating with these two priorities.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|----|---------|-----|--------|----|----|----|----|------------|----------|---------|
| | | | | | | | Res | served | | | | | | | |
| | | | | | | | | | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | Reserve | ed | | | | | | PRIVDEFENA | HFNMIENA | EN ABLE |
| | | | | | | | | | | | | | rw | rw | rw |



PM0214 Rev 10 201/262

Bits 31:3 Reserved, forced by hardware to 0.

Bit 2 **PRIVDEFENA**: Enable priviliged software access to default memory map.

0: If the MPU is enabled, disables use of the default memory map. Any memory access to a location not covered by any enabled region causes a fault.

1: If the MPU is enabled, enables use of the default memory map as a background region for privileged software accesses.

Note: When enabled, the background region acts as if it is region number -1. Any region that is defined and enabled has priority over this default map.

If the MPU is disabled, the processor ignores this bit.

Bit 1 **HFNMIENA**: Enables the operation of MPU during hard fault, NMI, and FAULTMASK handlers. When the MPU is enabled:

- 0: MPU is disabled during hard fault, NMI, and FAULTMASK handlers, regardless of the value of the ENABLE bit
- 1: The MPU is enabled during hard fault, NMI, and FAULTMASK handlers.

Note: When the MPU is disabled, if this bit is set to 1 the behavior is unpredictable.

Bit 0 ENABLE: Enables the MPU

0: MPU disabled 1: MPU enabled

4.2.7 MPU region number register (MPU_RNR)

Address offset: 0x08

Reset value: 0x0000 0000
Required privilege: Privileged

The MPU_RNR register selects which memory region is referenced by the MPU_RBAR and

MPU RASR registers.



Bits 31:8 Reserved, forced by hardware to 0.

Bits 7:0 REGION[7:0]: MPU region

These bits indicate the MPU region referenced by the MPU_RBAR and MPU_RASR registers. The MPU supports 8 memory regions, so the permitted values of this field are 0-7.

Normally, you write the required region number to this register before accessing the MPU_RBAR or MPU_RASR. However you can change the region number by writing to the MPU_RBAR register with the VALID bit set to 1, see *MPU region base address register* (MPU_RBAR). This write updates the value of the REGION field.



4.2.8 MPU region base address register (MPU_RBAR)

Address offset: 0x0C

Reset value: 0x0000 0000
Required privilege: Privileged

The MPU_RBAR register defines the base address of the MPU region selected by the

MPU RNR register, and can update the value of the MPU RNR register.

Write to the MPU_RBAR register with the VALID bit set to 1 to change the current region

number and update the MPU_RNR register.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|---------|-------|------|---------|----|----|-------|----|-------|---------|----|
| | | | | | | | ADDF | R[31:N] | | | | | | | |
| | | | | | | | | | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | .ADDR[3 | 31:N] | | | | | VALID | | REGIO | ON[3:0] | |
| | | | | | | | | | | | rw | rw | rw | rw | rw |

Bits 31:N ADDR[31:N]: Region base address field

The value of N depends on the region size.

The region size, as specified by the SIZE field in the MPU_RASR, defines the value of N:

N = Log2(Region size in bytes),

If the region size is configured to 4 GB, in the MPU_RASR register, there is no valid ADDR field. In this case, the region occupies the complete memory map, and the base address is 0x00000000.

The base address is aligned to the size of the region. For example, a 64 KB region must be aligned on a multiple of 64 KB, for example, at 0x00010000 or 0x00020000.

Bits N-1:5 Reserved, forced by hardware to 0.

Bit 4 VALID: MPU region number valid

Write:

- 0: MPU_RNR register not changed, and the processor:
 - Updates the base address for the region specified in the MPU_RNR
 - Ignores the value of the REGION field
- 1: the processor:
 - updates the value of the MPU RNR to the value of the REGION field
 - updates the base address for the region specified in the REGION field.

Read:

Always read as zero.

Bits 3:0 REGION[3:0]: MPU region field

For the behavior on writes, see the description of the VALID field.

On reads, returns the current region number, as specified by the MPU_RNR register.

PM0214 Rev 10 203/262

4.2.9 MPU region attribute and size register (MPU_RASR)

Address offset: 0x10

Reset value: 0x0000 0000
Required privilege: Privileged

The MPU_RASR register defines the region size and memory attributes of the MPU region specified by the MPU_RNR, and enables that region and any subregions.

MPU_RASR is accessible using word or halfword accesses:

- The most significant halfword holds the region attributes
- The least significant halfword holds the region size and the region and subregion enable bits.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----------|----|-----|----------|----|---------|----|------|-------|----|----------|------|----|----|--------|
| | Reserved | i | XN | Reserved | | AP[2:0] | | Rese | erved | | TEX[2:0] | | S | С | В |
| | | | rw | | rw | rw | rw | | | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | SRI | D[7:0] | | | | Rese | erved | | | SIZE | | | ENABLE |
| rw | rw | rw | rw | rw | rw | rw | rw | | | rw | rw | rw | rw | rw | rw |

Bits 31:29 Reserved, forced by hardware to 0.

Bit 28 XN: Instruction access disable bit:

0: Instruction fetches enabled1: Instruction fetches disabled.

Bit 27 Reserved, forced by hardware to 0.

Bits 26:24 AP[2:0]: Access permission

For information about access permission, see Section 4: Core peripherals

For a description of AP bits encoding refer to Table 41 on page 196.

Bits 23:22 Reserved, forced by hardware to 0.

Bits 21:19 TEX[2:0]: memory attribute

For a description of TEX bits encoding refer to Table 39 on page 195

Bit 18 S: Shareable memory attribute

For a description of S bits encoding refer to Table 39 on page 195

Bit 17 **C: memory attribute**Bit 16 **B: memory attribute**

Bits 15:8 SRD: Subregion disable bits.

For each bit in this field:

0: corresponding sub-region is enabled

1: corresponding sub-region is disabled

See Subregions on page 198 for more information.

Region sizes of 128 bytes and less do not support subregions. When writing the attributes for such a region, write the SRD field as 0x00.

Bits 7:6 Reserved, forced by hardware to 0.

Bits 5:1 SIZE: Size of the MPU protection region.

The minimum permitted value is 3 (b00010), see SIZE field values for more information.

Bit 0 ENABLE: Region enable bit.

SIZE field values

The SIZE field defines the size of the MPU memory region specified by the MPU_RNR regsiter as follows:

(Region size in bytes) = $2^{(SIZE+1)}$

The smallest permitted region size is 32B, corresponding to a SIZE value of 4. *Table 43* gives example SIZE values, with the corresponding region size and value of N in the MPU_RBAR.

| SIZE value | Region size | Value of N ⁽¹⁾ | Note |
|-------------|-------------|---------------------------|------------------------|
| b00100 (4) | 32B | 5 | Minimum permitted size |
| b01001 (9) | 1KB | 10 | - |
| b10011 (19) | 1MB | 20 | - |
| b11101 (29) | 1GB | 30 | - |
| b11111 (31) | 4GB | b01100 | Maximum possible size |

Table 43. Example SIZE field values



PM0214 Rev 10 205/262

^{1.} In the MPU_RBAR register see Section 4.2.8 on page 203

4.2.10 MPU register map

Table 44. MPU register map and reset values

| Offset | Register | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 1 | 10 | σ. | 0 | 7 | . _{(C} | r. | 4 | က | 2 | , | 0 |
|--------|-------------|------|----------|----|-----|----------|----|-----|-----|----|----------|--------------|----------|---------|-------------|------|----------------|----|----|----|-----|------|------|----|---|------|-----------------|-----|-------|------|-------------|----------|----------------|
| 0x00 | MPU_TYPER | | | R | ese | erve | ed | | | | ı | RE | GIC |]NC | 7:0 |] | | | DR | EG | SIO | N[7 | 7:0] | | | | R | ese | erve | ed | | | SEPARATE |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x04 | MPU_CTRL | | I | | T | T | ı | ī | ı | ı | ı | ī | | | Res | ser\ | ved | | | | | ı | | ı | | ı | 1 | 1 | T | | PRIVDEFENA | HFNMIENA | ENABLE |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x08 | MPU_RNR | | | | | | | | | | | R | lese | erve | ed | | | | | | | | | | | R | EG | ilO | N[7 | ':0] | ļ | | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x0C | MPU_RBAR | | | | | | | | | | | | VALID | | DECIONI3-01 | | | | | | | | | | | | | | | | | | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x10 | MPU_RASR | | | | | | | | | | | | 5 | SIZI | E | | EN ABLE | | | | | | | | | | | | | | | | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x14 | MPU_RBAR_A1 | | | | | | | | | | | | ΑĽ | DDF | R[31 | 1:N] |] | | | | | | | | | | | | VALID | | PECIONI3-01 | | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x18 | MPU_RASR_A1 | | Reserved | | X | Reserved | Al | P[2 | :0] | | Reserved | | TEX[2:0] | | s | С | В | | | S | RE |)[7: | 0] | | | 2000 | Reserved | | S | SIZI | E | | EN ABLE |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x1C | MPU_RBAR_A2 | | | | | | | | | | | NEO 01 10:51 | | | | | | | | | | | | | | | | | | | | | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x20 | MPU_RASR_A2 | R_A2 | | | | | | | | | | E | | EN ABLE | | | | | | | | | | | | | | | | | | | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

47/

Table 44. MPU register map and reset values (continued)

| | | | - | | | | | • | | | | | | | | | | | | • | | | | | , | | | | | | | |
|--------|-------------|----|--------|----|----|----|-----|-----|----|-------------|----|----------|----|-----|------------------|-----|----|----|----|----|------|----|----|---|--------|----------|---|---|-------|---|-------------|---|
| Offset | Register | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 6 | 8 | 7 | 9 | 2 | 4 | 3 | 2 | 0 |
| 0x1C | MPU_RBAR_A3 | | | | | | | | | | | | ΑĽ | DDF | R[3 ⁻ | 1:N |] | | | | | | | | | | | | VALID | | REGION[3:0] | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 |
| 0x20 | MPU_RASR_A3 | | pe ved | | | Al | 2[2 | :0] | 3 | חשא ושאים א | | TEX[2:0] | | s | С | В | | | S | RD | [7:0 | 0] | | | 000000 | חשא האשר | | S | SIZE | | EN ABLE | |
| | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 |

^{1.} Alias of MPU_RBAR register

PM0214 Rev 10 207/262

^{2.} Alias of MPU_RASR register

Nested vectored interrupt controller (NVIC) 4.3

This section describes the Nested Vectored Interrupt Controller (NVIC) and the registers it uses. The NVIC supports:

- Up to 240 interrupts
- A programmable priority level of 0-15 for each interrupt. A higher level corresponds to a lower priority, so level 0 is the highest interrupt priority
- Level and pulse detection of interrupt signals
- Dynamic reprioritization of interrupts
- Grouping of priority values into group priority and subpriority fields
- Interrupt tail-chaining
- An external Non-maskable interrupt (NMI)

The processor automatically stacks its state on exception entry and unstacks this state on exception exit, with no instruction overhead. This provides low latency exception handling. The hardware implementation of the NVIC registers is:

Table 45. NVIC register summary

| Address | Name | Туре | Required privilege | Reset value | Description |
|---------------------------|---------------------------------------|------|--------------------|-------------|--|
| 0xE000E100- 0xE000E11F | NVIC_ISER0- NVIC_ISER7 | RW | Privileged | 0x00000000 | Table 4.3.2: Interrupt set-enable register x (NVIC_ISERx) on page 210 |
| 0XE000E180- 0xE000E19F | NVIC_ICER0- NVIC_ICER7 | RW | Privileged | 0x00000000 | Table 4.3.3: Interrupt clear-enable register x (NVIC_ICERx) on page 211 |
| 0XE000E200- 0xE000E21F | · · · · · · · · · · · · · · · · · · · | | Privileged | 0x00000000 | Table 4.3.4: Interrupt set-pending register x (NVIC_ISPRx) on page 212 |
| 0XE000E280- 0xE000E29F | NVIC_ICPR0- NVIC_ICPR7 | RW | Privileged | 0x00000000 | Table 4.3.5: Interrupt clear-pending register x (NVIC_ICPRx) on page 213 |
| 0xE000E300- 0xE000E31F | NVIC_IABR0- NVIC_IABR7 | RW | Privileged | 0x00000000 | Table 4.3.6: Interrupt active bit register x (NVIC_IABRx) on page 214 |
| 0xE000E400- 0xE000E4EF | NVIC_IPR0- NVIC_IPR59 | RW | Privileged | 0x00000000 | Table 4.3.7: Interrupt priority register x (NVIC_IPRx) on page 215 |
| 0xE000EF00 | STIR | WO | Configurable | 0x00000000 | Table 4.3.8: Software trigger interrupt register (NVIC_STIR) on page 216 |

Note: The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

PM0214 Rev 10 208/262



4.3.1 Accessing the Cortex-M4 NVIC registers using CMSIS

CMSIS functions enable software portability between different Cortex-M profile processors. To access the NVIC registers when using CMSIS, use the following functions:

Table 46. CMSIS access NVIC functions

| CMSIS function ⁽¹⁾ | Description |
|--|--|
| void NVIC_EnableIRQ(IRQn_Type IRQn) | Enables an interrupt or exception. |
| void NVIC_DisableIRQ(IRQn_Type IRQn) | Disables an interrupt or exception. |
| void NVIC_SetPendingIRQ(IRQn_Type IRQn) | Sets the pending status of interrupt or exception to 1. |
| void NVIC_ClearPendingIRQ(IRQn_Type IRQn) | Clears the pending status of interrupt or exception to 0. |
| uint32_t NVIC_GetPendingIRQ(IRQn_Type IRQn) | Reads the pending status of interrupt or exception. This function returns non-zero value if the pending status is set to 1. |
| void NVIC_SetPriority(IRQn_Type IRQn, uint32_t priority) | Sets the priority of an interrupt or exception with configurable priority level to 1. |
| uint32_t NVIC_GetPriority(IRQn_Type IRQn) | Reads the priority of an interrupt or exception with configurable priority level. This function return the current priority level. |

^{1.} The input parameter IRQn is the IRQ number. Possible "n" values depend on product. Refer to reference manual/datasheet of relevant STM32 product for related information.

PM0214 Rev 10 209/262

4.3.2 Interrupt set-enable register x (NVIC_ISERx)

Address offset: 0x100 + 0x04 * x, (x = 0 to 7)

Reset value: 0x0000 0000 Required privilege: Privileged

NVIC_ISER0 bits 0 to 31 are for interrupt 0 to 31, respectively NVIC_ISER1 bits 0 to 31 are for interrupt 32 to 63, respectively

....

NVIC_ISER6 bits 0 to 31 are for interrupt 192 to 223, respectively NVIC_ISER7 bits 0 to 15 are for interrupt 224 to 239, respectively

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|---------------|----|----|----|----|----|------|----------|----|----|----|----|----|----|----|
| | SETENA[31:16] | | | | | | | | | | | | | | |
| rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | SETE | NA[15:0] | | | | | | | |
| rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs |

Bits 31:0 SETENA: Interrupt set-enable bits.

Write:

0: No effect

1: Enable interrupt

Read:

0: Interrupt disabled

1: Interrupt enabled.

If a pending interrupt is enabled, the NVIC activates the interrupt based on its priority. If an interrupt is not enabled, asserting its interrupt signal changes the interrupt state to pending, but the NVIC never activates the interrupt, regardless of its priority.

Bits 16 to 31 of the NVIC_ISER7 register are reserved.

Note: The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

4.3.3 Interrupt clear-enable register x (NVIC_ICERx)

Address offset: 0x180 + 0x04 * x, (x = 0 to 7)

Reset value: 0x0000 0000 Required privilege: Privileged

NVIC_ICER0 bits 0 to 31 are for interrupt 0 to 31, respectively NVIC_ICER1 bits 0 to 31 are for interrupt 32 to 63, respectively

....

NVIC_ICER6 bits 0 to 31 are for interrupt 192 to 223, respectively NVIC_ICER7 bits 0 to 15 are for interrupt 224 to 239, respectively

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|-------|---------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| | CLRENA[31:16] | | | | | | | | | | | | | | |
| rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | CLRENA[15:0] | | | | | | | | | | | | | | |
| rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 |

Bits 31:0 **CLRENA**: Interrupt clear-enable bits.

Write:

0: No effect

1: Disable interrupt

Read:

0: Interrupt disabled

1: Interrupt enabled.

Bits 16 to 31 of the NVIC_ICER7 register are reserved.

Note: The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

5

PM0214 Rev 10 211/262

4.3.4 Interrupt set-pending register x (NVIC_ISPRx)

Address offset: 0x200 + 0x04 * x, (x = 0 to 7)

Reset value: 0x0000 0000
Required privilege: Privileged

NVIC_ISPR0 bits 0 to 31 are for interrupt 0 to 31, respectively NVIC_ISPR1 bits 0 to 31 are for interrupt 32 to 63, respectively

....

NVIC_ISPR6 bits 0 to 31 are for interrupt 192 to 223, respectively NVIC_ISPR7 bits 0 to 15 are for interrupt 224 to 239, respectively

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----------------|----|----|----|----|----|-------|-----------|----|----|----|----|----|----|----|
| | SETPEND[31:16] | | | | | | | | | | | | | | |
| rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | SETPE | END[15:0] | | | | | | | |
| rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs | rs |

Bits 31:0 SETPEND: Interrupt set-pending bits

Write:

0: No effect

1: Changes interrupt state to pending

Read:

0: Interrupt is not pending

1: Interrupt is pending

Writing 1 to the ISPR bit corresponding to an interrupt that is pending has no effect.

Writing 1 to the ISPR bit corresponding to a disabled interrupt sets the state of that interrupt to pending.

Bits 16 to 31 of the NVIC ISPR7 register are reserved.

Note: The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

4.3.5 Interrupt clear-pending register x (NVIC_ICPRx)

Address offset: 0x280 + 0x04 * x, (x = 0 to 7)

Reset value: 0x0000 0000 Required privilege: Privileged

NVIC_ICPR0 bits 0 to 31 are for interrupt 0 to 31, respectively NVIC_ICPR1 bits 0 to 31 are for interrupt 32 to 63, respectively

....

NVIC_ICPR6 bits 0 to 31 are for interrupt 192 to 223, respectively NVIC_ICPR7 bits 0 to 15 are for interrupt 224 to 239, respectively

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|-------|----------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| | CLRPEND[31:16] | | | | | | | | | | | | | | |
| rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 | rc_w1 |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | CLRPEND[15:0] | | | | | | | | | | | | | | |
| rc_w1 | rc w1 | rc_w1 |

Bits 31:0 CLRPEND: Interrupt clear-pending bits

Write:

0: No effect

1: Removes the pending state of an interrupt

Read

0: Interrupt is not pending

1: Interrupt is pending

Writing 1 to an ICPR bit does not affect the active state of the corresponding interrupt. Bits 16 to 31 of the NVIC_ICPR7 register are reserved.

Note: The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

577

PM0214 Rev 10 213/262

4.3.6 Interrupt active bit register x (NVIC_IABRx)

Address offset: 0x300 + 0x04 * x, (x = 0 to 7)

Reset value: 0x0000 0000 Required privilege: Privileged

NVIC_IABR0 bits 0 to 31 are for interrupt 0 to 31, respectively NVIC_IABR1 bits 0 to 31 are for interrupt 32 to 63, respectively

....

NVIC_IABR6 bits 0 to 31 are for interrupt 192 to 223, respectively NVIC_IABR7 bits 0 to 15 are for interrupt 224 to 239, respectively

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|---------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | ACTIVE[31:16] | | | | | | | | | | | | | | |
| r | r | r | r | r | r | r | r | r | r | r | r | r | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | ACTIVE[15:0] | | | | | | | | | | | | | | |
| r | r | r | r | r | r | r | r | r | r | r | r | r | r | r | r |

Bits 31:0 ACTIVE: Interrupt active flags

0: Interrupt not active1: Interrupt active

A bit reads as 1 if the status of the corresponding interrupt is active or active and pending. Bits 16 to 31 of the NVIC_IABR7 register are reserved.

Note: The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

4.3.7 Interrupt priority register x (NVIC_IPRx)

Address offset: 0x400 + 0x04 * x, (x = 0 to 59)

Reset value: 0x0000 0000 Required privilege: Privileged

The NVIC_IPRx (x = 0 to 59) byte-accessible registers provide 8-bit priority fields IP[N] (N = 0 to 239) for each of the 240 interrupts. Every register holds four IP[N] fields of the CMSIS interrupt priority array, as shown in *Figure 19*.

Figure 19. Mapping of IP[N] fields in NVIC_IPRx registers

| | 31 2 | 4 23 16 | 15 8 | 7 0 |
|------------|----------|----------|----------|---------|
| NVIC_IPR59 | IP[239] | IP[238] | IP[237] | IP[236] |
| | | | | |
| NVIC_IPRx | IP[4x+3] | IP[4x+2] | IP[4x+1] | IP[4x] |
| | | | | |
| NVIC_IPR0 | IP[3] | IP[2] | IP[1] | IP[0] |

The following table shows the bit assignment of any NVIC_IPRx register. Each IP[N] field order can be expressed as N = 4 * x + byte offset.

Table 47. NVIC_IPRx bit assignment

| Bits | Name | Function |
|---------|---------------------------|--|
| [31:24] | Priority, byte offset = 3 | Each priority field holds a priority value, 0-255. The lower the |
| [23:16] | Priority, byte offset = 2 | value, the greater the priority of the corresponding interrupt. The |
| [15:8] | Priority, byte offset = 1 | processor implements only bits[7:4] of each field, bits[3:0] read as zero and ignore writes. |
| [7:0] | Priority, byte offset = 0 | as zero and ignore writes. |

See *Interrupt set-enable register x (NVIC_ISERx) on page 210* for a view of the interrupt priorities from the software perspective.

The number of interrupts is product-dependent. Refer to reference manual/datasheet of relevant STM32 product for related information.

577

Note:

PM0214 Rev 10 215/262

4.3.8 Software trigger interrupt register (NVIC_STIR)

Address offset: 0xE00 Reset value: 0x0000 0000

Required privilege: When the USERSETMPEND bit in the SCR is set to 1, unprivileged software can access the STIR, see *Section 4.4.6: System control register (SCR)*. Only privileged software can enable unprivileged access to the STIR.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----------|----|---------|----|----|----|----|----|----|----|-----------|----|----|----|----|
| | Reserved | | | | | | | | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | Reserve | ٨ | | | | | | | INTID[8:0 |] | | | |
| | Reserved | | | | | | | W | w | w | w | w | w | w | w |

Bits 31:9 Reserved, must be kept cleared.

Bits 8:0 INTID Software generated interrupt ID

Write to the STIR to generate a Software Generated Interrupt (SGI). The value to be written is the Interrupt ID of the required SGI, in the range 0-239. For example, a value of 0x03 specifies interrupt IRQ3.



4.3.9 Level-sensitive and pulse interrupts

STM32 interrupts are both level-sensitive and pulse-sensitive. Pulse interrupts are also described as edge-triggered interrupts.

A level-sensitive interrupt is held asserted until the peripheral deasserts the interrupt signal. Typically this happens because the ISR accesses the peripheral, causing it to clear the interrupt request. A pulse interrupt is an interrupt signal sampled synchronously on the rising edge of the processor clock. To ensure the NVIC detects the interrupt, the peripheral must assert the interrupt signal for at least one clock cycle, during which the NVIC detects the pulse and latches the interrupt.

When the processor enters the ISR, it automatically removes the pending state from the interrupt, see *Hardware and software control of interrupts*. For a level-sensitive interrupt, if the signal is not deasserted before the processor returns from the ISR, the interrupt becomes pending again, and the processor must execute its ISR again. This means that the peripheral can hold the interrupt signal asserted until it no longer needs servicing.

Hardware and software control of interrupts

The Cortex-M4 latches all interrupts. A peripheral interrupt becomes pending for one of the following reasons:

- The NVIC detects that the interrupt signal is HIGH and the interrupt is not active
- The NVIC detects a rising edge on the interrupt signal
- Software writes to the corresponding interrupt set-pending register bit, see
 Section 4.3.4: Interrupt set-pending register x (NVIC_ISPRx), or to the STIR to make
 an SGI pending, see Section 4.3.8: Software trigger interrupt register (NVIC_STIR).

A pending interrupt remains pending until one of the following:

- The processor enters the ISR for the interrupt. This changes the state of the interrupt from pending to active. Then:
 - For a level-sensitive interrupt, when the processor returns from the ISR, the NVIC samples the interrupt signal. If the signal is asserted, the state of the interrupt changes to pending, which might cause the processor to immediately re-enter the ISR. Otherwise, the state of the interrupt changes to inactive.
 - For a pulse interrupt, the NVIC continues to monitor the interrupt signal, and if this is pulsed the state of the interrupt changes to pending and active. In this case, when the processor returns from the ISR the state of the interrupt changes to pending, which might cause the processor to immediately re-enter the ISR. If the interrupt signal is not pulsed while the processor is in the ISR, when the processor returns from the ISR the state of the interrupt changes to inactive.
- Software writes to the corresponding interrupt clear-pending register bit.
 For a level-sensitive interrupt, if the interrupt signal is still asserted, the state of the interrupt does not change. Otherwise, the state of the interrupt changes to inactive.
 For a pulse interrupt, state of the interrupt changes to:
 - Inactive, if the state was pending
 - Active, if the state was active and pending.



PM0214 Rev 10 217/262

4.3.10 NVIC design hints and tips

Ensure software uses correctly aligned register accesses. The processor does not support unaligned accesses to NVIC registers. See the individual register descriptions for the supported access sizes.

An interrupt can enter pending state even it is disabled. Disabling an interrupt only prevents the processor from taking that interrupt.

Before programming VTOR to relocate the vector table, ensure the vector table entries of the new vector table are setup for fault handlers, NMI and all enabled exception like interrupts. For more information see Section 4.4.4: Vector table offset register (VTOR) on page 227.

NVIC programming hints

Software uses the CPSIE I and CPSID I instructions to enable and disable interrupts. The CMSIS provides the following intrinsic functions for these instructions:

```
void __disable_irq(void) // Disable Interrupts
void __enable_irq(void) // Enable Interrupts
```

In addition, the CMSIS provides a number of functions for NVIC control, including:

| CMSIS interrupt control function | Description |
|---|---|
| void NVIC_SetPriorityGrouping(uint32_t priority_grouping) | Set the priority grouping |
| void NVIC_EnableIRQ(IRQn_t IRQn) | Enable IRQn |
| void NVIC_DisableIRQ(IRQn_t IRQn) | Disable IRQn |
| uint32_t NVIC_GetPendingIRQ (IRQn_t IRQn) | Return true (IRQ-Number) if IRQn is pending |
| void NVIC_SetPendingIRQ (IRQn_t IRQn) | Set IRQn pending |
| void NVIC_ClearPendingIRQ (IRQn_t IRQn) | Clear IRQn pending status |
| uint32_t NVIC_GetActive (IRQn_t IRQn) | Return the IRQ number of the active interrupt |
| void NVIC_SetPriority (IRQn_t IRQn, uint32_t priority) | Set priority for IRQn |
| uint32_t NVIC_GetPriority (IRQn_t IRQn) | Read priority of IRQn |
| void NVIC_SystemReset (void) | Reset the system |

Table 48. CMSIS functions for NVIC control

The input parameter IRQn is the IRQ number, see *Table 17: Properties of the different exception types on page 38*. For more information about these functions see the CMSIS documentation.

4.3.11 NVIC register map

This table shows the NVIC register map and reset values. The base address of the main NVIC register block is 0xE000E100. The NVIC_STIR register is located in a separate block at 0xE000EF00.

Table 49. NVIC register map and reset values

| Offset | Register | 31 | 30 | 20 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 5 7 | ე <u>4</u> | 13 | 12 | 7 | 10 | 6 | 00 | 7 | . (|) L | o ~ | 4 | က | 7 | - 0 |
|------------|--------------------------|----|----|----|----|----|----|-----|----------|-----|--------|----|----|----|-----|-----------|-----|------------|-----|----|----------|-----|----|-----------|-----|------|-----|------------|-----|---|---|----------------|
| 0400 | NVIC_ISER0 | | | | | | | | | | | | | | SI | ETE | NΑ | [31: | 0] | | | | | | | | | | | | | |
| 0x100 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| 0.404 | NVIC_ISER1 | | | | | | | | | | | | | | SE | TEN | IA[| 63:3 | 32] | | | | | | | | | | | | | |
| 0x104 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| : | : | | | | | | | | | | | | | | | | : | | | | | | | | | | | | | | | |
| 0x11C | NVIC_ISER7 | | | | | | | Res | ser | vec | t | | | | | | | | | | SE | ETE | ΞN | A [2 | 239 | 9:2: | 24] | | | | | |
| UXTIC | Reset Value | - | - | - | - | - | - | - | - | | | | | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | О |) (| 0 | 0 | 0 0 |
| 0x180 | NVIC_ICER0 | | | | | | | | | | | | | | CI | LREI | NΑ | [31: | 0] | | | | | | | | | | | | | |
| 0.00 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| 0x184 | NVIC_ICER1 | | | | | | | | | | | | | | CL | REN | IA[| 63:3 | 32] | | | | | | | | | | | | | |
| 0.104 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| : | : | | | | | | | | | | | | | | | | : | | | | | | | | | | | | | | | |
| 0x19C | NVIC_ICER7 | | | | | | ı | Res | ser | vec | t | | | | | | | | | | CL | RI | ΞN | A [2 | 239 | 9:2 | 24 |] | | | | |
| 0.130 | Reset Value | - | - | - | - | - | - | - | - | | | | | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | О |) (| 0 | 0 | 0 0 |
| 0x200 | NVIC_ISPR0 | | | | | | | | | | | | | | SE | TPE | ΝE |)[31 | :0] | | | | | | | | | | | | | |
| 0,200 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| 0x204 | NVIC_ISPR1 | | | | | | | | | | | | | , | SE | TPE | ΝD | [63: | 32] | | | | | | | | | | | | | |
| 03204 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| : | : | | | | | | | | | | | | | | | | : | | | | | | | | | | | | | | | |
| 0x21C | NVIC_ISPR7 | | | | | | ı | Res | ser | vec | t | | | | | | | | | | SE | TP | ΕN | ID | [23 | 9:2 | 224 | !] | | | | |
| UXZIC | Reset Value | - | - | - | - | - | - | - | - | | | | | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | О |) (| 0 | 0 | 0 0 |
| 0x280 | NVIC_ICPR0 | | | | | | | | | | | | | | CL | RPE | NE |)[31 | :0] | | | | | | | | | | | | | |
| 0,200 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| 0x284 | NVIC_ICPR1 | | | | | | | | | | | | | (| CLI | RPE | ND | [63: | 32] | | | | | | | | | | | | | |
| 0,204 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |) (| 0 | 0 | 0 0 |
| | | | | | | | | | | | | | | | | | : | | | | | | | | | | | | | | | |
| : | : | | | | | | | | | | _ | | | | | | | | | | <u> </u> | | | | | | | | | | | |
| | : NVIC_ICPR7 | | | | | | _ | Res | ser | vec | t t | | | | | | | | | | CL | RP | ΕN | ID | 23 | 9:2 | 224 | 1] | | | | |
| : 0x29C | : NVIC_ICPR7 Reset Value | - | - | | - | L | - | Res | ser - | vec | | | | | | 0 | 0 | 0 | 0 | | OLI O | | | ID 0 | - | 9:2 | | ÷ |) (| 0 | 0 | 0 0 |
| | _ | - | - | - | - | - | - | Res | ser - | vec | | | | | A | 0 CTI\ | | | | | | | | | - | | | ÷ |) (| 0 | 0 | 0 0 |

Table 49. NVIC register map and reset values (continued)

| Offset | Register | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 4 | 13 | 12 | 11 | 10 | 6 | ∞ | ^ | . დ | ינ | 4 | r | א כ | 4 - | 0 |
|--------|-------------|----|----|----|-----|-----|----|-----|-----|-----|----|-------|------|-------|-----|----|-----|----|-----|----|-----|-----|-----|----|----|-----|-----|-----|------|-----|-----|-----|---|
| 0.204 | NVIC_IABR1 | | | | | | | | | | | | | | Α | СТ | IVE | [6 | 3:3 | 2] | | | | | | | | | | | | | |
| 0x304 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| : | : | | | | | | | | | | | | | | | | | : | | | | | | | | | | | | | | | |
| 0x31C | NVIC_IABR7 | | | | | | F | Res | ser | vec | t | | | | | | | | | | | A(| CTI | VE | [2 | 239 | :22 | 24] | | | | | |
| 0,310 | Reset Value | - | - | - | - | - | - | 1 | - | | | | | | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | О | 0 | 0 | 0 |
| 0x400 | NVIC_IPR0 | | | | ΙP | [3] | | | | | | | ΙP | [2] | | | | | | | ΙP | [1] | | | | | | | ΙP | 0]9 |] | | |
| 0.00 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | C | 0 | 0 | 0 |
| 0x404 | NVIC_IPR1 | | | | ΙP | [7] | | | | | | | ΙP | [6] | | | | | | | ΙP | [5] | | | | | | | ΙP | 9[4 |] | | |
| 0,404 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | О | 0 | 0 | 0 |
| : | : | | | | | | | | | | | | | | | | | : | | | | | | | | | | | | | | | |
| 0x4EC | NVIC_IPR59 | | | I | P[2 | 239 |] | | | | | I | P[2 | 238 |] | | | | | I | P[2 | 237 |] | | | | | | IP[2 | 23 | 6] | | |
| UX4EC | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | О | 0 | 0 | 0 |
| | | | | | | | | | | | | SCE | 3 re | giste | ers | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | R | ese | rved | l | | | | | | | | | | | | | | | | | | |
| 0xE00 | NVIC_STIR | | | | | | | | | | ı | Re | ser | Ver | 1 | | | | | | | | | | | | I | NT | ΓID | [8: | 0] | | |
| 0XL00 | Reset Value | | | | | | | | | | | ι (Ο, | JU1 | v C C | 4 | | | | | | | | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

4.4 System control block (SCB)

The *System control block* (SCB) provides system implementation information, and system control. This includes configuration, control, and reporting of the system exceptions.

Table 50. Summary of the system control block registers

| | 1 | | | , <u></u> | teni control block registers |
|------------|---------------------|-------------------|--------------------|-------------|--|
| Address | Name | Туре | Required privilege | Reset value | Description |
| 0xE000E008 | ACTLR | RW | Privileged | 0x00000000 | Table 4.4.1: Auxiliary control register (ACTLR) on page 222 |
| 0xE000ED00 | CPUID | RO | Privileged | 0x410FC241 | Table 4.4.2: CPUID base register (CPUID) on page 224 |
| 0xE000ED04 | ICSR | RW ⁽¹⁾ | Privileged | 0x00000000 | Table 4.4.3: Interrupt control and state register (ICSR) on page 225 |
| 0xE000ED08 | VTOR | RW | Privileged | 0x00000000 | Table 4.4.4: Vector table offset register (VTOR) on page 227 |
| 0xE000ED0C | AIRCR | RW ⁽¹⁾ | Privileged | 0xFA050000 | Table 4.4.5: Application interrupt and reset control register (AIRCR) on page 228 |
| 0xE000ED10 | SCR | RW | Privileged | 0x00000000 | Table 4.4.6: System control register (SCR) on page 230 |
| 0xE000ED14 | CCR | RW | Privileged | 0x00000200 | Table 4.4.7: Configuration and control register (CCR) on page 231 |
| 0xE000ED18 | SHPR1 | RW | Privileged | 0x00000000 | |
| 0xE000ED1C | SHPR2 | RW | Privileged | 0x00000000 | Table 4.4.8: System handler priority registers (SHPRx) on page 233 |
| 0xE000ED20 | SHPR3 | RW | Privileged | 0x00000000 | on page 200 |
| 0xE000ED24 | SHCSR | RW | Privileged | 0x00000000 | Table 4.4.9: System handler control and state register (SHCSR) on page 235 |
| 0xE000ED28 | CFSR | RW | Privileged | 0x00000000 | Table 4.4.10: Configurable fault status register (CFSR; UFSR+BFSR+MMFSR) on page 237 |
| 0xE000ED28 | MMSR | RW | Privileged | 0x00 | MemManage Fault Status Register Table 4.4.10 on page 237 |
| 0xE000ED29 | BFSR ⁽²⁾ | RW | Privileged | 0x00 | BusFault Status Register Table 4.4.10 on page 237 |
| 0xE000ED2A | UFSR ⁽²⁾ | RW | Privileged | 0x0000 | UsageFault Status Register Table 4.4.10 on page 237 |
| 0xE000ED2C | HFSR | RW | Privileged | 0x00000000 | Table 4.4.14: Hard fault status register (HFSR) on page 241 |
| 0xE000ED34 | MMAR | RW | Privileged | Unknown | Table 4.4.15: Memory management fault address register (MMFAR) on page 242 |
| 0xE000ED38 | BFAR | RW | Privileged | Unknown | Table 4.4.16: Bus fault address register (BFAR) on page 242 |
| 0xE000ED3C | AFSR | RW | Privileged | 0x00000000 | Table 4.4.17: Auxiliary fault status register (AFSR) on page 243 |

^{1.} See the register description for more information.



PM0214 Rev 10 221/262

^{2.} A subregister of the CFSR

4.4.1 Auxiliary control register (ACTLR)

Address offset: 0x00 (base adress = 0xE000 E008)

Reset value: 0x0000 0000
Required privilege: Privileged

By default this register is set to provide optimum performance from the Cortex-M4 processor, and does not normally require modification. The ACTLR register provides disable bits for the following processor functions:

IT folding

write buffer use for accesses to the default memory map

• interruption of multi-cycle instructions.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|------|-------|----|----|-------------|-------------|--------|----|----|----|----|-------------|----------------|----------------|
| | | | | | | | Res | served | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | Rese | erved | | | DISOO FP | DISFP CA | | | | | | DISFOL D | DISDE FWBUF | DISMC YCINT |
| | | | | | | rw | rw | | | | | | rw | rw | rw |

Bits 31:10 Reserved

Bit 9 DISOOFP

Disables floating point instructions completing out of order with respect to integer instructions.

Bit 8 DISFPCA

Disables automatic update of CONTROL.FPCA.

The value of this bit should be written as zero or preserved (SBZP).

Bit 7:3 Reserved

Bit 2 DISFOLD

Disables folding of IT instructions:

- 0: Enables IT instructions folding.
- 1: Disables IT instructions folding.

In some situations, the processor can start executing the first instruction in an IT block while it is still executing the IT instruction. This behavior is called IT folding, and improves performance, However, IT folding can cause jitter in looping. If a task must avoid jitter, set the DISFOLD bit to 1 before executing the task, to disable IT folding.

Bit 1 DISDEFWBUF

This bit only affects write buffers implemented in the Cortex-M4 processor.

Disables write buffer use during default memory map accesses: This causes all BusFaults to be precise BusFaults but decreases performance because any store to memory must complete before the processor can execute the next instruction.

- 0: Enable write buffer use
- 1: Disable write buffer use: Stores to memory is completed before next instruction.

Bit 0 DISMCYCINT

Disables interrupt of multi-cycle instructions. When set to 1, disables interruption of load multiple and store multiple instructions. This increases the interrupt latency of the processor because any LDM or STM must complete before the processor can stack the current state and enter the interrupt handler.

- 0: Enable interruption latency of the processor (load/store and multiply/divide operations).
- 1: Disable interruptions latency.



PM0214 Rev 10 223/262

4.4.2 CPUID base register (CPUID)

Address offset: 0x00

Reset value: 0x410F C241 Required privilege: Privileged

The CPUID register contains the processor part number, version, and implementation

information.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|-------|--------|----|-------|----|----|-----|------|----|----|-----|-------|----|
| | | | Imple | menter | | | | | Var | iant | | | Con | stant | |
| r | r | r | r | r | r | r | r | r | r | r | r | r | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | P | artNo | | | | | | | Rev | ision | |
| r | r | r | r | r | r | r | r | r | r | r | r | r | r | r | r |

Bits 31:24 Implementer: Implementer code

0x41: Arm

Bits 23:20 Variant: Variant number

The r value in the rnpn product revision identifier

0x0: revision 0

Bits 19:16 Constant: Reads as 0xF

Bits 15:4 PartNo: Part number of the processor

0xC24: = Cortex-M4

Bits 3:0 Revision: Revision number

The p value in the rnpn product revision identifier, indicates patch release.

0x1: = patch 1

4.4.3 Interrupt control and state register (ICSR)

Address offset: 0x04

Reset value: 0x0000 0000
Required privilege: Privileged

The ICSR:

Provides:

- A set-pending bit for the *Non-Maskable Interrupt* (NMI) exception

Set-pending and clear-pending bits for the PendSV and SysTick exceptions

Indicates:

The exception number of the exception being processed

Whether there are preempted active exceptions

The exception number of the highest priority pending exception

Whether any interrupts are pending.

Caution: When you write to the ICSR, the effect is unpredictable if you:

- Write 1 to the PENDSVSET bit and write 1 to the PENDSVCLR bit
- Write 1 to the PENDSTSET bit and write 1 to the PENDSTCLR bit.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|------------|---------|----------|-----------|-----------|-----------|-----------|------|-------|------------|-----|----------|-------|------|----------|--------|
| NMIPENDSET | Res | erved | PENDSVSET | PENDSVCLR | PENDSTSET | PENDSTCLR | Rese | erved | ISRPENDING | | Reserved | l | VECT | rpendin(| G[6:4] |
| rw | | | rw | w | rw | w | | | r | | | | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| V | /ECTPEN | IDING[3: | 0] | RETOBASE | Rese | erved | | | | VEC | CTACTIVE | [8:0] | | | |
| r | r | r | r | r | | | rw | rw | rw | rw | rw | rw | rw | rw | rw |

Bit 31 NMIPENDSET: NMI set-pending bit.

Write:

0: No effect

1: Change NMI exception state to pending.

Read

0: NMI exception is not pending

1: NMI exception is pending

Because NMI is the highest-priority exception, normally the processor enter the NMI exception handler as soon as it registers a write of 1 to this bit, and entering the handler clears this bit to 0. A read of this bit by the NMI exception handler returns 1 only if the NMI signal is reasserted while the processor is executing that handler.

Bits 30:29 Reserved



PM0214 Rev 10 225/262

Bit 28 PENDSVSET: PendSV set-pending bit.

Write:

- 0: No effect
- 1: Change PendSV exception state to pending.

Read:

- 0: PendSV exception is not pending
- 1: PendSV exception is pending

Writing 1 to this bit is the only way to set the PendSV exception state to pending.

- Bit 27 PENDSVCLR: PendSV clear-pending bit. This bit is write-only. On a read, value is unknown.
 - 0: No effect
 - 1: Removes the pending state from the PendSV exception.
- Bit 26 PENDSTSET: SysTick exception set-pending bit.

Write:

- 0: No effect
- 1: Change SysTick exception state to pending

Read:

- 0: SysTick exception is not pending
- 1: SysTick exception is pending
- Bit 25 **PENDSTCLR:** SysTick exception clear-pending bit. Write-only. On a read, value is unknown.
 - 0: No effect
 - 1: Removes the pending state from the SysTick exception.
- Bit 24 Reserved, must be kept cleared.
- Bit 23 This bit is reserved for Debug use and reads-as-zero when the processor is not in Debug.
- Bit 22 ISRPENDING: Interrupt pending flag, excluding NMI and Faults.
 - 0: Interrupt not pending
 - 1: Interrupt pending
- Bits 21:19 Reserved, must be kept cleared.
- Bits 18:12 **VECTPENDING**: Pending vector. Indicates the exception number of the highest priority pending enabled exception.
 - 0: No pending exceptions
 - Other values: The exception number of the highest priority pending enabled exception.

The value indicated by this field includes the effect of the BASEPRI and FAULTMASK registers, but not any effect of the PRIMASK register.

- Bit 11 **RETTOBASE:** Return to base level. Indicates whether there are preempted active exceptions:
 - 0: There are preempted active exceptions to execute
 - 1: There are no active exceptions, or the currently-executing exception is the only active exception.
- Bits 10:9 Reserved

226/262

- Bits 8:0 VECTACTIVE Active vector. Contains the active exception number:
 - 0: Thread mode
 - Other values: The exception number⁽¹⁾ of the currently active exception.

Note: Subtract 16 from this value to obtain CMSIS IRQ number required to index into the Interrupt Clear-Enable, Set-Enable, Clear-Pending, Set-Pending, or Priority Registers, see Table 6 on page 22.

1. This is the same value as IPSR bits[8:0], see Interrupt program status register on page 22.

PM0214 Rev 10

4.4.4 Vector table offset register (VTOR)

Address offset: 0x08

Reset value: 0x0000 0000 Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|------|-------|----|---------|------|----|----|----|-------|----------|----|----------|----|----|----|----|
| Rese | erved | | | | | | | TBLOF | F[29:16] | | | | | | |
| | | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | TE | BLOFF[1 | 5:9] | | | | | | | Reserved | l | | | |
| rw | rw | rw | rw | rw | rw | rw | | | | | | | | | |

Bits 31:30 Reserved, must be kept cleared

Bits 29:9 TBLOFF: Vector table base offset field.

It contains bits [29:9] of the offset of the table base from memory address 0x00000000. When setting TBLOFF, you must align the offset to the number of exception entries in the vector table. The minimum alignment is 128 words. Table alignment requirements mean that bits[8:0] of the table offset are always zero.

Bit 29 determines whether the vector table is in the code or SRAM memory region.

0: Code 1: SRAM

Note: Bit 29 is sometimes called the TBLBASE bit.

Bits 8:0 Reserved, must be kept cleared



PM0214 Rev 10 227/262

4.4.5 Application interrupt and reset control register (AIRCR)

Address offset: 0x0C

Reset value: 0xFA05 0000 Required privilege: Privileged

The AIRCR provides priority grouping control for the exception model, endian status for data

accesses, and reset control of the system.

To write to this register, you must write 0x5FA to the VECTKEY field, otherwise the

processor ignores the write.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|-----------|----|------|-------|----|-----|---------|------------|----------|----------|------------|----|----|---------------------|-----------------------|---------------|
| | | | | | VEC | TKEYSTA | T[15:0](re | ad)/ VEC | TKEY[15: | :0](write) | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| ENDIANESS | | Rese | erved | | F | PRIGROU | Р | | | Reserved | I | | SYS RESET REQ | VECT CLR ACTIVE | VECT RESET |
| r | | | | | rw | rw | rw | | | | | | W | W | w |

Bits 31:16 VECTKEYSTAT/ VECTKEY Register key

Reads as 0xFA05

On writes, write 0x5FA to VECTKEY, otherwise the write is ignored.

Bit 15 ENDIANESS Data endianness bit

Reads as 0.

0: Little-endian

Bits 14:11 Reserved, must be kept cleared

Bits 10:8 PRIGROUP: Interrupt priority grouping field

This field determines the split of group priority from subpriority, see Binary point on page 228.

Bits 7:3 Reserved, must be kept cleared

Bit 2 SYSRESETREQ System reset request

This is intended to force a large system reset of all major components except for debug. This bit reads as 0.

0: No system reset request

1: Asserts a signal to the outer system that requests a reset.

Bit 1 VECTCLRACTIVE

Reserved for Debug use. This bit reads as 0. When writing to the register you must write 0 to this bit, otherwise behavior is unpredictable.

Bit 0 VECTRESET

Reserved for Debug use. This bit reads as 0. When writing to the register you must write 0 to this bit, otherwise behavior is unpredictable.

Binary point

The PRIGROUP field indicates the position of the binary point that splits the PRI_n fields in the Interrupt Priority Registers into separate *group priority* and *subpriority* fields. *Table 51* shows how the PRIGROUP value controls this split. If you implement fewer than 8 priority



bits you might require more explanation here, and want to remove invalid rows from the table, and modify the entries in the number of columns.

Table 51. Priority grouping

| PRIGROUP | Interrupt | priority level value, | PRI_ <i>N</i> [7:4] | Numbe | er of |
|----------|--------------------------------|-----------------------|---------------------|---------------------|-------------------|
| [2:0] | Binary point ⁽¹⁾ | Group priority bits | Subpriority bits | Group priorities | Sub priorities |
| 0b0xx | 0bxxxx | [7:4] | None | 16 | None |
| 0b100 | 0bxxx.y | [7:5] | [4] | 8 | 2 |
| 0b101 | 0bxx.yy | [7:6] | [5:4] | 4 | 4 |
| 0b110 | 0bx.yyy | [7] | [6:4] | 2 | 8 |
| 0b111 | 0b.yyyy | None | [7:4] | None | 16 |

^{1.} PRI_n[7:4] field showing the binary point. x denotes a group priority field bit, and y denotes a subpriority field bit.

Determining preemption of an exception uses only the group priority field, see *Section 2.3.6: Interrupt priority grouping on page 41*.



PM0214 Rev 10 229/262

4.4.6 System control register (SCR)

Address offset: 0x10

Reset value: 0x0000 0000
Required privilege: Privileged

The SCR controls features of entry to and exit from low power state.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|---------|----|-----|--------|----|----|---------------|------|---------------|---------------------|------|
| | | | | | | | Res | served | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | Reserve | ed | | | | | SEVON PEND | Res. | SLEEP DEEP | SLEEP ON EXIT | Res. |
| | | | | | | | | | | | rw | | rw | rw | |

Bits 31:5 Reserved, must be kept cleared

Bit 4 SEVEONPEND Send Event on Pending bit

When an event or interrupt enters pending state, the event signal wakes up the processor from WFE. If the processor is not waiting for an event, the event is registered and affects the next WFF.

The processor also wakes up on execution of an SEV instruction or an external event

- 0: Only enabled interrupts or events can wakeup the processor, disabled interrupts are excluded
- 1: Enabled events and all interrupts, including disabled interrupts, can wakeup the processor.
- Bit 3 Reserved, must be kept cleared

Bit 2 SLEEPDEEP

Controls whether the processor uses sleep or deep sleep as its low power mode:

- 0: Sleep
- 1: Deep sleep.

Bit 1 SLEEPONEXIT

Configures sleep-on-exit when returning from Handler mode to Thread mode. Setting this bit to 1 enables an interrupt-driven application to avoid returning to an empty main application.

- 0: Do not sleep when returning to Thread mode.
- 1: Enter sleep, or deep sleep, on return from an interrupt service routine.
- Bit 0 Reserved, must be kept cleared

4.4.7 Configuration and control register (CCR)

Address offset: 0x14

Reset value: 0x0000 0200 Required privilege: Privileged

The CCR controls entry to Thread mode and enables:

 The handlers for NMI, hard fault and faults escalated by FAULTMASK to ignore bus faults

Trapping of divide by zero and unaligned accesses

 Access to the STIR by unprivileged software, see Software trigger interrupt register (NVIC_STIR) on page 216.



Bits 31:10 Reserved, must be kept cleared

Bit 9 STKALIGN

Configures stack alignment on exception entry. On exception entry, the processor uses bit 9 of the stacked PSR to indicate the stack alignment. On return from the exception it uses this stacked bit to restore the correct stack alignment.

0: 4-byte aligned

1: 8-byte aligned

Bit 8 BFHFNMIGN

Enables handlers with priority -1 or -2 to ignore data bus faults caused by load and store instructions. This applies to the hard fault, NMI, and FAULTMASK escalated handlers. Set this bit to 1 only when the handler and its data are in absolutely safe memory. The normal use of this bit is to probe system devices and bridges to detect control path problems and fix them.

0: Data bus faults caused by load and store instructions cause a lock-up

1: Handlers running at priority -1 and -2 ignore data bus faults caused by load and store instructions.

Bits 7:5 Reserved, must be kept cleared

Bit 4 DIV_0_TRP

Enables faulting or halting when the processor executes an SDIV or UDIV instruction with a divisor of 0:

0: Do not trap divide by 0

1: Trap divide by 0.

When this bit is set to 0, a divide by zero returns a quotient of 0.



PM0214 Rev 10 231/262

Bit 3 UNALIGN_TRP

Enables unaligned access traps:

- 0: Do not trap unaligned halfword and word accesses
- 1: Trap unaligned halfword and word accesses.

If this bit is set to 1, an unaligned access generates a usage fault.

Unaligned LDM, STM, LDRD, and STRD instructions always fault irrespective of whether UNALIGN_TRP is set to 1.

Bit 2 Reserved, must be kept cleared

Bit 1 USERSETMPEND

Enables unprivileged software access to the STIR, see *Software trigger interrupt register* (NVIC_STIR) on page 216:

- 0: Disable
- 1: Enable.

Bit 0 NONBASETHRDENA

Configures how the processor enters Thread mode.

- 0: Processor can enter Thread mode only when no exception is active.
- 1: Processor can enter Thread mode from any level under the control of an EXC_RETURN value, see *Exception return on page 44*.

4.4.8 System handler priority registers (SHPRx)

The SHPR1-SHPR3 registers set the priority level, 0 to 255 of the exception handlers that have configurable priority.

SHPR1-SHPR3 are byte accessible.

The system fault handlers and the priority field and register for each handler are:

Table 52. System fault handler priority fields

| Handler | Field | Register description |
|-------------------------|--------|--|
| Memory management fault | PRI_4 | |
| Bus fault | PRI_5 | System handler priority register 1 (SHPR1) |
| Usage fault | PRI_6 | |
| SVCall | PRI_11 | System handler priority register 2 (SHPR2) on page 233 |
| PendSV | PRI_14 | System handler priority register 3 (SHPR3) on |
| SysTick | PRI_15 | page 234 |

Each PRI_N field is 8 bits wide, but the processor implements only bits[7:3] of each field, and bits[3:0] read as zero and ignore writes (where M=4).

System handler priority register 1 (SHPR1)

Address offset: 0x18

Reset value: 0x0000 0000
Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|------|--------|------|----------|------|--------|----|----|------|--------|----|----|------|--------|----|
| | | | Pos | erved | | | | | PRI_ | 6[7:4] | | | PRI_ | 6[3:0] | |
| | | | 1,63 | rw rw rw | | | | | | | | r | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | PRI_ | 5[7:4] | | | PRI_ | 5[3:0] | | | PRI_ | 4[7:4] | | | PRI_ | 4[7:4] | |
| rw | rw | rw | rw | r | r | r | r | rw | rw | rw | rw | r | r | r | r |

Bits 31:24 Reserved, must be kept cleared

Bits 23:16 PRI_6: Priority of system handler 6, usage fault

Bits 15:8 PRI 5: Priority of system handler 5, bus fault

Bits 7:0 PRI_4: Priority of system handler 4, memory management fault

System handler priority register 2 (SHPR2)

Address offset: 0x1C

Reset value: 0x0000 0000
Required privilege: Privileged



PM0214 Rev 10 233/262

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|-------|---------|----|----|------|---------|-----|--------|----|----|------|-------|----|----|----|
| | PRI_1 | 11[7:4] | | | PRI_ | 11[3:0] | | | | | Rese | nr.cd | | | |
| rw | rw | rw | rw | r | r | r | r | | | | Rest | erveu | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | Res | served | | | | | | | |

Bits 31:24 PRI_11: Priority of system handler 11, SVCall

Bits 23:0 Reserved, must be kept cleared

System handler priority register 3 (SHPR3)

Address: 0xE000 ED20
Reset value: 0x0000 0000
Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|-------|--------|----|----|------|---------|-----|--------|-------|---------|----|----|------|---------|----|
| | PRI_1 | 5[7:4] | | | PRI_ | 15[3:0] | | | PRI_1 | 14[7:4] | | | PRI_ | 14[3:0] | |
| rw | rw | rw | rw | r | r | r | r | rw | rw | rw | rw | r | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | Res | served | | | | | | | |

Bits 31:24 PRI_15: Priority of system handler 15, SysTick exception

Bits 23:16 PRI_14: Priority of system handler 14, PendSV

Bits 15:0 Reserved, must be kept cleared

4.4.9 System handler control and state register (SHCSR)

Address offset: 0x24

Reset value: 0x0000 0000
Required privilege: Privileged

The SHCSR enables the system handlers, and indicates:

The pending status of the bus fault, memory management fault, and SVC exceptions

The active status of the system handlers.

If you disable a system handler and the corresponding fault occurs, the processor treats the fault as a hard fault.

You can write to this register to change the pending or active status of system exceptions. An OS kernel can write to the active bits to perform a context switch that changes the current exception type.

- Software that changes the value of an active bit in this register without correct
 adjustment to the stacked content can cause the processor to generate a fault
 exception. Ensure software that writes to this register retains and subsequently
 restores the current active status.
- After you have enabled the system handlers, if you have to change the value of a bit in this register you must use a read-modify-write procedure to ensure that you change only the required bit.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|--------------------------|----------------------------|----------------------------|----------------------------|--------------------|-------------------|---------|--------------------|-------------------|----|----------|----|---------------------|---------------------|---------------------|---------------------|
| | | | | | | Reserve | ed | | | | | | USG FAULT ENA | BUS FAULT ENA | MEM FAULT ENA |
| | | | | | | | | | | | | | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| SV CALL PEND ED | BUS FAULT PEND ED | MEM FAULT PEND ED | USG FAULT PEND ED | SYS TICK ACT | PEND SV ACT | Res. | MONIT OR ACT | SV CALL ACT | | Reserved | | USG FAULT ACT | Res. | BUS FAULT ACT | MEM FAULT ACT |
| rw | rw | rw | rw | rw | rw | | rw | rw | | | | rw | | rw | rw |

Bits 31:19 Reserved, must be kept cleared

Bit 18 **USGFAULTENA:** Usage fault enable bit, set to 1 to enable (1)

Bit 17 **BUSFAULTENA:** Bus fault enable bit, set to 1 to enable⁽¹⁾

Bit 16 **MEMFAULTENA:** Memory management fault enable bit, set to 1 to enable (1)

Bit 15 **SVCALLPENDED:** SVC call pending bit, reads as 1 if exception is pending (2)

Bit 14 BUSFAULTPENDED: Bus fault exception pending bit, reads as 1 if exception is pending (2)

Bit 13 **MEMFAULTPENDED:** Memory management fault exception pending bit, reads as 1 if exception is pending (2)

Bit 12 **USGFAULTPENDED:** Usage fault exception pending bit, reads as 1 if exception is pending (2)

Bit 11 SYSTICKACT: SysTick exception active bit, reads as 1 if exception is active (3)

Bit 10 PENDSVACT: PendSV exception active bit, reads as 1 if exception is active

Bit 9 Reserved, must be kept cleared



PM0214 Rev 10 235/262

- Bit 8 MONITORACT: Debug monitor active bit, reads as 1 if Debug monitor is active
- Bit 7 SVCALLACT: SVC call active bit, reads as 1 if SVC call is active
- Bits 6:4 Reserved, must be kept cleared
 - Bit 3 USGFAULTACT: Usage fault exception active bit, reads as 1 if exception is active
 - Bit 2 Reserved, must be kept cleared
 - Bit 1 BUSFAULTACT: Bus fault exception active bit, reads as 1 if exception is active
 - Bit 0 **MEMFAULTACT:** Memory management fault exception active bit, reads as 1 if exception is active
- 1. Enable bits, set to 1 to enable the exception, or set to 0 to disable the exception.
- 2. Pending bits, read as 1 if the exception is pending, or as 0 if it is not pending. You can write to these bits to change the pending status of the exceptions.
- Active bits, read as 1 if the exception is active, or as 0 if it is not active. You can write to these bits to change the active status of the exceptions, but see the Caution in this section.



4.4.10 Configurable fault status register (CFSR; UFSR+BFSR+MMFSR)

Address offset: 0x28

Reset value: 0x0000 0000 Required privilege: Privileged

The following subsections describe the subregisters that make up the CFSR:

- Usage fault status register (UFSR) on page 238
- Bus fault status register (BFSR) on page 239
- Memory management fault address register (MMFSR) on page 240

The CFSR is byte accessible. You can access the CFSR or its subregisters as follows:

- Access the complete CFSR with a word access to 0xE000ED28
- Access the MMFSR with a byte access to 0xE000ED28
- Access the MMFSR and BFSR with a halfword access to 0xE000ED28
- Access the BFSR with a byte access to 0xE000ED29
- Access the UFSR with a halfword access to 0xE000ED2A.

The CFSR indicates the cause of a memory management fault, bus fault, or usage fault.



Bits 31:16 UFSR: see Usage fault status register (UFSR) on page 238

Bits 15:8 BFSR: see Bus fault status register (BFSR) on page 239

Bits 7:0 MMFSR: see Memory management fault address register (MMFSR) on page 240

577

PM0214 Rev 10 237/262

4.4.11 Usage fault status register (UFSR)

- Bits 31:26 Reserved, must be kept cleared
 - Bit 25 **DIVBYZERO:** Divide by zero usage fault. When the processor sets this bit to 1, the PC value stacked for the exception return points to the instruction that performed the divide by zero. Enable trapping of divide by zero by setting the DIV_0_TRP bit in the CCR to 1, see *Configuration and control register (CCR) on page 231.*
 - 0: No divide by zero fault, or divide by zero trapping not enabled
 - 1: The processor has executed an SDIV or UDIV instruction with a divisor of 0.
 - Bit 24 **UNALIGNED:** Unaligned access usage fault. Enable trapping of unaligned accesses by setting the UNALIGN_TRP bit in the CCR to 1, see *Configuration and control register (CCR) on page 231*.

Unaligned LDM, STM, LDRD, and STRD instructions always fault irrespective of the setting of UNALIGN_TRP.

- 0: No unaligned access fault, or unaligned access trapping not enabled
- 1: the processor has made an unaligned memory access.
- Bits 23:20 Reserved, must be kept cleared
 - Bit 19 NOCP: No coprocessor usage fault. The processor does not support coprocessor instructions:
 - 0: No usage fault caused by attempting to access a coprocessor
 - 1: the processor has attempted to access a coprocessor.
 - Bit 18 **INVPC:** Invalid PC load usage fault, caused by an invalid PC load by EXC_RETURN:

When this bit is set to 1, the PC value stacked for the exception return points to the instruction that tried to perform the illegal load of the PC.

- 0: No invalid PC load usage fault
- 1: The processor has attempted an illegal load of EXC_RETURN to the PC, as a result of an invalid context, or an invalid EXC_RETURN value.
- Bit 17 **INVSTATE:** Invalid state usage fault. When this bit is set to 1, the PC value stacked for the exception return points to the instruction that attempted the illegal use of the EPSR.

This bit is not set to 1 if an undefined instruction uses the EPSR.

- 0: No invalid state usage fault
- 1: The processor has attempted to execute an instruction that makes illegal use of the EPSR.
- Bit 16 **UNDEFINSTR:** Undefined instruction usage fault. When this bit is set to 1, the PC value stacked for the exception return points to the undefined instruction.

An undefined instruction is an instruction that the processor cannot decode.

- 0: No undefined instruction usage fault
- 1: The processor has attempted to execute an undefined instruction.

4.4.12 Bus fault status register (BFSR)

Bit 15 **BFARVALID:** Bus Fault Address Register (BFAR) valid flag. The processor sets this bit to 1 after a bus fault where the address is known. Other faults can set this bit to 0, such as a memory management fault occurring later.

If a bus fault occurs and is escalated to a hard fault because of priority, the hard fault handler must set this bit to 0. This prevents problems if returning to a stacked active bus fault handler whose BFAR value is overwritten.

- 0: Value in BFAR is not a valid fault address
- 1: BFAR holds a valid fault address.
- Bit 14 Reserved, must be kept cleared
- Bit 13 **LSPERR**: Bus fault on floating-point lazy state preservation.
 - 0: No bus fault occurred during floating-point lazy state preservation.
 - 1: A bus fault occurred during floating-point lazy state preservation
- Bit 12 **STKERR:** Bus fault on stacking for exception entry. When the processor sets this bit to 1, the SP is still adjusted but the values in the context area on the stack might be incorrect. The processor does not write a fault address to the BFAR.
 - 0: No stacking fault
 - 1: Stacking for an exception entry has caused one or more bus faults.
- Bit 11 **UNSTKERR:** Bus fault on unstacking for a return from exception. This fault is chained to the handler. This means that when the processor sets this bit to 1, the original return stack is still present. The processor does not adjust the SP from the failing return, does not performed a new save, and does not write a fault address to the BFAR.
 - 0: No unstacking fault
 - 1: Unstack for an exception return has caused one or more bus faults.
- Bit 10 **IMPRECISERR:** Imprecise data bus error. When the processor sets this bit to 1, it does not write a fault address to the BFAR. This is an asynchronous fault. Therefore, if it is detected when the priority of the current process is higher than the bus fault priority, the bus fault becomes pending and becomes active only when the processor returns from all higher priority processes. If a precise fault occurs before the processor enters the handler for the imprecise bus fault, the handler detects both IMPRECISERR set to 1 and one of the precise fault status bits set to 1.
 - 0: No imprecise data bus error
 - 1: A data bus error has occurred, but the return address in the stack frame is not related to the instruction that caused the error.
- Bit 9 **PRECISERR:** Precise data bus error. When the processor sets this bit is 1, it writes the faulting address to the BFAR.
 - 0: No precise data bus error
 - 1: A data bus error has occurred, and the PC value stacked for the exception return points to the instruction that caused the fault.
- Bit 8 **IBUSERR:** Instruction bus error. The processor detects the instruction bus error on prefetching an instruction, but it sets the IBUSERR flag to 1 only if it attempts to issue the faulting instruction.

When the processor sets this bit is 1, it does not write a fault address to the BFAR.

- 0: No instruction bus error
- 1: Instruction bus error.

577

PM0214 Rev 10 239/262

4.4.13 Memory management fault address register (MMFSR)

- Bit 7 **MMARVALID:** Memory Management Fault Address Register (MMAR) valid flag. If a memory management fault occurs and is escalated to a hard fault because of priority, the hard fault handler must set this bit to 0. This prevents problems on return to a stacked active memory management fault handler whose MMAR value is overwritten.
 - 0: Value in MMAR is not a valid fault address
 - 1: MMAR holds a valid fault address.
- Bit 6 Reserved, must be kept cleared
- Bit 5 MLSPERR:
 - 0: No MemManage fault occurred during floating-point lazy state preservation
 - 1: A MemManage fault occurred during floating-point lazy state preservation
- Bit 4 **MSTKERR:** Memory manager fault on stacking for exception entry. When this bit is 1, the SP is still adjusted but the values in the context area on the stack might be incorrect. The processor has not written a fault address to the MMAR.
 - 0: No stacking fault
 - 1: Stacking for an exception entry has caused one or more access violations.
- Bit 3 **MUNSTKERR:** Memory manager fault on unstacking for a return from exception. This fault is chained to the handler. This means that when this bit is 1, the original return stack is still present. The processor has not adjusted the SP from the failing return, and has not performed a new save. The processor has not written a fault address to the MMAR.
 - 0: No unstacking fault
 - 1: Unstack for an exception return has caused one or more access violations.
- Bit 2 Reserved, must be kept cleared
- Bit 1 **DACCVIOL:** Data access violation flag. When this bit is 1, the PC value stacked for the exception return points to the faulting instruction. The processor has loaded the MMAR with the address of the attempted access.
 - 0: No data access violation fault
 - 1: The processor attempted a load or store at a location that does not permit the operation.
- Bit 1 **IACCVIOL:** Instruction access violation flag. This fault occurs on any access to an XN region, even the MPU is disabled or not present.

When this bit is 1, the PC value stacked for the exception return points to the faulting instruction. The processor has not written a fault address to the MMAR.

- 0: No instruction access violation fault
- 1: The processor attempted an instruction fetch from a location that does not permit execution.

4.4.14 Hard fault status register (HFSR)

Address offset: 0x2C

Reset value: 0x0000 0000
Required privilege: Privileged

The HFSR gives information about events that activate the hard fault handler. This register is read, write to clear. This means that bits in the register read normally, but writing 1 to any bit clears that bit to 0.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|--------------|------------|----|----|----|----|-----|--------|-----|-------|----|----|----|----|-------------|------|
| DEBU G_VT | FORC ED | | | | | | | Res | erved | | | | | | |
| rc_w1 | rc_w1 | | | | | | | | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | Res | served | | | | | | | VECT TBL | Res. |
| | | | | | | | | | | | | | | rc_w1 | |

- Bit 31 DEBUG_VT: Reserved for Debug use. When writing to the register you must write 0 to this bit, otherwise behavior is unpredictable.
- Bit 30 FORCED: Forced hard fault. Indicates a forced hard fault, generated by escalation of a fault with configurable priority that cannot be handles, either because of priority or because it is disabled.

When this bit is set to 1, the hard fault handler must read the other fault status registers to find the cause of the fault.

- 0: No forced hard fault
- 1: Forced hard fault.
- Bits 29:2 Reserved, must be kept cleared
 - Bit 1 VECTTBL: Vector table hard fault. Indicates a bus fault on a vector table read during exception processing. This error is always handled by the hard fault handler.

When this bit is set to 1, the PC value stacked for the exception return points to the instruction that was preempted by the exception.

- 0: No bus fault on vector table read
- 1: Bus fault on vector table read.
- Bit 0 Reserved, must be kept cleared

PM0214 Rev 10 241/262

4.4.15 Memory management fault address register (MMFAR)

Address offset: 0x34 Reset value: undefined

Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|----|----|------|-----------|----|----|----|----|----|----|----|
| | | | | | | | MMFA | AR[31:16] | | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | MMF | AR[15:0] | | | | | | | _ |
| rw | rw | rw | rw | rw | rw | rw | rw | rw |

Bits 31:0 MMFAR: Memory management fault address

When the MMARVALID bit of the MMFSR is set to 1, this field holds the address of the location that generated the memory management fault.

When an unaligned access faults, the address is the actual address that faulted. Because a single read or write instruction can be split into multiple aligned accesses, the fault address can be any address in the range of the requested access size.

Flags in the MMFSR register indicate the cause of the fault, and whether the value in the MMFAR is valid. See *Configurable fault status register (CFSR; UFSR+BFSR+MMFSR)* on page 237.

4.4.16 Bus fault address register (BFAR)

Address offset: 0x38

Reset value: undefined

Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|----|----|------|----------|----|----|----|----|----|----|----|
| | | | | | | | BFAF | R[31:16] | | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | BFA | R[15:0] | | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw |

Bits 31:0 BFAR: Bus fault address

When the BFARVALID bit of the BFSR is set to 1, this field holds the address of the location that generated the bus fault.

When an unaligned access faults the address in the BFAR is the one requested by the instruction, even if it is not the address of the fault.

Flags in the BFSR register indicate the cause of the fault, and whether the value in the BFAR is valid. See *Configurable fault status register (CFSR; UFSR+BFSR+MMFSR) on page 237*.

4.4.17 Auxiliary fault status register (AFSR)

Address offset: 0x3C Reset value: undefined

Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|----|----|-------|-----------|----|----|----|----|----|----|----|
| | | | | | | | IMPDE | EF[31:16] | | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | IMPD | EF[15:0] | | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw |

Bits 31:0 **IMPDEF**: Implementation defined. The AFSR contains additional system fault information. The bits map to the AUXFAULT input signals.

This register is read, write to clear. This means that bits in the register read normally, but writing 1 to any bit clears that bit to 0.

Each AFSR bit maps directly to an AUXFAULT input of the processor, and a single-cycle HIGH signal on the input sets the corresponding AFSR bit to one. It remains set to 1 until you write 1 to the bit to clear it to zero.

When an AFSR bit is latched as one, an exception does not occur. Use an interrupt if an exception is required.

4.4.18 System control block design hints and tips

Ensure software uses aligned accesses of the correct size to access the system control block registers:

- except for the CFSR and SHPR1-SHPR3, it must use aligned word accesses
- for the CFSR and SHPR1-SHPR3 it can use byte or aligned halfword or word accesses.

The processor does not support unaligned accesses to system control block registers.

In a fault handler, to determine the true faulting address:

- 1. Read and save the MMFAR or BFAR value.
- 2. Read the MMARVALID bit in the MMFSR, or the BFARVALID bit in the BFSR. The MMFAR or BFAR address is valid only if this bit is 1.

Software must follow this sequence because another higher priority exception might change the MMFAR or BFAR value. For example, if a higher priority handler preempts the current fault handler, the other fault might change the MMFAR or BFAR value.

PM0214 Rev 10 243/262

4.4.19 SCB register map

The table provides shows the System control block register map and reset values. The base address of the SCB register block is 0xE000 ED00 for register described in *Table 53*.

Table 53. SCB register map and reset values

| Offset | Register | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 10 | 9 | 17 | 16 | 15 | 14 | 13 | 12 | 7 | 10 | 6 | œ | 7 | 9 | 2 | 4 | 3 | 2 | _ | 0 |
|--------|--------------|--------------|-------|----------|-----------|-----------|-----------|-----------|----|----------|------------|-----|------|-----|-----|-------|-----|-----------|------|-----|-----|----------|----------|---------------|----------|----|----------|-----|-----------|-------------|-------------|---------------|----------------|
| | CPUID | (,) | | Imp | | | | | | + | | ian | | | | stant | 4 | ` | ` | ` | ` | | artl | | | | | | | | evi | eio | |
| 0x00 | Reset Value | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | | 0 | 0 | 1 | 1 | _ | | 1 | 1 | 1 | 0 | 0 | 0 | | _ | | 0 | 0 | 1 | 1 | 0 | | | '' 1 |
| | Treset value | | | U | | | | | | U | | | ' | ' | ' | ' | ' | ' | ' | U | U | | U | ' | U | 0 | U | ' | • | U | U | U | _ |
| 0x04 | ICSR | NMIPENDSET | | Keserved | PENDSVSET | PENDSVCLR | PENDSTSET | PENDSTCLR | | Keserved | ISRPENDING | | V | EC | CTP | ENC | 1IC | ΝG | [9:0 | 0] | | RETOBASE | Reserved | | | VE | ECT | ΓΑΟ | сті | VE | [8: | 0] | |
| | Reset Value | 0 | | | 0 | 0 | 0 | 0 | | | 0 | 0 | 0 | 0 | 0 | 0 (| 0 | 0 | 0 | 0 | 0 | 0 | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | VTOR | 7 | 2 | | | | | | | | T. | AB | LE | OF | F[2 | 9:9] | | | | | | | | | | | | | | | • | | |
| 0x08 | Reset Value | Pacaryad | 10001 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | | F | Res | er\ | /ed | l | | |
| 0x0C | AIRCR | | | | | | VE | EC1 | ГК | ΈΥĮ | [15 | :0] | | | | · | | ENDIANESS | Re | ese | rve | ed | | וייאסאסאסאסאס | | F | Res | erv | ⁄ed | I | SYSRESETREQ | VECTCLRACTIVE | VECTRESET |
| | Reset Value | 1 | 1 | 1 | 1 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | | | | | 0 | 0 | 0 | | | | | | 0 | 0 | 0 |
| 0x10 | SCR | | | | | | | | | | ı | | F | Re | ser | /ed | | | | | | 1 | | | 1 | | | | SEVONPEND | Reserved | SLEEPDEEP | SLEEPONEXIT | Reserved |
| | Reset Value | | | | | | | | | | | | | | | | | | | | | | | | | | | | 0 | | 0 | 0 | |
| 0x14 | CCR | | | | | | | | | | R | ese | erve | ed | | | | | | | | | | STKALIGN | BFHFNIGN | | Reserved | | DIV_0_TRP | UNALIGN TRP | Reserved | USERSETMPEND | NONBASETHRDENA |
| | Reset Value | | | | | | | | | | | | | | | | | | | | | | | 1 | 0 | | | | 0 | 0 | | 0 | 0 |
| 0x18 | SHPR1 | | | R | ese | erve | -d | | | | | | PF | R16 | i | | | | | | PR | 215 | | | | | , . | | PR | 14 | | | |
| 0.10 | Reset Value | | | 1 1/ | -30 | ,ı v (| Ju | | | 0 | 0 | 0 | 0 | 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Table 53. SCB register map and reset values (continued)

| Offset | Register | 31 | 30 | 00 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 1 0 | 20 | D (| o į | 17 | 0 | 15 | 14 | 13 | 12 | 1 | 10 | 6 | 8 | 7 | 9 | 2 | 4 | 3 | 2 | _ | 0 |
|--------|---------------------|----------|----------|----|----|-----|-----|-----|-----|----|----|----|-----|-------|--------|--------|---------------|---------------|----------------|-------------------------|-------------------------|-------------------------|--------------|------------|----------|-------------|-------------|----------------|----------|-----|---------------|----------|---------------|---------------|
| 0.40 | SHPR2 | | | | PR | 111 | | | | | | | | • | | | | | | | D- | | | لم | | | | | | | | | | |
| 0x1C | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | | | | | | | Re | se | rve | eu | | | | | | | | | | |
| 0x20 | SHPR3 | | | | PR | 115 | | | | | | | Ы | RI1 | 4 | | | | | | | | | | D | ese | ·r. // | - d | | | | | | |
| 0,20 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | C | 0 | 0 | (| 0 0 |) | | | | | | | 170 | -30 | ; i v t | s u | | | | | | |
| 0x24 | SHCSR | | | | | F | Res | ser | ved | d | | | | | F = VL | L'AOL' | BUS FAULT ENA | MEM FAULI ENA | SV CALL PENDED | BUS FAULT PENDED | MEM FAULT PENDED | USG FAULT PENDED | SYS TICK ACT | PENDSV ACT | Reserved | MONITOR ACT | SV CALL ACT | | Reserved | | USG FAULT ACT | Reserved | BUS FAULT ACT | MEM FAULT ACT |
| | Reset Value | | | | | | | | | | | | | | 0 | (| 0 |) | 0 | 0 | 0 | 0 | 0 | 0 | | 0 | 0 | | | | 0 | | 0 | 0 |
| 0x28 | CFSR | | | | | | | | UF | SR | 2 | | | | | | | | • | • | E | 3FS | SR | | | | | | N | 1MI | FSF | ₹ | • | |
| 0,20 | Reset Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | C | 0 | 0 | (| 0 0 |) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0x2C | HFSR Reset Value | DEBUG VT | o FORCED | | | | | | | | | | | | | F | Res | se | rve | d | | | | | | | | | | | | | O VECTTBL | Reserved |
| | | U | U | | | | | | | | | | | | | B 4 | B 4 A | _ | ro 4 | .01 | | | | | | | | | | | | | U | |
| 0x34 | MMAR Reset Value | | ., | ., | ., | ., | ., | ., | | ., | ., | ., | Ι, | | | | MA | Т | - | | | | ., | ., | | ,, | ., | ., | | · · | ., | ., | ., | _ |
| | BFAR | Х | Х | Х | Х | X | Х | Х | Х | Х | Х | Х | | (X | X | 4 | FA | | | | Х | Х | Х | X | Х | Х | Х | Х | Х | Х | Х | Х | X | Х |
| 0x38 | Reset Value | | х | х | х | х | х | х | х | х | х | х | | (x | : x | 1 | | 1 | | 1 | х | х | х | х | х | х | Х | х | х | х | х | х | х | X |
| | AFSR | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | Ľ | ` ^ | | | PD | | | | | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ | ^ |
| 0x3C | Reset Value | х | х | х | х | х | х | Х | х | Х | х | х | > | (X | 1 | | _ | - | _ | -1 | | х | х | х | х | х | Х | х | х | Х | х | х | х | х |



4.5 SysTick timer (STK)

The processor has a 24-bit system timer, SysTick, that counts down from the reload value to zero, reloads (wraps to) the value in the STK_LOAD register on the next clock edge, then counts down on subsequent clocks.

When the processor is halted for debugging the counter does not decrement.

Table 54. System timer registers summary

| Address | Name | Туре | Required privilege | Reset value | Description |
|------------|-----------|------|--------------------|-------------|--|
| 0xE000E010 | STK_CTRL | RW | Privileged | 0x00000000 | SysTick control and status register (STK_CTRL) on page 247 |
| 0xE000E014 | STK_LOAD | RW | Privileged | Unknown | SysTick reload value register (STK_LOAD) on page 248 |
| 0xE000E018 | STK_VAL | RW | Privileged | Unknown | SysTick current value register (STK_VAL) on page 249 |
| 0xE000E01C | STK_CALIB | RO | Privileged | 0xC0000000 | SysTick calibration value register (STK_CALIB) on page 250 |

4.5.1 SysTick control and status register (STK_CTRL)

Address offset: 0x00

Reset value: 0x0000 0000 Required privilege: Privileged

The SysTick CTRL register enables the SysTick features.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|----|---------|---------|----|----|----|----|----|---------------|-------------|---------------|
| | | | | | | | Reserve | ed | | | | | | | COUNT FLAG |
| | | | | | | | | | | | | | | | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | Reserve | ed | | | | | | CLKSO URCE | TICK INT | EN ABLE |
| | | | | | | | | | | | | | rw | rw | rw |

Bits 31:17 Reserved, must be kept cleared.

Bit 16 COUNTFLAG:

Returns 1 if timer counted to 0 since last time this was read.

Bits 15:3 Reserved, must be kept cleared.

Bit 2 CLKSOURCE: Clock source selection

Selects the clock source.

0: AHB/8

1: Processor clock (AHB)

Bit 1 **TICKINT**: SysTick exception request enable

0: Counting down to zero does not assert the SysTick exception request

1: Counting down to zero to asserts the SysTick exception request.

Note: Software can use COUNTFLAG to determine if SysTick has ever counted to zero.

Bit 0 ENABLE: Counter enable

Enables the counter. When ENABLE is set to 1, the counter loads the RELOAD value from the LOAD register and then counts down. On reaching 0, it sets the COUNTFLAG to 1 and optionally asserts the SysTick depending on the value of TICKINT. It then loads the RELOAD value again, and begins counting.

0: Counter disabled

1: Counter enabled

PM0214 Rev 10

247/262

4.5.2 SysTick reload value register (STK_LOAD)

Address offset: 0x04

Reset value: 0x0000 0000
Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|------|-------|----|----|------|----------|----|----|-------|----------|----|----|----|
| | | | Pos | erved | | | | | | | RELOA | D[23:16] | | | |
| | | | 1769 | erveu | | | | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | RELO | AD[15:0] | | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw |

Bits 31:24 Reserved, must be kept cleared.

Bits 23:0 RELOAD: RELOAD value

The LOAD register specifies the start value to load into the STK_VAL register when the counter is enabled and when it reaches 0.

Calculating the RELOAD value

The RELOAD value can be any value in the range 0x00000001-0x00FFFFF. A start value of 0 is possible, but has no effect because the SysTick exception request and COUNTFLAG are activated when counting from 1 to 0.

The RELOAD value is calculated according to its use:

- To generate a multi-shot timer with a period of N processor clock cycles, use a RELOAD value of N-1. For example, if the SysTick interrupt is required every 100 clock pulses, set RELOAD to 99.
- To deliver a single SysTick interrupt after a delay of N processor clock cycles, use a RELOAD of value N. For example, if a SysTick interrupt is required after 100 clock pulses, set RELOAD to 99.

4.5.3 SysTick current value register (STK_VAL)

Address offset: 0x08

Reset value: 0x0000 0000
Required privilege: Privileged

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|------|-------|----|----|------|-----------|----|----|-------|-----------|----|----|----|
| | | | Pos | erved | | | | | | | CURRE | NT[23:16] | | | |
| | | | 1769 | erveu | | | | rw | rw | rw | rw | rw | rw | rw | rw |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | CURR | ENT[15:0] |] | | | | | | |
| rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw | rw |

Bits 31:24 Reserved, must be kept cleared.

Bits 23:0 **CURRENT:** Current counter value

The VAL register contains the current value of the SysTick counter.

Reads return the current value of the SysTick counter.

A write of any value clears the field to 0, and also clears the COUNTFLAG bit in the

STK_CTRL register to 0.

PM0214 Rev 10 249/262

4.5.4 SysTick calibration value register (STK_CALIB)

Address offset: 0x0C Reset value: 0x0000000

Required privilege: Privileged

The CALIB register indicates the SysTick calibration properties.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|-----------|------|----|----|-----|-------|----|------|-----------|----|----|-------|----------|----|----|----|
| NO REF | SKEW | | | Res | erved | | | | | | TENMS | 8[23:16] | | | |
| r | r | | | | | | | r | r | r | r | r | r | r | r |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | TENN | //S[15:0] | | | | | | | |
| r | r | r | r | r | r | r | r | r | r | r | r | r | r | r | r |

- Bit 31 **NOREF:** NOREF flag. Reads as zero. Indicates that a separate reference clock is provided. The frequency of this clock is HCLK/8.
- Bit 30 **SKEW:** SKEW flag: Indicates whether the TENMS value is exact. Reads as one. Calibration value for the 1 ms inexact timing is not known because TENMS is not known. This can affect the suitability of SysTick as a software real time clock.
- Bits 29:24 Reserved, must be kept cleared.
- Bits 23:0 **TENMS[23:0]:** Calibration value. Indicates the calibration value when the SysTick counter runs on HCLK max/8 as external clock. The value is product dependent, please refer to the Product Reference Manual, SysTick Calibration Value section. When HCLK is programmed at the maximum frequency, the SysTick period is 1ms.

If calibration information is not known, calculate the calibration value required from the frequency of the processor clock or external clock.

4.5.5 SysTick design hints and tips

The SysTick counter runs on the processor clock. If this clock signal is stopped for low power mode, the SysTick counter stops.

Ensure software uses aligned word accesses to access the SysTick registers.

The SysTick counter reload and current value are undefined at reset, the correct initialization sequence for the SysTick counter is:

- 1. Program reload value.
- 2. Clear current value.
- 3. Program Control and Status register.

4.5.6 SysTick register map

The table provided shows the SysTick register map and reset values. The base address of the SysTick register block is 0xE000 E010.

Table 55. SysTick register map and reset values

| Offset | Register | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | ć | 2 6 | 5 | 10 | 2 % | ļ | 7/ | , | , | <u>t</u> (| 12 | 7 | 10 | 0 | ∞ | 7 | 9 | 2 | 4 | 3 | 2 | 1 | 0 |
|--------|-------------|----|----|----------|----------|-----|----------------|-----|-----|-----|---|-----|---|----|-----|---|-------------|-----|----|------------|------|----|-----|-----|-----|---|---|---|---|---|-----------|----------|---------|
| 0x00 | STK_CTRL | | | | | | F | Res | ser | ved | d | | | | | | OV INTELIOU | 1 | | | | I | Res | er | ved | t | | | | | CLKSOURCE | TICK INT | EN ABLE |
| | Reset Value | | | | | | | | | | | | | | | | 0 | | | | | | | | | | | | | | 1 | 0 | 0 |
| 0x04 | STK_LOAD | | | Reserved | | | | | | | | | | | • | | F | REL | OA | D[| 23:0 | 0] | | | | | | | | | | | |
| 0.04 | Reset Value | | | I C | -50 | IVE | , u | | | 0 | 0 | 0 | 0 | 0 | 0 | (| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 0,,00 | STK_VAL | | | D. | | | | | | | | • | • | | | | • | | С | UR | RE | NT | [23 | :0] | | | | | | | | | |
| 0x08 | Reset Value | | | Reserved | | | 0 | 0 | 0 | 0 | 0 | 0 | (| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | | |
| 0x0C | STK_CALIB | | | Dr | Reserved | | | | • | | | • | • | • | · | • | | TEN | ١M | S[2 | 3:0 |] | | • | • | • | • | | | | | | |
| UXUC | Reset Value | | | Α. | ಶರ | ive | , u | | | 0 | 0 | 0 | 0 | 0 | 0 | (| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

4.6 Floating point unit (FPU)

The Cortex-M4F FPU implements the FPv4-SP floating-point extension.

The FPU fully supports single-precision add, subtract, multiply, divide, multiply and accumulate, and square root operations. It also provides conversions between fixed xxxxx-point and floating-point data formats, and floating-point constant instructions.

The FPU provides floating-point computation functionality that is compliant with the ANSI/IEEE standard 754-2008, IEEE standard for Binary Floating-Point Arithmetic, referred to as the IEEE 754 standard.

The FPU contains 32 single-precision extension registers, which you can also access as 16 doubleword registers for load, store, and move operations.

Table 56 shows the floating-point system registers in the Cortex-M4F system control block (SCB). The base address of the additional registers for the FP extension is 0xE000 ED00.

| Address | Name | Туре | Reset | Description |
|------------|--------|------|------------|--|
| 0xE000ED88 | CPACR | RW | 0x00000000 | Section 4.6.1: Coprocessor access control register (CPACR) on page 253 |
| 0xE000EF34 | FPCCR | RW | 0xC0000000 | Section 4.6.2: Floating-point context control register (FPCCR) on page 253 |
| 0xE000EF38 | FPCAR | RW | - | Section 4.6.3: Floating-point context address register (FPCAR) on page 255 |
| 0xE000EF3C | FPDSCR | RW | 0x00000000 | Section 4.6.5: Floating-point default status control register (FPDSCR) on page 257 |
| - | FPSCR | RW | - | Section 4.6.4: Floating-point status control register (FPSCR) on page 255 |

Table 56. Cortex-M4F floating-point system registers

The following sections describe the floating-point system registers whose implementation is specific to this processor.

Note:

For more details on the IEEE standard and floating-point arithmetic (IEEE 754), refer to the AN4044 Application note. Available from website www.st.com.

4.6.1 Coprocessor access control register (CPACR)

Address offset (from SCB): 0x88

Reset value: 0x0000000

Required privilege: Privileged

The CPACR register specifies the access privileges for coprocessors.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|-----|-------|----|----|-----|--------|-----|----|-----|----|------|-------|----|
| | | | Poo | erved | | | | CF | P11 | CF | P10 | | Poor | erved | |
| | | | Res | erveu | | | | r | W | r | w | | Rest | erveu | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | • | | • | • | | • | Res | served | • | • | • | • | • | • | |

Bits 31:24 Reserved. Read as Zero, Write Ignore.

Bits 23:20 **CPn:** [2n+1:2n] for n values 10 and 11. Access privileges for coprocessor n. The possible values of each field are:

0b00: Access denied. Any attempted access generates a NOCP UsageFault. 0b01: Privileged access only. An unprivileged access generates a NOCP fault.

0b10: Reserved. The result of any access is Unpredictable.

0b11: Full access.

Bits 19:0 Reserved. Read as Zero, Write Ignore.

4.6.2 Floating-point context control register (FPCCR)

Address offset: 0x04

Reset value: 0xC000000

Required privilege: Privileged

The FPCCR register sets or returns FPU control data.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|-------|-------|----|----------|----|----|----|--------|----------|--------|-------|-------|--------|----------|------|--------|
| ASPEN | LSPEN | | | | | | | Pos | served | | | | | | |
| rw | rw | | | | | | | Nes | serveu | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | Reserved | d | | | MONRDY | Reserved | BFRDY | MMRDY | HFRDY | THREAD | Reserved | USER | LSPACT |
| | | | | | | | rw | L. | rw | rw | rw | rw | IL. | rw | rw |

Bit 31 **ASPEN**: Enables CONTROL<2> setting on execution of a floating-point instruction. This results in automatic hardware state preservation and restoration, for floating-point context, on exception entry and exit.

- 0: Disable CONTROL<2> setting on execution of a floating-point instruction.
- 1: Enable CONTROL<2> setting on execution of a floating-point instruction.

Bit 30 LSPEN:

- 0: Disable automatic lazy state preservation for floating-point context.
- 1: Enable automatic lazy state preservation for floating-point context.

Bits 29:9 Reserved.

Bit 8 MONRDY:

- 0: DebugMonitor is disabled or priority did not permit setting MON_PEND when the floating-point stack frame was allocated.
- 1: DebugMonitor is enabled and priority permits setting MON_PEND when the floating-point stack frame was allocated.
- Bit 7 Reserved.

Bit 6 BFRDY:

- 0: BusFault is disabled or priority did not permit setting the BusFault handler to the pending state when the floating-point stack frame was allocated.
- 1: BusFault is enabled and priority permitted setting the BusFault handler to the pending state when the floating-point stack frame was allocated.

Bit 5 MMRDY:

- 0: MemManage is disabled or priority did not permit setting the MemManage handler to the pending state when the floating-point stack frame was allocated.
- 1: MemManage is enabled and priority permitted setting the MemManage handler to the pending state when the floating-point stack frame was allocated.

Bit 4 HFRDY:

- 0: Priority did not permit setting the HardFault handler to the pending state when the floating-point stack frame was allocated.
- 1: Priority permitted setting the HardFault handler to the pending state when the floating-point stack frame was allocated.

Bit 3 THREAD:

- 0: Mode was not Thread Mode when the floating-point stack frame was allocated.
- 1: Mode was Thread Mode when the floating-point stack frame was allocated.
- Bit 2 Reserved.

Bit 1 USER:

- 0: Privilege level was not user when the floating-point stack frame was allocated.
- 1: Privilege level was user when the floating-point stack frame was allocated.

Bit 1 LSPACT:

- 0: Lazy state preservation is not active.
- 1: Lazy state preservation is active. floating-point stack frame is allocated but saving state to it is deferred.

4.6.3 Floating-point context address register (FPCAR)

Address offset: 0x08
Reset value: 0x0000000

Required privilege: Privileged

The FPCAR register holds the location of the unpopulated floating-point register space

allocated on an exception stack frame.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|----|----|----|--------|--------|-----------|----|----|----|----|----|----------|----|
| | | | | | | | ADDRE | ESS[31:16 | 5] | | | | | | |
| | | | | | | | | rw | | | | | | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | ΑI | DDRESS | [15:3] | | | | | | | Reserved | |
| | | | | | | rw | | | | | | | | Reserved | |

Bits 31:3 ADDRESS: Location of unpopulated floating-point register space allocated on an exception stack frame.

Bits 2:0 Reserved. Read as Zero, Writes Ignored.

4.6.4 Floating-point status control register (FPSCR)

Address offset: Not mapped
Reset value: 0x0000000
Required privilege: Privileged

The FPSCR register provides all necessary user level control of the floating-point system.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----|-----|--------|-----|----|----|-----|-------|--------|-----|------|--------|-----|-----|
| N | Z | С | V | Reserv | AHP | DN | FZ | RM | ode | | | Pose | erved | | |
| rw | rw | rw | rw | ed | rw | rw | rw | rw | rw | | | Nesc | si veu | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | Pos | erved | | | | IDC | Rese | arvod | IXC | UFC | OFC | DZC | IOC |
| | | | Nes | ei veu | | | | rw | 1/696 | 51 VEU | rw | rw | rw | rw | rw |

- Bit 31 **N**: Negative condition code flag. Floating-point comparison operations update these flags. For more details on the result, refer to *Table 57*.
 - 0: Operation result was positive, zero, greater than, or equal.
 - 1: Operation result was negative or less than.
- Bit 30 **Z**: Zero condition code flag. Floating-point comparison operations update these flags. For more details on the result, refer to *Table 57*.
 - 0: Operation result was not zero.
 - 1: Operation result was zero.
- Bit 29 **C**: Carry condition code flag. Floating-point comparison operations update these flags. For more details on the result, refer to *Table 57*.
 - 0: Add operation did not result in a carry bit or subtract operation resulted in a borrow bit.
 - 1: Add operation resulted in a carry bit or subtract operation did not result in a borrow bit.

255/262

Bit 28 **V**: Overflow condition code flag. Floating-point comparison operations update this flag. For more details on the result, refer to *Table 57*.

- 0: Operation did not result in an overflow
- 1: Operation resulted in an overflow.
- Bit 27 Reserved.
- Bit 26 AHP: Alternative half-precision control bit:
 - 0: IEEE half-precision format selected.
 - 1: Alternative half-precision format selected.
- Bit 25 DN: Default NaN mode control bit:
 - 0: NaN operands propagate through to the output of a floating-point operation.
 - 1: Any operation involving one or more NaNs returns the Default NaN.
- Bit 24 **FZ**: Flush-to-zero mode control bit:
 - 0: Flush-to-zero mode disabled. Behavior of the floating-point system is fully compliant with the IEEE 754 standard.
 - 1: Flush-to-zero mode enabled.
- Bits 23:22 **RMode**: Rounding Mode control field. The specified rounding mode is used by almost all floating-point instructions:
 - 0b00: Round to nearest (RN) mode
 - 0b01: Round towards plus infinity (RP) mode
 - 0b10: Round towards minus infinity (RM) mode
 - 0b11: Round towards zero (RZ) mode.
 - Bit 21:8 Reserved.
 - Bit 7 **IDC**: Input denormal cumulative exception bit. Cumulative exception bit for floating-point exception.
 - 1: Indicates that the corresponding exception occurred since 0 was last written to it.
 - Bit 6:5 Reserved
 - Bit 4 IXC: Inexact cumulative exception bit. Cumulative exception bit for floating-point exception.
 - 1: Indicates that the corresponding exception occurred since 0 was last written to it.
 - Bit 3 UFC: Underflow cumulative exception bit. Cumulative exception bit for floating-point exception.
 - 1: Indicates that the corresponding exception occurred since 0 was last written to it.
 - Bit 2 **OFC**: Overflow cumulative exception bit. Cumulative exception bit for floating-point exception.
 - 1: Indicates that the corresponding exception occurred since 0 was last written to it.
 - Bit 1 **DZC**: Division by zero cumulative exception bit. Cumulative exception bit for floating-point exception. 1: Indicates that the corresponding exception occurred since 0 was last written to it.
 - Bit 0 **IOC**: Invalid operation cumulative exception bit. Cumulative exception bit for floating-point exception. 1: Indicates that the corresponding exception occurred since 0 was last written to it.

Table 57. Effect of a Floating-point comparison on the condition flags

| Comparison result | N | Z | С | ٧ |
|-------------------|---|---|---|---|
| Equal | 0 | 1 | 1 | 0 |
| Less than | 1 | 0 | 0 | 0 |
| Greater than | 0 | 0 | 1 | 0 |
| Unordered | 0 | 0 | 1 | 1 |



4.6.5 Floating-point default status control register (FPDSCR)

Address offset: 0x0C
Reset value: 0x0000000
Required privilege: Privileged

The FPDSCR register holds the default values for the floating-point status control data.

| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
|----|----|----------|----|----|-----|----|-----|--------|-----|----|----|------|-------|----|----|
| | | Reserved | ı | | AHP | DN | FZ | RM | ode | | | Pos | erved | | |
| | | Reserved | ı | | rw | rw | rw | rw | rw | | | Resi | erveu | | |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | | | | | | | Res | served | | | | | | | |

Bits 31:27 Reserved, must be kept cleared.

Bit 26 **AHP:** Default value for FPSCR.AHP Bit 25 **DN:** Default value for FPSCR.DN

Bit 24 FZ: Default value for FPSCR.FZ

Bits 23:22 RMode: Default value for FPSCR.RMode

Bits 21:0 Reserved, must be kept cleared.

4.6.6 Enabling the FPU

The FPU is disabled from reset. You must enable it before you can use any floating-point instructions.

The example shows an example code sequence for enabling the FPU in both privileged and user modes. The processor must be in privileged mode to read from and write to the CPACR.

Example

```
; CPACR is located at address 0xE000ED88

LDR.W R0, =0xE000ED88

; Read CPACR

LDR R1, [R0]

; Set bits 20-23 to enable CP10 and CP11 coprocessors

ORR R1, R1, #(0xF << 20)

; Write back the modified value to the CPACR

STR R1, [R0]; wait for store to complete

DSB
; reset pipeline now the FPU is enabled

ISB
```



PM0214 Rev 10 257/262

4.6.7 Enabling and clearing FPU exception interrupts

The FPU exception flags are generating an interrupt through the interrupt controller. The FPU interrupt is globally controlled through the interrupt controller.

A mask bit is also provided in the System Configuration Controller (SYSCFG), allowing to enable/disable individually each FPU flag interrupt generation.

Note:

In STM32F4xx devices there is no individual mask and the enable/disable of the FPU interrupts is done at interrupt controller level. As it occurs very frequently, the IXC exception flag is not connected to the interrupt controller in these devices, and cannot generate an interrupt. If needed, it must be managed by polling.

Clearing the FPU exception flags depends on the FPU context save/restore configuration:

• No floating-point register saving: when Floating-point context control register (FPCCR) Bit 30 LSPEN=0 and Bit 31 ASPEN=0.

You must clear interrupt source in Floating-point Status and Control Register (FPSCR). Example:

```
register uint32_t fpscr_val = 0;
fpscr_val = __get_FPSCR();
{ check exception flags }
fpscr_val &= (uint32_t)~0x8F; // Clear all exception flags
__set_FPSCR(fpscr_val);
```

Lazy save/restore: when Floating-point context control register (FPCCR)
 Bit 30 LSPEN=1 and Bit 31 ASPEN=X.

In the case of lazy floating-point context save/restore, a dummy read access should be made to Floating-point Status and Control Register (FPSCR) to force state preservation and FPSCR clear.

Then handle FPSCR in the stack.

Example:

 Automatic floating-point registers save/restore: when Floating-point context control register (FPCCR)

Bit 30 LSPEN=0 and Bit 31 ASPEN=1.

In case of automatic floating-point context save/restore, a read access should be made to Floating-point Status and Control Register (FPSCR) to force clear.

Then handle FPSCR in the stack.

Example:

```
// FPU Exception handler
void FPU_ExceptionHandler(uint32_t lr, uint32_t sp)
{
  register uint32_t fpscr_val;
  if(lr == 0xFFFFFE9)
  {
```

```
sp = sp + 0x60;
  else if(lr == 0xFFFFFFED)
    sp = \__get_PSP() + 0x60 ;
fpscr_val = *(uint32_t*)sp;
{ check exception flags }
fpscr_val &= (uint32_t) \sim0x8F ; // Clear all exception flags
*(uint32_t*)sp = fpscr_val;
___DMB() ;
}
// FPU IRQ Handler
void __asm FPU_IRQHandler(void)
IMPORT FPU_ExceptionHandler
                      // move LR to R0
MOV RO, LR
MOV R1, SP
                       // Save SP to R1 to avoid any modification to
                       // the stack pointer from FPU_ExceptionHandler
                       // dummy read access, to force clear
VMRS R2, FPSCR
B FPU_ExceptionHandler
BX LR
}
```

Revision history PM0214

5 Revision history

Table 58. Document revision history

| Date | Revision | Changes |
|-------------|----------|--|
| 20-Feb-2012 | 1 | Initial release. |
| 09-Jul-2012 | 2 | Changed reset value in Section 4.6.2: Floating-point context control register (FPCCR). Added Table 1: Applicable products. |
| 04-Sep-2012 | 3 | Added information on the STM32F3xxx Cortex-M4 processor. Added extra part numbers to <i>Table 1: Applicable products</i> . Added related documentation references to <i>Introduction</i> . Changed "IEEE754-compliant single-precision FPU" bullet in <i>Section 1.3.3: Cortex-M4 processor features and benefits summary</i> . Added information on extended interrupt/event controller to <i>Section 2.5.3: External event input / extended interrupt and event input</i> . Changed first "interrupt" bullet in <i>Section 4.3: Nested vectored interrupt controller (NVIC)</i> . Removed outdated reset value information in <i>Section 4.4.7: Configuration and control register (CCR)</i> , and for 0x14 offset in <i>Table 52: System fault handler priority fields</i> . Added a note about IEEE 754 to <i>Section 4.6: Floating point unit (FPU)</i> . |
| 12-May-2014 | 4 | Updated Reference documents. Updated Section 4.4.1: Auxiliary control register (ACTLR). Updated Section 4.5.1: SysTick control and status register (STK_CTRL). |
| 18-Apr-2016 | 5 | Updated: - Introduction - Reference documents - Section 2.5.3: External event input / extended interrupt and event input - Section 4.6.7: Enabling and clearing FPU exception interrupts - Table 51: Priority grouping Removed: - Table 1: Applicable products |
| 02-Oct-2017 | 6 | Updated document scope to include STM32L4+ Series impacting only the document's title and cover page. Updated <i>Table 49: NVIC register map and reset values</i> |
| 21-Feb-2019 | 7 | Updated: - Document scope to include STM32MP1 Series, STM32WB Series, STM32G4 Series - Title and cover page - Section 1: About this document - General update of Section 4.3: Nested vectored interrupt controller (NVIC) |

PM0214 Revision history

Table 58. Document revision history (continued)

| Date | Revision | Changes |
|-------------|----------|--|
| 24-Jun-2019 | 8 | Updated the <i>Introduction</i> and <i>Reference documents</i> to include the support for STM32H7 Series. |
| 18-Dec-2019 | 9 | Added STM32WL Series. Replaced SHCRS by SHCSR in <i>Table 50: Summary of the system control block registers</i> and <i>Table 53: SCB register map and reset values</i> . |
| 23-Mar-2020 | 10 | Replaced STM32H7 Series by STM32H745/755 and STM32H747/757 Lines, since Arm Cortex-M4 core is only present in these product lines. |

IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, please refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2020 STMicroelectronics - All rights reserved