# Design of a time-to-digital converter to be used as a phase detector in a PLL in 65 nm technology

Luis Guillermo Macias Rojas

July 19, 2025

## Abstract

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

# Acknowledgements

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque cursus luctus mauris.

## **Dedications**

Nulla malesuada porttitor diam. Donec felis erat, congue non, volutpat at, tincidunt tristique, libero. Vivamus viverra fermentum felis. Donec nonummy pellentesque ante. Phasellus adipiscing semper elit. Proin fermentum massa ac quam. Sed diam turpis, molestie vitae, placerat a, molestie nec, leo. Maecenas lacinia. Nam ipsum ligula, eleifend at, accumsan nec, suscipit a, ipsum. Morbi blandit ligula feugiat magna. Nunc eleifend consequat lorem. Sed lacinia nulla vitae enim. Pellentesque tincidunt purus vel magna. Integer non enim. Praesent euismod nunc eu purus. Donec bibendum quam in tellus. Nullam cursus pulvinar lectus. Donec et mi. Nam vulputate metus eu enim. Vestibulum pellentesque felis eu massa.

# Contents

Li	List of figures			
List of tables				10
1	Intro	oductio	on	11
	1.1	Conte	ext and motivation	12
		1.1.1	Low jitter PLLs in modern IC design	12
		1.1.2	Limitations of analog PLLs	12
		1.1.3	Limitations of traditional PFDs	12
	1.2	Proble	em statement	12
	1.3	Objec	tives	12
		1.3.1	General objective	12
		1.3.2	Specific objectives	12
	1.4	Signifi	icance	12
		1.4.1	Academic significance	12
		1.4.2	Industry significance	12
	1.5	Scope	e and limitations	12
	1.6	Thesis	s roadmap	12
2	The	oretica	al framework	13
	2.1	Phase	e-locked loop fundamentals	13
		2.1.1	Basic concept	13
		2.1.2	Key PLL parameters	14

		2.1.3	Analog phase-locked loop	18
	2.2	Digital	phase-locked loop	29
		2.2.1	Time-to-digital converter	30
		2.2.2	Digital loop filter	32
		2.2.3	Digitally controlled oscillator	34
3	Lite	rature ı	review	36
4	Met	hodolo	gy	42
5	Res	ults		44
6	Disc	cussior	1	46
7	Conclusion			
Α	App	endix		50

# List of Figures

2.1	a) PFD block	16
2.2	b) PFD output.	16
2.3	Block diagram of the linear phase PLL	19
2.4	VCO characteristic example	19
2.5	Second-order passive loop filter	19
2.6	Block diagram of the linear phase PLL with each block trans-	
	fer function	20
2.7	Three states PFD implementation	22
2.8	Transient response of the PFD	22
2.9	Charge pump schematic	23
2.10	CMOS drain switched charge pump	23
2.11	CMOS ring oscillator	24
2.12	VCO characteristic curve	24
2.13	CMOS ring oscillator stage with varactor load tuning	25
2.14	CMOS ring oscillator stage with resistive load tuning	25
2.15	Ideal LC tank circuit	25
2.16	Real LC tank circuit	25
2.17	Equivalent LC tank circuit	26
2.18	Cross-coupled pair	26
2.19	MOS varactor	27
2.20	MOS varactor characteristic	27
2.21	Cross-coupled pair VCO schematic	27
2.22	%2 frequency divider using D flip-flops	28

2.23	CML frequency divider.	28
2.24	Digital PLL architecture	29
2.25	Delay line TDC schematic	30
2.26	3-bit delay line TDC timing diagram	31
2.27	DLL architecture	32
2.28	Conceptual filter using a proportional and an integral path	33
2.29	DLF implementation using an adder and a register	33
2.30	Cross-coupled DCO implementation with binary weighted ca-	
	pacitive array	34

# List of Tables

3.1	Performance Summary of State-of-the-Art TDC-PLLs	38
3.2	Comparison of Full-Range ( $\pm 2\pi$ ) TDC-Based PLL Architectures	41

# Chapter 1

# Introduction

1	.1	Context	and	matiro	tion
	. I	Context	and	mouva	JJOH

- 1.1.1 Low jitter PLLs in modern IC design
- 1.1.2 Limitations of analog PLLs
- 1.1.3 Limitations of traditional PFDs
- 1.2 Problem statement
- 1.3 Objectives
- 1.3.1 General objective
- 1.3.2 Specific objectives
- 1.4 Significance
- 1.4.1 Academic significance
- 1.4.2 Industry significance

# Chapter 2

## Theoretical framework

## 2.1 Phase-locked loop fundamentals

#### 2.1.1 Basic concept

The PLL is a feedback control system that is used to synchronize the phase and frequency of an output signal to a reference signal. The reference signal is a very stable clock signal locally generated usually by a crystal oscillator. The PLL compares the phase of this reference signal with the phase of the output signal and generates an error signal that is used to adjust the frequency of the output signal.

There's two types of applications for PLLs broadly speaking: clock generation and clock data recovery. In the first case, the PLL is used to generate a clock signal that is synchronized to the reference signal. In the second case, the PLL is used to recover the clock signal from a data stream.

The PLL consists of three main components: a phase detector (PD), a loop filter (LF) and a voltage-controlled oscillator (VCO). The PD compares the phase of the reference signal with the phase of the output signal and generates an error signal that is proportional to the phase difference between

the two signals. The LF smooths out the ripple riddled signal generated by the PD, reduces the high frequency noise of the loop and provides a stable control voltage to the VCO. The VCO generates an output signal whose frequency is proportional to the control voltage. Lastly, the output signal is fed back to the PD, thereby creating a closed-loop system.

If the PLL also has a frequency divider in the feedback path, the system is also capable of generating a frequency that is a multiple or fraction of the reference frequency. This is useful in applications where a higher frequency is needed, such as in RF synthesizers.

### 2.1.2 Key PLL parameters

#### Phase noise / jitter

Jitter is defined as the time deviation  $(\Delta_t)$  of a signal's transition edges from their ideal positions in time. It is a metric of the outmost importance in the design of PLLs as it is a direct measure of the quality of the clock signal generated. Phase noise describes the same phenomenon in the frequency domain (the phase noise of a signal is the Fourier transform of the jitter) and is usually expressed in dBc/Hz.

#### Output frequency

It is defined as the range of frequencies that the PLL is capable of generating and can be determined by the VCO output range and the division ratio of the feedback frequency divider. This is a key metric in establishing the application of the PLL (e.g., clock generation or RF synthesizer) and it bears significant importance in the design process due to the tradeoff it has with the phase noise performance of the PLL.

#### Loop bandwidth

The closed-loop bandwidth of a PLL is the frequency range over which the PLL can track the phase/frequency variations of the input signal (from DC to either -3 dB from the open-loop gain or to the unity-gain frequency at 0 dB). It affects the acquisition time and phase noise performance of the PLL.


#### Noise bandwidth

It is the PLL's noise due to the filter's loop bandwidth, the higher frequencies of the voltage-controlled oscillator (VCO) are the major contributor to this effect, therefore the need to set a low enough bandwidth in order to suppress the most out of it. Even if reducing the loop bandwidth would be desirable to suppress in-band phase noise, it's also necessary to take into consideration that there is a tradeoff between the lock-in time and in-band phase noise.

#### Beat-note period

Defined as the time interval between successive "beats" (oscillations) observed at the phase detector output, in other words, is the inverse of the frequency difference's magnitude between the reference and feedback signals as shown in figure 2.2. Beat-note period is closely related to the acquisition time of the PLL and can be estimated by equation (2.1). This metric is a direct measure of the frequency mismatch between the reference and the feedback signals.

$$T_{beat} = \frac{1}{|f_{ref} - f_{feed}|} \tag{2.1}$$

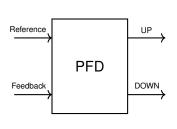

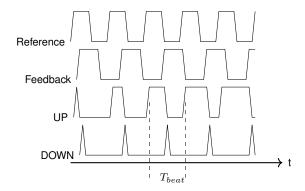


Figure 2.1: a) PFD block.

Figure 2.2: b) PFD output.

#### Lock-in time

Lock-in time (also called aquisition or settling time) is defined as the time for the PLL to lock on to the input reference phase and frequency within one beat-note period ( $T_{beat}$ ) after a frequency change or startup of the system. This parameter measures the time required for the PLL to achieve the final phase lock once the VCO frequency is within the lock-in range. The lock-in time can be estimated with equation (2.2).

$$T_{lock-in} = \frac{ln(\epsilon)}{\zeta \omega_n} \tag{2.2}$$

where:

 $\epsilon = \text{acceptable phase error}$ 

 $\zeta = \text{damping factor}$ 

 $\omega_n = \text{natural frequency}$ 

#### Pull-in time

In contrast with the lock-in time, the pull-in time is the required amount of time for the PLL to initially aquire lock on to the reference signal from an arbitrary starting frequency (when the VCO's initial frequency is far from the target).

#### Lock-in range

The frequency range within which the PLL locks to the reference frequency in one  $T_{beat}$ . Once the feedback signal is in this range, the PLL will enter lock state within the next  $T_{beat}$ .

#### Pull-in range

Range of frequency within which the PLL can aquire lock on to the reference signal once the VCO has the correct frequency and several beat-note periods have passed.

#### Pull-out range

The maximum allowed frequency or phase abrupt change applied to the reference signal beyond which the PLL unlocks.

#### Hold range

This parameter establishes the maximun theoretical frequency range for an input reference beyond which the PLL never locks. Hold range is bigger than both lock-in and pull-in ranges.

#### SNR

The signal to noise ratio is an appropriate way to measure the impact of noise on a circuit. It's often used in most figures of merit (FOM) for making fair comparisons between PLLs.

#### Power consumption

An important parameter in measuring the performance of integrated circuits.

Often used in most FOMs.

#### Spurs

Spurious tones are unwanted periodic signals that appear at the output spectrum of the PLL. Spurs are completely deterministic, thus they are distinct from phase noise which is random and spreads across the spectrum of the signal.

#### 2.1.3 Analog phase-locked loop

The principles of operation of the digital PLL stem from its analog counterpart, therefore this subsection describes the fundamental building blocks of the analog PLL as well as a simplified model of the system which allows for the circuit designer to analyze its behavior.

#### Linear phase model of the PLL

The PLL is a non-linear system, yet it can be approximated quite accurately into the linear system of figure 2.1 if certain assumptions are taken in to consideration. The first of this assumptions is that the phase error  $(\phi_e)$  must be small enough, meaning the PLL is near lock state. Another one is that the characteristic of the phase detector must be approximately linear and given by (2.3). Lastly, the VCO's tuning range must be within its linear region of operation (it is generally desirable to limit the variation of  $K_{VCO}$  to no more than 20%) like the frequency range between  $\omega_1$  and  $\omega_2$  in figure 2.4, only in this conditions the VCO can be considered a linear system and thus be described by (2.4).

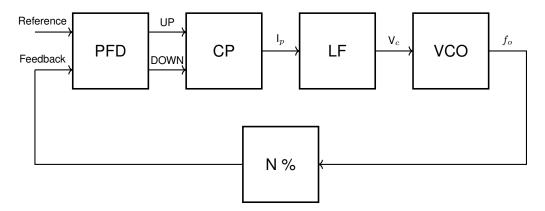


Figure 2.3: Block diagram of the linear phase PLL.

$$v_d = K_{PD} \phi e + \underbrace{V_{do}}_{\text{free running voltage}}$$

$$\Delta_{\omega_o} = K_{VCO} \left( V_c - V_{co} \right)$$

$$(2.3)$$

$$\Delta_{\omega_o} = K_{VCO} \left( V_c - V_{co} \right) \tag{2.4}$$

Each of the blocks in 2.3 has a transfer function associated with it, which can be expressed as follows: The PFD/CP combination is modeled as a current source with a gain of  $I_p/2\pi$ . The VCO is modeled as an ideal integrator with gain  $K_{VCO}$  and its transfer function is given by  $K_{VCO}/S$ . The feedback divider is modeled as a simple gain of 1/N. Finally, the loop filter (LF) depends on the order of the filter and the type of components used.

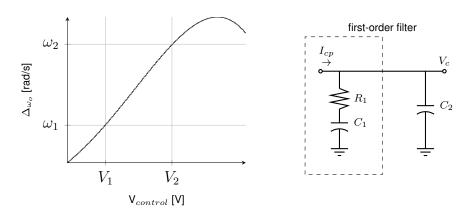


Figure 2.4: VCO characteristic ex- Figure 2.5: Second-order passive loop filter. ample.

The most common implementation is a passive RC filter, which can be modeled either as a first-order or a second-order system. For the sake of simplicity in this analysis, the LF is modeled as a first-order circuit like the one enclosed by dashed lines in figure 2.5. The transfer function of the LF is then given by  $(R_1SC_1 + 1)/(SC_1)$ .

Knowing the transfer functions of each block, one can represent the PLL system as in figure 2.6. Then with the help of Mason's rule (2.5), the overall closed-loop transfer function (2.6) of the PLL can be obtained.

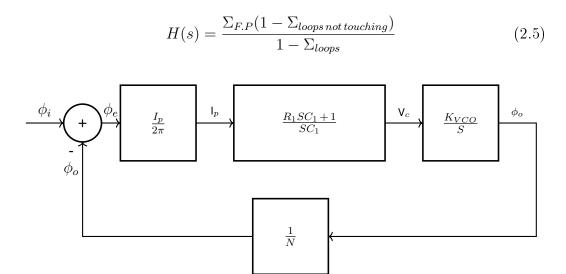


Figure 2.6: Block diagram of the linear phase PLL with each block transfer function.

$$A_{CL} = \frac{\frac{I_p K_{VCO}}{2\pi C_1} (R_1 S C_1 + 1)}{S^2 + S \frac{I_p}{2\pi} K_{VCO} R_1 + \frac{I_p K_{VCO}}{2\pi C_1}}$$
(2.6)

From the closed-loop transfer function (2.6) one can see that the PLL behaves as a second-order system with two poles at the origin (two ideal integrators), opening up the possibility of instability. In order to ensure stability, the PLL must be designed to have a sufficiently high phase margin  $(\phi_m)$ , and consequently an adequate damping factor  $(\zeta)$  and natural frequency  $(\omega_n)$ . Both  $\omega_n$  (2.7) and  $\zeta$  (2.8) are crucial parameters in the design of the PLL, as they determine the bandwidth and transient response of the system.

$$\omega_n = \sqrt{\frac{I_p K_{VCO}}{2\pi C_1}} \tag{2.7}$$

$$\zeta = \frac{R_1}{2} \sqrt{\frac{I_p K_{VCO} C_1}{2\pi}} \tag{2.8}$$


It can be proven that the loop bandwidth  $(\omega_u)$  is related with  $\omega_n$  and  $\zeta$  by equation (2.9).

$$\omega_u^2 = (2\zeta^2 + \sqrt{4\zeta^4 + 1})\omega_n^2 \tag{2.9}$$

#### Phase frequency detector

A PLL that has a phase frequency detector (PFD) instead of just a phase detector (PD) is superior because it can track changes in both phase and frequency at the input signal. This approach provides robustness to the system because the PLL locks regardless of the initial value of the output frequency, therefore making the pull-in range equal to the VCO tuning range.

The most common implementation of a PFD is shown in figure 2.7. The operation of this circuit is as follows: When either of the two signals arrive with a rising edge to the corresponding D flip-flop CLK terminal a HIGH state is pass along to its output (Q), this result is maintained until the other signal's rising edge arrives at the second flip-flop because at that moment in time the AND gate would activate and reset both flip-flops. This behavior can be observed in figure 2.8.

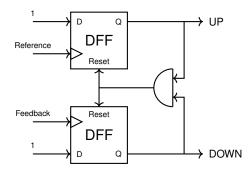

 $CLK_{in}$   $CLK_{out}$  UP OOWN OOWN OOWN

Figure 2.7: Three states PFD implementation.

Figure 2.8: Transient response of the PFD.

#### Loop filter

The function of the loop filter is to filter out the high frequency noise from the VCO and to provide a stable control voltage to the VCO. The loop filter is usually a passive RC filter as the one in figure 2.5, but it can also be an active filter. The loop filter is a critical component of the PLL because it determines the bandwidth, the noise performance and the transient response of the PLL. The loop filter is usually designed to be a second-order low-pass filter, but it can also be a higher-order filter if needed. The values of the components of the filter should be designed first and foremost to achieve stability at a given bandwidth, equations (2.8) and (2.9) are useful for this purpose.

The -3dB closed-loop bandwidth and the open-loop unity-gain bandwidth are fairly close to each other for  $\zeta \geq 1$ . It is for this reason that both quantities are often used interchangeably. In order to achieve a good transient response and noise performance, the loop bandwidth should be set to a value of  $\omega_{ref}/10 \, [rad/s]$  or less, where  $\omega_{ref}$  is the reference frequency.

#### Charge pump

Charge pumps (CP) are circuits designed to either source or sink charge to/from a capacitor for a controlled amount of time. There are many different implementations of charge pumps, but all of them consist of a current source, a switch and a capacitor (which is usually part of the loop filter).

Most of the PLLs designed today are CPPLLs (or type-II PLLs) because the combination of PFD/CP/LF exhibit an infinite gain for a finite phase error, which means that for the control voltage to be finite, the phase error must be zero. This is a desirable property because it allows the PLL to have a very low phase error. Figure 2.9 shows the diagram of a charge pump, while figure 2.10 shows the schematic of a CMOS drain switched charge pump.

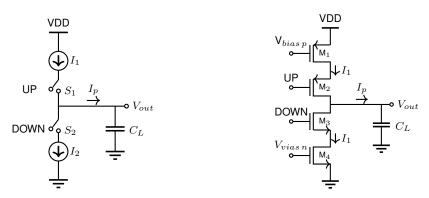



Figure 2.9: Charge pump schematic. Figure 2.10: CMOS drain switched charge pump.

The greatest challenge in designing a charge pump resides in eliminating any current mismatch between  $I_1$  and  $I_2$  while maintaining a large output voltage compliance. This task is particularly difficult to achieve because the channel length modulation in the MOSFETs causes the output current to be dependent on the output voltage ( $V_{DS}$  modulates the current). This means that both the output voltage compliance and the lessening of the current mismatch trade off with each other.

There are multiple solutions to this problem (some involving more complex topologies dealing also with the issue of clock feedthrough), yet the simplest one is to use wide enough (also large enough in the case of the current sources) transistors to minimize the channel length modulation effect. This solution is far from ideal, but is good enough for some applications.

#### Voltage-controlled oscillator

The VCO is the block that generates the output signal of the PLL. The frequency of the output signal is determined by the control voltage that the loop filter provides. It is a non-linear circuit that converts a voltage into a frequency (though it can be assumed to be linear for the conditions mentioned in the previous section). The VCO response looks like that of figure 2.12, where the gain of the VCO ( $K_{VCO}$ ) is an important design parameter. In general, it is desirable to have a relatively small (without compromising the stability of the PLL)  $K_{VCO}$  value so that any noise coupled to the previous stage does not translate into a large phase/frequency fluctuation at the output. A good rule of thumb is to keep  $K_{VCO}$  below  $0.1f_mHz/V$  where  $f_m$  is the center frequency of the VCO tuning range.

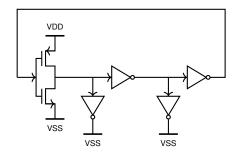

 $f_{max}$   $f_{max}$   $f_{min}$   $f_{win}$   $f_{w$ 

Figure 2.11: CMOS ring oscillator.

Figure 2.12: VCO characteristic curve.

There is a wide variety of VCOs, but the most common ones are the ring oscillator and the LC oscillator. The ring oscillator can be realized with CMOS inverters (Fig. 2.11) or with differential pairs, usually the former is preferred because is easier to implement, more compact and suffers less from mismatch. According to (2.10), the frequency of the ring oscillator is determined by the number of stages and the delay of each stage.

$$f_o = \frac{1}{2N t_p} \tag{2.10}$$

The analog frequency tuning is done by either changing the capacitance of

the load (varactor implementation) or by reducing the strength of the inverters (via changing the pull-up or pull-down resistance), figures 2.13 and 2.14 show both tuning methods respectively.

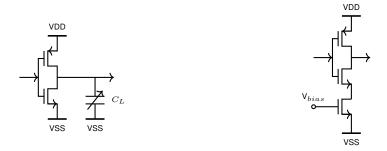


Figure 2.13: stage with varactor load tuning.

CMOS ring oscillator Figure 2.14: CMOS ring oscillator stage with resistive load tuning.

The LC oscillator is preferred for applications that require low phase noise and high frequency operation. This VCO is based on the resonator circuit (LC tank) shown in figure 2.15. The frequency of oscillation of an ideal LC tank is given by (2.11), in practice however, there's a need for an active device to compensate for the losses in the circuit and sustain oscillation. This losses, responsible for dampening the oscillation are primarily caused by the the parasitic series resistance of the inductor.

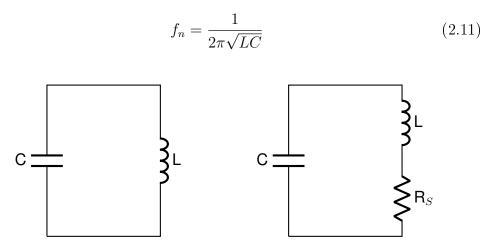



Figure 2.15: Ideal LC tank circuit.

Figure 2.16: Real LC tank circuit.

The LC tank of figure 2.16 can be modeled as a parallel RLC circuit, where

the inductor is modeled as an ideal inductor in parallel with a resistor  $(R_p)$  and an ideal capacitor; the equivalent circuit is shown in figure 2.17. Equating the transfer functions of both 2.16 and 2.17 yields equation (2.12), which can be used to compute  $R_p$ .



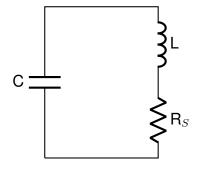

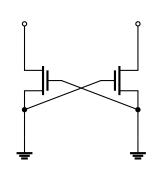


Figure 2.17: Equivalent LC tank circuit.

Figure 2.18: Cross-coupled pair.

The active circuit of figure 2.18 is known as a cross-coupled pair, it compensates for  $R_p$  with a negative resistance. In fact, by analyzing the small signal model of the cross-coupled pair the designer can arrive at equation (2.13), which allows to solve for the pair's transconductance  $(g_m)$ .  $R_{pair}$  should be chosen  $\gg R_p$  so that the former dominates in parallel with the latter (compensating for the losses).

$$R_{pair} = -\frac{2}{g_m} \tag{2.13}$$

The previous discussion focused on sustaining the oscillations of the LC tank, the control of the frequency is done by changing the capacitance of the tank. The most common way to do this is by using a varactor, such a device can be implemented with a MOSFET in the triode region and wiring it as shown in figure 2.19. The capacitance of the MOS varactor doesn't change linearly across all of the applied voltage. 2.20 shows the typical response of a MOS varactor in 65 nm, where it can be distinguished between three

regions: Accumulation region, depletion and inversion. The region of interest is the inversion region, where the capacitance changes approximately linearly.




Figure 2.19: MOS varactor.

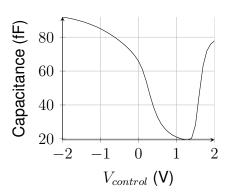


Figure 2.20: MOS varactor characteristic.

The tuning range can be extended by putting two varactors back to back on their gates. The final circuit of the cross-coupled pair VCO is shown in figure 2.21.

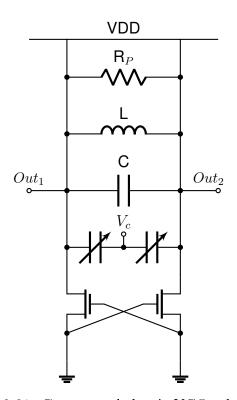


Figure 2.21: Cross-coupled pair VCO schematic.

#### Frequency divider

The frequency divider is a circuit that takes an input signal and produces an output signal with a frequency that is a fraction of the input frequency. The most common frequency divider is the flip-flop (fig. 2.22), which divides the input frequency by two, although there are other types of dividers that can divide by any integer number. The frequency divider is used in PLLs to reduce the frequency of the input signal to a level that can be processed by the other blocks of the PLL (to match the frequency of the reference signal).

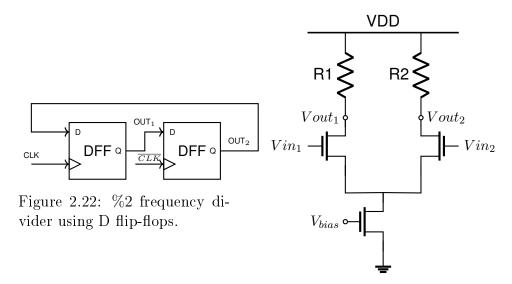


Figure 2.23: CML frequency divider.

Although the flip-flop is the most common frequency divider, there are other types of dividers that can be used in PLLs. One of the most relevant is the CML frequency divider (fig. 2.23), which is a type of frequency divider that uses current-mode logic (CML) to achieve high speed operation. CML dividers are typically used in high-speed applications, such as high-speed data communication systems, where the output of the VCO is too high to be processed by any regualr flip-flop. The CML frequency divider is based on the principle of current steering, where the input signal is used to control the current flowing through a branch of the differential pair.

A CML signal resembles a sinusoidal wave and has a lower harmonic

content than a regular square wave, yet its power consumption is higher because of the constant current through the circuit due to the current source of the differential pair.

## 2.2 Digital phase-locked loop

One of the main problems of analog PLLs is that they are very sensitive to process, voltage and temperature (PVT) variations, which can cause the PLL to become unstable or to fail to lock. To address this issue, digital PLLs (DPLLs) have been developed. DPLLs take advantage of the technology scaling (whereas analog PLLs suffer from it) to achieve a better performance and robustness in modern CMOS processes. To realize a circuit that performs well under this technology nodes it is necessary to avoid the analog domain as much as possible (at least on the critical path). The fundamental block that allows this task is the time-to-digital converter (TDC).

The general architecture of a digital PLL is shown in figure 2.24. The DPLL consists of a TDC, a digital loop filter (DLF) and a digitally controlled oscillator (DCO). The basic operation of this three circuits will be explained in the following sections.

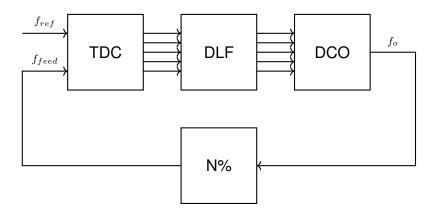


Figure 2.24: Digital PLL architecture.

#### 2.2.1 Time-to-digital converter

The TDC substitutes the phase detector of the analog PLL, it measures the time difference  $(\Delta_t)$  between two signals and converts it into a digital value that is proportional to that  $\Delta_t$ , thus it transforms a signal in the time domain into a signal in the digital domain (avoiding the analog domain entirely). The TDC is a critical block in the DPLL, as it determines the resolution and accuracy of the phase measurement. There are several types of TDCs, but the most common one is the delay line TDC, which uses a series of delay elements to measure the time difference between two signals. A delay line TDC is shown in figure 2.25 and its timing diagram is shown in figure 2.26.

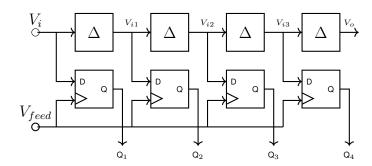


Figure 2.25: Delay line TDC schematic.

The TDC of figure 2.25 consists of a series of delay elements ( $\Delta$ ) that are used to measure the time difference between the input signals  $V_i$  and  $V_{feed}$ . This delay elements must be identical to each other and have a fixed delay which is the LSB of the TDC. The time difference between the two signals is measured by counting the number of delay elements that are crossed by the input signal  $V_i$  before it reaches the output signal  $V_o$  (and both signals are in phase after one complete cycle). The way this is done is by an array of samplers (in this case D flip-flops but can be any type of sampler) that read the output of each  $\Delta$  and hold it until the next clock cycle. Because the outputs of the samplers are sequentially read, the combination of them represent a digital word in the form of a thermometer code.

The number of delay elements determines the resolution of the TDC

and can be calculated as a power of two  $(2^n)$ , thus the number of bits of the TDC with the waveforms shown in 2.26 is given by  $2^3 = 8$ , after that number of stages the output of the nth delay element would be in phase with the input signal  $V_i$ .

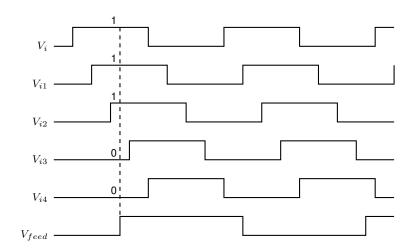


Figure 2.26: 3-bit delay line TDC timing diagram.

It is critically important to design the delay line TDC so that the delays are identical to each other, otherwise the TDC will measure the time difference incorrectly. Furthermore, the delay elements are usually implemented with a chain of CMOS inverters or differential pairs, both of which are sensitive to process variations, thus the complexity of designing this otherwise simple circuits. Several techniques have been proposed to address these challenges, such as calibration methods, layout optimization, and the use of delay locked loops (DLLs) to ensure the delay elements are matched even under PVT variations. The next chapter reviews some of these techniques in detail.

#### Delay-locked loop fundamentals

DLLs are used to generate a stable clock signal that is robust to PVT variations due to negative feedback. The basic operation of a DLL is to compare the phase of an input clock signal with a delayed version of itself and adjust the delay of the delayed clock signal until they are in phase. This is done

by using a voltage-controlled delay line (VCDL), a phase frequency detector (PFD), a charge pump (CP) and a loop filter (LF). Such an architecture is shown in figure 2.27.

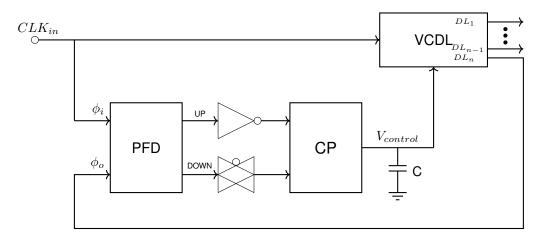


Figure 2.27: DLL architecture.

Since the output of the DLL is a delayed version of the input clock signal, it can be used to synchronize the clock signal with the phase of the input clock signal. The delay of the VCDL is controlled by the output of the CP, which is in turn controlled by the PFD. The PFD compares the phase of the input clock signal with the delayed version of itself and generates an UP or DOWN signal that is used to control the CP. The CP generates a control voltage that is used to adjust the delay of the VCDL until the two clock signals are in phase. This means that the DLL can be interchangeable with the delay line, thus the TDC can be implemented with a DLL.

## 2.2.2 Digital loop filter

It has already been mentioned that an analog PLL requires a loop filter to stabilize the feedback loop, the same is true for a DPLL. The digital loop filter (DLF) is used to filter the output of the TDC and to generate a control signal that is used to adjust the frequency of the DCO. The DLF is typically implemented as a low-pass filter or a proportional-integral (PI) controller.

Recalling the first order passive LF of figure 2.5 one can arrive at equa-

tion (2.14),where  $R_1$  contains the proportional path and  $1/S \cdot C_1$  contains the integral path.

$$H(s) = R_1 + \frac{1}{S \cdot C_1} \tag{2.14}$$

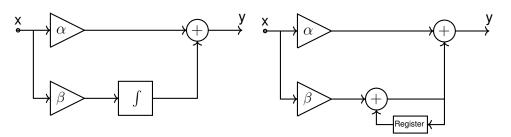


Figure 2.28: Conceptual filter using a proportional and an integral path.

Figure 2.29: DLF implementation using an adder and a register.

Knowing the analog transfer function of the LF, a conceptual topology similar to that of figure 2.28 could be proposed, where  $y = \alpha + \beta \int x \, dx$  for continuous-time quantities. To arrive at a digital counterpart, one could change x to  $D_{in}$  and y to  $D_{out}$ , rewrite this equation as the discrete-time expression (2.15), and take the Z transform of both sides to obtain the transfer function of the DLF (2.16), noting that a discrete-time integrator is represented by  $1/(1-z^{-1})$  [Razavi PLL book reference].

$$D_{out}(k) = \alpha + \beta \sum_{k=0}^{\infty} D_{in}[k]$$
(2.15)

$$H(z) = \frac{D_{out}}{D_{in}}(z) = \alpha + \frac{\beta}{1 - z^{-1}}$$
 (2.16)

Depicted in figure 2.29 is an implementation of the DLF that realizes the discrete-time integrator as an accumulator consisting of an adder and a register. The clock of such register is typically the same as the PLL reference.

#### 2.2.3 Digitally controlled oscillator

Having already discussed the VCO fundamentals and a couple of implementations, the digitally controlled oscillator (DCO) can be viewed as a VCO that is controlled by a digital word instead of an analog voltage. Taking a look back at the VCO schematic of figure 2.21 it can be observed that the frequency is controlled by the bias voltage  $V_c$  at the gate of both MOSFET varactors. If the varactors are replaced by either a binary weighted capacitor array or current steering DAC, then the frequency of the circuit can be controlled digitally.

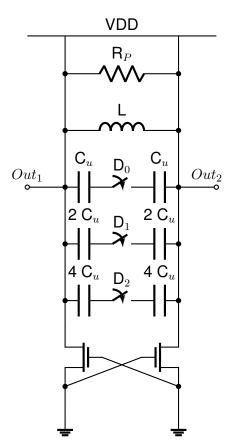


Figure 2.30: Cross-coupled DCO implementation with binary weighted capacitive array.

Figure 2.30 shows a cross-coupled DCO realization that makes use of a binary weighted capacitor array as the control mechanism. This binary weighted branches are controlled by switches that must be transmission gates (TG) because of the differential nature of the circuit. When the

switches are closed, the capacitance of the branches is added to the total capacitance of the circuit, thus reducing the frequency of oscillation. It is desirable that the reverse occurs, so the digital word is typically inverted before being applied to the switches, that way if the digital word rises from one cycle to the next the frequency of oscillation will also rise.

It is necessary to pay attention to the design of this capacitive array because the parasitic capacitance of the switches and the interconnects can significantly alter the desired frequency step of the DCO, another factor to take into account is the mismatch between the capacitors, which can cause the frequency steps to be uneven. To mitigate these issues minimum capacitor values should be avoided if possible.

# Chapter 3

## Literature review

Recent advancements in Phase-Locked Loop (PLL) design have increasingly incorporated Time-to-Digital Converters (TDCs) as replacements for traditional analog phase detectors. This shift enables higher resolution, better scalability in advanced CMOS nodes, and improved noise performance. This literature review examines key contributions from recent research (2022-2025), focusing on architectural innovations, calibration techniques, and performance metrics in TDC-based PLL designs. Hybrid and Digital-Intensive PLL Architectures Calibrated Dual-Referenced Interpolating TDC

A significant contribution in 28nm CMOS technology demonstrated a fractional-N Digital PLL (DPLL) employing a dual-interpolated TDC (DITDC) to address process-voltage-temperature (PVT) induced non-uniform resolution [di\_tdc\_2023]. This design implemented foreground and background calibration to match TDC resolution to the Digitally Controlled Oscillator (DCO) period, achieving -17.5 dBc integrated phase noise at 570 MHz while occupying only 0.019 mm² active area. The architecture eliminates the need for delta-sigma modulators, thereby reducing quantization noise, though it requires complex calibration logic for wide frequency operation (475 MHz to 1.1 GHz). Fast-Locking Hybrid Architectures

A hybrid approach combining TDC with adaptive charge pump in 180nm CMOS demonstrated significant improvements in lock time [hybrid\_pll\_2022]. This design used the TDC to quantize phase errors and dynamically enable a secondary charge pump, achieving 1.11  $\mu$ s lock time while maintaining -98.07 dBc/Hz phase noise at 1 MHz offset. The architecture presents an effective compromise between analog and digital implementations, though it highlights the persistent trade-off between TDC resolution and power consumption in scaled technologies. Low-Power and IoT-Optimized Designs Calibration-Free RO-Based TDC

A notable innovation for IoT applications appeared in a 40nm ADPLL that reused a ring oscillator (RO) as both the DCO and TDC delay line [ro\_tdc\_2023]. This self-referencing approach automatically tracks the DCO period with the TDC step, achieving 1.4 mW power consumption and -114 dBc/Hz phase noise at 1 MHz offset. The design's calibration-free operation significantly simplifies implementation for Bluetooth Low Energy (BLE) applications, though it requires careful RO tuning to mitigate injection-locking induced differential nonlinearity (DNL) errors. Ultra-Low Power Implementations

Recent divider-less ADPLL architectures have pushed power efficiency boundaries by employing embedded TDCs. A 65nm accumulator-based design achieved 0.53 mW power consumption and 0.87 ps RMS jitter through combination of a class- $F^{-1}$  DCO with narrow-range TDC [low\_power\_2024]. This approach demonstrates the potential for eliminating dividers to reduce quantization noise, though it demands exceptionally high TDC linearity. Advanced Calibration Techniques Noise-Shaping TDCs

Delta-sigma based TDCs have emerged as a powerful technique for quantization noise suppression [noise\_shaping\_2023]. By shaping noise to higher frequencies, these implementations have demonstrated 10-15 dB improvement in in-band phase noise, becoming particularly valuable for

high-performance RF synthesizers in 5G and Wi-Fi applications. PVT-Robust Designs

A 12nm ADPLL implementation addressed PVT variations through digitally controlled delay inverters (DCDIs) that calibrate TDC buffers in real-time [pvt\_robust\_2024]. This approach maintains sub-picosecond resolution across process corners, though it introduces calibration overhead that increases design complexity. Emerging Topologies and Future Directions Successive-Approximation TDCs

SAR-TDCs have shown promise in reducing conversion latency and power consumption. A 28nm implementation achieved 543 fs RMS jitter at just 0.82 mW power [sar\_tdc\_2023], demonstrating the efficiency of binary search approaches in time-domain conversion. Time-Amplification Techniques

Time-amplifier-assisted TDCs represent a cutting-edge development, enabling sub-100 fs resolution by amplifying picosecond-scale time differences prior to digitization [time\_amp\_2024]. These techniques are particularly relevant for next-generation high-precision applications. Performance Comparison

Table 3.1 summarizes key metrics from state-of-the-art implementations:

Table 3.1: Performance Summary of State-of-the-Art TDC-PLLs

Metric	Value	Technology Technique	
Phase Noise	-114 $\mathrm{dBc/Hz}$ @1MHz	40nm CMOS	RO-based TDC
Power	$0.38~\mathrm{mW}$	$40\mathrm{nm}\ \mathrm{CMOS}$	Accumulator-based
$\operatorname{Jitter}$	320  fs RMS	65 nm  CMOS	Noise-shaping
Lock Time	$1.11\mu s$	$180 \mathrm{nm} \ \mathrm{CMOS}$	TDC-assisted CP
Area	$0.019~\mathrm{mm}^2$	$28\mathrm{nm}\ \mathrm{CMOS}$	DI-TDC

Challenges and Future Directions

Current research faces several key challenges:

- The linearity versus power trade-off remains problematic for high-resolution
   TDCs
- Sub-10nm integration requires digitally intensive TDCs with self-healing capabilities
- Wideband applications demand multi-core architectures for GHz-range operation

Future work will likely focus on machine learning for adaptive calibration and 3D-integrated TDCs for next-generation systems.

TDC-Based PLLs with Full-Range Phase Acquisition  $(\pm 2\pi)$  1. Hybrid PFD-TDC Architectures for Extended Range

A key innovation in CN101753142B addresses the limited pull-in range of conventional TDCs by integrating:

- A coarse phase-frequency detector (PFD) for initial frequency acquisition
- A fine-resolution TDC for phase tracking
- A frequency detector that converts frequency errors to digital codes 4 This hybrid approach enables operation across the full  $\pm 2\pi$  range by:
- Using the PFD to handle large frequency offsets (beyond the TDC's native range)
- Switching to the TDC for high-resolution phase alignment once the PLL is near lock
- Employing a delay-line TDC with intermediate node taps to detect both phase and frequency errors 4
  - 2. Dual-Loop Gain Techniques

The bang-bang PLL in 18 demonstrates an alternative method using:

- Two discrete loop gains (inner and outer loops)
- A quaternary phase detector that toggles between gains based on phase error magnitude
- Outer loop optimized for pull-in range ( $\pm 2\pi$  capability)
- Inner loop optimized for jitter performance during lock 18

Key equations derived show the pull-in range depends primarily on the outer loop gain, freeing the inner loop for noise optimization 18. 3. State-of-the-Art Performance Tradeoffs

Recent designs face critical challenges:

- Power vs. Resolution: High-resolution TDCs (<1ps) in 4 consume more power during full-range operation
- Linearity: Delay-line mismatches in TDCs introduce nonlinearities that complicate wide-range operation 4
- Lock Time: Hybrid architectures in 418 show 20-30% faster locking than pure TDC-PLLs
  - 4. Emerging Solutions

Innovations to enhance  $\pm 2\pi$  capability include:

- Time Amplifiers: Stretch small time differences before TDC digitization
- Noise-Shaping TDCs: Improve in-band resolution while maintaining wide range 4
- Adaptive Calibration: Background calibration of TDC nonlinearities

#### during operation 4

#### 5. Comparative Analysis [1]

Table 3.2: Comparison of Full-Range ( $\pm 2\pi)$  TDC-Based PLL Architectures

Design	Technology	Range	Resolution	Lock Time
Hybrid PFD-TDC [hybrid patent]	65 nm CMOS	$\pm 2\pi$	${<}5\mathrm{ps}$	${<}2\mu\mathrm{s}$
Dual-Loop BB-PLL [dual loop]	$180 \mathrm{nm} \ \mathrm{CMOS}$	$\pm 2\pi$	Coarse/Fine	$1.5 \mu \mathrm{s}$
RO-TDC ADPLL $[\mathbf{ro} \ \mathbf{tdc}]$	$40\mathrm{nm}\ \mathrm{CMOS}$	$\pm \pi/2$	1.2 ps	$5 \mu \mathrm{s}$
SAR-TDC PLL $[\mathbf{sar}_{\mathbf{t}}\mathbf{dc}]$	$28 \mathrm{nm} \ \mathrm{CMOS}$	$\pm 2\pi$	$543 \mathrm{fs}$	$3 \mu \mathrm{s}$

## Methodology

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

#### Results

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

### Discussion

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

### Conclusion

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

# Appendix A

# Appendix

Quisque ullamcorper placerat ipsum. Cras nibh. Morbi vel justo vitae lacus tincidunt ultrices. Lorem ipsum dolor sit amet, consectetuer adipiscing elit. In hac habitasse platea dictumst. Integer tempus convallis augue. Etiam facilisis. Nunc elementum fermentum wisi. Aenean placerat. Ut imperdiet, enim sed gravida sollicitudin, felis odio placerat quam, ac pulvinar elit purus eget enim. Nunc vitae tortor. Proin tempus nibh sit amet nisl. Vivamus quis tortor vitae risus porta vehicula.

# Bibliography

[1] Mark Van Paemel. "Analysis of a charge-pump PLL: A new model". In: IEEE Transactions on communications 42.7 (1994), pp. 2490–2498.