# Design of a time-to-digital converter to be used as a phase detector in a PLL in 65 nm technology

Luis Guillermo Macias Rojas

May 6, 2025

## Abstract

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

# Acknowledgements

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque cursus luctus mauris.

## **Dedications**

Nulla malesuada porttitor diam. Donec felis erat, congue non, volutpat at, tincidunt tristique, libero. Vivamus viverra fermentum felis. Donec nonummy pellentesque ante. Phasellus adipiscing semper elit. Proin fermentum massa ac quam. Sed diam turpis, molestie vitae, placerat a, molestie nec, leo. Maecenas lacinia. Nam ipsum ligula, eleifend at, accumsan nec, suscipit a, ipsum. Morbi blandit ligula feugiat magna. Nunc eleifend consequat lorem. Sed lacinia nulla vitae enim. Pellentesque tincidunt purus vel magna. Integer non enim. Praesent euismod nunc eu purus. Donec bibendum quam in tellus. Nullam cursus pulvinar lectus. Donec et mi. Nam vulputate metus eu enim. Vestibulum pellentesque felis eu massa.

# Contents

Lis	List of figures					
Lis	st of	tables		9		
1	Intro	oductio	on	10		
	1.1	1.1 Context and motivation				
		1.1.1	Low jitter PLLs in modern IC design	11		
		1.1.2	Limitations of analog PLLs	11		
		1.1.3	Limitations of traditional PFDs	11		
	1.2	Proble	em statement	11		
	1.3	Object	tives	11		
		1.3.1	General objective	11		
		1.3.2	Specific objectives	11		
	1.4	Signifi	cance	11		
		1.4.1	Academic significance	11		
		1.4.2	Industry significance	11		
			and limitations	11		
	1.6	Thesis	s roadmap	11		
2	The	oretica	I framework	12		
	2.1	Phase	e-locked loop fundamentals	12		
		2.1.1	Basic concept	12		
		2.1.2	Key PLL parameters	13		

		2.1.3	Analog phase-locked loop	17
	2.2	Digital	phase-locked loop	27
		2.2.1	Time-to-digital converter	27
		2.2.2	Digital loop filter	27
		2.2.3	Digitally controlled oscillator	27
3	Lite	rature ı	review	28
4	Met	hodolo	gy	30
5	Res	ults		32
6	Disc	cussior	1	34
7	Con	clusior	1	36
Α	App	endix		38

# List of Figures

2.1	a) PFD block	15
2.2	b) PFD output	15
2.3	Block diagram of the linear phase PLL	18
2.4	VCO characteristic example	18
2.5	Second-order passive loop filter	18
2.6	Block diagram of the linear phase PLL with each block trans-	
	fer function	19
2.7	Three states PFD implementation	21
2.8	Transient response of the PFD	21
2.9	Charge pump schematic	22
2.10	CMOS drain switched charge pump	22
2.11	CMOS ring oscillator	23
2.12	VCO characteristic curve	23
2.13	CMOS ring oscillator stage with varactor load tuning	24
2.14	CMOS ring oscillator stage with resistive load tuning	24
2.15	Ideal LC tank circuit	24
2.16	Real LC tank circuit	24
2.17	Equivalent LC tank circuit	25
2.18	Cross-coupled pair	25
2.19	MOS varactor.	26
2.20	MOS varactor characteristic	26
2 21	Cross-coupled pair VCO schematic	26

# List of Tables

# Chapter 1

## Introduction

1	1	Context	and	motivo	tion
	.	Context	and	mouva	1.1.1OTI

- 1.1.1 Low jitter PLLs in modern IC design
- 1.1.2 Limitations of analog PLLs
- 1.1.3 Limitations of traditional PFDs
- 1.2 Problem statement
- 1.3 Objectives
- 1.3.1 General objective
- 1.3.2 Specific objectives
- 1.4 Significance
- 1.4.1 Academic significance
- 1.4.2 Industry significance

11

## Chapter 2

## Theoretical framework

#### 2.1 Phase-locked loop fundamentals

#### 2.1.1 Basic concept

The PLL is a feedback control system that is used to synchronize the phase and frequency of an output signal to a reference signal. The reference signal is a very stable clock signal locally generated usually by a crystal oscillator. The PLL compares the phase of this reference signal with the phase of the output signal and generates an error signal that is used to adjust the frequency of the output signal.

There's two types of applications for PLLs broadly speaking: clock generation and clock data recovery. In the first case, the PLL is used to generate a clock signal that is synchronized to the reference signal. In the second case, the PLL is used to recover the clock signal from a data stream.

The PLL consists of three main components: a phase detector (PD), a loop filter (LF) and a voltage-controlled oscillator (VCO). The PD compares the phase of the reference signal with the phase of the output signal and generates an error signal that is proportional to the phase difference between

the two signals. The LF smooths out the ripple riddled signal generated by the PD, reduces the high frequency noise of the loop and provides a stable control voltage to the VCO. The VCO generates an output signal whose frequency is proportional to the control voltage. Lastly, the output signal is fed back to the PD, thereby creating a closed-loop system.

If the PLL also has a frequency divider in the feedback path, the system is also capable of generating a frequency that is a multiple or fraction of the reference frequency. This is useful in applications where a higher frequency is needed, such as in RF synthesizers.

#### 2.1.2 Key PLL parameters

#### Phase noise / jitter

Jitter is defined as the time deviation  $(\Delta_t)$  of a signal's transition edges from their ideal positions in time. It is a metric of the outmost importance in the design of PLLs as it is a direct measure of the quality of the clock signal generated. Phase noise describes the same phenomenon in the frequency domain (the phase noise of a signal is the Fourier transform of the jitter) and is usually expressed in dBc/Hz.

#### Output frequency

It is defined as the range of frequencies that the PLL is capable of generating and can be determined by the VCO output range and the division ratio of the feedback frequency divider. This is a key metric in establishing the application of the PLL (e.g., clock generation or RF synthesizer) and it bears significant importance in the design process due to the tradeoff it has with the phase noise performance of the PLL.

#### Loop bandwidth

The closed-loop bandwidth of a PLL is the frequency range over which the PLL can track the phase/frequency variations of the input signal (from DC to either -3 dB from the open-loop gain or to the unity-gain frequency at 0 dB). It affects the acquisition time and phase noise performance of the PLL.

#### Noise bandwidth

It is the PLL's noise due to the filter's loop bandwidth, the higher frequencies of the voltage-controlled oscillator (VCO) are the major contributor to this effect, therefore the need to set a low enough bandwidth in order to suppress the most out of it. Even if reducing the loop bandwidth would be desirable to suppress in-band phase noise, it's also necessary to take into consideration that there is a tradeoff between the lock-in time and in-band phase noise.

#### Beat-note period

Defined as the time interval between successive "beats" (oscillations) observed at the phase detector output, in other words, is the inverse of the frequency difference's magnitude between the reference and feedback signals as shown in figure 2.2. Beat-note period is closely related to the acquisition time of the PLL and can be estimated by equation (2.1). This metric is a direct measure of the frequency mismatch between the reference and the feedback signals.

$$T_{beat} = \frac{1}{|f_{ref} - f_{feed}|} \tag{2.1}$$

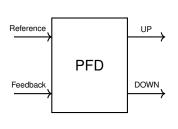


Figure 2.1: a) PFD block.

Figure 2.2: b) PFD output.

#### Lock-in time

Lock-in time (also called aquisition or settling time) is defined as the time for the PLL to lock on to the input reference phase and frequency within one beat-note period ( $T_{beat}$ ) after a frequency change or startup of the system. This parameter measures the time required for the PLL to achieve the final phase lock once the VCO frequency is within the lock-in range. The lock-in time can be estimated with equation (2.2).

$$T_{lock-in} = \frac{ln(\epsilon)}{\zeta \omega_n} \tag{2.2}$$

where:

 $\epsilon =$  acceptable phase error

 $\zeta = \text{damping factor}$ 

 $\omega_n = \text{natural frequency}$ 

#### Pull-in time

In contrast with the lock-in time, the pull-in time is the required amount of time for the PLL to initially aquire lock on to the reference signal from an arbitrary starting frequency (when the VCO's initial frequency is far from the target).

#### Lock-in range

The frequency range within which the PLL locks to the reference frequency in one  $T_{beat}$ . Once the feedback signal is in this range, the PLL will enter lock state within the next  $T_{beat}$ .

#### Pull-in range

Range of frequency within which the PLL can aquire lock on to the reference signal once the VCO has the correct frequency and several beat-note periods have passed.

#### Pull-out range

The maximum allowed frequency or phase abrupt change applied to the reference signal beyond which the PLL unlocks.

#### Hold range

This parameter establishes the maximun theoretical frequency range for an input reference beyond which the PLL never locks. Hold range is bigger than both lock-in and pull-in ranges.

#### $\mathbf{SNR}$

The signal to noise ratio is an appropriate way to measure the impact of noise on a circuit. It's often used in most figures of merit (FOM) for making fair comparisons between PLLs.

#### Power consumption

An important parameter in measuring the performance of integrated circuits.

Often used in most FOMs.

#### Spurs

Spurious tones are unwanted periodic signals that appear at the output spectrum of the PLL. Spurs are completely deterministic, thus they are distinct from phase noise which is random and spreads across the spectrum of the signal.

#### 2.1.3 Analog phase-locked loop

The principles of operation of the digital PLL stem from its analog counterpart, therefore this subsection describes the fundamental building blocks of the analog PLL as well as a simplified model of the system which allows for the circuit designer to analyze its behavior.

#### Linear phase model of the PLL

The PLL is a non-linear system, yet it can be approximated quite accurately into the linear system of figure 2.1 if certain assumptions are taken in to consideration. The first of this assumptions is that the phase error  $(\phi_e)$  must be small enough, meaning the PLL is near lock state. Another one is that the characteristic of the phase detector must be approximately linear and given by (2.3). Lastly, the VCO's tuning range must be within its linear region of operation (it is generally desirable to limit the variation of  $K_{VCO}$  to no more than 20%) like the frequency range between  $\omega_1$  and  $\omega_2$  in figure 2.4, only in this conditions the VCO can be considered a linear system and thus be described by (2.4).

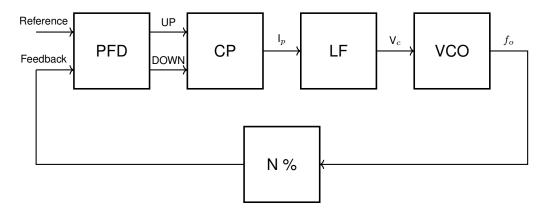


Figure 2.3: Block diagram of the linear phase PLL.

$$v_{d} = K_{PD} \phi e + \underbrace{V_{do}}_{\text{free running voltage}}$$

$$\Delta_{\omega_{o}} = K_{VCO} \left( V_{c} - V_{co} \right)$$

$$(2.3)$$

$$\Delta_{\omega_o} = K_{VCO} \left( V_c - V_{co} \right) \tag{2.4}$$

Each of the blocks in 2.3 has a transfer function associated with it, which can be expressed as follows: The PFD/CP combination is modeled as a current source with a gain of  $I_p/2\pi$ . The VCO is modeled as an ideal integrator with gain  $K_{VCO}$  and its transfer function is given by  $K_{VCO}/S$ . The feedback divider is modeled as a simple gain of 1/N. Finally, the loop filter (LF) depends on the order of the filter and the type of components used.

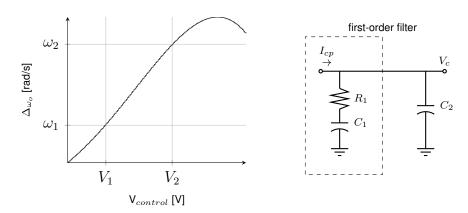


Figure 2.4: VCO characteristic ex- Figure 2.5: Second-order passive loop filter. ample.

The most common implementation is a passive RC filter, which can be modeled either as a first-order or a second-order system. For the sake of simplicity in this analysis, the LF is modeled as a first-order circuit like the one enclosed by dashed lines in figure 2.5. The transfer function of the LF is then given by  $(R_1SC_1 + 1)/(SC_1)$ .

Knowing the transfer functions of each block, one can represent the PLL system as in figure 2.6. Then with the help of Mason's rule (2.5), the overall closed-loop transfer function (2.6) of the PLL can be obtained.

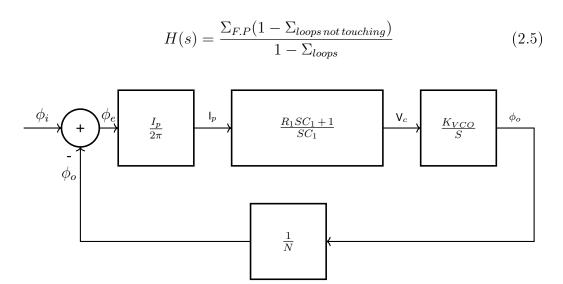


Figure 2.6: Block diagram of the linear phase PLL with each block transfer function.

$$A_{CL} = \frac{\frac{I_p K_{VCO}}{2\pi C_1} (R_1 S C_1 + 1)}{S^2 + S \frac{I_p}{2\pi} K_{VCO} R_1 + \frac{I_p K_{VCO}}{2\pi C_1}}$$
(2.6)

From the closed-loop transfer function (2.6) one can see that the PLL behaves as a second-order system with two poles at the origin (two ideal integrators), opening up the possibility of instability. In order to ensure stability, the PLL must be designed to have a sufficiently high phase margin  $(\phi_m)$ , and consequently an adequate damping factor  $(\zeta)$  and natural frequency  $(\omega_n)$ . Both  $\omega_n$  (2.7) and  $\zeta$  (2.8) are crucial parameters in the design of the PLL, as they determine the bandwidth and transient response of the system.

$$\omega_n = \sqrt{\frac{I_p K_{VCO}}{2\pi C_1}} \tag{2.7}$$

$$\zeta = \frac{R_1}{2} \sqrt{\frac{I_p K_{VCO} C_1}{2\pi}} \tag{2.8}$$


It can be proven that the loop bandwidth  $(\omega_u)$  is related with  $\omega_n$  and  $\zeta$  by equation (2.9).

$$\omega_u^2 = (2\zeta^2 + \sqrt{4\zeta^4 + 1})\omega_n^2 \tag{2.9}$$

#### Phase frequency detector

A PLL that has a phase frequency detector (PFD) instead of just a phase detector (PD) is superior because it can track changes in both phase and frequency at the input signal. This approach provides robustness to the system because the PLL locks regardless of the initial value of the output frequency, therefore making the pull-in range equal to the VCO tuning range.

The most common implementation of a PFD is shown in figure 2.7. The operation of this circuit is as follows: When either of the two signals arrive with a rising edge to the corresponding D flip-flop CLK terminal a HIGH state is pass along to its output (Q), this result is maintained until the other signal's rising edge arrives at the second flip-flop because at that moment in time the AND gate would activate and reset both flip-flops. This behavior can be observed in figure 2.8.

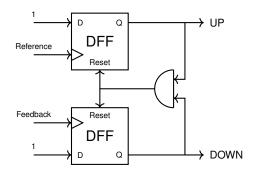

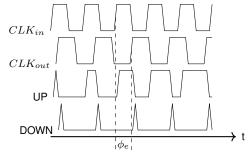


Figure 2.7: Three states PFD implementation.

Figure 2.8: Transient response of the PFD.

#### Loop filter

The function of the loop filter is to filter out the high frequency noise from the VCO and to provide a stable control voltage to the VCO. The loop filter is usually a passive RC filter as the one in figure 2.5, but it can also be an active filter. The loop filter is a critical component of the PLL because it determines the bandwidth, the noise performance and the transient response of the PLL. The loop filter is usually designed to be a second-order low-pass filter, but it can also be a higher-order filter if needed. The values of the components of the filter should be designed first and foremost to achieve stability at a given bandwidth, equations (2.8) and (2.9) are useful for this purpose.

The -3dB closed-loop bandwidth and the open-loop unity-gain bandwidth are fairly close to each other for  $\zeta \geq 1$ . It is for this reason that both quantities are often used interchangeably. In order to achieve a good transient response and noise performance, the loop bandwidth should be set to a value of  $\omega_{ref}/10 \, [rad/s]$  or less, where  $\omega_{ref}$  is the reference frequency.

#### Charge pump

Charge pumps (CP) are circuits designed to either source or sink charge to/from a capacitor for a controlled amount of time. There are many different implementations of charge pumps, but all of them consist of a current source, a switch and a capacitor (which is usually part of the loop filter).

Most of the PLLs designed today are CPPLLs (or type-II PLLs) because the combination of PFD/CP/LF exhibit an infinite gain for a finite phase error, which means that for the control voltage to be finite, the phase error must be zero. This is a desirable property because it allows the PLL to have a very low phase error. Figure 2.9 shows the diagram of a charge pump, while figure 2.10 shows the schematic of a CMOS drain switched charge pump.

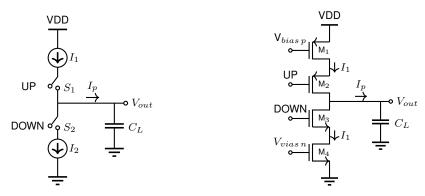



Figure 2.9: Charge pump schematic. Figure 2.10: CMOS drain switched charge pump.

The greatest challenge in designing a charge pump resides in eliminating any current mismatch between  $I_1$  and  $I_2$  while maintaining a large output voltage compliance. This task is particularly difficult to achieve because the channel length modulation in the MOSFETs causes the output current to be dependent on the output voltage ( $V_{DS}$  modulates the current). This means that both the output voltage compliance and the lessening of the current mismatch trade off with each other.

There are multiple solutions to this problem (some involving more complex topologies dealing also with the issue of clock feedthrough), yet the simplest one is to use wide enough (also large enough in the case of the current sources) transistors to minimize the channel length modulation effect. This solution is far from ideal, but is good enough for some applications.

#### Voltage-controlled oscillator

The VCO is the block that generates the output signal of the PLL. The frequency of the output signal is determined by the control voltage that the loop filter provides. It is a non-linear circuit that converts a voltage into a frequency (though it can be assumed to be linear for the conditions mentioned in the previous section). The VCO response looks like that of figure 2.12, where the gain of the VCO ( $K_{VCO}$ ) is an important design parameter. In general, it is desirable to have a relatively small (without compromising the stability of the PLL)  $K_{VCO}$  value so that any noise coupled to the previous stage does not translate into a large phase/frequency fluctuation at the output. A good rule of thumb is to keep  $K_{VCO}$  below  $0.1f_mHz/V$  where  $f_m$  is the center frequency of the VCO tuning range.

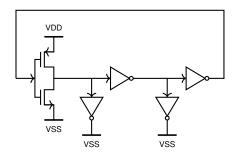

 $f_{max}$   $f_{max}$   $f_{min}$   $f_{m$ 

Figure 2.11: CMOS ring oscillator.

Figure 2.12: VCO characteristic curve.

There is a wide variety of VCOs, but the most common ones are the ring oscillator and the LC oscillator. The ring oscillator can be realized with CMOS inverters (Fig. 2.11) or with differential pairs, usually the former is preferred because is easier to implement, more compact and suffers less from mismatch. According to (2.10), the frequency of the ring oscillator is determined by the number of stages and the delay of each stage.

$$f_o = \frac{1}{2N t_p} \tag{2.10}$$

The analog frequency tuning is done by either changing the capacitance of

the load (varactor implementation) or by reducing the strength of the inverters (via changing the pull-up or pull-down resistance), figures 2.13 and 2.14 show both tuning methods respectively.



Figure 2.13: CMOS ring oscillator Figure 2.14: CMOS ring oscilstage with varactor load tuning. lator stage with resistive load tuning.

The LC oscillator is preferred for applications that require low phase noise and high frequency operation. This VCO is based on the resonator circuit (LC tank) shown in figure 2.15. The frequency of oscillation of an ideal LC tank is given by (2.11), in practice however, there's a need for an active device to compensate for the losses in the circuit and sustain oscillation. This losses, responsible for dampening the oscillation are primarily caused by the the parasitic series resistance of the inductor.

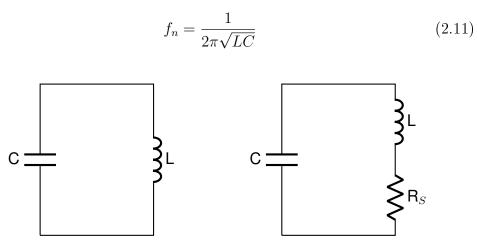



Figure 2.15: Ideal LC tank circuit.

Figure 2.16: Real LC tank circuit.

The LC tank of figure 2.16 can be modeled as a parallel RLC circuit, where

the inductor is modeled as an ideal inductor in parallel with a resistor  $(R_p)$  and an ideal capacitor; the equivalent circuit is shown in figure 2.17. Equating the transfer functions of both 2.16 and 2.17 yields equation (2.12), which can be used to compute  $R_p$ .



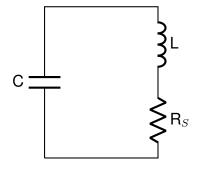

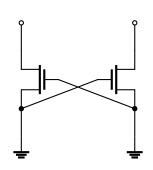


Figure 2.17: Equivalent LC tank circuit.

Figure 2.18: Cross-coupled pair.

The active circuit of figure 2.18 is known as a cross-coupled pair, it compensates for  $R_p$  with a negative resistance. In fact, by analyzing the small signal model of the cross-coupled pair the designer can arrive at equation (2.13), which allows to solve for the pair's transconductance  $(g_m)$ .  $R_{pair}$  should be chosen  $\gg R_p$  so that the former dominates in parallel with the latter (compensating for the losses).

$$R_{pair} = -\frac{2}{g_m} \tag{2.13}$$

The previous discussion focused on sustaining the oscillations of the LC tank, the control of the frequency is done by changing the capacitance of the tank. The most common way to do this is by using a varactor, such a device can be implemented with a MOSFET in the triode region and wiring it as shown in figure 2.19. The capacitance of the MOS varactor doesn't change linearly across all of the applied voltage. 2.20 shows the typical response of a MOS varactor in 65 nm, where it can be distinguished between three

regions: Accumulation region, depletion and inversion. The region of interest is the inversion region, where the capacitance changes approximately linearly.

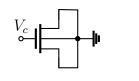


Figure 2.19: MOS varactor.

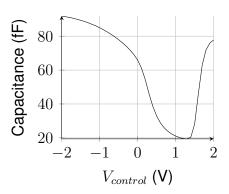


Figure 2.20: MOS varactor characteristic.

The tuning range can be extended by putting two varactors back to back on their gates. The final circuit of the cross-coupled pair VCO is shown in figure 2.21.

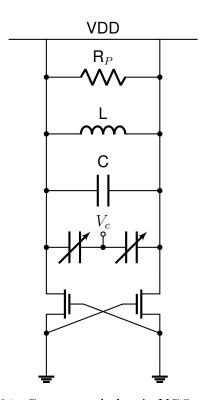


Figure 2.21: Cross-coupled pair VCO schematic.

#### Frequency divider

## 2.2 Digital phase-locked loop

anan

## 2.2.1 Time-to-digital converter

TDC as a phase detector

Delay-locked loop fundamentals

## 2.2.2 Digital loop filter

## 2.2.3 Digitally controlled oscillator

## Chapter 3

## Literature review

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque

cursus luctus mauris. [1]

## Chapter 4

## Methodology

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque

cursus luctus mauris.

## Chapter 5

## Results

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque

cursus luctus mauris.

## Chapter 6

## Discussion

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque

cursus luctus mauris.

## Chapter 7

## Conclusion

Lorem ipsum dolor sit amet, consectetuer adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetuer id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque

cursus luctus mauris.

# Appendix A

# Appendix

Quisque ullamcorper placerat ipsum. Cras nibh. Morbi vel justo vitae lacus tincidunt ultrices. Lorem ipsum dolor sit amet, consectetuer adipiscing elit. In hac habitasse platea dictumst. Integer tempus convallis augue. Etiam facilisis. Nunc elementum fermentum wisi. Aenean placerat. Ut imperdiet, enim sed gravida sollicitudin, felis odio placerat quam, ac pulvinar elit purus eget enim. Nunc vitae tortor. Proin tempus nibh sit amet nisl. Vivamus quis tortor vitae risus porta vehicula.

# Bibliography

[1] Mark Van Paemel. "Analysis of a charge-pump PLL: A new model". In: IEEE Transactions on communications 42.7 (1994), pp. 2490–2498.