
Data Communication Network DAY – 1

Mrs.Akshita.S.Chanchlani akshita.chanchlani@sunbeaminfo.com




Network Terminologies

•connecting multiple devices (computers) together to share the information group of devices/machines/IP addresses/hosts.

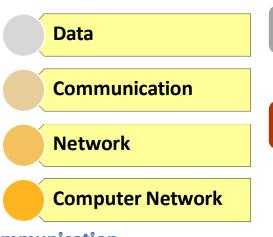

Components of Data communication

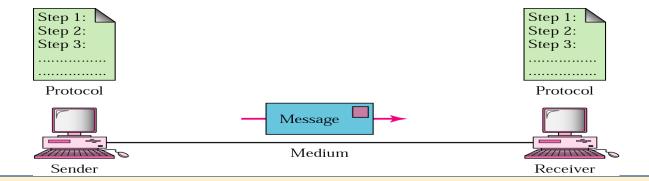

Node

• any device connected to the network(a computer, a printer etc)

Network Interface Card (NIC)

- is the circuit board that is used to connect computers to the network.
- In most cases, this is an *Ethernet* card plugged in a computer's motherboard

The effectiveness of a data communications system depends on four fundamental characteristics:

Delivery, Accuracy, Timeliness, Jitter



Network Types

Wired

Medium

• Wire / Cable

Cable Types

- co-axial
- transfers the data in the form of electrical signals
- CAT Cable / Twisted Pair Cable (STP/UTP)
 - transfers the data in the form of electrical signals
- Fiber Optics
 - transfers the data in the form of light
 - Minimum 10gbps

Types

• LAN, MAN, WAN

cat1 : - [it was used only for telephony
network]

cat2:1 mbps

cat3:10 mbps

cat4: 16 mbps

cat5: 100 mbps

cat5e: 125 mbps

cat6 : 1000 mbps ~ 1 gbps

cat7 : 10000 mbps ~ 10 gbps

cat8: 25000 mbps ~ 25 gbps

Wireless

Medium

Air (EM Waves)

Cable Types

- PAN
- WLAN
- WAN (GSM)




Media (Transmission Medium)



Transmission Modes / Data Flow Direction

Workstation

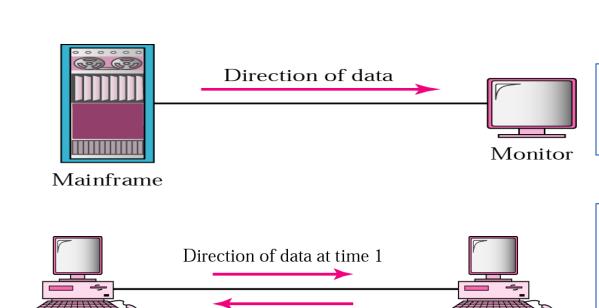


Simplex Mode

• Example: Keyboard and traditional monitors.

Half-Duplex Mode

- each station can both transmit and receive, but not at the same time.
- Example: Walkie- talkie

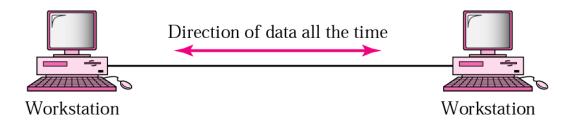

Direction of data at time 2

Full-Duplex Mode

• Example: Telephone Network there is communication between two persons by a telephone line, through which both can talk and listen at the same time.



Workstation

Transmission Medium

- For any networking to be effective, raw stream of data is to be transmitted from one device to other over some medium.
- Various transmission media can be used for transfer of data.

Types of Transmission Medium

Guided

- Transmitted data travels through cabling system that has a fixed path.
- For example, copper wires, fibre optic wires, etc.

Unguided

- Transmitted data travels through free space in form of electromagnetic signal.
- For example, radio waves, lasers, etc



Twisted Pair (maximum length of 100 meters)


- Most common wires used for transmitting signals
- To reduce this electromagnetic interference, pair of copper wires are twisted together.
- Shielding twisted pair cable
 - To counter the tendency of twisted pair cables to pick up noise signals, wires are shielded.
 - Such twisted pairs are called shielded twisted pair (STP) cables.
- The wires that are not shielded but simply bundled together in a protective sheath are called **unshielded twisted pair (UTP) cables**.





Coaxial Cable


- Coaxial cables are widely used for cable TV connections and LANs.
- Coaxial cables are copper cables with better shielding than twisted pair cables.
- Transmitted signals may travel **longer distances** at higher speeds.
 - e.g. 1 to 2 Gbps for 1 Km cable
- Can be used for both analog and digital signals
- Inexpensive as compared to fiber optic cables
- Easy to install and maintain

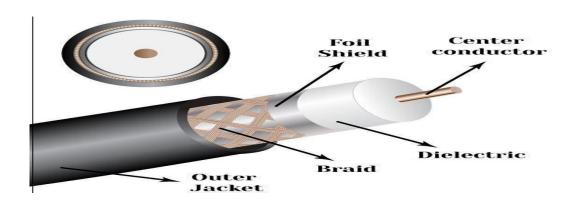



Optical Fiber

- Thin glass or plastic threads used to transmit data <u>using light waves</u> are called **optical fiber**.
- Signals carrying data can travel long distances without weakening
- Immune to electromagnetic interference, Suitable for industrial and noisy areas
- Three Layers:
 - Core made of high quality silica glass or plastic
 - Cladding made of high quality silica glass or plastic, with a lower refractive index than the core
 - Protective outer covering called buffer






Switching



Switching


- In large networks, there can be multiple paths from sender to receiver.
- The switching technique will decide the best route for data transmission.
- Switching technique is used to connect the systems for making one-to-one communication.
- The mechanism for exchange of information between different computer networks and network segments is called switching in Networking.

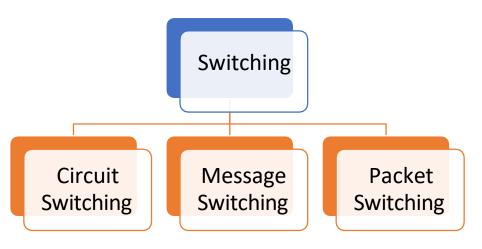



Circuit Switching


- Establishes a dedicated path between sender and receiver.
- once the connection is established then the dedicated path will remain to exist until the connection is terminated.
- Operates in a similar way as the telephone works.
- when any user wants to send the data a request signal is sent to the receiver then the receiver sends back the acknowledgment to ensure the availability of the dedicated path. After receiving the acknowledgment, dedicated path transfers the data.
- Three Phases:
 - Circuit Establishment
 - Data Transfer
 - Circuit Disconnect

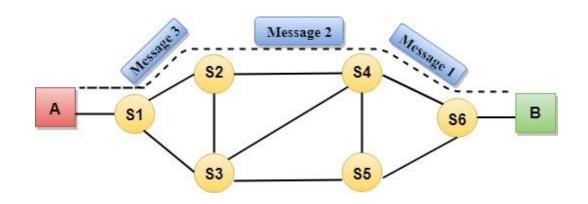



Message Switching


- There is no establishment of a dedicated path between the sender and receiver.
- The destination address is appended to the message.
- provides a dynamic routing as the message is routed through the intermediate nodes based on the information available in the message.
- they can provide the most efficient routes.
- Uses a method of store and forward network

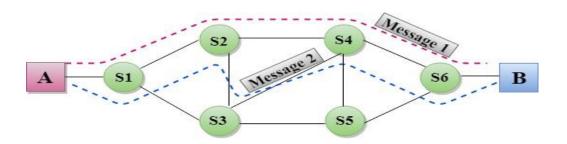



Packet Switching

- Message is divided in packets, packets are given a unique number to identify their order at the receiving end.
- Every packet contains some information in its headers such as source address, destination address and sequence number.
- Packets will travel across the network, taking the shortest path as possible.
- All the packets are reassembled at the receiving end in correct order.
- If any packet is missing or corrupted, then the message will be sent to resend the message.
- If the correct order of the packets is reached, then the acknowledgment message will be sent

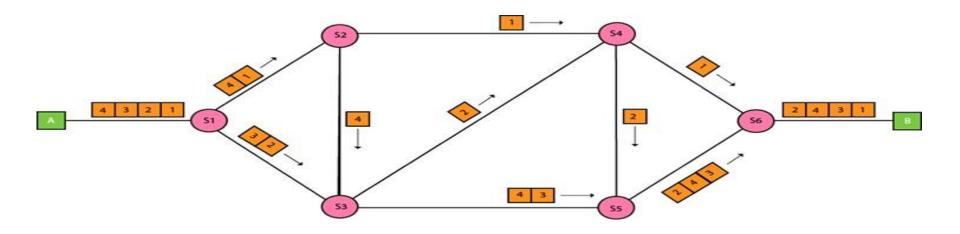



Network Classification




Network Classification

Interprocessor distance	Processors located in same	Example	
1 m	Square meter	Personal area network	
10 m	Room]]	
100 m	Building	Local area network	
1 km	Campus]]	
10 km	City	Metropolitan area network	
100 km	Country]]	
1000 km	Continent	> Wide area network	
10,000 km	Planet	The Internet	



LAN (Local Area Network): Wired Network

- Network in small geographical Area (Room, Building or a Campus)
- Short distances (100 meters)
- Designed to provide local interconnectivity
- LAN's can either be made wired or wireless. Twisted pair, coax or fiber optic cable can be used in wired LAN's
- a network that is used for communicating among computer devices, usually within an office building or home.

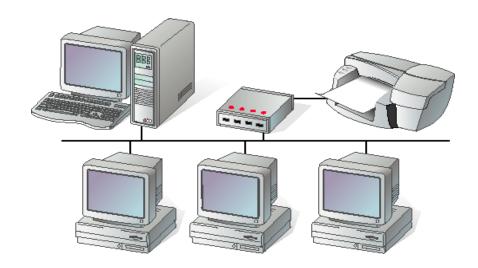



Wired Network Designing

Token Ring (Not used)

- Its copy write by IBM.
- It is a data link technology for local area networks (LANs) in which devices are connected in a star or ring topology.
- It was designed by only IBM PCs with 4mbps they increased upto 16mbps.

Ethernet (Used World wide /Now a days)

- It belongs to IEEE
- Its autonomous
 - 10mbps (Ethernet),
 - 100mbps (fast Ethernet)
 - 1Gbps (Gigabit Ethernet)
 - 10gbps (10 gig Ethernet)
 - 100gbps (100 gig Ethernet)
 - LRE (Long Range Ethernet)



Token Ring


- The token ring LAN process is delineated by the following sequence of events:
 - A token continually circulates inside the toke ring LAN
 - To transmit a message, a node inserts a message and destination address inside an empty token.
 - The token is examined by each successive node. The destination node copies the message data and returns the token to the source with the source address and a data receipt message.
 - The source receives the returned token, verifies copied and received data and empties the token.
 - The empty token now changes to circulation mode, and the process continues.

Listen Mode

• The input bits are simply copied to output with a delay of 1bit time.

Transmit Mode

• The connection between input and output is broken by the interface so that is can insert its own data

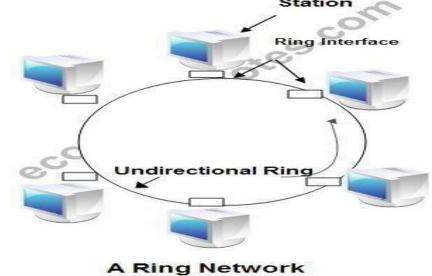



Ethernet Transfer speed 10 Mbps, 100 Mbps, or above

- Ethernet is the dominant cabling and low level data delivery technology used in Local Area Networks (LAN's).
- It was developed by Xerox corp. along with DEC and Intel.

Features:

- 1. Ethernet Addresses are 6 bytes(48 bits) long.
- 2. Ethernet supports networks built with twisted pair, thin and thick coaxial and fiber optic cabling.
- 3. To prevent the loss of data, when two or more devices attempt to send packets at the same time, Ethernet detects collisions.



Ethernet Address/ MAC Address

Example: 47:20:1B:2E:08:EE

- •First three bytes from <u>left</u> specify the vendor.
- •the last 24 bit should be created uniquely by the company

Cisco	00-00-0C
Dell	20-47-47
Sun	08-00-20
IBM	08-00-5A
Nokia	00-40-43



Ipconfig/all: Ethernet adapter Ethernet(Physical Address)

A network interface card (NIC) / Ethernet Card is a piece of computer hardware designed to allow computers to communicate over a computer network.



Ethernet Frame Format/MAC Frame


Preamble	SFD	Destination MAC	Source MAC	Type	Data and Pad	FCS
7 Bytes	1 Byte	6 Bytes	6 Bytes	2 Bytes	46-1500 Bytes	4 Bytes

Preamble	• informs the receiving system that a frame is starting and enables synchronization. In IEEE 802.3, eighth byte is start of frame (10101011)	
SFD (Start Frame Delimiter)	signifies that the Destination MAC Address field begins with the next byte.	
Destination MAC	identifies the receiving system.	
Source MAC	• identifies the sending system.	
Туре	• defines the type of protocol inside the frame, for example IPv4 or IPv6.	
Data and Pad	 contains the payload data. Padding data is added to meet the minimum length requirement for this field (46 bytes). 	
FCS (Frame Check Sequence)	• contains a 32-bit Cyclic Redundancy Check (CRC) which allows detection of corrupted data.	



MAN


- A MAN spans the distance of a typical metropolitan city.
- The cost of installation and operation is higher.
- MANs use high-speed connections such as fiber optics to achieve higher speeds.
- Provide connectivity over areas such as a city, a campus
- More than 100m, Designed to handle data communication for multiple organizations in a city and nearby cities as well
- e.g. cable television network

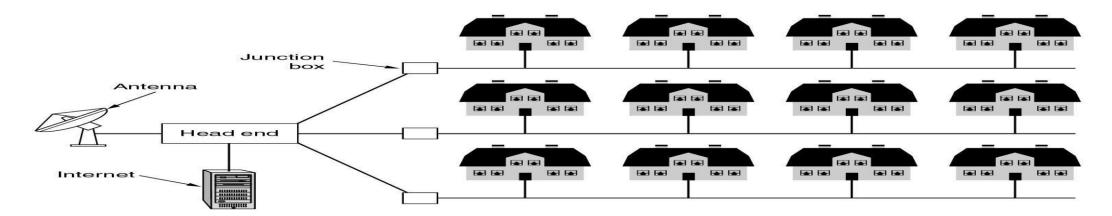



WAN

- Network spread geographically (Country or across Globe)
- WANs consist of two distinct components:
 - transmission lines (copper, fiber, microwave) and switches (electronics, optics)
 - Store-and-forward or packet-switched subnet
- WANs span a larger area than a single city.
- These use long distance telecommunication networks for connection, thereby increasing the cost.
- The Internet is a good example of a WAN.
- More than 1000m long distance, Provide connectivity over large areas

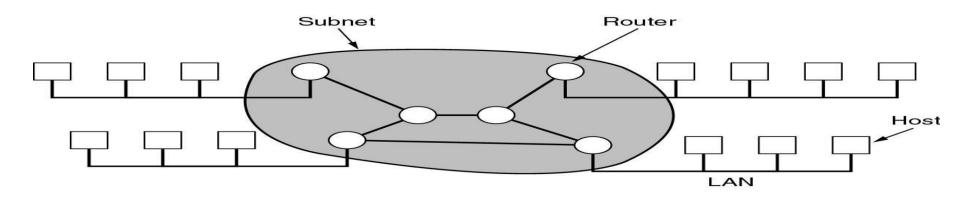



Address Resolution Protocol (ARP)



ARP

- Address resolution refers to the process of finding an address of a computer in a network.
- The address is "resolved" using a protocol in which a piece of information is sent by a client process executing on the local computer to a server process executing on a remote computer.
- The address resolution procedure is completed when the client receives a response from the server containing the required address.
- The job of the ARP is essentially to translate 32-bit addresses to 48-bit addresses and vice-versa



Network Physical Structure



Physical Structure

Type of Connection


- Point to Point single transmitter and receiver
- Multipoint multiple recipients of single transmission


Physical Topology

- Connection of devices
- Refers to the way in which a network is laid out physically
- The geometric representation of the relationship of all the links and linking devices (usually called nodes) to one another.
- Type of transmission unicast, mulitcast, broadcast



Types of Connection




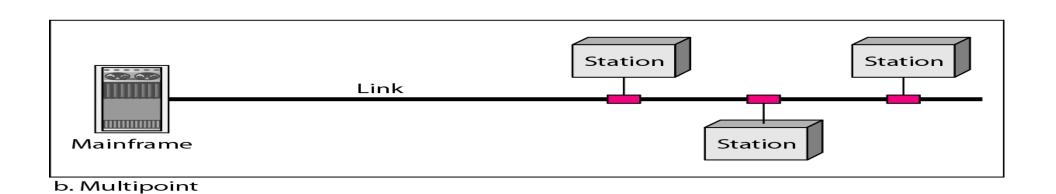




Physical Topology

- Topology defines the way hosts are connected to the network
- The network topology defines the way in which computers, printers, and other devices are connected.
- A network topology describes the layout of the wire and devices as well as the paths used by data transmissions.

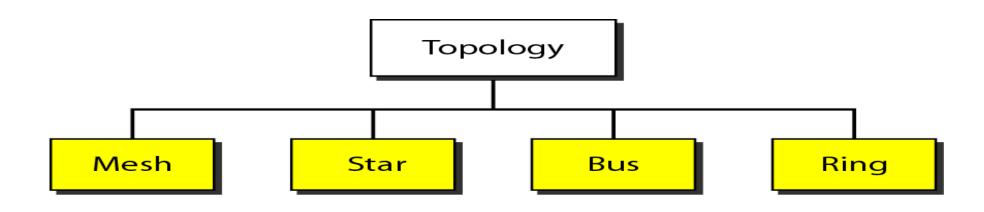



Network Topology

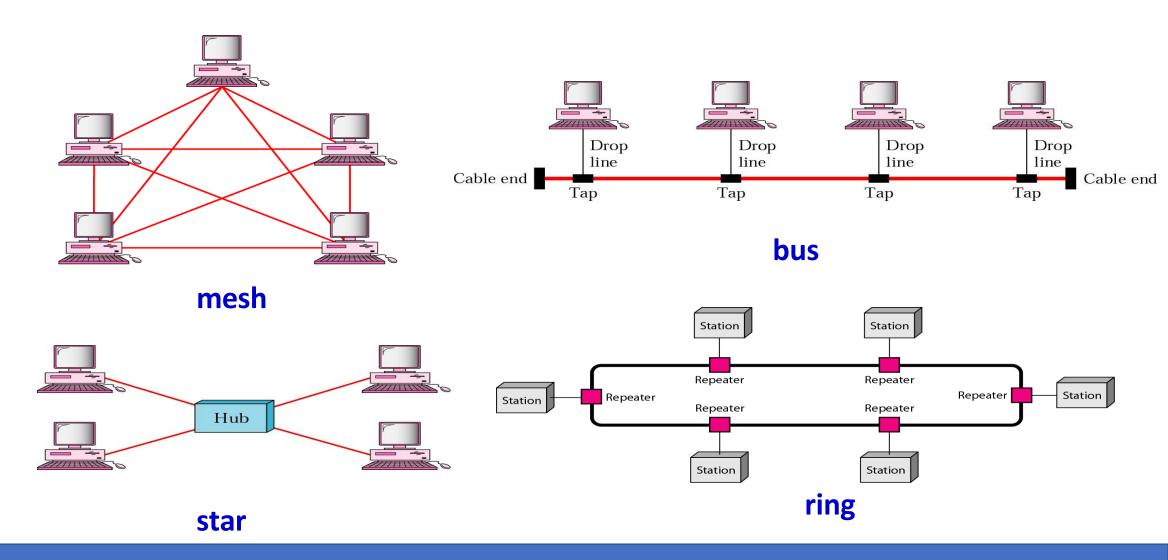



Network Devices / Internetworking Devices



Internetworking Devices

- Internetworking devices are products used to connect networks.
- As computer networks grow in size and complexity, so the internetworking devices used to connect them.
 - Hubs
 - Repeaters
 - Bridges
 - Switches
 - Routers
 - Gateways



Hubs

- Hub is used to build a LAN.
- Common connection point for devices in a network.
- It is non intelligent device.
- It does not understand the addressing.
- Hub is Multiport repeater containing multiple ports to interconnect multiple devices
- Hubs regenerate and retime network signals (increases traffic and collision)
- They cannot filter network traffic and they cannot determine best path
- The hub contains multiple ports.
- When a packet arrives at one port, it is copied to the other ports so that all segments of the LAN can see all packets.
 - does not concern about the address
 - concerns with only electrical signals
 - increases the traffic, as they broadcast data to all
 - increases the collision



Repeaters


- Repeaters or hubs work at the OSI physical layer to regenerate the network's signal and resend them to other segments.
- Its job is to regenerate the signal over the same network before the signal becomes too weak or corrupted so as to extend the length to which the signal can be transmitted over the same network.
- The longer the cable length, the weaker and more deteriorated the signals become as they pass along the networking media.
- Repeaters can be installed along the way to ensure that data packets reach destination.

One way to solve the problems of too much traffic on a network and too many collisions is to use an internetworking device called a bridge.



Bridges: Operates at Data Link Layer

- A bridge eliminates unnecessary traffic and minimizes the chances of collisions occurring on a network by dividing it into segments.
- Device that connects and passes packets between two network segments.
- More intelligent than hub- As they analyze incoming packets and forwards (or drops) based on addressing information.(Routing Table is Build to record segment number of address)
- Bridges work best where traffic from one segment of a network to other segments is not too great.

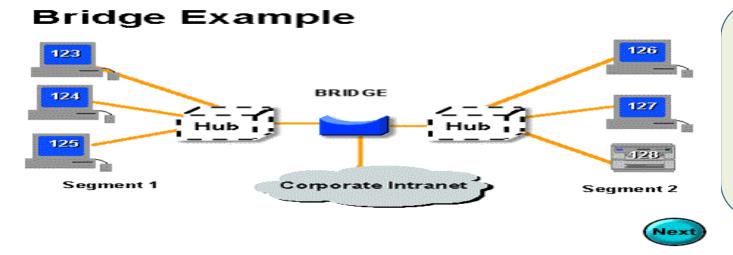

However, when traffic between network segments becomes too heavy, the bridge can become a bottleneck and actually slow down communication.



Switches (Multiport Bridges)

- Switches operate at the Data Link layer (layer 2) of the OSI model
- A switch is a device that is used to segment networks into sub networks called subnets. (Used to build LAN)
- Can interpret address information
- Uses Addressing Scheme knows as MAC Addressing.
- Switches are capable of inspecting data packets as they are received, determining the source and destination device of that packet, and forwarding it appropriately

- Switches have
 - ASIC (Application Specific IC)
 - OS is hardcoded in microprocessor
 - •So switches are hardware based.
 - Ports are unlimited

- Bridges have
 - OS is separated
 - So bridges are not used
 - Bridges are software based.
 - Limited Ports (16)



Routers

- Used to build WAN
- Router connect multiple networks and route the packets.
- Uses IP Address to identify every machine uniquely.
- Routers are used to connect two or more networks. For routing to be successful, each network must have a unique network number
- Routers have the ability to make intelligent decisions as to the best path for delivery of data on the network.
- They use the "logical address" of packets and routing tables to determine the best path.



Gateways

- Device that connects dissimilar networks.
- Operates at the highest level of

abstraction.

Expands the functionality of routers by conversion.

performing data translation and protocol

- Establishes an intelligent connection between a local network and external networks with completely different structures.
- Gateways serve as an entry and exit point for a network as all data must pass through or communicate with the gateway prior to being routed.
- If a network wants to communicate with devices, nodes or networks outside of that boundary, they require the functionality of a gateway.
- A gateway is often characterized as being the combination of a <u>router</u> and a <u>modem</u>.



Thank You

