Monocular Vision Localization Technology for UAVs

Mingche Li


(Adlai E. Stevenson High School, Grade 11)

Abstract:

To address the UAS4STEM 2024 competition challenge (where a drone must identify a QR code on a 4'x4' target in the air and pick up/drop off an item), a system was designed using monocular camera-based QR recognition and vision-based localization technology. By using a pre-trained QR recognition model, the QR code's pixel position on the image plane is detected, and a series of coordinate transformations using camera intrinsic parameters, and drone flight data (altitude, attitude angles, GPS), we can ultimately calculate the QR code's GPS coordinates.

1. System Structure:

The system mainly consists of a flight control system, a Raspberry Pi, and an OAK AI smart camera. The flight control system provides real-time altitude, attitude angles, and GPS information about the UAV. The OAK smart camera handles QR code recognition and provides the QR code's pixel coordinates. The Raspberry Pi uses the data to calculate the QR code's location. See the schematic below:

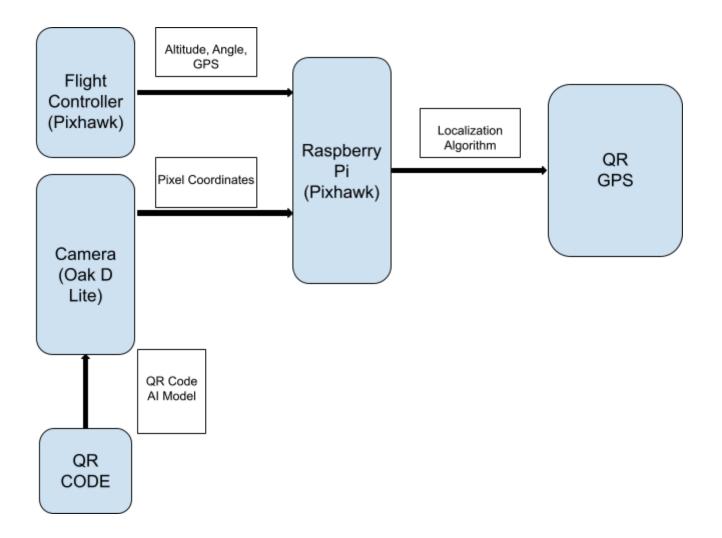


2. Localization Algorithm:

2.1 Coordinate System Definitions:


• 2.1.1 Pixel Coordinate System:

A 2D coordinate system with the image's top-left corner as the origin.

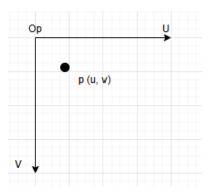


• 2.1.2 Camera Coordinate System:

A 3D coordinate system with the camera's focal point as the origin, and the optical axis as the Z-axis, conforming to a right-handed coordinate system.

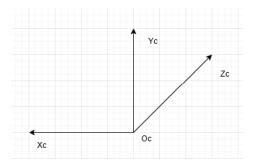


• 2.1.3 World Coordinate System:

This auxiliary system is located on the ground plane. The Y-axis is vertical, passing through the origin of the camera coordinate system, and the height between origins is the camera's altitude h.

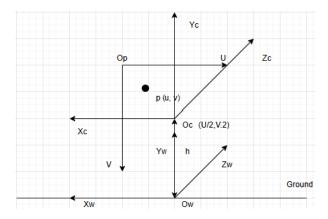

• 2.1.4 UAV Coordinate System:


A 3D coordinate system with its origin at the center of the UAV (assuming the flight controller's sensors are installed at the center of the UAV), conforms to a right-handed coordinate system.

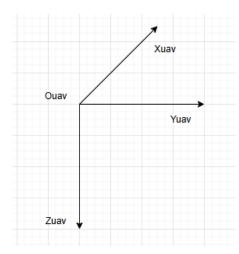

• 2.1.5 NED Coordinate System:


Origin is based on the center of the UAV. The axes are defined as follows:

- The axis parallel to the north-south direction is the N-axis (with the north as the positive direction)
- The axis parallel to the east-west direction is the E-axis (with the east as the positive direction)
- The axis parallel to the north-south direction is the N-axis (with the north as the positive direction)

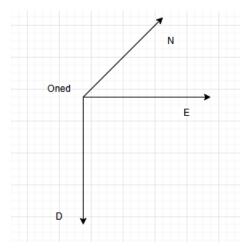


• 2.1.6 Earth-Centered, Earth-Fixed (ECEF) Coordinate System:

ECEF. Refer to Reference 10 for details.

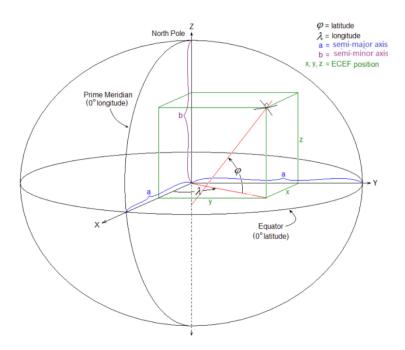

• 2.1.7 GPS Coordinate System:

Based on the WGS84 reference system. Refer to Reference 9 for details.

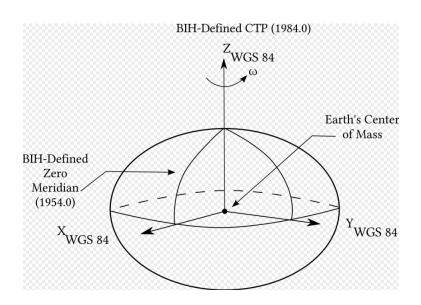

2.2 Coordinate Transformation and Position Calculation:

First, we need to integrate the coordinate axis rotation function (reference 1):

#Rotation around the coordinate axis, counterclockwise is positive, clockwise is negative

```
def rotate_axis_x(alpha):
    rot = np.array([[1, 0, 0], [0, np.cos(alpha), np.sin(alpha)], [0, -np.sin(alpha), np.cos(alpha)]])
    return rot

def rotate_axis_y(beta):
    rot = np.array([[np.cos(beta), 0, -np.sin(beta)], [0, 1, 0], [0, np.sin(beta), np.cos(beta)]])
    return rot

def rotate_axis_z(gamma):
    rot = np.array([[np.cos(gamma), np.sin(gamma), 0], [-np.sin(gamma), np.cos(gamma), 0], [0, 0, 1]])
    return rot
```

• 2.2.1 Pixel to Camera Coordinate Conversion:

On the 2D pixel coordinates, the point Oc lays on (U/2, V/2) according to the pinhole camera model(Refer to Reference 2, 3, 4)


```
x_c = -(u-u0)*dx/focalL

y_c = -(v-v0)*dy/focalL


z_c = 1
```

Where:

- o (u,v): Pixel coordinates of point P
- \circ u₀,v₀: Camera origin in the pixel plane
- o dx, dy: Pixel dimensions
- o focalL: focal length

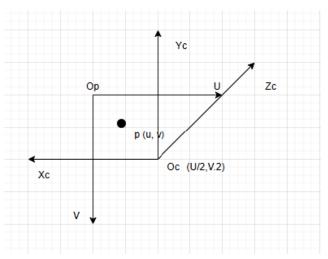

When the camera is installed, the optical axis (Z_c) faces downwards, as described in this picture:

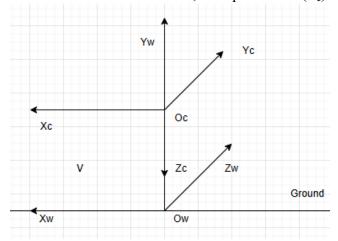

The camera height from the ground is h. In order to convert camera coordinates into world coordinates, we have to rotate -90° clockwise about X_c and translate by h. If the UAV has a pitch (pitch) and roll (roll) angle, then we need to rotate clockwise about Y_c by roll and rotate clockwise about X_c by 90-pitch.

```
let alpha = -(90-pitch), beta = -roll
```

```
R_x = rotate_axis_x(np.deg2rad(-(90-pitch)))
R_y = rotate_axis_y(np.deg2rad(-roll))

R = R_x @ R_y
camera_coords = np.array([x_c, y_c, z_c])

rotated_coords = R @ camera_coords
x_prime_c = rotated_coords[0]
y_prime_c = rotated_coords[1]
z_prime_c = rotated_coords[2]
```

Since O_cO_w =h, y_prime_c=-h, and scaling is defined as scale= -h/y_prime_c. thus the world coordinates of point P are:

```
xw = x_prime_c * scale
yw = 0
zw = z_prime_c * scale

To calculate the original camera coordinates:
    x_prime_c *= scale
    z_prime_c *= scale
    y_prime_c = -h
    original_camera_coords = np.linalg.inv(R) @ np.array([x_prime_c, -h, z_prime_c])
```


• 2.2.2 Camera to UAV Coordinate Conversion:

As shown in the diagram, the relationship between the camera and the UAV involves:

- $\circ~$ A counterclockwise rotation of 90 $\circ~$ around the Z_c axis.
- A translation by offset T.

Thus:

uav_pos = rotate_axis_z(np.deg2rad(90)) @ camera_pos + T

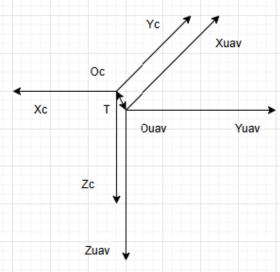

• 2.2.3 UAV to NED Conversion:

Transformation depends on attitude angles (Reference 5):

1. Define rotation matrices:

- 2. From NED to UAV:
 - Rotate by $yaw(R_z)$, then $pitch(R_v)$, and finally $roll(R_x)$:

$$R_{NED2UAV} = Rz(yaw) - Ry(pitch) - Rx(roll)$$

 $R_{NED2UAV} = r_x @ r_y @ r_z$

• 2.2.4 NED to GPS Conversion:

Using known UAV GPS coordinates, we can convert them into ECEF coordinates.

$$X = (N+h)\cos\varphi\cos\lambda$$

$$Y = (N+h)\cos\varphi\sin\lambda$$

$$Z = (\frac{b^2}{a^2}N+h)\sin\varphi$$

Where

WGS84 Parameters

$$a = 6378137$$

$$b = a (1 - f)$$

$$= 6356752.31424518$$

$$f = \frac{1}{298.257223563}$$

$$e = \sqrt{\frac{a^2 - b^2}{a^2}}$$

$$e' = \sqrt{\frac{a^2 - b^2}{b^2}}$$

$$\varphi$$
 = latitude

$$\lambda = longitude$$

h = height above ellipsoid (meters)

N = Radius of Curvature (meters), defined as:

$$= \frac{a}{\sqrt{1 - e^2 \sin^2 \varphi}}$$

Due to:

$$\mathbf{p}_{\mathrm{NED}} = R(\mathbf{p}_{\mathrm{ECEF}} - \mathbf{p}_{\mathrm{Ref}})$$

Where P_{NED} and P_{Ref} are calculated by the previous steps, rotational matrix R will be defined as:

$$R = \begin{bmatrix} -\sin(\phi)\cos(\lambda) & -\sin(\phi)\sin(\lambda) & \cos(\phi) \\ \sin(\lambda) & \cos(\lambda) & 0 \\ -\cos(\phi)\cos(\lambda) & -\cos(\phi)\sin(\lambda) & -\sin(\phi) \end{bmatrix}$$

To convert the ECEF coordinates of P_{ECEF} back to GPS coordinates, we can use the following formulas:

$$\lambda = \arctan \frac{Y}{X}$$

$$\varphi = \arctan \frac{Z + e'^2 b \sin^3 \theta}{p - e^2 a \cos^3 \theta}$$

$$h = \frac{p}{\cos \varphi} - N$$

Where

$$p = \sqrt{X^2 + Y^2}$$

$$\theta = \arctan \frac{Za}{pb}$$


Finally, the process of converting pixel coordinates into GPS coordinates is complete.

3. Experimental Design:

The experiment is divided into two phases:

• 3.1 Indoor Testing (Pixel to NED):

The experimental procedure is described as follows: first, attach the camera to a stand with a connector of the length T. The connector must be able to freely rotate at the stand's top, simulating the UAV's attitude angles (excluding yaw). Additionally, the stand has to be perpendicular to the surface you are testing with. Then, adjust the height of the stand to simulate various altitudes of the UAV. Through the use of the IMU within the OAK-D Lite Camera, we can use the attitude angles (excluding yaw), and calculate the NED coordinates of the QR code's center. Finally, record the calculated GPS coordinates at each position.

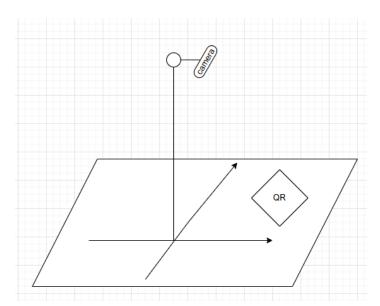

• 3.2 Outdoor Testing (NED to GPS):

Install the camera on the UAV, and measure the camera's displacement T from the UAV's center of gravity. Place the QR code on the ground and fly the UAV at various altitudes and yaw angles. Record the calculated GPS coordinates at each position.

4. Testing and Error Analysis:

Pixel coordinates to NED coordinates testing:

The QR code is placed x=5cm and y=6cm away from the camera, results are shown in the table:

x(cm)	y(cm)	h(cm)	pitch(°)
5.306	6.459	26.7	0
5.283	6.164	28.8	0
5.212	6.238	29.7	0
5.325	6.244	30.7	0
5.368	6.248	33.1	0
5.116	6.625	35.3	6.07
4.852	6.303	34.7	2.35
5.154	6.742	30.8	-10.05
5.104	6.174	31.7	-3.63

System errors include installation errors, camera distortion, and sensor errors. Mitigations include experimental adjustments and algorithmic corrections.

References:

- 1. https://mathworld.wolfram.com/RotationMatrix.html
- 2. https://en.wikipedia.org/wiki/Pinhole camera model
- 3. https://en.wikipedia.org/wiki/Camera resectioning

Δ

https://github.com/luxonis/depthai-hardware/blob/master/DM9095_OAK-D-LITE_DepthAI_USB3C/Datasheet/OAK_-D-Lite_Datasheet.pdf

- 5. https://en.wikipedia.org/wiki/Euler angles
- 6. https://en.wikipedia.org/wiki/Earth radius#Radius of curvature
- 7. https://en.wikipedia.org/wiki/Geographic coordinate conversion#From geodetic to ECEF coordinates
- 8. https://en.wikipedia.org/wiki/Local_tangent_plane_coordinates#Local_north,_east,_down_(NED)_coordinates
- 9. https://en.wikipedia.org/wiki/World-Geodetic System#WGS-84
- 10. https://en.wikipedia.org/wiki/Earth-centered, Earth-fixed coordinate system
- 11. https://community.ptc.com/sejnu66972/attachments/sejnu66972/PTCMathcad/57177/2/Datum%20Transformations.pdf