CS202: COMPUTER ORGANIZATION

Chapter 6

Parallel Processors from Client to Cloud

Introduction

- Goal: replacing large inefficient processors with many smaller, efficient processors to get better performance per joule
 - Multiprocessors, cluster
 - Scalability, availability, power efficiency
- Task-level (process-level) parallelism
 - High throughput for independent jobs
- Parallel processing program
 - Single program run on multiple processors
- Multicore microprocessors
 - Chips with multiple processors (cores)
 - Shared Memory Processors (SMP)

Hardware and Software

- Challenge: hardware and software design that enables parallel processing programs, which can be efficiently executed (in performance and energy) when number of cores scales.
- Hardware
 - Serial: e.g., Pentium 4
 - Parallel: e.g., quad-core Xeon e5345
- Software
 - Sequential: e.g., matrix multiplication
 - Concurrent: e.g., operating system
- Sequential/concurrent software can run on serial/parallel hardware
- We use "parallel processing program" to mean either sequential or concurrent software running on parallel hardware

Parallel Programming

- It's hard to create parallel software
- Parallel programming needs to achieve significant performance improvement
 - Otherwise, just use a faster uniprocessor, since it's easier!
- Difficulties of parallel programming:
 - Partitioning
 - Coordination
 - Communications overhead

Amdahl's Law

- Sequential part can limit speedup
- Example: 100 processors, how to achieve 90× speedup?
 - 1 processor: $F_{\text{sequential}} + F_{\text{paralizable}} = 1(T_{\text{old}})$
 - 100 processors: $T_{new} = F_{sequential} + F_{parallelizable}/100$

$$\frac{1}{(1-F_{\text{parallelizable}})+F_{\text{parallelizable}}/100} = 90$$

- ightharpoonup igh
- sequential part should be no more than 0.1% of total task

Scaling Example

- Workload: sum of 10 scalars, sum of two 10 × 10 matrix
 - Assume the sum of 10 scalars cannot be paralleled
 - What is the speedup of 10 processors and 40 processors?
- Single processor: Time = $(10 + 100) \times t_{add}$
- 10 processors
 - Time = $10 \times t_{add} + 100/10 \times t_{add} = 20 \times t_{add}$
 - Speedup = 110/20 = 5.5 (5.5/10=55% of potential)
- 40 processors
 - Time = $10 \times t_{add} + 100/40 \times t_{add} = 12.5 \times t_{add}$
 - Speedup = 110/12.5 = 8.8(8.8/40 = 22% of potential)
- Assumes load can be balanced across processors

Scaling Example (cont.)

- What if matrix size is 20 × 20?
- Single processor: Time = $(10 + 400) \times t_{add}$
- 10 processors
 - Time = $10 \times t_{add} + 400/10 \times t_{add} = 50 \times t_{add}$
 - Speedup = 410/50 = 8.2 (8.2/10=82% of potential)
- 40 processors
 - Time = $10 \times t_{add} + 400/40 \times t_{add} = 20 \times t_{add}$
 - Speedup = 410/20 = 20.5 (20.5/40=51% of potential)
- Assuming load balanced

Strong vs Weak Scaling

Speedup:

No. of cores	ask 10 scaler 10*10 matrix	10 scaler 20*20 matrix
10	5.5 (55% of poter	tial) 8.2 (82% of potential)
40	8.8 (22% of poter	etial) 20.5 (51% of potential)

- Strong scaling: keep problem size fixed, time is reverse proportional to number of processors: T(N,P)=T(1,P)/N
- Weak scaling: constant time cost when problem size is proportional to number of processors: $T(N_1, P_1) = T(N_2, P_2)$
 - 10 processors (N₁), 10 × 10 matrix (P₁)
 - Time = $20 \times t_{add}$
 - 40 processors (N₂), 20 × 20 matrix (P₂)
 - Time = $10 \times t_{add} + 400/40 \times t_{add} = 20 \times t_{add}$
 - Constant performance in this example

Load Balancing

- In the above example
 - 40 processors are used to achieve 20.5 speedup
 - 40 processors are assumed to have balanced load (2.5% each)
- how about one processor with high load (5%)?
 - one processor takes 5%*400=20 adds, the others takes the rest 400-20=380 adds
 - Time = max(380t/39, 20t/1)+10t = 30t
 - speedup = 410t/30t = 14 smaller than 20.5
- how about one processor with higher load (12.5%)?

Parallel Processing

- The following techniques can enable parallel processing
 - SIMD, vector (section 6.3)
 - Multithreading (section 6.4)
 - SMPs and clusters (section 6.5)
 - GPUs (section 6.6)

SISD, MIMD, SPMD, SIMD and vector

- SISD: single instruction stream, single data stream
 - Uniprocessor, Intel Pentium 4
- MIMD : multiple instruction, multiple data
 - Multi-core processor, Intel Core i7
 - SPMD: single program, multiple data
 - Typical way to write program on a multi-core processor
 - One program run on multiple processors
 - Different processors execute on different sections of code

SIMD

- Operate on vectors of data
 - Provide data level parallelism
 - E.g., MMX (MultiMedia eXtension) and SSE (Streaming SIMD Extension) instructions in x86
 - Multiple data elements in 128-bit wide registers
- All processors execute the same instruction at the same time
 - Each with different data address, etc.
- Simplifies synchronization
- Reduced instruction control hardware
- Works best for highly data-parallel applications

Vector Processors

- Processor unit which is designed for vector operation, one implementation of SIMD
- Pipelined execution units, instead of multiple ALUs
- Stream data from/to vector registers to units
 - Data collected from memory into registers
 - Results stored from registers to memory
- Example: Vector extension to MIPS
 - 32 × 64-element registers (64-bit elements)
 - Vector instructions
 - 1v, sv: load/store vector
 - addv.d: add vectors of double
 - addvs.d: add scalar to each element of vector of double
- Significantly reduces instruction-fetch bandwidth

An example using vector instruction

	Calculate: $Y = a \times X + Y$ >X and Y are vectors of 64 double precision numbers >the starting addresses of X and Y.	loop:	mul.d l.d add.d s.d addiu addiu subu	\$f0,a(\$sp) \$t0,\$s0,#512 \$f2,0(\$s0) \$f2,\$f2,\$f0 \$f4,0(\$s1) \$f4,\$f4,\$f2 \$f4,0(\$s1) \$s0,\$s0,#8 \$s1,\$s1,#8 \$t1,\$t0,\$s0	:load scalar a :upper bound of what to load :load x(i) :a*x(i) :load y(i) :a*x(i) + y(i) :store into y(i) :increment index to x :increment index to y :compute bound
	are in \$s0 and \$s1		bne	\$t1,\$zero,loop	:check if done
			l.d	\$f0,a(\$sp)	:load scalar a
			V	\$v1,0(\$s0)	:load vector x
Code usin instructio	Code using vector		mulvs.d	' '' ''	:vector-scalar multiply
			lv 	\$v3,0(\$s1)	:load vector y
	ilistructions.		addv.d	\$v4,\$v2,\$v3	:add y to product
	-		SV	\$v4.0(\$s1)	:store the result


Multithreading

- A related concept to MIMD, allows multiple threads to share a single processor
 - Threads: a lightweight process, share single address space
- Fine-grain multithreading
 - Switch threads after each cycle
 - Interleave instruction execution
 - If one thread stalls, others are executed
- Coarse-grain multithreading
 - Only switch on long stall (e.g., L2-cache miss)
 - Simplifies hardware, but doesn't hide short stalls (eg, data hazards)

Simultaneous Multithreading (SMT)


- In multiple-issue dynamically scheduled processor
 - Schedule instructions from multiple threads
 - Instructions from independent threads execute when function units are available
 - Within threads, dependencies handled by scheduling and register renaming
- Example: Intel Pentium-4 HT (Hyper Threading)
 - Two threads: duplicated registers, shared function units and caches

Multithreading Example

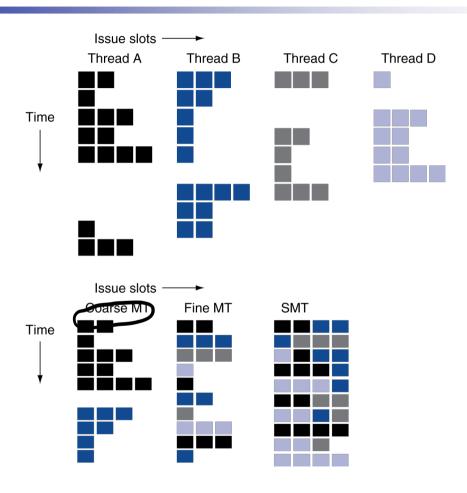


Shared Memory Multiprocessors

- Multithreading improves efficiency of one processor
- How to efficiently programming on multiprocessor?
 - Don't want to rewrite old programs in single processor
 - Share memory among multiple cores
- SMP: shared memory multiprocessor

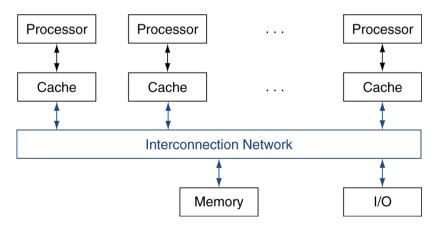

Message Parsing Multiprocessors

- Each processor has private physical address space
- Hardware sends/receives messages between processors

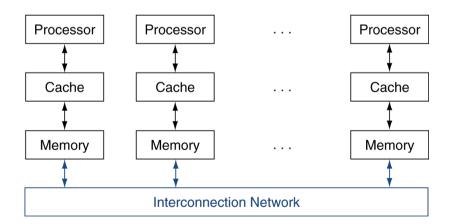

Loosely Coupled Clusters

- Network of independent computers
 - Each has private memory and OS
 - Connected using I/O system
 - E.g., Ethernet/switch, Internet
- Suitable for applications with independent tasks
 - Web servers, databases, simulations, ...
- High availability, scalable, affordable
- Problems
 - Administration cost (prefer virtual machines)
 - Low interconnect bandwidth
 - c.f. processor/memory bandwidth on an SMP

Cloud Computing and Data Center

- Cloud computing
 - Warehouse Scale Computers (WSC)
 - Software as a Service (SaaS)
 - Portion of software run on a PMD (personal mobile device) and a portion run in the Cloud
 - Amazon and Google
- Data centers
 - Millions of computers connected by off-the-shelf networking devices

Google Data Centers





Introduction of GPUs


- Development of GPU
 - General-purpose CPU not suitable for graphic processing
 - Game industry drive the improvement of graphic processing
 - GPU (graphic processing unit) appear and developed faster than general-purpose CPU, high performance, low cost
 - Easy-use programming language helps GPU's popularity
- Difference between GPU and CPU
 - GPU supplement CPU, doesn't replace it. GPU doesn't need to perform all tasks of CPU
 - GPU problem size is MB to GB, not hundreds of GB.

GPU Architectures

- Processing is highly data-parallel
 - GPUs are highly multithreaded, 16-32 threads
- GPU memory oriented towards bandwidth rather then latency
 - Graphics memory is wide and high-bandwidth
 - GPU memory is smaller than CPU. 4-6GB, instead of 256GB or above
 - Less reliance on multi-level caches
- Trend toward general purpose GPUs
 - Heterogeneous CPU/GPU systems
 - CPU for sequential code, GPU for parallel code
- Programming languages/APIs
 - DirectX, OpenGL
 - C for Graphics (Cg), High Level Shader Language (HLSL)
 - Compute Unified Device Architecture (CUDA)

Block Diagram of a SIMD processor in GPU

A GPU consists of multiple multi-thread SIMD processors

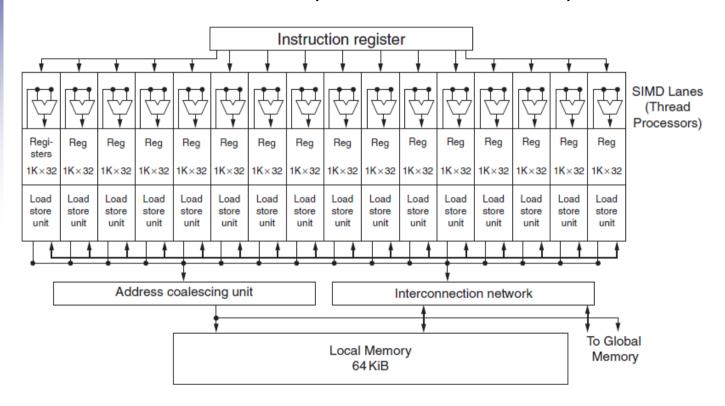

xPUs

- CPU: good for control, sequential programming
- GPU: good for graphics, parallel programming
 - CPU/GPU mixed architecture
- TPU: Tenser processing unit
 - Proposed by Google, targeting at acceleration for tenserflow platform
 - Suitable for machine learning model training and testing
- DPU: deep learning processing unit
 - Proposed by DeePhi Tech, FPGA-based processing unit
- NPU: neural network processing unit
 - IBM TrueNorth
- BPU: brain processing unit

Concluding Remarks

- Goal: higher performance by using multiple processors
- Difficulties
 - Developing parallel software
 - Devising appropriate architectures
- From multicore to data centre
- Performance per dollar and performance per Joule drive both mobile and WSC

Summary for this course


- Digital logic → computer organization → operating system/embedded system
- Main content:
 - Processor
 - Memory
 - Parallel
- Hardware thinking is important: resource tradoff

Innovative Projects


- localization, tracking and gesture recognition
 - Possible techniques: UWB, Bluetooth, WiFi, acoustic, millimet wave radar, 5G
 - Application scenarios: smart home, AR/VR, smart building, elderly care.
- Mobile system novel ideas in smartphone
 - Respiration detection
 - Indoor mapping detector
- UAV/robot sensing
- Security in smart sensing
- Every top conference paper worth a startup company!

Mobile application and smart home



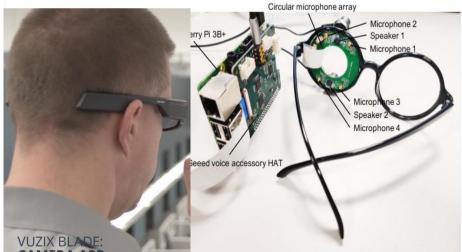



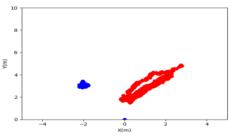



UAV/robot Sensing

