DigDes: Digital Design

$Naoki\ Pross-{\tt naoki.pross@ost.ch}$

Spring Semester 2021

Contents

1	Dev	velopment model	1
2	VH	SIC Hardware Description Language (VHDL)	1
	2.1	Basic syntax and identifiers	1
	2.2	Structure and Libraries	1
	2.3	Entities and Architectures	1
	2.4	Type system	1
		2.4.1 Electric types	1
		2.4.2 Arithmetic types	2
		2.4.3 Array type	2
		2.4.4 Custom enumeration types	2
		2.4.5 Physical types	2
		2.4.6 Reisizing vectors	3
		2.4.7 Type casting and conversion	3
	2.5	Declarations	3
	2.6	Concurrent Area	3
		2.6.1 Signal assignment and simple gates	3
		2.6.2 Aggregates	4
		2.6.3 Selective and conditional assignment	4
		2.6.4 Components	4
		2.6.5 Processes	4
	2.7	Pitfalls and RTL model	5
	2.8	Generic Parameters	5
	2.0	2.8.1 Generic entity and declaration	5
		2.8.2 Generic mapping (Concurrent Area)	5
		ziola delle mapping (contentione inten)	
3	Stat	te Machines	5
	3.1	Encoding the state	5
	3.2	Updating the state register (Z)	6
	3.3	Updating the state (G)	6
	3.4	Updating the output (F)	6
4	Test	ting	6
	4.1	Simulator	6
	4.2	Transport delay	6
	4.3	Generate stimuli	7
	4.4	Assertions	7

License

This work is licensed under a Creative Commons "Attribution-NonCommercial-ShareAlike 4.0 International" license.



1 Development model

The workflow for the development is show in figure 1. In the Gajski-Kuhn Y-model has 3 axis for the perspectives of the product. It is typical to start from the behavioral axis, by treating the systems as a black-box, and then to jump back and forth between the other axis while gravitating towards the origin (project goal).

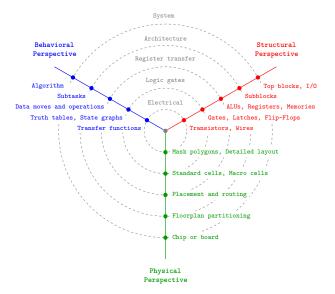


Figure 1: Gajski-Kuhn Y-chart.

2 VHSIC Hardware Description Language (VHDL)

2.1 Basic syntax and identifiers

In VHDL an identifier is a case insensitive string composed of A-Z a-z 0-9 $_$ that

- is not a keyword,
- does not start with a number or _,
- does not have two or more _ in a row.

Expressions are terminated by a semicolon;. Two dashes in a row cause the rest of the line to be interpreted as a comment.

```
1 expression; -- comment
```

2.2 Structure and Libraries

The VHDL code is organized into *libraries* declared with the <code>library</code> keyword. The library of your code is called work, standard features (bit, integer, ...) are found in std, and IEEE standard parts are in ieee. work and std are always implicit and must not be declared.

```
1 library \langle library name \rangle;
```

Once declared a library is composed of packages, which can contain elements (constants, entities, ...). To access the elements the syntax is

```
1 \langle library \rangle . \langle package \rangle . \langle element \rangle;
```

To avoid having to write a long name every time it is possible to import names using

```
1 use \langle library \rangle . \langle element or all \rangle;
2 use \langle library \rangle . \langle package \rangle . \langle element or all \rangle;
```

2.3 Entities and Architectures

In VHDL the concept of *entity* describes a black box of which only inputs and outputs are known. The internals of an entity are described through an *architecture*. There can be multiple architectures for a single entity.

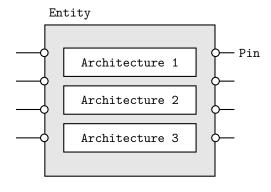


Figure 2: An entity is a black box, that can have multiple architectures.

Entities are declared with port() that may contain a list of pins. Pins have a mode that can be in input (only LHS¹), out output (only RHS²), inout bidirectional or buffer that can stay both on LHS and RHS. The usage of the latter is discourareged in favour of an internal signal.

Architectures are normally named after the design model, examples are behavioral, structural.

2.4 Type system

2.4.1 Electric types

VHDL provides some types such as

- boolean true or false,
- bit 0 or 1,

 $^{^1\}mathrm{Left}$ hand side

²Right hand side

- bit_vector one dimensional array of bits,
- integer 32-bit binary representation of a value.

From external (standard) libraries other types are available:

- std_logic advanced logic with 9 states,
- std_ulogic same as the previous but unresolved.

The above are from the ieee.std_logic_1164 library, and can take the values described in table 1. For the

Value	Meaning	Usage
U	Uninitialized	In the simulator
X	Undefined	Simulator sees a bus
		conflict
0	Force to 0	Low state of outputs
1	Force to 1	High state of outputs
Z	High Impedance	Three state ports
W	Weak Unknown	Simulator sees weak a
		bus conflict
L	Weak Low	Open source outputs
		with pull-down resistor
Н	Weak High	Open drain output with
		pull-up resistor
-	Don't care	Allow minimization

Table 1: Possible values for std_logic signals.

resolved types, i.e. std_logic types, when a signal is multiply driven the conflict is resolved according to table 2. Unresolved types will give a synthesization error. A good example is a tri-state bus:

```
1 architecture tristate of buscontrol is
2 begin
    bus_read: inp <= bus_io;</pre>
3
4
5
    bus_write: process(enable, oup)
6
     begin
7
       bus_io <= (others => 'Z');
       if enable = '1' then
8
9
         bus_io <= oup;</pre>
10
       end if;
11
    end process;
12 end architecture tristateout;
```

	U	X	0	1	Z	W	L	Н	-
U	U	U	U	U	U	U	U	U	U
X	U	X	X	X	X	X	X	X	X
0	U	X	0	X	0	0	0	0	X
1	U	X	X	1	1	1	1	1	X
Z	U	X	0	1	Z	W	L	Н	X
W	U	X	0	1	W	W	W	W	X
L	U	X	0	1	L	W	L	W	X
Η	U	X	0	1	Η	W	W	Н	X
_	U	X	X	X	X	X	X	X	X

Table 2: Resolution table when a std_logic signal is multiply driven.

2.4.2 Arithmetic types

For arithmetic operations two more types signed and unsigned (as well as their unresolved equivalents u_signed and u_unsigned) can be imported (together with many others for ex. natural) from the library ieee.numeric_std. Arithmetic types support the operations in table 3.

Syntax	Operator	Note
Symax	Operator	note
+	Addition	
-	Subtraction	
abs()	Absolute value	
*	Multiplication	
/	Division	Typically no
**	Power	Only powers of 2
mod	Modulo	Only modulo of 2^k
rem	Remainder	Only of division by 2^k
=	Equality	
/=	Inequality	
<, >	Lower, greater	
<=, >=	Lower, greater	Same the assignment
	or equal	operator, however it is
		always clear from con-
		text.

Table 3: Arithmetic operations from the numeric_std library.

2.4.3 Array type

Arrays types (fields) of other types can be define with the following.

```
1 type \langle name \rangle is array (\langle upper \ limit \rangle downto \langle lower \ limit \rangle) of \langle base \ type \rangle;
```

2.4.4 Custom enumeration types

It is possible to create custom types, usually to create state machines.

```
1 type \langle name \rangle is (\langle identifier \rangle, \langle identifier \rangle, ...);
```

2.4.5 Physical types

For variables that represent physical dimensions it is possible to create values with units with the following:

7 end units;

2.4.6 Reisizing vectors

VHDL has a function

that allow to reisze vector types. When resizing a vector of signed type to a higher number of bits the resize function cleverly fills the extra bits 1s or 0s to not mess up the two's complement. Toghether with the resize function an often used feature is the 'length attriubte, that returns the size (in bits) of the identifier.

```
1 y <= resize(a, y'length);</pre>
```

2.4.7 Type casting and conversion


When two signals have the same underlying type it is always possible to perform a *type cast* using the following syntax.

```
1 \langle destination \rangle = \langle type \ name \rangle (\langle source \rangle);
```

For example:

When the conversion is between signals with a different underlying type it is a (potentially lossy) type conversion. The syntax for a conversion is:

```
1 \langle destination \rangle = to_\langle type \ name \rangle(\langle source \rangle);
```

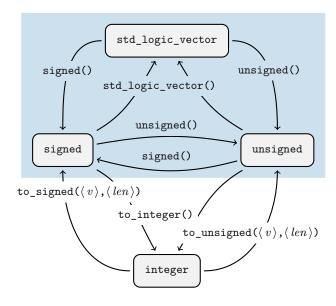

2.5 Declarations

Before a begin – end block, there is usually a list of declarations. A self evident examples are *constants*.

```
1 constant \langle name \rangle : \langle type \rangle := \langle value \rangle;
```

Next, *signals* and *variables*. Signals is are wires, they can only be connected and do not have an initial state. Variables can be assigned like in software, but can cause the synthesization of an unwanted D-Latch.

```
1 signal \langle name \rangle, [name, ...] : \langle type \rangle;
2
3 variable \langle name \rangle, [name], [...] : \langle type \rangle;
4 variable \langle name \rangle : \langle type \rangle := \langle expression \rangle;
```

For the hierarchical designs, when external entities are used, they must be declared as components. The port() expression must match the entity declaration.

```
1 component \( \langle entity name \rangle \) is
2    port(
3        [list of pins]
4    );
5 end component;
```

For entities with multiple architectures, it is possible to choose which architecture is used with the following expression.

```
1 for \langle label \ or \ all \rangle: use entity \langle library \rangle.

\hookrightarrow \langle entity \rangle (\langle architecture \rangle);
```

2.6 Concurrent Area

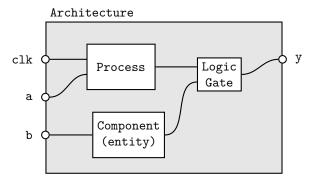


Figure 3: In the concurrent area statements are not interpreted sequentially.

In the architecture between begin and end, the expressions are *not* read sequentially, everything happens at the same time. Statements inside the concurrent area optionally have a label.

```
1 [label]: \langle concurrent \ statement \rangle;
```

In the concurrent area signals, components and processes can be used to create a logic.

2.6.1 Signal assignment and simple gates

Signals are assigned using <=.

```
1 [label]: \langle signal \rangle \leftarrow \langle expression \rangle;
```

Simple logic functions such as not, and, or, xor, etc. can be used.

```
1 y <= (a and s) or (b and not(s));</pre>
```

2.6.2 Aggregates

For vector types it is possible to create a value out of multiple signals.

```
1 \langle vector \rangle <= (
2 \langle index \rangle => \langle source or value \rangle,
3 \langle index \rangle => \langle source or value \rangle,
4 [others] => \langle source or value \rangle
5 );

1 -- declaration
2 signal data : bit_vector(6 downto 0);
3 signal a, b : bit;

1 -- concurrent
2 data = (1 => a, 0 => b, others => '0')
```

2.6.3 Selective and conditional assignment

Higher level conditions can be written in two ways.

```
1 -- using when
2 [label]: y <= \langle source \rangle when \langle condition \rangle else
3 \langle source \rangle when \langle condition \rangle;
4 \langle source \rangle when \langle condition \rangle;
5 \langle source \rangle when \langle value \rangle,
6 \langle source \rangle when \langle value \rangle,
7 \langle source \rangle when \langle value \rangle,
8 \langle source \rangle when \langle value \rangle,
9 \langle source \rangle when \rangle value \rangle,
9 \langle source \rangle \rangle \rangle \rangle \rangle \rangle \rangle \rangle \rangl
```

2.6.4 Components

External components that have been previously declared can be used with the port $map(\langle assignments \rangle)$ syntax. For example:

```
1 -- declaration
2 component flipflop is
    port(
      clk, set, rst : in std_ulogic,
               : out std_ulogic
6
   );
7 end component flipflop;
9 signal clk_int, a, b : in std_ulogic;
10 signal y, z
                : out std_ulogic;
1 -- concurrent
2 u1: component flipflop
   port map(
4
     clk => clk_int,
5
     set => a,
6
     rst => b,
      Q => y,
     Qn => z
    );
```

2.6.5 Processes

For more sophisticated logic VHDL offers a way of writing sequential statements called *process*.

```
1 [label]: process ([sensitivity list])
2 -- declarations
3 begin
4 -- sequential statements
5 end process;
```

Processes have a sensitivity list that can be empty. When a signal in the sensitivity list changes state, the process is executed. With an empty sensitivity list, the process runs continuously. In the declaration, everything from §2.5 applies. For the sequential statements, the following applies:

- Neither selective (with) nor conditional (when) should be used. They are replaced with new sequential constructs (if and case).
- Signal assignments (with <=) change their value only at the end of the process.
- Variables on the other hand change as soon as they are assigned (with :=).

And for good practice:

- Before any if or case default values should be assigned.
- Any signal on the RHS should be in the sensitivity list.
- Processes with empty sensitivity lists should only be used for simulations.

The sequential replacements for with and when are in the listings below.


```
1 if \langle condition \rangle then
   -- sequential statements
3 elsif \langle condition \rangle then
4 -- sequential statements
5 else
6 -- sequential statements
7 end if;
1 case \langle expression \rangle is
    when \langle choice \rangle =>
     -- sequential statements
3
    when \langle choice \rangle =>
     -- sequential statements
    when others =>
7
     -- sequential statements
8 end case;
```

Processes can detect *attributes* of signals. Typically it is used for clocks. There are also other attributes such as s'stable(t).

```
1 process (clk)
2 begin
    -- rising edge
    if clk'event and clk = '1' then
      ... end if;
    if rising_edge(clk) then
7
      ... end if;
8
    -- falling edge
9
10
   if clk'event and clk = '0' then
11
     ... end if;
12
   if falling_edge(clk) then
1.3
    ... end if;
14 end process;
```

2.7 Pitfalls and RTL model

Coming from a programming language, a common pitfall is to write something like



but this will be synthesised into an oscillating circuit, that must be avoided at all costs. The correct way is to have a memory for the next state, with a logic separated into combinatorial and sequential parts.

```
1 -- combinatorial
2 y_next <= y xor a;
3 -- sequential
4 process (clk)
5 begin
6   if rising_edge(clk) then
7   y <= y_next;
8   end if;
9 end process;</pre>
```

This method is known as register transfer level design.

2.8 Generic Parameters

Sometimes a group of components have a very similar structure, so instead of rewriting multiple similar interfaces it is desirable to have *parameters* and a *generic* entity, for example in the case of a binary counter's range. To solve the problem using signals with conditional statements would generate unnecessary hardware, while constants cannot change the entity's port. Thus there is a syntax:

```
1 generic(
2    ⟨param name⟩ : ⟨type⟩ := ⟨initial value⟩;
3    [more parameters];
4    ⟨param name⟩ : ⟨type⟩ := ⟨initial value⟩
5 );
```

that has affects at synthesization time.

2.8.1 Generic entity and declaration

Entities are parametrized as follows.

```
1 entity (name) is
2 generic((parameters));
3 port((pins));
4 end entity (name);
```

For example:

And in the architecture it is possible to access generic values in a similary way. Another example is a clock divider.

2.8.2 Generic mapping (Concurrent Area)

To map a generic entity into a structural design the syntax is extended accordingly with generic map().

```
1 -- definition
2 component \langle generic \ entity \rangle is
      generic (\langle parameters \rangle);
4
      port (\langle pins \rangle);
5 end component;
1 [label]: component \( \langle generic component \rangle \)
       generic map(
          \langle parameter \rangle => \langle constant \ or \ parameter \rangle,
3
4
      );
      port map(
          \langle pin \rangle = \langle signal \ or \ pin \rangle,
8
      );
```

3 State Machines


3.1 Encoding the state


For Mealey and Moore machines it is typical to write:


The encoding of the state is left to the synthesizer or can be configured in the graphical interface of the tool. If a custom encoding is required (Medwedjew), adding the following generates a custom encoding.

```
1 attribute enum_encoding : string;
2 attribute enum_encoding of state_type:
3 type is "0001 0010 0100 ...";
```

Or an equivalent approach is to use a vector subtype and constants.

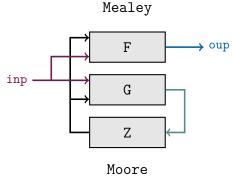

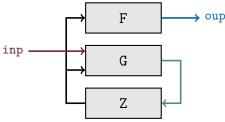

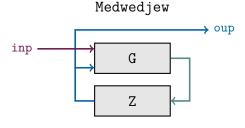

3.2 Updating the state register (Z)

```
1 register_logic: process (clk, rst)
2 begin
3  -- asynchronous reset
4  if rst = '1' then
5    present_state <= st_rst;
6
7  -- clock
8  elsif rising_edge(clk) then
9    present_state <= next_state;
10  end if;
11 end process;</pre>
```

3.3 Updating the state (G)

```
1 next_state_logic:
2 process (present_state, [inputs])
3 begin
     -- default value
4
5
     next_state <= state_rst;</pre>
6
7
     case present_state is
8
        when st_rst =>
9
          -- reset state logic
          next_state <= \langle state \rangle;
10
11
12
        when st_a =>
          -- logic using inputs
          next_state <= \langle state \rangle;
14
        . . .
```

```
17 when others => null;
18 end case;
19 end process;
```

3.4 Updating the output (F)

Mealey

```
1 output_logic:
2 process (present_state, \( \langle inputs \\))
3 begin
4 -- logic with state and inputs
5 \( \langle output \rangle \left \) \( \left \) end process;
```

Moore

```
1 output_logic: process (present_state)
2 begin
3   case present_state is
4   when st_rst =>
5      ⟨output⟩ <= ⟨value⟩;
6
7   ...
8   end case;
9 end process;</pre>
```

Medwedjew

```
1 output_logic: \langle \mathit{output} \rangle <= present_state;
```

4 Testing

To simulate a digial circuit it is possible to write test benches using VHDL. The code in this section may no longer be synthetisable, and is usually written by a *test designer*.

4.1 Simulator

VHDL simulates digital systems using delta cycles.

4.2 Transport delay

To model a time delay of a signal there are two ways:

```
1 y <= transport \langle expression \rangle after \langle time \rangle;
2 y <= inertial \langle expression \rangle after \langle time \rangle;</pre>
```

When transport is used, the output changes only exactly after the specified time, the simulator simply waits. With inertial, the output is also delayed, but only if the input lasts more than the specified time. This means that for example with a time of 10 ns a pulse of 5 ns will be ignored. This is much more typical and realistic, thus when unspecified, after is interpreted as inertial ... after.

```
1 y <= \(\left(\text{expression}\right)\) after \(\left(\text{time}\right)\);
```

4.3 Generate stimuli

Simple stimuli (signals) are generated using processes. For example a clock signal done in three ways:

```
1 -- declaration
2 constant f : integer := 1000;
3 constant T : time := 1 sec/f;
4 signal clk0, clk1, clk2 : std_ulogic;
1 -- concurrent
2 clock0: process
3 begin
4 clk <= '1'; wait for (T/2);</pre>
   clk <= '0'; wait for (T/2);
6 end process;
8 clock1: process
9 begin
10 clk1 <= '1';
11 loop
     wait for (T/2);
12
     clk1 <= not clk1;</pre>
13
14 end loop;
15 end process;
17 -- lazy way
18 clock2: clk2 <= not clk2 after (T/2);</pre>
```

One time stimuli can be modelled using the following expression. Note that the time is absolute.

```
1 tb_sig <= '0',
2 '1' after 20 ns,
3 '0' after 30 ns, -- 10 ns later
4 \( \forall value \right) after \langle time \right);</pre>
```

Repeating sequences can be created using processes.

```
1 sequence: process
2 begin
3    tb_sig <= '0';
4    wait for 20 ns;
5    tb_sig <= '1';
6    wait for 10 ns;
7    ...
8 end process;</pre>
```

For loops are also available, and can be synthesised if they run over a finite range.

```
1 [label]: for \langle parameter \rangle in \langle range \rangle loop
2 -- sequential statements
3 end loop [label];
A concrete example:
 1 -- declaration
2 constant n : integer := 3;
 3 signal a, b : std_ulogic_vector(n-1
       \hookrightarrow downto 0);
 1 -- sequential
 2 for i in 0 to 2**n -1 loop
     a <= std_ulogic_vector(
4
                to_unsigned(i, n));
    for k in 0 to 2**n -1 loop
 5
     b <= std_ulogic_vector(</pre>
 6
                   to_unsigned(k, n));
    end loop;
 9 end loop;
```

4.4 Assertions

Assertions are used write tests to check that a signal is in the correct state.

```
1 [label]: assert \langle condition \rangle report \langle string \rangle

\hookrightarrow severity \langle severity \rangle;
```

The report and severity are optional but strongly advised. The severity can take one of 4 values: note, warning, error, failure. Simulations can be configured to stop in when an error of the desired severity occurrs. An example: