

SD Specifications Part A2 SD Host Controller Simplified Specification

Version 2.00

February 8, 2007

Technical Committee SD Association

Revision History

Date	Version	Changes compared to previous issue	
April 3, 2004	1.00	The first release	
February 8, 2007	2.00	Support Advanced DMA2, Test Registers and 64-bit system bus. Apply changes in the Supplementary Notes Ver1.00 Draft. Some typos are fixed.	

Release of SD Simplified Specification

The following conditions apply to the release of the SD simplified specification ("Simplified Specification") by the SD Card Association. The Simplified Specification is a subset of the complete SD Specification which is owned by the SD Card Association.

Publisher:

SD Association 2400 Camino Ramon, Suite 375 San Ramon, CA 94583 USA Telephone: +1 (925) 275-6615 Fax: +1 (925) 886-4870

E-mail: office@sdcard.org

Copyright Holder:

The SD Card Association

Notes:

This Simplified Specification is provided on a non-confidential basis subject to the disclaimers below. Any implementation of the Simplified Specification may require a license from the SD Card Association or other third parties.

Disclaimers:

The information contained in the Simplified Specification is presented only as a standard specification for SD Cards and SD Host/Ancillary products and is provided "AS-IS" without any representations or warranties of any kind. No responsibility is assumed by the SD Card Association for any damages, any infringements of patents or other right of the SD Card Association or any third parties, which may result from its use. No license is granted by implication, estoppel or otherwise under any patent or other rights of the SD Card Association or any third party. Nothing herein shall be construed as an obligation by the SD Card Association to disclose or distribute any technical information, know-how or other confidential information to any third party.

Conventions Used in This Document

Naming Conventions

- Register names are shown in italic text such as *Present State*.
- Names of bits or fields within registers are in bold text such as **Buffer Write Enable**.
- Signal names are capitalized, bold and italic, followed by '#' if low active such as SDCD#.
- Some terms are capitalized to distinguish their definition from their common English meaning. Words not capitalized have their common English meaning.
- Register names and the names of fields and bits in registers and headers are presented with the first letter capitalized and the remainder in lower case.

Numbers and Number Bases

- Hexadecimal numbers are written with a lower case "h" suffix, e.g., FFFFh and 80h.
- Binary numbers are written with a lower case "b" suffix (e.g., 10b).
- Binary numbers larger than four digits are written with a space dividing each group of four digits, as in 1000 0101 0010b.
- All other numbers are decimal.

Key Words

- May: Indicates flexibility of choice with no implied recommendation or requirement.
- Shall: Indicates a mandatory requirement. Designers shall implement such mandatory requirements to ensure interchangeability and to claim conformance with the specification.
- Should: Indicates a strong recommendation but not a mandatory requirement. Designers should give strong consideration to such recommendations, but there is still a choice in implementation.

Special Terms

In this document, the following terms shall have special meaning:

• Host Controller Refers to an SD Host Controller that complies with this Specification.

Host Driver
 Card Driver
 Refers to the OS-specific driver for a Host Controller
 Refers to a driver for an SD/SDIO card or card function

• Host System (or System) Refers to the entire system, such as a cellular phone, containing the Host Controller

Implementation Notes

 Some sections of this document provide guidance to Host Controller or Host Driver implementers. To distinguish non-mandatory guidance from other parts of the SD Host Specification, it will be shown as follows:

Implementation Note: This is an example of an implementation note.

Table of Contents

1. Overview of the SD Standard Host	
1.1. Scope of the Standard SD Host	1
1.2. Register Map	2
1.3. Multiple Slot support	2
1.4. Supporting DMA	3
1.5. SD Command generation	3
1.6. Suspend and Resume mechanism	
1.7. Buffer Control	5 7
1.8. Relationship between Interrupt Control Registers	9
1.9. HW Block Diagram and timing part	11
1.10. Power state definition of SD Host Controller	12
1.11. Auto CMD12	13
1.12. Controlling SDCLK	14
1.13. Advanced DMA	15 16 16 17
1.14. Test Registers	19
2. SD Host Standard Register	20
2.1. Summary of register set	20 21 21
2.2. SD Host Standard Register 2.2.1. SDMA System Address Register (Offset 000h) 2.2.2. Block Size Register (Offset 004h) 2.2.3. Block Count Register (Offset 006h) 2.2.4. Argument Register (Offset 008h)	22 23 25 26
2.2.5. Transfer Mode Register (Offset 00Ch) 2.2.6. Command Register (Offset 00Eh) 2.2.7. Response Register (Offset 010h) 2.2.8. Buffer Data Port Register (Offset 020h). 2.2.9. Present State Register (Offset 024h). 2.2.10. Host Control Register (Offset 028h)	29 31 32 33

2.2.11. Power Control Register (Offset 029h)	
2.2.12. Block Gap Control Register (Offset 02Ah)	
2.2.13. Wakeup Control Register (Offset 02Bh)	
2.2.14. Clock Control Register (Offset 02Ch)	
2.2.15. Timeout Control Register (Offset 02Eh)	
2.2.16. Software Reset Register (Offset 02Fh)	
2.2.17. Normal Interrupt Status Register (Offset 030h)	
2.2.18. Error Interrupt Status Register (Offset 032h)	
2.2.19. Normal Interrupt Status Enable Register (Offset 034h)	
2.2.20. Error Interrupt Status Enable Register (Offset 036h)	
2.2.21. Normal Interrupt Signal Enable Register (Offset 038h)	
2.2.23. Auto CMD12 Error Status Register (Offset 03Ch)	
2.2.24. Capabilities Register (Offset 040h)	
2.2.25. Maximum Current Capabilities Register (Offset 048h)	
2.2.26. Slot Interrupt Status Register (Offset 0FCh)	
2.2.27. Host Controller Version Register (Offset 0FEh)	
2.2.28. Force Event Register for Error Interrupt Status (Offset 052h)	
2.2.29. Force Event Register for Auto CMD12 Error Status (Offset 050h)	
2.2.30. ADMA Error Status Register (Offset 054h)	
2.2.31. ADMA System Address Register (Offset 058h)	
3. SEQUENCE	
3.1. SD Card Detection	78
3.2. SD Clock Control	80
3.2.1. SD Clock Supply Sequence	
3.2.2. SD Clock Stop Sequence	
3.2.3. SD Clock Frequency Change Sequence	
3.3. SD Bus Power Control	82
3.4. Changing Bus Width	84
3.5. Timeout Setting on DAT Line	85
3.6. Card Initialization and Identification	86
3.7. SD Transaction Generation	90
3.7.1. Transaction Control without Data Transfer Using DAT Line	
3.7.1.1. The sequence to issue a SD Command	
3.7.1.2. The sequence to finalize a command	
3.7.2. Transaction Control with Data Transfer Using DAT Line	94
3.7.2.1. Not using DMA	
3.7.2.2. Using SDMA	97
3.7.2.3. Using ADMA	99
3.8. Abort Transaction	101
3.8.1. Asynchronous Abort	
3.8.2. Synchronous Abort	
3.9. Changing Bus Speed Mode Setting	
3.10. Error Recovery	
3.10.1. Error Interrupt Recovery	
3.10.2. Auto CMD12 Error Recovery	
3.11. Wakeup Control (Optional)	112

3.12. Suspend/Resume (Optional)	114
3.12.1. Suspend Sequence	
3.12.2. Resume Sequence	
3.12.3. Read transaction wait / continue timing	
G	
Appendix A : PCI Configuration Register	121
A.1 Register Maps	121
A.2 SD Controller Configuration Register MAP	122
A.3 PCI Configuration Register	123
A.3.1 Class Code Register (Offset 09h)	123
A.3.2 Base Address Register (Offset 10h)	
A.3.3 Slot Information Register (Offset 40h)	125
A.4 The relation between Device State, Power and Clock	126
A.5 Generate PME interrupt by the Wakeup Events	126
Appendix B	127
B.1 Related Documents	127
B.2 Abbreviations and terms	128
Appendix C	129
C.1 Advanced DMA1	129
C.2 Block Diagram of ADMA	129
C.3 An Example of ADMA1 Programming	130
C.4 Transfer Length Requirement	130
C.5 32-bit Address Descriptor Table	131
C.6 ADMA States	132
C.7 ADMA1 Control Registers	133

Table of Figures

Figure 1-1: Host Hardware and Driver Architecture	
Figure 1-2 : Classification of the Standard Register Map	2
Figure 1-3 : Register Map for Multiple Slots Controller	2
Figure 1-4 : Suspend and Resume mechanism	4
Figure 1-5 : Buffer size relation between the SD Host and the SD Card	7
Figure 1-6: Two cases to handle a transfer of data that cannot be divided by block size	
Figure 1-7 : Logical relation for interrupt registers	
Figure 1-8 : Block Diagram of Host Controller	
Figure 1-9 : Block Diagram of ADMA2	15
Figure 1-10 : An Example of ADMA2 Data Transfer	16
Figure 1-11 : 32-bit Address Descriptor Table	
Figure 1-12 : State Diagram of the ADMA2	18
Figure 2-1 : SDMA System Address Register	
Figure 2-2 : Block Size Register	
Figure 2-3 : Block Count Register	
Figure 2-4 : Argument Register	
Figure 2-5 : Transfer Mode Register	
Figure 2-6 : Command Register	
Figure 2-7 : Response Register	
Figure 2-8 : Buffer Data Port Register	
Figure 2-9 : Present State Register	
Figure 2-9 : Fresent State Register	
Figure 2-10 : Card Detect State	
Figure 2-11: Timing of Command Inhibit (DAT) and Command Inhibit (CMD) with data transfer Figure 2-12: Timing of Command Inhibit (DAT) for the case of response with busy	
Figure 2-13: Timing of Command Inhibit (CMD) for the case of no response command	
Figure 2-14: Host Control Register	
Figure 2-15 : Power Control Register	
Figure 2-16: Block Gap Control Register	
Figure 2-17: Wakeup Control Register	
Figure 2-18 : Clock Control Register	
Figure 2-19 : Timeout Control Register	
Figure 2-20 : Software Reset Register	
Figure 2-21: Normal Interrupt Status Register	
Figure 2-22: Error Interrupt Status Register	
Figure 2-23: Normal Interrupt Status Enable Register	
Figure 2-24: Error Interrupt Status Enable Register	
Figure 2-25 : Normal Interrupt Signal Enable Register	
Figure 2-26 : Error Interrupt Signal Enable Register	
Figure 2-27 : Auto CMD12 Error Status Register	
Figure 2-28 : Capabilities Register	
Figure 2-29 : Maximum Current Capabilities Register	
Figure 2-30 : Slot Interrupt Status Register	
Figure 2-31 : Host Controller Version Register	
Figure 2-32 : Force Event Register for Error Interrupt Status	
Figure 2-33 : Force Event Register for Auto CMD12 Error Status	
Figure 2-34 : ADMA Error Status Register	
Figure 2-35 : ADMA System Address Register	
Figure 3-1 : Double Box Notation	
Figure 3-2: SD Card Detect Sequence	78
Figure 3-3: SD Clock Supply Sequence	80
Figure 3-4: SD Clock Stop Sequence	81

SD Host Controller Simplified Specification Version 2.00

Figure 3-5: SD Clock Change Sequence	81
Figure 3-6: SD Bus Power Control Sequence	82
Figure 3-7: Change Bus Width Sequence	84
Figure 3-8: Timeout Setting Sequence	85
Figure 3-9 : Card Initialization and Identification	87
Figure 3-10: SD Command Issue Sequence	91
Figure 3-11: Command Complete Sequence	
Figure 3-12: Transaction Control with Data Transfer Using DAT Line Sequence (Not using DMA)	95
Figure 3-13: Transaction Control with Data Transfer Using DAT Line Sequence (Using SDMA)	97
Figure 3-14: Transaction Control with Data Transfer Using DAT Line Sequence (Using ADMA)	99
Figure 3-15: Asynchronous Abort Sequence	101
Figure 3-16: Synchronous Abort Sequence	102
Figure 3-17: High Speed Mode Setting for Combo Card	103
Figure 3-18: Error Report and Recovery	
Figure 3-19: Return Status of Auto CMD12 Error Recovery	106
Figure 3-20: Error Interrupt Recovery Sequence	108
Figure 3-21 : Auto CMD12 Error Recovery Sequence	110
Figure 3-22: Wakeup Control before Standby Mode	112
Figure 3-23: Wakeup from Standby	
Figure 3-24: The sequence for suspend	114
Figure 3-25 : The sequence for resume	116
Figure 3-26: Wait read transfer by Stop At Block Gap Request	117
Figure 3-27: Stop At Block Gap Request is not accepted at the last block of the read transfer	118
Figure 3-28 : Continue read transfer by Continue Request	118
Figure 3-29: Wait write transfer by Stop At Block Gap Request	119
Figure 3-30: Stop At Block Gap Request is not accepted at the last block of the write transfer	120
Figure 3-31 : Continue write transfer by Continue Request	
Figure A - 1: Register Set for PCI Device (Example for 2 slots)	121
Figure A - 2 : PCI Config. Class Code Register	123
Figure A - 3 : PCI Config. Base Address Register	124
Figure A - 4 : PCI Config. Slot Information Register	125
Figure A - 5 : Condition to generate PME Interrupt	
Figure C - 1 : Block Diagram of ADMA	129
Figure C - 2 : Example of ADMA Transfer	
Figure C - 3 : Definition of the 32-bit Descriptor Table for ADMA1	
Figure C - 4: State Diagram of the ADMA1	

Table of Tables

Table 1-1: Registers to Generate SD Command	3
Table 1-2: Relations Between Address and Byte Enable	5
Table 1-3 : Available Byte Enable Pattern for Buffer Data Port Register	6
Table 1-4: Interrupt Signal Table	. 10
Table 1-5: Wakeup Signal Table	. 10
Table 1-6 : Summary of Register Status for data transfer	11
Table 1-7: Power State Definition	
Table 1-8: Relation between Auto CMD12 and CMD_wo_DAT	
Table 1-9: Controlling SDCLK by the SD Bus Power and SD Clock Enable	
Table 1-10 : ADMA2 Length Field	
Table 1-11 : 64-bit Address Descriptor Table	
Table 1-12 : ADMA2 States	
Table 2-1 : SD Host Controller Register Map	
Table 2-2 : Register (and Register Bit-Field) Types	
Table 2-3 : SDMA System Address Register	
Table 2-4 : Block Size Register	
Table 2-5 : Block Count Register	
Table 2-6 : Argument Register	
Table 2-7 : Transfer Mode Register	
Table 2-8 : Determination of Transfer Type	
Table 2-9 : Command Register	
Table 2-10 : Relation Between Parameters and the Name of Response Type	
Table 2-11 : Response Register	
Table 2-11 : Response Register	
Table 2-13 : Buffer Data Port Register	
Table 2-14: Present State Register (Part 1)	
Table 2-15 : Present State Register (Part 2)	
Table 2-16: Host Control Register	
Table 2-17 : Power Control Register	
Table 2-18 : Block Gap Control Register	
Table 2-19 : Wakeup Control Register	
Table 2-20 : Clock Control Register	
Table 2-21 : Timeout Control Register	
Table 2-22 : Software Reset Register	
Table 2-23 : Normal Interrupt Status Register	
Table 2-24 : Error Interrupt Status Register	
Table 2-25 : The relation between Command CRC Error and Command Timeout Error	
Table 2-26 : Normal Interrupt Status Enable Register	
Table 2-27 : Error Interrupt Status Enable Register	
Table 2-28 : Normal Interrupt Signal Enable Register	
Table 2-29 : Error Interrupt Signal Enable Register	
Table 2-30 : Auto CMD12 Error Status Register	. 67
Table 2-31 : The relation between CRC Error and Timeout Error for Auto CMD12	
Table 2-32 : Capabilities Register (Part 1)	. 68
Table 2-33 : Capabilities Register (Part 2)	
Table 2-34 : Maximum Current Capabilities Register	
Table 2-35 : Maximum Current Value Definition	. 71
Table 2-36 : Slot Interrupt Status Register	. 72
Table 2-37 : Host Controller Version	
Table 2-38 : Force Event for Error Interrupt Status Register	. 74
Table 2-39 : Force Event Register for Auto CMD12 Error Status	
▼	

SD Host Controller Simplified Specification Version 2.00

Table 2-40 : ADMA Error Status Register	77
Table 3-1 Suspend / Resume Condition	115
Table A - 1 : PCI Configuration Register for Standard SD Host Controller	122
Table A - 2 : PCI Config. Class Code Register	123
Table A - 3 : PCI Config. Base Address Register	124
Table A - 4 : PCI Config. Slot Information Register	125
Table A - 5 : The relation between Device State, Power and Clock	126
Table C - 1 : Symbol Definition used in Descriptor Table of ADMA1	131
Table C - 2 : ADMA1 States	132
Table C - 3 : ADMA1 Select in Host Control Register	133
Table C - 4 : ADMA1 Support Bit in Capabilities register	

1. Overview of the SD Standard Host

The Secure Digital (SD) Host Standard Specification is the SD Association's (SDA) guideline for designing SD Host Controllers and related vendor products. Within the scope of the SD Associations adherence to this specification is not mandatory. It is the Host Controller vendor's responsibility to design products that comply with the SD Specification and where possible to use standard Host Drivers. OS vendor, IHVs and OEMs may require compliance according to their own policies so adherence is recommended.

1.1. Scope of the Standard SD Host

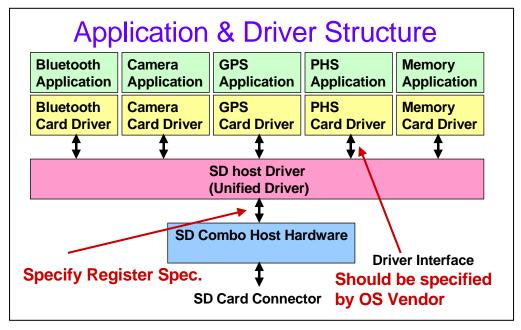


Figure 1-1: Host Hardware and Driver Architecture

It is the intention of this specification that by defining a standard SD Host Controller, Operating System (OS) Vendors can develop SD Host Drivers that will work with Host Controllers from any vendor. Applications may in addition require the Card Drivers. The Card Drivers will communicate with the Host Driver using a driver interface specified by the OS.

Implementation Note:

This specification can be applied to any system bus interface. The interface between the Host Driver and its parent system driver (if any) is not defined by this specification.

1.2. Register Map

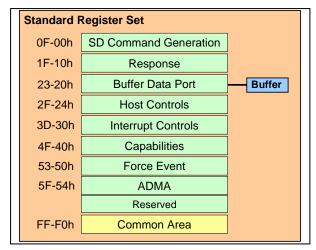


Figure 1-2: Classification of the Standard Register Map

The standard register map is classified in 9 parts listed below. The Host Controller shall support byte, word and double word accesses to these registers. Reserved bits in all registers shall be fixed to zero. The Host Controller shall ignore writes to reserved bits; however, the Host Driver should write them as zero to ensure compatibility with possible future revisions to this Specification.

(1) SD command generation : Parameters to generate SD commands

(2) Response : Response value from the card

(3) Buffer Data port : Data access port to the internal buffer

(4) Host controls : Present State, controls for the SD Bus, Host reset and so on.

(5) Interrupt controls : Interrupt statuses and enables.

(6) Capabilities : Vendor specific host controller information
 (7) Force Event : Test register to generate events by software.

(8) ADMA : Advanced DMA registers.(9) Common area : Common information area.

1.3. Multiple Slot support

One Standard Register Set is defined for each slot. If the Host Controller has two slots, two register sets shall be required. Each slot is controlled independently. This enables support for combinations of Full speed and Low speed cards in regards to SD Clock frequencies.

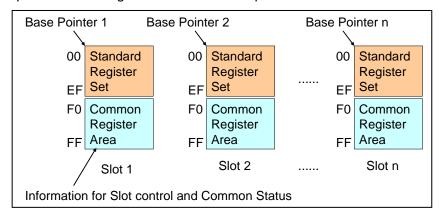


Figure 1-3: Register Map for Multiple Slots Controller

Figure 1-3 shows the register map for a multiple slot Host Controller. The Host Driver must determine the number of slots and base pointers to each slot's Standard Register Set using system bus or vendor specific methods. Offsets from 0F0h to 0FFh are reserved for the Common register area that defines information for slot control and common status. The common register area is accessible from any slot's register set. This allows software to control each slot independently, since it has access to the *Slot Interrupt Status* register and the *Host Controller Version* register from each register set.

1.4. Supporting DMA

The Host Controller provides a "programmed I/O" method for the Host Driver to transfer data using the *Buffer Data Port* register. Optionally, Host Controller implementers may support data transfer using DMA. The DMA algorithm defined in the SD Host Controller Standard Specification Version 1.00 is called SDMA (Single Operation DMA). Only one SD command transaction can be executed per a SDMA operation. Support of SDMA can be checked by the **SDMA Support** in the *Capabilities* register.

This specification defines a new DMA transfer algorithm called ADMA (Advanced DMA). ADMA provides data transfer between system memory and SD card without interruption of CPU execution. Support of ADMA can be checked by the *Capabilities* register. Refer to Section 1.13 for more details about ADMA. When the term "DMA" is used in this document, it applies to both SDMA and ADMA.

Prior to using DMA, the Host Driver shall confirm that both the Host Controller and the system bus support it (PCI bus can support DMA). DMA shall support both single block and multiple-block transfers but does not support infinite transfers. Host Controller registers shall remain accessible for issuing non-DAT line commands during a DMA transfer execution. The result of a DMA transfer shall be the same regardless of the system bus data transfer method.

The Host Driver can stop and restart a DMA operation by the control bits in the *Block Gap Control* register. By setting **Stop At Block Gap Request**, a DMA operation can be stopped at block gap. By setting **Continue Request**, DMA operation can be restarted. Refer to the *Block Gap Control* register for more details. If an error occurs, DMA operation shall be stopped. To abort DMA transfer, Host driver shall reset the Host Controller by the **Software Reset For DAT Line** in the *Software Reset* register and issue CMD12 if multiple-block read / write command is executing.

1.5. SD Command generation

	DMA command	CPU data transfer	Non-DAT transfer
SDMA System Address	Yes	No	No
Block Size	Yes	Yes	No (Protected)
Block Count	Yes	Yes	No (Protected)
Argument	Yes	Yes	Yes
Transfer Mode	Yes	Yes	No (Protected)
Command	Yes	Yes	Yes

Table 1-1: Registers to Generate SD Command

Table 1-1 shows register settings (at offsets from 000h to 00Fh in the register set) necessary for three types of transactions: DMA generated transfers, CPU data transfers (using "programmed I/O") and non-DAT transfers. When initiating a transaction, the Host Driver should program these registers sequentially from 000h to 00Fh. The beginning register offset may be calculated based on the type of transaction. The last written offset shall be always 00Fh because writing to the upper byte of the *Command* register shall trigger issuance of an SD command.

The Host Driver should not read the *SDMA System Address*, *Block Size* and *Block Count* registers during a data transaction unless the transfer is stopped or suspended because the value is changing and not stable. To prevent destruction of registers using data transfer when issuing command, the *Block Size*, *Block Count* and *Transfer Mode* registers shall be write protected by the Host Controller while **Command Inhibit (DAT)** is set to 1 in the *Present State* register. (The *SDMA System Address* cannot be protected by this signal.) The Host Driver shall not write the *Argument* and *Command* registers while **Command Inhibit (CMD)** is set to 1. The Host Driver shall protect the *SDMA System Address*, *Argument* and *Command* registers.

1.6. Suspend and Resume mechanism

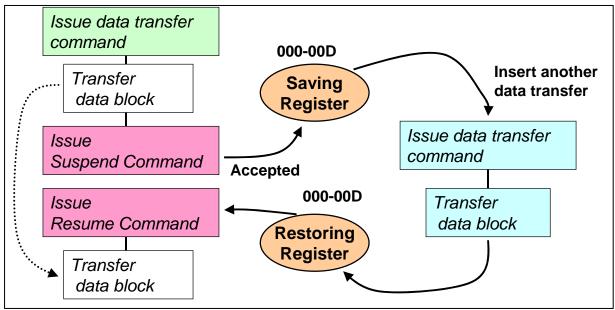


Figure 1-4: Suspend and Resume mechanism

Support for Suspend/Resume can be determined by checking **Suspend/Resume Support** in the *Capabilities* register. When the SD card accepts a suspend request, the Host Driver saves information in the first 14bytes registers (that is, offsets 000h-00dh) before issuing other SD commands. On resuming, the Host Driver restores these registers and then issues the Resume command to continue suspended operation.

The SDIO card sets the **DF** (Resume Data Flag) in the response to the Resume command. (Since the Suspend and Resume commands are CMD52 operations, the response data is actually the Function Select Register in the CCCR.) If **DF** is set to 0, it means the SDIO card cannot continue data transfer while suspended. This bit can be used to control data transfers and interrupt cycles. If the Resume Data Flag is set to 0, no more data is transferred and an interrupt cycle is started if the transaction being resumed is in 4-bit mode. If **DF** is set to 1, data transfers continue. The Suspend/Resume protocol is described in the SDIO Specification (SD card Specification part E1).

Note: To use Suspend and Resume function, it is necessary that SDIO Card supports the Suspend and Resume commands and Read Wait control.

1.7. Buffer Control

The Host Controller has a data buffer for data transfer. The Host Driver accesses internal buffer through the 32-bit *Buffer Data Port* register. Followings show some rules to access the buffer.

1.7.1. Control of Buffer Pointer

Internally, the Host Controller maintains a pointer to control the data buffer. The pointer is not directly accessible by the Host Driver. Every time the *Buffer Data Port* register is accessed, the pointer is incremented depending on amount of data written to the buffer. In order to accommodate a variety of system busses, this pointer shall be implemented regardless of system bus width (8-bit, 16-bit, 32-bit or 64-bit system bus width can be supported). To specify control of the pointer, the Host Controller data buffer interface shall have the following characteristics:

(1) System Bus Width and Byte Enable Address

8-bit, 16-bit, 32-bit or 64-bit system bus is supported. To specify byte position for *Buffer Data Port* register (4 bytes), Byte Enable (*BE*[]) or Lower Address (*A*[]) is used. Table 1-2 shows the relation between lower address and byte enable depending on system bus width. The *Buffer Data Port* register can be accessed by *BE*[3:0] for 64-bit system bus which has *BE*[7:0].

System Bus	A[02]	A[01]	A[00]	BE[3] D[31:24]	BE[2] D[23:16]	BE[1] D[15:08]	BE[0] D[07:00]
64-bit	No	No	No	Yes	Yes	Yes	Yes
32-bit	Yes	No	No	Yes	Yes	Yes	Yes
16-bit	Yes	Yes	No	No	No	Yes	Yes.
8-bit	Yes	Yes	Yes	No	No	No	Yes*2

^{*1 &}quot;Yes" means the signal is used for control and "No" means the signal is not used.

Table 1-2: Relations Between Address and Byte Enable

(2) Sequential and continuous access

The Buffer Data Port register shall be accessed by sequential and continuous manner. The buffer pointer is controlled by the Byte Enable patterns when accessing to the Buffer Data Port register. So Byte Enable patterns shall be sequential and continuous as well. The order of Byte Enable is according to little endian format. For example, **BE**[1] is accessed, next access shall start form **BE**[2]. Random or skipped access is not allowed.

Table 1-3 shows possible byte enable patterns that the Host Controller shall be supported. However, if the system controller supports write merge, it may generate the other byte enable patterns. To avoid generating unsupported byte enable patterns for the 32-bit or 64-bit bus system, the Host Driver is allowed to use word or double word access to the *Buffer Data Port* register except for the last access to every block data.

OK	BE[3:0]=0011b (2-byte) =>	BE[3:0]=1100b (2-byte) =>	BE[3:0]=0011b (2-byte)
OK	BE[3:0]=1100b (2-byte) =>	BE[3:0]=1111b (4-byte) =>	BE[3:0]=0011b (2-byte)
OK	BE[3:0]=1111b (4-byte) =>	BE[3:0]=1111b (4-byte) =>	BE[3:0]=1111b (4-byte)
Not OK	BE[3:0]=0011b (2-byte) =>	BE[3:0]=0011b (2-byte)	(Cannot skip BE[2],BE[3])
Not OK	BE[3:0]=0011b (2-byte) =>	BE[3:0]=1111b (4-byte)	(Cannot skip BE[2],BE[3])

^{*2:} BE[00] for 8-bit bus is always 1 therefore it may not be defined.

Byte Enable		BE[3]	BE[2]	BE[1]	BE[0]
Data Bus		D[31:24]	D[23:16]	D[15:08]	D[07:00]
Access	4-byte	1	1	1	1
Туре	2-byte	0	0	1	1
	2-byte	1	1	0	0
	1-byte	0	0	0	1
	1-byte	0	0	1	0
	1-byte	0	1	0	0
	1-byte	1	0	0	0

^{* 1} means BE is valid and 0 means BE is not valid.

Table 1-3: Available Byte Enable Pattern for Buffer Data Port Register

(3) Buffer Control with Block Size

The buffer preserves data up to the block size specified by the *Block Size* register. Following definitions of controlling buffer enable the Host Driver to access the *Buffer Data Port* register repeatedly with 32-bit width regardless of block size.

In case of write operation, the buffer accumulates the data written through the *Buffer Data Port* register. When the buffer pointer reaches the block size, **Buffer Write Enable** in the *Present State* register changes 1 to 0. It means no more data can be written to the buffer. Excess data of the last write is ignored. For example, if just lower 2 bytes data can be written to the buffer and a 32-bit (4-byte) block of data is written to the *Buffer Data Port* register, the lower 2 bytes of data is written to the buffer and the upper 2 bytes is ignored. Every time **Buffer Write Enable** changes 0 to 1, it means a next block of data can be written to the buffer. A new blocks write shall always start from BE[00] position. After that, a block of data can be written to the buffer without checking **Buffer Write Enable**.

In case of read operation, every time **Buffer Read Enable** in the *Present State* register changes 0 to 1, a block of data can be read through the *Buffer Data Port* register. A new block read shall always start from BE[00] position. After that a block of data can be read from the buffer without checking **Buffer Read Enable**. Excess data of the last read is ignored. For example, if just lower 2 bytes of data are left in the buffer and a 32-bit (4-byte) read is performed, the lower 2 bytes is valid but the upper 2 bytes is undefined. When the buffer pointer reaches block size, **Buffer Read Enable** changes 1 to 0. It means no more data can be read from the buffer.

Implementation Note:

Table 1-3 implies that the Host Driver should align register accesses on address boundaries matching the number of bytes in the access. That is, single byte accesses may be aligned on any offset within the register set; word (double byte) accesses should be aligned on two-byte offsets; and double-word (quad byte) accesses should be aligned on four-byte offsets. According to the feature (3), the Host Driver can always access *Buffer Data Port* register with double-word access.

1.7.2. Determining Buffer block length

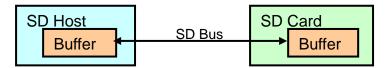


Figure 1-5: Buffer size relation between the SD Host and the SD Card

To be able to transfer blocks of data at a burst, the relationship between Host Controller and SD card buffer sizes is important. The Host Driver shall use the same data block length for both the Host Controller and the card. If the controller and card buffer sizes are different, the Host Driver shall use the smaller value. The maximum Host Controller buffer size is defined by the **Max Block Length** field in the Capabilities register.

Implementation Note:

The card buffer size is described as maximum block length in the Card Specific Data (CSD) register for memory cards (for cards compliant with the Physical Layer Specification, READ_BL_LEN and WRITE_BL_LEN shall be the same) and in the Card Information Structure (CIS) for SDIO cards. Physical Layer Specification re-defines that maximum block length is only used to calculate capacity of memory card. Even though it indicates larger than 512 bytes, block length shall be set to 512 byte for data transfer. This is because 512 bytes block length is required to keep compatibility with 512 bytes data boundary. If the SDIO card has multiple buffers, the block size in CIS indicates the size of the smallest buffer; this is the value the Host Driver should use when programming block size. Buffer information (for example, buffer port address) in the SDIO card is function specific.

1.7.3. Dividing large data transfer

The SDIO command CMD53 definition limits the maximum data size of data transfers according to the following formula:

Max data size = Block size x Block count

For example, Block size is specified by the buffer size as described in 1.7.2 and the block count can be a maximum of 512 (9-bit count) as specified in the command argument for CMD53. In the worst case, if the card has only a 1 byte buffer, up to 512 bytes of data can be transferred using CMD53 (Block Size =1, Block Count = 512). If the card does not support multiple-block mode, only one byte can be transferred in this case. If an application or Card Driver wants to transfer larger sizes of data, the Host Driver shall divide large data into multiple CMD53 blocks.

1.7.4. Data lengths which cannot be divided by block size

The length of a multiple block transfer needs to be in block size units. If the total data length cannot be divided evenly by the block size, there are two ways to transfer the data depending on the function and card design:

Option 1 is for the Card Driver to split the transaction. The remainder of block size data is transferred by using a single block command at the end.

Option 2 is to add dummy data in the last block to fill the block size. This is efficient but the card must manage or remove the dummy data.

Implementation Note: The Host Driver interface to the Card Drivers should accept any size data. The Host Driver can always rely on Option 1 if the data size is not a multiple of the block size. The Host Driver may expose Option 2 to the Card Drivers, or may expect the Card Drivers to implement Option 2 themselves if they need the additional optimization. This document does not specify the interface between the Host Driver and the Card Drivers.

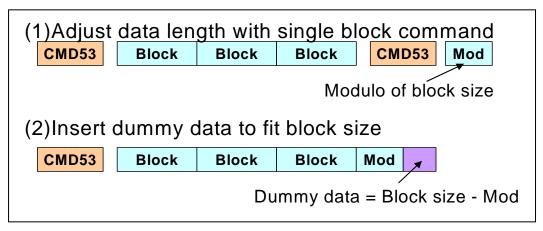


Figure 1-6: Two cases to handle a transfer of data that cannot be divided by block size

1.8. Relationship between Interrupt Control Registers

The Host Controller implements a number of interrupt sources. Interrupt sources can be enabled as interrupts or as system wakeup signals as shown in Figure 1-7. If the interrupt source's corresponding bit in the *Normal Interrupt Status Enable* or *Error Interrupt Status Enable* register is 1 and the interrupt becomes active its active state is latched and made available to the Host Driver in the *Normal Interrupt Status* register or the *Error Interrupt Status* register. Interrupt Status shall be cleared when *Interrupt Status Enable* is cleared. (This is not expressed in the Figure 1-7.)

An interrupt source with its bit set in an interrupt status register shall assert a system interrupt signal if its corresponding bit is also set in the *Normal Interrupt Signal Enable* register or the *Error Interrupt Signal Enable* register. Once signaled, most interrupts are cleared by writing a 1 to the associated bit in the interrupt status register. Card interrupts, however, must be cleared by the Card Driver. If the Card Interrupt is generated, the Host Driver shall clear Card Interrupt Status Enable before the Card Driver clears interrupt sources. After all interrupt sources are cleared, the Host Driver shall set it again to enable another card interrupt.

The Wakeup Control register enables Card Interrupt, Card Insertion, or Card Removal status changes to be configured to generate a system wakeup signal. These interrupts are enabled or masked independently of the Normal Interrupt Signal Enable register. The kind of wakeup event can be read from the Normal Interrupt Status register.

The interrupt signal and wakeup signal are logical ORed and shall be read from the *Slot Interrupt Status* register.

Implementation Note:

The Host Driver is responsible for enabling wakeup signals and disabling interrupt signals when the Host System goes into its sleep mode, and for disabling wakeup signals and enabling interrupt signals when the Host System goes into run mode. The Host Driver should not enable both at the same time.

Implementation Note:

The Host Systems may implement interrupt and wakeup signals in various ways. For example, the PCI bus supports *PME#*, which can be asserted without PCI clock, then interrupts use *INTx#* and wakeups use *PME#*. Alternatively, the system may use an ORed signal of interrupt and wakeup if the system bus supports one interrupt line to the Host Controller.

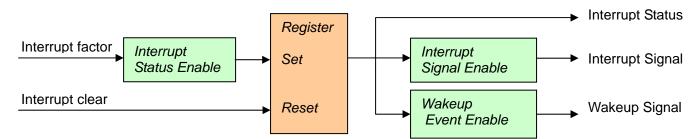


Figure 1-7: Logical relation for interrupt registers

Interrupt Status Enable	Interrupt Signal Enable	Wakeup Event Enable	Interrupt Status	Interrupt Signal
0 (Mask)	x (don't care)	x (don't care)	0 (Not exist)	0 (De-assert)
1 (Enable)	0 (Mask)	x (don't care)	x (don't care)	0 (De-assert)
1 (Enable)	1 (Enable)	x (don't care)	0 (Not exist)	0 (De-assert)
1 (Enable)	1 (Enable)	x (don't care)	1 (Exist)	1 (Assert)

Table 1-4: Interrupt Signal Table

Interrupt Status Enable	Interrupt Signal Enable	Wakeup Event Enable	Interrupt Status	Wakeup Signal
0 (Mask)	x (don't care)	x (don't care)	0 (Not exist)	0 (De-assert)
1 (Enable)	x (don't care)	0 (Mask)	x (don't care)	0 (De-assert)
1 (Enable)	x (don't care)	1 (Enable)	0 (Not exist)	0 (De-assert)
1 (Enable)	x (don't care)	1 (Enable)	1 (Exist)	1 (Assert)

Table 1-5: Wakeup Signal Table

Implementation Note: The Host Controller may implement asserted wakeup or interrupt signals as active high or active low.

1.9. HW Block Diagram and timing part

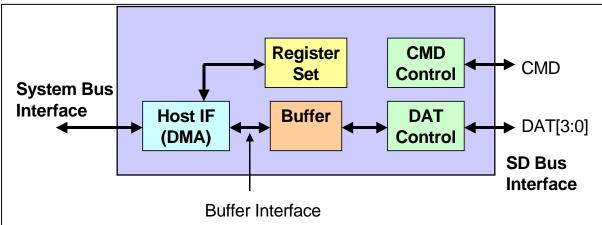


Figure 1-8 : Block Diagram of Host Controller

The Host Controller has two bus interfaces, the System Bus Interface and the SD Bus Interface. The Host Controller assumes that these interfaces are asynchronous (that is, are working on different clock frequencies). The Host Driver is on system bus time (because it is software executed by the Host Controller CPU, on its system clock). The SD card is on SD Bus time (that is, its operation is synchronized by *SDCLK*). The Host Controller shall synchronize signals to communicate between these interfaces. Blocks of data shall be synchronized at the buffer module. All status registers shall be synchronized by the system clock and maintain synchronization during output to the system interface (except, optionally, statuses for testing). Control registers, which trigger SD Bus transactions, shall be synchronized by *SDCLK*. Therefore, there will be a timing delay when propagating signals between the two interfaces. This means the Host Driver cannot do real time control of the SD Bus and must rely on the Host Controller to control the SD Bus according to register settings.

The Buffer Interface enables internal read and write buffers (refer to use of the **Buffer Read Enable** and **Buffer Write Enable** in the *Present State* register *as described in section* 1.7 "Buffer Control"). The **Transfer Complete** interrupt status indicates completion of the read / writes transfer for both DMA and non DMA transfers. However, the timing is different between reads and writes. Read transfers shall be completed after all valid data have been transferred to the Host System and are ready for the Host Driver to access. Write transfers shall be completed after all valid data have been transferred to the SD card and the busy state is over.

Table 1-6 shows the relation between statuses and interrupts for data transfer.

Type of Data transfer	Buffer Status	Buffer Interrupt	Complete Interrupt
Write Transfer (Non DMA)	Buffer Write Enable	Buffer Write Ready	Transfer Complete
Write Transfer (DMA)	(Driver ignores)	(Driver ignores)	Transfer Complete
Read Transfer (Non DMA)	Buffer Read Enable	Buffer Read Ready	Transfer Complete
Read Transfer (DMA)	(Driver ignores)	(Driver ignores)	Transfer Complete

Table 1-6: Summary of Register Status for data transfer

1.10. Power state definition of SD Host Controller

Implementation Note: Table 1-7 defines controller power states, which are listed in increasing order of power consumption. The Host Controller should reduce the power consumption by using these conditions.

SD Card	Internal Clock *1	SD Power	SD Clock	SD Bus	Power State *2	Comment
	Stop	OFF	Stop	-	P00	Host not used
No exist	Oscillate	OFF	Stop	-	P01	No card
INO EXIST	Oscillate	ON	Stop	-	P02	Short transition state *3
	Oscillate	ON	Oscillate	-	P03	Short transition state *3
	Stop	OFF	Stop	-	P10	Host not used
	Oscillate	OFF	Stop	-	P11	Low power mode
Exist	Oscillate	ON	Stop	-	P12	Wakeup
	Oscillate	ON	Oscillate	Wait	P13	Ready to issue command
	Oscillate	ON	Oscillate	Access	P14	During transaction

Table 1-7: Power State Definition

Implementation Note:

- *1: Internal clock should be stopped when the Host System does not use the Host Controller.
- *2: Power states are not actually implemented in Host Controller. This label is for reference.
- *3: Short transition state: Temporary power states. The Host Controller automatically goes to P01 when it detects No Card.

The SD Clock shall not be supplied when card power is OFF.

States described in Table 1-7 can be determined by reading the corresponding register bits:

SD Card : Exist/Not exist
SD Power : ON/OFF
SD Clock : oscillate/stop

Card Inserted in the *Present State* register
SD Bus Power in the *Power Control* register
SD Clock Enable in the *Clock Control* register

SD Bus: access/wait (idle) Command Inhibit (CMD) and Command Inhibit (DAT) in the Present

State register

1.11. Auto CMD12

Multiple block transfers for SD memory require CMD12 to stop the transactions. The Host Controller automatically issues CMD12 when the last block transfer is completed. This feature of the Host Controller is called Auto CMD12. The Host Driver should set **Auto CMD12 Enable** in the *Transfer Mode* register when issuing a multiple block transfer command. Auto CMD12 timing synchronization with the last data block shall be done by hardware in the Host Controller. Commands that do not use the DAT line can be issued during multiple block transfers. These commands are referred to using the notation CMD wo DAT.

In order to prevent DAT line commands and CMD_wo_DAT commands from conflicting, the Host Controller shall arbitrate the timing by which each command is issued on the SD Bus. Therefore, a command might not immediately be issued after the Host Driver writes to the *Command* register. The command may be issued before or after Auto CMD12, depending on the timing. To be able to distinguish the responses of DAT line and CMD_wo_DAT commands, the Auto CMD12 response can be determined from the upper four bytes of the *Response* register (at offset 01Ch in the standard register set).

If errors are detected related to Auto CMD12, the Host Controller shall issue an **Auto CMD12 Error** interrupt. The Host Driver can check the Auto CMD12 error status (Command Index/End bit/CRC/Timeout Error) by reading the *Auto CMD12 Error Status* register.

The Table 1-8 illustrates the relationship between Auto CMD12 errors and any CMD_wo_DAT commands that have been issued by the Host Driver.

Relation of the commands	Error Status	Comments
Auto CMD12 only	CMD_wo_DAT : Unrelated	Only Auto CMD12 is issued,
	Auto CMD12 : Error	therefore Auto CMD12 is failed.
CMD_wo_DAT before Auto	CMD_wo_DAT : No Error	CMD_wo_DAT successful, but Auto
CMD12	Auto CMD12 : Error	CMD12 failed.
CMD_wo_DAT before Auto	CMD_wo_DAT : Error	CMD_wo_DAT is failed, therefore
CMD12	Auto CMD12 : Not executed	Auto CMD12 could not be issued.
Auto CMD12 before	CMD_wo_DAT : Not executed	Auto CMD12 is failed, therefore
CMD_wo_DAT	Auto CMD12 : Error	CMD_wo_DAT could not be issued.

Table 1-8: Relation between Auto CMD12 and CMD_wo_DAT

The Host Driver may determine which of these error cases has occurred by checking the *Auto CMD12 Error Status* register when an **Auto CMD12 Error** interrupt occurs. If the Auto CMD12 was not executed, the Host Driver needs to recover from the CMD_wo_DAT error and issue CMD12 to stop the multiple block transfer. If the CMD_wo_DAT was not executed, the Host Driver can issue it again after recovering from the Auto CMD12 error. The procedures for recovering from error interrupts and from Auto CMD12 errors are described in sections 3.10.1 and 3.10.2.

1.12. Controlling SDCLK

Table 1-9 shows how **SDCLK** is controlled by the **SD Bus Power** in the *Power Control* register and the **SD Clock Enable** in the *Clock Control* register.

The Clock Period of *SDCLK* is specified by the *SDCLK* Frequency Select in the *Clock Control* register and the **Base Clock Frequency For SD Clock** in the *Capabilities* register. Because of the SD card may use both clock edges, the duty of SD clock should be average 50% (scattering within 45-55%) and the Period of High should be half of the Clock Period. The oscillation of *SDCLK* starts from driving specified Period of High. When *SDCLK* is stopped by the **SD Clock Enable**, the Host Controller shall stop *SDCLK* after driving Period of High to maintain clock duty. When *SDCLK* is stopped by the **SD Bus Power**, the Host Controller shall stop *SDCLK* immediately (drive Low).

SD Bus Power (Note 1)	SD Clock Enable (Note 2)	State of SDCLK
Change 0 to 1	0	Drive Low
	1	Start Clock with specified Period of High
Change 1 to 0	0	Drive Low
	1	Drive Low immediately
0	Don't Care	Drive Low
	Change 0 to 1	Start Clock with specified Period of High
1	Change 1 to 0	Maintains Period of High and then stops Clock and drive Low

Table 1-9: Controlling SDCLK by the SD Bus Power and SD Clock Enable

- Note 1: When the card state is changed from Debouncing to No Card, the Host Controller shall clear the **SD Bus Power**.
- Note 2: When the card state is changed from Card Inserted to Debouncing, the Host Controller shall clear the **SD Clock Enable** immediately.

1.13. Advanced DMA

In the SD Host Controller Standard Specification Version 2.00, new DMA transfer algorithm called ADMA (Advanced DMA) is defined. The DMA algorithm defined in the SD Host Controller Standard Specification Version 1.00 is called SDMA (Single Operation DMA). SDMA had disadvantage that **DMA Interrupt** generated at every page boundary disturbs CPU to reprogram the new system address. This SDMA algorithm forms a performance bottleneck by interruption at every page boundary. ADMA adopts scatter gather DMA algorithm so that higher data transfer speed is available. The Host Driver can program a list of data transfers between system memory and SD card to the Descriptor Table before executing ADMA. It enables ADMA to operate without interrupting the Host Driver. Furthermore, ADMA can support not only 32-bit system memory addressing but also 64-bit system memory addressing. The 32-bit system memory addressing uses lower 32-bit field of 64-bit address registers. Support of SDMA and ADMA are optional for the Host Controller.

There are two types of ADMA; ADMA1 and ADMA2. ADMA1 can support data transfer of only 4KB aligned data in system memory. ADMA2 improves the restriction so that data of any location and any size can be transferred in system memory. The format of Descriptor Table is different between them. The Host Controller Specification Ver2.00 defines ADMA2 as standard ADMA and recommends supporting ADMA2 rather than ADMA1. This is because the ADMA1 specification is described in Appendix C. When the term "ADMA" is used in this document, it applies to both ADMA1 and ADMA2.

1.13.1. Block Diagram of ADMA2

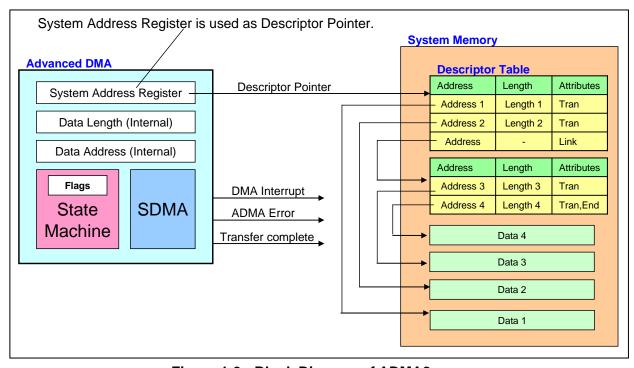


Figure 1-9: Block Diagram of ADMA2

Figure 1-9 shows block diagram of ADMA2. The Descriptor Table is created in system memory by the Host Driver. 32-bit Address Descriptor Table is used for the system with 32-bit addressing and 64-bit Address Descriptor Table is used for the system with 64-bit addressing. Each descriptor line (one executable unit) consists with address, length and attribute field. The attribute specifies operation of the descriptor line. ADMA2 includes SDMA, State Machine and Registers circuits. ADMA2 does not use 32-bit SDMA System Address Register (offset 0) but uses the 64-bit Advanced DMA System Address

register (offset 058h) for descriptor pointer. Writing Command register triggers off ADMA2 transfer. ADMA2 fetches one descriptor line and execute it. This procedure is repeated until end of descriptor is found (End=1 in attribute).

1.13.2. An Example of ADMA2 Programming

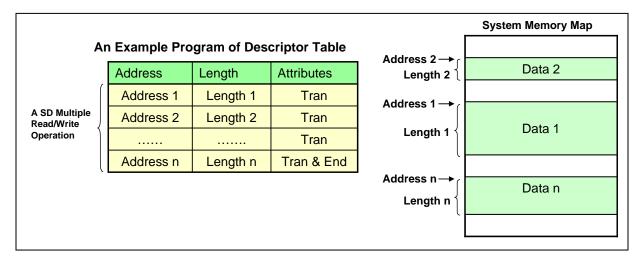


Figure 1-10 : An Example of ADMA2 Data Transfer

Figure 1-10 shows a typical ADMA2 descriptor program. The data area is sliced in various lengths and each slice is placed somewhere in system memory. The Host Driver describes the Descriptor Table with set of address, length and attributes. Each sliced data is transferred in turns as programmed in descriptor.

1.13.3. Data Address and Data Length Requirements

There are 3 requirements to program descriptor.

The minimum unit of address is 4byte.

The maximum data length of each descriptor line is less than 64KB.

Total Length = Length 1 + Length 2 + Length 3 + ... + Length n = multiple of Block Size

If total length of a descriptor were not multiple of block size, ADMA2 transfer might not be terminated. In this case, the transfer should be aborted by data timeout.

Block Count register is defined as 16-bit register and it limits the maximum of 65535 blocks transfer. If ADMA2 operation is less than or equal 65535 blocks transfer, Block Count register can be used. In this case, total length of Descriptor Table shall be equivalent to multiply block size and block count. If ADMA2 operation is more than 65535 blocks transfer, Block Count register shall be disabled by setting 0 to Block Count Enable in the Transfer Mode Register. In this case, length of data transfer is not designated by block count but Descriptor Table. Therefore, the timing of detecting the last block on SD bus may be different and it affects the control of Read Transfer Active, Write Transfer Active and DAT line Active in the Present State register. In case of read operation, several blocks may be read more than required. The Host Driver shall ignore out of range error if the read operation is for the last block of memory area.

1.13.4. Descriptor Table

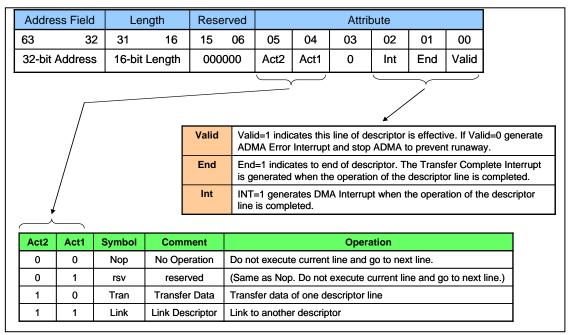


Figure 1-11: 32-bit Address Descriptor Table

Figure 1-11 shows the definition of 32-bit Address Descriptor Table. One descriptor line consumes 64-bit (8-byte) memory space. Attribute is used to control descriptor. 3 action symbols are specified. "Nop" operation skips current descriptor line and fetches next one. "Tran" operation transfers data designated by address and length field. "Link" operation is used to connect separated two descriptors. The address field of link points to next Descriptor Table. The combination of Act2=0 and Act1=1 is reserved and defined the same operation as Nop. A future version of controller may use this field and redefine a new operation. 32-bit address is stored in the lower 32-bit of 64-bit address registers. Address field shall be set on 32-bit boundary (Lower 2-bit is always set to 0) for 32-bit address descriptor table. Table 1-10 shows the definition of length field in the Descriptor Table.

Length Field	Value of Length
0000h	65536 bytes
0001h	1 byte
0002h	2 bytes
FFFFh	65535 bytes

Table 1-10 : ADMA2 Length Field

Addres	s Field	Ler	ngth	Rese	erved			Attrik	oute		
95	32	31	16	15	06	05	04	03	02	01	00
64-bit A	ddress	16-bit	Length	000	000	Act2	Act1	0	Int	End	Valid

Table 1-11: 64-bit Address Descriptor Table

Table 1-11 shows the 64-bit Address Descriptor Table. Address field is extended to 64-bit. One descriptor line consumes 96-bit (12-byte) memory space. Other functions are equivalent to 32-bit Address Descriptor. Address field shall be set on 64-bit boundary (Lower 3-bit is always set to 0) for 64-bit address descriptor table.

1.13.5. ADMA2 States

Figure 1-12 shows state diagram of ADMA2. 4 states are defined; Fetch Descriptor state, Change Address state, Transfer Data state, and Stop ADMA state. Operation of each state is explained in Table 1-12.

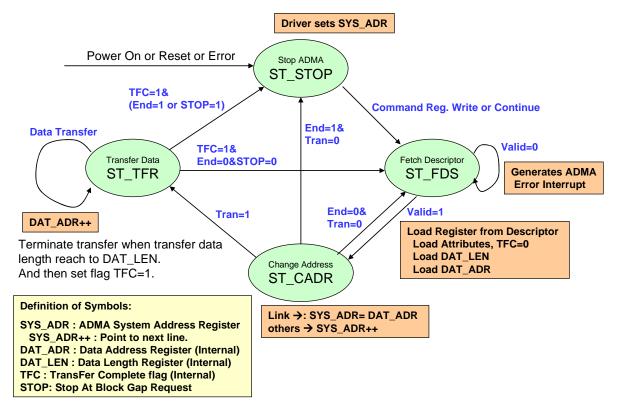


Figure 1-12: State Diagram of the ADMA2

State Name	Operation					
ST_FDS	ADMA2 fetches a descriptor line and set parameters in internal registers.					
(Fetch Descriptor)	Next go to ST_CADR state.					
ST_CADR	Link operation loads another Descriptor address to ADMA System Address					
(Change Address)	register. In other operations, ADMA System Address register is					
	incremented to point next descriptor line. If End=0, go to ST_TFR state.					
	ADMA2 shall not be stopped at this state even if some errors occur.					
ST_TFR	Data transfer of one descriptor line is executed between system memory					
(Transfer Data)	and SD card. If data transfer continues (End=0) go to ST_FDS state. If data					
	transfer completes, go to ST_STOP state.					
ST_STOP	ADMA2 stays in this state in following cases:					
(Stop DMA)	(1) After Power on reset or software reset.					
	(2) All descriptor data transfers are completed					
	If a new ADMA2 operation is started by writing Command register, go to					
	ST_FDS state.					

Table 1-12: ADMA2 States

ADMA2 does not support suspend / resume function but stop and continue are available. When the **Stop At Block Gap Request** in the *Block Gap Control* register is set during the ADMA2 operation, the **Block Gap Event Interrupt** is generated when ADMA2 is stopped at block gap. The Host Controller shall stop ADMA2 read operation by using Read Wait or stopping SD Clock. While stopping ADMA2, any SD commands cannot be issued. (In case of Host Controller version 1.00, the **Stop At Block Gap Request** can be set only when the card supports the Read Wait.)

Error occurrence during ADMA2 transfer may stops ADMA2 operation and generates **ADMA Error Interrupt**. The **ADMA Error State** field in the *ADMA Error Status* register holds state of ADMA2 stopped. The host driver can identify error descriptor location by following method. If ADMA stopped at ST_FDS state, the *ADMA System Address Register* points the error descriptor line. If ADMA stopped at ST_TFR or ST_STOP state, the *ADMA System Address* Register points the next location of error descriptor line. By this reason, ADMA2 shall not stop at ST_CADR state.

1.14. Test Registers

New test registers is defined for the test purpose. If it would be difficult to generate some interrupts intentionally, this feature would be useful to generate these interrupts manually for driver debugging. The *Force Event* register to control the *Error Interrupt Status* and *Auto CMD12 Error Status* are defined for this purpose. Intentional control of card insertion and removal are also difficult. The **Card Detect Signal Selection** and **Card Detect Test Level** in the *Host Control* register enable manual control of **Card Inserted** in the *Present State* register and generating interrupt of **Card Insertion** and **Card Removal** in the *Normal Interrupt Status* register. Support of the test registers is mandatory.

2. SD Host Standard Register

2.1. Summary of register set

2.1.1. SD Host Control Register Map

Table 2-1 summarizes the standard SD Host Controller register set. The Host Driver needs to determine the base address of the register set by a Host System specific method. The register set is 256 bytes in size. For multiple slot controllers, one register set is assigned per each slot, but the registers at offsets 0F0h-0FFh are assigned as a common area. These registers contain the same values for each slot's register set.

Offset	15-08 bit	07-00 bit	Offset	15-08 bit	07-00 bit	
002h	SDMA System	000h	SDMA Syster	n Address (Low)		
006h	Block	004h	Bloo	ck Size		
00Ah	Argur	ment1	008h		ument0	
00Eh	Comi	mand	00Ch	Trans	fer Mode	
012h	Respo	onse1	010h	Res	ponse0	
016h	Respo	onse3	014h	Res	ponse2	
01Ah	Respo	onse5	018h	Res	ponse4	
01Eh	Respo	onse7	01Ch	Res	ponse6	
022h	Buffer Da	ata Port1	020h	Buffer [Data Port0	
026h	Preser		024h		ent State	
02Ah	Wakeup Control	Block Gap Control	028h	Power Control	Host Control	
02Eh	Software Reset	Timeout Control	02Ch	Clock Control		
032h	Error Inter		030h	Normal Interrupt Status		
036h		Status Enable	034h	Normal Interrupt Status Enable		
03Ah	Error Interrupt	Signal Enable	038h		ıpt Signal Enable	
03Eh	-	-	03Ch	Auto CMD1	2 Error Status	
042h	Capal		040h		abilities	
046h	Capabilities		044h		s (Reserved)	
04Ah		ent Capabilities	048h		rrent Capabilities	
04Eh	Maximum Current Ca		04Ch		Capabilities (Reserved)	
052h	Force Event for Er	ror Interrupt Status	050h	Force Event for Aut	o CMD12 Error Status	
	-	· -	054h		ADMA Error Status	
05Ah	ADMA System A	058h	ADMA System Address [15:00]			
05Eh	ADMA System A	05Ch	ADMA System	n Address [47:32]		
	-					
0F2h	-	0F0h				
	-	-				
0FEh	Host Contro	oller Version	0FCh	Slot Inte	rrupt Status	

Table 2-1 : SD Host Controller Register Map

2.1.2. Configuration Register Types

Configuration register fields are assigned one of the attributes described below:

Register Attribute	Description
RO	Read-only register: Register bits are read-only and cannot be altered by software or any reset operation. Writes to these bits are ignored.
ROC	Read-only status: These bits are initialized to zero at reset. Writes to these bits are ignored.
RW	Read-Write register: Register bits are read-write and may be either set or cleared by software to the desired state.
RW1C	Read-only status, Write-1-to-clear status: Register bits indicate status when read, a set bit indicating a status event may be cleared by writing a 1. Writing a 0 to RW1C bits has no effect.
RWAC	Read-Write, automatic clear register: The Host Driver requests a Host Controller operation by setting the bit. The Host Controllers shall clear the bit automatically when the operation of complete. Writing a 0 to RWAC bits has no effect.
Hwlnit	Hardware Initialized: Register bits are initialized by firmware or hardware mechanisms such as pin strapping or serial EEPROM. Bits are read-only after initialization, and writes to these bits are ignored.
Rsvd	Reserved. These bits are initialized to zero, and writes to them are ignored.
WO	Write-only register. It is not physically implemented register. Rather, it is an address at which registers can be written.

Table 2-2: Register (and Register Bit-Field) Types

Implementation Note: If the Host Driver writes to RO, ROC, HwInit and Rsvd bits, the Host Driver should write these bits as zero to avoid possible compatibility problems with future versions of this specification.

2.1.3. Register Initial values

The Host Controller shall set all registers to their initial values at power-on reset. Initial values of the register are defined as follows. All other registers' default value shall be all bits set to zero. Value of the Capabilities register and Maximum Current Capabilities register depends on the Host

Controller. Value of the Host Controller Version register depends on the Host Controller.

2.1.4. Reserved bits of register

"Reserved" means the bit can be defined for future use and is currently set to 0. These bits should be written as zero.

2.2. SD Host Standard Register

2.2.1. SDMA System Address Register (Offset 000h)

This register contains the physical system memory address used for DMA transfers.

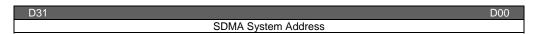


Figure 2-1: SDMA System Address Register

Location	Attrib	Register Field Explanation
31-00	RW	SDMA System Address This register contains the system memory address for a SDMA transfer. When the Host Controller stops a SDMA transfer, this register shall point to the system address of the next contiguous data position. It can be accessed only if no transaction is executing (i.e., after a transaction has stopped). Read operations during transfers may return an invalid value. The Host Driver shall initialize this register before starting a SDMA transaction. After SDMA has stopped, the next system address of the next contiguous data position can be read from this register. The SDMA transfer waits at the every boundary specified by the Host SDMA Buffer Boundary in the Block Size register. The Host Controller generates DMA Interrupt to request the Host Driver to update this register. The Host Driver sets the next system address of the next data position to this register. When the most upper byte of this register (003h) is written, the Host Controller restarts the SDMA transfer. When restarting SDMA by the Resume command or by setting Continue Request in the Block Gap Control register, the Host Controller shall start at the next contiguous address stored here in the SDMA System Address register. ADMA does not use this register.

Table 2-3: SDMA System Address Register

2.2.2. Block Size Register (Offset 004h)

This register is used to configure the number of bytes in a data block.



Figure 2-2 : Block Size Register

Location	Attrib	Register Field Explanation				
15	Rsvd	served				
14-12	RW	Host SDMA Buffer Boundary The large contiguous memory space may not be available in the virtual memory system. To perform long SDMA transfer, SDMA System Address register shall be updated at every system memory boundary during SDMA transfer. These bits specify the size of contiguous buffer in the system memory. The SDMA transfer shall wait at the every boundary specified by these fields and the Host Controller generates the DMA Interrupt to request the Host Driver to update the SDMA System Address register. At the end of transfer, the Host Controller may issue or may not issue DMA Interrupt. In particular, DMA Interrupt shall not be issued after Transfer Complete Interrupt is issued. In case of this register is set to 0 (buffer size = 4K bytes), lower 12-bit of byte address points data in the contiguous buffer and the upper 20-bit points the location of the buffer in the system memory. The SDMA transfer stops when the Host Controller detects carry out of the address from bit 11 to 12. These bits shall be supported when the SDMA Support in the Capabilities register is set to 1 and this function is active when the DMA Enable in the Transfer Mode register is set to 1. ADMA does not use this register.				
		000b4K bytes(Detects A11 carry out)001b8K bytes(Detects A12 carry out)010b16K Bytes(Detects A13 carry out)011b32K Bytes(Detects A14 carry out)100b64K bytes(Detects A15 carry out)101b128K Bytes(Detects A16 carry out)110b256K Bytes(Detects A17 carry out)111b512K Bytes(Detects A18 carry out)				

11-00	RW	CMD24, of size can implement is executed.	block size of data transfers for CMD17, CMD18, 53. Values ranging from 1 up to the maximum buffer memory, it shall be set up to 512 bytes (Refer to tion 1.7.2). It can be accessed only if no transaction ransaction has stopped). Read operations during alid value, and write operations shall be ignored.	
		0800h	2048 Bytes	
		0200h	512 Bytes	
		01FFh	511 Bytes	
		0004h	4 Bytes	
		0003h	3 Bytes	
		0002h	2 Bytes	
		0001h	1 Byte	
		0000h	No data transfer	

Table 2-4 : Block Size Register

2.2.3. Block Count Register (Offset 006h)

This register is used to configure the number of data blocks.



Figure 2-3 : Block Count Register

Location	Attrib	Register Field Explanation						
15-00	RW	Blocks Count For Current Transfer						
		This register is enabled when Block Count Enable in the <i>Transfer Mode</i> register is						
		set to 1 and is valid only for multiple block transfers. The Host Driver shall set this register to a value between 1 and the maximum block count. The Host Controller decrements the block count after each block transfer and stops when the count reaches zero. Setting the block count to 0 results in no data blocks is transferred.						
		This register should be accessed only when no transaction is executing (i.e., after transactions are stopped). During data transfer, read operations on this register may return an invalid value and write operations are ignored.						
		When a suspend command is completed, the number of blocks yet to be transferred can be determined by reading this register. Before issuing a resume command, the Host Driver shall restore the previously saved block count.						
		FFFFh	65535 blocks					
		0002h	2 blocks					
		0001h	1 block					
		0000h	Stop Count					

Table 2-5: Block Count Register

2.2.4. Argument Register (Offset 008h)

This register contains the SD Command Argument.



Figure 2-4 : Argument Register

Location	Attrib	Register Field Explanation
31-00	RW	Command Argument
		The SD Command Argument is specified as bit39-8 of Command-Format in the
		Physical Layer Specification.

Table 2-6: Argument Register

2.2.5. Transfer Mode Register (Offset 00Ch)

This register is used to control the operation of data transfers. The Host Driver shall set this register before issuing a command which transfers data (see **Data Present Select** in the *Command* register), or before issuing a Resume command. The Host Driver shall save the value of this register when the data transfer is suspended (as a result of a Suspend command) and restore it before issuing a Resume command. To prevent data loss, the Host Controller shall implement write protection for this register during data transactions. Writes to this register shall be ignored when the Command Inhibit (DAT) in the *Present State* register is 1.

D15	D06	D05	D04	D03	D02	D01	D00
Rsvd		Multi / Single Block Select	Data Transfer Direction Select	Rsvd	Auto CMD12 Enable	Block Count Enable	DMA Enable

Figure 2-5: Transfer Mode Register

Location	Attrib	Register Field Explanation				
15-06	Rsvd	Reserved				
05	RW	Multi / Single Block Select				
		This bit is set when issuing multiple-block transfer commands using DAT line. For				
		any other commands, this bit shall be set to 0. If this bit is 0, it is not necessary to				
		set the Block Count register. (Refer to Table 2-8)				
		4 Multiple Disple				
		1 Multiple Block 0 Single Block				
0.4	DW	Chilgie Block				
04	RW	Data Transfer Direction Select				
		This bit defines the direction of DAT line data transfers. The bit is set to 1 by the				
		Host Driver to transfer data from the SD card to the SD Host Controller and it is				
		set to 0 for all other commands.				
		1 Read (Card to Host)				
		0 Write (Host to Card)				
00	David					
03	Rsvd	Reserved				
02	RW	Auto CMD12 Enable				
		Multiple block transfers for memory require CMD12 to stop the transaction. When				
		this bit is set to 1, the Host Controller shall issue CMD12 automatically when last				
		block transfer is completed. The Host Driver shall not set this bit to issue				
		commands that do not require CMD12 to stop data transfer. In particular, secure				
		commands defined in the Part 3 File Security specification do not require CMD12.				
		1 Enable				
		0 Disable				

01	RW	Block Count Enable This bit is used to enable the <i>Block Count</i> register, which is only relevant for multiple block transfers. When this bit is 0, the <i>Block Count</i> register is disabled, which is useful in executing an infinite transfer. (Refer to Table 2-8) If ADMA2 data transfer is more than 65535 blocks, this bit shall be set to 0. In this case, data transfer length is designated by Descriptor Table.				
		1 Enable 0 Disable				
00	RW	DMA Enable This bit enables DMA functionality as described in section 1.4. DMA can be enabled only if it is supported as indicated in the <i>Capabilities</i> register. One of the DMA modes can be selected by DMA Select in the <i>Host Control</i> register. If DMA is not supported, this bit is meaningless and shall always read 0. If this bit is set to 1, a DMA operation shall begin when the Host Driver writes to the upper byte of <i>Command</i> register (00Fh).				
		1 DMA Data transfer 0 No data transfer or Non DMA data transfer				

Table 2-7: Transfer Mode Register

Table 2-8 shows the summary of how register settings determine types of data transfer.

Multi/Single Block Select	Block Count Enable	Block Count	Function
0	Don't care	Don't care	Single Transfer
1	0	Don't care	Infinite Transfer
1	1	Not Zero	Multiple Transfer
1	1	Zero	Stop Multiple Transfer

Table 2-8: Determination of Transfer Type

2.2.6. Command Register (Offset 00Eh)

The Host Driver shall check the **Command Inhibit (DAT)** bit and **Command Inhibit (CMD)** bit in the *Present State* register before writing to this register. Writing to the upper byte of this register triggers SD command generation. The Host Driver has the responsibility to write this register because the Host Controller does not protect for writing when **Command Inhibit (CMD)** is set.

D15 D14	D13	D08	D07 D06	D05	D04	D03	D02	D01 D00
Rsvd	Command Index		Command Type	Data Present Select	Command Index Check Enable	Command CRC Check Enable	Rsvd	Response Type Select

Figure 2-6 : Command Register

	A ((')	D. C. E. H. E. L. C.
Location	Attrib	Register Field Explanation
15-14	Rsvd	Reserved
13-08	RW	Command Index These bits shall be set to the command number (CMD0-63, ACMD0-63) that is specified in bits 45-40 of the Command-Format in the Physical Layer Specification and SDIO Card Specification.
07-06	RW	Command Type
		There are three types of special commands: Suspend, Resume and Abort. These bits shall be set to 00b for all other commands.
		(1) Suspend Command If the Suspend command succeeds, the Host Controller shall assume the SD Bus has been released and that it is possible to issue the next command, which uses the <i>DAT</i> line. The Host Controller shall de-assert Read Wait for read transactions and stop checking busy for write transactions. The interrupt cycle shall start, in 4-bit mode. If the Suspend command fails, the Host Controller shall maintain its current state, and the Host Driver shall restart the transfer by setting <i>Continue Request</i> in the <i>Block Gap Control</i> register. (Refer to 3.12.1 Suspend Sequence) (2) Resume Command The Host Driver re-starts the data transfer by restoring the registers in the range of 000-00Dh. (Refer to Figure 1-4 in section 1.6 for the register map.) The Host Controller shall check for busy before starting write transfers. (3) Abort Command If this command is set when executing a read transfer, the Host Controller shall stop reads to the buffer. If this command is set when executing a write transfer, the Host Controller shall stop driving the <i>DAT</i> line. After issuing the Abort command, the Host Driver should issue a software reset. (Refer to 3.8 Abort Transaction)
		01b Suspend CMD52 for writing "Bus Suspend" in CCCR
		00b Normal Other commands

05	RW	ata Present Select his bit is set to 1 to indicate that data is present and shall be transferred using the <i>DAT</i> line. It is set to 0 for the following: (1) Commands using only <i>CMD</i> line (ex. CMD52). (2) Commands with no data transfer but using busy signal on <i>DAT[0]</i> line (R1b or R5b ex. CMD38)				
		(3) Resume command 1 Data Present 0 No Data Present				
04	RW	Command Index Check Enable If this bit is set to 1, the Host Controller shall check the Index field in the response to see if it has the same value as the command index. If it is not, it is reported as a Command Index Error. If this bit is set to 0, the Index field is not checked.				
		1 Enable 0 Disable				
03	RW	Command CRC Check Enable If this bit is set to 1, the Host Controller shall check the CRC field in the response. If an error is detected, it is reported as a Command CRC Error. If this bit is set to 0, the CRC field is not checked. The position of CRC field is determined according to the length of the response. (Refer to definition in D01-00 and Table 2-10 below.) 1				
02	Rsvd	Reserved				
01-00	RW	Response Type Select				
		00 No Response				
		01 Response Length 136				
		10 Response Length 48				
		11 Response Length 48 check Busy after response				

Table 2-9: Command Register

Response Type	Index Check Enable	CRC Check Enable	Name of Response Type
00	0	0	No Response
01	0	1	R2
10	0	0	R3, R4
10	1	1	R1, R5, R6, R7
11	1	1	R1b, R5b

Table 2-10: Relation Between Parameters and the Name of Response Type

These bits determine Response types.

Note: In the SDIO specification, response type notation of R5b is not defined. R5 includes R5b in the SDIO specification. But R5b is defined in this specification to specify the Host Controller shall check busy after receiving response. For example, usually CMD52 is used as R5 but I/O abort command shall be used as R5b.

Implementation Note: the CRC field for R3 and R4 is expected to be all "1" bits. The CRC check should be disabled for these response types.

2.2.7. Response Register (Offset 010h)

This register is used to store responses from SD cards.

Offset 010h	D31	D00
	Command Response 0 – 31	
Offset 014h	D31	D00
	Command Response 32 – 63	
Offset 018h	D31	D00
	Command Response 64 – 95	
Offset 01Ch	D31	D00
	Command Response 96 – 127	

Figure 2-7: Response Register

Location	Attrib	Register Field Explanation
127-00	ROC	Command Response
		The Table 2-12 describes the mapping of command responses from the SD Bus to this register for each response type. In the table, R[] refers to a bit range within the response data as transmitted on the SD Bus, REP[] refers to a bit range within the <i>Response</i> register.

Table 2-11: Response Register

Kind of Response	Meaning of Response	Response Field	Response Register
R1, R1b (normal response)	Card Status	R [39:8]	REP [31:0]
R1b (Auto CMD12 response)	Card Status for Auto CMD12	R [39:8]	REP [127:96]
R2 (CID, CSD register)	CID or CSD reg. incl.	R [127:8]	REP [119:0]
R3 (OCR register)	OCR register for memory	R [39:8]	REP [31:0]
R4 (OCR register)	OCR register for I/O etc	R [39:8]	REP [31:0]
R5,R5b	SDIO response	R [39:8]	REP [31:0]
R6 (Published RCA response)	New published RCA[31:16] etc	R [39:8]	REP [31:0]

Table 2-12: Response Bit Definition for Each Response Type.

The Response Field indicates bit positions of "Responses" defined in the Physical Layer Specification.

The Table 2-12 shows that most responses with a length of 48 (R[47:0]) have 32 bits of the response data (R[39:8]) stored in the *Response* register at REP[31:0]. Responses of type R1b (Auto CMD12 responses) have response data bits R[39:8] stored in the *Response* register at REP[127:96]. Responses with length 136 (R[135:0]) have 120 bits of the response data (R[127:8]) stored in the *Response* register at REP[119:0].

To be able to read the response status efficiently, the Host Controller only stores part of the response data in the *Response* register. This enables the Host Driver to read 32 bits of response data efficiently in one read cycle on a 32-bit bus system. Parts of the response, the Index field and the CRC, are checked by the Host Controller (as specified by the **Command Index Check Enable** and the **Command CRC Check Enable** bits in the *Command* register) and generate an error interrupt if an error is detected. The bit range for the CRC check depends on the response length. If the response length is 48, the Host Controller shall check R[47:1], and if the response length is 136 the Host Controller shall check R[119:1].

Since the Host Controller may have a multiple block data DAT line transfer executing concurrently with a CMD_wo_DAT command, the Host Controller stores the Auto CMD12 response in the upper bits (REP[127:96]) of the *Response* register. The CMD_wo_DAT response is stored in REP[31:0]. This allows the Host Controller to avoid overwriting the Auto CMD12 response with the CMD_wo_DAT and vice versa.

When the Host Controller modifies part of the *Response* register, as shown in the Table 2-12, it shall preserve the unmodified bits.

2.2.8. Buffer Data Port Register (Offset 020h)

32-bit data port register to access internal buffer.



Figure 2-8 : Buffer Data Port Register

Buffer can be accessed through 32-bit Data Port register. Refer to 1.7

Location	Attrib	Register Field Explanation
31-00	RW	Buffer Data
		The Host Controller buffer can be accessed through this 32-bit Data Port register.
		Refer to 1.7

Table 2-13: Buffer Data Port Register

2.2.9. Present State Register (Offset 024h)

The Host Driver can get status of the Host Controller from this 32-bit read only register.

D31				D25	D24	D23	D20	D19	D18	D17	D16
	Rsv	d			CMD Line Signal Level	DAT[3:0] Line Level	Signal	Write Protect Switch Pin Level	Card Detect Pin Level	Card State Stable	Card Inserted
D15	D12	D11	D10	D09	D08	D07		D03	D02	D01	D00
Rsvd		Buffer Read Enable	Buffer Write Enable	Read Transfer Active	Write Transfer Active	R	svd		DAT Line Active	Command Inhibit (DAT)	Command Inhibit (CMD)

Figure 2-9 : Present State Register

Location	Attrib	Register Field Explanation					
31-25	Rsvd	Reserved					
24	RO	CMD Line Signal Level This status is used to check the CMD line level to recover from errors, and for debugging.					
23-20	RO	DAT[3:0] Line Signal Level This status is used to check the <i>DAT</i> line level to recover from errors, and for debugging. This is especially useful in detecting the busy signal level from <i>DAT</i> [0]. D23 DAT[3] D22 DAT[2] D21 DAT[1] D20 DAT[0]					
19	RO	Write Protect Switch Pin Level The Write Protect Switch is supported for memory and combo cards. This bit reflects the SDWP# pin. 1 Write enabled (SDWP#=1) 0 Write protected (SDWP#=0)					
18	RO	Card Detect Pin Level This bit reflects the inverse value of the SDCD# pin. Debouncing is not performed on this bit. This bit may be valid when Card State Stable is set to 1, but it is not guaranteed because of propagation delay. Use of this bit is limited to testing since it must be debounced by software. 1					

17	RO	Card State Stable This bit is used for testing. If it is 0, the Card Detect Pin Level is not stable. If this bit is set to 1, it means the Card Detect Pin Level is stable. No Card state can be detected by this bit is set to 1 and Card Inserted is set to 0. The Software Reset For All in the Software Reset register shall not affect this bit. 1
16	RO	Card Inserted This bit indicates whether a card has been inserted. The Host Controller shall debounce this signal so that the Host Driver will not need to wait for it to stabilize. Changing from 0 to 1 generates a Card Insertion interrupt in the Normal Interrupt Status register and changing from 1 to 0 generates a Card Removal interrupt in the Normal Interrupt Status register. The Software Reset For All in the Software Reset register shall not affect this bit. If a card is removed while its power is on and its clock is oscillating, the Host Controller shall clear SD Bus Power in the Power Control register (refer to 2.2.11) and SD Clock Enable in the Clock Control register (refer to 2.2.14). When this bit is changed from 1 to 0, the Host Controller shall immediately stop driving CMD and DAT[3:0] (tri-state). In addition, the Host Driver should clear the Host Controller by the Software Reset For All in Software Reset register. The card detect is active regardless of the SD Bus Power. 1

Table 2-14: Present State Register (Part 1)

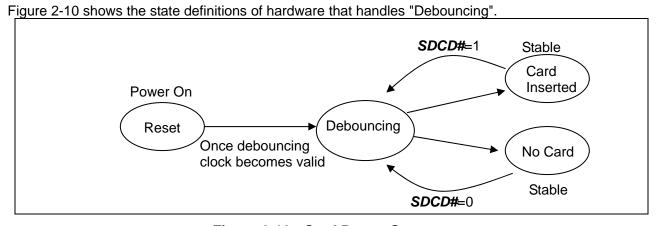


Figure 2-10 : Card Detect State

Implementation Note: The Host Controller starts in "Reset" state at power on and changes to the "Debouncing" state once the debouncing clock is valid. In the "Debouncing" state, if the Host Controller detects that the signal (**SDCD#**) is stable during the debounce period, the state shall change to "Card Inserted" or "No Card". If the card is removed while in the "Card Inserted" state, it will immediately change to the "Debouncing" state. Since the card detect signal is then not stable, the Host Controller will change to the "Debouncing" state.

Location	Attrib							
15-12	Rsvd	Reserved						
11	ROC	Buffer Read Enable						
		This status is used for non-DMA read transfers.						
		The Host Controller may implement multiple buffers to transfer data efficiently. This						
		read only flag indicates that valid data exists in the host side buffer. If this bit is 1,						
		readable data exists in the buffer. A change of this bit from 1 to 0 occurs when all						
		the block data is read from the buffer. A change of this bit from 0 to 1 occurs when						
		block data is ready in the buffer and generates the Buffer Read Ready interrupt.						
		blook data is ready in the buner and generates the buner Read Ready interrupt.						
		1 Read enable						
		0 Read disable						
10	ROC	Buffer Write Enable						
10	NOC	This status is used for non-DMA write transfers.						
		The Host Controller can implement multiple buffers to transfer data efficiently. This						
		read only flag indicates if space is available for write data. If this bit is 1, data can be						
		written to the buffer. A change of this bit from 1 to 0 occurs when all the block data is						
		written to the buffer. A change of this bit from 0 to 1 occurs when top of block data						
		can be written to the buffer and generates the Buffer Write Ready interrupt. The						
		· · · · · · · · · · · · · · · · · · ·						
		Host Controller should neither set Buffer Write Enable nor generate Buffer Write						
		Ready Interrupt after the last block data is written to the Buffer Data Port Register.						
		1 Write enable						
		0 Write disable						
09	ROC	Read Transfer Active						
03	NOC	This status is used for detecting completion of a read transfer. Refer to Section						
		3.12.3 for sequence details.						
		o. 12.0 for obquerios details.						
		This bit is set to 1 for either of the following conditions:						
		(1) After the end bit of the read command.						
		(2) When read operation is restarted by writing a 1 to Continue Request in the						
		Block Gap Control register.						
		3 3 4, 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3						
		This bit is cleared to 0 for either of the following conditions::						
		(1) When the last data block as specified by block length is transferred to the						
		System.						
		(2) In case of ADMA2, end of read operation is designated by Descriptor Table.						
		(3) When all valid data blocks in the Host Controller have been transferred to the						
		System and no current block transfers are being sent as a result of the Stop						
		At Block Gap Request being set to 1.						
		A Transfer Complete interrupt is generated when this bit changes to 0.						
		1 Transferring data						
		0 No valid data						
	L	o No vana data						

08	ROC	Write Transfer Active						
00	NOC	This status indicates a write transfer is active. If this bit is 0, it means no valid write						
		data exists in the Host Controller. Refer to Section 3.12.4 for more details on the						
		sequence of events.						
		This bit is set in either of the following cases:						
		(1) After the end bit of the write command.						
		(2) When write operation is restarted by writing a 1 to Continue Request in the						
		Block Gap Control register.						
		This bit is cleared in either of the following cases: (1) After getting the CRC status of the last data block as specified by the transfer						
		count (Single and Multiple) In case of ADMA2, transfer count is designated by						
		Descriptor Table.						
		(2) After getting the CRC status of any block where data transmission is about to						
		be stopped by a Stop At Block Gap Request .						
		During a write transaction, a Block Gap Event interrupt is generated when this bit						
		is changed to 0, as the result of the Stop At Block Gap Request being set. This						
		status is useful for the Host Driver in determining non DAT line commands can be						
		issued during write busy.						
		1 Transferring data						
		0 No valid data						
07-03	Rsvd	Reserved						
02	ROC	DAT Line Active						
		This bit indicates whether one of the DAT line on SD Bus is in use.						
		(a) In the case of read transactions						
		This status indicates whether a read transfer is executing on the SD Bus. Changing this value from 1 to 0 generates a Block Gap Event interrupt in the <i>Normal</i>						
		Interrupt Status register, as the result of the Stop At Block Gap Request being						
		set. Refer to Section 3.12.3 for details on timing.						
		J J						
		This bit shall be set in either of the following cases:						
		(1) After the end bit of the read command.						
		(2) When writing a 1 to Continue Request in the <i>Block Gap Control</i> register to restart a read transfer.						
		This bit shall be cleared in either of the following cases:						
		(1) When the end bit of the last data block is sent from the SD Bus to the Host						
		Controller. In case of ADMA2, the last block is designated by the last transfer						
		of Descriptor Table.						
		(2) When a read transfer is stopped at the block gap initiated by a Stop At Block						
		Gap Request.						
		The Host Controller shall stop read operation at the start of the interrupt cycle of the						
		next block gap by driving Read Wait or stopping SD clock. If the Read Wait signal is						
		already driven (due to data buffer cannot receive data), the Host Controller can						
		continue to stop read operation by driving the Read Wait signal. It is necessary to						
		support Read Wait in order to use suspend / resume function.						
		(b) In the case of write transactions						
		(b) In the case of write transactions This status indicates that a write transfer is executing on the SD Bus. Changing this						

		Status register. Refer to Section 3.12.4 for sequence details.						
		 This bit shall be set in either of the following cases: After the end bit of the write command. When writing to 1 to Continue Request in the Block Gap Control register continue a write transfer. This bit shall be cleared in either of the following cases: When the SD card releases write busy of the last data block. If SD card do not drive busy signal for 8 SD Clocks, the Host Controller shall consider the card drive "Not Busy". In case of ADMA2, the last block is designated by the last transfer of Descriptor Table. When the SD card releases write busy prior to waiting for write transfer as result of a Stop At Block Gap Request. 						
		(c) Command with busy This status indicates whether a command indicates busy (ex. erase command for memory) is executing on the SD Bus. This bit is set after the end bit of the command with busy and cleared when busy is de-asserted. Changing this bit from 1 to 0 generate a Transfer Complete interrupt in the <i>Normal Interrupt Status</i> register. Refer to Figure 2-11 to Figure 2-13.						
		1 DAT Line Active						
		0 DAT Line Inactive						
	O1 ROC Command Inhibit (DAT) This status bit is generated if either the DAT Line Active or the Active is set to 1. If this bit is 0, it indicates the Host Controller ca SD Command. Commands with busy signal belong to Comman (ex. R1b, R5b type). Changing from 1 to 0 generates a Transinterrupt in the Normal Interrupt Status register. Note: The SD Host Driver can save registers in the range of suspend transaction after this bit has changed from 1 to 0.							
		1 Cannot issue command which uses the DAT line						
00	DOC.							
00	ROC	If this bit is 0, it indicates the <i>CMD</i> line is not in use and the Host Controller can issue a SD Command using the <i>CMD</i> line.						
		This bit is set immediately after the <i>Command</i> register (00Fh) is written. This bit is cleared when the command response is received. Even if the Command Inhibit (DAT) is set to 1, Commands using only the <i>CMD</i> line can be issued if this bit is 0. Changing from 1 to 0 generates a Command Complete interrupt in the <i>Normal Interrupt Status</i> register. If the Host Controller cannot issue the command because of a command conflict error (Refer to Command CRC Error in 2.2.18) or because of Command Not Issued By Auto CMD12 Error (Refer to 2.2.23), this bit shall remain 1 and the Command Complete is not set. Status issuing Auto CMD12 is not read from this bit.						
00	ROC	O Can issue command which uses the <i>DAT</i> line Command Inhibit (CMD) If this bit is 0, it indicates the <i>CMD</i> line is not in use and the Host Controller can issue a SD Command using the <i>CMD</i> line.						

Table 2-15 : Present State Register (Part 2)

Implementation Note:

The Host Driver can issue CMD0, CMD12, CMD13 (for memory) and CMD52 (for SDIO) when the **DAT** lines are busy during data transfer. These commands can be issued when **Command Inhibit** (**CMD**) is set to zero. Other commands shall be issued when **Command Inhibit** (**DAT**) is set to zero. Possible changes to the Physical Layer Specification may add other commands to this list in the future.

Implementation Note:

Some fields defined in the Present State Register change values asynchronous to the system clock. The System reads these statuses through the System Bus Interface and it may require data stable period during bus cycle. The Host Controller should sample and hold values during reads from this register according to the timing required by the System Bus Interface specification.

Figure 2-11 to Figure 2-13 shows the timing of setting and clearing the **Command Inhibit (DAT)** and the **Command Inhibit (CMD)**.

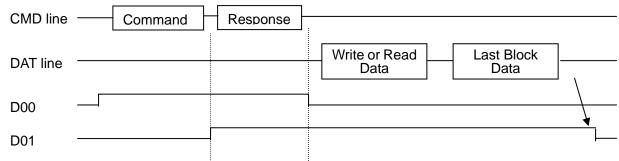


Figure 2-11: Timing of Command Inhibit (DAT) and Command Inhibit (CMD) with data transfer

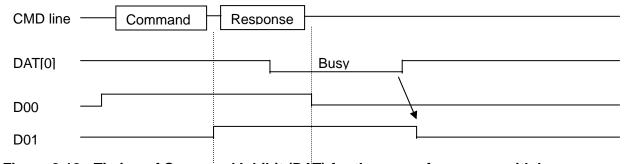


Figure 2-12: Timing of Command Inhibit (DAT) for the case of response with busy

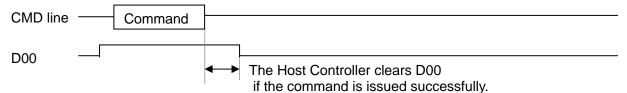


Figure 2-13: Timing of Command Inhibit (CMD) for the case of no response command

2.2.10. Host Control Register (Offset 028h)

D07	D06	D05	D04 D03	D02	D01	D00
Card Detect Signal Selection	Card Detect Test Level	Extended Data Transfer Width	DMA Select	High Speed Enable	Data Transfer Width	LED Control

Figure 2-14 : Host Control Register

Location	Attrib	Register Field Explanation						
07	RW	Card Detect Signal Selection						
		This bit selects source for the card detection.						
		1 The Card Detect Test Level is selected						
		(for test purpose)						
		0 SDCD# is selected (for normal use)						
	When the source for the card detection is switched, the interrupt sl during the switching period by clearing the <i>Interrupt Status/Signa</i> in order to mask unexpected interrupt being caused by the glitch. The <i>Interrupt Status/Signal Enable</i> should be disabled during o debouncing.							
06	RW	Card Detect Test Level This bit is enabled while the Card Detect Signal Selection is set to 1 and it indicates card inserted or not.						
		1 Card Inserted						
		0 No Card						
05	RW	Reserved (New assignment is not allowed)						
04-03	RW	DMA Select One of supported DMA modes can be selected. The host driver shall check support of DMA modes by referring the <i>Capabilities</i> register. Use of selected DMA is determined by DMA Enable of the <i>Transfer Mode</i> register.						
		00 SDMA is selected						
		01 Reserved (Refer to Appendix C)						
		10 32-bit Address ADMA2 is selected 11 64-bit Address ADMA2 is selected						
02	RW							
02	KVV	High Speed Enable This bit is optional. Before setting this bit, the Host Driver shall check the High						
		Speed Support in the Capabilities register. If this bit is set to 0 (default), the Host						
		Controller outputs <i>CMD</i> line and <i>DAT</i> lines at the falling edge of the SD Clock (up to						
		25MHz). If this bit is set to 1, the Host Controller outputs <i>CMD</i> line and <i>DAT</i> lines at						
		the rising edge of the SD Clock (up to 50MHz).						
		1 High Speed mode						
		0 Normal Speed mode						

Data Transfer Width This bit selects the data width of the Host Controller. The Host Driver shall set it to match the data width of the SD card.					
1 4-bit mode					
0 1-bit mode					
LED Control					
This bit is used to caution the user not to remove the card while the SD card is					
being accessed. If the software is going to issue multiple SD commands, this bit					
can be set during all these transactions. It is not necessary to change for each transaction.					
transaction.					
1 LED on					
0 LED off					
7					

Table 2-16 : Host Control Register

2.2.11. Power Control Register (Offset 029h)

D07	D04	D03	D01	D00
Rsvd		SD Bus \ Sele		SD Bus Power

Figure 2-15 : Power Control Register

Location	Attrib	Register Field Explanation					
07-04	Rsvd	Reserved					
03-01	RW	SD Bus Voltage	e Select				
		By setting these	e bits, the Host	Driver selects the voltage level for the SD card.			
		Before setting th	nis register, the H	Host Driver shall check the Voltage Support bits in			
		the Capabilities	register. If an u	insupported voltage is selected, the Host System			
		shall not supply	SD Bus voltage				
		111b	3.3V (Typ.)				
		110b	3.0V (Typ.)				
		101b	1.8V (Typ.)				
		100b – 000b	Reserved				
00	RW	SD Bus Power					
				ost Driver shall set SD Bus Voltage Select . If the			
		Host Controller	Host Controller detects the No Card state, this bit shall be cleared.				
		If this bit is cleared, the Host Controller shall immediately stop driving CMD and					
		DAT[3:0] (tri-state) and drive SDCLK to low level (refer to Section 2.2.14).					
		1 Po	wer on				
		0 Po	wer off				

Table 2-17: Power Control Register

Implementation Note:

The Host Driver has responsibility to supply SD Bus voltage by **SD Bus Power**, according to SD card OCR and supply voltage capabilities depend on the Host System.

If the Host Driver selects an unsupported voltage in the **SD Bus Voltage Select** field, the Host Controller may ignore writes to SD Bus Power and keep its value at zero.

Implementation Note:

The Host System shall not supply SD Bus power when **SD Bus Power** is set to 0 and can supply SD Bus power when **SD Bus Power** is set to 1 depending on the system conditions (ex. Left of the battery).

2.2.12. Block Gap Control Register (Offset 02Ah)

D07	D04	D03	D02	D01	D00
Rsvd		Interrupt At Block Gap	Read Wait Control	Continue Request	Stop At Block Gap Request

Figure 2-16 : Block Gap Control Register

Location	Attrib	Register Field Explanation						
07-04	Rsvd	Reserved						
03	RW	Interrupt At Block Gap This bit is valid only in 4-bit mode of the SDIO card and selects a sample point in the interrupt cycle. Setting to 1 enables interrupt detection at the block gap for a multiple block transfer. Setting to 0 disables interrupt detection during a multiple block transfer. If the SD card cannot signal an interrupt during a multiple block transfer, this bit should be set to 0. When the Host Driver detects an SD card insertion, it shall set this bit according to the CCCR of the SDIO card. 1 Enabled						
02	RW	Read Wait Control The read wait function is optional for SDIO cards. If the card supports read wait, set this bit to enable use of the read wait protocol to stop read data using the DAT[2] line. Otherwise, the Host Controller has to stop the SD Clock to hold read data, which restricts commands generation. When the Host Driver detects an SD card insertion, it shall set this bit according to the CCCR of the SDIO card. If the card does not support read wait, this bit shall never be set to 1 otherwise DAT line conflict may occur. If this bit is set to 0, Suspend/Resume cannot be supported. 1						
01	RWAC	Continue Request This bit is used to restart a transaction, which was stopped using the Stop At Block Gap Request. To cancel stop at the block gap, set Stop At Block Gap Request to 0 and set this bit 1 to restart the transfer. The Host Controller automatically clears this bit in either of the following cases: (1) In the case of a read transaction, the DAT Line Active changes from 0 to 1 as a read transaction restarts. (2) In the case of a write transaction, the Write Transfer Active changes from 0 to 1 as the write transaction restarts. Therefore, it is not necessary for Host Driver to set this bit to 0. If Stop At Block Gap Request is set to 1, any write to this bit is ignored.						
00	RW	Stop At Block Gap Request This bit is used to stop executing read and write transaction at the next block gap for non-DMA, SDMA and ADMA transfers. The Host Driver shall leave this bit set						

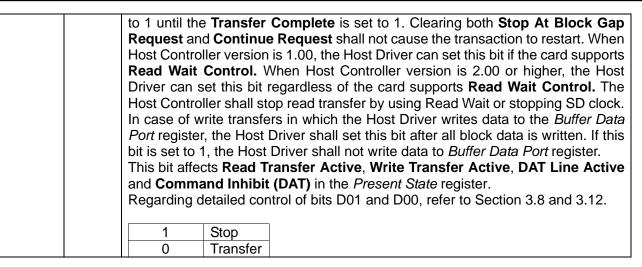


Table 2-18: Block Gap Control Register

There are three cases to restart the transfer after stop at the block gap. Which case is appropriate depends on whether the Host Controller issues a Suspend command or the SD card accepts the Suspend command.

- (1) If the Host Driver does not issue a Suspend command, the **Continue Request** shall be used to restart the transfer.
- (2) If the Host Driver issues a Suspend command and the SD card accepts it, a Resume command shall be used to restart the transfer.
- (3) If the Host Driver issues a Suspend command and the SD card does not accept it, the **Continue Request** shall be used to restart the transfer.

Any time **Stop At Block Gap Request** stops the data transfer, the Host Driver shall wait for **Transfer Complete** (in the *Normal Interrupt Status* register) before attempting to restart the transfer. When restarting the data transfer by **Continue Request**, the Host Driver shall clear **Stop At Block Gap Request** before or simultaneously.

2.2.13. Wakeup Control Register (Offset 02Bh)

This register is mandatory for the Host Controller, but wakeup functionality depends on the Host Controller system hardware and software. The Host Driver shall maintain voltage on the SD Bus, by setting **SD Bus Power** to 1 in the *Power Control* register, when wakeup event via Card Interrupt is desired.

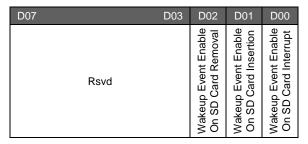


Figure 2-17 : Wakeup Control Register

Location	Attrib	Register Field Explanation							
07-03	Rsvd	Reserved							
02	RW	akeup Event Enable On SD Card Removal							
		is bit enables wakeup event via Card Removal assertion in the Normal Interrupt							
		Status register. FN_WUS (Wake Up Support) in CIS does not affect this bit.							
		1 Enable							
		0 Disable							
01	RW	Wakeup Event Enable On SD Card Insertion							
		This bit enables wakeup event via Card Insertion assertion in the <i>Normal Interrupt</i>							
		Status register. FN_WUS (Wake Up Support) in CIS does not affect this bit.							
		1 Enable							
		0 Disable							
00	RW	Wakeup Event Enable On Card Interrupt							
	1 1 1 1 1	This bit enables wakeup event via Card Interrupt assertion in the <i>Normal Interrupt</i>							
		tatus register. This bit can be set to 1 if FN_WUS (Wake Up Support) in CIS is set							
		o 1.							
		1 Enable							
		0 Disable							

Table 2-19: Wakeup Control Register

2.2.14. Clock Control Register (Offset 02Ch)

At the initialization of the Host Controller, the Host Driver shall set the **SDCLK Frequency Select** according to the *Capabilities* register.

D15	D08	D07 [D03	D02	D01	D00
SDCLK Frequency Select		Rsvd		SD Clock Enable	Internal Clock Stable	Internal Clock Enable

Figure 2-18 : Clock Control Register

Location	Attrib	Register Field Explanation						
15-08	RW	SDCLK Frequency Select This register is used to select the frequency of SDCLK pin. The frequency is not programmed directly; rather this register holds the divisor of the Base Clock Frequency For SD Clock in the Capabilities register. Only the following settings are allowed.						
		80h base clock divided by 256						
		40h base clock divided by 128						
		20h base clock divided by 64						
		10h base clock divided by 32						
		08h base clock divided by 16						
		04h base clock divided by 8						
		02h base clock divided by 4						
		01h base clock divided by 2						
		00h Base clock (10MHz-63MHz)						
		Setting 00h specifies the highest frequency of the SD Clock. When setting multiple bits, the most significant bit is used as the divisor but it should not be set. The three default divider values can be calculated by the frequency that is defined by the Base Clock Frequency For SD Clock in the Capabilities register. 400KHz divider value 25MHz divider value 50MHz divider value According to the Physical Layer Specification, the maximum SD Clock frequency is 25 MHz in normal speed mode and 50MHz in high speed mode, and shall never exceed this limit. The frequency of SDCLK is set by the following formula:						
		Clock Frequency = (Base Clock) / divisor						
		Thus, choose the smallest possible divisor which results in a clock freque that is less than or equal to the target frequency. For example, if the Base Clock Frequency For SD Clock in the <i>Capabilis</i> register has the value 33MHz, and the target frequency is 25MHz, to choosing the divisor value of 01h will yield 16.5MHz, which is the neat frequency less than or equal to the target. Similarly, to approach a clock value of 400KHz, the divisor value of 40h yields the optimal clock value of 258KHz.						

07-03	Rsvd	Reserved							
02	RW	SD Clock Enable The Host Controller shall stop SDCLK when writing this bit to 0. SDCLK Frequency Select can be changed when this bit is 0. Then, the Host Controller shall maintain the same clock frequency until SDCLK is stopped (Stop at SDCLK=0). If the Card Inserted in the Present State register is cleared, this bit shall be cleared.							
		1 Enable							
		0 Disable							
01	ROC	Internal Clock Stable This bit is set to 1 when SD Clock is stable after writing to Internal Clock Enable in this register to 1. The SD Host Driver shall wait to set SD Clock Enable until this bit is set to 1. Note: This is useful when using PLL for a clock oscillator that requires setup time.							
		1 Ready							
		0 Not Ready							
00	RW	Internal Clock Enable This bit is set to 0 when the Host Driver is not using the Host Controller or the Host Controller awaits a wakeup interrupt. The Host Controller should stop its internal clock to go very low power state. Still, registers shall be able to be read and written. Clock starts to oscillate when this bit is set to 1. When clock oscillation is stable, the Host Controller shall set Internal Clock Stable in this register to 1. This bit shall not affect card detection.							
		1 Oscillate 0 Stop							

Table 2-20 : Clock Control Register

2.2.15. Timeout Control Register (Offset 02Eh)

At the initialization of the Host Controller, the Host Driver shall set the **Data Timeout Counter Value** according to the *Capabilities* register.

D07	D04	D03	D00
Rsv	rd		eout Counter alue

Figure 2-19: Timeout Control Register

Location	Attrib	Register Field Explanation
07-04	Rsvd	Reserved
03-00	RW	Data Timeout Counter Value This value determines the interval by which DAT line timeouts are detected. For more information about timeout generation, refer to the Data Timeout Error in the Error Interrupt Status register. Timeout clock frequency will be generated by dividing the base clock TMCLK value by this value. When setting this register, prevent inadvertent timeout events by clearing the Data Timeout Error Status Enable (in the Error Interrupt Status Enable register)
		1111b Reserved 1110b TMCLK x 2 ²⁷

Table 2-21: Timeout Control Register

2.2.16. Software Reset Register (Offset 02Fh)

A reset pulse is generated when writing 1 to each bit of this register. After completing the reset, the Host Controller shall clear each bit. Because it takes some time to complete software reset, the SD Host Driver shall confirm that these bits are 0.

D07	D03	D02	D01	D00
Rsvd		Software Reset For DAT Line	Software Reset For CMD Line	Software Reset For All

Figure 2-20 : Software Reset Register

Location	Attrib	Register Field Explanation						
07-03	Rsvd	Reserved						
02	RWAC	Software Reset For DAT Line						
		Only part of data circuit is reset. DMA circuit is also reset.						
		ne following registers and bits are cleared by this bit:						
		Buffer Data Port register						
		Buffer is cleared and initialized.						
		Present State register						
		Buffer Read Enable						
		Buffer Write Enable						
		Read Transfer Active						
		Write Transfer Active						
		DAT Line Active						
		Command Inhibit (DAT)						
		Block Gap Control register						
		Continue Request Stop At Block Gap Request						
		Normal Interrupt Status register						
		Buffer Read Ready Buffer Write Ready						
		DMA Interrupt						
		Block Gap Event						
		Transfer Complete						
		Tanoisi complete						
		1 Reset						
		0 Work						

	D14/4.0								
01	RWAC	Software Reset For CMD Line							
		Only part of command circuit is reset.							
		The following registers and bits are cleared by this bit:							
		Present State register							
		Command Inhibit (CMD)							
		` ,							
		Normal Interrupt Status register							
		Command Complete							
		1 Reset							
		0 Work							
00	RWAC	Software Reset For All							
		This reset affects the entire Host Controller except for the card detection circuit.							
		Register bits of type ROC, RW, RW1C, RWAC are cleared to 0. During its							
		initialization, the Host Driver shall set this bit to 1 to reset the Host Controller. The							
		Host Controller shall reset this bit to 0 when <i>Capabilities</i> registers are valid and							
		the Host Driver can read them. Additional use of Software Reset For All may not							
		affect the value of the Capabilities registers. If this bit is set to 1, the host driver							
		should issue reset command and reinitialize the SD card.							
		1 Reset							
		0 Work							

Table 2-22 : Software Reset Register

2.2.17. Normal Interrupt Status Register (Offset 030h)

The Normal Interrupt Status Enable affects reads of this register, but Normal Interrupt Signal Enable does not affect these reads. An interrupt is generated when the Normal Interrupt Signal Enable is enabled and at least one of the status bits is set to 1. For all bits except **Card Interrupt** and **Error Interrupt**, writing 1 to a bit clears it; writing to 0 keeps the bit unchanged. More than one status can be cleared with a single register write. The **Card Interrupt** is cleared when the card stops asserting the interrupt; that is, when the Card Driver services the interrupt condition.

D15	D14 D09	D08	D07	D06	D05	D04	D03	D02	D01	D00
Error Interrupt	Rsvd	Card Interrupt	Card Removal	Card Insertion	Buffer Read Ready	Buffer Write Ready	DMA Interrupt	Block Gap Event	Transfer Complete	Command Complete

Figure 2-21: Normal Interrupt Status Register

Location	Attrib	Register Field Explanation					
15	ROC	Error Interrupt					
		If any of the bits in the <i>Error Interrupt Status</i> register are set, then this bit is					
		set. Therefore the Host Driver can efficiently test for an error by checking					
		this bit first. This bit is read only.					
		1 Error					
		0 No Error					
14-09	Rsvd	Reserved					
08	ROC	Card Interrupt					
		Writing this bit to 1 does not clear this bit. It is cleared by resetting the SD					
		card interrupt factor. In 1-bit mode, the Host Controller shall detect the Card					
		Interrupt without SD Clock to support wakeup. In 4-bit mode, the card					
		interrupt signal is sampled during the interrupt cycle, so there are some					
		sample delays between the interrupt signal from the SD card and the interrupt to the Host System. It is necessary to define how to handle this					
		delay.					
		When this status has been set and the Host Driver needs to start this					
		interrupt service, Card Interrupt Status Enable in the Normal Interrupt					
		Status Enable register shall be set to 0 in order to clear the card interrupt					
		statuses latched in the Host Controller and to stop driving the interrupt					
		signal to the Host System. After completion of the card interrupt service (It					
		should reset interrupt factors in the SD card and the interrupt signal may					
		not be asserted), set Card Interrupt Status Enable to 1 and start sampling					
		the interrupt signal again.					
		1 Generate Card Interrupt					
		0 No Card Interrupt					
07	RW1C	Card Removal					
		This status is set if the Card Inserted in the <i>Present State</i> register changes					
		from 1 to 0.					
		When the Host Driver writes this bit to 1 to clear this status, the status of the					
		Card Inserted in the <i>Present State</i> register should be confirmed. Because					
		the card detect state may possibly be changed when the Host Driver clear this bit and interrupt event may not be generated.					
		tills bit and interrupt event may not be generated.					

		1 Card removed					
		0 Card state stable or Debouncing					
06	RW1C	Card Insertion					
		This status is set if the Card Inserted in the <i>Present State</i> register changes					
		from 0 to 1.					
		When the Host Driver writes this bit to 1 to clear this status, the status of the					
		Card Inserted in the <i>Present State</i> register should be confirmed. Because					
		the card detect state may possibly be changed when the Host Driver clear					
		this bit and interrupt event may not be generated.					
		1 Card inserted					
		0 Card friserted 0 Card state stable or Debouncing					
05	RW1C	Buffer Read Ready					
00	100	This status is set if the Buffer Read Enable changes from 0 to 1. Refer to					
		the Buffer Read Enable in the <i>Present State</i> register.					
		1 Ready to read buffer					
		0 Not ready to read buffer					
04	RW1C	Buffer Write Ready					
		This status is set if the Buffer Write Enable changes from 0 to 1. Refer to					
		the Buffer Write Enable in the <i>Present State</i> register.					
		1 Ready to write buffer					
00	DWAC	0 Not ready to write buffer					
03	RW1C	DMA Interrupt This status is set if the Host Controller detects the Host SDMA Buffer					
		boundary during transfer. Refer to the Host SDMA Buffer Boundary in the					
		Block Size register.					
		Other DMA interrupt factors may be added in the future.					
		In case of ADMA, by setting Int field in the descriptor table, Host Controller					
		generates this interrupt. Suppose that it is used for debugging.					
		This interrupt shall not be generated after the Transfer Complete .					
		1 DMA Interrupt is generated					
	D14/4-0	0 No DMA Interrupt					
02	RW1C	Block Gap Event					
		If the Stop At Block Gap Request in the <i>Block Gap Control</i> register is set,					
		this bit is set when both a read / write transaction is stopped at a block gap. If Stop At Block Gap Request is not set to 1, this bit is not set to 1.					
		in Stop At Block Gap Request is not set to 1, this bit is not set to 1.					
		(1) In the case of a Read Transaction					
		This bit is set at the falling edge of the DAT Line Active Status (When					
		the transaction is stopped at SD Bus timing. The Read Wait shall be					
		supported in order to use this function. Refer to Section 3.12.3 about					
		the detail timing.					
		(2) Case of Write Transaction					
		This bit is set at the falling edge of Write Transfer Active Status (After					
		getting CRC status at SD Bus timing). Refer to Section 3.12.4 for more					
		details on the sequence of events.					
		4 Transaction stepped at the stress					
		1 Transaction stopped at block gap					
		0 No Block Gap Event					

01	RW1C	Transfer Composition This bit is set completed.		transfer and a comm	nand with busy is	
		This bit is This inter transfer is has been stopped a the Stop (After vali 3.12.3 for (2) In the cas This bit is	rupt is generated in a completed as spectread to the Host Syet the block gap and At Block Gap Requid data has been rear more details on the e of a Write Transact set at the falling ed	dge of Read Transfer two cases. The first is cified by data length (Aystem). The second is discompleted the data truest in the Block Gapad to the Host System) as sequence of events. In the DAT Line Action	s when a data After the last data when data has ransfer by setting Control register B. Refer to Section ctive Status. This	
		written to released. gap by se register a the SD ca more deta (3) In the cas	the SD card as spect The second is wher tting Stop At Block and data transfers country and the busy signals on the sequence e of a command wit		nd the busy signa opped at the block Block Gap Contro lata is written to Section 3.12.4 fo	
		The table below	w shows that Trans	f) in the <i>Present State</i> sfer Complete has hidden set to 1, execution of	gher priority thar	
		Relation between Transfer Complete and Data Timeout Error				
		Transfer	Data	Meaning of the stat		
		Complete	Timeout Error			
		0	0	Interrupted by another		
		0	1	Timeout occur during		
		1	Don't Care	Command Execution	complete	
		1 C	ommand execution	is completed]	
			of complete	is completed	_	
		0 10	or combiere		1	

00	RW1C	Command Complete This bit is set when get the end bit of the command response. (Except Auto CMD12) Refer to Command Inhibit (CMD) in the <i>Present State</i> register. The table below shows that Command Timeout Error has higher priority than Command Complete. If both bits are set to 1, it can be considered that the response was not received correctly.				
		Command Complete	Command Timeout Error	Meaning of the status		
		0	0	Interrupted by another factor		
		Don't Care	1	Response not received within 64 SDCLK cycles.		
		1	0	Response received		
			ommand complete			

Table 2-23 : Normal Interrupt Status Register

2.2.18. Error Interrupt Status Register (Offset 032h)

Signals defined in this register can be enabled by the *Error Interrupt Status Enable* register, but not by the *Error Interrupt Signal Enable* register. The interrupt is generated when the *Error Interrupt Signal Enable* is enabled and at least one of the statuses is set to 1. Writing to 1 clears the bit and writing to 0 keeps the bit unchanged. More than one status can be cleared at the one register write.

D15 D12	D11 D10	D09	D08	D07	D06	D05	D04	D03	D02	D01	D00
Vendor Specific Error Status	Rsvd	ADMA Error	Auto CMD12 Error	Current limit Error	Data End Bit Error	Data CRC Error	Data Timeout Error	Command Index Error	Command End Bit Error	Command CRC Error	Command Timeout Error

Figure 2-22 : Error Interrupt Status Register

Location	Attrib	Register Field Explanation		
15-12	RW1C	Vendor Specific Error Status		
		Additional status bits can be defined in this register by the vendor.		
11-10	Rsvd	Reserved		
09	RW1C	ADMA Error		
		This bit is set when the Host Controller detects errors during ADMA based data transfer. The state of the ADMA at an error occurrence is saved in the <i>ADMA Error Status</i> Register,		
		In addition, the Host Controller generates this Interrupt when it detects invalid descriptor data (Valid=0) at the ST_FDS state. ADMA Error State in the <i>ADMA Error Status</i> indicates that an error occurs in ST_FDS state. The Host Driver may find that Valid bit is not set at the error descriptor.		
		1 Error 0 No Error		
80	RW1C	Auto CMD12 Error		
		This bit is set when detecting that one of the bits D00-D04 in <i>Auto CMD12 Error Status</i> register has changed from 0 to 1. This bit is set to 1, not only when the errors in Auto CMD12 occur but also when Auto CMD12 is not executed due to the previous command error.		
		1 Error 0 No Error		

07	RW1C	Current Limit Error By setting the SD Bus Power bit in the Power Control register, the Host Controller is requested to supply power for the SD Bus. If the Host Controller supports the Current Limit function, it can be protected from an illegal card by stopping power supply to the card in which case this bit indicates a failure status. Reading 1 means the Host Controller is not supplying power to SD card due to some failure. Reading 0 means that the Host Controller is supplying power and no error has occurred. The Host Controller may require some sampling time to detect the current limit. If the Host Controller does not support this function, this bit shall always be set to 0.
		0 No Error
06	RW1C	Data End Bit Error Occurs either when detecting 0 at the end bit position of read data which uses the <i>DAT</i> line or at the end bit position of the CRC Status. 1 Error
		0 No Error
05	RW1C	Data CRC Error Occurs when detecting CRC error when transferring read data which uses the DAT line or when detecting the Write CRC status having a value of other than "010". 1
04	RW1C	Data Timeout Error This bit is set when detecting one of following timeout conditions. (1) Busy timeout for R1b,R5b type (2) Busy timeout after Write CRC status (3) Write CRC Status timeout (4) Read Data timeout.
03	RW1C	Command Index Error This bit is set if a Command Index error occurs in the command response.
		1 Error 0 No Error
02	RW1C	Command End Bit Error This bit is set when detecting that the end bit of a command response is 0.
		1 End Bit Error Generated 0 No Error

01	RW1C	Command CRC Error					
		Command CRC Error is generated in two cases.					
		If a response is returned and the Command Timeout Error is set to 0					
		(indicating no timeout), this bit is set to 1 when detecting a CRC error in the					
		command response.					
		The Host Controller detects a CMD line conflict by monitoring the CMD line					
		when a command is issued. If the Host Controller drives the CMD line to 1					
		level, but detects 0 level on the <i>CMD</i> line at the next SD clock edge, then the					
		Host Controller shall abort the command (Stop driving CMD line) and set this					
		bit to 1. The Command Timeout Error shall also be set to 1 to distinguish CMD					
		line conflict (Refer to Table 2-25).					
		1 CRC Error Generated.					
		0 No Error					
00	RW1C	Command Timeout Error					
		This bit is set only if no response is returned within 64 SD clock cycles from the					
		end bit of the command. If the Host Controller detects a CMD line conflict, in					
		which case Command CRC Error shall also be set as shown in Table 2-25,					
		this bit shall be set without waiting for 64 SD clock cycles because the					
		command will be aborted by the Host Controller.					
		1 Time out					
		0 No Error					

Table 2-24: Error Interrupt Status Register

The relation between Command CRC Error and Command Timeout Error is shown in Table 2-25.

Command CRC Error	Command Timeout Error	Kinds of error
0	0	No Error
0	1	Response Timeout Error
1	0	Response CRC Error
1	1	CMD line conflict

Table 2-25: The relation between Command CRC Error and Command Timeout Error

2.2.19. Normal Interrupt Status Enable Register (Offset 034h)

Setting to 1 enables Interrupt Status.

D15	D14	D09	D08	D07	D06	D05	D04	D03	D02	D01	D00
Fixed to 0	Rsvd		Card Interrupt Status Enable	Card Removal Status Enable	Card Insertion Status Enable	Buffer Read Ready Status Enable	Buffer Write Ready Status Enable	DMA Interrupt Status Enable	Block Gap Event Status Enable	Transfer Complete Status Enable	Command Complete Status Enable

Figure 2-23 : Normal Interrupt Status Enable Register

Location	Attrib	Register Field Explanation					
15	RO	Fixed to 0					
		The Host Driver shall control error interrupts using the Error Interrupt Status					
		Enable register.					
14-09	Rsvd	Reserved					
80	RW	Card Interrupt Status Enable					
		If this bit is set to 0, the Host Controller shall clear interrupt request to the					
		System. The Card Interrupt detection is stopped when this bit is cleared					
		and restarted when this bit is set to 1. The Host Driver should clear the Card					
		Interrupt Status Enable before servicing the Card Interrupt and should set this bit again after all interrupt requests from the card are cleared to prevent					
		inadvertent interrupts.					
		madvertent interrupts.					
		1 Enabled					
		0 Masked					
07	RW	Card Removal Status Enable					
		1 Enabled					
		0 Masked					
06	RW	Card Insertion Status Enable					
		1 Enabled					
		0 Masked					
05	RW	Buffer Read Ready Status Enable					
		1 Enabled					
		0 Masked					
04	RW	Buffer Write Ready Status Enable					
04	1200	Buildi White Reday States Enable					
		1 Enabled					
		0 Masked					
03	RW	DMA Interrupt Status Enable					
		1 Enabled					
		0 Masked					

02	RW	Block Gap Event Status Enable
		1 Enabled
		0 Masked
01	RW	Transfer Complete Status Enable
		1 Enabled
		0 Masked
00	RW	Command Complete Status Enable
		1 Enabled
		0 Masked

Table 2-26: Normal Interrupt Status Enable Register

Implementation Note:

The Host Controller may sample the card interrupt signal during interrupt period and may hold its value in the flip-flop. If the **Card Interrupt Status Enable** is set to 0, the Host Controller shall clear all internal signals regarding Card Interrupt.

2.2.20. Error Interrupt Status Enable Register (Offset 036h)

Setting to 1 enables Interrupt Status.

D15 D12	D11 D10	D09	D08	D07	D06	D05	D04	D03	D02	D01	D00
Vendor Specific Error	Rsvd	ADMA Error Status	Auto CMD12 Error	Current Limit Error	Data End Bit Error	Data CRC Error	Data Timeout Error	Command Index Error	Command End Bit	Command CRC Error	Command Timeout
Status Enable		Enable	Status Enable	Status Enable	Status Enable	Status Enable	Status Enable	Status Enable	Error Status Enable	Status Enable	Error Status Enable

Figure 2-24 : Error Interrupt Status Enable Register

Location	Attrib	Register Field Explanation					
15-12	RW	Vendor Specific Error Status Enable					
		1 Enabled					
	<u> </u>	0 Masked					
11-10	Rsvd	Reserved					
09	RW	ADMA Error Status Enable					
		1 Enabled					
		1 Enabled 0 Masked					
08	RW	Auto CMD12 Error Status Enable					
00	1000	Auto Omb 12 Error Guitas Eriabio					
		1 Enabled					
		0 Masked					
07	RW	Current Limit Error Status Enable					
		1 Enabled					
		0 Masked					
06	RW	Data End Bit Error Status Enable					
		1 Enabled					
		0 Masked					
05	RW	Data CRC Error Status Enable					
00	1200	Data ONO Error Status Eriable					
		1 Enabled					
		0 Masked					
04 RW		Data Timeout Error Status Enable					
		1 Enabled					
		0 Masked					
03	RW	Command Index Error Status Enable					
		1 Enabled					
		0 Masked					
		U IVIASNEU					

02	RW	Command End Bit Error Status Enable		
		1 Enabled		
		0 Masked		
01	RW	Command CRC Error Status Enable		
		1 Enabled		
		0 Masked		
00	RW	Command Timeout Error Status Enable		
		1 Enabled		
		0 Masked		

Table 2-27: Error Interrupt Status Enable Register

Implementation Note: To detect CMD line conflict, the Host Driver must set both **Command Timeout Error Status Enable** and **Command CRC Error Status Enable** to 1.

2.2.21. Normal Interrupt Signal Enable Register (Offset 038h)

This register is used to select which interrupt status is indicated to the Host System as the interrupt. These status bits all share the same1 bit interrupt line. Setting any of these bits to 1 enables interrupt generation.

D15	D14	D09	D08	D07	D06	D05	D04	D03	D02	D01	D00
Fixed to 0	Rsvd		Card Interrupt Signal Enable	Card Removal Signal Enable	Card Insertion Signal Enable	Buffer Read Ready Signal Enable	Buffer Write Ready Signal Enable	DMA Interrupt Signal Enable	Block Gap Event Signal Enable	Transfer Complete Signal Enable	Command Complete Signal Enable

Figure 2-25 : Normal Interrupt Signal Enable Register

Location	Attrib	Register Field Explanation
15	RO	Fixed to 0
		The Host Driver shall control error interrupts using the Error Interrupt Signal
		Enable register.
14-09	Rsvd	Reserved
80	RW	Card Interrupt Signal Enable
		1 Enabled
		0 Masked
07	RW	Card Removal Signal Enable
		1 Enabled
00	DIM	0 Masked
06	RW	Card Insertion Signal Enable
		1 Enabled
		1 Enabled 0 Masked
05	RW	Buffer Read Ready Signal Enable
03	IXVV	Bullet Read Ready Signal Eliable
		1 Enabled
		0 Masked
04	RW	Buffer Write Ready Signal Enable
		1 Enabled
		0 Masked
03	RW	DMA Interrupt Signal Enable
		1 Enabled
		0 Masked
02	RW	Block Gap Event Signal Enable
		1 Enabled
	5144	0 Masked
01	RW	Transfer Complete Signal Enable
		1 Enabled
		0 Masked

00	RW	Command	Complete Signal Enable
		1	Enabled
		0	Masked

Table 2-28 : Normal Interrupt Signal Enable Register

2.2.22. Error Interrupt Signal Enable Register (Offset 03Ah)

This register is used to select which interrupt status is notified to the Host System as the interrupt. These status bits all share the same 1 bit interrupt line. Setting any of these bits to 1 enables interrupt generation.

D15 D12	D11 D10	D09	D08	D07	D06	D05	D04	D03	D02	D01	D00
Vendor Specific Error	Rsvd	ADMA Error Signal	Auto CMD12 Error	Current Limit Error	Data End Bit Error	Data CRC Error	Data Timeout Error	Command Index Error	Command End Bit	Command CRC Error	Command Timeout
Signal		Enable	Signal Enable	Signal Enable	Signal Enable	Signal Enable	Signal Enable	Signal Enable	Error Signal Enable	Signal Enable	Error Signal Enable

Figure 2-26 : Error Interrupt Signal Enable Register

Location	Attrib	Register Field Explanation
15-12	RW	Vendor Specific Error Signal Enable
		1 Enabled
44.40		0 Masked
11-10	Rsvd	Reserved
09	RW	ADMA Error Signal Enable
		1 Enabled
		0 Masked
08	RW	Auto CMD12 Error Signal Enable
		1 Enabled
		0 Masked
07	RW	Current Limit Error Signal Enable
		1 Enabled
06	RW	Data End Bit Error Signal Enable
06	KVV	Data End Bit Error Signal Enable
		1 Enabled
		0 Masked
05	RW	Data CRC Error Signal Enable
		<u> </u>
		1 Enabled
		0 Masked
04	RW	Data Timeout Error Signal Enable
		4 Frebled
		1 Enabled 0 Masked
03	RW	Command Index Error Signal Enable
00	1200	Communic mack Error digital Enable
		1 Enabled
		0 Masked

02	RW	Command End Bit Error Signal Enable
		1 Enabled
		0 Masked
01	RW	Command CRC Error Signal Enable
		1 Enabled
		0 Masked
00	RW	Command Timeout Error Signal Enable
		1 Enabled
		0 Masked

Table 2-29 : Error Interrupt Signal Enable Register

2.2.23. Auto CMD12 Error Status Register (Offset 03Ch)

When *Auto CMD12 Error Status* is set, the Host Driver shall check this register to identify what kind of error Auto CMD12 indicated. This register is valid only when the **Auto CMD12 Error** is set.

D15 D0	08 DC	7	D06	D05	D04	D03	D02	D01	D00
Rsvd	mand Not Is	Auto CMD12 Error	Rs	vd	Auto CMD12 Index Error	Auto CMD12 End Bit Error	Auto CMD12 CRC Error	Auto CMD12 Timeout Error	Auto CMD12 not executed

Figure 2-27 : Auto CMD12 Error Status Register

Location	Attrib	Register Field Explanation				
15-08	Rsvd	Reserved				
07	ROC	Command Not Issued By Auto CMD12 Error Setting this bit to 1 means CMD_wo_DAT is not executed due to an Auto CMD12 Error (D04-D01) in this register.				
		1 Not Issued				
		0 No error				
06-05	Rsvd	Reserved				
04	ROC	Auto CMD12 Index Error This bit is set if the Command Index error occurs in response to a command. 1 Error				
		0 No error				
03	ROC	Auto CMD12 End Bit Error This bit is set when detecting that the end bit of command response is 0. 1				
02	ROC	Auto CMD12 CRC Error This bit is set when detecting a CRC error in the command response. 1				
01	ROC	Auto CMD12 Timeout Error This bit is set if no response is returned within 64 SDCLK cycles from the end bit of command. If this bit is set to1, the other error status bits (D04-D02) are meaningless. 1 Time out 0 No error				

00	ROC	Auto CMD12 Not Executed If memory multiple block data transfer is not started due to command error, this bit is not set because it is not necessary to issue Auto CMD12. Setting this bit to 1 means the Host Controller cannot issue Auto CMD12 to stop memory multiple block data transfer due to some error. If this bit is set to 1, other error status bits (D04-D01) are meaningless.
		1 Not executed
		0 Executed

Table 2-30: Auto CMD12 Error Status Register

The relation between Auto CMD12 CRC Error and Auto CMD12 Timeout Error is shown in Table 2-31 :..

Auto CMD12 CRC Error	Auto CMD12 Timeout Error	Kinds of error
0	0	No Error
0	1	Response Timeout Error
1	0	Response CRC Error
1	1	CMD line conflict

Table 2-31: The relation between CRC Error and Timeout Error for Auto CMD12

The timing of changing *Auto CMD12 Error Status* can be classified in three scenarios:

- (1) When the Host Controller is going to issue Auto CMD12 Set D00 to 1 if Auto CMD12 cannot be issued due to an error in the previous command. Set D00 to 0 if Auto CMD12 is issued.
- (2) At the end bit of an Auto CMD12 response Check received responses by checking the error bits D01, D02, D03 and D04. Set to 1 if error is detected. Set to 0 if error is not detected.
- (3) Before reading the Auto CMD12 Error Status bit D07 Set D07 to 1 if there is a command cannot be issued Set D07 to 0 if there is no command to issue

Timing of generating the **Auto CMD12 Error** and writing to the *Command* register are asynchronous. Then D07 shall be sampled when driver never writing to the *Command* register. So just before reading the *Auto CMD12 Error Status* register is good timing to set the D07 status bit.

An Auto CMD12 Error Interrupt is generated when one of the error bits D00 to D04 is set to 1. The **Command Not Issued By Auto CMD12 Error** does not make any effect on interrupt because it is set when one of bits D01 to D04 is set to 1.

2.2.24. Capabilities Register (Offset 040h)

This register provides the Host Driver with information specific to the Host Controller implementation. The Host Controller may implement these values as fixed or loaded from flash memory during power on initialization. Refer to **Software Reset For All** in the *Software Reset* register for loading from flash memory and completion timing control.

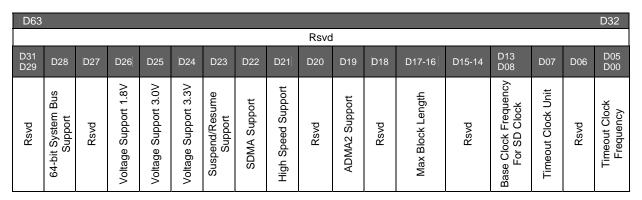


Figure 2-28 : Capabilities Register

Location	Attrib	Register Field Explanation			
63-32	Rsvd	Reserved			
31-29	Rsvd	Reserved			
28	HwInit	64-bit System Bus Support			
		Setting 1 to this bit indicates that the Host Controller supports 64-bit			
		address descriptor mode and is connected to 64-bit address system bus.			
27	Rsvd	Reserved			
		Reserved for voltage support			
26	HwInit	Voltage Support 1.8V			
		1 1.8V Supported			
		0 1.8V Not Supported			
25	HwInit	Voltage Support 3.0V			
		1 3.0V Supported			
		0 3.0V Not Supported			
24	HwInit	Voltage Support 3.3V			
		1 3.3V Supported			
		0 3.3V Not Supported			

Table 2-32 : Capabilities Register (Part 1)

Implementation Note:

The Host System should support 3.3V. 1.8V can be used when low voltage operation is defined in a future version of Physical Layer Specification. The Host Driver sets the **SD Bus Voltage Select** in *Power Control* register according to these support bits. If multiple voltages are supported, select the usable lower voltage by comparing with the OCR value from the SD card.

Location	Attrib	
23	HwInit	Suspend/Resume Support
		This bit indicates whether the Host Controller supports Suspend / Resume
		functionality. If this bit is 0, the Host Driver shall not issue either Suspend or
		Resume commands because the Suspend and Resume mechanism (Refer to
		1.6) is not supported.
		1 Supported
		0 Not Supported
22	HwInit	SDMA Support
		This bit indicates whether the Host Controller is capable of using SDMA to
		transfer data between system memory and the Host Controller directly.
		1 SDMA Supported
		0 SDMA not Supported
21	HwInit	High Speed Support
		This bit indicates whether the Host Controller and the Host System support High
		Speed mode and they can supply SD Clock frequency from 25MHz to 50MHz.
		1 High Speed Supported
00	11 1 2	0 High Speed not Supported
20	HwInit	Reserved (New assignment is not allowed)
19	Hwlnit	Refer to Appendix C. ADMA2 Support
19	HWIIII	This bit indicates whether the Host Controller is capable of using ADMA2.
		This bit indicates whether the riost Controller is capable of using ADMA2.
		1 ADMA2 Supported
		0 ADMA2 not Supported
18	HwInit	Reserved (New assignment is not allowed)
17-16	HwInit	Max Block Length
		This value indicates the maximum block size that the Host Driver can read and
		write to the buffer in the Host Controller. The buffer shall transfer this block size
		without wait cycles. Three sizes can be defined as indicated below. It is noted
		that transfer block length shall be always 512 bytes for SD Memory Cards
		regardless this field.
		00 512(byte)
		01 1024
		10 2048
		11 Reserved
15-14	Rsvd	Reserved

13-08	HwInit	Base Clock Frequency For SD Clock					
		This value indicates the base (maximum) clock frequency for the SD Clock. Unit					
		values are 1MHz. If the real frequency is 16.5MHz, the lager value shall be set					
		01 0001b (17MHz) because the Host Driver use this value to calculate the clock					
		divider value (Refer to the SDCLK Frequency Select in the Clock Control					
		register.) and it shall not exceed upper limit of the SD Clock frequency. The					
		supported clock range is 10MHz to 63MHz. If these bits are all 0, the Host					
		System has to get information via another method.					
		Not 0 1MHz to 63MHz					
		00 0000b Get information via another method					
07	HwInit	Timeout Clock Unit					
		This bit shows the unit of base clock frequency used to detect Data Timeout					
		Error.					
		0 KHz					
		1 MHz					
06	Rsvd	Reserved					
05-00	HwInit	Timeout Clock Frequency					
		This bit shows the base clock frequency used to detect Data Timeout Error .					
		The Timeout Clock Unit defines the unit of this field's value.					
		Timeout Clock Unit =0 [KHz] unit: 1KHz to 63KHz					
		Timeout Clock Unit =1 [MHz] unit: 1MHz to 63MHz					
		Not 0 1KHz to 63KHz or 1MHz to 63MHz					
		00 0000b Get information via another method					

Table 2-33 : Capabilities Register (Part 2)

2.2.25. Maximum Current Capabilities Register (Offset 048h)

These registers indicate maximum current capability for each voltage. The value is meaningful if **Voltage Support** is set in the *Capabilities* register. If this information is supplied by the Host System via another method, all *Maximum Current Capabilities* register shall be 0.

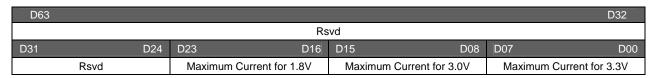


Figure 2-29: Maximum Current Capabilities Register

Location	Attrib	Register Field Explanation
63-56	Rsvd	Reserved
55-48	Rsvd	Reserved
47-40	Rsvd	Reserved
39-32	Rsvd	Reserved
31-24	Rsvd	Reserved
23-16	HwInit	Maximum Current for 1.8V
15-08	HwInit	Maximum Current for 3.0V
07-00	HwInit	Maximum Current for 3.3V

Table 2-34: Maximum Current Capabilities Register

This register measures current in 4mA steps. Each voltage level's current support is described using the Table 2-35.

Register Value	Current Value
0	Get information via another method
1	4mA
2	8mA
3	12mA
255	1020mA

Table 2-35: Maximum Current Value Definition

2.2.26. Slot Interrupt Status Register (Offset 0FCh)

D15 D08	D07 D00
Rsvd	Interrupt Signal For Each Slot

Figure 2-30 : Slot Interrupt Status Register

Location	Attrib	Register Fie	Register Field Explanation			
15-08	Rsvd	Reserved				
07-00	ROC	These statu Signal for e signal is as interrupt is g setting Soft	Interrupt Signal For Each Slot These status bits indicate the logical OR of Interrupt Signal and Wakeup Signal for each slot. A maximum of 8 slots can be defined. If one interrupt signal is associated with multiple slots, the Host Driver can know which interrupt is generated by reading these status bits. By a power on reset or by setting Software Reset For All, the interrupt signal shall be de-asserted and this status shall read 00h.			
		Bit 00 Bit 01 Bit 02	Slot 1 Slot 2 Slot 3			
		Bit 07	Slot 8			

Table 2-36 : Slot Interrupt Status Register

2.2.27. Host Controller Version Register (Offset 0FEh)

D15 D08	D07 D00
Vendor Version Number	Specification Version Number

Figure 2-31: Host Controller Version Register

Location	Attrib	Register Field Explanation			
15-08	HwInit	Vendor Version Number			
		This status is reserved for the vendor version number. The Host Driver			
		should not use this status.			
07-00	HwInit	Specification Version Number			
		This status indicates the Host Controller Spec. Version. The upper and			
		lower 4-bits indicate the version.			
		00 SD Host Specification Version 1.00			
		01 SD Host Specification Version 2.00			
		Including the feature of the ADMA and Test Register,			
		others Reserved			

Table 2-37: Host Controller Version

2.2.28. Force Event Register for Error Interrupt Status (Offset 052h)

The Force Event Register is not a physically implemented register. Rather, it is an address at which the Error Interrupt Status register can be written. The effect of a write to this address will be reflected in the Error Interrupt Status Register if the corresponding bit of the Error Interrupt Status Enable Register is set. Writing 1: set each bit of the Error Interrupt Status Register

Writing 0: no effect

Note: By setting this register, the Error Interrupt can be set in the *Error Interrupt Status* register. In order to generate interrupt signal, both the *Error Interrupt Status Enable* and **Error Interrupt Signal Enable** shall be set.

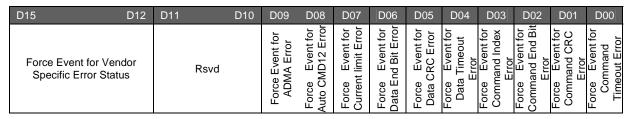


Figure 2-32: Force Event Register for Error Interrupt Status

Location	Attrib	Register Field Explanation				
15-12	WO	Force Event for Vendor Specific Error Status				
		Additional status bits can be defined in this register by the vendor.				
		1 Interrupt is generated				
		0 No Interrupt				
11-10	Rsvd	Reserved				
09	WO	Force Event for ADMA Error				
		1 Interrupt is generated				
		0 No Interrupt				
08	WO	Force Event for Auto CMD12 Error				
		1 Interrupt is generated				
		0 No Interrupt				
07	WO	Force Event for Current Limit Error				
		1 Interrupt is generated				
		0 No Interrupt				
06	WO	Force Event for Data End Bit Error				
		1 Interrupt is generated				
		0 No Interrupt				
05	WO	Force Event for Data CRC Error				
		1 Interrupt is generated				
		0 No Interrupt				
04	WO	Force Event for Data Timeout Error				
		1 Interrupt is generated				
		0 No Interrupt				
03	WO	Force Event for Command Index Error				
		1 Interrupt is generated				
		0 No Interrupt				
02	WO	Force Event for Command End Bit Error				
		1 Interrupt is generated				
		0 No Interrupt				
01	WO	Force Event for Command CRC Error				
		1 Interrupt is generated				
		0 No Interrupt				
00	WO	Force Event for Command Timeout Error				
		1 Interrupt is generated				
		0 No Interrupt				
L	i	- 1.0 monapt				

Table 2-38 : Force Event for Error Interrupt Status Register

2.2.29. Force Event Register for Auto CMD12 Error Status (Offset 050h)

The Force Event Register is not a physically implemented register. Rather, it is an address at which the Auto CMD12 Error Status Register can be written.

Writing 1: set each bit of the Auto CMD12 Error Status Register

Writing 0 : no effect

D15		D08	D07	D06	D05	D04	D03	D02	D01	D00
	Rsvd		Force Event for Command Not Issued by Auto CMD12 Error	Rs	·vd	Force Event for Auto CMD12 Index Error	Force Event for Auto CMD12 End Bit Error	Force Event for Auto CMD12 CRC Error	Force Event for Auto CMD12 Timeout Error	Force Event for Auto CMD12 not executed

Figure 2-33 : Force Event Register for Auto CMD12 Error Status

Location	Attrib	Register Field Explanation				
15-08	Rsvd	Reserved				
07	WO	Force Event for Command Not Issued By Auto CMD12 Error				
		1 Interrupt is generated				
		0 No Interrupt				
06-05	Rsvd	Reserved				
04	WO	Force Event for Auto CMD12 Index Error				
		1 Interrupt is generated				
		0 No Interrupt				
03	WO	Force Event for Auto CMD12 End Bit Error				
		1 Interrupt is generated				
		1 Interrupt is generated 0 No Interrupt				
02	WO	0 No Interrupt Force Event for Auto CMD12 CRC Error				
02	VVO	Force Event for Auto CMD12 CRC Effor				
		1 Interrupt is generated				
		0 No Interrupt				
01	WO	Force Event for Auto CMD12 Timeout Error				
		1 Interrupt is generated				
		0 No Interrupt				
00	WO	Force Event for Auto CMD12 Not Executed				
		1 Interrupt is generated				
		0 No Interrupt				
	l	o No menupi				

Table 2-39: Force Event Register for Auto CMD12 Error Status

2.2.30. ADMA Error Status Register (Offset 054h)

When **ADMA Error** Interrupt is occurred, the **ADMA Error States** field in this register holds the ADMA state and the *ADMA System Address* Register holds the address around the error descriptor. For recovering the error, the Host Driver requires the ADMA state to identify the error descriptor address as follows:

ST_STOP: Previous location set in the ADMA System Address register is the error descriptor address ST_FDS: Current location set in the ADMA System Address register is the error descriptor address ST_CADR: This sate is never set because do not generate ADMA error in this state.

ST_TFR: Previous location set in the ADMA System Address register is the error descriptor address

In case of write operation, the Host Driver should use ACMD22 to get the number of written block rather than using this information, since unwritten data may exist in the Host Controller.

The Host Controller generates the **ADMA Error** Interrupt when it detects invalid descriptor data (Valid=0) at the ST_FDS state. In this case, ADMA Error State indicates that an error occurs at ST_FDS state. The Host Driver may find that the Valid bit is not set in the error descriptor.

D07	D03	D02	D01	D00
Rsvd		ADMA Length Mismatch Error	APMAN Exercises	

Figure 2-34 : ADMA Error Status Register

Location	Attrib	Register Field	Explanation			
07-03	Rsvd	Reserved	Reserved			
02	RW	ADMA Lengt	h Mismatch Error			
		This error occ	curs in the following 2 cases.			
		(1) While Bl	ock Count Enable being set,	the total data length specified by the		
		Descript	or table is different from that	t specified by the Block Count and		
		Block Le	ength.			
		(2) Total dat	a length can not be divided by	the block length.		
			Error			
			0 No Error			
01-00	RW	ADMA Error State				
		This field indicates the state of ADMA when error is occurred during ADMA data				
		transfer. This field never indicates "10" because ADMA never stops in this state.				
		D01 – D00	ADMA Error State when	Contents of SYS_SDR register		
			error is occurred			
			00 ST_STOP (Stop DMA) Points next of the error descriptor			
		01	ST_FDS (Fetch Descriptor) Points the error descriptor			
		10	Never set this state	(Not used)		
		11	ST_TFR (Transfer Data)	Points the next of the error		
				descriptor		

Table 2-40 : ADMA Error Status Register

2.2.31. ADMA System Address Register (Offset 058h)

This register contains the physical Descriptor address used for ADMA data transfer.

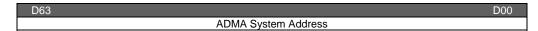


Figure 2-35 : ADMA System Address Register

Location	Attrib	Register Field Explanation		
63-00	RW	ADMA System Address		
		This register holds byte address of executing command of the Descriptor table.		
		32-bit Address Descriptor uses lower 32-bit of this register. At the start of ADMA,		
		the Host Driver shall set start address of the Descriptor table. The ADMA		
		increments this register address, which points to next line, when every fetching a		
		Descriptor line. When the ADMA Error Interrupt is generated, this register shall hold		
		valid Descriptor address depending on the ADMA state. The Host Driver shall		
		program Descriptor Table on 32-bit boundary and set 32-bit boundary address to		
		this register. ADMA2 ignores lower 2-bit of this register and assumes it to be 00b.		
		32-bit Address ADMA		
		Register Value	32-bit System Address]
		xxxxxxxx 00000000h	00000000h	
		xxxxxxxx 00000004h	0000000011 0000000011	
		xxxxxxxx 00000008h	00000008h	
		xxxxxxxx 0000000Ch	0000000Ch	
		xxxxxxxx FFFFFFCh	FFFFFFCh	
		64-bit Address ADMA		
		Register Value	64-bit System Address	-
		00000000 00000000h	00000000 00000000h	
		0000000 0000004h	00000000 00000004h	
		00000000 00000008h	00000000 00000008h	
		00000000 0000000Ch	00000000 0000000Ch	
		FFFFFFFF FFFFFFCh	FFFFFFF FFFFFCh	

Table 2-41: ADMA System Address Register

3. SEQUENCE

This section defines basic sequence flow chart divided into several sub sequences.

"Wait for interrupts" is used in the flow chart. This means the Host Driver waits until specified interrupts are asserted. If already asserted, then fall through that step in the flow chart. Timeout checking shall be always required to detect no interrupt generated but this is not described in the flow chart.

This specification uses the double box like Figure 3-1, (the step (1) in Figure 3-5 and the step (5) in Figure 3-24), It means that the other flows, which already are shown, shall be performed. Therefore, the interrupt may be included in the other flows.

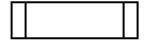


Figure 3-1 : Double Box Notation

3.1. SD Card Detection

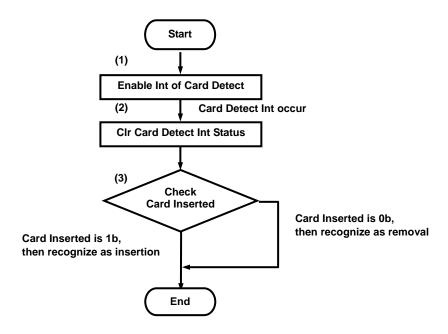


Figure 3-2: SD Card Detect Sequence

The flow chart for detecting a SD card is shown in Figure 3-2. Each step is executed as follows:

To enable interrupt for card detection, write 1 to the following bits:

Card Insertion Status Enable in the Normal Interrupt Status Enable register
Card Insertion Signal Enable in the Normal Interrupt Signal Enable register
Card Removal Status Enable in the Normal Interrupt Status Enable register
Card Removal Signal Enable in the Normal Interrupt Signal Enable register

- (1) When the Host Driver detects the card insertion or removal, clear its interrupt statuses. If **Card Insertion** interrupt is generated, write 1 to **Card Insertion** in the *Normal Interrupt Status* register. If **Card Removal** interrupt is generated, write 1 to **Card Removal** in the *Normal Interrupt Status* register.
- (2) Check **Card Inserted** in the *Present State* register. In the case where **Card Inserted** is 1, the Host Driver can supply the power and the clock to the SD card. In the case where **Card Inserted** is 0, the other executing processes of the Host Driver shall be immediately closed.

If miniSD adaptor is used for standard SD slot and miniSD card is inserted or extracted from the adaptor, card detect interrupt may not be generated. When host does not receive response to any commands, miniSD card is extracted or in idle state, the host should try to re-initialize the card. In this case, all card information shall be re-loaded.

3.2. SD Clock Control

3.2.1. SD Clock Supply Sequence

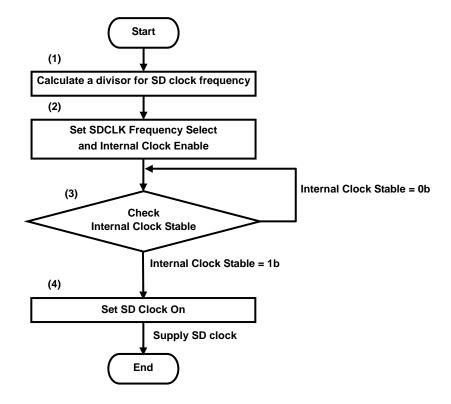


Figure 3-3: SD Clock Supply Sequence

The sequence for supplying SD Clock to a SD card is described in Figure 3-3. The clock shall be supplied to the card before either of the following actions is taken.

- a) Issuing a SD command
- b) Detect an interrupt from a SD card in 4-bit mode.
- (1) Calculate a divisor to determine SD Clock frequency by reading **Base Clock Frequency For SD**Clock in the Capabilities register. If **Base Clock Frequency For SD Clock** is 00 0000b, the Host System shall provide this information to the Host Driver by another method.
- (2) Set Internal Clock Enable and SDCLK Frequency Select in the Clock Control register in accordance with the calculated result of step (1).
- (3) Check Internal Clock Stable in the Clock Control register. Repeat this step until Clock Stable is 1.
- (4) Set **SD Clock Enable** in the *Clock Control* register to 1. Then, the Host Controller starts to supply the SD Clock.

3.2.2. SD Clock Stop Sequence

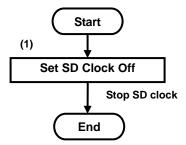


Figure 3-4: SD Clock Stop Sequence

The flow chart for stopping the SD Clock is shown in Figure 3-4. The Host Driver shall not stop the SD Clock when a SD transaction is occurring on the SD Bus -- namely, when either **Command Inhibit (DAT)** or **Command Inhibit (CMD)** in the *Present State* register is set to 1.

(1) Set SD Clock Enable in the Clock Control register to 0. Then, the Host Controller stops supplying the SD Clock.

3.2.3. SD Clock Frequency Change Sequence

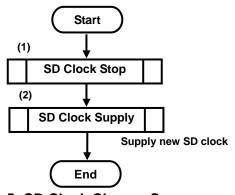


Figure 3-5: SD Clock Change Sequence

The sequence for changing SD Clock frequency is shown in Figure 3-5. When SD Clock is still off, step (1) is omitted. Please refer to Section 3.2.2 for details regarding step (1) and Section 3.2.1 for step (2).

3.3. SD Bus Power Control

The sequence for controlling the SD Bus Power is described in Figure 3-6.

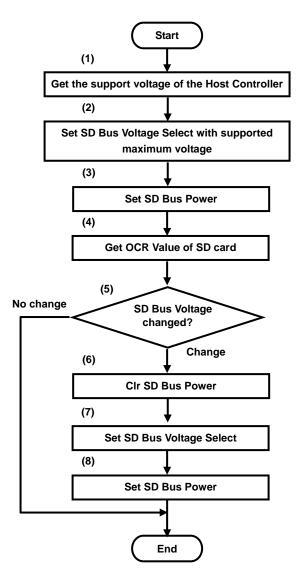


Figure 3-6: SD Bus Power Control Sequence

- (1) By reading the Capabilities register, get the support voltage of the Host Controller.
- (2) Set **SD Bus Voltage Select** in the *Power Control* register with maximum voltage that the Host Controller supports.
- (3) Set **SD Bus Power** in the *Power Control* register to 1.
- (4) Get the OCR value of all function internal of SD card.
- (5) Judge whether SD Bus voltage needs to be changed or not. In case where SD Bus voltage needs to be changed, go to step (6). In case where SD Bus voltage does not need to be changed, go to 'End'.
- (6) Set **SD Bus Power** in the *Power Control* register to 0 for clearing this bit. The card requires voltage rising from 0 volt to detect it correctly. The Host Driver shall clear **SD Bus Power** before changing voltage by setting **SD Bus Voltage Select**.
- (7) Set SD Bus Voltage Select in the Power Control register.
- (8) Set **SD Bus Power** in the *Power Control* register to 1.

Note:

Step (2) and step (3) can be executed at same time. And also, step (7) and step (8) can be executed at same time.

3.4. Changing Bus Width

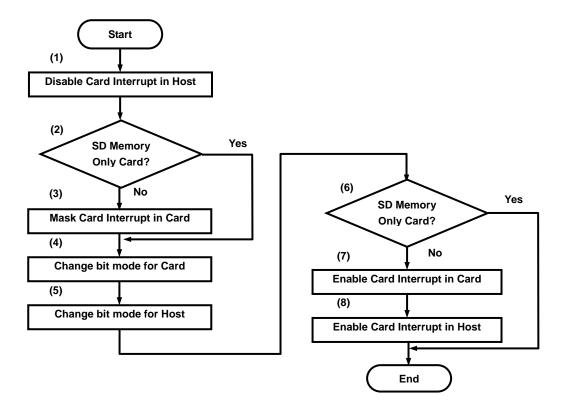


Figure 3-7: Change Bus Width Sequence

The sequence for changing bit mode on SD Bus is shown in Figure 3-7.

- (1) Set **Card Interrupt Status Enable** in the *Normal Interrupt Status Enable* register to 0 for masking incorrect interrupts that may occur while changing the bus width.
- (2) In case of SD memory only card, go to step (4). In case of other card, go to step (3).
- (3) Set "**IENM**" of the CCCR in a SDIO or SD combo card to 0 by CMD52. Please refer to Section 3.7.1 for how to generate CMD52.
- (4) Change the bus width mode for a SD card. SD Memory Card bus width is changed by ACMD6 and SDIO card bus width is changed by setting **Bus Width** of *Bus Interface Control* register in CCCR.
- (5) In case of changing to 4-bit mode, set **Data Transfer Width** in the *Host Control* register to 1. In another case (1-bit mode), set this bit to 0.
- (6) In case of SD memory only card, go to the 'End'. In case of other card, go to step (7).
- (7) Set "IENM" of the CCCR in a SDIO or SD combo card to 1 by CMD52.
- (8) Set Card Interrupt Status Enable in the Normal Interrupt Status Enable register to 1.

Note that If the card is locked, bus width cannot be changed. Unlock the card is required before changing bus width.

3.5. Timeout Setting on DAT Line

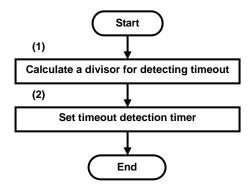



Figure 3-8: Timeout Setting Sequence

In order to detect timeout errors on DAT line, the Host Driver shall execute the following two steps before any SD transaction. For more information regarding SD transactions, refer to Section 3.7.2

- (1) Calculate a divisor to detect timeout errors by reading **Timeout Clock Frequency** and **Timeout Clock Unit** in the *Capabilities* register. If **Timeout Clock Frequency** is 00 0000b, the Host System shall provide this information to the Host Driver by another method.
- (2) Set **Data Timeout Counter Value** in the *Timeout Control* register in accordance with the value from step (1) above.

3.6. Card Initialization and Identification

Figure 3-9 shows new initialization and card identification sequence for the Standard Capacity SD Memory Card and the High Capacity SD Memory Card.

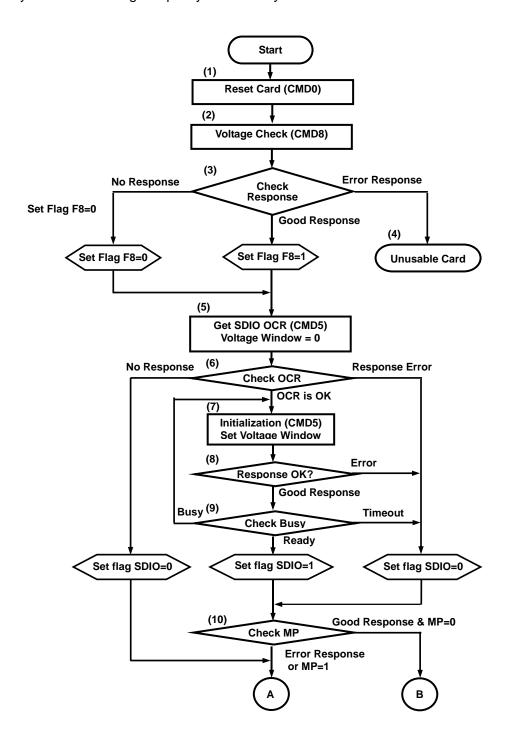

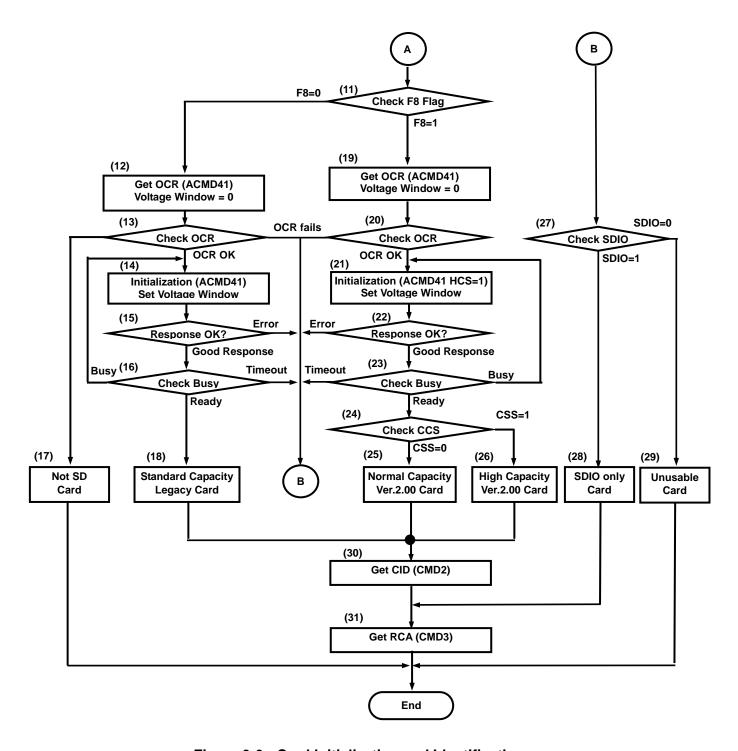


Figure 3-9: Card Initialization and Identification

- (1) SD Bus mode is selected by CMD0 (Keep Pin 1 to high during CMD0 execution).
- (2) New CMD8 shall be issued after CMD0 to support High Capacity SD Memory Card.
- (3) Voltage check command enables the Hosts to support future low voltage specification. However, at this time, only one voltage is defined. Legacy cards and Not SD cards do not respond to CMD8. In this case, set F8 to 0 (F8 is CMD8 valid flag used in step (11)) and go to Step (5). Only Version 2.00 or higher cards can respond to CMD8. The host needs to check whether CRC of the response is valid and whether VHS and check pattern in the argument are equal to VCA and check pattern in the response. Passing all these checks results in CMD8 response OK. In this case, set F8 to 1 and go to step (5). If one of the checks is failed, go to step (4).
- (4) Initialization is stopped by CMD8 fails. The host driver should retry step (1) to (3) one more time. (This is not described in the figure).
- (5) SDIO OCR is available by issuing CMD5 with setting voltage window (bit 23 to 0) in the argument to 0. SDIO initialization is not started.
- (6) No response means the card does not have SDIO function. Set SDIO flag to 0 and go to step (11). If the card responds to CMD5 and the response is OK, go to step (7). If the response is error, set SDIO flag to 0 and go to step (10). SDIO flag indicates whether SDIO functions are initialized or not.
- (7) The SDIO portion starts initialization by CMD5 with setting the supply voltage to the voltage window. If the supplied voltage is not matched with voltage window of card, the card goes into inactive state and does not return the response.
- (8) If no response or error response is receive, set SDIO flag to 0 and go to step (10). If good response is received, go to step (9).
- (9) Check busy status in the response. If busy is released, set SDIO flag to 1 and go to step (10). Repeat from step (7) while busy is indicated. Detecting timeout of 1 second exits the loop. In this case, set SDIO flag to 0 and go to step (10).
- (10) Good response in this step means that all responses received at (6) and (8) are valid. When response is good, MP (memory present) flag in the response can be checked. If the response valid and MP=0, go to step (28). Otherwise, go to step (11).
- (11) Check F8 flag set in step (3). If CMD8 is executed correctly (F8=1), go to step (19). Otherwise, go to step (12).
- (12) OCR is available by issuing ACMD41 with the voltage window (bit 23 to 0) in the argument is set to 0. Memory initialization is not started. The response of CMD55 (ACMD41) may indicate illegal command error due to some SD cards do not recognized CMD8. The Host Driver should ignore this error or issue CMD0 before ACMD41 to clear this error status.
- (13) If response of CMD55 is not received, the card is not SD cards and goes to (17). If the card responds to CMD55, it may also respond to CMD41. If the responses of ACMD41 are OK, go to Step (14). Otherwise, go to step (27). Locked card can be detected by the card status in the response of CMD55.
- (14) The memory portion starts initialization by Issuing ACMD41 with setting the supply voltage to the voltage window. If the supplied voltage is not matched with voltage window of card, the card goes into inactive state and does not return the response.
- (15) If no response or error response is received, go to step (27). If good response is received, go to step (16).
- (16) Check busy status in the response. If busy is released, go to step (18). Repeat from step (14) while busy is indicated. The interval of ACMD41 shall be less than 50ms. Detecting timeout of 1 second exits the loop and go to step (27).
- (17) The host recognizes that the card is not SD memory card and quits SD card initialization.
- (18) The host recognizes that the card is Version 1.xx Standard Capacity SD Memory Card. Go to Step (30).
- (19) OCR is available by issuing ACMD41 with setting the voltage window (bit 23 to 0) in the argument is set to 0. Memory initialization is not started. Setting of HCS does not affect this operation.
- (20) If the card responds to CMD55, it may also respond to CMD41. If the responses of ACMD41 are

- OK, go to Step (21). Otherwise, go to step (27). Locked card can be detected by the card status in the response of CMD55.
- (21) The memory portion starts initialization by Issuing ACMD41 with setting the supply voltage to the voltage window. If the supplied voltage is not matched with voltage window of card, the card goes into inactive state and does not return the response. HCS in the argument is set to 1, which indicates supporting High Capacity Memory Card.
- (22) If no response or error response is received, go to step (27). If good response is received, go to step (23).
- (23) Check busy status in the response. If busy is released, go to step (24). Repeat from step (21) while busy is indicated. The interval of ACMD41 shall be less than 50ms. Detecting timeout of 1 second exits the loop and go to step (27).
- (24) CCS in the response is valid after busy is released. If CCS = 0, it indicates the Standard Capacity SD Memory Card and go to step (25). If CSS = 1, it indicates the High Capacity SD Memory Card and go to Step (26).
- (25) The host recognizes that the card is Standard Capacity SD Memory Card. Optimal functions defined in Version 2.00 or higher are available. Go to Step (30).
- (26) The host recognizes that the card is the High Capacity SD Memory Card. Go to Step (30).
- (27) Check SDIO flag. If SDIO=1, go to step (28). Otherwise, go to step (29).
- (28) The host recognizes that the card is SDIO only card and go to step (31).
- (29) The host recognizes that the card is unusable.
- (30) In case of memory card, CMD2 is issued to get CID and Go to Step (31).
- (31) CMD3 is issued to get RCA. If the RCA number is 0, the Host should issue CMD3 again.

3.7. SD Transaction Generation

This section describes the sequences how to generate and control various kinds of SD transactions. SD transactions are classified into three cases:

- (1) Transactions that do not use the DAT line.
- (2) Transactions that use the DAT line only for the busy signal.
- (3) Transactions that use the DAT line for transferring data.

In this specification the first and the second case's transactions are classified as "Transaction Control without Data Transfer using DAT Line", the third case's transaction is classified as "Transaction Control with Data Transfer using DAT Line".

Refer to the latest SD Physical Layer Specification and SDIO Specification for more detail about SD commands specification.

3.7.1. Transaction Control without Data Transfer Using DAT Line

In this section, the sequence for how to issue SD Command and how to complete SD Command is explained. Figure 3-10 shows the sequence to issue a SD Command and Figure 3-11 shows the sequence to finalize a SD Command.

3.7.1.1. The sequence to issue a SD Command

The sequence to issue the SD Command is detailed below.

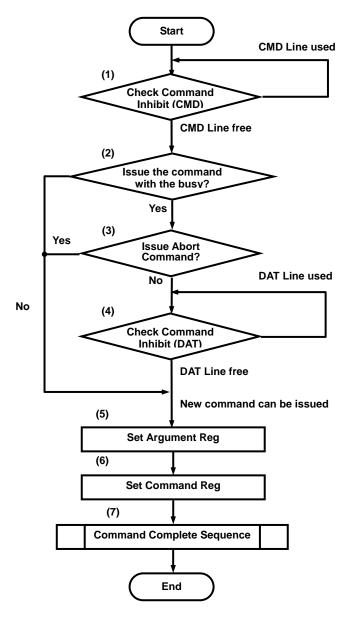


Figure 3-10: SD Command Issue Sequence

- (1) Check **Command Inhibit (CMD)** in the *Present State* register. Repeat this step until **Command Inhibit (CMD)** is 0. That is, when **Command Inhibit (CMD)** is 1, the Host Driver shall not issue a SD Command.
- (2) If the Host Driver issues a SD Command with busy signal, go to step (3). If without busy signal, go to step (5).
- (3) If the Host Driver issues an abort command, go to step (5). In the case of no abort command, go to step (4).
- (4) Check **Command Inhibit (DAT)** in the *Present State* register. Repeat this step until **Command Inhibit (DAT)** is set to 0.
- (5) Set the value of command argument to the *Argument* register.
- (6) Set the Command register.
 - Note: Writing the upper byte [3] in the *Command* register causes the host controller to issue a SD command to the SD card.
- (7) Perform Command Completion Sequence in accordance with 3.7.1.2.

3.7.1.2. The sequence to finalize a command

Figure 3-11 shows the sequence to finalize a SD Command. There is a possibility that some errors (Command Index/End bit/CRC/Timeout Error) occur during this sequence.

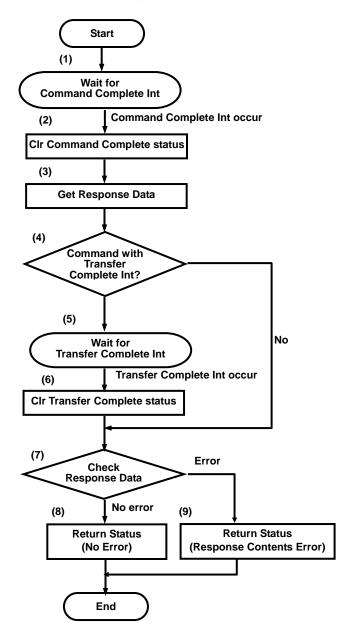


Figure 3-11: Command Complete Sequence

- (1) Wait for the **Command Complete** Interrupt. If the **Command Complete** Interrupt has occurred, go to step (2).
- (2) Write 1 to Command Complete in the Normal Interrupt Status register to clear this bit.
- (3) Read the Response register and get necessary information of the issued command.
- (4) Judge whether the command uses the **Transfer Complete** Interrupt or not. If it uses **Transfer Complete**, go to step (5). If not, go to step (7).
- (5) Wait for the **Transfer Complete** Interrupt. If the **Transfer Complete** Interrupt has occurred, go to step (6).
- (6) Write 1 to **Transfer Complete** in the *Normal Interrupt Status* register to clear this bit.
- (7) Check for errors in Response Data. If there is no error, go to step (8). If there is an error, go to step (9).
- (8) Return Status of "No Error".
- (9) Return Status of "Response Contents Error".
 - Note1: While waiting for the **Transfer Complete** interrupt, the Host Driver shall only issue commands that do not use the busy signal.
 - Note2: The Host Driver shall judge the Auto CMD12 complete by monitoring Transfer Complete.
 - Note3: When the last block of un-protected area is read using memory multiple block read command (CMD18), OUT_OF_RANGE error may occur even if the sequence is correct. The Host Driver should ignore it. This error will appear in the response of Auto CMD12 or in the response of the next memory command.

3.7.2. Transaction Control with Data Transfer Using DAT Line

Depending on whether DMA (optional) is used or not, there are two execution methods. The sequence not using DMA is shown in Figure 3-12 and the sequence using DMA is shown in Figure 3-13.

In addition, the sequences for SD transfers are classified into following three kinds according to how the number of blocks is specified:

- (1) Single Block Transfer:
 - The number of blocks is specified to the Host Controller before the transfer. The number of blocks specified is always one.
- (2) Multiple Block Transfer:
 - The number of blocks is specified to the Host Controller before the transfer. The number of blocks specified shall be one or more.
- (3) Infinite Block Transfer:
 - The number of blocks is not specified to the Host Controller before the transfer. This transfer is continued until an abort transaction is executed. This abort transaction is performed by CMD12 in the case of a SD memory card, and by CMD52 in the case of a SDIO card.

3.7.2.1. Not using DMA

The sequence for not using DMA is shown below.

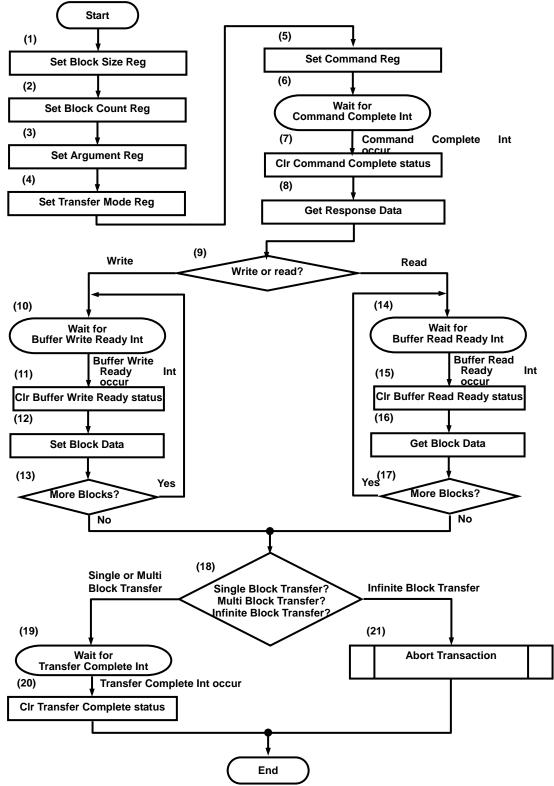


Figure 3-12: Transaction Control with Data Transfer Using DAT Line Sequence (Not using DMA)

- (1) Set the value corresponding to the executed data byte length of one block to *Block Size* register.
- (2) Set the value corresponding to the executed data block count to *Block Count* register in accordance with Table 2-8.
- (3) Set the argument value to *Argument* register.
- (4) Set the value to the *Transfer Mode* register. The host driver determines Multi / Single Block Select, Block Count Enable, Data Transfer Direction, Auto CMD12 Enable and DMA Enable. Multi / Single Block Select and Block Count Enable are determined according to Table 2-8.
- (5) Set the value to *Command* register.

 Note: When writing the upper byte [3] of *Command* register, SD command is issued.
- (6) Then, wait for the Command Complete Interrupt.
- (7) Write 1 to the **Command Complete** in the *Normal Interrupt Status* register for clearing this bit.
- (8) Read Response register and get necessary information of the issued command.
- (9) In the case where this sequence is for write to a card, go to step (10). In case of read from a card, go to step (14).
- (10) Then wait for Buffer Write Ready Interrupt.
- (11) Write 1 to the Buffer Write Ready in the Normal Interrupt Status register for clearing this bit.
- (12) Write block data (in according to the number of bytes specified at the step (1)) to *Buffer Data Port* register.
- (13) Repeat until all blocks are sent and then go to step (18).
- (14) Then wait for the **Buffer Read Ready** Interrupt.
- (15) Write 1 to the Buffer Read Ready in the Normal Interrupt Status register for clearing this bit.
- (16) Read block data (in according to the number of bytes specified at the step (1)) from the *Buffer Data Port* register.
- (17) Repeat until all blocks are received and then go to step (18).
- (18) If this sequence is for Single or Multiple Block Transfer, go to step (19). In case of Infinite Block Transfer, go to step (21).
- (19) Wait for **Transfer Complete** Interrupt.
- (20) Write 1 to the **Transfer Complete** in the *Normal Interrupt Status* register for clearing this bit.
- (21) Perform the sequence for Abort Transaction in accordance with Section 3.8.

 Note: Step (1) and Step (2) can be executed at same time. Step (4) and Step (5) can be executed at same time.

3.7.2.2. Using SDMA

The sequence for using SDMA is shown below.

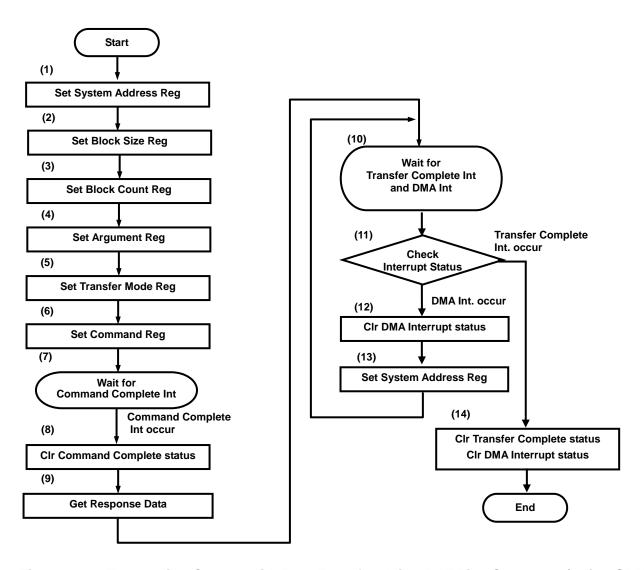


Figure 3-13: Transaction Control with Data Transfer Using DAT Line Sequence (Using SDMA)

- (1) Data location of system memory is set to the SDMA System Address register.
- (2) Set the value corresponding to the executed data byte length of one block in the *Block Size* register.
- (3) Set the value corresponding to the executed data block count in the *Block Count* register in accordance with Table 2-8.
- (4) Set the argument value to the *Argument* register.
- (5) Set the value to the *Transfer Mode* register. The host driver determines **Multi / Single Block Select, Block Count Enable, Data Transfer Direction, Auto CMD12 Enable** and **DMA Enable. Multi / Single Block Select** and **Block Count Enable** are determined according to Table 2-8.
- (6) Set the value to the Command register. Note: When writing to the upper byte [3] of the Command register, the SD command is issued and SDMA is started.
- (7) Then wait for the **Command Complete** Interrupt.
- (8) Write 1 to the **Command Complete** in the *Normal Interrupt Status* register to clear this bit.
- (9) Read Response register and get necessary information of the issued command.
- (10) Wait for the **Transfer Complete** Interrupt and **DMA Interrupt**.
- (11) If **Transfer Complete** is set 1, go to Step (14) else if **DMA Interrupt** is set to 1, go to Step (12).**Transfer Complete** is higher priority than **DMA Interrupt**.
- (12) Write 1 to the **DMA Interrupt** in the *Normal Interrupt Status* register to clear this bit.
- (13) Set the next system address of the next data position to the *System Address* register and go to Step (10).
- (14) Write 1 to the **Transfer Complete** and **DMA Interrupt** in the *Normal Interrupt Status* register to clear this bit.

Note: Step (2) and Step (3) can be executed simultaneously. Step (5) and Step (6) can also be executed simultaneously.

3.7.2.3. Using ADMA

The sequence for using ADMA is shown below.

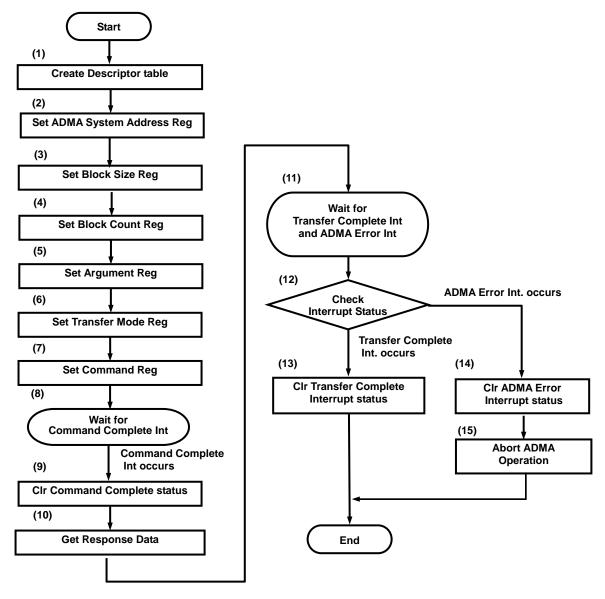


Figure 3-14: Transaction Control with Data Transfer Using DAT Line Sequence (Using ADMA)

- (1) Create Descriptor table for ADMA in the system memory
- (2) Set the Descriptor address for ADMA in the ADMA System Address register.
- (3) Set the value corresponding to the executed data byte length of one block in the *Block Size* register.
- (4) Set the value corresponding to the executed data block count in the *Block Count* register in accordance with Table 2-8.

If the **Block Count Enable** in the *Transfer Mode* register is set to 1, total data length can be designated by the *Block Count* register and the Descriptor Table. These two parameters shall indicate same data length. However, transfer length is limited by the 16-bit *Block Count* register. If the **Block Count Enable** in the *Transfer Mode* register is set to 0, total data length is designated by not *Block Count* register but the Descriptor Table. In this case, ADMA reads more data than length programmed in descriptor from SD card. Too much read operation is aborted asynchronously and extra read data is discarded when the ADMA is completed

- (5) Set the argument value to the Argument register.
- (6) Set the value to the *Transfer Mode* register. The host driver determines Multi / Single Block Select, Block Count Enable, Data Transfer Direction, Auto CMD12 Enable and DMA Enable. Multi / Single Block Select and Block Count Enable are determined according to Table 2-8.
- (7) Set the value to the *Command* register.

Note: When writing to the upper byte [3] of the *Command* register, the SD command is issued and DMA is started.

- (8) Then wait for the **Command Complete** Interrupt.
- (9) Write 1 to the **Command Complete** in the *Normal Interrupt Status* register to clear this bit.
- (10) Read Response register and get necessary information of the issued command.
- (11) Wait for the **Transfer Complete** Interrupt and **ADMA Error Interrupt**.
- (12) If **Transfer Complete** is set 1, go to Step (13) else if **ADMA Error Interrupt** is set to 1, go to Step (14).
- (13) Write 1 to the Transfer Complete Status in the Normal Interrupt Status register to clear this bit.
- (14) Write 1 to the **ADMA Error Interrupt Status** in the *Error Interrupt Status* register to clear this bit.
- (15) Abort ADMA operation. SD card operation should be stopped by issuing abort command. If necessary, the host driver checks *ADMA Error Status* register to detect why **ADMA error** is generated.

Note: Step (3) and Step (4) can be executed simultaneously. Step (6) and Step (7) can also be executed simultaneously.

3.8. Abort Transaction

An abort transaction is performed by issuing CMD12 for a SD memory card and by issuing CMD52 for a SDIO card. There are two cases where the Host Driver needs to do an Abort Transaction. The first case is when the Host Driver stops Infinite Block Transfers. The second case is when the Host Driver stops transfers while a Multiple Block Transfer is executing.

There are two ways to issue an Abort Command. The first is an asynchronous abort. The second is a synchronous abort. In an asynchronous abort sequence, the Host Driver can issue an Abort Command at anytime unless **Command Inhibit (CMD)** in the *Present State* register is set to 1. In a synchronous abort, the Host Driver shall issue an Abort Command after the data transfer stopped by using **Stop At Block Gap Request** in the *Block Gap Control* register.

3.8.1. Asynchronous Abort

The sequence for Asynchronous Abort is shown in Figure 3-15.

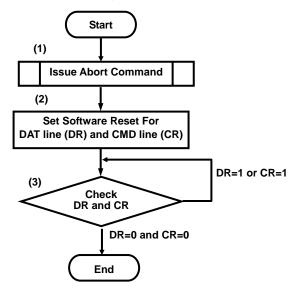


Figure 3-15: Asynchronous Abort Sequence

- (1) Issue Abort Command in accordance with Section 3.7.1
- (2) Set both **Software Reset For DAT Line** and **Software Reset For CMD Line** to 1 in the *Software Reset* register to do software reset.
- (3) Check **Software Reset For DAT Line** and **Software Reset For CMD Line** in the *Software Reset* register. If both **Software Reset For DAT Line** and **Software Reset For CMD Line** are 0, go to "End". If either **Software Reset For DAT Line** or **Software Reset For CMD Line** is 1, go to step (3).

3.8.2. Synchronous Abort

The sequence for Synchronous Abort is shown in Figure 3-16

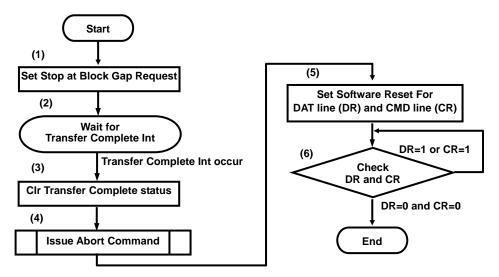


Figure 3-16: Synchronous Abort Sequence

- (1) Set the **Stop At Block Gap Request** in the *Block Gap Control* register to 1 to stop SD transactions.
- (2) Wait for the **Transfer Complete** Interrupt.
- (3) Set the **Transfer Complete** to 1 in the *Normal Interrupt Status* register to clear this bit.
- (4) Issue the Abort Command in accordance with Section 3.7.1
- (5) Set both **Software Reset For DAT Line** and **Software Reset For CMD Line** to 1 in the *Software Reset* register to do software reset.
- (6) Check both **Software Reset For DAT Line** and **Software Reset For CMD Line** in the *Software Reset* register. If both **Software Reset For DAT Line** and **Software Reset For CMD Line** are 0, go to 'End'. If either **Software Reset For DAT Line** or **Software Reset For CMD Line** is 1, go to step (6).

3.9. Changing Bus Speed Mode Setting

This section describes the sequence for switching the bus speed mode; Default Speed and High Speed mode. The switch command (CMD6) is used to change memory card bus speed mode. The EHS bit in the CCCR register is used to change the bus speed mode for SDIO card. In case of Combo card, either of the switch method changes both memory and IO bus speed mode. This means the first switch is effective. Refer to Physical Layer Specification and SDIO Specification for more information about switching bus speed. The sequence for switching bus speed mode for Combo Card is described in Figure 3-17. Note that if the card is locked, bus with cannot be changed. Unlock the card is required before changing bus width.

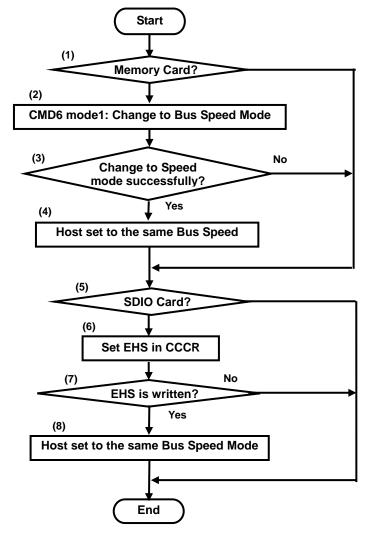


Figure 3-17: High Speed Mode Setting for Combo Card

- (1) The Host Driver should check whether it is memory card and whether the card supports CMD6. The card supports CMD6 when SD_SPEC field in SCR register indicates that the Physical Layer Specification Version is 1.10 or later. If not, go to (5).
- (2) Issue CMD6 with mode 1 to change bus speed mode (Default or High Speed mode).
- (3) Get response of CMD6 and check whether bus speed mode is changed successfully. If bus speed is not changed, go to step (5).
- (4) If the card is changed the bus speed mode successfully, the Host Driver changes the Host Controller bus speed to the same mode.
- (5) The Host Driver should check whether it is SDIO card. If not, go to the end.
- (6) Issue CMD52 to write EHS bit in CCCR to change bus speed mode. (The same bus speed mode of (1) shall be set.)
- (7) Read EHS and check whether EHS is changed as write it. If bus speed is not changed, go to the end.
- (8) If the card is changed the bus speed mode successfully, the Host Driver changes the Host Controller bus speed to the same mode. In case of Combo card, bus speed is already changed at step (4) and this step does not affect changing bus speed.

3.10. Error Recovery

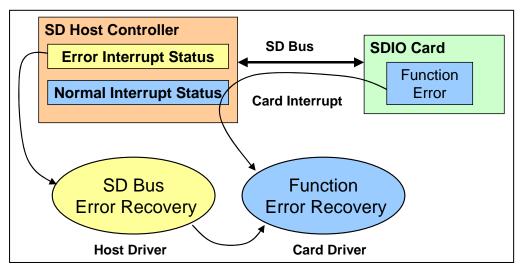


Figure 3-18: Error Report and Recovery

Figure 3-18 shows concept of error report and its recovery. The Host Controller has 2 interrupt status registers. If an error occurs in the SD Bus transaction, one of the bits is set in the *Error Interrupt Status* register. If the function errors occur in the SDIO card, the card interrupt informs these function errors and the **Card interrupt** is set in the *Normal Interrupt Status* register. (The **Card Interrupt** is used to inform not only error statuses but also normal information. For example, to inform function ready.) The Card Driver shall do function error recovery because the Host Driver does not know how to control the function. In the case that function error occurs due to SD Bus error, SD Bus error recovery is required before function error recovery. Abort command is used to recover SD Bus, and then the Host Driver should save error statuses related to SD Bus errors before issuing abort command and transfer these statuses to the Card Driver. These statuses may be used to recover function error. Following explanations are related to SD Bus error recovery. This specification does not specify the function error recovery.

Implementation Note:

If the Card Driver cannot recover the function errors, the Host Driver should try following methods.

(4) Using IOEx for SDIO card

IOEx may be used as the reset per function basis. Sequence is as follows:

Clear **IOEx**=0 and wait until **IORx**=0 and then set **IOEx**=1 again. SDIO may be recovered when IORx=1.

- (5) Using reset command for memory and SDIO card
- Re-initialization sequence is required.
- (6) Off and on power supply for the SD Bus

The card may be recovered by the power on reset. Re-initialization sequence is required.

The two cases where the Host Driver needs the "Error Recovery" sequence are classified as follows:

- (1) Error Interrupt Recovery:
 - If error interrupt is indicated by the *Error Interrupt Status* register, the Host Driver shall apply this sequence.
- (2) Auto CMD12 Error Recovery:
 - If there are errors in Auto CMD12, the Host Driver shall apply this sequence. In terms of Return Status, Auto CMD12 Error Recovery is classified into 4 cases. It is shown in Figure 3-19. If error occurs during memory write transfer, strongly recommend using ACMD22 and then in the following recovery sequence, retry to send remaining blocks not written.

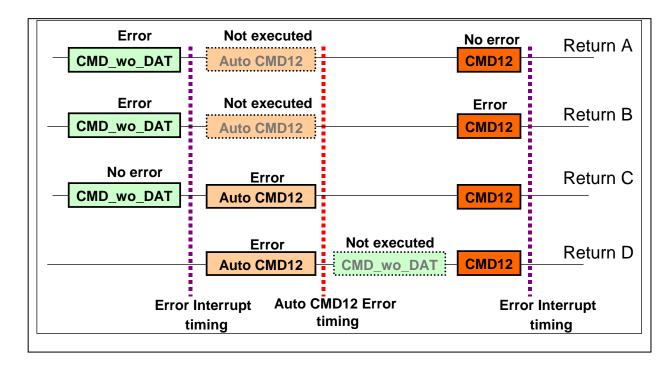


Figure 3-19: Return Status of Auto CMD12 Error Recovery

Implementation Note:

Abort command is used to recover from SD Bus error. SDIO transaction abort using CMD52 returns response but in the case of memory transaction abort using CMD12, response returns depending on the memory card state. If no response returns after issue CMD12, the Host Driver should check card state using CMD13. If the state is "tran" in the CURRENT STATE, consider CMD12 is successful.


Implementation Note:

The following sequence is one possible error recovery flow. There may be another methods, sometimes using interrupts or polling. It can be possible to use another flows, based on Host System requirements.

In these error recovery sequences, return statuses for the next sequence. When the Host Controller cannot issue the next command due to SD Bus error, the error recovery sequences return "Non-recoverable" status. In this case, the Host System may cut off power to the SD Bus, and then power on SD Bus and initialize both the Host Controller and the SD card again.

3.10.1. Error Interrupt Recovery

The sequence for Error Interrupt Recovery is shown in Figure 3-20.

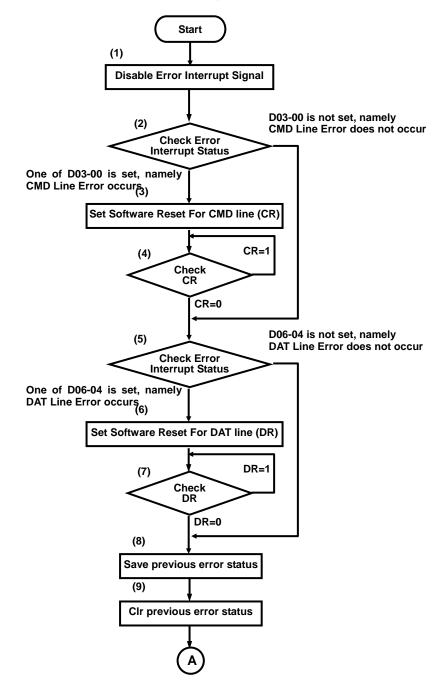

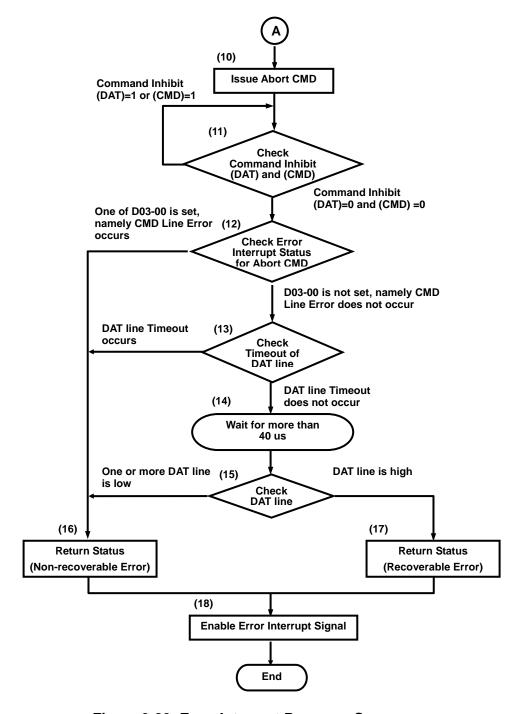


Figure 3-20: Error Interrupt Recovery Sequence

- (1) Disable the Error Interrupt Signal.
- (2) Check bits D03-00 in the *Error Interrupt Status* register. If one of these bits (D03-00) is set to 1, go to step (3). If none are set to 1 (all are 0), go to step (5).
- (3) Set **Software Reset For CMD Line** to 1 in the *Software Reset* register for software reset of the CMD line.
- (4) Check **Software Reset For CMD Line** in the *Software Reset* register. If **Software Reset For CMD Line** is 0, go to step (5). If it is 1, go to step (4).
- (5) Check bits D06-04 in the *Error Interrupt Status* register. If one of these bits (D06-04) is set to 1, go to step (6). If none are set to 1 (all are 0), go to step (8).
- (6) Set **Software Reset For DAT Line** to 1 in the *Software Reset* register for software reset of the DAT line.
- (7) Check **Software Reset For DAT Line** in the *Software Reset* register. If **Software Reset For DAT Line** is 0, go to step (8). If it is 1, go to step (7).
- (8) Save previous error status.
- (9) Clear previous error status with setting them to 1.
- (10) Issue Abort Command.
- (11) Check Command Inhibit (DAT) and Command Inhibit (CMD) in the *Present State* register. Repeat this step until both Command Inhibit (DAT) and Command Inhibit (CMD) are set to 0.
- (12) Check bits D03-00 in the *Error Interrupt Status* register for Abort Command. If one of these bits is set to 1, go to step (16). If none of these bits are set to 1 (all are 0), go to step (13).
- (13) Check **Data Timeout Error** in the *Error Interrupt Status* register. If this bit is set to 1, go to step (16). If it is 0, go to step (14).
- (14) Wait for more than 40 us.
- (15) By monitoring the **DAT [3:0] Line Signal Level** in the *Present State* register, judge whether the level of the DAT line is low or not. If one or more DAT lines are low, go to step (16). If the DAT lines are high, go to step (17).
- (16) Return Status of "Non-recoverable Error".
- (17) Return Status of "Recoverable Error".
- (18) Enable the Error Interrupt Signal.

3.10.2. Auto CMD12 Error Recovery

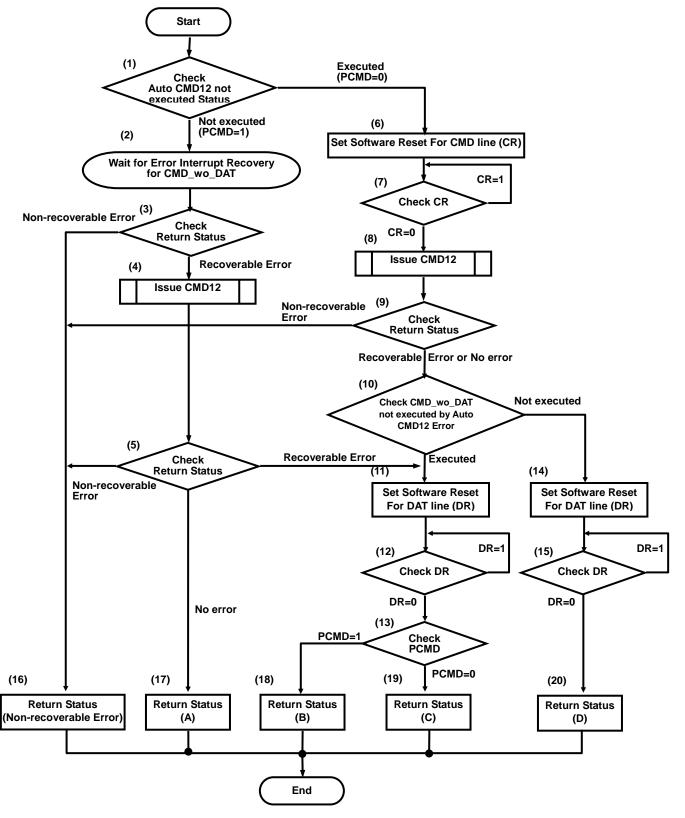


Figure 3-21: Auto CMD12 Error Recovery Sequence

The sequence for Auto CMD12 Error Recovery is shown in Figure 3-21. Following four cases A-D shall be covered.

- A: An error occurred in CMD_wo_DAT, but not in the SD memory transfer.
- B: An error occurred in CMD_wo_DAT, and also occurred in the SD memory transfer.
- C: An error did not occur in CMD wo DAT, but an error occurred in the SD memory transfer.
- D: CMD wo DAT was not issued, and an error occurred in the SD memory transfer.
- (1) Check **Auto CMD12 Not Executed** in the *Auto CMD12 Error Status* register. If this bit is set to 1, go to step (2). If this bit is set to 0, go to step (6). In addition, the Host Driver shall define **PCMD** flag, which changes to 1 if **Auto CMD12 Not Executed** is set to 1.
- (2) Wait for Error Interrupt Recovery for CMD wo DAT.
- (3) Check "Return Status". In the case of "Non-recoverable Error", go to step (16). In the case of "Recoverable Error", go to step (4).
- (4) Issue CMD12 in accordance with Section 3.7.1
- (5) If the *CMD* line errors occur for the CMD12 (One of D03-00 is set in the *Error Interrupt Status* register), "Return Status" is "Non-recoverable Error" and go to step (16). If not *CMD* line error and busy timeout error occur (D04 is set in the *Error Interrupt Status* register), "Return Status" is "Recoverable Error" and go to step (11). Otherwise, "Return Status" is "No error" and go to step (17).
- (6) Set **Software Reset For CMD Line** to 1 in the *Software Reset* register for software reset of the CMD line.
- (7) Check **Software Reset For CMD Line** in the *Software Reset* register. If **Software Reset For CMD Line** is 0, go to step (8). If it is 1, go to step (7).
- (8) Issue CMD12 according to Section 3.7.1. Acceptance of CMD12 depends on the state of the card. CMD12 may make the card to return to tran state. If the card is already in tran state, the card does not response to CMD12.
- (9) Check "Return Status" for CMD12. If "Return Status" returns "Non-recoverable Error", go to step (16). In the case of "Recoverable Error" or "No error", go to step (10).
- (10) Check the **Command Not Issued By Auto CMD12 Error** in the *Auto CMD12 Error Status* register. If this bit is 0, go to step (11). If it is 1, go to step (14).
- (11) Set **Software Reset For DAT Line** to 1 in the *Software Reset* register for software reset of the DAT line.
- (12) Check **Software Reset For DAT Line** in the *Software Reset* register. If **Software Reset For DAT Line** is 0, go to step (13). If it is 1, go to step (12).
- (13) Check the **PCMD** flag. If **PCMD** is 1, go to step (18). If it is 0, go to step (19).
- (14) Set **Software Reset For DAT Line** to 1 in the *Software Reset* register for software reset of the DAT line.
- (15) Check **Software Reset For DAT Line** in the *Software Reset* register. If **Software Reset For DAT Line** is 0, go to step (20). If it is 1, go to step (15).
- (16) Return Status of "Non-recoverable Error".
- (17) Return Status that an error has occurred in CMD wo DAT, but not in the SD memory transfer.
- (18) Return Status that an error has occurred in both CMD_wo_DAT, and the SD memory transfer.
- (19) Return Status that an error has not occurred in CMD_wo_DAT, but has occurred in the SD memory transfer.
- (20) Return Status that CMD_wo_DAT has not been issued, and an error has occurred in the SD memory transfer.

3.11. Wakeup Control (Optional)

After the Host System goes into standby mode, the Host System can resume from standby via a wakeup event initiated by one of the following three events:

- (1) Interrupt from a SD card: If an SD card interrupt occurs, the Host System can resume from standby mode. If the Host System uses this wakeup factor, SD Bus power shall be kept on.
- (2) Insertion of SD card: If a SD card is inserted, the Host System can resume from standby mode.
- (3) Removal of SD card:
 If a SD card is removed, the Host System can resume from standby mode.

The sequence for preparing wakeup before the Host System goes into standby mode is shown in Figure 3-22.

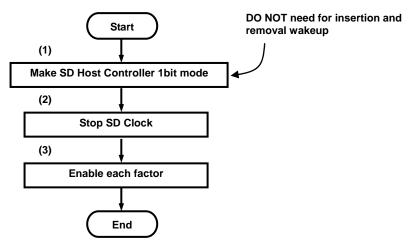


Figure 3-22: Wakeup Control before Standby Mode

- (1) Set **Data Transfer Width** to 0 in the *Host Control* register.
- (2) Set **SD Clock Enable** to 0 in the *Clock Control* register.
- (3) Clear the *Normal Interrupt Status* register and the *Normal Interrupt Signal Enable* register, and then set the enable bits of each wakeup event factor to 1 in the *Wakeup Control* register and set the bits of *Normal Interrupt Status Enable* register to use wakeup.

The sequence for wakeup once in standby mode is shown in Figure 3-23.

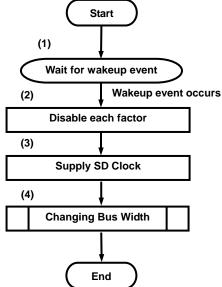


Figure 3-23: Wakeup from Standby

- (1) Wait for wakeup event.
- (2) Set the enable bits of each wakeup event factor to 0 in the *Wakeup Control* register and then clear event statuses in the *Normal Interrupt Status* register. If necessary, set the *Normal Interrupt Signal Enable* register.
- (3) Set SD Clock Enable to 1 in the Clock Control register.
- (4) Set the SD Bus width in accordance with Section 3.4.

3.12. Suspend/Resume (Optional)

If a SD card supports suspend and resume functionality, then the Host Controller can initiate suspend and resume. It is necessary for both the Host Controller and the SD card to support the function of "**Read Wait**". ADMA operation does not support this function.

3.12.1. Suspend Sequence

The sequence for suspend is shown in Figure 3-24.

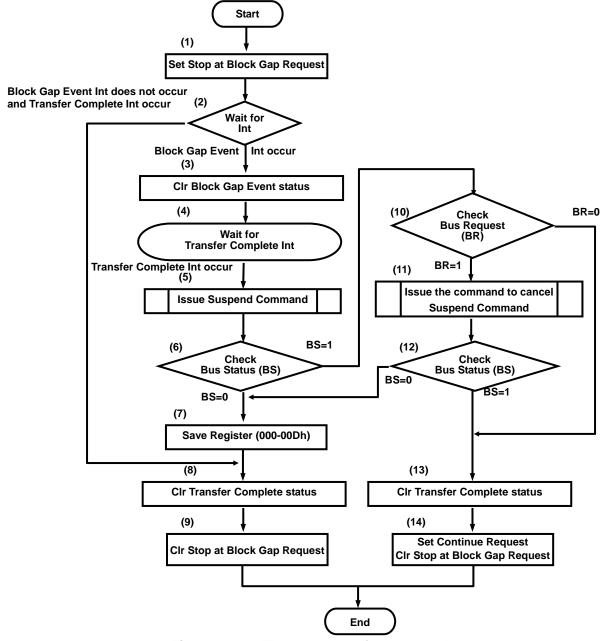


Figure 3-24: The sequence for suspend

- (1) Set **Stop At Block Gap Request** to 1 in the *Block Gap Control* register to stop the SD transaction.
- (2) Wait for an Interrupt. If **Block Gap Event** is set to 0 and **Transfer Complete** is set to 1 in the *Normal Interrupt Status* register, go to step (8). If **Block Gap Event** is set to 1, go to step (3).
- (3) Set **Block Gap Event** to 1 in the *Normal Interrupt Status* register to clear this bit.
- (4) Wait for the **Transfer Complete** Interrupt.
- (5) Issue the Suspend Command in accordance with Section 3.7.1.
- (6) Check the **BS** value of the response data. If **BS** is 0, go to step (7). If **BS** is 1, go to step (10).
- (7) Save the register (000h-00Dh).
- (8) Set Transfer Complete to 1 in the Normal Interrupt Status register to clear this bit.
- (9) Set Stop At Block Gap Request to 0 in the Block Gap Control register to clear this bit.
- (10) Check the **BR** value of the response data. If **BR** is 1, go to step (11). If **BR** is 0, go to step (13).
- (11) Issues the command to cancel the previous suspend command in accordance with Section 3.7.1 Transaction Control without **Data Transfer Using DAT Line**.
- (12) Check the **BS** value of the response data. If BS is 0, go to step (7). If **BS** is 1, go to step (13).
- (13) Set Transfer Complete to 1 in the Normal Interrupt Status register to clear this bit.
- (14) Set **Continue Request** to 1 in the Block Gap Control register to continue the transaction. At the same time, write 0 to **Stop At Block Gap Request** to clear this bit.

The Table 3-1 shows conditions to be able to use Suspend / Resume function.

	Conditions	Suspend/Resume Function		
Host Suspend/Resume Support	Card Suspend/Resume Support	Card Read Wait Support	Write Suspend/Resume	Read Suspend/Resume
Not supported	Don't care	Don't care	Cannot be used	Cannot be used
Supported	Not supported	Don't care	Cannot be used	Cannot be used
Supported	Supported	Not supported	Can be used	Cannot be used
Supported	Supported	Supported	Can be used	Can be used

Table 3-1 Suspend / Resume Condition

3.12.2. Resume Sequence

The sequence for resume is shown in Figure 3-25.

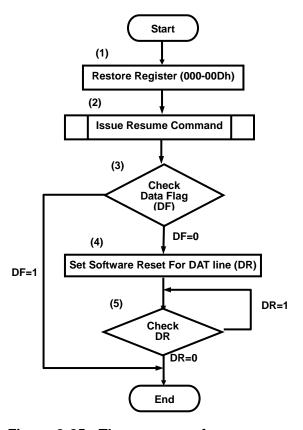


Figure 3-25: The sequence for resume

- (1) Restore the register (000h-00Dh).
- (2) Issue the Resume Command in accordance with Section 3.7.1.
- (3) Check the **DF** value of the response data. If **DF** is 0, go to step (4). If **DF** is 1, go to 'End'.
- (4) Set **Software Reset For DAT Line** to 1 in the *Software Reset* register for software reset of the DAT line.
- (5) Check **Software Reset For DAT Line** in the *Software Reset* register. If **Software Reset For DAT Line** is 0, go to 'End'. If it is 1, go to step (5).

3.12.3. Read transaction wait / continue timing

Implementation Note:

Read Wait, **DAT Line Active** and **Read Transfer Active** shall be set and cleared by the Host Controller.

Stop At Block Gap Request shall be set and cleared by the Host Driver.

Continue Request shall be set by the Host Driver and be cleared by the Host Controller.

Block Gap Event and Transfer Complete shall be set by the Host Controller and be cleared by the Host Driver.

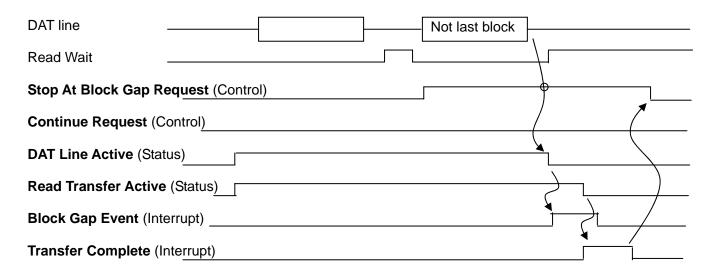


Figure 3-26: Wait read transfer by Stop At Block Gap Request

The Host Controller can accept a **Stop At Block Gap Request** when all the following conditions are met.

- (1) It is at the block gap.
- (2) The Host Controller can assert read wait or it is already asserted.
- (3) **Read Wait Control** is set to 1.

After accepting the Stop At Block Gap Request

- (1) Clear **DAT Line Active** status and generate the **Block Gap Event** Interrupt
- (2) After all valid data has been read (No valid read data remains in the Host Controller), clear the **Read Transfer Active** status and generate the **Transfer Complete** Interrupt.
- (3) After accepting Transfer Complete Interrupt, clear the Stop At Block Gap Request

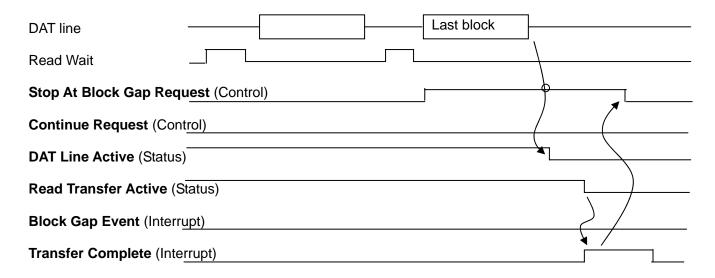


Figure 3-27: Stop At Block Gap Request is not accepted at the last block of the read transfer

If the **Stop At Block Gap Request** is set to 1 during the last block transfer, the Host Controller shall not accept the **Stop At Block Gap Request** and stops the transaction normally. The **Block Gap Event** Interrupt is not generated. When the **Transfer Complete** Interrupt is generated, and if the **Block Gap Event** status is not set to 1, the driver shall clear the **Stop At Block Gap Request**.

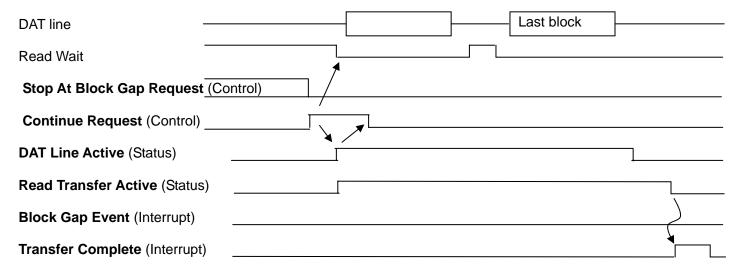


Figure 3-28: Continue read transfer by Continue Request

To restart a stopped data transfer, set the **Continue Request** to 1. (The **Stop At Block Gap Request** shall be set to 0.)

After accepting the Continue Request,

- (1) Release Read Wait (if the data block can accept the next data.)
- (2) Set the **DAT Line Active** status and the **Read Transfer Active** status
- (3) The **Continue Request** is automatically cleared by (2).

The end of the read transfer is specified by data length.

- (1) Clear the **DAT Line Active** status and do not generate the **Block Gap Event** Interrupt.
- (2) After all valid data has been read (No valid read data remains in the Host Controller), clear the **Read Transfer Active** status and generate the **Transfer Complete** Interrupt.

3.12.4. Write transaction wait / continue timing

Implementation Note:

DAT Line Active and **Write Transfer Active** shall be set and cleared by the Host Controller.

Stop At Block Gap Request shall be set and cleared by the Host Driver.

Continue Request shall be set by the Host Driver and be cleared by the Host Controller.

Block Gap Event and Transfer Complete shall be set by the Host Controller and be cleared by the Host Driver.

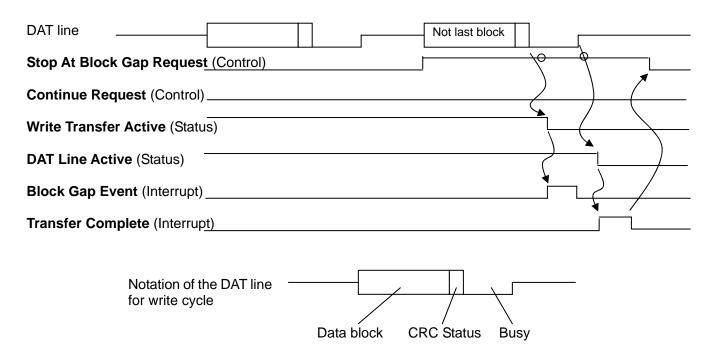


Figure 3-29: Wait write transfer by Stop At Block Gap Request

The Host Controller can accept the Stop At Block Gap Request when matches all following conditions

- (1) It is at the block gap.
- (2) No valid write data remains in the Host Controller

After accepting the **Stop At Block Gap Request**

- (1) Clear the Write Transfer Active Status and generate the Block Gap Event Interrupt
- (2) After the busy signal is released, clear the **DAT Line Active** status and generate the **Transfer Complete** Interrupt.
- (3) After accepting the Transfer Complete Interrupt, clear the Stop At Block Gap Request

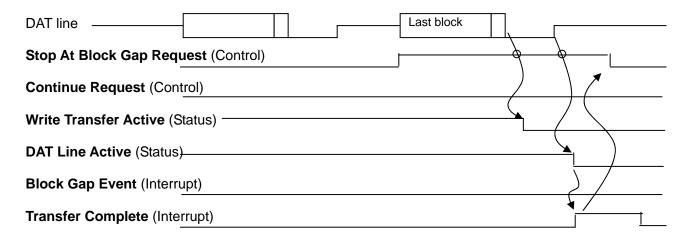


Figure 3-30: Stop At Block Gap Request is not accepted at the last block of the write transfer

If the **Stop At Block Gap Request** is set to 1 during the last block transfer, the Host Controller shall not accept the **Stop At Block Gap Request** and terminates the transaction normally. The **Block Gap Event** Interrupt is not generated. When the **Transfer Complete** Interrupt is generated, and if the **Block Gap Event** Interrupt Status is not set to 1, the driver shall clear the **Stop At Block Gap Request**.

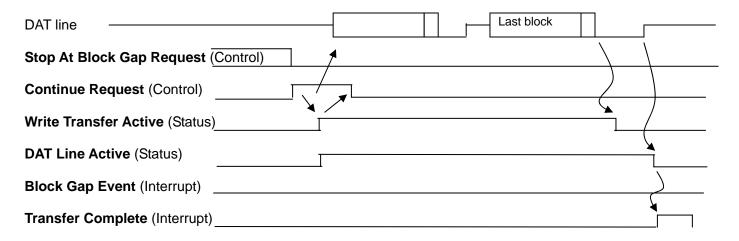


Figure 3-31 : Continue write transfer by Continue Request

To restart a stopped data transfer, set the **Continue Request** to 1. (**Stop At Block Gap Request** shall be set to 0.)

After accepting the **Continue Request:**

- (1) Set the **DAT Line Active** status and the **Write Transfer Active** Status
- (2) The **Continue Request** is automatically cleared by (1).

The end of transfer is specified by data length.

- (1) Clear the Write Transfer Active Status, and do not generate the Block Gap Event Interrupt
- (2) After the busy signal is released, clear the **DAT Line Active** status and generates the **Transfer Complete** Interrupt.

Appendix A: PCI Configuration Register

As regards PCI bus interface, the Host Driver requires some information in the PCI Configuration registers to identify the SD Host Controller. It is specified in Appendix A of this specification.

A.1 Register Maps

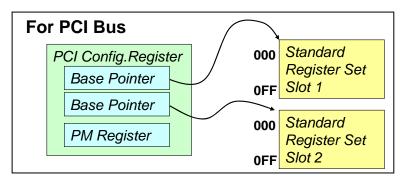


Figure A - 1 : Register Set for PCI Device (Example for 2 slots)

The PCI Configuration register is a special register to support Plug & Play and ACPI power management. The PCI Configuration registers for the PCI Based SD Host Controller is defined as appendix A.

Multiple slots can be supported, though the use of multiple Base Addresses is limited within a single PCI Function. Each of these Base Addresses is configured through the *Base Address* registers at offsets 10h to 24h in the PCI Configuration Space Header. The PCI Specification allows for a PCI Function to have up to six Base Addresses. As such, a PCI Based SD Host Controller can support up to a total of six SD Slots.

A PCI Based SD Host Controller shall configure the *Base Address* register of each supported SD Slot such that it is a memory base address with at least 256 bytes allocated. This allows for enough memory address space in each Base Address to access all of the registers defined in this specification. Each set of the SD registers shall be implemented in a separate Base Address.

The values of Power Management register specified in the PCI Configuration registers should refer to the current and consumption values for all slots combined. It shall be read the total amount of power used by the PCI Based SD Host Controller, whether it has a single slot or multiple slots.

A.2 SD Controller Configuration Register MAP

31	23	15	07 00	Port
Dev	rice ID	Vend	00h	
St	atus	Com	mand	04h
	Class Code		Revision ID	08h
	Header Type			0Ch
	Base Ad	dress(es)		10-27h
				28-2Bh
Subsyste	m Device ID	Subsysten	Nendor ID	2Ch
				30h
			Capability Pointer	34h
				38h
		Interrupt Pin	Interrupt Line	3Ch
			Slot Information	40h
				44-7Fh
Power Manageme	nt Capabilities (PMC)	Next Item Ptr	Capability ID	80h
Data	PMCSR PCI to PCI Bridge Support (PMCSR_BSE)		ent Control/Status CSR)	84h
				88-FFh

Table A - 1 : PCI Configuration Register for Standard SD Host Controller

PCI configuration space is divided into 3 areas.

00h - 3Fh: Registers defined in the PCI Bus Interface Specification 40h - 7Fh: Register area reserved for the SD Host Specification

Slot Information assigns to 40h and 41h-7Fh is reserved for future.

80h - FFh: Register area reserved for vendor unique registers

Implementation Note:

The Host Controller should place Power Management registers anywhere in the vendor unique register area. The offset address of Power Management register is set by *Capability Pointer* register. The Table A - 1 shows the case of offset being 80h (registers from 80h to 87h).

A.3 PCI Configuration Register

PCI Configuration registers are defined in this section that are specific for the PCI Based SD Host Controller. Refer to PCI Specification Ver2.3 for other standard PCI Configuration registers.

A.3.1 Class Code Register (Offset 09h)

D31 D24	D23 D16	D15 D08
Basic Class	Sub Class	Interface Code

Figure A - 2 : PCI Config. Class Code Register

Location	Attrib			
31-24 (0Bh)	RO	Basic Class		
, ,		08h:	General Peripheral	
23-16 (0Ah)	RO	Sub Clas	ss	
		05h:	for SD Host Controller	
15-08 (09h)	RO	Interface	Code	
		00h:		
		01h:	1h: Standard Host supported DMA	
		02h:	Vendor unique SD Host Controller	

Table A - 2 : PCI Config. Class Code Register

A.3.2 Base Address Register (Offset 10h)

Maximum 6 base addresses can be supported, In case of multiple functions controller, these registers are used to point location not only for the SD Host Controller register sets but also for other functions. Refer to Slot Information Register (A.3.3) to identify which base address is used for the SD Host Controller.

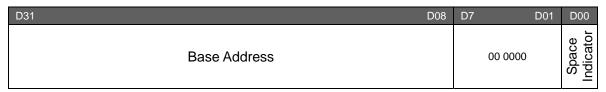


Figure A - 3: PCI Config. Base Address Register

Location	Attrib	
31-08	RW	Base Address
		The SD Host Controller register set is mapped on a memory space of 256bytes
		starting from this base address.
07-01	RO	Fixed to 00 0000b.
00	RO	Space Indicator
		Set to 0 if mapped to the memory space.

Table A - 3 : PCI Config. Base Address Register

Implementation Note:

Multiple slot support Host Controller use Base Address registers at offsets 10h to 24h in the PCI Configuration register. Format of all Base Address registers are the same as this register. Not used Base Address registers shall be zero with RO type.

Offset 10h:	Slot1
Offset 14h:	Slot2
Offset 18h:	Slot3
Offset 1Ch:	Slot4
Offset 20h:	Slot5
Offset 24h:	Slot6

A.3.3 Slot Information Register (Offset 40h)

D07	D06	D04	D03	D02	D00
Reserved	Number of slots	6	Reserved	First Base Address Register Number	5

Figure A - 4 : PCI Config. Slot Information Register

Location	Attrib	
07	Rsvd	Reserved
06-04	RO	Number Of Slots
		These statuses indicate the number of slots the Host Controller supports. In the
		case of single function, maximum 6 slots can be assigned.
		000b: 1 slot
		001b: 2 slot
		010b: 3 slot
		011b: 4 slot
		100b: 5 slot
		101b: 6 slot
03	Rsvd	Reserved
02-00	RO	First Base Address Register Number
		Up to 6 Base Address can be specified in single configuration. These bits indicate
		first Base Address register number assigned for SD Host Controller register set. In
		the case of single function and multiple register sets, contiguous base addresses
		are used. Number Of Slot specifies number of base address.
		000b: Base Address 10h (BAR0)
		001b: Base Address 14h (BAR1)
		010b: Base Address 18h (BAR2)
		011b: Base Address 1Ch (BAR3)
		100b: Base Address 20h (BAR4)
		101b: Base Address 24h (BAR5)

Table A - 4 : PCI Config. Slot Information Register

A.4 The relation between Device State, Power and Clock

The Table A - 5 shows Power Management policies when a SD card is inserted.

State	Card Power	SD Clock	Bus Mode	SD Bus Action
D0	On	On	4 or 1 bit *	Any SD transaction or Interrupt
D1	On	On	4 or 1 bit *	Interrupt only
D2	On	Off	1 bit	Interrupt only
D3 hot	On or Off **	Off	1 bit	Interrupt only
D3 cold	On or Off **	Off	1 bit	Interrupt only

Table A - 5: The relation between Device State, Power and Clock

The relations between card power supply and Device states are shown below:

In the D0 state, while a SD card is inserted or not rejected, card power shall be supplied by setting the **SD Bus Power** in the *Power Control* register. In the D1 or D2 states, the Host Driver shall keep the preceding power supply state. In the D3 state, if the Host System supports card interrupt wakeup, the card power shall keep on. In all states, when the SD card is removed after the card power is supplied, the Host Controller shall shut off the card power and clear the **SD Bus Power** in *Power Control* register automatically.

The relations between the SD Clock and Device states are shown below:

In the D0 state, while the SD card is inserted or not rejected, the SD Clock shall be supplied by setting the SD Clock Enable in the Clock Control register. In the D1 state, the Host Driver shall keep the state of the SD Clock while in the D0 state. In the D2 and D3 states, the Host Controller shall stop the SD Clock regardless of the SD Clock Enable. If wakeup is supported, the SD Bus mode shall be changed to 1 bit-mode just before transferring from the D0 state. In all states, when the SD card is removed after the card power has been supplied, the Host Controller shall stop the SD Clock and clear the SD Clock Enable automatically.

A.5 Generate PME interrupt by the Wakeup Events

PME interrupt is generated by rising edge of three interrupt statuses that gated by *Wakeup Event Enable* (Refer to 1.8). Writing 1 to the **PME Status** clears its status.

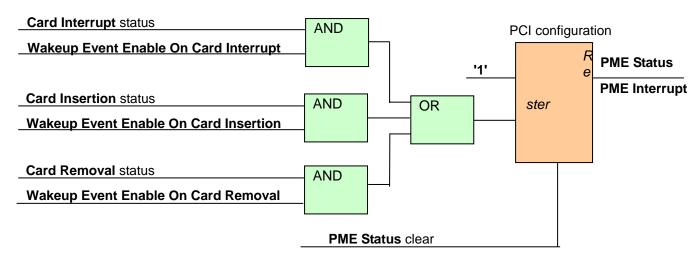


Figure A - 5 : Condition to generate PME Interrupt

^{* 4} bit-mode is recommended if this mode is supported.

^{**} If PME is supported in the D3 state, card power shall be supplied.

Appendix B

B.1 Related Documents

This specification refers extensively to any released version of the following SD specifications and the related Supplementary Notes.

SD Specifications
Part 1 Physical Layer Specification

SD Specifications Part 2 File System Specification

SD Specifications Part 3 File Security Specification

SD Specifications Part E1 SDIO Card Specification

PCI Bus Power Management Interface Specification Revision 1.1 December 1998

PCI Local Bus Specification Revision 2.3 March 2002

B.2 Abbreviations and terms

ACPI Advanced Configuration and Power Interface: PCI bus supports ACPI.

ADMA Advanced DMA: This term stands for ADMA1 and ADMA2.

ADMA1 ADMA Version 1: 4KByte boundary base ADMA

ADMA2 ADMA Version 2: Without 4KByte boundary limitation.(Recommended to support)

API Application Program Interface
Block Gap Period between blocks of data

Block a number of bytes, basic data transfer unit
Busy Busy signal: SD card drives busy on DAT[0] line.

CCCR Card Common Control Register: One of registers defined in SDIO card. CCS Card Capacity Status: A field name in the response of ACMD41.

CDCLK Card Detect Clock: a clock for detecting SD card

CID Card Identification number register

Clr Clear

CMD SD bus command line

CMDXX SD commands: XX indicates one or two digit decimal command number.

CMD_wo_DAT Commands without using DAT line

CRC Cyclic Redundancy Check
CSD Card Specific Data register

DAT SD bus 4-bit Data line: It is also expressed by DAT[3:0]
Descriptor Table Sequence of ADMA Programs created on system memory.

DMA Direct Memory Access: This term stands for SDMA, ADMA1 and ADMA2.

GPS Global Positioning System

HCS Host Capacity Support: A field name in the argument of ACMD41.

HW Hardware

Interrupt: SD card drives interrupt on DAT[1] line.

LED Light Emitting Diode

OCR Operation Conditions Register

OS Operating System

Page Size Unit of system memory management. Most host system adopts 4KB page size.

PCI Peripheral Component Interconnect
PHS Personal Handyphone System
PME Power Management Enable

Resume Restore and restart a suspended function. It is defined in SDIO spec.

RCA Relative Card Address Register: RCA is received from CMD3.

SDCD# Card Detect Signal: a signal, which is active in a level of low, for detecting SD card.

SDCLK SD bus clock line: Host supplies clock to card through this line.

SDMA Single Operation DMA defined in the Host Controller Specification Ver1.00.

SDWP a signal, which is active in a level of high, for detecting SD card to be protected writing

Suspend Stop and save a function to be able to resume. It is defined in SDIO spec.

TMCLK a clock for detecting a timeout on DAT line

Appendix C

C.1 Advanced DMA1

ADMA1 was proposed while drafting SD Host Controller Standard Specification Version 2.00. 4KByte boundary basis architecture is adopted to reduce size of descriptor table. There is a restriction that start address shall be programmed at the top of 4KByte boundary. However, architectural discussion resulted that ADMA should be able to be programmed with any address and any length. Host TG strongly recommends to support ADMA2 but using ADMA1 is also permitted for applicable devices.

C.2 Block Diagram of ADMA

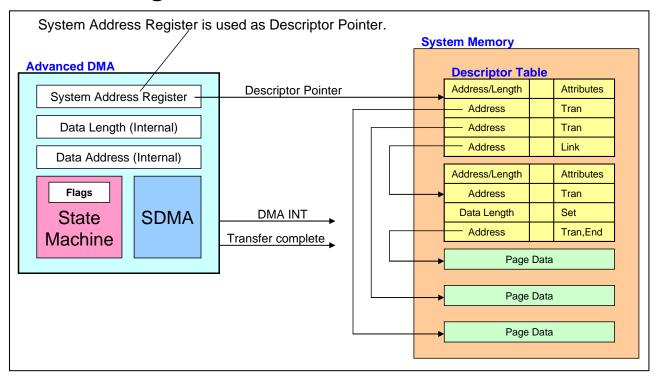


Figure C - 1 : Block Diagram of ADMA

Figure C - 1 shows block diagram of ADMA1. The descriptor Table is created in system memory by the Host Driver. Each line of the Descriptor Table consists with address/length field and attribute field. The attribute defines kind of operations for one executable unit; loading address or length to the ADMA register, transfer data within a page boundary. Lower 12-bit of address is considered to be 0. In another word, ADMA1 always start transfer from the top of 4Kbyte boundary. ADMA1 supports system with 32-bt addressing. ADMA Address register is defined as 64-bit length but only lower 32-bit address is used for ADMA1.

C.3 An Example of ADMA1 Programming

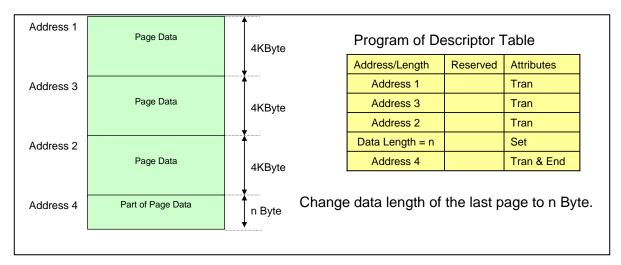


Figure C - 2 : Example of ADMA Transfer

The ADAM1 supports data transfer for the memory management of paging, which is adopted by the host system. Assuming that the page size is 4KB, the ADAM sets 4KB default page size to the Data Length register before starting DMA. In case that the page size is used larger than 4KB, the size can be programmed by the Set operation.

Figure C - 2 shows an example transfer. The data is divided in 4KB page unit and stored in 4 pages of any address. The order of transfer is Address1, Address3, Address 2 and Address 4. The total data length is adjusted by the last page, which can be programmed by the Set operation. Figure C - 2 also shows an example of Descriptor programming.

C.4 Transfer Length Requirement

The relation between total transfer length of system memory and that of SD Card is defined as follows: The amount of data transfer

- = multiple of 4K-byte page + n Byte last page
- = multiple of card block length designated by the Block Size register.

C.5 32-bit Address Descriptor Table

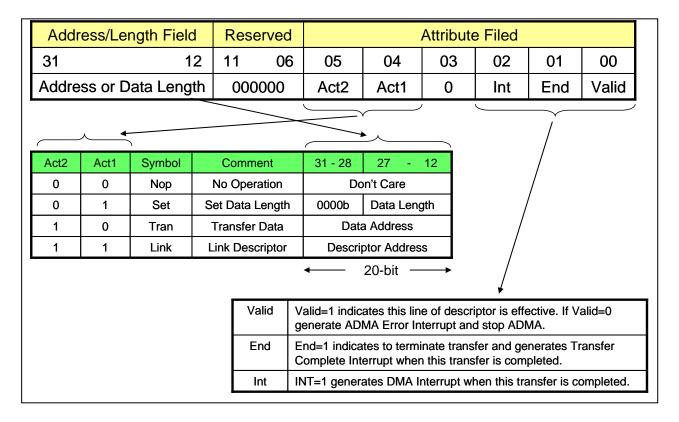


Figure C - 3: Definition of the 32-bit Descriptor Table for ADMA1

Figure C - 3 shows the definition of Descriptor Table for ADMA1. The Symbol used in the Descriptor Table is defined in Table C - 1.

Symbol	Operation
Nop	It indicates no operation. The ADMA skips the line of the Descriptor.
Set	The Set operation fetches transfer length from the descriptor and set the length to the Data Length register. Every starting of ADMA, the 4KB default page size is set to Data Length register.
Tran	The Tran operation fetches a system memory address from the descriptor and set the address to the Data Address register. Subsequently, ADMA starts data transfer.
Link	The Link operation fetches a system memory address from the descriptor and set the address to the ADMA System Address register. The address points to the next Descriptor Table. Refer to 2.2.31 about ADMA System Address register for more detail.

Table C - 1 : Symbol Definition used in Descriptor Table of ADMA1

C.6 ADMA States

In the ADMA1 operation, there are 4 states as described in Figure C - 4 and Table C - 2.

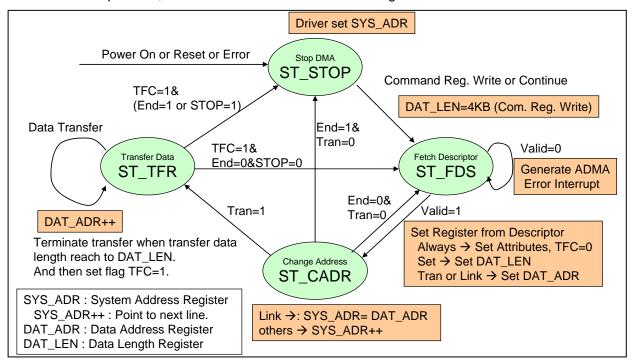


Figure C - 4 : State Diagram of the ADMA1

State Name	Operation
ST_FDS	ADMA1 fetches a descriptor line and set parameters in internal registers.
(Fetch Descriptor)	Next go to ST_CADR state.
ST_CADR (Change Address)	Link operation loads another Descriptor address to ADMA System Address register. In other operations, ADMA System Address register is incremented to point next descriptor line. If End=0, go to ST_TFR state.
	ADMA1 shall not be stopped at this state even if some errors occur.
ST_TFR	Data transfer of one descriptor line is executed between system memory
(Transfer Data)	and SD card. If data transfer continues (End=0) go to ST_FDS state. If data
	transfer completes, go to ST_STOP state.
ST_STOP	ADMA1 stays in this state in following cases:
(Stop DMA)	(1) After Power on reset or software reset.
	(2) All descriptor data transfers are completed
	If a new ADMA1 operation is started by writing Command register, go to
	ST_FDS state.

Table C - 2: ADMA1 States

The Stop At Block Gap Request in the Block Gap Control Register is supported in the ADMA1 data transfer. When the **Stop At Block Gap Request** is set during the ADMA1 operation, the **Block Gap Event Interrupt** will be asserted when the current page data transfer is completed.

In case of read operation from SD card, the Host Controller shall stop read operation of SD card by Read Wait or stopping SD Clock.

C.7 ADMA1 Control Registers

ADMA1 is selected and supported by following registers.

Location	Attrib	Register Field Explanation
04-03	RW	DMA Select
		Several types of DMA modes (including No DMA) can be selected by this field.
		00 : No DMA or SDMA is selected
		01 : 32-bit Address ADMA1 is selected
		10: 32-bit Address ADMA2 is selected
		11:64-bit Address ADMA2 is selected

Table C - 3: ADMA1 Select in Host Control Register

Location	Attrib	Register Field Explanation		
20	HwInit	ADMA1 Support		
		This bit indicates whether the Host Controller is capable of using ADMA1.		
		1	ADMA Supported	
		0	ADMA not Supported	

Table C - 4 : ADMA1 Support Bit in Capabilities register