Heterogeneous LEACH for WSN

Software Recommended: NetSim Standard v13.0 64-bit, Visual Studio 2019, MATLAB 64-bit

Project Download Link:

https://github.com/NetSim-

TETCOS/Heterogeneous LEACH for WSN v13.0/archive/refs/heads/main.zip

Follow the instructions specified in the following link to download and setup the Project in NetSim:

https://support.tetcos.com/en/support/solutions/articles/14000128666-downloading-and-setting-upnetsim-file-exchange-projects

Introduction:

In Wireless Sensor Networks energy efficiency plays a crucial role as the sensors are generally battery powered. Hierarchical routing protocols can be used to overcome this constraint.

LEACH is a hierarchical protocol in which most nodes transmit to cluster heads, and the cluster heads aggregate and compress the data and forward it to the base station (sink). Each node uses a stochastic algorithm at each round to determine whether it will become a cluster head in this round. LEACH assumes that each node has a radio powerful enough to directly reach the base station or the nearest cluster head, but that using this radio at full power all the time would waste energy.

Heterogeneous LEACH involves a network with sensor nodes of different energy levels. Clusters are formed periodically and cluster heads are elected. Nodes send packets either to the cluster head or to the sinknode based on whichever is located near.

Heterogeneous LEACH in NetSim with MATLAB Interfacing:

Heterogeneous LEACH is implemented in NetSim by Interfacing with MATLAB for the purpose of mathematical calculation. The sensor coordinates and remaining energy are fed as input to MATLAB. Heterogeneous LEACH algorithm that is implemented in MATLAB is used to dynamically form clusters and elect cluster heads.

From MATLAB the number of clusters, cluster head id's and cluster memebership is retrieved to perform routing in NetSim.

All the above steps are performed periodically and can be defined as per the implementation. Each time a node dies, the algorithm is invoked to perform clustering excluding the dead nodes.

The codes required for the mathematical calculations done in MATLAB are written to a **LEACH_HETERO.m** file as shown below:

```
Z Editor - C:\Program Files\MATLAB\R2016a\LEACH HETERO.m
           PUBLISH VIEW
Open Save Print • Q Find • Indent F FOIT
                                                                 Run Run and Advance Run and

▼ Advance Time
      function [num_cls,cl_head,cl_mem,prob_s]=LEACH_HETERO(NDid,Xc,Yc,Pwr,n,sinkx,sinky,grid_size,sinkid)
        xm=grid_size;
        ym=grid_size;
p=0.1;
%Values for Hetereogeneity
%Percentage of nodes than are advanced
        me0.1;
         9699 LEACH 9696988
 13
14 -
15 -
16 -
17 -
18 -
19 -
20 -
21 -
22 -
            Et=0;
for i=1:1:n
                S(i).xd=Xc(i);

XR(i)=S(i).xd;

S(i).yd=Yc(i);

YR(i)=S(i).yd;
                distance=sqrt( (S(i).xd-(sinkx) )^2 + (S(i).yd-(sinky) )^2 );
                S(i).distance=distance;
                S(1).6-0;
whintially there are no cluster heads only nodes
S(1).type='N';
S(1).E-Pbwr(1);
E-E-E-S(1).E;
               %initially there are no cluster heads only nodes
                temp rnd0=i;
                                                                                                                         LEACH HETERO
```

A **LEACH_HETEROGENEOUS.c** file is added to the DSR project which contains the following functions:

```
File Edit View Project Build Debug Test Analyze Tools Extensions Window Help Search Visual Studio (Ctrl+Q)
| ○ · ○ | 營 · 🎂 🖺 🔑 | り · ୯ · | Debug · x64 · ▶ Local Windows Debugger · | 勇 🛫 🔄 🥫 | 图 恒 | 图 注 | ■ 11 11 11 11 11
                                                                                                       → (Global Scope)
      28
      29
             int *ClusterElements;
             int *CH = NULL;
      30
             int CL_COUNT = 0;
      31
      32
             int CL_POSITION = 0;
      33
           ★ int fn_NetSim_LEACH_HETERO_CheckDestination(NETSIM_ID nDeviceId, NETSIM_ID nDestinationId) { ... }
      34
           ★int fn_NetSim_LEACH_HETERO_GetNextHop(NetSim_EVENTDETAILS* pstruEventDet
      42
      43
      97

mint fn_NetSim_LEACH_HETERO_run() { ... }

      98
     104
           ⊮int fn_NetSim_LEACH_HETERO_form_cluster(double *cl_count, double* cl_head, double* cl_id, int* temp)[:
     105
     139
           #void fn_NetSim_LEACH_HETERO_Init() { ... }
     140
     159
           160
     171
     172
```

fn_NetSim_LEACH_HETERO_CheckDestination()

This function is used to determine whether the current device is the destination of a packet or an intermediate node.

fn_NetSim_LEACH_HETERO_GetNextHop()

This function handles routing in the sensor network by determining the next hop device based on the clusters and cluster heads elected using LEACH protocol.

fn_NetSim_LEACH_HETERO_run()

This function makes a call to MATLAB interfacing function and passes the inputs from NetSim to MATLAB and also retrieves the computed parameters from MATLAB workspace for further calculations in NetSim.

fn_NetSim_LEACH_HETERO_form_cluster()

This function updates the information obtained from MATLAB to identify clusters and cluster heads formed using LEACH protocol.

fn_NetSim_LEACH_HETERO_Init()

This function initializes the parameters specific to LEACH protocol and identifies the number of sensors that are alive at any instance of simulation.

fn_NetSim_LEACH_HETERO_CheckIfCH()


This function is used to check whether a node is a cluster head or a normal sensor node.

Static Routing:

Static Routing is defined in such a way that the sensors send packets to its cluster head. Once packet arrives at the cluster head it is forwarded to the destination or the sinknode.

Steps:

1. Make sure that the following directory is in the PATH(Environment variable) <Path where MATLAB is installed>\bin\win64

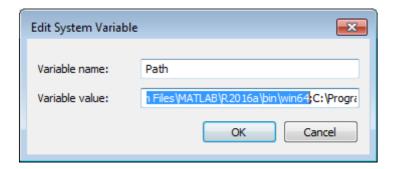

Note: If the machine has more than one MATLAB installed, the directory for the target platform must be ahead of any other MATLAB directory (for instance, when compiling a 64-bit application, the directory in the MATLAB 64-bit installation must be the first one on the PATH).


2. Open Command prompt as admin and execute the command "matlab -regserver". This will register MATLAB as a COM automation server and is required for NetSim to start MATLAB automation server during runtime.

```
Microsoft Windows [Version 10.0.17134.648]

(c) 2018 Microsoft Corporation. All rights reserved.


C:\WINDOWS\system32>matlab -regserver_
```

3. Place **LEACH_HETERO.m** present in the MATLAB_Code folder inside the root directory of MATLAB. For Example: "C:\Program Files\MATLAB\R2016a".

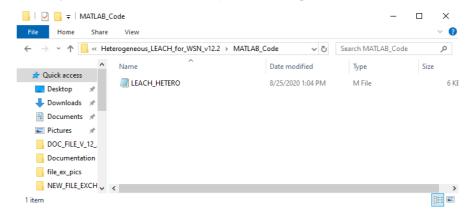


- **4.** Open the Source codes in Visual Studio by going to Your Work-> Workspace Options and Clicking on Open code button.
- 5. Under the DSR project in the solution explorer you will be able to see that MATLAB_Interface.c and LEACH_HETEROGENEOUS.c files which contain source codes related to interactions with MATLAB and handling clustering in NetSim, respectively.

6. Right click on the **Solution** project in the solution explorer and select Rebuild.

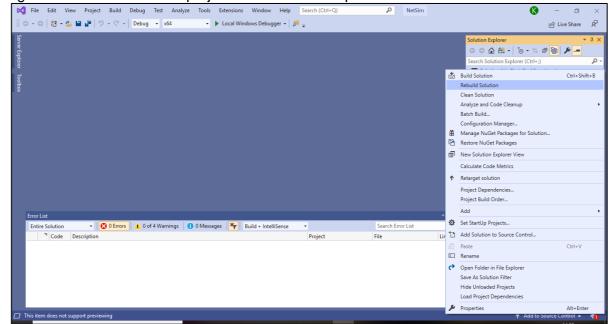

- **7.** Upon successful build modified DII files gets automatically updated in the directory containing NetSim binaries.
- 8. Run NetSim as Administrative mode.
 - **9.** Then LEACH_HETERO_WORKSPACE comes with a sample configuration that is already saved. To open this example, go to Your Work and click on the LEACH_HETEROGENEOUS example that is present under the list of experiments.


10. The network scenario consists of 100 sensors deployed randomly in a 50x50m grid environment with a sink node placed in the centre.

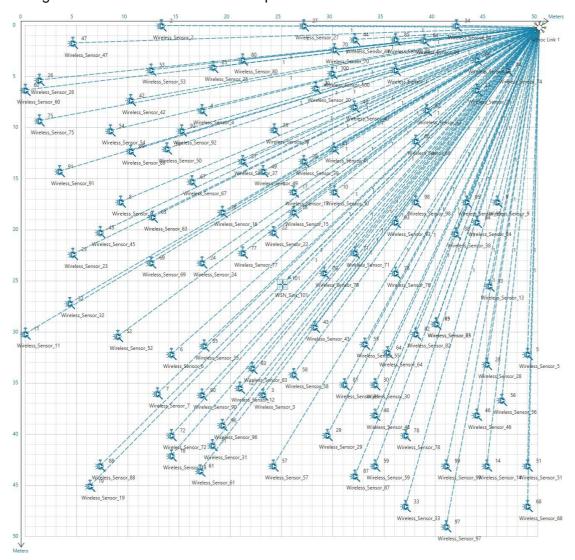


11. Run simulation and press any key to continue. NetSim simulation console will show the following message in the console "Waiting for NetSim MATLAB Interface to connect..."

```
***
NetSim start
NetWork Stack loaded
Error in creating C:\Users\MAHAVEER\AppData\Local\Temp\NetSim/std13.0.26_x64//log directory. Error number 17
Initializing simulation
Config file reading complete
License re-validation complete
Protocol binaries loaded
Stack variables initialized
Could Not Find C:\Users\MAHAVEER\AppData\Local\Temp\NetSim\std13.0.26_x64\Plot_*
Metrics variables initialized
Initialising Winsock for matlab interface...Initialized.
Waiting for NetSim Matlab Interface to connect...
```


12. Click on **Options** from NetSim design window and click on **Open MATLAB Interface** as shown in below given screenshot



13. It will open the popup related MATLAB Interfacing, Click on **OK.** As shown in below given screenshot

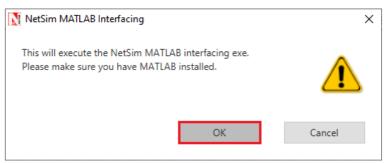

14. You will observe that as the simulation starts, and the plots will be displayed in MATLAB shown below:

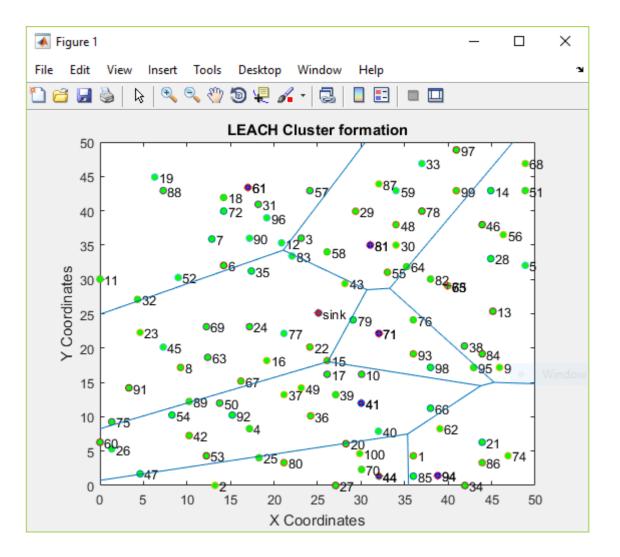

Explanation:

The above plot contains the nodes that are part of the network in NetSim. All sensor nodes are initially alive. Sink node that is highlighted in the center and the nodes marked in blue act as cluster heads.

The plot is further divided into different regions based on the location of the cluster heads using a Voronoi diagram.

The clusters and cluster heads are calculated periodically and whenever one or more node runs out of energy and dies.