

Exercise Manual For

CE3103 Embedded Programming

Practical Exercise #4
RTOS Based Programming:
Task Creation in FreeRTOS

Venue: Hardware Laboratory 2 (Location: N4-01b-05)

COMPUTER ENGINEERING COURSE

SCHOOL OF COMPUTER SCIENCE AND ENGINEERING NANYANG TECHNOLOGICAL UNIVERSITY



Learning Objectives

In this lab, students will gain hands-on experience to develop a basic multi-task application on an embedded system running FreeRTOS operating System. In addition, students will also learn how to understand an embedded board (based on the ARM Cortex-M3 microcontroller) from its schematic diagrams and datasheets provided by vendors.

The exercises involve developing a basic application from scratch by using the given libraries from vendors and open-source resources, setting up of a cross complier in an IDE and understanding the process to transfer a firmware to the embedded board.

Equipment and accessories required

- i) An embedded development board with a STM32F103VET6 microcontroller
- ii) FlyMcu An In-System Programming (ISP) software to upload machine codes to flash memory)
- iii) Keil's µVision IDE

References: Keil Microcontroller Development Kit (MDK-Lite)

http://www.keil.com/arm/mdk.asp

http://www.keil.com/uvision/

1. Introduction

1.1 CMSIS Library

The Cortex Microcontroller Software Interface Standard (CMSIS) is a vendor-independent hardware abstraction layer for microcontrollers that are based on Arm Cortex processor. CMSIS defines generic tool interfaces and enables consistent device support. The CMSIS software interfaces simplify software reuse, reduce the learning curve for microcontroller developers, and improve time to market for new devices.

1.2 STM32F103VET6

The STM32F103VET6 is a 100-pin high-performance microcontroller chip based on ARM Cortex-M3 32-bit RISC architecture design.

STM32	F	1	03	V	Е	T	6
Family	Type	Core	Line	# of Pins	Flash	Package	Temperature
	- •				Size		Range

It is fabricaed in a low-profile quad flat package (LQFP) operating at a 72 MHz frequency with 512 Kbytes Flash memory and 64Kbytes SRAM. It supports up to 80 GPIOs, four general-purpose timers, two I2C, three SPI, five USART, three 12-bit ADC, two 12-bit buffered DAC etc. (Refer to the datasheet for more details)

Preliminary:

Study the data sheet and	identity the Flash memory a	nd SKAM address location
Flash memory:		
start address:	size:	
SRAM:		
start address:	size:	
	Flash memory: start address: SRAM:	start address: size: SRAM:





2. Practice Exercises

In these exercises, you will learn how to create a project and configure its various settings for the microcontroller using the μVision 5 IDE. (The debugger is not supported by the μVision 5 and will hence not be covered.) You will then compile the assembly and C programs into an Intel hexadecimal object file format or Intellec Hex (.hex file), which contains the machine code to run in the microcontroller.

2.1 Practice A – Getting Started: Hello µVision 5

First, <u>create a new project</u> (.uvproj) in μVision 5 by selecting STM32F103VE as shown in the following diagrams

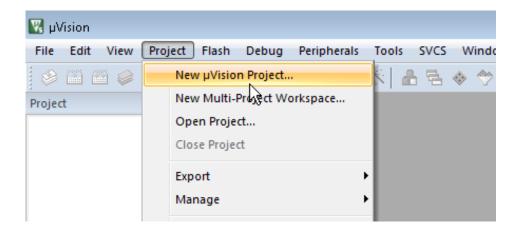


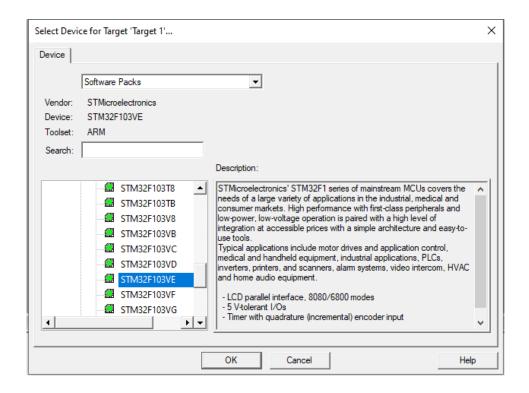

2021 © Loke YR 3/8




Next we need to <u>configure the project's options</u> to match the embedded platform we will be using.

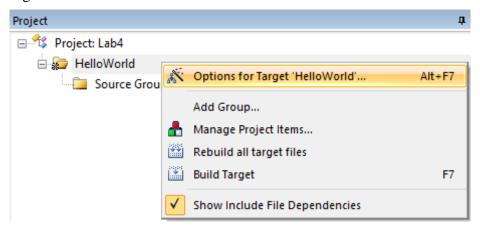



The following are a number of MUST select options to be configured:

- a) Target: ARM Compiler: "Use default compiler version 5"
- b) Output: select "Create HEX File"
- c) C/C++ compiler : See below (note the compiler control flag used)

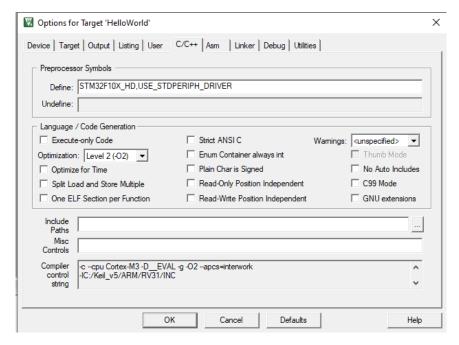


d) Linker: select "Use Memory Layout from Target Dialog"

2021 © Loke YR 4/8




- Adding of skeleton files:
 - a) Select the following ARM CMSIS library files for the project

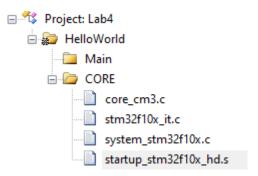


- startup_stm32f10x_hd.s: provide all initial configuration. (You may find out how microcontroller knows where your main function is.)
- system_stm32f10x.c: provide system initialization especially the system clock setup. (You will find out the reason for selecting STM32F10X_HD in Preprocessor Symbols in **the compiler setup**)

Questions: What is the System Clock?

b) Peripheral Driver Files: You may not need all of them - figure out which one you actually need.

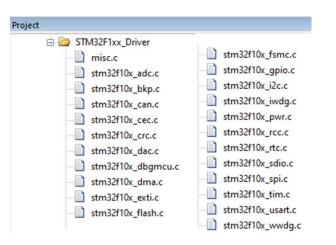



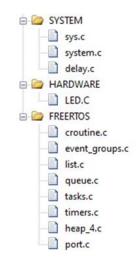


FreeRTOS

- c) FreeRTOS library. You will not need all the FreeRTOS modules at this stage, but we just add them first. The portable implementation of ARM CM3 and heap_4 for memory management are in use in this helloWorld project.
- d) Some system initialization, delay and led configuration in sys.c, system.c, delay.c and led.c are also added.



e) The corresponding header files (.h files) are required in the compilation. Thus, we also need to indicate the folder where you store these header files.

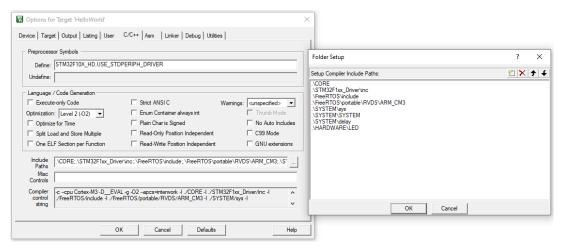

2.2 Practice B – Hello STM32F103 – LED Blink

Study the LED.c file. Note the **LED_Init()** function which show how the configuration of the LED is done, and the **led task** function that provides a task to blink the LED3.

> Use the following code to create a task in the main() to blink the LED as follow:


```
#include "system.h"
#define START TASK PRIO
#define START STK SIZE
                                   256
TaskHandle_t StartTask_Handler;
void start task(void *pvParameters);
int main (void)
    systemInit();
     xTaskCreate((TaskFunction t )start task,
                    (const char* ) "start_task",
(uint16_t ) START_STK_SIZE,
(void* ) NULL,
(UBaseType_t ) START_TASK_PRIO,
(TaskHandle_t* ) &StartTask_Handler);
     vTaskStartScheduler();
}
void start_task(void *pvParameters)
     taskENTER CRITICAL();
     xTaskCreate(led task, "led task", LED STK SIZE, NULL, LED TASK PRIO, NULL);
     vTaskDelete(StartTask Handler);
     taskEXIT CRITICAL();
}
```


➤ Build the program. If compile successfully, you will find a hex file in your object folder.



You can now use the FlyMcu software to upload this hex file the board. Make sure that the option setting in step 2 is:

"Reset@DTR Low (<-3V), ISP @RTS High)"

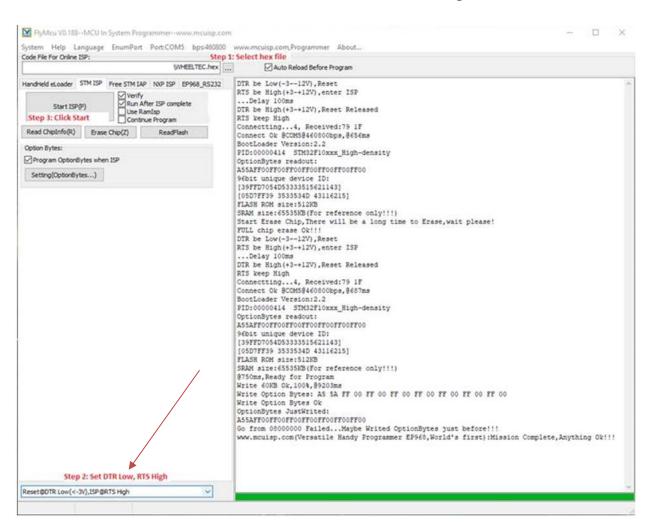

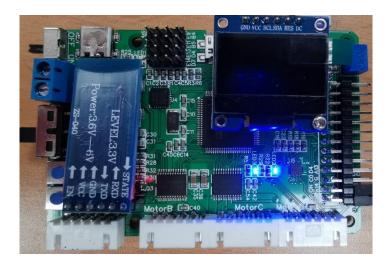

2021 © Loke YR 7/8



3. Exercises

Based on what you have learnt so far, you are now going to develop a multiple task program to control the various peripherals found on the embedded board

3.1 Exercise A – Buzzer Task

- Modify the code to make the delay in **led task()** to be of 5 seconds.
- Create another task to turn on and off the on-board buzzer at every 7 seconds intervals. A separate .c file and .h file for buzzer should be created. (You should refer to the given schematic diagram to find out the GPIO port of the buzzer.)

3.2 Exercise B - OLED Display Task

- Study the source code of the given show.c and oled.c files.
- Add another task to your program to display some text string (e.g., your name) on the OLED display screen.

3.3 Exercise C – Design A Digital Timer on the OLED Display

- Add another task or reuse the previous OLED task to display a digital timer on the OLED display screen.
- The timer will update every one second.