						WOOD SHEAR WALL SCHEDULE					Bottom plate		
Shear wall	Sheathing material	Panel thickness	Blocking	Minimum fastener penetration in framing member or blocking	Fastener type and size	Panel edge fastener spacing	Nominal unit shear capacity vw	Hold-down anchor capacity	Hold down studs	Hold down anchor type	Number of bolts (1 in diameter, 4 inch embedment depth)		Bottom plate attachment (floor to floor)
ID SW_N3A	Wood structural panels – sheathing	(in) 3/8	YES	(in)	8d	(in) 4	(plf)	(kip)	(1)	Simpson HDU4-SDS2.5	-	-	wood screws 20 (d= 0.32 in) at 25 in. o/c; 30 fasteners in 2 rows.
SW_N3B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	-	-	-	16d (d= 0.268 in) nails at 24 in. o/c; 16 fasteners in 1 row.
SW_N3C	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	] <u> </u>	-	-	_	-	16d (d= 0.268 in) nails at 21 in. o/c; 35 fasteners in 2 rows.
SW_N3D	Wood structural	3/8	YES	1-3/8	8d	4	840	2	(1)	Simpson HDU4-SDS2.5	_	-	wood screws 20 (d= 0.32 in) at 25 in. o/c; 30 fasteners in 2 rows.
SW_N2A	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	4	1430	4	(2)	Simpson HDU4-SDS2.5	_	_	wood screws 20 (d= 0.32 in) at 14
 SW_N2B	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	6	950		_			_	in. o/c; 52 fasteners in 2 rows.  16d (d= 0.268 in) nails at 13 in.
SW_N2C	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	6	950		(1)	Simpson HDU4-SDS2.5			o/c; 28 fasteners in 1 row.  16d (d= 0.268 in) nails at 12 in.
	panels – sheathing  Wood structural		YES	1-1/2		4						_	o/c; 59 fasteners in 2 rows.  wood screws 20 (d= 0.32 in) at 14 in.
SW_N2D	panels – sheathing  Wood structural	19/32			10d		1430	] 4	(2)	Simpson HDU4-SDS2.5		-	o/c; 52 fasteners in 2 rows.  SDWS log screw (d= 0.197 in) at 12 ir
SW_N1A	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	3	1860	]	(3)	HDU11-SDS2.5	10	36	o/c; 58 fasteners in 2 rows.  16d (d= 0.268 in) nails at 19 in.
SW_N1B	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	6	950	- ]	-	-	11	36	o/c; 39 fasteners in 2 rows.
SW_N1C	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	6	950	3	(1)	Simpson HDU4-SDS2.5	11	36	o/c; 40 fasteners in 2 rows.
SW_N1D	panels – sheathing	19/32	YES	1-1/2	10d	3	1860	7	(3)	HDU11-SDS2.5	10	36	SDWS log screw (d= 0.197 in) at 12 in o/c; 60 fasteners in 2 rows.
SW_S3A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	6	950	2	(1)	Simpson HDU4-SDS2.5	-	-	wood screws 20 (d= 0.32 in) at 21 in. o/c; 36 fasteners in 2 rows.
SW_S3B	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	6	950	2	(1)	Simpson HDU4-SDS2.5	-	-	wood screws 20 (d= 0.32 in) at 21 in. o/c; 36 fasteners in 2 rows.
SW_S2A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	6	(2)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 13 in o/c; 54 fasteners in 2 rows.
SW_S2B	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	6	(2)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 13 in o/c; 54 fasteners in 2 rows.
SW_S1A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	11	(4)	Simpson HD19	10	36	SDWS log screw (d= 0.197 in) at 8 in. o/c; 76 fasteners in 2 rows.
SW_S1B	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	11	(4)	Simpson HD19	10	36	SDWS log screw (d= 0.197 in) at 8 in. o/c; 76 fasteners in 2 rows.
SW_E3A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	4	1430	3	(1)	Simpson HDU4-SDS2.5	-	-	wood screws 20 (d= 0.32 in) at 16 in. o/c; 46 fasteners in 2 rows.
SW_E3B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	-	-	-	16d (d= 0.268 in) nails at 12 in. o/c; 30 fasteners in 1 row.
SW_E3C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	4	1430	6	(2)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 15 in o/c; 32 fasteners in 2 rows.
SW_E2A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	7	(3)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 11 in o/c; 64 fasteners in 2 rows.
SW_E2B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	1	(1)	Simpson HDU4-SDS2.5	-	-	16d (d= 0.268 in) nails at 14 in. o/c; 51 fasteners in 2 rows.
SW_E2C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	11	(4)	Simpson HD19	-	-	SDWS log screw (d= 0.197 in) at 9 in. o/c; 54 fasteners in 2 rows.
SW_E1A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	13	(4)	Simpson HD19	7	36	SDWS log screw (d= 0.197 in) at 7 in. o/c; 64 fasteners in 2 rows.
SW_E1B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	-	11	36	16d (d= 0.268 in) nails at 32 in. o/c; 12 fasteners in 1 row.
SW_E1C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	9	(3)	Simpson HD19	11	36	SDWS log screw (d= 0.197 in) at 10 in o/c; 72 fasteners in 2 rows.
SW_W3A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	4	1430	3	(1)	Simpson HDU4-SDS2.5	-	-	wood screws 20 (d= 0.32 in) at 16 in. o/c; 46 fasteners in 2 rows.
SW_W3B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	-	-	-	16d (d= 0.268 in) nails at 12 in. o/c; 30 fasteners in 1 row.
SW_W3C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	4	1430	6	(2)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 15 in o/c; 32 fasteners in 2 rows.
SW_W2A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	7	(3)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 11 in o/c; 64 fasteners in 2 rows.
SW_W2B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	1	(1)	Simpson HDU4-SDS2.5	-	-	16d (d= 0.268 in) nails at 14 in. o/c; 51 fasteners in 2 rows.
SW_W2C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	11	(4)	Simpson HD19	-	-	SDWS log screw (d= 0.197 in) at 9 in. o/c; 54 fasteners in 2 rows.
SW_W1A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	13	(4)	Simpson HD19	9	30	SDWS log screw (d= 0.197 in) at 7 in. o/c; 64 fasteners in 2 rows.
SW_W1B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	-	11	36	16d (d= 0.268 in) nails at 32 in. o/c; 12 fasteners in 1 row.
SW_W1C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	9	(3)	Simpson HD19	11	36	SDWS log screw (d= 0.197 in) at 10 in o/c; 72 fasteners in 2 rows.
SW_EC3A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	6	950	0	-	-	-	_	16d (d= 0.268 in) nails at 18 in. o/c; 42 fasteners in 2 rows.
SW_EC3B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	-	-	-	16d (d= 0.268 in) nails at 60 in. o/c; 7 fasteners in 1 row.
SW_EC3C	Wood structural	19/32	YES	1-1/2	10d	6	950	3	(1)	Simpson HDU4-SDS2.5	_	_	wood screws 20 (d= 0.32 in) at 19 in.
SW_EC2A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	2	(1)	Simpson HDU4-SDS2.5	_	_	o/c; 40 fasteners in 2 rows.  wood screws 20 (d= 0.32 in) at 21 in. o/c; 36 fasteners in 2 rows.
SW_EC2B	Wood structural	3/8	NO	1-3/8	8d	6	560	-	-	-	-	_	16d (d= 0.268 in) nails at 32 in.
SW_EC2C	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	3	1860	6	(2)	Simpson	_	_	o/c; 12 fasteners in 1 row.  SDWS log screw (d= 0.197 in) at 12 in
SW_EC1A	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	2	2435	11	(4)	HDU11-SDS2.5 Simpson HD19	6	36	o/c; 58 fasteners in 2 rows.  SDWS log screw (d= 0.197 in) at 9 in.
SW_EC1B	panels – sheathing  Wood structural	3/8	NO	1-3/8	8d	6	560		.,		11	36	o/c; 42 fasteners in 2 rows.  16d (d= 0.268 in) nails at 22 in. o/c;
	panels – sheathing  Wood structural	19/32	YES	1-3/6			2435		- (4)	Circurate LID40			17 fasteners in 1 row.  SDWS log screw (d= 0.197 in) at 9 in.
SW_EC1C	panels – sheathing  Wood structural				10d	2		11	(4)	Simpson HD19	11	36	o/c; 82 fasteners in 2 rows.
SW_WC3A	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	6	950	0	-	<u>-</u>	-	_	o/c; 42 fasteners in 2 rows.  16d (d= 0.268 in) nails at 60 in.
SW_WC3B	panels – sheathing  Wood structural	3/8	NO	1-3/8	8d	0	560	-	-	Simon and a second	-	-	o/c; 7 fasteners in 1 row.  wood screws 20 (d= 0.32 in) at 19 in.
SW_WC3C	panels – sheathing  Wood structural	19/32	YES	1-1/2	10d	6	950	3	(1)	Simpson HDU4-SDS2.5	-	-	o/c; 40 fasteners in 2 rows.
SW_WC2A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	2	(1)	Simpson HDU4-SDS2.5	-	-	wood screws 20 (d= 0.32 in) at 21 in. o/c; 36 fasteners in 2 rows.
SW_WC2B	panels – sheathing	3/8	NO	1-3/8	8d	6	560	-	-	Cimara	-	-	o/c; 12 fasteners in 1 row.
SW_WC2C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	3	1860	6	(2)	Simpson HDU11-SDS2.5	-	-	SDWS log screw (d= 0.197 in) at 12 in o/c; 58 fasteners in 2 rows.
SW_WC1A	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	11	(4)	Simpson HD19	6	36	SDWS log screw (d= 0.197 in) at 9 in. o/c; 42 fasteners in 2 rows.
SW_WC1B	Wood structural panels – sheathing	3/8	NO	1-3/8	8d	6	560	-   	-	-	11	36	16d (d= 0.268 in) nails at 22 in. o/c; 17 fasteners in 1 row.
SW_WC1C	Wood structural panels – sheathing	19/32	YES	1-1/2	10d	2	2435	11	(4)	Simpson HD19	11	36	SDWS log screw (d= 0.197 in) at 9 in. o/c; 82 fasteners in 2 rows.

<ul> <li>MAXIMUM DENSITY) ON 3/4" TONGUE &amp; GROOVE APA RATED WOOD FLOOR</li> <li>2. SHEATHING (PLYWOOD OR OSB). GLUE &amp; SCREW FLOOR SHEATHING TO WELLOOR STRUCTURE. SHEATHING TO BE ATTACHED TO FLOOR MEMBERS WE SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTENERS ON A 6"/6" o/c P (EDGE/FIELD).</li> <li>3. TYPICAL STAIR LANDING CONSTRUCTION: 3/4" TONGUE &amp; GROOVE APA RAWOOD FLOOR SHEATHING (PLYWOOD OR OSB). GLUE &amp; SCREW FLOOR SHEATHING TO WOOD FLOOR STRUCTURE. SHEATHING TO BE ATTACHED FLOOR MEMBERS W/SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTEI A 6"/6" o/c PATTERN (EDGE/FIELD).</li> <li>4. REFER TO ARCHITECTURAL DRAWINGS FOR STAIR FRAMING AND CONFIGURE.</li> </ul>	4
<ol> <li>TYPICAL FLOOR CONSTRUCTION: 1" GYPSUM CONCRETE TOPPING (120 PC MAXIMUM DENSITY) ON 3/4" TONGUE &amp; GROOVE APA RATED WOOD FLOOR</li> <li>SHEATHING (PLYWOOD OR OSB). GLUE &amp; SCREW FLOOR SHEATHING TO WE FLOOR STRUCTURE. SHEATHING TO BE ATTACHED TO FLOOR MEMBERS WE SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTENERS ON A 6"/6" o/c P (EDGE/FIELD).</li> <li>TYPICAL STAIR LANDING CONSTRUCTION: 3/4" TONGUE &amp; GROOVE APA RAWOOD FLOOR SHEATHING (PLYWOOD OR OSB). GLUE &amp; SCREW FLOOR SHEATHING TO WOOD FLOOR STRUCTURE. SHEATHING TO BE ATTACHED FLOOR MEMBERS W/ SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTEI A 6"/6" o/c PATTERN (EDGE/FIELD).</li> <li>REFER TO ARCHITECTURAL DRAWINGS FOR STAIR FRAMING AND CONFIGURE. SHEATHING TO BE ATTACHED FLOOR MEMBERS W/ SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTEI A 6"/6" o/c PATTERN (EDGE/FIELD).</li> </ol>	
WOOD FLOOR SHEATHING (PLYWOOD OR OSB). GLUE & SCREW FLOOR SHEATHING TO WOOD FLOOR STRUCTURE. SHEATHING TO BE ATTACHED FLOOR MEMBERS w/ SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTEI A 6"/6" o/c PATTERN (EDGE/FIELD).  4. REFER TO ARCHITECTURAL DRAWINGS FOR STAIR FRAMING AND CONFIGURE OF STAIR FRAMING AND CONFIGU	<ol> <li>TYPICAL FLOOR CONSTRUCTION: 1" GYPSUM CONCRETE TOPPING (120 PCF MAXIMUM DENSITY) ON 3/4" TONGUE &amp; GROOVE APA RATED WOOD FLOOR</li> <li>SHEATHING (PLYWOOD OR OSB). GLUE &amp; SCREW FLOOR SHEATHING TO WOOD FLOOR STRUCTURE. SHEATHING TO BE ATTACHED TO FLOOR MEMBERS w/ SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTENERS ON A 6"/6" o/c PATTE</li> </ol>
5. "HPX" DENOTES A WOOD HEADER/POST CONSTRUCTION. REFER TO WOO	SHEATHING TO WOOD FLOOR STRUCTURE. SHEATHING TO BE ATTACHED TO FLOOR MEMBERS w/ SIMPSON STRONG-TIE STRONG-DRIVE WSNTL FASTENERS
	4. REFER TO ARCHITECTURAL DRAWINGS FOR STAIR FRAMING AND CONFIGURAT
	5. "HPX" DENOTES A WOOD HEADER/POST CONSTRUCTION. REFER TO WOOD HEADER/POST SCHEDULE FOR HEADER & POST DESIGNATION.

ΓERN

RS ON

ATION.

6. "WPX" DENOTES A WOOD POST. REFER TO WOOD HEADER/POST SCHEDULE FOR WOOD POST DESIGNATION ONLY.

7. ALL EXTERIOR WOOD STUD WALLS SHALL HAVE (1) LAYER OF 1/2" APA RATED SHEATHING (PLYWOOD OR OSB) ON THE EXTERIOR WALL FACE. REFER TO STANDARD DETAILS FOR TYPICAL BEARING WALL CONSTRUCTION AND SHEATHING ATTACHMENT. IF WALL IS NOT SPECIFICALLY DESIGNATED AS A SHEAR WALL, ATTACH SHEATHING TO WALL STUDS w/ 10d COMMON NAILS ON 6"/12" PATTERN (EDGES/FIELD). NAILS TO HAVE A MINIMUM PENETRATION INTO FRAMING MEMBER

8. REFER TO TYPICAL WOOD WALL DETAILS FOR FRAMING AROUND AN OPENING THROUGH A WOOD STUD BEARING WALL.

9. REFER TO EXTERIOR MISCELLANEOUS VENEER LINTEL SCHEDULE FOR ALL OPENINGS IN EXTERIOR VENEER.

10. ALL WOOD POSTS SHALL LINE UP FLOOR TO FLOOR DOWN TO THE TOP OF CONCRETE FOUNDATION WALL OR TOP OF PRECAST PLANK LEVEL. PROVIDE

SOLID BLOCKING OF SAME SIZE AS POST IN TRUSS SPACES. 11. AT INTERIOR BEARING WALLS WHERE FLOOR TRUSSES BEAR ON WALL FROM EITHER SIDE, LAP TRUSSES AND BEAR EACH TRUSS FULL WIDTH OF WALL,

12. PROVIDE 2x6 STRONGBACK BRIDGING FULL LENGTH OF BUILDING. NAIL TO VERTICAL TRUSS WEB w/ (3) 16d NAILS. PROVIDE BRIDGING EQUALLY SPACED ALONG TRUSS SPAN AS REQUIRED BY DESIGN.

13. AT EXTERIOR DECKS, PROVIDE COMPOSITE OR PRESSURE TREATED 5/4" WOOD DECKING.


14. ALL WOOD HEADERS SHOWN IN STUD WALLS ARE DROPPED HEADERS AND SHALL BE PLACED AT WALL OPENING HT UNLESS NOTED OTHERWISE. REFER TO ARCH DRAWINGS FOR OPENING HEIGHTS. ALL OTHER HEADERS SHALL BE FLUSH w/ BOTTOM OF FLOOR FRAMING, TYPICAL.

15.ALL VERTICAL MASONRY WALL REINFORCEMENT SHALL RUN CONTINUOUS THROUGH BOND BEAMS AND EXTEND FULL HEIGHT OF THE WALL. GROUT CORES SOLID AT ALL VERTICAL REINFORCING.

16." MW-X I INDICATES MASONRY WALL REINFORCEMENT TYPE. REFER TO SCHEDULE FOR SIZE & SPACING.

17. GROUT MASONRY CORES SOLID AT ALL MECHANICAL ANCHOR LOCATIONS,

18.(XXX'-XX") INDICATES THE TOP OF STEEL BEAM ELEVATION.

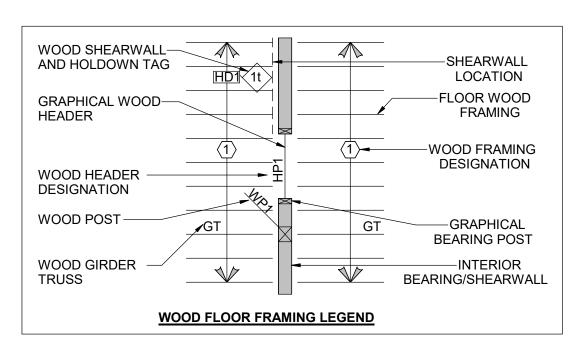

WOOD	FRAMING
LAMINATED STRAND LUME	BER (LSL)
$E = 1.55 \times 10^6 \text{ ps}$	İ
F <sub>b</sub> = 2360 psi	
F <sub>v</sub> = 410 psi	
F <sub>ct</sub> = 875 psi	(perpendicular to grain)
LAMINATED VENEER LUME	BER (LVL)
$E = 2.0 \times 10^6 \text{ psi}$	
F <sub>b</sub> = 2900 psi	
F <sub>v</sub> = 285 psi	
F <sub>ct</sub> = 750 psi	(perpendicular to grain)
DIMENSIONAL LUMBER	
WALL STUDS: H	em-Fir Stud or better
WALL PLATES: I	Hem-Fir No 1 or better
POSTS/COLUMN	NS: SPRUCE-PINE-FIR No. 2 or better
FLOOR SHEATHING	
WOOD STRUCT	URAL PANEL
F <sub>b</sub> S= 444 lb-in/ft o	of width
$F_s = 215 \text{ lb/ft of w}$	idth

		WOODFRA	IVIIING FIL	EADER/POST SCHEDULE	
MARK	MATERIAL	WIDTH	DEPTH	BEARING	REMARKS
		(in)	(in)		
				Headers	
H3.1, H3.2, H3.3	LVL	1.75	14	P3.1 to P3.6	Third floor enclosed balconies. South facade.
H3.4 to H3.9	LVL	3.50	7.25	2x6 stud	Bearing stud width will match wall studs width. Joists attached with heavy concealed joist ties
H3.10	LVL	3.50	14	P3.7/CMU wall	Notched in CMU wall
H2.1 to H2.6	LVL	3.50	7.25	2x6 stud	Bearing stud width will match wall studs width. Joists attached with heavy concealed joist ties
H2.7	LVL	3.50	14	P2.1/CMU wall	Notched in CMU wall
H2.8 to H2.10	LVL	3.50	18	Adjacent trusses	
H1.1	ASTM A992 steel	(2) C15x50	15	P1.4, P1.5	
H1.2 to H1.6	LVL	3.5000	7.25	2x6 stud	Bearing stud width will match wall studs width. Joists attached with heavy concealed joist ties
H1.7	ASTM A992 steel	(2) C15x50	15	P1.1, P1.2, P1.3	
H1.8	ASTM A992 steel	W14x30	14	P1.3, CMU wall	
H1.9	LVL	5.25	18	H17, bearing wall	
Facade headers (span < 3.5 feet)	LSL	3.50	7.25	"1 Jack stud(s) and 2 King studs on each side of the opening."	Applicable on any floor
First floor facade headers (3.5 < span < 7 feet)	LSL	3.50	14	"2 Jack stud(s) and 4 King studs on each side of the opening."	
Second floor facade headers (3.5 < span < 7 feet)	LSL	3.50	11.875	"2 Jack stud(s) and 4 King studs on each side of the opening."	
Third floor facade headers (3.5 < span < 7 feet)	LSL	1.75	11.875	"2 Jack stud(s) and 2 King studs on each side of the opening."	
First floor facade headers (3.5 < span < 10 feet)	LSL	5.25	16	"2 Jack stud(s) and 6 King studs on each side of the opening."	
Second floor facade headers (3.5 < span < 10 feet)	LSL	3.50	18	"2 Jack stud(s) and 6 King studs on each side of the opening."	
Third floor facade headers (3.5 < span < 10 feet)	LSL	1.75	18	"2 Jack stud(s) and 3 King studs on each side of the opening."	
Door headers (span < 4.0 feet)	LSL	5.25	14	"1 Jack stud(s) and 3 King studs on each side of the opening."	Applicable on any floor
			C	Cantilevers	
C2,C5	LVL	2x5.25	14	SW_S1A and SW_S1B shear walls	
C1, C3, C4, C6	LVL	5.25	14	facade bearing walls	
C7, C8	LVL	5.25	14	facade bearing walls	
C9	LVL	5.25	18	SW_N2D shear wall	At shear wall bottom
C10	LVL	3.50	18	CMU wall	Bolted to masonry
C11	LVL	5.25	14	SW_N1A shear wall	
				Posts	
P3.1 to p3.6	saw lumber	6	6		Third floor enclosed balconies. South facade.
P3.7	saw lumber	4	6		
P2.1	saw lumber	4	6		
P1.1, P1.2, P1.3	A500 Rect. HSS Grade B	HSS8x8x3/16			
P1.4	A500 Rect. HSS Grade B	HSS8x8x3/16			
P1.5	A500 Rect. HSS Grade B	HSS8x8x3/16			

BEARING WALL SCHEDULE									
		Stud dimensions	Spacing (in)	Top plates	Bottom plate	Truss spacing	Remarks		
		(in)	(in)			(in)			
	1st floor	2x6	9.6	(2) 2x6"	2x6"	12/24			
Facade	2nd floor	2x6	9.6	(2) 2x6"	2x6"	12/24			
	3rd floor	2x6	19.2	(3) 2x6"	2x6"	24			
	1st floor	2x6	9.6	(2) 2x6"	2x6"	12/24	Rest of the bearing walls		
Interior —	ist nooi	2x6	6.4	(2) 2x6"	2x6"	12/24	SW-S1A and SW-S1B		
interior	2nd floor	2x6	9.6	(2) 2x6"	2x6"	12/24			
	3rd floor	2x6	19.2	(3) 2x6"	2x6"	24			











Structural Engineer: Structural Engineering 4729 Dale-Curtain Dr, McFarland, WI 53558 kfrey@ennovationbuilt.com



Electrical Engineer: PRISM DESIGN ELECTRICAL CONSULTANS INC E8403 State Rd 85 | Mondovi, WI 54755

jhansen@hovlands-inc.com | 715.552.5595



1600 Aspen Commons | Ste 210 | Middleton, WI bnovak@tailoredeng.com | 608.209.7500

Date	Description
08.15.2019	75% CD Set
08.21.2019	Permit

STRUCTURAL NOTES CANNERY TRAIL RESIDENCES - 1750 N OXFORD AVE. - EAU CLAIRE, WI













Plumbing Engineer: TAILORED ENGINEERING