Data-Level Parallelism in SIMD and Vector Architectures

Current Trends in Architecture

- Cannot continue to leverage Instruction-Level parallelism (ILP)
- Beyond ILP: new models for managing parallelism:
 - Multiprocessors (Multiple Instruction Multiple Data)
 - Thread-level parallelism (TLP)
 - Data-level parallelism (DLP) => topic of this lecture
 - Request-level parallelism (RLP)

ILP, DLP

- Instead of going in the direction of complex out-of-order **ILP** processors
- An in-order vector processor can achieve the same performance, or more, by exploiting **DLP** (**Data Level Parallelism**): same instruction to manage parallel data.
 - With more energy efficiency

Flynn's Taxonomy

- SISD: Single instruction stream, single data stream
 - Uniprocessors (including scalar processors like MIPS, but also ILP processors such as superscalars)
- SIMD: Single instruction stream, multiple data streams
 - Vector architectures
 - Multimedia extensions
 - Graphics processor units
- MISD: Multiple instruction streams, single data stream
 - No practical usage => no commercial implementation
- MIMD: Multiple instruction streams, multiple data streams
 - Tightly-coupled MIMD (with thread-level parallelism)
 - Loosely-coupled MIMD (with request-level parallelism)


SIMD and Vector Architectures

Introduction to SIMD

- SIMD architectures can exploit significant data-level parallelism for:
 - Matrix-oriented scientific computing, machine learning and deep learning;
 - Multimedia such as image and sound processors;
- SIMD is more energy efficient than MIMD
 - Only needs to fetch one instruction per data operation
 - Makes SIMD attractive for personal mobile devices
- SIMD allows programmer *to continue to think sequentially* and achieve *parallel speedups* (compared to MIMD that require parallel programming).

SIMD Architecture

- Radical architecture change w.r.t. multiprocessors.
- Central controller send the same instruction to multiple processing elements (PEs) for multiple data.

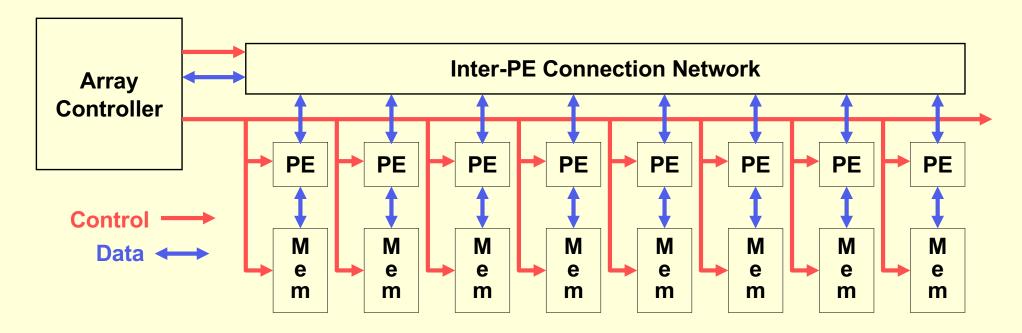

- ✓ Only requires one array controller
- ✓ Only requires storage for one copy of the sequential program
- ✓ All parallel computations are fully synchronized

SIMD model

- Synchronized PEs with single Program Counter
- Each Processing Element (PE) has its own set of data
 - Use different sets of register addresses
- Motivations for **SIMD**:
 - Cost of control unit shared by all execution units
 - Only one copy of the code in execution is necessary
- Practical use:
 - SIMD have a mix of SISD and SIMD instructions;
 - A **host processor** executes sequential instructions;
 - SIMD instructions are sent to Processing Elements: each PE has its own memory and registers and uses the interconnection network to exchange data.

Three variations of SIMD Machines

- 1. Vector architectures
- 2. SIMD extensions:
 - x86 multimedia SIMD extensions: MMX 1996,
 SSE (Streaming SIMD Extension),
 AVX (Advanced Vector Extension).
- 3. Graphics Processor Units (GPUs) => next lecture

Vector Architectures

- Basic idea:
 - Load sets of data elements into vector registers
 - Operate on vector registers
 - Write the results back into memory
- A single instruction operates on vectors of data
 - Synchronized processing units: single Program Counter
 - Register-to-register operations
 - Used to hide memory latency (memory latency occurs one per vector load/store vs. one per element load/store).
 - Leverage memory bandwidth

Vector Architectures


From Cray-1, 1976:


Scalar Unit + Vector Extensions

- Load/Store Architecture
- Vector Registers
- Vector Instructions
- Hardwired Control
- Highly Pipelined Functional Units
- Interleaved Memory System
- No Data Caches
- No Virtual Memory

Vector Processing


• Vector processors have operations that work on linear arrays of data: "vectors"

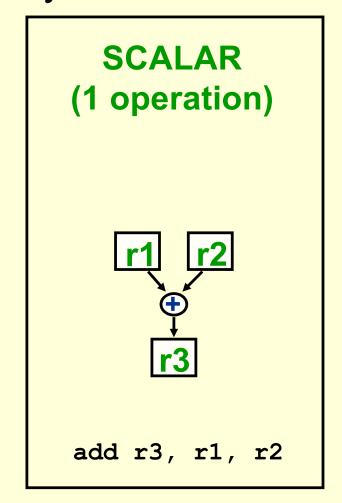

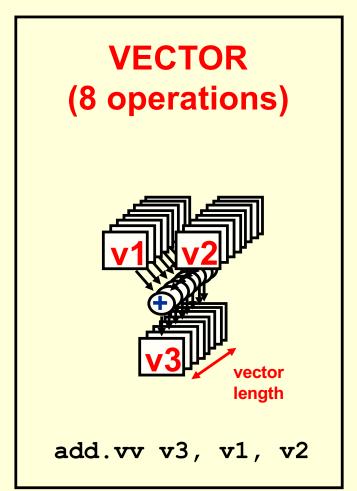

Vector Processing

• Vector processors have operations that work on linear arrays of data: "vectors"

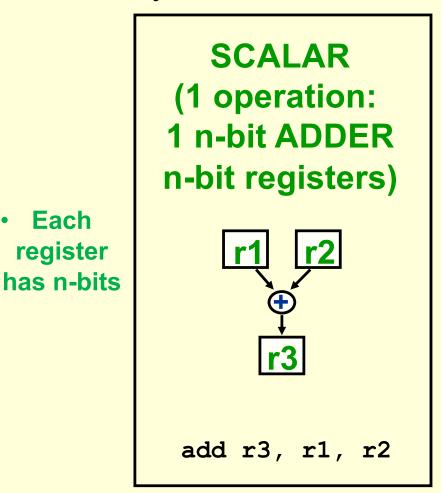


Each


register

Vector Processing

• Vector processors have operations that work on linear arrays of data: "vectors"

Each register has n-bits

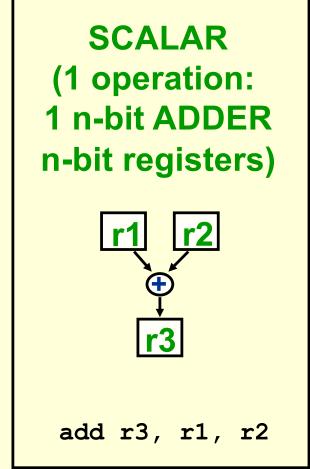

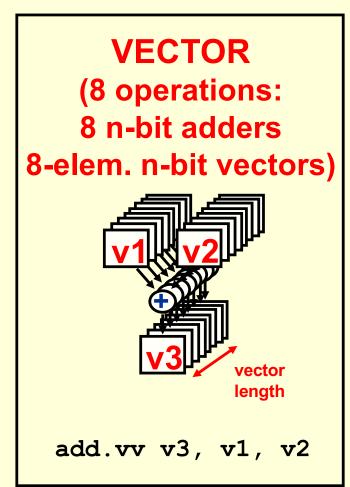

- Each vector has 8-elements with n-bits/element
- Each element is independent to any other

Properties of Vector Processors

- Each result **independent** of previous result
 - => long pipeline, compiler ensures no dependencies
 - => high clock rate
- Vector instructions access memory with known pattern
 - => highly interleaved memory
 - => amortize memory latency of over 64 elements
 - => no (data) caches required! (Do use instruction cache)
- Reduces the number of branches and branch problems in pipelines
- Single vector instruction implies lots of work (loop)
 - => fewer instruction fetches


Styles of Vector Architectures

- *Memory-memory vector processors:* all vector operations are memory to memory
- *Vector-register processors:* all vector operations are done between vector registers (except load and store)
 - Vector-equivalent of load-store scalar architectures
 - Includes all vector machines since late 1980s:
 Cray, Convex, Fujitsu, Hitachi, NEC

Components of Vector Processors

- Vector Register File: fixed length register bank holding multiple-element vectors
 - Has at least 2 read and 1 write ports
 - Typically 8-32 vector registers, each holding 64-128 bit elements

Scalar Registers vs Vector Registers

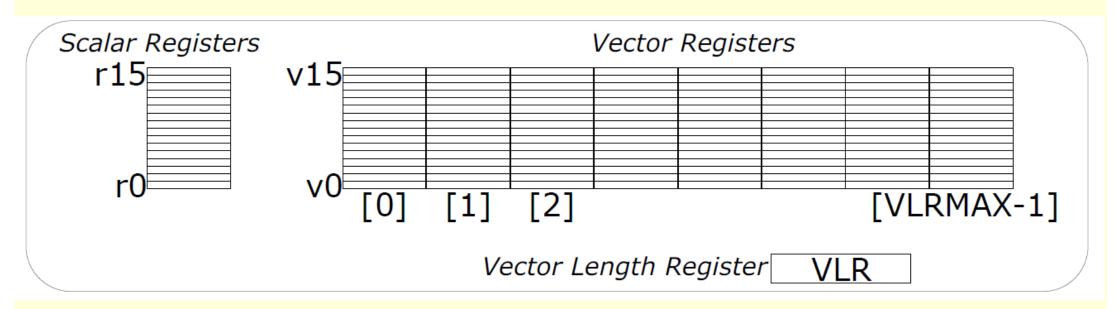

16 Scalar Registers:

each register holds a 32-bit element

16 Vector Registers:

each vector register holds VLRMAX elements, 32-bit per element

Components of Vector Processors

- Vector Register File:
 - has at least 2 read and 1 write ports
 - typically 8-32 vector registers, each holding 64-128 bit elements
- Vector Functional Units (FUs): fully pipelined, start new operation every clock
 - Typically 4 to 8 FUs: FP add, FP mult, FP reciprocal (1/X), integer add, logical, shift; may have multiple of same unit
- Vector Load-Store Units (LSUs): fully pipelined unit to load or store a vector; may have multiple LSUs
- Scalar Registers: single element for FP scalar or address
- Cross-bar to connect FUs, LSUs, registers

Vector Arithmetic Instructions

Vector Arithmetic
Instructions


ADDV v3, v1, v2

[0] [1] [VLR-1]

- There are 6-element vectors and 6 adders
 - => Each vector instruction takes one time unit.
- If there were 6-element vectors and only 3 adders
 - => Each vector instruction takes 2 time units.

Example architecture: VMIPS

- Loosely based on Cray-1
- Vector Registers File:
 - 8 vector registers: Each register holds a vector of 64-elements with 64 bits/element;
 - Thera are (at least) 16 read ports and 8 write ports (to enable up to 8 simultaneous accesses)
- Vector functional units
 - Fully pipelined so they can start a new operation every cycle
- Vector load-store unit
 - Fully pipelined, one word per clock cycle after initial memory latency
- Scalar registers
 - 32 general-purpose registers
 - 32 floating-point registers

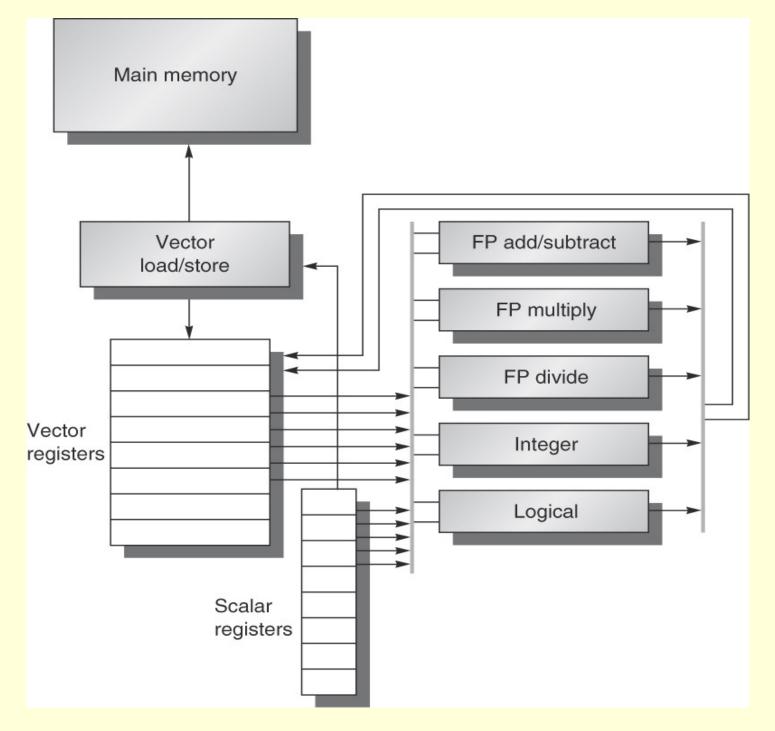

Basic structure of the VMIPS vector architecture

- •This processor has a **scalar** architecture just like MIPS.
- There are 8 64-element vector registers, and 5 vector functional units.
- •The vector and scalar registers have a significant number of read and write ports to enable simultaneous vector operations
- •The control unit and the scalar integer functional units are not shown.

Accommodating varying data sizes

- Vector processors are good for several applications (scientific applications based on linear algebra, but also multimedia applications)
 - Because they can adapt to several width: the application vector size can be mapped to 64 64-bit elements, or 128 32bit elements etc.

DAXPY operation

- DAXPY operation, in scalar vs 64-element vector VMIPS versions
- DAXPY stands for: double precision a X plus Y

$$Y = a * X + Y$$

```
for (i=0; i<64, i++) {
    Y[i]=a*X[i]+Y[i];
}</pre>
```

Scalar version of DAXPY

Let's assume that Rx and Ry are holding the addresses of vectors X and Y:

L.D F0, a ; load scalar a

DADDIU R4, Rx, #512; last address to load

Loop: L.D F2, 0(Rx) ; load X[i]

MUL.D F2, F2, F0 ; a * X[i]

L.D F4, O(Ry); load Y[i]

ADD.D F4, F4, F2 ; a * X[i] + Y[i]

S.D F4, 0(Ry); store into Y[i]

DADDIU Rx, Rx, #8; increment index to X

DADDIU Ry, Ry, #8; increment index to Y

DSUBU R20, R4, Rx ; compute bound

BNEZ R20, Loop ; check if done

Scalar version of DAXPY

(assume that Rx and Ry are holding the addresses of X and Y)

L.D F0, a

DADDIU R4, Rx, #512

Loop: L.D F2, 0(Rx)

MUL.D F2, F2, F0

L.D F4, 0(Ry)

ADD.D F4, F4, F2

S.D F4, 0(Ry)

DADDIU Rx, Rx, #8

DADDIU Ry, Ry, #8

DSUBU R20, R4, Rx

BNEZ R20, Loop

; load scalar a

; last address to load

; load X[i]

Scalar version of DAXPY: 9 instructions per iteration $=> (64 \times 9) + 2 = 578$

instructions per loop plus stalls

; increment index to Y

; compute bound

; check if done

Analysis of scalar version (1)

Loop:	L.D	F2, O(Rx)	; load X[i]
atio	MUL.D	F2, F2, F0	; a * X[i]
computatio	L.D	F4, 0(Ry)	; load Y[i]
	ADD.D	F4, F4, F2	; $a * X[i] + Y[i]$
3	S.D	F4, 0(Ry)	; store into Y[i]
p	DADDIU	Rx, Rx, #8	; increment index to X
overhead	DADDIU	Ry, Ry, #8	; increment index to Y
	DSUBU	R20, R4, Rx	; compute bound
	BNEZ	R20, Loop	; check if done

Analysis of scalar version (2)

0 u	stall L.	D	F2, 0(R	x)	; load X[i]	
computation	stan M	UL.D	F2, F2,	F0	; a * X[i]	
	stall L.	D	F4, 0(R	y)	; load Y[i]	
		DD.D	F4, F4,	F2	; a * X[i] + Y[i]	
	\searrow S.I	O	F4, 9(R)	y)	; store into Y[i]	

Scalar version need some stalls at EVERY iteration

VMIPS Instructions

- DAXPY: Y = a * X + Y
- ADDVV.D: add two vectors
- MULVS.D: multiply vector to a scalar
- LV/SV: vector load and vector store from memory address
- Vector processor version of DAXPY:

L.D	F0,a	; load scalar a
LV	V1,Rx	; load vector X
MULVS.D	V2,V1,F0	; vector-scalar multiply
LV	V3,Ry	; load vector Y
ADDVV.D	V4,V2,V3	; add two vectors
SV	Ry,V4	; store the result

VMIPS Instructions

• Vector processor version of DAXPY: Y = a * X + Y

L.D F₀,a ; load scalar a V1,Rx LV ; load vector X MULVS.D V2,V1,F0 ; vector-scalar multiply LV V3,Ry ; load vector Y V4,V2,V3 ADDVV.D ; add two vectors SV Ry,V4 ; store the result

- VMIPS requires 1 scalar and 5 vector instructions per loop vs. almost 600 scalar instructions for MIPS: greatly decreased!
- But how many clock cycles?
- It takes approximately 5×64 elements = 320 clock cycles (*)

Analysis of advantages vs. scalar version


- Very compact code: it requires only 6 vector instructions per loop!
- No branches anymore (no more loop overhead).
- The scalar version can try to get a similar effect by loop unrolling, but without the same instruction count decrease. Moreover, loop unrolling would require register renaming.
- Pipeline stalls greatly decreased in the vector version:
 - It must stall ONLY for THE FIRST vector element; after that, results can come out every clock cycle!
- How can we get a further speedup?

Operation Chaining

- Results from each FU forwarded to next FU in the chain
- Concept of *forwarding* extended to vector registers:
 - A vector operation can start as soon as each element of its vector source operand become available
 - Even though a pair of operations depend on one another, chaining allows the operations to proceed in parallel on separate elements of the vector.
 - In this way, we don't need anymore to wait for the last element of a load to start the next dependent instruction.


Operation Chaining (2)

• Without chaining: must wait for last element of one instruction to be written before starting the next dependent instruction

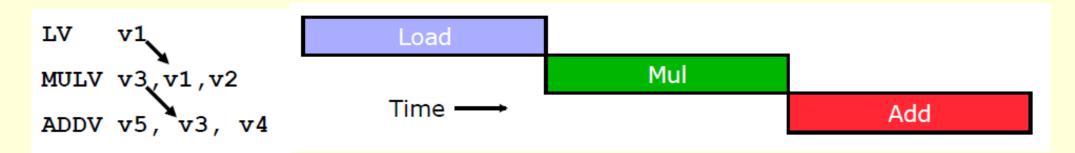

Operation Chaining (2)

• Without chaining: must wait for last element of one instruction to be written before starting the next dependent instruction

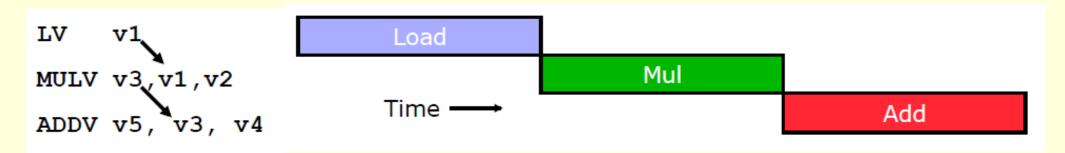

• With chaining: a dependent operation can start as soon as each element of its vector source operand become available (*):




^(*) We assumed to have 1 LV/SV Unit, 1 MULV Unit and 1 ADDV Unit

Vector Execution Time


- Execution time depends on three factors:
 - Length of operand vectors (number of elements)
 - Structural hazards (how many vector functional units)
 - Data dependencies (need to introduce operation chaining)
- VMIPS functional units consume *one element per clock cycle*
 - So, the execution time of one vector instruction is approximately given by the vector length

Operation Chaining (2)

• Without chaining: $(3 \times 64) = 192$ clock cycles

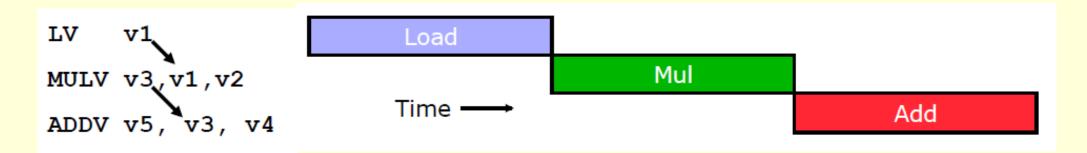

• With chaining: (64 + 2) = 66 clock cycles

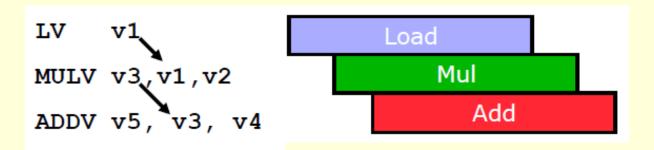

(*) We assumed to have 1 LV/SV Unit, 1 MULV Unit and 1 ADDV Unit

Convoys

- Simplification: to introduce the notion of *convoy*
 - Set of vector instructions that could potentially execute together partially overlapped (no structural hazards)
- Sequences with read-after-write dependency hazards can be in the same convoy via *chaining*

Chimes

- *Chime* is a timing metric corresponding to the unit of time to execute one convoy
 - m convoys execute in m chimes (or time units)
 - Simply stated: for a vector length of n, and m convoys in a program, n x m clock cycles are required
 - Chime approximation ignores some processor-specific overheads

DAXPY Example

LV V1,Rx ;load vector X

MULVS.D V2,V1,F0 ;vector-scalar multiply

LV V3,Ry ;load vector Y

ADDVV.D V4,V2,V3 ;add two vectors

SV Ry,V4 ;store the sum

Let assume to have 1 LV/SV Unit & 1 ALU V Unit with chaining:

DAXPY Example

LV V1,Rx ;load vector X

MULVS.D V2,V1,F0 ;vector-scalar multiply

LV V3,Ry ;load vector Y

ADDVV.D V4,V2,V3 ;add two vectors

SV Ry,V4 ;store the sum

Let assume to have 1 LV/SV Unit & 1 ALU V Unit with chaining:

3 convoys:


- 1) LV MULVS.D (chaining)
- 2) LV ADDVV.D (chaining)
- 3) SV

3 convoys (3 chimes): 2 FP ops per element => 1.5 cycles per FP ops per element;

DAXPY Example

3 convoys:

- 1) LV MULVS.D (chaining)
- 2) LV ADDVV.D (chaining)
- 3) SV

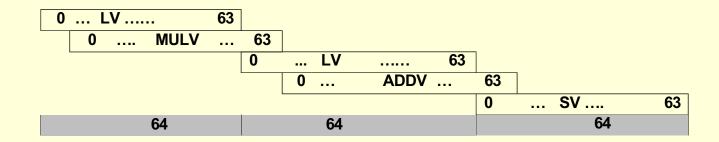


- 3 convoys (3 chimes)
- For 64 element vectors \Rightarrow 3 x 64 = 192 clock cycles instead of:
 - about 320 clock cycles without chaining;
 - about 600 cycles (plus stalls) for scalar MIPS;

• How can a vector processor execute a vector faster than one element per clock cycle?

Introducing Multiple Lanes

• Instead of generating an element per cycle in one lane, spread the elements of the two vector operands into multiple lanes to improve vector performance

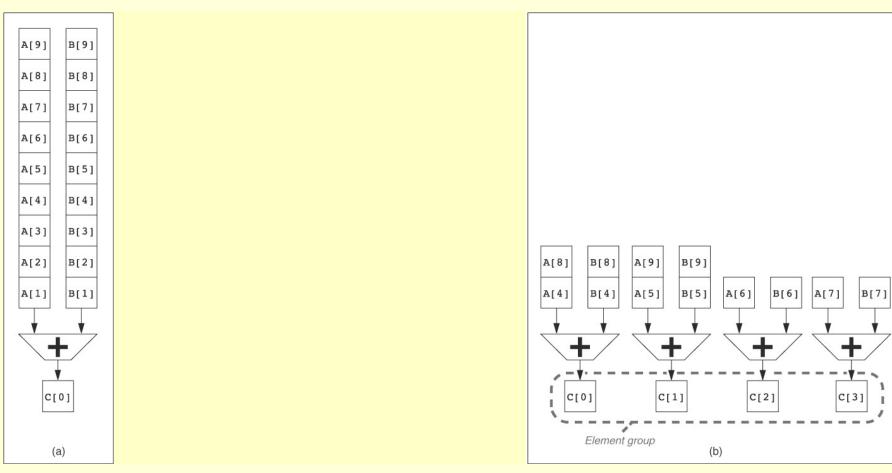

SINGLE ADD PIPELINE:

1 add per cycle64 cycles for a vector of 64 elements


FOUR ADDs PIPELINE:

4 adds per cycle 16 cycles for a vector of 64 elements

Multiple Lanes

Vector Unit with 4 lanes

Vector registers are divided across 4 lanes

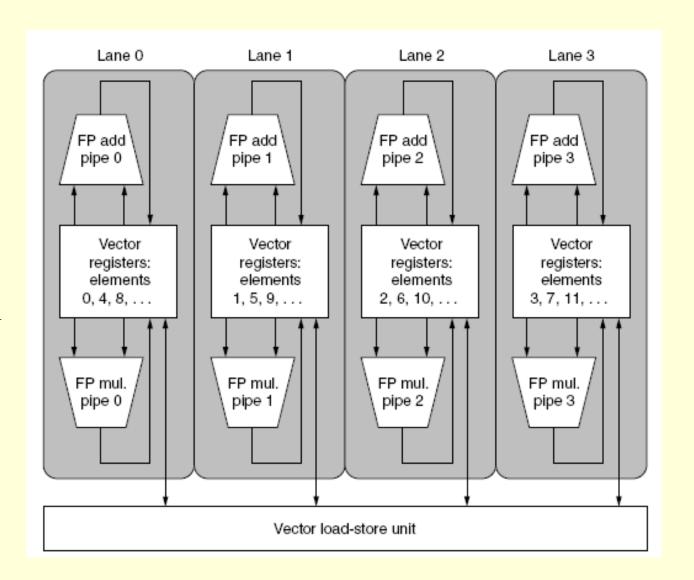

• How to handle a number of loop iterations not equal to the vector length?

Vector Length Control

- The *Maximum Vector Length (MVL)* is the physical length of vector registers in a machine (64 in VMIPS)
- What do you do when the vector length in a program is not exactly 64?
 - 1. Vector length smaller than 64
 - 2. Vector length **unknown** at compile time and maybe **greater** than MVL


1) Vector length smaller than 64

- There is a special register, called vector-length register (VLR)
- The VLR controls the length of any vector operation (including vector load/store).
- It can be set to any value *smaller* than the MVL (64)

2) Vector length unknown at compile time

for (i=0; i<N; i++) C[i] = A[i]+B[i]; Restructure the code using a technique called *strip mining*:


• Sort of loop unrolling where the length of first segment is the **remainder (N mod MVL)** and all subsequent segments are of length **MVL**

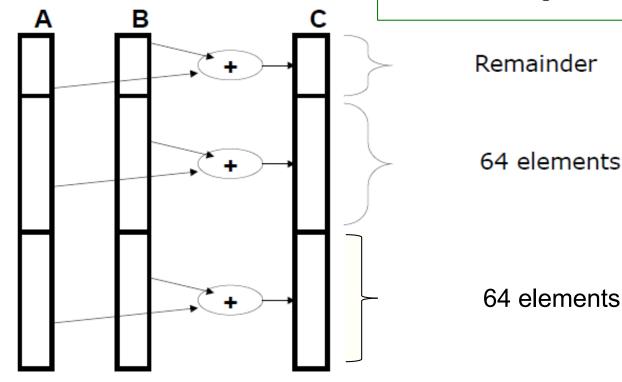

Vector length unknown at compile time

Restructure the code using a technique called *strip mining*:

- Code generation technique such that each vector operation is done for a size less than or equal to MVL
- Sort of loop unrolling where the length of the first segment is (n mod MVL) and all subsequent segments are of length MVL

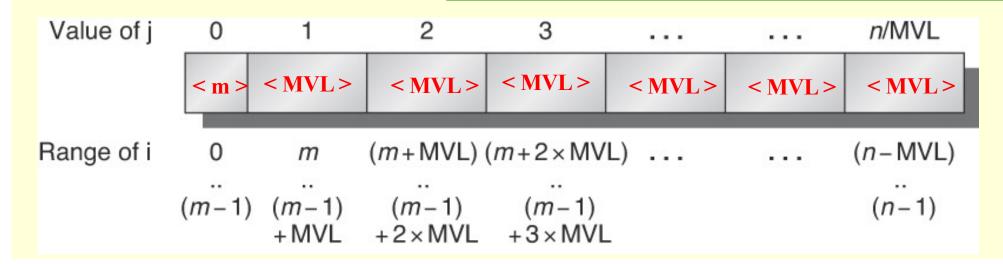

• What to do when there is an IF statement inside the FOR loop code to be vectorized?

Vector Mask Registers

Control Dependence in a loop

This loop cannot normally be vectorized because of the **if** clause inside it

- Use a *vector mask register* to "disable" some elements:
- The vector mask uses a Boolean vector of length MVL to control the execution of a vector instruction.
- When vector mask registers are enabled, any vector instruction operates ONLY on the vector elements whose corresponding masks bits are set to 1.

Vector Mask Registers

This loop cannot normally be vectorized because of the **if** clause inside it

Use vector mask register to "disable" elements:

;load vector X into V1 V1,Rx LV ;load vector Y into V2 LVV2,Ry LDF0,#0 ;load FP zero into F0 SNEVS.D V1,F0 ;sets VM(i) to 1 if V1(i)!=F0V1,V1,V2 SUBVV.D ;subtract under vector mask SV Rx,V1 ;store the result in X

The cycles for non-executed operation elements are lost But the loop can still be vectorized!


Memory Banks

- Memory system must be designed to support high bandwidth for vector loads and stores
- Spread accesses across multiple banks
 - Control bank addresses independently
 - Load or store non sequential words
 - Support multiple vector processors sharing the same memory
 - Startup time: time to get first word from memory to registers
- Example:
 - 32 processors, each generating 4 loads and 2 stores/cycle
 - Processor cycle time is 2.167 ns, SRAM cycle time is 15 ns
 - How many memory banks needed?

• How to handle bi-dimensional matrices?

Stride

- When a *matrix* is allocated in memory, it is linearized and laid out in row-major order in C => the elements in the columns are not-adjacent in memory
- How to handle non-adjacent memory elements?
- Managing the *stride*: the distance separating memory elements that are to be gathered into a single register.

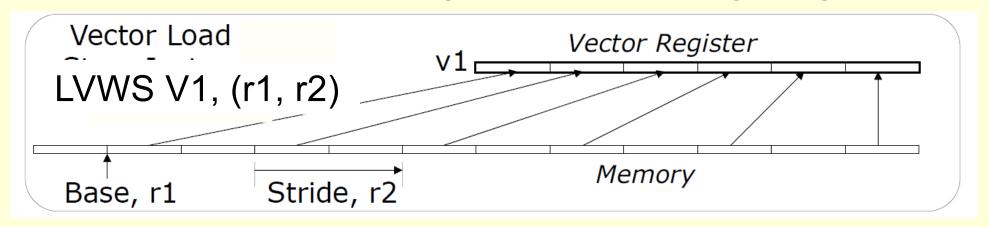

Stride

- When the elements of a matrix in the inner loop are accessed by column => they are separated in memory by a *stride* equal to the row size times 8 bytes per entry
- We need an instruction *LVWS* to load elements of a vector that are non-adjacent in memory from address R1 with stride R2:

LVWS V1, (R1, R2) ; V1
$$\leq$$
 M[R1 + i*R2]

• Example: LVWS V1, (C, 100) ; V1 \leq M[C + i*100] while LV V2, B ; V2 \leq M[B]

Stride

• Consider:

```
for (i = 0; i < 100; i=i+1)

for (j = 0; j < 100; j=j+1) {

A[i][j] = 0.0;
for (k = 0; k < 100; k=k+1)
A[i][j] = A[i][j] + B[i][k] * D[k][j];
}
```

- Must vectorize multiplication of rows of B with columns of D
- Use non-unit stride for columns of D
- Bank conflict (stall) occurs when the same bank is hit faster than bank busy time:
 - #banks / LCM(stride, #banks) < bank busy time</p>

• How to handle sparse matrices in vector processors?

Gather-Scatter

• Primary mechanism to support *sparse matrices* by using index vectors. Consider:

for
$$(i = 0; i < n; i=i+1)$$

$$A[K[i]] = A[K[i]] + C[M[i]];$$

• Use index vector K and M to indicate the nonzero elements of A and C (A and C must have the same number of nonzero elements).

LV	Vk, Rk	;load K
LVI	Va, (Ra+Vk)	;load A[K[]]
LV	Vm, Rm	;load M
LVI	Vc, (Rc+Vm)	;load C[M[]]
ADDVV.D	Va, Va, Vc	;add them
SVI	(Ra+Vk), Va	;store A[K[]]

SIMD Instruction Set Extensions

- Multimedia applications operate on data types narrower than the native word size
 - Example: disconnect carry chains to "partition"
 adder
- Limitations, compared to vector instructions:
 - Number of data operands encoded into op code
 - No sophisticated addressing modes (strided, scattergather)
 - No mask registers

SIMD Implementations

- Implementations:
 - Intel MMX (1996)
 - Eight 8-bit integer ops or four 16-bit integer ops
 - Streaming SIMD Extensions (SSE) (1999)
 - Eight 16-bit integer ops
 - Four 32-bit integer/fp ops or two 64-bit integer/fp ops
 - Advanced Vector Extensions (2010)
 - Four 64-bit integer/fp ops
 - Operands must be consecutive and aligned memory locations