5.1 Introduction

The ARM programmers' model was introduced in Figure 2.1 on page 39. In this chapter we will consider the supervisor and exception modes, so now the shaded registers will also come into play.

Data types

ARM processors support six data types:

- 8-bit signed and unsigned bytes.
- 16-bit signed and unsigned half-words; these are aligned on 2-byte boundaries.
- 32-bit signed and unsigned words; these are aligned on 4-byte boundaries.

(Some older ARM processors do not have half-word and signed byte support.)

ARM instructions are all 32-bit words and must be word-aligned. Thumb instructions are half-words and must be aligned on 2-byte boundaries.

Internally all ARM operations are on 32-bit operands; the shorter data types are only supported by data transfer instructions. When a byte is loaded from memory it is zero- or sign-extended to 32 bits and then treated as a 32-bit value for internal processing.

ARM coprocessors may support other data types, and in particular there is a defined set of types to represent floating-point values. There is no explicit support for these types within the ARM core, however, and in the absence of a floating-point coprocessor these types are interpreted by software which uses the standard types listed above.

Memory organization

There are two ways to store words in a byte-addressed memory, depending on whether the least significant byte is stored at a lower or higher address than the next most significant byte. Since there is no good reason for choosing one approach over the other the argument as to which is better is more a matter of religion than reason.

The two schemes are illustrated in Figure 5.1 on page 107, which shows how an assortment of data types would be stored under the two schemes. ('half-word!2' is found at address 12, and so on.)

The 'little-endian' and 'big-endian' terminology which is used to denote the two approaches is derived from Swift's *Gulliver s Travels*. The inhabitants of Lilliput, who are well known for being rather small are, in addition, constrained by law to break their eggs only at the little end. When this law is imposed, those of their fellow citizens who prefer to break their eggs at the big end take exception to the new rule and civil war breaks out. The big-endians eventually take refuge on a nearby island, which is the kingdom of Blefuscu. The civil war results in many casualties.

The application of the 'big-endian' and 'little-endian' terms to the two ways to organize computer memory comes from 'On Holy Wars and a Plea for Peace' by Danny Cohen in the October 1981 issue *of Computer*.

Introduction 107

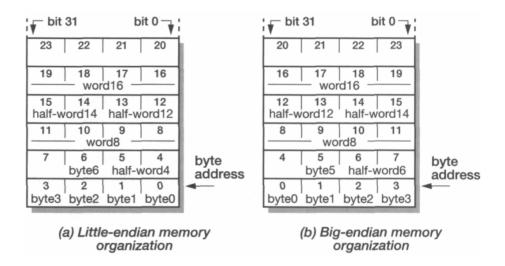


Figure 5.1 Little- and big-endian memory organizations.

To my knowledge, no one has yet been mortally wounded in an argument over byte ordering. However the issue causes significant practical difficulties when datasets are transferred between machines of opposite orderings.

Most ARM chips remain strictly neutral in the dispute and can be configured to work with either memory arrangement, though they default to little-endian. Throughout this book we will assume a little-endian ordering, where bytes of increasing significance are stored at increasing addresses in memory. ARM may be neutral, but I am not!

Privileged modes

Most programs operate in user mode as described in Chapter 3. However, ARM has other **privileged** operating modes which are used to handle exceptions and supervisor calls (which are sometimes called **software interrupts**).

The current operating mode is defined by the bottom five bits of the CPSR (see Figure 2.2 on page 40). The interpretation of these bits is summarized in Table 5.1 on page 108. Where the register set is not the user registers, the relevant shaded registers shown in Figure 2.1 on page 39 replace the corresponding user registers and the current SPSR (Saved Program Status Register; see below) also becomes accessible.

Some ARM processors do not support all of the above operating modes, and some also support '26-bit' modes for backwards compatibility with older ARMs; these will be discussed further in Section 5.23 on page 147.

The privileged modes can only be entered through controlled mechanisms; with suitable memory protection they allow a fully protected operating system to be built. This issue will be discussed further in Chapter 11.

Most ARMs are used in embedded systems where such protection is inappropriate, but the privileged modes can still be used to give a weaker level of protection that is useful for trapping errant software.

CPSR[4:0]	Mode	Use	Registers
10000	User	Normal user code	user
10001	FIQ	Processing fast interrupts	_fiq
10010	IRQ	Processing standard interrupts	_irq
10011	SVC	Processing software interrupts (SWIs)	_svc
10111	Abort	Processing memory faults	_abt
11011	Undef	Handling undefined instruction traps	_und
11111	System	Running privileged operating system tasks	user

Table 5.1 ARM operating modes and register usage.

The SPSRs

Each privileged mode (except system mode) has associated with it a Saved Program Status Register, or SPSR. This register is used to save the state of the CPSR (Current Program Status Register) when the privileged mode is entered in order that the user state can be fully restored when the user process is resumed. Often the SPSR may be untouched from the time the privileged mode is entered to the time it is used to restore the CPSR, but if the privileged software is to be re-entrant (for example, if supervisor code makes supervisor calls to itself) then the SPSR must be copied into a general register and saved.

5.2 Exceptions

Exceptions are usually used to handle unexpected events which arise during the execution of a program, such as interrupts or memory faults. In the ARM architecture the term is also used to cover software interrupts and undefined instruction traps (which do not really qualify as 'unexpected') and the system reset function which logically arises before rather than during the execution of a program (although the processor may be reset again while running). These events are all grouped under the 'exception' heading because they all use the same basic mechanism within the processor. ARM exceptions may be considered in three groups:

- Exceptions generated as the direct effect of executing an instruction.
 Software interrupts, undefined instructions (including coprocessor instructions where the requested coprocessor is absent) and prefetch aborts (instructions that are invalid due to a memory fault occurring during fetch) come under this heading.
- Exceptions generated as a side-effect of an instruction.
 Data aborts (a memory fault during a load or store data access) are in this class.
- Exceptions generated externally, unrelated to the instruction flow. Reset, IRQ and FIQ fall into this category.

Exceptions 109

Exception entry

When an exception arises, ARM completes the current instruction as best it can (except that *reset* exceptions terminate the current instruction immediately) and then departs from the current instruction sequence to handle the exception. Exception entry caused by a side-effect or an external event usurps the next instruction in the current sequence; direct-effect exceptions are handled in sequence as they arise. The processor performs the following sequence of actions:

- It changes to the operating mode corresponding to the particular exception.
- It saves the address of the instruction following the exception entry instruction in r14 of the new mode.
- It saves the old value of the CPSR in the SPSR of the new mode.
- It disables IRQs by setting bit 7 of the CPSR and, if the exception is a fast interrupt, disables further fast interrupts by setting bit 6 of the CPSR.
- It forces the PC to begin executing at the relevant vector address given in Table 5.2.

 Table 5.2
 Exception vector addresses.

Exception	Mode	Vector address	
Reset	SVC	0x00000000	
Undefined instruction	UND	0x00000004	
Software interrupt (SWI)	SVC	0x00000008	
Prefetch abort (instruction fetch memory fault)	Abort	0x0000000C	
Data abort (data access memory fault)	Abort	0x00000010	
IRQ (normal interrupt)	IRQ	0x00000018	
FIQ (fast interrupt)	FIQ	0x0000001C	

Normally the vector address will contain a branch to the relevant routine, though the FIQ code can start immediately since it occupies the highest vector address.

The two banked registers in each of the privileged modes are used to hold the return address and a stack pointer; the stack pointer may be used to save other user registers so that they can be used by the exception handler. FIQ mode has additional private registers to give better performance by avoiding the need to save user registers in most cases where it is used.

Exception return

Once the exception has been handled the user task is normally resumed. This requires the handler code to restore the user state exactly as it was when the exception first arose:

- Any modified user registers must be restored from the handler's stack.
- The CPSR must be restored from the appropriate SPSR.
- The PC must be changed back to the relevant instruction address in the user instruction stream.

Note that the last two of these steps cannot be carried out independently. If the CPSR is restored first, the banked r14 holding the return address is no longer accessible; if the PC is restored first, the exception handler loses control of the instruction stream and cannot cause the restoration of the CPSR to take place. There are also more subtle difficulties to do with ensuring that instructions are always fetched in the correct operating mode to ensure that memory protection schemes are not bypassed. Therefore ARM provides two mechanisms which cause both steps to happen atomically as part of a single instruction. One of these is used when the return address has been kept in the banked r14 and the other when the return address has been saved onto a stack. First we look at the case where the return address is in r14.

• To return from a SWI or undefined instruction trap use:

• To return from an IRQ, FIQ or prefetch abort use:

• To return from a data abort to retry the data access use:

The 's' modifier after the opcode signifies the special form of the instruction when the destination register is the PC. Note how the return instruction incorporates an adjustment to the return address where necessary:

- IRQ and FIQ must return one instruction early in order to execute the instruction that was 'usurped' for the exception entry.
- Prefetch abort must return one instruction early to execute the instruction that had caused a memory fault when first requested.
- Data abort must return two instructions early to retry the data transfer instruction, which was the instruction *before* the one usurped for exception entry.

If the handler has copied the return address out onto a stack (in order, for example, to allow re-entrant behaviour, though note that in this case the SPSR must be saved as well as the PC) the restoration of the user registers and the return may be implemented with a single multiple register transfer instruction such as:

```
LDMFD r13!, {r0-r3,pc}"; restore and return
```

Here the '*' after the register list (which must include the PC) indicates that this is a special form of the instruction. The CPSR is restored at the same time that the PC is loaded from memory, which will always be the last item transferred from memory since the registers are loaded in increasing order.

The stack pointer (r13) used here is the banked register belonging to the privileged operating mode; each privileged mode can have its own stack pointer which must be initialized during system start-up.

Clearly the stack return mechanism can only be employed if the value in r14 was adjusted, where necessary, before being saved onto the stack.

Conditional execution 111

Exception priorities

Since multiple exceptions can arise at the same time it is necessary to define a priority order to determine the order in which the exceptions are handled. On ARM this is:

- 1. reset (highest priority);
- 2. data abort;
- 3. FIQ;
- 4. IRQ;
- 5. prefetch abort;
- 6. SWI, undefined instruction (including absent coprocessor). These are mutually exclusive instruction encodings and therefore cannot occur simultaneously.

Reset starts the processor from a known state and renders all other pending exceptions irrelevant.

The most complex exception scenario is where an FIQ, an IRQ and a third exception (which is not Reset) happen simultaneously. FIQ has higher priority than IRQ and also masks it out, so the IRQ will be ignored until the FIQ handler explicitly enables IRQ or returns to the user code.

If the third exception is a data abort, the processor will enter the data abort handler and then immediately enter the FIQ handler, since data abort entry does not mask FIQs out. The data abort is 'remembered' in the return path and will be processed when the FIQ handler returns.

If the third exception is not a data abort, the FIQ handler will be entered immediately. When FIQ and IRQ have both completed, the program returns to the instruction which generated the third exception, and in all the remaining cases the exception will recur and be handled accordingly.

Address exceptions

The observant reader will have noticed that Table 5.2 on page 109 shows the use of all of the first eight word locations in memory as exception vector addresses apart from address 0x00000014. This location *was* used on earlier ARM processors which operated within a 26-bit address space to trap load or store addresses which fell outside the address space. These traps were referred to as 'address exceptions'.

Since 32-bit ARMs are unable to generate addresses which fall outside their 32-bit address space, address exceptions have no role in the current architecture and the vector address at 0x00000014 is unused.

5.3 Conditional execution

An unusual feature of the ARM instruction set is that every instruction (with the exception of certain v5T instructions) is conditionally executed. Conditional branches are a standard feature of most instruction sets, but ARM extends the

conditional execution to all of its instructions, including supervisor calls and coprocessor instructions. The condition field occupies the top four bits of the 32-bit instruction field:



Figure 5.2 The ARM condition code field.

Each of the 16 values of the condition field causes the instruction to be executed or skipped according to the values of the N, Z, C and V flags in the CPSR. The conditions are given in Table 5.3 on page 113. Every ARM instruction mnemonic may be extended by appending the two letters defined in this table, though the 'always' condition (AL) may be omitted since it is the default condition that is assumed if no other condition is specified.

The 'never' condition

The 'never' condition (NV) should not be used - there are plenty of other ways to write no-ops (instructions that have no effect on the processor state) in ARM code. The reason to avoid the 'never' condition is that ARM Limited have indicated that they may use this area of the instruction space for other purposes in the future (and have done so in architecture v5T), so although current ARMs may behave as expected, there is no guarantee that future variants will behave the same way.

Alternative mnemonics

Where alternative mnemonics are shown in the same row in the condition table this indicates that there is more than one way to interpret the condition field. For instance, in row 3 the same condition field value can be invoked by the mnemonic extension CS or HS. Both cause the instruction to be executed only if the C bit in the CPSR is set. The alternatives are available because the same test is used in different circumstances. If you have previously added two unsigned integers and want to test whether there was a carry-out from the addition, you should use CS. If you have compared two unsigned integers and want to test whether the first was higher or the same as the second, use HS. The alternative mnemonic removes the need for the programmer to remember that an unsigned comparison sets the carry on higher or the same.

The observant reader will note that the conditions are in pairs where the second condition is the inverse of the first, so for any condition the opposite condition is also available (with the exception of 'always', since 'never' should not be used). Therefore whenever *if...then...* can be implemented with conditional instructions, ...*else...* can be added using instructions with the opposite condition.

Opcode [31:28]	Mnemonic extension	Interpretation	Status flag state for execution
0000	EQ	Equal / equals zero	Zset
0001	NE	Not equal	Z clear
0010	CS/HS	Carry set / unsigned higher or same	Cset
0011	CC/LO	Carry clear / unsigned lower	C clear
0100	Ml	Minus / negative	Nset
0101	PL	Plus / positive or zero	N clear
0110	VS	Overflow	Vset
0111	vc	No overflow	V clear
1000	HI	Unsigned higher	C set and Z clear
1001	LS	Unsigned lower or same	C clear or Z set
1010	GE	Signed greater than or equal	N equals V
1011	LT	Signed less than	N is not equal to V
1100	GT	Signed greater than	Z clear and N equals V
1101	LE-	Signed less than or equal	Z set or N is not equal to V
1110	AL	Always	any
1111	NV	Never (do not use!)	none

 Table 5.3
 ARM condition codes.

5.4 Branch and Branch with Link (B, BL)

Branch and Branch with Link instructions are the standard way to cause a switch in the sequence of instruction execution. The ARM normally executes instructions from sequential word addresses in memory, using conditional execution to skip over individual instructions where required. Whenever the program must deviate from sequential execution a control flow instruction is used to modify the program counter. Although there are several ways to achieve this in special circumstances, Branch and Branch with Link instructions are the standard way.



Figure 5.3 Branch and Branch with Link binary encoding.

Description

Branch and Branch with Link instructions cause the processor to begin executing instructions from an address computed by sign extending the 24-bit offset specified in the instruction, shifting it left two places to form a word offset, then adding it to the program counter which contains the address of the branch instruction plus eight bytes. (See 'PC behaviour' on page 78. for an explanation of the PC offset.) The assembler will compute the correct offset under normal circumstances.

The range of the branch instruction is +/- 32 Mbytes.

The Branch with Link variant, which has the L bit (bit 24) set, also moves the address of the instruction following the branch into the link register (r14) of the current processor mode. This is normally used to perform a subroutine call, with the return being caused by copying the link register back into the PC.

Both forms of the instruction may be executed conditionally or unconditionally.

Assembler format

'L' specifies the branch and link variant; if 'L' is not included a branch without link is generated.'<cond>' should be one of the mnemonic extensions given in Table 5.3 on page 113 or, if omitted, 'AL' is assumed.'<target address>' is normally a label in the assembler code; the assembler will generate the offset (which will be the difference between the address of the target and the address of the branch instruction plus 8).

Examples

An unconditional jump:

```
; unconditional jump ...
  LABEL
                            ; .. to here
          . .
To execute a loop ten times:
                   r0, #10; initialize loop counter
          MOV
  LOOP
                   r0, #1; decrement counter setting CCs
          SUBS
                   LOOP
                            ; if counter <> 0 repeat loop..
          BNE
                            ; .. else drop through
To call a subroutine:
          BL
                            ; branch and link to subroutine SUB
                            ; return to here
                            ; subroutine entry point
  SUB
          MOV
                   PC, r14; return
                   LABEL
          R
```

Conditional subroutine call:

```
CMP r0, #5 ; if r0 < 5
BLLT SUB1 ; then call SUB1
BLGE SUB2 ; else call SUB2
```

(Note that this example will only work correctly if SUB1 does not change the condition codes, since if the BLLT is taken it will return to the BLGE. If the condition codes are changed by SUB1, SUB2 may be executed as well.)

Notes

- 1. If you are familiar with other RISC processors you might expect ARM to execute the instruction after the branch before moving to LABEL in the first example above, following the *delayed branch* model employed by many other RISCs. This expectation will not be fulfilled, however, since ARM does not employ a delayed branch mechanism.
- 2. Branches which attempt to go past the beginning or the end of the 32-bit address space should be avoided since they may have unpredictable results.

5.5 Branch, Branch with Link and exchange (BX, BLX)

These instructions are available on ARM chips which support the Thumb (16-bit) instruction set, and are a mechanism for switching the processor to execute Thumb instructions or for returning symmetrically to ARM and Thumb calling routines. A similar Thumb instruction causes the processor to switch back to 32-bit ARM instructions. The Thumb instruction set is described in Chapter 7.

BLX is available only on ARM processors that support architecture v5T.

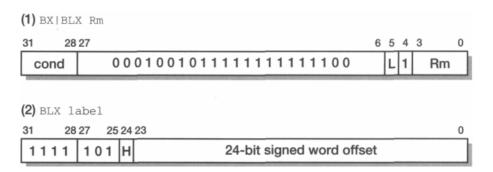


Figure 5.4 Branch (with optional link) and exchange instruction binary encodings.

Description

In the first format the branch target is specified in a register, Rm. Bit[0] of Rm is copied into the T bit in the CPSR and bits[31:1] are moved into the PC:

- If Rm[0] is 1, the processor switches to execute Thumb instructions and begins
 executing at the address in Rm aligned to a half-word boundary by clearing the
 bottom bit.
- If Rm[0] is 0, the processor continues executing ARM instructions and begins executing at the address in Rm aligned to a word boundary by clearing Rm[1].

In the second format the branch target is an address computed by sign extending the 24-bit offset specified in the instruction, shifting it left two places to form a word offset, then adding it to the program counter which contains the address of the BX instruction plus eight bytes. (See 'PC behaviour' on page 78. for an explanation of the PC offset.) The H bit (bit 24) is also added into bit 1 of the resulting address, allowing an odd half-word address to be selected for the target instruction which will always be a Thumb instruction (BL is used to target an ARM instruction). The assembler will compute the correct offset under normal circumstances. The range of the branch instruction is +/- 32 Mbytes.

The Branch with Link variants (BLX, available only on v5T processors) of both formats, which have the L bit (bit 5) set in the first format, also move the address of the instruction following the branch into the link register (r14) of the current processor mode. This is normally used to save the return address when calling a Thumb subroutine. If BX is used as the subroutine return mechanism the instruction set of the calling routine can be saved along with the return address, so the same return mechanism can be used to return symmetrically to either an ARM or a Thumb caller from an ARM or Thumb subroutine.

Format (1) instructions may be executed conditionally or unconditionally, but format (2) instructions are executed unconditionally.

Assembler format

```
1: B{L}X{<cond>} Rm
2: BLX <target address>
```

'<target address>' is normally a label in the assembler code; the assembler will generate the offset (which will be the difference between the word address of the target and the address of the branch instruction plus 8) and set the H bit if appropriate.

Examples

```
An unconditional jump:

BX r0 ; branch to address in r0,
; enter Thumb state if r0[0] = 1

A call to a Thumb subroutine:

CODE32 ; ARM code follows
..

BLX TSUB ; call Thumb subroutine
```

Software Interrupt (SWI)

```
CODE16 ; start of Thumb code
TSUB . ; Thumb subroutine
BX r14 ; return to ARM code
```

Notes

- 1. Some ARM processors which do not support the Thumb instruction set will trap these instructions, allowing software emulation of Thumb.
- 2. Only processors that implement ARM architecture v5T support either format of the BLX instruction (see Section 5.23 on page 147).

5.6 Software Interrupt (SWI)

The software interrupt instruction is used for calls to the operating system and is often called a 'supervisor call'. It puts the processor into supervisor mode and begins executing instructions from address 0x08.

If this area of memory is suitably protected it is possible to build an operating system on the ARM that is fully protected from a malicious user, though since ARM is rarely used in multi-user applications this level of protection is not often sought.

Binary encoding



Figure 5.5 Software interrupt binary encoding.

Description

The 24-bit immediate field does not influence the operation of the instruction but may be interpreted by the system code.

If the condition is passed the instruction enters supervisor mode using the standard ARM exception entry sequence. In detail, the processor actions are:

- 1. Save the address of the instruction after the SWI in r14 svc.
- 2. Save the CPSR in SPSR svc.
- 3. Enter supervisor mode and disable IRQs (but not FIQs) by setting CPSR[4:0] to 100112andCPSR[7]tol.
- 4. Set the PC to 08 ₁₆ and begin executing the instructions there.

To return to the instruction after the SWI the system routine must not only copy r14_svc back into the PC, but it must also restore the CPSR from SPSR_svc. This requires the use of one of the special forms of the data processing instruction described in the next section.

```
Assembler
                              SWI{<cond>}
                                               <24-bit immediate>
format
Examples
                   To output the character 'A':
                              MOV
                                      r0, #'A'
                                                           ; get 'A' into r0..
Notes
                              SWI
                                      SWI_WriteC
                                                          ; .. and print it
                   A subroutine to output a text string following the call:
                              _{\mathrm{BL}}
                                      STROUT
                                                          ; output following message
                                      "Hello World", &0a, &0d, 0
                                                          ; return to here
                     STROUT LDRB
                                      r0, [r14], #1
                                                         ; get character
                                      r0, #0
                                                          ; check for end marker
                              CMP
                                      SWI_WriteC
                                                          ; if not end, print ...
                              SWINE
                                                          ; .. and loop
                              BNE
                                      STROUT
                                      r14, #3
                                                          ; align to next word
                              ADD
                              BIC
                                      r14, #3
                              MOV
                                      pc, r14
                                                           ; return
                   To finish executing the user program and return to the monitor program:
                                      SWI_Exit
                                                           ; return to monitor
```


- 1. An SWI may be executed when the processor is already in supervisor mode pro vided the original return address (in r14_svc) and SPSR_svc have been saved; otherwise these registers will be overwritten when the SWI is executed.
- 2. The interpretation of the 24-bit immediate is system dependent, but most systems support a standard subset for character I/O and similar basic functions.
 - The immediates can be specified as constant expressions, but it is usually better to declare names for the required calls (and set their values) at the start of the program (or import a file which declares their values for the local operating system) and then use these names in the code.
 - To see how to declare names and give them values look at the 'Examples and exercises' on page 72.
- 3. The first instruction executed in supervisor mode, which is at 08jg, is normally a branch to the SWI handler which resides somewhere nearby in memory. Writing the SWI handler to start at OSjg is not possible because the next memory word, at OC₁₆, is the entry point for the prefetch abort handler.

5.7 Data processing instructions

The ARM data processing instructions are used to modify data values in registers. The operations that are supported include arithmetic and bit-wise logical combinations of 32-bit data types. One operand may be shifted or rotated *en route* to the ALU, allowing, for example, shift and add in a single instruction.

Multiply instructions use different formats, so these are considered separately in the next section.

Binary encoding

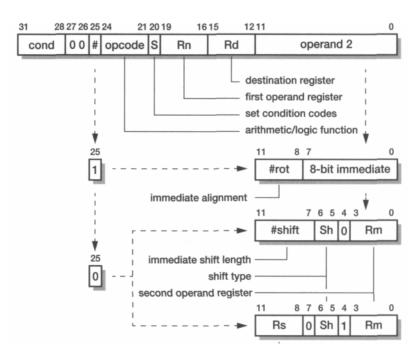

register shift length -Figure 5.6

Data processing instruction binary encoding.

Description

The ARM data processing instructions employ a 3-address format, which means that the two source operands and the destination register are specified independently. One source operand is always a register; the second may be a register, a shifted register or an immediate value. The shift applied to the second operand, if it is a register, may be a logical or arithmetic shift or a rotate (see Figure 3.1 on page 54), and it may be by an amount specified either as an immediate quantity or by a fourth register.

The operations that may be specified are listed in Table 5.4 on page 120.

When the instruction does not require all the available operands (for instance MOV ignores Rn and CMP ignores Rd) the unused register field should be set to zero. The assembler will do this automatically.

 Table 5.4
 ARM data processing instructions.

Opcode 124:21)	Mnemonic	Meaning	Effect
0000	AND	Logical bit-wise AND	Rd:=RnANDOp2
0001	EOR	Logical bit-wise exclusive OR	Rd := Rn EOR Op2
0010	SUB	Subtract	Rd := Rn - Op2
0011	RSB	Reverse subtract	Rd := Op2 - Rn
0100	ADD	Add	Rd := Rn + Op2
0101	ADC	Add with carry	Rd := Rn + Op2 + C
0110	SBC	Subtract with carry	Rd := Rn - Op2 + C - 1
0111	RSC	Reverse subtract with carry	Rd := Op2 - Rn + C - 1
1000	TST	Test	ScconRnANDOp2
1001	TEQ	Test equivalence	Sec on Rn EOR Op2
1010	CMP	Compare	Sec on Rn - Op2
1011	CMN	Compare negated	Sec on $Rn + Op2$
1100	ORR	Logical bit-wise OR	Rd := Rn OR Op2
1101	MOV	Move	Rd := Op2
1110	BIC	Bit clear	Rd:=RnANDNOTOp2
1111	MVN	Move negated	Rd:=NOTOp2

These instructions allow direct control of whether or not the processor's condition codes are affected by their execution through the S bit (bit 20). When clear, the condition codes will be unchanged; when set (and Rd is not r15; see below):

- The N flag is set if the result is negative, otherwise it is cleared (that is, N equals bit 31 of the result).
- The Z flag is set if the result is zero, otherwise it is cleared.
- The C flag is set to the carry-out from the ALU when the operation is arithmetic (ADD, ADC, SUB, SBC, RSB, RSC, CMP, CMN) or to the carry-out from the shifter
 - otherwise. If no shift is required, C is preserved.
- The V flag is preserved in non-arithmetic operations. It is set in an arithmetic operation if there is an overflow from bit 30 to bit 31 and cleared if no overflow occurs. It has significance only when an arithmetic operation has operands that are viewed as 2's complement signed values, and indicates a result that is out of range.

Multiply by a constant

These instructions may be used to multiply a register by a small constant much more efficiently than can be achieved using the multiply instructions described in the next section. Examples are given below.

```
A subroutine to multiply r0 by 10:
           MOV
                    r0, #3
                    TIMES10
           BL
                    r0, r0, LSL #1
  TIMES10 MOV
                    r0, r0, r0, LSL #2; x 5
           ADD
                    pc, r14
           MOV
                                         ; return
To add a 64-bit integer in r0, r1 to one in r2, r3:
           ADDS
                    r2, r2, r0
                                          ; add lower, save carry
           ADC
                    r3, r3, r1
                                          ; add higher and carry
```

Notes

1. Since the immediate field must be encoded within a subset of a 32-bit instruction, not all 32-bit immediate values can be represented. The binary encoding shown in Figure 5.6 on page 119 shows how the immediate values are encoded. The immediate value is generated by rotating an 8-bit immediate field through an even number of bit positions.

5.8 Multiply instructions

ARM multiply instructions produce the product of two 32-bit binary numbers held in registers. The result of multiplying two 32-bit binary numbers is a 64-bit product. Some forms of the instruction, available only on certain versions of the processor, store the full result into two independently specified registers; other forms store only the least significant 32 bits into a single register.

In all cases there is a multiply-accumulate variant that adds the product to a running total and both signed and unsigned operands may be used. The least significant 32 bits of the result are the same for signed and unsigned operands, so there is no need for separate signed and unsigned versions of the 32-bit result instructions.

Binary encoding

•



Figure 5.7 Multiply instruction binary encoding.

Multiply instructions 123

Opcode			
[23:21]	Mnemonic	Meaning	Effect
000	MUL	Multiply (32-bit result)	Rd := (Rm*Rs)[31:0]
001	MLA	Multiply-accumulate (32-bit result)	Rd := (Rm*Rs + Rn)[31:0]
100	UMULL	Unsigned multiply long	RdHirRdLo := Rm * Rs
101	UMLAL	Unsigned multiply-accumulate long	RdHi: RdLo += Rm * Rs
110	SMULL	Signed multiply long	RdHi:RdLo := Rm * Rs
111	SMLAL	Signed multiply-accumulate long	RdHi:RdLo+=Rm*Rs

 Table 5.5
 Multiply instructions.

Description

The functions of the various forms of multiply are listed in Table 5.5. The notation used in the table is as follows:

- 'RdHi:RdLo' is the 64-bit number formed by concatenating RdHi (the most significant 32 bits) and RdLo (the least significant 32 bits).'[31:0]' selects only the least significant 32 bits of the result.
- Simple assignment is denoted by ':='.
- Accumulation (adding the right-hand side to the left) is denoted by'+='.

The S bit controls the setting of the condition codes as with the other data processing instructions. When it is set in the instruction:

- The N flag is set to the value of bit 31 of Rd for the variants which produce a 32-bit result, and bit 31 of RdHi for the long forms.
- The Z flag is set if Rd or RdHi and RdLo are zero.
- The C flag is set to a meaningless value.
- The V flag is unchanged.

Assembler formats

Instructions that produce the least significant 32 bits of the product:

```
MUL{<cond>}{S} Rd, Rm, Rs
MLA{<cond>}{S} Rd, Rm, Rs, Rn
```

The following instructions produce the full 64-bit result:

 $\mbox{\ensuremath{mul}{}} {\cond>} {S}RdHi, RdLo, Rm, Rs where < mul> is one of the 64-bit multiply types (UMULL, UMLAL, SMULL, SMLAL).}$

Examples To form a scalar product of two vectors:

```
MOV
                 rll, #20
                                    initialize loop counter
                 r10, #0
                                       initialize total
        MOV
                 r0, [r8], #4
LOOP
       LDR
                                       get first component..
        LDR
                 r1, [r9], #4
                                       . .and second
                 rlo, r0, r1, rlo
                                       accumulate product
        SUBS
                 rll, rll, #1
                                       decrement loop counter
        BNE
                 LOOP
```

Notes

- 1. Specifying r15 for any of the operand or result registers should be avoided as it produces unpredictable results.
- 2. Rd, RdHi and RdLo should be distinct from Rm, and RdHi and RdLo should not be the same register.
- 3. Early ARM processors only supported the 32-bit multiply instructions (MUL and MLA). The 64-bit multiplies are available only on ARM? versions with an 'M' in their name (ARM7DM, ARM7TM, and so on) and subsequent processors.

5.9 Count leading zeros (CLZ - architecture v5T only)

This instruction is only available on ARM processors that support architecture v5T. It is useful for renormalizing numbers, and performs its functions far more efficiently than can be achieved using other ARM instructions.




Figure 5.8 Count leading zeros instruction binary encoding.

Description

The instruction sets Rd to the number of the bit position of the most significant 1 in Rm. If Rm is zero Rd will be set to 32.

```
Assembler | CLZ{<cond>} Rd, Rm |
format |

Example | MoV | r0, #&100 |
CLZ | r1, r0 | ; r1 := 8
```

1. Only processors that implement ARM architecture v5T support the CLZ instruction (see Section 5.23 on page 147).

5.10 Single word and unsigned byte data transfer instructions

These instructions are the most flexible way to transfer single bytes or words of data between ARM's registers and memory. Transferring large blocks of data is usually better done using the multiple register transfer instructions, and recent ARM processors also support instructions for transferring half-words and signed bytes.

Provided that a register has been initialized to point somewhere near (usually within 4 Kbytes of) the required memory address, these instructions provide an efficient load and store mechanism with a relatively rich set of addressing modes which includes immediate and register offsets, auto-indexing and PC-relative.

Description

These instructions construct an address starting from a base register (Rn), then adding (U = 1) or subtracting (U = 0) an unsigned immediate or (possibly scaled) register offset. The base or computed address is used to load (L = 1) or store (L = 0) an unsigned byte (B = 1) or word (B = 0) quantity to or from a register (Rd), from or to memory. When a byte is loaded into a register it is zero extended to 32 bits. When a byte is stored into memory, the bottom eight bits of the register are stored into the addressed location.

A pre-indexed (P = 1) addressing mode uses the computed address for the load or store operation, and then, when write-back is requested (W = 1), updates the base register to the computed value.

Binary encoding

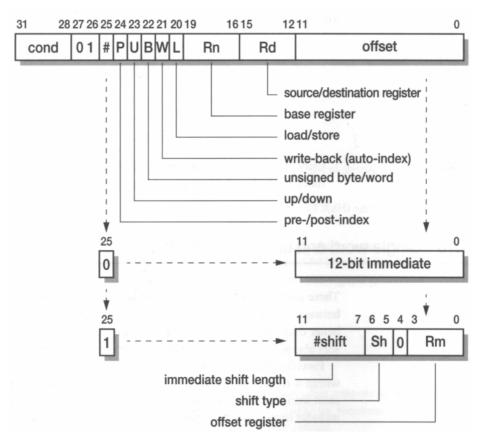


Figure 5.9 Single word and unsigned byte data transfer instruction binary encoding.

A post-indexed (P=0) addressing mode uses the unmodified base register for the transfer and then updates the base register to the computed address irrespective of the W bit (since the offset has no significance other than as a base register modifier, and can always be set to immediate zero if no change is desired). Since the W bit is unused in this case, it has an alternative function which is only relevant in code which is not running in user mode: setting W=1 causes the processor to request a user mode access to memory, allowing the operating system to adopt a user view of the memory translation and protection scheme.

Assembler format

The pre-indexed form of the instruction:

post-indexed form:

$$LDRISTR\{\}\{B\}\{T\}\ Rd, [Rn], A$$

useful PC-relative form that leaves the assembler to do all the work:

```
LDRISTR{<COnd>}{B} Rd, LABEL
```

LDR is 'load register', STR is 'store register'; the optional 'B' selects an unsigned byte transfer, the default is word; \langle of f set \rangle may be $\#+/-\langle$ 12-bit immediate \rangle or +/-Rm {, shift} where the shift specifier is the same as for data processing instructions except that register specified shift amounts are not available; ! selects write-back (auto-indexing) in the pre-indexed form.

The T flag selects the user view of the memory translation and protection system and should only be used in non-user modes. The user should fully understand the memory management environment in which the processor is being used, so this is really only a facility for operating system experts.

Examples

To store a byte in r0 to a peripheral:

```
LDR r1, UARTADD ; UART address into r1
STRB r0, [r1] ; store data to UART
..

UARTADD & &1000000 ; address literal
```

The assembler will use a pre-indexed, PC-relative addressing mode to load the address into rl. The literal must be within range (that is, within 4 Kbytes of the load instruction) for this to be possible.

Notes

- 1. Using the PC as the base address delivers the address of the instruction plus eight bytes; it should not be used as the offset register, nor with any auto-indexing addressing mode (including any post-indexed mode).
- 2. Loading a word into the PC causes a branch to the loaded address and is a recognized way of implementing jump tables. Loading a byte into the PC should be avoided.
- 3. Storing the PC to memory gives different results on different implementations of the processor and should therefore be avoided if possible.
- 4. In general Rd, Rn and Rm should be distinct registers, though loading into the base register (Rd = Rn) is acceptable provided auto-indexing is not used in the same instruction.
- 5. When a word is loaded from a non-word-aligned address the loaded data is the word-aligned word containing the addressed byte, rotated so that the addressed byte is in the least significant byte of the destination register. Some ARM systems

- may raise an exception under these circumstances (controlled by the A flag in bit 1 of CP15 register 1, described in Section 11.2 on page 293).
- 6. When a word is stored to a non-word-aligned address the bottom two bits of the address are ignored and the word is stored as though they had been zero. Some ARM systems may raise an exception under these circumstances (again controlled by the A flag in CP15 register 1).

5.11 Half-word and signed byte data transfer instructions

These instructions are not supported by some early ARM processors. As a result of their late addition to the architecture they are somewhat 'shoe-horned' into the instruction space as indicated by the split immediate field.

The addressing modes available with these instructions are a subset of those available with the unsigned byte and word forms.

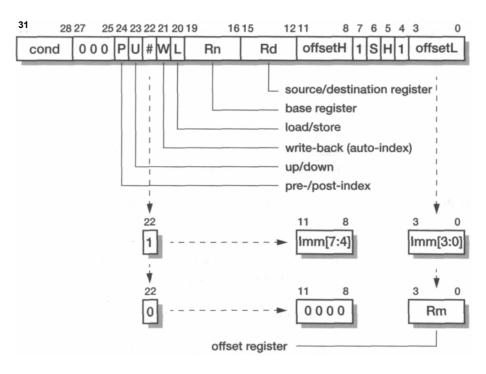


Figure 5.10 Half-word and signed byte data transfer instruction binary encoding.

Description

These instructions are very similar to the word and unsigned byte forms described in the previous section, but here the immediate offset is limited to eight bits and the scaled register offset is no longer available.

Table 5.6 Data type encoding.

S	H	Data type
1	0	Signed byte
)	1	Unsigned half-word
1	1	Signed half-word

The S and H bits define the type of the operand to be transferred as listed in Table 5.6. Note that the fourth combination of these bits, corresponding to an unsigned byte type, is not available in this format. The format described in the previous section should be used instead. Since there is no difference between storing signed and unsigned data, the only relevant forms of this instruction format are:

- Load signed byte, signed half-word or unsigned half-word.
- · Store half-word.

An unsigned value is zero-extended to 32 bits when loaded; a signed value is extended to 32 bits by replicating the most significant bit of the data.

Assembler formats

The pre-indexed form:

```
LDR|STR{<cond>}H|SHI SB Rd, [Rn, <offset>] { ! }
```

The post-indexed form:

```
LDR1STR{<cond>}H|SH1SB Rd, [Rn], <offset>
```

where < of fset> is # + /-<8-bit immediate> or +/-Rm and HI SHI SB selects the data type; otherwise the assembler format is as for words and unsigned byte transfers.

Examples

To expand an array of signed half-words into an array of words:

```
ADR
                r1, ARRAYl
                                      ; half-word array start
        ADR
                r2, ARRAY2
                                      ; word array start
                r3, ENDARR1
        ADR
                                      ; ARRAY1 end + 2
LOOP
       LDRSH
                r0, [r1], #2
                                      ; get signed half-word
                r0, [r2], #4
                                      ; save word
        STR
        CMP
                r1, r3
                                      ; check for end of array
        BLT
                LOOP
                                      ; if not finished, loop
```

Notes

- 1. Similar limitations to those on the word and unsigned byte transfers described in the previous section apply on the use of r15 and the register operands.
- 2. All half-word transfers should use half-word aligned addresses.

5.12 Multiple register transfer instructions

The ARM multiple register transfer instructions allow any subset (or all) of the 16 registers visible in the current operating mode to be loaded from or stored to memory. A form of the instruction also allows the operating system to load or store the user-mode registers to save or restore the user process state, and another form allows the CPSR to be restored from the SPSR as part of a return from an exception handler.

These instructions are used on procedure entry and return to save and restore work-space registers and are useful for high-bandwidth memory block copy routines.

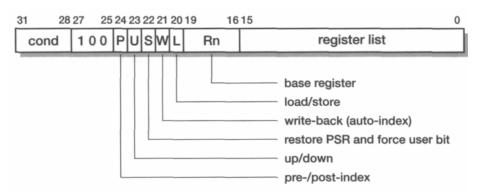


Figure 5.11 Multiple register data transfer instruction binary encoding.

Description

The register list in the bottom 16 bits of the instruction includes a bit for each visible register, with bit 0 controlling whether or not r0 is transferred, bit 1 controls r1, and so on up to bit 15 which controls the transfer of the PC.

The registers are loaded from or stored to a contiguous block of memory words defined by the base register and the addressing mode. The base address will be incremented (U=1) or decremented (U=0) before (P=1) or after (P=0) each word transfer. Auto-indexing is supported; if W=1 the base register will be increased (U=1) or decreased (U=0) by the number of bytes transferred when the instruction completes.

Special forms of the instruction allow it to be used to restore the CPSR: if the PC is in the register list of a load multiple and the S bit is set, the SPSR of the current mode will be copied into the CPSR, giving an atomic return and restore state instruction. This form should not be used in user mode code since there is no SPSR in user mode.

If the PC is not in the register list and the S bit is set, both load and store multiple instructions executed in non-user modes will transfer the user mode registers (while using the current mode base register). This allows an operating system to save and restore user process state.

Assembler format

The normal form of the instruction is:

where odd mode> specifies one of the addressing modes detailed in Table 3.1 on page 62. The instruction bits correspond closely to the mechanistic view described in this table, with 'increment' corresponding to U = 1 and 'before' corresponding to P = 1. '!' specifies auto-indexing (W = 1), and <registers> is a list of registers and register ranges enclosed in curly brackets, for example: $\{r0, r3-r7, pc\}$.

In a non-user mode, the CPSR may be restored by:

$$LDM\{\} Rn\{!\}, < registers + pc>^$$

The register list must contain the PC. In a non-user mode, the user registers may be saved or restored by:

pc>~ Here the register list must not contain the PC and write-back is not allowed

Examples

To save three work registers and the return address upon entering a subroutine:

This assumes that r13 has been initialized for use as a stack pointer. To restore the work registers and return:

LDMFD r13!,
$$\{r0-r2, pc\}$$

Notes

 If the PC is specified in the register list in a store multiple instruction, the value saved is implementation dependent. Normally, therefore, specifying the PC in an STM should be avoided. (Loading the PC has the expected result and is a stand ard way of returning from a procedure.)

- 2. The base register may be specified in the transfer list of either a load or store mul tiple, but write-back should not be specified in the same instruction since the result of doing so is unpredictable.
- 3. If the base register contains an address that is not word-aligned, the bottom two bits will be ignored. Some ARM systems may generate an exception.
- 4. In architecture v5T only, the bottom bit of a loaded PC updates the Thumb bit.

5.13 Swap memory and register instructions (SWP)

Swap instructions combine a load and a store of a word or an unsigned byte in a single instruction. Normally the two transfers are combined into an atomic memory operation that cannot be split by an external memory access (for instance from a DMA controller), and therefore the instruction can be used as the basis of a semaphore mechanism to give mutually exclusive access to data structures that are shared between multiple processes, processors, or a processor and a DMA controller. These instructions are little used outside their role in the construction of semaphores.

Binary encoding

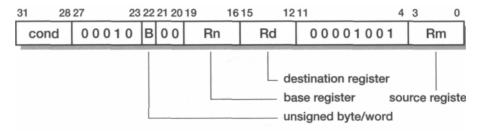


Figure 5.12 Swap memory and register instruction binary encoding.

Description

The instruction loads the word (B=0) or unsigned byte (B=1) at the memory location addressed by Rn into Rd, and stores the same data type from Rm into the same memory location. Rd and Rm may be the same register (but should both be distinct from Rn), in which case the register and memory values are exchanged. The ARM executes separate memory read and then memory write cycles, but asserts a 'lock' signal to indicate to the memory system that the two cycles should not be separated.

Assembler SWP{<cond>}{B} Rd, Rm, format [Rn]

Example ADR r0, SEMAPHORE

SWPB

Notes

1. The PC should not be used as any of the registers in this instruction.

r1, r1, [r0]

2. The base register (Rn) should not be the same as either the source (Rm) or the destination (Rd) register.

; exchange byte

5.14 Status register to general register transfer instructions

When it is necessary to save or modify the contents of the CPSR or the SPSR of the current mode, those contents must first be transferred into a general register, the selected bits modified and then the value returned to the status register. These instructions perform the first step in this sequence.

Binary encoding




Figure 5.13 Status register to general register transfer instruction binary encoding.

Description

The CPSR (R = 0) or the current mode SPSR (R = 1) is copied into the destination register (Rd). All 32 bits are copied.

Notes

1. The SPSR form should not be used in user or system mode since there is no accessible SPSR in those modes.

2. When modifying the CPSR or SPSR care should be taken to preserve the values of all the unused bits; this will maximize the probability of compatibility with future uses of those bits. This is best achieved by moving the status register to a general register (using these instructions), modifying only the necessary bits and then moving the result back to the status register.

5.15 General register to status register transfer instructions

When it is necessary to save or modify the contents of the CPSR or the SPSR of the current mode, those contents must first be transferred into a general register, the selected bits modified and then the value returned to the status register. These instructions perform the last step in this sequence.

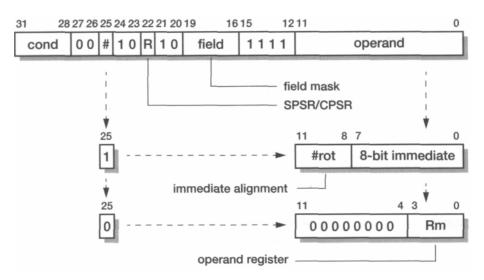


Figure 5.14 Transfer to status register instruction binary encoding.

Description

The operand, which may be a register (Rm) or a rotated 8-bit immediate (specified in the same way as the immediate form of operand2 in the data processing instructions), is moved under a field mask to the CPSR (R=0) or current mode SPSR (R=I).

The field mask controls the update of the four byte fields within the PSR register. Instruction bit 16 determines whether PSR[7:0] is updated, bit 17 controls PSR[15:8], bit 18 controls PSR[23:16] and bit 19 controls PSR[31:24].

When an immediate operand is used only the flags (PSR[31:24]) may be selected for update. (These are the only bits that may be updated by user-mode code.)

Assembler format

```
MSR{<cond>} CPSR_fISPSR_f, #<32-bit immediate>
MSR{<cond>} CPSR <field>ISPSR <field>, Rm
```

where <f ield> is one of:

- c the control field PSR[7:0].
- x the extension field PSR[15:8] (unused on current ARMs).
- s the status field PSR[23:16] (unused on current ARMs).
- f- the flags field -PSR[31:24].

Examples

To set the N, Z, C and V flags:

```
MSR CPSR_f, #&f0000000; set all the flags
```

To set just the C flag, preserving N, Z and V:

```
\begin{array}{lll} MRS & r0, & CPSR & move the \mbox{CPSR} \mbox{to r0} \mbox{set} \\ ORR & r0, & r0, & bit 29 \mbox{of r0} \mbox{move back} \\ \#\&20000000 & to \mbox{CPSR} \\ MSR & CPSR\_f, \mbox{r0} \end{array}
```

To switch from supervisor mode into IRQ mode (for instance, to initialize the IRQ stack pointer at start up):

```
MRS r0, CPSR ; move the CPSR to r0
BIC r0, r0, #&lf ; clear the bottom 5 bits
ORR r0, r0, #&l2 ; set the bits to IRQ mode
MSR CPSR c, r0 ; move back to CPSR
```

In this case it is necessary to copy the original CPSR value in order not to change the interrupt enable settings. The particular case illustrated could be simplified since IRQ mode just requires one bit cleared from supervisor mode (see Table 5.1 on page 108), but the code above can be used to move between any two non-user modes or from a non-user mode into user mode.

The mode change takes effect only after the MSR has been executed; the intermediate working has no effect on the mode until the result is copied back into the CPSR.