Memory Issues

Objectives

After completing this lab you will:

- have a better understanding of why memory alignment is required
- know what is the difference between Big Endian and Little Endian
- know how to use in MIPS assembly programs data of sizes other than word

Introduction

As long as the compiler generates code, the programmer may be completely unaware of the layout of data and instructions in memory. The two questions we address in this lab are:


- Can data and instructions be stored in memory at any address? This is the memory alignment problem.
- When a data object larger than a byte is stored in memory, at what addresses are stored in the individual bytes of that object? This is the Big Endian versus Little Endian memory model problem.

Memory alignment

An object (data or instruction) with the size 2^n bytes is said to be aligned in memory if it is stored in at an address which is a multiple of 2^n . Since a multiple of 2^n number has the least significant n bits zero, we can also say that an object of size 2^n is memory aligned if it is stored at an address whose least significant n bits are zero.

Object	Size (bytes)	Store at address
byte	$1 = 2^0$	any address
half-word	$2 = 2^1$	multiple of 2
word	$4 = 2^2$	multiple of 4
double	$8 = 2^3$	multiple of 8

The alignment requirement for data and instructions in MIPS (as well as in other RISC architectures) is directly related to performance. An unaligned object in memory may require multiple memory accesses and/or special processing. As the next figure shows, an unaligned word in memory requires two memory accesses

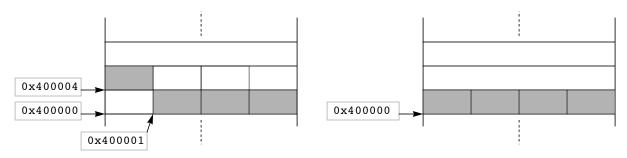


Unaligned word stored at address 0x400001

Aligned word stored at address 0x400000

to be fetched and extra operations to be aligned in a register: the three bytes of the word read from address 0x400001 must be left shifted one byte, then the byte read from address 0x400004 merged on the least significant position. All this extra work would make the instruction execute slower.

Big Endian v. Little Endian

When data larger than a byte is stored in memory there are two possible layouts for the individual bytes as shown in the following figure where an integer (size = word) with the value 0x56789abc is stored at address 0x400000. If the most significant byte of the data object is stored at a smaller address than the least

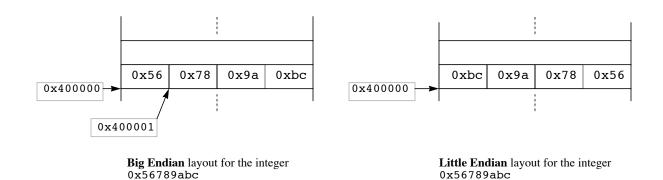

significant byte, then the layout is called Big Endian. If the most significant byte is stored at a higher address than the least significant byte, then the layout is called Little Endian.

MIPS CPUs can use either memory model. The specific model is selected at the reset time. The layout model can not change dynamically (while programs are running).

The SPIM simulator uses the memory model of the machine it is running on. If the simulator runs on a Little Endian machine then the memory model the user sees is Little Endian. If the simulator runs on a Big Endian machine then the memory model the user sees is Big Endian.

Laboratory 5: Prelab Memory Issues

	Laboratory 5: Prelab	
Date	Section	
Name		

Memory Alignment

The MIPS assembler allows users to control data alignment using the .align directive. If the programmer does not use the directive, then the data will be automatically aligned in memory at the proper boundaries.

Since all instructions are the same size (word), they must be aligned in memory. Without alignment each instruction fetch would require two memory accesses, thus compromising the system's performance.

Q 1:

In MIPS each address is a *byte address*. Do you think the alignment requirement would exist if addresses were word addresses instead (each address would be the address of a word)? Give a justification for your answer.

I think there is no need to be aligned if the address is a word because the address fulfilled the width of AB.

Step 1

Start with the program P.1 below which you type and save as *lab5.1.asm*

P.1:

```
# this is a program used to test memory alignment for data
            .data 0x10000000
char1:
            .byte 'a'
                              # reserve space for a byte
double1:
                            # reserve space for a double
            .double 1.1
char2:
            .byte 'b'
                             # b is 0x62 in ASCII
                            # reserve space for a half-word (2 bytes)
half1:
            .half 0x8001
char3:
            .byte 'c'
                              # c is 0x63 in ASCII
            .word 0x56789abc # reserve space for a word
word1:
char4:
                              # d is 0x64 in ASCII
            .byte 'd'
            .text
            .globl main
main:
            jr $ra
                              # return from main
```

Laboratory 5: Prelab Memory Issues

Step 2

Load *lab5.1.asm* in the simulator and look in the data segment to see where data has been stored. Fill out the following table. In the 'Multiple of' column of the table indicate what power of two the address is a multiple

Name	Data size (bytes)	Address	Multiple of	Displacement (bytes)
char1	1	10000003	1	3
double1	8	10000008	8	8
char2	1	10000013	1	13
half1	2	10000010	2	10
char3	1	10000017	1	17
word1	4	10000018	4	18
char4	1	1000001f	1	1f

of. In the 'Displacement' column' indicate what is the displacement of the data object from the beginning of the data segment.

Q 2:

Based on the way data has been stored in the data segment, do you think data is aligned or not in memory? Explain why.

I think the data is not aligned in memory. Because what we see is in the data segment, there is no certain association with memory. Besides, if all the data in memory were aligned, it will waste a lot of sources.

Q 3:

How many bytes have been wasted due to alignment?

Step 3

Modify *lab5.1.asm* as to minimize the number of bytes wasted due to alignment. Save your work as *lab5.2.asm*.

Hint: change the order of data declarations.

Laboratory 5: Prelab Memory Issues

Q 4:

How many bytes are wasted due to alignment in program lab5.2.asm?

Step 4

Modify *lab5.1.asm* as follows:

- include the directive .align 0 right before 'charl'
- in main load word1 from memory in register \$t0

Save this program as *lab5.3.asm*.

Step 5

Load *lab5.3.asm* in the simulator and look in the data segment to see where data has been stored. Fill out the following table. In the 'Multiple of' column of the table indicate what power of two the address is a multiple

Name	Data size (bytes)	Address	Multiple of	Displacement (bytes)
char1	1	10000003	1	3
double1	8	10000000	8	0
char2	1	1000000a	1	a
half1	2	10000008	2	8
char3	1	1000000f	1	f
word1	4	1000000c	4	С
char4	1	10000012	1	12

of. In the 'Displacement' column' indicate what is the displacement of the data object from the beginning of the data segment.

Q 5:

Based on the way data has been stored in the data segment, do you think data is aligned or not in memory?

Laboratory 5: Prelab

Memory Issues

Explain why.

It depends. There are many different structures in memory such as node, table.

Q 6:

How many bytes have been wasted due to alignment?

wasted_bytes = 2

Step 6

Run lab5.3.asm. You will get an error message. Write it down.

Exception occurred at PC=0x00400028

Q 7:

Why does the simulator report an error?

Unaligned address in inst/data fetch: 0x1000000d

Step 7

Modify lab5.1.asm as indicated below.

• start the text segment at address 0x400001 instead of the default value.

Save the new program as *lab5.4.asm*.

Laboratory 5: Prelab

Memory Issues

Step 8

Load lab5.4.asm. Write down the first error message you obtain

Invalid address (0x00400001) for instruction

Q8:

Why does the simulator report an error?

The address 0x00400001 is the middle part of the address from 0x00400000 to 0x00400003. The start address should be end with 0, 4, 8 or c.

Laboratory 5: Inlab

Memory Issues

	Laboratory 5: Inlab	
Date	Section	
Name		

Big Endian v. Little Endian

Most of the time the programmer does not see the details of memory layout for data. Most of the time it is irrelevant whether the data (or instructions for that matter) is stored in Big or Little Endian format. But you do not need to do assembly programming to become aware of these details. Playing with pointers makes the issue visible very quickly.

Ex 1:

The last statement in this piece of code will print out the byte stored in memory at the address where the storage for w begins. If the memory model is Big Endian, then this byte is the most significant byte of w (0x42), and the program prints the letter B (0x42) is the ASCII representation for B). Otherwise, it is the least significant byte of w (0x4c) and the program prints the letter L.

The MIPS architecture provides instructions that can be used to load and store data of other sizes than the native size (word). The next table presents the loads. Corresponding store instructions exist for the signed ver-

Instruction	Effect	Comment
lb Rdest, disp(Rbase)	Rdest ← M[Rbase + disp] ₈	load byte and sign extend it
lbu Rdest, disp(Rbase)	Rdest ← M[Rbase + disp] ₈	load byte
lh Rdest, disp(Rbase)	Rdest ← M[Rbase + disp] ₁₆	load half-word and sign extend it
lhu Rdest, disp(Rbase)	Rdest ← M[Rbase + disp] ₁₆	load half-word

sions of these loads.


Remember that sign-extending a datum means replicating the most significant bit of the datum until it reaches the required size. Sign-extending a byte to fit a register (32 bits) means replicating 24 times the most significant bit of the byte.

Laboratory 5: Inlab

Memory Issues

Step 1

Sign extend to 32 bits the following two bytes



Step 2

Start with lab5.1.asm and create a new program named lab5.5.asm based on the following description.

- declare a new variable called word2 of size word, with the initial value 0
- load (use 1b) the four bytes of word1 in successive registers starting with \$t0
- load (use 1bu) the four bytes of word1 in successive registers starting with \$t4
- load (use 1h) halfl in \$t8
- load (use 1hu) half1 in \$t9
- store the four bytes into *word2* in reverse order: the byte that was the most significant in *word1* will be the least significant byte in *word2*, and so on.

Step 3

Load the program and run it. Fill out the following table

Register	Content
\$t0	0xfffffbc
\$t1	0xffffff9a
\$t2	0x00000078
\$t3	0x00000056
\$t4	Oxbc
\$t5	0x9a
\$t6	0x78
\$t7	0x56
\$t8	0xffff8001
\$t9	0x8001

Variable	Expected value	Value in memory
word2	0xbc9a7856	0xbc9a7856

Laboratory 5: Inlab

Memory Issues

Q 1:

Why are \$t2 and \$t6 different even if they have been loaded with data from the same address?

Because the instruction 'lb' and 'lbu' are different. Instruction 'lb' loads byte and sign extends it while the instruction 'lbu' only loads byte without sign extension.

Q 2:

Based on the content of registers can you decide whether the SPIM simulator uses a Big Endian or Little Endian memory model? Which one?

Little Endian.

Step 4

Use *lab4.2.asm* as a template to create *lab5.6.asm* using the following description.

- prompts the user to enter an integer; store the integer in memory in a variable called user1
- calls a procedure named 'Reverse_bytes'. The argument passed to the procedure is the address of the word whose bytes must be reversed. The most significant byte will become the least significant and so on
- prints a message that reads "If bytes were layed in reverse order the number would be:"
- prints the number whose bytes have been reversed

Run the program using the next test plan. Enter the last four digits of your SSN in the bolded row of the table.

Test plan for lab5.6.asm

Integer	Output
0	0
-1	-1
1	16777216
16777216	1
8269	1293942784

Laboratory 5: Postlab Memory Issues

	Laboratory 5: Postlab	
Date	Section	
Name		

Handling Unaligned Data in MIPS

The MIPS architecture provides instructions that can be used to handle unaligned data. Loading an unaligned word from memory will require at least two instructions, one to get the upper part of the data and another one for the lower part of the same data.

Using the special instructions in the instruction set will result in programs that work without generating alignment related errors. These programs will be slower than their counterparts in which data is aligned in memory at the proper boundaries.

Instruction alignment is a must. The programmer may choose whether data is aligned or not but there is no choice for instructions.

Q 1:

Can you see any advantage in working with unaligned data?


Without generating alignment related errors.

Aside from the fact that these instructions must generate no error, they must also place the data of interest in the proper place in the destination register.

In the figure below the most significant three bytes of a word are stored beginning with address 0x10000001, while the least significant byte of the same word is stored at 0x10000004. When loaded in a register, the most significant three bytes of the word must end up on the most significant three bytes in the register, while the least significant byte of the word (now stored on the most significant position of the word beginning at 0x10000004) should be merged with the other bytes on the least significant byte of the register.

There are two instructions used to do the job, lwl and lwr. Similar instructions exist for dealing with half-words.

lwl will read from a memory address (possibly unaligned) and will place the bytes starting with the current address up to the next aligned word address in the upper bytes of the destination register. The next example Laboratory 5: Postlab Memory Issues

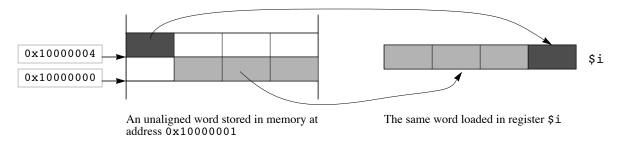

will clarify how the instruction works.

Ex 1:

```
lui $t0, 0x1000  # $t0 <- 0x10000000
lwl $t1, 1($t0)  # read from address 0x10000001</pre>
```

The three bytes stored at addresses 0×10000001 , 0×10000002 , and 0×10000003 will be loaded in register **\$t1** on positions 3, 2, and 2 respectively (3 is the most significant byte, 2 is the byte next to it and so on).


Your job is to understand how the other instruction (lwr) works and then use the two instructions together to load unaligned words from memory.

Step 1

Create the program lab5.7.asm which does

- declare a word variable named word1 with the initial value 0x89abcdef
- loads (using lwl) the registers **\$t0** to **\$t3** with data from memory, using as base address the address of *word1* and displacements from 0 to 3 respectively.

Run the program. Based on the values stored in registers fill the missing spaces in the following figure. The bold vertical arrow indicates the address lwl reads from. Use slanted lines to indicates which bytes are transferred in the register and on what position(s) in the register.

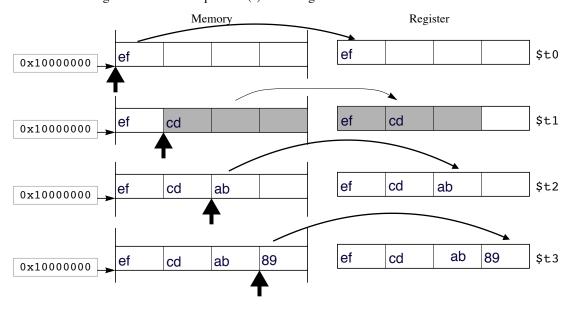


Laboratory 5: Postlab Memory Issues

Step 2

Create the program lab5.8.asm which does

- declare a word variable named word1 with the initial value 0x89abcdef
- loads (using lwr) the registers \$t4 to \$t7 with data from memory, using as base address the address of *word1* and displacements from 0 to 3 respectively.

Run the program. Based on the values stored in registers fill the missing spaces in the following figure. The bold vertical arrow indicates the address lwr reads from. Use slanted lines to indicates which bytes are transferred in the register and on what position(s) in the register.

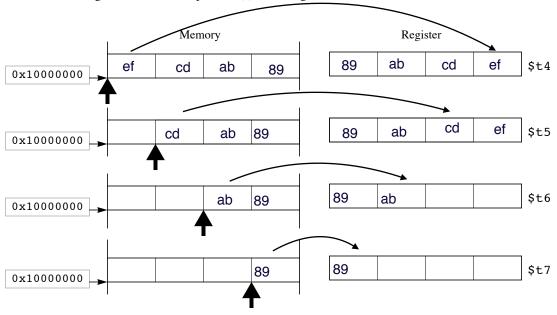

Step 3

When you run *lab5.3.asm* you get an error message, due to the fact that you attempt to load an unaligned word using the 1w instruction. Modify that program and create a new one, named *lab5.9.asm*, which fixes the problem. Use only native instructions.

Hint: use a sequence of lwl and lwr instructions with the appropriate displacements.

Step 4

It is now time to use some of the store instructions for unaligned data.

Create the program lab5.10.asm with the following description.

- declares the unaligned variables (in this order) *ch1* of size byte, *word1* of size word, *ch2* of size byte and *word2* of size word
- the initial values of variables are 'a', 0x89abcdef, 'b' and 0 respectively
- copies the value of word1 into word2
- uses only native instructions

Start the SPIM simulator using the -bare command line option. Load the program and run it. Look into the memory and make sure the program has changed the value of *word2* from 0 to 0x89abcdef.

Step 5

You want to evaluate the impact of unaligned data on the overall performance of some application.

If the data were aligned in the memory, then each memory access would be just one instruction. If data is not aligned, then several instructions are needed for each load or store.

Extra instructions needed to load an unaligned word = 3
Extra instructions needed to store an unaligned word $=$ 3

Let's also assume that the overall CPI for the application does not change and that the clock cycle is the same in both cases. The next table gives the frequency of loads and stores for various data sizes in the case data is aligned. For the sake of this problem we ignore any data of size other than byte and word.

Instruction	Frequency
lw	9%
sw	4%
lb	2%
sb	0.9%

Q 2:

By how much faster is the application when data is aligned than the same application with unaligned data? Show your work.

Aligned: 9% + 4% = 13% Unaligned: 2%*4+0.9%*4=11.6% 13%/11.6%=1+12.1%

13%/11.6%=1+12.1° So, it 12.1% faster. Laboratory 5: Postlab

Memory Issues

Step 6

Return to your lab instructor copies of *lab5.7.asm* to *lab5.10.asm* together with this postlab description. Ask your lab instructor whether copies of programs must be on paper (hardcopy), e-mail or both.