
Welcome!

Firmware Training Week 4

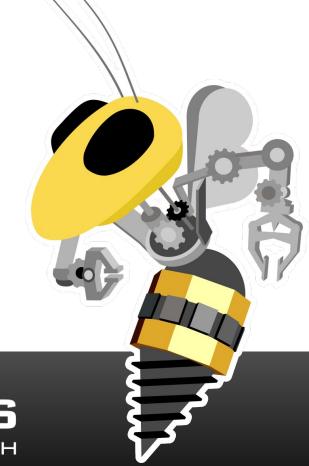

ROBOJACKETS COMPETITIVE ROBOTICS AT GEORGIA TECH

www.robojackets.org

Last Week

- Registers and Timers
- PWM
- Binary and Hexadecimal
- Bitwise Operations
- Masking

This Week

- Common Communication Protocols
 - SPI, I2C, UART, USB
- Sensors
- I2C implementation in ATMega328p
- Lab




Communication Protocols

Now we're talking




Serial vs Parallel Communication

Serial

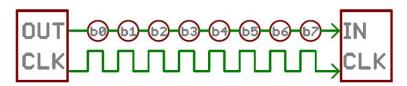

- Stream data one bit at a time
- Example: I2C, USB, SPI, UART


Parallel

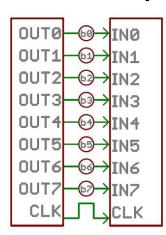

- Many bits of data sent at the same time through different wires
- Example: PCI

Clock Signals


- Square waves of known frequency (baud rate)
- Edge used to sync data reading across devices
- Synchronous
 - Uses clock
- Asynchronous
 - Does not use clock

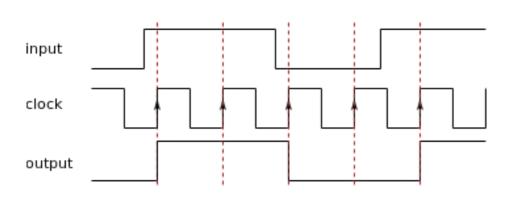



SPI (Serial Peripheral Interface)

- Full Duplex (data goes both ways at any time)
 - All devices share 3 lines
- Unique Chip Select line per device
- Master controls CLK

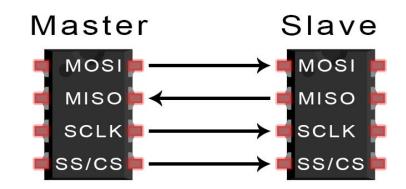


MOSI: Master Out Slave In MISO: Master In Slave Out SCLK/SCK: Serial Clock SS/CS: Slave Select/Chip Select



I2C (Inter-Integrated Circuit) / TWI (Two Wire Interface)


- Synchronous, Half Duplex (one way at a time)
- Uses only two wires
- Sends data in 'frames'
- Any device can claim master by controlling SCL

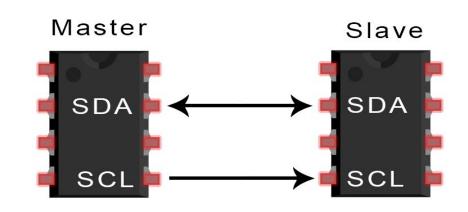

SDA: Serial Data SCL: Serial Clock


UART (Universal Asynchronous Receiver/Transmitter)

- Asynchronous
- Full Duplex
- Uses 2 wires
- Need same baud rate

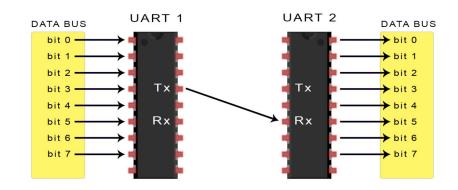

USB (Universal Serial Bus)

- Differential Pair signal
 - Difference between D+,D-
- Defines rate in "clock sync" phase
- Useful for computer-device communication

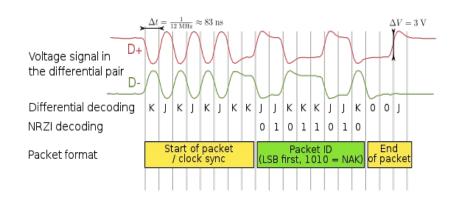

Protocol Comparison

Protocol	Needed Wires (min)	Clock?	Speed	Number of Devices (max)
SPI	4	Yes	Fast	A lot (need additional wire per)
I2C	2	Yes	Slow	127
UART	2	No, set same rate	Slow	2 (without more hardware)
USB	2	No, data sync	Fast	2 (without more hardware)



Sensors

How many are there again...?




What is a Sensor?

- Converts a real-world quantity into an electrical signal
 - Used to measure "state variables" of robot or system
 - Can be Digital or Analog Signal


Types of Signals

- Analog Signal
 - Outputs voltage correlated to reading
- Digital Signal
 - Communicates binary representation of reading

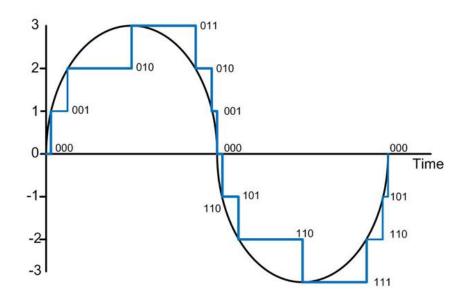


Types of Sensors

- IMU
 - Accelerometer
 - Gyroscope
 - Compass
- ToF/Distance
- Encoder/Potentiometer
- Current Sensor

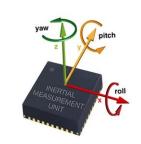





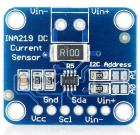

Types of Sensors

- Camera
- LIDAR
- GPS








Sample Rate

- Sample Rate f_s
 - How many times a sensor can read per second
- f_s must be at least twice the max frequency of the sampled signal
 - Failure to do so may result in aliasing (which distorts the signal)
 - Thanks Mr. Nyquist!




Bit Depth

- Quantization
 - Divides sensor's range into discrete number of "steps"
- Bit depth
 - Number of steps (2^{number} of bits)

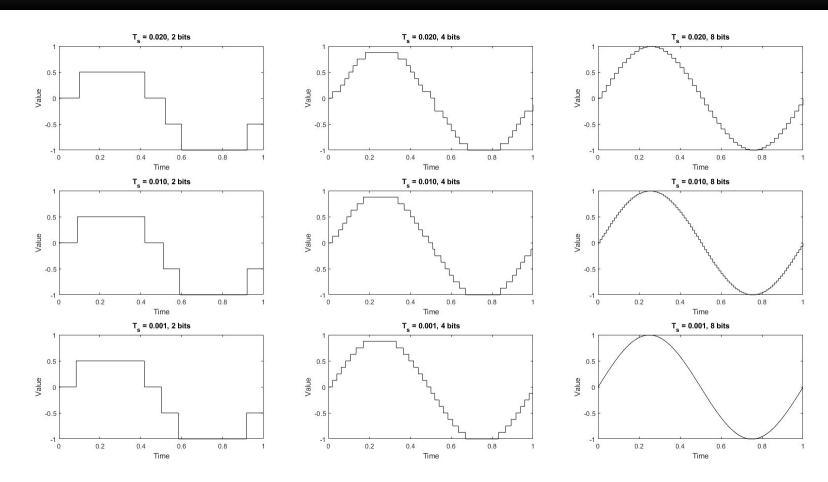


Error

- Incorrect readings which cloud sensor measurements
 - Error terms are added to "true" measurement of state variable
- Types of error:
 - Noise Zero mean, high variance
 - Bias Nonzero mean, low variance
- Sources of error
 - Temperature, EMI, vibration, Quantization

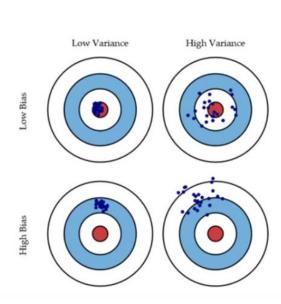

Reducing Error


- Calibration
 - Take a series of measurements of a known parameter across sensor range
 - Calculate offset and subtract from subsequent measurements
- Noise
 - Redundant measurements can be averaged to cancel noise effects (ensemble averaging)
 - Estimation/Filtering algorithms can be run to nullify noise in certain frequency ranges

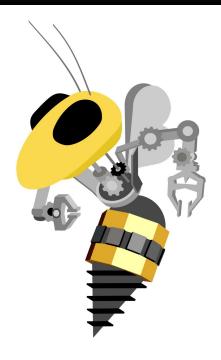

Implementing I2C/TWI

Let's Talk

I2C Packet Format

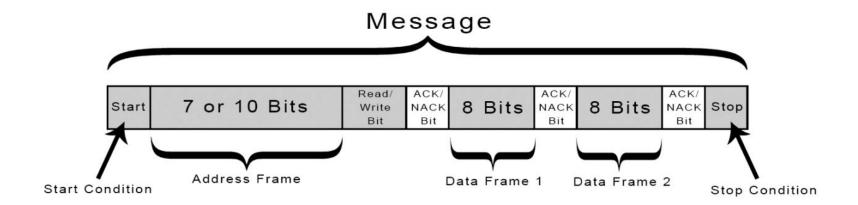

Atmega328p I2C Module

- Buffer of values to be sent and received are stored in RAM of Arduino
- Libraries handle moving those buffered values to commands on the I2C bus
 - Fill, send, and read from the queue
 - Timing functions to let system know when data is ready

Wire

- Arduino Library for I2C / TWI communication
- Use library:
 - #include <Wire.h>
- Need to use specific pins for I2C on most AVR-based Arduinos

I2C Device Organization


- Devices contain a bank of control and data registers which can be read or written
- Register address indicates next location of reading or writing
 - Master can set the value of the current address and write or request data at that location

Reading and Writing

- Reading: send memory location to slave device and sends STOP condition
 - Device responds with the data stored in the requested memory location
- Writing: Send memory location and value to write
- In both cases: device automatically increments register address

I2C Example Code

```
Wire.beginTransmission(DEV ADDR);
Wire.write (REQ REG);
Wire.endTransmission(false);
Wire.requestFrom(ADDR, NUM);
while (Wire.available()) {
  uint8 t c = Wire.read();
```

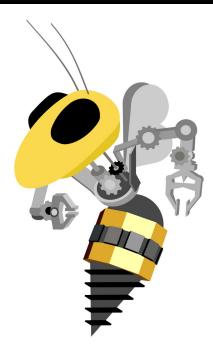

Lab Time

MPU-6050

- Type of IMU (Inertial Measurement Unit)
 - One of the most common types of sensors in robotics
 - Contains a 3-axis accelerometer and 3-axis gyroscope
- Communicates over I2C



Lab Info

- Initiate Communication with Sensor
- Read from Who Am I register to confirm address
- Write to Power Management Register to turn on
- Read from Acceleration registers to measure force in all directions
- Convert accelerations in 3 axes into angle measurement
- Light up LEDs to make a digital level