

Reactivate the source volume

System Manager Classic

NetApp December 09, 2021

This PDF was generated from https://docs.netapp.com/us-en/ontap-sm-classic/volume-disaster-recovery/task_resynchronizing_source_volume.html on December 09, 2021. Always check docs.netapp.com for the latest.

Table of Contents

Reactivate the source volume	 	 1
Resynchronize the source volume	 	
Update the source volume	 	
Reactivate the source volume	 	

Reactivate the source volume

When the source volume becomes available, you must resynchronize the data from the destination volume to the source volume, update any modifications after the resynchronization operation, and activate the source volume.

Resynchronize the source volume

When the source volume is online, you must resynchronize the data between the destination volume and the source volume to replicate the latest data from the destination volume.

Before you begin

The source volume must be online.

About this task


You must perform the task from the **destination** cluster.

The following image shows that the data is replicated from the active destination volume to the read-only source volume:



Steps

- 1. Depending on the System Manager version that you are running, perform one of the following steps:
 - ONTAP 9.4 or earlier: Click **Protection > Relationships**.
 - Starting with ONTAP 9.5: Click Protection > Volume Relationships.
- 2. Select the SnapMirror relationship between the source and destination volumes.
- 3. Make a note of the transfer schedule and the policy configured for the SnapMirror relationship.
- 4. Click Operations > Reverse Resync.
- 5. Select the confirmation check box, and then click **Reverse Resync**.

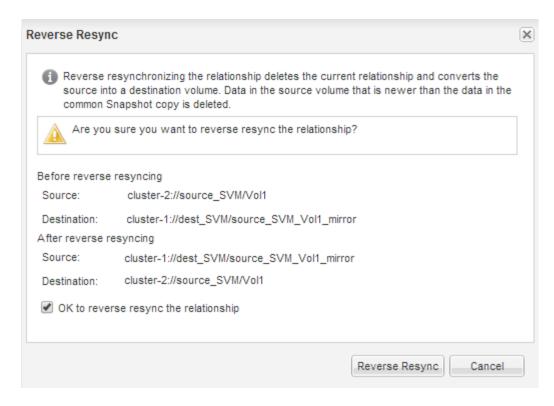

Starting with ONTAP 9.3, the SnapMirror policy of the relationship is set to MirrorAllSnapshots and the mirror schedule is set to None.

If you are running ONTAP 9.2 or earlier, the SnapMirror policy of the relationship is set to DPDefault and the mirror schedule is set to None.

- 6. On the source cluster, specify a SnapMirror policy and schedule that match the protection configuration of the original SnapMirror relationship:
 - a. Depending on the System Manager version that you are running, perform one of the following steps:
 - ONTAP 9.4 or earlier: Click Protection > Relationships.
 - Starting with ONTAP 9.5: Click Protection > Volume Relationships.
 - b. Select the SnapMirror relationship between the resynchronized source volume and the destination volume, and then click **Edit**.
 - c. Select the SnapMirror policy and schedule, and then click **OK**.

Update the source volume

After resynchronizing the source volume, you might want to ensure that all the latest changes are updated on the source volume before activating the source volume.


About this task

You must perform this task from the **source** cluster.

Steps

- 1. Depending on the System Manager version that you are running, perform one of the following steps:
 - ONTAP 9.4 or earlier: Click Protection > Relationships.
 - Starting with ONTAP 9.5: Click **Protection > Volume Relationships**.

- 2. Select the SnapMirror relationship between the source and the destination volumes, and then click **Operations > Update**.
- Perform an incremental transfer from the recent common Snapshot copy between the source and destination volumes.
 - Starting with ONTAP 9.3: Select the **As per policy** option.
 - ONTAP 9.2 or earlier: Select the **On demand** option.
- Select Limit transfer bandwidth to in order to limit the network bandwidth used for transfers, and then specify the maximum transfer speed.
- 5. Click Update.
- 6. Verify that the transfer status is Idle and last transfer type is Update in the **Details** tab.

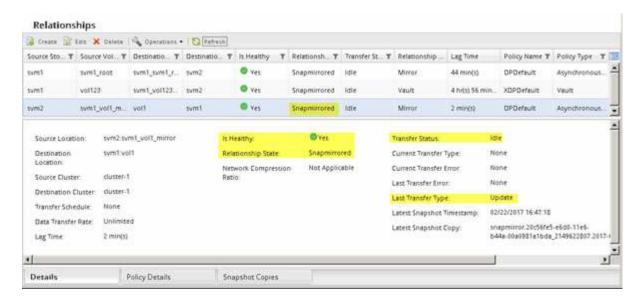


Reactivate the source volume

After resynchronizing the data from the destination volume to the source volume, you must activate the source volume by breaking the SnapMirror relationship. You should then resynchronize the destination volume to protect the reactivated source volume.

About this task

Both the break and reverse resync operations are performed from the **source** cluster.


The following image shows that the source and destination volumes are read/write when you break the SnapMirror relationship. After the reverse resync operation, the data is replicated from the active source volume to the read-only destination volume.

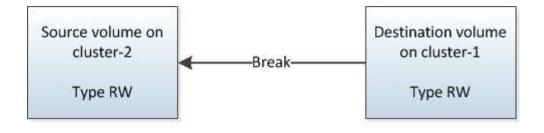




Steps

- 1. Depending on the System Manager version that you are running, perform one of the following steps:
 - ONTAP 9.4 or earlier: Click Protection > Relationships.
 - Starting with ONTAP 9.5: Click **Protection > Volume Relationships**.
- 2. Select the SnapMirror relationship between the source and the destination volumes.
- 3. Click Operations > Quiesce.
- 4. Select the confirmation check box, and then click Quiesce.
- 5. Click **Operations > Break**.
- 6. Select the confirmation check box, and then click Break.

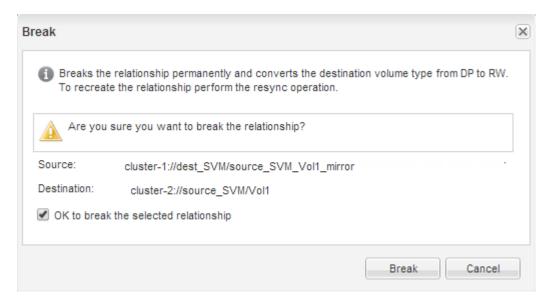

- 7. Click Operations > Reverse Resync.
- 8. Select the confirmation check box, and then click **Reverse Resync**.

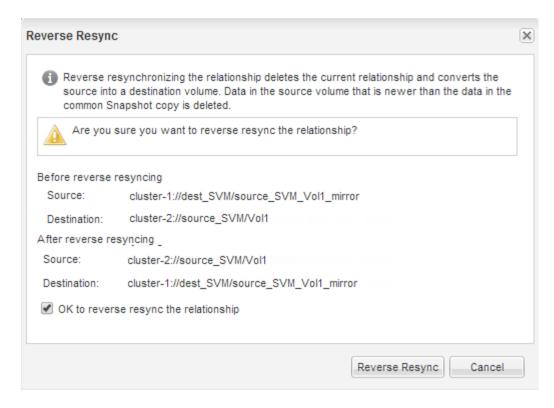

Starting with ONTAP 9.3, the SnapMirror policy of the relationship is set to MirrorAllSnapshots and the SnapMirror schedule is set to None.

If you are running ONTAP 9.2 or earlier, the SnapMirror policy of the relationship is set to DPDefault and the SnapMirror schedule is set to None.

- 9. Navigate to the source volume in the volumes page, and verify that the SnapMirror relationship you created is listed and the relationship state is Snapmirrored.
- 10. On the destination cluster, specify a SnapMirror policy and schedule that match the protection configuration of the original SnapMirror relationship for the new SnapMirror relationship:
 - a. Depending on the System Manager version that you are running, perform one of the following steps:
 - ONTAP 9.4 or earlier: Click Protection > Relationships.
 - Starting with ONTAP 9.5: Click Protection > Volume Relationships.
 - b. Select the SnapMirror relationship between the reactivated source and the destination volumes, and then click **Edit**.
 - c. Select the SnapMirror policy and schedule, and then click **OK**.

Results

The source volume has read/write access and is protected by the destination volume.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.