

DIGITAL AND ANALOG COMMUNICATION SYSTEMS

EIGHTH EDITION

LEON W. COUCH, II

Abbreviations

AC	alternating current
ADC	analog-to-digital conversion
ADM	adaptive delta modulation
AM	amplitude modulation
ANSI	American National Standards Institute
APLL	analog phase-locked loop
ATSC	Advanced Television System Committee (U.S.)
AT&T	American Telephone and Telegraph Company
AWGN	additive white Gaussian noise
BER	bit error rate
BPSK	binary phase shift keying
CATV	cable antenna television system
CCIR	International Radio Consultative Committee
CCITT	International Telegraph and Telephone Consultative Committee
CDMA	code-division multiple access
CFT	continuous Fourier transform
CMOS	complementary metal oxide conductor
C/N or CNR	carrier-to-noise (power)ratio
CO	central office
CRT	cathode-ray tube
dB	decibel
DC	direct current
DFT	discrete Fourier transform
DM	delta modulation
DPCM	differential pulse code modulation
DRM	digital radio Mondiale
DSB-SC	double-sideband suppressed carrier
DSL	digital subscriber line
DSS	digital satellite system
DTV	digital television
EIRP	effective isotropic radiated power
ERP	effective radiated power
FCC	Federal Communication Commission (U.S.)
FDM	frequency-division multiplexing
FEC	forward error-correction coding
FET	field-effect transistor
FFT	fast Fourier transform
FM	frequency modulation
FSK	frequency shift keying
GEO	geostationary orbit
GSM	group special mobile (cellular phone)
HDTV	high-definition (digital) television
HF	high frequency
HRC	harmonic related carrier
IBOC	inband on channel
IEEE	Institute of Electrical and Electronics Engineers
IF	intermediate frequency
IMD	intermodulation distortion
IRC	incrementally related carrier
ISDN	integrated service digital network
ISI	intersymbol interference
ISO	International Organization for Standardization
ITU	International Telecommunications Union
LAN	local area network
LED	light-emitting diode
LNA	low-noise amplifier
LO	local oscillator
LOS	line of sight

LPF	low-pass filter
LSSB	lower single sideband
LTE	long-term evolution (cell system)
MIMO	multiple input multiple output
MPEG	motion pictures expert group
MPSK	<i>M</i> -ary phase shift keying
MQAM	<i>M</i> -ary quadrature amplitude modulation
MSK	minimum-shift keying
NBFM	narrowband frequency modulation
NLOS	non line of sight
NRZ	nonreturn-to-zero
NTSC	National Television System Committee (U.S.)
OFDM	orthogonal frequency division multiplexing
OOK	on-off keying
OQPSK	offset quadrature phase-shift keying
PAM	pulse amplitude modulation
PBX	private branch exchange
PCM	pulse code modulation
PCS	personal communication system
PD	phase detection
PDF	probability density function
PEP	peak envelope power
PLL	phase-locked loop
PM	phase modulation
POTS	plain old telephone service
PPM	pulse position modulation
PSD	power spectral density
PSK	phase shift keying
PSTN	public switched telephone networks
PTM	pulse time modulation
PWM	pulse width modulation
QAM	quadrature amplitude modulation
QPSK	quadrature phase-shift keying
RMS	root-mean-square
RF	radio frequency
RT	remote terminal
RZ	return-to-zero
SAW	surface acoustics wave
SDARS	satellite digital audio radio service
SDTV	standard definition digital television
S/N or SNR	signal-to-noise (power) ratio
SS	spread spectrum (system)
SSB	single sideband
TCP/IP	transmission control protocol/internet protocol
TDM	time-division multiplexing
TDMA	time-division multiplex access
TELCO	telephone company
THD	total harmonic distortion
TTL	transistor-transistor logic
TV	television
TVRO	TV receive only terminal
TWT	traveling-wave tube
UHF	ultra high frequency
USSB	upper single sideband
VCO	voltage-controlled oscillator
VF	voice frequency
VHF	very high frequency
VSAT	very small aperture terminal
VSB	vestigial sideband
WBFM	wideband frequency modulation
WLAN	wireless local area network

DIGITAL AND ANALOG COMMUNICATION SYSTEMS

Eighth Edition

LEON W. COUCH, II

*Professor Emeritus
Electrical and Computer Engineering
University of Florida, Gainesville*

PEARSON

Boston Columbus Indianapolis New York San Francisco Upper Saddle River Amsterdam
Cape Town Dubai London Madrid Milan Munich Paris Montréal Toronto Delhi
Mexico City São Paulo Sydney Hong Kong Seoul Singapore Taipei Tokyo

*To my wife, Margaret Wheland Couch,
and to our children,
Leon III, Jonathan, and Rebecca*

VP/Editorial Director, Engineering/Computer Science:

Marcia J. Horton

Executive Editor: *Andrew Gilfillan*

Senior Marketing Manager: *Tim Galligan*

Marketing Assistant: *Jon Bryant*

Project Manager: *Pat Brown*

Creative Director: *Jayne Conte*

Art Director: *Kenny Beck*

Cover Designer: *Bruce Kenselaar*

Media Editor: *Daniel Sandin*

Full-Service Project Management: *Kiruthiga Anand*

Composition: *Integra*

Printer/Binder: *Courier Westford*

Cover Printer: *Lehigh-Phoenix*

Credits and acknowledgments borrowed from other sources and reproduced, with permission, in this textbook appear on appropriate page within text.

Copyright © 2013, 2007, 2002 Pearson Education, Inc., publishing as Prentice Hall, One Lake Street, Upper Saddle River, New Jersey 07458. All rights reserved. Manufactured in the United States of America. This publication is protected by Copyright, and permission should be obtained from the publisher prior to any prohibited reproduction, storage in a retrieval system, or transmission in any form or by any means, electronic, mechanical, photocopying, recording, or likewise. To obtain permission(s) to use material from this work, please submit a written request to Pearson Education, Inc., Permissions Department, One Lake Street, Upper Saddle River, New Jersey 07458.

Many of the designations by manufacturers and seller to distinguish their products are claimed as trademarks. Where those designations appear in this book, and the publisher was aware of a trademark claim, the designations have been printed in initial caps or all caps.

Library of Congress Cataloging-in-Publication Data

Couch, Leon W.

Digital & analog communication systems / Leon W. Couch, II.—8th ed.
p. cm.

ISBN-13: 978-0-13-291538-0 (alk. paper)

ISBN-10: 0-13-291538-3 (alk. paper)

I. Telecommunication systems. II. Digital communications. I. Title.

II. Title: Digital and analog communication systems.

TK5101.C69 2013

384—dc23

2011038659

PEARSON

ISBN-10: 0-13-291538-3

ISBN-13: 978-0-13-291538-0

CONTENTS

PREFACE	xiii
LIST OF SYMBOLS	xvii
1 INTRODUCTION	1
1–1 Historical Perspective	3
1–2 Digital and Analog Sources and Systems	5
1–3 Deterministic and Random Waveforms	6
1–4 Organization of the Book	7
1–5 Use of a Personal Computer and MATLAB	8
1–6 Block Diagram of a Communication System	8
1–7 Frequency Allocations	10
1–8 Propagation of Electromagnetic Waves	12
1–9 Information Measure	17
1–10 Channel Capacity and Ideal Communication Systems	19
1–11 Coding	20
<i>Block Codes</i> , 21	
<i>Convolutional Codes</i> , 23	
<i>Code Interleaving</i> , 26	
<i>Code Performance</i> , 26	
<i>Trellis-Coded Modulation</i> , 28	

1–12	Preview	30
1–13	Study-Aid Examples	30
	Problems	31

2	SIGNALS AND SPECTRA	34
2–1	Properties of Signals and Noise	34
	<i>Physically Realizable Waveforms, 35</i>	
	<i>Time Average Operator, 36</i>	
	<i>DC Value, 37</i>	
	<i>Power, 38</i>	
	<i>RMS Value and Normalized Power, 40</i>	
	<i>Energy and Power Waveforms, 41</i>	
	<i>Decibel, 41</i>	
	<i>Phasors, 43</i>	
2–2	Fourier Transform and Spectra	44
	<i>Definition, 44</i>	
	<i>Properties of Fourier Transforms, 48</i>	
	<i>Parseval's Theorem and Energy Spectral Density, 49</i>	
	<i>Dirac Delta Function and Unit Step Function, 52</i>	
	<i>Rectangular and Triangular Pulses, 55</i>	
	<i>Convolution, 60</i>	
2–3	Power Spectral Density and Autocorrelation Function	63
	<i>Power Spectral Density, 63</i>	
	<i>Autocorrelation Function, 65</i>	
2–4	Orthogonal Series Representation of Signals and Noise	67
	<i>Orthogonal Functions, 68</i>	
	<i>Orthogonal Series, 69</i>	
2–5	Fourier Series	71
	<i>Complex Fourier Series, 71</i>	
	<i>Quadrature Fourier Series, 72</i>	
	<i>Polar Fourier Series, 74</i>	
	<i>Line Spectra for Periodic Waveforms, 75</i>	
	<i>Power Spectral Density for Periodic Waveforms, 80</i>	
2–6	Review of Linear Systems	82
	<i>Linear Time-Invariant Systems, 82</i>	
	<i>Impulse Response, 82</i>	
	<i>Transfer Function, 83</i>	
	<i>Distortionless Transmission, 86</i>	
	<i>Distortion of Audio, Video, and Data Signals, 89</i>	
2–7	Bandlimited Signals and Noise	89
	<i>Bandlimited Waveforms, 90</i>	
	<i>Sampling Theorem, 90</i>	
	<i>Impulse Sampling and Digital Signal Processing, 93</i>	
	<i>Dimensionality Theorem, 95</i>	

- 2–8 Discrete Fourier Transform 97
Using the DFT to Compute the Continuous Fourier Transform, 98
Using the DFT to Compute the Fourier Series, 103
- 2–9 Bandwidth of Signals 105
- 2–10 Summary 112
- 2–11 Study-Aid Examples 113
Problems 117

3 BASEBAND PULSE AND DIGITAL SIGNALING 132

- 3–1 Introduction 132
- 3–2 Pulse Amplitude Modulation 133
Natural Sampling (Gating), 133
Instantaneous Sampling (Flat-Top PAM), 137
- 3–3 Pulse Code Modulation 141
Sampling, Quantizing, and Encoding, 142
Practical PCM Circuits, 145
Bandwidth of PCM Signals, 146
Effects of Noise, 148
Nonuniform Quantizing: μ -Law and A-Law Companding, 152
- 3–4 Digital Signaling 155
Vector Representation, 157
Bandwidth Estimation, 160
Binary Signaling, 160
Multilevel Signaling, 162
- 3–5 Line Codes and Spectra 164
Binary Line Coding, 164
Power Spectra for Binary Line Codes, 167
Differential Coding, 174
Eye Patterns, 175
Regenerative Repeaters, 176
Bit Synchronization, 178
Power Spectra for Multilevel Polar NRZ Signals, 181
Spectral Efficiency, 184
- 3–6 Intersymbol Interference 185
Nyquist's First Method (Zero ISI), 188
Raised Cosine-Rolloff Nyquist Filtering, 189
Nyquist's Second and Third Methods for Control of ISI, 194
- 3–7 Differential Pulse Code Modulation 194
- 3–8 Delta Modulation 198
Granular Noise and Slope Overload Noise, 201
Adaptive Delta Modulation and Continuously Variable Slope Delta Modulation, 203
Speech Coding, 204

- 3–9 Time-Division Multiplexing 206
Frame Synchronization, 206
Synchronous and Asynchronous Lines, 210
TDM Hierarchy, 213
The T1 PCM System, 215
- 3–10 Packet Transmission System 219
- 3–11 Pulse Time Modulation: Pulse Width Modulation and Pulse Position Modulation 220
- 3–12 Summary 224
- 3–13 Study-Aid Examples 224
- Problems 228

4 BANDPASS SIGNALING PRINCIPLES AND CIRCUITS

237

- 4–1 Complex Envelope Representation of Bandpass Waveforms 237
Definitions: Baseband, Bandpass, and Modulation, 238
Complex Envelope Representation, 238
- 4–2 Representation of Modulated Signals 241
- 4–3 Spectrum of Bandpass Signals 241
- 4–4 Evaluation of Power 245
- 4–5 Bandpass Filtering and Linear Distortion 248
Equivalent Low-Pass Filter, 248
Linear Distortion, 250
- 4–6 Bandpass Sampling Theorem 252
- 4–7 Received Signal Plus Noise 254
- 4–8 Classification of Filters and Amplifiers 254
Filters, 254
Amplifiers, 258
- 4–9 Nonlinear Distortion 259
- 4–10 Limiters 264
- 4–11 Mixers, Up Converters, and Down Converters 266
- 4–12 Frequency Multipliers 272
- 4–13 Detector Circuits 274
Envelope Detector, 274
Product Detector, 275
Frequency Modulation Detector, 277
- 4–14 Phase-Locked Loops and Frequency Synthesizers 282
- 4–15 Direct Digital Synthesis 290

4–16	Transmitters and Receivers	290
	<i>Generalized Transmitters</i> , 290	
	<i>Generalized Receiver: The Superheterodyne Receiver</i> , 292	
	<i>Zero-IF Receivers</i> , 296	
	<i>Interference</i> , 297	
4–17	Software Radios	297
4–18	Summary	299
4–19	Study-Aid Examples	299
	Problems	305

5 AM, FM, AND DIGITAL MODULATED SYSTEMS 313

5–1	Amplitude Modulation	314
5–2	AM Broadcast Technical Standards and Digital AM Broadcasting	319
	<i>Digital AM Broadcasting</i> , 320	
5–3	Double-Sideband Suppressed Carrier	321
5–4	Costas Loop and Squaring Loop	322
5–5	Asymmetric Sideband Signals	324
	<i>Single Sideband</i> , 324	
	<i>Vestigial Sideband</i> , 328	
5–6	Phase Modulation and Frequency Modulation	331
	<i>Representation of PM and FM Signals</i> , 331	
	<i>Spectra of Angle-Modulated Signals</i> , 336	
	<i>Narrowband Angle Modulation</i> , 341	
	<i>Wideband Frequency Modulation</i> , 342	
	<i>Preemphasis and Deemphasis in Angle-Modulated Systems</i> , 346	
5–7	Frequency-Division Multiplexing and FM Stereo	348
5–8	FM Broadcast Technical Standards and Digital FM Broadcasting	351
	<i>Digital FM Broadcasting</i> , 351	
5–9	Binary Modulated Bandpass Signaling	353
	<i>On-Off Keying (OOK)</i> , 353	
	<i>Binary Phase-Shift Keying (BPSK)</i> , 357	
	<i>Differential Phase-Shift Keying (DPSK)</i> , 359	
	<i>Frequency-Shift Keying (FSK)</i> , 359	
5–10	Multilevel Modulated Bandpass Signaling	366
	<i>Quadrature Phase-Shift Keying and M-ary Phase-Shift Keying</i> , 367	
	<i>Quadrature Amplitude Modulation (QAM)</i> , 370	
	<i>OQPSK and π/4 QPSK</i> , 371	
	<i>PSD for MPSK, QAM, QPSK, OQPSK, and π/4 QPSK</i> , 374	
	<i>Spectral Efficiency for MPSK, QAM, QPSK, OQPSK, and π/4 QPSK with Raised Cosine Filtering</i> , 376	

5–11	Minimum-Shift Keying and GMSK	378
5–12	Orthogonal Frequency Division Multiplexing (OFDM)	385
5–13	Spread Spectrum Systems	388
	<i>Direct Sequence</i> , 389	
	<i>Frequency Hopping</i> , 396	
	<i>SS Frequency Bands</i> , 397	
5–14	Summary	397
5–15	Study-Aid Examples	397
	Problems	401
6	RANDOM PROCESSES AND SPECTRAL ANALYSIS	414
6–1	Some Basic Definitions	415
	<i>Random Processes</i> , 415	
	<i>Stationarity and Ergodicity</i> , 416	
	<i>Correlation Functions and Wide-Sense Stationarity</i> , 420	
	<i>Complex Random Processes</i> , 423	
6–2	Power Spectral Density	424
	<i>Definition</i> , 424	
	<i>Wiener-Khintchine Theorem</i> , 426	
	<i>Properties of the PSD</i> , 428	
	<i>General Formula for the PSD of Digital Signals</i> , 433	
	<i>White-Noise Processes</i> , 435	
	<i>Measurement of PSD</i> , 436	
6–3	DC and RMS Values for Ergodic Random Processes	437
6–4	Linear Systems	439
	<i>Input-Output Relationships</i> , 439	
6–5	Bandwidth Measures	444
	<i>Equivalent Bandwidth</i> , 444	
	<i>RMS Bandwidth</i> , 444	
6–6	The Gaussian Random Process	446
	<i>Properties of Gaussian Processes</i> , 448	
6–7	Bandpass Processes	450
	<i>Bandpass Representations</i> , 450	
	<i>Properties of WSS Bandpass Processes</i> , 454	
	<i>Proofs of Some Properties</i> , 459	
6–8	Matched Filters	464
	<i>General Results</i> , 464	
	<i>Results for White Noise</i> , 466	
	<i>Correlation Processing</i> , 469	
	<i>Transversal Matched Filter</i> , 471	
6–9	Summary	475

6–10	Appendix: Proof of Schwarz’s Inequality	477
6–11	Study-Aid Examples	479
	Problems	481
7	PERFORMANCE OF COMMUNICATION SYSTEMS CORRUPTED BY NOISE	492
7–1	Error Probabilities for Binary Signaling	493
	<i>General Results, 493</i>	
	<i>Results for Gaussian Noise, 495</i>	
	<i>Results for White Gaussian Noise and Matched-Filter Reception, 497</i>	
	<i>Results for Colored Gaussian Noise and Matched-Filter Reception, 498</i>	
7–2	Performance of Baseband Binary Systems	499
	<i>Unipolar Signaling, 499</i>	
	<i>Polar Signaling, 502</i>	
	<i>Bipolar Signaling, 502</i>	
7–3	Coherent Detection of Bandpass Binary Signals	504
	<i>On-Off Keying, 504</i>	
	<i>Binary-Phase-Shift Keying, 506</i>	
	<i>Frequency-Shift Keying, 507</i>	
7–4	Noncoherent Detection of Bandpass Binary Signals	511
	<i>On-Off Keying, 511</i>	
	<i>Frequency-Shift Keying, 515</i>	
	<i>Differential Phase-Shift Keying, 517</i>	
7–5	Quadrature Phase-Shift Keying and Minimum-Shift Keying	519
7–6	Comparison of Digital Signaling Systems	521
	<i>Bit-Error Rate and Bandwidth, 521</i>	
	<i>Symbol Error and Bit Error for Multilevel Signaling, 523</i>	
	<i>Synchronization, 524</i>	
7–7	Output Signal-to-Noise Ratio for PCM Systems	525
7–8	Output Signal-to-Noise Ratios for Analog Systems	530
	<i>Comparison with Baseband Systems, 531</i>	
	<i>AM Systems with Product Detection, 532</i>	
	<i>AM Systems with Envelope Detection, 533</i>	
	<i>DSB-SC Systems, 535</i>	
	<i>SSB Systems, 535</i>	
	<i>PM Systems, 536</i>	
	<i>FM Systems, 540</i>	
	<i>FM Systems with Threshold Extension, 543</i>	
	<i>FM Systems with Deemphasis, 545</i>	
7–9	Comparison of Analog Signaling Systems	548
	<i>Ideal System Performance, 548</i>	

- 7–10 Summary 551
7–11 Study-Aid Examples 551
Problems 560

8 WIRE AND WIRELESS COMMUNICATION APPLICATIONS 569

- 8–1 The Explosive Growth of Telecommunications 569
8–2 Telephone Systems 570
Historical Basis, 570
Modern Telephone Systems and Remote Terminals, 571
8–3 Digital Subscriber Lines (DSL) 577
G.DMT and G.Lite Digital Subscriber Lines, 578
Video On Demand (VOD), 580
Integrated Service Digital Network (ISDN), 580
8–4 Capacities of Public Switched Telephone Networks 583
8–5 Satellite Communication Systems 583
Digital and Analog Television Transmission, 587
Data and Telephone Signal Multiple Access, 589
Satellite Radio Broadcasting, 595
8–6 Link Budget Analysis 597
Signal Power Received, 597
Thermal Noise Sources, 600
Characterization of Noise Sources, 601
Noise Characterization of Linear Devices, 602
Noise Characterization of Cascaded Linear Devices, 607
Link Budget Evaluation, 609
 E_b/N_0 Link Budget for Digital Systems, 612
Path Loss for Urban Wireless Environments, 613
8–7 Fiber-Optic Systems 618
8–8 Cellular Telephone Systems 620
First Generation (1G)—The AMPS Analog Circuit-switched System, 624
Second Generation (2G)—The Digital Circuit-switched Systems, 626
Third Generation (3G)—Digital with Circuit and Packet Switching 629
Fourth Generation (4G)—Digital with Packet Switching 629
8–9 Television 630
Analog Black-and-White Television, 630
MTS Stereo Sound, 637
Analog Color Television, 637
Standards for TV and CATV Systems, 641
Digital TV (DTV), 649
8–10 Cable Data Modems 653

8–11	Wireless Data Networks	655
	<i>WiFi</i> , 655	
	<i>WiMAX</i> , 656	
8–12	Summary	657
8–13	Study-Aid Examples	657
	Problems	662

APPENDIX A MATHEMATICAL TECHNIQUES, IDENTITIES, AND TABLES **669**

A–1	Trigonometry and Complex Numbers	669
	<i>Definitions</i> , 669	
	<i>Trigonometric Identities and Complex Numbers</i> , 669	
A–2	Differential Calculus	670
	<i>Definition</i> , 670	
	<i>Differentiation Rules</i> , 670	
	<i>Derivative Table</i> , 670	
A–3	Indeterminate Forms	671
A–4	Integral Calculus	671
	<i>Definition</i> , 671	
	<i>Integration Techniques</i> , 672	
A–5	Integral Tables	672
	<i>Indefinite Integrals</i> , 672	
	<i>Definite Integrals</i> , 673	
A–6	Series Expansions	674
	<i>Finite Series</i> , 674	
	<i>Infinite Series</i> , 674	
A–7	Hilbert Transform Pairs	675
A–8	The Dirac Delta Function	675
	<i>Properties of Dirac Delta Functions</i> , 676	
A–9	Tabulation of $Sa(x) = (\sin x)/x$	677
A–10	Tabulation of $Q(z)$	678

APPENDIX B PROBABILITY AND RANDOM VARIABLES **680**

B–1	Introduction	680
B–2	Sets	681
B–3	Probability and Relative Frequency	682
	<i>Simple Probability</i> , 682	
	<i>Joint Probability</i> , 683	
	<i>Conditional Probabilities</i> , 684	
B–4	Random Variables	685

B–5	Cumulative Distribution Functions and Probability Density Functions <i>Properties of CDFs and PDFs</i> , 688 <i>Discrete and Continuous Distributions</i> , 688	685
B–6	Ensemble Average and Moments <i>Ensemble Average</i> , 692 <i>Moments</i> , 693	692
B–7	Examples of Important Distributions <i>Binomial Distribution</i> , 695 <i>Poisson Distribution</i> , 698 <i>Uniform Distribution</i> , 698 <i>Gaussian Distribution</i> , 698 <i>Sinusoidal Distribution</i> , 703	695
B–8	Functional Transformations of Random Variables	704
B–9	Multivariate Statistics <i>Multivariate CDFs and PDFs</i> , 709 <i>Bivariate Statistics</i> , 711 <i>Gaussian Bivariate Distribution</i> , 712 <i>Multivariate Functional Transformation</i> , 712 <i>Central Limit Theorem</i> , 715	709
	Problems	716
APPENDIX C USING MATLAB		723
C–1	About the MATLAB M-Files	724
C–2	Quick Start for Running M-Files	724
C–3	Programming in MATLAB	725
REFERENCES		727
ANSWERS TO SELECTED PROBLEMS		739
INDEX		747

PREFACE

Continuing the tradition of the first through the seventh editions of *Digital and Analog Communication Systems*, this eighth edition provides the latest up-to-date treatment of digital communication systems. It is written as a textbook for junior or senior engineering students and is also appropriate for an introductory graduate course. It also provides a modern technical reference for the practicing electrical engineer. A *Student Solutions Manual* contains detailed solutions for over 100 selected end-of-the-chapter homework problems. For the selected problems that have computer solutions, MATLAB solution files are available for downloading from the Web. To download the *Student Solutions Manual* and the MATLAB files, go to www.pearsonhighered.com/couch.

One major change for this eighth edition is the addition of more than 100 examples distributed throughout the chapters of the text. Students are always asking for more examples. Most of these new examples have a problem description that consists of only a few lines of text. The solutions for these examples are contained within MATLAB files (downloaded from the Web site given earlier). These files include the procedure for the solution (as described by comment lines in the MATLAB program) and produce computed and plotted solutions. This presentation procedure has several advantages. First, the description for each example takes only a few lines

in this textbook, so the book will not be extended in length. Second, the student will have the experience of learning to work with MATLAB (as demonstrated with the example solutions). Clearly plotted results, which are better than hand calculations, are given. The student can also vary the parameters in the MATLAB example to discover how the results will be affected. The author believes that this approach to examples is a great innovative teaching tool.

To learn about communication systems, it is essential to first understand *how communication systems work*. Based on the principles of communications that are covered in the first five chapters of this book (power, frequency spectra, and Fourier analysis), this understanding is motivated by the use of extensive examples, study-aid problems, and the inclusion of adopted standards. Especially interesting is the material on wire and wireless communication systems. Also of importance is the effect of noise on these systems, since, without noise (described by probability and random processes), one could communicate to the limits of the universe with negligible transmitted power. In summary, this book covers the essentials needed for the understanding of wire and wireless communication systems and includes adopted standards. These essentials are

- How communication systems work: Chapters 1 through 5.
- The effect of noise: Chapters 6 and 7.
- Wire and Wireless Communication Applications: Chapter 8.

This book is ideal for either a one-semester or a two-semester course. This book emphasizes basic material and applications that can be covered in a one-semester course, as well as the essential material that should be covered for a two-semester course. This emphasis means that the page count needs to be limited to around 750 pages. For a book with a larger page count, it is impossible to cover all that additional material, even in a two-semester course. (Many schools are moving toward one basic course offering in communications.) Topics such as, coding, wireless signal propagation, WiMAX, and Long Term Evolution (LTE) of cellular systems are covered in this book. In-depth coverage of important topics such as these should be done by additional courses with their own textbooks.

For a one-semester course, the basics of how communication systems work may be taught by using the first five chapters (with selected readings from Chapter 8). For a two-semester course, the whole book is used.

This book covers *practical aspects* of communication systems developed from a sound *theoretical basis*.

THE THEORETICAL BASIS

- Digital and analog signals
- Magnitude and phase spectra
- Fourier analysis
- Orthogonal function theory
- Power spectral density
- Linear systems
- Nonlinear systems
- Intersymbol interference
- Complex envelopes
- Modulation theory
- Probability and random processes
- Matched filters
- Calculation of SNR
- Calculation of BER
- Optimum systems
- Block and convolutional codes

THE PRACTICAL APPLICATIONS

- PAM, PCM, DPCM, DM, PWM, and PPM baseband signaling
- OOK, BPSK, QPSK, MPSK, MSK, OFDM, and QAM bandpass digital signaling
- AM, DSB-SC, SSB, VSB, PM, and FM bandpass analog signaling
- Time-division multiplexing and the standards used
- Digital line codes and spectra
- Circuits used in communication systems
- Bit, frame, and carrier synchronizers
- Software radios
- Frequency-division multiplexing and the standards used
- Telecommunication systems
- Telephone systems
- DSL modems
- Digital subscriber lines
- Satellite communication systems
- Satellite radio broadcasting systems
- Effective input-noise temperature and noise figure
- Link budget analysis
- SNR at the output of analog communication systems
- BER for digital communication systems
- Fiber-optic systems
- Spread-spectrum systems
- AMPS, GSM, iDEN, TDMA, CDMA, WiMAX, and LTE cellular telephone systems
- Digital and analog television systems
- Technical standards for AM, FM, TV, DTV, and CATV
- Cable data modems
- Wi-Fi and WiMAX wireless networks
- MATLAB M files on the Web
- Mathematical tables
- Study-aid examples
- Over 100 examples with solutions. About 80 of these examples include MATLAB solutions
- Over 550 homework problems with selected answers
- Over 60 computer-solution homework problems
- Extensive references
- Emphasis on the design of communication systems
- *Student Solutions Manual* (download)

WHAT'S NEW IN THIS EDITION

- Addition of over 100 examples with solutions that are distributed throughout the chapters of the book. Most of them have MATLAB computer solutions obtained via electronic M files which are downloaded free-of-charge from author's Web site.
- Includes up-to-date descriptions of popular wireless systems, LTE (long-term evolution) and WiMax 4G cellular systems, and personal communication applications.
- Includes latest updates on digital TV (DTV) technology.
- Brings terminology and standards up-to-date.
- Brings references up-to-date.
- Updates all chapters.

- Includes additional and revised homework problems.
- Includes suggestions for obtaining the latest information on applications and standards by using the appropriate keyword queries on internet search engines, such as Google.
- Continues the emphasis on MATLAB computer solutions to problems. This approach of using computer solutions is very important in training new communication engineers. This is one of the very few books that includes the actual electronic files for MATLAB solutions (available for free downloading from the internet). This is done so that the reader does not have to spend days in error-prone typing of lines of computer code that are listed in a textbook.
- Updates all MATLAB files to run on Version R2010b.
- Extends list of Answers to Selected Problems at the end of the book, with MATLAB solutions if appropriate.

Many of the homework problems are marked with a personal computer symbol, . This indicates that MATLAB computer solutions are available for this problem.

Homework problems are found at the end of each chapter. Complete solutions for those marked with a ★, approximately 1/3, are found in the *Student Solutions Manual*, available for free download at www.pearsonhighered.com/couch. Student M-files are also available for download. Complete solutions for all problems, including the computer solution problems, are given in the *Instructor Solutions Manual* (available only to instructors from Pearson/Prentice Hall). These manuals include Acrobat pdf files for the written solutions. Also, for the problems with computer solutions, MATLAB M files are given. Instructor's should contact their local Pearson rep for access.

This book is an outgrowth of my teaching at the University of Florida and is tempered by my experiences as an amateur radio operator (K4GWQ). I believe that the reader will not understand the technical material unless he or she works some homework problems. Consequently, over 550 problems have been included. Some of them are easy, so that the beginning student will not become frustrated, and some are difficult enough to challenge the more advanced students. All of the problems are designed to provoke thought about, and understanding of, communication systems.

I appreciate the help of the many people who have contributed to this book and the very helpful comments that have been provided by the many reviewers over the years. In particular, I thank K. R. Rao, University of Texas, Arlington; Jitendra J. Tugnait, Auburn University; John F. McDonald, Rensselaer Polytechnic Institute; Bruce A. Ferguson, Rose-Hulman Institute of Technology; Ladimer S. Nagurney, University of Hartford; Jeffrey Carruthers, Boston University; and Hen-Geul Yeh, California State University, Long Beach. I also appreciate the help of my colleagues at the University of Florida. I thank my wife, Dr. Margaret Couch, who typed the original and revised manuscripts and has proofread all page proofs.

LEON W. COUCH, II
Gainesville, Florida
couch@ufl.edu

LIST OF SYMBOLS

There are not enough symbols in the English and Greek alphabets to allow the use of each letter only once. Consequently, some symbols may be employed to denote more than one entity, but their use should be clear from the context. Furthermore, the symbols are chosen to be generally the same as those used in the associated mathematical discipline. For example, in the context of complex variables, x denotes the real part of a complex number (i.e., $c = x + jy$), whereas in the context of statistics, x might denote a random variable.

Symbols

a_n	a constant
a_n	quadrature Fourier series coefficient
A_c	level of modulated signal of carrier frequency, f_c
A_e	effective area of an antenna
b_n	quadrature Fourier series coefficient
B	baseband bandwidth
B_p	bandpass filter bandwidth

B_T	transmission (bandpass) bandwidth
c	a complex number ($c = x + jy$)
c	a constant
c_n	complex Fourier series coefficient
C	channel capacity
C	capacitance
$^{\circ}\text{C}$	degrees Celsius
dB	decibel
D	dimensions/s, symbols/s ($D = N/T_0$), or baud rate
D_f	frequency modulation gain constant
D_n	polar Fourier series coefficient
D_p	phase modulation gain constant
e	error
e	the natural number 2.7183
E	modulation efficiency
E	energy
$\mathcal{E}(f)$	energy spectral density (ESD)
E_b/N_0	ratio of energy per bit to noise power spectral density
f	frequency (Hz)
$f(x)$	probability density function (PDF)
f_c	carrier frequency
f_i	instantaneous frequency
f_0	a (frequency) constant; the fundamental frequency of a periodic waveform
f_s	sampling frequency
F	noise figure
$F(a)$	cumulative distribution function (CDF)
$g(t)$	complex envelope
$\tilde{g}(t)$	corrupted complex envelope
G	power gain
$G(f)$	power transfer function
h	Planck's constant, 6.63×10^{-34} joule·s
$h(t)$	impulse response of a linear network
$h(x)$	mapping function of x into $h(x)$
H	entropy
$H(f)$	transfer function of a linear network
i	an integer
I_j	information in the j th message
j	the imaginary number $\sqrt{-1}$
j	an integer
k	Boltzmann's constant, 1.38×10^{-23} joule/K
k	an integer
$k(t)$	complex impulse response of a bandpass network
K	number of bits in a binary word that represents a digital message
K	degrees Kelvin ($^{\circ}\text{C} + 273$)

l	an integer
ℓ	number of bits per dimension or bits per symbol
L	inductance
L	number of levels permitted
m	an integer
m	mean value
$m(t)$	message (modulation) waveform
$\tilde{m}(t)$	corrupted (noisy received) message
M	an integer
M	number of messages permitted
n	an integer
n	number of bits in message
$n(t)$	noise waveform
N	an integer
N	number of dimensions used to represent a digital message
N	noise power
N_0	level of the power spectral density of white noise
$p(t)$	an absolutely time-limited pulse waveform
$p(t)$	instantaneous power
$p(m)$	probability density function of frequency modulation
P	average power
P_e	probability of bit error
$P(C)$	probability of correct decision
$P(E)$	probability of message error
$\mathcal{P}(f)$	power spectral density (PSD)
$Q(z)$	integral of Gaussian function
$Q(x_k)$	quantized value of the k th sample value, x_k
$r(t)$	received signal plus noise
R	data rate (bits/s)
R	resistance
$R(t)$	real envelope
$R(\tau)$	autocorrelation function
$s(t)$	signal
$\tilde{s}(t)$	corrupted signal
S/N	ratio of signal power to noise power
t	time
T	a time interval
T	absolute temperature (Kelvin)
T_b	bit period
T_e	effective input-noise temperature
T_0	duration of a transmitted symbol or message
T_0	period of a periodic waveform
T_0	standard room temperature (290 K)
T_s	sampling period

u_{11}	covariance
$v(t)$	a voltage waveform
$v(t)$	a bandpass waveform or a bandpass random process
$w(t)$	a waveform
$W(f)$	spectrum (Fourier transform) of $w(t)$
x	an input
x	a random variable
x	real part of a complex function or a complex constant
$x(t)$	a random process
y	an output
y	an output random variable
y	imaginary part of a complex function or a complex constant
$y(t)$	a random process
α	a constant
β	a constant
β_f	frequency modulation index
β_p	phase modulation index
δ	step size of delta modulation
δ_{ij}	Kronecker delta function
$\delta(t)$	impulse (Dirac delta function)
ΔF	peak frequency deviation (Hz)
$\Delta\theta$	peak phase deviation
ϵ	a constant
ϵ	error
η	spectral efficiency [(bits/sec)/Hz]
$\theta(t)$	phase waveform
λ	dummy variable of integration
λ	wavelength
$\Lambda(r)$	likelihood ratio
π	3.14159
ρ	correlation coefficient
σ	standard deviation
τ	independent variable of autocorrelation function
τ	pulse width
$\varphi_j(t)$	orthogonal function
ϕ_n	polar Fourier series coefficient
ω_c	radian carrier frequency, $2\pi f_c$
\equiv	mathematical equivalence
\triangleq	mathematical definition of a symbol

DEFINED FUNCTIONS

$J_n(\cdot)$	Bessel function of the first kind, n th order
$\ln(\cdot)$	natural logarithm
$\log(\cdot)$	base 10 logarithm
$\log_2(\cdot)$	base 2 logarithm
$Q(z)$	integral of a Gaussian probability density function
$\text{Sa}(z)$	$(\sin z)/z$
$u(\cdot)$	unit step function
$\Lambda(\cdot)$	triangle function
$\Pi(\cdot)$	rectangle function

OPERATOR NOTATION

$\text{Im}\{\cdot\}$	imaginary part of
$\text{Re}\{\cdot\}$	real part of
$\overline{[\cdot]}$	ensemble average
$\langle [\cdot] \rangle$	time average
$[\cdot] * [\cdot]$	convolution
$[\cdot]^*$	conjugate
$\angle[\cdot]$	angle operator or angle itself, see Eq. (2–108)
$ \cdot $	absolute value
$[\cdot]^*$	Hilbert transform
$\mathcal{F}[\cdot]$	Fourier transform
$\mathcal{L}[\cdot]$	Laplace transform
$[\cdot] \cdot [\cdot]$	dot product

This page intentionally left blank

INTRODUCTION

CHAPTER OBJECTIVES

- How communication systems work
- Frequency allocation and propagation characteristics
- Computer solutions (MATLAB)
- Information measure
- Coding performance

The subject of communication systems is immense. It is not possible to include all topics and keep one book of reasonable length. In this book, the topics are carefully selected to accentuate basic communication principles. For example, discussion is emphasized on the basic definition of instantaneous power (Chapter 2), average power (Chapter 2), and on the power of bandpass signals such as an AM radio signal (Chapter 4). Other basic concepts that are focused on are spectrum, signal-to-noise ratio for analog systems, and probability of bit error for digital systems. Moreover, the reader is motivated to appreciate these principles by the use of many practical applications. Often, practical applications are covered before the principles are fully developed. This provides “instant gratification” and motivates the reader to learn the basic principles well. The goal is to experience the joy of understanding how communication systems work and to develop an ability to design new communication systems.

This book is ideal for either a one-semester or a two-semester course. This book emphasizes basic material and applications that can be covered in a one-semester course, as well as the essential material that should be covered for a two-semester course. This emphasis means that the page count needs to be limited to around 750 pages. For a book with a larger page count, it is impossible to cover all that additional material, even in a two-semester course.

(Many schools are moving toward a basic one-course offering in communications.) Topics such as coding, wireless signal propagation, Wi MAX, and long-term evolution (LTE) of cellular systems are briefly covered in this book. In-depth coverage of important topics such as these should be done by additional courses with their own textbooks.

One major change for this eighth edition is the addition of more than 100 examples with solutions that are distributed throughout the chapters of the book. Students are always asking for more examples. Almost all of these new examples have a problem description that consists of only a few lines of text. The work for obtaining the solutions for these examples is done via MATLAB. These MATLAB solution files include the procedure for the solution (as described by comment lines in the MATLAB program), and then the results are computed and plotted. This presentation procedure has several advantages. First, the description for each example takes only a few lines in this textbook, so the book is not extended in length. Second, the student will have the experience of learning how to work with MATLAB (as demonstrated with the example solution). Clearly plotted results, which are better than hand calculations, will be given. The student can also vary the parameters in the MATLAB example to discover how the results will be affected.

What is a communication system? Moreover, what is electrical and computer engineering (ECE)? ECE is concerned with solving problems of two types: (1) production or transmission of electrical energy and (2) transmission or processing of information. *Communication systems are designed to transmit information.*

It is important to realize that communication systems and electric energy systems have markedly different sets of constraints. In electric energy systems, the waveforms are usually *known*, and one is concerned with designing the system for *minimum energy loss*.

In communication systems, the waveform present at the receiver (user) is *unknown* until after it is received—otherwise, no information would be transmitted, and there would be no need for the communication system. More information is communicated to the receiver when the user is “more surprised” by the message that was transmitted. That is, the transmission of information implies the communication of messages that are not known ahead of time (a priori).

Noise limits our ability to communicate. If there were no noise, we could communicate messages electronically to the outer limits of the universe by using an infinitely small amount of power. This has been intuitively obvious since the early days of radio. However, the theory that describes noise and the effect of noise on the transmission of information was not developed until the 1940s, by such persons as D. O. North [1943], S. O. Rice [1944], C. E. Shannon [1948], and N. Wiener [1949].

Communication systems are designed to transmit information bearing waveforms to the receiver. There are many possibilities for selecting waveforms to represent the information. For example, how does one select a waveform to represent the letter A in a typed message? Waveform selection depends on many factors. Some of these are bandwidth (frequency span) and center frequency of the waveform, waveform power or energy, the effect of noise on corrupting the information carried by the waveform, and the cost of generating the waveform at the transmitter and detecting the information at the receiver.

The book is divided into eight chapters and three appendices. Chapter 1 introduces some key concepts, such as the definition of information, and provides a method for evaluating the information capacity of a communication system. Chapter 2 covers the basic techniques for obtaining the spectrum bandwidth and power of waveforms. Baseband waveforms (which have frequencies near $f = 0$) are studied in Chapter 3, and bandpass waveforms (frequencies in

some band not near $f = 0$) are examined in Chapters 4 and 5. The effect of noise on waveform selection is covered in Chapters 6 and 7. Case studies of wire and wireless communications, including personal communication systems (PCS) are emphasized in Chapter 8. The appendices include mathematical tables, a short course on probability and random variables, and an introduction to MATLAB. Standards for communications systems are included, as appropriate, in each chapter. The personal computer is used as a tool to plot waveforms, compute spectra of waveforms, and analyze and design communications systems.

In summary, communication systems are designed to transmit information. Communication system designers have four main concerns:

1. Selection of the information-bearing waveform
2. Bandwidth and power of the waveform
3. Effect of system noise on the received information
4. Cost of the system.

1–1 HISTORICAL PERSPECTIVE

A time chart showing the historical development of communications is given in Table 1–1. The reader is encouraged to spend some time studying this table to obtain an appreciation for the chronology of communications. Note that although the telephone was developed late in the 19th century, the first transatlantic telephone cable was not completed until 1954. Previous to that date, transatlantic calls were handled via shortwave radio. Similarly, although the British began television broadcasting in 1936, transatlantic television relay was not possible until 1962, when the *Telstar I* satellite was placed into orbit. Digital transmission systems—embodied by telegraph systems—were developed in the 1850s before analog systems—the telephone—in the 20th century. Now, digital transmission is again becoming the preferred technique.

TABLE 1–1 IMPORTANT DATES IN COMMUNICATIONS

Year	Event
Before 3000 B.C.	Egyptians develop a picture language called <i>hieroglyphics</i> .
A.D. 800	Arabs adopt our present number system from India.
1440	Johannes Gutenberg invents movable metal type.
1752	Benjamin Franklin's kite shows that lightning is electricity.
1827	Georg Simon Ohm formulates his law ($I = E/R$).
1834	Carl F. Gauss and Ernst H. Weber build the electromagnetic telegraph.
1838	William F. Cooke and Sir Charles Wheatstone build the telegraph.
1844	Samuel F. B. Morse demonstrates the Baltimore, MD, and Washington, DC, telegraph line.
1850	Gustav Robert Kirchhoff first publishes his circuit laws.
1858	The first transatlantic cable is laid and fails after 26 days.
1864	James C. Maxwell predicts electromagnetic radiation.
1871	The Society of Telegraph Engineers is organized in London.
1876	Alexander Graham Bell develops and patents the telephone.

TABLE 1–1 (cont.)

Year	Event
1883	Thomas A. Edison discovers a flow of electrons in a vacuum, called the “Edison effect,” the foundation of the electron tube.
1884	The American Institute of Electrical Engineers (AIEE) is formed.
1887	Heinrich Hertz verifies Maxwell’s theory.
1889	The Institute of Electrical Engineers (IEE) forms from the Society of Telegraph Engineers in London.
1894	Oliver Lodge demonstrates wireless communication over a distance of 150 yards.
1900	Guglielmo Marconi transmits the first transatlantic wireless signal.
1905	Reginald Fessenden transmits speech and music by radio.
1906	Lee deForest invents the vacuum-tube triode amplifier.
1907	The Society of Wireless Telegraph Engineers is formed in the United States.
1909	The Wireless Institute is established in the United States.
1912	The Institute of Radio Engineers (IRE) is formed in the United States from the Society of Wireless Telegraph Engineers and the Wireless Institute.
1915	Bell System completes a U.S. transcontinental telephone line.
1918	Edwin H. Armstrong invents the superheterodyne receiver circuit.
1920	KDKA, Pittsburgh, PA, begins the first scheduled radio broadcasts.
1920	J. R. Carson applies sampling to communications.
1923	Vladimir K. Zworykin devises the “iconoscope” television pickup tube.
1926	J. L. Baird (England) and C. F. Jenkins (United States) demonstrate television.
1927	The Federal Radio Commission is created in the United States.
1927	Harold Black develops the negative-feedback amplifier at Bell Laboratories.
1928	Philo T. Farnsworth demonstrates the first all-electronic television system.
1931	Teletypewriter service is initiated.
1933	Edwin H. Armstrong invents FM.
1934	The Federal Communication Commission (FCC) is created from the Federal Radio Commission in the United States.
1935	Robert A. Watson-Watt develops the first practical radar.
1936	The British Broadcasting Corporation (BBC) begins the first television broadcasts.
1937	Alex Reeves conceives pulse code modulation (PCM).
1941	John V. Atanasoff invents the digital computer at Iowa State College.
1941	The FCC authorizes television broadcasting in the United States.
1945	The ENIAC electronic digital computer is developed at the University of Pennsylvania by John W. Mauchly.
1947	Walter H. Brattain, John Bardeen, and William Shockley devise the transistor at Bell Laboratories.
1947	Steve O. Rice develops a statistical representation for noise at Bell Laboratories.
1948	Claude E. Shannon publishes his work on information theory.
1950	Time-division multiplexing is applied to telephony.
1950s	Microwave telephone and communication links are developed.
1953	NTSC color television is introduced in the United States.
1953	The first transatlantic telephone cable (36 voice channels) is laid.
1957	The first Earth satellite, <i>Sputnik I</i> , is launched by USSR.

TABLE 1–1 (cont.)

Year	Event
1958	A. L. Schawlow and C. H. Townes publish the principles of the laser.
1958	Jack Kilby of Texas Instruments builds the first germanium integrated circuit (IC).
1958	Robert Noyce of Fairchild produces the first silicon IC.
1961	Stereo FM broadcasts begin in the United States.
1962	The first active satellite, <i>Telstar I</i> , relays television signals between the United States and Europe.
1963	Bell System introduces the touch-tone phone.
1963	The Institute of Electrical and Electronic Engineers (IEEE) is formed by merger of the IRE and AIEE.
1963–66	Error-correction codes and adaptive equalization for high-speed error-free digital communications are developed.
1964	The electronic telephone switching system (No. 1 ESS) is placed into service.
1965	The first commercial communications satellite, <i>Early Bird</i> , is placed into service.
1968	Cable television systems are developed.
1971	Intel Corporation develops the first single-chip microprocessor, the 4004.
1972	Motorola demonstrates the cellular telephone to the FCC.
1976	Personal computers are developed.
1979	64-kb random access memory ushers in the era of very large-scale integrated (VLSI) circuits.
1980	Bell System FT3 fiber-optic communication is developed.
1980	Compact disk is developed by Philips and Sony.
1981	IBM PC is introduced.
1982	AT&T agrees to divest its 22 Bell System telephone companies.
1984	Macintosh computer is introduced by Apple.
1985	FAX machines become popular.
1989	Global positioning system (GPS) using satellites is developed.
1995	The Internet and the World Wide Web become popular.
2000–present	Era of digital signal processing with microprocessors, digital oscilloscopes, digitally tuned receivers, megaflop personal computers, spread spectrum systems, digital satellite systems, digital television (DTV), and personal communications systems (PCS).

1–2 DIGITAL AND ANALOG SOURCES AND SYSTEMS

DEFINITION. A *digital information source* produces a finite set of possible messages.

A telephone touchtone pad is a good example of a digital source. There is a finite number of characters (messages) that can be emitted by this source.

DEFINITION. An *analog information source* produces messages that are defined on a continuum.

A microphone is a good example of an analog source. The output voltage describes the information in the sound, and it is distributed over a continuous range of values.

DEFINITION. A *digital communication system* transfers information from a digital source to the intended receiver (also called the sink).

DEFINITION. An *analog communication system* transfers information from an analog source to the sink.

Strictly speaking, a *digital waveform* is defined as a function of time that can have only a discrete set of amplitude values. If the digital waveform is a binary waveform, only two values are allowed. An *analog waveform* is a function of time that has a continuous range of values.

An electronic *digital* communication system usually has voltage and current waveforms that have digital values; however, it *may* have analog waveforms. For example, the information from a binary source may be transmitted to the receiver by using a sine wave of 1,000 Hz to represent a binary 1 and a sine wave of 500 Hz to represent a binary 0. Here the digital source information is transmitted to the receiver by the use of analog waveforms, but the system is still called a digital communication system. From this viewpoint, we see that a *digital* communication engineer needs to know how to analyze analog circuits as well as digital circuits.

Digital communication has a number of advantages:

- Relatively inexpensive digital circuits may be used.
- Privacy is preserved by using data encryption.
- Greater dynamic range (the difference between the largest and smallest values) is possible.
- Data from voice, video, and data sources may be merged and transmitted over a common digital transmission system.
- In long-distance systems, noise does not accumulate from repeater to repeater.
- Errors in detected data may be small, even when there is a large amount of noise on the received signal.
- Errors may often be corrected by the use of coding.

Digital communication also has disadvantages:

- Generally, more bandwidth is required than that for analog systems.
- Synchronization is required.

The advantages of digital communication systems usually outweigh their disadvantages. Consequently, digital systems are becoming dominant.

1-3 DETERMINISTIC AND RANDOM WAVEFORMS

In communication systems, we are concerned with two broad classes of waveforms: deterministic and random (or stochastic).

DEFINITION. A *deterministic waveform* can be modeled as a completely specified function of time.

For example, if

$$w(t) = A \cos(\omega_0 t + \varphi_0) \quad (1-1)$$

describes a waveform, where A , ω_0 , and ϕ_0 are known constants, this waveform is said to be deterministic because, for any value of t , the value $w(t)$ can be evaluated. If any of the constants are unknown, then the value of $w(t)$ cannot be calculated, and consequently, $w(t)$ is not deterministic.

DEFINITION. A *random waveform* (or stochastic waveform) cannot be completely specified as a function of time and must be modeled probabilistically.[†]

Here we are faced immediately with a dilemma when analyzing communication systems. We know that the waveforms that represent the source cannot be deterministic. For example, in a digital communication system, we might send information corresponding to any one of the letters of the English alphabet. Each letter might be represented by a deterministic waveform, but when we examine the waveform that is emitted from the source, we find that it is a random waveform because we do not know exactly which characters will be transmitted. Consequently, we really need to design the communication system by using a random signal waveform. Noise would also be described by a random waveform. This requires the use of probability and statistical concepts (covered in Chapters 6 and 7) that make the design and analysis procedure more complicated. However, if we represent the signal waveform by a “typical” deterministic waveform, we can obtain most, but not all, of the results we are seeking. That is the approach taken in the first five chapters of this book.

1–4 ORGANIZATION OF THE BOOK

Chapters 1 to 5 use a deterministic approach in analyzing communication systems. This approach allows the reader to grasp some important concepts without the complications of statistical analysis. It also allows the reader who is not familiar with statistics to obtain a basic understanding of communication systems. However, the important topic of performance of communication systems in the presence of noise cannot be analyzed without the use of statistics. These topics are covered in Chapters 6 and 7 and Appendix B.^{††} Chapter 8 gives practical case studies of wire and wireless communication systems.

This textbook is designed to be reader friendly. To aid the student, there are more than 100 examples distributed throughout the chapters of this book, most of which have a MATLAB solution obtained via electronic M files that can be downloaded free-of-charge from the website indicated at the end of this paragraph. In addition, there are study-aid problems with solutions at the end of each chapter. The personal computer (PC) is used to solve problems as appropriate. In addition, a *Student Solutions Manual* contains detailed solutions for over 100 selected (out of 550) end-of-the-chapter homework problems. The selected problems are marked with a ★. For the selected problems that have computer solutions, MATLAB solution files are available to the student. To download the free *Student Solutions Manual* and the MATLAB files, go to <http://lcouch.us> or to <http://couch.ece.ufl.edu>.

[†] A more complete definition of a random waveform, also called a *random process*, is given in Chapter 6.

^{††} Appendix B covers the topic of probability and random variables and is a complete chapter in itself. This allows the reader who has not had a course on this topic to learn the material before Chapters 6 and 7 are studied.

If needed, an errata list for this book will also be posted on this website.

The book is also useful as a reference source for mathematics (Appendix A), statistics (Appendix B and Chapter 6), and MATLAB (Appendix C), and as a reference listing communication systems standards that have been adopted (Chapters 3, 4, 5, and 8).

Communications is an exciting area in which to work. The reader is urged to browse through Chapter 8, looking at case-study topics that are of special interest in both wireless and wire communication systems. To learn more about applied communication systems and examples of circuits that you can build, see or buy a recent edition of the *ARRL Handbook* [e.g., ARRL, 2010].

1–5 USE OF A PERSONAL COMPUTER AND MATLAB

This textbook is designed so that a PC may be used as a tool to plot waveforms; compute spectra (using the fast Fourier transform); evaluate integrals; and, in general, help the reader to understand, analyze, and design communication systems. MATLAB was chosen as the program language since it is very efficient at these tasks and a student version is available at a reasonable cost. For a brief summary of MATLAB programming concepts and instructions on running MATLAB, see Appendix C (“using MATLAB”). MATLAB files are provided for solving the Example problems, the Study-Aid problems, and selected end-of-the-chapter Homework problems. All of these files run on version 7.11 R2010b of MATLAB. These files are available for free downloading from the website indicated previously. See Appendix C for more details.

(Additional MATLAB files for all homework problems marked with the PC () symbol are made available to the instructor and are included with the *Instructor Solutions Manual*.)

1–6 BLOCK DIAGRAM OF A COMMUNICATION SYSTEM

Communication systems may be described by the block diagram shown in Fig. 1–1. Regardless of the particular application, all communications systems involve three main subsystems: the *transmitter*, the *channel*, and the *receiver*. Throughout this book, we use the symbols as indicated in this diagram so that the reader will not be confused about where the signals are located in the overall system. The message from the source is represented by the information input waveform $m(t)$. The message delivered by the receiver is denoted by $\tilde{m}(t)$. The [~]

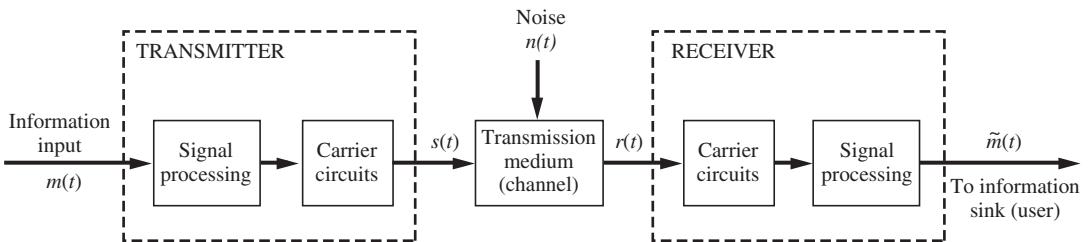


Figure 1–1 Communication system.

indicates that the message received may not be the same as that transmitted. That is, the message at the sink, $\tilde{m}(t)$, may be corrupted by noise in the channel, or there may be other impairments in the system, such as undesired filtering or undesired nonlinearities. The message information may be in analog or digital form, depending on the particular system, and it may represent audio, video, or some other type of information. In multiplexed systems, there may be multiple input and output message sources and sinks. The spectra (or frequencies) of $m(t)$ and $\tilde{m}(t)$ are concentrated about $f = 0$; consequently, they are said to be *baseband* signals.

The signal-processing block at the transmitter conditions the source for more efficient transmission. For example, in an analog system, the signal processor may be an analog low-pass filter that is used to restrict the bandwidth of $m(t)$. In a hybrid system, the signal processor may be an analog-to-digital converter (ADC), which produces a “digital word” that represents samples of the analog input signal (as described in Chapter 3 in the section on pulse code modulation). In this case, the ADC in the signal processor is providing *source coding* of the input signal. In addition, the signal processor may add parity bits to the digital word to provide *channel coding* so that error detection and correction can be used by the signal processor in the receiver to reduce or eliminate bit errors that are caused by noise in the channel. The signal at the output of the transmitter signal processor is a baseband signal, because it has frequencies concentrated near $f = 0$.

The transmitter carrier circuit converts the processed baseband signal into a frequency band that is appropriate for the transmission medium of the channel. For example, if the channel consists of a fiber-optic cable, the carrier circuits convert the baseband input (i.e., frequencies near $f = 0$) to light frequencies, and the transmitted signal, $s(t)$, is light. If the channel propagates baseband signals, no carrier circuits are needed, and $s(t)$ can be the output of the processing circuit at the transmitter. Carrier circuits are needed when the transmission channel is located in a band of frequencies around $f_c \gg 0$. (The subscript denotes “carrier” frequency.) In this case, $s(t)$ is said to be a *bandpass*, because it is designed to have frequencies located in a band about f_c . For example, an amplitude-modulated (AM) broadcasting station with an assigned frequency of 850 kHz has a carrier frequency of $f_c = 850$ kHz. The mapping of the baseband input information waveform $m(t)$ into the bandpass signal $s(t)$ is called *modulation*. [$m(t)$ is the audio signal in AM broadcasting.] In Chapter 4, it will be shown that any bandpass signal has the form

$$s(t) = R(t) \cos [\omega_c t + \theta(t)] \quad (1-2)$$

where $\omega_c = 2\pi f_c$. If $R(t) = 1$ and $\theta(t) = 0$, $s(t)$ would be a pure sinusoid of frequency $f = f_c$ with zero bandwidth. In the modulation process provided by the carrier circuits, the baseband input waveform $m(t)$ causes $R(t)$ or $\theta(t)$ or both to change as a function of $m(t)$. These fluctuations in $R(t)$ and $\theta(t)$ cause $s(t)$ to have a nonzero bandwidth that depends on the characteristics of $m(t)$ and on the mapping functions used to generate $R(t)$ and $\theta(t)$. In Chapter 5, practical examples of both digital and analog bandpass signaling are presented.

Channels may be classified into two categories: wire and wireless. Some examples of *wire* channels are twisted-pair telephone lines, coaxial cables, waveguides, and fiber-optic cables. Some typical *wireless* channels are air, vacuum, and seawater. Note that the general principles of digital and analog modulation apply to all types of channels, although channel characteristics may impose constraints that favor a particular type of signaling. In general, the channel medium attenuates the signal so that the noise of the channel or the noise introduced by an imperfect

receiver causes the delivered information \tilde{m} to be deteriorated from that of the source. The channel noise may arise from natural electrical disturbances (e.g., lightning) or from artificial sources, such as high-voltage transmission lines, ignition systems of cars, or switching circuits of a nearby digital computer. The channel may contain active amplifying devices, such as repeaters in telephone systems or satellite transponders in space communication systems.

The channel may also provide *multiple paths* between its input and output. This can be caused by the signal bouncing off of multiple reflectors. This *multipath* can be approximately described by two parameters—delay spread and Doppler spread. Delay spread is caused by multiple paths with varying lengths, which will cause a short transmitted pulse to be spread over time at the channel output because of the combination of received pulses with different delays from the multiple paths. Different motions of the various multipath reflectors cause the received pulses to have different Doppler frequency shifts so that there is a spread of Doppler frequency shifts on the components of the combined received signal. If the multipath reflectors move around slowly and, moreover, appear and disappear, the received signal will fade due to the individual received signals cancelling each other (when the composite received signal fades out). You have probably heard this fading effect on a distant AM radio station received at night. (The received night-time signals from distant AM stations are *skywave* signals as discussed in Sec. 1–8.)

The receiver takes the corrupted signal at the channel output and converts it to a baseband signal that can be handled by the receiver baseband processor. The baseband processor “cleans up” this signal and delivers an estimate of the source information $\tilde{m}(t)$ to the communication system output.

The goal is to design communication systems that transmit information to the receiver with as little deterioration as possible while satisfying design constraints, of allowable transmitted energy, allowable signal bandwidth, and cost. In digital systems, the measure of deterioration is usually taken to be the *probability of bit error* (P_e)—also called the *bit error rate* (BER)—of the delivered data \tilde{m} . In analog systems, the performance measure is usually taken to be the signal-to-noise ratio at the receiver output.

1–7 FREQUENCY ALLOCATIONS

Wireless communication systems often use the atmosphere for the transmission channel. Here, interference and propagation conditions are strongly dependent on the transmission frequency. Theoretically, any type of modulation (e.g., amplitude modulation, frequency modulation, single sideband, phase-shift keying, frequency-shift keying, etc.) could be used at any transmission frequency. However, to provide some semblance of order and to minimize interference, government regulations specify the modulation type, bandwidth, power, and type of information that a user can transmit over designated frequency bands.

Frequency assignments and technical standards are set internationally by the International Telecommunications Union (ITU). The ITU is a specialized agency of the United Nations, and the ITU administrative headquarters is located in Geneva, Switzerland, with a staff of about 700 persons (see <http://www.itu.ch>). This staff is responsible for administering the agreements that have been ratified by about 200 member nations of the ITU. The ITU is structured into three sectors. The Radiocommunication Sector (ITU-R) provides frequency assignments and is concerned with the efficient use of the radio frequency spectrum.

The Telecommunications Standardization Section (ITU-T) examines technical, operating, and tariff questions. It recommends worldwide standards for the public telecommunications network (PTN) and related radio systems. The Telecommunication Development Sector (ITU-D) provides technical assistance, especially for developing countries. This assistance encourages a full array of telecommunication services to be economically provided and integrated into the worldwide telecommunication system. Before 1992, the ITU was organized into two main sectors: the International Telegraph and Telephone Consultative Committee (CCITT) and the International Radio Consultative Committee (CCIR).

Each member nation of the ITU retains sovereignty over the spectral usage and standards adopted in its territory. However, each nation is expected to abide by the overall frequency plan and standards that are adopted by the ITU. Usually, each nation establishes an agency that is responsible for the administration of the radio frequency assignments within its borders. In the United States, the Federal Communications Commission (FCC) regulates and licenses radio systems for the general public and state and local government (see <http://www.fcc.gov>). In addition, the National Telecommunication and Information Administration (NTIA) is responsible for U.S. government and U.S. military frequency assignments. The international frequency assignments are divided into subbands by the FCC to accommodate 70 categories of services and 9 million transmitters. Table 1–2 gives a general listing of frequency bands, their common designations, typical propagation conditions, and typical services assigned to these bands.

TABLE 1–2 FREQUENCY BANDS

Frequency Band ^a	Designation	Propagation Characteristics	Typical Uses
3–30 kHz	Very low frequency (VLF)	Ground wave; low attenuation day and night; high atmospheric noise level	Long-range navigation; submarine communication
30–300 kHz	Low frequency (LF)	Similar to VLF, slightly less reliable; absorption in daytime	Long-range navigation and marine communication radio beacons
300–3000 kHz	Medium frequency (MF)	Ground wave and night sky wave; attenuation low at night and high in day; atmospheric noise	Maritime radio, direction finding, and AM broadcasting
3–30 MHz	High frequency (HF)	Ionospheric reflection varies with time of day, season, and frequency; low atmospheric noise at 30 MHz	Amateur radio; international broadcasting, military communication, long-distance aircraft and ship communication, telephone, telegraph, facsimile
30–300 MHz	Very high frequency (VHF)	Nearly line-of-sight (LOS) propagation, with scattering because of temperature inversions, cosmic noise	VHF television, FM two-way radio, AM aircraft communication, aircraft navigational aids

^a kHz = 10^3 Hz; MHz = 10^6 Hz; GHz = 10^9 Hz.

TABLE 1–2 (cont.)

Frequency Band ^a	Designation	Propagation Characteristics	Typical Uses
0.3–3 GHz	Ultrahigh frequency (UHF)	LOS propagation, cosmic noise	UHF television, cellular telephone, navigational aids, radar, GPS, microwave links, personal communication systems
1.0–2.0	<i>Letter designation</i>		
2.0–4.0	L		
3–30 GHz	S		
3–30 GHz	Superhigh frequency (SHF)	LOS propagation; rainfall attenuation above 10 GHz, atmospheric attenuation because of oxygen and water vapor, high water-vapor absorption at 22.2 GHz	Satellite communication, radar microwave links
2.0–4.0	<i>Letter designation</i>		
4.0–8.0	S		
8.0–12.0	C		
12.0–18.0	X		
18.0–27.0	Ku		
27.0–40.0	K		
26.5–40.0	Ka		
30–300 GHz	R		
30–300 GHz	Extremely high frequency (EHF)	Same; high water-vapor absorption at 183 GHz and oxygen absorption at 60 and 119 GHz	Radar, satellite, experimental
27.0–40.0	<i>Letter designation</i>		
26.5–40.0	Ka		
33.0–50.0	R		
40.0–75.0	Q		
75.0–110.0	V		
110–300	W		
10^3 – 10^7 GHz	mm (millimeter)		
10^3 – 10^7 GHz	Infrared, visible light, and ultraviolet	LOS propagation	Optical communications

^a kHz = 10^3 Hz; MHz = 10^6 Hz; GHz = 10^9 Hz.

For a detailed chart of current frequency allocations in the United States see <http://www.ntica.doc.gov/osmhome/allocchart.html>.

1–8 PROPAGATION OF ELECTROMAGNETIC WAVES

The propagation characteristics of electromagnetic waves used in wireless channels are highly dependent on the frequency. This situation is shown in Table 1–2, where users are assigned frequencies that have the appropriate propagation characteristics for the coverage needed. The propagation characteristics are the result of changes in the radio-wave velocity as

a function of altitude and boundary conditions. The wave velocity is dependent on air temperature, air density, and levels of air ionization.

Ionization (i.e., free electrons) of the rarified air at high altitudes has a dominant effect on wave propagation in the medium-frequency (MF) and high-frequency (HF) bands. The ionization is caused by ultraviolet radiation from the sun, as well as cosmic rays. Consequently, the amount of ionization is a function of the time of day, season of the year, and activity of the sun (sunspots). This results in several layers of varying ionization density located at various heights surrounding the Earth.

The dominant ionized regions are D, E, F₁, and F₂ layers. The D layer is located closest to the Earth's surface at an altitude of about 45 or 55 miles. For $f > 300\text{ kHz}$, the D layer acts as a radio-frequency (RF) sponge to absorb (or attenuate) these radio waves. The attenuation is inversely proportional to frequency and becomes small for frequencies above 4 MHz. For $f < 300\text{ kHz}$, the D layer provides refraction (bending) of RF waves. The D layer is most pronounced during the daylight hours, with maximum ionization when the sun is overhead, and almost disappears at night. The E layer has a height of 65 to 75 miles, has maximum ionization around noon (local time), and practically disappears after sunset. It provides reflection of HF frequencies during the daylight hours. The F layer ranges in altitude between 90 and 250 miles. It ionizes rapidly at sunrise, reaches its peak ionization in early afternoon, and decays slowly after sunset. The F region splits into two layers, F₁ and F₂, during the day and combines into one layer at night. The F region is the most predominant medium in providing reflection of HF waves. As shown in Fig. 1–2, the electromagnetic spectrum may be divided into three broad bands that have one of three dominant propagation characteristics: ground wave, sky wave, and line of sight (LOS).

Ground-wave propagation is illustrated in Fig. 1–2a. It is the dominant mode of propagation for frequencies below 2 MHz. Here, the electromagnetic wave tends to follow the contour of the Earth. That is, diffraction of the wave causes it to propagate along the surface of the Earth. This is the propagation mode used in AM broadcasting, where the local coverage follows the Earth's contour and the signal propagates over the visual horizon. The following question is often asked: What is the lowest radio frequency that can be used? The answer is that the value of the lowest useful frequency depends on how long you want to make the antenna. For efficient radiation, the antenna needs to be longer than one-tenth of a wavelength. For example, for signaling with a carrier frequency of $f_c = 10\text{ kHz}$, the wavelength is

$$\lambda = \frac{c}{f_c}$$

$$\lambda = \frac{(3 \times 10^8 \text{ m/s})}{10^4} = 3 \times 10^4 \text{ m} \quad (1-3)$$

where c is the speed of light. (The formula $\lambda = c/f_c$ is distance = velocity × time, where the time needed to traverse one wavelength is $t = 1/f_c$.) Thus, an antenna needs to be at least 3,000 m in length for efficient electromagnetic radiation at 10 kHz.

Sky-wave propagation is illustrated in Fig. 1–2b. It is the dominant mode of propagation in the 2- to 30-MHz frequency range. Here, long-distance coverage is obtained by reflecting the wave at the ionosphere, and at the Earth's boundaries. Actually, in the ionosphere the

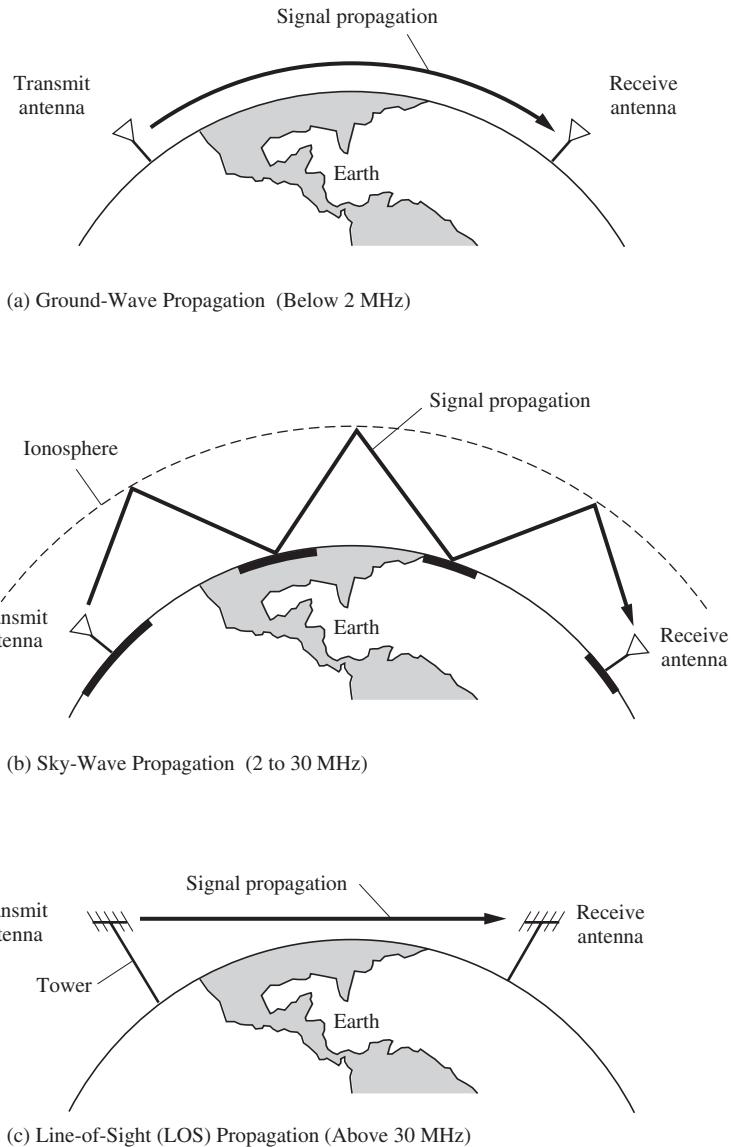


Figure 1-2 Propagation of radio frequencies.

waves are refracted (i.e., bent) gradually in an inverted U shape, because the index of refraction varies with altitude as the ionization density changes. The refraction index of the ionosphere is given by [Griffiths, 1987; Jordan and Balmian, 1968]

$$n = \sqrt{1 - \frac{81N}{f^2}} \quad (1-4)$$

where n is the refractive index, N is the free-electron density (number of electrons per cubic meter), and f is the frequency of the wave (in hertz). Typical N values range between 10^{10} and 10^{12} , depending on the time of day, the season, and the number of sunspots. In an ionized region $n < 1$ because $N > 0$, and outside the ionized region $n \approx 1$ because $N \approx 0$. In the ionized region, because $n < 1$, the waves will be bent according to Snell's law; viz,

$$n \sin \varphi_r = \sin \varphi_i \quad (1-5)$$

where φ_i is the angle of incidence (between the wave direction and vertical), measured just below the ionosphere, and φ_r is the angle of refraction for the wave (from vertical), measured in the ionosphere. Furthermore, the refraction index will vary with altitude within the ionosphere because N varies. For frequencies selected from the 2- to 30-MHz band, the refraction index will vary with altitude over the appropriate range so that the wave will be bent back to Earth. Consequently, the ionosphere acts as a reflector. The transmitting station will have coverage areas as indicated in Fig. 1-2b by heavy black lines along the Earth's surface. The coverage near the transmit antenna is due to the ground-wave mode, and the other coverage areas are due to sky wave. Notice that there are areas of no coverage along the Earth's surface between the transmit and receive antennas. The angle of reflection and the loss of signal at an ionospheric reflection point depend on the frequency, the time of day, the season of the year, and the sunspot activity [Jordan, 1985, Chap. 33].

During the daytime (at the ionospheric reflection points), the electron density will be high, so that $n < 1$. Consequently, sky waves from distant stations on the other side of the world will be heard on the shortwave bands. However, the D layer is also present during the day. This absorbs frequencies below 4 MHz.

This is the case for AM broadcast stations, where distant stations cannot be heard during the day, but at night the layer disappears, and distant AM stations can be heard via sky-wave propagation. In the United States, the FCC has designated some frequencies within the AM band as *clear channels* (as shown in Table 5-1). On these channels, only one or two high-power 50-kw stations are assigned to operate at night, along with a few low-power stations. Since these channels are relatively free of interfering stations, night sky-wave signals of the dominant 50-kw station can often be heard at distances up to 800 miles from the station. For example, some clear-channel 50-kw stations are WSM, Nashville, on 650 kHz; WCCO, Minneapolis, on 830 kHz; and WHO, Des Moines, on 1040 kHz. Actually, these "clear channels" are not so clear anymore since additional stations have been licensed for these channels as years have passed.

Sky-wave propagation is caused primarily by reflection from the F layer (90 to 250 miles in altitude). Because of this layer, international broadcast stations in the HF band can be heard from the other side of the world almost anytime during the day or night.

LOS propagation (illustrated in Fig. 1-2c) is the dominant mode for frequencies above 30 MHz. Here, the electromagnetic wave propagates in a straight line. In this case, $f^2 \gg 81N$, so that $n \approx 1$, and there is very little refraction by the ionosphere. In fact, the signal will propagate *through* the ionosphere. This property is used for satellite communications.

The LOS mode has the disadvantage that, for communication between two terrestrial (Earth) stations, the signal path has to be above the horizon. Otherwise, the Earth will block the LOS path. Thus, antennas need to be placed on tall towers so that the receiver antenna can

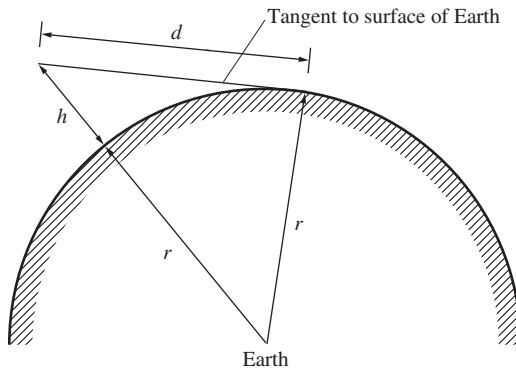


Figure 1–3 Calculation of distance to horizon.

“see” the transmitting antenna. A formula for the distance to the horizon, d , as a function of antenna height can be easily obtained by the use of Fig. 1–3. From this figure,

$$d^2 + r^2 = (r + h)^2$$

or

$$d^2 = 2rh + h^2$$

where r is the radius of the Earth and h is the height of the antenna above the Earth’s surface. In this application, h^2 is negligible with respect to $2rh$. The radius of the Earth is 3,960 statute miles. However, at LOS radio frequencies the effective Earth radius[†] is $\frac{4}{3}$ (3,960) miles. Thus, the distance to the radio horizon is

$$d = \sqrt{2h} \text{ miles} \quad (1-6)$$

where conversion factors have been used so that h is the antenna height measured in feet and d is in statute miles. For example, television stations have assigned frequencies above 30 MHz in the VHF or UHF range (see Table 1–2), and the fringe-area coverage of high-power stations is limited by the LOS radio horizon. For a television station with a 1,000-ft tower, d is 44.7 miles. For a fringe-area viewer who has an antenna height of 30 ft, d is 7.75 miles. Thus, for these transmitting and receiving heights, the television station would have fringe-area coverage out to a radius of $44.7 + 7.75 = 52.5$ miles around the transmitting tower.

Example 1–1 LINE OF SIGHT

Plot a graph describing the LOS distance in miles for transmitting antennas with heights from 0 ft up to 1000 ft. Assume that the receiving antenna is 5 ft above the ground. For the solution, see and run the MATLAB file Example1_1.m.

[†] The refractive index of the atmosphere decreases slightly with height, which causes some bending of radio rays. This effect may be included in LOS calculations by using an effective Earth radius that is four-thirds of the actual radius.

In addition to the LOS propagation mode, it is possible to have *ionospheric scatter propagation*. This mode occurs over the frequency range of 30 to 60 MHz, when the radio frequency signal is scattered because of irregularities in the refractive index of the lower ionosphere (about 50 miles above the Earth's surface). Because of the scattering, communications can be carried out over path lengths of 1,000 miles, even though that is beyond the LOS distance. Similarly, *tropospheric scattering* (within 10 miles above the Earth's surface) can propagate radio frequency signals that are in the 40-MHz to 4-GHz range over paths of several hundred miles.

For more technical details about radio-wave propagation, the reader is referred to textbooks that include chapters on ground-wave and sky-wave propagation [Griffiths, 1987; Jordan and Balmain, 1968] and on wireless cellular-signal propagation [Rappaport, 2002]. A very readable description of this topic is also found in the ARRL handbook [ARRL, 2010]. Personal computer programs that predict sky-wave propagation conditions, such as VOACAP [ARRL, 2010] are available.

1–9 INFORMATION MEASURE

As we have seen, the purpose of communication systems is to transmit information from a source to a receiver. However, what exactly is information, and how do we measure it? We know qualitatively that it is related to the surprise that is experienced when we receive the message. For example, the message “The ocean has been destroyed by a nuclear explosion” contains more information than the message “It is raining today.”

DEFINITION. The *information* sent from a digital source when the j th message is transmitted is given by

$$I_j = \log_2\left(\frac{1}{P_j}\right) \text{ bits} \quad (1-7a)$$

where P_j is the probability of transmitting the j th message.[†]

From this definition, we see that messages that are less likely to occur (smaller value for P_j) provide more information (larger value of I_j). We also observe that the information measure depends on only the likelihood of sending the message and does not depend on possible interpretation of the content as to whether or not it makes sense.

The base of the logarithm determines the units used for the information measure. Thus, for units of “bits,” the base 2 logarithm is used. If the natural logarithm is used, the units are “nats” and for base 10 logarithms, the unit is the “hartley,” named after R. V. Hartley, who first suggested using the logarithm measure in 1928 [Hartley, 1948].

In this section, the term *bit* denotes a unit of information as defined by Eq. (1-7a). In later sections, particularly in Chapter 3, *bit* is also used to denote a unit of binary data. These two different meanings for the word *bit* should not be confused. Some authors use *binit* to denote units of data and use *bit* exclusively to denote units of information. However, most engineers use the same word (*bit*) to denote both kinds of units, with the particular meaning understood from the context in which the word is used. This book follows that industry custom.

[†] The definition of probability is given in Appendix B.

For ease of evaluating I_j on a calculator, Eq. (1–7a) can be written in terms of the base 10 logarithm or the natural logarithm:

$$I_j = -\frac{1}{\log_{10} 2} \log_{10} P_j = -\frac{1}{\ln 2} \ln P_j \quad (1-7b)$$

In general, the information content will vary from message to message because the P_j 's will not be equal. Consequently, we need an average information measure for the source, considering all the possible messages we can send.

DEFINITION. The *average information* measure of a digital source is

$$H = \sum_{j=1}^m P_j I_j = \sum_{j=1}^m P_j \log_2 \left(\frac{1}{P_j} \right) \text{ bits} \quad (1-8)$$

where m is the number of possible different source messages and P_j is the probability of sending the j th message (m is finite because a digital source is assumed). The average information is called *entropy*.

Example 1–2 ENTROPY

For a case of a binary problem, examine how the entropy changes as a function of P_1 where P_1 is the probability of obtaining a binary “1” and it ranges from 0 to 1. For the solution, see and run the MATLAB file Example1_2.m.

Example 1–3 EVALUATION OF INFORMATION AND ENTROPY

Find the information content of a message that consists of a digital word 12 digits long in which each digit may take on one of four possible levels. The probability of sending any of the four levels is assumed to be equal, and the level in any digit does not depend on the values taken on by previous digits.

In a string of 12 symbols (digits), where each symbol consists of one of four levels, there are $4 \cdot 4 \dots 4 = 4^{12}$ different combinations (words) that can be obtained. Because each level is equally likely, all the different words are equally likely. Thus,

$$p_j = \frac{1}{4^{12}} = \left(\frac{1}{4} \right)^{12}$$

or

$$I_j = \log_2 \left(\frac{1}{\left(\frac{1}{4} \right)^{12}} \right) = 12 \log_2(4) = 24 \text{ bits}$$

In this example, we see that the information content in every one of the possible messages equals 24 bits. Thus, the average information H is 24 bits.

Suppose that only two levels (binary) had been allowed for each digit and that all the words were equally likely. Then the information would be $I_j = 12$ bits for the binary words, and the average information would be $H = 12$ bits. Here, all the 12-bit words gave 12 bits of information, because the words were equally likely. If they had not been equally likely, some of the 12-bit words would contain more than 12 bits of information and some would contain less,

and the average information would have been less than 12 bits. For example, if half of the 12-bit words (2,048 of the possible 4,096) have probability of occurrence of $P_j = 10^{-5}$ for each of these words (with a corresponding $I_j = 16.61$ bits) and the other half have $P_j = 4.78 \times 10^{-4}$ (for a corresponding $I_j = 11.03$ bits), then the average information is $H = 11.14$ bits.

The rate of information is also important.

DEFINITION. The *source rate* is given by

$$R = \frac{H}{T} \text{ bits/s} \quad (1-9)$$

where H is evaluated by using Eq. (1–8) and T is the time required to send a message.

The definitions previously given apply to digital sources. Results for analog sources can be approximated by digital sources with as much accuracy as we desire.

1–10 CHANNEL CAPACITY AND IDEAL COMMUNICATION SYSTEMS

Many criteria can be used to measure the effectiveness of a communication system to see if it is ideal or perfect. For digital systems, the optimum system might be defined as the system that minimizes the probability of bit error at the system output subject to constraints on transmitted energy and channel bandwidth. Thus, bit error and signal bandwidth are of prime importance and are covered in subsequent chapters. This raises the following question: Is it possible to invent a system with no bit error at the output even when we have noise introduced into the channel? This question was answered by Claude Shannon in 1948–1949 [Wyner and Shamai, 1998; Shannon, 1948, 1949]. The answer is yes, under certain assumptions. Shannon showed that (for the case of signal plus white Gaussian noise) a channel capacity C (bits/s) could be calculated such that if the rate of information R (bits/s) was less than C , the probability of error would approach zero. The equation for C is

$$C = B \log_2 \left(1 + \frac{S}{N} \right) \quad (1-10)$$

where B is the channel bandwidth in hertz (Hz) and S/N is the signal-to-noise power ratio (watts/watts, not dB) at the input to the digital receiver. Shannon does not tell us how to build this system, but he proves that it is theoretically possible to have such a system. Thus, Shannon gives us a theoretical performance bound that we can strive to achieve with practical communication systems. Systems that approach this bound usually incorporate error-correction coding.

Example 1–4 CHANNEL CAPACITY

For a case of a telephone line with a bandwidth of 3,300Hz, plot the channel capacity of the telephone line as a function of the S/N over a range of 0–60 dB. For the solution, see and run the MATLAB file Example1_4.m.

In analog systems, the optimum system might be defined as the one that achieves the largest signal-to-noise ratio at the receiver output, subject to design constraints such as channel bandwidth and transmitted power. Here, the evaluation of the output signal-to-noise ratio is of prime importance. We might ask the question, Is it possible to design a system with infinite signal-to-noise ratio at the output when noise is introduced by the channel? The answer is no. The performance of practical analog systems with respect to that of Shannon's ideal system is illustrated in Chapter 7. (See Fig. 7-27.)

Other fundamental limits for digital signaling were discovered by Nyquist in 1924 and Hartley in 1928. Nyquist showed that if a pulse represents one bit of data, noninterfering pulses could be sent over a channel no faster than $2B$ pulses/s, where B is the channel bandwidth in hertz. This is now known as the dimensionality theorem and is discussed in Chapter 2. Hartley generalized Nyquist's result for the case of multilevel pulse signaling, as discussed in Chapters 3 and 5.

The following section describes the improvement that can be obtained in digital systems when coding is used and how these coded systems compare with Shannon's ideal system.

1-11 CODING

If the data at the output of a digital communication system have errors that are too frequent for the desired use, the errors can often be reduced by the use of either of two main techniques:

- Automatic repeat request (ARQ)
- Forward error correction (FEC)

In an ARQ system, when a receiver circuit detects parity errors in a block of data, it requests that the data block be retransmitted. In an FEC system, the transmitted data are encoded so that the receiver can correct, as well as detect, errors. These procedures are also classified as *channel coding* because they are used to correct errors caused by channel noise. This is different from *source coding*, described in Chapter 3, where the purpose of the coding is to extract the essential information from the source and encode it into digital form so that it can be efficiently stored or transmitted using digital techniques.

The choice between using the ARQ or the FEC technique depends on the particular application. ARQ is often used in computer communication systems because it is relatively inexpensive to implement and there is usually a duplex (two-way) channel so that the receiving end can transmit back an acknowledgment (ACK) for correctly received data or a request for retransmission (NAC) when the data are received in error. FEC techniques are used to correct errors on simplex (one-way) channels, where returning of an ACK/NAC indicator (required for the ARQ technique) is not feasible. FEC is preferred on systems with large transmission delays, because if the ARQ technique were used, the effective data rate would be small; the transmitter would have long idle periods while waiting for the ACK/NAC indicator, which is retarded by the long transmission delay. We concentrate on FEC techniques in the remainder of this section.

Communication systems with FEC are illustrated in Fig. 1-4, where encoding and decoding blocks have been designated. Coding involves adding extra (redundant) bits to the data stream so that the decoder can reduce or correct errors at the output of the receiver.

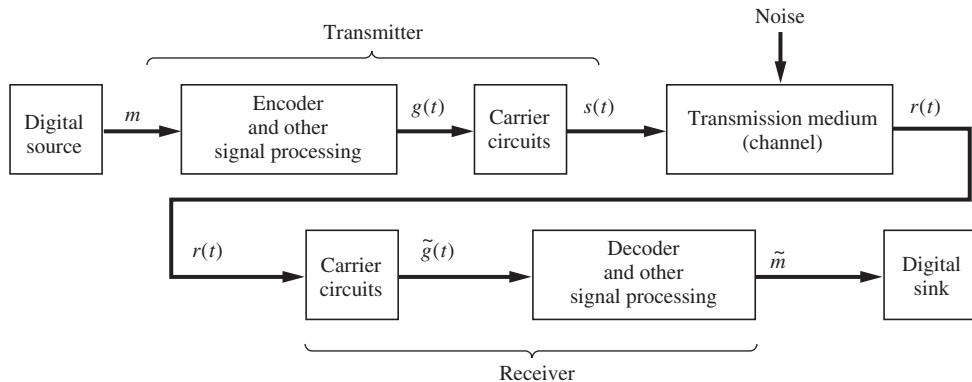


Figure 1-4 General digital communication system.

However, these extra bits have the disadvantage of increasing the data rate (bits/s) and, consequently, increasing the bandwidth of the encoded signal.

Codes may be classified into two broad categories:

- **Block codes.** A block code is a mapping of k input binary symbols into n output binary symbols. Consequently, the block coder is a *memoryless* device. Because $n > k$, the code can be selected to provide redundancy, such as *parity bits*, which are used by the decoder to provide some error detection and error correction. The codes are denoted by (n, k) , where the code rate R^\dagger is defined by $R = k/n$. Practical values of R range from $\frac{1}{4}$ to $\frac{7}{8}$, and k ranges from 3 to several hundred [Clark and Cain, 1981].
- **Convolutional codes.** A convolutional code is produced by a coder that has *memory*. The convolutional coder accepts k binary symbols at its input and produces n binary symbols at its output, where the n output symbols are affected by $v + k$ input symbols. Memory is incorporated because $v > 0$. The code rate is defined by $R = k/n$. Typical values for k and n range from 1 to 8, and the values for v range from 2 to 60. The range of R is between $\frac{1}{4}$ and $\frac{7}{8}$ [Clark and Cain, 1981]. A small value for the code rate R indicates a high degree of redundancy, which should provide more effective error control at the expense of increasing the bandwidth of the encoded signal.

Block Codes

Before discussing block codes, several definitions are needed. The *Hamming weight* of a code word is the number of binary 1 bits. For example, the code word 110101 has a Hamming weight of 4. The *Hamming distance* between two code words, denoted by d , is the number of positions by which they differ. For example, the code words 110101 and 111001 have a distance of $d = 2$. A received code word can be checked for errors. Some of the errors can be

[†] Do not confuse the code rate (with units of bits/bits) with the data rate or information rate (which has units of bits/s).

detected and corrected if $d \geq s + t + 1$, where s is the number of errors that can be detected and t is the number of errors that can be corrected ($s \geq t$). Thus, a pattern of t or fewer errors can be both detected and corrected if $d \geq 2t + 1$.

A general code word can be expressed in the form

$$i_1 i_2 i_3 \dots i_k p_1 p_2 p_3 \dots p_r$$

where k is the number of information bits, r is the number of parity check bits, and n is the total word length in the (n, k) block code, where $n = k + r$. This arrangement of the information bits at the beginning of the code word followed by the parity bits is most common. Such a block code is said to be *systematic*. Other arrangements with the parity bits interleaved between the information bits are possible and are usually considered to be equivalent codes.

Hamming has given a procedure for designing block codes that have single error-correction capability [Hamming, 1950]. A Hamming code is a block code having a Hamming distance of 3. Because $d \geq 2t + 1, t = 1$, and a single error can be detected and corrected. However, only certain (n, k) codes are allowable. These allowable Hamming codes are

$$(n, k) = (2^m - 1, 2^m - 1 - m) \quad (1-11)$$

where m is an integer and $m \geq 3$. Thus, some of the allowable codes are $(7, 4)$, $(15, 11)$, $(31, 26)$, $(63, 57)$, and $(127, 120)$. The code rate R approaches 1 as m becomes large.

In addition to Hamming codes, there are many other types of block codes. One popular class consists of the cyclic codes. *Cyclic codes* are block codes, such that another code word can be obtained by taking any one code word, shifting the bits to the right, and placing the dropped-off bits on the left. These types of codes have the advantage of being easily encoded from the message source by the use of inexpensive linear shift registers with feedback. This structure also allows these codes to be easily decoded. Examples of cyclic and related codes are Bose–Chaudhuri–Hocquenhem (BCH), Reed–Solomon, Hamming, maximal-length, Reed–Müller, and Golay codes. Some properties of block codes are given in Table 1–3 [Bhargava, 1983].

TABLE 1–3 PROPERTIES OF BLOCK CODES

Property	Code ^a			
	BCH	Reed-Solomon	Hamming	Maximal Length
Block length	$n = 2^m = 1$ $m = 3, 4, 5, \dots$	$n = m(2^m - 1)$ bits	$n = 2^m - 1$	$n = 2^m - 1$
Number of parity bits		$r = m2t$ bits	$r = m$	
Minimum distance	$d \geq 2t + 1$	$d = m(2t + 1)$ bits	$d = 3$	$d = 2^m - 1$
Number of information bits	$k \geq n - mt$			$k = m$

^a m is any positive integer unless otherwise indicated; n is the block length; k is the number of information bits.

Convolutional Codes

A convolutional encoder is illustrated in Fig. 1–5. Here k bits (one input frame) are shifted in each time, and, concurrently, n bits (one output frame) are shifted out, where $n > k$. Thus, every k -bit input frame produces an n -bit output frame. Redundancy is provided in the output, because $n > k$. Also, there is memory in the coder, because the output frame depends on the previous K input frames, where $K > 1$. The *code rate* is $R = k/n$, which is $\frac{3}{4}$ in this illustration. The *constraint length*, K , is the number of input frames that are held in the kK -bit shift register.[†] Depending on the particular convolutional code that is to be generated, data from the kK stages of the shift register are added (modulo 2) and used to set the bits in the n -stage output register.

For example, consider the convolutional coder shown in Fig. 1–6. Here, $k = 1, n = 2, K = 3$, and a commutator with two inputs performs the function of a two-stage output shift register. The convolutional code is generated by inputting a bit of data and then giving the commutator a complete revolution. The process is repeated for successive input bits to produce the convolutionally encoded output. In this example, each $k = 1$ input bit produces $n = 2$ output bits, so the code rate is $R = k/n = \frac{1}{2}$. The code tree of Fig. 1–7 gives the encoded sequences for the convolutional encoder example of Fig. 1–6. To use the code tree, one moves up if the input is a binary 0 and down if the input is a binary 1. The corresponding encoded bits are shown in parentheses. For example, if

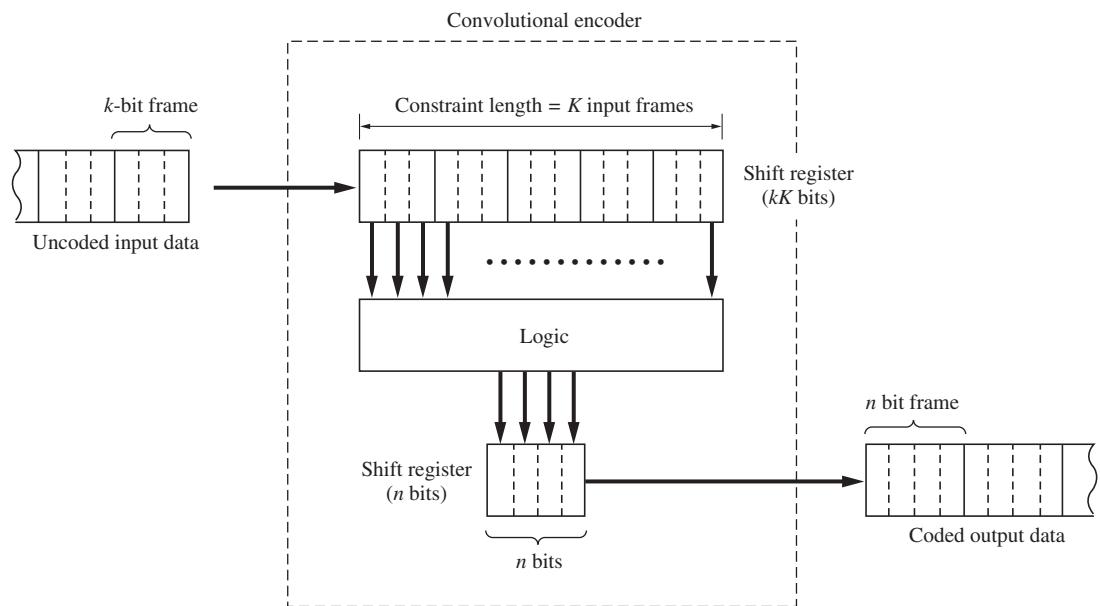


Figure 1–5 Convolutional encoding ($k = 3, n = 4, K = 5$, and $R = \frac{3}{4}$).

[†] Several different definitions of constraint length are used in the literature [Blahut, 1983; Clark and Cain, 1981; Proakis, 1995].

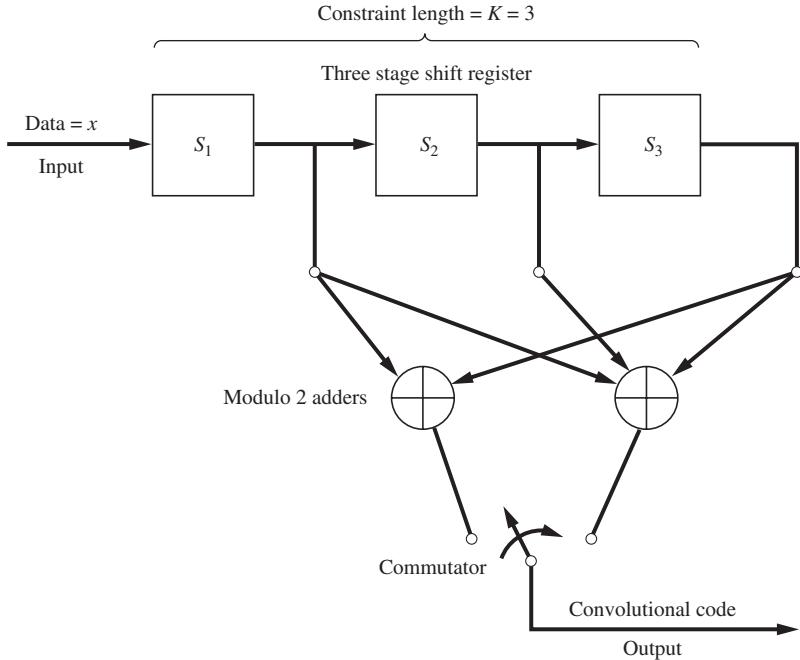


Figure 1–6 Convolutional encoder for a rate $\frac{1}{2}$, constraint length 3 code.

the input sequence $x_{11} = 1010$ is fed into the input (with the most recent input bit on the right), the corresponding encoded output sequence is $y_{11} = 11010001$, as shown by path A in Fig. 1–7.

A convolutionally encoded signal is decoded by “matching” the encoded received data to the corresponding bit pattern in the code tree. In sequential decoding (a suboptimal technique), the path is found like that of a driver who occasionally makes a wrong turn at a fork in a road but discovers the mistake, goes back, and tries another path. For example, if $y_{11} = 11010001$ was received, path A would be the closest match, and the decoded data would be $x_{11} = 1010$. If noise was present in the channel, some of the received encoded bits might be in error, and then the paths would not match exactly. In this case, the match is found by choosing a path that will minimize the Hamming distance between the selected path sequence and the received encoded sequence.

An optimum decoding algorithm, called *Viterbi decoding*, uses a similar procedure. It examines the possible paths and selects the best ones, based on some conditional probabilities [Forney, 1973]. The Viterbi procedure can use either soft or hard decisions. A *soft-decision* algorithm first decides the result on the basis of the test statistic[†] being above or below a decision threshold and then gives a “confidence” number that specifies how close the test statistic was to the threshold value. In *hard decisions*, only the

[†] The test statistic is a value that is computed at the receiver, based on the receiver input during some specified time interval. [See Eq. (7–4).]

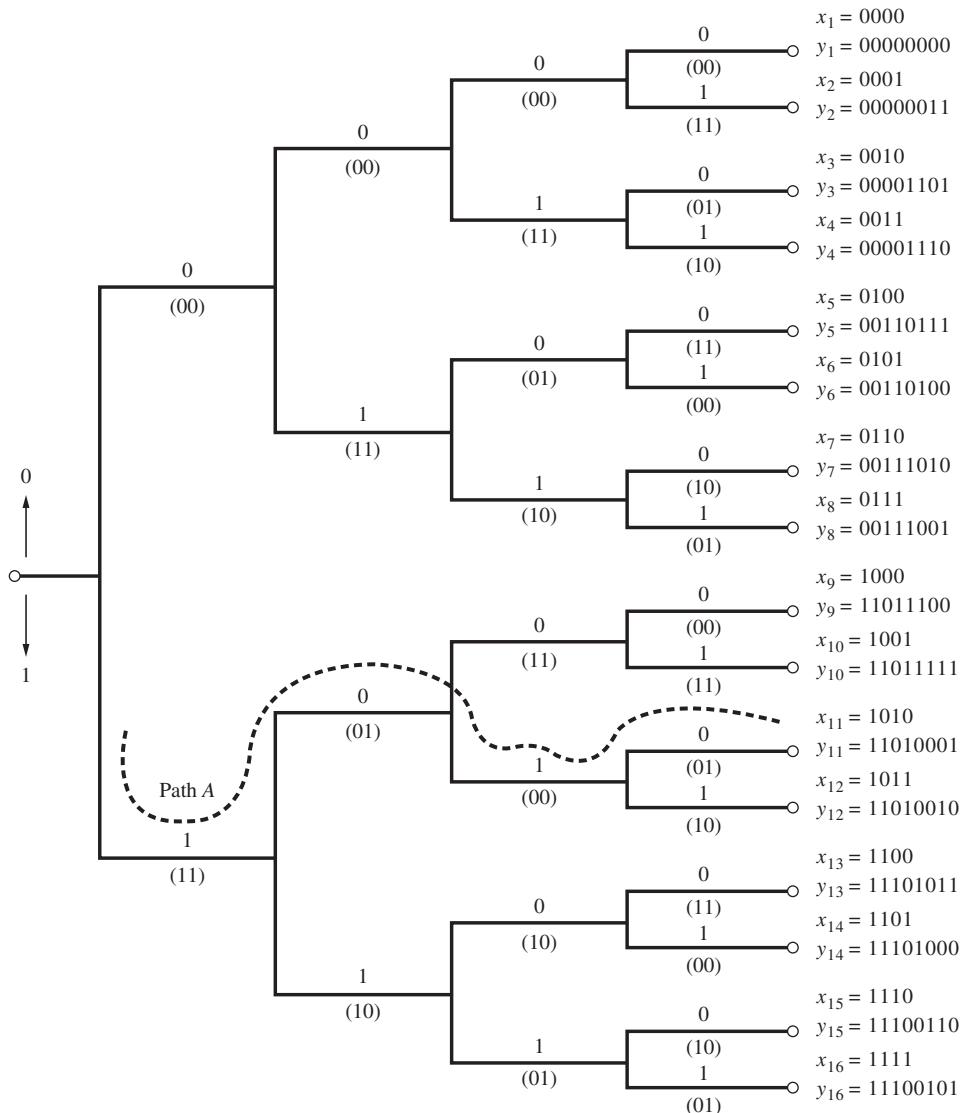


Figure 1–7 Code tree for convolutional encoder of Fig. 1–6.

decision output is known, and it is not known if the decision was almost “too close to call” (because the test value was almost equal to the threshold value). The soft-decision technique can translate into a 2-dB improvement (decrease) in the required receiver input E_b/N_0 [Clark and Cain, 1981]. E_b is the received signal energy over a 1-bit time interval, and $N_0/2$ is the power spectral density (PSD) of the channel noise at the receiver input. Both E_b and N_0 will be defined in detail in later chapters. [E.g. see Eq. (7–24b) or Eq. (8–44).]

Code Interleaving

In the previous discussion, it was assumed that if no coding was used, the channel noise would cause random bit errors at the receiver output that are more or less isolated (i.e., not adjacent). When coding was added, redundancy in the code allowed the receiver decoder to correct the errors so that the decoded output was almost error free. However, in some applications, large, wide pulses of channel noise occur. If the usual coding techniques are used in these situations, bursts of errors will occur at the decoder output because the noise bursts are wider than the “redundancy time” of the code. This situation can be ameliorated by the use of code interleaving.

At the transmitting end, the coded data are interleaved by shuffling (i.e., like shuffling a deck of cards) the coded bits over a time span of several block lengths (for block codes) or several constraint lengths (for convolutional codes). The required span length is several times the duration of the noise burst. At the receiver, before decoding, the data with error bursts are deinterleaved to produce coded data with isolated errors. The isolated errors are then corrected by passing the coded data through the decoder. This produces almost error-free output, even when noise bursts occur at the receiver input. There are two classes of interleavers—block interleavers and convolutional interleavers [Sklar, 1988].

Code Performance

The improvement in the performance of a digital communication system that can be achieved by the use of coding is illustrated in Fig. 1–8. It is assumed that a digital signal plus channel noise is present at the receiver input. The performance of a system that uses binary-phase-shift-keyed (BPSK) signaling is shown both for the case when coding is used and for the case when there is no coding. For the no-code case, the optimum (matched filter) detector circuit is used in the receiver, as derived in Chapter 7 and described by Eq. (7–38). For the coded case, a (23, 12) Golay code is used. P_e is the *probability of bit error*—also called the *bit error rate* (BER)—that is measured at the receiver output. E_b/N_0 is the energy-per-bit/noise-density ratio at the receiver input (as described in the preceding section). For $E_b/N_0 = 7 \text{ dB}$, Fig. 1–8 shows that the BER is 10^{-3} for the uncoded case and that the BER can be reduced to 10^{-5} if coding is used.

The *coding gain* is defined as the reduction in E_b/N_0 (in decibels) that is achieved when coding is used, when compared with the E_b/N_0 required for the uncoded case at some specific level of P_e . For example, as can be seen in the figure, a coding gain of 1.33 dB is realized for a BER of 10^{-3} . The coding gain increases if the BER is smaller, so that a coding gain of 2.15 dB is achieved when $P_e = 10^{-5}$. This improvement is significant in space communication applications, where every decibel of improvement is valuable. The figure also shows noted that there is a *coding threshold* in the sense that the coded system actually provides *poorer* performance than the uncoded system when E_b/N_0 is less than the threshold value. In this example, the coding threshold is about 3.5 dB. A coding threshold is found in all coded systems.

For optimum coding, Shannon’s channel capacity theorem, Eq. (1–10), gives the E_b/N_0 required. That is, if the source rate is below the channel capacity, the optimum code will allow the source information to be decoded at the receiver with $P_e \rightarrow 0$ (i.e., $10^{-\infty}$), even though

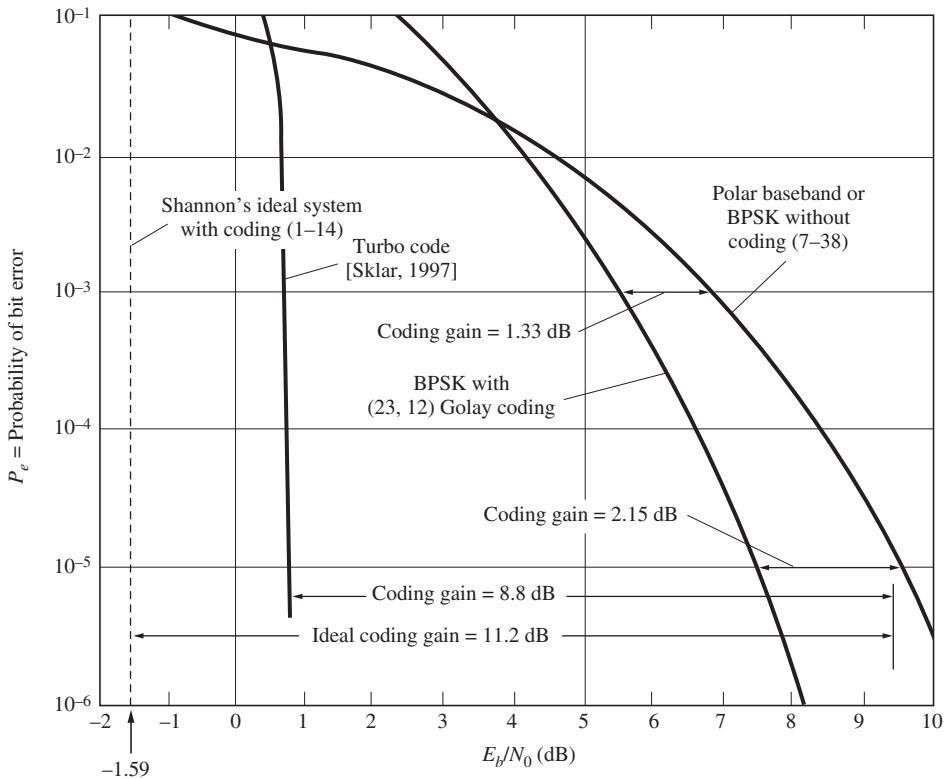


Figure 1-8 Performance of digital systems—with and without coding.

there is some noise in the channel. We will now find the E_b/N_0 required so that $P_e \rightarrow 0$ with the optimum (unknown) code. Assume that the optimum encoded signal is not restricted in bandwidth. Then, from Eq. (1-10),

$$\begin{aligned} C &= \lim_{B \rightarrow \infty} \left\{ B \log_2 \left(1 + \frac{S}{N} \right) \right\} = \lim_{B \rightarrow \infty} \left\{ B \log_2 \left(1 + \frac{E_b/T_b}{N_0 B} \right) \right\} \\ &= \lim_{x \rightarrow 0} \left\{ \frac{\log_2 [1 + (E_b/N_0 T_b)x]}{x} \right\} \end{aligned}$$

where T_b is the time that it takes to send one bit and N is the noise power that occurs within the bandwidth of the signal. The power spectral density (PSD) is $\mathcal{P}_n(f) = N_0/2$, and, as shown in Chapter 2, the noise power is

$$N = \int_{-B}^B \mathcal{P}_n(f) df = \int_{-B}^B \left(\frac{N_0}{2} \right) df = N_0 B \quad (1-12)$$

where B is the signal bandwidth. L'Hospital's rule is used to evaluate this limit:

$$C = \lim_{x \rightarrow 0} \left\{ \frac{1}{1 + (E_b/N_0 T_b)x} \left(\frac{E_b}{N_0 T_b} \right) \log_2 e \right\} = \frac{E_b}{N_0 T_b \ln 2} \quad (1-13)$$

If we signal at a rate approaching the channel capacity, then $P_e \rightarrow 0$, and we have the maximum information rate allowed for $P_e \rightarrow 0$ (i.e., the optimum system). Thus, $1/T_b = C$, or, using Eq. (1-13),

$$\frac{1}{T_b} = \frac{E_b}{N_0 T_b \ln 2}$$

or

$$E_b/N_0 = \ln 2 = -1.59 \text{ dB} \quad (1-14)$$

This minimum value for E_b/N_0 is -1.59 dB and is called Shannon's limit. That is, if optimum coding/decoding is used at the transmitter and receiver, error-free data will be recovered at the receiver output, provided that the E_b/N_0 at the receiver input is larger than -1.59 dB . This "brick wall" limit is shown by the dashed line in Fig. 1-8, where P_e jumps from $0 (10^{-\infty})$ to $\frac{1}{2}(0.5 \times 10^0)$ as E_b/N_0 becomes smaller than -1.59 dB , assuming that the ideal (unknown) code is used. Any practical system will perform worse than this ideal system described by Shannon's limit. Thus, the goal of digital system designers is to find practical codes that approach the performance of Shannon's ideal (unknown) code.

When the performance of the optimum encoded signal is compared with that of BPSK without coding (10^{-5} BER), it is seen that the optimum (unknown) coded signal has a coding gain of $9.61 - (-1.59) = 11.2 \text{ dB}$. Using Fig. 1-8, compare this value with the coding gain of 8.8 dB that is achieved when a turbo code is used. Table 1-4 shows the gains that can be obtained for some other codes.

Since their introduction in 1993, *turbo codes* have become very popular because they can perform near Shannon's limit, yet they also can have reasonable decoding complexity [Sklar, 1997]. Turbo codes are generated by using the parallel concatenation of two simple convolutional codes, with one coder preceded by an interleaver [Benedetto and Montorsi, 1996]. The interleaver ensures that error-prone words received for one of the codes corresponds to error-resistant words received for the other code.

All of the codes described earlier achieve their coding gains at the expense of *bandwidth expansion*. That is, when redundant bits are added to provide coding gain, the overall data rate and, consequently, the bandwidth of the signal are increased by a multiplicative factor that is the reciprocal of the code rate; the bandwidth expansion of the coded system relative to the uncoded system is $1/R = n/k$. Thus, if the uncoded signal takes up all of the available bandwidth, coding cannot be added to reduce receiver errors, because the coded signal would take up too much bandwidth. However, this problem can be ameliorated by using trellis-coded modulation (TCM).

Trellis-Coded Modulation

Gottfried Ungerboeck has invented a technique called *trellis-coded modulation* (TCM) that combines multilevel modulation with coding to achieve coding gain without bandwidth

TABLE 1–4 CODING GAINS WITH POLAR BASEBAND, BPSK OR QPSK

Coding Technique Used	Coding Gain (dB) at 10^{-5} BER	Coding Gain (dB) at 10^{-8} BER	Data Rate Capability
Ideal coding	11.2	13.6	
Turbo code [Sklar, 1997]	8.8		
Concatenated ^a Reed–Solomon and convolution (Viterbi decoding)	6.5–7.5	8.5–9.5	Moderate
Convolution with sequential decoding (soft decisions)	6.0–7.0	8.0–9.0	Moderate
Block codes (soft decision)	5.0–6.0	6.5–7.5	Moderate
Concatenated ^a Reed–Solomon and short block	4.5–5.5	6.5–7.5	Very high
Convolutional with Viterbi decoding	4.0–5.5	5.0–6.5	High
Convolutional with sequential decoding (hard decisions)	4.0–5.0	6.0–7.0	High
Block codes (hard decisions)	3.0–4.0	4.5–5.5	High
Block codes with threshold decoding	2.0–4.0	3.5–5.5	High
Convolutional with threshold decoding	1.5–3.0	2.5–4.0	Very high

^aTwo different encoders are used in series at the transmitter (see Fig. 1–4), and the corresponding decoders are used at the receiver.

Source: Bhargava [1983] and Sklar [1997].

expansion [Benedetto, Mondin, and Montorsi, 1994; Biglieri, Divsalar, McLane, and Simon, 1991; Ungerboeck, 1982, 1987]. The trick is to add the redundant coding bits by increasing the number of levels (amplitude values) allowed in the digital signal without changing the pulse width. (The bandwidth will remain the same if the pulse width is not changed, since the bandwidth is proportional to the reciprocal of the pulse width.) This technique is called multilevel signaling and is first introduced in Section 3–4. For example, the pulses shown in Fig. 3–14a represent $L = 4$ multilevel signaling, where each level carries two bits of information as shown in Table 3–3. Now add one redundant coding bit to the two information bits to provide eight amplitude levels for the pulses, but maintaining the same pulse width so that the waveform would have the same bandwidth. Then the redundant bit, due to the coding, could be accommodated without any increase in bandwidth. This concept can be generalized to complex-valued multilevel signaling, as shown at the end of Sec. 5–10. In summary, TCM integrates waveform modulation design, with coding design, while maintaining the bandwidth of the uncoded waveform.

When a convolutional code of constraint length $K = 3$ is implemented, this TCM technique produces a coding gain of 3 dB relative to an uncoded signal that has the same bandwidth and information rate. Almost 6 dB of coding gain can be realized if coders of constraint length 9 are used. The larger constraint length codes are not too difficult to generate, but the corresponding decoder for a code of large constraint length is very complicated. However, very-high-speed integrated circuits (VHSIC) make this such a decoder feasible.

The 9,600-bit/s CCITT V.32, 14,400-bit/s CCITT V.33bis, and 28,800-bit/s CCITT V.34 computer modems use TCM. The CCITT V.32 modem has a coding gain of 4 dB and is described by Example 4 of Wei's paper [Wei, 1984; CCITT Study Group XVII, 1984].

For further study about coding, the reader is referred to several excellent books on the topic [Blahut, 1983; Clark and Cain, 1981; Gallagher, 1968; Lin and Costello, 1983; McEliece, 1977; Peterson and Weldon, 1972; Sweeney, 1991; Viterbi and Omura, 1979].

1–12 PREVIEW

From the previous discussions, we see the need for some basic tools to understand and design communication systems. Some prime tools that are required are mathematical models to represent signals, noise, and linear systems. Chapter 2 provides these tools. It is divided into the broad categories of properties of signal and noise, Fourier transforms and spectra, orthogonal representations, bandlimited representations, and descriptions of linear systems. Measures of bandwidth are also defined.

1–13 STUDY-AID EXAMPLES



SA1–1 Evlution of Line of Sight (LOS) The antenna for a television (TV) station is located at the top of a 1,500-foot transmission tower. Compute the LOS coverage for the TV station if the receiving antenna (in the fringe area) is 20 feet above ground.

Solution: Using Eq. (1–6), we find that the distance from the TV transmission tower to the radio horizon is

$$d_1 = \sqrt{2h} = \sqrt{2(1,500)} = 54.8 \text{ miles}$$

The distance from the receiving antenna to the radio horizon is

$$d_2 = \sqrt{2(20)} = 6.3 \text{ miles}$$

Then, the total radius for the LOS coverage contour (which is a circle around the transmission tower) is

$$d = d_1 + d_2 = 61.1 \text{ miles}$$

SA1–2 Information Data Rate A telephone touch-tone keypad has the digits 0 to 9, plus the * and # keys. Assume that the probability of sending * or # is 0.005 and the probability of sending 0 to 9 is 0.099 each. If the keys are pressed at a rate of 2 keys/s, compute the data rate for this source.

Solution: Using Eq. (1–8), we obtain

$$\begin{aligned} H &= \sum P_j \log_2 \left(\frac{1}{P_j} \right) \\ &= \frac{1}{\log_{10}(2)} \left[10(0.099) \log_{10} \left(\frac{1}{0.099} \right) + 2(0.005) \log_{10} \left(\frac{1}{0.005} \right) \right] \end{aligned}$$

or

$$H = 3.38 \text{ bits/key}$$

Using Eq. (1–9), where $T = 1/(2 \text{ keys/s}) = 0.5 \text{ s/key}$, yields

$$R = \frac{H}{T} = \frac{3.38}{0.5} = 6.76 \text{ bits/s}$$

SA1–3 Maximum Telephone Line Data Rate A computer user plans to buy a higher-speed modem for sending data over his or her analog telephone line. The telephone line has a signal-to-noise ratio (SNR) of 25 dB and passes audio frequencies over the range from 300 to 3,200 Hz. Calculate the maximum data rate that could be sent over the telephone line when there are no errors at the receiving end.

Solution: In terms of a power ratio, the SNR is $S/N = 10^{(25/10)} = 316.2$ (see dB in Chapter 2), and the bandwidth is $B = 3,200 - 300 = 2,900 \text{ Hz}$. Using Eq. (1–10), we get

$$R = B \log_2 \left(1 + \frac{S}{N} \right) = 2,900 [\log_{10}(1 + 316.2)] / \log_{10}(2),$$

or

$$R = 24,097 \text{ bits/s}$$

Consequently, a 28.8-kbit/s modem signal would not work on this telephone line; however, a 14.4-kbit/s modem signal should transmit data without error.

PROBLEMS

- 1–1** Assume that the Earth's terrain is relatively flat but that there is a mountain that has a height of 800 feet above the average terrain. How far away could a 100-ft cell tower be located from this mountain and yet provide cell phone coverage to a person on top of this mountain?
- 1–2** A high-power FM station of frequency 96.9 MHz has an antenna height of 1000 ft. If the signal is to be received 55 miles from the station, how high does a prospective listener need to mount his or her antenna in this fringe area?
- ★ 1–3** Using geometry, prove that Eq. (1–6) is correct.
- 1–4** A terrestrial microwave system is being designed. The transmitting and receiving antennas are to be placed at the top of equal-height towers, with one tower at the transmitting site and one at the receiving site. The distance between the transmitting and receiving sites is 25 miles. Calculate the minimum tower height required for an LOS transmission path.

1-5 A cellular telephone cell site has an antenna located at the top of a 100-ft tower. A typical cellular telephone user has his or her antenna located 4 ft above the ground. What is the LOS radius of coverage for this cell site to a distant user?

★ 1-6 A digital source emits -1.0 - and 0.0 -V levels with a probability of 0.2 each and $+3.0$ - and $+4.0$ -V levels with a probability of 0.3 each. Evaluate the average information of the source.

1-7 Prove that base 10 logarithms may be converted to base 2 logarithms by using the identity $\log_2(x) = [1/\log_{10}(2)] \log_{10}(x)$.

1-8 If all the messages emitted by a source are equally likely (i.e., $P_j = P$), show that Eq. (1-8) reduces to $H = \log_2(1/P)$.

★ 1-9 For a binary source:

(a) Show that the entropy H is a maximum when the probability of sending a binary 1 is equal to the probability of sending a binary 0.

(b) Find the value of maximum entropy.

★ 1-10 A single-digit, seven-segment liquid crystal display (LCD) emits a 0 with a probability of 0.25; a 1 and a 2 with a probability of 0.15 each; 3, 4, 5, 6, 7, and 8 with a probability of 0.07 each; and a 9 with a probability of 0.03. Find the average information for this source.

1-11 (a) A binary source sends a binary 1 with a probability of 0.3. Evaluate the average information for the source.

(b) For a binary source, find the probability for sending a binary 1 and a binary 0, such that the average source information will be maximized.

★ 1-12 A numerical keypad has the digits 0, 1, 2, 3, 4, 5, 6, 7, 8, and 9. Assume that the probability of sending any one digit is the same as that for sending any of the other digits. Calculate how often the buttons must be pressed in order to send out information at the rate of 3 bits/s.

1-13 Refer to Example 1-3 and assume that words, each 12 digits in length, are sent over a system and that each digit can take on one of two possible values. Half of the possible words have a probability of being transmitted that is $(\frac{1}{2})^{13}$ for each word. The other half have probabilities equal to $3(\frac{1}{2})^{13}$. Find the entropy for this source.

1-14 Evaluate the channel capacity for a teleprinter channel that has a 300-Hz bandwidth and an SNR of 30 dB.



★ 1-15 Assume that a computer terminal has 110 characters (on its keyboard) and that each character is sent by using binary words.

(a) What are the number of bits needed to represent each character?

(b) How fast can the characters be sent (characters/s) over a telephone line channel having a bandwidth of 3.2 kHz and an SNR of 20 dB?

(c) What is the information content of each character if each is equally likely to be sent?

1-16 An analog telephone line has an SNR of 45 dB and passes audio frequencies over the range of 300 to 3,200 Hz. A modem is to be designed to transmit and receive data simultaneously (i.e., full duplex) over this line without errors.

(a) If the frequency range 300 to 1,200 Hz is used for the transmitted signal, what is the maximum transmitted data rate?

(b) If the frequency range 1,500 to 3,200 Hz is used for the signal being simultaneously received, what is the maximum received data rate?

(c) If the whole frequency range of 300 to 3,200 Hz is used simultaneously for transmitting and receiving (by the use of a hybrid circuit as described in Chapter 8, Fig. 8-4), what are the maximum transmitting and receiving data rates?

- 1-17** Using the definitions for terms associated with convolutional coding, draw a block diagram for a convolutional coder that has rate $R = \frac{2}{3}$ and constraint length $K = 3$.



- ★ 1-18** For the convolutional encoder shown in Fig. P1-18, compute the output coded data when the input data is $x = [10111]$. (The first input bit is the leftmost element of the \mathbf{x} row vector.)

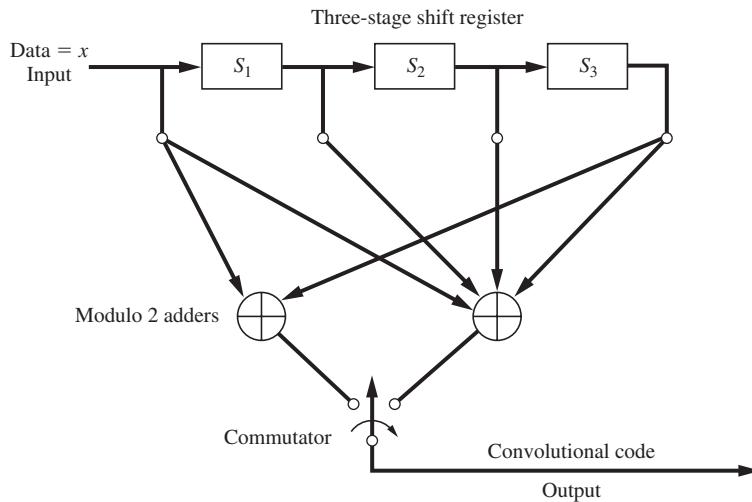


Figure P1-18

SIGNALS AND SPECTRA

CHAPTER OBJECTIVES

- Basic signal properties (DC, RMS, dBm, and power)
- Fourier transform and spectra
- Linear systems and linear distortion
- Bandlimited signals and sampling
- Discrete Fourier transform
- Bandwidth of signals

2–1 PROPERTIES OF SIGNALS AND NOISE

In communication systems, the received waveform is usually categorized into the desired part containing the information and the extraneous or undesired part. The desired part is called the *signal*, and the undesired part is called *noise*.

This chapter develops mathematical tools that are used to describe signals and noise from a deterministic waveform point of view. (The random waveform approach is given in Chapter 6.) The waveforms will be represented by direct mathematical expressions or by the use of orthogonal series representations such as the Fourier series. Properties of these waveforms, such as their DC value, root-mean-square (RMS) value, normalized power, magnitude spectrum, phase spectrum, power spectral density, and bandwidth, will also be established. In addition, effects of linear filtering will be studied.

The waveform of interest may be the voltage as a function of time, $v(t)$, or the current as a function of time, $i(t)$. Often, the same mathematical techniques can be used when one is working with either type of waveform. Thus, for generality, waveforms will be denoted simply as $w(t)$ when the analysis applies to either case.

Physically Realizable Waveforms

Practical waveforms that are *physically realizable* (i.e., measurable in a laboratory) satisfy several conditions:[†]

1. The waveform has significant nonzero values over a composite time interval that is finite.
2. The spectrum of the waveform has significant values over a composite frequency interval that is finite.
3. The waveform is a continuous function of time.
4. The waveform has a finite peak value.
5. The waveform has only real values. That is, at any time, it cannot have a complex value $a + jb$, where b is nonzero.

The first condition is necessary because systems (and their waveforms) appear to exist for a finite amount of time. Physical signals also produce only a finite amount of energy. The second condition is necessary because any transmission medium—such as wires, coaxial cable, waveguides, or fiber-optic cable—has a restricted bandwidth. The third condition is a consequence of the second, and will become clear from spectral analysis as developed in Sec. 2–2. The fourth condition is necessary because physical devices are destroyed if voltage or current of infinite value is present within the device. The fifth condition follows from the fact that only real waveforms can be observed in the real world, although *properties* of waveforms, such as spectra, may be complex. Later, in Chapter 4, it will be shown that complex waveforms can be very useful in representing real bandpass signals mathematically.

Mathematical models that violate some or all of the conditions listed previously are often used, and for one main reason—to simplify the mathematical analysis. However, if we are careful with the mathematical model, the correct result can be obtained when the answer is properly interpreted. For example, consider the digital waveform shown in Fig. 2–1. The mathematical model waveform has discontinuities at the switching times. This situation violates the third condition—that the physical waveform be continuous. The physical waveform is of finite duration (decays to zero before $t = \pm\infty$), but the duration of the mathematical waveform extends to infinity.

In other words, this mathematical model assumes that the physical waveform has existed in its steady-state condition for all time. Spectral analysis of the model will approximate the correct results, except for the extremely high-frequency components. The average power that is calculated from the model will give the correct value for the average power of the physical signal that is measured over an appropriate time interval. The total energy of the mathematical model's signal will be infinity because it extends to infinite time, whereas that of the physical signal will be finite. Consequently, the model will not give the correct value for the total energy of the physical signal without the use of some additional information. However, the model can be used to evaluate the energy of the physical signal over some finite time interval. This mathematical model is said to be a *power signal* because it has the property of finite power (and infinite energy), whereas the physical waveform is said to be an *energy signal* because it has finite energy. (Mathematical definitions for power and energy

[†] For an interesting discussion relative to the first and second conditions, see the paper by Slepian [1976].

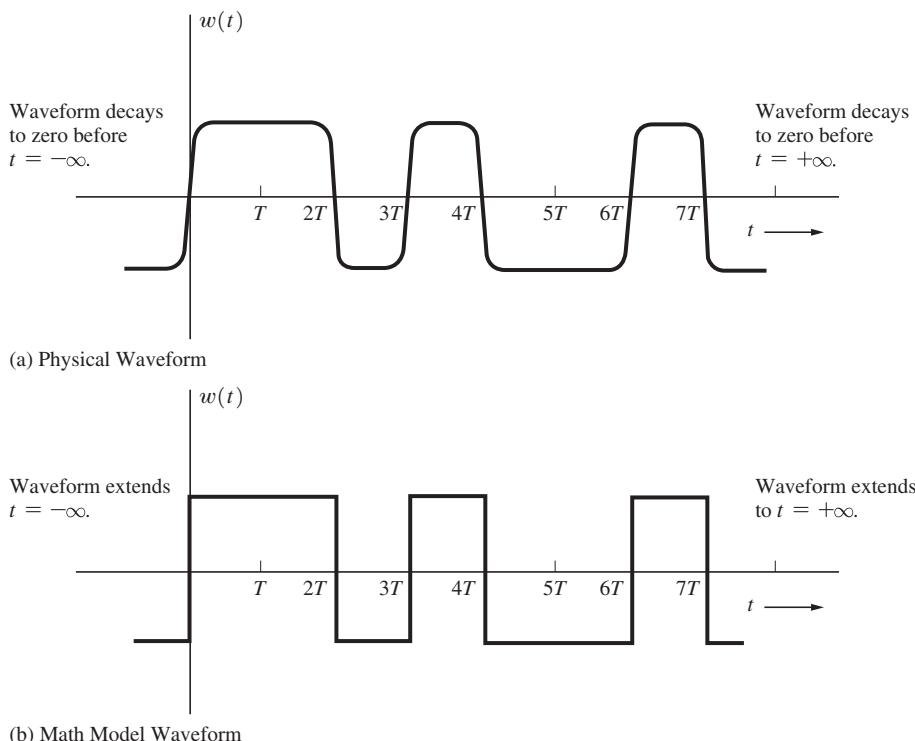


Figure 2–1 Physical and mathematical waveforms.

signals will be given in a subsequent section.) All physical signals are energy signals, although we generally use power signal mathematical models to simplify the analysis.

In summary, waveforms may often be classified as signals or noise, digital or analog, deterministic or nondeterministic, physically realizable or nonphysically realizable, and belonging to the power or energy type. Additional classifications, such as periodic and nonperiodic, will be given in the next section.

Time Average Operator

Some useful waveform characteristics are the direct “current” (DC) value, average power, and root-mean-square (RMS) value. Before these concepts are reviewed, the time average operator needs to be defined.

DEFINITION. The *time average operator*[†] is given by

$$\langle [\cdot] \rangle = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} [\cdot] dt \quad (2-1)$$

[†] In Appendix B, the ensemble average operator is defined.

It is seen that this operator is a *linear* operator, since, from Eq. (2–1), the average of the sum of two quantities is the same as the sum of their averages:[†]

$$\langle a_1 w_1(t) + a_2 w_2(t) \rangle = a_1 \langle w_1(t) \rangle + a_2 \langle w_2(t) \rangle \quad (2-2)$$

Equation (2–1) can be reduced to a simpler form given by Eq. (2–4) if the operator is operating on a *periodic* waveform.

DEFINITION. A waveform $w(t)$ is *periodic* with period T_0 if

$$w(t) = w(t + T_0) \quad \text{for all } t \quad (2-3)$$

where T_0 is the smallest positive number that satisfies this relationship.[‡]

For example, a sinusoidal waveform of frequency $f_0 = 1/T_0$ hertz is periodic, since it satisfies Eq. (2–3). From this definition, it is clear that a periodic waveform will have significant values over an infinite time interval $(-\infty, \infty)$. Consequently, physical waveforms cannot be truly periodic, but they can have periodic values over a finite time interval. That is, Eq. (2–3) can be satisfied for t over some finite interval, but not for all values of t .

THEOREM. If the waveform involved is periodic, the time average operator can be reduced to

$$\langle [\cdot] \rangle = \frac{1}{T_0} \int_{-T_0/2+a}^{T_0/2+a} [\cdot] dt \quad (2-4)$$

where T_0 is the period of the waveform and a is an arbitrary real constant, which may be taken to be zero.

Equation (2–4) readily follows from Eq. (2–1) because, referring to Eq. (2–1), integrals over successive time intervals T_0 seconds wide have identical areas, since the waveshape is periodic with period T_0 . As these integrals are summed, the total area and T are proportionally larger, resulting in a value for the time average that is the same as just integrating over one period and dividing by the width of that interval, T_0 .

In summary, Eq. (2–1) may be used to evaluate the time average of any type of waveform, whether or not it is periodic. Equation (2–4) is valid only for periodic waveforms.

DC Value

DEFINITION. The *DC* (direct “current”) value of a waveform $w(t)$ is given by its time average, $\langle w(t) \rangle$.

Thus,

$$W_{dc} = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} w(t) dt \quad (2-5)$$

[†] See Eq. (2–130) for the definition of linearity.

[‡] Nonperiodic waveforms are called *aperiodic* waveforms by some authors.

For any physical waveform, we are actually interested in evaluating the DC value only over a finite interval of interest, say, from t_1 to t_2 , so that the DC value is

$$\frac{1}{t_2 - t_1} \int_{t_1}^{t_2} w(t) dt$$

However, if we use a mathematical model with a steady-state waveform of infinite extent, we will obtain the correct result by using our definition, Eq. (2–5), which involves the limit as $T \rightarrow \infty$. Moreover, as will be shown in Chapter 6, for the case of ergodic stochastic waveforms, the time average operator $\langle [\cdot] \rangle$ may be replaced by the ensemble average operator $\overline{[\cdot]}$.

Power

In communication systems, if the received (average) signal power is sufficiently large compared to the (average) noise power, information may be recovered. This concept was demonstrated by the Shannon channel capacity formula, Eq. (1–10). Consequently, average power is an important concept that needs to be clearly understood. From physics, it is known that power is defined as work per unit time, voltage is work per unit charge, and current is charge per unit time. This is the basis for the definition of power in terms of electrical quantities.

DEFINITION. Let $v(t)$ denote the voltage across a set of circuit terminals, and let $i(t)$ denote the current into the terminal, as shown in Fig. 2–2. The *instantaneous power* (incremental work divided by incremental time) associated with the circuit is given by

$$p(t) = v(t)i(t) \quad (2-6)$$

where the instantaneous power flows into the circuit when $p(t)$ is positive and flows out of the circuit when $p(t)$ is negative.

Example 2–1 INSTANTANEOUS POWER

Plot the instantaneous power as a function of time for a circuit that has a sinusoidal current with a peak value of 5 A and a sinusoidal voltage with a peak value of 10 V. For the solution, see and run the MATLAB file Example2_01.m.

DEFINITION. The *average power* is

$$P = \langle p(t) \rangle = \langle v(t)i(t) \rangle \quad (2-7)$$

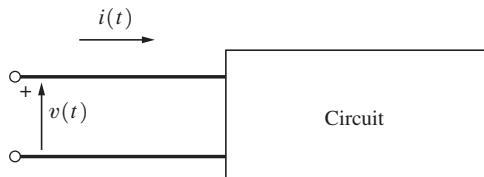


Figure 2–2 Polarity convention used for voltage and current.

Example 2-2 EVALUATION OF POWER

Let the circuit of Fig. 2-2 contain a 120-V, 60-Hz fluorescent lamp wired in a high-power-factor configuration. Assume that the voltage and current are both sinusoids and in phase (unity power factor), as shown in Fig. 2-3.[†] The DC value of this (periodic) voltage waveform is

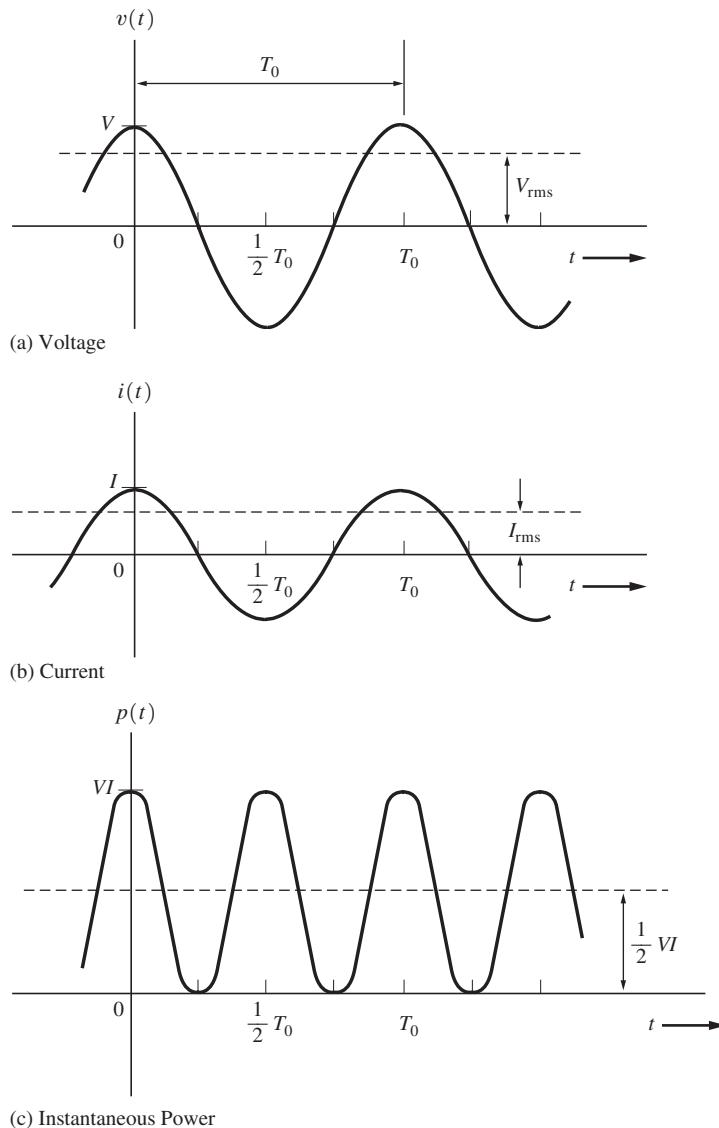


Figure 2-3 Steady-state waveshapes for Example 2-2.

[†] Two-lamp fluorescent circuits can be realized with a high-power-factor ballast that gives an overall power factor greater than 90% [Fink and Beaty, 1978].

$$\begin{aligned} V_{dc} &= \langle v(t) \rangle = \langle V \cos \omega_0 t \rangle \\ &= \frac{1}{T_0} \int_{T_0/2}^{T_0/2} V \cos \omega_0 t dt = 0 \end{aligned} \quad (2-8)$$

where $\omega_0 = 2\pi/T_0$ and $f_0 = 1/T_0 = 60 \text{ Hz}$. Similarly, $I_{dc} = 0$. The instantaneous power is

$$p(t) = (V \cos \omega_0 t)(I \cos \omega_0 t) = \frac{1}{2} VI(1 + \cos 2\omega_0 t) \quad (2-9)$$

The average power is

$$\begin{aligned} P &= \left\langle \frac{1}{2} VI(1 + \cos 2\omega_0 t) \right\rangle \\ &= \frac{VI}{2T_0} \int_{T_0/2}^{T_0/2} (1 + \cos 2\omega_0 t) dt \\ &= \frac{VI}{2} \end{aligned} \quad (2-10)$$

As can be seen from Eq. (2-9) and Fig. 2-3c, the power (i.e., light emitted) occurs in pulses at a rate of $2f_0 = 120$ pulses per second. (In fact, this lamp can be used as a stroboscope to “freeze” mechanically rotating objects.) The peak power is VI , and the average power is $\frac{1}{2}VI$, where V is the peak voltage and I is the peak current. Furthermore, for this case of sinusoidal voltage and sinusoidal current, we see that the average power could be obtained by multiplying $V/\sqrt{2}$ with $I/\sqrt{2}$. See Example 2-02.m.

RMS Value and Normalized Power

DEFINITION. The *root-mean-square (RMS)* value of $w(t)$ is

$$W_{rms} = \sqrt{\langle w^2(t) \rangle} \quad (2-11)$$

THEOREM. If a load is resistive (i.e., with unity power factor), the average power is

$$\begin{aligned} P &= \frac{\langle v^2(t) \rangle}{R} = \langle i^2(t) \rangle R = \frac{V_{rms}^2}{R} \\ &= I_{rms}^2 R = V_{rms} I_{rms} \end{aligned} \quad (2-12)$$

where R is the value of the resistive load.

Equation (2-12) follows from Eq. (2-7) by the use of Ohm’s law, which is $v(t) = i(t)R$, and Eq. (2-11).

Continuing Example 2-2, $V_{rms} = 120 \text{ V}$. It is seen from Eq. (2-11), when sinusoidal waveshapes are used, that $V_{rms} = V/\sqrt{2}$ and $I_{rms} = I/\sqrt{2}$. Thus, using Eq. (2-12), we see that the average power is $\frac{1}{2}VI$, which is the same value that was obtained in the previous discussion. The concept of *normalized* power is often used by communications engineers. In this concept, R is assumed to be 1Ω , although it may be another value in the actual circuit. Another way of

expressing this concept is to say that the power is given on a per-ohm basis. In the signal-to-noise power ratio calculations, R will automatically cancel out, so that normalized values of power may be used to obtain the correct ratio. If the actual value for the power is needed, say, at the end of a long set of calculations, it can always be obtained by “denormalization” of the normalized value. From Eq. (2–12), it is also realized that *the square root of the normalized power is the RMS value of the voltage or the current.*

DEFINITION. The *average normalized power* is

$$P = \langle w^2(t) \rangle = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} w^2(t) dt \quad (2-13)$$

where $w(t)$ represents a real voltage or current waveform.

Energy and Power Waveforms[†]

DEFINITION. $w(t)$ is a *power waveform* if and only if the normalized average power P is finite and nonzero (i.e., $0 < P < \infty$).

DEFINITION. The *total normalized energy* is

$$E = \lim_{T \rightarrow \infty} \int_{-T/2}^{T/2} w^2(t) dt \quad (2-14)$$

DEFINITION. $w(t)$ is an *energy waveform* if and only if the total normalized energy is finite and nonzero (i.e., $0 < E < \infty$).

From these definitions, it is seen that if a waveform is classified as either one of these types, it cannot be of the other type. That is, if $w(t)$ has finite energy, the power averaged over infinite time is zero, and if the power (averaged over infinite time) is finite, the energy is infinite. Moreover, mathematical functions can be found that have both infinite energy and infinite power and, consequently, cannot be classified into either of these two categories. One example is $w(t) = e^{-t}$. Physically realizable waveforms are of the energy type, but we will often model them by infinite-duration waveforms of the power type. Laboratory instruments that measure average quantities—such as the DC value, RMS value, and average power—average over a finite time interval. That is, T of Eq. (2–1) remains finite instead of approaching some large number. Thus, nonzero average quantities for finite energy (physical) signals can be obtained. For example, when the DC value is measured with a conventional volt-ohm-milliammeter containing a meter movement, the time-averaging interval is established by the mass of the meter movement that provides damping. Hence, the average quantities calculated from a power-type mathematical model (averaged over infinite time) will give the results that are measured in the laboratory (averaged over finite time).

Decibel

The *decibel* is a base 10 logarithmic measure of power ratios. For example, the ratio of the power level at the output of a circuit compared with that at the input is often specified by the decibel gain instead of the actual ratio.

[†] This concept is also called *energy signals* and *power signals* by some authors, but it applies to noise as well as signal waveforms.

DEFINITION. The *decibel gain* of a circuit is[†]

$$\text{dB} = 10 \log \left(\frac{\text{average power out}}{\text{average power in}} \right) = 10 \log \left(\frac{P_{\text{out}}}{P_{\text{in}}} \right) \quad (2-15)$$

This definition gives a number that indicates the *relative* value of the *power out* with respect to the *power in* and does not indicate the actual magnitude of the power levels involved. If resistive loads are involved, Eq. (2-12) may be used to reduce Eq. (2-15) to

$$\text{dB} = 20 \log \left(\frac{V_{\text{rms out}}}{V_{\text{rms in}}} \right) + 10 \log \left(\frac{R_{\text{in}}}{R_{\text{load}}} \right) \quad (2-16)$$

or

$$\text{dB} = 20 \log \left(\frac{I_{\text{rms out}}}{I_{\text{rms in}}} \right) + 10 \log \left(\frac{R_{\text{load}}}{R_{\text{in}}} \right) \quad (2-17)$$

Note that the same value for decibels is obtained regardless of whether power, voltage, or current [Eq. (2-15), Eq. (2-16), or Eq. (2-17)] was used to obtain that value. That is, decibels are defined in terms of the logarithm of a power ratio, but may be evaluated from voltage or current ratios.

If normalized powers are used,

$$\text{dB} = 20 \log \left(\frac{V_{\text{rms out}}}{V_{\text{rms in}}} \right) = 20 \log \left(\frac{I_{\text{rms out}}}{I_{\text{rms in}}} \right) \quad (2-18)$$

This equation does not give the true value for decibels, unless $R_{\text{in}} = R_{\text{load}}$; however, it is common engineering practice to use Eq. (2-18) even if $R_{\text{in}} \neq R_{\text{load}}$ and even if the number that is obtained is not strictly correct. Engineers understand that if the correct value is needed, it may be calculated from this pseudo-value if R_{in} and R_{load} are known.

If the dB value is known, the power ratio or the voltage ratio can be easily obtained by inversion of the appropriate equations just given. For example, if the power ratio is desired, Eq. (2-15) can be inverted to obtain

$$\frac{P_{\text{out}}}{P_{\text{in}}} = 10^{\text{dB}/10} \quad (2-19)$$

The decibel measure can also be used to express a measure of the ratio of signal power to noise power, as measured at some point in a circuit.

DEFINITION. The *decibel signal-to-noise ratio* is[‡]

$$(S/N)_{\text{dB}} = 10 \log \left(\frac{P_{\text{signal}}}{P_{\text{noise}}} \right) = 10 \log \left(\frac{\langle s^2(t) \rangle}{\langle n^2(t) \rangle} \right) \quad (2-20)$$

[†] Logarithms to the base 10 will be denoted by $\log(\cdot)$, and logarithms to the base e will be denoted by $\ln(\cdot)$. Note that both dB and the ratio $P_{\text{out}}/P_{\text{in}}$ are dimensionless quantities.

[‡] This definition involves the ratio of the *average signal* power to the *average noise* power. An alternative definition that is also useful for some applications involves the ratio of the *peak* signal power to the average noise power. See Sec. 6-8.

Because the signal power is $\langle s^2(t) \rangle / R = V_{\text{rms signal}}^2 / R$ and the noise power is $\langle n^2(t) \rangle / R = V_{\text{rms noise}}^2 / R$, this definition is equivalent to

$$(S/N)_{\text{dB}} = 20 \log \left(\frac{V_{\text{rms signal}}}{V_{\text{rms noise}}} \right) \quad (2-21)$$

The decibel measure may also be used to indicate absolute levels of power with respect to some reference level.

DEFINITION. The *decibel power level* with respect to 1 mW is

$$\begin{aligned} \text{dBm} &= 10 \log \left(\frac{\text{actual power level (watts)}}{10^{-3}} \right) \\ &= 30 + 10 \log [\text{actual power level (watts)}] \end{aligned} \quad (2-22)$$

where the “m” in the dBm denotes a milliwatt reference. Laboratory RF signal generators are usually calibrated in terms of dBm.

Other decibel measures of absolute power levels are also used. When a 1-W reference level is used, the decibel level is denoted dBW; when a 1-kW reference level is used, the decibel level is denoted dBk. For example, a power of 5 W could be specified as +36.99 dBm, 6.99 dBW, or -23.0 dBk. The telephone industry uses a decibel measure with a “reference noise” level of 1 picowatt (10^{-12} W) [Jordan, 1985]. This decibel measure is denoted dBn. A level of 0 dBn corresponds to -90 dBm. The cable television (CATV) industry uses a 1-millivolt RMS level across a $75\text{-}\Omega$ load as a reference. This decibel measure is denoted dBmV, and it is defined as

$$\text{dBmV} = 20 \log \left(\frac{V_{\text{rms}}}{10^{-3}} \right) \quad (2-23)$$

where 0 dBmV corresponds to -48.75 dBm.

It should be emphasized that the general expression for evaluating power is given by Eq. (2-7). That is, Eq. (2-7) can be used to evaluate the average power for any type of waveshape and load condition, whereas Eq. (2-12) is useful only for resistive loads. In other books, especially in the power area, equations are given that are valid only for sinusoidal waveshapes.

Phasors

Sinusoidal test signals occur so often in electrical engineering problems that a shorthand notation called *phasor notation* is often used.

DEFINITION. A complex number c is said to be a *phasor* if it is used to represent a *sinusoidal* waveform. That is,

$$w(t) = |c| \cos[\omega_0 t + \angle c] = \text{Re}\{ce^{j\omega_0 t}\} \quad (2-24)$$

where the phasor $c = |c|e^{j\angle c}$ and $\text{Re}\{\cdot\}$ denotes the real part of the complex quantity $\{\cdot\}$.

We will refer to $ce^{j\omega_0 t}$ as the *rotating phasor*, as distinguished from the phasor c . When c is given to represent a waveform, it is *understood* that the actual waveform that appears in the circuit is a sinusoid as specified by Eq. (2–24). Because the phasor is a complex number, it can be written in either Cartesian form or polar form; that is,

$$c \triangleq x + jy = |c|e^{j\varphi} \quad (2-25)$$

where x and y are real numbers along the Cartesian coordinates and $|c|$ and $\angle c = \varphi = \tan^{-1}(y/x)$ are the length and angle (real numbers) in the polar coordinate system. Shorthand notation for the polar form on the right-hand side of Eq. (2–25) is $|c| \angle \varphi$.

For example, $25 \sin(2\pi 500t + 45^\circ)$ could be denoted by the phasor $25 \angle -45^\circ$, since, from Appendix A, $\sin x = \cos(x - 90^\circ)$ and, consequently, $25 \sin(\omega_0 t + 45^\circ) = 25 \cos(\omega_0 t - 45^\circ) = \text{Re}\{(25e^{-j\pi/4})e^{j\omega_0 t}\}$, where $\omega_0 = 2\pi f_0$ and $f_0 = 500$ Hz. Similarly, $10 \cos(\omega_0 t + 35^\circ)$ could be denoted by $10 \angle 35^\circ$.

Some other authors may use a slightly different definition for the phasor. For example, $w(t)$ may be expressed in terms of the imaginary part of a complex quantity instead of the real part as defined in Eq. (2–24). In addition, the phasor may denote the RMS value of $w(t)$, instead of the peak value [Kaufman and Seidman, 1979]. In this case, $10 \sin(\omega_0 t + 45^\circ)$ should be denoted by the phasor $7.07 \angle 45^\circ$. Throughout this book, the definition as given by Eq. (2–24) will be used. Phasors can represent only *sinusoidal* waveshapes.

2–2 FOURIER TRANSFORM AND SPECTRA

Definition

How does one find the frequencies that are present in a waveform? Moreover, what is the definition of frequency? For waveforms of the sinusoidal type, we know that we can find the frequency by evaluating $f_0 = 1/T_0$, where T_0 is the period of the sinusoid. That is, frequency is the rate of occurrence of the sinusoidal waveshape. All other nonsinusoidal waveshapes have more than one frequency.[†]

In most practical applications, the waveform is not periodic, so there is no T_0 to use to calculate the frequency. Consequently, we still need to answer this question: Is there a general method for finding the frequencies of a waveform that will work for any type of waveshape? The answer is yes. It is the Fourier transform (FT). It finds the sinusoidal-type components in $w(t)$.

DEFINITION. The *Fourier transform* (FT) of a waveform $w(t)$ is

$$W(f) = \mathcal{F}[w(t)] = \int_{-\infty}^{\infty} [w(t)]e^{-j2\pi ft} dt$$

(2–26)

[†] The constant-voltage or constant-current DC waveform has one frequency, $f = 0$. It is a special case of a cosine wave (i.e. sinusoidal-type waveform) where $T_0 \rightarrow \infty$ and $f_0 \rightarrow 0$. A periodic square wave has an infinite number of odd-harmonic frequencies, as shown by Example 2–13.

where $\mathcal{F}[\cdot]$ denotes the Fourier transform of $[\cdot]$ and f is the frequency parameter with units of hertz (i.e., $1/\text{s}$).[†] This *defines* the term *frequency*. It is the parameter f in the Fourier transform.

$W(f)$ is also called a *two-sided spectrum* of $w(t)$, because both positive and negative frequency components are obtained from Eq. (2–26). It should be clear that the spectrum of a voltage (or current) waveform is obtained by a mathematical calculation and that it does not appear physically in an actual circuit. f is just a parameter (called *frequency*) that determines which point of the spectral function is to be evaluated.

The FT is used to find the frequencies in $w(t)$. One chooses some value of f , say, $f = f_0$, and evaluates $|W(f_0)|$. If $|W(f_0)|$ is not zero, then the frequency f_0 is present in $w(t)$. In general, the FT integral is evaluated again and again for all possible values of f over the range $-\infty < f < \infty$ to find all of the frequencies in $w(t)$.

It is easy to demonstrate why the FT finds the frequencies in $w(t)$. For example, suppose that $w(t) = 1$. For this DC waveform, the integrand of Eq. (2–26) is $e^{-j2\pi ft} = \cos 2\pi ft - j \sin 2\pi ft$, and consequently, the FT integral is zero (provided that $f \neq 0$), because the area under a sinusoidal wave over multiple periods is zero. However, if one chooses $f = 0$, then the FT integral is not zero. Thus, as expected, Eq. (2–26) identifies $f = 0$ as the frequency of $w(t) = 1$. In another example, let $w(t) = 2 \sin 2\pi f_0 t$. For this case, the integrand of Eq. (2–26) is $\sin 2\pi(f_0 - f)t + \sin 2\pi(f_0 + f)t - j \cos 2\pi(f_0 - f)t + j \cos 2\pi(f_0 + f)t$ and the integral is nonzero when $f = f_0$ or when $f = -f_0$.[‡] In this way, the FT finds the frequencies in $w(t)$.

Direct evaluation of the FT integral can be difficult, so a list of alternative evaluation techniques is very helpful. The FT integral, Eq. (2–26), can be evaluated by the use of

1. Direct integration.[§] See Example 2–3.
2. Tables of Fourier transforms or Laplace transforms. See Table 2–2 and Example 2–10.
3. FT theorems. See Table 2–1 and Example 2–4.
4. Superposition to break the problem into two or more simple problems. See study-aid example SA–5.
5. Differentiation or integration of $w(t)$. See Example 2–7.
6. Numerical integration of the FT integral on the PC via MATLAB integration functions. See Example 2–6 and file Example2_06.m.
7. Fast Fourier transform (FFT) on the PC via MATLAB FFT functions. See Fig. 2–21, file Example2_20.m, and Fig. 2–22, file Example2_21.m.

[†] Some authors define the FT in terms of the frequency parameter $\omega = 2\pi f$ where ω is in radians per second. That definition is identical to (2–26) when ω is replaced by $2\pi f$. I prefer Eq. (2–26) because spectrum analyzers are usually calibrated in units of hertz, not radians per second.

[‡] The frequency of the sine wave is f_0 , but the FT finds both f_0 and its mirror image $-f_0$, as explained in the discussion following Example 2–5.

[§] Contour integration, covered in a mathematics course in complex variables, is also a helpful integration technique.

These evaluation techniques are developed throughout the remainder of this chapter.

From Eq. (2–26), since $e^{-j2\pi ft}$ is complex, $W(f)$ is a complex function of frequency. $W(f)$ may be decomposed into two real functions $X(f)$ and $Y(f)$ such that

$$W(f) = X(f) + jY(f) \quad (2-27)$$

which is identical to writing a complex number in terms of pairs of real numbers that can be plotted in a two-dimensional Cartesian coordinate system. For this reason, Eq. (2–27) is sometimes called the *quadrature form*, or *Cartesian form*. Similarly, Eq. (2–26) can be written equivalently in terms of a polar coordinate system, where the pair of real functions denotes the magnitude and phase:

$$W(f) = |W(f)|e^{j\theta(f)} \quad (2-28)$$

That is,

$$|W(f)| = \sqrt{X^2(f) + Y^2(f)} \quad \text{and} \quad \theta(f) = \tan^{-1}\left(\frac{Y(f)}{X(f)}\right) \quad (2-29)$$

This is called the *magnitude–phase form*, or *polar form*. To determine whether certain frequency components are present, one would examine the magnitude spectrum $|W(f)|$, which engineers sometimes loosely call the *spectrum*.

The time waveform may be calculated from the spectrum by using the *inverse Fourier transform*

$$w(t) = \int_{-\infty}^{\infty} W(f)e^{j2\pi ft} df \quad (2-30)$$

The functions $w(t)$ and $W(f)$ are said to constitute a *Fourier transform pair*, where $w(t)$ is the time domain description and $W(f)$ is the frequency domain description. In this book, the time domain function is usually denoted by a lowercase letter and the frequency domain function by an uppercase letter. Shorthand notation for the pairing between the two domains will be denoted by a double arrow: $w(t) \leftrightarrow W(f)$.

The waveform $w(t)$ is Fourier transformable (i.e., sufficient conditions) if it satisfies both *Dirichlet conditions*:

- Over any time interval of finite width, the function $w(t)$ is single valued with a finite number of maxima and minima, and the number of discontinuities (if any) is finite.
- $w(t)$ is absolutely integrable. That is,

$$\int_{-\infty}^{\infty} |w(t)| dt < \infty \quad (2-31)$$

Although these conditions are sufficient, they are not necessary. In fact, some of the examples given subsequently do not satisfy the Dirichlet conditions, and yet the Fourier transform can be found.

A weaker sufficient condition for the existence of the Fourier transform is

$$E = \int_{-\infty}^{\infty} |w(t)|^2 dt < \infty \quad (2-32)$$

where E is the normalized energy [Goldberg, 1961]. This is the finite-energy condition that is satisfied by all physically realizable waveforms. Thus, all physical waveforms encountered in engineering practice are Fourier transformable.

It should also be noted that mathematicians sometimes use other definitions for the Fourier transform rather than Eq. (2–26). However, in these cases, the equation for the corresponding inverse transforms, equivalent to Eq. (2–30), would also be different, so that when the transform and its inverse are used together, the original $w(t)$ would be recovered. This is a consequence of the Fourier integral theorem, which is

$$w(t) = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} w(\lambda) e^{j2\pi f(t-\lambda)} d\lambda df \quad (2-33)$$

Equation (2–33) may be decomposed into Eqs. (2–26) and (2–30), as well as other definitions for Fourier transform pairs. The Fourier integral theorem is strictly true only for well-behaved functions (i.e., physical waveforms). For example, if $w(t)$ is an ideal square wave, then at a discontinuous point of $w(\lambda_0)$, denoted by λ_0 , $w(t)$ will have a value that is the average of the two values that are obtained for $w(\lambda)$ on each side of the discontinuous point λ_0 .

Example 2–3 SPECTRUM OF AN EXPONENTIAL PULSE

Let $w(t)$ be a decaying exponential pulse that is switched on at $t = 0$. That is,

$$w(t) = \begin{cases} e^{-t}, & t > 0 \\ 0, & t < 0 \end{cases}$$

Directly integrating the FT integral, we get

$$W(f) = \int_0^{\infty} e^{-t} e^{-j2\pi f t} dt = \left| \frac{-e^{-(1+j2\pi f)t}}{1 + j2\pi f} \right|_0^{\infty}$$

or

$$W(f) = \frac{1}{1 + j2\pi f}$$

In other words, the FT pair is

$$\left\{ \begin{array}{ll} e^{-t}, & t > 0 \\ 0, & t < 0 \end{array} \right\} \leftrightarrow \frac{1}{1 + j2\pi f} \quad (2-34)$$

The spectrum can also be expressed in terms of the quadrature functions by rationalizing the denominator of Eq. (2–34); thus,

$$X(f) = \frac{1}{1 + (2\pi f)^2} \quad \text{and} \quad Y(f) = \frac{-2\pi f}{1 + (2\pi f)^2}$$

See Example1_03A.m for plots.

The magnitude–phase form is

$$|W(f)| = \sqrt{\frac{1}{1 + (2\pi f)^2}} \quad \text{and} \quad \theta(f) = -\tan^{-1}(2\pi f)$$

See Example2_03B.m for plots.

More examples will be given after some helpful theorems are developed.

Properties of Fourier Transforms

Many useful and interesting theorems follow from the definition of the spectrum as given by Eq. (2–26). One of particular interest is a consequence of working with real waveforms. In any physical circuit that can be built, the voltage (or current) waveforms are real functions (as opposed to complex functions) of time.

THEOREM. *Spectral symmetry of real signals. If $w(t)$ is real, then*

$$W(-f) = W^*(f) \quad (2-35)$$

(The superscript asterisk denotes the conjugate operation.)

PROOF. From Eq. (2–26), we get

$$W(-f) = \int_{-\infty}^{\infty} w(t)e^{j2\pi ft} dt \quad (2-36)$$

and taking the conjugate of Eq. (2–26) yields

$$W^*(f) = \int_{-\infty}^{\infty} w^*(t)e^{j2\pi ft} dt \quad (2-37)$$

But since $w(t)$ is real, $w^*(t) = w(t)$, and Eq. (2–35) follows because the right sides of Eqs. (2–36) and (2–37) are equal. It can also be shown that if $w(t)$ is real and happens to be an even function of t , $W(f)$ is *real*. Similarly, if $w(t)$ is real and is an odd function of t , $W(f)$ is *imaginary*.

Another useful corollary of Eq. (2–35) is that, for $w(t)$ real, the magnitude spectrum is even about the origin (i.e., $f = 0$), or

$$|W(-f)| = |W(f)| \quad (2-38)$$

and the phase spectrum is odd about the origin:

$$\theta(-f) = -\theta(f) \quad (2-39)$$

This can easily be demonstrated by writing the spectrum in polar form:

$$W(f) = |W(f)|e^{j\theta(f)}$$

Then

$$W(-f) = |W(-f)|e^{j\theta(-f)}$$

and

$$W^*(f) = |W(f)|e^{-j\theta(f)}$$

Using Eq. (2–35), we see that Eqs. (2–38) and (2–39) are true.

In summary, from the previous discussion, the following are some properties of the Fourier transform:

- f , called frequency and having units of hertz, is just a parameter of the FT that specifies what frequency we are interested in looking for in the waveform $w(t)$.
- The FT looks for the frequency f in the $w(t)$ over all time, that is, over

$$-\infty < t < \infty$$

- $W(f)$ can be complex, even though $w(t)$ is real.
- If $w(t)$ is real, then $W(-f) = W^*(f)$.

Parseval's Theorem and Energy Spectral Density

Parseval's Theorem.

$$\int_{-\infty}^{\infty} w_1(t)w_2^*(t)dt = \int_{-\infty}^{\infty} W_1(f)W_2^*(f)df \quad (2-40)$$

If $w_1(t) = w_2(t) = w(t)$, then the theorem reduces to

Rayleigh's energy theorem,

$$E = \int_{-\infty}^{\infty} |w(t)|^2 dt = \int_{-\infty}^{\infty} |W(f)|^2 df \quad (2-41)$$

PROOF. Working with the left side of Eq. (2–40) and using Eq. (2–30) to replace $w_1(t)$ yields.

$$\begin{aligned} \int_{-\infty}^{\infty} w_1(t)w_2^*(t)dt &= \int_{-\infty}^{\infty} \left[\int_{-\infty}^{\infty} W_1(f)e^{j2\pi ft} df \right] w_2^*(t) dt \\ &= \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} W_1(f)w_2^*(t)e^{j2\pi ft} df dt \end{aligned}$$

Interchanging the order of integration on f and t^\dagger gives

$$\int_{-\infty}^{\infty} w_1(t)w_2^*(t) dt = \int_{-\infty}^{\infty} W_1(f) \left[\int_{-\infty}^{\infty} w_2(t)e^{-j2\pi ft} dt \right]^* df$$

Using Eq. (2–26) produces Eq. (2–40). Parseval's theorem gives an alternative method for evaluating the energy by using the frequency domain description instead of the time domain definition. This leads to the concept of the energy spectral density function.

DEFINITION. The *energy spectral density (ESD)* is defined for energy waveforms by

$$\mathcal{E}(f) = |W(f)|^2 \quad (2-42)$$

where $w(t) \leftrightarrow W(f)$. $\mathcal{E}(f)$ has units of joules per hertz.

Using Eq. (2–41), we see that the total normalized energy is given by the area under the ESD function:

$$E = \int_{-\infty}^{\infty} \mathcal{E}(f) df \quad (2-43)$$

For power waveforms, a similar function called the *power spectral density (PSD)* can be defined. This is developed in Sec. 2–3 and in Chapter 6.

There are many other Fourier transform theorems in addition to Parseval's theorem. Some are summarized in Table 2–1. These theorems can be proved by substituting the corresponding time function into the definition of the Fourier transform and reducing the result to that given in the rightmost column of the table. For example, the scale-change theorem is proved by substituting $w(at)$ into Eq. (2–26). We get

$$\mathcal{F}[w(at)] = \int_{-\infty}^{\infty} w(at)e^{-j2\pi ft} dt$$

Letting $t_1 = at$, and assuming that $a > 0$, we obtain

$$\mathcal{F}[w(at)] = \int_{-\infty}^{\infty} \frac{1}{a} w(t_1)e^{-j2\pi(f/a)t_1} dt_1 = \frac{1}{a} W\left(\frac{f}{a}\right)$$

For $a < 0$, this equation becomes

$$\mathcal{F}[w(at)] = \int_{-\infty}^{\infty} \frac{-1}{a} w(t_1)e^{-j2\pi(f/a)t_1} dt_1 = \frac{1}{|a|} W\left(\frac{f}{a}\right)$$

[†] Fubini's theorem states that the order of integration may be exchanged if all of the integrals are absolutely convergent. That is, these integrals are finite valued when the integrands are replaced by their absolute values. We assume that this condition is satisfied.

Thus, for either $a > 0$ or $a < 0$, we get

$$w(at) \leftrightarrow \frac{1}{|a|} W\left(\frac{f}{a}\right)$$

The other theorems in Table 2–1 are proved in a similar straightforward manner, except for the integral theorem, which is more difficult to derive because the transform result involves a Dirac delta function $\delta(f)$. This theorem may be proved by the use of the convolution theorem, as illustrated by Prob. 2–38. The bandpass signal theorem will be discussed in more detail in Chapter 4. It is the basis for the digital and analog modulation techniques covered in Chapters 4 and 5. In Sec. 2–8, the relationship between the Fourier transform and the discrete Fourier transform (DFT) will be studied.

As we will see in the examples that follow, these theorems can greatly simplify the calculations required to solve Fourier transform problems. The reader should study Table 2–1 and be prepared to use it when needed. After the Fourier transform is evaluated, one should check that the easy-to-verify properties of Fourier transforms are satisfied; otherwise, there is a mistake. For example, if $w(t)$ is real,

- $W(-f) = W^*(f)$, or $|W(f)|$ is even and $\theta(f)$ is odd.
- $W(f)$ is real when $w(t)$ is even.
- $W(f)$ is imaginary when $w(t)$ is odd.

Example 2–4 SPECTRUM OF A DAMPED SINUSOID

Let the damped sinusoid be given by

$$w(t) = \begin{cases} e^{-t/T} \sin \omega_0 t, & t > 0, T > 0 \\ 0, & t < 0 \end{cases}$$

The spectrum of this waveform is obtained by evaluating the FT. This is easily accomplished by using the result of the previous example plus some of the Fourier theorems. From Eq. (2–34), and using the scale-change theorem of Table 2–1, where $a = 1/T$, we find that

$$\begin{cases} e^{-t/T}, & t > 0 \\ 0, & t < 0 \end{cases} \leftrightarrow \frac{T}{1 + j(2\pi f T)}$$

Using the real signal frequency translation theorem with $\theta = -\pi/2$, we get

$$\begin{aligned} W(f) &= \frac{1}{2} \left\{ e^{-j\pi/2} \frac{T}{1 + j2\pi T(f - f_0)} + e^{j\pi/2} \frac{T}{1 + j2\pi T(f + f_0)} \right\} \\ &= \frac{T}{2j} \left\{ \frac{1}{1 + j2\pi T(f - f_0)} - \frac{1}{1 + j2\pi T(f + f_0)} \right\} \end{aligned} \quad (2-44)$$

where $e^{\pm j\pi/2} = \cos(\pi/2) \pm j \sin(\pi/2) = \pm j$. This spectrum is complex (i.e., neither real nor imaginary), because $w(t)$ does not have even or odd symmetry about $t = 0$.

See Example2_04.m for a plot of (2–44). As expected, this shows that the peak of the magnitude spectrum for the damped sinusoid occurs at $f = \pm f_0$. Compare this with the peak of the magnitude spectrum for the exponential decay (Example 2–3) that occurs at $f = 0$. That is, the $\sin \omega_0 t$ factor caused the spectral peak to move from $f = 0$ to $f = \pm f_0$.

TABLE 2-1 SOME FOURIER TRANSFORM THEOREMS^a

Operation	Function	Fourier Transform
Linearity	$a_1 w_1(t) + a_2 w_2(t)$	$a_1 W_1(f) + a_2 W_2(f)$
Time delay	$w(t - T_d)$	$W(f) e^{-j\omega T_d}$
Scale change	$w(at)$	$\frac{1}{ a } W\left(\frac{f}{a}\right)$
Conjugation	$w^*(t)$	$W^*(-f)$
Duality	$W(t)$	$w(-f)$
Real signal frequency translation [$w(t)$ is real]	$w(t) \cos(w_c t + \theta)$	$\frac{1}{2} [e^{j\theta} W(f - f_c) + e^{-j\theta} W(f + f_c)]$
Complex signal frequency translation	$w(t) e^{j\omega_c t}$	$W(f - f_c)$
Bandpass signal	$\operatorname{Re}\{g(t) e^{j\omega_c t}\}$	$\frac{1}{2} [G(f - f_c) + G^*(-f - f_c)]$
Differentiation	$\frac{d^n w(t)}{dt^n}$	$(j2\pi f)^n W(f)$
Integration	$\int_{-\infty}^t w(\lambda) d\lambda$	$(j2\pi f)^{-1} W(f) + \frac{1}{2} W(0) \delta(f)$
Convolution	$w_1(t) * w_2(t) = \int_{-\infty}^{\infty} w_1(\lambda) \cdot w_2(t - \lambda) d\lambda$	$W_1(f) W_2(f)$
Multiplication ^b	$w_1(t) w_2(t)$	$W_1(f) * W_2(f) = \int_{-\infty}^{\infty} W_1(\lambda) W_2(f - \lambda) d\lambda$
Multiplication by t^n	$t^n w(t)$	$(-j2\pi)^{-n} \frac{d^n W(f)}{df^n}$

^a $w_c = 2\pi f_c$.^b * Denotes convolution as described in detail by Eq. (2-62).

Dirac Delta Function and Unit Step Function

DEFINITION. The *Dirac delta function* $\delta(x)$ is defined by

$$\int_{-\infty}^{\infty} w(x) \delta(x) dx = w(0) \quad (2-45)$$

where $w(x)$ is any function that is continuous at $x = 0$.

In this definition, the variable x could be time or frequency, depending on the application. An alternative definition for $\delta(x)$ is

$$\int_{-\infty}^{\infty} \delta(x) dx = 1 \quad (2-46a)$$

and

$$\delta(x) = \begin{cases} \infty, & x = 0 \\ 0, & x \neq 0 \end{cases} \quad (2-46b)$$

where both Eqs. (2-46a) and (2-46b) need to be satisfied. The Dirac delta function is not a true function, so it is said to be a singular function. However, $\delta(x)$ can be defined as a function in a more general sense and treated as such in a branch of mathematics called *generalized functions* and the *theory of distributions*.

From Eq. (2-45), the *sifting property* of the δ function is

$$\int_{-\infty}^{\infty} w(x) \delta(x-x_0) dx = w(x_0) \quad (2-47)$$

That is, the δ function sifts out the value $w(x_0)$ from the integral.

In some problems, it is also useful to use the equivalent integral for the δ function, which is

$$\delta(x) = \int_{-\infty}^{\infty} e^{\pm j2\pi xy} dy \quad (2-48)$$

where either the $+$ or the $-$ sign may be used as needed. This assumes that $\delta(x)$ is an even function: $\delta(-x) = \delta(x)$. Equation (2-48) may be verified by taking the Fourier transform of a delta function

$$\int_{-\infty}^{\infty} \delta(t) e^{-2\pi ft} dt = e^0 = 1$$

and then taking the inverse Fourier transform of both sides of this equation; Eq. (2-48) follows. (For additional properties of the delta function, see Appendix A.)

Another function that is closely related to the Dirac delta function is the unit step function.

DEFINITION. The *unit step function* $u(t)$ is

$$u(t) = \begin{cases} 1, & t > 0 \\ 0, & t < 0 \end{cases} \quad (2-49)$$

Because $\delta(\lambda)$ is zero, except at $\lambda = 0$, the Dirac delta function is related to the unit step function by

$$\int_{-\infty}^{t+\epsilon} \delta(\lambda) d\lambda = u(t) \quad (2-50)$$

where $\epsilon > 0$ and $\epsilon \rightarrow 0$. Consequently,

$$\frac{du(t)}{dt} = \delta(t) \quad (2-51)$$

Example 2–5 SPECTRUM OF A SINUSOID

Find the spectrum of a sinusoidal voltage waveform that has a frequency f_0 and a peak value of A volts. That is,

$$v(t) = A \sin \omega_0 t \quad \text{where} \quad \omega_0 = 2\pi f_0$$

From Eq. (2–26), the spectrum is

$$\begin{aligned} V(f) &= \int_{-\infty}^{\infty} A \left(\frac{e^{j\omega_0 t} - e^{-j\omega_0 t}}{2j} \right) e^{-j\omega f} dt \\ &= \frac{A}{2j} \int_{-\infty}^{\infty} e^{-j2\pi(f-f_0)t} dt - \frac{A}{2j} \int_{-\infty}^{\infty} e^{-j2\pi(f+f_0)t} dt \end{aligned}$$

By Eq. (2–48), these integrals are equivalent to Dirac delta functions. That is,


$$V(f) = j \frac{A}{2} [\delta(f + f_0) - \delta(f - f_0)]$$

Note that this spectrum is imaginary, as expected, because $v(t)$ is real and odd. In addition, a meaningful expression was obtained for the Fourier transform, although $v(t)$ was of the infinite energy type and not absolutely integrable. That is, this $v(t)$ does not satisfy the sufficient (but not necessary) Dirichlet conditions as given by Eqs. (2–31) and (2–32).

The magnitude spectrum is

$$|V(f)| = \frac{A}{2} \delta(f - f_0) + \frac{A}{2} \delta(f + f_0)$$

where A is a positive number. Since only two frequencies ($f = \pm f_0$) are present, $\theta(f)$ is strictly defined only at these two frequencies. That is, $\theta(f_0) = \tan^{-1}(-1/0) = -90^\circ$ and $\theta(-f_0) = \tan^{-1}(1/0) = +90^\circ$. However, because $|V(f)| = 0$ for all frequencies except $f = \pm f_0$ and $V(f) = |V(f)| e^{j\theta(f)}$, $\theta(f)$ can be taken to be any convenient set of values for $f \neq \pm f_0$. Thus, the phase spectrum is taken to be

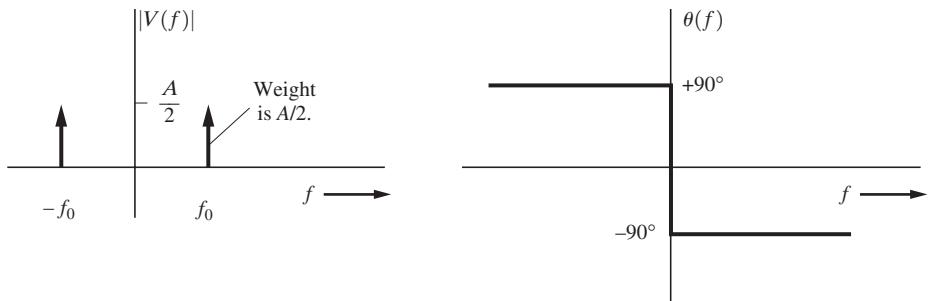

(a) Magnitude Spectrum

(b) Phase Spectrum ($\theta_0 = 0$)

Figure 2–4 Spectrum of a sine wave.

$$\theta(f) = \begin{cases} -\pi/2, & f > 0 \\ +\pi/2, & f < 0 \end{cases} \text{ radians} = \begin{cases} -90^\circ, & f > 0 \\ 90^\circ, & f < 0 \end{cases}$$

Plots of these spectra are shown in Fig. 2–4. As shown in Fig. 2–4a, the *weights* of the delta functions are plotted, since it is impossible to plot the delta functions themselves because they have infinite values. It is seen that the magnitude spectrum is even and the phase spectrum is odd, as expected from Eqs. (2–38) and (2–39).

Now let us generalize the sinusoidal waveform to one with an arbitrary phase angle θ_0 . Then

$$w(t) = A \sin(\omega_0 t + \theta_0) = A \sin[\omega_0(t + \theta_0/\omega_0)]$$

and, by using the time delay theorem, the spectrum becomes

$$W(f) = j \frac{A}{2} e^{j\theta_0(f/f_0)} [\delta(f + f_0) - \delta(f - f_0)]$$

The resulting magnitude spectrum is the same as that obtained before for the $\theta_0 = 0$ case. The new phase spectrum is the sum of the old phase spectrum plus the linear function $(\theta_0/f_0)f$. However, since the overall spectrum is zero except at $f = \pm f_0$, the value for the phase spectrum can be arbitrarily assigned at all frequencies except $f = \pm f_0$. At $f = f_0$ the phase is $(\theta_0 - \pi/2)$ radians, and at $f = -f_0$ the phase is $-(\theta_0 - \pi/2)$ radians. See Example2_5.m for MATLAB plots.

From a *mathematical* viewpoint, Fig. 2–4 demonstrates that two frequencies are present in the sine wave, one at $f = +f_0$ and another at $f = -f_0$. This can also be seen from an expansion of the time waveform; that is,

$$v(t) = A \sin \omega_0 t = \frac{A}{j2} e^{j\omega_0 t} - \frac{A}{j2} e^{-j\omega_0 t}$$

which implies that the sine wave consists of two rotating phasors, one rotating with a frequency $f = +f_0$ and another rotating with $f = -f_0$. From the *engineering* point of view it is said that one frequency is present, namely, $f = f_0$, because for any physical (i.e., real) waveform, Eq. (2–35) shows that for any positive frequency present, there is also a mathematical negative frequency present. The phasor associated with $v(t)$ is $c = 0 - jA = A \angle -90^\circ$. Another interesting observation is that the magnitude spectrum consists of *lines* (i.e., Dirac delta functions). As shown by Eq. (2–109), the lines are a consequence of $v(t)$ being a periodic function. If the sinusoid is switched on and off, then the resulting waveform is not periodic and its spectrum is continuous as demonstrated by Example 2–10. A damped sinusoid also has a continuous spectrum, as demonstrated by Example 2–4.

Rectangular and Triangular Pulses

The following waveshapes frequently occur in communications problems, so special symbols will be defined to shorten the notation.

DEFINITION. Let $\Pi(\cdot)$ denote a single *rectangular pulse*. Then

$$\Pi\left(\frac{t}{T}\right) \triangleq \begin{cases} 1, & |t| \leq \frac{T}{2} \\ 0, & |t| > \frac{T}{2} \end{cases} \quad (2-52)$$

DEFINITION. $\text{Sa}(\cdot)$ denotes the function[†]

$$\text{Sa}(x) = \frac{\sin x}{x} \quad (2-53)$$

DEFINITION. Let $\Lambda(\cdot)$ denote the triangular function. Then

$$\Lambda\left(\frac{t}{T}\right) \triangleq \begin{cases} 1 - \frac{|t|}{T}, & |t| \leq T \\ 0, & |t| > T \end{cases} \quad (2-54)$$

These waveshapes are shown in Fig. 2-5. A tabulation of $\text{Sa}(x)$ is given in Sec. A-9 (Appendix A).

Example 2-6 SPECTRUM OF A RECTANGULAR PULSE

The spectrum is obtained by taking the Fourier transform of $w(t) = \Pi(t/T)$.


$$\begin{aligned} W(f) &= \int_{-T/2}^{T/2} 1 e^{-j\omega t} dt = \frac{e^{-j\omega T/2} - e^{j\omega T/2}}{-j\omega} \\ &= T \frac{\sin(\omega T/2)}{\omega T/2} = T \text{Sa}(\pi T f) \end{aligned}$$

Thus,



$$\Pi\left(\frac{t}{T}\right) \leftrightarrow T \text{Sa}(\pi T f) \quad (2-55)$$

For magnitude and phase plots, see Example2_06.m. A numerical evaluation of this FT integral is given by file Example2_06 FT.(m). The preceding Fourier transform pair is shown in Fig. 2-6a. Note the inverse relationship between the pulse width T and the spectral zero crossing $1/T$. Also, by use of the duality theorem (listed in Table 2-1), the spectrum of a $(\sin x)/x$ pulse is a rectangle. That is, realizing that $\Pi(x)$ is an even function, and applying the duality theorem to Eq. (2-55), we get

[†] This is related to the sin c function by $\text{Sa}(x) = \sin c(x/\pi)$ because $\sin c(\lambda) \triangleq (\sin \pi\lambda)/\pi\lambda$. The notation $\text{Sa}(x)$ and $\sin c(x)$ represent the same concept, but can be confused because of scaling. In this book, $(\sin x)/x$ will often be used because it avoids confusion and does not take much more text space.

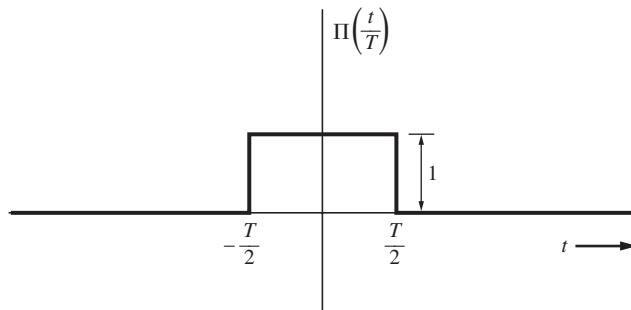

(a) Rectangular Pulse

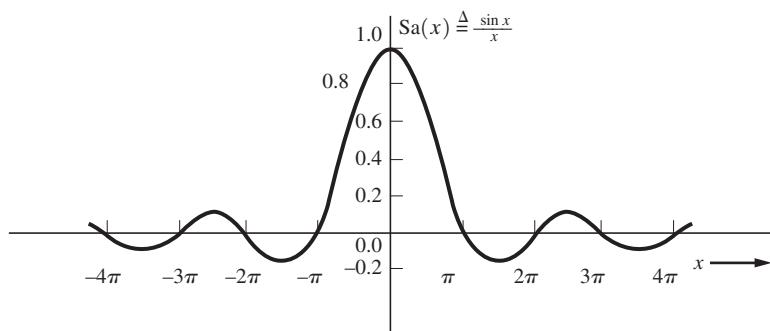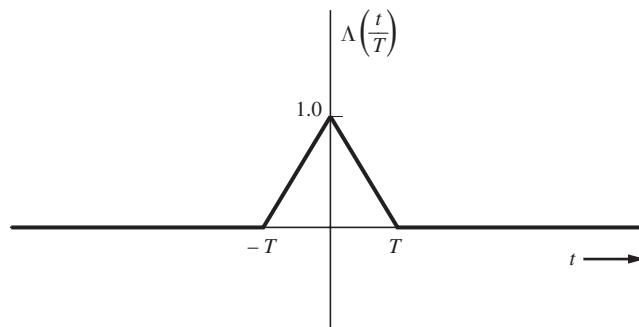(b) $\text{Sa}(x)$ Function

(c) Triangular Function

Figure 2–5 Waveshapes and corresponding symbolic notation.

$$T \text{Sa}(\pi T t) \leftrightarrow \Pi\left(-\frac{f}{T}\right) = \Pi\left(\frac{f}{T}\right)$$

Replacing the parameter T by $2W$, we obtain the Fourier transform pair.

$$2W \text{Sa}(2\pi W t) \leftrightarrow \Pi\left(\frac{f}{2W}\right) \quad (2-56)$$

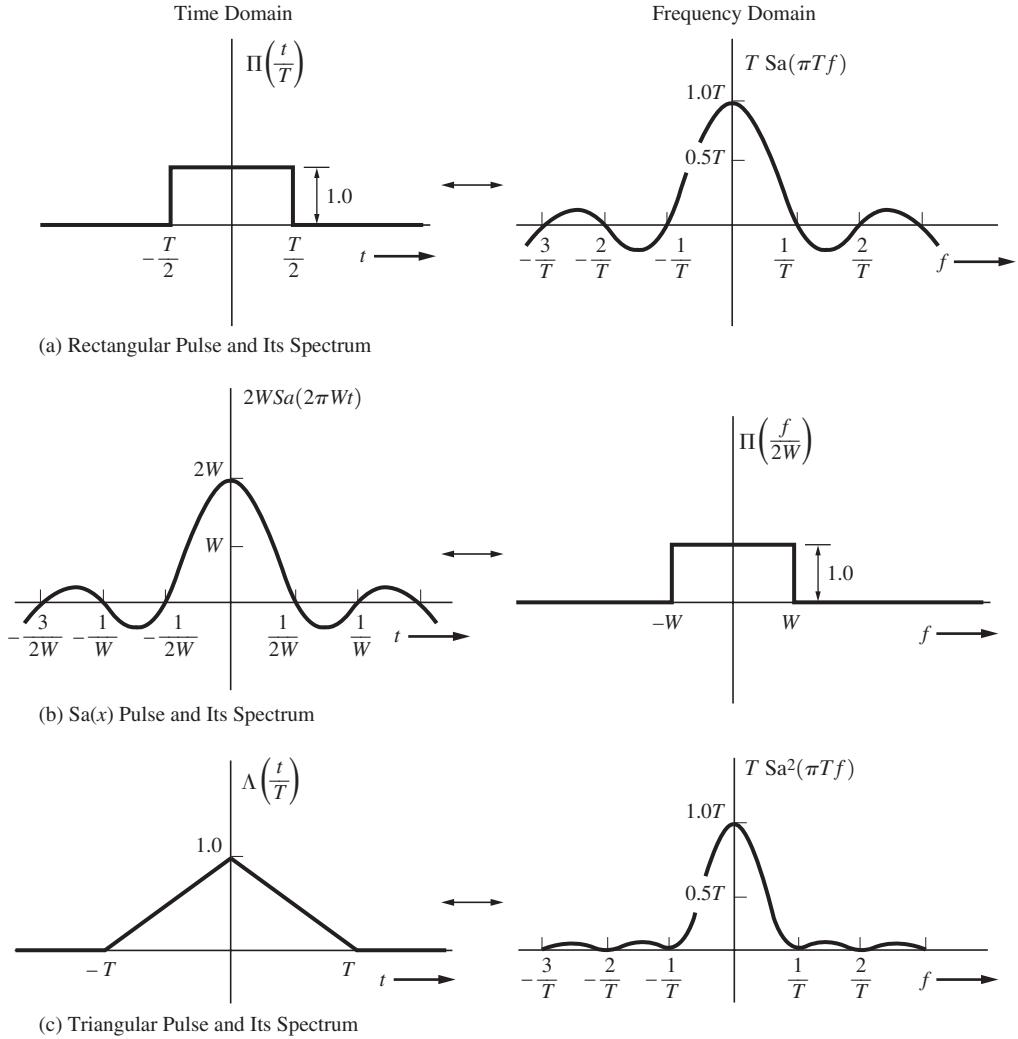


Figure 2–6 Spectra of rectangular, $(\sin x)/x$, and triangular pulses.

where W is the absolute bandwidth in hertz. This Fourier transform pair is also shown in Fig. 2–6b.

The spectra shown in Fig. 2–6 are real because the time domain pulses are real and even. If the pulses are offset in time to destroy the even symmetry, the spectra will be complex. For example, let

$$v(t) = \begin{cases} 1, & 0 < t < T \\ 0, & t \text{ elsewhere} \end{cases} = \Pi\left(\frac{t = T/2}{T}\right)$$

Then, using the time delay theorem and Eq. (2–55), we get the spectrum

$$V(f) = T e^{-j\pi f T} \text{Sa}(\pi T f) \quad (2-57)$$

In terms of quadrature notation, Eq. (2–57) becomes

$$V(f) = \underbrace{[T \operatorname{Sa}(\pi f T) \cos(\pi f T)]}_{X(f)} + j \underbrace{[-T \operatorname{Sa}(\pi f T) \sin(\pi f T)]}_{Y(f)} \quad (2-58)$$

Examining Eq. (2–57), we find that the magnitude spectrum is

$$|V(f)| = T \left| \frac{\sin \pi f T}{\pi f T} \right| \quad (2-59)$$

and the phase spectrum is

$$\theta(f) = \angle e^{-j\pi f T} + \angle \operatorname{Sa}(\pi f T) = -\pi f T + \begin{cases} 0, & \frac{n}{T} < |f| < \frac{n+1}{T}, & n \text{ even} \\ \pi, & \frac{n}{T} < |f| < \frac{n+1}{T}, & n \text{ odd} \end{cases} \quad (2-60)$$

The rectangular pulse is one of the most important and popular pulse shapes, because it is convenient to represent binary one and binary zero data by using rectangular pulses. For example, TTL logic circuits use 5-volt rectangular pulses to represent binary ones and 0 volts to represent binary zeros. This is shown in Fig. 3–15a, where $A = 5$. Other examples of rectangular pulse encoding are also shown in Fig. 3–15.

The null bandwidth for rectangular pulse digital signaling is obtained from Eq. (2–55) or Eq. (2–59). That is, *if the pulse width of a digital signal is T seconds, then the bandwidth (i.e., the width of the frequency band where the spectral magnitude is not small) is approximately $1/T$ Hz*. A complete discussion of signal bandwidth is involved, and this is postponed until Sec. 2–9.

Example 2–7 SPECTRUM OF A TRIANGULAR PULSE

The spectrum of a triangular pulse can be obtained by direct evaluation of the FT integral using equations for the piecewise linear lines of the triangle shown in Fig. 2–6c. Another approach, which allows us to obtain the FT quickly, is to first compute the FT for the second derivative of the triangle. We will take the latter approach to demonstrate this technique. Let

$$w(t) = \Lambda(t/T)$$

Then

$$\frac{dw(t)}{dt} = \frac{1}{T} u(t + T) - \frac{2}{T} u(t) + \frac{1}{T} u(t - T)$$

and

$$\frac{d^2 w(t)}{dt^2} = \frac{1}{T} \delta(t + T) - \frac{2}{T} \delta(t) + \frac{1}{T} \delta(t - T)$$

Using Table 2–2, we find that the FT pair for the second derivative is

$$\frac{d^2w(t)}{dt^2} \leftrightarrow \frac{1}{T} e^{j\omega T} - \frac{2}{T} + \frac{1}{T} e^{-j\omega T}$$

which can be rewritten as

$$\frac{d^2w(t)}{dt^2} \leftrightarrow \frac{1}{T} (e^{j\omega T/2} - e^{-j\omega T/2})^2 = \frac{-4}{T} (\sin \pi f T)^2$$

Referring to Table 2–1 and applying the integral theorem twice, we get the FT pair for the original waveform:

$$w(t) \leftrightarrow \frac{-4}{T} \frac{(\sin \pi f T)^2}{(j2\pi f)^2}$$

Thus,

$$w(t) = \Lambda\left(\frac{t}{T}\right) \leftrightarrow T \text{Sa}^2(\pi f T) \quad (2-61)$$

See Example2_07.m. This is illustrated in Fig. 2–6c.

Convolution

The convolution operation, as listed in Table 2–1, is very useful. Section 2–6 shows how the convolution operation is used to evaluate the waveform at the output of a linear system.

DEFINITION. The *convolution* of a waveform $w_1(t)$ with a waveform $w_2(t)$ to produce a third waveform $w_3(t)$ is

$$w_3(t) = w_1(t) * w_2(t) \triangleq \int_{-\infty}^{\infty} w_1(\lambda) w_2(t - \lambda) d\lambda \quad (2-62a)$$

where $w_1(t) * w_2(t)$ is a shorthand notation for this integration operation and $*$ is read “convolved with.”

When the integral is examined, we realize that t is a parameter and λ is the variable of integration.

If discontinuous waveshapes are to be convolved, it is usually easier to evaluate the equivalent integral

$$w_3(t) = \int_{-\infty}^{\infty} w_1(\lambda) w_2(-(λ - t)) d\lambda \quad (2-62b)$$

Thus, the integrand for Eq. (2–62b) is obtained by

1. Time reversal of w_2 to obtain $w_2(-\lambda)$,
2. Time shifting of w_2 by t seconds to obtain $w_2(-(\lambda - t))$, and
3. Multiplying this result by w_1 to form the integrand $w_1(\lambda) w_2(-(\lambda - t))$.

These three operations are illustrated in the examples that follow.

Example 2-8 CONVOLUTION OF A RECTANGLE WITH AN EXPONENTIAL

Let

$$w_1(t) = \Pi\left(\frac{t - \frac{1}{2}T}{T}\right) \quad \text{and} \quad w_2(t) = e^{-t/T}u(t)$$

as shown in Fig. 2-7. Implementing step 3 with the help of the figure, the convolution of $w_1(t)$ with $w_2(t)$ is 0 if $t < 0$ because the product $w_1(\lambda) w_2(-(\lambda - t))$ is zero for all values of λ . If $0 < t < T$, Eq. (2-62b) becomes

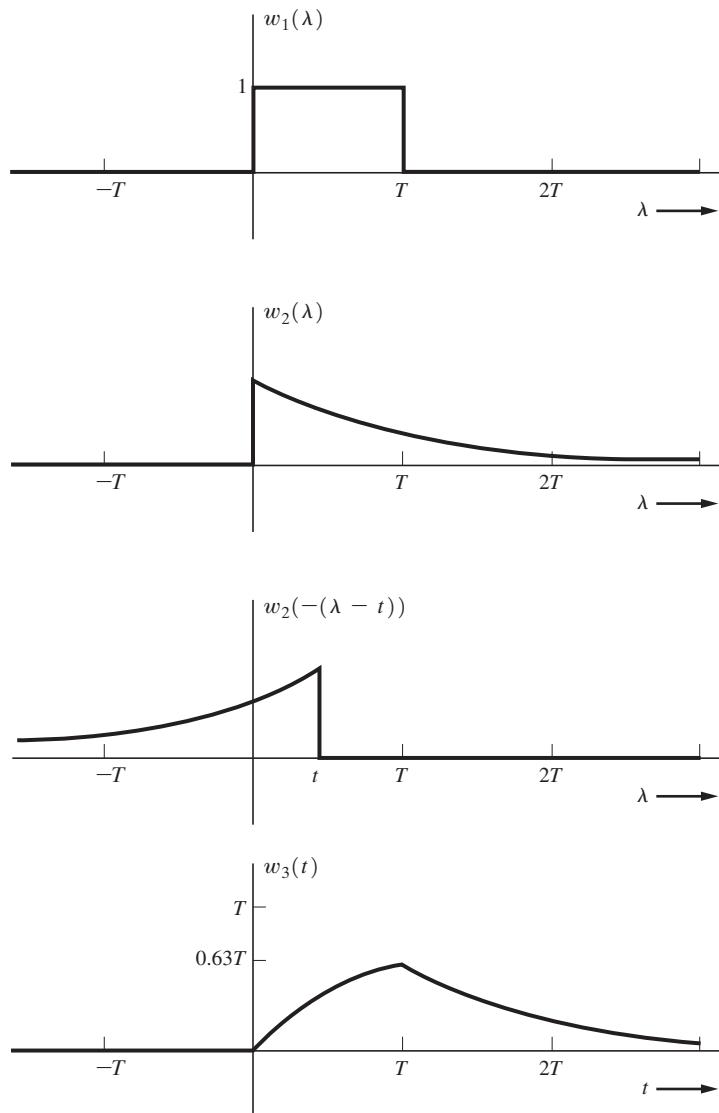


Figure 2-7 Convolution of a rectangle and an exponential.

$$w_3(t) = \int_0^t 1 e^{+(\lambda-t)/T} d\lambda = T(1 - e^{-t/T})$$

If $t > T$, then Eq. (2–62b) becomes

$$w_3(t) = \int_0^T 1 e^{+(\lambda-t)/T} d\lambda = T(e - 1)e^{-t/T}$$

Thus,

$$w_3(t) = \begin{cases} 0, & t < 0 \\ T(1 - e^{-t/T}), & 0 < t < T \\ T(e - 1)e^{-t/T}, & t > T \end{cases}$$

See Example2_08.m. This result is plotted in Fig. 2–7.

Example 2–9 SPECTRUM OF A TRIANGULAR PULSE BY CONVOLUTION

In Example 2–7, the spectrum of a triangular pulse was evaluated by using the integral theorem. The same result can be obtained by using the convolution theorem of Table 2–1. If the rectangular pulse of Fig. 2–6a is convolved with itself and then scaled (i.e., multiplied) by the constant $1/T$, the resulting time waveform is the triangular pulse of Fig. 2–6c. Applying the convolution theorem, we obtain the spectrum for the triangular pulse by multiplying the spectrum of the rectangular pulse (of Fig. 2–6a) with itself and scaling with a constant $1/T$. As expected, the result is the spectrum shown in Fig. 2–6c.

Example 2–10 SPECTRUM OF A SWITCHED SINUSOID

In Example 2–5, a continuous sinusoid was found to have a line spectrum with the lines located at $f = \pm f_0$. In this example, we will see how the spectrum changes when the sinusoid is switched on and off. The switched sinusoid is shown in Fig. 2–8a and can be represented by

$$w(t) = \Pi\left(\frac{t}{T}\right)A \sin \omega_0 t = \Pi\left(\frac{t}{T}\right)A \cos\left(\omega_0 t - \frac{\pi}{2}\right)$$

Using the FT of the rectangular pulse from Table 2–2 and the real-signal translation theorem of Table 2–1, we see that the spectrum of this switched sinusoid is

$$W(f) = j \frac{A}{2} T[\text{Sa}(\pi T(f + f_0)) - \text{Sa}(\pi T(f - f_0))] \quad (2-63)$$

See Example2_10.m for spectral plots of Eq. (2–63). This spectrum is continuous and imaginary. The magnitude spectrum is shown in Fig. 2–8. Compare the continuous spectrum of Fig. 2–8 with the discrete spectrum obtained for the continuous sine wave, as shown in Fig. 2–4a. In addition, note that if the duration of the switched sinusoid is allowed to become very large (i.e., $T \rightarrow \infty$), the continuous spectrum of Fig. 2–8 becomes the discrete spectrum of Fig. 2–4a with delta functions at f_0 and $-f_0$.

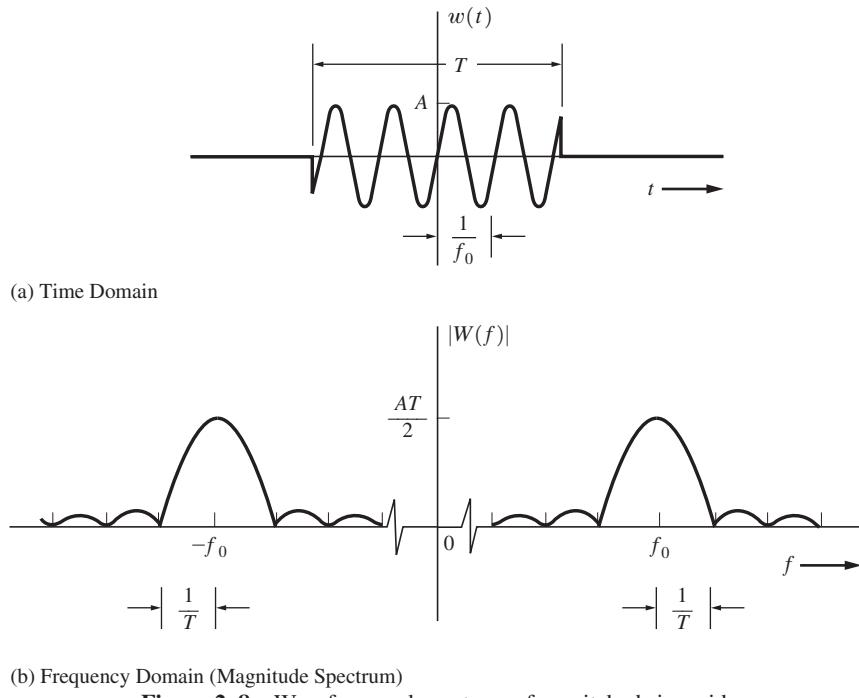


Figure 2–8 Waveform and spectrum of a switched sinusoid.

The spectrum for the switched sinusoid may also be evaluated using a convolution approach. The multiplication theorem of Table 2–1 may be used where $w_1(t) = \Pi(t/T)$ and $w_2(t) = A \sin \omega_0 t$. Here the spectrum of the switched sinusoid is obtained by working a convolution problem in the frequency domain:

$$W(f) = W_1(f) * W_2(f) = \int_{-\infty}^{\infty} W_1(\lambda) W_2(f - \lambda) d\lambda$$

This convolution integral is easy to evaluate because the spectrum of $w_2(t)$ consists of two delta functions. The details of this approach are left as a homework exercise for the reader.

A summary of Fourier transform pairs is given in Table 2–2. Numerical techniques using the discrete Fourier transform are discussed in Sec. 2–8.

2–3 POWER SPECTRAL DENSITY AND AUTOCORRELATION FUNCTION

Power Spectral Density

The normalized power of a waveform will now be related to its frequency domain description by the use of a function called the *power spectral density (PSD)*. The PSD is very useful in describing how the power content of signals and noise is affected by filters and other devices

TABLE 2-2 SOME FOURIER TRANSFORM PAIRS

Function	Time Waveform $w(t)$	Spectrum $W(f)$
Rectangular	$\Pi\left(\frac{t}{T}\right)$	$T[\text{Sa}(\pi fT)]$
Triangular	$\Lambda\left(\frac{t}{T}\right)$	$T[\text{Sa}(\pi fT)]^2$
Unit step	$u(t) \triangleq \begin{cases} +1, & t > 0 \\ 0, & t < 0 \end{cases}$	$\frac{1}{2} \delta(f) + \frac{1}{j2\pi f}$
Signum	$\text{sgn}(t) \triangleq \begin{cases} +1, & t > 0 \\ -1, & t < 0 \end{cases}$	$\frac{1}{j\pi f}$
Constant	1	$\delta(f)$
Impulse at $t = t_0$	$\delta(t - t_0)$	$e^{-j2\pi f t_0}$
Sin c	$\text{Sa}(2\pi Wt)$	$\frac{1}{2W} \Pi\left(\frac{f}{2W}\right)$
Phasor	$e^{j(\omega_0 t + \varphi)}$	$e^{j\varphi} \delta(f - f_0)$
Sinusoid	$\cos(\omega_c t + \varphi)$	$\frac{1}{2} e^{j\varphi} \delta(f - f_c) + \frac{1}{2} e^{-j\varphi} \delta(f + f_c)$
Gaussian	$e^{-\pi(t/t_0)^2}$	$t_0 e^{-\pi(f t_0)^2}$
Exponential, one-sided	$\begin{cases} e^{-t/T}, & t > 0 \\ 0, & t < 0 \end{cases}$	$\frac{2T}{1 + j2\pi f T}$
Exponential, two-sided	$e^{- t /T}$	$\frac{2T}{1 + (2\pi f T)^2}$
Impulse train	$\sum_{k=-\infty}^{k=\infty} \delta(t - kT)$	$f_0 \sum_{n=-\infty}^{n=\infty} \delta(f - nf_0),$ where $f_0 = 1/T$

in communication systems. In Eq. (2-42), the energy spectral density (ESD) was defined in terms of the magnitude-squared version of the Fourier transform of the waveform. The PSD will be defined in a similar way. The PSD is more useful than the ESD, since power-type models are generally used in solving communication problems.

First, we define the truncated version of the waveform by

$$w_T(t) = \begin{cases} w(t), & -T/2 < t < T/2 \\ 0, & t \text{ elsewhere} \end{cases} = w(t)\Pi\left(\frac{t}{T}\right) \quad (2-64)$$

Using Eq. (2-13), we obtain the average normalized power:

$$P = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} w^2(t) dt = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-\infty}^{\infty} w_T^2(t) dt$$

By the use of Parseval's theorem, Eq. (2–41), the average normalized power becomes

$$P = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-\infty}^{\infty} |W_T(f)|^2 df = \int_{-\infty}^{\infty} \left(\lim_{T \rightarrow \infty} \frac{|W_T(f)|^2}{T} \right) df \quad (2-65)$$

where $W_T(f) = \mathcal{F}[w_T(t)]$. The integrand of the right-hand integral has units of watts/hertz (or, equivalently, volts²/hertz or amperes²/hertz, as appropriate) and can be defined as the PSD.

DEFINITION. The *power spectral density (PSD)* for a deterministic power waveform is[†]

$$\mathcal{P}_w(f) \triangleq \lim_{T \rightarrow \infty} \left(\frac{|W_r(f)|^2}{T} \right) \quad (2-66)$$

where $w_T(t) \leftrightarrow W_T(f)$ and $\mathcal{P}_w(f)$ has units of watts per hertz.

Note that the PSD is always a real nonnegative function of frequency. In addition, the PSD is not sensitive to the phase spectrum of $w(t)$, because that is lost due to the absolute value operation used in Eq. (2–66). If the PSD is plotted in dB units, the plot of the PSD is *identical* to the plot of the Magnitude Spectrum in dB units. This is the result of the definition of dB as given by Eqs. (2–15) and (2–18). Identical plots for the Magnitude Spectrum and the PSD are illustrated by file Example2_17.m.

From Eq. (2–65), the normalized average power is[‡]

$$P = \langle w^2(t) \rangle = \int_{-\infty}^{\infty} P_w(f) df \quad (2-67)$$

That is, the area under the PSD function is the normalized average power.

Autocorrelation Function

A related function called the *autocorrelation*, $R(\tau)$, can also be defined.[‡]

DEFINITION. The *autocorrelation* of a real (physical) waveform is[§]

$$R_w(\tau) \triangleq \langle w(t)w(t + \tau) \rangle = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} w(t)w(t + \tau) dt \quad (2-68)$$

Furthermore, it can be shown that the PSD and the autocorrelation function are Fourier transform pairs; that is,

$$R_w(\tau) \leftrightarrow \mathcal{P}_w(f) \quad (2-69)$$

[†] Equations (2–66) and (2–67) give normalized (with respect to 1 Ω) PSD and average power, respectively. For unnormalized (i.e., actual) values, $\mathcal{P}_w(f)$ is replaced by the appropriate expression as follows: If $w(t)$ is a voltage waveform that appears across a resistive load of R ohms, the unnormalized PSD is $\mathcal{P}_w(f)/RW/\text{Hz}$, where $\mathcal{P}_w(f)$ has units of volts²/Hz. Similarly, if $w(t)$ is a current waveform passing through a resistive load of R ohms, the unnormalized PSD is $\mathcal{P}_w(f)R\text{ W}/\text{Hz}$, where $\mathcal{P}_w(f)$ has units of amperes²/Hz.

[‡] Here a time average is used in the definition of the autocorrelation function. In Chapter 6, an ensemble (statistical) average is used in the definition of $R(\tau)$, and as shown there, these two definitions are equivalent if $w(t)$ is ergodic.

[§] The autocorrelation of a complex waveform is $R_w(\tau) \triangleq \langle w^*(t)w(t + \tau) \rangle$.

where $\mathcal{P}_w(f) = \mathcal{F}[R_w(\tau)]$. This is called the *Wiener–Khintchine theorem*. The theorem, along with properties for $R(\tau)$ and $\mathcal{P}(f)$, are developed in Chapter 6.

In summary, the PSD can be evaluated by either of the following two methods:

1. *Direct method*, by using the definition, Eq. (2–66).[†]
2. *Indirect method*, by first evaluating the autocorrelation function and then taking the Fourier transform: $\mathcal{P}_w(f) = \mathcal{F}[R_w(\tau)]$.

Furthermore, the total average normalized power for the waveform $w(t)$ can be evaluated by using any of the *four* techniques embedded in the following equation:

$$P = \langle w^2(t) \rangle = W_{rms}^2 = \int_{-\infty}^{\infty} P_w(f) df = R_w(0) \quad (2-70)$$

Example 2–11 PSD OF A SINUSOID

Let

$$w(t) = A \sin \omega_0 t$$

The PSD will be evaluated using the indirect method. The autocorrelation is

$$\begin{aligned} R_w(\tau) &= \langle w(t)w(t + \tau) \rangle \\ &= \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} A^2 \sin \omega_0 t \sin \omega_0(t + \tau) dt \end{aligned}$$

Using a trigonometric identity, from Appendix A we obtain

$$R_w(\tau) = \frac{A^2}{2} \cos \omega_0 \tau \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} dt - \frac{A^2}{2} \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} \cos(2\omega_0 t + \omega_0 \tau) dt$$

which reduces to

$$R_w(\tau) = \frac{A^2}{2} \cos \omega_0 \tau \quad (2-71)$$

The PSD is then

$$\mathcal{P}_w(f) = \mathcal{F}\left[\frac{A^2}{2} \cos \omega_0 \tau\right] = \frac{A^2}{4} [\delta(f - f_0) + \delta(f + f_0)] \quad (2-72)$$

as shown in Fig. 2–9. Eq. (2–72) is plotted by running Example2_11.m. The PSD may be compared to the “voltage” spectrum for a sinusoid found in Example 2–5 and shown in Fig. 2–4.

The average normalized power may be obtained by using Eq. (2–67):

$$P = \int_{-\infty}^{\infty} \frac{A^2}{4} [\delta(f - f_0) + \delta(f + f_0)] df = \frac{A^2}{2} \quad (2-73)$$

[†] The direct method is usually more difficult than the indirect method.

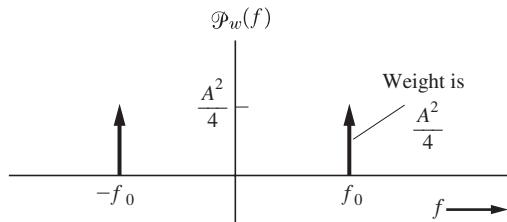


Figure 2-9 Power spectrum of a sinusoid.

This value, $A^2/2$, checks with the known result for the normalized power of a sinusoid:

$$P = \langle w^2(t) \rangle = W_{\text{rms}}^2 = (A/\sqrt{2})^2 = A^2/2 \quad (2-74)$$

It is also realized that $A \sin \omega_0 t$ and $A \cos \omega_0 t$ have exactly the same PSD (and autocorrelation function) because the phase has no effect on the PSD. This can be verified by evaluating the PSD for $A \cos \omega_0 t$, using the same procedure that was used earlier to evaluate the PSD for $A \sin \omega_0 t$.

Thus far, we have studied properties of signals and noise, such as the spectrum, average power, and RMS value, but how do we represent the signal or noise waveform itself? The direct approach is to write a closed-form mathematical equation for the waveform itself. Other equivalent ways of modeling the waveform are often found to be useful as well. One, which the reader has already studied in calculus, is to represent the waveform by the use of a Taylor series (i.e., power series) expansion about a point a ; that is,

$$w(t) = \sum_{n=0}^{\infty} \frac{w^{(n)}(a)}{n!} (t - a)^n \quad (2-75)$$

where

$$w^{(n)}(a) = \left| \frac{d^n w(t)}{dt^n} \right|_{t=a} \quad (2-76)$$

From Eq. (2-76), if the derivatives at $t = a$ are known, Eq. (2-75) can be used to reconstruct the waveform. Another type of series representation that is especially useful in communication problems is the orthogonal series expansion. This is discussed in the next section.

2-4 ORTHOGONAL SERIES REPRESENTATION OF SIGNALS AND NOISE

An orthogonal series representation of signals and noise has many significant applications in communication problems, such as Fourier series, sampling function series, and the representation of digital signals. Because these specific cases are so important, they will be studied in some detail in sections that follow.

Orthogonal Functions

Before the orthogonal series is studied, we define orthogonal functions.

DEFINITION. Functions $\varphi_n(t)$ and $\varphi_m(t)$ are said to be *orthogonal* with respect to each other over the interval $a < t < b$ if they satisfy the condition

$$\int_a^b \varphi_n(t)\varphi_m^*(t) dt = 0, \quad \text{where } n \neq m \quad (2-77)$$

Furthermore, if the functions in the set $\{\varphi_n(t)\}$ are orthogonal, then they also satisfy the relation

$$\int_a^b \varphi_n(t)\varphi_m^*(t) dt = \begin{cases} 0, & n \neq m \\ K_n, & n = m \end{cases} = K_n \delta_{nm} \quad (2-78)$$

where

$$\delta_{nm} \triangleq \begin{cases} 0, & n \neq m \\ 1, & n = m \end{cases} \quad (2-79)$$

Here, δ_{nm} is called the *Kronecker delta function*. If the constants K_n are all equal to 1, the $\varphi_n(t)$ are said to be *orthonormal functions*.[†]

Equation (2-77) is used to test pairs of functions to see if they are orthogonal. Any such pair of functions is orthogonal over the interval (a, b) if the integral of the product of the functions is zero. The zero result implies that these functions are “independent” or in “disagreement.” If the result is not zero, they are not orthogonal, and consequently, the two functions have some “dependence” on, or “alikeness” to each other.

Example 2-12 ORTHOGONAL COMPLEX EXPONENTIAL FUNCTIONS

Show that the set of complex exponential functions $\{e^{jn\omega_0 t}\}$ are orthogonal over the interval $a < t < b$, where $b = a + T_0$, $T_0 = 1/f_0$, $w_0 = 2\pi f_0$, and n is an integer.

Solution. Substituting $\varphi_n(t) = e^{jn\omega_0 t}$ and $\varphi_m(t) = e^{jn\omega_0 t}$ into Eq. (2-77), we get

$$\int_a^b \varphi_n(t)\varphi_m^*(t) dt = \int_a^{a+T_0} e^{jn\omega_0 t} e^{-jn\omega_0 t} dt = \int_a^{a+T_0} e^{j(n-m)\omega_0 t} dt \quad (2-80)$$

For $m \neq n$, Eq. (2-80) becomes

$$\int_a^{a+T_0} e^{j(n-m)\omega_0 t} dt = \frac{e^{j(n-m)\omega_0 a}[e^{j(n-m)2\pi} - 1]}{j(n-m)\omega_0} = 0 \quad (2-81)$$

since $e^{j(n-m)2\pi} = \cos[2\pi(n-m)] + j \sin[2\pi(n-m)] = 1$. Thus, Eq. (2-77) is satisfied, and consequently, the complex exponential functions are orthogonal to each other over the interval

[†] To normalize a set of functions, we take each old $\varphi_n(t)$ and divide it by $\sqrt{K_n}$ to form the normalized $\varphi_n(t)$.

$a < t < a + T_0$, where a is any real constant. These exponential functions are not orthogonal over some other intervals, such as $a < t < a + 0.5T_0$.

Also, for the case $n = m$, Eq. (2-80) becomes

$$\int_a^{a+T_0} \varphi_n(t)\varphi_n^*(t) dt = \int_a^{a+T_0} 1 dt = T_0 \quad (2-82)$$

Using Eq. (2-82) in Eq. (2-78), we find that $K_n = T_0$ for all (integer) values of n . Because $K_n \neq 1$, these $\varphi_n(t)$ are not orthonormal (but they are orthogonal). An orthonormal set of exponential functions is obtained by scaling the old set, where the functions in the new set are

$$\varphi_n(t) = \frac{1}{\sqrt{T_0}} e^{jn\omega_0 t}.$$

Orthogonal Series

Assume that $w(t)$ represents some practical waveform (signal, noise, or signal–noise combination) that we wish to represent over the interval $a < t < b$. Then we can obtain an equivalent orthogonal series representation by using the following theorem.

THEOREM. *w(t) can be represented over the interval (a, b) by the series*

$$w(t) = \sum_n a_n \varphi_n(t) \quad (2-83)$$

where the orthogonal coefficients are given by

$$a_n = \frac{1}{K_n} \int_a^b w(t)\varphi_n^*(t) dt \quad (2-84)$$

and the range of n is over the integer values that correspond to the subscripts that were used to denote the orthogonal functions in the complete orthogonal set.

For Eq. (2-83) to be a valid representation for any physical signal (i.e., one with finite energy), the orthogonal set has to be complete. This implies that the set $\{\varphi_n(t)\}$ can be used to represent any function with an arbitrarily small error [Wylie, 1960]. In practice, it is usually difficult to prove that a given set of functions is complete. It can be shown that the complex exponential set and the harmonic sinusoidal sets that are used for the Fourier series in Sec. 2-5 are complete [Courant and Hilbert, 1953]. Many other useful sets are also complete, such as Bessel functions, Legendre polynomials, and the $(\sin x)/x$ -type sets [described by Eq. (2-161)].

Proof of Theorem. Assume that the set $\{\varphi_n(t)\}$ is sufficient to represent the waveform. Then in order for Eq. (2-83) to be correct, we only need to show that we can evaluate the a_n . Accordingly, we operate on both sides of that equation with the integral operator

$$\int_a^b [\cdot] \varphi_m^*(t) dt \quad (2-85)$$

obtaining

$$\begin{aligned}
 \int_a^b [w(t)]\varphi_m^*(t) dt &= \int_a^b \left[\sum_n a_n \varphi_n(t) \right] \varphi_m^*(t) dt \\
 &= \sum_n a_n \int_a^b \varphi_n(t) \varphi_m^*(t) dt = \sum_n a_n K_n \delta_{nm} \\
 &= a_m K_m
 \end{aligned} \tag{2-86}$$

Thus, Eq. (2-84) follows.

The orthogonal series is very useful in representing a signal, noise, or signal-noise combination. The orthogonal functions $\varphi_j(t)$ are deterministic. Furthermore, if the waveform $w(t)$ is deterministic, the constants $\{a_j\}$ are also deterministic and may be evaluated using Eq. (2-84). In Chapter 6, we will see that if $w(t)$ is stochastic (e.g., in a noise problem), the $\{a_j\}$ are a set of random variables that give the desired random process $w(t)$.

It is also possible to use Eq. (2-83) to generate $w(t)$ from the $\varphi_j(t)$ functions and the coefficients a_j . In this case, $w(t)$ is approximated by using a reasonable number of the $\varphi_j(t)$ functions. As shown in Fig. 2-10, for the case of real values for a_j and real functions for $\varphi_j(t)$, $w(t)$ can be synthesized by adding up weighted versions of $\varphi_j(t)$, where the weighting factors are given by $\{a_j\}$. The summing-and-gain weighting operation may be conveniently realized by using an operational amplifier with multiple inputs.

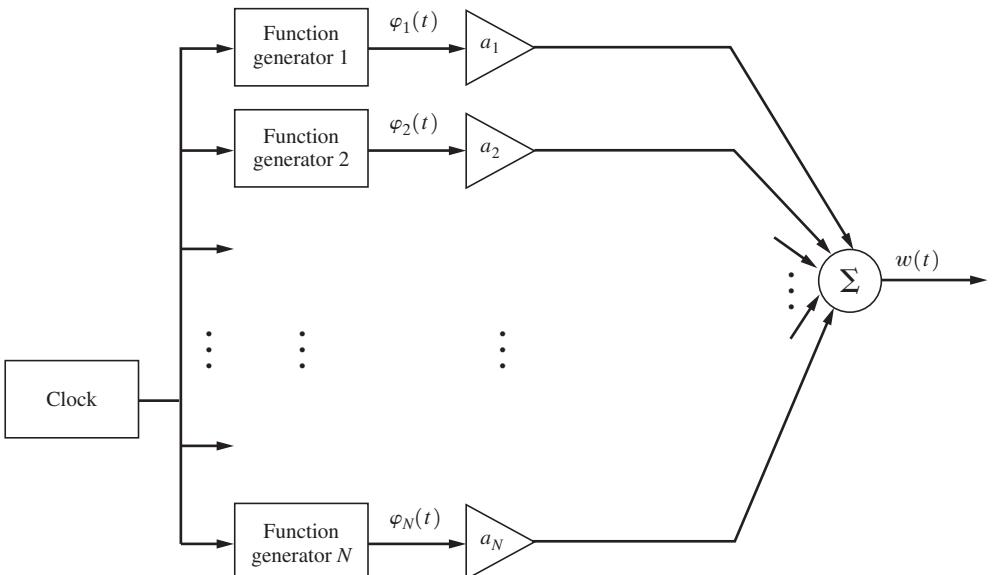


Figure 2-10 Waveform synthesis using orthogonal functions.

2–5 FOURIER SERIES

The Fourier series is a particular type of orthogonal series that is very useful in solving engineering problems, especially communication problems. The orthogonal functions that are used are either sinusoids or, equivalently, complex exponential functions.[†]

Complex Fourier Series

The complex Fourier series uses the orthogonal exponential functions

$$\varphi_n(t) = e^{jn\omega_0 t} \quad (2-87)$$

where n ranges over all possible integer values, negative, positive, and zero; $\omega_0 = 2\pi/T_0$, where $T_0 = (b - a)$ is the length of the interval over which the series, Eq. (2–83), is valid; and, from Example 2–12, $K_n = T_0$. The Fourier series theorem follows from Eq. (2–83).

THEOREM. *A physical waveform (i.e., finite energy) may be represented over the interval $a < t < a + T_0$ by the complex exponential Fourier series*

$$w(t) = \sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_0 t} \quad (2-88)$$

where the complex (phasor) Fourier coefficients are

$$c_n = \frac{1}{T_0} \int_a^{a+T_0} w(t) e^{-jn\omega_0 t} dt \quad (2-89)$$

and where $\omega_0 = 2\pi f_0 = 2\pi/T_0$.

If the waveform $w(t)$ is periodic with period T_0 , this Fourier series representation is valid over all time (i.e., over the interval $-\infty < t < +\infty$), because $w(t)$ and $\varphi_n(t)$ are periodic with the same fundamental period T_0 . For this case of periodic waveforms, the choice of a value for the parameter a is arbitrary and is usually taken to be $a = 0$ or $a = -T_0/2$ for mathematical convenience. The frequency $f_0 = 1/T_0$ is said to be the *fundamental* frequency and the frequency nf_0 is said to be the n th harmonic frequency, when $n > 1$. The Fourier coefficient c_0 is equivalent to the DC value of the waveform $w(t)$, because, when $n = 0$, Eq. (2–89) is identical to Eq. (2–4).

c_n is, in general, a complex number. Furthermore, it is a phasor, since it is the coefficient of a function of the type $e^{j\omega t}$. Consequently, Eq. (2–88) is said to be a complex or phasor Fourier series.

Some properties of the complex Fourier series are as follows:

1. If $w(t)$ is real,

$$c_n = c_{-n}^* \quad (2-90)$$

[†] Mathematicians generally call any orthogonal series a Fourier series.

- 2.** If $w(t)$ is real and even [i.e., $w(t) = w(-t)$],

$$\operatorname{Im}[c_n] = 0 \quad (2-91)$$

- 3.** If $w(t)$ is real and odd [i.e., $w(t) = -w(-t)$],

$$\operatorname{Re}[c_n] = 0$$

- 4.** Parseval's theorem is

$$\frac{1}{T_0} \int_a^{a+T_0} |w(t)|^2 dt = \sum_{n=-\infty}^{n=\infty} |c_n|^2 \quad (2-92)$$

(See Eq. (2-125) for the proof.)

- 5.** The complex Fourier series coefficients of a real waveform are related to the quadrature Fourier series coefficients by

$$c_n = \begin{cases} \frac{1}{2}a_n - j\frac{1}{2}b_n, & n > 0 \\ a_0, & n = 0 \\ \frac{1}{2}a_{-n} + j\frac{1}{2}b_{-n}, & n < 0 \end{cases} \quad (2-93)$$

[See Eqs. (2-96), (2-97), and (2-98).]

- 6.** The complex Fourier series coefficients of a real waveform are related to the polar Fourier series coefficients by

$$c_n = \begin{cases} \frac{1}{2}D \angle \varphi_n, & n > 0 \\ D_0, & n = 0 \\ \frac{1}{2}D_{-n} \angle \varphi_{-n}, & n < 0 \end{cases} \quad (2-94)$$

[See Eqs. (2-106) and (2-107).]

Note that these properties for the complex Fourier series coefficients are similar to those of the Fourier transform as given in Sec. 2-2.

Quadrature Fourier Series

The *quadrature* form of the Fourier series representing any physical waveform $w(t)$ over the interval $a < t < a + T_0$ is

$$w(t) = \sum_{n=0}^{n=\infty} a_n \cos n\omega_0 t + \sum_{n=1}^{n=\infty} b_n \sin n\omega_0 t \quad (2-95)$$

where the orthogonal functions are $\cos n\omega_0 t$ and $\sin n\omega_0 t$. Using Eq. (2–77), we find that these Fourier coefficients are given by

$$a_n = \begin{cases} \frac{1}{T_0} \int_a^{a+T_0} w(t) dt, & n = 0 \\ \frac{2}{T_0} \int_a^{a+T_0} w(t) \cos n\omega_0 t dt, & n \geq 1 \end{cases} \quad (2-96)$$

and

$$b_n = \frac{2}{T_0} \int_a^{a+T_0} w(t) \sin n\omega_0 t dt, \quad n > 0 \quad (2-97)$$

Once again, because these sinusoidal orthogonal functions are periodic, this series is periodic with the fundamental period T_0 , and if $w(t)$ is periodic with period T_0 , the series will represent $w(t)$ over the whole real line (i.e., $-\infty < t < \infty$).

The complex Fourier series, [Eq. (2–88)], and the quadrature Fourier series, [Eq. (2–95)] are equivalent representations. This can be demonstrated by expressing the complex number c_n in terms of its conjugate parts, x_n and y_n . That is, using Eq. (2–89), we get

$$\begin{aligned} c_n &= x_n + jy_n \\ &= \left[\frac{1}{T_0} \int_a^{a+T_0} w(t) \cos n\omega_0 t dt \right] + j \left[\frac{-1}{T_0} \int_a^{a+T_0} w(t) \sin n\omega_0 t dt \right] \end{aligned} \quad (2-98)$$

for all integer values of n . Thus,

$$x_n = \frac{1}{T_0} \int_a^{a+T_0} w(t) \cos n\omega_0 t dt \quad (2-99)$$

and

$$y_n = \frac{-1}{T_0} \int_a^{a+T_0} w(t) \sin n\omega_0 t dt \quad (2-100)$$

Using Eq. (2–96) and (2–97), we obtain the identities

$$a_n = \begin{cases} c_0, & n = 0 \\ 2x_n, & n \geq 1 \end{cases} = \begin{cases} c_0, & n = 0 \\ 2 \operatorname{Re}\{c_n\}, & n \geq 0 \end{cases} \quad (2-101)$$

and

$$b_n = -2y_n = -2 \operatorname{Im}\{c_n\}, \quad n \geq 1 \quad (2-102)$$

where $\operatorname{Re}\{\cdot\}$ denotes the real part of $\{\cdot\}$ and $\operatorname{Im}\{\cdot\}$ denotes the imaginary part of $\{\cdot\}$.

Polar Fourier Series

The quadrature Fourier series, Eq. (2–95), may be rearranged and written in a polar (amplitude-phase) form. The *polar* form is

$$w(t) = D_0 + \sum_{n=1}^{n=\infty} D_n \cos(n\omega_0 t + \varphi_n) \quad (2-103)$$

where $w(t)$ is real and

$$a_n = \begin{cases} D_0, & n = 0 \\ D_n \cos \varphi_n, & n \geq 1 \end{cases} \quad (2-104)$$

$$b_n = -D_n \sin \varphi_n, \quad n \geq 1 \quad (2-105)$$

The latter two equations may be inverted, and we obtain

$$D_n = \begin{cases} a_0, & n = 0 \\ \sqrt{a_n^2 + b_n^2}, & n \geq 1 \end{cases} = \begin{cases} c_0, & n = 0 \\ 2|c_n|, & n \geq 1 \end{cases} \quad (2-106)$$

and

$$\varphi_n = -\tan^{-1}\left(\frac{b_n}{a_n}\right) = \angle c_n, \quad n \geq 1 \quad (2-107)$$

where the angle operator is defined by

$$\angle [\cdot] = \tan^{-1}\left(\frac{\text{Im}[\cdot]}{\text{Re}[\cdot]}\right) \quad (2-108)$$


It should be clear from the context whether \angle denotes the angle operator or the angle itself. For example, $\angle 90^\circ$ denotes an angle of 90° , but $\angle [1 + j2]$ denotes the angle operator and is equal to 63.4° when evaluated.

The equivalence between the Fourier series coefficients is demonstrated geometrically in Fig. 2–11. It is seen that, in general, when a physical (real) waveform $w(t)$ is represented by a Fourier series, c_n is a complex number with a real part x_n and an imaginary part y_n (which are both real numbers), and consequently, a_n , b_n , D_n , and φ_n are real numbers. In addition, D_n is a nonnegative number for $n \geq 1$. Furthermore, all of these coefficients describe the amount of frequency component contained in the signal at the frequency of nf_0 Hz.

In practice, the Fourier series (FS) is often *truncated* to a finite number of terms. For example, 5 or 10 harmonics might be used to approximate the FS series for a square wave. Thus, an important question arises: For the finite series, are the optimum values for the series coefficients the same as those for the corresponding terms in the infinite series, or should the coefficients for the finite series be adjusted to some new values to give the best finite-series approximation? The answer is that the optimum values for the coefficients of the truncated FS are the same as those for the corresponding terms in the nontruncated FS.[†]

As we have seen, the complex, quadrature, and polar forms of the Fourier series are all equivalent, but the question is, *Which is the best form to use?* The answer is that it

[†] For a proof of this statement, see [Couch, 1995].

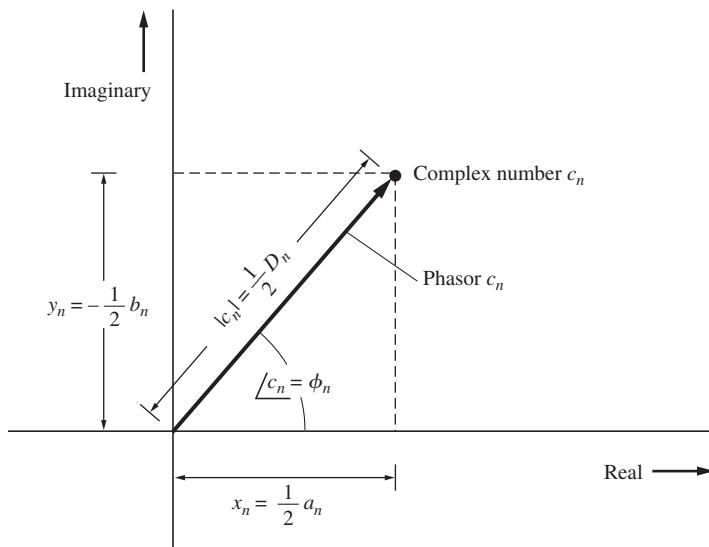Figure 2–11 Fourier series coefficients, $n \geq 1$.

depends on the particular problem being solved! If the problem is being solved analytically, the complex coefficients are *usually* easier to evaluate. On the other hand, if measurements of a waveform are being made in a laboratory, the polar form is usually more convenient, since measuring instruments, such as voltmeters, scopes, vector voltmeters, and wave analyzers, generally give magnitude and phase readings. Using the laboratory results, engineers often draw *one-sided* spectral plots in which lines are drawn corresponding to each D_n value at $f = nf_0$, where $n \geq 0$ (i.e., positive frequencies only). Of course, this one-sided spectral plot may be converted to the two-sided spectrum given by the c_n plot by using Eq. (2–94). It is understood that the two-sided spectrum is defined to be the Fourier transform of $w(t)$. This is demonstrated by Fig. 2–4, where Eq. (2–109), from the next theorem, may be used.

Line Spectra for Periodic Waveforms

For *periodic* waveforms, the Fourier series representations are valid over all time (i.e., $-\infty < t < \infty$). Consequently, the (two-sided) spectrum, which depends on the waveshape from $t = -\infty$ to $t = \infty$, may be evaluated in terms of Fourier coefficients.

THEOREM. *If a waveform is periodic with period T_0 , the spectrum of the waveform $w(t)$ is*

$$W(f) = \sum_{n=-\infty}^{n=\infty} c_n \delta(f - nf_0) \quad (2-109)$$

where $f_0 = 1/T_0$ and c_n are the phasor Fourier coefficients of the waveform as given by Eq. (2–89).

PROOF.

$$w(t) = \sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_0 t}$$

Taking the Fourier transform of both sides, we obtain

$$\begin{aligned} W(f) &= \int_{-\infty}^{\infty} \left(\sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_0 t} \right) e^{-j\omega t} dt \\ &= \sum_{n=-\infty}^{n=\infty} c_n \int_{-\infty}^{\infty} e^{-j2\pi(f-nf_0)t} dt = \sum_{n=-\infty}^{n=\infty} c_n \delta(f - nf_0) \end{aligned}$$

where the integral representation for a delta function, Eq. (2-48), was used.

This theorem indicates that a periodic function *always* has a line (delta function) spectrum, with the lines being at $f = nf_0$ and having weights given by the c_n values. An illustration of that property was given by Example 2-5, where $c_1 = -jA/2$ and $c_{-1} = jA/2$ and the other c_n 's were zero. It is also obvious that there is no DC component, since there is no line at $f = 0$ (i.e., $c_0 = 0$). Conversely, if a function does not contain any periodic component, the spectrum will be continuous (no lines), except for a line at $f = 0$ when the function has a DC component.

It is also possible to evaluate the Fourier coefficients by sampling the Fourier transform of a pulse corresponding to $w(t)$ over a period. This is shown by the following theorem:

THEOREM. *If $w(t)$ is a periodic function with period T_0 and is represented by*

$$w(t) = \sum_{n=-\infty}^{n=\infty} h(t - nT_0) = \sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_0 t} \quad (2-110)$$

where

$$h(t) = \begin{cases} w(t), & |t| < \frac{T_0}{2} \\ 0, & t \text{ elsewhere} \end{cases} \quad (2-111)$$

then the Fourier coefficients are given by

$$c_n = f_0 H(nf_0) \quad (2-112)$$

where $H(f) = \mathcal{F}[h(t)]$ and $f_0 = 1/T_0$.

$$\text{Proof. } w(t) = \sum_{n=-\infty}^{\infty} h(t - nT_0) = \sum_{n=-\infty}^{\infty} h(t) * \delta(t - nT_0) \quad (2-113)$$

where $*$ denotes the convolution operation. Thus,

$$w(t) = h(t) * \sum_{n=-\infty}^{\infty} \delta(t - nT_0) \quad (2-114)$$

But the impulse train may itself be represented by its Fourier series[†]; that is,

$$\sum_{n=-\infty}^{\infty} \delta(t - nT_0) = \sum_{n=-\infty}^{\infty} c_n e^{jn\omega_0 t} \quad (2-115)$$

where all the Fourier coefficients are just $c_n = f_0$. Substituting Eq. (2-115) into Eq. (2-114), we obtain

$$w(t) = h(t) * \sum_{n=-\infty}^{\infty} f_0 e^{jn\omega_0 t} \quad (2-116)$$

Taking the Fourier transform of both sides of Eq. (2-116), we have

$$\begin{aligned} W(f) &= H(f) \sum_{n=-\infty}^{\infty} f_0 \delta(f - nf_0) \\ &= \sum_{n=-\infty}^{\infty} [f_0 H(nf_0)] \delta(f - nf_0) \end{aligned} \quad (2-117)$$

Comparing Eq. (2-117) with Eq. (2-109), we see that Eq. (2-112) follows.

This theorem is useful for evaluating the Fourier coefficients c_n when the Fourier transform of the fundamental pulse shape $h(t)$ for the periodic waveform is known or can be obtained easily from a Fourier transform table (e.g., Table 2–2).

Example 2-13 FOURIER COEFFICIENTS FOR A PERIODIC RECTANGULAR WAVE

Find the Fourier coefficients for the periodic rectangular wave shown in Fig. 2-12a, where T is the pulse width and $T_0 = 2T$ is the period. The complex Fourier coefficients, from Eq. (2-89), are

$$c_n = \frac{1}{T_0} \int_0^{T_0/2} A e^{-jn\omega_0 t} dt = j \frac{A}{2\pi n} (e^{-jn\pi} - 1) \quad (2-118)$$

which reduce, (using l'Hospital's rule for evaluating the indeterminant form for $n = 0$), to

$$c_n = \begin{cases} \frac{A}{2}, & n = 0 \\ -j \frac{A}{n\pi}, & n = \text{odd} \\ 0, & n \text{ otherwise} \end{cases} \quad (2-119)$$

See Example2_13.m for the evaluation of these FS coefficients and for a plot of the resulting FS.

[†] This is called the *Poisson sum formula*.

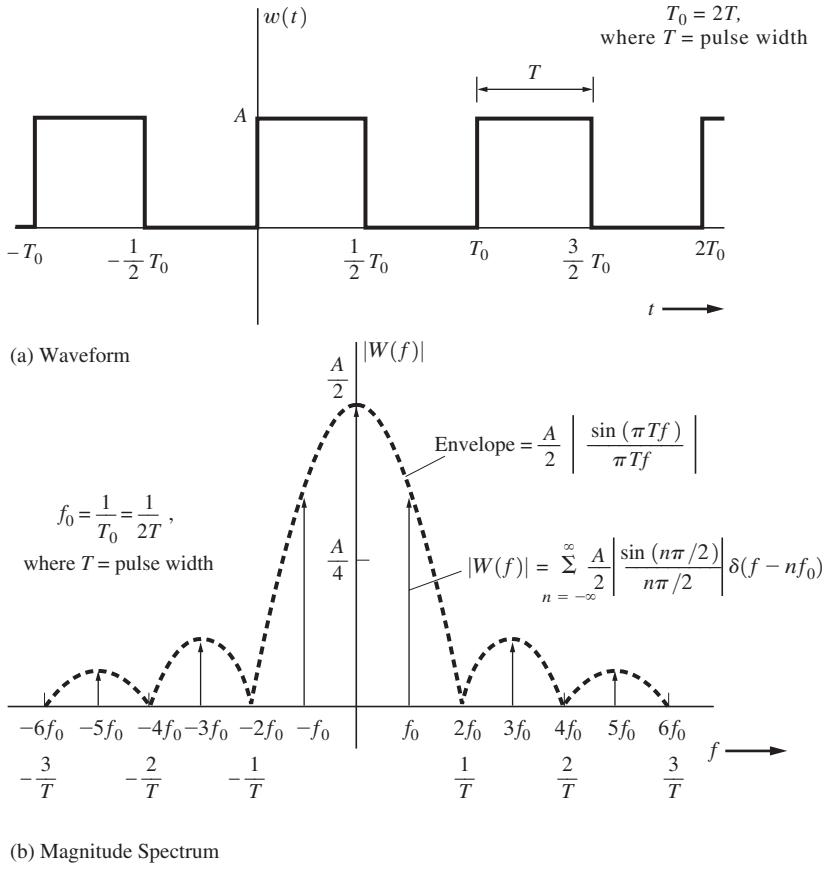


Figure 2-12 Periodic rectangular wave used in Example 2-13.

Equation (2-119) may be verified by using Eq. (2-112) and the result of Example 2-6, where $T_0 = 2T$. That is,

$$c_n = \frac{A}{T_0} V(nf_0) = \frac{A}{2} e^{-jn\pi/2} \frac{\sin(n\pi/2)}{n\pi/2} \quad (2-120)$$

which is identical to Eq. (2-119). It is realized that the DC value of the waveform is $c_0 = A/2$, which checks with the result by using Eq. (2-4).

Example 2-14 COMPARE A RECTANGULAR PULSE SPECTRUM WITH A SQUARE WAVE SPECTRUM

Note that this is a comparison of the spectrum for a nonperiodic waveform with that for a periodic waveform. The nonperiodic waveform has a continuous spectrum, whereas the periodic waveform has a discrete spectrum (i.e., delta functions).

The spectrum of the square wave is easily obtained from Eq. (2–109). The magnitude spectrum is illustrated by the solid lines in Fig. 2–12b. Since delta functions have infinite values, they cannot be plotted; but the weights of the delta functions can be plotted as shown by the dashed line in Fig. 2–12b. Also see Example 2–14.m

Now compare the spectrum for this periodic rectangular wave (solid lines in Fig. 2–12b) with the spectrum for the rectangular pulse shown in Fig. 2–6a. Note that the *spectrum for the periodic wave contains spectral lines*, whereas *the spectrum for the nonperiodic pulse is continuous*. Note that the envelope of the spectrum for both cases is the same $|(\sin x)/x|$ shape, where $x = \pi T f$. Consequently, the null bandwidth (for the envelope) is $1/T$ for both cases, where T is the pulse width. This is a basic property of digital signaling with rectangular pulse shapes. *The null bandwidth is the reciprocal of the pulse width.*

The other types of Fourier coefficients may also be obtained. Using Eqs. (2–101) and (2–102), we obtain the quadrature Fourier coefficients:

$$a_n = \begin{cases} \frac{A}{2}, & n = 0 \\ 0, & n > 0 \end{cases} \quad (2-121a)$$

$$b_n = \begin{cases} \frac{2A}{\pi n}, & n = \text{odd} \\ 0, & n = \text{even} \end{cases} \quad (2-121b)$$

Here all the $a_n = 0$, except for $n = 0$, because if the DC value were suppressed, the waveform would be an odd function about the origin. Using Eqs. (2–106) and (2–107), we find that the polar Fourier coefficients are

$$D_n = \begin{cases} \frac{A}{2}, & n = 0 \\ \frac{2A}{n\pi}, & n = 1, 3, 5, \dots \\ 0, & n \text{ otherwise} \end{cases} \quad (2-122)$$

and

$$\varphi_n = -90^\circ \text{ for } n \geq 1 \quad (2-123)$$

In communication problems the normalized average power is often needed, and for the case of periodic waveforms, it can be evaluated using Fourier series coefficients.

THEOREM. *For a periodic waveform $w(t)$, the normalized power is given by*

$$P_w = \langle w^2(t) \rangle = \sum_{n=-\infty}^{n=\infty} |c_n|^2 \quad (2-124)$$

where the $\{c_n\}$ are the complex Fourier coefficients for the waveform.

PROOF. For periodic $w(t)$, the Fourier series representation is valid over all time and may be substituted into Eq. (2-12) to evaluate the normalized (i.e., $R = 1$) power:

$$\begin{aligned} P_w &= \left\langle \left(\sum_n c_n e^{jn\omega_0 t} \right)^2 \right\rangle = \left\langle \sum_n \sum_m c_n c_m^* e^{jn\omega_0 t} e^{-jm\omega_0 t} \right\rangle \\ &= \sum_n \sum_m c_n c_m^* \langle e^{j(n-m)\omega_0 t} \rangle = \sum_n \sum_m c_n c_m^* \delta_{nm} = \sum_n |c_n|^2 \end{aligned}$$

or

$$P_w = \sum_n |c_n|^2 \quad (2-125)$$

Equation (2-124) is a special case of Parseval's theorem, Eq. (2-40), as applied to power signals.

EXAMPLE 2-15 AVERAGE POWER FOR A SQUARE WAVE

Using Eq. (2-125), evaluate the approximate average power for a square wave. Compare this approximate value of the power with the exact value. See Example2_15.m for the solution.

Power Spectral Density for Periodic Waveforms

THEOREM. For a periodic waveform, the power spectral density (PSD) is given by

$$\mathcal{P}(f) = \sum_{n=-\infty}^{n=\infty} |c_n|^2 \delta(f - nf_0) \quad (2-126)$$

where $T_0 = 1/f_0$ is the period of the waveform and the $\{c_n\}$ are the corresponding Fourier coefficients for the waveform.

PROOF. Let $w(t) = \sum_{-\infty}^{\infty} c_n e^{jn\omega_0 t}$. Then the autocorrelation function of $w(t)$ is

$$\begin{aligned} R(\tau) &= \langle w^*(t)w(t + \tau) \rangle \\ &= \left\langle \sum_{n=-\infty}^{\infty} c_n^* e^{-jn\omega_0 t} \sum_{m=-\infty}^{\infty} c_m e^{jm\omega_0(t+\tau)} \right\rangle \end{aligned}$$

or

$$R(\tau) = \sum_{n=-\infty}^{\infty} \sum_{m=-\infty}^{\infty} c_n^* c_m e^{jm\omega_0 \tau} \langle e^{j\omega_0(m-n)t} \rangle$$

But $\langle e^{j\omega_0(n-m)t} \rangle = \delta_{nm}$, so this reduces to

$$R(\tau) = \sum_{n=-\infty}^{\infty} |c_n|^2 e^{jn\omega_0 \tau} \quad (2-127)$$

The PSD is then

$$\begin{aligned}\mathcal{P}(f) &= \mathcal{F}[R(\tau)] = \mathcal{F}\left[\sum_{-\infty}^{\infty}|c_n|2_e j n \omega_0 \tau\right] \\ &= \sum_{-\infty}^{\infty}|c_n|^2 \mathcal{F}[e^{jn\omega_0\tau}] = \sum_{-\infty}^{\infty}|c_n|^2 \delta(f - nf_0)\end{aligned}\quad (2-128)$$

Equation (2–126) not only gives a way to evaluate the PSD for periodic waveforms, but also can be used to evaluate the bandwidths of the waveforms. For example, the frequency interval in which 90% of the waveform power was concentrated could be found.

Example 2–16 PSD FOR A SQUARE WAVE

The PSD for the periodic square wave shown in Fig. 2–12a will be found. Because the waveform is periodic, Eq. (2–126) can be used to evaluate the PSD. Consequently this problem becomes one of evaluating the FS coefficients. Furthermore, the FS coefficients for a square wave are given by Eq. (2–120). Thus,

$$\mathcal{P}(f) = \sum_{-\infty}^{\infty}\left(\frac{A}{2}\right)^2\left(\frac{\sin(n\pi/2)}{n\pi/2}\right)^2 \delta(f - nf_0) \quad (2-129)$$

This PSD is shown by the solid lines in Fig. 2–13 where the delta functions (which have infinite amplitudes) are represented with vertical lines that have length equal to the weight (i.e., area) of the corresponding delta function. Also, see Example2_16.m for a plot of the PSD.

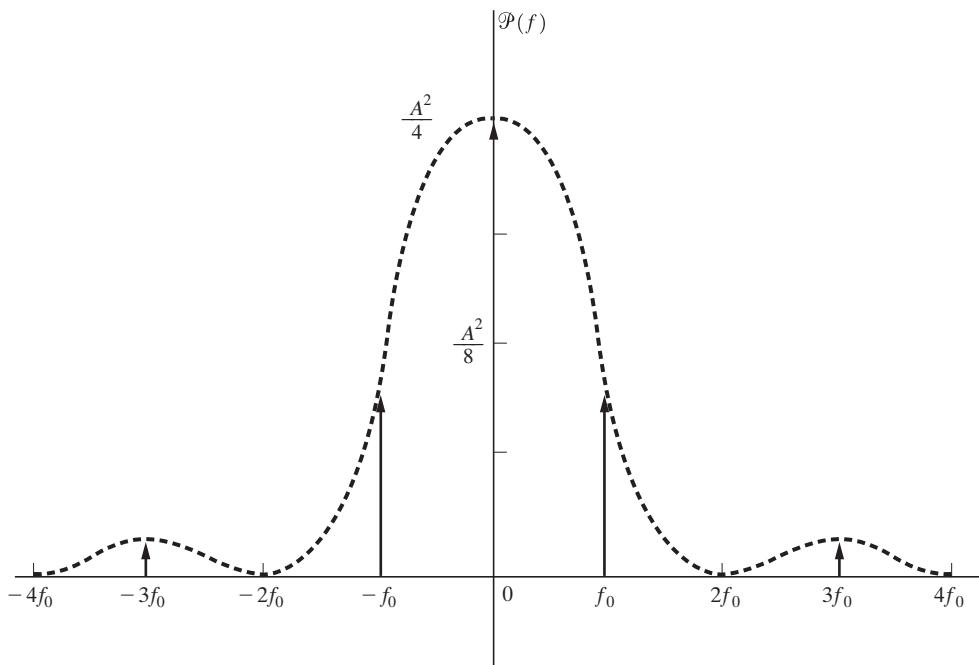


Figure 2–13 PSD for a square wave used in Example 2–16.

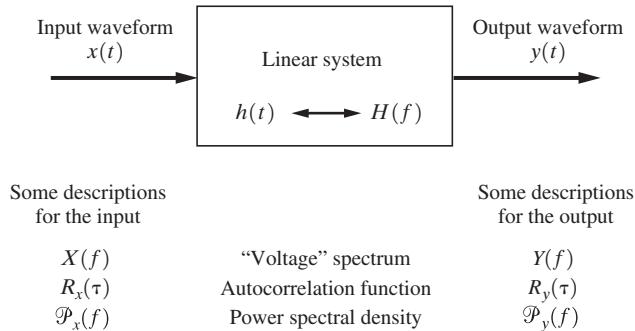


Figure 2-14 Linear system.

2-6 REVIEW OF LINEAR SYSTEMS

Linear Time-Invariant Systems

An electronic filter or system is *linear* when *superposition* holds—that is, when

$$y(t) = \mathcal{L}[a_1x_1(t) + a_2x_2(t)] = a_1\mathcal{L}[x_1(t)] + a_2\mathcal{L}[x_2(t)] \quad (2-130)$$

where $y(t)$ is the output and $x(t) = a_1x_1(t) + a_2x_2(t)$ is the input, as shown in Fig. 2-14. $\mathcal{L}[\cdot]$ denotes the linear (differential equation) system operator acting on $[\cdot]$. The system is said to be *time invariant* if, for any delayed input $x(t - t_0)$, the output is delayed by just the same amount $y(t - t_0)$. That is, the *shape* of the response is the same no matter when the input is applied to the system.

A detailed discussion of the theory and practice of linear systems is beyond the scope of this book. That would require a book in itself [Irwin, 1995, 2011]. However, some basic ideas that are especially relevant to communication problems will be reviewed here.

Impulse Response

The linear time-invariant system without delay blocks is described by a linear ordinary differential equation with constant coefficients and may be characterized by its impulse response $h(t)$. The *impulse response* is the solution to the differential equation when the forcing function is a Dirac delta function. That is, $y(t) = h(t)$ when $x(t) = \delta(t)$. In physical networks, the impulse response has to be *causal*. That is, $h(t) = 0$ for $t < 0$.[†] This impulse response may be used to obtain the system output when the input is *not* an impulse. In that case, a general waveform at the input may be approximated by[‡]

[†] The Paley–Wiener criterion gives the frequency domain equivalence for the causality condition of the time domain. It is that $H(f)$ must satisfy the condition

$$\int_{-\infty}^{\infty} \frac{|\ln |H(f)||}{1 + f^2} df < \infty$$

[‡] Δt corresponds to dx of Eq. (2-47).

$$x(t) = \sum_{-\infty}^{\infty} x(n \Delta t)[\delta(t - n \Delta t)] \Delta t \quad (2-131)$$

which indicates that samples of the input are taken at Δt -second intervals. Then, using the time-invariant and superposition properties, we find that the output is approximately

$$y(t) = \sum_{n=0}^{\infty} x(n \Delta t)[h(t - n \Delta t)] \Delta t \quad (2-132)$$

This expression becomes the exact result as Δt becomes zero. Letting $n \Delta t = \lambda$, we obtain

$$y(t) = \int_{-\infty}^{\infty} x(\lambda)h(t - \lambda) d\lambda \equiv x(t) * h(t) \quad (2-133)$$

An integral of this type is called the *convolution* operation, as first described by Eq. (2–62) in Sec. 2–2. That is, the output waveform for a time-invariant network can be obtained by convolving the input waveform with the impulse response for the system. Consequently, the impulse response can be used to characterize the response of the system in the time domain, as illustrated in Fig. 2–14.

Transfer Function

The spectrum of the output signal is obtained by taking the Fourier transform of both sides of Eq. (2–133). Using the convolution theorem of Table 2–1, we get

$$Y(f) = X(f)H(f) \quad (2-134)$$

or

$$H(f) = \frac{Y(f)}{X(f)} \quad (2-135)$$

where $H(f) = \mathcal{F}[h(t)]$ is said to be the *transfer function* or *frequency response* of the network. That is, the impulse response and frequency response are a Fourier transform pair:

$$h(t) \leftrightarrow H(f)$$

Of course, the transfer function $H(f)$ is, in general, a complex quantity and can be written in polar form as

$$H(f) = |H(f)| e^{j\angle H(f)} \quad (2-136)$$

where $|H(f)|$ is the *amplitude* (or *magnitude*) response and

$$\theta(f) = \angle H(f) = \tan^{-1} \left[\frac{\text{Im}\{H(f)\}}{\text{Re}\{H(f)\}} \right] \quad (2-137)$$

is the phase response of the network. Furthermore, since $h(t)$ is a real function of time (for real networks), it follows from Eqs. (2–38) and (2–39) that $|H(f)|$ is an even function of frequency and $\angle H(f)$ is an odd function of frequency.

The transfer function of a linear time-invariant network can be measured by using a sinusoidal testing signal that is swept over the frequency band of interest. For example, if

$$x(t) = A \cos \omega_0 t$$

then the output of the network will be

$$y(t) = A |H(f_0)| \cos [\omega_0 t + \angle H(f_0)] \quad (2-138)$$

where the amplitude and phase may be evaluated on an oscilloscope or by the use of a vector voltmeter.

If the input to the network is a periodic signal with a spectrum given by

$$X(f) = \sum_{n=-\infty}^{n=\infty} c_n \delta(f - nf_0) \quad (2-139)$$

where, from Eq. (2–109), $\{c_n\}$ are the complex Fourier coefficients of the input signal, the spectrum of the periodic output signal, from Eq. (2–134), is

$$Y(f) = \sum_{n=-\infty}^{n=\infty} c_n H(nf_0) \delta(f - nf_0) \quad (2-140)$$

We can also obtain the relationship between the power spectral density (PSD) at the input, $\mathcal{P}_x(f)$, and that at the output, $\mathcal{P}_y(f)$, of a linear time-invariant network.[†] From Eq. (2–66), we know that

$$\mathcal{P}_y(f) = \lim_{T \rightarrow \infty} \frac{1}{T} |Y_T(f)|^2 \quad (2-141)$$

Using Eq. (2–134) in a formal sense, we obtain

$$\mathcal{P}_y(f) = |H(f)|^2 \lim_{T \rightarrow \infty} \frac{1}{T} |X_T(f)|^2$$

or

$$\mathcal{P}_y(f) = |H(f)|^2 \mathcal{P}_x(f) \quad (2-142)$$

Consequently, the *power transfer function* of the network is

$$G_h(f) = \frac{\mathcal{P}_y(f)}{\mathcal{P}_x(f)} = |H(f)|^2 \quad (2-143)$$

A rigorous proof of this theorem is given in Chapter 6.

[†] The relationship between the input and output autocorrelation functions $R_x(\tau)$ and $R_y(\tau)$ can also be obtained as shown by (6–82).


Example 2–17 RC LOW-PASS FILTER

An *RC* low-pass filter is shown in Fig. 2–15, where $x(t)$ and $y(t)$ denote the input and output voltage waveforms, respectively. Using Kirchhoff's law for the sum of voltages around a loop, we get


$$x(t) = Ri(t) + y(t)$$

where $i(t) = C dy(t)/dt$, or


$$RC \frac{dy}{dt} + y(t) = x(t) \quad (2-144)$$

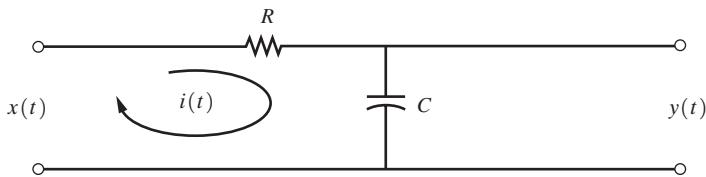

(a) RC Low-Pass Filter

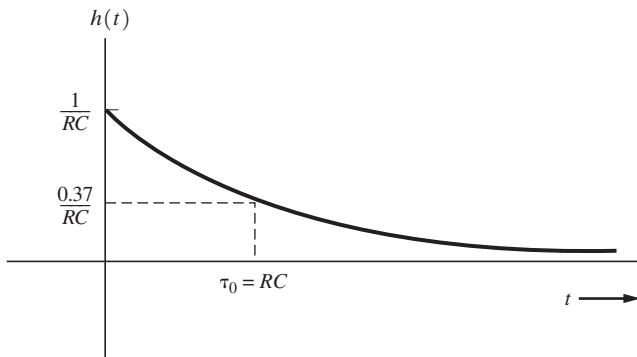

(b) Impulse Response

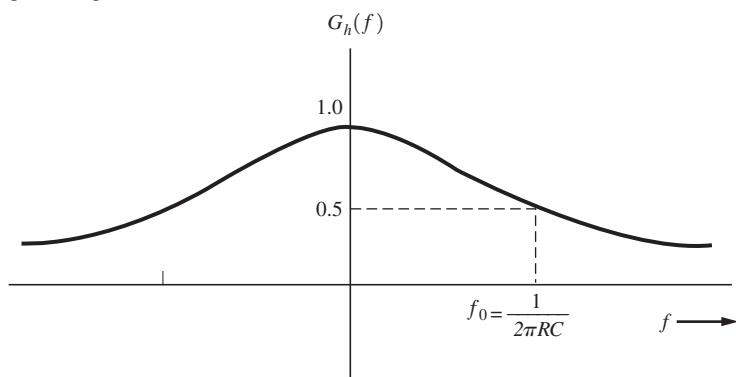

(c) Power Transfer Function

Figure 2–15 Characteristics of an *RC* low-pass filter.

From Table 2–1, we find that the Fourier transform of this differential equation is

$$RC(j2\pi f)y(f) + Y(f) = X(f)$$

Thus, the transfer function for this network is

$$H(f) = \frac{Y(f)}{X(f)} = \frac{1}{1 + j(2\pi RC)f} \quad (2-145)$$

Using the Fourier transform of Table 2–2, we obtain the impulse response

$$h(t) = \begin{cases} \frac{1}{\tau_0} e^{-t/\tau_0}, & t \geq 0 \\ 0, & t < 0 \end{cases} \quad (2-146)$$

where $\tau_0 = RC$ is the *time constant*. When we combine Eqs. (2–143) and (2–145), the power transfer function is

$$G_h(f) = |H(f)|^2 = \frac{1}{1 + (f/f_0)^2} \quad (2-147)$$

where $f_0 = 1/(2\pi RC)$.

The impulse response and the power transfer function are shown in Fig. 2–15. See Example2_17.m for detailed plot. Note that the value of the power gain at $f = f_0$ (called the 3-dB frequency) is $G_h(f_0) = \frac{1}{2}$. That is, the frequency component in the output waveform at $f = f_0$ is attenuated by 3 dB compared with that at $f = 0$. Consequently, $f = f_0$ is said to be the 3-dB bandwidth of this filter. The topic of bandwidth is discussed in more detail in Sec. 2–9.

Distortionless Transmission

In communication systems, a *distortionless channel* is often desired. This implies that the channel output is just proportional to a delayed version of the input

$$y(t) = Ax(t - T_d) \quad (2-148)$$

where A is the gain (which may be less than unity) and T_d is the delay.

The corresponding requirement in the frequency domain specification is obtained by taking the Fourier transform of both sides of Eq. (2–148).

$$Y(f) = AX(f)e^{-j2\pi fT_d}$$

Thus, for distortionless transmission, we require that the transfer function of the channel be given by

$$H(f) = \frac{Y(f)}{X(f)} = Ae^{-j2\pi fT_d} \quad (2-149)$$

which implies that, to have no distortion at the output of a linear time-invariant system, two requirements must be satisfied:

1. The amplitude response is flat. That is,

$$|H(f)| = \text{constant} = A \quad (2-150\text{a})$$

2. The phase response is a *linear* function of frequency. That is,

$$\theta(f) = \angle H(f) = -2\pi f T_d \quad (2-150\text{b})$$

When the first condition is satisfied, there is no *amplitude distortion*. When the second condition is satisfied, there is no *phase distortion*. For distortionless transmission, both conditions must be satisfied.

The second requirement is often specified in an equivalent way by using the time delay. We define the *time delay* of the system as

$$T_d(f) = -\frac{1}{2\pi f} \theta(f) = -\frac{1}{2\pi f} \angle H(f) \quad (2-151)$$

By Eq. (2–149), it is required that

$$T_d(f) = \text{constant} \quad (2-152)$$

for distortionless transmission. If $T_d(f)$ is not constant, there is phase distortion, because the phase response, $\theta(f)$, is not a linear function of frequency.

Example 2–18 DISTORTION CAUSED BY A FILTER

Let us examine the distortion effect caused by the *RC* low-pass filter studied in Example 2–17. From Eq. (2–145), the amplitude response is

$$|H(f)| = \frac{1}{\sqrt{1 + (f/f_0)^2}} \quad (2-153)$$


and the phase response is

$$\theta(f) = \angle H(f) = -\tan^{-1}(f/f_0) \quad (2-154)$$


The corresponding time delay function is

$$T_d(f) = \frac{1}{2\pi f} \tan^{-1}(f/f_0) \quad (2-155)$$


These results are plotted in Fig. 2–16, as indicated by the solid lines. See Example2_18.m for detailed plots. This filter will produce some distortion since Eqs. (2–150a) and (2–150b) are not satisfied. The dashed lines give the equivalent results for the distortionless filter. Several observations can be made. First, if the signals involved have spectral components at frequencies below $0.5f_0$, the filter will provide almost distortionless transmission, because the error in the magnitude response (with respect to the distortionless case) is less than 0.5 dB and the error in the phase is less than 2.1 (8%). For $f < f_0$, the magnitude error is less than 3 dB and

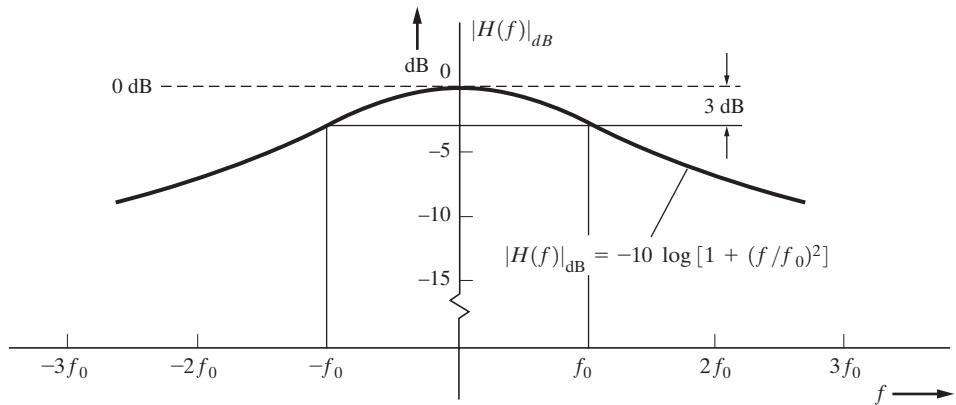

(a) Magnitude Response

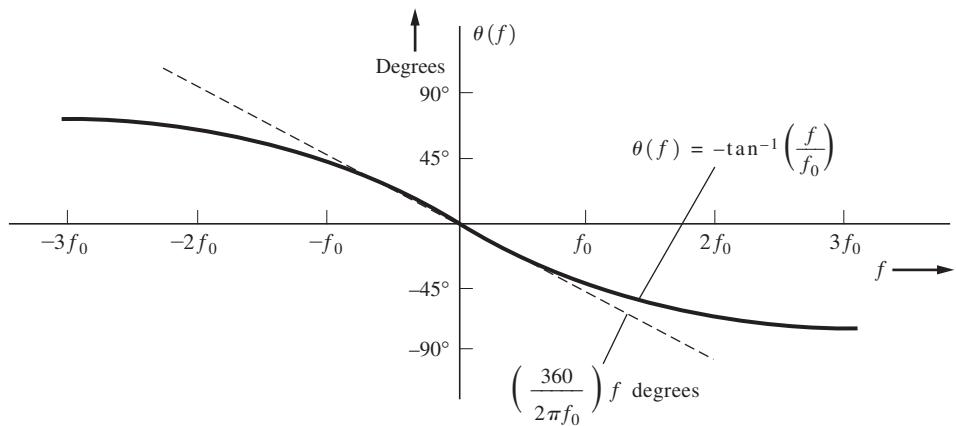

(b) Phase Response

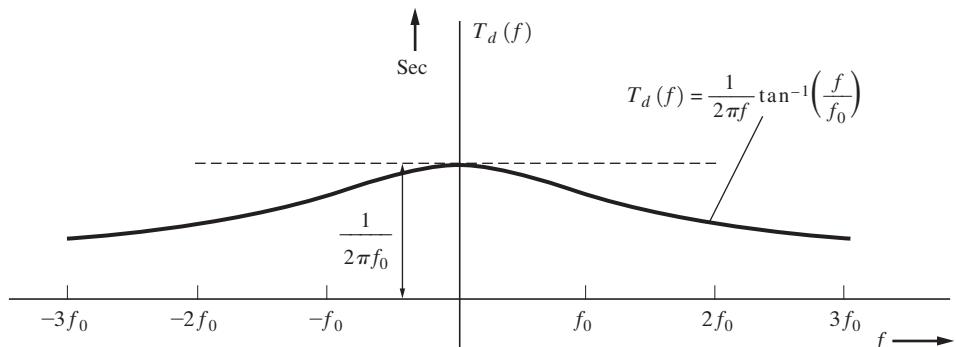

(c) Time Delay

Figure 2–16 Distortion caused by an RC low-pass filter.

the phase error is less than 12.3° (27%). In engineering practice, this type of error is often considered to be tolerable. Waveforms with spectral components below $0.50f_0$ would be delayed by approximately $1/(2\pi f_0)$ s, as shown in Fig. 2–16c. That is, if the cutoff frequency of the filter was $f_0 = 1$ kHz, the delay would be 0.2 ms. For wideband signals, the higher-frequency components would be delayed less than the lower-frequency components.

Distortion of Audio, Video, and Data Signals

A linear time-invariant system will produce amplitude distortion if the amplitude response is not flat, and it will produce phase distortion (i.e., differential time delays) if the phase response is not a linear function of frequency.

In audio applications, the human ear is relatively sensitive to amplitude distortion, but insensitive to phase distortion. This is because a phase error of 15° for an audio filter at 15 kHz would produce a variation (error) in time delay of about 3μ sec. Comparing this error to the duration of a spoken syllable, which is in the range of 0.01 to 0.1 sec, the time delay error due to poor filter phase response is negligible. However, an amplitude error of 3 dB would certainly be detectable by the human ear. Thus, in linear distortion specifications of high-fidelity audio amplifiers, one is interested primarily in nonflat magnitude frequency response characteristics and is not too concerned about the phase response characteristics.

In analog video applications, the opposite is true: The phase response becomes the dominant consideration. This is because the human eye is more sensitive to time delay errors, which result in smearing of an object's edges, rather than errors in amplitude (intensity).

For data signals, a linear filter can cause a data pulse in one time slot to smear into adjacent time slots causing intersymbol interference (ISI). Filter design for minimum ISI is discussed in Sec. 3–6.

If the system is nonlinear or time varying, other types of distortion will be produced. As a result, there are new frequency components at the output that are not present at the input. In some communication applications, the new frequencies are actually a desired result and, consequently, might not be called distortion. The reader is referred to Sec. 4–3 for a study of these effects. In Sec. 4–5, the time delay of bandpass filters is studied, and formulas for group delay and phase delay are developed.

2–7 BANDLIMITED SIGNALS AND NOISE

A bandlimited waveform has nonzero spectra only within a certain frequency band. In this case we can apply some powerful theorems—in particular, the sampling theorem—to process the waveform. As shown in Chapter 3, these ideas are *especially applicable to digital communication problems*.

First we examine some properties of bandlimited signals. Then we develop the sampling and dimensionality theorems.

Bandlimited Waveforms

DEFINITION. A waveform $w(t)$ is said to be (absolutely) *bandlimited* to B hertz if

$$W(f) = F[w(t)] = 0, \quad \text{for } |f| \geq B \quad (2-156)$$

DEFINITION. A waveform $w(t)$ is (absolutely) *time limited* if

$$w(t) = 0, \quad \text{for } |t| > T \quad (2-157)$$

THEOREM. An absolutely bandlimited waveform cannot be absolutely time limited, and vice versa.

This theorem is illustrated by the spectrum for the rectangular pulse waveform of Example 2-6. A relatively simple proof of the theorem can be obtained by contradiction [Wozencraft and Jacobs, 1965].

The theorem raises an engineering paradox. We know that a bandlimited waveform cannot be time limited. However, we believe that a physical waveform is time limited because the device that generates the waveform was built at some finite past time and the device will decay at some future time (thus producing a time-limited waveform). This paradox is resolved by realizing that we are modeling a physical process with a mathematical model and perhaps the assumptions in the model are not satisfied—although we believe them to be satisfied. That is, there is some uncertainty as to what the actual time waveform and corresponding spectrum look like—especially at extreme values of time and frequency—owing to the inaccuracies of our measuring devices. This relationship between the physical process and our mathematical model is discussed in an interesting paper by David Slepian [1976]. Although the signal may not be absolutely bandlimited, it may be bandlimited for all practical purposes in the sense that the amplitude spectrum has a negligible level above a certain frequency.

Another interesting theorem states that if $w(t)$ is absolutely *bandlimited*, it is an *analytic* function. An analytic function is a function that possesses finite-valued derivatives when they are evaluated for any finite value of t . This theorem may be proved by using a Taylor series expansion [Wozencraft and Jacobs, 1965].

Sampling Theorem

The sampling theorem is one of the most useful theorems, since it applies to digital communication systems. The sampling theorem is another application of an orthogonal series expansion.

SAMPLING THEOREM. Any physical waveform may be represented over the interval $-\infty < t < \infty$ by

$$w(t) = \sum_{n=-\infty}^{n=\infty} a_n \frac{\sin \{\pi f_s[t - (n/f_s)]\}}{\pi f_s[t - (n/f_s)]} \quad (2-158)$$

where

$$a_n = f_s \int_{-\infty}^{\infty} w(t) \frac{\sin \{\pi f_s[t - (n/f_s)]\}}{\pi f_s[t - (n/f_s)]} dt \quad (2-159)$$

and f_s is a parameter that is assigned some convenient value greater than zero. Furthermore, if $w(t)$ is bandlimited to B hertz and $f_s \geq 2B$, then Eq. (2–158) becomes the sampling function representation, where

$$a_n = w(n/f_s) \quad (2-160)$$

That is, for $f_s \geq 2B$, the orthogonal series coefficients are simply the values of the waveform that are obtained when the waveform is sampled every $1/f_s$ seconds.

The series given by Eqs. (2–158) and (2–160) is sometimes called the *cardinal series*. It has been known by mathematicians since at least 1915 [Whittaker, 1915] and to engineers since the pioneering work of Shannon, who connected the series with information theory [Shannon, 1949]. An excellent tutorial paper on this topic has been published in the *Proceedings of the IEEE* [Jerri, 1977].

Example 2–19 SAMPLING THEOREM FOR A RECTANGULAR PULSE

Using Eq. (2–158), evaluate the waveform generated by the Sampling Theorem for the case of samples taken from a rectangular pulse. See Example2_19.m for the solution.

PROOF OF THE SAMPLING THEOREM.

We need to show that

$$\varphi_n(t) = \frac{\sin \{ \pi f_s [t - (n/f_s)] \}}{\pi f_s [t - (n/f_s)]} \quad (2-161)$$

form a set of the orthogonal functions. From Eq. (2–77), we must demonstrate that Eq. (2–161) satisfies

$$\int_{-\infty}^{\infty} \varphi_n(t) \varphi_m^*(t) dt = K_n \delta_{nm} \quad (2-162)$$

Using Parseval's theorem, Eq. (2–40), we see that the left side becomes

$$\int_{-\infty}^{\infty} \varphi_n(t) \varphi_m^*(t) dt = \int_{-\infty}^{\infty} \Phi_n(f) \Phi_m^*(f) df \quad (2-163)$$

where

$$\Phi_n(f) = \mathcal{F}[\varphi_n(t)] = \frac{1}{f_s} \Pi\left(\frac{f}{f_s}\right) e^{-j2\pi(nf/f_s)} \quad (2-164)$$

Hence, we have

$$\int_{-\infty}^{\infty} \varphi_n(t) \varphi_m^*(t) dt = \frac{1}{(f_s)^2} \int_{-\infty}^{\infty} \left[\Pi\left(\frac{f}{f_s}\right) \right]^2 e^{-j2\pi(n-m)f/f_s} df$$

$$= \frac{1}{(f_s)^2} \int_{-f_s/2}^{f_s/2} e^{-j2m(n-m)(f/f_s)} df = \frac{1}{f_s} \delta_{nm} \quad (2-165)$$

Thus, the $\varphi_n(t)$, as given by (2-161), are orthogonal functions with $K_n = 1/f_s$. Using Eq. (2-84), we see that Eq. (2-159) follows. Furthermore, we will show that Eq. (2-160) follows for the case of $w(t)$ being absolutely bandlimited to B hertz with $f_s \geq 2B$. Using Eq. (2-84) and Parseval's theorem, Eq. (2-40), we get

$$\begin{aligned} a_n &= f_s \int_{-\infty}^{\infty} w(t) \varphi_n^*(t) dt \\ &= f_s \int_{-\infty}^{\infty} W(f) \Phi_n^*(f) df \end{aligned} \quad (2-166)$$

Substituting (2-164) yields

$$a_n = \int_{-f_s/2}^{f_s/2} W(f) e^{+j2\pi f(n/f_s)} df \quad (2-167)$$

But because $W(f)$ is zero for $|f| > B$, where $B \leq f_s/2$, the limits on the integral may be extended to $(-\infty, \infty)$ without changing the value of the integral. This integral with infinite limits is just the inverse Fourier transform of $W(f)$ evaluated at $t = n/f_s$. Consequently, $a_n = w(n/f_s)$, which is (2-160).

From Eq. (2-167), it is obvious that the minimum sampling rate allowed to reconstruct a bandlimited waveform without error is given by

$$(f_s)_{\min} = 2B \quad (2-168)$$

This is called the *Nyquist frequency*.

Now we examine the problem of reproducing a bandlimited waveform by using N sample values. Suppose that we are only interested in reproducing the waveform over a T_0 -s interval as shown in Fig. 2-17a. Then we can truncate the sampling function series of Eq. (2-158) so that we include only N of the $\varphi_n(t)$ functions that have their peaks within the T_0 interval of interest. That is, the waveform can be approximately reconstructed by using N samples. The equation is

$$w(t) \approx \sum_{n=n_1}^{n=n_1+N} a_n \varphi_n(t) \quad (2-169)$$

where the $\{\varphi_n(t)\}$ are described by Eq. (2-161). Figure 2-17b shows the reconstructed waveform (solid line), which is obtained by the weighted sum of time-delayed $(\sin x)/x$ waveforms (dashed lines), where the weights are the sample values $a_n = w(n/f_s)$ denoted by the dots. The waveform is bandlimited to B hertz with the sampling frequency $f_s \geq 2B$. The sample values may be saved, for example, in the memory of a digital computer, so that the waveform may be reconstructed at a later time or the values may be transmitted over a communication system for waveform reconstruction at the receiving end. In either case, the waveform may be

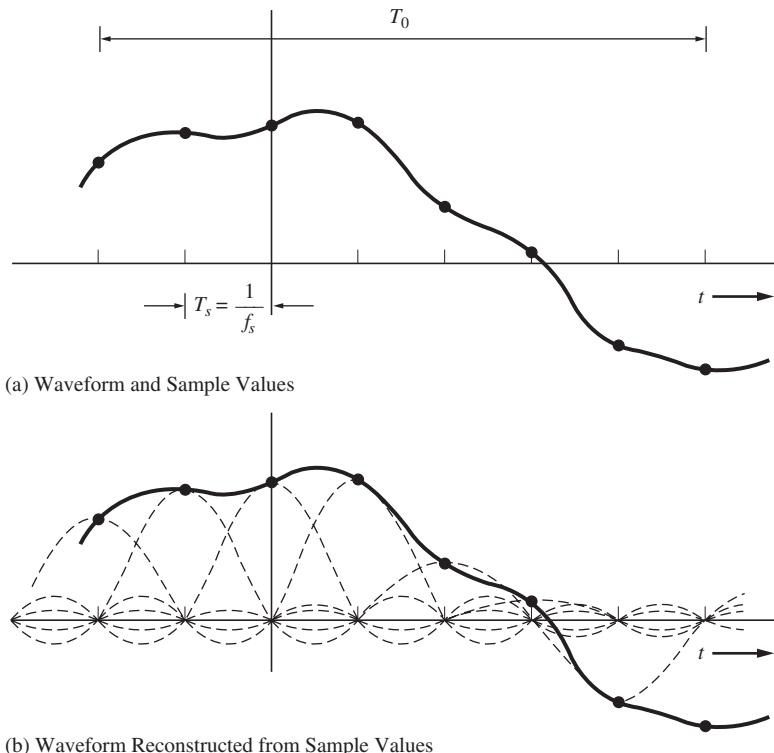


Figure 2-17 Sampling theorem.

reconstructed from the sample values by the use of Eq. (2-169). That is, each sample value is multiplied by the appropriate $(\sin x)/x$ function, and these weighted $(\sin x)/x$ functions are summed to give the original waveform. This procedure is illustrated in Fig. 2-17b. The minimum number of sample values that are needed to reconstruct the waveform is

$$N = \frac{T_0}{1/f_s} = f_s T_0 \geq 2BT_0 \quad (2-170)$$

and there are N orthogonal functions in the reconstruction algorithm. We can say that N is the number of dimensions needed to reconstruct the T_0 -second approximation of the waveform.

Impulse Sampling and Digital Signal Processing

Another useful orthogonal series is the *impulse-sampled series*, which is obtained when the $(\sin x)/x$ orthogonal functions of the sampling theorem are replaced by an orthogonal set of delta (impulse) functions. The impulse-sampled series is also identical to the impulse-sampled waveform $w_s(t)$: Both can be obtained by multiplying the unsampled waveform by a unit-weight impulse train, yielding

$$\begin{aligned}
 w_s(t) &= w(t) \sum_{n=-\infty}^{\infty} \delta(t - nT_s) \\
 &= \sum_{n=-\infty}^{\infty} w(nT_s) \delta(t - nT_s)
 \end{aligned} \tag{2-171}$$


where $T_s = 1/f_s$, as illustrated in Fig. 2-18.[†] In the figure, the weight (area) of each impulse, $w(nT_s)$, is indicated by the height of the impulse.

The spectrum for the impulse-sampled waveform $w_s(t)$ can be evaluated by substituting the Fourier series of the (periodic) impulse train into Eq. (2-171), giving


$$w_s(t) = w(t) \sum_{n=-\infty}^{\infty} \frac{1}{T_s} e^{jn\omega_s t} \tag{2-172}$$

Taking the Fourier transform of both sides of this equation, we get

$$\begin{aligned}
 W_s(f) &= \frac{1}{T_s} W(f) * \mathcal{F}\left[\sum_{n=-\infty}^{\infty} e^{jn\omega_s t}\right] = \frac{1}{T_s} W(f) * \sum_{n=-\infty}^{\infty} \mathcal{F}[e^{jn\omega_s t}] \\
 &= \frac{1}{T_s} W(f) * \sum_{n=-\infty}^{\infty} \delta(f - nf_s)
 \end{aligned}$$

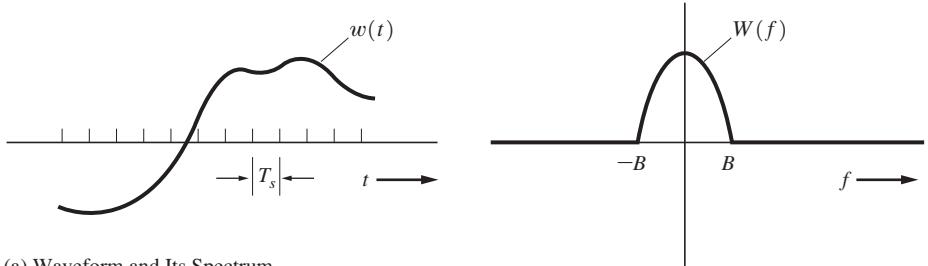

(a) Waveform and Its Spectrum

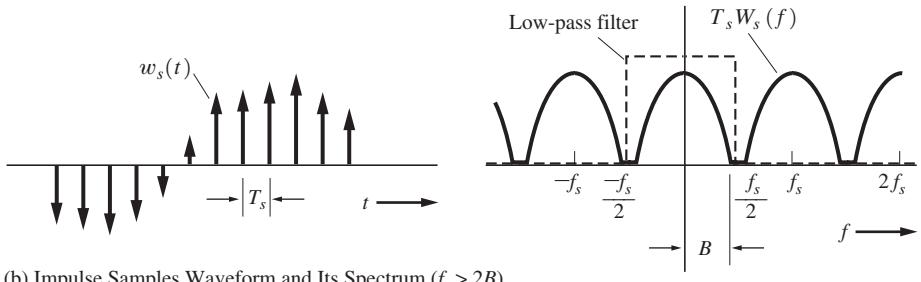

(b) Impulse Samples Waveform and Its Spectrum ($f_s > 2B$)

Figure 2-18 Impulse sampling.

[†] For illustrative purposes, we assume that $W(f)$ is real.

or

$$W_s(f) = \frac{1}{T_s} \sum_{n=-\infty}^{\infty} W(f - nf_s) \quad (2-173)$$

As is exemplified in Fig. 2–18b, *the spectrum of the impulse sampled signal is the spectrum of the unsampled signal that is repeated every f_s Hz, where f_s is the sampling frequency (samples/sec).*[†] This quite significant result is one of the basic principles of *digital signal processing* (DSP).

Note that this technique of impulse sampling may be used to translate the spectrum of a signal to another frequency band that is centered on some harmonic of the sampling frequency. A more general circuit that can translate the spectrum to any desired frequency band is called a *mixer*. Mixers are discussed in Sec. 4–11.

If $f_s \geq 2B$, as illustrated in Fig. 2–18, the replicated spectra do not overlap, and the original spectrum can be regenerated by chopping $W_s(f)$ off above $f_s/2$. Thus, $w(t)$ can be reproduced from $w_s(t)$ simply by passing $w_s(t)$ through an ideal low-pass filter that has a cutoff frequency of $f_c = f_s/2$, where $f_s \geq 2B$.

If $f_s < 2B$ (i.e., the waveform is undersampled), the spectrum of $w_s(t)$ will consist of overlapped, replicated spectra of $w(t)$, as illustrated in Fig. 2–19.[‡] The spectral overlap or tail inversion, is called *aliasing* or *spectral folding*.[§] In this case, the low-pass filtered version of $w_s(t)$ will not be exactly $w(t)$. The recovered $w(t)$ will be distorted because of the aliasing. This distortion can be eliminated by *prefiltering* the original $w(t)$ before sampling, so that the prefiltered $w(t)$ has no spectral components above $|f| = f_s/2$. The prefiltering still produces distortion on the recovered waveform because the prefilter chops off the spectrum of the original $w(t)$ above $|f| = f_s/2$. However, from Fig. 2–19, it can be shown that if a prefilter is used, the recovered waveform obtained from the low-pass version of the sample signal will have one-half of the error energy compared to the error energy that would be obtained without using the presampling filter.

A physical waveform $w(t)$ has finite energy. From Eqs. (2–42) and (2–43), it follows that the magnitude spectrum of the waveform, $|W(f)|$, has to be negligible for $|f| > B$, where B is an appropriately chosen positive number. Consequently, from a practical standpoint, the physical waveform is essentially bandlimited to B Hz, where B is chosen to be large enough so that the error energy is below some specified amount.

Dimensionality Theorem

The sampling theorem may be restated in a more general way called the *dimensionality theorem* (which is illustrated in Fig. 2–17).


THEOREM. *When BT_0 is large, a real waveform may be completely specified by*

$$N = 2BT_0 \quad (2-174)$$


[†] In Chapter 3, this result is generalized to that of instantaneous sampling with a pulse train consisting of pulses with finite width and arbitrary shape (instead of impulses). This is called pulse amplitude modulation (PAM) of the instantaneous sample type.

[‡] For illustrative purposes, we assume that $W(f)$ is real.

[§] $f_s/2$ is the folding frequency, where f_s is the sampling frequency. For no aliasing, $f_s > 2B$ is required, where $2B$ is the Nyquist frequency.

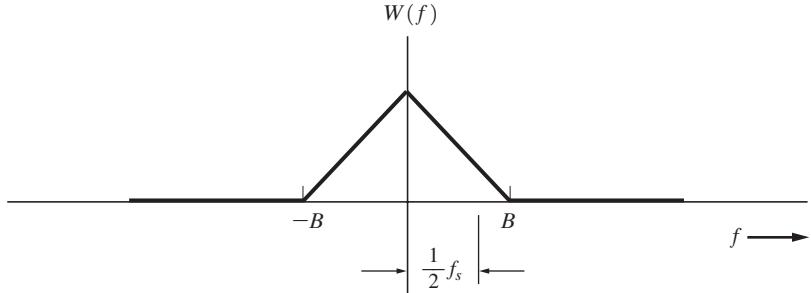

(a) Spectrum of Unsampled Waveform

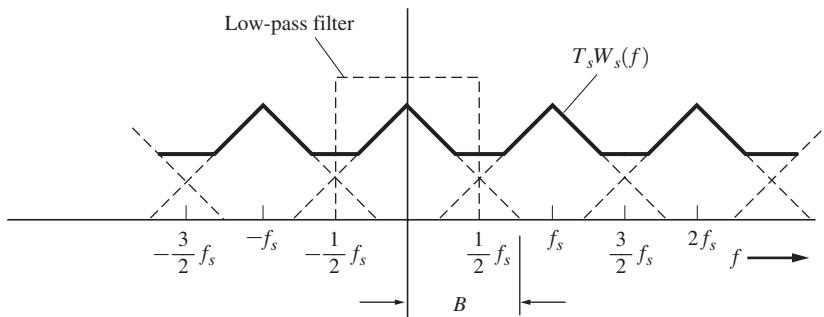(b) Spectrum of Impulse Sampled Waveform ($f_s < 2B$)**Figure 2-19** Undersampling and aliasing.

independent pieces of information that will describe the waveform over a T_0 interval. N is said to be the number of dimensions required to specify the waveform, and B is the absolute bandwidth of the waveform. [Shannon, 1949; Wozencraft and Jacobs, 1965; Wyner and Shamai (Shitz), 1998].

The dimensionality theorem of Eq. (2-174) says simply that the information which can be conveyed by a bandlimited waveform or a bandlimited communication system is proportional to the product of the bandwidth of that system and the time allowed for transmission of the information. The *dimensionality theorem has profound implications in the design and performance of all types of communication systems.* For example, in radar systems, it is well known that the time–bandwidth product of the received signal needs to be large for superior performance.

There are two distinct ways in which the dimensionality theorem can be applied. First, if any bandlimited waveform is given and we want to store some numbers in a table (or a computer memory bank) that could be used to reconstruct the waveform over a T_0 -s interval, at

least N numbers must be stored, and furthermore, the average sampling rate must be at least the Nyquist rate. That is,[†]

$$f_s \geq 2B \quad (2-175)$$

Thus, in this first type of application, the dimensionality theorem is used to calculate the number of storage locations (amount of memory) required to represent a waveform.

The *second* type of application is the inverse type of problem. Here the dimensionality theorem is used to estimate the bandwidth of waveforms. This application is discussed in detail in Chapter 3, Sec. 3–4, where the dimensionality theorem is used to give a lower bound for the bandwidth of digital signals.

2–8 DISCRETE FOURIER TRANSFORM[‡]

With the convenience of personal computers and the availability of digital signal-processing integrated circuits, the spectrum of a waveform can be easily approximated by using the discrete Fourier transform (DFT). Here we show how the DFT can be used to compute samples of the continuous Fourier transform (CFT), Eq. (2–26), and values for the complex Fourier series coefficients of Eq. (2–94).

DEFINITION. The *discrete Fourier transform (DFT)* is defined by

$$X(n) = \sum_{k=0}^{k=N-1} x(k)e^{-j(2\pi/N)nk} \quad (2-176)$$

where $n = 0, 1, 2, \dots, N - 1$, and the *inverse discrete Fourier transform (IDFT)* is defined by

$$x(k) = \frac{1}{N} \sum_{n=0}^{n=N-1} X(n)e^{j(2\pi/N)nk} \quad (2-177)$$

where $k = 0, 1, 2, \dots, N - 1$.

Time and frequency do not appear explicitly, because Eqs. (2–176) and (2–177) are just definitions implemented on a digital computer to compute N values for the DFT and IDFT, respectively. One should be aware that other authors may use different (equally valid) definitions. For example, a $1/\sqrt{N}$ factor could be used on the right side of Eq. (2–176) if the $1/N$ factor of Eq. (2–177) is replaced by $1/\sqrt{N}$. This produces a different scale factor when the DFT is related to the CFT. Also, the signs of the exponents in Eq. (2–176) and (2–177) could be exchanged. This would reverse the spectral samples along the frequency axis. The fast Fourier transform (FFT) is a fast algorithm for evaluating the DFT [Ziemer, Tranter, and Fannin, 1998].

[†] If the spectrum of the waveform being sampled has a line at $f = +B$, there is some ambiguity as to whether the line is included within bandwidth B . The line is included by letting $f_s > 2B$ (i.e., dropping the equality sign).

[‡] The *fast Fourier transform (FFT)* algorithms are fast ways of computing the DFT. The number of complex multiplications required for the DFT is N^2 , whereas the FFT (with N selected to be a power of 2) requires only $(N/2)\log_2 N$ complex multiplications. Thus, the FFT provides an improvement factor of $2N/(\log_2 N)$ compared with the DFT, which gives an improvement of 113.8 for an $N = 512$ point FFT.

MATLAB uses the DFT and IDFT definitions that are given by Eqs. (2–176) and (2–177), except that the elements of the vector are indexed 1 through N instead of 0 through $N - 1$. Thus, the MATLAB FFT algorithms are related to Eqs. (2–176) and (2–177) by

$$\mathbf{X} = fft(\mathbf{x}) \quad (2-178)$$

and

$$\mathbf{x} = ifft(\mathbf{X}) \quad (2-179)$$

where \mathbf{x} is an N -element vector corresponding to samples of the waveform and \mathbf{X} is the N -element DFT vector. N is chosen to be a power of 2 (i.e., $N = 2^m$, where m is a positive integer). If other FFT software is used, the user should be aware of the specific definitions that are implemented so that the results can be interpreted properly.

Two important applications of the DFT will be studied. The first application uses the DFT to approximate the spectrum $W(f)$; that is, the DFT is employed to approximate the continuous Fourier transform of $w(t)$. The approximation is given by Eq. (2–184) and illustrated by Example 2–20. The second application uses the DFT to evaluate the complex Fourier series coefficients c_n . The result is given by Eq. (2–187) and illustrated by Example 2–21.

Using the DFT to Compute the Continuous Fourier Transform

The relationship between the DFT, as defined by Eq. (2–176), and the CFT will now be examined. It involves three concepts: windowing, sampling, and periodic sample generation. These are illustrated in Fig. 2–20, where the left side is time domain and the right side is the corresponding frequency domain. Suppose that the CFT of a waveform $w(t)$ is to be evaluated by use of the DFT. The time waveform is first windowed (truncated) over the interval $(0, T)$ so that only a finite number of samples, N , are needed. The windowed waveform, denoted by the subscript w , is

$$w_w(t) = \begin{cases} w(t), & 0 \leq t \leq T \\ 0, & t \text{ elsewhere} \end{cases} = w(t) \Pi\left(\frac{t - (T/2)}{T}\right) \quad (2-180)$$

The Fourier transform of the windowed waveform is

$$W_w(f) = \int_{-\infty}^{\infty} w_w(t) e^{-j2\pi f t} dt = \int_0^T w(t) e^{-j2\pi f t} dt \quad (2-181)$$

Now we approximate the CFT by using a finite series to represent the integral, where $t = k \Delta t$, $f = n/T$, $dt = \Delta t$, and $\Delta t = T/N$. Then

$$W_w(f)|_{f=n/T} \approx \sum_{k=0}^{N-1} w(k \Delta t) e^{-j(2\pi/N)nk} \Delta t \quad (2-182)$$

Comparing this result with Eq. (2–176), we obtain the relation between the CFT and DFT; that is,

$$W_w(f)|_{f=n/T} \approx \Delta t X(n) \quad (2-183)$$

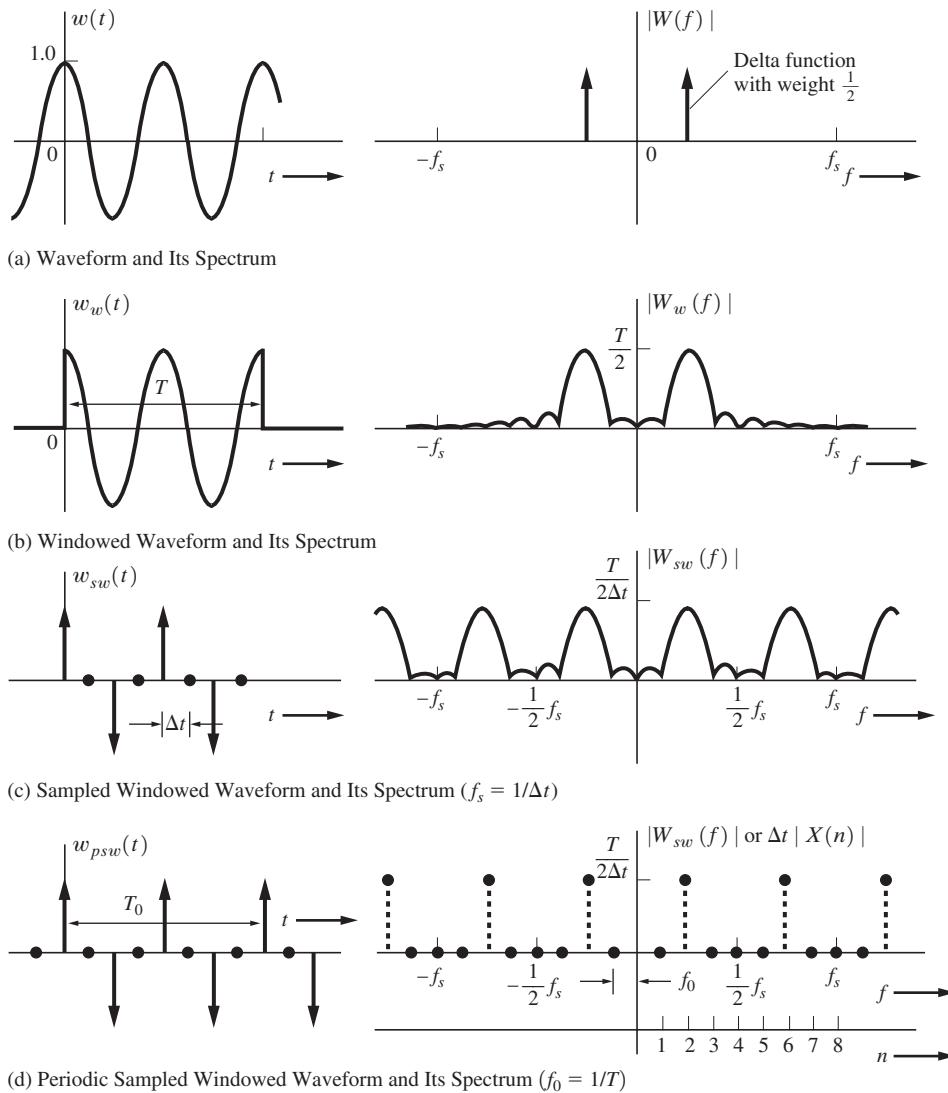


Figure 2-20 Comparison of CFT and DFT spectra.

where $f = n/T$ and $\Delta t = T/N$. The sample values used in the DFT computation are $x(k) = w(k \Delta t)$, as shown in the left part of Fig. 2-20c. Also, because $e^{-j(2\pi/N)nk}$ of Eq. (2-176) is periodic in n —in other words, the same values will be repeated for $n = N, N + 1, \dots$ as were obtained for $n = 0, 1, \dots$ —it follows that $X(n)$ is periodic (although only the first N values are returned by DFT computer programs, since the others are just repetitions). Another way of seeing that the DFT (and the IDFT) are periodic is to recognize that because samples are used, the discrete transform is an example of impulse sampling, and consequently, the spectrum must be periodic about the sampling frequency, $f_s = 1/\Delta t = N/T$ (as illustrated in Fig. 2-18 and

again in Figs. 2–20c and d). Furthermore, if the spectrum is desired for negative frequencies—the computer returns $X(n)$ for the positive n values of 0, 1, ..., $N - 1$ —Eq. (2–183) must be modified to give spectral values over the entire fundamental range of $-f_s/2 < f < f_s/2$. Thus, for positive frequencies we use

$$W_w(f)|_{f=n/T} \approx \Delta t X(n), \quad 0 \leq n < \frac{N}{2} \quad (2-184a)$$

and for negative frequencies we use

$$W_w(f)|_{f=(n-N)/T} \approx \Delta t X(n), \quad \frac{N}{2} < n < N \quad (2-184b)$$

In a similar way, the relationship between the *inverse CFT* and the inverse DFT is described by Eq. (2–207).

Figure 2–20 illustrates the fact that if one is not careful, the DFT may give significant errors when it is used to approximate the CFT. The errors are due to a number of factors that may be categorized into three basic effects: *leakage*, *aliasing*, and the *picket-fence effect*.

The first effect is caused by windowing in the time domain. In the frequency domain, this corresponds to convolving the spectrum of the unwindowed waveform with the spectrum (Fourier transform) of the window function. This spreads the spectrum of the frequency components of $w(t)$, as illustrated in Fig. 2–20b, and causes each frequency component to “leak” into adjacent frequencies. The leakage may produce errors when the DFT is compared with the CFT. The effect can be reduced by increasing the window width T or, equivalently, increasing N for a given Δt . Window shapes other than the rectangle can also be used to reduce the sidelobes in the spectrum of the window function [Harris, 1978; Ziemer, Tranter, and Fannin, 1998]. Large periodic components in $w(t)$ cause more leakage, and if these components are known to be present, they might be eliminated before evaluating the DFT in order to reduce leakage.

From our previous study of sampling, it is known that the spectrum of a sampled waveform consists of replicating the spectrum of the unsampled waveform about harmonics of the sampling frequency. If $f_s < 2B$, where $f_s = 1/\Delta t$ and B is the highest significant frequency component in the unsampled waveform, aliasing errors will occur. The second effect, aliasing error, can be decreased by using a higher sampling frequency or a presampling low-pass filter. Note that the highest frequency component that can be evaluated with an N -point DFT is $f = f_s/2 = N/(2T)$.

The third type of error, the *picket-fence effect*, occurs because the N -point DFT cannot resolve the spectral components any closer than the spacing $\Delta f = 1/T$. Δf can be decreased by increasing T . If the data length is limited to T_0 seconds, where $T_0 \leq T$, T may be extended by adding zero-value sampling points. This is called *zero-padding* and will reduce Δf to produce better spectral resolution.

The computer cannot compute values that are infinite; therefore, the DFT will approximate Dirac delta functions by finite-amplitude pulses. However, the weights of the delta functions can be computed accurately by using the DFT to evaluate the Fourier series coefficients. This is demonstrated in Example 2–21.

In summary, several fundamental concepts apply when one uses the DFT to evaluate the CFT. First, the waveform is windowed over a $(0, T)$ interval so that a *finite* number of

samples is obtained. Second, the DFT and the IDFT are periodic with periods $f_s = 1/\Delta t$ and T , respectively. The parameters Δt , T , and N are selected with the following considerations in mind:

- Δt is selected to satisfy the Nyquist sampling condition, $f_s = 1/\Delta t > 2B$, where B is the highest frequency in the waveform. Δt is the time between samples and is called the *time resolution* as well. Also, $t = k\Delta t$.
- T is selected to give the desired *frequency resolution*, where the frequency resolution is $\Delta f = 1/T$. Also, $f = n/T$.
- N is the number of data points and is determined by $N = T/\Delta t$.

N depends on the values used for Δt and T . The computation time increases as N is increased.[†] The N -point DFT gives the spectra of N frequencies over the frequency interval $(0, f_s)$ where $f_s = 1/\Delta t = N/T$. Half of this frequency interval represents positive frequencies and half represents negative frequencies, as described by Eq. (2–184). This is illustrated in the following example.

Example 2–20 USING THE FFT TO CALCULATE SPECTRA

Using the FFT, Eq. (2–178), evaluate the magnitude spectrum and the phase spectrum for a rectangular pulse. See Example2_20.m for the solution. Table 2–3 lists this MATLAB file. The computed results are shown in Fig. 2–21. Note that Eqs. (2–178) and (2–183) are used to relate the FFT results to the spectrum (i.e., the Continuous Fourier Transform). The parameters M , $tend$, and T are selected so that the computed magnitude and phase-spectral results match the true spectrum of the rectangular pulse as given by Eqs. (2–59) and (2–60) of Example 2–6. (T in Example 2–6 is equivalent to $tend$ in Table 2–3.)

The rectangular pulse is not absolutely bandlimited. However, for a pulse width of $tend = 1$, the magnitude spectrum becomes relatively small at $5/tend = 5\text{Hz} = B$. Thus, we need to sample the waveform at a rate of $2B = 10\text{Hz}$ or greater. For $T = 10$ and $N = 128$, $\Delta t = 0.08$ or $f_s = 1/\Delta t = 12.8\text{Hz}$. Therefore, the values of T and N have been selected to satisfy the Nyquist rate of $f_s > 2B$. The frequency resolution is $\Delta f = 1/T = 0.1\text{Hz}$. Consequently, a good spectral representation is obtained by using the FFT.

In the bottom plot of Fig. 2–21, the magnitude spectrum is shown over the whole range of the FFT vector—that is, for $0 < f < f_s$, where $f_s = 12.8\text{Hz}$. Because Eq. (2–184b) was not used in the MATLAB program, the plot for $0 < f < 6.8$ ($f_s/2 = 6.8\text{Hz}$) corresponds to the magnitude spectrum of the CFT over positive frequencies, and the plot for $6.4 < f < 12.8$ corresponds to the negative frequencies of the CFT. The reader should try other values of M , $tend$, and T to see how leakage, aliasing, and picket-fence errors become large if the parameters are not carefully selected. Also, note that significant errors occur if $tend = T$. Why?

[†] The *fast Fourier transform* (FFT) algorithms are fast ways of computing the DFT. The number of complex multiplications required for the DFT is N^2 , whereas the FFT (with N selected to be a power of 2) requires only $(N/2)\log_2 N$ complex multiplications. Thus, the FFT provides an improvement factor of $2N/(\log_2 N)$ compared with the DFT, which gives an improvement of 113.8 for an $N = 512$ point FFT.

TABLE 2-3 MATLAB LISTING FOR CALCULATING THE SPECTRUM OF A RECTANGULAR PULSE, USING THE FFT

```

File: Example2_20.m for Example 2-20
clear;
% Using the DFT, calculate the spectrum for a rectangular pulse.
% Let tend be the end of the step.
M = 7;
N = 2^M;
n = 0:1:N-1;
tend = 1;
T = 10;
dt = T/N;
t = n*dt;
% Creating time waveform
w = zeros(length(t),1);
for (i = 1:length(w))
    if (t(i) <= tend)
        w(i) = 1;
    end;
end;
% Calculating FFT
W = dt*fft(w);
f = n/T;
% Calculating position of 4th NULL
pos = INDEX(f,4/tend);
subplot(411)
plot(t,w);
axis([0 T 0 1.5]);
xlabel('t (sec) ->');
ylabel('w(t)');
title('Time Waveform');
subplot(412);
plot(f(1:pos),abs(W(1:pos)));
xlabel('f (Hz) ->');
ylabel('W(f)');
title--e('Magnitude Spectrum out to 4th Null');
subplot(413);
plot(f(1:pos),180/pi*angle(W(1:pos)));
xlabel('f (Hz) ->');
ylabel('theta(f) (degrees)');
title('Phase Spectrum out to 4th Null');
grid;
subplot(414);
plot(f,abs(W));
xlabel('f (Hz) ->');
ylabel('W(f)');
title('Magnitude Spectrum over whole FFT frequency range');

```

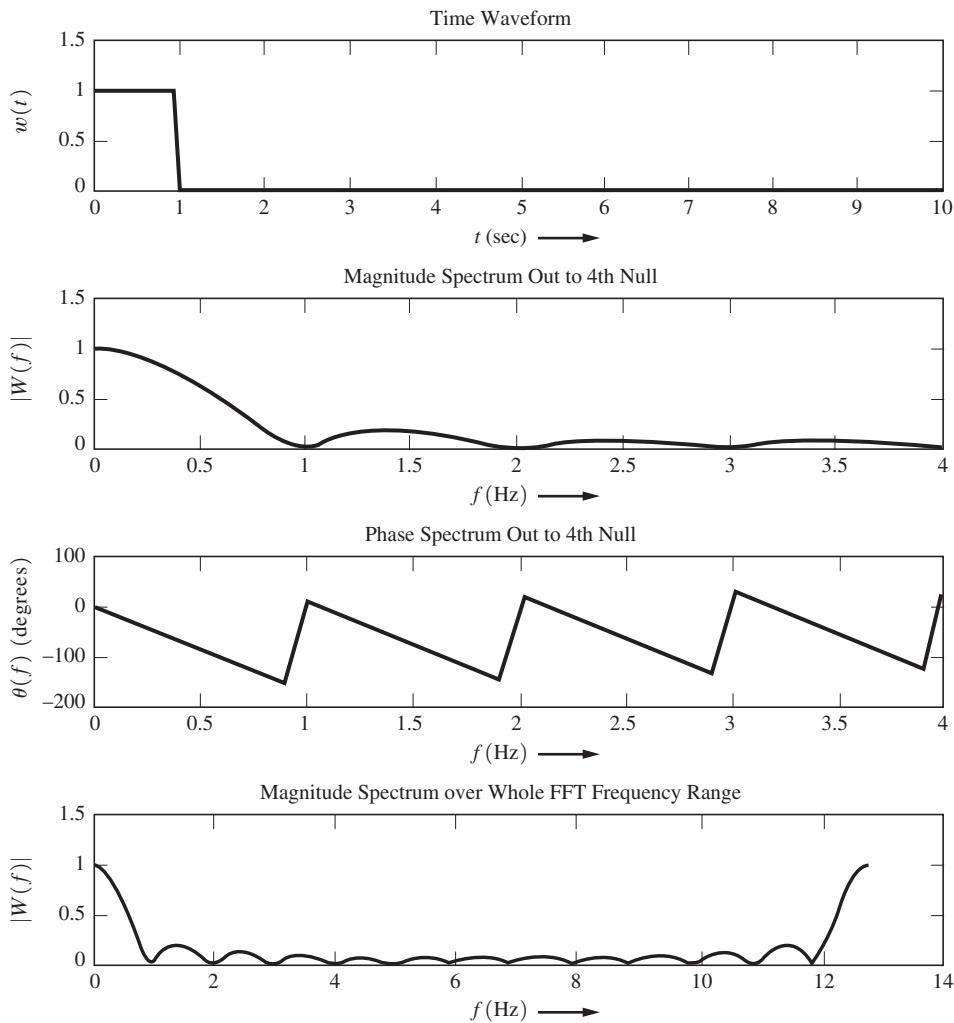


Figure 2-21 Spectrum for a rectangular pulse, using the MATLAB FFT.
(See Example2_20.m for the MATLAB file.)

Using the DFT to Compute the Fourier Series

The DFT may be also used to evaluate the coefficients for the complex Fourier series. From Eq. (2-89),

$$c_n = \frac{1}{T} \int_0^T w(t) e^{-j2\pi n f_0 t} dt$$

We approximate this integral by using a finite series, where $t = k \Delta t$, $f_0 = 1/T$, $dt = \Delta t$, and $\Delta t = T/N$. Then

$$c_n \approx \frac{1}{T} \sum_{k=0}^{N-1} w(k \Delta t) e^{-j(2\pi/N)nk} \Delta t \quad (2-185)$$

Using Eq. (2-176), we find that the Fourier series coefficient is related to the DFT by

$$c_n \approx \frac{1}{N} X(n) \quad (2-186)$$

The DFT returns $X(n)$ values for $n = 0, 1, \dots, N - 1$. Consequently, Eq. (2-186) must be modified to give c_n values for negative n . For positive n , we use

$$c_n = \frac{1}{N} X(n), \quad 0 \leq n < \frac{N}{2} \quad (2-187a)$$

and for negative n we use

$$c_n = \frac{1}{N} X(N + n), \quad -\frac{N}{2} < n < 0 \quad (2-187b)$$

Example 2-21 USE THE FFT TO COMPUTE THE SPECTRUM OF A SINUSOID

Let

$$w(t) = 3 \sin(\omega_0 t + 20^\circ) \quad (2-188)$$

where $\omega_0 = 2\pi f_0$ and $f_0 = 10\text{Hz}$.

Because $w(t)$ is periodic, Eq. (2-109) is used to obtain the spectrum

$$W(f) = \Sigma c_n \delta(f - nf_0)$$

where $\{c_n\}$ are the complex Fourier series coefficients for $w(t)$. Furthermore, because $\sin(x) = (e^{jx} - e^{-jx})/(2j)$,

$$3 \sin(\omega_0 t + 20^\circ) = \left(\frac{3}{2j} e^{j20} \right) e^{j\omega_0 t} + \left(\frac{-3}{2j} e^{-j20} \right) e^{-j\omega_0 t}$$

Consequently, the FS coefficients are known to be

$$c_1 = \left(\frac{3}{2j} e^{j20} \right) = 1.5 \angle -70^\circ \quad (2-189a)$$

$$c_1 = \left(\frac{-3}{2j} e^{-j20} \right) = 1.5 \angle +70^\circ \quad (2-189b)$$

and the other c_n 's are zero. Now see if this known correct answer can be computed by using the DFT. See Example2_21.m for the solution. Referring to Fig. 2-22, we observe that MATLAB computes the FFT and plots the spectrum. The computed result checks with the known analytical result.

Note that δ functions cannot be plotted, because $\delta(0) = \infty$. Consequently, the weights of the δ functions are plotted instead, to indicate the magnitude spectra. Also, at frequencies where $|W(f)| = 0$, *any* value may be used for $\vartheta(f)$ because $W(f) = |W(f)|\angle\vartheta(f) = 0$

These results can also be compared with those of Example 2–5, where the spectrum for a sinusoid was obtained by the direct evaluation of the Fourier transform integral.

2–9 BANDWIDTH OF SIGNALS

The spectral width of signals and noise in communication systems is a very important concept, for two main reasons. First, more and more users are being assigned to increasingly crowded RF bands, so that the spectral width required for each one needs to be considered carefully. Second, the spectral width is important from the equipment design viewpoint, since the circuits need to have enough bandwidth to accommodate the signal but reject the noise. The question is, What is *bandwidth*? As we will see, there are numerous definitions of the term.

As long as we use the same definition when working with several signals and noise, we can compare their spectral widths by using the particular bandwidth definition that was selected. If we change definitions, “conversion factors” will be needed to compare the spectral widths that were obtained by using different definitions. Unfortunately, the conversion factors usually depend on the type of spectral *shape* involved [e.g., $(\sin x)/x$ type of spectrum or rectangular spectrum].

In engineering definitions, the bandwidth is taken to be the width of a *positive* frequency band. (We are describing the bandwidth of real signals or the bandwidth of a physical filter that has a real impulse response; consequently, the magnitude spectra of these waveforms are even about the origin $f = 0$.) In other words, the bandwidth would be $f_2 - f_1$, where $f_2 > f_1 \geq 0$ and f_2 and f_1 are determined by the particular definition that is used. For baseband waveforms or networks, f_1 is usually taken to be zero, since the spectrum extends down to DC ($f = 0$). For bandpass signals, $f_1 > 0$ and the band $f_1 < f < f_2$ encompasses the carrier frequency f_c of the signal. Recall that as we increase the “signaling speed” of a signal (i.e., decrease T) the spectrum gets wider. (See Fig. 2–6.) Consequently, for engineering definitions of bandwidth, we require the bandwidth to vary as $1/T$.

We will give six engineering definitions and one legal definition of bandwidth that are often used:

1. *Absolute bandwidth* is $f_2 - f_1$, where the spectrum is zero outside the interval $f_1 < f < f_2$ along the positive frequency axis.
2. *3-dB bandwidth* (or half-power bandwidth) is $f_2 - f_1$, where for frequencies inside the band $f_1 < f < f_2$, the magnitude spectra, say, $|H(f)|$, fall no lower than $1/\sqrt{2}$ times the maximum value of $|H(f)|$, and the maximum value occurs at a frequency inside the band.
3. *Equivalent noise bandwidth* is the width of a fictitious rectangular spectrum such that the power in that rectangular band is equal to the power associated with the actual spectrum over positive frequencies. From Eq. (2–142), the PSD is proportional to the square of the magnitude of the spectrum. Let f_0 be the frequency at which the

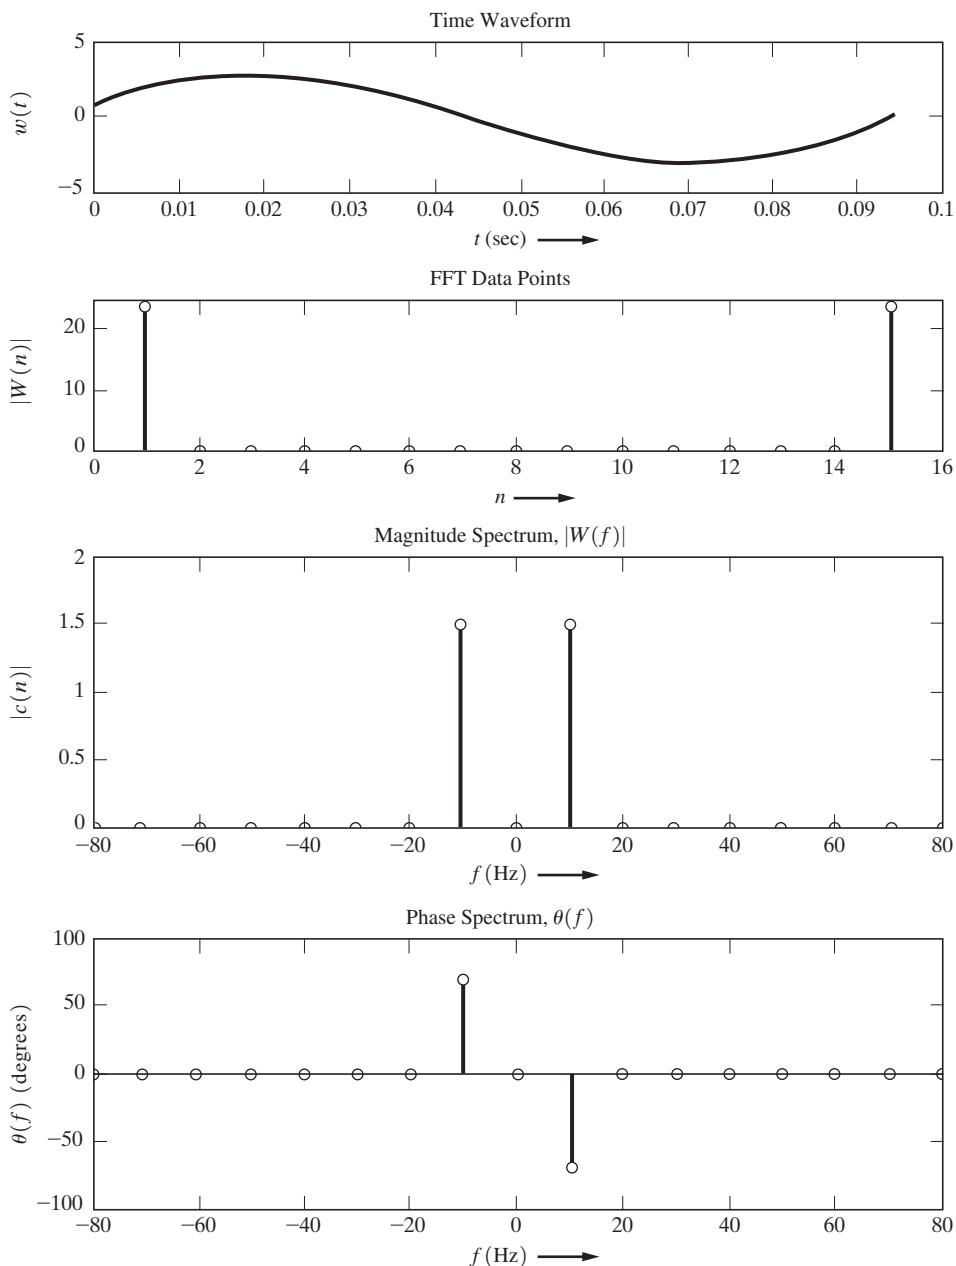


Figure 2–22 Spectrum of a sinusoid obtained by using the MATLAB FFT.
(See Example2_21.m for the MATLAB file.)

magnitude spectrum has a maximum; then the power in the equivalent rectangular band is proportional to

$$\text{equivalent power} = B_{\text{eq}} |H(f_0)|^2 \quad (2-190)$$

where B_{eq} is the equivalent bandwidth that is to be determined. The actual power for positive frequencies is proportional to

$$\text{actual power} = \int_0^\infty |H(f)|^2 df \quad (2-191)$$

Setting Eq. (2-190) equal to Eq. (2-191), the formula for the *equivalent noise bandwidth* is

$$B_{\text{eq}} = \frac{1}{|H(f_0)|^2} \int_0^\infty |H(f)|^2 df \quad (2-192)$$

4. *Null-to-null bandwidth* (or zero-crossing bandwidth) is $f_2 - f_1$, where f_2 is the first null in the envelope of the magnitude spectrum above f_0 and, for bandpass systems, f_1 is the first null in the envelope below f_0 , where f_0 is the frequency where the magnitude spectrum is a maximum.[†] For baseband systems, f_1 is usually zero.
5. *Bounded spectrum bandwidth* is $f_2 - f_1$ such that outside the band $f_1 < f < f_2$, the PSD, which is proportional to $|H(f)|^2$, must be down by at least a certain amount, say 50 dB, below the maximum value of the power spectral density.
6. *Power bandwidth* is $f_2 - f_1$, where $f_1 < f < f_2$ defines the frequency band in which 99% of the total power resides. This is similar to the FCC definition of *occupied bandwidth*, which states that the power above the upper band edge f_2 is $\frac{1}{2}\%$ and the power below the lower band edge is $\frac{1}{2}\%$, leaving 99% of the total power within the occupied band (*FCC Rules and Regulations*, Sec. 2.202, Internet search: 47 CFR 2.202).
7. *FCC bandwidth* is an authorized bandwidth parameter assigned by the FCC to specify the spectrum allowed in communication systems. When the FCC bandwidth parameter is substituted into the FCC formula, the minimum attenuation is given for the power level allowed in a 4-kHz band at the band edge with respect to the total average signal power. Sec. 21.106 (Internet search: 47 CFR 21.106) of the *FCC Rules and Regulations*: asserts, “For operating frequencies below 15 GHz, in any 4 kHz band, the center frequency of which is removed from the assigned frequency by more than 50 percent up to and including 250 percent of the authorized bandwidth, as specified by the following equation, but in no event less than 50 dB”:

$$A = 35 + 0.8(P - 50) + 10 \log_{10}(B) \quad (2-193)$$

(Attenuation greater than 80 dB is not required.) In this equation,

[†] In cases where there is no definite null in the magnitude spectrum, this definition is not applicable.

A = attenuation (in decibels) below the mean output power level,
 P = percent removed from the carrier frequency,

and

B = authorized bandwidth in megahertz.

The FCC definition (as well as many other legal rules and regulations) is somewhat obscure, but it will be interpreted in Example 2-22. It actually defines a spectral mask. That is, the spectrum of the signal must be less than or equal to the values given by this spectral mask at all frequencies. The FCC bandwidth parameter B is not consistent with the other definitions that are listed, in the sense that it is not proportional to $1/T$, the “signaling speed” of the corresponding signal [Amoroso, 1980]. Thus, the FCC bandwidth parameter B is a *legal* definition instead of an engineering definition. The *RMS bandwidth*, which is very useful in analytical problems, is defined in Chapter 6.

Example 2-22 BANDWIDTHS FOR A BPSK SIGNAL

A binary-phase-shift-keyed (BPSK) signal will be used to illustrate how the bandwidth is evaluated for the different definitions just given.

The BPSK signal is described by

$$s(t) = m(t) \cos \omega_c t \quad (2-194)$$

where $\omega_c = 2\pi f_c$, f_c being the carrier frequency (hertz), and $m(t)$ is a serial binary (± 1 values) modulating waveform originating from a digital information source such as a digital computer, as illustrated in Fig. 2-23a. Let us evaluate the spectrum of $s(t)$ for the worst case (the widest bandwidth).

The worst-case (widest-bandwidth) spectrum occurs when the digital modulating waveform has transitions that occur most often. In this case $m(t)$ would be a square wave, as shown in Fig. 2-23a. Here a binary 1 is represented by +1 V and a binary 0 by -1 V, and the signaling rate is $R = 1/T_b$ bits/s. The power spectrum of the square-wave modulation can be evaluated by using Fourier series analysis. Equations (2-126) and (2-120) give

$$\mathcal{P}_m(f) = \sum_{n=-\infty}^{\infty} |c_n|^2 \delta(f - nf_0) = \sum_{n=-\infty, n \neq 0}^{\infty} \left[\frac{\sin(n\pi/2)}{n\pi/2} \right]^2 \delta\left(f - n\frac{R}{2}\right) \quad (2-195)$$

where $f_0 = 1/(2T_b) = R/2$. The PSD of $s(t)$ can be expressed in terms of the PSD of $m(t)$ by evaluating the autocorrelation of $s(t)$ —that is,

$$\begin{aligned} R_s(\tau) &= \langle s(t)s(t + \tau) \rangle \\ &= \langle m(t)m(t + \tau) \cos \omega_c t \cos \omega_c(t + \tau) \rangle \\ &= \frac{1}{2} \langle m(t)m(t + \tau) \rangle \cos \omega_c \tau + \frac{1}{2} \langle m(t)m(t + \tau) \cos(2\omega_c t + \omega_c \tau) \rangle \end{aligned}$$

or

$$R_s(\tau) = \frac{1}{2} R_m(\tau) \cos \omega_c \tau + \frac{1}{2} \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} m(t)m(t + \tau) \cos(2\omega_c t + \omega_c \tau) dt \quad (2-196)$$

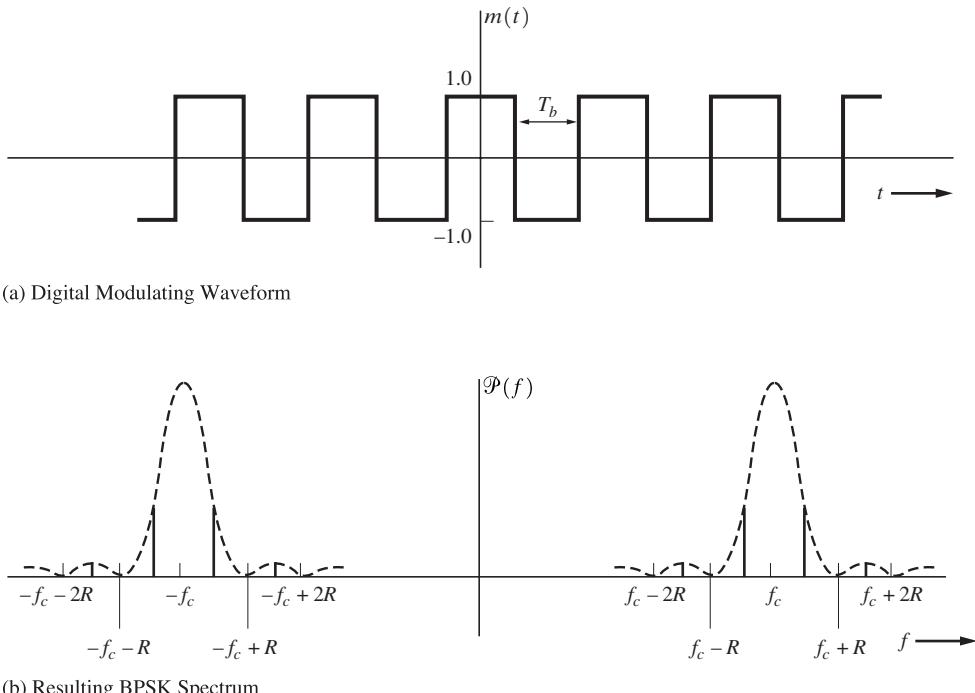


Figure 2-23 Spectrum of a BPSK signal.

The integral is negligible because $m(t)m(t+\tau)$ is constant over small time intervals, but $\cos(2\omega_c t + \omega_c \tau)$ has many cycles of oscillation, since $f_c \gg R$.[†] Any small area that is accumulated by the integral becomes negligible when divided by T , $T \rightarrow \infty$. Thus,

$$R_s(\tau) = \frac{1}{2} R_m(\tau) \cos \omega_c \tau \quad (2-197)$$

The PSD is obtained by taking the Fourier transform of both sides of Eq. (2-197). Using the real-signal frequency transform theorem (Table 2-1), we get

$$\mathcal{P}_s(f) = \frac{1}{4} [\mathcal{P}_m(f - f_c) + \mathcal{P}_m(f + f_c)] \quad (2-198)$$

Substituting Eq. (2-195) into Eq. (2-198), we obtain the PSD for the BPSK signal:

$$\begin{aligned} \mathcal{P}_s(f) &= \frac{1}{4} \sum_{\substack{n=-\infty \\ n \neq \infty}}^{\infty} \left[\frac{\sin(n\pi/2)}{n\pi/2} \right]^2 \\ &\times \{\delta[f - f_c - n(R/2)] + \delta[f + f_c - n(R/2)]\} \end{aligned} \quad (2-199)$$

This spectrum is also shown in Fig. 2-23b. See Example 2-22.m for a plot of Eq. (2-199).

The spectral shape that results from utilizing this worst-case deterministic modulation is essentially the same as that obtained when random data are used; however, for the random case,

[†] This is a consequence of the Riemann-Lebesgue lemma from integral calculus [Olmsted, 1961].

the spectrum is continuous. The result for the random data case, as worked out in Chapter 3 where $\mathcal{P}_m(f)$ is given by Eq. (3-41), is

$$\mathcal{P}(f) = \frac{1}{4} T_b \left[\frac{\sin \pi T_b(f - f_c)}{\pi T_b(f - f_c)} \right]^2 + \frac{1}{4} T_b \left[\frac{\sin \pi T_b(f + f_c)}{\pi T_b(f + f_c)} \right]^2 \quad (2-200)$$

when the data rate is $R = 1/T_b$ bits/sec. This is shown by the dashed curve in Fig. 2-23b.

The preceding derivation demonstrates that we can often use (deterministic) square-wave test signals to help us analyze a digital communication system, instead of using a more complicated random-data model.

The bandwidth for the BPSK signal will now be evaluated for each of the bandwidth definitions given previously. To accomplish this, the shape of the PSD for the positive frequencies is needed. From Eq. (2-200), it is

$$\mathcal{P}(f) = \left[\frac{\sin \pi T_b(f - f_c)}{\pi T_b(f - f_c)} \right]^2 \quad (2-201)$$

Substituting Eq. (2-201) into the definitions, we obtain the resulting BPSK bandwidths as shown in Table 2-4, except for the FCC bandwidth.

The relationship between the spectrum and the FCC bandwidth parameter is a little more tricky to evaluate. To do that, we need to evaluate the decibel attenuation

$$A(f) = -10 \log_{10} \left[\frac{P_{4\text{kHz}}(f)}{P_{\text{total}}} \right] \quad (2-202)$$

where $P_{4\text{kHz}}(f)$ is the power in a 4-kHz band centered at frequency f and P_{total} is the total signal power. The power in a 4-kHz band (assuming that the PSD is approximately constant across the 4-kHz bandwidth) is

$$P_{4\text{kHz}}(f) = 4000 \mathcal{P}(f) \quad (2-203)$$

and, using the definition of equivalent bandwidth, we find that the total power is

$$P_{\text{total}} = B_{\text{eq}} P(f_c) \quad (2-204)$$

TABLE 2-4 BANDWIDTHS FOR BPSK SIGNALING WHERE THE BIT RATE IS $R = 1/T_b$ BITS/S.

Definition Used	Bandwidth	Bandwidths (kHz) for $R = 9,600$ bits/s
1. Absolute bandwidth	∞	∞
2. 3-dB bandwidth	$0.88R$	8.45
3. Equivalent noise bandwidth	$1.00R$	9.60
4. Null-to-null bandwidth	$2.00R$	19.20
5. Bounded spectrum bandwidth (50 dB)	$201.04R$	1,930.0
6. Power bandwidth	$20.56R$	197.4

where the spectrum has a maximum value at $f = f_c$. With the use of these two equations, Eq. (2-202) becomes

$$A(f) = -10 \log_{10} \left[\frac{4000 \mathcal{P}(f)}{B_{\text{eq}} \mathcal{P}(f_c)} \right] \quad (2-205)$$

where $A(f)$ is the decibel attenuation of power measured in a 4-kHz band at frequency f compared with the total average power level of the signal. For the case of BPSK signaling, using Eq. (2-201), we find that the decibel attenuation is

$$A(f) = -10 \log_{10} \left\{ \frac{4000}{R} \left[\frac{\sin \pi T_b(f - f_c)}{\pi T_b(f - f_c)} \right]^2 \right\} \quad (2-206)$$

where $R = 1/T_b$ is the data rate. If we attempt to find the value of R such that $A(f)$ will fall below the specified FCC spectral envelope shown in Fig. 2-24 ($B = 30$ MHz), we will find that R is so small that there will be numerous zeros in the $(\sin x)/x$ function of Eq. (2-206) within the desired frequency range, -50 MHz $< (f - f_c) < 50$ MHz. This is difficult to plot, so by

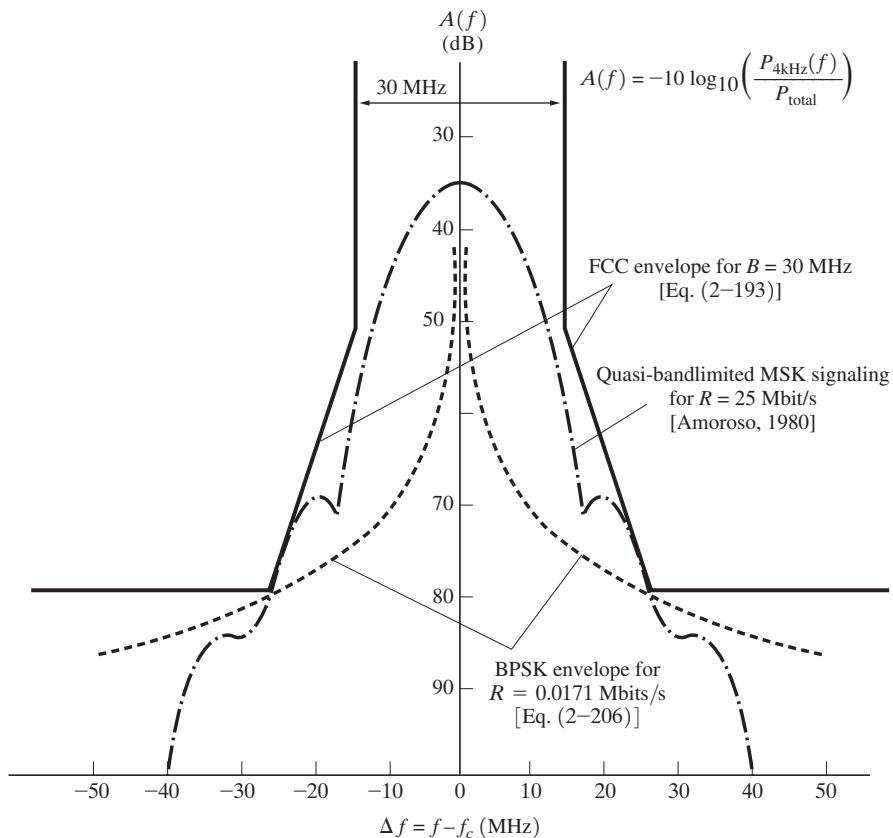


Figure 2-24 FCC-allowed envelope for $B = 30$ MHz.

replacing $\sin \pi T(f - f_c)$ with its maximum value (unity) we plot the envelope of $A(f)$ instead. The resulting BPSK envelope curve for the decibel attenuation is shown in Fig. 2–24, where $R = 0.0171 \text{ Mbits/s}$.

It is obvious that the data rate allowed for a BPSK signal to meet the FCC $B = 30\text{-MHz}$ specification is ridiculously low, because the FCC bandwidth parameter specifies an almost absolutely bandlimited spectrum. To signal with a reasonable data rate, the pulse shape used in the transmitted signal must be modified from a rectangular shape (that gives the BPSK signal) to a rounded pulse such that the bandwidth of the transmitted signal will be almost absolutely bandlimited. Recalling our study of the sampling theorem, we realize that $(\sin x)/x$ pulse shapes are prime candidates, since they have an absolutely bandlimited spectrum. However, the $(\sin x)/x$ pulses are not absolutely timelimited, so that this exact pulse shape cannot be used. Frank Amoroso and others have studied the problem, and a quasi-bandlimited version of the $(\sin x)/x$ pulse shape has been proposed [Amoroso, 1980]. The decibel attenuation curve for this type of signaling, shown in Fig. 2–24, is seen to fit very nicely under the allowed FCC spectral envelope curve for the case of $R = 25 \text{ Mbits/s}$. The allowable data rate of 25 Mbits/s is a fantastic improvement over the $R = 0.0171 \text{ Mbits/s}$ that was allowed for BPSK. It is also interesting to note that analog pulse shapes [$(\sin x)/x$ type] are required instead of a digital (rectangular) pulse shape, which is another way of saying that *it is vital for digital communication engineers to be able to analyze and design analog systems as well as digital systems.*

2–10 SUMMARY

- Signals and noise may be deterministic (their waveform is known), where the signal is the desired part and noise the undesired part; or they may be stochastic (their waveform is unknown, but statistics about the waveform are known). Properties of signals and noise are their spectra, DC value, RMS value, and associated power.
- Fourier transforms and spectra were studied in detail. The FT is used to obtain the spectrum of a waveform. The spectrum gives the frequencies of the sinusoidal components of the waveform. The PSD and the autocorrelation function were defined and examined.
- Signals and noise may be represented by orthogonal series expansions. The Fourier series and sampling function series were found to be especially useful.
- Linear systems were reviewed, and the condition for distortionless transmission was found.
- The properties of bandlimited signals and noise were developed. This resulted in the sampling theorem and the dimensionality theorem. The DFT was studied with MATLAB examples.
- The concept of bandwidth was discussed, and seven popular definitions were given.
- The null bandwidth of a rectangular pulse of width T is $1/T$. This is a basic concept used in digital communication systems.

2-11 STUDY-AID EXAMPLES

SA2-1 DC and RMS Values for Exponential Signals Assume that $v(t)$ is a periodic voltage waveform as shown in Fig. 2-25. Over the time interval $0 < t < 1$, $v(t)$ is described by e^t . Find the DC value and the RMS value of this voltage waveform.

SOLUTION. For periodic waveforms, the DC value is

$$V_{\text{dc}} = \langle v(t) \rangle = \frac{1}{T_0} \int_0^{T_0} v(t) dt = \int_0^1 e^t dt = e^1 - e^0$$

or

$$V_{\text{dc}} = e - 1 = 1.72 \text{ V}$$

Likewise,

$$V_{\text{rms}}^2 = \langle v^2(t) \rangle = \int_0^1 (e^t)^2 dt = \frac{1}{2}(e^2 - e^0) = 3.19$$

Thus,

$$V_{\text{rms}} = \sqrt{3.19} = 1.79 \text{ V}$$

SA2-2 Power and dBm Value for Exponential Signals The periodic voltage waveform shown in Fig. 2-25 appears across a $600\text{-}\Omega$ resistive load. Calculate the average power dissipated in the load and the corresponding dBm value.

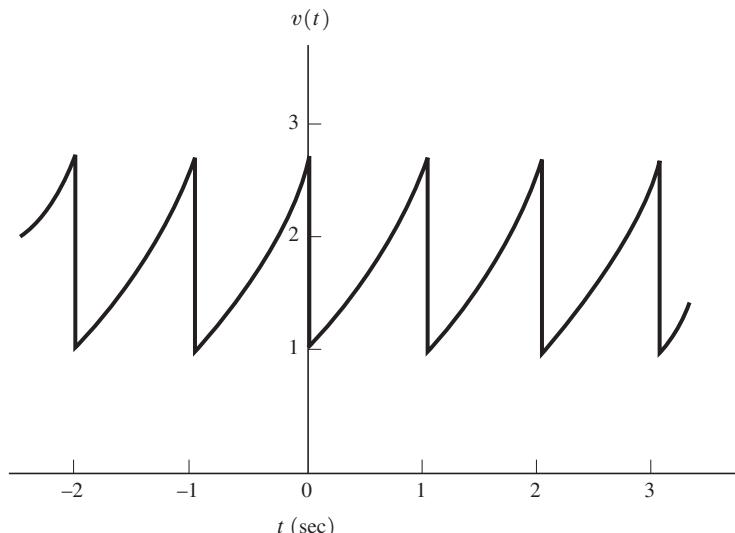


Figure 2-25

Solution.

$$P = V_{\text{rms}}^2/R = (1.79)^2/600 = 5.32 \text{ mW}$$

and

$$10 \log \left(\frac{P}{10^{-3}} \right) = 10 \log \left(\frac{5.32 \times 10^{-3}}{10^{-3}} \right) = 7.26 \text{ dBm}$$

Note: The peak instantaneous power is

$$\begin{aligned} \max [p(t)] &= \max [v(t)i(t)] = \max [v^2(t)/R] \\ &= \frac{(e)^2}{600} = 12.32 \text{ mW} \end{aligned}$$

 **SA2-3 Evaluation of Spectra by Superposition** Find the spectrum for the waveform

$$w(t) = \Pi \left(\frac{t - 5}{10} \right) + 8 \sin(6\pi t)$$

Solution.

The spectrum of $w(t)$ is the superposition of the spectrum of the rectangular pulse and the spectrum of the sinusoid. Using Tables 2-1 and 2-2, we have

$$\mathcal{F} \left[\Pi \left(\frac{t - 5}{10} \right) \right] = 10 \frac{\sin(10\pi f)}{10\pi f} e^{-j2\pi f 5}$$

and using the result of Example 2-5, we get

$$\mathcal{F}[8 \sin(6\pi t)] = j \frac{8}{2} [\delta(f + 3) - \delta(f - 3)]$$

Thus,

$$W(f) = 10 \frac{\sin(10\pi f)}{10\pi f} e^{-j10\pi f} + j4[\delta(f + 3) - \delta(f - 3)]$$

 **SA2-4 Evaluation of Spectra by Integration** Find the spectrum for $w(t) = 5 - 5e^{-2t}u(t)$.

Solution.

$$\begin{aligned} W(f) &= \int_{-\infty}^{\infty} w(t)e^{-j\omega t} dt \\ &= \int_{-\infty}^{\infty} 5e^{-j2\pi ft} dt - 5 \int_0^{\infty} e^{-2t} e^{-j\omega t} dt \\ &= 5\delta(f) - 5 \left| \frac{e^{-2(1+j\pi f)t}}{-2(1 + j\pi f)} \right|_0^{\infty} \end{aligned}$$

or

$$w(f) = 5\delta(f) - \frac{5}{2 + j2\pi f}$$

SA2-5 Evaluation of FT by Superposition Assume that $w(t)$ is the waveform shown in Fig. 2-26. Find the Fourier transform of $w(t)$.

Solution. Referring to Fig. 2-26, we can express $w(t)$ as the superposition (i.e., sum) of two rectangular pulses:

$$w(t) = \Pi\left(\frac{t-2}{4}\right) + 2\Pi\left(\frac{t-2}{2}\right)$$

Using Table 2-2 and Table 2-1, we find that the FT is

$$W(f) = 4Sa(\pi f 4)e^{-j\omega 2} + 2(2)Sa(\pi f 2)e^{-j\omega 2}$$

or

$$W(f) = 4[Sa(4\pi f) + Sa(2\pi f)]e^{-j4\pi f}$$

SA2-6 Orthogonal Functions Show that $\varphi_1(t) = \Pi(t)$ and $\varphi_2(t) = \sin 2\pi t$ are orthogonal functions over the interval $-0.5 < t < 0.5$.

Solution.

$$\begin{aligned} \int_a^b \varphi_1(t) \varphi_2(t) dt &= \int_{-0.5}^{0.5} 1 \sin 2\pi t dt = -\left| \frac{\cos 2\pi t}{2\pi} \right|_{-0.5}^{0.5} \\ &= \frac{-1}{2\pi} [\cos \pi - \cos(-\pi)] = 0 \end{aligned}$$

Because this integral is zero, Eq. (2-77) is satisfied. Consequently, $\Pi(t)$ and $\sin 2\pi t$ are orthogonal over $-0.5 < t < 0.5$. [Note: $\Pi(t)$ and $\sin 2\pi t$ are not orthogonal over the interval $0 < t < 1$, because $\Pi(t)$ is zero for $t > 0.5$. That is, the integral is $1/\pi$ (which is not zero).]

SA2-7 Use FS to Evaluate PSD Find the Fourier series and the PSD for the waveform shown in Fig. 2-25. Over the time interval $0 < t < 1$, $v(t)$ is described by e^t .

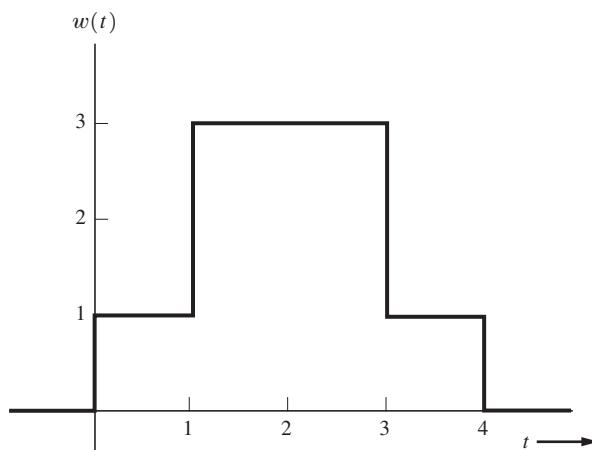


Figure 2-26

Solution. Using Eqs. (2–88) and (2–89), where $T_0 = 1$ and $\omega_0 = 2\pi/T_0 = 2\pi$, we get

$$\begin{aligned} c_n &= \int_0^1 e^t e^{-jn2\pi t} dt = \left| \frac{e^{(1-j2\pi n)t}}{1 - j2\pi n} \right|_0^1 \\ &= \frac{e - 1}{1 - j2\pi n} = 1.72 \frac{1}{1 - j6.28n} \end{aligned}$$

Thus,

$$v(t) = 1.72 \sum_{n=-\infty}^{\infty} \frac{1}{1 - j6.28n} e^{j2\pi nt}$$

Because $v(t)$ is periodic, the PSD consists of delta functions as given by Eq. (2–126), where $f_0 = 1/T_0 = 1$. That is,

$$\mathcal{P}(f) = \sum_{-\infty}^{\infty} |c_n|^2 \delta(f - nf_0)$$

or

$$\mathcal{P}(f) = \sum_{-\infty}^{\infty} \frac{2.95}{1 + (39.48)n^2} \delta(f - n)$$

SA2–8 Property of FS Let $w(t)$ be a periodic function with period T_0 , and let $w(t)$ be *rotationally symmetric*. That is, $w(t) = -w(t \pm T_0/2)$. Prove that $c_n = 0$ for even harmonics.

Solution. Using Eq. (2–89) and $w(t) = -w(t - T_0/2)$, we obtain

$$c_n = \frac{1}{T_0} \int_0^{T_0/2} w(t) e^{-jn\omega_0 t} dt - \frac{1}{T_0} \int_{T_0/2}^T w(t - T_0/2) e^{-jn\omega_0 t} dt$$

Now we make a change of variables. Let $t_1 = t$ in the first integral and $t_1 = t - T_0/2$ in the second integral. Then

$$\begin{aligned} c_n &= \frac{1}{T_0} \int_0^{T_0/2} w(t_1) e^{-jn\omega_0 t_1} dt_1 - \frac{1}{T_0} \int_0^{T_0/2} w(t_1) e^{-jn\omega_0(t_1 + T_0/2)} dt_1 \\ &= \frac{1}{T_0} \int_0^{T_0/2} w(t_1) e^{jn\omega_0 t_1} (1 - e^{-jn\pi}) dt_1 \end{aligned}$$

But $(1 - e^{jn\pi}) = 0$ for $n = \dots, -2, 0, 2, \dots$. Thus, $c_n = 0$ if n is even and $w(t) = -w(t - T_0/2)$. Similarly, it can be shown that $c_n = 0$ if n is even and $w(t) = -w(t + T_0/2)$.



SA2–9 Evaluation of the Inverse FT by Use of the Inverse FFT Equation (2–184) describes how elements of the fast Fourier transform (FFT) vector can be used to approximate the continuous Fourier transform (CFT):

- In a similar way, derive a formula that shows how the elements of the *inverse discrete Fourier transform* (IDFT) vector can be used to approximate the *inverse continuous Fourier transform* (ICFT).

- b. Given the RC low-pass filter transfer function

$$H(f) = \frac{1}{1 + j(f/f_0)}$$

where $f_0 = 1$ Hz, use the inverse fast Fourier transform (IFFT) of MATLAB to calculate the impulse response $h(t)$.

Solution. (a) From Eq. (2–30), the ICFT is

$$w(t) = \int_{-\infty}^{\infty} W(f) e^{j2\pi f t} df$$

Referring to the discussion leading up to Eq. (2–184), the ICFT is approximated by

$$w(k\Delta t) \approx \sum W(n\Delta f) e^{j2\pi n\Delta f k \Delta t} \Delta f$$

But $\Delta t = T/N$, $\Delta f = 1/T$, and $f_s = 1/\Delta t$, so

$$w(k\Delta t) \approx N \left[\frac{1}{N} \sum W(n\Delta f) e^{j(2\pi/N)n k} \right] \Delta f$$

Using the definition of the IDFT as given by Eq. (2–177), we find that the ICFT is related to the IDFT by

$$w(k\Delta t) \approx f_s x(k) \quad (2-207)$$

where $x(k)$ is the k th element of the N -element IDFT vector. As indicated in the discussion leading up to Eq. (2–184), the elements of the \mathbf{X} vector are chosen so that the first $N/2$ elements are samples of the positive frequency components of $W(f)$, where $f = n\Delta f$, and the second $N/2$ elements are samples of the negative frequency components of $W(f)$.

(b) Run file *SA 2_9.m* for a plot of $h(t)$ as computed by using the IFFT and Eq. (2–207). Compare this IFFT-computed $h(t)$ with the analytical $h(t)$ that is shown in Fig. 2–15b, where $\tau_0 = RC = 1/(2\pi f_0)$.

PROBLEMS

- ★ 2–1** For a sinusoidal waveform with a peak value of A and a frequency of f_0 , use the time average operator to show that the RMS value for this waveform is $A/\sqrt{2}$.
- 2–2** A function generator produces the periodic voltage waveform shown in Fig. P2–2.
- (a) Find the value for the DC voltage.
 - (b) Find the value for the RMS voltage.
 - (c) If this voltage waveform is applied across a $100\text{-}\Omega$ load, what is the power dissipated in the load?
- 2–3** The voltage across a load is given by $v(t) = A_0 \cos \omega_0 t$, and the current through the load is a square wave,

$$i(t) = I_0 \sum_{n=-\infty}^{\infty} \left[\Pi\left(\frac{t - nT_0}{T_0/2}\right) - \Pi\left(\frac{t - nT_0 - (T_0/2)}{T_0/2}\right) \right]$$

where $\omega_0 = 2\pi/T_0$, $T_0 = 1$ sec, $A_0 = 10$ V, and $I_0 = 5$ mA.

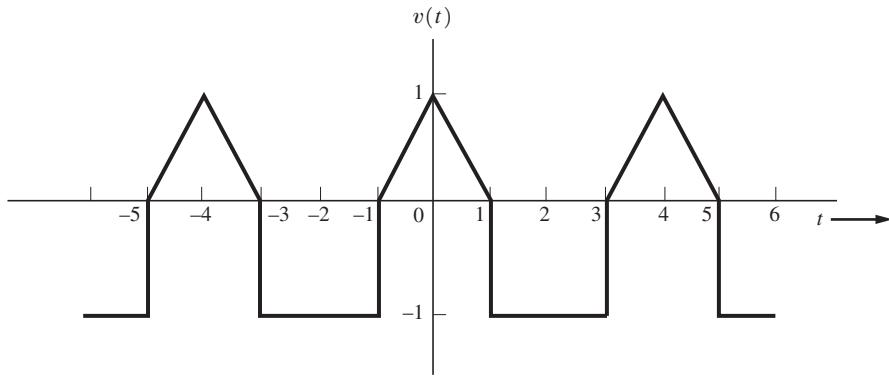


Figure P2-2

- (a) Find the expression for the instantaneous power and sketch this result as a function of time.
 (b) Find the value of the average power.

★ 2-4 The voltage across a $50\text{-}\Omega$ resistive load is the positive portion of a cosine wave. That is,

$$v(t) = \begin{cases} 10 \cos \omega_0 t, & |t - nT_0| < T_0/4 \\ 0, & \text{elsewhere} \end{cases}$$

where n is any integer.

- (a) Sketch the voltage and current waveforms.
 (b) Evaluate the DC values for the voltage and current.
 (c) Find the RMS values for the voltage and current.
 (d) Find the total average power dissipated in the load.

2-5 For Prob. 2-4, find the energy dissipated in the load during a 1-hr interval.

2-6 Determine whether each of the following signals is an energy signal or a power signal, and evaluate the normalized energy or power, as appropriate:

- (a) $w(t) = \Pi(t/T_0)$.
 (b) $w(t) = \Pi(t/T_0) \cos \omega_0 t$.
 (c) $w(t) = \cos^2 \omega_0 t$.

2-7 An average-reading power meter is connected to the output circuit of a transmitter. The transmitter output is fed into a $50\text{-}\Omega$ resistive load, and the wattmeter reads 25 W.

- (a) What is the power in dBm units?
 (b) What is the power in dBk units?
 (c) What is the value in dBmV units?

2-8 A cable company provides a 0 dBmV signal at 843 MHz via a $75\text{-}\Omega$ coaxial cable to a cable modem which is located in a residence. This modem uses this downstream signal to produce the downloaded data signal for the Internet subscriber's computer via an ethernet connection. (The uplink signal that is sent by the modem is on 33.5 MHz.) What is the power of the 843 MHz signal that is supplied to the modem if the modem acts as a $75\text{-}\Omega$ resistive load to this downstream signal?

2-9 Assume that a waveform with a known RMS value V_{rms} is applied across a $1,000\text{-}\Omega$ load. Derive a formula that can be used to compute the dBm value from V_{rms} .

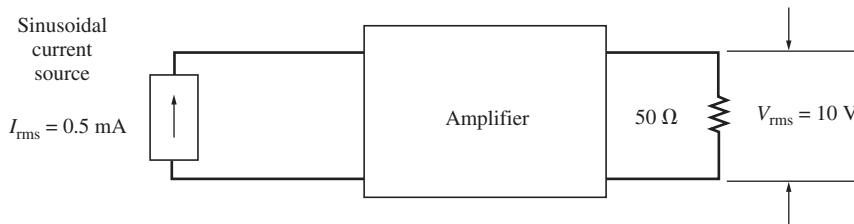


Figure P2-10

- ★ 2-10 An amplifier is connected to a $50\text{-}\Omega$ load and driven by a sinusoidal current source, as shown in Fig. P2-10. The output resistance of the amplifier is $10\text{ }\Omega$ and the input resistance is $2\text{ k}\Omega$. Evaluate the true decibel gain of this circuit.
- ★ 2-11 The voltage (RMS) across the $300\text{-}\Omega$ antenna input terminals of an FM receiver is $3.5\text{ }\mu\text{V}$.
- (a) Find the input power (watts).
 - (b) Evaluate the input power as measured in decibels below 1 mW (dBm).
 - (c) What would be the input voltage (in microvolts) for the same input power if the input resistance were $75\text{ }\Omega$ instead of $300\text{ }\Omega$?
- 2-12 A 103.5 MHz FM signal from an antenna is applied to a FM receiver via a coaxial cable. This signal has a power level of -100 dBm at this receiver's $75\text{-}\Omega$ antenna input. What is the rms voltage of this FM signal at the antenna input?
- 2-13 What is the value for the phasor that corresponds to the voltage waveform $v(t) = 15 \sin(\omega_0 t - 30^\circ)$, where $\omega_0 = 2000\pi$?
- 2-14 A signal is $w(t) = 6 \sin(100\pi t - 40^\circ) + 4 \cos(100\pi t)$. Find the corresponding phasor.
- ★ 2-15 Evaluate the Fourier transform of
- $$w(t) = \begin{cases} e^{-\alpha t}, & t \geq 1 \\ 0, & t < 1 \end{cases}$$
- 2-16 Find the spectrum for the waveform $w(t) = e^{-\pi(t/T)^2}$ in terms of the parameter T . What can we say about the width of $w(t)$ and $W(f)$ as T increases?
- 2-17 Using the convolution property, find the spectrum for
- $$w(t) = \sin 2\pi f_1 t \cos 2\pi f_2 t$$
- ★ 2-18 Find the spectrum (Fourier transform) of the triangle waveform
- $$s(t) = \begin{cases} At, & 0 < t < T_0 \\ 0, & \text{elsewhere} \end{cases}$$
- in terms of A and T_0 .
- 2-19 Find the spectrum for the waveform shown in Fig. P2-19.
- 2-20 If $w(t)$ has the Fourier transform

$$W(f) = \frac{j2\pi f}{1 + j2\pi f}$$

find $X(f)$ for the following waveforms:

- (a) $x(t) = w(2t + 2)$.
- (b) $x(t) = e^{-jt}w(t - 1)$.

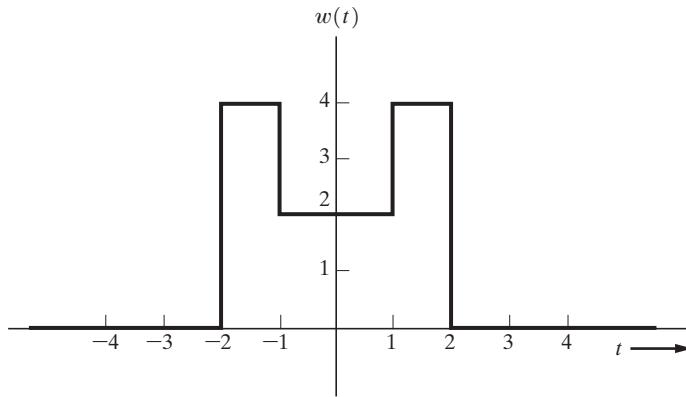


Figure P2-19

- (c) $x(t) = 2 \frac{dw(t)}{dt}$.
 (d) $x(t) = w(1 - t)$.
- 2-21** From Eq. (2-30), find $w(t)$ for $W(f) = A\Pi(f/2B)$, and verify your answer by using the duality property.
- 2-22** Find the quadrature spectral functions $X(f)$ and $Y(f)$ for the damped sinusoidal waveform

$$w(t) = u(t)e^{-at} \sin \omega_0 t$$

where $u(t)$ is a unit step function, $a > 0$, and $W(f) = X(f) + jY(f)$.

- 2-23** Derive the spectrum of $w(t) = e^{-|t|/T}$.
- ★ 2-24** Find the Fourier transforms for the following waveforms. Plot the waveforms and their magnitude spectra. [Hint: Use Eq. (2-184).]
- (a) $\Pi\left(\frac{t-3}{4}\right)$.
 (b) 2.
 (c) $\Lambda\left(\frac{t-5}{5}\right)$.

- 2-25** By using Eq. (2-184), find the approximate Fourier transform for the following waveform:

$$x(t) = \begin{cases} \sin(2\pi t/512) + \sin(70\pi t/512), & 5 < t < 75 \\ 0, & t \text{ elsewhere} \end{cases}$$

- 2-26** Evaluate the spectrum for the trapezoidal pulse shown in Fig. P2-26.

- 2-27** Show that

$$\mathcal{F}^{-1}\{\mathcal{F}[w(t)]\} = w(t)$$

[Hint: Use Eq. (2-33).]

- 2-28** Using the definition of the inverse Fourier transform, show that the value of $w(t)$ at $t = 0$ is equal to the area under $W(f)$. That is, show that

$$w(0) = \int_{-\infty}^{\infty} W(f) df$$

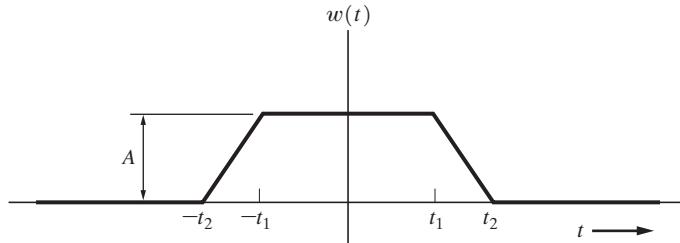


Figure P2-26

2-29 Prove that

- (a) If $w(t)$ is real and an even function of t , $W(f)$ is real.
- (b) If $w(t)$ is real and an odd function of t , $W(f)$ is imaginary.

2-30 Suppose that the spectrum of a waveform as a function of frequency in hertz is

$$W(f) = \frac{1}{2} \delta(f - 10) + \frac{1}{2} \delta(f + 10) + \frac{j\pi f}{2 + j2\pi f} e^{j\pi f}$$

Find the corresponding spectrum as a function of radian frequency, $W(\omega)$.

2-31 The unit impulse can also be defined as

$$\delta(t) = \lim_{\omega \rightarrow \infty} \left[K a \left(\frac{\sin \omega t}{\omega t} \right) \right]$$

Find the value of K needed, and show that this definition is consistent with those given in the text. Give another example of an ordinary function such that, in the limit of some parameter, the function becomes a Dirac delta function.



- ★ 2-32** Use $v(t) = ae^{-at}$, $a > 0$, to approximate $\delta(t)$ as $a \rightarrow \infty$.
- (a) Plot $v(t)$ for $a = 0.1, 1$, and 10 .
 - (b) Plot $V(f)$ for $a = 0.1, 1$, and 10 .

2-33 Show that

$$\text{sgn}(t) \leftrightarrow \frac{1}{j\pi f}$$

[Hint: Use Eq. (2-30) and $\int_0^\infty (\sin x)/x dx = \pi/2$ from Appendix A.]

2-34 Show that

$$u(t) \leftrightarrow \frac{1}{2} \delta(f) + \frac{1}{j2\pi f}$$

[Hint: Use the linearity (superposition) theorem and the result of Prob. 2-33.]

2-35 Show that the sifting property of δ functions, Eq. (2-47), may be generalized to evaluate integrals that involve derivatives of the delta function. That is, show that

$$\int_{-\infty}^{\infty} w(x) \delta^{(n)}(x - x_0) df = (-1)^n w^{(n)}(x_0)$$

where the superscript (n) denotes the n th derivative. (Hint: Use integration by parts.)



- 2-36** Let $x(t) = \Pi\left(\frac{t - 0.05}{0.1}\right)$. Plot the spectrum of $x(t)$ using MATLAB with the help of Eqs. (2-59) and (2-60). Check your results by using the FFT and Eq. (2-184).

- ★ 2-37** If $w(t) = w_1(t)w_2(t)$, show that

$$W(f) = \int_{-\infty}^{\infty} W_1(\lambda)W_2(f - \lambda) d\lambda$$

where $W(f) = \mathcal{F}[w(t)]$.

- 2-38** Show that

- (a) $\int_{-\infty}^t w(\lambda) d\lambda = w(t) * u(t)$.
- (b) $\int_{-\infty}^t w(\lambda) d\lambda \leftrightarrow (j2\pi f)^{-1} W(f) + \frac{1}{2} W(0) \delta(f)$.
- (c) $w(t) * \delta(t - a) = w(t - a)$.

- 2-39** Show that

$$\frac{dw(t)}{dt} \leftrightarrow (j2\pi f)W(f)$$

[Hint: Use Eq. (2-26) and integrate by parts. Assume that $w(t)$ is absolutely integrable.]

- 2-40** As discussed in Example 2-9, show that

$$\frac{1}{T} \Pi\left(\frac{t}{T}\right) * \Pi\left(\frac{t}{T}\right) = \Lambda\left(\frac{t}{T}\right)$$

- 2-41** Given the waveform $w(t) = A\Pi(t/T) \sin \omega_0 t$, find the spectrum of $w(t)$ by using the multiplication theorem as discussed in Example 2-10.

- ★ 2-42** Evaluate the following integrals.

- (a) $\int_{-\infty}^{\infty} \frac{\sin 4\lambda}{4\lambda} \delta(t - \lambda) d\lambda$.
- (b) $\int_{-\infty}^{\infty} (\lambda^3 - 1) \delta(2 - \lambda) d\lambda$.

- 2-43** Prove that

$$M(f) * \delta(f - f_0) = M(f - f_0)$$

- 2-44** Evaluate $y(t) = w_1(t) * w_2(t)$, where

$$w_1(t) = \begin{cases} 1, & |t| < T_0 \\ 0, & t \text{ elsewhere} \end{cases}$$

and

$$w_2(t) = \begin{cases} [1 - 2|t|], & |t| < \frac{1}{2}T_0 \\ 0, & t \text{ elsewhere} \end{cases}$$

- 2-45** Given $w(t) = 5 + 12 \cos \omega_0 t$, where $f_0 = 10 \text{ Hz}$, find

- (a) $R_w(\tau)$.
- (b) $P_w(f)$.

- 2-46** Given the waveform

$$w(t) = A_1 \cos(\omega_1 t + \theta_1) + A_2 \cos(\omega_2 t + \theta_2)$$

where $A_1, A_2, \omega_1, \omega_2, \theta_1$, and θ_2 are constants,

Find the autocorrelation for $w(t)$ as a function of the constants.

- 2-47** Referring to Prob. 2-46,

- Find the PSD function for $w(t)$.
- Sketch the PSD for the case of $\omega_1 \neq \omega_2$.
- Sketch the PSD for the case of $\omega_1 = \omega_2$ and $\theta_1 = \theta_2 + 90^\circ$.
- Sketch the PSD for the case of $\omega_1 = \omega_2$ and $\theta_1 = \theta_2$.

- ★ 2-48** Given the periodic voltage waveform shown in Fig. P2-48,

- Find the DC value for this waveform.
- Find the RMS value for this waveform.
- Find the complex exponential Fourier series.
- Find the voltage spectrum for this waveform.

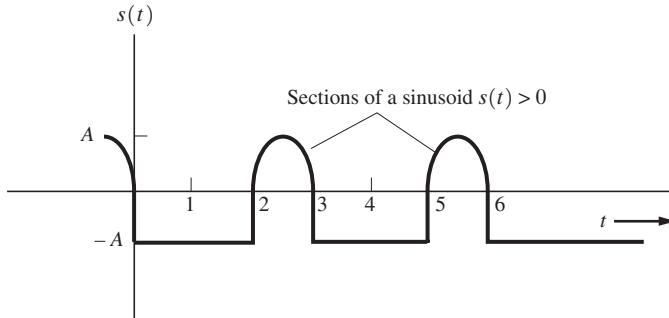


Figure P2-48

- 2-49** Determine if $s_1(t)$ and $s_2(t)$ are orthogonal over the interval $(-\frac{5}{2}T_2 < t < \frac{5}{2}T_2)$, where $s_1(t) = A_1 \cos(\omega_1 t + \varphi_1)$, $s_2(t) = A_2 \cos(\omega_2 t + \varphi_2)$, and $\omega_2 = 2\pi/T_2$ for the following cases.

- $\omega_1 = \omega_2$ and $\varphi_1 = \varphi_2$.
- $\omega_1 = \omega_2$ and $\varphi_1 = \varphi_2 + \pi/2$.
- $\omega_1 = \omega_2$ and $\varphi_1 = \varphi_2 + \pi$.
- $\omega_1 = 2\omega_2$ and $\varphi_1 = \varphi_2$.
- $\omega_1 = \frac{4}{5}\omega_2$ and $\varphi_1 = \varphi_2$.
- $\omega_1 = \pi\omega_2$ and $\varphi_1 = \varphi_2$.

- ★ 2-50** Let $s(t) = A_1 \cos(\omega_1 t + \varphi_1) + A_2 \cos(\omega_2 t + \varphi_2)$. Determine the RMS value of $s(t)$ in terms of A_1 and A_2 for the following cases.

- $\omega_1 = \omega_2$ and $\varphi_1 = \varphi_2$.
- $\omega_1 = \omega_2$ and $\varphi_1 = \varphi_2 + \pi/2$.
- $\omega_1 = \omega_2$ and $\varphi_1 = \varphi_2 + \pi$.
- $\omega_1 = 2\omega_2$ and $\varphi_1 = \varphi_2 = 0$.
- $\omega_1 = 2\omega_2$ and $\varphi_1 = \varphi_2 + \pi$.

- 2-51** Show that

$$\sum_{k=-\infty}^{\infty} \delta(t - kT_0) \leftrightarrow f_0 \sum_{k=-\infty}^{\infty} \delta(f - nf_0)$$

where $f_0 = 1/T_0$. [Hint: Expand $\sum_{k=-\infty}^{\infty} \delta(t - kT_0)$ into a Fourier series and then take the Fourier transform.]

★ 2-52 Three functions are shown in Fig. P2-52.

- (a) Show that these functions are orthogonal over the interval $(-4, 4)$.
- (b) Find the corresponding orthonormal set of functions.

★ 2-53 Expand the waveform

$$w_1(t) = \begin{cases} 1, & 0 \leq t \leq 4 \\ 0, & t \text{ elsewhere} \end{cases}$$

into an orthonormal series by using the orthonormal set found in Prob. 2-52 (b).

★ 2-54 Evaluate the mean square error for the orthogonal series obtained in Prob. 2-53 by evaluating

$$\varepsilon = \int_{-4}^4 \left[w(t) - \sum_{j=1}^3 a_j \varphi_j(t) \right]^2 dt$$

★ 2-55 Expand the waveform

$$w_1(t) = \begin{cases} \cos(\frac{1}{4}\pi t), & -4 \leq t \leq 4 \\ 0, & t \text{ elsewhere} \end{cases}$$

into an orthonormal set of functions found in Prob. 2-52 (b).

★ 2-56 Evaluate the mean square error for the orthogonal series obtained in Prob. 2-55 by using the integral shown in Prob. 2-54.

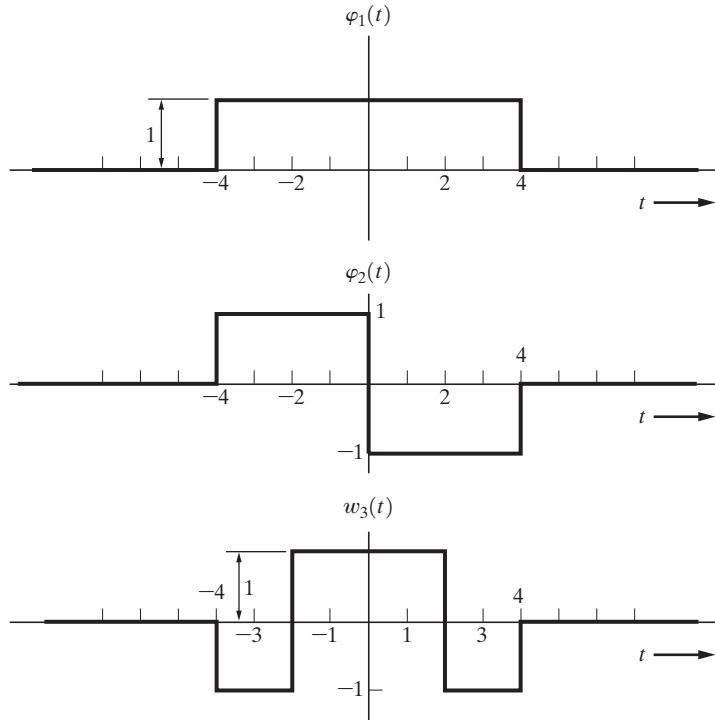


Figure P2-52

- 2-57** Show that the quadrature Fourier series basis functions $\cos(n\omega_0 t)$ and $\sin(n\omega_0 t)$, as given in Eq. (2-95), are orthogonal over the interval $a < t < a + T_0$, where $\omega_0 = 2\pi/T_0$.
- 2-58** Find expressions for the complex Fourier series coefficients that represent the waveform shown in Fig. P2-58.

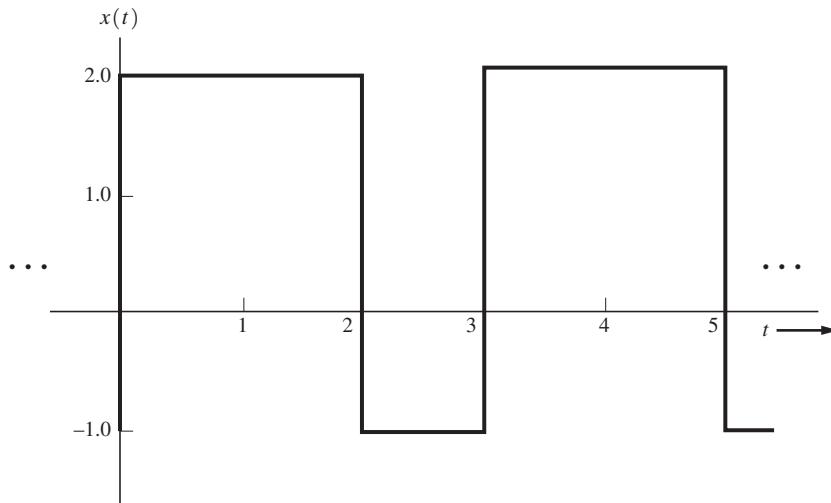


Figure P2-58

- 2-59** The periodic signal shown in Fig. P2-58 is passed through a linear filter having the impulse response $h(t) = e^{-\alpha t}u(t)$, where $t > 0$ and $\alpha > 0$.
- Find expressions for the complex Fourier series coefficients associated with the output waveform $y(t) = x(t) * h(t)$.
 - Find an expression for the normalized power of the output, $y(t)$.
- 2-60** Find the complex Fourier series for the periodic waveform given in Figure P2-2.
- ★ 2-61** Find the complex Fourier series coefficients for the periodic rectangular waveform shown in Fig. P2-61 as a function of A , T , b , and τ_0 . [Hint: The answer can be reduced to a $(\sin x)/x$ form multiplied by a phase-shift factor, $e^{j\theta_n(\tau_0)}$.]
- 2-62** For the waveform shown in Fig. P2-62, find the complex Fourier series.

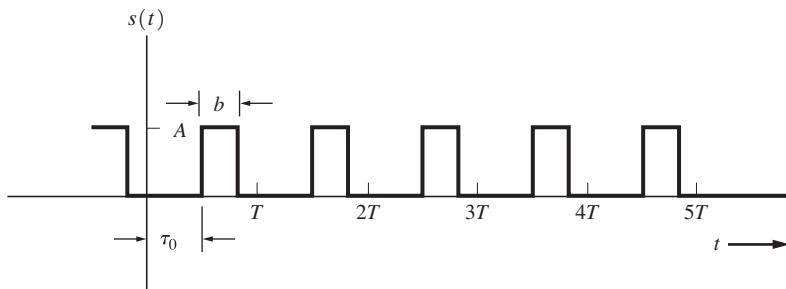


Figure P2-61

- 2-63** For the waveform shown in Fig. P2-62, find the quadrature Fourier series.

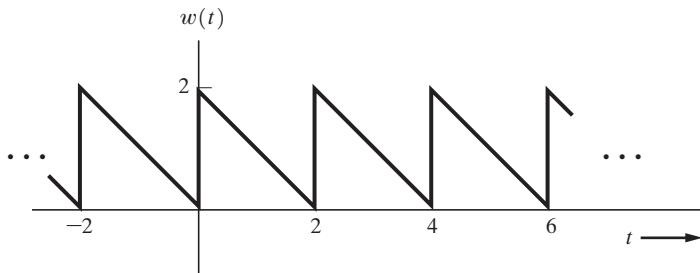


Figure P2-62

- ★ 2-64** Given a periodic waveform $s(t) = \sum_{n=-\infty}^{\infty} p(t - nT_0)$, where

$$p_t(t) = \begin{cases} At, & 0 < t < T \\ 0, & t \text{ elsewhere} \end{cases}$$

and $T \leq T_0$,

- (a) Find the c_n Fourier series coefficients.
- (b) Find the $\{x_n, y_n\}$ Fourier series coefficients.
- (c) Find the $\{D_n, \varphi_n\}$ Fourier series coefficients.

- 2-65** Prove that the polar form of the Fourier series, Eq. (2-103), can be obtained by rearranging the terms in the complex Fourier series, Eq. (2-88).

- 2-66** Prove that Eq. (2-93) is correct.

- 2-67** Let two complex numbers c_1 and c_2 be represented by $c_1 = x_1 + jy_1$ and $c_2 = x_2 + jy_2$, where x_1, x_2, y_1 , and y_2 are real numbers. Show that $\text{Re}\{\cdot\}$ is a linear operator by demonstrating that

$$\text{Re}\{c_1 + c_2\} = \text{Re}\{c_1\} + \text{Re}\{c_2\}$$

- 2-68** Assume that $y(t) = s_1(t) + 2s_2(t)$, where $s_1(t)$ is given by Fig. P2-48 and $s_2(t)$ is given by Fig. P2-61. Let $T = 3$, $b = 1.5$, and $\tau_0 = 0$. Find the complex Fourier coefficients $\{c_n\}$ for $y(t)$.



- 2-69** Evaluate the PSD for the waveform shown in Fig. P2-2.

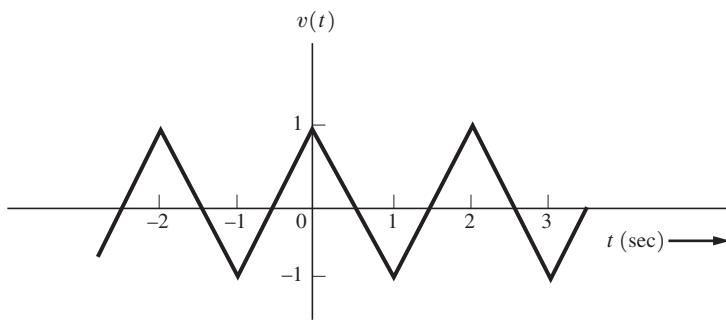


Figure P2-70



- ★ 2-70** Assume that $v(t)$ is a triangular waveform, as shown in Fig. P2-70.

- (a) Find the complex Fourier series for $v(t)$.
- (b) Calculate the normalized average power.
- (c) Calculate and plot the voltage spectrum.
- (d) Calculate and plot the PSD.

- 2-71** Let any complex number be represented by $c = x + jy$, where x and y are real numbers. If c^* denotes the complex conjugate of c , show that

- (a) $\operatorname{Re}\{c\} = \frac{1}{2}c + \frac{1}{2}c^*$.
- (b) $\operatorname{Im}\{c\} = \frac{1}{2j}c - \frac{1}{2j}c^*$.

Note that when $c = e^{jz}$, part (a) gives the definition of $\cos z$ and part (b) gives the definition of $\sin z$.



- ★ 2-72** Calculate and plot the PSD for the half-wave rectified sinusoid described in Prob. 2-4.

- 2-73** The basic definitions for sine and cosine waves are

$$\sin z_1 \triangleq \frac{e^{jz_1} - e^{-jz_1}}{2j} \quad \text{and} \quad \cos z_2 \triangleq \frac{e^{jz_2} + e^{-jz_2}}{2}.$$

Show that

- (a) $\cos z_1 \cos z_2 = \frac{1}{2} \cos(z_1 - z_2) + \frac{1}{2} \cos(z_1 + z_2)$.
- (b) $\sin z_1 \sin z_2 = \frac{1}{2} \cos(z_1 - z_2) - \frac{1}{2} \cos(z_1 + z_2)$.
- (c) $\sin z_1 \cos z_2 = \frac{1}{2} \sin(z_1 - z_2) + \frac{1}{2} \sin(z_1 + z_2)$.

- 2-74** Let two complex numbers be respectively represented by $c_1 = x_1 + jy_1$ and $c_2 = x_2 + jy_2$, where x_1, x_2, y_1 , and y_2 are real numbers. Show that

$$\operatorname{Re}\{c_1\} \operatorname{Re}\{c_2\} = \frac{1}{2} \operatorname{Re}\{c_1 c_2^*\} + \frac{1}{2} \operatorname{Re}\{c_1 c_2\}$$

Note that this is a generalization of the $\cos z_1 \cos z_2$ identity of Prob. 2-73, where, for the $\cos z_1 \cos z_2$ identity, $c_1 = e^{jz_1}$ and $c_2 = e^{jz_2}$.

- 2-75** Prove that the Fourier transform is a linear operator. That is, show that

$$\mathcal{F}[ax(t) + by(t)] = a\mathcal{F}[x(t)] + b\mathcal{F}[y(t)]$$



- 2-76** Plot the amplitude and phase response for the transfer function

$$H(f) = \frac{j10f}{5 + jf}$$



- 2-77** Given the filter shown in Fig. P2-77, where $w_1(t)$ and $w_2(t)$ are voltage waveforms,

- (a) Find the transfer function.
- (b) Plot the magnitude and phase response.
- (c) Find the power transfer function.
- (d) Plot the power transfer function.

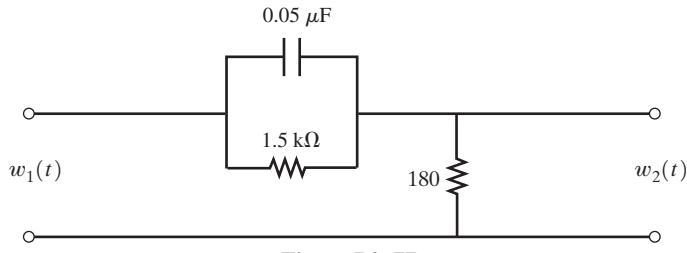


Figure P2-77

2-78 A signal with a PSD of

$$\mathcal{P}_x(f) = \frac{2}{(1/4\pi)^2 + f^2}$$

is applied to the network shown in Fig. P2-78.

- (a) Find the PSD for $y(t)$.
- (b) Find the average normalized power for $y(t)$.

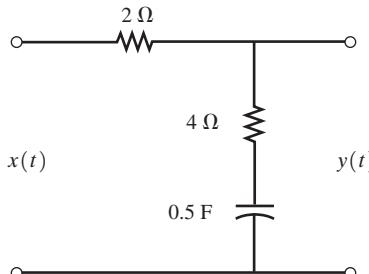


Figure P2-78

2-79 A signal $x(t)$ has a PSD

$$\mathcal{P}_x(f) = \frac{K}{[1 + (2\pi f/B)^2]^2}$$

where $K > 0$ and $B > 0$.

- (a) Find the 3-dB bandwidth in terms of B .
- (b) Find the equivalent noise bandwidth in terms of B .

★ 2-80 The signal $x(t) = e^{-400\pi t}u(t)$ is applied to a brick-wall low-pass filter whose transfer function is

$$H(f) = \begin{cases} 1, & |f| \leq B \\ 0, & |f| > B \end{cases}$$

Find the value of B such that the filter passes one-half the energy of $x(t)$.

2-81 Show that the average normalized power of a waveform can be found by evaluating the autocorrelation $R_w(\tau)$ at $\tau = 0$. That is, $P = R_w(0)$.

[Hint: See Eqs. (2-69) and (2-70).]

- 2-82** The signal $x(t) = 0.5 + 1.5 \cos \left[\left(\frac{2}{3} \right) \pi t \right] + 0.5 \sin \left[\left(\frac{2}{3} \right) \pi t \right]$ V is passed through an RC low-pass filter (see Fig. 2-15a) where $R = 1 \Omega$ and $C = 1 \text{ F}$.

- (a) What is the input PSD, $\mathcal{P}_x(f)$?
- (b) What is the output PSD, $\mathcal{P}_y(f)$?
- (c) What is the average normalized output power, P_y ?

- 2-83** The input to the RC low-pass filter shown in Fig. 2-15a is

$$x(t) = 1.0 + 2.0 \cos \omega_x t + 0.5 \sin \omega_x t$$

Assume that the cutoff frequency is $f_0 = 1.5f_x$.

- (a) Find the input PSD, $\mathcal{P}_x(f)$.
- (b) Find the output PSD, $\mathcal{P}_y(f)$.
- (c) Find the normalized average power of the output, $y(t)$.



- ★ 2-84** Using MATLAB, plot the frequency magnitude response and phase response for the low-pass filter shown in Fig. P2-84, where $R_1 = 7.5 \text{ k}\Omega$, $R_2 = 15 \text{ k}\Omega$, and $C = 0.1 \mu\text{F}$.

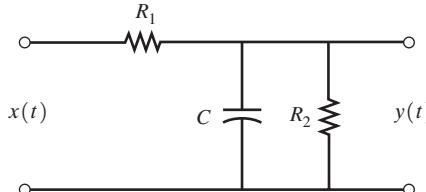


Figure P2-84



- 2-85** A comb filter is shown in Fig. P2-85. Let $T_d = 0.1$.

- (a) Plot the magnitude of the transfer function for this filter.
- (b) If the input is $x(t) = \Pi(t/T)$, where $T = 1$, plot the spectrum of the output $|Y(f)|$.

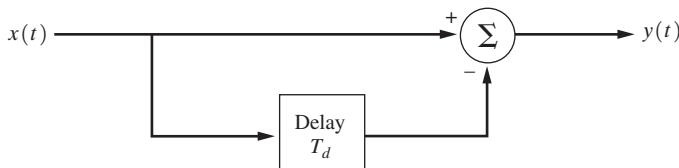


Figure P2-85



- 2-86** A signal $x(t) = \Pi(t - 0.5)$ passes through a filter that has the transfer function $H(f) = \Pi(f/B)$. Plot the output waveform when

- (a) $B = 0.6 \text{ Hz}$.
- (b) $B = 1 \text{ Hz}$.
- (c) $B = 50 \text{ Hz}$.



- ★ 2-87** Examine the distortion effect of an RC low-pass filter. Assume that a unity-amplitude periodic square wave with a 50% duty cycle is present at the filter input and that the filter has a 3-dB

bandwidth of 1,500 Hz. Using a computer, find and plot the output waveshape if the square wave has a frequency of

- (a) 300 Hz.
- (b) 500 Hz.
- (c) 1,000 Hz.

(Hint: Represent the square wave with a Fourier series.)

-  **2-88** Given that the PSD of a signal is flat [i.e., $P_s(f) = 1$], design an RC low-pass filter that will attenuate this signal by 20 dB at 15 kHz. That is, find the value for the RC of Fig. 2-15 such that the design specifications are satisfied.

-  **2-89** The bandwidth of $g(t) = e^{-0.1t}$ is approximately 0.5 Hz; thus, the signal can be sampled with a sampling frequency of $f_s = 1$ Hz without significant aliasing. Take samples a_n over the time interval $(0, 14)$. Use the sampling theorem, Eq. (2-158), to reconstruct the signal. Plot and compare the reconstructed signal with the original signal. Do they match? What happens when the sampling frequency is reduced?

- ★ 2-90** A waveform, $20 + 20 \sin(500t + 30^\circ)$, is to be sampled periodically and reproduced from these sample values.

- (a) Find the maximum allowable time interval between sample values.
- (b) How many sample values need to be stored in order to reproduce 1 sec of this waveform?

-  **2-91** Using a computer program, calculate the DFT of a rectangular pulse, $\Pi(t)$. Take five samples of the pulse and pad it with 59 zeros so that a 64-point FFT algorithm can be used. Sketch the resulting magnitude spectrum. Compare this result with the actual spectrum for the pulse. Try other combinations of the number of pulse samples and zero-pads to see how the resulting FFT changes.

-  **★ 2-92** Using the DFT, compute and plot the spectrum of $\Lambda(t)$. Check your results against those given in Fig. 2-6c.

-  **2-93** Using the DFT, compute and plot $|W(f)|$ for the pulse shown in Fig. P2-26, where $A = 1$, $t_1 = 1$ s, and $t_2 = 2$ s.

-  **2-94** Let a certain waveform be given by

$$w(t) = 4 \sin(2\pi f_1 t + 30^\circ) + 2 \cos(2\pi f_2 t - 10^\circ),$$

where $f_1 = 10$ Hz and $f_2 = 25$ Hz,

- (a) Using the DFT, compute and plot $|W(f)|$ and $\theta(f)$
- (b) Let $\mathcal{P}_w(f)$ denote the PSD of $w(t)$. Using the DFT, compute and plot $\mathcal{P}_w(f)$.
- (c) Check your computed results obtained in parts (a) and (b) against known correct results that you have evaluated by analytical methods.

-  **2-95** Using the DFT, compute and plot $|S(f)|$ for the periodic signal shown in Fig. P2-48, where $A = 5$.

-  **2-96** The transfer function of a raised cosine-rolloff filter is

$$H(f) = \begin{cases} 0.5[1 + \cos(0.5\pi f/f_0)], & |f| \leq 2f_0 \\ 0, & \text{elsewhere} \end{cases}$$

Let $f_0 = 1$ Hz. Using the IFFT, compute the impulse response $h(t)$ for this filter. Compare your computed results with those shown in Fig. 3-26b for the case of $r = 1$.

2-97 Given the low-pass filter shown in Fig. 2-15,

- (a) Find the equivalent bandwidth in terms of R and C .
- (b) Find the first zero-crossing (null) bandwidth of the filter.
- (c) Find the absolute bandwidth of the filter.

2-98 Assume that the PSD of a signal is given by

$$\mathcal{P}_s(f) = \left[\frac{\sin(\pi f/B_n)}{\pi f/B_n} \right]^2$$


where B_n is the null bandwidth. Find the expression for the equivalent bandwidth in terms of the null bandwidth.

2-99 Table 2-4 gives the bandwidths of a BPSK signal in terms of six different definitions. Using these definitions and Eq. (2-201), show that the results given in the table are correct.

★ 2-100 Given a triangular pulse signal

$$s(t) = \Lambda(t/T_0)$$

- (a) Find the absolute bandwidth of the signal.
- (b) Find the 3-dB bandwidth in terms of T_0 .
- (c) Find the equivalent bandwidth in terms of T_0 .
- (d) Find the zero-crossing bandwidth in terms of T_0 .

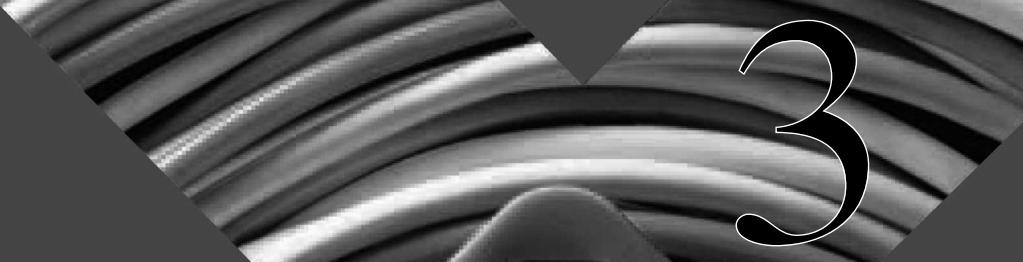

BASEBAND PULSE AND DIGITAL SIGNALING

CHAPTER OBJECTIVES

- Analog-to-digital signaling (Pulse code modulation and delta modulation)
- Binary and multilevel digital signals
- Spectra and bandwidths of digital signals
- Prevention of intersymbol interference
- Time division multiplexing
- Packet transmission

3-1 INTRODUCTION

This chapter shows how to encode analog waveforms (from analog sources) into baseband digital signals. As we will see, the digital approximation to the analog signal can be made as precise as we wish. In addition, we will learn how to process the digital baseband signals so that their bandwidth is minimized.

Digital signaling is popular because of the low cost of digital circuits and the flexibility of the digital approach. This flexibility arises because digital data from digital sources may be merged with digitized data derived from analog sources to provide a general-purpose communication system.

The signals involved in the analog-to-digital conversion problem are *baseband* signals. We also realize that *bandpass* digital communication signals are produced by using baseband digital signals to modulate a carrier, as described in Chapter 1.

The following are the four main goals of this chapter:

- To study how analog waveforms can be converted to digital waveforms. The most popular technique is called *pulse code modulation* (PCM).
- To learn how to compute the spectrum for digital signals.
- To examine how the filtering of pulse signals affects our ability to recover the digital information at the receiver. This filtering can produce what is called *intersymbol interference* (ISI) in the recovered data signal.
- To study how we can *multiplex* (combine) data from several digital bit streams into one high-speed digital stream for transmission over a digital system. One such technique, called *time-division multiplexing* (TDM), will be studied in this chapter.[†]

Another very important problem in digital communication systems is the effect of noise, which may cause the digital receiver to produce some bit errors at the output. This problem will be studied in Chapter 7 since it involves the use of statistical concepts that are emphasized in the second part of this book.

3–2 PULSE AMPLITUDE MODULATION

Pulse amplitude modulation (PAM) is an engineering term that is used to describe the conversion of the analog signal to a pulse-type signal in which the amplitude of the pulse denotes the analog information. PAM is studied first because the analog-to-PAM conversion process is the first step in converting an analog waveform to a PCM (digital) signal. In a few applications the PAM signal is used directly and conversion to PCM is not required.

The sampling theorem, studied in Chapter 2, provides a way to reproduce an analog waveform by using sample values of that waveform and $(\sin x)/x$ orthogonal functions. The purpose of PAM signaling is to provide *another* waveform that looks like pulses, yet contains the information that was present in the analog waveform. Because we are using pulses, we would expect the bandwidth of the PAM waveform to be wider than that of the analog waveform. However, the pulses are more practical to use in digital systems. We will see, that the pulse rate, f_s , for PAM is the same as that required by the sampling theorem, namely, $f_s \geq 2B$, where B is the highest frequency in the analog waveform and $2B$ is called the *Nyquist rate*.

There are two classes of PAM signals: PAM that uses *natural sampling* (gating) and PAM that uses *instantaneous sampling* to produce a flat-top pulse. These signals are illustrated in Figs. 3–1 and 3–5, respectively. The flat-top type is more useful for conversion to PCM; however, the naturally sampled type is easier to generate and is used in other applications.

Natural Sampling (Gating)

DEFINITION. If $w(t)$ is an analog waveform bandlimited to B hertz, the *PAM* signal that uses *natural sampling* (gating) is

$$w_s(t) = w(t) s(t) \quad (3-1)$$

[†] Other techniques, including frequency division multiplexing, and code division multiplexing, are covered in Chapters 5 and 8.

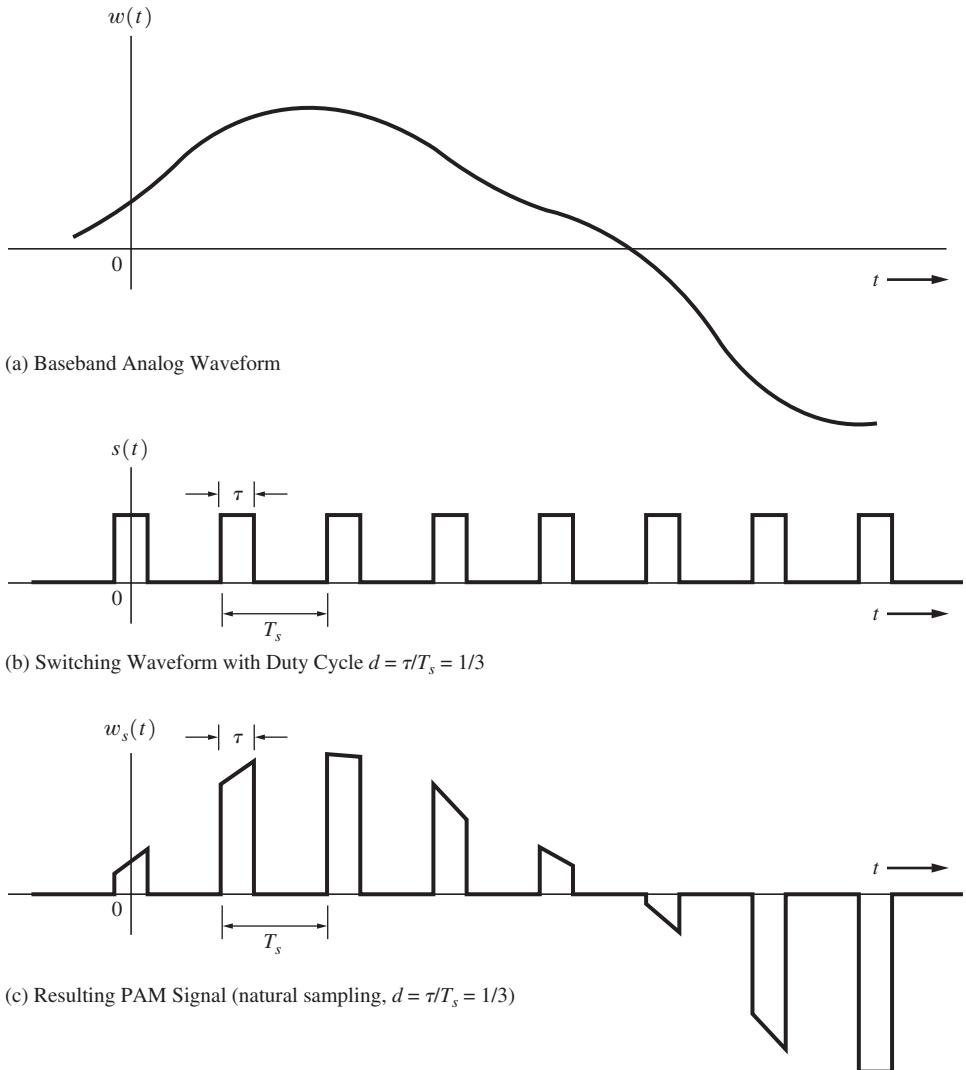


Figure 3-1 PAM signal with natural sampling.

where

$$s(t) = \sum_{k=-\infty}^{\infty} \Pi\left(\frac{t - kT_s}{\tau}\right) \quad (3-2)$$

is a rectangular wave switching waveform and $f_s = 1/T_s \geq 2B$.

THEOREM. *The spectrum for a naturally sampled PAM signal is*

$$W(f) = \mathcal{F}[w_s(t)] = d \sum_{n=-\infty}^{\infty} \frac{\sin \pi n d}{\pi n d} W(f - n f_s) \quad (3-3)$$

where $f_s = 1/T_s$, $\omega_s = 2\pi f_s$, the duty cycle of $s(t)$ is $d = \tau/T_s$, and $W(f) = \mathcal{F}[w(t)]$ is the spectrum of the original unsampled waveform.

PROOF. Taking the Fourier transform of Eq. (3–1), we get

$$W_s(f) = W(f) * S(f) \quad (3-4)$$

$s(t)$ may be represented by the Fourier series

$$s(t) = \sum_{n=-\infty}^{\infty} c_n e^{jn\omega_s t} \quad (3-5a)$$

where

$$c_n = d \frac{\sin n\pi d}{n\pi d} \quad (3-5b)$$

Since $s(t)$ is periodic Eq. (2–109) may be used to get the spectrum:

$$S(f) = \mathcal{F}[s(t)] = \sum_{n=-\infty}^{\infty} c_n \delta(f - nf_s) \quad (3-6)$$

Then Eq. (3–4) becomes

$$W_s(f) = W(f) * \left(\sum_{n=-\infty}^{\infty} c_n \delta(f - nf_s) \right) = \sum_{n=-\infty}^{\infty} c_n W(f) * \delta(f - nf_s)$$

or

$$W_s(f) = \sum_{n=-\infty}^{\infty} c_n W(f - nf_s) \quad (3-7)$$

This equation becomes Eq. (3–3) upon substituting Eq. (3–5b).

The PAM waveform with natural sampling is relatively easy to generate, since it only requires the use of an analog switch that is readily available in CMOS hardware (e.g., the 4016-quad bilateral switch). This hardware is shown in Fig. 3–2, where the associated waveforms $w(t)$, $s(t)$, and $w_s(t)$ are as illustrated in Fig. 3–1.


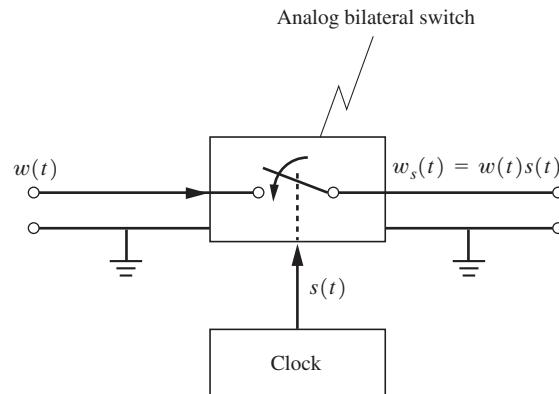


Figure 3–2 Generation of PAM with natural sampling (gating).


The spectrum of the PAM signal with natural sampling is given by Eq. (3–3) as a function of the spectrum of the analog input waveform. This relationship is illustrated in Fig. 3–3 for the case of an input waveform that has a rectangular spectrum, where the duty cycle of the switching waveform is $d = \tau/T_s = 1/3$ and the sampling rate is $f_s = 4B$. As expected, the spectrum of the input analog waveform is repeated at harmonics of the sampling frequency. This is similar to the spectrum for impulse sampling that was studied in Sec. 2–7—for example, compare Fig. 2–18 with Fig. 3–3. For this example, where $d = 1/3$, the PAM spectrum is zero for $\pm 3f_s$, $\pm 6f_s$, and so on, because the spectrum in these harmonic bands is nulled out by the $(\sin x)/x$ function. From the figure, one sees that the bandwidth of the PAM signal is much larger than the bandwidth of the original analog signal. In fact, for the example illustrated in Fig. 3–3b, the null bandwidth for the envelope of the PAM signal is $3f_s = 12B$; that is, the null bandwidth of this PAM signal is 12 times the bandwidth of the analog signal.

Example 3–1 THE SPECTRUM OF A NATURALLY SAMPLED PAM SIGNAL

Assume that a baseband analog signal has a rectangular-shaped spectrum with a bandwidth of 5 Hz. Calculate and plot the spectrum of a PAM signal that is obtained by naturally sampling this analog signal. See Example3_01.m for the solution.

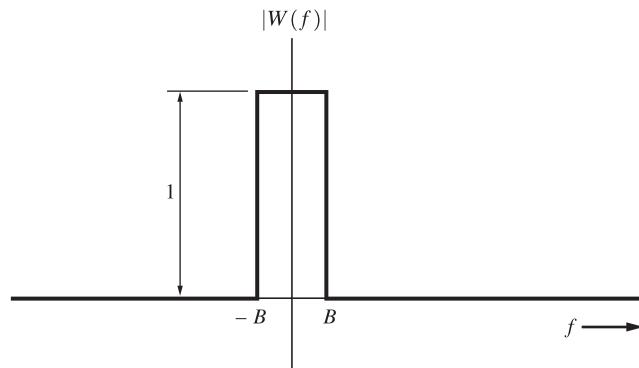

(a) Magnitude Spectrum of Input Analog Waveform

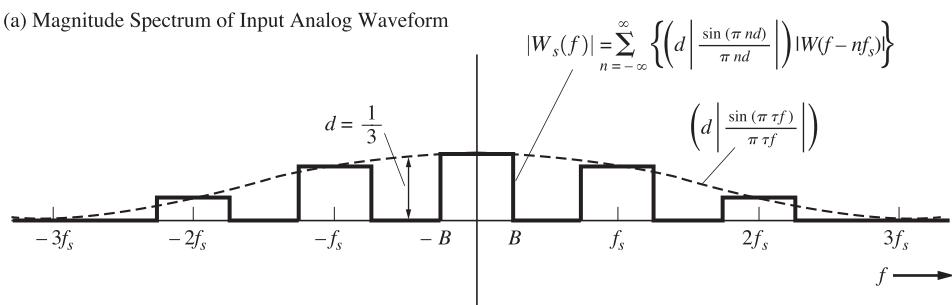

(b) Magnitude Spectrum of PAM (natural sampling) with $d = 1/3$ and $f_s = 4B$

Figure 3–3 Spectrum of a PAM waveform with natural sampling. (See Example3_01.m.)

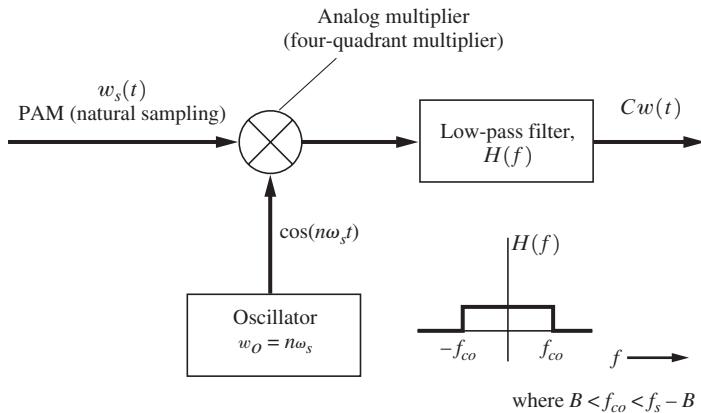


Figure 3–4 Demodulation of a PAM signal (naturally sampled).

At the receiver, the original analog waveform, $w(t)$, can be recovered from the PAM signal, $w_s(t)$, by passing the PAM signal through a low-pass filter where the cutoff frequency is $B < f_{\text{cutoff}} < f_s - B$. This is seen by comparing Fig. 3–3b with Fig. 3–3a. Because the spectrum out of the low-pass filter would have the same shape as that of the original analog signal shown in Fig. 3–3a, the waveshape out of the low-pass filter would be identical to that of the original analog signal, except for a gain factor of d (which could be compensated for by using an amplifier). From Fig. 3–3b, the spectrum out of the low-pass filter will have the same shape as the spectrum of the original analog signal only when $f_s \geq 2B$, because otherwise spectral components in harmonic bands (of f_s) would overlap. This is another illustration of the Nyquist sampling rate requirement. If the analog signal is *undersampled* ($f_s < 2B$), the effect of spectral overlapping is called *aliasing*. This results in a recovered analog signal that is distorted compared to the original waveform. In practice, physical signals are usually considered to be time limited, so that (as we found in Chapter 2) they cannot be absolutely bandlimited. Consequently, there will be some aliasing in a PAM signal. Usually, we prefilter the analog signal before it is introduced to the PAM circuit so we do not have to worry about this problem; however, the effect of aliasing noise has been studied [Spilker, 1977].

It can also be shown (see Prob. 3–5) that the analog waveform may be recovered from the PAM signal by using *product detection*, as shown in Fig. 3–4. Here the PAM signal is multiplied with a sinusoidal signal of frequency $\omega_o = n\omega_s$. This shifts the frequency band of the PAM signal that was centered about $n\omega_s$ to baseband (i.e., $f = 0$) at the multiplier output. We will study the product detector in Chapter 4. For $n = 0$, this is identical to low-pass filtering, just discussed. Of course, you might ask, Why do you need to go to the trouble of using a product detector when a simple low-pass filter will work? The answer is, because of noise on the PAM signal. Noise due to power supply hum or noise due to mechanical circuit vibration might fall in the band corresponding to $n = 0$, and other bands might be relatively noise free. In this case, a product detector might be used to get around the noise problem.

Instantaneous Sampling (Flat-Top PAM)

Analog waveforms may also be converted to pulse signaling by the use of *flat-top* signaling with instantaneous sampling, as shown in Fig. 3–5. This is another generalization of the impulse train sampling technique that was studied in Sec. 2–7.

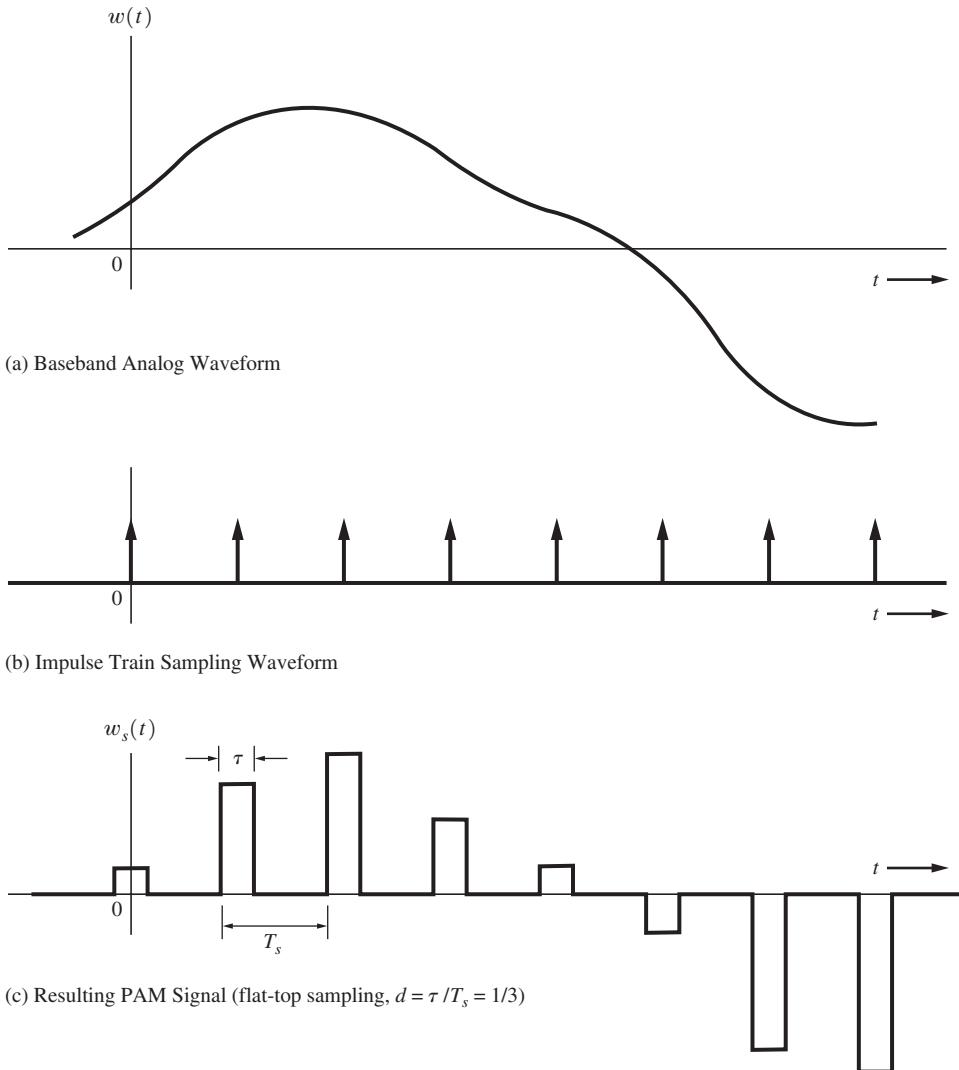


Figure 3–5 PAM signal with flat-top sampling.

DEFINITION. If $w(t)$ is an analog waveform bandlimited to B hertz, the *instantaneous sampled PAM signal* is given by

$$w_s(t) = \sum_{k=-\infty}^{\infty} w(kT_s) h(t - kT_s) \quad (3-8)$$

where $h(t)$ denotes the sampling-pulse shape and, for flat-top sampling, the pulse shape is

$$h(t) = \Pi\left(\frac{t}{\tau}\right) = \begin{cases} 1, & |t| < \tau/2 \\ 0, & |t| > \tau/2 \end{cases} \quad (3-9)$$

where $\tau \leq T_s = 1/f_s$ and $f_s \geq 2B$.

THEOREM. *The spectrum for a flat-top PAM signal is*

$$W_s(f) = \frac{1}{T_s} H(f) \sum_{k=-\infty}^{\infty} W(f - kf_s) \quad (3-10)$$

where

$$H(f) = \mathcal{F}[h(t)] = \tau \left(\frac{\sin \pi \tau f}{\pi \tau f} \right) \quad (3-11)$$

This type of PAM signal is said to consist of instantaneous samples, since $w(t)$ is sampled at $t = kT_s$ and the sample values $w(kT_s)$ determine the amplitude of the flat-top rectangular pulses, as demonstrated in Fig. 3–5c. The flat-top PAM signal could be generated by using a sample-and-hold type of electronic circuit.

Another pulse shape, rather than the rectangular shape, could be used in Eq. (3–8), but in this case the resulting PAM waveform would not be flat topped. Note that if the $h(t)$ is of the $(\sin x)/x$ type with overlapping pulses, then Eq. (3–8) becomes identical to the sampling theorem of Eq. (2–158), and this sampled signal becomes identical to the original unsampled analog waveform, $w(t)$.

PROOF. The spectrum for flat-top PAM can be obtained by taking the Fourier transform of Eq. (3–8). First we rewrite that equation, using a more convenient form involving the convolution operation:

$$\begin{aligned} w_s(t) &= \sum_k w(kT_s) h(t) * \delta(t - kT_s) \\ &= h(t) * \sum_k w(kT_s) \delta(t - kT_s) \end{aligned}$$

Hence,

$$w_s(t) = h(t) * \left[w(t) \sum_k \delta(t - kT_s) \right]$$

The spectrum is

$$W_s(f) = H(f) \left[W(f) * \sum_k e^{-j2\pi fkT_s} \right] \quad (3-12)$$

But the sum of the exponential functions is equivalent to a Fourier series expansion (in the frequency domain), where the periodic function is an impulse train. That is,

$$\frac{1}{T_s} \sum_k \delta(f - kf_s) = \frac{1}{T_s} \sum_{n=-\infty}^{\infty} c_n e^{j(2\pi n T_s)f}, \quad (3-13a)$$

where


$$c_n = \frac{1}{f_s} \int_{-f_s/2}^{f_s/2} \left[\sum_k \delta(f - kf_s) \right] e^{-j2\pi n T_s f} df = \frac{1}{f_s} \quad (3-13b)$$

Using Eq. (3-13a), we find that Eq. (3-12) becomes


$$\begin{aligned} W_s(f) &= H(f) \left[W(f) * \frac{1}{T_s} \sum_k \delta(f - kf_s) \right] \\ &= \frac{1}{T_s} H(f) \left[\sum_k W(f) * \delta(f - kf_s) \right] \end{aligned}$$

which reduces to Eq. (3-10).

The spectrum of the flat-top PAM signal is illustrated in Fig. 3-6 for the case of an analog input waveform that has a rectangular spectrum. The analog signal may be recovered from the flat-top PAM signal by the use of a low-pass filter. However, there is some high-frequency

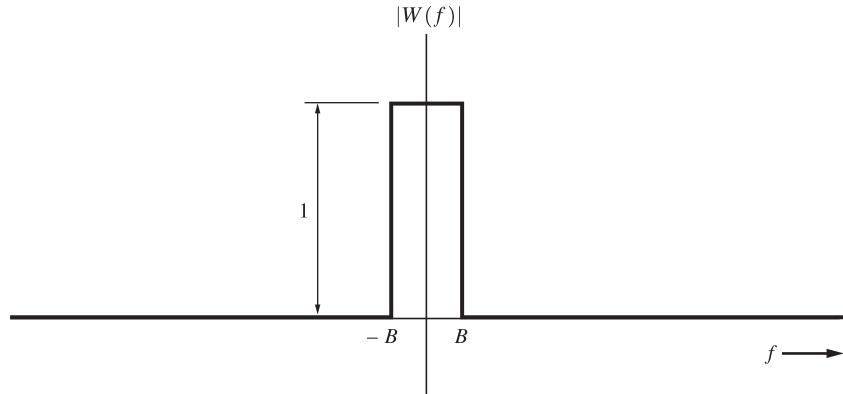

(a) Magnitude Spectrum of Input Analog Waveform

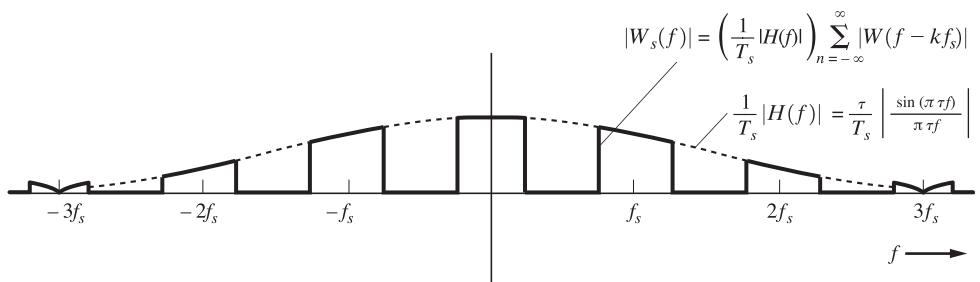

(b) Magnitude Spectrum of PAM (flat-top sampling), $\tau/T_s = 1/3$ and $f_s = 4B$

Figure 3-6 Spectrum of a PAM waveform with flat-top sampling. (See Example3_02.m.)

loss in the recovered analog waveform due to the filtering effect, $H(f)$, caused by the flat-top pulse shape. This loss, if significant, can be reduced by decreasing τ or by using some additional gain at the high frequencies in the low-pass filter transfer function. In that case, the low-pass filter would be called an *equalization* filter and have a transfer function of $1/H(f)$. The pulse width τ is also called the *aperture* since τ/T_s determines the gain of the recovered analog signal, which is small if τ is small relative to T_s . It is also possible to use product detection similar to that shown in Fig. 3–4, except that now some prefilter might be needed before the multiplier (to make the spectrum flat in a band centered on $f = nf_s$), to compensate for the spectral loss due to the aperture effect. Once again, f_s needs to be selected so that $f_s \geq 2B$ in order to prevent aliasing.

Example 3–2 THE SPECTRUM OF A FLAT-TOP SAMPLED PAM SIGNAL

Assume that a baseband analog signal has a rectangular-shaped spectrum with a bandwidth of 5 Hz. Calculate and plot the spectrum of a PAM signal that is obtained by flat-top sampling this analog signal. See Example3_02.m for the solution.

The transmission of either naturally or instantaneously sampled PAM over a channel requires a very wide frequency response because of the narrow pulse width, which imposes stringent requirements on the magnitude and phase response of the channel. The bandwidth required is much larger than that of the original analog signal, and the noise performance of the PAM system can never be better than that achieved by transmitting the analog signal directly. Consequently, PAM is not very good for long-distance transmission. It does provide a means for converting an analog signal to a PCM signal (as discussed in the next section). PAM also provides a means for breaking a signal into time slots so that multiple PAM signals carrying information from different sources can be interleaved to transmit all of the information over a single channel. This is called time-division multiplexing and will be studied in Sec. 3–9.

3–3 PULSE CODE MODULATION

DEFINITION. *Pulse code modulation* (PCM) is essentially analog-to-digital conversion of a special type where the information contained in the instantaneous samples of an analog signal is represented by digital words in a *serial bit stream*.

If we assume that each of the digital words has n binary digits, there are $M = 2^n$ unique code words that are possible, each code word corresponding to a certain amplitude level. However, each sample value from the analog signal can be any one of an infinite number of levels, so that the digital word that represents the amplitude closest to the actual sampled value is used. This is called *quantizing*. That is, instead of using the exact sample value of the analog waveform $w(kT_s)$, the sample is replaced by the closest allowed value, where there are M allowed values, each corresponding to one of the code words. Other popular types of analog-to-digital conversion, such as delta modulation (DM) and differential pulse code modulation (DPCM), are discussed in later sections.

PCM is very popular because of the many advantages it offers, including the following:

- Relatively inexpensive digital circuitry may be used extensively in the system.
- PCM signals derived from all types of analog sources (audio, video, etc.) may be merged with data signals (e.g., from digital computers) and transmitted over a common high-speed digital communication system. This merging is called time-division multiplexing and is discussed in detail in a later section.
- In long-distance digital telephone systems requiring repeaters, a *clean* PCM waveform can be regenerated at the output of each repeater, where the input consists of a noisy PCM waveform. However, the noise at the input may cause bit errors in the regenerated PCM output signal.
- The noise performance of a digital system can be superior to that of an analog system. In addition, the probability of error for the system output can be reduced even further by the use of appropriate coding techniques as discussed in Chapter 1.

These advantages usually outweigh the main disadvantage of PCM: a much wider bandwidth than that of the corresponding analog signal.

Sampling, Quantizing, and Encoding

The PCM signal is generated by carrying out three basic operations: sampling, quantizing, and encoding (Fig. 3–7). The sampling operation generates a flat-top PAM signal.

The quantizing operation is illustrated in Fig. 3–8 for the case of $M = 8$ levels. This quantizer is said to be *uniform* because all of the steps are of equal size. Since we are approximating the analog sample values by using a finite number of levels ($M = 8$ in this illustration), *error* is introduced into the recovered output analog signal because of the quantizing effect. The error waveform is illustrated in Fig. 3–8c. The quantizing error consists of the difference between the analog signal at the sampler input and the output of the quantizer. Note that the peak value of the error (± 1) is one-half of the quantizer step size (2). If we sample at the Nyquist rate ($2 B$) or faster, and there is negligible channel noise, there will still be noise, called *quantizing noise*, on the recovered analog waveform due to this error. The quantizing noise can also be thought of as a round-off error. In Sec. 7–7, statistics of this quantizing noise are evaluated and a formula for the PCM system signal-to-noise ratio is developed. The quantizer output is a *quantized* PAM signal.

The PCM signal is obtained from the quantized PAM signal by encoding each quantized sample value into a digital word. It is up to the system designer to specify the exact code word that will represent a particular quantized level. For a Gray code taken from Table 3–1, the resulting PCM signal is shown in Fig. 3–8d, where the PCM word for each quantized sample is strobed out of the encoder by the next clock pulse. The Gray code was chosen because it has only one bit change for each step change in the quantized level. Consequently, single errors in the received PCM code word will cause minimal errors in the recovered analog level, provided that the sign bit is not in error.

Here we have described PCM systems that represent the quantized analog sample values by *binary* code words. In general, of course, it is possible to represent the quantized analog samples by digital words using a base other than base 2 or, equivalently, to convert the binary signal to a multilevel signal (as discussed in Sec. 3–4). Multilevel signals have the advantage of possessing a much smaller bandwidth than binary signals, but the disadvantage of requiring multilevel circuitry instead of binary circuitry.



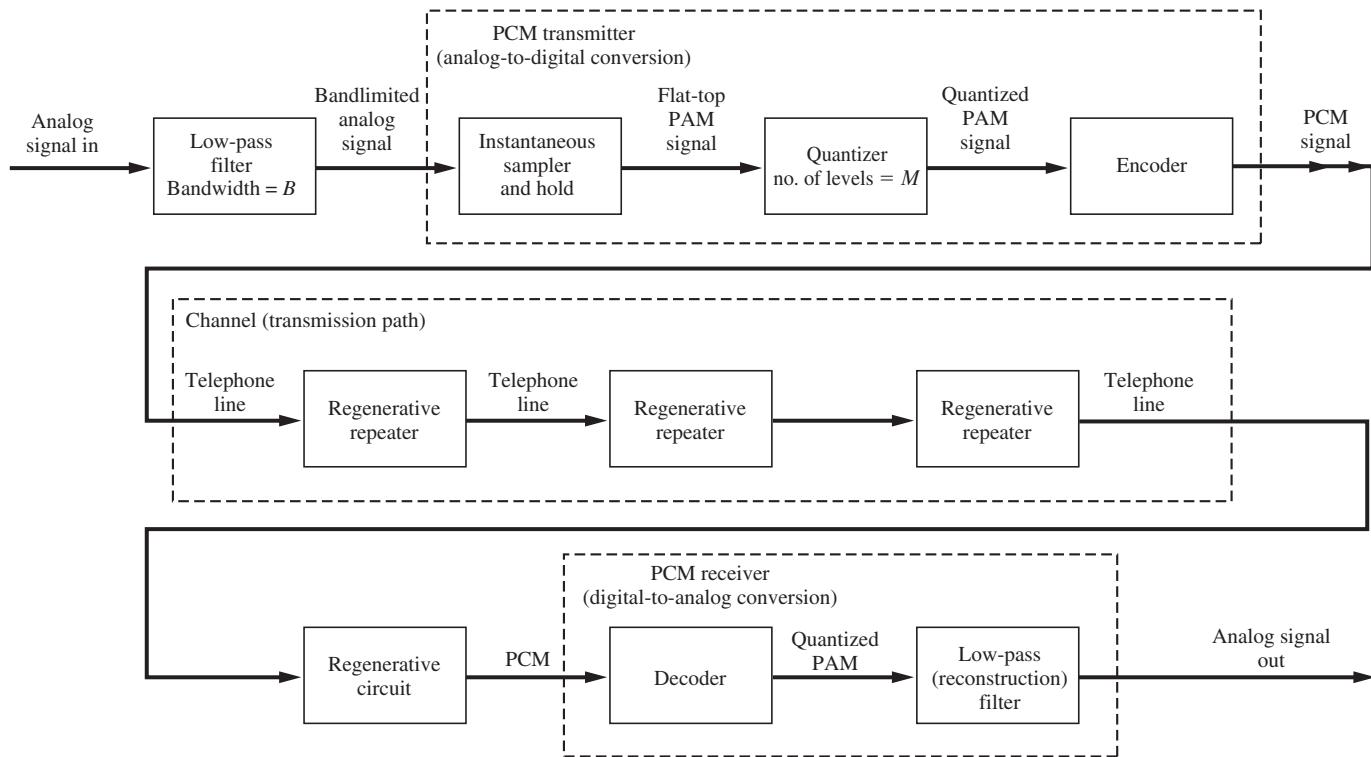



Figure 3–7 PCM transmission system.

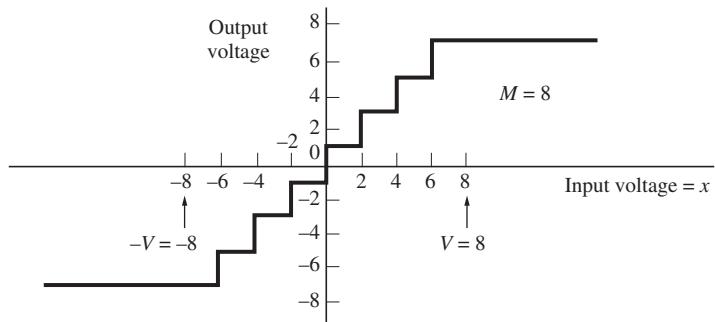

(a) Quantizer Output-Input Characteristics

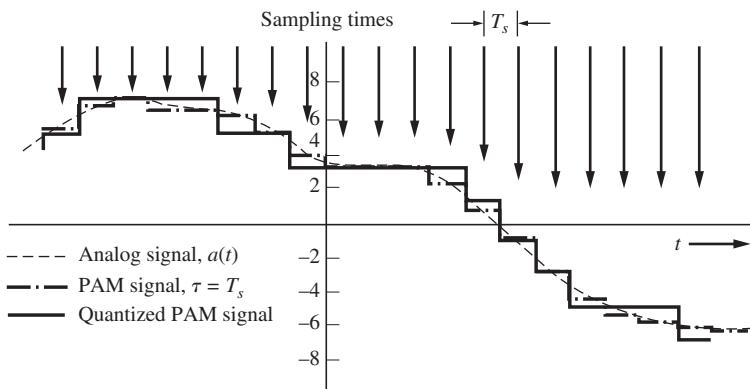

(b) Analog Signal, Flat-top PAM Signal, and Quantized PAM Signal

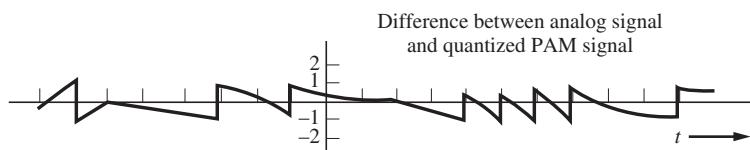

(c) Error Signal

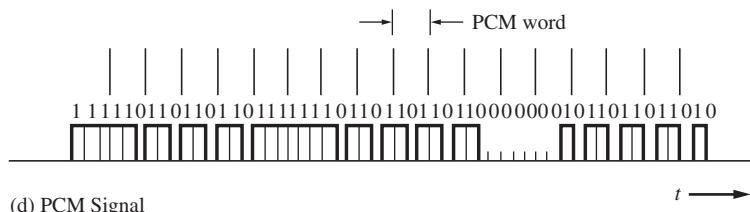


Figure 3–8 Illustration of waveforms in a PCM system.

TABLE 3-1 THREE-BIT GRAY CODE FOR $M = 8$ LEVELS

Quantized Sample Voltage	Gray Code Word (PCM Output)	
+7	110	
+5	111	
+3	101	
+1	100	
		Mirror image except for sign bit
-1	000	
-3	001	
-5	011	
-7	010	

Practical PCM Circuits

Six techniques are used to implement the analog-to-digital converter (ADC) encoding operation: the *counting or ramp, serial or successive approximation, direct conversion or flash, delta-encoded, pipeline, and sigma-delta* encoders. For a description of the encoding methods, see <http://en.wikipedia.org>. These techniques will be discussed in the following paragraphs.

In the counting encoder, at the same time that the sample is taken, a ramp generator is energized and a binary counter is started. The output of the ramp generator is continuously compared to the sample value; when the value of the ramp becomes equal to the sample value, the binary value of the counter is read. This count is taken to be the PCM word. The binary counter and the ramp generator are then reset to zero and are ready to be reenergized at the next sampling time. This technique requires only a few components, but the speed of this type of ADC is usually limited by the speed of the counter. The Maxim ICL7106 LCD output ADC integrated circuit uses a counting encoder.

The serial encoder compares the value of the sample with trial quantized values. Successive trials depend on whether the past comparator outputs are positive or negative. The trial values are chosen first in large steps and then in small steps so that the process will converge rapidly. The trial voltages are generated by a series of voltage dividers that are configured by (on-off) switches controlled by digital logic. After the process converges, the value of the switch settings is read out as the PCM word. This technique requires more precision components (for the voltage dividers) than the ramp technique. The speed of the feedback ADC technique is determined by the speed of the switches. The Analog Devices AD7923 and 12-bit ADC uses serial encoding.

The direct conversion or flash encoder uses a set of parallel comparators with reference levels that are the permitted quantized values. The sample value is fed into all of the parallel comparators simultaneously. The high or low level of the comparator outputs determines the binary PCM word with the aid of some digital logic. This is a fast ADC technique, but requires

more hardware than the other two methods. The Maxim MAX104 8-bit ADC integrated circuit is an example of the technique.

Some analog-to-digital converters have parallel output (such as the MAX104). In this case, for the generation of PCM, the parallel output (digital word) needs to be converted to serial form for transmission over a two-wire channel. This conversion is accomplished by using a parallel-to-serial converter integrated circuit, which is also usually known as a *serial input-output* (SIO) chip. The SIO chip includes a shift register that is set to contain the parallel data (usually 8 or 16 input lines). Then the data are shifted out of the last stage of the shift register bit by bit onto a single output line to produce the serial format. Furthermore, the SIO chips are usually full duplex; that is, they have two sets of shift registers, one that functions for data flowing in each direction. One shift register converts parallel input data to serial output data for transmission over the channel, and simultaneously, the other shift register converts received serial data from another input to parallel data that are available at another output. Three types of SIO chips are available: the *universal asynchronous receiver/transmitter* (UART), the *universal synchronous receiver/transmitter* (USRT), and the *universal synchronous/asynchronous receiver transmitter* (USART). The UART transmits and receives asynchronous serial data, the USRT transmits and receives synchronous serial data, and the USART combines both a UART and a USRT on one chip. (See Sec. 3–9 for a discussion of asynchronous and synchronous serial data lines.) An example of a UART is the National Semiconductor PC16550D. This UART provides an interface between 8-bit parallel data and the asynchronous serial data on the serial port of a PC.

At the receiving end, the PCM signal is decoded back into an analog signal by using a digital-to-analog converter (DAC) chip. If the DAC chip has a parallel data input, the received serial PCM data are first converted to a parallel form, using an SIO chip as described earlier. The parallel data are then converted to an approximation of the analog sample value by the DAC chip. This conversion is usually accomplished by using the parallel digital word to set the configuration of electronic switches on a resistive current (or voltage) divider network so that the analog output is produced. This chip is called a *multiplying* DAC because the “analog” output voltage is directly proportional to the divider reference voltage multiplied by the value of the digital word. The National Semiconductor DAC0808 8-bit DAC chip is an example of this technique. The DAC chip outputs samples of the quantized analog signal that approximate the analog sample values. Consequently, as the DAC chip is clocked, it generates a quantized PAM signal that is then smoothed by a low-pass reconstruction filter to produce the analog output as illustrated in Fig. 3–7.

Semiconductor companies manufacture several hundred types of ADC and DAC circuits. Data sheets for these ICs can be found on the Web pages of these manufacturers. Many of the ICs are designed for specific applications.

Bandwidth of PCM Signals

What is the spectrum of a PCM (serial) data waveform? For the case of PAM signaling, the spectrum of the PAM signal could be obtained as a function of the spectrum of the input analog signal because the PAM signal is a linear function of the analog signal. This is not the case for PCM. As shown in Figs. 3–7 and 3–8, the PCM is a *nonlinear* function of the input analog

signal. Consequently, the spectrum of the PCM signal is not directly related to the spectrum of the input analog signal (as will be shown in Secs. 3-4 and 3-5).

The bandwidth of (serial) binary PCM waveforms depends on the bit rate and the waveform pulse shape used to represent the data. From Fig. 3-8, the bit rate is

$$R = nf_s \quad (3-14)$$

where n is the number of bits in the PCM word ($M = 2^n$) and f_s is the sampling rate. For no aliasing, we require that $f_s \geq 2B$, where B is the bandwidth of the analog signal (that is to be converted to the PCM signal). In Sec. 3-4, we see that the dimensionality theorem shows that the bandwidth of the binary encoded PCM waveform is bounded by

$$B_{\text{PCM}} \geq \frac{1}{2}R = \frac{1}{2}nf_s \quad (3-15a)$$

the minimum bandwidth of $\frac{1}{2}R = \frac{1}{2}nf_s$ is obtained only when $(\sin x)/x$ type pulse shape is used to generate the PCM waveform. However, usually a more rectangular type of pulse shape is used, and consequently, the bandwidth of the binary-encoded PCM waveform will be larger than this minimum. Details of line codes and pulse shape selection will be studied later in Sections 3-5 and 3-6. The exact bandwidth that is attained will depend on what selection is used. For example, referring to Fig. 3-15, suppose that one selects the typical case of a rectangular pulse shape and uses a unipolar NRZ, a polar NRZ, or a bipolar RZ PCM waveform as shown in Figs. 3-15b, 3-15c, and 3-15e. These are typical of waveforms generated by popular PCM integrated circuits. Then, as shown in Figs. 3-16a, 3-16b, and 3-16d, the null bandwidth will be the reciprocal of the pulse width, which is $1/T_b = R$ for these cases of binary signaling. Thus, for rectangular pulses, the first null bandwidth is

$$B_{\text{PCM}} = R = nf_s \quad (\text{first null bandwidth}) \quad (3-15b)$$

Table 3-2 presents a tabulation of this result for the case of the minimum sampling rate, $f_s = 2B$. Note that the dimensionality theorem of Eq. (3-15a) demonstrates that the bandwidth of the PCM signal has a lower bound given by

$$B_{\text{PCM}} \geq nB \quad (3-15c)$$

where $f_s \geq 2B$ and B is the bandwidth of the corresponding analog signal. Thus, for reasonable values of n , the bandwidth of the serial PCM signal will be significantly larger than the bandwidth of the corresponding analog signal that it represents. For the example shown in Fig. 3-8 where $n = 3$, the PCM signal bandwidth will be at least three times wider than that of the corresponding analog signal. Furthermore, if the bandwidth of the PCM signal is reduced by improper filtering or by passing the PCM signal through a system that has a poor frequency response, the filtered pulses will be elongated (stretched in width), so that pulses corresponding to any one bit will smear into adjacent bit slots. If this condition becomes too serious, it will cause errors in the detected bits. This pulse-smearing effect is called *intersymbol interference (ISI)*. The filtering specifications for a signal without ISI are discussed in Sec. 3-6.

TABLE 3–2 PERFORMANCE OF A PCM SYSTEM WITH UNIFORM QUANTIZING AND NO CHANNEL NOISE

Number of Quantizer Levels Used, M	Length of the PCM Word, n (bits)	Bandwidth of PCM Signal (First Null Bandwidth) ^a	Recovered Analog Signal-Power-to-Quantizing-Noise Power Ratios (dB)	
			$(S/N)_{pk\ out}$	$(S/N)_{out}$
2	1	$2B$	10.8	6.0
4	2	$4B$	16.8	12.0
8	3	$6B$	22.8	18.1
16	4	$8B$	28.9	24.1
32	5	$10B$	34.9	30.1
64	6	$12B$	40.9	36.1
128	7	$14B$	46.9	42.1
256	8	$16B$	52.9	48.2
512	9	$18B$	59.0	54.2
1,024	10	$20B$	65.0	60.2
2,048	11	$22B$	71.0	66.2
4,096	12	$24B$	77.0	72.2
8,192	13	$26B$	83.0	78.3
16,384	14	$28B$	89.1	84.3
32,768	15	$30B$	95.1	90.3
65,536	16	$32B$	101.1	96.3

^a B is the absolute bandwidth of the input analog signal.

Effects of Noise

The analog signal that is recovered at the PCM system output is corrupted by noise. Two main effects produce this noise or distortion:

- Quantizing noise that is caused by the M -step quantizer at the PCM transmitter.
- Bit errors in the recovered PCM signal. The bit errors are caused by *channel noise*, as well as improper channel filtering, which causes ISI.

In addition, as shown in Sections 2–7 and 3–2, the input analog signal needs to be sufficiently bandlimited (with a low-pass antialiasing filter) and sampled fast enough so that the aliasing noise on the recovered analog signal is negligible.

As shown in Chapter 7, under certain assumptions, the ratio of the recovered analog *peak* signal power to the total *average* noise power is given by[†]

$$\left(\frac{S}{N}\right)_{\text{pk out}} = \frac{3M^2}{1 + 4(M^2 - 1)P_e} \quad (3-16a)$$

and the ratio of the *average* signal power to the average noise power is

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{M^2}{1 + 4(M^2 - 1)P_e} \quad (3-16b)$$

where M is the number of quantized levels used in the PCM system and P_e is the probability of bit error in the recovered binary PCM signal at the receiver DAC before it is converted back into an analog signal.

Example 3–3 AVERAGE SIGNAL-TO-NOISE RATIO FOR A RECOVERED ANALOG SIGNAL

Using Eq. (3–16b), calculate the average SNR_{dB} of the analog signal that is recovered from a PCM signal that has error bits with a probability of error of P_e . Plot the SNR_{dB} for P_e over a range from 10^{-7} to 10^{-1} . See Example3_03.m for the solution.

In Chapter 7, P_e is evaluated for many different types of digital transmission systems. In Chapter 1, it was shown how channel coding could be used to correct some of the bit errors and, consequently, reduce P_e . Therefore, in many practical systems, P_e is negligible. If we assume that there are no bit errors resulting from channel noise (i.e., $P_e = 0$) and no ISI, then, from Eq. (3–16a), the peak SNR resulting from only quantizing errors is

$$\left(\frac{S}{N}\right)_{\text{pk out}} = 3M^2 \quad (3-17a)$$

and from Eq. (3–16b), the average SNR due only to quantizing errors is

$$\left(\frac{S}{N}\right)_{\text{out}} = M^2 \quad (3-17b)$$

Numerical values for these SNRs are given in Table 3–2.

To realize these SNRs, one critical assumption is that the peak-to-peak level of the analog waveform at the input to the PCM encoder is set to the design level of the quantizer. For example, referring to Fig. 3–8a, this corresponds to the input traversing the range $-V$ to $+V$ volts, where $V = 8$ volts is the design level of the quantizer. Equations (3–16) and (3–17) were derived for waveforms with equally likely values, such as a triangle waveshape, that have a peak-to-peak value of $2V$ and an RMS value of $V/\sqrt{3}$, where V is the design peak level of the quantizer.

[†] This derivation is postponed until Chapter 7 because a knowledge of statistics is needed to carry it out.

From a practical viewpoint, the quantizing noise at the output of the PCM decoder can be categorized into four types, depending on the operating conditions. The four types are overload noise, random noise, granular noise, and hunting noise. As discussed earlier, the level of the analog waveform at the input of the PCM encoder needs to be set so that its peak level does not exceed the design peak of V volts. If the peak input does exceed V , then the recovered analog waveform at the output of the PCM system will have flat-tops near the peak values. This produces *overload noise*. The flat-tops are easily seen on an oscilloscope, and the recovered analog waveform sounds distorted since the flat-topping produces unwanted harmonic components.

The second type of noise, *random noise*, is produced by the random quantization errors in the PCM system under normal operating conditions when the input level is properly set. This type of condition is assumed in Eq. (3–17). Random noise has a “white” hissing sound. If the input level is not sufficiently large, the SNR will deteriorate from that given by Eq. (3–17) to one that will be described later by Eq. (3–28a) and Eq. (3–28b); however, the quantizing noise will still be more or less random.

If the input level is reduced further to a relatively small value with respect to the design level, the error values are not equally likely from sample to sample, and the noise has a harsh sound resembling gravel being poured into a barrel. This is called *granular noise*, and it can be randomized (the noise power can be decreased) by increasing the number of quantization levels and, consequently, the PCM bit rate. Alternatively, granular noise can be reduced by using a nonuniform quantizer, such as the μ -law or A -law quantizers that are described in the next section.

The fourth type of quantizing noise that may occur at the output of a PCM system is *hunting noise*. It can occur when the input analog waveform is nearly constant, including when there is no signal (i.e., the zero level). For these conditions, the sample values at the quantizer output (see Fig. 3–8) can oscillate between two adjacent quantization levels, causing an undesired sinusoidal-type tone of frequency $\frac{1}{2}f_s$ at the output of the PCM system. Hunting noise can be reduced by filtering out the tone or by designing the quantizer so that there is no vertical step at the “constant” value of the inputs—such as at zero volts input for the case of no signal. For that case, the hunting noise is also called *idle channel noise*. This kind of noise can be reduced by using a horizontal step at the origin of the quantizer output–input characteristic, instead of a vertical step as shown in Fig. 3–8a.

Recalling that $M = 2^n$, we may express Eqs. (3–17a) and (3–17b) in decibels as

$$\left(\frac{S}{N}\right)_{\text{dB}} = 6.02n + \alpha \quad (3-18)$$

where n is the number of bits in the PCM word, $\alpha = 4.77$ for the peak SNR, and $\alpha = 0$ for the average SNR. This equation—called the *6-dB rule*—points out the significant performance characteristic for PCM: *An additional 6-dB improvement in SNR is obtained for each bit added to the PCM word*. This relationship is illustrated in Table 3–2. Equation (3–18) is valid for a wide variety of assumptions (such as various types of input waveshapes and quantization characteristics), although the value of α will depend on these assumptions [Jayant and Noll, 1984]. It is assumed that there are no bit errors and that the input signal level is large enough to range over a significant number of quantizing levels.

Example 3-4 DESIGN OF A PCM SIGNAL FOR TELEPHONE SYSTEMS

Assume that an analog audio voice-frequency (VF) telephone signal occupies a band from 300 to 3,400 Hz. The signal is to be converted to a PCM signal for transmission over a digital telephone system. The minimum sampling frequency is $2 \times 3.4 = 6.8$ ksamples/sec. In order to allow the use of a low-cost low-pass antialiasing filter with a reasonable transition band, the VF signal is oversampled with a sampling frequency of 8 ksamples/sec. This is the standard adopted by the United States telephone industry. Assume that each sample value is represented by 8 bits; then the bit rate of the binary PCM signal is

$$\begin{aligned} R &= (f_s \text{ samples/s})(n \text{ bits/sample}) \\ &= (8 \text{ ksamples/s})(8 \text{ bits/sample}) = 64 \text{ kbits/s} \end{aligned} \quad (3-19)$$

This 64-kbit/s signal is called a *DS-0* signal (digital signal, type zero).

Referring to the dimensionality theorem, Eq. (3-15a), the minimum absolute bandwidth of this binary PCM signal is

$$(B)_{\min} = \frac{1}{2}R = 32 \text{ kHz} \quad (3-20)$$

This bandwidth is realized when a $(\sin x)/x$ pulse shape is used to generate the PCM waveform. If rectangular pulse shaping is used, the absolute bandwidth is infinity, and from Eq. (3-15b), the first null bandwidth is

$$B_{\text{PCM}} = R = 64 \text{ kHz} \quad (3-21)$$

That is, we require a bandwidth of 64 kHz to transmit this digital voice PCM signal, where the bandwidth of the original analog voice signal was, at most, 4 kHz. (In Sec. 3-5, we will see that the bandwidth of this binary PCM signal may be reduced somewhat by filtering without introducing ISI.) Using Eq. (3-17a), we observe that the peak signal-to-quantizing noise power ratio is

$$\left(\frac{S}{N}\right)_{\text{pk out}} = 3(2^8)^2 = 52.9 \text{ dB} \quad (3-22)$$

where $M = 2^8$. Note that the inclusion of a parity bit does not affect the quantizing noise. However, coding (parity bits) may be used to decrease the number of decoded errors caused by channel noise or ISI. In this example, these effects were assumed to be negligible because P_e was assumed to be zero. See Example3_04.m for exact results using Eq. (3-16a).

The performance of a PCM system for the most optimistic case (i.e., $P_e = 0$) can easily be obtained as a function of M , the number of quantizing steps used. The results are shown in Table 3-2. In obtaining the SNR, no parity bits were used in the PCM word.

One might use this table to look at the design requirements in a proposed PCM system. For example, high-fidelity enthusiasts are turning to digital audio recording techniques, in which PCM signals, instead of the analog audio signal, are recorded to produce superb sound reproduction. For a dynamic range of 90 dB, at least 15-bit PCM words would be required. Furthermore, if the analog signal had a bandwidth of 20 kHz, the first null

bandwidth for a rectangular-bitshape PCM would be $2 \times 20 \text{ kHz} \times 15 = 600 \text{ kHz}$. With an allowance for some oversampling and a wider bandwidth to minimize ISI, the bandwidth needed would be around 1.5 MHz. It is realized that expensive high-quality analog recording devices are hard pressed to reproduce a dynamic range of 70 dB. Thus, digital audio is one way to achieve improved performance, a fact that has been proved in the marketplace with the popularity of the digital compact disk (CD). The CD uses a 16-bit PCM word and a sampling rate of 44.1 kHz on each stereo channel [Miyaoka, 1984; Peek, 1985]. Reed–Solomon coding with interleaving is used to correct burst errors that occur as a result of scratches and fingerprints on the compact disk.

Other examples of PCM are wave (wav) files that are used to store audio information on digital computer systems. Typically, the sampling frequencies that are used are 8, 11.025, 12, 16, 22.025, 24, 32, 41, 48, 96, and 192 ksamples/sec. Typically, the encoder uses 16 bits/sample, but 8, 24, and 32 bits/sample are also used. For more information on audio formats, such as MP3, see a comparision of audio formats as given by Wikipedia (<http://en.wikipedia.org>).

PCM has many different variants. The PCM described earlier in this section is also known as *Linear PCM* (LPCM). *Differential PCM* (DPCM) uses the difference between the actual sample value and the predicted sample value to encode a PCM word. *Adaptive PCM* (ADPCM) varies the size of the quantizing step. *Delta Modulation* (DM) uses one bit per sample and is described in Sec. 3–8.




Nonuniform Quantizing: μ -Law and A-Law Companding

Voice analog signals are more likely to have amplitude values near zero than at the extreme peak values allowed. For example, in digitizing voice signals, if the peak value allowed is 1 V, weak passages may have voltage levels on the order of 0.1 V (20 dB down). For signals, such as these, with nonuniform amplitude distribution, the granular quantizing noise will be a serious problem if the step size is not reduced for amplitude values near zero and increased for extremely large values. This technique is called *nonuniform quantizing*, since a variable step size is used. An example of a nonuniform quantizing characteristic is shown in Fig. 3–9a.

The effect of nonuniform quantizing can be obtained by first passing the analog signal through a compression (nonlinear) amplifier and then into a PCM circuit that uses a uniform quantizer. In the United States, a μ -*law* type of *compression* characteristic is used that is defined [Smith, 1957] by

$$|w_2(t)| = \frac{\ln(1 + \mu|w_1(t)|)}{\ln(1 + \mu)} \quad (3-23)$$

where the allowed peak values of $w_1(t)$ are ± 1 (i.e., $|w_1(t)| \leq 1$), μ is a positive constant that is a parameter, and \ln denotes the natural logarithm. This compression characteristic is shown in Fig. 3–9b for several values of μ , and it is noted that $\mu = 0$ corresponds to linear amplification (uniform quantization overall). In the United States, Canada, and Japan, the telephone companies use a $\mu = 255$ compression characteristic in their PCM systems [Dammann, McDaniel, and Maddox, 1972].

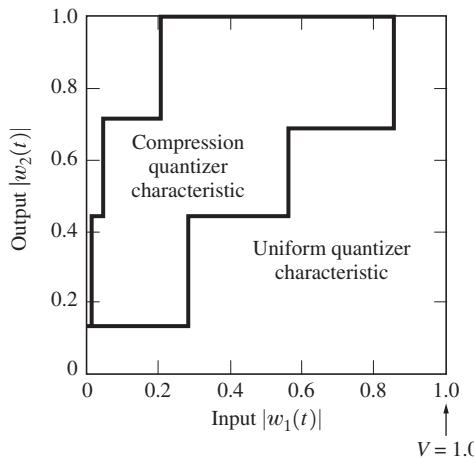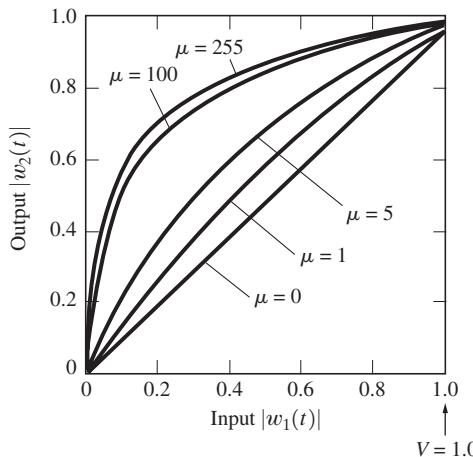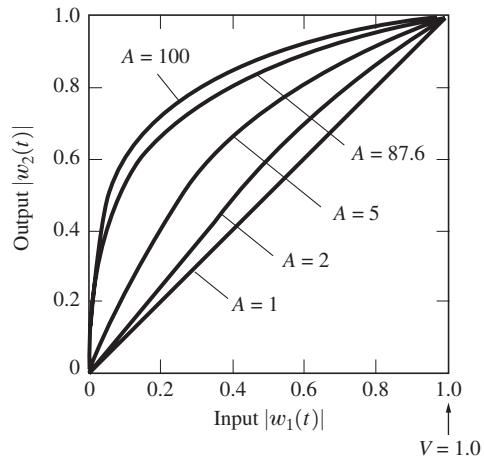(a) $M = 8$ Quantizer Characteristic(b) μ -law Characteristic

(c) A-law Characteristic

Figure 3-9 Compression characteristics (first quadrant shown).**Example 3-5 μ -LAW COMPRESSION CHARACTERISTIC**

Plot the μ -law compression characteristic as illustrated in Figure 3-9b. See Example3_05.m for the solution.

In practice, the smooth nonlinear characteristics of Fig 3-9b are approximated by piecewise linear chords as shown in Fig. 3-9d for the $\mu = 255$ characteristic [Dammann, McDaniel, and Maddox, 1972]. Each chord is approximated by a uniform quantizer with 16 steps and an input step size that is set by the particular segment number. That is, 16 steps

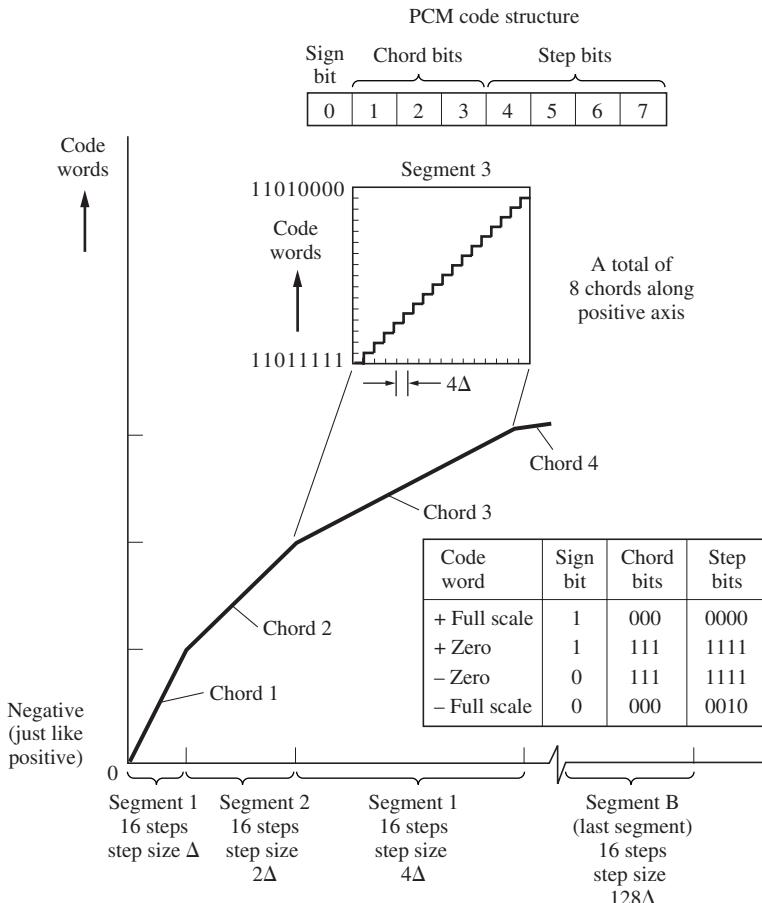


Figure 3-9 Continued

(including a half-width step on each side of zero) of width Δ are used for Segment 1, 16 steps of width 2Δ are used for Segment 2, 16 steps of width 4Δ for Segment 3, etc. The value of Δ is chosen so that the full scale value (last step of Segment 8) matches the peak value of the input analog signal. This segmenting technique is now accepted worldwide for the $\mu = 255$ characteristic. As shown in Fig. 3-9d, the 8-bit PCM code word consists of a sign bit that denotes a positive or negative input voltage, three chord bits that denote the segment number, and four step bits that denote the particular step within the segment.

Another compression law, used mainly in Europe, is the *A-law* characteristic, defined [Cattermole, 1969] by

$$|w_2(t)| = \begin{cases} \frac{A |w_1(t)|}{1 + \ln A}, & 0 \leq |w_1(t)| \leq \frac{1}{A} \\ \frac{1 + \ln (A |w_1(t)|)}{1 + \ln A}, & \frac{1}{A} \leq |w_1(t)| \leq 1 \end{cases} \quad (3-24)$$

where $|w_1(t)| \leq 1$ and A is a positive constant. The A -law compression characteristic is shown in Fig. 3-9c. The typical value for A is 87.6.

In practice, the A -law characteristic is implemented by using a segmenting technique similar to that shown in Fig. 3-9d, except that, for Segment 1, there are 16 steps of width Δ ; for segment 2, 16 steps of width Δ ; for Segment 3, 16 steps of width 2Δ ; for Segment 4, 16 steps of width 4Δ ; etc.

When compression is used at the transmitter, *expansion* (i.e., decompression) must be used at the receiver output to restore signal levels to their correct relative values. The *expandor* characteristic is the inverse of the compression characteristic, and the combination of a compressor and an expandor is called a *compandor*.

Once again, it can be shown that the output SNR follows the 6-dB law [Couch, 1993]

$$\left(\frac{S}{N}\right)_{\text{dB}} = 6.02n + \alpha \quad (3-25)$$

where

$$\alpha = 4.77 - 20 \log(V/x_{\text{rms}}) \quad (\text{uniform quantizing}) \quad (3-26a)$$

or for sufficiently large input levels,

$$\alpha \approx 4.77 - 20 \log [\ln(1 + \mu)] \quad (\mu\text{-law companding}) \quad (3-26b)$$

or [Jayant and Noll, 1984]

$$\alpha \approx 4.77 - 20 \log [1 + \ln A] \quad (A\text{-law companding}) \quad (3-26c)$$

and n is the number of bits used in the PCM word. Also, V is the peak design level of the quantizer, and x_{rms} is the rms value of the input analog signal. Notice that the output SNR is a function of the input level for the case of uniform quantizing (no companding), but is relatively insensitive to the input level for μ -law and A -law companding, as shown in Fig. 3-10. The ratio V/x_{rms} is called the *loading factor*. The input level is often set for a loading factor of 4, which is 12 dB, to ensure that the overload quantizing noise will be negligible. In practice, this gives $\alpha = -7.3$ for the case of uniform encoding, as compared to $\alpha = 0$ that was obtained for the ideal conditions associated with Eq. (3-17b). All of these results give a 6-dB increase in the signal-to-quantizing noise ratio for each bit added to the PCM code word.

3-4 DIGITAL SIGNALING

In this section, we will answer the following questions: How do we mathematically represent the waveform for a digital signal, such as the PCM signal of Figure 3-8d, and how do we estimate the bandwidth of the waveform?

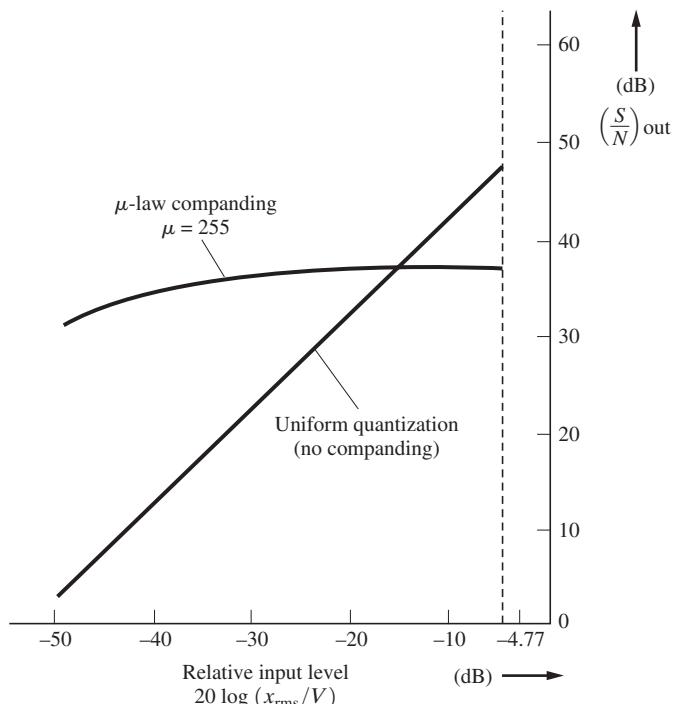


Figure 3–10 Output SNR of 8-bit PCM systems with and without companding.

The voltage (or current) waveforms for digital signals can be expressed as an orthogonal series with a finite number of terms N . That is, the waveform can be written as

$$w(t) = \sum_{k=1}^N w_k \varphi_k(t), \quad 0 < t < T_0 \quad (3-27)$$

where w_k represents the digital data and $\varphi_k(t)$, $k = 1, 2, \dots, N$, are N orthogonal functions that give the waveform its waveshape. (This will be illustrated by examples that follow in the sections titled “Binary Waveforms” and “Multilevel Waveforms.”) N is the number of dimensions required to describe the waveform. The term *dimension* arises from the geometric interpretation as described in the next section on vector representation. The waveform $w(t)$, as given by Eq. (3-27) to represent a PCM word or any message of the M message digital source, is assigned a unique set of digital data $\{w_k\}$, $k = 1, 2, \dots, N$, to represent that message. For example, for a binary source consisting of an ASCII computer keyboard, the letter X is assigned the code word 0001101. In this case, $w_1 = 0$, $w_2 = 0$, $w_3 = 0$, $w_4 = 1$, $w_5 = 1$, $w_6 = 0$, $w_7 = 1$, and $N = 7$. This message (i.e., the letter X) is sent out over a time interval of T_0 seconds, and the voltage (or current waveform) representing the message, as described by

Eq. (3-27), would have a time span of T_0 seconds. The data rate could be computed using the following definitions:

DEFINITION. The *baud (symbol rate)* is[†]

$$D = N/T_0 \text{ symbols/s} \quad (3-28)$$

where N is the number of dimensions used in T_0 s.

DEFINITION. The *bit rate* is

$$R = n/T_0 \text{ bits/s} \quad (3-29)$$

where n is the number of data bits sent in T_0 s.

For the case when the w_k 's have binary values, $n=N$, and $w(t)$ is said to be a *binary signal*. When the w_k 's are assigned more than two possible values (i.e., when they are not binary), $w(t)$ is said to be a *multilevel signal*. These two types of signaling are discussed in separate sections later.

A critical question is, If the waveform of Eq. (3-27) is transmitted over a channel and appears at the input to the receiver, how can a receiver be built to detect the data? Because $w(t)$ is an orthogonal series, the formal way to detect the data is for the receiver to evaluate the orthogonal series coefficient. That is, using Eq. (2-84), we get

$$w_k = \frac{1}{K_k} \int_0^{T_0} w(t)\varphi_k^*(t)dt, k = 1, 2, \dots, N \quad (3-30)$$

where $w(t)$ is the waveform at the receiver input and $\varphi_k(t)$ is the known orthogonal function that was used to generate the waveform. It can also be shown that Eq. (3-30) is the optimum way to detect data when the received signal is corrupted by white additive noise; this procedure is called *matched filter* detection using correlation processing and is described in Sec. 6-8. Detection of data is illustrated in Examples 3-7 and 3-8.

Vector Representation

The orthogonal function space representation of Eq. (3-27) corresponds to the orthogonal vector space represented by

$$\mathbf{w} = \sum_{j=1}^N w_j \varphi_j \quad (3-31a)$$

where the boldface type denotes a vector representing the waveform of Eq. (3-27), \mathbf{w} is an N -dimensional vector in Euclidean vector space, and $\{\varphi_j\}$ is an orthogonal set of N -directional vectors that become a unit vector set if the K_j 's of Eq. (2-78) are all unity. A shorthand notation for the vector \mathbf{w} of Eq. (3-52a) is given by a row vector:

$$\mathbf{w} = (w_1, w_2, w_3, \dots, w_N) \quad (3-31b)$$

[†] In the technical literature, the term *baud rate* instead of baud is sometimes used, even though baud rate is a misnomer, since the term *baud*, by definition, is the symbol rate (symbols/s).

Example 3–6 VECTOR REPRESENTATION OF A BINARY SIGNAL

Examine the representation for the waveform of a 3-bit (binary) signal shown in Fig. 3–11a. This signal could be directly represented by

$$s(t) = \sum_{j=1}^{N=3} d_j p\left[t - (j - \frac{1}{2})T\right] = \sum_{j=1}^{N=3} d_j p_j(t)$$

where $p(t)$ is shown in Fig. 3–11b and $p_j(t) \triangleq p\left[t - (j - \frac{1}{2})T\right]$.

The set $\{p_j(t)\}$ is a set of orthogonal functions that are not normalized. The vector

$$\mathbf{d} = (d_1, d_2, d_3) = (1, 0, 1)$$

is the binary word with 1 representing a binary 1 and 0 representing a binary 0. The function $p(t)$ is the pulse shape for each bit.

Using the orthogonal function approach, we can represent the waveform by

$$s(t) = \sum_{j=1}^{N=3} s_j \varphi_j(t)$$

Let $\{\varphi_j(t)\}$ be the corresponding set of orthonormal functions. Then, using Eq. (2–78) yields

$$\varphi_j(t) = \frac{p_j(t)}{\sqrt{K_j}} = \frac{p_j(t)}{\sqrt{\int_0^{T_0} p_j^2(t) dt}} = \frac{p_j(t)}{\sqrt{25T}}$$

or


$$\varphi_j(t) = \begin{cases} \frac{1}{\sqrt{T}}, & (j-1)T < t < jT \\ 0, & \text{otherwise} \end{cases}$$

where $j = 1, 2, \text{ or } 3$. Using Eq. (2–84), where $a = 0$ and $b = 3T$, we find that the orthonormal series coefficients for the digital signal shown in Fig. 3–11a are


$$\mathbf{s} = (s_1, s_2, s_3) = (5\sqrt{T}, 0, 5\sqrt{T})$$

The vector representation for $s(t)$ is shown in Fig. 3–11d. Note that for this $N = 3$ -dimensional case with binary signaling, only $2^3 = 8$ different messages could be represented. Each message corresponds to a vector that terminates on a vertex of a cube.


See Example3_06.m for the waveform generated by the orthonormal series. This is identical to Fig. 3–11a.

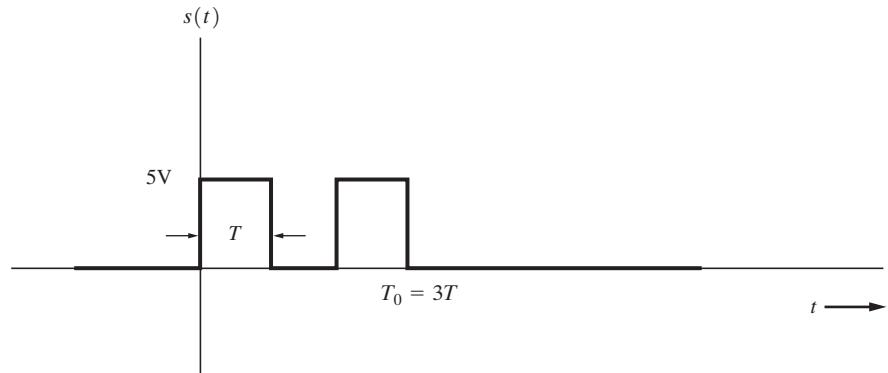


(a) A Three-Bit Signal Waveform

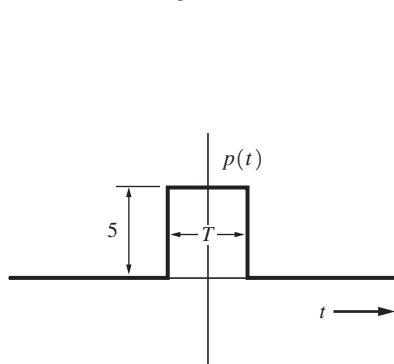

(b) Bit Shape Pulse

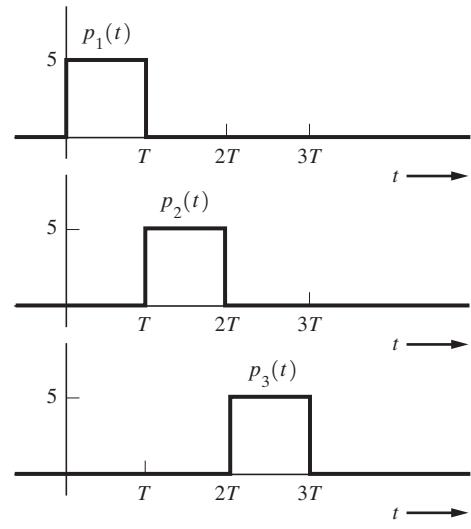

(c) Orthogonal Function Set

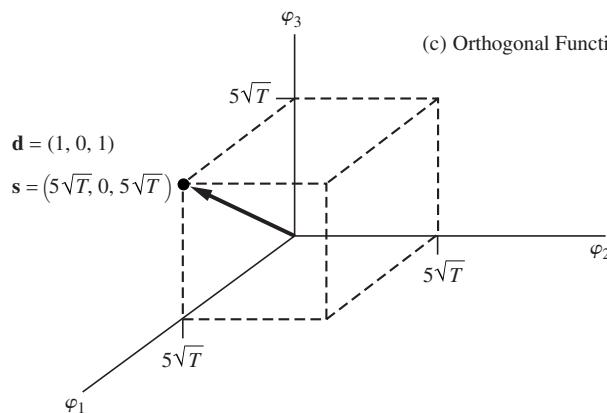

(d) Vector Representation of the 3-Bit Signal

Figure 3-11 Representation for a 3-bit binary digital signal.

Bandwidth Estimation

The lower bound for the bandwidth of the waveform representing the digital signal, Eq. (3–27), can be obtained from the dimensionality theorem. Thus, from Eqs. (2–174) and (3–28), the bandwidth of the waveform $w(t)$ is

$$B \geq \frac{N}{2T_0} = \frac{1}{2}D \text{ Hz} \quad (3-32)$$

If the $\varphi_k(t)$ are of the $\sin(x)/x$ type, the lower bound absolute bandwidth of $N/(2T_0) = D/2$ will be achieved; otherwise (i.e., for other pulse shapes), the bandwidth will be larger than this lower bound. Equation (3–32) is useful for predicting the bandwidth of digital signals, especially when the exact bandwidth of the signal is difficult (or impossible) to calculate. This point is illustrated in Examples 3–7 and 3–8.

Binary Signaling

A waveform representing a binary signal can be described by the N -dimensional orthogonal series of Eq. (3–27), where the orthogonal series coefficients, w_k , take on binary values. More details about binary signaling, including their waveforms, data rate, and waveform bandwidth, are illustrated by the following example.

Example 3–7 BINARY SIGNALING

Let us examine some properties of *binary signaling* from a digital source that can produce $M = 256$ distinct messages. Each message could be represented by $n = 8$ -bit binary words because $M = 2^n = 2^8 = 256$. Assume that it takes $T_0 = 8$ ms to transmit one message and that a particular message corresponding to the code word 01001110 is to be transmitted. Then,

$$w_1 = 0, w_2 = 1, w_3 = 0, w_4 = 0, w_5 = 1, w_6 = 1, w_7 = 1, \text{ and } w_8 = 0$$

CASE 1. RECTANGULAR PULSE ORTHOGONAL FUNCTIONS Assume that the orthogonal functions $\varphi_k(t)$ are given by unity-amplitude rectangular pulses that are $T_b = T_0/n = 8/8 = 1$ ms wide, where T_b is the time that it takes to send 1 bit of data. Then, with the use of Eq. (3–27) and MATLAB, the resulting waveform transmitted is given by Fig. 3–12a.

The data can be detected at the receiver by evaluating the orthogonal-series coefficients as given by Eq. (3–30). For the case of rectangular pulses, this is equivalent to sampling the waveform anywhere within each bit interval.[†] Referring to Fig. 3–12a, we see that sampling within each $T_b = 1$ -ms interval results in detecting the correct 8-bit data word 01001110.

The bit rate and the baud (symbol rate) of the binary signal are $R = n/T_0 = 1$ kbit/s, and $D = N/T_0 = 1$ kbaud, because $N = n = 8$ and $T_0 = 8$ ms. That is, the bit rate and the baud are equal for binary signaling.

[†] Sampling detection is optimal only if the received waveform is noise free. See the discussion following Eq. (3–30).

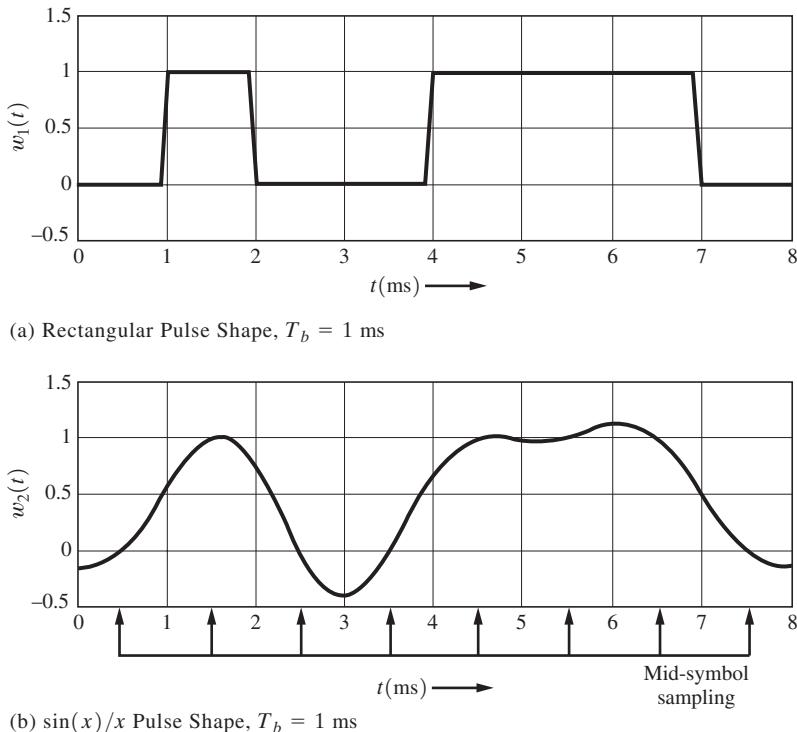


Figure 3–12 Binary signaling (computed). (See Example3_07.m.)

What is the bandwidth for the waveform in Fig. 3–12a? Using Eq. (3–32), we find that the lower bound for the bandwidth is $\frac{1}{2}D = 500$ Hz. In Sec. 3–5, it is shown that the actual null bandwidth of this binary signal with a rectangular pulse shape is $B = 1/T_s = D = 1,000$ Hz. This is larger than the lower bound for the bandwidth, so the question arises, What is the waveshape that gives the lower bound bandwidth of 500 Hz? The answer is one with $\sin(x)/x$ pulses, as described in Case 2.

CASE 2. SIN (X)/X PULSE ORTHOGONAL FUNCTIONS From an intuitive viewpoint, we know that the sharp corners of the rectangular pulse need to be rounded to reduce the bandwidth of the waveform. Furthermore, recalling our study with the sampling theorem, Eq. (2–158), we realize that the $\sin(x)/x$ -type pulse shape has the minimum bandwidth. Consequently, we choose

$$\varphi_k(t) = \frac{\sin\left\{\frac{\pi}{T_s}(t - kT_s)\right\}}{\frac{\pi}{T_s}(t - kT_s)} \quad (3-33)$$

where $T_s = T_b$ for the case of binary signaling. The resulting waveform that is transmitted is shown in Fig. 3–12b.

Once again, the data can be detected at the receiver by evaluating the orthogonal-series coefficients. Because $\sin(x)/x$ orthogonal functions are used, Eq. (2–160) shows that the data can be recovered simply by sampling[†] the received waveform at the midpoint of each symbol interval. Referring to Fig. 3–12 and sampling at the midpoint of each $T_s = 1\text{-ms}$ interval, the correct 8-bit word 01001110 is detected.

For Case 2, the bit rate and the baud are still $R = 1 \text{ kbit/s}$ and $D = 1 \text{ kbaud}$. The absolute bandwidth of Eq. (3–33) can be evaluated with the help of Fig. 2–6b, where $2W = 1/T_s$. That is, $B = 1/(2T_s) = 500 \text{ Hz}$. Thus, the lower-bound bandwidth (as predicted by the dimensionality theorem) is achieved.

Note that when the rectangular pulse shape is used, as shown in Fig. 3–12a, the digital source information is transmitted via a binary *digital waveform*. That is, the digital signal is a digital waveform. However, when the $\sin(x)/x$ pulse shape is used, as shown in Fig. 3–12b, the digital source information is transmitted via an *analog waveform* (i.e., an infinite number of voltage values ranging between -0.4 and 1.2 V are used).

See Example3_07.m for the plots shown in Fig. 3–12.


Multilevel Signaling

In the case of binary signaling discussed in Example 3–7, the lower-bound bandwidth of $B = N/(2T_0)$ was achieved. That is, for Case 2, $N = 8$ pulses were required and gave a bandwidth of 500 Hz , for a message duration of $T_0 = 8 \text{ ms}$. However, this bandwidth could be made smaller if N could be reduced. Indeed, N (and, consequently, the bandwidth) can be reduced by letting the w_k 's of Eq. (3–27) take on $L > 2$ possible values (instead of just the two possible values that were used for binary signaling). When the w_k 's have $L > 2$ possible values, the resulting waveform obtained from Eq. (3–27) is called a *multilevel signal*.

Example 3–8 $L = 4$ MULTILEVEL SIGNAL

Here, the $M = 256$ -message source of Example 3–7 will be encoded into an $L = 4$ multilevel signal, and the message will be sent, once again, in $T_0 = 8 \text{ ms}$. Multilevel data can be obtained by encoding the ℓ -bit binary data of the message source into L -level data by using a *digital-to-analog converter* (DAC),[†] as shown in Fig. 3–13. For example, one possible encoding scheme for an $\ell = 2$ -bit DAC is shown in Table 3–3. $\ell = 2$, bits are read in at a time to produce an output that is one of $L = 4$ possible levels, where $L = 2^\ell$.

[†] The term *analog* in *digital-to-analog converter* is a misnomer because the output is an L -level digital signal. However, these devices are called digital-to-analog converters in data manuals.

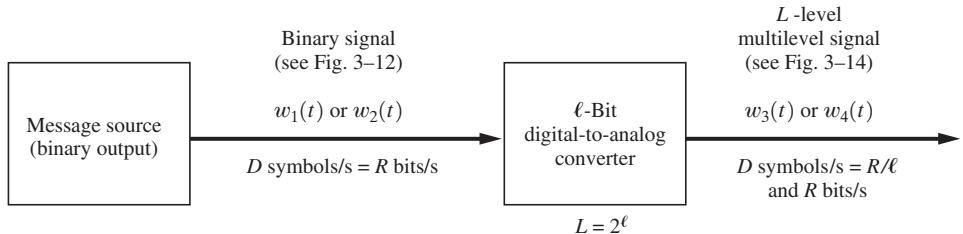**Figure 3-13** Binary-to-multilevel signal conversion.**TABLE 3-3** A 2-BIT DIGITAL-TO-ANALOG CONVERTER

Binary Input ($\ell = 2$ bits)	Output Level (V)
11	+3
10	+1
00	-1
01	-3

Thus, for the binary code word 01001110, the sequence of four-level outputs would be $-3, -1, +3$, and $+1$. Consequently, the w_k 's of Eq. (3-27) would be $w_1 = -3$, $w_2 = -1$, $w_3 = +3$, and $w_4 = +1$, where $N = 4$ dimensions are used. The corresponding $L = 4$ -level waveform is shown in Fig. 3-14. Fig. 3-14a gives the multilevel waveform when rectangular pulses are used for $\varphi_k(t)$, and Fig. 3-14b gives the multilevel waveform when $\sin(x)/x$ pulses are used. For either case, the receiver could recover the four-level data corresponding to the w_k values by sampling the received waveform at the middle of the $T_s = 2$ -ms symbol intervals (i.e., $T = 1, 3, 5$, and 7 ms).[†]

For these $L = 4$ -level signals, the equivalent bit interval is $T_b = 1$ ms because each symbol carries $\ell = 2$ bits of data (i.e., one of $L = 4$ -levels as shown in Table 3-3). The bit rate is $R = n/T_0 = \ell/T_s = 1$ kbit/s (same as for Example 3-7), and the baud rate is $D = N/T_0 = 1/T_s = 0.5$ kbaud (different from that of Example 3-7). The bit rate and the baud rate are related by

$$R = \ell D \quad (3-34)$$

where $\ell = \log_2(L)$ is the number of bits read in by the DAC on each clock cycle.

The null bandwidth of the rectangular-pulse multilevel waveform, Fig. 3-14a, is $B = 1/T_s = D = 500$ Hz. From Eq. (3-32), the absolute bandwidth of the $\sin(x)/x$ -pulse multilevel waveform, Fig. 3-14b, is $B = N/(2T_0) = 1/(2T_s) = D/2 = 250$ Hz. Thus, each of these $L = 4$ -level waveforms has half the bandwidth of the corresponding binary signal (with the same pulse shape). In general, an L -level multilevel signal would have $1/\ell$ the bandwidth of the corresponding binary signal, where $\ell = \log_2(L)$. This bandwidth reduction is achieved because the symbol duration of the multilevel signal is ℓ times that of the binary signal. The bit rate R of the binary signal is ℓ times the symbol rate of the multilevel signal.

See Example3_08.m for the plots shown in Fig. 3-14.

[†] Sampling detection is optimal only if the received waveform is noise free. See the discussion following Eq. (3-30).

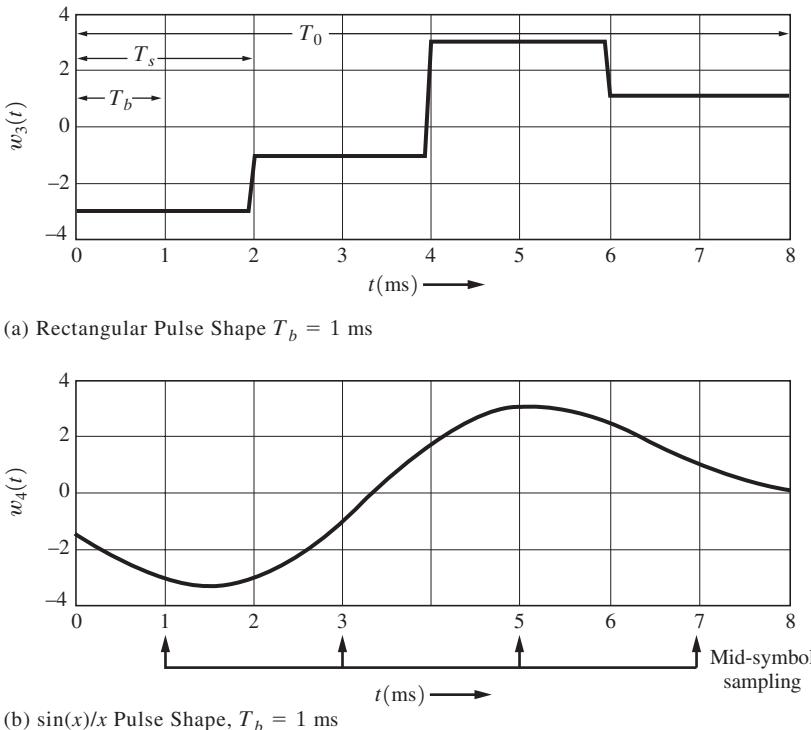


Figure 3-14 $L = 4$ -level signaling (computed). (See Example3_08.m.)

In the next section, exact formulas are obtained for the power spectral density of binary and multilevel signals.

3-5 LINE CODES AND SPECTRA

Binary Line Coding

Binary 1's and 0's, such as in PCM signaling, may be represented in various serial-bit signaling formats called *line codes*. Some of the more popular line codes are shown in Fig. 3-15.[†] There are two major categories: *return-to-zero* (RZ) and *nonreturn-to-zero* (NRZ). With RZ coding, the waveform returns to a zero-volt level for a portion (usually one-half) of the bit interval. The waveforms for the line code may be further classified according to the rule that is used to assign voltage levels to represent the binary data. Some examples follow.

[†] Strictly speaking, punched paper tape is a storage medium, not a line code. However, it is included for historical purposes to illustrate the origin of the terms *mark* and *space*. In punched paper tape, the binary 1 corresponds to a hole (mark), and a binary 0 corresponds to no hole (space).

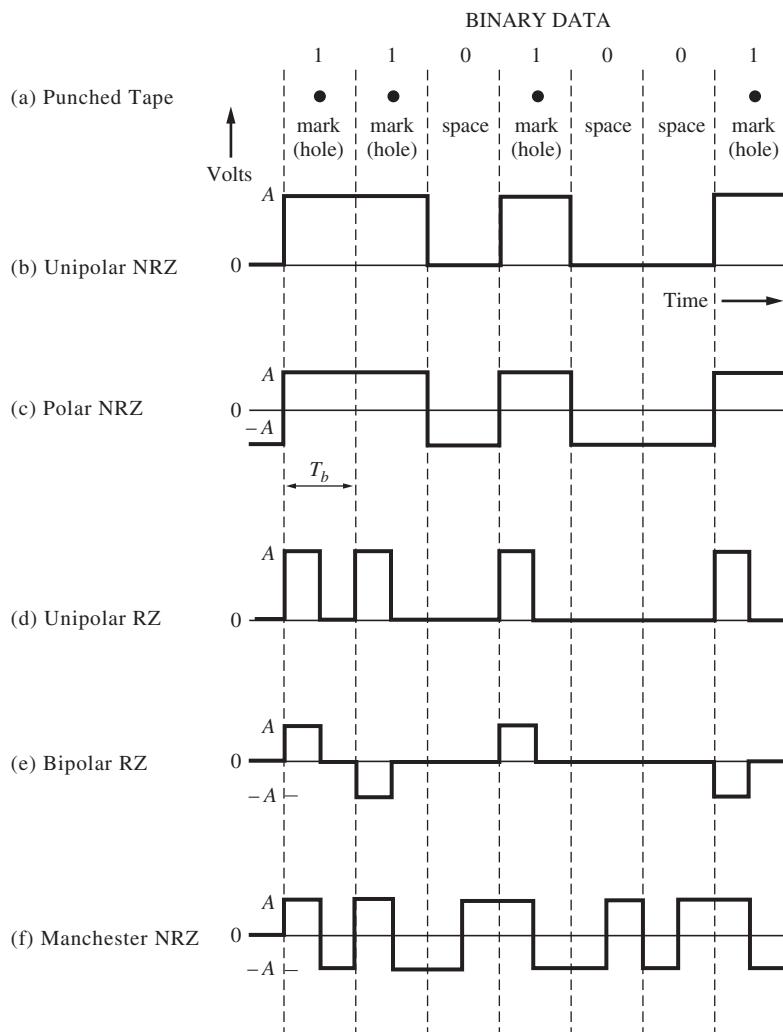


Figure 3–15 Binary signaling formats.

Unipolar Signaling. In positive-logic unipolar signaling, the binary 1 is represented by a high level (+A volts) and a binary 0 by a zero level. This type of signaling is also called *on-off keying*.

Polar Signaling. Binary 1's and 0's are represented by equal positive and negative levels.

Bipolar (Pseudoternary) Signaling. Binary 1's are represented by alternately positive or negative values. The binary 0 is represented by a zero level. The term *pseudoternary* refers to the use of three encoded signal levels to represent two-level (binary) data. This is also called *alternate mark inversion* (AMI) signaling.

Manchester Signaling. Each binary 1 is represented by a positive half-bit period pulse followed by a negative half-bit period pulse. Similarly, a binary 0 is represented by a negative half-bit period pulse followed by a positive half-bit period pulse. This type of signaling is also called *split-phase encoding*.

Later in this book, we will often use shortened notations. *Unipolar NRZ will be denoted simply by unipolar, polar NRZ by polar, and bipolar RZ by bipolar*. In this regard, unfortunately, the term *bipolar* has two different conflicting definitions. The meaning is usually made clear by the context in which it is used: (1) In the space communication industry, polar NRZ is sometimes called bipolar NRZ, or simply bipolar (this meaning will not be used in this book); and (2) in the telephone industry, the term *bipolar* denotes pseudoternary signaling (this is the meaning we use in this book), as in the T1 bipolar RZ signaling described in Sec. 3–9.

The line codes shown in Fig. 3–15 are also known by other names [Deffeback and Frost, 1971; Sklar, 2001]. For example, polar NRZ is also called NRZ-L, where L denotes the normal logical level assignment. Bipolar RZ is also called RZ-AMI, where AMI denotes alternate mark (binary 1) inversion. Bipolar NRZ is called NRZ-M, where M denotes inversion on mark. Negative logic bipolar NRZ is called NRZ-S, where S denotes inversion on space. Manchester NRZ is called Bi- φ -L, for biphase with normal logic level.

Other line codes, too numerous to list here, can also be found in the literature [Bylanski and Ingram, 1976; Bic, Dupontel, and Imbeaux, 1991]. For example, the bipolar (pseudoternary) type may be extended into several subclasses as briefly discussed following Eq. (3–45).

Each of the line codes shown in Fig. 3–15 has advantages and disadvantages. For example, the unipolar NRZ line code has the advantage of using circuits that require only one power supply (e.g., a single 5-V power supply for TTL circuits), but it has the disadvantage of requiring channels that are DC coupled (i.e., with frequency response down to $f = 0$), because the waveform has a nonzero DC value. The polar NRZ line code does not require a DC-coupled channel, *provided that* the data toggles between binary 1's and 0's often and that equal numbers of binary 1's and 0's are sent. However, the circuitry that produces the polar NRZ signal requires a negative-voltage power supply, as well as a positive-voltage power supply. The Manchester NRZ line code has the advantage of always having a 0-DC value, regardless of the data sequence, but it has twice the bandwidth of the unipolar NRZ or polar NRZ code because the pulses are half the width. (See Fig. 3–15.)

The following are some of the desirable properties of a line code:

- *Self-synchronization.* There is enough timing information built into the code so that bit synchronizers can be designed to extract the timing or clock signal. A long series of binary 1's and 0's should not cause a problem in time recovery.
- *Low probability of bit error.* Receivers can be designed that will recover the binary data with a low probability of bit error when the input data signal is corrupted by noise or ISI. The ISI problem is discussed in Sec. 3–6, and the effect of noise is covered in Chapter 7.
- *A spectrum that is suitable for the channel.* For example, if the channel is AC coupled, the PSD of the line code signal should be negligible at frequencies near zero. In addition, the signal bandwidth needs to be sufficiently small compared to the channel bandwidth, so that ISI will not be a problem.

- *Transmission bandwidth.* This should be as small as possible.
- *Error detection capability.* It should be possible to implement this feature easily by the addition of channel encoders and decoders, or the feature should be incorporated into the line code.
- *Transparency.* The data protocol and line code are designed so that *every possible sequence of data* is faithfully and *transparently* received.

A protocol is not transparent if certain words are reserved for control sequences so that, for example, a certain word instructs the receiver to send all data that follow that code word to the printer. This feature causes a problem when a random data file (such as a machine language file) is transferred over the link, since some of the words in the file might be control character sequences. These sequences would be intercepted by the receiving system, and the defined action would be carried out, instead of passing the word on to the intended destination. In addition, a code is not transparent if some sequence will result in a loss of clocking signal (out of the bit synchronizer at the receiver). Because a string of zeros will result in a loss of the clocking signal, the bipolar format is not transparent.

The particular type of waveform selected for digital signaling depends on the application. The advantages and disadvantages of each signal format are discussed further after their spectra have been derived.

Power Spectra for Binary Line Codes

The PSD can be evaluated by using either a deterministic or a stochastic technique. This was first discussed in Chapter 1 and later illustrated in Example 2–22. To evaluate the PSD using the deterministic technique, the waveform for a line code that results from a particular data sequence is used. The approximate PSD is then evaluated by using Eq. (2–66) or, if the line code is periodic, Eq. (2–126). (Work Prob. 3–24 to apply this deterministic approach.) Alternatively, the PSD may be evaluated by using the stochastic approach that is developed in Chapter 6. The stochastic approach will be used to obtain the PSD of line codes that are shown in Fig. 3–15, because it gives the PSD for the line code with a random data sequence (instead of that for a particular data sequence).

As discussed and illustrated in Section 3–4, a digital signal (or line code) can be represented by

$$s(t) = \sum_{n=-\infty}^{\infty} a_n f(t - nT_s) \quad (3-35)$$

where $f(t)$ is the symbol pulse shape and T_s is the duration of one symbol. For binary signaling, $T_s = T_b$, where T_b is the time that it takes to send 1 bit. For multilevel signaling, $T_s = \ell T_b$. The set $\{a_n\}$ is the set of random data. For example, for the unipolar NRZ line code, $f(t) = \Pi\left(\frac{t}{T_b}\right)$ and $a_n = +A$ V when a binary 1 is sent and $a_n = 0$ V when a binary 0 is sent.

As is proven in Sec. 6–2, from Eq. (6–70), the general expression for the PSD of a digital signal is

$$\mathcal{P}_s(f) = \frac{|F(f)|^2}{T_s} \sum_{k=-\infty}^{\infty} R(k) e^{j2\pi k f T_s} \quad (3-36a)$$

where $F(f)$ is the Fourier transform of the pulse shape $f(t)$ and $R(k)$ is the autocorrelation of the data. This autocorrelation is given by

$$R(k) = \sum_{i=1}^I (a_n a_{n+k})_i P_i \quad (3-36b)$$

where a_n and a_{n+k} are the (voltage) levels of the data pulses at the n th and $(n+k)$ th symbol positions, respectively, and P_i is the probability of having the i th $a_n a_{n+k}$ product. Note that Eq. (3-36a) shows that the spectrum of the digital signal depends on two things: (1) the pulse shape used and (2) statistical properties of the data.

Using Eq. (3-36), which is the stochastic approach, we can evaluate the PSD for the various line codes shown in Fig. 3-15.

Unipolar NRZ Signaling. For unipolar signaling, the possible levels for the a 's are $+A$ and 0 V. Assume that these values are equally likely to occur and that the data are independent. Now, evaluate $R(k)$ as defined by Eq. (3-36b). For $k = 0$, the possible products of $a_n a_n$ are $A \times A = A^2$ and $0 \times 0 = 0$, and consequently, $I = 2$. For random data, the probability of having A^2 is $\frac{1}{2}$ and the probability of having 0 is $\frac{1}{2}$, so that

$$R(0) = \sum_{i=1}^2 (a_n a_n)_i P_i = A^2 \cdot \frac{1}{2} + 0 \cdot \frac{1}{2} = \frac{1}{2} A^2$$

For $k \neq 0$, there are $I = 4$ possibilities for the product values: $A \times A$, $A \times 0$, and $0 \times A$, 0×0 . They all occur with a probability of $\frac{1}{4}$. Thus, for $k \neq 0$,

$$R(k) = \sum_{i=1}^4 (a_n a_{n+k})_i P_i = A^2 \cdot \frac{1}{4} + 0 \cdot \frac{1}{4} + 0 \cdot \frac{1}{4} + 0 \cdot \frac{1}{4} = \frac{1}{4} A^2$$

Hence,

$$R_{\text{unipolar}}(k) = \begin{cases} \frac{1}{2} A^2, & k = 0 \\ \frac{1}{4} A^2, & k \neq 0 \end{cases} \quad (3-37a)$$

For rectangular NRZ pulse shapes, the Fourier transform pair is

$$f(t) = \Pi\left(\frac{t}{T_b}\right) \leftrightarrow F(f) = T_b \frac{\sin \pi f(T_b)}{\pi f T_b}. \quad (3-37b)$$

Using Eq. (3-36a) with $T_s = T_b$, we find that the PSD for the unipolar NRZ line code is

$$\mathcal{P}_{\text{unipolar NRZ}}(f) = \frac{A^2 T_b}{4} \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \left[1 + \sum_{k=-\infty}^{\infty} e^{j2\pi k f T_b} \right]$$

But[†]

$$\sum_{k=-\infty}^{\infty} e^{jk2\pi f T_b} = \frac{1}{T_b} \sum_{n=-\infty}^{\infty} \delta\left(f - \frac{n}{T_b}\right) \quad (3-38)$$

Thus,

$$\mathcal{P}_{\text{unipolar NRZ}}(f) = \frac{A^2 T_b}{4} \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \left[1 + \frac{1}{T_b} \sum_{n=-\infty}^{\infty} \delta\left(f - \frac{n}{T_b}\right) \right] \quad (3-39a)$$

But because $[\sin(\pi f T_b)/(\pi f T_b)] = 0$ at $f = n/T_b$, for $n \neq 0$, this reduces to

$$\mathcal{P}_{\text{unipolar NRZ}}(f) = \frac{A^2 T_b}{4} \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \left[1 + \frac{1}{T_b} \delta(f) \right] \quad (3-39b)$$

If A is selected so that the normalized average power of the unipolar NRZ signal is unity, then[‡] $A = \sqrt{2}$. This PSD is plotted in Fig. 3–16a, where $1/T_b = R$, the bit rate of the line code. The disadvantage of unipolar NRZ is the waste of power due to the DC level and the fact that the spectrum is not approaching zero near DC. Consequently, DC-coupled circuits are needed. The advantages of unipolar signaling are that it is easy to generate using TTL and CMOS circuits and requires the use of only one power supply.

Polar NRZ Signaling. For polar NRZ signaling, the possible levels for the a 's are $+A$ and $-A$ V. For equally likely occurrences of $+A$ and $-A$, and assuming that the data are independent from bit to bit, we get

$$R(0) = \sum_{i=1}^2 (a_n a_n)_i P_i = A^2 \frac{1}{2} + (-A)^2 \frac{1}{2} = A^2$$

For $k \neq 0$,

$$R(k) = \sum_{i=1}^4 (a_n a_{n+k})_i P_i = A^2 \frac{1}{4} + (-A)(A) \frac{1}{4} + (A)(-A) \frac{1}{4} + (-A)^2 \frac{1}{4} = 0$$

Thus,

[†] Equation (3–38) is known as the *Poisson sum formula*, as derived in Eq. (2–115).

[‡] This can be demonstrated easily by using a line code with periodic data 10101010. Then, setting

$$P_s = \frac{1}{T_0} \int_0^{T_0} s^2(t) dt = \frac{1}{2T_b} A^2 T_b \text{ equal to unity, we get } A = \sqrt{2}.$$

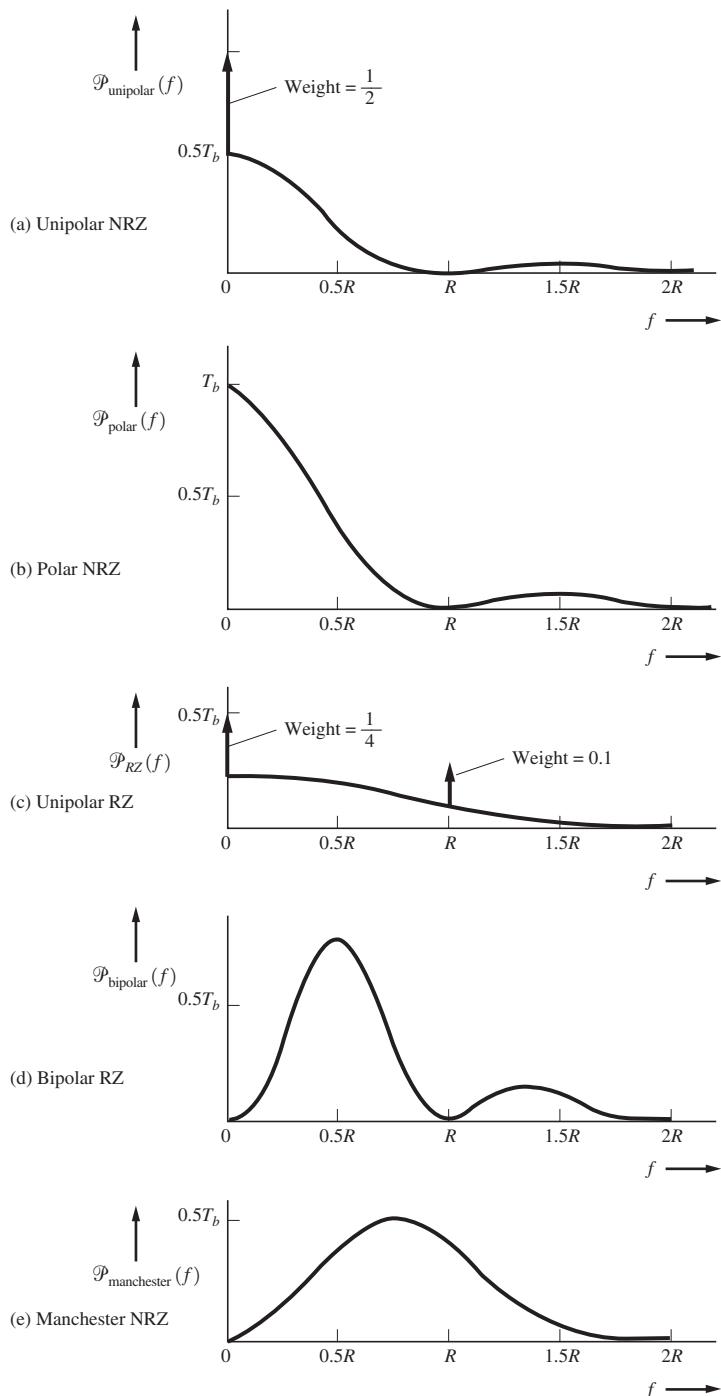


Figure 3–16 PSD for line codes (positive frequencies shown).

$$R_{\text{polar}}(k) = \begin{cases} A^2, & k = 0 \\ 0, & k \neq 0 \end{cases} \quad (3-40)$$

Then, substituting Eqs. (3–40) and (3–37a) into Eq. (3–36a), we obtain the PSD for the polar NRZ signal:

$$\mathcal{P}_{\text{polar NRZ}}(f) = A^2 T_b \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \quad (3-41)$$

If A is selected so that the normalized average power of the polar NRZ signal is unity, then $A = 1$, and the resulting PSD is shown in Fig. 3–16b, where the bit rate is $R = 1/T_b$.

The polar signal has the disadvantage of having a large PSD near DC. On the other hand, polar signals are relatively easy to generate, although positive and negative power supplies are required, unless special-purpose integrated circuits are used that generate dual supply voltages from a single supply. The probability of bit error performance is superior to that of other signaling methods. (See Fig. 7–14.)

Unipolar RZ. The autocorrelation for unipolar data was calculated previously and is given by Eq. (3–37a). For RZ signaling, the pulse duration is $T_b/2$ instead of T_b , as used in NRZ signaling. That is, for RZ,

$$F(f) = \frac{T_b}{2} \left(\frac{\sin(\pi f T_b/2)}{\pi f T_b/2} \right) \quad (3-42)$$

Then, referring to Eqs. (3–37b) and (3–39a), we get the PSD for the unipolar RZ line code:

$$\mathcal{P}_{\text{unipolar RZ}}(f) = \frac{A^2 T_b}{16} \left(\frac{\sin(\pi f T_b/2)}{\pi f T_b/2} \right)^2 \left[1 + \frac{1}{T_b} \sum_{n=-\infty}^{\infty} \delta\left(f - \frac{n}{T_b}\right) \right] \quad (3-43)$$

If A is selected so that the normalized average power of the unipolar RZ signal is unity, then $A = 2$. The PSD for this unity-power case is shown in Fig. 3–16c, where $R = 1/T_b$.

As expected, the first null bandwidth is twice that for unipolar or polar signaling, since the pulse width is half as wide. There is a discrete (impulse) term at $f = R$. Consequently, this periodic component can be used for recovery of the clock signal. One disadvantage of this scheme is that it requires 3 dB more signal power than polar signaling for the same probability of bit error. (See Chapter 7.) Moreover, the spectrum is not negligible for frequencies near DC.

Bipolar RZ Signaling. The PSD for a bipolar signal can also be obtained using Eq. (3–36a). The permitted values for a_n are $+A$, $-A$, and 0, where binary 1's are represented by alternating $+A$ and $-A$ values and a binary 0 is represented by $a_n = 0$. For $k = 0$, the products $a_n a_n$ are A^2 and 0, where each of these products occurs with a probability of $\frac{1}{2}$. Thus,

$$R(0) = \frac{A^2}{2}$$

For $k = 1$ (the adjacent-bit case) and the data sequences $(1, 1)$, $(1, 0)$, $(0, 1)$, and $(0, 0)$, the possible $a_n a_{n+1}$ products are $-A^2$, 0 , 0 , and 0 . Each of these sequences occurs with a probability of $\frac{1}{4}$. Consequently,

$$R(1) = \sum_{i=1}^4 (a_n a_{n+1})_i P_i = -\frac{A^2}{4}$$

For $k > 1$, the bits being considered are not adjacent, and the $a_n a_{n+k}$ products are $\pm A^2$, 0 , 0 , and 0 ; these occur with a probability of $\frac{1}{4}$. Then

$$R(k > 1) = \sum_{i=1}^5 (a_n a_{n+k})_i P_i = A^2 \cdot \frac{1}{8} - A^2 \cdot \frac{1}{8} = 0$$

Thus,

$$R_{\text{bipolar}}(k) = \begin{cases} \frac{A^2}{2}, & k = 0 \\ -\frac{A^2}{4}, & |k| = 1 \\ 0, & |k| > 1 \end{cases} \quad (3-44)$$

Example 3–9 PSD FOR A BIPOLAR RZ LINE CODE USING THE DATA AUTOCORRELATION

Evaluate and plot the PSD for a bipolar RZ line code with $R = 1$. For the solution, use Eqs. (3–36a) and (3–44). See Example3_09.m. Compare this result with Fig. 3–16d.

Using Eqs. (3–44) and (3–42) in Eq. (3–36a), where $T_s = T_b$, we find that the PSD for the bipolar RZ line code is

$$\mathcal{P}_{\text{bipolar RZ}}(f) = \frac{A^2 T_b}{8} \left(\frac{\sin(\pi f T_b/2)}{\pi f T_b/2} \right)^2 (1 - \cos(2\pi f T_b))$$

or

$$\mathcal{P}_{\text{bipolar RZ}}(f) = \frac{A^2 T_b}{4} \left(\frac{\sin(\pi f T_b/2)}{\pi f T_b/2} \right)^2 \sin^2(\pi f T_b) \quad (3-45)$$

where $A = 2$ if the normalized average power is unity. This PSD is plotted in Fig. 3–16d. Bipolar signaling has a spectral null at DC, so AC-coupled circuits may be used in the transmission path.

Example 3–10 PLOT THE PSD FOR A BIPOLAR RZ LINE CODE

Evaluate and plot the PSD for a bipolar RZ line code with $R = 1$. For the solution, use Eq. (3–45). See Example3_09.m for the resulting plot. Compare this result with Fig. 3–16d.

The clock signal can easily be extracted from the bipolar waveform by converting the bipolar format to a unipolar RZ format by the use of full-wave rectification. The resulting (unipolar) RZ signal has a periodic component at the clock frequency. (See Fig. 3–16c.) Bipolar signals are not transparent. That is, a string of zeros will cause a loss in the clocking signal. This difficulty can be prevented by using *high-density bipolar n* (HDBn) signaling, in which a string of more than n consecutive zeros is replaced by a “filling” sequence that contains some pulses.[†] The calculation of the PSD for HDBn codes is difficult, because the $R(k)$ ’s have to be individually evaluated for large values of k [Davis and Barber, 1973].

Bipolar signals also have single-error detection capabilities built in, since a single error will cause a violation of the bipolar line code rule. Any violations can easily be detected by receiver logic.

Two disadvantages of bipolar signals are that the receiver has to distinguish between three levels ($+A$, $-A$, and 0), instead of just two levels in the other signaling formats previously discussed. Also, the bipolar signal requires approximately 3 dB more signal power than a polar signal for the same probability of bit error. [It has $\frac{3}{2}$ the error of unipolar signaling as described by Eq. (7–28).]

Manchester NRZ Signaling. The Manchester signal uses the pulse shape

$$f(t) = \Pi\left(\frac{t + T_b/4}{T_b/2}\right) - \Pi\left(\frac{t - T_b/4}{T_b/2}\right) \quad (3-46a)$$

and the resulting pulse spectrum is

$$F(f) = \frac{T_b}{2} \left[\frac{\sin(\pi f T_b / 2)}{\pi f T_b / 2} \right] e^{j\omega T_b / 4} - \frac{T_b}{2} \left[\frac{\sin(-\pi f T_b / 2)}{\pi f T_b / 2} \right] e^{-j\omega T_b / 4}$$

or

$$F(f) = jT_b \left[\frac{\sin(\pi f T_b / 2)}{\pi f T_b / 2} \right] \sin\left(\frac{\omega T_b}{4}\right) \quad (3-46b)$$

[†] For example, for HDB3, the filling sequences used to replace $n + 1 = 4$ zeros are the alternating sequences 000V and 100V, where the 1 bit is encoded according to the bipolar rule and the V is a 1 pulse of such polarity as to violate the bipolar rule. The alternating filling sequences are designed so that consecutive V pulses alternate in sign. Consequently, there will be a 0 DC value in the line code, and the PSD will have a null at $f = 0$. To decode the HDB3 code, the bipolar decoder has to detect the bipolar violations and count the number of zeros preceding each violation so that the substituted 1’s can be deleted.

Substituting this and Eq. (3–40) into Eq. (3–36a), the PSD for Manchester NRZ becomes

$$\mathcal{P}_{\text{Manchester NRZ}}(f) = A^2 T_b \left(\frac{\sin(\pi f T_b / 2)}{\pi f T_b / 2} \right)^2 \sin^2(\pi f T_b / 2) \quad (3-46c)$$

where $A = 1$ if the normalized average power is unity.

This spectrum is plotted in Fig. 3–16e. The null bandwidth of the Manchester format is twice that of the bipolar bandwidth. However, the Manchester code has a Zero DC level on a bit-by-bit basis. Moreover, a string of zeros will not cause a loss of the clocking signal.

In reviewing our study of PSD for digital signals, it should be emphasized that the spectrum is a function of the bit pattern (via the bit autocorrelation) as well as the pulse shape. The general result for the PSD, Eq. (3–36), is valid for multilevel as well as binary signaling.

Differential Coding

When serial data are passed through many circuits along a communication channel, the waveform is often unintentionally inverted (i.e., data complemented). This result can occur in a twisted-pair transmission line channel just by switching the two leads at a connection point when a polar line code is used. (Note that such switching would not affect the data on a bipolar signal.) To ameliorate the problem, *differential coding*, as illustrated in Fig. 3–17, is often employed. The encoded differential data are generated by

$$e_n = d_n \oplus e_{n-1} \quad (3-47)$$

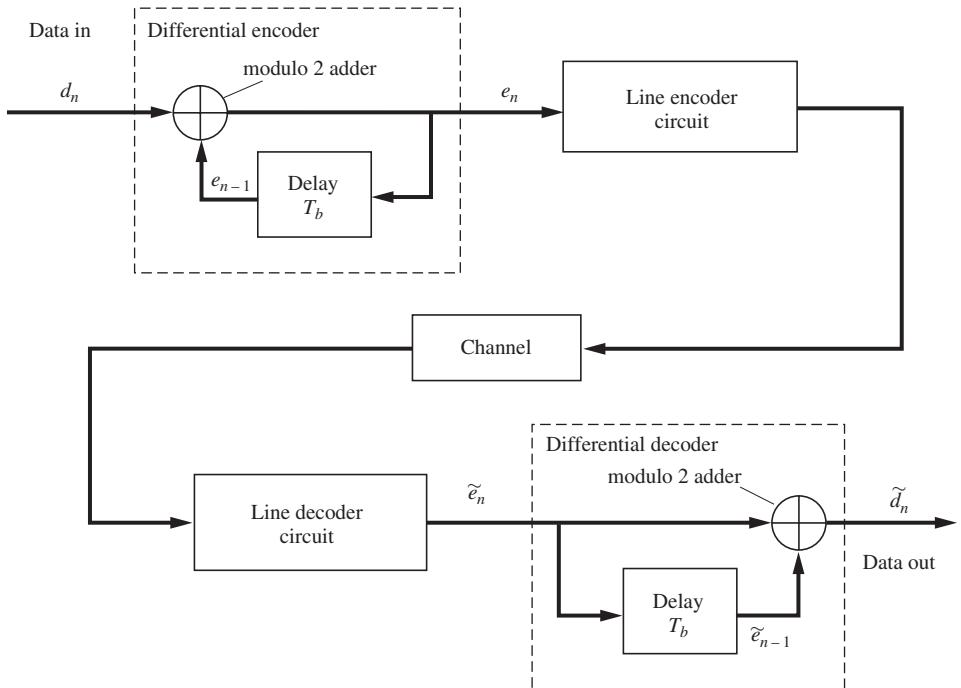


Figure 3–17 Differential coding system.

where \oplus is a modulo 2 adder or an exclusive-OR gate (XOR) operation. The received encoded data are decoded by

$$\tilde{d}_n = \tilde{e}_n \oplus \tilde{e}_{n-1} \quad (3-48)$$

where the tilde denotes receiving-end data.

Each digit in the encoded sequence is obtained by comparing the present input bit with the past encoded bit. A binary 1 is encoded if the present input bit and the past encoded bit are of opposite state, and a binary 0 is encoded if the states are the same. This is equivalent to the truth table of an XOR (exclusive-OR) gate or a modulo 2 adder. An example of an encoded sequence is shown in Table 3–4, where the beginning reference digit is a binary 1. At the receiver, the encoded signal is decoded by comparing the state of adjacent bits. If the present received encoded bit has the same state as the past encoded bit, a binary 0 is the decoded output. Similarly, a binary 1 is decoded for opposite states. As shown in the table, the polarity of the differentially encoded waveform may be inverted without affecting the decoded data. This is a great advantage when the waveform is passed through thousands of circuits in a communication system and the positive sense of the output is lost or changes occasionally as the network changes, such as sometimes occurs during switching between several data paths.

Eye Patterns

The effect of channel filtering and channel noise can be seen by observing the received line code on an analog oscilloscope. The left side of Fig. 3–18 shows received corrupted polar NRZ waveforms for the cases of (a) ideal channel filtering, (b) filtering that produces inter-symbol interference (ISI), and (c) noise plus ISI. (ISI is described in Sec. 3–6.) On the right side of the figure, corresponding oscilloscope presentations of the corrupted signal are shown with multiple sweeps, where each sweep is triggered by a clock signal and the sweep width is slightly larger than T_b . These displays on the right are called *eye patterns*, because they resemble the picture of a human eye. Under normal operating conditions (i.e., for no

TABLE 3–4 EXAMPLE OF DIFFERENTIAL CODING

Encoding	d_n	1	1	0	1	0	0	1
Input sequence	d_n							
Encoded sequence	e_n	1	0	1	1	0	0	1
Reference digit		↑						
<hr/>								
Decoding (with correct channel polarity)								
Received sequence (correct polarity)	\tilde{e}_n	1	0	1	1	0	0	1
Decoded sequence	\tilde{d}_n		1	1	0	1	0	1
Decoding (with inverted channel polarity)								
Received sequence (inverted polarity)	\tilde{e}_n	0	1	0	0	1	1	0
Decoded sequence	\tilde{d}_n		1	1	0	1	0	1

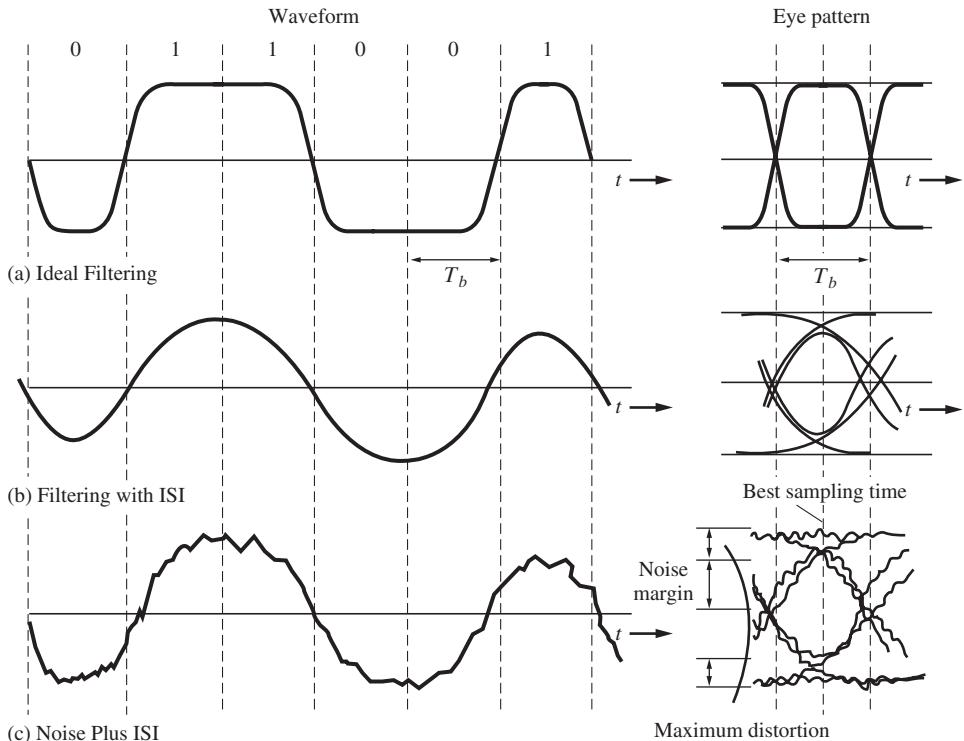


Figure 3-18 Distorted polar NRZ waveform and corresponding eye pattern.

detected bit errors), the eye will be open. If there is a great deal of noise or ISI, the eye will close; this indicates that bit errors will be produced at the receiver output. The eye pattern provides an excellent way of assessing the quality of the received line code and the ability of the receiver to combat bit errors. As shown in the figure, the eye pattern provides the following information:

- The *timing error* allowed on the sampler at the receiver is given by the width inside the eye, called the *eye opening*. Of course, the preferred time for sampling is at the point where the vertical opening of the eye is the largest.
- The *sensitivity* to timing error is given by the slope of the open eye (evaluated at, or near, the zero-crossing point).
- The *noise margin* of the system is given by the height of the eye opening.

Regenerative Repeaters

When a line code digital signal (such as PCM) is transmitted over a hardwire channel (such as a twisted-pair telephone line), it is attenuated, filtered, and corrupted by noise. Consequently, for long lines, the data cannot be recovered at the receiving end unless repeaters are placed in

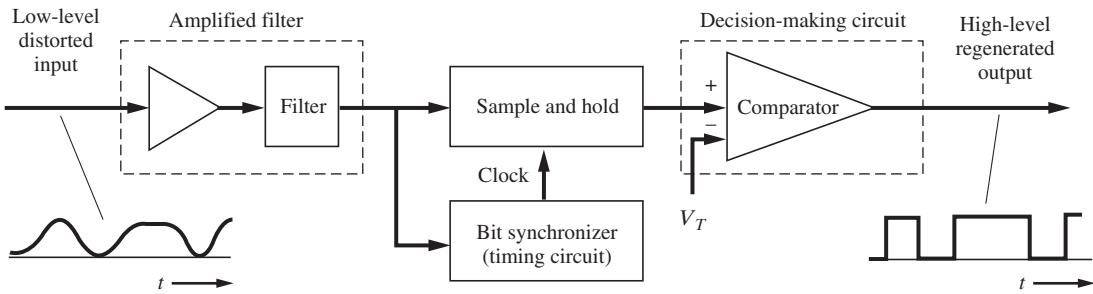


Figure 3-19 Regenerative repeater for unipolar NRZ signaling.

cascade along the line and at the receiver, as illustrated in Fig. 3-7. These repeaters amplify and “clean up” the signal periodically. If the signal were analog instead of digital, only linear amplifiers with appropriate filters could be used, since relative amplitude values would need to be preserved. In this case, in-band distortion would accumulate from linear repeater to linear repeater. This is one of the disadvantages of analog signaling. However, with digital signaling, nonlinear processing can be used to regenerate a “noise-free” digital signal. This type of nonlinear processing is called a *regenerative repeater*. A simplified block diagram of a regenerative repeater for unipolar NRZ signaling is shown in Fig. 3-19. The amplifying filter increases the amplitude of the low-level input signal to a level that is compatible with the remaining circuitry and filters the signal in such a way as to minimize the effects of channel noise and ISI. (The filter that reduces ISI is called an *equalizing filter* and is discussed in Sec. 3-6.) The bit synchronizer generates a clocking signal at the bit rate that is synchronized, so that the amplified distorted signal is sampled at a point where the eye opening is a maximum. (Bit synchronizers are discussed in detail in the next section.) For each clock pulse, the sample-and-hold circuit produces the sample value that is held (for T_b , a 1-bit interval) until the next clock pulse occurs. The comparator produces a high-level output only when the sample value is larger than the threshold level V_T . The latter is usually selected to be one-half the expected peak-to-peak variation of the sample values.[†] If the input noise is small and there is negligible ISI, the comparator output will be high only when there is a binary 1 (i.e., a high level) on the corrupted unipolar NRZ line code at the input to the repeater. The comparator—a threshold apparatus—acts as a decision-making device. Thus, the unipolar NRZ line code is regenerated “noise free,” except for bit errors that are caused when the input noise and ISI alter the sample values sufficiently so that the sample values occur on the wrong side of V_T . Chapter 7 shows how the probability of bit error is influenced by the SNR at the input to the repeater, by the filter that is used, and by the value of V_T that is selected.[‡]

In long-distance digital communication systems, many repeaters may be used in cascade, as shown in Fig. 3-7. Of course, the spacing between the repeaters is governed by the path loss of the transmission medium and the amount of noise that is added. A repeater is required when the SNR at a point along the channel becomes lower than the value that is needed to maintain the

[†] This is the optimum V_T when the binary 1's and 0's are equally likely.

[‡] For minimum probability of bit error, the sample-and-hold circuit of Fig. 3-19 is replaced by an optimum sample-detection circuit called a *matched filter* (MF), described in Sec. 6-8.

overall probability-of-bit-error specification. Assume that the repeaters are spaced so that each of them has the same probability of bit error, P_e , and that there are m repeaters in the system, including the end receiver. Then, for m repeaters in cascade, the overall probability of bit error, P_{me} , can be evaluated by the use of the binomial distribution from Appendix B. Using Eq. (B-33), we see that the probability of i out of the m repeaters producing a bit error is

$$P_i = \binom{m}{i} P_e^i (1 - P_e)^{m-i} \quad (3-49)$$

However, there is a bit error at the system output only when each of an *odd* number of the cascaded repeaters produces a bit error. Consequently, the overall probability of a bit error for m cascaded repeaters is

$$\begin{aligned} P_{me} &= \sum_{\substack{i=1 \\ i=\text{odd}}}^m P_i = \sum_{\substack{i=1 \\ i=\text{odd}}}^m \binom{m}{i} P_e^i (1 - P_e)^{m-i} \\ &= mP_e(1 - P_e)^{m-1} + \frac{m(m-1)(m-2)}{3!} P_e^3 (1 - P_e)^{m-3} + \dots \end{aligned} \quad (3-50a)$$

Under useful operating conditions, $P_e \ll 1$, so only the first term of this series is significant. Thus, the overall probability of bit error is approximated by

$$P_{me} \approx mP_e \quad (3-50b)$$


where P_e is the probability of bit error for a single repeater.

Bit Synchronization


Synchronization signals are clock-type signals that are necessary within a receiver (or repeater) for detection (or regeneration) of the data from the corrupted input signal. These clock signals have a precise frequency and phase relationship with respect to the *received* input signal, and they are delayed compared to the clock signals at the transmitter, since there is propagation delay through the channel.

Digital communications usually need at least three types of synchronization signals: (1) *bit sync*, to distinguish one bit interval from another, as discussed in this section; (2) *frame sync*, to distinguish groups of data, as discussed in Sec. 3-9 in regard to time-division multiplexing; and (3) *carrier sync*, for bandpass signaling with coherent detection, as discussed in Chapters 4, 5, and 7. Systems are designed so that the sync is derived either directly from the corrupted signal or from a separate channel that is used only to transmit the sync information.


We will concentrate on systems with bit synchronizers that derive the sync directly from the corrupted signal, because it is often not economically feasible to send sync over a separate channel. The complexity of the bit synchronizer circuit depends on the sync properties of the line code. For example, the bit synchronizer for a unipolar RZ code with a sufficient number of alternating binary 1's and 0's is almost trivial, since the PSD of that code has a delta function at the bit rate, $f = R$, as shown in Fig. 3-16c. Consequently, the bit sync clock signal can be obtained by passing the received unipolar RZ waveform through a narrowband bandpass filter that is tuned to $f_0 = R = 1/T_b$. This is illustrated by Fig. 3-20 if the square-law device is

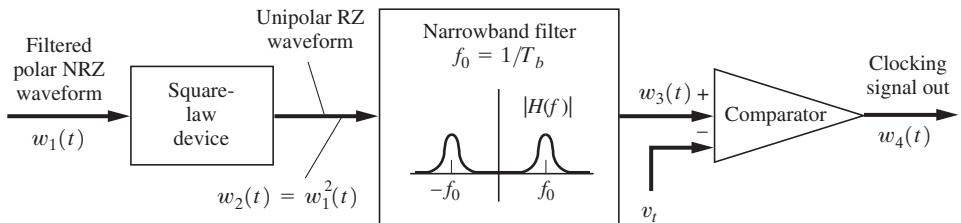


(a) Block Diagram of Bit Synchronizer

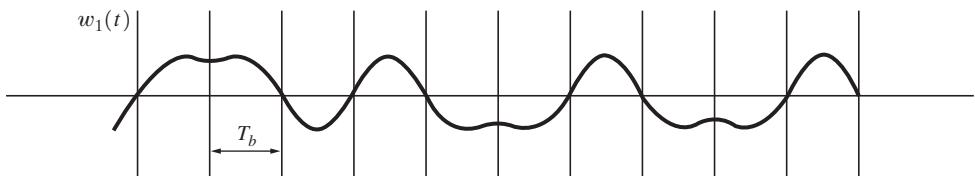


(b) Filtered Polar NRZ Input Waveform

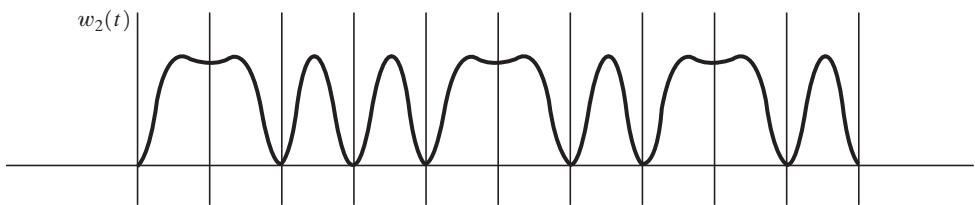

(c) Output of Square-law Device (Unipolar RZ)

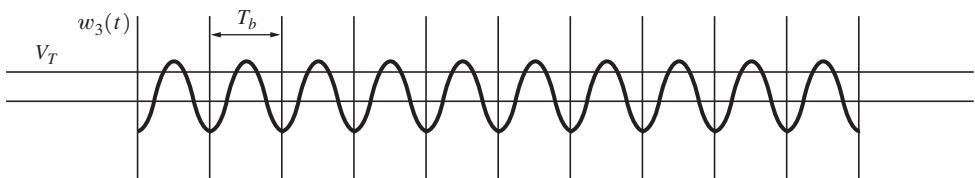

(d) Output of Narrowband Filter

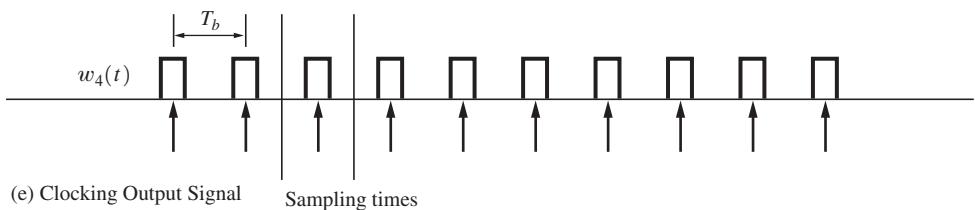

(e) Clocking Output Signal Sampling times

Figure 3–20 Square-law bit synchronizer for polar NRZ signaling.

deleted. Alternatively, as described in Sec. 4–3, a phase-locked loop (PLL) can be used to extract the sync signal from the unipolar RZ line code by locking the PLL to the discrete spectral line at $f = R$. For a polar NRZ line code, the bit synchronizer is slightly more complicated, as shown in Fig. 3–20. Here the filtered polar NRZ waveform (Fig. 3–20b) is converted to a unipolar RZ waveform (Fig. 3–20c) by using a square-law (or, alternatively, a full-wave rectifier) circuit. The clock signal is easily recovered by using a filter or a PLL, since the unipolar RZ code has a delta function in its spectrum at $f = R$. All of the bit synchronizers discussed thus far use some technique for detecting the spectral line at $f = R$.

Another technique utilizes the symmetry property of the line code itself [Carlson, 1986]. Referring to Fig. 3–18, which illustrates the eye pattern for a polar NRZ code, we realize that a properly filtered line code has a pulse shape that is symmetrical about the optimum clocking (sampling) time, provided that the data are alternating between 1's and 0's. From Fig. 3–21, let $w_1(t)$ denote the filtered polar NRZ line code, and let $w_1(\tau_0 + nT_b)$ denote a sample value of the line code at the maximum (positive or negative) of the eye opening, where n is an integer, $R = 1/T_b$ is the bit rate, τ is the relative clocking time (i.e., clock phase), and τ_0 is the optimum value corresponding to samples at the maximum of the eye opening. Because the pulse shape of the line code is approximately symmetrical about the optimum clocking time for alternating data,

$$|w_1(\tau_0 + nT_b - \Delta)| \approx |w_1(\tau_0 + nT_b + \Delta)|$$

where τ_0 is the optimum clocking phase and $0 < \Delta < \frac{1}{2} T_b$. The quantity $w_1(\tau + nT_b - \Delta)$ is called the *early sample*, and $w_1(\tau + nT_b + \Delta)$ is called the *late sample*. These samples can be used to derive the optimum clocking signal, as illustrated in the *early–late bit synchronizer*

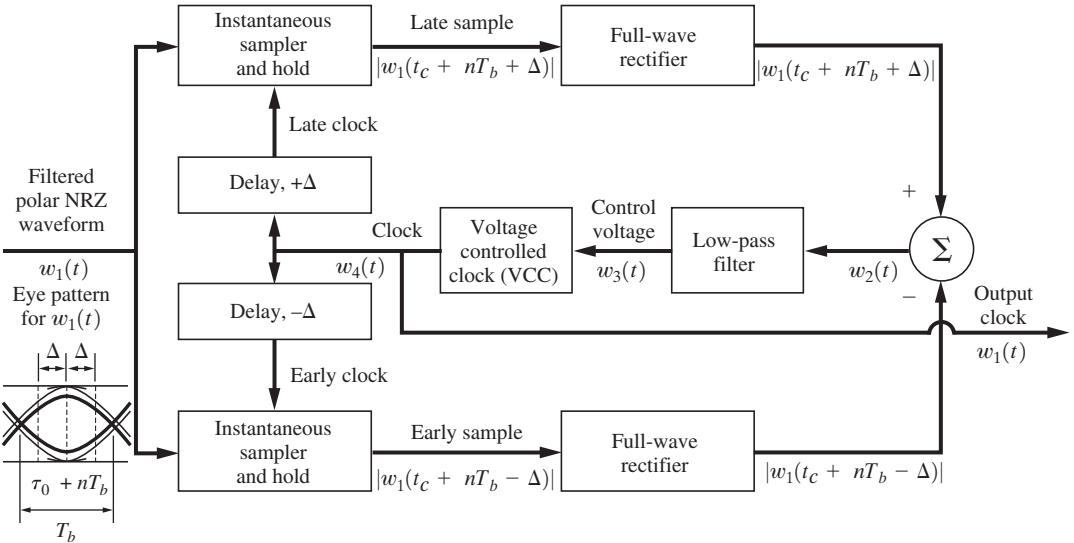


Figure 3–21 Early–late bit synchronizer for polar NRZ signaling.

shown in Fig. 3–21. The control voltage $w_3(t)$ for the voltage-controlled clock (VCC) is a smoothed (averaged) version of $w_2(t)$. That is,

$$w_3(t) = \langle w_2(t) \rangle \quad (3-51a)$$

where

$$w_2(t) = |w_1(\tau + nT_b - \Delta)| - |w_1(\tau + nT_b + \Delta)| \quad (3-51b)$$

(The averaging operation is needed so that the bit synchronizer will remain synchronized even if the data do not alternate for every bit interval.) If the VCC is producing clocking pulses with the optimum relative clocking time $\tau = \tau_0$ so that samples are taken at the maximum of the eye opening, Eq. (3–51) demonstrates that the control voltage $w_3(t)$ will be zero. If τ is late, $w_3(t)$ will be a positive correction voltage, and if τ is early, $w_3(t)$ will be negative. A positive (negative) control voltage will increase (decrease) the frequency of the VCC. Thus, the bit synchronizer will produce an output clock signal that is synchronized to the input data stream. Then $w_4(t)$ will be a pulse train with narrow clock pulses occurring at the time $t = \tau + nT_b$, where n is any integer and τ approximates τ_0 , the optimum clock phase that corresponds to sampling at the maximum of the eye opening. It is interesting to realize that the early-late bit synchronizer of Fig. 3–21 has the same canonical form as the Costas carrier synchronization loop of Fig. 5–3.

Unipolar, polar, and bipolar bit synchronizers will work only when there are a sufficient number of alternating 1's and 0's in the data. The loss of synchronization because of long strings of all 1's or all 0's can be prevented by adopting one of two possible alternatives. One alternative, as discussed in Chapter 1, is to use bit interleaving (i.e., scrambling). In this case, the source data with strings of 1's or 0's are scrambled to produce data with alternating 1's and 0's, which are transmitted over the channel by using a unipolar, polar, or bipolar line code. At the receiving end, scrambled data are first recovered by using the usual receiving techniques with bit synchronizers as just described; then the scrambled data are unscrambled. The other alternative is to use a completely different type of line code that does not require alternating data for bit synchronization. For example, Manchester NRZ encoding can be used, but it will require a channel with twice the bandwidth of that needed for a polar NRZ code.

Power Spectra for Multilevel Polar NRZ Signals

Multilevel signaling provides reduced bandwidth compared with binary signaling. The concept was introduced in Sec. 3–4. Here this concept will be extended and a formula for the PSD of a multilevel polar NRZ signal will be obtained. To reduce the signaling bandwidth, Fig. 3–22 shows how a binary signal is converted to a multilevel polar NRZ signal, where an ℓ -bit DAC is used to convert the binary signal with data rate R bits/sec to an $L = 2^\ell$ -level multilevel polar NRZ signal.

For example, assume that an $\ell = 3$ -bit DAC is used, so that $L = 2^3 = 8$ levels. Fig. 3–22b illustrates a typical input waveform, and Fig. 3–22c shows the corresponding eight-level multilevel output waveform, where T_s is the time it takes to send one multilevel symbol. To obtain this waveform, the code shown in Table 3–5 was used. From the figure, we see that $D = 1/T_s = 1/(3T_b) = R/3$, or, in general, the baud rate is

$$D = \frac{R}{\ell} \quad (3-52)$$

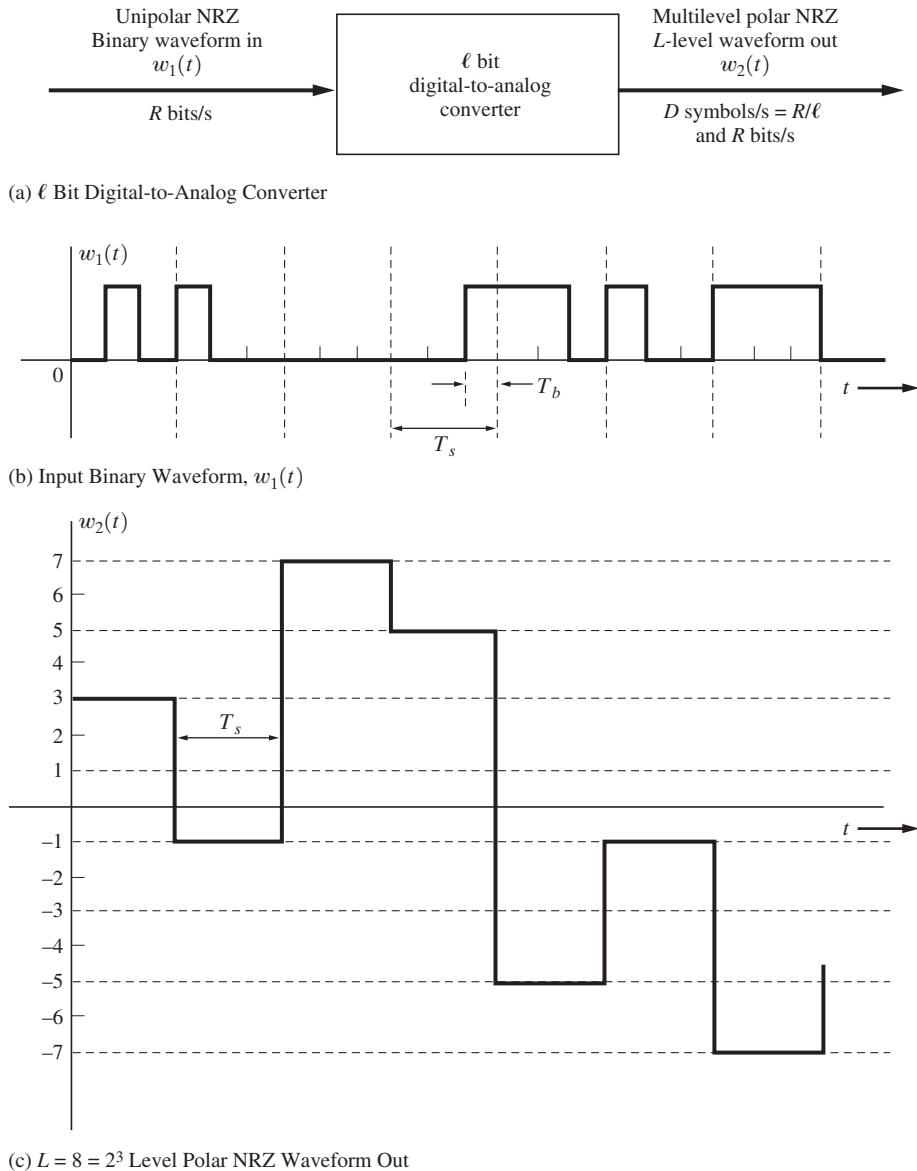


Figure 3-22 Binary-to-multilevel polar NRZ signal conversion.

The relationship between the output baud rate D and the associated bit rate R is identical to that discussed in conjunction with the dimensionality theorem in Sec. 3-4, where it was found that the bandwidth was constrained by $B \geq D/2$.

The PSD for the multilevel polar NRZ waveform (Fig. 3-22c) can be obtained by the use of Eq. (3-36a). Evaluating $R(k)$ for the case of equally likely levels a_n , as shown in Table 3-5, we have, for the case of $k = 0$,

TABLE 3–5 THREE-BIT DAC CODE

Digital Word	Output Level, $(a_n)_i$
000	+7
001	+5
010	+3
011	+1
100	-1
101	-3
110	-5
111	-7

$$R(0) = \sum_{i=1}^8 (a_n)_i^2 P_i = 21$$

where $P_i = \frac{1}{8}$ for all of the eight possible values. For $k \neq 0$, $R(k) = 0$. Then, from Eq. (3–36a), the PSD for $w_2(t)$ is

$$\mathcal{P}_{w_2}(f) = \frac{|F(f)|^2}{T_s} (21 + 0)$$

where the pulse width (or symbol width) is now $T_s = 3T_b$. For the rectangular pulse shape of width $3T_b$, this becomes

$$\mathcal{P}_{w_2}(f) = 63T_b \left(\frac{\sin 3\pi f T_b}{3\pi f T_b} \right)^2$$

for the case where $\ell = 3$. Consequently, the first null bandwidth for this multilevel polar NRZ signal is $B_{\text{null}} = 1/(3T_b) = R/3$, or one-third the bandwidth of the input binary signal.

In general, for the case of $L = 2^\ell$ levels, the PSD of a multilevel polar NRZ signal with rectangular pulse shapes is

$$\mathcal{P}_{\text{multilevel NRZ}}(f) = K \left(\frac{\sin \ell \pi f T_b}{\ell \pi f T_b} \right)^2 \quad (3-53)$$

where K is a constant and the null bandwidth is

$$B_{\text{null}} = R/\ell \quad (3-54)$$

Example 3–11 PLOT THE PSD FOR A MULTILEVEL NRZ LINE CODE

Evaluate and plot the PSD for a Multilevel NRZ line code with $R = 6$ bits/sec and $L = 8$ levels. See Example3_11.m for the solution. Compare this result with Fig. 5–33.

In summary, multilevel signaling, where $L > 2$, is used to reduce the bandwidth of a digital signal compared with the bandwidth required for binary signaling. In practice, filtered multilevel signals are often used to modulate a carrier for the transmission of digital information over a communication channel. This provides a relatively narrowband digital signal.

Spectral Efficiency

DEFINITION. The *spectral efficiency* of a digital signal is given by the number of bits per second of data that can be supported by each hertz of bandwidth. That is,

$$\eta = \frac{R}{B} \text{ (bits/s)/Hz} \quad (3-55)$$

where R is the data rate and B is the bandwidth.

In applications in which the bandwidth is limited by physical and regulatory constraints, the job of the communication engineer is to choose a signaling technique that gives the highest spectral efficiency while achieving given cost constraints and meeting specifications for a low probability of bit error at the system output. Moreover, the maximum possible spectral efficiency is limited by the channel noise if the error is to be small. This maximum spectral efficiency is given by Shannon's channel capacity formula, Eq. (1-10),

$$\eta_{\max} = \frac{C}{B} = \log_2 \left(1 + \frac{S}{N} \right) \quad (3-56)$$

Shannon's theory does not tell us how to achieve a system with the maximum theoretical spectral efficiency; however, practical systems that approach this spectral efficiency usually incorporate error correction coding and multilevel signaling.

Example 3-12 MAXIMUM SPECTRAL EFFICIENCY

Plot η_{\max} as a function of the S/N_{dB} , that is, where the S/N is expressed in dB units. See Example3_12.m for the solution.

The spectral efficiency for multilevel polar NRZ signaling is obtained by substituting Eq. (3-54) into Eq. (3-55). We obtain

$$\eta = \ell(\text{bit/s}) \text{ Hz} \quad (\text{multilevel polar NRZ signaling}) \quad (3-57)$$

where ℓ is the number of bits used in the DAC. Of course, ℓ cannot be increased without limit to an infinite efficiency, because it is limited by the signal-to-noise ratio as given in Eq. (3-56).

The spectral efficiencies for all the line codes studied in the previous sections can be easily evaluated from their PSDs. The results are shown in Table 3-6. Unipolar NRZ, polar NRZ, and bipolar RZ are twice as efficient as unipolar RZ or Manchester NRZ.

TABLE 3–6 SPECTRAL EFFICIENCIES OF LINE CODES

Code Type	First Null Bandwidth (Hz)	Spectral Efficiency $\eta = R/B$ [(bits/s)/Hz]
Unipolar NRZ	R	1
Polar NRZ	R	1
Unipolar RZ	$2R$	$\frac{1}{2}$
Bipolar RZ	R	1
Manchester NRZ	$2R$	$\frac{1}{2}$
Multilevel polar NRZ	R/ℓ	ℓ

All of these binary line codes have $\eta \leq 1$. Multilevel signaling can be used to achieve much greater spectral efficiency, but multilevel circuits are more costly. In practice, multilevel polar NRZ signaling is used in the T1G digital telephone lines, as described in Sec. 3–9.

3–6 INTERSYMBOL INTERFERENCE

The absolute bandwidth of rectangular multilevel pulses is infinity. If these pulses are filtered improperly as they pass through a communication system, they will spread in time, and the pulse for each symbol may be smeared into adjacent time slots and cause *intersymbol interference* (ISI), as illustrated in Fig. 3–23. Now, how can we restrict the bandwidth and still not introduce ISI? Of course, with a restricted bandwidth, the pulses would have rounded tops (instead of flat ones). This problem was first studied by Nyquist [1928]. He discovered three different methods for pulse shaping that could be used to eliminate ISI. Each of these methods will be studied in the sections that follow.

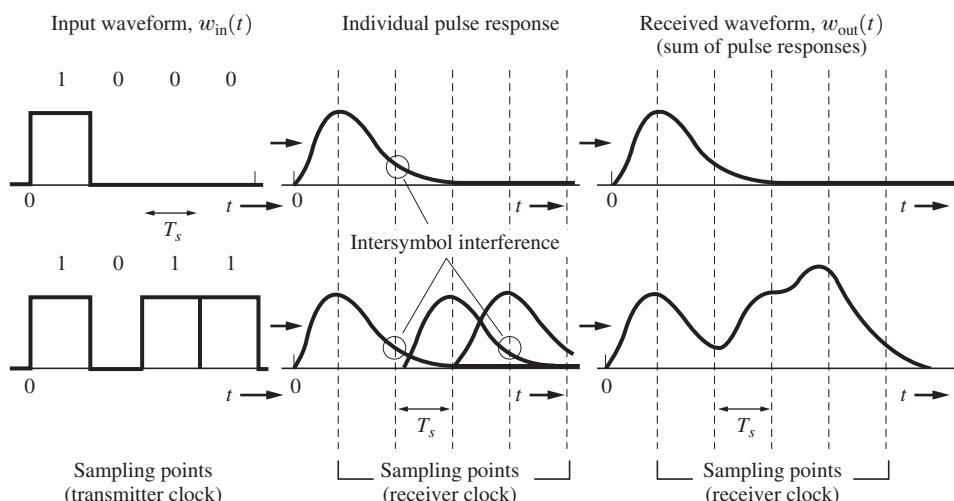


Figure 3–23 Examples of ISI on received pulses in a binary communication system.

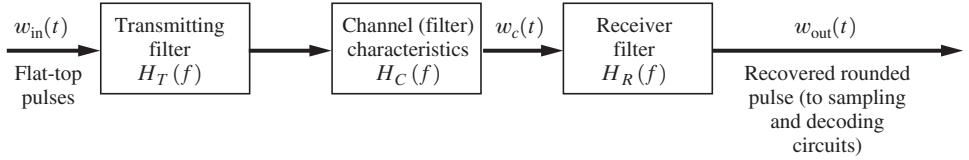


Figure 3–24 Baseband pulse-transmission system.

Consider a digital signaling system as shown in Fig. 3–24, in which the flat-topped multilevel signal at the input is

$$w_{\text{in}}(t) = \pi \sum_n a_n h(t - nT_s) \quad (3-58)$$

where $h(t) = \Pi(t/T_s)$ and a_n may take on any of the allowed L multilevels ($L = 2$ for binary signaling). The symbol rate is $D = 1/T_s$ pulses/s. Then Eq. (3–58) may be written as

$$\begin{aligned} w_{\text{in}}(t) &= \sum_n a_n h(t) * \delta(t - nT_s) \\ &= \left[\sum_n a_n \delta(t - nT_s) \right] * h(t) \end{aligned} \quad (3-59)$$

The output of the linear system of Fig. 3–24 would be just the input impulse train convolved with the equivalent impulse response of the overall system; that is,

$$w_{\text{out}}(t) = \left[\sum_n a_n \delta(t - nT_s) \right] * h_e(t) \quad (3-60)$$

where the equivalent impulse response is

$$h_e(t) = h(t) * h_T(t) * h_C(t) * h_R(t) \quad (3-61)$$

Note that $h_e(t)$ is also the pulse shape that will appear at the output of the receiver filter when a single flat-top pulse is fed into the transmitting filter (Fig. 3–24).

The equivalent system transfer function is

$$H_e(f) = H(f)H_T(f)H_C(f)H_R(f) \quad (3-62)$$

where

$$H(f) = \mathcal{F}\left[\Pi\left(\frac{t}{T_s}\right)\right] = T_s \left(\frac{\sin \pi T_s f}{\pi T_s f} \right) \quad (3-63)$$

Equation (3–63) is used so that flat-top pulses will be present at the input to the transmitting filter. The receiving filter is given by

$$H_R(f) = \frac{H_e(f)}{H(f)H_T(f)H_C(f)} \quad (3-64)$$

where $H_e(f)$ is the overall filtering characteristic.

When $H_e(f)$ is chosen to minimize the ISI, $H_R(f)$, obtained from Eq. (3–64), is called an *equalizing filter*. The equalizing filter characteristic depends on $H_C(f)$, the channel frequency response, as well as on the required $H_e(f)$. When the channel consists of dial-up telephone lines, the channel transfer function changes from call to call and the equalizing filter may need to be an *adaptive filter*. In this case, the equalizing filter adjusts itself to minimize the ISI. In some adaptive schemes, each communication session is preceded by a test bit pattern that is used to adapt the filter electronically for the maximum eye opening (i.e., minimum ISI). Such sequences are called *learning* or *training sequences and preambles*.

We can rewrite Eq. (3–60) so that the rounded pulse train at the output of the receiving filter is

$$w_{\text{out}}(t) = \sum_n a_n h_e(t - nT_s) \quad (3-65a)$$

The output pulse shape is affected by the input pulse shape (flat-topped in this case), the transmitter filter, the channel filter, and the receiving filter. Because, in practice, the channel filter is already specified, the problem is to determine the transmitting filter and the receiving filter that will minimize the ISI on the rounded pulse at the output of the receiving filter.

Example 3–13 INTERSYMBOL INTERFERENCE CAUSED BY RC FILTERING

Plot the output waveform when a channel filters a unipolar NRZ signal. Assume that the overall filtering effect of the transmitter, channel, and the receiver is that of an RC low-pass filter (see Fig. 2–15) where the 3 dB bandwidth is 1 Hz. Assume that the unipolar NRZ input signal has a bit rate of $R_b = 1$ Hz and that the data on the unipolar NRZ signal is [1 0 0 1 0 1 1 0 1 0]. Plot the waveform at the receiver output and observe the intersymbol interference.

Solution

From Eq. (3–61), $h_e(t) = h(t) * h_{RC}(t)$, where $h_{RC}(t)$ is the impulse response of the RC lowpass filter as given by Eq. (2–146). Let the unipolar NRZ signal have a rectangular pulse shape that is unity amplitude over the interval 0 to T_b (where $R_b = 1/T_b$) and zero for t elsewhere. Then, $h(t) = \Pi((t - T_b/2)/T_b)$. T_b is the duration of one bit. Convolving these two responses together, we get

$$h_e(t) = \begin{cases} 0, & t \leq 0 \\ 1 - e^{-t/\tau_0}, & 0 < t \leq T_b \\ e^{-t/\tau_0}(e^{-Tb/\tau_0} - 1), & t > T_b \end{cases} \quad (3-65b)$$

Using Eq. (3–65b) in Eq. (3–65a), the solution is calculated and plotted by Example3_13.m.

From an applications point of view, when the required transmitter filter and receiving filter transfer functions are found, they can each be multiplied by $Ke^{-j\omega T_d}$, where K is a convenient gain factor and T_d is a convenient time delay. These parameters are chosen to make

the filters easier to build. The $Ke^{-j\omega T_d}$ factor(s) would not affect the zero ISI result, but, of course, would modify the level and delay of the output waveform.

Nyquist's First Method (Zero ISI)

Nyquist's first method for eliminating ISI is to use an equivalent transfer function, $H_e(f)$, such that the impulse response satisfies the condition

$$h_e(kT_s + \tau) = \begin{cases} C, & k = 0 \\ 0, & k \neq 0 \end{cases} \quad (3-66)$$

where k is an integer, T_s is the symbol (sample) clocking period, τ is the offset in the receiver sampling clock times compared with the clock times of the input symbols, and C is a nonzero constant. That is, for a single flat-top pulse of level a present at the input to the transmitting filter at $t = 0$, the received pulse would be $ah_e(t)$. It would have a value of aC at $t = \tau$ but would not cause interference at other sampling times because $h_e(kT_s + \tau) = 0$ for $k \neq 0$.

Now suppose that we choose a $(\sin x)/x$ function for $h_e(t)$. In particular, let $\tau = 0$, and choose

$$h_e(t) = \frac{\sin \pi f_s t}{\pi f_s t} \quad (3-67)$$

where $f_s = 1/T_s$. This impulse response satisfies Nyquist's first criterion for zero ISI, Eq. (3-66). Consequently, if the transmit and receive filters are designed so that the overall transfer function is

$$H_e(f) = \frac{1}{f_s} \Pi\left(\frac{f}{f_s}\right) \quad (3-68)$$

there will be no ISI. Furthermore, the absolute bandwidth of this transfer function is $B = f_s/2$. From our study of the sampling theorem and the dimensionality theorem in Chapter 2 and Sec. 3-4, we realize that this is the optimum filtering to produce a minimum-bandwidth system. It will allow signaling at a baud rate of $D = 1/T_s = 2B$ pulses/s, where B is the absolute bandwidth of the system. However, the $(\sin x)/x$ type of overall pulse shape has two practical difficulties:

- The overall amplitude transfer characteristic $H_e(f)$ has to be flat over $-B < f < B$ and zero elsewhere. This is physically unrealizable (i.e., the impulse response would be noncausal and of infinite duration). $H_e(f)$ is difficult to approximate because of the steep skirts in the filter transfer function at $f = \pm B$.
- The synchronization of the clock in the decoding sampling circuit has to be almost perfect, since the $(\sin x)/x$ pulse decays only as $1/x$ and is zero in adjacent time slots only when t is at the exactly correct sampling time. Thus, inaccurate sync will cause ISI.

Because of these difficulties, we are forced to consider other pulse shapes that have a slightly wider bandwidth. The idea is to find pulse shapes that go through zero at adjacent

sampling points and yet have an envelope that decays much faster than $1/x$ so that clock jitter in the sampling times does not cause appreciable ISI. One solution for the equivalent transfer function, which has many desirable features, is the raised cosine-rolloff Nyquist filter.

Raised Cosine-Rolloff Nyquist Filtering

DEFINITION. The *raised cosine-rolloff Nyquist filter* has the transfer function

$$H_e(f) = \begin{cases} 1, & |f| < f_1 \\ \frac{1}{2} \left\{ 1 + \cos \left[\frac{\pi(|f| - f_1)}{2f_\Delta} \right] \right\}, & f_1 < |f| < B \\ 0, & |f| > B \end{cases} \quad (3-69)$$

where B is the *absolute bandwidth* and the parameters

$$f_\Delta = B - f_0 \quad (3-70)$$

and

$$f_1 \triangleq f_0 - f_\Delta \quad (3-71)$$

f_0 is the *6-dB bandwidth* of the filter. The *rolloff factor* is defined to be

$$r = \frac{f_\Delta}{f_0} \quad (3-72)$$

This filter characteristic is illustrated in Fig. 3–25. The corresponding impulse response is

$$h_e(t) = \mathcal{F}^{-1}[H_e(f)] = 2f_0 \left(\frac{\sin 2\pi f_0 t}{2\pi f_0 t} \right) \left[\frac{\cos 2\pi f_\Delta t}{1 - (4f_\Delta)^2} \right] \quad (3-73)$$

Plots of the frequency response and the impulse response are shown in Fig. 3–26 for rolloff factors $r = 0$, $r = 0.5$, and $r = 1.0$. The $r = 0$ characteristic is the minimum-bandwidth case,

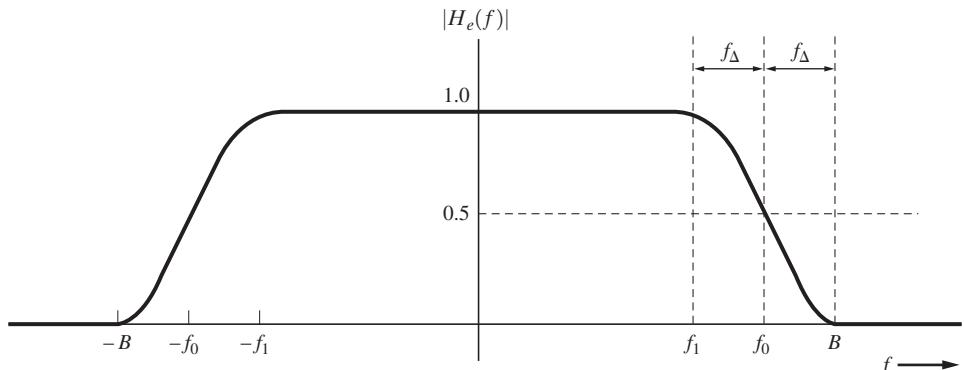


Figure 3–25 Raised cosine-rolloff Nyquist filter characteristics. (See Example3_14.m.)

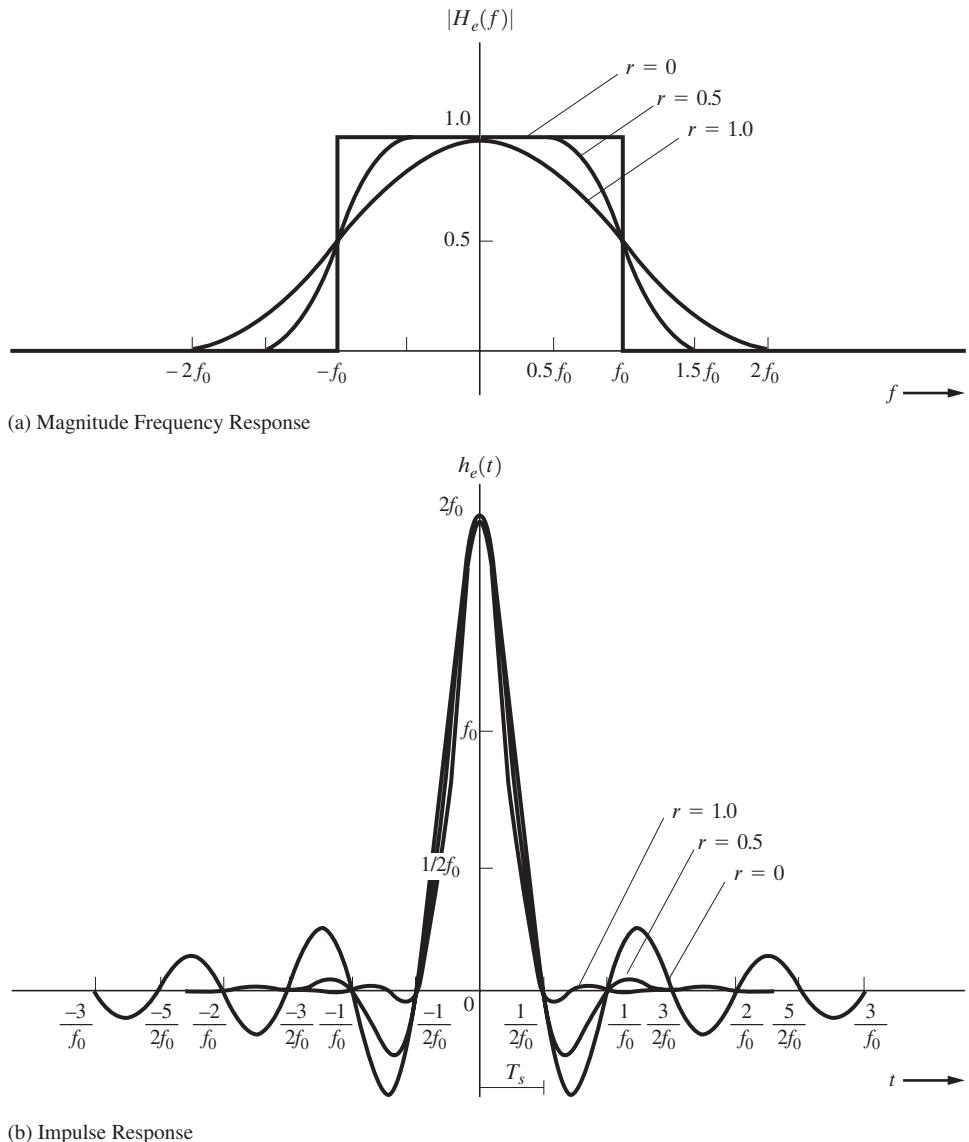


Figure 3–26 Frequency and time response for different rolloff factors. (See Example3_14.m.)

where $f_0 = B$ and the impulse response is the $(\sin x)/x$ pulse shape. From this figure, it is seen that as the absolute bandwidth is increased (e.g., $r = 0.5$ or $r = 1.0$), (1) the filtering requirements are relaxed, although $h_e(t)$ is still noncausal, and (2) the clock timing requirements are relaxed also, since the envelope of the impulse response decays faster than $1/|t|$ (on the order of $1/|t|^3$ for large values of t).

Example 3–14 RAISED COSINE-ROLLOFF FILTERING

Plot the magnitude transfer function and the impulse response for the raised cosine-rolloff filter. Compare with Fig. 3–26. See Example3_14.m for the solution.

Furthermore, assume that a PCM signal as described in Example 3–4 is a polar NRZ signal, and it passes through a communication system with a raised cosine-rolloff filtering characteristic. Let the rolloff factor be 0.25. The bit rate of the digital signal is 64 kbits/s. Determine the absolute bandwidth of the filtered digital signal.

From Eq. (3–74), the absolute bandwidth is $B = 40$ kHz. This is less than the unfiltered digital signal null bandwidth of 64 kHz.

Let us now develop a formula which gives the baud rate that the raised cosine-rolloff system can support without ISI. From Fig. 3–26b, the zeros in the system impulse response occur at $t = n/2f_0$, where $n \neq 0$. Therefore, data pulses may be inserted at each of these zero points without causing ISI. That is, referring to Eq. (3–66) with $\tau = 0$, we see that the raised cosine-rolloff filter satisfies Nyquist's first criterion for the absence of ISI if we select the symbol clock period to be $T_s = 1/(2f_0)$. The corresponding baud rate is $D = 1/T_s = 2f_0$ symbols/s. That is, *the 6-dB bandwidth of the raised cosine-rolloff filter, f_0 , is designed to be half the symbol (baud) rate*. Using Eqs. (3–70) and (3–72), we see that the baud rate which can be supported by the system is

$$D = \frac{2B}{1 + r} \quad (3-74)$$

where B is the absolute bandwidth of the system and r is the system rolloff factor.

Example 3–15 ISI AND RAISED COSINE-ROLLOFF FILTERING

Plot the output waveform when a channel filters a unipolar NRZ signal. Assume that the equivalent filter (i.e., for the combined input data pulse shape, transmitter, channel, and the receiver) is a raised cosine-rolloff filter, where $r = 0.5$. Assume that the unipolar NRZ input signal has a bit rate of $R_b = 1$ Hz and that the data on the unipolar NRZ signal is [1 0 0 10 11010]. Calculate the absolute bandwidth of the channel and plot the waveform at the receiver output. The solution is evaluated and plotted by Example3_15.m. Observe that there is no ISI at the sampling times of nT_b , where n is an integer. Compare this result with that for Example 3–13.

The raised cosine filter is also called a *Nyquist filter*. It is only one of a more general class of filters that satisfy Nyquist's first criterion. This general class is described by the following theorem:

THEOREM. *A filter is said to be a Nyquist filter if the effective transfer function is*

$$H_e(f) = \begin{cases} \Pi\left(\frac{f}{2f_0}\right) + Y(f), & |f| < 2f_0 \\ 0, & f \text{ elsewhere} \end{cases} \quad (3-75)$$

where $Y(f)$ is a real function that is even symmetric about $f = 0$; that is,

$$Y(-f) = Y(f), \quad |f| < 2f_0 \quad (3-76a)$$

and Y is odd symmetric about $f = f_0$; that is,

$$Y(-f + f_0) = -Y(f + f_0), \quad |f| < f_0 \quad (3-76b)$$

Then there will be no intersymbol interference at the system output if the symbol rate is

$$D = f_s = 2f_0 \quad (3-77)$$

This theorem is illustrated in Fig. 3-27. $Y(f)$ can be any real function that satisfies the symmetry conditions of Eq. (3-76). Thus, an infinite number of filter characteristics can be used to produce zero ISI.

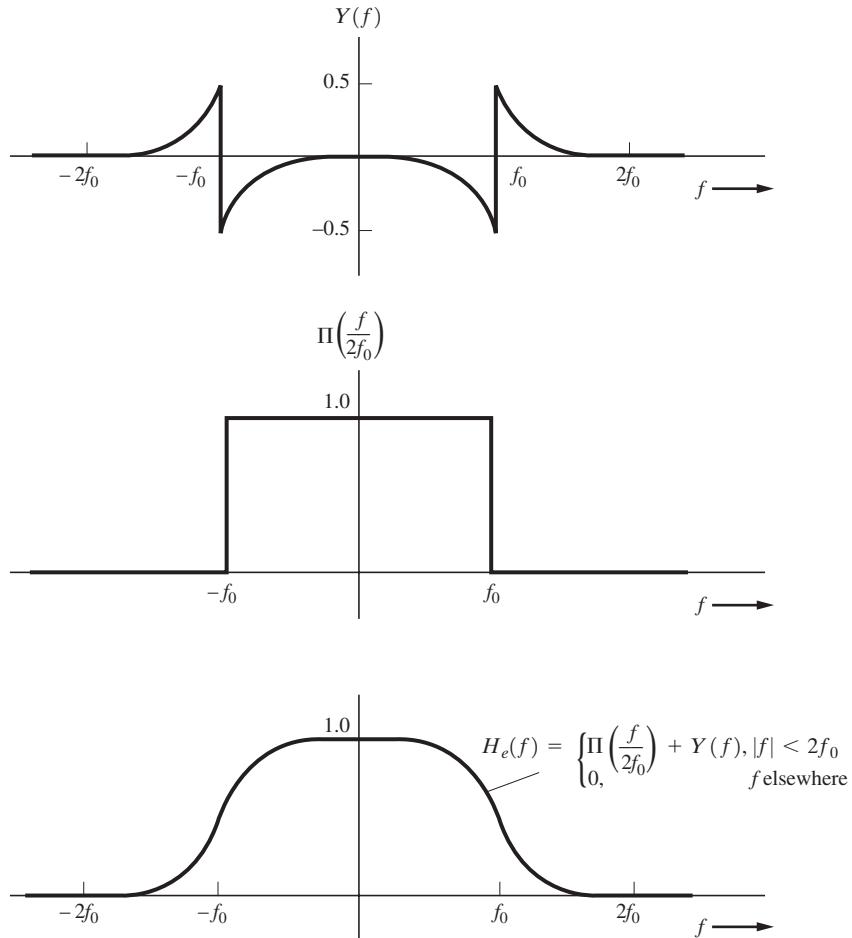


Figure 3-27 Nyquist filter characteristic.

PROOF. We need to show that the impulse response of this filter is 0 at $t = nT_s$, for $n \neq 0$, where $T_s = 1/f_s = 1/(2f_0)$. Taking the inverse Fourier transform of Eq. (3–75), we have

$$h_e(t) = \int_{-2f_0}^{-f_0} Y(f)e^{j\omega t} df + \int_{-f_0}^{f_0} [1 + Y(f)]e^{j\omega t} df + \int_{f_0}^{2f_0} Y(f)e^{j\omega t} df$$

or

$$\begin{aligned} h_e(t) &= \int_{-f_0}^{f_0} e^{j\omega t} df + \int_{-2f_0}^{2f_0} Y(f)e^{j\omega t} df \\ &= 2f_0 \left(\frac{\sin \omega_0 t}{\omega_0 t} \right) + \int_{-2f_0}^0 Y(f)e^{j\omega t} df + \int_0^{2f_0} Y(f)e^{j\omega t} df \end{aligned}$$

Letting $f_1 = f + f_0$ in the first integral and $f_1 = f - f_0$ in the second integral, we obtain

$$\begin{aligned} h_e(t) &= 2f_0 \left(\frac{\sin \omega_0 t}{\omega_0 t} \right) + e^{-j\omega_0 t} \int_{-f_0}^{f_0} Y(f_1 - f_0)e^{j\omega_1 t} df_1 \\ &\quad + e^{j\omega_0 t} \int_{-f_0}^{f_0} Y(f_1 + f_0)e^{j\omega_1 t} df_1 \end{aligned}$$

From Eqs. (3–76a) and (3–76b), we know that $Y(f_1 - f_0) = -Y(f_1 + f_0)$; thus, we have

$$h_e(t) = 2f_0 \left(\frac{\sin \omega_0 t}{\omega_0 t} \right) + j2 \sin \omega_0 t \int_{-f_0}^{f_0} Y(f_1 + f_0)e^{j\omega_1 t} df_1$$

This impulse response is real because $H_e(-f) = H_e^*(f)$, and it satisfies Nyquist's first criterion because $h_e(t)$ is zero at $t = n/(2f_0)$, $n \neq 0$, and $\Delta\tau = 0$. Thus, if we sample at $t = n/(2f_0)$, there will be no ISI.

However, the filter is noncausal. Of course, we could use a filter with a linear phase characteristic $H_e(f)e^{-j\omega T_d}$, and there would be no ISI if we delayed the clocking by T_d sec, since the $e^{-j\omega T_d}$ factor is the transfer function of an ideal delay line. This would move the peak of the impulse response to the right (along the time axis), and then the filter would be approximately causal.

At the digital receiver, in addition to minimizing the ISI, we would like to minimize the effect of channel noise by proper filtering. As will be shown in Chapter 6, the filter that minimizes the effect of channel noise is the *matched filter*. Unfortunately, if a matched filter is used for $H_R(f)$ at the receiver, the overall filter characteristic, $H_e(f)$, will usually not satisfy the Nyquist characteristic for minimum ISI. However, it can be shown that for the case of

Gaussian noise into the receiver, the effects of both ISI and channel noise are minimized if the transmitter and receiver filters are designed so that [Sunde, 1969; Shanmugan, 1979; Ziener and Peterson, 1985]

$$|H_T(f)| = \frac{\sqrt{|H_e(f)|} [\mathcal{P}_n(f)]^{1/4}}{\alpha |H(f)| \sqrt{|H_c(f)|}} \quad (3-78a)$$

and

$$|H_R(f)| = \frac{\alpha \sqrt{|H_e(f)|}}{\sqrt{H_c(f)} [\mathcal{P}_n(f)]^{1/4}} \quad (3-78b)$$

where $P_n(f)$ is the PSD for the noise at the receiver input and α is an arbitrary positive constant (e.g., choose $\alpha = 1$ for convenience). $H_e(f)$ is selected from any appropriate frequency response characteristic that satisfies Nyquist's first criterion as discussed previously, and $H(f)$ is given by Eq. (3-63). Any appropriate phase response can be used for $H_T(f)$ and $H_R(f)$, as long as the overall system phase response is linear. This results in a constant time delay versus frequency. The transmit and receive filters given by Eq. (3-78) become *square-root raised cosine-rolloff filters* for the case of a flat channel transfer function, flat noise, and a raised cosine-rolloff equivalent filter.

Nyquist's Second and Third Methods for Control of ISI

Nyquist's *second method* of ISI control allows some ISI to be introduced in a *controlled* way so that it can be canceled out at the receiver and the data can be recovered without error if no noise is present [Couch, 1993]. This technique also allows for the possibility of doubling the bit rate or, alternatively, halving the channel bandwidth. This phenomenon was observed by telegraphers in the 1900s and is known as "doubling the dotting speed" [Bennett and Davey, 1965].

In Nyquist's *third method* of ISI control, the effect of ISI is eliminated by choosing $h_e(t)$ so that the area under the $h_e(t)$ pulse within the desired symbol interval, T_s , is not zero, but the areas under $h_e(t)$ in adjacent symbol intervals are zero. For data detection, the receiver evaluates the area under the receiver waveform over each T_s interval. Pulses have been found that satisfy Nyquist's third criterion, but their performance in the presence of noise is inferior to the examples that were discussed previously [Sunde, 1969].

3-7 DIFFERENTIAL PULSE CODE MODULATION

When audio or video signals are sampled, it is usually found that adjacent samples are close to the same value. This means that there is a lot of redundancy in the signal samples and, consequently, that the bandwidth and the dynamic range of a PCM system are wasted when redundant sample values are retransmitted. One way to minimize redundant transmission and reduce the bandwidth is to transmit PCM signals corresponding to the difference in adjacent sample values. This, crudely speaking, is *differential pulse code modulation* (DPCM). At the

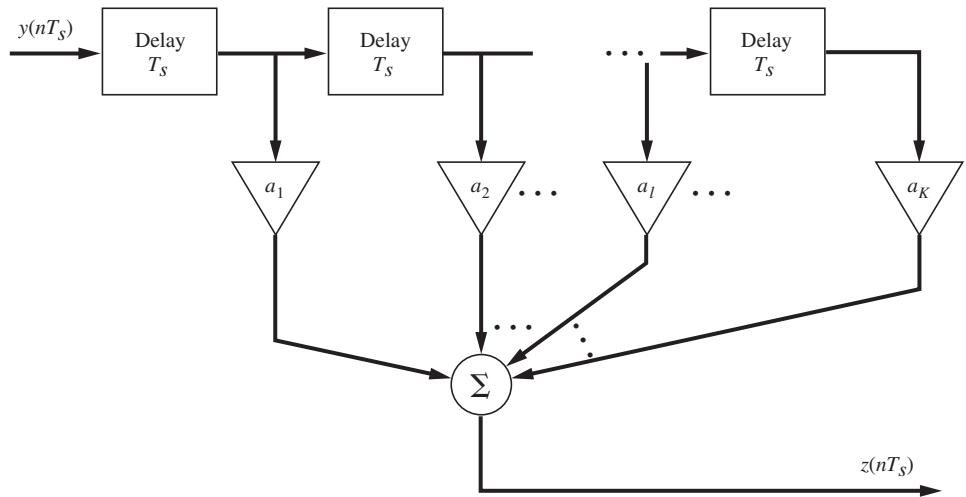


Figure 3-28 Transversal filter.

receiver, the present sample value is regenerated by using the past value plus the update differential value that is received over the differential system.

Moreover, the present value can be estimated from the past values by using a *prediction filter*. Such a filter may be realized by using a tapped delay line (a bucket brigade device) to form a *transversal filter*, as shown in Fig. 3-28. When the tap gains $\{a_l\}$ are set so that the filter output will predict the present value from past values, the filter is said to be a *linear prediction filter* [Spilker, 1977]. The optimum tap gains are a function of the correlation properties of the audio or video signal [Jayant and Noll, 1984]. The output samples are

$$z(nT_s) = \sum_{l=1}^K a_l y(nT_s - lT_s) \quad (3-79a)$$

or, in simplified notation,

$$z_n = \sum_{l=1}^K a_l y_{n-l} \quad (3-79b)$$

where y_{n-l} denotes the sample value at the filter input at time $t = (n - l)T_s$ and there are K delay devices in the transversal filter.

The linear prediction filter may be used in a differential configuration to produce DPCM. Two possible configurations will be examined.

The first DPCM configuration, shown in Fig. 3-29, uses the predictor to obtain a differential pulse amplitude-modulated (DPAM) signal that is quantized and encoded to produce the DPCM signal. The recovered analog signal at the receiver output will be the same as that at the system input, plus *accumulated* quantizing noise. We may eliminate the accumulation effect by using the transmitter configuration of Fig. 3-30.

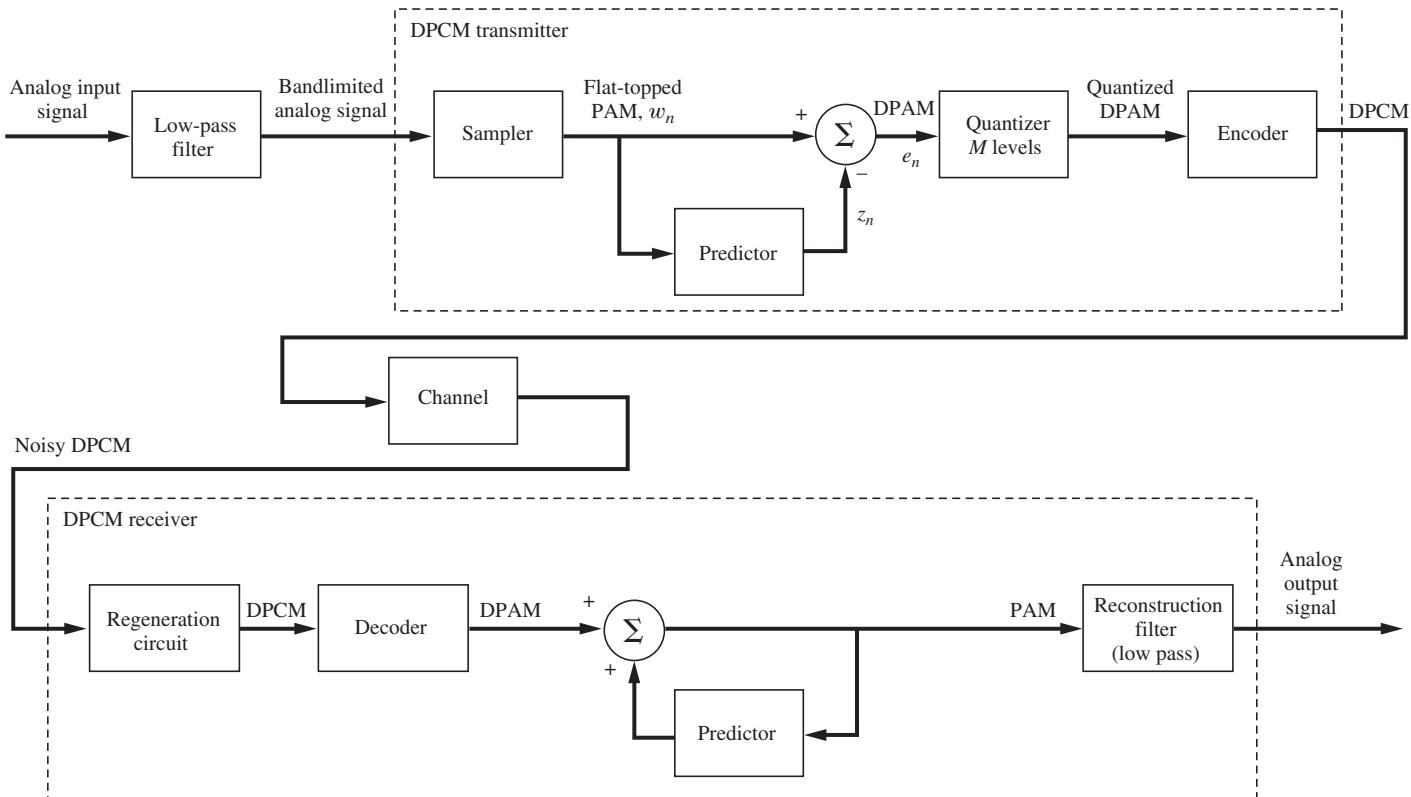


Figure 3–29 DPCM, using prediction from samples of input signal.

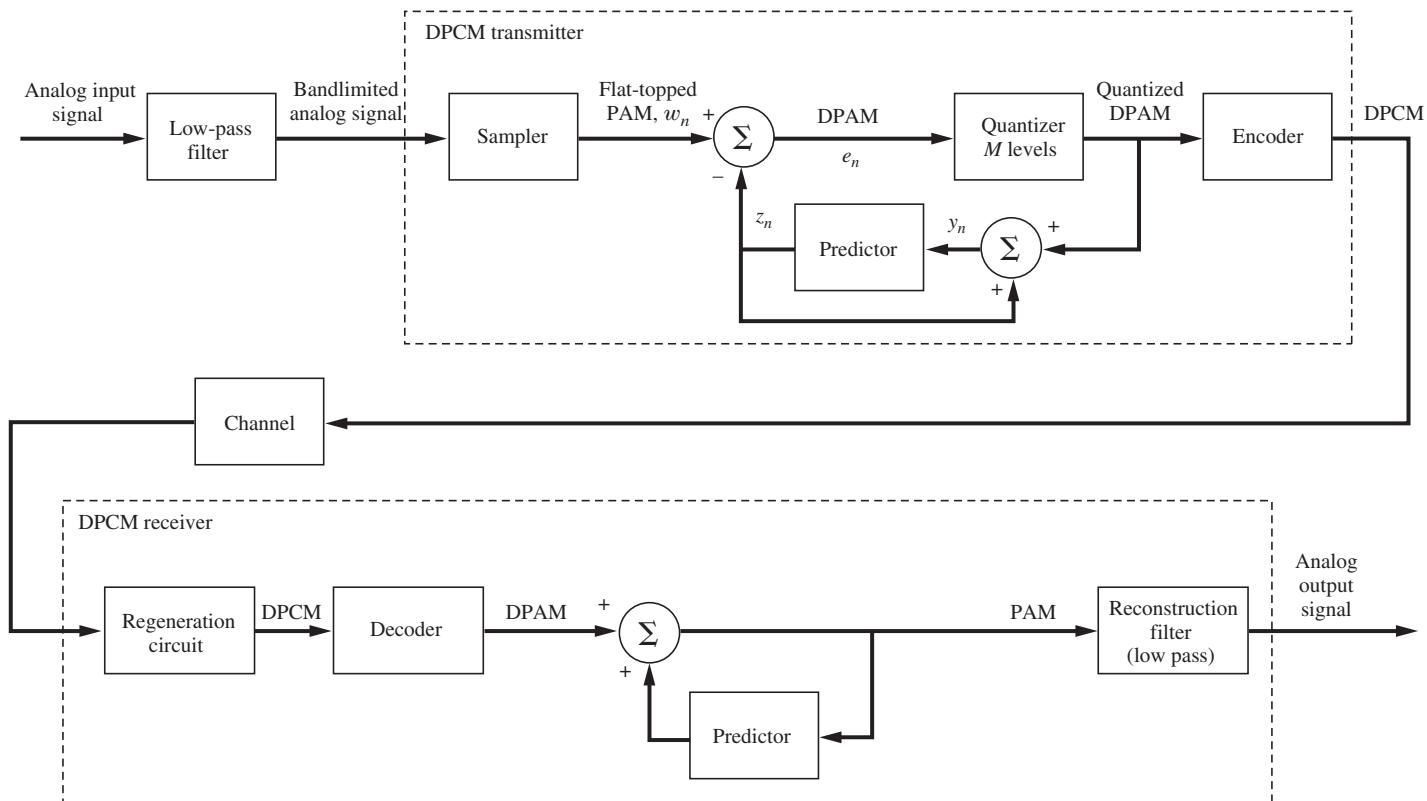


Figure 3–30 DPCM, using prediction from quantized differential signal.

In the second DPCM configuration, shown in Fig. 3–30, the predictor operates on quantized values at the transmitter as well as at the receiver in order to minimize the quantization noise on the recovered analog signal. The analog output at the receiver is the same as the input analog signal at the transmitter, except for quantizing noise; furthermore, the quantizing noise does not accumulate, as was the case in the first configuration.

It can be shown that DPCM, like PCM, follows the 6-dB rule [Jayant and Noll, 1984]

$$\left(\frac{S}{N} \right)_{\text{dB}} = 6.02n + \alpha \quad (3-80a)$$

where

$$-3 < \alpha < 15 \quad \text{for DPCM speech} \quad (3-80b)$$

and n is the number of quantizing bits ($M = 2^n$). Unlike companded PCM, the α for DPCM varies over a wide range, depending on the properties of the input analog signal. Equation (3–80b) gives the range of α for voice-frequency (300 to 3,400 Hz) telephone-quality speech. This DPCM performance may be compared with that for PCM. Equation (3–26b) indicates that $\alpha = -10$ dB for μ -law companded PCM with $\mu = 255$. Thus, there may be an SNR improvement as large as 25 dB when DPCM is used instead of $\mu = 255$ PCM. Alternatively, for the same SNR, DPCM could require 3 or 4 fewer bits per sample than companded PCM. This is why telephone DPCM systems often operate at a bit rate of $R = 32$ kbytes/s or $R = 24$ kbytes/s, instead of the standard 64 kbytes/s needed for companded PCM.

The CCITT has adopted a 32-kbytes/s DPCM standard that uses 4-bit quantization at an 8-ksample/s rate for encoding 3.2-kHz bandwidth VF signals [Decina and Modena, 1988]. Moreover, a 64-kbytes/s DPCM CCITT standard (4-bit quantization and 16 ksamples/s) has been adopted for encoding audio signals that have a 7-kHz bandwidth. A detailed analysis of DPCM systems is difficult and depends on the type of input signal present, the sample rate, the number of quantizing levels used, the number of stages in the prediction filter, and the predictor gain coefficients. This type of analysis is beyond the scope of this text, but for further study, the reader is referred to published work on the topic [O’Neal, 1966b; Jayant, 1974; Flanagan et al., 1979; Jayant and Noll, 1984].

3–8 DELTA MODULATION

From a block diagram point of view, *delta modulation* (DM) is a special case of DPCM in which there are two quantizing levels. As shown in Fig. 3–30, for the case of $M = 2$, the quantized DPAM signal is *binary*, and the encoder is not needed because the function of the encoder is to convert the multilevel DPAM signal to binary code words. For the case of $M = 2$, the DPAM signal is a DPCM signal where the code words are one bit long. The cost of a DM system is less than that of a DPCM system ($M > 2$) because the analog-to-digital converter (ADC) and digital-to-analog converter (DAC) are not needed. This is the main attraction of the DM scheme—it is relatively inexpensive. In fact, the cost may be further reduced by replacing the predictor by a low-cost integration circuit (such as an RC low-pass filter), as shown in Fig. 3–31.

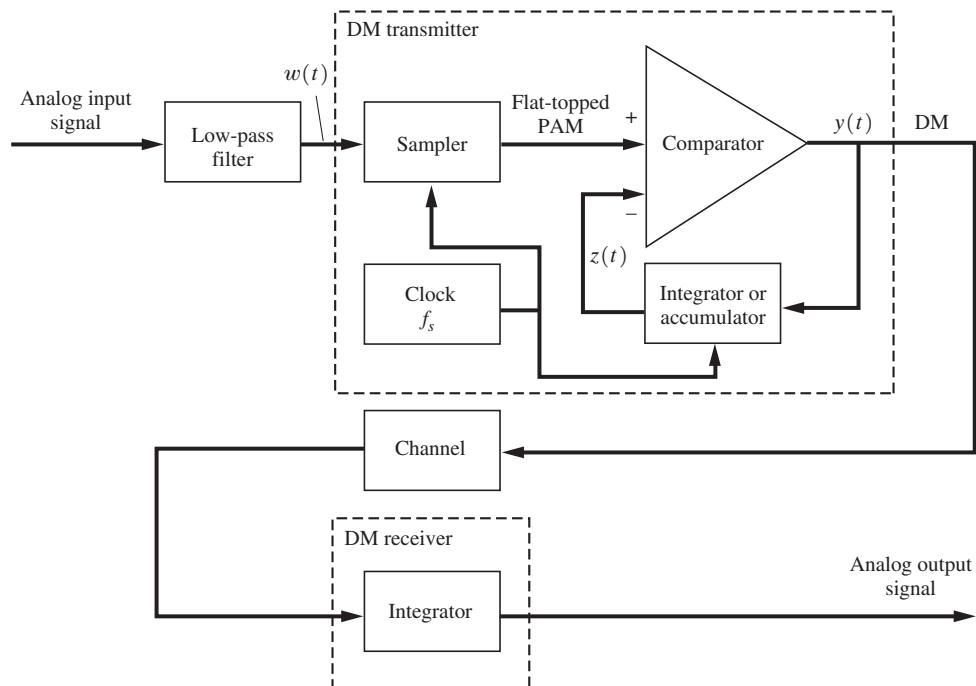


Figure 3–31 DM system.


In the DM circuit shown in Fig. 3–31, the operations of the subtractor and two-level quantizer are implemented by using a comparator so that the output is $\pm V_c$ (binary). In this case, the DM signal is a polar signal. A set of waveforms associated with the delta modulator is shown in Fig. 3–32. In Fig. 3–32a, an assumed analog input waveform is illustrated. If the instantaneous samples of the flat-topped PAM signal are taken at the beginning of each sampling period, the corresponding accumulator output signal is shown.[†] Here the integrator is assumed to act as an accumulator (e.g., integrating impulses) so that the integrator output at time $t = nT_s$ is given by

$$z_n = \frac{1}{V_c} \sum_{i=0}^n \delta y_i \quad (3-81)$$


where $y_i = y(iT_s)$ and δ is the accumulator gain or step size. The corresponding DM output waveform is shown in Fig. 3–32b.

At the receiver, the DM signal may be converted back to an analog signal approximation to the analog signal at the system input. This is accomplished by using an integrator for the receiver that produces a smoothed waveform corresponding to a smoothed version of the accumulator output waveform that is present in the transmitter (Fig. 3–32a).

[†] The sampling frequency, $f_s = 1/T_s$, is selected to be within the range $2B_{\text{in}} < f_s < 2B_{\text{channel}}$, where B_{in} is the bandwidth of the input analog signal and B_{channel} is the bandwidth of the channel. The lower limit prevents aliasing of the analog signal, and the upper limit prevents ISI in the DM signal at the receiver. (See Example 3–16 for further restrictions on the selection of f_s .)

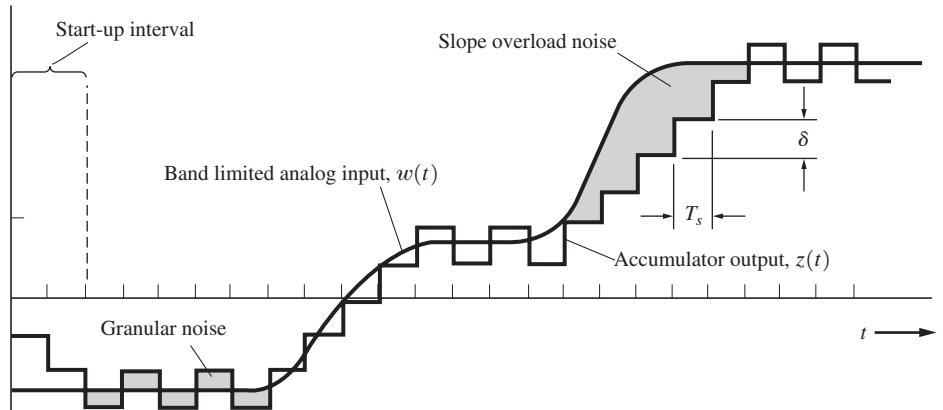

(a) Analog Input and Accumulator Output Waveforms

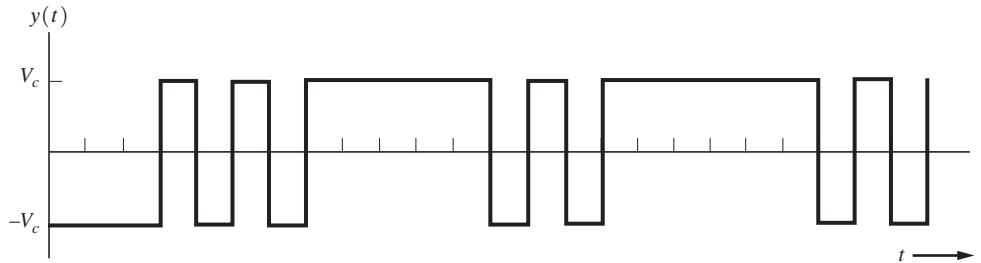

(b) Delta Modulation Waveform

Figure 3-32 DM system waveforms.**Example 3-16 DESIGN OF A DM SYSTEM**

Find the step size δ required to prevent slope overload noise for the case when the input signal is a sine wave.

The maximum slope that can be generated by the accumulator output is

$$\frac{\delta}{T_s} = \delta f_s \quad (3-82)$$

For the case of the sine-wave input, where $w(t) = A \sin \omega_a t$, the slope is

$$\frac{dw(t)}{dt} = A\omega_a \cos \omega_a t \quad (3-83)$$

and the maximum slope of the input signal is $A\omega_a$. Consequently, to avoid slope overload, we require that $\delta f_s > A\omega_a$, or

$$\delta > \frac{2\pi f_a A}{f_s} \quad (3-84)$$

However, we do not want to make δ too much larger than this value, or the granular noise will become too large.

Granular Noise and Slope Overload Noise

From Fig. 3-32a, it is seen that the accumulator output signal does not always track the analog input signal. The quantizing noise error signal may be classified into two types of noise: *slope overload noise* and *granular noise*. Slope overload noise occurs when the step size δ is too small for the accumulator output to follow quick changes in the input waveform. Granular noise occurs for any step size, but is smaller for a small step size. Thus, we would like to have δ as small as possible to minimize the granular noise. The granular noise in a DM system is similar to the granular noise in a PCM system, whereas slope overload noise is a new phenomenon due to a differential signal (instead of the original signal itself) being encoded. Both phenomena are also present in the DPCM system discussed earlier.

It is clear that there should be an optimum value for the step size δ , because if δ is increased, the granular noise will increase, but the slope overload noise will decrease. This relationship is illustrated in Fig. 3-33.

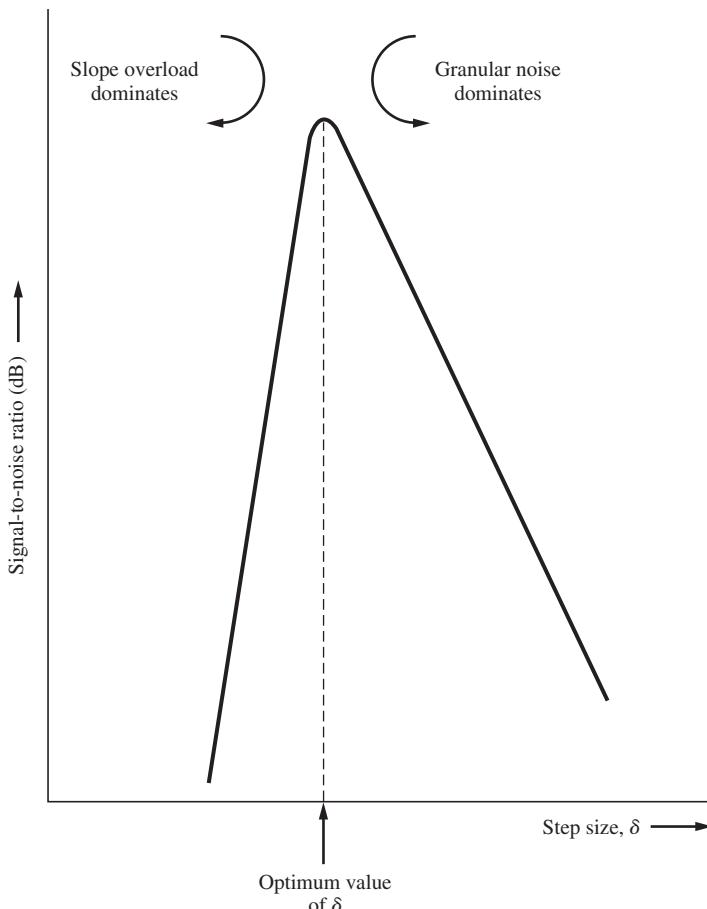


Figure 3-33 Signal-to-noise ratio out of a DM system as a function of step size.

The resulting detected signal-to-noise ratio can also be calculated. It has been determined experimentally that the spectrum of the granular noise is uniformly distributed over the frequency band $|f| \leq f_s$. It can also be shown that the total granular quantizing noise is $\delta^2/3$ (See Sec. 7-7, where $\delta/2$ of PCM is replaced by δ for DM.) Thus, the PSD for the noise is $\mathcal{P}_n(f) = \delta^2/(6f_s)$. The granular noise power in the analog signal band, $|f| \leq B$, is

$$N = \langle n^2 \rangle = \int_{-B}^B \mathcal{P}_n(f) df = \frac{\delta_2 B}{3f_s} \quad (3-85)$$

or, from Eq. (3-84), with equality,

$$N = \frac{4\pi^2 A^2 f_a^2 B}{3f_s^3}$$

The signal power is

$$S = \langle w^2(t) \rangle = \frac{A^2}{2} \quad (3-86)$$

The resulting average signal-to-quantizing noise ratio out of a DM system with a sine-wave test signal is

$$\left(\frac{S}{N} \right)_{\text{out}} = \frac{3}{8\pi^2} \frac{f_s^3}{f_a^2 B} \quad (3-87)$$

where f_s is the DM sampling frequency, f_a is the frequency of the sinusoidal input, and B is the bandwidth of the receiving system. Recall that Eq. (3-87) was shown to be valid only for sinusoidal-type signals.

For voice-frequency (VF) audio signals, it has been shown that Eq. (3-84) is too restrictive if $f_a = 4$ kHz and that slope overload is negligible if [deJager, 1952]

$$\delta \geq \frac{2\pi 800 W_p}{f_s} \quad (3-88)$$

where W_p is the peak value of the input audio waveform $w(t)$. (This is due to the fact that the midrange frequencies around 800 Hz dominate in the VF signal.) Combining Eqs. (3-88) and (3-85), we obtain the S/N for the DM system with a VF-type signal, viz.,

$$\left(\frac{S}{N} \right)_{\text{out}} = \frac{\langle w^2(t) \rangle}{N} = \frac{3f_s^3}{(1,600\pi)^2 B} \left(\frac{\langle w^2(t) \rangle}{W_p^2} \right) \quad (3-89)$$

where B is the audio bandwidth and $(\langle w^2(t) \rangle / W_p^2)$ is the average-audio-power to peak-audio-power ratio.

This result can be used to design a VF DM system. For example, suppose that we desire an SNR of at least 30 dB. Assume that the VF bandwidth is 4 kHz and the average-to-peak audio power is $\frac{1}{2}$. Then Eq. (3–89) gives a required sampling frequency of 40.7 kbits/s, or $f_s = 10.2B$. It is also interesting to compare this DM system with a PCM system that has the same bandwidth (i.e., bit rate). The number of bits, n , required for each PCM word is determined by $R = (2B)n = 10.2B$ or $n \approx 5$. Then the average-signal to quantizing-noise ratio of the comparable PCM system is 30.1 dB. (See Table 3–2.) Thus, under these conditions, the PCM system with a comparable bandwidth has about the same SNR performance as the DM system. Furthermore, repeating the preceding procedure, it can be shown that if an SNR larger than 30 dB were desired, the PCM system would have a larger SNR than that of a DM system with comparable bandwidth; on the other hand, if an SNR less than 30 dB were sufficient, the DM system would outperform (i.e., have a larger SNR than) the PCM system of the same bandwidth. Note that the SNR for DM increases as f_s^3 , or a 9-dB-per-octave increase in f_s .

It is also possible to improve the SNR performance of a DM system by using double integration instead of single integration, as was studied here. With a double-integration system, the SNR increases as f_s^5 , or 15 dB per octave [Jayant and Noll, 1984].

Adaptive Delta Modulation and Continuously Variable Slope Delta Modulation

To minimize the slope overload noise while holding the granular noise at a reasonable value, *adaptive delta modulation* (ADM) is used. Here the step size is varied as a function of time as the input waveform changes. The step size is kept small to minimize the granular noise until the slope overload noise begins to dominate. Then the step size is increased to reduce the slope overload noise. The step size may be adapted, for example, by examining the DM pulses at the transmitter output. When the DM pulses consist of a string of pulses with the same polarity, the step size is increased (see Fig. 3–32) until the DM pulses begin to alternate in polarity, then the step size is decreased, and so on. One possible algorithm for varying the step size is shown in Table 3–7, where the step size changes with discrete variation. Here the step size is normally set to a value when the ADM signal consists of data with alternating 1's and 0's or when two successive binary 1's or 0's occur. However, if three successive binary 1's or three successive binary 0's occur, the step size is

TABLE 3–7 STEP-SIZE ALGORITHM

Data Sequence ^a			Number of Successive Binary 1's or 0's	Step-Size Algorithm, $f(d)$
X	X	0	1	δ
X	0	1	1	δ
0	1	1	1	2δ
1	1	1	1	4δ

^a X, do not care.

increased to 2δ , and 4δ for four successive binary 1's or 0's. Figure 3-34 gives a block diagram for this ADM system.

Papers have been published with demonstration records that illustrate the quality of ADM and other digital techniques when voice signals are sent over digital systems and recovered [Jayant, 1974; Flanagan et al., 1979]. Another variation of ADM is *continuously variable slope delta modulation* (CVSD). Here an integrator (instead of an accumulator) is used, so that $z(t)$ is made continuously variable instead of stepped in discrete increments as shown in Fig. 3-32a.

The following question might be asked: Which is better, PCM or DM? The answer, of course, depends on the criterion used for comparison and the type of message. If the objective is to have a relatively simple, low-cost system, delta modulation may be the best. However, the cost of ADCs is dropping, so this may not be a factor. If high output SNR is the criterion, PCM is probably the best [O'Neal, 1966a]. If one is interfacing to existing equipment, compatibility would be a prime consideration. In this regard, PCM has the advantage, because it was adopted first and is widely used.

Speech Coding

Digital speech coders can be classified into two categories: waveform coders and vocoders. *Waveform coders* use algorithms to encode and decode speech so that the system output is an approximation to the input waveform. *Vocoders* encode speech by extracting a set of parameters that are digitized and transmitted to the receiver, where they are used to set values for parameters in function generators and filters, which, in turn, synthesize the output speech sound. Usually, the vocoder output waveform does not approximate the input waveform and may have an artificial, unnatural sound. Although the words of the speaker may be clearly understandable, the speaker may not be identifiable. With waveform encoders (e.g., PCM, DPCM, DM, and CVSD), it was demonstrated that VF-quality speech may be encoded at bit rates as low as 24 kbits/s. More advanced techniques reduce the required bit rate to 8 kbits/s, and speech coding is possible even at 2 kbits/s. Some techniques that are available to achieve coders at low bit rates are linear prediction (already discussed as applied to DPCM), adaptive subband coding, and vector quantization. Adaptive subband coding allocates bits according to the input speech spectrum and the properties of hearing. With vector quantization, whole blocks of samples are encoded at a time, instead of encoding on a sample-by-sample basis. Examples are code excited linear prediction (CELP) and vector-sum excited linear prediction (VSELP), used in digital cellular telephones, as described in Sec. 8-8. These coders employ linear-prediction-based *analysis-by-synthesis* (LPAS) techniques, in which the talker's speech signal is partitioned into 20-ms segments for analysis and synthesis. The encoder sequences through the possible codebook excitation patterns and the possible values for the filter parameters to find a synthesized waveform that gives the best match to a speech segment. The encoder parameters that specify this best match are then transmitted to the receiver via digital data. The received data establish the parameters for the receiver speech synthesizer so that the voice signal is reproduced for the listener.

One strives to use lower bit-rate codecs in order to reduce data transmission costs. However, lower bit-rate codecs require greater computation complexity, produce longer

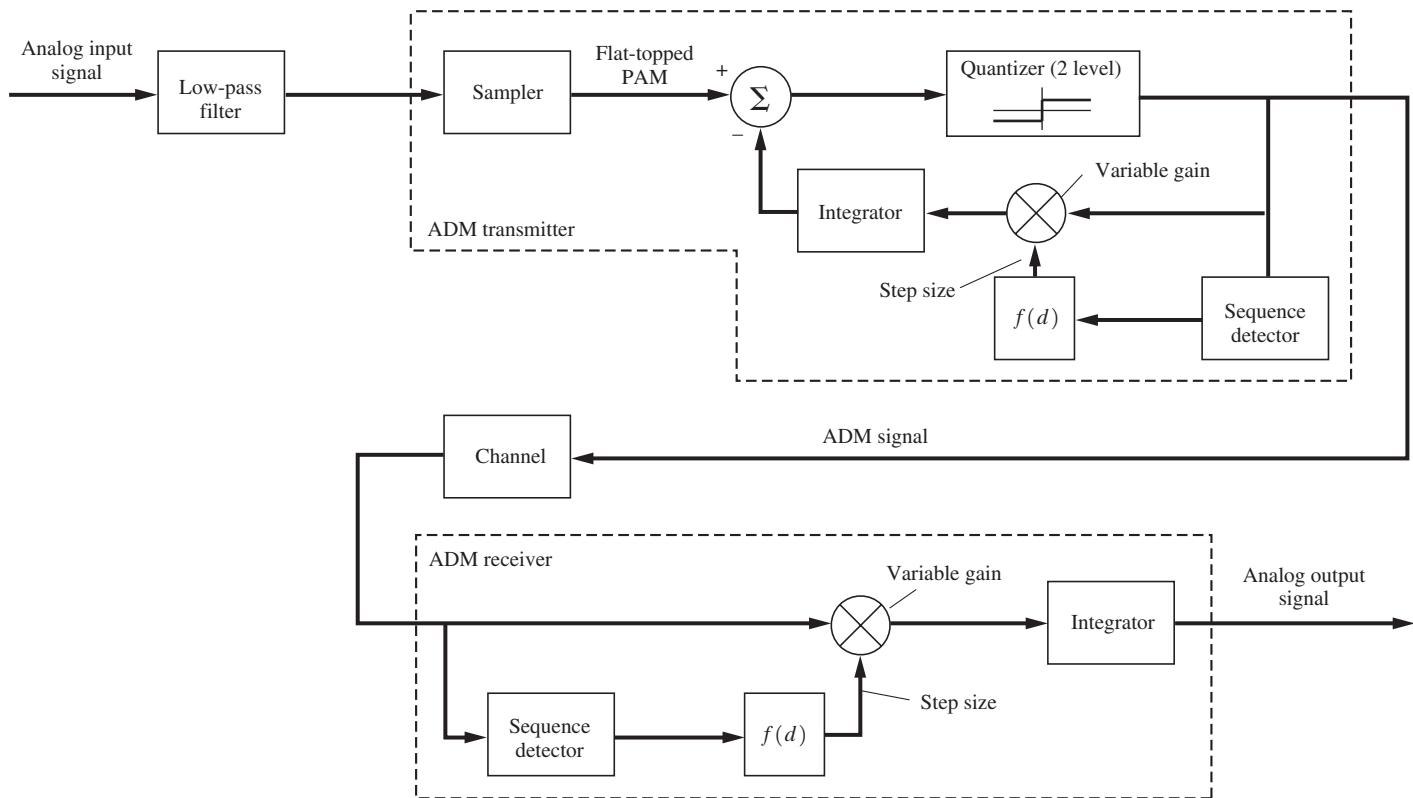


Figure 3–34 ADM system.

delays of the reproduced speech at the system output, and have poorer speech quality. (For more details about speech coders and the trade-off involved, see the literature [e.g., Gershio, 1994; Spanias, 1994; Budagavi and Gibson, 1998].)

3–9 TIME-DIVISION MULTIPLEXING[†]

DEFINITION. *Time-division multiplexing* (TDM) is the time interleaving of samples from several sources so that the information from these sources can be transmitted serially over a single communication channel.

Figure 3–35 illustrates the TDM concept as applied to three analog sources that are multiplexed over a PCM system. For convenience, natural sampling is shown together with the corresponding gated TDM PAM waveform. In practice, an electronic switch is used for the commutation (sampler). In this example, the pulse width of the TDM PAM signal is $T_s/3 = 1/(3f_s)$, and the pulse width of the TDM PCM signal is $T_s/(3n)$, where n is the number of bits used in the PCM word. Here $f_s = 1/T_s$ denotes the frequency of rotation for the commutator, and f_s satisfies the Nyquist rate for the analog source with the largest bandwidth. In some applications in which the bandwidth of the sources is markedly different, the larger bandwidth sources may be connected to several switch positions on the sampler so that they will be sampled more often than the smaller bandwidth sources.

At the receiver, the decommutator (sampler) has to be synchronized with the incoming waveform so that the PAM samples corresponding to source 1, for example, will appear on the channel 1 output. This is called *frame synchronization*. Low-pass filters are used to reconstruct the analog signals from the PAM samples. ISI resulting from poor channel filtering would cause PCM samples from one channel to appear on another channel, even though perfect bit and frame synchronization were maintained. Feedthrough of one channel's signal into another channel is called *crosstalk*.

Frame Synchronization

Frame synchronization is needed at the TDM receiver so that the received multiplexed data can be sorted and directed to the appropriate output channel. The frame sync can be provided to the receiver demultiplexer (demux) circuit either by sending a frame sync signal from the transmitter over a separate channel or by deriving the frame sync from the TDM signal itself. Because the implementation of the first approach is obvious, we will concentrate on that of the latter approach, which is usually more economical, since a separate sync channel is not needed. As illustrated in Fig. 3–36, frame sync may be multiplexed along with the information words in an N -channel TDM system by transmitting a unique K -bit sync word at the beginning of

[†] In this method, a common channel or system is shared by many users. Other methods for sharing a common communication system are discussed under the topic of multiple access techniques in Sec. 8–5.

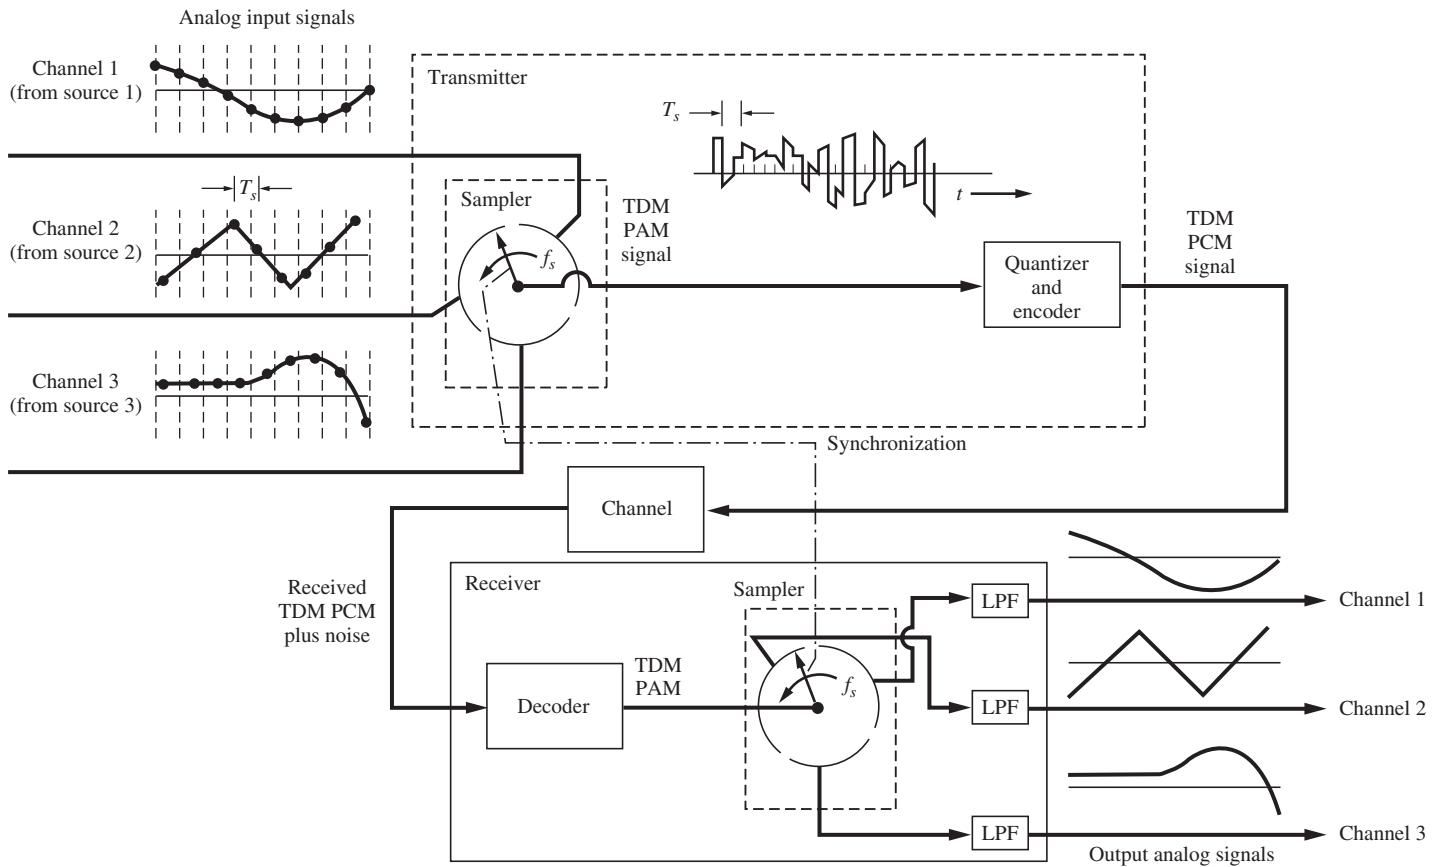


Figure 3–35 Three-channel TDM PCM system.

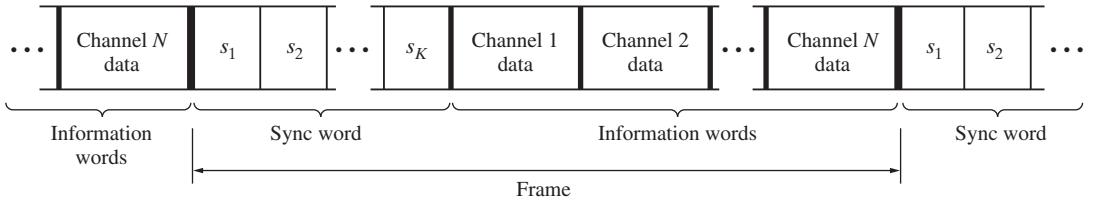


Figure 3–36 TDM frame sync format.

each frame. As illustrated in Fig. 3–37, the frame sync is recovered from the corrupted TDM signal by using a frame synchronizer circuit that cross-correlates the regenerated TDM signal with the expected unique sync word $\mathbf{s} = (s_1, s_2, \dots, s_K)$. The elements of the unique sync word vector \mathbf{s} , denoted by $s_1, s_2, \dots, s_j, \dots, s_k$, are binary 1's or 0's (which, for TTL logic would represent +5 V or 0 V, respectively). The current bit of the regenerated TDM signal is clocked into the first stage of the shift register and then shifted to the next stage on the next clock pulse so that the most immediate K bits are always stored in the shift register. The s_j 's within the triangles below the shift register denote the presence or absence of an inverter. That is, if s_j is a binary 0, then there is an inverter in the j th leg. If s_j is a binary 1, there is no inverter. The coincident detector is a K -input AND gate.

If the unique sync word happens to be present in the shift register, all the inputs to the coincident detector will be binary 1's, and the output of the coincident detector will be a binary 1 (i.e., a high level). Otherwise, the output of the coincident detector is a binary 0 (i.e., a low level). Consequently, the coincident detector output will go high only during the T_b -s interval when the sync word is perfectly aligned in the shift register. Thus, the frame synchronizer recovers the frame sync signal.

False sync output pulses will occur if K successive information bits happen to match the bits in the sync word. For equally likely TDM data, the probability of this false sync occurring is equal to the probability of obtaining the unique sync word, which is

$$P_f = \left(\frac{1}{2}\right)^K = 2^{-K} \quad (3-90)$$

In frame synchronizer design, this equation may be used to determine the number of bits, K , needed in the sync word so that the false lock probability will meet specifications. Alternatively, more sophisticated techniques such as aperture windows can be used to suppress false lock pulses [Ha, 1986]. The information words may also be encoded so that they are not allowed to have the bit strings that match the unique sync word.

Since the output of the coincident detector is a digitized crosscorrelation of the sync word with the passing K -bit word stored in the shift register, the sync word needs to be chosen so that its autocorrelation function, $R_s(k)$, has the desirable properties: $R_s(0) = 1$ and $R(k) \approx 0$ for $k \neq 0$. The PN codes (studied in Sec. 5–13) are almost ideal in this regard. For example, if $P_f = 4 \times 10^{-5}$ is the allowed probability of false sync, then, from Eq. (3–90), a ($K = 15$)-bit sync word is required. Consequently, a 15-stage shift register is needed for the frame synchronizer in the receiver. The 15-bit PN sync word can be generated at the transmitter using a four-stage shift register.

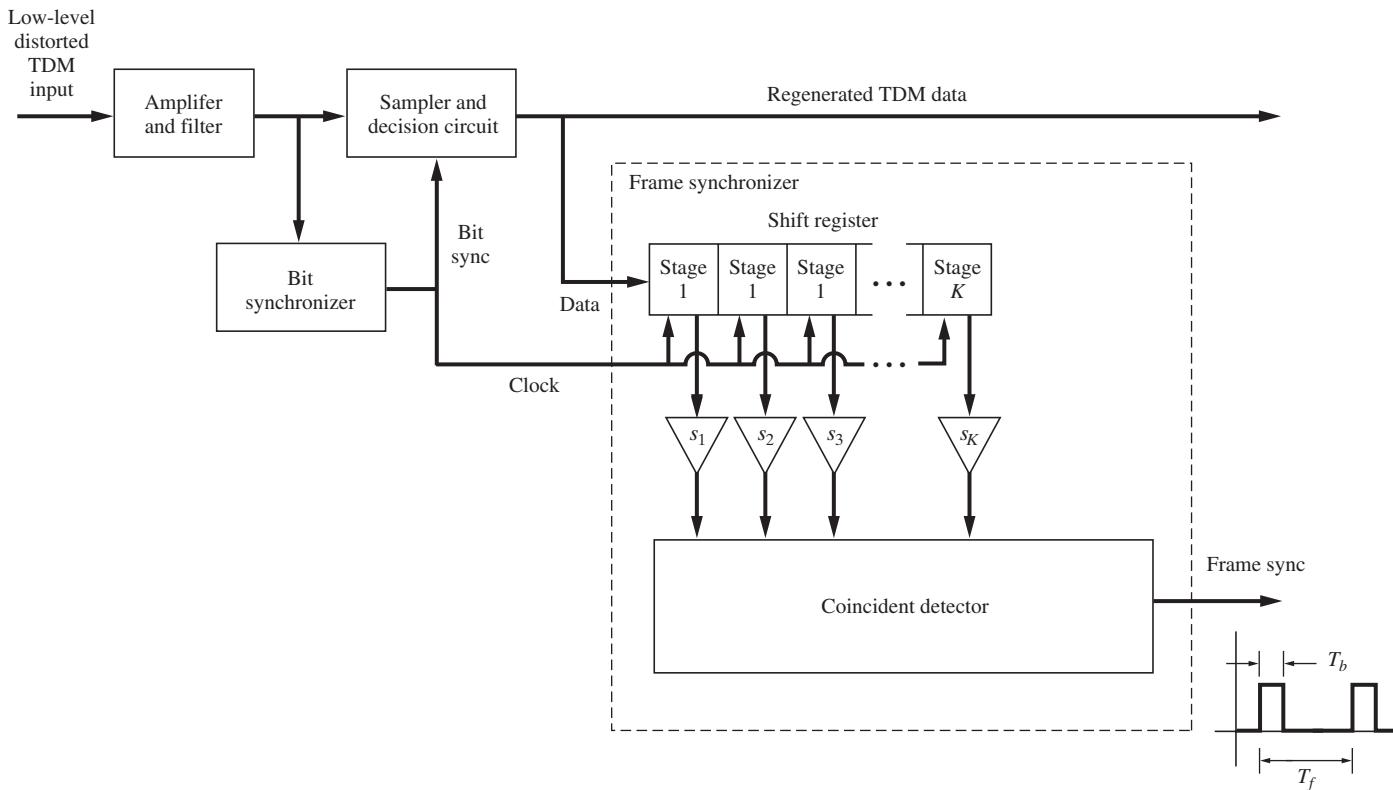


Figure 3-37 Frame synchronizer with TDM receiver front end.

Synchronous and Asynchronous Lines

For bit sync, data transmission systems are designed to operate with either synchronous or asynchronous serial data lines. In a *synchronous* system, each device is designed so that its internal clock is relatively stable for a long period of time, and the device clock is synchronized to a system master clock. Each bit of data is clocked in synchronism with the master clock. The synchronizing signal may be provided by a separate clocking line or may be embedded in the data signal (e.g., by the use of Manchester line codes). In addition, synchronous transmission requires a higher level of synchronization to allow the receiver to determine the beginning and ending of blocks of data. This is achieved by the use of frame sync as discussed previously.

In *asynchronous* systems, the timing is precise only for the bits within each character (or word). This is also called *start-stop* signaling, because each character consists of a “start bit” that starts the receiver clock and concludes with one or two “stop bits” that terminate the clocking. Usually, two stop bits are used with terminals that signal at rates less than 300 bits/s, and one stop bit is used if $R > 300$ bits/s. Thus, with asynchronous lines, the receiver clock is started aperiodically and no synchronization with a master clock is required. The frequency of the receiver clock is sufficiently accurate that correct bit timing is maintained for the duration of one word. This aperiodic mode of operation is ideal for keyboard terminals, at which the typist does not type at an even pace and whose input rate is much slower than that of the data communication system. These asynchronous terminals often use a 7-bit ASCII code, and the complete character consists of one start bit, 7 bits of the ASCII code, one parity bit, and one stop bit (for $R \geq 300$ bits/s). This gives a total character length of 10 bits. In TDM of the asynchronous type, the different sources are multiplexed on a *character-interleaved* (i.e., character-by-character) basis instead of interleaving on a bit-by-bit basis. The synchronous transmission system is more efficient, because start and stop bits are not required. However, the synchronous mode of transmission requires that the clocking signal be passed along with the data and that the receiver synchronize to the clocking signal.

“Intelligent” TDMs may be used to *concentrate* data arriving from many different terminals or sources. These TDMs are capable of providing speed, code, and protocol conversion. At the input to a large mainframe computer, they are called *front-end processors*. The hardware in the intelligent TDM consists of microprocessors or minicomputers. Usually, they connect “on the fly” to the input data lines that have data present and momentarily disconnect the lines that do not have data present. For example, a keyboard terminal is disconnected from the system while it is inactive (although to the user, it does not appear to be disconnected) and is connected as each character or block of data is sent. Thus the output data rate of the multiplexer is much less than the sum of the data capacities of the input lines. This technique is called *statistical multiplexing*; it allows many more terminals to be connected on line to the system.

Multiplexers can also be classified into three general types. The first TDM type consists of those that connect to synchronous lines. The second TDM type consists of those that connect to quasi-synchronous lines. In this case, the individual clocks of the input data sources are not exactly synchronized in frequency. Consequently, there will be some variation in the bit rates between the data arriving from different sources. In addition, in some

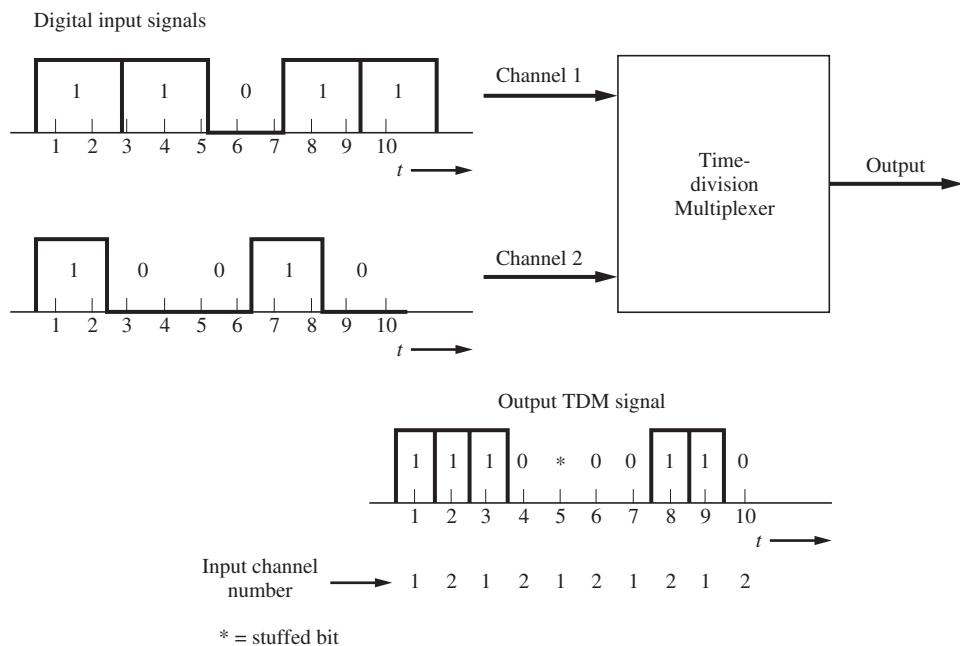


Figure 3–38 Two-channel bit-interleaved TDM with pulse stuffing.

applications the clock rates of the input data streams are not related by a rational number. In these cases, the TDM output signal will have to be clocked at an increased rate above the nominal value to accommodate those inputs that are not synchronous. When a new input bit is not available at the multiplexer clocking time (due to nonsynchronization), *stuff bits*, which are dummy bits, are inserted in the TDM output data stream. This strategy is illustrated by the bit-interleaved multiplexer shown in Fig. 3–38. The stuff bits may be binary 1's, 0's, or some alternating pattern, depending on the choice of the system designer. The third TDM type consists of those that operate with asynchronous sources and produce a high-speed asynchronous output (no stuff bits required) or high-speed synchronous output (stuff bits required).

Example 3–17 DESIGN OF A TIME-DIVISION MULTIPLEXER

Design a time-division multiplexer that will accommodate 11 sources. Assume that the sources have the following specifications:

- Source 1. Analog, 2-kHz bandwidth.
- Source 2. Analog, 4-kHz bandwidth.
- Source 3. Analog, 2-kHz bandwidth.
- Sources 4–11. Digital, synchronous at 7,200 bits/s.

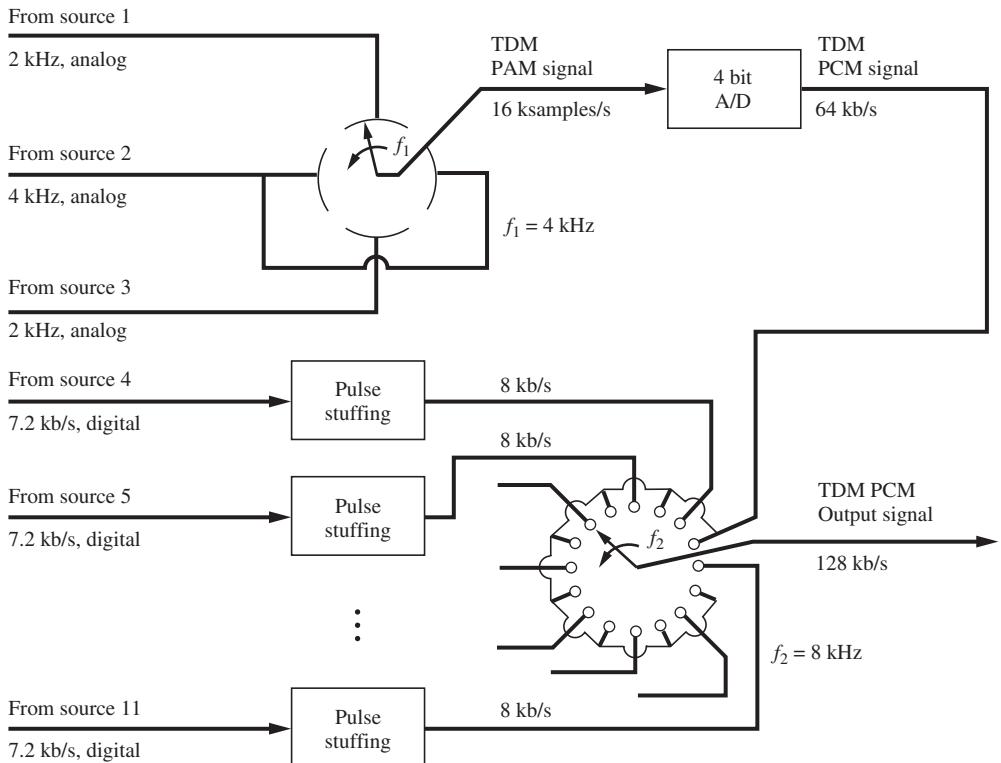


Figure 3–39 TDM with analog and digital inputs as described in Example 3–17.

Now suppose that the analog sources will be converted into 4-bit PCM words and, for simplicity, that frame sync will be provided via a separate channel and synchronous TDM lines are used. To satisfy the Nyquist rate for the analog sources, sources 1, 2, and 3 need to be sampled at 4, 8, and 4 kHz, respectively. As shown in Fig. 3–39, this can be accomplished by rotating the first commutator at $f_1 = 4$ kHz and sampling source 2 twice on each revolution. This produces a 16-ksamples/s TDM PAM signal on the commutator output. Each of the analog sample values is converted into a 4-bit PCM word, so that the rate of the TDM PCM signal on the ADC output is 64 kbit/s. The digital data on the ADC output may be merged with the data from the digital sources by using a second commutator rotating at $f_2 = 8$ kHz and wired so that the 64-kbit/s PCM signal is present on 8 of 16 terminals. This arrangement provides an effective sampling rate of 64 kbit/s. On the other eight terminals, the digital sources are connected to provide a data transfer rate of 8 kbit/s for each source. Since the digital sources are supplying a 7.2-kbit/s data stream, pulse stuffing is used to raise the source rate to 8 kbit/s.

The preceding example illustrates the main advantage of TDM: It can easily accommodate both analog and digital sources. Unfortunately, when analog signals are converted to digital signals without redundancy reduction, they consume a great deal of digital system capacity.

TDM Hierarchy

In practice, TDMs may be grouped into two categories. The first category consists of multiplexers used in conjunction with digital computer systems to merge digital signals from several sources for TDM transmission over a high-speed line to a digital computer. The output rate of these multiplexers has been standardized to 1.2, 2.4, 3.6, 4.8, 7.2, 9.6, 14.4, 19.2, and 28.8 kbytes/s and to 10 and 100 Mbytes/s.

The second category of TDMs is used by common carriers, such as the American Telephone and Telegraph Company (AT&T), to combine different sources into a high-speed digital TDM signal for transmission over toll networks. Unfortunately, the standards adopted by North America and Japan are different from those that have been adopted in other parts of the world. The North America–Japan standards were first adopted by AT&T, and another set of standards has been adopted by CCITT under the auspices of ITU. The North American TDM hierarchy is shown in Fig. 3–40 [James and Muench, 1972].[†] The telephone industry has standardized the bit rates to 1.544 Mbytes/s, 6.312 Mbytes/s, etc., and designates them as DS-1 for digital signal, type 1; DS-2 for digital signal, type 2; etc. as listed in Table 3–8. In Fig. 3–40, all input lines are assumed to be digital (binary) streams, and the number of voice-frequency (VF) analog signals that can be represented by these digital signals is shown in parentheses. The higher level multiplexing inputs are not always derived from lower level multiplexers. For example, one analog television signal can be converted directly to a DS-3 data stream (44.73 Mbytes/s). Similarly, the DS streams can carry a mixture of information from a variety of sources such as video, VF, and computers.

The transmission medium that is used for the multiplex levels depends on the DS level involved and on the economics of using a particular type of medium at a particular location (Table 3–8). For example, higher DS levels may be transmitted over coaxial cables or fiber-optic cable or via microwave radio or satellite. A single DS-1 signal is usually transmitted over one pair of twisted wires. (One pair is used for each direction.) This type of DS-1 transmission over a twisted-pair medium is known (from its development in 1962 by AT&T) as the *T1 carrier system* [Andrews, 2011]. DS-1 signaling over a T1 system is very popular because of its relatively low cost and its excellent maintenance record. (T1 will be discussed in more detail in the next section.) Table 3–9 shows the specifications for the T-carrier digital baseband systems. Table 8–2 is a similar table for the capacity of common-carrier bandpass systems. The corresponding CCITT TDM standard that is used throughout the world except in North America and Japan is shown in Fig. 3–41 [Irmer, 1975].

With the development of high-bit-rate fiber-optic systems, it has become apparent that the original TDM standards are not adequate. A TDM standard called the (Synchronous Optical Network (SONET) was proposed by Bellcore (Bell Communications Research) around 1985 and has evolved into an international standard that was adopted by the CCITT in

[†] The Japanese TDM hierarchy is the same as that for North America for multiplex levels 1 and 2, but differs for levels 3, 4, and 5. For level 3, the Japanese standard is 32.064 Mbytes/s (480 VF), level 4 is 97.728 Mbytes/s (1440 VF), and level 5 is 397.200 Mbytes/s (5760 VF). Dissimilarities between standards are briefly discussed and summarized by Jacobs [1986].

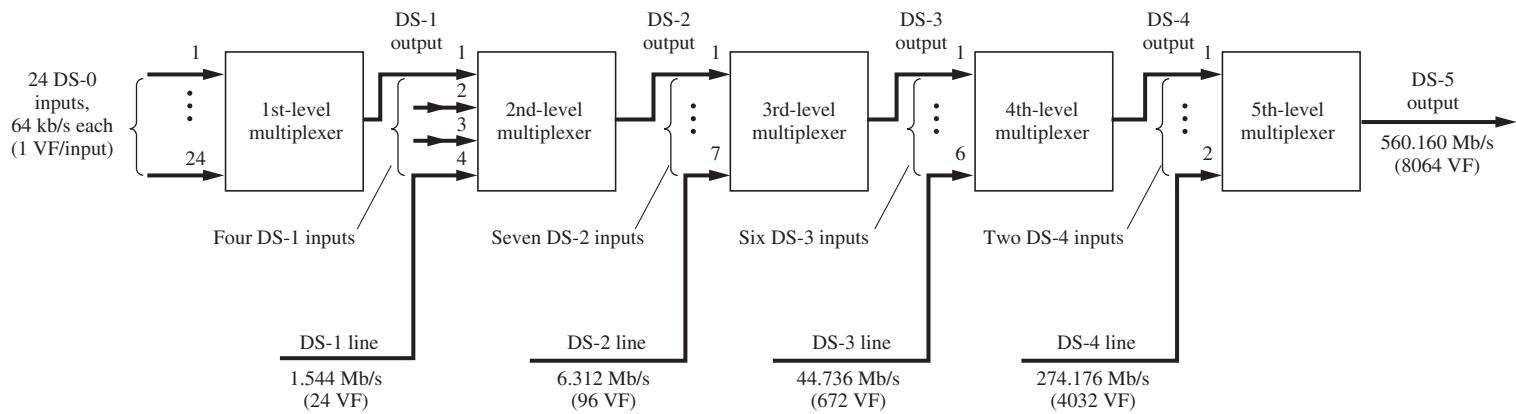


Figure 3–40 North American digital TDM hierarchy.

TABLE 3–8 TDM STANDARDS FOR NORTH AMERICA

Digital Signal Number	Bit Rate, R (Mbits/s)	No. of 64 kbit/s PCM VF Channels	Transmission Media Used
DS-0	0.064	1	Wire pairs
DS-1	1.544	24	Wire pairs
DS-1C	3.152	48	Wire pairs
DS-2	6.312	96	Wire pairs, fiber
DS-3	44.736	672	Coax., radio, fiber
DS-3C	90.254	1344	Radio, fiber
DS-4E	139.264	2016	Radio, fiber, coax.
DS-4	274.176	4032	Coax., fiber
DS-432	432.000	6048	Fiber
DS-5	560.160	8064	Coax., fiber

1989. This SONET standard is shown in Table 3–10. The OC-1 signal is an optical (light) signal that is turned on and off (modulated) by an electrical binary signal that has a line rate of 51.84 Mbit/s. The electrical signal is called the Synchronous Transport Signal—level 1 (STS-1 signal). Other OC-N signals have line rates of exactly N times the OC-1 rate and are formed by modulating a light signal with an STS-N electrical signal. The STS-N signal is obtained by byte-interleaving (scrambling) N STS-1 signals. (More details about fiber-optic systems are given in Sec. 8–7.)

The telephone industry can also provide an all-digital network that integrates voice and data over a single telephone line from each user to the telephone company equipment. One approach is called the *integrated service digital network* (ISDN). Another approach is a digital subscriber line (DSL) technique called G.Lite. This provides an “always-on” 1.5-Mb/s data path (for Internet access) plus a standard VF telephone signal over a single twisted-pair line. (For details on these techniques, see Section 8–3.)

The T1 PCM System

For telephone voice service, the first-level TDM multiplexer in Fig. 3–40 is replaced by a TDM PCM system, which will convert 24-VF analog telephone signals to a DS-1 (1.544-Mbit/s) data stream. In AT&T terminology, this is either a D-type channel bank or a digital carrier trunk (DCT) unit. A T1 line span is a twisted-pair telephone line that is used to carry the DS-1 (1.544 Mbit/s) data stream. Two lines, one for transmitting and one for receiving, are used in the system. If the T1 line is connecting telephone equipment at different sites, repeaters are required about every mile.

The T1 system was developed by Bell Laboratories for short-haul digital communication of VF traffic up to 50 mi. The sampling rate used on each of the 24-VF analog signals is 8 kHz, which means that one frame length is $1/(8 \text{ kHz}) = 125 \mu\text{s}$, as shown in Fig. 3–42. Currently, each analog sample is nominally encoded into an 8-bit PCM word, so that there are $8 \times 24 = 192$ bits

TABLE 3-9 SPECIFICATIONS FOR T-CARRIER BASEBAND DIGITAL TRANSMISSION SYSTEMS

System	Rate (Mbps/s)	System Capacity			Line Code	Repeater Spacing (miles)	Maximum System Length (miles)	System Error Rate
		Digital Signal No.	Voice Channels	Medium				
T1	1.544	DS-1	24	Wire pair	Bipolar RZ	1	50	10^{-6}
T1C	3.152	DS-1C	48	Wire pair	Bipolar RZ	1	—	10^{-6}
T1D	3.152	DS-1C	48	Wire pair	Duobinary NRZ	1	—	10^{-6}
T1G	6.443	DS-2	96	Wire pair	4-level NRZ	1	200	10^{-6}
T2	6.312	DS-2	96	Wire pair ^a	B6ZS ^b RZ	2.3	500	10^{-7}
T3	44.736	DS-3	672	Coax.	B3ZS ^b RZ	c	c	c
T4	274.176	DS-4	4032	Coax.	Polar NRZ	1	500	10^{-6}
T5	560.160	DS-5	8064	Coax.	Polar NRZ	1	500	4×10^{-7}

^a Special two-wire cable is required for 12,000-ft repeater spacing. Because T2 cannot use standard exchange cables, it is not as popular as T1.

^b BnZS denotes *binary n-zero substitution*, where a string of *n* zeros in the bipolar line code is replaced with a special three-level code word so that synchronization can be maintained [Fike and Friend, 1984; Bic, Dupontel, and Imbeaux, 1991].

^c Used in central telephone office for building multiplex levels; not used for transmission from office to office.


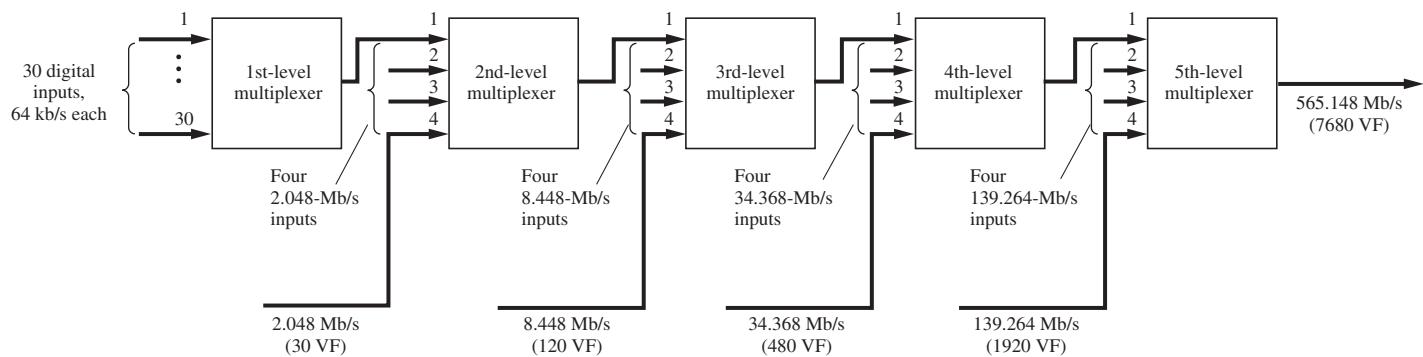


Figure 3–41 CCITT digital TDM hierarchy.

TABLE 3-10 SONET SIGNAL HIERARCHY

Optical OC Level	Electrical STS Level	Line Rate (Mbits/s)	Equivalent Number of		
			DS-3s	DS-1s	DS-0s
OC-1	STS-1	51.84	1	28	672
OC-3	STS-3	155.52	3	84	2,016
OC-9	STS-9	466.56	9	252	6,048
OC-12	STS-12	622.08	12	336	8,064
OC-18	STS-18	933.12	18	504	12,096
OC-24	STS-24	1,244.16	24	672	16,128
OC-36	STS-36	1,866.24	36	1,008	24,192
OC-48	STS-48	2,488.32	48	1,344	32,256
OC-192	STS-192	9,953.28	192	5,376	129,024
OC-768	STS-768	89,813.12	768	21,504	516,096
OC-3072	STS-3072	159,252.48	3,072	86,016	2,064,384

of data, plus one bit that is added for frame synchronization, yielding a total of 193 bits per frame. The T1 data rate is then $(193 \text{ bits/frame})(8,000 \text{ frames/s}) = 1.544 \text{ Mbits/s}$, and the corresponding duration of each bit is $0.6477 \mu\text{s}$. The signaling is incorporated into the T1 format by replacing the eighth bit (the least significant bit) in each of the 24 channels of the T1 signal by a signaling bit in every sixth frame. Thus, the signaling data rate for each of the 24 input channels is $(1 \text{ bit/6 frames})(8,000 \text{ frames/s}) = 1.333 \text{ kbits/s}$. The framing bit used in the even-numbered frames follows the sequence 001110, and in the odd-numbered frames it follows the sequence 101010, so that the frames with the signaling information in the eighth bit position (for each channel) may be identified. The digital signaling on the T1 line is represented by a bipolar RZ waveform format (see Fig. 3-15) with peak levels of $\pm 3 \text{ V}$ across a $100-\Omega$ load. Consequently, there is no DC component on the T1 line regardless of the data pattern. In encoding the VF PAM samples, a $\mu = 255$ -type compression characteristic is used, as described earlier in this chapter. Because the T1 data rate is 1.544 Mbits/s and the line code is bipolar, the first zero-crossing

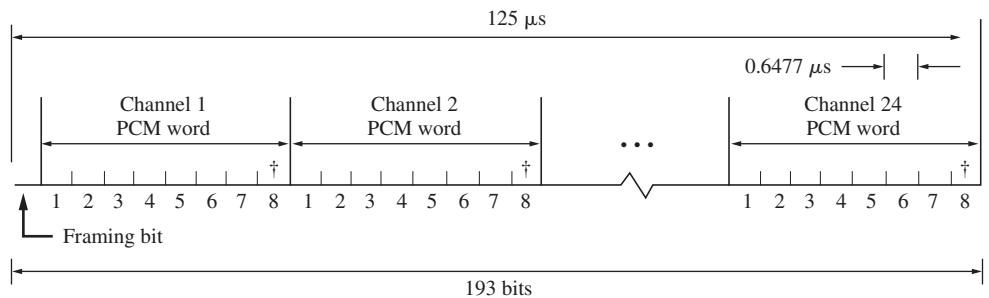

[†] On every sixth frame this VF PCM bit is replaced by a signaling bit for this channel.

Figure 3-42 T1 TDM format for one frame.

bandwidth is 1.544 MHz and the spectrum peaks at 772 kHz, as shown in Fig. 3–16d. If the channel filtering transfer function was of the raised cosine-rolloff type with $r = 1$, the absolute channel bandwidth would be 1.544 MHz. In the past, when twisted-pair lines were used for analog transmission only, *loading coils* (inductors) were used to improve the frequency (amplitude) response. However, they cause the line to have a phase response that is not linear with frequency, resulting in ISI. Thus, they must be removed when the line is used for T1 service.

The T1G carrier is described in Table 3–9. Instead of binary levels, it uses $M = 4$ (quaternary) multilevel polar NRZ signaling, where +3 V represents the two binary bits 11, +1 V represents 01, -1 V represents 00, and -3 V represents 10 [Azaret et al., 1985]. Thus, a data rate of 6.443 Mbits/s is achieved via 3.221-Mbaud signaling, giving a 3.221-MHz zero-crossing bandwidth, which is close to the 3.152-MHz zero-crossing bandwidth of the T1C system. This bandwidth can be supported by standard twisted-pair wires (one pair for each direction) with repeaters spaced at one-mile intervals.

Fiber-optic cable systems have phenomenal bandwidths and are relatively inexpensive on a per-channel basis. For example, the FT-2000 fiber-optic TDM system (see Tables 8–2 and 8–6) has a capacity of 32,256 VF channels, and the WaveStar system has a capacity of 6.25 million VF channels.

3–10 PACKET TRANSMISSION SYSTEM

TDM is a *synchronous transfer mode* (STM) technology. That is, a data source is assigned a specific time slot with a constant (fixed) data rate. In a number of applications, this fixed data rate assignment is not cost effective, since stuff bits are inserted to match the assigned data rate when the source does not have any data to send. For example, a user might send a large file (for which a large data rate is needed) and then type in some parameters (for which a low data rate is needed). This type of bursty data source is not efficiently accommodated by an STM system, but can be efficiently accommodated by a packet system.

A *packet transmission system* partitions the source data into data packets, each of which contains a destination address header. Many users share the high-speed channel by merging their packets into a high-speed data stream. Routers along the network read the header information on the packets and route the packet to the appropriate destination. To accommodate high-speed sources, more packets are sent from these sources over a given time interval, compared with only a few packets that are merged onto the network from low-speed sources.

A packet network efficiently assigns network resources when the sources have bursty data. However, there is network overhead caused by the transmission of the packet header information. STM networks are more efficient when the sources have a fixed data rate (i.e., when they are not bursty).

It is emphasized that *packet switched* transmission systems (such as the Internet, where internet protocol is used with IP numbers) are dominating transmission systems. This is especially true when compared with *circuit switched* transmission systems (such as TDM, as described in Sec. 3–9). The upcoming and cost-effective way to implement telephone systems is to use VoIP (Voice over the Internet with IP packets).

3-11 PULSE TIME MODULATION: PULSE WIDTH MODULATION AND PULSE POSITION MODULATION

Pulse time modulation (PTM) is a class of signaling techniques that encodes the sample values of an analog signal onto the *time axis* of a digital signal. PTM is analogous to angle modulation, which is described in Chapter 5. (As we have seen, PAM, PCM, and DM techniques encode the sample values into the amplitude characteristics of the digital signal.)

The two main types of PTM are *pulse width modulation* (PWM) and *pulse position modulation* (PPM). (See Fig. 3-43.) In PWM, which is also called *pulse duration modulation* (PDM), sample values of the analog waveform are used to determine the *width* of the pulse signal. Either *instantaneous* sampling or *natural* sampling can be used. Figure 3-44 shows a technique for generating PWM signals with instantaneous sampling, and Fig. 3-45 displays PWM with natural sampling. In PPM, the analog sample value determines the *position* of a narrow pulse relative to the clocking time. Techniques for generating PPM are also shown in the figures, and it is seen that PPM is easily obtained from PWM by using a monostable

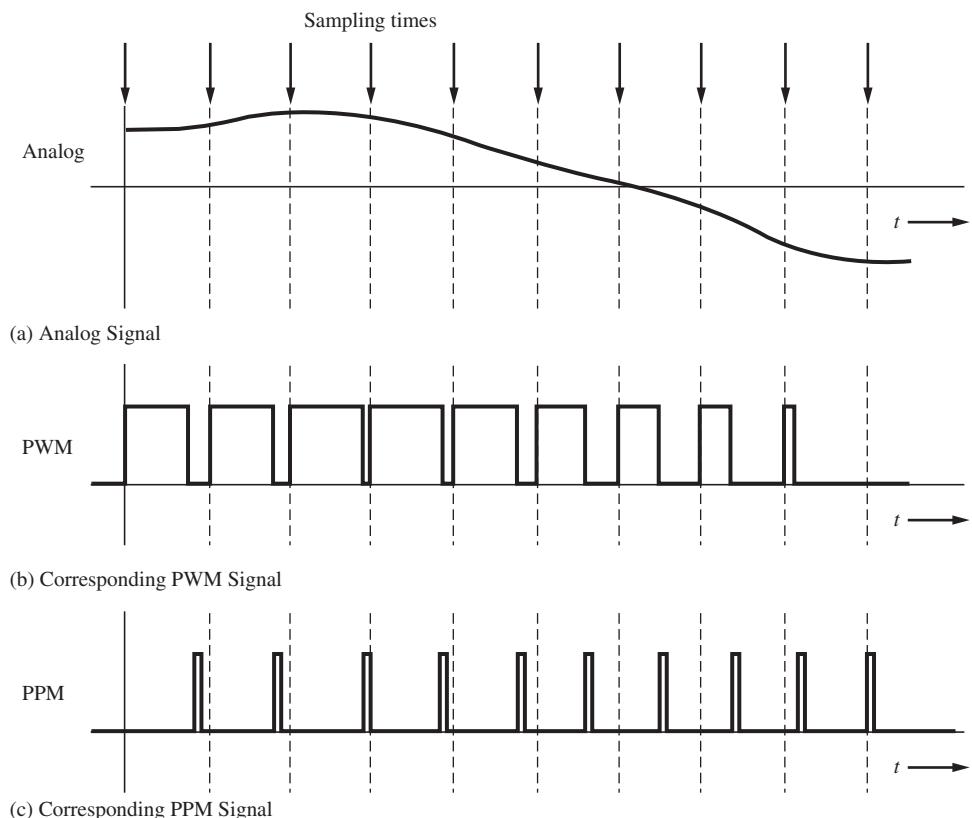


Figure 3-43 Pulse time modulation signaling.

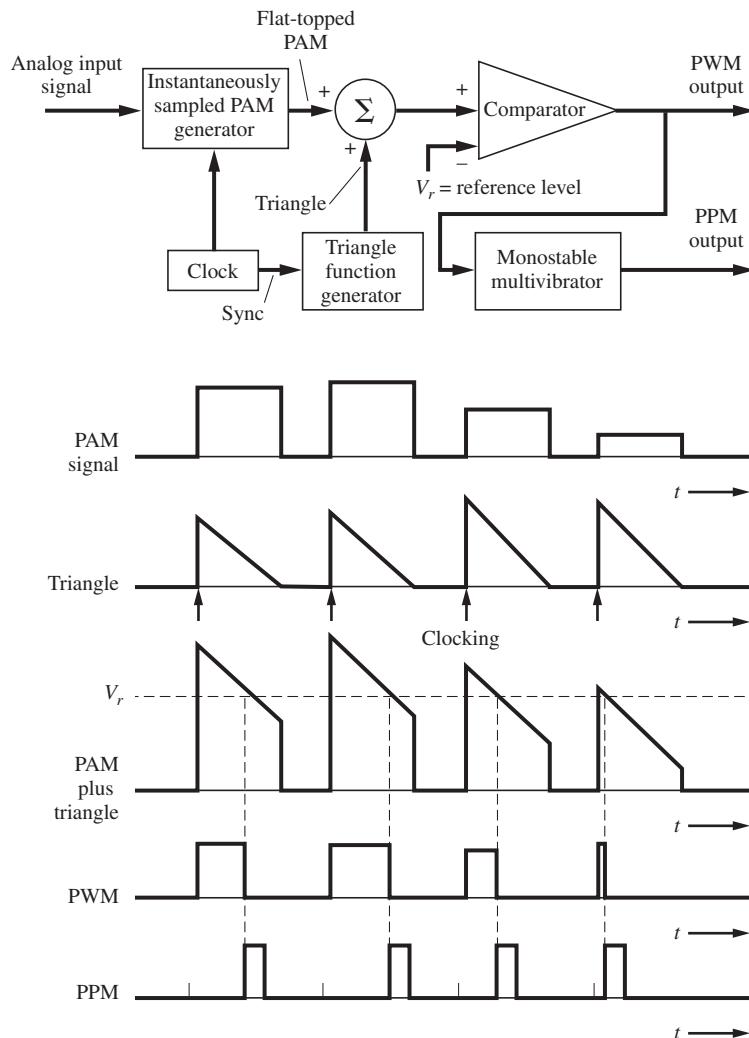


Figure 3-44 Technique for generating instantaneously sampled PTM signals.

multivibrator circuit. In the literature on PTM signals, the comparator level V_r is often called the *slicing level*.

PWM or PPM signals may be converted back to the corresponding analog signal by a receiving system (Fig. 3-46). For PWM detection, the PWM signal is used to start and stop the integration of an integrator; that is, the integrator is reset to zero, and integration is begun when the PWM pulse goes from a low level to a high level and the integrator integrates until the PWM pulse goes low. If the integrator input is connected to a constant voltage source, the output will

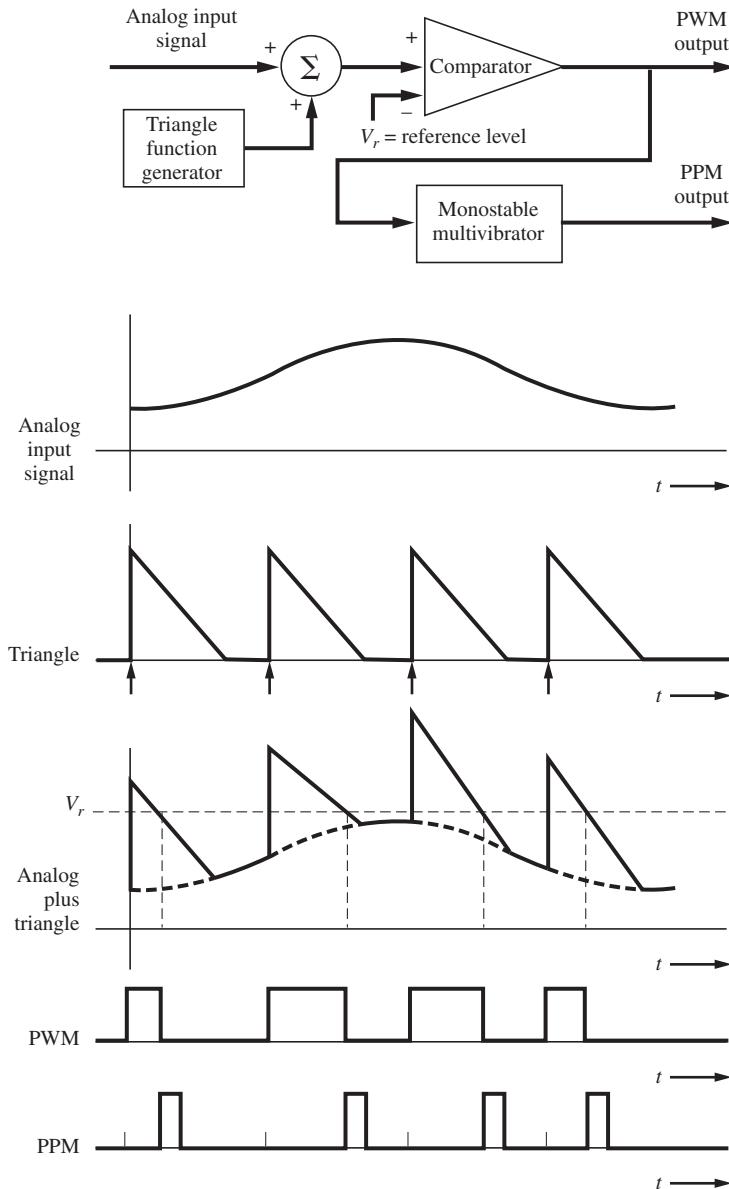


Figure 3-45 Technique for generating naturally sampled PTM signals.

be a truncated ramp. After the PWM signal goes low, the amplitude of the truncated ramp signal will be equal to the corresponding PAM sample value. At clocking time, the output of the integrator is gated to a PAM output line (slightly before the integrator is reset to zero), using a sample-and-hold circuit. The PAM signal is then converted to the analog signal by low-pass

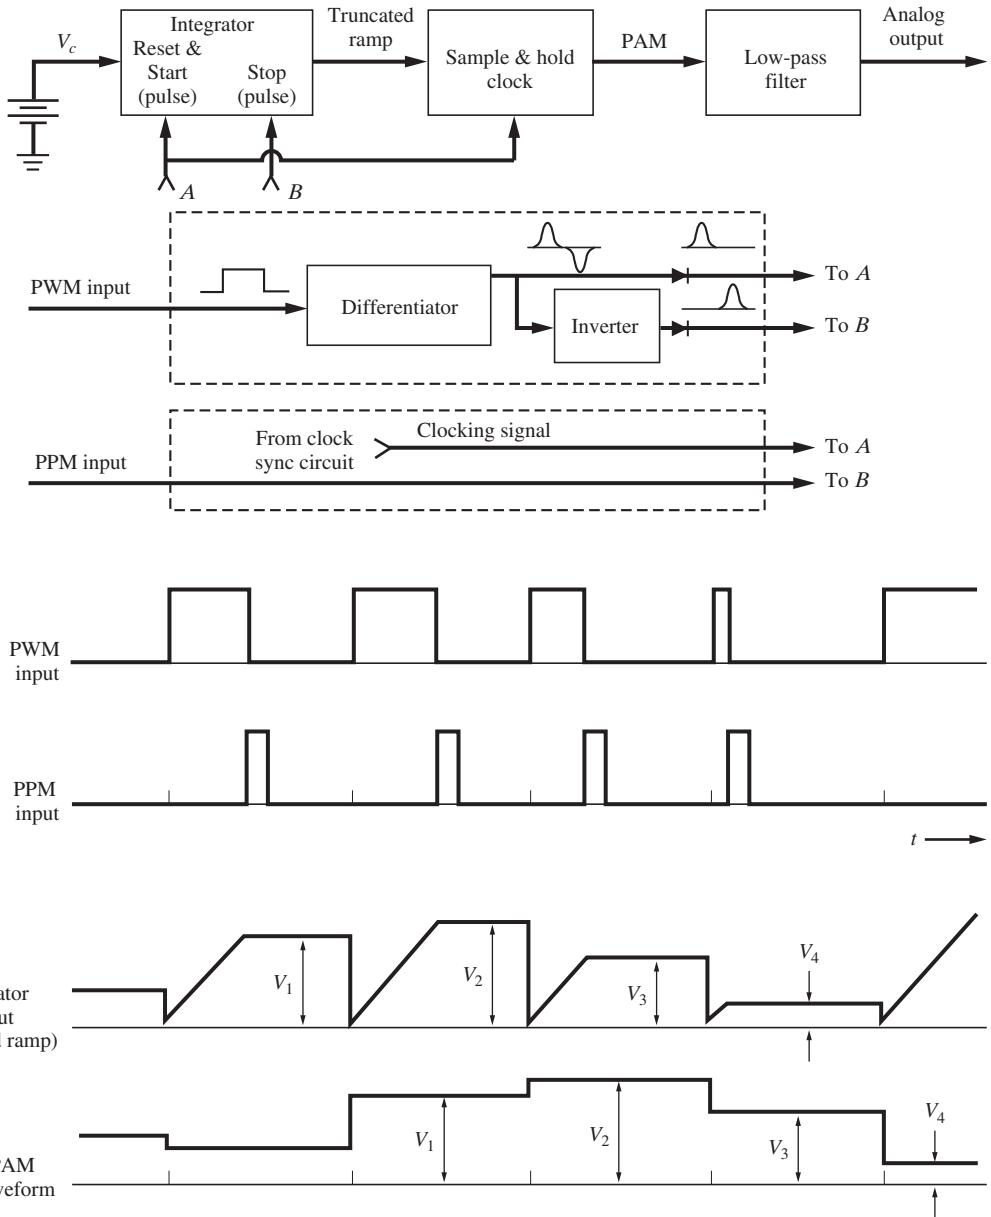


Figure 3-46 Detection of PWM and PPM signals.

filtering. In a similar way, PPM may be converted to PAM by using the clock pulse to reset the integrator to zero and start the integration. The PPM pulse is then used to stop the integration. The final value of the ramp is the PAM sample that is used to regenerate the analog signal.

Pulse time modulation signaling is not widely used to communicate across channels, because a relatively wide bandwidth channel is needed, especially for PPM. However, PTM signals may be found internally in digital communications terminal equipment. The spectra of PTM signals are quite difficult to evaluate because of the nonlinear nature of the modulation [Rowe, 1965]. The main advantage of PTM signals is that they have a great immunity to additive noise compared to PAM signaling, and they are easier to generate and detect than PCM, which requires ADCs.

3-12 SUMMARY

In this study of baseband digital signaling, we concentrated on four major topics: (1) how the information in analog waveforms can be represented by digital signaling, (2) how to compute the spectra for line codes, (3) how filtering of the digital signal, due to the communication channel, affects our ability to recover the digital information at the receiver [i.e., the intersymbol interference (ISI) problem], and (4) how we can merge the information from several sources into one digital signal by using time-division multiplexing (TDM). The United States and worldwide standards for TDM telecommunications systems were given.

PCM is an analog-to-digital conversion scheme that involves three basic operations: (1) *sampling* a bandlimited analog signal, (2) *quantizing* the analog samples into M discrete values and (3) *encoding* each sample value into an n -bit word where $M = 2^n$. There are two sources of noise in the signal that is recovered at the receiver output: (1) quantizing noise due to the approximation of the sample values using the M allowed values and (2) noise due to receiver bit detection errors caused by channel noise or by ISI that arises because of improper channel frequency response. If the original analog signal is not strictly bandlimited, there will be a third noise component on the receiver output due to aliasing.

In studying the effect of improper channel filtering in producing ISI, the raised cosine-rolloff Nyquist filter was examined. Here it was found that the minimum bandwidth required to pass a digital signal without ISI was equal to one-half of the baud rate. A channel bandwidth equal to the baud rate ($r = 1$) was found to be more realistic.

The channel bandwidth may be reduced if multilevel signal techniques are used (for a given data rate R).

This chapter has focused on *baseband* signaling. In the next chapter, we will be concerned with modulating baseband signals onto a carrier so that the spectrum will be concentrated about some desired frequency called the *carrier frequency*.

3-13 STUDY-AID EXAMPLES



SA3-1 PAM Signal Spectrum and Bandwidth An analog waveform, $w(t)$ is converted into a flat-topped PAM signal by using a sampling rate of 8 kHz and a pulse width of 100 μs . Assume that $W(f) = 2\Lambda (f/B)$, where $B = 3$ kHz.

- (a) Find and sketch the magnitude spectrum for the PAM signal.
 (b) Find a numerical value for the first null bandwidth of the PAM signal.

Solution.

- (a) Using $W(f) = 2\Lambda(f/B)$ in Eq. (3–10), MATLAB computes and plots the spectrum shown in Fig. 3–47. The plot shows how $W(f)$ is repeated at harmonics of the sampling frequency and weighted by the $\tau\left(\frac{\sin \pi \tau f}{\pi \tau f}\right)$ function (caused by the rectangular pulse shape).

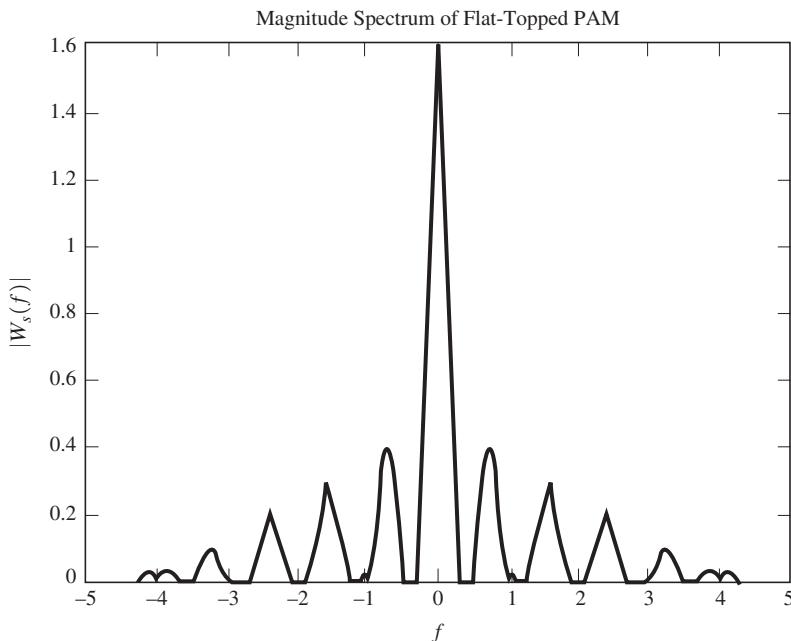


Figure 3–47 Solution for SA3-1. (See SA3_1.m.)

- (b) The spectrum first goes to zero at $B = 3$ kHz. For this spectrum, 3 kHz is not a good measure of bandwidth, because the spectral magnitude becomes large again at higher frequencies. In examples like this, engineers use the *envelope* of the spectrum to specify

the null bandwidth. Thus, the first null bandwidth of the spectral envelope, $\tau \left| \frac{\sin \pi \tau f}{\pi \tau f} \right|$, is $B_{\text{null}} = 1/\tau = 1/100 \mu\text{s} = 10 \text{ kHz}$.

SA3–2 PCM Signal Bandwidth and SNR In a communications-quality audio system, an analog voice-frequency (VF) signal with a bandwidth of 3,200 Hz is converted into a PCM signal by sampling at 7,000 samples/s and by using a uniform quantizer with 64 steps. The PCM binary data are transmitted over a noisy channel to a receiver that has a bit error rate (BER) of 10^{-4} .

- (a) What is the null bandwidth of the PCM signal if a polar line code is used?
 (b) What is the average SNR of the recovered analog signal at the receiving end?

Solution.

- (a) $M = 64$ quantizing steps generate 6-bit PCM words because $M = 2^n$. Using Eq. (3–15b), we find what the null bandwidth is

$$B_{\text{null}} = nf_s = 6(7,000) = 42 \text{ kHz}$$

Note: If $\sin x/x$ pulse shapes were used, the bandwidth would be

$$B_{\text{null}} = \frac{1}{2} nf_s = 21 \text{ kHz}$$

- (b) Using Eq. (3–16b) with $M = 64$ and $P_e = 10^{-4}$ yields

$$\left(\frac{S}{N}\right) = \frac{M^2}{1 + 4(M^2 - 1)P_e} = \frac{4,096}{1 + 1.64} = 1,552 = 31.9 \text{ dB}$$

(Note: The 1 in the denominator represents quantization noise, and the 1.64 represents noise in the recovered analog signal caused by bit errors at the receiver. In this example, both noise effects contribute almost equally. For the case of $M = 64$, if the BER was less than 10^{-5} , the quantizing noise would dominate, or if the BER was larger than 10^{-3} , noise resulting from receiver bit errors would dominate.)

SA3–3 Properties of NRZ Line Codes A unipolar NRZ line code is converted to a multilevel signal for transmission over a channel as illustrated in Fig. 3–13. The number of possible values in the multilevel signal is 32, and the signal consists of rectangular pulses that have a pulse width of 0.3472 ms. For the multilevel signal,

- (a) What is the baud rate?
 (b) What is the equivalent bit rate?
 (c) What is the null bandwidth?
 (d) Repeat (a) to (c) for the unipolar NRZ line code.

Solution.

- (a) Using Eq. (3–28) where $N = 1$ pulse occurs in $T_0 = 0.3452$ ms, we get

$$D = N/T_0 = 1/0.3472 \text{ ms} = 2,880 \text{ baud}$$

- (b) Because $L = 32 = 2^\ell$, $\ell = 5$. Using Eq. (3–34),

$$R = \ell D = 5(2880) = 14,400 \text{ bits/s}$$

- (c) Using Eq. (3–54), we find that the null bandwidth is

$$B_{\text{null}} = R/\ell = D = 2,880 \text{ Hz}$$

- (d) For the unipolar NRZ line code, there are $N = 5$ pulses in $T_0 = 0.3472$ ms, or

$$D = 5/0.3472 \text{ ms} = 14,400 \text{ baud}$$

$R = D$ because the unipolar NRZ line code is binary (i.e., $L = 2^\ell$; or $\ell = 1$). Thus, $R = 14,400$ bits/s. The null bandwidth is

$$B_{\text{null}} = R/\ell = D = 14,400 \text{ Hz}$$



SA3–4 Bandwidth of RS-232 Signals The RS-232 serial port on a personal computer is transmitting data at a rate of 38,400 bits/s using a polar NRZ line code. Assume that binary 1's and 0's are equally likely to occur. Compute and plot the PSD for this RS-232 signal. Use a dB scale with the PSD being normalized so that 0 dB occurs at the peak of the PSD plot. Discuss the bandwidth requirements for this signal.

Solution. Referring to Eq. (3–41), set $A^2 T_b$ equal to 1 so that 0 dB occurs at the peak. Then the PSD, in dB units, is

$$\mathcal{P}_{\text{dB}}(f) = 10 \log \left[\left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \right]$$

where $T_b = 1/R$ and $R = 38,400$ bits/s.

This result is plotted in Fig. 3–48 using a dB scale. The plot reveals that the spectrum is broad for this case of digital signaling with rectangular pulse shapes. Although the null bandwidth is 38,000 Hz ($B_{\text{null}} = R$), it gives a false sense that the spectrum is relatively narrow, because the first sidelobe peak (at $f = 57,600$ Hz = $1.5R$) is down by only 13.5 dB from the main lobe, and the second sidelobe

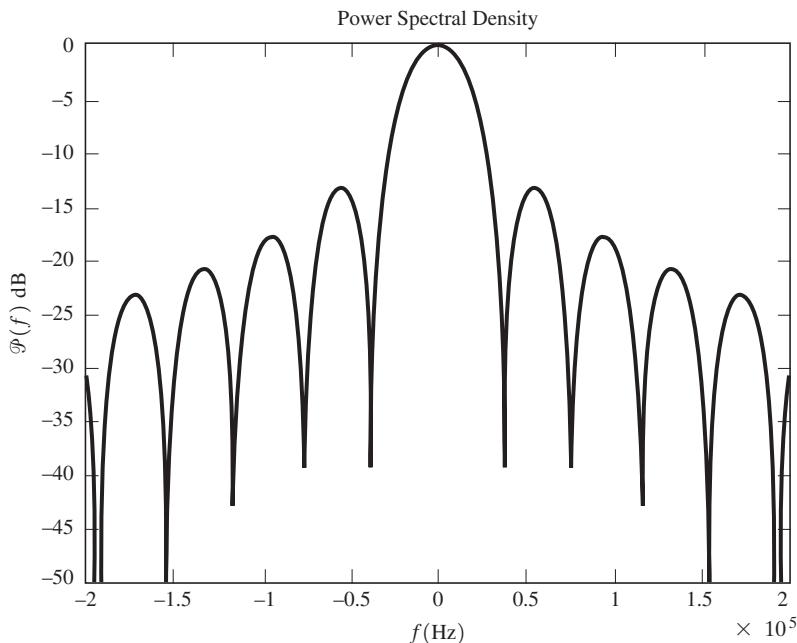


Figure 3–48 PSD of an RS-232 signal with a data rate of 38,400 bits/s. (See SA3_4.m.)

peak (at $f = 96,000$ Hz = $2.5R$) is down by only 17.9 dB. The power spectrum is falling off as $1/f^2$, which is only 6 dB per octave. Referring to Fig. 3–48 and knowing that the envelope of the PSD is described by $(1/\pi f T_b)^2$, we find that a bandwidth of $f = 386$ kHz = $10.1R$ (i.e., 10 times the data rate) is needed to pass the frequency components that are not attenuated by more than 30 dB. Thus, the spectrum is broad when rectangular sampling pulses are used. (This was first illustrated in Fig. 2–24.)

Consequently, for applications of digital signaling over bandlimited channels, some sort of filtered pulse shape is required to provide good out-of-band spectral attenuation and yet not introduce ISI. For example, from Eq. (3–74), a filtered pulse corresponding to an $r = 0.5$ raised cosine characteristic would have infinite attenuation at the frequency (absolute bandwidth) of $B = \frac{1}{2}(1+r)D = (0.5)(1.5)(38,400) = 28,800$ Hz = $0.75R$. Referring to Fig. 3–26a and using Eq. (3–69), we see that the $r = 0.5$ raised cosine spectrum would be down by 30 dB at $f = 20,070$ Hz = $0.523R$ and 100 dB at $f = 22,217$ Hz = $0.579R$. For the 30-dB-down bandwidth criterion, this is a bandwidth (savings) of 19 times smaller than that required for rectangular pulse signaling.

PROBLEMS

- 3–1** Demonstrate that the Fourier series coefficients for the switching waveform shown in Fig. 3–1b are given by Eq. (3–5b).
- 3–2** (a) Sketch the naturally sampled PAM waveform that results from sampling a 1-kHz sine wave at a 4-kHz rate.
 (b) Repeat part (a) for the case of a flat-topped PAM waveform.
- ★ 3–3** The spectrum of an analog audio signal is shown in Fig. P3–3. The waveform is to be sampled at a 10-kHz rate with a pulse width of $\tau = 50\ \mu s$.

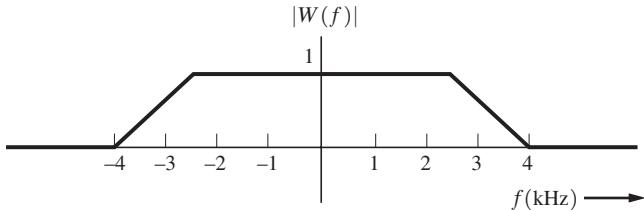


Figure P3–3

Find an expression for the spectrum of the naturally sampled PAM waveform. Sketch your result.



- ★ 3–4** Referring to Prob. 3–3, find an expression for the spectrum of the flat-topped PAM waveform. Sketch your result.
- 3–5** (a) Show that an analog output waveform (which is proportional to the original input analog waveform) may be recovered from a naturally sampled PAM waveform by using the demodulation technique shown in Fig. 3–4.
 (b) Find the constant of proportionality, C , that is obtained with this demodulation technique, where $w(t)$ is the original waveform and $Cw(t)$ is the recovered waveform. Note that C is a function of n , where the oscillator frequency is nf_s .
- 3–6** Figure 3–4 illustrates how a naturally sampled PAM signal can be demodulated to recover the analog waveform by the use of a product detector. Show that the product detector can also be used to recover $w(t)$ from an instantaneously sampled PAM signal, provided that the appropriate filter $H(f)$ is used. Find the required $H(f)$ characteristic.



- ★ 3-7** Assume that an analog signal with the spectrum shown in Fig. P3-3 is to be transmitted over a PAM system that has AC coupling. Thus, a PAM pulse shape of the Manchester type, as given by Eq. (3-46a), is used. The PAM sampling frequency is 10 kHz. Find the spectrum for the Manchester encoded flat-topped PAM waveform. Sketch your result.
- 3-8** In a binary PCM system, if the quantizing noise is not to exceed $\pm P$ percent of the peak-to-peak analog level, show that the number of bits in each PCM word needs to be

$$n \geq [\log_2 10] \left[\log_{10} \left(\frac{50}{P} \right) \right] = 3.32 \log_{10} \left(\frac{50}{P} \right)$$

(Hint: Look at Fig. 3-8c.)

- ★ 3-9** The information in an analog voltage waveform is to be transmitted over a PCM system with a $\pm 0.1\%$ accuracy (full scale). The analog waveform has an absolute bandwidth of 100 Hz and an amplitude range of -10 to +10 V.
- (a) Determine the minimum sampling rate needed.
 - (b) Determine the number of bits needed in each PCM word.
 - (c) Determine the minimum bit rate required in the PCM signal.
 - (d) Determine the minimum absolute channel bandwidth required for transmission of this PCM signal.
- 3-10** A 700-Mbyte CD is used to store PCM data. Suppose that a voice-frequency (VF) signal is sampled at 8 ksamples/s and the encoded PCM is to have an average SNR of at least 30 dB. How many minutes of VF conversation (i.e., PCM data) can be stored on the hard disk?
- 3-11** An analog signal with a bandwidth of 4.2 MHz is to be converted into binary PCM and transmitted over a channel. The peak-signal quantizing noise ratio at the receiver output must be at least 55 dB.
- (a) If we assume that $P_e = 0$ and that there is no ISI, what will be the word length and the number of quantizing steps needed?
 - (b) What will be the equivalent bit rate?
 - (c) What will be the channel null bandwidth required if rectangular pulse shapes are used?
- ★ 3-12** Compact disk (CD) players use 16-bit PCM, including one parity bit with 8 times oversampling of the analog signal. The analog signal bandwidth is 20 kHz.
- (a) What is the null bandwidth of this PCM signal?
 - (b) Using Eq. (3-18), find the peak (SNR) in decibels.
- 3-13** An audio CD is created by sampling analog stereo audio signals at a rate of 44.1 ksamples/s for each. Each sample is then encoded into a 16-bit word. What is the data rate of the resulting composite digital?
- 3-14** Given an audio signal with spectral components in the frequency band 300 to 3,000 Hz, assume that a sampling rate of 7 kHz will be used to generate a PCM signal. Design an appropriate PCM system as follows:
- (a) Draw a block diagram of the PCM system, including the transmitter, channel, and receiver.
 - (b) Specify the number of uniform quantization steps needed and the channel null bandwidth required, assuming that the peak signal-to-noise ratio at the receiver output needs to be at least 30 dB and that polar NRZ signaling is used.
 - (c) Discuss how nonuniform quantization can be used to improve the performance of the system.
- 3-15** The SNRs, as given by Eqs. (3-17a) and (3-17b), assume no ISI and no bit errors due to channel noise (i.e., $P_e = 0$). How large can P_e become before Eqs. (3-17a) and (3-17b) are in error by 0.1% if $M = 4, 8$, or 16.

- ★ 3-16** In a PCM system, the bit error rate due to channel noise is 10^{-4} . Assume that the peak signal-to-noise ratio on the recovered analog signal needs to be at least 30 dB.
- Find the minimum number of quantizing steps that can be used to encode the analog signal into a PCM signal.
 - If the original analog signal had an absolute bandwidth of 2.7 kHz, what is the null bandwidth of the PCM signal for the polar NRZ signaling case?
- 3-17** Referring to Fig. 3-20 for a bit synchronizer using a square-law device, draw some typical waveforms that will appear in the bit synchronizer if a Manchester encoded PCM signal is present at the input. Discuss whether you would expect this bit synchronizer to work better for the Manchester encoded PCM signal or for a polar NRZ encoded PCM signal.
- 3-18** (a) Sketch the complete $\mu = 10$ compressor characteristic that will handle input voltages over the range -5 to $+5$ V.
 (b) Plot the corresponding expandor characteristic.
 (c) Draw a 16-level nonuniform quantizer characteristic that corresponds to the $\mu = 10$ compression characteristic.
- 3-19** For a 4-bit PCM system, calculate and sketch a plot of the output SNR (in decibels) as a function of the relative input level, $20 \log(x_{\text{rms}}/V)$ for
- A PCM system that uses $\mu = 10$ law companding.
 - A PCM system that uses uniform quantization (no companding).
 - Which of these systems is better to use in practice? Why?
- 
- ★ 3-20** The performance of a $\mu = 255$ law companded PCM system is to be examined when the input consists of a sine wave having a peak value of V volts. Assume that $M = 256$.
- Find an expression that describes the output SNR for this companded PCM system.
 - Plot $(S/N)_{\text{out}}$ (in decibels) as a function of the relative input level, $20 \log(x_{\text{rms}}/V)$. Compare this result with that shown in Fig. 3-10.
- 3-21** A multilevel digital communication system sends one of 16 possible levels over the channel every 0.8 ms.
- What is the number of bits corresponding to each level?
 - What is the baud rate?
 - What is the bit rate?
- 3-22** In the United States, HDTV stations transmit on-the-air eight-level RF (radio frequency) signals (see Sec. 8-9). If the baud (symbol) rate for these signals is 10.76 Msymbols/s, calculate the effective bit rate for these transmitted signals.
- 3-23** A multilevel digital communication system is to operate at a data rate of 1.5 Mb/s.
- If 4-bit words are encoded into each level for transmission over the channel, what is the minimum required bandwidth for the channel?
 - Repeat part (a) for the case of 8-bit encoding into each level.
- ★ 3-24** Consider a deterministic test pattern consisting of alternating binary 1's and binary 0's. Determine the magnitude spectra (not the PSD) for unipolar NRZ signaling as a function of T_b , the time needed to send one bit of data. How would the magnitude spectra change if the test pattern was changed to an alternating sequence of four 1's followed by four binary 0's?
- ★ 3-25** Rework Prob. 3-24 for the case of unipolar RZ signaling where the pulse width is $\tau = \frac{3}{4} T_b$.
- 3-26** Consider a random data pattern consisting of binary 1's and 0's, where the probability of obtaining either a binary 1 or a binary 0 is $\frac{1}{2}$. Calculate the PSD for unipolar NRZ signaling as a function of T_b , the time needed to send one bit of data.

How does the PSD for this random data case compare with the magnitude spectrum for the deterministic case of Prob. 3–24? What is the spectral efficiency?

- 3–27** Rework Prob. 3–26 for the case of unipolar RZ signaling where the pulse width is $\tau = \frac{3}{4} T_b$. Compare this magnitude spectrum with PSD of Prob. 3–25. What is the spectral efficiency?

- 3–28** Consider a deterministic data pattern consisting of alternating binary 1's and 0's. Determine the magnitude spectra (not the PSD) for the following types of signaling formats as a function of T_b , the time needed to send one bit of data:

- (a) Polar NRZ signaling.
- (b) Manchester NRZ signaling.

How would each of these magnitude spectra change if the test pattern was changed to an alternating sequence of four binary 1's followed by two binary 0's?

- ★ 3–29** Consider a random data pattern consisting of binary 1's and 0's, where the probability of obtaining either a binary 1 or a binary 0 is $\frac{1}{2}$. Calculate the PSD for the following types of signaling formats as a function of T_b , the time needed to send 1 bit of data:

- (a) Polar RZ signaling where the pulse width is $\tau = \frac{1}{2} T_b$.
- (b) Manchester RZ signaling where the pulse width is $\tau = \frac{1}{4} T_b$. What is the first null bandwidth of these signals? What is the spectral efficiency for each of these signaling cases?



- 3–30** Obtain the equations for the PSD of the bipolar NRZ and bipolar RZ (pulse width $\frac{1}{2}$ Tb) line codes assuming peak values of ± 3 V. Plot these PSD results for the case of $R = 1.544$ Mbits/s.



- ★ 3–31** In Fig. 3–16, the PSDs for several line codes are shown. These PSDs were derived assuming unity power for each signal so that the PSDs could be compared on an equal transmission power basis. Rederive the PSDs for these line codes, assuming that the peak level is unity (i.e., $A = 1$). Plot the PSDs so that the spectra can be compared on an equal peak-signal-level basis.

- 3–32** Using Eq. (3–36), determine the conditions required so that there are delta functions in the PSD for line codes. Discuss how this affects the design of bit synchronizers for these line codes. [Hint: Examine Eq. (3–43) and (6–70d).]

- 3–33** Consider a random data pattern consisting of binary 1's and 0's, where the probability of obtaining either a binary 1 or a binary 0 is $\frac{1}{2}$. Assume that these data are encoded into a polar-type waveform such that the pulse shape of each bit is given by

$$f(t) = \begin{cases} \cos\left(\frac{\pi t}{T_b}\right), & |t| < T_b/2 \\ 0, & |t| \text{ elsewhere} \end{cases}$$

where T_b is the time needed to send one bit.

- (a) Sketch a typical example of this waveform.
- (b) Find the expression for the PSD of this waveform and sketch it.
- (c) What is the spectral efficiency of this type of binary signal?

- 3–34** The data stream 01101000101 appears at the input of a differential encoder. Depending on the initial start-up condition of the encoder, find two possible differentially encoded data streams that can appear at the output.

- 3–35** Create a practical block diagram for a differential encoding and decoding system. Explain how the system works by showing the encoding and decoding for the sequence 001111010001. Assume that the reference digit is a binary 1. Show that error propagation cannot occur.

- 3–36** Design a regenerative repeater with its associated bit synchronizer for a polar RZ line code. Explain how your design works. (Hint: See Fig. 3–19 and the discussion of bit synchronizers.)

- 3–37** Design a bit synchronizer for a Manchester NRZ line code by completing the following steps:
- Give a simplified block diagram.
 - Explain how the synchronizer works.
 - Specify the synchronizer's filter requirements.
 - Explain the advantages and disadvantages of using this design for the Manchester NRZ line code compared with using a polar NRZ line code and its associated bit synchronizer.
- 3–38** Figure 3–22c illustrates an eight-level multilevel signal. Assume that this line code is passed through a channel that filters the signal and adds some noise.
- Draw a picture of the eye pattern for the received waveform.
 - Design a possible receiver with its associated symbol synchronizer for this line code.
 - Explain how your receiver works.
- ★ 3–39** The information in an analog waveform is first encoded into binary PCM and then converted to a multilevel signal for transmission over the channel. The number of multilevels is eight. Assume that the analog signal has a bandwidth of 2,700 Hz and is to be reproduced at the receiver output with an accuracy of $\pm 1\%$ (full scale).
- Determine the minimum bit rate of the PCM signal.
 - Determine the minimum baud rate of the multilevel signal.
 - Determine the minimum absolute channel bandwidth required for transmission of this PCM signal.
- ★ 3–40** A binary waveform of 9,600 bits/s is converted into an octal (multilevel) waveform that is passed through a channel with a raised cosine-rolloff Nyquist filter characteristic. The channel has a conditioned (equalized) phase response out to 2.4 kHz.
- What is the baud rate of the multilevel signal?
 - What is the rolloff factor of the filter characteristic?
- 3–41** Assume that the spectral properties of an $L = 64$ -level waveform with rectangular RZ-type pulse shapes are to be examined. The pulse shape is given by

$$f(t) = \Pi\left(\frac{2t}{T_s}\right)$$

where T_s is the time needed to send one of the multilevel symbols.

- Determine the expression for the PSD for the case of equally likely levels where the peak signal levels for this multilevel waveform are +10 V.
- What is the null bandwidth?
- What is the spectral efficiency?



- 3–42** A binary communication system uses polar signaling. The overall impulse response is designed to be of the $(\sin x)/x$ type, as given by Eq. (3–67), so that there will be no ISI. The bit rate is $R = f_s = 300$ bits/s.
- What is the bandwidth of the polar signal?
 - Plot the waveform of the polar signal at the system output when the input binary data is 01100101. Can you discern the data by looking at this polar waveform?



- ★ 3–43** Equation (3–67) gives one possible noncausal impulse response for a communication system that will have no ISI. For a causal approximation, select

$$h_c(t) = \frac{\sin \pi f_s(t - 4 \times 10^{-3})}{\pi f_s(t - 4 \times 10^{-3})} \Pi\left(\frac{t - 4 \times 10^{-3}}{8 \times 10^{-3}}\right)$$

where $f_s = 1,000$.

- (a) Using a PC, calculate $H_e(f)$ by the use of the Fourier transform integral, and plot $|H_e(f)|$.
 (b) What is the bandwidth of this causal approximation, and how does it compare with the bandwidth of the noncausal filter described by Eqs. (3–67) and (3–68)?
- 3–44** Starting with Eq. (3–69), prove that the impulse response of the raised cosine-rolloff filter is given by Eq. (3–73).
-  **3–45** Consider the raised cosine-rolloff Nyquist filter given by Eqs. (3–69) and (3–73).
 (a) Plot $|H_e(f)|$ for the case of $r = 0.75$, indicating f_1, f_0 , and B on your sketch in a manner similar to Fig. 3–25.
 (b) Plot $h_e(t)$ for the case of $r = 0.75$ in terms of $1/f_0$. Your plot should be similar to Fig. 3–26.
- 3–46** Find the PSD of the waveform out of an $r = 0.5$ raised cosine-rolloff channel when the input is a polar NRZ signal. Assume that equally likely binary signaling is used and the channel bandwidth is just large enough to prevent ISI.
- ★ 3–47** Equation (3–66) gives the condition for the absence of ISI (Nyquist's first method). Using that equation with $C = 1$ and $\tau = 0$, show that Nyquist's first method for eliminating ISI is also satisfied if
- $$\sum_{k=-\infty}^{\infty} H_e\left(f + \frac{k}{T_s}\right) = T_s \quad \text{for } |f| \leq \frac{1}{2T_s}$$
- 3–48** Using the results of Prob. 3–47, demonstrate that the following filter characteristics do or do not satisfy Nyquist's criterion for eliminating ISI ($f_s = 2f_0 = 2/T_0$).
 (a) $H_e(f) = \frac{T_0}{2} \Pi\left(\frac{1}{2} f T_0\right)$.
 (b) $H_e(f) = \frac{T_0}{2} \Pi\left(\frac{2}{3} f T_0\right)$.
- 3–49** Assume that a pulse transmission system has the overall raised cosine-rolloff Nyquist filter characteristic described by Eq. (3–69).
 (a) Find the $Y(f)$ Nyquist function of Eq. (3–75) corresponding to the raised cosine-rolloff Nyquist filter characteristic.
 (b) Sketch $Y(f)$ for the case of $r = 0.75$.
 (c) Sketch another $Y(f)$ that is not of the raised cosine-rolloff type, and determine the absolute bandwidth of the resulting Nyquist filter characteristic.
- ★ 3–50** An analog signal is to be converted into a PCM signal that is a binary polar NRZ line code. The signal is transmitted over a channel that is absolutely bandlimited to 4 kHz. Assume that the PCM quantizer has 16 steps and that the overall equivalent system transfer function is of the raised cosine-rolloff type with $r = 0.5$.
 (a) Find the maximum PCM bit rate that can be supported by this system without introducing ISI.
 (b) Find the maximum bandwidth that can be permitted for the analog signal.
- 3–51** Rework Prob. 3–50 for the case of a multilevel polar NRZ line code when the number of levels is four.
- ★ 3–52** Multilevel data with an equivalent bit rate of 2,400 bits/s is sent over a channel using a four-level line code that has a rectangular pulse shape at the output of the transmitter. The overall transmission system (i.e., the transmitter, channel, and receiver) has an $r = 0.5$ raised cosine-rolloff Nyquist filter characteristic.
 (a) Find the baud rate of the received signal.
 (b) Find the 6-dB bandwidth for this transmission system.
 (c) Find the absolute bandwidth for the system.

- 3–53** Assume that a PCM-type system is to be designed such that an audio signal can be delivered at the receiver output. This audio signal is to have a bandwidth of 3,400 Hz and an SNR of at least 40 dB. Determine the bit rate requirements for a design that uses $\mu = 255$ companded PCM signaling.
- 3–54** Rework Prob. 3–53 for the case of DPCM signaling.
Discuss which of the preceding systems of Prob. 3–53 and Prob. 3–54 would be used in your design and why.
- 3–55** Refer to Fig. 3–32, which shows typical DM waveforms. Draw an analog waveform that is different from the one shown in the figure. Draw the corresponding DM and integrator output waveforms. Denote the regions where slope overload noise dominates and where granular noise dominates.
- 3–56** A DM system is tested with a 10-kHz sinusoidal signal, 1 V peak to peak, at the input. The signal is sampled at 10 times the Nyquist rate.
 - What is the step size required to prevent slope overload and to minimize granular noise?
 - What is the PSD for the granular noise?
 - If the receiver input is bandlimited to 200 kHz, what is the average signal–quantizing noise power ratio?
- 3–57** Assume that the input to a DM is $0.1t^8 - 5t + 2$. The step size of the DM is 1 V, and the sampler operates at 10 samples/s. Sketch the input waveform, the delta modulator output, and the integrator output over a time interval of 0 to 2 s. Denote the granular noise and slope overload regions.
- 3–58** Rework Prob. 3–57 for the case of an adaptive delta modulator where the step size is selected according to the number of successive binary 1's or 0's on the DM output. Assume that the step size is 1.5 V when there are four or more binary digits of the same sign, 1 V for the case of three successive digits, and 0.5 V for the case of two or fewer successive digits.
- ★ 3–59** A delta modulator is to be designed to transmit the information of an analog waveform that has a peak-to-peak level of 1 V and a bandwidth of 3.4 kHz. Assume that the waveform is to be transmitted over a channel whose frequency response is extremely poor above 1 MHz.
 - Select the appropriate step size and sampling rate for a sine-wave test signal, and discuss the performance of the system, using the parameter values you have selected.
 - If the DM system is to be used to transmit the information of a voice (analog) signal, select the appropriate step size when the sampling rate is 25 kHz. Discuss the performance of the system under these conditions.
- 3–60** One analog waveform $w_1(t)$ is bandlimited to 3 kHz, and another, $w_2(t)$, is bandlimited to 9 kHz. These two signals are to be sent by TDM over a PAM-type system.
 - Determine the minimum sampling frequency for each signal, and design a TDM commutator and decommutator to accommodate the signals.
 - Draw some typical waveforms for $w_1(t)$ and $w_2(t)$, and sketch the corresponding TDM PAM waveform.
-  **★ 3–61** Three waveforms are time-division multiplexed over a channel using instantaneously sampled PAM. Assume that the PAM pulse width is very narrow and that each of the analog waveforms is sampled every 0.15 s. Plot the (composite) TDM waveform when the input analog waveforms are

$$w_1(t) = 3 \sin(2\pi t)$$


$$w_2(t) = \Pi\left(\frac{t - 1}{2}\right)$$

and

$$w_3(t) = -\Lambda(t - 1)$$

- 3-62** Twenty-three analog signals, each with a bandwidth of 3.4 kHz, are sampled at an 8-kHz rate and multiplexed together with a synchronization channel (8 kHz) into a TDM PAM signal. This TDM signal is passed through a channel with an overall raised cosine-rolloff Nyquist filter characteristic of $r = 0.75$.
- (a) Draw a block diagram for the system, indicating the f_s of the commutator and the overall pulse rate of the TDM PAM signal.
 - (b) Evaluate the absolute bandwidth required for the channel.
- ★ 3-63** Two flat-topped PAM signals are time-division multiplexed together to produce a composite TDM PAM signal that is transmitted over a channel. The first PAM signal is obtained from an analog signal that has a rectangular spectrum, $W_1(f) = \Pi(f/2B)$. The second PAM signal is obtained from an analog signal that has a triangular spectrum $W_2(f) = \Lambda(f/B)$, where $B = 3$ kHz.
- (a) Determine the minimum sampling frequency for each signal, and design a TDM commutator and decommutator to accommodate these signals.
 - (b) Calculate and sketch the magnitude spectrum for the composite TDM PAM signal.
- 3-64** Rework Prob. 3-62 for a TDM pulse code modulation system in which an 8-bit quantizer is used to generate the PCM words for each of the analog inputs and an 8-bit synchronization word is used in the synchronization channel.
- 3-65** Design a TDM PCM system that will accommodate four 300-bit/s (synchronous) digital inputs and one analog input that has a bandwidth of 500 Hz. Assume that the analog samples will be encoded into 4-bit PCM words. Draw a block diagram for your design, analogous to Fig. 3-39, indicating the data rates at the various points on the diagram. Explain how your design works.
- ★ 3-66** Design a TDM system that will accommodate two 2,400-bit/s synchronous digital inputs and an analog input that has a bandwidth of 2,700 Hz. Assume that the analog input is sampled at 1.11111 times the Nyquist rate and converted into 4-bit PCM words. Draw a block diagram for your design, and indicate the data rate at various points on your diagram. Explain how your TDM scheme works.
- 3-67** Find the number of the following devices that could be accommodated by a T1-type TDM line if 1% of the line capacity were reserved for synchronization purposes.
- (a) 110-bit/s teleprinter terminals.
 - (b) 8,000-bit/s speech codecs.
 - (c) 9,600-bit/s computer output ports.
 - (d) 64-kbit/s PCM VF lines.
 - (e) 144-kbit/s ISDN terminals.
- How would these numbers change if each of the sources was operational an average of 10% of the time?
- 3-68** Assume that a sine wave is sampled at four times the Nyquist rate using instantaneous sampling.
- (a) Sketch the corresponding PWM signal.
 - (b) Sketch the corresponding PPM signal.
- 3-69** Discuss why a PPM system requires a synchronizing signal, whereas PAM and PWM can be detected without the need for a synchronizing signal.

- ★ 3–70 Compare the bandwidth required to send a message by using PPM and PCM signaling. Assume that the digital source sends out 8 bits/character, so that it can send 256 different messages (characters). Assume that the source rate is 10 characters/s. Use the dimensionality theorem, $N/T_0 = 2B$, to determine the minimum bandwidth B required.
- (a) Determine the minimum bandwidth required for a PCM signal that will encode the source information.
- (b) Determine the minimum bandwidth required for a PPM signal that will encode the source information.

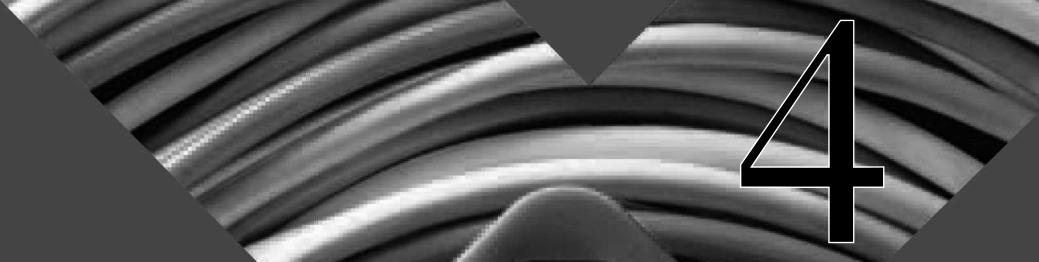

BANDPASS SIGNALING PRINCIPLES AND CIRCUITS

CHAPTER OBJECTIVES

- Complex envelopes and modulated signals
- Spectra of bandpass signals
- Nonlinear distortion
- Communication circuits (mixers, phase-locked loops, frequency synthesizers, and detectors)
- Transmitters and receivers
- Software radios

This chapter is concerned with *bandpass* signaling techniques. As indicated in Chapter 1, the bandpass communication signal is obtained by modulating a baseband analog or digital signal onto a carrier. This is an exciting chapter because the basic principles of bandpass signaling are revealed. The complex envelope is used, since it can represent any type of bandpass signal. This is the basis for understanding digital and analog communication systems that are described in more detail in Chapters 5 and 8. This chapter also describes practical aspects of the building blocks used in communication systems. These building blocks are filters, linear and nonlinear amplifiers, mixers, up and down converters, modulators, detectors, and phase-locked loops. The chapter concludes with descriptions of transmitters, receivers, and software radios.

4-1 COMPLEX ENVELOPE REPRESENTATION OF BANDPASS WAVEFORMS

What is a general representation for bandpass digital and analog signals? How do we represent a modulated signal? How do we represent bandpass noise? These are some of the questions that are answered in this section.

Definitions: Baseband, Bandpass, and Modulation

DEFINITION. A *baseband* waveform has a spectral magnitude that is nonzero for frequencies in the vicinity of the origin (i.e., $f = 0$) and negligible elsewhere.

DEFINITION. A *bandpass* waveform has a spectral magnitude that is nonzero for frequencies in some band concentrated about a frequency $f = \pm f_c$, where $f_c \gg 0$. The spectral magnitude is negligible elsewhere. f_c is called the *carrier frequency*.

For bandpass waveforms, the value of f_c may be arbitrarily assigned for mathematical convenience in *some* problems. In others, namely, modulation problems, f_c is the frequency of an oscillatory signal in the transmitter circuit and is the assigned frequency of the transmitter, such as, for example, 850 kHz for an AM broadcasting station.

In communication problems, the information source signal is usually a baseband signal—for example, a transistor-transistor logic (TTL) waveform from a digital circuit or an audio (analog) signal from a microphone. The communication engineer has the job of building a system that will transfer the information in the source signal $m(t)$ to the desired destination. As shown in Fig. 4–1, this usually requires the use of a bandpass signal, $s(t)$, which has a bandpass spectrum that is concentrated at $\pm f_c$, where f_c is selected so that $s(t)$ will propagate across the communication channel (either a wire or a wireless channel).

DEFINITION. *Modulation* is the process of imparting the source information onto a bandpass signal with a carrier frequency f_c by the introduction of amplitude or phase perturbations or both. This bandpass signal is called the *modulated* signal $s(t)$, and the baseband source signal is called the *modulating* signal $m(t)$.

Examples of exactly how modulation is accomplished are given later in this chapter. This definition indicates that modulation may be visualized as a mapping operation that maps the source information onto the bandpass signal, $s(t)$. The bandpass signal will be transmitted over the channel.

As the modulated signal passes through the channel, noise corrupts it. The result is a bandpass signal-plus-noise waveform that is available at the receiver input, $r(t)$. (See Fig. 4–1.) The receiver has the job of trying to recover the information that was sent from the source; \tilde{m} denotes the corrupted version of m .

Complex Envelope Representation

All *bandpass* waveforms, whether they arise from a modulated signal, interfering signals, or noise, may be represented in a convenient form given by the theorem that follows. $v(t)$ will be used to denote the bandpass waveform canonically; specifically, $v(t)$ can represent the signal

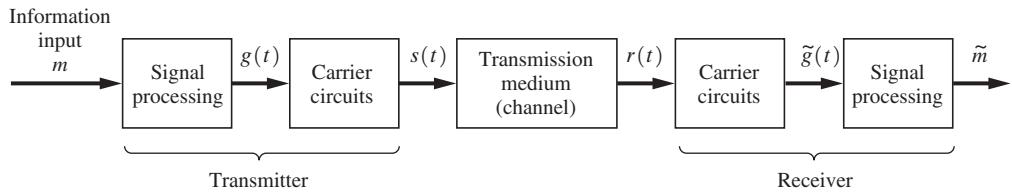


Figure 4–1 Communication system.

when $s(t) \equiv v(t)$, the noise when $n(t) \equiv v(t)$, the filtered signal plus noise at the channel output when $r(t) \equiv v(t)$, or any other type of bandpass waveform.[†]

THEOREM. Any physical bandpass waveform can be represented by

$$v(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} \quad (4-1a)$$

Here, $\operatorname{Re}\{\cdot\}$ denotes the real part of $\{\cdot\}$, $g(t)$ is called the complex envelope of $v(t)$, and f_c is the associated carrier frequency (in hertz) where $\omega_c = 2\pi f_c$. Furthermore, two other equivalent representations are

$$v(t) = R(t) \cos[\omega_c t + \theta(t)] \quad (4-1b)$$

and

$$v(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t \quad (4-1c)$$

where

$$g(t) = x(t) + jy(t) = |g(t)|e^{j\theta(t)} \equiv R(t)e^{j\theta(t)} \quad (4-2)$$

$$x(t) = \operatorname{Re}\{g(t)\} \equiv R(t) \cos \theta(t) \quad (4-3a)$$

$$y(t) = \operatorname{Im}\{g(t)\} \equiv R(t) \sin \theta(t) \quad (4-3b)$$

$$R(t) \triangleq |g(t)| \equiv \sqrt{x^2(t) + y^2(t)} \quad (4-4a)$$

and

$$\theta(t) \triangleq \underline{\operatorname{arg}}(t) = \tan^{-1}\left(\frac{y(t)}{x(t)}\right) \quad (4-4b)$$

Proof. Any physical waveform (it does not have to be periodic) may be represented over all time, $T_0 \rightarrow \infty$, by the complex Fourier series:

$$v(t) = \sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_0 t}, \quad \omega_0 = 2\pi/T_0 \quad (4-5)$$

Furthermore, because the physical waveform is real, $c_{-n} = c_n^*$, and, using $\operatorname{Re}\{\cdot\} = \frac{1}{2}\{\cdot\} + \frac{1}{2}\{\cdot\}^*$, we obtain

$$v(t) = \operatorname{Re}\left\{c_0 + 2 \sum_{n=1}^{\infty} c_n e^{jn\omega_0 t}\right\} \quad (4-6)$$

Furthermore, because $v(t)$ is a bandpass waveform, the c_n have negligible magnitudes for n in the vicinity of 0 and, in particular, $c_0 = 0$. Thus, with the introduction of an arbitrary parameter f_c , Eq. (4-6) becomes[‡]

[†] The symbol \equiv denotes an equivalence, and the symbol \triangleq denotes a definition.

[‡] Because the frequencies involved in the argument of $\operatorname{Re}\{\cdot\}$ are all positive, it can be shown that the complex function $2 \sum_{n=1}^{\infty} c_n e^{jn\omega_0 t}$ is analytic in the upper-half complex t plane. Many interesting properties result because this function is an analytic function of a complex variable.

$$v(t) = \operatorname{Re} \left\{ \left(2 \sum_{n=1}^{n=\infty} c_n e^{j(n\omega_0 - \omega_c)t} \right) e^{j\omega_c t} \right\} \quad (4-7)$$

so that Eq. (4-1a) follows, where

$$g(t) \equiv 2 \sum_{n=1}^{\infty} c_n e^{j(n\omega_0 - \omega_c)t} \quad (4-8)$$

Because $v(t)$ is a bandpass waveform with nonzero spectrum concentrated near $f=f_c$, the Fourier coefficients c_n are nonzero only for values of n in the range $\pm n f_0 \approx f_c$. Therefore, from Eq. (4-8), $g(t)$ has a spectrum that is concentrated near $f=0$. That is, $g(t)$ is a *baseband* waveform.

The waveforms $g(t)$, (and consequently) $x(t)$, $y(t)$, $R(t)$, and $\theta(t)$ are all baseband waveforms, and, except for $g(t)$, they are all real waveforms. $R(t)$ is a nonnegative real waveform. Equation (4-1) is a low-pass-to-bandpass transformation. The $e^{j\omega_c t}$ factor in Eq. (4-1a) shifts (i.e., translates) the spectrum of the baseband signal $g(t)$ from baseband up to the carrier frequency f_c . In communications terminology, the frequencies in the baseband signal $g(t)$ are said to be *heterodyned* up to f_c . The complex envelope, $g(t)$, is usually a complex function of time, and it is the generalization of the phasor concept. That is, if $g(t)$ happens to be a complex constant, then $v(t)$ is a pure sinusoidal waveshape of frequency f_c , and this complex constant is the phasor representing the sinusoid. If $g(t)$ is not a constant, then $v(t)$ is not a pure sinusoid, because the amplitude and phase of $v(t)$ vary with time, caused by the variations in $g(t)$.

Representing the complex envelope in terms of two real functions in Cartesian coordinates, we have

$$g(x) \equiv x(t) + jy(t)$$

where $x(t) = \operatorname{Re}\{g(t)\}$ and $y(t) = \operatorname{Im}\{g(t)\}$. $x(t)$ is said to be the *in-phase modulation* associated with $v(t)$, and $y(t)$ is said to be the *quadrature modulation* associated with $v(t)$. Alternatively, the polar form of $g(t)$, represented by $R(t)$ and $\theta(t)$, is given by Eq. (4-2), where the identities between Cartesian and polar coordinates are given by Eqs. (4-3) and (4-4). $R(t)$ and $\theta(t)$ are real waveforms, and in addition, $R(t)$ is always nonnegative. $R(t)$ is said to be the *amplitude modulation* (AM) on $v(t)$, $\theta(t)$ is said to be the *phase modulation* (PM) on $v(t)$.

Example 4-1 IN-PHASE AND QUADRATURE MODULATED SIGNALING

Let $x(t) = \cos(2\pi t)$ and $y(t)$ be a rectangular pulse described by

$$y(t) = \begin{cases} 0, & t < 1 \\ 1, & 1 \leq t \leq 2 \\ 0, & t > 2 \end{cases}$$

Using Eq. (4-1a), plot the resulting modulated signal over the time interval $0 < t < 4$ sec. Assume that the carrier frequency is 10 Hz. See Example4_01.m for the solution.

The usefulness of the complex envelope representation for bandpass waveforms cannot be overemphasized. In modern communication systems, the bandpass signal is often partitioned into two channels, one for $x(t)$ called the I (in-phase) channel and one for $y(t)$ called the Q (quadrature-phase) channel. In digital computer simulations of bandpass signals, the sampling rate used in the simulation can be minimized by working with the complex envelope $g(t)$, instead of with the bandpass signal $v(t)$, because $g(t)$ is the baseband equivalent of the bandpass signal.

4-2 REPRESENTATION OF MODULATED SIGNALS

Modulation is the process of encoding the source information $m(t)$ (modulating signal) into a bandpass signal $s(t)$ (modulated signal). Consequently, the modulated signal is just a special application of the bandpass representation. The *modulated signal* is given by

$$s(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} \quad (4-9)$$

where $\omega_c = 2\pi f_c$, in which f_c is the carrier frequency. The complex envelope $g(t)$ is a function of the modulating signal $m(t)$. That is,

$$g(t) = g[m(t)] \quad (4-10)$$

Thus, $g[\cdot]$ performs a mapping operation on $m(t)$. This was shown in Fig. 4-1.

Table 4-1 gives the “big picture” of the modulation problem. Examples of the mapping function $g[m]$ are given for amplitude modulation (AM), double-sideband suppressed carrier (DSB-SC), phase modulation (PM), frequency modulation (FM), single-sideband AM suppressed carrier (SSB-AM- SC), single-sideband PM (SSB-PM), single-sideband FM (SSB-FM), single-sideband envelope detectable (SSB-EV), single-sideband square-law detectable (SSB-SQ), and quadrature modulation (QM). Digital and analog modulated signals are discussed in detail in Chapter 5. Digitally modulated bandpass signals are obtained when $m(t)$ is a digital baseband signal—for example, the output of a transistor-transistor logic (TTL) circuit.

Obviously, it is possible to use other $g[m]$ functions that are not listed in Table 4-1. The question is; Are they useful? $g[m]$ functions that are easy to implement and that will give desirable spectral properties are sought. Furthermore, in the receiver, the inverse function $m[g]$ is required. The inverse should be single valued over the range used and should be easily implemented. The mapping should suppress as much noise as possible so that $m(t)$ can be recovered with little corruption.

4-3 SPECTRUM OF BANDPASS SIGNALS

The spectrum of a bandpass signal is directly related to the spectrum of its complex envelope.

THEOREM. *If a bandpass waveform is represented by*

$$v(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} \quad (4-11)$$

then the spectrum of the bandpass waveform is

$$V(f) = \frac{1}{2} [G(f - f_c) + G^*(-f - f_c)] \quad (4-12)$$

TABLE 4-1 COMPLEX ENVELOPE FUNCTIONS FOR VARIOUS TYPES OF MODULATION^a

Type of Modulation	Mapping Functions $g(m)$	Corresponding Quadrature Modulation	
		$x(t)$	$y(t)$
AM	$A_c[1 + m(t)]$	$A_c[1 + m(t)]$	0
DSB-SC	$A_c m(t)$	$A_c m(t)$	0
PM	$A_c e^{jD_p m(t)}$	$A_c \cos[D_p m(t)]$	$A_c \sin[D_p m(t)]$
FM	$A_c e^{jD_f \int_{-\infty}^t m(\sigma) d\sigma}$	$A_c \cos \left[D_f \int_{-\infty}^t m(\sigma) d\sigma \right]$	$A_c \sin \left[D_f \int_{-\infty}^t m(\sigma) d\sigma \right]$
SSB-AM-SC ^b	$A_c[m(t) \pm j\hat{m}(t)]$	$A_c m(t)$	$\pm A_c \hat{m}(t)$
SSB-PM ^b	$A_c e^{jD_p [m(t) \pm j\hat{m}(t)]}$	$A_c e^{\mp D_p \hat{m}(t)} \cos[D_p m(t)]$	$A_c e^{\mp D_p \hat{m}(t)} \sin[D_p m(t)]$
SSB-FM ^b	$A_c e^{jD_f \int_{-\infty}^t [m(\sigma) \pm j\hat{m}(\sigma)] d\sigma}$	$A_c e^{\mp D_f \int_{-\infty}^t \hat{m}(\sigma) d\sigma} \cos \left[D_f \int_{-\infty}^t m(\sigma) d\sigma \right]$	$A_c e^{\mp D_f \int_{-\infty}^t \hat{m}(\sigma) d\sigma} \sin \left[D_f \int_{-\infty}^t m(\sigma) d\sigma \right]$
SSB-EV ^b	$A_c e^{\{ \ln[1+m(t)] \mp j \ln[1+m(t)] \}}$	$A_c[1 + m(t)] \cos\{\ln[1 + m(t)]\}$	$\pm A_c[1 + m(t)] \sin\{\ln[1 + m(t)]\}$
SSB-SQ ^b	$A_c e^{(1/2)\{\ln[1+m(t)] \mp j \ln[1+(t)]\}}$	$A_c \sqrt{1 + m(t)} \cos\{\frac{1}{2} \ln[1 + m(t)]\}$	$\pm A_c \sqrt{1 + m(t)} \sin\{\frac{1}{2} \ln[1 + m(t)]\}$
QM	$A_c[m_1(t) + j m_2(t)]$	$A_c m_1(t)$	$A_c m_2(t)$

AM	$A_c 1 + m(t) $	$\begin{cases} 0, & m(t) > -1 \\ 180^\circ, & m(t) < -1 \end{cases}$	L ^c	$m(t) > -1$ required for envelope detection
DSB-SC	$A_c m(t) $	$\begin{cases} 0, & m(t) > 0 \\ 180^\circ, & m(t) < 0 \end{cases}$	L	Coherent detection required
PM	A_c	$D_p m(t)$	NL	D_p is the phase deviation constant (rad/volt)
FM	A_c	$D_f \int_{-\sigma}^t m(\sigma) d\sigma$	NL	D_f is the frequency deviation constant (rad/volt-sec)
SSB-AM-SC ^b	$A_c \sqrt{[m(t)]^2 + [\hat{m}(t)]^2}$	$\tan^{-1}[\pm \hat{m}(t)/m(t)]$	L	Coherent detection required
SSB-PM ^b	$A_c e^{\pm D_p \hat{m}(t)}$	$D_p m(t)$	NL	
SSB-FM ^b	$A_c e^{\pm D_f \int_{-\infty}^t \hat{m}(\sigma) d\sigma}$	$D_f \int_{-\infty}^t m(\sigma) d\sigma$	NL	
SSB-EV ^b	$A_c 1 + m(t) $	$\pm \ln[1 + m(t)]$	NL	$m(t) > -1$ is required so that $\ln(\cdot)$ will have a real value
SSB-SQ ^b	$A_c \sqrt{1 + m(t)}$	$\pm \frac{1}{2} \ln[1 + m(t)]$	NL	$m(t) > -1$ is required so that $\ln(\cdot)$ will have a real value
QM	$A_c \sqrt{m_1^2(t) + m_2^2(t)}$	$\tan^{-1}[m_2(t)/m_1(t)]$	L	Used in NTSC color television; requires coherent detection

^{b,a} $A_c > 0$ is a constant that sets the power level of the signal as evaluated by the use of Eq. (4-17); L, linear; NL, nonlinear; $[\hat{\cdot}]$ is the Hilbert transform (i.e., the -90° phase-shifted version) of $[\cdot]$. (See Sec. 5-5 and Sec. A-7, Appendix A.)

^b Use upper signs for upper sideband signals and lower signs for lower sideband signals.

^c In the strict sense, AM signals are not linear, because the carrier term does not satisfy the linearity (superposition) condition.

and the PSD of the waveform is

$$\mathcal{P}_v(f) = \frac{1}{4} [\mathcal{P}_g(f - f_c) + \mathcal{P}_g(-f - f_c)] \quad (4-13)$$

where $G(f) = \mathcal{F}[g(t)]$ and $\mathcal{P}_g(f)$ is the PSD of $g(t)$.

Proof.

$$v(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} = \frac{1}{2}g(t)e^{j\omega_c t} + \frac{1}{2}g^*(t)e^{-j\omega_c t}$$

Thus,

$$V(f) = \mathcal{F}[v(t)] = \frac{1}{2}\mathcal{F}[g(t)e^{j\omega_c t}] + \frac{1}{2}\mathcal{F}[g^*(t)e^{-j\omega_c t}] \quad (4-14)$$

If we use $\mathcal{F}[g^*(t)] = G^*(-f)$ from Table 2-1 and the frequency translation property of Fourier transforms from Table 2-1, this equation becomes

$$V(f) = \frac{1}{2}\{G(f - f_c) + G^*[-(f + f_c)]\} \quad (4-15)$$

which reduces to Eq. (4-12).

Example 4-2 SPECTRUM FOR A QUADRATURE MODULATED SIGNAL

Using the FFT, calculate and plot the magnitude spectrum for the QM signal that is described in Example 4-1.

Solution

See Example4_02.m for the solution. Is the plot of the FFT results for the spectrum correct? Using Eq. (4-15), we expect the sinusoid to produce delta functions at 9 Hz and at 11 Hz. Using Eq. (4-15) and Fig. 2-6a, the rectangular pulse should produce a $|Sa(x)|$ type spectrum that is centered at the carrier frequency, $f_c = 10$ Hz with spectral nulls spaced at 1 Hz intervals. Note that the FFT approximation of the Fourier transform does not give accurate values for the weight of the delta functions in the spectrum (as discussed in Section 2-8). However, the FFT can be used to obtain accurate values for the weights of the delta functions by evaluating the Fourier series coefficients. For example, see study-aid problem SA4-1.

The PSD for $v(t)$ is obtained by first evaluating the autocorrelation for $v(t)$:

$$R_v(\tau) = \langle v(t) v(t + \tau) \rangle = \langle \operatorname{Re}\{g(t)e^{j\omega_c t}\} \operatorname{Re}\{g(t + \tau)e^{j\omega_c(t + \tau)}\} \rangle$$

Using the identity (see Prob. 2-74)

$$\operatorname{Re}(c_2) \operatorname{Re}(c_1) = \frac{1}{2} \operatorname{Re}(c_2^* c_1) + \frac{1}{2} \operatorname{Re}(c_2 c_1)$$

where $c_2 = g(t)e^{j\omega_c t}$ and $c_1 = g(t + \tau)e^{j\omega_c(t + \tau)}$, we get

$$R_v(\tau) = \left\langle \frac{1}{2} \operatorname{Re}\{g^*(t)g(t + \tau)e^{-j\omega_c t}e^{j\omega_c(t + \tau)}\} \right\rangle + \left\langle \frac{1}{2} \operatorname{Re}\{g(t)g(t + \tau)e^{j\omega_c t}e^{j\omega_c(t + \tau)}\} \right\rangle$$

Realizing that both $\langle \cdot \rangle$ and $\text{Re}\{ \cdot \}$ are linear operators, we may exchange the order of the operators without affecting the result, and the autocorrelation becomes

$$R_v(\tau) = \frac{1}{2} \text{Re}\{\langle g^*(t) g(t + \tau) e^{j\omega_c \tau} \rangle\} + \frac{1}{2} \text{Re}\{\langle g(t) g(t + \tau) e^{j2\omega_c t} e^{j\omega_c \tau} \rangle\}$$

or

$$R_v(\tau) = \frac{1}{2} \text{Re}\{\langle g^*(t) g(t + \tau) \rangle e^{j\omega_c \tau}\} + \frac{1}{2} \text{Re}\{\langle g(t) g(t + \tau) e^{j2\omega_c t} \rangle e^{j\omega_c \tau}\}$$

But $\langle g^*(t) g(t + \tau) \rangle = R_g(\tau)$. The second term on the right is negligible because $e^{j2\omega_c t} = \cos 2\omega_c t + j \sin 2\omega_c t$ oscillates much faster than variations in $g(t)g(t + \tau)$. In other words, f_c is much larger than the frequencies in $g(t)$, so the integral is negligible. This is an application of the Riemann–Lebesgue lemma from integral calculus [Olmsted, 1961]. Thus, the autocorrelation reduces to

$$R_v(\tau) = \frac{1}{2} \text{Re}\{R_g(\tau) e^{j\omega_c \tau}\} \quad (4-16)$$

The PSD is obtained by taking the Fourier transform of Eq. (4-16) (i.e., applying the Wiener–Khintchine theorem). Note that Eq. (4-16) has the same mathematical form as Eq. (4-11) when t is replaced by τ , so the Fourier transform has the same form as Eq. (4-12). Thus,

$$\mathcal{P}_v(f) = \mathcal{F}[R_v(\tau)] = \frac{1}{4} [\mathcal{P}_g(f - f_c) + \mathcal{P}_g^*(-f - f_c)]$$

But $\mathcal{P}_g^*(f) = \mathcal{P}_g(f)$, since the PSD is a real function. Hence, the PSD is given by Eq. (4-13).

4-4 EVALUATION OF POWER

THEOREM. *The total average normalized power of a bandpass waveform $v(t)$ is*

$$P_v = \langle v^2(t) \rangle = \int_{-\infty}^{\infty} \mathcal{P}_v(f) df = R_v(0) = \frac{1}{2} \langle |g(t)|^2 \rangle \quad (4-17)$$

where “normalized” implies that the load is equivalent to one ohm.

Proof. Substituting $v(t)$ into Eq. (2-67), we get

$$P_v = \langle v^2(t) \rangle = \int_{-\infty}^{\infty} \mathcal{P}_v(f) df$$

But $R_v(\tau) = \mathcal{F}^{-1}[\mathcal{P}_v(f)] = \int_{-\infty}^{\infty} \mathcal{P}_v(f) e^{j2\pi f \tau} df$, so

$$R_v(0) = \int_{-\infty}^{\infty} \mathcal{P}_v(f) df$$

Also, from Eq. (4–16),

$$R_v(0) = \frac{1}{2} \operatorname{Re}\{R_g(0)\} = \frac{1}{2} \operatorname{Re}\{\langle g^*(t)g(t+0) \rangle\}$$

or

$$R_v(0) = \frac{1}{2} \operatorname{Re}\{\langle |g(t)|^2 \rangle\}$$

But $|g(t)|$ is always real, so

$$R_v(0) = \frac{1}{2} \langle |g(t)|^2 \rangle$$

Another type of power rating, called the *peak envelope power* (PEP), is useful for transmitter specifications.

DEFINITION. The *peak envelope power* (PEP) is the average power that would be obtained if $|g(t)|$ were to be held constant at its peak value.

This is equivalent to evaluating the average power in an unmodulated RF sinusoid that has a peak value of $A_p = \max [v(t)]$, as is readily seen from Fig. 5–1b.

THEOREM. *The normalized PEP is given by*

$$P_{\text{PEP}} = \frac{1}{2} [\max |g(t)|]^2 \quad (4-18)$$

A proof of this theorem follows by applying the definition to Eq. (4–17). As described later in Chapters 5 and 8, the PEP is useful for specifying the power capability of AM, SSB, and television transmitters.

Example 4–3 AMPLITUDE-MODULATED SIGNAL

Evaluate the magnitude spectrum for an amplitude-modulated (AM) signal. From Table 4–1, the complex envelope of an AM signal is

$$g(t) = A_c[1 + m(t)]$$

so that the spectrum of the complex envelope is

$$G(f) = A_c\delta(f) + A_cM(f) \quad (4-19)$$

Using Eq. (4–9), we obtain the AM signal waveform

$$s(t) = A_c[1 + m(t)] \cos \omega_c t$$

See Example4_3.m for a plot of an AM signal that is modulated by a sinusoid.

Using Eq. (4–12), we get the AM spectrum

$$S(f) = \frac{1}{2} A_c[\delta(f - f_c) + M(f - f_c) + \delta(f + f_c) + M(f + f_c)] \quad (4-20a)$$

where, because $m(t)$ is real, $M^*(f) = M(-f)$ and $\delta(f) = \delta(-f)$ (the delta function was defined to be even) were used. Suppose that the magnitude spectrum of the modulation happens to be a triangular function, as shown in Fig. 4-2a. This spectrum might arise from an analog audio source in which the bass frequencies are emphasized. The resulting AM spectrum, using Eq. (4-20a), is shown in Fig. 4-2b. Note that because $G(f-f_c)$ and $G^*(-f-f_c)$ do not overlap, the magnitude spectrum is

$$|S(f)| = \begin{cases} \frac{1}{2} A_c \delta(f-f_c) + \frac{1}{2} A_c |M(f-f_c)|, & f > 0 \\ \frac{1}{2} A_c \delta(f+f_c) + \frac{1}{2} A_c |M(-f-f_c)|, & f < 0 \end{cases} \quad (4-20b)$$


The 1 in $g(t) = A_c[1 + m(t)]$ causes delta functions to occur in the spectrum at $f = \pm f_c$, where f_c is the assigned carrier frequency. Using Eq. (4-17), we obtain the total average signal power

$$\begin{aligned} P_s &= \frac{1}{2} A_c^2 \langle |1 + m(t)|^2 \rangle = \frac{1}{2} A_c^2 \langle 1 + 2m(t) + m^2(t) \rangle \\ &= \frac{1}{2} A_c^2 [1 + 2\langle m(t) \rangle + \langle m^2(t) \rangle] \end{aligned}$$


If we assume that the DC value of the modulation is zero, as shown in Fig. 4-2a, the average signal power becomes

$$P_s = \frac{1}{2} A_c^2 [1 + P_m] \quad (4-21)$$

where $P_m = \langle m^2(t) \rangle$ is the power in the modulation $m(t)$, $\frac{1}{2} A_c^2$ is the carrier power, and $\frac{1}{2} A_c^2 P_m$ is the power in the sidebands of $s(t)$.

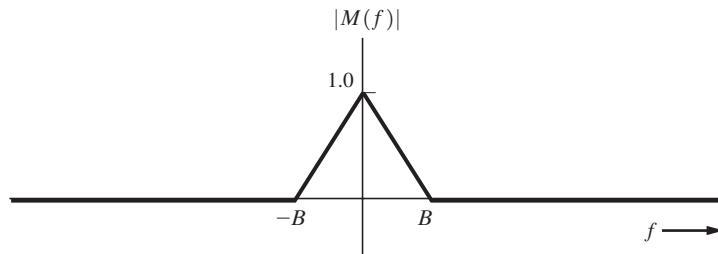

(a) Magnitude Spectrum of Modulation

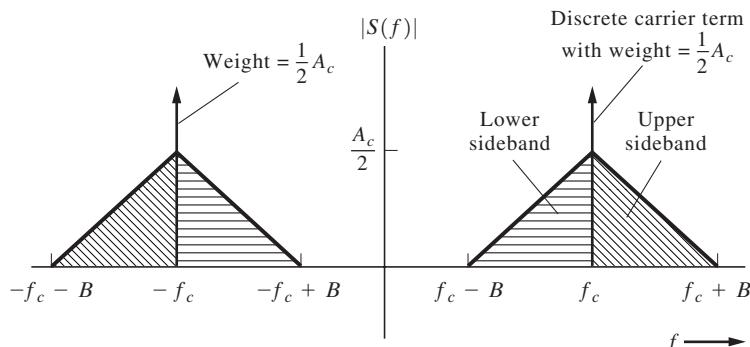


(b) Magnitude Spectrum of AM Signal

Figure 4-2 Spectrum of AM signal.


4-5 BANDPASS FILTERING AND LINEAR DISTORTION

Equivalent Low-Pass Filter


In Sec. 2-6, the general transfer function technique was described for the treatment of linear filter problems. Now a shortcut technique will be developed for modeling a bandpass filter by using an equivalent low-pass filter that has a complex-valued impulse response. (See Fig. 4-3a.) $v_1(t)$ and $v_2(t)$ are the input and output bandpass waveforms, with the corresponding complex envelopes $g_1(t)$ and $g_2(t)$. The impulse response of the bandpass filter, $h(t)$, can also be represented by its corresponding complex envelope $k(t)$. In addition, as shown in Fig. 4-3a, the frequency domain description, $H(f)$, can be expressed in terms of

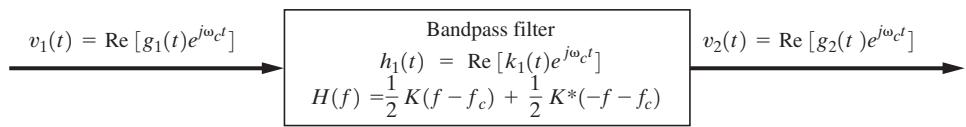


(a) Bandpass Filter

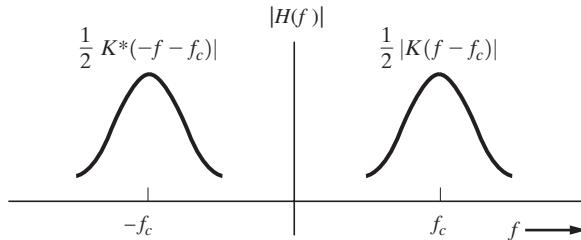

(b) Typical Bandpass Filter Frequency Response

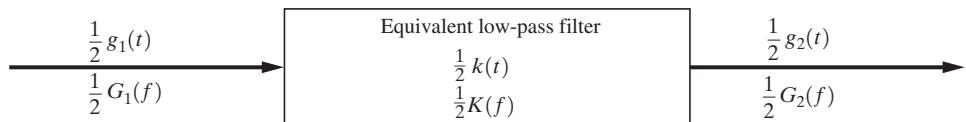

(c) Equivalent (Complex Impulse Response) Low-pass Filter

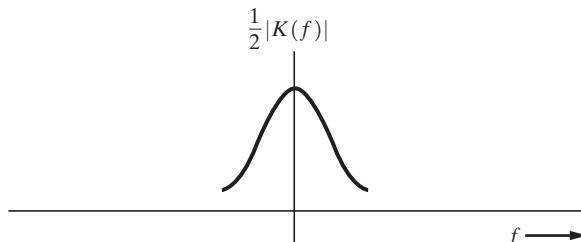

(d) Typical Equivalent Low-pass Filter Frequency Response

Figure 4-3 Bandpass filtering.

$K(f)$ with the help of Eqs. (4–11) and (4–12). Figure 4–3b shows a typical bandpass frequency response characteristic $|H(f)|$.

THEOREM. *The complex envelopes for the input, output, and impulse response of a bandpass filter are related by*

$$\frac{1}{2} g_2(t) = \frac{1}{2} g_1(t) * \frac{1}{2} k(t) \quad (4-22)$$

where $g_1(t)$ is the complex envelope of the input and $k(t)$ is the complex envelope of the impulse response. It also follows that

$$\frac{1}{2} G_2(f) = \frac{1}{2} G_1(f) \frac{1}{2} K(f) \quad (4-23)$$

Proof. We know that the spectrum of the output is

$$V_2(f) = V_1(f)H(f) \quad (4-24)$$

Because $v_1(t)$, $v_2(t)$, and $h(t)$ are all bandpass waveforms, the spectra of these waveforms are related to the spectra of their complex envelopes by Eq. (4–15); thus, Eq. (4–24) becomes

$$\begin{aligned} & \frac{1}{2} [G_2(f - f_c) + G_2^*(-f - f_c)] \\ &= \frac{1}{2} [G_1(f - f_c) + G_1^*(-f - f_c)] \frac{1}{2} [K(f - f_c) + K^*(-f - f_c)] \quad (4-25) \\ &= \frac{1}{4} [G_1(f - f_c)K(f - f_c) + G_1(f - f_c)K^*(-f - f_c) \\ &\quad + G_1^*(-f - f_c)K(f - f_c) + G_1^*(-f - f_c)K^*(-f - f_c)] \end{aligned}$$

But $G_1(f - f_c)K^*(-f - f_c) = 0$, because the spectrum of $G_1(f - f_c)$ is zero in the region of frequencies around $-f_c$, where $K^*(-f - f_c)$ is nonzero. That is, there is no spectral overlap of $G_1(f - f_c)$ and $K^*(-f - f_c)$, because $G_1(f)$ and $K(f)$ have nonzero spectra around only $f = 0$ (i.e., baseband, as illustrated in Fig. 4–3d). Similarly, $G_1^*(-f - f_c)K(f - f_c) = 0$. Consequently, Eq. (4–25) becomes

$$\begin{aligned} & [\frac{1}{2} G_2(f - f_c)] + [\frac{1}{2} G_2^*(-f - f_c)] \\ &= [\frac{1}{2} G_1(f - f_c) \frac{1}{2} K(f - f_c)] + [\frac{1}{2} G_1^*(-f - f_c) \frac{1}{2} K^*(-f - f_c)] \quad (4-26) \end{aligned}$$

Thus, $\frac{1}{2} G_2(f) = \frac{1}{2} G_1(f) \frac{1}{2} K(f)$, which is identical to Eq. (4–23). Taking the inverse Fourier transform of both sides of Eq. (4–23), Eq. (4–22) is obtained.

This theorem indicates that any bandpass filter system may be described and analyzed by using an *equivalent low-pass filter* as shown in Fig. 4–3c. A typical equivalent low-pass frequency response characteristic is shown in Fig. 4–3d. Equations for equivalent low-pass filters are usually much less complicated than those for bandpass filters, so the equivalent low-pass filter system model is very useful. Because the highest frequency is much smaller in the equivalent low-pass filter, it is the basis for computer programs that use sampling to simulate bandpass communication systems (discussed in Sec. 4–6). Also, as shown in Prob. 4–17 and Fig. P4–17, the equivalent low-pass filter with complex impulse response may be realized by using four low-pass filters with real impulse response; however, if the frequency response of the bandpass filter is Hermitian symmetric about $f = f_c$, only two low-pass filters with real impulse response are required.

A linear bandpass filter can cause variations in the phase modulation at the output, $\theta_2(t) = \angle g_2(t)$, as a function of the amplitude modulation on the input complex envelope, $R_1(t) = |g_1(t)|$. This is called *AM-to-PM conversion*. Similarly, the filter can cause variations in the amplitude modulation at the output, $R_2(t)$, because of the PM on the input, $\theta_1(t)$. This is called *PM-to-AM conversion*.

Because $h(t)$ represents a linear filter, $g_2(t)$ will be a linear filtered version of $g_1(t)$; however, $\theta_2(t)$ and $R_2(t)$ —the PM and AM components, respectively, of $g_2(t)$ —will be a *nonlinear* filtered version of $g_1(t)$, since $\theta_2(t)$ and $R_2(t)$ are nonlinear functions of $g_2(t)$. The analysis of the nonlinear distortion is very complicated. Although many analysis techniques have been published in the literature, none has been entirely satisfactory. Panter [1965] gives a three-chapter summary of some of these techniques, and a classical paper is also recommended [Bedrosian and Rice, 1968]. Furthermore, nonlinearities that occur in a practical system will also cause nonlinear distortion and AM-to-PM conversion effects. Nonlinear effects can be analyzed by several techniques, including power-series analysis; this is discussed in the section on amplifiers that follows later in this chapter. If a nonlinear effect in a *bandpass* system is to be analyzed, a Fourier series technique that uses the Chebyshev transform has been found to be useful [Spilker, 1977].

Linear Distortion

In Sec. 2–6, the general conditions were found for distortionless transmission. For linear *bandpass filters* (channels), a less restrictive set of conditions will now be shown to be satisfactory. For distortionless transmission of bandpass signals, the channel transfer function, $H(f) = |H(f)|e^{j\theta(f)}$, needs to satisfy the following requirements:

- The amplitude response is constant. That is,

$$|H(f)| = A \quad (4-27a)$$

where A is a positive (real) constant.

- The derivative of the phase response is a constant. That is,

$$-\frac{1}{2\pi} \frac{d\theta(f)}{df} = T_g \quad (4-27b)$$

where T_g is a constant called the complex *envelope delay* or, more concisely, the *group delay* and $\theta(f) = \angle H(f)$.

This is illustrated in Fig. 4–4. Note that Eq. (4–27a) is identical to the general requirement of Eq. (2–150a), but Eq. (4–27b) is less restrictive than Eq. (2–150b). That is, if Eq. (2–150b) is satisfied, Eq. (4–27b) is satisfied, where $T_d = T_g$; however, if Eq. (4–27b) is satisfied, Eq. (2–150b) is not necessarily satisfied, because the integral of Eq. (4–27b) is

$$\theta(f) = -2\pi f T_g + \theta_0 \quad (4-28)$$

where θ_0 is a phase-shift constant, as shown in Fig. 4–4b. If θ_0 happens to be nonzero, Eq. (2–150b) is not satisfied.

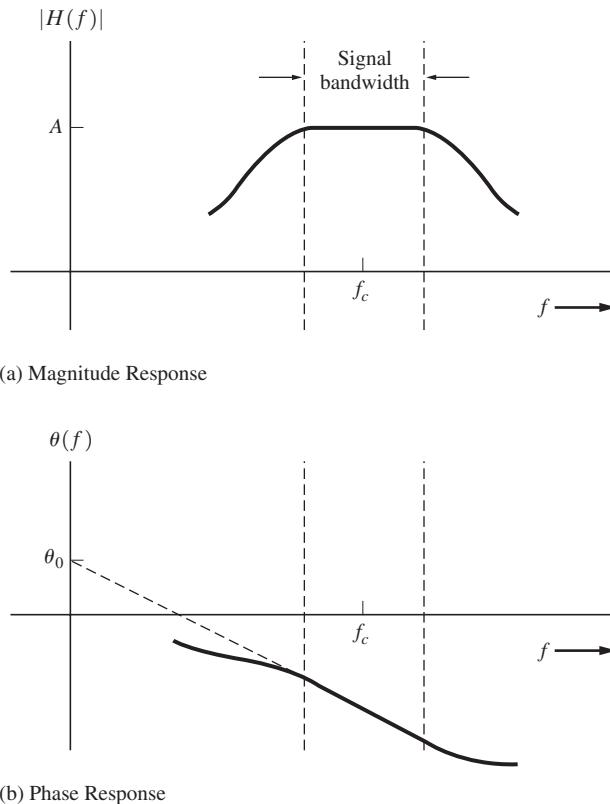


Figure 4-4 Transfer characteristics of a distortionless bandpass channel.

Now it will be shown that Eqs. (4-27a) and (4-27b) are sufficient requirements for distortionless transmission of bandpass signals. From Eqs. (4-27a) and (4-28), the channel (or filter) transfer function is

$$H(f) = Ae^{j(-2\pi f T_g + \theta_0)} = (Ae^{j\theta_0})e^{-j2\pi f T_g} \quad (4-29)$$

over the bandpass of the signal. If the input to the bandpass channel is represented by

$$v_1(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t$$

then, using Eq. (4-29) and realizing that $e^{-j2\pi f T_g}$ causes a delay of T_g , we find that the output of the channel is

$$v_2(t) = Ax(t - T_g) \cos[\omega_c(t - T_g) + \theta_0] - Ay(t - T_g) \sin[\omega_c(t - T_g) + \theta_0]$$

Using Eq. (4–28), we obtain

$$v_2(t) = Ax(t - T_g) \cos[\omega_c t + \theta(f_c)] - Ay(t - T_g) \sin[\omega_c t + \theta(f_c)]$$

where, by the use of Eq. (2–150b) evaluated at $f=f_c$,

$$\theta(f_c) = -\omega_c T_g + \theta_0 = -2\pi f_c T_d$$

Thus, the output bandpass signal can be described by

$$v_2(t) = Ax(t - T_g) \cos[\omega_c(t - T_d)] - Ay(t - T_g) \sin[\omega_c(t - T_d)] \quad (4-30)$$

where the modulation on the carrier (i.e., the x and y components) has been delayed by the *group time delay*, T_g , and the carrier has been delayed by the *carrier time delay*, T_d . Because $\theta(f_c) = -2\pi f_c T_d$, where $\theta(f_c)$ is the carrier phase shift, T_d is also called the *phase delay*. Equation (4–30) demonstrates that the bandpass filter delays the input complex envelope (i.e., the input information) by T_g , whereas the carrier is delayed by T_d . This is distortionless transmission, which is obtained when Eqs. (4–27a) and (4–27b) are satisfied. Note that T_g will differ from T_d , unless θ_0 happens to be zero.

In summary, the general requirements for distortionless transmission of either baseband or bandpass signals are given by Eqs. (2–150a) and (2–150b). However, for the bandpass case, Eq. (2–150b) is overly restrictive and may be replaced by Eq. (4–27b). In this case, $T_d \neq T_g$ unless $\theta_0 = 0$ where T_d is the *carrier or phase delay* and T_g is the *envelope or group delay*. For distortionless *bandpass* transmission, it is only necessary to have a transfer function with a *constant amplitude* and a *constant phase derivative* over the bandwidth of the signal.

Example 4–4 GROUP DELAY FOR A RC LOW-PASS FILTER

Using Eq. (4–27b), calculate and plot the group delay for a RC low-pass filter. Compare this result for the group delay with that obtained in Example 2–18 for the time delay of a RC low-pass filter. See Example4_04.m for the solution.

4–6 BANDPASS SAMPLING THEOREM

Sampling is used in software radios and for simulation of communication systems. If the sampling is carried out at the Nyquist rate or larger ($f_s \geq 2B$, where B is the highest frequency involved in the spectrum of the RF signal), the sampling rate can be ridiculous. For example, consider a satellite communication system with a carrier frequency of $f_c = 6$ GHz. The sampling rate required can be at least 12 GHz. Fortunately, for signals of this type (bandpass signals), it can be shown that the sampling rate depends only on the *bandwidth* of the signal, not on the absolute frequencies involved. This is equivalent to saying that we can reproduce the signal from samples of the complex envelope.

THEOREM. BANDPASS SAMPLING THEOREM: If a (real) bandpass waveform has a nonzero spectrum only over the frequency interval $f_1 < |f| < f_2$, where the transmission bandwidth B_T is taken to be the absolute bandwidth $B_T = f_2 - f_1$, then the waveform may be reproduced from sample values if the sampling rate is

$$f_s \geq 2B_T \quad (4-31)$$

For example, Eq. (4–31) indicates that if the 6-GHz bandpass signal previously discussed had a bandwidth of 10 MHz, a sampling frequency of only 20 MHz would be required instead of 12 GHz. This is a savings of three orders of magnitude.

The bandpass sampling theorem of Eq. (4–31) can be proved by using the Nyquist sampling theorem of Eqs. (2–158) and (2–160) in the quadrature bandpass representation, which is

$$v(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t \quad (4-32)$$

Let f_c be the center of the bandpass, so that $f_c = (f_2 + f_1)/2$. Then, from Eq. (4–8), both $x(t)$ and $y(t)$ are baseband signals and are absolutely bandlimited to $B = B_T/2$. From (2–160), the sampling rate required to represent the baseband signal is $f_b \geq 2B = B_T$. Equation (4–32) becomes

$$v(t) = \sum_{n=-\infty}^{n=\infty} \left[x\left(\frac{n}{f_b}\right) \cos \omega_c t - y\left(\frac{n}{f_b}\right) \sin \omega_c t \right] \left[\frac{\sin\{\pi f_b[t - (n/f_b)]\}}{\pi f_b[t - (n/f_b)]} \right] \quad (4-33)$$

For the general case, where the $x(n/f_b)$ and $y(n/f_b)$ samples are independent, two real samples are obtained for each value of n , so that the overall sampling rate for $v(t)$ is $f_s = 2f_b \geq 2B_T$. This is the bandpass sampling frequency requirement of Eq. (4–31). The x and y samples can be obtained by sampling $v(t)$ at $t \approx (n/f_b)$, but adjusting t slightly, so that $\cos \omega_c t = 1$ and $\sin \omega_c t = -1$ at the exact sampling time for x and y , respectively. That is, for $t \approx n/f_s$, $v(n/f_b) = x(n/f_b)$ when $\cos \omega_c t = 1$ (i.e., $\sin \omega_c t = 0$), and $v(n/f_b) = y(n/f_b)$ when $\sin \omega_c t = -1$ (i.e., $\cos \omega_c t = 0$). Alternatively $x(t)$ and $y(t)$ can first be obtained by the use of two quadrature product detectors, as described by Eq. (4–76). The $x(t)$ and $y(t)$ baseband signals can then be individually sampled at a rate of f_b , and the overall equivalent sampling rate is still $f_s = 2f_b \geq 2B_T$.

In the application of this theorem, it is assumed that the bandpass signal $v(t)$ is reconstructed by the use of Eq. (4–33). This implies that nonuniformly spaced synchronized samples of $v(t)$ are used, since the samples are taken in pairs (for the x and y components) instead of being uniformly spaced T_s apart. Uniformly spaced samples of $v(t)$ itself can be used with a minimum sampling frequency of $2B_T$, provided that either f_1 or f_2 is a harmonic of f_s [Hsu, 1999; Taub and Schilling, 1986]. Otherwise, a minimum sampling frequency larger than $2B_T$, but not larger than $4B_T$ is required [Hsu, 1999; Taub and Schilling, 1986]. This phenomenon occurs with impulse sampling [Eq. (2–173)] because f_s needs to be selected so that there is no spectral overlap in the $f_1 < f < f_2$ band when the bandpass spectrum is translated to harmonics of f_s .

THEOREM. BANDPASS DIMENSIONALITY THEOREM: Assume that a bandpass waveform has a nonzero spectrum only over the frequency interval $f_1 < |f| < f_2$, where the transmission bandwidth B_T is taken to be the absolute bandwidth given by $B_T = f_2 - f_1$ and $B_T \ll f_1$. The waveform may be completely specified over a T_0 -second interval by

$$N = 2B_T T_0 \quad (4-34)$$

independent pieces of information. N is said to be the number of dimensions required to specify the waveform.

Computer simulation is often used to analyze communication systems. The bandpass dimensionality theorem tells us that a bandpass signal B_T Hz wide can be represented over a T_0 -second interval, provided that at least $N = 2B_T T_0$ samples are used. More details about the bandpass sampling theorem are discussed in study-aid Prob. SA4–5.

4–7 RECEIVED SIGNAL PLUS NOISE

Using the representation of bandpass signals and including the effects of channel filtering, we can obtain a model for the received signal plus noise. Referring to Fig. 4–1, the signal out of the transmitter is

$$s(t) = \operatorname{Re}[g(t)e^{j\omega_c t}]$$

where $g(t)$ is the complex envelope for the particular type of modulation used. (See Table 4–1.) If the channel is linear and time invariant, the received signal plus noise is

$$r(t) = s(t) * h(t) + n(t) \quad (4-35)$$

where $h(t)$ is the impulse response of the channel and $n(t)$ is the noise at the receiver input. Furthermore, if the channel is distortionless, its transfer function is given by Eq. (4–29), and consequently, the signal plus noise at the receiver input is

$$r(t) = \operatorname{Re}[Ag(t - T_g)e^{j(\omega_c t + \theta(f_c))} + n(t)] \quad (4-36)$$

where A is the gain of the channel (a positive number usually less than 1), T_g is the channel group delay, and $\theta(f_c)$ is the carrier phase shift caused by the channel. In practice, the values for T_g and $\theta(f_c)$ are often not known, so that if values for T_g and $\theta(f_c)$ are needed by the receiver to detect the information that was transmitted, receiver circuits estimate the received carrier phase $\theta(f_c)$ and the group delay (e.g., a bit synchronizer in the case of digital signaling). We will assume that the receiver circuits are designed to make errors due to these effects negligible; therefore, we can consider the signal plus noise at the receiver input to be

$$r(t) = \operatorname{Re}[g(t)e^{j\omega_c t}] + n(t) \quad (4-37)$$

where the effects of channel filtering, if any, are included by some modification of the complex envelope $g(t)$ and the constant A_c that is implicit within $g(t)$ (see Table 4–1) is adjusted to reflect the effect of channel attenuation. Details of this approach are worked out in Sec. 8–6.

4–8 CLASSIFICATION OF FILTERS AND AMPLIFIERS

Filters

Filters are devices that take an input waveshape and modify the frequency spectrum to produce the output waveshape. Filters may be classified in several ways. One is by the type of construction used, such as LC elements or quartz crystal elements. Another is by the type of

transfer function that is realized, such as the Butterworth or Chebyshev response (defined subsequently). These two classifications are discussed in this section.

Filters use energy storage elements to obtain frequency discrimination. In any physical filter, the energy storage elements are imperfect. For example, a physical inductor has some series resistance as well as inductance, and a physical capacitor has some shunt (leakage) resistance as well as capacitance. A natural question, then, is, what is the quality Q of a circuit element or filter? Unfortunately, two different measures of filter quality are used in the technical literature. The first definition is concerned with the efficiency of *energy storage* in a circuit [Ramo, Whinnery, and vanDuzer, 1967, 1984] and is

$$Q = \frac{2\pi(\text{maximum energy stored during one cycle})}{\text{energy dissipated per cycle}} \quad (4-38)$$

A larger value for Q corresponds to a more perfect storage element. That is, a perfect L or C element would have infinite Q . The second definition is concerned with the *frequency selectivity* of a circuit and is

$$Q = \frac{f_0}{B} \quad (4-39)$$

where f_0 is the resonant frequency and B is the 3-dB bandwidth. Here, the larger the value of Q , the better is the frequency selectivity, because, for a given f_0 , the bandwidth would be smaller.

In general, the value of Q as evaluated using Eq. (4-38) is different from the value of Q obtained from Eq. (4-39). However, these two definitions give identical values for an RLC series resonant circuit driven by a voltage source or for an RLC parallel resonant circuit driven by a current source [Nilsson, 1990]. For bandpass filtering applications, frequency selectivity is the desired characteristic, so Eq. (4-39) is used. Also, Eq. (4-39) is easy to evaluate from laboratory measurements. If we are designing a passive filter (not necessarily a single-tuned circuit) of center frequency f_0 and 3-dB bandwidth B , the individual circuit elements will each need to have much larger Q 's than f_0/B . Thus, for a practical filter design, we first need to answer the question. What are the Q 's needed for the filter elements, and what kind of elements will give these values of Q ? This question is answered in Table 4-2, which lists filters as classified by the type of energy storage elements used in their construction and gives typical values for the Q of the elements. Filters that use lumped[†] L and C elements become impractical to build above 300 MHz, because the parasitic capacitance and inductance of the leads significantly affect the frequency response at high frequencies. Active filters, which use operational amplifiers with RC circuit elements, are practical only below 500 kHz, because the operational amplifiers need to have a large open-loop gain over the operating band. For very low-frequency filters, RC active filters are usually preferred to LC passive filters because the size of the LC components becomes large and the Q of the inductors becomes small in this frequency range. Active filters are difficult to implement within integrated circuits because the resistors and capacitors take up a significant portion of the chip area. This difficulty is reduced by using a switched-capacitor design for IC implementation. In that case, resistors

[†] A lumped element is a discrete R -, L -, or C -type element, compared with a continuously distributed RLC element, such as that found in a transmission line.

TABLE 4-2 FILTER CONSTRUCTION TECHNIQUES

Type of Construction	Description of Elements or Filter	Center Frequency Range	Unloaded Q (Typical)	Filter Application ^a
LC (passive)		dc-300 MHz	100	Audio, video, IF, and RF
Active and Switched Capacitor		dc-500 kHz	200 ^b	Audio
Crystal		1 kHz-100 MHz	100,000	IF
Mechanical		50-500 kHz	1,000	IF
Ceramic		10 kHz-10.7 MHz	1,000	IF
Surface acoustic waves (SAW)		10-800 MHz	c	IF and RF
Transmission line		UHF and microwave	1,000	RF
Cavity		Microwave	10,000	RF

^a IF, intermediate frequency; RF, radio frequency. (See Sec. 4-16.)^b Bandpass Q's.^c Depends on design: $N = f_0/B$, where N is the number of sections, f_0 is the center frequency, and B is the bandwidth. Loaded Q's of 18,000 have been achieved.

are replaced by an arrangement of electronic switches and capacitors that are controlled by a digital clock signal [Schaumann et al., 1990].

Crystal filters are manufactured from quartz crystal elements, which act as a series resonant circuit in parallel with a shunt capacitance caused by the holder (mounting). Thus, a parallel resonant, as well as a series resonant, mode of operation is possible. Above 100 MHz the quartz element becomes physically too small to manufacture, and below 1 kHz the size of the element becomes prohibitively large. Crystal filters have excellent performance because of the inherently high Q of the elements, but they are more expensive than LC and ceramic filters.

Mechanical filters use the vibrations of a resonant mechanical system to obtain the filtering action. The mechanical system usually consists of a series of disks spaced along a rod. Transducers are mounted on each end of the rod to convert the electrical signals to mechanical vibrations at the input, and vice versa at the output. Each disk is the mechanical equivalent of a high- Q electrical parallel resonant circuit. The mechanical filter usually has a high insertion loss, resulting from the inefficiency of the input and output transducers.

Ceramic filters are constructed from piezoelectric ceramic disks with plated electrode connections on opposite sides of the disk. The behavior of the ceramic element is similar to that of the crystal filter element, as discussed earlier, except that the Q of the ceramic element is much lower. The advantage of the ceramic filter is that it often provides adequate performance at a cost that is low compared with that of crystal filters.

Surface acoustic wave (SAW) filters utilize acoustic waves that are launched and travel on the surface of a piezoelectric substrate (slab). Metallic interleaved “fingers” have been deposited on the substrate. The voltage signal on the fingers is converted to an acoustic signal (and vice versa) as the result of the piezoelectric effect. The geometry of the fingers determines the frequency response of the filter, as well as providing the input and output coupling [Dorf, 1993, pp. 1073–1074]. The insertion loss is somewhat larger than that for crystal or ceramic filters. However, the ease of shaping the transfer function and the wide bandwidth that can be obtained with controlled attenuation characteristics make the SAW filters very attractive. This technology is used to provide excellent IF amplifier characteristics in modern television sets.

SAW devices can also be tapped so that they are useful for transversal filter configurations (Fig. 3-28) operating in the RF range. At lower frequencies, charge transfer devices (CTDs) can be used to implement transversal filters [Gersho, 1975].

Transmission line filters utilize the resonant properties of open-circuited or short-circuited transmission lines. These filters are useful at UHF and microwave frequencies, at which wavelengths are small enough so that filters of reasonable size can be constructed. Similarly, the resonant effect of cavities is useful in building filters for microwave frequencies at which the cavity size becomes small enough to be practical.

Filters are also characterized by the type of transfer function that is realized. The transfer function of a linear filter with lumped circuit elements may be written as the ratio of two polynomials,

$$H(f) = \frac{b_0 + b_1(j\omega) + b_2(j\omega)^2 + \dots + b_k(j\omega)^k}{a_0 + a_1(j\omega) + a_2(j\omega)^2 + \dots + a_n(j\omega)^n} \quad (4-40)$$

where the constants a_i and b_i are functions of the element values and $\omega = 2\pi f$. The parameter n is said to be the *order* of the filter. By adjusting the constants to certain values, desirable transfer function characteristics can be obtained. Table 4-3 lists three different

TABLE 4-3 SOME FILTER CHARACTERISTICS

Type	Optimization Criterion	Transfer Characteristic for the Low-Pass Filter ^a
Butterworth	Maximally flat: as many derivatives of $ H(f) $ as possible go to zero as $f \rightarrow 0$	$ H(f) = \frac{1}{\sqrt{1 + (f/f_b)^{2n}}}$
Chebyshev	For a given peak-to-peak ripple in the passband of the $ H(f) $ characteristic, the $ H(f) $ attenuates the fastest for any filter of n th order	$ H(f) = \frac{1}{\sqrt{1 + \varepsilon^2 C_n^2(f/f_b)}}$ ε = a design constant; $C_n(f)$ is the n th-order Chebyshev polynomial defined by the recursion relation $C_n(x) = 2x C_{n-1}(x) - C_{n-2}(x)$, where $C_0(x) = 1$ and $C_1(x) = x$
Bessel	Attempts to maintain linear phase in the passband	$H(f) = \frac{K_n}{B_n(f/f_b)}$ K_n is a constant chosen to make $H(0) = 1$, and the Bessel recursion relation is $B_n(x) = (2n - 1) B_{n-1}(x) - x^2 B_{n-2}(x)$, where $B_0(x) = 1$ and $B_1(x) = 1 + jx$

^a f_b is the cutoff frequency of the filter.

filter characteristics and the optimization criterion that defines each one. The Chebyshev filter is used when a sharp attenuation characteristic is required for a minimum number of circuit elements. The Bessel filter is often used in data transmission when the pulse shape is to be preserved, since it attempts to maintain a linear phase response in the passband. The Butterworth filter is often used as a compromise between the Chebyshev and Bessel characteristics.

The topic of filters is immense, and not all aspects of filtering can be covered here. For example, with the advent of inexpensive microprocessors, *digital filtering* and *digital signal processing* are becoming very important [Oppenheim and Schafer, 1975, 1989].

For additional reading on analog filters with an emphasis on communication system applications, see Bowron and Stephenson [1979].

Amplifiers

For analysis purposes, electronic circuits and, more specifically, amplifiers can be classified into two main categories: Nonlinear and linear. Linearity was defined in Sec. 2-6. In practice, all circuits are nonlinear to some degree, even at low (voltage and current) signal levels, and become highly nonlinear for high signal levels. Linear circuit analysis is often used for the low signal levels, since it greatly simplifies the mathematics and gives accurate answers if the signal level is sufficiently small.

The main categories of nonlinear and linear amplifiers can be further classified into the subcategories of circuits with memory and circuits with no memory. Circuits with memory contain inductive and capacitive effects that cause the present output value to be a function of previous input values as well as the present input value. If a circuit has no memory, its present output value is a function only of its present input value.

In introductory electrical engineering courses, it is first assumed that circuits are linear with no memory (resistive circuits) and, later, linear with memory (*RLC* circuits). It follows that linear amplifiers with memory may be described by a transfer function that is the ratio of the Fourier transform of the output signal to the Fourier transform of the input signal. As discussed in Sec. 2–6, the transfer function of a distortionless amplifier is given by $K e^{-j\omega_c T_d}$, where K is the voltage gain of the amplifier and T_d is the delay between the output and input waveforms. If the transfer function of the linear amplifier is not of this form, the output signal will be a *linearly* distorted version of the input signal.

4–9 NONLINEAR DISTORTION

In addition to linear distortion, practical amplifiers produce nonlinear distortion. To examine the effects of nonlinearity and yet keep a mathematical model that is tractable, we will assume *no memory* in the following analysis. Thus, we will look at the present output as a function of the present input in the time domain. If the amplifier is linear, this relationship is

$$v_0(t) = K v_i(t) \quad (4-41)$$

where K is the voltage gain of the amplifier. In practice, the output of the amplifier becomes saturated at some value as the amplitude of the input signal is increased. This is illustrated by the nonlinear output-to-input characteristic shown in Fig. 4–5. The output-to-input characteristic may be modeled by a Taylor's expansion about $v_i = 0$ (i.e., a Maclaurin series); that is,

$$v_0 = K_0 + K_1 v_i + K_2 v_i^2 + \dots = \sum_{n=0}^{\infty} K_n v_i^n \quad (4-42)$$

where

$$K_n = \frac{1}{n!} \left| \left(\frac{d^n v_0}{d v_i^n} \right) \right|_{v_i=0} \quad (4-43)$$

There will be nonlinear distortion on the output signal if K_2, K_3, \dots are not zero. K_0 is the output DC offset level, $K_1 v_i$ is the first-order (linear) term, $K_2 v_i^2$ is the second-order (square-law) term, and so on. Of course, K_1 will be larger than K_2, K_3, \dots if the amplifier is anywhere near to being linear.

The *harmonic distortion* associated with the amplifier output is determined by applying a single sinusoidal test tone to the amplifier input. Let the input test tone be represented by

$$v_i(t) = A_0 \sin \omega_0 t \quad (4-44)$$

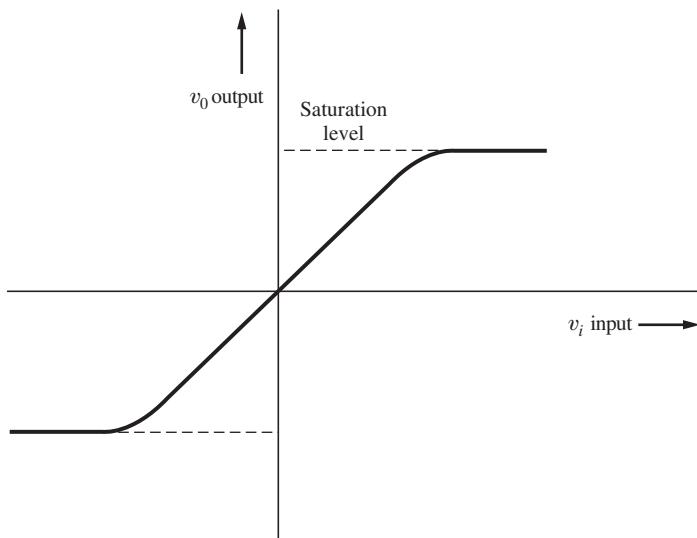


Figure 4-5 Nonlinear amplifier output-to-input characteristic.

Then the second-order output term is

$$K_2(A_0 \sin \omega_0 t)^2 = \frac{K_2 A_0^2}{2} (1 - \cos 2\omega_0 t) \quad (4-45)$$

This indicates that the second-order distortion creates a DC level $K_2 A_0^2 / 2$ (in addition to any DC bias) and second harmonic distortion with amplitude $K_2 A_0^2 / 2$. In general, for a single-tone input, the output will be

$$\begin{aligned} v_{\text{out}}(t) = & V_0 + V_1 \cos(\omega_0 t + \varphi_1) + V_2 \cos(2\omega_0 t + \varphi_2) \\ & + V_3 \cos(3\omega_0 t + \varphi_3) + \dots \end{aligned} \quad (4-46)$$

where V_n is the peak value of the output at the frequency $n f_0$ hertz. Then, the percentage of *total harmonic distortion* (THD) is defined by

$$\text{THD} (\%) = \frac{\sqrt{\sum_{n=2}^{\infty} V_n^2}}{V_1} \times 100 \quad (4-47)$$

The THD of an amplifier can be measured by using a distortion analyzer, or it can be evaluated by Eq. (4-47), with the V_n 's obtained from a spectrum analyzer.

The *intermodulation distortion* (IMD) of the amplifier is obtained by using a two-tone test. If the input (tone) signals are

$$v_i(t) = A_1 \sin \omega_1 t + A_2 \sin \omega_2 t \quad (4-48)$$

then the second-order output term is

$$K_2(A_1 \sin \omega_1 t + A_2 \sin \omega_2 t)^2 = K_2(A_1^2 \sin^2 \omega_1 t + 2A_1 A_2 \sin \omega_1 t \sin \omega_2 t + A_2^2 \sin^2 \omega_2 t)$$

The first and last terms on the right side of this equation produce harmonic distortion at frequencies $2f_1$ and $2f_2$. The cross-product term produces IMD. This term is present only when *both* input terms are present—thus, the name “intermodulation distortion.” Then the second-order IMD is

$$2K_2 A_1 A_2 \sin \omega_1 t \sin \omega_2 t = K_2 A_1 A_2 \{\cos[(\omega_1 - \omega_2)t] - \cos[(\omega_1 + \omega_2)t]\}$$

It is clear that IMD generates sum and difference frequencies.

The third-order term is

$$\begin{aligned} K_3 v_i^3 &= K_3(A_1 \sin \omega_1 t + A_2 \sin \omega_2 t)^3 \\ &= K_3(A_1^3 \sin^3 \omega_1 t + 3A_1^2 A_2 \sin^2 \omega_1 t \sin \omega_2 t \\ &\quad + 3A_1 A_2^2 \sin \omega_1 t \sin^2 \omega_2 t + A_2^3 \sin^3 \omega_2 t) \end{aligned} \quad (4-49)$$

The first and last terms on the right side of this equation will produce harmonic distortion, and the second term, a cross product, becomes

$$\begin{aligned} 3K_3 A_1^2 A_2 \sin^2 \omega_1 t \sin \omega_2 t &= \frac{3}{2} K_3 A_1^2 A_2 \sin \omega_2 t (1 - \cos 2\omega_1 t) \\ &= \frac{3}{2} K_3 A_1^2 A_2 \{\sin \omega_2 t - \frac{1}{2} [\sin(2\omega_1 + \omega_2)t \\ &\quad - \sin(2\omega_1 - \omega_2)t]\} \end{aligned} \quad (4-50)$$

Similarly, the third term of Eq. (4-49) is

$$\begin{aligned} 3K_3 A_1 A_2^2 \sin \omega_1 t \sin^2 \omega_2 t \\ = \frac{3}{2} K_3 A_1 A_2^2 \{\sin \omega_1 t - \frac{1}{2} [\sin(2\omega_2 + \omega_1)t - \sin(2\omega_2 - \omega_1)t]\} \end{aligned} \quad (4-51)$$

The last two terms in Eqs. (4-50) and (4-51) are intermodulation terms at nonharmonic frequencies. For the case of *bandpass* amplifiers where f_1 and f_2 are within the bandpass with f_1 close to f_2 (i.e., $f_1 \approx f_2 \gg 0$), the distortion products at $2f_1 + f_2$ and $2f_2 + f_1$ will usually fall outside the passband and, consequently, may not be a problem. However, the terms at $2f_1 - f_2$ and $2f_2 - f_1$ will fall inside the passband and will be close to the desired frequencies f_1 and f_2 . These will be the main distortion products for bandpass amplifiers, such as those used for RF amplification in transmitters and receivers.

As Eqs. (4-50) and (4-51) show, if either A_1 or A_2 is increased sufficiently, the IMD will become significant, since the desired output varies linearly with A_1 or A_2 and the IMD output varies as $A_1^2 A_2$ or $A_1 A_2^2$. Of course, the exact input level required for the intermodulation products to be a problem depends on the relative values of K_3 and K_1 . The level may be specified by the amplifier third-order *intercept point*, which is evaluated by applying two equal amplitude test tones (i.e., $A_1 = A_2 = A$). The desired linearly amplified outputs will have

amplitudes of $K_1 A$, and each of the third-order intermodulation products will have amplitudes of $3K_3 A^3/4$. The ratio of the desired output to the IMD output is then

$$R_{\text{IMD}} = \frac{4}{3} \left(\frac{K_1}{K_3 A^2} \right) \quad (4-52)$$

The input intercept point, defined as the input level that causes R_{IMD} to be unity, is shown in Fig. 4-6. The solid curves are obtained by measurement, using two sinusoidal signal generators to generate the tones and measuring the level of the desired output (at f_1 or f_2) and the IMD products (at $2f_1 - f_2$ or $2f_2 - f_1$) with a spectrum analyzer. The intercept point is a fictitious point that is obtained by extrapolation of the linear portion (decibel plot) of the desired output and IMD curves until they intersect. The desired output (the output at either f_1 or f_2) actually becomes saturated when measurements are made, since the higher-order terms in the Taylor series have components at f_1 and f_2 that subtract from the linearly amplified output. For example, with K_3 being negative, the leading term in Eq. (4-51) occurs at f_1 and

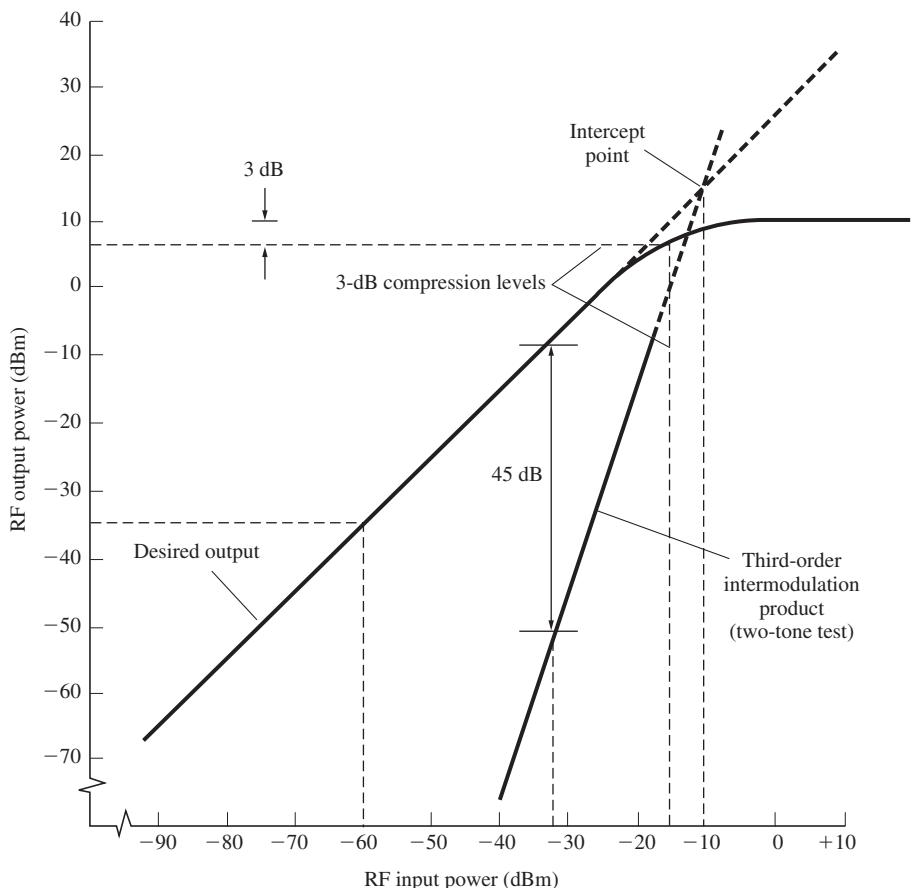


Figure 4-6 Amplifier output characteristics.

will subtract from the linearly amplified component at f_1 , thus producing a saturated characteristic for the sinusoidal component at f_1 . For an amplifier that happens to have the particular nonlinear characteristic shown in Fig. 4-6, the intercept point occurs for an RF input level of -10 dBm. Overload characteristics of receivers, such as those used in police walkie-talkies, are characterized by the third-order intercept-point specification. This dBm value is the RF signal level at the antenna input that corresponds to the intercept point. When the receiver is deployed, input signal levels need to be much lower than that value in order to keep the undesired interfering intermodulation signals generated by the receiver circuits to an acceptable level. For transmitter applications, the intercept-point specification is the output signal level corresponding to the intercept point.

Other properties of an amplifier are also illustrated by Fig. 4-6. The gain of the amplifier is 25 dB in the linear region, because a -60 - dBm input produces a -35 - dBm output level. The desired output is compressed by 3 dB for an input level of -15 dBm. Consequently, the amplifier might be considered to be linear only if the input level is less than -15 dBm. Furthermore, if the third-order IMD products are to be down by at least 45 dBm, the input level will have to be kept lower than -32 dBm.

Another term in the distortion products at the output of a nonlinear amplifier is called *cross-modulation*. Cross-modulation terms are obtained when one examines the third-order products resulting from a two-tone test. As shown in Eqs. (4-50) and (4-51), the terms $\frac{3}{2}K_3A_1^2A_2\sin\omega_2t$ and $\frac{3}{2}K_3A_1A_2^2\sin\omega_1t$ are cross-modulation terms. Let us examine the term $\frac{3}{2}K_3A_1^2A_2\sin\omega_2t$. If we allow some amplitude variation in the input signal $A_1 \sin \omega_1 t$, so that it looks like an AM signal $A_1[1 + m_1(t)] \sin \omega_1 t$, where $m_1(t)$ is the modulating signal, a third-order distortion product becomes

$$\frac{3}{2}K_3A_1^2A_2[1 + m_1(t)]^2 \sin \omega_2 t \quad (4-53)$$

Thus, the AM on the signal at the carrier frequency f_1 will produce a signal at frequency f_2 with distorted modulation. That is, if two signals are passed through an amplifier having third-order distortion products in the output, and if either input signal has some AM, the amplified output of the *other* signal will be amplitude modulated to some extent by a distorted version of the modulation. This phenomenon is cross-modulation.

Passive as well as active circuits may have nonlinear characteristics and, consequently, will produce distortion products. For example, suppose that two AM broadcast stations have strong signals in the vicinity of a barn or house that has a metal roof with rusted joints. The roof may act as an antenna to receive and reradiate the RF energy, and the rusted joints may act as a diode (a nonlinear passive circuit). Signals at harmonics and intermodulation frequencies may be radiated and interfere with other communication signals. In addition, cross-modulation products may be radiated. That is, a distorted modulation of one station is heard on radios (located in the vicinity of the rusted roof) that are tuned to the other station's frequency.

When amplifiers are used to produce high-power signals, as in transmitters, it is desirable to have amplifiers with high efficiency in order to reduce the costs of power supplies, cooling equipment, and energy consumed. The efficiency is the ratio of the output signal power to the DC input power. Amplifiers may be grouped into several categories, depending on the biasing levels and circuit configurations used. Some of these are Class A, B, C, D, E, F, G, H, and S [Krauss, Bostian, and Raab, 1980; Smith, 1998]. For Class A operation, the bias on the amplifier stage is adjusted so that current flows during the complete cycle of an applied

input test tone. For Class B operation, the amplifier is biased so that current flows for 180° of the applied signal cycle. Therefore, if a Class B amplifier is to be used for a baseband linear amplifier, such as an audio power amplifier in a hi-fi system, two devices are wired in push-pull configuration so that each one alternately conducts current over half of the input signal cycle. In *bandpass* Class B linear amplification, where the bandwidth is a small percentage of the operating frequency, only one active device is needed, since tuned circuits may be used to supply the output current over the other half of the signal cycle. For Class C operation, the bias is set so that (collector or plate) current flows in pulses, each one having a pulse width that is usually much less than half of the input cycle. Unfortunately, with Class C operation, it is not possible to have linear amplification, even if the amplifier is a bandpass RF amplifier with tuned circuits providing current over the nonconducting portion of the cycle. If one tries to amplify an AM signal with a Class C amplifier or other types of nonlinear amplifiers, the AM on the output will be distorted. However, RF signals with a constant real envelope, such as FM signals, may be amplified without distortion, because a nonlinear amplifier preserves the zero-crossings of the input signal.

The efficiency of a Class C amplifier is determined essentially by the conduction angle of the active device, since poor efficiency is caused by signal power being wasted in the device itself during the conduction time. The Class C amplifier is most efficient, having an efficiency factor of 100% in the ideal case. Class B amplifiers have an efficiency of $\pi/4 \times 100 = 78.5\%$ or less, and Class A amplifiers have an efficiency of 50% or less [Krauss, Bostian, and Raab, 1980]. Because Class C amplifiers are the most efficient, they are generally used to amplify constant envelope signals, such as FM signals used in broadcasting. Class D, E, F, G, H, and S amplifiers usually employ switching techniques in specialized circuits to obtain high efficiency [Krauss, Bostian, and Raab, 1980; Smith, 1998].

Many types of microwave amplifiers, such as traveling-wave tubes (TWTs), operate on the velocity modulation principle. The input microwave signal is fed into a slow-wave structure. Here, the velocity of propagation of the microwave signal is reduced so that it is slightly below the velocity of the DC electron beam. This enables a transfer of kinetic energy from the electron beam to the microwave signal, thereby amplifying the signal. In this type of amplifier, the electron current is *not* turned on and off to provide the amplifying mechanism; thus, it is not classified in terms of Class B or C operation. The TWT is a linear amplifier when operated at the appropriate drive level. If the drive level is increased, the efficiency (RF output/DC input) is improved, but the amplifier becomes nonlinear. In this case, constant envelope signals, such as PSK or PM, need to be used so that the intermodulation distortion will not cause a problem. This is often the mode of operation of satellite transponders (transmitters in communication satellites), where solar cells are costly and have limited power output. The subject is discussed in more detail in Chapter 8 in the section on satellite communications.

4-10 LIMITERS

A *limiter* is a nonlinear circuit with an output saturation characteristic. A soft saturating limiter characteristic is shown in Fig. 4-5. Figure 4-7 shows a hard (ideal) limiter characteristic, together with an illustration of the unfiltered output waveform obtained for an input waveform. The ideal limiter transfer function is essentially identical to the output-to-input characteristic of

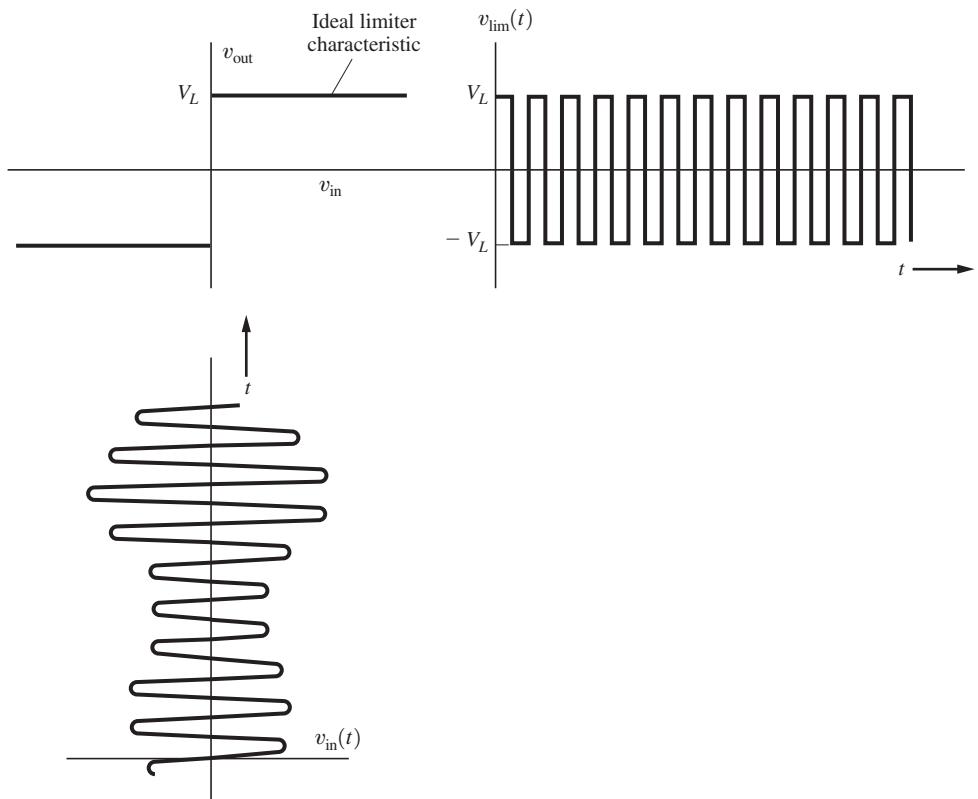


Figure 4-7 Ideal limiter characteristic with illustrative input and unfiltered output waveforms.

an ideal comparator with a zero reference level. The waveforms shown in Fig. 4-7 illustrate how amplitude variations in the input signal are eliminated in the output signal. A *bandpass limiter* is a nonlinear circuit with a saturating characteristic followed by a bandpass filter. In the case of an ideal bandpass limiter, the filter output waveform would be sinusoidal, since the harmonics of the square wave would be filtered out. In general, any bandpass input (even a modulated signal plus noise) can be represented, using Eq. (4-1b), by

$$v_{in}(t) = R(t) \cos[\omega_c t + \theta(t)] \quad (4-54)$$

where $R(t)$ is the equivalent real envelope and $\theta(t)$ is the equivalent phase function. The corresponding output of an ideal bandpass limiter becomes

$$v_{out}(t) = KV_L \cos[\omega_c t + \theta(t)] \quad (4-55)$$

where K is the level of the fundamental component of the square wave, $4/\pi$, multiplied by the gain of the output (bandpass) filter. This equation indicates that any AM that was present on the limiter input does not appear on the limiter output, but that the phase function is preserved

(i.e., the zero-crossings of the input are preserved on the limiter output). Limiters are often used in receiving systems designed for angle-modulated signaling—such as PSK, FSK, and analog FM—to eliminate any variations in the real envelope of the receiver input signal that are caused by channel noise or signal fading.

4-11 MIXERS, UP CONVERTERS, AND DOWN CONVERTERS

An *ideal mixer* is an electronic circuit that functions as a mathematical multiplier of two input signals. Usually, one of these signals is a sinusoidal waveform produced by a local oscillator, as illustrated in Fig. 4-8.

Mixers are used to obtain frequency translation of the input signal. Assume that the input signal is a bandpass signal that has a nonzero spectrum in a band around or near $f=f_c$. Then the signal is represented by

$$v_{\text{in}}(t) = \text{Re}\{g_{\text{in}}(t)e^{j\omega_c t}\} \quad (4-56)$$

where $g_{\text{in}}(t)$ is the complex envelope of the input signal. The signal out of the ideal mixer is then

$$\begin{aligned} v_1(t) &= [A_0 \text{Re}\{g_{\text{in}}(t)e^{j\omega_c t}\}] \cos \omega_0 t \\ &= \frac{A_0}{4} [g_{\text{in}}(t)e^{j\omega_c t} + g_{\text{in}}^*(t)e^{-j\omega_c t}](e^{j\omega_0 t} + e^{-j\omega_0 t}) \\ &= \frac{A_0}{4} [g_{\text{in}}(t)e^{j(\omega_c+\omega_0)t} + g_{\text{in}}^*(t)e^{-j(\omega_c+\omega_0)t} + g_{\text{in}}(t)e^{j(\omega_c-\omega_0)t} + g_{\text{in}}^*(t)e^{-j(\omega_c-\omega_0)t}] \end{aligned}$$

or

$$v_1(t) = \frac{A_0}{2} \text{Re}\{g_{\text{in}}(t)e^{j(\omega_c+\omega_0)t}\} + \frac{A_0}{2} \text{Re}\{g_{\text{in}}(t)e^{j(\omega_c-\omega_0)t}\} \quad (4-57)$$

Equation (4-57) illustrates that the input bandpass signal with a spectrum near $f=f_c$ has been converted (i.e., frequency translated) into two output bandpass signals, one at the

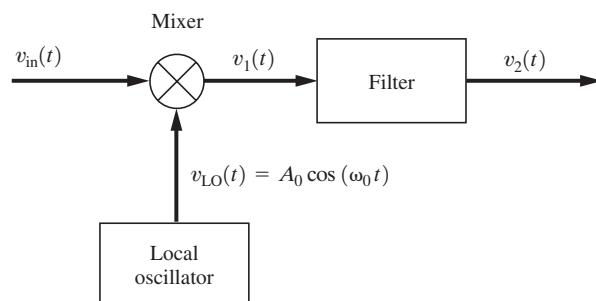


Figure 4-8 Mixer followed by a filter for either up or down conversion.

up-conversion frequency band, where $f_u = f_c + f_0$, and one at the down-conversion band, where $f_d = f_c - f_0$. A filter, as illustrated in Fig. 4–8, may be used to select either the up-conversion component or the down-conversion component. This combination of a mixer plus a filter to remove one of the mixer output components is often called a *single-sideband mixer*. A *bandpass* filter is used to select the up-conversion component, but the down-conversion component is selected by either a *baseband* filter or a *bandpass* filter, depending on the location of $f_c - f_0$. For example, if $f_c - f_0 = 0$, a low-pass filter would be needed, and the resulting output spectrum would be a baseband spectrum. If $f_c - f_0 > 0$, where $f_c - f_0$ was larger than the bandwidth of $g_{\text{in}}(t)$, a bandpass filter would be used, and the filter output would be

$$v_2(t) = \operatorname{Re}\{g_2(t)e^{j(\omega_c - \omega_0)t}\} = \frac{A_0}{2} \operatorname{Re}\{g_{\text{in}}(t)e^{j(\omega_c - \omega_0)t}\} \quad (4-58)$$

For this case of $f_c > f_0$, it is seen that the modulation on the mixer input signal $v_{\text{in}}(t)$ is preserved on the mixer up- or down-converted signals.

If $f_c < f_0$, we rewrite Eq. (4–57), obtaining

$$v_1(t) = \frac{A_0}{2} \operatorname{Re}\{g_{\text{in}}(t)e^{j(\omega_c + \omega_0)t}\} + \frac{A_0}{2} \operatorname{Re}\{g_{\text{in}}^*(t)e^{j(\omega_0 - \omega_c)t}\} \quad (4-59)$$

because the frequency in the exponent of the bandpass signal representation needs to be positive for easy physical interpretation of the location of spectral components. For this case of $f_c < f_0$, the complex envelope of the down-converted signal has been conjugated compared to the complex envelope of the input signal. This is equivalent to saying that the sidebands have been exchanged; that is, the upper sideband of the input signal spectrum becomes the lower sideband of the down-converted output signal, and so on. This is demonstrated mathematically by looking at the spectrum of $g^*(t)$, which is

$$\begin{aligned} \mathcal{F}[g_{\text{in}}^*(t)] &= \int_{-\infty}^{\infty} g_{\text{in}}^*(t)e^{-j\omega t} dt = \left[\int_{-\infty}^{\infty} g_{\text{in}}(t)e^{-j(-\omega)t} dt \right]^* \\ &= G_{\text{in}}^*(-f) \end{aligned} \quad (4-60)$$

The $-f$ indicates that the upper and lower sidebands have been exchanged, and the conjugate indicates that the phase spectrum has been inverted.

In summary, the complex envelope for the signal out of an *up converter* is

$$g_2(t) = \frac{A_0}{2} g_{\text{in}}(t) \quad (4-61a)$$

where $f_u = f_c + f_0 > 0$. Thus, the same modulation is on the output signal as was on the input signal, but the amplitude has been changed by the $A_0/2$ scale factor.

For the case of *down conversion*, there are two possibilities. For $f_d = f_c - f_0 > 0$, where $f_0 < f_c$,

$$g_2(t) = \frac{A_0}{2} g_{\text{in}}(t) \quad (4-61b)$$

This is called down conversion with *low-side injection*, because the LO frequency is below that of the incoming signal (i.e., $f_0 < f_c$). Here the output modulation is the same as that of the input, except for the $A_0/2$ scale factor. The other possibility is $f_d = f_0 - f_c > 0$, where $f_0 > f_c$, which produces the output complex envelope

$$g_2 = \frac{A_0}{2} g_{\text{in}}^*(t) \quad (4-61c)$$

This is down conversion with *high-side injection*, because $f_0 > f_c$. Here the sidebands on the down-converted output signal are reversed from those on the input (e.g., an LSSB input signal becomes a USSB output signal).

Ideal mixers act as linear time-varying circuit elements, since

$$v_1(t) = (A \cos \omega_0 t) v_{\text{in}}(t)$$

where $A \cos \omega_0 t$ is the time-varying gain of the linear circuit. It should also be recognized that mixers used in communication circuits are essentially mathematical multipliers. They should not be confused with the audio mixers that are used in radio and TV broadcasting studios. An *audio mixer* is a summing amplifier with multiple inputs so that several inputs from several sources—such as microphones, tape decks, and CD decks—can be “mixed” (added) to produce one output signal. Unfortunately, the term *mixer* means entirely different things, depending on the context used. As used in transmitters and receivers, it means a multiplying operation that produces a frequency translation of the input signal. In audio systems, it means a summing operation to combine several inputs into one output signal.

In practice, the multiplying operation needed for mixers may be realized by using one of the following:

1. A continuously variable transconductance device, such as a dual-gate FET.
2. A nonlinear device.
3. A linear device with a time-varying discrete gain.

In the first method, when a dual-gate FET is used to obtain multiplication, $v_{\text{in}}(t)$ is usually connected to gate 1 and the local oscillator is connected to gate 2. The resulting output is

$$v_1(t) = K v_{\text{in}}(t) v_{\text{LO}}(t) \quad (4-62)$$

over the operative region, where $v_{\text{LO}}(t)$ is the local oscillator voltage. The multiplier is said to be of a *single-quadrant* type if the multiplier action of Eq. (4-62) is obtained only when both input waveforms, v_{in} and $v_{\text{LO}}(t)$, have either nonnegative or nonpositive values [i.e., a plot of the values of $v_{\text{in}}(t)$ versus $v_{\text{LO}}(t)$ falls within a single quadrant]. The multiplier is of the *two-quadrant* type if multiplier action is obtained when either $v_{\text{in}}(t)$ or $v_{\text{LO}}(t)$ is nonnegative or nonpositive and the other is arbitrary. The multiplier is said to be of the *four-quadrant* type when multiplier action is obtained regardless of the signs of $v_{\text{in}}(t)$ and $v_{\text{LO}}(t)$.

In the second technique, a nonlinear device can be used to obtain multiplication by summing the two inputs as illustrated in Fig. 4-9. Looking at the square-law component at the output, we have

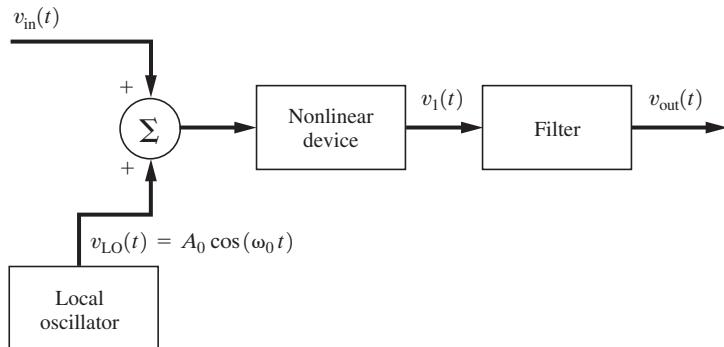


Figure 4–9 Nonlinear device used as a mixer.

$$\begin{aligned}
 v_1(t) &= K_2(v_{\text{in}} + v_{\text{LO}})^2 + \text{other terms} \\
 &= K_2(v_{\text{in}}^2 + 2v_{\text{in}}v_{\text{LO}} + v_{\text{LO}}^2) + \text{other terms}
 \end{aligned} \tag{4–63}$$

The cross-product term gives the desired multiplier action:

$$2K_2v_{\text{in}}v_{\text{LO}} = 2K_2A_0v_{\text{in}}(t) \cos \omega_0 t \tag{4–64}$$

If we assume that $v_{\text{in}}(t)$ is a bandpass signal, the filter can be used to pass either the up- or down-conversion terms. However, some distortion products may also fall within the output passband if ω_c and ω_0 are not chosen carefully.

In the third method, a linear device with time-varying gain is used to obtain multiplier action. This is demonstrated in Fig. 4–10, in which the time-varying device is an analog switch (such as a CMOS 4016 integrated circuit) that is activated by a square-wave oscillator signal $s(t)$. The gain of the switch is either unity or zero. The waveform at the output of the analog switch is

$$v_1(t) = v_{\text{in}}(t)s(t) \tag{4–65}$$

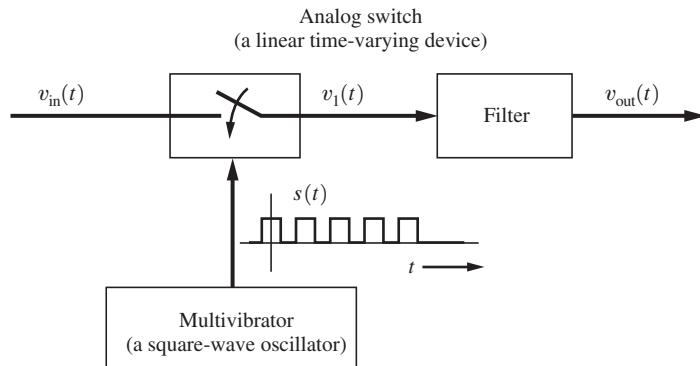


Figure 4–10 Linear time-varying device used as a mixer.

where $s(t)$ is a unipolar switching square wave that has unity peak amplitude. (This is analogous to the PAM with natural sampling that was studied in Chapter 3.) Using the Fourier series for a rectangular wave, we find that Eq. (4–65) becomes

$$v_1(t) = v_{\text{in}}(t) \left[\frac{1}{2} + \sum_{n=1}^{\infty} \frac{2 \sin(n\pi/2)}{n\pi} \cos n\omega_0 t \right] \quad (4-66)$$

The multiplying action is obtained from the $n = 1$ term, which is

$$\frac{2}{\pi} v_{\text{in}}(t) \cos \omega_0 t \quad (4-67)$$




This term would generate up- and down-conversion signals at $f_c + f_0$ and $f_c - f_0$ if $v_{\text{in}}(t)$ were a bandpass signal with a nonzero spectrum in the vicinity of $f = f_c$. However, Eq. (4–66) shows that other frequency bands are also present in the output signal, namely, at frequencies $f = |f_c \pm nf_0|$, $n = 3, 5, 7, \dots$ and, in addition, there is the feed-through term $\frac{1}{2}v_{\text{in}}(t)$ appearing at the output. Of course, a filter may be used to pass either the up- or down-conversion component appearing in Eq. (4–66).

Mixers are often classified as being *unbalanced*, *single balanced*, or *double balanced*. That is, in general, we obtain

$$v_1(t) = C_1 v_{\text{in}}(t) + C_2 v_0(t) + C_3 v_{\text{in}}(t)v_0(t) + \text{other terms} \quad (4-68)$$

at the output of mixer circuits. When C_1 and C_2 are not zero, the mixer is said to be *unbalanced*, since $v_{\text{in}}(t)$ and $v_0(t)$ feed through to the output. An unbalanced mixer was illustrated in Fig. 4–9, in which a nonlinear device was used to obtain mixing action. In the Taylor's expansion of the nonlinear device output-to-input characteristics, the linear term would provide feed-through of both $v_{\text{in}}(t)$ and $v_0(t)$. A *single-balanced mixer* has feed-through for only one of the inputs; that is, either C_1 or C_2 of Eq. (4–68) is zero. An example of a single-balanced mixer is given in Fig. 4–10, which uses sampling to obtain mixer action. In this example, Eq. (4–66) demonstrates that $v_0(t)$ is balanced out (i.e., $C_2 = 0$) and $v_{\text{in}}(t)$ feeds through with a gain of $C_1 = \frac{1}{2}$. A *double-balanced mixer* has no feed-through from either input; that is, both C_1 and C_2 of Eq. (4–68) are zero. One kind of double-balanced mixer is discussed in the next paragraph.

Figure 4–11a shows the circuit for a double-balanced mixer. This circuit is popular because it is relatively inexpensive and has excellent performance. The third-order IMD is typically down at least 50 dB compared with the desired output components. This mixer is usually designed for source and load impedances of 50Ω and has broadband input and output ports. The RF [i.e., $v_{\text{in}}(t)$] port and the LO (local oscillator) port are often usable over a frequency range of 1,000:1, say, 1 to 1,000 MHz; and the IF (intermediate frequency) output port, $v_1(t)$, is typically usable from DC to 600 MHz. The transformers are made by using small toroidal cores, and the diodes are matched hot carrier diodes. The input signal level at the RF port is relatively small, usually less than -5 dBm , and the local oscillator level at the LO port is relatively large, say, $+5 \text{ dBm}$. The LO signal is large, and, in effect, turns the diodes on and off so that the diodes will act as switches. The LO provides the switching control

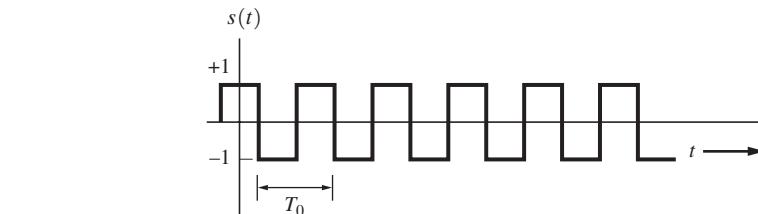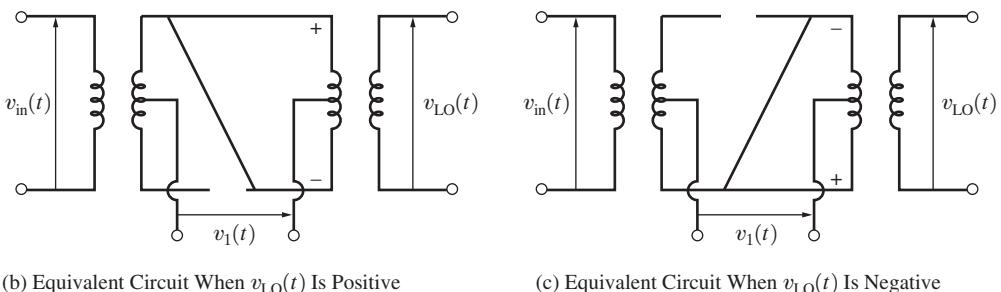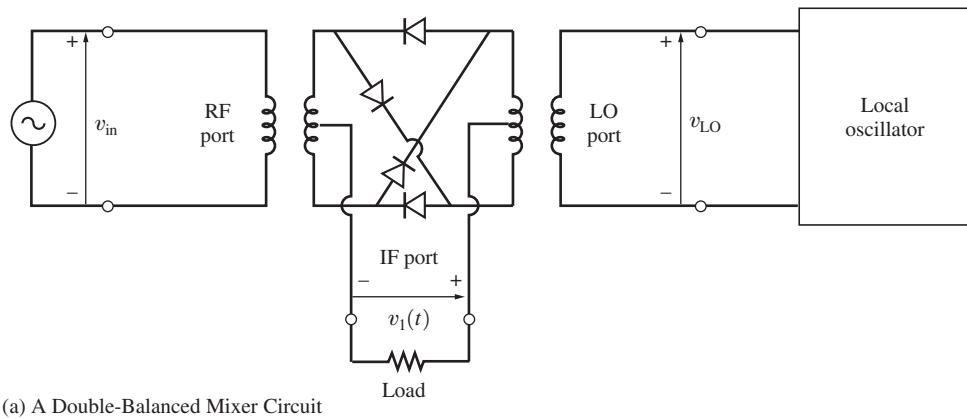

(d) Switching Waveform Due to the Local Oscillator Signal

Figure 4–11 Analysis of a double-balanced mixer circuit.

signal. This circuit thus acts as a time-varying linear circuit (with respect to the RF input port), and its analysis is very similar to that used for the analog-switch mixer of Fig. 4–10. During the portion of the cycle when $v_{LO}(t)$ has a positive voltage, the output voltage is proportional to $+v_{in}(t)$, as seen from the equivalent circuit shown in Fig. 4–11b. When $v_{LO}(t)$ is negative, the output voltage is proportional to $-v_{in}(t)$, as seen from the equivalent circuit shown in Fig. 4–11c. Thus, the output of this double-balanced mixer is

$$v_1(t) = K v_{in}(t) s(t) \quad (4-69)$$

where $s(t)$ is a bipolar switching waveform, as shown in Fig. 4–11d. Since the switching waveform arises from the LO signal, its period is $T_0 = 1/f_0$. The switching waveform is described by

$$s(t) = 4 \sum_{n=1}^{\infty} \frac{\sin(n\pi/2)}{n\pi} \cos n\omega_0 t \quad (4-70)$$

so that the mixer output is

$$v_1(t) = [v_{\text{in}}(t)] \left[4K \sum_{n=1}^{\infty} \frac{\sin(n\pi/2)}{n\pi} \cos n\omega_0 t \right] \quad (4-71)$$

This equation shows that if the input is a bandpass signal with nonzero spectrum in the vicinity of f_c , the spectrum of the input will be translated to the frequencies $|f_c \pm nf_0|$, where $n = 1, 3, 5, \dots$. In practice, the value K is such that the conversion gain (which is defined as the desired output level divided by the input level) at the frequency $|f_c \pm f_0|$ is about –6 dB. Of course, an output filter may be used to select the up-converted or down-converted frequency band.

In addition to up- or down-conversion applications, mixers (i.e., multipliers) may be used for amplitude modulators to translate a baseband signal to an RF frequency band, and mixers may be used as product detectors to translate RF signals to baseband. These applications will be discussed in later sections that deal with transmitters and receivers.

4–12 FREQUENCY MULTIPLIERS

Frequency multipliers consist of a nonlinear circuit followed by a tuned circuit, as illustrated in Fig. 4–12. If a bandpass signal is fed into a frequency multiplier, the output will appear in a frequency band at the n th harmonic of the input carrier frequency. Because the device is nonlinear, the bandwidth of the n th harmonic output is larger than that of the input signal. In general, the bandpass input signal is represented by

$$v_{\text{in}}(t) = R(t) \cos[\omega_c t + \theta(t)] \quad (4-72)$$


The transfer function of the nonlinear device may be expanded in a Taylor's series, so that the n th-order output term is

$$v_1(t) = K_n v_{\text{in}}^n(t) = K_n R^n(t) \cos^n[\omega_c t + \theta(t)]$$


or[†]

$$v_1(t) = CR^n(t) \cos[n\omega_c t + n\theta(t)] + \text{other terms}$$

[†] m th-order output terms, where $m > n$, may also contribute to the n th harmonic output, provided that K_m is sufficiently large with respect to K_n . This condition is illustrated by the trigonometric identity $8\cos^4 x = 3 + 4\cos 2x + \cos 4x$, in which $m = 4$ and $n = 2$.

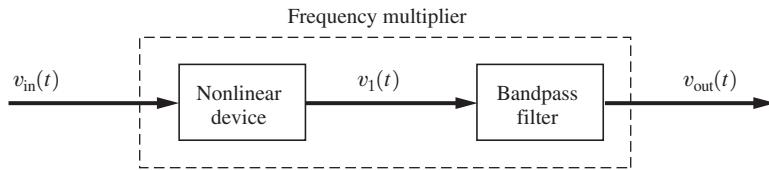

(a) Block Diagram of a Frequency Multiplier

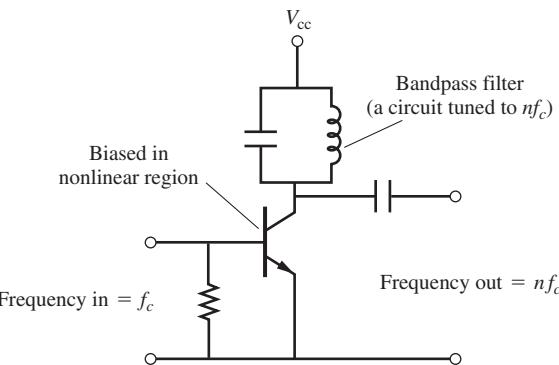

(b) Circuit Diagram of a Frequency Multiplier

Figure 4-12 Frequency multiplier.

Because the bandpass filter is designed to pass frequencies in the vicinity of nf_c , the output is

$$v_{out}(t) = CR^n(t) \cos [n\omega_c t + n\theta(t)] \quad (4-73)$$

This illustrates that the input *amplitude* variation $R(t)$ appears *distorted* on the output signal because the real envelope on the output is $R^n(t)$. The waveshape of the *angle* variation, $\theta(t)$, is *not distorted* by the frequency multiplier, but the frequency multiplier does increase the magnitude of the angle variation by a factor of n . Thus, frequency multiplier circuits are not used on signals if AM is to be preserved; but as we will see, the frequency multiplier is very useful in PM and FM problems, since it effectively “amplifies” the angle variation waveform $\theta(t)$. The $n = 2$ multiplier is called a *doubler stage*, and the $n = 3$ frequency multiplier is said to be a *tripler stage*.

The frequency multiplier should not be confused with a mixer. The frequency multiplier acts as a nonlinear device. The mixer circuit (which uses a mathematical multiplier operation) acts as a linear circuit with time-varying gain (caused by the LO signal). The bandwidth of the signal at the output of a frequency multiplier is larger than that of the input signal, and it appears in a frequency band located at the n th harmonic of the input. The bandwidth of a signal at the output of a mixer is the same as that of the input, but the input spectrum has been translated either up or down, depending on the LO frequency and the bandpass of the output filter. A frequency multiplier is essentially a nonlinear amplifier followed by a bandpass filter that is designed to pass the n th harmonic.

4-13 DETECTOR CIRCUITS

As indicated in Fig. 4-1, the receiver contains carrier circuits that convert the input bandpass waveform into an output baseband waveform. These carrier circuits are called *detector circuits*. The sections that follow will show how detector circuits can be designed to produce $R(t)$, $\theta(t)$, $x(t)$, or $y(t)$ at their output for the corresponding bandpass signal that is fed into the detector input.


Envelope Detector

An *ideal envelope detector* is a circuit that produces a waveform at its output that is proportional to the real envelope $R(t)$ of its input. From Eq. (4-1b), the bandpass input may be represented by $R(t) \cos[\omega_c t + \theta(t)]$, where $R(t) \geq 0$; then the output of the ideal envelope detector is


$$v_{\text{out}}(t) = KR(t) \quad (4-74)$$

where K is the proportionality constant.

A simple diode detector circuit that approximates an ideal envelope detector is shown in Fig. 4-13a. The diode current occurs in pulses that are proportional to the positive part of the input waveform. The current pulses charge the capacitor to produce the output voltage waveform, as illustrated in Fig. 4-13b. The RC time constant is chosen so that the output signal will follow the real envelope $R(t)$ of the input signal. Consequently, the cutoff frequency of

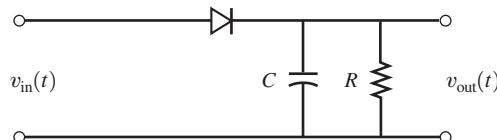

(a) A Diode Envelope Detector

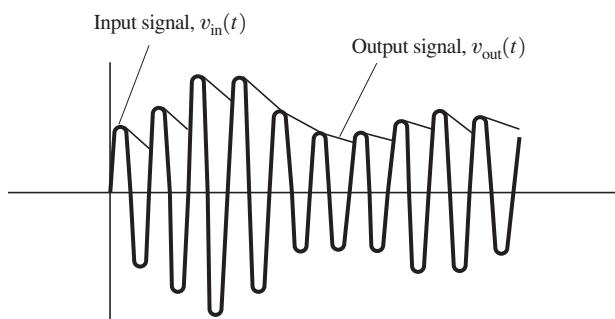

(b) Waveforms Associated with the Diode Envelope Detector

Figure 4-13 Envelope detector.

the low-pass filter needs to be much smaller than the carrier frequency f_c and much larger than the bandwidth of the (detected) modulation waveform B . That is,

$$B \ll \frac{1}{2\pi RC} \ll f_c \quad (4-75)$$

where RC is the time constant of the filter.

The envelope detector is typically used to detect the modulation on AM signals. In this case, $v_{in}(t)$ has the complex envelope $g(t) = A_c[1 + m(t)]$, where $A_c > 0$ represents the strength of the received AM signal and $m(t)$ is the modulation. If $|m(t)| < 1$, then

$$v_{out} = KR(t) = K|g(t)| = KA_c[1 + m(t)] = KA_c + KA_cm(t)$$

KA_c is a DC voltage that is used to provide *automatic gain control* (AGC) for the AM receiver. That is, for KA_c relatively small (a weak AM signal received), the receiver gain is increased and vice versa. $KA_cm(t)$ is the detected modulation. For the case of audio (not video) modulation, typical values for the components of the envelope detector are $R = 10 \text{ k}\Omega$ and $C = 0.001 \mu\text{fd}$. This combination of values provides a low-pass filter cutoff frequency (3 dB down) of $f_{co} = 1/(2\pi RC) = 15.9 \text{ kHz}$, much less than f_c and larger than the highest audio frequency, B , used in typical AM applications.

Product Detector

A *product detector* (Fig. 4–14) is a mixer circuit that down-converts the input (bandpass signal plus noise) to baseband. The output of the multiplier is

$$\begin{aligned} v_1(t) &= R(t) \cos[\omega_c t + \theta(t)]A_0 \cos(\omega_c t + \theta_0) \\ &= \frac{1}{2}A_0R(t) \cos[\theta(t) - \theta_0] + \frac{1}{2}A_0R(t) \cos[2\omega_c t + \theta(t) + \theta_0] \end{aligned}$$

where the frequency of the oscillator is f_c and the phase is θ_0 . The low-pass filter passes only the down-conversion term, so that the output is

$$v_{out}(t) = \frac{1}{2}A_0R(t) \cos[\theta(t) - \theta_0] = \frac{1}{2}A_0 \operatorname{Re}\{g(t)e^{-j\theta_0}\} \quad (4-76)$$

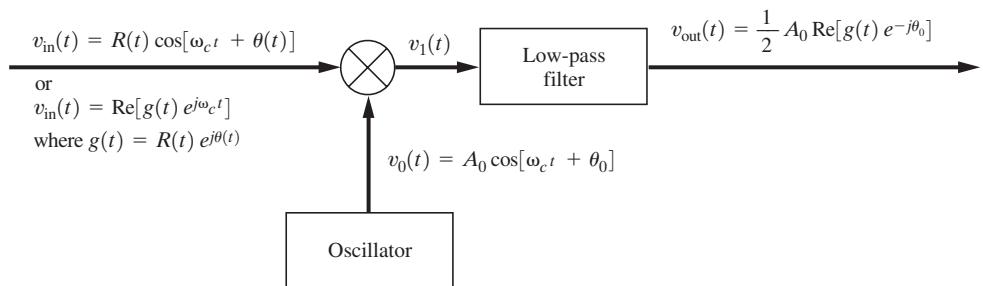


Figure 4–14 Product detector.

where the complex envelope of the input is denoted by

$$g(t) = R(t)e^{j\theta(t)} = x(t) + jy(t)$$

and $x(t)$ and $y(t)$ are the quadrature components. [See Eq. (4–2).] Because the frequency of the oscillator is the same as the carrier frequency of the incoming signal, the oscillator has been *frequency synchronized* with the input signal. Furthermore, if, in addition, $\theta_0 = 0$, the oscillator is said to be *phase synchronized* with the in-phase component, and the output becomes

$$v_{\text{out}}(t) = \frac{1}{2}A_0x(t) \quad (4-77a)$$

If $\theta_0 = 90^\circ$,

$$v_{\text{out}} = \frac{1}{2}A_0y(t) \quad (4-77b)$$

Equation (4–76) also indicates that a product detector is sensitive to AM and PM. For example, if the input contains no angle modulation, so that $\theta(t) = 0$, and if the reference phase is set to zero (i.e., $\theta_0 = 0$), then

$$v_{\text{out}}(t) = \frac{1}{2}A_0R(t) \quad (4-78a)$$

which implies that $x(t) \geq 0$, and the real envelope is obtained on the product detector output, just as in the case of the envelope detector discussed previously. However, if an angle-modulated signal $A_c \cos [\omega_c t + \theta(t)]$ is present at the input and $\theta_0 = 90^\circ$, the product detector output is

$$v_{\text{out}}(t) = \frac{1}{2}A_0 \operatorname{Re}\{A_c e^{j[\theta(t)-90^\circ]}\}$$

or

$$v_{\text{out}}(t) = \frac{1}{2}A_0A_c \sin \theta(t) \quad (4-78b)$$

In this case, the product detector acts like a *phase detector* with a *sinusoidal characteristic*, because the output voltage is proportional to the sine of the phase difference between the input signal and the oscillator signal. Phase detector circuits are also available that yield triangle and sawtooth characteristics [Krauss, Bostian, and Raab, 1980]. Referring to Eq. (4–78b) for the phase detector with a sinusoidal characteristic, and assuming that the phase difference is small [i.e., $|\theta(t)| \ll \pi/2$], we see that $\sin \theta(t) \approx \theta(t)$ and

$$v_{\text{out}}(t) \approx \frac{1}{2}A_0A_c\theta(t) \quad (4-79)$$

which is a linear characteristic (for small angles). Thus, the output of this phase detector is directly proportional to the phase differences when the difference angle is small. (See Fig. 4–20a.)

The product detector acts as a linear time-varying device with respect to the input $v_{\text{in}}(t)$, in contrast to the envelope detector, which is a nonlinear device. The property of being either linear or nonlinear significantly affects the results when two or more components, such as a signal plus noise, are applied to the input. This topic will be studied in Chapter 7.

Detectors may also be classified as being either coherent or noncoherent. A *coherent* detector has two inputs—one for a reference signal, such as the synchronized oscillator signal, and one for the modulated signal that is to be demodulated. The product detector is an example of a coherent detector. A *noncoherent* detector has only one input, namely, the modulated signal port. The envelope detector is an example of a noncoherent detector.

Frequency Modulation Detector

An *ideal frequency modulation (FM) detector* is a device that produces an output that is proportional to the instantaneous frequency of the input. That is, if the bandpass input is represented by $R(t) \cos [\omega_c t + \theta(t)]$, the output of the ideal FM detector is

$$v_{\text{out}}(t) = \frac{Kd[\omega_c t + \theta(t)]}{dt} = K \left[\omega_c + \frac{d\theta(t)}{dt} \right] \quad (4-80)$$

when the input is not zero (i.e. $R(t) \neq 0$).

Usually, the FM detector is *balanced*. This means that the DC voltage $K\omega_c$ does not appear on the output if the detector is tuned to (or designed for) the carrier frequency f_c . In this case, the output is

$$v_{\text{out}}(t) = K \frac{d\theta(t)}{dt} \quad (4-81)$$

There are many ways to build FM detectors, but almost all of them are based on one of three principles:

- FM-to-AM conversion.
- Phase-shift or quadrature detection.
- Zero-crossing detection.

A *slope detector* is one example of the FM-to-AM conversion principle. A block diagram is shown in Fig. 4–15. A bandpass limiter is needed to suppress any amplitude variations on the input signal, since these would distort the desired output signal.

The slope detector may be analyzed as follows. Suppose that the input is a fading signal with frequency modulation. From Table 4–1, this FM signal may be represented by

$$v_{\text{in}}(t) = A(t) \cos[\omega_c t + \theta(t)] \quad (4-82)$$

where

$$\theta(t) = K_f \int_{-\infty}^t m(t_1) dt_1 \quad (4-83)$$

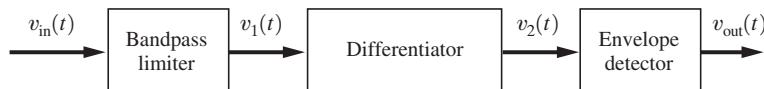


Figure 4–15 Frequency demodulation using slope detection.

$A(t)$ represents the envelope that is fading, and $m(t)$ is the modulation (e.g., audio) signal. It follows that the limiter output is proportional to

$$v_1(t) = V_L \cos[\omega_c t + \theta(t)] \quad (4-84)$$

and the output of the differentiator becomes

$$v_2(t) = -V_L \left[\omega_c + \frac{d\theta(t)}{dt} \right] \sin[\omega_c t + \theta(t)] \quad (4-85)$$

The output of the envelope detector is the magnitude of the complex envelope for $v_2(t)$:

$$v_{\text{out}}(t) = \left| -V_L \left[\omega_c + \frac{d\theta(t)}{dt} \right] \right|$$

Because $\omega_c \gg d\theta/dt$ in practice, this becomes

$$v_{\text{out}}(t) = V_L \left[\omega_c + \frac{d\theta(t)}{dt} \right]$$

Using Eq. (4-83), we obtain

$$v_{\text{out}}(t) = V_L \omega_c + V_L K_f m(t) \quad (4-86)$$

which indicates that the output consists of a DC voltage $V_L \omega_c$, plus the ac voltage $V_L K_f m(t)$, which is proportional to the modulation on the FM signal. Of course, a capacitor could be placed in series with the output so that only the ac voltage would be passed to the load.

The differentiation operation can be obtained by any circuit that acts like a frequency-to-amplitude converter. For example, a single-tuned resonant circuit can be used as illustrated in Fig. 4-16, where the magnitude transfer function is $|H(f)| = K_1 f + K_2$ over the linear (useful) portion of the characteristic. A balanced FM detector, which is also called a *balanced discriminator*, is shown in Fig. 4-17. Two tuned circuits are used to balance out the DC when the input has a carrier frequency of f_c and to provide an extended linear frequency-to-voltage conversion characteristic.

Balanced discriminators can also be built that function because of the phase-shift properties of a double-tuned RF transformer circuit with primary and secondary windings [Stark, Tuteur, and Anderson, 1988]. In practice, discriminator circuits have been replaced by integrated circuits that operate on the quadrature principle.

The *quadrature detector* is described as follows: A quadrature signal is first obtained from the FM signal; then, through the use of a product detector, the quadrature signal is multiplied with the FM signal to produce the demodulated signal $v_{\text{out}}(t)$. The quadrature signal can be produced by passing the FM signal through a capacitor (large) reactance that is connected in series with a parallel resonant circuit tuned to f_c . The quadrature signal voltage appears across the parallel resonant circuit. The series capacitance provides a 90° phase shift, and the resonant circuit provides an additional phase shift that is proportional to the

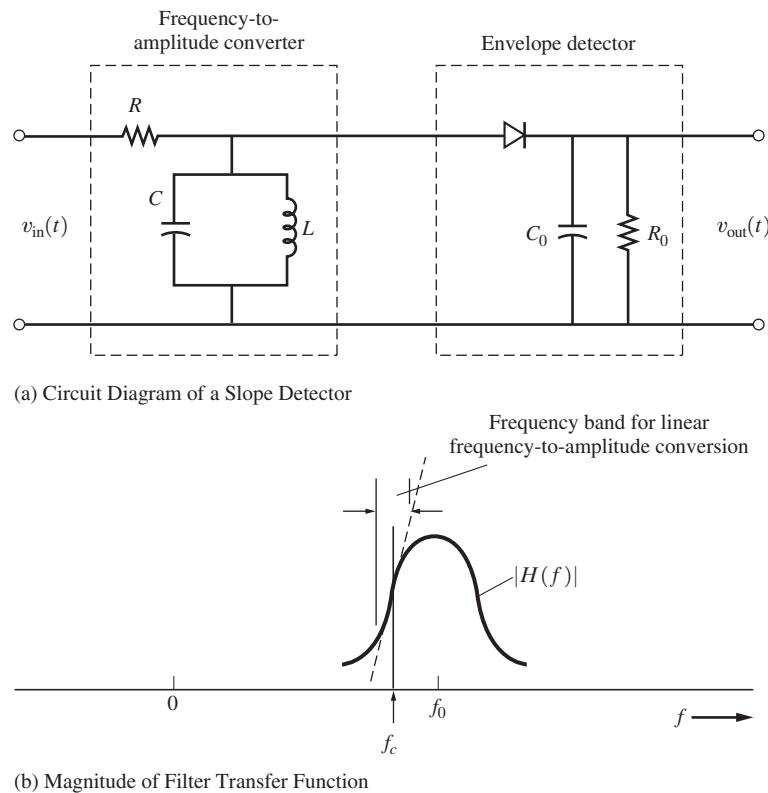


Figure 4-16 Slope detection using a single-tuned circuit for frequency-to-amplitude conversion.

instantaneous frequency deviation (from f_c) of the FM signal. From Eqs. (4-84) and (4-83), the FM signal is


$$v_{\text{in}}(t) = V_L \cos[\omega_c t + \theta(t)] \quad (4-87)$$

and the quadrature signal is


$$v_{\text{quad}}(t) = K_1 V_L \sin\left[\omega_c t + \theta(t) + K_2 \frac{d\theta(t)}{dt}\right] \quad (4-88)$$

where K_1 and K_2 are constants that depend on component values used for the series capacitor and in the parallel resonant circuit. These two signals, Eqs. (4-87) and (4-88), are multiplied together by a product detector (e.g., see Fig. 4-14) to produce the output signal

$$v_{\text{out}}(t) = \frac{1}{2} K_1 V_L^2 \sin\left[K_2 \frac{d\theta(t)}{dt}\right] \quad (4-89)$$

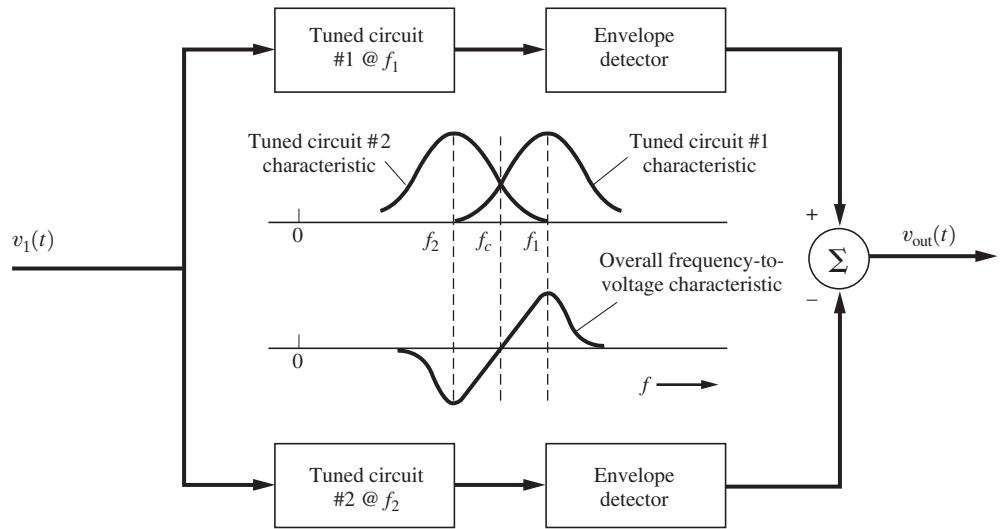

(a) Block Diagram

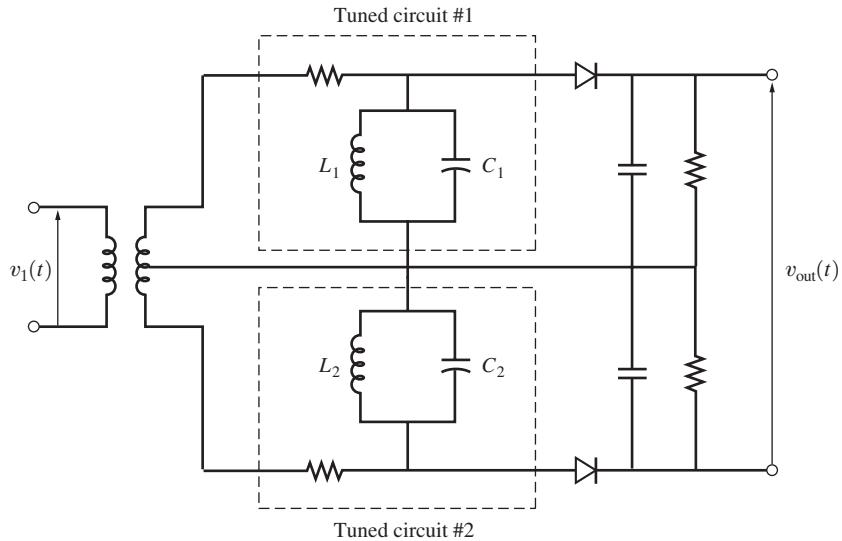

(b) Circuit Diagram

Figure 4–17 Balanced discriminator.

where the sum-frequency term is eliminated by the low-pass filter. For K_2 sufficiently small, $\sin x \approx x$, and by the use of Eq. (4–83), the output becomes

$$v_{\text{out}}(t) = \frac{1}{2} K_1 K_2 V_L^2 K_f m(t) \quad (4–90)$$

This demonstrates that the quadrature detector detects the modulation on the input FM signal. The quadrature detector principle is also used by phase-locked loops that are configured to detect FM. [See Eq. (4-110).]

As indicated by Eq. (4-80), the output of an ideal FM detector is directly proportional to the instantaneous frequency of the input. This linear frequency-to-voltage characteristic may be obtained directly by counting the zero-crossings of the input waveform. An FM detector utilizing this technique is called a *zero-crossing detector*. A hybrid circuit (i.e., a circuit consisting of both digital and analog devices) that is a balanced FM zero-crossing detector is shown in Fig. 4-18. The limited (square-wave) FM signal, denoted by $v_1(t)$, is

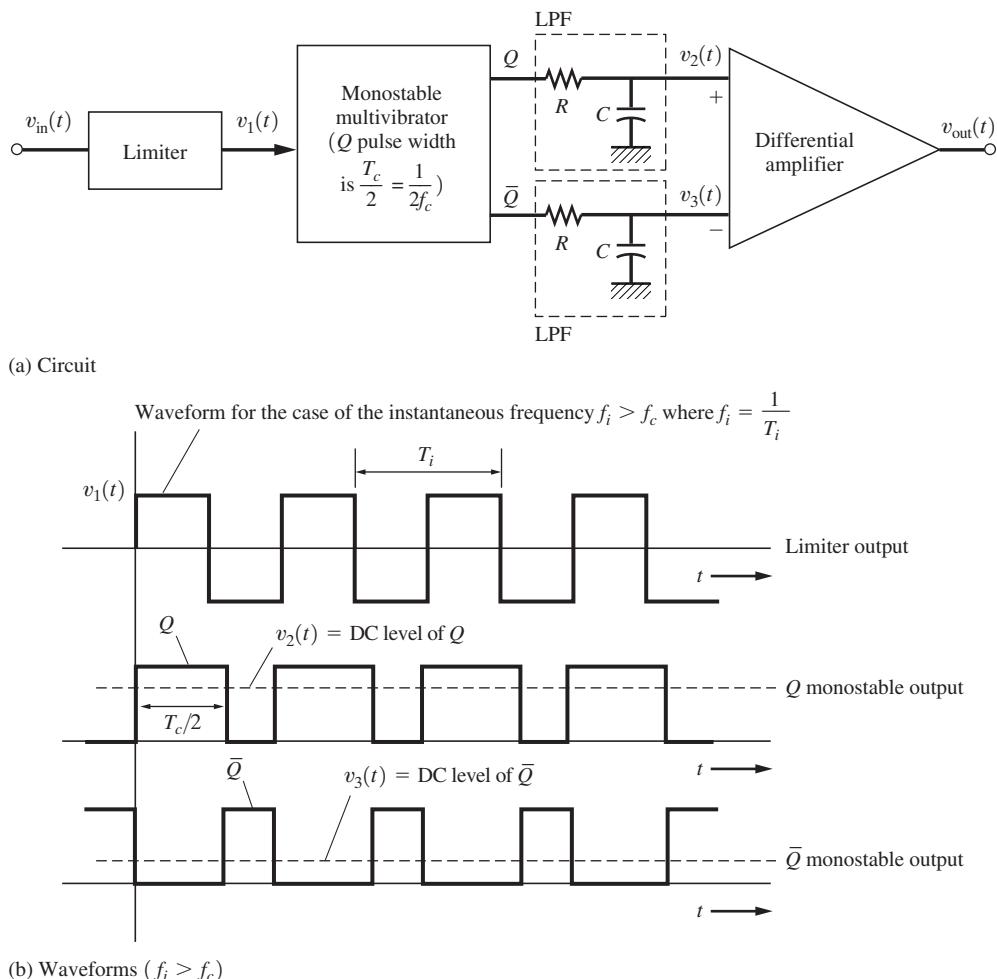


Figure 4-18 Balanced zero-crossing FM detector.

shown in Fig. 4–18b. For purposes of illustration, it is assumed that $v_1(t)$ is observed over that portion of the modulation cycle when the instantaneous frequency

$$f_i(t) = f_c + \frac{1}{2\pi} \frac{d\theta(t)}{dt} \quad (4-91)$$

is larger than the carrier frequency f_c . That is, $f_i > f_c$ in the illustration. Since the modulation voltage varies slowly with respect to the input FM signal oscillation, $v_1(t)$ appears (in the figure) to have a constant frequency, although it is actually varying in frequency according to $f_i(t)$. The monostable multivibrator (one-shot) is triggered on the positive slope zero-crossings of $v_1(t)$. For balanced FM detection, the pulse width of the Q output is set to $T_c/2 = 1/2f_c$, where f_c is the carrier frequency of the FM signal at the input. Thus, the differential amplifier output voltage is zero if $f_i = f_c$. For $f_i > f_c$ [as illustrated by the $v_1(t)$ waveform in the figure], the output voltage is positive, and for $f_i < f_c$, the output voltage will be negative. Hence, a linear frequency-to-voltage characteristic, $C [f_i(t) - f_c]$, is obtained where, for an FM signal at the input, $f_i(t) = f_c + (1/2\pi)K_f m(t)$.

Another circuit that can be used for FM demodulation, as well as for other purposes, is the phase-locked loop.

4-14 PHASE-LOCKED LOOPS AND FREQUENCY SYNTHESIZERS

A phase-locked loop (PLL) consists of three basic components: (1) a phase detector, (2) a low-pass filter, and (3) a voltage-controlled oscillator (VCO), as shown in Fig. 4–19. The VCO is an oscillator that produces a periodic waveform with a frequency that may be varied about some free-running frequency f_0 , according to the value of the applied voltage $v_2(t)$. The free-running frequency f_0 is the frequency of the VCO output when the applied voltage $v_2(t)$ is zero. The phase detector produces an output signal $v_1(t)$ that is a function of the phase difference between the incoming signal $v_{in}(t)$ and the oscillator signal $v_0(t)$. The filtered signal $v_2(t)$ is the control signal that is used to change the frequency of the VCO output. The PLL configuration may be designed so that it acts as a narrowband tracking filter when the

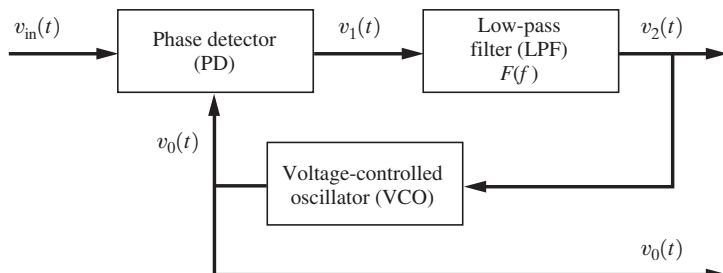


Figure 4–19 Basic PLL.

low-pass filter (LPF) is a narrowband filter. In this operating mode, the frequency of the VCO will become that of one of the line components of the input signal spectrum, so that, in effect, the VCO output signal is a periodic signal with a frequency equal to the average frequency of this input signal component. Once the VCO has acquired the frequency component, the frequency of the VCO will track the input signal component if it changes slightly in frequency. In another mode of operation, the bandwidth of the LPF is wider so that the VCO can track the instantaneous frequency of the whole input signal. When the PLL tracks the input signal in either of these ways, the PLL is said to be “locked.”

If the applied signal has an initial frequency of f_0 , the PLL will acquire a lock and the VCO will track the input signal frequency over some range, provided that the input frequency changes slowly. However, the loop will remain locked only over some finite range of frequency shift. This range is called the *hold-in* (or *lock*) *range*. The hold-in range depends on the overall DC gain of the loop, which includes the DC gain of the LPF. On the other hand, if the applied signal has an initial frequency different from f_0 , the loop may not acquire lock even though the input frequency is within the hold-in range. The frequency range over which the applied input will cause the loop to lock is called the *pull-in* (or *capture*) *range*. This range is determined primarily by the loop filter characteristics, and it is never greater than the hold-in range. (See Fig. 4–23.) Another important PLL specification is the *maximum locked sweep rate*, which is defined as the maximum rate of change of the input frequency for which the loop will remain locked. If the input frequency changes faster than this rate, the loop will drop out of lock.

If the PLL is built using analog circuits, it is said to be an *analog phase-locked loop* (APLL). Conversely, if digital circuits and signals are used, the PLL is said to be a *digital phase-locked loop* (DPLL). For example, the phase detection (PD) characteristic depends on the exact implementation used. Some PD characteristics are shown in Fig. 4–20. The sinusoidal characteristic is obtained if an (analog circuit) multiplier is used and the periodic signals are sinusoids. The multiplier may be implemented by using a double-balanced mixer. The triangle and sawtooth PD characteristics are obtained by using digital circuits. In addition to using digital VCO and PD circuits, the DPLL may incorporate a digital loop filter and signal-processing techniques that use microprocessors. Gupta [1975] published a fine tutorial paper on analog phase-locked loops in the *IEEE Proceedings*, and Lindsey and Chie [1981] followed with a survey paper on digital PLL techniques. In addition, there are excellent books available [Blanchard, 1976; Gardner, 1979; Best, 1999].

The PLL may be studied by examining the APLL, as shown in Fig. 4–21. In this figure, a multiplier (sinusoidal PD characteristic) is used. Assume that the input signal is

$$v_{in}(t) = A_i \sin[\omega_0 t + \theta_i(t)] \quad (4-92)$$

and that the VCO output signal is

$$v_0(t) = A_0 \cos[\omega_0 t + \theta_0(t)] \quad (4-93)$$

where

$$\theta_0(t) = K_v \int_{-\infty}^t v_2(\tau) d\tau \quad (4-94)$$

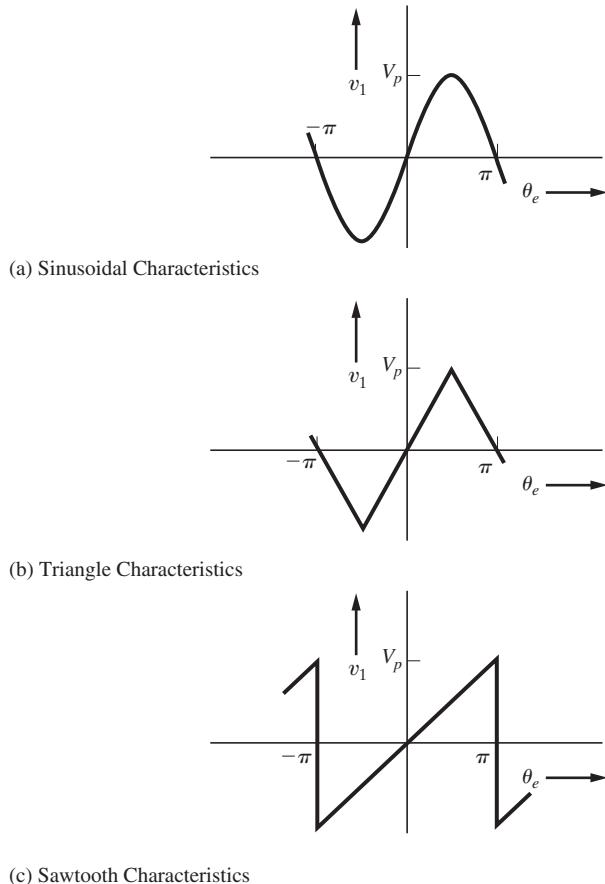


Figure 4-20 Some phase detector characteristics.

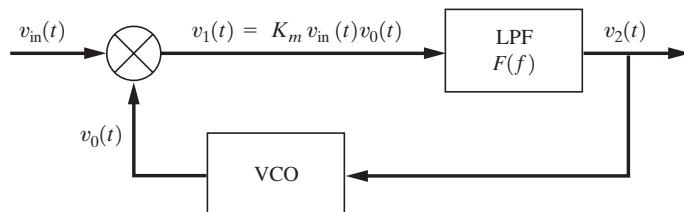


Figure 4-21 Analog PLL.

and K_v is the VCO gain constant (rad/V-s). Then PD output is

$$\begin{aligned}
 v_1(t) &= K_m A_i A_0 \sin[\omega_0 t + \theta_i(t)] \cos[\omega_0 t + \theta_0(t)] \\
 &= \frac{K_m A_i A_0}{2} \sin[\theta_i(t) - \theta_0(t)] + \frac{K_m A_i A_0}{2} \sin[2\omega_0 t + \theta_i(t) + \theta_0(t)]
 \end{aligned} \quad (4-95)$$

where K_m is the gain of the multiplier circuit. The sum frequency term does not pass through the LPF, so the LPF output is

$$v_2(t) = K_d[\sin \theta_e(t)] * f(t) \quad (4-96)$$

where

$$\theta_e(t) \triangleq \theta_i(t) - \theta_0(t) \quad (4-97)$$

$$K_d = \frac{K_m A_i A_0}{2} \quad (4-98)$$

and $f(t)$ is the impulse response of the LPF. $\theta_e(t)$ is called the *phase error*; K_d is the equivalent PD constant, which, for the multiplier-type PD, depends on the levels of the input signal A_i and the level of the VCO signal A_0 .

The overall equation describing the operation of the PLL may be obtained by taking the derivative of Eqs. (4–94) and (4–97) and combining the result by the use of Eq. (4–96). The resulting nonlinear equation that describes the PLL becomes

$$\frac{d\theta_e(t)}{dt} = \frac{d\theta_i(t)}{dt} - K_d K_v \int_0^t [\sin \theta_e(\lambda)] f(t - \lambda) d\lambda \quad (4-99)$$

where $\theta_e(t)$ is the unknown and $\theta_i(t)$ is the forcing function.

In general, this PLL equation is difficult to solve. However, it may be reduced to a linear equation if the gain K_d is large, so that the loop is locked and the error $\theta_e(t)$ is small. In this case, $\sin \theta_e(t) \approx \theta_e(t)$, and the resulting linear equation is

$$\frac{d\theta_e(t)}{dt} = \frac{d\theta_i(t)}{dt} - K_d K_v \theta_e(t) * f(t) \quad (4-100)$$

A block diagram based on this linear equation is shown in Fig. 4–22. In this linear PLL model (Fig. 4–22), the *phase* of the input signal and the *phase* of the VCO output signal are used instead of the actual signals themselves (Fig. 4–21). The closed-loop transfer function $\Theta_0(f)/\Theta_i(f)$ is

$$H(f) = \frac{\Theta_0(f)}{\Theta_i(f)} = \frac{K_d K_v F(f)}{j2\pi f + K_d K_v F(f)} \quad (4-101)$$

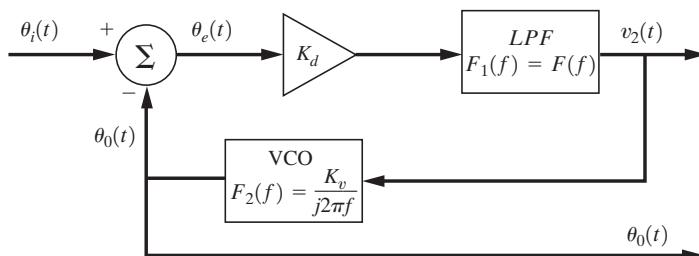


Figure 4–22 Linear model of the analog PLL.

where $\Theta_0(f) = \mathcal{F}[\theta_0(t)]$ and $\Theta_i(f) = \mathcal{F}[\theta_i(t)]$. Of course, the design and analysis techniques used to evaluate linear feedback control systems, such as Bode plots, which will indicate phase gain and phase margins, are applicable. In fact, they are extremely useful in describing the performance of *locked* PLLs.

The equation for the *hold-in range* may be obtained by examining the nonlinear behavior of the PLL. From Eqs. (4–94) and (4–96), the instantaneous frequency deviation of the VCO from ω_0 is

$$\frac{d\theta_0(t)}{dt} = K_v v_2(t) = K_v K_d [\sin \theta_e(t)] * f(t) \quad (4-102)$$

To obtain the hold-in range, the input frequency is changed very slowly from f_0 . Here the DC gain of the filter is the controlling parameter, and Eq. (4–102) becomes

$$\Delta\omega = K_v K_d F(0) \sin \theta_e \quad (4-103)$$

The maximum and minimum values of $\Delta\omega$ give the hold-in range, and these are obtained when $\sin \theta_e = \pm 1$. Thus, the maximum hold-in range (the case with no noise) is

$$\Delta f_h = \frac{1}{2\pi} K_v K_d F(0) \quad (4-104)$$

A typical lock-in characteristic is illustrated in Fig. 4–23. The solid curve shows the VCO control signal $v_2(t)$ as the sinusoidal testing signal is swept from a low frequency to a high frequency (with the free-running frequency of the VCO, f_0 , being within the swept band). The dashed curve shows the result when sweeping from high to low. The hold-in range Δf_h is related to the DC gain of the PLL as described by Eq. (4–104).

The *pull-in range* Δf_p is determined primarily by the loop-filter characteristics. For example, assume that the loop has not acquired lock and that the testing signal is swept slowly toward f_0 . Then, the PD output, there will be a beat (oscillatory) signal, and its frequency $|f_{in} - f_0|$ will vary from a large value to a small value as the test signal frequency sweeps toward f_0 .

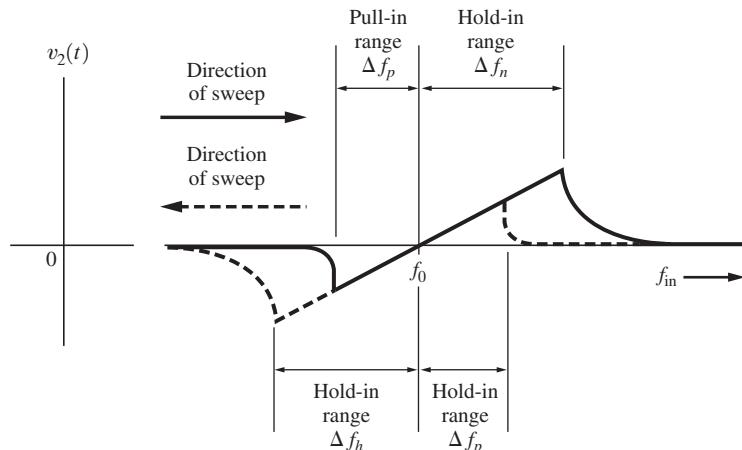


Figure 4–23 PLL VCO control voltage for a swept sinusoidal input signal.

As the testing signal frequency comes closer to f_0 , the beat-frequency waveform will become nonsymmetrical, in which case it will have a nonzero DC value. This DC value tends to change the frequency of the VCO to that of the input signal frequency, so that the loop will tend to lock. The pull-in range, Δf_p , where the loop acquires lock will depend on exactly how the loop filter $F(f)$ processes the PD output to produce the VCO control signal. Furthermore, even if the input signal is within the pull-in range, it may take a fair amount of time for the loop to acquire lock, since the LPF acts as an integrator and it takes some time for the control voltage (filter output) to build up to a value large enough for locking to occur. The analysis of the pull-in phenomenon is complicated. It is actually statistical in nature, because it depends on the initial phase relationship of the input and VCO signals and on noise that is present in the circuit. Consequently, in the measurement of Δf_p , several repeated trials may be needed to obtain a typical value.

The locking phenomenon is not peculiar to PLL circuits, but occurs in other types of circuits as well. For example, if an external signal is injected into the output port of an oscillator (i.e., a plain oscillator, not a VCO), the oscillator signal will tend to change frequency and will eventually lock onto the frequency of the external signal if the latter is within the pull-in range of the oscillator. This phenomenon is called *injection locking* or *synchronization* of an oscillator and may be modeled by a PLL model [Couch, 1971].

The PLL has numerous applications in communication systems, including (1) FM detection, (2) the generation of highly stable FM signals, (3) coherent AM detection, (4) frequency multiplication, (5) frequency synthesis, and (6) use as a building block within complicated digital systems to provide bit synchronization and data detection.

Let us now find what conditions are required for the PLL to become an FM detector. Referring to Fig. 4-21, let the PLL input signal be an FM signal. That is,

$$v_{\text{in}}(t) = A_i \sin \left[\omega_c t + D_f \int_{-\infty}^t m(\lambda) d\lambda \right] \quad (4-105a)$$

where

$$\theta_i(t) = D_f \int_{-\infty}^t m(\lambda) d\lambda \quad (4-105b)$$

or

$$\Theta_i(f) = \frac{D_f}{j2\pi f} M(f) \quad (4-105c)$$

and $m(t)$ is the baseband (e.g., audio) modulation that is to be detected. We would like to find the conditions such that the PLL output, $v_2(t)$, is proportional to $m(t)$. Assume that f_c is within the capture (pull-in) range of the PLL; thus, for simplicity, let $f_0 = f_c$. Then the linearized PLL model, as shown in Fig. 4-22, can be used for analysis. Working in the frequency domain, we obtain the output

$$V_2(f) = \frac{\left(j \frac{2\pi f}{K_v}\right) F_1(f)}{F_1(f) + j\left(\frac{2\pi f}{K_v K_d}\right)} \Theta_i(f)$$

which, by the use of Eq. (4–105c), becomes

$$V_2(f) = \frac{\frac{D_f}{K_v} F_1(f)}{F_1(f) + j\left(\frac{2\pi f}{K_v K_d}\right)} M(f) \quad (4-106)$$

Now we find the conditions such that $V_2(f)$ is proportional to $M(f)$. Assume that the bandwidth of the modulation is B hertz, and let $F_1(f)$ be a low-pass filter. Thus,

$$F(f) = F_1(f) = 1, \quad |f| < B \quad (4-107)$$

Also, let

$$\frac{K_v K_d}{2\pi} \gg B \quad (4-108)$$

Then Eq. (4–106) becomes

$$V_2(f) = \frac{D_f}{K_v} M(f) \quad (4-109)$$

or

$$v_2(t) = Cm(t) \quad (4-110)$$

where the constant of proportionality is $C = D_f/K_v$. Hence, the PLL circuit of Fig. 4–21 will become an FM detector circuit, where $v_2(t)$ is the detected FM output when the conditions of Eqs. (4–107) and (4–108) are satisfied.

In another application, the PLL may be used to supply the coherent oscillator signal for product detection of an AM signal (Fig. 4–24). Recall from Eqs. (4–92) and (4–93) that the VCO of a PLL locks 90° out of phase with respect to the incoming signal.[†] Then $v_0(t)$ needs to be shifted by -90° so that it will be in phase with the carrier of the input AM signal, the requirement for coherent detection of AM, as given by Eq. (4–77). In this application, the bandwidth of the LPF needs to be just wide enough to provide the necessary pull-in range in order for the VCO to be able to lock onto the carrier frequency f_c .

Figure 4–25 illustrates the use of a PLL in a frequency synthesizer. The synthesizer generates a periodic signal of frequency

$$f_{\text{out}} = \left(\frac{N}{M}\right) f_x \quad (4-111)$$

[†] This results from the characteristic of the phase detector circuit. The statement is correct for a PD that produces a zero DC output voltage when the two PD input signals are 90° out of phase (i.e., a multiplier-type PD). However, if the PD circuit produced a zero DC output when the two PD inputs were in phase, the VCO of the PLL would lock in phase with the incoming PLL signal.

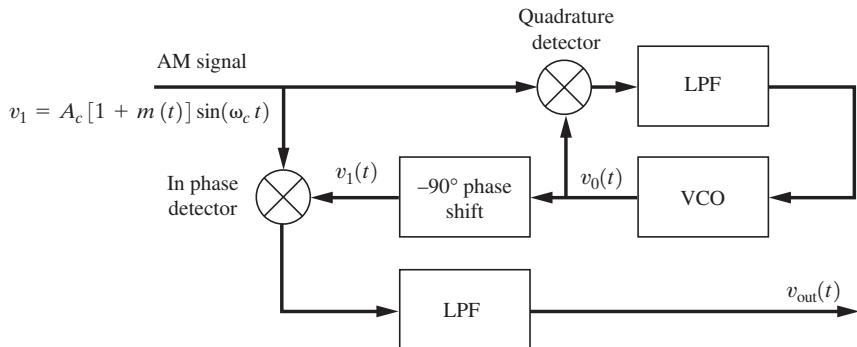


Figure 4-24 PLL used for coherent detection of AM.

where f_x is the frequency of the stable oscillator and N and M are the frequency-divider parameters. This result is verified by recalling that when the loop is locked, the DC control signal $v_3(t)$ shifts the frequency of the VCO so that $v_2(t)$ will have the same frequency as $v_{in}(t)$. Thus,

$$\frac{f_x}{M} = \frac{f_{out}}{N} \quad (4-112)$$

which is equivalent to Eq. (4-111).

Classical frequency dividers use *integer values* for M and N . Furthermore, if programmable dividers are used, the synthesizer output frequency may be changed by using software that programs a microprocessor to select the appropriate values of M and N , according to Eq. (4-111). This technique is used in frequency synthesizers that are built into modern receivers with digital tuning. (See study aid Prob. SA4-6, for example, of frequency synthesizer design.) For the case of $M = 1$, the frequency synthesizer acts as a frequency multiplier.

Equivalent *noninteger values* for N can be obtained by periodically changing the divider count over a set of similar integer values. This produces an average N value that is noninteger and is called the *fractional-N* technique. With fractional- N synthesizers, the instantaneous value of N changes with time, and this can modulate the VCO output signal to produce unwanted (spurious) sidebands in the spectrum. By careful design the sideband noise can be

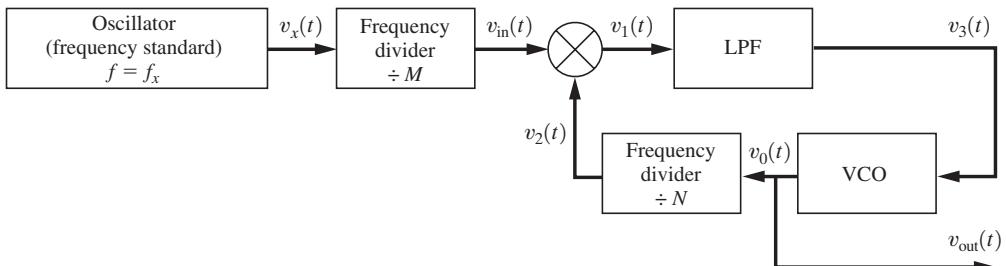


Figure 4-25 PLL used in a frequency synthesizer.

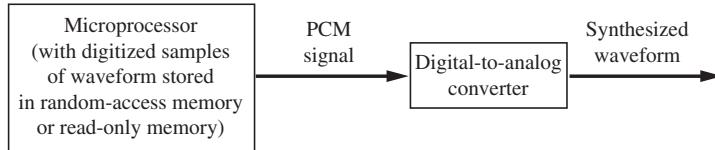


Figure 4–26 Direct digital synthesis (DDS).

reduced to a low level [Conkling, 1998]. More complicated PLL synthesizer configurations can be built that incorporate mixers and additional oscillators.

4–15 DIRECT DIGITAL SYNTHESIS

Direct digital synthesis (DDS) is a method for generating a desired waveform (such as a sine wave) by using the computer technique described in Fig. 4–26. To configure the DDS system to generate a waveform, samples of the desired waveform are converted into PCM words and stored in the memory (random-access memory [RAM] or read-only memory [ROM]) of the microprocessor system. The DDS system can then generate the desired waveform by “playing back” the stored words into the digital-to-analog converter.

This DDS technique has many attributes. For example, if the waveform is periodic, such as a sine wave, only one cycle of samples needs to be stored in memory. The continuous sine wave can be generated by repeatedly cycling through the memory. The frequency of the generated sine wave is determined by the rate at which the memory is read out. If desired, the microprocessor can be programmed to generate a certain frequency during a certain time interval and then switch to a different frequency (or another waveshape) during a different time interval. Also, simultaneous sine and cosine (two-phase) outputs can be generated by adding another DAC. The signal-to-quantizing noise can be designed to be as large as desired by selecting the appropriate number of bits that are stored for each PCM word, as described by Eq. (3–18).

The DDS technique is replacing analog circuits in many applications. For example, in higher-priced communications receivers, the DDS technique is used as a frequency synthesizer to generate local oscillator signals that tune the radio. (See Sec. 4–16.) In electronic pipe organs and music synthesizers, DDS can be used to generate authentic as well as weird sounds. Instrument manufacturers are using DDS to generate the output waveforms for function generators and arbitrary waveform generators (AWG). Telephone companies are using DDS to generate dial tones and busy signals. (See Chapter 8.)

4–16 TRANSMITTERS AND RECEIVERS

Generalized Transmitters

Transmitters generate the modulated signal at the carrier frequency f_c from the modulating signal $m(t)$. In Secs. 4–1 and 4–2, it was demonstrated that any type of modulated signal could be represented by

$$v(t) = \operatorname{Re}\{g(t)e^{j\omega_ct}\} \quad (4-113)$$

or, equivalently,

$$v(t) = R(t) \cos[\omega_c t + \theta(t)] \quad (4-114)$$

and

$$v(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t \quad (4-115)$$

where the complex envelope

$$g(t) = R(t)e^{j\theta(t)} = x(t) + jy(t) \quad (4-116)$$

is a function of the modulating signal $m(t)$. The particular relationship that is chosen for $g(t)$ in terms of $m(t)$ defines the type of modulation that is used, such as AM, SSB, or FM. (See Table 4–1.) A generalized approach may be taken to obtain universal transmitter models that may be reduced to those used for a particular type of modulation. We will also see that there are equivalent models that correspond to different circuit configurations, yet they may be used to produce the same type of modulated signal at their outputs. It is up to the designer to select an implementation method that will maximize performance, yet minimize cost, based on the state of the art in circuit development.

There are two canonical forms for the generalized transmitter, as indicated by Eqs. (4–114) and (4–115). Equation (4–114) describes an AM–PM type of circuit, as shown in Fig. 4–27. The baseband signal-processing circuit generates $R(t)$ and $\theta(t)$ from $m(t)$. The R and θ are functions of the modulating signal $m(t)$, as given in Table 4–1 for the particular type of modulation desired. The signal processing may be implemented by using either nonlinear analog circuits or a digital computer that incorporates the R and θ algorithms under software program control. In the implementation using a digital computer, one ADC will be needed at the input and two DACs will be needed at the output. The remainder of the AM–PM canonical form requires RF circuits, as indicated in the figure.

Figure 4–28 illustrates the second canonical form for the generalized transmitter. This uses in-phase and quadrature-phase (IQ) processing. Similarly, the formulas relating $x(t)$ and $y(t)$ to $m(t)$ are shown in Table 4–1, and the baseband signal processing may be implemented by using either analog hardware or digital hardware with software. The remainder of the canonical form uses RF circuits as indicated.

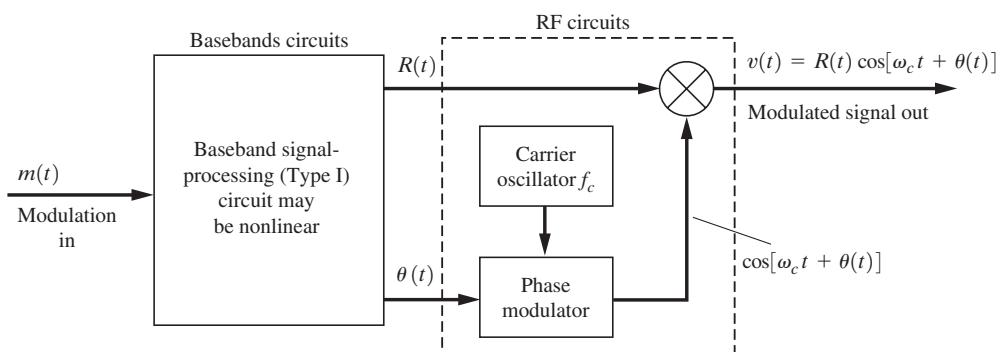


Figure 4–27 Generalized transmitter using the AM–PM generation technique.

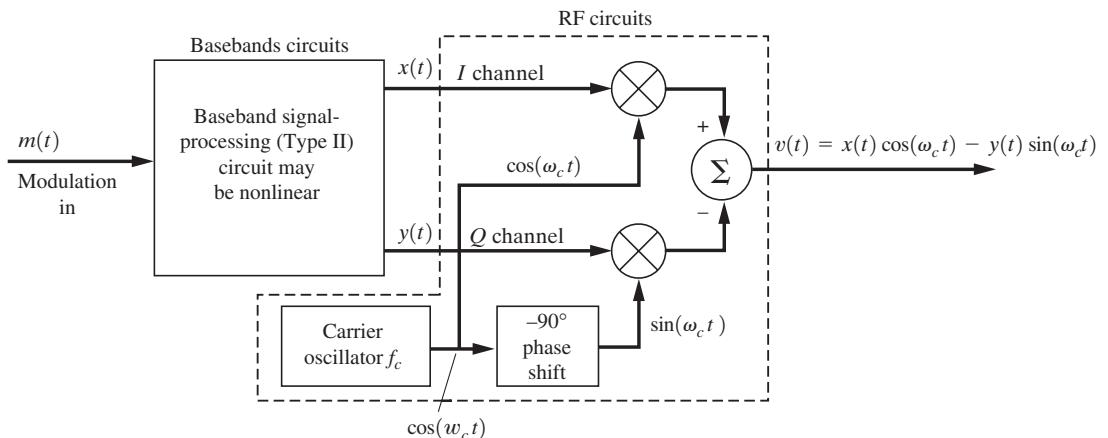


Figure 4–28 Generalized transmitter using the quadrature generation technique.

Example 4–5 GENERATION OF A QM SIGNAL BY IQ PROCESSING

Rework Example 4–1, but generate the QM signal by using IQ processing as shown in Fig. 4–28. See Example4_05.m for the solution. Note that the QM signal generated by IQ processing is identical to that obtained by complex envelope processing used for Example 4–1.

Once again, it is stressed that any type of signal modulation (AM, FM, SSB, QPSK, etc.) may be generated by using either of these two canonical forms. Both of these forms conveniently separate baseband processing from RF processing. Digital techniques are especially useful to realize the baseband-processing portion. Furthermore, if digital computing circuits are used, any desired type of modulation can be obtained by selecting the appropriate software algorithm.

Most of the practical transmitters in use today are special variations on these canonical forms. Practical transmitters may perform the RF operations at some convenient lower RF frequency and then up-convert to the desired operating frequency. In the case of RF signals that contain no AM, frequency multipliers may be used to arrive at the operating frequency. Of course, power amplifiers are usually required to bring the output power level up to the specified value. If the RF signal contains no amplitude variations, Class C amplifiers (which have relatively high efficiency) may be used; otherwise, Class B amplifiers are used.

Generalized Receiver: The Superheterodyne Receiver

The receiver has the job of extracting the source information from the received modulated signal that may be corrupted by noise. Often, it is desired that the receiver output be a replica of the modulating signal that was present at the transmitter input. There are two main classes of receivers: the *tuned radio-frequency* (TRF) receiver and the *superheterodyne* receiver.

The TRF receiver consists of a number of cascaded high-gain RF bandpass stages that are tuned to the carrier frequency f_c , followed by an appropriate detector circuit (an envelope detector, a product detector, an FM detector, etc.). The TRF is not very popular, because it is difficult to design tunable RF stages so that the desired station can be selected and yet have a narrow bandwidth so that adjacent channel stations are rejected. In addition, it is difficult to obtain high gain at radio frequencies and to have sufficiently small stray coupling between the output and input of the RF amplifying chain so that the chain will not become an oscillator at f_c . The “crystal set” that is built by the Cub Scouts is an example of a single-RF-stage TRF receiver that has no gain in the RF stage. TRF receivers are often used to measure time-dispersive (multipath) characteristics of radio channels [Rappaport, 1989].

Most receivers employ the *superheterodyne* receiving technique as shown in Fig. 4–29. The technique consists of either down-converting or up-converting the input signal to some convenient frequency band, called the *intermediate frequency* (IF) band, and then extracting the information (or modulation) by using the appropriate detector.[†] This basic receiver structure is used for the reception of all types of bandpass signals, such as television, FM, AM, satellite, cellular, and radar signals. The RF amplifier has a bandpass characteristic that passes the desired signal and provides amplification to override additional noise that is generated in the mixer stage. The RF filter characteristic also provides some rejection of adjacent channel signals and noise, but the main adjacent channel rejection is accomplished by the IF filter.

The IF filter is a bandpass filter that selects either the up-conversion or down-conversion component (whichever is chosen by the receiver’s designer). When up conversion is selected, the complex envelope of the IF (bandpass) filter output is the same as the complex envelope for the RF input, except for RF filtering, $H_1(f)$, and IF filtering, $H_2(f)$. However, if down conversion is used with $f_{LO} > f_c$, the complex envelope at the IF output will be the conjugate of that for the RF input. [See Eq. (4–61c).] This means that the sidebands of the IF output will be

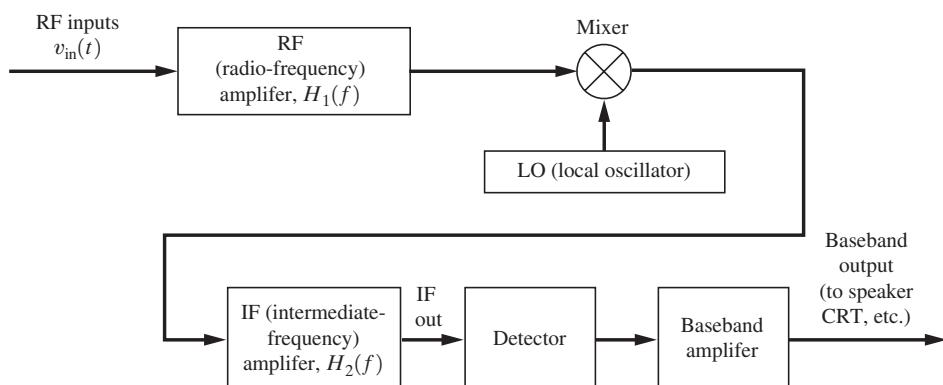


Figure 4–29 Superheterodyne receiver.

[†] Dual-conversion superheterodyne receivers can also be built, in which a second mixer and a second IF stage follow the first IF stage shown in Fig. 4–29.

inverted (i.e., the upper sideband on the RF input will become the lower sideband, etc., on the IF output). If $f_{\text{LO}} < f_c$, the sidebands are not inverted.

The center frequency selected for the IF amplifier is chosen on the basis of three considerations:

- The IF frequency should be such that a stable high-gain IF amplifier can be economically attained.
- The IF frequency needs to be low enough so that, with practical circuit elements in the IF filters, values of Q can be attained that will provide a steep attenuation characteristic outside the bandwidth of the IF signal. This decreases the noise and minimizes the interference from adjacent channels.
- The IF frequency needs to be high enough so that the receiver image response can be made acceptably small.

The *image response* is the reception of an unwanted signal located at the image frequency due to insufficient attenuation of the image signal by the RF amplifier filter. The image response is best illustrated by an example.

Example 4–6 AM BROADCAST SUPERHETERODYNE RECEIVER

Assume that an AM broadcast band radio is tuned to receive a station at 850 kHz and that the LO frequency is on the high side of the carrier frequency. If the IF frequency is 455 kHz, the LO frequency will be $850 + 455 = 1,305$ kHz. (See Fig. 4–30.) Furthermore, assume that other signals are present at the RF input of the radio and, particularly, that there is a signal at 1,760 kHz; this signal will be down-converted by the mixer to $1,760 - 1,305 = 455$ kHz. That is, the undesired (1,760-kHz) signal will be translated to 455 kHz and will be added at the mixer output to the desired (850-kHz) signal, which was also down-converted to 455 kHz. This *undesired* signal that has been converted to the IF band is called the *image signal*. If the gain of the RF amplifier is down by, say, 25 dB at 1,760 kHz compared to the gain at 850 kHz, and if the undesired signal is 25 dB stronger at the receiver input than the desired signal, both signals will have the same level when translated to the IF. In this case, the undesired signal will definitely interfere with the desired signal in the detection process.

For down converters (i.e., $f_{\text{IF}} = |f_c - f_{\text{LO}}|$), the image frequency is

$$f_{\text{image}} = \begin{cases} f_c + 2f_{\text{IF}}, & \text{if } f_{\text{LO}} > f_c \quad (\text{high-side injection}) \\ f_c - 2f_{\text{IF}}, & \text{if } f_{\text{LO}} < f_c \quad (\text{low-side injection}) \end{cases} \quad (4-117a)$$

where f_c is the desired RF frequency, f_{IF} is the IF frequency, and f_{LO} is the local oscillator frequency. For up converters (i.e., $f_{\text{IF}} = f_c + f_{\text{LO}}$), the image frequency is

$$f_{\text{image}} = f_c + 2f_{\text{LO}} \quad (4-117b)$$

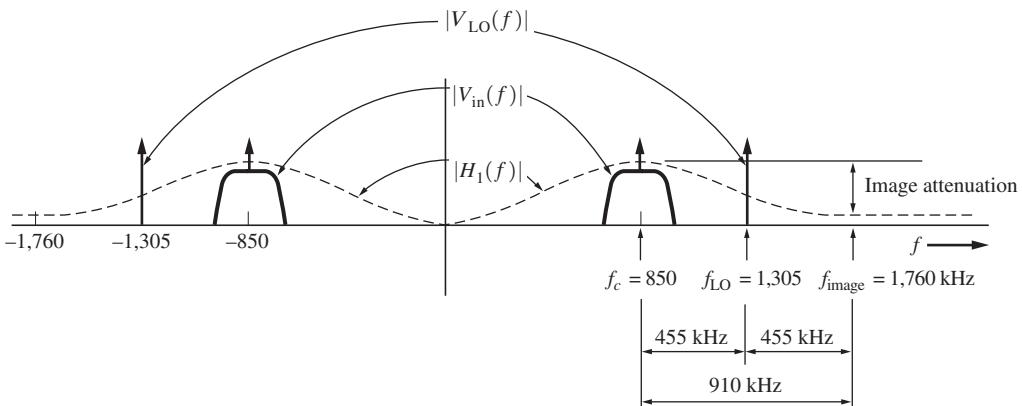


Figure 4-30 Spectra of signals and transfer function of an RF amplifier in a superheterodyne receiver.

From Fig. 4-30, it is seen that the image response will usually be reduced if the IF frequency is increased, since f_{image} will occur farther away from the main peak (or lobe) of the RF filter characteristic, $|H_1(f)|$.

Recalling our earlier discussion on mixers, we also realize that other spurious responses (in addition to the image response) will occur in practical mixer circuits. These must also be taken into account in good receiver design.

Table 4-4 illustrates some typical IF frequencies that have become de facto standards. For the intended application, the IF frequency is low enough that the IF filter will provide good adjacent channel signal rejection when circuit elements with a realizable Q are used; yet the IF frequency is large enough to provide adequate image-signal rejection by the RF amplifier filter.

The type of detector selected for use in the superheterodyne receiver depends on the intended application. For example, a product detector may be used in a PSK (digital) system, and an envelope detector is used in AM broadcast receivers. If the complex envelope $g(t)$ is desired for generalized signal detection or for optimum reception in digital systems, the $x(t)$ and $y(t)$ quadrature components, where $x(t) + jy(t) = g(t)$, may be obtained by using quadrature

TABLE 4-4 SOME POPULAR IF FREQUENCIES IN THE UNITED STATES.

IF Frequency	Application
262.5 kHz	AM broadcast radios (in automobiles)
455 kHz	AM broadcast radios
10.7 MHz	FM broadcast radios
21.4 MHz	FM two-way radios
30 MHz	Radar receivers
43.75 MHz	TV sets
60 MHz	Radar receivers
70 MHz	Satellite receivers

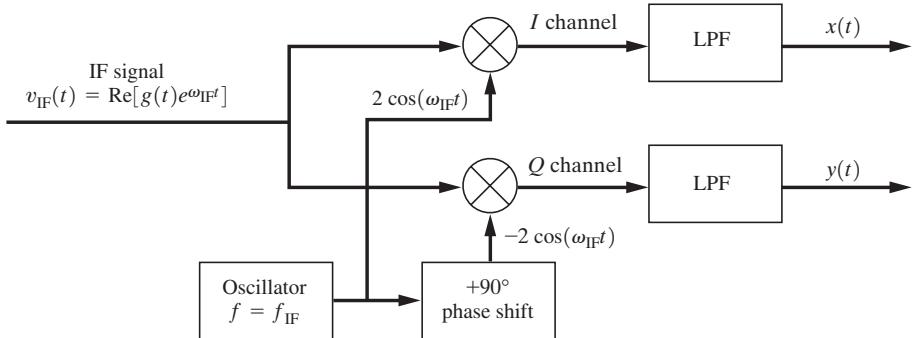


Figure 4–31 IQ (in-phase and quadrature-phase) detector.

product detectors, as illustrated in Fig. 4–31. $x(t)$ and $y(t)$ could be fed into a signal processor to extract the modulation information. Disregarding the effects of noise, the signal processor could recover $m(t)$ from $x(t)$ and $y(t)$ (and, consequently, demodulate the IF signal) by using the inverse of the complex envelope generation functions given in Table 4–1.

The superheterodyne receiver has many advantages and some disadvantages. The main advantage is that extraordinarily high gain can be obtained without instability (self-oscillation). The stray coupling between the output of the receiver and the input does not cause oscillation because the gain is obtained in disjoint frequency bands—RF, IF, and baseband. The receiver is easily tunable to another frequency by changing the frequency of the LO signal (which may be supplied by a frequency synthesizer) and by tuning the bandpass of the RF amplifier to the desired frequency. Furthermore, high- Q elements—which are needed (to produce steep filter skirts) for adjacent channel rejection—are needed only in the fixed tuned IF amplifier. The main disadvantage of the superheterodyne receiver is the response to spurious signals that will occur if one is not careful with the design.

Zero-IF Receivers

When the LO frequency of a superheterodyne receiver is selected to be the carrier frequency ($f_{LO} = f_c$) then $f_{IF} = 0$, and the superheterodyne receiver becomes a *zero-IF* or *direct conversion* receiver.[†] In this case, the IF filter becomes a low-pass filter (LPF). This mixer–LPF combination functions as a product detector (and the detector stage of Figure 4–29 is not needed). A quadrature down converter can also be added so that the $x(t)$ and $y(t)$ components of the complex envelope can be recovered. In this case the zero-IF receiver has a block diagram as shown in Fig. 4–31, where the input signal is at f_c and ω_c replaces ω_{IF} in the figure. The components $x(t)$ and $y(t)$ may be sampled and digitized with ADC so that the complex envelope, $g(t) = x(t) + jy(t)$, may be processed digitally with DSP hardware, which is discussed in Sec. 4–17. The analog LPF acts as an antialiasing filter for the sampler and the DSP hardware. The zero-IF receiver is also similar to a TRF receiver with product detection.

[†] A direct-conversion receiver is also called a *homodyne* or *synchrodyne* receiver.

Zero-IF receivers have several advantages. They have no image response. The same zero-IF receiver hardware can be used in many different applications for manufacturing economy. Since DSP hardware is used, the effective RF bandpass characteristics and the detector characteristics are determined by DSP software. (See next section.) The software can be changed easily to match the desired application. The same zero-IF hardware can be used for receivers in different VHF and UHF bands by selecting the appropriate LO frequency ($F_{LO} = f_c$) and tuning the front-end filter (usually a single-tuned circuit) to f_c .

The zero-IF receiver has the disadvantage of possibly leaking LO radiation out of the antenna input port due to feed-through from the mixer. Also, there will be a DC offset on the mixer output, if there is LO leakage into the antenna input since a sine wave (LO signal) multiplied by itself produces a DC term (plus an out-of-band second harmonic). The use of a high-quality balance mixer and LO shielding will minimize these problems. The receiver can also have a poor noise figure, since the front end usually is not a high-gain, low-noise stage. As in any receiver, the hardware has to be carefully designed so that there is sufficient dynamic range to prevent strong signals from overloading the receiver (producing spurious signals due to nonlinearities) and yet sufficient gain for detecting weak signals. In spite of these difficulties, the zero-IF receiver provides an economical, high-performance solution for many applications. A practical zero-IF receiver with excellent selectivity provided by DSP filtering is described in QST [Frohne, 1998].

Interference

A discussion of receivers would not be complete without considering some of the causes of *interference*. Often the owner of the receiver thinks that a certain signal, such as an amateur radio signal, is causing the difficulty. This may or may not be the case. The origin of the interference may be at any of three locations:

- At the interfering signal *source*, a transmitter may generate out-of-band signal components (such as harmonics) that fall in the band of the desired signal.
- At the *receiver* itself, the front end may overload or produce spurious responses. Front-end overload occurs when the RF or mixer stage of the receiver is driven into the nonlinear range by the interfering signal and the nonlinearity causes cross-modulation on the desired signal at the output of the receiver RF amplifier.
- In the *channel*, a nonlinearity in the transmission medium may cause undesired signal components in the band of the desired signal.

For more discussion of receiver design and examples of practical receiver circuits, the reader is referred to the *ARRL Handbook* [ARRL, 2010].

4–17 SOFTWARE RADIOS

Software radios use DSP hardware, microprocessors, specialized digital ICs, and software to produce modulated signals for transmission (see Table 4–1 and Fig. 4–28) and to demodulate signals at the receiver. Ultimately, the ideal software receiver would sample and digitize received signals at the antenna with analog-to-digital conversion (ADC) and process the

signal with digital signal-processing (DSP) hardware. Software would be used to compute the receiver output. The difficulty with this approach is that it is almost impossible to build ADC/DSP hardware that operates fast enough to directly process wideband modulated signals with gigahertz carrier frequencies [Baines, 1995]. However, the complex envelope of these signals may be obtained by using a superheterodyne receiver with quadrature detectors (Fig. 4–31). For sufficiently modest bandpass bandwidth (say, 25 MHz), the I and Q components, $x(t)$ and $y(t)$, of the complex envelope can be sampled and processed with practical DSP hardware so that software programming can be used.

In another approach, a high-speed ADC can be used to provide samples of the IF signal that are passed to a *digital down-converter* (DDC) integrated circuit (e.g., Intersil, HSP50016) [Chester, 1999]. The DDC multiplies the IF samples with samples of cosine and sine LO signals. This down-converts the IF samples to baseband I and Q samples. The DDC uses ROM lookup tables to obtain the LO cosine and sine samples, a method similar to the direct digital synthesis (DDS) technique discussed in Sec. 4–15. To simultaneously receive multiple adjacent channel signals, multiple DDC ICs can be used in parallel with the LO of each DDC tuned to the appropriate frequency to down convert the signal to baseband I and Q samples for that signal. (For more details, see the Intersil Web site at <http://www.intersil.com>.)

The I and Q samples of the complex envelope, $g(t) = x(t) + jy(t)$, can be filtered to provide equivalent bandpass IF filtering (as described in Sec. 4–5). The filtering can provide excellent equivalent IF filter characteristics with tight skirts for superb adjacent channel interference rejection. The filter characteristic may be changed easily by changing the software. Raised cosine-rolloff filtering is often used to reduce the transmission bandwidth of digital signals without introducing ISI. For minimization of bit errors due to channel noise, as well as elimination of ISI, a square-root raised-cosine filter is used at both the transmitter and the receiver [as shown by Eq. (3–78) of Sec. 3–6].

AM and PM detection is accomplished by using the filtered I and Q components to compute the magnitude and phase of the complex envelope, as shown by Eqs. (4–4a) and (4–4b), respectively. FM detection is obtained by computing the derivative of the phase, as shown by Eq. (4–8).

The Fourier transform can also be used in software radios, since the FFT can be computed efficiently with DSP ICs. For example, the FFT spectrum can be used to determine the presence or absence of adjacent channel signals. Then, appropriate software processing can either enhance or reject a particular signal (as desired for a particular application). The FFT can also be used to simultaneously detect the data on a large number of modulated carriers that are closely spaced together. (For details, see Sec. 5–12 on OFDM.)

The software radio concept has many advantages. Two of these are that the same hardware may be used for many different types of radios, since the software distinguishes one type from another, and that, after software radios are sold, they can be updated in the field to include the latest protocols and features by downloading revised software. The software radio concept is becoming more economical and practical each day. It is the “way of the future.”

For additional reading about practical software radio design and designed circuits, see the *2011 ARRL Handbook* [ARRL, 2010]. To explore hands-on design of a software radio, go to <http://gnuradio.org>. GNU Radio is a free software toolkit for learning about, building, and deploying Software Defined Radio systems. A description of GNU Radio is also available on Wikipedia.

4-18 SUMMARY

The basic techniques used for bandpass signaling have been studied in this chapter. The complex-envelope technique for representing bandpass signals and filters was found to be very useful. A description of communication circuits with output analysis was presented for filters, amplifiers, limiters, mixers, frequency multipliers, phase-locked loops, and detector circuits. Nonlinear as well as linear circuit analysis techniques were used. The superheterodyne receiving circuit was found to be fundamental in communication receiver design. Generalized transmitters, receivers, and software radios were studied. Practical aspects of their design, such as techniques for evaluating spurious signals, were examined.

4-19 STUDY-AID EXAMPLES



SA4-1 Voltage Spectrum for an AM Signal An AM voltage signal $s(t)$ with a carrier frequency of 1,150 kHz has a complex envelope $g(t) = A_c[1 + m(t)]$. $A_c = 500$ V, and the modulation is a 1-kHz sinusoidal test tone described by $m(t) = 0.8 \sin(2\pi 1,000t)$. Evaluate the voltage spectrum for this AM signal.

Solution. Using the definition of a sine wave from Sec. A-1,

$$m(t) = \frac{0.8}{j2} [e^{j2\pi 1000t} - e^{-j2\pi 1000t}] \quad (4-118)$$

Using Eq. (2-26) with the help of Sec. A-5, we find that the Fourier transform of $m(t)$ is[†]

$$M(f) = -j0.4\delta(f-1,000) + j0.4\delta(f+1,000) \quad (4-119)$$

Substituting this into Eq. (4-20a) yields the voltage spectrum of the AM signal:

$$\begin{aligned} S(f) &= 250\delta(f-f_c) - j100\delta(f-f_c-1,000) + j100\delta(f-f_c+1,000) \\ &\quad + 250\delta(f+f_c) - j100\delta(f+f_c-1,000) + j100\delta(f+f_c+1,000) \end{aligned} \quad (4-120)$$

See SA4_1.m for a plot of the AM signal waveform, and a plot of its spectrum which was calculated by using the FFT. Compare this plot of the spectrum with that given by Eq. (4-120).

SA4-2 PSD for an AM Signal Compute the PSD for the AM signal that is described in SA4-1.

Solution. Using Eq. (2-71), we obtain the autocorrelation for the sinusoidal modulation $m(t)$ namely,

$$R_m(\tau) = \frac{A^2}{2} \cos \omega_0 \tau = \frac{A^2}{4} [e^{j\omega_0 \tau} + e^{-j\omega_0 \tau}] \quad (4-121)$$

[†] Because $m(t)$ is periodic, an alternative method for evaluating $M(f)$ is given by Eq. (2-109), where $c_{-1} = j0.4$, $c_1 = -j0.4$, and the other c_n 's are zero.

where $A = 0.8$ and $\omega_0 = 2\pi 1,000$. Taking the Fourier transform by the use of Eq. (2–26) we obtain the PSD of $m(t)$:[†]

$$\mathcal{P}_m(f) = \frac{A^2}{4} [\delta(f - f_o) + \delta(f + f_o)]$$

or

$$\mathcal{P}_m(f) = 0.16 [\delta(f - 1,000) + \delta(f + 1,000)] \quad (4-122)$$

The autocorrelation for the complex envelope of the AM signal is

$$\begin{aligned} R_g(\tau) &= \langle g^*(t)g(t + \tau) \rangle = A_c^2 \langle [1 + m(t)][1 + m(t + \tau)] \rangle \\ &= A_c^2 [\langle 1 \rangle + \langle m(t) \rangle + \langle m(t + \tau) \rangle + \langle m(t)m(t + \tau) \rangle] \end{aligned}$$

But $\langle 1 \rangle = 1$, $\langle m(t) \rangle = 0$, $\langle m(t + \tau) \rangle = 0$, and $\langle m(t)m(t + \tau) \rangle = R_m(\tau)$. Thus,

$$R_g(\tau) = A_c^2 + A_c^2 R_m(\tau) \quad (4-123)$$

Taking the Fourier transform of both sides of Eq. (4–123), we get

$$\mathcal{P}_g(f) = A_c^2 \delta(f) + A_c^2 \mathcal{P}_m(f) \quad (4-124)$$

Substituting Eq. (4–124) into Eq. (4–13), with the aid of Eq. (4–122), we obtain the PSD for the AM signal:

$$\begin{aligned} \mathcal{P}_s(f) &= 62,500 \delta(f - f_c) + 10,000 \delta(f - f_c - 1,000) \\ &\quad + 10,000 \delta(f - f_c + 1,000) + 62,500 \delta(f + f_c) \\ &\quad + 10,000 \delta(f + f_c - 1,000) + 10,000 \delta(f + f_c + 1,000) \end{aligned} \quad (4-125)$$

(Note: We realize that this bandpass PSD for $s(t)$ is found by translating (i.e., moving) the baseband PSD of $g(t)$ up to f_c and down to $-f_c$. Furthermore, for the case of AM, the PSD of $g(t)$ consists of the PSD for $m(t)$ plus the superposition of a delta function at $f = 0$).

SA4–3 Average Power for an AM Signal Assume that the AM voltage signal $s(t)$, as described in SA4–1, appears across a $50\text{-}\Omega$ resistive load. Compute the actual average power dissipated in the load.

Solution. From Eq. (4–21), the normalized average power is

$$\begin{aligned} (P_s)_{\text{norm}} &= (V_s)_{\text{rms}}^2 = \frac{1}{2} A_c^2 [1 + (V_m)_{\text{rms}}^2] \\ &= \frac{1}{2}(500)^2 \left[1 + \left(\frac{0.8}{\sqrt{2}} \right) \right]^2 = 165 \text{ kW} \end{aligned} \quad (4-126a)$$

[†] Because $m(t)$ is periodic, Eq. (2–126) can be used as an alternative method of evaluating $\mathcal{P}_m(f)$. That is, by using Eq. (2–126) with $c_1 = c_{-1}^* = A/(2j) = -j0.8/2 = -j0.4$ (and the other c_n 's are zero), Eq. (4–122) is obtained.

Note: An alternative method of computing $(P_s)_{\text{norm}}$ is to calculate the area under the PDF for $s(t)$. That is, by using Eq. (4-125),

$$(P_s)_{\text{norm}} = (V_s)_{\text{rms}}^2 = \int_{-\infty}^{\infty} P_s(f) df = 165 \text{ kW} \quad (4-126b)$$

Using Eq. (4-126a) or Eq. (4-126b), we obtain the actual average power dissipated in the $50\text{-}\Omega$ load:[†]

$$(P_s)_{\text{actual}} = \frac{(V_s)_{\text{rms}}^2}{R_L} = \frac{1.65 \times 10^5}{50} = 3.3 \text{ kW} \quad (4-127)$$

SA4-4 PEP for an AM Signal If the AM voltage signal of SA4-1 appears across a $50\text{-}\Omega$ resistive load, compute the actual peak envelope power (PEP).

Solution. Using Eq. (4-18), we get the normalized PEP:

$$\begin{aligned} (P_{\text{PEP}})_{\text{norm}} &= \frac{1}{2} [\max |g(t)|]^2 = \frac{1}{2} A_c^2 [1 + \max m(t)]^2 \\ &= \frac{1}{2} (500)^2 [1 + 0.8]^2 = 405 \text{ kW} \end{aligned} \quad (4-128)$$

Then the actual PEP for this AM voltage signal with a $50\text{-}\Omega$ load is

$$(P_{\text{PEP}})_{\text{actual}} = \frac{(P_{\text{PEP}})_{\text{norm}}}{R_L} = \frac{4.50 \times 10^5}{50} = 8.1 \text{ kW} \quad (4-129)$$

SA4-5 Sampling Methods for Bandpass Signals Suppose that a bandpass signal $s(t)$ is to be sampled and that the samples are to be stored for processing at a later time. As shown in Fig. 4-32a, this bandpass signal has a bandwidth of B_T centered about f_c , where $f_c \geq B_T$ and $B_T > 0$. The signal $s(t)$ is to be sampled by using any one of three methods shown in Fig. 4-32.[‡] For each of these sampling methods, determine the minimum sampling frequency (i.e., minimum clock frequency) required, and discuss the advantages and disadvantages of each method.

Solution.

Method I Referring to Fig. 4-32a, we see that Method I uses direct sampling as described in Chapter 2. From Eq. (2-168), the minimum sampling frequency is $(f_s)_{\min} = 2B$, where B is the highest frequency in the signal. For this bandpass signal, the highest frequency is $B = f_c + B_T/2$. Thus, for Method I, the minimum sampling frequency is

$$(f_s)_{\min} = 2f_c + B_T \quad \text{Method I} \quad (4-130)$$

For example, if $f_c = 100$ MHz and $B_T = 1$ MHz, a minimum sampling frequency of $(f_s)_{\min} = 201$ MHz would be required.

[†] If $s(t)$ is a current signal (instead of a voltage signal), then $(P_s)_{\text{actual}} = (I_s)_{\text{rms}}^2 R_L$.

[‡] Thanks to Professor Christopher S. Anderson, Department of Electrical and Computer Engineering, University of Florida, for suggesting Method II.

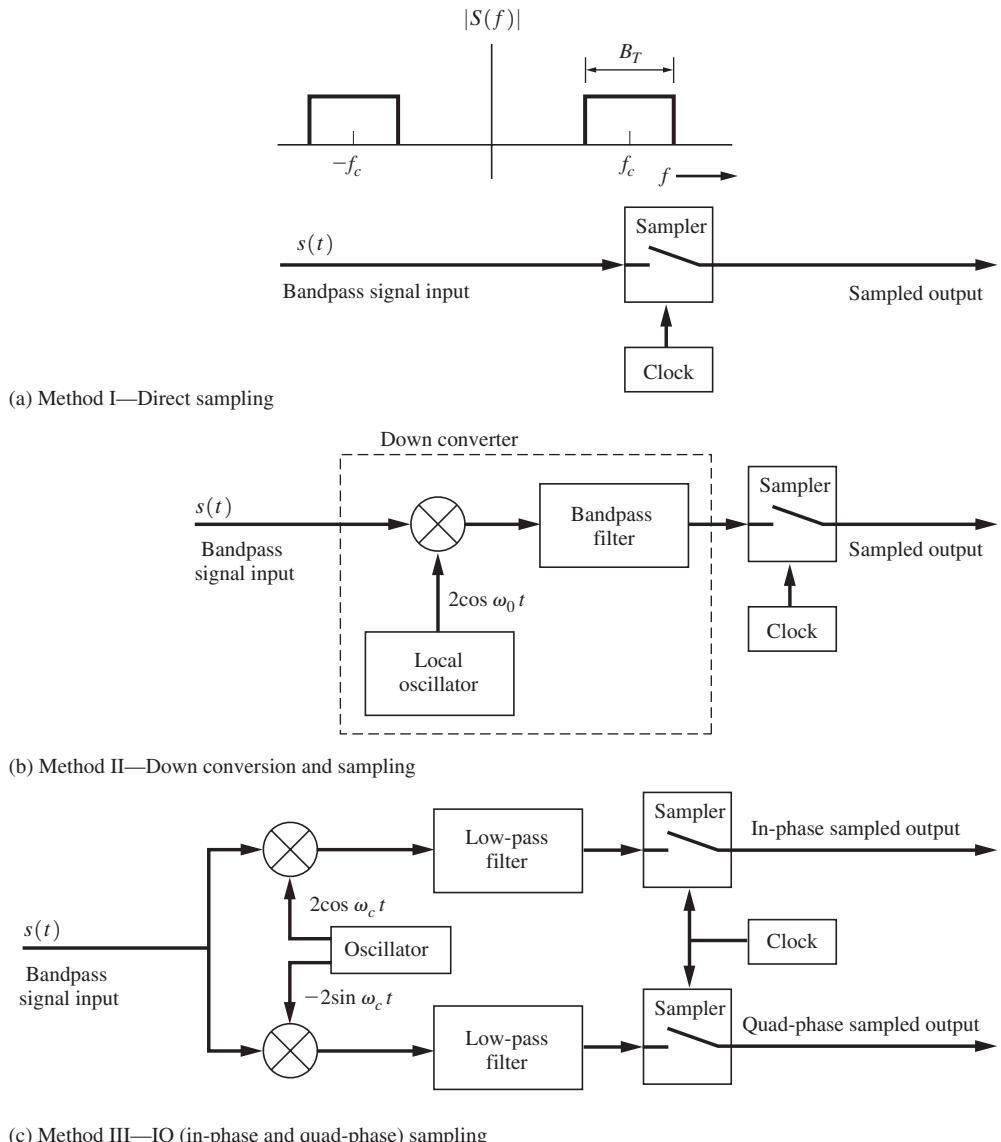


Figure 4-32 Three methods for sampling bandpass signals.

Method II Referring to Fig. 4-32b, we see that Method II down converts the bandpass signal to an IF, so that the highest frequency that is to be sampled is drastically reduced. For maximum reduction of the highest frequency, we choose[†] the local oscillator frequency to be $f_0 = f_c - B_T/2$.

[†] Low-side LO injection is used so that any asymmetry in the two sidebands of $s(t)$ will be preserved in the same way in the down-converted signal.

The highest frequency in the down-converted signal (at the sampler input) is $B = (f_c + B_T/2) - f_0 = f_c + B_T/2 - f_c + B_T/2 = B_T$, and the lowest frequency (in the positive-frequency part of the down-converted signal) is $(f_c - B_T/2) - f_0 = f_c - B_T/2 - f_c + B_T/2 = 0$. Using Eq. (2-168), we find that the minimum sampling frequency is

$$(f_s)_{\min} = 2B_T \quad \text{Method II} \quad (4-131)$$

when the frequency of the LO is chosen to be $f_0 = f_c - B_T/2$. For this choice of LO frequency, the bandpass filter becomes a low-pass filter with a cutoff frequency of B_T . Note that Method II gives a drastic reduction in the sampling frequency (an advantage) compared with Method I. For example, if $f_c = 100$ MHz and $B_T = 1$ MHz, then the minimum sampling frequency is now $(f_s)_{\min} = 2$ MHz, instead of the 201 MHz required in Method I. However, Method II requires the use of a down converter (a disadvantage). Note also that $(f_s)_{\min}$ of Method II, as specified by Eq. (4-131), satisfies the $(f_s)_{\min}$ given by the *bandpass sampling theorem*, as described by Eq. (4-31).

Method II is one of the most efficient ways to obtain samples for a bandpass signal. When the bandpass signal is reconstructed from the sample values with the use of Eq. (2-158) and (2-160), the *down-converted* bandpass signal is obtained. To obtain the original bandpass signal $s(t)$, an up-converter is needed to convert the down-converted signal back to the original bandpass region of the spectrum.

Method II can also be used to obtain samples of the quadrature (i.e., I and Q) components of the complex envelope. From Fig. 4-32b, the IF signal at the input to the sampler is

$$v_{\text{IF}}(t) = x(t) \cos \omega_{\text{IF}} t - y(t) \sin \omega_{\text{IF}} t$$

where $f_{\text{IF}}(t) = B_T/2$. Samples of $x(t)$ can be obtained if $v_{\text{IF}}(t)$ is sampled at the times corresponding to $\cos \omega_{\text{IF}} t = \pm 1$ (and $\sin \omega_{\text{IF}} t = 0$). This produces B_T samples of $x(t)$ per second. Likewise, samples of $y(t)$ are obtained at the times when $\sin \omega_{\text{IF}} t = \pm 1$ (and $\cos \omega_{\text{IF}} t = 0$). This produces B_T samples of $y(t)$ per second. The composite sampling rate for the clock is $f_s = 2B_T$. Thus, the sampler output contains the following sequence of I and Q values: $x, -y, -x, y, x, -y, \dots$ The sampling clock can be synchronized to the IF phase by using carrier synchronization circuits. Method III uses a similar approach.

Method III From Fig. 4-32c, Method III uses in-phase (I) and quadrature-phase (Q) product detectors to produce the $x(t)$ and $y(t)$ quadrature components of $s(t)$. (This was discussed in Sec. 4-16 and illustrated in Fig. 4-31.) The highest frequencies in $x(t)$ and $y(t)$ are $B = B_T/2$. Thus, using Eq. (2-168), we find that the minimum sampling frequency for the clock of the I and Q samplers is

$$(f_s)_{\min} = B_T \quad (\text{each sampler}) \quad \text{Method III} \quad (4-132)$$

Because there are two samplers, the combined sampling rate is $(f_s)_{\min \text{ overall}} = 2B_T$. This also satisfies the minimum sampling rate allowed for bandpass signals as described by Eq. (4-31). Thus, Method III (like Method II) gives one of the most efficient ways to obtain samples of bandpass signals. For the case of $f_c = 100$ MHz and $B_T = 1$ MHz, an overall sampling rate of 2 MHz is required for Method III, which is the same as that obtained by Method II. Because IQ samples have been obtained, they may be processed by using DSP algorithms to perform

equivalent bandpass filtering, as described by Sec. 4–5, or equivalent modulation of another type, as described by Sec. 4–2. If desired, the original bandpass signal may be reconstructed with the use of Eq. (4–32).

SA4–6 Frequency Synthesizer Design for a Receiver LO. Design a frequency synthesizer for use as the local oscillator in an AM superheterodyne radio. The radio has a 455-kHz IF and can be tuned across the AM band from 530 kHz to 1,710 kHz in 10-kHz steps. The synthesizer uses a 1-MHz reference oscillator and generates a high-side LO injection signal.

Solution. Referring to Eq. (4–59) and Fig. 4–29 for the case of down conversion and high-side injection, we find that the required frequency for the LO is $f_0 = f_c + f_{\text{IF}}$. If $f_c = 530$ kHz and $f_{\text{IF}} = 455$ kHz, the desired synthesizer output frequency is $f_0 = 985$ kHz. Referring to the block diagram for the frequency synthesizer (Fig. 4–25), we select the frequency of the mixer input signal, $v_{\text{in}}(t)$, to be 5 kHz, which is one-half the desired 10-kHz step. Then $M = f_x/f_{\text{in}} = 1,000$ kHz/5 kHz = 200, and an integer value can be found for N to give the needed LO frequency. Using Eq. (4–112), we obtain $N = f_0/f_{\text{in}}$. For $f_0 = 985$ kHz and $f_{\text{in}} = 5$ kHz, we get $N = 197$. Thus, to tune the radio to $f_c = 530$ kHz, the required values of M and N are $M = 200$ and $N = 197$. In a similar way, other values for N can be obtained to tune the radio to 540, 550, ..., 1,710 kHz. (M remains at 200.) Table 4–6 lists the results. The selected values for M and N are kept small in order to minimize the spurious sideband noise on the synthesized LO signal. M and N are minimized by making the size of the step frequency, f_{in} , as large as possible.

The spectral sideband noise on the synthesizer output signal is minimized by using a low-noise reference oscillator and a low-noise VCO and by choosing a small value of N for the reduction in the number of intermodulation noise components on the synthesized signal. The bandwidth of the loop filter is also minimized, but if it is too small, the pull-in range will not be sufficient for reliable locking of the synthesizer PLL when it is turned on. In this example, N can be reduced by a factor of about $\frac{1}{2}$ if the IF frequency is chosen to be 450 kHz instead of 455 kHz. For example, for $f_{\text{IF}} = 450$ kHz and $f_c = 530$ kHz, we need $f_0 = 980$ kHz. This LO frequency is attained if $M = 100$ (for a step size of $f_{\text{in}} = 10$ kHz) and $N = 98$, compared with (see Table 4–6) $M = 200$ and $N = 197$, which was needed for the case when $f_{\text{IF}} = 455$ kHz.

TABLE 4–5 SOLUTION TO SA4–6 WITH DIVIDER RATIOS M AND N FOR AN AM RADIOFREQUENCY SYNTHESIZER

Reference frequency = 1,000 Hz; IF frequency = 455 kHz

Received frequency, f_c (kHz)	Local oscillator frequency, f_0 (kHz)	M	N
530	985	200	197
540	995	200	199
550	1,005	200	201
:	:	:	:
1,700	2,155	200	431
1,710	2,165	200	433

PROBLEMS

- 4-1** Show that if $v(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\}$, Eqs. (4-1b) and (4-1c) are correct, where $g(t) = x(t) + jy(t) = R(t)e^{j\theta(t)}$.



- 4-2** An AM signal is modulated by a waveform such that the complex envelope is

$$g(t) = A_c \{1 + a[0.2 \cos(\pi 250t) + 0.5 \sin(\pi 2500t)]\}$$

where $A_c = 10$. Find the value of a such that the AM signal has a positive modulation percentage of 90%. Hint: Look at Ex. 4-3 and Eq. (5-5a).

- ★ 4-3** A double-sideband suppressed carrier (DSB-SC) signal $s(t)$ with a carrier frequency of 3.8 MHz has a complex envelope $g(t) = A_c m(t)$. $A_c = 50$ V, and the modulation is a 1-kHz sinusoidal test tone described by $m(t) = 2\sin(2\pi 1,000t)$. Evaluate the voltage spectrum for this DSB-SC signal.

- 4-4** A DSB-SC signal has a carrier frequency of 900 kHz and $A_c = 10$. If this signal is modulated by a waveform that has a spectrum given by Fig. P3-3. Find the magnitude spectrum for this DSB-SC signal.

- 4-5** Assume that the DSB-SC voltage signal $s(t)$, as described in Prob. 4-3 appears across a $50\text{-}\Omega$ resistive load.

- (a) Compute the actual average power dissipated in the load.
 (b) Compute the actual PEP.

- 4-6** For the AM signal described in Prob. 4-2 with $a = 0.5$, calculate the total average normalized power.



- 4-7** For the AM signal described in Prob. 4-2 with $a = 0.5$, calculate the normalized PEP.

- 4-8** A bandpass filter is shown in Fig. P4-8.

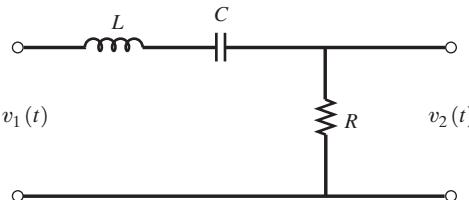


Figure P4-8

- (a) Find the mathematical expression for the transfer function of this filter, $H(f) = V_2(f)/V_1(f)$, as a function of R , L , and C . Sketch the magnitude transfer function $|H(f)|$.

- (b) Find the expression for the equivalent low-pass filter transfer function, and sketch the corresponding low-pass magnitude transfer function.



- ★ 4-9** Let the transfer function of an ideal bandpass filter be given by

$$H(f) = \begin{cases} 1, & |f + f_c| < B_T/2 \\ 1, & |f - f_c| < B_T/2 \\ 0, & \text{elsewhere} \end{cases}$$

where B_T is the absolute bandwidth of the filter.

- (a) Sketch the magnitude transfer function $|H(f)|$.
 (b) Find an expression for the waveform at the output, $v_2(t)$, if the input consists of the pulsed carrier

$$v_1(t) = A\Pi(t/T) \cos(\omega_c t)$$

- (c) Sketch the output waveform $v_2(t)$ for the case when $B_T = 4/T$ and $f_c \gg B_T$.
(Hint: Use the complex-envelope technique, and express the answer as a function of the sine integral, defined by

$$\text{Si}(u) = \int_0^u \frac{\sin \lambda}{\lambda} d\lambda$$

The sketch can be obtained by looking up values for the sine integral from published tables [Abramowitz and Stegun, 1964] or by numerically evaluating $\text{Si}(u)$.

- 4-10** Examine the distortion properties of an RC low-pass filter (shown in Fig. 2-15). Assume that the filter input consists of a bandpass signal that has a bandwidth of 1 kHz and a carrier frequency of 15 kHz. Let the time constant of the filter be $\tau_0 = RC = 10^{-5}$ s.

- (a) Find the phase delay for the output carrier.
 (b) Determine the group delay at the carrier frequency.
 (c) Evaluate the group delay for frequencies around and within the frequency band of the signal. Plot this delay as a function of frequency.
 (d) Using the results of (a) through (c), explain why the filter does or does not distort the bandpass signal.



- ★ 4-11** A bandpass filter as shown in Fig. P4-11 has the transfer function

$$H(s) = \frac{Ks}{s^2 + (\omega_0/Q)s + \omega_0^2}$$

where $Q = R\sqrt{C/L}$, the resonant frequency is $f_0 = 1/(2\pi\sqrt{LC})$, $\omega_0 = 2\pi f_0$, K is a constant, and values for R , L , and C are given in the figure. Assume that a bandpass signal with $f_c = 4$ kHz and a bandwidth of 200 Hz passes through the filter, where $f_0 = f_c$.

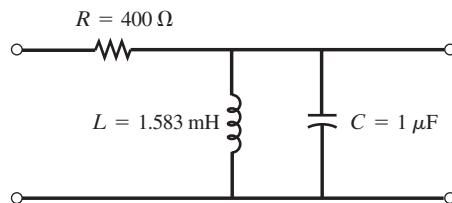


Figure P4-11

- (a) Using Eq. (4-39), find the bandwidth of the filter.
 (b) Plot the carrier delay as a function of f about f_0 .
 (c) Plot the group delay as a function of f about f_0 .
 (d) Explain why the filter does or does not distort the signal.

- 4-12** An FM signal is of the form

$$s(t) = A_c \cos \left[\omega_c t + D_f \int_{-\infty}^t m(\sigma) d\sigma \right]$$

where $m(t)$ is the modulating signal and $\omega_c = 2\pi f_c$, in which f_c is the carrier frequency. Show that the functions $g(t)$, $x(t)$, $y(t)$, $R(t)$, and $\theta(t)$, as given for FM in Table 4–1, are correct.

- 4–13** The output of a FM transmitter at 96.9 MHz delivers 25kw average power into an antenna system which presents a $50\text{-}\Omega$ resistive load. Find the value for the peak voltage at the input to the antenna system.

- ★ 4–14** Let a modulated signal,

$$s(t) = 100 \sin(\omega_c + \omega_a)t + 500 \cos \omega_c t - 100 \sin(\omega_c - \omega_a)t$$

where the unmodulated carrier is $500 \cos \omega_c t$.

- (a) Find the complex envelope for the modulated signal. What type of modulation is involved? What is the modulating signal?
- (b) Find the quadrature modulation components $x(t)$ and $y(t)$ for this modulated signal.
- (c) Find the magnitude and PM components $R(t)$ and $\theta(t)$ for this modulated signal.
- (d) Find the total average power, where $s(t)$ is a voltage waveform that is applied across a $50\text{-}\Omega$ load.
- ★ 4–15** Find the spectrum of the modulated signal given in Prob. 4–14 by two methods:
- (a) By direct evaluation using the Fourier transform of $s(t)$.
- (b) By the use of Eq. (4–12).
- 4–16** Given a pulse-modulated signal of the form

$$s(t) = e^{-at} \cos [(\omega_c + \Delta\omega)t] u(t)$$

where a , ω_c , and $\Delta\omega$ are positive constants and the carrier frequency, $\omega_c \gg \Delta\omega$,

- (a) Find the complex envelope.
- (b) Find the spectrum $S(f)$.
- (c) Sketch the magnitude and phase spectra $|S(f)|$ and $\theta(f) = \angle S(f)$.
- 4–17** In a digital computer simulation of a bandpass filter, the complex envelope of the impulse response is used, where $h(t) = \text{Re}[k(t)e^{j\omega_c t}]$, as shown in Fig. 4–3. The complex impulse response can be expressed in terms of quadrature components as $k(t) = 2h_x(t) + j2h_y(t)$, where $h_x(t) = \frac{1}{2} \text{Re}[k(t)]$ and $h_y(t) = \frac{1}{2} \text{Im}[k(t)]$. The complex envelopes of the input and output are denoted, respectively, by $g_1(t) = x_1(t) + jy_1(t)$ and $g_2(t) = x_2(t) + jy_2(t)$. The bandpass filter simulation can be carried out by using four *real baseband* filters (i.e., filters having real impulse responses), as shown in Fig. P4–17. Note that although there are four filters, there are only two different impulse responses: $h_x(t)$ and $h_y(t)$.
- (a) Using Eq. (4–22), show that Fig. P4–17 is correct.
- (b) Show that $h_y(t) \equiv 0$ (i.e., no filter is needed) if the bandpass filter has a transfer function with Hermitian symmetry about f_c —that is, if $H(-\Delta f + f_c) = H^*(\Delta f + f_c)$, where $|\Delta f| < B_T/2$ and B_T is the bounded spectral bandwidth of the bandpass filter. This Hermitian symmetry implies that the magnitude frequency response of the bandpass filter is even about f_c and the phase response is odd about f_c .
- 4–18** Evaluate and sketch the magnitude transfer function for (a) Butterworth, (b) Chebyshev, and (c) Bessel low-pass filters. Assume that $f_b = 10$ Hz and $\epsilon = 1$.
- ★ 4–19** Plot the amplitude response, the phase response, and the phase delay as a function of frequency for the following low-pass filters, where $B = 100$ Hz:



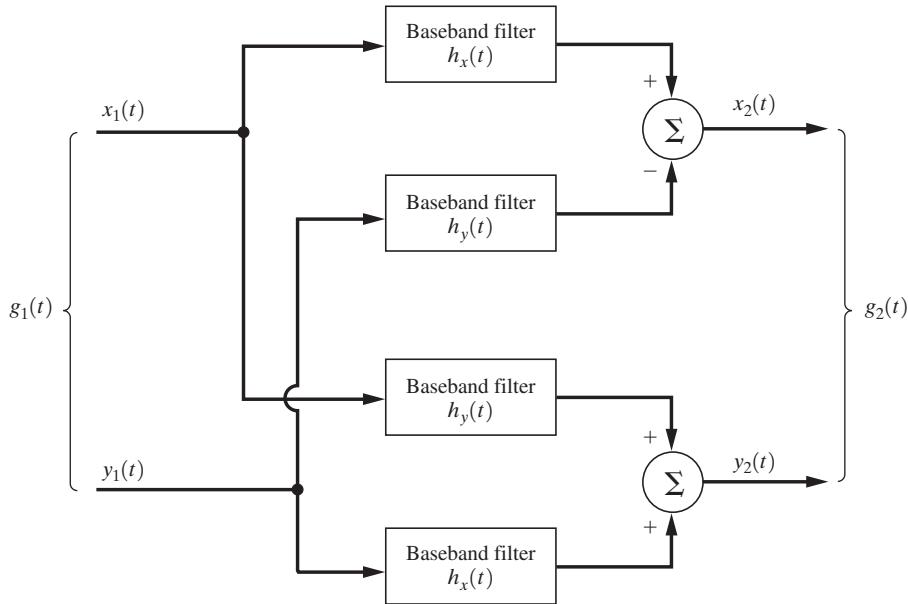


Figure P4-17

(a) Butterworth filter, second order:

$$H(f) = \frac{1}{1 + \sqrt{2}(jf/B) + (jf/B)^2}$$

(b) Butterworth filter, fourth order:

$$H(f) = \frac{1}{[1 + 0.765(jf/B) + (jf/B)^2][1 + 1.848(jf/B) + (jf/B)^2]}$$

Compare your results for the two filters.

- 4-20** Assume that the output-to-input characteristic of a bandpass amplifier is described by Eq. (4-42) and that the linearity of the amplifier is being evaluated by using a two-tone test.
- (a) Find the frequencies of the fifth-order intermodulation products that fall within the amplifier bandpass.
- (b) Evaluate the levels for the fifth-order intermodulation products in terms of A_1 , A_2 , and the K 's.
- 4-21** An amplifier is tested for total harmonic distortion (THD) by using a single-tone test. The output is observed on a spectrum analyzer. It is found that the peak values of the three measured harmonics decrease according to an exponential recursion relation $V_{n+1} = V_n e^{-n}$, where $n = 1, 2, 3$. What is the THD?



- ★ 4-22** The nonlinear output–input characteristic of an amplifier is

$$v_{\text{out}}(t) = 5v_{\text{in}}(t) + 1.5v_{\text{in}}^2(t) + 1.5v_{\text{in}}^3(t)$$

Assume that the input signal consists of seven components:

$$v_{\text{in}}(t) = \frac{1}{2} + \frac{4}{\pi^2} \sum_{k=1}^6 \frac{1}{(2k-1)^2} \cos[(2k-1)\pi t]$$

- (a) Plot the output signal and compare it with the linear output component $5v_{\text{in}}(t)$.
- (b) Take the FFT of the output $v_{\text{out}}(t)$, and compare it with the spectrum for the linear output component.
- 4-23** For a bandpass limiter circuit, show that the bandpass output is given by Eq. (4-55), where $K = (4/\pi)A_0$. A_0 denotes the voltage gain of the bandpass filter, and it is assumed that the gain is constant over the frequency range of the bandpass signal.
- 4-24** Discuss whether the Taylor series nonlinear model is applicable to the analysis of (a) soft limiters and (b) hard limiters.
- ★ 4-25** Assume that an audio sine-wave testing signal is passed through an audio hard limiter circuit. Evaluate the total harmonic distortion (THD) on the signal at the limiter output.
- 4-26** Using the mathematical definition of linearity given in Chapter 2, show that the analog switch multiplier of Fig. 4-10 is a linear device.
- 4-27** An audio signal with a bandwidth of 10 kHz is transmitted over an AM transmitter with a carrier frequency of 1.0 MHz. The AM signal is received on a superheterodyne receiver with an envelope detector. What is the constraint on the RC time constant for the envelope detector?
- ★ 4-28** Assume that an AM receiver with an envelope detector is tuned to an SSB-AM signal that has a modulation waveform given by $m(t)$. Find the mathematical expression for the audio signal that appears at the receiver output in terms of $m(t)$. Is the audio output distorted?
- 4-29** Referring to Table 4-1, find the equation that describes the output of an envelope detector as a function of $m(t)$, if the input is a
 - (a) DSB-SC signal.
 - (b) FM signal.
- 4-30** Evaluate the sensitivity of the zero-crossing FM detector shown in Fig. 4-18. Assume that the differential amplifier is described by $v_{\text{out}}(t) = A [v_2(t) - v_3(t)]$, where A is the voltage gain of the amplifier. In particular, show that $v_{\text{out}} = Kf_d$, where $f_d = f_i - f_c$, and find the value of the sensitivity constant K in terms of A , R , and C . Assume that the peak levels of the monostable outputs Q and \bar{Q} are 4 V (TTL circuit levels).
- 4-31** Using Eq. (4-100), show that the linearized block diagram model for a PLL is given by Fig. 4-22.
- 4-32** Show that Eq. (4-101) describes the linear PLL model as given in Fig. 4-22.
- ★ 4-33** Using the Laplace transform and the final value theorem, find an expression for the steady-state phase error, $\lim_{t \rightarrow \infty} \theta_e(t)$, for a PLL as described by Eq. (4-100). [Hint: The final value theorem is $\lim_{t \rightarrow \infty} f(t) = \lim_{s \rightarrow 0} sF(s)$.]
- 4-34** Assume that the loop filter of a PLL is a low-pass filter, as shown in Fig. P4-34.
 - (a) Evaluate the closed-loop transfer function $H(f) = \frac{\Theta_0(f)}{\Theta_i(f)}$ for a linearized PLL.
 - (b) Sketch the Bode plot $[|H(f)|]_{\text{dB}} \triangleq 20 \log |H(f)|$ for this PLL.

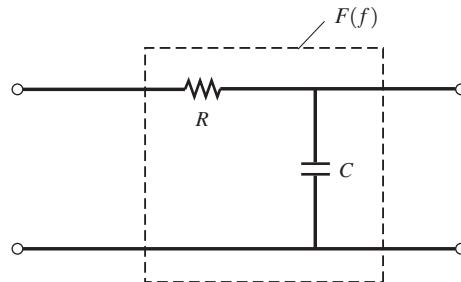


Figure P4-34

- ★ 4-35 Assume that the phase noise characteristic of a PLL is being examined. The internal phase noise of the VCO is modeled by the input $\theta_n(t)$, as shown in Fig. P4-35.

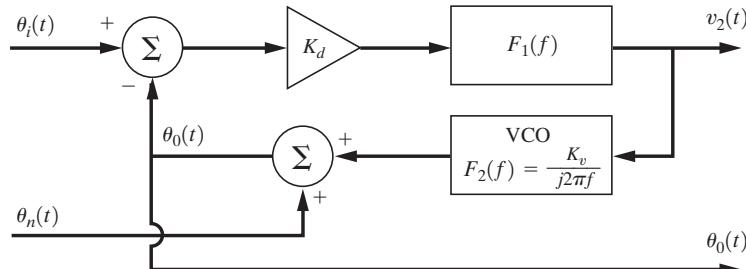


Figure P4-35

- (a) Find an expression for the closed-loop transfer function $\Theta_0(f)/\Theta_n(f)$, where $\theta_i(t) = 0$.
 (b) If $F_1(f)$ is the low-pass filter given in Fig. P4-34, sketch the Bode plot $[\lvert \Theta_0(f)/\Theta_n(f) \rvert]_{\text{dB}}$ for the phase noise transfer function.
- 4-36 The input to a PLL is $v_{\text{in}}(t) = A \sin(\omega_0 t + \theta_i)$. The LPF has a transfer function $F(s) = (s + a)/s$.
- (a) What is the steady-state phase error?
 (b) What is the maximum hold-in range for the noiseless case?
- ★ 4-37 (a) Refer to Fig. 4-25 for a PLL frequency synthesizer. Design a synthesizer that will cover a range of 144 to 148 MHz in 5-kHz steps, starting at 144.000 MHz. Assume that the frequency standard operates at 5 MHz, that the M divider is fixed at some value, and that the N divider is programmable so that the synthesizer will cover the desired range. Sketch a diagram of your design, indicating the frequencies present at various points of the diagram.
 (b) Modify your design so that the output signal can be frequency modulated with an audio-frequency input such that the peak deviation of the RF output is 5 kHz.
- 4-38 Assume that an SSB-AM transmitter is to be realized using the AM-PM generation technique, as shown in Fig. 4-27.
- (a) Sketch a block diagram for the baseband signal-processing circuit.
 (b) Find expressions for $R(t)$, $\theta(t)$, and $v(t)$ when the modulation is $m(t) = A_1 \cos \omega_1 t + A_2 \cos \omega_2 t$.

- 4-39** Rework Prob. 4-38 for the case of generating an FM signal.
- 4-40** Assume that an SSB-AM transmitter is to be realized using the quadrature generation technique, as shown in Fig. 4-28.
- Sketch a block diagram for the baseband signal-processing circuit.
 - Find expressions for $x(t)$, $y(t)$, and $v(t)$ when the modulation is $m(t) = A_1 \cos \omega_1 t + A_2 \cos \omega_2 t$.
- 4-41** Rework Prob. 4-40 for the case of generating an FM signal.
- ★ 4-42** An FM radio is tuned to receive an FM broadcasting station of frequency 96.9 MHz. The radio is of the superheterodyne type with the LO operating on the high side of the 96.9-MHz input and using a 10.7-MHz IF amplifier.
- Determine the LO frequency.
 - If the FM signal has a bandwidth of 180 kHz, give the requirements for the RF and IF filters.
 - Calculate the frequency of the image response.
- 4-43** A dual-mode cellular phone is designed to operate with either cellular phone service in the 900-MHz band or PCS in the 1,900-MHz band. The phone uses a superheterodyne receiver with a 500-MHz IF for both modes.
- Calculate the LO frequency and the image frequency for high-side injection when the phone receives an 880-MHz signal.
 - Calculate the LO frequency and the image frequency for low-side injection when the phone receives a 1,960-MHz PCS signal.
 - Discuss the advantage of using a 500-MHz IF for this dual-mode phone.
(Note: Cellular and PCS systems are described in Chapter 8.)
- 4-44** A superheterodyne receiver is tuned to a station at 20 MHz. The local oscillator frequency is 80 MHz and the IF is 100 MHz.
- What is the image frequency?
 - If the LO has appreciable second-harmonic content, what two additional frequencies are received?
 - If the RF amplifier contains a single-tuned parallel resonant circuit with $Q = 50$ tuned to 20 MHz, what will be the image attenuation in dB?
- 4-45** An SSB-AM receiver is tuned to receive a 7.225-MHz lower SSB (LSSB) signal. The LSSB signal is modulated by an audio signal that has a 3-kHz bandwidth. Assume that the receiver uses a superheterodyne circuit with an SSB IF filter. The IF amplifier is centered on 3.395 MHz. The LO frequency is on the high (frequency) side of the input LSSB signal.
- Draw a block diagram of the single-conversion superheterodyne receiver, indicating frequencies present and typical spectra of the signals at various points within the receiver.
 - Determine the required RF and IF filter specifications, assuming that the image frequency is to be attenuated by 40 dB.
- 4-46** (a) Draw a block diagram of a superheterodyne FM receiver that is designed to receive FM signals over a band from 144 to 148 MHz. Assume that the receiver is of the dual-conversion type (i.e., a mixer and an IF amplifier, followed by another mixer and a second IF amplifier), where the first IF is 10.7 MHz and the second is 455 kHz. Indicate the frequencies of the signals at different points on the diagram, and, in particular, show the frequencies involved when a signal at 146.82 MHz is being received.
- (b) Replace the first oscillator by a frequency synthesizer such that the receiver can be tuned in 5-kHz steps from 144.000 to 148.000 MHz. Show the diagram of your synthesizer design and the frequencies involved.

- ★ 4-47 An AM broadcast-band radio is tuned to receive a 1,080-kHz AM signal and uses high-side LO injection. The IF is 455 kHz.
- Sketch the frequency response for the RF and IF filters.
 - What is the image frequency?
- 4-48 Commercial AM broadcast stations operate in the 540- to 1,700-kHz band, with a transmission bandwidth limited to 10 kHz.
- What are the maximum number of stations that can be accommodated?
 - If stations are not assigned to adjacent channels (in order to reduce interference on receivers that have poor IF characteristics), how many stations can be accommodated?
 - For 455-kHz IF receivers, what is the band of image frequencies for the AM receiver that uses a down-converter with high-side injection?

AM, FM, AND DIGITAL MODULATED SYSTEMS

CHAPTER OBJECTIVES

- Amplitude modulation and single sideband
- Frequency and phase modulation
- Digital audio broadcasting
- Digitally modulated signals (OOK, BPSK, FSK, MSK, MPSK, QAM, QPSK, $\pi/4$ QPSK, and OFDM)
- Spread spectrum and CDMA systems

This chapter is concerned with the bandpass techniques of amplitude modulation (AM), single-sideband (SSB), phase modulation (PM), and frequency modulation (FM); and with the digital modulation techniques of on-off keying (OOK), binary phase-shift keying (BPSK), frequency-shift keying (FSK), quadrature phase-shift keying (QPSK), quadrature amplitude modulation (QAM) and orthogonal frequency-division multiplexing (OFDM). All of these bandpass signaling techniques consist of modulating an analog or digital baseband signal onto a carrier. This approach was first introduced in Sec. 4–2. In particular, the modulated bandpass signal can be described by

$$s(t) = \operatorname{Re}\{g(t)^{j\omega_c t}\} \quad (5-1)$$

where $\omega_c = 2\pi f_c$ and f_c is the carrier frequency. The desired type of modulated signal, $s(t)$, is obtained by selecting the appropriate modulation mapping function $g[m(t)]$ of Table 4–1, where $m(t)$ is the analog or digital baseband signal.

The voltage (or current) spectrum of the bandpass signal is

$$S(f) = \frac{1}{2}[G(f - f_c) + G^*(-f - f_c)] \quad (5-2a)$$

and the PSD is

$$\mathcal{P}_s(f) = \frac{1}{4} [\mathcal{P}_g(f - f_c) + \mathcal{P}_g(-f - f_c)] \quad (5-2b)$$

where $G(f) = \mathcal{F}[g(t)]$ and $\mathcal{P}_g(f)$ is the PSD of the complex envelope $g(t)$.

General results that apply to both digital and analog modulating waveforms are developed in the first half of the chapter (Secs. 5–1 to 5–8). Digital modulated signals are emphasized in the second half (Secs. 5–9 to 5–13).

The goals of this chapter are to

- Study $g(t)$ and $s(t)$ for various types of analog and digital modulations.
- Evaluate the spectrum for various types of analog and digital modulations.
- Examine some transmitter and receiver structures.
- Study some adopted standards.
- Learn about spread spectrum systems.

5–1 AMPLITUDE MODULATION

From Table 4–1, the complex envelope of an AM signal is given by

$$g(t) = A_c[1 + m(t)] \quad (5-3)$$

where the constant A_c has been included to specify the power level and $m(t)$ is the modulating signal (which may be analog or digital). These equations reduce to the following representation for the AM signal:

$$s(t) = A_c[1 + m(t)] \cos \omega_c t \quad (5-4)$$

A waveform illustrating the AM signal, as seen on an oscilloscope, is shown in Fig. 5–1. For convenience, it is assumed that the modulating signal $m(t)$ is a sinusoid. $A_c[1 + m(t)]$ corresponds to the in-phase component $x(t)$ of the complex envelope; it also corresponds to the real envelope $|g(t)|$ when $m(t) \geq -1$ (the usual case).

If $m(t)$ has a peak positive value of +1 and a peak negative value of −1, the AM signal is said to be 100% modulated.

DEFINITION. The *percentage of positive modulation* on an AM signal is

$$\% \text{ positive modulation} = \frac{A_{\max} - A_c}{A_c} \times 100 = \max [m(t)] \times 100 \quad (5-5a)$$


and the *percentage of negative modulation* is

$$\% \text{ negative modulation} = \frac{A_c - A_{\min}}{A_c} \times 100 = -\min [m(t)] \times 100 \quad (5-5b)$$

The overall modulation percentage is

$$\% \text{ modulation} = \frac{A_{\max} - A_{\min}}{2A_c} \times 100 = \frac{\max [m(t)] - \min [m(t)]}{2} \times 100 \quad (5-6)$$

where A_{\max} is the maximum value of $A_c[1 + m(t)]$, A_{\min} is the minimum value, and A_c is the level of the AM envelope in the absence of modulation [i.e., $m(t) = 0$].

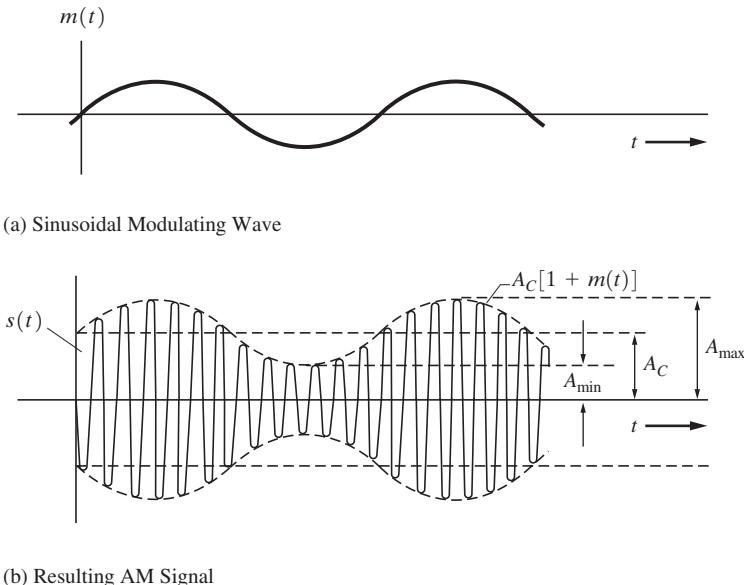**Figure 5–1** AM signal waveform.

Equation (5–6) may be obtained by averaging the positive and negative modulation as given by Eqs. (5–5a) and (5–5b). A_{\max} , A_{\min} , and A_c are illustrated in Fig. 5–1b, where, in this example, $A_{\max} = 1.5A_c$ and $A_{\min} = 0.5A_c$, so that the percentages of positive and negative modulation are both 50% and the overall modulation is 50%.

Example 5–1 AM SIGNAL WITH 50% AND 100% MODULATION

Let an AM signal with a carrier frequency of 10 Hz be modulated with a sinusoidal signal having a frequency of 1 Hz. Furthermore, let the percentage of modulation be 50% over the time interval $0 < t < 2$ sec and then changed to 100% over $2 < t < 4$ sec. Plot the AM signal waveform over the interval of $0 < t < 4$ sec. See Example5_01.m for the solution.

The percentage of modulation can be over 100% (A_{\min} will have a negative value), provided that a four-quadrant multiplier[†] is used to generate the product of $A_c[1 + m(t)]$ and $\cos \omega_c t$ so that the true AM waveform, as given by Eq. (5–4), is obtained.[‡] However, if the transmitter uses a two-quadrant multiplier that produces a zero output when $A_c[1 + m(t)]$ is negative, the output signal will be

$$s(t) = \begin{cases} A_c[1 + m(t)] \cos \omega_c t, & \text{if } m(t) \geq -1 \\ 0, & \text{if } m(t) < -1 \end{cases} \quad (5-7)$$

[†]A four-quadrant multiplier multiplies for the two inputs having any polarity. A two-quadrant multiplier multiplies only if one of the inputs has a single polarity (e.g. for $x > 0$) and it produces zero output if $x < 0$.

[‡]If the percentage of modulation becomes very large (approaching infinity), the AM signal becomes the double-sideband suppressed carrier signal that is described in the next section.

which is a distorted AM signal. The bandwidth of this signal is much wider than that of the undistorted AM signal, as is easily demonstrated by spectral analysis. This is the overmodulated condition that the FCC does not allow. An AM transmitter that uses pulse width modulation is an example of a circuit that acts as a two-quadrant multiplier (see Fig. 5–2 and the discussion of this figure that follows Example 5–3). This produces the product $A_c[1 + m(t)] \cos \omega_c t$, provided that $m(t) \geq -1$, but produces no output when $m(t) < -1$.

Example 5–2 AM SIGNAL WITH 150% MODULATION

Let an AM signal with a carrier frequency of 10 Hz be modulated with a sinusoidal signal having a frequency of 1 Hz and 150% modulation. Assume that the AM transmitter uses a two-quadrant multiplier. Plot the AM signal at the transmitter output. See Example5_02.m for the solution.

If the percentage of negative modulation is less than 100%, an envelope detector may be used to recover the modulation without distortion, since the envelope, $|g(t)| = |A_c[1 + m(t)]|$, is identical to $A_c[1 + m(t)]$. If the percentage of negative modulation is over 100%, undistorted modulation can still be recovered provided that the proper type of detector—a product detector—is used. This is seen from Eq. (4–76) with $\theta_0 = 0$. Furthermore, the product detector may be used for any percentage of modulation. In Chapter 7, we will see that a product detector is superior to an envelope detector when the input signal-to-noise ratio is small.

From Eq. (4–17), the *normalized average power* of the AM signal is

$$\begin{aligned}\langle s^2(t) \rangle &= \frac{1}{2} \langle |g(t)|^2 \rangle = \frac{1}{2} A_c^2 \langle [1 + m(t)]^2 \rangle \\ &= \frac{1}{2} A_c^2 \langle 1 + 2m(t) + m^2(t) \rangle \\ &= \frac{1}{2} A_c^2 + A_c^2 \langle m(t) \rangle + \frac{1}{2} A_c^2 \langle m^2(t) \rangle\end{aligned}\quad (5–8)$$


If the modulation contains no DC level, then $\langle m(t) \rangle = 0$ and the *normalized power* of the AM signal is

$$\langle s^2(t) \rangle = \underbrace{\frac{1}{2} A_c^2}_{\substack{\text{discrete} \\ \text{carrier power}}} + \underbrace{\frac{1}{2} A_c^2 \langle m^2(t) \rangle}_{\substack{\text{sideband power}}}\quad (5–9)$$


DEFINITION. The *modulation efficiency* is the percentage of the total power of the modulated signal that conveys information.

In AM signaling, only the sideband components convey information, so the modulation efficiency is

$$E = \frac{\langle m^2(t) \rangle}{1 + \langle m^2(t) \rangle} \times 100\%\quad (5–10)$$

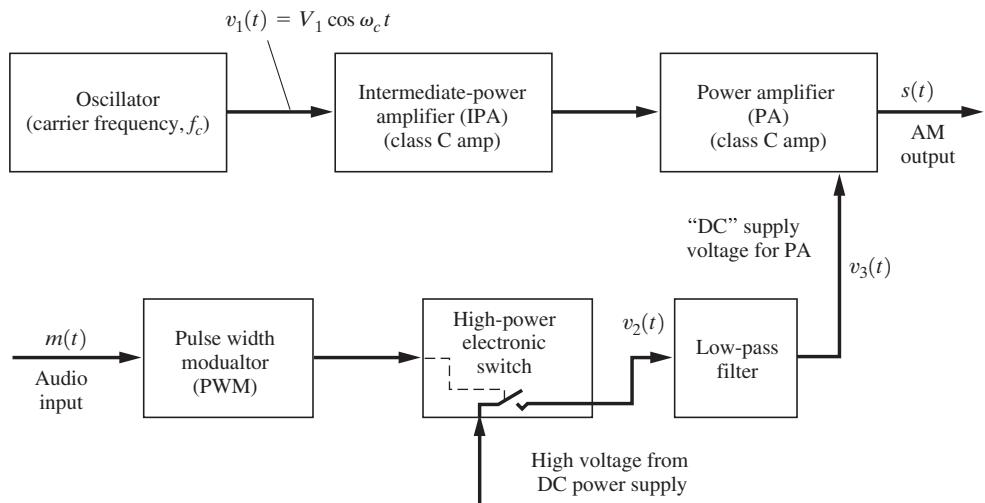

(a) Block Diagram

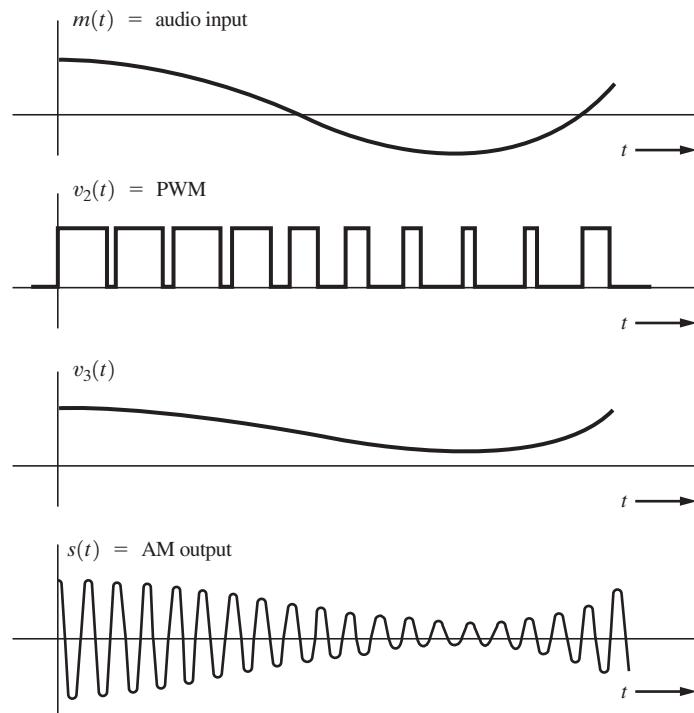

(b) Waveforms

Figure 5–2 Generation of high-power AM by the use of PWM.

The highest efficiency that can be attained for a 100% AM signal would be 50% (for the case when square-wave modulation is used).

Using Eq. (4–18), we obtain the normalized peak envelope power (PEP) of the AM signal:

$$P_{\text{PEP}} = \frac{A_c^2}{2} \{ 1 + \max [m(t)] \}^2 \quad (5-11)$$

The voltage spectrum of the AM signal is given by Eq. (4–20a) of Example 4–3 and is

$$S(f) = \frac{A_c}{2} [\delta(f - f_c) + M(f - f_c) + \delta(f + f_c) + M(f + f_c)] \quad (5-12)$$

The AM spectrum is just a translated version of the modulation spectrum plus delta functions that give the carrier line spectral component. The *bandwidth* is *twice* that of the modulation. As shown in Sec. 5–6, the spectrum for an FM signal is much more complicated, since the modulation mapping function $g(m)$ is nonlinear.

Example 5–3 POWER OF AN AM SIGNAL

The FCC rates AM broadcast band transmitters by their average *carrier* power; this rating system is common in other AM audio applications as well. Suppose that a 5,000-W AM transmitter is connected to a $50\text{-}\Omega$ load; then the constant A_c is given by $\frac{1}{2}A_c^2/50 = 5,000$. Thus, the peak voltage across the load will be $A_c = 707$ V during the times when there is no modulation. If the transmitter is then 100% modulated by a 1,000-Hz test tone, the total (carrier plus sideband) average power will be, from Eq. (5–9),

$$1.5 \left[\frac{1}{2} \left(\frac{A_c^2}{50} \right) \right] = (1.5) \times (5,000) = 7,500 \text{ W}$$

because $\langle m^2(t) \rangle = \frac{1}{2}$ for 100% sinusoidal modulation. Note that 7,500 W is the actual power, not the normalized power. The peak voltage (100% modulation) is $(2)(707) = 1414$ V across the $50\text{-}\Omega$ load. From Eq. (5–11), the PEP is

$$4 \left[\frac{1}{2} \left(\frac{A_c^2}{50} \right) \right] = (4)(5,000) = 20,000 \text{ W}$$

The modulation efficiency would be 33%, since $\langle m^2(t) \rangle = \frac{1}{2}$.

There are many ways of building AM transmitters. One might first consider generating the AM signal at a low power level (by using a multiplier) and then amplifying it. This, however, requires the use of linear amplifiers (such as Class A or B amplifiers, discussed in Sec. 4–9) so that the AM will not be distorted. Because these linear amplifiers are not very efficient in converting the power-supply power to an RF signal, much of the energy is wasted in heat.[†] Consequently, high-power AM broadcast transmitters are built by amplifying the carrier oscillator signal to a high

[†] Do not confuse this conversion efficiency with modulation efficiency, which was defined by Eq. (5–10).

power level with efficient Class C or Class D amplifiers and then amplitude modulating the last high-power stage. This is called *high-level* modulation. One example is shown in Fig. 5–2a, in which a pulse width modulation (PWM) technique is used to achieve the AM with high conversion efficiency [DeAngelo, 1982]. The audio input is converted to a PWM signal that is used to control a high-power switch (tube or transistor) circuit. The output of this switch circuit consists of a high-level PWM signal that is filtered by a low-pass filter to produce the “DC” component that is used as the power supply for the power amplifier (PA) stage. The PWM switching frequency is usually chosen in the range of 70 to 80 kHz so that the fundamental and harmonic components of the PWM signal can be easily suppressed by the low-pass filter, and yet the “DC” can vary at an audio rate as high as 12 or 15 kHz for good AM audio frequency response. This technique provides excellent frequency response and low distortion, since no high-power audio transformers are needed, but vacuum tubes are often used in the PA and electronic switch circuits, as transistors do not have sufficiently larger dissipation.

Another technique allows an all solid-state high-power transmitter to be built. It uses digital processing to generate AM. A 50-kW AM transmitter can be built that uses 50 to 100 transistor PA (power amplifier) modules, each of which produces either 100 W, 300 W, 500 W, or 1,000 W. See <http://www.broadcast.harris.com>. Each module generates a constant-amplitude square wave at the carrier frequency (which is filtered to produce the sine wave fundamental). To synthesize the AM signal, the analog audio signal is sampled and digitized via an ADC. The samples are used to determine (compute) the combination of modules that need to be turned on (from sample to sample) in order to generate the required amplitude on the combined (summed) signal. If one module fails, another module (or a combination of modules) is substituted for it, ensuring excellent on-the-air transmitter reliability, since the transmitter will continue to function with failed modules. Any failed modules can be replaced or repaired later at a convenient time. This AM transmitter has an AC-power-to-RF conversion efficiency of 86% and excellent audio fidelity.

5–2 AM BROADCAST TECHNICAL STANDARDS AND DIGITAL AM BROADCASTING

Some of the FCC technical standards for AM broadcast stations are shown in Table 5–1. Since the channel bandwidth is 10 kHz, the highest audio frequency is limited to 5 kHz if the resulting AM signal is not to interfere with the stations assigned to the adjacent channels. This low fidelity is not an inherent property of AM, but occurs because the channel bandwidth was limited by the 10 kHz standard the FCC chose instead of, say, 30 kHz, so that three times the number of channels could be accommodated in the AM broadcast band. In practice, the FCC allows stations to have an audio bandwidth of 10 kHz, which produces an AM signal bandwidth of 20 kHz. This, of course, causes some interference to adjacent channel stations. There are about 4,825 AM stations in the United States.

In the United States, the carrier frequencies are designated according to the intended coverage area for that frequency: clear-channel, regional channel, or local channel frequencies. Table 5–1 shows the clear-channel and local-channel frequencies. The others are regional. Class A clear-channel stations operate full time (day and night), and most have a power of 50 kW. These stations are intended to cover large areas. Moreover, to accommodate as many stations as possible, nonclear-channel stations may be assigned to operate on

TABLE 5-1 AM BROADCAST STATION TECHNICAL STANDARDS

Item	FCC Technical Standard
Assigned frequency, f_c	In 10-kHz increments from 540 to 1,700 kHz
Channel bandwidth	10 kHz
Carrier frequency stability	± 20 Hz of the assigned frequency
Clear-channel frequencies (One Class A, 50-kW station) (Nondirectional)	640, 650, 660, 670, 700, 720, 750, 760, 770, 780, 820, 830, 840, 870, 880, 890, 1,020, 1,030, 1,040, 1,070, 1,100, 1,120, 1,160, 1,180, 1,200, and 1,210 kHz
Clear-channel frequencies (Multiple 50-kW stations) (Directional night)	680, 710, 810, 850, 1,000, 1,060, 1,080, 1,090, 1,110, 1,130, 1,140, 1,170, 1,190, 1,500, 1,510, 1,520, and 1,530 kHz
Clear-channel frequencies (For Bahama, Cuba, Canada, or Mexico)	540, 690, 730, 740, 800, 860, 900, 940, 990, 1,010, 1,050, 1,220, 1,540, 1,550, 1,560, 1,570, and 1,580 kHz
Local channel frequencies (1-kW stations)	1,230, 1,240, 1,340, 1,400, 1,450, and 1,490 kHz
Maximum power licensed	50 kW
Travelers' Information Radio (50 W maximum, usually 10 W)	In 10 kHz increments from 530 to 1,700 kHz

clear-channel frequencies when they can be implemented without interfering with the dominant clear-channel station. Often, to prevent interference, these secondary stations have to operate with directional antenna patterns such that there is a null in the direction of the dominant station. This is especially true for nighttime operation, when sky-wave propagation allows a clear-channel station to cover half of the United States.

Class B stations operate full time to cover a regional area. Most Class B stations have a power of 5 kW, although some operate with power as large as 50 kW. Class C stations cover a local area full time, and most operate with a power of 1 kW. Hundreds of Class C stations are assigned to each local-channel frequency (see Table 5-1), so the nighttime sky-wave interference is large on these frequencies. Because of this interference, the night time coverage radius of a Class C station may be as small as 5 miles from the transmitter site. Class D stations operate daytime, some with powers as large as 50 kW, and, if allowed to operate at night, with nighttime power of 250 watts or less. For a listing of AM broadcasting stations in the United States go to www.fcc.gov/mb/audio/amg.html.

International broadcast AM stations, which operate in the shortwave bands (3 to 30 MHz), generally do so with high power levels. Some of these feed 500 kW of carrier power into directional antennas that produce effective radiated power levels in the megawatt range (i.e., when the gain of the directional antenna is included).

Digital AM Broadcasting

In the United States, the FCC has adopted the iBiquity *in band on channel* (IBOC) system for digital broadcasting in the AM band (i.e., medium wave, 540 to 1,700 kHz). This IBOC system provides for simultaneous transmission of digital audio data and auxiliary digital data along with a conventional AM signal (modulated by analog audio). Consequently, a conventional

AM receiver can be used to receive the analog audio. An IBOC receiver can be used, with its built-in codec, to convert the digital part of the AM IBOC signal into stereo audio. If the received AM IBOC signal is weak, the listener will hear the conventional analog audio from the AM part of the signal. If the received signal is strong, the decoded audio will be of almost CD stereo quality (15 kHz audio bandwidth) as decoded from the IBOC data. If the signal strength is somewhere between weak and strong, the receiver will produce a blend of the audio obtained from the AM and IBOC parts.

Orthogonal Frequency Division Multiplexing (OFDM), as discussed in Sec. 5–12, is used to produce the IBOC signal. To generate the IBOC signal, data from the transmitter codec is partitioned into six OFDM groups placed within, and adjacent to, the sidebands of the conventional AM signal. Three of the OFDM groups are placed on the upper sideband, and three are on the lower sideband. The sidebands are independent, but the data are partitioned so that only one sideband is needed to recover reduced-quality audio. Data from both sidebands (all six of the OFDM groups) are needed to recover full high-fidelity stereo audio.

The bandwidth of the AM IBOC signal is 30 kHz, but the carrier spacing between stations remains at 10 kHz. Consequently, there will be a potential for interference with stations assigned to adjacent channels. However, the existing assigned frequency of an AM station is such that the adjacent channels are assigned only to distant locations. In the daytime, there is little or no interference with the distant stations that are assigned to the adjacent channels. But at night, because of sky-wave propagation, one hears stations on almost every AM channel. Thus, at night, IBOC stations cause interference to these adjacent channel stations.

There are a number of AM stations transmitting AM IBOC. For more information on this technique and lists of stations that are transmitting AM IBOC, search the internet for IBOC AM.

There are many ways to transmit digital audio signals on the low, medium and shortwave bands. One popular method being developed for digital shortwave broadcasting is Digital Radio Mondiale (DRM). This technique uses completely digital transmission so a conventional shortwave receiver with an AM detector cannot be used for reception. A DRM receiver must be used to recover the audio. This technique has the advantage of being robust to a fading channel as well as providing good audio quality. For more details about DRM, see [Hofmann, et al, 2003] and www.drm.org.

5–3 DOUBLE-SIDEBAND SUPPRESSED CARRIER

A *double-sideband suppressed carrier* (DSB-SC) signal is an AM signal that has a suppressed discrete carrier. The DSB-SC signal is given by

$$s(t) = A_c m(t) \cos \omega_c t \quad (5-13)$$

where $m(t)$ is assumed to have a zero DC level for the suppressed carrier case. The spectrum is identical to that for AM given by Eq. (5–12), except that the delta functions at $\pm f_c$ are missing. That is, the spectrum for DSB-SC is

$$S(f) = \frac{A_c}{2} [M(f - f_c) + M(f + f_c)] \quad (5-14)$$

Compared with an AM signal, the percentage of modulation on a DSB-SC signal is infinite, because there is no carrier line component. Furthermore, the modulation efficiency of a DSB-SC signal is 100%, since no power is wasted in a discrete carrier. However, a product detector (which is more expensive than an envelope detector) is required for demodulation of the DSB-SC signal. If transmitting circuitry restricts the modulated signal to a certain peak value, say, A_p , it can be demonstrated (see Prob. 5–11) that the sideband power of a DSB-SC signal is *four* times that of a comparable AM signal with the same peak level. In this sense, the DSB-SC signal has a fourfold power advantage over that of an AM signal.

If $m(t)$ is a polar binary data signal (instead of an audio signal), then Eq. (5–13) is a BPSK signal, first described in Example 2–22. Details of BPSK signaling will be covered in Sec. 5–9. As shown in Table 4–1, a QM signal can be generated by adding two DSB signals where there are two signals, $m_1(t)$ and $m_2(t)$, modulating cosine and sine carriers, respectively.

5–4 COSTAS LOOP AND SQUARING LOOP

The coherent reference for product detection of DSB-SC cannot be obtained by the use of an ordinary phase-locked tracking loop, because there are no spectral line components at $\pm f_c$. However, since the DSB-SC signal has a spectrum that is symmetrical with respect to the (suppressed) carrier frequency, either one of the two types of carrier recovery loops shown in Fig. 5–3 may be used to demodulate the DSB-SC signal. Figure 5–3a shows the *Costas PLL* and Fig. 5–3b shows the *squaring loop*. The noise performances of these two loops are equivalent [Ziemer and Peterson, 1985], so the choice of which loop to implement depends on the relative cost of the loop components and the accuracy that can be realized when each is built.

As shown in Fig. 5–3a, the Costas PLL is analyzed by assuming that the VCO is locked to the input suppressed carrier frequency, f_c , with a constant phase error of θ_e . Then the voltages $v_1(t)$ and $v_2(t)$ are obtained at the output of the baseband low-pass filters as shown. Since θ_e is small, the amplitude of $v_1(t)$ is relatively large compared to that of $v_2(t)$ (i.e., $\cos \theta_e \gg \sin \theta_e$). Furthermore, $v_1(t)$ is proportional to $m(t)$, so it is the demodulated (product detector) output. The product voltage $v_3(t)$ is


$$v_3(t) = \frac{1}{2} \left(\frac{1}{2} A_0 A_c \right)^2 m^2(t) \sin 2\theta_e$$

The voltage $v_3(t)$ is filtered with an LPF that has a cutoff frequency near DC, so that this filter acts as an integrator to produce the DC VCO control voltage


$$v_4(t) = K \sin 2\theta_e$$

where $K = \frac{1}{2} \left(\frac{1}{2} A_0 A_c \right)^2 \langle m^2(t) \rangle$ and $\langle m^2(t) \rangle$ is the DC level of $m^2(t)$. This DC control voltage is sufficient to keep the VCO locked to f_c with a small phase error θ_e .

The squaring loop, shown in Fig. 5–3b, is analyzed by evaluating the expression for the signal out of each component block, as illustrated in the figure. Either the Costas PLL or the squaring loop can be used to demodulate a DSB-SC signal, because, for each case, the output is $Cm(t)$, where C is a constant. Furthermore, either of these loops can be used to

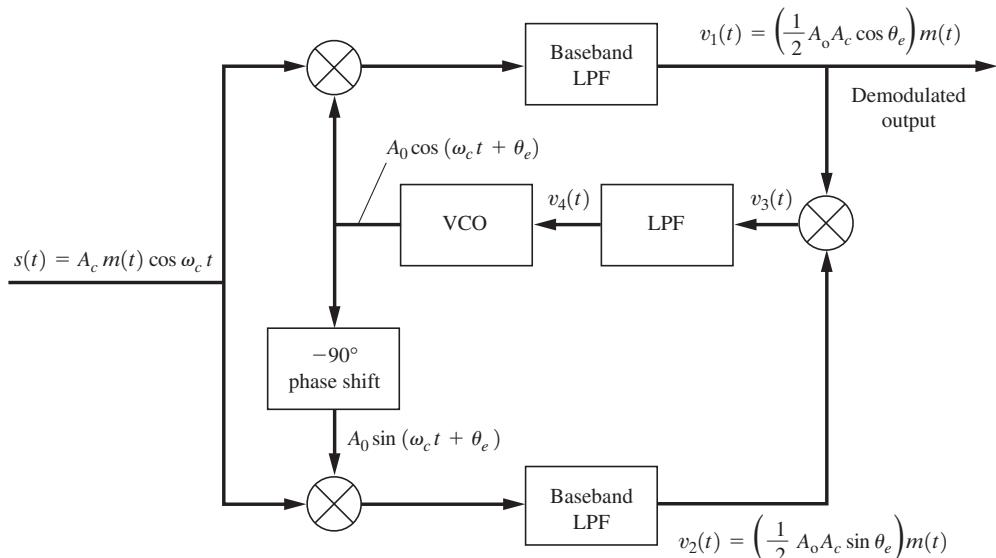

(a) Costas Phase-Locked Loop

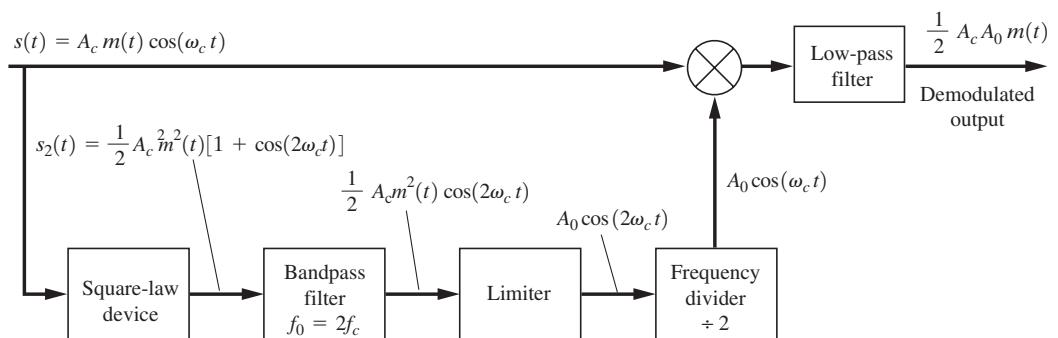

(b) Squaring Loop

Figure 5–3 Carrier recovery loops for DSB-SC signals.

recover (i.e., demodulate) a BPSK signal, since the BPSK signal has the same mathematical form as a DSB-SC signal, where $m(t)$ is a polar NRZ data signal as given in Fig. 3-15c.

Both the Costas PLL and the squaring loop have one major disadvantage—a 180° phase ambiguity. For example, suppose that the input is $-A_c m(t) \cos \omega_c t$ instead of $+A_c m(t) \cos \omega_c t$. Retracing the steps in the preceding analysis, we see that the output would be described by *exactly* the same equation that was obtained before. Then, whenever the loop is energized, it is just as likely to phase lock such that the demodulated output is proportional to $-m(t)$ as it is to $m(t)$. Thus, we cannot be sure of the polarity of the output. This is no problem if $m(t)$ is a monaural audio signal, because $-m(t)$ sounds the same to our ears as $m(t)$.

However, if $m(t)$ is a polar data signal, binary 1's might come out as binary 0's after the circuit is energized, or vice versa. As we found in Chapter 3, there are two ways of abrogating this 180° phase ambiguity: (1) A known test signal can be sent over the system after the loop is turned on, so that the sense of the polarity can be determined, and (2) differential coding and decoding may be used.

5-5 ASYMMETRIC SIDEBAND SIGNALS

Single Sideband

DEFINITION. An *upper single sideband* (USSB) signal has a zero-valued spectrum for $|f| < f_c$, where f_c is the carrier frequency.

A *lower single sideband* (LSSB) signal has a zero-valued spectrum for $|f| > f_c$, where f_c is the carrier frequency.

There are numerous ways in which the modulation $m(t)$ may be mapped into the complex envelope $g[m]$ such that an SSB signal will be obtained. Table 4-1 lists some of these methods. SSB-AM is by far the most popular type. It is widely used by the military and by radio amateurs in high-frequency (HF) communication systems. It is popular because the bandwidth is the same as that of the modulating signal (which is half the bandwidth of an AM or DSB-SC signal). For these reasons, we will concentrate on this type of SSB signal. In the usual application, the term *SSB* refers to the SSB-AM type of signal, unless otherwise denoted.

THEOREM. An SSB signal (i.e., SSB-AM type) is obtained by using the complex envelope

$$g(t) = A_c[m(t) \pm j\hat{m}(t)] \quad (5-15)$$

which results in the SSB signal waveform

$$s(t) = A_c[m(t) \cos \omega_c t \mp \hat{m}(t) \sin \omega_c t] \quad (5-16)$$

where the upper (−) sign is used for USSB and the lower (+) sign is used for LSSB. $\hat{m}(t)$ denotes the Hilbert transform of $m(t)$, which is given by[†]

$$\hat{m}(t) \triangleq m(t) * h(t) \quad (5-17)$$

where

$$h(t) = \frac{1}{\pi t} \quad (5-18)$$

and $H(f) = \mathcal{F}[h(t)]$ corresponds to a -90° phase-shift network:

$$H(f) = \begin{cases} -j, & f > 0 \\ j, & f < 0 \end{cases} \quad (5-19)$$

[†] A table of Hilbert transform pairs is given in Sec. A-7 (Appendix A).


Figure 5–4 illustrates this theorem. Assume that $m(t)$ has a magnitude spectrum that is of triangular shape, as shown in Fig. 5–4a. Then, for the case of USSB (upper signs), the spectrum of $g(t)$ is zero for negative frequencies, as illustrated in Fig. 5–4b, and $s(t)$ has the USSB spectrum shown in Fig. 5–4c. This result is proved as follows:

PROOF. We need to show that the spectrum of $s(t)$ is zero on the appropriate sideband (depending on the sign chosen). Taking the Fourier transform of Eq. (5–15), we get


$$G(f) = A_c \{M(f) \pm j\mathcal{F}[\hat{m}(t)]\} \quad (5-20)$$

and, using Eq. (5–17), we find that the equation becomes


$$G(f) = A_c M(f)[1 \pm jH(f)] \quad (5-21)$$

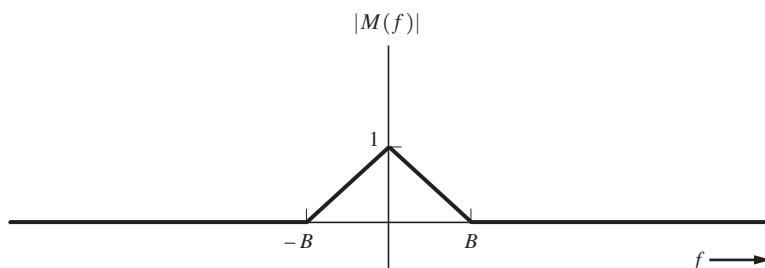

(a) Baseband Magnitude Spectrum

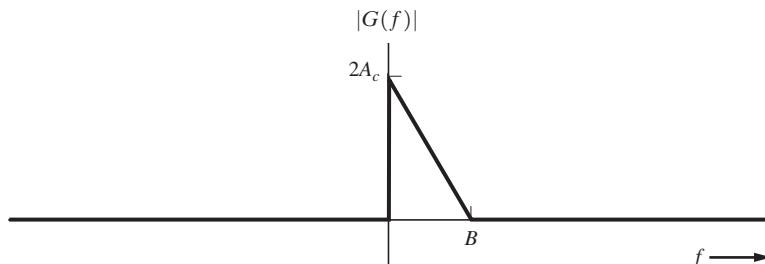

(b) Magnitude of Corresponding Spectrum of the Complex Envelope for USSB

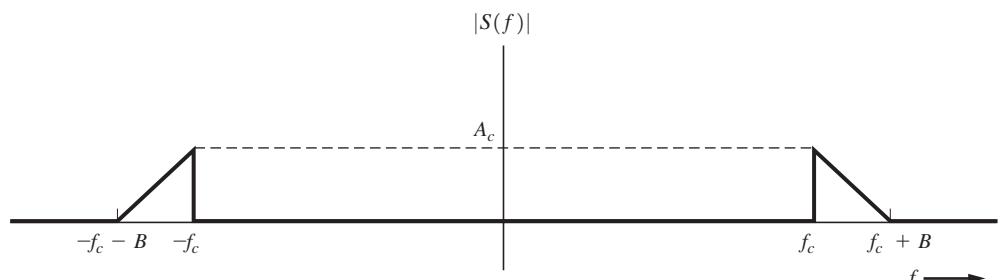

(c) Magnitude of Corresponding Spectrum of the USSB Signal

Figure 5–4 Spectrum for a USSB signal.

To prove the result for the USSB case, choose the upper sign. Then, from Eq. (5–19), Eq. (5–21) becomes

$$G(f) = \begin{cases} 2A_c M(f), & f > 0 \\ 0, & f < 0 \end{cases} \quad (5-22)$$

Substituting Eq. (5–22) into Eq. (4–15), yields the bandpass signal:

$$S(f) = A_c \begin{cases} M(f - f_c), & f > f_c \\ 0, & f < f_c \end{cases} + A_c \begin{cases} 0, & f > -f_c \\ M(f + f_c), & f < -f_c \end{cases} \quad (5-23)$$

This is indeed a USSB signal (see Fig. 5–4).

If the lower signs of Eq. (5–21) were chosen, an LSSB signal would have been obtained. The *normalized average power* of the SSB signal is

$$\langle s^2(t) \rangle = \frac{1}{2} \langle |g(t)|^2 \rangle = \frac{1}{2} A_c^2 \langle m^2(t) + [\hat{m}(t)]^2 \rangle \quad (5-24)$$

As shown in study-aid Example SA5–1, $\langle \hat{m}(t)^2 \rangle = \langle m^2(t) \rangle$, so that the SSB signal power is

$$\langle s^2(t) \rangle = A_c^2 \langle m^2(t) \rangle \quad (5-25)$$

which is the power of the modulating signal $\langle m^2(t) \rangle$ multiplied by the power gain factor A_c^2 .

Example 5–4 USSB SIGNALING

Let $m(t) = \sin(2\pi t)$. Using Eq. (5–16), evaluate and plot the resulting USSB signal where the carrier frequency is 10 Hz and $A_c = 1$. Demonstrate that this is USSB. See Example5_04.m for the solution.

The *normalized peak envelope power (PEP)* is

$$\frac{1}{2} \max \{ |g(t)|^2 \} = \frac{1}{2} A_c^2 \max \{ m^2(t) + [\hat{m}(t)]^2 \} \quad (5-26)$$

Figure 5–5 illustrates two techniques for generating the SSB signal. The *phasing method* is identical to the IQ canonical form discussed earlier (Fig. 4–28) as applied to SSB signal generation. The *filtering method* is a special case in which RF processing (with a sideband filter) is used to form the equivalent $g(t)$, instead of using baseband processing to generate $g[m]$ directly. The filter method is the most popular method because excellent sideband suppression can be obtained when a crystal filter is used for the sideband filter.[†] Crystal filters are relatively inexpensive when produced in quantity at standard IF frequencies. In addition to these two techniques for generating SSB, there is a third technique, called *Weaver's method* [Weaver, 1956].

[†] Excellent sideband suppression is possible because communications-quality audio has negligible spectral content below 300 Hz. Thus, the sideband filter can be designed to provide the required sideband attenuation over a $2 \times 300 = 600$ -Hz transition band.

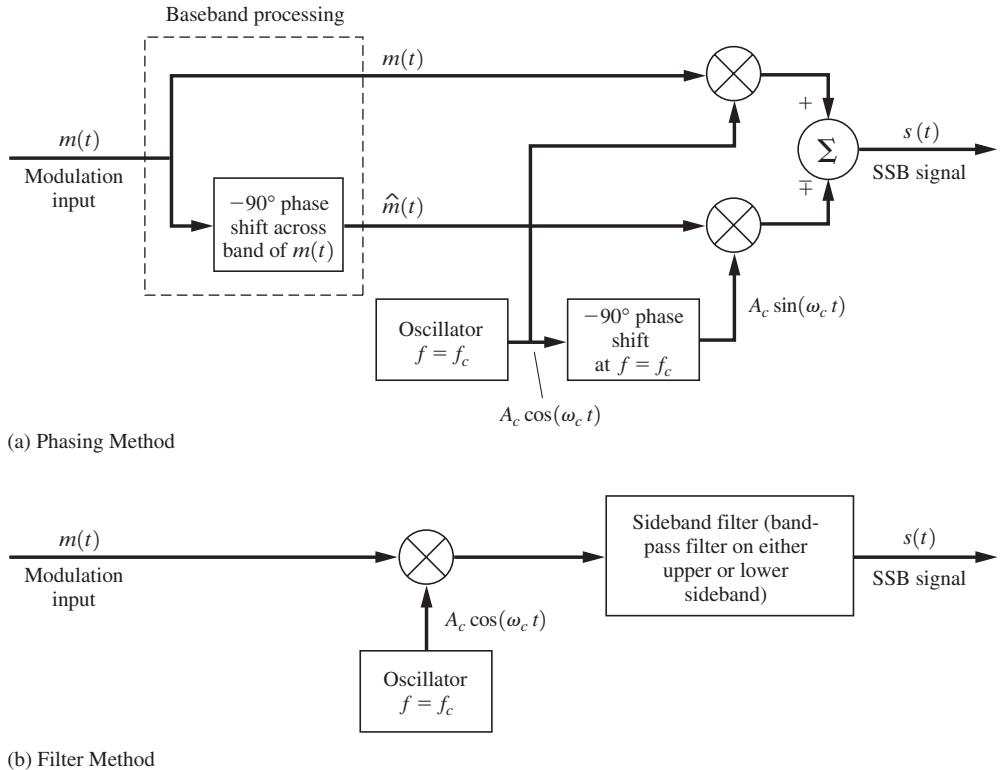


Figure 5–5 Generation of SSB.

This is described by Fig. P5–15 and Prob. P5–15. A practical SSB transmitter incorporates an up converter to translate the SSB signal to the desired operating frequency and uses a Class B amplifier to amplify the signal to the desired power level.

SSB signals have *both* AM and PM. Using Eq. (5–15), we have, for the AM component (real envelope),

$$R(t) = |g(t)| = A_c \sqrt{m^2(t) + [\hat{m}(t)]^2} \quad (5-27)$$

and for the PM component,

$$\theta(t) = \angle g(t) = \tan^{-1} \left[\frac{\pm \hat{m}(t)}{m(t)} \right] \quad (5-28)$$

SSB signals may be received by using a superheterodyne receiver that incorporates a product detector with $\theta_0 = 0$. Thus, the receiver output is

$$v_{\text{out}}(t) = K \operatorname{Re}\{g(t)e^{-j\theta_0}\} = KA_c m(t) \quad (5-29)$$

where K depends on the gain of the receiver and the loss in the channel. In detecting SSB signals with audio modulation, the reference phase θ_0 does not have to be zero, because the same intelligence is heard regardless of the value of the phase used [although the $v_{\text{out}}(t)$ waveform will be drastically different, depending on the value of θ_0]. For digital modulation, the phase has to be exactly correct so that the digital waveshape is preserved. Furthermore, SSB is a poor modulation technique to use if the modulating data signal consists of a line code with a *rectangular* pulse shape. The rectangular shape (zero rise time) causes the value of the SSB-AM waveform to be infinite adjacent to the switching times of the data because of the Hilbert transform operation. (This result will be demonstrated in a homework problem.) Thus, an SSB signal with this type of modulation cannot be generated by any practical device, since a device can produce only finite peak value signals. However, if rolled-off pulse shapes are used in the line code, such as $(\sin x)/x$ pulses, the SSB signal will have a reasonable peak value, and digital data transmission can then be accommodated via SSB.

SSB has many advantages, such as a superior detected signal-to-noise ratio compared to that of AM (see Chapter 7) and the fact that SSB has one-half the bandwidth of AM or DSB-SC signals. (For additional information on this topic, the reader is referred to a book that is devoted wholly to SSB [Sabin and Schoenike, 1987].)

Vestigial Sideband

In certain applications (such as television broadcasting), a DSB modulation technique takes too much bandwidth for the (television) channel, and an SSB technique is too expensive to implement, although it takes only half the bandwidth. In this case, a compromise between DSB and SSB, called *vestigial sideband* (VSB), is often chosen. VSB is obtained by partial suppression of one of the sidebands of a DSB signal. The DSB signal may be either an AM signal (that is, it has a discrete carrier term) or a DSB-SC signal. This approach is illustrated in Fig. 5–6, where one sideband of the DSB signal is attenuated by using a bandpass filter, called a vestigial sideband filter, that has an asymmetrical frequency response about $\pm f_c$. The VSB signal is given by

$$s_{\text{VSB}}(t) = s(t) * h_v(t) \quad (5-30)$$

where $s(t)$ is a DSB signal described by either Eq. (5–4) with carrier or Eq. (5–13) with suppressed carrier and $h_v(t)$ is the impulse response of the VSB filter. The spectrum of the VSB signal is


$$S_{\text{VSB}}(f) = S(f)H_v(f) \quad (5-31)$$

as illustrated in Fig. 5–6d.


The modulation on the VSB signal can be recovered by a receiver that uses product detection or, if a large carrier is present, by the use of envelope detection. For recovery of undistorted modulation, the transfer function for the VSB filter must satisfy the constraint

$$H_v(f - f_c) + H_v(f + f_c) = C, \quad |f| \leq B \quad (5-32)$$


where C is a constant and B is the bandwidth of the modulation. An application of this constraint is shown in Fig. 5–6e, where it is seen that the condition specified by Eq. (5–32) is satisfied for the VSB filter characteristic shown in Fig. 5–6c.

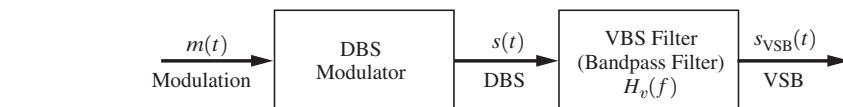


(a) Generation of VSB Signal

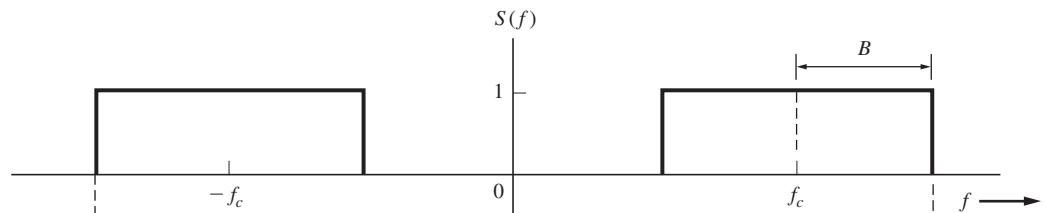


(b) Spectrum of DSB Signal

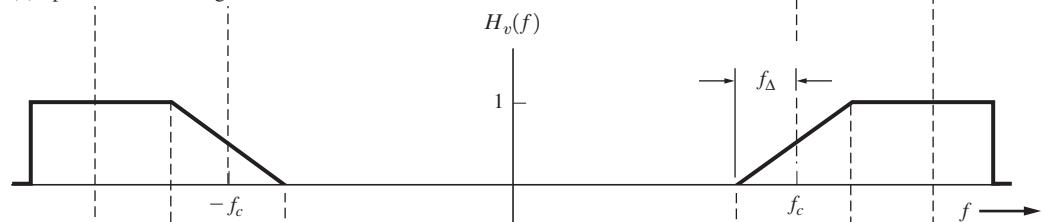

(c) Transfer Function of VSB Filter

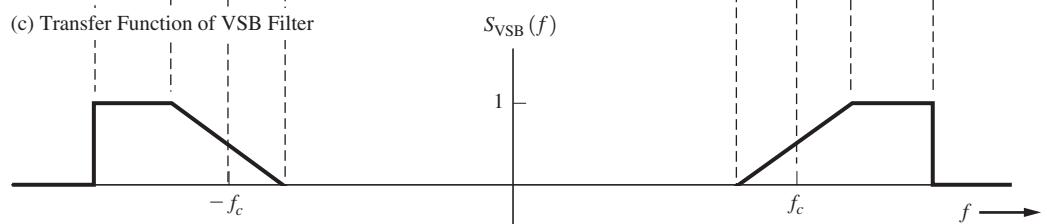

(d) Spectrum of VSB Signal

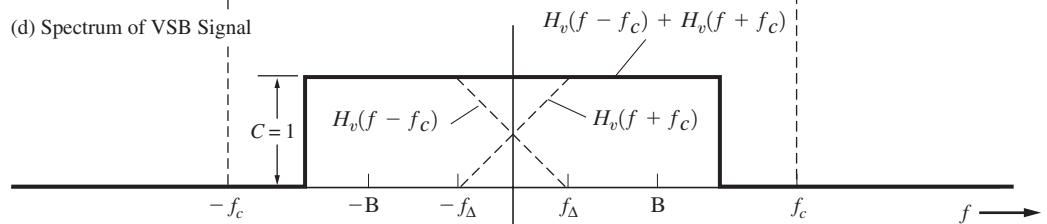**Figure 5–6** VSB transmitter and spectra.

The need for the constraint of Eq. (5–32) will now be proven. Assume that $s(t)$ is a DSB-SC signal. Then, by the use of Eqs. (5–14) and (5–31), the spectrum of the VSB signal is

$$S_{\text{VSB}}(f) = \frac{A_c}{2} [M(f - f_c)H_v(f) + M(f + f_c)H_v(f)]$$

Referring to Fig. 4–14, we see that the product detector output is

$$v_{\text{out}}(t) = [A_0 s_{\text{VSB}}(t) \cos \omega_c t] * h(t)$$

where $h(t)$ is the impulse response of the low-pass filter having a bandwidth of B hertz. In the frequency domain, this equation becomes

$$V_{\text{out}}(f) = A_0 \left\{ S_{\text{VSB}}(f) * \left[\frac{1}{2} \delta(f - f_c) + \frac{1}{2} \delta(f + f_c) \right] \right\} H(f)$$

where $H(f) = 1$ for $|f| < B$ and 0 elsewhere. Substituting for $S_{\text{VSB}}(f)$ and using the convolutional property $x(f) * \delta(f - a) = x(f - a)$ yields

$$V_{\text{out}}(f) = \frac{A_c A_0}{4} [M(f)H_v(f - f_c) + M(f)H_v(f + f_c)], \quad |f| < B$$

or

$$V_{\text{out}}(f) = \frac{A_c A_0}{4} M(f)[H_v(f - f_c) + H_v(f + f_c)], \quad |f| < B$$

If $H_v(f)$ satisfies the constraint of Eq. (5–32), this equation becomes

$$V_{\text{out}}(f) = K M(f)$$

or $V_{\text{out}}(t) = Km(t)$, where $K = A_c A_0 / 4$, which shows that the output of the product detector is undistorted when Eq. (5–32) is satisfied.

As discussed in Chapter 8, both analog and digital broadcast television use VSB to reduce the required channel bandwidth to 6 MHz. For analog TV, as shown in Fig. 8–31c, the frequency response of the visual TV transmitter is flat over the upper sideband out to 4.2 MHz above the visual carrier frequency and is flat over the lower sideband out to 0.75 MHz below the carrier frequency. The IF filter in the TV receiver has the VSB filter characteristic shown in Fig. 5–6c, where $f_\Delta = 0.75$ MHz. This gives an overall frequency response characteristic that satisfies the constraint of Eq. (5–32), so that the video modulation on the visual VSB TV signal can be recovered at the receiver without distortion.

Digital TV (in the United States; see Sec. 8–9) uses an $r = 0.0575$ square-root raised cosine-rolloff filter at the transmitter to obtain VSB as shown in Fig. 8–39. In practice, a square-root raised cosine-rolloff filter is used in both the digital TV transmitter and the receiver to give the overall raised cosine-rolloff characteristic, thereby minimizing the effect of channel noise as well as ISI. (See Sec. 3–6.) This overall response also satisfies Eq. (5–32), so that the digital TV signal (8-level serial data) is recovered without distortion or ISI.

5–6 PHASE MODULATION AND FREQUENCY MODULATION

Representation of PM and FM Signals

Phase modulation (PM) and *frequency modulation* (FM) are special cases of angle-modulated signaling. In this kind of signaling the complex envelope is

$$g(t) = A_c e^{j\theta(t)} \quad (5-33)$$

Here the real envelope, $R(t) = |g(t)| = A_c$, is a constant, and the phase $\theta(t)$ is a linear function of the modulating signal $m(t)$. However, $g(t)$ is a *nonlinear* function of the modulation. Using Eq. (5–33), we find the resulting *angle-modulated signal* to be

$$s(t) = A_c \cos [\omega_c t + \theta(t)] \quad (5-34)$$

For PM, the phase is directly proportional to the modulating signal; that is,

$$\theta(t) = D_p m(t) \quad (5-35)$$

where the proportionality constant D_p is the phase sensitivity of the phase modulator, having units of radians per volt [assuming that $m(t)$ is a voltage waveform]. For FM, the phase is proportional to the integral of $m(t)$, so that

$$\theta(t) = D_f \int_{-\infty}^t m(\sigma) d\sigma \quad (5-36)$$

where the frequency deviation constant D_f has units of radians/volt-second.

Comparing the last two equations, we see that if we have a PM signal modulated by $m_p(t)$, there is *also* FM on the signal, corresponding to a *different* modulation waveshape that is given by

$$m_f(t) = \frac{D_p}{D_f} \left[\frac{dm_p(t)}{dt} \right] \quad (5-37)$$

where the subscripts f and p denote frequency and phase, respectively. Similarly, if we have an FM signal modulated by $m_f(t)$, the corresponding phase modulation on this signal is

$$m_p(t) = \frac{D_f}{D_p} \int_{-\infty}^t m_f(\sigma) d\sigma \quad (5-38)$$

From Eq. (5–38), a PM circuit may be used to synthesize an FM circuit by inserting an integrator in cascade with the phase modulator input. (See Fig. 5–7a.)

Direct PM circuits are realized by passing an unmodulated sinusoidal signal through a time-varying circuit which introduces a phase shift that varies with the applied modulating voltage. (See Fig. 5–8a.) D_p is the gain of the PM circuit (rad/V). Similarly, a direct FM circuit is obtained by varying the tuning of an oscillator tank (resonant) circuit according to the

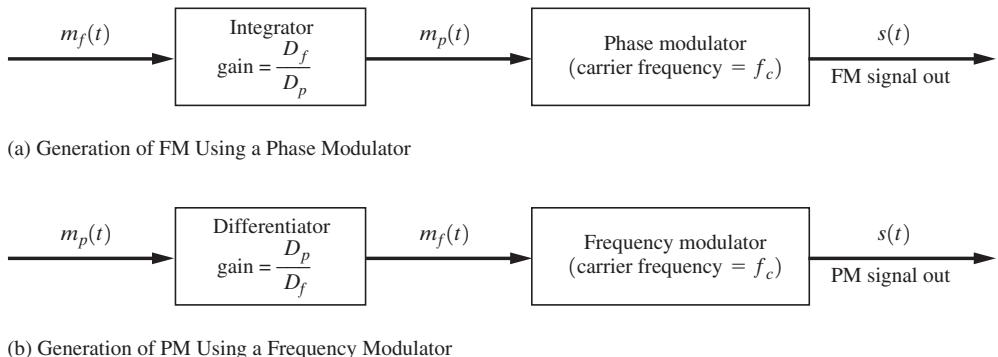


Figure 5–7 Generation of FM from PM, and vice versa.

modulation voltage. This is shown in Fig. 5–8b, where D_f is the gain of the modulator circuit (which has units of radians per volt-second).

DEFINITION. If a bandpass signal is represented by

$$s(t) = R(t) \cos \psi(t)$$

where $\psi(t) = \omega_c t + \theta(t)$, then the *instantaneous frequency* (hertz) of $s(t)$ is [Boashash, 1992]

$$f_i(t) = \frac{1}{2\pi} \omega_i(t) = \frac{1}{2\pi} \left[\frac{d\psi(t)}{dt} \right]$$

or


$$f_i(t) = f_c + \frac{1}{2\pi} \left[\frac{d\theta(t)}{dt} \right] \quad (5-39)$$

For the case of FM, using Eq. (5–36), we obtain the instantaneous frequency:


$$f_i(t) = f_c + \frac{1}{2\pi} D_f m(t) \quad (5-40)$$

Of course, this is the reason for calling this type of signaling *frequency modulation*—the instantaneous frequency varies about the assigned carrier frequency f_c in a manner that is directly proportional to the modulating signal $m(t)$. Figure 5–9b shows how the instantaneous frequency varies when a sinusoidal modulation (for illustrative purposes) is used. The resulting FM signal is shown in Fig. 5–9c.

The instantaneous frequency should not be confused with the term *frequency* as used in the spectrum of the FM signal. The spectrum is given by the Fourier transform of $s(t)$ and is evaluated by looking at $s(t)$ over the infinite time interval ($-\infty < t < \infty$). Thus, the spectrum tells us what frequencies are present in the signal (on the average) *over all time*. The instantaneous frequency is the frequency that is present at a *particular instant of time*.

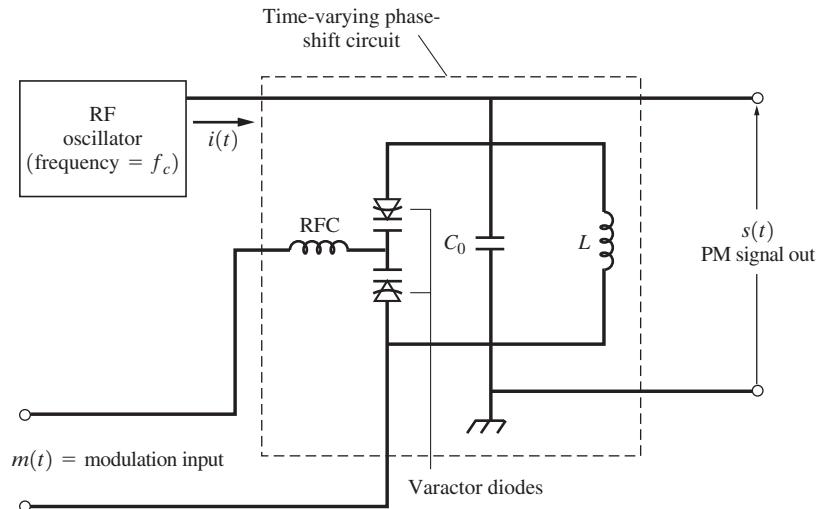

(a) A Phase Modulator Circuit

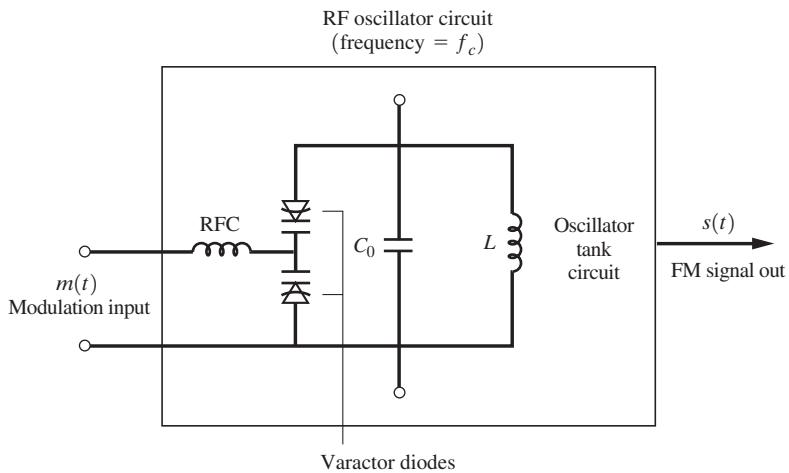

(b) A Frequency Modulator Circuit

Figure 5–8 Angle modulator circuits. RFC = radio-frequency choke.

The *frequency deviation* from the carrier frequency is

$$f_d(t) = f_i(t) - f_c = \frac{1}{2\pi} \left[\frac{d\theta(t)}{dt} \right] \quad (5-41)$$

and the *peak frequency deviation* is

$$\Delta F = \max \left\{ \frac{1}{2\pi} \left[\frac{d\theta(t)}{dt} \right] \right\} \quad (5-42)$$

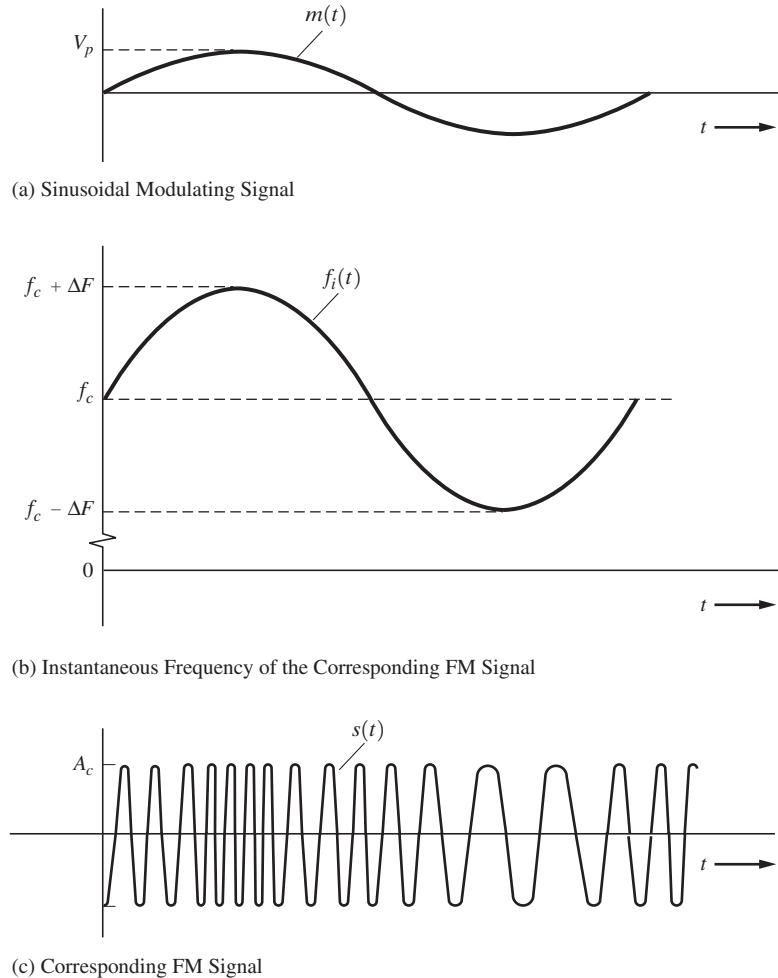


Figure 5–9 FM with a sinusoidal baseband modulating signal.

Note that ΔF is a nonnegative number. In some applications, such as (unipolar) digital modulation, the peak-to-peak deviation is used. This is defined by

$$\Delta F_{\text{pp}} = \max \left\{ \frac{1}{2\pi} \left[\frac{d\theta(t)}{dt} \right] \right\} - \min \left\{ \frac{1}{2\pi} \left[\frac{d\theta(t)}{dt} \right] \right\} \quad (5-43)$$

For FM signaling, the peak frequency deviation is related to the peak modulating voltage by

$$\Delta F = \frac{1}{2\pi} D_f V_p \quad (5-44)$$

where $V_p = \max [m(t)]$, as illustrated in Fig. 5–9a.

From Fig. 5–9, it is obvious that an increase in the amplitude of the modulation signal V_p will increase ΔF . This in turn will increase the bandwidth of the FM signal, but will not affect the average power level of the FM signal, which is $A_c^2/2$. As V_p is increased, spectral components will appear farther and farther away from the carrier frequency, and the spectral components near the carrier frequency will decrease in magnitude, since the total power in the signal remains constant. (For specific details, see Example 5–6.) This situation is distinctly different from AM signaling, where the level of the modulation affects the power in the AM signal, but does not affect its bandwidth.

In a similar way, the *peak phase deviation* may be defined by

$$\Delta\theta = \max [\theta(t)] \quad (5-45)$$

which, for PM, is related to the peak modulating voltage by

$$\Delta\theta = D_p V_p \quad (5-46)$$

where $V_p = \max [m(t)]$.

DEFINITION.[†] The *phase modulation index* is given by

$$\beta_p = \Delta\theta \quad (5-47)$$

where $\Delta\theta$ is the peak phase deviation.

The *frequency modulation index* is given by

$$\beta_f = \frac{\Delta F}{B} \quad (5-48)$$

where ΔF is the peak frequency deviation and B is the bandwidth of the modulating signal, which, for the case of sinusoidal modulation, is f_m , the frequency of the sinusoid.[‡]

For the case of PM or FM signaling with *sinusoidal* modulation such that the PM and FM signals have the same peak frequency deviation, β_p is identical to β_f .

Example 5–5 FM SIGNAL WITH SINUSOIDAL MODULATION

Plot the waveform for an FM signal that has a modulating signal of $m_f(t) = \cos(2\pi t)$. Assume that the carrier frequency is 5 Hz and the modulation index is 3. See Example5_05.m for the solution.

[†] For digital signals, an alternative definition of modulation index is sometimes used and is denoted by h in the literature. This digital modulation index is $h = 2\Delta\theta/\pi$, where $2\Delta\theta$ is the maximum peak-to-peak phase deviation change during the time that it takes to send one symbol, T_s . [See Eq. (5–82).]

[‡] Strictly speaking, the FM index is defined only for the case of single-tone (i.e., sinusoidal) modulation. However, it is often used for other waveshapes, where B is chosen to be the highest frequency or the dominant frequency in the modulating waveform.

Spectra of Angle-Modulated Signals

Using Eq. (4-12), we find that the spectrum of an angle modulated signal is given by

$$S(f) = \frac{1}{2} [G(f-f_c) + G^*(-f-f_c)] \quad (5-49)$$

where

$$G(f) = \mathcal{F}[g(t)] = \mathcal{F}[A_c e^{j\theta(t)}] \quad (5-50)$$

When the spectra for AM, DSB-SC, and SSB were evaluated, we were able to obtain relatively simple formulas relating $S(f)$ to $M(f)$. For angle modulation signaling, this is not the case, because $g(t)$ is a nonlinear function of $m(t)$. Thus, a general formula relating $G(f)$ to $M(f)$ cannot be obtained. This, is unfortunate, but it is a fact of life. That is, to evaluate the spectrum for an angle-modulated signal, Eq. (5-50) must be evaluated on a case-by-case basis for the particular modulating waveshape of interest. Furthermore, since $g(t)$ is a nonlinear function of $m(t)$, superposition does not hold, and the FM spectrum for the sum of two modulating waveshapes is not the same as summing the FM spectra that were obtained when the individual waveshapes were used.

One example of the spectra obtained for an angle-modulated signal is given in Chapter 2. (See Example 2-22.) There, a carrier was phase modulated by a square wave where the peak-to-peak phase deviation was 180° . In that example, the spectrum was easy to evaluate because this was the very special case where the PM signal reduces to a DSB-SC signal. In general, of course, the evaluation of Eq. (5-50) into a closed form is not easy, and one often has to use numerical techniques to approximate the Fourier transform integral. An example for the case of a sinusoidal modulating waveshape will now be worked out.

Example 5-6 SPECTRUM OF A PM OR FM SIGNAL WITH SINUSOIDAL MODULATION

Assume that the modulation on the PM signal is

$$m_p(t) = A_m \sin \omega_m t \quad (5-51)$$

Then

$$\theta(t) = \beta \sin \omega_m t \quad (5-52)$$

where $\beta_p = D_p A_m = \beta$ is the phase modulation index.

The same phase function $\theta(t)$, as given by Eq. (5-52), could also be obtained if FM were used, where

$$m_f(t) = A_m \cos \omega_m t \quad (5-53)$$

and $\beta = \beta_f = D_f A_m / \omega_m$. The peak frequency deviation would be $\Delta F = D_f A_m / 2\pi$.

The complex envelope is

$$g(t) = A_c e^{j\theta(t)} = A_c e^{j\beta \sin \omega_m t} \quad (5-54)$$

which is periodic with period $T_m = 1/f_m$. Consequently, $g(t)$ could be represented by a Fourier series that is valid over all time ($\infty < t < \infty$); namely,

$$g(t) = \sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_m t} \quad (5-55)$$

where

$$c_n = \frac{A_c}{T_m} \int_{-T_m/2}^{T_m/2} (e^{j\beta \sin \omega_m t}) e^{-jn\omega_m t} dt \quad (5-56)$$

which reduces to

$$c_n = A_c \left[\frac{1}{2\pi} \int_{-\pi}^{\pi} e^{j(\beta \sin \theta - n\theta)} d\theta \right] = A_c J_n(\beta) \quad (5-57)$$

This integral—known as the *Bessel function of the first kind of the nth order*, $J_n(\beta)$ —cannot be evaluated in closed form, but it has been evaluated numerically. Some tabulated values for $J_n(\beta)$ are given in Table 5–2. Extensive tables are available [Abramowitz and Stegun, 1964] or can be computed using MATLAB. The Bessel functions are invoked by standard function calls in mathematical personal computer programs such as MATLAB. Examination of the integral shows that (by making a change in variable)

$$J_{-n}(\beta) = (-1)^n J_n(\beta) \quad (5-58)$$

A plot of the Bessel functions for various orders n as a function of β is shown in Fig. 5–10.

Taking the Fourier transform of Eq. (5–55), we obtain

$$G(f) = \sum_{n=-\infty}^{n=\infty} c_n \delta(f - nf_m) \quad (5-59)$$


or

$$G(f) = A_c \sum_{n=-\infty}^{n=\infty} J_n(\beta) \delta(f - nf_m) \quad (5-60)$$

Using this result in Eq. (5–49), we get the spectrum of the angle-modulated signal. See Example5_06.m. The magnitude spectrum for $f > 0$ is shown in Fig. 5–11 for the cases of $\beta = 0.2, 1.0, 2.0, 5.0$, and 8.0 . Note that the discrete carrier term (at $f = f_c$) is proportional to $|J_0(\beta)|$; consequently, the level (magnitude) of the discrete carrier depends on the modulation index. It will be zero if $J_0(\beta) = 0$, which occurs if $\beta = 2.40, 5.52$, and so on, as shown in Table 5–3.



TABLE 5-2 FOUR-PLACE VALUES OF THE BESSSEL FUNCTIONS $J_n(\beta)$

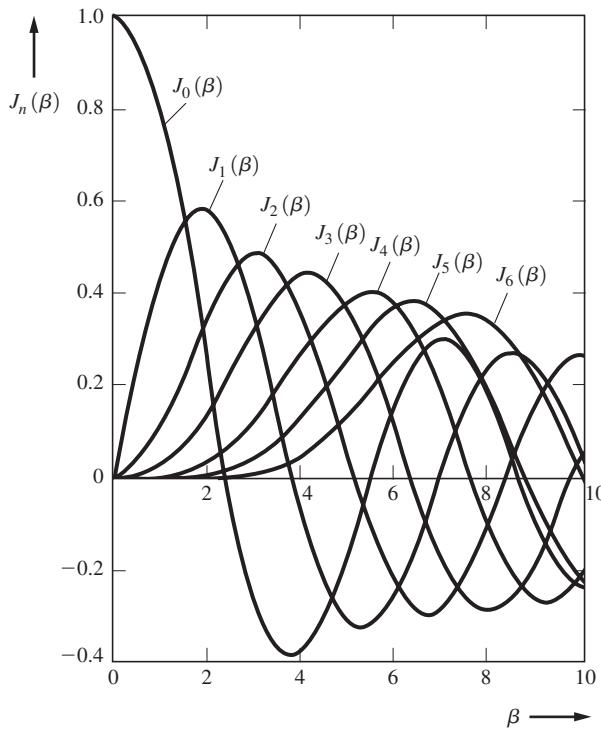Figure 5–10 Bessel functions for $n = 0$ to $n = 6$.TABLE 5–3 ZEROS OF BESSEL FUNCTIONS: VALUES FOR β WHEN $J_n(\beta) = 0$

	Order of Bessel Function, n						
	0	1	2	3	4	5	6
β for 1st zero	2.40	3.83	5.14	6.38	7.59	8.77	9.93
β for 2nd zero	5.52	7.02	8.42	9.76	11.06	12.34	13.59
β for 3rd zero	8.65	10.17	11.62	13.02	14.37	15.70	17.00
β for 4th zero	11.79	13.32	14.80	16.22	17.62	18.98	20.32
β for 5th zero	14.93	16.47	17.96	19.41	20.83	22.21	23.59
β for 6th zero	18.07	19.61	21.12	22.58	24.02	25.43	26.82
β for 7th zero	21.21	22.76	24.27	25.75	27.20	28.63	30.03
β for 8th zero	24.35	25.90	27.42	28.91	30.37	31.81	33.23

Figure 5–11 also shows that the bandwidth of the angle-modulated signal depends on β and f_m . In fact, it can be shown that 98% of the total power is contained in the bandwidth

$$B_T = 2(\beta + 1)B \quad (5-61)$$

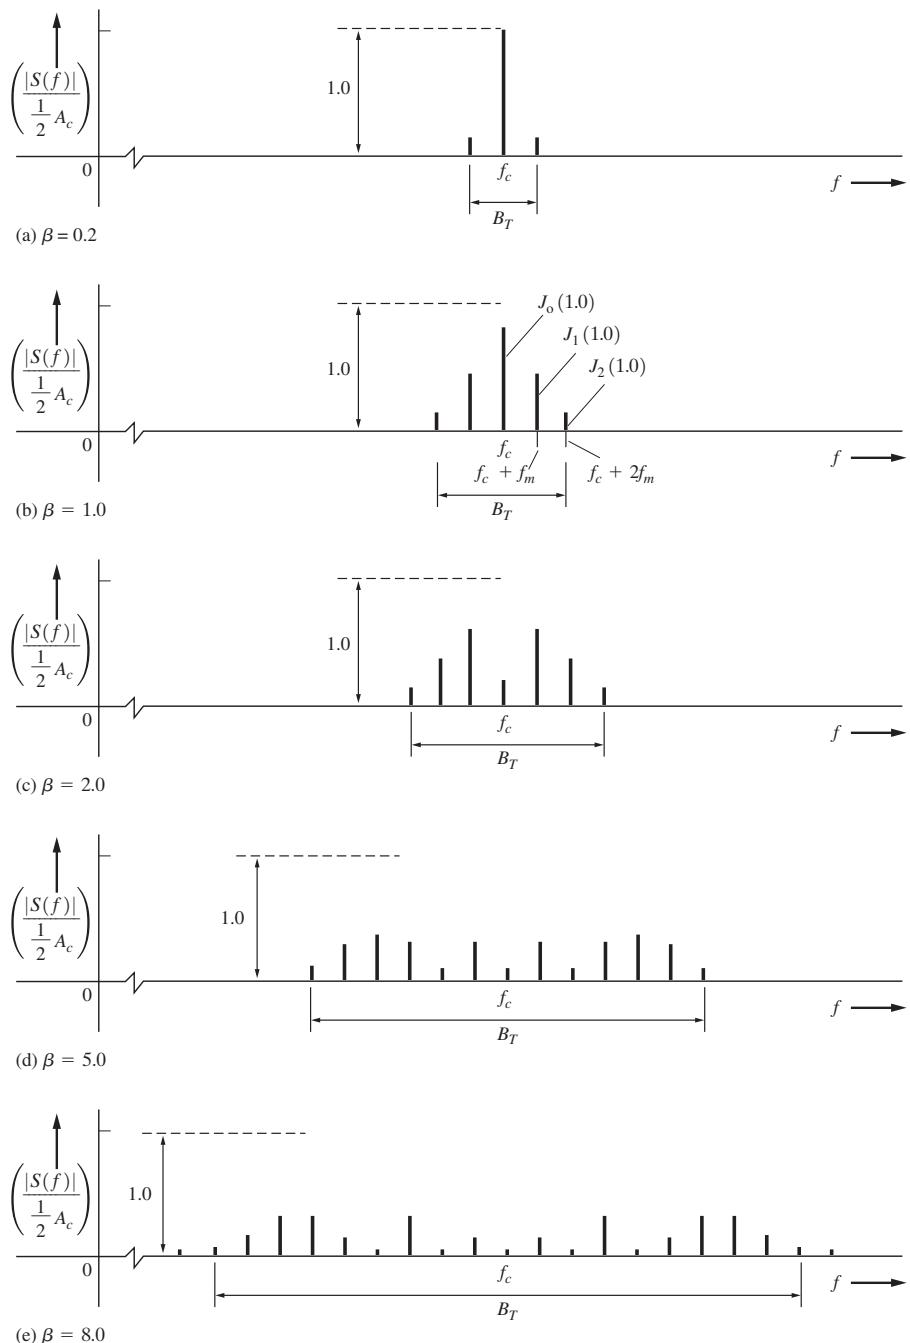


Figure 5-11 Magnitude spectra for FM or PM with sinusoidal modulation for various modulation indexes.

where β is either the phase modulation index or the frequency modulation index and B is the bandwidth of the modulating signal (which is f_m for sinusoidal modulation).[†] This formula gives a rule-of-thumb expression for evaluating the transmission bandwidth of PM and FM signals; it is called *Carson's rule*. B_T is shown in Fig. 5–11 for various values of β . Carson's rule is very important because it gives an easy way to compute the bandwidth of angle-modulated signals. Computation of the bandwidth using other definitions, such as the 3-dB bandwidth, can be very difficult, since the spectrum of the FM or PM signal must first be evaluated. This is a nontrivial task, except for simple cases such as single-tone (sinusoidal) modulation or unless a digital computer is used to compute the approximate spectrum.

Because the exact spectrum of angle-modulated signals is difficult to evaluate in general, formulas for the approximation of the spectra are extremely useful. Some relatively simple approximations may be obtained when the peak phase deviation is small and when the modulation index is large. These topics are discussed in the sections on narrowband angle modulation and wideband FM that follow.

Narrowband Angle Modulation

When $\theta(t)$ is restricted to a small value, say, $|\theta(t)| < 0.2$ rad, the complex envelope $g(t) = A_c e^{j\theta}$ may be approximated by a Taylor's series in which only the first two terms are used. Thus, because $e^x \approx 1 + x$ for $|x| \ll 1$,


$$g(t) \approx A_c[1 + j\theta(t)] \quad (5-62)$$

Using this approximation in Eq. (4–9) or Eq. (5–1), we obtain the expression for a *narrowband angle-modulated signal*:


$$s(t) = \underbrace{A_c \cos \omega_c t}_{\text{discrete carrier term}} - \underbrace{A_c \theta(t) \sin \omega_c t}_{\text{sideband term}} \quad (5-63)$$

This result indicates that a narrowband angle-modulated signal consists of two terms: a discrete carrier component (which does not change with the modulating signal) and a sideband term. This signal is similar to an AM-type signal, *except* that the sideband term is 90° out of phase with the discrete carrier term. The narrowband signal can be generated by using a balanced modulator (multiplier), as shown in Fig. 5–12a for the case of narrowband frequency modulation (NBFM). Furthermore, wideband frequency modulation (WBFM) may be generated from the NBFM signal by using frequency multiplication, as shown in Fig. 5–12b. Limiter circuits are needed to suppress the incidental AM [which is $\sqrt{1 + \theta^2(t)}$ as the result of the approximation of Eq. (5–62)] that is present in the NBFM signal. This method of generating WBFM is called the *Armstrong method* or *indirect method*.

[†] For the case of FM (not PM) with $2 < B < 10$, Carson's rule, Eq. (5–61), actually underestimates B_T somewhat. In this case, a better approximation is $B_T = 2(\beta + 2)B$. Also, if the modulation signal contains discontinuities, such as square-wave modulation, both formulas may not be too accurate, and the B_T should be evaluated by examining the spectrum of the angle-modulated signal. However, to avoid confusion in computing B_T , we will assume that Eq. (5–61) is approximately correct for all cases.

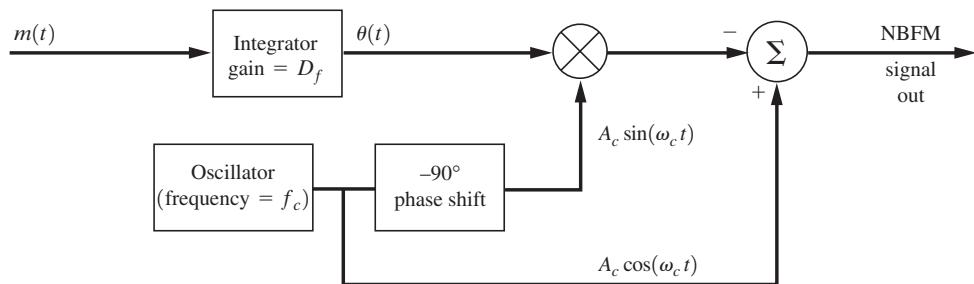

(a) Generation of NBFM Using a Balanced Modulator

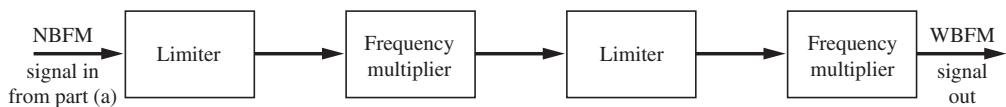

(b) Generation of WBFM From a NBFM Signal

Figure 5–12 Indirect method of generating WBFM (Armstrong method).

Example 5–7 NARROWBAND APPROXIMATION OF A PM SIGNAL WITH SINUSOIDAL MODULATION

Using the narrowband approximation, plot the waveform for a PM signal that has a modulating signal of $m(t) = \sin(2\pi t)$. Assume that the carrier frequency is 5 Hz and the modulation index is 0.8. Compare the waveform of the narrowband PM signal with the actual PM signal and the carrier signal. See Example5_07.m for the solution.

From Eqs. (5–62) and (5–49), the spectrum of the narrowband angle-modulated signal is

$$S(f) = \frac{A_c}{2} \{ [\delta(f - f_c) + \delta(f + f_c)] + j[\Theta(f - f_c) - \Theta(f + f_c)] \} \quad (5–64)$$

where

$$\Theta(f) = \mathcal{F}[\theta(t)] = \begin{cases} D_{PM}(f), & \text{for PM signaling} \\ \frac{D_f}{j2\pi f} M(f), & \text{for FM signaling} \end{cases} \quad (5–65)$$

Wideband Frequency Modulation

A *direct method* of generating wideband frequency modulation (WBFM) is to use a voltage-controlled oscillator (VCO), as illustrated in Fig. 5–8b. However, for VCOs that are designed

for wide frequency deviation (ΔF large), the stability of the carrier frequency $f_c = f_0$ is not very good, so the VCO is incorporated into a PLL arrangement wherein the PLL is locked to a stable frequency source, such as a crystal oscillator. (See Fig. 5–13.) The frequency divider is needed to lower the modulation index of the WBFM signal to produce an NBFM signal ($\beta \approx 0.2$) so that a large discrete carrier term will always be present at frequency f_c/N to beat with the crystal oscillator signal and produce the DC control voltage. [See Fig. 5–11a and Eqs. (5–63) and (5–64).] This DC control voltage holds the VCO on the assigned frequency with a tolerance determined by the crystal oscillator circuit.

The power spectral density (PSD) of a WBFM signal may be *approximated* by using the probability density function (PDF) of the modulating signal. This is reasonable from an intuitive viewpoint, since the instantaneous frequency varies directly with the modulating signal voltage for the case of FM [$D_f/(2\pi)$ being the proportionality constant]. If the modulating signal spends more time at one voltage value than another, the instantaneous frequency will dwell at the corresponding frequency, and the power spectrum will have a peak at this frequency. A discussion of the approximation involved—called the *quasi-static approximation*—is well documented [Rowe, 1965]. This result is stated in the following theorem.

THEOREM. *For WBFM signaling, where*

$$s(t) = A_c \cos \left[\omega_c t + D_f \int_{-\infty}^1 m(\sigma) d\sigma \right]$$

$$\beta_f = \frac{D_f \max [m(t)]}{2\pi B} > 1$$

and B is the bandwidth of $m(t)$, the normalized PSD of the WBFM signal is approximated by

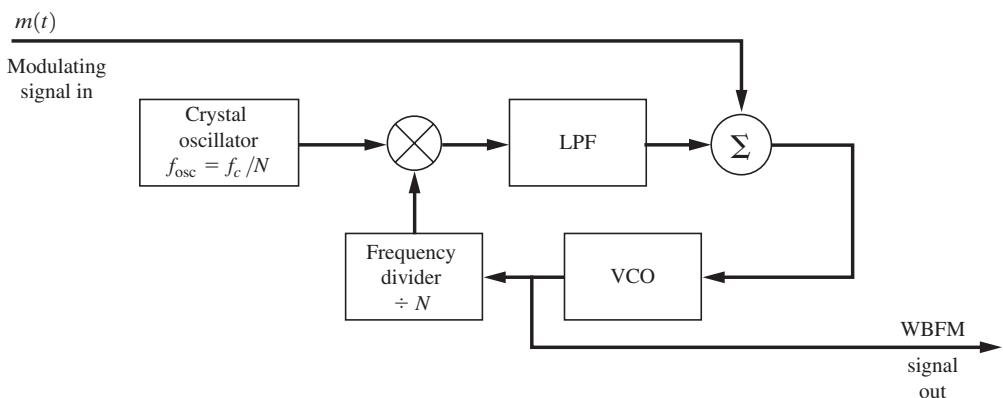


Figure 5–13 Direct method of generating WBFM.

$$\mathcal{P}(f) = \frac{\pi A_c^2}{2D_f} \left[f_m\left(\frac{2\pi}{D_f}(f - f_c)\right) + f_m\left(\frac{2\pi}{D_f}(-f - f_c)\right) \right] \quad (5-66)$$


where $f_m(\cdot)$ is the PDF of the modulating signal.[†]

This theorem is proved in Prob. 6–60.

Example 5–8 SPECTRUM FOR WBFM WITH TRIANGULAR MODULATION

The spectrum for a WBFM signal with a triangular modulating signal (Fig. 5–14a) will be evaluated. The associated PDF for triangular modulation is shown in Fig. 5–14b. The PDF is described by

$$f_m(m) = \begin{cases} \frac{1}{2V_p}, & |m| < V_p \\ 0, & m \text{ otherwise} \end{cases} \quad (5-67)$$

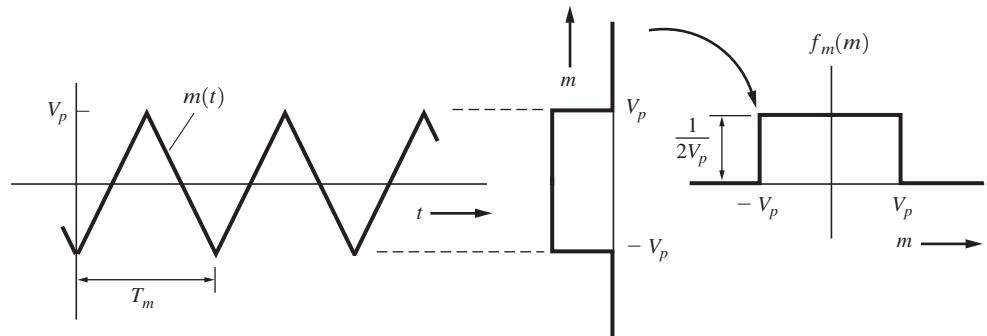

(a) Triangle Modulating Waveform

(b) PDF of Triangle Modulation

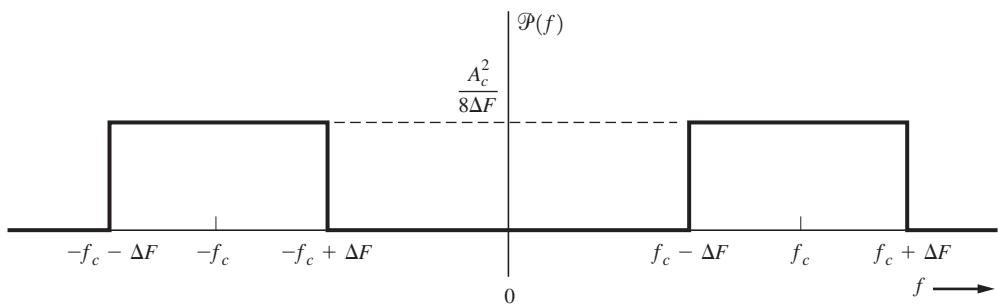


Figure 5–14 Approximate spectrum of a WBFM signal with triangle modulation.

[†] See Appendix B for the definition of PDF and examples of PDFs for various waveforms. This topic may be deleted if the reader is not sufficiently familiar with PDFs. Do not confuse the PDF of the modulation, $f_m(\cdot)$, with the frequency variable f .

where V_p is the peak voltage of the triangular waveform. Substituting this equation into Eq. (5–66), we obtain

$$\begin{aligned}\mathcal{P}(f) &= \frac{\pi A_c^2}{2D_f} \left[\begin{cases} \frac{1}{2V_p}, & \left| \frac{2\pi}{D_f} (f - f_c) \right| < V_p \\ 0, & f \text{ otherwise} \end{cases} \right] \\ &+ \left[\begin{cases} \frac{1}{2V_p}, & \left| \frac{2\pi}{D_f} (f - f_c) \right| < V_p \\ 0, & f \text{ otherwise} \end{cases} \right]\end{aligned}$$

The PSD of the WBFM signal becomes

$$\begin{aligned}\mathcal{P}(f) &= \left\{ \begin{cases} \frac{A_c^2}{8\Delta F}, & (f_c - \Delta F) < f < (f_c + \Delta F) \\ 0, & f \text{ otherwise} \end{cases} \right\} \\ &+ \left\{ \begin{cases} \frac{A_c^2}{8\Delta F}, & (-f_c - \Delta F) < f < (-f_c + \Delta F) \\ 0, & f \text{ otherwise} \end{cases} \right\} \quad (5-68)\end{aligned}$$

where the peak frequency deviation is

$$\Delta F = \frac{D_f V_p}{2\pi} \quad (5-69)$$

This PSD is plotted in Fig. 5–14c. It is recognized that this result is an *approximation* to the actual PSD. In this example, the modulation is periodic with period T_m , so that the actual spectrum is a line spectrum with the delta functions spaced $f_m = 1/T_m$ hertz apart from each other (like the spacing shown in Fig. 5–11 for the case of sinusoidal modulation). This approximation gives us the *approximate envelope* of the line spectrum. (If the modulation had been nonperiodic, the exact spectrum would be continuous and thus would not be a line spectrum.)

In the other example, which uses sinusoidal (periodic) modulation, the exact PSD is known to contain line components with weights $[A_c J_n(\beta)]^2/2$ located at frequencies $f = f_c + nf_m$. (See Fig. 5–11.) For the case of a high index, the envelope of these weights approximates the PDF of a sinusoid as given in Appendix B.

The approximate spectra for *wideband digital PM* signals can also be evaluated by Eq. (5–66). For digital modulation with rectangular pulse shapes, the PDF of the modulation voltage, $m(t)$, consists of delta functions located at the discrete voltage levels. Consequently, the PSD for wideband digital FM is approximated by delta functions. This approximation is illustrated in Fig. 5–15 for wideband binary frequency shift keying (FSK).

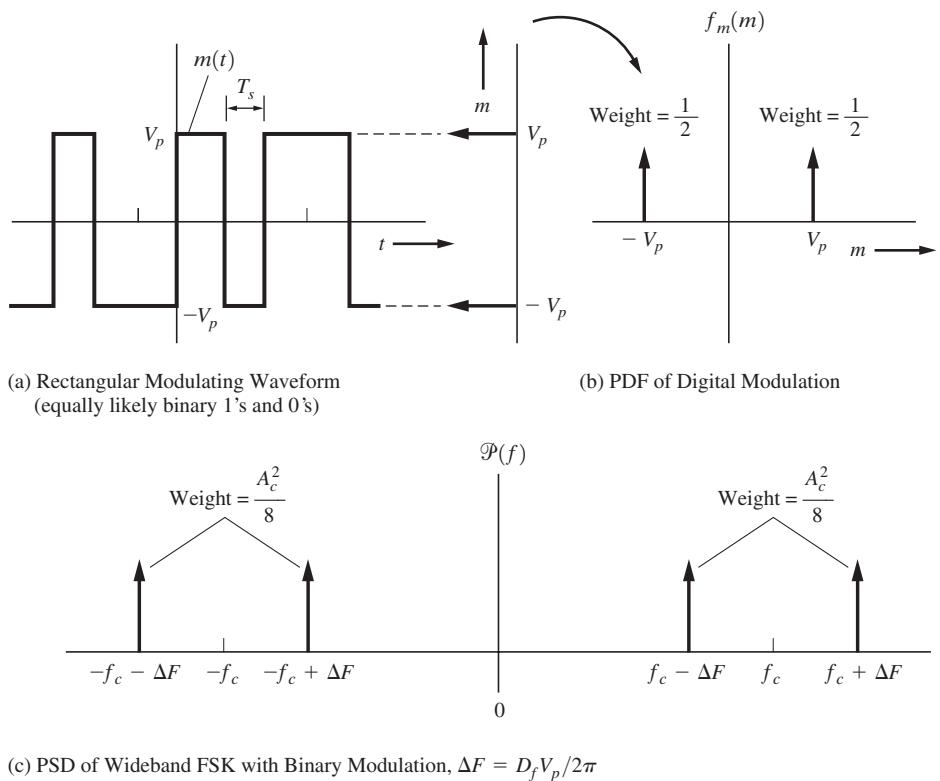



Figure 5–15 Approximate spectrum of wideband binary FSK.

In summary, some important properties of angle-modulated signals are as follows:


- An angle-modulated signal is a nonlinear function of the modulation, and consequently, the bandwidth of the signal increases as the modulation index increases.
- The discrete carrier level changes, depending on the modulating signal, and is zero for certain types of modulating waveforms.
- The bandwidth of a narrowband angle-modulated signal is twice the modulating signal bandwidth (the same as that for AM signaling).
- The real envelope of an angle-modulated signal, $R(t) = A_c$, is constant and, consequently, does not depend on the level of the modulating signal.

Preemphasis and Deemphasis in Angle-Modulated Systems


In angle-modulated systems, the signal-to-noise ratio at the output of the receiver can be improved if the level of the modulation (at the transmitter) is boosted at the top end of the (e.g., audio) spectrum—this is called *preemphasis*—and attenuated at high frequencies on the receiver output—called *deemphasis*. This gives an overall baseband frequency response that is flat, while improving the signal-to-noise ratio at the receiver output. (See Fig. 5–16.) In the

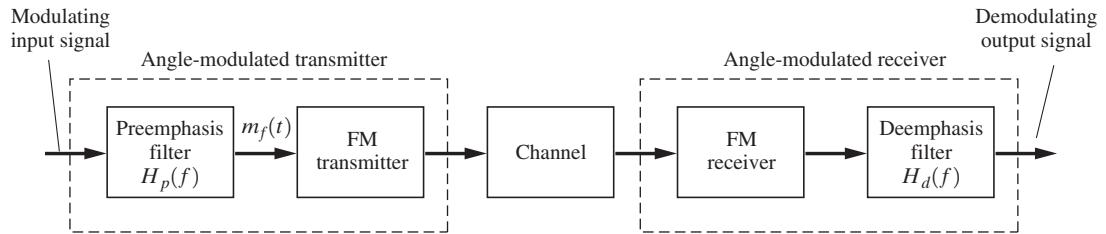


(a) Overall Block Diagram

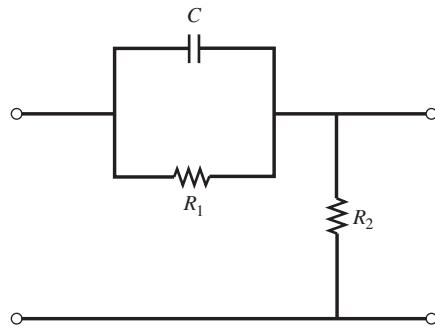


(b) Preemphasis Filter

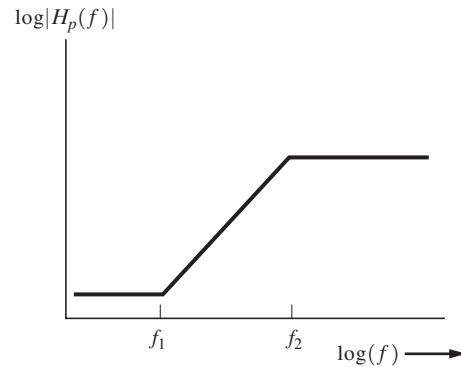

(c) Bode Plot of Preemphasis Frequency Response

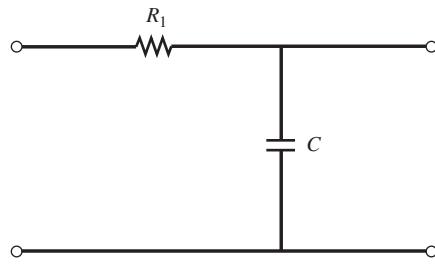

(b) Deemphasis Filter

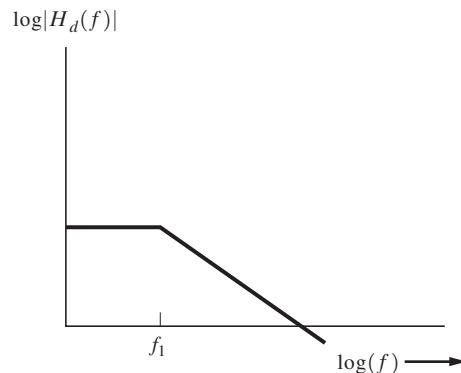

(c) Bode Plot of Deemphasis Characteristic

Figure 5–16 Angle-modulated system with preemphasis and deemphasis.

preemphasis characteristic, the second corner frequency f_2 occurs much above the baseband spectrum of the modulating signal (say, 25 kHz for audio modulation). In FM broadcasting, the time constant τ_1 is usually 75 μs , so that f_1 occurs at 2.12 kHz. The resulting overall system frequency response obtained using preemphasis at the transmitter and deemphasis at the receiver is flat over the band of the modulating signal. In FM broadcasting, with 75- μs preemphasis, the signal that is transmitted is an FM signal for modulating frequencies up to 2.1 kHz, but a *phase-modulated* signal for audio frequencies above 2.1 kHz, because the preemphasis network acts as a differentiator for frequencies between f_1 and f_2 . Hence, *preemphasized FM is actually a combination of FM and PM* and combines the advantages of both with respect to noise performance. In Chapter 7, we demonstrated that preemphasis–deemphasis improves the signal-to-noise ratio at the receiver output.

5-7 FREQUENCY-DIVISION MULTIPLEXING AND FM STEREO

Frequency-division multiplexing (FDM) is a technique for transmitting multiple messages simultaneously over a wideband channel by first modulating the message signals onto several subcarriers and forming a composite baseband signal that consists of the sum of these modulated subcarriers. This composite signal may then be modulated onto the main carrier, as shown in Fig. 5-17. Any type of modulation, such as AM, DSB, SSB, PM, FM, and so on, can be used. The types of modulation used on the subcarriers, as well as the type used on the main carrier, may be different. However, as shown in Fig. 5-17b, the composite signal spectrum must consist of modulated signals that do not have overlapping spectra; otherwise, crosstalk will occur between the message signals at the receiver output. The composite baseband signal then modulates a main transmitter to produce the FDM signal that is transmitted over the wideband channel.

The received FDM signal is first demodulated to reproduce the composite baseband signal that is passed through filters to separate the individual modulated subcarriers. Then the subcarriers are demodulated to reproduce the message signals $m_1(t)$, $m_2(t)$, and so on.

The FM stereo broadcasting system that has been adopted in the United States is an example of an FDM system. Furthermore, it is compatible with the monaural FM system that has existed since the 1940s. That is, a listener with a conventional monaural FM receiver will hear the monaural audio (which consists of the left- plus the right-channel audio), while a listener with a stereo receiver will receive the left-channel audio on the left speaker and the right-channel audio on the right speaker (Fig. 5-18). To obtain the compatibility feature, the left- and right-channel audios are combined (summed) to produce the monaural signal, and the difference audio is used to modulate a 38-kHz DSB-SC signal. A 19-kHz pilot tone is added to the composite baseband signal $m_b(t)$ to provide a reference signal for coherent (product) subcarrier demodulation in the receiver. As seen from Fig. 5-18c, this system is compatible with existing FM monaural receivers. In Prob. 5-51 we will find that a relatively simple switching (sampling) technique may be used to implement the demodulation of the subcarrier and the separation of the left and right signals in one operation.

The FM station may also be given *subsidiary communications authorization* (SCA) by the FCC. This allows the station to add an FM subcarrier to permit the transmission of a second analog-audio program or background music to business subscribers for use in their stores



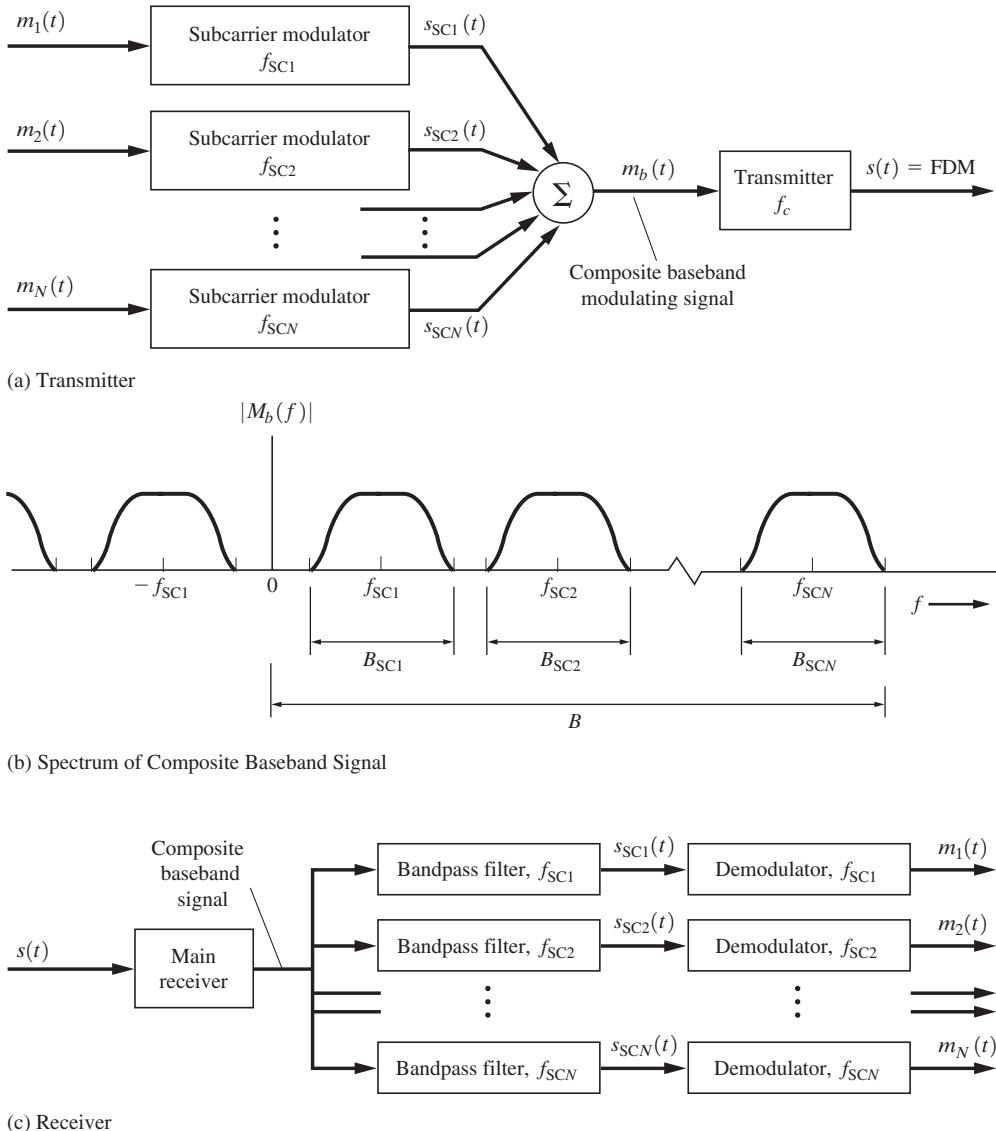


Figure 5–17 FDM system.


or offices. The SCA FM subcarrier frequency is usually 67 kHz, although this frequency is not specified by FCC rules. Moreover, up to four SCA subcarriers are permitted by the FCC, and each may carry either data or analog audio material. Using a data rate just under 1,200 b/s on a 57-kHz subcarrier, the *radio broadcast data system* (RBDC) provides auxiliary text information—such as station call letters, the titles of programs, the names of musical artists, and auto traffic congestion reports.

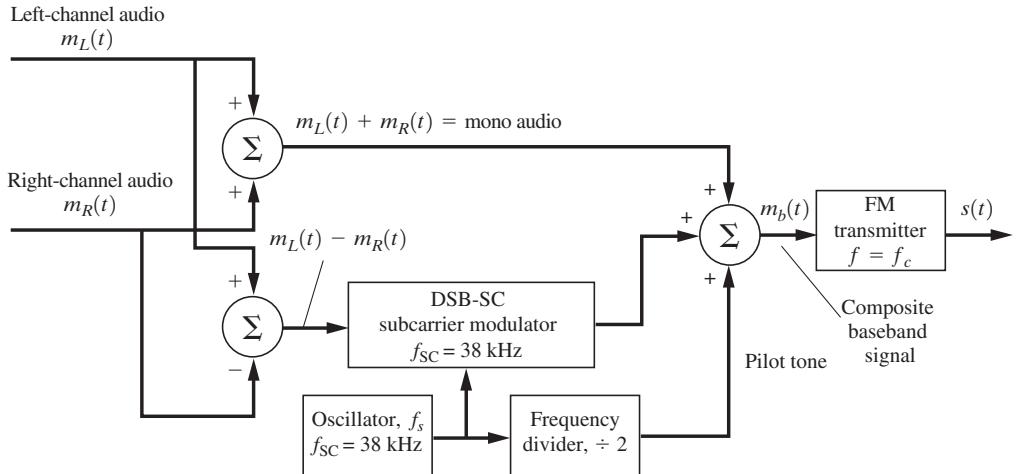

(a) FM Stereo Transmitter

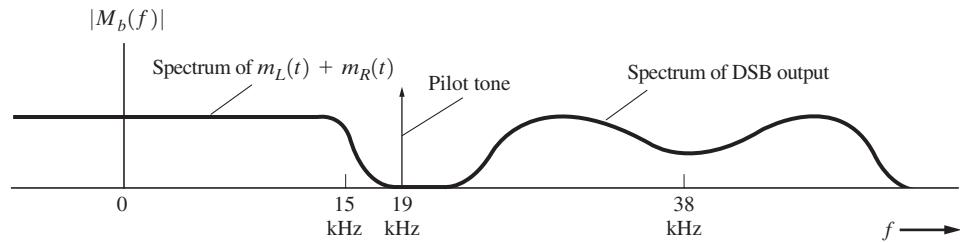

(b) Spectrum of Composite Baseband Signal

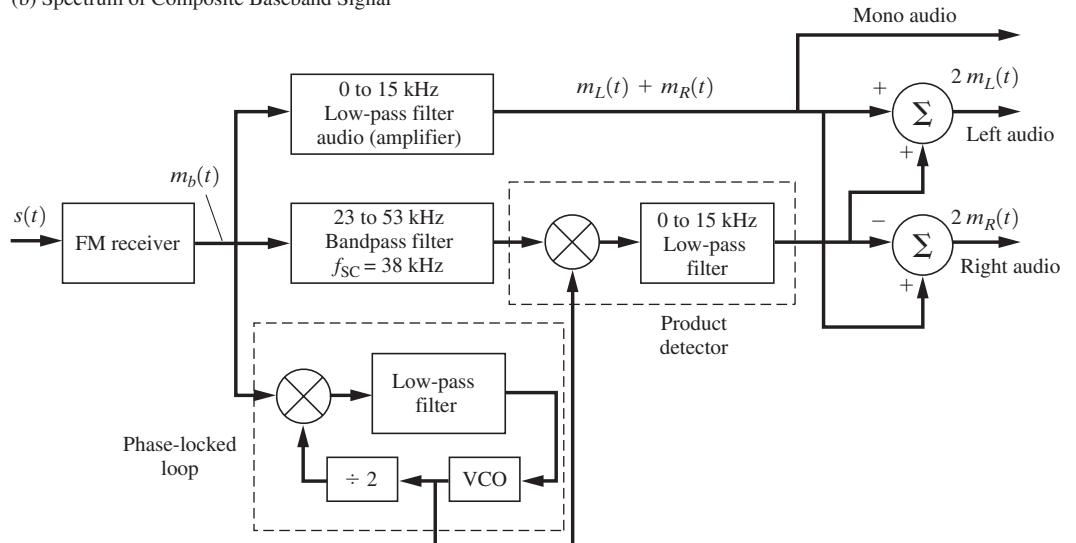

(c) FM Stereo Receiver

Figure 5–18 FM stereo system.

5–8 FM BROADCAST TECHNICAL STANDARDS AND DIGITAL FM BROADCASTING

There are about 9,000 FM stations in the United States. Table 5–4 gives some of the FCC technical standards that have been adopted for FM systems. In the United States, FM stations are classified into one of three major categories, depending on their intended coverage area. Class A stations are local stations. They have a maximum effective radiated power (ERP) of 6 kW and a maximum antenna height of 300 ft above average terrain. The ERP is the average transmitter output power multiplied by the power gains of both the transmission line (a number less than unity) and the antenna. (See Sec. 8–9 for some TV ERP calculations.) Class B stations have a maximum ERP of 50 kW, with a maximum antenna height of 500 ft above average terrain. Class B stations are assigned to the northeastern part of the United States, southern California, Puerto Rico, and the Virgin Islands. Class C stations are assigned to the remainder of the United States. They have a maximum ERP of 100 kW and a maximum antenna height of 2,000 ft above average terrain. As shown in the table, FM stations are further classified as commercial or noncommercial. Noncommercial stations operate in the 88.1 to 91.9 MHz segment of the FM band and provide educational programs with no commercials. In the commercial segment of the FM band, 92.1 to 107.9 MHz, certain frequencies are reserved for Class A stations, and the remainder are for Class B or Class C station assignment. A listing of these frequencies and the specific station assignments for each city is available [www.fcc.gov/mb/audio/fmg.html].

Digital FM Broadcasting

In the United States, the FCC has adopted the iBiquity FM *in band on channel* (IBOC) system for digital broadcasting in the FM band (i.e., 88.1 to 107.9 MHz). This IBOC system provides for transmission of digital audio data and auxiliary digital data simultaneously along with a conventional FM signal (modulated by analog audio). Consequently, a conventional FM receiver can be used to receive the analog audio. An IBOC receiver can be used, with its built-in codec, to convert the digital part of the FM IBOC signal into almost CD quality stereo audio. If the received FM IBOC signal is weak, the listener will hear the conventional analog audio from the FM part of the signal. If the received signal is strong, the decoded audio will be of CD stereo quality as decoded from the IBOC data. If the signal strength is somewhere between weak and strong, the receiver will produce a blend of the audio obtained from the AM and IBOC parts.

Orthogonal Frequency Division Multiplexing (OFDM), as discussed in Sec. 5–12, is used to produce the IBOC signal. To generate the IBOC signal, data from the transmitter codec is partitioned into two OFDM groups placed adjacent to the sidebands of the conventional FM signal. One of the OFDM groups is placed on the upper sideband and the other on the lower sideband. The sidebands are independent, but the data are partitioned so that only one sideband is needed to recover reduced-quality audio. Data from both sidebands (all two of the OFDM groups) are needed to recover full high-fidelity stereo audio.

The bandwidth of the FM IBOC signal is 400 kHz, but the carrier spacing between stations remains at 200 kHz. Consequently, there is a potential for interference to stations assigned to the adjacent channels. However, the existing assigned frequency of a FM station

TABLE 5-4 FCC FM STANDARDS

Class of Service	Item	FCC Standard
FM broadcasting	Assigned frequency, f_c	In 200-kHz increments from 88.1 MHz (FM Channel 201) to 107.9 MHz (FM Channel 300)
	Channel bandwidth	200 kHz
	Noncommercial stations	88.1 MHz (Channel 201) to 91.9 MHz (Channel 220)
	Commercial stations	92.1 MHz (Channel 221) to 107.9 MHz (Channel 300)
	Carrier frequency stability	$\pm 2,000$ Hz of the assigned frequency
	100% modulation ^a	$\Delta F = 75$ kHz
	Audio frequency response ^b	50 Hz to 15 kHz, following a $75-\mu\text{s}$ preemphasis curve
	Modulation index	5 (for $\Delta F = 75$ kHz and $B = 15$ kHz)
	% harmonic distortion ^b	<3.5% (50–100 Hz) <2.5% (100–7500 Hz) <3.0% (7500–15,000 Hz)
	FM noise	At least 60 dB below 100% modulation at 400 Hz
	AM noise	50 dB below the level corresponding to 100% AM in a band 50 Hz–15 kHz
	Maximum power licensed	100 kW in horizontal polarized plane plus 100 kW in vertical polarized plane
Two-way FM mobile radio	100% modulation	$\Delta F = 5$ kHz
	Modulation index	1 (for $\Delta F = 5$ kHz and $B = 5$ kHz)
	Carrier frequencies are within the frequency bands	32–50 MHz (low VHF band) 144–148 MHz (2-m amateur band) 148–174 MHz (high VHF band) ^c 420–450 MHz ($\frac{3}{4}$ -m amateur band) 450–470 MHz (UHF band) 470–512 MHz (UHF, T band) 806–928 MHz (900-MHz band)
Analog TV aural (FM) signal	100% modulation	$\Delta F = 25$ kHz
	Modulation index	1.67 (for $\Delta F = 25$ kHz and $B = 15$ kHz)

^a For stereo transmission, the 19-kHz pilot tone may contribute as much as 10% of the total allowed 75-kHz peak deviation. If SCA is used, each SCA subcarrier may also contribute up to 10%, and the total peak deviation may be 110% of 75 kHz.

^b Under the new FCC deregulation policy, these requirements are deleted from the FCC rules, although broadcasters still use them as guidelines for minimum acceptable performance.

^c Amplitude-compressed SSB is also permitted in the 150- to 170-MHz band in 5-kHz bandwidth channels.

is such that adjacent channels are assigned only to distant locations and there is little overlap of their coverage areas. Consequently, there is little IBOC interference with the assigned adjacent channel stations. For more information on this technique and lists of stations that are transmitting FM IBOC, search the internet for IBOC FM.

5–9 BINARY MODULATED BANDPASS SIGNALING

Digitally modulated bandpass signals are generated by using the complex envelopes for AM, PM, FM, or QM (quadrature modulation) signaling that were first shown in Table 4–1 and then studied in previous sections. For digital modulated signals, the modulating signal $m(t)$ is a digital signal given by the binary or multilevel line codes that were developed in Chapter 3. In this section, details of binary modulated signals are given. In Sections 5–10 and 5–11, multilevel and minimum-shift-keyed (MSK) digitally modulated signals are described.

The most common binary bandpass signaling techniques, illustrated in Fig. 5–19, are as follows:

- *On-off keying* (OOK), also called *amplitude shift keying* (ASK), which consists of keying (switching) a carrier sinusoid on and off with a unipolar binary signal. OOK is identical to *unipolar* binary modulation on a DSB-SC signal [Eq. (5–13)]. Morse code radio transmission is an example of this technique. OOK was one of the first modulation techniques to be used and precedes analog communication systems.
- *Binary phase-shift keying* (BPSK), which consists of shifting the phase of a sinusoidal carrier 0° or 180° with a unipolar binary signal. BPSK is equivalent to PM signaling with a digital waveform and is also equivalent to modulating a DSB-SC signal with a polar digital waveform.
- *Frequency-shift keying* (FSK), which consists of shifting the frequency of a sinusoidal carrier from a mark frequency (corresponding, for example, to sending a binary 1) to a space frequency (corresponding to sending a binary 0), according to the baseband digital signal. FSK is identical to modulating an FM carrier with a binary digital signal.

As indicated in Sec. 3–6, the bandwidth of the digital signal needs to be minimized to achieve spectral conservation. This may be accomplished by using a premodulation raised cosine-rolloff filter to minimize the bandwidth of the digital signal and yet not introduce ISI. The shaping of the baseband digital signal produces an analog baseband waveform that modulates the transmitter. Figure 5–19f illustrates the resulting DSB-SC signal when a pre-modulation filter is used. Thus, the BPSK signal of Fig. 5–19d becomes a DSB-SC signal (Fig. 5–19f) when premodulation filtering is used.

On–Off Keying

The OOK signal is represented by

$$s(t) = A_c m(t) \cos \omega_c t \quad (5–70)$$

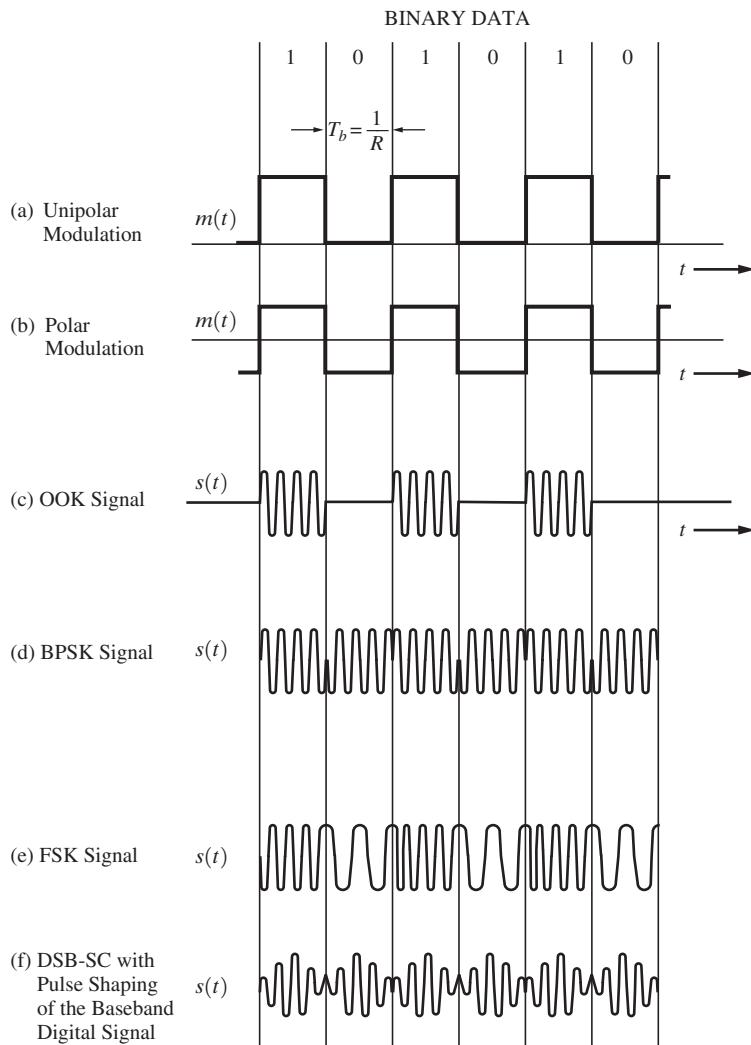


Figure 5–19 Bandpass digitally modulated signals.

where $m(t)$ is a unipolar baseband data signal, as shown in Fig. 5–19a. Consequently, the complex envelope is simply

$$g(t) = A_c m(t) \quad \text{for OOK} \quad (5-71)$$

and the PSD of this complex envelope is proportional to that for the unipolar signal. Using Eq. (3–39b), we find that this PSD is

$$\mathcal{P}_g(f) = \frac{A_c^2}{2} \left[\delta(f) + T_b \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \right] \quad (\text{for OOK}) \quad (5-72)$$

where $m(t)$ has a peak value of $A = \sqrt{2}$ so that $s(t)$ has an average normalized power of $A_c^2/2$. The PSD for the corresponding OOK signal is then obtained by substituting Eq. (5–72) into Eq. (5–2b). The result is shown for positive frequencies in Fig. 5–20a, where $R = 1/T_b$ is the bit rate. The null-to-null bandwidth is $B_T = 2R$, and the absolute bandwidth is $B_T = \infty$. Also, the transmission bandwidth of the OOK signal is $B_T = 2B$, where B is the baseband bandwidth, since OOK is AM-type signaling.

If raised cosine-rolloff filtering is used (to conserve bandwidth), the absolute bandwidth of the filtered binary signal is related to the bit rate R by Eq. (3–74), where $D = R$ for binary digital signaling. Thus, the absolute baseband bandwidth is

$$B = \frac{1}{2}(1 + r)R \quad (5-73)$$

where r is the rolloff factor of the filter. This gives an absolute transmission bandwidth of

$$B_T = (1 + r)R \quad (5-74)$$

for OOK signaling with raised cosine-rolloff filtering.




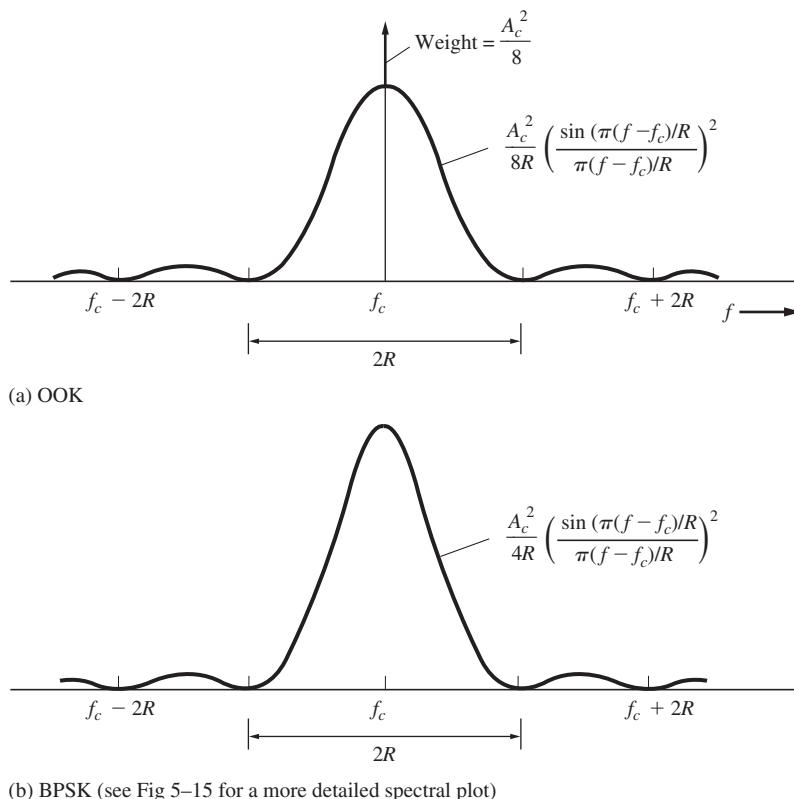


Figure 5–20 PSD of bandpass digital signals (positive frequencies shown).

OOK may be detected by using either an envelope detector (noncoherent detection) or a product detector (coherent detection), because it is a form of AM signaling. (In radio-frequency receiver applications in which the input RF signal is small, a superheterodyne receiver circuit of Fig. 4–29 is used, and one of the detector circuits is placed after the IF output stage.) These detectors are shown in Figs. 5–21a and 5–21b. For product detection, the carrier reference,

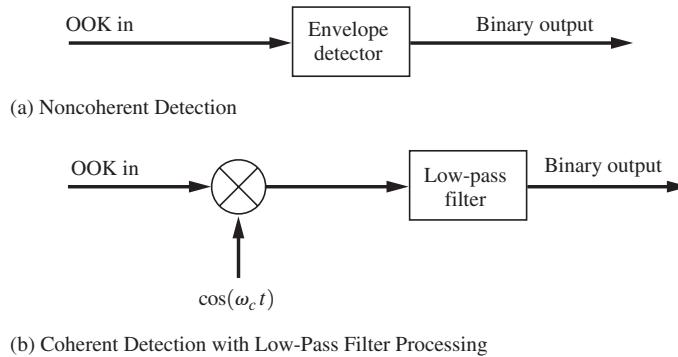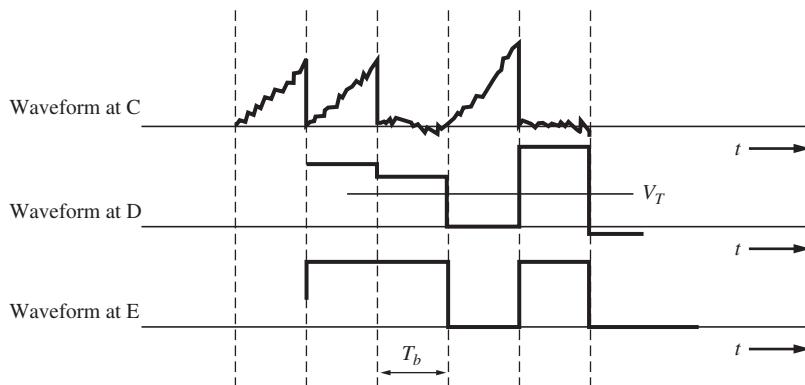

(b) Coherent Detection with Low-Pass Filter Processing

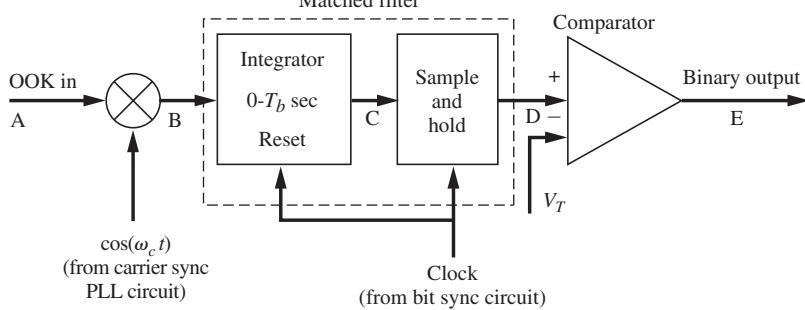

(c) Coherent Detection with Matched Filter Processing

Figure 5–21 Detection of OOK.

$\cos(\omega_c t)$, must be provided. This is usually obtained from a PLL circuit (studied in Sec. 4–14), where the PLL is locked onto a discrete carrier term (see Fig. 5–20a) of the OOK signal.

For optimum detection of OOK—that is, to obtain the lowest BER when the input OOK signal is corrupted by additive white Gaussian noise (AWGN)—product detection with matched filter processing is required. This is shown in Fig. 5–21c, where waveforms at various points of the circuit are illustrated for the case of receiving an OOK signal that corresponds to the binary data stream 1101. Details about the operation, the performance, and the realization of the matched filter are given in Sec. 6–8. Note that the matched filter also requires a clocking signal that is used to reset the integrator at the beginning of each bit interval and to clock the sample-and-hold circuit at the end of each bit interval. This clock signal is provided by a bit synchronizer circuit (studied in Chapter 4).

The optimum coherent OOK detector of Fig. 5–21c is more costly to implement than the noncoherent OOK detector of Fig. 5–21a. If the input noise is small, the noncoherent receiver may be the best solution, considering both cost and noise performance. The trade-off in BER performance between optimum coherent detection and nonoptimum noncoherent detection is studied in Sec. 7–6.

Binary Phase-Shift Keying

The Binary phase-shift keying BPSK signal is represented by

$$s(t) = A_c \cos [\omega_c t + D_p m(t)] \quad (5-75a)$$

where $m(t)$ is a polar baseband data signal. For convenience, let $m(t)$ have peak values of ± 1 and a rectangular pulse shape.

We now show that BPSK is also a form of AM-type signaling. Expanding Eq. (5–75a), we get

$$s(t) = A_c \cos(D_p m(t)) \cos \omega_c t - A_c \sin(D_p m(t)) \sin \omega_c t$$

Recalling that $m(t)$ has values of ± 1 and that $\cos(x)$ and $\sin(x)$ are even and odd functions of x , we see that the representation of the BPSK signal reduces to

$$s(t) = \underbrace{(A_c \cos D_p) \cos \omega_c t}_{\text{pilot carrier term}} - \underbrace{(A_c \sin D_p) m(t) \sin \omega_c t}_{\text{data term}} \quad (5-75b)$$

The level of the pilot carrier term is set by the value of the peak deviation, $\Delta\theta = D_p$.

For digital angle-modulated signals, the *digital modulation index* h is defined by

$$h = \frac{2\Delta\theta}{\pi} \quad (5-76)$$

where $2\Delta\theta$ is the maximum peak-to-peak phase deviation (radians) during the time required to send one symbol, T_s . For binary signaling, the symbol time is equal to the bit time ($T_s = T_b$).

The level of the pilot carrier term is set by the value of the peak deviation, which is $\Delta\theta = D_p$ for $m(t) = \pm 1$. If D_p is small, the pilot carrier term has a relatively large amplitude compared to the data term; consequently, there is very little power in the data term

(which contains the source information). To maximize the signaling efficiency (so that there is a low probability of error), the power in the data term needs to be maximized. This is accomplished by letting $\Delta\theta = D_p = 90^\circ = \pi/2$ radians, which corresponds to a digital modulation index of $h = 1$. For this optimum case of $h = 1$, the BPSK signal becomes

$$s(t) = -A_c m(t) \sin \omega_c t \quad (5-77)$$

Throughout the text, we assume that $\Delta\theta = 90^\circ$, $h = 1$, is used for BPSK signaling (unless otherwise stated). Equation (5-77) shows that BPSK is equivalent to DSB-SC signaling with a polar baseband data waveform. The complex envelope for this BPSK signal is


$$g(t) = jA_c m(t) \quad \text{for BPSK} \quad (5-78)$$

Using Eq. (3-41), we obtain the PSD for the complex envelope, viz.,


$$\mathcal{P}_g(f) = A_c^2 T_b \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \quad (\text{for BPSK}) \quad (5-79)$$

where $m(t)$ has values of ± 1 , so that $s(t)$ has an average normalized power of $A_c^2/2$. The PSD for the corresponding BPSK signal is readily evaluated by translating the baseband spectrum to the carrier frequency, as specified by substituting Eq. (5-79) into Eq. (5-2b). The resulting BPSK spectrum is shown in Fig. 5-20b. The null-to-null bandwidth for BPSK is also $2R$, the same as that found for OOK.

To detect BPSK, synchronous detection must be used, as illustrated in Fig. 5-22a. Since there is no discrete carrier term in the BPSK signal, a PLL may be used to extract the carrier reference *only* if a low-level pilot carrier is transmitted together with the BPSK signal. Otherwise, a Costas loop or a squaring loop (Fig. 5-3) may be used to synthesize the carrier

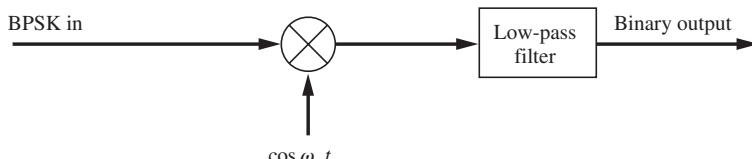

(a) Detection of BPSK (Coherent Detection)

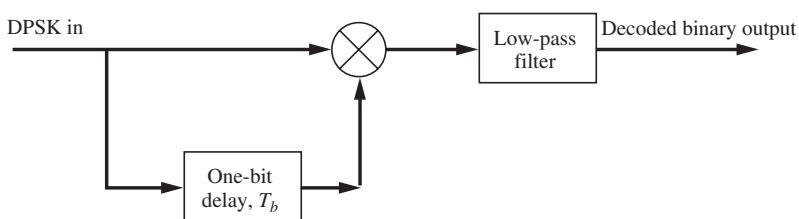

(b) Detection of DPSK (Partially Coherent Detection)

Figure 5-22 Detection of BPSK and DPSK.

reference from this DSB-SC (i.e., BPSK) signal and to provide coherent detection. However, the 180° phase ambiguity must be resolved, as discussed in Sec. 5–4. This can be accomplished by using differential coding at the transmitter input and differential decoding at the receiver output, as illustrated previously in Fig. 3–17.

For optimum detection of BPSK (i.e., the lowest possible BER for the case of AWGN), the low-pass filter in Fig. 5–22a is replaced by an integrate-and-dump matched filter processing that was illustrated in Fig. 5–21c, where V_T is set to 0 V for the case of BPSK. The resulting probability of bit error is given in Sec. 7–3.

Differential Phase-Shift Keying

Phase-shift-keyed signals cannot be detected incoherently. However, a partially coherent technique can be used whereby the phase reference for the present signaling interval is provided by a delayed version of the signal that occurred during the previous signaling interval. This is illustrated by the receiver shown in Fig. 5–22b, where differential decoding is provided by the (one-bit) delay and the multiplier. Consequently, if the data on the BPSK signal are differentially encoded (e.g., see the illustration in Table 3–4), the *decoded* data sequence will be recovered at the output of the receiver. This signaling technique consisting of transmitting a differentially encoded BPSK signal is known as DPSK.

For optimum detection of DPSK the low-pass filter of Fig. 5–22 is replaced by an integrate-and-dump matched filter, and the DPSK input signal needs to be prefiltered by a bandpass filter that has an impulse response of $h(t) = \Pi [(t - 0.5T_b)/T_b] \cos(\omega_c t)$. (For more details about this optimum receiver, see Fig. 7–12.) The resulting BER is given by Eqs. (7–66) and (7–67).

In practice, DPSK is often used instead of BPSK, because the DPSK receiver does not require a carrier synchronizer circuit.

Frequency-Shift Keying

The frequency-shift keying (FSK) signal can be characterized as one of two different types, depending on the method used to generate it. One type is generated by switching the transmitter output line between two different oscillators, as shown in Fig. 5–23a. This type generates an output waveform that is discontinuous at the switching times. It is called *discontinuous-phase FSK*, because $\theta(t)$ is discontinuous at the switching times. The discontinuous-phase FSK signal is represented by

$$s(t) = A_c \cos[\omega_c t + \theta(t)] = \begin{cases} A_c \cos(\omega_1 t + \theta_1), & \text{for } t \text{ in the time interval when} \\ & \text{a binary 1 is being sent} \\ A_c \cos(\omega_2 t + \theta_2), & \text{for } t \text{ in the time interval when} \\ & \text{a binary 0 is being sent} \end{cases} \quad (5-80)$$

where f_1 is called the *mark* (binary 1) frequency and f_2 is called the *space* (binary 0) frequency. θ_1 and θ_2 are the start-up phases of the two oscillators. The discontinuous phase function is

$$\theta(t) = \begin{cases} \omega_1 t + \theta_1 - \omega_c t, & \text{for } t \text{ during the binary 1 interval} \\ \omega_2 t + \theta_2 - \omega_c t, & \text{for } t \text{ during the binary 0 interval} \end{cases}$$

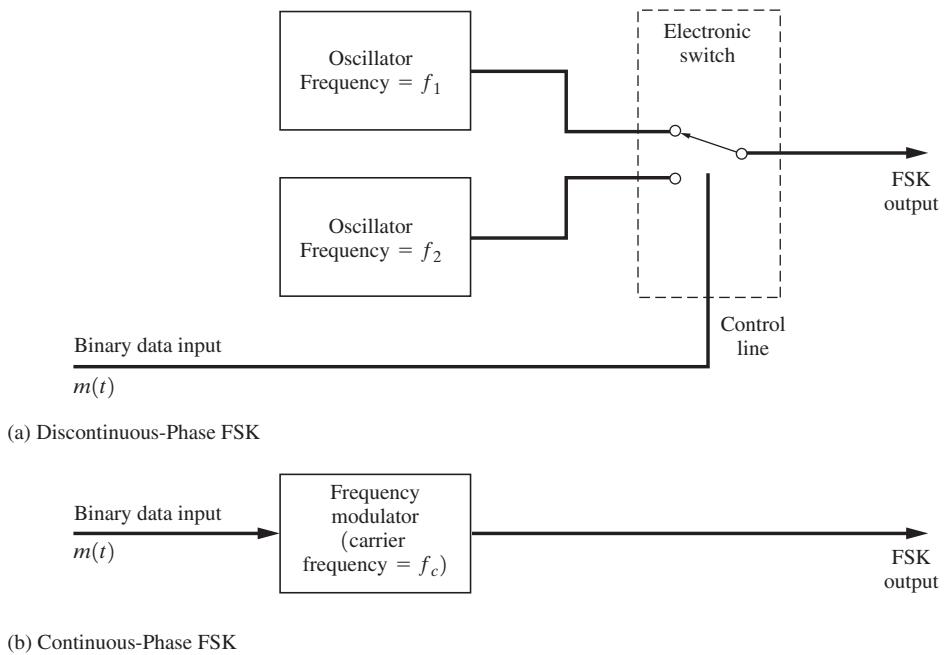


Figure 5–23 Generation of FSK.

Since FSK transmitters are not usually built this way, we will turn to the second type, shown in Fig. 5–23b.

The *continuous-phase FSK* signal is generated by feeding the data signal into a frequency modulator, as shown in Fig. 5–23b. This FSK signal is represented (see Sec. 5–6) by

$$s(t) = A_c \cos \left[\omega_c t + D_f \int_{-\infty}^t m(\lambda) d\lambda \right]$$

or

$$s(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} \quad (5-81a)$$

where

$$g(t) = A_c e^{j\theta(t)} \quad (5-81b)$$

$$\theta(t) = D_f \int_{-\infty}^t m(\lambda) d\lambda \quad \text{for FSK} \quad (5-81c)$$

and $m(t)$ is a baseband digital signal. Although $m(t)$ is discontinuous at the switching time, the phase function $\theta(t)$ is continuous because $\theta(t)$ is proportional to the integral of $m(t)$. If the serial data input waveform is binary, such as a polar baseband signal, the resulting FSK signal

is called a *binary FSK* signal. Of course, a multilevel input signal would produce a multilevel FSK signal. We will assume that the input is a binary signal in this section and examine the properties of binary FSK signals.

In general, the spectra of FSK signals are difficult to evaluate since the complex envelope, $g(t)$, is a nonlinear function of $m(t)$. However, the techniques that were developed in Sec. 5–6 are applicable, as we show in the next example.

Example 5–9 SPECTRUM FOR THE BELL-TYPE 103 FSK MODEM

Today, personal computers are often connected to internet servers via a modem connected to a DSL twisted-pair telephone line (see Section 8–3) or via a coaxial cable-system modem that uses QAM signaling (described in the next section). Historically, the personal computer was connected to a remote computer via a modem connected to an analog dial-up telephone line. The Bell-type 103 modem is an example of this type of dial-up connection and it uses FSK signaling. FSK signaling continues to be used for telephone caller ID signaling (Bell 202 standard; see Tables 8–1) and in many wireless applications, because it is cost effective.

The evaluation of spectra for FSK signals will be demonstrated by using the 300-b/s Bell System 103 modem standard as an example. Referring to Fig. 5–24, we find that each modem contains both an FSK transmitter and an FSK receiver, so that the computer terminal can both “talk” and “listen.” Two FSK frequency bands are used (one around 1 kHz and another around 2 kHz), making it possible to talk and listen simultaneously. This approach is called *full-duplex capability*. (In *half-duplex*, one cannot listen while talking, and vice versa; in *simplex*, one can only talk or only listen.) The standard mark and space frequencies for the two bands are shown in Table 5–5. From this table, it is seen that the peak-to-peak deviation is $2\Delta F = 200$ Hz.

The spectrum for a Bell-type 103 modem will now be evaluated for the case of the widest-bandwidth FSK signal, obtained when the input data signal consists of a deterministic (periodic) square wave corresponding to an alternating data pattern (i.e., 10101010).[†] This is illustrated in Fig. 5–25a, where T_b is the time interval for one bit and $T_0 = 2T_b$ is the period of the data modulation. The spectrum is obtained by using the Fourier series technique developed in Sec. 5–6 and

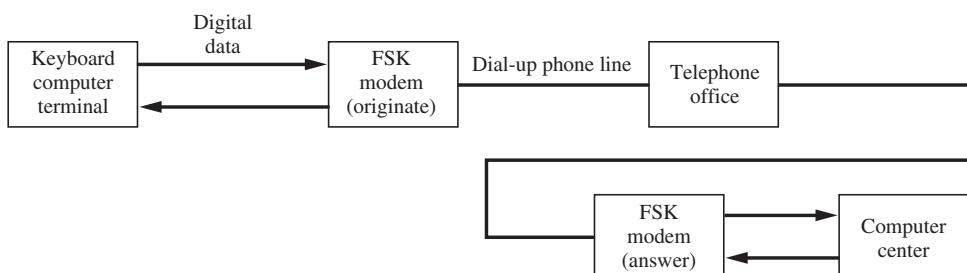


Figure 5–24 Computer communication using FSK signaling.

[†] For the case of random data, the PSD for $g(t)$ is given by the $h = 0.7 \approx 0.67$ curve of Fig. 5–27.

TABLE 5–5 MARK AND SPACE FREQUENCIES FOR THE BELL-TYPE 103 MODEM

	Originate Modem (Hz)	Answer Modem (Hz)
Transmit frequencies		
Mark (binary 1)	$f_1 = 1,270$	$f_1 = 2,225$
Space (binary 0)	$f_2 = 1,070$	$f_2 = 2,025$
Receive frequencies		
Mark (binary 1)	$f_1 = 2,225$	$f_1 = 1,270$
Space (binary 0)	$f_2 = 2,025$	$f_2 = 1,070$

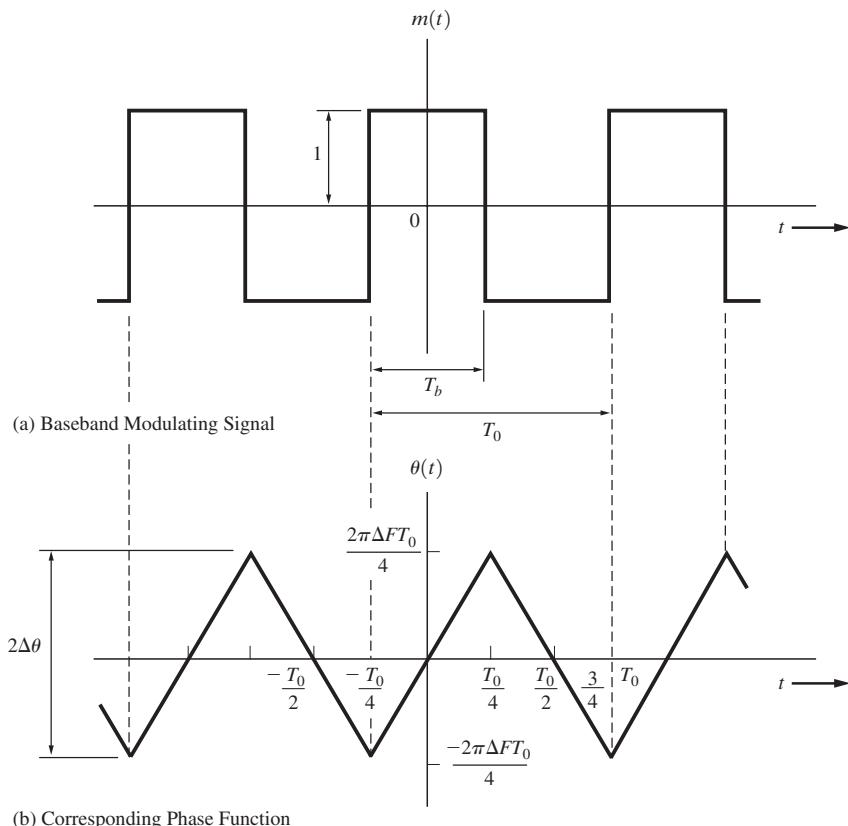


Figure 5–25 Input data signal and FSK signal phase function.

Example 5–6. Since the modulation is periodic, we would expect the FSK spectrum to be a line spectrum (i.e., delta functions). Using Eqs. (5–81c) and (5–42), we find that the peak frequency deviation is $\Delta F = D_f/(2\pi)$ for $m(t)$ having values of ± 1 . This results in the triangular phase function shown in Fig. 5–25b. From the figure, the digital modulation index is

$$h = \frac{2\Delta\theta}{\pi} = \Delta F T_0 = \frac{2\Delta F}{R} \quad (5-82)$$

where the bit rate is $R = 1/T_b = 2/T_0$. In this application, note that the digital modulation index, as given by Eq. (5–82), is identical to the FM modulation index defined by Eq. (5–48), since

$$h = \frac{\Delta F}{1/T_0} = \frac{\Delta F}{B} = \beta_f$$

provided that the bandwidth of $m(t)$ is defined as $B = 1/T_0$.

The Fourier series for the complex envelope is

$$g(t) = \sum_{n=-\infty}^{n=\infty} c_n e^{jn\omega_0 t} \quad (5-83)$$

where $f_0 = 1/T_0 = R/2$,

$$\begin{aligned} c_n &= \frac{A_c}{T_0} \int_{-T_0/2}^{T_0/2} e^{j\theta(t)} e^{-jn\omega_0 t} dt \\ &= \frac{A_c}{T_0} \left[\int_{-T_0/4}^{T_0/4} e^{j\Delta\omega t - jn\omega_0 t} dt + \int_{T_0/4}^{3T_0/4} e^{-j\Delta\omega(t-(T_0/2)) - jn\omega_0 t} dt \right] \end{aligned} \quad (5-84)$$

and $\Delta\omega = 2\pi\Delta F = 2\pi h/T_0$. Equation (5–84) reduces to

$$c_n = \frac{A_c}{2} \left[\left(\frac{\sin[(\pi/2)(h-n)]}{(\pi/2)(h-n)} \right) + (-1)^n \left(\frac{\sin[(\pi/2)(h+n)]}{(\pi/2)(h+n)} \right) \right] \quad (5-85)$$

where the digital modulation index is $h = 2\Delta F/R$, in which $2\Delta F$ is the peak-to-peak frequency shift and R is the bit rate. Using Eqs. (5–49) and (5–59), we see that the spectrum of this FSK signal with alternating data is


$$S(f) = \frac{1}{2} [G(f - f_c) + G^*(-f - f_c)] \quad (5-86a)$$

where


$$G(f) = \sum_{-\infty}^{\infty} c_n \delta(f - nf_0) = \sum_{-\infty}^{\infty} c_n \delta\left(f - \frac{nR}{2}\right) \quad (5-86b)$$

and c_n is given by Eq. (5–85).


FSK spectra can be evaluated easily for cases of different frequency shifts ΔF and bit rates R if a personal computer is used. See Example 5–09.m. A summary of three computer runs using different sets of parameters is shown in Fig. 5–26. Figure 5–26a gives the FSK spectrum for the Bell 103. For this case, where the Bell 103 parameters are used, the digital modulation index is $h = 0.67$ and there are no spectral lines at the mark and space frequencies, f_1 and f_2 , respectively. Figures 5–26b and 5–26c give the FSK spectra for $h = 1.82$ and $h = 3.33$. Note that as the modulation index is increased, the spectrum concentrates about f_1 and f_2 . This is the same result predicted by the PSD theorem for wideband FM [Eq. (5–66)], since the PDF of the binary modulation consists of two delta functions. (See Fig. 5–15.)

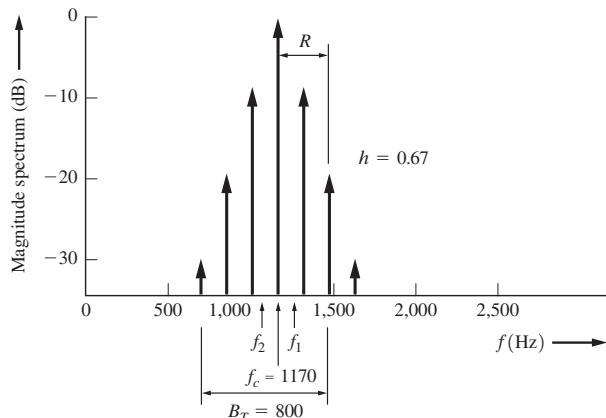

(a) FSK Spectrum with $f_2 = 1,070$ Hz, $f_1 = 1,270$ Hz, and $R = 300$ bits/sec
(Bell 103 Parameters, Originate mode) for $h = 0.67$

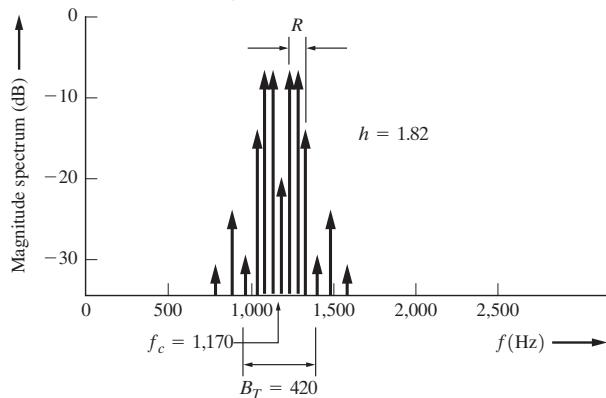

(b) FSK Spectrum with $f_2 = 1,070$ Hz, $f_1 = 1,270$ Hz, and $R = 110$ bits/sec
for $h = 1.82$

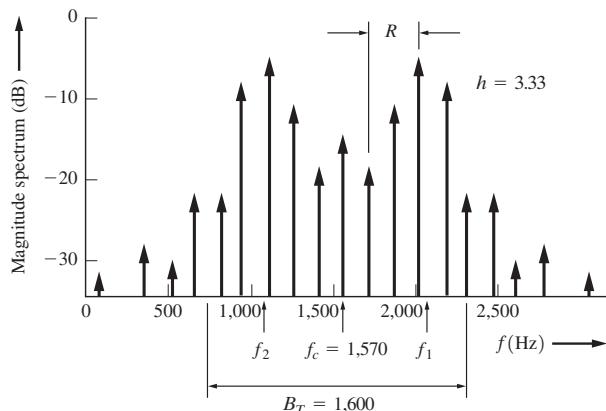

(c) FSK Spectrum with $f_2 = 1,070$ Hz, $f_1 = 2,070$ Hz, and $R = 300$ bits/sec
for $h = 3.33$

Figure 5–26 FSK spectra for alternating data modulation (positive frequencies shown with one-sided magnitude values). (See Example5_09.m for calculation of this figure.)

The approximate transmission bandwidth B_T for the FSK signal is given by Carson's rule, $B_T = 2(\beta + 1)B$, where $\beta = \Delta F/B$. This is equivalent to

$$B_T = 2\Delta F + 2B \quad (5-87)$$

where B is the bandwidth of the digital (e.g., square-wave) modulation waveform. In our example of an alternating binary 1 and 0 test pattern waveform, the bandwidth of this square-wave modulating waveform (assuming that the first null type of bandwidth is used) is $B = R$, and, using Eq. (5-87), we find that the FSK transmission bandwidth becomes

$$B_T = 2(\Delta F + R) \quad (5-88)$$

This result is illustrated in Fig. 5–26. If a raised cosine-rolloff premodulation filter is used, the transmission bandwidth of the FSK signal becomes

$$B_T = 2\Delta F + (1 + r)R \quad (5-89)$$

For wideband FSK, where $\beta \gg 1$, ΔF dominates in these equations, and we have $B_T = 2\Delta F$. For narrowband FSK, the transmission bandwidth is $B_T = 2B$.

The exact PSD for continuous-phase FSK signals is difficult to evaluate for the case of random data modulation. However, it can be done by using some elegant statistical techniques [Anderson and Salz, 1965; Bennett and Rice, 1963; Proakis, 1995, pp. 209–215]. The resulting PSD for the complex envelope of the FSK signal is[†]

$$\begin{aligned} \mathcal{P}_g(f) &= \frac{A_c^2 T_b}{2} \\ &\times (A_1^2(f)[1 + B_{11}(f)] + A_2^2(f)[1 + B_{22}(f)] + 2B_{12}(f)A_1(f)A_2(f)) \end{aligned} \quad (5-90a)$$

where

$$A_n(f) = \frac{\sin [\pi T_b(f - \Delta F(2n - 3))]}{\pi T_b(f - \Delta F(2n - 3))} \quad (5-90b)$$

and

$$B_{nm}(f) =$$

$$\frac{\cos[2\pi fT_b - 2\pi\Delta FT_b(n + m - 3)] - \cos(2\pi\Delta FT_b)\cos[2\pi\Delta FT_b(n + m - 3)]}{1 + \cos^2(2\pi\Delta FT_b) - 2 \cos(2\pi\Delta FT_b)\cos(2\pi fT_b)} \quad (5-90c)$$

in which ΔF is the peak frequency deviation, $R = 1/T_b$ is the bit rate, and the digital modulation index is $h = 2\Delta F/R$. The PSD is plotted in Fig. 5–27 for several values of the digital modulation index. The curve for $h = 0.7 \approx 0.67$ corresponds to the PSD of $g(t)$ for the 300-bits/s Bell 103 FSK modem of Example 5–9.

[†] It is assumed that $h \neq 0, 1, 2, \dots$ when $h = 0, 1, 2, \dots$, there are also discrete terms (delta functions) in the spectrum.

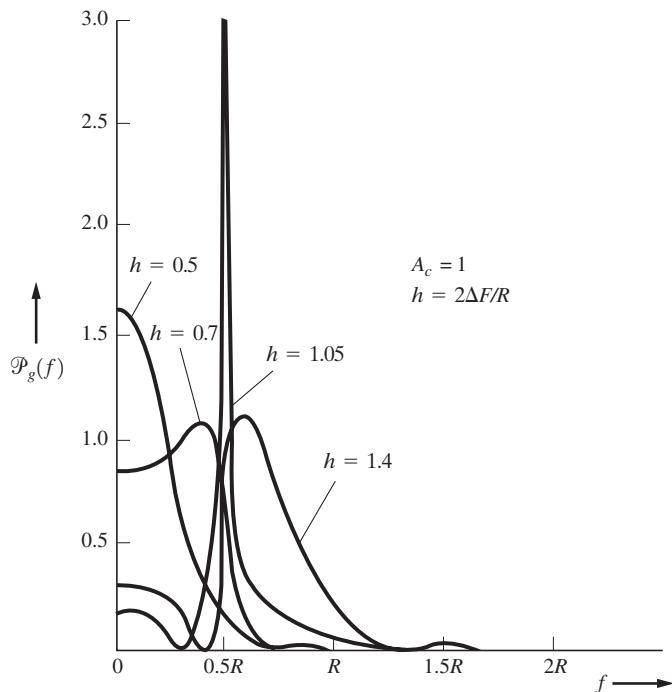


Figure 5–27 PSD for the complex envelope of FSK (positive frequencies shown). (See Example5_10.m.)

Example 5–10 PSD FOR FSK SIGNALING

Using Eq. (5–90), evaluate and plot the PSD for the complex envelope of a FSK signal with random data modulation and $A_c = 1$, $R = 1$, and $h = 0.7$. See Example5_10.m for the solution. Compare with Fig. 5–27.

FSK can be detected by using either a frequency (noncoherent) detector or two product detectors (coherent detection), as shown in Fig. 5–28. A detailed study of coherent and noncoherent detection of FSK is given in Sections 7–3 and 7–4, where the BER is evaluated. To obtain the lowest BER when the FSK signal is corrupted by AWGN, coherent detection with matched filter processing and a threshold device (comparator) is required. (See Fig. 7–8.)

5–10 MULTILEVEL MODULATED BANDPASS SIGNALING

With multilevel signaling, digital inputs with more than two levels are allowed on the transmitter input. This technique is illustrated in Fig. 5–29, which shows how multilevel signals can be generated from a serial binary input stream by using a digital-to-analog converter (DAC).

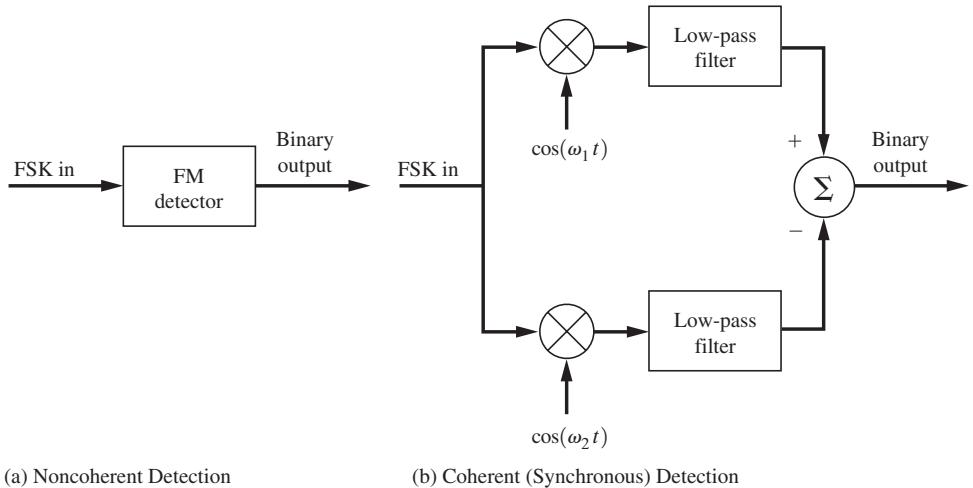


Figure 5–28 Detection of FSK.

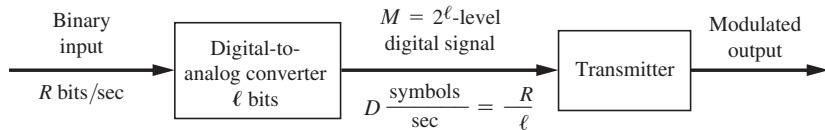


Figure 5–29 Multilevel digital transmission system.

For example, suppose that an $\ell = 2$ -bit DAC is used. Then the number of levels in the multilevel signal is $M = 2^\ell = 2^2 = 4$, as illustrated in Fig. 3–14a for rectangular pulses. The symbol rate (baud) of the multilevel signal is $D = R/\ell = \frac{1}{2}R$, where the bit rate is $R = 1/T_b$ bits/s.

Quadrature Phase-Shift Keying and M -ary Phase-Shift Keying

If the transmitter is a PM transmitter with an $M = 4$ -level digital modulation signal, M -ary phase-shift keying (MPSK) is generated at the transmitter output. Assuming rectangular-shaped data pulses, a plot of the permitted values of the complex envelope, $g(t) = A_c e^{j\theta(t)}$, would contain four points, one value of g (a complex number in general) for each of the four multilevel values, corresponding to the four phases that θ is permitted to have. A plot of two possible sets of $g(t)$ is shown in Fig. 5–30. For instance, suppose that the permitted multilevel values at the DAC are $-3, -1, +1$, and $+3$ V; then, in Fig. 5–30a, these multilevel values might correspond to PSK phases of $0^\circ, 90^\circ, 180^\circ$, and 270° , respectively. In Fig. 5–30b, those levels would correspond to carrier phases of $45^\circ, 135^\circ, 225^\circ$, and 315° , respectively.

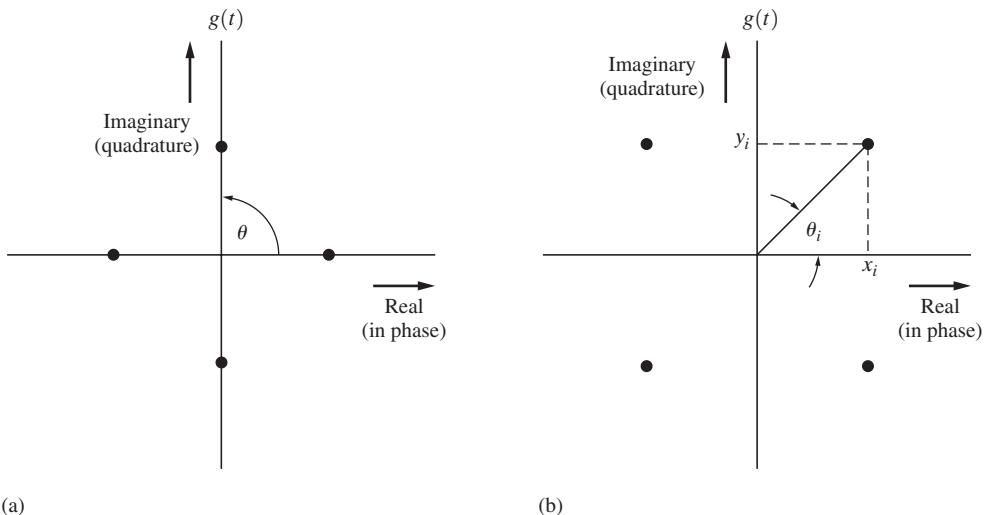


Figure 5–30 QPSK and $\pi/4$ QPSK signal constellations (permitted values of the complex envelope).

These two signal constellations are essentially the same, except for a shift in the carrier-phase reference.[†] This example of M -ary PSK where $M = 4$ is called *quadrature phase-shift-keyed* (QPSK) signaling.

MPSK can also be generated by using two quadrature carriers modulated by the x and y components of the complex envelope (instead of using a phase modulator); in that case,

$$g(t) = A_c e^{j\theta(t)} = x(t) + jy(t) \quad (5-91)$$

where the permitted values of x and y are

$$x_i = A_c \cos \theta_i \quad (5-92)$$

and

$$y_i = A_c \sin \theta_i \quad (5-93)$$

for the permitted phase angles θ_i , $i = 1, 2, \dots, M$, of the MPSK signal. This situation is illustrated in Fig. 5–31, where the signal processing circuit implements Eqs. (5–92) and (5–93). Figure 5–30 gives the relationship between the permitted phase angles θ_i and the (x_i, y_i) components for two QPSK signal constellations. This is identical to the quadrature method of generating modulated signals presented in Fig. 4–28.

For rectangular-shaped data pulses, the envelope of the QPSK signal is constant. That is, there is no AM on the signal, even during the data transition times, when there is a 180° phase shift, since the data switches values (say, from +1 to -1) instantaneously. The

[†] A constellation is an N -dimensional plot of the possible signal vectors corresponding to the possible digital signals. (See Sec. 3–4.)

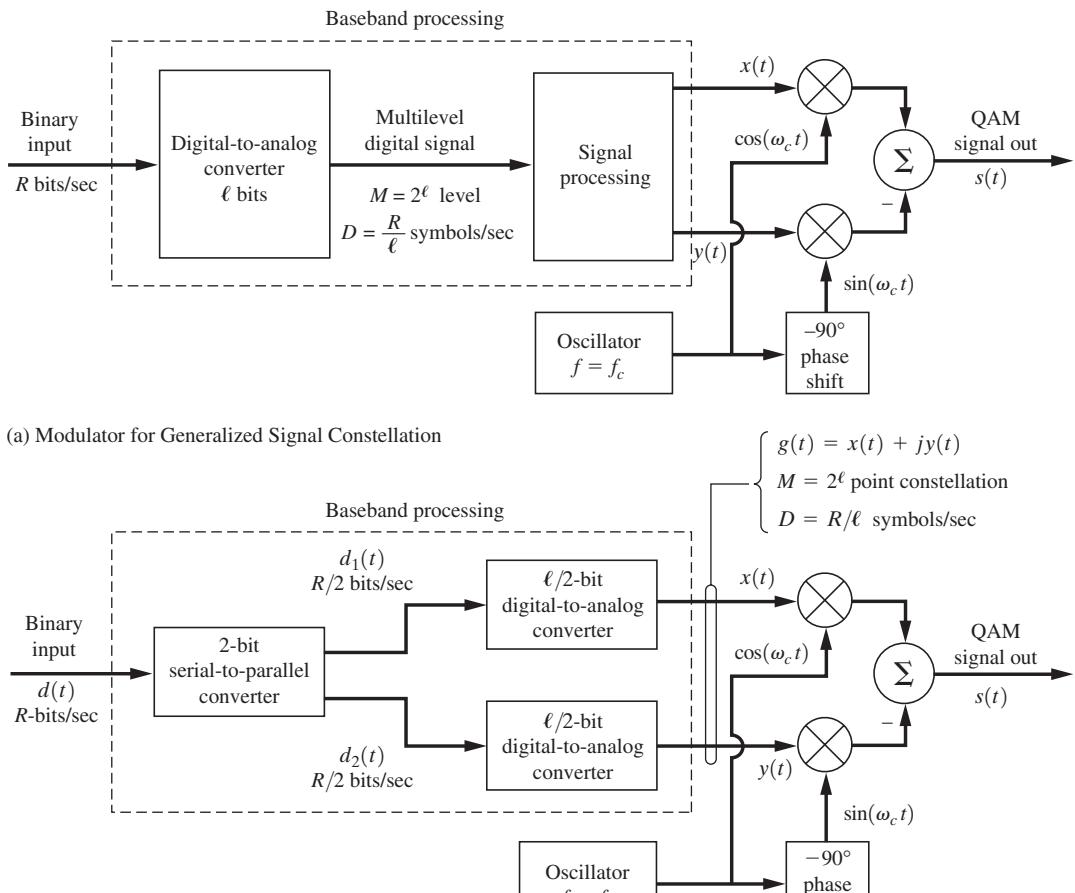


Figure 5–31 Generation of QAM signals.

rectangular-shaped data produce a $(\sin x/x)^2$ -type power spectrum for the QPSK signal that has large undesirable spectral sidelobes. (See Fig. 5–33.) These undesirable sidelobes can be eliminated if the data pulses are filtered to a pulse shape corresponding to a raised cosine-rolloff filter. Unfortunately, this produces AM on the resulting QPSK signal, because the filtered data waveform cannot change instantaneously from one peak to another when 180° phase transitions occur. Although filtering solves the problem of poor spectral sidelobes, it creates another one: AM on the QPSK signal. Due to this AM, low-efficiency linear (Class A or Class B) amplifiers, instead of high-efficiency nonlinear (Class C) amplifiers, are required for amplifying the QPSK signal without distortion. In portable communication applications, these amplifiers increase the battery capacity requirements by as much as 50%. A possible

solution to the dilemma is to use offset QPSK (OQPSK) or $\pi/4$ QPSK, each of which has a lower amount of AM. (OQPSK and $\pi/4$ QPSK are described after the next section.)

Quadrature Amplitude Modulation

Quadrature carrier signaling, as shown in Fig. 5–31, is called *quadrature amplitude modulation* (QAM). In general, QAM signal constellations are not restricted to having permitted signaling points only on a circle (of radius A_c , as was the case for MPSK). The general QAM signal is

$$s(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t \quad (5-94)$$

where

$$g(t) = x(t) + jy(t) = R(t)e^{j\theta(t)} \quad (5-95)$$

For example, a popular 16-symbol ($M = 16$ levels) QAM constellation is shown in Fig. 5–32, where the relationship between (R_i, θ_i) and (x_i, y_i) can readily be evaluated for each of the 16 signal values permitted. This type of signaling is used by 2,400-bit/s V.22 bis computer modems. Here, x_i and y_i are each permitted to have four levels per dimension. This 16-symbol QAM signal may be generated by using two ($\ell/2 = 2$)-bit digital-to-analog converters and quadrature-balanced modulators as shown in Fig. 5–31b.

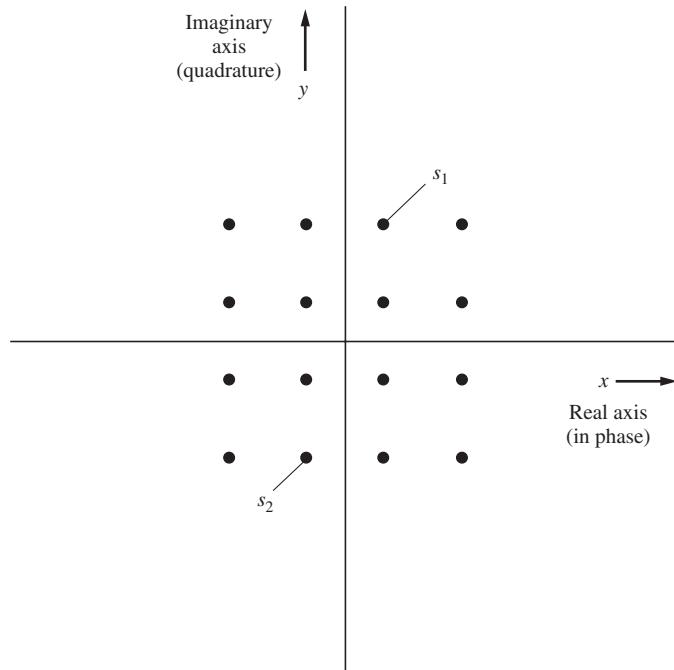


Figure 5–32 16-symbol QAM constellation (four levels per dimension).

Example 5–11 QAM SIGNALING

Using Eq. (5–94), evaluate and plot a QAM signal. Let $x(t)$ be a 4-level stair-step signal with step levels of $-3, -1, 1, 3$, and step widths of 1 sec. Let $y(t)$ be a 4-level stair-step signal with the same step levels, but having step widths of 4 sec. Plot the QAM signal constellation. Plot $x(t)$, $y(t)$, and the QAM signal over the interval $0 < t < 16$ sec. See Example5_11.m for the solution.

The waveforms of I and Q components are represented by

$$x(t) = \sum_n x_n h_1\left(t - \frac{n}{D}\right) \quad (5-96)$$

and

$$y(t) = \sum_n y_n h_1\left(t - \frac{n}{D}\right) \quad (5-97)$$

where $D = R/\ell$ and (x_n, y_n) denotes one of the permitted (x_i, y_i) values during the symbol time that is centered on $t = nT_s = n/D$ s. (It takes T_s s to send each symbol.) $h_1(t)$ is the pulse shape that is used for each symbol. If the bandwidth of the QAM signal is not to be restricted, the pulse shape will be rectangular and of T_s s duration. Some examples of QAM modem standards are shown in Tables 5–6 and 5–7. These modems are used to provide dial-up connections from a PC to an ISP (*internet service provider*).

In some applications, the timing between the $x(t)$ and $y(t)$ components is offset by $T_s/2 = 1/(2D)$ s. That is, $x(t)$ would be described by Eq. (5–96), and the offset would be described by

$$y(t) = \sum_n y_n h_1\left(t - \frac{n}{D} - \frac{1}{2D}\right) \quad (5-98)$$



One popular type of offset signaling is *offset QPSK* (OQPSK), which is identical to offset QAM when $M = 4$. A special case of OQPSK when $h_1(t)$ has a sinusoidal type of pulse shape is called *minimum-shift keying* (MSK). This type of signaling will be studied in a later section. Furthermore, a QPSK signal is said to be *unbalanced* if the $x(t)$ and $y(t)$ components have unequal powers or unequal data rates (or both).

OQPSK and $\pi/4$ QPSK

Offset quadrature phase-shift keying (OQPSK) is $M = 4$ PSK in which the allowed data transition times for the I and Q components are offset by a $\frac{1}{2}$ symbol (i.e., by 1 bit) interval. The technique is described by Eqs. (5–96) and (5–98), where the offset is $1/(2D)$. This offset provides an advantage when nonrectangular (i.e., filtered) data pulses are used, because the offset greatly reduces the AM on the OQPSK signal compared with the AM on the corresponding QPSK signal. The AM is reduced because a maximum phase transition of only

TABLE 5–6 V.32 MODEM STANDARD

372

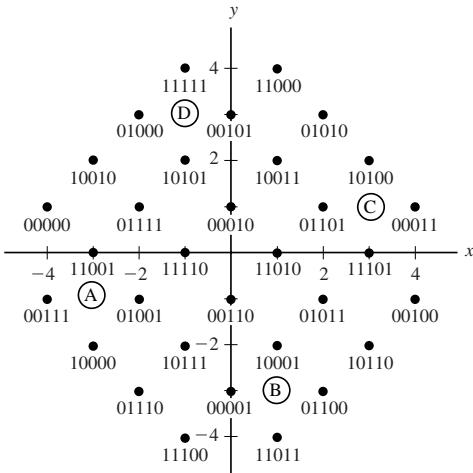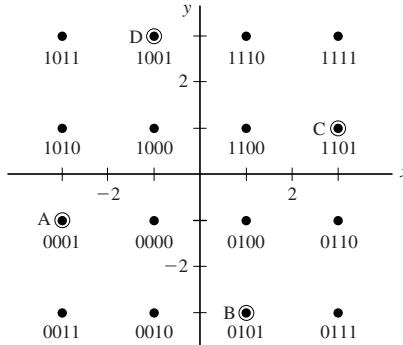Item	Signal Constellation
Data	Serial binary, Asynchronous or synchronous Full duplex over two-wire line ^a
Carrier frequency	Transmit ^a : 1,800 Hz Receive ^a : 1,800 Hz
<i>Option 1</i>	9,600 b/s for high SNR 4,800 b/s for low SNR
DATA rate	4,800 b/s for low SNR
Modulation	32 QAM, 2400 baud, for high SNR using trellis-coded modulation (see Fig. 1–9, where $n = 3$ and $m - k = 2$) with 4 data bits plus 1 coding bit per symbol QPSK, 2,400 baud (states A, B, C, D) for low SNR
<i>Option 2</i>	<i>Option 2: 32 QAM or QPSK</i>  <i>Option 2: 16 QAM or QPSK</i> 
DATA rate	9,600 b/s for high SNR 4,800 b/s for low SNR
Modulation	16 QAM, 2,400 baud, for high SNR QPSK, 2,400 baud (states A, B, C, D) for low SNR

^a A two-wire to four-wire hybrid is used in this modem to obtain the transmit and receive lines.

TABLE 5–7 V.32BIS AND V.33 MODEM STANDARDS

Item	128 QAM Signal Constellation
Data	Serial binary
V.32bis	Synchronous/asynchronous, full duplex over two-wire dial up line ^a
V.33	Synchronous, full duplex over four-wire leased line ^b
Carrier frequency	Transmit: 1,800Hz Receive: 1,800 Hz
Data rate	14,400 b/s
Modulation	128 QAM, 2,400 baud, using trellis-coded modulation (see Fig. 1–9, where $n = 3$ and $m - k = 4$) with 6 data bits plus 1 coding bit per symbol
Fallback mode	12,000 bits/s using 64 QAM, 2,400 baud, (signal constellation not shown) and trellis-coded modulation with 5 data bits plus 1 coding bit per symbol

^a The V.32bis modem uses a two-wire line and an internal two-wire to four-wire hybrid to obtain the transmit and receive lines.^b The V.33 modem uses two wires for transmit and two wires for receive.

90° occurs for OQPSK signaling (as opposed to 180° for QPSK), since the I and Q data cannot change simultaneously, because the data are offset.

A $\pi/4$ quadrature phase-shift keying ($\pi/4$ QPSK) signal is generated by alternating between two QPSK constellations that are rotated by $\pi/4 = 45^\circ$ with respect to each other. The two QPSK constellations, shown in Fig. 5–30, are used alternately as follows: Given a point on one of the signal constellations that corresponds to two bits of input data, two new bits are read to determine the next point that is selected from the *other* constellation. That is, the two new input bits cause a phase shift of $\pm 45^\circ$ or $\pm 135^\circ$, depending on their value. For example, an 11 could correspond to a phase shift of $\Delta\theta = 45^\circ$, a 10 to $\Delta\theta = -45^\circ$, a 01 to $\Delta\theta = 135^\circ$, and a 00 to $\Delta\theta = -135^\circ$. Since this uses a form of differential encoding, it is called $\pi/4$ differential quadrature phase-shift keying ($\pi/4$ DQPSK).

At the receiver, the data on the $\pi/4$ QPSK signal can be easily detected by using an FM detector, followed by a resettable integrator that integrates over a symbol (2-bit) period. The FM detector produces the derivative of the phase, and the integrator evaluates the phase shift that occurs over the symbol interval. The result is one of the four possible phase shifts, $\pm 45^\circ$ and $\pm 135^\circ$. For example, if the detected phase shift at the integrator output is -45° , the corresponding detected data are 10. Data on the $\pi/4$ QPSK signal can also be detected by using baseband IQ processing or by using differential detection at the IF [Rappaport, 2002]. Computer simulations indicate that all three of these receiver structures have almost the same BER error performance [Anvari and Woo, 1991]. In an AWGN channel, the BER performance of the three differential (noncoherent) detectors is about 3 dB inferior to that of QPSK, but coherently detected $\pi/4$ QPSK has the same BER as QPSK (shown in Fig. 7–14). For the case of nonrectangular data pulses, the AM on $\pi/4$ QPSK is less than that on QPSK, since the maximum phase shift for $\pi/4$ QPSK is 135° , compared with 180° for QPSK. But the AM on OQPSK is even less as it has a maximum phase shift of 90° . However, $\pi/4$ QPSK is easy to detect and has been adopted for use in TDMA cellular telephone systems. (See Chapter 8.)

The power spectra for these signals are described in the next section.

PSD for MPSK, QAM, QPSK, OQPSK, and $\pi/4$ QPSK

The PSD for MPSK and QAM signals is relatively easy to evaluate for the case of rectangular bit-shape signaling. In this case, the PSD has the same spectral shape that was obtained for BPSK, *provided* that proper frequency scaling is used.

The PSD for the complex envelope, $g(t)$, of the MPSK or QAM signal can be obtained by using Eq. (6–70d). We know that

$$g(t) = \sum_{n=-\infty}^{n=\infty} c_n f(t - nT_s) \quad (5-99)$$

where c_n is a complex-valued random variable representing the multilevel value during the n th symbol pulse. $f(t) = \Pi(t/T_s)$ is the rectangular symbol pulse with symbol duration T_s . $D = 1/T_s$ is the symbol (or baud) rate. The rectangular pulse has the Fourier transform

$$F(f) = T_s \left(\frac{\sin \pi f T_s}{\pi f T_s} \right) = \ell T_b \left(\frac{\sin \ell \pi f T_b}{\ell \pi f T_b} \right) \quad (5-100)$$

where $T_s = \ell T_b$. That is, there are ℓ bits representing each allowed multilevel value. For symmetrical (polar type) signaling—for example, as illustrated in Fig. 5–32 for the case of $M = 16$ —with equally likely multilevels, the mean value of c_n is

$$m_c = \overline{c_n} = 0 \quad (5-101a)$$

and the variance is

$$\sigma_c^2 = \overline{c_n c_n^*} = \overline{|c_n|^2} = C \quad (5-101b)$$

where C is a real positive constant. Substituting Eqs. (5–100) and (5–101) into Eq. (6–70d), we find that the PSD for the complex envelope of MPSK or QAM signals with data modulation of rectangular bit shape is

$$\mathcal{P}_g(f) = K \left(\frac{\sin \pi f \ell T_b}{\pi f \ell T_b} \right)^2, \quad \text{for MPSK and QAM} \quad (5-102)$$

where $K = C \ell T_b$, $M = 2^\ell$ is the number of points in the signal constellation, and the bit rate is $R = 1/T_b$. For a total transmitted power of P watts, the value of K is $K = 2P\ell T_b$, since $\int_{-\infty}^{\infty} P_s(f) df = P$. This PSD for the complex envelope is plotted in Fig. 5–33. The PSD of the MPSK or QAM signal is obtained by simply translating the PSD of Fig. 5–33 to the carrier frequency, as described by Eq. (5–2b). For $\ell = 1$, the figure gives the PSD for BPSK

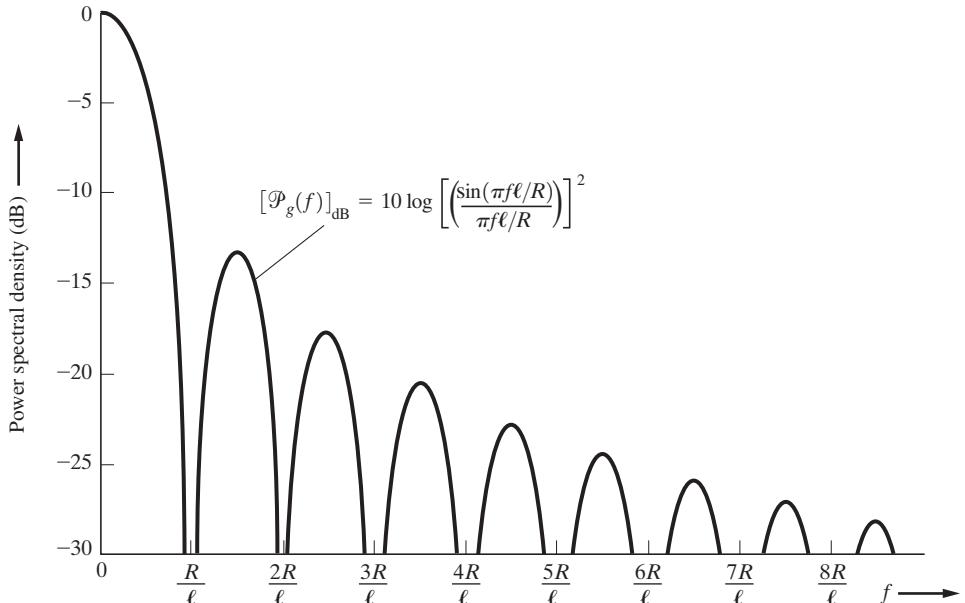


Figure 5–33 PSD for the complex envelope of MPSK and QAM with rectangular data pulses, where $M = 2^\ell$, R is the bit rate, and $R/\ell = D$ is the baud rate (positive frequencies shown). Use $\ell = 2$ for PSD of QPSK, OQPSK, and $\pi/4$ QPSK complex envelope. (See Example5_12.m.)

(i.e., compare Fig. 5–33, $\ell = 1$, with Fig. 5–20b). It is also realized that the PSD for the complex envelope of bandpass multilevel signals, as described by Eq. (5–102), is essentially the same as the PSD for baseband multilevel signals that was obtained in Eq. (3–53).

Example 5–12 PSD FOR MPSK AND QAM SIGNALING

Using Eq. (5–102), plot the PSD (as shown in Figure 5–33) for MPSK and QAM signaling for the case of data having a rectangular pulse shape. See Example5_12.m for the solution.

Equation (5–102) and Fig. 5–33 also describe the PSD for QPSK, OQPSK, and $\pi/4$ QPSK for rectangular-shaped data pulses when $\ell = 2(M = 4)$ is used. For signaling with nonrectangular data pulses, the PSD formula can also be obtained by following the same procedure that gave Eq. (5–102), provided that the appropriate pulse transfer function is used to replace Eq. (5–100). For example, for raised cosine-rolloff filtering, where $f_0 = 1/(2\ell T_b)$, the PSD of Fig. 5–33 would become $P_g(f) = 20 \log [|H_e(f)|]$, where $H_e(f)$ is the raised cosine transfer function of Eq. (3–69) and Fig. 3–26a.

From Fig. 5–33, we see that the null-to-null transmission bandwidth of MPSK or QAM is

$$B_T = 2R/\ell \quad (5-103)$$

when rectangular data pulses are used.

Substituting Eq. (5–103) into Eq. (3–55), we find that the spectral efficiency of MPSK or QAM signaling with rectangular data pulses is

$$\eta = \frac{R}{B_T} = \frac{\ell}{2} \frac{\text{bits/s}}{\text{Hz}} \quad (5-104)$$

where $M = 2^\ell$ is the number of points in the signal constellation. For an $M = 16$ QAM signal, the bandwidth efficiency is $\eta = 2$ bits/s per hertz of bandwidth.

Spectral Efficiency for MPSK, QAM, QPSK, OQPSK, and $\pi/4$ QPSK with Raised Cosine Filtering

The spectrum shown in Fig. 5–33 was obtained for the case of rectangular symbol pulses, and the spectral sidelobes are terrible. The first sidelobe is attenuated by only 13.4 dB. The sidelobes can be eliminated if raised cosine filtering is used (since the raised cosine filter has an absolutely bandlimited frequency response). Referring to Sec. 3–6, we select the 6-dB bandwidth of the raised cosine filter to be half the symbol (baud) rate in order for there to be no ISI. That is, $f_0 = \frac{1}{2}(R/\ell)$. The raised cosine filter has the disadvantage of introducing AM on MPSK signals (and modifying the AM on QAM signals). In practice, a square-root raised cosine (SRRC) frequency response characteristic is often used at the transmitter, along with another SRRC filter at the receiver, in order to simultaneously prevent ISI on the received filtered pulses and to minimize the bit errors due to channel noise. However, the SRRC filter

also introduces AM on the transmitted signal. If the overall pulse shape satisfies the raised cosine-rolloff filter characteristic, then, by the use of Eq. (3–74), the absolute bandwidth of the M -level modulating signal is

$$B = \frac{1}{2}(1 + r)D \quad (5–105)$$

where $D = R/\ell$ and r is the rolloff factor of the filter characteristic. Furthermore, from our study of AM (and DSB-SC, to be specific), we know that the transmission bandwidth is related to the modulation bandwidth by $B_T = 2B$, so that the overall absolute transmission bandwidth of the QAM signal with raised cosine filtered pulses is

$$B_T = \left(\frac{1 + r}{\ell} \right) R \quad (5–106)$$

This compares to an absolute bandwidth of infinity (and a null bandwidth of $B_T = 2R/\ell$) for the case of QAM with rectangular data pulses (as shown in Fig. 5–33).

Because $M = 2^\ell$, which implies that $\ell = \log_2 M = (\ln M)/(\ln 2)$, the spectral efficiency of QAM-type signaling with raised cosine filtering is

$$\eta = \frac{R}{B_T} = \frac{\ln M}{(1 + r) \ln 2} \frac{\text{bit/s}}{\text{Hz}} \quad (5–107)$$

This result is important because it tells us how fast we can signal for a prescribed bandwidth. The result also holds for MPSK, since it is a special case of QAM. Equation (5–107) is used to generate Table 5–8, which illustrates the allowable bit rate per hertz of transmission bandwidth for QAM signaling. For example, suppose that we want to signal over a communications satellite that has an available bandwidth of 2.4 MHz. If we used BPSK ($M = 2$) with a 50% rolloff factor, we could signal at a rate of $B_T \times \eta = 2.4 \times 0.677 = 1.60$ Mbit/s; but if we used QPSK ($M = 4$) with a 25% rolloff factor, we could signal at a rate of $2.4 \times 1.6 = 3.84$ Mbit/s.

To conserve bandwidth, the number of levels M in Eq. (5–107) cannot be increased too much, since, for a given peak envelope power (PEP), the spacing between the signal points in the signal constellation will decrease and noise on the received signal will cause errors.

TABLE 5–8 SPECTRAL EFFICIENCY FOR QAM SIGNALING WITH RAISED COSINE-ROLLOFF PULSE SHAPING (USE $M = 4$ for QPSK, OQPSK, and $\pi/4$ QPSK signaling)

Number of Levels, M (symbols)	Size of DAC, ℓ ; (bits)	$\eta = \frac{R}{B_T} \left(\frac{\text{bit/s}}{\text{Hz}} \right)$					
		$r = 0.0$	$r = 0.1$	$r = 0.25$	$r = 0.5$	$r = 0.75$	$r = 1.0$
2	1	1.00	0.909	0.800	0.667	0.571	0.500
4	2	2.00	1.82	1.60	1.33	1.14	1.00
8	3	3.00	2.73	2.40	2.00	1.71	1.50
16	4	4.00	3.64	3.20	2.67	2.29	2.00
32	5	5.00	4.55	4.0	3.33	2.86	2.50

(Noise moves the received signal vector to a new location that might correspond to a different signal level.) However, we know that R certainly has to be less than C , the channel capacity (Sec. 1–9), if the errors are to be kept small. Consequently, using Eq. (1–10), we require that

$$\eta < \eta_{\max} \quad (5-108a)$$

where

$$\eta_{\max} = \log_2 \left(1 + \frac{S}{N} \right) \quad (5-108b)$$

5-11 MINIMUM-SHIFT KEYING AND GMSK

Minimum-shift keying (MSK) is another bandwidth conservation technique that has been developed. It has the advantage of producing a constant-amplitude signal and, consequently, can be amplified with Class C amplifiers without distortion. As we will see, MSK is equivalent to OQPSK with sinusoidal pulse shaping [for $h_i(t)$].

DEFINITION. *Minimum-shift keying* (MSK) is continuous-phase FSK with a minimum modulation index ($h = 0.5$) that will produce orthogonal signaling.

First, let us show that $h = 0.5$ is the minimum index allowed for orthogonal continuous-phase FSK. For a binary 1 to be transmitted over the bit interval $0 < t < T_b$, the FSK signal would be $s_1(t) = A_c \cos(\omega_1 t + \theta_1)$, and for a binary 0 to be transmitted, the FSK signal would be $s_2(t) = A_c \cos(\omega_2 t + \theta_2)$, where $\theta_1 = \theta_2$ for the continuous-phase condition at the switching time $t = 0$. For orthogonal signaling, from Eq. (2–77), we require the integral of the product of the two signals over the bit interval to be zero. Thus, we require that

$$\int_0^{T_b} s_1(t)s_2(t) dt = \int_0^{T_b} A_c^2 \cos(\omega_1 t + \theta_1) \cos(\omega_2 t + \theta_2) dt = 0 \quad (5-109a)$$

This reduces to the requirement that

$$\begin{aligned} & \frac{A_c^2}{2} \left[\frac{\sin[(\omega_1 - \omega_2)T_b + (\theta_1 - \theta_2)] - \sin(\theta_1 - \theta_2)}{\omega_1 - \omega_2} \right] \\ & + \frac{A_c^2}{2} \left[\frac{\sin[(\omega_1 + \omega_2)T_b + (\theta_1 + \theta_2)] - \sin(\theta_1 + \theta_2)}{\omega_1 + \omega_2} \right] = 0 \end{aligned} \quad (5-109b)$$

The second term is negligible, because $\omega_1 + \omega_2$ is large,[†] so the requirement is that

$$\frac{\sin[2\pi h + (\theta_1 - \theta_2)] - \sin(\theta_1 - \theta_2)}{2\pi h} = 0 \quad (5-110)$$

[†] If $\omega_1 + \omega_2$ is not sufficiently large to make the second term negligible, choose $f_c = \frac{1}{2}m/T_b = \frac{1}{2}mR$, where m is a positive integer. This will make the second term zero ($f_1 = f_c - \Delta F$ and $f_2 = f_c + \Delta F$).

where $(\omega_1 - \omega_2)T_b = 2\pi(2\Delta F)T_b$ and, from Eq. (5-82), $h = 2\Delta F T_b$. For the *continuous-phase* case, $\theta_1 = \theta_2$; and Eq. (5-110) is satisfied for a minimum value of $h = 0.5$, or a peak frequency deviation of

$$\Delta F = \frac{1}{4T_b} = \frac{1}{4}R, \quad \text{for MSK} \quad (5-111a)$$

For *discontinuous-phase* FSK, $\theta_1 \neq \theta_2$; and the minimum value for orthogonality is $h = 1.0$ or

$$\Delta F = \frac{1}{2T_b} = \frac{1}{2}R, \quad \text{for discontinuous-phase, FSK} \quad (5-111b)$$

Now we will demonstrate that the MSK signal (which is $h = 0.5$ continuous-phase FSK) is a form of OQPSK signaling with sinusoidal pulse shaping. First, consider the FSK signal over the signaling interval $(0, T_b)$. When we use Eq. (5-81), the complex envelope is

$$g(t) = A_c e^{j\theta(t)} = A_c e^{j2\pi\Delta F \int_0^t m(\lambda) d\lambda}$$

where $m(t) = \pm 1$, $0 < t < T_b$. Using Eq. (5-111), we find that the complex envelope becomes

$$g(t) = A_c e^{\pm j\pi t/(2T_b)} = x(t) + jy(t), \quad 0 < t < T_b$$

where the \pm signs denote the possible data during the $(0, T_b)$ interval. Thus,

$$x(t) = A_c \cos\left(\pm 1 \frac{\pi t}{2T_b}\right), \quad 0 < t < T_b \quad (5-112a)$$

$$y(t) = A_c \sin\left(\pm 1 \frac{\pi t}{2T_b}\right), \quad 0 < t < T_b \quad (5-112b)$$

and the MSK signal is

$$s(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t \quad (5-112c)$$

A typical input data waveform $m(t)$ and the resulting $x(t)$ and $y(t)$ quadrature modulation waveforms are shown in Fig. 5-34. From Eqs. (5-112a) and (5-112b), and realizing that $\cos[\pm\pi t/(2T_b)] = \cos[\pi t/(2T_b)]$ and $\sin[\pm\pi t/(2T_b)] = \pm\sin[\pi t/(2T_b)]$, we see that the ± 1 sign of $m(t)$ during the $(0, T_b)$ interval affects only $y(t)$, and not $x(t)$, over the signaling interval of $(0, 2T_b)$. We also realize that the $\sin[\pi t/(2T_b)]$ pulse of $y(t)$ is $2T_b$ s wide. Similarly, it can be seen that the ± 1 sign of $m(t)$ over the $(T_b, 2T_b)$ interval affects only $x(t)$, and not $y(t)$, over the interval $(T_b, 3T_b)$. In other words, the binary data of $m(t)$ alternately modulate the $x(t)$ and $y(t)$ components, and the pulse shape for the $x(t)$ and $y(t)$ symbols (which are $2T_b$ wide instead of T_b) is a sinusoid, as shown in the figure. Thus, MSK is equivalent to OQPSK with sinusoidal pulse shaping.

The $x(t)$ and $y(t)$ waveforms, as shown in Fig. 5-34, illustrate the so-called Type II MSK [Bhargava, Haccoun, Matyas, and Nuspl, 1981], in which the basic pulse shape is

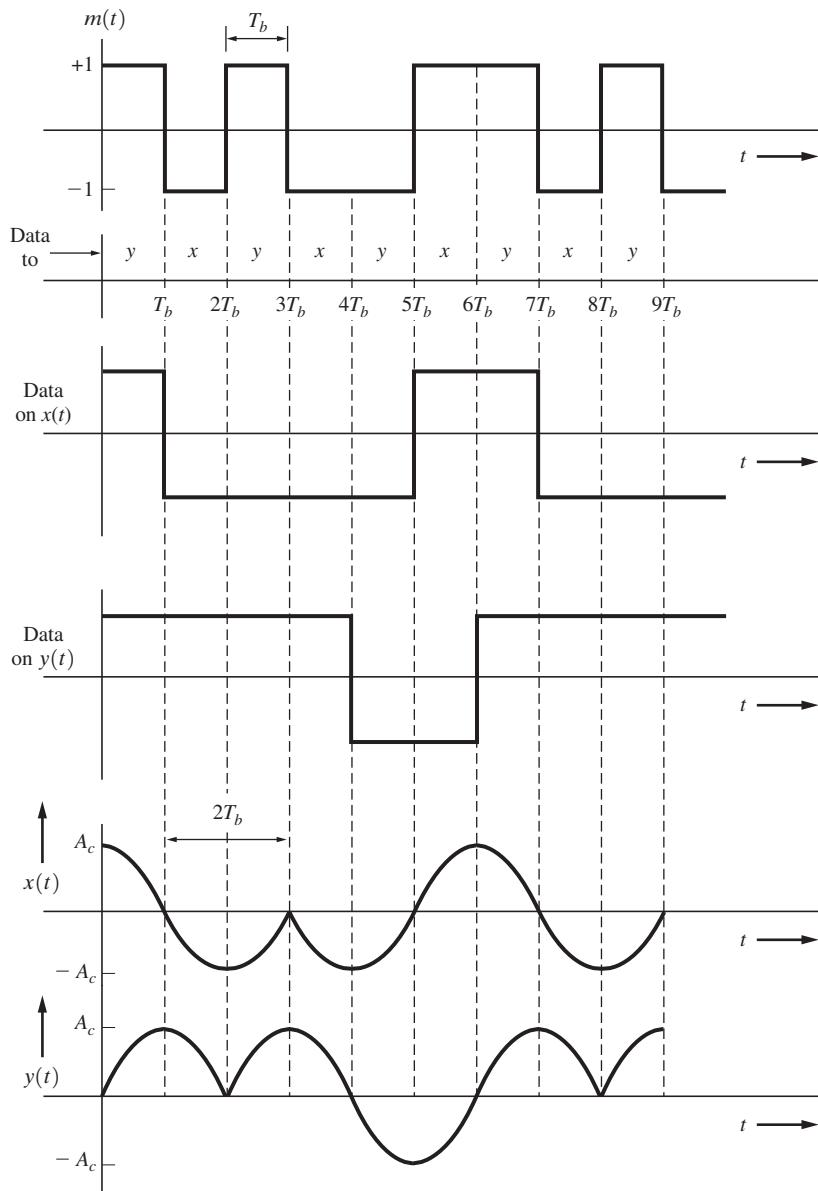


Figure 5–34 MSK quadrature component waveforms (Type II MSK).

always a positive half-cosinusoid. For Type I MSK, the pulse shape [for both $x(t)$ and $y(t)$] alternates between a positive and a negative half-cosinusoid. For both Type I and Type II MSK, it can be shown that there is *no* one-to-one relationship between the input data $m(t)$ and the resulting mark and space frequencies, f_1 and f_2 , respectively, in the

MSK signal. This can be demonstrated by evaluating the instantaneous frequency f_i as a function of the data presented by $m(t)$ during the different bit intervals. The instantaneous frequency is $f_i = f_c + (1/2\pi) [d\theta(t)/dt] = f_c \pm \Delta F$, where $\theta(t) = \tan^{-1}[y(t)/x(t)]$. The \pm sign is determined by the encoding technique (Type I or II) that is used to obtain the $x(t)$ and $y(t)$ waveforms in each bit interval T_b , as well as by the sign of the data on $m(t)$. To get a one-to-one frequency relationship between a Type I MSK signal and the corresponding $h = 0.5$ FSK signal, called a *fast frequency-shift keyed* (FFSK) signal, the data input to the Type I FSK modulator are first differentially encoded. Examples of the waveforms for Type I and II MSK and for FFSK can be found in the MATLAB solutions to Probs. 5–80, 5–81, and 5–82. Regardless of the differences noted, FFSK, Type I MSK, and Type II MSK are all constant-amplitude, continuous-phase FSK signals with a digital modulation index of $h = 0.5$.

Example 5–13 MSK TYPE II SIGNALING

Assume that the data is that as given by Figure 5–34a. For MSK Type II signaling, calculate and plot the I and Q modulating waveforms, and the Type II MSK signal, $s(t)$. See Example5_13.m for the solution.

The PSD for (Type I and Type II) MSK can be evaluated as follows: Because $x(t)$ and $y(t)$ have independent data and their DC value is zero, and since $g(t) = x(t) + jy(t)$, the PSD for the complex envelope is

$$\mathcal{P}_g(f) = \mathcal{P}_x(f) + \mathcal{P}_y(f) = 2\mathcal{P}_x(f)$$

where $\mathcal{P}_x(x) = \mathcal{P}_y(y)$ because $x(t)$ and $y(t)$ have the same type of pulse shape. When we use Eq. (3–40) in Eq. (3–36a) with a pulse width of $2T_b$, this PSD becomes

$$\mathcal{P}_g(f) = \frac{2}{2T_b} |F(f)|^2 \quad (5–113)$$

where $F(f) = \mathcal{F}[f(t)]$ and $f(t)$ is the pulse shape. For the MSK half-cosinusoidal pulse shape, we have

$$f(t) = \begin{cases} A_c \cos\left(\frac{\pi t}{2T_b}\right), & |t| < T_b \\ 0, & t \text{ elsewhere} \end{cases} \quad (5–114a)$$

and the Fourier transform is

$$F(f) = \frac{4A_c T_b \cos 2\pi T_b f}{\pi[1 - (4T_b f)^2]} \quad (5–114b)$$

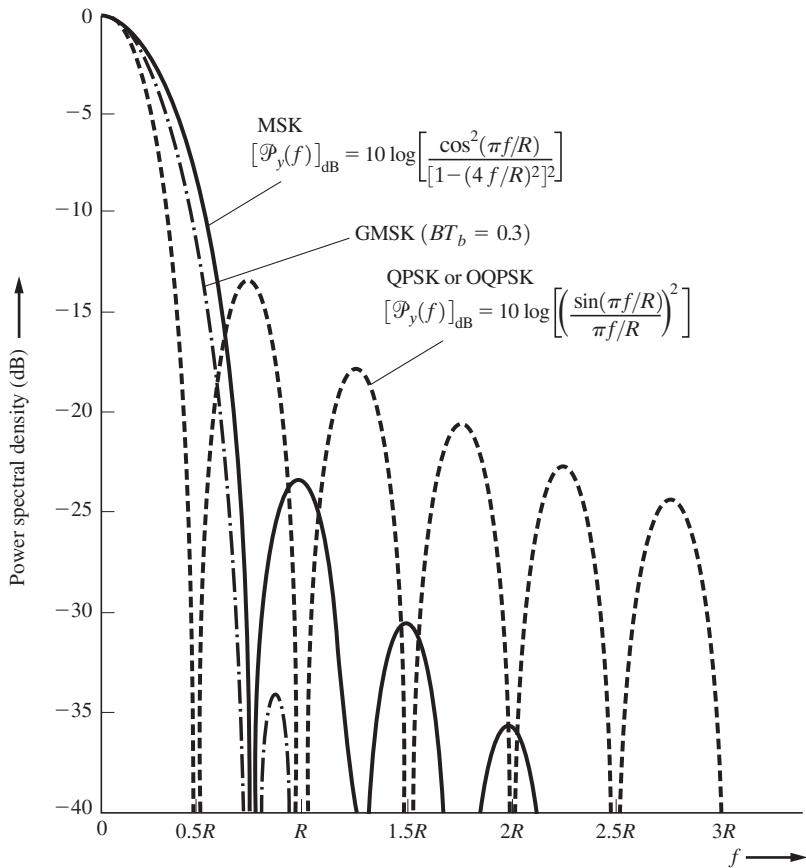


Figure 5–35 PSD for complex envelope of MSK, GMSK, QPSK, and OQPSK, where R is the bit rate (positive frequencies shown).

Thus, the PSD for the complex envelope of an MSK signal is

$$\mathcal{P}_g(f) = \frac{16A_c^2T_b}{\pi^2} \left(\frac{\cos^2 2\pi T_b f}{[1 - (4T_b f)^2]^2} \right) \quad (5-115)$$

where the normalized power in the MSK signal is $A_c^2/2$. The PSD for MSK is readily obtained by translating this spectrum up to the carrier frequency, as described by Eq. (5–2b). This complex-envelope PSD for MSK is shown by the solid-line curve in Fig. 5–35.

Example 5–14 PSD FOR A MSK SIGNAL

Compute and plot the PSD for an MSK signal. See Example5_13.m for the solution. Compare this result with that shown in Figure 5–35.

Another form of MSK is *Gaussian-filtered MSK* (GMSK). For GMSK, the data (rectangular-shaped pulses) are filtered by a filter having a Gaussian-shaped frequency response characteristic before the data are frequency modulated onto the carrier. The transfer function of the Gaussian low-pass filter is

$$H(f) = e^{-[(f/B)^2 (\ln 2/2)]} \quad (5-116)$$


where B is the 3-dB bandwidth of the filter. This filter reduces the spectral sidelobes on the transmitted MSK signal. The PSD for GMSK is difficult to evaluate analytically, but can be obtained via computer simulation [Muroto, 1981]. The result is shown in Fig. 5–35 for the case when the 3-dB bandwidth is 0.3 of the bit rate (i.e., $BT_b = 0.3$). For smaller values of BT_b , the spectral sidelobes are reduced further, but the ISI increases. $BT_b = 0.3$ gives a good compromise for relatively low sidelobes and tolerable ISI that is below the noise floor for cellular telephone applications. For $BT_b = 0.3$, GMSK has lower spectral sidelobes than those for MSK, QPSK, or OQPSK (with rectangular-shaped data pulses). In addition, GMSK has a constant envelope, since it is a form of FM. Consequently, GMSK can be amplified without distortion by high-efficiency Class C amplifiers. GMSK and MSK can also be detected either coherently or incoherently. (See Sec. 7–5.) As discussed in Chapter 8, GMSK with $BT_b = 0.3$ is the modulation format used in GSM cellular telephone systems.

Other digital modulation techniques, such as *tamed frequency modulation* (TFM), have even better spectral characteristics than MSK [DeJager and Dekker, 1978; Pettit, 1982; Taub and Schilling, 1986], and the optimum pulse shape for minimum spectral occupancy of FSK-type signals has been found [Campanella, LoFaso, and Mamola, 1984].


MSK signals can be generated by using any one of several methods, as illustrated in Fig. 5–36. Figure 5–36a shows the generation of FFSK (which is equivalent to Type I MSK with differential encoding of the input data). Here, a simple FM-type modulator having a peak deviation of $\Delta F = 1/(4T_b) = (1/4)R$ is used. Figure 5–36b shows an MSK Type I modulator that is a realization of Eq. (5–112). This is called the *parallel* method of generating MSK, since parallel in-phase (I) and quadrature-phase (Q) channels are used. Figure 5–36c shows the *serial* method of generating MSK. In this approach, BPSK is first generated at a carrier frequency of $f_2 = f_c - \Delta F$, and the bandpass is filtered about $f_1 = f_c + \Delta F$ to produce an MSK signal with a carrier frequency of f_c . (See Prob. 5–83 to demonstrate that this technique is correct.) More properties of MSK are given in Leib and Pasupathy [1993].

Sections 5–9, 5–10, and 5–11, on digital bandpass signaling techniques, are summarized in Table 5–9. The spectral efficiencies of various types of digital signals are shown for the case when rectangular-shaped data pulses are used and for two different bandwidth criteria—the null-to-null bandwidth and the 30-dB bandwidth. A larger value of η indicates a better spectral efficiency. Of course, as shown in Table 5–8, raised cosine-rolloff filtering of the rectangular pulses could be used to reduce the bandwidth and increase η . Alternatively, Gaussian filtering could be used, but it introduces some ISI.


When designing a communication system, one is concerned with the cost and the error performance, as well as the spectral occupancy of the signal. The topic of error performance is covered in Chapter 7.

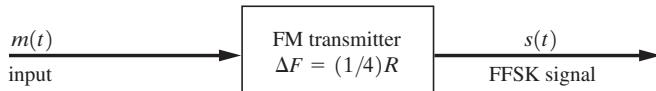

(a) Generation of Fast Frequency-Shift Keying (FFSK)

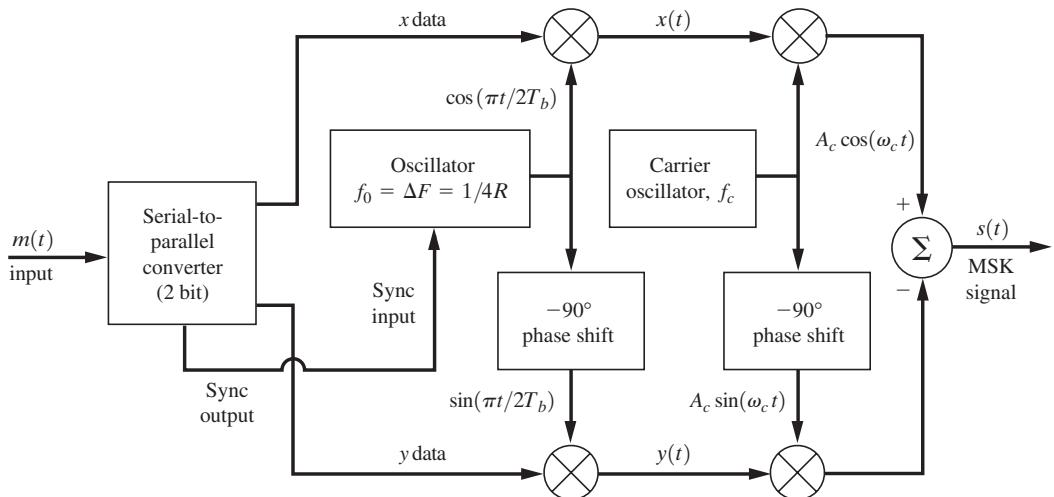

(b) Parallel Generation of Type I MSK (This will generate FFSK if a differential encoder is inserted at the input.)

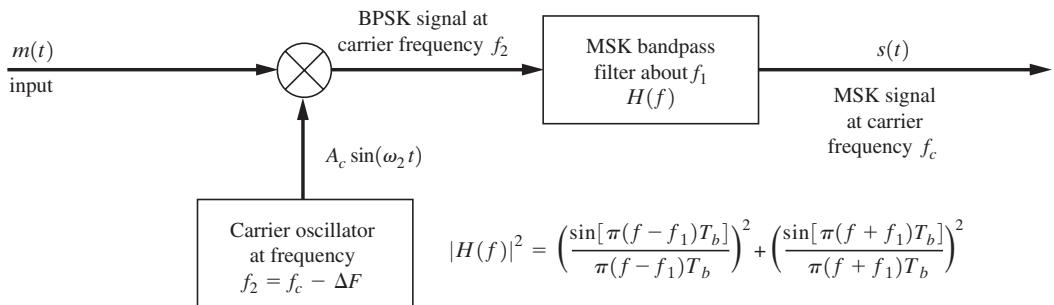

(c) Serial Generation of MSK

Figure 5–36 Generation of MSK signals.

TABLE 5–9 SPECTRAL EFFICIENCY OF DIGITAL SIGNALS

Type of Signal	Spectral Efficiency, $= \frac{R}{B_T} \left(\frac{\text{bit/s}}{\text{Hz}} \right)$	
	Null-to-Null Bandwidth	30-dB Bandwidth
OOK and BPSK	0.500	0.052
QPSK, OQPSK, and $\pi/4$ /QPSK	1.00	0.104
MSK	0.667	0.438
16 QAM	2.00	0.208
64 QAM	3.00	0.313

5–12 ORTHOGONAL FREQUENCY DIVISION MULTIPLEXING

Orthogonal frequency division multiplexing (OFDM) is a technique for transmitting data in parallel by using a large number of modulated carriers with sufficient frequency spacing so that the carriers are orthogonal. As we shall see, OFDM provides resistance to data errors caused by multipath channels.

Over a T -sec interval, the complex envelope for the OFDM signal is

$$g(t) = A_c \sum_{n=0}^{N-1} w_n \varphi_n(t), \quad 0 > t > T \quad (5-117a)$$

where A_c is the carrier amplitude, w_n is the element of the N -element parallel data vector $\mathbf{w} = [w_0, w_1, \dots, w_{N-1}]$, and the orthogonal carriers are

$$\varphi_n(t) = e^{j2\pi f_n t} \quad \text{where} \quad f_n = \frac{1}{T} \left(n - \frac{N-1}{2} \right) \quad (5-117b)$$

The duration of the data symbol on each carrier is T seconds, and the carriers are spaced $1/T$ Hz apart. This assures that the carriers are orthogonal, since the $\varphi_n(t)$ satisfy the orthogonality condition of Eq. (2–77) over the T -sec interval (as shown in Example 2–12). Because the carriers are orthogonal, data can be detected on each of these closely spaced carriers without interference from the other carriers.

A key advantage of OFDM is that it can be generated by using FFT digital signal-processing techniques. For example, if we suppress the frequency offset $(N-1)/2T$ of Eq. (5–117b) and substitute Eq. (5–117b) into Eq. (5–117a), where $t = kT/N$, then the elements of the IFFT vector, as defined by Eq. (2–117), are obtained. Thus, the OFDM signal may be generated by using the IFFT algorithm as shown in Fig. 5–37. In that figure, the complex envelope, $g(t)$, is described by the I and Q components $x(t)$ and $y(t)$, where $g(t) = x(t) + jy(t)$. (This is an application of the generalized transmitter of Fig. 4–28b.)

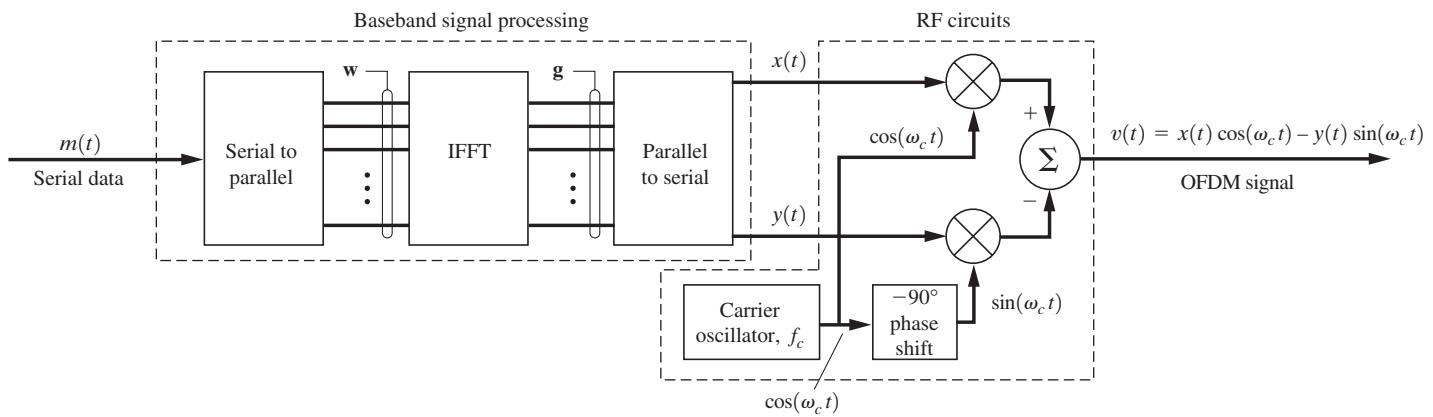


Figure 5–37 OFDM transmitter.

Referring to Fig. 5–37, let the input serial data symbols have a duration of T_s sec each. These data can be binary (± 1) to produce BPSK modulated carriers or can be multilevel complex-valued serial data to produce (as appropriate) QPSK, MPSK, or QAM carriers. $D_s = 1/T_s$, is the input symbol (baud) rate. The serial-to-parallel converter reads in N input serial symbols at a time and holds their values (elements of \mathbf{w}) on the parallel output lines for $T = NT_s$ seconds, where T is the time span of the IFFT. The IFFT uses \mathbf{w} to evaluate output IFFT vector \mathbf{g} , which contains elements representing samples of the complex envelope. The parallel-to-serial converter shifts out the element values of \mathbf{g} . These are the samples of the complex envelope for the OFDM signal described by Eq. (5–117), where $x(t)$ and $y(t)$ are the I and Q components of the complex envelope. The OFDM signal is produced by the IQ modulators as shown in the figure.

At the receiver, the serial data are recovered from the received OFDM signal by (1) demodulating the signal to produce serial I and Q data, (2) converting the serial data to parallel data, (3) evaluating the FFT, and (4) converting the FFT vector (parallel data) to serial output data.

The length-of-the-FFT vector determines the resistance of OFDM to errors caused by multipath channels. N is chosen so that $T = NT_s$ is much larger than the maximum delay time of echo components in the received multipath signal.

The PSD of the OFDM signal can be obtained relatively easily, since the OFDM signal of Eq. (5–117) consists of orthogonal carriers modulated by data with rectangular pulse shapes that have a duration of T sec. Consequently, the PSD of each carrier is of the form $|Sa[\pi(f - f_n)T]|^2$, and the overall PSD for the complex envelope of the OFDM signal is

$$\mathcal{P}_g(f) = C \sum_{n=0}^{N-1} \left| \frac{\sin [\pi(f - f_n)T]}{\pi(f - f_n)T} \right|^2 \quad (5-118)$$

where $C = A_c^2 |\overline{w_n}|^2 T$ and $\overline{w_n} = 0$. The spectrum is shown in Fig. 5–38 for the case of $N = 32$. Since the spacing between the carriers is $1/T$ Hz and there are N carriers, the null bandwidth of the OFDM signal is

$$B_T = \frac{N + 1}{T} = \frac{N + 1}{NT_s} \approx \frac{1}{T_s} = D_s \text{ Hz} \quad (5-119)$$

where the approximation is reasonable for $N > 10$ and D_s is the symbol (baud) rate of the input serial data for the OFDM transmitter. In more advanced OFDM systems, rounded (nonrectangular) pulse shapes can be used to reduce the PSD sidelobes outside the $B_T = D_s$ band.

Example 5–15 PSD FOR AN OFDM SIGNAL

Compute and plot the PSD for the complex envelope of an OFDM signal. See Example5_15.m for the solution. Compare this result with that shown in Figure 5–38.

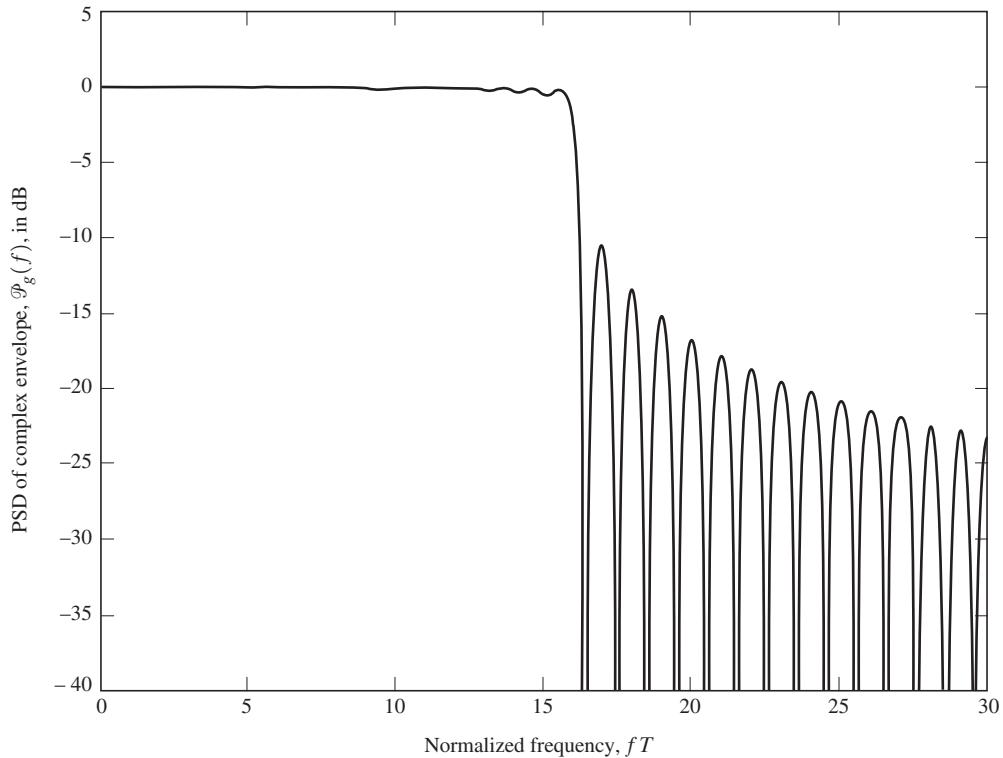


Figure 5–38 PSD for the complex envelope of OFDM with $N = 32$. (See Example5_15.m.)

In a generalization of OFDM called *discrete multitone* (DMT) signaling, the data rate on each carrier can be varied, depending on the received SNR on each. That is, the data rate is reduced (or the carrier is turned off) on carrier frequencies that have low SNR. The data rates can be adapted as the fading conditions vary, resulting in almost error-free transmission over multipath fading channels.

OFDM is used in the European digital broadcast systems (radio and television), some ASDL telephone line modems, in Wi-Fi and Wi-Max wireless computer networks, and in 4G cellular networks. (See Chapter 8 and OFDM in Wikipedia.)

5–13 SPREAD SPECTRUM SYSTEMS

In our study of communication systems, we have been concerned primarily with the performance of communication systems in terms of bandwidth efficiency and energy efficiency (i.e., detected SNR or probability of bit error) with respect to natural noise. However, in some applications, we also need to consider multiple-access capability, antijam capability, interference

rejection, and covert operation, or low-probability of intercept (LPI) capability. (The latter considerations are especially important in military applications.) These performance objectives can be optimized by using spread spectrum techniques.

Multiple-access capability is needed in cellular telephone and personal communication applications, where many users share a band of frequencies, because there is not enough available bandwidth to assign a permanent frequency channel to each user. Spread spectrum techniques can provide the simultaneous use of a wide frequency band via *code-division multiple-access* (CDMA) techniques, an alternative to band sharing. Two other approaches, time-division multiple access (TDMA) and frequency-division multiple access (FDMA), are studied in Sections 3–9, 5–7, and 8–5.

There are many types of *spread spectrum* (SS) systems. To be considered an SS system, a system must satisfy two criteria:

1. The bandwidth of the transmitted signal $s(t)$ needs to be much greater than that of the message $m(t)$.
2. The relatively wide bandwidth of $s(t)$ must be caused by an independent modulating waveform $c(t)$ called the *spreading signal*, and this signal must be known by the receiver in order for the message signal $m(t)$ to be detected.

The SS signal is

$$s(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} \quad (5-120a)$$

where the complex envelope is a function of both $m(t)$ and $c(t)$. In most cases, a product function is used, so that

$$g(t) = g_m(t)g_c(t) \quad (5-120b)$$

where $g_m(t)$ and $g_c(t)$ are the usual types of modulation complex-envelope functions that generate AM, PM, FM, and so on, as given in Table 4–1. The SS signals are classified by the type of mapping functions that are used for $g_c(t)$.

The following are some of the most common types of SS signals:

- *Direct Sequence* (DS). Here, a DSB-SC type of spreading modulation is used [i.e., $g_c(t) = c(t)$], and $c(t)$ is a polar NRZ waveform.
- *Frequency Hopping* (FH). Here $g_c(t)$ is of the FM type where there are $M = 2^k$ hop frequencies determined by the k -bit words obtained from the spreading code waveform $c(t)$.
- *Hybrid* techniques that include both DS and FH.

We illustrate exactly how DS and FH systems work in the remaining sections of the chapter.

Direct Sequence

Assume that the information waveform $m(t)$ comes from a digital source and is a polar waveform having values of ± 1 . Furthermore, let us examine the case of BPSK modulation,

where $g_m(t) = A_c m(t)$. Thus, for DS, where $g_c(t) = c(t)$ is used in Eq. (5–120b), the complex envelope for the SS signal becomes

$$g(t) = A_c m(t)c(t) \quad (5-121)$$

The resulting $s(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\}$ is called a *binary phase-shift keyed data, direct sequence spreading, spread spectrum signal* (BPSK-DS-SS), and $c(t)$ is a polar spreading signal. Furthermore, let this spreading waveform be generated by using a *pseudonoise* (PN) code generator, as shown in Fig. 5–39b, where the values of $c(t)$ are ± 1 . The pulse width of $c(t)$ is denoted by T_c and is called a *chip* interval (as contrasted with a bit interval). The code generator uses a modulo-2 adder and r shift register stages that are clocked every T_c sec. It can be shown that $c(t)$ is periodic. Furthermore, feedback taps from the stage of the shift registers and modulo-2 adders are arranged so that the $c(t)$ waveform has a maximum period of N chips, where $N = 2^r - 1$. This type of PN code generator is said to generate a *maximum-length sequence*, or *m-sequence*, waveform.

Properties of Maximum-Length Sequences. The following are some properties of *m*-sequences [Peterson, Ziemer, and Borth, 1995]:

Property 1. In one period, the number of 1's is always one more than the number of 0's.

Property 2. The modulo-2 sum of any *m*-sequence, when summed chip by chip with a shifted version of the same sequence, produces another shifted version of the same sequence.

Property 3. If a window of width r (where r is the number of stages in the shift register) is slid along the sequence for N shifts, then all possible r -bit words will appear exactly once, except for the all 0 r -bit word.

Property 4. If the 0's and 1's are represented by -1 and $+1$ V, the autocorrelation of the sequence is

$$R_c(k) = \begin{cases} 1, & k = \ell N \\ -\frac{1}{N}, & k \neq \ell N \end{cases} \quad (5-122)$$

where $R_c(k) \triangleq (1/N) \sum_{n=0}^{N-1} c_n c_{n+k}$ and $c_n = \pm 1$.

The autocorrelation of the waveform $c(t)$ is

$$R_c(\tau) = \left(1 - \frac{\tau_e}{T_c} \right) R_c(k) + \frac{\tau_e}{T_c} R_c(k+1) \quad (5-123)$$

where $R_c(\tau) = \langle c(t) c(t+\tau) \rangle$ and τ_e is defined by

$$\tau = k T_c + \tau_e, \quad \text{with } 0 \leq \tau_e < T_c \quad (5-124)$$

Equation (5–123) reduces to

$$R_c(\tau) = \left[\sum_{\ell=-\infty}^{\ell=\infty} \left(1 + \frac{1}{N} \right) \Lambda \left(\frac{\tau - \ell N T_c}{T_c} \right) \right] - \frac{1}{N} \quad (5-125)$$

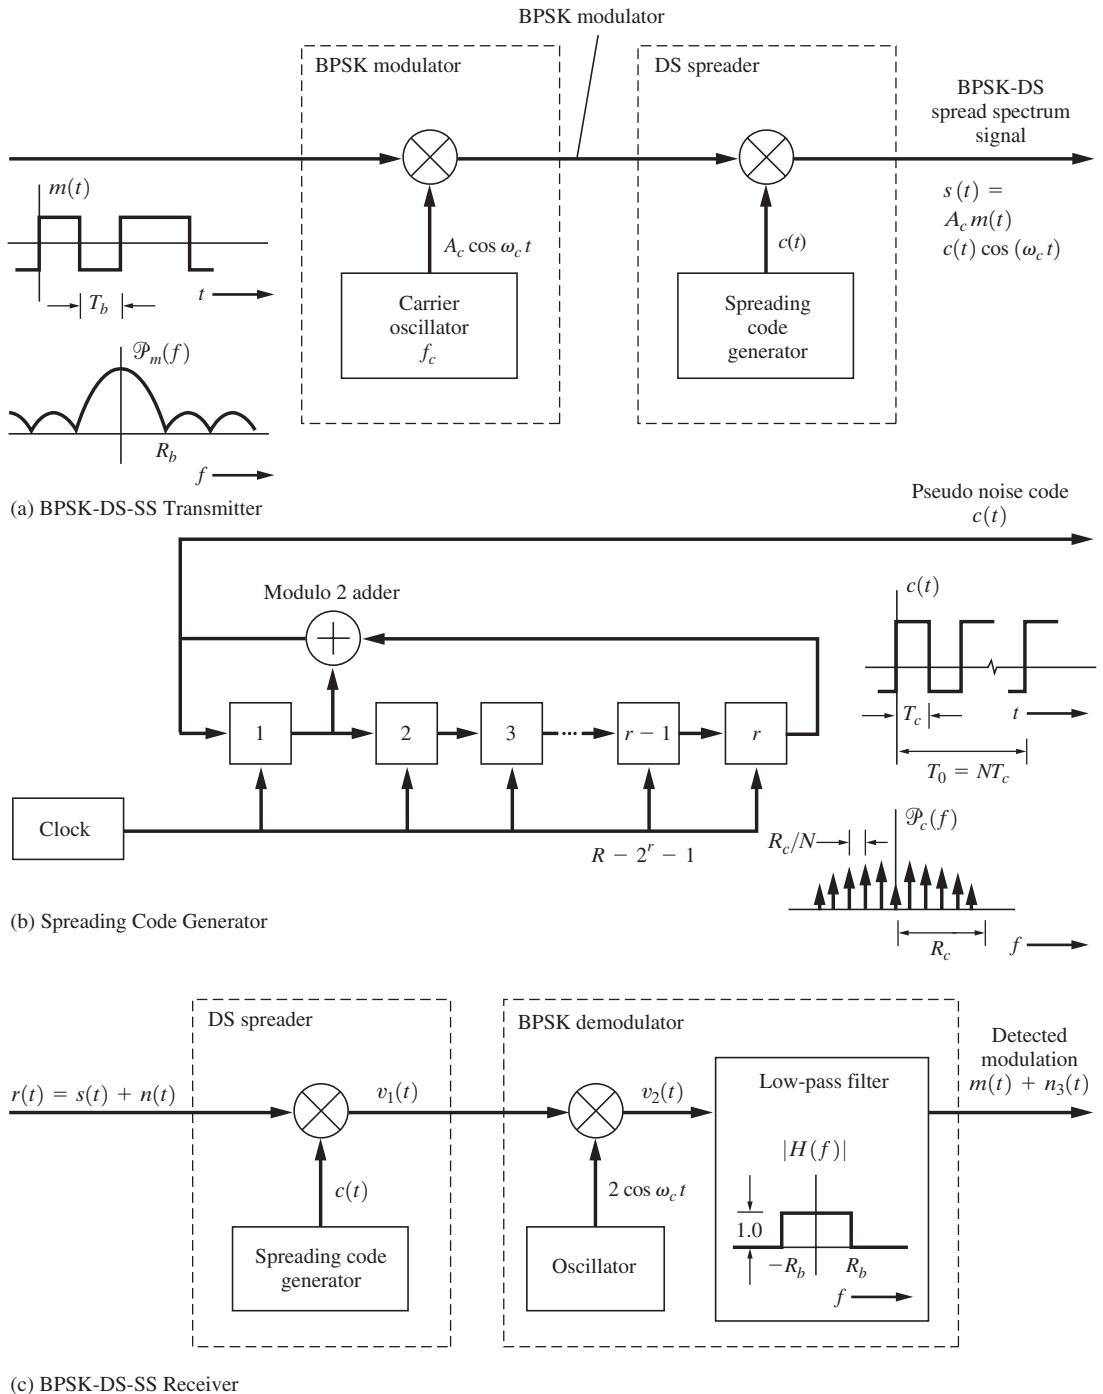


Figure 5–39 Direct sequence spread spectrum system (DS-SS).


This equation is plotted in Fig. 5–40a, where it is apparent that the autocorrelation function for the PN waveform is periodic with triangular pulses of width $2T_c$ repeated every NT_c seconds and that a correlation level of $-1/N$ occurs between these triangular pulses. Furthermore, since the autocorrelation function is periodic, the associated PSD is a line spectrum. That is, the autocorrelation is expressed as the Fourier series

$$R_c(\tau) = \sum_{n=-\infty}^{\infty} r_n e^{j2\pi n f_0 t} \quad (5-126)$$


where $f_0 = 1/(NT_c)$ and $\{r_n\}$ is the set of Fourier series coefficients. Thus, using Eq. (2–109) yields

$$\mathcal{P}_c(f) = \mathcal{F}[R_c(\tau)] = \sum_{n=-\infty}^{\infty} r_n \delta(f - nf_0) \quad (5-127)$$

where the Fourier series coefficients are evaluated and found to be

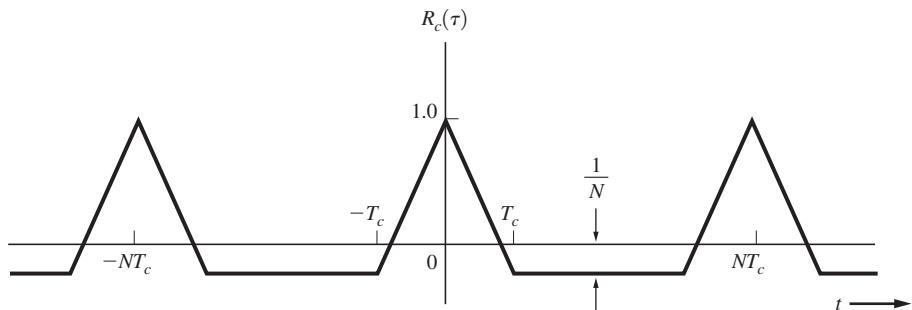

(a) Autocorrelation Function

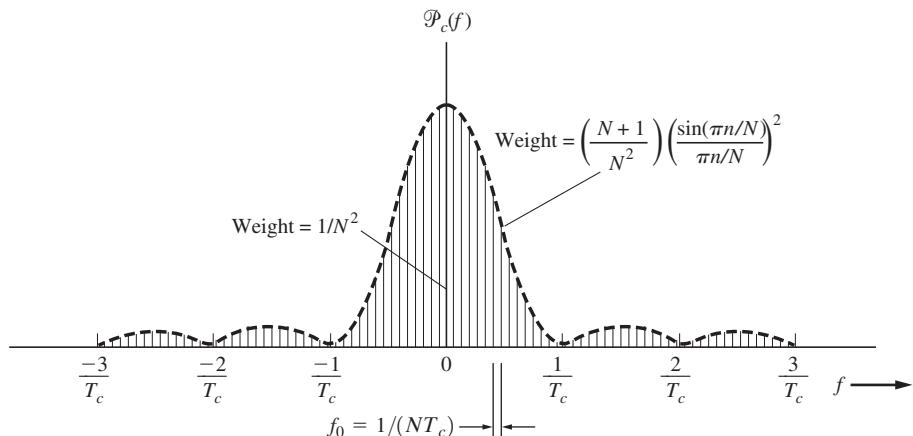

(b) Power Spectral Density (PSD)

Figure 5–40 Autocorrelation and PSD for an m -sequence PN waveform.

$$r_n = \begin{cases} \frac{1}{N^2}, & n = 0 \\ \left(\frac{N+1}{N^2}\right) \left(\frac{\sin(\pi n/N)}{\pi n/N}\right), & n \neq 0 \end{cases} \quad (5-128)$$

This PSD is plotted in Fig. 5–40b.

Now let us demonstrate that the bandwidth of the SS signal is relatively large compared to the data rate R_b and is determined primarily by the spreading waveform $c(t)$, and not by the data modulation $m(t)$. Referring to Fig. 5–39, we see that the PSDs of both $m(t)$ and $c(t)$ are of the $[(\sin x)/x]^2$ type, where the bandwidth of $c(t)$ is much larger than that of $m(t)$ because it is assumed that the chip rate $R_c = 1/T_c$ is much larger than the data rate $R_b = 1/T_b$. That is, $R_c \gg R_b$. To simplify the mathematics, approximate these PSDs by rectangular spectra, as shown in Figs. 5–41a and 5–41b, where the heights of the PSD are selected so that the areas

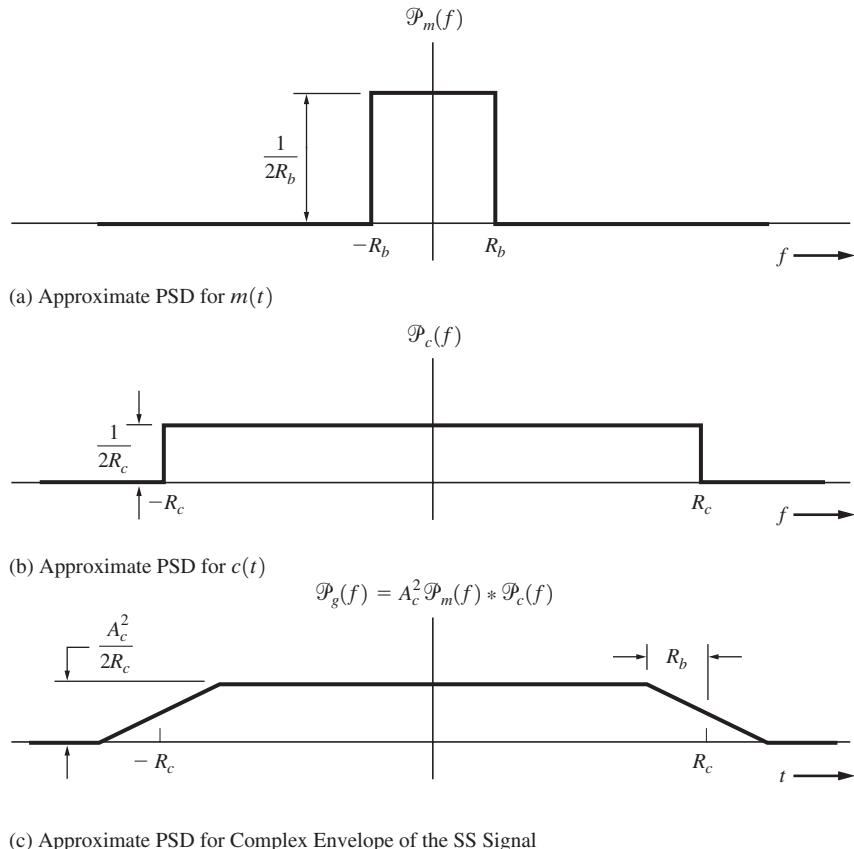


Figure 5–41 Approximate PSD of the BPSK-DS-SS signal.

under the curves are unity because the powers of $m(t)$ and $c(t)$ are unity. (They both have only ± 1 values.) From Eq. (5–121), $g(t)$ is obtained by multiplying $m(t)$ and $c(t)$ in the time domain, and $m(t)$ and $c(t)$ are independent. Thus, the PSD for the complex envelope of the BPSK-DS-SS signal is obtained by a convolution operation in the frequency domain:

$$\mathcal{P}_g(f) = A_c^2 \mathcal{P}_m(f) * \mathcal{P}_c(f) \quad (5-129)$$

This result is shown in Fig. 5–41c for the approximate PSDs of $m(t)$ and $c(t)$. The bandwidth of the BPSK-DS-SS signal is determined essentially by the chip rate R_c , because $R_c \gg R_b$. For example, let $R_b = 9.6$ kbits/s and $R_c = 9.6$ Mchips/s. Then the bandwidth of the SS signal is $B_T \approx 2R_c = 19.2$ MHz.

From Fig. 5–41, we can also demonstrate that the spreading has made the signal less susceptible to detection by an eavesdropper. That is, the signal has LPI. Without spreading [i.e., if $c(t)$ were unity], the level of the in-band PSD would be proportional to $A_c^2/(2R_b)$, as seen in Fig. 5–41a, but with spreading, the in-band spectral level drops to $A_c^2/(2R_c)$, as seen in Fig. 5–41c. This is a reduction of R_c/R_b . For example, for the values of R_b and R_c just cited, the reduction factor would be $(9.6 \text{ Mchips/s})/(9.6 \text{ kbits/s}) = 1,000$, or 30 dB. Often, the eavesdropper detects the presence of a signal by using a spectrum analyzer, but when SS is used, the level will drop by 30 dB. This is often below the noise floor of the potential eavesdropper, and thus, the SS signal will escape detection by the eavesdropper.

Figure 5–39c shows a receiver that recovers the modulation on the SS signal. The receiver has a despreading circuit that is driven by a PN code generator in synchronism with the transmitter spreading code. Assume that the input to the receiver consists of the SS signal plus a narrowband (sine wave) jammer signal. Then

$$r(t) = s(t) + n(t) = A_c m(t) c(t) \cos \omega_c t + n_j(t), \quad (5-130)$$

where the jamming signal is

$$n_j(t) = A_J \cos \omega_c t \quad (5-131)$$

Here, it is assumed that the jamming power is $A_J^2/2$ relative to the signal power of $A_c^2/2$ and that the jamming frequency is set to f_c for the worst-case jamming effect. Referring to Fig. 5–39c, we find that the output of the despreader is

$$v_1(t) = A_c m(t) \cos \omega_c t + A_J c(t) \cos \omega_c t \quad (5-132)$$

since $c^2(t) = (\pm 1)^2 = 1$. The BPSK-DS-SS signal has become simply a BPSK signal at the output of the despreader. That is, at the receiver input the SS signal has a bandwidth of $2R_c$, but at the despreader output the bandwidth of the resulting BPSK signal is $2R_b$, a 1,000:1 reduction for the figures previously cited. The data on the BPSK despread signal are recovered by using a BPSK detector circuit as shown.

Now we show that this SS receiver provides an antijam capability of 30 dB for the case of $R_b = 9.6$ kbits/s and $R_c = 9.6$ Mchips/s. From Eq. (5–132), it is seen that the narrowband jammer signal that was present at the receiver input has been *spread* by the despreader, since it has been multiplied by $c(t)$. It is this spreading effect on the jamming signal that produces the antijam capability. Using Eq. (5–132) and referring to Fig. 5–39c, we obtain an input to the LPF of

$$v_2(t) = A_c m(t) + n_2(t) \quad (5-133)$$

where

$$n_2(t) = A_J c(t) \quad (5-134)$$

and the terms about $f = 2f_c$ have been neglected because they do not pass through the LPF. Referring to Fig. 5–39c, we note that the jammer power at the receiver output is

$$\mathcal{P}_{n_3} = \int_{-R_b}^{R_b} \mathcal{P}_{n_2}(f) df = \int_{-R_b}^{R_b} A_J^2 \frac{1}{2R_c} df = \frac{A_J^2}{R_c/R_b} \quad (5-135)$$

and the jammer power at the input to the LPF is A_J^2 . [$\mathcal{P}_{n_2}(f) = A_J^2 y(2R_c)$, as seen from Fig. 5–41b and Eq. (5–134).] For a conventional BPSK system (i.e., one without a spread spectrum), $c(t)$ would be unity and Eq. (5–134) would become $n_2(t) = A_J$, so the jamming power out of the LPF would be A_J^2 instead of $A_J^2/(R_c/R_b)$ for the case of an SS system. [The output signal should be $A_c m(t)$ for both cases.] Thus, the SS receiver has reduced the effect of narrowband jamming by a factor of R_c/R_b . This factor, R_c/R_b , is called the *processing gain* of the SS receiver.[†] For our example of $R_c = 9.6$ Mchips/s and $R_b = 9.6$ kbits/s, the processing gain is 30 dB, which means that the narrowband jammer would have to have 30 dB more power to have the same jamming effect on this SS system, compared with the conventional BPSK system (without SS). Thus, this SS technique provides 30 dB of antijam capability for the R_c/R_b ratio cited in the example.


SS techniques can also be used to provide multiple access, called *code division multiple access* (CDMA). Here, each user is assigned a spreading code such that the signals are orthogonal. The technique is used in CDMA cellular telephone systems. Thus, multiple SS signals can be transmitted simultaneously in the same frequency band, and yet the data on a particular SS signal can be decoded by a receiver, *provided that* the receiver uses a PN code that is identical to, and synchronized with, the particular SS signal that is to be decoded. CDMA links are designed to operate either in the synchronous mode or the asynchronous mode. For the *synchronous mode*, the symbol transition times of all users are aligned. This mode is often used for the forward link from the base station (BS) to the mobile station (MS). For the *asynchronous mode*, no effort is made to align the sequences. This mode is used for the reverse link from the MS to the BS. The asynchronous mode has more multiple access interference, but fewer design constraints.

To accommodate more users in frequency bands that are now saturated with conventional narrowband users (such as the two-way radio bands), it is possible to assign new SS stations. This is called *spread spectrum overlay*. The SS stations would operate with such a wide bandwidth that their PSD would appear to be negligible to narrowband receivers located sufficiently distant from the SS transmitters. On the other hand, to the SS receiver, the narrowband signals would have a minimal jamming effect because of the large coding gain of the SS receiver.


[†] The processing gain is defined as the ratio of the noise power out without SS divided by the noise power out with SS. This is equivalent to the ratio $(S/N)_{\text{out}} / (S/N)_{\text{in}}$ when $(S/N)_{\text{in}}$ is the signal-to-noise power into the receiver and $(S/N)_{\text{out}}$ is the signal-to-noise power out of the LPF.

Frequency Hopping

As indicated previously, a frequency-hopped (FH) SS signal uses a $g_c(t)$ that is of the FM type, where there are $M = 2^k$ hop frequencies controlled by the spreading code, in which k chip words are taken to determine each hop frequency. An FH-SS transmitter is shown in Fig. 5–42a. The

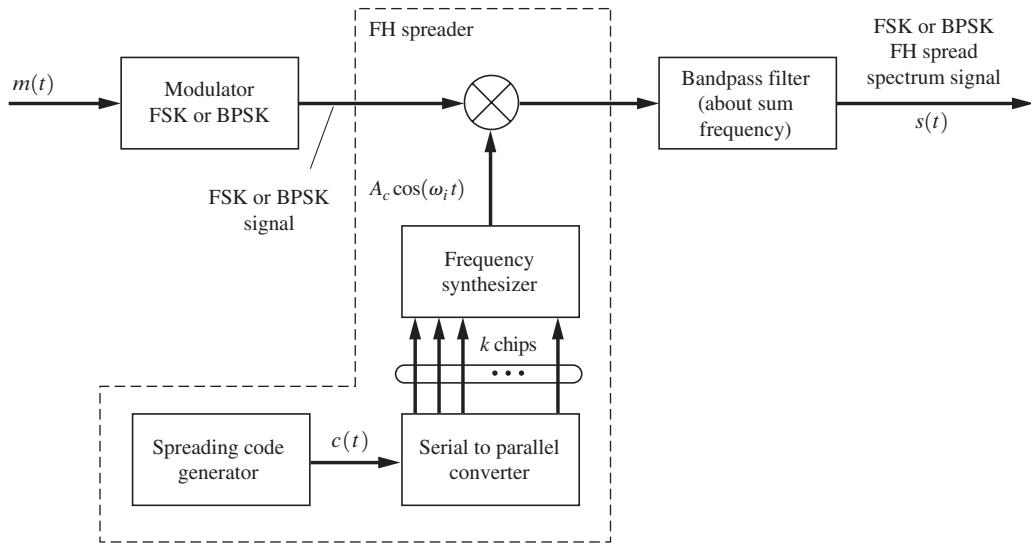

(a) Transmitter

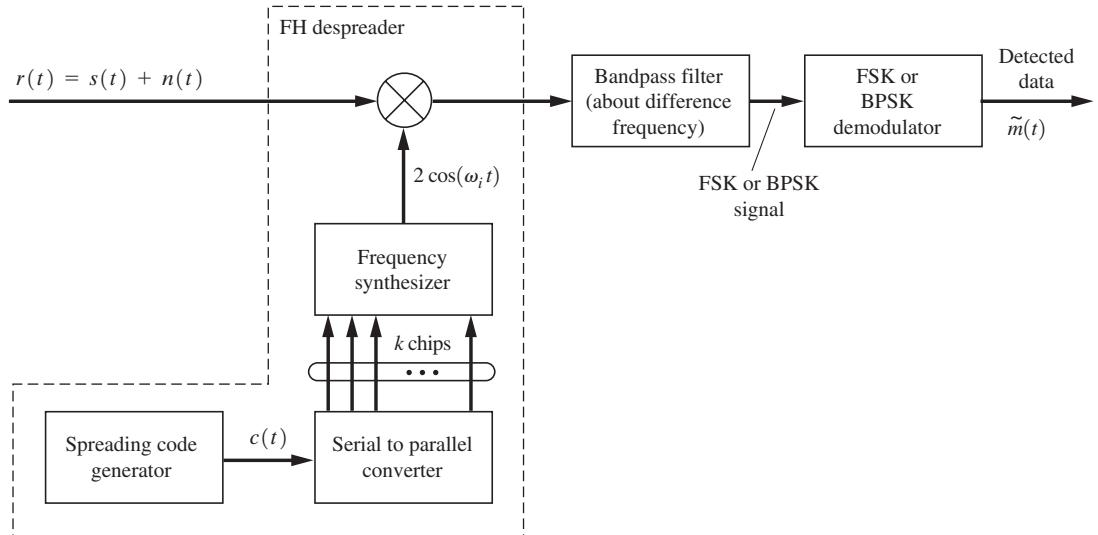

(b) Receiver

Figure 5–42 Frequency-hopped spread spectrum system (FH-SS).

source information is modulated onto a carrier using conventional FSK or BPSK techniques to produce an FSK or a BPSK signal. The frequency hopping is accomplished by using a mixer circuit wherein the LO signal is provided by the output of a frequency synthesizer that is hopped by the PN spreading code. The serial-to-parallel converter reads k serial chips of the spreading code and outputs a k -chip parallel word to the programmable dividers in the frequency synthesizer. (See Fig. 4–25 and the related discussion of frequency synthesizers.) The k -chip word specifies one of the possible $M = 2^k$ hop frequencies, $\omega_1, \omega_2, \dots, \omega_M$.

The FH signal is decoded as shown in Fig. 5–42b. Here, the receiver has the knowledge of the transmitter, $c(t)$, so that the frequency synthesizer in the receiver can be hopped in synchronism with that at the transmitter. This despreads the FH signal, and the source information is recovered from the dehopped signal with the use of a conventional FSK or BPSK demodulator, as appropriate.

SS Frequency Bands

In 1985, the FCC opened up three shared-frequency bands—902 to 928 MHz, 2,400 to 2,483.5 MHz, and 5,725 to 5,850 MHz—for commercial SS use with unlicensed 1-W transmitters. This has led to the production and use of SS equipment for telemetry systems, wireless local area networks (Wi-Fi or 802.11a, 802.11b, 802.11g, and 802.11n) for personal computers, and wireless fire and security systems. Some SS applications have advantages over other systems. For example, an SS cellular telephone system (i.e., CDMA) appears to be able to accommodate about 1,000 users per cell, compared to the 55 users per cell the U.S. analog cellular system accommodates [Schilling, Pickholtz, and Milstein, 1990]. (See Sec. 8–8 for CDMA cellular telephone standards.) For further study on SS systems, the reader is referred to books and papers that have been written on the this subject [Cooper and McGillem, 1986; Dixon, 1994; Ipatov, 2005; McGill, Natali, and Edwards, 1994; Peterson, Ziemer, and Borth, 1995; Rhee, 1998; Torrieri, 2004].

5–14 SUMMARY

In this chapter, a wide range of analog and digital modulation systems were examined on the basis of the theory developed in Chapters 1 through 4. AM, SSB, PM, and FM signaling techniques were considered in detail. Standards for AM, FM, and IBOC digital broadcasting signals were given. Digital signaling techniques such as OOK, BPSK, FSK, MSK and OFDM were developed. The spectra for these digital signals were evaluated in terms of the bit rate of the digital information source. Multilevel digital signaling techniques such as QPSK, MPSK, and QAM, were also studied, and their spectra were evaluated.

Spread spectrum signaling was examined. This technique has multiple-access capability, antijam capability, interference rejection, and a low probability of intercept, properties that are applicable to personal communication systems and military systems.

5–15 STUDY-AID EXAMPLES

SA5–1 Formula for SSB Power Prove that the normalized average power for an SSB signal is $\langle s^2(t) \rangle = A_c^2 \langle m^2(t) \rangle$, as given by Eq. (5–25).

Solution For SSB, $g(t) = A_c[m(t) \pm j\hat{m}(t)]$. Using Eq. (4–17) yields

$$P_s = \langle s^2(t) \rangle = \frac{1}{2} \langle |g(t)|^2 \rangle = \frac{1}{2} A_c \langle m^2(t) + [\hat{m}(t)]^2 \rangle$$

or

$$P_s = \langle s^2(t) \rangle = \frac{1}{2} A_c \{ \langle m^2(t) \rangle + \langle [\hat{m}(t)]^2 \rangle \} \quad (5-136)$$

But

$$\langle [\hat{m}(t)]^2 \rangle = \int_{-\infty}^{\infty} \mathcal{P}_{\hat{m}}(f) df = \int_{-\infty}^{\infty} |H(f)|^2 \mathcal{P}_m(f) df$$

where $H(f)$ is the transfer function of the Hilbert transformer. Using Eq. (5–19), we find that $|H(f)| = 1$. Consequently,

$$\langle [\hat{m}(t)]^2 \rangle = \int_{-\infty}^{\infty} \mathcal{P}_{\hat{m}}(f) df = \langle m^2(t) \rangle \quad (5-137)$$

Substituting Eq. (5–137) into Eq. (5–136), we get

$$P_s = \langle s^2(t) \rangle = A_c^2 \langle m^2(t) \rangle$$

SA5–2 Evaluation of SSB Power An SSB transmitter with $A_c = 100$ is being tested by modulating it with a triangular waveform that is shown in Fig. 5–14a, where $V_p = 0.5$ V. The transmitter is connected to a $50\text{-}\Omega$ resistive load. Calculate the actual power dissipated into the load.

Solution Using Eq. (5–25) yields

$$P_{\text{actual}} = \frac{(V_s)^2_{\text{rms}}}{R_L} = \frac{\langle s^2(t) \rangle}{R_L} = \frac{A_c^2}{R_L} \langle m^2(t) \rangle \quad (5-138)$$

For the waveform shown in Fig. 5–14a,

$$\langle m^2(t) \rangle = \frac{1}{T_m} \int_0^{T_m} m^2(t) dt = \frac{4}{T_m} \int_0^{T_m/4} \left(\frac{4V_p}{T_m} t - V_p \right)^2 dt$$

or

$$\langle m^2(t) \rangle = \frac{4V_p^2}{T_m} \frac{\left(\frac{4}{T_m} t - 1 \right)^3}{3 \left(\frac{4}{T_m} \right)} \Bigg|_0^{T_m/4} = \frac{V_p^2}{3} \quad (5-139)$$

Substituting Eq. (5–139) into Eq. (5–138), we get

$$P_{\text{actual}} = \frac{A_c^2 V_p^2}{3 R_L} = \frac{(100)^2 (0.5)^2}{3(50)} = 16.67 \text{ W}$$

SA5–3 FM Transmitter with Frequency Multipliers As shown in Fig. 5–43, an FM transmitter consists of an FM exciter stage, a $\times 3$ frequency multiplier, an up-converter (with a bandpass filter), a $\times 2$ frequency multiplier, and a $\times 3$ frequency multiplier. The oscillator has a frequency of 80.0150 MHz, and the bandpass filter is centered around the carrier frequency, which is located at approximately 143 MHz. The FM exciter has a carrier frequency of 20.9957 MHz and a peak deviation of 0.694 kHz when the audio input is applied. The bandwidth of the audio input is 3 kHz. Calculate the carrier frequency and the peak deviation for the FM signals at points B, C, D, E, and F. Also, calculate the bandwidth required for the bandpass filter and the exact center frequency for the bandpass filter.

Solution As shown in Sec. 4–12, a frequency multiplier produces an output signal at the n th harmonic of the input, and it increases any PM or FM variation that is on the input signal by a factor of n . That is, if the input signal has an angle variation of $\theta(t)$, the output signal will have a variation of $n\theta(t)$, as shown by Eq. (4–73). Thus, the peak deviation at the output of a frequency multiplier is $(\Delta F)_{\text{out}} = n(\Delta F)_{\text{in}}$, because $\Delta F = (1/2\pi) d\theta(t)/dt$. The FM exciter output has a carrier frequency $(f_c)_A = 20.9957$ MHz and a peak deviation of $(\Delta F)_A = 0.694$ kHz. Thus, the FM signal at point B has the parameters

$$(f_c)_B = 3(f_c)_A = 62.9871 \text{ MHz} \text{ and } (\Delta F)_B = 3(\Delta F)_A = 2.08 \text{ kHz}$$

The mixer (multiplier) produces two signals—a sum frequency term and a difference frequency term at point C—with the carrier frequencies

$$(f_c)_{C \text{ sum}} = f_0 + (f_c)_B = 143.0021 \text{ MHz}$$

and

$$(f_c)_{C \text{ diff}} = f_0 - (f_c)_B = 17.0279 \text{ MHz}$$

Because the mixer output signal has the same complex envelope as the complex envelope at its input (see Sec. 4–11), all the modulation output parameters at the mixer output are the same as those for the input. Thus, the sum and difference carrier frequencies are frequency modulated, and the peak deviation for each is $(\Delta F)_C = (\Delta F)_B = 2.08$ kHz. The bandpass filter passes the 143-MHz term. Consequently, the FM signal at point D has the parameters

$$(f_c)_D = (f_c)_{C \text{ sum}} = 143.0021 \text{ MHz} \text{ and } (\Delta F)_D = (\Delta F)_C = 2.08 \text{ kHz}$$

The FM signals at points E and F have the parameters

$$(f_c)_E = 2(f_c)_D = 286.0042 \text{ MHz} \text{ and } (\Delta F)_E = 2(\Delta F)_D = 4.16 \text{ kHz}$$

$$(f_c)_F = 3(f_c)_E = 858.0126 \text{ MHz} \text{ and } (\Delta F)_F = 3(\Delta F)_E = 12.49 \text{ kHz}$$

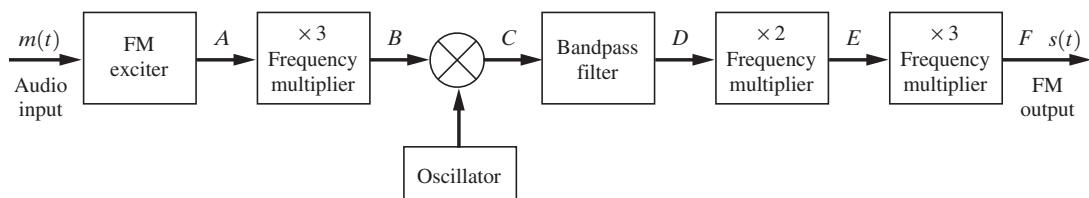


Figure 5–43 FM transmitter.

In summary, the circuit of Fig. 5–43 produces an FM signal at 858.0126 MHz that has a peak deviation of 12.49 kHz. The bandpass filter is centered at $(f_c)_{C\text{ sum}} = 143.0021$ MHz and has a bandwidth sufficient to pass the FM signal with the deviation $(\Delta F)_C = 2.08$ kHz. Using Carson's rule, [Eq. (5–61)], we find that the required bandwidth for the bandpass filter is

$$B_T = 2[\beta_C + 1]B = 2[(\Delta F)_C + B]$$

or

$$B_T = 2[2.08 + 3.0] = 10.16 \text{ kHz}$$

SA5–4 Using an SSB Transmitter to Translate Baseband Data to RF Data are sent by an amateur radio operator on the 40 meter band by using an SSB transceiver. To accomplish this, a modem of the Bell 103 type (described in Example 5–9) is connected to the audio (microphone) input of the SSB transceiver. Assume that the modem is set to the answer mode and the transceiver is set to transmit a lower SSB signal on a suppressed carrier frequency of $(f_c)_{SSB} = 7.090$ MHz. Describe the type of digitally modulated signal that is emitted, and determine its carrier frequency. For alternating 101010 data, compute the spectrum of the transmitted signal.

Solution Referring to Sec. 4–5, we note that an LSSB transmitter just translates the spectrum of the audio input signal up to the suppressed carrier frequency and deletes the upper sideband. From Table 5–5, the Bell 103 modem (answer mode) has a mark frequency of $f_1 = 2,225$ Hz, a space frequency of $f_2 = 2,025$ Hz, and a carrier frequency of $(f_c)_{Bell\ 103} = 2,125$ Hz. The LSSB transmitter translates these frequencies to a mark frequency (binary 1) of

$$(f_c)_{SSB} - f_1 = 7090 \text{ kHz} - 2.225 \text{ kHz} = 7087.775 \text{ kHz}$$

a space frequency (binary 0) of

$$(f_c)_{SSB} - f_2 = 7090 - 2.025 = 7087.975 \text{ kHz}$$

and a carrier frequency of

$$(f_c)_{FSK} = (f_c)_{SSB} - (f_c)_{Bell\ 103} = 7090 - 2.125 = 7087.875 \text{ kHz.}$$

Consequently, the SSB transceiver would produce an FSK digital signal with a carrier frequency of 7087.875 kHz.

For the case of alternating data, the spectrum of this FSK signal is given by Eqs. (5–85) and (5–86), where $f_c = 7087.875$ kHz. The resulting spectral plot would be like that of Fig. 5–26a, where the spectrum is translated from $f_c = 1,170$ Hz to $f_c = 7087.875$ kHz. It is also realized that this spectrum appears on the lower sideband of the SSB carrier frequency $(f_c)_{SSB} = 7090$ kHz. If a DSB-SC transmitter had been used (instead of an LSSB transmitter), the spectrum would be replicated on the upper sideband as well as on the lower sideband, and two redundant FSK signals would be emitted.

For the case of random data, the PSD for the complex envelope is given by Eq. (5–90) and shown in Fig. 5–27 for the modulation index of $h = 0.7$. Using Eq. (5–2b), we find that the PSD for the FSK signal is the translation of the PSD for the complex envelope to the carrier frequency of 7087.875 kHz.

PROBLEMS

- ★ 5-1** An AM broadcast transmitter is tested by feeding the RF output into a $50\text{-}\Omega$ (dummy) load. Tone modulation is applied. The carrier frequency is 850 kHz and the FCC licensed power output is 5,000 W. The sinusoidal tone of 1,000 Hz is set for 90% modulation.
- Evaluate the FCC power in dBk (dB above 1 kW) units.
 - Write an equation for the voltage that appears across the $50\text{-}\Omega$ load, giving numerical values for all constants.
 - Sketch the spectrum of this voltage as it would appear on a calibrated spectrum analyzer.
 - What is the average power that is being dissipated in the dummy load?
 - What is the peak envelope power?
- 5-2** An AM transmitter is modulated with an audio testing signal given by $m(t) = 0.2 \sin \omega_1 t + 0.5 \cos \omega_2 t$, where $f_1 = 500$ Hz, $f_2 = 500\sqrt{2}$ Hz, and $A_c = 100$. Assume that the AM signal is fed into a $50\text{-}\Omega$ load.
- Sketch the AM waveform.
 - What is the modulation percentage?
 - Evaluate and sketch the spectrum of the AM waveform.
- 5-3** For the AM signal given in Prob. 5-2,
- Evaluate the average power of the AM signal.
 - Evaluate the PEP of the AM signal.
- ★ 5-4** Assume that an AM transmitter is modulated with a video testing signal given by $m(t) = -0.2 + 0.6 \sin \omega_1 t$, where $f_1 = 3.57$ MHz. Let $A_c = 100$.
- Sketch the AM waveform.
 - What are the percentages of positive and negative modulation?
 - Evaluate and sketch the spectrum of the AM waveform about f_c .
- 5-5** A 50,000-W AM broadcast transmitter is being evaluated by means of a two-tone test. The transmitter is connected to a $50\text{-}\Omega$ load, and $m(t) = A_1 \cos \omega_1 t + A_1 \cos 2\omega_1 t$, where $f_1 = 500$ Hz. Assume that a perfect AM signal is generated.
- Evaluate the complex envelope for the AM signal in terms of A_1 and ω_1 .
 - Determine the value of A_1 for 90% modulation.
 - Find the values for the peak current and average current into the $50\text{-}\Omega$ load for the 90% modulation case.
- ★ 5-6** An AM transmitter uses a two-quadrant multiplier so that the transmitted signal is described by Eq. (5-7). Assume that the transmitter is modulated by $m(t) = A_m \cos \omega_m t$, where A_m is adjusted so that 120% positive modulation is obtained. Evaluate the spectrum of this AM signal in terms of A_c , f_c , and f_m . Sketch your result.
- 5-7** Repeat Prob. 5-6 using a four-quadrant multiplier.
- 5-8** Assume that Prob. 5-6 describes the operation of an AM transmitter and its modulating waveform. Let $A_c = 500$ V, $f_c = 60$ kHz, and $f_a = 6$ kHz. Using MATLAB, plot the voltage waveform that appears at the output of this transmitter.
- 5-9** Assume that Prob. 5-6 describes the operation of an AM transmitter and its modulating waveform, except that a four-quadrant multiplier is used. Let $A_c = 500$ V, $f_c = 60$ kHz, and $f_a = 6$ kHz. Using MATLAB, plot the voltage waveform that appears at the output of this transmitter.
- ★ 5-10** A DSB-SC signal is modulated by $m(t) = \cos \omega_1 t + 2 \cos 2\omega_1 t$, where $\omega_1 = 2\pi f_1$, $f_1 = 500$ Hz, and $A_c = 1$.
- Write an expression for the DSB-SC signal and sketch a picture of this waveform.

- (b) Evaluate and sketch the spectrum for this DSB-SC signal.
 (c) Find the value of the average (normalized) power.
 (d) Find the value of the PEP (normalized).
- 5-11** Assume that transmitting circuitry restricts the modulated output signal to a certain peak value, say, A_p , because of power-supply voltages that are used and because of the peak voltage and current ratings of the components. If a DSB-SC signal with a peak value of A_p is generated by this circuit, show that the sideband power of this DSB-SC signal is four times the sideband power of a comparable AM signal having the same peak value A_p that could also be generated by this circuit.
- 5-12** A DSB-SC signal can be generated from two AM signals as shown in Fig. P5-12. Using mathematics to describe signals at each point on the figure, prove that the output is a DSB-SC signal.

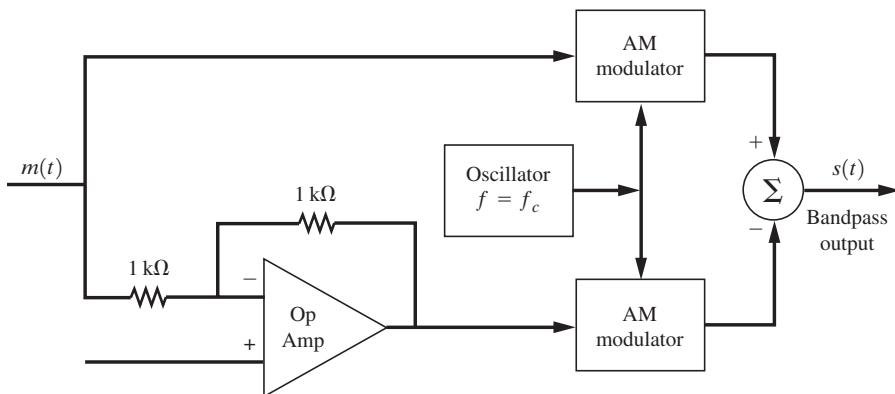


Figure P5-12

- 5-13** Show that the complex envelope $g(t) = m(t) - j\hat{m}(t)$ produces a lower SSB signal, provided that $m(t)$ is a real signal.
5-14 Show that the impulse response of a -90° phase shift network (i.e., a Hilbert transformer) is $1/\pi t$.
Hint:

$$H(f) = \lim_{\alpha \rightarrow 0} \begin{cases} -je^{-\alpha f}, & f > 0 \\ je^{\alpha f}, & f < 0 \end{cases}$$

- ★ 5-15** SSB signals can be generated by the phasing method shown in Fig. 5-5a, by the filter method, of Fig. 5-5b, or by the use of Weaver's method [Weaver, 1956], as shown in Fig. P5-15. For Weaver's method (Fig. P5-15), where B is the bandwidth of $m(t)$,
- (a) Find a mathematical expression that describes the waveform out of each block on the block diagram.
 (b) Show that $s(t)$ is an SSB signal.
- 5-16** An SSB-AM transmitter is modulated with a sinusoid $m(t) = 5 \cos \omega_1 t$, where $\omega_1 = 2\pi f_1$, $f_1 = 500$ Hz, and $A_c = 1$.
- (a) Evaluate $\hat{m}(t)$.
 (b) Find the expression for a lower SSB signal.

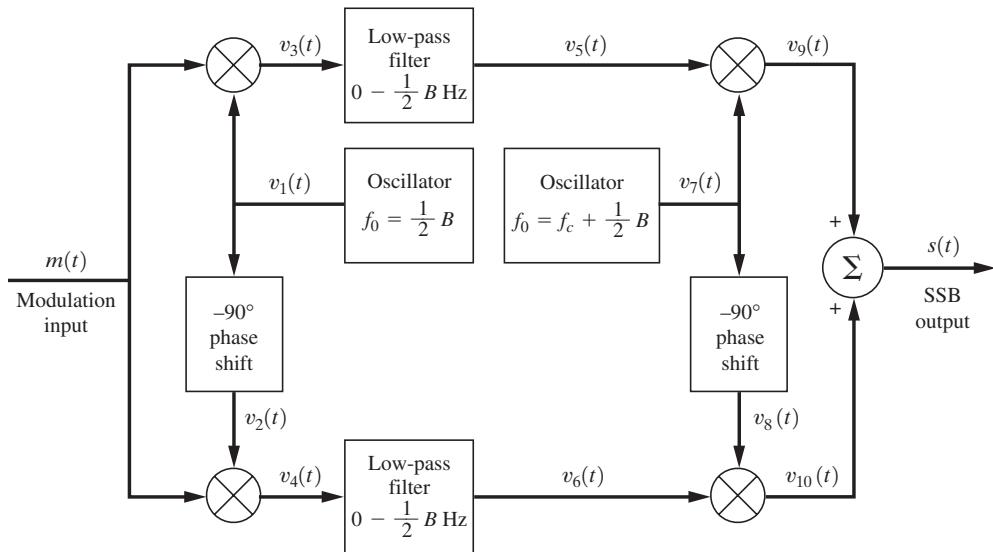


Figure P5–15 Weaver's method for generating SSB.

- (c) Find the RMS value of the SSB signal.
 - (d) Find the peak value of the SSB signal.
 - (e) Find the normalized average power of the SSB signal.
 - (f) Find the normalized PEP of the SSB signal.
- ★ 5–17 An SSB-AM transmitter is modulated by a rectangular pulse such that $m(t) = \Pi(t/T)$ and $A_c = 1$.
- Prove that
- $$\hat{m}(t) = \frac{1}{\pi} \ln \left| \frac{2t + T}{2t - T} \right|$$
- as given in Table A–7.
- Find an expression for the SSB-AM signal $s(t)$, and sketch $s(t)$.
 - Find the peak value of $s(t)$.
- 5–18 For Prob. 5–17,
- Find the expression for the spectrum of a USSB-AM signal.
 - Sketch the magnitude spectrum, $|S(f)|$.
- ★ 5–19 A USSB transmitter is modulated with the pulse

$$m(t) = \frac{\sin \pi at}{\pi at}$$



$$\hat{m}(t) = \frac{\sin^2[(\pi a/2)t]}{(\pi a/2)t}$$

- (b) Plot the corresponding USSB signal waveform for the case of $A_c = 1$, $a = 2$, and $f_c = 20$ Hz.
- 5-20** A USSB-AM signal is modulated by a rectangular pulse train:

$$m(t) = \sum_{n=-\infty}^{\infty} \prod [(t - nT_0)/T]$$

Here, $T_0 = 2T$.

- (a) Find the expression for the spectrum of the SSB-AM signal.
- (b) Sketch the magnitude spectrum, $|S(f)|$.
- 5-21** A phasing-type SSB-AM detector is shown in Fig. P5-21. This circuit is attached to the IF output of a conventional superheterodyne receiver to provide SSB reception.
- (a) Determine whether the detector is sensitive to LSSB or USSB signals. How would the detector be changed to receive SSB signals with the opposite type of sidebands?
- (b) Assume that the signal at point A is a USSB signal with $f_c = 455$ kHz. Find the mathematical expressions for the signals at points B through I.
- (c) Repeat part (b) for the case of an LSSB-AM signal at point A.
- (d) Discuss the IF and LP filter requirements if the SSB signal at point A has a 3-kHz bandwidth.

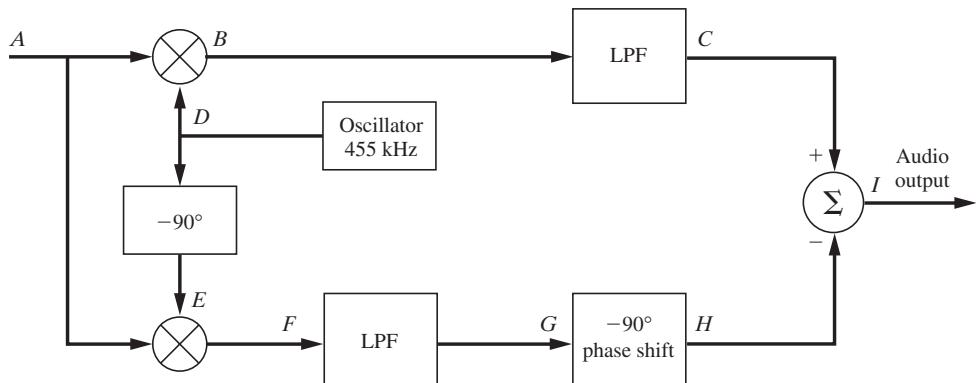


Figure P5-21

- 5-22** Can a Costas loop, shown in Fig. 5-3, be used to demodulate an SSB-AM signal? Use mathematics to demonstrate that your answer is correct.
- 5-23** A modulated signal is described by the equation

$$s(t) = 10 \cos [(2\pi \times 10^8)t + 10 \cos (2\pi \times 10^3 t)]$$

Find each of the following:

- (a) Percentage of AM.
- (b) Normalized power of the modulated signal.
- 5-24** For the modulated signal described in Prob. 5-23, find the
- (a) Maximum phase deviation.
- (b) Maximum frequency deviation.

- 5–25** A transmitter produces a quadrature modulated (QM) signal. The complex envelope is

$$g(t) = A_c[m_1(t) + j m_2(t)]$$

Let the carrier frequency be 50 kHz and $A_c = 100$. The transmitter is tested using two sinusoidally modulated waveforms that are $m_1(t) = 3\cos(\omega_1 t)$ and $m_2(t) = 4\cos(\omega_2 t)$ where $f_1 = 2$ kHz and $f_2 = 5$ kHz. Using MATLAB, plot the output voltage waveform for this transmitter.

- 5–26** Using MATLAB, calculate the actual PEP for the transmitter described in Prob. 5–25 if the resistive load on the transmitter is 50Ω .



- ★ 5–27** A sinusoidal signal $m(t) = \cos 2\pi f_m t$ is the input to an angle-modulated transmitter, where the carrier frequency is $f_c = 1$ Hz and $f_m = f_c/4$.

- (a) Plot $m(t)$ and the corresponding PM signal, where $D_p = \pi$.
 (b) Plot $m(t)$ and the corresponding FM signal, where $D_f = \pi$.

- 5–28** A sinusoidal modulating waveform of amplitude 4 V and frequency 1 kHz is applied to an FM exciter that has a modulator gain of 50 Hz/V.

- (a) What is the peak frequency deviation?
 (b) What is the modulation index?

- 5–29** An FM signal has sinusoidal modulation with a frequency of $f_m = 15$ kHz and modulation index of $\beta = 2.0$.

- (a) Find the transmission bandwidth by using Carson's rule.
 (b) What percentage of the total FM signal power lies within the Carson rule bandwidth?

- ★ 5–30** An FM transmitter has the block diagram shown in Fig. Fig. P5–30. The audio frequency response is flat over the 20-Hz-to-15-kHz audio band. The FM output signal is to have a carrier frequency of 103.7 MHz and a peak deviation of 75 kHz.

- (a) Find the bandwidth and center frequency required for the bandpass filter.
 (b) Calculate the frequency f_0 of the oscillator.
 (c) What is the required peak deviation capability of the FM exciter?

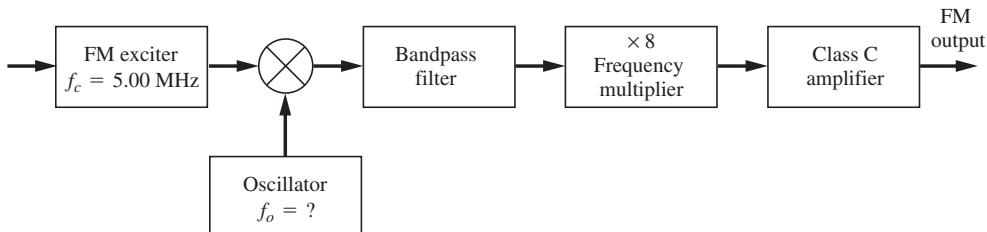


Figure P5–30

- 5–31** Analyze the performance of the FM circuit of Fig. 5–8b. Assume that the voltage appearing across the reverse-biased diodes, which provide the voltage variable capacitance, is $v(t) = 5 + 0.05 m(t)$, where the modulating signal is a test tone, $m(t) = \cos \omega_1 t$, $\omega_1 = 2\pi f_1$, and $f_1 = 1$ kHz. The capacitance of each of the biased diodes is $C_d = 100\sqrt{1 + 2v(t)}$ pF. Assume that $C_0 = 180$ pF and that L is chosen to resonate at 5 MHz.

- (a) Find the value of L .
 (b) Show that the resulting oscillator signal is an FM signal. For convenience, assume that the peak level of the oscillator signal is 10 V. Find the parameter D_f .

- ★ 5-32** A modulated RF waveform is given by $500 \cos [\omega_c t + 20 \cos \omega_1 t]$, where $\omega_1 = 2\pi f_1$, $f_1 = 1$ kHz, and $f_c = 100$ MHz.
- If the phase deviation constant is 100 rad/V, find the mathematical expression for the corresponding phase modulation voltage $m(t)$. What is its peak value and its frequency?
 - If the frequency deviation constant is 1×10^6 rad/V-s, find the mathematical expression for the corresponding FM voltage $m(t)$. What is its peak value and its frequency?
 - If the RF waveform appears across a $50\text{-}\Omega$ load, determine the average power and the PEP.
- 5-33** Consider the FM signal $s(t) = 10 \cos [\omega_c t + 100 \int_{-\infty}^t m(\sigma) d\sigma]$, where $m(t)$ is a polar square-wave signal with a duty cycle of 50%, a period of 1 s, and a peak value of 5 V.
- Sketch the instantaneous frequency waveform and the waveform of the corresponding FM signal. (See Fig. 5-9.)
 - Plot the phase deviation $\theta(t)$ as a function of time.
 - Evaluate the peak frequency deviation.
- 5-34** A carrier $s(t) = 100 \cos (2\pi \times 10^9 t)$ of an FM transmitter is modulated with a tone signal. For this transmitter, a 1-V (RMS) tone produces a deviation of 30 kHz. Determine the amplitude and frequency of all FM signal components (spectral lines) that are greater than 1% of the unmodulated carrier amplitude if the modulating signal is $m(t) = 2.5 \cos (3\pi \times 10^4 t)$.
- 5-35** Rework Prob. 5-34 if the modulating signal is $m(t) = 1 \cos (6\pi \times 10^4 t)$.
- 5-36** Referring to Eq. (5-58), show that
- $$J_{-n}(\beta) = (-1)^n J_n(\beta)$$
-  **★ 5-37** Consider an FM exciter with the output $s(t) = 100 \cos [2\pi 1,000t + \theta(t)]$. The modulation is $m(t) = 5 \cos (2\pi 8t)$, and the modulation gain of the exciter is 8 Hz/V. The FM output signal is passed through an ideal (brick-wall) bandpass filter that has a center frequency of 1,000 Hz, a bandwidth of 56 Hz, and a gain of unity. Determine the normalized average power
- At the bandpass filter input.
 - At the bandpass filter output.
- ★ 5-38** A 1-kHz sinusoidal signal phase modulates a carrier at 146.52 MHz with a peak phase deviation of 45° . Evaluate the exact magnitude spectra of the PM signal if $A_c = 1$. Sketch your result. Using Carson's rule, evaluate the approximate bandwidth of the PM signal, and see if it is a reasonable number when compared with your spectral plot.
- 5-39** A 1-kHz sinusoidal signal frequency modulates a carrier at 146.52 MHz with a peak deviation of 5 kHz. Evaluate the exact magnitude spectra of the FM signal if $A_c = 1$. Sketch your result. Using Carson's rule, evaluate the approximate bandwidth of the FM signal, and see if it is a reasonable number when compared with your spectral plot.
- 5-40** The calibration of a frequency deviation monitor is to be verified by using a Bessel function test. An FM test signal with a calculated frequency deviation is generated by frequency modulating a sine wave onto a carrier. Assume that the sine wave has a frequency of 2 kHz and that the amplitude of the sine wave is slowly increased from zero until the discrete carrier term (at f_c) of the FM signal vanishes, as observed on a spectrum analyzer. What is the peak frequency deviation of the FM test signal when the discrete carrier term is zero? Suppose that the amplitude of the sine wave is increased further until this discrete carrier term appears, reaches a maximum, and then disappears again. What is the peak frequency deviation of the FM test signal now?



- 5-41** A frequency modulator has a modulator gain of 10 Hz/V, and the modulating waveform is

$$m(t) = \begin{cases} 0, & t < 0 \\ 5, & 0 < t < 1 \\ 15, & 1 < t < 3 \\ 7, & 3 < t < 4 \\ 0, & 4 < t \end{cases}$$

- (a) Plot the frequency deviation in hertz over the time interval $0 < t < 5$.
 (b) Plot the phase deviation in radians over the time interval $0 < t < 5$.

- ★ 5-42** A square-wave (digital) test signal of 50% duty cycle phase modulates a transmitter where $s(t) = 10 \cos [\omega_c t + \theta(t)]$. The carrier frequency is 60 MHz and the peak phase deviation is 45° . Assume that the test signal is of the unipolar NRZ type with a period of 1 ms and that it is symmetrical about $t = 0$. Find the exact spectrum of $s(t)$.

- 5-43** Two sinusoids, $m(t) = A_1 \cos \omega_1 t + A_2 \cos \omega_2 t$, phase modulate a transmitter. Derive a formula that gives the exact spectrum for the resulting PM signal in terms of the signal parameters A_c , ω_c , D_p , A_1 , A_2 , ω_1 , and ω_2 . [Hint: Use $e^{ja(t)} = (e^{ja_1(t)})(e^{ja_2(t)})$, where $a(t) = a_1(t) + a_2(t)$.]



- 5-44** Plot the magnitude spectrum centered on $f = f_c$ for an FM signal where the modulating signal is

$$m(t) = A_1 \cos 2\pi f_1 t + A_2 \cos 2\pi f_2 t$$

Assume that $f_1 = 10$ Hz and $f_2 = 17$ Hz, and that A_1 and A_2 are adjusted so that each tone contributes a peak deviation of 20 Hz.

- 5-45** For small values of β , $J_n(\beta)$ can be approximated by $J_n(\beta) = \beta^n / (2^n n!)$. Show that, for the case of FM with sinusoidal modulation, $\beta = 0.2$ is sufficiently small to give NBFM.

- ★ 5-46** A polar square wave with a 50% duty cycle frequency modulates an NBFM transmitter such that the peak phase deviation is 10° . Assume that the square wave has a peak value of 5 V, a period of 10 ms, and a zero-crossing at $t = 0$ with a positive-going slope.
 (a) Determine the peak frequency deviation of this NBFM signal.
 (b) Evaluate and sketch the spectrum of the signal, using the narrowband analysis technique.
 Assume that the carrier frequency is 30 MHz.

- 5-47** Design a wideband FM transmitter that uses the indirect method for generating a WBFM signal. Assume that the carrier frequency of the WBFM signal is 96.9 MHz and that the transmitter is capable of producing a high-quality FM signal with a peak deviation of 75 kHz when modulated by a 1-V (rms) sinusoid of frequency 20 Hz. Show a complete block diagram of your design, indicating the frequencies and peak deviations of the signals at various points.

- 5-48** An FM signal, $[w_c t + D_f \int_{-\infty}^t m(\sigma) d\sigma]$ is modulated by the waveform shown in Fig. P5-48. Let $f_c = 420$ MHz.
 (a) Determine the value of D_f so that the peak-to-peak frequency deviation is 25 kHz.
 (b) Evaluate and sketch the approximate PSD.
 (c) Determine the bandwidth of this FM signal such that spectral components are down at least 40 dB from the unmodulated carrier level for frequencies outside that bandwidth.

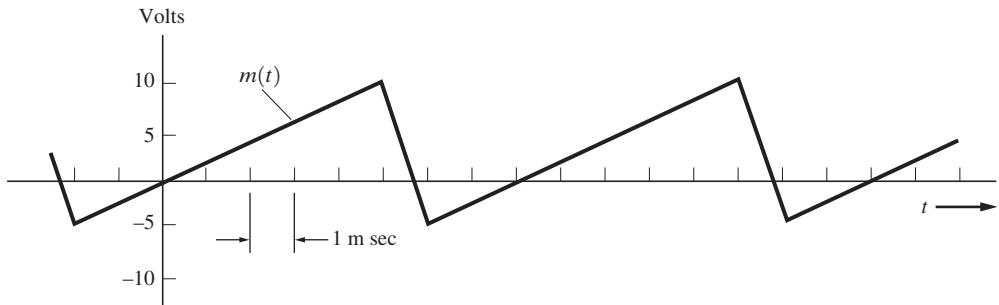


Figure P5-48

- ★ 5-49** A periodic multilevel digital test signal as shown in Fig. P5-49 modulates a WBFM transmitter. Evaluate and sketch the approximate power spectrum of this WBFM signal if $A_c = 5$, $f_c = 2$ GHz, and $D_f = 10^5$.

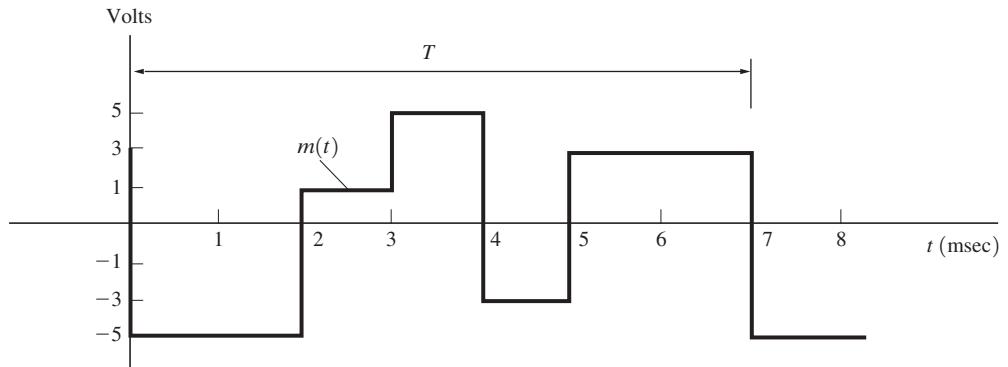


Figure P5-49

- 5-50** Refer to Fig. 5-16b, which displays the circuit diagram for a commonly used preemphasis filter network.
- Show that $f_1 = 1/(2\pi R_1 C)$.
 - Show that $f_2 = (R_1 + R_2)/(2\pi R_1 R_2 C) \approx 1/(2\pi R_2 C)$.
 - Evaluate K in terms of R_1 , R_2 , and C .
- 5-51** The composite baseband signal for FM stereo transmission is given by

$$m_b(t) = [m_L(t) + m_R(t)] + [m_L(t) - m_R(t)] \cos(\omega_{sc}t) + K \cos(\frac{1}{2}\omega_{sc}t)$$

A stereo FM receiver that uses a switching type of demultiplexer to recover $m_L(t)$ and $m_R(t)$ is shown in Fig. P5-51.

- Determine the switching waveforms at points C and D that activate the analog switches. Be sure to specify the correct phasing for each one. Sketch these waveforms.
- Draw a more detailed block diagram showing the blocks inside the PLL.
- Write equations for the waveforms at points A through F , and explain how this circuit works by sketching typical waveforms at each of these points.

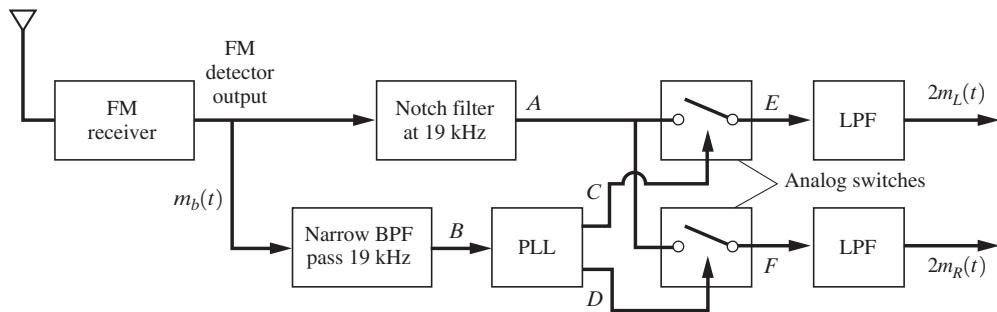


Figure P5-51

- ★ 5-52 In a communication system, two baseband signals (they may be analog or digital) are transmitted simultaneously by generating the RF signal

$$s(t) = m_1(t) \cos \omega_c t + m_2(t) \sin \omega_c t$$

The carrier frequency is 7.250 MHz. The bandwidth of $m_1(t)$ is 5 kHz and the bandwidth of $m_2(t)$ is 10 kHz.

- (a) Evaluate the bandwidth of $s(t)$.
 - (b) Derive an equation for the spectrum of $s(t)$ in terms of $M_1(f)$ and $M_2(f)$.
 - (c) $m_1(t)$ and $m_2(t)$ can be recovered (i.e., detected) from $s(t)$ by using a superheterodyne receiver with two switching detectors. Draw a block diagram for the receiver and sketch the digital waveforms that are required to operate the samplers. Describe how they can be obtained. Show that the Nyquist sampling criterion is satisfied. (Hint: See Fig. P5-51.)
- ★ 5-53 A digital baseband signal consisting of rectangular binary pulses occurring at a rate of 24 kbits/s is to be transmitted over a bandpass channel.
- (a) Evaluate the magnitude spectrum for OOK signaling that is keyed by a baseband digital test pattern consisting of alternating 1's and 0's.
 - (b) Sketch the magnitude spectrum and indicate the value of the first null-to-null bandwidth. Assume a carrier frequency of 150 MHz.
- 5-54 Referring to Prob. 5-53 for the case of a random data pattern and OOK signaling, find the PSD and plot the result. Compare this result with that for the magnitude spectrum obtained in Prob. 5-53.
- 5-55 Repeat Prob. 5-53 for the case of BPSK signaling.
- 5-56 Referring to Prob. 5-53 for the case of a random data pattern with BPSK signaling, find the PSD and plot the result. Compare this result with that for the magnitude spectrum obtained in Prob. 5-55.
- ★ 5-57 A carrier is angle modulated with a polar baseband data signal to produce a BPSK signal $s(t) = 10 \cos [\omega_c t + D_p m(t)]$, where $m(t) = \pm 1$ corresponds to the binary data 10010110. $T_b = 0.0025$ sec and $\omega_c = 1,000\pi$. Using MATLAB, plot the BPSK signal waveform and its corresponding FFT spectrum for the following digital modulation indices:
- (a) $h = 0.2$.
 - (b) $h = 0.5$.
 - (c) $h = 1.0$.
- 5-58 Evaluate the magnitude spectrum for an FSK signal with alternating 1 and 0 data. Assume that the mark frequency is 50 kHz, the space frequency is 55 kHz, and the bit rate is 2,400 bits/s. Find the first null-to-null bandwidth.



- 5-59** Assume that 4,800-bit/s random data are sent over a bandpass channel by BPSK signaling. Find the transmission bandwidth B_T such that the spectral envelope is down at least 35 dB outside this band.
- 5-60** As indicated in Fig. 5-22a, a BPSK signal can be demodulated by using a coherent detector wherein the carrier reference is provided by a Costas loop for the case of $h = 1.0$. Alternatively, the carrier reference can be provided by a squaring loop that uses a $\times 2$ frequency multiplier. A block diagram for a squaring loop is shown in Fig. P5-60.
- Using the squaring loop, draw an overall block diagram for a BPSK receiver.
 - By using mathematics to represent the waveforms, show how the squaring loop recovers the carrier reference.
 - Demonstrate that the squaring loop does or does not have a 180° phase ambiguity problem.

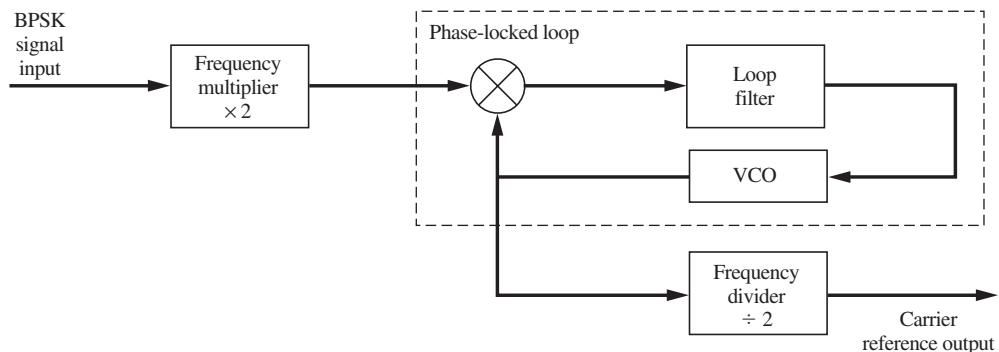


Figure P5-60

- 5-61** A binary data signal is differentially encoded and modulates a PM transmitter to produce a differentially encoded phase-shift-keyed signal (DPSK). The peak-to-peak phase deviation is 180° and f_c is harmonically related to the bit rate R .
- Draw a block diagram for the transmitter, including the differential encoder.
 - Show typical waveforms at various points on the block diagram if the input data sequence is 01011000101.
 - Assume that the receiver consists of a superheterodyne circuit. The detector that is used is shown in Fig. P5-61, where $T = 1/R$. If the DPSK IF signal $v_1(t)$ has a peak value of A_c volts, determine the appropriate value for the threshold voltage setting V_T .

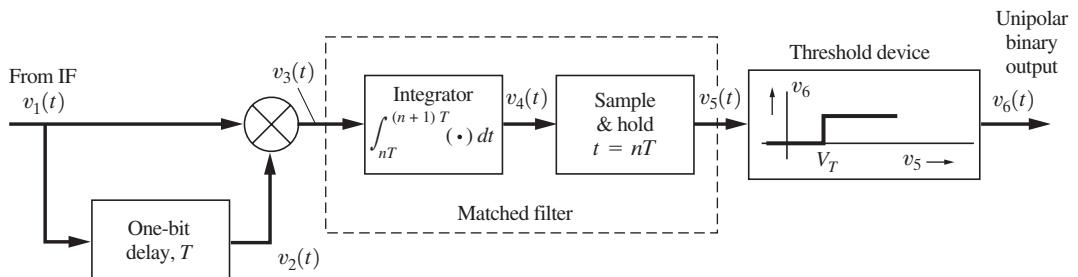


Figure P5-61

- (d) Sketch the waveforms that appear at various points of this detector circuit for the data sequence in part (b).
- ★ 5-62** A binary baseband signal is passed through a raised cosine-rolloff filter with a 50% rolloff factor and is then modulated onto a carrier. The data rate is 64 kbits/s. Evaluate
 (a) The absolute bandwidth of a resulting OOK signal.
 (b) The approximate bandwidth of a resulting FSK signal when the mark frequency is 150 kHz and the space frequency is 155 kHz.
- (Note: It is interesting to compare these bandwidths with those obtained in Probs. 5-53 and 5-58.)
- 5-63** Evaluate the exact magnitude spectrum of the FSK signal that is emitted by a Bell-type 103 modem operating in the answer mode at 300 bits/s. Assume that the data are alternating 1's and 0's.
- 5-64** Starting with Eq. (5-84), work out all of the mathematical steps to derive the result given in Eq. (5-85).
- 5-65** When FSK signals are detected using coherent detection as shown in Fig. 5-28b, it is assumed that $\cos \omega_1 t$ and $\cos \omega_2 t$ are orthogonal functions. This is approximately true if $f_1 - f_2 = 2 \Delta F$ is sufficiently large. Find the *exact* condition required for the mark and space FSK signals to be orthogonal. (Hint: The answer relates f_1, f_2 , and R .)
- 5-66** Show that the approximate transmission bandwidth for FSK is given by $B_T = 2R(1 + h/2)$, where h is the digital modulation index and R is the bit rate.
- ★ 5-67** Assume that a QPSK signal is used to send data at a rate of 30 Mbits/s over a satellite transponder. The transponder has a bandwidth of 24 MHz.
 (a) If the satellite signal is equalized to have an equivalent raised cosine filter characteristic, what is the rolloff factor r required?
 (b) Could a rolloff factor r be found so that a 50-Mbit/s data rate could be supported?
- ★ 5-68** A QPSK signal is generated with nonrectangular data pulses on the I and Q channels. The data pulses have spectra corresponding to the transfer function of a square-root raised cosine-rolloff filter.
 (a) Find the formula for the PSD of the QPSK signal.
 (b) Plot the PSD for the complex envelope of the QPSK signal, where the rolloff factor is $r = 0.35$ and the data rate is normalized to $R = 1$ bit/s. Plot your result in dB versus frequency normalized to the bit rate, similar to that shown in Fig. 5-33.
- 5-69** Show that two BPSK systems can operate simultaneously over the same channel by using quadrature (sine and cosine) carriers. Give a block diagram for the transmitters and receivers. What is the overall aggregate data rate R for this quadrature carrier multiplex system as a function of the channel null bandwidth B_T ? How does the aggregate data rate of the system compare to the data rate for a system that time-division multiplexes the two sources and then transmits the TDM data via a QPSK carrier?
- 5-70** An 18,000-ft twisted-pair telephone line has a usable bandwidth of 750 kHz. Find the maximum data rate that can be supported on this line to produce a null-to-null bandwidth of 750 kHz for the case of QPSK signaling (rectangular pulses) with a single carrier.
- 5-71** Rework Prob. 5-70 for the case of OFDM signaling with QPSK carriers.
- 5-72** Assume that a telephone line channel is equalized to allow bandpass data transmission over a frequency range of 400 to 3,100 Hz so that the available channel bandwidth is 2,700 Hz and the midchannel frequency is 1,750 Hz. Design a 16-symbol QAM signaling scheme that will allow a data rate of 9,600 bits/s to be transferred over the channel. In your design, choose an appropriate rolloff factor r and indicate the absolute and 6-dB QAM signal bandwidth. Discuss why you selected the particular value of r that you used.



- 5-73** Assume that $R = 9,600$ bits/s. For rectangular data pulses, calculate the *second* null-to-null bandwidth of BPSK, QPSK, MSK, 64PSK, and 64QAM. Discuss the advantages and disadvantages of using each of these signaling methods.
- 5-74** Referring to Fig. 5-31b, sketch the waveforms that appear at the output of each block, assuming that the input is a TTL-level signal with data 110100101 and $\ell = 4$. Explain how this QAM transmitter works.
- 5-75** Design a receiver (i.e., determine the block diagram) that will detect the data on a QAM waveform having an $M = 16$ -point signal constellation as shown in Fig. 5-32. Explain how your receiver works. (*Hint:* Study Fig. 5-31b.)
-  **5-76** Using MATLAB, plot the QPSK and OQPSK in-phase and quadrature modulation waveforms for the data stream

$$\{-1, -1, -1, +1, +1, +1, -1, -1, -1, +1, -1, -1, +1, -1, -1\}$$

Use a rectangular pulse shape. For convenience, let $T_b = 1$.

- ★ 5-77** For $\pi/4$ QPSK signaling, calculate the carrier phase shifts when the input data stream is 10110100101010, where the leftmost bits are first applied to the transmitter.
- 5-78** For $\pi/4$ QPSK signaling, find the absolute bandwidth of the signal if $r = 0.5$ raised cosine-rolloff filtering is used and the data rate is 1.5 Mbit/s.
- 5-79** (a) Fig. 5-34 shows the $x(t)$ and $y(t)$ waveforms for Type II MSK. Redraw these waveforms for the case of Type I MSK.
 (b) Show that Eq. (5-114b) is the Fourier transform of Eq. (5-114a).



- 5-80** Using MATLAB, plot the MSK Type I modulation waveforms $x(t)$ and $y(t)$ and the MSK signal $s(t)$. Assume that the input data stream is

$$\{+1, -1, -1, +1, -1, -1, +1, -1, -1, +1, +1, +1, +1, +1, -1\}$$

Assume also that $T_b = 1$ and that f_c has a value such that a good plot of $s(t)$ is obtained in a reasonable amount of computer time.



- 5-81** Repeat Prob. 5-80, but use the data stream

$$\{-1, -1, -1, +1, +1, +1, -1, -1, -1, +1, -1, -1, +1, -1, -1\}$$

This data stream is the differentially encoded version of the data stream in Prob. 5-80. The generation of FFSK is equivalent to Type I MSK with differential encoding of the data input. FFSK has a one-to-one relationship between the input data and the mark and space frequencies.



- ★ 5-82** Using MATLAB, plot the MSK Type II modulation waveforms $x(t)$ and $y(t)$ and the MSK signal $s(t)$. Assume that the input data stream is

$$\{-1, -1, -1, +1, +1, +1, -1, -1, -1, +1, -1, -1, +1, -1, -1\}$$

Assume also that $T_b = 1$ and f_c has a value such that a good plot of $s(t)$ is obtained in a reasonable amount of computer time.

- 5-83** Show that MSK can be generated by the serial method of Fig. 5-36c. That is, show that the PSD for the signal at the output of the MSK bandpass filter is the MSK spectrum as described by Eqs. (5-115) and (5-2b).
- ★ 5-84** GMSK is generated by filtering rectangular-shaped data pulses with a Gaussian filter and applying the filtered signal to an MSK transmitter.

-  (a) Show that the Gaussian filtered data pulse is

$$p(t) = \left(\sqrt{\frac{2\pi}{\ln 2}} \right) (BT_b) \int_{\frac{t}{TB_b} - \frac{1}{2}}^{\frac{t}{TB_b} + \frac{1}{2}} e^{-\left[\frac{2\pi^2}{\ln 2} (BT_b)^2 x^2 \right]} dx$$

[Hint: Evaluate $p(t) = h(t)^* \Pi(t/T_b)$, where $h(t) = \mathcal{F}^{-1}[H(f)]$ and $H(f)$ is described by Eq. (5–116).]

-  (b) Plot $p(t)$ for $BT_b = 0.3$ and T_b normalized to $T_b = 1$.

5–85 Recompute the spectral efficiencies for all of the signals shown in Table 5–7 by using a 40-dB bandwidth criterion.

5–86 Evaluate and plot the PSD for OFDM signaling with $N = 64$. Find the bandwidth of this OFDM signal if the input data rate is 10 Mbits/s and each carrier uses 16PSK modulation.

5–87 Prove that Eq. (5–123)—the autocorrelation for an m -sequence PN code—is correct. Hint: Use the definition of the autocorrelation function, $R_c(\tau) = \langle c(t) c(t + \tau) \rangle$ and Eq. (5–122), where

$$c(t) = \sum_{-\infty}^{\infty} c_n p(t - nT_c)$$

and

$$p(t) = \begin{cases} 1, & 0 < t < T_c \\ 0, & \text{elsewhere} \end{cases}$$

5–88 Find an expression for the PSD of an m -sequence PN code when the chip rate is 10 MHz and there are eight stages in the shift register. Sketch your result.

5–89 Referring to Fig. 5–40a, show that the complex Fourier series coefficients for the autocorrelation of an m -sequence PN waveform are given by Eq. (5–128).

★ 5–90 Assume that the modulator and demodulator for the FH-SS system of Fig. 5–42 are of the FSK type.

- (a) Find a mathematical expression for the FSK-FH-SS signal $s(t)$ at the transmitter output.

- (b) Using your result for $s(t)$ from part (a) as the receiver input in Fig. 5–42b [i.e., $r(t) = s(t)$], show that the output of the receiver bandpass filter is an FSK signal.

RANDOM PROCESSES AND SPECTRAL ANALYSIS

CHAPTER OBJECTIVES

- Random processes
- Power spectral density
- Characteristics of linear systems
- Gaussian random processes
- Matched filters

The mathematics used to describe random signals and noise will be examined in this chapter. Recall from Chapter 1 that random, or stochastic, signals (in contrast to deterministic signals) are used to convey information. Noise is also described in terms of statistics. Thus, knowledge of random signals and noise is fundamental to an understanding of communication systems.

This chapter is written with the assumption that the reader has a basic understanding of probability, random variables, and ensemble averages, all of which are developed in Appendix B. If the reader is not familiar with these ideas, Appendix B should be studied now just like a regular chapter. For the reader who has had courses in this area, Appendix B can be used as a quick review.

Random processes are extensions of the concepts associated with random variables when the time parameter is brought into the problem. As we will see, this enables frequency response to be incorporated into the statistical description.

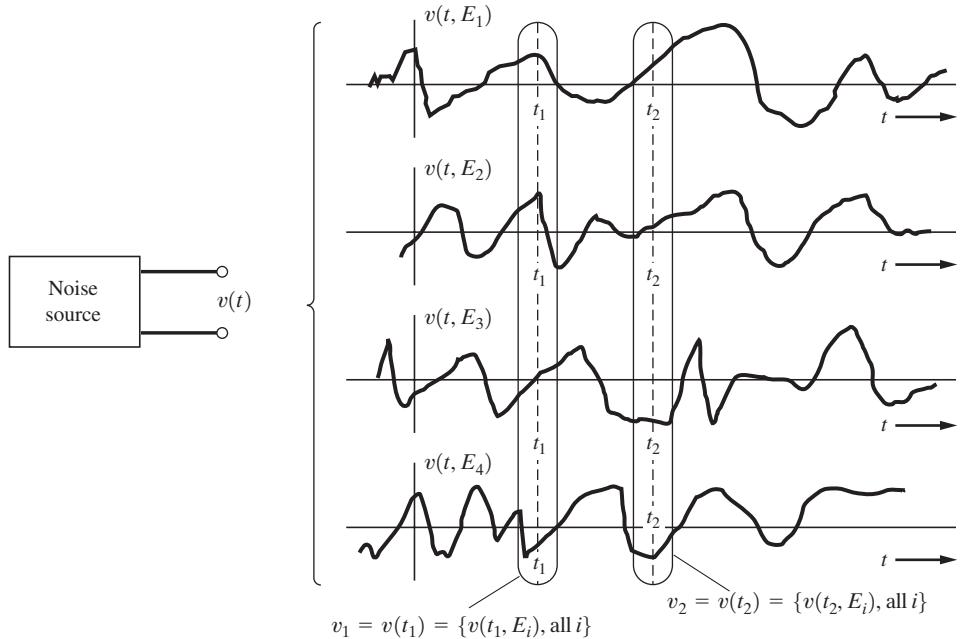


Figure 6-1 Random-noise source and some sample functions of the random-noise process.

6-1 SOME BASIC DEFINITIONS

Random Processes

DEFINITION. A *real random process* (or *stochastic process*) is an indexed set of real functions of some parameter (usually time) that has certain statistical properties.

Consider voltage waveforms that might be emitted from a noise source. (See Fig. 6-1.) One possible waveform is $v(t, E_1)$. Another is $v(t, E_2)$. In general, $v(t, E_i)$ denotes the waveform that is obtained when the event E_i of the sample space occurs. $v(t, E_i)$ is said to be a *sample function* of the sample space. The set of all possible sample functions $\{v(t, E_i)\}$ is called the *ensemble* and defines the *random process* $v(t)$ that describes the noise source. That is, the events $\{E_i\}$ are mapped into a set of time functions $\{v(t, E_i)\}$. This collection of functions is the random process $v(t)$. When we observe the voltage waveform generated by the noise source, we see one of the sample functions.

Sample functions can be obtained by observing simultaneously the outputs of many identical noise sources. To obtain all of the sample functions in general, an infinite number of noise sources would be required.

The definition of a random process may be compared with that of a random variable. A random variable maps events into *constants*, whereas a random process maps events into *functions* of the parameter t .

THEOREM. A random process may be described by an indexed set of random variables.

Referring to Fig. 6–1, define a set of random variables $v_1 = v(t_1)$, $v_2 = v(t_2)$, ..., where $v(t)$ is the random process. Here, the random variable $v_j = v(t_j)$ takes on the values described by the set of constants $\{v(t_j), E_i\}$, for all i .

For example, suppose that the noise source has a Gaussian distribution. Then any of the random variables will be described by

$$f_{v_j}(v_j) = \frac{1}{\sqrt{2\pi}\sigma_j} e^{-(v_j - m_j)^2/(2\sigma_j^2)} \quad (6-1)$$

where $v_j \triangleq v(t_j)$. We realize that, in general, the probability density function (PDF) depends implicitly on time, since m_j and σ_j respectively correspond to the mean value and standard deviation measured at the time $t = t_j$. The $N = 2$ joint distribution for the Gaussian source for $t = t_1$ and $t = t_2$ is the bivariate Gaussian PDF $f_v(v_1, v_2)$, as given by Eq. (B–97), where $v_1 = v(t_1)$ and $v_2 = v(t_2)$.

To describe a general random process $x(t)$ completely, an N -dimensional PDF, $f_x(\mathbf{x})$, is required, where $\mathbf{x} = (x_1, x_2, \dots, x_j, \dots, x_N)$, $x_j \triangleq x(t_j)$, and $N \rightarrow \infty$. Furthermore, the N -dimensional PDF is an implicit function of N time constants t_1, t_2, \dots, t_N , since

$$f_x(\mathbf{x}) = f_x(x(t_1), x(t_2), \dots, x(t_N)) \quad (6-2)$$

Random processes may be classified as continuous or discrete. A *continuous random process* consists of a random process with associated continuously distributed random variables $v_j = v(t_j)$. The Gaussian random process (described previously) is an example of a continuous random process. Noise in linear communication circuits is usually of the continuous type. (In many cases, noise in nonlinear circuits is also of the continuous type.) A *discrete random process* consists of random variables with discrete distributions. For example, the output of an ideal (hard) limiter is a binary (discrete with two levels) random process. Some sample functions of a binary random process are illustrated in Fig. 6–2.

Example 6–1 GAUSSIAN PDF

Plot the one-dimensional PDF for a Gaussian random variable where the mean is -1 and the standard deviation is 2 . See Example6_01.m for the solution.

Stationarity and Ergodicity

DEFINITION. A random process $x(t)$ is said to be *stationary to the order N* if, for any t_1, t_2, \dots, t_N ,

$$f_x(x(t_1), x(t_2), \dots, x(t_N)) = f_x(x(t_1 + t_0), x(t_2 + t_0), \dots, x(t_N + t_0)) \quad (6-3)$$

where t_0 is any arbitrary real constant. Furthermore, the process is said to be *strictly stationary* if it is stationary to the order $N \rightarrow \infty$.

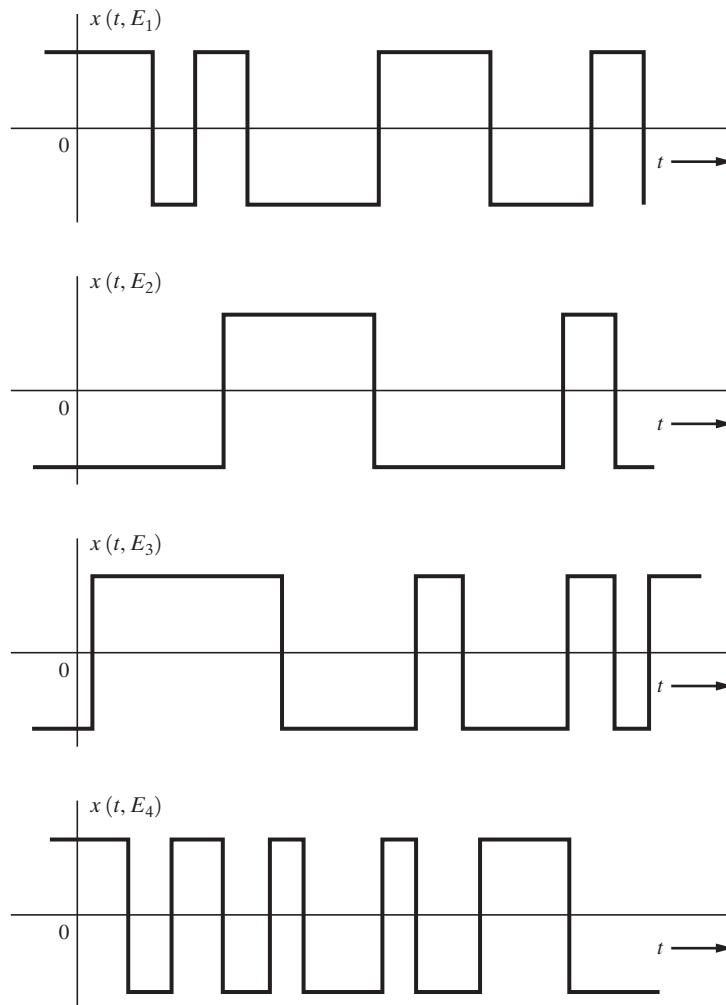


Figure 6-2 Sample functions of a binary random process.

This definition implies that if a stationary process of order N is translated in time, then the N th-order statistics do not change. Furthermore, the N -dimensional PDF depends on $N-1$ time differences $t_2 - t_1, t_3 - t_1, \dots, t_N - t_1$ since t_0 could be chosen to be $-t_1$.

Example 6-2 FIRST-ORDER STATIONARITY

Examine a random process $x(t)$ to determine whether it is first-order stationary. From Eq. (6-3), the requirement for first-order stationarity is that the first-order PDF not be a function of time. Let the random process be

$$x(t) = A \sin(\omega_0 t + \theta_0) \quad (6-4)$$

CASE 1: A STATIONARY RESULT. First, assume that A and ω_0 are deterministic constants and θ_0 is a random variable. t is the time parameter. In addition, assume that θ_0 is uniformly distributed over $-\pi$ to π . Then $\psi \triangleq \theta_0 + \omega_0 t$ is a random variable uniformly distributed over the interval $w_0 t - \pi < \psi < w_0 t + \pi$. The first-order PDF for $x(t)$ can be obtained by the transformation technique developed in Sec. B-8 of Appendix B. This is essentially the same problem as the one worked out in Example B-9. From Eq. (B-71), the first-order PDF for $x(t)$ is

$$f(x) = \begin{cases} \frac{1}{\pi \sqrt{A^2 - x^2}}, & |x| \leq A \\ 0, & x \text{ elsewhere} \end{cases} \quad (6-5a)$$

Because this PDF is not a function of t , $x(t)$ is a first-order stationary process for the assumptions of Case 1, where θ_0 is a random variable. This result would be applicable to problems in which θ_0 is the random start-up phase of an unsynchronized oscillator.

CASE 2: A NONSTATIONARY RESULT. Second, assume that A , ω_0 , and θ_0 are deterministic constants. Then, at any time, the value of $x(t)$ is known with a probability of unity. Thus, the first-order PDF of $x(t)$ is

$$f(x) = \delta(x - A \sin(\omega_0 t + \theta_0)) \quad (6-5b)$$

This PDF is a function of t ; consequently, $x(t)$ is not first-order stationary for the assumption of Case 2, where θ_0 is a deterministic constant. This result will be applicable to problems in which the oscillator is synchronized to some external source so that the oscillator start-up phase will have the known value θ_0 .

DEFINITION. A random process is said to be *ergodic* if all time averages of any sample function are equal to the corresponding ensemble averages (expectations).

Two important averages in electrical engineering are DC and RMS values. These values are defined in terms of time averages, but if the process is ergodic, they may be evaluated by the use of ensemble averages. The DC value of $x(t)$ is $x_{dc} \triangleq \langle x(t) \rangle$. When $x(t)$ is ergodic, the time average is equal to the ensemble average, so we obtain

$$x_{dc} \triangleq \langle x(t) \rangle \equiv \overline{[x(t)]} = m_x \quad (6-6a)$$

where the time average is

$$\langle [x(t)] \rangle = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} [x(t)] dt \quad (6-6b)$$

the ensemble average is

$$\overline{[x(t)]} = \int_{-\infty}^{\infty} [x] f_x(x) dx = m_x \quad (6-6c)$$

and m_x denotes the mean value. Similarly, the RMS value is obtained as

$$X_{\text{rms}} \triangleq \sqrt{\langle x^2(t) \rangle} \equiv \sqrt{\bar{x}^2} = \sqrt{\sigma_x^2 + m_x^2} \quad (6-7)$$

where σ_x^2 is the variance of $x(t)$.

In summary, if a process is ergodic, all time and ensemble averages are interchangeable. Then the time average cannot be a function of time, since the time parameter has been averaged out. Furthermore, the ergodic process must be stationary, because otherwise the ensemble averages (such as moments) would be a function of time. However, not all stationary processes are ergodic.

Example 6–3 ERGODIC RANDOM PROCESS

Let a random process be given by

$$x(t) = A \cos(\omega_0 t + \theta) \quad (6-8)$$

where A and ω_0 are constants and θ is a random variable that is uniformly distributed over $(0, 2\pi)$.

First, we evaluate some ensemble averages. The mean and the second moment are

$$\bar{x} = \int_{-\infty}^{\infty} [x(\theta)] f_{\theta}(\theta) d\theta = \int_0^{2\pi} [A \cos(\omega_0 t + \theta)] \frac{1}{2\pi} d\theta = 0 \quad (6-9)$$

and

$$\overline{x^2(t)} = \int_0^{2\pi} [A \cos(\omega_0 t + \theta)]^2 \frac{1}{2\pi} d\theta = \frac{A^2}{2} \quad (6-10)$$

In this example, the time parameter t disappeared when the ensemble averages were evaluated, which would not be the case unless $x(t)$ was stationary.

Second, we evaluate the corresponding time averages by using a typical sample function of the random process. One sample function is $x(t, E_1) = A \cos \omega_0 t$, which occurs when $\theta = 0$, corresponding to one of the events (outcomes). The time average for any of the sample functions can be evaluated by letting θ be the appropriate value between 0 and 2π . The time averages for the first and second moments are

$$\langle x(t) \rangle = \frac{1}{T_0} \int_0^{T_0} A \cos(\omega_0 t + \theta) dt = 0 \quad (6-11)$$

and

$$\langle x^2(t) \rangle = \frac{1}{T_0} \int_0^{T_0} [A \cos(\omega_0 t + \theta)]^2 dt = \frac{A^2}{2} \quad (6-12)$$

where $T_0 = 1/f_0$ and the time-averaging operator for a periodic function, Eq. (2–4), has been used. In this example, θ disappears when the time average is evaluated. This is a consequence of $x(t)$ being an ergodic process. Conversely, for a nonergodic example, the time average would be a random variable.

Comparing Eq. (6–9) with Eq. (6–11) and Eq. (6–10) with Eq. (6–12), we see that the time average is equal to the ensemble average for the first and second moments. Consequently, we suspect that this process might be ergodic. However, we have not proven that the process is ergodic, because we have not evaluated all the possible time and ensemble averages or all the moments. However, it seems that the other time and ensemble averages would be equal, so we will *assume* that the process is ergodic. In general, it is difficult to prove that a process is ergodic, so we will assume that this is the case if the process appears to be stationary and some of the time averages are equal to the corresponding ensemble averages. An ergodic process has to be stationary, since the time averages cannot be functions of time. However, if a process is known to be stationary, it may or may not be ergodic.

At the end of the chapter in Prob. 6–2, it will be shown that the random process described by Eq. (6–8) would not be stationary (and, consequently, would not be ergodic) if θ were uniformly distributed over $(0, \pi/2)$ instead of $(0, 2\pi)$.

Correlation Functions and Wide-Sense Stationarity

DEFINITION. The *autocorrelation function* of a real process $x(t)$ is

$$R_x(t_1, t_2) = \overline{x(t_1)x(t_2)} = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} x_1 x_2 f_x(x_1, x_2) dx_1 dx_2 \quad (6-13)$$

where $x_1 = x(t_1)$ and $x_2 = x(t_2)$. If the process is stationary to the second order, the autocorrelation function is a function only of the time difference $\tau = t_2 - t_1$.

That is,

$$R_x(\tau) = \overline{x(t)x(t + \tau)} \quad (6-14)$$

if $x(t)$ is second-order stationary.[†]

DEFINITION. A random process is said to be *wide-sense stationary* if

$$1. \overline{x(t)} = \text{constant and} \quad (6-15a)$$

$$2. R_x(t_1, t_2) = R_x(\tau) \quad (6-15b)$$

where $\tau = t_2 - t_1$.

A process that is stationary to order 2 or greater is wide-sense stationary. However, the converse is not necessarily true, because only *certain* ensemble averages, namely, those of Eq. (6–15), need to be satisfied for wide-sense stationarity.[‡] As indicated by Eq. (6–15), the mean and autocorrelation functions of a wide-sense stationary process do not change with a

[†] The time average type of the autocorrelation function was defined in Chapter 2. The time average autocorrelation function, Eq. (2–68), is identical to the ensemble average autocorrelation function, Eq. (6–14), when the process is ergodic.

[‡] An exception occurs for the Gaussian random process, in which wide-sense stationarity does imply that the process is strict-sense stationary, since the $N \rightarrow \infty$ -dimensional Gaussian PDF is completely specified by the mean, variance, and covariance of $x(t_1), x(t_2), \dots, x(t_N)$.

shift in the time origin. This implies that the associated circuit elements that generate the wide-sense stationary random process do not drift (age) with time.

The autocorrelation function gives us an idea of the frequency response that is associated with the random process. For example, if $R_x(\tau)$ remains relatively constant as τ is increased from zero to some positive number, then, on the average, sample values of x taken at $t = t_1$ and $t = t_1 + \tau$ are nearly the same. Consequently, $x(t)$ does not change rapidly with time (on the average), and we would expect $x(t)$ to have low frequencies present. On the other hand, if $R_x(\tau)$ decreases rapidly as τ is increased, we would expect $x(t)$ to change rapidly with time, and consequently, high frequencies would be present. We formulate this result rigorously in Sec. 6-2, where it will be shown that the PSD, which is a function of frequency, is the Fourier transform of the autocorrelation function.

Properties of the autocorrelation function of a real wide-sense stationary process are as follows:

$$1. R_x(0) = \overline{x^2(t)} = \text{second moment} \quad (6-16)$$

$$2. R_x(\tau) = R_x(-\tau) \quad (6-17)$$

$$3. R_x(0) \geq |R_x(\tau)| \quad (6-18)$$

The first two properties follow directly from the definition of $R_x(\tau)$, as given by Eq. (6-14). Furthermore, if $x(t)$ is ergodic, $R(0)$ is identical to the square of the rms value of $x(t)$. Property 3 is demonstrated as follows: $[x(t); x(t + \tau)]^2$ is a nonnegative quantity, so that

$$\overline{[x(t) \pm x(t + \tau)]^2} \geq 0$$

or

$$\overline{x^2(t)} \pm 2\overline{x(t)x(t + \tau)} + \overline{x^2(t + \tau)} \geq 0$$

This equation is equivalent to

$$R_x(0) \pm 2R_x(\tau) + R_x(0) \geq 0$$

which reduces to property 3.

The autocorrelation may be generalized to define an appropriate correlation function for two random processes.

DEFINITION. The *cross-correlation function* for two real processes $x(t)$ and $y(t)$ is

$$R_{xy}(t_1, t_2) = \overline{x(t_1)y(t_2)} \quad (6-19)$$

Furthermore, if $x(t)$ and $y(t)$ are jointly stationary,[†] the cross-correlation function becomes

$$R_{xy}(t_1, t_2) = R_{xy}(\tau)$$

[†] Similar to the definition of Eq. (6-3), $x(t)$ and $y(t)$ are said to be jointly stationary when
 $f_{xy}(x(t_1), x(t_2), \dots, x(t_N), y(t_{N+1}), y(t_{N+2}), \dots, y(t_{N+M}))$
 $= f_{xy}(x(t_1 + t_0), x(t_2 + t_0), \dots, x(t_N + t_0), y(t_{N+1} + t_0), y(t_{N+2} + t_0), \dots, y(t_{N+M} + t_0))$
 $x(t)$ and $y(t)$ are strict-sense jointly stationary if this equality holds for $N \rightarrow \infty$ and $M \rightarrow \infty$ and are wide-sense jointly stationary for $N = 2$ and $M = 2$.

where $\tau = t_2 - t_1$.

Some properties of cross-correlation functions of jointly stationary real processes are

$$1. R_{xy}(-\tau) = R_{yx}(\tau) \quad (6-20)$$

$$2. |R_{xy}(\tau)| \leq \sqrt{R_x(0)R_y(0)} \quad (6-21)$$

and

$$3. |R_{xy}(\tau)| \leq \frac{1}{2}[R_x(0) + R_y(0)] \quad (6-22)$$

The first property follows directly from the definition, Eq. (6-19). Property 2 follows from the fact that

$$\overline{[x(t) + Ky(t + \tau)]^2} \geq 0 \quad (6-23)$$

for any real constant K . Expanding Eq. (6-23), we obtain an equation that is a quadratic in K :

$$[R_y(0)]K^2 + [2R_{xy}(\tau)]K + [R_x(0)] \geq 0 \quad (6-24)$$

For K to be real, it can be shown that the discriminant of Eq. (6-24) has to be nonpositive.[†] That is,

$$[2R_{xy}(\tau)]^2 - 4[R_y(0)][R_x(0)] \leq 0 \quad (6-25)$$

This is equivalent to property 2, as described by Eq. (6-21). Property 3 follows directly from Eq. (6-24), where $K = \pm 1$. Furthermore,

$$|R_{xy}(\tau)| \leq \sqrt{R_x(0)R_y(0)} \leq \frac{1}{2}[R_x(0) + R_y(0)] \quad (6-26)$$

because the geometric mean of two positive numbers $R_x(0)$ and $R_y(0)$ does not exceed their arithmetic mean.

Note that the cross-correlation function of two random processes $x(t)$ and $y(t)$ is a generalization of the concept of the joint mean of two random variables defined by Eq. (B-91). Here, x_1 is replaced by $x(t)$, and x_2 is replaced by $y(t + \tau)$. Thus, two random processes $x(t)$ and $y(t)$ are said to be *uncorrelated* if

$$R_{xy}(\tau) = \overline{[x(t)][y(t + \tau)]} = m_x m_y \quad (6-27)$$

for all values of τ . Similarly, two random processes $x(t)$ and $y(t)$ are said to be *orthogonal* if

$$R_{xy}(\tau) = 0 \quad (6-28)$$

for all values of τ .

As mentioned previously, if $y(t) = x(t)$, the cross-correlation function becomes an autocorrelation function. In this sense, the autocorrelation function is a special case of the cross-correlation function. Of course, when $y(t) \equiv x(t)$, all the properties of the cross-correlation function reduce to those of the autocorrelation function.

[†] The parameter K is a root of this quadratic only when the quadratic is equal to zero. When the quadratic is positive, the roots have to be complex.

If the random processes $x(t)$ and $y(t)$ are jointly ergodic, the time average may be used to replace the ensemble average. For correlation functions, this becomes

$$R_{xy}(\tau) \triangleq \overline{x(t)y(t + \tau)} \equiv \langle x(t)y(t + \tau) \rangle \quad (6-29)$$

where

$$\langle [\cdot] \rangle = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} [\cdot] dt \quad (6-30)$$

when $x(t)$ and $y(t)$ are jointly ergodic. In this case, cross-correlation functions and autocorrelation functions of voltage or current waveforms may be measured by using an electronic circuit that consists of a delay line, a multiplier, and an integrator. The measurement technique is illustrated in Fig. 6-3.

Complex Random Processes

In previous chapters, the complex envelope $g(t)$ was found to be extremely useful in describing bandpass waveforms. Bandpass *random* signals and noise can also be described in terms of the complex envelope, where $g(t)$ is a *complex baseband random process*.

DEFINITION. A *complex random process* is

$$g(t) \triangleq x(t) + jy(t) \quad (6-31)$$

where $x(t)$ and $y(t)$ are real random processes and $j = \sqrt{-1}$.

A complex process is strict-sense stationary if $x(t)$ and $y(t)$ are jointly strict-sense stationary; that is,

$$\begin{aligned} f_g(x(t_1), y(t'_1), x(t_2), y(t'_2), \dots, x(t_N), y(t'_N)) \\ = f_g(x(t_1 + t_0), y(t'_1 + t_0), \dots, x(t_N + t_0), y(t'_N + t_0)) \end{aligned} \quad (6-32)$$

for any value of t_0 and any $N \rightarrow \infty$.

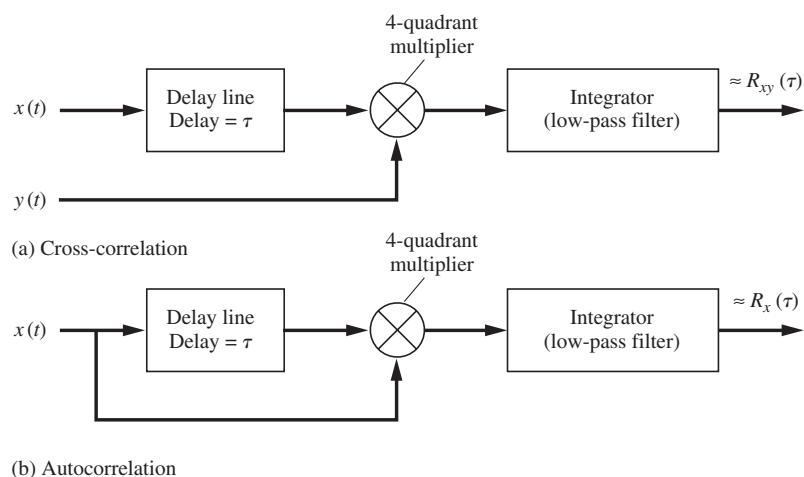


Figure 6-3 Measurement of correlation functions.

The definitions of the correlation functions can be generalized to cover *complex* random processes.

DEFINITION. The *autocorrelation function* for a *complex* random process is

$$R_g(t_1, t_2) = \overline{g^*(t_1)g(t_2)} \quad (6-33)$$

where the asterisk denotes the complex conjugate.

Furthermore, the complex random process is stationary in the wide sense if $\overline{g(t)}$ is a complex constant and $R_g(t_1, t_2) = R_g(\tau)$, where $\tau = t_2 - t_1$. The autocorrelation of a wide-sense stationary complex process has the Hermitian symmetry property

$$R_g(-\tau) = R_g^*(\tau) \quad (6-34)$$

DEFINITION. The *cross-correlation function* for two *complex* random processes $g_1(t)$ and $g_2(t)$ is

$$R_{g_1g_2}(t_1, t_2) = \overline{g_1^*(t_1)g_2(t_2)} \quad (6-35)$$

When the complex random processes are jointly wide-sense stationary, the cross-correlation function becomes

$$R_{g_1g_2}(t_1, t_2) = R_{g_1g_2}(\tau)$$

where $\tau = t_2 - t_1$.

In Sec. 6-7, we use these definitions in the statistical description of bandpass random signals and noise.

6-2 POWER SPECTRAL DENSITY

Definition

A definition of the PSD $\mathcal{P}_x(f)$ was given in Chapter 2 for the case of deterministic waveforms by Eq. (2-66). Here we develop a more general definition that is applicable to the spectral analysis of random processes.

Suppose that $x(t, E_i)$ represents a sample function of a random process $x(t)$. A truncated version of this sample function can be defined according to the formula

$$x_T(t, E_i) = \begin{cases} x(t, E_i), & |t| < \frac{1}{2}T \\ 0, & t \text{ elsewhere} \end{cases} \quad (6-36)$$

where the subscript T denotes the truncated version. The corresponding Fourier transform is

$$\begin{aligned} X_T(f, E_i) &= \int_{-\infty}^{\infty} x_T(t, E_i) e^{-j2\pi f t} dt \\ &= \int_{-T/2}^{T/2} x(t, E_i) e^{-j2\pi f t} dt \end{aligned} \quad (6-37)$$

which indicates that X_T is itself a random process, since x_T is a random process. We will now simplify the notation and denote these functions simply by $X_T(f)$, $x_T(t)$, and $x(t)$, because it is clear that they are all random processes.

The normalized[†] energy in the time interval $(-T/2, T/2)$ is

$$E_T = \int_{-\infty}^{\infty} x_T^2(t) dt = \int_{-\infty}^{\infty} |X_T(f)|^2 df \quad (6-38)$$

Here, Parseval's theorem was used to obtain the second integral. E_T is a random variable because $x(t)$ is a random process. Furthermore, the mean normalized energy is obtained by taking the ensemble average of Eq. (6-38):

$$\bar{E}_T = \int_{-T/2}^{T/2} \overline{x^2(t)} dt = \int_{-\infty}^{\infty} \overline{x_T^2(t)} dt = \int_{-\infty}^{\infty} \overline{|X_T(f)|^2} df \quad (6-39)$$

The normalized average power is the energy expended per unit time, so the normalized average power is

$$P = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} \overline{x^2(t)} dt = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-\infty}^{\infty} \overline{x_T^2(t)} dt$$

or

$$P = \int_{-\infty}^{\infty} \left[\lim_{T \rightarrow \infty} \frac{1}{T} \overline{|X_T(f)|^2} \right] df = \overline{x^2(t)} \quad (6-40)$$

In the evaluation of the limit in Eq. (6-40), it is important that the ensemble average be evaluated *before* the limit operation is carried out, because we want to ensure that $X_T(f)$ is finite. [Since $x(t)$ is a power signal, $X(f) = \lim_{T \rightarrow \infty} X_T(f)$ may not exist.] Note that Eq. (6-40) indicates that, for a random process, the average normalized power is given by the time average of the second moment. Of course, if $x(t)$ is wide-sense stationary, $\langle \overline{x^2(t)} \rangle = \overline{x^2(t)}$ because $\overline{x^2(t)}$ is a constant.

From the definition of the PSD in Chapter 2, we know that

$$P = \int_{-\infty}^{\infty} \mathcal{P}(f) df \quad (6-41)$$

Thus, we see that the following definition of the PSD is consistent with that given by Eq. (2-66) in Chapter 2.

DEFINITION. The *power spectral density* (PSD) for a random process $x(t)$ is given by

$$\mathcal{P}_x(f) = \lim_{T \rightarrow \infty} \left(\frac{\overline{|X_T(f)|^2}}{T} \right) \quad (6-42)$$

where

$$X_T(f) = \int_{-T/2}^{T/2} x(t) e^{-j2\pi ft} dt \quad (6-43)$$

[†] If $x(t)$ is a voltage or current waveform, E_T is the energy on a per-ohm (i.e., $R = 1$) normalized basis.

Wiener–Khintchine Theorem

Often, the PSD is evaluated from the autocorrelation function for the random process by using the following theorem.

WIENER–KHINTCHINE THEOREM[†] *When $x(t)$ is a wide-sense stationary process, the PSD can be obtained from the Fourier transform of the autocorrelation function:*

$$\mathcal{P}_x(f) = \mathcal{F}[R_x(\tau)] = \int_{-\infty}^{\infty} R_x(\tau) e^{-j2\pi f\tau} d\tau \quad (6-44)$$

Conversely,

$$R_x(\tau) = \mathcal{F}^{-1}[\mathcal{P}_x(f)] = \int_{-\infty}^{\infty} \mathcal{P}_x(f) e^{j2\pi f\tau} df \quad (6-45)$$

provided that $R(\tau)$ becomes sufficiently small for large values of τ , so that

$$\int_{-\infty}^{\infty} |\tau R(\tau)| d\tau < \infty \quad (6-46)$$

This theorem is also valid for a nonstationary process, provided that we replace $R_x(\tau)$ by $\langle R_x(t, t + \tau) \rangle$.

Proof. From the definition of PSD,

$$\mathcal{P}_x(f) = \lim_{T \rightarrow \infty} \left(\frac{\overline{|X_T(f)|^2}}{T} \right)$$

where

$$\begin{aligned} \overline{|X_T(f)|^2} &= \overline{\left| \int_{-T/2}^{T/2} x(t) e^{-j\omega t} dt \right|^2} \\ &= \int_{-T/2}^{T/2} \int_{-T/2}^{T/2} \overline{x(t_1)x(t_2)} e^{-j\omega t_1} e^{j\omega t_2} dt_1 dt_2 \end{aligned}$$

and $x(t)$ is assumed to be real. But $\overline{x(t_1)x(t_2)} = R_x(t_1, t_2)$. Furthermore, let $\tau = t_2 - t_1$, and make a change in variable from t_2 to $\tau + t_1$. Then

$$\overline{|X_T(f)|^2} = \int_{t_1=-T/2}^{t_1=T/2} \underbrace{\left[\int_{\tau=-T/2-t_1}^{\tau=T/2-t_1} R_x(t_1, t_1 + \tau) e^{-j\omega\tau} d\tau \right]}_{\textcircled{1}} dt_1 \quad (6-47)$$

The area of this two-dimensional integration is shown in Fig. 6-4. In the figure, $\textcircled{1}$ denotes the area covered by the product of the inner integral and the differential width dt_1 . To evaluate this two-dimensional integral easily, the order of integration will be exchanged.

[†] Named after the American mathematician Norbert Wiener (1894–1964) and the German mathematician A. I. Khintchine (1894–1959). Other spellings of the German name are Khinchine and Khinchin.

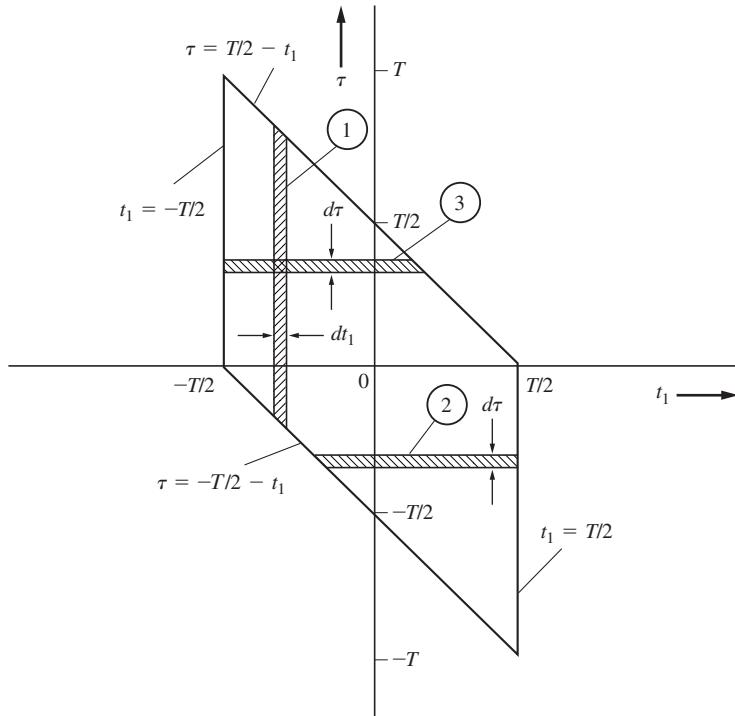


Figure 6-4 Region of integration for Eqs. (6-47) and (6-48).

As seen in the figure, this is accomplished by covering the total area by using ② when $\tau < 0$ and ③ when $\tau \geq 0$. Thus Eq. (6-47) becomes

$$\begin{aligned} \overline{|X_T(f)|^2} &= \int_{-T}^0 \left[\underbrace{\int_{t_1=-T/2-\tau}^{t_1=T/2} R_x(t_1, t_1 + \tau) e^{-j\omega\tau} dt_1}_{(2)} \right] d\tau \\ &\quad + \int_0^T \left[\underbrace{\int_{t_1=-T/2}^{t_1=T/2-\tau} R_x(t_1, t_1 + \tau) e^{-j\omega\tau} dt_1}_{(3)} \right] d\tau \end{aligned} \quad (6-48)$$

Now, assume that $x(t)$ is stationary, so that $R_x(t_1, t_1 + \tau) = R_x(\tau)$, and factor $R_x(\tau)$ outside the inner integral. Then

$$\begin{aligned} \overline{|X_T(f)|^2} &= \int_{-T}^0 R_x(\tau) e^{-j\omega\tau} \left[t_1 \Big|_{-T/2-\tau}^{T/2} \right] d\tau + \int_0^T R_x(\tau) e^{-j\omega\tau} \left[t_1 \Big|_{-T/2}^{T/2-\tau} \right] d\tau \\ &= \int_{-T}^0 (T + \tau) R_x(\tau) e^{-j\omega\tau} d\tau + \int_0^T (T - \tau) R_x(\tau) e^{-j\omega\tau} d\tau \end{aligned}$$

This equation can be written compactly as

$$\overline{|X_T(f)|^2} = \int_{-T}^T (T - |\tau|) R_x(\tau) e^{-j\omega\tau} d\tau \quad (6-49)$$

By substituting Eq. (6-49) into Eq. (6-42), we obtain

$$\mathcal{P}_x(f) = \lim_{T \rightarrow \infty} \int_{-T}^T \left(\frac{T - |\tau|}{T} \right) R_x(\tau) e^{-j\omega\tau} d\tau \quad (6-50a)$$

or

$$\mathcal{P}_x(f) = \int_{-\infty}^{\infty} R_x(\tau) e^{j\omega\tau} d\tau - \lim_{T \rightarrow \infty} \int_{-T}^T \frac{|\tau|}{T} R_x(\tau) e^{-j\omega\tau} d\tau \quad (6-50b)$$

Using the assumption of Eq. (6-46), we observe that the right-hand integral is zero and Eq. (6-50b) reduces to Eq. (6-44). Thus, the theorem is proved. The converse relationship follows directly from the properties of Fourier transforms. Furthermore, if $x(t)$ is not stationary, Eq. (6-44) is still obtained if we replace $R_x(t_1, t_1 + \tau)$ into Eq. (6-48) by $\langle R_x(t_1, t_1 + \tau) \rangle = R_x(\tau)$.

Comparing the definition of the PSD with results of the Wiener–Khintchine theorem, we see that there are two different methods that may be used to evaluate the PSD of a random process:

1. The PSD is obtained using the *direct method* by evaluating the definition as given by Eq. (6-42).
2. The PSD is obtained using the *indirect method* by evaluating the Fourier transform of $R_x(\tau)$, where $R_x(\tau)$ has to be obtained first.

Both methods will be demonstrated in Example 6-4.

Properties of the PSD

Some properties of the PSD are:

1. $\mathcal{P}_x(f)$ is always real. (6-51)

2. $\mathcal{P}_x(f) \geq 0$. (6-52)

3. When $x(t)$ is real, $\mathcal{P}_x(-f) = \mathcal{P}_x(f)$. (6-53)

4. $\int_{-\infty}^{\infty} \mathcal{P}_x(f) df = P = \text{total normalized power}$. (6-54a)

When $x(t)$ is wide-sense stationary,

$$\int_{-\infty}^{\infty} \mathcal{P}_x(f) df = P = \overline{x^2} = R_x(0) \quad (6-54b)$$

5. $\mathcal{P}_x(0) = \int_{-\infty}^{\infty} R_x(\tau) d\tau$. (6-55)

These properties follow directly from the definition of a PSD and the use of the Wiener–Khintchine theorem.

Example 6–4 EVALUATION OF THE PSD FOR A POLAR BASEBAND SIGNAL

Let $x(t)$ be a polar signal with random binary data. A sample function of this signal is illustrated in Fig. 6–5a. Assume that the data are independent from bit to bit and that the probability of obtaining a binary 1 during any bit interval is $\frac{1}{2}$. Find the PSD of $x(t)$.

The polar signal may be modeled by

$$x(t) = \sum_{n=-\infty}^{\infty} a_n f(t - nT_b) \quad (6-56)$$

where $f(t)$ is the signaling pulse shape, shown in Fig. 6–5b, and T_b is the duration of one bit. $\{a_n\}$ is a set of random variables that represent the binary data. It is given that the random variables are independent. Clearly, each one is discretely distributed at $a_n = \pm 1$ and $P(a_n = 1) = P(a_n = -1) = \frac{1}{2}$, as described in the statement of the problem.

The PSD for $x(t)$ will be evaluated first by using method 1, which requires that $X_T(f)$ be obtained. We can obtain $x_T(t)$ by truncating Eq. (6–56); that is,

$$x_T(t) = \sum_{n=-N}^{n=N} a_n f(t - nT_b)$$

where $T/2 = (N + \frac{1}{2})T_b$. Then

$$X_T(f) = \mathcal{F}[x_T(t)] = \sum_{n=-N}^N a_n \mathcal{F}[f(t - nT_b)] = \sum_{n=-N}^N a_n F(f) e^{-j\omega n T_b}$$

or

$$X_T(f) = F(f) \sum_{n=-N}^N a_n e^{-j\omega n T_b} \quad (6-57)$$

where $F(f) = \mathcal{F}[f(t)]$. When we substitute Eq. (6–57) into Eq. (6–42), we find that the PSD is

$$\begin{aligned} \mathcal{P}_x(f) &= \lim_{T \rightarrow \infty} \left(\frac{1}{T} |F(f)|^2 \overline{\left| \sum_{n=-N}^N a_n e^{-j\omega n T_b} \right|^2} \right) \\ &= |F(f)|^2 \lim_{T \rightarrow \infty} \left(\frac{1}{T} \sum_{n=-N}^N \sum_{m=-N}^N \overline{a_n a_m} e^{j(m-n)\omega T_b} \right) \end{aligned} \quad (6-58)$$

The average $\overline{a_n a_m}$ now needs to be evaluated for the case of polar signaling ($a_n = \pm 1$). We have


$$\overline{a_n a_m} = \begin{cases} \overline{a_n^2}, & n = m \\ \overline{a_n a_m}, & n \neq m \end{cases}$$

where $\overline{a_n a_m} = \overline{a_n} \overline{a_m}$ for $n \neq m$, since a_n and a_m are independent. Using the discrete distribution for a_n , we get

$$\overline{a_n} = (+1) \frac{1}{2} + (-1) \frac{1}{2} = 0$$

Similarly, $\overline{a_m} = 0$. Further,

$$\overline{a_n^2} = (+1)^2 \left(\frac{1}{2}\right) + (-1)^2 \left(\frac{1}{2}\right) = 1$$

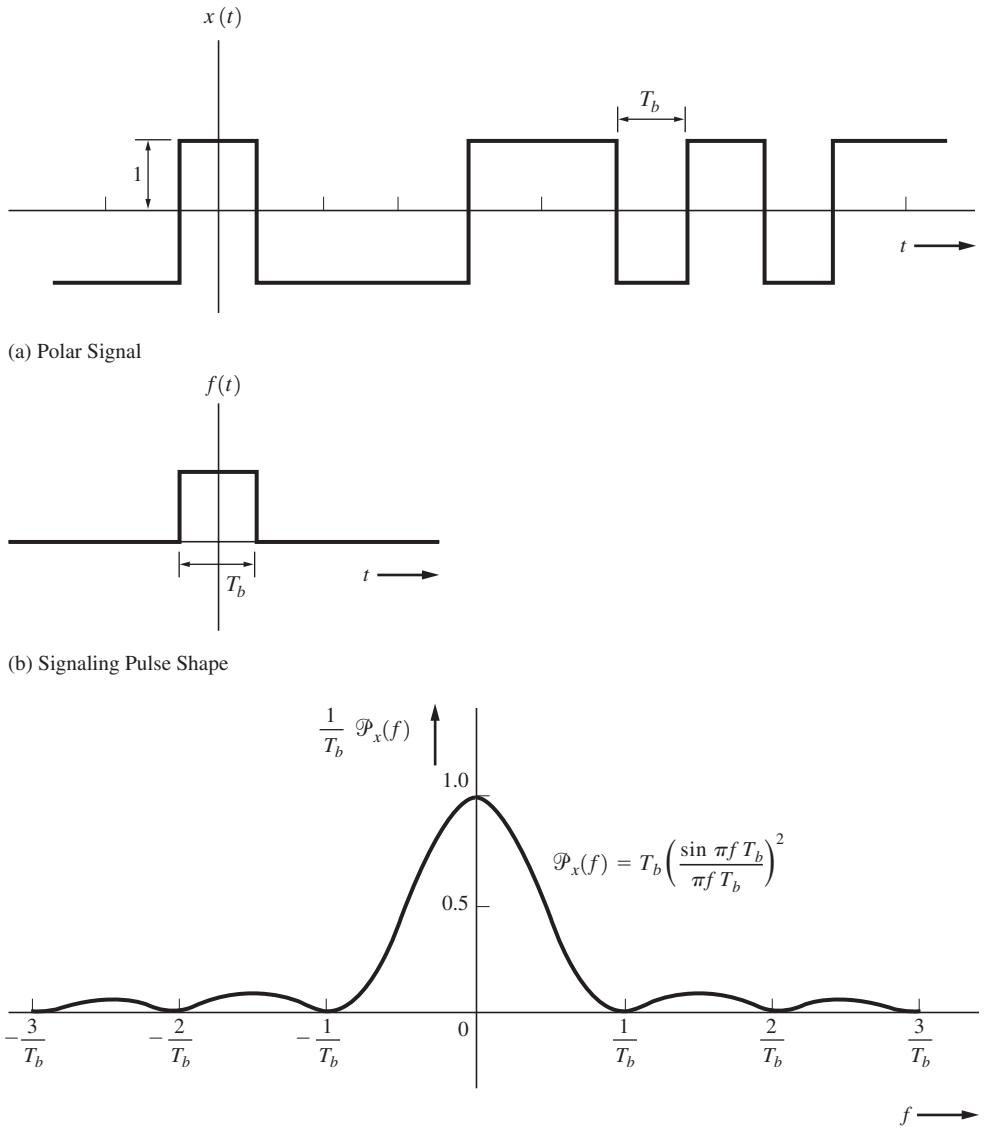

Thus,

$$\overline{a_n a_m} = \begin{cases} 1, & n = m \\ 0, & n \neq m \end{cases} \quad (6-59)$$

With this result, Eq. (6–58) becomes

$$\mathcal{P}_x(f) = |F(f)|^2 \lim_{T \rightarrow \infty} \left(\frac{1}{T} \sum_{n=-N}^N 1 \right)$$

and, with $T = 2(N + \frac{1}{2})T_b$,

$$\mathcal{P}_x(f) = |F(f)|^2 \lim_{N \rightarrow \infty} \left[\frac{2N + 1}{(2N + 1)T_b} \right]$$

or

$$\mathcal{P}_x(f) = \frac{1}{T_b} |F(f)|^2 \quad (\text{polar signaling}) \quad (6-60)$$

For the rectangular pulse shape shown in Fig. 6–5b,

$$F(f) = T_b \left(\frac{\sin \pi f T_b}{\pi f T_b} \right) \quad (6-61)$$

Thus, the PSD for a polar signal with a rectangular pulse shape is

$$\mathcal{P}_x(f) = T_b \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \quad (6-62)$$

This PSD is plotted in Fig. 6–5c.[†] The null bandwidth is $B = 1/T_b = R$, where R is the bit rate. Note that Eq. (6–62) satisfies the properties for a PSD function listed previously.

Method 2 will now be used to evaluate the PSD of the polar signal. This involves calculating the autocorrelation function and then evaluating the Fourier transform of $R_x(\tau)$ to obtain the PSD. When we use Eq. (6–56), the autocorrelation is

$$\begin{aligned} R_x(t, t + \tau) &= \overline{x(t)x(t + \tau)} \\ &= \overline{\sum_{n=-\infty}^{\infty} a_n f(t - nT_b) \sum_{m=-\infty}^{\infty} a_m f(t + \tau - mT_b)} \\ &= \sum_n \sum_m \overline{a_n a_m} f(t - nT_b) f(t + \tau - mT_b) \end{aligned}$$

By using Eq. (6–59), this equation reduces to

$$R_x(t, t + \tau) = \sum_{n=-\infty}^{\infty} f(t - nT_b) f(t + \tau - nT_b) \quad (6-63)$$

Obviously, $x(t)$ is not a wide-sense stationary process, since the autocorrelation function depends on absolute time t . To reduce Eq. (6–63), a particular type of pulse shape needs to be designated. Assume, once again, the rectangular pulse shape

$$f(t) = \begin{cases} 1, & |t| \leq T_b/2 \\ 0, & \text{elsewhere} \end{cases}$$

The pulse product then becomes

$$f(t - nT_b) f(t + \tau - nT_b) = \begin{cases} 1, & \text{if } |t - nT_b| \leq T_b/2 \text{ and } |t + \tau - nT_b| \leq T_b/2 \\ 0, & \text{otherwise} \end{cases}$$

[†] The PSD of this polar signal is purely continuous because the positive and negative pulses are assumed to be of equal amplitude.

Working with the inequalities, we get a unity product only when

$$(n - \frac{1}{2})T_b \leq t \leq (n + \frac{1}{2})T_b$$

and

$$(n - \frac{1}{2})T_b - \tau \leq t \leq (n + \frac{1}{2})T_b - \tau$$

Assume that $\tau \geq 0$; then we will have a unity product when

$$(n - \frac{1}{2})T_b \leq t \leq (n + \frac{1}{2})T_b - \tau$$

provided that $\tau \leq T_b$. Thus, for $0 \leq \tau \leq T_b$,

$$R_x(t, t + \tau) = \sum_{n=-\infty}^{\infty} \begin{cases} 1, & (n - \frac{1}{2})T_b \leq t \leq (n + \frac{1}{2})T_b - \tau \\ 0, & \text{otherwise} \end{cases} \quad (6-64)$$

We know that the Wiener–Khintchine theorem is valid for nonstationary processes if we let $R_x(\tau) = \langle R_x(t, t + \tau) \rangle$. Using Eq. (6-64), we get

$$R_x(\tau) = \langle R_x(t, t + \tau) \rangle = \lim_{T \rightarrow \infty} \frac{1}{T} \int_{-T/2}^{T/2} \sum_{n=-\infty}^{\infty} \begin{cases} 1, & (n - \frac{1}{2})T_b \leq t \leq (n + \frac{1}{2})T_b - \tau \\ 0, & \text{elsewhere} \end{cases} dt$$

or

$$R_x(\tau) = \lim_{T \rightarrow \infty} \frac{1}{T} \sum_{n=-N}^N \left(\int_{(n-1/2)T_b}^{(n+1/2)T_b - \tau} 1 dt \right)$$

where $T/2 = (N - \frac{1}{2})T_b$. This reduces to

$$R_x(\tau) = \lim_{N \rightarrow \infty} \left[\frac{1}{(2N + 1)T_b} (2N + 1) \begin{cases} (T_b - \tau), & 0 \leq \tau \leq T_b \\ 0, & \tau > T_b \end{cases} \right]$$

or

$$R_x(\tau) = \begin{cases} \frac{T_b - \tau}{T_b}, & 0 \leq \tau \leq T_b \\ 0, & \tau > T_b \end{cases} \quad (6-65)$$

Similar results can be obtained for $\tau < 0$. However, we know that $R_x(-\tau) = R_x(\tau)$, so Eq. (6-65) can be generalized for all values of τ . Thus,

$$R_x(\tau) = \begin{cases} \frac{T_b - |\tau|}{T_b}, & |\tau| \leq T_b \\ 0, & \text{otherwise} \end{cases} \quad (6-66)$$

which shows that $R_x(\tau)$ has a triangular shape. Evaluating the Fourier transform of Eq. (6-66), we obtain the PSD for the polar signal with a rectangular bit shape:

$$\mathcal{P}_x(f) = T_b \left(\frac{\sin \pi f T_b}{\pi f T_b} \right)^2 \quad (6-67)$$

This result, obtained by the use of method 2, is identical to Eq. (6-62), obtained by using method 1.

General Formula for the PSD of Digital Signals

We now derive a general formula for the PSD of digital signals. The formulas for the PSD in Example 6–4 are valid only for polar signaling with $a_n = \pm 1$ and no correlation between the bits. A more general result can be obtained in terms of the autocorrelation of the data, a_n , by starting with Eq. (6–56). As illustrated in Figs. 3–12 and 3–14, the data may be binary or multilevel. The duration (width) of the symbol pulse $f(t)$ is T_s . For binary data, $T_s = T_b$, where T_b is the duration of 1 bit. We define the autocorrelation of the data by

$$R(k) = \overline{a_n a_{n+k}} \quad (6-68)$$

Next, we make a change in the index in Eq. (6–58), letting $m = n + k$. Then, by using Eq. (6–68) and $T = (2N + 1)T_s$, Eq. (6–58) becomes

$$\mathcal{P}_x(f) = |F(f)|^2 \lim_{N \rightarrow \infty} \left[\frac{1}{(2N + 1)T_s} \sum_{n=-N}^{n=N} \sum_{k=-N-n}^{k=N-n} R(k) e^{jk\omega T_s} \right]$$

Replacing the outer sum over the index n by $2N + 1$, we obtain the following expression. [This procedure is not strictly correct, since the inner sum is also a function of n . The correct procedure would be to exchange the order of summation, in a manner similar to that used in Eq. (6–47) through (6–50), where the order of integration was exchanged. The result would be the same as that as obtained below when the limit is evaluated as $N \rightarrow \infty$.]

$$\begin{aligned} \mathcal{P}_x(f) &= \frac{|F(f)|^2}{T_s} \lim_{N \rightarrow \infty} \left[\frac{(2N + 1)}{(2N + 1)} \sum_{k=-N-n}^{k=N-n} R(k) e^{jk\omega T_s} \right] \\ &= \frac{|F(f)|^2}{T_s} \sum_{k=-\infty}^{k=\infty} R(k) e^{jk\omega T_s} \\ &= \frac{|F(f)|^2}{T_s} \left[R(0) + \sum_{k=-\infty}^{-1} R(k) e^{jk\omega T_s} + \sum_{k=1}^{\infty} R(k) e^{jk\omega T_s} \right] \end{aligned}$$

or

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[R(0) + \sum_{k=1}^{\infty} R(-k) e^{-jk\omega T_s} + \sum_{k=1}^{\infty} R(k) e^{jk\omega T_s} \right] \quad (6-69)$$

But because $R(k)$ is an autocorrelation function, $R(-k) = R(k)$, and Eq. (6–69) becomes

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[R(0) + \sum_{k=1}^{\infty} R(k) (e^{jk\omega T_s} + e^{-jk\omega T_s}) \right]$$

In summary, the general expression for the PSD of a digital signal is

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[R(0) + 2 \sum_{k=1}^{\infty} R(k) \cos(2\pi k f T_s) \right] \quad (6-70a)$$

An equivalent expression is

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[\sum_{k=-\infty}^{\infty} R(k) e^{jk\omega T_s} \right]$$

(6-70b)

where the autocorrelation of the data is

$$R(k) = \overline{a_n a_{n+k}} = \sum_{i=1}^I (a_n a_{n+k})_i P_i \quad (6-70c)$$

in which P_i is the probability of getting the product $(a_n a_{n+k})_i$, of which there are I possible values. $F(f)$ is the spectrum of the pulse shape of the digital symbol.

Note that the quantity in brackets in Eq. (6-70b) is similar to the discrete Fourier transform (DFT) of the data autocorrelation function $R(k)$, except that the frequency variable ω is continuous. Thus, the PSD of the baseband digital signal is influenced by both the “spectrum” of the data and the spectrum of the pulse shape used for the line code. Furthermore, the spectrum may also contain delta functions if the mean value of the data, \bar{a}_n , is nonzero. To demonstrate this result, we first assume that the data symbols are uncorrelated; that is,

$$R(k) = \begin{cases} \overline{a_n^2}, & k = 0 \\ \overline{a_n a_{n+k}}, & k \neq 0 \end{cases} = \begin{cases} \sigma_a^2 + m_a^2, & k = 0 \\ m_a^2, & k \neq 0 \end{cases}$$

where, as defined in Appendix B, the mean and the variance for the data are $m_a = \bar{a}_n$ and $\sigma_a^2 = (a_n - m_a)^2 = \overline{a_n^2} - m_a^2$. Substituting the preceding equation for $R(k)$ into Eq. (6-70b), we get

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[\sigma_a^2 + m_a^2 \sum_{k=-\infty}^{\infty} e^{j k \omega T_s} \right]$$

From Eq. (2-115), the Poisson sum formula, we obtain

$$\sum_{k=-\infty}^{\infty} e^{\pm j k \omega T_s} = D \sum_{n=-\infty}^{\infty} \delta(f - nD)$$

where $D = 1/T_s$ is the baud rate. We see that the PSD then becomes

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[a_a^2 + m_a^2 D \sum_{n=-\infty}^{\infty} \delta(f - nD) \right]$$

Thus, for the case of uncorrelated data, the PSD of the digital signal is

$$\mathcal{P}_x(f) = \underbrace{\sigma_a^2 D |F(f)|^2}_{\text{Continuous spectrum}} + \underbrace{(m_a D)^2 \sum_{n=-\infty}^{\infty} |F(nD)|^2 \delta(f - nD)}_{\text{Discrete spectrum}} \quad (6-70d)$$

For the general case where there is correlation between the data, let the data autocorrelation function $R(k)$ be expressed in terms of the *normalized-data* autocorrelation function $\rho(k)$. That is, let \tilde{a}_n represent the corresponding data that have been normalized to have unity variance and zero mean. Thus,

$$a_n = \sigma_a \tilde{a}_n + m_a$$

and, consequently,

$$R(k) = \sigma_a^2 \rho(k) + m_a^2$$

where

$$\rho(k) = \overline{[\tilde{a}_n \tilde{a}_{n+k}]}$$

Substituting this expression for $R(k)$ into Eq. (6–70b) and using $R(-k) = R(k)$, we get

$$\mathcal{P}_x(f) = \frac{|F(f)|^2}{T_s} \left[\sigma_a^2 \sum_{k=-\infty}^{\infty} \rho(k) e^{-jk\omega T_s} + m_a^2 \sum_{k=-\infty}^{\infty} e^{-jk\omega T_s} \right]$$

Thus, for the general case of correlated data, the PSD of the digital signal is

$$\mathcal{P}_x(f) = \underbrace{\sigma_a^2 D |F(f)|^2 \mathcal{W}_p(f)}_{\text{Continuous spectrum}} + \underbrace{(m_a D)^2 \sum_{n=-\infty}^{\infty} |F(nD)|^2 \delta(f - nD)}_{\text{Discrete spectrum}} \quad (6-70e)$$

where

$$\mathcal{W}_p(f) = \sum_{k=-\infty}^{\infty} \rho(k) e^{-j2\pi kfT_s} \quad (6-70f)$$

is a spectral weight function obtained from the Fourier transform of the normalized autocorrelation impulse train

$$\sum_{k=-\infty}^{\infty} \rho(k) \delta(\tau - kT_s)$$

This demonstrates that the PSD of the digital signal consists of a continuous spectrum that depends on the pulse-shape spectrum $F(f)$ and the data correlation. Furthermore, if $m_a \neq 0$ and $F(nD) \neq 0$, the PSD will also contain spectral lines (delta functions) spaced at harmonics of the baud rate D .

Examples of the application of these results are given in Sec. 3–5, where the PSD for unipolar RZ, bipolar, and Manchester line codes are evaluated. (See Fig. 3–16 for a plot of the PSDs for these codes.) Examples of bandpass digital signaling, such as OOK, BPSK, QPSK, MPSK, and QAM, are given in Sections 5–9 and 5–10.

Example 6–5 PSD FOR A BIPOLEAR NRZ LINE CODE USING THE DATA AUTOCORRELATION

Using Eq. (6–70b) and referring to Fig. (3–15e), evaluate and plot the PSD for a bipolar NRZ line code with $A = 1.414$ and $R = 1$. Also, evaluate and plot the PSD for a bipolar RZ line code with $A = 2$ and $R = 1$. (The A 's are selected so that the NRZ and RZ line codes have the same average energy per bit, E_b .) See Example6_05.m for the solution. Compare these results with Fig. 3–16d.

White-Noise Processes

DEFINITION. A random process $x(t)$ is said to be a *white-noise process* if the PSD is constant over all frequencies; that is,

$$\mathcal{P}_x(f) = \frac{N_0}{2} \quad (6-71)$$

where N_0 is a positive constant.

The autocorrelation function for the white-noise process is obtained by taking the inverse Fourier transform of Eq. (6-71). The result is

$$R_x(\tau) = \frac{N_0}{2} \delta(\tau) \quad (6-72a)$$

For example, the thermal-noise process described in Sec. 8-6 can be considered to be a white-noise process over the operating band where

$$N_0 = kT \quad (6-72b)$$

Thermal noise also happens to have a Gaussian distribution. Of course, it is also possible to have white noise with other distributions.

Measurement of PSD

The PSD may be measured by using analog or digital techniques. In either case, the measurement can only approximate the true PSD, because the measurement is carried out over a finite time interval instead of the infinite interval specified Eq. (6-42).

Analog Techniques. Analog measurement techniques consist of using either a bank of parallel narrowband bandpass filters with contiguous bandpass characteristics or using a single bandpass filter with a center frequency that is tunable. In the case of the filter bank, the waveform is fed simultaneously into the inputs of all the filters, and the power at the output of each filter is evaluated. The output powers are divided (scaled) by the effective bandwidth of the corresponding filter so that an approximation for the PSD is obtained. That is, the PSD is evaluated for the frequency points corresponding to the center frequencies of the filters. Spectrum analyzers with this parallel type of analog processing are usually designed to cover the audio range of the spectrum, where it is economically feasible to build a bank of bandpass filters.

RF spectrum analyzers are usually built by using a single narrowband IF bandpass filter that is fed from the output of a mixer (up- or down-converter) circuit. The local oscillator (LO) of the mixer is swept slowly across an appropriate frequency band so that the RF spectrum analyzer is equivalent to a tunable narrowband bandpass filter wherein the center frequency is swept across the desired spectral range. Once again, the PSD is obtained by evaluating the scaled power output of the narrowband filter as a function of the sweep frequency.

Numerical Computation of the PSD. The PSD is evaluated numerically in spectrum analyzers that use digital signal processing. One approximation for the PSD is

$$\mathcal{P}_T(f) = \frac{|X_T(f)|^2}{T} \quad (6-73a)$$

where the subscript T indicates that the approximation is obtained by viewing $x(t)$ over a T -s interval. T is called the *observation interval* or *observation length*. Of course, Eq. (6-73a) is an approximation to the true PSD, as defined in Eq. (6-42), because T is finite and because only a sample of the ensemble is used. In more sophisticated spectrum analyzers, $\mathcal{P}_T(f)$ is evaluated for several $x(t)$ records, and the average value of $\mathcal{P}_T(f)$ at each frequency is used to approximate

the ensemble average required for a true $\mathcal{P}_x(f)$ of Eq. (6-42). In evaluating $\mathcal{P}_T(f)$, the DFT is generally used to approximate $X_T(f)$. This brings the pitfalls of DFT analysis into play, as described in Sec. 2-8.

It should be stressed that Eq. (6-73a) is an approximation or *estimate* of the PSD. This estimate is called a *periodogram*, because it was used historically to search for periodicities in data records that appear as delta functions in the PSD. [Delta functions are relatively easy to find in the PSD, and thus, the periodicities in $x(t)$ are easily determined.] It is desirable that the estimate have an ensemble average that gives the true PSD. If this is the case, the estimator is said to be *unbiased*. We can easily check Eq. (6-73a) to see if it is unbiased. We have

$$\overline{\mathcal{P}_T(f)} = \left[\frac{|X_T(f)|^2}{T} \right]$$

and, using Eq. (6-50a) for T finite, we obtain

$$\overline{\mathcal{P}_T(f)} = \mathcal{F} \left[R_x(\tau) \Lambda \left(\frac{\tau}{T} \right) \right]$$

and then, referring to Table 2-2,

$$\overline{\mathcal{P}_T(f)} = T \mathcal{P}_x(f) * \left(\frac{\sin \pi f T}{\pi f T} \right)^2 \quad (6-73b)$$

Because $\overline{\mathcal{P}_T(f)} \neq \mathcal{P}_x(f)$, the periodogram is a *biased* estimate. The bias is caused by the triangular window function $\Lambda(\tau/T)$ that arises from the truncation of $x(t)$ to a T -second interval. Using Sec. A-8, where $a = \pi T$, we see that $\lim_{T \rightarrow \infty} [\overline{\mathcal{P}_T(f)}] = \mathcal{P}_x(f)$, so that the periodogram becomes unbiased as $T \rightarrow \infty$. Consequently, the periodogram is said to be *asymptotically unbiased*.

In addition to being unbiased, it is desirable that an estimator be *consistent*. This means that the variance of the estimator should become small as $T \rightarrow \infty$. In this regard, it can be shown that Eq. (6-73a) gives an *inconsistent* estimate of the PSD when $x(t)$ is Gaussian [Bendat and Piersol, 1971].

Of course, window functions other than the triangle can be used to obtain different PSD estimators [Blackman and Tukey, 1958; Jenkins and Watts, 1968]. More modern techniques assume a mathematical model (i.e., form) for the autocorrelation function and estimate parameters for this model. The model is then checked to see if it is consistent with the data. Examples are the *moving average* (MA), *autoregressive* (AR), and *autoregressive-moving average* (ARMA) models [Kay, 1986; Kay and Marple, 1981; Marple, 1986; Scharf, 1991; Shanmugan and Breipohl, 1988].

Spectrum analyzers that use microprocessor-based circuits often utilize numerical techniques to evaluate the PSD. These instruments can evaluate the PSD only for relatively low-frequency waveforms, say, over the audio or ultrasonic frequency range, since real-time digital signal-processing circuits cannot be built to process signals at RF rates.

6-3 DC AND RMS VALUES FOR ERGODIC RANDOM PROCESSES

In Chapter 2, the DC value, the RMS value, and the average power were defined in terms of time average operations. For ergodic processes, the time averages are equivalent to ensemble averages. Thus, the DC value, the RMS value, and the average power (which are all

fundamental concepts in electrical engineering) can be related to the moments of an ergodic random process. In the following summary of these relationships, $x(t)$ is an ergodic random process that may correspond to either a voltage or a current waveform:

1. DC value:

$$X_{dc} \triangleq \langle x(t) \rangle \equiv \bar{x} = m_x \quad (6-74)$$

2. Normalized DC power:

$$P_{dc} \triangleq [\langle x(t) \rangle]^2 \equiv (\bar{x})^2 \quad (6-75)$$

3. RMS value:

$$X_{rms} \triangleq \sqrt{\langle x^2(t) \rangle} \equiv \sqrt{\langle x^2 \rangle} = \sqrt{R_x(0)} = \sqrt{\int_{-\infty}^{\infty} \mathcal{P}_x(f) df} \quad (6-76)$$

4. RMS value of the AC part:

$$\begin{aligned} (X_{rms})_{ac} &\triangleq \sqrt{\langle (x(t) - X_{dc})^2 \rangle} \equiv \sqrt{\langle (x - \bar{x})^2 \rangle} \\ &= \sqrt{\bar{x}^2 - (\bar{x})^2} = \sqrt{R_x(0) - (\bar{x})^2} \\ &= \sqrt{\int_{-\infty}^{\infty} \mathcal{P}_x(f) df - (\bar{x})^2} = \sigma_x = \text{standard deviation} \end{aligned} \quad (6-77)$$

5. Normalized total average power:

$$P \triangleq \langle x^2(t) \rangle \equiv x^2 = R_x(0) = \int_{-\infty}^{\infty} \mathcal{P}_x(f) df \quad (6-78)$$

6. Normalized average power of the AC part:

$$\begin{aligned} P_{ac} &\triangleq \langle (x(t) - X_{dc})^2 \rangle \equiv \langle (x - \bar{x})^2 \rangle \\ &= \bar{x}^2 - (\bar{x})^2 R_x(0) - (\bar{x})^2 \\ &= \int_{-\infty}^{\infty} \mathcal{P}_x(f) df - (\bar{x})^2 = \sigma_x^2 = \text{variance} \end{aligned} \quad (6-79)$$

Furthermore, commonly available laboratory equipment may be used to evaluate the mean, second moment, and variance of an ergodic process. For example, if $x(t)$ is a voltage waveform, \bar{x} can be measured by using a DC voltmeter, and σ_x can be measured by using a “true RMS” (AC coupled) voltmeter.[†] Employing the measurements, we easily obtain the second moment from $\bar{x}^2 = \sigma_x^2 + (\bar{x})^2$. At higher frequencies (e.g., radio, microwave, and optical), \bar{x}^2 and σ_x^2 can be measured by using a calibrated power meter. That is, $\sigma_x^2 = \bar{x}^2 = RP$, where R is the load resistance of the power meter (usually 50Ω) and P is the power meter reading.

[†] Most “true RMS” meters do not have a frequency response down to DC. Thus, they do not measure the true RMS value $\sqrt{\langle x^2(t) \rangle} = \sqrt{\bar{x}^2}$; instead, they measure σ .

Example 6-6 AVERAGE POWER AND RMS VALUE FOR BIPOLAR LINE CODES

Using Eqs. (6-76) and (6-78), evaluate the RMS value and the average power for the bipolar line codes that are described in Example 6-5. See Example6_06.m for the solution.

6-4 LINEAR SYSTEMS

Input–Output Relationships

As developed in Chapter 2, a linear time-invariant system may be described by its impulse response $h(t)$ or, equivalently, by its transfer function $H(f)$. This is illustrated in Fig. 6-6, in which $x(t)$ is the input and $y(t)$ is the output. The input–output relationship is

$$y(t) = h(t) * x(t) \quad (6-80)$$

The corresponding Fourier transform relationship is

$$Y(f) = H(f) X(f) \quad (6-81)$$

If $x(t)$ and $y(t)$ are random processes, these relationships are still valid (just as they were for the case of deterministic functions). In communication systems, $x(t)$ might be a random signal plus (random) noise, or $x(t)$ might be noise alone when the signal is absent. In the case of random processes, autocorrelation functions and PSD functions may be used to describe the frequencies involved. Consequently, we need to address the following question: What are the autocorrelation function and the PSD for the output process $y(t)$ when the autocorrelation and PSD for the input $x(t)$ are known?

THEOREM. *If a wide-sense stationary random process $x(t)$ is applied to the input of a time-invariant linear network with impulse response $h(t)$, the output autocorrelation is*

$$R_y(\tau) = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} h(\lambda_1)h(\lambda_2)R_x(\tau - \lambda_2 + \lambda_1)d\lambda_1d\lambda_2 \quad (6-82a)$$

or

$$R_y(\tau) = h(-\tau) * h(\tau) * R_x(\tau) \quad (6-82b)$$

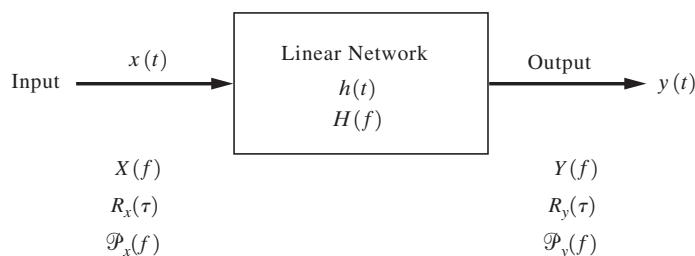


Figure 6-6 Linear system.

The output PSD is

$$\mathcal{P}_y(f) = |H(f)|^2 \mathcal{P}_x(f) \quad (6-83)$$

where $H(f) = \mathcal{F}[h(t)]$.

Equation (6-83) shows that the power transfer function of the network is

$$G_h(f) = \frac{P_y(f)}{P_x(f)} = |H(f)|^2 \quad (6-84)$$

as cited in Eq. (2-143).

Proof. From Eq. (6-80),

$$\begin{aligned} R_y(\tau) &\triangleq \overline{y(t)y(t + \tau)} \\ &= \left[\int_{-\infty}^{\infty} h(\lambda_1)x(t - \lambda_1)d\lambda_1 \right] \left[\int_{-\infty}^{\infty} h(\lambda_2)x(t + \tau - \lambda_2)d\lambda_2 \right] \\ &= \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} h(\lambda_1)h(\lambda_2)\overline{x(t - \lambda_1)x(t + \tau - \lambda_2)}d\lambda_1 d\lambda_2 \end{aligned} \quad (6-85)$$

But

$$\overline{x(t - \lambda_1)x(t + \tau - \lambda_2)} = R_x(t + \tau - \lambda_2 - t + \lambda_1) = R_x(\tau - \lambda_2 + \lambda_1)$$

so Eq. (6-85) is equivalent to Eq. (6-82a). Furthermore, Eq. (6-82a) may be written in terms of convolution operations as

$$\begin{aligned} R_y(\tau) &= \int_{-\infty}^{\infty} h(\lambda_1) \left\{ \int_{-\infty}^{\infty} h(\lambda_2)R_x[(\tau + \lambda_1) - \lambda_2]d\lambda_2 \right\} d\lambda_1 \\ &= \int_{-\infty}^{\infty} h(\lambda_1) \{ h(\tau + \lambda_1) * R_x(\tau + \lambda_1) \} d\lambda_1 \\ &= \int_{-\infty}^{\infty} h(\lambda_1) \{ h[-(-\tau) - \lambda_1] * R_x[-(-\tau) - \lambda_1] \} d\lambda_1 \\ &= h(-\tau) * h[-(-\tau)] * R_x[-(-\tau)] \end{aligned}$$

which is equivalent to the convolution notation of Eq. (6-82b).



The PSD of the output is obtained by taking the Fourier transform of Eq. (6-82b). We obtain

$$\mathcal{F}[R_y(\tau)] = \mathcal{F}[h(-\tau)]\mathcal{F}[h(\tau) * R_x(\tau)]$$

or

$$\mathcal{P}_y(f) = H^*(f)H(f)P_x(f)$$

where $h(t)$ is assumed to be real. This equation is equivalent to Eq. (6-83).

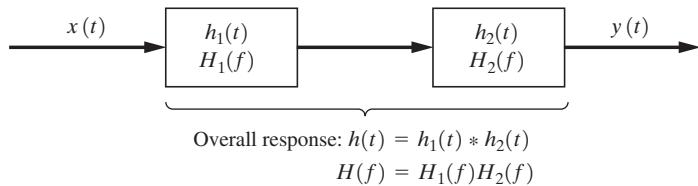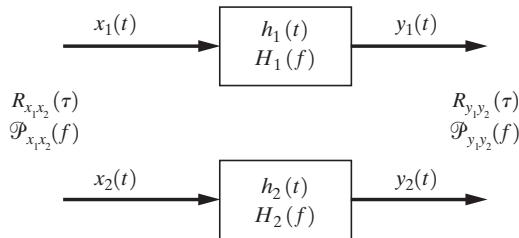**Figure 6-7** Two linear cascaded networks.**Figure 6-8** Two linear systems.

This theorem may be applied to cascaded linear systems. For example, two cascaded networks are shown in Fig. 6-7.

The theorem may also be generalized to obtain the cross-correlation or cross-spectrum of two linear systems, as illustrated in Fig. 6-8. $x_1(t)$ and $y_1(t)$ are the input and output processes of the first system, which has the impulse response $h_1(t)$. Similarly, $x_2(t)$ and $y_2(t)$ are the input and output processes for the second system.

THEOREM. Let $x_1(t)$ and $x_2(t)$ be wide-sense stationary inputs for two time-invariant linear systems, as shown in Fig. 6-8; then the output cross-correlation function is

$$R_{y_1y_2}(\tau) = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} h_1(\lambda_1)h_2(\lambda_2)R_{x_1x_2}(\tau - \lambda_2 + \lambda_1) d\lambda_1 d\lambda_2 \quad (6-86a)$$

or

$$R_{y_1y_2}(\tau) = h_1(-\tau) * h_2(\tau) * R_{x_1x_2}(\tau) \quad (6-86b)$$

Furthermore, by definition, the output cross power spectral density is the Fourier transform of the cross-correlation function; thus,

$$\mathcal{P}_{y_1y_2}(f) = H_1^*(f)H_2(f)\mathcal{P}_{x_1x_2}(f) \quad (6-87)$$

where $\mathcal{P}_{y_1y_2}(f) = \mathcal{F}[R_{y_1y_2}(\tau)]$, $\mathcal{P}_{x_1x_2}(f) = \mathcal{F}[R_{x_1x_2}(\tau)]$, $H_1(f) = \mathcal{F}[h_1(t)]$, and $H_2(f) = \mathcal{F}[h_2(t)]$.

The proof of this theorem is similar to that for the preceding theorem and will be left to the reader as an exercise.

**Example 6–7 OUTPUT AUTOCORRELATION AND PSD
FOR A RC LOW-PASS FILTER**

A *RC* low-pass filter (LPF) is shown in Fig. 6–9. Assume that the input is an ergodic random process with a uniform PSD:

$$\mathcal{P}_x(f) = \frac{1}{2}N_0$$

Then the PSD of the output is

$$\mathcal{P}_y(f) = |H(f)|^2 \mathcal{P}_x(f)$$

which becomes

$$\mathcal{P}_y(f) = \frac{\frac{1}{2}N_0}{1 + (f/B_{3\text{dB}})^2} \quad (6-88)$$

where $B_{3\text{dB}} = 1/(2\pi RC)$. Note that $\mathcal{P}_y(B_{3\text{dB}})/\mathcal{P}_y(0)$ is $\frac{1}{2}$, so $B_{3\text{dB}} = 1/(2\pi RC)$ is indeed the 3-dB bandwidth. Taking the inverse Fourier transform of $\mathcal{P}_y(f)$, as described by Eq. (6–88), we obtain the output autocorrelation function for the *RC* filter.

$$R_y(\tau) = \frac{N_0}{4RC} e^{-|\tau|/(RC)} \quad (6-89)$$


The normalized output power, which is the second moment of the output, is

$$P_y = \overline{y^2} = R_y(0) = \frac{N_0}{4RC} \quad (6-90)$$

Furthermore, the DC value of the output, which is the mean value, is zero, since[†]

$$Y_{\text{DC}} = m_y = \sqrt{\lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \int_{-\varepsilon}^{\varepsilon} \mathcal{P}_y(f) df} = 0 \quad (6-91)$$

The variance of the output is also given by Eq. (6–90) because $\sigma_y^2 = \overline{y^2} - m_y^2$, where $m_y = 0$.

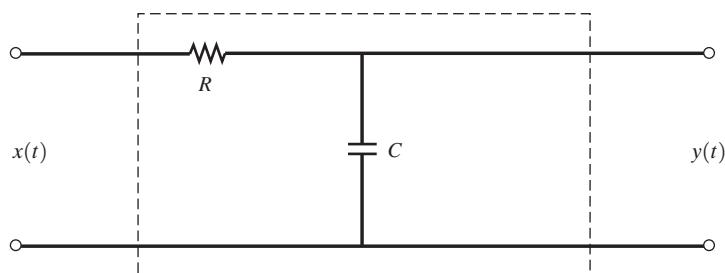

$$H(f) = \frac{1}{1 + j\left(\frac{f}{B_{3\text{dB}}}\right)} \quad \text{where } B_{3\text{dB}} = \frac{1}{2\pi RC}$$

Figure 6–9 RC LPF

[†] When the integral is nonzero, the value obtained is equal to or larger than the square of the mean value.

Example 6-8 SIGNAL-TO-NOISE RATIO AT THE OUTPUT OF A RC LOW-PASS FILTER

Refer to Fig. 6-9 again, and assume that $x(t)$ consists of a sine-wave (deterministic) signal plus white ergodic noise. Thus,

$$x(t) = s_i(t) + n_i(t)$$

and

$$s_i(t) = A_0 \cos(\omega_0 t + \theta_0)$$

where A_0 , ω_0 , and θ_0 are known constants and $\mathcal{P}_{n_i}(f) = N_0/2$. The input signal power is

$$\langle s_i^2(t) \rangle = \frac{A_0^2}{2}$$

and the input noise power is

$$\langle n_i^2 \rangle = \overline{n_i^2} = \int_{-\infty}^{\infty} \mathcal{P}_{n_i}(f) df = \int_{-\infty}^{\infty} \frac{N_0}{2} df = \infty$$

Hence, the input signal-to-noise ratio (SNR) is

$$\left(\frac{S}{N} \right)_{\text{in}} = \frac{\langle s_i^2(t) \rangle}{\langle n_i^2(t) \rangle} = 0 \quad (6-92)$$

Because the system is linear, the output consists of the sum of the filtered input signal plus the filtered input noise:

$$y(t) = s_0(t) + n_0(t)$$

The output signal is

$$\begin{aligned} s_0(t) &= s_i(t) * h(t) \\ &= A_0 |H(f_0)| \cos[\omega_0 t + \theta_0 + \angle H(f_0)] \end{aligned}$$

and the output signal power is

$$\langle s_0^2(t) \rangle = \frac{A_0^2}{2} |H(f_0)|^2 \quad (6-93)$$

From Eq. (6-90) of Example 6-7, the output noise power is

$$\overline{n_0^2} = \frac{N_0}{4RC} \quad (6-94)$$

The output SNR is then

$$\left(\frac{S}{N} \right)_{\text{out}} = \frac{\langle s_0^2(t) \rangle}{\langle n_0^2(t) \rangle} = \frac{\langle s_0^2(t) \rangle}{\overline{n_0^2}} = \frac{2A_0^2 |H(f_0)|^2 RC}{N_0} \quad (6-95)$$

or

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{2A_0^2 RC}{N_0[1 + (2\pi f_0 RC)^2]}$$

The reader is encouraged to use calculus to find the value of RC that maximizes the SNR. It is $RC = 1/(2\pi f_0)$. Thus, for maximum SNR, the filter is designed to have a 3-dB bandwidth equal to f_0 .

6–5 BANDWIDTH MEASURES

Several bandwidth measures were defined in Sec. 2–9, namely, absolute bandwidth, 3-dB bandwidth, equivalent bandwidth, null-to-null (zero-crossing) bandwidth, bounded bandwidth, power bandwidth, and the FCC bandwidth parameter. These definitions can be applied to evaluate the bandwidth of a wide-sense stationary process $x(t)$, where $\mathcal{P}_x(f)$ replaces $|H(f)|^2$ in the definitions. In this section, we review the equivalent bandwidth and define a new bandwidth measure: RMS bandwidth.

Equivalent Bandwidth

For a wide-sense stationary process $x(t)$, the equivalent bandwidth, as defined by Eq. (2–192), becomes

$$B_{\text{eq}} = \frac{1}{\mathcal{P}_x(f_0)} \int_0^\infty \mathcal{P}_x(f) df = \frac{R_x(0)}{2\mathcal{P}_x(f_0)} \quad (6-96)$$

where f_0 is the frequency at which $\mathcal{P}_x(f)$ is a maximum. This equation is valid for both bandpass and baseband processes. ($f_0 = 0$ is used for baseband processes.)

RMS Bandwidth

The RMS bandwidth is the square root of the second moment of the frequency with respect to a properly normalized PSD. In this case, f , although not random, may be *treated* as a random variable that has the “density function” $\mathcal{P}_x(f)/[\int_{-\infty}^{\infty} \mathcal{P}_x(\lambda) d\lambda]$. This is a nonnegative function in which the denominator provides the correct normalization so that the integrated value of the ratio is unity. Thus, the function satisfies the properties of a PDF.

DEFINITION. If $x(t)$ is a *low-pass* wide-sense stationary process, the *RMS bandwidth* is

$$B_{\text{rms}} = \sqrt{\bar{f}^2} \quad (6-97)$$

where

$$\bar{f}^2 = \int_{-\infty}^{\infty} f^2 \left[\frac{\mathcal{P}_x(f)}{\int_{-\infty}^{\infty} \mathcal{P}_x(\lambda) d\lambda} \right] df = \frac{\int_{-\infty}^{\infty} f^2 \mathcal{P}_x(f) df}{\int_{-\infty}^{\infty} \mathcal{P}_x(\lambda) d\lambda} \quad (6-98)$$

The RMS measure of bandwidth is often used in theoretical comparisons of communication systems because the mathematics involved in the RMS calculation is often easier to carry out than that for other bandwidth measures. However, the RMS bandwidth is not easily measured with laboratory instruments.

THEOREM. *For a wide-sense stationary process $x(t)$, the mean-squared frequency is*

$$\overline{f^2} = \left[-\frac{1}{(2\pi)^2 R(0)} \right] \frac{d^2 R_x(\tau)}{d\tau^2} \Big|_{\tau=0} \quad (6-99)$$

Proof. We know that

$$R_x(\tau) = \int_{-\infty}^{\infty} \mathcal{P}_x(f) e^{j2\pi f\tau} dt$$

Taking the second derivative of this equation with respect to τ , we obtain

$$\frac{d^2 R_x(\tau)}{d\tau^2} = \int_{-\infty}^{\infty} \mathcal{P}_x(f) e^{j2\pi f\tau} (j2\pi f)^2 df$$

Evaluating both sides of this equation at $\tau = 0$ yields

$$\frac{d^2 R_x(\tau)}{d\tau^2} \Big|_{\tau=0} = (j2\pi)^2 \int_{-\infty}^{\infty} f^2 \mathcal{P}_x(f) df$$

Substituting this for the integral in Eq. (6-98), that equation becomes

$$\overline{f^2} = \frac{\int_{-\infty}^{\infty} f^2 \mathcal{P}_x(f) df}{\int_{-\infty}^{\infty} \mathcal{P}_x(\lambda) d\lambda} = \frac{-\frac{1}{(2\pi)^2} \left[\frac{d^2 R_x(\tau)}{d\tau^2} \right]_{\tau=0}}{R_x(0)}$$

which is identical to Eq. (6-99).

The RMS bandwidth for a *bandpass* process can also be defined. Here we are interested in the square root of the second moment about the mean frequency of the *positive* frequency portion of the spectrum.

DEFINITION. If $x(t)$ is a *bandpass* wide-sense stationary process, the *RMS bandwidth* is

$$B_{\text{rms}} = 2\sqrt{\overline{(f - f_0)^2}} \quad (6-100)$$

where

$$\overline{(f - f_0)^2} = \int_0^{\infty} (f - f_0)^2 \left(\frac{\mathcal{P}_x(f)}{\int_0^{\infty} \mathcal{P}_x(\lambda) d\lambda} \right) df \quad (6-101)$$

and

$$f_0 \triangleq \overline{f} = \int_0^\infty f \left(\frac{\mathcal{P}_x(f)}{\int_0^\infty \mathcal{P}_x(\lambda) d\lambda} \right) df \quad (6-102)$$

As a sketch of a typical bandpass PSD will verify, the quantity given by the radical in Eq. (6-100) is analogous to σ_f . Consequently, the factor of 2 is needed to give a reasonable definition for the bandpass bandwidth.

Example 6-9 EQUIVALENT BANDWIDTH AND RMS BANDWIDTH FOR A RC LPF

To evaluate the equivalent bandwidth and the RMS bandwidth for a filter, white noise may be applied to the input. The bandwidth of the output PSD is the bandwidth of the filter, since the input PSD is a constant.

For the RC LPF (Fig. 6-9), the output PSD, for white noise at the input, is given by Eq. (6-88). The corresponding output autocorrelation function is given by Eq. (6-89). When we substitute these equations into Eq. (6-96), the equivalent bandwidth for the RC LPF is

$$B_{eq} = \frac{R_y(0)}{2\mathcal{P}_y(0)} = \frac{N_0/4RC}{2\left(\frac{1}{2}N_0\right)} = \frac{1}{4RC} \text{ hertz} \quad (6-103)$$

Consequently, for a RC LPF, from Eq. (2-147), $B_{3dB} = 1/(2\pi RC)$, and

$$B_{eq} = \frac{\pi}{2} B_{3dB} \quad (6-104)$$

The RMS bandwidth is obtained by substituting Eqs. (6-88) and (6-90) into Eq. (6-98). We obtain

$$B_{rms} = \sqrt{\frac{\int_{-\infty}^{\infty} f^2 \mathcal{P}_y(f) df}{R_y(0)}} = \sqrt{\frac{1}{2\pi^2 RC} \int_{-\infty}^{\infty} \frac{f^2}{(B_{3dB})^2 + f^2} df} \quad (6-105)$$

Examining the integral, we note that the integrand becomes *unity* as $f \rightarrow \pm \infty$, so that the value of the integral is infinity. Thus, $B_{rms} = \infty$ for an RC LPF. For the RMS bandwidth to be finite, the PSD needs to decay faster than $1/|f|^2$ as the frequency becomes large. Consequently, for the RC LPF, the RMS definition is not very useful.

6-6 THE GAUSSIAN RANDOM PROCESS

DEFINITION. A random process $x(t)$ is said to be Gaussian if the random variables

$$x_1 = x(t_1), x_2 = x(t_2), \dots, x_N = x(t_N) \quad (6-106)$$

have an N -dimensional Gaussian PDF for any N and any t_1, t_2, \dots, t_N .

The N -dimensional Gaussian PDF can be written compactly by using matrix notation. Let \mathbf{x} be the *column* vector denoting the N random variables:

$$\mathbf{x} = \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_N \end{bmatrix} = \begin{bmatrix} x(t_1) \\ x(t_2) \\ \vdots \\ x(t_N) \end{bmatrix} \quad (6-107)$$

The N -dimensional Gaussian PDF is

$$f_{\mathbf{x}}(\mathbf{x}) = \frac{1}{(2\pi)^{N/2} |\text{Det } \mathbf{C}|^{1/2}} e^{-(1/2)[(\mathbf{x}-\mathbf{m})^T \mathbf{C}^{-1} (\mathbf{x}-\mathbf{m})]} \quad (6-108)$$

where the mean vector is

$$\mathbf{m} = \bar{\mathbf{x}} = \begin{bmatrix} \bar{x}_1 \\ \bar{x}_2 \\ \vdots \\ \bar{x}_N \end{bmatrix} = \begin{bmatrix} m_1 \\ m_2 \\ \vdots \\ m_N \end{bmatrix} \quad (6-109)$$

and where $(\mathbf{x} - \mathbf{m})^T$ denotes the transpose of the column vector $(\mathbf{x} - \mathbf{m})$.

$\text{Det } \mathbf{C}$ is the determinant of the matrix \mathbf{C} , and \mathbf{C}^{-1} is the inverse of the matrix \mathbf{C} . The covariance matrix is defined by

$$\mathbf{C} = \begin{bmatrix} c_{11} & c_{12} & \cdots & c_{1N} \\ c_{21} & c_{22} & \cdots & c_{2N} \\ \vdots & \vdots & & \vdots \\ c_{N1} & c_{N2} & \cdots & c_{NN} \end{bmatrix} \quad (6-110)$$

where the elements of the matrix are

$$c_{ij} = \overline{(x_i - m_i)(x_j - m_j)} = \overline{[x(t_i) - m_i][x(t_j) - m_j]} \quad (6-111)$$

For a wide-sense stationary process, $m_i = \overline{x(t_i)} = m_j = \overline{x(t_j)} = m$. The elements of the covariance matrix become

$$c_{ij} = R_x(t_j - t_i) - m^2 \quad (6-112)$$

If, in addition, the x_i happen to be uncorrelated, $\overline{x_i x_j} = \bar{x}_i \bar{x}_j$ for $i \neq j$, and the covariance matrix becomes

$$\mathbf{C} = \begin{bmatrix} \sigma^2 & 0 & \cdots & 0 \\ 0 & \sigma^2 & \cdots & 0 \\ \vdots & & \ddots & \vdots \\ 0 & 0 & \cdots & \sigma^2 \end{bmatrix} \quad (6-113)$$

where $\sigma^2 = \overline{x^2} - m^2 = R_x(0) - m^2$. That is, the covariance matrix becomes a diagonal matrix if the random variables are uncorrelated. Using Eq. (6-113) in Eq. (6-108), we can conclude that the Gaussian random variables are independent when they are uncorrelated.

Properties of Gaussian Processes

Some properties of Gaussian processes are as follows:

1. $f_x(\mathbf{x})$ depends only on \mathbf{C} and \mathbf{m} , which is another way of saying that the N -dimensional Gaussian PDF is completely specified by the first- and second-order moments (i.e., means, variances, and covariances).
2. Since the $\{x_i = x(t_i)\}$ are jointly Gaussian, the $x_i = x(t_i)$ are individually Gaussian.
3. When \mathbf{C} is a diagonal matrix, the random variables are uncorrelated. Furthermore, the Gaussian random variables are independent when they are uncorrelated.
4. A linear transformation of a set of Gaussian random variables produces another set of Gaussian random variables.
5. A wide-sense stationary Gaussian process is also strict-sense stationary[†] [Papoulis, 1984, p. 222; Shanmugan and Breipohl, 1988, p. 141].

Property 4 is very useful in the analysis of linear systems. This property, as well as the following theorem, will be proved subsequently.

THEOREM. *If the input to a linear system is a Gaussian random process, the system output is also a Gaussian process.*

Proof. The output of a linear network having an impulse response $h(t)$ is

$$y(t) = h(t) * x(t) = \int_{-\infty}^{\infty} h(t - \lambda)x(\lambda)d\lambda$$

This can be approximated by

$$y(t) = \sum_{j=1}^N h(t - \lambda_j)x(\lambda_j)\Delta\lambda \quad (6-114)$$

which becomes exact as N gets large and $\Delta\lambda \rightarrow 0$.

The output random variables for the output random process are

$$\begin{aligned} y(t_1) &= \sum_{j=1}^N [h(t_1 - \lambda_j)\Delta\lambda]x(\lambda_j) \\ y(t_2) &= \sum_{j=1}^N [h(t_2 - \lambda_j)\Delta\lambda]x(\lambda_j) \\ &\vdots \\ y(t_N) &= \sum_{j=1}^N [h(t_N - \lambda_j)\Delta\lambda]x(\lambda_j) \end{aligned}$$

In matrix notation, these equations become

$$\begin{bmatrix} y_1 \\ y_2 \\ \vdots \\ y_N \end{bmatrix} = \begin{bmatrix} h_{11} & h_{12} & \cdots & h_{1N} \\ h_{21} & h_{22} & \cdots & h_{2N} \\ \vdots & \vdots & \ddots & \vdots \\ h_{N1} & h_{N2} & \cdots & h_{NN} \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_N \end{bmatrix}$$

[†] This follows directly from Eq. (6-112), because the N -dimensional Gaussian PDF is a function only of τ and not the absolute times.

or

$$\mathbf{y} = \mathbf{H}\mathbf{x} \quad (6-115)$$

where the elements of the $N \times N$ matrix \mathbf{H} are related to the impulse response of the linear network by

$$h_{ij} = [h(t_i - \lambda_j)] \Delta\lambda \quad (6-116)$$

We will now show that \mathbf{y} is described by an N -dimensional Gaussian PDF when \mathbf{x} is described by an N -dimensional Gaussian PDF. This may be accomplished by using the theory for a multivariate functional transformation, as given in Appendix B. From Eq. (B-99), the PDF of \mathbf{y} is

$$f_y(\mathbf{y}) = \frac{f_x(\mathbf{x})}{|J(\mathbf{y}/\mathbf{x})|} \Big|_{\mathbf{x} = H^{-1}\mathbf{y}} \quad (6-117)$$

The Jacobian is

$$J\left(\frac{\mathbf{y}}{\mathbf{x}}\right) = \text{Det} \begin{bmatrix} \frac{dy_1}{dx_1} & \frac{dy_1}{dx_2} & \dots & \frac{dy_1}{dx_N} \\ \frac{dy_2}{dx_1} & \frac{dy_2}{dx_2} & \dots & \frac{dy_2}{dx_N} \\ \vdots & \vdots & & \vdots \\ \frac{dy_N}{dx_1} & \frac{dy_N}{dx_2} & \dots & \frac{dy_N}{dx_N} \end{bmatrix} = \text{Det}[\mathbf{H}] \triangleq K \quad (6-118)$$

where K is a constant. In this problem, $J(\mathbf{y}/\mathbf{x})$ is a *constant* (not a function of \mathbf{x}) because $\mathbf{y} = \mathbf{H}\mathbf{x}$ is a *linear* transformation. Thus,

$$f_y(\mathbf{y}) = \frac{1}{|K|} f_x(\mathbf{H}^{-1}\mathbf{y})$$

or

$$f_y(\mathbf{y}) = \frac{1}{(2\pi)^{N/2} |K| |\text{Det } \mathbf{C}_x|^{1/2}} e^{-(1/2)[(\mathbf{H}^{-1}\mathbf{y} - \mathbf{m}_x)^T \mathbf{C}_x^{-1} (\mathbf{H}^{-1}\mathbf{y} - \mathbf{m}_x)]} \quad (6-119)$$

where the subscript x has been appended to the quantities that are associated with $x(t)$. But we know that $\mathbf{m}_y = \mathbf{H}\mathbf{m}_x$, and from matrix theory, we have the property $[\mathbf{AB}]^T = \mathbf{B}^T \mathbf{A}^T$, so that the exponent of Eq. (6-119) becomes

$$-\frac{1}{2}[(\mathbf{y} - \mathbf{m}_y)^T (\mathbf{H}^{-1})^T] \mathbf{C}_x^{-1} [\mathbf{H}^{-1}(\mathbf{y} - \mathbf{m}_y)] = -\frac{1}{2}[(\mathbf{y} - \mathbf{m}_y)^T \mathbf{C}_y^{-1} (\mathbf{y} - \mathbf{m}_y)] \quad (6-120)$$

where

$$\mathbf{C}_y^{-1} = (\mathbf{H}^{-1})^T \mathbf{C}_x^{-1} \mathbf{H}^{-1} \quad (6-121)$$

or

$$\mathbf{C}_y = \mathbf{H} \mathbf{C}_x \mathbf{H}^T \quad (6-122)$$

Thus, the PDF for \mathbf{y} is

$$f_{\mathbf{y}}(\mathbf{y}) = \frac{1}{(2\pi)^{N/2}|K| |Det \mathbf{C}_x|^{1/2}} e^{-(1/2)(\mathbf{y}-\mathbf{m}_y)^T \mathbf{C}_y^{-1}(\mathbf{y}-\mathbf{m}_y)} \quad (6-123)$$

which is an N -dimensional Gaussian PDF. This completes the proof of the theorem.

If a linear system acts like an integrator or an LPF, the output random variables (of the output random process) tend to be proportional to the sum of the input random variables. Consequently, by applying the central limit theorem (see Appendix B), the output of the integrator or LPF will tend toward a Gaussian random process when the input random variables are independent with non-Gaussian PDFs.

Example 6-10 WHITE GAUSSIAN-NOISE PROCESS

Assume that a Gaussian random process $n(t)$ is given that has a PSD of

$$\mathcal{P}_n(f) = \begin{cases} \frac{1}{2} N_0, & |f| \leq B \\ 0, & f \text{ otherwise} \end{cases} \quad (6-124)$$

where B is a positive constant. This describes a *bandlimited white Gaussian* process as long as B is finite, but becomes a completely *white* (all frequencies are present) *Gaussian process* as $B \rightarrow \infty$.

The autocorrelation function for the bandlimited white process is

$$R_n(\tau) = BN_0 \left(\frac{\sin 2\pi B\tau}{2\pi B\tau} \right) \quad (6-125)$$

The total average power is $P = R_n(0) = BN_0$. The mean value of $n(t)$ is zero, since there is no δ function in the PSD at $f = 0$. Furthermore, the autocorrelation function is zero for $\tau = k/(2B)$ when k is a nonzero integer. Therefore, the random variables $n_1 = n(t_1)$ and $n_2 = n(t_2)$ are uncorrelated when $t_2 - t_1 = \tau = k/(2B)$, $k \neq 0$. For other values of τ , the random variables are correlated. Since $n(t)$ is assumed to be Gaussian, n_1 and n_2 are jointly Gaussian random variables. Consequently, by property 3, the random variables are independent when $t_2 - t_1 = k/(2B)$. They are dependent for other values of t_2 and t_1 . As $B \rightarrow \infty$, $R_n(\tau) \rightarrow \frac{1}{2} N_0 \delta(\tau)$, and the random variables n_1 and n_2 become independent for all values of t_1 and t_2 , provided that $t_1 \neq t_2$. Furthermore, as $B \rightarrow \infty$, the average power becomes infinite. Consequently, a white-noise process is not physically realizable. However, it is a very useful mathematical idealization for system analysis, just as a deterministic impulse is useful for obtaining the impulse response of a linear system, although the impulse itself is not physically realizable.

6-7 BANDPASS PROCESSES[†]

Bandpass Representations

In Sec. 4-1, it was demonstrated that any bandpass waveform could be represented by

$$v(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} \quad (6-126a)$$

[†] In some other texts these are called *narrowband noise processes*, which is a misnomer because they may be wideband or narrowband.

or, equivalently, by

$$v(t) = x(t)\cos\omega_c t - y(t)\sin\omega_c t \quad (6-126b)$$

and

$$v(t) = R(t) \cos[\omega_c t + \theta(t)] \quad (6-126c)$$

where $g(t)$ is the complex envelope, $R(t)$ is the real envelope, $\theta(t)$ is the phase, and $x(t)$ and $y(t)$ are the quadrature components. Thus, the complex envelope is

$$g(t) = |g(t)|e^{j\angle g(t)} = R(t)e^{j\theta(t)} = x(t) + jy(t) \quad (6-127a)$$

with the relationships

$$R(t) = |g(t)| = \sqrt{x^2(t) + y^2(t)} \quad (6-127b)$$

$$\theta(t) = \angle g(t) = \tan^{-1} \left[\frac{y(t)}{x(t)} \right] \quad (6-127c)$$

$$x(t) = R(t) \cos \theta(t) \quad (6-127d)$$

and

$$y(t) = R(t) \sin \theta(t) \quad (6-127e)$$

Furthermore, the spectrum of $v(t)$ is related to that of $g(t)$ by Eq. (4–12), which is

$$V(f) = \frac{1}{2} [G(f - f_c) + G*(-f - f_c)] \quad (6-128)$$

In Chapters 4 and 5, the bandpass representation was used to analyze communication systems from a *deterministic* viewpoint. Here, we extend the representation to random processes, which may be random signals, noise, or signals corrupted by noise.

If $v(t)$ is a bandpass random process containing frequencies in the vicinity of $\pm f_c$, then $g(t)$, $x(t)$, $y(t)$, $R(t)$, and $\theta(t)$ will be baseband processes. In general, $g(t)$ is a complex process (as described in Sec. 6–1), and $x(t)$, $y(t)$, $R(t)$, and $\theta(t)$ are always real processes. This is readily seen from a Fourier series expansion of $v(t)$, as demonstrated by Eqs. (4–5) through (4–8), where the Fourier series coefficients form a set of random variables, since $v(t)$ is a random process. Furthermore, if $v(t)$ is a Gaussian random process, the Fourier series coefficients consist of a set of *Gaussian* random variables because they are obtained by linear operations on $v(t)$. Similarly, when $v(t)$ is a Gaussian process, $g(t)$, $x(t)$, and $y(t)$ are Gaussian processes, since they are linear functions of $v(t)$. However, $R(t)$ and $\theta(t)$ are not Gaussian, because they are nonlinear functions of $v(t)$. The first-order PDF for these processes will be evaluated in Example 6–13.

We now need to address the topic of stationarity as applied to the bandpass representation.

THEOREM. *If $x(t)$ and $y(t)$ are jointly wide-sense stationary (WSS) processes, the real bandpass process*

$$v(t) = \operatorname{Re}\{g(t)e^{j\omega_c t}\} = x(t)\cos\omega_c t - y(t)\sin\omega_c t \quad (6-129a)$$

will be WSS if and only if

$$1. \quad \overline{x(t)} = \overline{y(t)} = 0 \quad (6-129b)$$

$$2. \quad R_x(\tau) = R_y(\tau) \quad (6-129c)$$

and

$$3. \quad R_{xy}(\tau) = -R_{yx}(\tau) \quad (6-129d)$$

Proof. The requirements for WSS are that $\overline{v(t)}$ be constant and $R_v(t, t + \tau)$ be a function only of τ . We see that $\overline{v(t)} = \overline{x(t)} \cos \omega_c t - \overline{y(t)} \sin \omega_c t$ is a constant for any value of t only if $\overline{x(t)} = \overline{y(t)} = 0$. Thus, condition 1 is required.

The conditions required to make $R_v(t, t + \tau)$ only a function of τ are found as follows:

$$\begin{aligned} R_v(t, t + \tau) &= \overline{v(t)v(t + \tau)} \\ &= \overline{[x(t) \cos \omega_c t - y(t) \sin \omega_c t][x(t + \tau) \cos \omega_c(t + \tau) - y(t + \tau) \sin \omega_c(t + \tau)]} \\ &= \overline{x(t)x(t + \tau)} \cos \omega_c t \cos \omega_c(t + \tau) - \overline{x(t)y(t + \tau)} \cos \omega_c t \sin \omega_c(t + \tau) \\ &\quad - \overline{y(t)x(t + \tau)} \sin \omega_c t \cos \omega_c(t + \tau) + \overline{y(t)y(t + \tau)} \sin \omega_c t \sin \omega_c(t + \tau) \end{aligned}$$

or

$$\begin{aligned} R_v(t, t + \tau) &= R_x(\tau) \cos \omega_c t \cos \omega_c(t + \tau) - R_{xy}(\tau) \cos \omega_c t \sin \omega_c(t + \tau) \\ &\quad - R_{yx}(\tau) \sin \omega_c t \cos \omega_c(t + \tau) + R_y(\tau) \sin \omega_c t \sin \omega_c(t + \tau) \end{aligned}$$

When we use trigonometric identities for products of sines and cosines, this equation reduces to

$$\begin{aligned} R_v(t, t + \tau) &= \frac{1}{2} [R_x(\tau) + R_y(\tau)] \cos \omega_c \tau + \frac{1}{2} [R_x(\tau) - R_y(\tau)] \cos \omega_c(2t + \tau) \\ &\quad - \frac{1}{2} [R_{xy}(\tau) - R_{yx}(\tau)] \sin \omega_c \tau - \frac{1}{2} [R_{xy}(\tau) + R_{yx}(\tau)] \sin \omega_c(2t + \tau) \end{aligned}$$

The autocorrelation for $v(t)$ can be made to be a function of τ only if the terms involving t are set equal to zero. That is, $[R_x(\tau) - R_y(\tau)] = 0$ and $[R_{xy}(\tau) + R_{yx}(\tau)] = 0$. Thus, conditions 2 and 3 are required.

If conditions 1 through 3 of Eq. (6-129) are satisfied so that $v(t)$ is WSS, properties 1 through 5 of Eqs. (6-133a) through (6-133e) are valid. Furthermore, the $x(t)$ and $y(t)$ components of $v(t) = x(t) \cos \omega_c t - y(t) \sin \omega_c t$ satisfy properties 6 through 14, as described by Eqs. (6-133f) through (6-133n), when conditions 1 through 3 are satisfied. These properties are highly useful in analyzing the random processes at various points in communication systems.

For a given bandpass waveform, the description of the complex envelope $g(t)$ is not unique. This is easily seen in Eq. (6-126), where the choice of the value for the parameter f_c is left to our discretion. Consequently, in the representation of a given bandpass waveform $v(t)$, the frequency components that are present in the corresponding complex envelope $g(t)$ depend on the value of f_c that is chosen in the model. Moreover, in representing random processes, one is often interested in having a representation for a WSS bandpass process with

certain PSD characteristics. In this case, it can be shown that $\text{Re}\{(-j)g(t)e^{j\omega_c t}\}$ gives the same PSD as $\text{Re}\{g(t)e^{j\omega_c t}\}$ when $v(t)$ is a WSS process [Papoulis, 1984, pp. 314–322]. Consequently, $g(t)$ is not unique, and it can be chosen to satisfy some additional desired condition. Yet, properties 1 through 14 will still be satisfied when the conditions of Eq. (6-129) are satisfied.

In some applications, conditions 1 through 3 of Eq. (6-129) are *not* satisfied. This will be the case, for example, when the $x(t)$ and $y(t)$ quadrature components do not have the same power, as in an unbalanced quadrature modulation problem. Another example is when $x(t)$ or $y(t)$ has a DC value. In these cases, the bandpass random process model described by Eq. (6-126) would be nonstationary. Consequently, one is faced with the following question: Can another bandpass model be found that models a WSS $v(t)$, but yet does not require conditions 1 through 3 of Eq. (6-129)? The answer is yes. Let the model of Eq. (6-126) be generalized to include a phase constant θ_c that is a random variable. Then we have the following theorem.

THEOREM. *If $x(t)$ and $y(t)$ are jointly WSS processes, the real bandpass process*

$$v(t) = \text{Re}\{g(t)e^{j(\omega_c t + \theta_c)}\} = x(t) \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c) \quad (6-130)$$

will be WSS when θ_c is an independent random variable uniformly distributed over $(0, 2\pi)$.

This modification of the bandpass model should not worry us, because we can argue that it is actually a better model for physically obtainable bandpass processes. That is, the constant θ_c is often called the *random start-up phase*, since it depends on the “initial conditions” of the physical process. Any noise source or signal source starts up with a random-phase angle when it is turned on, unless it is synchronized by injecting some external signal.

Proof. Using Eq. (6-130) to model our bandpass process, we now demonstrate that this $v(t)$ is wide-sense stationary when $g(t)$ is wide-sense stationary, even though the conditions of Eq. (6-129) may be violated. To show that Eq. (6-130) is WSS, the first requirement is that $\overline{v(t)}$ be a constant:

$$\overline{v(t)} = \overline{\text{Re}\{g(t)e^{j(\omega_c t + \theta_c)}\}} = \text{Re}\left\{\overline{g(t)}e^{j\omega_c t}e^{\overline{j\theta_c}}\right\}$$

But $e^{\overline{j\theta_c}} = 0$, so we have $\overline{v(t)} = 0$, which is a constant. The second requirement is that $R_v(t, t + \tau)$ be only a function of τ :

$$\begin{aligned} R_v(t, t + \tau) &= \overline{v(t)v(t + \tau)} \\ &= \overline{\text{Re}\{g(t)e^{j(\omega_c t + \theta_c)}\} \text{Re}\{g(t + \tau)e^{j(\omega_c t + \omega_c \tau + \theta_c)}\}} \end{aligned}$$

Using the identity $\text{Re}(c_1)\text{Re}(c_2) = \frac{1}{2}\text{Re}(c_1c_2) + \frac{1}{2}\text{Re}(c_1^*c_2)$ and recalling that θ_c is an independent random variable, we obtain

$$\begin{aligned} R_v(t, t + \tau) &= \frac{1}{2}\text{Re}\{\overline{g(t)g(t + \tau)}e^{j(2\omega_c t + \omega_c \tau)}e^{\overline{j2\theta_c}}\} \\ &\quad + \frac{1}{2}\text{Re}\{\overline{g^*(t)g(t + \tau)}e^{j\omega_c \tau}\} \end{aligned}$$

But $\overline{e^{j2\theta_c}} = 0$ and $R_g(\tau) = \overline{g^*(t)g(t + \tau)}$, since $g(t)$ is assumed to be wide-sense stationary. Thus,

$$R_v(t, t + \tau) = \frac{1}{2} \operatorname{Re}\{R_g(\tau)e^{j\omega_c\tau}\} \quad (6-131)$$

The right-hand side of Eq. (6-131) is not a function of t , so $R_v(t, t + \tau) = R_v(\tau)$. Consequently, Eq. (6-130) gives a model for a wide-sense stationary bandpass process.

Furthermore, for this model as described by Eq. (6-130), properties 1 through 5 of Eq. (6-133a) through Eq. (6-133e) are valid, but all the properties 6 through 14 [Eqs. (6-133f) through (6-133h)] are not valid for the $x(t)$ and $y(t)$ components of $v(t) = x(t) \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c)$, unless all the conditions of Eq. (6-129) are satisfied. However, as will be proved later, the detected $x(t)$ and $y(t)$ components at the output of quadrature product detectors (see Fig. 6-11) satisfy properties 6 through 14, provided that the start-up phase of the detectors, θ_0 , is independent of $v(t)$. [Note that the $x(t)$ and $y(t)$ components associated with $v(t)$ at the input to the detector are not identical to the $x(t)$ and $y(t)$ quadrature output waveforms unless $\theta_c = \theta_0$; however, the PSDs may be identical.]

The complex-envelope representation of Eq. (6-130) is quite useful for evaluating the output of detector circuits. For example, if $v(t)$ is a signal-plus-noise process that is applied to a product detector, $x(t)$ is the output process if the reference is $2 \cos(\omega_c t + \theta_c)$ and $y(t)$ is the output process if the reference is $-2 \sin(\omega_c t + \theta_c)$. (See Chapter 4.) Similarly, $R(t)$ is the output process for an envelope detector, and $\theta(t)$ is the output process for a phase detector.

Properties of WSS Bandpass Processes

Theorems giving the relationships between the autocorrelation functions and the PSD of $v(t)$, $g(t)$, $x(t)$, and $y(t)$ can be obtained. These and other theorems are listed subsequently as properties of bandpass random processes. The relationships assume that the bandpass process $v(t)$ is real and WSS.[†] The bandpass nature of $v(t)$ is described mathematically with the aid of Fig. 6-10a, in which

$$\mathcal{P}_v(f) = 0 \quad \text{for } f_2 < |f| < f_1 \quad (6-132)$$

where $0 < f_1 \leq f_c \leq f_2$. Furthermore, a positive constant B_0 is defined such that B_0 is the largest frequency interval between f_c and either band edge, as illustrated in Fig. 6-10a, and $B_0 < f_c$.

The properties are as follows:

1. $g(t)$ is a complex wide-sense-stationary baseband process. (6-133a)


2. $x(t)$ and $y(t)$ are real jointly wide-sense stationary baseband processes. (6-133b)

3. $R_v(\tau) = \frac{1}{2} \operatorname{Re}\{R_g(\tau)e^{j\omega_c\tau}\}$. (6-133c)

4. $\mathcal{P}_v(f) = \frac{1}{4} [\mathcal{P}_g(f - f_c) + \mathcal{P}_g(-f - f_c)]$. (6-133d)

5. $\overline{v^2} = \frac{1}{2} \overline{|g(t)|^2} = R_v(0) = \frac{1}{2} R_g(0)$. (6-133e)

[†] $v(t)$ also has zero mean value, because it is a bandpass process.

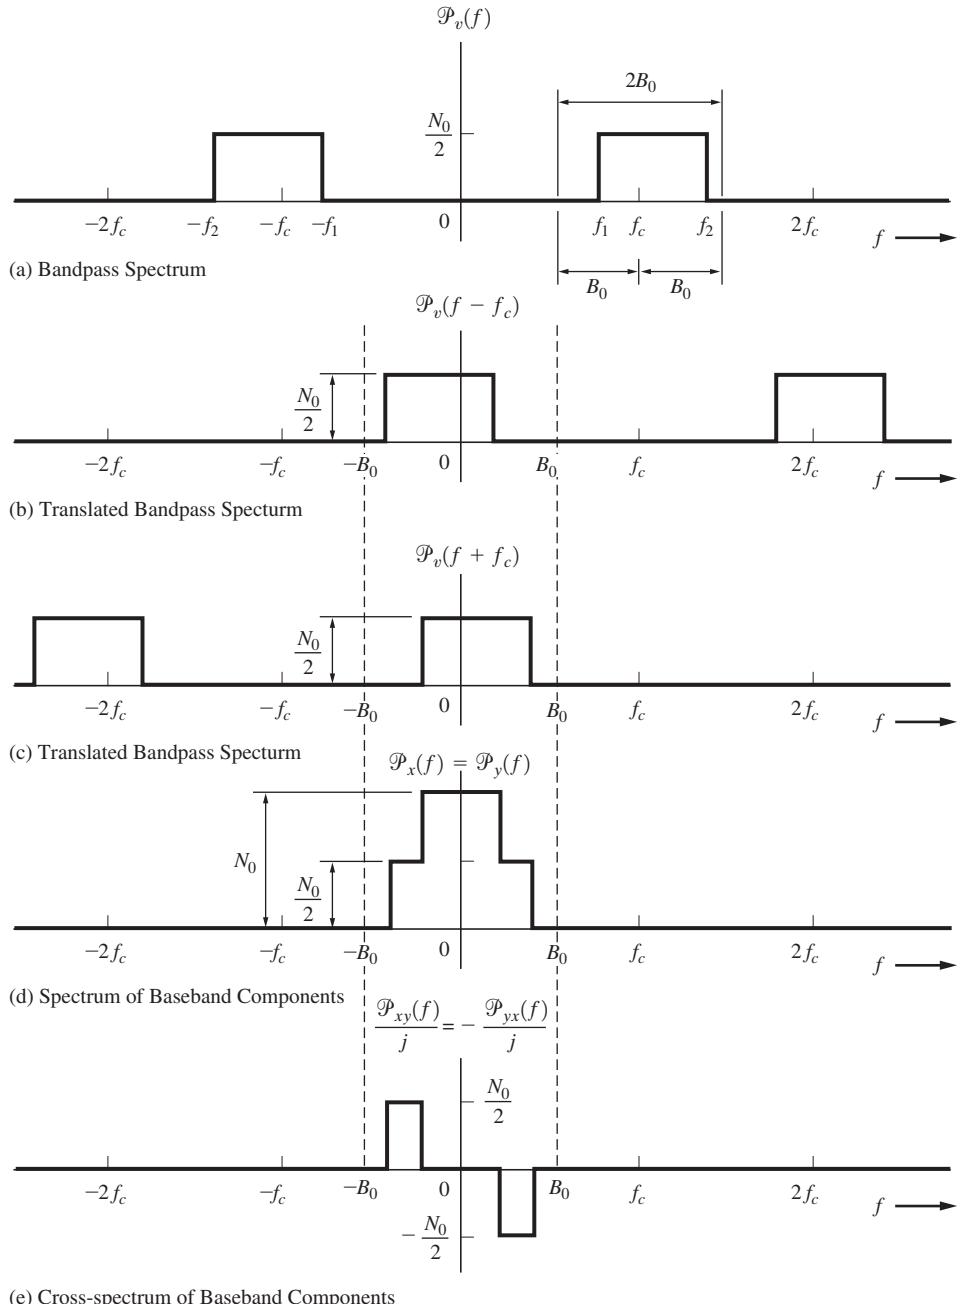**Figure 6-10** Spectra of random process for Example 6-11.

If the bandpass process $v(t)$ is WSS and if conditions 1 through 3 of Eq. (6–129) are satisfied, $v(t)$ can be represented by Eq. (6–129a), where the $x(t)$ and $y(t)$ components satisfy properties 6 through 14 listed below. On the other hand, if $v(t)$ is WSS, but does not satisfy all three conditions of Eq. (6–129), the representation of Eq. (6–129a) is not applicable, because it will not be a WSS model, and consequently, properties 6 through 14 are not applicable. However, for $v(t)$ WSS, the representation of Eq. (6–130) is always applicable, regardless of whether none, some, or all of conditions 1 through 3 of Eq. (6–129) are satisfied and, consequently, none, some, or all of the properties 6 through 14 are satisfied by the $x(t)$ and $y(t)$ components of Eq. (6–130). Furthermore, if the quadrature components of $v(t)$ are recovered by product detector circuits, as shown in Fig. 6–11, where θ_0 is a uniformly distributed random variable that is *independent* of $v(t)$, the *detected* $x(t)$ and $y(t)$ quadrature components satisfy properties 6 through 14. These properties are as follows:[†]

$$6. \quad \overline{x(t)} = \overline{y(t)} = 0. \quad (6-133f)$$

$$7. \quad \overline{v^2(t)} = \overline{x^2(t)} = \overline{y^2(t)} = \frac{1}{2} |g(t)|^2 \\ = R_v(0) = R_x(0) = R_y(0) = \frac{1}{2} R_g(0). \quad (6-133g)$$

$$8. \quad R_x(\tau) = R_y(\tau) = 2 \int_0^\infty \mathcal{P}_v(f) \cos[2\pi(f - f_c)\tau] df. \quad (6-133h)$$

$$9. \quad R_{xy}(\tau) = 2 \int_0^\infty \mathcal{P}_v(f) \sin[2\pi(f - f_c)\tau] df. \quad (6-133i)$$

$$10. \quad R_{xy}(\tau) = -R_{xy}(-\tau) = -R_{xy}(\tau). \quad (6-133j)$$

$$11. \quad R_{xy}(0) = 0. \quad (6-133k)$$

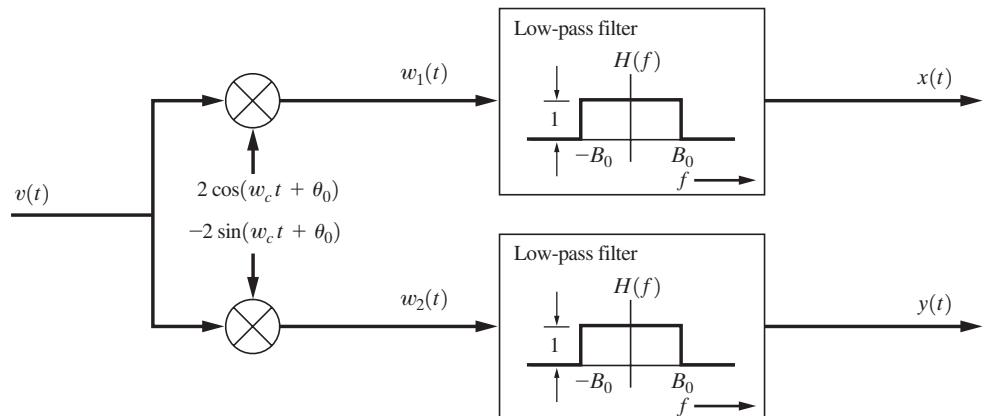


Figure 6–11 Recovery of $x(t)$ and $y(t)$ from $v(t)$

[†] Proofs of these properties will be given after Examples 6–11 and 6–12. Properties 6 through 14 also hold for the $x(t)$ and $y(t)$ components of Eq. (6–129a), provided that the conditions of Eqs. (6–129b, c, and d) are satisfied.

$$12. \quad \mathcal{P}_x(f) = \mathcal{P}_y(f) = \begin{cases} [\mathcal{P}_v(f - f_c) + \mathcal{P}_v(f + f_c)], & |f| < B_0 \\ 0, & f \text{ elsewhere} \end{cases} \quad (6-133l)$$

$$13. \quad \mathcal{P}_{xy}(f) = \begin{cases} j[\mathcal{P}_v(f - f_c) - \mathcal{P}_v(f + f_c)], & |f| < B_0 \\ 0, & f \text{ elsewhere} \end{cases} \quad (6-133m)$$

$$14. \quad \mathcal{P}_{xy}(f) = -\mathcal{P}_{xy}(-f) = -\mathcal{P}_{yx}(f). \quad (6-133n)$$

Additional properties can be obtained when $v(t)$ is a wide-sense stationary *single-sideband (SSB) random process*. If $v(t)$ is SSB about $f = \pm f_c$, then, from Chapter 5, we have

$$g(t) = x(t) \pm j\hat{x}(t) \quad (6-134)$$

where the upper sign is used for USSB and the lower sign is used for LSSB. $\hat{x}(t)$ is the Hilbert transform of $x(t)$. Using Eq. (6-134), we obtain some additional properties:

15. When $v(t)$ is an SSB process about $f = \pm f_c$,

$$R_g(\tau) = 2[R_x(\tau) \pm j\hat{R}_x(\tau)] \quad (6-135a)$$

where $\hat{R}_x(\tau) = [1/(\pi\tau)] * R_x(\tau)$.

16. For USSB processes,

$$\mathcal{P}_g(f) = \begin{cases} 4\mathcal{P}_x(f), & f > 0 \\ 0, & f < 0 \end{cases} \quad (6-135b)$$

17. For LSSB processes,

$$\mathcal{P}_g(f) = \begin{cases} 0, & f > 0 \\ 4\mathcal{P}_x(f), & f < 0 \end{cases} \quad (6-135c)$$

From property 9, we see that if the PSD of $v(t)$ is even about $f = f_c$, $f > 0$, then $R_{xy}(\tau) \equiv 0$ for all τ . Consequently, $x(t)$ and $y(t)$ will be *orthogonal* processes when $\mathcal{P}_v(f)$ is even about $f = f_c$, $f > 0$. Furthermore, if, in addition, $v(t)$ is Gaussian, $x(t)$ and $y(t)$ will be independent Gaussian random processes.

Example 6–11 SPECTRA FOR THE QUADRATURE COMPONENTS OF WHITE BANDPASS NOISE

Assume that $v(t)$ is an independent bandlimited white-noise process. Let the PSD of $v(t)$ be $N_0/2$ over the frequency band $f_1 \leq |f| \leq f_2$, as illustrated in Fig. 6–10a. Using property 12, we can evaluate the PSD for $x(t)$ and $y(t)$. This is obtained by summing the translated spectra $\mathcal{P}_v(f - f_c)$ and $\mathcal{P}_v(f + f_c)$, illustrated in Fig. 6–10b and c to obtain $\mathcal{P}_x(f)$ shown in Fig. 6–10d. Note that the spectrum $\mathcal{P}_x(f)$ is zero for $|f| > B_0$. Similarly, the cross-spectrum, $\mathcal{P}_{xy}(f)$, can be obtained by using property 13. This is shown in Fig. 6–10e. It is interesting to note that, over the frequency range where the cross-spectrum is nonzero, it is completely imaginary, since $\mathcal{P}_v(f)$ is a real function. In addition, the cross-spectrum is always an odd function.

The total normalized power is

$$P = \int_{-\infty}^{\infty} \mathcal{P}_v(f) df = N_0(f_2 - f_1)$$

The same result is obtained if the power is computed from $\mathcal{P}_x(f) = \mathcal{P}_y(f)$ by using property 7:

$$P = R_x(0) = R_y(0) = \int_{-\infty}^{\infty} \mathcal{P}_x(f) df = N_0(f_2 - f_1)$$

Example 6–12 PSD FOR A BPSK SIGNAL

The PSD for a BPSK signal that is modulated by random data will now be evaluated. In Chapters 2 and 5, it was demonstrated that the BPSK signal can be represented by

$$v(t) = x(t) \cos(\omega_c t + \theta_c) \quad (6-136)$$

where $x(t)$ represents the polar binary data (see Example 2–22) and θ_c is the random start-up phase.

The PSD of $v(t)$ is found by using property 4, where $g(t) = x(t) + j0$. Thus,

$$\mathcal{P}_v(f) = \frac{1}{4} [\mathcal{P}_x(f - f_c) + \mathcal{P}_x(-f - f_c)] \quad (6-137)$$

Now we need to find the PSD for the polar binary modulation $x(t)$. This was calculated in Example 6–4, where the PSD of a polar baseband signal with equally likely binary data was evaluated. Substituting Eq. (6–62) or, equivalently, Eq. (6–67) into Eq. (6–137), we obtain the PSD for the BPSK signal:

$$\mathcal{P}_v(f) = \frac{T_b}{4} \left\{ \left[\frac{\sin \pi(f - f_c)T_b}{\pi(f - f_c)T_b} \right]^2 + \left[\frac{\sin \pi(f + f_c)T_b}{\pi(f + f_c)T_b} \right]^2 \right\} \quad (6-138)$$

A sketch of this result is shown in Fig. 6–12. The result was cited earlier, in Eq. (2–200), where bandwidths were also evaluated.

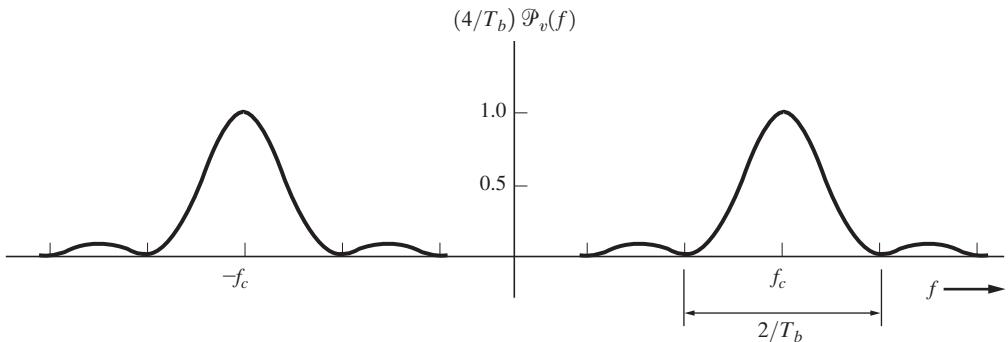


Figure 6–12 Power spectrum for a BPSK signal.

Proofs of Some Properties

Giving proofs for all 17 properties listed previously would be a long task. We therefore present detailed proofs only for some of them. Proofs that involve similar mathematics will be left to the reader as exercise problems.

Properties 1 through 3 have already been proven in the discussion preceding Eq. (6-131). Property 4 follows readily from property 3 by taking the Fourier transform of Eq. (6-133c). The mathematics is identical to that used in obtaining Eq. (4-25). Property 5 also follows directly from property 3. Property 6 will be shown subsequently. Property 7 follows from properties 3 and 8. As we will see later, properties 8 through 11 follow from properties 12 and 13.

Properties 6 and 12 are obtained with the aid of Fig. 6-11. That is, as shown by Eq. (4-77) in Sec. 4-13, $x(t)$ and $y(t)$ can be recovered by using product detectors. Thus,

$$x(t) = [2v(t) \cos(\omega_c t + \theta_0)] * h(t) \quad (6-139)$$

and

$$y(t) = -[2v(t) \sin(\omega_c t + \theta_0)] * h(t) \quad (6-140)$$

where $h(t)$ is the impulse response of an ideal LPF that is bandlimited to B_0 hertz and θ_0 is an independent random variable that is uniformly distributed over $(0, 2\pi)$ and corresponds to the random start-up phase of a phase-incoherent receiver oscillator. Property 6 follows from Eq. (6-139) by taking the ensemble average since $\overline{\cos(\omega_c t + \theta_0)} = 0$ and $\overline{\sin(\omega_c t + \theta_0)} = 0$. Property 12, which is the PSD for $x(t)$, can be evaluated by first evaluating the autocorrelation for $w_1(t)$ of Fig. 6-11:

$$\begin{aligned} w_1(t) &= 2v(t) \cos(\omega_c t + \theta_0) \\ R_{w_1}(\tau) &= \overline{w_1(t)w_1(t + \tau)} \\ &= \overline{4v(t)v(t + \tau) \cos(\omega_c t + \theta_0) \cos(\omega_c(t + \tau) + \theta_0)} \end{aligned}$$

But θ_0 is an independent random variable; hence, using a trigonometric identity, we have

$$R_{w_1}(\tau) = 4\overline{v(t)v(t + \tau)} \left[\frac{1}{2} \cos \omega_c \tau + \frac{1}{2} \overline{\cos(2\omega_c t + \omega_c \tau + 2\theta_0)} \right]$$

However, $\overline{\cos(2\omega_c t + \omega_c \tau + 2\theta_0)} = 0$, so

$$R_{w_1}(\tau) = 2R_v(\tau) \cos \omega_c \tau \quad (6-141)$$

The PSD of $w_1(t)$ is obtained by taking the Fourier transform of Eq. (6-141).

$$\mathcal{P}_{w_1}(f) = 2\mathcal{P}_v(f) * \left[\frac{1}{2} \delta(f - f_c) + \frac{1}{2} \delta(f + f_c) \right]$$

or

$$\mathcal{P}_{w_1}(f) = \mathcal{P}_v(f - f_c) + \mathcal{P}_v(f + f_c)$$

Finally, the PSD of $x(t)$ is

$$\mathcal{P}_x(f) = |H(f)|^2 \mathcal{P}_{w_1}(f)$$

or

$$\mathcal{P}_x(f) = \begin{cases} [\mathcal{P}_v(f - f_c) + \mathcal{P}_v(f + f_c)], & |f| < B_0 \\ 0, & \text{otherwise} \end{cases}$$

which is property 12.

Property 8 follows directly from property 12 by taking the inverse Fourier transform:

$$\begin{aligned} R_x(\tau) &= \mathcal{F}^{-1}[\mathcal{P}_x(f)] \\ &= \int_{-B_0}^{B_0} \mathcal{P}_v(f - f_c) e^{j2\pi f\tau} df + \int_{-B_0}^{B_0} \mathcal{P}_v(f + f_c) e^{j2\pi f\tau} df \end{aligned}$$

Making changes in the variables, let $f_1 = -f + f_c$ in the first integral, and let $f_1 = f + f_c$ in the second integral. Then we have

$$R_x(\tau) = \int_{f_c - B_0}^{f_c + B_0} \mathcal{P}_v(-f_1) e^{j2\pi(f_c - f_1)\tau} df_1 + \int_{f_c - B_0}^{f_c + B_0} \mathcal{P}_v(f_1) e^{j2\pi(f_1 - f_c)\tau} df_1$$

But $\mathcal{P}_v(-f) = \mathcal{P}_v(f)$, since $v(t)$ is a real process. Furthermore, because $v(t)$ is bandlimited, the limits on the integrals may be changed to integrate over the interval $(0, \infty)$. Thus,

$$R_x(\tau) = 2 \int_0^\infty \mathcal{P}_v(f_1) \left[\frac{e^{j2\pi(f_1 - f_c)\tau} + e^{-j2\pi(f_1 - f_c)\tau}}{2} \right] df_1$$

which is identical to property 8.

In a similar way, properties 13 and 9 can be shown to be valid. Properties 10 and 14 follow directly from property 9.

For SSB processes, $y(t) = \pm \hat{x}(t)$. Property 15 is then obtained as follows:

$$\begin{aligned} R_{gg}(\tau) &= \overline{g^*(t)g(t + \tau)} \\ &= \overline{[x(t) \mp j\hat{x}(t)][x(t + \tau) \pm j\hat{x}(t + \tau)]} \\ &= \overline{[x(t)x(t + \tau) + \hat{x}(t)\hat{x}(t + \tau)]} \\ &\quad \pm j[\overline{-\hat{x}(t)x(t + \tau)} + \overline{x(t)\hat{x}(t + \tau)}] \end{aligned} \tag{6-142}$$

Employing the definition of a cross-correlation function and using property 10, we have

$$R_{x\hat{x}}(\tau) = \overline{x(t)\hat{x}(t + \tau)} = -R_{\hat{x}x}(\tau) = -\overline{\hat{x}(t)x(t + \tau)} \tag{6-143}$$

Furthermore, knowing that $\hat{x}(t)$ is the convolution of $x(t)$ with $1/(\pi t)$, we can demonstrate (see Prob. 6-46) that

$$R_{\hat{x}}(\tau) = R_x(\tau) \tag{6-144}$$

and

$$R_{x\hat{x}}(\tau) = \hat{R}_{xx}(\tau) \tag{6-145}$$

Thus, Eq. (6-142) reduces to property 15. Taking the Fourier transform of Eq. (6-135a), we obtain properties 16 and 17.

As demonstrated by property 6, the detected mean values $\bar{x}(t)$ and $\bar{y}(t)$ are zero when $v(t)$ is independent of θ_0 . However, from Eqs. (6-139) and (6-140), we realize that a less restrictive condition is required. That is, $\bar{x}(t)$ or $\bar{y}(t)$ will be zero if $v(t)$ is orthogonal to $\cos(\omega_c t + \theta_0)$ or $\sin(\omega_c t + \theta_0)$, respectively; otherwise, they will be nonzero. For example, suppose that $v(t)$ is

$$v(t) = 5 \cos(\omega_c t + \theta_c) \quad (6-146)$$

where θ_c is a random variable uniformly distributed over $(0, 2\pi)$. If the reference $2 \cos(\omega_c t + \theta_0)$ of Fig. 6-11 is phase coherent with $\cos(\omega_c t + \theta_c)$ (i.e., $\theta_0 \equiv \theta_c$), the output of the upper LPF will have a mean value of 5. On the other hand, if the random variables θ_0 and θ_c are independent, then $v(t)$ will be orthogonal to $\cos(\omega_c t + \theta_0)$, and \bar{x} of the output of the upper LPF of Fig. 6-11 will be zero. The output DC value (i.e., the time average) will be $5 \cos(\theta_0 - \theta_c)$ in either case.

No properties have been given pertaining to the autocorrelation or the PSD of $R(t)$ and $\theta(t)$ as related to the autocorrelation and PSD of $v(t)$. In general, this is a difficult problem, because $R(t)$ and $\theta(t)$ are nonlinear functions of $v(t)$. The topic is discussed in more detail after Example 6-13.

As indicated previously, $x(t)$, $y(t)$, and $g(t)$ are Gaussian processes when $v(t)$ is Gaussian. However, as we will demonstrate, $R(t)$ and $\theta(t)$ are not Gaussian processes when $v(t)$ is Gaussian.

Example 6-13 PDF FOR THE ENVELOPE AND PHASE FUNCTIONS OF A GAUSSIAN BANDPASS PROCESS

Assume that $v(t)$ is a wide-sense stationary *Gaussian* process with finite PSD that is symmetrical about $f = \pm f_c$. We want to find the one-dimensional PDF for the envelope process $R(t)$. Of course, this is identical to the process that appears at the output of an envelope detector when the input is a Gaussian process, such as Gaussian noise. Similarly, the PDF for the phase $\theta(t)$ (the output of a phase detector) will also be obtained.

The problem is solved by evaluating the two-dimensional random-variable transformation of $x = x(t)$ and $y = y(t)$ into $R = R(t)$ and $\theta = \theta(t)$, which is illustrated in Fig. 6-13. Because $v(t)$ is Gaussian, we know that x and y are jointly *Gaussian*. For $v(t)$ having a finite PSD that is symmetrical about $f = \pm f_c$, the mean values for x and y are both zero and the variances of both are

$$\sigma^2 = \sigma_x^2 = \sigma_y^2 = R_v(0) \quad (6-147)$$

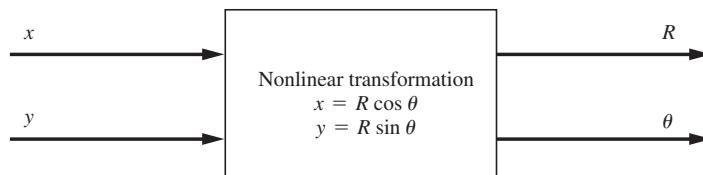


Figure 6-13 Nonlinear (polar) transformation of two Gaussian random variables.

Furthermore, x and y are independent, because they are uncorrelated Gaussian random variables [since the PSD of $v(t)$ is symmetrical about $f = \pm f_c$]. Therefore, the joint PDF of x and y is

$$f_{xy}(x, y) = \frac{1}{2\pi\sigma^2} e^{-(x^2+y^2)/(2\sigma^2)} \quad (6-148)$$

The joint PDF for R and θ is obtained by the two-dimensional transformation of x and y into R and θ .

$$\begin{aligned} f_{R\theta}(R, \theta) &= \frac{f_{xy}(x, y)}{|J[(R, \theta)/(x, y)]|} \Bigg|_{\substack{x = R \cos \theta \\ y = R \sin \theta}} \\ &= f_{xy}(x, y) \left| J\left(\frac{(x, y)}{(R, \theta)}\right) \right|_{\substack{x = R \cos \theta \\ y = R \sin \theta}} \end{aligned} \quad (6-149)$$

We will work with $J[(x, y)/(R, \theta)]$ instead of $J[(R, \theta)/(x, y)]$, because in this problem the partial derivatives in the former are easier to evaluate than those in the latter. We have

$$J\left(\frac{(x, y)}{(R, \theta)}\right) = \text{Det} \begin{bmatrix} \frac{\partial x}{\partial R} & \frac{\partial x}{\partial \theta} \\ \frac{\partial y}{\partial R} & \frac{\partial y}{\partial \theta} \end{bmatrix}$$

where x and y are related to R and θ as shown in Fig. 6-13. Of course, $R \geq 0$, and θ falls in the interval $(0, 2\pi)$, so that

$$\begin{aligned} J\left(\frac{(x, y)}{(R, \theta)}\right) &= \text{Det} \begin{bmatrix} \cos \theta & -R \sin \theta \\ \sin \theta & R \cos \theta \end{bmatrix} \\ &= R[\cos^2 \theta + \sin^2 \theta] = R \end{aligned} \quad (6-150)$$

Substituting Eqs. (6-148) and (6-150) into Eq. (6-149), the joint PDF of R and θ is

$$f_{R\theta}(R, \theta) = \begin{cases} \frac{R}{2\pi\sigma^2} e^{-R^2/2\sigma^2}, & R \geq 0 \text{ and } 0 \leq \theta \leq 2\pi \\ 0, & R \text{ and } \theta \text{ otherwise} \end{cases} \quad (6-151)$$

The PDF for the envelope is obtained by calculating the marginal PDF:

$$f_R(R) = \int_{-\infty}^{\infty} f_{R\theta}(R, \theta) d\theta = \int_0^{2\pi} \frac{R}{2\pi\sigma^2} e^{-R^2/(2\sigma^2)} d\theta, \quad R \geq 0$$

or

$$f_R(R) = \begin{cases} \frac{R}{\sigma^2} e^{-R^2/(2\sigma^2)}, & R \geq 0 \\ 0, & R \text{ otherwise} \end{cases} \quad (6-152)$$

This is called a *Rayleigh* PDF. Similarly, the PDF of θ is obtained by integrating out R in the joint PDF:

$$f_{\theta}(\theta) = \begin{cases} \frac{1}{2\pi}, & 0 \leq \theta \leq 2\pi \\ 0, & \text{otherwise} \end{cases} \quad (6-153)$$

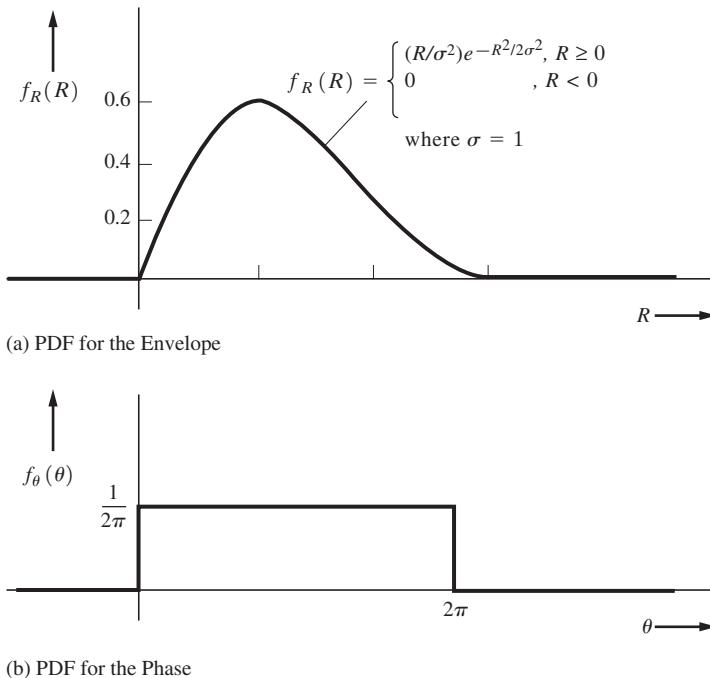


Figure 6-14 PDF for the envelope and phase of a Gaussian process.

This is called a *uniform* PDF. Sketches of these PDFs are shown in Fig. 6-14.

The random variables $R = R(t_1)$ and $\theta = \theta(t_1)$ are independent, since $f_{R,\theta}(R, \theta) = f_R(R)f_\theta(\theta)$. However, $R(t)$ and $\theta(t)$ are *not* independent random processes because the random variables $R = R(t_1)$ and $\theta = \theta(t_1 + \tau)$ are not independent for all values of τ . To verify this statement, a four-dimensional transformation problem consisting of transforming the random variables $(x(t_1), x(t_2), y(t_1), y(t_2))$ into $(R(t_1), R(t_2), \theta(t_1), \theta(t_2))$ needs to be worked out, where $t_2 - t_1 = \tau$ (Davenport and Root, 1958).

The evaluation of the autocorrelation function for the envelope $R(t)$ generally requires that the two-dimensional density function of $R(t)$ be known, since $R_R(\tau) = \overline{R(t)R(t + \tau)}$. However, to obtain this joint density function for $R(t)$, the four-dimensional density function of $(R(t_1), R(t_2), \theta(t_1), \theta(t_2))$ must first be obtained by a four-dimensional transformation, as discussed in the preceding paragraph. A similar problem is worked to evaluate the autocorrelation function for the phase $\theta(t)$. These difficulties in evaluating the autocorrelation function for $R(t)$ and $\theta(t)$ arise because they are nonlinear functions of $v(t)$. The PSDs for $R(t)$ and $\theta(t)$ are obtained by taking the Fourier transform of the autocorrelation function.

6-8 MATCHED FILTERS

General Results

In preceding sections of this chapter, we developed techniques for describing random processes and *analyzing* the effect of linear systems on these processes. In this section, we develop a technique for *designing* a linear filter to minimize the effect of noise while maximizing the signal.

A general representation for a matched filter is illustrated in Fig. 6-15. The input signal is denoted by $s(t)$ and the output signal by $s_0(t)$. Similar notation is used for the noise. This filter is used in applications where the signal may or may not be present, but when the signal is present, its waveshape is known. (It will become clear in Examples 6-14 and 6-15, how the filter can be applied to digital signaling and radar problems.) The signal is assumed to be (absolutely) time limited to the interval $(0, T)$ and is zero otherwise. The PSD, $\mathcal{P}_n(f)$, of the additive input noise $n(t)$ is also known. We wish to determine the filter characteristic such that the instantaneous output signal power is maximized at a sampling time t_0 , compared with the average output noise power. That is, we want to find $h(t)$ or, equivalently, $H(f)$, so that

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{s_0^2(t)}{n_0^2(t)} \quad (6-154)$$

is a maximum at $t = t_0$. This is the matched-filter design criterion.

The matched filter does *not* preserve the input signal waveshape, as that is not its objective. Rather, the objective is to distort the input signal waveshape and filter the noise so that at the sampling time t_0 , the output signal level will be as large as possible with respect to the RMS (output) noise level. In Chapter 7 we demonstrate that, under certain conditions, the filter minimizes the probability of error when receiving digital signals.

THEOREM. *The matched filter is the linear filter that maximizes $(S/N)_{\text{out}} = s_0^2(t_0)/n_0^2(t)$ of Fig. 6-15 and that has a transfer function given by[†]*

$$H(f) = K \frac{S^*(f)}{\mathcal{P}_n(f)} e^{-j\omega t_0} \quad (6-155)$$

where $S(f) = \mathcal{F}[s(t)]$ is the Fourier transform of the known input signal $s(t)$ of duration T sec, $\mathcal{P}_n(f)$ is the PSD of the input noise, t_0 is the sampling time when $(S/N)_{\text{out}}$ is evaluated, and K is an arbitrary real nonzero constant.

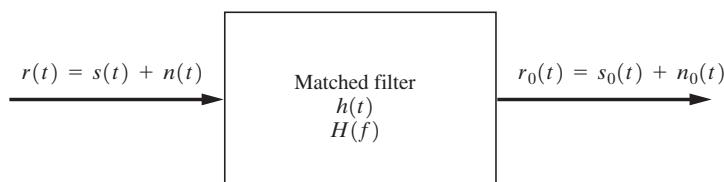


Figure 6-15 Matched filter.

[†] It appears that this formulation of the matched filter was first discovered independently by B. M. Dwork and T. S. George in 1950; the result for the white-noise case was shown first by D. O. North in 1943 [Root, 1987].

Proof. The output signal at time t_0 is

$$s_0(t_0) = \int_{-\infty}^{\infty} H(f)S(f)e^{j\omega t_0} df$$

The average power of the output noise is

$$\overline{n_0^2(t)} = R_{n_0}(0) = \int_{-\infty}^{\infty} |H(f)|^2 \mathcal{P}_n(f) df$$

Substituting these equations into Eq. (6–154), we get

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{\left| \int_{-\infty}^{\infty} H(f)S(f)e^{j\omega t_0} df \right|^2}{\int_{-\infty}^{\infty} |H(f)|^2 \mathcal{P}_n(f) df} \quad (6-156)$$

We wish to find the particular $H(f)$ that maximizes $(S/N)_{\text{out}}$. This can be obtained with the aid of the Schwarz inequality,[†] which is

$$\left| \int_{-\infty}^{\infty} A(f)B(f) df \right|^2 \leq \int_{-\infty}^{\infty} |A(f)|^2 df \int_{-\infty}^{\infty} |B(f)|^2 df \quad (6-157)$$

where $A(f)$ and $B(f)$ may be complex functions of the real variable f . Furthermore, equality is obtained only when

$$A(f) = KB^*(f) \quad (6-158)$$

where K is any arbitrary real constant. The Schwarz inequality may be used to replace the numerator on the right-hand side of Eq. (6–156) by letting

$$A(f) = H(f)\sqrt{\mathcal{P}_n(f)}$$

and

$$B(f) = \frac{S(f)e^{j\omega t_0}}{\sqrt{\mathcal{P}_n(f)}}$$

Then Eq. (6–156) becomes

$$\left(\frac{S}{N}\right)_{\text{out}} \leq \frac{\int_{-\infty}^{\infty} |H(f)|^2 \mathcal{P}_n(f) df \int_{-\infty}^{\infty} \frac{|S(f)|^2}{\mathcal{P}_n(f)} df}{\int_{-\infty}^{\infty} |H(f)|^2 \mathcal{P}_n(f) df}$$

where it is realized that $\mathcal{P}_n(f)$ is a nonnegative real function. Thus,

$$\left(\frac{S}{N}\right)_{\text{out}} \leq \int_{-\infty}^{\infty} \frac{|S(f)|^2}{\mathcal{P}_n(f)} df \quad (6-159)$$

[†] A proof for the Schwarz inequality is given in the appendix (Sec. 6–10) at the end of this chapter.

The maximum $(S/N)_{\text{out}}$ is obtained when $H(f)$ is chosen such that equality is attained. Using Eq. (6–158), this occurs when $A(f) = KB^*(f)$, or

$$H(f)\sqrt{\mathcal{P}_n(f)} = \frac{KS^*(f)e^{-j\omega t_0}}{\sqrt{\mathcal{P}_n(f)}}$$

which reduces to Eq. (6–155) of the theorem.

From a practical viewpoint, it is realized that the constant K is arbitrary, since both the input signal and the input noise would be multiplied by K , and K cancels out when $(S/N)_{\text{out}}$ is evaluated. However, both the output signal and the noise levels depend on the value of the constant.

In this proof, no constraint was applied to assure that $h(t)$ would be causal. Thus, the filter specified by Eq. (6–155) may not be realizable (i.e., causal). However, the transfer function given by that equation can often be approximated by a realizable (causal) filter. If the causal constraint is included (in solving for the matched filter), the problem becomes more difficult, and a linear integral equation must be solved to obtain the unknown function $h(t)$ [Thomas, 1969].

Results for White Noise

For the case of white noise, the description of the matched filter is simplified as follows: For white noise, $\mathcal{P}_n(f) = N_0/2$. Thus, Eq. (6–155) becomes

$$H(f) = \frac{2K}{N_0} S^*(f)e^{-j\omega t_0}$$

From this equation, we obtain the following theorem.

THEOREM. *When the input noise is white, the impulse response of the matched filter becomes*

$$h(t) = Cs(t_0 - t) \quad (6-160)$$

where C is an arbitrary real positive constant, t_0 is the time of the peak signal output, and $s(t)$ is the known input-signal waveshape.

Proof. We have

$$\begin{aligned} h(t) &= \mathcal{F}^{-1}[H(f)] = \frac{2K}{N_0} \int_{-\infty}^{\infty} S^*(f) e^{-j\omega t_0} e^{j\omega f} df \\ &= \frac{2K}{N_0} \left[\int_{-\infty}^{\infty} S(f) e^{j2\pi f(t_0-t)} df \right]^* \\ &= \frac{2K}{N_0} [s(t_0 - t)]^* \end{aligned}$$

But $s(t)$ is a real signal; hence, let $C = 2K/N_0$, so that the impulse response is equivalent to Eq. (6–160).

Equation (6–160) shows that the impulse response of the matched filter (white-noise case) is simply the known signal waveshape that is “played backward” and translated by an amount t_0 (as illustrated in Example 6–14). Thus, the filter is said to be “matched” to the signal.

An important property is the actual value of $(S/N)_{\text{out}}$ that is obtained from the matched filter. From Eq. (6–159), using Parseval’s theorem, as given by Eq. (2–41), we obtain

$$\left(\frac{S}{N}\right)_{\text{out}} = \int_{-\infty}^{\infty} \frac{|S(f)|^2}{N_0/2} df = \frac{2}{N_0} \int_{-\infty}^{\infty} s^2(t) dt$$

But $\int_{-\infty}^{\infty} s^2(t) dt = E_s$ is the energy in the (finite-duration) input signal. Hence,

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{2E_s}{N_0} \quad (6-161)$$

This is a very interesting result. It states that $(S/N)_{\text{out}}$ depends on the signal *energy* and PSD level of the noise, and not on the particular signal waveshape that is used. Of course, the signal energy can be increased to improve $(S/N)_{\text{out}}$ by increasing the signal amplitude, the signal duration, or both.

Equation (6–161) can also be written in terms of a time–bandwidth product and the ratio of the input average signal power (over T seconds) to the average noise power. Assume that the input noise power is measured in a band that is W hertz wide. We also know that the signal has a duration of T seconds. Then, from Eq. (6–161),

$$\left(\frac{S}{N}\right)_{\text{out}} = 2TW \frac{(E_s/T)}{(N_0W)} = 2(TW) \left(\frac{S}{N}\right)_{\text{in}} \quad (6-162)$$

where $(S/N)_{\text{in}} = (E_s/T)/(N_0W)$. From Eq. (6–162), we see that an increase in the time–bandwidth product (TW) does not change the output SNR, because the input SNR decreases correspondingly. In radar applications, increased TW provides increased ability to resolve (distinguish) targets, instead of presenting merged targets. Equation (6–161) clearly shows that it is the input-signal energy with respect to N_0 that actually determines the $(S/N)_{\text{out}}$ that is attained [Turin, 1976].

Example 6–14 INTEGRATE-AND-DUMP (MATCHED) FILTER

Suppose that the known signal is the rectangular pulse, as shown in Fig. 6–16a:

$$s(t) = \begin{cases} 1, & t_1 \leq t \leq t_2 \\ 0, & \text{otherwise} \end{cases} \quad (6-163)$$

The signal duration is $T = t_2 - t_1$. Then, for the case of white noise, the impulse response required for the matched filter is

$$h(t) = s(t_0 - t) = s(-(t - t_0)) \quad (6-164)$$

C was chosen to be unity for convenience, and $s(-t)$ is shown in Fig. 6–16b. From this figure, it is obvious that, for the impulse response to be causal, we require that

$$t_0 \geq t_2 \quad (6-165)$$

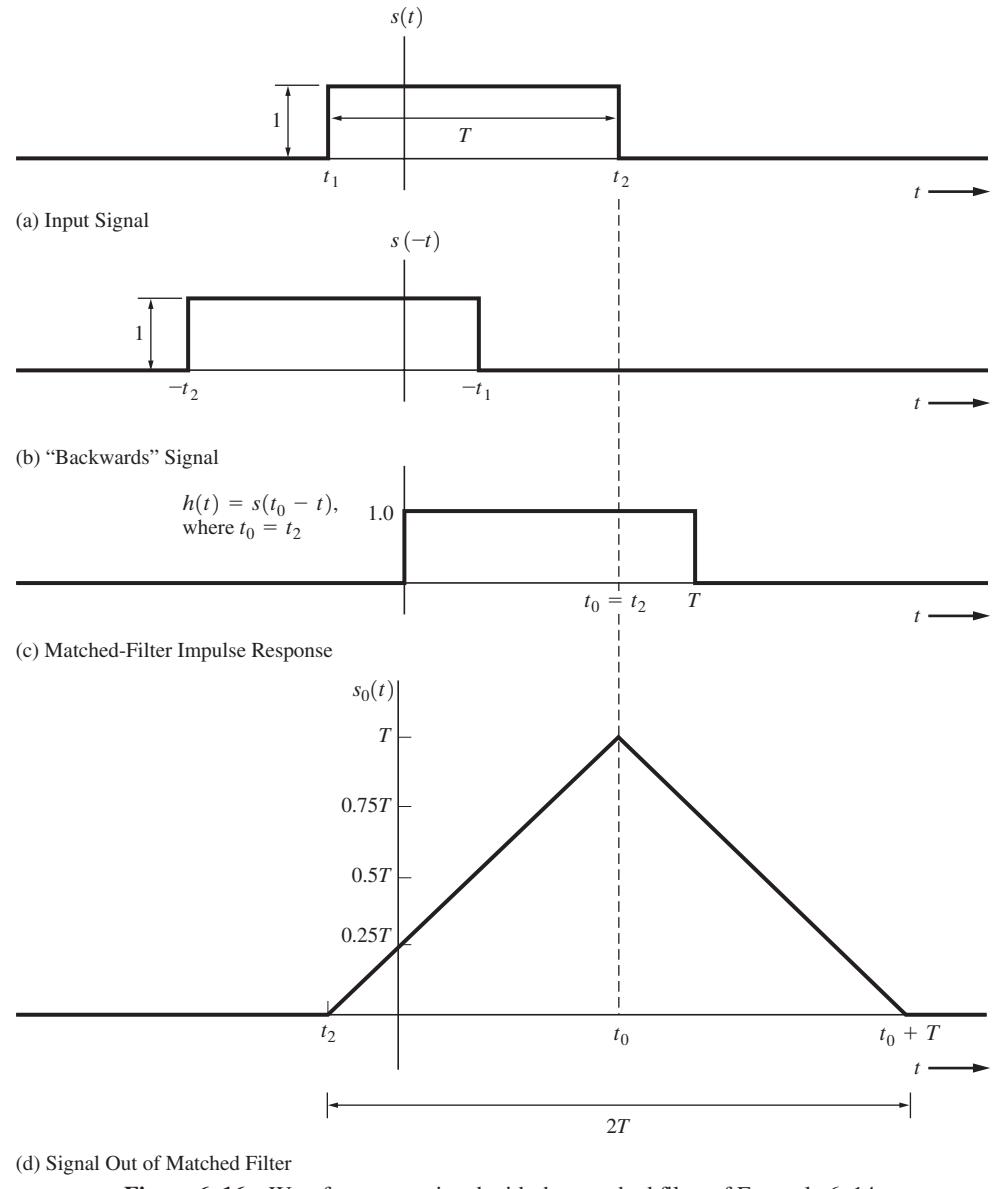


Figure 6-16 Waveforms associated with the matched filter of Example 6-14.

We will use $t_0 = t_2$ because this is the smallest allowed value that satisfies the causal condition and we would like to minimize the time that we have to wait before the maximum signal level occurs at the filter output (i.e., $t = t_0$). A sketch of $h(t)$ for $t_0 = t_2$ is shown in Fig. 6-16c. The resulting output signal is shown in Fig. 6-16d. Note that the peak output signal level does indeed

occur at $t = t_0$ and that the input signal waveshape has been distorted by the filter in order to peak up the output signal at $t = t_0$.

In applications to digital signaling with a rectangular bit shape, this matched filter is equivalent to an *integrate-and-dump filter*, as we now illustrate. Assume that we signal with one rectangular pulse and are interested in sampling the filter output when the signal level is maximum. Then the filter output at $t = t_0$ is

$$r_0(t_0) = r(t_0) * h(t_0) = \int_{-\infty}^{\infty} r(\lambda)h(t_0 - \lambda) d\lambda$$

When we substitute for the matched-filter impulse response shown in Fig. 6–16c, this equation becomes

$$r_0(t_0) = \int_{t_0-T}^{t_0} r(\lambda) d\lambda \quad (6-166)$$

Thus, we need to integrate the digital input signal plus noise over one symbol period T (which is the bit period for binary signaling) and “dump” the integrator output at the end of the symbol period. This is illustrated in Fig. 6–17 for binary signaling. Note that for proper operation of this optimum filter, an external clocking signal called *bit sync* is required. (See Chapter 3 for a discussion of bit synchronizers.) In addition, the output signal is not binary, since the output sample values are still corrupted by noise (although the noise has been minimized by the matched filter). The output could be converted into a binary signal by feeding it into a comparator, which is exactly what is done in digital receivers, as described in Chapter 7.

Correlation Processing

THEOREM. *For the case of white noise, the matched filter may be realized by correlating the input with $s(t)$; that is,*

$$r_0(t_0) = \int_{t_0-T}^{t_0} r(t)s(t) dt \quad (6-167)$$

where $s(t)$ is the known signal waveshape and $r(t)$ is the processor input, as illustrated in Fig. 6–18.

Proof. The output of the matched filter at time t_0 is

$$r_0(t_0) = r(t_0) * h(t_0) = \int_{-\infty}^{t_0} r(\lambda)h(t_0 - \lambda) d\lambda$$

But from Eq. (6–160),

$$h(t) = \begin{cases} s(t_0 - t), & 0 \leq t \leq T \\ 0, & \text{elsewhere} \end{cases}$$

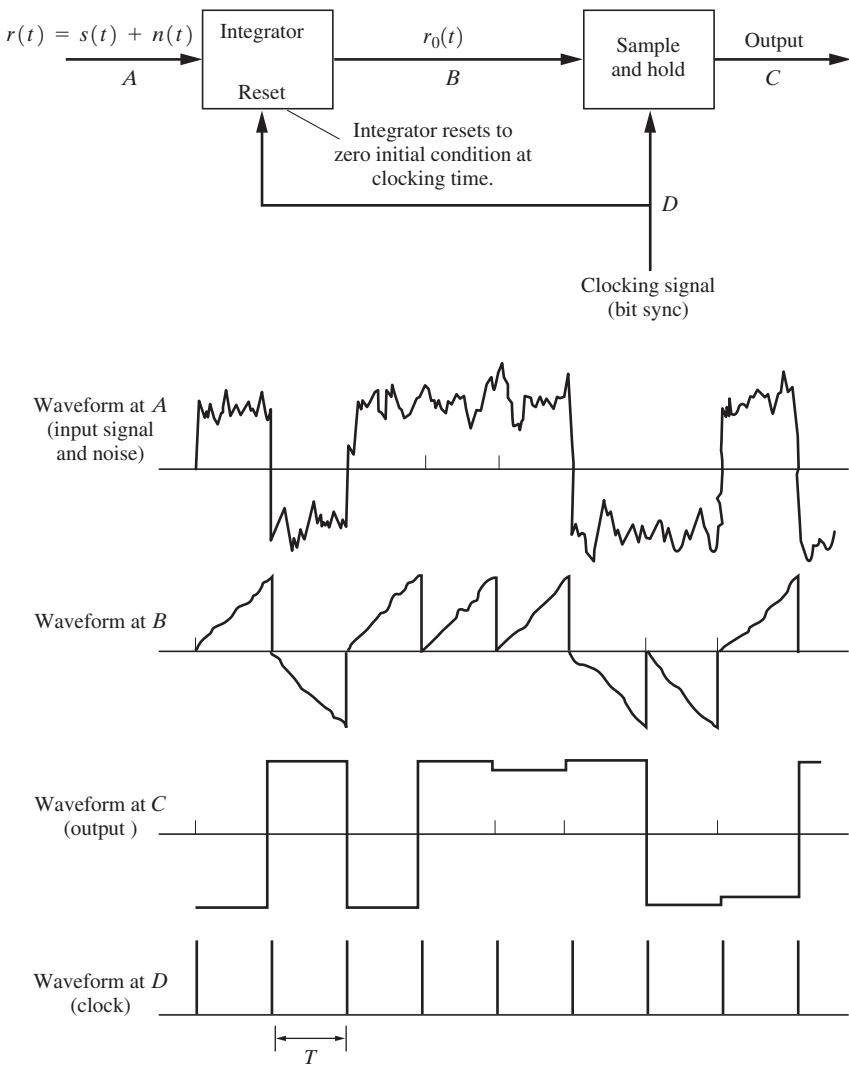


Figure 6-17 Integrate-and-dump realization of a matched filter.

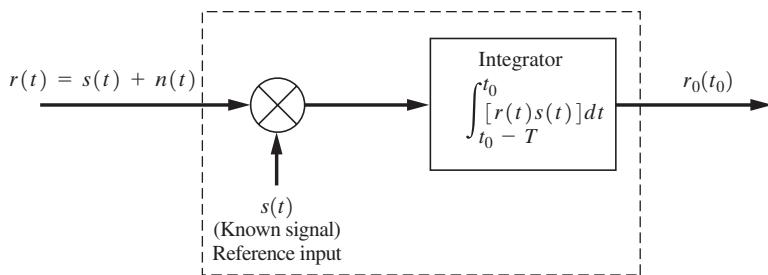


Figure 6-18 Matched-filter realization by correlation processing.

so

$$r_0(t_0) = \int_{t_0-T}^{t_0} r(\lambda)s[t_0 - (t_0 - \lambda)]d\lambda$$

which is identical to Eq. (6–167).

The correlation processor is often used as a matched filter for bandpass signals, as illustrated in Example 6–15.

Example 6–15 MATCHED FILTER FOR DETECTION OF A BPSK SIGNAL

Referring to Fig. 6–18, let the filter input be a BPSK signal plus white noise. For example, this might be the IF output of a BPSK receiver. The BPSK signal can be written as

$$s(t) = \begin{cases} +A \cos \omega_c t, & nT < t \leq (n+1)T \quad \text{for a binary 1} \\ -A \cos \omega_c t, & nT < t \leq (n+1)T \quad \text{for a binary 0} \end{cases}$$

where f_c is the IF center frequency, T is the duration of one bit of data, and n is an integer. The reference input to the correlation processor should be either $+A \cos \omega_c t$ or $-A \cos \omega_c t$, depending on whether we are attempting to detect a binary 1 or a binary 0. Since these waveshapes are identical except for the ± 1 constants, we could just use $\cos \omega_c t$ for the reference and recognize that when a binary 1 BPSK signal is present at the input (no noise), a positive voltage $\frac{1}{2} AT$ would be produced at the output. Similarly, a binary 0 BPSK signal would produce a negative voltage $-\frac{1}{2} AT$ at the output. Thus, for BPSK signaling plus white noise, we obtain the matched filter shown in Fig. 6–19. Notice that this looks like the familiar product detector, except that the LPF has been replaced by a gated integrator that is controlled by the bit-sync clock. With this type of postdetection processing, the product detector becomes a matched filter. However, to implement such an optimum detector, both bit sync and carrier sync are needed. The technique, shown in Fig. 6–19, could be classified as a more general form of an integrate-and-dump filter (first shown in Fig. 6–17).

Transversal Matched Filter

A transversal filter can also be designed to satisfy the matched-filter criterion. Referring to Fig. 6–20, we wish to find the set of transversal filter coefficients $\{a_i; i = 1, 2, \dots, N\}$ such that $s_0^2(t_0)/n_0^2(t)$ is maximized. The output signal at time $t = t_0$ is

$$\begin{aligned} s_0(t_0) = & a_1 s(t_0) + a_2 s(t_0 - T) + a_3 s(t_0 - 2T) \\ & + \dots + a_N s(t_0 - (N-1)T) \end{aligned}$$

or

$$s_0(t_0) = \sum_{k=1}^N a_k s(t_0 - (k-1)T) \quad (6-168)$$

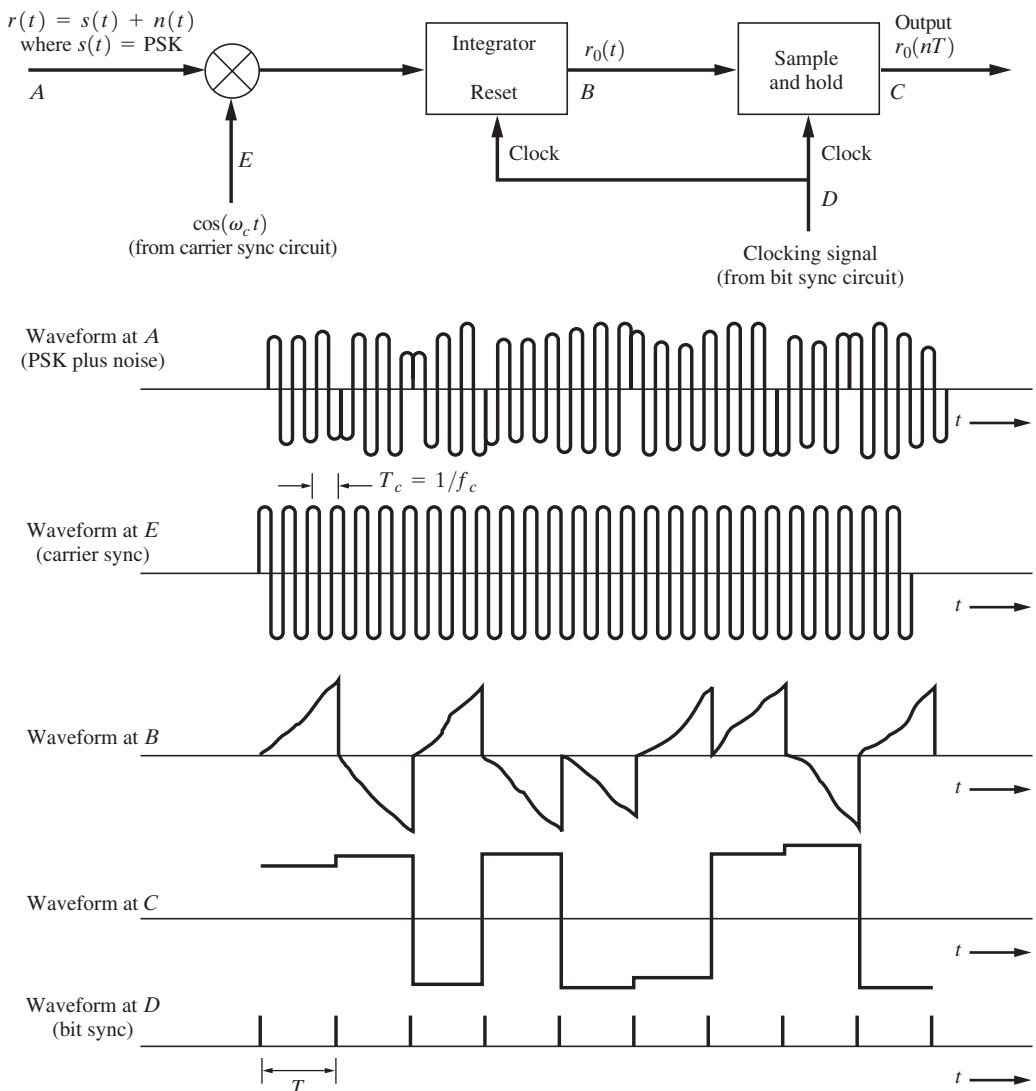



Figure 6-19 Correlation (matched-filter) detection for BPSK.

Similarly, for the output noise,

$$n_0(t) = \sum_{k=1}^N a_k n(t - (k-1)T) \quad (6-169)$$

The average noise power is

$$\overline{n_0^2(t)} = \sum_{k=1}^N \sum_{l=1}^N a_k a_l \overline{n(t - (k-1)T) n(t - (l-1)T)}$$

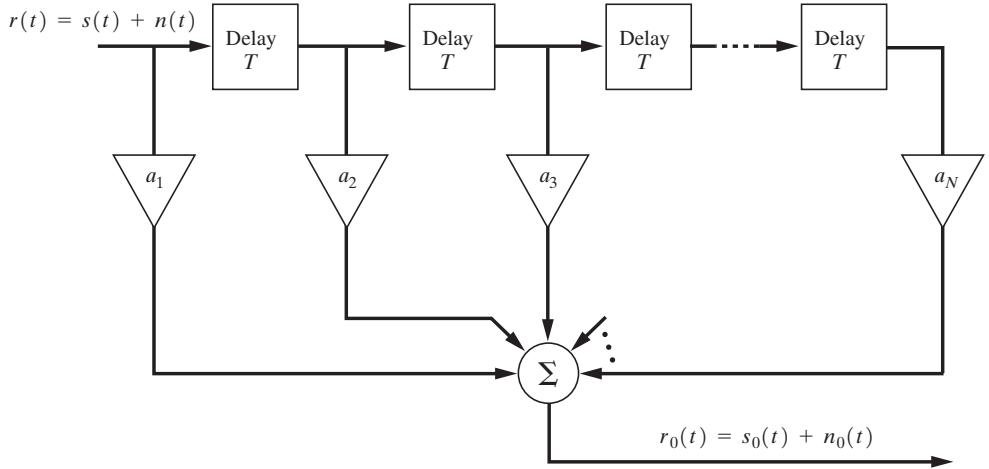**Figure 6-20** Transversal matched filter.

or

$$\overline{n_0^2(t)} = \sum_{k=1}^N \sum_{l=1}^N a_k a_l R_n(kT - lT) \quad (6-170)$$

where $R_n(\tau)$ is the autocorrelation of the input noise. Thus, the output-peak-signal-to-average-noise-power ratio is

$$\frac{s_0^2(t_0)}{n_0^2(t)} = \frac{\left[\sum_{k=1}^N a_k s(t_0 - (k-1)T) \right]^2}{\sum_{k=1}^N \sum_{l=1}^N a_k a_l R_n(kT - lT)} \quad (6-171)$$

We can find the a_k 's that maximize this ratio by using Lagrange's method of maximizing the numerator while constraining the denominator to be a constant [Olmsted, 1961, p. 518]. Consequently, we need to maximize the function

$$M(a_1, a_2, \dots, a_N) = \left[\sum_{k=1}^N a_k s(t_0 - (k-1)T) \right]^2 - \lambda \sum_{k=1}^N \sum_{l=1}^N a_k a_l R_n(kT - lT) \quad (6-172)$$

where λ is the Lagrange multiplier. The maximum occurs when $\partial M / \partial a_i = 0$ for all the $i = 1, 2, \dots, N$. Thus,

$$\begin{aligned} \frac{\partial M}{\partial a_i} = 0 &= 2 \left[\sum_{k=1}^N a_k s(t_0 - (k-1)T) \right] s(t_0 - (i-1)T) \\ &\quad - 2\lambda \sum_{k=1}^N a_k R_n(kT - iT) \end{aligned} \quad (6-173)$$

for $i = 1, 2, \dots, N$. But $\sum_{K=1}^N a_k s(t_0 - (k - 1)T) = s_0(t_0)$, which is a constant. Furthermore, let $\lambda = s_0(t_0)$. Then we obtain the required condition,

$$s(t_0 - (i - 1)T) = \sum_{k=1}^N a_k R_n(kT - iT) \quad (6-174)$$

for $i = 1, 2, \dots, N$. This is a set of N simultaneous linear equations that must be solved to obtain the a 's. We can obtain these coefficients conveniently by writing Eq. (6-174) in matrix form. We define the elements

$$s_i \triangleq s[t_0 - (i - 1)T], \quad i = 1, 2, \dots, N \quad (6-175)$$

and

$$r_{ik} = R_n(kT - iT), \quad i = 1, \dots, N \quad (6-176)$$

In matrix notation, Eq. (6-174) becomes

$$\mathbf{s} = \mathbf{R}\mathbf{a} \quad (6-177)$$

where the known signal vector is

$$\mathbf{s} = \begin{bmatrix} s_1 \\ s_2 \\ \vdots \\ s_N \end{bmatrix} \quad (6-178)$$

the known autocorrelation matrix for the input noise is

$$\mathbf{R} = \begin{bmatrix} r_{11} & r_{12} & \dots & r_{1N} \\ r_{21} & r_{22} & \dots & r_{2N} \\ \vdots & \vdots & & \vdots \\ r_{N1} & r_{N2} & \dots & r_{NN} \end{bmatrix} \quad (6-179)$$

and the unknown transversal filter coefficient vector is

$$\mathbf{a} = \begin{bmatrix} a_1 \\ a_2 \\ \vdots \\ a_N \end{bmatrix} \quad (6-180)$$

The coefficients for the transversal matched filter are then given by

$$\mathbf{a} = \mathbf{R}^{-1} \mathbf{s} \quad (6-181)$$

where \mathbf{R}^{-1} is the inverse of the autocorrelation matrix for the noise and \mathbf{s} is the (known) signal vector.

6–9 SUMMARY

A *random process* is the extension of the concept of a random variable to random waveforms. A random process $x(t)$ is described by an N -dimensional PDF, where the random variables are $x_1 = x(t_1)$, $x_2 = x(t_2), \dots, x_N = x(t_N)$. If this PDF is invariant for a shift in the time origin, as $N \rightarrow \infty$, the process is said to be *strict-sense stationary*.

The *autocorrelation function* of a random process $x(t)$ is

$$R_x(t_1, t_2) = \overline{x(t_1)x(t_2)} = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} x_1 x_2 f_x(x_1, x_2) dx_1 dx_2$$

In general, a two-dimensional PDF of $x(t)$ is required to evaluate $R_x(t_1, t_2)$. If the process is stationary,

$$R_x(t_1, t_2) = \overline{x(t_1)x(t_1 + \tau)} = R_x(\tau)$$

where $\tau = t_2 - t_1$.

If $\overline{x(t)}$ is a constant and if $R_x(t_1, t_2) = R_x(\tau)$, the process is said to be *wide-sense stationary*. If a process is strict-sense stationary, it is wide-sense stationary, but the converse is not generally true.

A process is *ergodic* when the time averages are equal to the corresponding ensemble averages. If a process is ergodic, it is also stationary, but the converse is not generally true. For ergodic processes, the DC value (a time average) is also $X_{dc} = \overline{x(t)}$ and the RMS value (a time average) is also $X_{rms} = \sqrt{\overline{x^2(t)}}$.

The *power spectral density* (PSD), $\mathcal{P}_x(f)$, is the Fourier transform of the autocorrelation function $R_x(\tau)$ (Wiener–Khintchine theorem):

$$\mathcal{P}_x(f) = \mathcal{F}[R_x(\tau)]$$

The PSD is a nonnegative real function and is even about $f = 0$ for real processes. The PSD can also be evaluated by the ensemble average of a function of the Fourier transforms of the truncated sample functions.

The autocorrelation function of a wide-sense stationary real random process is a real function, and it is even about $\tau = 0$. Furthermore, $R_x(0)$ gives the total normalized average power, and this is the maximum value of $R_x(\tau)$.

For *white noise*, the PSD is a constant and the autocorrelation function is a Dirac delta function located at $\tau = 0$. White noise is not physically realizable, because it has infinite power, but it is a very useful approximation for many problems.

The *cross-correlation* function of two jointly stationary real processes $x(t)$ and $y(t)$ is

$$R_{xy}(\tau) = \overline{x(t)y(t + \tau)}$$

and the cross-PSD is

$$\mathcal{P}_{xy}(f) = \mathcal{F}[R_{xy}(\tau)]$$

The two processes are said to be *uncorrelated* if

$$R_{xy}(\tau) = \overline{[x(t)]} \overline{[y(t)]}$$

for all τ . They are said to be orthogonal if

$$R_{xy}(\tau) = 0$$

for all τ .

Let $y(t)$ be the output process of a *linear system* and $x(t)$ the input process, where $y(t) = x(t) * h(t)$. Then

$$R_y(\tau) = h(-\tau) * h(t) * R_x(\tau)$$

and

$$\mathcal{P}_y(f) = |H(f)|^2 \mathcal{P}_x(f)$$

where $H(f) = F[h(t)]$.

The *equivalent bandwidth* of a linear system is defined by

$$B = \frac{1}{|H(f_0)|^2} \int_0^\infty |H(f)|^2 df$$

where $H(f)$ is the transfer function of the system and f_0 is usually taken to be the frequency where $|H(f)|$ is a maximum. Similarly, the equivalent bandwidth of a random process $x(t)$ is

$$B = \frac{1}{\mathcal{P}_x(f_0)} \int_0^\infty \mathcal{P}_x(f) df = \frac{R_x(0)}{2\mathcal{P}_x(f_0)}$$

If the input to a linear system is a Gaussian process, the output is another *Gaussian* process.

A real stationary *bandpass random process* can be represented by

$$v(t) = \operatorname{Re}\{g(t)e^{j(\omega_c t + \theta_c)}\}$$

where the complex envelope $g(t)$ is related to the quadrature processes $x(t)$ and $y(t)$. Numerous properties of these random processes can be obtained and are listed in Sec. 6–7. For example, $x(t)$ and $y(t)$ are independent Gaussian processes when the PSD of $v(t)$ is symmetrical about $f = f_c$, $f > 0$, and $v(t)$ is Gaussian. Properties for SSB bandpass processes are also obtained.

The *matched filter* is a linear filter that maximizes the instantaneous output signal power to the average output noise power for a given input signal waveshape. For the case of white noise, the impulse response of the matched filter is

$$h(t) = Cs(t_0 - t)$$

where $s(t)$ is the known signal waveshape, C is a real constant, and t_0 is the time that the output signal power is a maximum. The matched filter can be realized in many forms, such as the integrate-and-dump, the correlator, and the transversal filter configurations.

6–10 APPENDIX: PROOF OF SCHWARZ'S INEQUALITY

Schwarz's inequality is

$$\left| \int_{-\infty}^{\infty} f(t)g(t) dt \right|^2 \leq \int_{-\infty}^{\infty} |f(t)|^2 dt \int_{-\infty}^{\infty} |g(t)|^2 dt \quad (6-182)$$

and becomes an *equality* if and only if

$$f(t) = K g^*(t) \quad (6-183)$$

where K is an arbitrary real constant. $f(t)$ and $g(t)$ may be complex valued. It is assumed that both $f(t)$ and $g(t)$ have finite energy. That is,

$$\int_{-\infty}^{\infty} |f(t)|^2 dt < \infty \quad \text{and} \quad \int_{-\infty}^{\infty} |g(t)|^2 dt < \infty \quad (6-184)$$

Proof. Schwarz's inequality is equivalent to the inequality

$$\left| \int_{-\infty}^{\infty} f(t)g(t) dt \right| \leq \sqrt{\int_{-\infty}^{\infty} |f(t)|^2 dt} \sqrt{\int_{-\infty}^{\infty} |g(t)|^2 dt} \quad (6-185)$$

Furthermore,

$$\left| \int_{-\infty}^{\infty} f(t)g(t) dt \right| \leq \int_{-\infty}^{\infty} |f(t)g(t)| dt = \int_{-\infty}^{\infty} |f(t)||g(t)| dt \quad (6-186)$$

and equality holds if Eq. (6–183) is satisfied. Thus, if we can prove that

$$\int_{-\infty}^{\infty} |f(t)||g(t)| dt \leq \sqrt{\int_{-\infty}^{\infty} |f(t)|^2 dt} \sqrt{\int_{-\infty}^{\infty} |g(t)|^2 dt} \quad (6-187)$$

then we have proved Schwarz's inequality. To simplify the notation, we replace $|f(t)|$ and $|g(t)|$ by the real-valued functions $a(t)$ and $b(t)$ where

$$a(t) = |f(t)| \quad (6-188a)$$

and

$$b(t) = |g(t)| \quad (6-188b)$$

Then we need to show that

$$\int_a^b a(t)b(t) dt \leq \sqrt{\int_{-\infty}^{\infty} a^2(t) dt} \sqrt{\int_{-\infty}^{\infty} b^2(t) dt} \quad (6-189)$$

This can easily be shown by using an orthonormal functional series to represent $a(t)$ and $b(t)$. Let

$$a(t) = a_1\varphi_1(t) + a_2\varphi_2(t) \quad (6-190a)$$

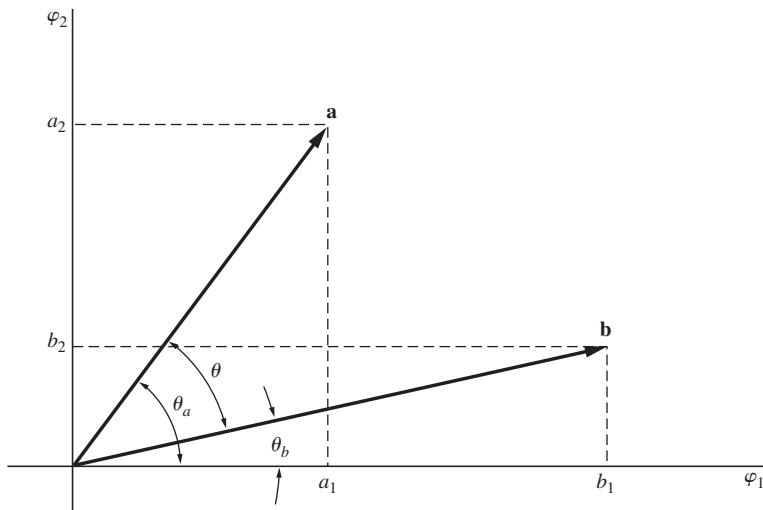


Figure 6–21 Vector representations of $a(t)$ and $b(t)$.

and

$$b(t) = b_1\varphi_1(t) + b_2\varphi_2(t) \quad (6-190b)$$

where, as described in Chapter 2, $\mathbf{a} = (a_1, a_2)$ and $\mathbf{b} = (b_1, b_2)$ represent $a(t)$ and $b(t)$, respectively. These relationships are illustrated in Fig. 6–21.

Then, using the figure, we obtain

$$\cos \theta = \cos(\theta_a - \theta_b) = \cos \theta_a \cos \theta_b + \sin \theta_a \sin \theta_b = \frac{a_1}{|\mathbf{a}|} \frac{b_1}{|\mathbf{b}|} + \frac{a_2}{|\mathbf{a}|} \frac{b_2}{|\mathbf{b}|}$$

or

$$\cos \theta = \frac{\mathbf{a} \cdot \mathbf{b}}{|\mathbf{a}| |\mathbf{b}|} \quad (6-191)$$

Furthermore, the dot product is equivalent to the inner product:

$$\mathbf{a} \cdot \mathbf{b} = \int_{-\infty}^{\infty} a(t)b(t) dt \quad (6-192a)$$

[This may be demonstrated by substituting $a(t) = \sum a_j \varphi_j(t)$ and $b(t) = \sum b_k \varphi_k(t)$ into the integral, where $\varphi_j(t)$ and $\varphi_k(t)$ are real orthonormal functions.]

From the Pythagorean theorem, the lengths (or norms) of the vectors \mathbf{a} and \mathbf{b} are

$$|\mathbf{a}| = \sqrt{a_1^2 + a_2^2} = \sqrt{\mathbf{a} \cdot \mathbf{a}} = \sqrt{\int_{-\infty}^{\infty} a^2(t) dt} \quad (6-192b)$$

and

$$|\mathbf{b}| = \sqrt{b_1^2 + b_2^2} = \sqrt{\mathbf{b} \cdot \mathbf{b}} = \sqrt{\int_{-\infty}^{\infty} b^2(t) dt} \quad (6-192c)$$

Because $|\cos \theta| \leq 1$, we have

$$\left| \int_{-\infty}^{\infty} a(t)b(t) dt \right| \leq \sqrt{\int_{-\infty}^{\infty} a^2(t) dt} \sqrt{\int_{-\infty}^{\infty} b^2(t) dt} \quad (6-193)$$

where equality is obtained when we substitute

$$\mathbf{a} = K\mathbf{b} \quad (6-194)$$

Using Eq. (6–188), when $f(t) = Kg^*(t)$, we find that Eq. (6–194) is also satisfied, so that equality is obtained. Thus, the proof of Eq. (6–193) proves Schwarz's inequality.

6–11 STUDY-AID EXAMPLES

SA6–1 PDF for a Linearly Transformed Gaussian RV Let $y(t) = A \cos(10\pi t)$ be a random process, where A is a Gaussian random variable process with zero mean and variance σ_A^2 . Find the PDF for $y(t)$. Is $y(t)$ WSS?

Solution $y(t)$ is a linear function of A . Thus, $y(t)$ is Gaussian because A is Gaussian. (See Sec. 6–6.) Since $\bar{A} = 0$,

$$m_y = \overline{y(t)} = \bar{A} \cos(10\pi t) = 0 \quad (6-195a)$$

and

$$\sigma_y^2 = \overline{y^2} - \overline{m_y^2} = \bar{A}^2 \cos^2(10\pi t) = \sigma_A^2 \cos^2(10\pi t) \quad (6-195b)$$

Thus, the PDF for $y(t)$ is

$$f(y) = \frac{1}{\sqrt{2\pi\sigma_y^2}} e^{-y^2/2\sigma_y^2} \quad (6-195c)$$

where σ_y^2 is given by Eq. (6–195b). Furthermore, $y(t)$ is not WSS, because

$$R_y(0) = \sigma_y^2 + m_x^2 = \sigma_A^2 \cos^2(10\pi t)$$

is a function of t .

SA6–2 Mean Value Out of a Linear Filter Derive an expression for the mean value of the output of a linear time-invariant filter if the input $x(t)$ is a WSS random process.

Solution The output of the filter is

$$y(t) = h(t) * x(t)$$

where $h(t)$ is the impulse response of the filter. Taking the expected value, we get

$$\begin{aligned} m_y &= \overline{y(t)} = \overline{h(t) * x(t)} = h(t) * \overline{x(t)} = h(t) * m_x \\ &= \int_{-\infty}^{\infty} h(\lambda)m_x d\lambda = m_x \int_{-\infty}^{\infty} h(\lambda) d\lambda \end{aligned} \quad (6-196)$$

However, the transfer function of the filter is

$$H(f) = \mathcal{F}[h(t)] = \int_{-\infty}^{\infty} h(t) e^{-j2\pi f t} dt$$

so that $H(0) = \int_{-\infty}^{\infty} h(t) dt$. Thus, Eq. (6-196) reduces to

$$m_y = m_x H(0) \quad (6-197)$$


SA6-3 Average Power Out of a Differentiator Let $y(t) = dn(t)/dt$, where $n(t)$ is a random-noise process that has a PSD of $\mathcal{P}_n(f) = N_0/2 = 10^{-6}$ W/Hz. Evaluate the normalized power of $y(t)$ over a low-pass frequency band of $B = 10$ Hz.

Solution $\mathcal{P}_y(f) = |H(f)|^2 \mathcal{P}_n(f)$, where, from Table 2-1, $H(f) = j 2\pi f$ for a differentiator. Thus,


$$P_y = \int_{-B}^B \mathcal{P}_y(f) df = \int_{-B}^B (2\pi f)^2 \frac{N_0}{2} df = \frac{8\pi^2}{3} \left(\frac{N_0}{2} \right) B^3$$

or

$$P_y = \frac{8\pi^2}{3} (10^{-6})(10^3) = 0.0263 \text{ W} \quad (6-198)$$

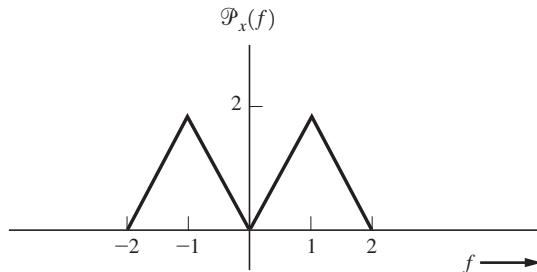

(a) PSD for $x(t)$

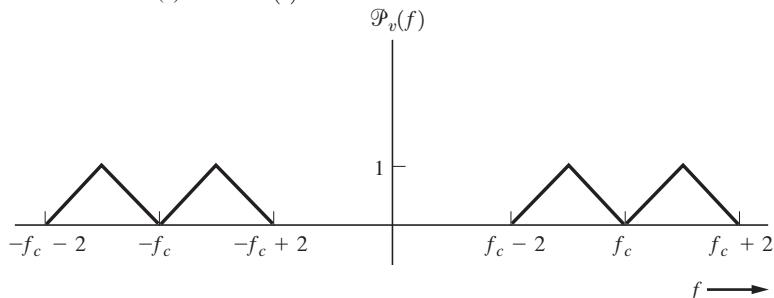

(b) PSD for $v(t)$

Figure 6-22 PSD for SA6-4.

SA6-4 PSD for a Bandpass Process A bandpass process is described by

$$v(t) = x(t) \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c)$$

where $y(t) = x(t)$ is a WSS process with a PSD as shown in Fig. 6-22a. θ_c is an independent random variable uniformly distributed over $(0, 2\pi)$. Find the PSD for $v(t)$.

Solution From Eq. (6-130), we know that $v(t)$ is a WSS bandpass process, with $\mathcal{P}_v(f)$ given by Eq. (6-133d). Thus, $\mathcal{P}_g(f)$ needs to be evaluated. Also,

$$v(t) = \operatorname{Re}\{g(t)e^{j(\omega_c t + \theta_c)}\}$$

where $g(t) = x(t) + jy(t) = x(t) + jx(t) = (1 + j)x(t)$. We have, then,

$$\begin{aligned} R_g(\tau) &= \overline{g^*(t)g(t + \tau)} = \overline{(1 - j)(1 + j)x(t)x(t + \tau)} \\ &= (1 + 1)R_x(\tau) = 2R_x(\tau) \end{aligned}$$

Thus,

$$\mathcal{P}_g(f) = 2\mathcal{P}_x(f) \quad (6-199)$$

Substituting Eq. (6-199) into Eq. (6-133d), we get

$$\mathcal{P}_v(f) = \frac{1}{2} [\mathcal{P}_x(f - f_c) + \mathcal{P}_x(-f - f_c)] \quad (6-200)$$

$\mathcal{P}_v(f)$ is plotted in Fig. 6-22b for the $\mathcal{P}_x(f)$ of Fig. 6-22a.

PROBLEMS

6-1 Let a random process $x(t)$ be defined by

$$x(t) = At + B$$

- (a) If B is a constant and A is uniformly distributed between -1 and $+1$, sketch a few sample functions.
- (b) If A is a constant and B is uniformly distributed between 0 and 2 , sketch a few sample functions.

★ 6-2 Let a random process be given by

$$x(t) = A \cos(\omega_0 t + \theta)$$

where A and ω_0 are constants and θ is a random variable. Let

$$f(\theta) = \begin{cases} \frac{2}{\pi}, & 0 \leq \theta \leq \frac{\pi}{2} \\ 0, & \text{elsewhere} \end{cases}$$

(a) Evaluate $\overline{x(t)}$.

(b) From the result of part (a), what can be said about the stationarity of the process?

- 6-3** Using the random process described in Prob. 6-2,
- Evaluate $\langle x^2(t) \rangle$.
 - Evaluate $x^2(t)$.
 - Using the results of parts (a) and (b), determine whether the process is ergodic for these averages.



- 6-4** Let $x(t)$ be a sinusoidal random process that has a uniformly distributed phase angle as described in Case 1 of Example 6-2. Using MATLAB, plot the PDF for the random process where $A = 5$ volts.

- ★ 6-5** A conventional average-reading AC voltmeter (volt-ohm multimeter) has a schematic diagram as shown in Fig. P6-5. The needle of the meter movement deflects proportionally to the average current flowing through the meter. The meter scale is marked to give the RMS value of sine-wave voltages. Suppose that this meter is used to determine the RMS value of a noise voltage. The noise voltage is known to be an ergodic Gaussian process having a zero mean value. What is the value of the constant that is multiplied by the meter reading to give the true RMS value of the Gaussian noise? (*Hint:* The diode is a short circuit when the input voltage is positive and an open circuit when the input voltage is negative.)

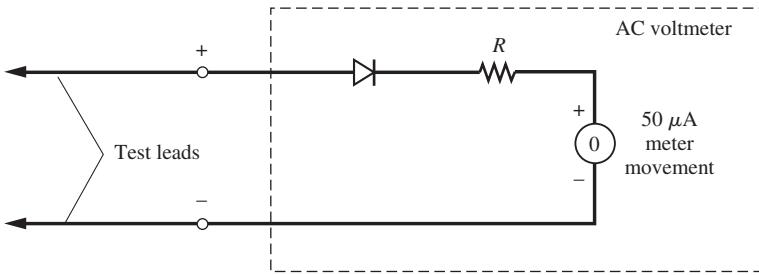


Figure P6-5

- 6-6** Let $x(t) = A_0 \sin(\omega_0 t + \theta)$ be a random process, where θ is a random variable that is uniformly distributed between 0 and 2π and A_0 and ω_0 are constants.
- Find $R_x(\tau)$.
 - Show that $x(t)$ is wide-sense stationary.
 - Verify that $R_x(\tau)$ satisfies the appropriate properties.
- 6-7** Let $r(t) = A_0 \cos \omega_0 t + n(t)$, where A_0 and ω_0 are constants. Assume that $n(t)$ is a wide-sense stationary random noise process with a zero mean value and an autocorrelation of $R_n(\tau)$.
- Find $\overline{r(t)}$ and determine whether $r(t)$ is wide-sense stationary.
 - Find $R_r(t_1, t_2)$.
 - Evaluate $\langle R_r(t, t + \tau) \rangle$, where $t_1 = t$ and $t_2 = t + \tau$.
- 6-8** Let an additive signal-plus-noise process be described by the equation $r(t) = s(t) + n(t)$.
- Show that $R_r(\tau) = R_s(\tau) + R_n(\tau) + R_{sn}(\tau) + R_{ns}(\tau)$.
 - Simplify the result for part (a) for the case when $s(t)$ and $n(t)$ are independent and the noise has a zero mean value.
- ★ 6-9** Consider the sum of two ergodic noise voltages:

$$n(t) = n_1(t) + n_2(t)$$

The power of $n_1(t)$ is 5 W, the power of $n_2(t)$ is 10 W, the DC value of $n_1(t)$ is -2 V, and the DC value n_2 is $+1$ V. Find the power of $n(t)$ if

- (a) $n_1(t)$ and $n_2(t)$ are orthogonal.
- (b) $n_1(t)$ and $n_2(t)$ are uncorrelated.
- (c) The cross-correlation of $n_1(t)$ and $n_2(t)$ is 2 for $\tau = 0$.

6–10 Assume that $x(t)$ is ergodic, and let $x(t) = m_x + y(t)$, where $m_x = \overline{x(t)}$ is the DC value of $x(t)$ and $y(t)$ is the AC component of $x(t)$. Show that

- (a) $R_x(\tau) = m_x^2 + R_y(\tau)$.
- (b) $\lim_{\tau \rightarrow \infty} R_x(\tau) = m_x^2$.
- (c) Can the DC value of $x(t)$ be determined from $R_x(\tau)$?

★ 6–11 Determine whether the following functions satisfy the properties of autocorrelation functions:

- (a) $\sin \omega_0 \tau$.
- (b) $(\sin \omega_0 \tau)/(\omega_0 \tau)$.
- (c) $\cos \omega_0 \tau + \delta(\tau)$.
- (d) $e^{-a|\tau|}$, where $a < 0$.
- (e) (Note: $\mathcal{F}[R(\tau)]$ must also be a nonnegative function.)

6–12 A random process $x(t)$ has an autocorrelation function given by $R_x(\tau) = 5 + 8e^{-3|\tau|}$. Find

- (a) The RMS value for $x(t)$.
- (b) The PSD for $x(t)$.



★ 6–13 The autocorrelation of a random process is $R_x(\tau) = 4e^{-\tau^2} + 3$. Plot the PSD for $x(t)$ and evaluate the RMS bandwidth for $x(t)$.

6–14 Show that two random processes $x(t)$ and $y(t)$ are uncorrelated (i.e., $R_{xy}(\tau) = m_x m_y$) if the processes are independent.

6–15 If $x(t)$ contains periodic components, show that

- (a) $R_x(\tau)$ contains periodic components.
- (b) $\mathcal{P}_x(f)$ contains delta functions.

6–16 Find the PSD for the random process described in Prob. 6–2.

6–17 Determine whether the following functions can be valid PSD functions for a real process:

- (a) $2e^{-2\pi|f-45|}$.
- (b) $4e^{-2\pi|f^2-16|}$.
- (c) $25 + \delta(f - 16)$.
- (d) $10 + \delta(f)$.

★ 6–18 The PSD of an ergodic random process $x(t)$ is

$$\mathcal{P}_x(f) = \begin{cases} \frac{1}{B} (B - |f|), & |f| \leq B \\ 0, & f \text{ elsewhere} \end{cases}$$

where $B > 0$. Find

- (a) The RMS value of $x(t)$.
- (b) $R_x(\tau)$.

6–19 Referring to the techniques described in Example 6–4, evaluate the PSD for a PCM signal that uses Manchester NRZ encoding. (See Fig. 3–15.) Assume that the data have values of $a_n = \pm 1$, which are equally likely, and that the data are independent from bit to bit.



- 6-20** Using MATLAB, plot the PSD for a Manchester NRZ line code that has values of ± 1 that are equally likely. Assume that the data are independent from bit to bit and that the bit rate is 9600 b/s.
Hint: Look at your solution for Prob 6-19 or look at Eq. (3-46c).

- 6-21** The *magnitude* frequency response of a linear time-invariant network is to be determined from a laboratory setup as shown in Fig. P6-21. Discuss how $|H(f)|$ is evaluated from the measurements.

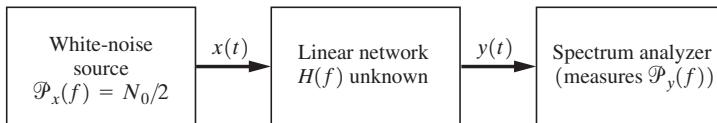


Figure P6-21

- ★ 6-22** A linear time-invariant network with an unknown $H(f)$ is shown in Fig. P6-22.
- Find a formula for evaluating $h(t)$ in terms of $R_{xy}(\tau)$ and N_0 .
 - Find a formula for evaluating $H(f)$ in terms of $\mathcal{P}_{xy}(f)$ and N_0 .

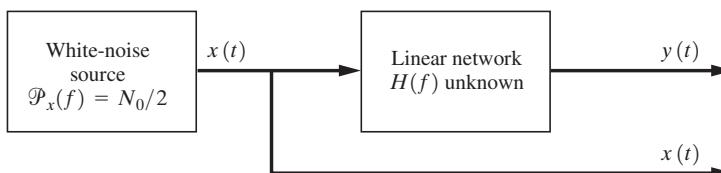


Figure P6-22

- 6-23** The output of a linear system is related to the input by $y(t) = h(t) * x(t)$, where $x(t)$ and $y(t)$ are jointly wide-sense stationary. Show that
- $R_{xy}(\tau) = h(\tau) * R_x(\tau)$.
 - $\mathcal{P}_{xy}(f) = H(f) \mathcal{P}_x(f)$.
 - $R_{yx}(\tau) = h(-\tau) * R_x(\tau)$.
 - $\mathcal{P}_{yx}(f) = H^*(f) \mathcal{P}_x(f)$.

[Hint: Use Eqs. (6-86) and (6-87).]



- 6-24** Using MATLAB, plot the PSD for the noise out of a RC LPF for the case of white noise at the filter input. Let $N_0 = 2$ and $B_{3dB} = 3$ kHz.

- ★ 6-25** Ergodic white noise with a PSD of $\mathcal{P}_n(f) = N_0/2$ is applied to the input of an ideal integrator with a gain of K (a real number) such that $H(f) = K/(j2\pi f)$.
- Find the PSD for the output.
 - Find the RMS value of the output noise.

- 6-26** A linear system has a power transfer function $|H(f)|^2$ as shown in Fig. P6-26. The input $x(t)$ is a Gaussian random process with a PSD given by

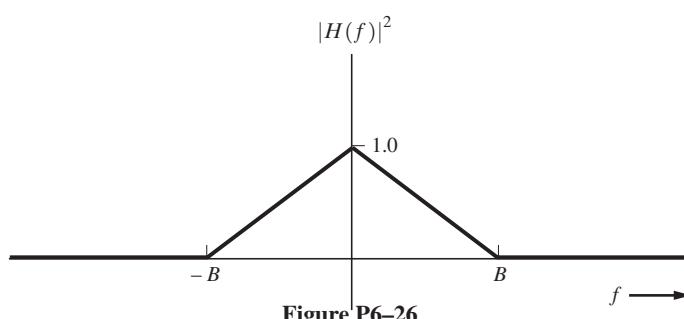


Figure P6-26

$$\mathcal{P}_x(f) = \begin{cases} \frac{1}{2}N_0, & |f| \leq 2B \\ 0, & f \text{ elsewhere} \end{cases}$$

- (a) Find the autocorrelation function for the output $y(t)$.
 (b) Find the PDF for $y(t)$.
 (c) When are the two random variables $y_1 = y(t_1)$ and $y_2 = y(t_2)$ independent?
6-27 A linear filter evaluates the T -second moving average of an input waveform, where the filter output is

$$y(t) = \frac{1}{T} \int_{t-(T/2)}^{t+(T/2)} x(u) du$$

and $x(t)$ is the input. Show that the impulse response is $h(t) = (1/T) \Pi(t/T)$.

-  **6-28** For Problem 6-27 show that

$$R_y(\tau) = \frac{1}{T} \int_{-T}^T \left(1 - \frac{|u|}{T}\right) R_x(\tau - u) du$$

If $R_x(\tau) = e^{-|\tau|}$ and $T = 1$ sec, plot $R_y(\tau)$, and compare it with $R_x(\tau)$.

- ★ **6-29** As shown in Example 6-8, the output signal-to-noise ratio of an RC LPF is given by Eq. (6-95) when the input is a sinusoidal signal plus white noise. Derive the value of the RC product such that the output signal-to-noise ratio will be a maximum.
6-30 Assume that a sine wave of peak amplitude A_0 and frequency f_0 , plus white noise with $\mathcal{P}_n(f) = N_0/2$, is applied to a linear filter. The transfer function of the filter is

$$H(f) = \begin{cases} \frac{1}{B} (B - |f|), & |f| < B \\ 0, & f \text{ elsewhere} \end{cases}$$

where B is the absolute bandwidth of the filter. Find the signal-to-noise power ratio for the filter output.

- 6-31** For the random process $x(t)$ with the PSD shown in Fig. P6-31, determine
 (a) The equivalent bandwidth.
 (b) The RMS bandwidth.

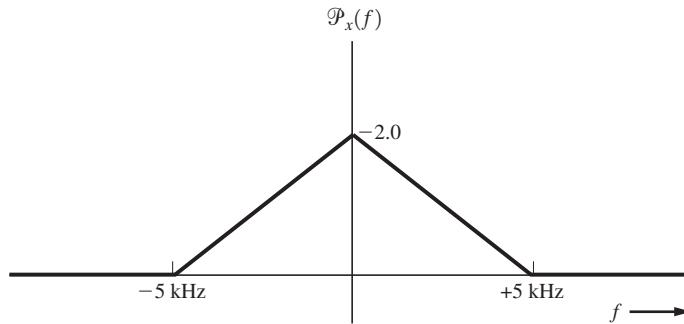


Figure P6-31

- 6-32** If $x(t)$ is a real bandpass random process that is wide-sense stationary, show that the definition of the RMS bandwidth, Eq. (6-100), is equivalent to

$$B_{\text{rms}} = 2\sqrt{\overline{f^2} - (f_0)^2}$$

where $\overline{f^2}$ is given by Eq. (6-98) or Eq. (6-99) and f_0 is given by Eq. (6-102).

- 6-33** In the definition for the RMS bandwidth of a *bandpass* random process, f_0 is used. Show that

$$f_0 = \frac{1}{2\pi R_x(0)} \left(\frac{d\hat{R}_x(\tau)}{d\tau} \right) \Big|_{\tau=0}$$

where $\hat{R}_x(\tau)$ is the Hilbert transform of $R_x(\tau)$.

- ★ 6-34** Two identical RC LPFs are coupled in cascade by an isolation amplifier that has a voltage gain of 10.

- (a) Find the overall transfer function of the network as a function of R and C .
(b) Find the 3-dB bandwidth in terms of R and C .

- 6-35** Let $x(t)$ be a Gaussian process in which two random variables are $x_1 = x(t_1)$ and $x_2 = x(t_2)$. The random variables have variances of σ_1^2 and σ_2^2 and means of m_1 and m_2 . The correlation coefficient is

$$\rho = \overline{(x_1 - m_1)(x_2 - m_2)} / (\sigma_1 \sigma_2)$$

Using matrix notation for the $N = 2$ -dimensional PDF, show that the equation for the PDF of \mathbf{x} reduces to the bivariate Gaussian PDF as given by Eq. (B-97).

- 6-36** A bandlimited white Gaussian random process has an autocorrelation function that is specified by Eq. (6-125). Show that as $B \rightarrow \infty$, the autocorrelation function becomes $R_n(\tau) = \frac{1}{2} N_0 \delta(\tau)$.

- ★ 6-37** Let two random processes $x(t)$ and $y(t)$ be jointly Gaussian with zero-mean values. That is, $(x_1, x_2, \dots, x_N, y_1, y_2, \dots, y_M)$ is described by an $(N+M)$ -dimensional Gaussian PDF. The cross-correlation is

$$R_{xy}(\tau) = \overline{x(t_1)y(t_2)} = 10 \sin(2\pi\tau)$$

- (a) When are the random variables $x_1 = x(t_1)$ and $y_2 = y(t_2)$ independent?
(b) Show that $x(t)$ and $y(t)$ are or are not independent random processes.

- 6-38** Starting with Eq. (6-121), show that

$$\mathbf{C}_y = \mathbf{H}\mathbf{C}_x\mathbf{H}^T$$

(Hint: Use the identity matrix property, $\mathbf{A}\mathbf{A}^{-1} = \mathbf{A}^{-1}\mathbf{A} = \mathbf{I}$, where \mathbf{I} is the identity matrix.)

- ★ 6-39** Consider the random process

$$x(t)A_0 \cos(\omega_c t + \theta)$$

where A_0 and ω_0 are constants and θ is a random variable that is uniformly distributed over the interval $(0, \pi/2)$. Determine whether $x(t)$ is wide-sense stationary.

- ★ 6-40** Referring to Prob. 6-39, find the PSD for $x(t)$.

- ★ 6-41** Referring to Prob. 6-39, if θ is uniformly distributed over $(0, 2\pi)$, is $x(t)$ wide-sense stationary?



- 6–42** A bandpass WSS random process $v(t)$ is represented by Eq. (6–129a), where the conditions of Eq. (6–129) are satisfied. The PSD of $v(t)$ is shown in Fig. P6–42, where $f_c = 1$ MHz. Using MATLAB
- Plot $\mathcal{P}_x(f)$.
 - Plot $\mathcal{P}_{xy}(f)$.

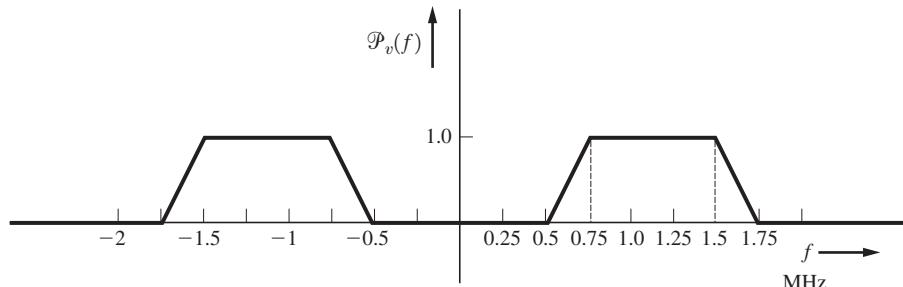


Figure P6–42



- ★ 6–43** The PSD of a bandpass WSS process $v(t)$ is shown in Fig. P6–43. $v(t)$ is the input to a product detector, and the oscillator signal (i.e., the second input to the multiplier) is $5 \cos(\omega_c t + \theta_0)$, where $f_c = 1$ MHz and θ_0 is an independent random variable with a uniform distribution over $(0, 2\pi)$. Using MATLAB, plot the PSD for the output of the product detector.

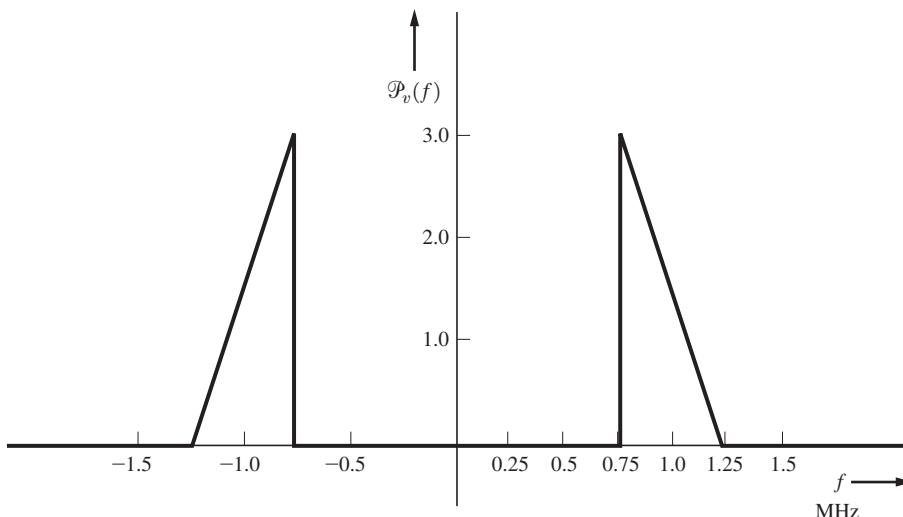


Figure P6–43

- 6–44** A WSS bandpass process $v(t)$ is applied to a product detector as shown in Fig. 6–11, where $\theta_c = 0$.
- Derive an expression for the autocorrelation of $w_1(t)$ in terms of $R_v(\tau)$. Is $w_1(t)$ WSS?
 - Use $R_{w_1}(\tau)$ obtained in part (a) to find an expression for $\mathcal{P}_{w_1}(f)$. (Hint: Use the Wiener–Khintchine theorem.)

★ 6-45 A USSB signal is

$$v(t) = 10 \operatorname{Re} \{ [x(t) + j\hat{x}(t)] e^{j(\omega_c t + \theta_c)} \}$$

where θ_c is a random variable that is uniformly distributed over $(0, 2\pi)$. The PSD for $x(t)$ is given in Fig. P6-31. Find

- (a) The PSD for $v(t)$.
- (b) The total power of $v(t)$.

6-46 Show that $R_{\hat{x}}(\tau) = R_x(\tau)$.

6-47 Show that $R_{x\hat{x}}(\tau) = \hat{R}_{x\hat{x}}(\tau)$,

where the caret symbol denotes the Hilbert transform.

6-48 A bandpass random signal can be represented by

$$s(t) = x(t) \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c)$$

where the PSD of $s(t)$ is shown in Fig. P6-48. θ_c is an independent random variable that is uniformly distributed over $(0, 2\pi)$. Assume that $f_3 - f_2 = f_2 - f_1$. Find the PSD for $x(t)$ and $y(t)$ when

- (a) $f_c = f_1$. This is USSB signaling, where $y(t) = \hat{x}(t)$.
- (b) $f_c = f_2$. This represents independent USSB and LSSB signaling with two different modulations.
- (c) $f_1 < f_c < f_2$. This is vestigial sideband signaling.
- (d) For which, if any, of these cases are $x(t)$ and $y(t)$ orthogonal?

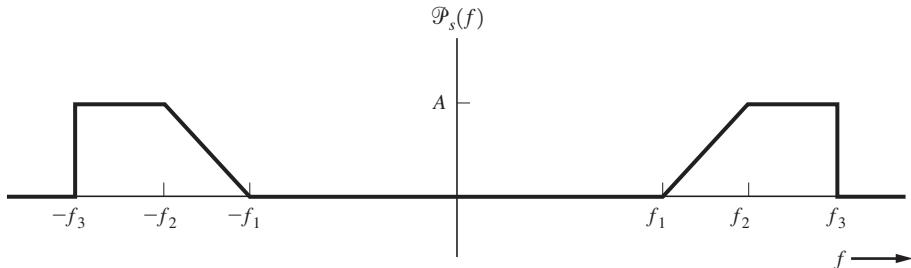


Figure P6-48

★ 6-49 Referring to Prob. 6-48(b), how are the two modulations $m_1(t)$ and $m_2(t)$ for the independent sidebands related to $x(t)$ and $y(t)$? Give the PSD for $m_1(t)$ and $m_2(t)$, where $m_1(t)$ is the modulation on the USSB portion of the signal and $m_2(t)$ is the modulation on the LSSB portion of $s(t)$.

6-50 For the bandpass random process, show that Equation (6-133m) is valid (property 13).

6-51 For the bandpass random process, show that Equation (6-133i) is valid (property 9).

★ 6-52 Referring to Example 6-12, find the PSD for a BPSK signal with Manchester-encoded data. (See Fig. 3-15.) Assume that the data have values of $a_n = \pm 1$ which are equally likely and that the data are independent from bit to bit.

6-53 The input to an envelope detector is an ergodic bandpass Gaussian noise process. The RMS value of the input is 2 V and the mean value is 0 V. The envelope detector has a voltage gain of 10. Find

- (a) The DC value of the output voltage.
- (b) The RMS value of the output voltage.

- 6-54** A narrowband-signal-plus-Gaussian noise process is represented by the equation

$$r(t) = A \cos(\omega_c t + \theta_c) + x(t) \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c)$$

where $A \cos(\omega_c t + \theta_c)$ is a sinusoidal carrier and the remaining terms are the bandpass noise with independent Gaussian I and Q components. Let the noise have an RMS value of σ and a mean of 0. The signal-plus-noise process appears at the input to an envelope detector. Show that the PDF for the output of the envelope detector is

$$f(R) = \begin{cases} \frac{R}{\sigma^2} e^{-(R^2+A^2)/(2\sigma^2)} I_0\left(\frac{RA}{\sigma^2}\right), & R \geq 0 \\ 0, & R < 0 \end{cases}$$

where

$$I_0(z) \triangleq \frac{1}{2\pi} \int_0^{2\pi} e^{z \cos \theta} d\theta$$

is the modified Bessel function of the first kind of zero order. $f(R)$ is known as a *Rician* PDF in honor of the late S. O. Rice, who was an outstanding engineer at Bell Telephone Laboratories.

- 6-55** Assume that

$$s(t) = \begin{cases} \frac{A}{T} t \cos \omega_c t, & 0 \leq t \leq T \\ 0, & t \text{ otherwise} \end{cases}$$

is a known signal. This signal plus white noise is present at the input to a matched filter.

- (a) Design a matched filter for $s(t)$. Sketch waveforms analogous to those shown in Fig. 6-16.
 (b) Sketch the waveforms for the correlation processor shown in Fig. 6-18.



- ★ 6-56** A baseband digital communication system uses polar signaling with a bit rate of $R = 2,000$ bits/s. The transmitted pulses are rectangular and the frequency response of channel filter is

$$H_c(f) = \frac{B}{B + jf}$$

where $B = 6,000$ Hz. The filtered pulses are the input to a receiver that uses integrate-and-dump processing, as illustrated in Fig. 6-17. Examine the integrator output for ISI. In particular,

- (a) Plot the integrator output when a binary “1” is sent.
 (b) Plot the integrator output for an all-pass channel, and compare this result with that obtained in part (a).



- 6-57** Refer to Fig. 6-19 for the detection of a BPSK signal. Suppose that the BPSK signal at the input is

$$r(t) = s(t) = \sum_{n=0}^7 d_n p(t - nT)$$

where

$$p(t) = \begin{cases} e^{-t} \cos \omega_c t, & 0 < t < T \\ 0, & t \text{ otherwise} \end{cases}$$

and the binary data d_n is the 8-bit string $\{+1, -1, -1, +1, +1, -1, +1, -1\}$. Use MATLAB to

- (a) Plot the input waveform $r(t)$.
 (b) Plot the integrator output waveform $r_0(t)$.
- ★ 6-58 A matched filter is described in Fig. P6-58.
- (a) Find the impulse response of the matched filter.
 (b) Find the pulse shape to which this filter is matched (the white-noise case).

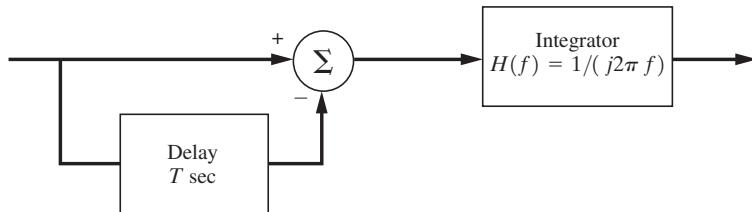


Figure P6-58



- ★ 6-59 An FSK signal $s(t)$ is applied to a correlation receiver circuit that is shown in Fig. P6-59. The FSK signal is

$$s(t) = \begin{cases} A \cos(\omega_1 t), & \text{when a binary 1 is sent} \\ A \cos(\omega_2 t), & \text{when a binary 1 is sent} \end{cases}$$

where $f_1 = f_c + \Delta F$ and $f_2 = f_c - \Delta F$. Let ΔF be chosen to satisfy the MSK condition, which is $\Delta F = 1/(4T)$. T is the time that it takes to send one bit, and the integrator is reset every T seconds. Assume that $A = 1$, $f_c = 1,000$ Hz, and $\Delta F = 50$ Hz.

- (a) If a binary 1 is sent, plot $v_1(t)$, $v_2(t)$, and $r_0(t)$ over a T -second interval.
 (b) Refer to Fig. 6-16, and find an expression that describes the output of a filter that is matched to the FSK signal when a binary 1 is sent. Plot the filter output.
 (c) Discuss how the plots obtained for parts (a) and (b) agree or disagree.

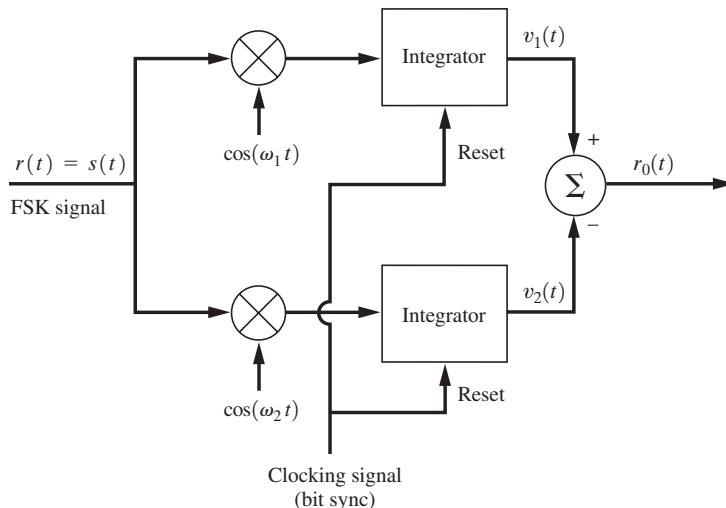


Figure P6-59

6-60 Let

$$s(t) = \operatorname{Re}\{g(t)e^{j(\omega_c t + \theta_c)}\}$$

be a wideband FM signal, where

$$g(t) = A_c e^{jD_f \int_{-\infty}^t m(\lambda) d\lambda}$$

and $m(t)$ is a random modulation process.

(a) Show that

$$R_g(\tau) = A_c^2 [e^{-jD_f \tau m(t)}]$$

when the integral $\int_t^{t+\tau} m(\lambda) d\lambda$ is approximated by $\tau m(t)$.

(b) Using the results of part (a), prove that the PSD of the wideband FM signal is given by Eq. (5-66). That is, show that

$$\mathcal{P}_s(f) = \frac{\pi A_c^2}{2D_f} \left[f_m \left(\frac{2\pi}{D_f} (f - f_c) \right) + f_m \left(\frac{2\pi}{D_f} (-f - f_c) \right) \right]$$



PERFORMANCE OF COMMUNICATION SYSTEMS CORRUPTED BY NOISE

CHAPTER OBJECTIVES

- Bit error rate for binary systems (unipolar, polar, bipolar, OOK, BPSK, FSK, and MSK)
- Output signal-to-noise ratio for analog systems (AM, SSB, PM, and FM)

As discussed in Chapter 1, the two primary considerations in the design of a communication system are as follows:

1. The *performance* of the system when it is corrupted by noise. The performance measure for a digital system is the probability of error of the output signal. For analog systems, the performance measure is the output signal-to-noise ratio.
2. The channel *bandwidth* that is required for transmission of the communication signal. This bandwidth was evaluated for various types of digital and analog signals in the previous chapters.

There are numerous ways in which the information can be demodulated (recovered) from the received signal that has been corrupted by noise. Some receivers provide optimum performance, but most do not. Often a suboptimum receiver will be used in order to lower the cost. In addition, some suboptimum receivers perform almost as well as optimum ones for all practical purposes. Here we will *analyze* the performance of some suboptimum as well as some optimum receivers.

7–1 ERROR PROBABILITIES FOR BINARY SIGNALING

General Results

Figure 7–1 shows a general block diagram for a binary communication system. The receiver input $r(t)$ consists of the transmitted signal $s(t)$ plus channel noise $n(t)$. For *baseband* signaling, the processing circuits in the receiver consist of low-pass filtering with appropriate amplification. For *bandpass* signaling, such as OOK, BPSK, and FSK, the processing circuits normally consist of a superheterodyne receiver containing a mixer, an IF amplifier, and a detector. These circuits produce a baseband analog output $r_0(t)$. (For example, when BPSK signaling is used, the detector might consist of a product detector and an integrator as described in Sec. 6–8 and illustrated in Fig. 6–19.)

The analog baseband waveform $r_0(t)$ is sampled at the clocking time $t = t_0 + nT$ to produce the samples $r_0(t_0 + nT)$, which are fed into a threshold device (a comparator). The threshold device produces the binary serial-data waveform $\tilde{m}(t)$.

In this subsection, we develop a *general technique* for evaluating the probability of encountering a bit error, also called the *bit-error rate* (BER), for binary signaling. In later sections, this technique will be used to obtain specific expressions for the BER of various binary signaling schemes, such as OOK, BPSK, and FSK.

To develop a general formula for the BER of a detected binary signal, let T be the duration of time it takes to transmit one bit of data. The transmitted signal over a bit interval $(0, T)$ is

$$s(t) = \begin{cases} s_1(t), & 0 < t \leq T, \text{ for a binary 1} \\ s_2(t), & 0 < t \leq T, \text{ for a binary 0} \end{cases} \quad (7-1)$$

where $s_1(t)$ is the waveform that is used if a binary 1 is transmitted and $s_2(t)$ is the waveform that is used if a binary 0 is transmitted. If $s_1(t) = -s_2(t)$, $s(t)$ is called an *antipodal* signal.

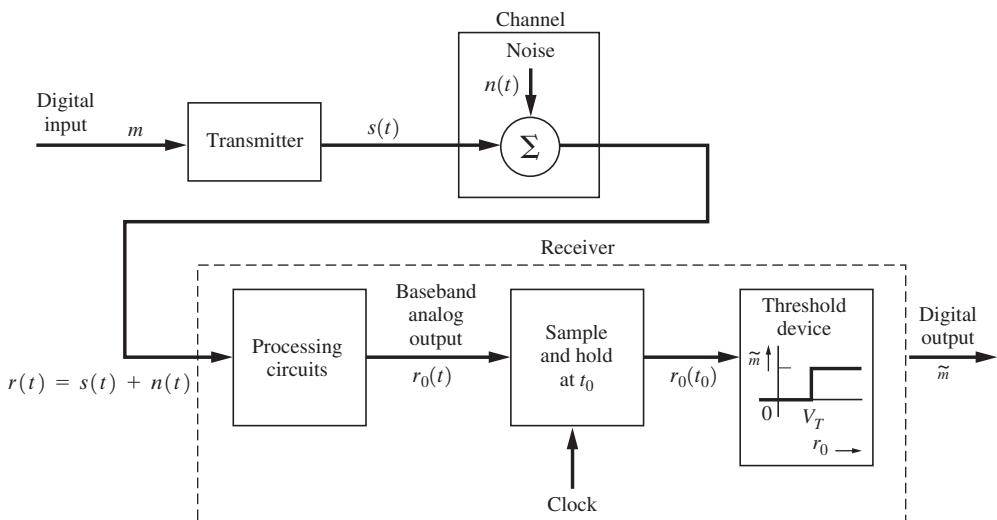


Figure 7–1 General binary communication system.

The binary signal plus noise at the receiver input produces a baseband analog waveform at the output of the processing circuits that is denoted by

$$r_0(t) = \begin{cases} r_{01}(t), & 0 < t \leq T, \text{ for a binary 1 sent} \\ r_{02}(t), & 0 < t \leq T, \text{ for a binary 0 sent} \end{cases} \quad (7-2)$$

where $r_{01}(t)$ is the output signal that is corrupted by noise for a binary 1 transmission and $r_{02}(t)$ is the output for the binary 0 transmission. (Note that if the receiver uses nonlinear processing circuits, such as an envelope detector, the superposition of the signal plus noise outputs are not valid operations.) This analog voltage waveform $r_0(t)$ is sampled at some time t_0 during the bit interval. That is, $0 < t_0 \leq T$. For matched-filter processing circuits, t_0 is usually T . The resulting sample is

$$r_0(t_0) = \begin{cases} r_{01}(t_0), & \text{for a binary 1 sent} \\ r_{02}(t_0), & \text{for a binary 0 sent} \end{cases} \quad (7-3)$$

It is realized that $r_0(t_0)$ is a *random variable* that has a *continuous distribution* because the channel noise has corrupted the signal. To shorten the notation, we will denote $r_0(t_0)$ simply by r_0 . That is,

$$r_0 = r_0(t_0) = \begin{cases} r_{01}, & \text{for a binary 1 sent} \\ r_{02}, & \text{for a binary 0 sent} \end{cases} \quad (7-4)$$

We call r_0 the *test statistic*.

For the moment, let us assume that we can evaluate the PDFs for the two random variables $r_0 = r_{01}$ and $r_0 = r_{02}$. These PDFs are actually *conditional PDFs*, since they depend, respectively, on a binary 1 or a binary 0 being transmitted. That is, when $r_0 = r_{01}$, the PDF is $f(r_0 | s_1 \text{ sent})$, and when $r_0 = r_{02}$, the PDF is $f(r_0 | s_2 \text{ sent})$. These conditional PDFs are shown in Fig. 7-2. For illustrative purposes, Gaussian shapes are shown. The actual shapes of the PDFs depend on the characteristics of the channel noise, the specific types of filter and detector circuits used, and the types of binary signals transmitted. (In later sections, we obtain specific PDFs using the theory developed in Chapter 6.)

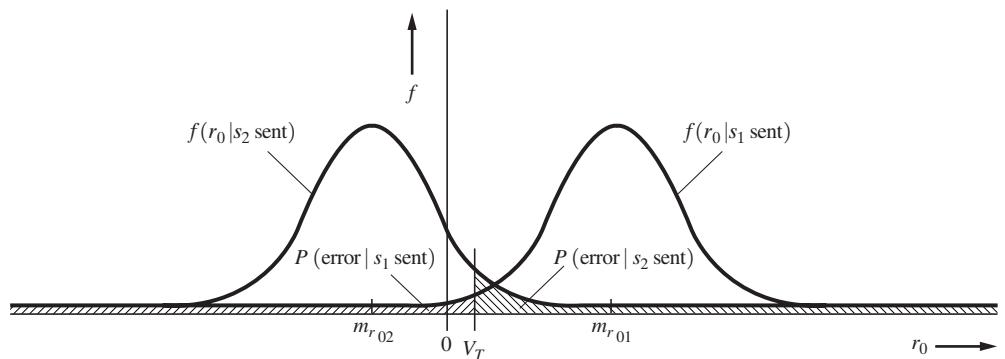


Figure 7-2 Error probability for binary signaling.

In our development of a general formula for the BER, assume that the *polarity of the processing circuits* of the receiver is such that if the *signal only* (no noise) were present at the receiver input, $r_0 > V_T$ when a *binary 1 is sent* and $r_0 < V_T$ when a *binary 0 is sent*; V_T is the threshold (voltage) setting of the comparator (threshold device).

When signal plus noise is present at the receiver input, errors can occur in two ways. An error occurs when $r_0 < V_T$ if a binary 1 is sent:

$$P(\text{error}|s_1 \text{ sent}) = \int_{-\infty}^{V_T} f(r_0|s_1) dr_0 \quad (7-5)$$

This is illustrated by a shaded area to the left of V_T in Fig. 7–2. Similarly, an error occurs when $r_0 > V_T$ if a binary 0 is sent:

$$P(\text{error}|s_2 \text{ sent}) = \int_{V_T}^{\infty} f(r_0|s_2) dr_0 \quad (7-6)$$

The BER is then

$$P_e = P(\text{error}|s_1 \text{ sent}) P(s_1 \text{ sent}) + P(\text{error}|s_2 \text{ sent}) P(s_2 \text{ sent}) \quad (7-7)$$

This follows from probability theory (see Appendix B), where the probability of an event that consists of joint events is

$$P(E) = \sum_{i=1}^2 P(E, s_i) = \sum_{i=1}^2 P(E|s_i) P(s_i)$$

When we combine Eqs. (7–5), (7–6), and (7–7), the general expression for the BER of any binary communication system is

$$P_e = P(s_1 \text{ sent}) \int_{-\infty}^{V_T} f(r_0|s_1) dr_0 + P(s_2 \text{ sent}) \int_{V_T}^{\infty} f(r_0|s_2) dr_0 \quad (7-8)$$

$P(s_1 \text{ sent})$ and $P(s_2 \text{ sent})$ are known as the *source statistics* or *a priori statistics*. In most applications, the source statistics are considered to be equally likely. That is,

$$P(\text{binary 1 sent}) = P(s_1 \text{ sent}) = \frac{1}{2} \quad (7-9a)$$

$$P(\text{binary 0 sent}) = P(s_2 \text{ sent}) = \frac{1}{2} \quad (7-9b)$$

In the results that we obtain throughout the remainder of this chapter, we will assume that the source statistics are equally likely. The conditional PDFs depend on the signaling waveshapes involved, the channel noise, and the receiver processing circuits used. These are obtained subsequently for the case of Gaussian channel noise and linear processing circuits.

Results for Gaussian Noise

Assume that the channel noise is a zero-mean wide-sense stationary Gaussian process and that the receiver processing circuits, except for the threshold device, are linear. Then we know (see Chapter 6) that for a Gaussian process at the input, the output of the linear processor will

also be a Gaussian process. For baseband signaling, the processing circuits would consist of linear filters with some gain. For bandpass signaling, as we demonstrated in Chapter 4, a super-heterodyne circuit (consisting of a mixer, IF stage, and product detector) is a linear circuit. However, if automatic gain control (AGC) or limiters are used, the receiver will be nonlinear, and the results of this section will not be applicable. In addition, if a nonlinear detector such as an envelope detector is used, the output noise will not be Gaussian. For the case of a linear-processing receiver circuit with a binary signal plus noise at the input, the sampled output is

$$r_0 = s_0 + n_0 \quad (7-10)$$

Here the shortened notation $r_0(t_0) = r_0$ is used. $n_0(t_0) = n_0$ is a zero-mean Gaussian random variable, and $s_0(t_0) = s_0$ is a constant that depends on the signal being sent. That is,

$$s_0 = \begin{cases} s_{01}, & \text{for a binary 1 sent} \\ s_{02}, & \text{for a binary 0 sent} \end{cases} \quad (7-11)$$

where s_{01} and s_{02} are known constants for a given type of receiver with known input signaling waveshapes $s_1(t)$ and $s_2(t)$. Since the output noise sample n_0 is a zero-mean Gaussian random variable, the total output sample r_0 is a Gaussian random variable with a mean value of either s_{01} or s_{02} , depending on whether a binary 1 or a binary 0 was sent. This is illustrated in Fig. 7-2, where the mean value of r_0 is $m_{r_{01}} = s_{01}$ when a binary 1 is sent and the mean value of r_0 is $m_{r_{02}} = s_{02}$ when a binary 0 is sent. Thus, the two conditional PDFs are

$$f(r_0|s_1) = \frac{1}{\sqrt{2\pi}\sigma_0} e^{-(r_0-s_{01})^2/(2\sigma_0^2)} \quad (7-12)$$

and

$$f(r_0|s_2) = \frac{1}{\sqrt{2\pi}\sigma_0} e^{-(r_0-s_{02})^2/(2\sigma_0^2)} \quad (7-13)$$

$\sigma_0^2 = \overline{n_0^2} = \overline{n_0^2(t_0)} = \overline{n_0^2(t)}$ is the average power of the *output* noise from the receiver processing circuit where the output noise process is wide-sense stationary.

Using equally likely source statistics and substituting Eqs. (7-12) and (7-13) into Eq. (7-8), we find that the BER becomes

$$P_e = \frac{1}{2} \int_{-\infty}^{V_T} \frac{1}{\sqrt{2\pi}\sigma_0} e^{-(r_0-s_{01})^2/(2\sigma_0^2)} dr_0 + \frac{1}{2} \int_{V_T}^{\infty} \frac{1}{\sqrt{2\pi}\sigma_0} e^{-(r_0-s_{02})^2/(2\sigma_0^2)} dr_0 \quad (7-14)$$

This can be reduced to the $Q(z)$ functions defined in Sec. B-7 (Appendix B) and tabulated in Sec. A-10 (Appendix A). Let $\lambda = -(r_0 - s_{01})/\sigma_0$ in the first integral and $\lambda = (r_0 - s_{02})/\sigma_0$ in the second integral; then

$$P_e = \frac{1}{2} \int_{-(V_T - s_{01})/\sigma_0}^{\infty} \frac{1}{\sqrt{2\pi}} e^{-\lambda^2/2} d\lambda + \frac{1}{2} \int_{(V_T - s_{02})/\sigma_0}^{\infty} \frac{1}{\sqrt{2\pi}} e^{-\lambda^2/2} d\lambda$$

or

$$P_e = \frac{1}{2} Q\left(\frac{-V_T + s_{01}}{\sigma_0}\right) + \frac{1}{2} Q\left(\frac{V_T - s_{02}}{\sigma_0}\right) \quad (7-15)$$

Example 7–1 ERROR PROBABILITY FOR BINARY SIGNALING

Using Eq. (7–15), evaluate the probability of error for binary signaling in the presence of additive Gaussian noise. See Example7_01.m for the solution.

By using the appropriate value for the comparator threshold, V_T , this probability of error can be minimized. To find the V_T that minimizes P_e , we need to solve $dP_e/dV_T = 0$. Using Leibniz's rule, Sec. A-2, for differentiating the integrals of Eq. (7–14), we obtain

$$\frac{dP_e}{dV_T} = \frac{1}{2} \frac{1}{\sqrt{2\pi}\sigma_0} e^{-(V_T-s_{01})^2/(2\sigma_0^2)} - \frac{1}{2} \frac{1}{\sqrt{2\pi}\sigma_0} e^{-(V_T-s_{02})^2/(2\sigma_0^2)} = 0$$

or

$$e^{-(V_T-s_{01})^2/(2\sigma_0^2)} = e^{-(V_T-s_{02})^2/(2\sigma_0^2)}$$

which implies the condition

$$(V_T - s_{01})^2 = (V_T - s_{02})^2$$

Consequently, for minimum P_e , the threshold setting of the comparator needs to be

$$V_T = \frac{s_{01} + s_{02}}{2} \quad (7-16)$$

Substituting Eq. (7–16) into Eq. (7–15), we obtain the expression for the minimum P_e . Thus, for binary signaling in Gaussian noise and with the optimum threshold setting as specified by Eq. (7–16), the BER is

$$P_e = Q\left(\frac{s_{01} - s_{02}}{2\sigma_0}\right) = Q\left(\sqrt{\frac{(s_{01} - s_{02})^2}{4\sigma_0^2}}\right) \quad (7-17)$$

where it is assumed that $s_{01} > V_T > s_{02}$.[†] So far, we have optimized only the threshold level, not the filters in the processing circuits.

Results for White Gaussian Noise and Matched-Filter Reception

If the receiving filter (in the processing circuits of Fig. 7–1) is optimized, the BER as given by Eq. (7–17) can be reduced. To minimize P_e , we need to maximize the argument of Q , as is readily seen from Fig. B–7. Thus, we need to find the linear filter that maximizes

[†] If $s_{01} < V_T < s_{02}$, the result is

$$P_e = Q\left(\frac{s_{02} - s_{01}}{2\sigma_0}\right) = Q\left(\sqrt{\frac{(s_{02} - s_{01})^2}{4\sigma_0^2}}\right)$$

where the characteristic of the threshold device in Fig. 7–1 is altered so that a binary 0 is chosen when $r_0 > V_T$ and a binary 1 is chosen when $r_0 < V_T$.

$$\frac{[s_{01}(t_0) - s_{02}(t_0)]^2}{\sigma_0^2} = \frac{[s_d(t_0)]^2}{\sigma_0^2}$$

$s_d(t_0) \triangleq s_{01}(t_0) - s_{02}(t_0)$ is the *difference signal* sample value that is obtained by subtracting the sample s_{02} from s_{01} . The corresponding instantaneous power of the difference output signal at $t = t_0$ is $s_d^2(t_0)$. As derived in Sec. 6–8, the linear filter that maximizes the instantaneous output signal power at the sampling time $t = t_0$ when compared with the average output noise power $\sigma_0^2 = n_0^2(t)$ is the *matched filter*. For the case of *white noise* at the receiver input, the *matched filter needs to be matched to the difference signal* $s_d(t) = s_1(t) - s_2(t)$. Thus, the impulse response of the matched filter for binary signaling is

$$h(t) = C[s_1(t_0 - t) - s_2(t_0 - t)] \quad (7-18)$$

where $s_1(t)$ is the signal (only) that appears at the receiver input when a binary 1 is sent, $s_2(t)$ is the signal that is received when a binary 0 is sent, and C is a real constant. Furthermore, by using Eq. (6-161), the output peak signal to average noise ratio that is obtained from the matched filter is

$$\frac{[s_d(t_0)]^2}{\sigma_0^2} = \frac{2E_d}{N_0}$$

$N_0/2$ is the PSD of the noise at the *receiver input*, and E_d is the difference signal energy at the *receiver input*, where

$$E_d = \int_0^T [s_1(t) - s_2(t)]^2 dt \quad (7-19)$$

Thus, for binary signaling corrupted by *white Gaussian noise*, *matched-filter* reception, and by using the optimum threshold setting, the BER is

$$P_e = Q\left(\sqrt{\frac{E_d}{2N_0}}\right) \quad (7-20)$$

We will use this result to evaluate the P_e for various types of binary signaling schemes where matched-filter reception is used.

Results for Colored Gaussian Noise and Matched-Filter Reception

The technique that we just used to obtain the BER for binary signaling in white noise can be modified to evaluate the BER for the colored noise case. The modification used is illustrated in Fig. 7-3. Here a *prewhitening filter* is inserted ahead of the receiver processing circuits. The transfer function of the prewhitening filter is

$$H_p(f) = \frac{1}{\sqrt{\mathcal{P}_n(f)}} \quad (7-21)$$

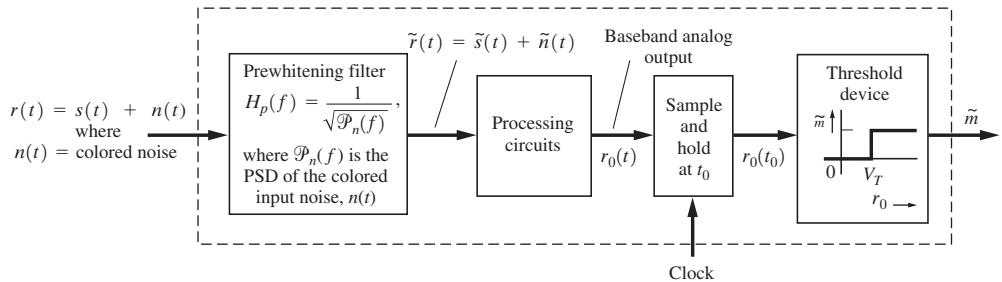


Figure 7–3 Matched-filter receiver for colored noise.

so that the noise that appears at the filter output, $\tilde{n}(t)$, is white. We have now converted the colored noise problem into a white noise problem, so that the design techniques presented in the preceding section are applicable. The matched filter in the processing circuits is now matched to the *filtered waveshapes*,

$$\tilde{s}(t) = \tilde{s}_1(t) = s_1(t) * h_p(t) \quad (\text{binary 1}) \quad (7-22a)$$

$$\tilde{s}(t) = \tilde{s}_2(t) = s_2(t) * h_p(t) \quad (\text{binary 0}) \quad (7-22b)$$

where $h_p(t) = \mathcal{F}^{-1}[H_p(f)]$. Since the prewhitening will produce signals $\tilde{s}_1(t)$ and $\tilde{s}_2(t)$, which are spread beyond the T -second signaling interval, two types of degradation will result:

- The signal energy of the filtered signal that occurs beyond the T -second interval will not be used by the matched filter in maximizing the output signal.
- The portions of signals from previous signaling intervals that occur in the present signaling interval will produce ISI. (See Chapter 3.)

Both of these effects can be reduced if the duration of the original signal is made less than the T -second signaling interval, so that almost all of the spread signal will occur within that interval.

7–2 PERFORMANCE OF BASEBAND BINARY SYSTEMS

Unipolar Signaling

As illustrated in Fig. 7–4b, the two baseband signaling waveforms are

$$s_1(t) = +A, \quad 0 < t \leq T \quad (\text{binary 1}) \quad (7-23a)$$

$$s_2(t) = 0, \quad 0 < t \leq T \quad (\text{binary 0}) \quad (7-23b)$$

where $A > 0$. This unipolar signal plus white Gaussian noise is present at the receiver input.

First, evaluate the performance of a receiver that uses an LPF, $H(f)$, with unity gain. Choose the equivalent bandwidth of this LPF to be $B > 2/T$, so that the unipolar signaling waveshape is preserved (approximately) at the filter output, yet the noise will be reduced by

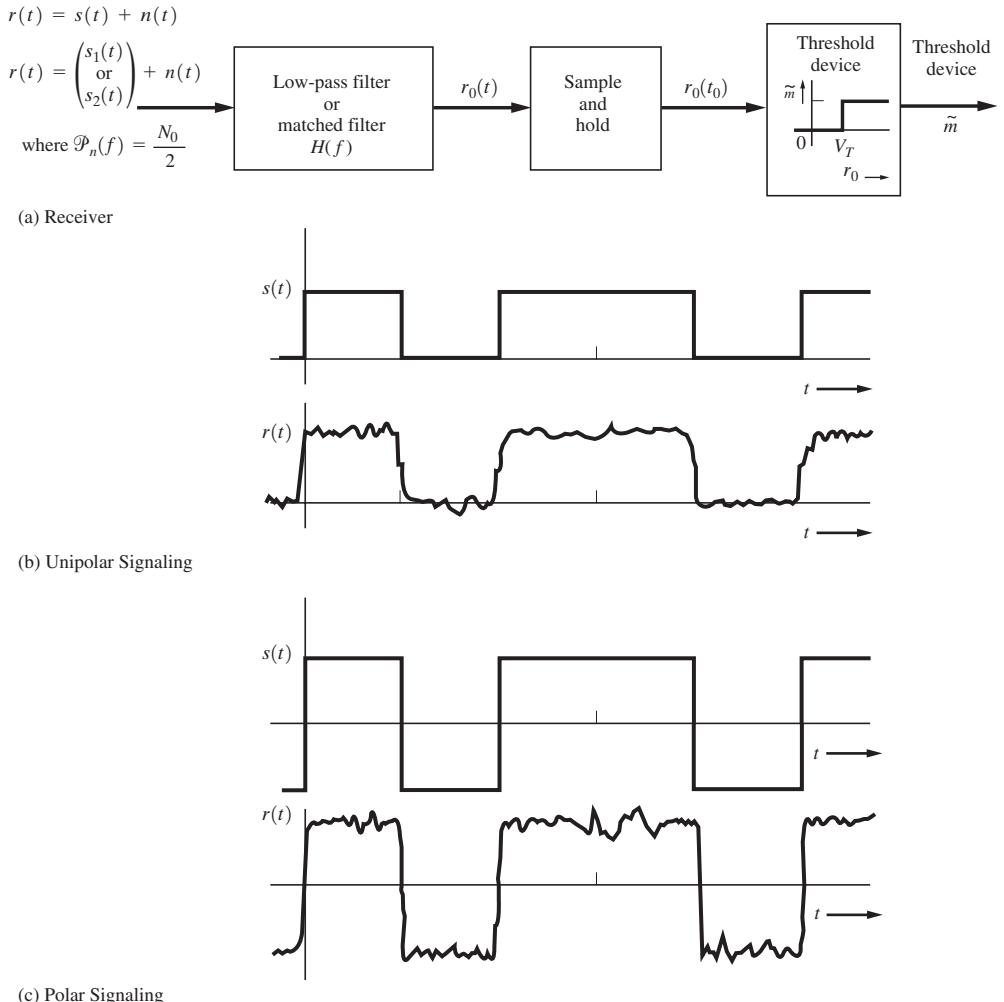


Figure 7–4 Receiver for baseband binary signaling.

the filter.[†] Thus, $s_{01}(t_0) \approx A$ and $s_{02}(t_0) \approx 0$. The noise power at the output of the filter is $\sigma_0^2 = (N_0/2)(2B)$, where B is the equivalent bandwidth of the filter. The optimum threshold setting is then $V_T = \frac{1}{2}A$. When we use Eq. (7–17), the BER is

$$P_e = Q\left(\sqrt{\frac{A^2}{4N_0B}}\right) \quad (\text{low-pass filter}) \quad (7-24a)$$

for a receiver that uses an LPF with an equivalent bandwidth of B .

[†] From Eq. (3–39b), the PSD of a unipolar signal (rectangular pulse shape) is proportional to $[\sin(\pi fT)/(\pi fT)]^2$, so that the second null bandwidth is $2/T$. Referring to study-aid examples SA7–1 and SA7–2, it is shown that if the equivalent bandwidth of the LPF is greater than $2/T$, the filtered signal will consist of pulses that are almost rectangular in shape and the peak values of the pulses are approximately equal to A .

The performance of a matched-filter receiver is obtained by using Eq. (7–20), where the sampling time is $t_0 = T$. The energy in the difference signal is $E_d = A^2T$, so that the BER is

$$P_e = Q\left(\sqrt{\frac{A^2T}{2N_0}}\right) = Q\left(\sqrt{\frac{E_b}{N_0}}\right) \quad (\text{matched filter}) \quad (7-24b)$$

where the average energy per bit is $E_b = A^2T/2$ because the energy for a binary 1 is A^2T and the energy for a binary 0 is 0. For the rectangular pulse shape, the matched filter is an integrator. Consequently, the optimum threshold value is

$$V_T = \frac{s_{01} + s_{02}}{2} = \frac{1}{2}\left(\int_0^T A dt + 0\right) = \frac{AT}{2}$$

Often it is desirable to express the BER in terms of E_b/N_0 , because it indicates the average energy required to transmit one bit of data over a white (thermal) noise channel. By expressing the BER in terms of E_b/N_0 , the performance of different signaling techniques can be easily compared.

A plot of Eq. (7–24b) is shown in Fig. 7–5.

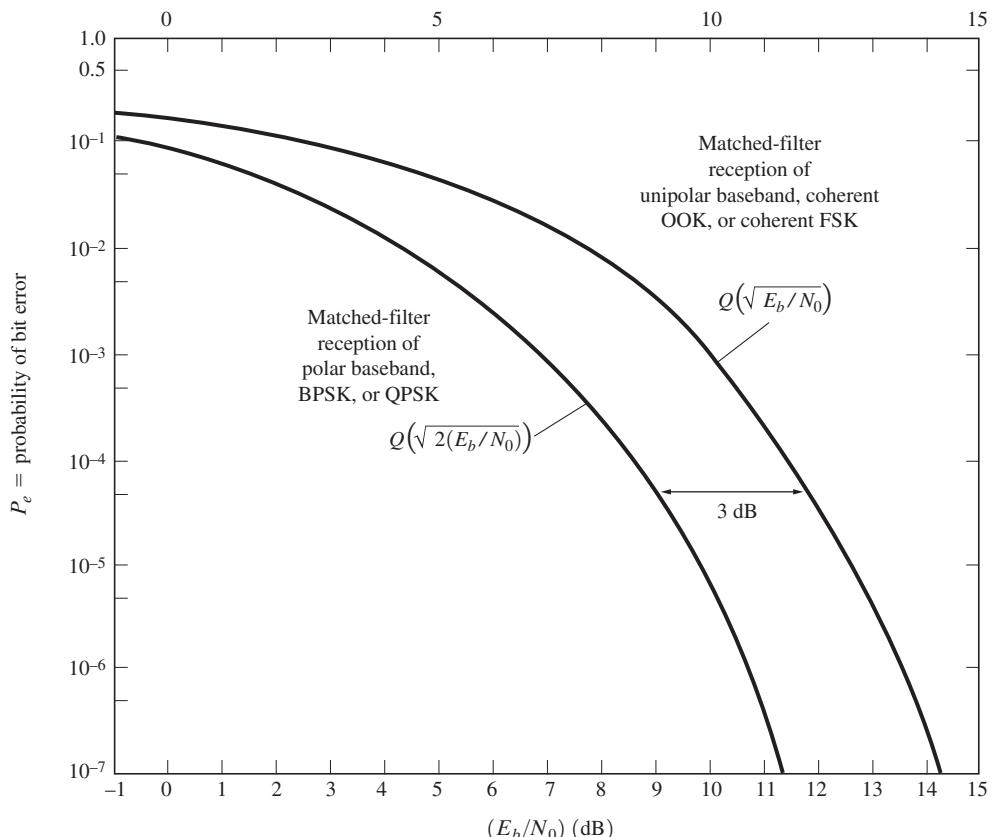


Figure 7–5 P_e for matched-filter reception of several binary signaling schemes. (See Example 7_02.m.)

Polar Signaling

As shown in Fig. 7-4c, the baseband polar signaling waveform is

$$s_1(t) = +A, \quad 0 < t \leq T \quad (\text{binary 1}) \quad (7-25\text{a})$$

$$s_2(t) = -A, \quad 0 < t \leq T \quad (\text{binary 0}) \quad (7-25\text{b})$$

The polar signal is an antipodal signal, since $s_1(t) = -s_2(t)$.

The performance of an LPF receiver system is obtained by using Eq. (7-17). Assuming that the equivalent bandwidth of the LPF is $B \geq 2/T$, we realize that the output signal samples are $s_{01}(t_0) \approx A$ and $s_{02}(t_0) \approx -A$ at the sampling time $t = t_0$. In addition, $\sigma_0^2 = (N_0 B)$. The optimum threshold setting is now $V_T = 0$. Thus, the BER for polar signaling is

$$P_e = Q\left(\sqrt{\frac{A^2}{N_0 B}}\right) \quad (\text{low-pass filter}) \quad (7-26\text{a})$$

where B is the equivalent bandwidth of the LPF.

The performance of the matched-filter receiver is obtained, once again, by using Eq. (7-20), where $t_0 = T$. (The integrate-and-dump matched filter for polar signaling was given in Fig. 6-17.) Since the energy of the difference signal is $E_d = (2A)^2 T$, the BER is

$$P_e = Q\left(\sqrt{\frac{2A^2 T}{N_0}}\right) = Q\left(\sqrt{2\left(\frac{E_b}{N_0}\right)}\right) \quad (\text{matched filter}) \quad (7-26\text{b})$$

where the average energy per bit is $E_b = A^2 T$. The optimum threshold setting is $V_T = 0$.

A plot of the BER for unipolar and polar baseband signaling is shown in Fig. 7-5. It is apparent that polar signaling has a 3-dB advantage over unipolar signaling, since unipolar signaling requires a E_b/N_0 that is 3 dB larger than that for polar signaling for the same P_e .

Bipolar Signaling

For bipolar NRZ signaling, binary 1's are represented by alternating positive and negative values, and the binary 0's are represented by a zero level. Thus,

$$s_1(t) = \pm A, \quad 0 < t \leq T \quad (\text{binary 1}) \quad (7-27\text{a})$$

$$s_2(t) = 0, \quad 0 < t \leq T \quad (\text{binary 0}) \quad (7-27\text{b})$$

where $A > 0$. This is similar to unipolar signaling, except two thresholds, $+V_T$ and $-V_T$, are needed as shown in Fig. 7-6. Figure 7-6b illustrates the error probabilities for the case of additive Gaussian noise. The BER is

$$\begin{aligned} P_e = & P(\text{error} | +A \text{ sent})P(+A \text{ sent}) + P(\text{error} | -A \text{ sent})P(-A \text{ sent}) \\ & + P(\text{error} | s_2 \text{ sent})P(s_2 \text{ sent}) \end{aligned}$$

and, by using Fig. 7-6b, we find that

$$P_e \approx \left[2Q\left(\frac{A - V_T}{\sigma_0}\right) \right] \frac{1}{4} + \left[2Q\left(\frac{V_T}{\sigma_0}\right) \right] \frac{1}{2}$$

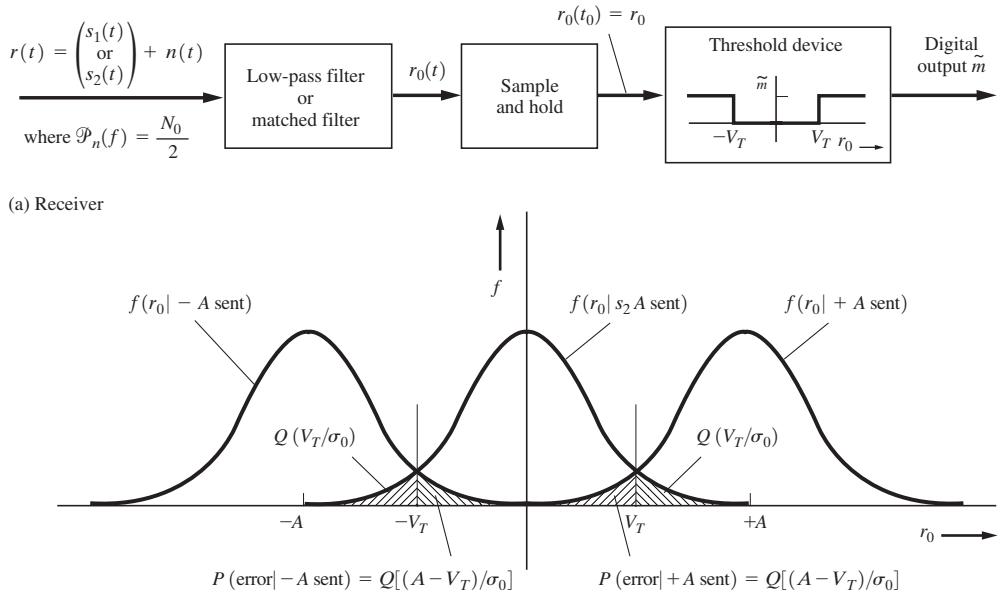


Figure 7-6 Receiver for bipolar signaling.

or

$$P_e \approx Q\left(\frac{V_T}{\sigma_0}\right) + \frac{1}{2}Q\left(\frac{A - V_T}{\sigma_0}\right)$$

using calculus, we find that the optimum value of V_T that gives the minimum BER is $V_T = \frac{A}{2} + \frac{\sigma_0^2}{A} \ln 2$. For systems with reasonably low (i.e., usable) BERs, $A > \sigma_0$, so that the optimum threshold becomes approximately $V_T = A/2$, the BER is

$$P_e = \frac{3}{2} Q\left(\frac{A}{2\sigma_0}\right)$$

For the case of a receiver with a low-pass filter that has a bipolar signal plus white noise at its input, $\sigma_0^2 = N_0 B$. Thus, the BER is

$$P_e = \frac{3}{2} Q\left(\sqrt{\frac{A^2}{4N_0 B}}\right) \quad (\text{low-pass filter}) \quad (7-28a)$$

where the PSD of the input noise is $N_0/2$ and the equivalent bandwidth of the filter is B Hz. If a matched filter is used, its output SNR is, using Eq. (6-161),

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{A^2}{\sigma_0^2} = \frac{2E_d}{N_0}$$

For bipolar NRZ signaling, the energy in the different signal is $E_d = A^2T = 2E_b$ where E_b is the average energy per bit. Thus, for a matched-filter receiver, the BER is

$$P_e = \frac{3}{2} Q\left(\sqrt{\frac{E_b}{N_0}}\right) \quad (\text{matched filter}) \quad (7-28b)$$

For bipolar RZ signaling, $E_d = A^2T/4 = 2E_b$, so that the resulting BER formula is identical to Eq. (7-28b). These results show that the BER for bipolar signaling is just $\frac{3}{2}$ that for unipolar signaling as described by Eq. (7-24b).

Example 7-2 BER FOR POLAR, UNIPOLAR, AND BIPOLAR NRZ SIGNALING WITH MATCHED FILTERING

Evaluate and plot the bit error rate (BER) for the cases of polar NRZ, unipolar NRZ, and bipolar NRZ signaling in the presence of additive white Gaussian noise (AWGN). In all cases assume that matched filtering is used at the receiver. See Example7_02.m for the solution. Compare these results with those shown in Fig. 7-5.

Example 7-3 BER FOR POLAR, UNIPOLAR, AND BIPOLAR NRZ SIGNALING WITH LOW-PASS FILTERING

Repeat Example 7-2, except assume that low-pass filtering (LPF) is used in all of the receivers where $B = 2/T$. See Example7_03.m for the solution.

7-3 COHERENT DETECTION OF BANDPASS BINARY SIGNALS

On-Off Keying

From Fig. 5-1c, an OOK signal is represented by

$$s_1(t) = A \cos(\omega_c t + \theta_c), \quad 0 < t \leq T \quad (\text{binary 1}) \quad (7-29a)$$


or

$$s_2(t) = 0, \quad 0 < t \leq T \quad (\text{binary 0}) \quad (7-29b)$$


For coherent detection, a product detector is used as illustrated in Fig. 7-7. Actually, in RF applications, a mixer would convert the incoming OOK signal to an IF, so that stable high-gain amplification could be conveniently achieved and then a product detector would translate the signal to baseband. Figure 7-7, equivalently, represents these operations by converting the incoming signal and noise directly to baseband.

Assume that the OOK signal plus white (over the equivalent bandpass) Gaussian noise is present at the receiver input. As developed in Chapter 6, this bandpass noise may be represented by


$$n(t) = x(t) \cos(\omega_c t + \theta_n) - y(t) \sin(\omega_c t + \theta_n)$$

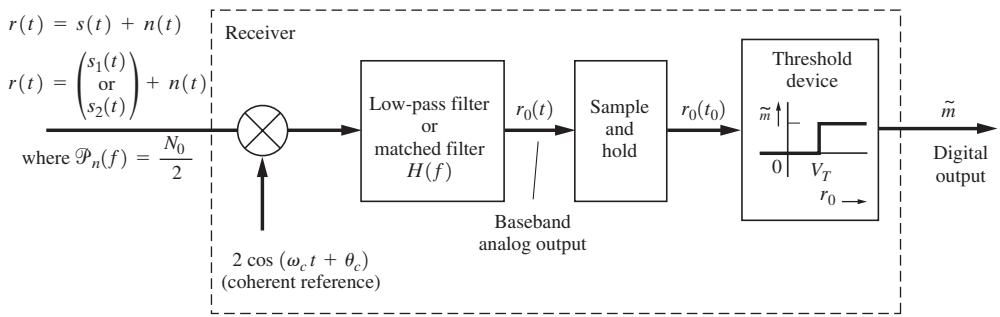

(a) Receiver

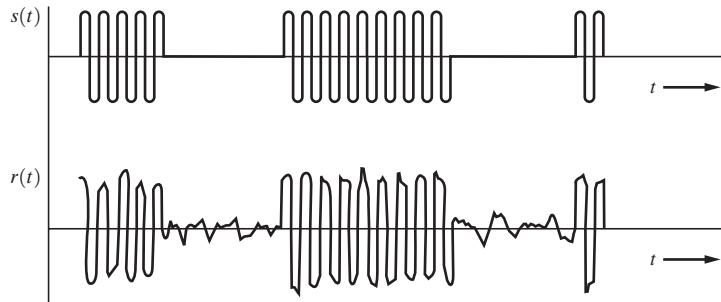

(b) OOK Signaling

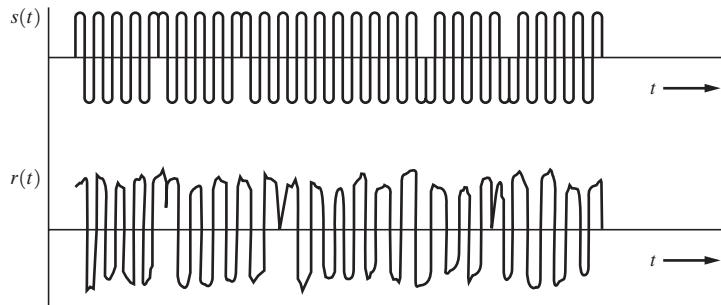

(c) BPSK Signaling

Figure 7-7 Coherent detection of OOK or BPSK signals.

where the PSD of $n(t)$ is $\mathcal{P}_n(f) = N_0/2$ and θ_n is a uniformly distributed random variable that is independent of θ_c .

The receiving filter $H(f)$ of Fig. 7-7 may be some convenient LPF, or it may be a matched filter. Of course, the receiver would be optimized (for the lowest P_e) if a matched filter were used.

First, evaluate the performance of a receiver that uses an LPF where the filter has a DC gain of unity. Assume that the equivalent bandwidth of the filter is $B \geq 2/T$, so that the

envelope of the OOK signal is (approximately) preserved at the filter output. The baseband analog output will be

$$r_0(t) = \begin{cases} A, & 0 < t \leq T, \text{ binary 1} \\ 0, & 0 < t \leq T, \text{ binary 0} \end{cases} + x(t) \quad (7-30)$$

where $x(t)$ is the baseband noise. With the help of Eq. (6-133g), we calculate noise power as $\overline{x^2(t)} = \sigma_0^2 = n^2(t) = 2(N_0/2)(2B) = 2N_0B$. Because $s_{01} = A$ and $s_{02} = 0$, the optimum threshold setting is $V_T = A/2$. When we use equation (7-17), the BER is

$$P_e = Q\left(\sqrt{\frac{A^2}{8N_0B}}\right) \quad (\text{narrowband filter}) \quad (7-31)$$

B is the equivalent bandwidth of the LPF. The equivalent bandpass bandwidth of this receiver is $B_p = 2B$.

The performance of a matched-filter receiver is obtained by using Eq. (7-20). The energy in the difference signal at the receiver input is[†]

$$E_d = \int_0^T [A \cos(\omega_c t + \theta_c) - 0]^2 dt = \frac{A^2 T}{2} \quad (7-32)$$

Consequently, the BER is

$$P_e = Q\left(\sqrt{\frac{A^2 T}{4N_0}}\right) = Q\left(\sqrt{\frac{E_b}{N_0}}\right) \quad (\text{matched filter}) \quad (7-33)$$

where the average energy per bit is $E_b = A^2 T / 4$. For this case, where $s_1(t)$ has a rectangular (real) envelope, the matched filter is an integrator. Consequently, the optimum threshold value is

$$V_T = \frac{s_{01} + s_{02}}{2} = \frac{1}{2} s_{01} = \frac{1}{2} \left[\int_0^T 2A \cos^2(\omega_c t + \theta_c) dt \right]$$

which reduces to $V_T = AT/2$ when $f_c \gg R$. Note that the performance of OOK is exactly the same as that for baseband unipolar signaling, as illustrated in Fig. 7-5.

Binary-Phase-Shift Keying

Referring to Fig. 7-7, we see that the BPSK signal is

$$s_1(t) = A \cos(\omega_c t + \theta_c), \quad 0 < t \leq T \quad (\text{binary 1}) \quad (7-34a)$$

and

$$s_2(t) = -A \cos(\omega_c t + \theta_c), \quad 0 < t \leq T \quad (\text{binary 0}) \quad (7-34b)$$

[†] Strictly speaking, f_c needs to be an integer multiple of half the bit rate, $R = 1/T$, to obtain exactly $A^2 T / 2$ for E_d . However, because $f_c \gg R$, for all practical purposes $E_d = A^2 T / 2$, regardless of whether or not $f_c = nR/2$.

BPSK signaling is also called *phase-reversal keying* (PRK). The BPSK signal is an antipodal signal because $s_1(t) = -s_2(t)$.

Once again, first evaluate the performance of a receiver that uses an LPF having a gain of unity and an equivalent bandwidth of $B \geq 2/T$. The baseband analog output is

$$r_0(t) = \begin{cases} A, & 0 < t \leq T \\ -A, & 0 < t \leq T, \end{cases} \begin{matrix} \text{binary 1} \\ \text{binary 0} \end{matrix} + x(t) \quad (7-35)$$

where $\overline{x^2(t)} = \sigma_0^2 = \overline{n^2(t)} = 2N_0B$. Because $s_{01} = A$ and $s_{02} = -A$, the optimum threshold is $V_T = 0$. When we use Eq. (7-17), the BER is

$$P_e = Q\left(\sqrt{\frac{A^2}{2N_0B}}\right) \quad (\text{narrowband filter}) \quad (7-36)$$

When BPSK is compared with OOK on a *peak envelope power* (PEP) basis for a given value of N_0 , 6 dB less (peak) signal power is required for BPSK signaling to give the same P_e as that for OOK. However, if the two are compared on an average (signal) power basis, the performance of BPSK has a 3-dB advantage over OOK, since the average power of OOK is 3 dB below its PEP (equally likely signaling), but the average power of BPSK is equal to its PEP.

The performance of the matched-filter receiver is obtained by using Eq. (7-20). Recall the matched filter for BPSK signaling that was illustrated in Fig. 6-19, where a correlation processor using an integrate-and-dump filter was shown. The energy in the difference signal at the receiver input is

$$E_d = \int_0^T [2A \cos(\omega_c t + \theta_c)]^2 dt = 2A^2 T \quad (7-37)$$

Thus, the BER is

$$P_e = Q\left(\sqrt{\frac{A^2 T}{N_0}}\right) = Q\left(\sqrt{2\left(\frac{E_b}{N_0}\right)}\right) \quad (\text{matched filter}) \quad (7-38)$$


where the average energy per bit is $E_b = A^2 T / 2$ and $V_T = 0$. The performance of BPSK is exactly the same as that for baseband polar signaling; however, it is 3 dB superior to OOK signaling. (See Fig. 7-5.)

Example 7-4 BER FOR BPSK SIGNALING


Evaluate and plot the BER for BPSK signaling in the presence of AWGN. Obtain results for both a matched-filter receiver and an LPF receiver, where $B = 2/T$. See Example7_04.m for the solution.

Frequency-Shift Keying

The FSK signal can be coherently detected by using two product detectors. This is illustrated in Fig. 7-8, where identical LPFs at the output of the product detectors have been replaced by

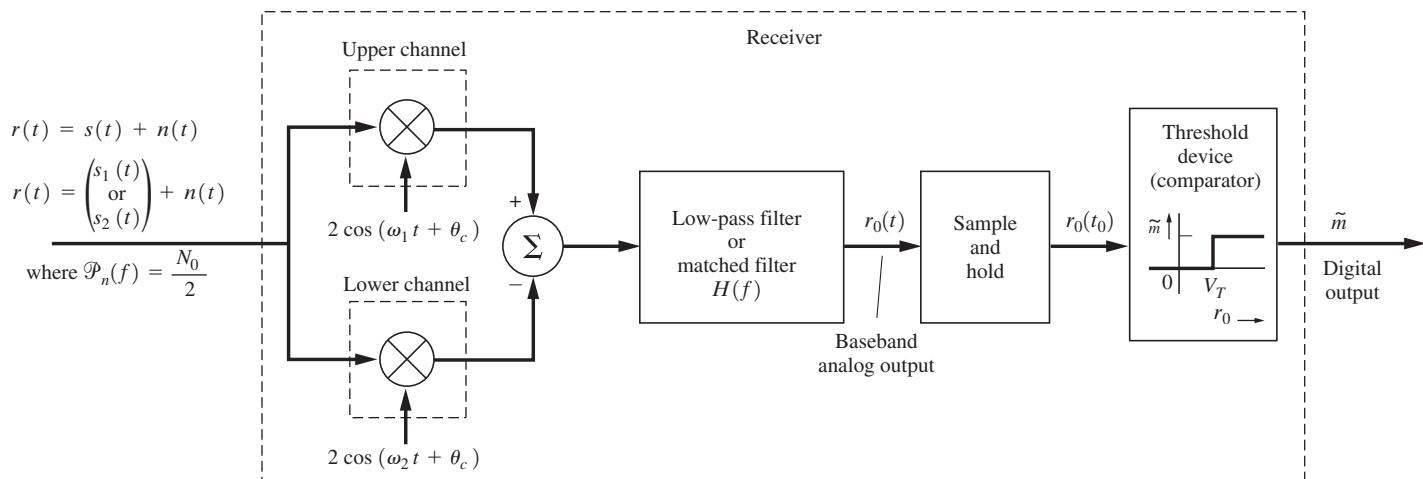

(a) Receiver

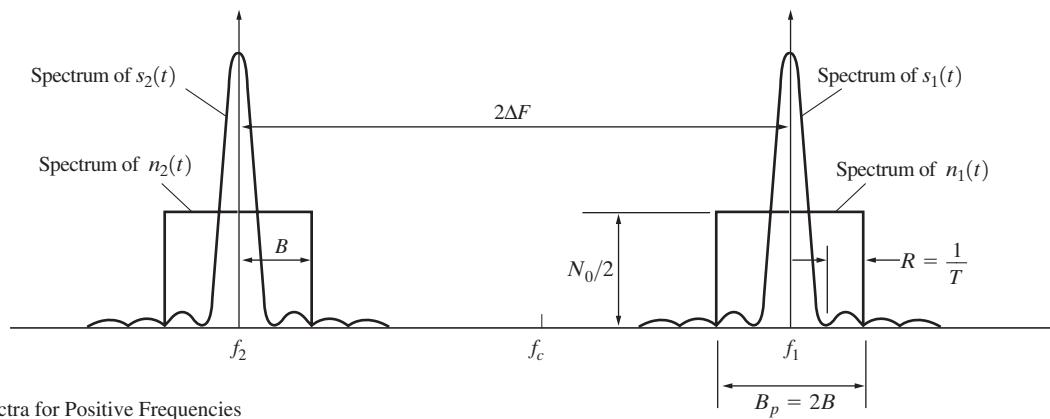

(b) Power Spectra for Positive Frequencies

Figure 7–8 Coherent detection of an FSK signal.

only one of the filters, since the order of linear operations may be exchanged without affecting the results. The mark (binary 1) and space (binary 0) signals are

$$s_1(t) = A \cos(\omega_1 t + \theta_c), \quad 0 < t \leq T \quad (\text{binary 1}) \quad (7-39a)$$

$$s_2(t) = A \cos(\omega_2 t + \theta_c), \quad 0 < t \leq T \quad (\text{binary 0}) \quad (7-39b)$$

where the frequency shift is $2\Delta F = f_1 - f_2$, assuming that $f_1 > f_2$. This FSK signal plus white Gaussian noise is present at the receiver input. The PSD for $s_1(t)$ and $s_2(t)$ is shown in Fig. 7-8b.

First, evaluate the performance of a receiver that uses an LPF $H(f)$ with a DC gain of 1. Assume that the equivalent bandwidth of the filter is $2/T \leq B < \Delta F$. The LPF, when combined with the frequency translation produced by the product detectors, acts as dual bandpass filters—one centered at $f = f_1$ and the other at $f = f_2$, where each has an equivalent bandwidth of $B_p = 2B$. Thus, the input noise that affects the output consists of two narrowband components $n_1(t)$ and $n_2(t)$, where the spectrum of $n_1(t)$ is centered at f_1 and the spectrum of $n_2(t)$ is centered at f_2 , as shown in Fig. 7-8. Furthermore, $n(t) = n_1(t) + n_2(t)$, where, using Eq. (6-130),

$$n_1(t) = x_1(t) \cos(\omega_1 t + \theta_c) - y_1(t) \sin(\omega_1 t + \theta_c) \quad (7-40a)$$

and

$$n_2(t) = x_2(t) \cos(\omega_2 t + \theta_c) - y_2(t) \sin(\omega_2 t + \theta_c) \quad (7-40b)$$

The frequency shift is $2\Delta F > 2B$, so that the mark and space signals may be separated by the filtering action. The input signal and noise that pass through the upper channel in Fig. 7-8a are described by

$$r_1(t) = \begin{cases} s_1(t), & \text{binary 1} \\ 0, & \text{binary 0} \end{cases} + n_1(t) \quad (7-41)$$

and the signal and noise that pass through the lower channel are described by

$$r_2(t) = \begin{cases} 0, & \text{binary 1} \\ s_2(t), & \text{binary 0} \end{cases} + n_2(t) \quad (7-42)$$

where $r(t) = r_1(t) + r_2(t)$. The noise power of $n_1(t)$ and $n_2(t)$ is $\overline{n_1^2(t)} = \overline{n_2^2(t)} = (N_0/2)(4B) = 2N_0B$. Thus, the baseband analog output is

$$r_0(t) = \begin{cases} +A, & 0 < t \leq T, \quad \text{binary 1} \\ -A, & 0 < t \leq T, \quad \text{binary 0} \end{cases} + n_0(t) \quad (7-43)$$

where $s_{01} = +A$, $s_{02} = -A$, and $n_0(t) = x_1(t) - x_2(t)$. The optimum threshold setting is $V_T = 0$. Furthermore, the bandpass noise processes $n_1(t)$ and $n_2(t)$ are independent, since they have spectra in nonoverlapping frequency bands (see Fig. 7-8) and they are white. (See Prob. 7-29 for the verification of this statement.) Consequently, the resulting baseband noise processes $x_1(t)$ and $x_2(t)$ are independent, and the output noise power is

$$\overline{n_0^2(t)} = \sigma_0^2 = \overline{x_1^2(t)} + \overline{x_2^2(t)} = \overline{n_1^2(t)} + \overline{n_2^2(t)} = 4N_0B \quad (7-44)$$

Substituting for s_{01} , s_{02} , and σ_0 into Eq. (7-17), we have

$$P_e = Q\left(\sqrt{\frac{A^2}{4N_0B}}\right) \quad (\text{bandpass filters}) \quad (7-45)$$

Comparing the performance of FSK with that of BPSK and OOK on a PEP basis, we see that FSK requires 3 dB more power than BPSK for the same P_e , but 3 dB less power than OOK. Comparing the performance on an average power basis, we observe that FSK is 3 dB worse than BPSK, but is equivalent to OOK (since the average power of OOK is 3 dB below its PEP).

The performance of FSK signaling with matched-filter reception is obtained from Eq. (7-20). The energy in the difference signal is

$$\begin{aligned} E_d &= \int_0^T [A \cos(\omega_1 t + \theta_c) - A \cos(\omega_2 t + \theta_c)]^2 dt \\ &= \int_0^T [A^2 \cos^2(\omega_1 t + \theta_c) - 2A^2 \cos(\omega_1 t + \theta_c) \\ &\quad \times \cos(\omega_2 t + \theta_c) + A^2 \cos^2(\omega_2 t + \theta_c)] dt \end{aligned}$$

or[†]

$$E_d = \frac{1}{2}A^2T - A^2 \int_0^T [\cos(\omega_1 - \omega_2)t] dt + \frac{1}{2}A^2T \quad (7-46)$$

Consider the case when $2\Delta F = f_1 - f_2 = n/(2T) = nR/2$. Under this condition the integral (i.e., the cross-product term) goes to zero. This condition is required for $s_1(t)$ and $s_2(t)$ to be orthogonal. Consequently, $s_1(t)$ will not contribute an output to the lower channel (see Fig. 7-8), and vice versa. Furthermore, if $(f_1 - f_2) \gg R$, $s_1(t)$ and $s_2(t)$ will be approximately orthogonal, because the value of this integral will be negligible compared with A^2T . Assuming that one or both of these conditions is satisfied, then $E_d = A^2T$, and the BER for FSK signaling is

$$P_e = Q\left(\sqrt{\frac{A^2T}{2N_0}}\right) = Q\left(\sqrt{\frac{E_b}{N_0}}\right) \quad (\text{matched filter}) \quad (7-47)$$

where the average energy per bit is $E_b = A^2T/2$. The performance of FSK signaling is equivalent to that of OOK signaling (matched-filter reception) and is 3 dB inferior to BPSK signaling. (See Fig. 7-5.)

As we demonstrate in the next section, coherent detection is superior to noncoherent detection. However, for coherent detection, the coherent reference must be available. This

[†] For integrals of the type $\int_0^T A^2 \cos^2(\omega_1 t + \theta_c) dt = \frac{1}{2} A^2 [\int_0^T dt + \int_0^T \cos(2\omega_1 t + 2\theta_c) dt]$, the second integral on the right is negligible compared with the first integral on the right because of the oscillation in the second integral (Riemann–Lebesgue lemma [Olmsted, 1961]).

reference is often obtained from the noisy input signal so that the reference itself is also noisy. This, of course, increases P_e over those values given by the preceding formulas. The circuitry that extracts the carrier reference is usually complex and expensive. Often, one is willing to accept the poorer performance of a noncoherent system to simplify the circuitry and reduce the cost.

Example 7-5 BER FOR FSK SIGNALING WITH COHERENT DETECTION

Evaluate and plot the BER for FSK signaling in the presence of AWGN with coherent detection. Obtain results for both a matched-filter receiver and an LPF receiver, where $B = 2/T$. See Example7_05.m for the solution.

7-4 NONCOHERENT DETECTION OF BANDPASS BINARY SIGNALS

The *derivation* of the equations for the BER of noncoherent receivers is considerably more difficult than the derivation of the BER for coherent receivers. On the other hand, the *circuitry* for noncoherent receivers is *relatively simple* when compared with that used in coherent receivers. For example, OOK with noncoherent reception is the most popular signaling technique used in fiber-optic communication systems.

In this section, the BER will be computed for two noncoherent receivers—one for the reception of OOK signals and the other for the reception of FSK signals. As indicated in Chapter 5, BPSK cannot be detected noncoherently. However, as we shall see, DPSK signals may be demodulated by using a partially (quasi-) coherent technique.

On-Off Keying

A noncoherent receiver for detection of OOK signals is shown in Fig. 7-9. Assume that an OOK signal plus white Gaussian noise is present at the receiver input. Then the noise at the filter output $n(t)$ will be bandlimited Gaussian noise and the total filter output, consisting of signal plus noise, is

$$r(t) = \begin{cases} r_1(t), & 0 < t \leq T, \\ r_2(t), & 0 < t \leq T, \end{cases} \quad \text{binary 1 sent} \quad \text{binary 0 sent} \quad (7-48)$$

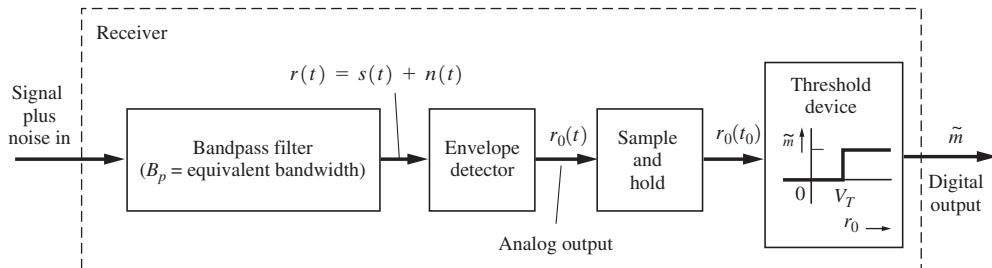


Figure 7-9 Noncoherent detection of OOK.

Let the bandwidth of the filter be B_p , where B_p is at least as large as the transmission bandwidth of the OOK signal, so that the signal waveshape is preserved at the filter output. Then for the case of a binary 1, $s_1(t) = A \cos(\omega_c t + \theta_c)$, so

$$r_1(t) = A \cos(\omega_c t + \theta_c) + n(t), \quad 0 < t \leq T$$

or

$$r_1(t) = [A + x(t)] \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c), \quad 0 < t \leq T \quad (7-49)$$

For a binary 0, $s_2(t) = 0$ and

$$r_2(t) = x(t) \cos(\omega_c t + \theta_c) - y(t) \sin(\omega_c t + \theta_c), \quad 0 < t \leq T \quad (7-50)$$

The BER is obtained by using Eq. (7-8), which, for the case of equally likely signaling, is

$$P_e = \frac{1}{2} \int_{-\infty}^{V_T} f(r_0|s_1) dr_0 + \frac{1}{2} \int_{V_T}^{\infty} f(r_0|s_2) dr_0 \quad (7-51)$$

We need to evaluate the conditional PDFs for the output of the envelope detector, $f(r_0|s_1)$ and $f(r_0|s_2)$. $f(r_0|s_1)$ is the PDF for $r_0 = r_0(t) = r_{01}$ that occurs when $r_1(t)$ is present at the input of the envelope detector, and $f(r_0|s_2)$ is the PDF for $r_0 = r_0(t_0) = r_{02}$ that occurs when $r_2(t)$ is present at the input of the envelope detector.

We will evaluate $f(r_0|s_2)$ first. When $s_2(t)$ is sent, the input to the envelope detector, $r_2(t)$, consists of bandlimited bandpass Gaussian noise as seen from Eq. (7-50). In Example 6-13, we demonstrated that for this case, the PDF of the envelope is Rayleigh distributed. Of course, the output of the envelope detector is the envelope, so $r_0 = R = r_{02}$. Thus, the PDF for the case of noise alone is

$$f(r_0|s_2) = \begin{cases} \frac{r_0}{\sigma^2} e^{-r_0^2/(2\sigma^2)}, & r_0 \geq 0 \\ 0, & r_0 \text{ otherwise} \end{cases} \quad (7-52)$$

The parameter σ^2 is the variance of the noise at the input of the envelope detector. Thus, $\sigma^2 = (N_0/2)(2B_p) = N_0 B_p$, where B_p is the effective bandwidth of the bandpass filter and $N_0/2$ is the PSD of the white noise at the receiver input.

For the case of $s_1(t)$ being transmitted, the input to the envelope detector is given by Eq. (7-49). Since $n(t)$ is a Gaussian process (that has no delta functions in its spectrum at $f = \pm f_c$) the in-phase baseband component, $A + x(t)$, is also a Gaussian process with a mean value of A instead of a zero mean, as is the case in Eq. (7-50). The PDF for the envelope $r_0 = R = r_{01}$ is evaluated using the same technique described in Example 6-13 and the result cited in Prob. 6-54. Thus, for this case of a sinusoid plus noise at the envelope detector input,

$$f(r_0|s_1) = \begin{cases} \frac{r_0}{\sigma^2} e^{-(r_0^2+A^2)/(2\sigma^2)} I_0\left(\frac{r_0 A}{\sigma^2}\right) & r_0 \geq 0 \\ 0, & r_0 \text{ otherwise} \end{cases} \quad (7-53)$$

which is a Rician PDF, where

$$I_0(z) \triangleq \frac{1}{2\pi} \int_0^{2\pi} e^{z \cos \theta} d\theta \quad (7-54)$$

is the modified Bessel function of the first kind of zero order.

The two conditional PDFs, $f(r_0|s_2)$ and $f(r_0|s_1)$, are shown in Fig. 7-10. Actually, $f(r_0|s_2)$ is a special case of $f(r_0|s_1)$ when $A = 0$, because, for this condition, we have noise only at the detector input and Eq. (7-53) becomes Eq. (7-52). Two other plots of Eq. (7-53) are also given—one for $A = 1$ and another for $A = 4$. It is seen that for $A/\sigma \gg 1$, the mode of the distribution [i.e., where $f(r_0|s_1)$ is a maximum] occurs at the value $r_0 = A$. In addition, note that for $A/\sigma \gg 1$, $f(r_0|s_1)$ takes on a Gaussian shape (as demonstrated subsequently).

The BER for the noncoherent OOK receiver is obtained by substituting Eqs. (7-52) and (7-53) into Eq. (7-51):

$$P_e = \frac{1}{2} \int_0^{V_T} \frac{r_0}{\sigma^2} e^{-(r_0^2+A^2)/(2\sigma^2)} I_0\left(\frac{r_0 A}{\sigma^2}\right) dr_0 + \frac{1}{2} \int_{V_T}^{\infty} \frac{r_0}{\sigma^2} e^{-r_0^2/(2\sigma^2)} dr_0 \quad (7-55)$$

The optimum threshold level is the value of V_T for which P_e is a minimum. For $A/\sigma \gg 1$, the optimum threshold is close to $V_T = A/2$, so we will use this value to simplify the mathematics.[†] The integral involving the Bessel function cannot be evaluated in closed form. However, $I_0(z)$ can be approximated by $I_0(z) = e^z / \sqrt{2\pi z}$, which is valid for $z \gg 1$. Then, for $A/\sigma \gg 1$, the left integral in Eq. (7-55) becomes

$$\frac{1}{2} \int_0^{V_T} \frac{r_0}{\sigma^2} e^{-(r_0^2+A^2)/(2\sigma^2)} I_0\left(\frac{r_0 A}{\sigma^2}\right) dr_0 \approx \frac{1}{2} \int_0^{A/2} \sqrt{\frac{r_0}{2\pi\sigma^2 A}} e^{(r_0-A)^2/(2\sigma^2)} dr_0$$

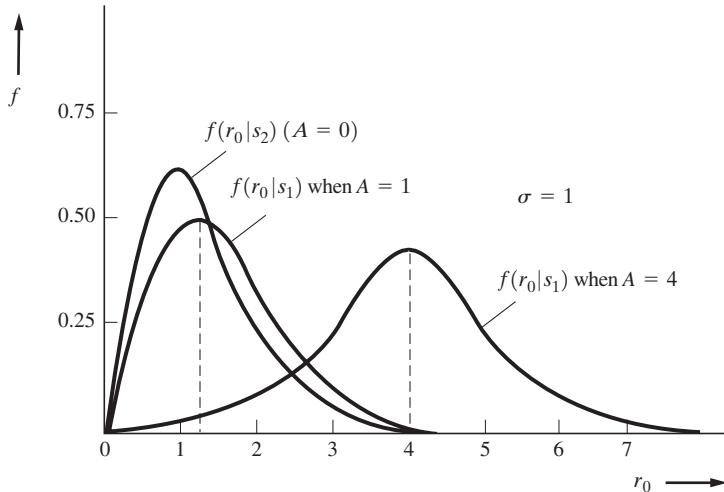


Figure 7-10 Conditional PDFs for noncoherent OOK reception.

[†] Most practical systems operate with $A/\sigma \gg 1$.

Because $A/\sigma \gg 1$, the integrand is negligible except for values of r_0 in the vicinity of A , so the lower limit may be extended to $-\infty$, and $\sqrt{r_0/(2\pi\sigma^2 A)}$ can be replaced by $\sqrt{1/(2\pi\sigma^2)}$. Thus,

$$\frac{1}{2} \int_0^{V_T} \frac{r_0}{\sigma^2} e^{-(r_0^2 + A^2)/(2\sigma^2)} I_0\left(\frac{r_0 A}{\sigma^2}\right) dr_0 \approx \frac{1}{2} \int_{-\infty}^{V_T} \frac{1}{\sqrt{2\pi}\sigma} e^{-(r_0 - A)^2/(2\sigma^2)} dr_0 \quad (7-56)$$

When we substitute this equation into Eq. (7-55), the BER becomes

$$P_e = \frac{1}{2} \int_{-\infty}^{A/2} \frac{1}{\sqrt{2\pi}\sigma} e^{-(r_0 - A)^2/(2\sigma^2)} dr_0 + \frac{1}{2} \int_{A/2}^{\infty} \frac{r_0}{\sigma^2} e^{-r_0^2/(2\sigma^2)} dr_0$$

or

$$P_e = \frac{1}{2} Q\left(\frac{A}{2\sigma}\right) + \frac{1}{2} e^{-A^2/(8\sigma^2)} \quad (7-57)$$

Using $Q(z) = e^{-z^2/2}/\sqrt{2\pi z^2}$ for $z \gg 1$, we have

$$P_e = \frac{1}{\sqrt{2\pi}(A/\sigma)} e^{-A^2/(\delta\sigma^2)} + \frac{1}{2} e^{-A^2/(\delta\sigma^2)}$$

Because $A/\sigma \gg 1$, the second term on the right dominates over the first term. Finally, we obtain the approximation for the BER for noncoherent detection of OOK. It is

$$P_e = \frac{1}{2} e^{-A^2/(8\sigma^2)}, \quad \frac{A}{\sigma} \gg 1$$

or

$$P_e = \frac{1}{2} e^{-[1/(2TB_p)](E_b/N_0)}, \quad \frac{E_b}{N_0} \gg \frac{TB_p}{4} \quad (7-58)$$

where the average energy per bit is $E_b = A^2 T / 4$ and $\sigma^2 = N_0 B_p$. $R = 1/T$ is the bit rate of the OOK signal, and B_p is the equivalent bandwidth of the bandpass filter that precedes the envelope detector.

Equation (7-58) indicates that the BER depends on the bandwidth of the bandpass filter and that P_e becomes smaller as B_p is decreased. Of course, this result is valid only when the ISI is negligible. Referring to Eq. (3-74), we realize that the minimum bandwidth allowed (i.e., for no ISI) is obtained when the rolloff factor is $r = 0$. This implies that the minimum bandpass bandwidth that is allowed is $B_p = 2B = R = 1/T$. A plot of the BER is given in Fig. 7-14 for this minimum-bandwidth case of $B_p = 1/T$.

Example 7-6 BER FOR OOK SIGNALING WITH NONCOHERENT DETECTION

Using Eq. (7-57), evaluate and plot the BER for OOK signaling in the presence of AWGN with noncoherent detection, where $B_p = 1/T$. See Example7_06.m for the solution. Compare this result with that shown in Fig. 7-14.

Frequency-Shift Keying

A noncoherent receiver for detection of frequency-shift-keyed (FSK) signals is shown in Fig. 7-11. The input consists of an FSK signal as described by Eq. (7-39) plus white Gaussian noise with a PSD of $N_0/2$. A sketch of the spectrum of the FSK signal and noise was given in Fig. 7-8b, where the bandpass filter bandwidth is B_p . It is assumed that the frequency shift, $2\Delta F = f_1 - f_2$, is sufficiently large so that the spectra of $s_1(t)$ and $s_2(t)$ have negligible overlap.

The BER for this receiver is obtained by evaluating Eq. (7-8). For signal alone at the receiver input, the output of the summing junction is $r_0(t) = +A$ when a mark (binary 1) is transmitted, and $r_0(t) = -A$ when a space (binary 0) is transmitted. Because of this symmetry and because the noise out of the upper and lower receiver channels is similar, the optimum threshold is $V_T = 0$. Similarly, it is realized that the PDF of $r_0(t)$ conditioned on s_1 and that the PDF of $r_0(t)$ conditioned on s_2 are similar. That is,

$$f(r_0|s_1) = f(-r_0|s_2) \quad (7-59)$$

Substituting Eq. (7-59) into Eq. (7-8), we find the BER to be

$$P_e = \frac{1}{2} \int_{-\infty}^0 f(r_0|s_1) dr_0 + \frac{1}{2} \int_0^{\infty} f(r_0|s_2) dr_0$$

or

$$P_e = \int_0^{\infty} f(r_0|s_2) dr_0 \quad (7-60)$$

As shown in Fig. 7-11, $r_0(t)$ is positive when the upper channel output $v_U(t)$ exceeds the lower channel output $v_L(t)$. Thus,

$$P_e = P(v_U > v_L|s_2) \quad (7-61)$$

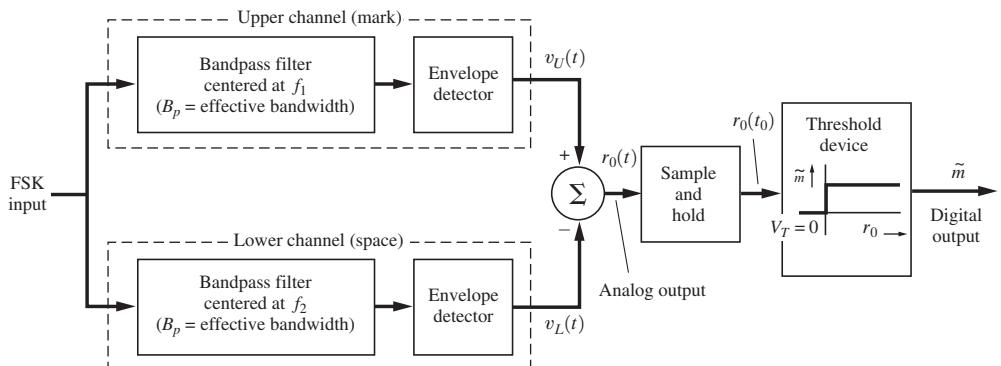


Figure 7-11 Noncoherent detection of FSK.

For the case of a space signal plus noise at the receiver input, we know that the output of the upper bandpass filter is only Gaussian noise (no signal). Thus, the output of the upper envelope detector v_U is noise having a Rayleigh distribution

$$(v_U|s_2) = \begin{cases} \frac{v_U}{\sigma^2} e^{-v_U^2/(2\sigma^2)}, & v_U \geq 0 \\ 0, & v_U < 0 \end{cases} \quad (7-62)$$

where $\sigma^2 = N_0 B_p$. On the other hand, v_L has a Rician distribution, since a sinusoid (the space signal) plus noise appears at the input to the lower envelope detector:

$$f(v_L|s_2) = \begin{cases} \frac{v_L}{\sigma^2} e^{-(v_L^2+A^2)/(2\sigma^2)} I_0\left(\frac{v_L A}{\sigma^2}\right), & v_L \geq 0 \\ 0, & v_L < 0 \end{cases} \quad (7-63)$$

where $\sigma^2 = N_0 B_p$. Using Eqs. (7-62) and (7-63) in Eq. (7-61), we obtain

$$P_e = \int_0^\infty \frac{v_L}{\sigma^2} e^{-(v_L^2+A^2)/(2\sigma^2)} I_0\left(\frac{v_L A}{\sigma^2}\right) \left[\int_{v_L}^\infty \frac{v_U}{\sigma^2} e^{-v_U^2/(2\sigma^2)} dv_U \right] dv_L$$

When we evaluate the inner integral, the BER becomes

$$P_e = e^{-A^2/(2\sigma^2)} \int_0^\infty \frac{v_L}{\sigma^2} e^{-v_L^2/\sigma^2} I_0\left(\frac{v_L A}{\sigma^2}\right) dv_L \quad (7-64)$$

This integral can be evaluated by using the integral table in Appendix A. Thus, for noncoherent detection of FSK, the BER is

$$P_e = \frac{1}{2} e^{-A^2/(4\sigma^2)}$$

or

$$P_e = \frac{1}{2} e^{-[1/(2TB_p)](E_b/N_0)} \quad (7-65)$$

where the average energy per bit is $E_b = A^2 T / 2$ and $\sigma^2 = N_0 B_p$. $N_0/2$ is the PSD of the input noise, and B_p is the effective bandwidth of each of the bandpass filters. (See Fig. 7-11.) Comparing Eq. (7-65) with Eq. (7-58), we see that OOK and FSK are equivalent on an E_b/N_0 basis. A plot of Eq. (7-65) is given in Fig. 7-14 for the case of the minimum filter bandwidth allowed, $B_p = R = 1/T$, for no ISI. When comparing the error performance of noncoherently detected FSK with that of coherently detected FSK, it is seen that noncoherent FSK requires, at most, only 1 dB more E_b/N_0 than that for coherent FSK if P_e is 10^{-4} or less. The noncoherent FSK receiver is considerably easier to build since the coherent reference signals do not have to be generated. Thus, in practice, almost all of the FSK receivers use noncoherent detection.

Example 7-7 BER FOR FSK SIGNALING WITH NONCOHERENT DETECTION

Evaluate and plot the BER for FSK signaling in the presence of AWGN with noncoherent detection, where $B_p = 1/T$. Also, calculate and plot the BER for FSK with coherent MF detection. See Example7_07.m for the solution. Compare these results with those shown in Fig. 7-14.

Differential Phase-Shift Keying

Phase-shift-keyed signals cannot be detected incoherently. However, a partially coherent technique can be used whereby the phase reference for the present signaling interval is provided by a delayed version of the signal that occurred during the previous signaling interval. This is illustrated by the receivers shown in Fig. 7-12, where differential decoding is provided by the (one-bit) delay and the multiplier. If a BPSK signal (no noise) were applied to the receiver input, the output of the sample-and-hold circuit, $r_0(t_0)$, would be positive (binary 1) if the present data bit and the previous data bit were of the same sense; $r_0(t_0)$ would be negative (binary 0) if the two data bits were different. Consequently, if the data on the BPSK signal are differentially encoded (e.g., see the illustration in Table 3-4), the *decoded* data sequence will be recovered at the output of this receiver. This signaling technique consisting of transmitting a differentially encoded BPSK signal is known as DPSK.

The BER for these DPSK receivers can be derived under the following assumptions:

- The additive input noise is white and Gaussian.
- The phase perturbation of the composite signal plus noise varies slowly so that the phase reference is essentially a constant from the past signaling interval to the present signaling interval.
- The transmitter carrier oscillator is sufficiently stable so that the phase during the present signaling interval is the same as that from the past signaling interval.

The BER for the suboptimum demodulator of Fig. 7-12a has been obtained by J. H. Park for the case of a large input signal-to-noise ratio and for $B_T > 2/T$, but yet not too large. The result is [Park, 1978]

$$P_e = Q\left(\sqrt{\frac{(E_b/N_0)}{1 + [(B_T T/2)/(E_b/N_0)]}}\right) \quad (7-66a)$$

For typical values of B_T and E_b/N_0 in the range of $B_T = 3/T$ and $E_b/N_0 = 10$, this BER can be approximated by

$$P_e = Q\left(\sqrt{E_b/N_0}\right) \quad (7-66b)$$

Thus, the performance of the suboptimum receiver of Fig. 7-12a is similar to that obtained for OOK and FSK as plotted in Fig. 7-14.

Figure 7-12b shows one form of an optimum DPSK receiver that can be obtained [Couch, 1993, Fig. 8-25]. The BER for optimum demodulation of DPSK is

$$P_e = \frac{1}{2} e^{-(E_b/N_0)} \quad (7-67)$$

Other alternative forms of optimum DPSK receivers are possible [Lindsey and Simon, 1973; Simon, 1978].

A plot of this error characteristic for the case of optimum demodulation of DPSK, Eq. (7-67), is shown in Fig. 7-14. In comparing the error performance of BPSK and DPSK with optimum demodulation, it is seen that for the same P_e , DPSK signaling requires, at most, 1 dB more E_b/N_0 than BPSK, provided that $P_e = 10^{-4}$ or less. In practice, DPSK is often used instead of BPSK, because the DPSK receiver does not require a carrier synchronization circuit.

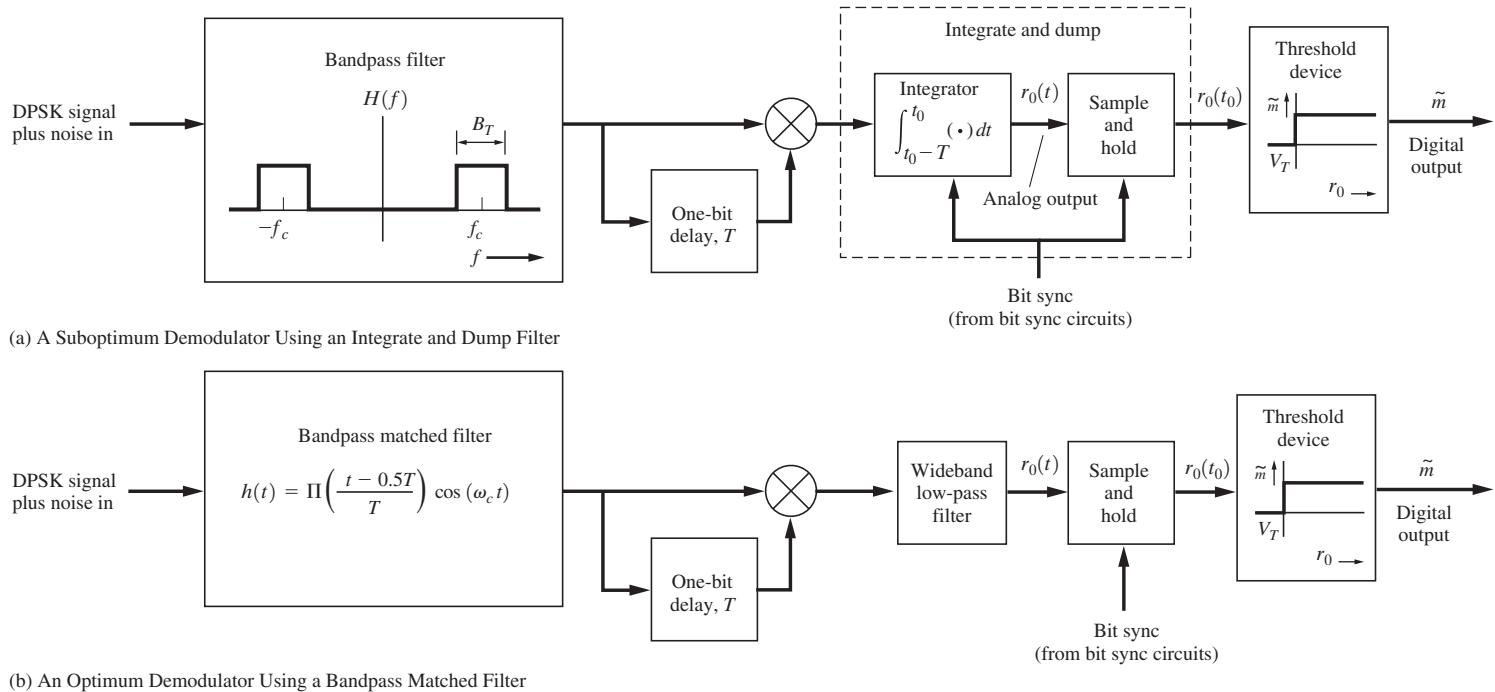


Figure 7-12 Demodulation of DPSK.

7–5 QUADRATURE PHASE-SHIFT KEYING AND MINIMUM-SHIFT KEYING

As described in Sec. 5–10, quadrature phase-shift keying (QPSK) is a multilevel signaling technique that uses $L = 4$ levels per symbol. Thus, 2 bits are transmitted during each signaling interval (T seconds). The QPSK signal may be represented by

$$s(t) = (\pm A) \cos(\omega_c t + \theta_c) - (\pm A) \sin(\omega_c t + \theta_c), \quad 0 < t \leq T \quad (7-68)$$

where the $(\pm A)$ factor on the cosine carrier is one bit of data and the $(\pm A)$ factor on the sine carrier is another bit of data. The relevant input noise is represented by

$$n(t) = x(t) \cos(\omega_c t + \theta_n) - y(t) \sin(\omega_c t + \theta_n)$$

The QPSK signal is equivalent to two BPSK signals—one using a cosine carrier and the other using a sine carrier. The QPSK signal is detected by using the coherent receiver shown in Fig. 7–13. (This is an application of the IQ detector that was first given in Fig. 4–31.) Because both the upper and lower channels of the receiver are BPSK receivers, the BER is the same as that for a BPSK system. Thus, from Eq. (7–38), the BER for the QPSK receiver is

$$P_e = Q\left(\sqrt{2\left(\frac{E_b}{N_0}\right)}\right) \quad (7-69)$$

This is also shown in Fig. 7–14. The BERs for the BPSK and QPSK signaling are identical, but for the same bit rate R , the bandwidths of the two signals are *not* the same. The bandwidth of the QPSK signal is exactly one-half the bandwidth of the BPSK signal for a given bit rate. This result is given by Eq. (5–103) or Eq. (5–106), where the QPSK signal transmits one symbol for every 2 bits of data, whereas the BPSK signal transmits one symbol for each bit of data. The bandwidth of $\pi/4$ QPSK is identical to that for QPSK. For the same BER, differentially detected $\pi/4$ QPSK requires about 3 dB more E_b/N_0 than that for QPSK, but coherently detected $\pi/4$ QPSK has the same BER performance as QPSK.

In Chapter 5, it was shown that MSK is essentially equivalent to QPSK, except that the data on the $x(t)$ and $y(t)$ quadrature modulation components are offset and their equivalent data pulse shape is a positive part of a cosine function instead of a rectangular pulse. (This gives a PSD for MSK that rolls off faster than that for PSK.) The optimum receiver for detection of MSK is similar to that for QPSK (Fig. 7–13), except that a matched filter with a cosine pulse shape is used instead of the rectangular pulse shape that is synthesized by the integrate-and-dump circuit. Consequently, because the MSK and QPSK signal representations and the optimum receiver structures are identical except for the pulse shape, the probability of bit error for MSK and QPSK is identical, as described by Eq. (7–69). A plot of this BER is shown in Fig. 7–14.

If the data are properly encoded, the data on an MSK signal can also be detected by using FM-type detectors because the MSK signal is also an FSK signal with a minimum amount of frequency shift that makes $s_1(t)$ and $s_2(t)$ orthogonal signals. Thus, for suboptimum detection of MSK, the BER is given by the BER for FSK, as described by Eq. (7–47) for coherent FM detection and Eq. (7–65) for noncoherent FM detection.

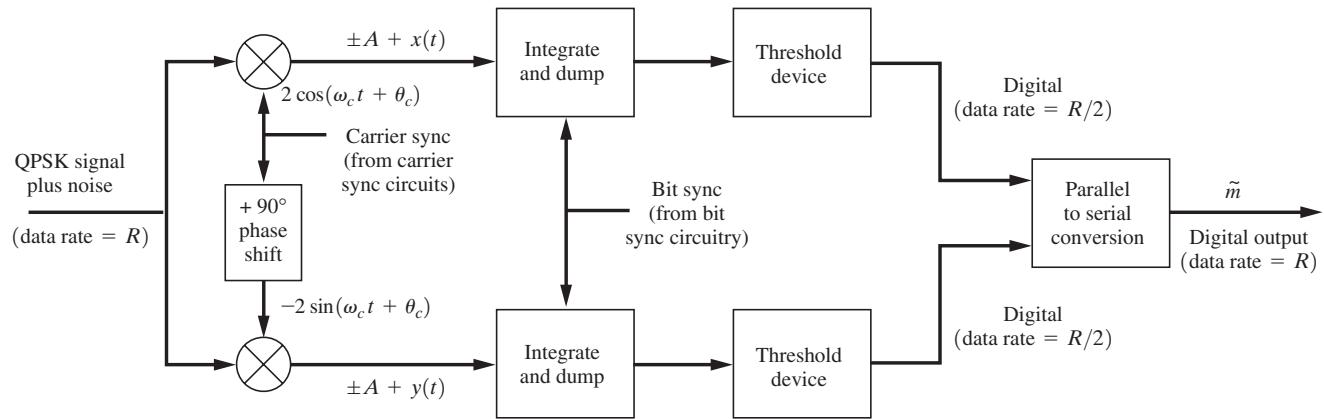


Figure 7-13 Matched-filter detection of QPSK.

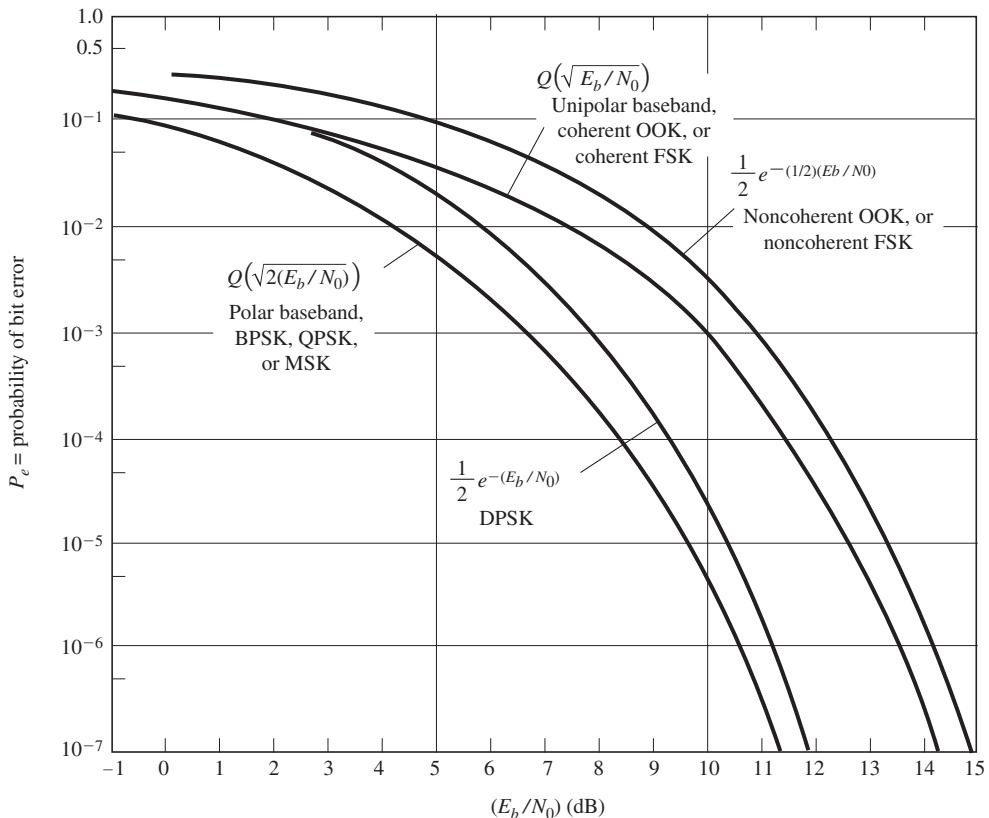


Figure 7–14 Comparison of the probability of bit error for several digital signaling schemes.

7–6 COMPARISON OF DIGITAL SIGNALING SYSTEMS

Bit-Error Rate and Bandwidth

Table 7–1 compares the BER for the different signaling techniques that were described in the previous sections. Also tabulated is the minimum bandwidth for these signals. The minimum absolute bandwidth is attained when $\sin x/x$ data pulses are used, as described in Chapters 3 and 5 (except for the special case of MSK).

In Fig. 7–14, the BER curves are plotted using the equations presented in Table 7–1. Except for the curves describing the noncoherent detection cases, all of these results assume that the optimum filter—the matched filter—is used in the receiver. In practice, simpler filters work almost as well as the matched filter. For example, in a computer simulation of a BPSK system with a three-pole Butterworth receiving filter having a bandwidth equal to the bit rate, the E_b/N_0 needs to be increased no more than 0.4 dB to obtain the same BER as that obtained when a matched filter is used (for error rates above 10^{-12}).

TABLE 7-1 COMPARISON OF DIGITAL SIGNALING METHODS

Type of Digital Signaling	Minimum Transmission Bandwidth Required ^a (Where R Is the Bit Rate)	Error Performance
Baseband signaling		
Unipolar	$\frac{1}{2}R$	$Q\left[\sqrt{\left(\frac{E_b}{N_0}\right)}\right]$ (7-24b)
Polar	$\frac{1}{2}R$	$Q\left[\sqrt{2\left(\frac{E_b}{N_0}\right)}\right]$ (7-26b)
Bipolar	$\frac{1}{2}R$	$\frac{3}{2}Q\left[\sqrt{\left(\frac{E_b}{N_0}\right)}\right]$ (7-28b)
Bandpass signaling		
OOK	R	$Q\left[\sqrt{\left(\frac{E_b}{N_0}\right)}\right]$ (7-33) $\frac{1}{2}e^{-(1/2)(E_b/N_0)}, \left(\frac{E_b}{N_0}\right) > \frac{1}{4}$ (7-58)
BPSK	R	$Q\left[\sqrt{2\left(\frac{E_b}{N_0}\right)}\right]$ (7-38) Requires coherent detection
FSK	$2\Delta F + R$ where $2\Delta F = f_2 - f_1$ is the frequency shift	$Q\left[\sqrt{\left(\frac{E_b}{N_0}\right)}\right]$ (7-47) $\frac{1}{2}e^{-(1/2)(E_b/N_0)}$ (7-65)
DPSK	R	Not used in practice $\frac{1}{2}e^{-(E_b/N_0)}$ (7-67)
QPSK	$\frac{1}{2}R$	$Q\left[\sqrt{2\left(\frac{E_b}{N_0}\right)}\right]$ (7-69) Requires coherent detection
MSK	$1.5R$ (null bandwidth)	$Q\left[\sqrt{2\left(\frac{E_b}{N_0}\right)}\right]$ (7-69) $\frac{1}{2}e^{-(1/2)(E_b/N_0)}$ (7-65)

^a Typical bandwidth specifications by ITU are larger than these minima [Jordan, 1985].

Comparing the various bandpass signaling techniques, we see that QPSK and MSK give the best overall performance in terms of the minimum bandwidth required for a given signaling rate and one of the smallest P_e for a given E_b/N_0 . However, QPSK is relatively expensive to implement, since it requires coherent detection. Figure 7–14 shows that for the same P_e , DPSK (using a noncoherent receiver) requires only about 1 dB more E_b/N_0 than that for QPSK or BPSK, for error rates of 10^{-4} or less. Because DPSK is much easier to receive than BPSK, it is often used in practice in preference to BPSK. Similarly, the BER performance of a noncoherent FSK receiver is very close to that of a coherent FSK receiver. Because noncoherent FSK receivers are simpler than coherent FSK receivers, they are often used in practice. In some applications, there are multiple paths of different lengths between the transmitter and receiver (e.g., caused by reflection). This causes fading and noncoherence in the received signal (phase). In this case, it is very difficult to implement coherent detection, regardless of the complexity of the receiver, and one resorts to the use of noncoherent detection techniques.

Channel coding can be used to reduce the P_e below the values given in Fig. 7–14. This concept was developed in Chapter 1. By using Shannon's channel capacity formula, it was found that, theoretically, the BER would approach zero as long as E_b/N_0 was above -1.59 dB when optimum (unknown) coding was used on an infinite bandwidth channel. With practical coding, it was found that coding gains as large as 9 dB could be achieved on BPSK and QPSK systems. That is, for a given BER the E_b/N_0 requirements in Fig. 7–14 could be reduced by as much as 9 dB when coding was used.

Symbol Error and Bit Error for Multilevel Signaling

For *multilevel* systems (as compared to binary signaling systems), simple closed-form formulas for the probability of *bit error* (also known as the bit error rate, BER) are impossible to obtain. This is why BER results for multilevel systems are not included in Table 7–1 and Fig. 7–14 except for the special case of QPSK (which, as discussed in Sec. 7–5, consists of two orthogonal binary PSK signals). Of course, the BER for multilevel signals can be obtained by simulation or by measurement.

In some cases, simple formulas for the upper bounds on the probability of *symbol error* of multilevel systems can be obtained. For MPSK, a bound on the symbol error is [Wilson, 1996]

$$P(E) \leq Q \left[\sqrt{2 \left(\frac{E_b}{N_0} \right) (\log_2 M) \sin^2 \left(\frac{\pi}{M} \right)} \right], \text{ for MPSK}$$

for the case of AWGN. The bound becomes tight for reasonable sizes of M and E_b/N_0 such as $M = 8$ and $(E_b/N_0)_{\text{dB}} = 10$ dB. For QAM signaling (AWGN case), a symbol error bound is [Wilson, 1996]

$$P(E) \leq 4Q \left[\sqrt{2 \left(\frac{E_b}{N_0} \right) \eta_M} \right], \text{ for MQAM}$$

where the efficiency factor η_M is -4 dB for 16 QAM, -6 dB for 32 QAM, -8.5 dB for 64 QAM, -10.2 dB for 128 QAM, and -13.3 dB for 256 QAM.

The probability of symbol error (also called the word error rate, WER) is not easily related to the BER. However, bounds on the relationship between the BER and the WER are [Couch, 1993]

$$\frac{1}{K} P(E) \leq P_e \leq \frac{(M/2)}{M-1} P(E)$$

where P_e is the BER, $P(E)$ is the WER, and $M = 2^K$. When errors are made under the usual operating conditions of low error rate (say $P_e < 10^{-3}$), the error symbol selected is usually the “nearest neighbor” to the correct symbol on the signal constellation. This results in a BER near the lower bound. For this case, the BER is almost equal to the lowest bound if the bit-to-symbol mapping is a Gray code (see Table 3–1) since there is only a one bit change (error) for the nearest neighbor symbol. For example, if $M = 128$ ($K = 7$), then

$$0.143 P(E) \leq P_e \leq 0.504 P(E)$$

Under the usual operating conditions of low BER, say $P_e < 10^{-3}$, the BER would be near the lower bound, so $P_e \approx 0.143 P(E)$ for $M = 128$.

Synchronization

As we have seen, three levels of synchronization are needed in digital communication systems:

1. Bit synchronization.
2. Frame, or word, synchronization.
3. Carrier synchronization.

Bit and frame synchronizations were discussed in Chapter 3.

Carrier synchronization is required in receivers that use coherent detection. If the spectrum of the digital signal has a discrete line at the carrier frequency, such as in equally likely OOK signaling, a PLL can be used to recover the carrier reference from the received signal. This was described in Chapter 4 and shown in Fig. 4–24. In BPSK signaling, there is no discrete carrier term, but the spectrum is symmetrical about the carrier frequency. Consequently, a Costas loop or a squaring loop may be used for carrier sync recovery. These loops were illustrated in Figs. 5–3 and P5–60. As indicated in Sec. 5–4, these loops may lock up with a 180° phase error, which must be resolved to ensure that the recovered data will not be complemented. For QPSK signals, the carrier reference may be obtained by a more generalized Costas loop or, equivalently, by a fourth-power loop [Spilker, 1977]. These loops have a four-phase ambiguity of $0, \pm 90$, or 180° , which must also be resolved to obtain correctly demodulated data. These facts illustrate once again why noncoherent reception techniques (which can be used for OOK, FSK, and DPSK) are so popular.

Bit synchronizers are needed at the receiver to provide the bit sync signal for clocking the sample-and-hold circuit and, if used, the matched-filter circuit. The bit synchronizer was illustrated in Fig. 3–20.

All the BER formulas that we have obtained assume that noise-free bit sync and carrier sync (for coherent detection) are available at the receiver. Of course, if these sync signals are

obtained from noisy signals that are present at the receiver input, the reference signals are also noisy. Consequently, the P_e will be larger than that given for the ideal case when noise-free sync is assumed.

The third type of synchronization that is required by most digital systems is frame sync, or word sync. In some systems, this type of sync is used simply to demarcate the serial data into digital words or *bytes*. In other systems, block coding or convolutional coding is used at the transmitter so that some of the bit errors at the output of the threshold device of the receiver can be detected and corrected by using decoding circuits. In these systems, word sync is needed to clock the receiver decoding circuits. In addition, frame sync is required in time-division multiplex (TDM) systems. This was described in Fig. 3–37. Higher levels of synchronization, such as network synchronization, may be required when data are received from several sources. For example, multiple-access satellite communication systems require network synchronization, as illustrated in Chapter 8.

7–7 OUTPUT SIGNAL-TO-NOISE RATIO FOR PCM SYSTEMS

In the previous sections, we studied how the P_e for various digital systems depends on the energy per bit E_b of the signal at the receiver input and on the level of the input noise spectrum $N_0/2$. Now we look at applications of these signaling techniques where an analog signal is encoded into a PCM signal composed of the data that are transmitted over the digital system having a BER of P_e . This is illustrated in Fig. 7–15. The digital transmitter and receiver may be any one of those associated with the digital signaling systems studied

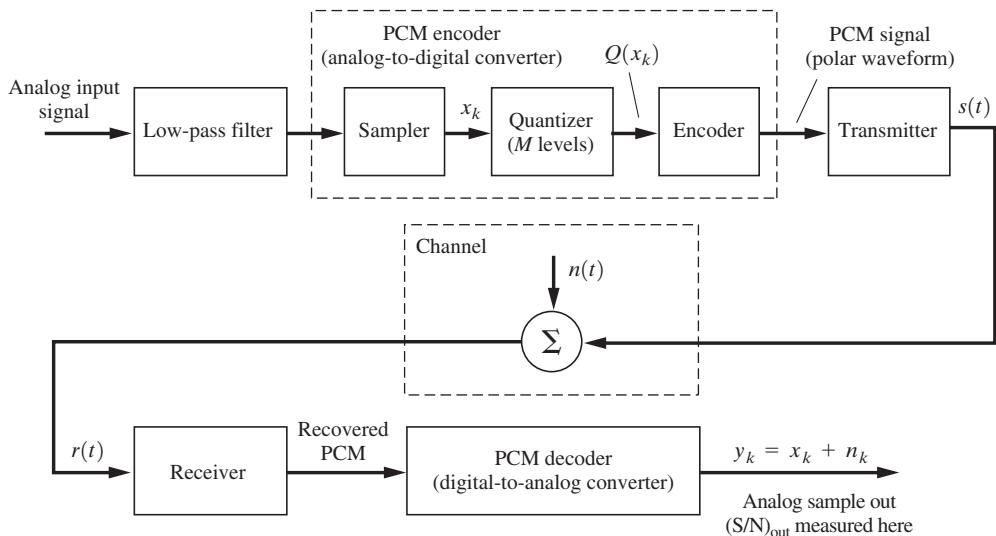


Figure 7–15 PCM communications system.

in the previous sections. For example, $s(t)$ might be an FSK signal, and the receiver would be an FSK receiver. The recovered PCM signal has some bit errors (caused by channel noise). Consequently, the decoded analog waveform at the output of the PCM decoder will have noise because of these bit errors, as well as quantizing noise. The question is: What is the peak signal to average noise ratio (S/N)_{out} for the analog output? If the input analog signal has a uniform PDF over $-V$ to $+V$ and there are M steps in the uniform quantizer, the answer is

$$\left(\frac{S}{N}\right)_{\text{pk out}} = \frac{3M^2}{1 + 4(M^2 - 1)P_e} \quad (7-70)$$

Applications of this result were first studied in Sec. 3-3.

Equation (7-70) will now be derived. As shown in Fig. 7-15, the analog sample x_k is obtained at the sampling time $t = kT_s$. This sample is quantized to a value $Q(x_k)$, which is one of the M possible levels, as indicated in Fig. 7-16. The quantized sample $Q(x_k)$ is encoded into an n -bit PCM word $(a_{k1}, a_{k2}, \dots, a_{kn})$, where $M = 2^n$. If polar signaling is used, the a_k 's

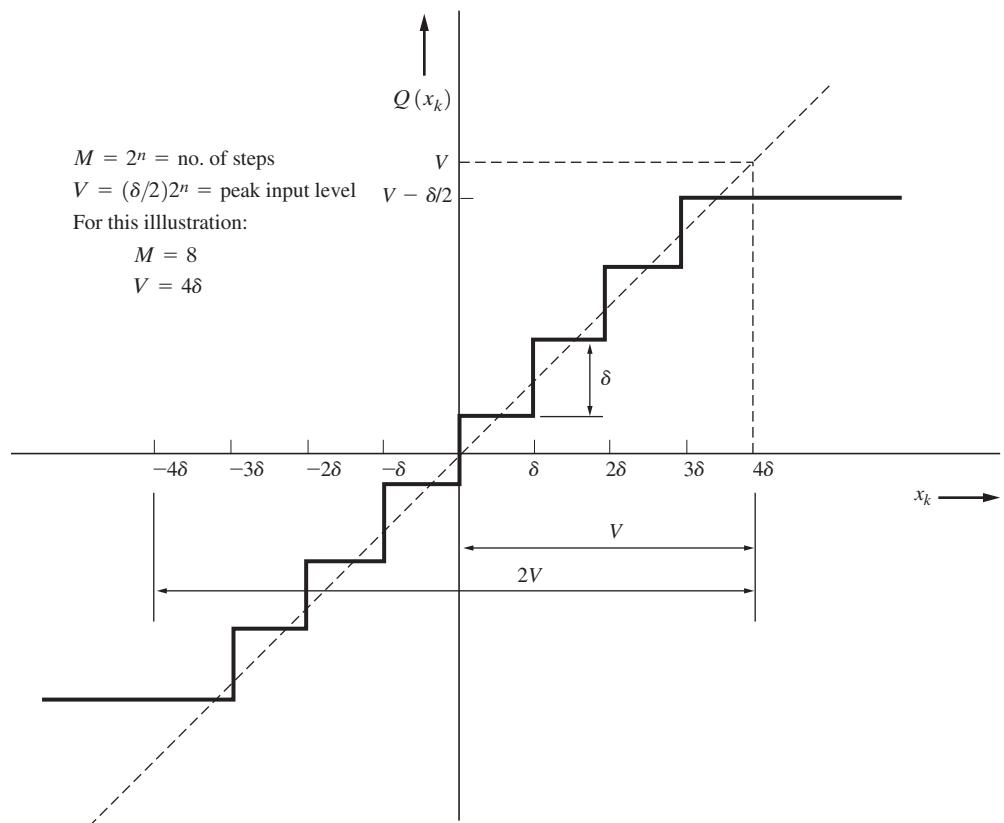


Figure 7-16 Uniform quantizer characteristic for $M = 8$ (with $n = 3$ bits in each PCM word).

take on values of +1 or -1. For simplicity, we assume that the PCM code words are related to the quantized values by[†]

$$Q(x_k) = V \sum_{j=1}^n a_{kj} \left(\frac{1}{2}\right)^j \quad (7-71)$$

For example, if the PCM word for the k th sample happens to be (+1, +1, ..., +1), then the value of the quantized sample will be

$$Q(x_k) = V \left(\frac{1}{2} + \frac{1}{2} + \dots + \frac{1}{2^n} \right) = \frac{V}{2} \left(1 + \frac{1}{2} + \frac{1}{4} + \dots + \frac{1}{2^{n-1}} \right)$$

From Appendix A, we find that the sum of this finite series is

$$Q(x_k) = \frac{V}{2} \left[\frac{\left(\frac{1}{2}\right)^n - 1}{\frac{1}{2} - 1} \right] = V - \frac{V}{2^n}$$

where δ is the step size of the quantizer (Fig. 7-16). Thus, the PCM word (+1, +1, ..., +1) represents the maximum value of the quantizer, as illustrated in Fig. 7-16. Similarly, the level of the quantizer corresponding to the other code words can be obtained.

Referring to Fig. 7-15 again, we note that the analog sample output of the PCM system for the k th sampling time is

$$y_k = x_k + n_k$$

where x_k is the signal (same as the input sample) and n_k is noise. The output peak signal power to average noise power is then

$$\left(\frac{S}{N} \right)_{\text{pk out}} = \frac{[(x_k)_{\max}]^2}{\overline{n_k^2}} = \frac{V^2}{\overline{n_k^2}} \quad (7-72)$$

where $(x_k)_{\max} = V$, as is readily seen from Fig. 7-16. As indicated in Chapter 3, it is assumed that the noise n_k consists of two uncorrelated effects:

- Quantizing noise that is due to the quantizing error:

$$e_q = Q(x_k) - x_k \quad (7-73)$$

- Noise due to bit errors that are caused by the channel noise:

$$e_b = y_k - Q(x_k) \quad (7-74)$$

Thus,

$$\overline{n_k^2} = \overline{e_q^2} + \overline{e_b^2} \quad (7-75)$$

First, evaluate the quantizing noise power. For a uniformly distributed signal, the quantizing noise is uniformly distributed. Furthermore, as indicated by Fig. 3-8c, the interval of

[†] For mathematical simplicity, natural binary coding levels are used in Eq. (7-71), not the Gray coding used in Table 3-1.

the uniform distribution is $(-\delta/2, \delta/2)$, where δ is the step size ($\delta = 2$ in Fig. 3–8c). Thus, with $M = 2^n = 2V/\delta$ (from Fig. 7–16),

$$\overline{e_q^2} = \int_{-\infty}^{\infty} e_q^2 f(e_q) de_q = \int_{-\delta/2}^{\delta/2} e_q^2 \frac{1}{\delta} de_q = \frac{\delta^2}{12} = \frac{V^2}{3M^2} \quad (7-76)$$

The noise power due to bit errors is evaluated by the use of Eq. (7–74), yielding

$$\overline{e_b^2} = \overline{[y_k - Q(x_k)]^2} \quad (7-77)$$

where $Q(x_k)$ is given by Eq. (7–71). The recovered analog sample y_k is reconstructed from the received PCM code word using the same algorithm as that of Eq. (7–71). Assuming that the received PCM word for the k th sample is $(b_{k1}, b_{k2}, \dots, b_{kn})$, we see that

$$y_k = V \sum_{j=1}^n b_{kj} \left(\frac{1}{2}\right)^j \quad (7-78)$$

The b 's will be different from the a 's whenever there is a bit error in the recovered digital (PCM) waveform. By using Eqs. (7–78) and (7–71), Eq. (7–77) becomes

$$\begin{aligned} \overline{e_b^2} &= V^2 \overline{\left[\sum_{j=1}^n (b_{kj} - a_{kj}) \left(\frac{1}{2}\right)^j \right]^2} \\ &= V^2 \sum_{j=1}^n \sum_{\ell=1}^n \left(\overline{b_{kj} b_{k\ell}} - \overline{a_{kj} b_{k\ell}} - \overline{b_{kj} a_{k\ell}} + \overline{a_{kj} a_{k\ell}} \right) 2^{-j-\ell} \end{aligned} \quad (7-79)$$

where b_{kj} and $b_{k\ell}$ are two bits in the received PCM word that occur at different bit positions when $j \neq \ell$. Similarly, a_{kj} and $b_{k\ell}$ are the transmitted (Tx) and received (Rx) bits in two different bit positions, where $j \neq \ell$ (for the PCM word corresponding to the k th sample). The encoding process produces bits that are independent if $j \neq \ell$. Furthermore, the bits have a zero-mean value. Thus, $\overline{b_{kj} b_{k\ell}} = \overline{b_{kj} a_{k\ell}} = 0$ for $j \neq \ell$. Similar results are obtained for the other averages on the right-hand side of Eq. (7–79). Equation (7–79) becomes

$$\overline{e_b^2} = V^2 \sum_{j=1}^n \left(\overline{b_{kj}^2} - 2\overline{a_{kj} b_{kj}} + \overline{a_{kj}^2} \right) 2^{-2j} \quad (7-80)$$

Evaluating the averages in this equation, we obtain[†]

$$\begin{aligned} \overline{b_{kj}^2} &= (+1)^2 P(+1\text{Rx}) + (-1)^2 P(-1\text{Rx}) = 1 \\ \overline{a_{kj}^2} &= (+1)^2 P(+1\text{Tx}) + (-1)^2 P(-1\text{Tx}) = 1 \\ \overline{a_{kj} b_{kj}} &= (+1)(+1)P(+1\text{Tx}, +1\text{Rx}) + (-1)(-1)P(-1\text{Tx}, -1\text{Rx}) \\ &\quad + (-1)(+1)P(-1\text{Tx}, +1\text{Rx}) + (+1)(-1)P(+1\text{Tx}, -1\text{Rx}) \\ &= [P(+1\text{Tx}, +1\text{Rx}) + P(-1\text{Tx}, -1\text{Rx})] \\ &\quad - [P(-1\text{Tx}, +1\text{Rx}) + P(+1\text{Tx}, -1\text{Rx})] \\ &= [1 - P_e] - [P_e] = 1 - 2P_e \end{aligned}$$

[†] The notation $+1\text{Tx}$ denotes a binary 1 transmitted, -1Tx denotes a binary 0 transmitted, $+1\text{Rx}$ denotes a binary 1 received, and -1Rx denotes a binary 0 received.

Thus, Eq. (7-80) reduces to

$$\overline{e_b^2} = 4V^2 P_e \sum_{j=1}^n \left(\frac{1}{4}\right)^j$$

which, from Appendix A, becomes

$$\overline{e_b^2} = V^2 P_e \frac{\left(\frac{1}{4}\right)^n - 1}{\frac{1}{4} - 1} = \frac{4}{3} V^2 P_e \frac{(2^n)^2 - 1}{(2^n)^2}$$

or

$$\overline{e_b^2} = \frac{4}{3} V^2 P_e \frac{M^2 - 1}{M^2} \quad (7-81)$$

Substituting Eqs. (7-76) and (7-81) into Eq. (7-72) with the help of Eq. (7-75), we have

$$\left(\frac{S}{N}\right)_{\text{pk out}} = \frac{V^2}{(V^2/3M^2) + (4V^2/3M^2)P_e(M^2 - 1)}$$

which reduces to Eq. (7-70).

Example 7-8 (S/N) FOR THE RECOVERED ANALOG SIGNAL AT THE OUTPUT OF A PCM SYSTEM

Using Eq. (7-70), evaluate and plot the peak S/N of the recovered analog signal at the output of a PCM digital-to-analog converter as a function of the BER for the cases of $M = 256$ and $M = 8$. See Example7_08.m for the solution. Compare these results with those shown in Fig. 7-17.

Equation (7-70) is used to obtain the curves shown in Fig. 7-17. For a PCM system with M quantizing steps, $(S/N)_{\text{out}}$ is given as a function of the BER of the digital receiver. For $P_e < 1/(4M^2)$, the analog signal at the output is corrupted primarily by quantizing noise. In fact, for $P_e = 0$, $(S/N)_{\text{out}} = 3M^2$, and all the noise is quantizing noise. Conversely, for $P_e > 1/(4M^2)$, the output is corrupted primarily by channel noise.

It is also stressed that Eq. (7-70) is the *peak* signal to average noise ratio. The *average*-signal-to-average-noise ratio is obtained easily from the results just presented. The *average*-signal-to-average-noise ratio is

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{\overline{(x_k)^2}}{\overline{n_k^2}} = \frac{V^2}{3\overline{n_k^2}} = \frac{1}{3} \left(\frac{S}{N}\right)_{\text{pk out}}$$

where $\overline{x_k^2} = V^2/3$ because x_k is uniformly distributed from $-V$ to $+V$. Thus, using Eqs. (7-72) and (7-70), we calculate

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{M^2}{1 + 4(M^2 - 1)P_e} \quad (7-82)$$

when $(S/N)_{\text{out}}$ is the average-signal-to-average-noise power ratio at the output of the system.

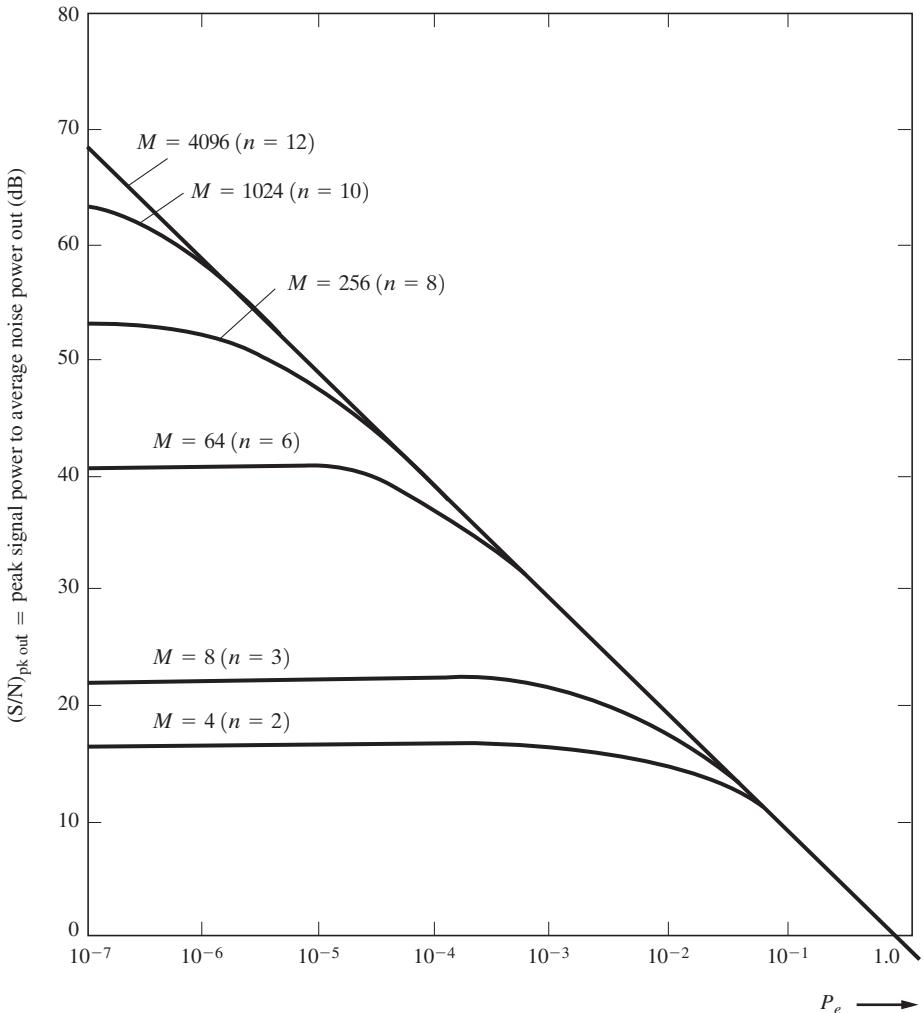


Figure 7-17 $(S/N)_{out}$ of a PCM system as a function of P_e and the number of quantizer steps M .

7-8 OUTPUT SIGNAL-TO-NOISE RATIOS FOR ANALOG SYSTEMS

In Chapters 4 and 5, generalized modulation and demodulation techniques for analog and digital signals were studied. Specific techniques were shown for AM, DSB-SC, SSB, PM, and FM signaling, and the bandwidths of these signals were evaluated. Here we evaluate the output signal-to-noise ratios for these systems as a function of the input signal, noise, and system parameters. Once again, we find that the mathematical analysis of noncoherent systems is more difficult than that for coherent systems and that approximations are often used to obtain simplified results. However, noncoherent systems are often found to be more prevalent in

practice, since the receiver cost is usually lower. This is the case for overall system cost in applications involving one transmitter and thousands or millions of receivers, such as in FM, AM, and analog TV broadcasting.

For systems with additive noise channels the input to the receiver is

$$r(t) = s(t) + n(t)$$

For bandpass communication systems having a transmission bandwidth of B_T ,

$$\begin{aligned} r(t) &= \operatorname{Re}\{g_s(t)e^{j(\omega_c t + \theta_c)}\} + \operatorname{Re}\{g_n(t)e^{j(\omega_c t + \theta_c)}\} \\ &= \operatorname{Re}\{[g_s(t) + g_n(t)]e^{j(\omega_c t + \theta_c)}\} \end{aligned}$$

or

$$r(t) = \operatorname{Re}\{g_T(t)e^{j(\omega_c t + \theta_c)}\} \quad (7-83a)$$

where

$$\begin{aligned} g_T(t) &\triangleq g_s(t) + g_n(t) \\ &= [x_s(t) + x_n(t)] + j[y_s(t) + y_n(t)] \\ &= x_T(t) + jy_T(t) \\ &= R_T(t)e^{j\theta_T(t)} \end{aligned} \quad (7-83b)$$

$g_T(t)$ denotes the total (i.e., composite) complex envelope at the receiver input; it consists of the complex envelope of the signal plus the complex envelope of the noise. The properties of the total complex envelope, as well as those of Gaussian noise, were given in Chapter 6. The complex envelopes for a number of different types of modulated signals $g_s(t)$ were given in Table 4–1.

Comparison with Baseband Systems

The noise performance of the various types of bandpass systems is examined by evaluating the signal-to-noise power ratio at the receiver output, $(S/N)_{\text{out}}$, when a modulated signal plus noise is present at the receiver input. We would like to see if $(S/N)_{\text{out}}$ is larger for an AM system, a DSB-SC system, or an FM system. To compare these SNRs, the power of the modulated signals at the inputs of these receivers is set to the same value and the PSD of the input noise is $N_0/2$. (That is, the input noise is white with a spectral level set to $N_0/2$.)

To compare the output signal-to-noise ratio $(S/N)_{\text{out}}$ for various bandpass systems, we need a common measurement criterion for the receiver input. For analog systems, the criterion is the received signal power P_s divided by the amount of power in the white noise that is contained in a bandwidth equal to the message (modulation) bandwidth. This is equivalent to the $(S/N)_{\text{out}}$ of a baseband transmission system, as illustrated in Fig. 7–18. That is,

$$\left(\frac{S}{N}\right)_{\text{baseband}} = \frac{P_s}{N_0 B} \quad (7-84)$$

We can compare the performance of different modulated systems by evaluating $(S/N)_{\text{out}}$ for each system as a function of $(P_s/N_0 B) = (S/N)_{\text{baseband}}$, where P_s is the power of the AM, DSB-SC, or FM signal at the receiver input. B is chosen to be the bandwidth of the

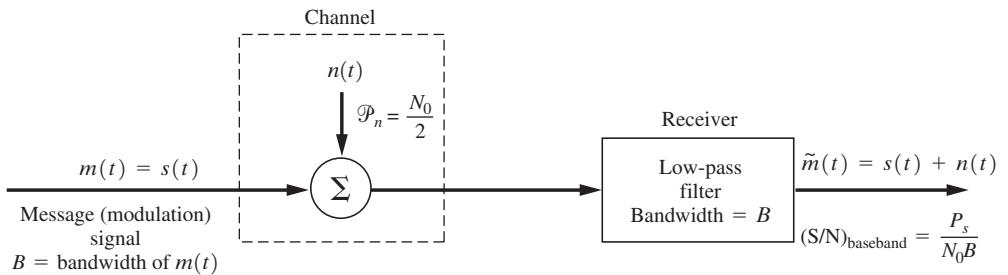


Figure 7-18 Baseband system.

baseband (modulating) signal where the same baseband modulating signal is used for all cases so that the same basis of comparison will be realized. [If B were chosen to be the bandwidth of the input-modulated signal, B_T , the comparison would not be on an equal noise PSD basis of $N_0/2$ for a fixed value of $(S/N)_{\text{baseband}}$ because the B_T values for AM and FM signals are different.]

The SNR at the receiver input can also be obtained; it is

$$\left(\frac{S}{N}\right)_{\text{in}} = \frac{P_s}{N_0 B_T} = \left(\frac{S}{N}\right)_{\text{baseband}} \left(\frac{B}{B_T}\right) \quad (7-85)$$

where B_T is the bandwidth of the bandpass signal at the receiver input.

$(S/N)_{\text{out}}$ will now be evaluated for several different systems.

AM Systems with Product Detection

Figure 7-19 illustrates the receiver for an AM system with coherent detection. From Eq. (5-3), the complex envelope of the AM signal is

$$g_s(t) = A_c[1 + m(t)]$$

The complex envelope of the composite received signal plus noise is

$$g_T(t) = [A_c + A_c m(t) + x_n(t)] + jy_n(t) \quad (7-86)$$

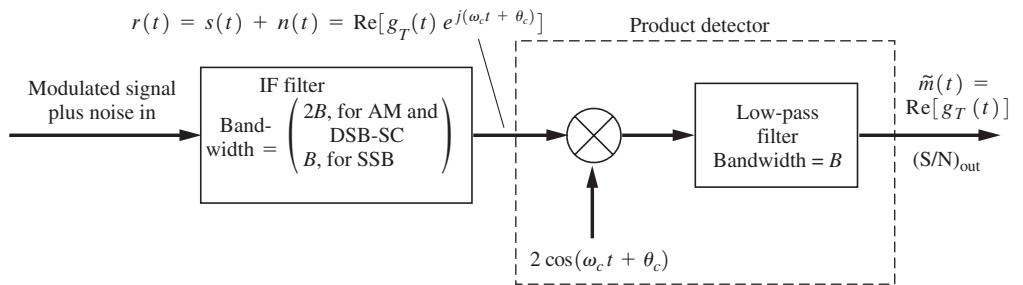


Figure 7-19 Coherent receiver.

For product detection, using Eq. (4–71), we find that the output is

$$\tilde{m}(t) = \operatorname{Re}\{g_T(t)\} = A_c + A_c m(t) + x_n(t)$$

Here A_c is the DC voltage at the detector output that occurs because of the discrete AM carrier,[†] $A_c m(t)$ is the detected modulation, and $x_n(t)$ is the detected noise. The output SNR is

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{A_c^2 \overline{m^2(t)}}{\overline{x_n^2(t)}} = \frac{A_c^2 \overline{m^2(t)}}{2N_0B} \quad (7-87)$$

where, from Eq. (6–133g), $\overline{x_n^2} = \overline{n^2} = 2(N_0/2)(2B)$. The input signal power is

$$P_s = \frac{A_c^2}{2} [1 + \overline{m^2}] = \frac{A_c^2}{2} [1 + \overline{m^2}]$$

where it is assumed that $\overline{m(t)} = 0$ (i.e., no DC on the modulating waveform). Thus, the input SNR is

$$\left(\frac{S}{N}\right)_{\text{in}} = \frac{(A_c^2/2)(1 + \overline{m^2})}{2N_0B} \quad (7-88)$$

Combining Eqs. (7–87) and (7–88) yields

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{in}}} = \frac{2 \overline{m^2}}{1 + \overline{m^2}} \quad (7-89)$$

For 100% sine-wave modulation, $\overline{m^2} = \frac{1}{2}$ and $(S/N)_{\text{out}}/(S/N)_{\text{in}} = \frac{2}{3}$.

For comparison purposes, Eq. (7–87) can be evaluated in terms of $(S/N)_{\text{baseband}}$ by substituting for P_s :

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = \frac{\overline{m^2}}{1 + \overline{m^2}} \quad (7-90)$$

For 100% sine-wave modulation, $(S/N)_{\text{out}}/(S/N)_{\text{baseband}} = \frac{1}{3}$. This illustrates that this AM system is 4.8 dB worse than a baseband system that uses the same amount of signal power because of the additional power in the discrete AM carrier.[‡] This is shown in Fig. 7–27.

AM Systems with Envelope Detection

The envelope detector produces $KR_T(t)$ at its output, where K is a proportionality constant. Then, for additive signal plus noise at the input, the output is

$$KR_T(t) = K|g_s(t) + g_n(t)|$$

[†] This DC voltage is often used to provide automatic gain control (AGC) of the preceding RF and IF stages.

[‡] The AM carrier does not contribute to the information ability of the signal but permits AM receivers to use economical envelope detectors.

Substituting Eq. (7-86) for $g_s(t) + g_n(t)$ gives

$$KR_T(t) = K|A_c + A_c m(t) + x_n(t)| + j[y_n(t)] \quad (7-91)$$

The power is

$$\overline{[KR_T(t)]^2} = K^2 A_c^2 \left\{ \left[1 + m(t) + \frac{x_n(t)}{A_c} \right]^2 + \left[\frac{y_n(t)}{A_c} \right]^2 \right\} \quad (7-92)$$

For the case of large $(S/N)_{in}$, $(y_n/A_c)^2 \ll 1$, so we have

$$\overline{[KR_T(t)]^2} = (KA_c)^2 + K^2 A_c^2 \overline{m^2} + K^2 \overline{x_n^2} \quad (7-93)$$

where $(KA_c)^2$ is the power of the AGC term, $K^2 A_c^2 \overline{m^2}$ is the power of the detected modulation (signal), and $K^2 \overline{x_n^2}$ is the power of the detected noise. Thus, for large $(S/N)_{in}$,

$$\left(\frac{S}{N} \right)_{out} = \frac{A_c^2 \overline{m^2}}{\overline{x_n^2}} = \frac{A_c^2 \overline{m^2}}{2N_0 B} \quad (7-94)$$

Comparing this with Eq. (7-87), we see that for large $(S/N)_{in}$, the performance of the envelope detector is identical to that of the product detector.

For small $(S/N)_{in}$, the performance of the envelope detector is much inferior to that of the product detector. Referring to Eq. (7-91), we note that the detector output is

$$KR_T(t) = K|g_T(t)| = K|A_c[1 + m(t)] + R_n(t)e^{j\theta_n(t)}|$$

For $(S/N)_{in} < 1$, as seen from Fig. 7-20, the magnitude of $g_T(t)$ can be approximated by

$$KR_T(t) \approx K\{A_c[1 + m(t)] \cos \theta_n(t) + R_n(t)\} \quad (7-95)$$

Thus, for the case of a Gaussian noise channel, the output of the envelope detector consists of Rayleigh distributed noise $R_n(t)$, plus a signal term that is multiplied by a random noise factor $\cos \theta_n(t)$. This multiplicative effect corrupts the signal to a much larger extent than the additive

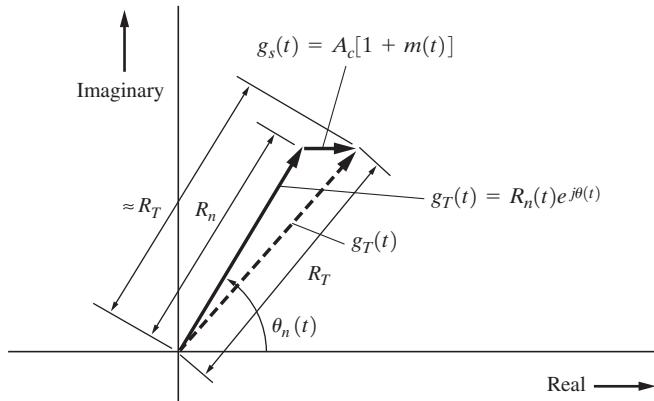


Figure 7-20 Vector diagram for AM, $(S/N)_{in} \ll 1$.

Rayleigh noise. This produces a *threshold* effect. That is, $(S/N)_{\text{out}}$ becomes *very small* when $(S/N)_{\text{in}} < 1$. In fact, it can be shown that $(S/N)_{\text{out}}$ is proportional to the *square* of $(S/N)_{\text{in}}$ for the case of $(S/N)_{\text{in}} < 1$ [Schwartz, Bennett, and Stein, 1966]. Although the envelope detector is greatly inferior to the product detector for small $(S/N)_{\text{in}}$, this deficiency is seldom noticed in practice for AM broadcasting applications. This is because the AM listener is usually interested in listening to stations only if they have reasonably good $(S/N)_{\text{out}}$, say 25 dB or more. Under these conditions the envelope detector performance is equivalent to that of the product detector. Moreover, the envelope detector is inexpensive and does not require a coherent reference. For these reasons the envelope detector is used almost exclusively in AM broadcast receivers. For other applications, such as listening to weak AM stations or for AM data transmission systems, product detection may be required to eradicate the multiplicative noise that would occur with envelope detection of weak systems.

DSB-SC Systems

As indicated in Chapter 5, the DSB-SC signal is essentially an AM signal in which the discrete carrier term has been suppressed (i.e., equivalent to infinite percent AM). The modulating waveform $m(t)$ is recovered from the DSB-SC signal by using coherent detection, as shown in Fig. 7–19. For DSB-SC,

$$g_s(t) = A_c m(t) \quad (7-96)$$

Following the development leading to Eq. (7–89), the SNR for DSB-SC is

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{in}}} = 2 \quad (7-97)$$

Using Eq. (7–90), we obtain

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = 1 \quad (7-98)$$

Thus, the noise performance of a DSB-SC system is the same as that of baseband signaling systems, although the bandwidth requirement is twice as large (i.e., $B_T = 2B$).

SSB Systems

The receiver for an SSB signal is also shown in Fig. 7–19, where the IF bandwidth is now $B_T = B$. The complex envelope for SSB is

$$g_s(t) = A_c[m(t) \pm j\hat{m}(t)] \quad (7-99)$$

where the upper sign is used for USSB and the lower sign is used for LSSB. The complex envelope for the (total) received SSB signal plus noise is

$$g_T(t) = [A_c m(t) + x_n(t)] + j[\pm A_c \hat{m}(t) + y_n(t)] \quad (7-100)$$

The output of the product detector is

$$\hat{m}(t) = \text{Re}[g_T(t)] = A_c m(t) + x_n(t) \quad (7-101)$$

The corresponding SNR is

$$(S/N)_{\text{out}} = \frac{A_c^2 \overline{m^2(t)}}{\overline{x_n^2(t)}} = \frac{A_c^2 \overline{m^2(t)}}{N_0 B} \quad (7-102)$$

where $\overline{x_n^2} = \overline{n^2} = 2(N_0/2)(B)$. Using Eq. (6-133g), we see that the input signal power is

$$P_s = \frac{1}{2} \overline{|g_s(t)|^2} = \frac{A_c^2}{2} [\overline{m^2} + (\hat{m})^2] = A_c^2 \overline{m^2} \quad (7-103)$$

and that the input noise power is $P_n = \overline{n^2(t)} = N_0 B$. Thus,

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{in}}} = 1 \quad (7-104)$$

Similarly,

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = 1 \quad (7-105)$$

SSB is exactly equivalent to baseband signaling, in terms of both the noise performance and the bandwidth requirements (i.e., $B_T = B$). Furthermore, Eqs. (7-98) and (7-105) show that DSB, SSB, and baseband signaling systems are all equivalent in output SNR.

PM Systems

As shown in Fig. 7-21, the modulation on a PM signal is recovered by a receiver that uses a (coherent) phase detector. (In Chapter 4, it was found that a phase detector could be realized by using a limiter that followed a product detector when β_p is small.) The PM signal has a complex envelope of

$$g_s(t) = A_c e^{j\theta_s(t)} \quad (7-106a)$$

where

$$\theta_s(t) = D_p m(t) \quad (7-106b)$$

The complex envelope of the composite signal plus noise at the detector input is

$$\begin{aligned} g_T(t) &= |g_T(t)e^{j\theta_T(t)}| = [g_s(t) + g_n(t)] \\ &= A_c e^{j\theta_s(t)} + R_n(t) e^{j\theta_n(t)} \end{aligned} \quad (7-107)$$

$$r_0(t) = \underline{|g_T(t)|}, \text{ for PM}$$

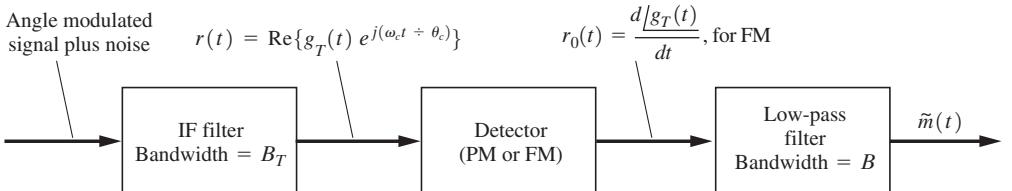


Figure 7-21 Receiver for angle-modulated signals.

When the input is Gaussian noise (only), $R_n(t)$ is Rayleigh distributed and $\theta_n(t)$ is uniformly distributed, as demonstrated in Example 6–13.

The phase detector output is proportional to $\theta_T(t)$:

$$r_0(t) = K \angle g_T(t) = K\theta_T(t)$$

Here K is the gain constant of the detector. For large $(S/N)_{in}$, the phase angle of $g_T(t)$ can be approximated with the help of a vector diagram for $g_T = g_s + g_n$. This is shown in Fig. 7–22. Then, for $A_c \gg R_n(t)$, the composite phase angle is approximated by

$$r_0(t) = K\theta_T(t) \approx K \left\{ \theta_s(t) + \frac{R_n(t)}{A_c} \sin [\theta_n(t) - \theta_s(t)] \right\} \quad (7-108)$$

For the case of no phase modulation (the carrier signal is still present), the equation reduces to

$$r_0(t) \approx \frac{K}{A_c} y_n(t), \quad \theta_s(t) = 0 \quad (7-109)$$

where, using Eq. (6–127e), we find that $y_n(t) = R_n(t) \sin \theta_n(t)$. This shows that the presence of an unmodulated carrier (at the input to the PM receiver) suppresses the noise on the output. This is called the *quieting effect*, and it occurs when the input signal power is above the *threshold* [i.e., when $(S/N)_{in} \gg 1$]. Furthermore, when phase modulation is present and $(S/N)_{in} \gg 1$, we can replace $R_n(t) \sin [\theta_n(t) - \theta_s(t)]$ by $R_n(t) \sin \theta_n(t)$. This can be done because $\theta_s(t)$ can be considered to be deterministic, and, consequently, $\theta_s(t)$ is a constant for a given value of t . Then, $\theta_n(t) - \theta_s(t)$ will be uniformly distributed over some 2π interval, since, from Eq. (6–153), $\theta_n(t)$ is uniformly distributed over $(0, 2\pi)$. That is, $\cos [\theta_n(t) - \theta_s(t)]$ will have the same PDF as $\cos [\theta_n(t)]$, so that the replacement can be made. Thus, for large $(S/N)_{in}$, the relevant part of the PM detector output is approximated by

$$r_0(t) \approx s_0(t) + n_0(t) \quad (7-110)$$

where

$$s_0(t) = K\theta_s(t) = KD_p m(t) \quad (7-111a)$$

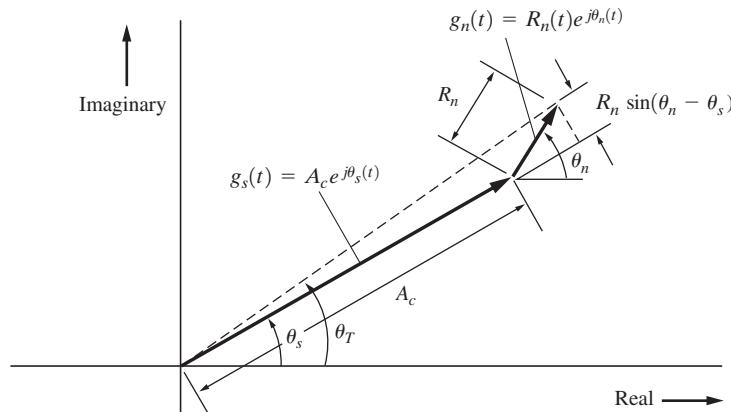



Figure 7–22 Vector diagram for angle modulation, $(S/N)_{in} \gg 1$.

$$n_0(t) = \frac{K}{A_c} y_n(t) \quad (7-111b)$$


The PSD of this output noise, $n_0(t)$, is obtained by the use of Eq. (6-133 l), and we get

$$\mathcal{P}_{n_0}(f) = \begin{cases} \frac{K^2}{A_c^2} N_0, & |f| \leq B_T/2 \\ 0, & f \text{ otherwise} \end{cases} \quad (7-112)$$

where the PSD of the bandpass input noise is $N_0/2$ over the bandpass of the IF filter and zero outside the IF bandpass. Equation (7-112) is plotted in Fig. 7-23a, and the portion of the spectrum that is passed by the LPF is denoted by the hatched lines.

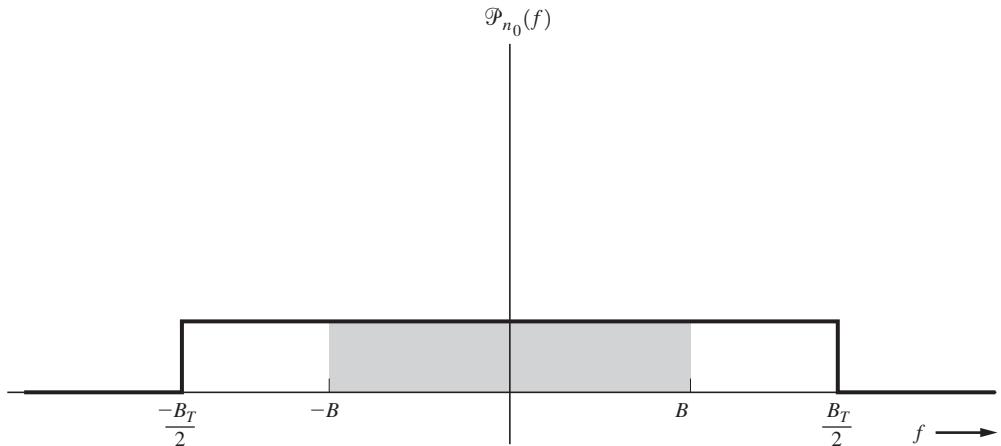

(a) PM Detector

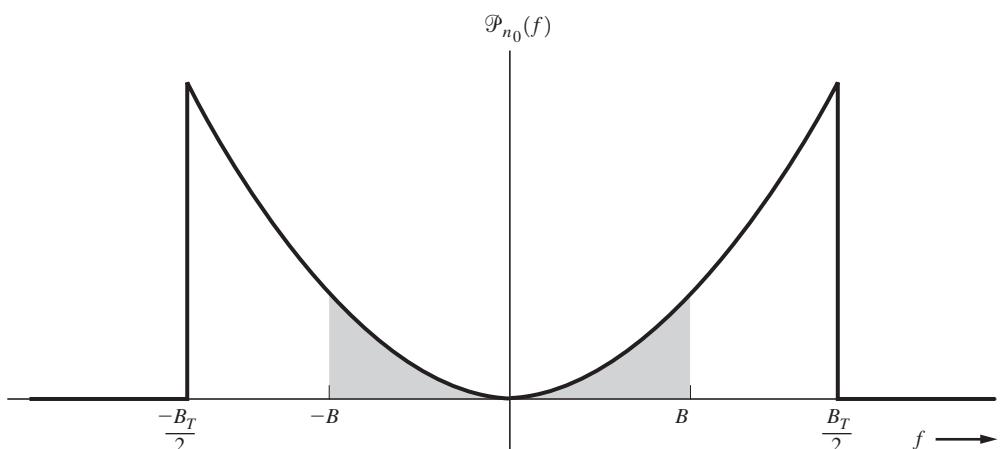

(b) FM Detector

Figure 7-23 PSD for noise out of detectors for receivers of angle-modulated signals.

The receiver output consists of the low-pass filtered version of $r_0(t)$. However, the spectrum of $s_0(t)$ is contained within the bandpass of the filter, so

$$\tilde{m}(t) = s_0(t) + \tilde{n}_0(t) \quad (7-113)$$

where $\tilde{n}_0(t)$ is bandlimited white noise of the hatched portion of Fig. 7–23a. The noise power of the receiver is

$$\overline{[\tilde{n}_0(t)]^2} = \int_{-B}^B \mathcal{P}_{n_0}(f) df = \frac{2K^2 N_0 B}{A_c^2} \quad (7-114)$$

The output SNR is now easily evaluated with the help of Eqs. (7-111a) and (7-114):

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{\overline{s_0^2}}{\overline{\tilde{n}_0^2}} = \frac{A_c^2 D_p^2 \overline{m^2}}{2N_0 B}$$

Using Eqs. (5–46) and (5–47), we can write the sensitivity constant of the PM transmitter as

$$D_p = \frac{\beta_p}{V_p}$$

where β_p is the PM index and V_p is the peak value of $m(t)$. Thus, the output SNR becomes

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{A_c^2 \beta_p^2 (m/V_p)^2}{2N_0 B} \quad (7-115)$$

The input SNR is

$$\left(\frac{S}{N}\right)_{\text{in}} = \frac{A_c^2/2}{2(N_0/2)B_T} = \frac{A_c^2}{2N_0 B_T} \quad (7-116)$$

where B_T is the transmission bandwidth of the PM signal (and also the IF filter bandwidth).

The transmission bandwidth of the PM signal is given by Carson's rule, Eq. (5–61),

$$B_T = 2(\beta_p + 1)B \quad (7-117)$$

where β_p is the PM index. The PM index is identical to the peak angle deviation of the PM signal, as indicated in Eq. (5–47). Thus,

$$\left(\frac{S}{N}\right)_{\text{in}} = \frac{A_c^2}{4N_0(\beta_p + 1)B} \quad (7-118)$$

Combining this with Eq. (7–115), we obtain the ratio of output to input SNR:

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{in}}} = 2\beta_p^2(\beta_p + 1) \left(\frac{m}{V_p}\right)^2 \quad (7-119)$$

The output SNR can also be expressed in terms of the equivalent baseband system by substituting Eq. (7-84) into Eq. (7-115), where $P_s = A_c^2/2$:

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = \beta_p^2 \left(\frac{m}{V_p} \right)^2 \quad (7-120)$$

This equation shows that the improvement of a PM system over a baseband signaling system depends on the amount of phase deviation that is used. It seems to indicate that we can make the improvement as large as we wish simply by increasing β_p . This depends on the types of circuits used. If the peak phase deviation exceeds π radians, special "phase unwrapping" techniques have to be used in some circuits to obtain the true value (as compared with the relative value) of the phase at the output. Thus, the maximum value of $\beta_p m(t)/V_p = D_p m(t)$ might be taken to be π . For sinusoidal modulation, this would provide an improvement of $D_p^2 m^2 = \pi^2/2$, or 6.9 dB, over baseband signaling.

It is emphasized that the results obtained previously for $(S/N)_{\text{out}}$ are valid only when the input signal is above the threshold [i.e., when $(S/N)_{\text{in}} > 1$].

FM Systems

The procedure that we will use to evaluate the output SNR for FM systems is essentially the same as that used for PM systems, except that the output of the FM detector is proportional to $d\theta_T(t)/dt$, whereas the output of the PM detector is proportional to $\theta_T(t)$. The detector in the angle modulated receiver of Fig. 7-21 is now an FM detector. The complex envelope of the FM signal (only) is

$$g_s(t) = A_c e^{j\theta_s(t)} \quad (7-121a)$$

where

$$\theta_s(t) = D_f \int_{-\infty}^t m(\lambda) d\lambda \quad (7-121b)$$

It is assumed that an FM signal plus white noise is present at the receiver input.

The output of the FM detector is proportional to the derivative of the composite phase at the detector input:

$$r_0(t) = \left(\frac{K}{2\pi} \right) \frac{d\angle gT(t)}{dt} = \left(\frac{K}{2\pi} \right) \frac{d\theta_T(t)}{dt} \quad (7-122)$$

In this equation, K is the FM detector gain. Using the same procedure as that leading to Eqs. (7-108), (7-110), and (7-111), we can approximate the detector output by

$$r_0(t) \approx s_0(t) + n_0(t) \quad (7-123)$$

where, for FM,

$$s_0(t) = \left(\frac{K}{2\pi} \right) \frac{d\theta_s(t)}{dt} = \left(\frac{KD_f}{2\pi} \right) m(t) \quad (7-124a)$$

and

$$n_0(t) = \left(\frac{K}{2\pi A_c} \right) \frac{dy_n(t)}{dt} \quad (7-124b)$$

This result is valid only when the input signal is above the threshold [i.e., when $(S/N)_{in} \gg 1$]. The derivative of the noise, Eq. (7-124b), makes the PSD of the FM output noise different from that for the PM case. For FM, we have

$$\mathcal{P}_{n_0}(f) = \left(\frac{K}{2\pi A_c} \right)^2 |j2\pi f|^2 \mathcal{P}_{yn}(f)$$

or

$$\mathcal{P}_{n_0}(f) = \begin{cases} \left(\frac{K}{A_c} \right)^2 N_0 f^2, & |f| < B_T/2 \\ 0, & f \text{ otherwise} \end{cases} \quad (7-125)$$

This shows that the PSD for the noise out of the FM detector has a parabolic shape, as illustrated in Fig. 7–23b.

The receiver output consists of the low-pass filtered version of $r_0(t)$. The noise power for the filtered noise is

$$\overline{[\tilde{n}_0(t)]^2} = \int_{-B}^B \mathcal{P}_{n_0}(f) df = \frac{2}{3} \left(\frac{K}{A_c} \right)^2 N_0 B^3 \quad (7-126)$$

The output SNR is now easily evaluated using Eqs. (7-124a) and (7-126):

$$\left(\frac{S}{N} \right)_{out} = \frac{\overline{s_0^2}}{\overline{[\tilde{n}_0]^2}} = \frac{3A_c^2[D_f/(2\pi B)]^2 m^2}{2N_0 B}$$

From Eqs. (5–44) and (5–48), it is realized that

$$\frac{D_f}{2\pi B} = \frac{\beta_f}{V_p}$$

where V_p is the peak value of $m(t)$. Then, the output SNR becomes

$$\left(\frac{S}{N} \right)_{out} = \frac{3A_c^2 \beta_f^2 (m/V_p)^2}{2N_0 B} \quad (7-127)$$

The input SNR is

$$\left(\frac{S}{N} \right)_{in} = \frac{A_c^2}{4N_0(\beta_f + 1)B} \quad (7-128)$$

Combining Eqs. (7-127) and (7-128), we obtain the ratio of output to input SNR

$$\frac{(S/N)_{out}}{(S/N)_{in}} = 6\beta_f^2(\beta_f + 1) \overline{\left(\frac{m}{V_p} \right)^2} \quad (7-129)$$

where β_f is the FM index and V_p is the peak value of the modulating signal $m(t)$.

Example 7–9 IMPROVEMENT FACTOR FOR AN FM SYSTEM

Using Eq. (7–29), evaluate and plot the FM system improvement factor, $I = (S/N)_{\text{out}}/(S/N)_{\text{in}}$, in dB units as a function of β_f for the case of sinusoidal modulation. See Example7_09.m for the solution.

The output SNR can be expressed in terms of the equivalent baseband SNR by substituting Eq. (7–84) into Eq. (7–127), where $P_s = A_c^2/2$,

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = 3\beta_f^2 \overline{\left(\frac{m}{V_p}\right)^2} \quad (7-130)$$

For the case of sinusoidal modulation, $\overline{\left(m/V_p\right)^2} = \frac{1}{2}$, and Eq. (7–130) becomes

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = \frac{3}{2} \beta_f^2 (\text{sinusoidal modulation}) \quad (7-131)$$

At first glance, these results seem to indicate that the performance of FM systems can be increased without limit simply by increasing the FM index β_f . However, as β_f is increased, the transmission bandwidth increases, and, consequently, $(S/N)_{\text{in}}$ decreases. These equations for $(S/N)_{\text{out}}$ are valid only when $(S/N)_{\text{in}} \gg 1$ (i.e., when the input signal power is above the threshold), so $(S/N)_{\text{out}}$ does not increase to an excessively large value simply by increasing the FM index β_f . Plots of Eq. (7–131) are given by the dashed lines in Fig. 7–24.

The threshold effect was first analyzed in 1948 [Rice, 1948; Stumpers, 1948]. An excellent tutorial treatment has been given by Taub and Schilling [1986]. They have shown that Eq. (7–131) can be generalized to describe $(S/N)_{\text{out}}$ near the threshold. For the case of sinusoidal modulation, the output SNR for a FM discriminator is shown to be

$$\left(\frac{S}{N}\right)_{\text{out}} = \frac{\frac{3}{2} \beta_f^2 (S/N)_{\text{baseband}}}{1 + \left(\frac{12}{\pi} \beta_f\right) \left(\frac{S}{N}\right)_{\text{baseband}} e^{\left\{-\left[\frac{1}{2(\beta_f + 1)} \left(\frac{S}{N}\right)_{\text{baseband}}\right]\right\}}} \quad (7-132)$$

(No deemphasis is used in obtaining the result.) This output SNR characteristic showing the threshold effect of an FM discriminator is plotted by the solid lines in Fig. 7–24. This figure illustrates that the FM noise performance can be substantially better than baseband performance. For example, for $\beta_f = 5$ and $(S/N)_{\text{baseband}} = 25$ dB, the FM performance is 15.7 dB better than the baseband performance. The performance can be improved even further by the use of deemphasis, as we will demonstrate in a later section.

Example 7–10 NOISE PERFORMANCE FOR AN FM SYSTEM

Using Eq. (7–132), evaluate and plot $(S/N)_{\text{out}}$ as a function of $(S/N)_{\text{baseband}}$ in dB units for sinusoidal modulation. Plot for two cases: $\beta_f = 10$ and $\beta_f = 2$. See Example7_10.m for the solution. Compare these results with those shown in Fig. 7–24.

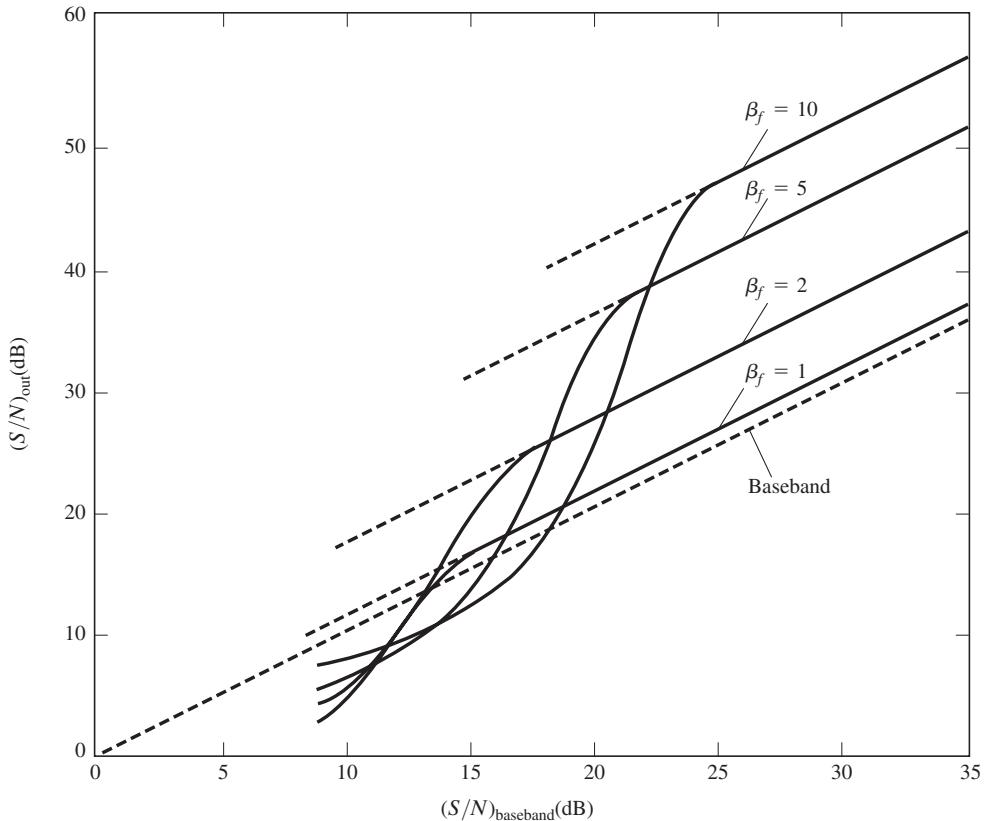


Figure 7–24 Noise performance of a FM discriminator for a sinusoidal modulated FM signal plus Gaussian noise (no deemphasis). (See Example 7_10.m.)

FM Systems with Threshold Extension

Any one of several techniques may be used to lower the threshold below that provided by a receiver that uses only a FM discriminator. For example, a PLL FM detector could be used to extend the threshold below that provided by an FM discriminator. However, when the input SNR is large, all the FM receiving techniques provide the same performance—namely, that predicted by Eq. (7–129) or Eqs. (7–130).

An *FM receiver with feedback* (FMFB) is shown in Fig. 7–25. This is another threshold extension technique. The FMFB receiver provides threshold extension by lowering the modulation index for the FM signal that is applied to the discriminator input. That is, the modulation index of $\tilde{e}(t)$ is smaller than that for $v_{\text{in}}(t)$, as we will show. Thus, the threshold will be lower than that illustrated in Fig. 7–24. The calculation of the exact amount of threshold extension that is realized by an FMFB receiver is somewhat involved [Taub and Schilling, 1986]. However, we can easily show that the FMFB technique does indeed reduce the modulation index of the FM signal at the discriminator input. Referring to Fig. 7–25, we find that the FM signal at the receiver input is

$$v_{\text{in}}(t) = A_c \cos[\omega_c t + \theta_i(t)]$$

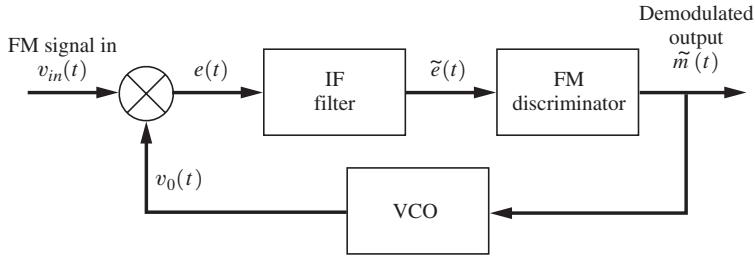


Figure 7-25 FMFB receiver.

where

$$\theta_i(t) = D_f \int_{-\infty}^t m(\lambda) d\lambda$$

The output of the VCO is

$$v_0(t) = A_0 \cos [\omega_0 t + \theta_0(t)]$$

where

$$\theta_0(t) = D_v \int_{-\infty}^t \tilde{m}(\lambda) d\lambda$$

With these representations for $v_{\text{in}}(t)$ and $v_0(t)$, the output of the multiplier (mixer) is

$$\begin{aligned} e(t) &= A_c A_0 \cos[\omega_c t + \theta_i(t)] \cos[\omega_0 t + \theta_0(t)] \\ &= \frac{1}{2} A_c A_0 \cos[(\omega_c - \omega_0)t + \theta_i(t) - \theta_0(t)] \\ &\quad + \frac{1}{2} A_c A_0 \cos[(\omega_c + \omega_0)t + \theta_i(t) + \theta_0(t)] \end{aligned}$$

If the IF filter is tuned to pass the band of frequencies centered about $f_{\text{if}} \triangleq f_c - f_0$, the IF output is

$$\tilde{e}(t) = \frac{A_c A_0}{2} \cos[\omega_{\text{if}} t + \theta_i(t) - \theta_0(t)] \quad (7-133a)$$

or

$$\tilde{e}(t) = \frac{A_c A_0}{2} \cos \left\{ \omega_{\text{if}} t + \int_{-\infty}^t [D_f m(\lambda) - D_v \tilde{m}(\lambda)] d\lambda \right\} \quad (7-133b)$$

The FM discriminator output is proportional to the derivative of the phase deviation:

$$\tilde{m}(t) = \frac{K}{2\pi} \frac{d \left\{ \int_{-\infty}^t [D_f m(\lambda) - D_v \tilde{m}(\lambda)] d\lambda \right\}}{dt}$$

Evaluating the derivative and solving the resulting equation for $\tilde{m}(t)$, we obtain

$$\tilde{m}(t) = \left(\frac{KD_f}{2\pi + KD_v} \right) m(t)$$

Substituting this expression for $\tilde{m}(t)$ into Eq. (7–133), we get

$$\tilde{e}(t) = \frac{A_c A_0}{2} \cos \left[\omega_{\text{if}} t + \left(\frac{1}{1 + (K/2\pi) D_v} \right) D_f \int_{-\infty}^t m(\lambda) d\lambda \right] \quad (7-134)$$

This demonstrates that the modulation index of $\tilde{e}(t)$ is exactly $1/[1 + (K/2\pi) D_v]$ of the modulation index of $v_{\text{in}}(t)$. The threshold extension provided by the FMFB receiver is on the order of 5 dB, whereas that of a PLL receiver is on the order of 3 dB (when both are compared with the threshold of an FM discriminator). Although this is not a fantastic improvement, it can be quite significant for systems that operate near the threshold, such as satellite communication systems. A system that uses a threshold extension receiver instead of a conventional receiver may be much less expensive than the system that requires a double-sized antenna to provide the 3-dB signal gain. Other threshold extension techniques have been described and analyzed in the literature [Klapper and Frankle, 1972].

FM Systems with Deemphasis

The noise performance of an FM system can be improved by preemphasizing the higher frequencies of the modulation signal at the transmitter input and deemphasizing the output of the receiver (as first illustrated in Fig. 5–16). This improvement occurs because the PSD of the noise at the output of the FM detector has a parabolic shape, as shown in Fig. 7–23b.

Referring to Fig. 7–21, we incorporate deemphasis into the receiver by including a deemphasis response in the LPF characteristic. Assume that the transfer function of the LPF is

$$H(f) = \frac{1}{1 + j(f/f_1)} \quad (7-135)$$

over the message bandwidth of B Hz. For standard FM broadcasting, a $75\text{-}\mu\text{s}$ deemphasis filter is used so that $f_1 = 1/[(2\pi)(75 \times 10^{-6})] = 2.1$ kHz. Using Eq. (7–125), we see that the noise power out of the receiver with deemphasis is

$$\overline{[\tilde{n}_0(t)]^2} = \int_{-B}^B |H(f)|^2 \mathcal{P}_{n_0}(f) df = \left(\frac{K}{A_c} \right)^2 N_0 \int_{-B}^B \left[\frac{1}{1 + (f/f_1)^2} \right] f^2 df$$

or

$$\overline{[\tilde{n}_0(t)]^2} = 2 \left(\frac{K}{A_c} \right)^2 N_0 f_1^3 \left[\frac{B}{f_1} - \tan^{-1} \left(\frac{B}{f_1} \right) \right] \quad (7-136)$$

In a typical application, $B/f_1 \gg 1$, and so $\tan^{-1}(B/f_1) \approx \pi/2$, which is negligible when compared with B/f_1 . Thus, Eq. (7–136) becomes

$$\overline{[\tilde{n}_0(t)]^2} = 2 \left(\frac{K}{A_c} \right)^2 N_0 f_1^2 B \quad (7-137)$$

for $B/f_1 \gg 1$.

The output *signal* power for the preemphasis-deemphasis system is the same as that when preemphasis-deemphasis is not used because the overall frequency response of the system to $m(t)$ is flat (constant) over the bandwidth of B Hz.[†] Thus, from Eqs. (7-137) and (7-124a), the output SNR is

$$\left(\frac{S}{N} \right)_{\text{out}} = \frac{\overline{s_0^2}}{\overline{\tilde{n}_0^2}} = \frac{A_c^2 [D_f/(2\pi f_1)]^2 \overline{m^2}}{2N_0 B}$$

In addition, $D_f/(2\pi B) = \beta_f/V_p$, so the output SNR reduces to

$$\left(\frac{S}{N} \right)_{\text{out}} = \frac{A_c^2 \beta_f^2 (B/f_1)^2 \overline{(m/V_p)^2}}{2N_0 B} \quad (7-138)$$

Using Eq. (7-128), we find that the output to input SNR is

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{in}}} = 2\beta_f^2 (\beta_f + 1) \left(\frac{B}{f_1} \right)^2 \left(\frac{\overline{m}}{V_p} \right)^2 \quad (7-139)$$

where β_f is the FM index, B is the bandwidth of the baseband (modulation) circuits, f_1 is the 3-dB bandwidth of the deemphasis filter, V_p is the peak value of the modulating signal $m(t)$, and $(\overline{m/V_p})^2$ is the square of the RMS value of $m(t)/V_p$.

The output SNR is expressed in terms of the equivalent baseband SNR by substituting Eq. (7-84) into Eq. (7-138):

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = \beta_f^2 \left(\frac{B}{f_1} \right)^2 \left(\frac{\overline{m}}{V_p} \right)^2 \quad (7-140)$$

When a sinusoidal test tone is transmitted over this FM system, $\overline{(m/V_p)^2} = \frac{1}{2}$ and Eq. (7-140) becomes

$$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}} = \frac{1}{2} \beta_f^2 \left(\frac{B}{f_1} \right)^2 \text{ (sinusoidal modulation)} \quad (7-141)$$

Of course, each of these results is valid only when the FM signal at the receiver input is above the threshold.

[†] For a fair comparison of FM systems with and without preemphasis, the peak deviation ΔF needs to be the same for both cases. With typical audio program signals, preemphasis does not increase ΔF appreciably, because the low frequencies dominate in the spectrum of $m(t)$. Thus, this analysis is valid. However, if $m(t)$ is assumed to have a flat spectrum over the audio passband, the gain of the preemphasis filter needs to be reduced so that the peak deviation will be the same with and without preemphasis. In the latter case, there is less improvement in performance when preemphasis is used.

It is interesting to compare the noise performance of commercial FM systems. As shown in Table 5–4, for standard FM broadcasting $\beta_f = 5$, $B = 15$ kHz, and $f_1 = 2.1$ kHz. Using these parameters in Eq. (7–141), we obtain the noise performance of an FM broadcasting system, as shown in Fig. 7–26 by a solid curve. The corresponding performance of the same system, but without preemphasis–deemphasis, is shown by a dashed curve [from Eq. (7–131)]. Similarly, the results are shown for the performance of the conventional analog TV FM aural transmission system where $\beta_f = 1.67$, $B = 15$ kHz, and $f_1 = 2.1$ kHz.

Figure 7–26 also illustrates that the FM noise performance with deemphasis can be substantially better than that of FM without deemphasis. For example, for standard FM broadcasting ($\beta_f = 5$, $B = 15$ kHz, and $f_1 = 2.1$ kHz) with $(S/N)_{\text{baseband}} = 25$ dB, the FM performance is superior by 13.3 dB.

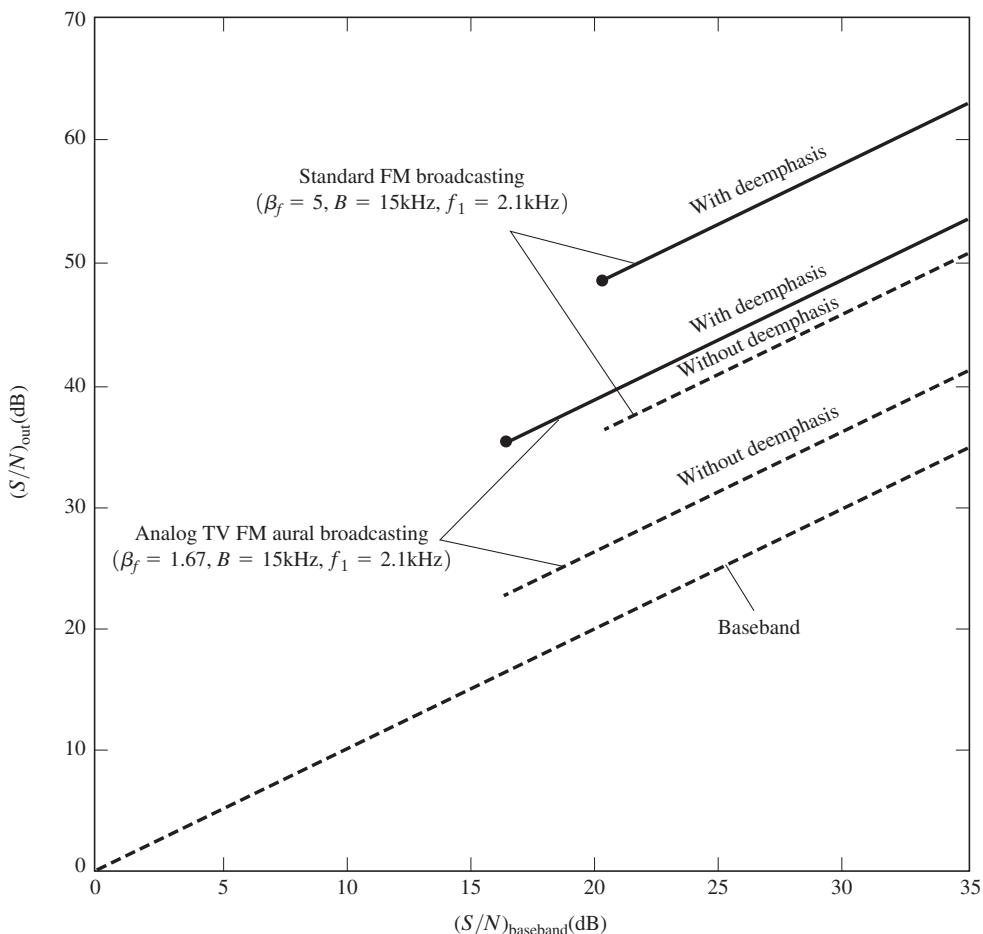


Figure 7–26 Noise performance of standard FM systems for sinusoidal modulation.

7-9 COMPARISON OF ANALOG SIGNALING SYSTEMS

Table 7-2 compares the analog systems that were analyzed in the previous sections. It is seen that the nonlinear modulation systems provide significant improvement in the noise performance, *provided* that the input signal is above the threshold. Of course, the improvement in the noise performance is obtained at the expense of having to use a wider transmission bandwidth. If the input SNR is very low, the linear systems outperform the nonlinear systems. SSB is best in terms of small bandwidth, and it has one of the best noise characteristics at low input SNR.

The selection of a particular system depends on the transmission bandwidth that is allowed and the available receiver input SNR. A comparison of the noise performance of these systems is given in Fig. 7-27, with $V_p = 1$ and $\overline{m^2} = \frac{1}{2}$. For the nonlinear systems a bandwidth spreading ratio of $B_T/B = 12$ is chosen for system comparisons. This corresponds to a $\beta_f = 5$ for the FM systems cited in the figure and corresponds to commercial FM broadcasting.

Note that, except for the “wasted” carrier power in AM, all of the linear modulation methods have the same SNR performance as that for the baseband system. (SSB has the same performance as DSB, because the coherence of the two sidebands in DSB compensates for the half noise power in SSB due to bandwidth reduction.) These comparisons are made on the basis of signals with equal *average* powers. If comparisons are made on equal *peak* powers (i.e., equal peak values for the signals), then SSB has a $(S/N)_{\text{out}}$ that is 3 dB better than DSB and 9 dB better than AM with 100% modulation (as demonstrated by Prob. 7-34). Of course, when operating above the threshold, all of the nonlinear modulation systems have better SNR performance than linear modulation systems, because the nonlinear systems have larger transmission bandwidths.

Ideal System Performance

What is the best noise performance that is theoretically possible? How can wide transmission bandwidth be used to gain improved noise performance? The answer is given by Shannon’s channel capacity theorem. The *ideal system* is defined as one that does not lose channel capacity in the detection process. Thus,

$$C_{\text{in}} = C_{\text{out}} \quad (7-142)$$

where C_{in} is the bandpass channel capacity and C_{out} is the channel capacity after detection. Using Eq. (1-10) in Eq. (7-142), we have

$$B_T \log_2[1 + (S/N)_{\text{in}}] = B \log_2[1 + (S/N)_{\text{out}}] \quad (7-143)$$

where B_T is the transmission bandwidth of the bandpass signal at the receiver input and B is the bandwidth of the baseband signal at the receiver output. Solving for $(S/N)_{\text{out}}$, we get

$$\left(\frac{S}{N}\right)_{\text{out}} = \left[1 + \left(\frac{S}{N}\right)_{\text{in}}\right]^{B_T/B} - 1 \quad (7-144)$$

TABLE 7–2 COMPARISON OF ANALOG SIGNALING TECHNIQUES^a

Type	Linearity	Transmission Bandwidth Required ^b	$\frac{(S/N)_{\text{out}}}{(S/N)_{\text{baseband}}}$		Comments
Baseband	L	B	1	(7–84)	No modulation
AM	L^c	$2B$	$\frac{\overline{m}^2}{1 + \overline{m}^2}$	(7–90)	Valid for all $(S/N)_{\text{in}}$ with coherent detection; valid above the threshold for envelope detection and $ m(t) \leq 1$
DSB-SC	L	$2B$	1	(7–98)	Coherent detection required
SSB	L	B	1	(7–105)	Coherent detection required; performance identical to baseband system
PM	NL	$2(\beta_p + 1)B$	$\beta_p^2 \left(\frac{m}{V_p} \right)^2$	(7–120)	Coherent detection required; valid for $(S/N)_{\text{in}}$ above the threshold
FM	NL	$2(\beta_f + 1)B$	$3\beta_f^2 \left(\frac{m}{V_p} \right)^2$	(7–130)	Valid for $(S/N)_{\text{in}}$ above the threshold
FM with deemphasis	NL	$2(\beta_f + 1)B$	$\beta_f^2 \left(\frac{B}{f_1} \right)^2 \left(\frac{m}{V_p} \right)^2$	(7–140)	Valid for $(S/N)_{\text{in}}$ above the threshold
PCM	NL	d	$M^2 / (S/N)_{\text{baseband}}$	(7–82)	Valid for $(S/N)_{\text{in}}$ above the threshold (i.e., $P_e \rightarrow 0$)

^a B , absolute bandwidth of the modulating signal; f_1 , 3-dB bandwidth of the deemphasis signal; L, linear; $m = m(t)$ is the modulating signal; $M = 2^n$, number of quantizing steps where n is the number of bits in the PCM word; NL, nonlinear; V_p , peak value of $m(t)$; β_p , PM index; β_f , FM index.

^b Typical bandwidth specifications by ITU are larger than these minima [Jordan, 1985].

^c In the strict sense, AM signaling is not linear because of the carrier term. (See Table 4–1.)

^d The bandwidth depends on the type of digital system used (e.g., OOK and FSK).

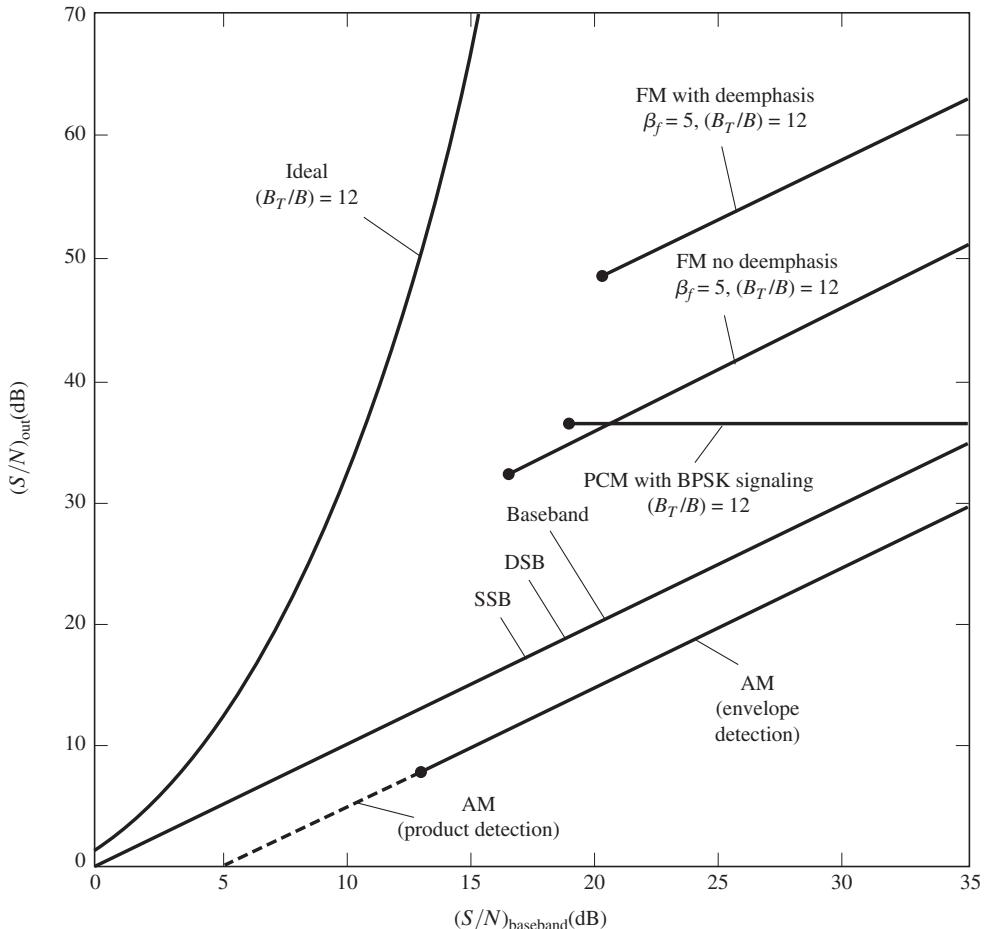


Figure 7-27 Comparison of the noise performance of analog systems.

But

$$\left(\frac{S}{N}\right)_{\text{in}} = \frac{P_s}{N_0 B_T} = \left(\frac{P_s}{N_0 B}\right) \left(\frac{B}{B_T}\right) = \left(\frac{B}{B_T}\right) \left(\frac{S}{N}\right)_{\text{baseband}} \quad (7-145)$$

where Eq. (7-84) was used. Thus, Eq. (7-144) becomes

$$\left(\frac{S}{N}\right)_{\text{out}} = \left[1 + \left(\frac{B}{B_T}\right) \left(\frac{S}{N}\right)_{\text{baseband}} \right]^{B_T/B} - 1 \quad (7-146)$$

Equation (7-146), which describes the ideal system performance, is plotted in Fig. 7-27 for the case of $B_T / B = 12$. As expected, none of the practical signaling systems equals the performance of the ideal system. However, some of the nonlinear systems (near threshold) approach the performance of the ideal system.

7-10 SUMMARY

The performance of digital systems has already been summarized in Sec. 7-6, and the performance of analog systems has been summarized in Sec. 7-9. The reader is invited to review these sections for a summary of this chapter. However, to condense these sections, we will simply state that there is no “best system” that provides a universal solution. The solution depends on the noise performance required, the transmission bandwidth available, and the state of the art in electronics that might favor the use of one type of communication system over another. In addition, the performance has been evaluated for the case of an additive white Gaussian noise channel. For other types of noise distributions or for multiplicative noise, the results would be different.

7-11 STUDY-AID EXAMPLES



SA7-1 BER for a Brickwall LPF Receiver Referring to Section 7-2 and parts (a) and (b) of Fig. 7-4, let a unipolar signal plus white Gaussian noise be the input to a receiver that uses a low-pass filter (LPF). Using the assumptions leading up to Eq. (7-24a), it is shown that the BER for the data out of a receiver that uses an LPF (not the optimum matched filter) is approximately

$$P_e = Q\left(\sqrt{\frac{A^2}{4N_0B}}\right), \text{ where } A \text{ is the peak value of the input unipolar signal, } N_0/2 \text{ is the PSD of the}$$

noise, and B is the equivalent bandwidth of the LPF. In obtaining this result, it is argued that the sample value for a filtered binary-1 signal, $s_{01}(t_0)$, is approximately A , provided that the equivalent bandwidth of the LPF is $B > 2/T$, where T is the width of the transmitted rectangular pulse when a binary-1 is sent. $R = 1/T$ is the data rate. If the receiver uses an ideal LPF (i.e., a brickwall LPF) with

$$H(f) = \Pi\left(\frac{f}{2B}\right) \quad (7-147)$$

show that the approximation $s_{01}(t_0) \approx A$ is valid for $B \geq 2/T$.

Solution The MATLAB solution is shown by the plots in Fig. 7-28. Fig. 7-28a shows the unfiltered rectangular pulse of amplitude $A = 1$ and width $T = 1$. Figs. 7-28b, 7-28c, and 7-28d show the filtered pulse when the bandwidth of the brickwall LPF is $B = 1/T$, $B = 2/T$, or $B = 3/T$, respectively. For $B \geq 2/T$, it is seen that the sample value is approximately A , where $A = 1$, when the sample is taken near the middle of the bit interval. Also, note that there is negligible ISI provided that $B \geq 2/T$. Furthermore, as shown in Fig. 7-28b for $B = 1/T$, it is seen that $s_{01}(t_0) \approx 1.2 \cdot 1 = 1.2A$. Consequently, it is tempting to use $s_{01}(t_0) \approx 1.2A$ (which will give a lower BER) in the formula for the BER and specify the filter equivalent bandwidth to be exactly $B = 1/T$. However, if this is done, the BER formula will not be correct for the cases when $B > 1/T$. In addition (as shown in SA7-2), if a RC LPF is used (instead of a brickwall LPF, which is impractical to build), we do not get $s_{01}(t_0) = 1.2A$ for $B = 1/T$. That is, if $s_{01}(t_0) = 1.2A$ is used to obtain the BER formula, the formula would not be valid for the RC LPF. Consequently, Eq. (7-24a), which assumes $s_{01}(t_0) \approx A$ for $B \geq 2/T$, is approximately correct for all types of practical LPFs that might be used. Furthermore, if $s_{01}(t_0)$ is not equal to A for a particular filter, then just replace A in (7-24a) by the correct sample value for that filter, and the exact (i.e., not an approximate) result will be obtained.

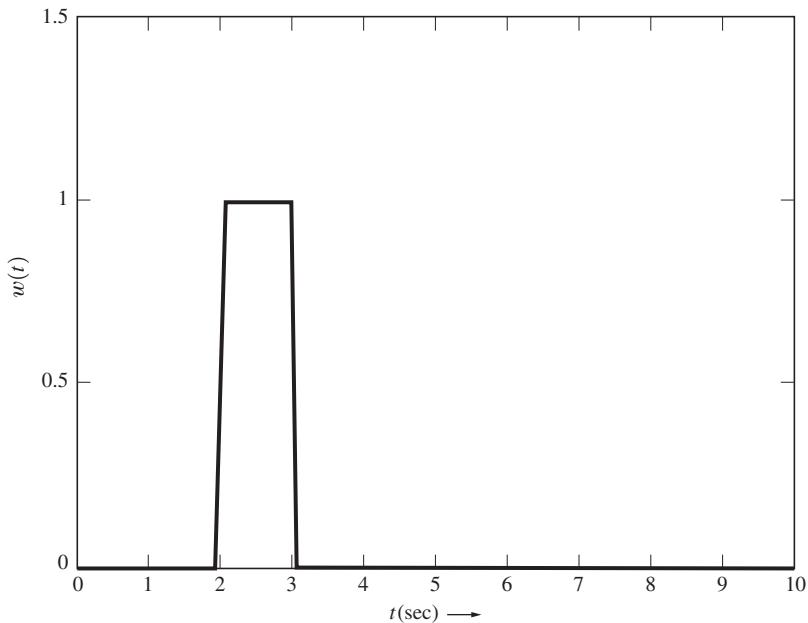
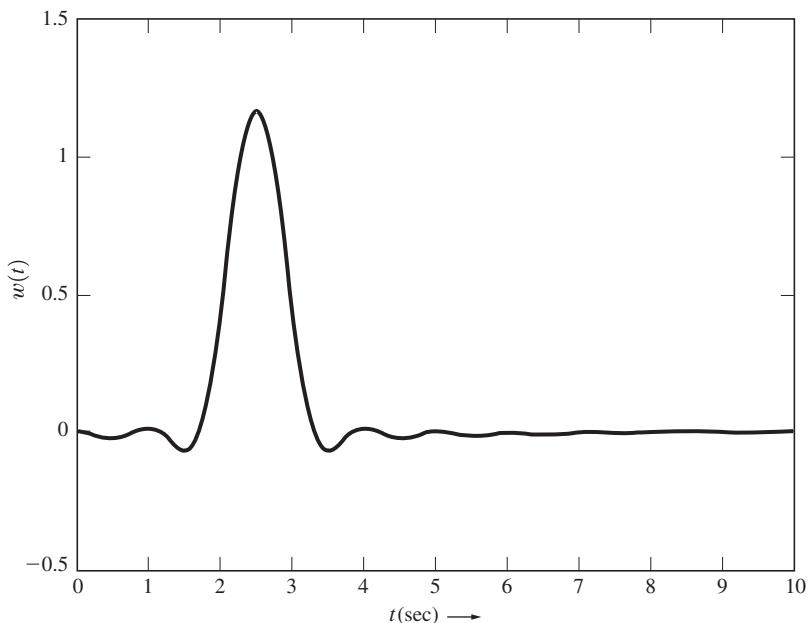
(a) Unfiltered Pulse with Amplitude $A=1$ and Pulse Width $T=1$ (b) Filtered Pulse with Equivalent Bandwidth $B=1/T=1$ Hz

Figure 7-28 Solution for SA7-1 showing the effect of brickwall low-pass filtering. (See SA7_1.m.)



(c) Filtered Pulse with Equivalent Bandwidth $B=2 / T=2$ Hz(d) Filtered Pulse with Equivalent Bandwidth $B = 3 / T = 3$ Hz

Figure 7-28 (continued)





(a) Unfiltered Pulse with Amplitude $A = 1$ and Pulse Width $T = 1$ (b) Filtered Pulse with Equivalent Bandwidth $B = 1/T = 1$ Hz

Figure 7-29 Solution for SA7-2 showing the effect of RC low-pass filtering.
(See SA7_2.m.)

(c) Filtered Pulse with Equivalent Bandwidth $B = 2/T = 2$ Hz(d) Filtered Pulse with Equivalent Bandwidth $B = 3/T = 3$ Hz**Figure 7-29** (continued)

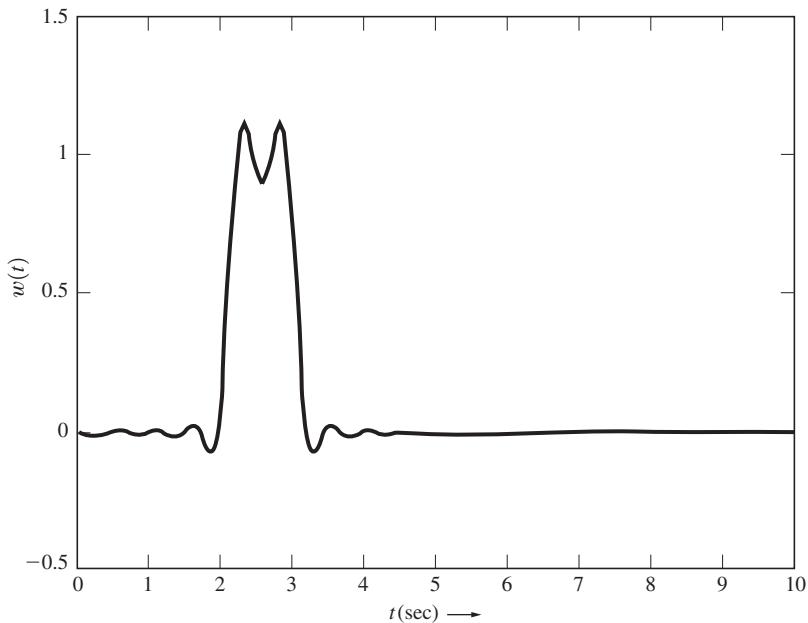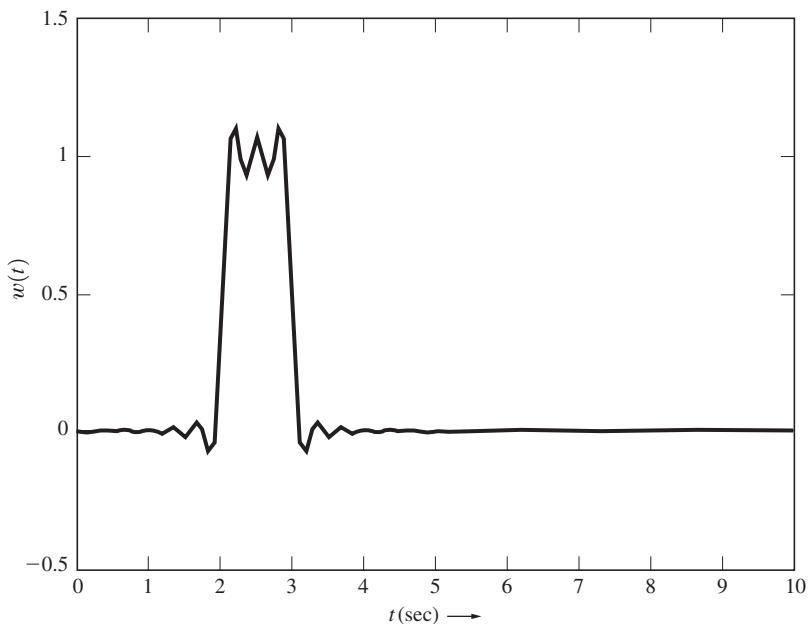

SA7-2 BER for an RC LPF Receiver Rework SA7-1 for the case when the LPF is a RC filter with
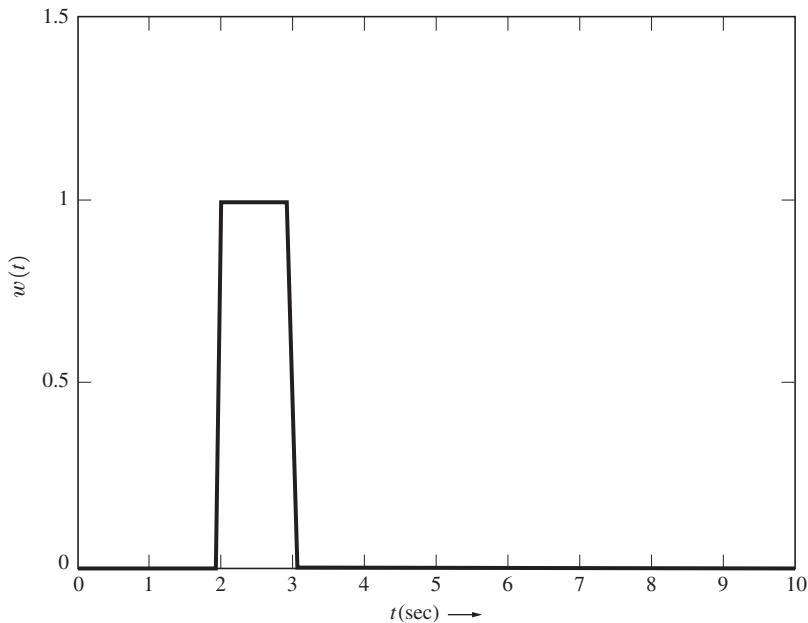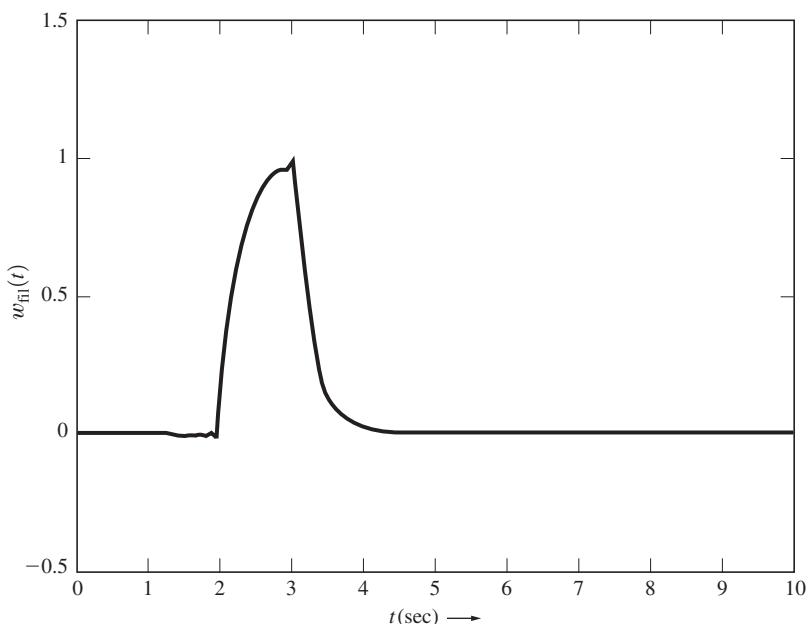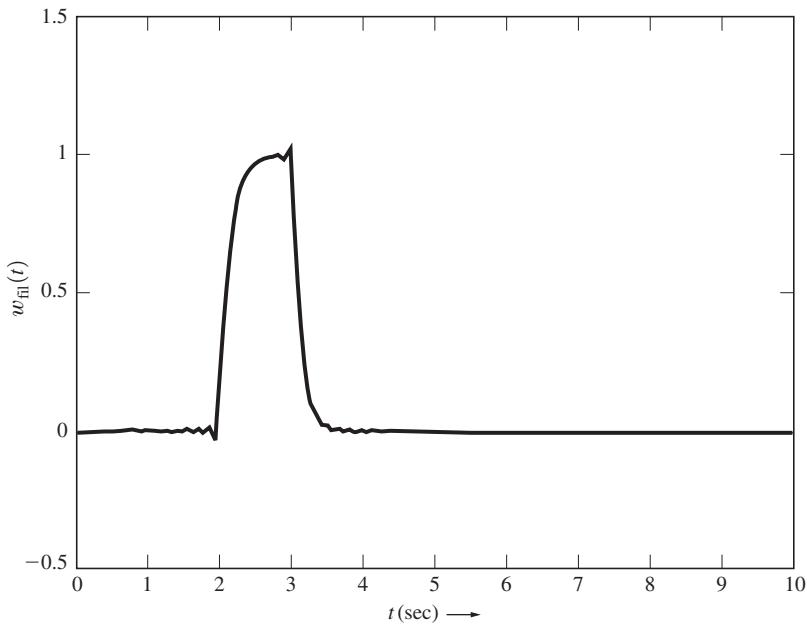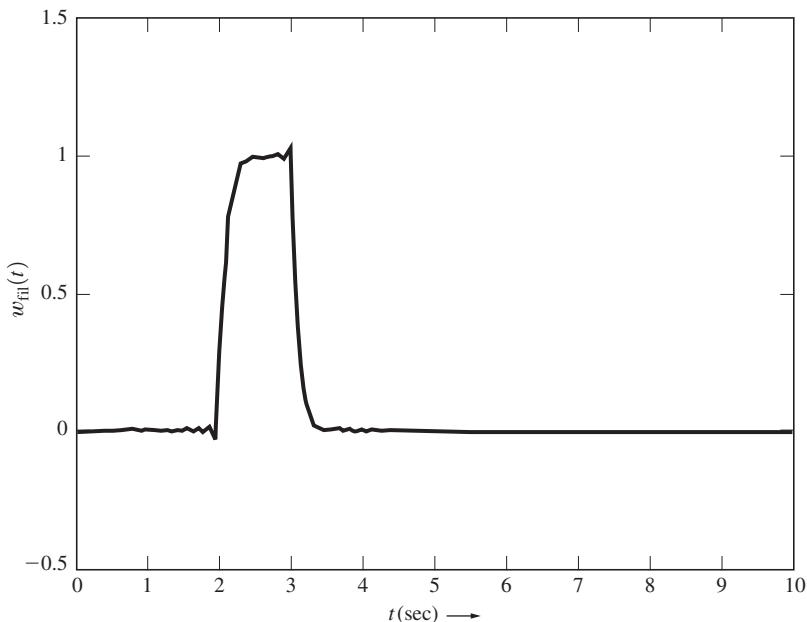
$$H(f) = \frac{1}{1 + j\left(\frac{f}{B_{3dB}}\right)} \quad (7-148)$$

where $B_{3dB} = 1/(2\pi RC)$. Note that, using Eq. (6-104), we can see that the equivalent bandwidth of the RC LPF is $B = (\pi/2) B_{3dB}$.

Solution The MATLAB solution is shown by the plots in Fig. 7-29. Fig. 7-29a shows the unfiltered rectangular pulse of amplitude $A = 1$ and width $T = 1$. Figs. 7-29b, 7-29c, and 7-29d show the filtered pulse when the equivalent bandwidth of the RC LPF is $B = 1/T$, $B = 2/T$, or $B = 3/T$, respectively. For $B = 1/T$, $s_{01}(t_0) = 1 = A$ only if the sampling time, t_0 , can be set near the end of the pulse precisely at the point where the filtered pulse is a maximum. This requires the use of an accurate bit synchronizer. For $B \geq 2/T$, it is seen that $s_{01}(t_0) = 1 = A$ and that the sampling time, t_0 , is not too critical because the filtered pulse is flat (with a value of A) over a significant portion of the bit (pulse) interval. Also, the ISI is negligible when $B \geq 2/T$; that is, the solution to homework Problem 7-9d demonstrates that the worst case signal to ISI ratio is about 70 dB. Consequently, Eq. (7-24a), which assumes $s_{01}(t_0) \approx A$ is approximately correct for $B \geq 2/T$.



SA7-3 Comparison of BER for RC and MF Receivers Compare the performance of a digital receiver that uses a RC LPF with the performance of a receiver that uses a matched filter (MF). Referring to Fig. 7-4a, let the input to the receiver be a unipolar signal plus white Gaussian noise. Assume that the unipolar signal has a data rate of $R = 9600$ bits/s and a peak value of $A = 5$. The noise has a PSD of $\mathcal{P}_n(f) = 3 \times 10^{-5}$.

- (a) If the receiver filter is a RC LPF with an equivalent bandwidth of $B = 2/T = 2R$, evaluate the SNR at the RC filter input where the bandwidth of the noise is taken to be the equivalent bandwidth of the RC LPF. Also, evaluate the BER for the data at the receiver output.
- (b) Repeat (a) for the case of $B = 1/T = R$.
- (c) If the receiver filter is a MF, evaluate the SNR at the MF input where the bandwidth of the noise is the equivalent bandwidth of the MF. Also, evaluate the BER for the data at the receiver output.
- (d) Compare the BER performance of the receiver that uses the RC LPF with the performance of the MF receiver.

Solution The average energy per bit for the signal at the receiver input is $E_b = (A^2/2)T = A^2/(2R)$. $\mathcal{P}_n(f) = N_0/2 = 3 \times 10^{-5}$ so $N_0 = 6 \times 10^{-5}$. Thus,

$$\left(\frac{E_b}{N_0}\right)_{\text{dB}} = 10 \log \left(\frac{A^2}{2N_0R} \right) = 10 \log \left(\frac{(5)^2}{2(6 \times 10^{-5})(9600)} \right) = 13.4 \text{ dB} \quad (7-149)$$

- (a) For a receiver that uses a RC LPF with $B = 2/T = 2R$, the noise power in the bandwidth B is $P_n = (N_0/2)(2B)$. The RMS signal or noise voltage is related to its average power

by $V_{\text{RMS}}^2 = v^2(t) = P$. Because the average input signal power is $P_s = A^2/2$, the RMS signal voltage at the receiver input is

$$V_s = \sqrt{A^2/2} = A/\sqrt{2} = 5/\sqrt{2} = 3.54 \text{ V RMS signal}$$

The RMS noise voltage (measured in a bandwidth of $2R$) at the receiver input is

$$V_n = \sqrt{\frac{N_0}{2}(2B)} = \sqrt{2N_0R} = \sqrt{2(6 \times 10^{-5})(9600)} = 1.07 \text{ V RMS noise}$$

Thus, the input SNR is

$$\left(\frac{S}{N}\right)_{\text{dB}} = 20 \log\left(\frac{V_s}{V_n}\right) = 20 \log\left(\frac{3.54}{1.07}\right) = 10.4 \text{ dB}$$

Also, the SNR can be evaluated by using

$$\left(\frac{S}{N}\right)_{\text{dB}} = 10 \log\left(\frac{P_s}{P_n}\right) = 10 \log\left(\frac{A^2}{2N_0B}\right) \quad (7-150)$$

which, for $B = 2/T = 2R$, becomes

$$\left(\frac{S}{N}\right)_{\text{dB}} = 10 \log\left(\frac{A^2}{4N_0R}\right) = 10.4 \text{ dB}$$

The BER is obtained by using Eq. (7-24a) for the case of a RC LPF, where $s_{01}(t_0) \approx A$ and $B = 2/T = 2R$. So, we get

$$P_e = Q\left(\sqrt{\frac{A^2}{8N_0R}}\right) = Q\left(\sqrt{\frac{(5)^2}{8(6 \times 10^{-5})(9600)}}\right) = 9.9 \times 10^{-3}$$

- (b) For a receiver that uses a RC LPF with $B = 1/T = R$, the RMS noise voltage (measured in a bandwidth of R) at the receiver input is

$$V_n = \sqrt{\frac{N_0}{2}(2B)} = \sqrt{N_0R} = \sqrt{(6 \times 10^{-5})(9600)} = 0.76 \text{ V RMS noise}$$

Thus, the input SNR is

$$\left(\frac{S}{N}\right)_{\text{dB}} = 20 \log\left(\frac{V_s}{V_n}\right) = 20 \log\left(\frac{3.54}{0.76}\right) = 13.4 \text{ dB}$$

Also, using Eq. (7-150) with $B = R$, we get

$$\left(\frac{S}{N}\right)_{\text{dB}} = 10 \log\left(\frac{A^2}{2N_0R}\right) = 13.4 \text{ dB}$$

The BER is obtained by using Eq. (7-24a) with $B = 1/T = R$. So, we get

$$P_e = Q\left(\sqrt{\frac{A^2}{4N_0R}}\right) = Q\left(\sqrt{\frac{(5)^2}{4(6 \times 10^{-5})(9600)}}\right) = 4.9 \times 10^{-4}$$

- (c) To obtain the SNR for the MF receiver, we need to first evaluate the equivalent bandwidth of the MF. Using Eq. (6-155), we see that the transfer function for the MF that is matched to the rectangular pulse $s(t) = 5\pi(t/T)$ is

$$H(f) = K \frac{S^*(f)}{\mathcal{P}_n(f)} e^{-j\omega t_0} = CT \left(\frac{\sin \pi T f}{\pi T f}\right) e^{-j\omega t_0}$$

where $C = 5K/(N_0/2)$. From Eq. (2-192), the equivalent bandwidth of the MF is

$$B = \frac{1}{|H(0)|^2} \int_{-\infty}^{\infty} |H(f)|^2 df = \int_0^{\infty} \left(\frac{\sin \pi T f}{\pi T f}\right)^2 df$$

To evaluate this integral, make a change in variable. Let $x = \pi T f$, so that with the aid of Appendix A, we get

$$B = \frac{1}{\pi T} \int_0^{\infty} \left(\frac{\sin x}{x}\right)^2 dx = \left(\frac{1}{\pi T}\right) \left(\frac{\pi}{2}\right) = \frac{1}{2T} = \frac{1}{2}R \quad (7-151)$$

Thus, the RMS noise voltage (measured in a bandwidth of $B = R/2$) at the receiver input is

$$V_n = \sqrt{\frac{N_0}{2}(2B)} = \sqrt{N_0 R/2} = \sqrt{6 \times 10^{-5}(9600)/2} = 0.54 \text{ V RMS noise}$$

As previously obtained, the RMS signal voltage is $V_s = 3.54 \text{ V}$. So, the input SNR is

$$\left(\frac{S}{N}\right)_{\text{dB}} = 20 \log\left(\frac{V_s}{V_n}\right) = 20 \log\left(\frac{3.54}{0.54}\right) = 16.4 \text{ dB}$$

Also, using Eq. (7-150) with $B = R/2$, we get

$$\left(\frac{S}{N}\right)_{\text{dB}} = 10 \log\left(\frac{A_2}{N_0 R}\right) = 16.4 \text{ dB}$$

The BER is obtained by using Eq. (7-24b):

$$\begin{aligned} P_e &= Q\left(\sqrt{\frac{E_b}{N_0}}\right) = Q\left(\sqrt{\frac{A^2 T}{2N_0}}\right) = Q\left(\sqrt{\frac{A^2}{2N_0 R}}\right) \\ &= Q\left(\sqrt{\frac{(5)^2}{2(6 \times 10^{-5})(9600)}}\right) = 1.6 \times 10^{-6} \end{aligned}$$

This result may be verified by using Fig. 7-14 for the case of unipolar signaling with $(E_b/N_0)_{\text{dB}} = 13.4 \text{ dB}$.

- (d) As discussed in the solution for SA7-2, if an inexpensive RC LPF is used with $B = 2R$, then an inexpensive bit synchronizer (with imprecise sampling times) is adequate for use in the receiver. As found in (a), this gives a BER of 9.9×10^{-3} .

If better performance (i.e., a lower BER) is desired, the bandwidth of the LPF can be reduced to $B = R$, and a precise (more expensive) bit synchronizer is required. This lowers the BER to 4.9×10^{-4} , as found in part (b).

If even better performance is desired, an MF (more expensive than an LPF) can be used. This is implemented by using an integrate and dump filter as previously shown in Fig. 6-17. This MF requires a bit synchronizer to provide the clocking signals that reset the integrator and dump the sampler. This MF receiver gives the optimum (lowest BER) performance. In this case, the BER is reduced to 1.6×10^{-6} , as found in part (c). However, it is realized that in some applications, such as some fiber-optic systems, the noise is negligible. In such a case, the simple LPF of part (a) with $B = 2/T = 2R$ is adequate because the BER will be approach zero.



SA7-4 Output S/N Improvement for FM with Preemphasis In FM signaling systems, preemphasis of the modulation at the transmitter input and deemphasis at the receiver output is often used to improve the output SNR. For $75 \mu\text{s}$ emphasis, the 3-dB corner frequency of the receiver deemphasis LPF is $f_1 = 1/(2\pi 75\mu\text{s}) = 2.12 \text{ kHz}$. The audio bandwidth is $B = 15 \text{ kHz}$. Derive a formula for the improvement in dB, I_{dB} , for the SNR of a FM system with preemphasis-deemphasis when compared with the SNR for a FM system without preemphasis-deemphasis. Compute I_{dB} for $f_1 = 2.12 \text{ kHz}$ and $B = 15 \text{ kHz}$.

Solution Refer to Eqs. (7-121)–(7-127) for the development of the $(S/N)_{\text{out}}$ equation for FM with no deemphasis and to Eqs. (7-135)–(7-138) for the development of the $(S/N)_{\text{out}}$ equation for FM with deemphasis. Then,

$$I = \frac{(S/N)_{\text{with deemphasis}}}{(S/N)_{\text{no deemphasis}}} = \frac{\left(\frac{\overline{s_0^2}}{\overline{n_0^2}}\right)_{\text{with deemphasis}}}{\left(\frac{\overline{s_0^2}}{\overline{n_0^2}}\right)_{\text{no deemphasis}}} \quad (7-152)$$

From Sec. 5-6 and Fig. 5-15, it is seen that the inclusion of two filters—a deemphasis filter at the receiver, $H_d(f)$, and a preemphasis filter at the transmitter, $H_p(f)$ —has no overall effect on the frequency response (and power) of the output audio signal, $s_0(t)$, because $H_p(f) H_d(f) = 1$ over the audio bandwidth, B , where $B < f_2$. Thus, $(\overline{s_0^2})_{\text{with deemphasis}} = (\overline{s_0^2})_{\text{no deemphasis}}$, and Eq. (7-152) reduces to

$$I = \frac{(\overline{n_0^2})_{\text{no deemphasis}}}{(\overline{n_0^2})_{\text{with deemphasis}}} \quad (7-153)$$

The output noise is different for the receiver with deemphasis (compared with a receiver without deemphasis) because the deemphasis filter attenuates the noise at the higher audio frequencies. (The transmitter preemphasis filter has no effect on the received noise.) Using Eq. (7-126) for $(\overline{n_0^2})_{\text{no deemphasis}}$ and Eq. (7-136) for $(\overline{n_0^2})_{\text{with deemphasis}}$, we see that Eq. (7-153) becomes

$$I = \frac{\frac{2}{3} \left(\frac{K}{A_c}\right)^2 N_0 B^3}{2 \left(\frac{K}{A_c}\right)^2 N_0 f_1^3 \left[\frac{B}{f_1} - \tan^{-1} \left(\frac{B}{f_1} \right) \right]} \quad$$

or

$$I = \frac{B^3}{3f_1^3 \left[\frac{B}{f_1} - \tan^{-1} \left(\frac{B}{f_1} \right) \right]} \quad (7-154)$$

Because $I_{\text{dB}} = 10 \log (I)$, we get

$$I_{\text{dB}} = 30 \log \left(\frac{B}{f_1} \right) - 10 \log \left\{ 3 \left[\frac{B}{f_1} - \tan^{-1} \left(\frac{B}{f_1} \right) \right] \right\} \quad (7-155)$$

For $f_1 = 2.1$ kHz and $B = 15$ kHz, Eq. (7-155) gives

$$I_{\text{dB}} = 13.2 \text{ dB}$$

This checks with the value for I_{dB} that is obtained from Fig. 7-26.

PROBLEMS

- ★ 7-1** In a binary communication system the receiver test statistic, $r_0(t_0) = r_0$, consists of a polar signal plus noise. The polar signal has values $s_{01} = +A$ and $s_{02} = -A$. Assume that the noise has a *Laplacian distribution*, which is

$$f(n_0) = \frac{1}{\sqrt{2}\sigma_0} e^{-\sqrt{2}|n_0|/\sigma_0}$$

where σ_0 is the RMS value of the noise.

- (a) Find the probability of error P_e as a function of A/σ_0 for the case of equally likely signaling and V_T having the optimum value.
(b) Plot P_e as a function of A/σ_0 decibels. Compare this result with that obtained for Gaussian noise as given by Eq. (7-26a).

- 7-2** Using MATLAB, plot the PDF for a Laplacian distribution (see Prob. 7-1) where $\sigma_0 = 1$. Also, plot the PDF for a Gaussian distribution where the standard deviation is 1 and the mean is 0. Compare the two PDFs.

- 7-3** Using Eq. (7-8), show that the optimum threshold level for the case of antipodal signaling with additive white Gaussian noise is

$$V_T = \frac{\sigma_0^2}{2s_{01}} \ln \left[\frac{P(s_2 \text{ sent})}{P(s_1 \text{ sent})} \right]$$

Here the receiver filter has an output with a variance of σ_0^2 . s_{01} is the value of the sampled binary 1 signal at the filter output. $P(s_1 \text{ sent})$ and $P(s_2 \text{ sent})$ are the probabilities of transmitting a binary 1 and a binary 0, respectively.

- 7-4** A baseband digital communication system uses polar signaling with matched filter in the receiver. The probability of sending a binary 1 is p , and the probability of sending a binary zero is $1-p$.

- (a) For $E_b/N_0 = 10$ dB, plot P_e as a function of p using a log scale.
(b) Referring to Eq. (1-8), plot the entropy, H , as a function of p . Compare the shapes of these two curves.



- 7-5** A *whole* binary communication system can be modeled as an *information channel*, as shown in Fig. P7-5. Find equations for the four transition probabilities $P(\tilde{m}|m)$, where both \tilde{m} and m can be binary 1's or binary 0's. Assume that the test statistic is a linear function of the receiver input and that additive white Gaussian noise appears at the receiver input. [Hint: Look at Eq. (7-15).]

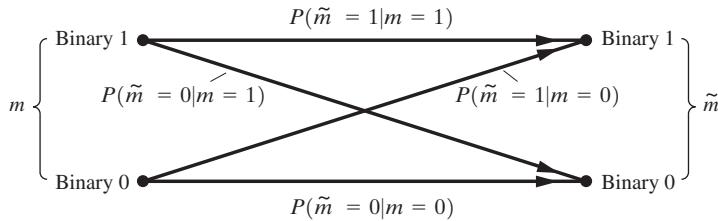


Figure P7-5

-  **★ 7-6** A baseband digital communication system uses unipolar signaling (rectangular pulse shape) with matched-filter detection. The data rate is $R = 9,600$ bits/sec.

- (a) Find an expression for bit error rate (BER), P_e , as a function of $(S/N)_{\text{in}}$. $(S/N)_{\text{in}}$ is the signal-to-noise power ratio at the receiver input where the noise is measured in a bandwidth corresponding to the equivalent bandwidth of the matched filter. [Hint: First find an expression of E_b/N_0 in terms of $(S/N)_{\text{in}}$]
- (b) Plot P_e vs. $(S/N)_{\text{in}}$ in dB units on a log scale over a range of $(S/N)_{\text{in}}$ from 0 to 15 dB.

- 7-7** Rework Prob. 7-6 for the case of polar signaling.

-  **7-8** Examine how the performance of a baseband digital communication system is affected by the receiver filter. Equation (7-26a) describes the BER when a low-pass filter is used and the bandwidth of the filter is large enough that the signal level at the filter output is $s_{01} = +A$ or $s_{02} = -A$. Instead, suppose that a RC low-pass filter with a restricted bandwidth is used where $T = 1/f_0 = 2\pi RC$. T is the duration (pulse width) of one bit, and f_0 is the 3-dB bandwidth of the RC low-pass filter as described by Eq. (2-147). Assume that the initial conditions of the filter are reset to zero at the beginning of each bit interval.

- (a) Derive an expression for P_e as a function of E_b/N_0 .
- (b) On a log scale, plot the BER obtained in part (a) for E_b/N_0 over a range of 0 to 15 dB.
- (c) Compare this result with that for a matched-filter receiver (as shown in Fig. 7-5).

-  **★ 7-9** Consider a baseband digital communication system that uses polar signaling (rectangular pulse shape) where the receiver is shown in Fig. 7-4a. Assume that the receiver uses a second-order Butterworth filter with a 3-dB bandwidth of f_0 . The filter impulse response and transfer function are

$$h(t) = \left[\sqrt{2} \omega_0 e^{-(\omega_0/\sqrt{2})t} \sin\left(\frac{\omega_0}{\sqrt{2}} t\right) \right] u(t)$$

$$H(f) = \frac{1}{(jf/f_0)^2 + \sqrt{2}(jf/f_0) + 1}$$

where $\omega_0 = 2\pi f_0$. Let $f_0 = 1/T$, where T is the bit interval (i.e., pulse width), and assume that the initial conditions of the filter are reset to zero at the beginning of each bit interval.

- (a) Derive an expression for P_e as a function of E_b/N_0 .
- (b) On a log scale, plot the BER obtained in part (a) for E_b/N_0 over a range of 0 to 15 dB.
- (c) Compare this result with that for a matched-filter receiver (as shown in Fig. 7-5).

- 7-10** Consider a baseband unipolar communication system with equally likely signaling. Assume that the receiver uses a simple RC LPF with a time constant of $RC = \tau$ where $\tau = T$ and $1/T$ is the bit

rate. (By “simple,” it is meant that the initial conditions of the LPF are *not* reset to zero at the beginning of each bit interval.)

- (a) For signal alone at the receiver input, evaluate the approximate worst-case signal to ISI ratio (in decibels) out of the LPF at the sampling time $t = t_0 = nT$, where n is an integer.
 - (b) Evaluate the signal to ISI ratio (in decibels) as a function of the parameter K , where $t = t_0 = (n + K)T$ and $0 < K \leq 1$.
 - (c) What is the optimum sampling time to use to maximize the signal-to-ISI power ratio out of the LPF?
 - (d) Repeat part (a) for the case when the equivalent bandwidth of the RC LPF is $2/T$.
- 7-11** Examine a baseband polar communication system with equally likely signaling and no channel noise. Assume that the receiver uses a simple RC LPF with a time constant of $\tau = RC$. (By “simple,” it is meant that the initial conditions of the LPF are *not* reset to zero at the beginning of each bit interval.) Evaluate the worst-case approximate signal to ISI ratio (in decibels) out of the LPF at the sampling time $t = t_0 = nT$, where n is an integer. This approximate result will be valid for $T/\tau > \frac{1}{2}$. Plot this result as a function of T/τ for $\frac{1}{2} \leq T/\tau \leq 5$.
-  **★ 7-12** Consider a baseband unipolar system described in Prob. 7-10d. Assume that white Gaussian noise is present at the receiver input.
 - (a) Derive an expression for P_e as a function of E_b/N_0 for the case of sampling at the times $t = t_0 = nT$.
 - (b) Compare the BER obtained in part (a) with the BER characteristic that is obtained when a matched-filter receiver is used. Plot both of these BER characteristics as a function of $(E_b/N_0)_{\text{dB}}$ over the range 0 to 15 dB.

 **7-13** Rework Prob. 7-12 for the case of *polar* baseband signaling.

7-14 For bipolar signaling, the discussion leading up to Eq. (7-28) indicates that the optimum threshold at the receiver is $V_T = \frac{A}{2} + \frac{\sigma_0^2}{A} \ln 2$.

 - (a) Prove that this is the optimum threshold value.
 - (b) Show that $A/2$ approximates the optimum threshold if $P_e < 10^{-3}$.

★ 7-15 For unipolar baseband signaling as described by Eq. (7-23),

 - (a) Find the matched-filter frequency response and show how the filtering operation can be implemented by using an integrate-and-dump filter.
 - (b) Show that the equivalent bandwidth of the matched filter is $B_{\text{eq}} = 1/(2T) = R/2$.

7-16 Equally likely polar signaling is used in a baseband communication system. Gaussian noise having a PSD of $N_0/2$ W/Hz plus a polar signal with a peak level of A volts is present at the receiver input. The receiver uses a matched-filter circuit having a voltage gain of 1,000.

 - (a) Find the expression for P_e as a function of A , N_0 , T , and V_T , where $R = 1/T$ is the bit rate and V_T is the threshold level.
 - (b) Plot P_e as a function of V_T for the case of $A = 8 \times 10^{-3}$ V, $N_0/2 = 4 \times 10^{-9}$ W/Hz, and $R = 1200$ bits/sec.

★ 7-17 Consider a baseband polar communication system with matched-filter detection. Assume that the channel noise is white and Gaussian with a PSD of $N_0/2$. The probability of sending a binary 1 is $P(1)$ and the probability of sending a binary 0 is $P(0)$. Find the expression for P_e as a function of the threshold level V_T when the signal level out of the matched filter is A , and the variance of the noise out of the matched filter is $\sigma^2 = N_0/(2T)$, where $R = 1/T$ is the bit rate.

7-18 Design a receiver for detecting the data on a bipolar RZ signal that has a peak value of $A = 5$ volts. In your design assume that an RC low-pass filter will be used and the data rate is 2,400 (bits/sec).

- (a) Draw a block diagram of your design and explain how it works.
 (b) Give the values for the design parameters R , C , and V_T .
 (c) Calculate the PSD level for the noise N_0 that is allowed if P_e is to be less than 10^{-6} .
- 7-19** A BER of 10^{-5} or less is desired for an OOK communication system where the bit rate is $R = 10$ Mb/s. The input to the receiver consists of the OOK signal plus white Gaussian noise.
 (a) Find the minimum transmission bandwidth required.
 (b) Find the minimum E_b/N_0 required at the receiver input for coherent matched-filter detection.
 (c) Rework part (b) for the case of noncoherent detection.
- 7-20** Rework Prob. 7-19 for the case when FSK signaling is used. Let $2\Delta F = f_2 - f_1 = 1.5R$.
-  **★ 7-21** In this chapter, the BER for a BPSK receiver was derived under the assumption that the coherent receiver reference (see Fig. 7-7) was exactly in phase with the received BPSK signal. Suppose that there is a phase error of θ_e between the reference signal and the incoming BPSK signal. Obtain new equations that give the P_e in terms of θ_e , as well as the other parameters. In particular,
 (a) Obtain a new equation that replaces Eq. (7-36).
 (b) Obtain a new equation that replaces Eq. (7-38).
 (c) Plot results from part (b) where the log plot of P_e is given as a function of θ_e over a range $-\pi < \theta_e < \pi$ for the case when $E_b/N_0 = 10$ dB.
- ★ 7-22** Digital data are transmitted over a communication system that uses nine repeaters plus a receiver, and BPSK signaling is used. The P_e for each of the regenerative repeaters (see Sec. 3-5) is 5×10^{-8} , assuming additive Gaussian noise.
 (a) Find the overall P_e for the system.
 (b) If each repeater is replaced by an ideal amplifier (no noise or distortion), what is the P_e of the overall system?
- ★ 7-23** Digital data are to be transmitted over a toll telephone system using BPSK. Regenerative repeaters are spaced 50 miles apart along the system. The total length of the system is 600 miles. The telephone lines between the repeater sites are equalized over a 300- to 2,700-Hz band and provide an E_b/N_0 (Gaussian noise) of 15 dB to the repeater input.
 (a) Find the largest bit rate R that can be accommodated with no ISI.
 (b) Find the overall P_e for the system. (Be sure to include the receiver at the end of the system.)
- 7-24** A BPSK signal is given by
- $$s(t) = A \sin [\omega_c t + \theta_c + (\pm 1)\beta_p], \quad 0 < t \leq T$$
- The binary data are represented by (± 1) , where $(+1)$ is used to transmit a binary 1 and (-1) is used to transmit a binary 0. β_p is the phase modulation index as defined by Eq. (5-47).
 (a) For $\beta_p = \pi/2$, show that this BPSK signal becomes the BPSK signal as described by Eq. (7-34).
 (b) For $0 < \beta_p < \pi/2$, show that a discrete carrier term is present in addition to the BPSK signal as described by Eq. (7-34).
- 7-25** Referring to the BPSK signal described in Prob. 7-24, find P_e as a function of the modulation index β_p , where $0 < \beta_p \leq \pi/2$. Find P_e as a function of A , β_p , N_0 , and B for the receiver that uses a narrowband filter.
- 7-26** Rework Prob. 7-25 and find P_e as a function of E_b , N_0 , and β_p for the receiver that uses a matched filter. (E_b is the average BPSK signal energy that is received during one bit.)
- 7-27** Referring to the BPSK signal described in Prob. 7-24, let $0 < \beta_p < \pi/2$.
 (a) Show a block diagram for the detection of the BPSK signal where a PLL is used to recover the coherent reference signal from the BPSK signal.

- (b)** Explain why Manchester-encoded data are often used when the receiver uses a PLL for carrier recovery, as in part (a). (*Hint:* Look at the spectrum of the Manchester-encoded PSK signal.)
- 7-28** In obtaining the P_e for FSK signaling with coherent reception, the energy in the difference signal E_d was needed, as shown in Eq. (7-46). For *orthogonal* FSK signaling the cross-product integral was found to be zero. Suppose that f_1, f_2 , and T are chosen so that E_d is maximized.
- Find the relationship as a function of f_1, f_2 , and T for maximum E_d .
 - Find the P_e as a function of E_b and N_0 for signaling with this FSK signal.
 - Sketch the P_e for this type of FSK signal and compare it with a sketch of the P_e for the orthogonal FSK signal that is given by Eq. (7-47).
- ★ 7-29** An FSK signal with $R = 110$ bits/sec is transmitted over an RF channel that has white Gaussian noise. The receiver uses a noncoherent detector and has a noise figure of 6 dB. The impedance of the antenna input of the receiver is 50ω . The signal level at the receiver input is $0.05 \mu\text{V}$, and the noise level is $N_0 = kT_0$, where $T_0 = 290$ K and k is Boltzmann's constant. (See Sec. 8-6.) Find the P_e for the digital signal at the output of the receiver.
- 7-30** Rework Prob. 7-29 for the case of DPSK signaling.
- 7-31** An analysis of the noise associated with the two channels of an FSK receiver precedes Eq. (7-44). In this analysis, it is stated that $n_1(t)$ and $n_2(t)$ are independent when they arise from a common white Gaussian noise process because $n_1(t)$ and $n_2(t)$ have nonoverlapping spectra. Prove that this statement is correct. [*Hint:* $n_1(t)$ and $n_2(t)$ can be modeled as the outputs of two linear filters that have nonoverlapping transfer functions and the same white noise process, $n(t)$, at their inputs.]
- 7-32** In most applications, communication systems are designed to have a BER of 10^{-5} or less. Find the minimum E_b/N_0 decibels required to achieve an error rate of 10^{-5} for the following types of signaling.
 - Polar baseband.
 - OOK.
 - BPSK.
 - FSK.
 - DPSK.
- ★ 7-33** Digital data are to be transmitted over a telephone line channel. Suppose that the telephone line is equalized over a 300- to 2,700-Hz band and that the signal-to-Gaussian-noise (power) ratio at the output (receive end) is 25 dB.
 - Of all the digital signaling techniques studied in this chapter, choose the one that will provide the largest bit rate for a P_e of 10^{-5} . What is the bit rate R for this system?
 - Compare this result with the bit rate R that is possible when an ideal digital signaling scheme is used, as given by the Shannon channel capacity stated by Eq. (1-10).
- ★ 7-34** An analog baseband signal has a uniform PDF and a bandwidth of 3500 Hz. This signal is sampled at an 8 samples/s rate, uniformly quantized, and encoded into a PCM signal having 8-bit words. This PCM signal is transmitted over a DPSK communication system that contains additive white Gaussian channel noise. The signal-to-noise ratio at the receiver input is 8 dB.
 - Find the P_e of the recovered PCM signal.
 - Find the peak signal/average noise ratio (decibels) out of the PCM system.
- 7-35** A spread spectrum (SS) signal is often used to combat narrowband interference and for communication security. The SS signal with direct sequence spreading is (see Sec. 5-13)

$$s(t) = A_c c(t)m(t) \cos(\omega_c t + \theta_c)$$

where θ_c is the start-up carrier phase, $m(t)$ is the polar binary data baseband modulation, and $c(t)$ is a polar baseband spreading waveform that usually consists of a pseudonoise (PN) code. The PN code is a binary sequence that is N bits long. The “bits” are called *chips*, since they do not contain data and since many chips are transmitted during the time that it takes to transmit 1 bit of the data [in $m(t)$]. The same N -bit code word is repeated over and over, but N is a large number, so the chip sequence in $c(t)$ looks like digital noise. The PN sequence may be generated by using a clocked r -stage shift register having feedback so that $N = 2^r - 1$. The autocorrelation of a long sequence is approximately

$$R_c(\tau) = \Lambda\left(\frac{\tau}{T_c}\right)$$

where T_c is the duration of one chip (the time it takes to send one chip of the PN code). $T_c \ll T_b$, where T_b is the duration of a data bit.

- (a) Find the PSD for the SS signal $s(t)$. [Hint: Assume that $m(t)$, $c(t)$, and θ_c are independent. In addition, note that the PSD of $m(t)$ can be approximated by a delta function, since the spectral width of $m(t)$ is very small when compared to that for the spreading waveform $c(t)$.]
- (b) Draw a block diagram for an optimum coherent receiver. Note that $c(t)m(t)$ is first coherently detected and then the data, $m(t)$, are recovered by using a correlation processor.
- (c) Find the expression for P_e .



- ★ 7-36 Examine the performance of an AM communication system where the receiver uses a product detector. For the case of a sine-wave modulating signal, plot the ratio of $[(S/N)_{\text{out}} / (S/N)_{\text{in}}]$ as a function of the percent modulation.
- ★ 7-37 An AM transmitter is modulated 40% by a sine-wave audio test tone. This AM signal is transmitted over an additive white Gaussian noise channel. Evaluate the noise performance of this system and determine by how many decibels this system is inferior to a DSB-SC system.
- 7-38 A phasing-type receiver for SSB signals is shown in Fig. P7-38. (This was the topic of Prob. 5-21.)
- (a) Show that this receiver is or is not a linear system.
 - (b) Derive the equation for SNR out of this receiver when the input is an SSB signal plus white noise with a PSD of $N_0/2$.

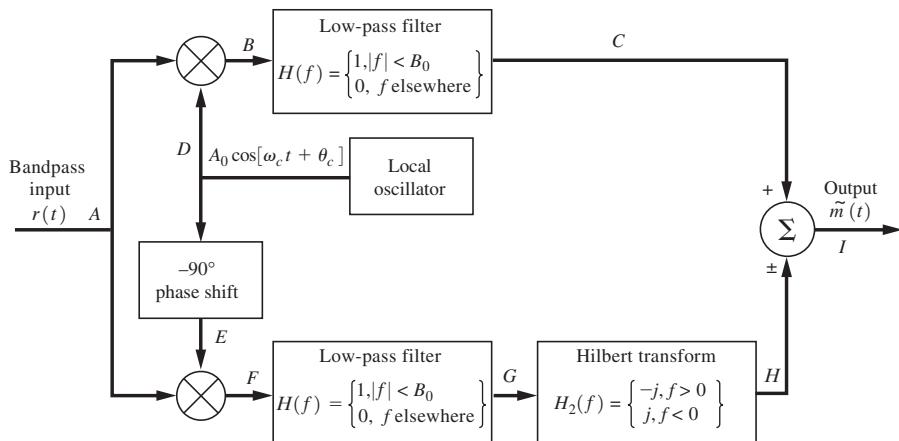


Figure P7-38

- 7-39** Referring to Fig. P7-38, suppose that the receiver consists only of the upper portion of the figure, so that point C is the output. Let the input be an SSB signal plus white noise with a PSD of $N_0/2$. Find $(S/N)_{\text{out}}$.
- 7-40** Consider the receiver shown in Fig. P7-40. Let the input be a DSB-SC signal plus white noise with a PSD of $N_0/2$. The mean value of the modulation is zero.
- For A_0 large, show that this receiver acts like a product detector.
 - Find the equation for $(S/N)_{\text{out}}$ as a function of A_c , m^2 , N_0 , A_0 , and B_T when A_0 is large.

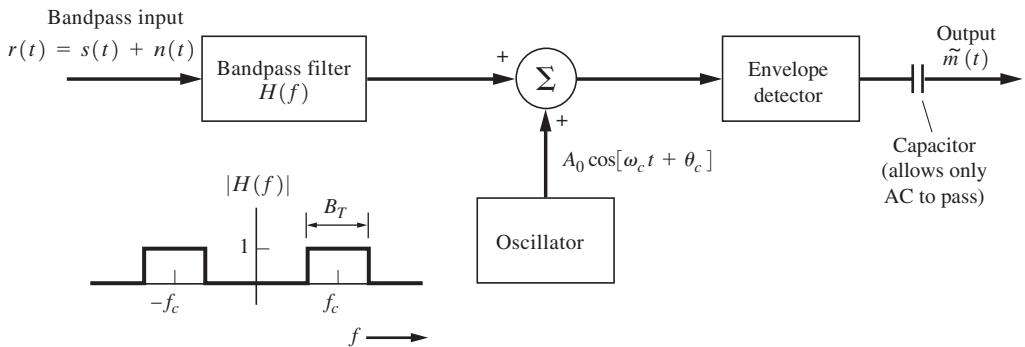


Figure P7-40

- 7-41** Compare the performance of AM, DSB-SC, and SSB systems when the modulating signal $m(t)$ is a Gaussian random process. Assume that the Gaussian modulation has a zero mean value and a peak value of $V_p = 1$, where $V_p \approx 4\sigma_m$. Compare the noise performance of these three systems by plotting $(S/N)_{\text{out}} / (S/N)_{\text{baseband}}$ for
- The AM system.
 - The DSB-SC system.
 - The SSB system.
- 7-42** If linear modulation systems are to be compared on an equal *peak* power basis (i.e., all have equal peak signal values), show that
- SSB has a $(S/N)_{\text{out}}$ that is 3 dB better than DSB.
 - SSB has a $(S/N)_{\text{out}}$ that is 9 dB better than AM.
- (Hint: See Prob. 5-11.)
- 
- 7-43** Using Eq. (7-132), plot the output SNR threshold characteristic of a discriminator for the parameters of a conventional broadcast FM system. ($\Delta F = 75$ kHz and $B = 15$ kHz.) Compare plots of the $(S/N)_{\text{out}}$ vs. $(S/N)_{\text{baseband}}$ for this system with those shown in Fig. 7-24.
- ★ 7-44** An FM receiver has an IF bandwidth of 25 kHz and a baseband bandwidth of 5 kHz. The noise figure of the receiver is 12 dB, and it uses a 75- μ sec deemphasis network. An FM signal plus white noise is present at the receiver input, where the PSD of the noise is $N_0/2 = kT/2$. $T = 290$ K. (See Sec. 8-6.) Find the minimum input signal level (in dBm) that will give a SNR of 35 dB at the output when sine-wave test modulation is used.
- 7-45** Referring to Table 5-4, note that a two-way FM mobile radio system uses the parameters $\beta_f = 1$ and $B = 5$ kHz.
- Find $(S/N)_{\text{out}}$ for the case of no deemphasis.
 - Find $(S/N)_{\text{out}}$ if deemphasis is used with $f_1 = 2.1$ kHz. It is realized that B is not much larger than f_1 in this application.

- (c) Plot $(S/N)_{\text{out}}$ vs. $(S/N)_{\text{baseband}}$ for this system, and compare the plot with the result for FM broadcasting as shown in Fig. 7–26.
- 7–46** Compare the performance of two FM systems that use different deemphasis characteristics. Assume that $\beta_f = 5$, $(m/V_p)^2 = \frac{1}{2}$, $B = 15$ kHz, and that an additive white Gaussian noise channel is used. Find $(S/N)_{\text{out}} / (S/N)_{\text{baseband}}$ for:
- 25- μ sec deemphasis.
 - 75- μ sec deemphasis.
- 7–47** A baseband signal $m(t)$ that has a Gaussian (amplitude) distribution frequency modulates a transmitter. Assume that the modulation has a zero-mean value and a peak value of $V_p = 4\sigma_m$. The FM signal is transmitted over an additive white Gaussian noise channel. Let $\beta_f = 3$ and $B = 15$ kHz. Find $(S/N)_{\text{out}} / (S/N)_{\text{baseband}}$ when
- No deemphasis is used.
 - 75- μ sec deemphasis is used.
- 7–48** In FM broadcasting, a preemphasis filter is used at the audio input of the transmitter, and a deemphasis filter is used at the receiver output to improve the output SNR. For 75- μ sec emphasis, the 3-dB bandwidth of the receiver deemphasis LPF is $f_1 = 2.1$ kHz. The audio bandwidth is $B = 15$ kHz. Define the improvement factor I as a function of B/f_1 as
- 
- $$I = \frac{(S/N)_{\text{out}} \text{ for system with preemphasis-deemphasis}}{(S/N)_{\text{out}} \text{ for system without preemphasis-deemphasis}}$$
- For $B = 15$ kHz, plot the decibel improvement that is realized as a function of the design parameter f_1 where 50 Hz $< f_1 < 15$ kHz.
- ★ 7–49** In FM broadcasting, preemphasis is used, and yet $\Delta F = 75$ kHz is defined as 100% modulation. Examine the incompatibility of these two standards. For example, assume that the amplitude of a 1-kHz audio test tone is adjusted to produce 100% modulation (i.e., $\Delta F = 75$ kHz).
- If the frequency is changed to 15 kHz, find the ΔF that would be obtained ($f_1 = 2.1$ kHz). What is the percent modulation?
 - Explain why this phenomenon does not cause too much difficulty when typical audio program material (modulation) is broadcast.
- 7–50** Stereo FM transmission was studied in Sec. 5–7. At the transmitter, the left-channel audio, $m_L(t)$, and the right-channel audio, $m_R(t)$, are each preemphasized by an $f_1 = 2.1$ -kHz network. These preemphasized audio signals are then converted into the composite baseband modulating signal $m_b(t)$, as shown in Fig. 5–17. At the receiver, the FM detector outputs the composite baseband signal that has been corrupted by noise. (Assume that the noise comes from a white Gaussian noise channel.) This corrupted composite baseband signal is demultiplexed into corrupted left- and right-channel audio signals, $\tilde{m}_L(t)$ and $\tilde{m}_R(t)$, each having been deemphasized by a 2.1-kHz filter. The noise on these outputs arises from the noise at the output of the FM detector that occurs in the 0- to 15-kHz and 23- to 53-kHz bands. The subcarrier frequency is 38 kHz. Assuming that the input SNR of the FM receiver is large, show that the stereo FM system is 22.2 dB more noisy than the corresponding monaural FM system.
- ★ 7–51** An FDM signal, $m_b(t)$, consists of five 4-kHz-wide channels denoted by C1, C2, ..., C5, as shown in Fig. P7–51. The FDM signal was obtained by modulating five audio signals (each with 4-kHz bandwidth) onto USSB (upper single-sideband) subcarriers. This FDM signal, $m_b(t)$,


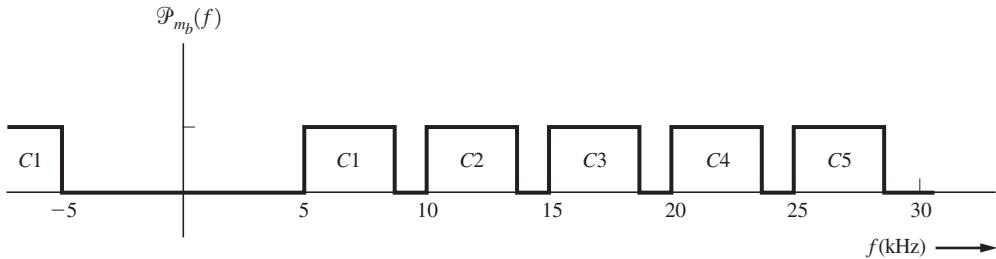


Figure P7-51

modulates a DSB-SC transmitter. The DSB-SC signal is transmitted over an additive white Gaussian noise channel. At the receiver the average power of the DSB-SC signal is P_s and the noise has a PSD of $N_0/2$.

- (a) Draw a block diagram for a receiving system with five outputs, one for each audio channel.
 - (b) Calculate the output SNR for each of the five audio channels.
- 7-52** Rework Prob. 7-51 for the case when the FDM signal is frequency modulated onto the main carrier. Assume that the RMS carrier deviation is denoted by ΔF_{rms} and that the five audio channels are independent. No deemphasis is used.
- 7-53** Refer to Fig. 7-27 and
- (a) Verify that the PCM curve is correct.
 - (b) Find the equation for the PCM curve for the case of QPSK signaling over the channel.
 - (c) Compare the performance of the PCM/QPSK system with that for PCM/BPSK and for the ideal case by sketching the $(S/N)_{\text{out}}$ characteristic.
- 7-54** In Sec. 7-9, the performance of an ideal analog system is discussed. Using MATLAB, plot the $(S/N)_{\text{out}}$ as a function of $(S/N)_{\text{baseband}}$ where both are expressed in dB units. Let $B_T/B = 12$.



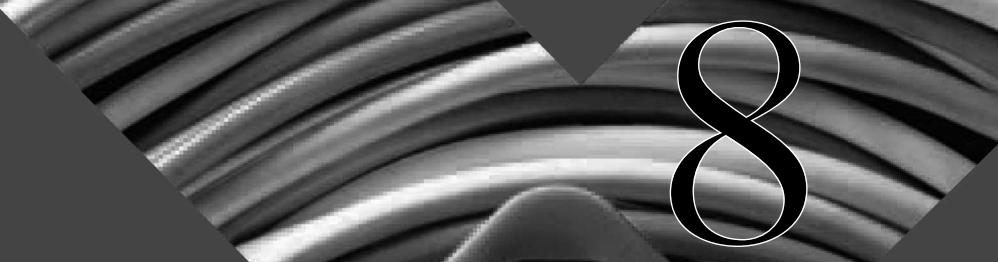

WIRE AND WIRELESS COMMUNICATION APPLICATIONS

CHAPTER OBJECTIVES

- Telephone systems, digital subscriber lines, DSL modems, and fiber-optic loops
- Satellite communication systems and satellite radio
- Link budget analysis and design
- Cellular and personal communication systems
- Digital and analog television
- Cable data modems
- Wireless data networks

8-1 THE EXPLOSIVE GROWTH OF TELECOMMUNICATIONS

The explosive growth of both wire and wireless telecommunications has been sparked by the need for personal communication of voice, video, and data and the availability of low-cost integrated circuits and microprocessors. There is a relentless push for higher speed data transmission over wire and wireless systems. This is caused not only by the growth of traditional voice, video, and data systems, but also by the convenience of personal and smart cellular phones, e-mail with file attachments, and the use of the internet.

The goal of this chapter is to examine the design of some practical communication systems. These systems are based on the communication principles that have been developed in previous chapters. Also, we see how modern designs are influenced by industry standards and how some sophisticated systems are the evolution of historical systems. This should be a “fun” chapter.

Results are presented for telephone systems, satellite systems, fiber-optic systems, cellular telephone systems, personal communication service (PCS), television systems (including digital TV), and link budget analysis for wireless systems. Link budget analysis is concerned with the design of a system to meet a required performance specification as a function of trade-off in the transmitted power, antenna gain, and noise figure of the receiving systems. This performance specification is the maximum allowed probability of error for digital systems and the minimum allowed output SNR for analog systems.

8–2 TELEPHONE SYSTEMS

Modern telephone systems have evolved from the telegraph and telephone systems of the 1800s. Telephone companies that provide services for a large number of users over their *public switched telephone networks* (PSTN) on a for-hire basis are known as *common carriers*. The term is applied to widely diverse businesses, such as mail, airline, trucking, telephone, and data services. The common carriers are usually regulated by the government for the general welfare of the public, and, in some countries, certain common carrier services are provided by the government. The information from multiple users is transmitted over these systems, primarily by using time-division multiplex (TDM) transmission or packet data transmission.

Historically, telephone systems were designed only to reproduce voice signals that originated from a distant location. Today, modern telephone systems are very sophisticated. They use large digital computers at the *central office* (CO) to switch calls and to monitor the performance of the telephone system. The modern CO routes TDM PCM voice data, video data, and computer data to remote terminals and to other central offices.

Digital service is provided to the customer in any of three ways: (1) a *dedicated leased circuit*, such as a T1 circuit, that is available for use at all times without dialing or switching, (2) a *circuit-switched service* that is available on a dial-up basis, and (3) a *packet-switched service* such as DSL, discussed in Section 8–3, that is “always on” and is used only when packets are exchanged.

Historical Basis

Modern telephone systems have evolved from the relatively simple analog circuit that was invented by Alexander Graham Bell in 1876. This circuit is shown in Fig. 8–1, where two telephone handsets are connected together by a twisted-pair (i.e., two-wire) telephone line and the telephone handsets are powered by a battery located at the CO. (Historically, the telephone-wire connection between the two parties was made by a telephone switchboard operator.) The battery produces a DC current around the telephone-wire loop. A carbon microphone element is used in each telephone handset. It consists of loosely packed carbon granules in a box that has one flexible side—the diaphragm. As sound pressure waves strike the diaphragm, the carbon granules are compressed and decompressed. This creates a variable resistance that causes the DC loop current to be modulated. Thus an ac audio current signal is produced, as shown in the figure. The handset earphone consists of an electromagnet with a paramagnetic diaphragm placed within the magnetic field. The ac current passing through the electromagnet causes the earphone diaphragm to vibrate and sound is reproduced.

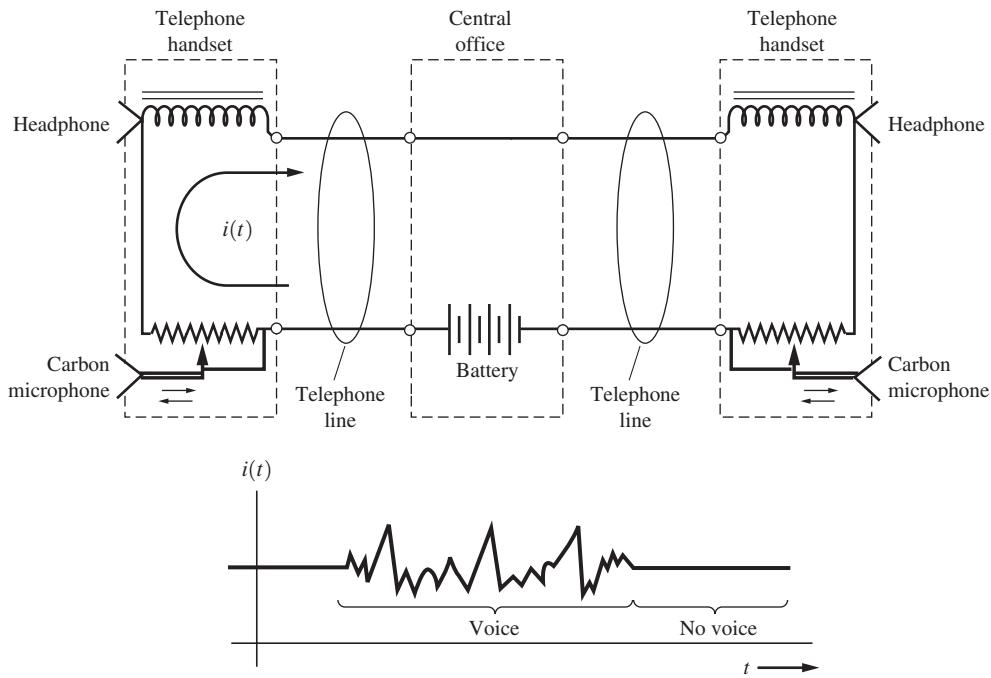


Figure 8-1 Historical telephone system.

The simple two-wire telephone system shown in Fig. 8-1 has three important advantages: (1) it is inexpensive; (2) the telephone sets are powered from the CO via the telephone line, so no power supply is required at the user's location; and (3) the circuit is full duplex.[†] The two-wire system has one main disadvantage: Amplifiers cannot be used, since they amplify the signal in only one direction. Consequently, for distant telephone connections, a more advanced technique—called a four-wire circuit—is required. In a four-wire circuit, one pair (or one optical fiber) is used for signals sent in the transmit direction, and another is used for arriving signals in the receive direction.

Modern Telephone Systems and Remote Terminals

A simplified diagram for the classic analog local-loop system that is used today is shown in Fig. 8-2. The local switching office connects the two parties by making a hardwire connection between the two appropriate local loops. This is essentially a series connection, with the earphone and carbon microphone of each telephone handset wired in a series with a battery (located at the telephone plant). Figure 8-2 illustrates this analog local-loop system, which is said to supply *plain old telephone service* (POTS). The wire with positive voltage from the CO is called the *tip* lead, and it is color coded *green*. The wire with negative voltage is called the *ring* lead and is color coded *red*. The terms *tip* and *ring* are derived from the era when a plug switchboard was used at the CO. These leads were connected to a plug with tip and ring contacts. This jack is similar to a stereo headphone jack that has tip, ring, and sleeve contacts. The Earth ground lead was connected to the sleeve contact.

[†] With full-duplex circuits, both parties can talk and listen simultaneously to the other person.

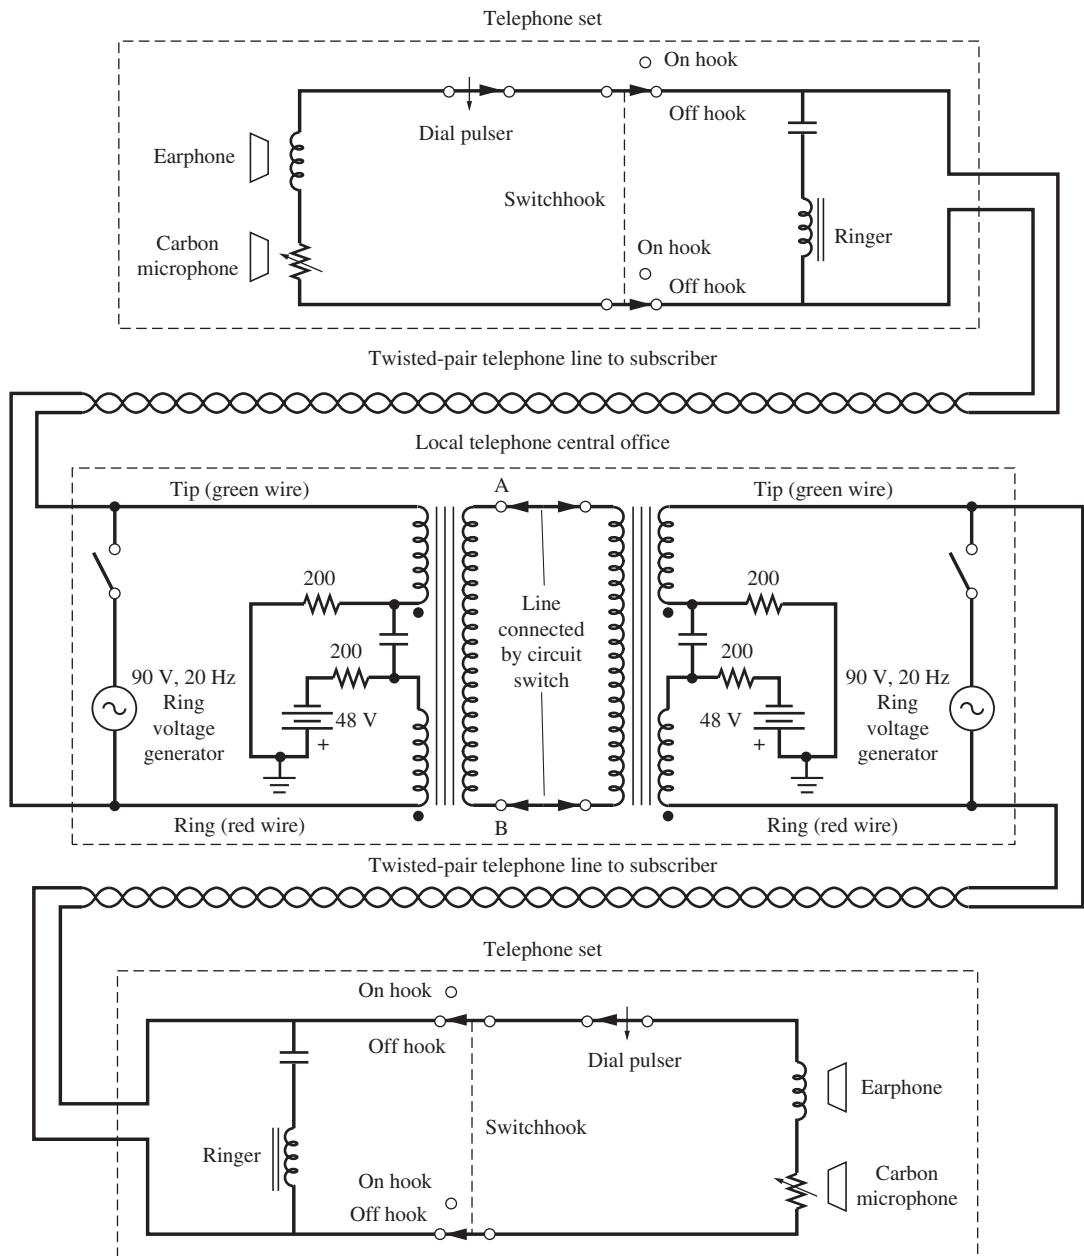


Figure 8–2 Local analog telephone system (simplified).

The sequence of events that occur when placing a local phone call will now be described with the aid of Fig. 8-2 and Table 8-1. The calling party—the upper telephone set in Fig. 8-2—removes the telephone handset; this action closes the switchhook contact (off-hook) so that DC current flows through the caller's telephone line. The current, about 40 mA, is sensed at the CO and causes the CO to place a dial-tone signal (approximately 400 Hz) on the calling party's line. The calling party dials the number by using either pulse or touchtone dialing. Today, most phone systems use touch-tone dialing, which consists of two tones that denote a dialed digit (see Table 8-1). If pulse dialing is used, the DC line current is interrupted for the number of times equal to the digit dialed (at a rate of 10 pulses/s). For example, there are five interruptions of the line current when the number 5 is dialed. Upon reception of the complete number sequence for the called party, the CO places the ringing generator (90 V RMS, 20 Hz, on 2 s, off 4 s) on the line corresponding to the number dialed. This rings the phone. When the called party answers, DC current flows in that line to signal the CO to disconnect the ringing generator and to connect the two parties together via the CO circuit switch. Direct current is now flowing in the lines of both the called and the calling party, and there is a connection between the two parties via transformer coupling,[†] as shown in Fig. 8-2. When either person speaks, the sound vibrations cause the resistance of the carbon microphone element to change in synchronization with the vibrations so that the DC line current is modulated (varied). This produces the ac audio signal that is coupled to the headphone of the other party's telephone. Note that both parties may speak and hear each other simultaneously. This is full-duplex operation.

In modern telephone sets, the carbon microphone element is replaced with an electret or dynamic microphone element and an associated IC amplifier that is powered by the battery voltage from the CO, but the principle of operation is the same as previously described.

The telephone system depicted in Fig. 8-2 is satisfactory as long as the resistance of the twisted-pair loops is 1300 Ω or less. This limits the distance that telephones can be placed from this type of CO to about 15,000 ft for 26-gauge wire, 24,000 ft for 24-gauge, and 38,000 ft or about 7 miles, if 22-gauge twisted-pair wire is used. Historically, 19-gauge wire was used in rural areas so that phones may be located up to 20 miles away from the CO without remote terminals.

Supplying a dedicated wire pair from each subscriber all the way to the CO is expensive. In applications where a large number of subscribers are clustered some distance from the CO, costs can be substantially reduced by using *remote terminals* (RT). (See Fig. 8-3.) Remote terminals also allow telephones to be placed at any distance from the CO, as we will describe subsequently.

The circuit for a typical RT is illustrated in Fig. 8-4. The POTS line card supplies battery voltage and ringing current to the subscriber's telephone. The *two-wire circuit* that carries the duplex VF signals to and from the subscriber is converted into a *four-wire circuit* that carries two one-way (simplex) transmit and receive signals by the use of a *hybrid circuit*. The hybrid circuit is a balanced transformer circuit (or its equivalent electronic circuit) that provides isolation for the transmit and receive signals. As shown in Fig. 8-4b, the hybrid circuit acts as a balanced Wheatstone bridge where $Z_1/Z_3 = Z_2/Z_4$. Thus, the voltage

[†] The transformers are called *repeat coils* in telephone parlance.

TABLE 8-1 TELEPHONE STANDARDS FOR THE SUBSCRIBER LOOP

Item	Standard
On hook (idle status)	Line open circuit, minimum DC resistance 30 kΩ
Off hook (busy status)	Line closed circuit, maximum DC resistance 200 Ω
Battery voltage	48 V
Operating current	20–80 mA, 40 mA typical
Subscriber-loop resistance	0–1300Ω, 3600Ω (max)
Loop loss	8 dB (typical), 17 dB (max)
Ringing voltage	90 V RMS, 20 Hz (typical) (usually pulsed on 2 s, off 4 s)
Ringer equivalence number (REN) ^a	0.2 REN (minimum), 5.0 REN (maximum)
Pulse dialing	Momentary open-circuit loop
Pulsing rate	10 pulses/sec ±10%
Duty cycle	58–64% break (open)
Time between digits	600 ms minimum
Pulse code	1 pulse = 1, 2 pulses = 2, ..., 10 pulses = 0
Touch-tone ^b dialing	Uses two tones, a low-frequency tone and a high-frequency tone, to specify each digit:
	High Tone (Hz)
Low Tone	1209 1336 1477
697 Hz	1 2 3
770	4 5 6
852	7 8 9
941	* 0 #
Level each tone	–6 to –4 dBm
Maximum difference in levels	4 dB
Maximum level (pair)	+2 dBm
Frequency tolerance	±1.5%
Pulse width	50 ms
Time between digits	45 ms minimum
Dial tone	350 plus 440 Hz
Busy signal	480 plus 620 Hz, with 60 interruptions per minute
Ringing signal tone	440 plus 480 Hz, 2 s on, 4 s off
Caller ID ^c	1.2-kbit/s FSK signal between first and second rings (Bell 202 modem standard) ^d

^a Indicates the impedance loading caused by the telephone ringer. An REN of 1.0 equals about 8 kΩ, 0.2 REN equals 40 kΩ, and 5.0 REN equals 1.6 kΩ.

^b Touch tone was a registered trademark of AT&T. It is also known as *dual-tone multiple-frequency* (DTMF) signaling.

^c Other display services are also proposed [Schwartz, 1993].

^d [Lancaster, 1991].


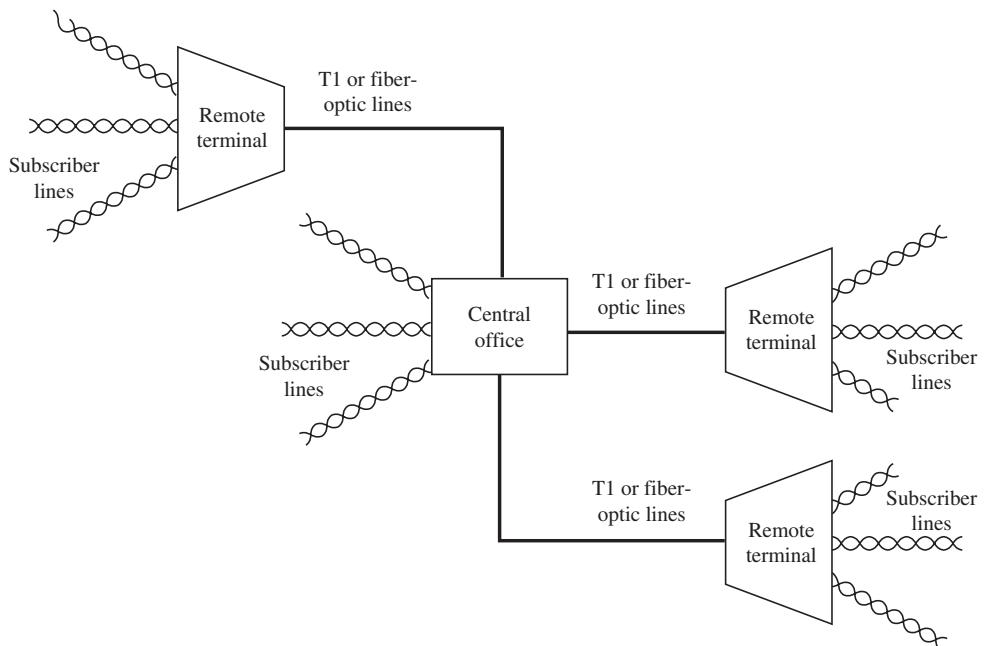


Figure 8-3 Telephone system with remote terminals.


on the receive line (shown at the bottom right of Fig. 8-4b) is balanced out and does not appear on the transmit line (upper right). Consequently, self-oscillation (ringing feedback) is prevented, even though there may be some coupling of the amplified transmitted signal to the receive line at the distant end of the four-wire line or coupling from the transmit line to the receive line along the four-wire path. As shown in Fig. 8-4a, the transmit VF signal is converted to a DS-0 PCM signal, which is time-division-multiplexed with the PCM signals from other subscribers attached to the RT. The TDM signal is sent over a DS-1 trunk to the CO. Similarly, the received DS-1 signal from the CO is demultiplexed and decoded to obtain the received VF audio for the subscriber. In a popular RT system first manufactured by AT&T called SLC-96, 96 VF subscriber lines are digitized and multiplexed onto four T1 lines, and one additional T1 line is on standby in case one of the other T1 lines fails [Chapman, 1984]. From Chapter 3, it is recalled that a T1 line requires two twisted pairs (one for the transmit data and one for the receive data) and that each T1 line (1.544 Mb/s) carries the equivalent of 24 VF signals.

Let us now compare the twisted-pair requirements for systems with and without RTs. If no RT is used, 96 pairs will be required to the CO for 96 subscribers, but if a SLC-96 RT is used, only 10 pairs (5 T1 lines) are needed to the CO. This provides a pair savings (also called pair gain) of 9.6 to 1. Furthermore, the RT may be located at any distance from the CO (there is no $1300\text{-}\Omega$ limit) because the pairs are used for DS-1 signaling with repeaters spaced about every mile. Of course, fiber-optic lines can also be used to connect the RT to the CO. For example, if two 560-Mb/s fiber-optic lines are used (one for data sent in each direction), this has a capacity of 8064 VF channels for DS-5 signaling. (See Table 3-8 and

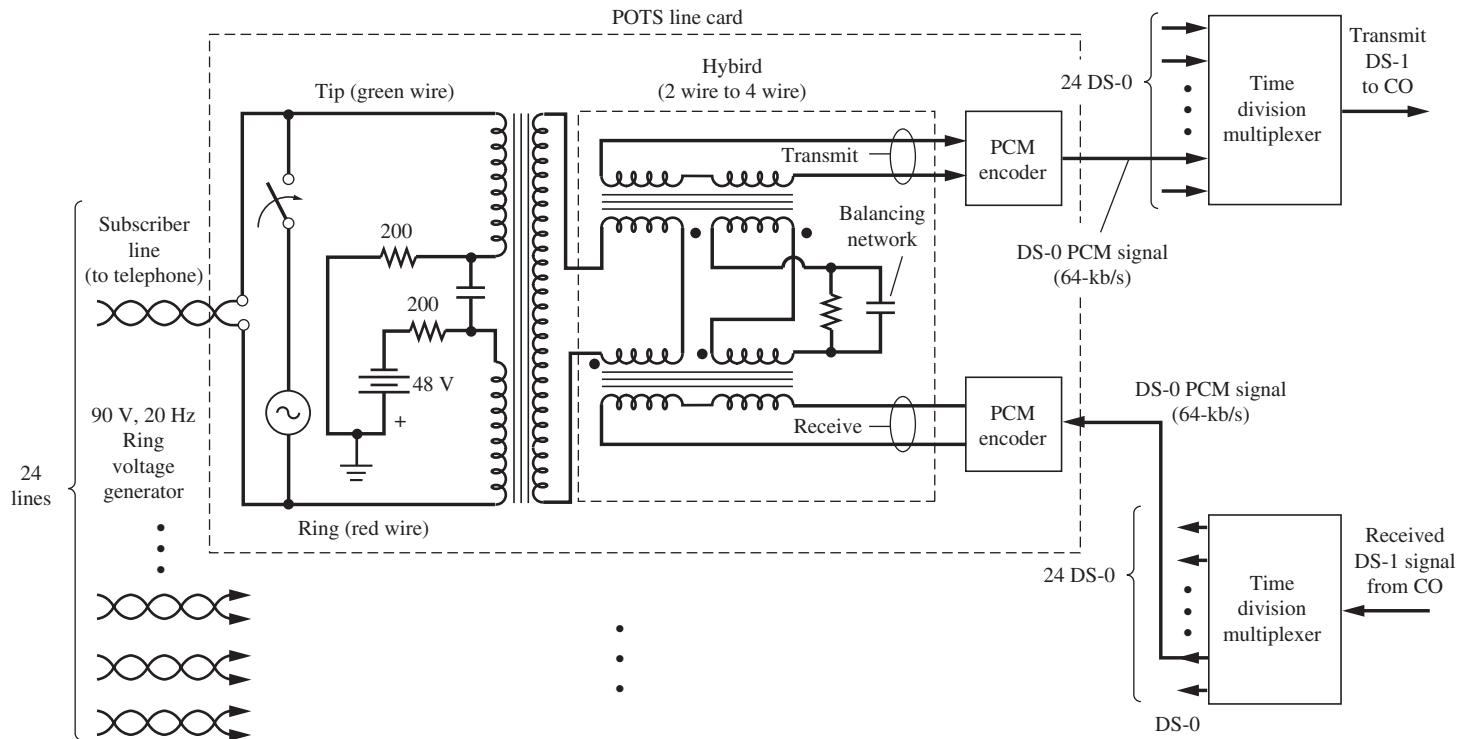

(a) POTS Line Card in a RT

Figure 8–4(a) (continued).

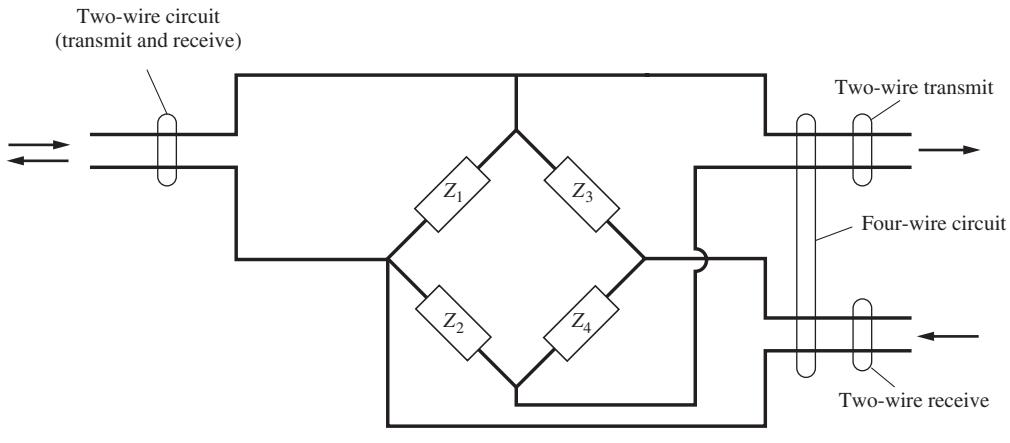

(b) Balanced Wheatstone Bridge Model for a Hybrid Circuit

Figure 8-4(b) Remote terminal (RT).

Fig. 3-40.) Thus, an RT with a 560-Mb/s fiber-optic link to the CO could serve 8064 subscribers. Furthermore, in Sec. 8-7, we see that no optical repeaters will be required if the RT is located within 35 miles (typically) of the CO.

Telephone companies have replaced their analog switches at the CO with digital switches. Historically, at the CO an analog circuit switch was used to connect the wire pairs of the calling and the called party (as shown in Fig. 8-2). These switches were controlled by hard-wired relay logic. Now, telephone offices use *electronic switching systems* (ESS). With ESS, a digital computer controls the switching operation as directed by software called *stored program control*. Moreover, modern ESS switches use *digital switching* instead of *analog switching*. In a digitally switched CO, the customer's VF signal is converted to PCM and is time-division multiplexed with other PCM signals onto a high-speed digital line. (When RTs are used, the conversion of the VF signal to PCM is carried out at the RT.) The digital CO switches a call by placing the PCM data of the calling party into the TDM time slot that has been assigned for the destination (called) party. This is called *time-slot interchange* (TSI). The digital switch is less expensive on a per-customer basis than the analog switch (for a large number of customers), and it allows switching of data and digitized video as well as PCM audio.

For toll calls, the local CO uses trunk lines that are connected to a distant CO. Multiple calls are accommodated using either TDM or packets. A local digital CO acts much like a RT attached to a distant CO. Interestingly, long-distance trunks account for less than 5% of the total cost of the telephone network; most of the cost comes from the switching equipment.

8-3 DIGITAL SUBSCRIBER LINES (DSL)

How can high-speed data and video service be economically provided via wire technology? High-speed data are easily transported from the CO to the RT via fiber-optic cables. The problem is transporting the data to the customer over the “last mile.” It is usually not economical to install a dedicated fiber or coaxial line from the RT directly to each customer. However, in

most cases, twisted-pair lines are already installed, and short lines of, say, up to 1,500 ft, have useful bandwidths as large as 30 MHz. In conventional applications, the POTS line cards in the RT restrict the bandwidth to the VF range of 3.3 kHz. This limits the data rate to around 50 kb/s for a SNR of 50 dB (V.90 modem). But, even worse, the line may have a lower SNR, so that the VF modem typically falls back to an operating speed of about 24 kb/s in practice (as demonstrated by SA1–3). However, *digital subscriber line* (DSL) cards can be used in the RT to take advantage of the wide bandwidth of short “last mile” twisted pair lines and provide data rates on the order of 6 Mb/s. There are many DSL methods, so we will denote this family of methods by the notation xDSL. All use one or two twisted pairs to serve the “last mile” customer from an RT.


1. *HDSL (high-bit-rate digital subscriber line)* uses two twisted pairs (one transmit and one receive) to support 1.544 Mb/s at full duplex for a distance of up to 12,000 ft from the RT. It uses a 2B1Q line code of ISDN (described below) or a suppressed carrier version of QAM called *carrierless amplitude-phase* (CAP).
2. *SDSL (symmetrical digital subscriber line)* is a one-pair version of HDSL. It provides full duplex to support 768 kb/s in each direction using a hybrid or echo canceller to separate data transmitted from data received.
3. *ADSL (asymmetrical digital subscriber line)* uses one twisted pair to support 6 Mb/s sent downstream to the customer and 640 kb/s sent upstream over a distance of up to 12,000 ft. The ASDL spectrum is above 25 kHz. The band below 4 kHz is used for a VF POTS signal. Two variations of ASDL—called G.DMT and G.Lite—are discussed in the next section.
4. *VDSL (very-high-bit-rate digital subscriber line)* uses one pair of wires to support 25 Mb/s downstream for distances of up to 3,000 ft from the RT or 51 Mb/s downstream for distances of up to 1,000 ft from the RT. Up to 3.2 Mb/s can be supported upstream.
5. *ISDN (integrated service digital network)* uses one twisted-pair line to provide a subscriber data rate of up to 144 kb/s in each direction at distances of up to 18,000 ft from the RT. This technology has been available since 1990 and has been popular in Europe and Japan, but not too popular in the United States. More details about ISDN are discussed in a later section.

G.DMT and G.Lite Digital Subscriber Lines


G.DMT and G.Lite use “always on” (packet) ADSL technology with a spectrum above the 4 kHz voice band. This allows a VF POTS signal to be supported along with the data signal on a single twisted-pair line.

As shown in Fig. 8–5a, G.DMT uses a splitter so that the telephone handsets will not “short out” the data signal and vice versa. G.DMT uses discrete multitone modulation (DMT) with up to 256 carriers and up to 15 bits of data, 32,768 QAM, modulated on each carrier.[†] This provides a maximum data rate of 6.1 Mb/s downstream and 640 kb/s

[†] DMT is Orthogonal Frequency Division Multiplexing (OFDM) and is described in Sec. 5–12.

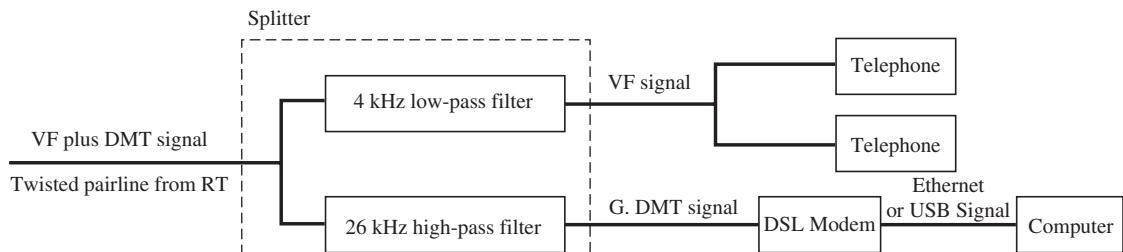

(a) Customer Premises Equipment (CPE)

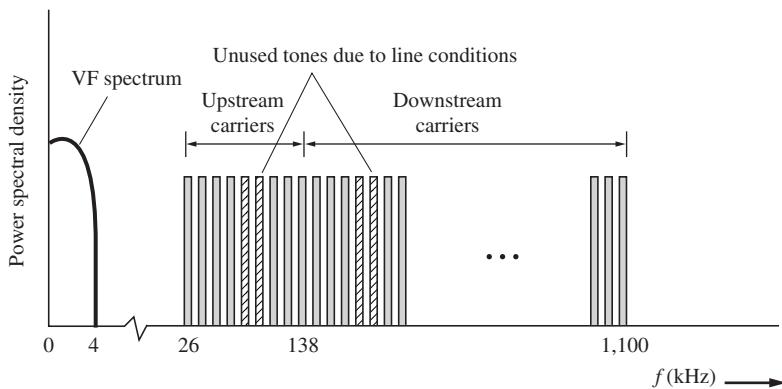

(b) VF plus DMT Spectrum

Figure 8-5 G.DMT digital subscriber line.

upstream for line length up to 12,000 ft. As shown in Fig. 8-5b, the DMT carrier spacing is 4.3125 kHz. The upstream data are on carriers in the 26–138 kHz band and the downstream carriers are placed in the 138–1,100 kHz band. In an alternative implementation, both the upstream and the downstream carriers are placed in the 26–1,100 kHz band, and a hybrid (or echo canceller) is used to separate the upstream and downstream carriers. DMT has the advantage of allowing the modulation to be customized to accommodate the transmission and noise characteristics of a particular line. That is, carriers are deleted at frequencies where there are nulls in the frequency response of the line caused by reflections and at frequencies where the noise is large. This allows a BER of 10^{-7} to be achieved at a data rate that the line can support.

G.Lite uses no splitter. (The telephone and data wires are wired directly together in parallel.) This has the advantage of “no truck roll” (i.e., no installation of a splitter) for the TELCO, but has the disadvantage of old telephone sets loading down (shorting out) the data signal and transmission nulls in the spectrum caused by reflections from telephone line bridge taps (i.e., extension phones). Consequently, G.Lite may not work for some customers unless offending telephones are replaced or a splitter is installed. G.Lite uses fewer carriers than G.DMT to avoid the spectral impairments at the higher

frequencies. G.Lite has a data rate of 1.5 Mb/s downstream and 512 kb/s upstream over an 18,000-ft line. It uses 128 DMT carriers with up to 8 bits, 256 QAM, modulated on each carrier.

G.DMT and G.Lite may be the answer to the problem of how to provide economical high-speed internet access. G.DMT is described in ANSI standard T.413 and ITU document G.992.1. G.Lite is described in ITU document G.992.2.

Video On Demand (VOD)

VDSL technology allows telephone companies (TELCO) to provide a cable-TV type of program service to the consumer using twisted pair lines. An HDTV (high-definition TV) signal requires a data rate of 20 Mb/s for compressed video, and SDTV (standard-definition TV) can be delivered with a 6 Mb/s data rate. (See Sec. 8–9 on digital TV for more details.) With VOD, the subscriber selects the desired program using a set-top box (STB). The TELCO then sends the data for the selected program to the user via VDSL, and the STB converts the data to the video signal that is viewed on the TV set. First-run movies and other pay-per-view programs could also be provided. The VOD subscriber can have access to almost an unlimited number of TV channels (one channel at a time) and other video services.

Integrated Service Digital Network (ISDN)

The *integrated service digital network* (ISDN) uses a DSL to deliver digital data (no VF signal) to the subscriber. The ISDN subscriber can demultiplex the data to provide any one or all of the following applications simultaneously: (1) decode data to produce VF signals for telephone handsets, (2) decode data for a video display, or (3) process data for telemetry or PC applications.

ISDN uses twisted-pair telephone lines to connect to a circuit-switched network system, which also provides access to packet-switched systems. This digital connection provides much better VF quality than corresponding analog signaling over the twisted-pair line, and it also provides the capability of including multiplexing digital data along with the VF data.

There are two categories of ISDN: (1) *narrowband* or “*basic rate*,” ISDN, denoted by N-ISDN, and (2) *broadband*, or “*primary rate*,” ISDN, denoted by B-ISDN. B-ISDN has an aggregate data rate of 1.536 Mb/s (approximately the same rate as for T1 lines), consisting of 23 B channels (64 kb/s each) and one D channel (64 kb/s). The B channels carry user (or bearer) data, which may be PCM for encoded video or audio. The D channel is used for signaling to set up calls, disconnect calls, or route data for the 23 B channels.

N-ISDN service can be found in Europe but is rarely used in the United States. B-ISDN service can be found throughout the world, including the United States, and is used to connect *private branch exchanges* (PBX) to the PSTN.

The standard implementation of N-ISDN is shown in Fig. 8–6. The N-ISDN subscriber is connected to the RT of the telephone company by a twisted-pair telephone line.

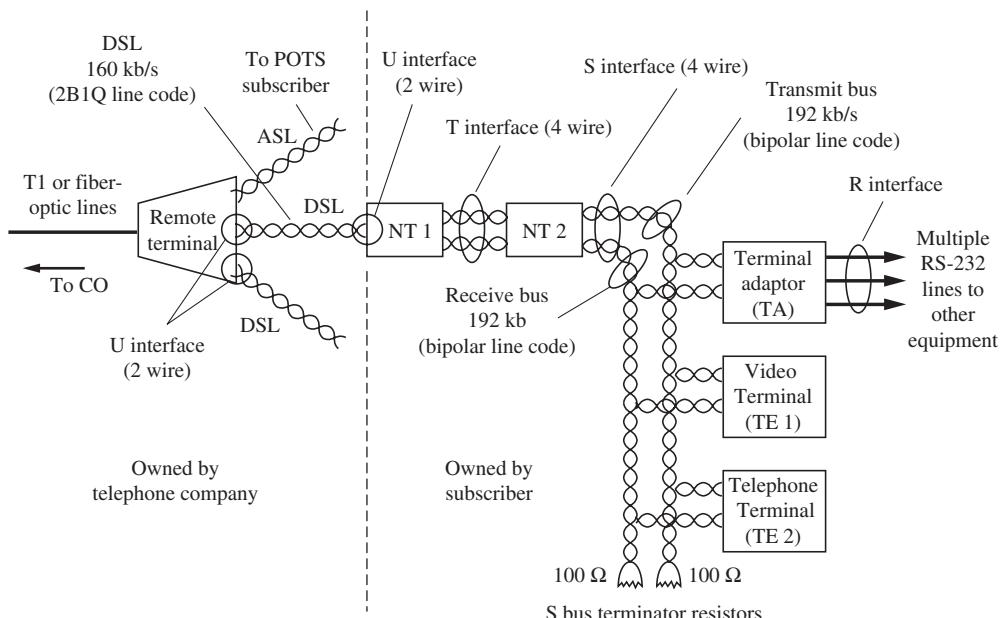



Figure 8–6 N-ISDN system with subscriber equipment attached.

For N-ISDN service, the line must be no longer than 18 kft (3.4 miles) for the 160-kb/s N-ISDN aggregate data rate. (If the subscriber is located within 18 kft of the CO, an RT is not necessary.) The data rate available to the N-ISDN subscriber is 144 kb/s, consisting of data partitioned into two B channels of 64 kb/s each and one D channel of 16 kb/s. In addition to the 2B +D data, the telephone company adds 12 kb/s for framing/timing plus 4 kb/s for overhead to support network operations. This gives an overall data rate of 160 kb/s on the DSL in both the transmit and receive directions (simultaneously) for full-duplex operation. The DSL is terminated on the subscriber's end at the U interface as shown on Fig. 8–6.


N-ISDN service to the subscriber via two-wire twisted-pair DSL up to 18 kft from an RT is made possible by the use of multilevel signaling. Referring to Fig. 5–33 with $R = 160$ kb/s, a four-level (i.e., $\ell = 2$ bits) 80-kbaud line code has a null bandwidth of only 80 kHz instead of the 160-kHz null bandwidth for a binary ($\ell = 1$) line code. The 80-kHz bandwidth is supported by 26-gauge twisted-pair cable if it is less than about 18 kft in length. The particular four-level signal used is the 2B1Q line code (for two binary digits encoded into one quadrenary symbol) shown in Fig. 8–7. Note that the 2B1Q line code is a differential symbol code. Thus, if (due to wiring error) the twisted pair is “turned over” so that the tip wire is connected to the ring terminal and the ring to the tip so that the 2B1Q signal polarity is inverted, the decoded binary data will still have the correct polarity (i.e., not complemented).

Previous 2B1Q level	Current binary word	Present 2B1Q level
+1 or +3	{ 00	+1
	01	+3
	10	-1
	11	-3
-1 or -3	{ 00	-1
	01	-3
	10	+1
	11	+3

(a) 2B1Q differential code table

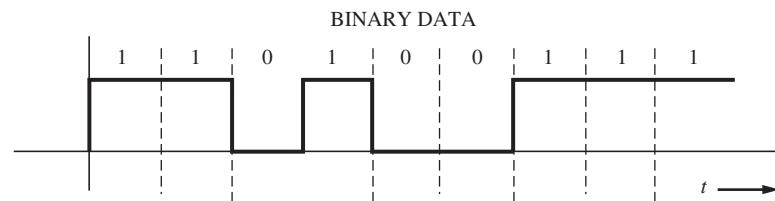

(b) Binary data waveform (160 kb/s)

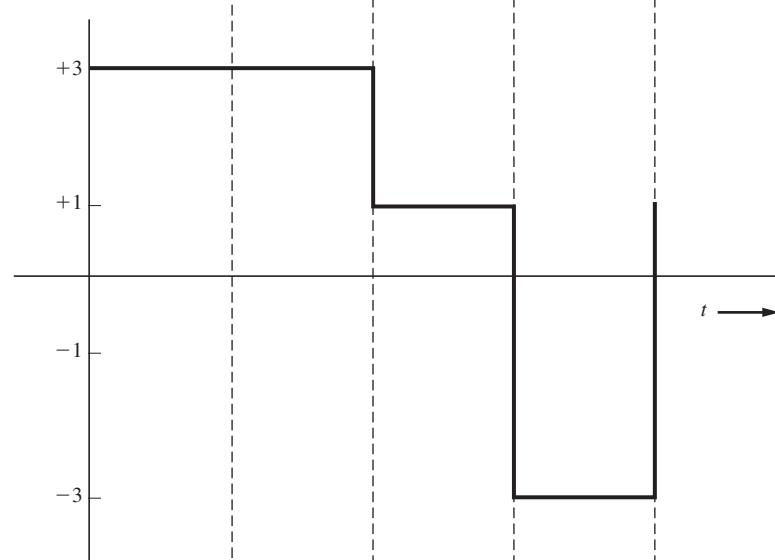

(c) 2B1Q waveform (80 kbaud)

Figure 8–7 2B1Q Line code.

8–4 CAPACITIES OF PUBLIC SWITCHED TELEPHONE NETWORKS

The wideband channels used to connect the toll offices consist of one predominant type: fiber-optic cable. Table 8–2 lists some of the wideband systems that are used, or have been used in the past, and indicates the capacity of these systems in terms of the number of VF channels they can handle and their bit rate.

Historically, open-wire pairs, which consist of individual bare wires supported by glass insulators on the cross arms of telephone poles, provided wideband service via FDM/SSB signaling.

Fiber-optic cable with OOK signaling has overtaken twisted-pair cable, coaxial cable, and microwave relay because of its tremendous capacity and relatively low cost. As shown in Table 8–2, data rates on fiber-optic links continue to increase as technology advances. Typically, a 2.5-Gb/s data rate is employed on an OOK optical carrier, as is the case with the FT-2000 system. This is equivalent to 32,000 VF telephone circuits. Data rates of 10 Gb/s on each carrier are also possible. For even higher capacity, multiple carriers at different wavelengths are used on a single fiber. *Dense wavelength division multiplexing* (DWDM) systems include as many as 176 optical carriers on one fiber. For example, the FlashWave7700 DWDM system achieves a capacity of 1.76 Tb/s, or 27.5 million VF circuits, by using 176 carriers. However, fiber-optic cable provides service only from one fixed point to another. Conversely, communication satellites provide wideband connections to any point on the globe. Service to isolated locations can be provided almost instantaneously by the use of portable ground stations. This is described in more detail in the next section.

8–5 SATELLITE COMMUNICATION SYSTEMS

The number of satellite communication systems has increased over the last few years. Satellites have made transoceanic relaying of television signals possible. Satellite communications provide the relaying of data, telephone, and television signals and now provide national direct-into-the-home television transmission via satellite.

Satellite technology has changed tremendously over the past 15 years. The major change is the transition from analog signaling to digital signaling. Also, the type of information transmitted has changed. In the United States, satellites are now used mainly for TV distribution and to provide communication links to isolated areas. Satellite systems are ideally suited for global positioning system (GPS) applications where the satellite signal is used by the recipient to determine the user's exact geometric coordinates (latitude, longitude and altitude) on Earth [Pratt *et al.*, 2003; Kaplan, 2005].

As indicated in Table 8–2, modern fiber optic-systems have tremendously more capacity than modern satellites. The WaveStar fiber optic system has about 40 times the number of equivalent VF channels than does the Intelsat X system. Bundles of fiber can be laid with very little increase in cost, and thus, the initial fiber-cable capacity can be expanded to almost any capacity imaginable. The per channel cost/maintenance of a fiber system is orders of magnitude less than that for a satellite system. Consequently, in the United States almost all telephone and internet data are carried by fiber-optic systems. Satellite systems are used to distribute TV programs to cable TV companies and directly to the home (e.g., DirecTV), for satellite radio (Sirius XM), and to provide private VSAT (very small aperture terminals) networks for business.

TABLE 8–2 CAPACITY OF PUBLIC-SWITCHED TELEPHONE NETWORKS

Transmission Medium	Name	Developer	Year in Service	Number of Voice-Frequency Channels		Repeater Spacing (miles)	Operating Frequency (MHz)	Modulation ^a	
				Bit Rate (Mbys)	D/A			D/A	Method
Open-wire pair	A	Bell	1918	4			0.005–0.025	A	FDM/SSB
	C	Bell	1924	3		150	0.005–0.030	A	FDM/SSB
	J	CCITT		12		50	0.036–0.140		
		Bell	1938	12		50	0.036–0.143	A	FDM/SSB
Twisted-pair cable	J	CCITT		28			0.003–0.300	A	FDM/SSB
	K	Bell	1938	12		17	0.012–0.060	A	FDM/SSB
	N1	CCITT		12		19	0.012–0.060	A	FDM/SSB
	N3	Bell	1964	24			0.044–0.260	A	FDM/SSB
	T1 ^b	Bell	1962	24	1.544 (DS-1)	1	0.172–0.268	D	Bipolar
	T1G ^b	AT&T	1985	96	6.312 (DS-2)			D	Four-level
	T2 ^b	Bell		96	6.312 (DS-2)	2.3		D	B6ZS
	L1	Bell	1941	600		8	0.006–2.79	A	FDM/SSB
Coaxial cable	L3	Bell	1953	1,860		4	0.312–8.28	A	FDM/SSB
	L4	Bell	1967	3,600		2	0.564–17.55	A	FDM/SSB
	L5	Bell	1974	10,800		1	3.12–60.5	A	FDM/SSB
	T4 ^b	Bell		4,032	274.176 (DS-4)	1		D	Polar
	T5 ^b	Bell		8,064	560.16 (DS-5)	1		D	Polar
	FT3	Bell	1981	672	44.763 (DS-3)	4.4	0.82 μm	D	TDM/OOK
Fiber-optic cable		Brit. Telcom	1984		140	6	1.3 μm	D	TDM/OOK
		Sask. Telcom	1985		45	6–18	0.84 and 1.3 μm	D	TDM/OOK
	F-400M	Nippon	1985		400	12	1.3 μm	D	TDM/OOK
	FT3C-90	AT&T	1985	1,344	90.254 (DS-3C)	16	1.3 μm	D	TDM/OOK
	FT4E-432	AT&T	1986	6,048	432 (DS-432)	16	1.3 μm	D	TDM/OOK
	LaserNet	Microtel	1985	6,048	417.79 (9DS-3)	25	1.3 μm	D	TDM/OOK
	FTG1.7	AT&T	1987	24,192	1,668 (36DS-3)	29	1.3 μm	D	TDM/OOK
	FT-2000	AT&T	1995	32,256	2,488 (OC-48)	100	1.5 and 1.3 μm	D	TDM/OOK
	WaveStar	Lucent	1999	6,250,000	400,000	25	40 wavelengths	D	DWDM ^d
	FlashWave	Fujitsu	2002	27,500,000	1,760,000		176 wavelengths	D	DWDM
Transoceanic	TAT-1 (SB)	Bell	1956	48		20	0.024–0.168	A	FDM/SSB
	TAT-3 (SD)	Bell	1963	138		11	0.108–1.05	A	FDM/SSB
	TAT-5 (SF)	Bell	1970	845		6	0.564–5.88	A	FDM/SSB

	TAT-6 (SG)	Bell	1976	4,200		3	0.5–30	A	FDM/SSB
	TAT-8 (3 fibers)		1988	8,000	280		1.3 μm	D	TDM/OOK
	TAT-9 (3 fibers)		1991	16,000	565		1.55 μm	D	TDM/OOK
	TAT-10 (6 fibers)		1992	80,000 ^e	565		1.55 μm	D	TDM/OOK
	TAT-12 (6 fibers)	Alcatel	1995	200,000	5,000	30	1.48 μm	D	TDM/OOK
	OALW160	Alcatel	2000		160,000	35	1.55 μm	D	DWDM
	TAT-14 (4 fibers)		2001		640,000		1.55 μm	D	DWDM
Microwave relay	TD-2	Bell	1948	600 (1954)	plus 1.544 ^c	30	3700–4200	A	FDM/FM
	TH-1	Bell	1961	2,400 (1979)	plus 1.544 ^c	30	5925–6245	A	FDM/FM
	TD-3	Bell	1967	1,800 (1979)	plus 1.544 ^c	30	3700–4200	A	FDM/FM
	TN-1	Bell	1974	1,800	plus 1.544 ^c	30	K band, 18 GHz	A	FDM/FM
	AR6A	Bell	1980	6,000		30	5925–6425	A	FDM/SSB
	18G274	NEC	1974	4,032	274.176 (DS-4)	7	18 GHz	D	4 PSK
	6G90	NEC	1979	1,344	90 (2DS-3)	30	6 GHz	D	16 QAM
	11G135	NEC	1980	2,016	135 (3 DS-3)	30	11 GHz	D	16 QAM
	6G135	NEC	1983	2,016	135 (3 DS-3)	30	6 GHz	D	64 QAM
	MDR-2306	Collins	1983	2,016	135 (3 DS-3)	30	6 GHz	D	64 QAM
	RD-6A	Nortel	1984	2,016	135 (3 DS-3)	30	6 GHz	D	64 QAM
	TN-X/40	Nortel	1996	4,032	310 (2 STS-3)	30	6 GHz	D	512 QAM
Communication satellite	Intelsat IV	COMSAT	1971	8,000		22,300	6 GHz up/4 GHz down	A/D	FDM/FM, QPSK/SCPC
	Intelsat V	COMSAT	1980	25,000		22,300	6/4 and 14/11 GHz	A/D	FDM/FM, QPSK/SCPC
	Intelsat VI	Intelsat	1990	120,000		22,300	6/4 and 14/11 GHz	A/D	FDM/FM, QPSK/SCPC
	Intelsat VIII	Intelsat	1998	121,000		22,300	6/4 and 14/11 GHz	A/D	FDM/FM, QPSK/SCPC
	Intelsat X	Intelsat	2004	170,000			6/4 and 14/11 GHz	A/D	FDM/FM, QPSK/SCPC

^a A-analog; D-digital; DWDM-dense wavelength division multiplexing.

^b See Table 3–9 for more details on the T-carrier system.

^c Since 1974 data under voice were added to give a 1.544-Mb/s (DS-1) data channel in addition to the stated VF FDM capacity.

^d 40 wavelength channels at 10 Gb/s each.

^e VF capacity with statistical multiplexing.

Satellites are also used for GPS type applications. On the international scene, satellites are used for distribution of TV, for GPS, and for telephone and internet links to isolated areas.

In summary, satellites are very cost effective for broadcast-type applications where the same information is broadcast from one source to many recipients. They are less cost-effective for point-to-point communication applications.

Most communication satellites are placed in *geostationary orbit* (GEO). This is a circular orbit in Earth's equatorial plane. The orbit is located 22,300 miles above the equator so that the orbital period is the same as that of the Earth. Consequently, from Earth these satellites appear to be located at a stationary point in the sky, as shown in Fig. 8–8. This enables the Earth station antennas to be simplified, since they are pointed in a fixed direction and do not have to track a moving object. (For communication to the polar regions of the Earth, satellites in polar orbits are used, which require Earth stations with tracking antennas.) To prevent the satellite from tumbling, one of two spin stabilization techniques—spin stabilization or three-axis stabilization—is used. For spin stabilization, the outside cylinder of the satellite is spun to create a gyroscopic effect that stabilizes the satellite. For three-axis stabilization, internal gyroscopes are used to sense satellite movement, and the satellite is stabilized by firing appropriate thruster jets.

The most desired frequency band for satellite communication systems is 6 GHz on the uplink (Earth-to-satellite transmission) and 4 GHz on the downlink (satellite-to-Earth transmission). In this frequency range, the equipment is relatively inexpensive, the cosmic noise is small, and the frequency is low enough that rainfall does not appreciably attenuate the signals. Other losses, such as ionospheric scintillation and atmospheric absorption, are small at these frequencies [Spilker, 1977]. (Absorption occurs in specific frequency bands and is caused by the signal exciting atmospheric gases and water vapor.) However, existing terrestrial microwave radio relay links are already assigned to operate within the 6- and 4-GHz bands (see Table 8–2), so the FCC limits the power density on Earth from the satellite transmitters. One also has to be careful in locating the Earth station satellite-receiving antennas so that they do not receive interfering signals from the terrestrial microwave radio links that are using the same frequency assignment. In the 6/4-GHz band, synchronous satellites are assigned an orbital spacing of 2° (U.S. standard).

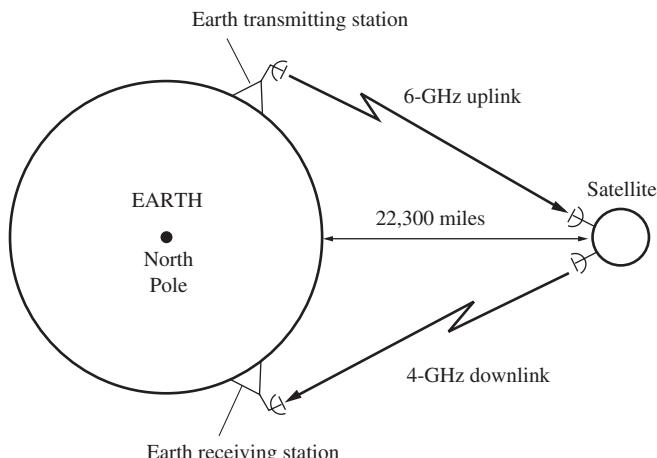


Figure 8–8 Communications satellite in geosynchronous orbit.

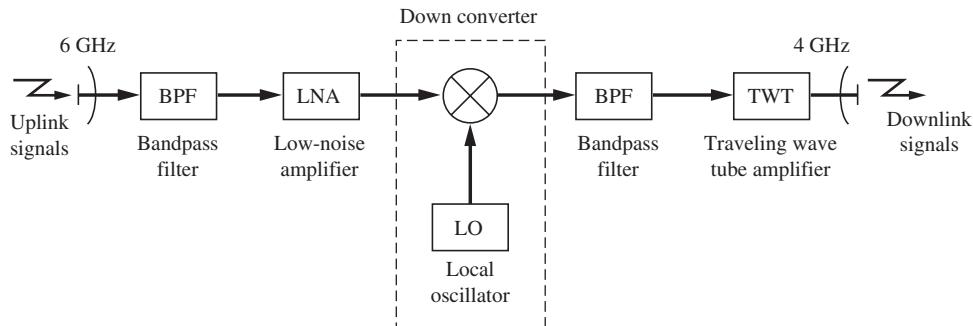


Figure 8–9 Simplified block diagram of a communications satellite transponder.

Newer satellites operate in higher frequency bands, because there are so few vacant spectral assignments in the 6/4-GHz band (C band). The Ku band satellites use 14 GHz on the uplink and 12 GHz on the downlink, with an orbital spacing of 3°. Some new Ku-band satellites have high-power amplifiers that feed 120 to 240 W into their transmitting antenna, as compared with 20 to 40 W for low- or medium-power satellites. High-power satellites—called direct-broadcast satellites (DBS)—provide TV service directly to the homeowner, who has a small receiving antenna (2 ft or less in diameter). The resulting system is called the **digital satellite system (DSS)** by the FCC.

Each satellite has a number of *transponders* (receiver-to-transmitter) aboard to amplify the received signal from the uplink and to down-convert the signal for transmission on the downlink. (See Fig. 8–9.) Figure 8–9 shows a “bent-pipe transponder” that does not demodulate the received signal and perform signal processing but acts as a high-power-gain down converter. Most transponders are designed for a bandwidth of 36, 54, or 72 MHz, with 36 MHz being the standard used for C-band (6/4-GHz) television relay service. As technology permits, processing transponders have come into use since an improvement in error performance (for digital signaling) is realized.


Each satellite is assigned a synchronous orbit position and a frequency band in which to operate. In the 6/4-GHz band, each satellite is permitted to use a 500-MHz-wide spectral assignment, and a typical satellite has 24 transponders aboard, with each transponder using 36 MHz of the 500-MHz bandwidth assignment. The satellites reuse the same frequency band by having 12 transponders operating with vertically polarized radiated signals and 12 transponders with horizontally polarized signals.[†] A typical 6/4-GHz frequency assignment for satellites is shown in Fig. 8–10. The transponders are denoted by C1 for channel 1, C2 for channel 2, and so on. These satellites are used mainly to relay signals for CATV systems.

Digital and Analog Television Transmission

TV may be relayed via satellite using either digital or analog transmission techniques.

For digital transmission, the baseband video signal is sampled and digitized. The data are usually compressed to conserve the bandwidth of the modulated satellite signal. The data are compressed by removing redundant video samples within each frame of the picture and removing redundant samples that occur frame to frame.

[†] A vertically polarized satellite signal has an E field that is oriented vertically (parallel with the axis of rotation of the Earth). In horizontal polarization, the E field is horizontal.

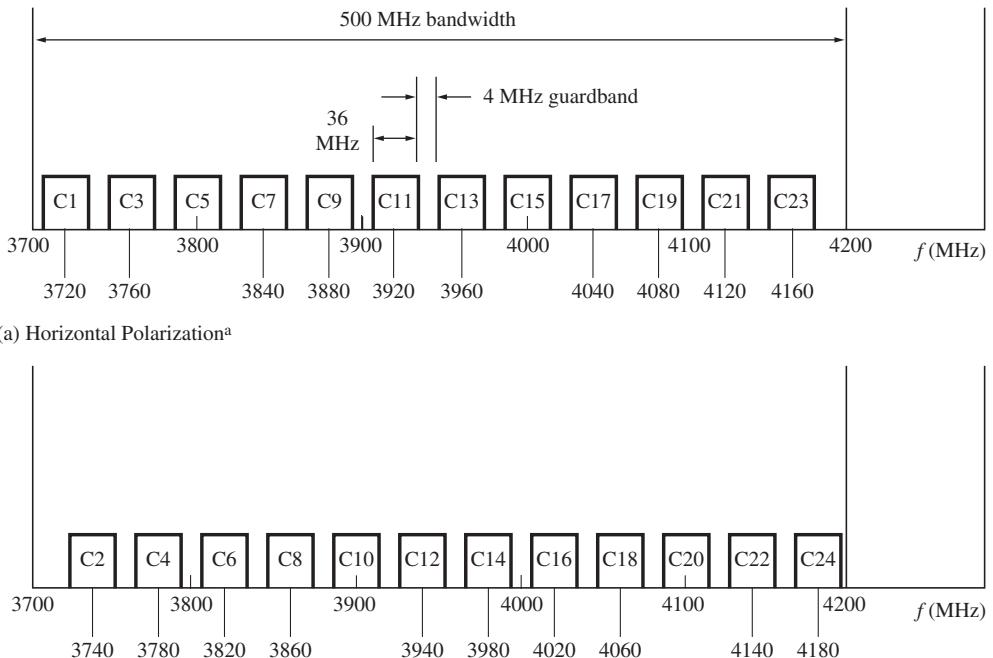

^aThese are the polarizations used for the Galaxy Satellites. Some of the other satellites use opposite polarization assignments.

Figure 8-10 6/4-GHz satellite transponder frequency plan for the downlink channels.
(For the uplink frequency plan, add 2225 MHz to the numbers given above.)

One example of digital transmission is the 4DTV system that was developed in 1997 by General Instrument, now a division of Motorola. It is used on 6/4-GHz (C band) satellites. For details about this system, see the topic 4DTV in Wikipedia.

Another example is the Digital Satellite System (DSS), which uses 14/12-Ghz (Ku band) satellites. In the United States, DSS subscription TV service is provided by the DirecTV and the Dish networks. For these systems, the baseband video for each TV channel is digitized and compressed using the Motion Pictures Experts Group (MPEG) standard [Pancha and Zarki, 1994]. This compression gives an average video data rate of 3 to 6 Mb/s for each channel, depending on the amount of motion in the video. Data for about six TV channels (video plus multichannel audio) are TDM for transmission over each satellite transponder using QPSK modulation [Thomson, 1994]. Furthermore, adaptive data compression is used to minimize the data rate of the TDM signal because the data for some of the TV channels in the TDM data stream may be encoded at a lower data rate than others, depending on the amount of motion (and other properties) of each video source. More details about the DSS system are given in Study-Aid Examples SA8-1 and SA8-2. Digital encoding for digital TV (DTV) is discussed in Sec. 8-9.

DVB-S2 (Digital Video Broadcasting by Satellite, Second Generation) is a popular format used in Europe. In the United States, DirecTV is switching to the DVB-S2 format and the

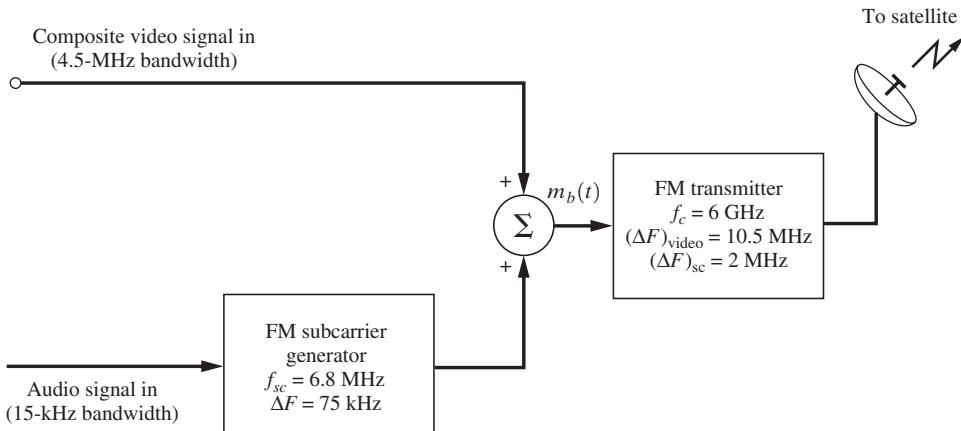


Figure 8–11 Transmission of broadcast-quality analog TV signals from a ground station.

Dish network is testing it. DVB-S2 uses QPSK or 8PSK digital modulation with an MPEG-2 data stream. See DVB-S2 in Wikipedia for more details.

For analog TV transmission via satellite, the baseband video for a single TV channel is frequency modulated onto a carrier. For example, to relay TV signals to the head end of CATV systems, C-band satellites with 24 transponders are often used (as shown in Fig. 8–10). For each transponder, the 4.5-MHz bandwidth baseband composite video signal of a single TV channel is frequency modulated onto a 6-GHz carrier, as shown in Fig. 8–11. The composite visual signal consists of the black-and-white video signal, the color subcarrier signals, and the synchronizing pulse signal, as discussed in Sec. 8–9. The aural signal is also relayed over the same transponder by frequency modulating it onto a 6.8-MHz subcarrier that is frequency-division-multiplexed with the composite video signal. The resulting wideband signal frequency modulates the transmitter.

The bandwidth of the 6-GHz FM signal may be evaluated by using Carson's rule. The peak deviation of the composite video is 10.5 MHz, and the peak deviation of the subcarrier is 2 MHz, giving an overall peak deviation of $\Delta F = 12.5$ MHz. The baseband bandwidth is approximately 6.8 MHz. The transmission bandwidth is

$$B_T = 2(\Delta F + B) = 2(12.5 + 6.8) = 38.6 \text{ MHz} \quad (8-1)$$

which is accepted by the 36-MHz transponder. In addition, other wideband aural signals (0 to 15 kHz) can also be relayed by using FM subcarriers. Some typical subcarrier frequencies that are used are 5.58, 5.76, 6.2, 6.3, 6.48, 6.8, 7.38, and 7.56 MHz.

Data and Telephone Signal Multiple Access

Satellite relays provide a channel for data and VF (telephone) signaling similar to conventional terrestrial microwave radio links. That is, data may be time-division multiplexed into DS-1, DS-2, and so on, types of signals and (digitally) modulated onto a carrier for transmission via a satellite.

Satellite communication systems do differ from terrestrial microwave links in the techniques used for *multiple access* of a single transponder by multiple uplink and multiple downlink stations. Four main methods are used for multiple access:

1. *Frequency-division multiple access* (FDMA), which is similar to FDM.
2. *Time-division multiple access* (TDMA), which is similar to TDM.[†]
3. *Code-division multiple access* (CDMA) or *spread-spectrum multiple access* (SSMA).
4. *Space-division multiple access* (SDMA) where narrow-beam antenna patterns are switched from one direction to another.

In addition, either of the following may be used:

1. A *fixed-assigned multiple-access* (FAMA) mode using either FDMA, TDMA, or CDMA techniques.
2. A *demand-assigned multiple-access* (DAMA) mode using either FDMA, TDMA, or CDMA.


In the FAMA mode, the FDMA, TDMA, or CDMA format does not change, even though the traffic load of various Earth stations changes. For example, there is more telephone traffic between Earth stations during daylight hours (local time) than between these stations in the hours after midnight. In the FAMA mode, a large number of satellite channels would be idle during the early morning hours, since they are fixed assigned. In the DAMA mode, the FDMA and TDMA formats are changed as needed, depending on the traffic demand of the Earth stations involved. Consequently, the DAMA mode uses the satellite capacity more efficiently, but it usually costs more to implement and maintain.

In CDMA the different users share the same frequency band simultaneously in time, as opposed to FDMA and TDMA, where users are assigned different frequency slots or time slots. With CDMA, each user is assigned a particular digitally encoded waveform $\varphi_j(t)$ that is (nearly) orthogonal to the waveforms used by the others. (See Secs. 2–4 and 5–13.) Data may be modulated onto this waveform, transmitted over the communication system, and recovered. For example, if one bit of data, m_j , is modulated onto the waveform, the transmitted signal from the j th user might be $m_j \varphi_j(t)$, and the composite CDMA signal from all users would be $w(t) = \sum_j m_j \varphi_j(t)$. The data from the j th user could be recovered from the CDMA waveform by evaluating $\int_0^T w(t)\varphi_j(t) dt = m_j$, where T is the length of encoded waveform $\varphi_j(t)$. Gold codes are often used to obtain the encoded waveforms.


Example 8–1 SPADE SYSTEM

The *Intelsat* series satellites may also be operated in a DAMA mode using an FDMA format consisting of a single QPSK carrier for each telephone (VF) channel. This type of signaling is called *single channel per carrier* (SCPC), in which 800 QPSK signals may be accommodated in


[†] *Satellite-switched time-division multiple access* (SS-TDMA) can also be used. With SS-TDMA satellites, different narrow-beam antennas are switched in at the appropriate time in the TDMA frame period to direct the transmit and receive beams to the desired direction. Thus, with multiple SS-TDMA beams, the same transmit and receive frequencies may be reused simultaneously, so that the capacity of the SS-TDMA satellite is much larger than that of a TDMA satellite. The *Intelsat* VIII is an SS-TDMA satellite.

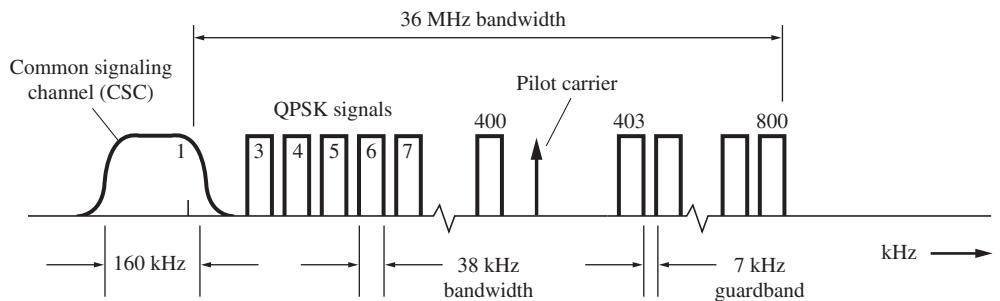

(a) Transponder Frequency Allocation

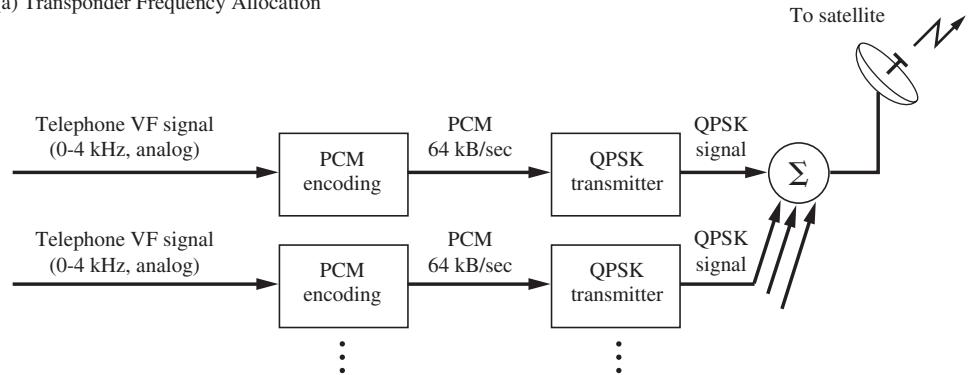

(b) Possible QPSK SCPC Transmitter Configuration

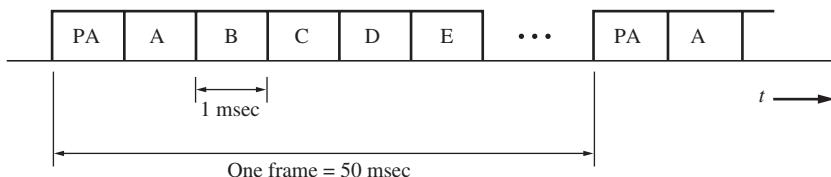

(c) TDMA CSC Signaling Format

Figure 8-12 SPADE satellite communication system for telephone VF message transmission.

the 36-MHz bandwidth of the transponder, as shown in Fig. 8-12a. Thus 800 VF messages may be transmitted simultaneously through one satellite transponder, where each QPSK signal is modulated by a 64-kb/s PCM (digitized) voice signal (studied earlier in Example 3-1 and used as inputs to the North American digital hierarchy shown in Fig. 3-40). This SCPC-DAMA technique, illustrated in Fig. 8-12, is called the *SPADE* system, which is an acronym for single channel per carrier, pulse code modulation, multiple access, demand assignment equipment [Edelson and Werth, 1972]!

The demand assignment of the carrier frequency for the QPSK signal to a particular Earth station uplink is carried out by TDM signaling in the *common signaling channel* (CSC) (see Fig. 8-12a). The CSC consists of a 128-kb/s PSK signal that is time shared among the Earth

stations by using a TDMA format, as shown in Fig. 8–12c. PA denotes the synchronizing preamble that occurs at the beginning of each frame, and A, B, C, and so on denote the 1-msec time slots that are reserved for transmission by Earth stations A, B, C, and so on. In this way 49 different Earth stations may be accommodated in the 50-msec frame. For example, if Earth station B wishes to initiate a call to Earth station D, station B selects a QPSK carrier frequency randomly from among the idle channels that are available and transmits this frequency information along the address of station D (the call destination) in the station B-TDMA time slot. If it is assumed that the frequency has not been selected by another station for another call station D will acknowledge the request in its TDMA time slot. This acknowledgement would be heard by station B about 600 msec after its TDMA signaling request since the round trip time delay to the satellite is 240 ms, plus equipment delays and the delay to the exact time slot assigned to station D with respect to that of station B. If another station, say station C, had selected the same frequency during the request period, a busy signal would be received at station B, and station B would randomly select another available frequency and try again. When the call is over, disconnect signals are transmitted in the TDMA time slot and that carrier frequency is returned for reuse. Because the CSC signaling rate is 128 kb/s and each time slot is 1 ms in duration, 128 bits are available for each accessing station to use for transmitting address information, frequency request information, and disconnect signaling.

In practice, because only 49 time slots are available for the TDMA mode, a number of the SCPC frequencies are assigned on a fixed basis.

In FDMA, such as the SPADE system, when the carriers are turned on and off on demand, there is amplitude modulation on the composite 36-MHz-wide signal that is being amplified by the transponder TWT. Consequently, the drive level of the TWT has to be “backed off” so that the amplifier is not saturated and will be sufficiently linear. Then, the intermodulation products will be sufficiently low. On the other hand, if a single constant-amplitude signal (such as a single-wideband FM signal used in relaying television signals) had been used, IM products would not be a consideration, and the amplifier could be driven harder to provide the fully saturated power output level.

As indicated earlier, TDMA is similar to TDM, where the different Earth stations send up bursts of RF energy that contain packets of information. During the time slot designated for a particular Earth station, that station's signal uses the bandwidth of the whole transponder. (See Fig. 8–13.) Since the Earth stations use a constant envelope modulation technique, such as QPSK, and since only one high-rate modulated signal is being passed through the transponder during any time interval, no interfering IM products are generated (as compared with the FDMA technique described earlier). Thus, the final TWT amplifier in the satellite may be driven into saturation for more power output. This advantage of TDMA over FDMA may be compared with the main disadvantage of the TDMA technique. The disadvantage of TDMA is that strict burst timing is required at the Earth station in order to prevent collision of the bursts at the satellite. In other words, the burst from a particular Earth station has to arrive at the satellite in the exact time slot designated for that station, so that its signal will not interfere with the bursts that are arriving from other Earth stations that are assigned adjacent time slots. Because the ground stations are located at different distances from the satellite and may use different equipment configurations, the time delay from each Earth station to the satellite will be different, and this must be taken into account when the transmission time for each Earth station is computed. In addition, the satellite may be moving with respect to the Earth

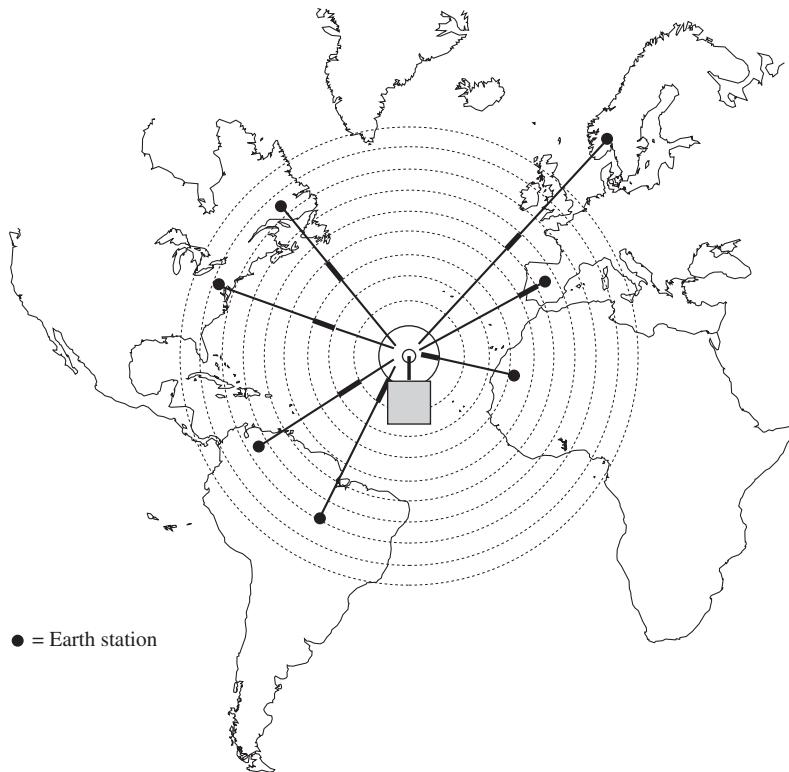


Figure 8–13 Interleaving of bursts in a TDMA satellite.

station, which means that the time delay is actually changing with time. Another disadvantage of TDMA is that the Earth stations are probably transmitting data that have arrived from synchronous terrestrial lines; consequently, the Earth station equipment must contain a large memory in which to buffer the data, which are read out at high speed when the packet of information is sent to the satellite.

A typical TDMA frame format for the data being relayed through a satellite is shown in Fig. 8–14. In this example, station B is sending data to stations A, E, G, and H. One frame consists of data arriving from each Earth station. At any time, only one Earth station provides the time reference signal for the other Earth stations to use for computation of their transmitting time for their data bursts (frame synchronization). The burst lengths from the various stations could be different depending on the traffic volume. The second part of the figure shows an exploded view of a typical burst format that is transmitted from station B. This consists of two main parts, the preamble and data that are being sent to other Earth stations from station B. The preamble includes a guard time before transmission is begun. Then, a string of synchronization characters is transmitted that give the carrier sync recovery loops and bit timing recovery loops (in the ground station receivers) time to lock onto this burst from station B. The end of the preamble usually contains a unique word that identifies the burst as coming from station B and might indicate the addresses (stations) for which the data are intended.

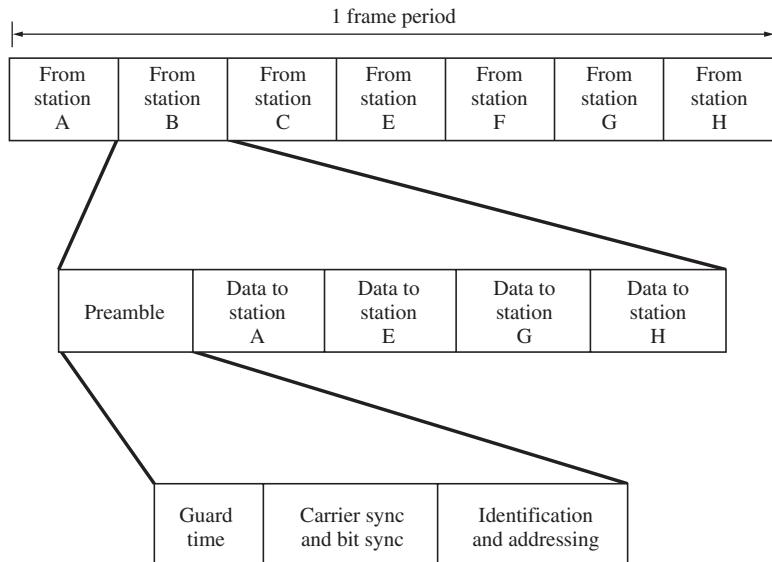


Figure 8-14 Typical TDMA frame format.

Another multiple-access method that is similar to TDMA is the *ALOHA* technique [Lam, 1979]. Here the multiple users send bursts of data, called *packets*, whenever they wish. When two or more of the bursts overlap in time, there is a *collision*. When a collision occurs, the users involved retransmit their packets after a random time delay, and, hopefully, a second collision will not occur. If it does occur, the retransmission process is repeated until each party is successful. This technique has the advantage of being relatively inexpensive to implement, but it will not work if there is heavy traffic loading on the satellite, in which case the satellite becomes saturated with colliding packets, and the collisions can be avoided only by stopping all new transmissions and increasing the random delay required before retransmission. A more elaborate technique is called *slotted ALOHA*. With this method, the packets are transmitted at random, but only in certain time slots. This avoids collisions due to partial packet overlap.

Very small aperture terminals (VSATs) have become popular with the availability of Ku-band satellites and with the recent advances that have made low-cost terminals possible. “Very small aperture” implies that these systems use Earth-terminal antennas that are relatively small (about 1 or 2 m in diameter). Solid-state power amplifiers (1 to 2 W), low-cost frequency converters, digital processing, and VLSI circuits have made VSATs feasible. The objective of VSAT systems is to provide low-cost data and voice transmission directly to users such as auto dealerships, banks (automatic teller machines), brokerage firms, pipeline companies (monitor and control), hotels and airlines (reservations), retail stores (data networks), and corporations (point-to-multipoint transmission). Typically, VSATs offer high-quality transmission (BERs of less than 10^{-7} for 99.5% of the time) at data rates from 100 b/s to 64 kb/s [Chakraborty, 1988; Maral, 1995]. Many users share a single satellite transponder via SCPC, TDMA, or CDMA so that the user’s cost can be substantially less than that for the same type

of service provided by the long-distance public telephone network [Dorf, 1993, p. 2201; Maral, 1995; Rana, McCoskey, and Check, 1990]. For more information on VSAT systems, see [Pratt *et al.*, 2003].

Satellite Radio Broadcasting

Satellite Digital Audio Radio Service (SDARS) is the FCC term for using satellites to broadcast multiple digital audio streams to subscribers. Typically the charge to a subscriber is around \$13.00 per month for about 100 audio channels. The audio consists of music, news, sports, weather, and other entertainment channels. In the United States, the FCC licensed two providers: Sirius Radio and XM Radio. In July 2008, Sirius acquired XM and the combined company is called Sirius XM Radio, Inc. Some of the technical parameters for these SDARS systems are shown in Table 8–3.

Sirius uses three satellites placed in *elliptical* orbits each with a period of 24 hours such that an individual satellite remains over a site for about 16 hours at a time. At any time, two of


TABLE 8–3 U.S. DIGITAL-AUDIO SATELLITE SYSTEMS

Satellite Parameters	Sirius Radio Satellite System	XM Radio Satellite System
Number of satellites	3	2
Satellite transmit power	3kW EIRP	228W (TWT output)
Satellite orbit	Elliptical 16 hours overhead	Geostationary, satellites at 85°W and 115°W longitude
Elevation angle to satellite	>60° typical	>45° typical
Uplink frequencies	7,060.0–7,072.5 MHz	7,050.0–7,075.0 MHz
Downlink frequencies	2,320.0–2,324.0 MHz and 2,328.5–2,332.5 MHz	2,332.5–2,336.5 MHz and 2,341.0–2,345.0 MHz
Downlink signal bandwidth	4.2 MHz	2 × 1.84 MHz
Satellite output modulation	TDM/QPSK	TDM/QPSK
TDM data rate ^a	4.4 Mb/s	4.0 Mb/s
Source data coding	Lucent PAC ^b	Lucent PAC ^b
Number of TDM music channels	about 50	about 50
Music channel data rate	64 kb/s (variable)	64 kb/s (variable)
Number of TDM talk channels	about 50	about 50
Talk channel data rate	24 kb/s	24 kb/s
Terrestrial Repeater Parameters		
Number of repeaters	about 105 in 46 cities	about 1,500 in 70 cities
Repeater EIRP	5 kW per antenna sector	most at 2kW but \leq 10 kW
Output frequencies	2,324.0–2,328.5 MHz	2,336.5–2,341.0 MHz
Repeater modulation	TDM/OFDM	TDM/OFDM
Modulation delay ^c	4–5 sec	4–5 sec


^a Before FEC. Concatenated coding is added for FEC: Reed-Solomon outer code, rate 1/2; convolutional inner code

^b PAC = Perceptual Audio Codec

^c with respect to the satellite modulation

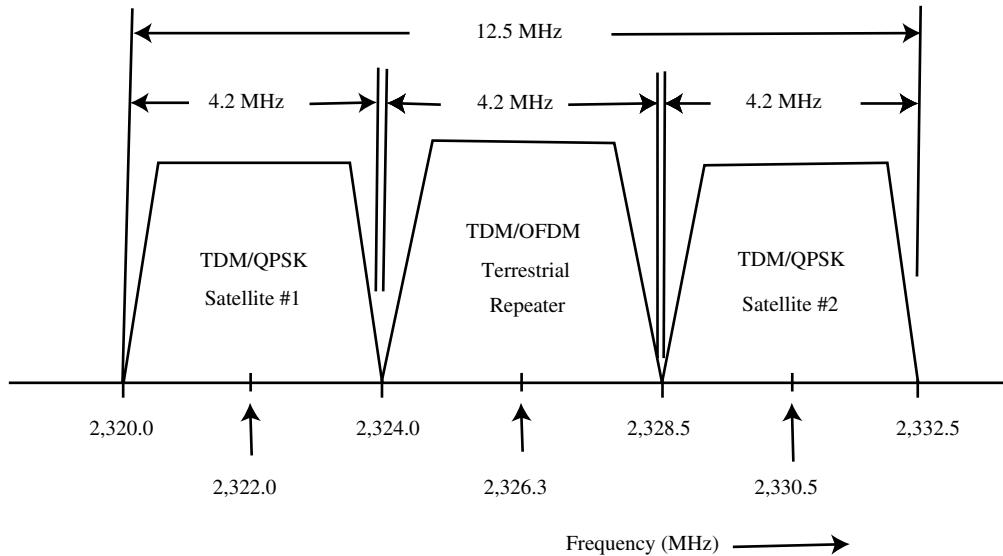

(a) Sirius radio system

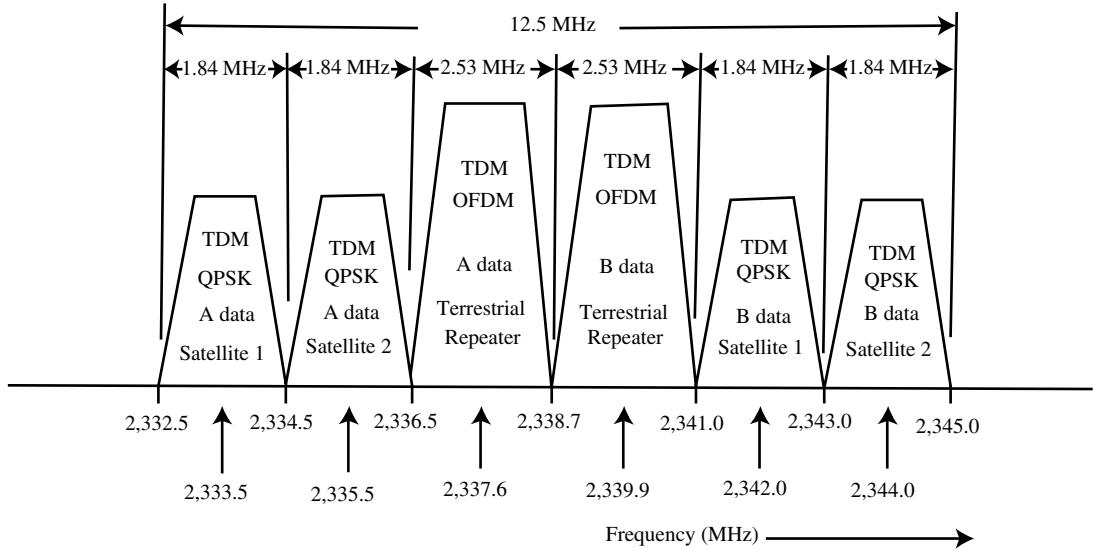

(b) XM radio system

Figure 8–15 Spectral allocations for U.S. digital-audio satellite systems.

the satellites appear overhead so data is received from both simultaneously. This provides for redundancy (i.e., path diversity reception). Frequency diversity is also provided by transmitting the data redundantly on two different downlink bands as shown in Fig. 8–15a. Time diversity is provided by a data delay of 4 seconds on one of the satellites. Using these diversity techniques, outage effects and data errors are minimized.

XM uses two *geostationary* (GEO) satellites located at 85° W and 115° W longitude above the equator. In the United States, signals can be received simultaneously from both satellites. Path, frequency and time diversity are also used to minimize outage effects and data errors.

The SDARS systems have downlink frequencies in the 2.3 Ghz band (see Table 8–3) and each SDARS system is assigned a channel with 12.5 MHZ bandwidth as shown in Fig. 8–15. The bit streams of the multiple audio channels are time-division-multiplexed (TDM) to provide a composite data rate of about 4 Mb/s. In addition, concatenated forward-error-correction coding (FEC) is added this TDM data stream. This coded data stream is QPSK modulated on the downlink signal provided to the subscriber. Unfortunately, these received satellite TDM/QPSK signals will be intermittently blocked (i.e., attenuated) by large buildings, tunnels, and subways. There may also be multipath effects due to reflections from the buildings and other objects. These effects occur mainly in cities and not in rural areas. To counteract these effects, terrestrial repeaters are placed in and around urban and city areas. The parameters of these repeaters are shown in Table 8–3. They use OFDM and have frequency assignments as shown in Fig. 8–15. The data on the repeaters are delayed about 4 seconds with respect to the data received from the satellites. These repeaters provide additional space, time and frequency diversity reception for additional system reliability.

For more information about communication satellite systems, the reader is referred to an excellent book [Pratt *et al*, 2003].

8–6 LINK BUDGET ANALYSIS

In this section, formulas will be developed for the signal-to-noise ratio at the detector input as a function of the transmitted *effective isotropic radiated power* (EIRP), the free-space loss, the receiver antenna gain, and the receiver system noise figure. These results will allow us to evaluate the quality of the receiver output (as measured by the probability of bit error for digital systems and output signal-to-noise ratio for analog systems), provided that the noise characteristics of the receiver detector circuit are known.

Signal Power Received

In communication systems, the received signal power (as opposed to the voltage or current level) is the important quantity. The *power* of the received signal is of prime importance when trying to *minimize* the effect of *noise sources* that feed into the system and are amplified. The voltage gain, current gain, and impedance levels have to be such that the required power gain is achieved. In FET circuits, this accomplished by using relatively large voltage levels and small currents (high-impedance circuitry). With bipolar transistors, power gain is achieved with relatively small voltages and large currents (low-impedance circuitry).

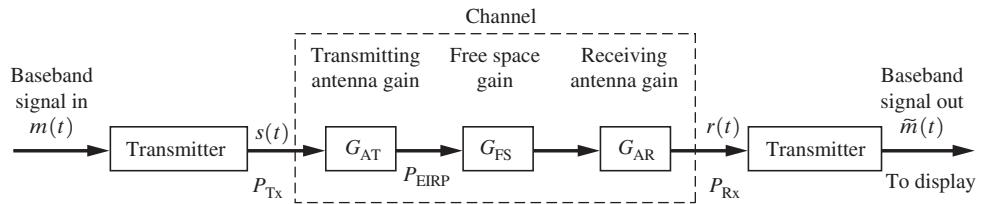


Figure 8–16 Block diagram of a communication system with a free-space transmission channel.

A block diagram of a communication system with a free-space transmission channel is shown in Fig. 8–16. The overall power gain (or power transfer function) of the channel is

$$\frac{P_{Rx}}{P_{Tx}} = G_{AT}G_{FS}G_{AR} \quad (8-2)$$

where P_{Tx} is the signal power into the transmitting antenna, G_{AT} is the transmitting antenna power gain, G_{FS} is the free-space power gain[†] (which is orders of magnitude less than one in typical communication systems), G_{AR} is the receiving antenna power gain, and P_{Rx} is the signal power into the receiver.

To use this relationship, these gains should be expressed in terms of useful antenna and free-space parameters [Kraus, 1986]. Here, G_{AT} and G_{AR} are taken to be the power gains with respect to an isotropic antenna.[‡] The EIRP is

$$P_{EIRP} = G_{AT}P_{Tx} \quad (8-3)$$

The antenna power gain is defined as

$$G_A = \frac{\text{radiation power density of the actual antenna in the direction of maximum radiation}}{\text{radiation power density of an isotropic antenna with the same power input}}$$

where the power density (measured in W/m^2) is evaluated at the same distance, d , for both antennas. The gains are for some practical antennas is given in Table 8–4.

The power density (W/m^2) of an isotropic antenna at a distance d from the antenna is

$$\text{power density at } d = \frac{\text{transmitted power}}{\text{area of a sphere with radius } d} = \frac{P_{EIRP}}{4\pi d^2} \quad (8-4)$$

The FCC and others often specify the strength of an electromagnetic field by the field intensity, \mathcal{E} (V/m), instead of power density (W/m^2). The two are related by

$$\text{power density} = \frac{\mathcal{E}^2}{377} \quad (8-5)$$

[†] A gain transfer function is the output quantity divided by the input quantity, whereas a loss transfer function is the input quantity divided by the output quantity.

[‡] An isotropic antenna is a nonrealizable theoretical antenna that radiates equally well in all directions and is a useful reference for comparing practical antennas.

TABLE 8–4 ANTENNA GAINS AND EFFECTIVE AREAS

Type of Antenna	Power Gain, G_A (absolute units)	Effective Area, A_e (m ²)
Isotropic	1	$\lambda^2/4\pi$
Infinitesimal dipole or loop	1.5	$1.5\lambda^2/4\pi$
Half-wave dipole	1.64	$1.64\lambda^2/4\pi$
Horn (optimized), mouth area, A	$10A/\lambda^2$	$0.81A$
Parabola or “dish” with face area, A	$7.0A/\lambda^2$	$0.56A$
Turnstile (two crossed dipoles fed 90° out of phase)	1.15	$1.15\lambda^2/4\pi$

where the power density and the field strength are evaluated at the same point in space and 377Ω is the *free-space intrinsic impedance*. If the receiving antenna is placed at d meters from the transmitting antenna, it will act like a catcher’s mitt and intercept the power in an effective area of $(A_e)_{Rx}$ (m²), so that the received power will be

$$P_{Rx} = G_{AT} \left(\frac{P_{Tx}}{4\pi d^2} \right) (A_e)_{Rx} \quad (8-6)$$

where the gain of the transmitting antenna (with respect to an isotropic antenna), G_{AT} , has been included. Table 8–4 also gives the effective area for several types of antennas. The gain and the effective area of an antenna are related by

$$G_A = \frac{4\pi A_e}{\lambda^2} \quad (8-7)$$

where $\lambda = c/f$ is the wavelength, c being the speed of light (3×10^8 m/s) and f the operating frequency in Hz. An antenna is a *reciprocal element*. That is, it has the same gain properties whether it is transmitting or receiving. Substituting Eq. (8–7) into Eq. (8–6), we obtain

$$\frac{P_{Rx}}{P_{Tx}} = G_{AT} \left(\frac{\lambda}{4\pi d} \right)^2 G_{AR} \quad (8-8)$$

where the free-space gain is

$$G_{FS} = \left(\frac{\lambda}{4\pi d} \right)^2 = \frac{1}{L_{FS}} \quad (8-9)$$

and L_{FS} is the free-space path loss (absolute units). The channel gain, expressed in dB, is obtained by taking $10 \log [\cdot]$ of both sides of Eq. (8–2):

$$(G_{channel})_{dB} = (G_{AT})_{dB} - (L_{FS})_{dB} + (G_{AR})_{dB} \quad (8-10)$$

In Eq. (8–10), the free-space loss[†] is

$$(L_{FS})_{\text{dB}} = 20 \log \left(\frac{4\pi d}{\lambda} \right) \text{dB} \quad (8-11)$$

For example, the free-space loss at 4 GHz for the shortest path to a synchronous satellite from Earth (22,300 miles) is 195.6 dB.

Note that from Eq. (8–8), the received power increases as the square of the wavelength (free space condition). That is, if the carrier frequency is reduced by a factor of 2, then the received power will increase by a factor of 4. This is equivalent to the loss decreasing by 6 dB as shown by Eq. (8–11).

Thermal Noise Sources

The noise power generated by a thermal noise source will be studied because the receiver noise is evaluated in terms of this phenomenon. A conductive element with two terminals may be characterized by its resistance, R ohms. This resistive, or lossy, element contains free electrons that have some random motion if the temperature of the resistor is above absolute zero. This random motion causes a noise voltage to be generated at the terminals of the resistor. Although the noise is small, when the noise is amplified by a high-gain receiver it can become a problem. (If no noise were present, we could communicate to the edge of the universe with infinitely small power, since the signal could always be amplified without having noise introduced.)

This physical lossy element, or physical resistor, can be modeled by an equivalent circuit that consists of a noiseless resistor in series with a noise voltage source. (See Fig. 8–17.) From quantum mechanics, it can be shown that the (normalized) power spectrum corresponding to the voltage source is [Van der Ziel, 1986]

$$\mathcal{P}_v(f) = 2R \left[\frac{h|f|}{2} + \frac{h|f|}{e^{h|f|/(kT)} - 1} \right] \quad (8-12)$$

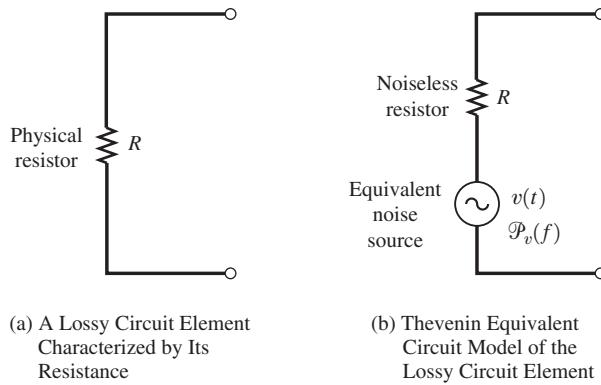


Figure 8–17 Thermal noise source.

[†] This free-space path loss expression can be modified to include effects of a multipath channel within an urban building environment. [See Eq. (8–67).]

where

R = value of the physical resistor (ohms),

$h = 6.63 \times 10^{-34}$ J-sec is Planck's constant,

$k = 1.38 \times 10^{-23}$ J/K is Boltzmann's constant, where K is kelvin,

$T = (273 + C)$ is the absolute temperature of the resistor (kelvin).

At room temperature for frequencies below 1,000 GHz, $[h|f|]/(kT) < 1/5$, so that $e^x = 1 + x$ is a good approximation. Then, Eq. (8–12) reduces to

$$\mathcal{P}_v(f) = 2RkT \quad (8-13)$$

This equation will be used to develop other formulas in this text since the RF frequencies of interest are usually well below 1,000 GHz and since we are not dealing with temperatures near absolute zero.

If the open-circuit noise voltage that appears across a physical resistor is read by a true RMS voltmeter having a bandwidth of B hertz, then, using Eq. (2–67), the reading would be

$$V_{rms} = \sqrt{\langle v^2 \rangle} = \sqrt{2 \int_0^B \mathcal{P}_v(f) df} = \sqrt{4kTBR} \quad (8-14)$$

Characterization of Noise Sources

Noise sources may be characterized by the maximum amount of noise power or PSD that can be passed to a load.

DEFINITION. The *available noise power* is the *maximum*[†] actual (i.e., not normalized) power that can be drawn from a source. The *available PSD* is the *maximum* actual (i.e., not normalized) PSD that can be obtained from a source.

For example, the available PSD for a thermal noise source is easily evaluated using Fig. 8–18 and Eq. (2–142):

$$\mathcal{P}_a(f) = \frac{\mathcal{P}_v(f)|H(f)|^2}{R} = \frac{1}{2} kT \text{ W/Hz} \quad (8-15)$$

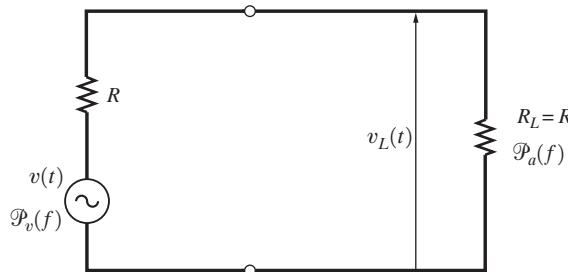


Figure 8–18 Thermal source with a matched load.

[†] The maximum power or maximum PSD is obtained when $Z_L(f) = Z_s^*(f)$, where $Z_L(f)$ is the load impedance and $Z_s^*(f)$ is the conjugate of the source impedance.

where $H(f) = \frac{1}{2}$ for the resistor divider network. The available power from a thermal source in a bandwidth of B hertz is

$$P_a = \int_{-B}^B \mathcal{P}_a(f) df = \int_{-B}^B \frac{1}{2} kT df$$

or

$$P_a = kTB \quad (8-16)$$

This equation indicates that the available noise power from a thermal source does *not* depend on the value of R , even though the open-circuit RMS voltage does.

The available noise power from a source (not necessarily a thermal source) can be specified by a number called the noise temperature.

DEFINITION. The *noise temperature* of a source is given by

$$T = \frac{P_a}{kB} \quad (8-17)$$

where P_a is the available power from the source in a bandwidth of B hertz.

In using this definition, it is noted that if the source happens to be of thermal origin, T will be the temperature of the device in kelvin, but if the source is not of thermal origin, the number obtained for T may have nothing to do with the physical temperature of the device.

Noise Characterization of Linear Devices

A linear device with internal noise generators may be modeled as shown in Fig. 8-19. Any device that can be built will have some internal noise sources. As shown in the figure, the device could be modeled as a noise-free device having a power gain $G_a(f)$ and an excess noise source at the output to account for the internal noise of the actual device. Some examples of

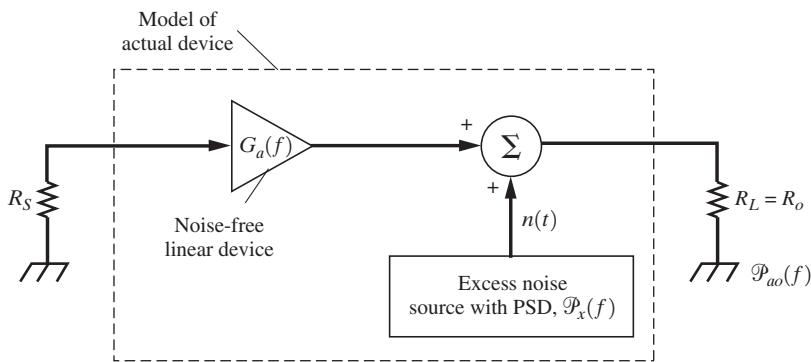


Figure 8-19 Noise model for an actual device.

linear devices that have to be characterized in receiving systems are lossy transmission lines, RF amplifiers, down converters, and IF amplifiers.

The power gain of the devices is the available power gain.

DEFINITION. The *available power gain* of a linear device is

$$G_a(f) = \frac{\text{available PSD out of the device}}{\text{available PSD out of the source}} = \frac{\mathcal{P}_{ao}(f)}{\mathcal{P}_{as}(f)} \quad (8-18)$$

When $\mathcal{P}_{ao}(f)$ is measured to obtain $G_a(f)$, the source noise power is made large enough that the amplified *source* noise that appears at the output dominates any other noise. In addition, note that $G_a(f)$ is defined in terms of actual (i.e., not normalized) PSD. In general, $G_a(f)$ will depend on the driving source impedance, as well as on elements within the device itself, but it does *not* depend on the load impedance. If the source impedance and the output impedance of the device are equal, $G_a(f) = |H(f)|^2$, where $H(f)$ is the voltage or current transfer function of the linear device.

To characterize the goodness of a device, a figure of merit is needed that compares the actual (noisy) device with an ideal device (i.e., no internal noise sources). Two figures of merit, both of which tell us the same thing—namely, how bad the noise performance of the actual device is—are universally used. They are noise figure and effective input-noise temperature.

DEFINITION. The *spot noise figure* of a linear device is obtained by terminating the device with a thermal noise source of temperature T_0 on the input and a matched load on the output as indicated in Fig. 8–19. The spot noise figure is

$$F_s(f) = \frac{\text{measured available PSD out of the actual device}}{\text{available PSD out of an ideal device with the same available gain}}$$

or

$$F_s(f) = \frac{\mathcal{P}_{ao}(f)}{(kT_0/2)G_a(f)} = \frac{(kT_0/2)G_a(f) + P_x(f)}{(kT_0/2)G_a(f)} > 1 \quad (8-19)$$

The value of R_s is the same as the source resistance that was used when $G_a(f)$ was evaluated. A standard temperature of $T_0 = 290$ K is used, as this is the value adopted by the IEEE [Haus, 1963].

$F_s(f)$ is called the *spot noise figure* because it refers to the noise characterization at a particular “spot” or frequency in the spectrum. Note that $F_s(f)$ is always greater than unity for an actual device, but it is nearly unity if the device is almost an ideal device. $F_s(f)$ is a function of the source temperature, T_0 . Consequently, when the noise figure is evaluated, a standard temperature of $T_0 = 290$ K is used. This corresponds to a temperature of 62.3°F.

Often an average noise figure instead of a spot noise figure is desired. The average is measured over some bandwidth B .

DEFINITION. The *average noise figure* is

$$F = \frac{\mathcal{P}_{ao}}{kT_0 \int_{f_0-B/2}^{f_0+B/2} G_a(f) df} \quad (8-20)$$

where

$$P_{ao} = 2 \int_{f_0-B/2}^{f_0+B/2} \mathcal{P}_{ao}(f) df$$

is the measured available output in a bandwidth B hertz wide centered on a frequency of f_0 and $T_0 = 290$ K.

If the available gain is constant over the band so that $G_a(f) = G_a$ over the frequency interval $(f_0 - B/2) \leq f \leq (f_0 + B/2)$, the noise figure becomes

$$F = \frac{P_{ao}}{kT_0BG_a} \quad (8-21a)$$

The noise figure is often measured by using the Y -factor method. This technique is illustrated by Prob. 8-19. The Agilent N8973A noise figure analyzer uses the Y -factor method for measuring the noise figure of devices.

The noise figure can also be specified in decibel units:[†]

$$F_{\text{dB}} = 10 \log(F) = 10 \log \left(\frac{P_{ao}}{kT_0BG_a} \right) \quad (8-21b)$$

For example, suppose that the manufacturer of an RF preamplifier specifies that an RF preamp has a 2-dB noise figure. This means that the actual noise power at the output is 1.58 times the power that would occur due to amplification of thermal noise from the input. The other figure of merit for evaluating the noise performance of a linear device is the effective input-noise temperature. This is illustrated in Fig. 8-20.

DEFINITION. The *spot effective input-noise temperature*, $T_{es}(f)$, of a linear device is the *additional* temperature required for an input source, which is driving an ideal (noise-free) device, to produce the same available PSD at the ideal device output as is

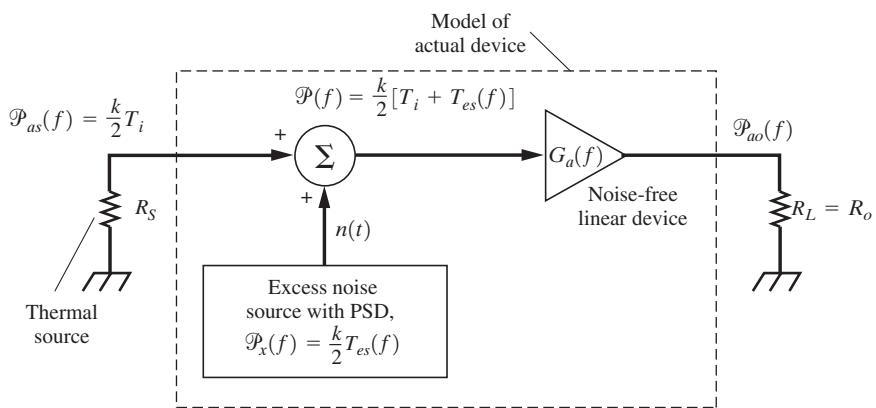


Figure 8-20 Another noise model for an actual device.

[†] Some authors call F the *noise factor* and F_{dB} the *noise figure*.

obtained from the actual device when it is driven by the input source of temperature T_i kelvin. That is, $T_{es}(f)$ is defined by

$$\mathcal{P}_{ao}(f) = G_a(f) \frac{k}{2} [T_i + T_{es}(f)] \quad (8-22)$$

where $\mathcal{P}_{ao}(f)$ is the available PSD out of the actual device when driven by an input source of temperature T_i and $T_{es}(f)$ is the spot effective input-noise temperature.

The *average effective input-noise temperature*, T_e , is defined by the equation

$$P_{ao} = k(T_i + T_e) \int_{f_0-B/2}^{f_0+B/2} G_a(f) df \quad (8-23)$$

where the measured available noise power out of the device in a band B hertz wide is

$$P_{ao} = 2 \int_{f_0-B/2}^{f_0+B/2} \mathcal{P}_{ao}(f) df \quad (8-24)$$

Because $G_a(f)$ depends on the source impedance, as well as on the device parameters, $T_e(f)$ will depend on the source impedance used, as well as on the characteristics of the device itself, but it is independent of the value of T_i used. In the definition of T_e , note that the IEEE standards do not specify that $T_i = T_0$, since the value of T_e obtained does not depend on the value of T_i that is used. However, $T_i = T_0 = 290$ may be used for convenience. The effective input-noise temperature can also be evaluated by the Y-factor method, as illustrated by Prob. 8–19.

When the gain is flat (constant) over the frequency band, $G_a(f) = G_a$, the effective input-noise temperature is simply

$$T_e = \frac{P_{ao} - kT_iG_aB}{kG_aB} \quad (8-25)$$

Note that $T_{es}(f)$ and T_e are greater than zero for an actual device, but if the device is nearly ideal (small internal noise sources), they will be very close to zero.

When T_e was evaluated with Eq. (8–23), an input source was used with some convenient value for T_i . However, when the device is used in a system, the available noise power from the source will be different if T_i is different. For example, suppose that the device is a RF preamplifier and the source is an antenna. The available power out of the amplifier when it is connected to the antenna is now[†]

$$P_{ao} = 2 \int_{f_0-B/2}^{f_0+B/2} \mathcal{P}_{as}(f)G_a(f) df + kT_e \int_{f_0-B/2}^{f_0+B/2} G_a(f) df \quad (8-26)$$

where $\mathcal{P}_{as}(f)$ is the available PSD out of the source (antenna). T_e is the average effective input temperature of the amplifier that was evaluated by using the input source T_i . If the gain of the amplifier is approximately constant over the band, this reduces to

$$P_{ao} = G_a P_{as} + kT_e B G_a \quad (8-27)$$

[†] The value of P_{ao} , in Eqs. (8–26) and (8–27) is different from that in Eqs. (8–23), (8–24), and (8–25).

where the available power from the source (antenna) is

$$P_{as} = 2 \int_{f_0-B/2}^{f_0+B/2} \mathcal{P}_{as}(f) df \quad (8-28)$$

Furthermore, the available power from the source might be characterized by its noise temperature, T_s , so that, using Eq. (8-17), we get

$$P_{as} = kT_s B \quad (8-29)$$

In satellite Earth station receiving applications, the antenna (source) noise temperature might be $T_s = 32$ K at 4 GHz for a parabolic antenna where the noise from the antenna is due to cosmic radiation and to energy received from the ground as the result of the sidelobe beam pattern of the antenna. (The Earth acts as a blackbody noise source with $T = 280$ K.) Note that the $T_s = 32$ K of the antenna is “caused” by *radiation* resistance, which is not the same as a loss resistance (I^2R losses) associated with a thermal source and that T_s has no relation to the physical temperature of the antenna.

In summary, two figures of merit have been defined: noise figure and effective input-noise temperature. By combining Eqs. (8-19) and (8-22), where $T_i = T_0$, a relationship between these two figures of merit for the spot measures is obtained:

$$T_{es}(f) = T_0[F_s(f) - 1] \quad (8-30a)$$

Here $T_i = T_0$ is required, because $T_i = T_0$ is used in the definition for the noise figure that precedes Eq. (8-19).

Using Eqs. (8-21a) and (8-25), where $T_i = T_0$, we obtain the same relationship for the average measures:

$$T_e = T_0(F - 1) \quad (8-30b)$$

Example 8-2 T_e AND F FOR A TRANSMISSION LINE

The effective input-noise temperature, T_e , and the noise figure, F , for a lossy transmission line (a linear device) will now be evaluated.[†] This can be accomplished by terminating the transmission line with a source and a load resistance (all having the same physical temperature) that are both equal to the characteristic impedance of the line, as shown in Fig. 8-21. The gain of the transmission line is $G_a = 1/L$, where L is the transmission line loss (power in divided by power

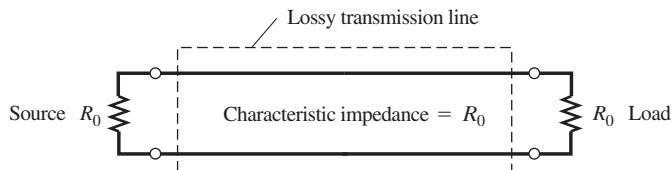


Figure 8-21 Noise figure measurement of a lossy transmission line.

[†] These results also hold for the T_e and F of (impedance) matched attenuators.

out) in absolute units (i.e., not dB units). Looking into the output port of the transmission line, one sees an equivalent circuit that is resistive (thermal source) with a value of R_0 ohms because the input of the line is terminated by a resistor of R_0 ohms (the characteristic impedance). Assume that the physical temperature of the transmission line is T_L as measured on the Kelvin scale. Since the line acts as a thermal source, the available noise power at its output is $P_{ao} = kT_L B$. Using Eq. (8–25) where the source is at the same physical temperature $T_e = T_L$ we get

$$T_e = \frac{kT_L B - kT_L G_a B}{kG_a B} = T_L \left(\frac{1}{G_a} - 1 \right)$$

Thus the effective input-noise temperature for the transmission line is

$$T_e = T_L(L - 1) \quad (8-31a)$$

where T_L is the physical temperature (Kelvin) of the line and L is the line loss.

If the physical temperature of the line happens to be T_0 , this becomes

$$T_e = T_0(L - 1) \quad (8-31b)$$

The noise figure for the transmission line is obtained by using Eq. (8–30b) to convert T_e to F . Thus, substituting Eq. (8–31a) into (8–31b), we get

$$T_L(L - 1) = T_0(F - 1)$$

Solving for F , we obtain the noise figure for the transmission line

$$F = 1 + \frac{T_L}{T_0} (L - 1) \quad (8-32a)$$

where T_L is the physical temperature (Kelvin) of the line, $T_0 = 290$, and L is the line loss. If the physical temperature of the line is 290 K (63°F), Eq. (8–32a) reduces to

$$F = \frac{1}{G_a} = L \quad (8-32b)$$

In decibel measure, this is $F_{dB} = L_{dB}$. In other words, if a transmission line has a 3-dB loss, it has a noise figure of 3 dB provided that it has a physical temperature of 63°F. If the temperature is 32°F (273 K), the noise figure, using Eq. (8–32a), will be 2.87 dB. Thus, F_{dB} is approximately L_{dB} , if the transmission line is located in an environment (temperature range) that is inhabitable by humans.

Noise Characterization of Cascaded Linear Devices

In a communication system several linear devices (supplied by different vendors) are often cascaded together to form an overall system, as indicated in Fig. 8–22. In a receiving system, these devices might be an RF preamplifier connected to a transmission line that feeds a down converter and an IF amplifier. (As discussed in Sec. 4–11, the down converter is a linear device and may be characterized by its conversion power gain and its noise figure.) For system performance calculations, we need to evaluate the overall power gain, G_a , and the overall noise characterization (which is given by the overall noise figure or the overall effective input-noise temperature) from the specifications for the individual devices provided by the vendors.

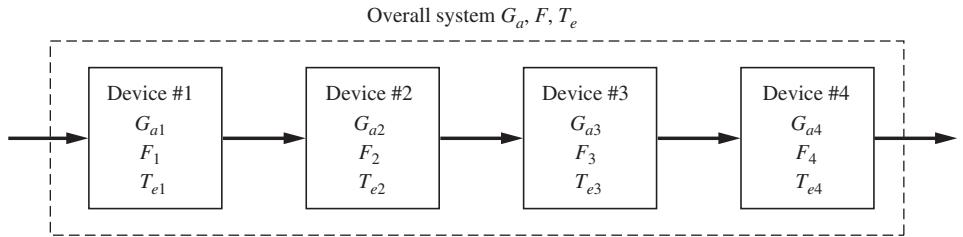


Figure 8-22 Cascade of four devices.

The overall available power gain is

$$G_a(f) = G_{a1}(f)G_{a2}(f)G_{a3}(f)G_{a4}(f)\dots \quad (8-33)$$

since, for example, for a four-stage system,

$$G_a(f) = \frac{\mathcal{P}_{ao4}}{\mathcal{P}_{as}} = \left(\frac{\mathcal{P}_{ao1}}{\mathcal{P}_{as}} \right) \left(\frac{\mathcal{P}_{ao2}}{\mathcal{P}_{ao1}} \right) \left(\frac{\mathcal{P}_{ao3}}{\mathcal{P}_{ao2}} \right) \left(\frac{\mathcal{P}_{ao4}}{\mathcal{P}_{ao3}} \right)$$

THEOREM. *The overall noise figure for cascaded linear devices is[†]*

$$F = F_1 + \frac{F_2 - 1}{G_{a1}} + \frac{F_3 - 1}{G_{a1}G_{a2}} + \frac{F_4 - 1}{G_{a1}G_{a2}G_{a3}} + \dots \quad (8-34)$$

as shown in Fig. 8-22 (for a four-stage system).

Proof. This result may be obtained by using an excess-noise model of Fig. 8-19 for each stage. We will prove the result for a two-stage system as modeled in Fig. 8-23. The overall noise figure is

$$F = \frac{P_{ao2}}{(P_{ao2})_{\text{ideal}}} = \frac{P_{x2} + P_{ao1}G_{a2}}{G_{a1}G_{a2}P_{as}}$$

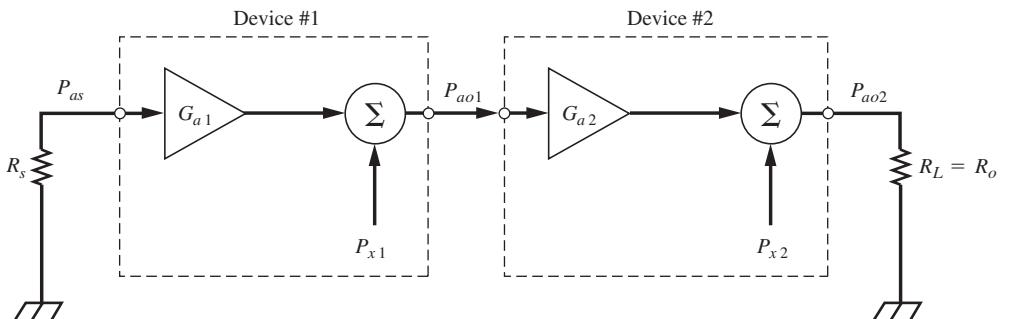


Figure 8-23 Noise model for two cascaded devices.

[†] This is known as Friis's noise formula.

which becomes

$$F = \frac{P_{x2} + G_{a2}(P_{x1} + G_{a1}P_{as})}{G_{a1}G_{a2}P_{as}} \quad (8-35)$$

where $P_{as} = kT_0B$ is the available power from the thermal source. P_{x1} and P_{x2} can be obtained from the noise figures of the individual devices by using Fig. 8–19, so that for the i th device,

$$F_i = \frac{P_{aoi}}{G_{ai}P_{as}} = \frac{P_{xi} + G_{ai}P_{as}}{G_{ai}P_{as}}$$

or

$$P_{xi} = G_{ai}P_{as}(F_i - 1) \quad (8-36)$$

Substituting this into Eq. (8–35) for P_{x1} and P_{x2} , we obtain

$$F = F_1 + \frac{F_2 - 1}{G_{a1}}$$

which is identical to Eq. (8–34) for the case of two cascaded stages. In a similar way Eq. (8–34) can be shown to be true for any number of stages.

Looking at Eq. (8–34), we see that if the terms G_{a1} , $G_{a1}G_{a2}$, $G_{a1}G_{a2}G_{a3}$, and so on, are relatively large, F_1 will dominate the overall noise figure. Thus, in receiving system design, it is important that the first stage have a low noise figure and a large available gain, so that the noise figure of the overall system will be as small as possible.

The overall effective input-noise temperature of several cascaded stages can also be evaluated.

THEOREM. *The overall effective input-noise temperature for cascaded linear devices is*

$$T_e = T_{e1} + \frac{T_{e2}}{G_{a1}} + \frac{T_{e3}}{G_{a1}G_{a2}} + \frac{T_{e4}}{G_{a1}G_{a2}G_{a3}} + \dots \quad (8-37)$$

as shown in Fig. 8–22.

A proof of this result is left for the reader as an exercise.

For further study concerning the topics of effective input-noise temperature and noise figure, the reader is referred to an authoritative monograph [Mumford and Scheibe, 1968].

Link Budget Evaluation

The performance of a communication system depends on how large the SNR is at the detector input in the receiver. It is engineering custom to call the signal-to-noise ratio before detection the *carrier-to-noise* ratio (CNR). Thus, in this section, we will use CNR to denote the signal-to-noise ratio before detection (bandpass case) and SNR to denote the signal-to-noise ratio after detection (baseband case). Here we are interested in evaluating the detector input CNR

as a function of the communication link parameters, such as transmitted EIRP, space loss, receiver antenna gain, and the effective input-noise temperature of the receiving system. The formula that relates these system link parameters to the CNR at the detector input is called the *link budget*.

The communication system may be described by the block diagram shown in Fig. 8–24. In this model, the receiving system from the receiving-antenna output to the detector input is modeled by one linear block that represents the cascaded stages in the receiving system, such as a transmission line, a *low-noise amplifier* (LNA), a down converter, and an IF amplifier. This linear block describes the overall available power gain and effective input-noise temperature of these cascaded devices, as described in the preceding section and modeled in Fig. 8–20.

As shown in Fig. 8–24, the CNR at the ideal amplifier input (with gain G_a) is identical to that at the detector input, because the ideal amplifier adds no excess noise and it amplifies the signal and noise equally well in a bandwidth of B hertz (the IF bandwidth). Thus, denoting this simply by CNR, we get

$$\left(\frac{C}{N}\right) \triangleq \left(\frac{C}{N}\right)_{Rx} = \left(\frac{C}{N}\right)_{Det} \quad (8-38)$$

where these carrier-to-noise power ratios are indicated on the figure.

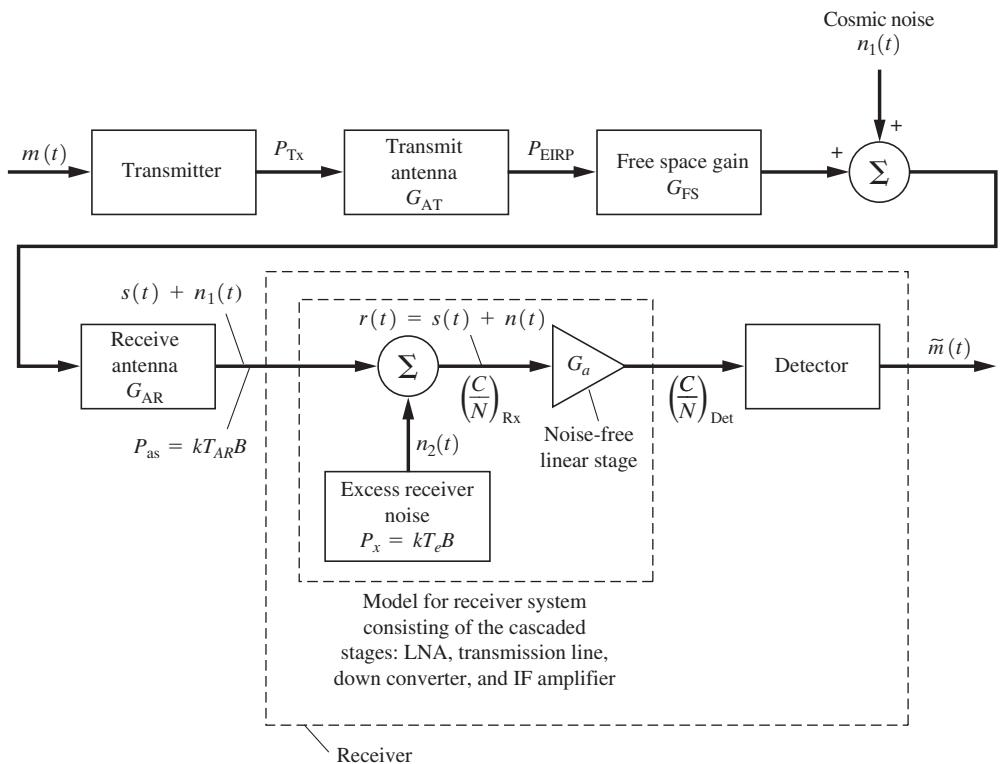


Figure 8–24 Communication system model for link budget evaluation.

Using Eqs. (8–2) and (8–3), we obtain the received signal power

$$C_{\text{Rx}} = (P_{\text{EIRP}}) G_{\text{FS}} G_{\text{AR}} \quad (8-39)$$

where P_{EIRP} is the EIRP from the transmitter, G_{FS} is the free-space gain, and G_{AR} is the receiving antenna power gain.

When we use Eq. (8–17), the available noise power at the input to the ideal amplifier in the model (Fig. 8–24) is

$$N = kT_{\text{syst}}B \quad (8-40)$$

where B is the IF equivalent bandwidth. The receiving system noise temperature is

$$T_{\text{syst}} = T_{\text{AR}} + T_e \quad (8-41)$$

where T_{AR} is the noise temperature of the antenna (due to received cosmic noise and Earth blackbody radiation) and T_e is the effective input-noise temperature of the overall receiving system.

When Eqs. (8–39) and (8–40) are combined, the carrier-to-noise ratio at the detector input is

$$\frac{C}{N} = \frac{P_{\text{EIRP}}G_{\text{FS}}G_{\text{AR}}}{kT_{\text{syst}}B} \quad (8-42)$$

For engineering applications, this formula is converted to decibel units. Using Eq. (8–9) and taking $10 \log [\cdot]$ of both sides of (8–42), we find that the received carrier-to-noise ratio at the detector input in decibels is

$$\left(\frac{C}{N}\right)_{\text{dB}} = (P_{\text{EIRP}})_{\text{dBW}} - (L_{\text{FS}})_{\text{dB}} + \left(\frac{G_{\text{AR}}}{T_{\text{syst}}}\right)_{\text{dB}} - k_{\text{dB}} - B_{\text{dB}} \quad (8-43)$$

where

$(P_{\text{EIRP}})_{\text{dBW}}$ = $10 \log (P_{\text{EIRP}})$ is the EIRP of the transmitter in dB above 1 W,

$(L_{\text{FS}})_{\text{dB}}$ = $20 \log [(4\pi d)/\lambda]$ is the path loss,[†]

$$k_{\text{dB}} = 10 \log (1.38 \times 10^{-23}) = -228.6,$$

$$B_{\text{dB}} = 10 \log (B) \quad (B \text{ is the IF bandwidth in hertz}).$$

For analog communication systems, the SNR at the detector output can be related to the CNR at the detector input. The exact relationship depends on the type of detector, as well as the modulation used. These relationships were developed in Chapter 7. They are summarized in Table 7–2 and Fig. 7–27 with the use of Eq. (7–85), where $C/N = (S/N)_{\text{in}}$. Example 8–6 uses Eq. (8–43) to evaluate the performance of a CATV satellite receiving system.

[†] This free-space path-loss expression can be modified to include effects of a multipath channel within an urban building environment. [See Eq. (8–47) and (8–67).]

Example 8–3 RECEIVED (C/N)_{dB} FOR LINE-OF-SIGHT PROPAGATION

Using Eq. (8–43), let $(P_{\text{EIRP}})_{\text{dBW}} = 36$, $f = 4 \text{ GHz}$, $B = 30 \text{ MHz}$, $T_{\text{syst}} = 154.5 \text{ K}$, and $d = 24,787 \text{ miles}$. The receiving antenna is a 5-meter diameter parabola. Calculate the $(C/N)_{\text{dB}}$ at the receiver detector input. See Example8_03.m for the solution.

For digital communications systems, the BER at the digital output is a measure of performance. The BER is related to E_b/N_0 via the CNR. The E_b/N_0 -to-CNR relationship is developed in the next section. Study aid problems SA8–1 and 8–2 evaluate the BER for a DSS television receiving system.

E_b/N_0 Link Budget for Digital Systems

In digital communication systems, the probability of bit error P_e for the digital signal at the detector output describes the quality of the recovered data. P_e , also called the BER, is a function of the ratio of the energy per bit to the noise PSD, (E_b/N_0) , as measured at the detector input. The exact relationship between P_e and E_b/N_0 depends on the type of digital signaling used, as shown in Table 7–1 and Fig. 7–14. In this section, we evaluate the E_b/N_0 obtained at the detector input as a function of the communication link parameters.

The energy per bit is given by $E_b = CT_b$, where C is the signal power and T_b is the time required to send one bit. Using Eq. (8–40), we see that the noise PSD (one sided) is $N_0 = kT_{\text{syst}}$. Thus,

$$\frac{C}{N} = \frac{E_b/T_b}{N_0 B} = \frac{E_b R}{N_0 B} \quad (8-44)$$

where $R = 1/T_b$ is the data rate (b/s). Using Eq. (8–44) in Eq. (8–42), we have

$$\frac{E_b}{N_0} = \frac{P_{\text{EIRP}} G_{\text{FS}} G_{\text{AR}}}{k T_{\text{syst}} R} \quad (8-45)$$

In decibel units, the E_b/N_0 received at the detector input in a digital communications receiver is related to the link parameters by

$$\left(\frac{E_b}{N_0} \right)_{\text{dB}} = (P_{\text{EIRP}})_{\text{dBW}} - (L_{\text{FS}})_{\text{dB}} + \left(\frac{G_{\text{AR}}}{T_{\text{syst}}} \right)_{\text{dB}} - k_{\text{dB}} - R_{\text{dB}} \quad (8-46)$$

where $(R)_{\text{dB}} = 10 \log(R)$ and R is the data rate (b/s).

For example, suppose that we have BPSK signaling and that an optimum detector is used in the receiver; then $(E_b/N_0)_{\text{dB}} = 8.4 \text{ dB}$ is required for $P_e = 10^{-4}$. (See Fig. 7–14).[†] Using Eq. (8–46), we see that the communication link parameters may be selected to give the required $(E_b/N_0)_{\text{dB}}$ of 8.4 dB. Note that as the bit rate is increased, the transmitted power has to be increased or the receiving system performance—denoted by $(G_{\text{AR}}/T_{\text{syst}})_{\text{dB}}$ —has to be improved to maintain the required $(E_b/N_0)_{\text{dB}}$ of 8.4 dB. Examples of evaluating the E_b/N_0 link budget to obtain the BER for a DSS television receiving system are shown in SA8–1 and SA8–2.

[†] If, in addition, coding were used with a coding gain of 3 dB (see Sec. 1–11), an E_b/N_0 of 5.4 dB would be required for $P_e = 10^{-4}$.

Example 8–4 RECEIVED $(E_b/N_o)_{\text{db}}$ FOR LINE-OF-SIGHT PROPAGATION

Using Eq. (8–46), let $(P_{\text{EIRP}})_{\text{dBw}} = 30.5$, $f = 4 \text{ GHz}$, $T_{\text{syst}} = 154.5 \text{ K}$, $R = 1.54 \text{ Mb/s}$, and $d = 24,784 \text{ miles}$. The receiving antenna is a 1-meter diameter parabola. Calculate the $(E_b/N_o)_{\text{db}}$ at the receiver detector input. See Example8_04.m for the solution.

Path Loss for Urban Wireless Environments

Path loss for a non-free-space wireless environment, such as a path with obstructions consisting of buildings and trees, is difficult to model. This is the case for terrestrial cellular and wireless systems where multipath signals are received that consist of reflected path signals in addition to the direct path signal, as well as additional signal attenuation as the signals pass through foliage and building walls. Often, measurements of received signal strength along the path are made to validate predicted results. For a free-space path, the exponent of the path loss is $n = 2$; that is, the path loss varies as the square ($n = 2$) of the distance as shown by Eq. (8–9). When obstructions are present, n is larger than 2. Usually it is in the range of 2 to 6 with a typical value being $n = 3$. When the path loss is expressed in dB between the transmit and receive antennas, this gives a log-distance path loss model. Thus, the obstructed path loss is [Rappaport, 2002, p. 138].

$$L_{\text{dB}}(d) = L_{\text{FSdB}}(d_0) + 10n \log \left(\frac{d}{d_0} \right) + X_{\text{dB}} \quad (8-47a)$$

where

$$L_{\text{FSdB}}(d_0) = 20 \log [(4\pi d_0)/\lambda] \quad (8-47b)$$

$L_{\text{dB}}(d)$ is the path loss in dB for a distance of d between the antennas, $L_{\text{FSdB}}(d_0)$ is the free space loss for a distance d_0 that is close to the transmitter, but in the far field, and $d > d_0$. n is the path loss exponent, and X_{dB} is a zero-mean Gaussian random variable representing the variations in the path loss caused by multiple reflections. Typically, d_0 is taken to be 1 km for large urban mobile systems, 100 m for microcell systems, and 1 m for indoor wireless systems. An example of using Eq. (8–47) to evaluate the link budget and the BER for a wireless personal communication device (PCD) is shown in SA8–3.

Example 8–5 LINK BUDGET EVALUATION FOR A TELEVISION RECEIVE-ONLY TERMINAL FOR SATELLITE SIGNALS

The link budget for a television receive-only (TVRO) terminal used for receiving TV signals from a satellite will be evaluated. It is assumed that this receiving terminal is located at Washington, D.C., and is receiving signals from a satellite that is in a geostationary orbit at 134° W longitude above the equator. The specifications on the proposed receiving equipment are given in Table 8–5 together with the receiving site coordinates and satellite parameters.

TABLE 8–5 TYPICAL TVRO C-BAND SATELLITE AND RECEIVING SYSTEM[†]

Item	Parameter Value
Satellite	
Orbit	Geostationary
Location (above equator)	134° W longitude
Uplink frequency band	6 GHz
Downlink frequency band	4 GHz
(P _{EIRP}) _{dBw}	36 dBw
TVRO terminal	
Site location	Washington, D.C., 38.8° N latitude, 77° W longitude
Antenna	
Antenna type	10 ft diameter parabola
Noise temperature	32 K (at feed output) for 16.8° elevation
Feedline gain	0.98
Low-noise amplifier	
Noise temperature	40 K
Gain	50 dB
Receiver	
Noise temperature	2610 K
IF bandwidth	30 MHz
FM threshold	8 dB CNR

[†]Google “satellite footprints” and “satellite specifications” for current systems.

This TVRO terminal is typical of those used at the head end of CATV systems for reception of TV signals that are relayed via satellite. As discussed in Sec. 8–5, the composite NTSC baseband video signal is relayed via satellite by frequency-modulating this signal on a 6-GHz carrier that is radiated to the satellite. The satellite down-converts the FM signal to 4 GHz and retransmits this FM signal to the TVRO terminal.

The transmit antenna EIRP footprint for the satellite is shown in Fig. 8–25. From this figure, it is seen that the EIRP directed toward Washington, D.C., is approximately 36 dBw, as obtained for inclusion in Table 8–5.

It can be shown that the *look angles* of the TVRO antenna can be evaluated using the following formulas [Davidoff, 1990]. The elevation of the TVRO antenna is

$$E = \tan^{-1} \left[\frac{1}{\tan \beta} - \frac{R}{(R + h) \sin \beta} \right], \quad (8-48a)$$

where

$$\beta = \cos^{-1} [\cos \varphi \cos \lambda] \quad (8-48b)$$

and λ is the difference between the longitude of the TVRO site and the longitude of the *substation point* (i.e., the point directly below the geostationary satellite along the equator). φ is the latitude of the TVRO site, $R = 3963$ statute miles is the Earth radius, and $h = 22,242$ statute miles is the altitude of the synchronous satellite. The distance between the TVRO site and satellite, called the *slant range*, is given by the cosine law:

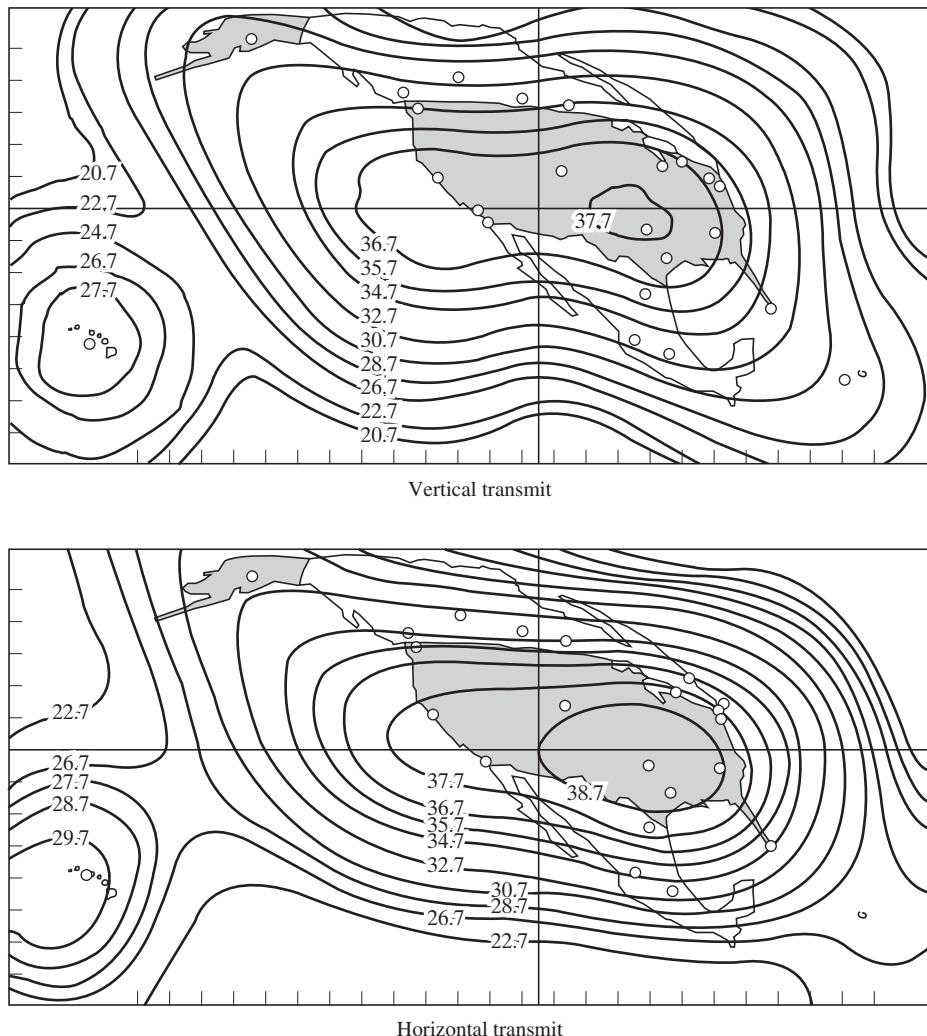


Figure 8–25 Typical C-band TVRO satellite EIRP footprint in dBw units. (Google “Satellite Footprints” for current satellites.) [Courtesy of Intelsat S.A.]

$$d = \sqrt{(R + h)^2 + R^2 - 2R(R + h) \cos \beta} \quad (8-49)$$

The azimuth of the TVRO antenna is

$$A = \cos^{-1} \left(-\frac{\tan \varphi}{\tan \beta} \right) \quad (8-50)$$

where the true azimuth, as measured clockwise from the north, is given by either A or $360^\circ - A$, as appropriate, since a calculator gives a value between 0 and 180° for $\cos^{-1}(x)$. Using these formulas for the Washington, D.C., TVRO site,[†] we get $\lambda = 134 - 77 = 57^\circ$ and

$$\beta = \cos^{-1}[\cos(38.8) \cos(57)] = 64.9^\circ \quad (8-51)$$

The slant range is

$$\begin{aligned} d &= \sqrt{(26,205)^2 + (3963)^2 - 2(3963)(26,205) \cos 64.9^\circ} \\ &= 24,784 \text{ miles} \end{aligned} \quad (8-52)$$

The elevation angle of the TVRO antenna is

$$E = \tan^{-1} \left[\frac{1}{\tan(64.9)} - \frac{3963}{(26,205) \sin(64.9)} \right] = 16.88 \quad (8-53)$$

The azimuth angle of the TVRO antenna is

$$A = \cos^{-1} \left[\frac{-\tan(38.8)}{\tan(64.9)} \right] = 247.9^\circ \quad (8-54)$$

Thus, the look angles of the TVRO antenna at Washington, D.C., to the satellite are $E = 16.8^\circ$ and $A = 247.9^\circ$.

A block diagram describing the receiving system is shown in Fig. 8–26. Using (8–43), the CNR at the detector input of the receiver is

$$\left(\frac{C}{N} \right)_{\text{dB}} = (P_{\text{EIRP}})_{\text{dBW}} - (L_{\text{FS}})_{\text{dB}} + \left(\frac{G_{\text{AR}}}{T_{\text{syst}}} \right)_{\text{dB}} - k_{\text{dB}} - B_{\text{dB}} \quad (8-55)$$

The corresponding path loss for $d = 24,784$ mi at a frequency of 4 GHz is

$$(L_{\text{FS}})_{\text{dB}} = 20 \log \left(\frac{4\pi d}{\lambda} \right) = 196.5 \text{ dB}$$

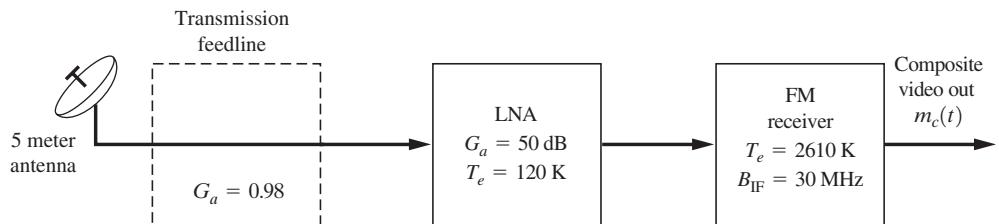


Figure 8–26 TVRO terminal.

[†] Here for convenience and for ease in interpretation of answers, the calculator is set to evaluate all trigonometric functions in degrees (not radians).

For a 10-ft (3.05-m) parabola, using Table 8–4, we find that the receiving antenna gain is

$$(G_{\text{AR}})_{\text{dB}} = 10 \log \left[\frac{7\pi(3.05/2)^2}{\lambda^2} \right] = 10 \log (9085) = 39.6 \text{ dB}$$

Using Eqs. (8–41) and (8–37), we obtain the system noise temperature

$$T_{\text{syst}} = T_{\text{AR}} + T_{\text{feed}} + \frac{T_{\text{LNA}}}{G_{\text{feed}}} + \frac{T_{\text{receiver}}}{G_{\text{feed}} G_{\text{LNA}}} \quad (8-56)$$

where the specified antenna noise temperature, including the feed, is $T_A = (T_{\text{AR}} + T_{\text{feed}}) = 32 \text{ K}$.

The T_{AR} is *not* the ambient temperature of the antenna (which is about 290 K) because the effective resistance of the antenna does not consist of a thermal resistor but of a radiation resistor. That is, if RF power is fed into the antenna, it will not be dissipated in the antenna but instead will be radiated into space. Consequently, T_{AR} is called the *sky noise temperature* and is a measure of the amount of cosmic noise power that is received from outer space and noise caused by atmospheric attenuation, where this power is $P_{\text{AR}} = kT_{\text{AR}} B$. Graphs giving the measured sky noise temperature as a function of the RF frequency and the elevation angle of the antenna are available [Jordan, 1985, Chap. 27; Pratt and Bostian, 1986].

Substituting the receive system parameters into Eq. (8–56), we have

$$T_{\text{syst}} = 32 + \frac{40}{0.98} + \frac{2610}{(0.98)(100,000)} = 72.8 \text{ K}$$

Thus,[†]

$$\left(\frac{G_{\text{AR}}}{T_{\text{syst}}} \right)_{\text{dB}} = 10 \log \left(\frac{9,085}{72.8} \right) = 21.0 \text{ dB/K}$$

Also,

$$(B)_{\text{dB}} = 10 \log(30 \times 10^6) = 74.8$$

Substituting these results into Eq. (8–55) yields

$$\left(\frac{C}{N} \right)_{\text{dB}} = 36 - 196.5 + 21.0 - (-228.6) - 74.8$$

Thus, the CNR at the detector input (inside the FM receiver) is

$$\left(\frac{C}{N} \right)_{\text{dB}} = 14.3 \text{ dB} \quad (8-57)$$

See Example8_05.m to calculate this and other solutions.

A CNR of 14.3 dB does not seem to be a very good, does it? Actually, the question is: Does a CNR of 14.3 dB at the detector input give a high-quality video signal at the detector output? This question can be answered easily if we have detector performance curves like those shown in Fig. 8–27. Two curves are plotted in this figure. One is for the output of a receiver that uses an FM

[†] Although it is a misnomer, engineers specify dB/K as the units for $(G / T)_{\text{dB}}$.

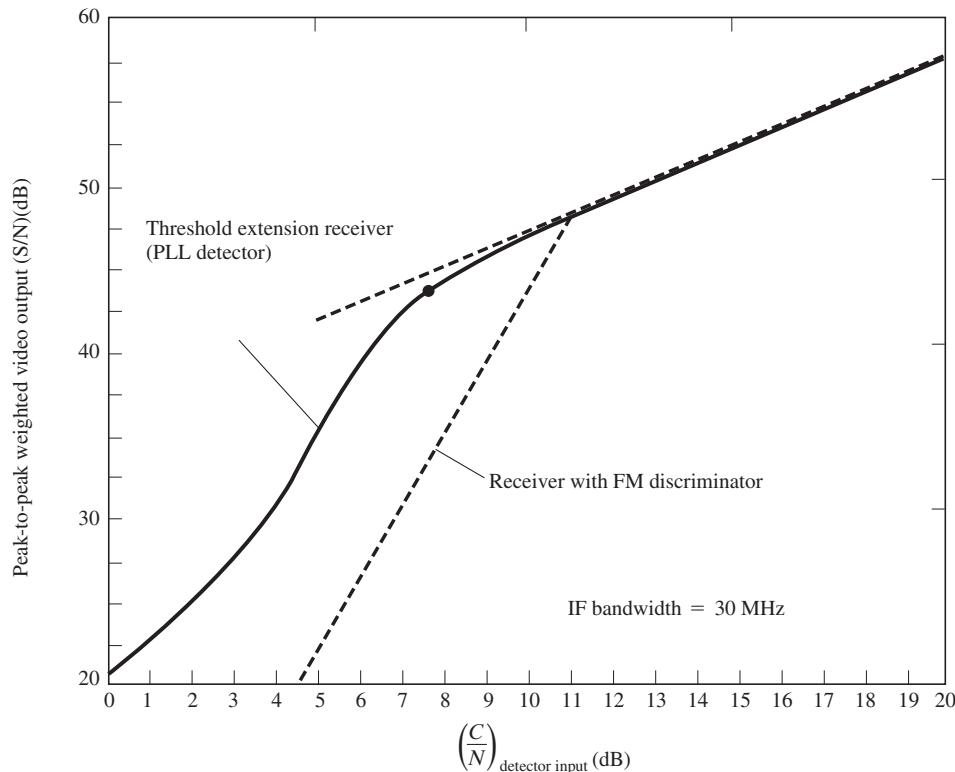


Figure 8–27 Output SNR as a function of FM detector input CNR.

discriminator for the FM detector, and the other is for a receiver that uses a PLL FM detector to provide threshold extension.[†] For a CNR of 14.3 dB on the input, both receivers will give a 51-dB output SNR, which corresponds to a high-quality picture. However, if the receive signal from the satellite fades because of atmospheric conditions by 6 dB, the output SNR of the receiver with an FM discriminator will be only about 36 dB, whereas the receiver with threshold extension detection will have an output SNR of about 45 dB.

8–7 FIBER-OPTIC SYSTEMS

Since 1980, fiber-optic cable transmission systems have become commercially viable. This is indicated in Table 8–2, which shows that common carriers have installed extensive fiber-optic systems in the United States, Japan, Great Britain, and Canada. Fiber-optic cable is the preferred underground transmission medium. Also, as shown in Table 8–2, transoceanic

[†] The threshold point is the point where the knee occurs in the plot of $(S/N)_{\text{out}}$ vs. $(C/N)_{\text{in}}$. In the characteristic for threshold extension receivers, this knee is extended to the left (improved performance) when compared with the knee for the corresponding receiver that uses a discriminator as a detector.

fiber-optic cable systems are now popular. Digital fiber-optic systems use simple OOK modulation of an optical source to produce a modulated light beam. The optical source has a wavelength in the range of 0.85 to 1.6 μm , which is about 190 to 350 THz[†]. (Analog AM fiber-optic systems can also be built.)

The optical sources can be classified into two categories: (1) light-emitting diodes (LED) that produce noncoherent light and (2) solid-state lasers that produce coherent (single-carrier-frequency) light. The LED source is rugged and inexpensive. It has a relatively low power output of about -15 dBm (including coupling loss) and a small modulation bandwidth of about 50 MHz. The laser diode has a relatively high power output of about $+5 \text{ dBm}$ (including coupling loss) and a large modulation bandwidth of about 1 GHz. The laser diode is preferred over the LED, since it produces coherent light and has high output power.

The light source is coupled into the fiber-optic cable, and this cable is the channel transmission medium. Fiber cables can be classified into two categories: (1) multimodal and (2) single mode. Multimodal fiber has a core diameter of 50 μm and a cladding diameter of 125 μm . The light is reflected off the core-cladding boundary as it propagates down the fiber to produce multiple paths of different lengths. This causes pulse dispersion of the OOK signal at the receiving end and thus severely limits the transmission bit rate that can be accommodated. The single-mode fiber has a core diameter of approximately 8 μm and propagates a single wave. Consequently, there is little dispersion of the received pulses of light. Because of its superior performance, single-mode fiber is preferred.

At the receiving end of the fiber, the receiver consists of a PIN diode, an avalanche photodiode (APD), or a GaAsMESFES transistor used as an optical detector. In 0.85- μm systems, any of these devices may be used as a detector. In 1.3- and 1.55- μm systems, the APD is usually used. These detectors act like a simple envelope detector. As shown in Fig. 7–14, better performance (lower probability of bit error) could be obtained by using a coherent detection system that has a product detector. This requires a coherent light source at the receiver that is mixed with the received OOK signal via the nonlinear action of the photodetector. It is possible to have coherent PSK and FSK systems [Basch and Brown, 1985]. Dense wavelength division multiplexing (DWDM) systems have a capacity on the order of 1,800 Gb/s, as shown in Table 8–2.

Example 8–6 LINK BUDGET FOR A FIBER-OPTIC SYSTEM

Figure 8–28 shows the configuration of a typical fiber-optic system. It consists of two bidirectional fiber-optic rings with terminals located at service points (such as towns) within a given geographical area. The ring configuration is used to provide redundant data paths; if a cable is cut anywhere around the ring, service is still provided to the terminals by the remaining in-service fiber. The terminals are called add/drop terminals because they add/drop data from the ring for the subscribers that the terminal serves from its location. As shown in Fig. 8–28, two fibers are required in the ring for full duplex service. That is, one fiber provides for the transmitted (Tx) data, and the other fiber provides the simultaneous received (Rx) data.

[†] One THz is 10^{12} Hz .

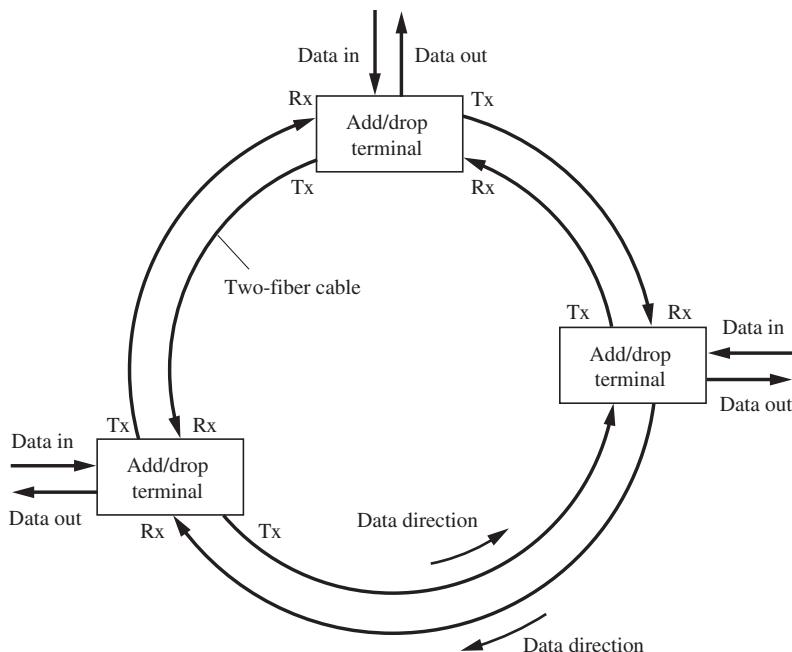


Figure 8–28 Optical-fiber ring system.

Specifications for a typical system are given in Table 8–6. This system has OC-48 capacity, which is equivalent to 48 DS-3 circuits or 32,256 full-duplex VF circuits as described in Sec. 3–9. (See Table 3–10.)

A link budget analysis for a typical line span operating at the $1.5 \mu\text{m}$ wavelength is given in Table 8–7. It shows that a maximum line span of 92 km (57.5 miles) may be used between optical repeaters (or add/drop terminals). Moreover, an optional lightwave booster amplifier may be used at the transmitter end to increase the transmitted optical power and, consequently, the line span.

8–8 CELLULAR TELEPHONE SYSTEMS

This section describes cellular telephone systems and includes standards for many analog and digital systems.

Since the invention of wireless systems, the goal of telephone engineers has been to provide telephone service to individuals by using radio systems to link phone lines with persons in their cars or on foot. There is not enough spectral space to assign a permanent radio channel for each phone subscriber to use over a wide geographical area. However, it is possible to accommodate a large number of subscribers if each radio channel covers only a small geographical area and if the channels are shared (via FDMA, TDMA, or CDMA).

TABLE 8–6 TYPICAL SPECIFICATIONS FOR A LIGHTWAVE SYSTEM[†]

Maximum capacity for two-fiber bidirectional rings	24 DS-3 equivalents (16,128 full-duplex VF circuits per fiber pair) per span 48 DS-3 equivalents (32,256 full-duplex VF circuits) per terminal
Line rate	2.488 Gb/s
Line code	Scrambled unipolar NRZ
Wavelength	1310 nm or 1550 nm
Optical source	Distributed feedback (DFB) laser
Optical detector	Avalanche photodiode (APD)
Optical fiber	Single mode
Transmitted power	
$1.3 \mu\text{m}$	+5.5 dBm
$1.55 \mu\text{m}$	+4.0 dBm
Receiver sensitivity	-27.0 dBm
Maximum receiver power (no overload)	-10 dBm for $1.31 \mu\text{m}$, -9.0 dBm for $1.55 \mu\text{m}$
Bit error rate (BER)	$<10^{-10}$ for -27 dBm receiver input $<10^{-9}$ accumulated BER for systems up to 400 km (250 miles)
Maximum repeater spacing	
$1.31 \mu\text{m}$	60 km (0.45 dB/km loss fiber)
$1.55 \mu\text{m}$	92 km (0.25 dB/km loss fiber), dispersion limited

[†]Google “fiber optic specifications” for current fiber-optic systems.

TABLE 8–7 LINK BUDGET ANALYSIS FOR A $1.55-\mu\text{m}$ FIBER SPAN

Description	Value
Maximum transmitted power	+4.0 dBm
Receiver sensitivity	-27.0 dBm
Available margin	31.0 dB
Losses in a 57-mile fiber link	
Optical path penalty	2.0 dB
Transmitter/receiver connector loss (0.7 dB each)	1.4 dB
Fiber attenuation ($92 \text{ km} \times 0.25 \text{ dB/km}$) [†]	23.0 dB
System margin	4.6 dB
Total loss	31.0 dB

[†]The 0.25-dB/km loss includes splicing losses.

This *cellular radio* concept is illustrated in Fig. 8–29. (In practice, the cell towers are usually placed at the corner of the hexagonal cell where three cells intersect. Three 120 degree beamwidth directional antennas are placed on the tower—one directional antenna covering each of the three cells. This provides coverage of the cells using one tower, instead three towers.) Each user communicates via radio from a cellular telephone set to the cell-site base

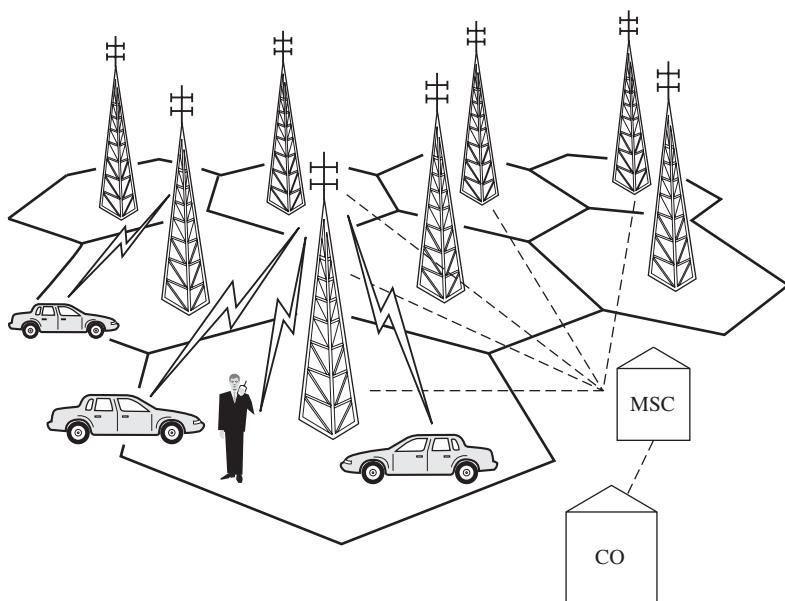


Figure 8–29 Cellular telephone system.

station. This base station is connected via telephone lines or a microwave link to the *mobile switching center* (MSC). The MSC connects the user to the called party. If the called party is land based, the connection is via the central office (CO) to the terrestrial telephone network. If the called party is mobile, the connection is made to the cellular site that covers the area in which the called party is located, using an available radio channel in the cell associated with the called party. Theoretically, this cellular concept allows any number of mobile users to be accommodated for a given set of radio channels. That is, if more channels are needed, the existing cell sizes are decreased, and additional small cells are inserted, so that the existing channels can be reused more efficiently. The critical consideration is to design the cells for acceptable levels of cochannel interference [Lee, 1986]. As the mobile user travels from one cell to another, the MSC automatically switches the user to an available channel in the new cell, and the telephone conversation continues uninterrupted.

The cellular concept has the following advantages:

- Large subscriber capacity.
- Efficient use of the radio spectrum.
- Service to hand-held portables, as well as vehicles.
- High-quality telephone and data service to the mobile user at relatively low cost.

Cellular phone use has grown by leaps and bounds since it was introduced in the United States in 1983. Today, we have smartphones with computing capacity that not only allow telephone calls but allow us to take pictures and run applications such as maps, calendars, e-mail, and Web browsing. This has been popularized by the Palm phone, the Blackberry, the iPhone, and others. It has been reported that as many as 22% of cell phone users have smartphones

TABLE 8–8 CELLULAR BANDS IN THE UNITED STATES

Band Designation	Frequencies (MHz)	Usage (May change in the future)
800	806–824 and 851–869 From discontinued TV channels 70–83 in 1974	SMR, iDEN
Cellular	824–849 and 869–894 From discontinued TV channels 70–83 in 1974	AMPS, GSM, IS-95 (CDMA), IS-136 (D-AMPS), 3G
PCS	1850–1910 and 1930–1990	GSM, IS-95(CDMA), IS-136 (D-AMPS), 3G
700 MHz	698–806 From discontinued TV channels 52–69 in 2009	3G, 4G, DVB-H
1.4 GHz	1392–1395 and 1432–1435	Not designated
AWS	1710–1755 and 2110–2155	3G, 4G
BRS/EBS	2496–2690	4G

PCS = Personal Communication Service

BRS = Broadband Radio Service

AWS = Advanced Wireless Service

EBS = Educational Broadband Service

(45.4 million people in the United States) in 2010. The large number of users and the exponential growth of data transmission have mandated that more useful spectral space be assigned for cell phone use.

Table 8–8 shows the frequency bands that have been assigned for cell phone use in the United States. Note that the bands at the lower frequencies are more desirable than those at the higher frequencies. This is because the lower-frequency signals have lower attenuation when passing through foliage and building walls. Also, the free space loss increases as the square of the operating frequency, as shown by Eq. (8–9). For example, the FS loss for the 1.4 GHz band is 4 times (6 dB more than) the loss for the 700 MHz band.

Since the first generation (1G) cell system of 1983, a large number of cell systems with different standards have been developed and used. This is shown in Table 8–9. The industry denotes these different systems by acronyms (an “alphabet soup”) as shown in the table. Cellular companies are now turning on, or have turned on, fourth generation (4G) systems which have much more data transmission capacity and high spectral efficiency. There is not

TABLE 8–9 CELLULAR STANDARDS ARE ALPHABET SOUP

Generation	Cellular Standards Used	Type of Switching
1G	AMPS, ETACS, JTACS, NMT	Circuit
2G	GSM, IS-95 (CdmaOne), IS-136 (D-AMPS), iDEN, CDPD, EDGE/EGPRS, CDMA2000 1xRTT (IS-2000), iDEN	Circuit
3G	UMTS, WCDMA, CDMA2000 1xEV-DO (IS-856), EV-DO Rev. A and Rev. B, HSDPA, HSUPA	Circuit for VF Packet for Data
4G	LTE, WiMAX (IEEE 802.16m)	Packet

enough space in this book to describe details of all the systems that are listed in Table 8–9; however, a few of them will be described in the following sections. Standards are also evolving on a daily basis, so it is not possible to cover today’s developments in a book. The reader is encouraged to read about these developments. They are posted on many Web sites, such as the system descriptions on Wikipedia.

The following section describes some 1G systems. The 1G systems are analog circuit-switched systems.

First Generation (1G)—The AMPS Analog Circuit-switched System

As shown in Table 8–10, the first generation (1G) cellular telephone system used in the United States was the Advanced Mobile Phone System (AMPS), which was developed by AT&T and Motorola. It is an analog system, since it uses the VF audio signal to frequency modulate (FM) a carrier. To implement this AMPS concept in the United States, the FCC had to find spectral space for assignment. It did so by using the 806- to 890-MHz band that was once assigned to TV channels 70 to 83 (see Table 8–13), but discontinued in 1974. Part of this band was assigned for cellular service, as shown in Table 8–10. Historically, the FCC decided to license two competing cell systems in each geographical area; one licensed to a conventional telephone company and another to a nontelephone company common carrier. The non-telephone system is called the *A service*, or *nonwireline service*, and the telephone company system is called the *B service*, or *wireline service*. Thus, subscribers to a 1G cellular system have the option of renting service from the wireline company or the nonwireline company. In addition, as shown in the Table 8–10, the standards provide for full duplex service. That is, one carrier frequency is used for mobile to cell base-station transmission, and another carrier frequency is used for base-station to mobile transmission. Control is provided by FSK signaling. Of the 416 channels that may be used by a cellular service licensee, 21 are used for paging (i.e., control) with FSK signaling. FSK signaling is also used at the beginning and end of each call on a VF channel. When a cellular telephone is turned on, its receiver scans the paging channels looking for the strongest cell-site signal and then locks onto it. The cell site transmits FSK data continuously on a paging channel, and, in particular, it sends control information addressed to a particular cellular phone when a call comes in for it. That is, the FSK control signal tells the phone which channel to use for a call.

Each cellular telephone contains a PROM (programmable read-only memory) or EPROM (erasable programmable read-only memory)—called a *numeric assignment module* (NAM). The NAM is programmed to contain the telephone number—also called the *mobile identification number* (MIN)—of the phone. The phone also contains its *electronic service number* (ESN) which is a unique identification number embedded in the phone by the manufacturer.

When the phone is "on the air" it automatically transmits its serial number to the MSC. The serial number is used by the MSC to lock out phone service to any phone that has been stolen. This feature, of course, discourages theft of the units. The MSC uses the telephone number of the unit to provide billing information. When the phone is used in a remote city, it can be placed in the *roam mode*, so that calls can be initiated or received, but still allow the service to be billed via the caller's "hometown" company.

TABLE 8–10 1G MAJOR ANALOG FDMA CELLULAR TELEPHONE SYSTEMS

Item	System Name ^a and Where Used			
	AMPS North America			
	A Service (Nonwire Line)	B Service (Wire Line)	ETACS United Kingdom	JTACS Japan
Year introduced	1983	1983	1985	1988
Base cell station				
Transmit bands (MHz)	869–880, 890–891.5	880–890, 891.5–894	917–933, 935–960	860–870
Mobile station				
Transmit bands (MHz)	824–835, 845–846.5	835–845, 846.5–849	872–888, 890–915	915–925
Maximum power (watts)	3	3	3	2.8
Cell size, radius (km)	2–20	2–20	2–20	2–20
Number of duplex channels	416 ^b	416 ^b	1,000	400
Channel bandwidth (kHz)	30	30	25	25
Modulation				
Voice	FM	FM	FM	FM
	12-kHz peak deviation	12-kHz peak deviation	9.5-kHz peak deviation	9.5-kHz peak deviation
Control signal (Voice and paging channels)	FSK	FSK	FSK	FSK
	8-kHz peak deviation	8-kHz peak deviation	6.4-kHz peak deviation	6.4-kHz peak deviation
	10 kbits/s	10 kbits/s	8 kbits/s	8 kbits/s
	Manchester line code	Manchester line code	Manchester line code	Manchester line code

^a AMPS, advanced mobile phone system; ETACS, extended total access communication system; JTACS, Japan total access communication system.

^b 21 of the 416 channels are used exclusively for paging (i.e., control channels).

While a call is in progress, the cellular subscriber may be moving from one cell area to another, so the MSC does the following:

- Monitors the signal strength from the cellular telephone as received at the cell base station. If the signal drops below some designated level, the MSC initiates a “hand off” sequence.
- For “hand off,” the MSC inquires about the signal strength received at adjacent cell sites.
- When the signal level becomes sufficiently large at an adjacent cell site, the MSC instructs the cellular radio to switch over to an appropriate channel for communication with that new cell site. This switching process takes less than 250 ms and usually is unnoticed by the subscriber.

Table 8–10 shows three major analog standards that are used around the world. Moreover, since cellular telephones are so popular, it became clear that these wideband FM analog systems did not have the capacity to accommodate the new subscribers. For larger capacity, new digital cellular systems, shown in Table 8–11, are used. The GSM digital system has been used in Europe to provide one uniform standard that replaces the numerous analog systems that have been phased out. As of 2011, most of the 1G systems have been replaced by higher-generation systems.

Second Generation (2G)—The Digital Circuit-Switched Systems

Table 8–11 shows standards for the popular second-generation (2G) cellular telephone systems. They are all digital. The analog VF signal is converted to a compressed digital bit stream, which is modulated onto a carrier. The bit rate of the compressed data is designed to be relatively small so that a large number of users can be accommodated.

The digital approach has many advantages. It provides private conversations, resistance to cellular fraud, and allows special features, such as caller ID, that can be easily implemented. The digital approach provides noise-free telephone conversations out to the edge of the cell fringe area because of the sharp threshold effect of digital systems. That is, the data are received either error-free for recovery of noise-free audio or with so many errors that the audio is turned off. Compare this with the noisy audio of analog FM systems when fringe-area signals are received.

The *Group Special Mobile (GSM)* system (see Table 8–11) is the 2G system that replaces many different 1G analog systems in Europe. Now, one can travel around Europe and remain in communication via the use of a GSM phone, instead of needing up to 15 different types of 1G cell phones. GSM uses TDMA that provides time slots to accommodate up to eight users on each 200-kHz-wide channel. The GSM phone is programmed for a particular user’s account by an attached *sim card*, which contains the user’s phone number and other account information. The sim card allows the subscriber to clone any GSM phone, whether it is a handset or a fixed mobile phone, to his/her account by attaching the card. If a user travels to a country where a different frequency band is used, a rented GSM phone can be instantly programmed to the user’s account by attaching the card. GSM has been adopted by many countries around the world. Details of GSM system design are published in a book by Garg and Wilkes [Garg and Wilks, 1999].

TABLE 8-11 2G MAJOR DIGITAL CELLULAR TELEPHONE SYSTEMS

Item	System Name ^a and Where Used			
	GSM Europe, Asia	IS-136 (D-AMPS) North America	IS-95 (Cdma One) North America, Asia	iDEN North America
Year introduced	1990	1991	1993	1994
Base cell station ^h				
Transmit bands (MHz)	935–960	869–894	869–894	851–866,
Mobile station ^h				
Transmit bands (MHz)	890–915	824–849	824–849	806–821
Maximum power (watts)	20	3	0.2	3
Number of duplex channels	125	832	20	600
Channel bandwidth (kHz)	200	30	1250	25
Channel access method	TDMA	TDMA	CDMA ^f	TDMA
Users per channel	8	3	35 ^g	3
Modulation ^b				
Type	GMSK	$\pi/4$ DQPSK	QPSK	quad-16QAM
Data rate	270.833 kb/s	48.6 kb/s	9.6 kb/s ^f	64 kb/s
Filter	0.3R Gaussian ^c	$r = 0.35$ raised cosine ^d		$r = 0.2$ raised cosine ^d
Speech coding ^e	RPE-LTP	VSELP	QCELP	VSELP
	13 kb/s	8 kb/s	8 kb/s (variable)	8 kb/s

^a GSM, group special mobile; NADC, North American digital cellular; iDEN, Integrated digital enhanced network.

^b GMSK, Gaussian MSK (i.e., $h = 0.5$ FSK, also called FFSK, with Gaussian premodulation filter; see Sec. 5–11 and footnote c; $\pi/4$ DQPSK, differential QPSK with $\pi/4$ rotation of reference phase for each symbol transmitted; quad-16QAM is four 16QAM carriers for each signal).

^c Baseband Gaussian filter with 3 dB bandwidth equal to 0.3 of the bit rate.

^d Square root of raised cosine characteristic at transmitter and receiver.

^e RPE-LTP, regular pulse excitation—long-term prediction; VSELP, vector sum excited linear prediction filter; QCELP, Qualcomm’s codebook excited linear prediction.

^f The spread spectrum chip rate is 1.2288 Mchips/s, for a spreading factor of 128 or 21-dB processing gain.

^g For CDMA, channel frequencies may be reused in adjacent cells; other methods (TDMA and FDMA) require a seven-cell reuse pattern.

^h For 1,900-MHz-band PCS system, the base station transmit band is 1,930–1,990 MHz and the mobile station transmit band is 1,850–1,910 MHz.

The *IS-54, IS-136 North American Digital Cellular (NADC)* system, also called TDMA and D-AMPS, was the first 2G standard adopted for use in the United States. It uses TDMA to accommodate up to three users on each 30-kHz-wide channel. It is designed to replace AMPS analog signaling on a channel-for-channel basis. Thus, an incumbent AMPS service provider can gradually convert some channels to IS-54 digital service as needed, depending on customer demand.

The *IS-95* standard was developed by Qualcomm and adopted for use in the United States 900-MHz cellular band in 1993. It uses CDMA to accommodate up to 35 users in a 1.2-MHz-wide channel. One IS-95 channel can be used to replace 41 30-kHz-wide AMPS channels. The advantage of CDMA is that the same channel frequencies may be reused in adjacent cell sites, because the users are distinguished by their different spreading codes. (A different set of spreading codes is used in adjacent cell sites.) The CDMA approach has many advantages. For example, the number of allowed users for each channel bandwidth is not a hard number (as it is in TDMA, where there are a fixed number of available time slots), since additional users with new spreading codes can be added. The additional users cause a graceful increase in noise level. Users can be added until the errors become intolerable (due to the increased noise level). It is expected that the CDMA approach will become more and more popular and become the dominant type of system. Details of CDMA are given in books by Rhee [Rhee, 1998] and Garg [Garg, 2000].

The *Integrated Digital Enhanced Network (iDEN)* was developed by Motorola. It has been adopted by Nextel, now Sprint Nextel Corp., in their system, which uses specialized mobile radio (SMR) frequencies in the 800 MHz band. The iDEN system uses TDMA to accommodate up to 3 users in each 25 kHz-wide channel. Each channel uses four 16QAM carriers so that $4 \times 4 = 16$ data bits are sent in parallel during each symbol time-interval. This is similar to OFDM signaling, which was discussed in Sec. 5–12. Thus, the time duration of a symbol is relatively long, so that the transmitted signal is resistant to multipath fading. In addition to the usual cellular phone features, the iDEN protocol allows for a *virtual private network (VPN)* to be established for business subscribers. Thus, co-workers of the business can direct connect a private call or a group call to each other over the VPN. Because of its poor ability to handle data, iDEN is scheduled to be phased out in 2013.

As indicated in Table 8–11, all of these 2G systems use some sort of low-bit-rate speech coding of the VF signal so that a larger number of users can be accommodated in the limited RF bandwidth. See Sec. 3–8 for a discussion of speech coding. For example, the vector sum excited linear prediction filter (VSELP) encoder used for the NADC and iDEN systems is a modified version of the codebook excited linear prediction (CELP) technique developed by B. Atal at the AT&T Bell Laboratories [Gerson and Jasiuk, 1990]. This technique mimics the two main parts of the human speech system: the vocal cords and the vocal tract. The vocal tract is simulated by a time-varying linear prediction filter, and the sounds of the vocal cord used for the filter excitation are simulated with a database (i.e., a codebook) of possible excitations. The VSELP encoder (at the transmitter) partitions the talker's VF signal into 20-ms segments. The encoder sequences through the possible codebook excitation patterns and the possible values for the filter parameters to find the synthesized speech segment that gives the best match to the VF segment. The encoder parameters that specify this best match are then transmitted via digital data to the receiver, where the

received data establish the parameters for the receiver speech synthesizer so that the VF signal may be reproduced for the listener.

2G systems have achieved significant improvements over the 1G AMPS system in terms of system capacity, service quality, information security, and other features such as text messaging and camera phones. 2G systems were developed mainly for voice transmission, not data transmission. Most 2G systems operate at relatively slow data rates of 8 kb/s or 13 kb/s. Consequently, transmission of computer-system data is severely limited in these systems. Higher data rates have been the main driving force in the development of 3 G systems. Some of these systems can obtain data rates of 384 kb/s for users traveling at speeds up to 120 km/hr whereas data rates of up to 2 Mb/s can be obtained for stationary users.

An interesting wireless system application is the OnStar subscription service provided by General Motors (GM). This service provides GM vehicle drivers and their passengers contact with an OnStar representative for emergency and concierge-like services. The communication link is via the cellular telephone network and the vehicle-position information is provided by an on-board GPS (Global Positioning System) receiver. Some of the services provided are: stolen-vehicle location assistance, emergency services, vehicle-trouble remote diagnosis, roadside assistance, accident assistance, remote door unlocking, driver directions, and accident detection via automatic notification of air bag deployment.

Third Generation (3G)—Digital with Circuit and Packet Switching

As indicated earlier, users are demanding data services for applications such as browsing Web pages and e-mail, in addition to VF calls. 3G networks have evolved from 2G networks using packet switching for data transmission and circuit switching for VF calls. Most of the 3G networks use protocol extensions of 2G-type technology. At the end of 2007, 9% of worldwide subscribers (295 million) were using 3G technology. Data rates vary widely for the different types of 3G systems. For a HSDPA (High Speed Downlink Packet Access) type of 3G cellular network, the typical downlink data rate is 2Mb/s and the typical uplink data rate is 200kb/s.

Fourth Generation (4G)—Digital with Packet Switching

4G networks differ from 3G networks by the complete elimination of circuit switching and using packet switching with IP (internet protocol). Thus, the networks are optimized to transmit and receive high-speed data. VF calls are handled using VoIP (Voice over Internet Protocol) on the data network. Two competing technologies are used: LTE (Long Term Evolution) and WiMax.

LTE uses OFDM on the downlink and FDMA on the uplink, with channel bandwidths (presently) up to 20 MHz. The modulation on the OFDM and FDMA carriers is either QPSK, 16QAM, or 64QAM. In the United States, Verizon, AT&T, and Metro PCS rolled out LTE systems in 2011. On the Verizon 4G network, measured rates on the operating system in Washington, DC., are 16Mb/s on the downlink and 6.6 Mb/s on the uplink [Mossberg, 2011].

The WiMax technology is used by Sprint, in partnership with Clearwire, in the United States. For a description of the WiMax technology, see Section 8–11.

8–9 TELEVISION

Television (TV) is a method of reproducing fixed or moving visual images by the use of electronic signals. There are numerous kinds of TV systems, and different standards have been adopted around the world. Moreover, as discussed subsequently, TV is in a state of flux since there is a worldwide push for *digital television* (DTV). On-the-air broadcasters in the United States switched to DTV in June 2009, although there are a few low-power TV stations that are still analog. U.S. cable TV systems are still using analog TV on the lower-tier channels to accommodate subscribers with analog TV sets, but are using QAM DTV technology for the digital channels. As we shall see, analog TV uses an analog video signal that is interspersed by digital pulses (for line and frame synchronization) to form the composite analog TV signal. DTV uses samples to the analog TV video signal and passes these samples to an ADC (analog-to-digital converter). The synchronization data is interspersed on the ADC output signal to produce the composite digital TV signal.

The following sections describe U.S. television technology as it has developed historically, by first describing analog black-and-white TV, then analog color TV, and, finally, digital TV.

Analog Black-and-White Television

The black-and-white image of a scene is essentially the intensity of the light as a function of the *x*- and *y*-coordinates of the scene and of time. However, an electrical waveform is only a function of time, so that some means of encoding the *x*- and *y*-coordinates associated with the intensity of light from a single point in the scene must be used. In broadcast TV, this is accomplished by using *raster scanning*, which is shown in Fig. 8–30. It is assumed that the whole scene is scanned before any object in the scene has moved appreciably. Thus, moving images can be transmitted by sending a series of still images, just as in motion pictures. As the scene is scanned, its intensity is signified by the amplitude of the analog video signal. A synchronizing pulse is inserted at the end of each scan line by the electronic switch, as shown in Fig. 8–30, to tell the TV receiver to start another scan line. For illustrative purposes, a black triangle is located in the upper left portion of the scene. In Figs. 8–30b and 8–30c, numbers are used to indicate the corresponding times on the video waveform, with the location of the point being scanned in the scene at that instant. The composite analog TV video signal is actually a hybrid signal that consists of a digital waveform during the synchronizing interval and an analog waveform during the video interval. Operating personnel monitor the quality of the video by looking at a *waveform monitor*, which displays the composite video waveform, as shown in Fig. 8–30c.

The picture (as viewed) is generated by scanning left to right to create a line, and the lines move from the top to the bottom of the screen. During retrace, indicated by the dashed lines from right to left, the TV screen is turned off by the video level that is “blacker than black” during the sync pulse interval. The scene is actually covered by scanning alternate lines from the top to the bottom (one field) and returning to the top to scan the missed lines (the next field). This technique is called *interlacing* and reduces the flicker effect on moving pictures, giving two fields (passes down the screen) for every frame. In the United States there are approximately 30 frames/s transmitted, which is equivalent to 60 fields/s for the 2:1

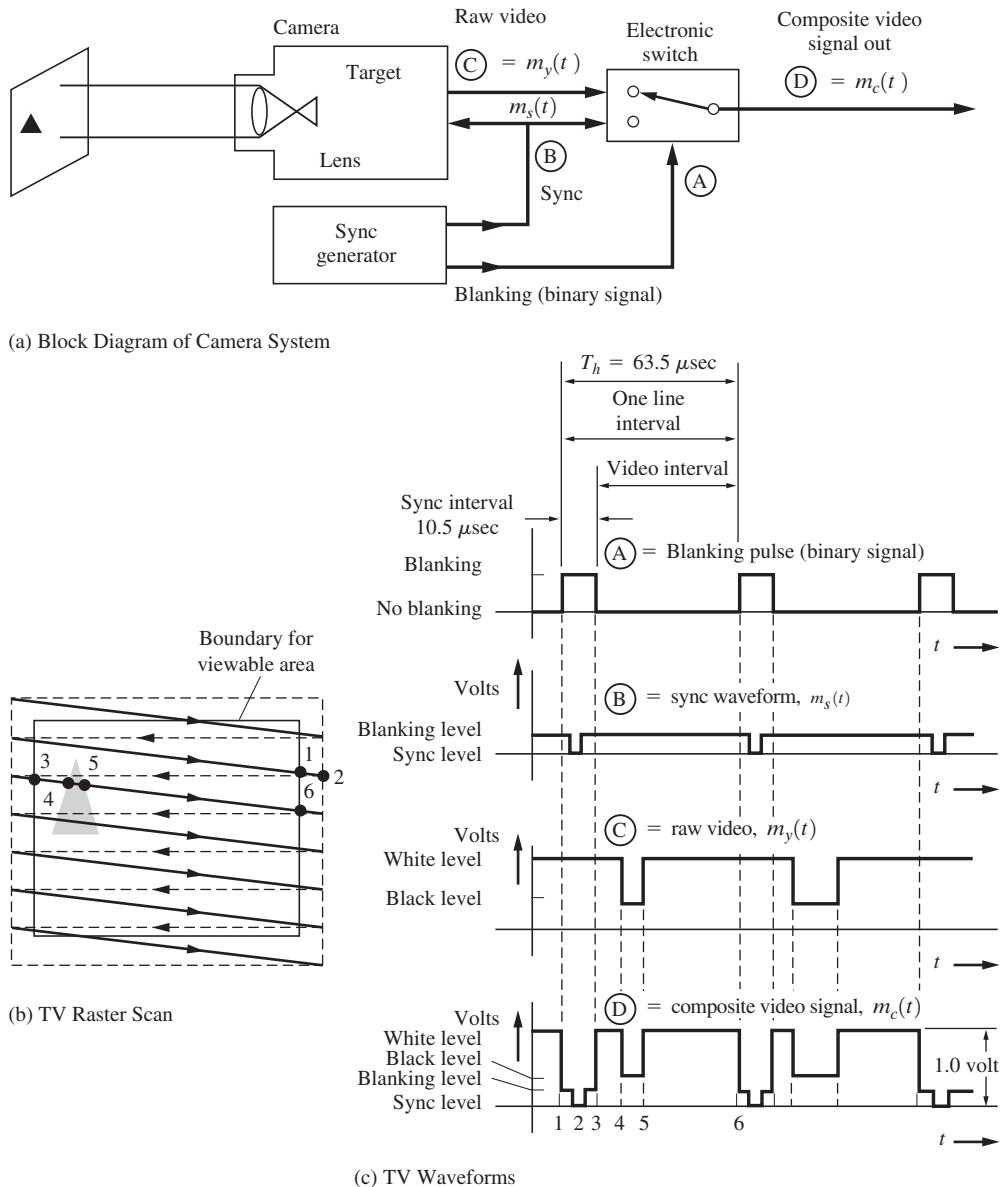


Figure 8-30 Generation of a composite analog black-and-white video signal.

interlacing that is used. When the scan reaches the bottom of a field, the sync pulse is widened out to cover the whole video interval plus sync interval. This occurs for 21 lines, and, consequently, a black bar is seen across the screen if the picture is “rolled up.” In the receiver, the vertical sync (wide pulse) can be separated from the horizontal sync (narrow pulse) by using a differentiator circuit to recover the horizontal sync and an integrator to recover the vertical

sync. The vertical interval is also used to send special signals, such as testing signals that can be used by TV engineers to test the frequency response and linearity of the equipment on-line [Solomon, 1979]. In addition, some TV programs have closed-caption information that can be decoded on TV sets used by deaf viewers. These sets insert subtitles across the bottom of the screen. As shown in Table 8-12, this closed-captioning information is transmitted during line 21 of the vertical interval by inserting a 16-bit code word. Details of the exact sync structure are rigorously specified by the FCC. (See Fig. 8-37.)

TABLE 8-12 U.S. ANALOG TELEVISION BROADCASTING STANDARDS

Item	FCC Standard
Channel bandwidth	6 MHz
Visual carrier frequency	$1.25 \text{ MHz} \pm 1000 \text{ Hz}$ above the lower boundary of the channel
Aural carrier frequency	$4.5 \text{ MHz} \pm 1000 \text{ Hz}$ above the visual carrier frequency
Chrominance subcarrier frequency	$3.579545 \text{ MHz} \pm 10 \text{ Hz}$
Aspect (width-to-height) ratio	Four units horizontally for every three units vertically
Modulation-type visual carrier	AM with negative polarity (i.e., a decrease in light level causes an increased real envelope level)
Aural carrier	FM with 100% modulation being $\Delta F = 25 \text{ kHz}$ with a frequency response of 50 to 15,000 Hz using $75\text{-}\mu\text{s}$ preemphasis
Visual modulation levels	
Blanking level	$75\% \pm 2.5\%$ of peak real envelope level (sync tip level)
Reference black level	$7.5\% \pm 2.5\%$ (of the video range between blanking and reference white level) below blanking level; this is called the <i>setup</i> level by TV engineers ^a
Reference white level	$12.5\% \pm 2.5\%$ of sync tip level ^a
Scanning	
Number of lines	525 lines/frame, interlaced 2:1
Scanning sequence	Horizontally: left to right; vertically: top to bottom
Horizontal scanning frequency, f_h	$15,734.264 \pm 0.044 \text{ Hz}$ (2/455 of chrominance frequency); $15,750 \text{ Hz}$ may be used during monochrome transmissions
Vertical scanning frequency, f_v	59.94 Hz (2/525 of horizontal scanning frequency); 60 Hz may be used during monochrome transmissions; 21 equivalent horizontal lines occur during the vertical sync interval of each field
Vertical interval signaling	Lines 13, 14, 15, 16. Teletext Lines 17, 18. Vertical interval test signals (VITS) Line 19. Vertical interval reference (VIR) Line 20, Field 1. Station identification Line 21, Field 1. Captioning data Line 21, Field 2. Captioning framing code ($\frac{1}{2}$ line)

^a See Fig. 8-31b.

The composite baseband signal consisting of the *luminance* (intensity) video signal $m_y(t)$ and the *synchronizing* signal $m_s(t)$ is described by

$$m_c(t) = \begin{cases} m_c(t), & \text{during the sync interval} \\ m_y(t), & \text{during the video interval} \end{cases} \quad (8-58)$$

The spectrum of $m_c(t)$ is very wide since $m_c(t)$ contains rectangular synchronizing pulses. In fact, the bandwidth would be infinite if the pulses had perfect rectangular shapes. In order to reduce the bandwidth, the pulses are rounded as specified by FCC standards. (See Fig. 8-37.) This allows $m_c(t)$ to be filtered to a bandwidth of $B = 4.2$ MHz (U.S. standard). For a still picture, the exact spectrum can be calculated using Fourier series analysis (as shown in Sec. 2-5). For a typical picture all fields are similar, and thus $m_c(t)$ would be periodic with a period of approximately $T_0 = 1/60$ s, which corresponds to the field rate of 60 fields/s. (See Table 8-12 for exact values.) Thus, for a still picture, the spectrum would consist of lines spaced at 60-Hz intervals. However, from Fig. 8-30, we can observe that there are dominant intervals of width T_h corresponding to scanned lines of the frame. Furthermore, the adjacent lines usually have similar waveshapes. Consequently, $m_c(t)$ is quasiperiodic with period T_h , and the spectrum consists of clusters of spectral lines that are centered on harmonics of the scanning frequency $nf_h = n/T_h$, where the spacing of the lines within these clumps is 60 Hz. For moving pictures, the line structure of the spectrum “fuzzes out” to a continuous spectrum with spectral clusters centered about nf_h . Furthermore, between these clusters the spectrum is nearly empty. As we shall see, these “vacant” intervals in the spectrum are used to transmit the color information for a color TV signal. This, of course, is a form of frequency-division multiplexing.

The resolution of TV pictures is often specified in terms of lines of resolution. The number of horizontal lines that can be distinguished from the top to the bottom of a TV screen for a horizontal line test pattern is called the *vertical-line resolution*. The maximum number of distinguishable horizontal lines (vertical line resolution) is the total number of scanning lines in the raster less those not used for the image. That is, the vertical resolution is

$$n_v = (N_f - N_v) \text{ lines} \quad (8-59a)$$

where N_f is the total number of scanning lines per frame and N_v is the number of lines in the vertical interval (not image lines) for each frame. For U.S. standards (Table 8-12), the maximum vertical resolution is

$$n_v = 525 - 42 = 483 \text{ lines} \quad (8-59b)$$

The resolution in the horizontal direction is limited by the frequency response allowed for $m_c(t)$. For example, if a sine-wave test signal is used during the video interval, the highest sine-wave frequency that can be transmitted through the system will be $B = 4.2$ MHz (U.S. standard), where B is the system video bandwidth. For each peak of the sine wave, a dot will appear along the horizontal direction as the CRT beam sweeps from left to right. Thus, the horizontal resolution for 2:1 interlacing is

$$n_h = 2B(T_h - T_b) \text{ pixels} \quad (8-60a)$$

where B is the video bandwidth, T_h is the horizontal interval, and T_b is the blanking interval. (See Fig. 8–30.) For U.S. standards, $B = 4.2 \text{ MHz}$, $T_h = 63.5 \mu\text{s}$, and $T_b = 10.5 \mu\text{s}$, so that the horizontal resolution is

$$n_h = 445 \text{ pixels} \quad (8-60b)$$

Furthermore, because of poor video bandwidth and the poor interlacing characteristics of consumer TV sets, this horizontal resolution of 445 is usually not obtained in practice.[†] At best, the U.S. standard of 445×483 does not provide very good resolution, and this poor resolution is especially noticeable on large-screen TV sets. [For comparison, the super VGA (SVGA) standard for computer monitors provides a resolution as large as 1024×768 .]

For broadcast TV transmission (U.S. standard), the composite video signal of Eq. (8–58) is inverted and amplitude modulated onto an RF carrier so that the AM signal is

$$s_v(t) = A_c[1 - 0.875m_c(t)] \cos \omega_c t \quad (8-61)$$

This is shown in Fig. 8–31. The lower sideband of this signal is attenuated so that the spectrum will fit into the 6-MHz TV channel bandwidth. This attenuation can be achieved by using a vestigial sideband filter, which is a bandpass filter that attenuates most of the lower sideband. The resulting filtered signal is called a *vestigial sideband* (VSB) signal, $s_{v_0}(t)$, as described in Sec. 5–5. The discrete carrier term in the VSB signal changes when the picture is switched from one scene to another, because the composite baseband signal has a nonzero DC level that depends on the particular scene being televised. The audio signal for the TV program is transmitted via a separate FM carrier located exactly 4.5 MHz above the visual carrier frequency.

The rated power of a TV visual signal is the effective isotropic radiated peak envelope power (EIRP, i.e., effective sync tip average power), and it is usually called simply the *effective radiated power* (ERP). The EIRP is the power that would be required to be fed into an isotropic antenna to get the same field strength as that obtained from an antenna that is actually used as measured in the direction of its maximum radiation. The antenna pattern of an omnidirectional TV station is shaped like a doughnut with the tower passing through the hole. (The antenna structure is located at the top of the tower for maximum line-of-sight coverage.) The ERP of the TV station (visual or aural) signal is

$$P_{\text{ERP}} = P_{\text{PEP}}G_A G_L \quad (8-62)$$

where


P_{PEP} = peak envelope power out of the transmitter,

G_A = power gain of the antenna (absolute units as opposed to decibel units) with respect to an isotropic antenna,

G_L = total gain of the transmission line system from the transmitter output to the antenna (including the duplexer gain).

For a VHF analog high-power TV station operating on channel 5, some typical values are $G_A = 5.7$, $G_L = 0.873$ (850 ft of transmission line plus duplexer), and a visual PEP of 20.1 kW.

[†] Typically, a horizontal resolution of about 300 lines is obtained.

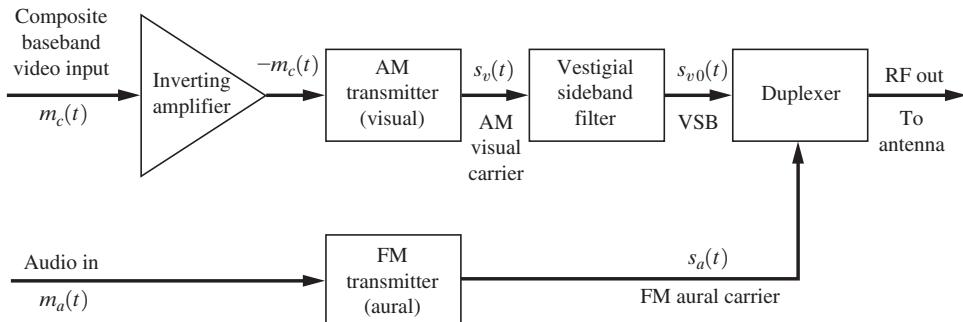

(a) Equipment Block Diagram

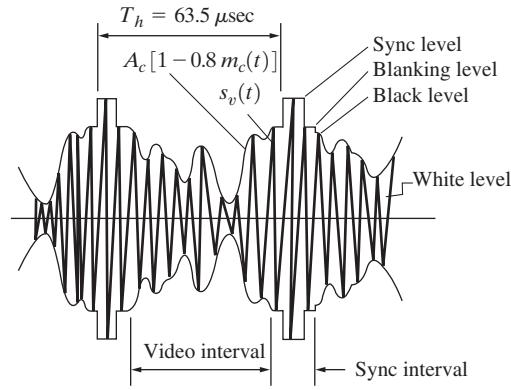
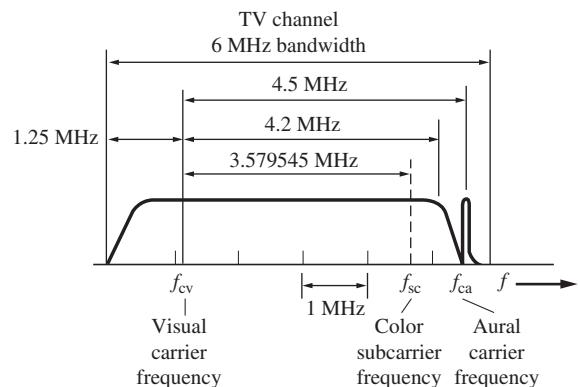
(b) AM Visual Carrier Waveform, $s_v(t)$
(Typical Video Modulation Illustrated)(c) Magnitude Spectrum of RF Output
(Frequency Response Characteristic)

Figure 8-31 TV transmission system.

This gives an overall ERP of 100 kW, which is the maximum power licensed by the FCC for channels 2 to 6 (low-VHF band). For a UHF station operating on channel 20, some typical values are $P_{PEP} = 21.7$ kW, $G_A = 27$, $G_L = 0.854$ (850 ft of transmission line), which gives an ERP of 500 kW.

A simplified block diagram of a black-and-white TV receiver is shown in Fig. 8-32. The composite video, $m_c(t)$, as described earlier, plus a 4.5-MHz FM carrier containing the audio modulation, appears at the output of the envelope detector. The 4.5-MHz FM carrier is present because of the nonlinearity of the envelope detector and because the detector input (IF signal) contains, among other terms, the FM aural carrier plus a discrete (i.e., sinusoidal) term, which is the video carrier, located 4.5 MHz away from the FM carrier signal. The intermodulation product of these two signals produces the 4.5-MHz FM signal, which is called the *intercarrier signal*, and contains the aural modulation. Of course, if either of these two input signal components disappears, the 4.5-MHz output signal will also disappear. This will occur if the white level of the picture is allowed to go below, say, 10% of the peak envelope level (sync tip level) of the AM visual signal. This is why the FCC specifies

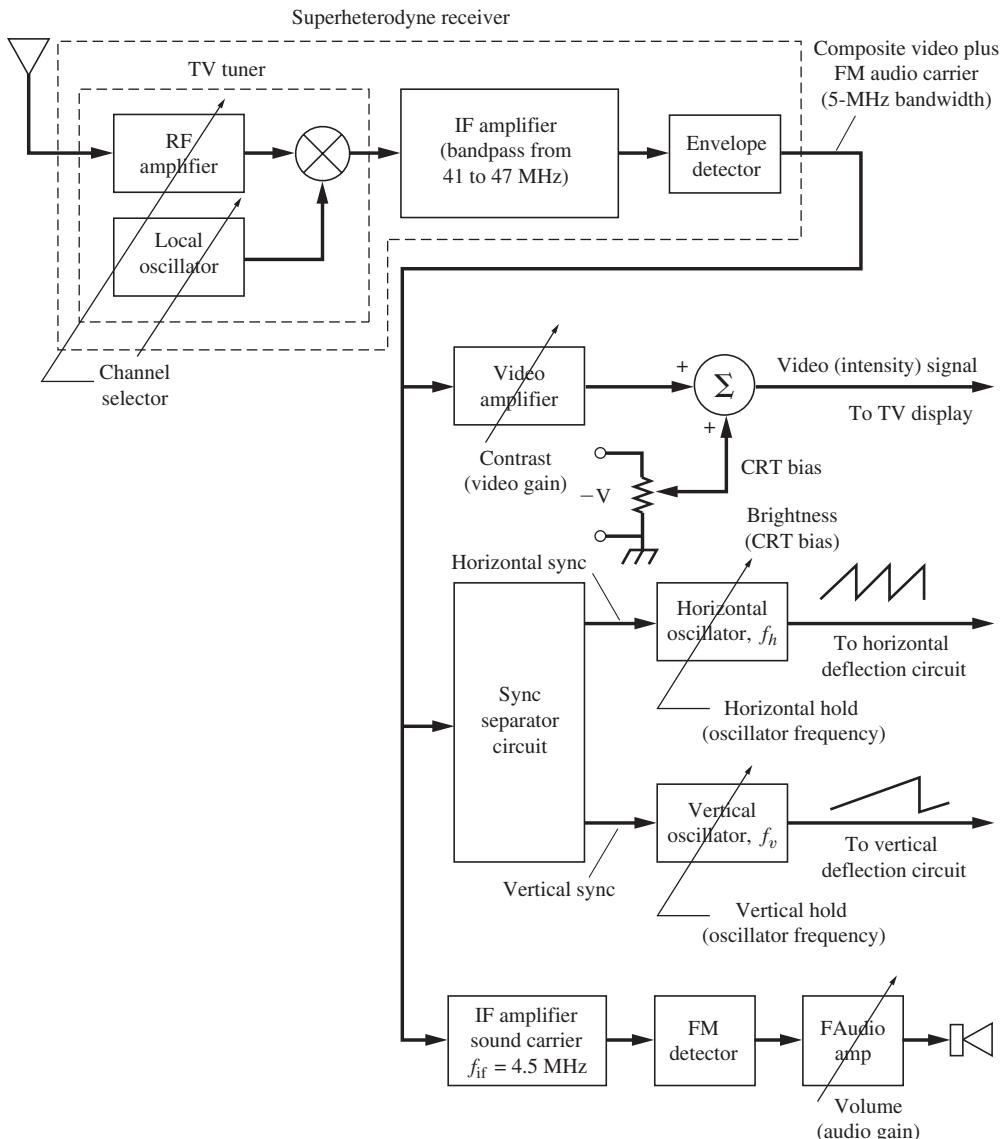


Figure 8–32 Black-and-white TV receiver.

that the white level cannot be lower than $(12.5 \pm 2.5)\%$ of the peak envelope level (see Table 8–12 and Fig. 8–31b). When this occurs, a buzz will be heard in the sound signal since the 4.5-MHz FM carrier is disappearing at a 60-Hz (field) rate during the white portion of the TV scene. The sync separator circuit consists of a lossy integrator to recover the (wide) vertical sync pulses and a lossy differentiator to recover the (narrow) horizontal

pulses. The remainder of the block diagram is self-explanatory. The user-available adjustments for an analog black-and-white TV are also shown.

MTS Stereo Sound

Stereo audio, also known as *multichannel television sound* (MTS), is also available and is accomplished using the FDM technique shown in Fig. 8-33. This FDM technique is similar to that used in standard FM broadcasting, studied in Sec. 5-7 and illustrated by Fig. 5-18. For compatibility with monaural audio television receivers, the left plus right audio, $m_L(t) + m_R(t)$, is frequency modulated directly onto the aural carrier of the television station. Stereo capability is obtained by using a DSB-SC subcarrier with $m_L(t) - m_R(t)$ modulation. The subcarrier frequency is $2f_h$, where $f_h = 15.734$ kHz is the horizontal sync frequency for the video. (See Table 8-12.) Capability is also provided for a *second audio program* (SAP), such as audio in a second language. This is accomplished by using an FM subcarrier of frequency $5f_h$. Furthermore, a *professional channel* subcarrier at $6.5f_h$ is allowed for the transmission of voice or data on a subscription service basis to paying customers. For further details on the FDM aural standards that have been adopted by television broadcasters and for other possible FDM formats, see a paper by Eilers [1985].

Analog Color Television

Color television pictures are synthesized by combining red, green, and blue light in the proper proportion to produce the desired color. This is done by using a color display that has three types of pixels: one type that emits red light, one that emits green light, and a third type that emits blue light. Therefore, three electronic video signals— $m_R(t)$, $m_G(t)$, and

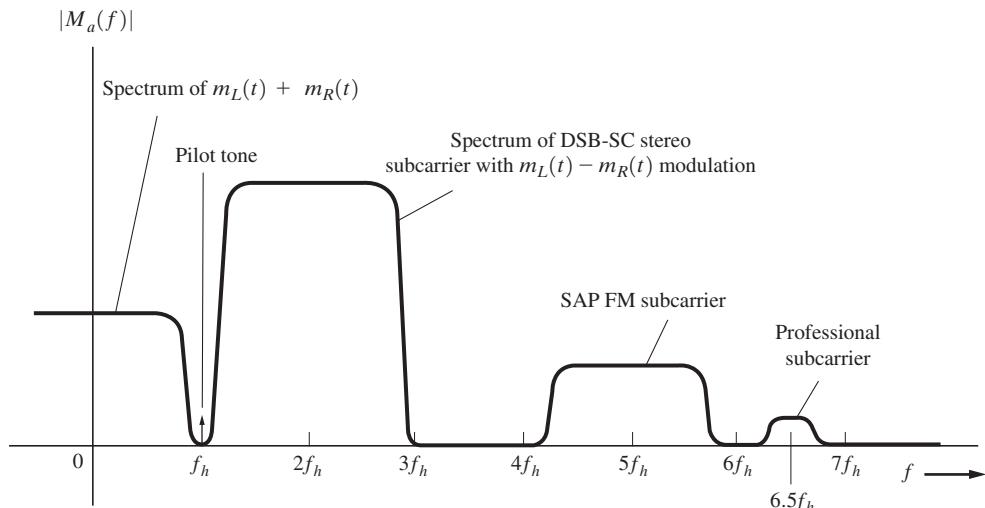


Figure 8-33 Spectrum of composite FDM baseband modulation on the FM aural carrier of U.S. analog TV stations.

$m_B(t)$ —are needed to drive the circuits that create the red, green, and blue light. Furthermore, a compatible color TV transmission system is needed such that black-and-white TV sets will receive the luminance video signal, $m_y(t)$, which corresponds to the gray scale of the scene. This compatibility between color and black-and-white transmission is accomplished by using a multiplexing technique analogous to that of FM stereo, except that three signals are involved in the problem instead of two.

The National Television System Committee (NTSC) compatible color TV system that was developed in the United States and adopted for U.S. transmissions in 1954 will be discussed. This technique is illustrated in Fig. 8–34. To accomplish compatible transmission, the waveforms that correspond to the intensity of the red, green, and blue components of the scene— $m_R(t)$, $m_G(t)$, and $m_B(t)$, respectively—are linearly combined to synthesize the equivalent black-and-white signal, $m_y(t)$, and two other independent video signals, called the *in-phase* and *quadrature* components, $m_i(t)$ and $m_q(t)$. (The names of these components arise

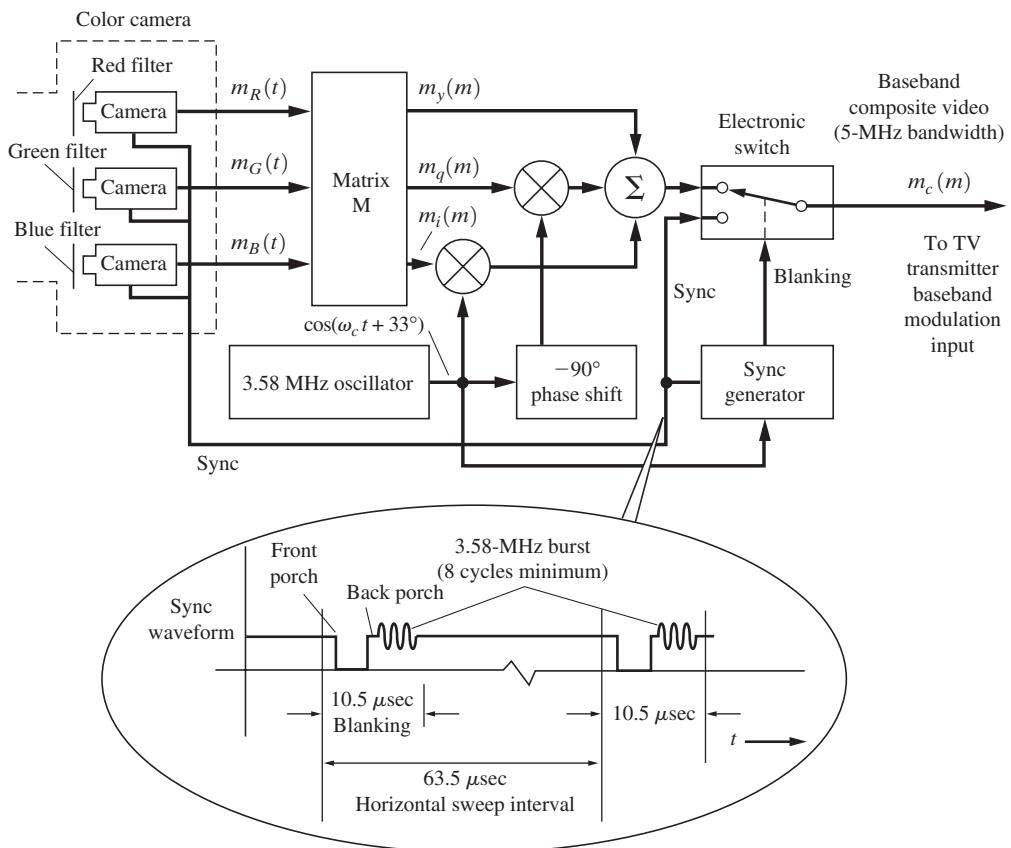


Figure 8–34 Generation of the composite NTSC baseband video signal. [Technically, $m_q(t)$ is low-pass filtered to an 0.5-MHz bandwidth and $m_i(t)$ is low-pass filtered to a 1.5-MHz bandwidth.]

from the quadrature modulation technique that is used to modulate them onto a subcarrier.) The exact equations used for these signals can be expressed in matrix form:

$$\begin{bmatrix} m_y(t) \\ m_i(t) \\ m_q(t) \end{bmatrix} = \underbrace{\begin{bmatrix} 0.3 & 0.59 & 0.11 \\ 0.6 & -0.28 & -0.32 \\ 0.21 & -0.52 & 0.31 \end{bmatrix}}_M \begin{bmatrix} m_R(t) \\ m_G(t) \\ m_B(t) \end{bmatrix} \quad (8-63)$$

where M is a 3×3 matrix that translates the red, green, and blue signals to the brightness, in-phase, and quadrature phase video (baseband) signals. For example, from Eq. (8–63), the equation for the *luminance* (black-and-white) signal is

$$m_y(t) = 0.3m_R(t) + 0.59m_G(t) + 0.11m_B(t) \quad (8-64)$$

Similarly, the equations for $m_i(t)$ and $m_q(t)$, which are called the *chrominance* signals, are easy to obtain. In addition, note that if $m_R(t) = m_G(t) = m_B(t) = 1$, which corresponds to maximum red, green, and blue, then $m_y(t) = 1$, which corresponds to the white level in the black-and-white picture.

The chrominance components are two other linearly independent components, and if they are transmitted to the color TV receiver together with the luminance signal, these three signals can be used to recover the red, green, and blue signals using an inverse matrix operation. The bandwidth of the luminance signal needs to be maintained at 4.2 MHz to preserve sharp (high-frequency) transition in the intensity of the light that occurs along edges of objects in the scene. However, the bandwidth of the chrominance signals does not need to be this large, since the eye is not as sensitive to color transitions in a scene as it is to black-and-white transitions. According to NTSC standards, the bandwidth of the $m_i(t)$ signal is 1.5 MHz, and the bandwidth of $m_q(t)$ is 0.5 MHz. When they are quadrature-modulated onto a subcarrier, the resulting composite baseband signal will then have a bandwidth of 4.2 MHz. (The upper sideband of the in-phase subcarrier signal is attenuated to keep a 4.2-MHz bandwidth.)

The composite NTSC baseband video signal is

$$m_c(t) = \begin{cases} m_s(t), & \text{during the sync interval} \\ m_y(t), + Re\{g_{sc}(t)e^{j\omega_{sc}t}\} & \text{during the video interval} \end{cases} \quad (8-65)$$

where

$$g_{sc}(t) = [m_i(t) - jm_q(t)]e^{j33^\circ} \quad (8-66)$$

Equation (8–66) indicates that the chrominance information is quadrature modulated onto a subcarrier (as described in Table 4–1). $m_s(t)$ is the sync signal, $m_y(t)$ is the luminance signal, and $g_{sc}(t)$ is the complex envelope of the subcarrier signal. The subcarrier frequency is $f_{sc} = 3.579545$ MHz ± 10 Hz, which, as we will see later, is chosen so that the subcarrier signal will not interfere with the luminance signal even though both signals fall within the 4.2-MHz passband.

In analog broadcast TV, this composite NTSC baseband color signal is amplitude modulated onto the visual carrier, as described by Eq. (8–61) and shown in Fig. 8–31. In microwave relay applications and satellite relay applications, this NTSC baseband signal is

frequency modulated onto a carrier, as described in Sec. 8–5. These color baseband signals can be transmitted over communication systems that are used for analog black-and-white TV, although the frequency response and linearity tolerances that are specified are tighter for analog color-TV transmission.

As indicated before, the complex envelope for the subcarrier, as described by Eq. (8–66), contains the color information. The magnitude of the complex envelope, $|g_{sc}(t)|$ is the *saturation*, or amount of color, in the scene as it is scanned with time. The angle of the complex envelope, $\angle g_{sc}(t)$, indicates the hue, or tint, as a function of time. Thus, $g_{sc}(t)$ is a vector that moves about in the complex plane as a function of time as the lines of the picture are scanned. This vector may be viewed on an instrument called a *vectorscope*, which has a CRT that displays the vector $g_{sc}(t)$, as shown in Fig. 8–35. The vectorscope is a common piece of test equipment that is used to calibrate analog color-TV equipment and to provide an on-line measure of the quality of the color signal being transmitted. The usual vectorscope presentation has

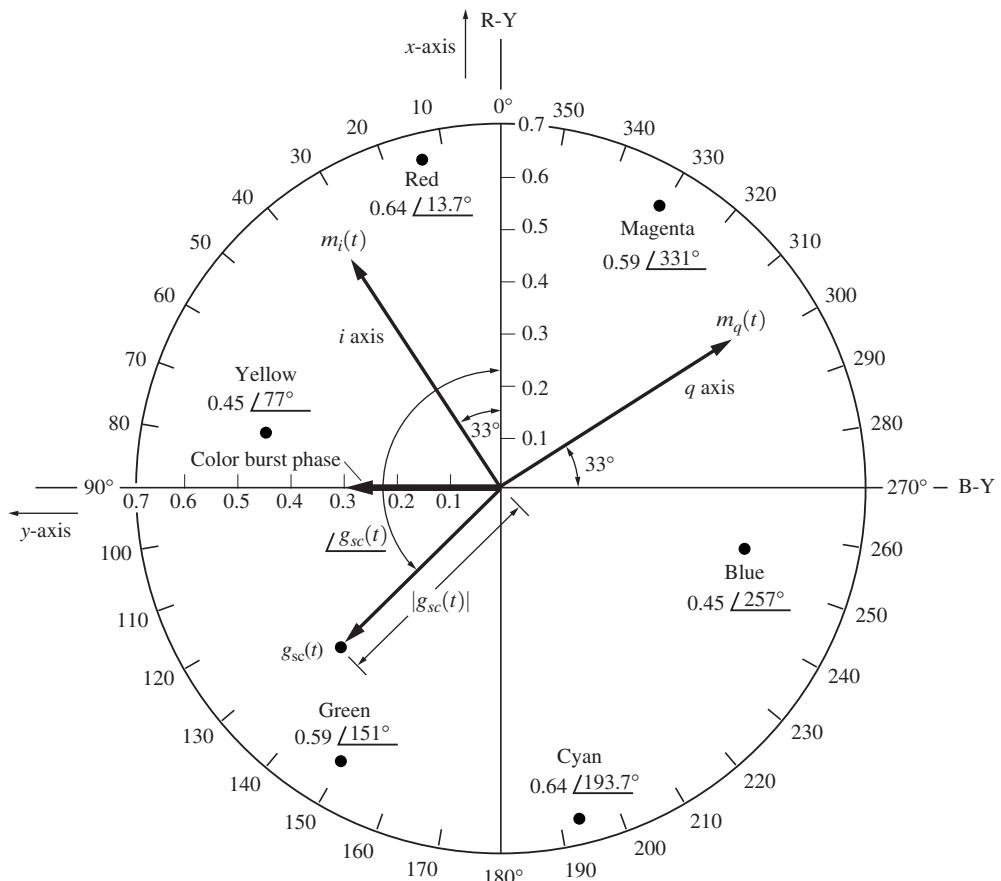


Figure 8–35 Vectorscope presentation of the complex envelope for the 3.58-MHz chrominance subcarrier.

the x -axis located in the vertical direction, as indicated on the figure. Using Eq. (8-66), we see that the positive axis directions for the $m_i(t)$ and $m_q(t)$ signals are also indicated on the vectorscope presentation, together with the vectors for the saturated red, green, and blue colors. For example, if saturated red is present, then $m_R = 1$ and $m_G = m_B = 0$. Using Eq. (8-63), we get $m_i = 0.6$ and $m_q = 0.21$. Thus, from Eq. (8-66), the saturated red vector is

$$(g_{sc})_{\text{red}} = (0.60 - j0.21)e^{j33^\circ} = 0.64 \angle 13.7^\circ$$

Similarly, the saturated green vector, is $(g_{sc})_{\text{green}} = 0.59 \angle 151^\circ$, and the saturated blue vector is $(g_{sc})_{\text{blue}} = 0.45 \angle 257^\circ$. These vectors are shown in Fig. 8-35. It is interesting to note that the complementary colors have opposite polarities from each other on the vectorscope, where cyan is the complement of red, magenta is the complement of green, and yellow is the complement of blue.

For color subcarrier demodulation at the receiver, a phase reference is needed. This is provided by keying in an eight-cycle (or more) burst of the 3.58-MHz subcarrier sinusoid on the “back porch” of the horizontal sync pulse, as shown in Fig. 8-34. The phase of the reference sinusoid is $+90^\circ$ with respect to the x -axis, as indicated on the vectorscope display (Fig. 8-35).

An analog color receiver is similar to an analog black-and-white TV receiver except that it has color demodulator circuits and a color display. This difference is shown in Fig. 8-36, where the color demodulator circuitry is indicated. The in-phase and quadrature signals, $m_i(t)$ and $m_q(t)$, are recovered (demodulated) by using product detectors where the reference signal is obtained from a PLL circuit that is locked onto the color burst (which was transmitted on the back porch of the sync pulse). M^{-1} is the inverse matrix of that given in Eq. (8-63) so that the three video waveforms corresponding to the red, green, and blue intensity signals are recovered. Note that the hue control on the TV set adjusts the phase of the reference that sets the tint of the picture on the TV set. The color control sets the gain of the chrominance subcarrier signal. If the gain is reduced to zero, no subcarrier will be present at the input to the product detectors. Consequently, a black-and-white picture will be reproduced on the color-TV display.

As stated earlier, both the luminance and chrominance subcarrier signals are contained in the 4.2-MHz composite NTSC baseband signal. This gives rise to interfering signals in the receiver video circuits. For example, in Fig. 8-36 there is an interfering signal (i.e., other terms) on the input to the inverse matrix circuit. The interference is averaged out on a line-by-line scanning basis by the viewer’s vision if the chrominance subcarrier frequency is an odd multiple of half of the horizontal scanning frequency. For example, from Table 8-12, $f_{sc} = 3,579,545$ Hz and $f_h = 15,734$ Hz. Consequently, there are 227.5 cycles of the 3.58-MHz chrominance interference across one scanned line of the picture. Because there is a half cycle left over, the interference on the *next* scanned line will be 180° *out of phase* with that of the present line, and the interference will be *canceled out* by the eye when one views the picture.

As we have seen, the NTSC color system is an ingenious application of basic engineering principles.

Standards for TV and CATV Systems

A summary of some of the U.S. analog TV transmission standards is shown in Table 8-12, and details of the synchronizing waveform are given in Fig. 8-37. A listing of the frequencies for the broadcast on-the-air analog and digital TV channels is given in Table 8-13.

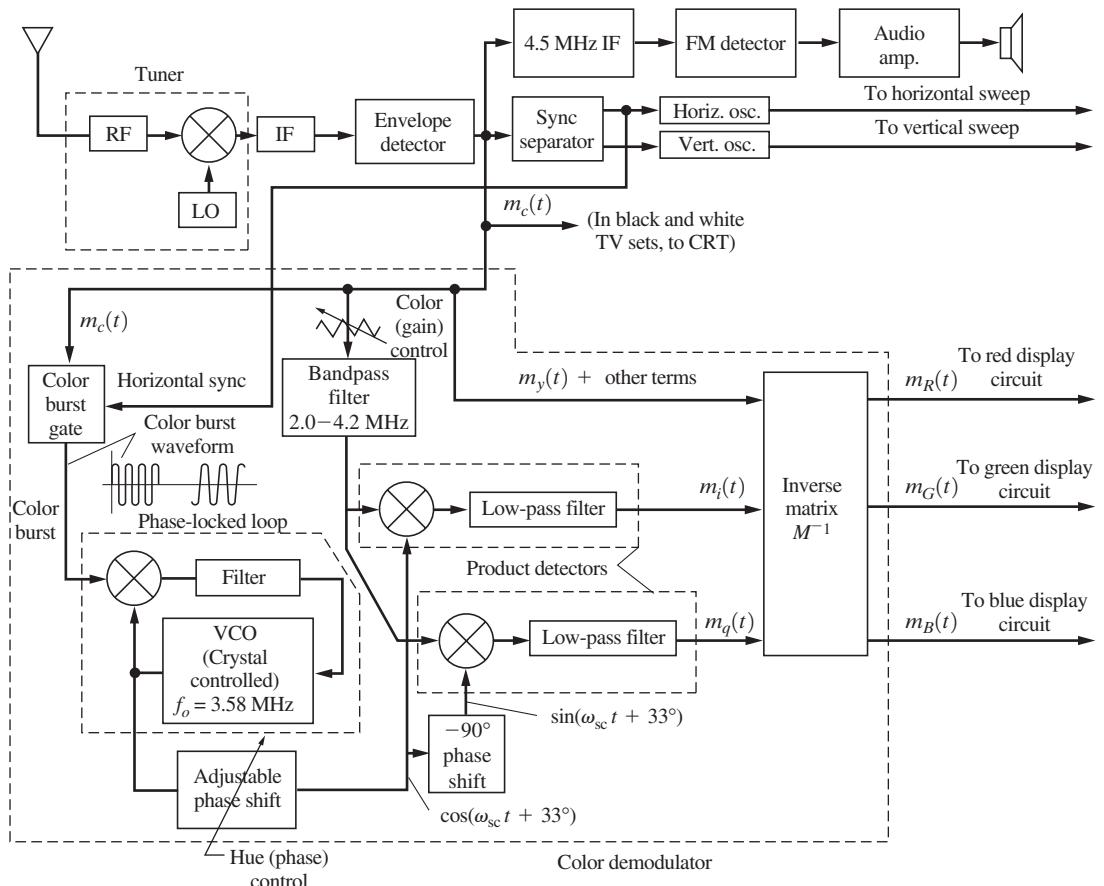


Figure 8-36 Color TV receiver with IQ demodulators.

U.S. CATV channel standards (analog and digital) are also presented in Table 8-13. CATV systems use coaxial cable with amplifiers to distribute TV and other signals from the “head end” to the subscriber. Since the cable signals are not radiated, the frequencies that are normally assigned to two-way radio and other on-the-air services can be used for additional TV channels on the cable. Consequently, the CATV channel assignments have been standardized as shown in this table.

There are three different sets of standards for cable TV channels: the *Standard Cable System*, the *HRC (Harmonic Related Carrier) System*, and the *IRC (Incrementally Related Carrier) System*. The Standard and IRC systems use even numbers for the frequency of the lower edge of the channel, and the HRC system has channel assignments such that the visual carrier frequency (for analog TV) for each channel is even. All of these systems have a capacity of 124 channels (provided that the cable system has wide-band amplifiers that will operate up to 800 MHz). To receive these cable channels the user has to have a TV set with CATV capability or use a down converter to convert the CATV channel to an on-the-air

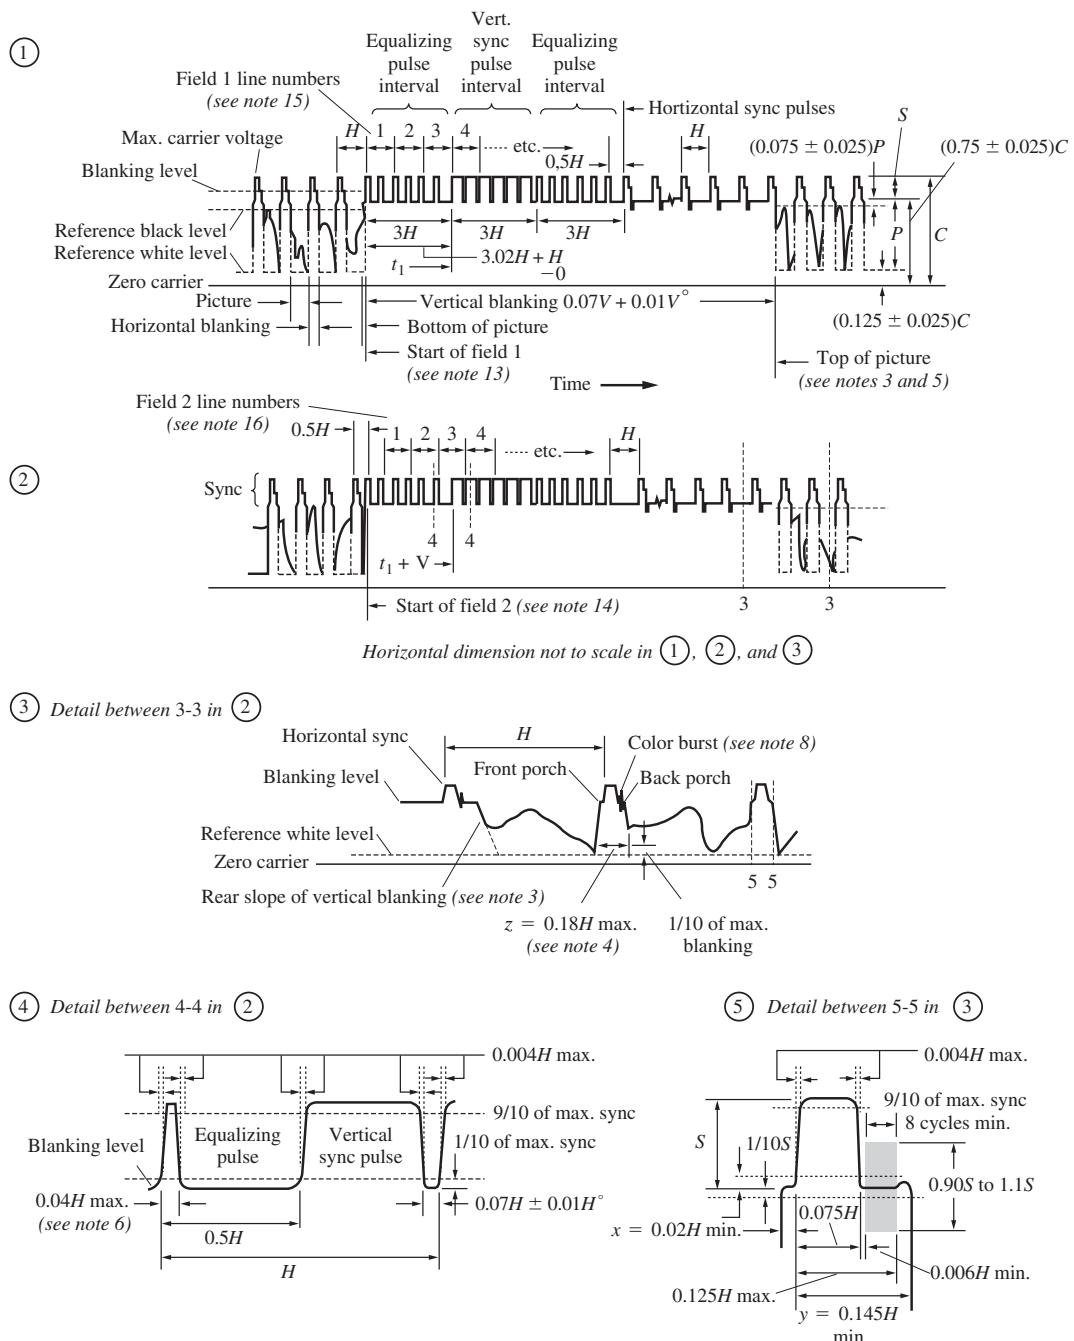


Figure 8-37 U.S. television synchronizing waveform standards for analog color transmission.
(From Part 73 of FCC Rules and Regulations.)

NOTES TO FIGURE 8-37

1. H = time from start of one line to start of next line = $1/f_h$. (See Table 8-12.)
2. V = time from start of one field to start of next field = $1/f_v$. (See Table 8-12.)
3. Leading and trailing edges of vertical blanking should be complete in less than 0.1 H .
4. Leading and trailing slopes of horizontal blanking must be steep enough to preserve minimum and maximum values of $(x + y)$ and (z) under all conditions of picture content.
5. Dimensions marked with an asterisk indicate that tolerances given are permitted only for long-time variations and not for successive cycles.
6. Equalizing pulse area shall be between 0.45 and 0.5 of area of a horizontal sync pulse.
7. Color burst follows each horizontal pulse, but is omitted following the equalizing pulses and during the broad vertical pulses.
8. Color bursts to be omitted during monochrome transmission.
9. The burst frequency shall be 3.579545 MHz. The tolerance on the frequency shall be ± 10 Hz, with a maximum rate of change of frequency not to exceed $1/10$ Hz/s.
10. The horizontal scanning frequency shall be $2/455$ times the burst frequency.
11. The dimensions specified for the burst determine the times of starting and stopping the burst but not its phase. The color burst consists of amplitude modulation of a continuous sine wave.
12. Dimension P represents the peak excursion of the luminance signal from blanking level, but does not include the chrominance signal. Dimension S is the sync amplitude above blanking level. Dimension C is the peak carrier amplitude.
13. Start of field 1 is defined by a whole line between first equalizing pulse and preceding H sync pulses.
14. Start of field 2 is defined by a half line between first equalizing pulse and preceding H sync pulses.
15. Field 1 line numbers start with first equalizing pulse in field 1.
16. Field 2 line numbers start with second equalizing pulse in field 2.
17. Refer to Table 8-12 for further explanations and tolerances.

channel, such as channel 3 or 4, that can be received by an on-the-air TV set. Most of the U.S. TV sets are now “cable ready.” This signifies that there is either a setup hardware switch, or a setup software circuit, built into the TV that allows the user to initially set up the TV for the proper channel configuration (i.e., select on-the-air broadcast, Standard cable, HFC, or IRC cable channels).

Referring to Table 8-13, the Standard and IRC cable systems and the on-the-air broadcasting stations have identical channel frequency assignments on channels 2 through 13. Thus if a TV set is set up to receive on-the-air broadcasting channels, but is connected to a Standard cable or an IRC cable system, then channels 2 through 13 will be received correctly from the cable system, but channels 14 and higher will not work properly.

CATV systems can also be *bidirectional*, allowing some subscribers to transmit signals to the head end. In low-band split systems, frequencies below 50 MHz (T-band channels) are used for transmitting to the head end. In mid-band, split system frequencies between 120 and 150 MHz are used for transmitting to the head end.

Premium TV programs are often available to subscribers for an additional cost. The premium channels are usually scrambled by modifying the video sync or by using digital

TABLE 8-13 U.S. TELEVISION AND CABLE CHANNEL FREQUENCY ASSIGNMENTS

Channel		Broadcast On-the-Air Channels			Cable Systems									
Channel Number	Cable Designator	Lower Limit	Upper Limit	Standard Cable		HRC Cable System		IRC Cable System						
		(MHz)	(MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)					
	T-7			5.75	-	11.75								
	T-8			11.75	-	17.75								
	T-9			17.75	-	23.75								
	T-10			23.75	-	29.75								
	T-11			29.75	-	35.75								
	T-12			35.75	-	41.75								
	T-13			41.75	-	47.75								
	T-14			47.75	-	53.75								
Low Band VHF														
2		54.00	-	60.00		54.00	-	60.00	52.75	-	58.75	54.00	-	60.00
3		60.00	-	66.00		60.00	-	66.00	58.75	-	64.75	60.00	-	66.00
4		66.00	-	72.00		66.00	-	72.00	64.75	-	70.75	66.00	-	72.00
		Two-Way Radio, and Aeronautical, 72-76 MHz												
1	A-8				No Ch 1	No Ch 1	70.75	-	76.75	72.00	-	78.00		
5	A-7	76.00	-	82.00		76.00	-	82.00	76.75	-	82.75	78.00	-	84.00
6	A-6	82.00	-	88.00		82.00	-	88.00	82.75	-	88.75	84.00	-	90.00
		FM Broadcast, Aeronautical, and Two-Way Radio, 88-174 MHz												
High Band VHF														
7		174.00	-	180.00		174.00	-	180.00	172.75	-	178.75	174.00	-	180.00
8		180.00	-	186.00		180.00	-	186.00	178.75	-	184.75	180.00	-	186.00
9		186.00	-	192.00		186.00	-	192.00	184.75	-	190.75	186.00	-	192.00
10		192.00	-	198.00		192.00	-	198.00	190.75	-	196.75	192.00	-	198.00
11		198.00	-	204.00		198.00	-	204.00	196.75	-	202.75	198.00	-	204.00
12		204.00	-	210.00		204.00	-	210.00	202.75	-	208.75	204.00	-	210.00
13		210.00	-	216.00		210.00	-	216.00	208.75	-	214.75	210.00	-	216.00
UHF		Military, Aeronautical, 216-470 MHz												
14	A	470.00	-	476.00		120.00	-	126.00	118.75	-	124.75	120.00	-	126.00
15	B	476.00	-	482.00		126.00	-	132.00	124.75	-	130.75	126.00	-	132.00

Channel		Broadcast On-the-Air Channels				Cable Systems					
Channel Number	Cable Designator					Standard Cable		HRC Cable System		IRC Cable System	
		Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)
16	C	482.00	-	488.00		132.00	-	138.00	130.75	-	136.75
17	D	488.00	-	494.00		138.00	-	144.00	136.75	-	142.75
18	E	494.00	-	500.00		144.00	-	150.00	142.75	-	148.75
19	F	500.00	-	506.00		150.00	-	156.00	148.75	-	154.75
20	G	506.00	-	512.00		156.00	-	162.00	154.75	-	160.75
21	H	512.00	-	518.00		162.00	-	168.00	160.75	-	166.75
22	I	518.00	-	524.00		168.00	-	174.00	166.75	-	172.75
23	J	524.00	-	530.00		216.00	-	222.00	214.75	-	220.75
24	K	530.00	-	536.00		222.00	-	228.00	220.75	-	226.75
25	L	536.00	-	542.00		228.00	-	234.00	226.75	-	232.75
26	M	542.00	-	548.00		234.00	-	240.00	232.75	-	238.75
27	N	548.00	-	554.00		240.00	-	246.00	238.75	-	244.75
28	O	554.00	-	560.00		246.00	-	252.00	244.75	-	250.75
29	P	560.00	-	566.00		252.00	-	258.00	250.75	-	256.75
30	Q	566.00	-	572.00		258.00	-	264.00	256.75	-	262.75
31	R	572.00	-	572.00		264.00	-	270.00	262.75	-	268.75
32	S	578.00	-	584.00		270.00	-	276.00	268.75	-	274.75
33	T	584.00	-	590.00		276.00	-	282.00	274.75	-	280.75
34	U	590.00	-	596.00		282.00	-	288.00	280.75	-	286.75
35	V	596.00	-	602.00		288.00	-	294.00	286.75	-	292.75
36	W	602.00	-	608.00		294.00	-	300.00	292.75	-	298.75
37	AA	608.00	-	614.00		300.00	-	306.00	298.75	-	304.75
38	BB	614.00	-	620.00		306.00	-	312.00	304.75	-	310.75
39	CC	620.00	-	626.00		312.00	-	318.00	310.75	-	316.75
40	DD	626.00	-	632.00		318.00	-	324.00	316.75	-	322.75
41	EE	632.00	-	638.00		324.00	-	330.00	322.75	-	328.75
42	FF	638.00	-	644.00		330.00	-	336.00	328.75	-	334.75
43	GG	644.00	-	650.00		336.00	-	342.00	334.75	-	340.75
44	HH	650.00	-	656.00		342.00	-	348.00	340.75	-	346.75
45	II	656.00	-	662.00		348.00	-	354.00	346.75	-	352.75
46	JJ	662.00	-	668.00		354.00	-	360.00	352.75	-	358.75
47	KK	668.00	-	674.00		360.00	-	366.00	358.75	-	364.75
48	LL	674.00	-	680.00		366.00	-	372.00	364.75	-	370.75
49	MM	680.00	-	686.00		372.00	-	378.00	370.75	-	376.75
50	NN	686.00	-	692.00		378.00	-	384.00	376.75	-	382.75
51	OO	692.00	-	698.00		384.00	-	390.00	382.75	-	388.75

52	PP	698.00	-	704.00	← TV On-Air-Channels Deleted in 2009 →	390.00	-	396.00	388.75	-	394.75	390.00	-	396.00
53	QQ	704.00	-	710.00		396.00	-	402.00	394.75	-	400.75	396.00	-	402.00
54	RR	710.00	-	716.00		402.00	-	408.00	400.75	-	406.75	402.00	-	408.00
55	SS	716.00	-	722.00		408.00	-	414.00	406.75	-	412.75	408.00	-	414.00
56	TT	722.00	-	728.00		414.00	-	420.00	412.75	-	418.75	414.00	-	420.00
57	UU	728.00	-	734.00		420.00	-	426.00	418.75	-	424.75	420.00	-	426.00
58	VV	734.00	-	740.00		426.00	-	432.00	424.75	-	430.75	426.00	-	432.00
59	WW	740.00	-	746.00		432.00	-	438.00	430.75	-	436.75	432.00	-	438.00
60	XX	746.00	-	752.00		438.00	-	444.00	436.75	-	442.75	438.00	-	444.00
61	YY	752.00	-	758.00		444.00	-	450.00	442.75	-	448.75	444.00	-	450.00
62	ZZ	758.00	-	764.00		450.00	-	456.00	448.75	-	454.75	450.00	-	456.00
63		764.00	-	770.00		456.00	-	462.00	454.75	-	460.75	456.00	-	462.00
64		770.00	-	776.00		462.00	-	468.00	460.75	-	466.75	462.00	-	468.00
65		776.00	-	782.00		468.00	-	474.00	466.75	-	472.75	468.00	-	474.00
66		782.00	-	788.00		474.00	-	480.00	472.75	-	478.75	474.00	-	480.00
67		788.00	-	794.00		480.00	-	486.00	478.75	-	484.75	480.00	-	486.00
68		794.00	-	800.00		486.00	-	492.00	484.75	-	490.75	486.00	-	492.00
69		800.00	-	806.00	← TV On-Air-Channels Deleted in 1974 →	492.00	-	498.00	490.75	-	496.75	492.00	-	498.00
70		806.00	-	812.00		498.00	-	504.00	496.75	-	502.75	498.00	-	504.00
71		812.00	-	818.00		504.00	-	510.00	502.75	-	508.75	504.00	-	510.00
72		818.00	-	824.00		510.00	-	516.00	508.75	-	514.75	510.00	-	516.00
73		824.00	-	830.00		516.00	-	522.00	514.75	-	520.75	516.00	-	522.00
74		830.00	-	836.00		522.00	-	528.00	520.75	-	526.75	522.00	-	528.00
75		836.00	-	842.00		528.00	-	534.00	526.75	-	532.75	528.00	-	534.00
76		842.00	-	848.00		534.00	-	540.00	532.75	-	538.75	534.00	-	540.00
77		848.00	-	854.00		540.00	-	546.00	538.75	-	544.75	540.00	-	546.00
78		854.00	-	860.00		546.00	-	552.00	544.75	-	550.75	546.00	-	552.00
79		860.00	-	866.00		552.00	-	558.00	550.75	-	556.75	552.00	-	558.00
80		866.00	-	872.00		558.00	-	564.00	556.75	-	562.75	558.00	-	564.00
81		872.00	-	878.00		564.00	-	570.00	562.75	-	568.75	564.00	-	570.00
82		878.00	-	884.00		570.00	-	576.00	568.75	-	574.75	570.00	-	576.00
83		884.00	-	890.00		576.00	-	582.00	574.75	-	580.75	576.00	-	582.00
84						582.00	-	588.00	580.75	-	586.75	582.00	-	588.00
85						588.00	-	594.00	586.75	-	592.75	588.00	-	594.00
86						594.00	-	600.00	592.75	-	598.75	594.00	-	600.00
87						600.00	-	606.00	598.75	-	604.75	600.00	-	606.00
88						606.00	-	612.00	604.75	-	610.75	606.00	-	612.00
89						612.00	-	618.00	610.75	-	616.75	612.00	-	618.00
90						618.00	-	624.00	616.75	-	622.75	618.00	-	624.00
91						624.00	-	630.00	622.75	-	628.75	624.00	-	630.00
92						630.00	-	636.00	628.75	-	634.75	630.00	-	636.00
93						636.00	-	642.00	634.75	-	640.75	636.00	-	642.00

Channel		Broadcast On-the-Air Channels				Cable Systems				
Channel Number	Cable Designator			Standard Cable		HRC Cable System		IRC Cable System		
		Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	Lower Limit (MHz)	Upper Limit (MHz)	
94				642.00	-	648.00	640.75	-	646.75	
95	A-5	90.00	-	96.00	88.75	-	94.75	90.00	-	96.00
96	A-4	96.00	-	102.00	94.75	-	100.75	96.00	-	102.00
97	A-3	102.00	-	108.00	100.75	-	106.75	102.00	-	108.00
98	A-2	108.00	-	114.00	106.75	-	112.75	108.00	-	114.00
99	A-1	114.00	-	120.00	112.75	-	118.75	114.00	-	120.00
100		648.00	-	654.00	646.75	-	652.75	648.00	-	654.00
101		654.00	-	660.00	652.75	-	658.75	654.00	-	660.00
102		660.00	-	666.00	658.75	-	664.75	660.00	-	666.00
103		666.00	-	672.00	664.75	-	670.75	666.00	-	672.00
104		672.00	-	678.00	670.75	-	676.75	672.00	-	678.00
105		678.00	-	684.00	676.75	-	682.75	678.00	-	684.00
106		684.00	-	690.00	682.75	-	688.75	684.00	-	690.00
107		690.00	-	696.00	688.75	-	694.75	690.00	-	696.00
108		696.00	-	702.00	694.75	-	700.75	696.00	-	702.00
109		702.00	-	708.00	700.75	-	706.75	702.00	-	708.00
110		708.00	-	714.00	706.75	-	712.75	708.00	-	714.00
111		714.00	-	720.00	712.75	-	718.75	714.00	-	720.00
112		720.00	-	726.00	718.75	-	724.75	720.00	-	726.00
113		726.00	-	732.00	724.75	-	730.75	726.00	-	732.00
114		732.00	-	738.00	730.75	-	736.75	732.00	-	738.00
115		738.00	-	744.00	736.75	-	742.75	738.00	-	744.00
116		744.00	-	750.00	742.75	-	748.75	744.00	-	750.00
117		750.00	-	756.00	748.75	-	754.75	750.00	-	756.00
118		756.00	-	762.00	754.75	-	760.75	756.00	-	762.00
119		762.00	-	768.00	760.75	-	766.75	762.00	-	768.00
120		768.00	-	774.00	766.75	-	772.75	768.00	-	774.00
121		774.00	-	780.00	772.75	-	778.75	774.00	-	780.00
122		780.00	-	786.00	778.75	-	784.75	780.00	-	786.00
123		786.00	-	792.00	784.75	-	790.75	786.00	-	792.00
124		792.00	-	798.00	790.75	-	796.75	792.00	-	798.00
125		798.00	-	804.00	796.75	-	802.75	798.00	-	804.00

1. On-the-air stations on Channels 52 through 69 ceased broadcasting in June 2009 when these frequencies were turned over for use by cellular services.

2. On-the-air stations on Channels 70 through 83 ceased broadcasting in 1974 when these frequencies were turned over for use by cellular services.

encryption techniques. Subscribers to the premium services are provided with appropriate decoders that, in some systems, are addressable and remotely programmable by the CATV company.

Digital TV (DTV)

DTV is now a reality in the United States and in many other parts of the world. In July 2009, analog on-the-air TV transmission ceased in the United States (except for some very low-power stations), and DTV stations were on the air. This was the result of much work in the United States by the FCC and the TV broadcast industry. Since 1987, the FCC has been encouraging the development of a *high-definition television* (HDTV) system to replace the NTSC system. The HDTV system has high resolution that approaches the quality of 35-mm film and a widescreen aspect ratio (width to height) of 16:9 instead of the narrowscreen 4:3 aspect ratio of NTSC. More than 20 HDTV methods were proposed [Jurgen, 1988; Jurgen, 1991]. By 1993, the number of competing proposals were reduced to four digital systems [Challapali et al., 1995; Harris, 1993; Zou, 1991]. In May of 1993, the proponents of these four competing systems joined forces to develop a single digital television (DTV) system that used the best ideas of the four competing systems [Challapali et al., 1995; Hopkins, 1994; and Petajan, 1995]. This joint group is called the Grand Alliance (GA), and its members are: AT&T, General Instrument Corporation, Massachusetts Institute of Technology (MIT), Philips Electronics North America Corporation, David Sarnoff Research Center, Thomson Consumer Electronics, and Zenith Electronics Corporation. This resulted in the 1996 FCC DTV standard, known as the ATSC (advanced television systems committee) standard, and ATSC stations are now on the air in U.S. cities.

Table 8-14 summarizes the U.S. ATSC standard. The standard is actually several standards combined, allowing for different resolutions and aspect ratios. There are five major formats. Two are *high definition* (HD), and three are *standard definition* (SD). Widescreen pictures (16:9 aspect ratio) are specified in both the HD formats and in one SD format. The other two SD formats use conventional-width pictures (4:3). In addition, the frame rates may be 24, 30, or 60 frames/s with interlace scan or progressive scan. The 24-frames/s mode is included to more easily accommodate motion picture film (which is 24 frames/s). These variations give a total of 18 possible picture formats. All ATSC receivers are designed to decode and display pictures for all 18 formats (although the resolution may not be preserved). The broadcaster may switch formats from program to program (or from program to commercial). However, it is not cost effective for broadcasters to be able to produce all formats. For HDTV, the NBC and CBS television networks use 1080i (i.e., 1080×1920 pixels with interlace screening). ABC uses 720p for HDTV, since they believe that progressively scanning 720 lines is visually superior to 1080i. For SDTV, NBC and ABC use 480p, and CBS uses 480i. Note that the vertical resolution for SDTV, which is 480 lines, is equivalent to the vertical resolution for U.S. analog TV, which is 483 lines, as given by Eq. (8-59b). The horizontal resolution for 4:3 SDTV, 704 or 640 pixels, is larger than that of 445 pixels, as given by Eq. (8-60b) for analog TV.

The bit rate for uncompressed video data is tremendous. For example, referring to Table 8-14, for 1080 active lines, 1920 samples (pixels) per line, 8 bits per sample, 30 frames (pictures) per second, and 3 primary colors (RGB), the bit rate is $1,080 \times 1,920 \times 8 \times 30 \times 3 = 1,500$ Mb/s. However, a TV channel with a 6-MHz bandwidth can only support a data rate of about 20 Mb/s if 8-level (3 bits/symbol) multilevel signaling is used. (From

TABLE 8-14 U.S. ATSC SYSTEM

Video specifications					
Format type	HD	HD	SD	SD	SD
Aspect ratio	16:9	16:9	4:3	16:9	4:3
Active scan lines/frame	1080	720	480	480	480
Pixels/line	1920	1280	704	704	640
Frame rates (Hz) ^a	24p, 30p, 30i	24p, 30p, 60p	24p, 30p, 30i, 60p	24p, 30p, 30i, 60p	24p, 30p, 30i, 60p
Compression standard ^b	MPEG-2				
Compression technique ^c	DCT, 8 × 8 block				
Audio specifications					
Method	Dolby AC-3				
Audio bandwidth	20 kHz				
Sampling frequency	48 kHz				
Dynamic range	100 dB				
Number of surround channels ^d	5.1				
Compressed data rate	384 kb/s				
Multiple languages	Via multiple AC-3 data streams				
Data transport system					
Type	Packet				
TDM technique	MPEG-2, system layer				
Packet size	188 bytes				
Packet header size	4 bytes				
Encryption	Provision descrambling by authorized decoders				
Special features support	Closed captioning and private data				
Transmission specifications for terrestrial mode broadcasting^e					
Modulation ^f	8VSB				
Bits/symbol	3				
Channel bandwidth	6 MHz				
Channel filter	Raised cosine-rolloff, $r = 0.115/2 = 0.0575$				
Symbol (baud) rate (with sync)	10.76 Msymbols/s				
Payload data rate (with sync)	19.39 Mb/s				
Coding (FEC)	Rate 2/3 TCM and (207,187) Reed-Solomon				
CNR threshold	14.9 dB for a BER of 3×10^{-6}				
Pilot (for carrier sync)	310 kHz above lower band edge of RF channel				

^a p = progressive scan, i = Interlace scan.

^b MPEG = Moving Picture Experts Group of the International Standards Organization (ISO).

^c DCT = Two-dimensional (horizontal and vertical) Discrete Cosine Transform taken over an 8 × 8 block of pixels. The insignificant DCT values are ignored to provide data compression.

^d Left, center, right, left surround, right surround, and subwoofer. The sixth (subwoofer) channel contains only low audio frequencies so it is considered to be a 0.1 channel.

^e Terrestrial mode is for off-the-air broadcasting. For transmission via CATV, 16 VSB may be used. This allows a higher payload data rate of 38.6 Mbits/sec over a 6-MHz bandwidth channel. However, a minimum (CNR) of 28.3 dB is required.

^f 8VSB = 8 level Vestigial Sideband Modulation. That is, an 8 level baseband line code is amplitude modulated onto a suppressed carrier (DSB-SC) signal, and the lower sideband is filtered off to produce the VSB signal.

Fig. 5-33, $B_T \approx D = R/\ell = 20/3 = 6.67$ MHz.) Consequently a data-compression factor of about 75 (1,500/20) is needed. As shown in Table 8-14, this compression factor is achieved by using a *Motion Pictures Experts Group* (MPEG) encoding technique. This technique consists of taking the *discrete cosine transform* (DCT) of 8×8 blocks of pixels within each frame and digitizing (using) only the significant DFT coefficients of each block for transmission. Furthermore, for each new frame, data are sent only when there is a change (motion) within the 8×8 pixel block frame to frame.

Frame-to-frame redundancy is removed by motion estimation and motion compensation. There are three types of encoded frames. The *interframe* (*I*-frame) is coded in isolation without prediction and is used as a reference frame. The *predictive frame* (*P*-frame) is forward predicted from the last *I*-frame. The *bidirectional frame* (*B*-frame) is predicted for either past or future *I* and *P* frames. A sequence of one *I*-frame and one or more *P* and *B* frames form a MPEG *group of pictures* (GOP) [Gibson, 1997].

As indicated in Table 8-14, this produces a payload (compressed) data rate of 19.39 Mb/s. This payload data plus parity bits for the FEC codes are fed into a 3-bit digital-to-analog converter (DAC) to produce an 8-level baseband line code that has a symbol (baud) rate of $D = 10.76$ Msymbols/sec. As shown in Fig. 8-38, the 8-level data are partitioned into segments consisting of 832 symbols with a 4-symbol synchronization (sync) pulse included at the beginning of each segment to provide a reference for the transmitted data. Additional training data is inserted over a whole segment after 312 segments. The additional data can be used to train the receiver to adjust for channel fading and cancel multipath interference. The composite 8-level baseband signal is amplitude modulated onto the carrier. In the modulation process, a DC bias voltage is added to the baseband signal so that there will be a discrete

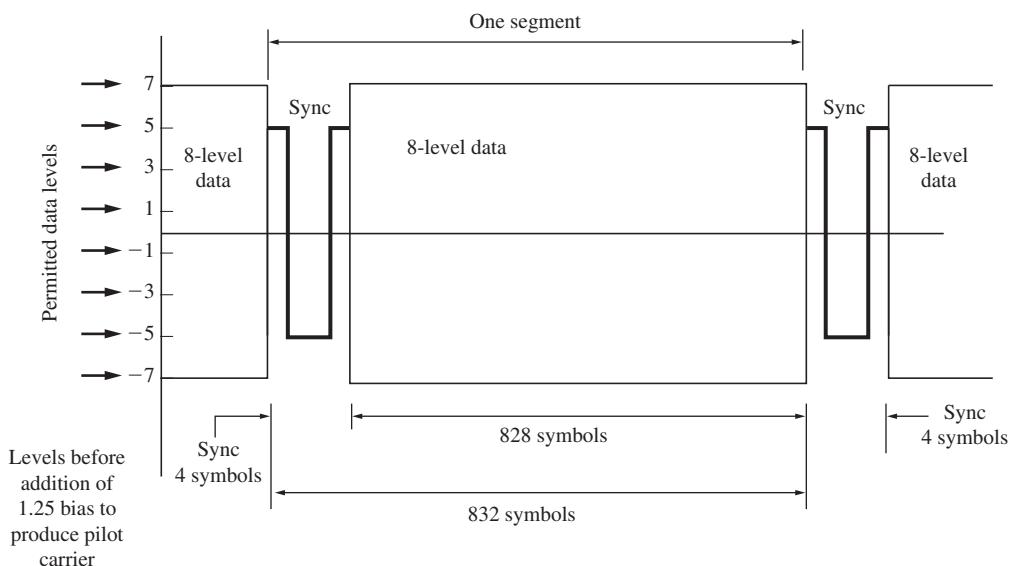


Figure 8-38 8-level baseband signal with segment sync.

carrier term in the spectrum. This pilot tone at the carrier frequency, f_c , provides synchronization for the carrier oscillator circuits in the DTV receiver. A vestigial sideband filter (described in Sec. 5–5 and Fig. 5–6) is used to remove the lower sideband of the AM signal and produce the vestigial sideband signal. The VSB filter is designed such that the band edges roll off with a square root raised-cosine rolloff characteristic (at the transmitter and the receiver). As discussed in Sec. 3–6, this rolloff is used to filter off the sidelobes of the $\sin(x)/x$ spectrum (Fig. 5–33) that occur for rectangular-shaped data symbols and yet not introduce ISI on the filtered symbols. Fig. 8–39 shows the spectrum of the resulting 8VSB signal where the carrier frequency, f_c , is 309.44 kHz above the lower band edge.

The complete U.S. DTV standards are available on the *Advanced Television System Committee* (ATSC) Web site at www.atsc.org. In Europe, the *Digital Video Broadcasting* (DVB) standard has been adopted for digital TV. DVB uses *Coded Orthogonal Frequency-Division Multiplexing* (COFDM) for modulation instead of 8-VSB. See www.dvb.org for details.

Because the number of pixels in a SD frame ($480 \times 704 = 337,920$) are about 1/6 the number of pixels in a HD frame ($1080 \times 1920 = 2,073,600$), the DTV broadcaster has the very interesting option of time-division multiplexing data for multiple SD programs, since this can be achieved without exceeding the 19.39 Mb/s payload data rate. That is, over a 6-MHz TV channel, four to six SDTV programs may be transmitted simultaneously with one 1080i HD program. This multiple SDTV option is so profitable for broadcasters that they usually offer them along with the HDTV program.

Digital TV has the following advantages:

- Use of digital signal processing (DSP) circuits.
- Error-free regeneration of relayed and recorded TV pictures, since binary data represent the picture.
- Multiple sound channels (four to six) of CD quality for stereo multilingual capability.
- Data may be multiplexed for text captioning screen graphics and for control of TV recording and other equipment.
- Multipath (ghost) images and ignition noise can be canceled using DSP circuits.
- Lower TV transmitter power required because digital modulation is used.

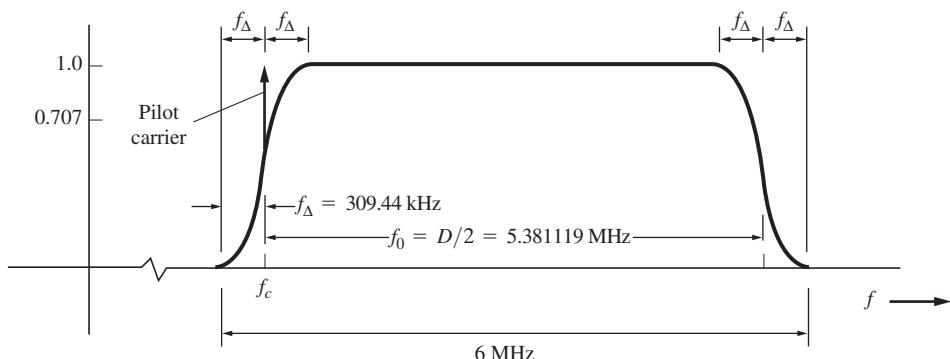


Figure 8–39 Spectrum of 8-VSB DTV signal with square root raised cosine-rolloff.

- Co-channel ATSC signals interfere less with each other than co-channel NTSC analog signals.
- Several SDTV programs may be transmitted simultaneously with a HDTV program over each channel.

The U.S. DTV system was implemented by assigning a new DTV channel for each existing NTSC station. During the transition period (before June 2009), each station simultaneously broadcast an NTSC analog signal on its existing channel and an ATSC DTV signal on its new channel. DTV stations are only assigned to be on channels 2 through 51. (Channels 52 through 69 are not used for TV any more, but are now assigned for cellular phone use, creating the new 700MHz cellular band, e.g., compare Table 8–8 with Table 8–13.)

On June 12, 2009, the analog NTSC signals were permanently turned off (except for some very low-power, low-antenna-height stations). Now that the NTSC signals are off, the FCC has allowed some of the DTV stations to change back to their old NTSC channel, provided they can meet requirements for transmitting with enough power to get the desired coverage but yet not interfere with the other DTV stations in their area. (This channel change is very costly for the DTV stations, since they have to have antennas and DTV transmitters for both the old NTSC channel and the originally assigned DTV channel.)

The new ATSC DTV system uses the concept of *virtual channels*. That is, the FCC assigns a DTV station to one of the RF (radio frequency) channels 2 through 51 (see Table 8–13 for the RF channel number frequency bands), but the DTV broadcaster may insert data indicating another channel number, called the virtual channel number, into the digital bit stream that it broadcasts. When the DTV signal is received, the HDTV receiver will detect this virtual channel number sent out by the broadcaster and display that virtual channel number on the TV screen. Most broadcasters choose to use their old NTSC RF channel number as their virtual channel number. In this way the consumer sees the old NTSC channel number on their HDTV set, even though the DTV station is broadcasting on a different RF channel (the DTV channel assigned to it by the FCC). For example, WCJB, a TV station in Gainesville, Florida, was on RF channel 20 for almost 40 years transmitting their analog NTSC signal, and the TV audience knew them as the station called TV20. For DTV transmission, the FCC assigned them RF channel 16, and, consequently, they now broadcast on RF Channel 16. However, when one tunes in their on-the-air DTV signal, the HDTV set displays channel 20, their virtual channel number, even though the HDTV set is actually tuned to RF channel 16. Thus, as far as the viewer knows, TV20 still appears to be on channel 20.

For a list of DTV stations in your zip code area with their corresponding RF channel numbers, virtual channel numbers, and their signal strength in your U.S. zip code area, go to www.antennaweb.org

8–10 CABLE DATA MODEMS

Older CATV systems use an all-coaxial distribution system and operate up to about 450 MHz. Modern CATV systems that provide a high-speed internet connection (via the use of a cable modem) use fiber to distribute the TV and data signals from the CATV head end to the neighborhood of the customer. In each neighborhood the signals are converted from light

to RF and transmitted to the home via coaxial cable. This allows the neighborhood coaxial cable network to operate up to 800 MHz because the coaxial distribution lines are relatively short and very few RF amplifiers are needed.

To deliver neighborhood data service in an over the coax network, one or more TV channels in the 50 to 750 MHz range are allocated for downstream data traffic and an upstream path is provided by one or more channels in the 5 to 42 MHz range. The user connects the CATV cable that enters his/her home to the cable modem which demodulates the downstream data and modulates the upstream data. The modem data is usually connected to the local computer or local in-house data network via an ethernet line, or, less likely, a USB connection. The downlink modem data speed is usually around 8 Mb/s and the uplink speed is around 4 Mb/s.

Referring to Table 8–15, a single downlink 6 MHz-wide channel can support a composite downstream data rate of 27 Mb/s (which is shared among the subscribers in the neighborhood) if 64 QAM is used. Up to 36 Mb/s can be supported if 256 QAM is used. Typically, one upstream channel supports a composite data rate of 10 Mb/s using QPSK modulation, or 30 Mb/s if 16 QAM is used. The upstream channel may be broken down into three 2 MHz-wide channels, each with a data rate of 3Mb/s for QPSK or 10 Mb/s for 16 QAM. A 2 MHz-wide channel reduces the possibility of ingress noise sent upstream from each user, since there are fewer users on a 2 MHz channel than on a 6 MHz channel.

One downlink and one uplink coaxial 6 MHz-wide channel can support up to about 200 subscribers since statistical multiplexing is used. With statistical multiplexing, each subscriber uses his/her assigned data rate (e.g., 3 Mb/s for uplink) only when needed; otherwise, it is used by another subscriber. Using multiple 6 MHz channels, 500 to 2,000 subscribers can be supported in a neighborhood. If capacity is needed for more subscribers, the original neighborhood “cell” can be broken down into multiple smaller-neighborhood cells.

From the discussion above, it is seen that cable modems are much more complicated than DSL modems. They have front-end circuits (that operate in the VHF and UHF range), down converters, and IF sections, as well as modulators and demodulators.

TABLE 8–15 CABLE MODEM STANDARDS

Item	Downstream	Upstream
Carrier frequency range	50 to 750 MHz	5 to 42 MHz
Channel bandwidth	6 MHz	6 MHz or 2 MHz ^a
Modulation	64 QAM or 256 QAM	QPSK or 16 QAM
Composite data rate	27 Mb/s or 36 Mb/s	10 Mb/s to 30 Mb/s
Subscriber data rate	1.5 to 18 Mb/s	256 kb/s to 5 Mb/s
Coding	Reed Solomon	Reed Solomon
Encryption	DES	DES

^a If the uplink bandwidth is 2 MHz, then the composite data rate will be 1/3 that given the table.

DES = Data Encryption Standard

8–11 WIRELESS DATA NETWORKS

WiFi

The WiFi or IEEE 802.11 type network is a *WLAN* (*Wireless Local Area Network*). This family of WLANs has become very popular in the United States and world-wide since 2000. There is now WiFi coverage, also known as *hotspots*, on most university campuses, public libraries, as well as in most hotels, motels, and coffee shops. It provides a high-speed connection (around 1.5 Ms/s) to the internet. WiFi networks are also popular in homes where two or more computers are networked together and connected to the internet. The FCC allows these wireless networks to operate unlicensed in designated frequency bands. Anyone can put one of the networks “on-the-air” without permission from the FCC.

Table 8–16 gives the IEEE 802.11b standard for the center frequency for each channel assignment. There are 11 channels and their center frequencies are spaced 5 MHz apart. The bandwidth of each channel is approximately 20 MHz; so, unfortunately, the spectrum of a channel has a 15 MHz overlap with the spectrum of the WLAN signals on adjacent channels. Actually the IEEE 802.11 standard specifies a spectral mask located around center frequency for each channel such that the spectrum should be attenuated by at least 30 dB at ± 11 MHz from the assigned center frequency and down by at least 50 dB at ± 22 MHz. Consequently, if multiple WLANs are operating in the same vicinity, the operating channels should be selected so that the channels are spaced as far apart as possible. In addition to this possible adjacent channel interference, there may be interference from other devices such as cordless phones, baby monitors, and microwave ovens which operate in this frequency region.

In the United States, the maximum transmitted power is 1 W with a maximum ERP of 4 W. In actuality, most United States WiFi equipment have transmitted power levels between 15 mW and 200 mW so antennas with some gain are allowed.

Table 8–17 gives some of the standards for the 802.11 family of WLANs. 802.11a operates in the 5 GHz band and, thus is not bothered by interference from cordless phones, etc. However, its range is often limited because there is more attenuation from building walls at 5 GHz than at 2.4 GHz, and the free-space loss is 6 dB more at 5 GHz than at 2.4 GHz (see Eq. 8–11). The 802.11g standard is becoming very popular since it has a maximum data rate of 54 Gb/s and, in the fall-back mode, will operate as an 802.11b system. OFDM modulation is used in many of these WiFi systems since OFDM is resistant to multipath fading.

The newest standard is 802.11n. It uses *MIMO* (*Multiple Input and Multiple Output*) technology which means that multiple antennas/transmitters/receivers are used to provide space diversity in order to give an improved data rate and improved range. For the latest information about WiFi, see IEEE 802.11 on Wikipedia.

TABLE 8–16 WIFI 2.5 GHZ CHANNEL ASSIGNMENTS

Channel number	1	2	3	4	5	6	7	8	9	10	11
Center frequency (MHz)	2412	2417	2422	2427	2432	2437	2442	2447	2452	2457	2462

TABLE 8–17 WIFI STANDARDS

Item	802.11a	802.11b	802.11g	802.11n
Band	5.0 GHz	2.4 GHz	2.4 GHz	2.4 GHz
Max data rate	54 Mb/s	11 Mb/s	54 Mb/s	120 MB/s
Modulation	OFDM	DSSS	OFDM	DSSS & OFDM
Bandwidth (typical)	20 MHz	20 MHz	20 MHz	20 MHz
Diversity	None	None	None	MIMO
Range (max)	500 ft	500 ft	500 ft	1,500 ft
Compatible with		802.11a	802.11b	802.11b, 802.11g

DSSS = Direct-sequence spread spectrum

MIMO = Multiple input and multiple output

WiMAX

The WiMAX concept is completely different from the WiFi concept. WiMAX is more like a cellular telephone system. It is designed strictly for data transmission and it is connected to the internet. WiMAX is a *WMAN* (*Wireless Metropolitan Area Network*) and the WiMAX standards are developed and approved by the IEEE 802.16 Working Group.

WiMAX base-station antennas are placed at elevated locations, such as on the top of buildings or towers, and they can share tower space on cellular telephone towers.

The WiMAX system service provider may operate in one of two different ways: Licensed Service or Unlicensed Service. For licensed service the operator has to buy spectral space and a license for WiMAX service from the FCC. For unlicensed service the operator can install and operate the system without a license; however, any unlicensed system is subject to signal interference from other unlicensed systems, present or future. Either type of system requires professional installation. That is, the base station antennas are selected (antenna gain and pattern) and mounted at the proper orientation so that the desired coverage area is obtained and so that the signal from the antenna produces minimum interference to other cells.

Table 8–18 gives the WiMAX standards for both licensed service and unlicensed service. The unlicensed service has the advantages of a faster rollout and lower costs. The licensed service has the advantages of less interference and better signal reception since the licensed service operates at lower frequencies (2.5 GHz) where signals have less building attenuation and better *NLOS* (*Non Line Of Sight*) characteristics.

In the United States, Clearwire is building a licensed WiMAX network with national coverage. The network is already “rolled out” in major U.S. cities. Sprint and Clearwire have signed an agreement for Clearwire to provide 4G WiMAX service for Sprint. (Clearwire is financed by its publicly traded stock, as well as partial ownership by Sprint, Intel, Time Warner Cable, Bright House, Google, and Comcast.) As indicated in Section 8–8, this WiMAX network is a 4G cellular network, and it is in competition with LTE 4G technology provided by other carriers.

WiMAX uses 802.16 standards. For the latest information and references on this developing technology, see the topic IEEE 802.16 in Wikipedia.

TABLE 8–18 WIMAX STANDARDS

Item	Licensed Service	Unlicensed Service
Band	2.5 GHz	5.5 GHz
Frequencies	2.5 to 2.69 MHz*	5.25 to 5.58 GHz
Channel bandwidth	20 to 40 MHz	20 to 40 MHz
Purchase spectral space	Yes	No
Power output	up to about 20 W	4 W EIRP
Range	30 miles	10 miles
Modulation	OFDM	OFDM
Dual channels via	FDD	TDD
Data rate (maximum)	108 Mb/s	108 Mb/s
Advantages	Less interference, Better NLOS reception	Fast rollout, Lower cost

*Additional WiMAX frequency bands are likely to be designated by the FCC.

FDD = Frequency-division duplexing (i.e., two frequency channels required—one for uplink and one for downlink)

TDD = Time-division duplexing (i.e., one frequency channel required, but two time slots required—one for uplink and one for downlink)

NLOS = Non Line-Of-Sight

8–12 SUMMARY

A wide range of wire and wireless systems were studied. Modem telephone systems with digital central offices and remote terminals were described. Standards for data transmission via DSL, as well as standards used for POTS, were given. Specifications of PSTN systems were listed for transmission via fiber-optic cable and via satellite. Satellite radio broadcast services were discussed. Noise figure and effective input-noise temperature for wireless receivers were defined. Case studies of link budgets were presented. 1G, 2G, 3G, and 4G standards for cellular phone systems were examined. Analog and digital TV systems were studied. Standards were given for analog NTSC TV and digital ATSC TV including SDTV and HDTV programming. Cable data modems were discussed. Standards for WiFi and WiMAX wireless data networks were given and their operation was discussed.

8–13 STUDY-AID EXAMPLES



SA8-1 Link Budget for a DSS Receiver Compute the link budget for a digital TV satellite system that is similar to the DSS (digital satellite system) system that was described in Sec. 8–5. The DSS satellite is located in a geostationary orbit at 101° W longitude above the equator. Assume that the downlink receiving site is Gainesville, FL, located at 82.43° W longitude and 29.71° N latitude. The DSS satellite transmits downlink signals in the Ku band (12.2–12.7 GHz) using 16 transponders. Each transponder has a bandwidth of 24 MHz and an EIRP of 52 dBW in the direction of the United States and, in particular, to Gainesville, FL. Each transponder radiates a QPSK signal with a data rate of 40 Mb/s. The receiving system consists of (1) an 18-inch-diameter parabolic antenna with an attached (2) low-noise block downconverter (LNB) that converts the Ku band input down to 950 to 1450 MHz, (3) a transmission line that connects the LNB to (4) a receiver that

is located on the top of the subscriber's TV set [Thomson, 1994]. The LNB has a gain of 40 dB and a noise figure (NF) of 0.6 dB. The RG6/U coaxial transmission line is 110 feet in length and has a loss of 8 dB/100 ft in the 950–1450-MHz band. The receiver detects the data packets, decodes them, and converts the data to analog video and audio signals using the built-in digital-to-analog converters. The receiver has a NF of 10 dB and an IF bandwidth of 24 MHz. Assume that the antenna source temperature is 20 K.

Compute the $(C/N)_\text{dB}$, $(E_b/N_0)_\text{dB}$, and the BER for this receiving system.

Solution. The receiving antenna pointing parameters (azimuth and elevation) from Gainesville, FL, to the satellite are evaluated using Eqs. (8–47) to (8–54).

$$\beta = \cos^{-1}[\cos(29.71) \cos(101 - 82.43)] = 34.58^\circ$$

The azimuth is

$$A = 360 - \cos^{-1}\left(-\frac{\tan(29.71)}{\tan(34.58)}\right) = 214.13^\circ$$

The elevation is

$$E = \tan^{-1}\left[\frac{1}{\tan(34.58)} - \frac{3963}{(26,205) \sin(34.58)}\right] = 49.82^\circ$$

Using Eq. (8–49), we find that the slant range is

$$d = \sqrt{(26,205)^2 + (3963)^2 - 2(3693)(26,205) \cos(34.58)}$$

Thus,

$$d = 23,052 \text{ miles, or } 3.709 \times 10^7 \text{ m}$$

The overall NF for the receiving system is evaluated using Eq. (8–34), where $F_1 = 0.6$ dB = 1.15, $G_1 = 40$ dB = 10^4 , $F_2 = 110 \text{ ft} \times 8 \text{ dB}/100 \text{ ft} = 8.8$ dB = 7.59, $G_2 = -8.8$ dB = 0.13, and $F_3 = 10$ dB = 10. Then,

$$F = F_1 + \frac{F_2 - 1}{G_{a1}} + \frac{F_3 - 1}{G_{a1}G_{a2}} = 1.15 + \frac{7.59 - 1}{10^4} + \frac{10 - 1}{(10^4)(0.13)}$$

or $F = 1.15 + 6.59 \times 10^{-4} + 6.83 \times 10^{-3} = 1.15 = 0.6$ dB. Thus, $T_e = (F - 1)T_0 = (1.15 - 1)(290) = 43.18$ K.

Note: The gain of the LNB is designed to be sufficiently large so that the NF contributions of the transmission line and the receiver are negligible.

The receiving antenna is computed using Table 8–4 for an 18-in = 0.46-m-diameter parabola, where $\lambda = c/f = 3 \times 10^8 / 12.45 \times 10^9 = 0.0241$ m.

$$(G_{AR})_\text{dB} = 10 \log \left[\frac{7\pi(0.46/2)^2}{(0.0241)^2} \right] = 32.96 \text{ dB}$$

$$(T_{\text{syst}})_\text{dB} = 10 \log (T_{AR} + T_e) = 10 \log (20 + 43.18) = 18.01 \text{ dBK}$$

Thus,

$$\left(\frac{G_{AR}}{T_{\text{syst}}}\right)_\text{dB} = 32.96 - 18.01 = 14.96 \text{ dB/K}$$

The $(C/N)_{\text{dB}}$ is evaluated using Eq. (8–55), where

$$(L_{FS})_{\text{dB}} = 20 \log\left(\frac{4\pi d}{\lambda}\right) = 20 \log\left(\frac{4\pi(3.709 \times 10^7)}{(0.0241)}\right) = 205.73 \text{ dB}$$

and

$$(B)_{\text{dB}} = 10 \log(B) = 10 \log(24 \times 10^6) = 73.8 \text{ dB}$$

Thus,

$$\begin{aligned} \left(\frac{C}{N}\right)_{\text{dB}} &= (P_{\text{EIRP}})_{\text{dBw}} - (L_{FS})_{\text{dB}} + \left(\frac{G_{AR}}{T_{\text{syst}}}\right)_{\text{dB}} - k_{\text{dB}} - B_{\text{dB}} \\ &= 52 - 205.73 + 14.96 - (-228.6) - 73.8 \end{aligned}$$

or

$$(C/N)_{\text{dB}} = 16.03 \text{ dB}$$

$(E_b/N_0)_{\text{dB}}$ may be evaluated using Eq. (8–44), where $B = 24 \text{ MHz}$, and $R = 40 \text{ Mb/s}$. Then,

$$\left(\frac{E_b}{N_0}\right)_{\text{dB}} = \left(\frac{C}{N}\right)_{\text{dB}} + \left(\frac{B}{R}\right)_{\text{dB}} = 16.03 - 2.22 = 13.81 \text{ dB}$$

An $(E_b/N_0)_{\text{dB}}$ of $13.81 \text{ dB} = 24.05$ gives negligible errors for QPSK signaling. That is, if no coding is used, the QPSK BER is given by Eq. (7–69) as

$$P_e = Q\left(\sqrt{2\left(\frac{E_b}{N_0}\right)}\right) = Q\left(\sqrt{2(24.05)}\right) = 2.0 \times 10^{-12}$$

or one error every 3.4 hours. However, if there is signal fading (because of rain or other atmospheric conditions), significant errors may occur. This is examined in Example SA8–2.



SA8–2 DSS Link Budget with Fading Repeat Example SA8–1, and assume that there is a 4-dB signal fade of the Ku band signal because of rain. Compute $(C/N)_{\text{dB}}$, $(E_b/N_0)_{\text{dB}}$ and the BER with and without coding. For the coding case, assume a 3-dB coding gain.

Solution

$$\left(\frac{C}{N}\right)_{\text{faded dB}} = \left(\frac{C}{N}\right)_{\text{dB}} - (L_{\text{fade}})_{\text{dB}} = 16.03 - 4.0 = 12.03 \text{ dB}$$

and

$$\left(\frac{E_b}{N_0}\right)_{\text{faded dB}} = 9.81 \text{ dB} = 9.57$$

Then, the BER with fading and no coding is

$$P_e = Q\left(\sqrt{2(9.57)}\right) = 6.04 \times 10^{-6}$$

or one error in 4.1 ms. This performance is not acceptable; consequently FEC coding is needed. Using coding with a coding gain of 3dB, compute the effective (E_b/N_0) by referring to Fig. 1–8:

$$\left(\frac{E_b}{N_0}\right)_{\text{dB}} = 9.81 + 3.0 = 12.81 \text{ dB} = 19.10$$

Then, using Eq. (7–69), we see that the BER with fading and coding becomes

$$P_e = Q\left(\sqrt{2(19.10)}\right) = 3.2 \times 10^{-10}$$

or one error every 78 s.



SA8-3 BER for a Wireless Device Link Evaluate the BER of a wireless LAN (WLAN). Assume that a portable computer/telephone/video terminal is connected to the outside world via a wireless link within a building. The wireless link operates between the device and a base station unit located within the building. The wireless link uses OOK signaling on a carrier frequency of 2.4 GHz, and the data rate is 2 Mb/s. The device transmits power on the uplink is 0.5 mW. The base station receiver has a noise figure of 8 dB and an IF bandwidth of 4 MHz. It incorporates an envelope detector to detect the data. External noise at the receiver input is negligible when compared with the internal noise of the receiver. Assume that the transmit and receive antennas are simple dipoles; each has a gain of 2.15 dB. The path loss between the transmit and receive antenna within the building environment is modeled by Eq. (8–47) as

$$L_{\text{dB}}(d) = L_{\text{FSdB}}(d_0) + 10n \log\left(\frac{d}{d_0}\right) + X_{\text{dB}} \quad (8-67)$$

where $L_{\text{dB}}(d)$ is the path loss in dB for a distance of d between the antennas, $L_{\text{FSdB}}(d_0)$ is the free-space loss for a distance d_0 that is close to the transmitter, but in the far field, and $d > d_0$. n is the path loss exponent, and X_{dB} represents the loss margin due to variations in the path loss

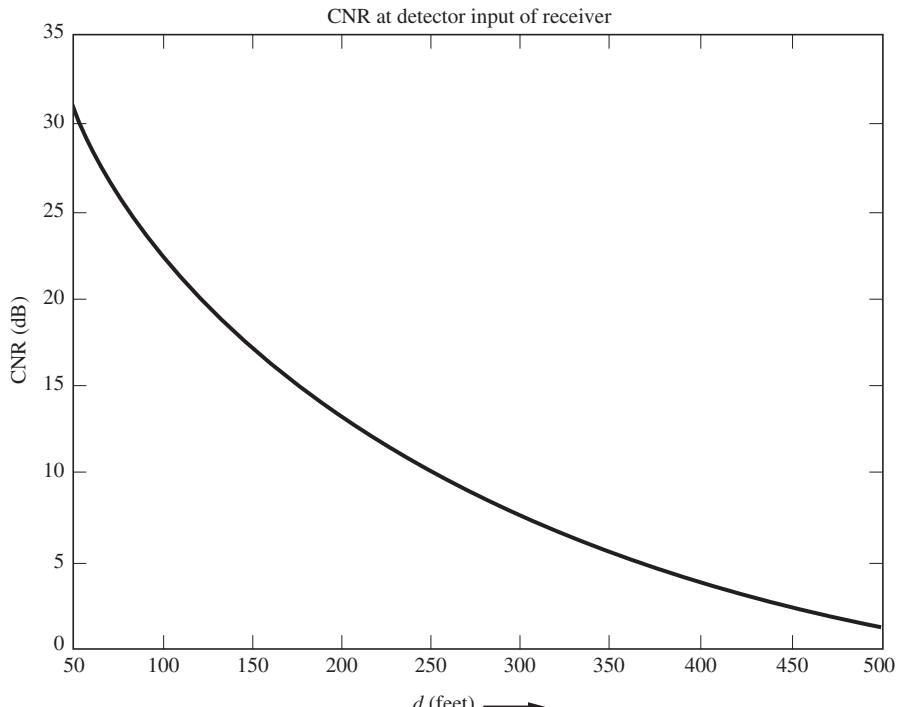


Figure 8–40 CNR for a wireless link. (Plot from SA8_3.m.)

caused by multiple reflections. For this example, choose $d_0 = 50$ feet, $n = 3$, and $X_{\text{dB}} = 7$ dB. (The exponent, n , would be 2 for the free-space case and 4 for a 2-ray ground-reflection case.)

For a distance of 200 feet between the device and the base station, calculate the CNR at the detector input of the base station receiver and the BER for the detected data at the receiver output.

Solution. See SA8_3.m. The CNR is obtained by using Eq. (8–67) to replace $(L_{\text{FS}})_{\text{dB}}$ in Eq. (8–43). Using the values just given, we get $(P_{\text{EIRP}})_{\text{dBW}} = -30.86$ dBW, $T_{\text{system}} = 1,540$ K, and $L_{\text{dB}}(200) = 88.18$ dB. From Eq. (8–43) with the device located 200 feet from the base station, the CNR is

$$\left(\frac{C}{N}\right)_{\text{dB}} = 13.22 \text{ dB}, \quad 200 \text{ feet spacing}$$

Also, using Eq. (8–44), we get $(E_b/N_0)_{\text{dB}} = 16.23$ dB. For this case of OOK with (noncoherent) envelope detection, the BER is obtained by using Eq. (7–58). The bit rate is $R = 1/T = 2$ Mb/s, and the IF bandwidth is $B_P = 4$ MHz. For a spacing of 200 feet between the device and the base station, the BER of the base station output data stream is

$$P_e = 1.36 \times 10^{-5}, \quad 200 \text{ feet spacing}$$

Using other values for d in these equations, MATLAB can compute the CNR and BER over a whole range of spacing from 50 feet to 500 feet. The MATLAB plots are shown in Figures 8–40 and 8–41.

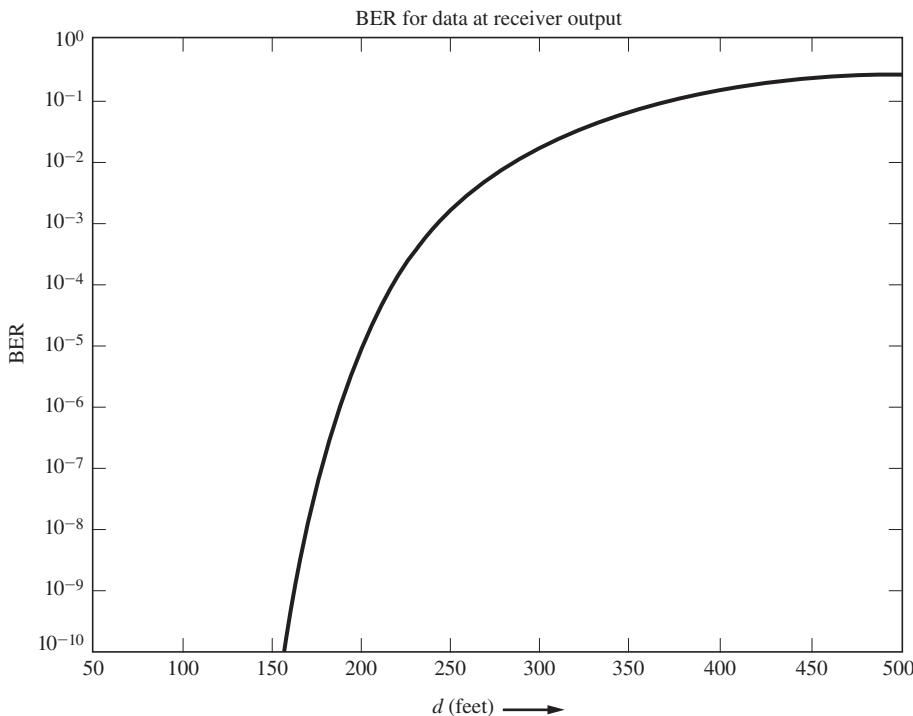


Figure 8–41 BER for a wireless link. (Plot from SA8_3.m)



The range of this wireless link could be increased by increasing the transmit power, reducing the receiver noise figure, or implementing a spread spectrum (SS) system. If direct sequence SS is used with a $r = 4$ stage shift register, as shown in Fig. 5–37, then the PN code length is $N = 15$. Assuming that code length spans one bit of data, then the chip rate is $R_c = NR$. From Eq. (5–131), this SS system would provide a processing gain of $G_p = R_c/R = N = 15$, or $G_{pdB} = 11.76$ dB. If despreading at the receiver is implemented after the IF stage (i.e., after the internal noise source of the receiver), this processing gain would increase the CNR at the detector input by 11.76 dB. This would increase the useful range to around 500 feet. That is, referring to Fig. 8–40 at $d = 500$ feet, we know that a processing gain of 11.76 dB would result in a CNR of 13.0 dB, which corresponds to a BER of 2.1×10^{-5} .

PROBLEMS

- ★ 8–1** A remote terminal for a telephone company services 300 VF subscribers and 150 G.Lite DSL subscribers (1.5 Mb/s data plus a VF signal that is converted to a DS-0 signal). Compute the minimum data rate needed for the receive fiber-optic line that terminates at the RT from the CO.
- 8–2** A 50-pair line provides telephone service to 50 subscribers in a rural subdivision via local loops to the CO. How many subscribers can be served if the 50 pairs are converted to T1 lines and a remote terminal is installed in the subdivision?
- 8–3** Assume that a telephone company has remote terminals connected to its CO via T1 lines. Draw a block diagram that illustrates how the T1 lines are interfaced with the CO switch if the CO uses:
 - (a) An analog switch.
 - (b) An integrated digital switch.
- 8–4** Indicate whether a conference-call connection is better or may be worse than a single-party call if a digital switch is used (at the CO) instead of an analog switch. Explain your answer.
- ★ 8–5** Full-duplex data of 24 kb/s in each direction from a personal computer is sent via a twisted-pair telephone line having a bandpass from 300–2700 Hz. Explain why modems are needed at each end of the line.
- 8–6** A satellite with twelve 36-MHz bandwidth transponders operates in the 6/4-GHz bands with 500 MHz bandwidth and 4-MHz guardbands on the 4-GHz downlink, as shown in Fig. 8–10. Calculate the percentage bandwidth that is used for the guardbands.
- 8–7** An Earth station uses a 3-m-diameter parabolic receiving antenna to receive a 4-GHz signal from a geosynchronous satellite. If the satellite transmitter delivers 10 W into a 3-m-diameter transmitting antenna and the satellite is located 36,000 km from the receiver, what is the power received?
- 8–8** Figure 8–12b shows an FDM/FM ground station for a satellite communication system. Find the peak frequency deviation needed to achieve the allocated spectral bandwidth for the 6240-MHz signal.
- ★ 8–9** A microwave transmitter has an output of 0.1 W at 2 GHz. Assume that this transmitter is used in a microwave communication system where the transmitting and receiving antennas are parabolas, each 4 ft in diameter.
 - (a) Evaluate the gain of the antennas.
 - (b) Calculate the EIRP of the transmitted signal.
 - (c) If the receiving antenna is located 15 miles from the transmitting antenna over a free-space path, find the available signal power out of the receiving antenna in dBm units.

-  **8-10** A digital TV station transmits on Channel 7 with an ERP of 18 kW. The signal from this TV station is received 50 miles away via a LOS path with a receiving antenna that has a gain of 8 dB on Channel 7. Calculate the power at the receiving antenna output-connector in:

- (a) dBm units.
- (b) in dBmV units across a $75\ \Omega$ load.
- (c) in μV across a $75\ \Omega$ load.

-  **8-11** Rework Prob. 8-10 if the TV station operates on Channel 42.

-  **8-12** A digital TV station operates on Channel 7 and another digital TV station operates on Channel 51. Using MATLAB, plot the free-space loss (in dB) for the Channel 7 station as a function of distance in miles. Repeat the plot for the Channel 51 station. Compare these two results by plotting them on the same figure. Do these losses change if these are analog TV stations instead of digital?

-  **8-13** Using MATLAB, plot the free-space loss in dB as a function of distance in miles for a cellular link at 850 MHz. Also, plot the LOS loss for a cellular link at 1900 MHz. Compare these two results by plotting them on the same figure. Comparing these two plots, which link costs the cellular company less to operate for the same cell-site coverage area?

-  **★ 8-14** Using MATLAB, plot the PSD for a thermal noise source with a resistance of $10\ \text{k}\Omega$ over a frequency range of 10 through 100,000 GHz where $T = 300\ \text{K}$.

- 8-15** Given the RC circuit shown in Fig. P8-15, where R is a physical resistor at temperature T , find the RMS value of the noise voltage that appears at the output in terms of k , T , R , and C .

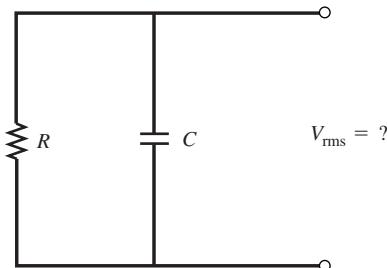


Figure P8-15

- 8-16** A receiver is connected to an antenna system that has a noise temperature of 100 K. Find the noise power that is available from the source over a 20-MHz band.

- ★ 8-17** A bipolar transistor amplifier is modeled as shown in Fig. P8-17. Find a formula for the available power gain in terms of the appropriate parameters.

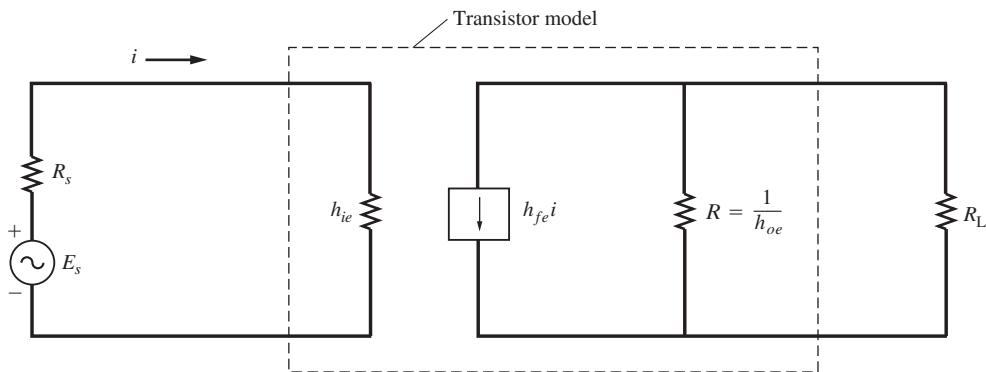


Figure P8-17

- 8-18** Using the definition for the available power gain, $G_a(f)$, as given by (8-18), show that $G_a(f)$ depends on the driving source impedance as well as the elements of the device and that $G_a(f)$ does not depend on the load impedance. [Hint: Calculate $G_a(f)$ for a simple resistive network.]
- 8-19** Show that the effective input-noise temperature and the noise figure can be evaluated from measurements that use the Y-factor method. With this method the device under test (DUT) is first connected to a noise source that has a relatively large output denoted by its source temperature, T_h , where the subscript h denotes “hot,” and then the available noise power at the output of the DUT, $P_{ao\text{h}}$ is measured with a power meter. Next, the DUT is connected to a source that has relatively low source temperature, T_c , where the subscript c denotes “cold,” and noise power at the output of the DUT is measured, $P_{ao\text{c}}$. Show that
- (a) The effective input noise temperature of the DUT is

$$T_e = \frac{T_h - YT_c}{Y - 1}$$

where $Y = P_{ao\text{h}}/P_{ao\text{c}}$ is obtained from the measurements.

- (b) The noise figure of the DUT is

$$F = \frac{[(T_h/T_0) - 1] - Y[(T_c/T_0) - 1]}{Y - 1}$$

where $T_0 = 290$ K.

- 8-20** If a signal plus noise is fed into a linear device, show that the noise figure of that device is given by $F = (S/N)_{\text{in}}/(S/N)_{\text{out}}$ (Hint: Start with the basic definition of noise figure that is given in this chapter.)
- ★ 8-21** An antenna is pointed in a direction such that it has a noise temperature of 30 K. It is connected to a preamplifier that has a noise figure of 1.6 dB and an available gain of 30 dB over an effective bandwidth of 10 MHz.
- (a) Find the effective input noise temperature for the preamplifier.
 (b) Find the available noise power out of the preamplifier.
- 8-22** A 10-MHz SSB-AM signal, which is modulated by an audio signal that is bandlimited to 5 kHz, is being detected by a receiver that has a noise figure of 10 dB. The signal power at the receiver input is 10^{-10} mW, and the PSD of the input noise, $\mathcal{P}(f) = kT/2$, is 2×10^{-21} . Evaluate
- (a) The IF bandwidth needed.
 (b) The SNR at the receiver input.
 (c) The SNR at the receiver output, assuming that a product detector is used.
- ★ 8-23** An FSK signal with $R = 110$ b/s is transmitted over an RF channel that has white Gaussian noise. The receiver uses a noncoherent detector and has a noise figure of 6 dB. The impedance of the antenna input of the receiver is 50Ω . The signal level at the receiver input is $0.05 \mu\text{V}$, and the noise level is $N_0 = kT_0$, where $T_0 = 290$ K and k is Boltzmann's constant. Find the P_e for the digital signal at the output of the receiver.
- 8-24** Work Prob. 8-23 for the case of DPSK signaling.
- 8-25** Prove that the overall effective input-noise temperature for cascaded linear devices is given by Eq. (8-37).

- ★ 8-26 A TV set is connected to an antenna system as shown in Fig. P8-26. Evaluate

- The overall noise figure.
- The overall noise figure if a 20-dB RF preamp with a 3-dB noise figure is inserted at point B.
- The overall noise figure if the preamp is inserted at point A.

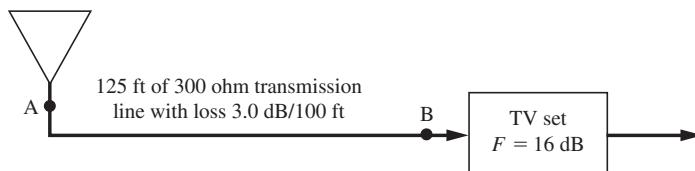


Figure P8-26

- 8-27 An Earth station receiving system consists of a 20-dB gain antenna with $T_{AR} = 80$ K, an RF amplifier with $G_a = 40$ dB and $T_e = 30$ K, and a down converter with $T_e = 15,000$ K. What is the overall effective input-noise temperature of this receiving system?

- 8-28 A low-noise amplifier (LNA), a down converter, and an IF amplifier are connected in cascade. The LNA has a gain of 40 dB and a T_e of 25 K. The down converter has a noise figure of 8 dB and a conversion gain of 6 dB. The IF amplifier has a gain of 60 dB and a noise figure of 14 dB. Evaluate the overall effective input-noise temperature for this system.

- 8-29 A geosynchronous satellite transmits 13.5 dBW EIRP on a 4-GHz downlink to an Earth station. The receiving system has a gain of 60 dB, an effective input-noise temperature of 30 K, an antenna source noise temperature of 60 K, and an IF bandwidth of 36 MHz. If the satellite is located 24,500 miles from the receiver, what is the $(C/N)_{dB}$ at the input of the receiver detector circuit?



- ★ 8-30 An antenna with $T_{AR} = 160$ K is connected to a receiver by means of a waveguide that has a physical temperature of 290 K and a loss of 2 dB. The receiver has a noise bandwidth of 1 MHz, an effective input-noise temperature of 800 K, and a gain of 120 dB from its antenna input to its IF output. Using MATLAB find
- The system noise temperature at the input of the receiver.
 - The overall noise figure.
 - The available noise power at the IF output.

- 8-31 The *Intelsat IV* satellite uses 36-MHz transponders with downlinks operating in the 4-GHz band. Each satellite transponder has a power output of 3.5 W and may be used with a 17° global coverage antenna that has a gain of 20 dB.

- For users located at the subsatellite point (i.e., directly below the satellite), show that $(C/N)_{dB} = (G_{AR}/T_{syst})_{dB} - 17.1$, where $(G_{AR}/T_{syst})_{dB}$ is the Earth receiving station figure of merit.
- Design a ground receiving station (block diagram) showing reasonable specifications for each block so that the IF output CNR will be 12 dB. Discuss the trade-offs that are involved.

- ★ 8-32 The efficiency of a parabolic antenna is determined by the accuracy of the parabolic reflecting surface and other factors. The gain is $G_A = 4\pi\eta A/\lambda^2$, where η is the antenna efficiency. In Table 8-4 an efficiency of 56% was used to obtain the formula $G_A = 7A/\lambda^2$. In a ground receiving system for

the *Intelsat IV* satellite, assume that a ($G_{\text{AR}}/T_{\text{syst}}$) of 40 dB is needed. Using a 30-m antenna, give the required antenna efficiency if the system noise temperature is 85 K. How does the required antenna efficiency change if a 25-m antenna is used?

- 8-33** Evaluate the performance of a TVRO system. Assume that the TVRO terminal is located in Miami, Florida (26.8° N latitude, 80.2° W longitude). A 10-ft-diameter parabolic receiving antenna is used and is pointed toward the satellite with parameters as described in Table 8-5, Fig. 8-25, and Fig. 8-27.
- Find the TVRO antenna look angles to the satellite and find the slant range.
 - Find the overall receiver system temperature.
 - Find the $(C/N)_{\text{dB}}$ into the receiver detector.
 - Find the $(S/N)_{\text{dB}}$ out of the receiver.
- 8-34** Repeat Prob. 8-33 for the case when the TVRO terminal is located at Anchorage, Alaska (61.2° N latitude, 149.8° W longitude), and a 8-m-diameter parabolic antenna is used.
- 8-35** A TVRO receive system consists of an 8-ft-diameter parabolic antenna that feeds a 50-dB, 25K LNA. The sky noise temperature (with feed) is 32 K. The system is designed to receive signals from a satellite. This satellite system is described in Table 8-5, Fig. 8-25, and Fig. 8-27. The LNA has a post-mixer circuit that down-converts the satellite signal to 70 MHz. The 70-MHz signal is fed to the TVRO receiver via a 120-ft length of 75Ω coaxial cable. The cable has a loss of 3 dB/100 ft. The receiver has a bandwidth of 36 MHz and a noise temperature of 3800 K. Assume that the TVRO site is located in Los Angeles, California (34° N latitude, 118.3° W longitude), and vertical polarization is of interest.
- Find the TVRO antenna look angles to the satellite and find the slant range.
 - Find the overall system temperature.
 - Find the $(C/N)_{\text{dB}}$ into the receiver detector.
-  **★ 8-36** An Earth station receiving system operates at 11.95 GHz and consists of a 20-m antenna with a gain of 65.53 dB and $T_{\text{AR}} = 60$ K, a waveguide with a loss of 1.28 dB and a physical temperature of 290 K, a LNA with $T_e = 50$ K and 60 dB gain, and a down converter with $T_e = 11,000$ K. Using MATLAB, find $(G/T)_{\text{dB}}$ for the receiving system evaluated at
- The input to the LNA.
 - The input to the waveguide.
 - The input to the down converter.
- 8-37** Rework Ex. 8-4 for the case of reception of TV signals from a direct broadcast satellite (DBS). Assume that the system parameters are similar to those given in Table 8-5, except that the satellite power is 316 kW EIRP radiated in the 12-GHz band. Furthermore, assume that a 0.5-m parabolic receiving antenna is used and that the LNA has a 50-K noise temperature.
-  **★ 8-38** A distant object from our sun is Pluto, which is located at a distance from the Earth of 7.5×10^9 km. Assume that an unmanned spacecraft with a 2-GHz, 10-W transponder is in the vicinity of Pluto. A receiving Earth station with a 64-m antenna is available that has a system noise temperature of 16 K at 2 GHz. Calculate the size of a spacecraft antenna that is required for a 300-b/s BPSK data link to Earth that has a 10^{-3} BER (corresponding to E_b/N_0 of 9.88 dB). Allow 2 dB for incidental losses.
- 8-39** Using MATLAB, or some spreadsheet program that will run on a personal computer (PC), design a spreadsheet that will solve Prob. 8-35. Run the spreadsheet on your PC, and verify that it gives the correct answers. Print out your results. Also, try other parameters, such as those appropriate for your location, and print out the results.
- 8-40** Assume that you want to analyze the overall performance of a satellite relay system that uses a “bent pipe” transponder. Let $(C/N)_{\text{up}}$ denote the carrier-to-noise ratio for the transponder as evaluated in

the IF band of the satellite transponder. Let $(C/N)_{\text{dn}}$ denote the IF CNR ratio at the downlink receiving ground station when the satellite is sending a perfect (noise-free) signal. Show that the overall operating CNR ratio at the IF of the receiving ground station, $(C/N)_{\text{ov}}$, is given by

$$\frac{1}{(C/N)_{\text{ov}}} = \frac{1}{(C/N)_{\text{up}}} + \frac{1}{(C/N)_{\text{dn}}}$$



- 8-41** For the wireless device link that is described in Study Aid Example SA8-3, use MATLAB to plot the path loss (in dB) as a function of distance over a range of 50 to 500 feet.

- ★ 8-42** A PCS cellular site base station operates with 10W into an antenna with 18 dB gain at 1800 MHz. The path loss reference distance is $d_0 = 0.25$ miles, $X_{\text{dB}} = 0$, and the PCS phone antenna has 0 dB gain. Find the received power in dBm at the antenna output of the PCS phone when the PCS phone is located at distances of 1 mile, 2 miles, 5 miles, and 10 miles from the BS if the path loss exponent is

- (a) $n = 2$ (free space condition).
- (b) $n = 3$.
- (c) $n = 4$.

- 8-43** The transmitter of a PCS CDMA cellular phone feeds 200 mW into its 0 dB gain antenna. The PCS signal is spread over a bandwidth of 1.25 MHz in the 1900 MHz band. Calculate the signal power received in dBm at the output of the base station antenna where the PCS phone is located 2 km from the BS. Assume a path loss model given by Eq. (8-47), where $d_0 = 100$ m, $n = 3$ and $X_{\text{dB}} = 0$. The BS antenna has a gain of 16 dB.

- 8-44** Given a CDMA cellular phone link as described in Prob. 8-43 and by the IS-95 standard shown in Table 8-11. The base station receiving system has a noise figure of 8 dB and multiple access interference (MAI) from other phones adds 20 dB to the noise level at the front end of the BS receiver. Compute the CNR, $(C/N)_{\text{dB}}$, after despreading (i.e., at the data detector input) in the BS receiver. Also, find $(E_b/N_0)_{\text{dB}}$ after despreading. Assume that the bandwidth after despreading is $B = 19.2$ kHz, since the data rate with coding is 19.2 kb/s (9.6 kb/s payload data rate with rate $\frac{1}{2}$ coding) on each I and Q BPSK carrier of the QPSK signal.

- 8-45** Assume that an analog TV station is licensed to operate on TV Channel 35 with an effective radiated visual power of 1000 W. The tower height is 400 ft, and the transmission line is 450 ft long. Assume that a $1\frac{5}{8}$ -in.-diameter semirigid 50Ω coaxial transmission line will be used that has a loss of 0.6 dB/100 ft (at the operating frequency). The antenna has a gain of 5.6 dB, and the duplexer loss is negligible. Find the PEP at the visual transmitter output.

- ★ 8-46** An analog TV visual transmitter is tested by modulating it with a periodic test signal. The envelope of the transmitter output is viewed on an oscilloscope as shown in Fig. P8-46, where K is an unknown constant. The output of the transmitter is connected to a 50Ω dummy load that has

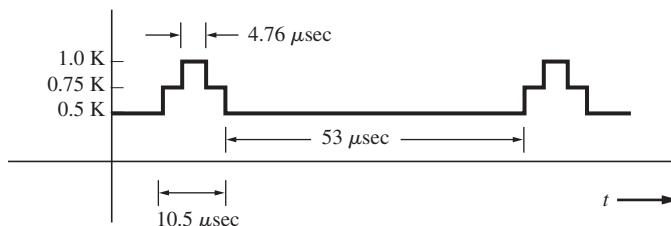


Figure P8-46

a calibrated average reading wattmeter. The wattmeter reads 6.9 kW. Find the PEP of the transmitter output.

- 8-47** Specifications for the MTS stereo audio system for analog TV are given in Fig. 8-33. Using this figure,

- (a) Design a block diagram for TV receiver circuitry that will detect the stereo audio signals and the second audio program (SAP) signal.
- (b) Describe how the circuit works. That is, give mathematical expressions for the signal at each point on your block diagram and explain in words. Be sure to specify all filter transfer functions, VCO center frequencies, and so on.

- 8-48** For the R-Y and B-Y signals in an analog color-TV subcarrier demodulation system, the G-Y signal is obtained from the R-Y and B-Y signals. That is,

$$[m_G(t) - m_Y(t)] = K_1[m_R(t) - m_Y(t)] + K_2[m_B(t) - m_Y(t)]$$

- (a) Find the values for K_1 and K_2 that are required.
- (b) Draw a possible block diagram for a R-Y, B-Y system, and explain how it works.

- ★ 8-49** Referring to the digital DTV standards in Table 8-14, the payload data rate with sync is 19.39 Mb/s. Show that with the addition of coding bits and training bits, the 8VSB signal has a symbol rate of 10.76 Mbaud.

- 8-50** 8VSB signaling is used in the US for DTV transmission. To prevent ISI, the spectrum of the 8VSB signal is designed to roll off with a square root raised cosine-rolloff filtering characteristic, as shown in Fig. 8-39.

- (a) Show that the absolute bandwidth of a VSB signal with raised cosine-rolloff filtering is


$$B_{\text{VSB}} = \frac{1}{2}(1 + 2r)D$$

where D is the symbol rate and r is the rolloff factor. [Hint: The derivation of this formula is similar to that for Eq. (3-74).]

- (b) Using the parameters for DTV from Table 8-14 in the formula developed in part (a), show that the absolute bandwidth for DTV is 6 MHz.



- 8-51** A United States digital TV station operates on Channel 9 with an ERP of 4.9kW. The signal from this station is received 25 miles away via a LOS path with a receiving antenna that has a gain of 8 dB. Assume that the receiving system has a noise figure of 3 dB. Calculate the $(E_b/N_o)_{\text{dB}}$ at the receiver detector input.

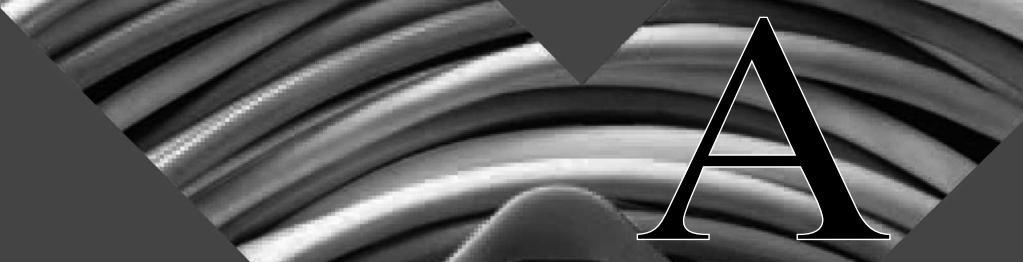

MATHEMATICAL TECHNIQUES, IDENTITIES, AND TABLES

A-1 TRIGONOMETRY AND COMPLEX NUMBERS

Definitions

$$\sin x = \frac{e^{jx} - e^{-jx}}{2j} \quad \cos x = \frac{e^{jx} + e^{-jx}}{2}$$

$$\tan x = \frac{\sin x}{\cos x} = \frac{e^{jx} - e^{-jx}}{j(e^{jx} + e^{-jx})}$$

Trigonometric Identities and Complex Numbers

$$e^{\pm jx} = \cos x \pm j \sin x \text{ (Euler's theorem)}$$

$$e^{\pm j\pi/2} = \pm j \quad e^{\pm jn\pi} = \begin{cases} 1, & n \text{ even} \\ -1, & n \text{ odd} \end{cases}$$

$$x + jy = Re^{j\theta}, \quad \text{where } R = \sqrt{x^2 + y^2}, \quad \theta = \tan^{-1}(y/x)$$

$$(Re^{j\theta})^y = R^y e^{jy\theta} \quad (R_1 e^{j\theta_1})(R_2 e^{j\theta_2}) = R_1 R_2 e^{j(\theta_1 + \theta_2)}$$

$$\cos(x \pm y) = \cos x \cos y \mp \sin x \sin y \quad 2 \cos x \cos y = \cos(x - y) + \cos(x + y)$$

$$\sin(x \pm y) = \sin x \cos y \pm \cos x \sin y \quad 2 \sin x \sin y = \cos(x - y) - \cos(x + y)$$

$$\cos\left(x \pm \frac{\pi}{2}\right) = \mp \sin x \quad 2 \sin x \cos y = \sin(x - y) + \sin(x + y)$$

$$\sin\left(x \pm \frac{\pi}{2}\right) = \pm \cos x \quad 2 \cos^2 x = 1 + \cos 2x$$

$$\cos 2x = \cos^2 x - \sin^2 x \quad 2 \sin^2 x = 1 - \cos 2x$$

$$\sin 2x = 2 \sin x \cos x \quad 4 \cos^3 x = 3 \cos x + \cos 3x$$

$$8 \cos^4 x = 3 + 4 \cos 2x + \cos 4x$$

$$8 \sin^4 x = 3 - 4 \cos 2x + \cos 4x$$

$$R \cos(x + \theta) = A \cos x - B \sin x$$

$$\text{where } R = \sqrt{A^2 + B^2}, \quad \theta = \tan^{-1}(B/A), \quad A = R \cos \theta, \quad B = R \sin \theta$$

A-2 DIFFERENTIAL CALCULUS

Definition

$$\frac{df(x)}{dx} = \lim_{\Delta x \rightarrow 0} \frac{f(x + (\Delta x/2)) - f(x - (\Delta x/2))}{\Delta x}$$

Differentiation Rules

$$\frac{du(x)v(x)}{dx} = u(x) \frac{dv(x)}{dx} + v(x) \frac{du(x)}{dx} \quad (\text{products}) \quad \frac{du[v(x)]}{dx} = \frac{du}{dv} \frac{dv}{dx} \quad (\text{chain rule})$$

$$\frac{d\left(\frac{u(x)}{v(x)}\right)}{dx} = \frac{v(x) \frac{du(x)}{dx} - u(x) \frac{dv(x)}{dx}}{v^2(x)} \quad (\text{quotient})$$

Derivative Table

$$\frac{d[x^n]}{dx} = nx^{n-1}$$

$$\frac{d \tan^{-1} ax}{dx} = \frac{a}{1 + (ax)^2}$$

$$\frac{d \sin ax}{dx} = a \cos ax$$

$$\frac{d \cos^{-1} ax}{dx} = -\frac{a}{\sqrt{1 - (ax)^2}}$$

$$\frac{d \cos ax}{dx} = -a \sin ax$$

$$\frac{d[e^{ax}]}{dx} = ae^{ax}$$

$$\frac{d \tan ax}{dx} = \frac{a}{\cos^2 ax}$$

$$\frac{d[a^x]}{dx} = a^x \ln a$$

$$\frac{d \sin^{-1} ax}{dx} = \frac{a}{\sqrt{1 - (ax)^2}}$$

$$\frac{d(\ln x)}{dx} = \frac{1}{x}$$

$$\frac{d(\log_a x)}{dx} = \frac{1}{x} \log_a e$$

$$\frac{d \left[\int_{a(x)}^{b(x)} f(\lambda, x) d\lambda \right]}{dx} = f(b(x), x) \frac{db(x)}{dx} - f(a(x), x) \frac{da(x)}{dx}$$

$$+ \int_{a(x)}^{b(x)} \frac{\partial f(\lambda, x)}{\partial x} d\lambda \quad (\text{Leibniz's rule})$$

A-3 INDETERMINATE FORMS

If $\lim_{x \rightarrow a} f(x)$ is of the form

$$\frac{0}{0}, \frac{\infty}{\infty}, 0 \cdot \infty, \infty - \infty, 0^\circ, \infty^\circ, 1^\infty$$

then

$$\lim_{x \rightarrow a} f(x) = \lim_{x \rightarrow a} \left[\frac{N(x)}{D(x)} \right] = \lim_{x \rightarrow a} \left[\frac{(dN(x)/dx)}{(dD(x)/dx)} \right] \quad (\text{L'Hôpital's rule})$$

where $N(x)$ is the numerator of $f(x)$, $D(x)$ is the denominator of $f(x)$, $N(a) = 0$, and $D(a) = 0$.

A-4 INTEGRAL CALCULUS

Definition

$$\int f(x) dx = \lim_{\Delta x \rightarrow 0} \left\{ \sum_n [f(n \Delta x)] \Delta x \right\}$$

Integration Techniques

- 1.** Change in variable. Let $v = u(x)$:

$$\int_a^b f(x) dx = \int_{u(a)}^{u(b)} \left(\frac{f(x)}{dv/dx} \Big|_{x=u^{-1}(v)} \right) dv$$

- 2.** Integration by parts

$$\int u dv = uv - \int v du$$

- 3.** Integral tables.

- 4.** Complex variable techniques.

- 5.** Numerical methods.

A-5 INTEGRAL TABLES

Indefinite Integrals

$$\int (a + bx)^n dx = \frac{(a + bx)^{n+1}}{b(n + 1)}, \quad 0 < n$$

$$\int \frac{dx}{a + bx} = \frac{1}{b} \ln |a + bx|$$

$$\int \frac{dx}{(a + bx)^n} = \frac{-1}{(n - 1)b(a + bx)^{n-1}}, \quad 1 < n$$

$$\int \frac{dx}{c + bx + ax^2} = \begin{cases} \frac{2}{\sqrt{4ac - b^2}} \tan^{-1} \left(\frac{2ax + b}{\sqrt{4ac - b^2}} \right), & b^2 < 4ac \\ \frac{1}{\sqrt{b^2 - 4ac}} \ln \left| \frac{2ax + b - \sqrt{b^2 - 4ac}}{2ax + b + \sqrt{b^2 - 4ac}} \right|, & b^2 > 4ac \\ \frac{-2}{\sqrt{2ax + b}}, & b^2 = 4ac \end{cases}$$

$$\int \frac{x dx}{c + bx + ax^2} = \frac{1}{2a} \ln |ax^2 + bx + c| - \frac{b}{2a} \int \frac{dx}{c + bx + ax^2}$$

$$\int \frac{dx}{a^2 + b^2 x^2} = \frac{1}{ab} \tan^{-1} \left(\frac{bx}{a} \right)$$

$$\int \frac{x dx}{a^2 + x^2} = \frac{1}{2} \ln (a^2 + x^2)$$

$$\int \cos x dx = \sin x$$

$$\int \sin x dx = -\cos x$$

$$\int x \cos x dx = \cos x + x \sin x$$

$$\int x \sin x dx = \sin x - x \cos x$$

$$\begin{aligned} \int x^2 \cos x \, dx &= 2x \cos x + (x^2 - 2) \sin x & \int x^2 \sin x \, dx &= 2x \sin x - (x^2 - 2) \cos x \\ \int e^{ax} \, dx &= \frac{e^{ax}}{a} & \int x^3 e^{ax} \, dx &= e^{ax} \left(\frac{x^2}{a} - \frac{3x^2}{a^2} + \frac{6x}{a^3} - \frac{6}{a^4} \right) \\ \int x e^{ax} \, dx &= e^{ax} \left(\frac{x}{a} - \frac{1}{a^2} \right) & \int e^{ax} \sin x \, dx &= \frac{e^{ax}}{a^2 + 1} (a \sin x - \cos x) \\ \int x^2 e^{ax} \, dx &= e^{ax} \left(\frac{x^2}{a} - \frac{2x}{a^2} + \frac{2}{a^3} \right) & \int e^{ax} \cos x \, dx &= \frac{e^{ax}}{a^2 + 1} (a \cos x - \sin x) \end{aligned}$$

Definite Integrals

$$\int_0^\infty \frac{x^{m-1}}{1+x^n} \, dx = \frac{\pi/n}{\sin(m\pi/n)}, \quad n > m > 0$$

$$\begin{aligned} \int_0^\infty x^{\alpha-1} e^{-x} \, dx &= \Gamma(\alpha), \quad \alpha > 0, \quad \text{where } \Gamma(\alpha+1) = \alpha\Gamma(\alpha) \\ \Gamma(1) &= 1; \Gamma\left(\frac{1}{2}\right) = \sqrt{\pi} \\ \Gamma(n) &= (n-1)! \quad \text{if } n \text{ is a positive integer} \end{aligned}$$

$$\int_0^\infty x^{2n} e^{-ax^2} \, dx = \frac{1 \cdot 3 \cdot 5 \cdots (2n-1)}{2^{n+1} a^n} \sqrt{\frac{\pi}{a}}$$

$$\int_{-\infty}^\infty e^{-a^2 x^2 + bx} \, dx = \frac{\sqrt{\pi}}{a} e^{b^2/(4a^2)}, \quad a > 0$$

$$\int_0^\infty e^{-ax} \cos bx \, dx = \frac{a}{a^2 + b^2}, \quad a > 0$$

$$\int_0^\infty e^{-ax} \sin bx \, dx = \frac{b}{a^2 + b^2}, \quad a > 0$$

$$\int_0^\infty e^{-a^2 x^2} \cos bx \, dx = \frac{\sqrt{\pi} e^{-b^2/4a^2}}{2a}, \quad a > 0$$

$$\int_0^\infty x^{\alpha-1} \cos bx \, dx = \frac{\Gamma(\alpha)}{b^\alpha} \cos \frac{1}{2}\pi\alpha, \quad 0 < \alpha < 1, b > 0$$

$$\int_0^\infty x^{\alpha-1} \sin bx \, dx = \frac{\Gamma(\alpha)}{b^\alpha} \sin \frac{1}{2}\pi\alpha, \quad 0 < |\alpha| < 1, b > 0$$

$$\int_0^\infty xe^{-ax^2} I_k(bx) dx = \frac{1}{2a} e^{b^2/4a}, \quad \text{where } I_k(bx) = \frac{1}{\pi} \int_0^\pi e^{bx \cos \theta} \cos k\theta d\theta$$

$$\int_0^\infty \frac{\sin x}{x} dx = \int_0^\infty \text{Sa}(x) dx = \frac{\pi}{2} \quad \int_0^\infty \frac{\cos ax}{b^2 + x^2} dx = \frac{\pi}{2b} e^{-ab}, \quad a > 0, b > 0$$

$$\int_0^\infty \left(\frac{\sin x}{x} \right)^2 dx = \int_0^\infty \text{Sa}^2(x) dx = \frac{\pi}{2} \quad \int_0^\infty \frac{x \sin ax}{b^2 + x^2} dx = \frac{\pi}{2} e^{-ab}, \quad a > 0, b > 0$$

$$\int_{-\infty}^\infty e^{\pm j2\pi yx} dx = \delta(y)$$

A-6 SERIES EXPANSIONS

Finite Series

$$\sum_{n=1}^N n = \frac{N(N+1)}{2}$$

$$\sum_{n=1}^N n^2 = \frac{N(N+1)(2N+1)}{6}$$

$$\sum_{n=1}^N n^3 = \frac{N^2(N+1)^2}{4}$$

$$\sum_{k=0}^N \binom{N}{k} a^{N-k} b^k = (a+b)^N,$$

$$\sum_{n=0}^N a^n = \frac{a^{N+1} - 1}{a - 1}$$

$$\sum_{n=0}^N \frac{N!}{n!(N-n)!} x^n y^{N-n} = (x+y)^N$$

$$\sum_{n=0}^N e^{j(\theta+n\phi)} = \frac{\sin [(N+1)\phi/2]}{\sin (\phi/2)} e^{j[\theta+(N\phi/2)]}$$

$$\text{where } \binom{N}{k} = \frac{N!}{(N-k)! k!}$$

Infinite Series

$$f(x) = \sum_{n=0}^{\infty} \left(\frac{f^{(n)}(a)}{n!} \right) (x-a)^n \quad (\text{Taylor's series})$$

$$f(x) = \sum_{n=-\infty}^{\infty} c_n e^{jn\omega_0 x}, \quad \text{for } a \leq x \leq a+T \quad (\text{Fourier series})$$

$$\text{where } c_n = \frac{1}{T} \int_a^{a+T} f(x) e^{-jn\omega_0 x} dx \quad \text{and} \quad \omega_0 = \frac{2\pi}{T}$$

$$e^x = \sum_{n=0}^{\infty} \frac{x^n}{n!}$$

$$\sin x = \sum_{n=0}^{\infty} \frac{(-1)^n x^{2n+1}}{(2n+1)!}$$

$$\cos x = \sum_{n=0}^{\infty} \frac{(-1)^n x^{2n}}{(2n)!}$$

A-7 HILBERT TRANSFORM PAIRS[†]

Definition of Hilbert Transform: $\hat{x}(t) \triangleq x(t) * \frac{1}{\pi t} = \frac{1}{\pi} \int_{-\infty}^{\infty} \frac{x(\lambda)}{t - \lambda} d\lambda$

Function	Hilbert Transform
1. $x(at + b)$	$\hat{x}(at + b)$
2. $x(t) + y(t)$	$\hat{x}(t) + \hat{y}(t)$
3. $\frac{d^n x(t)}{dt^n}$	$\frac{d^n}{dt^n} \hat{x}(t)$
4. A constant	0
5. $\frac{1}{t}$	$-\pi\delta(t)$
6. $\sin(\omega_0 t + \theta)$	$-\cos(\omega_0 t + \theta)$
7. $\frac{\sin at}{at} = \text{Sa}(at)$	$-\frac{1}{2\pi} at \text{Sa}^2(at)$
8. $e^{\pm j\omega_0 t}$	$\mp j e^{\pm j\omega_0 t}$
9. $\delta(t)$	$\frac{1}{\pi t}$
10. $\frac{a}{\pi(t^2 + a^2)}$	$\frac{t}{\pi(t^2 + a^2)}$
11. $\prod\left(\frac{t}{T}\right) \triangleq \begin{cases} 1, & t \leq T/2 \\ 0, & t \text{ elsewhere} \end{cases}$	$\frac{1}{\pi} \ln \left \frac{2t + T}{2t - T} \right $

A-8 THE DIRAC DELTA FUNCTION

DEFINITION. The Dirac *delta function* $\delta(x)$, also called the *unit impulse function*, satisfies *both* of the following conditions:

$$\int_{-\infty}^{\infty} \delta(x) dx = 1 \quad \text{and} \quad \delta(x) = \begin{cases} \infty, & x = 0 \\ 0, & x \neq 0 \end{cases}$$

Consequently, $\delta(x)$ is a “singular” function.[‡]

[†] Fourier transform theorems are given in Table 2-1, and Fourier transform pairs are given in Table 2-2.

[‡] The Dirac delta function is not an ordinary function since it is really undefined at $x = 0$. However, it is described by the mathematical theory of distributions [Bremermann, 1965].

Properties of Dirac Delta Functions

- $\delta(x)$ can be expressed in terms of the limit of some ordinary functions such that (in the limit of some parameter) the ordinary function satisfies the definition for $\delta(x)$. For example,

$$\delta(x) = \lim_{\sigma \rightarrow 0} \left(\frac{1}{\sqrt{2\pi}\sigma} e^{-x^2/(2\sigma^2)} \right) \quad \text{or} \quad \delta(x) = \lim_{a \rightarrow \infty} \left[\frac{a}{\pi} \left(\frac{\sin ax}{ax} \right) \right]$$

For these two examples, $\delta(-x) = \delta(x)$, so for *these* cases $\delta(x)$ is said to be an *even-sided delta function*. The even-sided delta function is used throughout this text, except when specifying the PDF of a discrete random variable.

$$\delta(x) = \begin{cases} \lim_{a \rightarrow \infty} (ae^{ax}), & x \leq 0 \\ 0, & x > 0 \end{cases}$$

This is an example of a single-sided delta function; in particular, this is a *left-sided delta function*. This type of delta function is used to specify the PDF of a discrete point of a random variable. (See Appendix B.)

- Sifting property:

$$\int_{-\infty}^{\infty} w(x) \delta(x - x_0) dx = w(x_0)$$

- For *even-sided* delta functions

$$\int_a^b w(x) \delta(x - x_0) dx = \begin{cases} 0, & x_0 < a \\ \frac{1}{2}w(a), & x_0 = a \\ w(x_0), & a < x_0 < b \\ \frac{1}{2}w(b), & x_0 = b \\ 0, & x_0 > b \end{cases}$$

where $b > a$.

- For *left-sided* delta functions,

$$\int_a^b w(x) \delta(x - x_0) dx = \begin{cases} 0, & x_0 \leq a \\ w(x_0), & a < x_0 \leq b \\ 0, & x_0 > b \end{cases}$$

where $b > a$.

- $\int_{-\infty}^{\infty} w(x) \delta^{(n)}(x - x_0) dx = (-1)^n w^{(n)}(x_0)$

where the superscript (n) denotes the n th derivative with respect to x .

6. The Fourier transform of $\delta(x)$ is unity. That is,

$$\mathcal{F}[\delta(x)] = 1$$

Conversely,

$$\delta(x) = \mathcal{F}^{-1}[1]$$

7. The scaling property is

$$\delta(ax) = \frac{1}{|a|} \delta(x)$$

8. For *even-sided* delta functions,

$$\delta(x) = \int_{-\infty}^{\infty} e^{\pm j2\pi xy} dy$$

A-9 TABULATION OF $\text{Sa}(x) = (\sin x)/x$



x	$\text{Sa}(x)$	$\text{Sa}^2(x)$	x	$\text{Sa}(x)$	$\text{Sa}^2(x)$
0.0	1.0000	1.0000	5.2	-0.1699	0.0289
0.2	0.9933	0.9867	5.4	-0.1431	0.0205
0.4	0.9735	0.9478	5.6	-0.1127	0.0127
0.6	0.9411	0.8856	5.8	-0.0801	0.0064
0.8	0.8967	0.8041	6.0	-0.0466	0.0022
1.0	0.8415	0.7081	6.2	-0.0134	0.0002
1.2	0.7767	0.6033	2π	0.0000	0.0000
1.4	0.7039	0.4955	6.4	0.0182	0.0003
1.6	0.6247	0.3903	6.6	0.0472	0.0022
1.8	0.5410	0.2927	6.8	0.0727	0.0053
2.0	0.4546	0.2067	7.0	0.0939	0.0088
2.2	0.3675	0.1351	7.2	0.1102	0.0122
2.4	0.2814	0.0792	7.4	0.1214	0.0147
2.6	0.1983	0.0393	7.6	0.1274	0.0162
2.8	0.1196	0.0143	7.8	0.1280	0.0164
3.0	0.0470	0.0022	8.0	0.1237	0.0153
π	0.0000	0.0000	8.2	0.1147	0.0132
3.2	-0.0182	0.0003	8.4	0.1017	0.0104
3.4	-0.0752	0.0056	8.6	0.0854	0.0073
3.6	-0.1229	0.0151	8.8	0.0665	0.0044
3.8	-0.1610	0.0259	9.0	0.0458	0.0021
4.0	-0.1892	0.0358	9.2	0.0242	0.0006
4.2	-0.2075	0.0431	9.4	0.0026	0.0000
4.4	-0.2163	0.0468	3π	0.0000	0.0000
4.6	-0.2160	0.0467	9.6	-0.0182	0.0003
4.8	-0.2075	0.0431	9.8	-0.0374	0.0014
5.0	-0.1918	0.0368	10.0	-0.0544	0.0030

A-10 TABULATION OF $Q(z)$



$$Q(z) \triangleq \frac{1}{\sqrt{2\pi}} \int_z^\infty e^{-\lambda^2/2} d\lambda$$

For $z \geq 3$, $Q(z) \approx \frac{1}{\sqrt{2\pi}} e^{-z^2/2}$ (See Fig. B-7.)

Also,

$$Q(-z) = 1 - Q(z)$$

$$Q(z) = \frac{1}{2} \operatorname{erf}\left(\frac{z}{\sqrt{2}}\right) = \frac{1}{2} \left[1 - \operatorname{erf}\left(\frac{z}{\sqrt{2}}\right) \right]$$

where $\operatorname{erfc}(x) \triangleq \frac{2}{\sqrt{\pi}} \int_x^\infty e^{-\lambda^2} d\lambda$ and $\operatorname{erf}(x) = \frac{2}{\sqrt{\pi}} \int_0^x e^{-\lambda^2} d\lambda$

For $z \geq 0$, a rational function approximation is [Abramowitz and Stegun, 1964; Ziemer and Tranter, 1995]



$$Q(z) = \frac{e^{-z^2/2}}{\sqrt{2\pi}} (b_1 t + b_2 t^2 + b_3 t^3 + b_4 t^4 + b_5 t^5).$$

where $t = 1/(1 + pz)$, with $p = 0.2316419$,

$$b_1 = 0.31981530 \quad b_2 = -0.356563782 \quad b_3 = 1.781477937$$

$$b_4 = -1.821255978 \quad b_5 = 1.330274429$$

Another approximation for $Q(z)$ for $z \geq 0$ is [Börjesson and Sunberg, 1979; Peebles, 1993]


$$Q(z) = \left[\frac{1}{(10.339)z + 0.339\sqrt{z^2 + 5.510}} \right] \frac{e^{-z^2/2}}{\sqrt{2\pi}}$$

This approximation has a maximum absolute error of 0.27% for $z \geq 0$.



z	$Q(z)$	z	$Q(z)$
0.0	0.50000	2.0	0.02275
0.1	0.46017	2.1	0.01786
0.2	0.42074	2.2	0.01390
0.3	0.38209	2.3	0.01072
0.4	0.34458	2.4	0.00820
0.5	0.30854	2.5	0.00621
0.6	0.27425	2.6	0.00466
0.7	0.24196	2.7	0.00347
0.8	0.21186	2.8	0.00256
0.9	0.18406	2.9	0.00187
1.0	0.15866	3.0	0.00135
1.1	0.13567	3.1	0.00097
1.2	0.11507	3.2	0.00069
1.3	0.09680	3.3	0.00048
1.4	0.08076	3.4	0.00034
1.5	0.06681	3.5	0.00023
1.6	0.05480	3.6	0.00016
1.7	0.04457	3.7	0.00011
1.8	0.03593	3.8	0.00007
1.9	0.02872	3.9	0.00005
		4.0	0.00003

Also see Fig. B-7 for a plot of $Q(z)$.

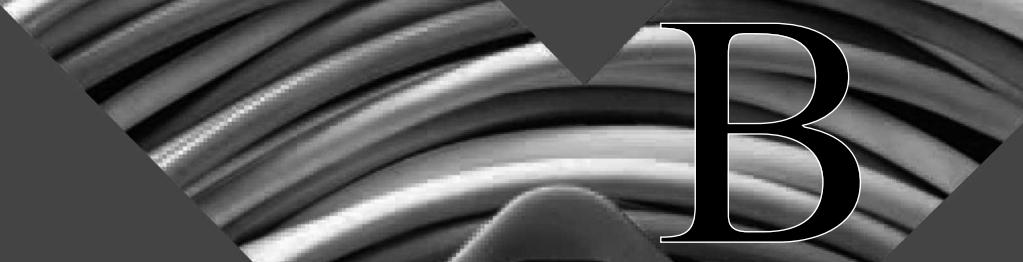

B

PROBABILITY AND RANDOM VARIABLES

B-1 INTRODUCTION

The need for probability theory arises in every scientific discipline, since it is impossible to be exactly sure of values that are obtained by measurement. For example, we might say that we are 90% sure that a voltage is within ± 0.1 V of a 5-V level. This is a statistical description of the voltage parameter as opposed to a deterministic description, whereby we might define the voltage as being exactly 5 V.

This appendix is intended to be a short course in probability and random variables. Numerous excellent books cover this topic in more detail [Miller, 2012; Childers, 1997; Papoulis, 1991; Peebles, 1993; Shanmugan and Breipohl, 1988]. This appendix will provide a good introduction to the topic for the new student or a quick review for the student who is already knowledgeable in this area.


If probability and random variables are new topics for you, you will soon realize that to understand them, you will need to master many new definitions that seem to be introduced all at once. It is important to memorize these definitions in order to have a vocabulary that can be

used when conversing with others about statistical results. In addition, you must develop a feeling for the engineering application of these definitions and theorems. We will accomplish this at the beginning, and you will grasp more complicated statistical ideas easily.


B-2 SETS

DEFINITION. A *set* is a collection (or class) of objects.


The largest set or the all-embracing set of objects under consideration in an experiment is called the *universal set*. All other sets under consideration in the experiment are subsets, or *events*, of the universal set. This is illustrated in Fig. B-1a, where a *Venn diagram* is given.

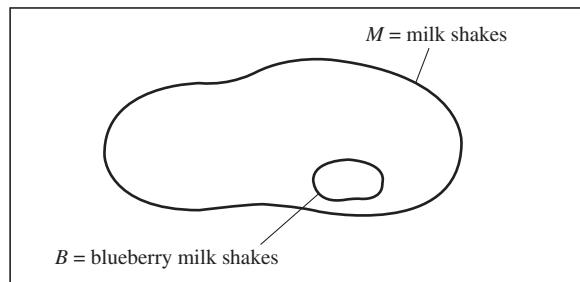

(a) Subsets

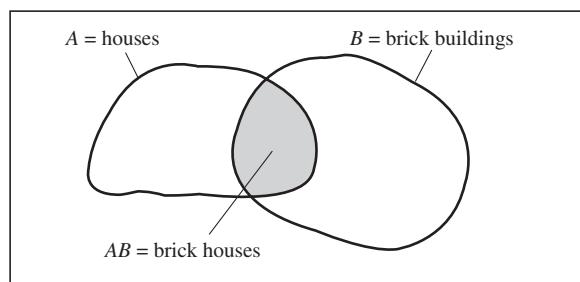

(b) Intersection

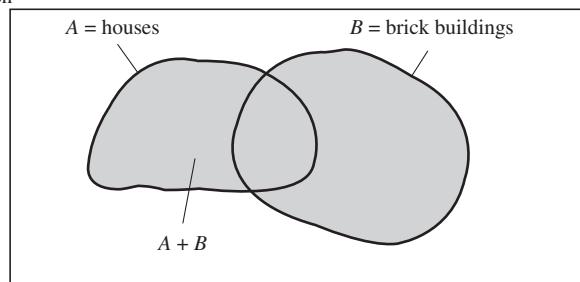

(c) Union

Figure B-1 Venn diagram.

For example, M might denote the set containing all types of milk shakes, and B might denote the subset of blueberry milk shakes. Thus, B is contained in M , which is denoted by $B \subset M$. In parts b and c of this figure, two sets— A and B —are shown. There are two basic ways of describing the combination of set A and set B . These are called *intersection* and *union*.

DEFINITION. The *intersection* of set A and set B , denoted by AB , is the set of elements that is common to A and B . (Mathematicians use the notation $A \cap B$.)

The intersection of A and B is analogous to the AND operation used in digital logic. For example, if A denotes houses and B denotes brick buildings, then the event $C = AB$ would denote only brick houses. This is illustrated by Fig. B-1b.

DEFINITION. The *union* of set A and set B , denoted by $A + B$, is the set that contains all the elements of A or all the elements of B or both. (Mathematicians use the notation $A \cup B$.)

The union of A and B is analogous to the OR operation used in digital logic. Continuing with the example just given, $D = A + B$ would be the set that contains all brick buildings, all houses, and all brick houses. This is illustrated in Fig. B-1c.

The events A and B are called *simple events*, and the events $C = AB$ and $D = A + B$ are called *compound events*, since they are logical functions of simple events.

B-3 PROBABILITY AND RELATIVE FREQUENCY

Simple Probability

The probability of an event A , denoted by $P(A)$, may be defined in terms of the relative frequency of A occurring in n trials.

DEFINITION.[†]

$$P(A) = \lim_{n \rightarrow \infty} \left(\frac{n_A}{n} \right) \quad (\text{B-1})$$

where n_A is the number of times that A occurs in n trials.

In practice, n is taken to be some reasonable number such that a larger value for n would give approximately the same value for $P(A)$. For example, suppose that a coin is tossed 40 times and that the heads event, denoted by A , occurs 19 times. Then, the probability of a head would be evaluated as approximately $P(A) = \frac{19}{40}$, where the true value of $P(A) = 0.5$ would have been obtained if $n = \infty$ had been used.

[†] Here an engineering approach is used to define probability. Strictly speaking, statisticians have developed probability theory based on three axioms: (1) $P(A) > 0$, (2) $P(S) = 1$, where S is the sure event, and (3) $P(A + B) = P(A) + P(B)$, provided that AB is a null event (i.e., $AB = \emptyset$). Statisticians define $P(A)$ as being any function of A that satisfies these axioms. The engineering definition is consistent with this approach since it satisfies these axioms.

From the definition of probability, as given by Eq. (B-1), it is seen that all probability functions have the property

$$0 \leq P(A) \leq 1 \quad (\text{B-2})$$

where $P(A) = 0$ if the event A is a *null event* (never occurs) and $P(A) = 1$ if the event A is a *sure event* (always occurs).

Joint Probability

DEFINITION. The probability of a *joint event*, AB , is

$$P(AB) = \lim_{n \rightarrow \infty} \left(\frac{n_{AB}}{n} \right) \quad (\text{B-3})$$

where n_{AB} is the number of times that the event AB occurs in n trials.

In addition, two events, A and B , are said to be *mutually exclusive* if AB is a null event, which implies that $P(AB) \equiv 0$.

Example B-1 EVALUATION OF PROBABILITIES

Let event A denote an auto accident blocking a certain street intersection during a 1-min interval. Let event B denote that it is raining at the street intersection during a 1-min period. Then, event $E = AB$ would be a blocked intersection while it is raining, as evaluated in 1-min increments.

Suppose that experimental measurements are tabulated continuously for 1 week, and it is found that $n_A = 25$, $n_B = 300$, $n_{AB} = 20$, and there are $n = 10,080$ 1-min intervals in the week of measurements. ($n_A = 25$ does not mean that there were 25 accidents in a 1-week period, but that the intersection was blocked for 25 1-min periods because of car accidents; this is similarly true for n_B and n_{AB} .) These results indicate that the probability of having a blocked intersection is $P(A) = 0.0025$, the probability of rain is $P(B) = 0.03$, and the probability of having a blocked intersection and it is raining is $P(AB) = 0.002$.

The probability of the union of two events may be evaluated by measuring the compound event directly, or it may be evaluated from the probabilities of simple events as given by the following theorem:

THEOREM. Let $E = A + B$; then,

$$P(E) = P(A + B) = P(A) + P(B) - P(AB) \quad (\text{B-4})$$

Proof. Let the event A only occur n_1 times out of n trials, the event B only occurs n_2 times out of n trials, and the event AB occur n_{AB} times. Thus,

$$\begin{aligned} P(A + B) &= \lim_{n \rightarrow \infty} \left(\frac{n_1 + n_2 + n_{AB}}{n} \right) \\ &= \lim_{n \rightarrow \infty} \left(\frac{n_1 + n_{AB}}{n} \right) + \lim_{n \rightarrow \infty} \left(\frac{n_2 + n_{AB}}{n} \right) - \lim_{n \rightarrow \infty} \left(\frac{n_{AB}}{n} \right) \end{aligned}$$

which is identical to Eq. (B-4), since

$$P(A) = \lim_{n \rightarrow \infty} \left(\frac{n_1 + n_{AB}}{n} \right),$$

$$P(B) = \lim_{n \rightarrow \infty} \left(\frac{n_2 + n_{AB}}{n} \right), \text{ and } P(AB) = \lim_{n \rightarrow \infty} \left(\frac{n_{AB}}{n} \right)$$

Example B-1 (Continued)

The probability of having a blocked intersection or rain occurring or both is then

$$P(A + B) = 0.0025 + 0.03 - 0.002 \approx 0.03 \quad (\text{B-5})$$

Conditional Probabilities

DEFINITION. The probability that an event A occurs, given that an event B has also occurred, is denoted by $P(A|B)$, which is defined as

$$P(A|B) = \lim_{n_B \rightarrow \infty} \left(\frac{n_{AB}}{n_B} \right) \quad (\text{B-6})$$

Example B-1 (Continued)

The probability of a blocked intersection when it is raining is approximately

$$P(A|B) = \frac{20}{300} = 0.066 \quad (\text{B-7})$$

THEOREM. Let $E = AB$; then

$$P(AB) = P(A)P(B|A) = P(B)P(A|B) \quad (\text{B-8})$$

This is known as Bayes' theorem.

Proof.

$$P(AB) = \lim_{n \rightarrow \infty} \left(\frac{n_{AB}}{n} \right) = \lim_{\substack{n \rightarrow \infty \\ n_A \rightarrow \text{large}}} \left(\frac{\frac{n_{AB}}{n_A} \cdot \frac{n_A}{n}}{n} \right) = P(B|A)P(A) \quad (\text{B-9})$$

It is noted that the values obtained for $P(AB)$, $P(B)$, and $P(A|B)$ in Example B-1 can be verified by using Eq. (B-8).

DEFINITION. Two events, A and B , are said to be *independent* if either

$$P(A|B) = P(A) \quad (\text{B-10})$$

or

$$P(B|A) = P(B) \quad (\text{B-11})$$

Using this definition, we can easily demonstrate that events A and B of Example B-1 are not independent. Conversely, if event A had been defined as getting heads on a coin toss,

while B was the event that it was raining at the intersection, then A and B would be independent. Why?

Using Eqs. (B-8) and (B-10), we can show that if a set of events A_1, A_2, \dots, A_n , are independent, then a necessary condition is[†]

$$P(A_1 A_2 \dots A_n) = P(A_1)P(A_2) \cdots P(A_n) \quad (\text{B-12})$$

B-4 RANDOM VARIABLES

DEFINITION. A real-valued *random variable* is a real-valued function defined on the events (elements) of the probability system.

An understanding of why this definition is needed is fundamental to the topic of probability theory. So far, we have defined probabilities in terms of events A, B, C , and so on. This method is awkward to use when the sets are objects (apples, oranges, etc.) instead of numbers. It is more convenient to describe sets by numerical values, so that equations can be obtained as a function of numerical values instead of functions of alphanumeric parameters. This method is accomplished by using the random variable.

Example B-2 RANDOM VARIABLE

Referring to Fig. B-2, we can show the mutually exclusive events A, B, C, D, E, F, G , and H by a Venn diagram. These are all the possible outcomes of an experiment, so the sure event is $S = A + B + C + D + E + F + G + H$. Each of these events is denoted by some convenient value of the random variable x , as shown in the table in this figure. The assigned values for x may be positive, negative, fractions, or integers as long as they are real numbers. Since all the events are mutually exclusive, using (B-4) yields

$$P(S) = 1 = P(A) + P(B) + P(C) + P(D) + P(E) + P(F) + P(G) + P(H) \quad (\text{B-13})$$

That is, the probabilities have to sum to unity (the probability of a sure event), as shown in the table, and the individual probabilities have been given or measured as shown. For example, $P(C) = P(-1.5) = 0.2$. These values for the probabilities may be plotted as a function of the random variable x , as shown in the graph of $P(x)$. This is a *discrete* (or *point*) distribution since the random variable takes on only discrete (as opposed to continuous) values.

B-5 CUMULATIVE DISTRIBUTION FUNCTIONS AND PROBABILITY DENSITY FUNCTIONS

DEFINITION. The *cumulative distribution function* (CDF) of the random variable x is given by $F(a)$, where

$$F(a) \triangleq P(x \leq a) \equiv \lim_{n \rightarrow \infty} \left(\frac{n_{x \leq a}}{n} \right) \quad (\text{B-14})$$

where $F(a)$ is a unitless function.

[†] Equation (B-12) is not a sufficient condition for A_1, A_2, \dots, A_n to be independent [Papoulis, 1984, p. 34].

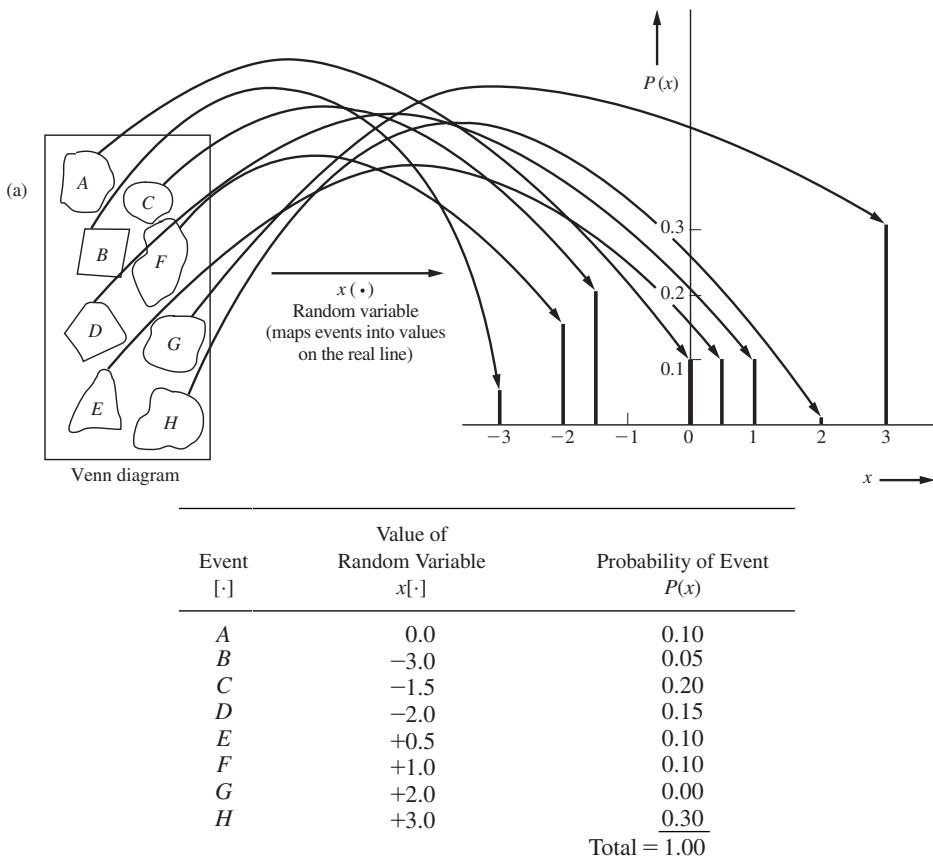


Figure B-2 Random variable and probability functions for Example B-2.

DEFINITION. The *probability density function* (PDF) of the random variable x is given by $f(x)$, where

$$f(x) = \frac{dF(a)}{da} \Big|_{a=x} = \frac{dP(x \leq a)}{da} \Big|_{a=x} = \lim_{\substack{n \rightarrow \infty \\ \Delta x \rightarrow 0}} \frac{l}{\Delta x} \left(\frac{n_{\Delta x}}{n} \right) \quad (\text{B-15})$$

where $f(x)$ has units of $1/x$.

Example B-2 (Continued)

The CDF for this example that was illustrated in Fig. B-2 is easily obtained using Eq. (B-14). The resulting CDF is shown in Fig. B-3. Note that the CDF starts at a zero value on the left ($a = -\infty$), and that the probability is accumulated until the CDF is unity on the right ($a = +\infty$).

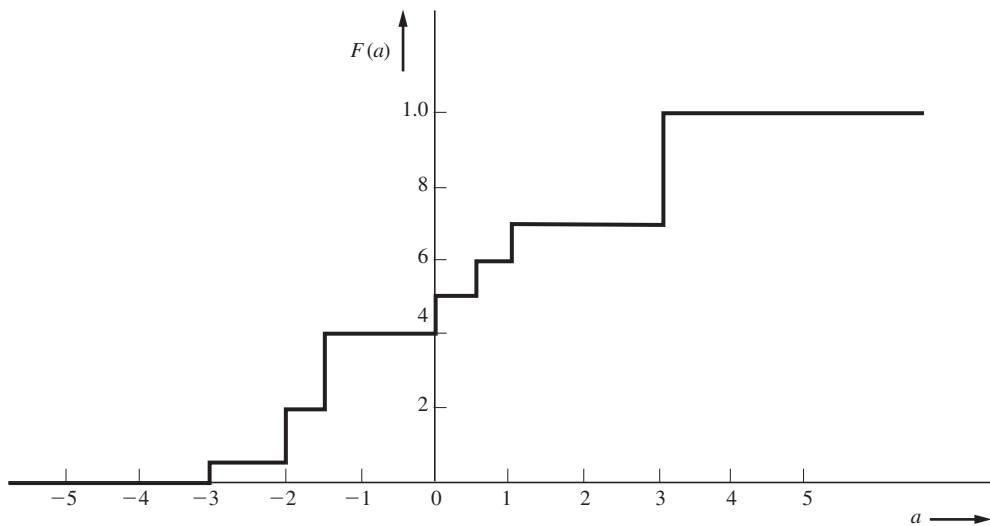


Figure B-3 CDF for Example B-2.

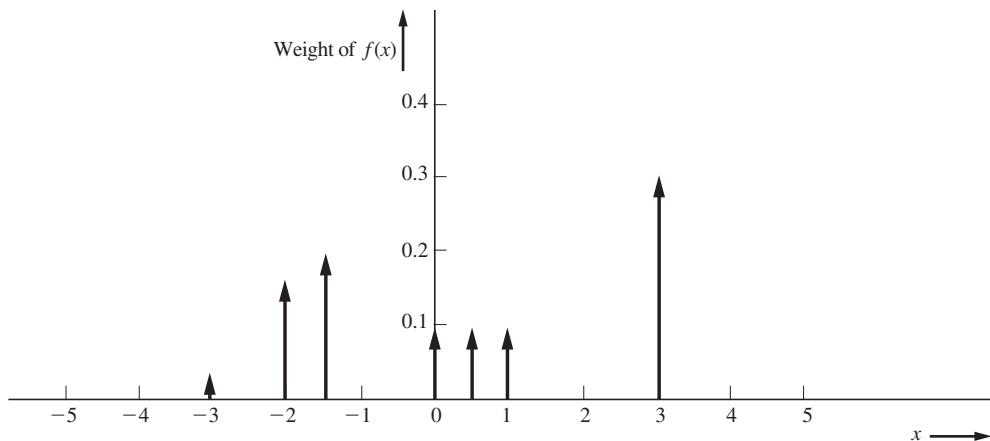


Figure B-4 PDF for Example B-2.

Using Eq. (B-15), we obtain the PDF by taking the derivative of the CDF. The result is shown in Fig. B-4. The PDF consists of Dirac delta functions located at the assigned (discrete) values of the random variable and having weights equal to the probabilities of the associated event.[†]

[†] Left-sided delta functions are used here so that if $x = a$ happens to be a discrete point, $F(a) = P(x \leq a)$ includes all the probability from $x = -\infty$ up to and *including* the point $x = a$. See Sec. A-8 (Appendix A) for properties of Dirac delta functions.

Properties of CDFs and PDFs

Some properties of the CDF are as follows:

1. $F(a)$ is a nondecreasing function.
2. $F(a)$ is right-hand continuous. That is,

$$\lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} F(a + \varepsilon) = F(a)$$

3.

$$F(a) = \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \int_{-\infty}^{a+\varepsilon} f(x) dx \quad (\text{B-16})$$

4. $0 \leq F(a) \leq 1$.
5. $F(-\infty) = 0$.
6. $F(+\infty) = 1$.

Note that the ε is needed to account for a discrete point that might occur at $x = a$. If there is no discrete point at $x = a$, the limit is not necessary.

Some properties of the PDF are as follows:

1. $f(x) \geq 0$. That is, $f(x)$ is a nonnegative function.
2. $\int_{-\infty}^{\infty} f(x) dx = F(+\infty) = 1$. (B-17)

As we will see later, $f(x)$ may have values larger than unity; however, the area under $f(x)$ is equal to unity. These properties of the CDF and PDF are very useful in checking results of problems. That is, if a CDF or a PDF violates any of these properties, you *know* that an error has been made in the calculations.

Discrete and Continuous Distributions

Example B-2 is an example of a *discrete*, or *point*, *distribution*. That is, the random variable has M discrete values $x_1, x_2, x_3, \dots, x_M$. ($M = 7$ in this example.) Consequently, the CDF increased only in jumps [i.e., $F(a)$ was discontinuous] as a increased, and the PDF consisted of delta functions located at the discrete values of the random variable. In contrast to this example of a discrete distribution, there are continuous distributions, one of which is illustrated in the next example. If a random variable is allowed to take on any value in some interval, it is a *continuously distributed* random variable in that interval.


Example B-3 A CONTINUOUS DISTRIBUTION

Let the random variable denote the voltages that are associated with a collection of a large number of flashlight batteries (1.5-V cells). If the number of batteries in the collection were infinite, the number of different voltage values (events) that we could obtain would be infinite, so that the distributions (PDF and CDF) would be continuous functions. Suppose that, by measurement, the


CDF is evaluated first by using $F(a) = P(x \leq a) = \lim_{n \rightarrow \infty} (n_{x \leq a}/n)$, where n is the number of batteries in the whole collection and $n_{x \leq a}$ is the number of batteries in the collection with voltages less than or equal to a V, where a is a parameter. The CDF that might be obtained is illustrated in Fig. B-5a. The associated PDF is obtained by taking the derivative of the CDF, as shown in Fig. B-5b. Note that $f(x)$ exceeds unity for some values of x , but that the area under $f(x)$ is unity (a PDF property). (You might check to see that the other CDF and PDF properties are also satisfied.)

THEOREM.

$$\begin{aligned} F(b) - F(a) &= P(x \leq b) - P(x \leq a) = P(a < x \leq b) \\ &= \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \left[\int_{b+\varepsilon}^{b+\varepsilon} f(x) dx \right] \end{aligned} \quad (\text{B-18})$$

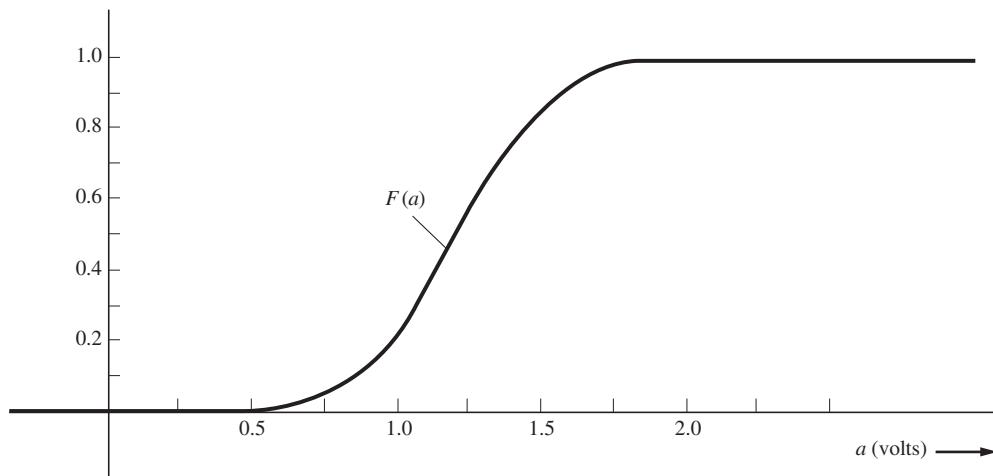

(a) Cumulative Distribution Function

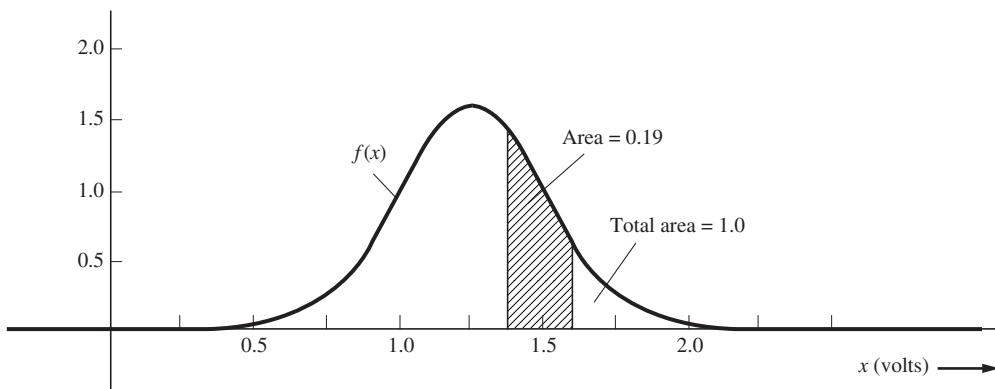

(b) Probability Density Function

Figure B-5 CDF and PDF for a continuous distribution (Example B-3).

Proof.

$$\begin{aligned} F(b) - F(a) &= \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \left[\int_{-\infty}^{b+\varepsilon} f(x) dx - \int_{-\infty}^{a+\varepsilon} f(x) dx \right] \\ &= \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \left[\int_{-\infty}^{a+\varepsilon} f(x) dx + \int_{a+\varepsilon}^{b+\varepsilon} f(x) dx - \int_{-\infty}^{a+\varepsilon} f(x) dx \right] \\ &= \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \left[\int_{a+\varepsilon}^{b+\varepsilon} f(x) dx \right] \end{aligned}$$

Example B-3 (Continued)

Suppose that we wanted to calculate the probability of obtaining a battery having a voltage between 1.4 and 1.6 V. Using this theorem and Fig. B-5, we compute

$$P(1.4 < x \leq 1.6) = \int_{1.4}^{1.6} f(x) dx = F(1.6) - F(1.4) = 0.19$$

We also realize that the probability of obtaining a 1.5-V battery is zero. Why? However, the probability of obtaining a $1.5 \text{ V} \pm 0.1 \text{ V}$ battery is 0.19.

Example B-4 PDF AND CDF FOR A GAUSSIAN RANDOM VARIABLE

Let x be a Gaussian RV with mean m and variance σ^2 . Using MATLAB, find the values for m and σ in order to give the results shown in Fig. B-5. Plot your results and compare with Fig. B-5. Using MATLAB, evaluate $P(1.4 < x \leq 1.6)$. See ExampleB_04.m for the solution.

In communication systems, there are digital signals that may have discrete distributions (one discrete value for each permitted level in a multilevel signal), and there are analog signals and noise that have continuous distributions. There may also be mixed distributions, which contain discrete, as well as continuous, values. For example, these occur when a continuous signal and noise are clipped by an amplifier that is driven into saturation.

THEOREM. If x is discretely distributed, then

$$f(x) = \sum_{i=1}^M P(x_i) \delta(x - x_i) \quad (\text{B-19})$$

where M is the number of discrete events and $P(x_i)$ is the probability of obtaining the discrete event x_i .

This theorem was illustrated by Example B-2, where the PDF of this discrete distribution is plotted in Fig. B-4.


THEOREM. If x is discretely distributed, then[†]

$$F(a) = \sum_{i=1}^L P(x_i) \quad (\text{B-20})$$


[†] Equation (B-20) is identical to $F(a) = \sum_{i=1}^M P(x_i)u(a - x_i)$, where $u(y)$ is a unit step function [defined in Eq. (2-49)].

L is the largest integer such that $x_L \leq a$, $L \leq M$, and M is the number of points in the discrete distribution. Here it is assumed that the discrete points x_i are indexed so that they occur in ascending order of the index. That is, $x_1 < x_2 < x_3 < \dots < x_M$.

This theorem was illustrated in Fig. B-3, which is a plot of Eq. (B-20) for Example B-2. In electrical engineering problems, the CDFs or PDFs of waveforms are relatively easy to obtain by using the relative frequency approach, as described by Eqs. (B-14) and (B-15). For example, the PDFs for triangular and square waves are given in Fig. B-6. These are obtained by sweeping a narrow horizontal window, Δx volts wide, vertically across the waveforms and measuring the relative frequency of occurrence of voltages in the Δx window. The time axis is divided into n intervals, and the waveform appears $n_{\Delta x}$ times in these intervals in the Δx window. A rough idea of the PDF of a waveform can also be obtained by looking at the waveform on an analog oscilloscope. Using no horizontal sweep, the intensity of the presentation as a function of the voltage (y-axis) gives the PDF. (This assumes that the intensity of the image is proportional to the time that the waveform dwells in the window Δy units wide.) The PDF is proportional to the intensity as a function of y (the random variable).

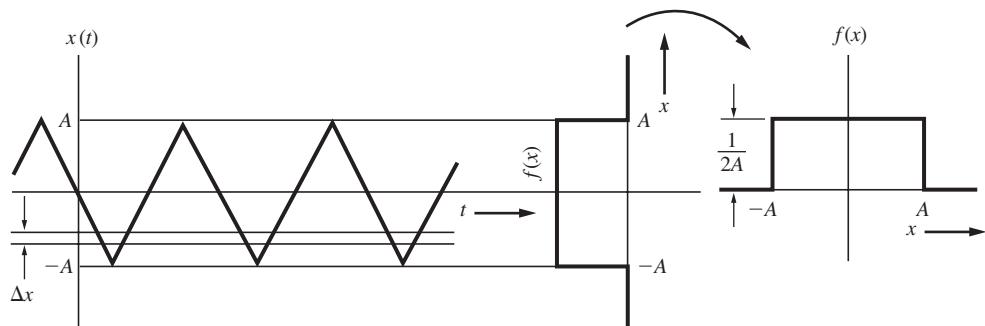

(a) Triangular Waveform and Its Associated PDF

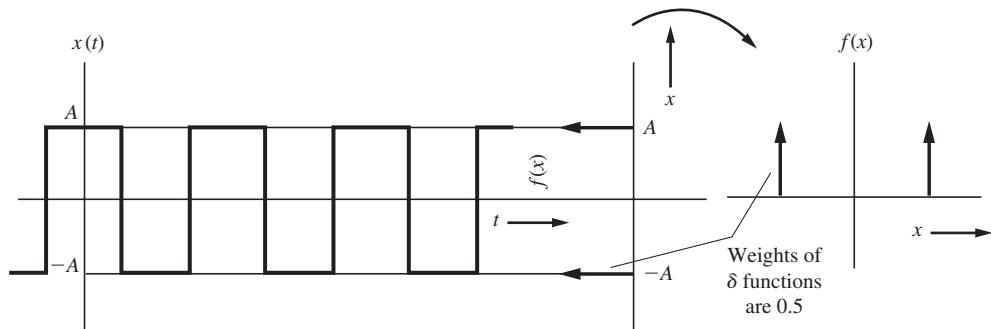

(b) Square Waveform and Its Associated PDF

Figure B-6 PDFs for triangular waves and square waves.

B-6 ENSEMBLE AVERAGE AND MOMENTS

Ensemble Average

One of the primary uses of probability theory is to evaluate the average value of a random variable (which represents some physical phenomenon) or to evaluate the average value of some function of the random variable. In general, let the function of the random variable be denoted by $y = h(x)$.

DEFINITION. The *expected value*, which is also called the *ensemble average*, of $y = h(x)$ is given by

$$\bar{y} = \overline{[h(x)]} \triangleq \int_{-\infty}^{\infty} [h(x)] f(x) dx \quad (\text{B-21})$$

This definition may be used for discrete, as well as continuous, random variables. Note that the operator is linear. The operator is

$$\overline{[\cdot]} = \int_{-\infty}^{\infty} [\cdot] f(x) dx \quad (\text{B-22})$$

Note that other authors may denote the ensemble average of y by $E[y]$ or $\langle y \rangle$. We will use the \bar{y} notation, since it is easier to write and more convenient to use when long equations are being evaluated with a large number of averaging operators.

THEOREM. If x is a *discretely distributed random variable*, the expected value can be evaluated by using

$$\bar{y} = \overline{[h(x)]} = \sum_{i=1}^M h(x_i) P(x_i) \quad (\text{B-23})$$

where M is the number of discrete points in the distribution.

Proof. Using Eqs. (B-19) in (B-21), we get

$$\begin{aligned} \overline{[h(x)]} &= \int_{-\infty}^{\infty} h(x) \left[\sum_{i=1}^M P(x_i) \delta(x - x_i) \right] dx \\ &= \sum_{i=1}^M P(x_i) \int_{-\infty}^{\infty} h(x) \delta(x - x_i) dx \\ &= \sum_{i=1}^M P(x_i) h(x_i) \end{aligned}$$

Example B-5 EVALUATION OF AN AVERAGE

We will now show that Eq. (B-23) and, consequently, the definition of expected value as given by Eq. (B-21) are consistent with the way in which we usually evaluate averages. Suppose that we have a class of $n = 40$ students who take a test. The resulting test scores are 1 paper with a

score of 100, 2 with scores of 95, 4 with 90, 6 with 85, 10 with 80, 10 with 75, 5 with 70, 1 with 65, and 1 paper with a score of 60. Then, the class average is

$$\begin{aligned}\bar{x} &= \frac{100(1) + 95(2) + 90(4) + 85(6) + 80(10) + 75(10) + 70(5) + 65(1) + 60(1)}{40} \\ &= 100\left(\frac{1}{40}\right) + 95\left(\frac{2}{40}\right) + 90\left(\frac{4}{40}\right) + 85\left(\frac{6}{40}\right) + 80\left(\frac{10}{40}\right) + 75\left(\frac{10}{40}\right) \\ &\quad + 70\left(\frac{5}{40}\right) + 65\left(\frac{1}{40}\right) + 60\left(\frac{1}{40}\right) \\ &= \sum_{i=1}^9 x_i P(x_i) = 79.6\end{aligned}\tag{B-24}$$

Moments

Moments are defined as ensemble averages of some specific functions used for $h(x)$. For example, for the r th moment (defined subsequently), let $y = h(x) = (x - x_0)^r$.

DEFINITION. The r th *moment* of the random variable x taken about the point $x = x_0$ is given by

$$\overline{(x - x_0)^r} = \int_{-\infty}^{\infty} (x - x_0)^r f(x) dx\tag{B-25}$$

DEFINITION. The *mean* m is the first moment taken about the origin (i.e., $x_0 = 0$). Thus,

$$m \triangleq \bar{x} = \int_{-\infty}^{\infty} x f(x) dx\tag{B-26}$$

DEFINITION. The *variance* σ^2 is the second moment taken about the mean. Thus,

$$\sigma^2 = \overline{(x - \bar{x})^2} = \int_{-\infty}^{\infty} (x - \bar{x})^2 f(x) dx\tag{B-27}$$

DEFINITION. The *standard deviation* σ is the square root of the variance. Thus,

$$\sigma = \sqrt{\sigma^2} = \sqrt{\int_{-\infty}^{\infty} (x - \bar{x})^2 f(x) dx}\tag{B-28}$$

As an engineer, you may recognize the integrals of Eqs. (B-26) and (B-27) as related to applications in mechanical problems. The mean is equivalent to the center of gravity of a mass that is distributed along a single dimension, where $f(x)$ denotes the mass density as a function of the x -axis. The variance is equivalent to the moment of inertia about the center of gravity.

However, you might ask, "What is the significance of the mean, variance, and other moments in electrical engineering problems?" In Chapter 6, it is shown that if x represents a voltage or current waveform, the mean gives the DC value of the waveform. The second moment ($r = 2$) taken about the origin ($x_0 = 0$), which is $\overline{x^2}$, gives the normalized power. σ^2 gives the normalized power in the corresponding AC coupled waveform. Consequently, $\sqrt{\overline{x^2}}$ is the RMS value of the waveform, and σ is the RMS value of the corresponding ac coupled waveform.

In statistical terms, m gives the *center of gravity* of the PDF, and σ gives us the *spread* of the PDF about this center of gravity. For example, in Fig. B-5 the voltage distribution for a collection of flashlight batteries is given. The mean is $\bar{x} = 1.25$ V, and the standard deviation is $\sigma = 0.25$ V. This figure illustrates a Gaussian distribution that will be studied in detail in Sec. B-7. For this Gaussian distribution, the area under $f(x)$ from $x = 1.0$ to 1.5 V, which corresponds to the interval $\bar{x} \pm \sigma$, is 0.68. Thus, we conclude that 68% of the batteries have voltages within one standard deviation of the mean value (Gaussian distribution).

There are several ways to specify a number that is used to describe the typical, or most common, value of x . The *mean* m is one such measure that gives the center of gravity. Another measure is the *median*, which corresponds to the value $x = a$, where $F(a) = \frac{1}{2}$. A third measure is called the *mode*, which corresponds to the value of x where $f(x)$ is a maximum, assuming that the PDF has only one maximum. For the Gaussian distribution, all these measures give the same number, namely, $x = m$. For other types of distributions, the values obtained for the mean, median, and mode will usually be nearly the same number. The variance is also related to the second moment about the origin and the mean, as described by the following theorem:

THEOREM.

$$\sigma^2 = \overline{x^2} - (\bar{x})^2 \quad (B-29)$$

A proof of this theorem illustrates how the ensemble average operator notation is used.

Proof.

$$\begin{aligned} \sigma^2 &= \overline{(x - \bar{x})^2} \\ &= \overline{[x^2]} - \overline{[2x\bar{x}]} + \overline{[(\bar{x})]^2} \end{aligned} \quad (B-30)$$

Because $\overline{[\cdot]}$ is a linear operator, $\overline{[2x\bar{x}]} = 2\bar{x}\bar{x} = 2(\bar{x})^2$. Moreover, $(\bar{x})^2$ is a constant, and the average value of a constant is the constant itself. That is, for the constant c ,

$$\bar{c} = \int_{-\infty}^{\infty} cf(x) dx = c \int_{-\infty}^{\infty} f(x) dx = c \quad (B-31)$$

So, using Eq. (B-31) in Eq. (B-30), we obtain

$$\sigma^2 = \overline{x^2} - 2(\bar{x})^2 + (\bar{x})^2$$

which is equivalent to Eq. (B-29).

Thus, there are two ways to evaluate the variance: (1) by use of the definition as given by Eq. (B-27) and (2) by use of the theorem that is Eq. (B-29).

B-7 EXAMPLES OF IMPORTANT DISTRIBUTIONS

There are numerous types of distributions. Some of the more important ones used in communication and statistical problems are summarized in Table B-1. Here, the equations for their PDF and CDF, a sketch of the PDF, and the formula for the mean and variance are given. These distributions will be studied in more detail in the paragraphs that follow.

Binomial Distribution

The binomial distribution is useful for describing digital, as well as other statistical problems. Its application is best illustrated by an example.

Assume that we have a binary word n bits long and that the probability of sending a binary 1 is p . Consequently, the probability of sending a binary 0 is $1 - p$. We want to evaluate the probability of obtaining n -bit words that contain k binary 1s. One such word is k binary 1s followed by $n - k$ binary 0s. The probability of obtaining this word is $p^k(1 - p)^{n-k}$. There are also other n -bit words that contain k binary 1s. In fact, the number of different n -bit words containing k binary 1s is

$$\binom{n}{k} = \frac{n!}{(n - k)!k!} \quad (\text{B-32})$$

(This can be demonstrated by taking a numerical example, such as $n = 8$ and $k = 3$.) The symbol $\binom{n}{k}$ is used in algebra to denote the operation described by Eq. (B-32) and is read “the combination of n things taken k at a time.” Thus, the probability of obtaining an n -bit word containing k binary 1s is

$$P(k) = \binom{n}{k} p^k (1 - p)^{n-k} \quad (\text{B-33})$$

If we let the random variable x denote these discrete values, then $x = k$, where k can take on the values $0, 1, 2, \dots, n$, and we obtain the *binomial PDF*






$$f(x) = \sum_{k=0}^n P(k) \delta(x - k) \quad (\text{B-34})$$

where $P(k)$ is given by Eq. (B-33).

The name *binomial* comes from the fact that the $P(k)$ are the individual terms in a binomial expansion. That is, letting $q = 1 - p$, we get

$$(p + q)^n = \sum_{k=0}^n \binom{n}{k} p^k q^{n-k} = \sum_{k=0}^n P(k) \quad (\text{B-35})$$

TABLE B-1 SOME DISTRIBUTIONS AND THEIR PROPERTIES

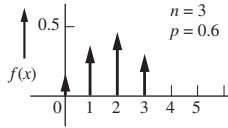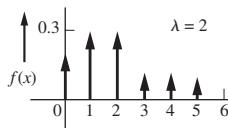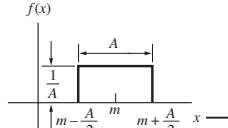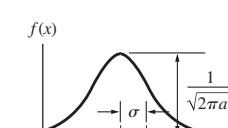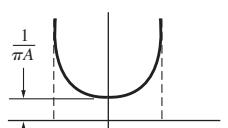		Equation for:				
Name of Distribution	Type	Sketch of PDF	Cumulative Distribution Function (CDF)	Probability Density Function (PDF)	Mean	Variance
Binomial	Discrete		$F(a) = \sum_{\substack{k=0 \\ m \leq a}}^m P(k)$ where $P(k) = \binom{n}{k} p^k (1-p)^{n-k}$	$f(x) = \sum_{k=0}^n P(k) \delta(x - k)$ where $P(k) = \binom{n}{k} p^k (1-p)^{n-k}$	np	$np(1-p)$
Poisson	Discrete		$F(a) = \sum_{\substack{k=0 \\ m \leq a}}^m P(k)$ where $P(k) = \frac{\lambda^k}{k!} e^{-\lambda}$	$f(x) = \sum_{k=0}^{\infty} P(k) \delta(xk)$ where $P(k) = \frac{\lambda^k}{k!} e^{-\lambda}$	λ	λ
Uniform	Continuous		$F(a) = \begin{cases} 0, & a < \left(\frac{2m-A}{2}\right) \\ \frac{1}{A} \left[a - \left(\frac{2m-A}{2}\right) \right], & a-m \leq \frac{A}{2} \\ 1, & a \geq \left(\frac{2m+A}{2}\right) \end{cases}$	$f(x) = \begin{cases} 0, & x < \left(\frac{2m-A}{2}\right) \\ \frac{1}{A}, & x-m \leq \frac{A}{2} \\ 0, & x > \left(\frac{2m+A}{2}\right) \end{cases}$	m	$\frac{A^2}{12}$
Gaussian	Continuous		$F(a) = Q\left(\frac{m-a}{\sigma}\right)$ where $Q(\sigma) \triangleq \frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} e^{-x^2/2} dx$	$f(x) = \frac{1}{\sqrt{2\pi}\sigma} \exp[-(x-m)^2/2\sigma^2]$	m	σ^2
Sinusoidal	Continuous		$F(a) = \begin{cases} 0, & a \leq -A \\ \frac{1}{\pi} \left[\frac{\pi}{2} + \sin^{-1}\left(\frac{a}{A}\right) \right], & a \leq A \\ 1, & a \geq A \end{cases}$	$f(x) = \begin{cases} 0, & x < -A \\ \frac{1}{\pi\sqrt{A^2-x^2}}, & x \leq A \\ 0, & x > A \end{cases}$	0	$\frac{A^2}{2}$

The combinations $\binom{n}{k}$ which are also the binomial coefficients, can be evaluated by using Pascal's triangle:

$n = 0$	1					
$n = 1$	1 1					
$n = 2$	1 2 1					
$n = 3$	1 3 3 1					
$n = 4$	1 4 6 4 1					
$n = 5$	1	5	10	10	5	1
\vdots				\vdots		

For a particular value of n , the combinations $\binom{n}{k}$ for $k = 0, 1, \dots, n$, are the elements in the n th row. For example, for $n = 3$,

$$\binom{3}{0} = 1, \quad \binom{3}{1} = 3, \quad \binom{3}{2} = 3, \quad \text{and} \quad \binom{3}{3} = 1$$

The mean value of the binomial distribution is evaluated by the use of Eq. (B-23):

$$m = \bar{x} = \sum_{k=0}^n x_k P(x_k) = \sum_{k=0}^n k P(k)$$

or

$$m = \sum_{k=1}^n k \binom{n}{k} p^k q^{n-k} \quad (\text{B-36})$$

Using the identity

$$\begin{aligned} k \binom{n}{k} &= \frac{kn!}{(n-k)!k!} = \frac{n(n-1)!}{(n-k)!(k-1)!} \\ &= n \left[\frac{(n-1)!}{((n-1)(k-1))!(k-1)!} \right] \end{aligned}$$

or

$$k \binom{n}{k} = n \binom{n-1}{k-1} \quad (\text{B-37})$$

we have

$$m = \sum_{k=1}^n n \binom{n-1}{k-1} p^k q^{n-k} \quad (\text{B-38})$$

Making a change in the index, let $j = k - 1$. Thus,

$$\begin{aligned} m &= \sum_{j=0}^{n-1} n \binom{n-1}{j} p^{j+1} q^{n-(j+1)} \\ &= np \left[\sum_{j=0}^{n-1} \binom{n-1}{j} p^j q^{(n-1)-j} \right] = np [(p+q)^{n-1}] \end{aligned} \quad (\text{B-39})$$

Recalling that p and q are probabilities and $p + q = 1$, we see that $(p + q)^{n-1} = 1$. Thus, Eq. (B-39) reduces to

$$m = np \quad (\text{B-40})$$

Similarly, it can be shown that the variance is $np(1-p)$ by using $\sigma^2 = \bar{x}^2 - (\bar{x})^2$.

Poisson Distribution

The Poisson distribution (Table B-1) is obtained as a limiting approximation of a binomial distribution when n is very large and p is very small, but the product $np = \lambda$ is some reasonable size [Thomas, 1969].

Uniform Distribution

The uniform distribution is

$$f(x) = \begin{cases} 0, & x < \left(\frac{2m - A}{2}\right) \\ \frac{1}{A}, & |x - m| \leq \frac{A}{2} \\ 0, & x > \left(\frac{2m + A}{2}\right) \end{cases} \quad (\text{B-41})$$

where A is the peak-to-peak value of the random variable. This is illustrated by the sketch shown in Table B-1. The mean of this distribution is

$$\int_{-\infty}^{\infty} x f(x) dx = \int_{m-(A/2)}^{m+(A/2)} x \frac{1}{A} dx = m \quad (\text{B-42})$$

and the variance is

$$\sigma^2 = \int_{m-(A/2)}^{m+(A/2)} (x - m)^2 \frac{1}{A} dx \quad (\text{B-43})$$

Making a change in variable, let $y = x - m$:

$$\sigma^2 = \frac{1}{A} \int_{-A/2}^{A/2} y^2 dy = \frac{A^2}{12} \quad (\text{B-44})$$

The uniform distribution is useful in describing quantizing noise that is created when an analog signal is converted into a PCM signal, as discussed in Chapter 3. In Chapter 6, it is shown that it also describes the noise out of a phase detector when the input is Gaussian noise (as described subsequently).

Gaussian Distribution

The Gaussian distribution, which is also called the *normal distribution*, is one of the most important distributions, if not the most important. As discussed in Chapter 5, thermal noise has a Gaussian distribution. Numerous other phenomena can also be described by Gaussian

statistics, and many theorems have been developed by statisticians that are based on Gaussian assumptions. It cannot be overemphasized that the Gaussian distribution is very important in analyzing both communication problems and problems in statistics. It can also be shown that the Gaussian distribution can be obtained as the limiting form of the binomial distribution when n becomes large, while holding the mean $m = np$ finite, and letting the variance $\sigma^2 = np(1 - p)$ be much larger than unity [Feller, 1957; Papoulis, 1984].

DEFINITION. The Gaussian distribution is

$$f(x) = \frac{1}{\sqrt{2\pi}\sigma} e^{-(x-m)^2/(2\sigma^2)} \quad (\text{B-45})$$

where m is the mean and σ^2 is the variance.

A sketch of Eq. (B-45) is given in Fig. B-5, together with the CDF for the Gaussian random variable. The Gaussian PDF is symmetrical about $x = m$, with the area under the PDF being $\frac{1}{2}$ for $(-\infty \leq x \leq m)$ and $\frac{1}{2}$ for $(m \leq x \leq \infty)$. The peak value of the PDF is $1/(\sqrt{2\pi}\sigma)$, so that as $\sigma \rightarrow 0$, the Gaussian PDF goes into a δ function located at $x = m$ (since the area under the PDF is always unity).

We will now show that Eq. (B-45) is properly normalized, (i.e., that the area under $f(x)$ is unity). This can be accomplished by letting I represent the integral of the PDF:

$$I \triangleq \int_{-\infty}^{\infty} f(x) dx = \int_{-\infty}^{\infty} \frac{1}{\sqrt{2\pi}\sigma} e^{-(x-m)^2/(2\sigma^2)} dx \quad (\text{B-46})$$

Making a change in variable, we let $y = (x - m)/\sigma$. Then,

$$I = \frac{1}{\sqrt{2\pi}\sigma} \int_{-\infty}^{\infty} e^{-y^2/2} (\sigma dy) = \frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} e^{-y^2/2} dy \quad (\text{B-47})$$

The integral I can be shown to be unity by showing that I^2 is unity:

$$\begin{aligned} I^2 &= \left[\frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} e^{-x^2/2} dx \right] \left[\frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} e^{-y^2/2} dy \right] \\ &= \frac{1}{2\pi} \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} e^{-(x^2+y^2)/2} dx dy \end{aligned} \quad (\text{B-48})$$

Make a change in the variables to polar coordinates from Cartesian coordinates. Let $r^2 = x^2 + y^2$, and let $\theta = \tan^{-1}(y/x)$; then,

$$I^2 = \frac{1}{2\pi} \int_0^{2\pi} \left[\int_0^{\infty} e^{-r^2/2} r dr \right] d\theta = \frac{1}{2\pi} \int_0^{2\pi} d\theta = 1 \quad (\text{B-49})$$

Thus, $I^2 = 1$, and, consequently, $I = 1$.

Up to now, we have *assumed* that the parameters m and σ^2 of Eq. (B-45) were the mean and the variance of the distribution. We need to *show* that indeed they are! This may be accomplished by writing the Gaussian form in terms of some arbitrary parameters α and β :

$$f(x) = \frac{1}{\sqrt{2\pi}\beta} e^{-(x-\alpha)^2/(2\beta^2)} \quad (\text{B-50})$$

This function is still properly normalized, as demonstrated by Eq. (B-49). First, we need to show that the parameter α is the mean:

$$m = \int_{-\infty}^{\infty} x f(x) dx = \frac{1}{\sqrt{2\pi} \beta} \int_{-\infty}^{\infty} x e^{-(x-\alpha)^2/(2\beta^2)} dx \quad (\text{B-51})$$

Making a change in variable, we let $y = (x - \alpha)/\beta$; then,

$$m = \frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} (\beta y + \alpha) e^{-y^2/2} dy$$

or

$$m = \frac{\beta}{\sqrt{2\pi}} \int_{-\infty}^{\infty} (ye^{-y^2/2}) dy + \alpha \left(\int_{-\infty}^{\infty} \frac{1}{\sqrt{2\pi}} e^{-y^2/2} dy \right) \quad (\text{B-52})$$

The first integral on the right of Eq. (B-52) is zero, because the integrand is an odd function and the integral is evaluated over symmetrical limits. The second integral on the right is the integral of a properly normalized Gaussian PDF, so the integral has a value of unity. Thus, Eq. (B-52) becomes

$$m = \alpha \quad (\text{B-53})$$

and we have shown that the parameter α is the mean value.

The variance is

$$\begin{aligned} \sigma^2 &= \int_{-\infty}^{\infty} (x - m)^2 f(x) dx \\ &= \frac{1}{\sqrt{2\pi} \beta} \int_{-\infty}^{\infty} (x - m)^2 e^{-(x-m)^2/(2\beta^2)} dx \end{aligned} \quad (\text{B-54})$$

Similarly, we need to show that $\sigma^2 = \beta^2$. This will be left as a homework exercise.

Example B-6 PLOTTING THE PDF FOR A GAUSSIAN RANDOM VARIABLE

Write a MATLAB program that will ask for values for m and σ and then plot the corresponding Gaussian PDF. See ExampleB_06.m for the solution.

The next question to answer is, “What is the CDF for the Gaussian distribution?”

THEOREM. *The cumulative distribution function (CDF) for the Gaussian distribution is*

$$F(a) = Q\left(\frac{m-a}{\sigma}\right) = \frac{1}{2} \operatorname{erfc}\left(\frac{m-a}{\sqrt{2}\sigma}\right) \quad (\text{B-55})$$

where the Q function is defined by

$$Q(z) \triangleq \frac{1}{\sqrt{2\pi}} \int_z^{\infty} e^{-\lambda^2/2} d\lambda \quad (\text{B-56})$$

and the complementary error function (erfc) is defined as

$$\operatorname{erfc}(z) \triangleq \frac{2}{\sqrt{\pi}} \int_z^{\infty} e^{-\lambda^2} d\lambda \quad (\text{B-57})$$

It can also be shown that

$$\operatorname{erfc}(z) = 1 - \operatorname{erf}(z) \quad (\text{B-58})$$

where the error function is defined as

$$\operatorname{erf}(z) \triangleq \frac{2}{\sqrt{\pi}} \int_0^z e^{-\lambda^2} d\lambda \quad (\text{B-59})$$

The Q function and the complementary error function, as used in Eq. (B-55), give the same curve for $F(a)$. Because neither of the corresponding integrals, given by Eqs. (B-56) and (B-57), can be evaluated in closed form, math tables (see Sec. A-10, Appendix A), numerical integration techniques, or closed-form approximations must be used to evaluate them. The equivalence between the two functions is

$$Q(z) = \frac{1}{2} \operatorname{erfc}\left(\frac{z}{\sqrt{2}}\right) \quad (\text{B-60})$$

Communication engineers often prefer to use the Q function instead of the erfc function, since solutions to problems written in terms of the Q function do not require the writing of the $\frac{1}{2}$ and $1/\sqrt{2}$ factors. Conversely, the advantage of using the $\operatorname{erf}(z)$ or $\operatorname{erfc}(z)$ functions is that they are one of the standard functions in MATLAB and these functions are also available on some hand calculators. However, textbooks in probability and statistics usually give a tabulation of the normalized CDF. This is a tabulation of $F(a)$ for the case of $m = 0$ and $\sigma = 1$, and it is equivalent to $Q(-a)$ and $\frac{1}{2} \operatorname{erfc}(-a/\sqrt{2})$. Since $Q(z)$ and $\frac{1}{2} \operatorname{erfc}(z/\sqrt{2})$ are equivalent, which one is used is a matter of personal preference. We use the Q -function notation in this book.

Proof. Proof of a theorem for the Gaussian CDF

$$F(a) = \int_{-\infty}^a f(x) dx = \frac{1}{\sqrt{2\pi} \sigma} \int_{-\infty}^a e^{-(x-m)^2/(2\sigma^2)} dx \quad (\text{B-61})$$

Making a change in variable, let $y = (m - x)/\sigma$:

$$F(a) = \frac{1}{\sqrt{2\pi} \sigma} \int_{(m-a)/\sigma}^{\infty} e^{-y^2/2} (-\sigma dy) \quad (\text{B-62})$$

or

$$F(a) = \frac{1}{\sqrt{2\pi}} \int_{(m-a)/\sigma}^{\infty} e^{-y^2/2} dy = Q\left(\frac{m-a}{\sigma}\right) \quad (\text{B-63})$$

Similarly, $F(a)$ may be expressed in terms of the complementary error function.

Example B-7 PLOTTING THE CDF FOR A GAUSSIAN RANDOM VARIABLE

Write a MATLAB program that will ask for values for m and σ and then plot the corresponding Gaussian CDF. See ExampleB_07.m for the solution.

As mentioned earlier, it is unfortunate that the integrals for $Q(z)$ or $\text{erfc}(z)$ cannot be evaluated in closed form. However, for large values of z , very good closed-form approximations can be obtained, and for small values of z , numerical integration techniques can be applied easily. A plot of $Q(z)$ is shown in Fig. B-7 for $z \geq 0$, and a tabulation of $Q(z)$ is given in Sec. A-10.

A relatively simple closed-form upper bound for $Q(z)$, $z > 0$, is

$$Q(z) < \frac{1}{\sqrt{2\pi} z} e^{-z^2/2}, \quad z > 0 \quad (\text{B-64})$$

This is also shown in Fig. B-7. It is obtained by evaluating the $Q(z)$ integral by parts:

$$Q(z) = \int_z^\infty \frac{1}{\sqrt{2\pi}} e^{-\lambda^2/2} d\lambda = \int_z^\infty u dv = uv \Big|_z^\infty - \int_z^\infty v du$$

where $u = 1/(\sqrt{2\pi}\lambda)$ and $dv = \lambda e^{-\lambda^2/2} d\lambda$. Thus,

$$Q(z) = \left(\frac{1}{\sqrt{2\pi}\lambda} \right) \left(-e^{-\lambda^2/2} \right) \Big|_z^\infty - \int_z^\infty \left(-e^{-\lambda^2/2} \right) \left(-\frac{1}{\sqrt{2\pi}\lambda^2} d\lambda \right)$$

Dropping the integral, which is a positive quantity, we obtain the upper bound on $Q(z)$, as given by Eq. (B-64). If needed, a lower bound may also be obtained [Wozencraft and Jacobs, 1965]. A rational function approximation for $Q(z)$ is given in Sec. (A-10), and a closed-form approximation has an error of less than 0.27%.

For values of $z \geq 3$, this upper bound has an error of less than 10% when compared with the actual value for $Q(z)$. That is, $Q(3) = 1.35 \times 10^{-3}$ and the upper bound has a value of 1.48×10^{-3} for $z = 3$. This is an error of 9.4%. For $z = 4$, the error is 5.6%, and for $z = 5$, the error is 3.6%. In evaluating the probability of error for digital systems, as discussed in Chapters 6, 7, and 8, the result is often found to be a Q function. Since most useful digital systems have a probability of error of 10^{-3} or less, this upper bound becomes very useful for evaluating $Q(z)$. At any rate, if the upper bound approximation is used, we know that the value obtained indicates slightly poorer performance than is theoretically possible. In this sense, this approximation will give a worst-case result.

For the case of z negative, $Q(z)$ can be evaluated by using the identity

$$Q(-z) = 1 - Q(z) \quad (\text{B-65})$$

where the Q value for positive z is used (as obtained from Fig. B-7) to compute the Q of the negative value of z .

Example B-8 APPROXIMATION FOR $Q(z)$

Write a MATLAB program to evaluate and plot $Q(z)$ and the upper-bound approximation for $Q(z)$. See ExampleB_07.m for the solution. Compare these results with Fig. B-7.

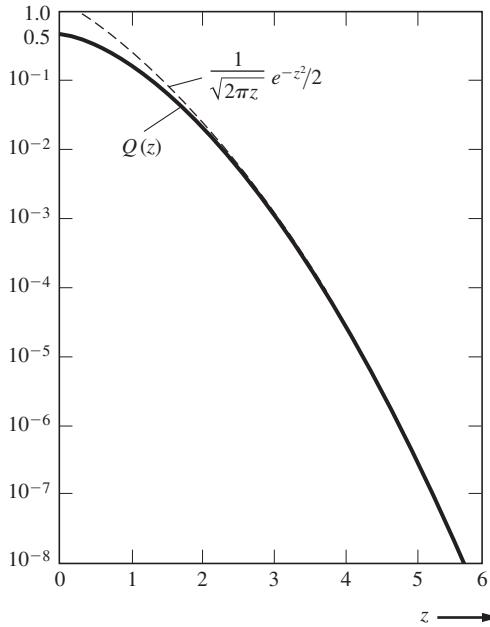


Figure B-7 The function $Q(z)$ and an overbound, $\frac{1}{\sqrt{2\pi} z} e^{-z^2/2}$.

Sinusoidal Distribution

THEOREM. If $x = A \sin \psi$, where ψ has the uniform distribution,

$$f_{\psi}(\psi) = \begin{cases} \frac{1}{2\pi}, & |\psi| \leq \pi \\ 0, & \text{elsewhere} \end{cases} \quad (\text{B-66})$$

then the PDF for the sinusoid is given by

$$f_x(x) = \begin{cases} 0, & x < -A \\ \frac{1}{\pi\sqrt{A^2 - x^2}}, & |x| \leq A \\ 0, & x > A \end{cases} \quad (\text{B-67})$$

A proof of this theorem will be given in Sec. B-8.

A sketch of the PDF for a sinusoid is given in Table B-1, along with equations for the CDF and the variance. Note that the standard deviation, which is equivalent to the RMS value as discussed in Chapter 6, is $\sigma = A/\sqrt{2}$. This should *not* be a surprising result.

The sinusoidal distribution can be used to model observed phenomena. For example, x might represent an oscillator voltage where $\psi = \omega_0 t + \theta_0$. Here the frequency of oscillation is f_0 , and ω_0 and t are assumed to be deterministic values. θ_0 represents the random startup phase of the oscillator. (When the power of an unsynchronized oscillator is turned on,

the oscillation builds up from a noise voltage that is present in the circuit.) In another oscillator model, time might be considered to be a uniformly distributed random variable, where $\psi = \omega_0 t$. Here, once again, we would have a sinusoidal distribution for x .

B-8 FUNCTIONAL TRANSFORMATIONS OF RANDOM VARIABLES

As illustrated by the preceding sinusoidal distribution, we often need to evaluate the PDF for a random variable that is a function of another random variable for which the distribution is known. This is illustrated pictorially in Fig. B-8. Here the input random variable is denoted by x , and the output random variable is denoted by y . Because several PDFs are involved, subscripts (such as x in f_x) will be used to indicate with which random variable the PDF is associated. The arguments of the PDFs may change, depending on what substitutions are made, as equations are reduced.

THEOREM. *If $y = h(x)$, where $h(\cdot)$ is the output-to-input (transfer) characteristic of a device without memory,[†] then the PDF of the output is*

$$f_y(y) = \sum_{i=1}^M \frac{f_x(x)}{|dy/dx|} \Big|_{x=x_i=h_i^{-1}(y)} \quad (\text{B-68})$$

where $f_x(x)$ is the PDF of the input, x . M is the number of real roots of $y = h(x)$. That is, the inverse of $y = h(x)$ gives x_1, x_2, \dots, x_M for a single value of y . $|\cdot|$ denotes the absolute value and the single vertical line denotes the evaluation of the quantity at $x = x_i = h_i^{-1}(y)$.

Two examples will now be worked out to demonstrate the application of this theorem, and then the proof will be given.

Example B-9 SINUSOIDAL DISTRIBUTION

Let

$$y = h(x) = A \sin x \quad (\text{B-69})$$

where x is uniformly distributed over $-\pi$ to π , as given by Eq. (B-66). This is illustrated in Fig. B-9. For a given value of y , say $-A < y_0 < A$, there are two possible inverse values for x ,

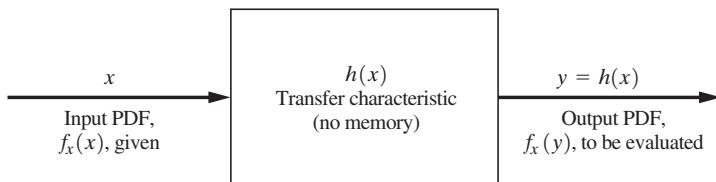


Figure B-8 Functional transformation of random variables.

[†] The output-to-input characteristic $h(x)$ should not be confused with the impulse response of a linear network, which was denoted by $h(t)$.

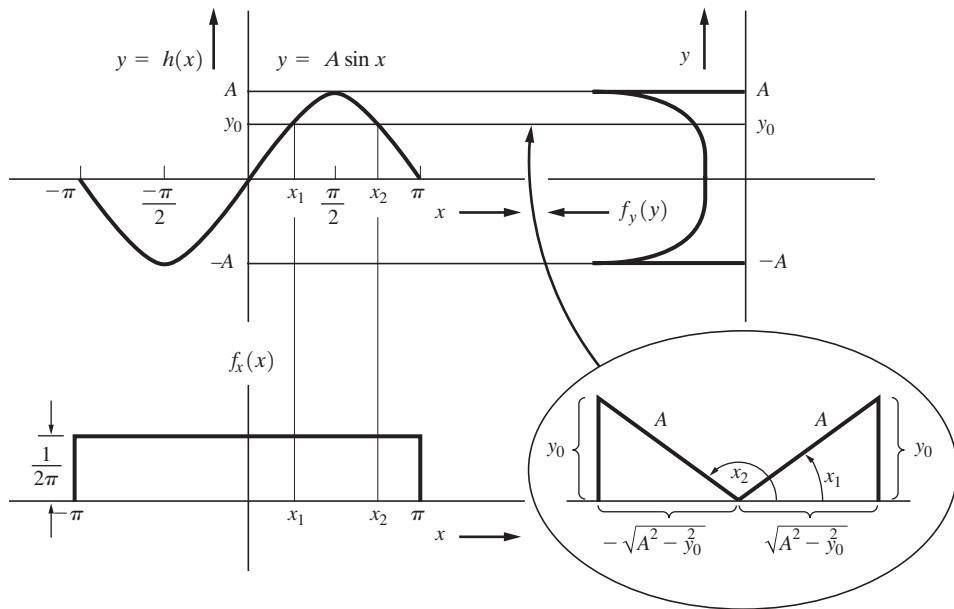


Figure B-9 Evaluation of the PDF of a sinusoid (Ex. B-5).

namely, x_1 and x_2 , as shown in the figure. Thus, $M = 2$, provided that $|y| < A$. Otherwise, $M = 0$. Evaluating the derivative of Eq. (B-69), we obtain

$$\frac{dy}{dx} = A \cos x$$

and for $0 \leq y \leq A$, we get

$$x_1 = \text{Sin}^{-1}\left(\frac{y}{A}\right)$$

and

$$x_2 = \pi - x_1$$

where the uppercase S in $\text{Sin}^{-1}(\cdot)$ denotes the principal angle. A similar result is obtained for $-A \leq y \leq 0$. Using Eq. (B-68), we find that the PDF for y is

$$f_y(y) = \begin{cases} \frac{f_x(x_1)}{|A \cos x_1|} + \frac{f_x(x_2)}{|-A \cos x_2|}, & |y| \leq A \\ 0, & y \text{ elsewhere} \end{cases} \quad (\text{B-70})$$

The denominators of these two terms are evaluated with the aid of the triangles shown in the insert of Fig. B-9. By using this result and substituting the uniform PDF for $f_x(x)$, (B-70) becomes

$$f_y(y) = \begin{cases} \frac{1/2\pi}{|\sqrt{A^2 - y^2}|} + \frac{1/2\pi}{|-\sqrt{A^2 - y^2}|}, & |y| \leq A \\ 0, & y \text{ elsewhere} \end{cases}$$

or

$$f_y(y) = \begin{cases} 0, & y < -A \\ \frac{1}{\pi\sqrt{A^2 - y^2}}, & |y| \leq A \\ 0, & y > A \end{cases} \quad (\text{B-71})$$

which is the PDF for a sinusoid as given first by Eq. (B-67). This result is intuitively obvious, since we realize that a sinusoidal waveform spends most of its time near its peak values and passes through zero relatively rapidly. Thus, the PDF should peak up at $+A$ and $-A$ V. See Example B-09.m for a plot of Eq. (B-71).

Example B-10 PDF FOR THE OUTPUT OF A DIODE CHARACTERISTIC

Assume that a diode current-voltage characteristic is modeled by the ideal characteristic shown in Fig. B-10, where y is the current through the diode and x is the voltage across the diode. This type of characteristic is also called *half-wave linear rectification*.

$$y = \begin{cases} Bx, & x > 0 \\ 0, & x \leq 0 \end{cases} \quad (\text{B-72})$$

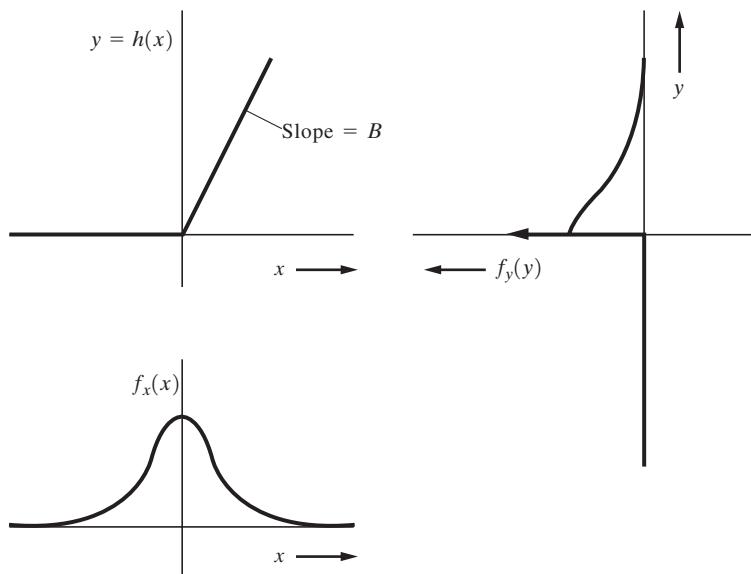


Figure B-10 Evaluation of the PDF out of a diode characteristic for Ex. B-10.

where $B > 0$. For $y > 0$, $M = 1$; and for $y < 0$, $M = 0$. However, if $y = 0$, there are an infinite number of roots for x (i.e., all $x \leq 0$). Consequently, there will be a discrete point at $y = 0$ if the area under $f_x(x)$ is nonzero for $x \leq 0$ (i.e., for the values of x that are mapped into $y = 0$). Using Eq. (B-68), we get

$$f_y(y) = \begin{cases} \frac{f_x(y/B)}{B} & y > 0 \\ 0, & y \leq 0 \end{cases} + P(y = 0) \delta(y) \quad (\text{B-73})$$

where

$$P(y = 0) = P(x \leq 0) = \int_{-\infty}^0 f_x(x) dx = F_x(0) \quad (\text{B-74})$$

Suppose that x has a Gaussian distribution with zero mean; then these equations reduce to

$$f_y(y) = \begin{cases} \frac{1}{\sqrt{2\pi}B\sigma} e^{-y^2/(2B^2\sigma^2)}, & y > 0 \\ 0, & y \leq 0 \end{cases} + \frac{1}{2} \delta(y) \quad (\text{B-75})$$

A sketch of this result is shown in Fig. B-10. For $B = 1$, note that the output is the same as the input for x positive (i.e., $y = x > 0$), so that the PDF of the output is the same as the PDF of the input for $y > 0$. For $x < 0$, the values of x are mapped into the point $y = 0$, so that the PDF of y contains a δ function of weight $\frac{1}{2}$ at the point $y = 0$.

Proof. We will demonstrate that Eq. (B-68) is valid by partitioning the x -axis into intervals over which $h(x)$ is monotonically increasing, monotonically decreasing, or a constant. As we have seen in Ex. B-10, when $h(x)$ is a constant over some interval of x , a discrete point at y equal to that constant is possible. In addition, discrete points in the distribution of x will be mapped into discrete points in y , even in regions where $h(x)$ is not a constant.

Now we will demonstrate that the theorem, as described by Eq. (B-68), is correct by taking the case, for example, where $y = h(x)$ is monotonically decreasing for $x < x_0$ and monotonically increasing for $x > x_0$. This is illustrated in Fig. B-11. The CDF for y is then

$$\begin{aligned} F_y(y_0) &= P(y \leq y_0) = P(x_1 \leq x \leq x_2) \\ &= P[(x = x_1) + (x_1 < x \leq x_2)] \end{aligned} \quad (\text{B-76})$$

where the $+$ sign denotes the union operation. Then, using Eq. (B-4), we get

$$F_y(y_0) = P(x_1) + P(x_1 < x \leq x_2)$$

or

$$F_y(y_0) = P(x_1) + F_x(x_2) - F_x(x_1) \quad (\text{B-77})$$

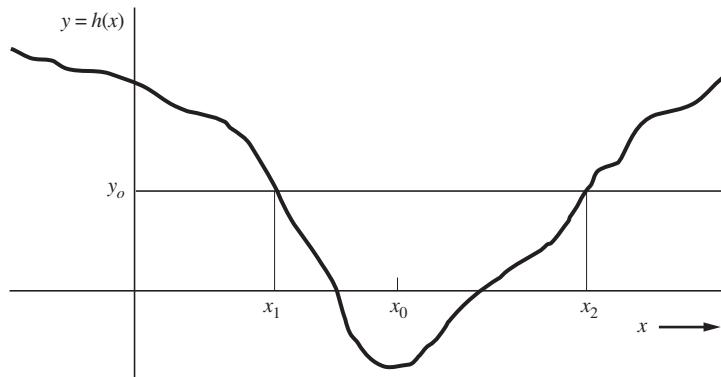


Figure B-11 Example of a function $h(x)$ that monotonically decreases for $x < x_0$ and monotonically increases for $x > x_0$.

The PDF of y is obtained by taking the derivative of both sides of this equation:

$$\frac{dF_y(y_0)}{dy_0} = \frac{dF_x(x_2) dx_2}{dx_2 dy_0} - \frac{dF_x(x_1) dx_1}{dx_1 dy_0} \quad (\text{B-78})$$

where $dP(x_1)/dy_0 = 0$ since $P(x_1)$ is a constant. Because

$$dF_x(x_2)/dx_2 = f_x(x_2) \quad \text{and} \quad dF_x(x_1)/dx_1 = f_x(x_1)$$

Eq. (B-78) becomes

$$f_y(y_0) = \frac{f_x(x_2)}{dy_0/dx_2} + \frac{f_x(x_1)}{-dy_0/dx_1} \quad (\text{B-79})$$

At the point $x = x_1$, the slope of y is negative, because the function is monotonically decreasing for $x < x_0$; thus, $dy_0/dx_1 < 0$, and Eq. (B-79) becomes

$$f_y(y_0) = \sum_{i=1}^{M=2} \frac{f_x(x)}{|dy_0/dx|} \Big|_{x=x_i=h_i^{-1}(y_0)} \quad (\text{B-80})$$

When there are more than two intervals during which $h(x)$ is monotonically increasing or decreasing, this procedure may be extended so that Eq. (B-68) is obtained.

In concluding this discussion on the functional transformation of a random variable, it should be emphasized that the description of the mapping function $y = h(x)$ assumes that the output y , at any instant, depends on the value of the input x only at that same instant and not on previous (or future) values of x . Thus, this technique is applicable to devices that contain no memory (i.e., no inductance or capacitance) elements; however, the device may be nonlinear, as we have seen in the preceding examples.

B-9 MULTIVARIATE STATISTICS

In Sec. B-3, the probabilities of simple events, joint probabilities, and conditional probabilities were defined. In Secs. B-4 and B-5, using the probability of simple events, we developed the concepts of PDFs and CDFs. The PDFs and CDFs involved only one random variable, so these are one-dimensional problems. Similarly, the moments involved only one-dimensional integration.

In this section, multiple-dimensional problems, also called *multivariate statistics*, will be developed. These involve PDFs and CDFs that are associated with probabilities of intersecting events and with conditional probabilities. In addition, multiple-dimensional moments will be obtained as an extension of the one-dimensional moments that were studied in Sec. B-6. *If the reader clearly understands the one-dimensional case* (developed in the preceding sections), *there will be little difficulty in generalizing those results to the N-dimensional case*.

Multivariate CDFs and PDFs

DEFINITION. The *N-dimensional CDF* is

$$\begin{aligned} F(a_1, a_2, \dots, a_N) &= P[(x_1 \leq a_1)(x_2 \leq a_2) \cdots (x_N \leq a_N)] \\ &= \lim_{n \rightarrow \infty} \left[\frac{n_{(x_1 \leq a_1)(x_2 \leq a_2) \cdots (x_N \leq a_N)}}{n} \right] \end{aligned} \quad (\text{B-81})$$

where the notation $(x_1 \leq a_1)(x_2 \leq a_2) \cdots (x_N \leq a_N)$ is the intersection event consisting of the intersection of the events associated with $x_1 \leq a_1$, $x_2 \leq a_2$, etc.

DEFINITION. The *N-dimensional PDF* is

$$f(x_1, x_2, \dots, x_N) = \left. \frac{\partial^N F(a_1, a_2, \dots, a_N)}{\partial a_1 \partial a_2 \cdots \partial a_N} \right|_{\mathbf{a}=\mathbf{x}} \quad (\text{B-82})$$

where \mathbf{a} and \mathbf{x} are the row vectors, $\mathbf{a} = (a_1, a_2, \dots, a_N)$, and $\mathbf{x} = f(x_1, x_2, \dots, x_N)$.

DEFINITION. The expected value of $y = h(\mathbf{x})$ is

$$\begin{aligned} \overline{y} &= \overline{h(x_1, x_2, \dots, x_N)} \\ &= \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} \cdots \int_{-\infty}^{\infty} h(x_1, x_2, \dots, x_N) \\ &\quad \times f(x_1, x_2, \dots, x_N) dx_1 dx_2 \cdots dx_N \end{aligned} \quad (\text{B-83})$$

Some properties of *N*-dimensional random variables are

$$1. \quad f(x_1, x_2, \dots, x_N) \geq 0 \quad (\text{B-84a})$$

$$2. \quad \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} \cdots \int_{-\infty}^{\infty} f(x_1, x_2, \dots, x_N) dx_1 dx_2 \cdots dx_N = 1 \quad (\text{B-84b})$$

3. $F(a_1, a_2, \dots, a_N)$

$$= \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \int_{-\infty}^{a_1 + \varepsilon} \int_{-\infty}^{a_2 + \varepsilon} \cdots \int_{-\infty}^{a_N + \varepsilon} f(x_1, x_2, \dots, x_N) dx_1 dx_2 \dots dx_N \quad (\text{B-84c})$$

4. $F(a_1, a_2, \dots, a_N) \equiv 0$ if *any* $a_i = -\infty$, $i = 1, 2, \dots, N$ (B-84d)

5. $F(a_1, a_2, \dots, a_N) = 1$ when *all* $a_i = +\infty$, $i = 1, 2, \dots, N$ (B-84e)

6. $P[(a_1 < x_1 \leq b_1)(a_2 < x_2 \leq b_2) \cdots (a_N < x_N \leq b_N)]$

$$= \lim_{\substack{\varepsilon \rightarrow 0 \\ \varepsilon > 0}} \int_{a_1 + \varepsilon}^{b_1 + \varepsilon} \int_{a_2 + \varepsilon}^{b_2 + \varepsilon} \cdots \int_{a_N + \varepsilon}^{b_N + \varepsilon} f(x_1, x_2, \dots, x_N) dx_1 dx_2 \dots dx_N \quad (\text{B-84f})$$

The definitions and properties for multivariate PDFs and CDFs are based on the concepts of joint probabilities, as discussed in Sec. B-3. In a similar way, conditional PDFs and CDFs can be obtained [Papoulis, 1984]. Using the property $P(AB) = P(A) P(B|A)$ from Eq. (B-8), we find that the joint PDF of x_1 and x_2 is

$$f(x_1, x_2) = f(x_1)f(x_2|x_1) \quad (\text{B-85})$$

where $f(x_2|x_1)$ is the conditional PDF of x_2 given x_1 . Generalizing further, we obtain

$$f(x_1, x_2, x_3) = f(x_1|x_3)f(x_2|x_1, x_3) \quad (\text{B-86})$$

Many other expressions for relationships between multiple-dimensional PDFs should also be apparent. When x_1 and x_2 are *independent*, $f(x_2|x_1) = f_{x_2}(x_2)$ and

$$f_x(x_1, x_2) = f_{x_1}(x_1)f_{x_2}(x_2) \quad (\text{B-87})$$

where the subscript x_1 denotes the PDF associated with x_1 , and the subscript x_2 denotes the PDF associated with x_2 . For N independent random variables, this becomes

$$f_x(x_1, x_2, \dots, x_N) = f_{x_1}(x_1)f_{x_2}(x_2) \dots f_{x_N}(x_N) \quad (\text{B-88})$$

THEOREM. *If the N th-dimensional PDF of x is known, then the L th-dimensional PDF of x can be obtained when $L < N$ by*

$$\begin{aligned} & f(x_1, x_2, \dots, x_L) \\ &= \underbrace{\int_{-\infty}^{\infty} \int_{-\infty}^{\infty} \cdots \int_{-\infty}^{\infty}}_{N-L \text{ integrals}} f(x_1, x_2, \dots, x_N) dx_{L+1} dx_{L+2} \dots dx_N \quad (\text{B-89}) \end{aligned}$$

This L th-dimensional PDF, where $L < N$, is sometimes called the **marginal PDF**, since it is obtained from a higher dimensional (N th) PDF.

Proof. First, show that this result is correct if $N = 2$ and $L = 1$:

$$\begin{aligned} \int_{-\infty}^{\infty} f(x_1, x_2) dx_2 &= \int_{-\infty}^{\infty} f(x_1) f(x_2|x_1) dx_2 \\ &= f(x_1) \int_{-\infty}^{\infty} f(x_2|x_1) dx_2 = f(x_1) \end{aligned} \quad (\text{B-90})$$

since the area under $f(x_2|x_1)$ is unity. This procedure is readily extended to prove the L -th-dimensional case of Eq. (B-89).

Bivariate Statistics

Bivariate (or joint) distributions are the $N = 2$ -dimensional case. In this section, the definitions from the previous section will be used to evaluate two-dimensional moments. As shown in Chapter 6, bivariate statistics have some very important applications to electrical engineering problems, and some additional definitions need to be studied.

DEFINITION. The *correlation* (or *joint mean*) of x_1 and x_2 is

$$m_{12} = \overline{x_1 x_2} = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} x_1 x_2 f(x_1, x_2) dx_1 dx_2 \quad (\text{B-91})$$

DEFINITION. Two random variables x_1 and x_2 are said to be *uncorrelated* if

$$m_{12} = \overline{x_1 x_2} = \overline{x_1} \overline{x_2} = m_1 m_2 \quad (\text{B-92})$$

If x_1 and x_2 are independent, it follows that they are also uncorrelated, but the converse is not generally true. However, as we will see, the converse is true for bivariate Gaussian random variables.

DEFINITION. Two random variables are said to be *orthogonal* if

$$m_{12} = \overline{x_1 x_2} \equiv 0 \quad (\text{B-93})$$

Note the similarity of the definition of orthogonal random variables to that of orthogonal functions given by Eq. (2-73).

DEFINITION. The *covariance* is

$$\begin{aligned} u_{11} &= \overline{(x_1 - m_1)(x_2 - m_2)} \\ &= \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} (x_1 - m_1)(x_2 - m_2) f(x_1, x_2) dx_1 dx_2 \end{aligned} \quad (\text{B-94})$$

It should be clear that if x_1 and x_2 are independent, the covariance is zero (and x_1 and x_2 are uncorrelated). The converse is not generally true, but it is true for the case of bivariate Gaussian random variables.

DEFINITION. The *correlation coefficient* is

$$\rho = \frac{u_{11}}{\sigma_1 \sigma_2} = \frac{\overline{(x_1 - m_1)(x_2 - m_2)}}{\sqrt{\overline{(x_1 - m_1)^2}} \sqrt{\overline{(x_2 - m_2)^2}}} \quad (\text{B-95})$$

This is also called the *normalized covariance*. The correlation coefficient is always within the range

$$-1 \leq \rho \leq +1 \quad (\text{B-96})$$

For example, suppose that $x_1 = x_2$; then $\rho = +1$. If $x_1 = -x_2$, then $\rho = -1$; and if x_1 and x_2 are independent, $\rho = 0$. Thus the correlation coefficient tells us, on the average, how likely a value of x_1 is to being proportional to the value for x_2 . This subject is discussed in more detail in Chapter 6, where these results are extended to include random processes (time functions). There the dependence of the value of a waveform at one time is compared with the value of the waveform that occurs at another time. This will bring the concept of frequency response into the problem.

Gaussian Bivariate Distribution

A good example of a joint ($N = 2$) distribution that is of great importance is the bivariate Gaussian distribution. The bivariate Gaussian PDF is

$$f(x_1, x_2) = \frac{1}{2\pi\sigma_1\sigma_2\sqrt{1-\rho^2}} e^{-\frac{1}{2(1-\rho^2)}\left[\frac{(x_1-m_1)^2}{\sigma_1^2} - 2\rho\frac{(x_1-m_1)(x_2-m_2)}{\sigma_1\sigma_2} + \frac{(x_2-m_2)^2}{\sigma_2^2}\right]} \quad (\text{B-97})$$

where σ_1^2 is the variance of x_1 , σ_2^2 is the variance of x_2 , m_1 is the mean of x_1 , and m_2 is the mean of x_2 . Examining Eq. (B-97), we see that if $\rho = 0$, $f(x_1, x_2) = f(x_1)f(x_2)$, where $f(x_1)$ and $f(x_2)$ are the one-dimensional PDFs of x_1 and x_2 . Thus, if bivariate Gaussian random variables are uncorrelated (which implies that $\rho = 0$), they are independent.

A sketch of the bivariate (two-dimensional) Gaussian PDF is shown in Fig. B-12.

Multivariate Functional Transformation

Section B-8 will now be generalized for the multivariate case. Referring to Fig. B-13, we will obtain the PDF for y , denoted by $f_y(y)$ in terms of the PDF for x , denoted by $f_x(x)$.

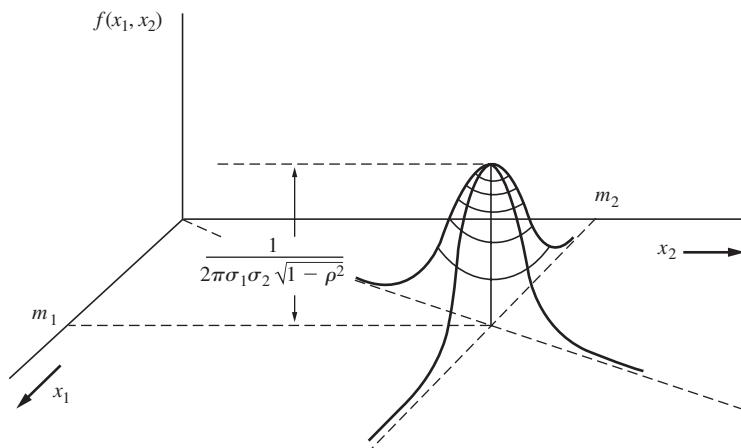


Figure B-12 Bivariate Gaussian PDF.

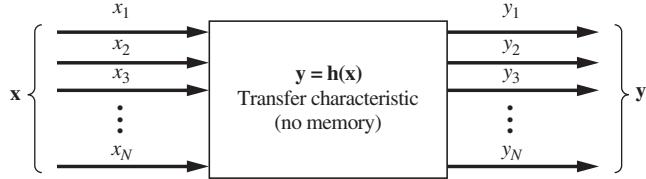


Figure B-13 Multivariate functional transformation of random variables.

THEOREM. Let $\mathbf{y} = \mathbf{h}(\mathbf{x})$ denote the transfer characteristic of a device (no memory) that has N inputs, denoted by $\mathbf{x} = (x_1, x_2, \dots, x_N)$; N outputs, denoted by $\mathbf{y} = (y_1, y_2, \dots, y_N)$; and $y_i = h_i(\mathbf{x})$. That is,

$$\begin{aligned} y_1 &= h_1(x_1, x_2, \dots, x_N) \\ y_2 &= h_2(x_1, x_2, \dots, x_N) \\ &\vdots \\ y_N &= h_N(x_1, x_2, \dots, x_N) \end{aligned} \quad (\text{B-98})$$

Furthermore, let $\mathbf{x}_i, i = 1, 2, \dots, M$ denote the real roots (vectors) of the equation $\mathbf{y} = \mathbf{h}(\mathbf{x})$. The PDF of the output is then

$$f_y(\mathbf{y}) = \sum_{i=1}^M \frac{f_x(\mathbf{x})}{|J(\mathbf{y}/\mathbf{x})|} \Bigg|_{\mathbf{x} = \mathbf{x}_i = \mathbf{h}_i^{-1}(\mathbf{y})} \quad (\text{B-99})$$

where $|\cdot|$ denotes the absolute value operation and $J(\mathbf{y}/\mathbf{x})$ is the Jacobian of the coordinate transformation to \mathbf{y} from \mathbf{x} . The Jacobian is defined as

$$J\left(\frac{\mathbf{y}}{\mathbf{x}}\right) = \text{Det} \begin{bmatrix} \frac{\partial h_1(\mathbf{x})}{\partial x_1} & \frac{\partial h_1(\mathbf{x})}{\partial x_2} & \dots & \frac{\partial h_1(\mathbf{x})}{\partial x_N} \\ \frac{\partial h_2(\mathbf{x})}{\partial x_1} & \frac{\partial h_2(\mathbf{x})}{\partial x_2} & \dots & \frac{\partial h_2(\mathbf{x})}{\partial x_N} \\ \vdots & \vdots & \ddots & \vdots \\ \frac{\partial h_N(\mathbf{x})}{\partial x_1} & \frac{\partial h_N(\mathbf{x})}{\partial x_2} & \dots & \frac{\partial h_N(\mathbf{x})}{\partial x_N} \end{bmatrix} \quad (\text{B-100})$$

where $\text{Det}[\cdot]$ denotes the determinant of the matrix $[\cdot]$.

A proof of this theorem will not be given, but it should be clear that it is a generalization of the theorem for the one-dimensional case that was studied in Sec. B-8. The coordinate transformation relates differentials in one coordinate system to those in another [Thomas, 1969]:

$$dy_1 dy_2 \cdots dy_N = J\left(\frac{\mathbf{y}}{\mathbf{x}}\right) dx_1 dx_2 \cdots dx_N \quad (\text{B-101})$$

Example B-11 PDF FOR THE SUM OF TWO RANDOM VARIABLES

Suppose that we have a circuit configuration (such as an operational amplifier) that sums two inputs— x_1 and x_2 —to produce the output

$$y = A(x_1 + x_2) \quad (\text{B-102})$$

where A is the gain of the circuit. Assume that $f(x_1, x_2)$ is known and that we wish to obtain a formula for the PDF of the output in terms of the joint PDF for the inputs.

We can use the theorem described by Eq. (B-99) to solve this problem. However, for two inputs, we need two outputs in order to satisfy the assumptions of the theorem. This is achieved by defining an auxiliary variable for the output, (say, y_2). Thus,

$$y_1 = h_1(\mathbf{x}) = A(x_1 + x_2) \quad (\text{B-103})$$

$$y_2 = h_2(\mathbf{x}) = Ax_1 \quad (\text{B-104})$$

The choice of the equation to use for the auxiliary variable, Eq. (B-104), is immaterial, provided that it is an independent equation so that the determinant, $J(\mathbf{y}/\mathbf{x})$, is not zero. However, the equation is usually selected to simplify the ensuing mathematics. Using Eqs. (B-103) and (B-104), we get

$$J = \text{Det} \begin{bmatrix} A & A \\ A & 0 \end{bmatrix} = -A^2 \quad (\text{B-105})$$

Substituting this into Eq. (B-99) yields

$$f_{\mathbf{y}}(y_1, y_2) = \frac{f_x(x_1, x_2)}{|-A^2|} \Big|_{x = h^{-1}(\mathbf{y})}$$

or

$$f_{\mathbf{y}}(y_1, y_2) = \frac{1}{A^2} f_x \left(\frac{y_2}{A}, \frac{1}{A}(y_1 - y_2) \right) \quad (\text{B-106})$$

We want to find a formula for $f_{y_1}(y_1)$, since $y_1 = A(x_1 + x_2)$. This is obtained by evaluating the marginal PDF from Eq. (B-106).

$$f_{y_1}(y_1) = \int_{-\infty}^{\infty} f_{\mathbf{y}}(y_1, y_2) dy_2$$

or

$$f_{y_1}(y_1) = \frac{1}{A^2} \int_{-\infty}^{\infty} f_x \left(\frac{y_2}{A}, \frac{1}{A}(y_1 - y_2) \right) dy_2 \quad (\text{B-107})$$

This general result relates the PDF of $y = y_1$ to the joint PDF of \mathbf{x} where $y = A(x_1 + x_2)$. If x_1 and x_2 are *independent* and $A = 1$, Eq. (B-107) becomes

$$f(y) = \int_{-\infty}^{\infty} f_{x_1}(\lambda) f_{x_2}(y - \lambda) d\lambda$$

or

$$f(y) = f_{x_1}(y) * f_{x_2}(y) \quad (\text{B-108})$$

where $*$ denotes the convolution operation. Similarly, if we sum N independent random variables, the PDF for the sum is the $(N - 1)$ -fold convolution of the one-dimensional PDFs for the N random variables.

Central Limit Theorem

If we have the sum of a number of independent random variables with arbitrary one-dimensional PDFs, the *central limit theorem* states that the PDF for the sum of these independent random variables approaches a Gaussian (normal) distribution under very general conditions. Strictly speaking, the central limit theorem does not hold for the PDF if the independent random variables are discretely distributed. In this case, the PDF for the sum will consist of delta functions (not Gaussian, which is continuous); however, if the delta functions are “smeared out” (e.g., if the delta functions are replaced with rectangles that have corresponding areas), the resulting PDF will be approximately Gaussian. Regardless, the cumulative distribution function (CDF) for the sum will approach that of a Gaussian CDF.

The central limit theorem is illustrated in the following example.

Example B-12 PDF FOR THE SUM OF THREE INDEPENDENT, UNIFORMLY DISTRIBUTED RANDOM VARIABLES

The central limit theorem will be illustrated by evaluating the exact PDF for the sum of three independent uniformly distributed random variables. This exact result will be compared with the Gaussian PDF, as predicted by the central limit theorem.

Let each of the independent random variables x_i have a uniform distribution, as shown in Fig. B-14a. The PDF for $y_1 = x_1 + x_2$, denoted by $f(y_1)$, is obtained by the convolution operation described by Eq. (B-108) and Fig. 2-7. This result is shown in Fig. B-14b. It is seen that after only one convolution operation the PDF for the sum (which is a triangle) is going toward the Gaussian shape. The PDF for $y_2 = x_1 + x_2 + x_3, f(y_2)$, is obtained by convolving the triangular PDF with another uniform PDF. The result is

$$f(y_2) = \begin{cases} 0, & y_2 \leq -\frac{3}{2}A \\ \frac{1}{2A^3} \left(\frac{3}{2}A + y_2 \right)^2, & -\frac{3}{2}A \leq y_2 \leq -\frac{1}{2}A \\ \frac{1}{2A^3} \left(\frac{3}{2}A^2 - 2y_2^2 \right), & |y_2| \leq \frac{1}{2}A \\ \frac{1}{2A^3} \left(\frac{3}{2}A - y_2 \right), & \frac{1}{2}A \leq y_2 \leq \frac{3}{2}A \\ 0, & y_2 \geq \frac{3}{2}A \end{cases} \quad (\text{B-109})$$

This curve is plotted by the solid line in Fig. B-14c. For comparison purposes, a matching Gaussian curve, with $1/(\sqrt{2\pi}\sigma) = 3/(4A)$, is also shown by the dashed line. It is seen that $f(y_2)$ is very close to the Gaussian curve for $|y_2| < \frac{3}{2}A$, as predicted by the central limit theorem. Of course, $f(y_2)$ is certainly not Gaussian for $|y_2| > \frac{3}{2}A$, because $f(y_2) = 0$ in this region, whereas the Gaussian curve is not zero except at $y = \pm\infty$. Thus, we observe that the Gaussian approximation (as predicted by the central limit theorem) is not very good on the *tails* of the distribution. In Chapter 7, it is shown that the probability of bit error for digital systems is obtained by evaluating the area under the tails of a distribution. If the distribution is not known to be Gaussian and the central limit theorem is used to approximate the distribution by a Gaussian PDF, the results are often not very accurate, as shown by this example. However, if the area under the distribution is needed near the mean value, the Gaussian approximation may be very good.

See ExampleB_12.m for plots of Fig. B-14c for a selected value of A.

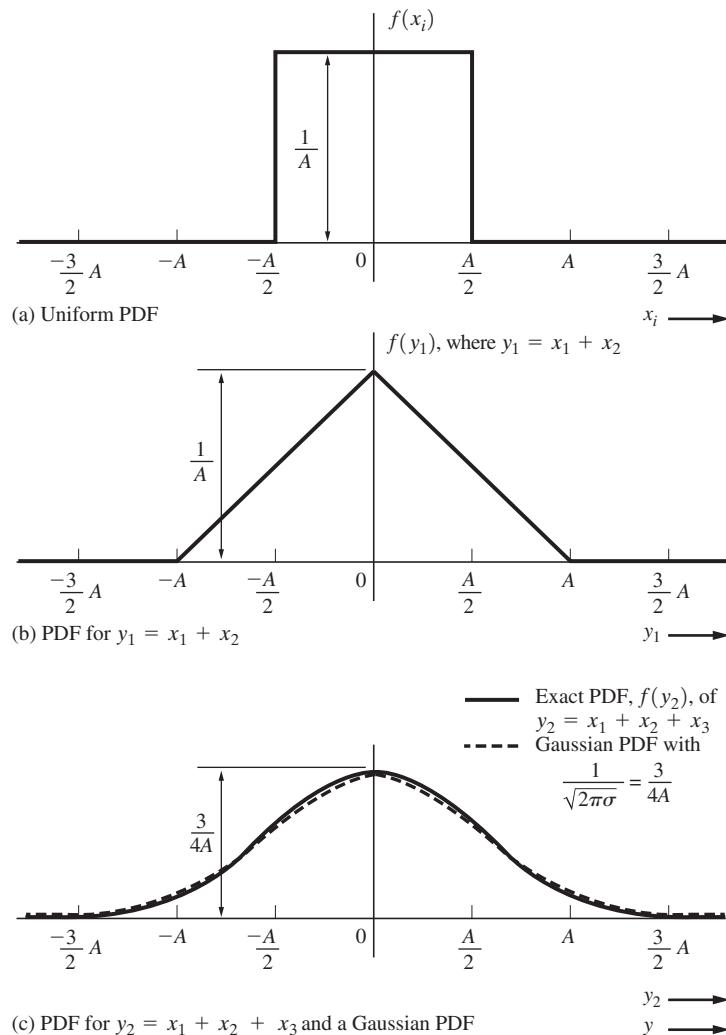


Figure B-14 Demonstration of the central limit theorem (Ex. B-8).

PROBLEMS

- ★ **B-1** A long binary message contains 1,428 binary 1s and 2,668 binary 0s. What is the probability of obtaining a binary 1 in any received bit?
- ★ **B-2** (a) Find the probability of getting an 8 in the toss of two dice.
 (b) Find the probability of getting either a 5, 7, or 8 in the toss of two dice.
- B-3** Show that

$$\begin{aligned}
 P(A + B + C) &= P(A) + P(B) + P(C) \\
 &\quad - P(AB) - P(AC) - P(BC) + P(ABC)
 \end{aligned}$$

- ★ B-4** A die is tossed. The probability of getting any face is $P(x) = \frac{1}{6}$, where $x = k = 1, 2, 3, 4, 5$, or 6. Find the probability of getting an odd-numbered face.
- ★ B-5** For the die toss of Prob. B-4, find the probability of getting a 4 when an even-numbered face is obtained on a toss.
- B-6** Which of the following functions satisfy the properties for a PDF. Why?
- $f(x) = \frac{1}{\pi} \left(\frac{1}{1 + x^2} \right)$
 - $f(x) = \begin{cases} |x|, & |x| < 1 \\ 0, & x \text{ otherwise} \end{cases}$
 - $f(x) = \begin{cases} \frac{1}{6}(8 - x), & 4 \leq x \leq 10 \\ 0, & x \text{ otherwise} \end{cases}$
 - $f(x) = \sum_{k=0}^{\infty} \frac{3}{4} \left(\frac{1}{4}\right)^k \delta(xk)$
- B-7** Show that all cumulative distribution functions must satisfy the properties given in Sec. B-5.
- B-8** Let $f(x) = Ke^{-bx|x|}$, where K and b are positive constants. Find the mathematical expression for the CDF and sketch the results.
- ★ B-9** Find the probability that $-\frac{1}{4}A \leq y_1 \leq \frac{1}{4}A$ for the triangular distribution shown in Fig. B-14b.
- B-10** A triangular PDF is shown in Fig. B-14b.
- Find a mathematical expression that describes the CDF.
 - Sketch the CDF.
- B-11** Evaluate the PDFs for the two waveforms shown in Fig. PB-11.

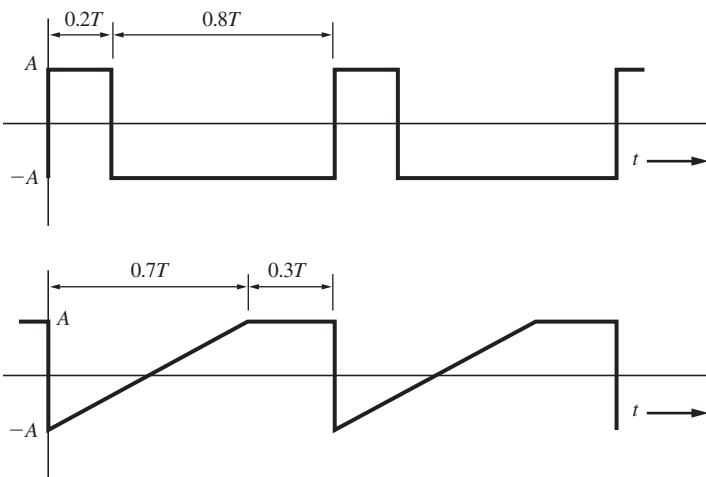


Figure PB-11

- ★ **B-12** Let a PDF be given by $f(x) = Ke^{-bx}$, for $x \geq 0$, and $f(x) = 0$, for $x < 0$, where K and b are positive constants.

- (a) Find the value required for K in terms of b .
- (b) Find m in terms of b .
- (c) Find σ^2 in terms of b .



- B-13** A random variable x has a PDF

$$f(x) = \begin{cases} \frac{3}{32}(-x^2 + 8x - 12), & 2 < x < 6 \\ 0, & \text{elsewhere} \end{cases}$$

- (a) Demonstrate that $f(x)$ is a valid PDF.
- (b) Find the mean.
- (c) Find the second moment.
- (d) Find the variance.

- B-14** Determine the standard deviation for the triangular distribution shown in Fig. B-14b.

- B-15** (a) Find the terms in a binomial distribution for $n = 7$, where $p = 0.5$.
 (b) Sketch the PDF for this binomial distribution.
 (c) Find and sketch the CDF for this distribution.
 (d) Find \bar{x}^3 for this distribution.

- B-16** For a binomial distribution, show that $\sigma^2 = np(1 - p)$.



- ★ **B-17** A binomial random variable x_k has values of k , where

$$k = 0, 1, \dots, n; \quad P(k) = \binom{n}{k} p^k q^{n-k}; \quad q = 1 - p$$

Assume that $n = 160$ and $p = 0.1$.

- (a) Plot $P(k)$.
- (b) Compare the plot of part (a) with a plot $P(k)$ using the Gaussian approximation

$$\left(\frac{n}{k}\right) p^k q^{n-k} \approx \frac{1}{\sqrt{2\pi}\sigma} e^{-(k-m)^2/2\sigma^2}$$

which is valid when $npq \gg 1$ and $|k - np|$ is in the neighborhood of \sqrt{npq} , where $\sigma = \sqrt{npq}$ and $m = np$.

- (c) Also plot the Poisson approximation

$$\left(\frac{n}{k}\right) p^k q^{n-k} \approx \frac{\lambda^k}{k!} e^{-\lambda}$$

where $\lambda = np$, n is large, and p is small.



- B-18** An order of $n = 3,000$ transistors is received. The probability that each transistor is defective is $p = 0.001$. What is the probability that the number of defective transistors in the batch is 6 or less? (Note: The Poisson approximation is valid when n is large and p is small.)

- B-19** In a fiber-optic communication system, photons are emitted with a Poisson distribution as described in Table B-1. $m = \lambda$ is the average number of photons emitted in an arbitrary time interval, and $P(k)$ is the probability of k photons being emitted in the same interval.

- (a) Plot the PDF for $\lambda = 0.5$.
- (b) Plot the CDF for $\lambda = 0.5$.
- (c) Show that $m = \lambda$.
- (d) Show that $\sigma = \sqrt{\lambda}$.

- B-20** Let x be a random variable that has a Laplacian distribution. The Laplacian PDF is $f(x) = (1/2b)e^{-|x-m|/b}$, where b and m are real constants and $b > 0$.
- Find the mean of x in terms of b and m .
 - Find the variance of x in terms of b and m .



- B-21** Referring to your solution for Prob. B-20, use MATLAB to plot the Laplacian PDF for $m = 15$ and $\sigma = 5$.

- B-22** Given the Gaussian PDF

$$f(x) = \frac{1}{\sqrt{2\pi}\beta} e^{-(x-m)^2/(2\beta^2)}$$

show that the variance of this distribution is β^2 .

- ★ **B-23** In a manufacturing process for resistors, the values obtained for the resistors have a Gaussian distribution where the desired value is the mean value. If we want 95% of the manufactured $1\text{-k}\Omega$ resistors to have a tolerance of $\pm 10\%$, what is the required value for σ ?

- B-24** Assume that x has a Gaussian distribution. Find the probability that

- $|x - m| < \sigma$.
- $|x - m| < 2\sigma$.
- $|x - m| < 3\sigma$.

Obtain numerical results by using MATLAB, or tables if necessary.

- B-25** Show that

- $Q(z) = \frac{1}{2} \operatorname{erfc}\left(\frac{z}{\sqrt{2}}\right)$.
- $Q(-z) = 1 - Q(z)$.
- $Q(z) = \frac{1}{2} \left[1 - \operatorname{erf}\left(\frac{z}{\sqrt{2}}\right) \right]$.



- B-26** Using MATLAB, plot $Q(z)$ as defined by Eq. (B-60) and Prob. B-25.



- B-27** For a Gaussian distribution, show that

$$(a) F(a) = \frac{1}{2} \operatorname{erfc}\left(\frac{m-a}{\sqrt{2}\sigma}\right). \quad (b) F(a) = \frac{1}{2} \left[1 + \operatorname{erfc}\left(\frac{a-m}{\sqrt{2}\sigma}\right) \right].$$



- B-28** Using MATLAB, plot the CDF for a Gaussian random variable where $m = 10$ and $\sigma = 2$.



- B-29** A noise voltage has a Gaussian distribution. The RMS value is 5 V, and the DC value is 1.0 V. Find the probability of the voltage having values between -5 and $+5$ V.

- ★ **B-30** Suppose that x is a Gaussian random variable with $m = 5$ and $\sigma = 0.6$.

- Find the probability that $x \leq 1$.
- Find the probability that $x \leq 6$.



- B-31** The Gaussian random variable x has a zero mean and a variance of 2. Let A be the event such that $|x| < 3$.

- Find an expression for the conditional PDF $f(x|A)$.
- Plot $f(x|A)$ over the range $|x| < 5$.
- Plot $f(x)$ over the range $|x| < 5$ and compare these two plots.

- B-32** Let x have a sinusoidal distribution with a PDF as given by Eq. (B-67). Show that the CDF is

$$F(a) = \begin{cases} 0, & a \leq -A \\ \frac{1}{\pi} \left[\frac{\pi}{2} + \sin^{-1}\left(\frac{a}{A}\right) \right], & |a| \leq A \\ 1, & a \geq A \end{cases}$$

- B-33** (a) If x has a sinusoidal distribution with the peak value of x being A , show that the RMS value is $\sigma = A/\sqrt{2}$. [Hint: Use Eq. (B-67).]

- (b) If $x = A \cos \psi$, where ψ is uniformly distributed between $-\pi$ and $+\pi$, show that the RMS value of x is $\sigma = A/\sqrt{2}$.

- ★ B-34** Given that $y = x^2$ and x is a Gaussian random variable with mean value m and variance σ^2 , find a formula for the PDF of y in terms of m and σ^2 .

- B-35** x is a uniformly distributed random variable over the range $-1 \leq x \leq 1$ plus a discrete point at $x = \frac{1}{2}$ with $P(x = \frac{1}{2}) = \frac{1}{4}$.

- (a) Find a mathematical expression for the PDF for x , and plot your result.

- (b) Find the PDF for y , where

$$y = \begin{cases} x^2, & x \geq 0 \\ 0, & x < 0 \end{cases}$$

Sketch your result.

- B-36** A saturating amplifier is modeled by

$$y = \begin{cases} Ax_0, & x > x_0 \\ Ax, & |x| \leq x_0 \\ -Ax_0, & x < -x_0 \end{cases}$$

Assume that x is a Gaussian random variable with mean value m and variance σ^2 . Find a formula for the PDF of y in terms of A , x_0 , m , and σ^2 .

- ★ B-37** Using MATLAB and your results for Prob. B-36, plot the PDF for the output of a saturating amplifier with a Gaussian input if $x_0 = 5$, $A = 10$, $m = 2$, and $\sigma = 1.5$.

- ★ B-38** A sinusoid with a peak value of 8 V is applied to the input of a quantizer. The quantizer characteristic is shown in Fig. 3-8a. Calculate and plot the PDF for the output.

- ★ B-39** A voltage waveform that has a Gaussian distribution is applied to the input of a full-wave rectifier circuit. The full-wave rectifier is described by $y(t) = |x(t)|$, where $x(t)$ is the input and $y(t)$ is the output. The input waveform has a DC value of 1 V and an RMS value of 2 V.

- (a) Plot the PDF for the input waveform.

- (b) Plot the PDF for the output waveform.

- ★ B-40** Refer to Example B-10 and Eq. (B-75), which describe the PDF for the output of an ideal diode (half-wave rectifier) characteristic. Find the mean (DC) value of the output.

- B-41** Given the joint density function,

$$f(x_1, x_2) = \begin{cases} e^{-(1/2)(4x_1+x_2)}, & x_1 \geq 0, x_2 \geq 0 \\ 0, & \text{otherwise} \end{cases}$$

- (a) Verify that $f(x_1, x_2)$ is a density function.
 (b) Show that x_1 and x_2 are either independent or dependent.
 (c) Evaluate $P(1 \leq x_1 \leq 2, x_2 \leq 4)$.
 (d) Find ρ .

★ B-42 A joint density function is

$$f(x_1, x_2) = \begin{cases} K(x_1 + x_1 x_2), & 0 \leq x_1 \leq 1, \quad 0 \leq x_2 \leq 4 \\ 0, & \text{elsewhere} \end{cases}$$

- (a) Find K .
 (b) Determine if x_1 and x_2 are independent.
 (c) Find $F_{x_1, x_2}(0.5, 2)$.
 (d) Find $F_{x_2|x_1}(x_2|x_1)$.
- B-43 Let $y = x_1 + x_2$, where x_1 and x_2 are uncorrelated random variables. Show that
 (a) $\bar{y} = m_1 + m_2$, where $m_1 = \bar{x}_1$ and $m_2 = \bar{x}_2$.
 (b) $\sigma_y^2 = \sigma_1^2 + \sigma_2^2$, where $\sigma_1^2 = \overline{(x_1 - \bar{x}_1)^2}$ and $\sigma_2^2 = \overline{(x_2 - \bar{x}_2)^2}$.
 [Hint: Use the ensemble operator notation similar to that used in the proof for Eq. (B-29).]
- B-44 Let $x_1 = \cos \theta$ and $x_2 = \sin \theta$, where θ is uniformly distributed over $(0, 2\pi)$. Show that
 (a) x_1 and x_2 are uncorrelated.
 (b) x_1 and x_2 are not independent.
- ★ B-45 Two random variables x_1 and x_2 are jointly Gaussian. The joint PDF is described by Eq. (B-97), where $m_1 = m_2 = 0$, $\sigma_{x_1} = \sigma_{x_2} = 1$ and $\rho = 0.5$. Plot $f(x_1, x_2)$ for x_1 over the range $|x_1| < 5$ and $x_2 = 0$. Also give plots for $f(x_1, x_2)$ for $|x_1| < 5$ and $x_2 = 0.4, 0.8, 1.2$, and 1.6 .
- B-46 Show that the marginal PDF of a bivariate Gaussian PDF is a one-dimensional Gaussian PDF. That is, evaluate

$$f(x_1) = \int_{-\infty}^{\infty} f(x_1, x_2) dx_2$$

where $f(x_1, x_2)$ is given by Eq. (B-97). [Hint: Factor some terms outside the integral containing x_1 (but not x_2). Complete the square on the exponent of the remaining integrand so that a Gaussian PDF form is obtained. Use the property that the integral of a properly normalized Gaussian PDF is unity.]

- B-47 The input to a receiver consists of a binary signal plus some noise. That is, assume that the input y is $y = x + n$, where x is random binary data with values of $\pm A$ Volts that are equally likely to occur. Let n be independent Gaussian random noise with a mean of m and a standard deviation of σ . Find the PDF for y as a function of A , m , and σ .
- ★ B-48 Referring to your solution for Prob. B-47 and using MATLAB, plot the PDF for y , where $A = 12$, $m = 2$, and $\sigma = 4$.
- ★ B-49 Referring to your solution for Prob. B-47 and using MATLAB, calculate the probability that the voltage at the receiver input is between 10 and 14 Volts, where $A = 12$, $m = 2$, and $\sigma = 4$.
- ★ B-50 (a) $y = A_1 x_1 + A_2 x_2$, where A_1 and A_2 are constants and the joint PDF of x_1 and x_2 is $f_x(x_1, x_2)$.
 Find a formula for the PDF of y in terms of the (joint) PDF of x .
 (b) If x_1 and x_2 are independent, how can this formula be simplified?



- B-51** Two independent random variables— x and y —have the PDFs $f(x) = 5e^{-5x} u(x)$ and $f(y) = 2e^{-2y} u(y)$. Plot the PDF for w where $w = x + y$.
- ★ B-52** Two Gaussian random variables x_1 and x_2 have a mean vector \mathbf{m}_x and a covariance matrix \mathbf{C}_x as shown. Two new random variables y_1 and y_2 are formed by the linear transformation $\mathbf{y} = \mathbf{T}\mathbf{x}$.

$$\mathbf{m}_x = \begin{bmatrix} 2 \\ -1 \end{bmatrix} \quad \mathbf{C}_x = \begin{bmatrix} 5 & -2/\sqrt{5} \\ -2/\sqrt{5} & 4 \end{bmatrix} \quad \mathbf{T} = \begin{bmatrix} 1 & 1/2 \\ 1/2 & 1 \end{bmatrix}$$

- (a) Find the mean vector for \mathbf{y} , which is denoted by \mathbf{m}_y .
- (b) Find the covariance matrix for \mathbf{y} , which is denoted by \mathbf{C}_y .
- (c) Find the correlation coefficient for y_1 and y_2 . (*Hint:* See Sec. 6–6.)



- B-53** Three Gaussian random variables x_1 , x_2 , and x_3 have zero mean values. Three new random variables y_1 , y_2 , and y_3 are formed by the linear transformation $\mathbf{y} = \mathbf{T}\mathbf{x}$, where

$$\mathbf{C}_x = \begin{bmatrix} 6.0 & 2.3 & 1.5 \\ 2.3 & 6.0 & 2.3 \\ 1.5 & 2.3 & 6.0 \end{bmatrix} \quad \mathbf{T} = \begin{bmatrix} 5 & 2 & -1 \\ -1 & 3 & 1 \\ 2 & -1 & 2 \end{bmatrix}$$

- (a) Find the covariance matrix for \mathbf{y} , which is denoted by \mathbf{C}_y .
- (b) Write an expression for the PDF $f(y_1, y_2, y_3)$. (*Hint:* See Sec. 6–6).

- ★ B-54** (a) Find a formula for the PDF of $y = Ax_1 x_2$, where x_1 and x_2 are random variables having the joint PDF $f_{\mathbf{x}}(x_1, x_2)$.
- (b) If x_1 , and x_2 are independent, reduce the formula obtained in part (a) to a simpler result.
- B-55** $y_2 = x_1 + x_2 + x_3$, where x_1 , x_2 , and x_3 are independent random variables. Each of the x_i has a one-dimensional PDF that is uniformly distributed over $-(A/2) \leq x_i \leq (A/2)$. Show that the PDF of y_2 is given by Eq. (B-109).
- ★ B-56** Use the built-in random number generator of MATLAB to demonstrate the central limit theorem. That is,
- (a) Compute samples of the random variable y , where $y = \sum x_i$ and the x_i values are obtained from the random number generator.
- (b) Plot the PDF for y by using the histogram function of MATLAB.



USING MATLAB

MATLAB is a very useful tool for analyzing and designing communication systems using the personal computer (PC). It has become widely used in engineering courses and is often used in industry for system design and simulation.

MATLAB is an acronym for Matrix Laboratory sold by MathWorks. It treats all constants and variables as matrices, row vectors, or column vectors. Consequently, the default operations in MATLAB are matrix operations. For example, $a * b$ is the matrix multiplication of a and b . This means that MATLAB program code can be very concise. Complicated operations can be expressed using very few lines of code with no “do” loops. The results can be computed very efficiently with the PC. However, this can make the code hard to understand, although it is compact and computationally efficient. The use of matrices and vectors also allows for powerful graphical capabilities.

In our MATLAB programming, we will adopt the concept of “keeping the code simple.” This means that loops may appear in our code in order to make it easy to understand, although a more compact code could be used that would run faster. Our goal is to use MATLAB as a tool to make communication systems easy to understand.

Of course, to be able to run the MATLAB M-files that accompany this book, you need to install MATLAB on your computer as per the instructions that came with this software from MathWorks. Install a shortcut icon for MATLAB on your desktop, if one was not installed with the installation of MATLAB.

The recommendations given in the following sections and the M-files for this book were developed and tested using MATLAB v.7.11 R2010b.

C-1 ABOUT THE MATLAB M-FILES

1. Download the MATLAB files for this book from either of the Web sites <http://lcouch.us> or <http://www.couch.ece.ufl.edu>
2. You will need to unzip the downloaded file. That is, extract the set of M-files from the downloaded zip file.
3. The Examplex_xx.m files are MATLAB solutions for the examples that appear within each chapter and the SAx_xx.m files are solutions for the study-aid problems that appear at the end of each chapter. The Px_xx.m files are solutions for the end-of-the-chapter problems that are marked with a ★ and a computer symbol, The *Student Solutions Manual* has detailed solutions for all the problems that are marked with a ★, so you might want to look in this manual to see how equations are derived that are used in the Px_xx.m files. There are also other M-files that define functions that are used in the Examplex_xx.m, Sax_xx.m, and Px_xx.m files. Consequently, all of the M-files must be placed into the same folder so that if one file calls a function defined in another, it can find it in the same folder.
4. The M-files are collections of MATLAB commands stored in plain-text files that have file names that end with the extension of .m. They are also called script files and can be edited with any ASCII editor, such as Notepad, but the built-in MATLAB editor is integrated with MATLAB and, consequently, is easier to use.

C-2 QUICK START FOR RUNNING M-FILES

1. Click on the MATLAB icon on your desktop.
2. The default MATLAB window will appear (unless you previously changed the default to another selection). Note the Start icon in the left-hand lower corner of the default window. This will allow you to select Toolboxes, Simulink, Demos, etc. Toolboxes and Simulink are not used by any of the M-files for this book because we are interested in learning how to create basic M-files that will be used to solve communication examples and problems.
3. Click on the New Script icon that is located just below File at the top of the default MATLAB window. The Editor window should appear. (Alternately, in the default window, click on the Desktop pull-down menu and select Editor.)

4. At the top of the Editor window, click on the folder icon and go to the folder in which your downloaded M-files are located. Select Example1_1.m. In the Editor window, lines of code for this Example1_1.m file should appear.
5. To run this MATLAB file, click on the green (run) arrow at the top of the Editor window. The “printed” output will appear in the Command window and a plot of the results will appear in the Figure 1 window. (Sometimes a window appears behind another window so you may have to move the window in front aside to see the window that is hiding behind it.) Alternately, you can run a M-file by typing the file name (without the file extension, .m) at the MATLAB prompt in the Command window.
6. Statements that you type into the Command window are executed immediately when you hit the Enter key. Statements that you type into the Editor window, along with any other statements in the Editor window, will be executed when you click the green arrow.

C-3 PROGRAMMING IN MATLAB


There are many sources that will help you to write the lines of code for MATLAB script files. The first is the built-in MATLAB help. Click on the fx icon on the command-prompt line of the Command window to browse the descriptions of MATLAB functions. More general help can be obtained by clicking on Help at the top of the default window to obtain a pull-down list of help sources. Help can also be obtained from the MathWorks Web site located at <http://www.mathworks.com>.

Second, there are many excellent publications on MATLAB programming. One of the best for beginners is the *MATLAB Primer* [Davis, 2011]. This is a pocket-sized book, around 230 pages in length, that concisely describes the basics of MATLAB programming. It includes an appendix listing the descriptions of the MATLAB top 500 commands and functions. Another excellent publication is *Mastering MATLAB 7* [Hanselman and Littlefield, 2011]. This paperback book, around 850 pages in length, proceeds from the basics of MATLAB to more advanced topics. The basics are covered in the first few chapters and then one can skip to topics of interest in the latter chapters.

As indicated previously, the basic type of variable used in MATLAB is the matrix. This sets the stage, so to speak, for the notation used in MATLAB programs. The list below summarizes the basic notation used in MATLAB programs.

1. A row vector is created by a comma-delimited or a space-delimited list. For example, enter $M1 = [1,2,3,4,5,6]$ or $M1 = [1 2 3 4 5 6]$. This is a six-element row vector, or a 1×6 matrix (1 row \times 6 columns).
2. A column vector is created by a semicolon-delimited list. For example, $M2 = [1;2;3;4;5;6]$ is a six-element column vector, or a 6×1 matrix.
3. Enter $M3 = [1 2 3; 4 5 6]$. This creates a 2×3 matrix. To view the element in the 2nd row and 3rd column, enter $M3(2,3)$. It has a value of 6.
4. A scalar is a 1×1 matrix. For example, enter $M4 = 2.5$.
5. Enter $M5 = 0.5 + 2j$. This specifies a complex number that is a 1×1 matrix.

6. The colon operator is used to index arrays and to create elements of vectors. The notation used is start-value:skip-increment:end-value. For example, enter $t = 1:2:6$. This creates the row vector $\mathbf{t} = [1 \ 3 \ 5]$. If the skip increment is deleted, the default increment is 1. For example, $u = 1:6$ is the row vector $\mathbf{u} = [1 \ 2 \ 3 \ 4 \ 5 \ 6]$. The colon can also serve as a wild card. For example, in Item 3, $M3(1,3)$ denotes the element in the 1st row and 3rd column, but $M3(1,:)$ would denote the row vector corresponding to the 1st row of the matrix $M3$.
7. Once a variable (i.e., a matrix) is defined, it remains in memory until it is cleared. That is, its value can be obtained by typing in its symbol. For example, enter $M3$ at the MATLAB prompt.
8. Enter *whos*. Whos is the MATLAB command that lists all variables (i.e., matrices) that are stored in memory. It also shows the size of each matrix.
9. MATLAB is case sensitive. That is, $M3$ is a different variable from the variable $m3$, which has not been defined.
10. The transpose operator is $'$. For example, enter $M1'$, which is the transpose of $M1$.
11. Insert a semicolon at the end of a MATLAB statement to suppress the display of the computed result for that statement. For example, enter $y = 6^3;.$ The computed result is not displayed on the screen. However, you can display the computed result by entering y .
12. Multiple statements may be entered on the same line if the statements are separated by commas or semicolons. For example $A = 1, B = 5$.
13. The usual elementary functions (i.e., trigonometric and logarithmic) are built into MATLAB. For a listing, enter *help elfun*. For a list of specialized functions, such as Bessel functions, enter *help specfun*. User defined functions can also be created via M-files; enter *help function* for details.
14. The plotting of the results shown in Fig. 2–21 were obtained by running the MATLAB M-file program listed in Table 2–3. The function *plot(t, w)* gives a plot of the waveform, vector w , as a function of time vector, t , as shown at the top of Fig. 2–21. Multiple plots in a single window can be obtained by using the subplot function. For example, multiple plots arranged in a four-row \times one-column array can be obtained by using *subplot(4, 1, x)*, where x is the plot number within the four possible plots. Alternately, the notation *subplot(41x)* could be used as shown by Table 2–3. In another example, multiple plots arranged in a three-row \times two-column array can be obtained by using *subplot(3, 2, x)* where x is the plot number within the six possible plots. That is, *subplot(3, 2, 3)* would be the third of six plots, where the third plot appears in the first column of the second row.
15. The % sign is used to define a comment statement. All text on a line that follows a % sign is interpreted as a comment statement.

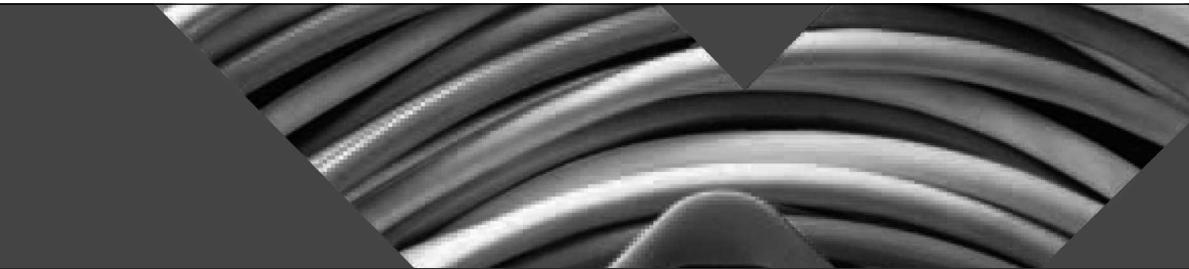

REFERENCES

- ABRAMOWITZ, M., and I. A. STEGUN (Editors), *Handbook of Mathematical Functions*, National Bureau of Standards, Superintendent of Documents, U.S. Government Printing Office, Washington, DC, 1964. Also available in paperback from Dover Publications, New York, 1965.
- AMOROSO, F., "The Bandwidth of Digital Data Signals," *IEEE Communications Magazine*, vol. 18, no. 6, November 1980, pp. 13–24.
- ANDERSON, R. R., and J. SALZ, "Spectra of Digital FM," *Bell System Technical Journal*, vol. 44, July–August 1965, pp. 1165–1189.
- ANDREWS, F. T., "Early T-Carrier History," *IEEE Communications Magazine*, vol. 19, no. 4, April 2011, pp. 12–17.
- ANVARI, K., and D. Woo, "Susceptibility of $\pi/4$ DQPSK TDMA Channel to Receiver Impairments," *RF Design*, February 1991, pp. 49–55.
- AOYAMA, T., W. R. DAUMER, and G. MODENA (Editors), Special Issue on Voice Coding for Communications, *IEEE Journal on Selected Areas of Communications*, vol. 6, February 1988.
- ARRL, *The 2011 ARRL Handbook for Radio Communications*, 88d ed., 2010; *The 1997 ARRL Handbook for Radio Amateurs*, 1996; *The 1992 ARRL Handbook for Radio Amateurs*, 1991, American Radio Relay League, Newington, CT.

- AT&T, *FT-2000 OC-48 Lightwave System*, Publication No. AT&T 365-575-100, AT&T Regional Technical Assistance Center (800-432-6600), Holmdel, NJ, December 1994.
- BAINES, R., "The DSP Bottleneck," *IEEE Communications Magazine*, vol. 33, May 1995, pp. 46-54.
- BALDUINO, P. R. H., "Latin America Goes Wireless via Satellite," *IEEE Communications Magazine*, vol. 33, no. 9, September 1995, pp. 114-122.
- BASCH, E. E., and T. G. BROWN, "Introduction to Coherent Optical Fiber Transmission," *IEEE Communications Magazine*, vol. 23, May 1985, pp. 23-30.
- BEDROSIAN, E. B., and S. O. RICE, "Distortion and Crosstalk of Linearly Filtered Angle-Modulated Signals," *Proceedings of the IEEE*, vol. 56, January 1968, pp. 2-13.
- BELL TELEPHONE LABORATORIES, *Transmission Systems for Communications*, 4th ed., Western Electric Company, Winston-Salem, NC, 1970.
- BENDAT, J. S., and A. G. PIERSOL, *Random Data: Analysis and Measurement Procedures*, Wiley-Interscience, New York, 1971.
- BENEDETTO, S., E. BIGLIERI, and V. CASTELLANI, *Digital Transmission Theory*, Prentice Hall, Upper Saddle River, NJ, 1987.
- BENEDETTO, S., M. MONDIN, and G. MONTORSI, "Performance Evaluation of Trellis-Coded Modulation Schemes," *Proceedings of the IEEE*, vol. 82, no. 6, June 1994, pp. 833-855.
- BENEDETTO, S., and G. MONTORSI, "Unveiling Turbo Codes: Some Results on Parallel Concatenated Coding Schemes," *IEEE Transactions on Information Theory*, vol. IT-42, March 1996, pp. 409-428.
- BENNETT, W. R., and J. R. DAVEY, *Data Transmission*, McGraw-Hill Book Company, New York, 1965.
- BENNETT, W. R., and S. O. RICE, "Spectral Density and Autocorrelation Functions Associated with Binary Frequency Shift Keying," *Bell System Technical Journal*, vol. 42, September 1963, pp. 2355-2385.
- BENSON, K. B., and J. C. WHITAKER, *Television Engineering Handbook*, Rev. ed., McGraw-Hill Book Company, New York, 1992.
- BERGLAND, G. D., "A Guided Tour of the Fast Fourier Transform," *IEEE Spectrum*, vol. 6, July 1969, pp. 41-52.
- BEST, R. E., *Phase-Locked Loops*, 4th ed., McGraw-Hill, Inc., New York, 1999.
- BHARGAVA, V. K., "Forward Error Correction Schemes for Digital Communications," *IEEE Communications Magazine*, vol. 21, January 1983, pp. 11-19.
- BHARGAVA, V. K., D. HACCOUN, R. MATYAS, and P. P. NUSPL, *Digital Communications by Satellite*, Wiley-Interscience, New York, 1981.
- BIC, J. C., D. DUPONTEIL, and J. C. IMBEAUX, *Elements of Digital Communication*, John Wiley & Sons, New York, 1991.
- BIGLIERI, E., D. DIVSALAR, P. J. McLANE, and M. K. SIMON, *Introduction to Trellis-Coded Modulation with Applications*, Macmillan Publishing Company, New York, 1991.
- BLACKMAN, R. B., and J. W. TUKEY, *The Measurement of Power Spectra*, Dover, New York, 1958.
- BLAHUT, R. E., *Theory and Practice of Error Control Codes*, Addison-Wesley Publishing Company, Reading, MA, 1983.
- BLANCHARD, A., *Phase-Locked Loops*, Wiley-Interscience, New York, 1976.
- BOASHASH, B., "Estimating and Interpreting the Instantaneous Frequency of a Signal—Part 1: Fundamentals" and "Part 2: Algorithms and Applications," *Proceedings of the IEEE*, vol. 80, no. 4, April 1992, pp. 520-538 and 540-568.

- BÖRJESSON P. O., and C. E. W. SUNDBERG, "Simple Approximations for the Error Function Q(x) for Communication Applications," *IEEE Transactions on Communications*, vol. COM-27, March 1979, pp. 639–643.
- BOWRON, P., and F. W. STEPHENSON, *Active Filters for Communications and Instrumentation*, McGraw-Hill Book Company, New York, 1979.
- BREMERMAN, H., *Distributions, Complex Variables and Fourier Transforms*, Addison-Wesley Publishing Company, Reading, MA, 1965.
- BRILEY, B. E., *Introduction to Telephone Switching*, Addison-Wesley Publishing Company, Reading, MA, 1983.
- BROADCASTING, *Broadcasting and Cable Yearbook 2006*, R. R. Bowker, New Providence, NJ, 2006.
- BUDAGAVI, M., and J. D. GIBSON, "Speech Coding in Mobile Radio Communications," *Proceedings of the IEEE*, vol. 86, no. 7, July 1998, pp. 1402–1412.
- BYLANSKI, P., and D. G. W. INGRAM, *Digital Transmission Systems*, Peter Peregrinus Ltd., Herts, England, 1976.
- CAMPANELLA, M., U. LOFASO, and G. MAMOLA, Optimum Pulse Shape for Minimum Spectral Occupancy in FSK Signals," *IEEE Transactions on Vehicular Technology*, vol. VT-33, May 1984, pp. 67–75.
- CARLSON, A. B., *Communication Systems*, 3d ed., McGraw-Hill Book Company, New York, 1986.
- CATTERMOLE, K. W., *Principles of Pulse-Code Modulation*, American Elsevier, New York, 1969.
- CCITT STUDY GROUP XVII, "Recommendation V.32 for a Family of 2-Wire, Duplex Modems Operating on the General Switched Telephone Network and on Leased Telephone-Type Circuits," *Document AP VIII-43E*, May 1984.
- CHAKRABORTY, D., "VSAT Communication Networks—An Overview," *IEEE Communications Magazine*, vol. 26, no. 5, May 1988, pp. 10–24.
- CHALLAPALI, K., X. LEBEQUE, J. S. LIM, W. H. PAIK, R. SAINT GIRONS, E. PETAJAN, V. SATHE, P. A. SNOPKO, and J. ZDEPSKI, "The Grand Alliance System for US HDTV," *Proceedings of the IEEE*, vol. 83, no. 2, February 1995, pp. 158–173.
- CHAPMAN, R. C. (Editor), "The SLC96 Subscriber Loop Carrier System," *AT&T Bell Laboratories Technical Journal*, vol. 63, no. 10, Part 2, December 1984, pp. 2273–2437.
- CHESTER, D. B., "Digital IF Filter Technology for 3G Systems: An Introduction," *IEEE Communications Magazine*, vol. 37, February 1999, pp. 102–107.
- CHILDERS, D. G., *Probability and Random Processes Using MATLAB*, Irwin, Chicago, CL, 1997.
- CHILDERS, D., and A. DURLING, *Digital Filtering and Signal Processing*, West Publishing Company, New York, 1975.
- CHORAFAS, D. N., *Telephony, Today and Tomorrow*, Prentice-Hall, Englewood Cliffs, NJ, 1984.
- CLARK, G. C., and J. B. CAIN, *Error-Correction Coding for Digital Communications*, Plenum Publishing Corporation, New York, 1981.
- CONKLING, C., "Fractional-N Synthesizers Trim Current, Phase Noise," *Microwaves and RF*, February 1998, pp. 126–134.
- COOPER, G. R., and C. D. MCGILLEM, *Modern Communications and Spread Spectrum*, McGraw-Hill Book Company, New York, 1986.
- COUCH, L. W., "A Study of a Driven Oscillator with FM Feedback by Use of a Phase-Lock-Loop Model," *IEEE Transactions on Microwave Theory and Techniques*, vol. MTT-19, no. 4, April 1971, pp. 357–366.

- COUCH, L. W., *Digital and Analog Communication Systems*, 4th ed., Macmillan Publishing Company, New York, 1993.
- COUCH, L. W., *Modern Communications Systems*, Prentice Hall, Upper Saddle River, NJ, 1995.
- COURANT, R., and D. HILBERT, *Methods of Mathematical Physics*, Vol. 1, Wiley-Interscience, New York, 1953.
- DAMMANN, C. L., L. D. McDANIEL, and C. L. MADDOX, "D2 Channel Bank—Multiplexing and Coding," *Bell System Technical Journal*, vol. 51, October 1972, pp. 1675–1700.
- DAVENPORT, W. B., JR., and W. L. ROOT, *An Introduction to the Theory of Random Signals and Noise*, McGraw-Hill Book Company, New York, 1958.
- DAVIDOFF, M. R., *Satellite Experimenter's Handbook*, 2d ed., American Radio Relay League, Newington, CT, 1990.
- DAVIS, D. W., and D. L. A. BARBER, *Communication Networks for Computers*, John Wiley & Sons, New York, 1973.
- DAVIS, T. A., *MATLAB Primer*, 8th ed., CRC Press, Boca Raton, FL, 2011.
- DEANGELO, J., "New Transmitter Design for the 80's," *BM/E (Broadcast Management/Engineering)*, vol. 18, March 1982, pp. 215–226.
- DECINA, M., and G. MODENA, "CCITT Standards on Digital Speech Processing," *IEEE Journal on Selected Areas of Communications*, vol. 6, February 1988, pp. 227–234.
- DEFFEBACH, H. L., and W. O. FROST, "A Survey of Digital Baseband Signaling Techniques," *NASA Technical Memorandum NASATM X-64615*, June 30, 1971.
- DEJAGER, F., "Delta Modulation, A Method of PCM Transmission Using a 1-Unit Code," *Phillips Research Report*, no. 7, December 1952, pp. 442–466.
- DEJAGER, F., and C. B. DEKKER, "Tamed Frequency Modulation: A Novel Method to Achieve Spectrum Economy in Digital Transmission," *IEEE Transactions on Communications*, vol. COM-26, May 1978, pp. 534–542.
- DESHPANDE, G. S., and P. H. WITTK, "Correlative Encoding of Digital FM," *IEEE Transactions on Communications*, vol. COM-29, February 1981, pp. 156–162.
- DHAKE, A. M., *Television Engineering*, McGraw-Hill Book Company, New Delhi, India, 1980.
- DIXON, R. C., *Spread Spectrum Systems*, 3d ed., John Wiley & Sons, New York, 1994.
- DORF, R. C. (Editor-in-Chief), *The Electrical Engineering Handbook*, CRC Press, Boca Raton, FL, 1993.
- DORF, R. C. (Editor), *The Engineering Handbook*, CRC Press, Boca Raton, FL, 1996.
- EDELSON, B. I., and A. M. WERTH, "SPADE System Progress and Application," *COM-SAT Technical Review*, Spring 1972, pp. 221–242.
- EILERS, C. G., "TV Multichannel Sound—The BTSC System," *IEEE Transactions on Consumer Electronics*, vol. CE-31, February 1985, pp. 1–7.
- EVANS, J. V., "Satellite Systems for Personal Communications," *Proceedings of the IEEE*, vol. 86, no. 7, July 1998, pp. 1325–1341.
- FASHANO, M., and A. L. STRODTBECK, "Communication System Simulation and Analysis with SYSTID," *IEEE Journal on Selected Areas of Communications*, vol. SAC-2, January 1984, pp. 8–29.
- FEHER, K., *Digital Communications—Satellite/Earth Station Engineering*, Prentice Hall, Englewood Cliffs, NJ, 1981.
- FELLER, W., *An Introduction to Probability Theory and Its Applications*, John Wiley & Sons, New York, 1957, p. 168.

- FIKE, J. L., and G. E. FRIEND, *Understanding Telephone Electronics*, 2d ed., Texas Instruments, Dallas, 1984.
- FINK, D. G., and H. W. BEATY (Editors), *Standard Handbook for Electrical Engineers*, McGraw-Hill Book Company, New York, 1978.
- FLANAGAN, J. L., M. R. SCHROEDER, B. S. ATAL, R. E. CROCHIERE, N. S. JAYANT, and J. M. TRIBOLET, "Speech Coding," *IEEE Transactions on Communications*, vol. COM-27, April 1979, pp. 710-737.
- FOLEY, J., "Iridium: Key to World Wide Cellular Communications," *Telecommunications*, vol. 25, October 1991, pp. 23-28.
- FORNEY, G. D., "The Viterbi Algorithm," *Proceedings of the IEEE*, vol. 61, March 1973, pp. 268-273.
- FORNEY, G. D., L. BROWN, M. V. EYUBOGLU, and J. L. MORAN, "The V.34 High-Speed Modem Standard," *IEEE Communications Magazine*, vol. 34, December 1996, pp. 28-33.
- FROHNE, R., "A High-Performance, Single-Signal, Direct-Conversion Receiver with DSP Filtering," *QST*, vol. 82, April 1998, pp. 40-46.
- GALLAGHER, R. G., *Information Theory and Reliable Communications*, John Wiley & Sons, New York, 1968.
- GARDNER, F. M., *Phaselock Techniques*, 2d ed., John Wiley & Sons, New York, 1979.
- GARDNER, F. M., and W. C. LINDSEY (Guest Editors), Special Issue on Synchronization, *IEEE Transactions on Communications*, vol. COM-28, no. 8, August 1980.
- GARG, V. K., *IS-95 CDMA and cdma 2000*, Prentice Hall PTR, Upper Saddle River, NJ, 2000.
- GARG, V. K., and J. E. WILKES, *Principles and Applications of GSM*, Prentice Hall PTR, Upper Saddle River, NJ, 1999.
- GERSHO, A., "Advances in Speed and Audio Compression," *Proceedings of the IEEE*, vol. 82, no. 6, June 1994, pp. 900-912.
- GERSHO, A., "Charge-Coupled Devices: The Analog Shift Register Comes of Age," *IEEE Communications Society Magazine*, vol. 13, November 1975, pp. 27-32.
- GERSON, I. A., and M. A. JASIUK, "Vector Sum Excited Linear Prediction (VSELP) Speech Coding at 8kb/s," *International Conference on Acoustics, Speech, and Signal Processing*, Albuquerque, NM, April 1990, pp. 461-464.
- GIBSON, J. D., Editor, *The Communications Handbook*, CRC Press, Inc., Boca Raton, FL, 1997.
- GLISSON, T. L., *Introduction to System Analysis*, McGraw-Hill Book Company, New York, 1986.
- GOLDBERG, R. R., *Fourier Transforms*, Cambridge University Press, New York, 1961.
- GOLOMB, S. W. (Editor), *Digital Communications with Space Applications*, Prentice Hall, Englewood Cliffs, NJ, 1964.
- GOODMAN, D. J., "Trends in Cellular and Cordless Communication," *IEEE Communications Magazine*, vol. 29, June 1991, pp. 31-40.
- GORDON, G. D., and W. L. MORGAN, *Principles of Communication Satellites*, Wiley-Interscience, New York, 1993.
- GRIFFITHS, J., *Radio Wave Propagation and Antennas*, Prentice Hall, Englewood Cliffs, NJ, 1987.
- GRUBB, J. L., "The Traveller's Dream Come True," *IEEE Communications Magazine*, vol. 29, November 1991, pp. 48-51.
- GULSTAD, K., "Vibrating Cable Relay," *Electrical Review* (London), vol. 42, 1898; vol. 51, 1902.
- GUPTA, S. C., "Phase Locked Loops," *Proceedings of the IEEE*, vol. 63, February 1975, pp. 291-306.
- HA, T. T., *Digital Satellite Communications*, Macmillan Publishing Company, New York, 1986.
- HA, T. T., *Digital Satellite Communications*, 2d ed., John Wiley & Sons, New York, 1989.

- HAMMING, R. W., "Error Detecting and Error Correcting Codes," *Bell System Technical Journal*, vol. 29, April 1950, pp. 147–160.
- HÄNDEL, R., and M. N. HUBER, *Integrated Broadband Networks*, Addison-Wesley Publishing Company, Reading, MA, 1991.
- HANSELMAN, D., and B. LITTLEFIELD, *Mastering MATLAB 7*, Pearson Prentice Hall, Upper Saddle River, NJ, 2011.
- HARRIS, A., "The New World of HDTV," *Electronics Now*, vol. 64, May 1993, pp. 33–40 and p. 72.
- HARRIS, F. J., "On the Use of Windows for Harmonic Analysis with the Discrete Fourier Transform," *Proceedings of the IEEE*, vol. 66, January 1978, pp. 51–83.
- HARRIS, F. J., "The Discrete Fourier Transform Applied to Time Domain Signal Processing," *IEEE Communications Magazine*, vol. 20, May 1982, pp. 13–22.
- HARTLEY, R. V., "Transmission of Information," *Bell System Technical Journal*, vol. 27, July 1948, pp. 535–563.
- HAUS, H. A., Chairman IRE Subcommittee 7.9 on Noise, "Description of Noise Performance of Amplifiers and Receiving Systems," *Proceedings of the IEEE*, vol. 51, no. 3, March 1963, pp. 436–442.
- HAYKIN, S., *Communication Systems*, 2d ed., John Wiley & Sons, New York, 1983.
- HOFMANN, F., C. HANSEN, and W. SCHÄFER, "Digital Radio Mondiale (DRM) Digital Sound Broadcasting in the AM Bands," *IEEE Transactions on Broadcasting*, vol. 49, September 2003, pp. 319–328.
- HOLMES, J. K., *Coherent Spread Spectrum Systems*, Wiley-Interscience, New York, 1982.
- HOPKINS, R., "Digital Terrestrial HDTV for North America: The Grand Alliance HDTV System," *IEEE Transactions on Consumer Electronics*, vol. 40, no. 3, August 1994, pp. 185–198.
- HSING, T. R., C. CHEN, and J. A. BELLISIO, "Video Communications and Services in the Copper Loop," *IEEE Communications Magazine*, vol. 31, January 1993, pp. 62–68.
- HSU, H. P., "Chapter 2—Sampling," *The Mobile Communications Handbook*, 2d ed., (J. D. Gibson, Editor), CRC Press, Boca Raton, FL, 1999, pp. 2.1–2.10.
- HUANG, D. T., and C. F. VALENTI, "Digital Subscriber Lines: Network Considerations for ISDN Basic Access Standard," *Proceedings of the IEEE*, vol. 79, February 1991, pp. 125–144.
- IPATOV, V., *Spread Spectrum and CDMA: Principles and Applications*, John Wiley & Sons, New York, 2005.
- IRMER, T., "An Overview of Digital Hierarchies in the World Today," *IEEE International Conference on Communications*, San Francisco, June 1975, pp. 16–1 to 16–4.
- IRWIN, J. D., *Basic Engineering Circuit Analysis*, Macmillan Publishing Company, New York, 5th ed. 1995.
- IRWIN, J. D., and R. M. Nelms, *Basic Engineering Circuit Analysis*, 10th ed., John Wiley & Sons, New York, 2011.
- JACOBS, I., "Design Considerations for Long-Haul Lightwave Systems," *IEEE Journal on Selected Areas of Communications*, vol. 4, December 1986, pp. 1389–1395.
- JAMES, R. T., and P. E. MUENCH, "A.T.&T. Facilities and Services," *Proceedings of the IEEE*, vol. 60, November 1972, pp. 1342–1349.
- JAYANT, N. S., "Digital Encoding of Speech Waveforms," *Proceedings of the IEEE*, May 1974, pp. 611–632.
- JAYANT, N. S., "Coding Speech at Low Bit Rates," *IEEE Spectrum*, vol. 23, August 1986, pp. 58–63.
- JAYANT, N. S., and P. NOLL, *Digital Coding of Waveforms*, Prentice Hall, Englewood Cliffs, NJ, 1984.

- JENKINS, M. G., and D. G. WATTS, *Spectral Analysis and Its Applications*, Holden-Day, San Francisco, CA, 1968.
- JERRI, A. J., "The Shannon Sampling Theorem—Its Various Extensions and Applications: A Tutorial Review," *Proceedings of the IEEE*, vol. 65, no. 11, November 1977, pp. 1565–1596.
- JORDAN, E. C., and K. G. BALMAIN, *Electromagnetic Waves and Radiating Systems*, 2d ed., Prentice Hall, Englewood Cliffs, NJ, 1968.
- JURGEN, R. K., "High-Definition Television Update," *IEEE Spectrum*, vol. 25, April 1988, pp. 56–62.
- JURGEN, R. K., "The Challenges of Digital HDTV," *IEEE Spectrum*, vol. 28, April 1991, pp. 28–30 and 71–73.
- KAPLAN, E., *Understanding GPS: Principles and Applications*, Artech House, Norwood, MA, 2005.
- KAUFMAN, M., and A. H. SEIDMAN, *Handbook of Electronics Calculations*, McGraw-Hill Book Company, New York, 1979.
- KAY, S. M., *Modern Spectral Estimation—Theory and Applications*, Prentice Hall, Englewood Cliffs, NJ, 1986.
- KAY, S. M., and S. L. MARPLE, "Spectrum-Analysis—A Modern Perspective," *Proceedings of the IEEE*, vol. 69, November 1981, pp. 1380–1419.
- KAZAKOS, D., and P. PAPANTONI-KAZAKOS, *Detection and Estimation*, Computer Science Press, New York, 1990.
- KLAPPER, J., and J. T. FRANKLE, *Phase-Locked and Frequency-Feedback Systems*, Academic Press, New York, 1972.
- KRAUS, J. D., *Radio Astronomy*, 2d ed., Cygnus-Quasar Books, Powell, OH, 1986.
- KRAUSS, H. L., C. W. BOSTIAN, and F. H. RAAB, *Solid State Radio Engineering*, John Wiley & Sons, New York, 1980.
- KRETZMER, E. R., "Generalization of a Technique for Binary Data Communications," *IEEE Transactions on Communication Technology*, vol. COM-14, February 1966, pp. 67–68.
- LAM, S. S., "Satellite Packet Communications, Multiple Access Protocols and Performance," *IEEE Transactions on Communications*, vol. COM-27, October 1979, pp. 1456–1466.
- LANCASTER, D., "Hardware Hacker—Caller Number Delivery," *Radio-Electronics*, vol. 62, August 1991, pp. 69–72.
- LATHI, B. P., *Modern Digital and Analog Communication Systems*, 3rd ed., Oxford University Press, Inc., London, 1998.
- LEE, W. C. Y., "Elements of Cellular Mobile Radio Systems," *IEEE Transactions on Vehicular Technology*, vol. VT-35, May 1986, pp. 48–56.
- LEE, W. C. Y., *Mobile Cellular Telecommunications Systems*, McGraw-Hill Book Company, New York, 1989.
- LEIB, H., and S. PASUPATHY, "Error-Control Properties of Minimum Shift Keying," *IEEE Communications Magazine*, vol. 31, January 1993, pp. 52–61.
- LENDER, A., "The Duobinary Technique for High Speed Data Transmission," *IEEE Transactions on Communication Electronics*, vol. 82, May 1963, pp. 214–218.
- LENDER, A., "Correlative Level Coding for Binary-Data Transmission," *IEEE Spectrum*, vol. 3, February 1966, pp. 104–115.
- LI, V. O. K., and X. QUI, "Personal Communication Systems (PCS)," *Proceedings of the IEEE*, vol. 83, no. 9, September 1995, pp. 1210–1243.


- LIN, D. W., C. CHEN, and T. R. HSING, "Video on Phone Lines: Technology and Applications," *Proceedings of the IEEE*, vol. 83, no. 2, February 1995, pp. 175–192.
- LIN, S., and D. J. COSTELLO, JR., *Error Control Coding*, Prentice Hall, Englewood Cliffs, NJ, 1983.
- LINDSEY, W. C., and C. M. CHIE, "A Survey of Digital Phase-Locked Loops," *Proceedings of the IEEE*, vol. 69, April 1981, pp. 410–431.
- LINDSEY, W. C., and M. K. SIMON, *Telecommunication System Engineering*, Prentice Hall, Englewood Cliffs, NJ, 1973.
- LUCKY, R., "Through a Glass Darkly—Viewing Communication in 2012 from 1961," *Proceedings of the IEEE*, vol. 87, July 1999, pp. 1296–1300.
- LUCKY, R. W., and H. R. RUDIN, "Generalized Automatic Equalization for Communication Channels," *IEEE International Communication Conference*, vol. 22, 1966.
- LUCKY, R. W., J. SALZ, and E. J. WELDON, *Principles of Data Communication*, McGraw–Hill Book Company, New York, 1968.
- MANASSEWITSCH, V., *Frequency Synthesizers*, 3d ed., Wiley-Interscience, New York, 1987.
- MARAL, G., *VSAT Networks*, John Wiley & Sons, New York, 1995.
- MARKLE, R. E., "Single Sideband Triples Microwave Radio Route Capacity," *Bell Systems Laboratories Record*, vol. 56, no. 4, April 1978, pp. 105–110.
- MARKLE, R. E., "Prologue, The AR6A Single-Sideband Microwave Radio System," *Bell System Technical Journal*, vol. 62, December 1983, pp. 3249–3253. (The entire December 1983 issue deals with the AR6A system.)
- MARPLE, S. L., *Digital Spectral Analysis*, Prentice Hall, Englewood Cliffs, NJ, 1986.
- MC ELIECE, R. J., The Theory of Information and Coding (*Encyclopedia of Mathematics and Its Applications*, vol. 3), Addison-Wesley Publishing Company, Reading, MA, 1977.
- MCGILL, D. T., F. D. NATALI, and G. P. EDWARDS, "Spread-spectrum Technology for Commercial Applications," *Proceeding of the IEEE*, vol. 82, no. 4, April 1994, pp. 572–584.
- MELSA, J. L., and D. L. COHN, *Decision and Estimation Theory*, McGraw–Hill Book Company, New York, 1978.
- MENNIE, D., "AM Stereo: Five Competing Options," *IEEE Spectrum*, vol. 15, June 1978, pp. 24–31.
- MILLER, S. L., *Probability and Random Processes*, 2d ed., Academic Press, Maryland Heights, MD, 2012.
- MIYAOKA, S., "Digital Audio Is Compact and Rugged," *IEEE Spectrum*, vol. 21, March 1984, pp. 35–39.
- MOSSBERG, W. S., "In 4G Race, Verizon Pulls Ahead with Pricey Speed," *The Wall Street Journal*, January 6, 2011.
- MOTOROLA, "MC145500 Series PCM Codec-Filter Mono-Circuit," *Motorola Semiconductor Technical Data*, available from www.motorola.com, 1995.
- MOTOROLA, *Telecommunications Device Data*, Motorola Semiconductor Products, Austin, TX, 1985.
- MUMFORD, W. W., and E. H. SCHEIBE, *Noise Performance Factors in Communication Systems*, Horizon House-Microwave, Dedham, MA, 1968.
- MUROTO, K., "GMSK Modulation for Digital Mobile Radio Telephony," *IEEE Transactions on Communications*, vol. COM-29, July 1981, pp. 1044–1050.
- MURPHY, E., "Whatever Happened to AM Stereo?" *IEEE Spectrum*, vol. 25, March 1988, p. 17.
- NILSSON, J. W., *Electric Circuits*, 3d ed., Addison-Wesley Publishing Company, Reading, MA, 1990.
- NORTH, D. O., "An Analysis of the Factors which Determine Signal/Noise Discrimination in Pulsed-Carrier Systems," *RCA Technical Report*, PTR-6-C, June 1943; reprinted in *Proceedings of the IEEE*, vol. 51, July 1963, pp. 1016–1027.

- NYQUIST, H., "Certain Topics in Telegraph Transmission Theory," *Transactions of the AIEE*, vol. 47, February 1928, pp. 617–644.
- OKUMURA, Y., and M. SHINJI (Guest Editors), Special Issue on Mobile Radio Communications, *IEEE Communications Magazine*, vol. 24, February 1986.
- OLMSTED, J. M. H., *Advanced Calculus*, Appleton-Century-Crofts, New York, 1961.
- O'NEAL, J. B., "Delta Modulation and Quantizing Noise, Analytical and Computer Simulation Results for Gaussian and Television Input Signals," *Bell System Technical Journal*, vol. 45, January 1966 (a), pp. 117–141.
- O'NEAL, J. B., "Predictive Quantization (DPCM) for the Transmission of Television Signals," *Bell System Technical Journal*, vol. 45, May–June 1966(b), pp. 689–721.
- OPPENHEIM, A. V., and R. W. SCHAFER, *Digital Signal Processing*, Prentice Hall, Englewood Cliffs, NJ, 1975.
- OPPENHEIM, A. V., and R. W. SCHAFER, *Discrete-Time Signal Processing*, Prentice Hall, Englewood Cliffs, NJ, 1989.
- PADGETT, J. E., C. G. GUNTHER, and T. HATTORI, "Overview of Wireless Personal Communications," *IEEE Communications Magazine*, vol. 33, no. 1, January 1995, pp. 28–41.
- PANCHA, P., and M. EL ZARKI, "MPEG Coding of Variable Bit Rate Video Transmission," *IEEE Communications Magazine*, vol. 32, no. 5, May 1994, pp. 54–66.
- PANDHI, S. N., "The Universal Data Connection," *IEEE Spectrum*, vol. 24, July 1987, pp. 31–37.
- PANTER, P. F., *Modulation, Noise and Spectral Analysis*, McGraw–Hill Book Company, New York, 1965.
- PAPOULIS, A., *Probability, Random Variables and Stochastic Processes*, McGraw–Hill Book Company, New York, 2d ed., 1984, 3d ed., 1991.
- PARK, J. H., JR., "On Binary DPSK Detection," *IEEE Transactions on Communications*, vol. COM-26, April 1978, pp. 484–486.
- PASUPATHY, S., "Correlative Coding," *IEEE Communications Society Magazine*, vol. 15, July 1977, pp. 4–11.
- PEEBLES, P. Z., *Communication System Principles*, Addison-Wesley Publishing Company, Reading, MA, 1976.
- PEEBLES, P. Z., *Digital Communication Systems*, Prentice Hall, Englewood Cliffs, NJ, 1987.
- PEEBLES, P. Z., *Probability, Random Variables, and Random Signal Principles*, 3d ed., McGraw–Hill Book Company, New York, 1993.
- PEEK, J. B. H., "Communications Aspects of the Compact Disk Digital Audio System," *IEEE Communications Magazine*, vol. 23, February 1985, pp. 7–15.
- PERSONICK, S. D., "Digital Transmission Building Blocks," *IEEE Communications Magazine*, vol. 18, January 1980, pp. 27–36.
- PETAJAN, E., "The HDTV Grand Alliance System," *Proceedings of the IEEE*, vol. 83, no. 7, July 1995, pp. 1094–1105.
- PETERSON, R. L., R. E. ZIEMER, and D. E. BORTH, *Introduction to Spread-Spectrum Communications*, Prentice Hall, Upper Saddle River, NJ, 1995.
- PETERSON, W. W., and E. J. WELDON, *Error-Correcting Codes*, MIT Press, Cambridge, MA, 1972.
- PETTIT, R. H., *ECM and ECCM Techniques for Digital Communication Systems*, Lifetime Learning Publications (a division of Wadsworth, Inc.), Belmont, CA, 1982.
- PRATT, T., C. W. BOSTIAN, and J.E. ALLNUTT, *Satellite Communications*, John Wiley & Sons, 2d ed., Hoboken, NJ, 2003.

- PRITCHARD, W. L., and C. A. KASE, "Getting Set for Direct-Broadcast Satellites," *IEEE Spectrum*, vol. 18, August 1981, pp. 22-28.
- PROAKIS, J. G., *Digital Communications*, 3d ed., McGraw-Hill Book Company, New York, 1995.
- QURESHI, S., "Adaptive Equalization," *IEEE Communications Magazine*, vol. 20, March 1982, pp. 9-16.
- RAMO, S., J. R. WHINNERY, and T. VANDUZER, *Fields and Waves In Communication Electronics*, 3d ed., John Wiley & Sons, Inc., New York, 1994.
- RANA, A. H., J. MCCOSKEY, and W. CHECK, "VSAT Technology, Trends and Applications," *Proceedings of the IEEE*, vol. 78, July 1990, pp. 1087-1095.
- RAPPAPORT, T. S., "Characteristics of UHF Multipath Radio Channels in Factory Buildings," *IEEE Transactions on Antennas and Propagation*, vol. 37, August 1989, pp. 1058-1069.
- RAPPAPORT, T. S., *Wireless Communications, Principles and Practice*, 2d ed., Prentice Hall PTR, Upper Saddle River, NJ, 2002.
- REEVE, W. H., *Subscriber Loop Signaling and Transmission Handbook*, IEEE Press, New York, 1995.
- RHEE, M. Y., *CDMA Cellular Mobile Communications and Network Security*, Prentice Hall PTR, Upper Saddle River, NJ, 1998.
- RHEE, S. B., and W. C. Y. LEE (Editors), Special Issue on Digital Cellular Technologies, *IEEE Transactions on Vehicular Technology*, vol. 40, May 1991.
- RICE, S. O., "Mathematical Analysis of Random Noise," *Bell System Technical Journal*, vol. 23, July 1944, pp. 282-333 and vol. 24, January 1945, pp. 46-156; reprinted in *Selected Papers on Noise and Stochastic Processes*, N. Wax (Editor), Dover Publications, New York, 1954.
- RICE, S. O., "Statistical Properties of a Sine-Wave Plus Random Noise," *Bell System Technical Journal*, vol. 27, January 1948, pp. 109-157.
- ROOT, W. L., "Remarks, Mostly Historical, on Signal Detection and Signal Parameter Estimation," *Proceedings of the IEEE*, vol. 75, November 1987, pp. 1446-1457.
- ROWE, H. E., *Signals and Noise in Communication Systems*, D. Van Nostrand Company, Princeton, NJ, 1965.
- RYAN, J. S. (Editor), Special Issue on Telecommunications Standards, *IEEE Communications Magazine*, vol. 23, January 1985.
- SABIN, W. E., and E. O. SCHOENIKE, *Single-Sideband Systems and Circuits*, McGraw-Hill Book Company, New York, 1987.
- SALTZBERG, B. R., T. R. HSING, J. M. CIOFFI, and D. W. LIN (Editors), Special Issue on High-Speed Digital Subscriber Lines, *IEEE Journal on Selected Areas in Communications*, vol. 9, August 1991.
- SCHARF, L. L., *Statistical Signal Processing: Detection, Estimation, and Time Series Analysis*, Addison-Wesley Publishing Company, Reading, MA, 1991.
- SCHAUMANN, R., M. S. GHAUSI, and K. R. LAKER, *Design of Analog Filters*, Prentice Hall, Englewood Cliffs, NJ, 1990.
- SCHILLING, D. L., R. L. PICKHOLTZ, and L. B. MILSTEIN, "Spread Spectrum Goes Commercial," *IEEE Spectrum*, vol. 27, August 1990, pp. 40-45.
- SCHILLING, D. L., L. B. MILSTEIN, R. L. PICKHOLTZ, M. KULLBACK, and F. MILLER, "Spread Spectrum for Commercial Communications," *IEEE Communications Magazine*, vol. 29, April 1991, pp. 66-67.
- SCHWARTZ, B. K., "The Analog Display Services Interface," *IEEE Communications Magazine*, vol. 31, April 1993, pp. 70-75.
- SCHWARTZ, M., W. R. BENNETT, and S. STEIN, *Communication Systems and Techniques*, McGraw-Hill Book Company, New York, 1966.

- SHANMUGAN, K. S., *Digital and Analog Communication Systems*, John Wiley & Sons, New York, 1979.
- SHANMUGAN, K. S., and A. M. BREIPOHL, *Random Signals: Detection, Estimation and Data Analysis*, John Wiley & Sons, New York, 1988.
- SHANNON, C. E., "A Mathematical Theory of Communication," *Bell System Technical Journal*, vol. 27, July 1948, pp. 379–423, and October 1948, pp. 623–656.
- SHANNON, C. E., "Communication in the Presence of Noise," *Proceedings of the IRE*, vol. 37, January 1949, pp. 10–21. (Reprinted in *Proceedings of the IEEE*, vol. 86, no. 2, February 1998, pp. 447–457.)
- SIMON, M. K., "Comments on 'On Binary DPSK Detection,'" *IEEE Transactions on Communications*, vol. COM-26, October 1978, pp. 1477–1478.
- SINNEMA, W., and R. MCPHERSON, *Electronic Communications*, Prentice Hall Canada, Inc., Scarborough, Ontario, Canada, 1991.
- SIPERKO, C. M., "LaserNet—A Fiber Optic Intrastate Network (Planning and Engineering Considerations)," *IEEE Communications Magazine*, vol. 23, May 1985, pp. 31–45.
- SKLAR, B., *Digital Communications*, 2d ed., Prentice Hall PTR, Upper Saddle River, NJ, 2001.
- SKLAR, B., "Rayleigh Fading Channels in Mobile Digital Communications Systems—Part 1: Characterization," *IEEE Communications Magazine*, vol. 35, September 1997, pp. 136–146.
- SKLAR, B., "A Primer on Turbo Code Concepts," *IEEE Communications Magazine*, vol. 35, December 1997, pp. 94–101.
- SLEPIAN, D., "On Bandwidth," *Proceedings of the IEEE*, vol. 64, no. 3, March 1976, pp. 292–300.
- SMITH, B., "Instantaneous Companding of Quantized Signals," *Bell System Technical Journal*, vol. 36, May 1957, pp. 653–709.
- SMITH, J. R., *Modern Communication Circuits*, McGraw–Hill Book Company, New York, 2d ed., 1998.
- SOLOMON, L., "The Upcoming New World of TV Reception," *Popular Electronics*, vol. 15, no. 5, May 1979, pp. 49–62.
- SPANIAS, A. S., "Speech Coding: A Tutorial Review," *Proceedings of the IEEE*, vol. 82, no. 10, October 1994, pp. 1541–1582.
- SPILKER, J. J., *Digital Communications by Satellite*, Prentice Hall, Englewood Cliffs, NJ, 1977.
- STALLINGS, W., *Data and Computer Communications*, 5th ed., Prentice Hall, Upper Saddle River, NJ, 1996.
- STALLINGS, W., *ISDN and Broadband ISDN*, Macmillan Publishing Company, New York, 1992.
- STARK, H., F. B. TUTEUR, and J. B. ANDERSON, *Modern Electrical Communications*, Prentice Hall, Englewood Cliffs, NJ, 1988.
- STIFFLER, J. J., *Theory of Synchronous Communication*, Prentice Hall, Englewood Cliffs, NJ, 1971.
- STUMPERS, F. L., "Theory of Frequency—Modulation Noise," *Proceedings of the IRE*, vol. 36, September 1948, pp. 1081–1092.
- SUNDE, E. D., *Communications Engineering Technology*, John Wiley & Sons, New York, 1969.
- SWEENEY, P., *Error Control Coding*, Prentice Hall, Englewood Cliffs, NJ, 1991.
- TAUB, H., and D. L. SCHILLING, *Principles of Communication Systems*, 2d ed., McGraw–Hill Book Company, New York, 1986.
- THOMAS, J. B., *An Introduction to Statistical Communication Theory*, John Wiley & Sons, New York, 1969.
- THOMSON CONSUMER ELECTRONICS, Inc., *RCA Self-Installer Manual (for DSS Receiver System)*, Thomson Consumer Electronics, Inc., Indianapolis, IN, 1994.
- TORRIERI, D. J., *Principles of Spread-Spectrum Communication Systems*, Springer, New York, 2004.
- TURIN, G., "An Introduction to Digital Matched Filters," *Proceedings of the IEEE*, vol. 64, no. 7, July 1976, pp. 1092–1112.

- UNGERBOECK, G., "Channel Coding with Multilevel/Phase Signals," *IEEE Transactions on Information Theory*, vol. IT-28, January 1982, pp. 55–67.
- UNGERBOECK, G., "Trellis-Coded Modulation with Redundant Signal Sets," Parts 1 and 2, *IEEE Communications Magazine*, vol. 25, no. 2, February 1987, pp. 5–21.
- VAN DER ZIEL, A., *Noise in Solid State Devices and Circuits*, Wiley-Interscience, New York, 1986.
- VITERBI, A. J., "When Not to Spread Spectrum—A Sequel," *IEEE Communications Magazine*, vol. 23, April 1985, pp. 12–17.
- VITERBI, A. J., and J. K. OMURA, *Principles of Digital Communication and Coding*, McGraw-Hill Book Company, New York, 1979.
- WALDEN, R. H., "Performance Trends for Analog-to-Digital Converters," *IEEE Communications Magazine*, vol. 37, February 1999, pp. 96–101.
- WEAVER, D. K., "A Third Method of Generating and Detection of Single Sideband Signals," *Proceedings of the IRE*, vol. 44, December 1956, pp. 1703–1705.
- WEI, L., "Rotationally Invariant Convolutional Channel Coding with Expanded Signal Space—Part II: Nonlinear Codes," *IEEE Journal on Selected Areas in Communications*, vol. SAC-2, no. 2, September 1984, pp. 672–686.
- WHALEN, A. D., *Detection of Signals in Noise*, Academic Press, New York, 1971.
- WHITAKER, J. C. (Editor), *The Electronics Handbook*, CRC Press, Boca Raton, FL, 1996.
- WHITTAKER, E. T., "On Functions which Are Represented by the Expansions of the Interpolation Theory," *Proceedings of the Royal Society (Edinburgh)*, vol. 35, 1915, pp. 181–194.
- WIENER, N., *Extrapolation, Interpolation, and Smoothing of Stationary Time Series with Engineering Applications*, MIT Press, Cambridge, MA, 1949.
- WILSON, S. G., *Digital Modulation and Coding*, Prentice Hall, Upper Saddle River, NJ, 1996.
- WOZENCRAFT, J. M., and I. M. JACOBS, *Principles of Communication Engineering*, John Wiley & Sons, New York, 1965.
- WU, W. W., E. F. MILLER, W. L. PRITCHARD, and R. L. PICKHOLTZ, "Mobile Satellite Communication," *Proceedings of the IEEE*, vol. 82, no. 9, September 1994, pp. 1431–1448.
- WYLIE, C. R., JR., *Advanced Engineering Analysis*, John Wiley & Sons, New York, 1960.
- WYNER, A. D., and S. SHAMAI (SHITZ), "Introduction to ‘Communication in the Presence of Noise’ by C. E. Shannon," *Proceedings of the IEEE*, vol. 86, no. 2, February 1998, pp. 442–446.
- XIONG, F., "Modern Techniques in Satellite Communications," *IEEE Communications Magazine*, vol. 32, no. 8, August 1994, pp. 84–98.
- YOUNG, P. H., *Electronic Communication Techniques*, Merrill Publishing Co., Columbus, OH, 1990.
- ZIEMER, R. E., and R. L. PETERSON, *Digital Communications and Spread Spectrum Systems*, Macmillan Publishing Company, New York, 1985.
- ZIEMER, R. E., and W. H. TRANTER, *Principles of Communications*, 4th ed., John Wiley & Sons, Inc., New York, 1995.
- ZIEMER, R. E., W. H. TRANTER, and D. R. FANNIN, *Signals and Systems*, Prentice Hall, Upper Saddle River, NJ, 4th ed., 1998.
- ZOU, W. Y., "Comparison of Proposed HDTV Terrestrial Broadcasting Systems," *IEEE Transactions on Broadcasting*, vol. 37, December 1991, pp. 145–147.

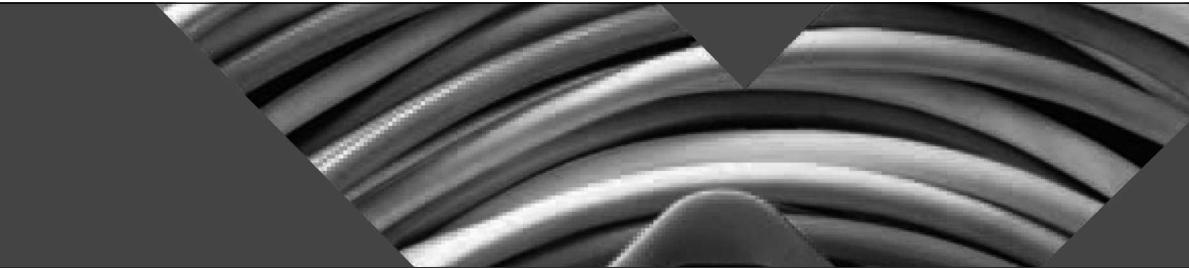

ANSWERS TO SELECTED PROBLEMS

NOTE: Detailed solutions for all problems listed below are given in the *Student Solutions Manual* that is available for free downloading from www.pearsonhighered.com/couch. or www.lcouch.us. Also, MATLAB solution files, downloaded from these same Web sites, are available for the problems listed below that have computer solutions.

Chapter 1

1–3 See *Student Solutions Manual*

1–6 1.97 bits

1–9 (a) 0.5 **(b)** 1 bit Also, see MATLAB file P1_09.m



1–10 $H = 3.084$ bits



1–12 $H = 3.32$ bits, $T = 1.11$ s



1–15 (a) 7 bits **(b)** 3,044 characters/sec Also, see MATLAB file P1_15.m



1–18 [1 1 0 1 1 0 0 1 1 1] Also, see MATLAB file P1_18.m

Chapter 2

2-1 See *Student Solutions Manual*

- 2-4** (a) See *Student Solutions Manual* (b) 3.18 volts 0.064 amps
 (c) 5 volts 0.1 amps (d) 0.5 watts

2-10 36 dB

2-11 (a) 4.08×10^{-14} W (b) -103.9 dBm (c) $1.75 \mu\text{V}$

$$\mathbf{2-15} \quad W(f) = \frac{e^{-\alpha} e^{-j2\pi f}}{\alpha + j2\pi f}$$

$$\mathbf{2-18} \quad S(f) = -\frac{A}{\omega^2} + Ae^{-j\omega T_0} \left(\frac{1}{\omega^2} + j\frac{T_0}{\omega} \right), \quad \text{where } \omega = 2\pi f$$

Note that $S(0) = A T_0^2/2$.



2-24 See MATLAB file P2_24.m



2-32 See MATLAB file P2_32.m



2-37 See *Student Solutions Manual*



- 2-42** (a) $(\sin 4t)/(4t)$ (b) 7

2-48 (a) -0.4545A (b) $0.9129A$

- 2-50** (a) $(A_1 + A_2)/\sqrt{2}$ (b) $(\sqrt{A_1^2 + A_2^2})/\sqrt{2}$ (c) $|A_2 - A_1|/\sqrt{2}$
 (d) $(\sqrt{A_1^2 + A_2^2})/\sqrt{2}$ (e) $(\sqrt{A_1^2 + A_2^2})/\sqrt{2}$

2-52 (a) See *Student Solutions Manual* (b) $\varphi_j(t)/\sqrt{8}$, $j = 1, 2, 3$

2-53 $w(t) = \sqrt{2} \varphi_1(t)' - \sqrt{2} \varphi_2(t)'$ where the prime denotes an orthonormal function

2-54 0.756

2-61 $c_n = (Ab/T) e^{-jn\omega(\tau_0+b/2)} \text{Sa}(n\pi b/T)$

$$\mathbf{2-64} \quad c_n = \begin{cases} \frac{AT^2}{2T_0}, & n = 0 \\ \frac{A\{e^{-j2\pi nT/T_0}[1 + j2\pi n(T/T_0)] - 1\}}{(2\pi n)^2/T_0}, & n \neq 0 \end{cases}$$



$$\mathbf{2-70} \quad \text{(a)} \quad c_n = \begin{cases} 0, & n = \text{even} \\ \frac{4}{n^2\pi^2}, & n = \text{odd} \end{cases} \quad \text{(b)} \quad \frac{1}{3} \text{W}$$

Also, see MATLAB file P2_70.m



2-72 See MATLAB file P2_72.m



2-80 200 Hz



2-84 See MATLAB file P2_84.m



2-87 See MATLAB file P2_87.m



2-90 (a) 6.28 ms (b) 160



2-92 See MATLAB file P2_92.m



- 2-100** (a) ∞ (b) $0.38/T_0$ (c) $1/(3T_0)$ (d) $1/T_0$

Chapter 3

3-3 $W_s(f) = d \sum_{n=-\infty}^{\infty} \frac{\sin \pi n d}{\pi n d} \begin{cases} 1, & |f - nf_s| \leq 2500 \\ \frac{-1}{1500} (|f - nf_s| - 4000), & 2500 \leq |f - nf_s| \leq 4000 \\ 0, & f \text{ elsewhere} \end{cases}$

where $d = 0.5$ and $f_s = 10,000$

See MATLAB file P3_03.m



3-4 $W_s(f) = 0.5 \left(\frac{\sin \pi \tau f}{\pi \tau f} \right) \sum_{k=-\infty}^{\infty} \begin{cases} 1, & |f - kf_s| \leq 2500 \\ \frac{-1}{1500} (|f - kf_s| - 4000), & 2500 \leq |f - kf_s| \leq 4000 \\ 0, & f \text{ elsewhere} \end{cases}$

where $\tau = 50 \times 10^{-6}$ and $f_s = 10,000$

See MATLAB file P3_04.m



3-7 $W_s(f) = -j \left(\frac{1 - \cos(\pi f/f_s)}{\pi f/f_s} \right) \times \sum_{k=-\infty}^{\infty} \begin{cases} 1, & |f - kf_s| \leq 2500 \\ \frac{-1}{1500} (|f - kf_s| - 4000), & 2500 \leq |f - kf_s| \leq 4000 \\ 0, & f \text{ elsewhere} \end{cases}$

See MATLAB file P3_07.m

3-9 (a) 200 samples/s (b) 9 bits/word (c) 1.8 kb/s (d) 900 Hz

3-12 (a) 5.12 MHz (b) 94.77 dB

3-16 (a) 5 bits (b) 27 kHz



3-20 See MATLAB file P3_20.m



3-24 $|W(f)| = \sum_{-\infty}^{\infty} (A/2) |\text{Sa}(n\pi/2)| \delta(f - (n/2)R)$

3-25 $|W(f)| = \sum_{-\infty}^{\infty} (3A/8) |\text{Sa}(3n\pi/8)| \delta(f - (n/2)R)$

3-29 (a) $\mathcal{P}(f) = \frac{A^2 T_b}{4} \left[\frac{\sin(\frac{1}{2} \pi f T_b)}{\frac{1}{2} \pi f T_b} \right]^2$ (b) $\mathcal{P}(f) = \frac{A^2 T_b}{4} \left[\frac{\sin(\frac{1}{4} \pi f T_b)}{\frac{1}{4} \pi f T_b} \right]^2 [\sin(\frac{1}{4} \pi f T_b)]^2$



3-31 See MATLAB file P3_31.m



3-39 (a) 32.4 kb/s (b) 10.8 ksymbols/s (c) 5.4 kHz

3-40 (a) 3.2 ksymbols/s (b) 0.5



3-43 (a) See MATLAB file P3_43.m (b) 500 Hz



3-47 See *Student Solutions Manual*



3-50 (a) 5.33 kb/s (b) 667 Hz

3-52 (a) 1200 baud (b) 600 Hz (c) 900 Hz

3-59 (a) 0.00534 (b) 0.427



3-61 See MATLAB file P3_61.m

3-63 (a) 6 kHz (b) $|W_s(f)| = f_s |\text{Sa}(\pi ft)| \sum_{-\infty}^{\infty} \left| \Pi((f - kf_s)/(2B)) + e^{j\pi T_s f} \Lambda((f - kf_s)/B) \right|$

3-66 See *Student Solutions Manual*

3-70 (a) 40 Hz (b) 1280 Hz

Chapter 4

4-3 $S(f) = -j25\delta(f - f_c - 1000) + j25\delta(f - f_c + 1000) - j25\delta(f + f_c - 1000) + j25\delta(f + f_c + 1000)$

4-9 (a) See *Student Solutions Manual*



(b) $v_2(t) = (A/\pi)\{\text{Si}[\pi B_T(t + (T/2))] - \text{Si}[\pi B_T(t - (T/2))]\} \cos(\omega_c t)$

Where the sine integral is defined by $\text{Si}(z) = \int_0^z \sin(t)/t dt$ [Zbramowitz and Stegun, 1965]

See MATLAB file P4_09.m



4-11 (a) 398 Hz For (b), (c), and (d) see MATLAB file P4_07.m

4-14 (a) $g(t) = 500 + 200 \sin \omega_a t$, AM, $m(t) = 0.4 \sin \omega_a t$

(b) $x(t) = 500 + 200 \sin \omega_a t$, $y(t) = 0$

(c) $R(t) = 500 + 200 \sin \omega_a t$, $\theta(t) = 0$

(d) 2.7 kW

4-15 (a) $S(f) = 250[\delta(f - f_c) + \delta(f + f_c)] + j50[\delta(f - f_c + f_a) - \delta(f - f_c - f_a) + \delta(f + f_c + f_a) - \delta(f + f_c - f_a)]$

(b) Same as (a) above



4-19 See MATLAB file P4_19.m



4-22 See MATLAB file P4_22.m

4-25 48.3%

4-28 $K \sqrt{m^2(t) + [\hat{m}(t)]^2}$, yes

4-33 0

4-35 (a) $(j2\pi f)/[j2\pi f + K_d K_v F_1(f)]$ (b) $(j2\pi f)(f_1 + jf)/[j2\pi f(f_1 + jf) + K_d K_v f_1]$

4-37 See *Student Solutions Manual*

4-42 (a) 107.6 MHz (b) RF: At least 96.81–96.99 MHz; IF: 10.61–10.79 MHz

(c) 118.3 MHz

4-47 (a) See *Student Solutions Manual* (b) 1990 Hz

Chapter 5

5-1 (a) 6.99 dBk (b) 707 V (c) 7025 W (d) 7025 W (e) 18,050 W

5-4 See *Student Solutions Manual*

5-6 $S(f) = \frac{1}{2} \left[\sum_{n=-\infty}^{\infty} c_n \delta(f - f_c - nf_m) + \sum_{n=-\infty}^{\infty} c_n^* \delta(f + f_c + nf_m) \right]$

where $c_n = \frac{A_c}{2\pi} \left[2\theta_1 \left(\frac{\sin n\theta_1}{n\theta_1} \right) + 2A_m \frac{\cos n\theta_1 \sin \theta_1 - n \sin n\theta_1 \cos \theta_1}{1 - n^2} \right]$,

$A_m = 1.2$, and $\theta_1 = 146.4^\circ$

5–10 (a) $s(t) = (\cos \omega_1 t + 2 \cos 2\omega_1 t) \cos \omega_c t$, where $\omega_1 = 1000\pi$

$$\begin{aligned}\text{(b)} \quad S(f) &= \frac{1}{4} [\delta(f - f_c + f_1) + \delta(f + f_c - f_1) + \delta(f - f_c - f_1) \\ &\quad + \delta(f + f_c + f_1)] + \frac{1}{2} [\delta(f - f_c + 2f_1) + \delta(f + f_c - 2f_1) \\ &\quad + \delta(f - f_c - 2f_1) + \delta(f + f_c + 2f_1)]\end{aligned}$$

(c) 1.25 W (d) 4.5 W

5–15 See *Student Solutions Manual*

5–17 (a) See *Student Solutions Manual*

$$\text{(b)} \quad s(t) = \Pi(t) \cos \omega_c t - \frac{1}{\pi} \ln \left(\frac{|t + \frac{1}{2}|}{|t - \frac{1}{2}|} \right) \sin \omega_c t \quad \text{(c)} \max[s(t)] = \infty$$



5–19 (a) See *Student Solutions Manual*

(b) See MATLAB file P5_19.m



5–27 See MATLAB file P5_27.m



5–30 (a) $f_{\text{BPF}} = 12.96 \text{ MHz}$, $B_{\text{BPF}} = 48.75 \text{ kHz}$

(b) 7.96 or 17.96 MHz

(c) 9.38 kHz



5–32 (a) $m(t) = 0.2 \cos(2000\pi t)$, $M_p = 0.2 \text{ V}$, $f_m = 1 \text{ kHz}$

(b) $m(t) = -0.13 \sin(2000\pi t)$, $M_p = 0.13 \text{ V}$, $f_m = 1 \text{ kHz}$

(c) $P_{\text{AV}} = 2500 \text{ W}$, $P_{\text{PEP}} = 2500 \text{ W}$



5–37 See MATLAB file P5_37.m



5–38 $S(f) = \frac{1}{2} [G(f - f_c) + G^*(-f - f_c)]$, where

$$G(f) = \sum_{n=-\infty}^{\infty} J_n(0.7854) \delta(f - nf_m), f_c = 146.52 \text{ MHz}, \\ \text{and } f_m = 1 \text{ kHz}, B = 3.57 \text{ kHz}$$

5–42 $S(f) = \frac{1}{2} \left[\sum_{n=-\infty}^{\infty} c_n \delta(f - f_c - nf_m) + \sum_{n=-\infty}^{\infty} c_n^* \delta(f + f_c + nf_m) \right]$, where

$$c_n = 5 \left(e^{j\beta-1} \right) \left(\frac{\sin(n\pi/2)}{n\pi/2} \right), f_m = 1 \text{ kHz}, \beta = 0.7854, \text{ and } f_c = 60 \text{ MHz}$$

5–46 (a) 5.5 Hz

$$\text{(b)} \quad S(f) = \frac{A_c}{2} \left\{ \delta(f - f_c) + \delta(f + f_c) + \frac{D_f}{2\pi} \sum_{n=0}^{\infty} \left(\frac{c_n}{nf_m} \right) \right. \\ \times \left. [\delta(f - f_c - nf_m) - \delta(f + f_c - nf_m)] \right\},$$

$$\text{where } c_n = 5e^{-jn\pi/2} \left(\frac{\sin(n\pi/2)}{n\pi/2} \right) \quad (n \neq 0, c_0 = 0)$$

$$D_f = 6.98 \text{ rad/V-s}, f_m = 100 \text{ Hz}, \text{ and } f_c = 30 \text{ MHz}$$

5–49 $\mathcal{P}(f) \approx 0.893 [2\delta(f - f_c + 5f_0) + \delta(f - f_c + 3f_0)$

$$\begin{aligned}&+ \delta(f - f_c - f_0) + 2\delta(f - f_c + 3f_0) + \delta(f - f_c - 5f_0) \\ &+ 2\delta(f + f_c - 5f_0) + \delta(f + f_c - 3f_0) + \delta(f + f_c + f_0) \\ &+ 2\delta(f + f_c + 3f_0) + \delta(f + f_c + 5f_0)]\end{aligned}$$

$$\text{where } f_0 \triangleq \frac{D_f}{2\pi} = 15.9 \text{ kHz and } f_c = 2 \text{ GHz}$$

5-52 (a) 20 kHz (b) $S(f) = \frac{1}{2}[M_1(f - f_c) + M_1(f + f_c)] + \frac{j}{2}[M_2(f + f_c) - M_2(f - f_c)]$

5-53 (a) $S(f) = \frac{1}{2}[X(f - f_c) + X^*(-f - f_c)],$

where $X(f) = \frac{A_c}{2} \sum_{n=-\infty}^{\infty} \left(\frac{\sin(n\pi/2)}{n\pi/2} \right) \delta(f - \frac{1}{2}nR), R = 24 \text{ kb/s}$

(b) 48 kHz



5-57 See MATLAB file P5_57.m



5-62 (a) 96 kHz (b) 101 kHz



5-67 (a) 0.6 (b) no



5-68 (a) See *Student Solutions Manual* (b) See MATLAB file P5_68.m



5-77 (a) $-45^\circ, +45^\circ, +135^\circ, -135^\circ, -45^\circ, -45^\circ, -45^\circ$ (b) 1.13 Mb/s



5-82 See MATLAB file P5_82.m



5-84 (a) See *Student Solutions Manual* (b) See MATLAB file P5_84.m



5-90 See *Student Solutions Manual*

Chapter 6

6-2 (a) $\bar{x} = (2\sqrt{2}A/\pi) \cos(\omega_0 t + \pi/4)$ (b) $x(t)$ is not stationary

6-5 $2/\sqrt{\pi} = 1.128$

6-9 (a) 15 W (b) 11 W (c) 19 W



6-11 (a) No (b) Yes (c) Yes (d) No



6-13 $B_{\text{rms}} = 0.170 \text{ Hz}$ See MATLAB file P6_13.m



6-18 (a) \sqrt{B} (b) $R_x(\tau) = B[(\sin \pi B\tau)/(\pi B\tau)]^2$



6-22 (a) $(2/N_0) R_{xy}(\tau)$ (b) $(2/N_0) \mathcal{P}_{xy}(f)$



6-25 (a) $N_0 K^2 / (8\pi^2 f^2)$ (b) ∞



6-29 $1/(2\pi f_0)$



6-34 (a) $H(f) = 10/\left[\left(1 + j\frac{f}{f_0}\right)^2\right]$ (b) $0.690 f_0$, where $f_0 = 1/(2\pi RC)$



6-37 (a) $t_2 - t_1 = \tau = \pm n/2, n = 0, 1, 2, \dots$ (b) See *Student Solutions Manual*



6-39 (a) Not WSS



6-40 $\mathcal{P}_x(f) = \frac{A_0^2}{4} [\delta(f - f_0) + \delta(f + f_0)]$



6-41 Yes



6-43 See MATLAB file P6_43.m



6-45 (a) $\mathcal{P}_v(f) = \begin{cases} 100[\mathcal{P}_x(f - f_c) + \mathcal{P}_x(f + f_c)], & |f| > f_c \\ 0, & f \text{ elsewhere} \end{cases}$ (b) 1000 kW



6-49 $x(t) = m_1(t) + m_2(t), y(t) = \hat{m}_1(t) - \hat{m}_2(t)$



$\mathcal{P}_{m_1}(f) = A\Pi\left(\frac{f}{2(f_3 - f_c)}\right), \mathcal{P}_{m_2}(f) = A\Lambda\left(\frac{f}{f_c - f_1}\right)$



6-52 $\mathcal{P}_v(t) = \frac{1}{4} [\mathcal{P}_x(f - f_c) + \mathcal{P}_x(-f - f_c)],$



where $\mathcal{P}_x(f) = T_b \left(\frac{1 - \cos \pi f T_b}{\pi f T_b} \right)^2$



6-56 See MATLAB file P6_56.m

$$\text{6-58 (a)} \quad y(t) = \begin{cases} \frac{1}{2}, & t = 0 \\ 1, & 0 < t < T \\ \frac{1}{2}, & t = T \\ 0, & t \text{ elsewhere} \end{cases}$$

(b) Same pulse shape as for part (a)



6-59 See MATLAB file P6_59.m

Chapter 7

7-1 $P_e = \frac{1}{2} e^{-\sqrt{2}A/\sigma_0}$

7-6 (a) $Q(\sqrt{0.5(S/N)_{\text{in}}})$ (b) See MATLAB file P7_06.m



7-9 (a) $Q(\sqrt{0.92656(E_b/N_0)})$ (b) and (c) See MATLAB file P7_09.m



7-12 (a) $Q(\sqrt{0.25(E_b/N_0)})$ (b) See MATLAB file P7_12.m



7-15 (a) $H(f) = Te^{-j\pi fT} \left(\frac{\sin \pi fT}{\pi fT} \right)$ (b) $B_{\text{eq}} = 1/(2T)$

7-17 $P_e = P(1)Q\left(\sqrt{\frac{2(-V_T + A)^2T}{N_0}}\right) + P(0)Q\left(\sqrt{\frac{2(V_T + A)^2T}{N_0}}\right)$



7-21 (a) $Q\left(\pm\sqrt{\frac{A^2\cos^2(\theta_e)}{2N_0B}}\right)$



(b) $Q\left(\pm\sqrt{2\left(\frac{E_b}{N_0}\right)\cos^2(\theta_e)}\right)$

(c) See MATLAB file P7_21.m

7-22 (a) 5×10^{-7} (b) 4.42×10^{-2}

7-23 (a) 2400 b/s (b) $(P_e)_{\text{overall}} = 1.11 \times 10^{-14}$

7-29 3.2×10^{-7}

7-33 (a) 4800 b/s (b) 19,943 b/s

7-34 (a) 9.09×10^{-4} (b) 29.1 dB



7-36 See MATLAB file P7_36.m



7-37 11.3 dB inferior

7-44 -100.9 dBm

7-49 (a) 651% (b) Low-frequency components predominate

7-51 $(S/N)_{\text{out}} = (5 \times 10^{-5})(P_s/N_0)$ for all five channels

Chapter 8

8-1 253.8 Mb/s

8-5 See *Student Solutions Manual*



8-9 (a) 25.6 dB (b) 36.3 W (c) -54.9 dBm



8-14 See MATLAB file P8_14.m

8-17 $G_a = \frac{h_{fe}^2 R_s}{h_{oe}(R_s + h_{ie})^2}$

8-21 (a) 129 K (b) -76.6 dBm

8-23 3.2×10^{-7}

8-26 (a) 19.8 dB (b) 7.52 dB (c) 4.67 dB

8-30 (a) 1598 K (b) 7.75 dB (c) 0.022 W



See MATLAB file P8_30.m

8-32 54%, 74.4%

8-36 (a) 42 dB/K (b) 42 dB/K (c) 42 dB/K



See MATLAB file P8_36.m

8-38 12.84 m diameter

8-42 At 2 miles: (a) -49.7 dBm (b) -58.7 dBm (c) -67.8 dBm

8-46 20.6 kW

8-49 See *Student Solutions Manual*

Appendix B

B-1 0.3486

B-2 (a) 5/36 (b) 15/36

B-4 1/2

B-5 1/3

B-9 0.4375

B-12 (a) b (b) $1/b$ (c) $1/b^2$



B-17 See MATLAB file PB_17.m

B-23 51.0

B-30 (a) 1.337×10^{-11} (b) 0.9520

$$\text{B-34 } f(y) = \begin{cases} \frac{1}{2\sigma\sqrt{2\pi}y} \left[e^{-(\sqrt{y}+m)^2/(2\sigma^2)} + e^{-(\sqrt{y}-m)^2/(2\sigma^2)} \right], & y \geq 0, \\ 0, & y < 0 \end{cases}$$



B-38 See MATLAB file PB_38.m

B-40 $B\sigma/\sqrt{2\pi}$

B-42 (a) 1/6 (b) Yes (c) 1/12

$$\text{(d) } f(x_2|x_1) = \begin{cases} \frac{1}{12}(1+x_2), & 0 \leq x_1 \leq 1, \quad 0 \leq x_2 \leq 4 \\ 0, & \text{otherwise} \end{cases}$$



B-45 See MATLAB file PB_45.m



B-52 See MATLAB file PB_52.m



B-54 (a) $f_y(y) = \int_{-\infty}^{\infty} \frac{1}{|Ax|} f_x\left(\frac{y}{Ax}, x\right) dx$ (b) $f_y(y) = \int_{-\infty}^{\infty} \frac{1}{|Ax|} f_{x_1}\left(\frac{y}{Ax}\right) f_{x_2}(x) dx$

INDEX

A

ABC, 649
Absolute bandwidth, 105, 189, 190, 444
Absolute value, 713
Absolutely bandlimited waveform, 90
Absorption, 586
Access. *See also specific types of*
code-division, 590, 628
data multiple, 589–595
demand-assigned multiple-, 590
fixed-assigned multiple-, 590
frequency-division multiple, 590
multiple, 590, 591
space-division multiple, 590
spread-spectrum multiple, 590
telephone signal multiple, 589–595
time-division multiple, 590, 628
Acknowledgment (ACK), 20

Actual power spectral density, maximum, 601
Adaptive delta modulation (ADM), 203–204
Adaptive filter, 187
Adaptive pulse code modulation
(ADPCM), 152
Additional temperature, 604
Additive Gaussian noise (AWGN), 357
Advanced Mobile Phone System (AMPS),
624–626
Advanced Television System Committee
(ATSC), 652
A-law compounding, 154–155
Algorithm. *See also specific types of*
decoding, 24
reconstruction, 93
soft-decision, 24
step-size, 203
Aliasing, 137
Aliasing effect, 100
Aliasing folding, 95
All bandpass waveform, 238
ALOHA technique, 594
Alternate mark inversion (AMI), 165
AM-to-PM conversion, 250
Amplifiers
categories of, 263–264
classification of, 258–259
low-noise, 610
Amplitude, constant, 252
Amplitude distortion, 87
Amplitude modulation (AM), 10, 240, 241,
246–247, 313, 314–319, 315–316
digital, 320–321
with envelope detection, 533–535
power of, 318
with product detection, 532–532
technical standards, 319–320
Amplitude response, 83

Amplitude shift keying (ASK), 353
 Analog circuit, 283
 information source, 5
 phase-locked loop, 283
 switching, 577
 techniques, 436
 waveform, 6, 132, 162
 Analog communication systems, 6
 amplitude modulation systems, 532–535
 baseband systems, comparison with, 531–532
 black-and-white television, 630–637
 color television, 637–641
 comparison of, 548–550
 double-sideband suppressed carrier systems, 535
 frequency modulation systems, 540–547
 ideal system performance, 548–550
 output signal-to-noise ratios for, 530–547
 phase modulation systems, 536–540
 single sideband systems, 535–536
 Analog-to-digital conversion (ADC), 9, 145, 198, 297–298
 Analytic function, 90
 Analyzing communication systems, 723
 Angle-modulated signals, 331, 336–341, 346
 Angle-modulated systems, 346–348
 Antennas, 586–587
 Antipodal signal, 493
 Aperture, 141
 Approximate envelope, 345
 Approximation, 343, 345
 Arbitrary waveform generators (AWG), 290
 Armstrong method, 341
ARRL Handbook, 8, 17, 297, 298
 A service, 624
 Asymmetric sideband signals, 324–330
 single, 324–328
 vestigial, 328–330
 Asymmetrical digital subscriber line (ADSL), 578
 Asymptotically unbiased periodogram, 437
 Asynchronous lines, 210–212
 AT&T, 575, 624, 628, 629, 649
 Audio distortion, 89
 Audio mixer, 268
 Autocorrelation function, 65–67, 80, 420, 424
 of Fourier transform, 426
 normalized-data, 434
 output, 439
 of waveform, 390
 Automatic gain control (AGC), 275, 496
 Automatic repeat request (ARQ), 20
 Automatic teller machines, 594
 Autoregressive (AR) model, 437
 Autoregressive-moving average (ARMA) model, 437

Available noise power, 601
 Available power gain, 603
 Available power spectral density, 601
 Avalanche photodiode (APD), 619
 Average, 692–693
 Average effective input-noise temperature, 605
 Average information source, 18
 Average noise figure, 603
 Average power, 38, 40, 548
 noise, 149
 normalized, 316, 326
 signal, 149
 of waveforms, 38–40
 Average-signal-to-average-noise ratio, 529

B

Balanced discriminator, 278
 Band mixer, single-sided, 267
 Bandlimiting
 digital signal processing, 93–95
 dimensionality theorem, 95–97
 impulse sampling, 93–95
 sampling theorem, 90–93
 signals and noise, 89–97
 waveforms, 90
 white Gaussian-noise process, 450
 Bandpass, 9, 238
 digital communication signal, 132
 dimensionality theorem, 253–254
 limiter, 265
 noise, white, 457–458
 random process, 476
 sampling theorem, 252–254, 253
 signaling, 237, 241–245
 transmission, 252
 wide-sense stationary process, 445
 Bandpass binary signals
 binary-phase-shift keying, 506–507
 coherent detection of, 504–511
 differential phase-shift keying, 517–518
 frequency-shift keying, 507–511, 515–516
 noncoherent detection of, 511–518
 on-off keying, 504–506, 511–514
 Bandpass filtering, 248–252, 267
 equivalent low-pass filter, 248–250
 impulse response of, 249
 input of, 249
 linear, 250
 output of, 249
 Bandpass process, 445, 450–463
 Gaussian, 461–463
 real, 453
 representations of, 450–454
 wide-sense stationary, properties of, 454–463
 Bandpass waveform, 237–241
 all, 238

complex envelope representation of, 238–241
 normalized power of, 245
 physical, 239
 Bands
 frequency, 397
 high-frequency, 13
 medium-frequency, 13
 Bandwidth, 521–523
 absolute, 105, 189, 190, 444
 bounded, 444
 bounded spectrum, 107
 channel, 492
 definition of, 105
 equivalent, 444, 476
 equivalent noise, 105–106, 107
 ergodic random processes and, 444–446
 estimation of, 160
 expansion, 28
 Federal Communications Commission, parameter requirements for, 107–108, 444
 measures of, 444–446
 null-to-null, 107, 444
 occupied, 107
 of PMC signals, 146–148
 power, 107, 444
 reduction of, 548
 root-mean-square, 108, 444
 of signal, 105–112, 252
 6-dB, 189, 191
 3-dB, 105, 444
 transmission, 167, 589
 zero-crossing, 107, 444
 Base station (BS), 395
 Baseband
 circuit, 546
 comparison of, 531–532
 definition of, 238
 filter, 267
 waveform, 238, 240
 Baseband binary systems
 bipolar signaling, 502–504
 performance of, 499–504
 polar signaling, 502
 unipolar signaling, 499–501
 Baseband signaling, 9, 132, 493, 532
 polar, 429–432
 Basepass signaling, 493
 Basic rate integrated service digital network, 580
 Baud, 157, 367
 Bayes' theorem, 684
 Bell, Alexander Graham, 570
 Bell Laboratories, 215
 Bell-type 103 modem, 361–364
 Bellcore, 213
 Bent-pipe transponders, 587
 Bessel filter, 258
 Bessel function of the first kind of the nth order, 337

- Bidirectional cable television system, 644
Bidirectional frame (*B*-frame) coding, 651
Binary code, 142
Binary data, 165
Binary frequency-shift keying, 361
Binary line coding, 164–167
 power spectra for, 167–174
Binary modulated bandpass signaling, 353–366
binary phase-shift keying, 357–359
differential phase-shift keying, 359
frequency-shift keying, 359–366
on-off keying, 353–357
Binary phase-shift keyed data, direct
 sequence spreading, spread
 spectrum (BPSK-DS-SS), 390
Binary phase-shift keying (BPSK), 108–109,
 313, 353, 357–359, 506–507, 507
bit error rate for, 507
 matched filter for detection of, 471
Binary signaling, 157, 158, 160–162, 198
error probabilities for, 493–499
Gaussian noise, results for, 495–499
general results, 493–495
vector representation of, 158
- Binit, 17
- Binomial coefficients, 697
Binomial distributions, 695–698
Binomial probability density function, 695
Bipolar line code, 439
Bipolar nonreturn-to-zero, 166, 435, 504
Bipolar return-to-zero, 171–172, 173
Bipolar signaling, 502–504
Bit, 17, 21
Bit error rate (BER), 10, 26, 166, 176, 493,
 521–523, 523
for binary phase-shift keying signaling,
 507
for frequency-shift keying, 516
for multilevel signaling, 523–524
for nonreturn-to-zero signaling, 504
for on-off keying, 514
probability of, 10, 26
- Bit interval, 390
- Bit rate, 157, 649
- Bit sync, 178, 469
- Bit synchronization, 178–181
- Bivariate statistics, 711–712
- Black-and-white signal, 639
- Blackberry telephone, 622
- Blackbody, 606
- Block codes, 21–22, 26
- Block diagram of communication systems,
 8–10
- Block interleavers, 26
- Bose–Chaudhuri–Hocquenhem (BCH)
 code, 22
- Bounded bandwidth, 444
- Bounded spectrum bandwidth, 107
- Bright House, 656
- Broadband integrated service digital network
 (B-ISDN), 580
- Broadcasting, digital video, 652
- B service, 624
- Budget, link, 610
- Butterworth filter, 255, 258
- Bytes, 525
- C**
- Cable data modems, 653–654
- Cable television (CATV), 43, 644
 standards for, 641–649
- Capacity of channel, 19
- Capture range, 283
- Cardinal series, 91
- Carrier
 common, 570
 delay, 252
 double-sideband suppressed, 241, 321–322
 frequency, 238
 power, wasted, 548
 single channel per, 590–592
 single-sideband amplitude modulation
 suppressed, 241
 sync, 178
 time delay, 252
- Carrier-to-noise ratio (CNR), 609, 611
- Carrierless amplitude-phase (CAP), 578
- Carson's rule, 341, 589
- Cartesian transform, 46
- Cascaded linear devices, 607–609
- C-band satellites, 589
- CBS, 649
- Cellular radio, 621–622
- Cellular telephone systems, 620–653
 Advanced Mobile Phone System circuit-
 switched system, 624–626
 analog black-and-white television,
 630–637
 analog color television, 637–641
 cable television, standards for, 641–649
 digital circuit-switched systems, 626–629
 digital TV, 649–653
 digital with circuit and packet switching, 629
 digital with packet switching, 629–630
 first generation, 624–626
 fourth generation, 629–630
 multichannel television sound stereo
 sound, 637
 second generation, 626–629
 television, standards for, 641–649
 third generation, 629
- Center of gravity, 694
- Central limit theorem, 715–716
- Central office (CO), 570, 622
- Ceramic filter, 257
- Channel
 in band on, 320–321, 351
 bandwidth, 492
 capacity, calculating, 19–20
 clear, 15
 codes, 9, 20
 common signaling, 591–592
 communication systems, subsystem
 of, 8
 distortionless, 86
 interference with, 297
 noise, 534
 professional, 637
 T-band, 644
 virtual, 653
 wire, 9
 wireless, 9
- Charge transfer device (CTD), 257
- Chebyshev filter, 255, 258
- Chip interval, 390
- Chrominance signal, 639
- Circuit
 analog, 283
 baseband, 546
 dedicated leased, 570
 detector, 274
 digital signal processing, 652
 four-wire, 573
 high-impedance, 597
 hybrid, 573
 ideal envelope, 274
 low-impedance, 597
 modulation, 546
 processing, 495
 receiver, 511
 resistive, 259
 RLC, 259
 switch, 319
 transistor, 319
 transistor-transistor logic, 241
 tube, 319
 two-wire, 573
 very-high-speed integrated, 30
- Circuit switched transmission system, 219,
 570, 624–626
- Clean pulse amplitude modulation, 142
- Clear channel, 15
- Clearwire, 629, 656
- Clock, 180–181, 190
- Code-division multiple-access (CDMA), 389,
 395, 590, 628
- Codebook excited linear prediction (CELP),
 204, 628
- Coded orthogonal frequency-division
 multiplexing (COFDM), 652
- Coding/codes, 20–30. *See also specific types of*
 bidirectional frame, 651
 binary, 142
 block, 21–22, 22, 26
 Bose–Chaudhuri–Hocquenhem, 22
 categories of, 21

Coding/codes (*cont.*)
 channel, 9, 20
 conventional, 23–25
 convolutional, 21, 26
 cyclic, 22
 differential, 174
 forward-error-correction, 597
 gain, 26
 Golay, 22, 26
 Hamming, 22
 interframe, 651
 with interleaving, 26
 maximal-length, 22
 multi-level modulation with, 28–30
 performance of, 26–28
 predictive frame, 651
 process of, 20–21
 pseudonoise, 390, 395
 purpose of, 20
 rate, 23
 redundancy time of, 26
 Reed-Solomon, 22
 Reed-Müller, 22
 source, 9, 20
 threshold, 26
 turbo, 28
 waveform, 204
 Coefficients
 binomial, 697
 correlation, 711
 Fourier, 77, 79, 97
 Coherent detection, 511
 Coils, loading, 219
 Collision, 594
 Color, 640, 649
 Colored Gaussian noise, 498–499
 Combine data, 133
 Comcast, 656
 Common carrier, 570
 Common signaling channel (CSC), 591–592
 Communication satellites, 586
 Communication systems
 analog, 6
 analyzing, 723
 block diagram of, 8–10
 channel, subsystem of, 8
 constraints of, 2
 designing, 723
 digital, 6
 fiber-optic, 511
 with forward error correction, 20–21
 high-frequency, 324
 historical perspective of, 3–5
 ideal, 19–20
 multilevel, 523
 performance of, 492
 receiver, subsystem of, 8
 satellite, 590
 subsystems of, 8
 transmitter, subsystem of, 8

Compact disc (CD), digital, 152
 Compandor, 155
 Complex envelope, 238–241
 Complex Fourier series, 71–72
 Complex random process, 423–424
 Compound events, 682
 Compression, 152–155
 Concentrate data, 210
 Conditional probability, 684–685
 Conditional probability density function, 494
 Constant
 amplitude, 252
 phase derivative, 252
 of random variable map, 415
 time, 86
 Constraint length, 23
 Continuous distributions, 688–691
 Continuous Fourier transform (CFT), 98–103
 Continuous frequency-shift keying, 360,
 378–379
 Continuous random process, 416
 Continuous variable slope delta modulation,
 203–204
 Continuously distributed random variables, 688
 Continuously variable slope delta modulation
 (CVSD), 204
 Conventional codes, 23–25
 Conversion
 AM-to-PM, 250
 analog-to-digital, 297–298
 down, 267–268
 PM-AM, 250
 Converter
 analog-to-digital, 145, 198
 digital down-, 298
 digital-to-analog, 146, 162, 366–367
 up, 267
 Convolution, 60–63, 83
 code, 21, 26
 interleavers, 26
 of rectangular pulse, 61–62
 of triangular pulse, 62
 of waveform, 60
 Coordinate transformation, 713
 Correlation, 711
 coefficients, 711
 functions, 420–423
 processing, 469–471
 Cosmic noise, 611
 Costas loop, 322–324
 Costas phase-locked loop, 322–323
 Counting encoding, 145
 Coupling loss, 619
 Covariance, 711–712
 Cross-correlation function, 421, 424, 475
 output, 441
 properties, 422
 Cross-modulation, 263
 Crosstalk, 206
 Crystal filter, 257

Cumulative distribution functions (CDF),
 685–691, 700, 701–702, 715
 distributions, 688–691
 multivariate, 709–711
N-dimensional, 709
 properties of, 688
 Cyclic code, 22

D

Damped sinusoid, 51
 Data
 binary, 165
 combine, 133
 concentrate, 210
 decoded, 359
 multiple access, 589–595
 multiplex, 133
 network, 594
 sequences, 517
 two-level, 165
 Data signals distortion, 89
 David Sarnoff Research Center, 649
 Decibel, 41–42
 Decoded data, 359, 517
 Decoding algorithm, 24
 Decompression, 155
 Dedicated leased circuit, 570
 Deemphasis, 346
 in angle-modulated systems, 346–348
 filter, 546
 frequency modulation systems with, 545–547
 Definite integrals, 673–674
 Definition frequency, 45
 Delay
 carrier, 252
 carrier time, 252
 envelope, 252
 group, 252
 group time, 252
 phase, 252
 spread, 10
 time, 87, 89
 Delta-coded encoding, 145
 Delta function
 Dirac, 52–53, 55, 675–676
 evensided, 676–677
 Kronecker, 68
 left-sided, 676
 Delta modulation (DM), 141, 152, 198–206
 adaptive, 203–204
 continuous variable slope, 203–204
 continuously variable slope, 204
 design of, 202
 granular noise, 200–203
 slope overload noise, 200–203
 speech coding, 204–206
 vector frequency, 203

- Demand-assigned multiple-access (DAMA), 590
- Dense wavelength division multiplexing(DWDM), 583, 619
- Density
energy spectral, 50, 64
power spectral, 25, 63–65, 80, 343, 345, 376, 436–437, 475, 601
- Derivative, constant phase, 252
- Derivative table, 670–671
- Designing communication systems, 723
- Detector circuits, 274–282
envelope detector, 274–275
frequency modulation detector, 277–282
product detector, 275–277
- Detector/detection
coherent, 511
differential, 374
envelope, 356, 534
error, 167
frequency modulation, 277
noncoherent, 277, 356, 374, 514, 516
phase, 276
product, 137, 275–277, 534
quadrature, 278
single-sideband envelope, 241
single-sideband square-law, 241
slope, 277
zero-crossing, 281
- Deterministic function, 439
- Deterministic waveform, 6–7
- Deviation, 333, 6963
- Device
cascaded linear, 608, 609
charge transfer, 257
ideal, 604
memoryless, 21
noise-free, 604
without memory, 704
- Difference signal, 498
- Differential calculus, 670–671
- Differential coding, 174–175
- Differential detector, 374
- Differential phase-shift keying (DPSK), 359, 517–518
- Differential pulse code modulation (DPCM), 141, 152, 194–198, 198
- Differential rules, 670
- Differential time delay, 89
- Digital communication systems, 6
amplitude modulation broadcast, 320–321
carrier trunk, 215
circuit-switched systems, 626–629
development of, 3
digital television, 570, 588, 630, 649–653
filtering, 258
frequency modulation, 351–353
information sources, 5
integrated, 578
- modulation index, 357
with packet switching, 629–630
satellite system, 588
signal, 437–439, 591
signaling processing, 93–95, 258, 298, 652
switching, 577
television transmission, 587–589
waveform, 6, 162
words, 525
- Digital compact disc (CD), 152
- Digital down-converter (DDC), 298
- Digital phase-locked loop (DPLL), 283
- Digital Radio Mondiale (DRM), 321
- Digital signaling, 155–164, 521–525
bandwidth, 160, 521–523
binary signaling, 160–162
bit-error rate, 521–523
multilevel signaling, 162–164, 523–524
noise-free, 177
power spectral density of, 433–435
synchronization, 524–525
time axis of, 220
vector representation, 157–159
- Digital subscriber lines (DSL), 215, 577–582
asymmetrical, 578
G.DMT, 578–580
G.Lite, 578–580
high-bit-rate, 578
integrated service digital network, 580–582
symmetrical, 578
very-high-bit-rate, 578
video on demand, 580
- Digital-to-analog converter (DAC), 146, 162, 366–367
- Digital Video Broadcasting by Satellite, Second Generation (DVB-S2), 588–589
- Digital video broadcasting (DVB), 652
- Dimension, 156
- Dimensionality theorem, 95–97
- Diodes
light-emitting, 619
probability density function for, 706–707
- Dirac delta function, 52–53, 52–55, 675–676, 675–677
properties of, 676–677
weights of, 55
- Direct-broadcast satellites (DBS), 587
- Direct conversion encoding, 145
- Direct conversion receiver, 296–297
- Direct current (DC) waveform, 37–38
- Direct digital synthesis (DDS), 290, 298
- Direct method, 342, 428
- Direct sequence (DS), 389–395
- DirecTV, 583, 588
- Dirichlet conditions, 46
- Discontinuous frequency-shift keying, 359, 379
- Discrete cosine transform (DCT), 651
- Discrete Fourier transform (DFT), 51, 97–98
- Discrete distributions, 685, 688–691
- Discrete events, 690
- Discrete Fourier transforms (DTF), 97–105
continuous Fourier transform, 98–103
Fourier series, 103–105
- Discrete multitone (DMT) signaling, 388
- Discrete point, 692
- Discretely distributed random variables, 692
- Discriminator, balanced, 278
- Distance, Hamming, 21–22
- Distortion
amplitude, 87
audio, 89
data signals, 89
filter, caused by, 87
harmonic, 259
intermodulation, 260–261
phase, 87
total harmonic, 260
video, 89
- Distortionless channel, 86
- Distortionless transmission, 86–89
- Distributions, 688–691, 695–704
binomial distributions, 695–698
continuous, 688–691
discrete, 685, 688–691
Gaussian, 416, 698–699, 700, 715
Gaussian distributions, 698–703
normal, 698, 715
point, 685, 688
- Poisson distributions, 698
- sinusoidal, 703–704, 704–706
- sinusoidal distributions, 703–704
- theory of, 53
- uniform, 703
- uniform distributions, 698
- Doppler spread, 10
- Double balanced mixer, 270
- Double-sideband suppressed carrier (DSB-SC), 241, 321–322, 535
- Doubler stage, 273
- Down converters, 266–272

E

- Early-late bit synchronizer, 180–181
- Early sample, 180
- Earth blackbody radiation, 611
- Earth-to-satellite transmission, 586
- Echo canceller, 579
- Effect
aliasing, 100
leakage, 100
picket-fence, 100
quieting, 537
threshold, 535

- Effective isotropic radiated power (EIRP), 597, 634
- Effective radiated power (ERP), 351, 634
- Efficiency, 184, 316
- Electric energy systems, 2
- Electromagnetic waves, 12–17
- Electronic service number (ESN), 624
- Electronic switching system (ESS), 577
- Elliptical orbit, 595
- Encoding, 142–145
- counting, 145
 - delta-coded, 145
 - direct conversion, 145
 - flash, 145
 - pipeline, 145
 - ramp, 145
 - serial, 145
 - sigma-delta, 145
 - split-phase, 166
 - successive approximation, 145
- Energy
- finite, 71
 - signal, 35–36
 - spectral density, 49–52, 64
 - storage, 255
 - waveform, 41
- E_b/N_0 link budget for digital systems, 612–613
- Ensemble, 415
- Ensemble average, 692–693
- Entropy, 18
- Envelope
- amplitude modulation systems, 533–535
 - approximate, 345
 - complex, 239
 - delay, 252
 - detection, 274–275, 356, 534
 - of Gaussian bandpass process, 461–463
 - probability density function for, 461–463
- Equality, 477
- Equalization filter, 141, 177, 187
- Equivalent bandwidth, 444, 446, 476
- Equivalent low-pass filter, 248–250, 249
- Equivalent noise bandwidth, 105–106, 107
- Erasable programmable read-only memory (EPROM), 624
- Ergodic random process, 418, 419–420, 444–446, 475
- digital signal for, 437–439
 - root-mean-square for, 437–439
- Ergodicity, 418–420
- Error
- binary signaling, probability for, 497
 - bit, 10, 26, 166, 176, 523
 - detection, 167
 - function, 700–701
 - phase, 285
 - symbol, 523
 - in time delay, 89
 - timing, 176
- Euler's theorem, 669
- Evaluation
- of entropy, 18
 - of information source, 18
 - of power, 39
 - of probabilities, 683
- Even-sided delta function, 676–677
- Events
- compound, 682
 - discrete, 690
 - joint, 683
 - null, 683
 - simple, 682
 - sure, 683
- Exchanges, private branch, 580
- Expander, 155
- Expansion, 28, 155
- Expected value, 692
- Exponential pulse, 47
- Extension telephone, 579
- Eye opening, 176
- Eye patterns, 175–176
- F**
- Fast Fourier transform (FFT), 97–98, 101, 104
- Fast frequency-shift keyed (FFSK), 381
- FCC Rules and Regulations*, 107
- Federal Communications Commission (FCC), 11, 15, 107–108, 320, 444, 595, 624, 633
- Feedback, 543, 575
- Fiber cables, 619
- Fiber-optic communication systems, 511, 583, 618–620
- Filter/filtering. *See also specific types of*
- adaptive, 187
 - bandpass, 248–252, 267
 - baseband, 267
 - Bessel, 258
 - Butterworth, 258
 - ceramic, 257
 - Chebyshev, 258
 - classification of, 254–258
 - crystal, 257
 - deemphasis, 546
 - digital, 258
- Filter/filtering. (*cont.*)
- distortion, 87
 - equalization, 141
 - equalizing, 177, 187
 - equivalent low-pass, 248–250, 249
 - integrate-and-dump, 467–469
 - linear, 257, 464
 - linear prediction, 195
 - low-pass, 283
 - matched, 157, 193, 464, 466–469, 469, 476, 498, 504
- mechanical, 257
- method, 326
- nonlinear, 250
- Nyquist, 191–192, 194, 289
- prediction, 195
- prewhitening, 498–499
- raised cosine-rolloff, 191
- RC low-pass, 85, 187, 252, 442, 443, 446, 504
- requirements for, 190
- surface acoustic wave, 257
- transfer function of, 257
- transmission line, 257
- transversal, 195, 257
- vector sum excited linear prediction, 628
- vestigial sideband, 328
- waveshape, 499
- Finite energy, 71
- Finite series, 674
- First generation (1G), 624–626
- First-order stationarity, 417–418
- Fixed-assigned multiple-access (FAMA), 590
- Flash encoding, 145
- Flat-top pulse amplitude modulation, 139
- Flat-top sampled pulse amplitude modulation, 141
- Flat-top signaling, 137
- Forward-error-correction (FEC), 20–21, 597
- Four-quadrant multiplier, 268
- Four-wire circuit, 573
- Fourier coefficients, 77, 79, 97
- Fourier series, 71–82, 103–105
- complex, 71–72
 - for periodic waveforms, 75–82
 - polar, 74–75
 - quadrature, 72–73
- Fourier transform (FT), 44–63
- of autocorrelation function, 426
 - continuous, 101
 - convolution, 60–63
 - definition of, 44–48
 - Dirac delta function, 52–55
 - discrete, 51, 97–105
 - energy spectral density, 49–52
 - fast, 97–98, 101, 104
 - inverse, 46
 - Parseval's Theorem, 49–52
 - properties of, 48–49
 - rectangular pulses, 56–60
 - triangular pulses, 56–60
 - unit step function, 52–55
- Fourth generation (4G), 629–630
- Fractional- N technique, 289
- Frame synchronization, 178, 206–209, 593, 630
- Free space conditions, 600
- Free-space intrinsic impedance, 599
- Frequency
- allocation of, 10–12
 - bands, 105, 397

carrier, 238
 definition, 45
 deviation, 333
 instantaneous, 332
 intermediate, 293
 mean-squared, 445
 Nyquist, 92
 positive, 445
 radio, 653
 sampling, 95
 single-carrier, 619
 specialized mobile radio, 628
 synchronized, 276
 synthesizers, 282–290
 3-dB, 86
 tuned radio-, 292–293
 Frequency-division multiple access (FDMA), 389, 590
 Frequency-division multiplexing (FDM), 348–350
 Frequency-hopped (FH), 389, 396–397
 Frequency modulation (FM), 10, 241,
 277–282, 313, 331, 332, 540–543, 542
 angle-modulated systems, 336–341,
 346–348
 with deemphasis, 545–547
 detector, 277
 digital, 351–353
 index, 335
 multiplier, 272–273
 narrowband angle modulation, 341–342
 noise performance for, 542
 preemphasized, 348
 receiver with feedback, 543
 representation of, 331–335
 resolution, 101
 response, 83
 selectivity, 255
 single-sideband, 241
 with sinusoidal modulation, 335–337
 technical standards, 351
 with threshold extension, 543–545
 wireband frequency modulation, 342–346
 Frequency-shift keying (FSK), 10, 313, 345,
 353, 359–366, 507–511, 515–516
 binary, 361
 bit error rate for, 516
 with coherent detection, 511
 continuous, 360, 378–379
 discontinuous, 359, 379
 noncoherent detection, 516
 power spectral density for, 366
 Front-end processors, 210
 Full-duplex capability, 361
 Function
 analytic, 90
 autocorrelation, 65–67, 80, 420, 424, 434
 cross-correlation, 421, 424, 441–442, 475
 cumulative distribution, 685, 700, 709, 715
 delta, 52–53, 55, 68, 675–677

deterministic, 439
 error, 700–701
 generalized, 53
 help, 726
 nonlinear, 146–147, 331
 orthogonal complex exponential, 68–69
 orthonormal, 68, 158
 power transfer, 84, 598
 probability density, 416, 462–463, 494,
 513, 686, 695, 706–707, 710
 Q, 700–701
 of random process, 415
 sample, 415
 singular, 675
 time, 712
 transfer, 83, 464
 unit impulse, 675
 unit step, 53

G

Gain
 coding, 26
 decibel, 42
 power, 603
 processing, 395
 Galaxy satellites, 613–618
 Gating, natural, 133
 Gaussian
 bandpass process, 461–463
 bivariate distribution, 712
 distributions, 416, 698–699, 698–703,
 700, 715
 noise, 495–499, 534
 probability density function, 416
 process, 448, 461
 random process, 446–450, 448
 random variables, 451, 690, 700–702
 Gaussian-filtered minimum-shift keying
 (GMSK), 83, 383–385
 G.DMT, 578–580
 General Instrument Corporation, 649
 General Motors (GM), 629
 General technique, 493
 Generalized function, 53
 Generalized receivers, 292–296
 Generators, arbitrary waveform, 290
 Geostationary orbit (GEO), 586
 Geostationary satellites, 597
 G.Lite, 215, 578–580, 579–580
 Global positioning (GPS) system, 583,
 586, 629
 Golay code, 22, 26
 Google, 656
 Grand Alliance (GA), 649
 Granular noise, 150, 200–203
 Gravity, center of, 694
 Ground waves, 13

Group delay, 252
 Group of pictures (GOP), 651
 Group special mobile (GSM) system, 626
 Group time delay, 252

H

Half-duplex capability, 361
 Half-wave linear rectification, 706
 Hamming, 21–22
 Hand off sequences, 626
 Hard decisions, 24–25
 Harmonic distortion, 259
 Harmonic related carrier (HRC) system, 642
 Hartley, 17
 Hartley, R. V., 17
 Help function, 726
 High-bit-rate digital subscriber line, 578
 High definition (HD) format, 649
 High-definition television (HDTV), 580, 649
 High-density bipolar n (HDB n) signaling, 173
 High-frequency bands (HF), 13, 324
 High-impedance circuitry, 597
 High-level modulation, 319
 High-power satellites, 587
 High-side injection, 268
 Hilbert transform, 324, 675
 Hold-in range, 283, 286
 Hometown company, 624
 Horizontal pulse, 636–637
 Horizontal sync, 631, 641
 Hotspots, 655
 Hunting noise, 150
 Hybrid circuit, 573
 Hybrid technique, 389

I

IBiquity, 320
 Ideal communication systems, 19–20
 Ideal device, 604
 Ideal envelope circuit, 274
 Ideal frequency modulation (FM) detector, 277
 Ideal mixer, 266
 Ideal system performance, 548–550
 Idle channel noise, 150
IEEE Proceedings, 283
 Image response, 294
 Impulse-sampled series, 93
 Impulse response, 82
 of bandpass filter, 249
 in linear systems, 82–83
 of matched filter, 466
 Impulse sampling, 93–95
 In band on channel (IBOC), 320–321, 351
 In-phase and quadrature-phase processing
 (IQ), 291–292

In-phase components, 638
 In-phase modulation, 240
 Inconsistent power spectral density, 437
 Incrementally related carrier (IRC) system, 642
 Indefinite integrals, 672–673
 Indeterminate forms, 671
 Indirect method, 341, 428
 Inductors, loading, 219
 Inequality, Schwarz's, 477
 Infinite series, 674
 Information source
 analog, 5
 average, 18
 digital, 5
 evaluation of, 18
 measuring, 17–19
 rate of, 19
 transmission of, 17
 Injection, 268, 287
 Input, 249, 498
 receiver, 498
 signal, phase of, 285
 Input-noise temperature, 604–605, 609
 Input-output relationships, 439–444
 Input-signal waveshape, 466
 Instantaneous frequency, 332
 Instantaneous power, 38
 Instantaneous sampled pulse amplitude
 modulation, 138
 Instantaneous sampling, 133, 137–141, 220
Instructor Solutions Manual, 8
 Integer value, 289
 Integral tables, 672–674
 definite integrals, 673–674
 indefinite integrals, 672–673
 Integrate-and-dump filter, 467–469
 Integrated digital enhanced network
 (iDEN), 628
 Integrated service digital network (ISDN),
 215, 578, 580–582
 basic rate, 580
 broadband, 580
 narrowband, 580–581
 primary rate, 580
 Intel, 656
 Intelligent time-division multiplexing, 210
 Intelsat series satellites, 583, 590
 Intensity video signal, 633
 Intercarrier signal, 635
 Intercept point, 261
 Interchange, time-slot, 577
 Interference
 causes of, 297
 with channel, 297
 intersymbol, 89, 133, 147, 175, 185
 with receiver, 297
 in receivers, 297
 Interframe (*I*-frame) coding, 651
 Interlacing technique, 630
 Interleaving, 26

Intermediate frequency (IF), 293
 Intermodulation distortion (IMD),
 260–261
 International Radio Consultative Committee
 (CCIR), 11
 International Telecommunications Union
 ITU), 10–11
 International Telecommunications Union
 Telecommunication Development
 Sector (ITU-D), 11
 International Telegraph and Telephone
 Consultative Committee (CCITT), 11
 Internet protocol (IP), 629
 Internet service provider (ISP), 371
 Intersection, 682
 Intersymbol interference (ISI), 89, 133, 147,
 175, 185–194, 191–192
 Nyquist's control of, 188–189, 194
 raised cosine-rolloff Nyquist filtering,
 189–194
 RC low-pass filtering, caused by, 187
 Interval
 bit, 390
 chip, 390
 observation, 436
 Inverse discrete Fourier transform (IDFT),
 97–98
 Inverse Fourier transform, 46
 Inversion, alternate mark, 165
 Ionization, 13
 Ionosphere, 14–15
 Ionospheric scatter propagation, 17
 iPhone telephone, 622

J

Jacobian, 713
 Joint events, 683
 Joint mean, 711
 Joint probability, 683–684
 Jointly wide-sense stationarity, 451–453

K

Keying
 amplitude shift, 353
 binary phase-shift, 313, 353
 frequency-shift, 10, 313, 345, 353, 359,
 360, 361, 378–379
 M-ary phase-shift, 367–368
 minimum-shift, 371, 378, 383
 on-off, 165, 313, 353, 371
 phase-reversal, 507
 phase-shift, 10, 319, 368, 371, 374
 quadrature phase-shift, 519
 Known signal waveshape, 469
 Known waveshape, 464

Kronecker delta function, 68
 Ku band satellites, 587

L

Laboratory radio-frequency waves, 43
 Late sample, 180
 Lead, 571
 Leakage effect, 100
 Learning preambles, 187
 Learning sequences, 187
 Left-sided delta function, 676
 L'Hospital's rule, 28
 Light-emitting diodes (LED), 619
 Limiter, 264–266
 Line
 digital subscriber, 215, 578
 transmission, 606–607
 Line code, 164–185
 binary line coding, 164–174
 bipolar, 439
 bit synchronization, 178–181
 differential coding, 174–175
 eye patterns, 175–176
 multi-level polar NRZ signals, power
 spectra for, 181–184
 nonreturn-to-zero, 164, 166, 183–184, 435
 regenerative repeaters, 176–178
 return-to-zero, 164, 166, 173
 spectral efficiency, 184–185
 Line of sight (LOS), 13, 15–17, 612–613
 Line synchronization, 630
 Linear bandpass filter, 250
 Linear distortion, 250–252
 Linear filter, 257, 464
 Linear operator, 37
 Linear-prediction-based analysis-by-synthesis
 (LPAS), 204
 Linear prediction filter, 195
 Linear pulse code modulation (LPCM), 152
 Linear rectification, 706
 Linear systems, 439–444
 distortion in, 89
 distortionless transmission in, 86–89
 impulse response in, 82–83
 input-output relationships, 439–444
 linear time-invariant systems in, 82
 noise characterization of, 602–607
 process of, 476
 time-invariant, 441
 transfer function in, 83–86
 Linear time-invariant systems, 82
 Linear transformation, 449
 Link budget, 610
 Link budget analysis, 597–618
 E_b/N_0 link budget for digital systems,
 612–613
 for fiber-optic system, 619–620

- link budget evaluation, 609–612
noise characterization, 602–609
received signal power, 597–600
satellite signal, evaluation for, 613–618
thermal noise, sources of, 600–601
urban wireless environments, path loss for, 613–618
- Load/loading
coils, 219
factor, 155
inductors, 219
resistive, 40
- Local oscillator (LO) of mixer, 436
- Lock range, 283
- Long Term Evolution (LTE), 629
- Loop
analog phase-locked, 283
digital phase-locked, 283
phase-locked, 282–283, 286, 322–323
squaring, 322
- Loss, coupling, 619
- Low-impedance circuitry, 597
- Low-noise amplifiers (LNA), 610
- Low-pass filter (LPF), 283
- Low-pass wide-sense stationary process, 444
- Low-power satellites, 587
- Low-probability of intercept (LPI)
capability, 389
- Low-side injection, 268
- Lower single sideband (LSSB), 324
- Luminance signal, 639
- Luminance video signal, 633
- M**
- Machester signaling, 166
- Magnitude-phase transform, 46
- Magnitude response, 83
- Magnitude Spectrum, 65
- Manchester nonreturn-to-zero, 173–175
- Margin noise, 176
- Marginal probability density function, 710
- M*-ary phase-shift keying (MPSK), 367–368, 367–370
- Massachusetts Institute of Technology
(MIT), 649
- Mastering MATLAB* 7, 725
- Matched filtering, 157, 193, 464–474, 476, 498
binary phase-shift keying signal, for
detection of, 471
correlation processing, 469–471
general results, 464–466
impulse response of, 466
with nonreturn-to-zero signaling, 504
reception, 497–498, 498–499
transversal matched filter, 471–474
white noise, results for, 466–469
- MathWorks, 723
- MATLAB
M-files, 724
as program language, 8
programming in, 725–726
quick start for running, 724–725
- MATLAB Primer*, 725
- Matrix Laboratory, 723
- Maximal-length code, 22
- Maximum-length sequences, 390
- Maximum locked sweep rate, 283
- Maximum spectral efficiency, 184
- Mean, 693, 694, 711
- Mean-squared frequency, 445
- Mechanical filter, 257
- Median, 694
- Medium-frequency bands (MF), 13
- Medium-power satellites, 587
- Memory
device without, 704
programmable read-only, 624
random-access, 290
read-only, 290
- Memoryless device, 21
- Method
Armstrong, 341
direct, 342, 428
filtering, 326
indirect, 341, 428
Nyquist's first (zero ISI), 188
parallel, 383
phasing, 326
serial, 383
Weaver's, 327
- Y*-factor, 604
- Metro PCS, 629
- Minimum-shift keying (MSK), 371, 378–382, 519–521
Gaussian-filtered, 383
power spectral density for, 382–383
Type II, 381–382
- Mixer, 266–272
audio, 268
band, 267
definition of, 268
double balanced, 270
ideal, 266
local oscillator of, 436
single balanced, 270
unbalanced, 270
- M*-law, 152–155
- Mobile identification number (MIN), 624
- Mobile station (MS), 395
- Mobile switching center (MSC), 622
- Mode, 694
roam, 624
synchronous, 395
synchronous transfer, 219
- Modem, cable, 653
- Modern telephone systems, 571–577
- Modulated signal, 238, 241
- Modulating signal, 238, 344, 532
- Modulation, 9
adaptive delta, 203–204
amplitude, 10, 240, 241, 313, 315–316
circuit, 546
cross-, 263
definition of, 238
delta, 141, 152, 198, 202–204
differential pulse code, 141, 194–195, 198
efficiency, 316
frequency, 10, 241, 313, 331, 332, 348
high-level, 319
in-phase, 240
narrowband frequency, 341
negative, 314
phase, 240, 241, 313, 331
positive, 314
pulse amplitude, 133, 138–139, 142
pulse code, 133, 141, 152, 591
pulse duration, 220
pulse position, 220
pulse time, 220
pulse width, 220, 319
quadrature, 240, 241
quadrature amplitude, 313, 370
sinusoidal, 335–337, 342, 345, 542
tamed frequency, 383
trellis-coded, 28–29
triangular, 344–345
types of, 10
wideband frequency, 341
- Moments, 693–695
definition of, 693
mean of, 693
of random variables, 693
variance of, 693
- Monitor waveform, 630
- Motion Pictures Experts Group (MPEG), 588, 651
- Motorola, 624, 628
- Moving average (MA) model, 437
- M-sequences, 390
- Multi-level modulated bandpass signaling, 366–378
with codes, 28–30
M-ary phase-shift keying, 367–370
offset quadrature phase-shift keying, 371–374
 $\pi/4$ quadrature phase-shift keying, 374
power spectral density for, 374–376
quadrature amplitude modulation, 370–371
quadrature phase-shift keying, 367–370
spectral efficiency for, 376–378
with raised cosine filtering, 376–378
- Multi-level polar NRZ signals, 181–184
- Multichannel television sound (MTS), 637
- Multilevel communication systems, 523
- Multilevel nonreturn-to-zero line code, 183–184

Multilevel signaling, 157, 162–164, 523–524
 bit error for, 523–524
 symbol error for, 523–524
Multipath, 10
Multiple access, 590, 591
Multiple input and multiple output (MIMO)
 technology, 655
Multiple paths, 10
Multiplex data, 133
Multiplexing
 coded orthogonal frequency-division, 652
 dense wavelength division, 583, 619
 frequency-division, 348
 orthogonal frequency-division, 313, 321,
 351, 385, 388
 time-division, 133, 206, 210, 211–212, 597
Multiplier
 four-quadrant, 268
 frequency, 272–273
 single-quadrant, 268
 two-quadrant, 268
Multivariate functional transformation,
 712–714
Multivariate statistics, 709–716
 bivariate statistics, 711–712
 central limit theorem, 715–716
 cumulative distribution functions and
 probability density functions,
 multivariate, 709–711
 Gaussian bivariate distribution, 712
 multivariate functional transformation,
 712–714

N

Narrow pulse, 631, 636–637
Narrowband angle modulation, 341–342
Narrowband frequency modulation
 (NBFM), 341
Narrowband integrated service digital
 network (N-ISDN), 580–581
National Telecommunication and
 Information Administration (NTIA), 11
Nats, 17
Natural gating, 133
Natural sampling, 133–137, 220
NBC, 649
N-dimensional cumulative distribution
 function, 709
N-dimensional probability density
 function, 695
Negative modulation, 314
Network
 data, 594
 digital, 578
 integrated digital enhanced, 628
 integrated service digital, 215, 580–581
 public switched telephone, 570

virtual private, 628
wireless local area, 655
wireless metropolitan area, 656
Nextel, 628
No truck roll, 579
Noise
 additive Gaussian, 357
 average power, 149
 bandlimited, 89–97
 bandpass, 457–458
 of cascaded linear devices, 607–609
 channel, 534
 cosmic, 611
 decibel of, 41–43
 definition of, 34
 effects of, 148–152
 figure, 603
 granular, 150, 200
 hunting, 150
 idle channel, 150
 of linear devices, 602–607
 margin, 176
 orthogonal series of, 69–71 (*See also*
 specific types of)
 overload, 150
 performance, 542
 phasors of, 43–44
 power, 601
 properties of, 34–44
 quantizing, 142, 195
 random, 150, 439
 random waveform approach to, 34
 (*See also* Waveform)
 slope overload, 200
 source, 597, 601–602, 603, 606
 temperature, 602, 617
 white, 475, 498
Noise-free device, 604
Noise-free digital signal, 177
Non line of sight (NLOS), 656
Noncoherent detection, 356, 514, 516
Noncoherent detector, 277, 374
Noninteger value, 289
Nonlinear distortion, 259–264
Nonlinear filter, 250
Nonlinear function, 146–147, 331
Nonreturn-to-zero (NRZ), 164, 166, 168, 504
 bipolar, 166, 435, 504
 bit error rate for, 504
 manchester, 173–175
 multilevel, 183–184
 polar, 166, 169, 504
 RC low-pass filtering with, 504
 unipolar, 168, 504
Nonuniform quantizing, 152–155
Nonuniformly spaced sample, 253
Nonwireline service, 624
Normal distributions, 698, 715
Normalized average power, 316, 326
Normalized covariance, 712

Normalized-data autocorrelation function, 434
Normalized peak envelope power, 246, 326
Normalized power, 40–41, 245, 316
North, D. O., 2
North American digital cellular (NADC)
 system, 628
Notation phasor, 43
Null events, 683
Null-to-null bandwidth, 107, 444
Numeric assignment module (NAM), 624
Nyquist
 control of intersymbol interference,
 188–189, 194
 filter, 189, 191
 first method, 188
 frequency, 92
 raised cosine-rolloff filter, 191–192, 194
 rate, 133

O

Observation interval, 436
Observation length, 436
Occupied bandwidth, 107
Offset quadrature phase-shift keying
 (OQPSK), 371–374
Offset quadrature phase-shift keying (QPSK),
 371, 374
On-off keying (OOK), 165, 313, 353–357,
 504–506, 511–514
 bit error rate for, 514
 with noncoherent detection, 514
 offset, 371
 unbalanced, 371
One-sided spectrum, 75
OnStar, 629
Orbit, 586, 595
Orthogonal complex exponential function,
 68–69
Orthogonal frequency-division multiplexing
 (OFDM), 313, 321, 351, 385–388
 functions, 68–69
 generalization of, 388
 power spectral density for, 387–388
 process, 457
 random variables, 711
 signals and noise, 69–71
 value, 422
Orthonormal function, 68, 158
Oscillator, 282–283, 287
Output
 autocorrelation, 439, 442
 of bandpass filter, 249
 cross-correlation, 441
 signal, phase of, 285
Output-to-input transfer, 704
Overlay, spread spectrum, 395
Overload noise, 150

- P**
- Packets, 594
 - data transmission, 570
 - switched service, 570
 - switched transmission system, 219
 - time modulation, 219
 - transmission system, 219
 - Palm telephone, 622
 - Parallel method, 383
 - Parity bit, 21
 - Parseval's Theorem, 49–52
 - Party, 577
 - Paths, multiple, 10
 - Patterns, eye, 175
 - Peak envelope power (PEP), 246, 326, 507
 - Peak frequency deviation, 333
 - Peak phase deviation, 333
 - Peak power, 548
 - Peak signal, 529
 - Performance, 26–28, 492
 - Periodic rectangular waves, 77–78
 - Periodic waveforms, 37, 75–82
 - Periodogram, 437
 - Personal communication service (PCS), 570
 - Personal computer as a tool, 8
 - Phase
 - carrierless amplitude-, 578
 - clock, 180
 - delay, 252
 - detector, 276
 - deviation, 333
 - distortion, 87
 - error, 285
 - function, 461–463
 - of input signal, 285
 - method, 326
 - of output signal, 285
 - random start-up, 453
 - synchronized, 276
 - unwrapping, 540
 - Phase-locked loop (PLL), 282–283, 282–290, 286, 322–323
 - Phase modulation (PM), 240, 241, 313, 331, 335, 348, 536–540
 - angle-modulated systems, 336–341, 346–348
 - narrowband angle modulation, 341–342
 - representation of, 331–335
 - with sinusoidal modulation, 336–337, 342
 - wideband digital, 345
 - wireband frequency modulation, 342–346
 - Phase-reversal keying (PRK), 507
 - Phase-shift keying, 10, 313, 368, 371, 374
 - Phasor, 43–44
 - Philips Electronics North America
 - Corporation, 649
 - Photodiode, 619
 - Physical bandpass waveform, 239
 - Physical waveform, 71, 90–91
 - Physically realizable waveforms, 35–36
 - Picket-fence effect, 100
 - Pictures, group of, 651
 - Π/4 differential quadrature phase-shift keying ($\pi/4$ DQPSK), 374
 - Π/4 quadrature phase-shift keying ($\pi/4$ QPSK), 374
 - Pipeline encoding, 145
 - Plain old telephone service (POTS), 571
 - PM-AM conversion, 250
 - Point
 - discrete, 692
 - distributions, 685, 688
 - intercept, 261
 - substation, 614
 - Point-to-multipoint transmission, 594
 - Poisson, 434, 698
 - Polar baseband signal, 429–432
 - Polar Fourier series, 74–75
 - Polar nonreturn-to-zero, 166, 169, 504
 - Polar signaling, 502
 - Polar transform, 46
 - Polarity of processing circuit, 495
 - Positive frequency, 105, 445
 - Positive modulation, 314
 - Power
 - in, 42
 - amplifier, 319
 - of amplitude-modulated signal, 318
 - average, 38–40, 149, 316, 326, 548
 - bandwidth, 107, 444
 - for bipolar line code, 439
 - carrier, 548
 - effective isotropic radiated, 597, 634
 - effective radiated, 351, 634
 - evaluation of, 39
 - evolution of, 245–247
 - gain, 603
 - instantaneous, 38
 - noise, 601
 - normalized, 40–41, 316
 - out, 42
 - peak, 548
 - peak envelope, 246, 326, 507
 - signal, 35–36, 537, 546
 - Power spectral density (PSD), 25, 63–65, 80, 343, 374–376, 424–437, 475
 - actual, maximum, 601
 - analog techniques, 436
 - approximation of, 345
 - available, 601
 - for bipolar nonreturn-to-zero line code, 435
 - for bipolar return-to-zero, 172
 - for bipolar return-to-zero line code, 173
 - definition of, 424–425
 - of digital signals, general formula for, 433–435
 - estimation of, 437
 - inconsistent, 437
 - for M -ary phase-shift keying, 376
 - measurements of, 436–437
 - numerical computation of, 436–437
 - properties of, 428–432
 - for random process, 425
 - for RC low-pass filtering, 442
 - of sinusoid, 66–67
 - unbiased, 437
 - of waveform, 244
 - white-noise processes, 435–436
 - Wiener-Khintchine theorem, 426–428
 - Power transfer function, 84, 598
 - Power waveform, 41
 - Preambles, 187
 - Prediction
 - code excited linear, 204
 - codebook excited linear, 628
 - filter, 195
 - vector-sum excited linear, 204
 - Predictive frame (P -frame) coding, 651
 - Preemphasis, 346–348
 - Preemphasized frequency modulation, 348
 - Prewhitenning filter, 498–499
 - Primary color (RGB), 649
 - Primary rate integrated service digital network, 580
 - Priori statistic, 495
 - Private branch exchanges (PBX), 580
 - Probability, 682–685
 - conditional probability, 684–685
 - evaluation of, 683
 - joint probability, 683–684
 - simple probability, 682–683
 - Probability density function (PDF), 416, 685–691, 686
 - binomial, 695
 - conditional, 494
 - for diodes, 706–707
 - distributions, 688–691
 - Gaussian, 416, 690, 700–701
 - marginal, 710
 - multivariate, 709–711
 - N -dimensional, 695
 - properties of, 688
 - Rayleigh, 462
 - Rician, 513
 - for sinusoid, 703
 - uniform, 463
 - Probability of bit error (P_e), 10, 26
 - Proceedings of the IEEE, 91
 - Process/processing. *See also* Random process
 - bandpass, 445, 453, 461–463
 - circuit, 495
 - digital signaling, 95, 258, 298
 - ergodic, 475
 - front-end, 210
 - gain, 395
 - Gaussian, 448, 461
 - in-phase and quadrature-phase, 291
 - of linear system, 476
 - orthogonal, 457

Process/processing (*cont.*)

- stochastic, 415
- uncorrelated, 476
- white Gaussian-noise, 450
- white-noise, 435–436
- wide-sense stationary, 444–445

Product, time-bandwidth, 467

Product detection, 137, 275–277, 532, 534

Professional channel, 637

Programmable read-only memory (PROM), 624

Propagation

- of electromagnetic waves, 12–17
- ground-wave, 13
- ionospheric scatter, 17
- line-of-sight, 612–613
- sky-wave, 15
- through ionosphere, 15

Pseudonoise (PN) code, 390, 395

Pseudoternary, 165

Public switched telephone network (PSTN), 570, 583

Pull-in range, 283, 286

Pulse

- exponential, spectrum of, 47
- horizontal, 636–637
- narrow, 631, 636–637
- rectangular, 56, 61–62, 91–92, 328
- sync, 641, 651
- synchronization, 651
- triangular, 59–60, 62
- wide, 631

Pulse amplitude modulation (PAM), 133–141

- clean, 142
- flat-top, spectrum for, 139
- instantaneous sampled, 138
- instantaneous sampling, 137–141
- natural sampling, 133–137
- quantized, 142

Pulse code modulation (PCM), 133, 141–151, 591

- adaptive, 152
- bandwidth of, 146–148
- differential, 152
- encoding, 142–145
- linear, 152
- noise, effects of, 148–152
- nonuniform, 152–155
- output signal-to-noise ratio for, 525–530
- practical, 145–146
- quantizing, 142–145
- recovered analog signal at output of, 529
- sampling, 142–145
- for telephone systems, 151

Pulse duration modulation (PDM), 220

Pulse position modulation (PPM), 220–224

Pulse time modulation (PTM), 220–224

Pulse width modulation (PWM), 220–224, 319

Q

Q function, 700–701

Quadrature amplitude modulation (QAM), 313, 370–371, 371, 376

Quadrature components, 638

Quadrature detector, 278

Quadrature Fourier series, 72–73

Quadrature modulation (QM), 240, 241, 244, 292

Quadrature phase-shift keying (QPSK), 313, 367–370, 519–521

offset, 371, 374

 $\pi/4$, 374

Quadrature transform, 46

Qualcomm, 628

Quantized pulse amplitude modulation signal, 142

Quantizing, 141, 142–145

noise, 142, 195

nonuniform, 152–155

uniform, 142

Quasi-static approximation, 343

Quieting effect, 537

R

Radiation, 606, 611

Radio, 583, 621–622

Radio broadcast data (RBDC) system, 349

Radio frequency (RF), 13, 43, 653

Raised cosine-rolloff filtering, 191, 376–378 intersymbol interference (ISI), 189–194

Nyquist, 189, 191–192, 194

Ramp encoding, 145

Random-access memory (RAM), 290

Random noise, 150, 439, 534

Random process, 415, 475

bandpass, 476

complex, 423–424

continuous, 416

definition of, 415–416

ergodic, 419–420

function of, 415

Gaussian, 448

power spectral density for, 425

real, 415

single-sideband, 457

uncorrelated, 422

wide-sense stationary, 439

Random signal, 439

Random start-up phase, 453

Random variable map, 415

Random variables, 416, 494, 685

continuously distributed, 688

discretely distributed, 692

functional transformations of, 704–708

Gaussian, 451, 690, 700–702

moments of, 693

orthogonal, 711

two, sum of, 714

uniformly distributed, 715–716

Random waveform, 7, 34

Range

capture, 283

hold-in, 283, 286

lock, 283

pull-in, 283, 286

slant, 614

Raster scanning, 630

Rate

bit, 157, 649

bit error, 10, 26, 493, 523

code, 23

of information, 19

maximum locked sweep, 283

Nyquist, 133

source, 19

symbol, 157, 367

Ratio

average-signal-to-average-noise, 529

carrier-to-noise, 609, 611

decibel signal-to-noise, 42

Rayleigh probability density function, 462

RC low-pass filtering, 85, 187

equivalent bandwidth for, 446

group delay for, 252

intersymbol interference caused by, 187

with nonreturn-to-zero signaling, 504

output autocorrelation for, 442

power spectral density for, 442

root-mean-square bandwidth for, 446

signal-to-noise ratio at output of, 443

Read-only memory (ROM), 290

Real bandpass process, 453

Real random process, 415

Real roots, 713

Real signal, spectral symmetry of, 48

Real vectors, 713

Received signal

plus noise, 254

power, 597–600

power of, 597

Receiver

in band on channel, 351

circuitry, 511

communication systems, subsystem of, 8

direct conversion, 296–297

generalized, 292–296

input, 498

interference in, 297

interference with, 297

superheterodyne, 292–296

zero-IF, 296–297

Receiving antennas, 587

Reception, matched-filter, 498

Reciprocal element, 599

Reconstruction algorithm, 93

Recovered analog signal, 149

- Rectangular pulse, 56, 328
with an exponential, 61–62
convolution of, 61–62
sampling theorem for, 91–92
spectrum, 56, 78–79
Rectangular pulses, 56–60
Rectification, linear, 706
Redundancy time of code, 26
Reed-Solomon code, 22
Reed-Müller code, 22
Refraction index, 14
Regenerative repeaters, 176–178
Relative frequency, 682–685
conditional probability, 684–685
joint probability, 683–684
simple probability, 682–683
Relative value, 42
Remote terminals telephone systems, 571–577
Repeater, regenerative, 177
Reservations, 594
Resistance, radiation, 606
Resistive circuit, 259
Resistive load, 40
Resolution, 101, 633
Response
amplitude, 83
Butterworth, 255
Chebyshev, 255
frequency, 83
image, 294
impulse, 82
magnitude, 83
Return-to-zero line code, 164, 166
Return-to-zero (RZ), 171–173
Rice, S. O., 2
Rician probability density function, 513
Ring lead, 571
RLC circuit, 259
Roam mode, 624
Rolloff factor, 189
Root-mean-square bandwidth, 108, 444, 446
Root-mean-square (RMS), 40–41
for bipolar line code, 439
for ergodic random processes, 437–439
waveforms, 40–41
Roots, real, 713
Rotating phasor, 44
Rule
Carson's, 341, 589
L'Hospital's, 28
6dB, 150
- S**
- Sampling/sample, 142–145
early, 180
frequency, 95
function, 415
- instantaneous, 133, 220
late, 180
natural, 133, 220
nonuniformly spaced, 253
for rectangular pulse, 91–92
theorem, 90–93, 91–92
uniformly spaced, 253
- Satellite communication systems, 583–597, 590
analog television transmission, 587–589
data multiple access, 589–595
digital television transmission, 587–589
satellite radio broadcasting, 595–597
telephone signal multiple access, 589–595
- Satellite digital audio radio service (SDARS), 595–597
- Satellite radio broadcasting, 583, 595–597
- Satellite signal, 613–618
link budget evaluation for, 613–618
television receive-only terminal for, 613–618
- Satellite-to-Earth transmission, 586
- Satellites, 583
C-band, 589
communication, 586
direct-broadcast, 587
Galaxy, 613–618
geostationary, 597
high-power, 587
Intelsat series, 590
Ku band, 587
low-power, 587
medium-power, 587
- Saturation, 640
- Scanning, raster, 630
- Scattering, tropospheric, 17
- Schwarz's inequality, 477
- SDTV, 649
- Second audio program (SAP), 637
- Second generation (2G), 626–629
- Selectivity, frequency, 255
- Self-synchronization, 166
- Sequences
data, 517
direct, 389
hand off, 626
learning, 187
m-, 390
maximum-length, 390
training, 187
- Serial bit stream, 141
- Serial encoding, 145
- Serial input-output (SIO), 146
- Serial method, 383
- Series expansions, 674
- Service
A, 624
B, 624
circuit-switched, 570
nonwireline, 624
packet-switched, 570
- personal communication, 570
plain old telephone, 571
satellite digital audio radio, 595–597
wireline, 624
- Set, 681
- Shannon, C. E., 2, 19–20, 26, 28
- Shannon's limit, 28
- Sideband
lower single, 324
single, 10, 313
upper single, 324
vestigial, 328, 634
- Sifting property, 53
- Sigma-delta encoding, 145
- Signals/signaling. *See also specific types of*
amplitude-modulated, 246–247, 318
angle-modulated, 331, 346
antipodal, 493
average power, 149
bandlimited, 89–97
bandpass, 237
bandpass digital communication, 132
bandwidth of, 252
baseband, 9, 132, 429–432, 493, 532
basepass, 493
binary, 157, 158, 160, 198, 497
binary phase-shift keyed data, direct sequence
spreading, spread spectrum, 390
binary phase-shift keying, 108–109, 471, 507
black-and-white, 639
chrominance, 639
decibel of, 41–43
definition of, 34
difference, 498
digital, 177, 220
digitized, 591
discrete multitone, 388
energy, 35–36
fast frequency-shift keyed, 381
flat-top, 137
frequency-shift, 366
frequency-shift keying, 515
high-density bipolar n , 173
impulse sampled, 95
in-phase modulated, 240
intercarrier, 635
luminance, 639
machester, 166
minimum-shift keying, 381–383
modulated, 238, 241
modulating, 238, 344, 532
multilevel, 157, 162
narrowband angle-modulated, 341
nonreturn-to-zero, 168, 169, 504
orthogonal frequency-division multiplexing, 387–388
orthogonal series of, 69–71 (*See also specific types of*)
peak, 529

- Signal/signaling (*cont.*)
 phase modulation, 345, 348
 phasors of, 43–44
 power, 35–36, 537, 546
 properties of, 34–44
 pulse amplitude modulation, 142
 pulse code modulation, 151, 591
 quadrature amplitude, 371, 376
 quadrature modulated, 240
 quadrature modulated, spectrum for, 244
 random, 439
 random waveform approach to, 34
(See also Waveform)
 real, spectral symmetry of, 48
 received, 597
 recovered analog, 149
 satellite, 613–618
 sideband, 634
 skywave, 10
 source, 297
 spread spectrum, 396
 spreading, 389
 start-stop, 210
 synchronization, 178, 633
 technique, 511
 undesired, 294
 unsampled, 95, 137
 upper single, 326
 video, 633
 voice-frequency telephone, 151
 Signal-to-noise ratio (SNR), 149, 443
 Signal waveshape, known, 469
 Simple events, 682
 Simple probability, 682–683
 Single-asymmetric sideband signals, 324–328
 Single-balanced mixer, 270
 Single-carrier frequency, 619
 Single-channel per carrier (SCPC), 590–592
 Single-quadrant multiplier, 268
 Single-sideband amplitude modulation suppressed carrier (SSB-AM-SC), 241
 Single-sideband envelope (SSB-EV)
 detectable, 241
 Single-sideband frequency modulation (SSB-FM), 241
 Single-sideband phase modulation (SSB-PM), 241
 Single-sideband square-law (SSB-SQ)
 detectable, 241
 Single-sideband (SSB), 10, 313, 457,
 535–536
 Single-sided band mixer, 267
 Singular function, 675
 Sinusoid
 characteristic, 276
 damped, spectrum of, 51
 distributions, 703–704, 704–706
 fast Fourier transform, 104
 modulation, 335–337, 342, 345, 542
 power spectral density of, 66–67
 probability density function for, 703
 spectrum of, 54
 switched, spectrum of, 62
 waveform, 43
 waveshape, 44
 Sirius XM, 583, 595
 6-dB bandwidth, 189, 191
 6dB rule, 150
 Sky noise temperature, 617
 Sky-wave propagation, 15
 Sky waves, 10, 13
 Slant range, 614
 Slicing level, 221
 Slope detector, 277
 Slope overload noise, 200–203
 Slotted ALOHA technique, 594
 Small aperture terminals (VSAT), 594
 Smart card, 626
 Snell's law, 15
 Soft-decision algorithm, 24
 Software radios, 297–298
 Source
 codes, 9, 20
 noise, 597, 603, 606
 rate, 19
 signal, 297
 statistic, 495
 Space-division multiple access (SDMA), 590
 SPADE system, 590–592
 Specialized mobile radio (SMR)
 frequency, 628
 Spectral efficiency, 184–185, 376–378
 maximum, 184
 with raised cosine filtering, 376–378
 Spectral folding, 95
 Spectral shape, 105
 Spectrum, 44–63, 164–185
 of angle-modulated signals, 336–341
 of Bell-type 103 modem, 361–364
 binary line coding, 164–174
 bit synchronization, 178–181
 convolution, 60–63
 definition of, 44–48
 differential coding, 174–175
 Dirac delta function, 52–55
 energy spectral density, 49–52
 eye patterns, 175–176
 for fast Fourier transform, calculating, 101
 flat-top sampled pulse amplitude modulation, 141
 multi-level polar NRZ signals, power spectra for, 181–184
 one-sided, 75
 Parseval's Theorem, 49–52
 rectangular pulse, 78–79
 of rectangular pulse, 56
 rectangular pulses, 56–60
 regenerative repeaters, 176–178
 of sinusoid, 54
 spectral efficiency, 184–185
 square wave, 78–79
 of triangular pulse, 59–60
 triangular pulses, 56–60
 two-sided, 45
 unit step function, 52–55
 Speech coding, 204–206
 Split-phase encoding, 166
 Splitter, installation of, 579
 Spot-effective input-noise temperature, 604
 Spot noise figure, 603
 Spread-spectrum multiple access (SSMA), 590
 Spread spectrum (SS), 388–397
 direct sequence, 389–395
 frequency bands, 397
 frequency hopping, 396–397
 overlay, 395
 spread spectrum frequency bands, 397
 Spreading signal, 389
 Sprint, 629, 656
 Sprint Nextel Corp., 628
 Square-root raised cosine-rolloff Nyquist filter, 194
 Square wave spectrum, 78–79
 Square waves, average power for, 80
 Squaring loop, 322–324
 Standard cable system, 642
 Standard deviation, 693
 Standard (SD) format, 649
 Start-stop signaling, 210
 Stationarity
 definition of, 416–418
 first-order, 417–418
 wide-sense, 420, 426, 441, 451–453
 Statistic
 multivariate, 709
 priori, 495
 source, 495
 test, 494
 Step-size algorithm, 203
 Stochastic process, 415
 Stochastic waveform, 7
 Storage, energy, 255
 Stored program control, 577
 Stream, serial bit, 141
Student Solutions Manual, 7, 724
 Subsidiary communications authorization (SCA), 348–349
 Substation point, 614
 Subsystems of communication systems, 8
 Successive approximation encoding, 145
 Sunspots, 13
 Superheterodyne receivers, 292–296
 Sure events, 683
 Surface acoustic wave (SAW) filter, 257
 Switch circuit, 319
 Switched sinusoid, spectrum of, 62
 Symbol error, 523–524
 Symbol rate, 157, 367
 Symmetrical digital subscriber line (SDSL), 578
 Synchronization, 524–525

- bit, 178, 469
 carrier, 178
 early-late bit, 180–181
 frame, 178, 206, 593, 630
 frequency, 276
 horizontal, 631
 line, 210–212, 630
 mode, 395
 of oscillator, 287
 phase, 276
 pulse, 641, 651
 self-, 166
 signal, 178, 633
 vertical, 631
- Synchronous Optical Network (SONET), 213
 Synchronous transfer mode (STM), 219
- System
 advanced mobile phone, 624
 cable television, 644
 digital satellite, 588
 digital transmission development of, 3
 electronic switching, 577
 fiber-optic, 583, 619–620
 frequency modulation, 542
 global positioning, 583, 586, 629
 group special mobile, 626
 harmonic related carrier, 642
 ideal, 548
 incrementally related carrier, 642
 Intelsat X, 583
 linear, 441
 North American digital cellular, 628
 pulse code modulation, 529
 radio broadcast data, 349
 satellite, 583
 spread spectrum, 389
 standard cable, 642
 telephone, 571
 television, 570
 time-division multiplex, 525
 WaveStar fiber optic, 583
- Systematic block code, 22
- T**
- Tamed frequency modulation (TFM), 383
 T-band channel, 644
 Technique
 ALOHA, 594
 analog, 436
 code-division multiple-access, 389, 395
 fractional- N , 289
 frequency-division multiple access, 389
 general, 493
 hybrid, 389
 interlacing, 630
 signaling, 511
 time-division multiple access, 389
- Telecommunications, 569–570
- Telegraph systems, 3
 Telephone, 570–577
 BlackBerry, 622
 extension, 579
 historical basis, 570–571
 iPhone, 622
 modern, 571–577
 Palm, 622
 remote terminals, 571–577
 two-wire, 571
- Telephone company (TELCO), 580
 Telephone signal multiple access, 589–595
- Television (TV), 570, 630
 cable, 43
 digital, 570, 588, 630
 high-definition, 580, 649
 receive-only terminal, 613–618
 standards for, 641–649
- Telstar 1* satellite, 3
- Temperature
 additional, 604
 input-noise, 604, 605, 609
 noise, 602, 617
- Terminals
 remote, 573
 small aperture, 594
 very small aperture, 583
- Test statistic, 494
- Theorem
 bandpass dimensionality, 253–254
 bandpass sampling, 253
 Bayes', 684
 central limit, 715
 dimensionality, 95–97
 of distributions, 53
 Euler's, 669
 sampling, 91–92
 Wiener–Khintchine, 66, 245, 428, 432, 475
- Thermal noise, sources of, 600–601
- Third generation (3G), 629
 Thomson Consumer Electronics, 649
 3-dB bandwidth, 105, 444
 3-dB frequency, 86
 Threshold effect, 535
 Threshold extension, 543–545
TI carrier system, 213
- Time average operator, 36–37
 Time axis of digital signal, 220
 Time-bandwidth (TW) product, 467
 Time constant, 86
 Time delay, 87, 89
 Time-division multiple access (TDMA), 389, 590, 628
- Time-division multiplexing (TDM), 133, 206–219, 210, 525, 570, 597
 asynchronous lines, 210–212
 design of, 211–212
 frame synchronization, 206–209
 hierarchy, 213–215
 intelligent, 210
 synchronous lines, 210–212
- T1 PCM system, 215–219
 Time function, 712
 Time-invariant linear system, 441
 Time limited waveform, 90
 Time resolution, 101
 Time-slot interchange (TSI), 577
 Time Warner Cable, 656
 Timing, 176, 190
 Timing error, 176
 Tip lead, 571
 T1 PCM system, 215–219
 Total harmonic distortion (THD), 260
 Tracking antennas, 586
 Training preambles, 187
 Training sequences, 187
 Transfer function, 83, 464
 of filter, 257
 in linear systems, 83–86
 output-to-input, 704
- Transform. *See also* Fourier transform (FT)
 Cartesian, 46
 coordinate, 713
 discrete cosine, 651
 Hilbert, 324, 675
 linear, 449
 magnitude-phase, 46
 polar, 46
 quadrature, 46
- Transistor circuit, 319
 Transistor-transistor logic (TTL), 238, 241
- Transmission
 bandpass, 252
 bandwidth, 167, 589
 communication systems, subsystem of, 8
 Earth-to-satellite, 586
 generalized, 290–292
 of information source, 17
 line, 606–607
 line filter, 257
 packet data, 570
 point-to-multipoint, 594
 satellite-to-Earth, 586
 time-division multiplex, 570
- Transmitting antennas, 587
- Transparency, 167
- Transponders, 587
- Transversal filter, 195, 257
 Transversal matched filter, 471–474
 Traveling-wave tubes (TWT), 264
 Trellis-coded modulation (TCM), 28–29, 28–30
- Triangular modulation, 344–345
 Triangular pulse, 56–60
 convolution of, 62
 spectrum of, 59–60
- Trigonometry, 669–670
 Tripler stage, 273
- Tropospheric scattering, 17
- Tube circuit, 319
- Tuned radio-frequency (TRF), 292–293
- Turbo code, 28

Two-level data, 165
 Two-quadrant multiplier, 268
 Two random variables, sum of, 714
 Two-sided spectrum, 45
 Two-wire circuit, 573
 Two-wire telephone system, 571
 Type II minimum-shift signaling, 381–382

U

Unbalanced mixer, 270
 Unbalanced on-off keying, 371
 Unbiased power spectral density, 437
 Uncorrelated process, 476
 Uncorrelated random process, 422
 Undesired signal, 294
 Uniform distributions, 698, 703
 Uniform probability density function, 463
 Uniformly distributed random variables, 715–716
 Uniformly spaced sample, 253
 Uniform quantizing, 142
 Union, 682
 Unipolar nonreturn-to-zero signaling, 168, 504
 Unipolar return-to-zero, 171
 Unipolar signaling, 499–501
 Unit impulse function, 675
 Unit step function, 52–55, 53
 Universal asynchronous receiver/transmitter (UART), 146
 Universal set, 681
 Universal synchronous/asynchronous receiver/transmitter (USART), 146
 Universal synchronous receiver/transmitter (USRT), 146
 Unsampled signal, 95, 137
 Unsampled waveform, 135
 Unwrapping phase, 540
 Up converters, 266–272
 Upper single sideband (USSB), 324, 326
 Urban wireless environments, path loss for, 613–618

V

Value
 absolute, 713
 expected, 692
 integer, 289
 noninteger, 289
 orthogonal, 422
 relative, 42
 root-mean-square, 40–41
 Vector frequency (VF) delta modulation, 203
 Vector representation, 157–159
 Vector-sum excited linear prediction (VSELP), 204, 628
 Vectors, real, 713

Vectorscope, 640
 Venn diagram, 681
 Verizon, 629
 Vertical-line resolution, 633
 Vertical sync, 631
 Very-high-bit-rate digital subscriber line (VDSL), 578
 Very-high-speed integrated (VHSIC) circuit, 30
 Vestigial asymmetric sideband signals, 328–330
 Vestigial sideband (VSB), 328, 634
 Video distortion in linear systems, 89
 Video on demand (VOD), 580
 Video signal, 633
 Virtual channel, 653
 Virtual private network (VPN), 628
 Viterbi decoding, 24
 Vocoders, 204
 Voice-frequency (VF) telephone signal, 151
 Voice over Internet (VoIP) protocol, 629
 Voltage-controlled clock (VCC), 181
 Voltage-controlled oscillator (VCO), 282–283

W

Wasted carrier power, 548
 Waveform
 analog, 6, 132, 162
 autocorrelation of, 390
 bandlimited, 90
 bandpass, 238, 239, 241, 245
 baseband, 238, 240
 coders, 204
 convolution of, 60
 deterministic, 6–7
 digital, 6, 162
 direct current, 37–38
 direct current value of, 37–38
 energy, 41
 monitor, 630
 periodic, 37, 75, 80
 physical, 71, 90–91
 physically realizable, 35–36
 power, 41
 power spectral density of, 244
 properties of, 34, 35
 random, 7
 root-mean-square value of, 40–41
 sinusoidal, 43
 stochastic, 7
 time average operator of, 36–37
 time limited, 90
 transistor-transistor logic, 238
 unsampled, 135
 windowed, 98
 Waves
 ground, 13
 periodic rectangular, Fourier coefficients for, 77–78
 radio-frequency, 13, 43

sky, 13
 square, 80
 Waveshape
 filtered, 499
 input-signal, 466
 known, 464
 signal, 469
 sinusoidal, 44
 WaveStar fiber optic system, 583
 Weaver's method, 327
 White bandpass noise, 457–458
 White Gaussian noise, 450, 497–498
 White noise, 475, 498
 process, 435–436
 results for, 466–469
 Wide pulse, 631
 Wide-sense stationarity (WSS), 420, 426, 441, 445
 bandpass, 445
 bandpass process, properties of, 454–463
 definition of, 420–423
 Gaussian process, 461
 jointly, 451–453
 low-pass, 444
 random process, 439

Wideband frequency modulation (WBFM), 341, 344–345
 Wiener, N., 2
 Wiener-Khintchine theorem, 66, 245, 426–428, 428, 432, 475
 WiFi, 655–656
 Wikipedia, 655, 656
 WiMAX, 629, 656–657
 Windowed waveform, 98
 Wire channel, 9
 Wireband frequency modulation, 342–346
 Wireless channel, 9
 Wireless data networks, 655–657
 WiFi, 655–656
 WiMAX, 656–657
 Wireless local area network (WLAN), 655
 Wireless metropolitan area network (WMAN), 656
 Wireline service, 624

Y

Y-factor method, 604

Z

Zenith Electronics Corporation, 649
 Zero-crossing bandwidth, 107, 444
 Zero-crossing detector, 281
 Zero-IF receivers, 296–297
 Zero-padding, 100

TABLE 2-1 SOME FOURIER TRANSFORM THEOREMS^a

Operation	Function	Fourier Transform
Linearity	$a_1w_1(t) + a_2w_2(t)$	$a_1W_1(f) + a_2W_2(f)$
Time delay	$w(t - T_d)$	$W(f) e^{-j\omega T_d}$
Scale change	$w(at)$	$\frac{1}{ a } W\left(\frac{f}{a}\right)$
Conjugation	$w^*(t)$	$W^*(-f)$
Duality	$W(t)$	$w(-f)$
Real signal frequency translation [$w(t)$ is real]	$w(t) \cos(\omega_c t + \theta)$	$\frac{1}{2}[e^{j\theta}W(f - f_c) + e^{-j\theta}W(f + f_c)]$
Complex signal frequency translation	$w(t) e^{j\omega_c t}$	$W(f - f_c)$
Bandpass signal	$\operatorname{Re}\{g(t) e^{j\omega_c t}\}$	$\frac{1}{2}[G(f - f_c) + G^*(-f - f_c)]$
Differentiation	$\frac{d^n w(t)}{dt^n}$	$(j2\pi f)^n W(f)$
Integration	$\int_{-\infty}^t w(\lambda) d\lambda$	$(j2\pi f)^{-1} W(f) + \frac{1}{2} W(0) \delta(f)$
Convolution	$w_1(l) * w_2(t) =$ $\int_{-\infty}^{\infty} w_1(\lambda) \cdot w_2(t - \lambda) d\lambda$	$W_1(f)W_2(f)$
Multiplication ^b	$w_1(t)w_2(t)$	$W_1(f) * W_2(f) = \int_{-\infty}^{\infty} W_1(\lambda)W_2(f - \lambda) d\lambda$
Multiplication by t^n	$t^n w(t)$	$(-j2\pi)^{-n} \frac{d^n W(f)}{df^n}$

^a $\omega_c = 2\pi f_c$ ^b * denotes convolution as described in detail by Eq. (2-62).

TABLE 2–2 SOME FOURIER TRANSFORM PAIRS

Function	Time Waveform $w(t)$	Spectrum $W(f)$
Rectangular	$\Pi\left(\frac{t}{T}\right)$	$T[\text{Sa}(\pi fT)]$
Triangular	$\Lambda\left(\frac{t}{T}\right)$	$T[\text{Sa}(\pi fT)]^2$
Unit step	$u(t) \triangleq \begin{cases} +1, & t > 0 \\ 0, & t < 0 \end{cases}$	$\frac{1}{2}\delta(f) + \frac{1}{j2\pi f}$
Signum	$sgn(t) \triangleq \begin{cases} +1, & t > 0 \\ -1, & t < 0 \end{cases}$	$\frac{1}{j\pi f}$
Constant	1	$\delta(f)$
Impulse at $t = t_0$	$\delta(t - t_0)$	$e^{-j2\pi f t_0}$
Sinc	$\text{Sa}(2\pi Wt)$	$\frac{1}{2W} \Pi\left(\frac{f}{2W}\right)$
Phasor	$e^{j(\omega_0 t + \varphi)}$	$e^{j\varphi} \delta(f - f_0)$
Sinusoid	$\cos(\omega_c t + \varphi)$	$\frac{1}{2} e^{j\varphi} \delta(f - f_c) + \frac{1}{2} e^{-j\varphi} \delta(f + f_c)$
Gaussian	$e^{-\pi(t/t_0)^2}$	$t_0 e^{-\pi(f t_0)^2}$
Exponential, one-sided	$\begin{cases} e^{-r/T}, & t > 0 \\ 0, & t < 0 \end{cases}$	$\frac{T}{1 + j2\pi f T}$
Exponential, two-sided	$e^{- t /T}$	$\frac{2T}{1 + (2\pi f T)^2}$
Impulse train	$\sum_{k=-\infty}^{k=\infty} \delta(t - kT)$	$f_0 \sum_{n=-\infty}^{n=\infty} \delta(f - n f_0),$ where $f_0 = 1/T$

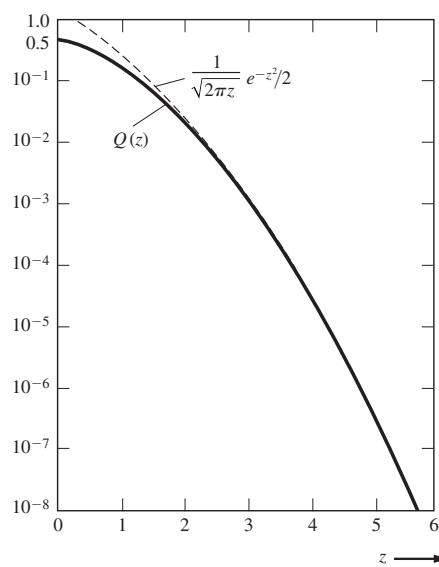


Figure B–7 The function $Q(z)$ and an overbound, $\frac{1}{\sqrt{2\pi z}} e^{-z^2/2}$.