Interrupts Chapter 11

Lecture 6

Bilal Habib DCSE, UET

Interrupts vs. Polling

- An interrupt is an external or internal event that interrupts the microcontroller to inform it that a device needs its service
- A single microcontroller can serve several devices by two ways
 - Interrupts
 - Whenever any device needs its service, the device notifies the microcontroller by sending it an interrupt signal
 - Upon receiving an interrupt signal, the microcontroller interrupts whatever it is doing and serves the device
 - The program which is associated with the interrupt is called the interrupt service routine (ISR) or interrupt handler


Interrupts vs.
Polling
(cont')

- □ (cont')
 - Polling
 - The microcontroller continuously monitors the status of a given device
 - When the conditions met, it performs the service
 - After that, it moves on to monitor the next device until every one is serviced
- Polling can monitor the status of several devices and serve each of them as certain conditions are met
 - The polling method is not efficient, since it wastes much of the microcontroller's time by polling devices that do not need service
 - > ex. JNB TF, target

Interrupts vs.
Polling
(cont')

- The advantage of interrupts is that the microcontroller can serve many devices (not all at the same time)
 - Each devices can get the attention of the microcontroller based on the assigned priority
 - For the polling method, it is not possible to assign priority since it checks all devices in a round-robin fashion
- The microcontroller can also ignore (mask) a device request for service
 - This is not possible for the polling method

Polling VS Interrupts

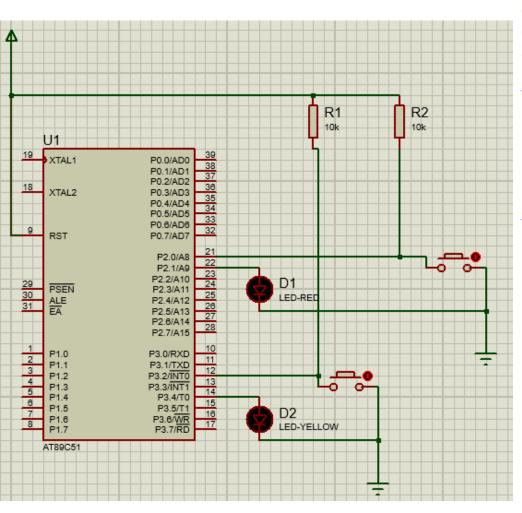

```
#include <req51.h>
#include <stdio.h>
sbit polling button = P2^0;
sbit LED red = P2^1;
sbit interrupt button = P3^2;
sbit LED yellow = P3^4;
int i = 0;
void ext int 0() interrupt 0 // ISR for External Interrupt 0 (INTO)
   for (i = 0; i < 1000; i++); // To take care of debouncing
   LED yellow ^= 1; // LED yellow = LED yellow ^ 1;
void main()
  interrupt button = 1; // Configure the INTO pin as Inputs
  polling button = 1; // Configure P2.0 as input
  EX0 = 1; // Enable INTO, IE register
  EA = 1; // Enable Global Interrupt bit, IE register
   while (1)
   if(polling button == 0)
       LED red = 1;
    else
       LED red = 0;
```

Interrupt Service Routine

- For every interrupt, there must be an interrupt service routine (ISR), or interrupt handler
 - When an interrupt is invoked, the microcontroller runs the interrupt service routine
 - For every interrupt, there is a fixed location in memory that holds the address of its ISR
 - The group of memory locations set aside to hold the addresses of ISRs is called interrupt vector table

Steps in Executing an Interrupt

- Upon activation of an interrupt, the microcontroller goes through the following steps
 - It finishes the instruction it is executing and saves the address of the next instruction (PC) on the stack
 - 2. It also saves the current status of all the interrupts internally (i.e: not on the stack)
 - It jumps to a fixed location in memory, called the interrupt vector table, that holds the address of the ISR

Steps in Executing an Interrupt (cont') (cont')

- 4. The microcontroller gets the address of the ISR from the interrupt vector table and jumps to it
 - It starts to execute the interrupt service subroutine until it reaches the last instruction of the subroutine which is RETI (return from interrupt)
- Upon executing the RETI instruction, the microcontroller returns to the place where it was interrupted
 - First, it gets the program counter (PC) address from the stack by popping the top two bytes of the stack into the PC
 - Then it starts to execute from that address

Six Interrupts in 8051

- Six interrupts are allocated as follows
 - Reset power-up reset
 - Two interrupts are set aside for the timers: one for timer 0 and one for timer 1
 - Two interrupts are set aside for hardware external interrupts
 - P3.2 and P3.3 are for the external hardware interrupts INTO (or EX1), and INT1 (or EX2)
 - Serial communication has a single interrupt that belongs to both receive and transfer

Six Interrupts in 8051 (cont')

Interrupt vector table

Interrupt	ROM Location (hex)	Pin
Reset	0000	9
External HW (INT0)	0003	P3.2 (12)
Timer 0 (TF0)	000B	
External HW (INT1)	0013	P3.3 (13)
Timer 1 (TF1)	001B	
Serial COM (RI and TI)	0023	

```
ORG 0 ; wake-up ROM reset location

LJMP MAIN ; by-pass int. vector table

;---- the wake-up program

ORG 30H


MAIN:

Only three bytes of ROM space assigned to the reset pin. We put the LJMP as the first instruction and redirect the processor away from the interrupt vector table.
```

Enabling and Disabling an Interrupt

- Upon reset, all interrupts are disabled (masked), meaning that none will be responded to by the microcontroller if they are activated
- The interrupts must be enabled by software in order for the microcontroller to respond to them
 - There is a register called IE (interrupt enable) that is responsible for enabling (unmasking) and disabling (masking) the interrupts

Enabling and Disabling an Interrupt (cont')

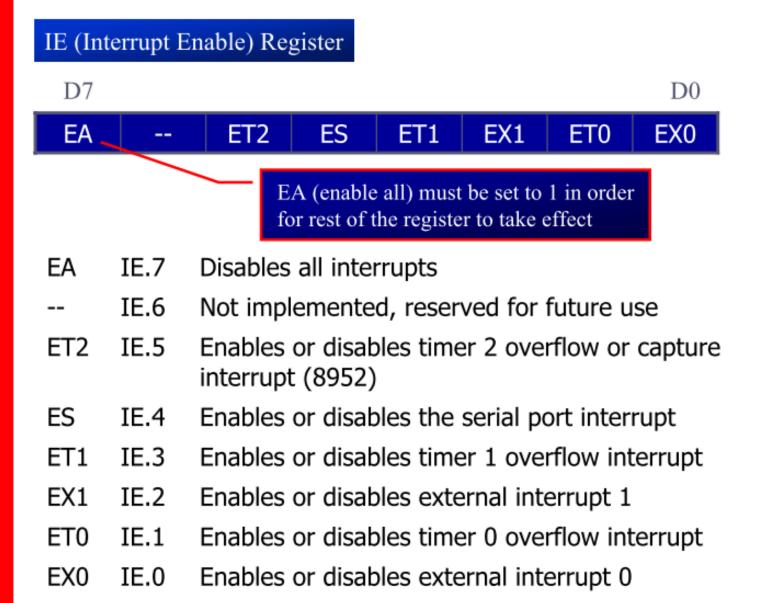

Enabling and Disabling an Interrupt (cont')

- To enable an interrupt, we take the following steps:
 - Bit D7 of the IE register (EA) must be set to high to allow the rest of register to take effect
 - 2. The value of EA
 - If EA = 1, interrupts are enabled and will be responded to if their corresponding bits in IE are high
 - If EA = 0, no interrupt will be responded to, even if the associated bit in the IE register is high

Enabling and Disabling interrupts

Example 11-1

Show the instructions to (a) enable the **serial** interrupt, **timer 0** interrupt, and **external** hardware interrupt 1 (**EX1**), and (b) disable (mask) the timer 0 interrupt, then (c) show how to disable all the interrupts with a single instruction.

D0

EX0

ET0

D7Solution: (a) MOV IE,#10010110B ;enable serial, EΑ ET2 ES ET1 EX1 ;timer 0, EX1 IE = 0x 96;Another way to perform the same manipulation is SETB IE.7 ;EA=1, global enable SETB IE.4 ;enable serial interrupt SETB IE.1 ;enable Timer 0 interrupt SETB IE.2 ; enable EX1 (b) CLR IE.1 ;mask (disable) timer 0 ;interrupt only, IE = 0xFD = 1111 1101 ;

(c) CLR IE.7 ; disable all interrupts

IE = 0x7F;//It will disable all interrupts


EXTERNAL HARDWARE INTERRUPTS

- The 8051 has two external hardware interrupts
 - Pin 12 (P3.2) and pin 13 (P3.3) of the 8051, designated as INTO and INT1, are used as external hardware interrupts
 - The interrupt vector table locations 0003H and 0013H are set aside for INT0 and INT1
 - There are two activation levels for the external hardware interrupts
 - Level trigged
 - Edge trigged

triggered

EXTERNAL HARDWARE INTERRUPTS (cont')

Activation of INT0

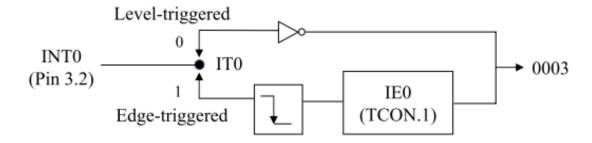

Activation of INT1

