8086 Microprocessor Addressing Modes Explained with Assembly Examples

This article contains information on 8086 microprocessor adressing mode and each addressing mode is explained with examples.

Table of Contents

- What is Adressing Mode?
 - 1. Register addressing mode
 - o 2. Immediate Addressing Mode
 - 3. Direct Addressing Mode
 - 4. Register Indirect Addressing Mode
 - 5. Based Relative Addressing Mode
 - o 6. Indexed Relative Addressing Mode
 - o 7. Based Indexed Addressing Mode

What is Adressing Mode?

Addressing modes are different ways by which CPU can access data or operands. They determine how to access a specific memory address. To load any data from and to memory/registers, MOV instruction is used. The syntax of MOV instruction is:

MOV Destination, Source

It copies the data of 2nd operand (source) into the 1st operand (destination). To access memory, segment registers are used along with general-purpose registers.

If you don't know about internal register of 8086 microprocessor, read this article:

8086 Microprocessor Architecture

There are seven addressing modes in 8086 processor. Now, we will discuss all of them in detail with example assembly instructions.

1. Register addressing mode

This mode involves the use of registers. These registers hold the operands. This mode is very fast as compared to others because CPU doesn't need to access memory. CPU can directly perform an operation through registers.

For example:

```
MOV AX, BL
```

The above two instructions copy the data of BL register to AX and AL.

Example Assembly Code

The ORG 100h is a directive which tells the compiler how to handle the source code.


It sets the wrent address

```
ORG 100h

MOV AX, CX

ret

Output:
```

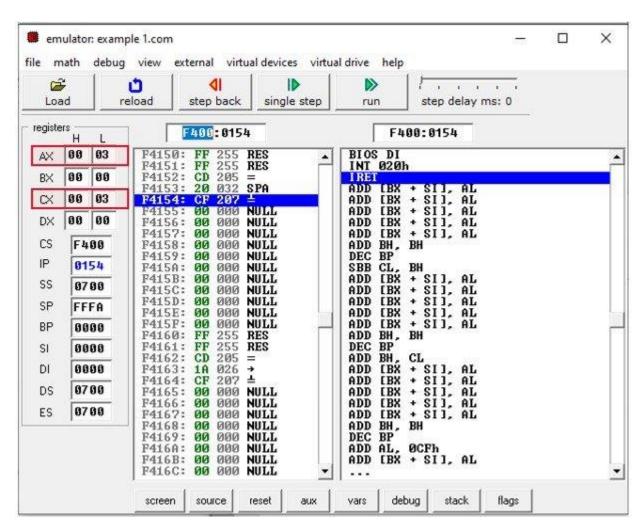

In this example, you can see a red box in the output. This red box indicates the content of AX and CX registers. The content of both AX and CX registers are the same. Because the above example moves the content of CX into AX register.

2. Immediate Addressing Mode

In this mode, there are two operands. One is a register and the other is a constant value. The register comes quickly after the op code.

For example:

- The instruction MOV AX, 30H copies hexadecimal value 30H to register
 AX.
- The instructions MOV BX, 255 copies decimal value 255 to register BX. You cannot use the immediate addressing mode to load immediate value into segment registers. To move any value into segment registers, first load that value into a general-purpose register then add this value into segment register.

Example Assembly Code

Let us suppose you want to store 320H into DS register.


```
ORG 100h

MOV AX,320H ;copies hexadecimal value 320h to AX

MOV DS, AX ;copies value of AX into DS

ret ;stops the program
```

Output

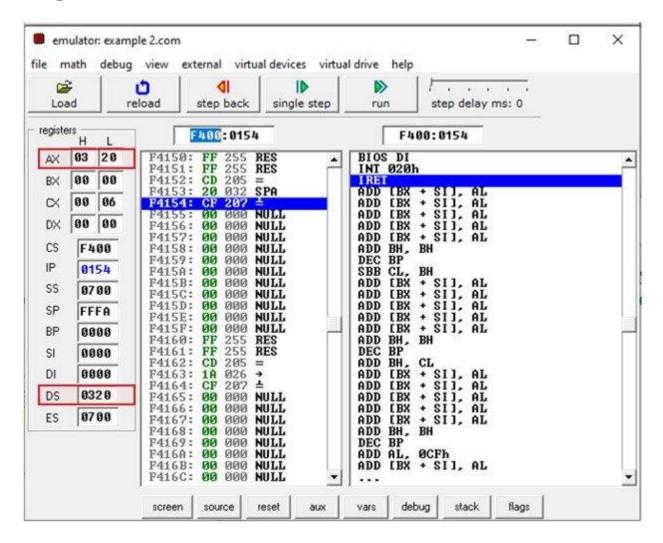

If 0320h is added directly into the DS register using MOV instruction, the compiler will generate an error.

3. Direct Addressing Mode

It loads or stores the data from memory to register and vice versa. The instruction consists of a register and an offset address. To compute physical address, shift left the DS register and add the offset address into it.

MOV CX. [481]


The hexadecimal value of 481 is <u>1E1</u>. Assume DS=2162H then the logical address will be 2162:01E1. To compute physical address, shift left the DS register and add it to offset address. The physical address will be 26120H + 1E1H=26301H. Hence, after execution of the MOV instruction the contents of the memory location 26301H will be loaded into the register CX. The instruction MOV [2481], CX will store the CX register content to memory location 26301H.

Example Code

ORG 100h MOV AX, 2162H ;copies hexadecimal value 2162h to AX

```
MOV DS, AX ;copies value of AX into DS
MOV CX, 24 ;copies decimal value 24 into CX
MOV [481], CX ;stores the data of CX to memory address 2162:01E1
MOV BX, [481] ;load data from memory address 2162:01E1 into BX
RET ;stops the program
```

Output

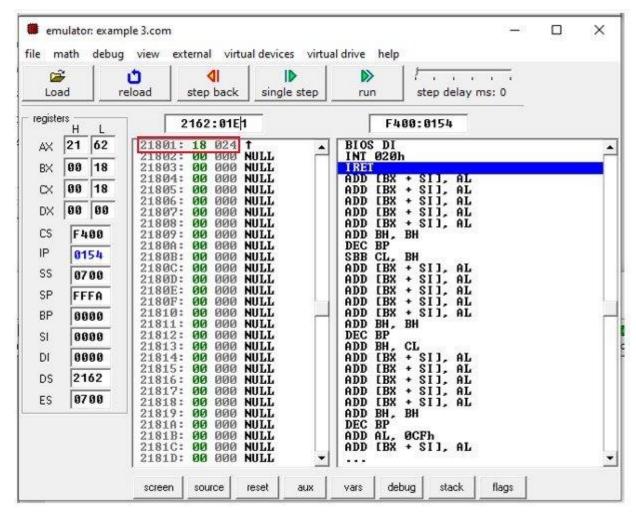

In this example, the red box indicates the hexadecimal value 18 and decimal value 24 is stored at memory address 21801h.

4. Register Indirect Addressing Mode

The register indirect addressing mode uses the offset address which resides in one of these three registers i.e., BX, SI, DI. The sum of offset address and the DS value shifted by one position generates a physical address. For example:

MOV AL, [SI]

This instruction will calculate the physical address by shifting DS to the left by one position and adding it to the offset address residing in SI. The brackets around SI indicates that the SI contain the offset address of memory location

whose data needs to be accessed. If brackets are absent, then the instruction will copy the contents of SI register to AL. Therefore, brackets are necessary.

Example Code

```
ORG 100h

MOV AX, 0708h    ;set AX to hexadecimal value of 0708h.

MOV DS, AX     ;copy value of AX to DS


MOV CX, 0154h    ;set CX to hexadecimal value of 0154h.

MOV SI, 42Ah    ;set SI to 42Ah.

MOV [SI], CX    ;copy contents of CX to memory at 0708:042Ah

RET    ;returns to operating system
```

Output

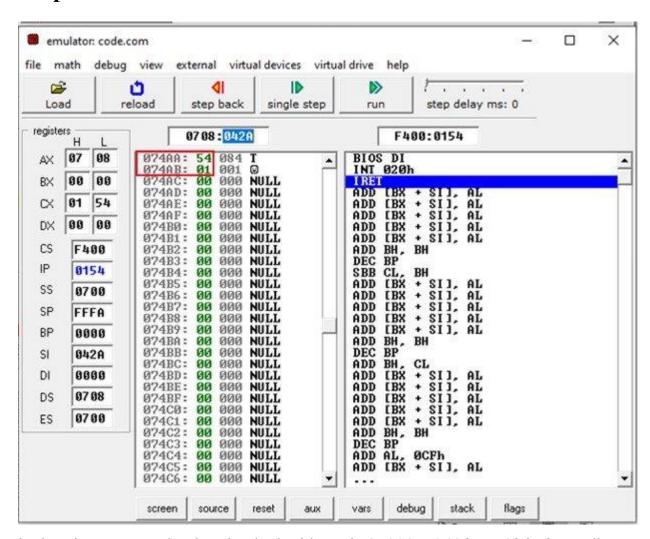

In the above example, the physical address is 07080 + 042A = 74AA. According to the little-endian convention, the 074AA will store the lowest bytes of data i.e., 54 and the 074AB will store the most significant bits of data i.e. 01.

5. Based Relative Addressing Mode

This addressing mode uses a base register either BX or BP and a displacement value to calculate physical address.

Physical Address= Segment Register (Shifted to left by 1) + Effective address

The effective address is the sum of offset register and displacement value. The default segments for BX and BP are DS and SS. For example:

```
MOV [BX+5], DX
```

In this example, the effective address is BX + 5 and the physical address is DS (shifted left) + BX+5. The instruction on execution will copy the value of DX to memory location of physical address= DS (shifted left) +BX+5.

Example 1 Code

```
ORG 100h

MOV AX, 0708h    ;set AX to hexadecimal value of 0708h.

MOV DS, AX     ;copy value of AX to DS


MOV CX, 0154h    ;set CX to hexadecimal value of 0154h.

MOV BX, 42Ah    ;set BX to 42Ah.

MOV [BX+5],DX    ;copy contents of DX to memory at 0708:042Fh

RET    ;returns to operating system
```

Output

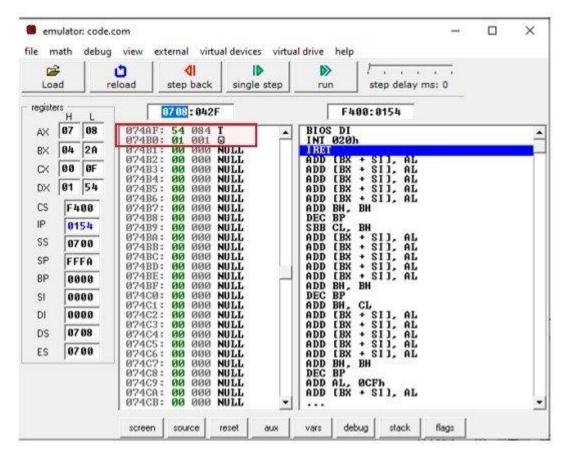

Some other alternative codings for MOV DX, [BX+5] are:

```
MOV DX, 5[BX]
MOV DX, [BX]+5
```

The instructions given below will load the value from memory location to register.

```
MOV [BX+10], DX
```

Now, suppose the base register is BP. Then, in this case, the default segment would be SS. In the above example, replace BX by BP. Now the physical address is equal to SS (shifted left) +BX+5 which is equal to 742F.

Example 2 Code

```
ORG 100h

MOV AX, 0708h    ;set AX to hexadecimal value of 0708h.

MOV DS, AX     ;copy value of AX to DS


MOV DX, 0154h    ;set DX to hexadecimal value of 0154h.

MOV BP, 42Ah    ;set BP to 42Ah.

MOV [BP+5],DX    ;copy contents of DX to memory at 0708:042Fh

RET    ;returns to operating system
```

Output

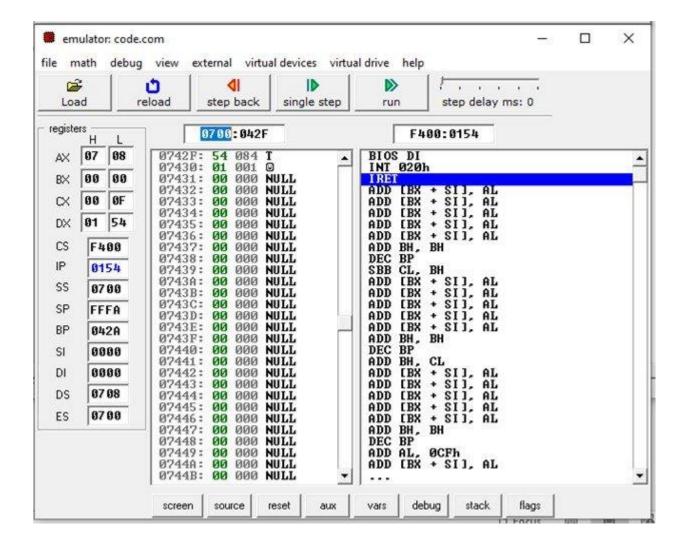

6. Indexed Relative Addressing Mode

This addressing mode is same as the based relative addressing mode. The only difference is it uses DI and SI registers instead of BX and BP registers.

For example:

Given that DS=704, SI = 2B2, DI = 145

MOV [DI]+12, AL

This instruction on execution will copy the content of AL at memory address 7197 (7040 + 145 + 12)

MOV BX, [SI]+10

This instruction will load the contents from memory address 7302 (7040 +2B2 +10) to register BX.

7. Based Indexed Addressing Mode

The based indexed addressing mode is actually a combination of based relative addressing mode and indexed relative addressing mode. It uses one base register (BX, BP) and one index register (SI, DI). For example:

```
MOV AX, [BX+SI+20]
```

The above instruction can also be written as:

```
MOV AX, [SI+BX+20]
Or
```

```
MOV AX, [SI][BX]+20
```

In this case, the physical address will be DS (Shifted left) + SI + BX + 20. Now, if we replace BX with BP then the physical address is equal to SS (Shifted left) + SI + BX + 20.


Now, let us have a look on these two instructions:

```
MOV AX, [BX][BP]+20
MOV AX, [SI][DI]+20
```

Both expressions are illegal as this mode supports one base register and one segment register.

Example Code

Output

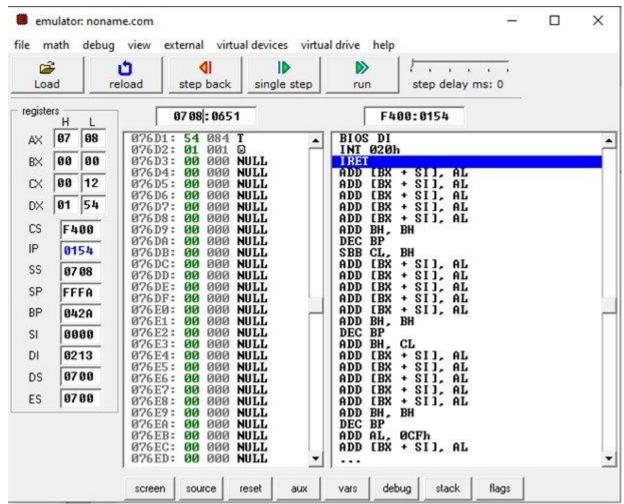

In conclusion, addressing modes are ways to access the operands. The programmer can use any of these seven addressing modes depending upon the program.