

Installation & Owner's Manual

FOR TECHNICAL ASSISTANCE: CONTACT YOUR LOCAL DISTRIBUTOR

For a list of distributors, visit the Merit Industries, Inc. Web site www.meritind.com



merit industries, inc.

PM0481-06

Table of Contents

Site Preparationp. 1							
Setting up your Megatouch Gamep. 1-2							
Game Descriptionp. 2							
CPU Sectionp. 2							
Cash Box Sectionp. 2							
Ticket Dispenser/ Coupon Printer Sectionp. 2							
General Care and Maintenancep. 2-3							
Screen Calibrationp. 2							
Monitor Color Adjustment Proceduresp. 2-3							
General Circuit Board Handling Informationp. 3							
Cleaning the Cabinetp. 4							
Cleaning the Touchscreen Monitorp. 4							
Cleaning the Fans and Ventsp. 4							
Watch Dog Timerp. 4							
Megatouch FORCE Software							
Main Menup. 5-6							
Credits/Pricing Menup. 7-8							
Quick Price Setupp. 7							
Coin-In Menup. 8							
Games Menup. 9							
Game Setupp. 9							
Books Menup. 10-11							
Books Displayp. 10							
Cash Settlementp. 11							
System Monu n 12							

Diagnostics Menup. 13
Presentation Menup. 14
Operator Ad Screensp. 14
Fun Zone Setupp. 14-16
Coupon Setupp. 14
Local Prize Setupp. 14
Ticket Setupp. 15-16
Transaction Logp. 16
Megatouch FORCE Hardware
DIP Switch Settings
in FORCE Gamesp. 17
Troubleshootingp. 18-20
Printerp. 21-22
Changing the Paperp. 21
Testing the Printerp. 22
Troubleshootingp. 22
Ticket Dispenserp. 23
Loading Ticketsp. 23
Parts List and Illustrations
Game Illustrationp. 24-25
Replacement Parts Listp. 26
Connection Diagramsp. 27-29
Warranty and Software License Agreements
Warranty p. 30
Software License Agreementp. 31-36
Englishp. 31-32
Frenchp. 33-34
German n 35-36

© 2005 Merit Industries, Inc.


Site Preparation

In determining the location for your Megatouch video game, consideration must be given to a suitable, grounded electrical outlet. Since the game is a computerized device, it should have a separate circuit, if at all possible. If a separate circuit is not available, care should be taken to provide a clean and constant voltage. As a basic guideline, never connect the unit to a circuit that also supplies power to freezers, coolers or other high power consuming and electrical noise generating equipment. Place the game in a location where nothing will interfere with proper ventilation. The game should not be exposed to any dripping or splashing liquids. Objects filled with liquid should not be placed on the unit.

The upright model should be located on a sturdy, level surface. The bottom of the cabinet has two leg levellers on the back to make any necessary adjustments. When the game is properly adjusted, it should remain stable. The game is designed to be secured to a wall. Locate the supplied hardware inside the coin box and follow the instructions below to secure the game.

- Locate a wall stud to mount the game.
- Measure 46" from the floor on the mounting stud and drill a hole to install the hardware. Installation into a wooden stud requires a 2" deep x 1/4" hole. For masonry walls drill a 1 1/4" deep x 1/2" hole. For steel stud or hollow walls drill an 11/16" hole.
- For wooden stud installation, screw the lag eyebolt into the hole (see Figure A).
 For masonry wall, insert the lag shield into the hole and then insert and tighten the machine eyebolt (see Figure B). For steel stud or hollow walls, insert the toggle bolt into the hole and then insert

- the machine eyebolt, nut and washer and tighten (see Figure C).
- Route the lanyard through the eye bolt and attach it to the snap spring as shown in Figure D. Then, attach the snap spring to the handle on the back of the game.

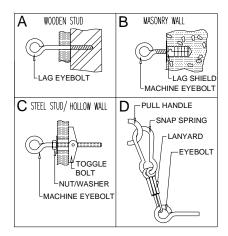

Setting up your Megatouch Game

- After removing the game from the carton, attach the power cord to the back of the game, near the on/off switch.
 Plug the game into a standard AC outlet
- Follow the instructions in the **Ticket Dispenser** or **Printer** section of the manual to load the tickets or paper. The tickets are located inside on the bottom of the cabinent and the paper is in the coin box.
- Turn the power switch at the back of the game to ON and wait for it to go through its boot-up sequence. At the completion of the boot-up sequence, the game will display the Player Menu.
- The machine has been preset at the factory and therefore should not need to be adjusted, however it is recommended that the screen be calibrated

(see **Screen Calibration**) and the coin or bill acceptor(s) be tested.

There are many custom settings available for the game. To customize the settings, follow the instructions beginning with the Main Menu section.

Game Description

The Megatouch Fun Zone comes housed in a 17" upright cabinet. This model has 4 keylocked compartments: the main bezel door, the coin/bill door, the rear door, and the ticket dispenser/coupon printer door.

The rear compartment of the game allows access to storage space for add-on accessories.

CPU Section

The CPU section is accessible by opening the front bezel. The bezel houses the LCD and the CPU section houses an electronics box which contains the motherboard, I/O board, power supply, hard drive, and the main harness. The SETUP and CALIBRATE buttons are located on the control board attached to the front of the bezel (see Figures 1 and 20). The security key is also on the control board. Pressing the SETUP button will bring you to the Main Menu Screen. See the next section for calibration instructions.

Coin Mech/Bill Acceptor Cash Box

The coin mech and/or bill acceptor are accessible by opening the front bezel of the cabinet (see Figure 19 for locations). The metal cash box door is key-locked for security purposes.

Ticket Dispenser/Coupon Printer

The ticket dispenser or coupon printer is accessible through the front door of the cabinet (see Figure 19 for locations). For detailed ticket and printer information, see that particular section in this manual.

If your game has a Smiley bill acceptor, there is a lanyard secured to the inside of the cash door. This can be attached to the clip on the left wall of the cabinet when you want to secure the door in the open position. See Figure 24 to locate the clip.

General Care and Maintenance

NOTE: THIS GAME MUST ONLY BE SER-VICED BY QUALIFIED SERVICE PERSON-NEI

CAUTION: THERE ARE HIGH VOLTAGE PARTS IN THIS GAME. BE CAREFUL WHEN SERVICING THE INSIDE OF THE GAME. GAME SHOULD ALWAYS BE UNPLUGGED BEFORE SERVICING.

Screen Calibration

- Find the CALIBRATE button, located on the monitor control board attached to the bezel, and press it to enter the screen calibration mode.
- Touch the center of the first cross that appears on the screen. Once you release your finger, a second cross will appear.

NOTE: You must hold your finger on the cross for approximately 2 seconds for the calibration to be recognized.

- Touch the center of the second cross that appears on the screen.
- Once the second cross is touched and released, another cross will appear on the screen. To test the calibration of the screen, touch the cross with your finger and slowly drag your finger around the screen. The cross should follow your movement.
- Touch the **EXIT** button.

Monitor Adjustment Procedure

For adjusting the settings on our monitors, we suggest following the procedures described below. The vertical/horizontal controls and brightness/contrast controls are located on the monitor control board, attached

to the underside of the front bezel. See Figures 1 and 20.

Unlock and open the bezel so the control board is accessible while viewing the monitor. Pressing the button labeled **Menu** on the control board will show the on-screen display on the monitor. Adjust the monitor controls until the screens look as suggested in the following steps. When finished, close and lock the bezel.

- Set the game to the Quik Match game screen.
- Adjust the vertical and horizontal size and vertical and horizontal position to make sure that the game screen fills the monitor screen and that the game screen is centered.
- Adjust the brightness and contrast controls until the red tiles are a rich red and the background is black. The numbers on the tiles should be bright white. (Adjusting the brightness and contrast can also correct for a lack of sharpness.)

General Circuit Board Handling Information

Before handling any boards, observe the following procedures:

- Prevent Electro-Static Discharge by:
 - Storing the boards in the antistatic bags in which they are shipped.
 - Removing any static charge from your body before handling the boards.
 - 3. Using a ground strap when handling the boards.
- When plugging in connectors to the board, make sure the connector is inserted straight onto the header and that the connector covers all header pins.
- Do not connect any peripheral device to the board, if the power is still connected to the peripheral or if power is already applied to the board.

CAUTION: Be extremely careful when replacing the lithium battery on the motherboard. There is a danger of explosion if the battery on the motherboard is incorrectly replaced. Only replace the battery with the same type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

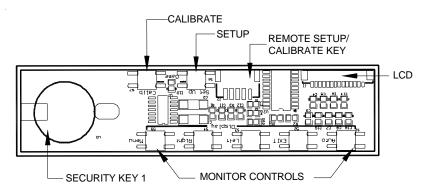


FIGURE 1-MONITOR CONTROL BOARD

Cleaning the Cabinet

 The cabinet should be cleaned with a damp cloth and mild detergent. Always apply the cleaner to the cloth and not directly on the game. Liquids could enter the cabinet and damage electronics inside.

Cleaning the Touchscreen Monitor

 The touchscreen glass should be cleaned with a damp cloth and isopropyl alcohol or a non-ammonia cleanser.
 Do not use any abrasive or vinegarbased cleansers, as they will damage the touchscreen glass.

NOTE: DO NOT USE ANY ABRASIVE SOLVENTS, ACID OR VINEGAR-BASED CLEANSERS ON THE MONITOR OR SIDE DECALS. OVER TIME, SUCH CLEANSERS COULD HARM THE TOUCHSCREEN AND ERASE THE DECALS. BE CAREFUL NOT TO USE COMMERCIAL CLEANERS CONTAINING ANY OF THESE SUBSTANCES.

Cleaning the Fans and Vents

- The fans and vents should be cleaned of any dust on a regular basis to ensure proper ventilation of the game.
- To ensure proper operation of the game, it is important that all fans are operating correctly and that the airflow is unobstructed. Make sure nothing is placed inside the cabinet or next to the fan vents that would inhibit the flow of air. Also, if any fans are not operating, it is important that they be replaced.

Watch Dog Timer

This game has been equipped with a feature that allows it to automatically reboot if it encounters a problem. When the watch dog timer is enabled, it will reboot the machine within 2 minutes after a failure, allowing the game to automatically reset itself if a problem arises without needing a technician present. If you want to disable the watch dog timer, set DIP switch 3 on the I/O board to the open position and reboot the game.

Main Menu

The Main Menu can be accessed by pressing the **SETUP** button inside the game. Use the Main Menu to set up all game software options.

NOTE: For help with the Options in any menu section, touch the green "?" buttons to bring up a help screen.



FIGURE 2 - MAIN MENU

A summary of the Main Menu functions appears in the following table. For more detail, see the corresponding sections of the manual.

	•	ı
Main Menu	Available Options	Information
CREDITS/ PRICING	 Quick Price Setup Coin-In Set Value of Credit Options Clear Credits Free Credits 	The Credits/Pricing Screens allow the operator to set credit rules for all games, set up the Coin-In Menu, select freeplay mode, add or clear credits and set up price.
GAMES	Game Setup	In the Games Setup Screen, you can edit the game list (choose which games are available) and price.
BOOKS	Books Display Cash Settlement Setup Cash Settlement Collection	The Books Screens display current and lifetime credits information as well as calculate the location and operator fees.
SYSTEM	Set Time Security Setup Set Game Serial Number Volume Control Data Transfer Options	Set the game clock, security PIN, serial number, game volume and features, and system options such as language control, and theft deterrent. Also use this menu to transfer books data with a USB Pen or PCMCIA flash card.

Main Marri	Aveilable Outliers	Info was at in a
Main Menu	Available Options	Information
DIAGNOSTICS	Video Test	Enters the Video Test to display the test screens. Touch the screen to cycle through test.
	I/O Test	Tests the function of the I/O board, DIP switches, coin meter, lockout (if applicable), and light (EVO only).
	Touchscreen Calibration	Allows the operator to calibrate the touchscreen. Follow the instructions on the screen.
	Touchscreen Test	Checks touchscreen calibration. Touch the crosshairs on the screen to make sure it is accurately following your movement.
	View System Log	Displays operations performed by the game.
	Checksum Test	Checks the hard drive for missing or corrupted files.
	System Info	Details the various hardware components in the game.
CREDIT CARD	Credit Card Setup	Enters the Credit Card Set-Up Screen if a
	Dial-In Setup	credit card swipe is installed in your game.
	Credit Card Test	For more information, see the Credit Card Kit Installation Instructions.
PRESENTATION	Operator Ad Screen	Allows the operator to create ad screens and add custom screens created on a personal computer.
FUN ZONE SETUP	Coupon Setup (printer version only) Local Prize Setup	These screens allow you to configure the coupon or ticket settings. You can program what is printed on coupons and set up how many tickets/coupons are
	(printer version only) Ticket Setup Transaction Log	rewarded for particular game scores. The Transaction Log displays how many coupons/tickets have been rewarded

Credits/Pricing Menu

Quick Price Setup

Quick Price Setup allows the operator to make general pricing changes without entering the Games Menu.



FIGURE 3 - QUICK PRICE SETUP SCREEN

3 Credits for a Dollar: Sets each game to the following price settings:

COIN INPUT	COIN VALUE	COINS	=	CREDITS	&	METER PULSES
1A	25¢	2		1		2
2B	25¢	3		2		3
3C	25¢	4		3		4

NOTE: If the game is set to 3 Credits for a Dollar, prices will be displayed in credits unless otherwise specified.

4 Credits for a Dollar: Sets each game to the following price settings:

COIN INPUT	COIN VALUE	COINS	=	CREDITS	&	METER PULSES
1A	25¢	1		1		1
2B	25¢	1		1		1
3C	25¢	1		1		1
6F	\$1	1		4		4

Games 1 Credit: Sets the cost of all games to 1 credit.

Games 2 Credits: Sets the cost of all games to 2 credits.

The operator can also use this screen to determine whether prices are displayed on-screen as credits or money. Default values are restored with the **Factory Settings** button. Touch the **?** button for more information.

Coin-In

To Enter The "Coin-In" Screen, Touch "Coin-In" on the Credits Menu

Game cost can be controlled two ways: by changing the number of credits required to play a game or by changing the cost of a credit. The Coin-In Menu allows you to adjust the cost of a credit, as well as provide a way to give players "bonus" credits for depositing a higher amount of money.

When programming the Coin-In Menu, Channel 1 is set for the lowest value coin, Channel 2 for the next highest value, etc. If all six coin inputs are not used, the unused inputs must be set to "N/A". Adjust the coin/credit/meter pulse settings by touching the left and right arrows on the field you want to change.

COIN INPUT	COIN VALUE	COINS	=	CREDITS	&	METER PULSES
1A	10p	3		1		3
2B	20p	3		2		6
3C	50p	1		2	player premium 25p/credit	5
4D	1£	1		5	player premium 20p/credit	10

In the above example (UK currency), each game costs one (1) credit and the cost for a single credit is 30p. This method is preferred if you want game cost to always be reflected as "1 credit."

COIN INPUT	COIN VALUE	COINS	=	CREDITS	&	METER PULSES
1A	10p	1		1		1
2B	20p	1		2		2
3C	50p	1		6	1 bonus credit	5
4D	1£	1		15	5 bonus credits	10

In the above example (UK currency), the cost of a credit is set to 10p and each game costs 3 credits (for a total of 30p). This method allows game cost to be increased by the smallest unit of currency used (e.g. increasing the cost of Solitaire to four (4) credits would increase the game cost by 10p).

In both examples, note that meter pulses are independent of credits and only track the unit of currency (10p in the examples). Players are given an incentive to deposit more money they earn "bonus" credits for depositing 50p or £1. Coins may be deposited in any combination of values and the game will automatically register the highest number of credits for the total amount of coins deposited. Once a game is played, any remaining fractional credits are erased.

Generally, most countries have a factory default setting. This setting can be adjusted (as described above), but will return if the game memory is cleared. Some programs, depending on the key used, have a currency default display located to the left of the coin inputs. It shows the currency value for each of the coin inputs. This display is used as a guide and is not used in any calculations. Touch the currency default display to hide/show the display.

Games Menu

The game list and prices, are programmed using these screens. The Game Setup Screen shows the available game positions and the price for each game, with the list at the bottom showing all available games.

Game Setup

To Enter This Screen, Touch "Game Setup" on the Games Menu and Select a Category



FIGURE 4 - GAMES MENU: GAME SETUP

The Game Setup Screen allows you to make these changes:

Standard Games: Turns on games only within this category.

Kids Games: Turns on games only within this category.

Enable All Games: Turns on all games within the selected category and defaults the price settings.

Clear One: Clears a selected item from the player's game menu.

Clear All: Clears all games from the player's game menu.

To customize a particular game list choose the menu position you want a particular game to occupy by touching that position, then touch the desired game name from the game list on the bottom of the screen. Repeat until all desired games appear in the menu (a game cannot appear in a game list more than once). Games already displayed in the menu will be red in the game list at the bottom of the screen.

To adjust the price, touch the credit value next to each game. Each touch will rotate the price from 25¢ (1CR), to 50¢ (2CR)and back to 25¢ (1CR).

Books Menu

The Books Screens display the current and lifetime credit totals for each game, as well as the percentage of credits played per game (the percentage for each game is the total number of credits played on that game divided by the total number of credits entered into the machine).

Books Display

To Enter This Screen, Touch "Books Display" on the Books Menu



FIGURE 5 - BOOKS MENU: BOOKS DISPLAY SCREEN

The books information can be sorted in three ways by using the button that toggles through the sorting categories. **Unsorted** displays the books information in the standard order. **Sorted by Current** displays the current credits for each game from most to least played. **Sorted by LifeTime** displays the lifetime credits for each game beginning with the most played game.

Touch Clear Current to erase all current books data. The date the data was last cleared will appear at the top of the Books Screen.

To Enter This Screen, Touch "Books Display" on the Books Menu and Choose a Game Name



FIGURE 6 - BOOKS MENU: BOOKS DISPLAY SCREEN WITH GAME SELECTED

Touching a game name will display the current and lifetime credit totals*. It also shows the shortest, average, and longest playing times for that game.

*Touching Trivia or Power Trivia displays totals by category.

NOTE: Books data can be exported to a file USB pen or PCMCIA card via the System Menu/Data Transfer/Export Books feature. The .dat file can then be viewed with a word processing program after connecting the storage device to a personal computer. The file will display basic game information such as the software version, the game serial number, and date/time information relating to books data. The file will also show the current and lifetime credit totals, as well as credit totals for each game featured on the machine.

Cash Settlement Setup

The Cash Settlement Screens are used to calculate the percentage of earnings the operator and location will receive, as well as any fees collected by the operator. This will help to offset costs.

To Enter This Screen, Touch "Cash Settlement Setup" on the Books Menu and touch "NEXT"

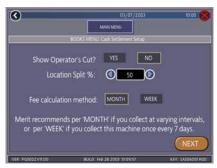


FIGURE 7 - BOOKS MENU: CASH SETTLEMENT SETUP SCREEN

The first screens allow you to set up the Cash Settlement Screen. Choose YES or NO to display the operator's cut on the Cash Settlement Collection Screen and enter the percentage of revenue the location will receive. Also, select the fee calculation method. Select per month if you do not make regular weekly collections or per week if you collect every 7 days. Then touch NEXT.

NOTE: Monthly fee collections are based on 4.3 week month. If you change your fee calculation method, the game will auto adjust the fees by multiplying or dividing by 4.3 and rounding to the nearest penny.

NOTE: Make sure the time and date are set on the game in order to ensure correct fee calculation.

The next screen allows you to set up the fees. The amounts can be changed on screen by touching the amount itself and using the keypad to enter a dollar figure. The other two columns display the cumula-



FIGURE 8 - BOOKS MENU: CASH SETTLEMENT SETUP SCREEN

tive totals for each fee and the totals for the current collection period. Fees are calculated on a prorated, per-day basis. Touch the **NEXT** button to display more groups of fees. After setting up the fees, touch **FINISH** to save your changes.

To Enter This Screen, Touch "Cash Settlement Collection" on the Books Menu



FIGURE 9 - BOOKS MENU: CASH SETTLEMENT COLLECTION

Cash Settlement Collection

The Cash Settlement Collection Screens will display the balance (total revenue minus total fees) to be split between the operator and the location.

Touch Merchandise Cost/Fee Details for breakdowns and Clear/Complete Collection to finish. Cash Settlement totals will reset once collection is complete.

System Menu



FIGURE 10 - SYSTEM MENU

Set Time	The Set Time Menu allows you to set both the time and date on the game. Time is shown in 24-hour, "military" time (e.g. 5:00pm = 17:00). Use the left and right arrows to set the time and date.
Security Setup	The operator can set the PIN number and select which of the features (Coin-In Menu, Free Credits, Game Menu, Hi Scores, Books and All Options) will be protected by the PIN. To change the PIN, you must first enter the existing PIN (the default PIN is 0000), then enter a new 4-digit number and touch SET on the keypad. The game will prompt you to re-enter your PIN to confirm. After confirming your PIN, touch the button for each of the features you wish to protect with the PIN.
Set Game Serial Number	Use this screen to enter the game's serial number using the keypad.
Volume Control	Touch the volume control button to adjust the volume up or down. You can sample the sound volume without exiting the screen. The on-screen volume control can also be accessed using 6 Stars.
Set 6 Star PIN (only appears if PIN is enabled)	Brings up the Set 6 Star PIN Screen via the Options button on the Player Menu. Set the 6 Star PIN (between one and six digits) using this screen. You can enable this feature and choose which options will be accessible by 6 Stars using the System Menu: Options Screen. Touch an option box under System Menu: Options for on-screen help.
Data Transfer	Transfer information (Books data, ad screens) using a USB Pen (FORCE games only) or PCMCIA card (in MAXX games with PCMCIA card slots). Insert PCMCIA cards before powering up the game.
Options	For help with the Options in any menu section, touch the option box to bring up a help screen.

Diagnostics Menu



FIGURE 11 - DIAGNOSTICS MENU

Mide - To -4	Touch the consection of the order of the feet					
Video Test	Touch the screen to cycle through a series of video test screens.					
VO Test	Tests the SETUP and CALIBRATE buttons, all coin channels, the coin meter, and the coin lockout feature (if applicable). A green light next to the appropriate button will register each time that item is tested, and the number next to the item should increment by one with each test. The I/O Test Screen also displays which DIP switches are on or off.					
Touchscreen Calibration	Follow the on-screen instructions to calibrate the touchscreen.					
Touchscreen Test	Allows you to check the touchscreen calibration accuracy. The crosshairs should follow your finger exactly when you move it across the screen.					
View System Log	Displays a log of all operations performed by the game since the log was last cleared. This information is helpful for customer service in troubleshooting your game.					
Checksum Test	Checks the hard drive for missing or corrupted files. With STOP ON ERROR? set to YES, a message indicating which file is corrupted will be shown whenever the game encounters an error. With STOP ON ERROR? set to NO, a list of corrupted files will be displayed when the test is complete. If errors are detected, the software on the drive may need to be reloaded. If this does not solve the problem, the drive may require replacement. The test could take up to 30 minutes.					
System Info	require replacement. The test could take up to 30 minutes. Gives details about the following: processor type and speed motherboard manufacturer amount of memory Ethernet card manufacturer sound chip type video chip type touchscreen manufacturer hard drive manufacturer and capacity modem part identification number fan speed (FORCE games only)					

13

Presentation Menu

The Presentation Menu allows operators to create ad screens and add custom screens created on a personal computer.

Operator Ad Screens

A total of 24 advertising screens can be created with the software and added to the game. The ads will appear along with the other attract screens when the game is in idle mode. Custom images for ad screens can also be added to the game using an appropriate storage device for your game (USB pen, CD, or PCMCIA card). Touch the green? button on each screen for information on how to create screens and add custom screens to the machine. Ad screens may be given a specific cycle using the **Set Start/End Date** button.

In addition, a program for adding up to 120 additional ad screens can be downloaded from our Web site (www.meritind.com) in the Support/Software Downloads section.

FORCE games only: A USB Pen Kit (kit number KAV-100-008-02) is available. To order, contact your local distributor.

Fun Zone Setup

The Fun Zone Setup Screens allow you to program what is printed on coupons and set up the rewards for particular game scores. On the Fun Zone Setup Screen, select how many tickets are awarded for kid's games by using the arrows next to **Kids Game Payout**. Certain kids games will always award this number of tickets per game.

Coupon Setup (Printer Games Only)

Each coupon will print the time and date of the order, the machine ID (serial number), and a unique transaction ID (the time backwards followed by the value of the ticket, the last four digits of the serial number and then the sum of the digits for time, ticket value and date.

The Coupon Setup Screen allows you to set up the text which will print on the coupons. The location name and address can be set to print on the coupons, as well as a special message and local prize message. Touch the **Change** button to make changes to the text. A keyboard will appear on the screen to type new text. Press the **Set to Default** button and the text will revert back to the default settings.

To Enter This Screen, Touch "Coupon Setup" on the Fun Zone Setup Menu



FIGURE 12 - FUN ZONE SETUP MENU: COUPON SETUP SCREEN

Local Prize Setup (Printer Games Only)

The Local Prize Setup Screen allows you to set up individual prizes as well as the amount of tickets needed to win certain prizes. Touch Add, Edit, or Delete to modify the prizes. A keyboard will appear on the screen to be used to type in the text. Touch Move Prize Up or Move Prize Down to make changes to the order of the prizes as they appear to the player.

To Enter This Screen, Touch "Local Prize Setup" on the Fun Zone Setup Menu



FIGURE 13 - FUN ZONE SETUP MENU: LOCAL PRIZE SETUP SCREEN

Ticket Setup

The Ticket Setup Screen allows the operator to control the payouts by changing the ticket number and value.

To Enter This Screen, Touch "Ticket Setup" on the Fun Zone Setup Menu



FIGURE 14 - FUN ZONE SETUP MENU: TICKET SETUP SCREEN

Skill Score: All Fun Zone games convert raw game scores to a skill score to remove the element of chance. The Skill Score is determined by comparing a player's score with all other scores achieved by players using the same play fields. The resulting score is a percentage of 100,000, determined by comparison to other players on the same levels. The amount of tickets won is based on Skill Score and Credits played.

Tickets Won: Changes the number of tickets won per Skill Score. Move the Up and Down arrows in the Payout: 1 Credit row. Once the ticket payout is selected for 1 Credit (\$0.25), the payouts for 2 (\$0.50), 3 (\$0.75), and 4 (\$1.00) credits will adjust accordingly down the vertical column. The number of Tickets Won for a specific Skill Score cannot exceed the number for the higher Skill Score to its right.

The Average Tickets Per Credit number on the bottom left corner of the screen changes in relation to increasing and decreasing of the number of Tickets Won. In conjunction, the Average Tickets Per Credit, Tickets Won and percentage payout per credit can be used to calculate and control the amount of return value players receive from the total credits played.

Ticket Value: Adjusts in increments of 1/10 of a cent. As the ticket value is raised or lowered, the percentages next to Payout: X Credit respond appropriately. The percentages represent the return rate an average player will receive for a specific credit or money input.

NOTE: Changing the value of credits in the Credits/Pricing Screens will also effect payout percentages. Higher prices per credit equal a lower percentage return of payout for the player; lower prices earn the player a higher percentage payout.

Max Tickets: Sets a cap on the number of tickets a player may win. Tickets increase by increments of 10. The minimum cannot be set below the highest payout of a 4 credit game.

Progressive Bonus: Turn this feature ON or OFF by touching the appropriate button. If a skill score of at least 90,000 is achieved, the player can win the progressive bonus. Each coin deposited increases the jackpot by the number set in the Jackpot Growth field. Max tickets is used to restrict the progressive jackpot from growing past its value.

NOTE: This feature is only activated at the highest pay line of play.

Set Defaults: Restores all ticket payout settings to the factory defaults.

Fixed Payout %: Select **ON** to have the payout percentage remain the same for each pay line. Select **OFF** to have the payouts increase with each additional credit played.

View Defaults: Touch this button to view the factory default settings. This can be helpful if you want to view the default settings while you are making changes to the Ticket Setup Screen. Touch Hide Defaults to return to the Ticket Setup screen.

Undo Changes: Cancels all changes the operator made during the session.

Transaction Log

The Transaction Log Screen will display the date, time, transaction, value in tickets and ticket balance for the last 500 transactions that occurred on the machine.

To Enter This Screen, Touch "Transaction Log" on the Fun Zone Setup Menu



FIGURE 15 - FUN ZONE SETUP MENU: TRANSACTION LOG SCREEN

Transactions are listed as:

Tickets Won - indicates how many tickets or coupons are won, but not yet collected.

Tickets (ticket games) - indicates the number of tickets printed.

Ticket Coupon (printer games only) - indicates winnings have been redeemed and coupon printed. The number of tickets needed for the coupon are subtracted from the total tickets. The new balance is reflected here.

NOTE: Printer Games ONLY - Players must click on the View Prizes button located on the Player Menu Screen to select a prize and print the coupon.

Tickets Cleared (printer games only) - indicates the customer never printed the coupon, so when the game entered idle mode (after 15 minutes of attract screens), it was erased from the game.

Specific Prizes (printer games only) - indicates the name of the prize the player has won.

NOTE: If you clear lifetime books the transaction log will also be cleared.

DIP SWITCH SETTINGS

The following table provides information on the functionality of the hard DIP switches in Megatouch games. Make sure to read the information in the **Notes** column to determine what is affected when performing these functions. After performing any DIP switch function, make sure to follow the instructions on the screen. In most cases, you will be instructed to reset the DIP switch in order to reboot the game. If you fail to reset the DIP switch before rebooting, it could result in corruption of the hard drive.

NOTE: In FORCE 2005 and Jade software, the DIP switch functionality is built into the software. To access the DIP switches through the software:

Turn off the game. Set DIP switch 1 to the closed position. Turn power on. When the message "Please reset DIP 1 to proceed" appears, reset DIP 1 to the open position. The Merit diagnostics page will appear. Touch ? for information on DIP switch functionality. Touch the specific DIP switch to activate it. Touch X to exit.

	FO	RCE 2003 / MAXX Ruby and greater
DIP#	Function	Usage/Notes
8	Motherboard configuration & checksum test	Configures the CMOS settings on the motherboard to Merit specifications and checks the files on the hard drive. A checksum test should be performed when the game is locking up or rebooting. If the test fails, the program should be reloaded onto the hard drive. After reloading, perform another checksum test. If it fails again, the hard drive should be replaced.
6	Hardware configuration	 Identifies system hardware and configures the motherboard. A hardware configuration occasionally needs to be performed after a kit is installed and the touchscreen is not responding to touch or the calibration is off.
5 & 7	Memory clear for TournaMAXX™ and TouchTunes®	 Clears the login name, password, access phone number, and all call-in settings for TournaMAXX users. Clears all the loaded albums for TouchTunes users. Clears current books, coin-in, high scores and resets the software options. A memory clear should be performed when a game is not able to connect to TournaMAXX and there is some question about the information in the Dial-Up Network Screen being correct. After performing a memory clear, TournaMAXX setup information must be re-entered, and an Update From Server should be performed. NOTE: TournaMAXX games must perform an Update From Server BEFORE performing a memory clear.
4 & 7	Complete memory clear	Clears ALL memory on hard drive including the TournaMAXX player database, TournaMAXX settings, advertising screens, bookkeeping, high scores, coin-in, options, etc. It resets the game to the factory defaults. It also marks bad sectors on hard drive. A complete memory clear should only be performed when the game is locking up or resetting and it has passed the checksum test. After performing a memory clear, the player database should be reloaded, TournaMAXX setup information must be reentered, and an Update From Server should be performed. NOTE: TournaMAXX games must perform an Update From Server BEFORE performing a complete memory clear.
3	Watchdog Timer (EVO, Fun Zone, & Fusion games)	When the watchdog timer is enabled, it will reboot the machine within 2 minutes of a failure, allowing the game to automatically reset itself if a problem arises. MECATOLICH FUN ZONE OWNER'S MANUAL MECAT

Merit Industries, Inc. Troubleshooting Guide for *Megatouch FORCE™ Games*

	PROBLEM	CORRECTIVE ACTION
	no power	Check that the power cord is connected to a "live" outlet.
Ι.	bill acceptor	Check that the power switch is on.
	motor does not	Check that the power cord is connected to the game power supply.
	run	Check that the power supply's voltage select switch is set to the
•	no flash on the	proper voltage.
	monitor screen	Check the harness connections to the on/off switch and circuit
•	no cooling fans	breaker.
	operating	Check the circuit breaker for an "open".
•	no output from	Check the A/C harness connection to the power supply.
	power supply	Check the line cord.
•	no video	Check the power on jumper wire located on the motherboard. It
•	no cooling fan	should connect J2 to pin 21 of Panel 1. If this jumper wire is missing
	operation	or not connected between the correct pins, it may prevent the power
•	screen is blank	supply from turning on. For more information, see Tech Note 52.
•	A/C power to the	Check the D/C harness connection to the motherboard.
	monitor and bill	Check the A/C harness connection to the power supply.
	acceptor	
1.	no output from	
	power supply	B. F. Oberts and H. Salderson
•	no video	Radion, Classic and Upright games:
•	cooling fans are	Check the video cable connections to the motherboard and the
	working	monitor.
•	there is a sound when coins are	Check the AC power harness to the monitor. Radion and FORCE Upright monitors will display a test pattern on
	deposited	Radion and FORCE Upright monitors will display a test pattern on the screen when the video cable is disconnected from the
	deposited	motherboard and the monitor has power. Disconnect the video
		cable and if there is no test pattern; replace the monitor chassis
		board.
		Fun Zone, EVO, Fusion, Elite and Vibe:
		Check the video cable connections to the motherboard and the LCD
		display (and the monitor control board in EVO and Fusion games).
		Check the +12 volt supply voltage to the LCD display (yellow wire)
		+12, black wire ground)
		Check the harness connections between the PC boards on the back
		of the LCD display.
		Replace the LCD display.
•	no video	The memory card (DIMM) may not be seated properly. Reseat the
•	constant beeping	DIMM or replace it.
	or a sequence of	
	beeps	
•	no video	Check all connections to the motherboard.
١.	no sound when	Reseat the DIMM.
	coins are	Replace the motherboard or send it for repair.
L	4	
	deposited	Adiat Danta and Control III in the 1977 in the 1977
•	poor picture	Adjust Brightness, Contrast, Horizontal, and Vertical controls with
	poor picture quality	monitor controls.
•	poor picture	monitor controls. Check the coin mech and coin chute for coins blocking the pathway.
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch.
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem.
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem. Check the coin harness for pinched or damaged wires.
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem. Check the coin harness for pinched or damaged wires. Disconnect the coin harness from J1, J3, J7, and J8 of the I/O
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem. Check the coin harness for pinched or damaged wires. Disconnect the coin harness from J1, J3, J7, and J8 of the I/O board. If the coin jam still appears, the I/O board will have to be sent
	poor picture quality	 monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem. Check the coin harness for pinched or damaged wires. Disconnect the coin harness from J1, J3, J7, and J8 of the I/O board. If the coin jam still appears, the I/O board will have to be sent for repair.
	poor picture quality	monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem. Check the coin harness for pinched or damaged wires. Disconnect the coin harness from J1, J3, J7, and J8 of the I/O board. If the coin jam still appears, the I/O board will have to be sent
	poor picture quality	 monitor controls. Check the coin mech and coin chute for coins blocking the pathway. Make sure the coin harness is connected between the normally open and common terminals on the coin switch. Disconnect the bill acceptor and the coin switch one at a time to narrow down the problem. Check the coin harness for pinched or damaged wires. Disconnect the coin harness from J1, J3, J7, and J8 of the I/O board. If the coin jam still appears, the I/O board will have to be sent for repair.

Merit Industries, Inc. Troubleshooting Guide for *Megatouch FORCE™ Games continued*

PROBLEM	Corrective Action
game locks up or resets while being played or in the attract mode no movement on the screen power has to be cycled off and on to get the game to function again	Check the output voltages from the power supply: Enhance SFX 1211J Red wire +5 volt Yellow wire +12 volt Blue wire -12 volt White wire +5 volt yower good Violet wire +5 volt VSB Black wire ground Brown wire +3.3 volt Clean the vents and the fans of any dust and dirt that may interfere with airflow. Clean the CPU cooling fan on the motherboard. Replace the CPU cooling fan if it is not operating properly. Reseat the DIMM on the motherboard. Clear memory with the following procedure: Turn off the game. Press and hold the "Setup" and "Calibrate" buttons. Turn the game on and keep holding the buttons until the screen displays "TWO BUTTON CLEAR DETECTED RELEASE BUTTONS". This should take about 30 seconds. Release the buttons. This will clear high scores, clear the books and reset options, and reset the game menu and coin menu to their factory settings. Perform a checksum test on the hard drive: Turn off the game. Turn on DIP switch 8 on the I/O board. Turn on the game. The test will take about 10 minutes. A failure will cause the test to stop. A passed test will display "DRIVE CHECKSUM COMPLETE RESET ALL DIP SWITCHES TO REBOOT MACHINE".
game locks up with "invalid key for version PG3002 – V XXXX" "INVALID KEY" message while downloading software to the hard drive	 With power on, turn off DIP switch 8. Check the program number on the security key. It should be compatible with the program on the hard drive. Check the contacts on the security key socket. Lift up on the contact on the bottom of the socket and make sure there is a good connection to the base of the security key. Check the USB cable that connects the I/O board to the motherboard. Check jumpers JP5 and JP6 on the I/O board. The USB cable can be connected to two connectors on the I/O board (J5A and J5B). The position of the shunts on jumpers JP5 and JP6 will enable either J5A or J5B. The shunts should be positioned towards the connector where the USB cable is connected. For more information, see Tech Note 55. Try another security key with the same program number or test the security key in another game with the same program version. If the security key was replaced before the download: The motherboard did not boot from the CD-ROM drive. Check that the CD-ROM drive is set as master. Check the ribbon cable connections between the CD-ROM drive and the motherboard. Try another CD-ROM drive or another set of CDs.

Merit Industries, Inc. Troubleshooting Guide for *Megatouch FORCE™ Games continued*

PROBLEM	CORRECTIVE ACTION		
the screen displays MAXX and not FORCE, and the H2H category is missing	When the game is turned on, it will check the type of touchscreen controller, motherboard and hard drive. If one of these does not match with FORCE hardware, the game will power up and display "MAXX" on the screen and it will not have the H2H category. • Make sure the game is only using FORCE hardware.		
game will not download CD	 Make sure the CD is installed correctly, with the logo facing up. Check for scratches or a defective CD. Try a different CD-ROM drive or another set of CDs. If you're downloading a CD set, make sure each CD is of the same revision. 		
"ERROR READING DRIVE C"	This message can be caused by the hard drive or in some program versions, a coin jam while the game is turned on. Turn the game off. Locate DIP switch 8 and turn it on. Turn on power to the cabinet. This will start the hard drive checksum test, which should take about 20 minutes to complete. When the hard drive passes the test it will display a "CHECKSUM GOOD" message and continue to boot up into the game attract screens. This indicates a coin jam. When the hard drive fails the test, the game will lock up with a "CHECKSUM ERROR" message, which will stay on the screen until the power is turned off. In this case, the hard drive will have to be replaced.		
"DISK BOOT FAILURE"	This message indicates the motherboard is not receiving data from the hard drive and has locked up. Check the IDE ribbon cable connections to the motherboard and hard drive. Check the power to the hard drive. It should have +5 volts, +12 volts, and ground.		
"QUANTUM FIREBALL, SMART FAILURE DETECTED, BACK UP HARD DRIVE"	The self-diagnostics on the hard drive has detected an error. The hard drive will have to be replaced.		
"CRITICAL ERROR ABORT RETRY FAIL" or "BAD COMMAND OR FILE NAME" error	Try reloading the program onto the hard drive with a different set of update CD's compatible with the security key. If it will not accept the download, try another CD-ROM drive. If it still does not work, replace the hard drive.		

Printer (Printer Games Only)

When the printer is low on paper, a warning message will appear when you enter setup. After replacing the roll, the message will remain in setup until another ticket is won.

Changing the Paper

NOTE: Do not try to operate the printer if it runs out of paper. The printer wont print, but it may continue to accept data from the game; therefore, this data may be lost.

- Turn off and unplug the game.
- 2. Unlock and open the dispenser door.
- Open the top cover of the printer by pulling under the alignment tabs on both sides (See Figure 16). You may need to unscrew the thumbscrews near the tabs and pull the bracket away from the top cover in order to open the cover.
- Pull the spindle from the tabs and remove the used roll.

 Tear off the end of the new roll so that the edge is loose and place the new roll into the spindle bracket with a few inches of loose paper at the bottom of the roll. See Figure 17.

CAUTION: The tear blade has sharp corners. Use caution when loading paper.

NOTE: Be sure the paper unrolls from the bottom. Otherwise, the printer will not print.

- Pull up on the bottom of the paper roll and align the paper properly before closing the cover. See Figure 16.
- 7. Feed the paper in between the paper guide brackets. See Figure 16.
- Advance the paper by pressing the paper feed button and tear off the excess paper. See Figure 16.

NOTE: In the event of a paper jam, remove the roll, tear a new clean edge, and replace it in the paper bucket, as described above.

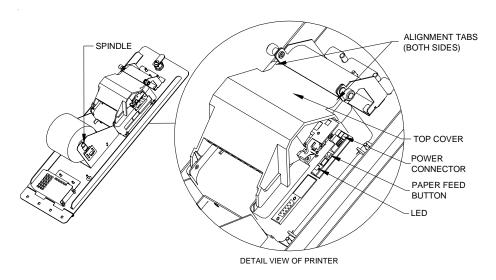


FIGURE 16 - PRINTER DOOR

COPYRIGHT © 2005 MERIT INDUSTRIES, INC.

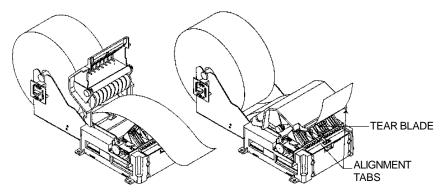


FIGURE 17 - PRINTER - LOADING PAPER

Testing the Printer

To print a test ticket to check the print quality, unplug the power connector shown in Figure 16. Then, plug the connector back in while pressing and holding the Paper Feed Button for approximately 6 seconds. A test ticket will be printed approximately 5 seconds after. Press the paper feed button once more and the ticket will feed. Pressing the button again will result in blank tickets.

Troubleshooting the Printer

Reference the following troubleshooting procedures to determine the cause and resolution of any printer problems.

	PRINTER TROUBLESHOOTING		
Problem	Possible Causes	What to Do	
Receipt does not come out all the way	Paper is jammed.	Open the top cover, inspect and clear any jammed paper.	
 Printer starts to print but stops while printing 			
Print is light or spotty.	Paper roll loaded incorrectly.	Check that the paper is loaded properly.	
Printer does not function when turned on.	Printer not plugged in.	Check that printer cables are properly connected on both ends. Check that the game is plugged in and turned on. Check the printer LED.	
	Door not fully closed or paper not loaded	Load the paper and close the door.	

Ticket Dispenser (Ticket Games Only)

Loading tickets

To load new tickets, insert the tickets in the into the ticket hopper and push them forward to the rollers. If needed, gently push the locating spring away from the ticket guides. Then push the ticket advance switch until you see the edge of the first ticket. See Figures 18 and 19.

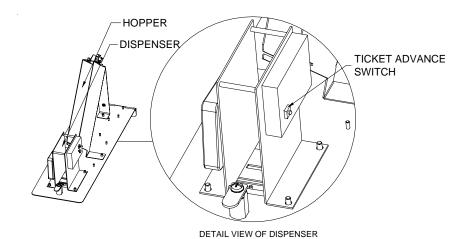


FIGURE 18-TICKET DISPENSER DOOR

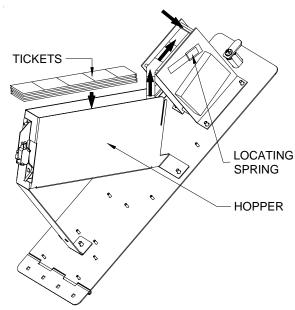


FIGURE 19-TICKET DISPENSER DOOR

Megatouch FORCE Fun Zone™ Diagrams

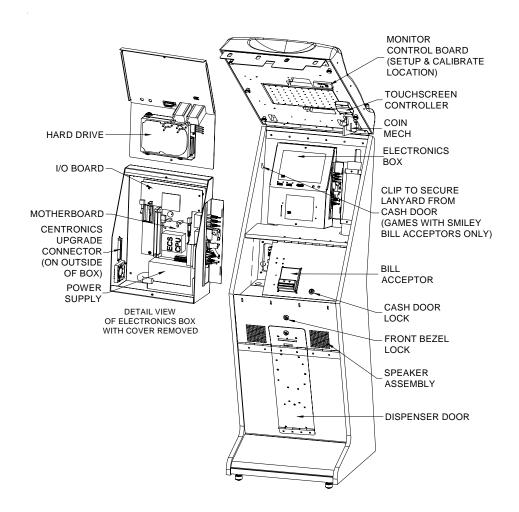


FIGURE 20 - FRONT VIEW WITH BEZEL OPEN

Megatouch FORCE Fun Zone™ Diagrams

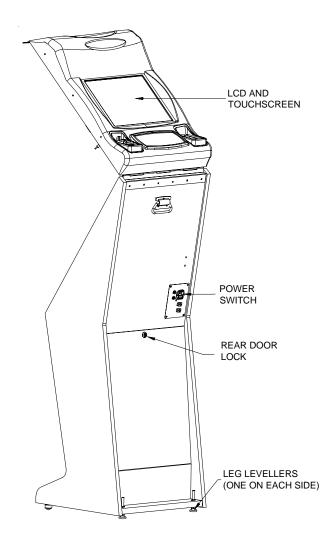


FIGURE 21 - REAR VIEW WITH BEZEL OPEN

Megatouch Fun Zone Replacement Parts List

	REPLACEMENT COMPONENTS		
FC	DRCE FUN ZONE (G21-114-00X-XX)		
PART NUMBER	DESCRIPTION		
SA10057-07	FORCE MOTHERBOARD		
EC9796-06	MARS BILL ACCEPTOR. \$1/2/5, 500 STKR, AE2411		
HW 8249	MECHANICAL COIN MECH		
EC7536-01	POWER SUPPLY, 125W ±12, ±5,+3.3		
EC9851-02	17" TOUCHSCREEN OVERLAY		
EC9384-XX	17" LCD DISPLAY		
EC9840-08	MICROTOUCH SMT4 TOUCHSCREEN CONTROLLER		
SA10065-01	I/O BOARD		
SA10066-01	CONTROL BOARD		
PA3020-01	FORCE 2005 FUN ZONE HARD DRIVE		
SA3090-XX	FORCE 2005 FUN ZONE (W / COUPON PRINTER) KEY		
	OR		
SA3091-XX	FORCE 2005 FUN ZONE (W/TICKET DISPENER) KEY		

NOTE: The parts in your game may vary. When calling for replacement parts, make sure to have your serial number available to ensure the accuracy of your order.

NOTE: In order for your Megatouch FORCE game to function properly, the hardware must only be replaced with FORCE hardware. Replacing the motherboard, I/O board, hard drive or touchscreen controller with hardware that is not specific for FORCE will eliminate some of the FORCE software features.

For additional assistance, after contacting your distributor, contact:

Merit Product Support and Services

USA and Canada call toll-free:


1-800-445-9353

Outside the USA and Canada call:

(215) 639-4700 FAX: (215) 639-5346

Merit Industries, Inc. P.O. Box 5004, Bensalem, PA 19020-8529. You can also visit our Web site www.meritind.com

Connection Diagrams

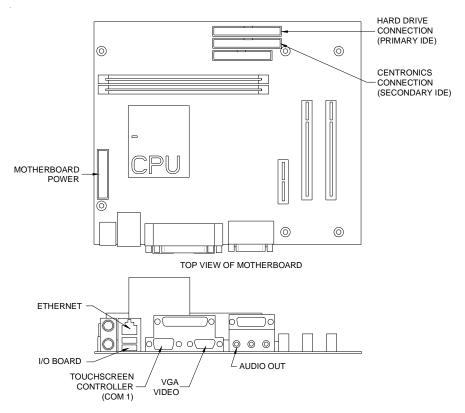

CONNECTOR SIDE VIEW OF MOTHERBOARD

FIGURE 22 - ECS MOTHERBOARD DRAWING

Connection Diagrams

Motherboard - Power Connector

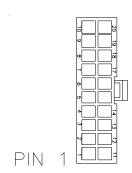


FIGURE 23 - REAR VIEW OF CABLE CONNECTOR

PIN	WIRE COLOR	<u>USE</u>
1	BROWN	+3.3 VDC
2	BROWN	+3.3 VDC
3	BLACK	GND
4	RED	+5 VDC
5	BLACK	GND
6	RED	+5 VDC
7	BLACK	GND
8	WHITE	PWR GOOD
9	VIOLET	+5V VSB
10	YELLOW	+12 VDC
11	BROWN	+3.3 VDC
12	BLUE	-12 VDC
13	BLACK	GND
14	BLACK	GND
15	BLACK	GND
16	BLACK	GND
17	BLACK	GND
18		
19	RED	+5 VDC
20	RED	+5 VDC

Connection Diagrams

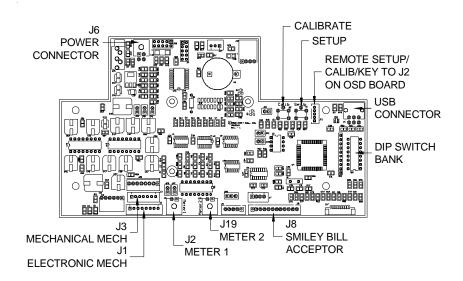


FIGURE 24 - I/O BOARD DRAWING

Merit Video Machine Limited Warranty

Merit Industries, Inc. warrants its video machines to be free from defects in material and workmanship for a period of one year from the date of purchase. The warranty covers all electrical components (except fuses and light bulbs) and printed circuit boards. The touchscreen is under warranty for a period of 3 years.

Failure due to misuse, vandalism, excessive or intentional abuse, operation outside specified conditions (including, but not limited to, improper electrical power source), fire, water damage, acts of God, acts of war and civil unrest are specifically excluded.

Merit products are carefully inspected and thoroughly tested prior to packing and shipment. Any damage discovered upon receipt of goods, whether obvious or concealed, must be reported immediately to the delivering carrier and claims made directly to them. Merit assumes no responsibility for damages once the product has left its facilities and any disputes regarding transportation damage must be resolved with the shipping company(s).

Merit will repair or replace, at its option, any component, part or assembly that fails under warranty, provided that the failed item is returned, shipping charges prepaid, to Merit's repair facility and Merit is notified of the failure within the warranty period. Merit reserves the right to request the serial numbers of the item and/or game which has failed, and copies of sales invoices, bills of lading or other documents as required to determine the validity of the warranty coverage. Merit will return or replace warranty items, as specified above, shipping charges prepaid, by ground transportation.

Merit's obligation shall be limited to repair or replacement as stated above, and shall specifically exclude any liability for consequential damages or loss of earnings.

Merit may, at its discretion, provide replacement parts under warranty prior to receiving defective items, without incurring any ongoing obligation to extend such accommodations.

In certain instances, due to geographical or other considerations, Merit may offer PCB warranty service on an extended time basis as follows:

- (a) User notifies Merit in writing (or FAX) of PCB failure, providing dates of failure, serial numbers and a brief description of failure symptoms.
- (b) Failed PCBs are accumulated for a time period or quantity accumulation, as designated by Merit and sent in one shipment to save shipping expenses.
- (c) Merit honors warranty as per dates of failure notification.

The above terms and conditions constitute the sole obligation, written or implied, of Merit Industries under its warranty coverage.

Merit Industries, Inc. Software License Agreement

Merit Industries, Inc. ("Licensor") is willing to license the enclosed software to you only if you accept all of the terms in this license agreement ("Agreement").

Ownership of the Software

The enclosed Merit® product, which may include but is not limited to the Megatouch® software program ("Software") and the accompanying written materials are owned by Licensor and are protected by United States copyright laws, patent laws and other intellectual property laws, by laws of other nations, and by international treaties.

Restrictions on Use and Transfer

- 2. If this Software package contains multiple media types (such as CD's, flash cards, hard drives, etc), then you may use only the type of media appropriate for your Machine. You may not use the other media types on another Machine, or transfer, or assign them to another user except as part of the permanent transfer of the Software and all written materials (as provided for below in paragraph 4).
- You may make one copy of the software for backup purposes only. You may not copy or make backup copies of any software security key or software security device under any circumstances.
- 4. You may permanently transfer the right to use the Software and accompanying written materials (including the most recent update and all prior versions) if you retain no copies and the transferee agrees in writing to be bound by the terms of this Agreement. Such a transfer of this license to another party immediately terminates your license. You may not otherwise transfer or assign the right to use the Software, except as stated in this paragraph.
- 5. You may not operate or allow the operation of the Software at locations where the operation of such Software does not comply with all local, state, and other governmental body laws and regulations. You agree to not use or permit the use of the Software in violation of any U.S. Federal, state, or local laws or regulations or any foreign law or regulation, including laws regarding gaming, gambling or intellectual property rights in or concerning the Software.
- 6. You may not modify, adapt, translate, reverse engineer, decompile, disassemble the Software or create derivative works from the Software or any component thereof; nor may you remove, modify or hide or otherwise make unreadable or non-viewable any notice, legend, advice, watermark or other designation contained on the Software, component thereof, or output therefrom.
- 7. You agree that the Software and the authorship, systems, ideas, inventions methods of operation, documentation and other information contained therein, and all versions, modifications and adaptations thereto are proprietary intellectual properties of Licensor and are protected by civil and criminal law, and by copyright, trade secret, trademark and the patent laws of the United States and other countries.

Limited Warranty

 Licensor warrants, solely for your benefit, that the Software will function in material conformity, with its accompanying documentation for a period outlined in Licensor's standard product warranty period after your receipt of the Software.

Licensor's Obligations Under Warranty

Licensor's sole obligation under the aforesaid warranty shall be to utilize commercially reasonable efforts to correct or modify such portion of the Software as to make it materially conform with the applicable documentation.

Grant Of License

10. Licensor grants to you a limited, non-exclusive license to distribute and/or use one copy of the Software on a single Merit ("Machine") accompanied by a single licensor factory authorized security key. Licensor reserves the right to update versions of the software and the content to the Machine as deemed appropriate by the Licensor. You are entrusted to maintain and protect your single licensor factory authorized security key, password, or other identification from being utilized by any third party, and you agree to be responsible for any use of the Software provided herein by a third party utilizing your identification. Licensor maintains the right to immediately terminate your License for reasons related to misuse or other non-conformity with the rules expressed herein. While Licensor does not routinely inspect Machines, Licensor also reserves the right to inspect or audit the Software from time to time in Licensor's sole discretion. To the extent that Licensor's access to the Software requires that Licensor also gain access to a Machine in which the Software is installed, you agree to promptly provide Licensor, when requested, with permission and aid in Licensor gaining access to the Machine.

Disclaimers

11. EXCEPT AS PROVIDED IN THE SECTION ENTITLED "LIMITED WARRANTY", LICENSOR MAKES NO OTHER PROMISES, REPRESENTATIONS OR WARRANTIES, WHETHER EXPRESSED OR IMPLIED, REGARDING OR RELATING TO THE SOFTWARE OR CONTENT THEREIN OR TO ANY OTHER MATERIAL FURNISHED OR PROVIDED TO YOU PURSUANT TO THIS AGREEMENT OR OTHERWISE AND LICENSOR SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO SAID MATERIALS OR THE USE THEREOF. TO THE MAXIMUM EXTENT ALLOWABLE BY LAW THE UNIFORM COMMERCIAL CODE OR OTHER UNIFORM LAWS SHALL NOT APPLY TO THIS AGREEMENT.

Limitation on Liability

- 12. IN NO EVENT SHALL LICENSOR BE LIABLE UNDER ANY CLAIM, DEMAND OR ACTION ARISING OUT OF OR RELATING TO THE SOFTWARE, ITS USE, INSTALLATION OR LICENSOR'S PERFORMANCE OR LACK THEREOF UNDER THIS AGREEMENT FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, WHETHER OR NOT LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH CLAIM, DEMAND OR ACTION. IN ADDITION, WITHOUT LIMITING THE FOREGOING, IN ALL EVENTS THE REMEDIES AVAILABLE TO YOU SHALL BE LIMITED TO THE AMOUNT PAID BY YOU TO LICENSOR FOR THE SOFTWARE.
- 13. IN NO EVENT WILL LICENSOR BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY LOSS OF PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE, MISUSE, BREACH OF THIS AGREEMENT OR INABILITY TO USE THE SOFTWARE.

Genera

- 14. The validity and construction of this Agreement and of the rights and obligations herein shall be determined and governed by the laws of the State of New York. By accepting the terms of this Agreement, you acknowledge and accept that the courts of New York, New York shall have exclusive jurisdiction and venue regarding any disputes arising with regard to this Agreement or arising out of activity or misuse of the Software.
- 15. Merit, in its sole discretion, may assign this agreement or any of its rights and obligations hereunder.
- If you have any questions concerning this Agreement or wish to contact Licensor for any reason, please write: Merit Industries, Inc., 2525 State Road, Bensalem, PA 19020, USA.

Contrat de licence de logiciel de Merit Industries, Inc.

Merit Industries, Inc. (ci-après le "Concédant") est disposé à vous accorder la licence d'utilisation du logiciel ci-inclus, à condition que vous vous engagiez à respecter tous les termes, clauses et conditions du présent contrat de licence (Contrat).

Droit de Propriété

1. Le produit Merit ci-joint contenant, mais ne s'y limitant pas, le logiciel Megatouch™ (ci-après le "logiciel") et toute la documentation écrite, restent la propriété du Concédant et sont protégés par : les lois de droits d'auteur des Etats-Unis, les lois s'appliquant aux brevets déposés et à la propriété intellectuelle, ainsi que par celles des autres pays et les traités internationaux.

Restriction d'Utilisation et Transfert

- 2. Si le présent logiciel comprend plusieurs types de composants (tels que CD-ROM, cartes flash, disques durs, etc), vous ne pouvez utilisez que ceux qui conviennent à votre appareil. Il est strictement interdit de les utiliser sur un autre appareil, les transférer -ou les céder à un autre utilisateur, sauf en cas de transfert permanent du logiciel et de toute la documentation écrite (comme indiqué ci-dessous au paragraphe 4).
- 3. Il est interdit de copier le logiciel, à l'exception d'une copie de sauvegarde. Il est aussi interdit de reproduire -ou faire des copies de sauvegarde des programmes de clé de sécurité ou autres fichiers de sécurité, quelles que soient les circonstances.
- 4. Vous pouvez céder en permanence à un tiers -le droit d'utiliser le LOGICIEL et toute la documentation écrite l'accompagnant, (ainsi que la plus récente mise à jour et toutes autres anciennes versions) seulement si vous n'en gardez aucune copie, et si le cessionnaire s'engage, par écrit, à respecter les termes, clauses et conditions du présent Contrat. Cette cession à un tiers met fin à votre licence immédiatement. Autrement, vous n'avez pas la permission de transférer ou d'accorder à un tiers le droit d'utiliser le présent logiciel, excepté que tel que décrit dans le présent paragraphe.
- 5. Il est interdit d'utiliser le présent logiciel ou de permettre son utilisation dans des emplacements où l'utilisation du présent logiciel n'est pas conforme aux lois et réglementations locales, nationales ou réglementations d'autres organismes gouvernementaux. Vous acceptez de ne pas utiliser ou d'autoriser l'utilisation du logiciel d'une manière enfreignant les lois ou regulations s'appliquant à la propriété intellectuelle et au jeu, en vigueur aux Etats-Unis ou dans les autres pays du monde, y compris les lois de l'ensemble du logiciel.
- 6. Il est interdit de modifier, adapter, traduire, démonter, décompiler, désassembler le logiciel ou créer du matériel dérivé du logiciel ou de tout composant de celui-ci; vous ne pouvez pas enlever, modifier ou cacher ou rendre illisible ou non-visible toute instruction, légende, information ou filigrane ou autre désignation qui apparaît dans le logiciel, composant dudit logiciel ou résultant dudit logiciel.
- 7. Vous convenez que le logiciel et les droits d'auteur, les systèmes, les idées, les inventions, les méthodes d'utilisation, la documentation et autre information incluse, ainsi que toutes les versions, modifications et adaptations qui s'y rattachent sont les propriétés intellectuelles du Concédant et sont protégées par le droit civil et pénal et par le droit d'auteur, le secret commercial, la marque déposée et le brevet aux Etats-Unis et dans les autres pays du monde.

Limite de Garantie

8. Le Concédant garantit seulement à votre intention, que le logiciel permettra une utilisation conforme, avec la documentation l'accompagnant, pendant la période de temps indiquée dans la période de garantie du produit standard du Concédant, à compter de la date de livraison du logiciel.

Responsabilité du Concédant aux termes de la Garantie

9. La seule obligation du Concédant aux termes de la garantie susmentionnée sera de faire tous les efforts commercialement raisonnables pour corriger ou modifier la partie du logiciel pour le rendre matériellement conforme aux spécifications de la documentation.

Concession de Licence

10. Le Concédant vous accorde le droit d'utiliser une seule copie par appareil Merit (ci-après "Appareil") accompagné d'une seule clé de sécurité autorisée en usine et fournie par le Concédant. Le Concédant se réserve le droit de mise à jour des versions du logiciel et du contenu de l'Appareil, quand il juge nécessaire de le faire. Il vous appartient également d'empêcher que les mots de passe ou autres codes et la clé de sécurité soient utilisés par un tiers. Vous acceptez d'assumer la responsabilité dans le cas de l'utilisation du logiciel par un tiers. Le Concédant se réserve le droit de résilier votre contrat de licence à tout moment dans l'éventualité d'une utilisation non-conforme aux clauses stipulées. Bien que le Concédant ne contrôle pas les appareils périodiquement, il se réserve toutefois le droit de contrôler le logiciel à tout moment et sans préavis de sa part. De surcroît, dans l'éventualité où le logiciel n'est accessible qu'à travers la machine dans laquelle il est installé, le licencié s'engage à donner libre accès au Concédant, ou ses représentants, à la machine et dans les plus brefs délais.

Exclusion de toute autre garantie

11. EXCEPTE COMME PREVUDANS LA SECTION INTITULE E "LIMITE DE GARANTIE", LE CONCEDANT N'ASSUREAUCUNEAUTRE GARANTIE DE QUELQUE NATURE ETA QUELQUE TITRE QUE CE SOIT, EXPLICITE OU IMPLICITE, EN RAPPORT AVEC LE LOGICIEL ET LES COMPOSANTS QUI L'ACCOMPAGNENT OU, LE CAS ECHEANT, TOUT SUPPORT OU MATERIEL FOURNI CONFORMEMENT AU PRESENT CONTRATEN PARTICULIER, LE CONCEDANT NE PEUT DONNER AUCUNE GARANTIE, DE QUELQUE NATURE QUE CE SOIT, POUR LA COMMERCIALISATION DE TOUS LES PRODUITS EN RAPPORTAVEC LE LOGICIEL OU AVEC L'UTILISATION DE CELUI-CI. DANS LA MESURE OU CELA EST PERMIS PAR LALOI, LE CODE UNIFORME COMMERCIAL OU AUTRE LOI UNIFORME NE S'APPLIQUE PAS AU PRESENT CONTRAT.

Limite de Responsabilité

- 12. LE CONCEDANT NE SERA EN AUCUN CAS RESPONSABLE DE TOUTE RECLAMATION, DEMANDE OUACTION RESULTANT DE OUENRAPPORTAVEC LE LOGICIEL, SON UTILISATION OU SON INSTALLATION, OU LA PERFORMANCE OU MANQUE DE PERFORMANCE DU CONCEDANT EN VERTU DU PRESENT CONTRAT POUR TOUS DOMMAGES D'UNE NATURE QUI N'EST PAS PRESUMEE PAR LALOI ET QUI DOIVENT ETRE EXPRESSEMENT PROUVES, DOMMAGE INDIRECTS, DOMMAGES-INTERETS POUR PREJUDICE MORAL, QUE LE CONCEDANT AIT ETE AVISE OU NON DE LA POSSIBILITE D'UNE TELLE RECLAMATION, DEMANDE OUACTION. DE PLUS, SANS LIMITER CE QUI PRECEDE, LES DEDOMMAGEMENTS A VOTRE DISPOSITION SERONT LIMITES AU MONTANT QUE VOUS AUREZ PAYE AU CONCEDANT POUR LE LOGICIEL.
- 13. LE CONCEDANT NE SERAENAUCUN CAS RESPONSIBLE: D'UNE RUPTURE DE CONTRAT, DES DOMMAGES, Y COMPRIS TOUTE PERTE DE PROFIT, PERTES D'ECONOMIE OU TOUS AUTRES DOMMAGES INDIRECTS OU DOMMAGES-INTERETS ACCESSOIRES DECOULANT DE LA MAUVAISE UTILISATION OU DE L'IMPOSSIBILITE D'UTILISATION DU LOGICIEL.

Dispositions Générales

- 14. La validité et la construction du présent Contrat et les droits et obligations ci-inclus seront déterminés et régis par les lois de l'état de New York aux États-Unis. En acceptant les dispositions du présent contrat, vous acceptez également que tous litiges ou revendications relatives seront réglés par voie d'arbitrage par un tribunal de l'état de New York, aux Etats-Unis.
- Merit Industries se réserve le droit de transférer le présent Contrat à un tiers ainsi que ses droits et obligations ci-après.
- Pour toutes questions concernant le présent Contrat -ou si vous désirez contacter le Concédant pour une raison quelconque, veuillez écrire à : Merit Industries, Inc., 2525 State Road, Bensalem, PA 19020. Etats-Unis.

Merit Industries, Inc. Softwarelizenzabkommen

Merit Industries, Inc. ("Lizenzgeber") ist nur dann bereit Ihnen eine Lizenz für die beiliegende Software zu erteilen, wenn Sie alle Bestimmungen dieses Lizenzabkommens ("Abkommen") akzeptieren.

Eigentumsvorbehalt der Software

1. Das beiliegende Merit®-Produkt, welches das Megatouch® Softwareprogramm ("Software") beinhalten kann, aber nicht darauf beschränkt ist, und die schriftlichen Unterlagen sind Eigentum des Lizenzgebers und sind durch die Gesetze der Vereinigten Staaten und anderer Länder und durch internationale Verträge urheberrechtlich geschützt.

Beschränkungen im Gebrauch und Transfer

- Sollte diese Softwarelieferung mehrere Medien enthalten (z.B. CD, Karten, Festplatten usw.), dürfen Sie nur die für Ihre Maschine angebrachte Medienart verwenden. Die anderen Medienarten dürfen nicht auf anderen Maschinen verwendet werden oder an Dritte übergeben werden, abgesehen von einem endgültigen Transfer der Software und aller schriftlichen Unterlagen (wie im untenstehenden Paragraphen 4 beschrieben).
- Sie dürfen nur eine Sicherungskopie der Software herstellen. Unter keinen Umständen dürfen Sie einen Softwaresicherungsschlüssel oder Sicherungsmaßnahmen kopieren oder davon Sicherungskopien herstellen.
- 4. Sie dürfen das Nutzungsrecht für die Software und die schriftlichen Unterlagen (einschließlich der aktuellen Version und aller vorhergehenden Versionen) an Dritte übertragen, wenn Sie keine Kopie behalten und wenn der Empfänger die Bestimmungen dieses Abkommens in schriftlicher Form akzeptiert. Bei einem solchen Transfer der Lizenz an Dritte erlischt Ihre Lizenz umgehend. Abgesehen von den Bestimmungen dieses Paragraphen sind alle anderen Transfers oder Übertragungen der Nutzungsrechte für diese Software unerlaubt.
- 5. Sie dürfen die Software nicht benutzen oder eine Nutzung gestatten, wenn eine solche Nutzung der Software irgendwelche Gesetze und Verordnungen der kommunalen oder staatlichen Behörden verletzen würde. Sie verpflichten sich die Software nicht so zu nutzen oder nutzen zu lassen, dass sie damit gegen staatliche, Bundes- oder Lokalgesetze oder Bestimmungen der USA oder gegen ausländische Gesetze oder Bestimmungen, einschliesslich aller Gesetze bezüglich Glücksspiels, Spielens oder geistigen Eigentumrechts der Software, verstossen.
- 6. Es ist Ihnen nicht gestattet, die Software abzuändern, zu verändern, zu übersetzen, rückumzuwandeln, zu dekompilieren oder zu zerlegen, oder aus der Software oder eines Teils davon andere Werke abzuleiten. Sie dürfen auch aus der Software, einem Bestandteil der Software oder aus den Datenausgaben der Software keine Hinweise, Bemerkungen, Ratschläge, Wasserzeichen oder andere Markierungen entfernen, verändern, verbergen oder auf andere Art unlesbar machen.
- 7. Sie akzeptieren, dass die Software und die Urheberschaft, die Systeme, die Ideen, Erfindungen, die Arbeitsweisen, die Dokumentation und alle anderen darin enthaltenen Informationen und alle Versionen, Veränderungen, und Bearbeitungen davon das geistige Eigentum des Lizenzgebers sind, und dass sie durch Straf- und Zivilgesetzgebung und durch die Copyright-, Geschäftsgeheimnis-, Warenzeichen- und die Patentgesetze der Vereinigten Staaten und anderer Länder geschützt sind.

Beschränkte Garantie

 Der Lizenzgeber garantiert zu Ihren Gunsten, dass die Software für die angegebene normale Garantiezeit des Lizenzgebers nach Ihrer Annahme der Software in erheblicher Übereinstimmung mit der beiliegenden Dokumentation laufen wird.

Verpflichtung des Lizenzgebers im Rahmen der Garantie

 Die ausschließliche Pflicht des Lizenzgebers im Rahmen der vorstehenden Garantie besteht darin, alle geschäftlich vertretbaren Schritte zu unternehmen, um Teile der Software zu berichtigen oder abzuändern, bis sie mit der beiliegenden Dokumentation erheblich übereinstimmen.

Übertragung der Lizenz

10. Der Lizenzgeber gewährt Ihnen eine beschränkte, nicht-ausschliessbare Lizenz zur Vertreibung und/oder Benutzung einer Kopie der Software auf einem einzelnen Merit™ ("Gerät") mit einem einzelnen werksmäßig gestatteten Sicherungsschlüssel. Der Lizenzgeber behält sich das Recht vor, nach eigenem Ermessen die Software und den Inhalt der Maschine zu verbessern. Sie sind dafür verantwortlich ihren individuellen, vom Lizenzgeber werksmäßig gestatteten Sicherheitsschlüssel, ihr Passwort oder anderweitigen Identifikationsmechanismus instandzuhalten und abzusichem gegen die Nutzung durch eine dritte Partei, und sie akzeptieren die Verantwortung für jegliche Nutzung der besagten Software durch eine dritte Partei mithilfe ihresIdentifikationsmechanismus. Obwohl der Lizenzgeber nicht regelmässig Maschinen inspiziert, behält sich der Lizenzgeber das Recht vor, ihre Lizenz umgehend zu kündigen aus Gründen des Missbrauchs oder bei Nichtbefolgung der Bestimmungen in diesem Vertrag. Der Lizenzgeber behält sich ebenfalls das Recht vor, die Software von Zeit zu Zeit nach eigenem Ermessen zu inspizieren oder zu überprüfen. Im Falle, dass der Lizenzgeber Zugang zu dem Gerät wünscht, in dem besagte Software installiert ist, erklären Sie sich bereit, dass sie dem Lizenzgeber, wenn nötig, Erlaubnis und Hilfe beim Zugang zum Gerät verschaffen.

Beschränkungen

11. ABGESEHEN VON DEN BESTIMMUNGEN DES PARAGRAPHEN "BESCHRÄNKTE GARANTIE" GIBT DER LIZENZGEBER KEINE SONSTIGEN VERSPRECHEN, VERPFLICHTUNGEN ODER GARANTIEN, OB AUSDRÜCKLICH ODER STILLSCHWEIGEND, FÜR DIE SOFTWARE ODER IHRE BESTANDTEILE ODER FÜRALLE ANDEREN MATERIALIEN, DIE IHNEN IM RAHMEN DIESES ABKOMMENS ZUR VERFÜGUNG GESTELLT ODER ÜBERLASSEN WERDEN, UND DER LIZENZGEBER LEHNT AUSDRÜCKLICH ALLE ANSPRÜCHE AUF MARKTFÄHIGKEIT UND EIGNUNG DER BESAGTEN MATERIALIEN FÜR DEN GEWÖHNLICHEN GEBRAUCH AB. SOWEIT GESETZESMÄSSIG ZUGELASSEN, SOLLEN DIE HANDELSRECHTLICHE GESETZGEBUNG AUS DEM UNIFORM COMMERCIAL CODE ODER ANDERE GESETZE AUF DIESES ABKOMMEN NICHTANWENDBAR SEIN.

Haftungsbeschränkung

- 12. DER LIZENZGEBER HAT KEINERLEI HAFTUNG BEI EINEMANSPRUCH, EINER FORDERUNG ODER EINER KLAGE, DIE AUF NUTZUNG DER SOFTWARE, DEREN INSTALLIERUNG, DER LEISTUNG DES LIZENZGEBERS ODER DESSEN VERSAGEN IMRAHMEN DIESES ABKOMMENS FÜR JEGLICHE FOLGE-, INDIREKTE, SONDER-ODER NEBENSCHÄDEN BERUHEN, SELBST WENN DER LIZENZGEBER AUF DIE MÖGLICHKEIT EINES SOLCHENANSPRUCHES, EINER FORDERUNG ODER EINER KLAGE HINGEWIESEN WURDE. WEITERHIN UND OHNE BESCHRÄNKUNG DES LETZTEN SATZES, DÜRFEN IN ALLEN FÄLLEN DIE IHNEN ZUR VERFÜGUNG STEHENDEN ABHILFEN DIE VON IHNEN FÜR DIE SOFTWARE AN DEN LIZENZGEBER GEZAHLTE SUMME NICHT ÜBERSCHREITEN.
- 13. DER LIZENZGEBER HAT IN KEINEM FALL EINE HAFTUNG IHNEN GEGENÜBER FÜR SCHÄDEN, EINSCHLIESSLICH ETWAIGER GEWINNVERLUSTE, NICHT REALISIERTER EINSPARUNGEN ODER ANDERER NEBEN- ODER FOLGESCHÄDEN, DIE AUS IHRER VERWENDUNG, MISSBRAUCH, VERLETZUNG DIESES ABKOMMENS ODER GEBRAUCHSUNFÄHIGKEIT DER SOFTWARE ENTSTEHEN.

Allgemein

- 14. Die Rechtsgültigkeit und Provisionen dieses Abkommens und der darin enthaltenen Rechte und Pflichten werden durch die Gesetze des Staates von New York bestimmt. Sollten sie diese Vereinbarungen annehmen, dann akzeptieren Sie, dass der ausschliessliche Erfüllungsort und Gerichtsstand bei den Gerichten von New York im Staat New York liegen hinsichtlich aller Streitigkeiten, die diesen Vertrag betreffen, oder die durch Leistung oder Missbrauch der besagten Software entstehen.
- 15. Merit kann nach eigenem Ermessen dieses Abkommen oder jedes der darin enthaltenen Rechte und Pflichten an Dritte abtreten.
- Bei Rückfragen über dieses Abkommen oder wenn Sie den Lizenzgeber aus einem anderen Grund kontaktieren wollen, bitte schreiben an: Merit Industries, Inc., 2525 State Road, Bensalem, PA 19020. USA.

NOTES:

NOTES:

NOTES:

Please read the enclose constitutes acceptance of		
	à respecter les termes e	inclus. Si vous utilisez c et conditions du contrat d
Bitte beiliegendes Lizenz Lizenzabkommen tritt in		