

Dream it.. Do it..

IMX TEJ 28

OWNER'S MANUAL

Ver 1.0



OWNERS MANUAL

Congratulations on the purchase of your new TEJ IMX 28. It is important to note that archery equipment, when not used properly, can create a dangerous situation. It is up to you to be a responsible archer, protect both yourself and others when enjoying this great sport. **READ THIS ENTIRE MANUAL CAREFULLY** before using your bow. Welcome to the IMAXX Family!

BOW OWNERS PERSONAL INFO

Fill in the following personal bow record for your reference.

Bow Serial Number:

Draw Length:.....(Inches)

Draw Weight:..... (lb.) (in.)

String Length: 51 3/16" (in.)

Buss Cable Length: 31 3/16" (in.)

Purchased From:

Purchase Date:

IMPORTANT! A copy of your sales receipt is required for warranty purposes. The sales receipt, as well as the serial number, is your proof of date-of-purchase.

SAFETY REQUIREMENTS

- It is critical that your bow is set up and functioning within the bows required safe operating parameters prior to use. Carefully inspect your bow before each use. Before you handle or shoot your bow, carefully inspect the condition of your bow, accessories, arrows, and your release aid to ensure they are in good and proper working condition.
- Kindly make sure to shoot the bow under the guidance of trained staff like coaches.
- Never dry fire your bow. To dry fire your bow, means to shoot the bow without an arrow. A dry fire could cause your bow to break and cause death or serious injury to you or others.
- If your bow is dry-fired there could be both seen and unseen damages and kindly contact your dealer for further assistance.
- Never loosen your limb weight adjustment bolts more than 8 turns, it can go up to 10 turns but we suggest to take only till 8 turns.
- Never shoot a bow with the incorrect arrow size (spine) or the incorrect arrow length. Shooting an incorrect arrow size or length could cause your arrow to break and cause serious injury to you or others. Refer to the specific arrow manufacturers arrow selection chart to select the correct arrow size and length for your setup.
- Never mechanically alter or modify your bow. Drilling holes, cutting, filing, or sanding are examples of mechanically altering your bow which will likely cause the bow to break and could cause death or serious injury.
- Do not draw or shoot bow without the cable guard, cable slide and/or rollers properly installed, adjusted and tightened.
- Never expose your bow to extreme heat or prolonged moisture. Damage can occur to your bow from heat exposure, prolonged exposure to moisture, and improper storage.

BOW MAINTENANCE

- Your bow is a mechanical device and as such, is subject to wear and need of periodic inspection, adjustment and service. Areas to be inspected are axles, spacers, e-clips, strings, cables, limbs, cams, limb pockets and slides. Note: It is normal for grease to be present on the pocket and rocker area of the bow.

LIMB ADJUSTMENT

- Kindly use a **5mm** Allen Key to adjust the Tiller Bolt. Do not go beyond 8 **full turns** of the Tiller Bolt. One Full turn adds or removes **4 Lbs**. Always ensure that both your top and bottom limb Tiller Bolts are adjusted and set at equal positions.

ACCESSORIES MOUNTING

- Your bow is equipped with various accessory mounting locations to allow accessories such as sights, arrow rests, and stabilisers to be attached to your bow. Ensure that all accessories are specifically right handed or left handed to match your bow where applicable and that all mounting hardware is securely tightened.

WARRANTY




- All compound bows must have the original serial number factory-attached to the bow. The serial number must remain legible.
- Damage to strings, cables, bearings, damping materials, finish (including paint, anodize, powder coat and film-dipped finishes) resulting from normal wear-and-tear are excluded from warranty.
- If bow shows sign of misuse, alteration, or mishandling and also dry-firing, this warranty will be void.
- All warranty claims are subject to scrutiny by our engineers.

CAM - DRAW LENGTH SETTINGS

To adjust Draw Lengths kindly use the **2.5 mm Allen (Hex)** key provided.

Draw Length Module Positions		
Draw length in Inches	Position	Module
28	B	10
27	B	9
26.5	B	8
26	B	7
25	B	6
24.5	B	5
24	B	4
23.5	B	3
23	B	2
22.5	B	1

Draw Length Module Positions		
Draw length in Inches	Position	Module
24	A	10
22.25	A	9
22	A	8
21.5	A	7
21	A	6
20.5	A	5
20	A	4
19	A	3
18	A	2
17	A	1

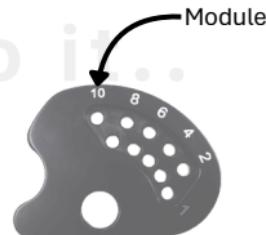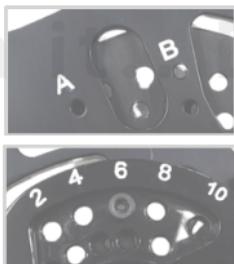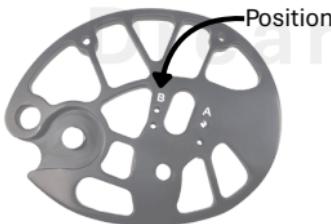

A PREMIUM ARCHERY EQUIPMENT MANUFACTURER FROM INDIA

IMAXX SPORTS

Chennai, INDIA.

WhatsApp: +91 79049 94834

email: admin@imaxxsports.com

www.imaxxsports.com