CRSU Startup

Michal Rigan, Martti Nirkko University of Sussex

January 31, 2019

Abstract

This document details the startup procedures for the SNO+ remote control room at Sussex (CRSU). The basic setup, requirements and procedures to follow when starting up the control room and ideas for improvement are discussed. For a more detailed description of the setup, please refer to the CRSU commissioning report (DocDB-5063).

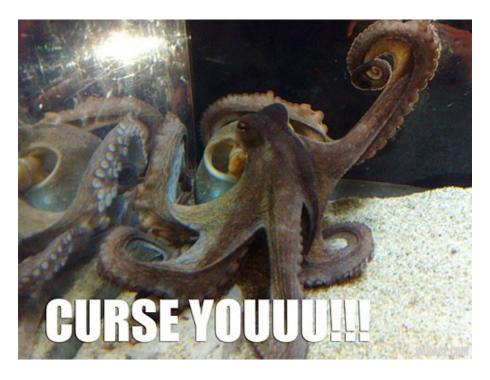


Figure 1: The correct prononciation of "CRSU", and its adorable mascot.

Contents

1	Basic setup	3
2	Requirements	4
3	Long term shutdowns (10 or more days)	4
4	Startup procedures	5
5	Fire alarms	7
6	Ideas	7

1 Basic setup

Machines abbreviations:

- Operating machine (Mac) = opersu
- Monitoring machine 1 (CentOS) = monsu1
- Monitoring machine 2 (CentOS) = monsu2



Figure 2: The SNO+ remote control room at Sussex (CRSU).

Figure 2 shows the current setup at CRSU: monsu1 is the machine on the bottom left, connected to the very left monitor and the left pair of peripherals. opersu is the central machine, with the machine in-built into the monitor, connected to the central pair of peripherals. monsu2 is on the right, with the double display setup. The power buttons are on the top left of both monsu machines and on the bottom left (backside) of the operating machine. Note that monsu1 can take longer time to boot-up due to the RAID system and dual boot setup. monsu2 sometimes warns about incorrect date settings on startup, just press F1 whenever you see the warning message. In addition, there is Windows running on a Virtual Machine (VM) on monsu1 and the process is described below. Every device except the landline telephone (which is powered by an ethernet socket alone) is connected to an Uninterruptible Power Supply (UPS) at the bottom right, below monsu2.

All machines have the 2 usual accounts configured: the snoperator and the snotdag account. For monsu machines, you need to enter the account name at

login as well (snoperator). Additionally, root acounts are available on the monsu machines. Martti's staff account has admin rights on opersu. Contact the remote control room experts

- M.Nirkko@sussex.ac.uk / @mnirkko / +44 7948 759 907
- M.Rigan@sussex.ac.uk / @MichalR / +44 7467 380 455

if you require details or run into trouble.

2 Requirements

This list notes the essential requirements needed to access the remote control room:

- SALTO access card: this is a card that allows people to access the Pevensey II. It is needed to get to the building outside the normal working hours (especially important for graveyard shifts!). Speak to Simon Peeters: S.J.M.Peeters@sussex.ac.uk / @simpeeters / +44 7771 907 291.
- Access to the remote control room ("InvisiblesLab", office 4A23 on 1st floor of Pevensey II building) is code restricted. Speak to Simon Peeters to gain access.
- Your SNOLAB account details to log in to the VPN software.
- The snoperator password and the global collaboration log in details.

3 Long term shutdowns (10 or more days)

Before a detector shift is taken at a remote shift station, the shifter must make sure that all the software is up to date on the operator and monitoring machines. This not a problem unique to remote stations - the software on site machines also has to be properly maintained - but there is a frequency of use difference. If a remote station has not been used for 10 or more days the following checklist should be completed. All checks and tests should be run the day before the scheduled shift.

- Power on UPS: Turn on the wall power on the far right, behind the monsu2 monitors. Then turn on the UPS by pressing the power button for 2 seconds. It will make some noise as it turns on, the fan will be clearly audible. The display should indicate the current load and remaining battery time in case of a power outage, as seen in Figure 3.
- **Restart both machines**: this clears out the cache and temp files, frees up RAM, kills unwanted services and (possibly) allows updates to be installed

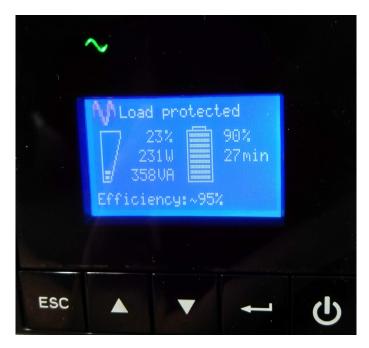


Figure 3: Display on the UPS, indicating current load.

- Log in as snoperator on all machines!
- Restart the VPN: this needs to be done on all machines. Find "Cisco Any-Connect VPN" (icon on the opersu apps dock (bottom of the screen) and monsu apps bar (top left)). Use your SNOLAB IT account and log into SL-SNOPLUS for opersu and monsu and SL-GEN on Windows machine. Select "Connect Anyway" if there is a pop-up.

• Check for updates:

- Linux: System tab → Administration → Software Update (you can also use the aliases update and update-linux)
- Mac: On opersu, click the Apple symbol in the application bar \to About This Mac \to Software Update
- Windows: In the VM on monsu1, check if there are updates available using the window update icon in the bottom-right corners (there are none available if it is not there).

4 Startup procedures

The usual procedure to start up all required software (note that the monsu machines have multiple virtual workspaces that you can navigate around using the CTRL + ALT + Arrows) is as follows:

• Power on the UPS and the physical machines, log in as snoperator.

- Start-up Windows on the VirtualBox: On monsu1 there is icon "Oracle VM VirtualBox" located on the top right of the desktop. Start the app, select the latest snapshot of Windows 7 Pro (either double click the item in the list on the left or click the "Start" green arrow). Log in as snoperator. Connect to VPN using the "VPN Client" icon on the desktop. Connect to the SL-GEN group. (Connecting to the VPN on Virtual machine can result in disconnecting from another VPN on another machine this is Cisco security to prevent from overloading. Be sure to reconnect and everything runs fine it only disconnects once!). Start up the phone application by selecting the "IP Phone" icon on the desktop. Finally open the UPS platform¹ using the bookmark in firefox web browser (the UPS platform only works on SL-GEN, therefore can only be opened on this VM).
- Connect to VPN software on all machines: Find "Cisco AnyConnect VPN" (icon on the opersu apps dock (bottom of the screen) and monsu apps bar (top left)). Use your snolab account and log into SL-SNOPLUS. Select "Connect Anyway" if there is a pop-up (again, check if you weren't disconnected randomly on other machines)

• On monsu1:

- Start up: Alarm GUI, FEC FIFO, MTC GUI, Supernova monitor, DAQ log and Builder log by clicking appropriate icons on the desktop (use multiple workspaces as appropriate). Sometimes a DB connection popup appears for the alarmGUI (possibly other apps), use the collaboration log-in to connect. Supernova and Builder require the snoperator's password to connect.
- Run Scope from the desktop (icon).
- This machine also runs Check Rates and Polling GUI when needed during the shift by selecting appropriate application on the desktop. List of all application is also available at Applications → Other from the taskbar.
- Make sure the virtual phone software is running on windows virtual machine as described above.
- On monsu2 (this machine is dedicated to run high-load streaming apps):
 - Run the local Dispatcher by clicking the icon on the desktop
 - Start 4 copies of xsnoed by clicking the icons on the desktop. There are specific icons to open Top or Bottom view xsnoed, each of which will open the application on the respective monitor. The suggested settings are: live, sum (-PED), 100 NHit and 500 NHit environments (again, use as many workspaces as you like)
 - Open the Minard stream in browser (bookmarks provided)

¹Note that this refers to the detector UPS located at SNOLAB, not the one powering this remote shift station.

 Be sure to have Slow Control, Detector State, Detector State Check, Nearline Monitor, PMT Calibration Summary, Grafana (data-flow) and the Weather forecast (blizzards/thunderstorms) tabs open in a browser (bookmarks provided).

• On opersu:

- Connect to remote drive with orca files: "Go" tab from the taskbar (top left) → Connect to Server. Select buffer1 from the Favorite Servers
- Start TUBii audio by clicking the "TUB_audio.m3u" icon on the desktop.
 Be sure to disable video to decrease the load (Video → Video Track → Disable)
- When you are ready for the shift handover (having called the current shifter), right-click the snot main. Orca file and select "Open With" → Orca (default). This ensures the correct version of Orca is opened instead of using the icon in the App doc
- Check correct version of Orca is running in Orca Session Log: Monitoring → Control Rooms → Orca.
- Be sure to have shift report page and Slack open at any of the machines (dedicated app installed at Mac)
- To call international numbers (such as on-call expert), a number of prefixes are needed: dial 9-1470-00-number.

5 Fire alarms

Make sure you have your mobile phone and a piece of paper with the expert's contact details. If you incur a large personal phone bill, please claim this on staff expenses (budget code TB006-23) and get Simon Peeters to sign it off for you.

6 Ideas

- Global SALTO card for lab?
- Improve fire alarm procedure.