

**armish Processor**

**Karlo Godfrey Escalona Gregorio**

# Contents

<b>1 Preface</b>	<b>1</b>
<b>2 ISA Design</b>	<b>1</b>
2.1 RX-type: Integer Operations . . . . .	2
2.1.1 Overview . . . . .	2
2.1.2 addx/subx . . . . .	4
2.1.3 adcx/sbcx . . . . .	7
2.1.4 mulx/divx . . . . .	8
2.1.5 absx . . . . .	9
2.1.6 cmpx . . . . .	10
2.1.7 notx . . . . .	11
2.1.8 andx/orrx/xorx . . . . .	11
2.1.9 Miscellaneous Notes: R-type Fixed-Point Instructions . . . . .	12
2.2 RF-type: Floating Point Operations . . . . .	13
2.2.1 Overview . . . . .	13
2.3 D-type: Data Movement Operations . . . . .	16
2.3.1 Overview . . . . .	16
2.3.2 ld . . . . .	17
2.3.3 st . . . . .	18
2.3.4 Miscellaneous Notes about D-type Instructions . . . . .	18
2.4 B-type: Branching Operations . . . . .	19
2.4.1 Overview . . . . .	19
2.4.2 bx . . . . .	20
2.4.3 b . . . . .	20
2.4.4 bl . . . . .	21
2.4.5 Important Notes for B-type Instructions . . . . .	21
2.5 Important Notes . . . . .	21
<b>3 Assembler</b>	<b>22</b>
<b>4 Architecture Design</b>	<b>23</b>
4.1 Program Execution Control . . . . .	24
4.2 Program Counter Adder . . . . .	25
4.2.1 Design . . . . .	25
4.2.2 Verification . . . . .	26
4.3 Instruction Memory . . . . .	27
4.3.1 Design . . . . .	27
4.3.2 Verification . . . . .	29

4.4	Main Register File . . . . .	31
4.4.1	Design . . . . .	31
4.4.2	Verification . . . . .	34
4.5	Immediate Decoder . . . . .	36
4.5.1	Design . . . . .	36
4.5.2	Verification . . . . .	37
4.6	Shifter . . . . .	39
4.6.1	Design . . . . .	39
4.6.2	Verification . . . . .	41
4.7	ALU . . . . .	43
4.7.1	Design . . . . .	43
4.7.2	Verification . . . . .	47
4.8	op2 Decoder . . . . .	50
4.8.1	Design . . . . .	50
4.8.2	Verification . . . . .	52
4.9	ALU Top . . . . .	52
4.9.1	Design . . . . .	52
4.9.2	Verification . . . . .	54
4.10	Branching Unit . . . . .	54
4.11	Data Memory . . . . .	54
4.11.1	Design . . . . .	54
4.11.2	Verification . . . . .	55
4.11.3	Design . . . . .	55
4.11.4	Verification . . . . .	55
4.12	FPU . . . . .	55
4.12.1	Design . . . . .	55
4.12.2	Verification . . . . .	55
4.13	Pipelining and Hazard Control . . . . .	55
4.13.1	Design . . . . .	55
4.13.2	Verification . . . . .	55
4.14	Branch Prediction . . . . .	55
4.14.1	Design . . . . .	55
4.14.2	Verification . . . . .	55
<b>5</b>	<b>Performance</b>	<b>55</b>

## 1 Preface

This project explores a custom implementation of a subset of the ARMv7 instruction set. A custom instruction set inspired by the ARM architecture is designed with a custom assembler. The architecture is implemented in hardware as an RTL model, whose functionality is verified.

The assembler is implemented in Python, and the RTL model is implemented using SystemVerilog, using an Arty-S7 25 as a target hardware to use as an example.

It should be noted that this architecture is an educational project inspired by ARM-style RISC design using the ARM7TDMI-S data sheet as reference. It is not ARM-compatible and does not use proprietary ARM encoding or IP.

## 2 ISA Design

All instruction words are designed to be 32 bits wide. Each instruction has 4 condition bits that will determine whether or not the instruction executes based on CPSR condition flags (N, Z, C, V). This makes it simpler to write conditional statements for simple instructions. A list of the condition codes is listed below.

Field List				
Condition Code	Instruction Suffix	Flags Set (NZCV)	Explanation	
0000	halt	N/A	Terminate program	
0001	al	flags ignored	Always Executed	
0010	le	Z set OR (N not equal to V)	Less Than or Equal	
0011	gt	Z clear AND (N equals V)	Greater Than	
0100	lt	N not equal to V	Less Than	
0101	ge	N equals V	Greater Or Equal	
0110	ls	C clear or Z set	Unsigned Lower or Same	
0111	hi	C set and Z clear	Unsigned Higher	
1000	vc	V clear	No Overflow	
1001	vs	V set	Overflow	
1010	pl	N clear	Positive or Zero	
1011	mi	N set	Negative	
1100	cc	C clear	Unsigned Lower	
1101	cs	C set	Unsigned Higher or Equal	
1110	neq	Z clear	Not Equal	
1111	eq	Z set	Equal	

The halt condition code is used to terminate the program. Instructions attached with halt will not execute.

## 2.1 RX-type: Integer Operations

### 2.1.1 Overview

The RX-type instructions are used for integer arithmetic data-processing instructions. A summary of the format can be seen in Figure 1, and explanations of the fields can be seen under the figure.

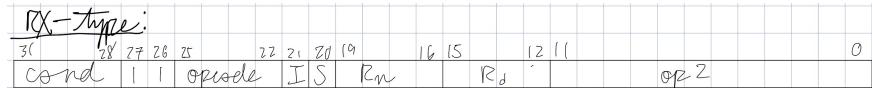


Figure 1: RX-type format for integer instructions.

Field List		
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
opcode	[25:22]	Determines the operation performed on operands
I	21	Determines whether or not op2 is an immediate (I = 0 means op2 is not an immediate, but a shift register)
S	20	Determines whether or not to alter condition codes (S = 0 means do not alter)
$R_n$	[19:16]	First source register
$R_d$	[15:12]	Destination register
$op2$	[11:0]	Varying field depending on the instruction

RX-type instructions have a varying  $op2$  field that can be used depending on whether or not the instruction uses an immediate. For each of the R-type instructions, a closer look will be given in their individual instruction sections.

Field List		
Instruction	Bits	Description
shift	[11:4]	Used for instructions using two source registers. The amount to shift the value in $R_m$
$R_m$	[3:0]	Used for instructions using two source registers. The second source register
rotate	[11:8]	Used for instructions using one source register and one immediate. Rotates the immediate a specific number of positions
imm	[7:0]	A constant used with another shift register to produce the result

Instructions take the following form:

---

(mnemonic)-(instruction suffix) (rd), (rn), (rm)

---

where in each parentheses:

- mnemonic - the type of instruction (e.g. add, sub, etc.)
- instruction suffix - the instruction suffix that details the condition that the instruction is executed under
- rd - destination register

- rn - source register 1
- rm - source register 2/immediate

A list of supported instructions is listed below. It should be noted that because of some complex instructions, the ALU is pipelined to [insert how many stages here] stages.

Instructions		
Mnemonic	opcode	Description
addx	0000	Adds two integer values
subx	0001	Subtracts two integer values
mulx	0010	Multiplies two integer values
divx	0011	Divides two integer values
absx	0100	Takes the absolute value of an operand
adcx	0101	Adds two integer values and a carry flag from a previous instruction
sbcx	0110	Subtracts two integer values and a carry flag from a previous instruction
cpx	0111	Compares two operands and outputs the appropriate flag
notx	1000	Takes the bitwise NOR of two operands
andx	1001	Takes the bitwise AND of two operands
orrx	1010	Takes the bitwise OR of two operands
xorx	1011	Takes the bitwise XOR of two operands

### 2.1.2 addx/subx

The addx and subx instructions add or subtract two numbers and store them into a destination register. The following snippet shows the cases for add, but sub follows a similar format.

---

```
// add the values stored in r1 and r2 and store them
// into r3
addx.s-al r3, r1, r2
// add 8 to the value stored in r1 and store them into r3
addx.s-al r3, r1, #8
// add the values stored in r1 and r2 and store them
// into r3, and use the result to set NCZV flags
addx.s-al r3, r1, r2
// r3 = r1 - r2
subx-al r3, r1, r2
```

---

The *op2* field in the instruction format for add/sub takes on different forms depending on the value of bit 25 (*I*). For *I*=0, the *op2* field operates under the assumption that the 3rd operand is stored in a register. For *I*=1, the *op2* field operates under the assumption that the 3rd operand is an immediate value.

### 3rd Operand: Register

When the 3rd operand is a register, the value in the register can be manipulated through shifting before carrying out addition or subtraction.

---

```
// add the values stored in r1 and r2 (whose value is
    shifted logically to the left by a value specified in
    r4) and store them into r3
addx r3, r1, r2, lsl r4
// add the values stored in r1 and r2 (whose value is
    shifted logically to the left by 8) and store them
    into r3
addx r3, r1, r2, lsl #8
```

---

The *op2* field specifications are as follows:

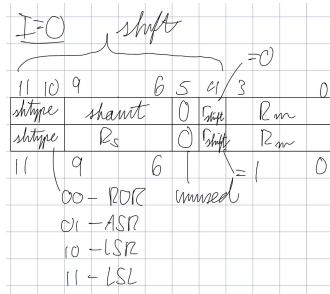


Figure 2: *op2* field when the 3rd operand is a register. The top field is the format when the 3rd operand is shifted by a constant. The bottom field is the format when the 3rd operand is shifted by an amount specified in a register.

Field List for <i>op2</i> (3rd operand register, shifted by immediate)		
Field	Bits	Description
shtype	[11:10]	The shift type performed on the 3rd operand
shamt	[9:6]	The amount that the 3rd operand is shifted by
unused	5	unused
<i>rshift</i>	4	The bit that specifies whether the shifting operand is a register or an immediate (value after lsl)
<i>R<sub>m</sub></i>	[3:0]	The register holding the second operand

Field List for $op2$ (3rd operand register, shifted by register value)		
Field	Bits	Description
shtype	[11:10]	The shift type performed on the 3rd operand
$R_s$	[9:6]	The register that contains the amount that the 3rd operand is shifted by
unused	5	unused
$r_{shift}$	4	The bit that specifies whether the shifting operand is a register or an immediate (value after lsl)
$R_m$	[3:0]	The register holding the second operand

The shift type (shtype) determines what kind of shift the second operand goes through. The specifications for the shift type are as follows:

Description of Shift Types		
Shift Type	Encode	Description
ror	00	Rotate right
asr	01	Arithmetic shift right
lsr	10	Logical shift right
lsl	11	Logical shift left

For carrying out the operation without any shifting, it is sufficient to just not include a mention of the shift. It will assume lsl #0, which will not perform any shift.

**3rd Operand: Immediate** When the 3rd operand is an immediate, the values the immediate can take a variety of values.

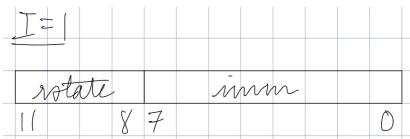


Figure 3:  $op2$  format for when the 3rd operand is an immediate.

Field List for $op2$ (3rd operand immediate)		
Field	Bits	Description
rotate	[11:8]	Number defining how many times the immediate is rotated right in a 16-bit value
imm	[7:0]	Immediate to be encoded

The 8-bit immediate field can be used to values from 0 to 255. Since each register is 16-bits, an 8-bit immediate isn't enough to reach the full value range that can be held by the register. With the rotate field, the rest of the bits in each register can be set, and a wider range of immediates can be used.

<u>rotate</u>	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
0	7 6 5 4 3 2 1 0															
1	0	7 6 5 4 3 2 1														
2	1 0		7 6 5 4 3 2													
3	2 1 0			7 6 5 4 3												
4	3 2 1 0				7 6 5 4											
5	4 3 2 1 0					7 6 5										
6	5 4 3 2 1 0						7 6									
7	6 5 4 3 2 1 0							7								
8	7 6 5 4 3 2 1 0															
9	7 6 5 4 3 2 1 0															
10	7 6 5 4 3 2 1 0															
11	7 6 5 4 3 2 1 0															
12	7 6 5 4 3 2 1 0															
13	7 6 5 4 3 2 1 0															
14	7 6 5 4 3 2 1 0															
15	7 6 5 4 3 2 1 0															

Figure 4: How the value of rotation affects which bits are selected to be affected

One unique difference from ARMv7 is that the rotation encoding from an 8-bit immediate into 16-bits is that this allows for a wider range of access of immediates possible for 16-bit operands, meaning the effective range of encoding immediates at the cost of higher hardware complexity. Because the registers store signed values, the effective range is 0 to  $2^{15} - 1$ .

It should be noted that negative immediates are not directly supported, but negative values can be indirectly made through subx.

### 2.1.3 adcx/sbcx

The adcx and sbcx instructions add or subtract two numbers with a carry from the previous instruction and store them into a destination register. The formatting used for the instruction is the same as addx/subx, with the only distinction between the instruction being the opcode.

---

```
// add the values stored in r1 and r2 and store them
// into r3
adcx.s-al r3, r1, r2
```

---

```

// add 8 to the value stored in r1 and store them into r3
adcx.s-al r3, r1, #8
// add the values stored in r1 and r2 and store them
// into r3, and use the result to set NCZV flags
adcx.s-al r3, r1, r2
// r3 = r1 - r2
sbcx-al r3, r1, r2

```

---

### 2.1.4 mulx/divx

The mulx instruction can multiply two numbers and store them into a destination register.

---

```

// multiply the values stored in r1 and r2 and store the
// product into r3 and r4
mulx-al r3, r4, r1, r2
// divide the values stored in r1 and r2 and store the
// quotient into r3 and the remainder in r4
divx-al r3, r4, r1, r2
// integer division of r1 and r2 and store the quotient
// into r3
divx-al r3, r1, r2

```

---

The *op2* format for mulx is shown below. For full context, part of the rest of the instruction encoding is also shown.



Figure 5: *op2* encoding for the mul instruction

Field List for <i>op2</i> (mul)		
Field	Bits	Description
<i>R<sub>du</sub></i>	[15:12]	Register to hold the upper byte of the product (technically not part of <i>op2</i> )
<i>R<sub>dl</sub></i>	[11:8]	Register to hold the lower byte of the product
unused	[7:4]	unused
<i>R<sub>m</sub></i>	[3:0]	The register holding the second operand

Because the product of 2 16-bit numbers is 32-bit, two registers are necessary to hold the entire product.

The *op2* format for div is shown below. For full context, part of the rest of the instruction encoding is also shown.

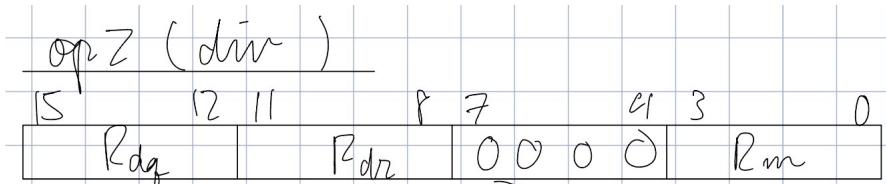


Figure 6: *op2* encoding for the div/divi instructions.

Field List for <i>op2</i> (div)		
Field	Bits	Description
$R_{dq}$	[15:12]	Register to hold the quotient (technically not part of <i>op2</i> )
$R_{dr}$	[11:8]	Register to hold the remainder
rem	7	Bit to decide whether or not to keep the remainder (rem = 1 means keep the remainder)
unused	[6:4]	unused
$R_m$	[3:0]	The register holding the second operand

One register is used to store the quotient, and 1 register is used to store the remainder of the division.

Some things to note about mul/div:

- Immediate cannot be used. The 32-bit instructions doesn't have the capacity to use immediates.
- NCZV flags cannot be set with mul and div. Allowing for this increases the complexity of the hardware by too much. This means S is always set to 0
- Trying to divide by 0 will set both the product and remainder to 32'hFFFF'FFFF

### 2.1.5 absx

The absx instruction takes the absolute value of a register.

---

```
// take the bitwise not of r1 and store into r2
notx-al r2, r1
```

---

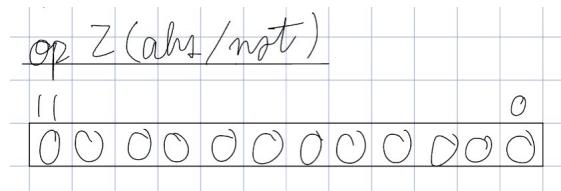


Figure 7:  $op2$  encoding for the not instruction

$op2$  is set to all 0s, since not is a unary operator. This also means that immediates have no purpose for this instruction, as well as setting NCZV flags ( $I = 0, S = 0$ ).

### 2.1.6 cmpx

The cmpx instruction compares to registers.

---

```
// compares r2 and r1 and sets the appropriate flags
cmpx-al r2, r1
// compares r2 and 145 and sets the appropriate flags
cmpx-al r2, #145
```

---

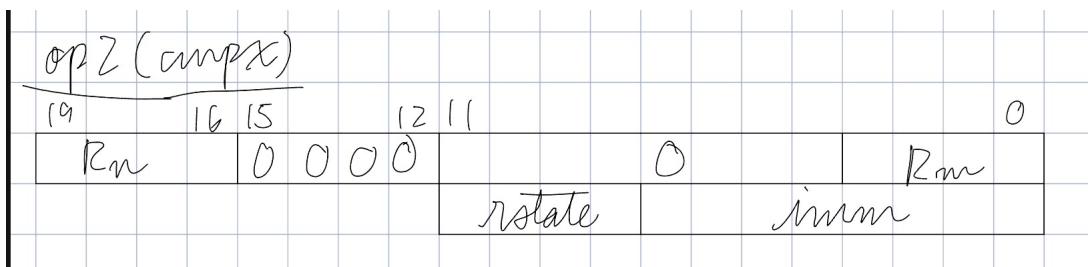


Figure 8: Encoding for bits [19:0] for cmpx

For  $op2$ , cmpx uses the same immediate encoding as add/sub instructions (see 2.1.2), allowing for both register and immediate comparison.  $R_d$  is set to 0.

Field List for $op2$ of cmpx (3rd operand register $I = 0$ )		
Field	Bits	Description
r0	[15:12]	The r0 register to send the final result to (to be ignored)
0	[11:4]	Zero Filling
imm	[3:0]	Immediate to be encoded

Field List for <i>op2</i> of cmpx (3rd operand immediate I = 1)		
Field	Bits	Description
r0	[15:12]	The r0 register to send the final result to (to be ignored)
rotate	[11:8]	Number defining how many times the immediate is rotated right in a 16-bit value
imm	[7:0]	Immediate to be encoded

The destination register is set to the 0 register, which is always hardwired to 0 value.

Some notes about cmpx:

- cmpx will always set flags. Do not add '.s'

### 2.1.7 notx

The notx instruction can take the bitwise not of what is stored in the source register.

---

```
// take the bitwise not of r1 and store into r2
notx-al r2, r1
```

---

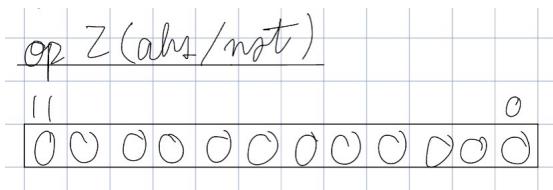


Figure 9: *op2* encoding for the not instruction

*op2* is set to all 0s, since not is a unary operator. This also means that immediates have no purpose for this instruction, as well as setting NCZV flags (I = 0, S = 0).

### 2.1.8 andx/orrx/xorx

The andx instruction can take the bitwise and of what is stored in the source register. The orrx instruction can take the bitwise or of what is stored in the source register.

---

```
// take the bitwise and of r1 and r2 and store into r3
andx-al r3, r1, r2
// take the bitwise and of r1 and #0x00ff and store into
// r3
andx-al r2, r1, #9
```

---

```
// take the bitwise or of r1 and r2 and store into r3
orrx-al r3, r1, r2
// take the bitwise or of r1 and #0x00ff and store into
r3
orrx-al r2, r1, #0x00ff
// take the bitwise xor of r1 and r2 and store into r3
xorx-al r3, r1, r2
// take the bitwise xor of r1 and #0x00ff and store into
r3
xorx-al r2, r1, #0x00ff
```

---

The encoding done for *op2* is identical to that of addx/subx instructions, so shifting operations can be applied to the 3rd operand (given that it is a register), if desired (see 2.1.2).

### 2.1.9 Miscellaneous Notes: R-type Fixed-Point Instructions

A few things to note about R-type instructions:

- To update NCZV flags after addx, subx, append an 's' after the mnemonic (i.e. adds, subs).
- For operations that take a shifting argument, it makes no sense to shift more than 15 positions. Therefore, shift inputs more than 15 will force the register value to be 0.
- Even though some RX instructions don't use immediates (mulx, divx), I will always be set to 1 to simplify shifting hardware.

## 2.2 RF-type: Floating Point Operations

**Note:** This section will be implemented if time allows for it. Implemented as a coprocessor according to ARM7-TDMI-S (Ch 4)

### 2.2.1 Overview

The RF-type instructions are used for floating-point arithmetic data-processing instructions, using the IEEE-754 floating-point standard format. A summary of the format can be seen in Figure 3, and explanations of the fields can be seen under the figure.

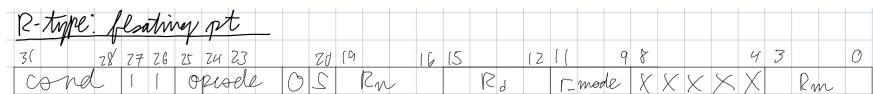


Figure 10: RF instruction type format.

Field List		
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
opcode	[25:22]	Determines the operation performed on operands
unused	21	unused
S	20	Determines whether or not to alter condition codes (S = 0 means do not alter)
R <sub>n</sub>	[19:16]	First source register
R <sub>d</sub>	[15:12]	Destination register
r <sub>mode</sub>	[11:9]	Specifies the rounding mode of the floating point operation. See the underlying table for details.
unused	[8:4]	unused (might do flags for invalid operations)
R <sub>m</sub>	[3:0]	Varying field depending on the value of opcode

<i>r<sub>mode</sub></i>	
<i>r<sub>mode</sub></i> value	Description
000	Operation rounds toward 0
001	Operation rounds toward nearest, ties away from 0
010	Operation rounds toward nearest, ties to even
011	Operation rounds toward $+\infty$
100	Operation rounds toward $-\infty$

Instructions take the following form:

---

```
(mnemonic).f-(instruction suffix) (rd), (rn), (rm),  
#(r_mode)
```

---

where in each parentheses:

- mnemonic - the type of instruction (e.g. add, sub, etc.)
- instruction suffix - the instruction suffix that details the condition that the instruction is executed under
- rd - destination register
- rn - source register 1
- rm - source register 2
- $r_{mode}$  - the rounding mode for the floating point operation

Instructions take the following form:

---

```
(mnemonic).f-(instruction suffix) (rd), (rn), (rm),  
#(r_mode)
```

---

where in each parentheses:

- mnemonic - the type of instruction (e.g. add, sub, etc.)
- instruction suffix - the instruction suffix that details the condition that the instruction is executed under
- rd - destination register
- rn - source register 1
- rm - source register 2
- $r_{mode}$  - the rounding mode for the floating point operation

A list of supported instructions is listed below.

Instructions		
Field	opcode	Description
addf	1000	Adds two floating-point values
subf	1001	Subtracts two floating-point values
mulf	1010	Multiplies two floating-point values
divf	1011	Divides two floating-point values
cmpf	1100	Compares two floating-point values)
cnvf	1101	Convert value to IEEE-754 floating-point standard format
sqrf	1110	Takes square root of a floating-point value
recf	1111	Takes reciprocal of a floating-point value

A few things to note about RF-type instructions:

- The instructions cannot be used to set CPSR condition codes, and are undefined for immediate type instructions.
- To choose the rounding mode for the floating point operations, after the '.f' market, use '#' followed by the value of  $r_{mode}$  to specify the rounding operation (e.g. add.f-al r1, r2, r3, #4 to round toward  $-\infty$ ).
- Rounding mode is undefined for cmp instruction. Just only use the two operands being compared
- Note the lack of immediate operations. To use immediate values, use fixed-point representation to create the immediate value with addi, and then convx2f.

## 2.3 D-type: Data Movement Operations

### 2.3.1 Overview

The D-type instructions are used for loading and storing data from and into memory.



Figure 11: D instruction type format.

Field List		
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
opcode	[25:22]	Encoding specific to instruction
I	21	Determines whether the offset is added or subtracted (U = 1 means that the offset is added, U = 0 means that the offset is subtracted)
U	20	Determines whether or not the offset is an immediate value or a register (I = 1 means that it is an immediate value, I = 0 means that the offset is stored in a register)
R <sub>n</sub>	[19:16]	Address register used to interact with memory
R <sub>t</sub>	[15:12]	Transfer register used to read/write with memory
offset	[11:0]	Offset used to calculate where to load/store data. For a register offset, the register would be the least significant 4 bits

Instructions take the following form:

---

(mnemonic) - (instruction suffix) (rd), [(rn), (offset)]

---

where in each parentheses:

- mnemonic - the type of instruction (e.g. add, sub, etc.)
- instruction suffix - the instruction suffix that details the condition that the instruction is executed under
- rd - Register in register file to load or store to
- rn - Register holding the address to interact with in data memory

- offset - offset used to calculate where to load/store data

A list of supported instructions is listed below.

Instructions		
Instruction	opcode	Description
ldw	0000	Loads a 16-bit word from data memory into a register in the register file
ldb2l	0001	Loads a byte from data memory into the lower byte of a register in the register file
ldb2h	0010	Loads a byte from data memory into the upper byte of a register in the register file
stw	0011	Stores a 16-bit word from a register in the register file into data memory
stb2l	0100	Stores a byte from the lower byte of a register in the register file into data memory
stb2h	0101	Stores a byte from the upper byte of a register in the register file into data memory

### 2.3.2 Id

Load instructions are used to load data from data memory into the register file. Users have the option of loading an entire 16-bit word or just a byte, which can be written into the upper or lower byte of a register. Additionally, it is possible to choose whether or not the offset is defined by an immediate or by a register.

---

```

// load a 16-bit word from data memory into r2, 2 bytes
// upstream from the address stored in r1
ldw r2, [r1, #2]
// Load a 16-bit word from memory into r2, 2 bytes
// downstream from the address stored in r1
ldw r2, [r1, #-2]
// Load a 16-bit word from memory into r2, according to
// the value stored in r3
ldw r2, [r1, r3]
// Load a 16-bit word from memory, offset according to
// the value stored in a 4 times shifted version r3
ldw r2, [r1, r3, lsl #4]
// Load the byte stored at address r1 into the lower
// byte of the register r2
ldb2l r2, [r1, #0]

```

---

```
// Load the byte stored at address r1 into the lower  
// byte of the register r2
```

---

The value of the offset can be determined by a register or by an immediate value. These follow the same format as the 3rd operand in R-type instructions like add and sub (See Section 2.1.2).

### 2.3.3 st

Store instructions are used to store data from the register file into data memory. Users have the option of storing an entire 16-bit word or just a byte, which can be read from the upper or lower byte of a register. Additionally, it is possible to choose whether or not the offset is defined by an immediate or by a register.

---

```
// store a 16-bit word from r2 into data memory,  
// specified by the address given by r1 2 bytes upstream  
stw r2, [r1, #2]  
// Load a 16-bit word from memory, 2 bytes downstream  
stw r2, [r1, #-2]  
// Load a 16-bit word from memory, offset according to  
// the value stored in r3  
stw r2, [r1, r3]  
// Load the byte stored at address r1 into the lower  
// byte of the register r2  
stb21 r2, [r1, #0]  
// Load the byte stored at address r1 into the upper  
// byte of the register r2
```

---

The value of the offset can be determined by a register or by an immediate value. These follow the same format as the 3rd operand in R-type instructions like add and sub (See Section 2.1.2).

### 2.3.4 Miscellaneous Notes about D-type Instructions

- To specify loading a byte, add a 'b' after the mnemonic (ldr, str), otherwise it will default to loading/storing a word.
- To specify whether an offset is added or subtracted, use positive offset values for adding, and negative offset values for subtracting (e.g. ldr r0, [r1, #8] for the address  $r1 + 8$ , ldr r0, [r1, #-8] for the address  $r1 - 8$ ).
- To specify whether an offset is an immediate value or a register, use '#' to specify the offset, or 'r' to specify a register (e.g. ldr r0, [r1, #8] for an offset or ldr r0, [r1, r2] for a register).

- The hardware uses little-endian formatting.

## 2.4 B-type: Branching Operations

### 2.4.1 Overview

B-type instructions are used for procedure calls. The ISA uses relative branching.

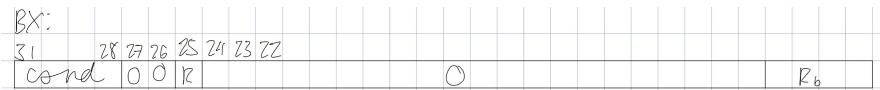


Figure 12: B instruction type format for BX instruction

Field List (BX)		
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
R	25	Determines whether the instruction is a BX instruction vs B or BL instructions (R = 0 means that it is a BX instruction, while R = 1 means that it is either a B or a BL instruction)
$R_b$	[3:0]	Address of the register containing the address to branch to



Figure 13: B instruction type format for B and BL instruction

Field List (B or BL)		
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
R	25	Determines whether the instruction is a BX instruction vs B or BL instructions (R = 0 means that it is a BX instruction, while R = 1 means that it is either a B or a BL instruction)
L	24	Determines whether the instruction is a B instruction vs a BL instruction (L = 0 means that it is a B instruction, while L = 1 means that it is a BL instruction)
offset	[23:0]	Relative address of the label to branch to

Instructions take the following form:

---

(mnemonic) - (instruction suffix) ([label](#))

---

where in each parentheses:

- mnemonic - the type of instruction (e.g. add, sub, etc.)
- instruction suffix - the instruction suffix that details the condition that the instruction is executed under
- label - the label or register containing program counter value to branch to

Instructions	
Field	Description
bx	Branches to an address specified by a register
b	Branch to a label
bl	Branch and link

#### 2.4.2 bx

Branch and exchange is a branching instruction that branches to an address stored in a register. It is commonly used to return from a procedure using the link register (r14).

---

```
// Return from procedure  
bx lr
```

---

Some things to note:

- This is an absolute branching instruction that branches to the address stored in the register. This means that it just loads the address into the program counter directly.

#### 2.4.3 b

The general relative branch instruction branches to an address stored in a label. For conditional branching, NCZV flags must be set by a previous instruction.

---

```
// go to label  
b label  
// go to label if registers r1 and r2 are equal  
subs r0, r1, r2  
beq label
```

---

#### 2.4.4 bl

The branch and link instruction stores the address of the next instruction before branching to a label.

---

```
// go to label and save the location of the instruction
// after the label
bl label
```

---

#### 2.4.5 Important Notes for B-type Instructions

- B and BL instructions contain a signed 2's complement 24 bit offset.

### 2.5 Important Notes

- Labels must be alone on its own line. In other words, this is allowed:

---

```
label:
    addx-al r1, r2, r3
```

---

But this is not:

---

```
label: addx-al r1, r2, r3
```

---

- Labels don't have a specific syntax defined. As long as the label is before a ':', it is a valid label. Using multiple colons for a label will cause some undefined behavior.
- Negative shift amounts are undefined for instructions that involve shifting
- **All RX-type instructions operate on 16-bit fixed point 2's complement numbers. Likewise, all RF instructions operate on 16-bit floating point numbers. Using an instruction on an incompatible number will yield unexpected results.**
- The only registers that should have unsigned integers should be PC and LR.

## 3 Assembler

The assembler is implemented as a two-pass assembler in Python. In the first pass, labels are assigned location counter (LC) values to represent where they will be stored in instruction memory. For an instruction memory of  $2^{16}$  addresses, 16 bits are used to represent the addresses. These values are stored in a symbol table implemented as a hash table. In the second pass, all instructions are put into their machine code counterpart in the following format (similar to .bin files):

---

```
0x##: ## ## ## ##
```

---

The number before the colon is a hexadecimal representation of the LC value, and the numbers after it are the hexadecimal representation of the instruction encoding. A binary version of this is also produced. Consider the following example instruction:

---

```
addx-al r0, #9
```

---

A few things to note about the assembler:

- Multiple labels of the same have undefined behavior. Since the symbol table was implemented as a Python dictionary, the most recent definition of the label will probably be what defines the label.
- There is nothing to check for invalid syntax. The programmer takes responsibility for making sure everything is correct.
- No bounds checking exists in the assembler.

## 4 Architecture Design


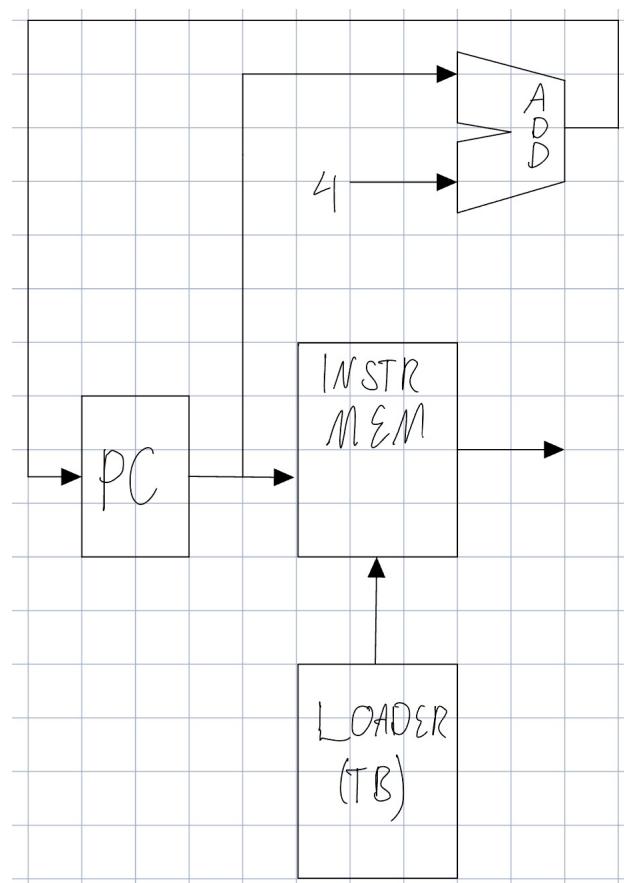


Figure 14: Main datapath for the armish Processor

## 4.1 Program Execution Control

The hardware needs to know when to load the program into instruction memory and when to execute the program. To do this, a simple Moore FSM was used to design the top-level control flow on when to load the instructions and when to execute the program.

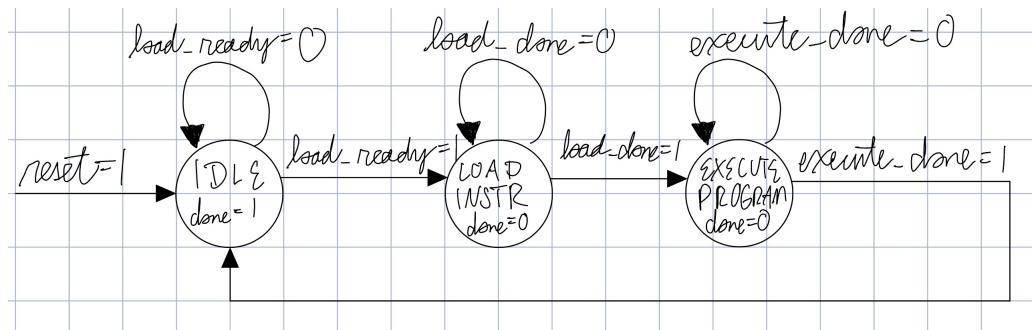

## 4.2 Program Counter Adder

The program counter adder calculates the next value of the program counter, a register that keeps track of the address of the next instruction.


### 4.2.1 Design

#### Design Specification

- Purpose and Scope
  - The program counter adder is an adder that calculates the next value of the program counter, a register that keeps track of the address of the current instruction.
  - The adder should produce a new address that will be a possible value for the program counter.
- Functional Requirements
  - Add two 16-bit 2's complement numbers and outputs a positive 2's complement number representing the next value of PC.
  - While the inputs are two 2's complement numbers, the output should always be positive, as addresses can never be negative.
- Interface Specification
  - Inputs
    - \* PC : 16-bit 2's complement number that represents the current address of the program
    - \* offset: 16-bit 2's complement number that represents how much to add to PC
  - Outputs
    - \* PC\_next: 16-bit 2's complement number that represents the next address of the program

#### Implementation

The PC adder is a simpler adder.

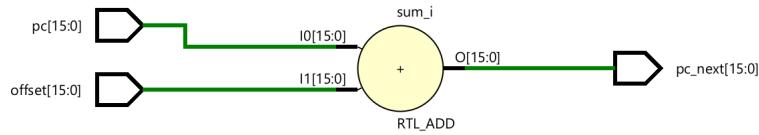

#### 4.2.2 Verification

##### Test Plan

Program Counter Adder Test Plan		
#	Title	Description
1	Core Features	Perform addition of two 2's complement numbers for the following combinations: - Positive number (address) with positive number (offset) - Positive number (address) with negative number (negative number should not be larger than the positive number) (offset)
1.1	Addition	

##### Tests

The following tests were performed on the adder, and were successfully completed:

- Addition of a positive offset (ranging from 0 to 512) onto a 0 address.
- Addition of a positive offset (ranging from 0 to 1024) onto a positive address (512 in this case)
- Addition of a negative offset (ranging from 0 to -512) on a positive address (512 in this case)



Figure 15: Example waveform output for the pc adder

## 4.3 Instruction Memory

The instruction memory is a memory that holds the program instructions.

### 4.3.1 Design

#### Design Specification

- Purpose and Scope
  - The instruction memory is a memory that holds the program instructions.
  - A central location to store and output instructions is necessary for an organized execution of instructions.
- Functional Requirements
  - Instruction memory is composed of 1024 possible memory locations, each location holding 32-bit instructions.
  - When a write signal is asserted, the instruction memory should be loading instructions from a testbench.
  - When a write signal is deasserted, the instruction memory should be outputting instructions from an address given to it.
  - To be synthesizable, the instruction memory must be able to load instructions from an outside source (test bench)
- Interface Specification
  - Inputs
    - \* r\_address: the address of instruction memory to read from; determines what instruction is outputted (read mode)
    - \* w\_instruction: the instruction to be written into instruction memory (write mode)
    - \* w\_address: the address to be written into instruction memory (write mode)
    - \* w\_e: signal determining whether the instruction memory is in read mode or write mode
  - Outputs
    - \* instruction: the instruction to be outputted from instruction memory

## Implementation

The instruction memory has a memory size of 1024 32-bit words. The instruction memory loads instructions serially. When a `w_e` is asserted, it will store an inputted instruction at a given address every clock cycle until all words are loaded (load completion is determined by the testbench). After loading, instructions can be accessed by inputting a read address into the instruction memory. Because the instructions are byte addressable, the instruction memory also takes this into account when outputting the instruction.

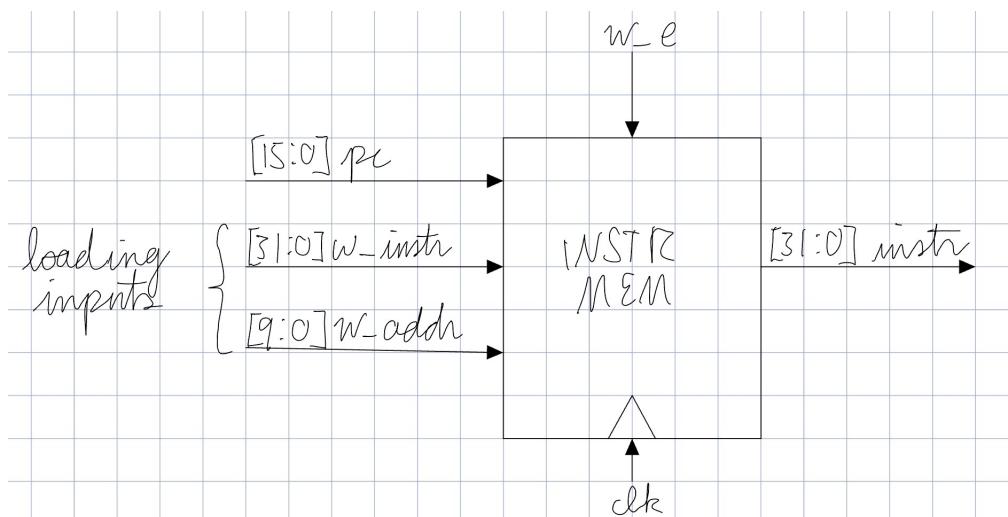


Figure 16: Rough sketch of instruction memory.

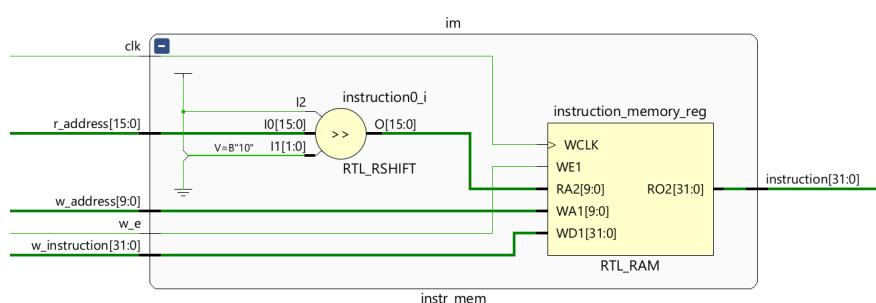


Figure 17: RTL model of instruction mem.

### 4.3.2 Verification

#### Test Plan

Immediate Decoder Test Plan		
#	Title	Description
1	Core Features	
1.1	Accurate Immediate Decoding	Valid immediates should be able to be accurately decoded for the entire range specified

#### Tests

To test these features, it is necessary to have a way for the testbench to communicate with the instruction memory when it is finished writing to it. To do this, 3 tasks were written. The first task reads memory from the machine code file into a memory located in the testbench. The second task counts the number of lines in the machine code file, so the processor knows when loading is completed. The third task loads an instruction into instruction memory every clock cycle. To test the functionality of the instruction memory, a program of 6 instructions was loaded into the instruction memory, and read in different ways.

---

```
00011100000100000001111001110001
00011100000100000010000001100011
00011100000100000010000001100001011001
00011100000100010100000000000010
00011100000101000100111000011011
00011100000101000101000000000010
```

---

All 6 instructions were loaded into the instruction memory, and then were read sequentially, instructions at even addresses, and then instructions ad odd addresses.

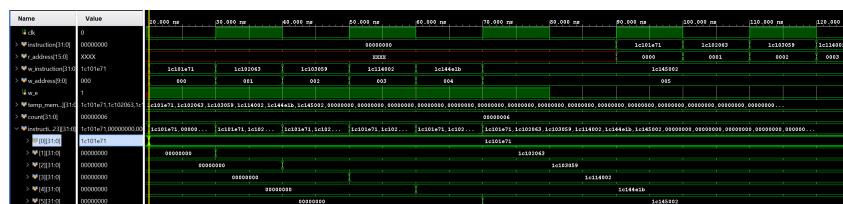


Figure 18: Waveform view of the instruction memory being loaded by instructions specified by `w_instruction` at address `w_address`.

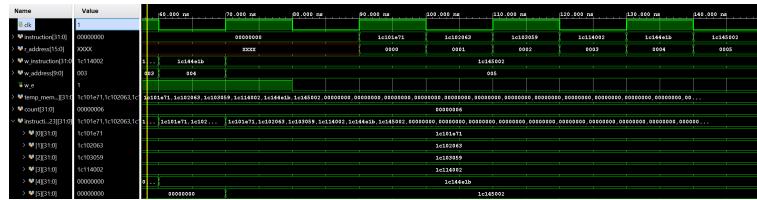


Figure 19: Instructions being read out at addresses specified by r\_address.

## 4.4 Main Register File

A register file is a set of registers that can be quickly accessed to store data.

### 4.4.1 Design

There are a total of 16 16-bit registers in the main register file, including link register, program counter, and zero/discard register. 16-bit registers were chosen, due to the goal of designing a processor that performs floating point operations, which are too complex to be done in 1 clock cycle for 32-bit operands. 16-bit operands can get very close to IEEE-754 compliance. The remaining 12 registers are general-purpose.

Main Register File	
Register	Purpose
r0	Zero Register/Discard Register
r1-r13	General Purpose
r14	Link Register
r15	Program Counter (PC)

### Design Specification

- Purpose and Scope
  - A central place to store intermediate values is needed to ensure timely calculations.
  - The main register file mainly stores data from fixed point operations. Floating point operations are handled in a separate register file.
  - Same cycle read/write is not covered for now, but will be covered in the pipelining section.
  - It is assumed that an instruction will never use both of its write ports to write to the same register.
- Functional Requirements
  - The register file outputs values when requested (read mode).
    - \* It should be able to read from 3 registers concurrently to satisfy the needs of the instruction set.
  - The register file stores values when requested (write mode).
    - \* The register file should be able to overwrite registers.

- \* It should be able to write to 2 registers concurrently to satisfy the needs of the instruction set.
- The register file should be capable of storing 16 16-bit values for all instructions specified by the ISA.
  - \* For ALU outputs that require more than 16 bits, the outputs should be stored in multiple registers in a known order.
  - \* r0 should always hold value 0, even when written to.
- Interface Specification
  - Inputs
    - \* r\_reg1: Register to read specified by the 2nd operand of the instruction ( $R_n$ )
    - \* r\_reg2: Register to read specified by the 3rd operand of the instruction ( $R_m$ )
    - \* r\_reg3: Register to read specified by the 4th operand of the instruction ( $R_s$ , often optional)
    - \* w\_data1: Data to write to register specified by 1st operand of the instruction
    - \* w\_data2: Data to write to register specified by w\_reg2 (often optional)
    - \* w\_reg1: Register to write to specified by 1st operand of the instruction ( $R_{d1}$ )
    - \* w\_reg2: Register to write to specified by 4th operand of the instruction (often optional) ( $R_{d2}$ )
    - \* reg\_write1: Signal to allow for writing to the register file through the first write port
    - \* reg\_write2: Signal to allow for writing to the register file through the second write port
    - \* reset: Synchronous reset, sets all registers to 16'b0
    - \* clk: clock
  - Outputs
    - \* r\_data1: Data stored in register specified by the 2nd operand of the instruction
    - \* r\_data2: Data stored in register specified by the 3rd operand of the instruction

## Implementation

The register file is modeled as a memory with depth 16, each register with width 16. At the positive edge of each clock cycle, it checks for a reset signal. If the reset signal is high, then all the registers in the register file are set to 0. In absence of a reset signal, the register file checks its two reg\_write signals to decide whether it needs to write data to the register file. If either signal is high, data will be written to the register corresponding to the reg\_write signal that is high. If two writes are done at the same time, and if they are writing to the same register, the data specified by w\_reg1 will be prioritized. Data is read by requesting data for the registers specified by r\_reg1 and r\_reg2. The read is asynchronous, in that it will update combinationaly if a write is performed on a register being read.

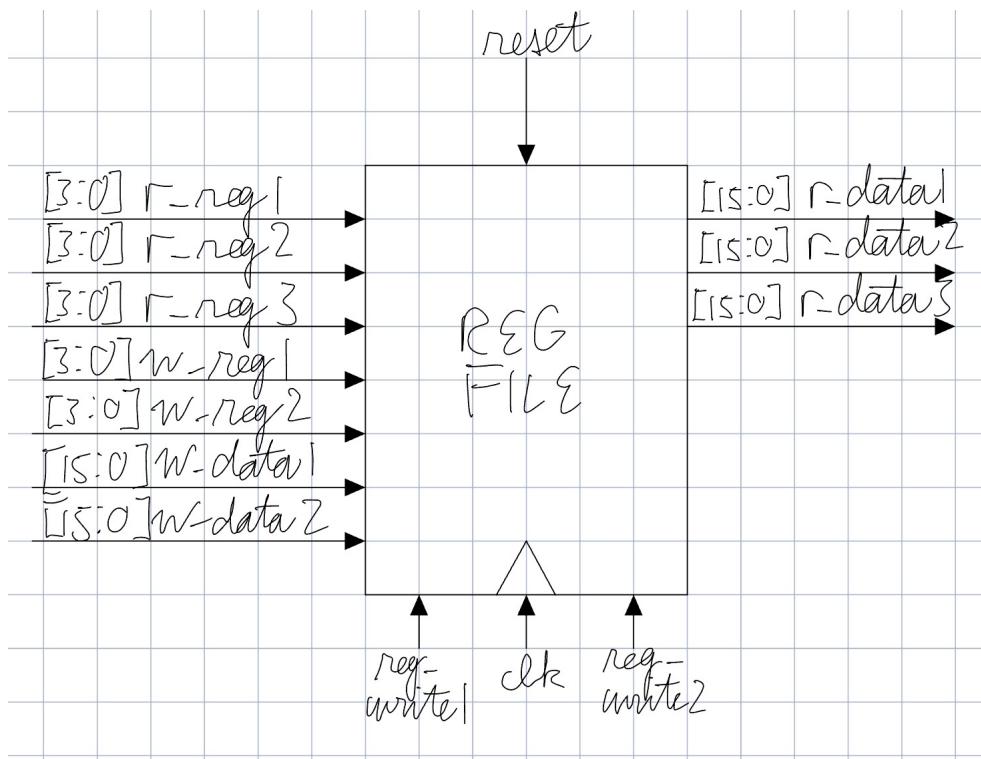


Figure 20: Rough sketch of the register file.

#### 4.4.2 Verification

##### Test Plan

Register File Test Plan		
#	Title	Description
1	Core Features	
1.1	Reset	Reset should set all registers in the register file to 0
1.2	Read/Write Functionality	When the write signal is asserted, the register file should store values, regardless of the instruction given. When data is requested, it should output the data given the register
1.2.1	Separate Cycle Write/Read (Same Register)	Be able to write a value to a register in one cycle and then read it in the next
1.2.2	Separate Cycle Write/Read (Different Registers)	Be able to write a value to a register in one cycle and then read it in the next
1.2.3	r0 Constant	r0 should remain constantly 0 even when written to
1.2.4	Overwriting	Registers should be able to be overwritten (with the exception of r0)
1.2.5	Multi-Operand Function	Multiple registers should be able to be read and overwritten in the same clock cycle (MUL) or in different clock cycles
1.2.6	Unary Operations	When given a unary operation instruction (absx, notx), the 3rd operand position should output 0

##### Tests

A scoreboard was created to keep track of the expected values of the register file whenever it was written to or read from. It is also used to directly check with register file to see if what is read from the register file is what is expected. The tests were conducted to satisfy the test plan requirements like so:

- **1.1-** The reset signal was asserted and deasserted in 2 separate clock cycles. Iterating through the first 4 registers, it was checked that their values were 0.
- **1.2.1-** First, the two reg\_write signals were set to high. Then, data was written to the register file. After one clock cycle, data was read from the same register. This was done for both read and write ports.
- **1.2.2-** First, the two reg\_write signals were set to high. Then, data was written to the register file. After one clock cycle, data was read from a different register. This was done for both read and write ports.
- **1.2.3-** Both reg\_write signals were set to high. Then, w\_reg1 was set to 0 to write to register r0 through the first write port. Cycling through different write values, register r0 was checked. This was also done through the second write port.
- **1.2.4-** Both reg\_write signals were set to high. The register file was preloaded with values. Each register in the register file was then overwritten with different values through the first write port. After that, this was repeated through the second write port.

- **1.2.5-** Both reg\_write signals were asserted. Iterating through the first 8 registers, each write port was assigned some register number. When the register ports held the same value, it was tested that the first write port was prioritized to write to the register file. Otherwise, the registers specified by both write ports were written with the data corresponding to each write port.
- **1.2.6-** Both reg\_write signals were set to high. The register specified by r\_reg1 iterates over the register file while r\_reg2 is set to 0.

## 4.5 Immediate Decoder

### 4.5.1 Design

The ISA uses a modified version of how ARMv7 encodes immediates, which involves rotating an 8-bit immediate in a 16-bit bus to get the desired immediate. Unlike ARMv7, which encodes immediates as an 8-bit value rotated right by an even number of bits (0, 2, 4, ...), this ISA allows an immediate to be shifted by any number from 0 to 15 bits. This gives full flexibility for forming 16-bit constants without the 2-bit rotation step limitation. From the instruction and before being sent to the ALU, immediates must be decoded from their 12-bit encoded value to their 16-bit true value.

#### Design Specification

- Purpose and Scope
  - The module is needed to convert an immediate encoded by an 8-bit immediate with a rotation to the intended 16-bit immediate that the ALU can manipulate.
  - Immediates are in the range of 0 to 32767
  - It is assumed that the immediate inputted is a valid immediate that can be encoded by the assembler
- Functional Requirements
  - The immediate decoder must take in an immediate and a rotation value, and output the immediate that it decodes to.
- Interface Specification
  - Inputs
    - \* imm8: 8-bit encoded immediate stored in instruction
    - \* rot: 4-bit value that tells how much to rotate imm8 by to get the decoded immediate
  - Outputs
    - \* imm: 16-bit decoded immediate

## Implementation

The implementation is a simple rotator on a 16-bit register.

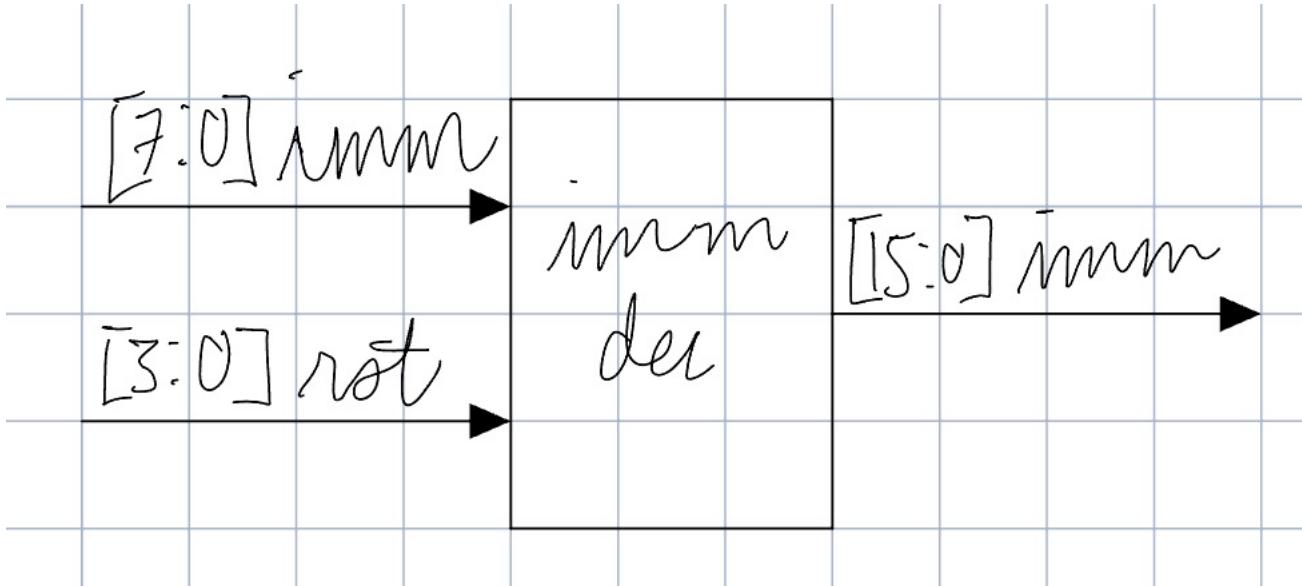


Figure 21: Rough sketch of the immediate decoder

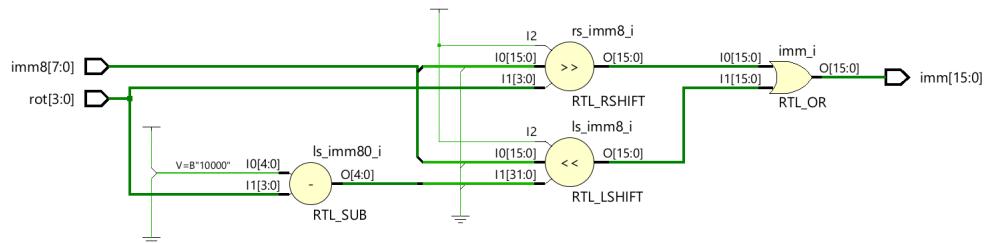


Figure 22: RTL model of the immediate decoder.

### 4.5.2 Verification

#### Test Plan

Immediate Decoder Test Plan		
#	Title	Description
1	Core Features	
1.1	Accurate Immediate Decoding	Valid immediates should be able to be accurately decoded for the entire range specified

## Tests

- **1.1-** All possible immediates with their corresponding rot and imm8 values were generated in Python to serve as test vectors. The rot and imm8 values were inputted into the module, and the output was compared with its expected input.

## 4.6 Shifter

A shifter is hardware module that takes in data, shifts the data in a certain way, and then outputs the shifted data. If R\_m is not an immediate, then the shifter provides more ways to manipulate data before it is sent to the ALU.

### 4.6.1 Design

#### Design Specification

- Purpose and Scope
  - Shifting allows for multiple instructions to be encoded in one, and is good for bit manipulation.
  - Having a separate shifter module simplifies the ALU, displacing the need for a 3rd register port and internal logic to support it.
- Functional Requirement
  - Given an input value, the shifter must either pass the value if the value originated from an immediate instruction or shift the value if the value and then pass the value if originated from a register
  - The amount a register value is shifted by is determined by an inputted shift type and the value recorded in R\_s (a register that stores the amount to shift the input value) or an immediate (shift amount)
- Interface Specification
  - Inputs
    - \* R\_m or imm: The value to be shifted by the shifter
    - \* shtype: The way that the shifter shifts R\_m/imm (ror, asr, lsr, ls)
    - \* r\_shift: Determines whether or not the value comes from an immediate or a register
    - \* R\_s or shampt: The amount to shift the R\_m/imm by
  - Outputs
    - \* shifted\_rm: R\_m/imm shifted by the shifted

#### Implementation

The shifter decides where its data sources come from. Given that the third operand of the instruction is an immediate, it will just pass the immediate along

without shifting it. If the third operand is a register, it will shift the register value in some way specified by the shtype input. The amount specified can either come from a register or an immediate, which is chosen by the r.shift bit of the instruction.

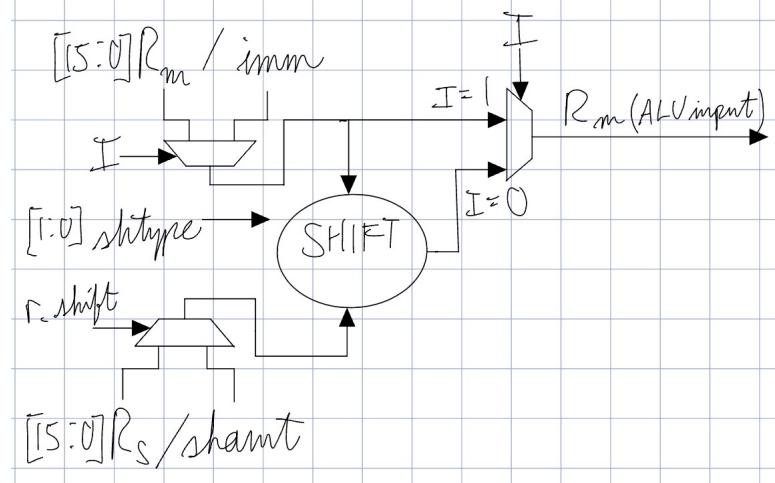


Figure 23: Sketch of shifter

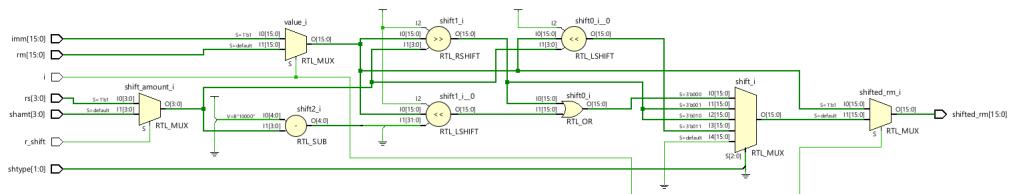


Figure 24: RTL model of the shifter.

## 4.6.2 Verification

### Test Plan

Shifter Test Plan		
#	Title	Description
1	Core Features	
1.1	ror	- ror shifts should shift input data that is expected for rotate right
1.1.1	Immediate Input	- given an immediate input, the immediate should just be passed on to the ALU
1.1.2	Register Input	- Given a register input, the value stored in the register should be rotated right according to a given value
1.1.2.1	Shift Register	- Given a register input, the value stored in the register should be rotated right according to a value given from a shift register
1.1.2.2	Shift Amount	- Given a register input, the value stored in the register should be rotated right according to a value given by an immediate
1.2	asr	- asr shifts should shift input data that is expected for arithmetic shift right
1.2.1	Immediate Input	- given an immediate input, the immediate should just be passed on to the ALU
1.2.2	Register Input	- Given a register input, the value stored in the register should be arithmetic shifted right according to a given value
1.2.2.1	Shift Register	- Given a register input, the value stored in the register should be arithmetic shifted right according to a value given from a shift register
1.2.2.2	Shift Amount	- Given a register input, the value stored in the register should be arithmetic shifted right according to a value given by an immediate
1.3	lsr	- lsr shifts should shift input data that is expected for logical shift right
1.3.1	Immediate Input	- given an immediate input, the immediate should just be passed on to the ALU
1.3.2	Register Input	- Given a register input, the value stored in the register should be logical shifted right according to a given value
1.3.2.1	Shift Register	- Given a register input, the value stored in the register should be logical shifted right according to a value given from a shift register
1.3.2.2	Shift Amount	- Given a register input, the value stored in the register should be logical shifted right according to a value given by an immediate
1.4	isl	- isl shifts should shift input data that is expected for logical shift left
1.4.1	Immediate Input	- given an immediate input, the immediate should just be passed on to the ALU
1.4.2	Register Input	- Given a register input, the value stored in the register should be logical shifted left according to a given value
1.4.2.1	Shift Register	- Given a register input, the value stored in the register should be logical shifted left according to a value given from a shift register
1.4.2.2	Shift Amount	- Given a register input, the value stored in the register should be logical shifted left according to a value given by an immediate

### Tests

Distinct sets of 16 values were used for R\_m, immediates, R\_s, and shamt. A scoreboard class was created to facilitate testing, having functions that verified functionality for immediate data input, register shift input, and immediate shift input. Taking in the shift type as input, the following 3 tests were applied for ROR, ASR, LSR, and LSL shifts.

- **1.X.1-** i is set to 1 (as expected for an immediate), and r\_shift is given alternating values to demonstrate that the values coming from shifting have no affect in immediate mode. Iterating from 0 to 15, new data was set into r\_m,

imm, r\_s, and shamt. The output of the shifter was then compared with the expected value given by the scoreboard.

- **1.X.2.1-** i is set to 0 (as expected for a register), and r\_shift is set to 1 (for a shift amount specified by a register). Iterating from 0 to 15, new data was set into r\_m, imm, r\_s, and shamt. The output of the shifter was then compared with the expected value given by the scoreboard.
- **1.X.2.2-** i is set to 0 (as expected for a register), and r\_shift is set to 0 (for a shift amount specified by an immediate). Iterating from 0 to 15, new data was set into r\_m, imm, r\_s, and shamt. The output of the shifter was then compared with the expected value given by the scoreboard.

## 4.7 ALU

### 4.7.1 Design

The ALU is in charge of performing various operations specified by the instruction. Given values from either registers or immediates, the ALU must output the appropriate value. Details on each instruction can be found in the ISA Design section, and the expected ALU inputs/outputs are discussed in the design specification.

#### Design Specification

- Purpose and Scope
  - A module is needed to process data from the registers, and output results to either data memory or back to the registers.
- Functional Requirements
  - The ALU should be able to perform all the operations necessary for all RX and D instructions in the ISA (see below for specifics on each instruction)
  - Branching instructions will be put into a separate unit.
- Interface Specification
  - Inputs
    - \* r\_data1: The first 16-bit data to be inputted into the ALU
    - \* r\_data2: The second 16-bit data to be inputted into the ALU
    - \* r\_data3: The third 16-bit data to be inputted into the ALU
    - \* s: Determines whether or not to set NZCV flags
    - \* Cin: Determines whether or not to put in a carry-in from the previous instruction.
    - \* opcode: Determines the operation to perform on the operands
  - Outputs
    - \* w\_data1: The first 16-bit data to be written back to the registers
    - \* w\_data2: The second 16-bit data to be written back to the registers
    - \* NZCV: NZCV flags after operation is performed

## ALU Function Specification

- RX-Type
  - addx
    - \* It should add 2 integer values specified by r\_data1 and r\_data2 and output the sum in w\_data1 with appropriate NZCV flags.
    - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
  - subx
    - \* It should subtract 2 integer values specified by r\_data1 and r\_data2 and output the difference in w\_data1 with appropriate NZCV flags.
    - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
  - mulx
    - \* It should multiply 2 integer values specified by r\_data1 and r\_data2, and store the product's upper 16 bits in a register specified by w\_data1 and the product's lower 16 bits specified by w\_data2.
    - \* The operation should never affect NZCV flags.
  - divx
    - \* It should divide an integer value specified by r\_data1 by an integer specified by r\_data2, and output the quotient to w\_data1 and the remainder to w\_data2.
    - \* The operation should never affect NZCV flags.
  - absx
    - \* It should take the absolute value of an integer specified by r\_data1, and output the absolute value to w\_data1.
    - \* The operation should never affect NZCV flags.
  - adcx
    - \* It should add 2 integer values specified by r\_data1 and r\_data2, and a carry-in value from a previous operation, and then output the sum in w\_data1 with appropriate NZCV flags.
    - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
  - sbcx

- \* It should subtract 2 integer values specified by r\_data1 and r\_data2, and a carry-in value from a previous operation, and then output the difference in w\_data1 with appropriate NZCV flags.
- \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
- cmpx
  - \* It should compare 2 integer values specified by r\_data1 and r\_data2 and set NZCV flags accordingly.
- notx
  - \* It should take the bitwise not of an integer specified by r\_data1, and output the absolute value to w\_data1.
  - \* The operation should never affect NZCV flags.
- andx
  - \* It should take the bitwise and of two values specified by r\_data1 and r\_data2, and output the result to w\_data1.
- orrx
  - \* It should take the bitwise or of two values specified by r\_data1 and r\_data2, and output the result to w\_data1.
- xorx
  - \* It should take the bitwise xor of two values specified by r\_data1 and r\_data2, and output the result to w\_data1.
- D-Type
  - ldw
    - \* It should calculate the address in memory using the base address specified by r\_data1, and adding an offset specified by r\_data2.
    - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
  - ldb2l
    - \* It should calculate the address in memory using the base address specified by r\_data1, and adding an offset specified by r\_data2.
    - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
  - ldb2h

- \* It should calculate the address in data memory using the base address specified by r\_data1, and adding an offset specified by r\_data2.
- \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
- stw
  - \* It should calculate the address in data memory using the base address specified by r\_data1, and adding an offset specified by r\_data2.
  - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
- stb2l
  - \* It should calculate the address in data memory using the base address specified by r\_data1, and adding an offset specified by r\_data2.
  - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.
- stb2h
  - \* It should calculate the address in data memory using the base address specified by r\_data1, and adding an offset specified by r\_data2.
  - \* For the case of shifting r\_data2, r\_data3 will determine the shift amount.

## Implementation

### 4.7.2 Verification

#### Test Plan

ALU Test Plan: RX Instructions		
#	Title	Description
1	Core Features: RX Functionality	
1.1	addx/subx	- Add two integers together and produce appropriate NZCV flags according to what is expected from 2's complement addition
1.1.1	Sum Output	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.1.2	C Flag	- Adding two integers should produce a carry out value that is expected for all inputs, and use that to set the C flag
1.1.3	V Flag	- Adding two integers should produce a carry out value that is expected for all inputs, and use that to set the V flag
1.1.3.1	V Flag: Adding Two Positives	- Adding two positive integers should produce a set V flag if the resulting sum is negative
1.1.3.2	V Flag: Adding Two Negatives	- Adding two negative integers should produce a set V flag if the resulting sum is positive
1.1.3.3	V Flag: Mixed Signs	- Adding two integers whose signs differ should not set the V flag
1.1.4	Z Flag	- If the sum of two integers is 0, it should set the Z flag
1.1.5	N Flag	- If the sum of two integers is negative, it should set the N flag
1.2	mulx/divx	- Multiplying two integers together should produce a product that is expected from the multiplication, where the upper 16 bits of the product are stored in w_data1, and the lower 16 bits of the product are stored in w_data2
1.2.1	Multiply/divide 2 positive numbers	
1.2.2	Multiply/divide 2 negative numbers	
1.2.3	Multiply/divide positive by negative number	
1.2.4	Multiply/divide negative by positive number	
1.3	absx	- Given any integer, it should take the absolute value of it, and store it into w_data1.
1.4	adcx/sbcx	- Add two integers together with carry flag from a previous instruction and produce appropriate NZCV flags according to what is expected from 2's complement addition.
1.4.1	Sum Output	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.4.2	C Flag	- Adding two integers should produce a carry out value that is expected for all inputs, and use that to set the C flag
1.4.3	V Flag	- Adding two integers should produce a carry out value that is expected for all inputs, and use that to set the V flag
1.4.3.1	V Flag: Adding Two Positives	- Adding two positive integers should produce a set V flag if the resulting sum is negative
1.4.3.2	V Flag: Adding Two Negatives	- Adding two negative integers should produce a set V flag if the resulting sum is positive
1.4.3.3	V Flag: Mixed Signs	- Adding two integers whose signs differ should not set the V flag
1.4.4	Z Flag	- If the sum of two integers is 0, it should set the Z flag
1.4.5	N Flag	- If the sum of two integers is negative, it should set the N flag
1.5	cmpx	- Comparing any two integers (subtract without storing result), should set the appropriate NZCV flags
1.6	notx	- Taking the bitwise not of any integer should produce the expected output
1.7	andx	- Taking the bitwise and of any two sets of 16-bit data should produce the expected output
	orrx	- Taking the bitwise or of any two sets of 16-bit data should produce the expected output
	xorx	- Taking the bitwise xor of any two sets of 16-bit data should produce the expected output

ALU Test Plan: D Instructions		
#	Title	Description
1	Core Features: D Functionality	
1.1	ldw	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.2	ldb2h	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.3	ldb2l	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.4	stw	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.5	stb2h	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1
1.6	stb2l	- Adding two integers should output the expected sum as a [15:0] value, and store the sum in w_data1

## Tests

A scoreboard was used to check the functionality of every opcode input into the ALU.

- **1.1.1-1.1.5-** For each of these tests, Cin was set to 0, and s was set to 1. When conducting an addx test, the opcode was set to ADDX, and when conducting a subx test, the opcode was set to SUBX. 12 datasets of 16 integers were used to thoroughly verify the sums, differences, and NZCV flags of addx and subx operations. The datasets had characteristics that include:
  - Addition and subtraction where operands have every combination of signs.
  - Addition and subtraction result in both signed and unsigned overflow in both negative and positive directions.
  - Addition and subtraction result in 0.
- **1.2.1-1.2.4-** For each of these tests, Cin was set to 0, and s was set to 0. When conducting an mulx test, the opcode was set to MULX, and when conducting a divx test, the opcode was set to DIVX. 2 datasets of 20 values were used. For the first dataset, the first 16 values are 0-15, and the last 4 are very large values for a 16-bit signed integer. The second dataset is the negative version of the first dataset. Every combination of inputs was verified for multiplication and division.
- **1.3-** For these tests, Cin was set to 0, and s was set to 0. The opcode was set to ABSX. A dataset from -8 to 7 was used to verify the output of abx.

- **1.4.1-1.4.5-** For each of these tests, Cin was set to 1, and s was set to 1. When conducting an addx test, the opcode was set to ADDX, and when conducting a subx test, the opcode was set to SUBX. 12 datasets of 16 integers were used to thoroughly verify the sums, differences, and NZCV flags of addx and subx operations. The datasets and conditions used were the same as the ones for 1.1.1-1.1.5.
- **1.5-** For these tests, Cin was set to 0, and s was set to 0. The opcode was set to CMPX. Two datasets were used to verify cmpx. One dataset had values from -8 to 7, and the other had values from 8 to -7.
- **1.6-** For these tests, Cin was set to 0, and s was set to 0. The opcode was set to NOTX. The dataset used to verify notx was the same one as absx.
- **1.7-** For these tests, Cin was set to 0, and s was set to 0. The opcode was set to notx. The opcode was set to ANDX, ORRX, or XORX depending on the test being conducted. Two datasets of small positive and negative numbers were used to verify the 3 operations.

## 4.8 op2 Decoder

### 4.8.1 Design

#### Design Specification

- Purpose and Scope
  - It is an organizational unit that connects immediate decoders, shifter, and ALU.
  - It is needed to make the design more modular, and to decrease the length of the execution stage, when this processor is pipelined.
- Functional Requirements
  - The decoder should connect several of the aforementioned in the previous bullet point together.
  - The decoder should take in bits from the instruction that detail immediate encoding, register encoding, etc. to produce the final operand value that the ALU will operate on.
- Interface Specification
  - Inputs
    - \* [7:0] imm\_m: Second operand input into the ALU if it is an immediate
    - \* [3:0] rot\_m: Rotation to apply to the second operand input if it was an immediate
    - \* [15:0] rm: Second operand input into the ALU
    - \* i: Bit determining if the second operand input is an immediate
    - \* [1:0] shtype: Bits determining the shift type (ROR, ASR, LSR, LSL)
    - \* r\_shift: Bit determining if the rotation applied to the second operand originates from a register or an immediate
    - \* [7:0] imm\_s: Shift applied to the register
    - \* [3:0] rot\_s: Rotation applied to the shift applied to the register
  - Outputs
    - \* rm\_dec: Decoded version of the second operand

## Implementation

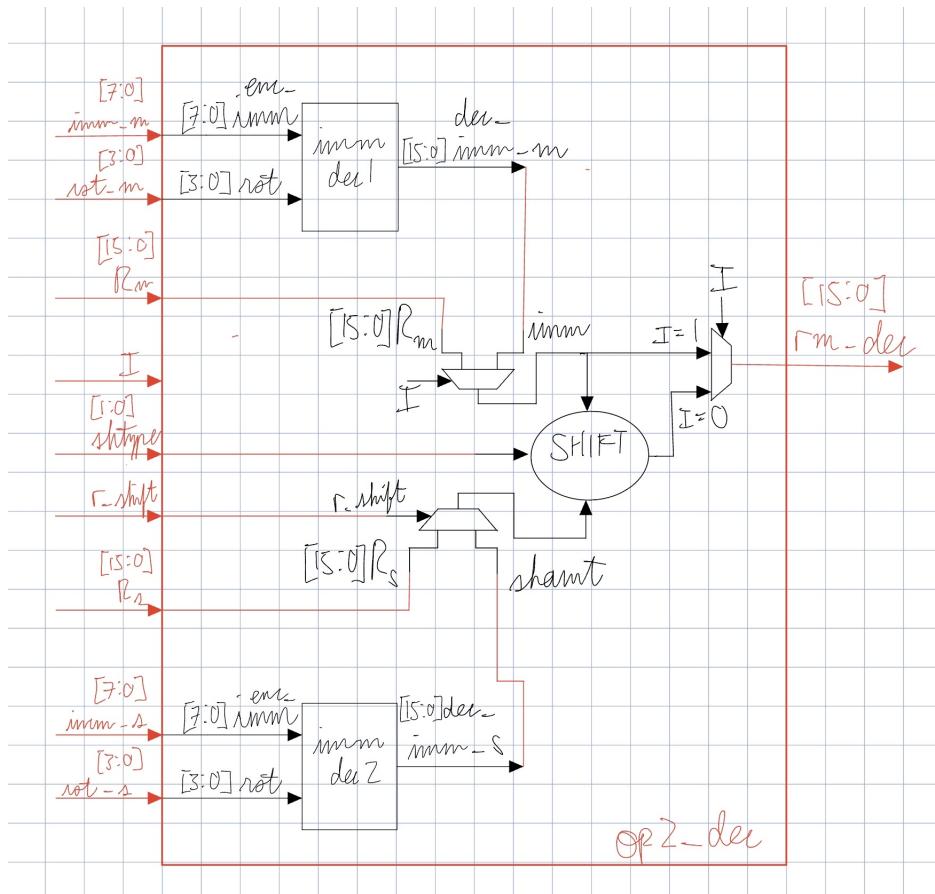


Figure 25: Sketch of op2 decoder

## 4.8.2 Verification

### Test Plan

op2 Decoder Test Plan		
#	Title	Description
1	Core Features	
1.1	Rm Immediate Function	When given an instruction like addx-al r1, r0, #4, the op2 decoder should decode immediates as expected of the given immediate encoding, and then output it without further modification
1.2	Rm Register Function	
1.2.1	Rm Register - No modification	When given an instruction like addx-al r1, r0, r3 the op2 decoder should output the original value contained in Rm without modification
1.2.2	Rm Register - Shift by Immediate	When given an instruction like addx-al r1, r0, r3, lsl #4 the op2 decoder should output a shifted version (shifted according to the lsl argument) of the original value contained in Rm
1.2.2.1	Shift: ROR	Test I/O for instructions like addx-al r1, r0, r3, ror #4
1.2.2.2	Shift: ASR	Test I/O for instructions like addx-al r1, r0, r3, asr #5
1.2.2.3	Shift: LSR	Test I/O for instructions like addx-al r1, r0, r3, lsr #6
1.2.2.4	Shift: LSL	Test I/O for instructions like addx-al r1, r0, r3, lsl #7
1.2.3	Rm Register - Shift by Rs	When given an instruction like addx-al r1, r0, r3, lsl r9 the op2 decoder should output a shifted version (shifted according to the lsl argument) of the original value contained in Rm
1.2.3.1	Shift: ROR	Test I/O for instructions like addx-al r1, r0, r3, ror r5
1.2.3.2	Shift: ASR	Test I/O for instructions like addx-al r1, r0, r3, asr r6
1.2.3.3	Shift: LSR	Test I/O for instructions like addx-al r1, r0, r3, lsr r7
1.2.3.4	Shift: LSL	Test I/O for instructions like addx-al r1, r0, r3, lsl r8

### Tests

## 4.9 ALU Top

### 4.9.1 Design

To separate ALU function from choosing the appropriate opcode, a top module was created to simplify the interface between the ALU with the rest of the processor.

### Design Specification

- Purpose and Scope
  - The module is needed to simplify the interface between the ALU and the rest of the processor.
  - It should implement something to identify what kind of instruction is being inputted into the ALU, and choose the opcode accordingly.
- Functional Requirements
  - The module should take in inputs originating from the instruction and output processed data from the ALU.
- Interface Specification

- Inputs
  - \* [15:0] rn: First operand input into the ALU
  - \* [15:0] dec\_rm: Second operand input into the ALU (after being decoded by op2 decoder)
  - \* s: Bit determining if the nzcv flags are set after the operation
  - \* Cin: Carry-in bit from a previous operation
  - \* en: Enables the ALU
  - \* [1:0] instr\_class: Bits determining if the originating instruction is RX, RF, D, or B
  - \* [3:0] opcode: Bits detailing what operation to perform in the ALU
- Outputs
  - \* [15:0] w\_data1: First output data from ALU operation
  - \* [15:0] w\_data2: Second output data from ALU operation
  - \* [3:0] NZCV: Negative, Zero, Carry, and Overflow flags set after an operation

## Implementation

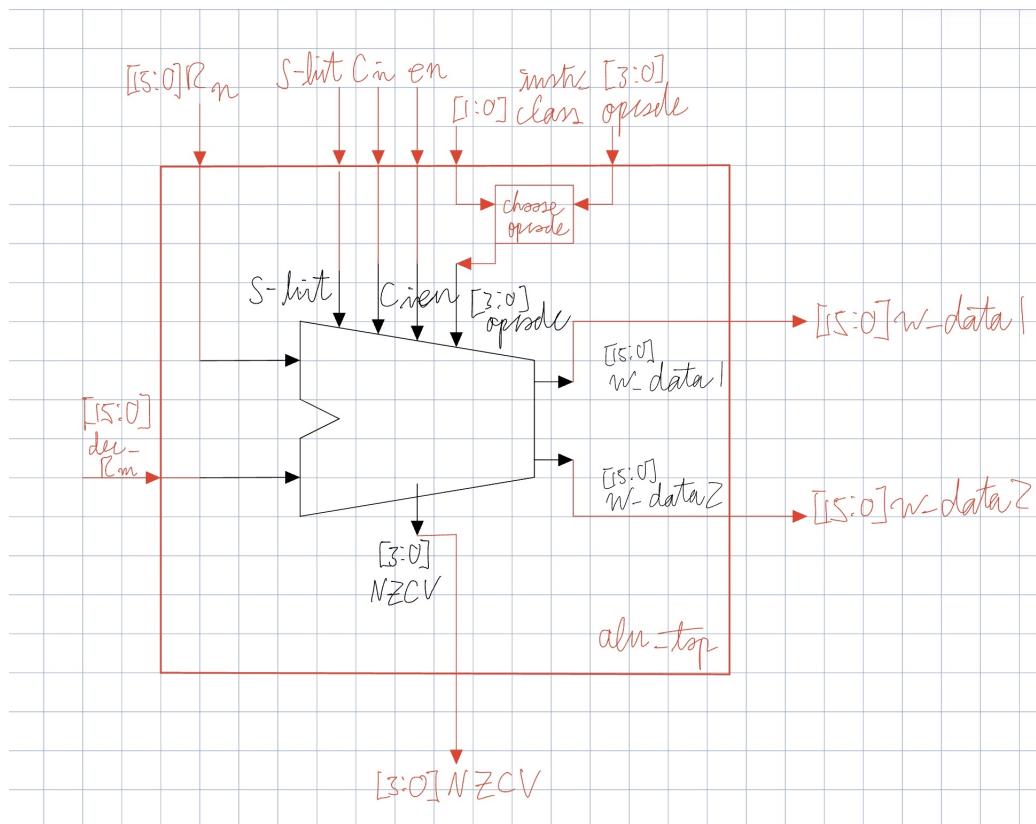


Figure 26: Sketch of ALU top module

### 4.9.2 Verification

#### Test Plan

##### Tests

### 4.10 Branching Unit

### 4.11 Data Memory

#### 4.11.1 Design

Data memory is composed of 256 possible locations, each location holding 8 bits.

**4.11.2 Verification**

**4.11.3 Design**

**4.11.4 Verification**

**4.12 FPU**

**4.12.1 Design**

**4.12.2 Verification**

**4.13 Pipelining and Hazard Control**

**4.13.1 Design**

**4.13.2 Verification**

**4.14 Branch Prediction**

**4.14.1 Design**

**4.14.2 Verification**

**5 Performance**