RUPRECHT-KARLS-UNIVERSITÄT HEIDELBERG



Arthur Heimbrecht

Bachelor Thesis

KIRCHHOFF-INSTITUT FÜR PHYSIK

Department of Physics and Astronomy University of Heidelberg

Bachelor Thesis

in Physics submitted by

Arthur Heimbrecht

born in Speyer

Bachelor Thesis

This Bachelor Thesis has been carried out by Arthur Heimbrecht at the

KIRCHHOFF INSTITUTE FOR PHYSICS
RUPRECHT-KARLS-UNIVERSITÄT HEIDELBERG
under the supervision of
Prof. Dr. Karlheinz Meier

Bachelor Thesis

As part of the Human Brain Project, BrainScaleS System is a unique project on many levels. This includes a processor solely used by the HICANN-DLS, which manages synaptic weights for every neuron built into one of the many wafers through a special I/O bus. To accelerate the speed at which this so called plasticity processor unit or "nux" computes all synaptic weights of every neuron used, the processor has an extended instruction set architecture that supports vector registers and single input multiple data.

This report deals with the task of adding built-in functions to an existing back-end of GCC, specifically the one already used by nux, in order to extend the already implemented set of functions according to the user's needs.

Contents

1	Intro	oduction	1
2	Fund sign	damentals and Applications of Computer Architectures and Compiler De-	4
	2.1		4
		1	
	2.2	Processor Architectures and the Plasticity Processing Unit	6
	2.3	Basic Compiler Structure	14
		2.3.1 Back-End and Code Generation	17
		2.3.2 Assembly Basics	19
		2.3.3 Intrinsics	19
		2.3.4 GNU Compiler Collection	20
		Register Transfer Language Basics	21
3	Exte	ending the GCC Back-End	24
	3.1	Adding Option Flag and nux Target	25
	3.2	Creating Macros	29
	3.3	Registers	32
	3.4	Prologue and Epilogue	38
	3.5	Reload	39
	3.6	Built-ins and Machine Instructions	39
4	Resi	ults and Applications	45
5	Disc	cussion and Outlook	47
J	טואנ	ussion and Outlook	41
Αţ	pend	lix	50
Bi	bliogi	raphy	58

1 Introduction

As neuromorphic computing regularly becomes a popular scientific topic, various applications for such systems emerge and make use of advantages that analogue hardware has over traditional computers. In order to do this, one must get familiar with the system that is used as it often differs in many ways from common computer architectures. Thus programing for such systems can feel odd at times as users need to abandon some familiar techniques and acquire new skills instead. This is a hurdle for many users when developing new experiments and initially takes a significant amount of time.

paper on current neuromorphic computing

An example of this is the current way of programming for the plasticity processing unit of the HICANN-DLS. The HICANN-DLS is a small scale system that features analogue emulation of neurons and synapses in networks. The PPU, as part of HICANN-DLS, can be used for implementing plasticity rules for such networks. It resembles a resembles processor architecture which was modified for this task. Implementing such plasticity rules differs from conventional programming styles. When creating code for the PPU, users are pretty much pushed back to the origins of computing; Instead of assigning values like d = a + b, one must first read the variables from memory, then operate on their values and finally write back the result to memory. Therefore coding for the PPU works on a low level which brings its own challenges to the user.

Ultimately the more a system abandons conventional elements of programming, which users are accustomed to, the more problems can emerge from this. Not only will fewer users take the initiative of writing for such systems but also can code get confusing, hard to debug and at worst even inefficient.

The main reason, users may feel reluctant to low-level programming, are the advantages of compilers.

Over decades compilers have been developed and became standard tool for programmers. At the same time compilers became more and more a black box that transforms a program into an executable file. For this reason it may be difficult for some users to abandon their convenience and go back to low-level programming.

Though the PPU is not completely without compiler support, its distinct features are only usable on a low level. As these features are necessary to implement plasticity rules on the HICANN-DLS this can easily cause inconveniences for users. Users repeatedly mix high-level and low-level programming which is an atypical style of programming. It can lead to different problems as users have to adapt to this and at worst this can even lead to ineffective programs. As performance is important for neuromorphic programming, users may need an unreasonable amount of time and work to achieve simple results with this.

The PPU does not have full compiler support because of its modified processor architecture, which was developed solely neuromorphic hardware. It can be classified as an application specific instruction set architecture which is an intermediate form between general purpose processors and application specific integrated circuits. It offers a partly customized instruction set that is optimized for its applications.

The HICANN-DLS already is an experimental platform for many users even though of PPU-related challenges. Applications like in-the-loop training or stimulated time dependent plasticity have been developed and mostly work around the PPU. Even when taking the effort of learning to code for the PPU, users are constantly challenged by missing capabilities of program code such as creating parameterized functions. This leads to repetitive code or difficulties when involving calibration into code.

Offering more tools for the PPU could increase the capabilities of programs while at the same time reducing the effort it takes to develop for the PPU. Besides allowing full high-level programming, compiler support could also offer tools like code optimization and debugging features. This work therefore aims to achieve compiler support of the PPU's hardware with as many features as possible. This could simplify programming for existing users, advertise the platform to new users and possibly accelerate performance of programs on the PPU. At some point compiler support may also facilitate automatic code generation as a prerequisite for implementation of very high-level languages. Users then could create plasticity rules in existing program environments from where code is translated into PPU programs. This creates the need for

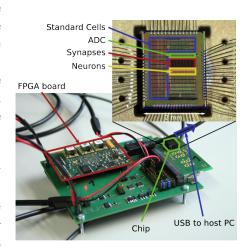


Figure 1.1: set-up of a HICANN-DLS test system

optimization of PPU code. Although this could be realized on its own, it is far easier and likely more efficient to utilize existing optimization techniques that are built into virtually every compiler.

This thesis will focus on achieving aforementioned compiler support and briefly explain the process itself. As fundamental knowledge of both processors and compilers is needed along the way the second chapter will start with a very basic introduction to both topics and go into detail for the processor and compiler that were used in this thesis. This may not render additional literature obsolete but should explain the basic concepts to an extend which is sufficient. Afterwards the process of extending the compiler is explained into some detail and the result as well as first test cases are presented. The thesis will conclude in a resume and give an outlook to future applications and development of the compiler and the PPU.

Ultimately we want to simplify PPU programming overall and give users tools at hand

that allow for many interesting experiments and encourage further development of the whole system.

other systems

2 Fundamentals and Applications of Computer Architectures and Compiler Design

2.1 Hardware Implementation of Neural Networks

As this thesis mainly focuses on a processor that is an essential part of the **HICANN-DLS** (High Input Count Analogue Neural Network-Digital Learning System) we will first talk about the HICANN-DLS as a whole and then look into the **PPU** (Plasticity Processing Unit) in detail while also addressing processor architecture in general.

The HICANN-DLS was built to emulate neural networks at high speeds with low power consumption.

On a very abstract level neurons in the brain resemble nodes in a network. Neurons are interconnected through dendrites, synapses and axons which can be of different coupling strength. In contrast to many other systems we use neuron model that is **spike based**. This means that a neuron is activated only for a short continuous time, called a spike, and sends out this spike through its axon to neurons that are connected via synapses. Between those spikes the neuron is resting and not sending any signals. Synapses can work quite differently but have in common that there is a certain weight associated to them, which we will call synaptic weight. This is equal to a gain with which the pre-synaptic signal is either amplified or attenuated. The signal is then passed through the dendrite of the post-synaptic neuron to the soma where all incoming signals are integrated. If the integrated signals reach a certain threshold the neuron spikes and sends this signal to other neurons (Silbernagl and Despopoulos, 2009).

bild synaptic array

Figure 2.1: structure of the synaptic array

The HICANN-DLS system implements a simplified neural network model in analogue electronics in order to emulate neuronal networks in a biologically plausible parameter range.

At its core it has a so called **synaptic array** that connects 32 neurons which are located on a single chip to 32 different pre-synaptic inputs. Pre-synaptic inputs are arranged along one side of the chip which is orthogonal to the arrangement of the neurons. They enclose a 2D field which will be our synaptic array as it mainly consists of synapse circuits. All neurons reach into the array through conductors that are organized in columns. The

pre-synaptic inputs respectively have conductors that resemble rows in the array. At each intersection of of those conducting lines, a synapse is placed that thereby connects a neuron and a pre-synaptic input. Overall this gives 1024 synapses that interconnect every neuron and every synapse.

A field programmable gate array (FPGA) is connected to all pre-synaptic inputs and feeds external spikes into the ship which can either be computed by the FPGA or routed spikes from another ship. Along an input row the signal of one pre-synaptic input reaches all synapses that connected and is processed individually. Each synapse holds a 6-bit wide **synaptic weight** and an internal decoder address, which both can be changed from outside.

The FPGA sends a 6-bit address whenever it sends a spike to a pre-synaptic input which then is compared by each synapse to the addresses they hold themselves. In case the addresses match, each synapse multiplies an output signal with the weight it stores and sends the result along a column where is reaches a neuron. All signals that are sent, are collected along a column and reach the neuron. Inside the neurons the resulting current input is evaluated in regard to a threshold and other parameters which decide on whether the neuron is spiking or not. If the neuron is spiking it sends an output signal to the FPGA which is responsible for spike routing in the first place. All of this is done continuously and may not follow discrete time steps. Along each column sits a **correlation ADC** (CADC) that converts the signal one neuron receives into digital data for analysis but can also be accessed by the PPU similar to the synaptic array.

The HICANN-DLS is also equipped with a processing unit that includes a vector extension and some memory for it to operate on. This is the plasticity processing unit (PPU) which is also connected to the synapse array for it to read and write synaptic weights.

The will use the following naming convention throughout this thesis:

Plasticity Processing Unit PPU is the processor which is part of HICANN-DLS and mainly responsible for plasticity of synapses.

nux refers to the complete architecture of the PPU together with its vector extension.

s2pp is short for synaptic plasticity processor but we will use this as name of the vector extension.

Synapses in the synapse array are realized as small repetitive circuits that contain 8 bits of accessible information each although only 6 bits are used as weights and the spare two upper bits are used for calibration. The synapse array can also be used in 16-bit mode for higher accuracy that combines the weights of two synapses to a 12-bit weight.

figure synapse

Digital configuration of the synapses and writing PPU programs to the memory is handled by an FPGA that has access to every interface of a HICANN-DLS chip.

It was developed to handle plasticity and as such applies different plasticity rules to synapses during or in between experiments. This is done much faster by the PPU than by the FPGA which is important for achieving experimental speeds that are 10^3 times faster

than their biological counterparts. In general the PPU is meant to handle plasticity of the synapses during experiments while the FPGA should be used to initially set up an experiment, manage spike input and record data

2.2 Processor Architectures and the Plasticity Processing Unit

Although the main goal of this project is to provide an alternative analogue architecture like the HICANN-DLS does, there are advantages to classic computing which are needed for some applications and almost all contemporary processors are built using the so called von-Neumann architecture .

The main advantage of digital systems over analogue systems, such as the human brain, is the ability to do numeric and logical operations at much higher speeds and precision as well as the availability of existing digital interfaces. For this reason "normal" processors are responsible for handling experiment data as well as configuration of an experiment in the HICANN-DLS. We will now shortly get in touch with basics of such processors and explain common terms while referring to the PPU at times when it is convenient.

The PPU, which was designed by (*Friedmann et al.*, 2016), is a custom processor, that is based on the Power Instruction Set Architecture (PowerISA), which was developed by IBM since 1990. Specifically the PPU uses POWER7 which was released in 2010 as a successor of the original POWER architecture and runs at 100 MHz clock frequency.

figure classic architecture

In general a microprocessor can be seen as a combination of two units which are an operational section and a control section. The control section is responsible for fetching instructions and operands, interpreting them, controlling their execution as well as reading and writing to the main memory or other buses. The operational section on the other hand saves operands and results only as long as they are needed and performs logic or arithmetic operation on these as instructed by the control section. Prominent parts of the operational section are the **arithmetic logic unit** (ALU) and the **register file** (RF).

The register file can be seen as short-term memory of the processor. It consists of several repeated elements, called **registers**, that save data and have share the same size which is determined by the architecture; the 32-bit architecture of nux for instance has 32-bit wide registers.

Typically the number and purpose of registers varies for different architectures. Common purposes of registers are:

general-purpose register GPR These registers can store values for various causes but in most cases are soon to be used by the ALU. Most registers on a processor are typically GPRs. Any register that is not a GPR is called a special purpose register SPR

add reference

link register LR This register marks the jump point of function calls. After a function completes, the program jumps to the address in the link register.

condition register CR This register's value is set by an instruction that compares one or two values in GPRs. Its value can be a condition for some instructions if they are to be executed or not.

The ALU uses values which are stored in the register file to perform the aforementioned logic or arithmetic operations and saves the results there as well.

Some architectures also have an accumulator that is often part of the ALU. Intermediate results can be stored there because access to the accumulator is the fastest possible but it can only holds a single value at a time.

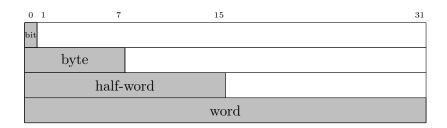


Figure 2.2: illustration of word sizes for 32-bit words

Memory is often implemented as **random access memory** which is both readable and writable it can be split into two popular types which are **static random access memory** (SRAM) and **dynamic random access memory** (DRAM). They differ in how bits are set in RAM. SRAM uses Flip Flops to switch transistors that indicate which bit is set, while DRAM uses capacities that are charged to do so. Memory of a von-Neumann machine contains both, the program and data and is often seen as blocks with addresses. Because the smallest amount of information which we are interested in is usually a byte, each address is equivalent to one byte in memory. A program is simply a list of instructions in memory that belong to the **instruction set**. Each instruction thereby is a specific sequence of bits.

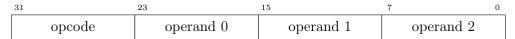


Figure 2.3: representation of machine instruction in memory

An instruction such as 2.4 is called a **machine isntruction** and combines several elements. The first part is called an **opcode** and is typically an 8-bit number that identifies an operation. The ALU reads this number and performs a set of so called **micro instructions** accordingly.

During a single clock cycle a chip can perform a single micro instruction. An example for micro instructions in an add instruction (d = add(a,b)) would be:

should I keep this

Listing 2.1: example of micro instructions

- 1. fetch instruction from memory
- 2. decode instruction
- 3. fetch first operand a
- 4. fetch second operand b
- 5. perform operation on operands
- 6. store result

inhaltlicher zusammen hang

Opcodes are often represented by an alias string such as add that is called a **mnemonic**. The opcode is followed by several addresses that refer to the location a value can be taken from or where it should be stored. These addresses are called **operands** and can either be a memory address or a register number.

It takes up to several hundred cycles for instructions to access memory which effectively stalls the processor until the memory instruction has finished and reduces performance.

$$speed(accumulator) > speed(register) \gg speed(memory)$$

Therefore a user should try to avoid memory access as much as possible and use registers instead.

As we mentioned the instruction set before, the complexity of an instruction set is also very important for performance. A complex instruction set might seem favorable to increase performance at first but a smaller instruction set also bears some advantages. Because every instruction has to be represented by a circuit in the ALU, a smaller instruction set safes space and is easier to design. In general developing a processor architecture is always a trade-off between factors like: available chip space, instruction set and design complexity, energy consumption and maximum clock frequency. Because of this, processors can be classified in two main groups:

CISC Complex Instruction Set Computer

RISC Reduced Instruction Set Computer

The latter usually has an instruction set that is reduced to simple instructions as add or sub and connects these to create more complex instructions. It also can be operated at higher clock frequencies, therefore it is the perfect architecture for applications that need to do simple arithmetic as fast as possible.

The PPU is a RISC architecture so we will focus more on RISC's key features throughout this chapter.

The complexity of an instruction set also affects developers directly, if they are working on low-level code. Programs that only consist of machine instructions a called **assembly** which is the lowest level of representation of a program that is still is human-readable. Assembly instructions follow the same scheme as machine instructions do:

```
add r1, 0x3000, 5 mnemonic operand/result operand operand
```

In RISC architectures instructions typically consist of 3 operands because operations are usually between registers only (except for load/store memory instructions). The

31		23	15	7	0
	mnemonic	operand	operand	operand	
31		23	15	7	0
	add	r1 register address	0x3000 memory address	5 immediate operand	

Figure 2.4: representation of machine instruction in memory

mnemonic in most cases is a named after the first letters of the instructions full name, which is emphasized in the following table. The operand can be of three different types which are all shown above. They either represent a specific register (r1 = register 1), a memory address (0x3000 = the value at memory location 0x3000) or an immediate value (5 = the integer 5). Register operands can also have an indirect use, which means that that content of the register is taken into account. I.e. a memory address can be saved to the register and an operation uses the value at the memory location which the register refers to. This is often the case for RISC architectures as they support only one load and one store instruction, that either loads a value from memory into a register, or stores a register's value in memory. Therefore RISC architectures often qualify as load/store architectures as the memory address is first stored in a register that afterwards is an operand of a memory instruction. This is called an indirect operand.

As address size is limited by the register, the maximum amount of memory that can be used is:

$$2^{n}byte \xrightarrow{n = 32 \text{ bit}} 2^{32}byte \approx 4 * 10^{9}byte = 4GiB$$
 (2.1)

An overview of different assembly mnemonics for the POWER7 ISA can be seen in the Appendix as table ??. It is accompanied by tables ?? and ?? which give further information on assembly.

Many RISC architectures have an instruction set that consists exclusively of 3 operand instructions and any instructions that seem to have less than that, are just mapped to more complex instructions that have three operands but still need only the minimum amount of clock cycles. Such simple instructions are similar to micro instructions, which were mentioned earlier, and every simple instruction has the same low number of micro instructions. RISC architectures therefore start "pipelining" instructions, which means starting the next machine instruction as the previous machine instruction just performed the first step in a clock cycle. Ideally, this will increase the performance by a factor that is equal to the number of micro instructions in a machine instruction.

It must be noted though, that the processor has to implement detection of **hazards**, which are data dependencies between instructions; e.g. one instruction needs the result of another. Such an instruction is then postponed to a delay-slot and other instructions that do not cause hazards are executed instead. The result is reordering of instructions on a processor level.

Processors sometimes have so called **co-processors** for complex instructions that are not included in the instruction set but are still needed. An example would be multiplication on most RISCs, which would need many cycles when split in add instructions

but a co-processor can perform this in just a few cycles. In such a case the control section recognizes the mult opcode and passes it to the co-processor instead of the ALU.

This can be extended to whole units similar to the ALU existing in parallel. One example would be a **floating point unit** (FPU) which is nowadays standard for most processors and handles all instructions on floating point numbers. For this the FPU has its own **floating point registers** (FPRs) in a separate register file on which it performs instructions and which also has access to the memory.

An different kind of extension are vector extensions that do the same as the FPU but for vectors instead of floats. This is mostly wanted for highly parallel processes such as graphic rendering or audio and video processing. Early supercomputers such as the Cray-1 also made use of vector processing to gain performance by operating on multiple values simultaneously through a single register. This could either be realized through a fully parallel architecture or more easily through pipelining instructions for vector elements. The latter one is possible since there are typically no dependencies, hence no hazards, between single elements in the same vector. Nowadays basically all common architectures support vector processing. A few examples are:

- x86 with SSE-series and AVX
- IA-32 with MMX
- AMD K6-2 with 3DNow!
- PowerPC with AltiVec and SPE
- ARM with NEON

The s2pp vector extension (VE) of nux is the PPU's distinct feature that allows for Single Input Multiple Data (SIMD) operations on synaptic weights. The VE is only weakly coupled to the general purpose processor (GPP) of the PPU nand both parts can operate in parallel while interaction is highly limited. To handle the vector unit the instruction set was extended by 53 new vector instructions that partly share their opcodes with existing AltiVec instructions. This renders no problem since the nux does not recognize AltiVec opcodes and most like is not going to in the future. The vector register file includes (VRF) 32 new vector registers which are each 128-bit wide (AV:). This allows for either use of vectors with 8 halfword sized elements or 16 byte sized elements which are 128 bits long as seen in figure ??.

But we take also a special interest in the AltiVec vector extension itself which was developed by Apple, IBM and Motorola in the mid 1990's and is also known as Vector Media Extension (VMX) and Velocity Engine for the POWER architecture. The AltiVec extension provides a similar single-precision floating point and integer SIMD instruction set. Its vector registers can either hold sixteen 8-bit chars (V16QI), eight 16-bit short s (V8HI), four 32-bit ints (V4SI) or single precision floats (V4SF), each signed and unsigned.

It resembles most characteristics of the s2pp vector extension, like a similar VRF, and is already implemented in the PowerPC back-end of GCC. There are a few differences though:

The s2pp VE features a vector accumulator of 128 bits width and a vector condition register (VCR) which holds 3 bits for each half byte of the vector, making 96 bit

keep this?

reference

reference

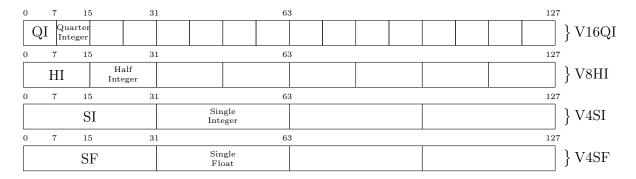


Figure 2.5: different vector structures

in total. Instructions on the s2pp VE can be specified to operate only on those elements of a vector, that meet the condition in the corresponding bits in the VCR, while the AltiVec VE utilizes the CR of the PowerPC architecture. This does not allow for selective operations on individual elements through the CR, but allows for checking if all elements meet the condition in a single instruction. If element-wise selection is needed, AltiVec offers this through vector masks.

The AltiVec VE has two register on its own though, which are the VCSR and VRSAVE registers. The Vector Status and Control Register (VSCR) is responsible for detecting saturation in vector operations and decides which floating point mode is used. The Vector Save/Restore Register (VRSAVE) assists applications and operation systems by indicating for each VR if it is currently used by a process and thus must be restored in case of an interrupt.

Both of these registers are not available in the s2pp VE but would likely not be needed for simple such arithmetic tasks which the PPU is meant to perform.

We already stated that all instructions of VEs must first pass the control unit, which detects vector instructions and then passes them to the VE. These instructions then go into an instruction cache for vector instructions where they are fetched from in-order. On nux the instructions then shortly stay in a reservation station that is specific for each kind of operation an thus allows for little out-of-order operation for instructions in these reservations stations.

figure vector extension

This allows for performing some arithmetic operations on a vector during the process of accessing a different vector in memory. The result is faster processing speed as pipelining for each instruction is also supported. The limiting factor for this though remains the VRF's single port for reading and writing. A more limiting factor in comparison is the shared memory interface of s2pp and GPP.

Normally processors themself do not keep track of memory directly. This is usually done by a **memory management unit** (MMU) or a **memory controller** (MC). It handles memory access by the processor and can provide a set of virtual memory addresses which it translates into physical addresses. Most modern MMUs also incorporate a cache that stores memory instructions while another memory instruction is performed.

It also detects dependencies within this cache, which can be resolved there. Ultimately this results in faster transfer of data as two or more instructions do not need to access the same memory to fetch a value.

Not all MMUs support this though, which might lead to certain problems when handling memory. If instructions are reordered due to pipelining while dependencies on the same memory address are not detected correctly, an instruction may write to memory before a different one could load the previous value it needed from there. Another reason could be delayed isntructions as it was mentioned above. For this reason exist memory barriers.

A memory barrier is an instruction that is equal to a guard, placed in code, that waits until all load and store instructions issued to the MMU are finished. It therefore splits the code into instructions issued before the memory barrier and issued after the memory barrier. This prohibits any instruction form being executed on the wrong side of the barrier due to reordering and thereby generally prevents conflicting memory instructions.

One kind of memory barrier is sync which does exactly what we just described. This and other memory barriers are also described in the appendix (??).

Listing 2.2: The memory barrier ensures that the first store was performed before the second store is issued.

```
stw r7,data1(r9)#store shared data (last)
sync export barrier
stw r4,lock(r3)#release lock
```

Using sync can result in up to a few hundred cycles of waiting for memory access to be finished and therefore this should only be done if necessary.

The PPU's memory is 16 kiB which is accompanied by 4 kiB of instruction <u>cache</u>. Together iwth the PPU this is called the plasticity sub-system. The MMU of this system is very simple as it does not cache memory instructions and also has matching virtual and physical addresses thus memory barriers can become necessary at times.

Another feature of the PPU is the ability to read out spike counts and additional information through a bus which is accessible through the memory interface of the MMU. It uses the upper 16 bits of a memory address for routing These are available because the memory is only 16 kiB large which is equivalent to 16-bit addresses. A pointer to a virtual memory address allows to read for example spike counts during an experiment. This is done the same way for the whole chip configuration such as analog neuron parameters.

The fact, that the system views the highest as the greatest values, makes this a **big-endian** system.

The memory bus is also accessible by the FPGA. This is needed for writing programs into the memory as well as getting results during or after experiments also allows for communication between a "master" FPGA and a "slave" PPU.


A **bus** is the conneciton between parts of a processor and used for data transfer. Bus speeds are very high as they transport data in parallel such as the contents of a register.

add description to instruciton cache Thus most buses should be as wide as a register of the processor. But as buses of such width need much space, some architectures use narrower buses with fewer bits than a register and instead use two instructions to transfer the contents of a full register. The upper half of the width is called **high order bits** and the bottom half is called **low order bits** for big-endian architectures. Systems of this sort are described as 32/16-bit architecture, which means that registers are 32 bit wide while buses are only 16 bit wide. As the higher order bits of registers are not as often used as the lower ones this results in less performance loss than one would initially expected.

The main feature of the PPU though is access to the synaptic array which is offerd through an extra bus. Still the synapse array is mainly accessible through the main memory bus by setting the first bits similar to the spiking rate information. Using this extra bus or the instructions associated with it is nonetheless more comfortable and gives more structure to the program but does not increase performance.

maybe rather an isntruction not a whole bus

When using vector instruction for nux, one must always keep in mind that the weights in the synaptic array only consist of the latter 6 or 12 bits which are in a vector register and are right aligned.

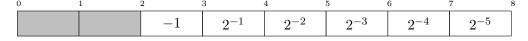

a) fractional representation of weights in synapse and in vector unit

or 1 2 3 4 5 6 7 8sign 2^{-1} 2^{-2} 2^{-3} 2^{-4} 2^{-5} 2^{-5} 2^{-7}

b) fractional representation of weights in synapse and in vector unit

Figure 2.6: fractional representation of weights in synapse and in vector unit

Figure 2.6 displays synaptic weights as a fractional number between -1 and $1-2^{-5}$. The weight is the sum of the values where the bits are set to one. In contrast to this, the sign-bit changes its meaning when used in the vector unit and becomes a factor instead of a summand. This is the reason why a user must shift the vector's elements when reading/writing to the synapse array, as only then do special attributes of instructions work properly. An example would be **saturation** which predefines a minimum and maximum value and in case, the result is out-of-range, sets the value to the closest limit. For this to work properly the bit representation must match the intended one, which is the above mentioned fractional representation, and the values must also be correctly aligned.

An overview of all opcodes is provided by *Friedmann* (2016), which is recommended as accompanying literature besides this thesis. In general these opcodes are divided into 6 groups of instructions:

modulo halfword/byte instructions apply a modulo operation after every instruction

which causes wrap around in case of an overflow at the most significant bit position. Each instruction is provided as halfword (modulo 2^{16}) and as byte instruction (modulo 2^{8}).

saturation fractional halfword/byte instructions allow for the results only to be in the range between 2^{-1} and 2^{-15} for halfword and 2^{-7} for byte instructions.

permute instructions perform operations on vectors that handle elements of vectors only as a series of bits.


load/store instructions move vectors between vector registers and memory or the synapse array.

2.3 Basic Compiler Structure

At its core every compiler translates a source-language into a target-language 2.7a, most often it translates a high-level, human readable programming language into a machine language that consists of basic instructions that build complicated structures. In doing so, compilers may be the essential part in everyday lives of programmers everywhere. And since the point in time when the first compilers emerged, their development played a big role in making computers such an important part of everyday life as they are today.

What differs compilers from the competing concept of interpreters is the separation of **compile-time** and **run-time**. As interpreters combine these two and translate a program at run-time, a compiler takes the time to read the source-language file completely (often several times) and only then creates the executable files which are executed after the process has finished. The advantages of this are simple: While a compiler takes some time at first until the program can be started, the resulting executable is next to always faster and more efficient. This is due to the possibility of optimizing code during the compilation process and the chance of reading through the source file several times if this is needed (with each time the code is read being called a **pass**). Of course there do exist many different compilers today and what matters to the user is typically the combination of the amount of time it takes to compile a program and the performance of that program.

A compiler is not the only contributor to translation of a program into an executable program although it is the most prominent one. Figure 2.7a illustrates the chain of tools that is involved into this process: As one can see the **preprocessor** modifies the source before it is processed by the compiler and removes comments, substitutes macros and also includes other files into the source before it passes the new program code to the compiler. The compiler then passes its output to the **assembler** which translates the output of the compiler which is written in a language called **assembly** into actual machine code by substituting the easy-to-read string alternatives with actual opcodes. At last the **linker** combines the resulting "object-files" that the assembler emitted with standard library functions, that are already compiled, and other resources. The result is a single file that is almost executable. The only task which is left for the **loader** is

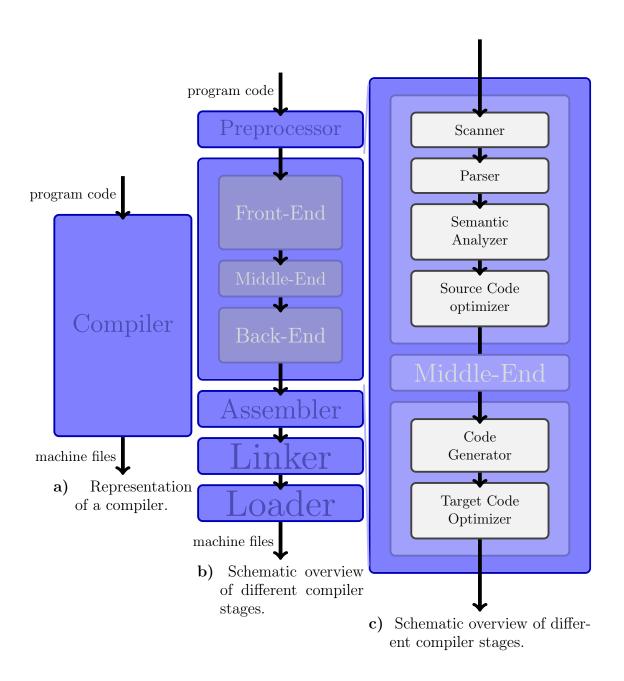

assigning a base address to the relative memory references of the "relocatable" file which were used until now. The code is now fully written in machine language and ready for operation.

Since we are more interested in compilers than other components, we will take a better look at the compiler itself. Figure 2.7a shows the common separation of a compiler into **front-end**, **back-end** and an optional **middle-end**. This is done to make a compiler portable, which means allowing the compiler to work for different source-languages which are implemented in the front-end and target-languages which must be specified in the back-end. Therefore if one wants to compile two different programs e.g. one in C the other in FORTRAN, it is necessary to change the front-end but not the back-end because the machine or **target** stays the same. The middle-end in this regard is not always needed but could be responsible for optimizations that are both source-independent and target-independent.

Of course the different parts of the compiler have to communicate through a language that all parts can understand or speak. Such a language is called **intermediate representation** (IR) and also used during different phases of the compilation process. It may differ in its form but always stays a representation of the original program code.

The different phases of a compilation process are illustrated to the far right of figure 2.7a. First the preprocessed source code is fed into the **scanner** that performs lexical analysis, which is combining sequences of characters to symbols and so called tokens that get associated with an attribute such as "number" or "plus-sign" and the symbol. Next the **parser** takes the sequence of tokens and builds a syntax tree that represents the structure of a program and is extended by the **semantic analyzer** which adds known attributes at compile-time like "integer" or "array of integers" and checks if the resulting combinations of attributes are valid. This already is the first form of IR. The **source code optimizer** which is the last phase of the front-end takes the syntax tree and takes a first shot at optimizing the code. Typically only light optimization is possible at this point such as pre-computing simple arithmetic instructions. After the source code optimizer is done the syntax tree is converted into different IR in order to be passed to the back-end.

The **code generator** takes this IR and translates it to machine code that fits the target — typically this is assembly. At last the **target code optimizer** tries to apply target-specific optimization until the target code can be emitted.

During these phases the compiler also generates a symbol and literal table. A **symbol table** is, as the name states, an overview of all symbols that are used in the program, it contains the symbols name and the attribute of the semantic analyzer. A **literal table** in contrast holds constants (i.e. strings) and makes them globally available by reference, as does the symbol table. This information is used by the code generator and various optimization processes.

2.3.1 Back-End and Code Generation

We now want to focus a little more on the last two phases of a compiler, which are also part of the back-end. We already stated that the back-end is responsible for code generation and target optimization and since we will keep focus on the back-end later on, we need to get used to a few other terms that are common when talking about compiler back-ends.

Usually the processes of code generation and target optimization are entangled as optimization can take place at different phases of code generation. Thus we first take a look at code generation in the back-end.

As we learned already, the source program reaches the back-end in form of IR. Often the IR is already linearized and thereby again in a form that can be seen as sequence of instructions. Because of this the IR may also be referred to as Intermediate Code. The process of generating actual machine code from this is again split into different phases:

- instruction selection
- instruction scheduling
- register allocation

At first the back-end recognizes sets of instructions in intermediate code that can be expressed as an equivalent machine instruction. Depending on the complexity of the instruction set a single machine instruction can combine several IR instructions. This may involve additional information that the front-end aggregated and added to the IR as attributes single machine instruction can combine several IR instructions. At the end of this is a compiler typically emits a sequence of assembly instructions which we will explain later on. In order to fulfill this task the compiler needs the specifications of the target it compiles for. This is called a target description and can contain things like specifications of the register-set, restrictions and alignment in memory and availability of extensions and functionalities. The compiler also needs knowledge of the instruction set of a target sometimes referred to as the ISA which is in essence a list of instructions which are available and also their functionality. The compiler picks instructions according to their functionality from this list and substitutes the IR with this. Ideally a back-end thus could support different back-ends just by exchanging the machine description and the ISA as the basic methods of generating code are the same for most targets.

After the IR is converted into machine instructions the back-end now rearranges the sequence of instruction. This needs to be done as different instructions take different amounts of time to be executed. If a subsequent instruction depends on the result of a previous instruction the compiler now has two alternative approaches to solve this. First it can simply stall the programs execution as long as the instruction is executed and feed the next instruction into the processor only when the dependency is solved. This means that the compiler adds nops before every instruction that needs to wait for an operand as nop tells the processor to wait until the previous instruction has finished. For critical memory usage the compiler can also insert syncs as memory barriers before hazardous

memory instructions. Alternatively it can stall only the instruction which depends on the result which is currently computed but perform instructions that do not depend on the result in the mean time. By doing so the scheduler increases performance noticeably and thus can partly be seen as part of the optimization process. On RISC architectures this is especially important as load and store instructions can take a few hundred times more clock cycles than normal register instructions and pipelining depends mainly on the instruction sequence. Thus the scheduler is also involved parallelization of code. As a result of this a compiler would usually accumulate all load instructions at he beginning of a procedure and start computing on registers that already have a value while the others are still loaded. This is done vice versa at the end of a procedure for storing the results in memory. This process of course needs the compiler to know the amount of time it takes for an instruction to be executed and works hand in hand with hazard detection on processor level.

At last he compiler handles register allocation which also includes memory handling. Typically the previous processes expect an ideal target machine which provides and endless amount of registers. As in reality the processor only has k registers the register allocator reduces the number of "virtual registers" or "pseudoregisters" that are requested to the available number of "hard registers" k. For this to be possible the compiler decides whether a value can live throughout a procedure in a register or must be placed into memory because there are not enough registers available. This results in the allocator adding load and store instructions to the machine code in order to temporarily save those registers in memory which is called "spilling". It is obvious that this can hurt performance and therefore the compiler tries to keep spilling of registers to a minimum and also insert spill code at places where it delays other instructions as little as possible. At he end of register allocation the compiler assigns hard registers to the virtual registers which are now only k at a time.

During and after code generation the compiler also applies optimizations to the machine code. Any optimization to the code though must take three things into consideration, which are safety, profitability and risk/effort. The first thing which always must be fulfilled, is safety. Only if the compiler can guarantee that an optimization does not change the result of the transformed code compared to the original code it may use this optimization! Only if this applies the compiler may check for the profit of an optimization which most often is a gain in performance but could also be the size of the program. At last the effort or time it takes for the compiler to perform this optimization and the risk of generating actually bad or ineffective code should be taken into account as well. If optimization passes these three aspects it may be applied to the code. In the end there exist some simple optimizations that always pass this test like the deletion of unnecessary actions or unreachable code, e.g. functions that are never called. Another example would be the reordering of code like the scheduler did before or the elimination of redundant code, which applies if the same value is computed at different points and thus the first result simply can be saved in a register. If a compiler knows the specific costs of instructions, it can also try to substitute general instruction with more specialized but faster instructions, like substituting a multiplication with 2 by shifting a value one position to the left. There exist many more ways of optimization but we only want to explain one more kind of optimization which is called peephole optimization.

In peephole optimization the compiler only looks at a small amount of code through a "peephole" and tries to find a substitution for this specific sequence of instructions. These substitutions must be specified by hand and are highly target-dependent in contrast to the optimizations which were mentioned before that are target-independent. If the sequence can be substituted the peephole optimizer does so, otherwise the peephole is moved one step further and the new sequence is evaluated.

2.3.2 Assembly Basics

Following a short introduction in the previous section, we want to spend a little time on assembly as it is useful to know how to program in assembly while using C. This is done as follows:

Listing 2.3: Exemplatory Assembly invkation

```
asm volatile ( "add %0, %1, %2"
: "=r" (dst)
: "r" (src1), "r" (src2):);
```

The code above tells the compiler to generate the instruction add in assembly which is followed by three operands. The number m in %m indicates that the operand is specified by the m+1th description of an operand that follows. The description that follows after: describes the output operands. "=r" means that the output is to be stored in a register (letter r for register operand) and that the register is to be written (= this is called constraint). The variable in parentheses must be declared before its occurrence and of matching type (float would not be allowed in this case). The following description is that of the input operands and those must not be written! r again stands for a register operand and the variable is in parentheses, the arguments are separated by commas. After the third: follow clobbered (=temporarily used) registers which would also be in quotes, but these are optional arguments. volatile means that the compiler must not delete the following instructions due to optimization.

As a special command asm (:::memory); would indicate a memory barrier to the compiler, ergo the machine instructions previous to this line and the one following may not be interchanged.

keep this?

2.3.3 Intrinsics

Something that will also occur quite often later in this thesis are intrinsics. Intrinsics are sometimes also called built-in functions and resemble an intermediate form of asm and a high-level programming language. This means that by calling an intrinsic function, we tell the compiler to use a certain machine instruction that typically shares its name with the intrinsic. What differs an intrinsic from asm() is that we do not need to specify constraints or registers classes but only need to keep an eye on the type of arguments. One could easily mistake them for normal functions of library but they are directly integrated into the back-end of a compiler and thus independent of the programming language. In

order to implement intrinsics into a back-end the compiler need a certain knowledge of what the asm instruction does and what kind of operands it needs.

A typical field of application for intrinsics would be vectorization and parallelization of code through processor extensions. Sometimes this is the sole option of using the machine instructions associated with them.

2.3.4 GNU Compiler Collection

The GNU Compiler Collection (GCC) is a compiler suite that supports different programming languages and targets. Though normally it is seen as a build of GCC supports a variety of front-ends while it was built for a specific target. This target in most cases is the processor architecture on which the user runs the compiler. But GCC also supports the idea of a cross-compiler which is the concept of compiling code on one machine but running the code on a different machine that is also based on a different architecture. One must though build a version of GCC locally for every back-end one wants to compile code for. This is realized through a modular structure which follows the idea of a front-end, middle-end and back-end as it was described in section 2.3 although some information that belongs to a back-end is also needed at the front-end, hence the compiler is built back-end specific but supports a wide variety of back-ends to choose from.

GCC itself is programmed in C++ and part of the GNU project of the Free Software Foundation. It is wide-spread and one of the most popular compilers especially among academic institutions and small scale developers. Every major UNIX distribution and many minor ones include GCC as a standard compiler. von Hagen (2006) As an open source project there is a constant development to the compiler and there exist many threads that support known bugs.

There is one major competitor though which stands besides GCC as an open source compiler suite which is Clang that is part of the LLVM (low level virtual machine). Both support running the same source code on multiple machines while LLVM actually runs intermediate code rather than actual machine code and uses GCC to generate this intermediate code for some front-ends. However while one can argue in favor for either one, GCC seems a little better suited for our application. These results have to be viewed with care, as they are based on different processor architectures but it seems like both compilers provide similar performance. Ultimately it is the personal preference of the programmer that decides which compiler one is more comfortable with and often enough he chooses that compiler. In our case I have chosen GCC over LLVM for two main reasons. One is that after all GCC follows more the traditional concept of a compiler that generates machine code at the end and also I was far more familiar with GCC than with LLVM when this decision had to be made. The other is that GCC support existed to a minimum before I started this thesis and thus there was a point to start from. This topic will be referred to later on in the discussion but for now a short motivation seems to be sufficient.

By now GCC is a stable release version of 6.3 with version 7 in the works but we will use an older version which is used internally at the BrainScaleS project which is version 4.9.2. Additionally we will use binutils 2.25 which was patched by Simon Friedmann and

reference LLVM vs. GCC on ARM, LLVM vs. Gcc in EISC since includes the opcodes and mnemonics which are supported by the nux. A complete specification of the libraries used and a handy script that builds a cross-compiler for the nux on PowerPC systems can be found there as well.

We take a special interest in the PowerPC back-end of GCC which is called rs/6000 for IBMs RISC system/6000 architecture that is equivalent to POWER. According to GCCs Internals manual GCC (2017a), which we will refer to as the sole source of information in this regard, the back-end of GCC has the following structure:

Each architecture has a directory with its respective name in gcc/config/rs6000 that contains a minimum amount of files. These are the machine description rs6000.md which is an overview of machine instructions with additional information to each instruction and the header files rs6000.h and rs6000-protos.h and source file rs6000.c that handle the target description through macros and functions. Every back-end needs these files in the GCC source and the final back-end is build from these files through the macros and functions just mentioned. To notice a back-end in the first place the back-ends directory -here "rs6000"- must be added to the file config.gcc which also includes a list of all files in the aforementioned directory. Most back-ends include additional files which makes a back-ends complex structure clearer but these are not mandatory and we will address these later.

Instead we address one of the most important functions which unfortunately is also one of the least documented though most complicated ones. The function/process is called "reload" and is used as part of the register allocation process. GCC (2013) Specifically reload is meant to do register spilling but over almost 25 years that GCC existed until 4.9.2 it became more and more complex and basically does everything associated with register allocation (mainly moving the contents of different registers and memory around, and finding the right registers in the first place). Over the years it thus became one of the main sources of errors when constructing a back-end and was meant to be replaced several times. As of now reload is being replaced by LRA (local register allocator) but GCC 4.9.2 is not impacted by this therefore we are stuck with reload indefinitely.

To address possible errors in reload later on we now get to know one form of IR in GCC that is Register Transfer Language (RTL).

Register Transfer Language Basics

RTL, which is not to be mixed up with Register Transfer Level, is a form of IR the backend uses to generate machine code. Usually GCC uses the IR GIMPLE which looks like stripped down C code with 3 argument expressions, temporary variables and goto control structures. The back-end transforms this into a less readable IR that inherits GIMPLEs structure but brings it to a machine instruction level. It is inspired by Lisp lists and thus we will need to take a look at those at last in before we take on the task of extending a GCC back-end.

We do so in looking at one of the most fundamental RTL statements first while explaining the each part at a time.

```
(define_insn "add<mode>3"
  [(set (match_operand:VI2 0 "register_operand" "=v")
```

There exist manuals to basically everything which is written here and the more extensive manual will be referenced at he end of each paragraph.

define_insn is an RTL expression that generates an RTL equivalent to a machine instruction. One such instruction is called an insn (short for instruction) hand has several properties like a name, an RTL template, a condition template, an output template and attributes. GCC (2017g) The name in this case is add<mode>3 (3 for three operands) where <mode> is to replaced by a set of values that describe a modes. GCC (2017p) A mode is the form of an operand and can be something like si for single integer, qi for quarter integer (quarter the bits of a single integer), sf for single float or v16qi for a vector of 16 elements which are quarter integers each. GCC (2017k) There are many more modes that follow the same scheme. In this case we do not specify the mode explicitly but use an iterator that creates a define_insn for every valid mode we specify. GCC (2017j) The second define_insn shows this with a specific mode.

Next follows the RTL template which is in square brackets. All RTL templates need a side effect expression as a base which describes what happens to the operands that follow. In our case set means that the value which is specified by the second expression is stored into the place specified by the first expression. GCC (2017o) The first expression that follows is a specified operand. match_operand tells the compiler that what follows is a new operand. VI2 belongs to the mode iterator we saw earlier and is to be substituted by the equivalent mode to <mode> in caps, which can be seen for the following define_insn. All modes VI2 are to be substituted by the same real mode. After the mode comes the index of an operand which starts at 0 for every define_insn. The following string describes a predicate which tells the compiler more about the operand and which constraints it must fulfill. Operands typically end in _operand and a single predicate is meant to group several different operand types. In this case any register would be a valid operand. GCC (2017m) The next string specifies the operands further and is meant to fine tune the predicate. It is called a constraint and matches the description which was taken in section 2.3.2. = again means that the register must be writable and v stands for an AltiVec vector register. GCC (2017e) This pattern is repeated for every operand and only changes slightly. Though the second expression of the set side effect has an additional pair of parentheses because of the plus statement. This is an arithmetic expression and tells the compiler that the following operands are part of an operation that results in a new value. It is also succeeded by a mode that specifies the mode of the result.GCC (2017b)

The RTL template is matched by the compiler against the RTL it generated from GIMPLE and if the template matches the RTL is substituted by the output template that follows.

After the RTL template is finished, the condition specifies if the insn may be used. It is a C expression an must render true in order to allow the matching RTL pattern to be applied. In this case the condition is also depending on the mode iterator which substitutes <VI_unit> for equivalent code to that of the next define_insn with a matching mode. GCC (2017g)

The output template is usually is similar to the asm template from asm. The string contains the mnemonic of a machine instruction and the operands which are numbered according to the indexes of the RTL template. Again this is depending on the mode iterator and <VI_char> will be substituted by a character that belongs to a machine mode. GCC (2017g)

At last the insn is completed by its attributes which hold further information about the insn that is used by the compiler internally like which effect an insn has on certain register etc.. We are less interested in this, as attributes are optional and we do not add attributes to the back-end. GCC (2017d)

The attentive reader might have noticed that only RTL template is written in RTL. This is true but still do inso patterns belong into this section. The RTL not only is the most important part of an inso but we will hardly see RTL outside from RTL templates. Still should RTL be mentioned in its other form here as it is used for debugging purposes.

RTL can be split into two phases which are non-strict RTL and strict RTL. Non-strict occurs only before reload and is very deliberate in specifying its operands. Operands usually are virtual registers that have a unique number. match_operand then is replaced by (reg:SI 1) which tells the compiler the type of operand, the mode and the register number.GCC (2017n)

Strict RTL has passed reload and no longer contains virtual registers but only references existing hard registers or memory.

An example of non-strict RTL and strict RTL of the same code can be seen in figure

MMU ?= memory controller PPC must handle syncing in compiler when I/O is added explain stack and frame pointer PPU instruction set

3 Extending the GCC Back-End

Since we now are familiar with the basics of processors, the PPU, compilers and GCC we can put this knowledge to use and start extending the GCC back-end. There is a number of files we will systematically edit and keep referencing to as they are important parts of the rs6000 back-end and were changed in the process of extending the back-end.

rs6000.md is the machine description of the back-end in general and contains insn definitions for all scalar functions

rs6000.h is a header file which contains macros and declaration for registers

rs6000.c is the source file which implements the back-end's functions

rs6000.opt lists the options and flags for the target

rs6000-builtins.def contains the definitions of intrinsics

rs6000-cpus.def lists sub-targets that belong to the rs6000 family

rs6000-c.c links built-ins and overloaded built-ins

rs6000-opts.h contains a set of enumerations that represent option values for the backend

rs6000-protos.h makes functions in rs6000.c globally available

rs6000-tables.opt lists values to a CPU enumeration

driver-rs6000.c a collection of driver details for different targets

ppc-asm.h sets macros for the use of asm

s2pp.md is a new machine description of s2pp and contains insn definitions

s2pp.h is the header file that defines aliases for built-ins

constraints.md contains definitions of constraints

predicates.md contains definitions of predicates

vector.md defines general vector insns

sysv4.h initializes a variety of option flags and sets default values

t-fprules sets soft-float as default for certain targets

It is recommended to have chapter 5 of (?) at hand, as it contains an overview of existing s2pp vector instructions.

During the course of extending the GCC back-end a few things became clear:

Due to the limited documentation of the back-end itself, one must rely on comments in code and the GCC internals manual (GCC, 2017a) As a full implementation for a vector extension already exists, the AltiVec extension should be used as a guideline for a new extension. Still, it should be avoided to change exiting code as much as possible. Code is often referred to from different places in the back-end and modifying existing code can therefore easily lead to compiler errors. Especially since the back-end is not extended completely right away but rather step by step. This applies particularly to functions that are implemented for AltiVec only. It is recommended to rather duplicate functions and distinguish them before they are called, than doing so inside a function call. This will make it to find bugs as usually the function that generates an error is indicated. Also there do exist enough differences between these two vector extensions, that combining functions would not save work in the end.

Therefore we will occasionally point out when functions or other code can be inherited from AltiVec and which modifications are needed.

3.1 Adding Option Flag and nux Target

Extending the rs6000 back-end starts by adding the nux processor to the list of targets and also want to include mandatory flags with this. Ideally the user only has to add the option flag -mcpu=nux when compiling in order to produce machine code for the nux. The flags which have to be set when using the nux are:

- -msdata=none disables the use of a "small data section" which is like a data section but has a register constantly referring to it and thus has faster access than the normal data section. Globals, statics and small variables that are often used are preferably stored there.
- -mstrict-align aligns all variables in memory which means that a variable always starts at a memory address without offset. Every variable requests at least 1 byte of memory when strictly aligned
- -msoft-float tells the compiler that there is no FPU and all floating point operations have to simulated by software.
- -mno-relocatable states that the program code has a fixed memory address that may not be altered.

But first there should be an option flag that activates nux' VE like -maltivec does for the AltiVec VE. We chose the name -ms2pp for this new option flag and will define an option mask along with it. In rs6000.opt and we simply need to add:

```
ms2pp
Target Report Mask(S2PP) Var(rs6000_isa_flags)
Use s2pp instructions
```

This adds ms2pp to the list of option flags and the next lines defines a macro, that is associated with it. Target means that the option is target specific, therefore only certain architectures support the option flag. Report means that the option is to be printed when -fverbose-asm is is set. Mask(S2PP) initializes a bitmask that is available through OPTION_MASK_S2PP. That macro is attached to rs6000_isa_flags, which specified by Var. It simultaneously specifies a macro TARGET_S2PP that is set to 1. GCC (20171)

When this is done we need to specify

```
#define MASK_S2PP OPTION_MASK_S2PP
```

in rs6000.h as macros with MASK_ are a standard from earlier versions of GCC.

Although this option flag shall later enable s2pp support, we need the aforementioned flags as well to compiler nux programs. For this reason we add a processor type which combines those flags. There exist several lists that contain available targets and we need to add nux to these. First we create the asm ?? flag which tells the assembler which system architecture is used. As nux is based on POWER7 we copy the flag -mpower7 in driver-rs6000.def:

Listing 3.1: rs6000.h

```
#define ASM_CPU_SPEC \
    ...
    %{mcpu=power7: %(asm_cpu_power7)} \
    ...
    %{mcpu=nux: %(asm_cpu_power7)} \
    ...

    Listing 3.2: driver-rs6000.c

static const struct asm_name asm_names[] = {
    ...
    { "power7", "%(asm_cpu_power7)" },
    ...
    { "nux", "%(asm_cpu_power7)" },
    ...
}
```

This will set the assembler -mpower7 when using -mcpu=nux.

The nux target should also be recognized by preceding phases of the compiler and set option flags accordingly. These options flags can be set in rs6000-cpus.def.

```
...
RS6000_CPU ("nux", PROCESSOR_POWER7, MASK_SOFT_FLOAT | MASK_S2PP |
MASK_STRICT_ALIGN | !MASK_RELOCATABLE)
```

This uses the macro RS6000_CPU (NAME, CPU, FLAGS) and adds nux to the processor_target_table[]. Since we saw earlier that option flags usually set masks, we set the respective masks directly. The masks we chose will tell the compiler that the processor is a POWER7 architecture and uses soft-float, strict-align and no-relocatable(negated relocatable) as well as the new s2pp mask.

Unfortunately we could not set the -msdata=none flag before since the -msdata flag is initialized differently. Also since it is not simply set "on" or "off" but accepts several

values, it is handled in sysv4.h. rs6000_sdata will be set according to the string that follows -msdata=.

It is not possible to detect in this file, if the nux flag is set. We therefore need a little work-around that helps setting the value of rs6000_sdata. If -msdata is not set, i.e. only -mcpu=nux is set, the compiler will use if-clauses that determine which value is assigned to rs6000_sdata. We add a case that checks for all flags, that are set by -mcpu=nux and set rs6000_sdata to SDATA_NONE if this applies. Hence the target options will also set rs6000_sdata as we wish which is to SDATA_NONE.

There exists a case for which this condition applies even when nux is not set as target but all flags are set by hand. If one chooses an explicit value for -msdata this case does not apply though and the value of -msdata is set accordingly.

This is somewhat not the ideal but a trade-off with as few side effects as possible.

Already this would allow for the use of -mcpu=nux as target and -ms2pp as option flag. But since the flags we used are basically mandatory to the s2pp extension we also want to check for these flags before starting compilation. First though for each flag are needed which the back-end can identify. This is done in rs6000-c.c where global macros can be defined:

```
if ((flags & OPTION_MASK_RELOCATABLE) != 0)
  rs6000_define_or_undefine_macro (define_p, "_RELOCATABLE");
if (rs6000_sdata != SDATA_NONE)
  rs6000_define_or_undefine_macro (define_p, "_SDATA");
...
```

If flags and the respective option mask are set, rs6000_define_or_undefine_macro will define a macro what is specified by the second argument. Whether a macro is defined or undefined depends on the boolean define_p, which is set by the compiler.

We can use these new macros to check if flags are set. This needs a new file, that will also be needed later on as a header file for s2pp. s2pp,h must be indexed in gcc/config.gcc under extra_headers.

```
powerpc*-*-*)
    cpu_type=rs6000
    extra_headers="ppc-asm.h altivec.h spe.h ppu_intrinsics.h paired.h
       spu2vmx.h vec_types.h si2vmx.h htmintrin.h htmxlintrin.h s2pp.h"
    need_64bit_hwint=yes
    case x$with_cpu in
    xpowerpc64|xdefault64|x6[23]0|x970|xG5|xpower[345678]|xpower6x|xrs64a
       |xcell|xa2|xe500mc64|xe5500|Xe6500
    cpu_is_64bit=yes
    ;;
    esac
    extra_options="${extra_options} g.opt fused-madd.opt rs6000/rs6000-
       tables.opt"
    ;;
This is done for GCC to invoke the header file as it is not referenced elsewhere.
  s2pp.h can now be used to check the compiler flags.
/* _S2PP_H */
#ifndef _S2PP_H
#define _S2PP_H 1
#if !defined(__S2PP__)
#error Use the "-ms2pp" flag to enable s2pp support
#endif
#if !defined(_SOFT_FLOAT)
#error Use the "-msoft-float" flag to enable s2pp support
#if !defined(_STRICT_ALIGN)
#error Use the "-mstrict-align" flag to enable s2pp support
#if defined(_RELOCATABLE)
#error Use the "-mno-relocatable" flag to enable s2pp support
```

#error Use the "-msdata=none" flag to enable s2pp support

#endif

#if defined(_SDATA)

for repeti-

If for example __s2PP__ is not defined but s2pp.h included, the compiler will emit an error that tells the user to set the target flag. Since hard floats are not supported on nux regardless of s2pp.h we add nux to the list of soft-float CPUs in t-fprules.

```
SOFT_FLOAT_CPUS = e300c2 401 403 405 440 464 476 ec603e 801 821 823 860 nux
```

3.2 Creating Macros

Since the preliminary requirements are now met, we start adding fundamental macros a vector attribute for specifying vectors in program code.

Attributes are used to specify various variables and can be used for example to control alignment (GCC, 2017d).

First a new vector unit is needed. It will be called VECTOR_S2PP and added to the enumeration rs6000_vector in rs6000-opts.h.

```
enum rs6000_vector {
      VECTOR_NONE,
                             /* Type is not
                                            a vector or not supported */
      VECTOR_ALTIVEC,
                             /* Use altivec for vector processing */
                             /* Use VSX for vector processing */
      VECTOR_VSX,
      VECTOR_P8_VECTOR,
                             /* Use ISA 2.07 VSX for vector processing */
      VECTOR_PAIRED,
                             /* Use paired floating point for vectors */
                             /* Use SPE for vector processing */
      VECTOR_SPE,
      VECTOR_S2PP,
                             /* Use s2pp for vector processing */ //s2pp-
         mark
      VECTOR_OTHER
                             /* Some other vector unit */
};
```

To put this to use, we will create macros in rs6000.h which compare vector units to the newly created VECTOR_S2PP.

```
#define VECTOR_UNIT_S2PP_P(MODE)
          (rs6000_vector_unit[(MODE)] == VECTOR_S2PP)
...
#define VECTOR_MEM_S2PP_P(MODE)
          (rs6000_vector_mem[(MODE)] == VECTOR_S2PP)
```

VECTOR_UNIT_S2PP_P(MODE) and VECTOR_MEM_S2PP_P(MODE) are identical as we will create identical entries for rs6000_vector_unit[] and rs6000_vector_mem[]. This is a relict from AltiVec implementation as vector units in memory may differ in certain cases.

mention VSX?

We will also add checking for specific vector modes which are supported by s2pp. The hardware only supports two types of vectors which are vectors with byte elements (V16QI) and vectors with halfword elements (V8HI).

Next we need to find conditions which easily apply to TARGET_S2PP as they already do for TARGET_ALTIVEC. There exist only five such cases, rs6000_builtin_vectorization_cost, rs6000_special_adjust_field_align_p and expand_block_clear handle alignment of vectors. Alignment refers to the position of data blocks in memory; 16-bit alignment means that variables may only start at addresses that represent multiples of 16 bits. AltiVec vectors and s2pp are aligned the same way as we want to reduce misalignment of 128-bit vectors to a minimum.

rs6000_common_init_builtins initializes common built-ins (which we will later refer to) and is needed by all extensions that use built-ins. In these cases we can simply expand the condition for TARGET_S2PP.

Other conditions that will later be expanded for TARGET_S2PP need further modification and thus are not mentioned here.

We must do the same for VECTOR_UNIT_S2PP_P and other macros that have AltiVec counterparts: In reg_offset_addressing_ok_p cases for V16QImode and V8HImode return false if VECTOR_MEM_S2PP_P or the AltiVec version apply. In rs6000_legitimize_reload_address and rs6000_legitimate_address_p offset addresses are handled they same way they are for AltiVec. In rs6000_secondary_reload indirect addressing is enforced. In print_operand operand modifier y is validated for s2pp as well. rs6000_vector_mode_supported_p returns true is a mode is supported by s2pp.

All of these cases handle addressing of vectors in memory which is equivalent in AltiVec and s2pp. It is therefore quite simple to support this for s2pp.

Since we established vector modes and vector units by now, we need to connect these in rs6000_init_hard_regno_mode_ok. In case TARGET_S2PP is set VECTOR_S2PP is assigned to modes V16QImode and V8HImode.

```
if (TARGET_S2PP)
    {
    rs6000_vector_unit[V8HImode] = VECTOR_S2PP;
    rs6000_vector_mem[V8HImode] = VECTOR_S2PP;
    rs6000_vector_align[V8HImode] = align32;
    rs6000_vector_unit[V16QImode] = VECTOR_S2PP;
    rs6000_vector_mem[V16QImode] = VECTOR_S2PP;
    rs6000_vector_align[V16QImode] = align32;
}
```

Also preferred modes when vectorizing a non-vector modes in rs6000_preferred_simd_mode

```
..
if (TARGET_S2PP)
  switch (mode)
   {
    case HImode:
    return V8HImode;
    case QImode:
```

```
return V16QImode;
  default:;
}
```

By now we can define a vector attribute as we mentioned before. GCC already supports a vector attribute which is also used by AltiVec. Thus we can add s2pp to the rs6000_attribute_table and rs6000_opt_masks[] array with the same values as for AltiVec but changing the keyword.

```
static const struct attribute_spec rs6000_attribute_table[] =
    /* { name, min_len, max_len, decl_req, type_req, fn_type_req, handler
         affects\_type\_identity  } */
    { "altivec", 1, 1, false, true, false,
       rs6000_handle_altivec_attribute,
      false },
               1, 1, false, true, false, rs6000_handle_s2pp_attribute,
    { "s2pp",
      false },
struct rs6000_opt_mask {
  const char *name;
                       /* option name */
 HOST_WIDE_INT mask;
                          /* mask to set */
                        /* invert sense of mask */
 bool invert;
 bool valid_target;
                           /* option is a target option */
};
static struct rs6000_opt_mask const rs6000_opt_masks[] =
  { "altivec",
                        OPTION_MASK_ALTIVEC,
                                                   false, true },
  { "s2pp",
                   OPTION_MASK_S2PP,
                                           false, true },
```

We also add the function rs6000_handle_s2pp_attribute which is copied form AltiVec but stripped off unsupported vector modes.

This would make these attributes already usable but we also define built-ins in rs6000 -c.c that shorten the attribute from __vector=__attribute__((s2pp(vector__))) to __vector:

```
. . .
```

Additionally we indicate to the front-end that special attributes are handled by the back-end.

```
static bool
rs6000_attribute_takes_identifier_p (const_tree attr_id)
{
  if (TARGET_S2PP)
    return is_attribute_p ("s2pp", attr_id);
  else
    return is_attribute_p ("altivec", attr_id);
}
```

3.3 Registers

This section will describe, how s2pp registers are added to the back-end. Also, we will add constraints and predicates ?? for these registers.

There are three types of registers in the s2pp VE:

32 vector registers these are normal registers that hold vector values

1 accumulator which is used for chaining arithmetic instructions and cannot be accessed directly

1 conditional register which holds conditional bits and also cannot be accessed directly

During extension of the GCC back-end, it became apparent that a reserved vector register, that is all zeros the entire time, will be necessary for some implementations of the back-end. This became necessary since the nux instruction set does not include logical vector instructions. Normally the instructions XOR and OR are used by the back-end to implement simple register features. OR is used for moving around the content of a register as ORing the same first register to a second register will simply copy the contents of the first register. On the other side, does XORing the same register result in writing all zeros to the return register.2.3.2

Since these instructions are not available, "nulling" a register becomes a problem. Therefore we reserve the first register and splat zeros into it. Moving this register, will have the same effect as xoring a register. As or is also not available, we use an alternative instruction, which is fxvselect. fxvselect selects either elements of the second or the third operand depending on the condition register and its forth operand(?). Having identical second and third operands thus will simply generate the same vector as return value. By setting the forth operand 0, fxvselect will always choose elements from the second operand. This gives us a simple work-around as fxvselect also takes only one clock cycle for execution. An alternative idea would be subtracting the same register from one another with fxvsubm, which also nulls the return operand. This would take more clock cycles though and is unfavorable, as we do not know how often registers need

to be nulled. Ultimately it is a trade-off between having one less register at hand and wasting clock cycles continuously. The latter could get easily more of a problem than the first one and therefore we will implement the first alternative.

When talking about reserved registers must also think about saved, call-used and fixed registers:

fixed registers serve only one purpose and are not available for allocation at all!

call-used registers are used for returning results of functions. They are not available to general register allocation but are used when calling functions.

saved registers are available globally and may hold values throughout function calls.

Usually about half of all registers is declared call-used and the other half saved. We will stick to this convention but in the future it might be interesting to optimize this.

Register indexes are declared in rs6000.md:

```
(define_constants
  [(FIRST_GPR_REGNO
                          0)
   (LAST_GPR_REGNO
                          31)
   (FIRST_FPR_REGNO
                          32)
   (LAST_FPR_REGNO
                          63)
   (FIRST_S2PP_REGNO
                          33)
   (LAST_S2PP_REGNO
                          63)
   (S2PP_COND_REGNO
                          32)
   (S2PP_ACC_REGNO
                          64)
   (LR_REGNO
                          65)
...])
```

We reuse the reserved vector register's index 32 (this register is null) for the conditional register and use the free index for the accumulator. Registers which may be available on the same processor must not share and index! As the GPRs need the first 32 registers numbers (0-31) and there is never an FPU on nux, we want to use the 32 registers normally reserved to FPRs.

We must define which purpose the registers will serve in the back-end. This is declared by macros that are assigned a register number like in rs6000.md.

Of course we again need to go through all files and find usage of those macros. The only use the macros though is in the prologue and the epilogue, which will be discussed in the next section.

After we declared all register indexes, we must also specify them further. Each register type (or register class) needs and entry to the enumeration reg_class and a definition of identical register names in REG_CLASS_NAMES.

```
enum reg_class
  GENERAL_REGS,
  S2PP_C_REG,
  S2PP_REGS,
  FLOAT_REGS,
  S2PP_ACC_REG,
  ALTIVEC_REGS,
  . . . }
#define REG_CLASS_NAMES
  {
  "GENERAL_REGS",
  "S2PP_C_REG",
  "S2PP_REGS",
  "FLOAT_REGS",
  "S2PP_ACC_REG",
  "ALTIVEC_REGS",
  "ALL_REGS"}
```

in columns?

Then we need to specify the contents of our new register classes in REG_CLASS_CONTENTS.

```
/* GENERAL_REGS. */
```

```
{ Oxffffffff, Ox00000000, Ox00000008, Ox00020000, Ox00000000 }, /* S2PP_C_REG. */
{ Ox00000000, Ox00000001, Ox00000000, Ox00000000, Ox00000000 }, /* S2PP_REGS. */
{ Ox00000000, Oxfffffffe, Ox00000000, Ox00000000, Ox00000000 }, /* FLOAT_REGS. */
{ Ox00000000, Oxfffffffff, Ox00000000, Ox00000000, Ox00000000 }, /* S2PP_ACC_REG. */
{ Ox00000000, Ox00000000, Ox00000001, Ox00000000, Ox00000000 }, /* ALTIVEC_REGS. */
{ Ox00000000, Ox00000000, Oxffffe000, Ox00001fff, Ox00000000 }, /* ...
/* ALL_REGS. */
{ Oxfffffffff, Oxfffffffff, Oxfffffffff, Oxffffffff }}
```

Each hexnumber in these arrays can be viewed as a bit mask where the least significant bit is the first register, the next higher order bit the second register and so on. As a number is 32-bit, it masks 32 registers. Subsequent numbers start where the previous one ended, therefore are registers 32 through 63 (32 is the 33rd register) masked by the second number.

Therefore does 0xfffffffe mask all registers except for the 32nd which is masked by 0x00000001.

One can see that FPRs are masked completely as FLOAT_REGS between definition of s2pp registers. Subsequent entries must not me subsets of previous masks but may extend these. Also should higher order bits follow lower order bits. Since we also added a register index which was not masked before, we also have to change some subsequent masks accordingly.

There exist macros for register classes as well, which we also need to implement. Although we only need this for general s2pp registers.

As all registers are specified we now have to decide on short names, that are used in assembly. Normally these are the same as the constraints that refer to these registers and an integer.

The constraints are:

```
kv for S2PP_REGS, the vector registers
kc for S2PP_C_REG, the conditional register
ka for S2PP_ACC_REG, the accumulator
```

k was chosen as the first character of s2pp constraints because there are very few letters left which are not used as constraints already. k is the first of those and can be somewhat associated with the nux ("nuks"). The second character is the respective first letter of a register type.

Register names are defined in rs6000.h.

```
#define ADDITIONAL_REGISTER_NAMES \
{
    ...
    {"kc", 32}, {"kv0", 33}, {"kv1", 34}, {"kv2", 35}, \
    ...
    {"kv27", 60}, {"kv28", 61}, {"kv29", 62}, {"kv30", 63}, \
    {"kc", 64}, {"ka", 65}
}
```

The strings are names for registers and the integers are their indexes.

After we defined these names we can also define the according constraints in constraints .md

```
(define_register_constraint "kv" "rs6000_constraints[RS6000_CONSTRAINT_kv
    ]"
    "s2pp vector register")
(define_register_constraint "kc" "rs6000_constraints[RS6000_CONSTRAINT_kc
    ]"
    "s2pp conditional register")
(define_register_constraint "ka" "rs6000_constraints[RS6000_CONSTRAINT_ka
    ]"
    "s2pp accumulator")
```

The first string is the register constraint's name and the second string will be assigned a register class later in rs6000.c. The last string is only for documentary purposes.GCC (2017e)

Before we can assign register classes though, we must modify an enumeration in rs6000.

The last step towards completing the register implementation is assigning register classes and register types to indexes in rs6000_init_hard_regno_mode_ok.

Register types are also defined in rs6000.c and help classifying register classes.

```
enum rs6000_reg_type {
    ...
    FPR_REG_TYPE,
    S2PP_REG_TYPE,
    ...
    S2PP_C_REG_TYPE,
    S2PP_C_REG_TYPE,
    ...
};
```

```
#define IS_STD_REG_TYPE(RTYPE) IN_RANGE(RTYPE, GPR_REG_TYPE,
   S2PP_REG_TYPE)
#define IS_FP_VECT_REG_TYPE(RTYPE) IN_RANGE(RTYPE, VSX_REG_TYPE,
   S2PP_REG_TYPE)
static void
rs6000_init_hard_regno_mode_ok (bool global_init_p)
 for (r = 32; r < 64; ++r)
   rs6000_regno_regclass[r] = FLOAT_REGS;
  if (TARGET_S2PP){
   for (r = 32+1; r < 64; ++r)
     rs6000_regno_regclass[r] = S2PP_REGS;
   rs6000_regno_regclass[32] = NO_REGS;
 reg_class_to_reg_type[(int)S2PP_REGS] = S2PP_REG_TYPE;
  if (TARGET_S2PP)
   {
   reg_class_to_reg_type[(int)FLOAT_REGS] = NO_REG_TYPE; //S2PP_REG_TYPE
   reg_class_to_reg_type[(int)S2PP_REGS] = S2PP_REG_TYPE; //
       S2PP\_REG\_TYPE;
   rs6000_regno_regclass[S2PP_COND_REGNO] = S2PP_C_REG;
   rs6000_regno_regclass[S2PP_ACC_REGNO] = S2PP_ACC_REG;
   reg_class_to_reg_type[(int)S2PP_C_REG] = S2PP_C_REG_TYPE; //
       S2PP_REG_TYPE;
   reg_class_to_reg_type[(int)S2PP_ACC_REG] = S2PP_ACC_REG_TYPE; //
       S2PP\_REG\_TYPE;
  if (TARGET_S2PP)
   rs6000_vector_unit[V8HImode] = VECTOR_S2PP;
   rs6000_vector_mem[V8HImode] = VECTOR_S2PP;
   rs6000_vector_align[V8HImode] = align32;
   rs6000_vector_unit[V16QImode] = VECTOR_S2PP;
   rs6000_vector_mem[V16QImode] = VECTOR_S2PP;
   rs6000_vector_align[V16QImode] = align32;
   }
  if (TARGET_S2PP){
   rs6000_constraints[RS6000_CONSTRAINT_kv] = S2PP_REGS;
   rs6000_constraints[RS6000_CONSTRAINT_kc] = S2PP_C_REG;
   rs6000_constraints[RS6000_CONSTRAINT_ka] = S2PP_ACC_REG;
 }
```

Every index in rs6000_regno_regclass[] is given a register class which corresponds to the register of that index and afterwards each register class is assigned a register type in reg_class_to_reg_type[].

```
for (r = 32+1; r < 64; ++r)
    rs6000_regno_regclass[r] = S2PP_REGS;
...
rs6000_regno_regclass[S2PP_COND_REGNO] = S2PP_C_REG;
rs6000_regno_regclass[S2PP_ACC_REGNO] = S2PP_ACC_REG;
reg_class_to_reg_type[(int)S2PP_REGS] = S2PP_REG_TYPE;
...
}</pre>
```

This is done only when TARGET_S2PP is true and substitutes the FLOAT_REGS at indexes 33 through 63 with S2PP_REGS and also adds the conditional and accumulator registers. To complete the process the register classes are assigned a respective register type which was added to the enumeration rs6000_reg_type before that. It is important to note that the s2pp normal register type was also added to the list of standard register types (again as a macro), as s2pp registers are meant to act like normal registers and also to the floating point/vector register types which is necessary as they are handled differently later in the source file.

Register can also be fixed () according to compiler flags which is done in rs6000_conditional_register_usage. E.g. when the flag for soft-float is set, the compiler calls all FPRs fixed (ergo not available), which is contrary to our plan of using these registers. That is the reason why we add the alternative condition that the s2pp flag may not be set for this to happen. Instead we fix the registers 32 and 64 which are the used otherwise (kc and ka).

For once we add the new registers to rs6000_debug_reg_global in order for them to be listed when printing out debug information. This is done the same way AltiVec registers are implemented and fairly easy. The same applies for pretty much all debugging support (THIS IS NOT gdb) therefore we do not mention additions to debugging, but in general these were done.

Now that we fulfilled all measures of adding the registers to rs6000.c we need to add them to the list of possible asm operands in ppx-asm.c where a simple definition like #define k0 1 is enough if this is done for each register name. This tells the compiler to substitute k0 for 1 as only pure integers are valid machine operands.

The last step to completing register usage for the back-end is adding fitting predicates in predicates.md. We can copy these from the respective AltiVec predicates and change both the vector specific macros and the predicates' names. The affected predicates are:

s2pp_register_operand is a vector that is stored in a s2pp register

easy_vector_constant returns 1 if the operand is a constant vector and now also tests for s2pp vectors and calls a new function easy_s2pp_constant

indexed_or_indirect_operand applies for indexed or indirect operands (e.g. memory addresses in registers) and now supports the case of a s2pp vector operand as for

previous section

AltiVec vectors

s2pp_indexed_or_indirect_operand is the same but only for s2pp vectors, not AltiVec

If one wants to add own predicates, GCC offers a manuals entry GCC (2017m).

The easy_s2pp_constant function checks if an operand is "splittable" which means that all elements are the same and thus can be generated through a split instruction. To check this the operand is analyzed sequentially if either of the two available splats can synthesize the same operand. This was also transferable from an AltiVec equivalent with the exception that one vector mode had to be removed. prologue epilogue Additionally the similar function gen_easy_s2pp_constant could also be transfered as it works the same way but generates RTL code that will create a constant vector operand from a different operand.

Now as we have completely added the new registers, we must take care of some consequences this caused. Mainly our problem is that we reused the floating point registers and did not mark them as fixed. For this reason we must scan the source files for <code>FP_REGNO_P(N)</code> and add an exception with && !TARGET_S2PP when it is necessary. This is especially the case when dealing with hard registers and having the compiler emit register moves.

earlier

3.4 Prologue and Epilogue

Also we have a second problem that reusing FPR indexes causes. Since there is an ending number of registers the compiler can use for saving values, and this number is also reduced by the amount of fixed registers, the compiler occasionally stores values in memory before calling a function that needs some of the available registers by calling a so called "prologue" (GCC, 2017i). The compiler then restores the registers after the function has finished through an "epilogue". To understand the principles of these we will take a look at how the back-end saves registers. Before the compiler saves the registers it must check which registers need to be saved. It then sets a variable for each register type accordingly. In rs6000_emit_prologue the compiler checks for these variables and starts saving the respective registers. Since the compilers looks for register numbers instead of types, we need to alter the case for FPRs and add a target flag, which activates these lines of code:

The compiler first loops over every save vector register and checks if the register needs to be stored. Then an offset is computed that takes the current frame offset and adds 16 bytes(this is the register size) for every register of this type. savereg and areg are two kinds of register that will later serve as operands. savereg is the vector register we want to save and areg will we the GPR operand needed to use vector memory instructionsHence areg loads the offset just calculated through emit_move_insn. emit_move_insn will then insert an insn to the IR that moves the second argument to the first. Now we can create a complete memory operand mem that takes offset in areg and frame_reg_rtx, which is the register holding the frame pointer to wheres all registers are saved, and combines them to a single operand. As both register and memory are specified the compiler can emit a move insn that stores savereg to mem. Finally rs6000_frame_related handles the insn which was just created and performs additional customizations which are needed as the moves belong to a function call. After the functions code has been compiled the back-end invokes rs6000_emit_epilogue which uses the same functions as the prologue but restores the registers from memory. Of course this function can not work on its but needs other functions that set parameters and prepare statements as well. These functions were also extended by adding conditional cases for s2pp that mostly agree with the respective AltiVec cases. An rtx, which was a type often used in the previous listing, is short for RTL expression and can be used by insns as an argument. RTL expressions can also contain information on how the operand is to be constructed as this allows chaining of operations.

3.5 Reload

As hinted in chapter 2 reload is a now deprecated process in GCC that mainly performs register allocation. Obviously we need to add special handling of vector registers to reload because the registers we just added to the back-end must be used somehow. We thus get back to S2PP_REGS which were the normal vector register form earlier. As reload is capable of moving the contents of registers, we must specify that s2pp's registers are not compatible with GPRs or any other registers and also that storing/loading registers takes two GPRs that hold the memory address. Because registers are quite different in their specifications and reload could possibly ask for any combination of source/destination register we declare only registers moves between s2pp registers only or between s2pp registers and memory valid. This also creates the need for checking the register class of an RTL expression and eventually correcting the register class. Additionally as reload does not support the addressing mode which AltiVec and s2pp both use, we must rearrange indirect addresses the same way AltiVec does. At last we also need to validate the mode which is used. All of this is done in a set of rs6000_secondary_reload_ functions which need to be modified.

fxvstax and fxvlax

3.6 Built-ins and Machine Instructions

Basically the back-end is now almost compatible with s2pp vector instructions. The only thing that is left is specifying the machine instructions which move registers or access memory. We therefore add a machine description file s2pp.md to the back-end which will contain all available vector instructions. On which is *s2pp_mov<mode>:

```
(define_insn "*s2pp_mov<mode>"
  [(set (match_operand:FXVI 0 "nonimmediate_operand" "=Z,kv,kv,*Y,*r,*r,
     kv.kv")
   (match_operand:FXVI 1 "input_operand" "kv,Z,kv,r,Y,r,j,W"))]
  "VECTOR_MEM_S2PP_P (<MODE>mode)
  && (register_operand (operands[0], <MODE>mode)
   || register_operand (operands[1], <MODE>mode))"
   switch (which_alternative)
   {
   case 0: return "fxvstax %1,%y0";
    case 1: return "fxvlax %0,%y1";
    case 2: return "fxvsel %0,%1,%1";
    case 3: return "#";
    case 4: return "#";
    case 5: return "#";
    case 6: return "fxvsel %0,0,0";
    case 7: return output_vec_const_move (operands);
    default: gcc_unreachable ();
 }
  [(set_attr "type" "vecstore, vecload, vecsimple, store, load, *, vecsimple, *"
     )1)
```

We explained the basics of insn definition earlier in section ?? thus we will only explain this shortly. The name is proceeded by an asterisk that renders the name not accessible directly because this inso shall only be referred to by the RTL sequence that follows. The sequence is fairly simple and states that operand 0 is set by operand 1. It only gets interesting when taking a look at the constraints which build pairs for each operand and are separated by commas. The first pair for example (=z and kv) tells the compiler that a memory which is accessed by an indirect operand will be set by the contents of a vector register (this is the first use of our new constraint. Which machine instruction is used for each pair of constraints is stated in the output template which may also be in C form. Each case is indexed according to the position in the list of constraints so we take a look at case 0 where we see the matching machine instruction for storing a vector in memory fxvstax. The second operand contains also a character besides its number which is an operand modifier GCC (2017c) that will cause the operand o to be split into two address operands. Besides the vector load instruction fxvlax we also note the fxvsel instruction which is used to move one vector register to another (pair kv and kv) and case 6 which moves the contents of vector register 0 (this register is all 0s) and thereby nulls that register. The constraint j is the respective constraint for a zero vector.

But still there exist instruction which are not specified in detail but only by "#". A # is the equivalent to stating that there is no instruction which can perform the instruction which is described by the RTL above. This causes the compiler to look for different RTL that has the same effect but also has a machine instruction.

This process is called "insn splitting" and can also be used for optimization. A developer may also define which RTL statements are equivalent by using define_split which is documented in GCC (2017h). As there exist splits for cases 3 through 5 in AltiVec, we may not define splits ourself.

Splitting insns is quite common for the GCC back-end because splitting insns with unspecific constraints allows for easier generation of code, since the back-end will search for code that fits the operands of the instruction which is called in the source files. Even s2pp_mov is mainly used by calling a general vector move insn in vector.md that has the same RTL code without any constraints and then is split. We only need to add the s2pp vector mode macro to the condition of the insn which is specified through define_expand "mov<mode>. Expanding an insn which is done for this code basically follows the principle of splitting and goes even further in not giving the option for a machine instruction at all but relies on matching RTL in some machine description of the back-end. Detailed information can be acquired in GCC (2017f).

As this is done for register moves is general we will do the same for specific loads and stores, by adding mode checking in vector.md and adding a matching insn to s2pp.md.

Beside adding the other insns we also need to add the function rs6000_address_for_s2pp which converts a standard address to an s2pp compatible form. This code could be taken from an AltiVec equivalent since both vector units share the same form of memory referencing.

Now before we continue to other insns, we shall go back to s2pp_mov and take a look at case 7 which applies for constant vectors. Constant vectors which have a constant value that does not depend on a register thus is known at compile time. GCC will look for such vectors and check if these vectors can be splatted (this means all vector elements have the same value). This is a relict of AltiVec which offers a special splat instruction that takes a constant immediate value as operand. We kept the function since we can achieve a similar effect for constant zero vectors by moving the zero register. To distinguish between cases where this applies, we use the function output_vec_const_move() which is also used by AltiVec and implemented similar code to the existing AltiVec code but reduced this to the null vector case and emit a # for splitting otherwise.

Since we are now missing an instruction to use this split we will create a split ourselves which converts the immediate splat into a normal splat:

```
(define_split
  [(set (match_operand:FXVI 0 "s2pp_register_operand" "")
    (match_operand:FXVI 1 "easy_vector_constant" ""))]
  "TARGET_S2PP && can_create_pseudo_p()"
  [(set (match_dup 2) (match_dup 3))
    (set (match_dup 0) (unspec:FXVI [(match_dup 2)] UNSPEC_FXVSPLAT))]
  "{
    operands[2] = gen_reg_rtx (SImode);
    operands[3] = CONST_VECTOR_ELT(operands[1], 1);
    }")
```

We split the upper RTL sequence which moves a constant vector to a vector register onto the bottom sequence which inserts an intermediate step. match_dup n means that the operand should match the operand with the same index. The C code that follows specifies the newly added operands 2 and 3 further and converts operand 1 into a single integer element because all values are the same. The second RTL sequence uses the newly created integer and moves it to a GPR which then is splatted into a vector register. An unspec operator together with unspec_... tells the compiler that the operation is not specified but has a name to distinguish is from other unspecified operations.

is the insn the split refers to.

After we finally added memory instructions we can also implement them in rs6000.c. In rs6000_init_hard_regno_mode_ok we assign the code for store and load instructions to the two supported modes in case the target flag is set but do not specify any others.

All that is left now are intrinsic functions that make use of the memory instructions. Although by now the compiler would already support asm usage as shown in 2.3.2 and which we will get back to later on. Still we do not want to stop there and also add intrinsic functions to the back-end. This is done through several steps that were also described in an internship report *Heimbrecht* (2017). Therefore we will only describe this briefly and refer to the report at times.

First we start defining insort for each vector instruction that is listed in *Friedmann* (2016). In order to allow access to the synram we implement insus that work similar to fxvstax and fxvlax and are called fxvoutx and fxvinx. All of these insns exist with different conditionals and are named accordingly because load and store insns are hard to implement with an additional argument that is the conditional. Simple arithmetic instructions exist in multiple versions that either support conditional execution or do not. This is due to a problem that was discovered only recently with the PPU. As tests revealed the conditional execution of arithmetic instructions works improperly and in case a condition does not apply the result of a previous instruction is written to the first operand. Normally the operation should leave the contents of the operand untouched instead. For this reason we implement a workaround through insn splits that utilizes fxvselect and its conditional execution as this does work as intended. Though we still offer arithmetic operations without splits as this saves a clock cycle in comparison to having an additional fxvselect instruction. Besides those simple arithmetic operations, fxvadd..., fxvsub... and fxvmul..., there also exist more complex operations that make use of the accumulator. As of now these instructions should not be used with conditionals as further testing is imminent and it is not clear whether those conditionals would work. Besides that does an extra instruction render the advantages of an accumulator meaningless. Nonetheless do we implement those accumulator instructions together with a conditional argument which would allow for easier testing later on. Also does the additional operand not influence the performance of the instruction in a bad manner since for the conditional of the instruction works the same as if the conditional was true for all elements.

We will refer back to this when discussing the results of extending the back-end.

Since this completes the insns we can go on and create built-ins in rs6000-builtins.def from these insns. First though we must add macros that makes adding intrinsics easier. The exact definition of those macros is described for AltiVec built-ins in *Heimbrecht* (2017) but we can easily transfer those for s2pp by adding the RS6000_BTM_S2PP built-in mask which is identical with the target mask. We then use the s2pp built-in macros to create built-in definitions for each insn and also each mode (halfword or byte). Most built-ins follow the scheme of a normal function that has a result and a certain number of arguments. Btu there exists a number of insns that do not produce an output as they set the accumulator or the conditional register. These instructions need special handling and thus are defined as special built-ins.

Besides defining built-ins we also define overloads. These are used to differ intrinsics through the types of their arguments later on what makes using them easier and stops false usage. Overloads are also further explained in *Heimbrecht* (2017) As we are adding overloads we can put them to use in rs6000-c.c where overloads and built-ins are connected. This is done through structures that combine the built-in and overload names with a return type and up to three arguments.

To actually make use of these structures, we will add a function to rs6000-c.c that resolves the overloaded built-ins and is again built upon an AltiVec function that does the very same. Therefore we must tell the back-end which functions to use by making a target dependent decision in rs6000.h which overload-resolving function is handling overloads in general. Also we need a functions in rs6000.c that handle built-ins in general. First we create a new function s2pp_expand_builtin which is invoked by rs6000_expand_builtin. This function handles all special built-ins that belong to s2pp and picks expander functions according to their name. We therefore must create those expander functions that take care of certain kinds of built-ins. One such group are memory intrinsics that handle explicit memory addressing and also apply to synram intrinsics. These expanders are needed because of the special way that memory is accessed through indirect register referencing. As for the operand modifiers we can use the same implementation that AltiVec uses but create a new function in case improvements may become necessary at some point in time.

Besides these expander functions we additionally create a new kind of expander function that did not exist before s2pp. As there is a great number of instructions that do not return any values because they write the accumulator or the conditional registers, we create expander functions for various numbers of arguments that each do not handle a return operand. These functions which were called s2pp_expand_unaryx_bultin, s2pp_expand_binaryx_bultin and s2pp_expand_ternaryx_bultin otherwise behave quite similar.

Now that we are already handling special built-ins we need to define those builtins in rs6000.c as well. s2pp_init_bultins takes care of that as it is a series of define_builtin functions which must be written explicitly in contrast to normal builtin functions, where this is done automatically.

We did not mention so far the special case of three other built-in function that belong to the group of special built-ins as well but differ in how the RTL code/machine instructions are generated. vec_ext, vec_init and vec_promote describe functions which do not belong to a specific vector instruction but are compiler-constructed sequences of machine instructions that correspond to a certain action on a vector which is mainly performed in memory. These functions are inspired by AltiVec's implementation which easily was transferable to s2pp.

Finally we conclude on built-ins by defining alternative names for built-in functions in s2pp.h.

A complete list of all intrinsic functions that the compiler supports at the time this thesis was written is available in the appendix ??.

? target pragmas compiler anweisung stack boundary -> put this together frame offsetr stackoffset fix pck instructions

4 Results and Applications

Now that the GCC back-end supports s2pp, we want to examine features and early applications of this.

So far the compiler back-end can be built into a working compiler which creates working machine files for the PPU. This newly built compiler also supports the use of -mcpu=nux and -ms2pp target flags and a header file named s2pp.h which can be included the same way GCC standard header files are included. Target flags and header file together will this allow for using the vector attribute which creates vector variables of different types.

These vector variables can serve as arguments for implemented s2pp intrinsic functions that cover every vector instruction which is available on nux. Additionally the new intrinsics support type detection and map automatically to the according machine instruction for each vector type if this is demanded by the user.

When using this, assigning registers as well as memory is done automatically and does not need for user interaction. Despite the different bus, the back-end can also accesses the synapse array through special intrinsics. Specifically the intrinsics fxv_inx and fxv_outx allow to access the synapse array and load/store variables from/to there.

As many of the mentioned intrinsics as possible were designed similar to existing intrinsics for AltiVec and use the vec_ prefix besides th fxv_ prefix. This was done to include both, users that are accompanied to the existing vector macros and new users that are somewhat familiar with AltiVec.

In Addition to intrinsics the compiler also supports coding in asm with vector instructions. In contrast to before the user does not need to choose hard registers or implement store and load instructions, as this is done by the compiler for asm as well. This is possible through the addition of the kv constraint that marks vector registers as r does for GRPs. Overall asm for nux became more intuitive than it had been before.

This will ultimately make it easier to combine low-level coding in high-level programs if this is ever needed.

The new back-end also supports the use of global functions that support simple function calls.

First tests which conducted during extension development, made use of intrinsic over macros and produced working machine code as well as correct results for small examples. More complex tests will be discussed in 5 David Stöckel further implemented a small series of tests which used a newly implemented unit testing framework (libnux) along intrinsics for nux in order to conduct high-level software tests. Through these early test, he was able to find a bug which previously was not known and could be identified as undocumented behavior of the nux for conditional execution of arithmetic instructions. In the end it was possible to implement a workaround for this which was already mentioned

in ?? that has minimal influence on performance and code size.

He also used the nux back-end for first experiments that made use of different functionalities of nux. One experiment had the PPU automatically increasing the synaptic weights of all synapses up to a maximum value and then decreasing the weights the same way. Another experiment updated all synaptic weights depending on spike counts to create homeostasis and yet a different experiment implemented simple STDP that relies on accessing the hardware correlation of HICANN-DLS. As all these experiments still used asm instead of intrinsics we have yet to encourage the use of intrinsics over asm in the future. Nonetheless did the nux back-end simplify usage of asm as described earlier and allowed the user to focus on tests rather than low-level operand management.

All tests used a version of GCC that was patched and then integrated to the waf build system of the group. Hence a patched cross-compiler is already commonly available. As pointed out in the beginning of this thesis we also wanted to support optimization of vector specific machine code. As for now this could be achieved for simple optimization (-01) which mainly reduces memory access to a minimum but keeps execution order. This still gives readable assembly code and should achieve similar performance to code written with the former standard macros.

This is due to the way these macros were implemented. Since the compiler did not recognize s2pp instructions before, asm statements had to be volatile to prevent vector instructions to be removed by optimization as volatile statements are protected from any optimization. Thus only code around vector instruction was affected by optimization and performance of vector instructions was up to the user's skill. Optimization going beyond (-01) is yet to be tested for reliability with the new back-end which will be discussed later on.

Besides these rather internal improvements to s2pp usage we want to point out the main advantage of the new back-end for users of nux. The main goal of this thesis was simplify programming for nux and listing ?? shows this for an exemplary program. We compare an existing test program that showcases the abilities of nux to an equivalent program that uses intrinsics instead of C macros.

write an analysis of this

supports functions

5 Discussion and Outlook

To summarize this thesis we want to go back to the initial motivation for this work. The future of analogue neuromorphic systems shows many possibilities that utilize the advantage over exiting simulation environments.

Extensive experiments that would exceed the boundaries of software based simulations regarding experimental time and simulated time are possible and as hardware improves their complexity will do the same. At the same time these analogue systems offer easy manipulation of different parameters during experiments without a decrease in performance. This encourages users to create new and daring test scenarios that would not be realizable for software simulations or ineffective. Even more experimental approaches involve interfaces to virtual environments and running hardware "in-the-loop".

A key feature of neuromorphic systems could be longterm experiments at high speeds that could also run on their own and apply plasticity at experimental speeds. This would give an immense amount of possible applications for the future but also generates new requirements to achieve this.

The PPU may be a key element on the way there as experiments that so not utilize the PPU usually run slower and are less flexible than PPU based experiments. This is due to the performance of vector processing that the PPU offers because of its customizations and the immediate access to the analogue system as both are combined in the HICANN-DLS. As of now the PPU offers fast calculation of simple plasticity rules and thus flexibility when compared to static systems that have predefined setting that are only updated in between experimental runs. Although the PPU can do this for only so much complexity as the hardware is quite limited, it fulfills he requirements for simple optimization, implementing reduced virtual environments that need high latency and managing calibration of the system. It also gives the possibility of running experiments without supervision as the PPU could collect data as well.

All of this needs code that is at the same efficient and favorably of small size. At the same time software should be easy to write in order to appeal for many users and raise interest for these systems. One way to get all of this is working compiler support where the compiler translates simple code into optimized machine code that is specifically created for this target. Creating a stand-alone compiler that supports the PPU's custom architecture could therefore improve development for the PPU noticeably. An equally effective but maybe more complete approach to this is extending the back-end of an existing compiler that also offers different tools for development and multiple front-ends. As this is the case for GCC this thesis dealt with the task of extending an existing back-end that already supported the core architecture of the PPU's nux architecture and implementing support for the custom s2pp vector extension .

This goal could be achieved to some degree as the back-end does support nux' vector

extension but however is still in a testing stage that hopefully will transition into the standard cross-compiler for the PPU in the near future.

For once the back-end needs testing as only this can show if it is reliable and may reveal bugs that were not obvious before. There even exist first test cases that aim for high-level software tests and already test single intrinsics and should be extended to more complex testing scenarios that involve various combinations of intrinsics with different arguments and dependencies as well as conditional branching and looping which tested on the PPU as well as in simulation. This may also find from eventual bugs or unexpected behavior in the architecture itself or in the compiler and overall improve reliability.

The most recent release of the GCC 4.9 release series dates only back to 2016 and though maintenance is officially discontinued? there exist newer bugs which were fixed through patches thanks to the active community behind GCC. Therefore it is possible—although unlikely—that internal compiler errors are caused by the original compiler instead of the back-end. It should be therefore considered if moving to a newer release—which is 4.9.4—made sense to reduce compiler liability to a minimum and focus solely on the back-end. There is also a number of tests for the AltiVec back-end extension that should be taken in consideration when implementing new nux tests.

Besides high-level testing we can also utilize the newly extended back-end for low-level testing of the architecture itself that is not pure assembly coding but utilizes the asm support of the back-end. Through this we were able to find undocumented undocumented behavior of the PPU when using conditional instructions which seemed like a bug in the back-end at first..

Since there exists software simulation for nux but only a small number of low-level test cases, the development of more tests should be focused as this leads to a well documented nux architecture which is necessary for reliable high-level usage. This should involve testing random combinations of instructions and operands which could be realized by a random code generator that works hand in hand with a simulation platform. The planned nux simulation on a FPGA would accelerate this development and also encourage continuous testing.

Creating such a comprehensive testing environment would allow to constantly test the reliability of generated code and different optimizations and thereby help establishing GCC with an extended back-end as the preferred compiler for nux.

Another feature that might help push the general usage of a patched cross-compiler is the availability of gdb for nux. As debugging PPU software right now is not possible with gdb it might be possible in the future but it is likely that more work on the back-end is necessary for this. Right now there have been no tests of gdb with the new back-end and other features such as optimization and testing are more important at the moment.

At most, only time will tell if the extended-GCC build will be used regularly and become the standard tool for nux development.

This depends on various factors besides what we already mention. GCC support for the POWER architecture, reimplementation of the GCC back-end and the future development of the nux architecture are also important. As the POWER architecture is well established and first systems with POWER9 under way we can safely assume that the POWER architecture will be supported by GCC for years to come. Also the radical reorientation of GCC by the GCC steering committee might seem unlikely we can still rely on existing older releases as newer versions of GCC rarely offer striking new features and older versions continue to receive patches although there are no longer officially maintained.

There exists an experimental build of GCC 7 with an early version of the s2pp back-end and also the latest binutils version by David Stöckel but this build has not been tested yet and only demonstrates the possibility of porting the back-end patch to different GCC releases if it ever became necessary.

Hence the most crucial development is that of the nux architecture. If it is ever decided that the nux is to be completely redesigned this would likely render the current backend pointless and one must start from scratch when creating compiler support for that architecture. Smaller changes however, i.e. adding a set of logical vector operations, may be supported by adding these to the machine description and creating intrinsics from this as described in ?? and (?).

The back-ends structure would also allow for adding custom intrinsics that can be composed from existing machine instructions through the machine description and RTL code.

Eventually the extended GCC back-end may be usable for many years and even longer if the back-end is maintained.

Besides getting future compiler support there are many features yet to come for the PPU: Adding new vector instructions to the instruction set as well as allowing for direct access to the memory of the FPGA that is connected are only two features that could help creating new experiments that were not possible by now and that may also profit from established compiler support. Also should gdb support help creating those applications on HICANN-DLS. Having established the prerequisites for code generation for the PPU we may also expect development in this particular area which further facilitates development of new experiments by many users.

Over all the PPU should get ever more capable over time and take care of different tasks like calibration, creating simple virtual environments, configuration of the system and also supervision of experiments.

Ultimately PPUs might be running independently on multiple systems, realizing experiments with large simulated networks or running standalone experiments for users in parallel. Still, the future of the PPU is welded by users, developers and the applications they for this innovative system, and giving them a functional compiler for this system is the tool that might come in handy at times.

Appendix

Acronyms

ADC Analogue Digital Converter

ALU Arithmetic Logic Unit

ASIP Application Specific Instruction set Processor

asm Assembly

CISC Complex Instruction Set Computer

CPU Central Processing Unit

CR Conditional Register

DLS Digital Learning System

DRAM Dynamic RAM

insn instruction

IR Intermediate Representation

FPGA Field Programmable Gate Array

FPR Floating Point Register

FPU Ploating Point Unit

GCC GNU Compiler Collection

GPP General Purpose Processor

GPR General Purpose Register

HICANN High Input Count Neural Network

ISA Instruction Set Architecture

LLVM Low Level Virtual Machine

LR Linker Register

5 Discussion and Outlook

LRA Local Register Allocator

MMU Memory Management Unit

MSB Most Significant Bit

nux alternative name for PPU

POWER Performance Optimization With Enhanced RISC

PPU Plasiticty Processing Unit

RAM Random Access Memory

RF Register File

RTL Register Transfer Language

RISC Reduced Instruction Set Computer

rs6000 RISC system/6000

s2pp synaptic plasiticity processor a.k.a PPU

SIMD Single Input Multiple Data

SPR Special Purpose Register

SRAM Static RAM

VE Vector Extension

VR Vector Register

VRF Vector Register File

VMX Vector Media eXtension

intrinsic name	use	d	data	ı types	c	effect
		d	vector signed char	В	c	
fxv_add vec_add	d = fxv_add(a,b)	same as a	vector unsigned char vector signed short vector unsigned short vector signed char	same as a		add a and b modulo element- wise and write the result in d
fxv_sub vec_sub	d = fxv_sub(a,b)	same as a	vector unsigned char vector signed short vector unsigned short	same as a		subtract b from a modulo element-wise and write the re- sult in d
fxv_mul vec_mul	d = fxv_mul(a,b)	same as a	vector signed char vector unsigned char vector signed short vector unsigned short	same as a		multiply a and b modulo element-wise and write the re-
fxv_addfs	d = fxv_addfs(a,b)	same as a	vector unsigned char vector unsigned char vector signed short	same as a		sult in d add a and b saturational
			vector unsigned short			element-wise and write the result in a
fxv_subfs	d = fxv_subfs(a,b)	same as a	vector unsigned char vector signed short vector unsigned short	same as a		subtract b from a saturational element-wise and write the re- sult in 4
fxv_mulfs	d = fxv_mulfs(a,b)	same as a	vector signed char vector unsigned char vector signed short vector unsigned short	same as a		multiply a and b saturational element-wise and write the re- sult in d
	fxv_stax(a,b,c)		vector signed char	int	vector signed char* signed char* vector unsigned char*	a is stored to memory address c + b
fxv_stax vec_st			vector unsigned char		unsigned char* vector signed short*	
			vector unsigned short		signed short* vector unsigned short* unsigned short	
			vector signed char		vector signed char* signed char*	
fxv_outx	fxv_outx(a,b,c)		vector unsigned char	int	vector unsigned char* unsigned char* vector signed short*	a is stored to synaptic address
			vector signed short		vector signed short* signed short* vector unsigned short* unsigned short	c + b
		vector signed char		vector signed char* signed char*	unsigned short	
fxv_lax		vector unsigned char		vector unsigned char* unsigned char*		a in mond from a second
vec_ld	d = fxv_lax(a,b)	vector signed short	int	vector signed short* signed short*		d is read from memory address a + b
		vector unsigned short		vector unsigned short* unsigned short		
		vector signed char		vector signed char* signed char*		
fxv_inx	d = fxv_inx(a,b)	vector unsigned char	int	vector unsigned char* unsigned char*		d is read from synaptic ad-
-	,-,	vector signed short		vector signed short* signed short*		dress a + b
		vector unsigned short	vector signed char	vector unsigned short* unsigned short		
fxv_sel	d = fxv_sel(a,b,c)	same as a	vector unsigned char vector signed short vector unsigned short	same as a	2-bit int	select element from a if c applies for that index otherwise select b, store the result in d
vec_extract	d = vec_exctract(a,b)	signed char unsigned char signed short unsigned short	vector signed char vector unsigned char vector signed short vector unsigned short	int		d is read from synaptic address a + b
vec_insert	d = vec_insert(a,b)	signed char unsigned char signed short	vector signed char vector unsigned char vector signed short	int		d is read from synaptic address a + b
		unsigned short signed char unsigned char	vector unsigned short vector signed char vector unsigned char			-
vec_promote	d = vec_exctract(a,b)	signed short unsigned short	vector signed short vector unsigned short	int		d is read from synaptic address a + b
vec_sh	d = fxv_sh(a,b)	signed char unsigned char	vector signed char vector unsigned char	int		d is read from synaptic ad-
fxv_sh		signed short unsigned short	vector signed short vector unsigned short			dress a + b
vec_splat_s16 :_splat_u16 \\ fxv_splatb	d = fxv_splatb(a)	signed char unsigned char	vector signed char vector unsigned char vector signed short	int		d is read from synaptic ad-
// ixv_spiatb		signed short unsigned short signed char	vector signed short vector unsigned short vector signed char			dress a + b
vec_splat_s8 c_splat_u8 \\ fxv_splath	d = fxv_splath(a)	unsigned char signed short unsigned short	vector unsigned char vector signed short vector unsigned short	int		d is read from synaptic address a + b
		signed char unsigned char	vector unsigned short vector signed char vector unsigned char			
fxv_cmp	fxv_cmp(a)	signed short unsigned short	vector signed short vector unsigned short	int		d is read from synaptic address a + b
fxv_mtac fxv_mtacfs	fxv_mtac(a)	signed char unsigned char signed short	vector signed char vector unsigned char vector signed short	int		d is read from synaptic ad- dress a + b
		unsigned short signed char	vector unsigned short			
fxv_addactacm fxv_addactacf	fxv_addactac(a)	unsigned char signed short unsigned short	vector unsigned char vector signed short vector unsigned short	int		d is read from synaptic address a + b
fxv_addacm fxv_addacfs	fxv_addac(a)	signed char unsigned char signed short	vector signed char vector unsigned char vector signed short	int		d is read from synaptic ad-
1Av_auuacis		unsigned short signed char	vector signed short vector unsigned short vector signed char			dress a + b
fxv_mam fxv_mafs	fxv_ma(a)	unsigned char signed short unsigned short	vector unsigned char vector signed short vector unsigned short	int		d is read from synaptic address a + b
fxv_matacm		unsigned short signed char unsigned char	vector unsigned short vector signed char vector unsigned char			
fxv_matacm fxv_matacfs	fxv_matac(a)	signed short unsigned short	vector signed short vector unsigned short	int		d is read from synaptic 53
fxv_multacm	fxv_multac(a)	signed char unsigned char signed short	vector signed char vector unsigned char vector signed short	int		4 is read from synaptic ad-
fxv_multacfs		unsigned short signed char	vector unsigned short			dress a + b
fxv_addtac	fxv_addtac(a)	unsigned char signed short	vector unsigned char vector signed short	int		d is read from synaptic ad- dress a + b
		unsigned short signed char	vector unsigned short	<u> </u>		
fxv_pckb1	d = fxv_pckbu(a,b)	unsigned char signed short unsigned short	vector unsigned char vector signed short vector unsigned short	int		d is read from synaptic address a + b
fxv_upckbl fxv_upckbr	d = fxv_upckbl(a,b)	signed char unsigned char	vector signed char	int		d is read from synaptic ad-
		signed short	vector signed short	I		dress a + b

List of nux Intrinsics

mnemonic	operands	description
add	RT, RA, RB	add RB to RA and store the result in RT
addi	RT, RA, SI	add SI to RA and store the result in RT
addis	RT, RA, SI	add SI shifted left by 16 bit to RA and store the result
		in RT
and	RA, RS, RB	RS and RB are anded and the result is stored in RT
b	target_addr	branch to the code at target_addr
ble	BF, target_addr	branch to the code at target_addr if BF is less or equal
blr		branch to the code at address in the linker register
cmp	BF, L, RA, RB	RA and RB are compared and the result (gt,lt,eq) is stored in BF, L depicts if 32-bit or 64-bit are compared
cmplwi	BF, RA, SI	RA compared logically wordwise with immediate SI and the result is stored in BF
and	RA, RS, RB	RS and RB are anded and the result is stored in RT
eieio	,,	enforce in-order execution of I/O
isync		instruction cache synchronize
la	RT, D(RA)	load aggregate D + RA into RT
li	RT, SI	load immediate value SI into RT
lis	RT, SI	load immediate value SI shifted left by 16 bit into RT
lbz	RT, D(RA)	load byte at address D+RA into RT, fill the other bits with zeros
lwz	RT, D(RA)	load word at address D+RA into RT, fill the other bits
	, - (,	with zeros
mflr	RT	move from linker register to RT
mr	RT, RA	move register RA to RT
nop		halts execution until the previous instructions are fin-
-		ished EDITHIS
rlwinm	RA, RS, SH, MB, ME	rotate left word in RS by immediate SH bits then and
		with mask which is 1 from MB+32 to ME+32 and 0 else,
		store to RA
stw	RS, D(RA)	store word from RS to address D+RA
stwu	RS, D(RA)	store word from RS to address D+RA and update RA
		to D+RA
sync		synchronize data cache
	ones to BBC book and sem website	

caption and reference to PPC book and asm website correct the table

Obviously the mnemonics follow a certain pattern that has letters which can be interchanged to alter the meaning of the mnemonic, some of these characters are:

- i indicates that the instructions uses an immediate value
- ${\tt b}\,$ stands for byte and references the size of the operand

- h stands for halfword and references the size of the operand
- w stands for word and references the size of the operand
- s indicates that one of the operands is shifted
- g, ge, 1, le, e stand for greater, greater or equal, less, less or equal and equal which is the possible content of the conditional register

There are also special operands which might occur in asm which behave like pointers:

- Q1(C) is equivalent to the lower order 16 bits of of C in the symbol table
- ©ha(C) is equivalent to the higher order 16 bits of c in the symbol table and minds the sign extension

Additionally there exist markers which are intended for debugging:

- .loc # # # marks a line of code (file, line, column) in the source file
- .LVL is a local label which can be discarded
- .LFB marks the begin of a function
- .LFE marks the end of a function
- .LCO is a constant of the literals table at position O

all these tables in the appendix

Notes

paper on current neuromorphic computing	1
other systems	4
bild synaptic array	4
figure synapse	5
add reference	6
figure classic architecture	6
should I keep this	7
inhaltlicher zusammenhang	8
keep this?	10
reference	10
reference	10
figure vector extension	11
add description to instruction cache	12
maybe rather an isntruction not a whole bus	13
keep this?	19
reference LLVM vs. GCC on ARM, LLVM vs. Gcc in EISC	20
examples of RTL code	23
MMU ?= memory controller PPC must handle syncing in compiler when I/O	
is added explain stack and frame pointer PPU instruction set	23
one example for repetitive use?	28
mention VSX?	29
in columns?	34
previous section	37
earlier	38
fxvstax and fxvlax	38
? target pragmas compiler anweisung stack boundary -> put this together frame	
offsetr stackoffset fix pck instructions	44
!listing!	45
write an analysis of this	46
supports functions	46
caption and reference to PPC book and asm website correct the table	53
all these tables in the appendix	54

Bibliography

Altivec manual, chapter.

Gcc wiki, accessed 2017.03.26, 2013.

- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., https://gcc.gnu.org/onlinedocs/gccint/index.html, 2017a.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 13.9 RTL Expressions for Arithmetic, 2017b.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 6.45.2 Extended Asm Assembler Instructions with C Expression Operands, 2017c.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.19 Instruction Attributes, 2017d.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.8 Operand Constraints, 2017e.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.15 Defining RTL Sequences for Code Generation, 2017f.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.2 Everything about Instruction Patterns, 2017g.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.16 Defining How to Split Instructions, 2017h.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 17.9.11 Function Entry and Exit, 2017i.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.23 Iterators, 2017j.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 13.6 Machine Modes, 2017k.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 8 Option specification files, 2017l.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.7 Predicates, 2017m.

- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 13.8 Registers and Memory, 2017n.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 13.15 Side Effect Expressions, 2017o.
- GNU Compiler Collection Internals Manual, Free Software Foundation Inc., 16.9 Standard Pattern Names For Generation, 2017p.
- Friedmann, S., nux Manual, 2016.
- Friedmann, S., J. Schemmel, A. Grübl, A. Hartel, M. Hock, and K. Meier, Demonstrating hybrid learning in a flexible neuromorphic hardware system, 2016.
- Heimbrecht, A., Internship report altivec intrinsics, 2017.
- Silbernagl, S., and A. Despopoulos, *Color Atlas of Physiology*, Basic sciences, Thieme, 2009.
- von Hagen, W., *The Definitive Guide to GCC*, section Introduction, pp. xxiii–xxix, second ed., Apress, 2006.

Statement of Originality (Erklärung):

I certify that this thesis, and the research to which it refers, are the product of my own work. Any ideas or quotations from the work of other people, published or otherwise, are fully acknowledged in accordance with the standard referencing practices of the discipline.
Ich versichere, dass ich diese Arbeit selbständig verfasst und keine anderen als die angegebenen Quellen und Hilfsmittel benutzt habe.
Heidelberg, March 2, 2017(signature)