

## SAS cabling rules, worksheets, and examples

**ONTAP Systems** 

NetApp April 04, 2022

This PDF was generated from https://docs.netapp.com/us-en/ontap-systems/sas3/overview-cabling-rules-examples.html on April 04, 2022. Always check docs.netapp.com for the latest.

### **Table of Contents**

SAS cabling rules, worksheets, and examples	1
SAS cabling rules, worksheets, and examples overview - shelves with IOM12 modules	1
SAS cabling rules - shelves with IOM12 modules	1
Controller-to-stack cabling worksheets and cabling examples for common multipath HA configurations	-
shelves with IOM12 modules	11
Controller-to-stack cabling worksheets and cabling examples for common AFF A200, AFF A220,	
FAS2600 series and FAS2700 configurations - shelves with IOM12 modules	19
Controller-to-stack cabling worksheet and cabling example for a quad-path HA configuration with two	
quad-port SAS HBAs - shelves with IOM12 modules	24
Controller-to-stack cabling worksheet template for multipathed connectivity - shelves with IOM12	
modules	26
Controller-to-stack cabling worksheet template for quad-pathed connectivity - shelves with IOM12	
modules	29
How to read a worksheet to cable controller-to-stack connections for multipathed connectivity - shelves	3
with IOM12 modules	32
How to read a worksheet to cable controller-to-stack connections for quad-pathed connectivity - shelve	<del>!</del> S
with IOM12 modules	34

### SAS cabling rules, worksheets, and examples

## SAS cabling rules, worksheets, and examples overview - shelves with IOM12 modules

To help you cable your SAS drive shelves with IOM12 modules to your storage system, you can use any of the available SAS cabling rules, worksheets, and examples content as needed.

#### SAS cabling rules

- Configurations
- · Controller slot numbering
- · Shelf-to-shelf connections
- Controller-to-stack connections
- Mini-SAS HD SAS optical cables

#### Cabling worksheets and examples

- · Common multipath HA configurations
- Common AFF A200, AFF A220, FAS2600, and FAS2700 configurations
- Quad-path HA configurations

#### Cabling worksheet templates

- Multipathed connectivity
- Quad-pathed connectivity
- How to read a worksheet for multipathed connectivity
- How to read a worksheet for quad-pathed connectivity

#### SAS cabling rules - shelves with IOM12 modules

Disk shelves with IOM12 modules can be cabled in HA pair and single-controller configurations (for supported platforms) by applying the SAS cabling rules: configuration rules, controller slot numbering rules, shelf-to-shelf connection rules, controller-to-stack connection rules, and if applicable, mini-SAS HD SAS optical cable rules.



The SAS cabling rules regarding controller slot numbering rules, shelf-to-shelf connection rules, and controller-to-stack connection rules described in this guide are the same rules that apply to all SAS disk shelves, whether they have IOM12, IOM6, or IOM3 modules. However, the information in this guide is specific to the unique characteristics of disk shelves with IOM12 modules and their use in supported configurations.

The SAS cabling rules regarding configuration rules and mini-SAS HD SAS optical cable rules described in this guide are specific to disk shelves with IOM12 modules.

The SAS cabling rules described in this guide balance SAS cabling between the on-board SAS ports and host bus adapter SAS ports to provide highly available storage controller configurations and meet the following goals:

- Provide a single, easily understood universal algorithm for all SAS products and configurations
- Yield the same physical cabling when generating the Bill of Materials (BOM), followed in the factory, and in the field
- · Are verifiable by configuration-checking software and tools
- Provide maximum possible resilience to maintain availability and minimize the reliance on controller takeovers

You should avoid deviating from the rules; deviations might reduce reliability, universality, and commonality.

#### **Configuration rules**

Disk shelves with IOM12 modules are supported in specific types of HA pair and single-controller configurations.

- HA pair configurations must be cabled as multipath HA or quad-path HA configurations with the following exceptions:
  - AFF A200, AFF A220, FAS2600 series and FAS2700HA pair configurations (with external disk shelves)
    can be cabled as single-path HA configurations to support connectivity to an external SAS tape backup
    device.
  - AFF A200, AFF A220, FAS2600 series and FAS2700HA pair configurations do not support quad-path HA connectivity.
- Single-controller configurations must be cabled as multipath or quad-path configurations, with the following exceptions:
  - FAS2600 series single-controller configurations (with external disk shelves) can be cabled as single-path configurations.
    - Because the internal storage uses single-path connectivity, ONTAP issues occasional warnings that mixed paths are detected. To avoid these warnings, you can use single-path connectivity to the external disk shelves. Additionally, you can use single-path connectivity when an external SAS tape backup device is used.
  - FAS2600 series single-controller configurations do not support quad-path connectivity.

#### Controller slot numbering rules

For the purpose of applying cabling rules across all supported HA pairs and single-controller configurations, a controller slot numbering convention is used.

- For all HA pairs and single-controller configurations, the following applies:
  - A SAS HBA in a physical PCI slot is defined as occupying PCI slot 1, 2, 3, and so on regardless of the slot's physical label on a controller.

For example, if SAS HBAs occupied physical PCI slots 3, 5, and 7, they would be designated as slots 1, 2, and 3 for the purpose of applying the SAS cabling rules.

• An onboard SAS HBA is defined as occupying PCI slot 0 just as it is labeled on a controller.

• Each port in each slot is defined just as it is labeled on a controller. For example, slot 0 with two ports is referred to as 0a and 0b. Slot 1 with four ports is referred to as 1a, 1b, 1c, and 1d.

In this document, slots and the slot ports are depicted as follows:



#### Shelf-to-shelf connection rules

When you have more than one disk shelf in a stack of disk shelves, they connect to each other through each SAS domain (IOM A and IOM B) using the applicable "standard" or "double-wide" shelf-to-shelf cabling. Your use of "standard" or "double-wide" shelf-to-shelf cabling depends on the configuration you have.

#### Standard shelf-to-shelf connectivity

- Standard shelf-to-shelf connectivity is used in multipath HA, multipath, single-path HA, and single-path configurations.
- Standard shelf-to-shelf connectivity is what is being used in existing SAS storage configurations with IOM3 and IOM6 modules: one cable connection is needed between disk shelves in each domain—domain A (IOM A) and domain B (IOM B).
- · Best practice is to use IOM ports 3 and 1 for standard shelf-to-shelf connectivity.

From the logical first shelf to the logical last shelf in a stack, you connect IOM port 3 to the next shelf's IOM port 1 in domain A and then domain B.

#### Standard shelf-to-shelf connectivity



#### Double-wide shelf-to-shelf connectivity

- Double-wide shelf-to-shelf connectivity is used in quad-pathed (quad-path HA and quad-path) configurations.
- Double-wide shelf-to-shelf connectivity requires two cable connections between disk shelves in each domain—domain A (IOM A) and domain B (IOM B).

The first cable connection is cabled as standard shelf-to-shelf connectivity (using IOM ports 3 and 1); the second cable connection is cabled as double-wide shelf-to-shelf connectivity (using IOM ports 4 and 2).

From the logical first shelf to the logical last shelf in a stack, you connect IOM port 3 to the next shelf's IOM port 1 in domain A and then domain B. From the logical first shelf to the logical last shelf in a stack, you connect IOM port 4 to the next shelf's IOM port 2 in domain A and then domain B. (IOM ports cabled as double-wide connectivity are shown with blue.)

#### Double-wide shelf-to-shelf connectivity



#### Controller-to-stack connection rules

You can correctly cable the SAS connections from each controller to each stack in an HA pair or in a single-controller configuration by understanding that SAS disk shelves use software-based disk ownership, how controller ports A/C and B/D are connected to stacks, how controller ports A/C and B/D are organized into port pairs, and how AFF A200, AFF A220, FAS2600 series and FAS2700 system ports 0b and 0a are connected to stacks.

#### SAS disk shelf software-based disk ownership rule

SAS disk shelves use software-based disk ownership (not hardware-based disk ownership). This means that disk drive ownership is stored on the disk drive rather than it being determined by the topology of the storage system's physical connections (as it is for hardware-based disk ownership). Specifically, disk drive ownership is assigned by ONTAP (automatically or by CLI commands), not by how you cable the controller-to-stack connections.

SAS disk shelves should never be cabled using the hardware-based disk ownership scheme.

## Controller A and C port connection rules (for non AFF A200, AFF A220, FAS2600 series and FAS2700 configurations)

- A and C ports are always the primary paths to a stack.
- A and C ports always connect to the logical first disk shelf in a stack.
- A and C ports always connect to disk shelf IOM ports 1 and 2.

IOM port 2 is only used for quad-path HA and quad-path configurations.

- Controller 1 A and C ports always connect to IOM A (domain A).
- Controller 2 A and C ports always connect to IOM B (domain B).

The following illustration highlights how controller ports A and C connect in a multipath HA configuration with one quad-port HBA and two stacks of disk shelves. Connections to stack 1 are shown in blue. Connections to stack 2 are shown in orange.

## Port A and C connections (in a multipath HA configuration)



## Controller B and D port connection rules (for non AFF A200, AFF A220, FAS2600 series and FAS2700 configurations)

- B and D ports are always the secondary paths to a stack.
- B and D ports always connect to the logical last disk shelf in a stack.
- B and D ports always connect to disk shelf IOM ports 3 and 4.

IOM port 4 is only used for quad-path HA and quad-path configurations.

- Controller 1 B and D ports always connect to IOM B (domain B).
- Controller 2 B and D ports always connect to IOM A (domain A).
- B and D ports are connected to the stacks by offsetting the order of the PCI slots by one so that the first port on the first slot is cabled last.

The following illustration highlights how controller ports B and D connect in a multipath HA configuration with one quad-port HBA and two stacks of disk shelves. Connections to stack 1 are shown in blue. Connections to stack 2 are shown in orange.

## Port B and D connections (in a multipath HA configuration)



#### Port pair connection rules (for non AFF A200, AFF A220, FAS2600 series and FAS2700 configurations)

Controller SAS ports A, B, C, and D are organized into port pairs using a method that leverages all of the SAS ports for system resiliency and consistency when cabling controller-to-stack connections in HA pair and single-controller configurations.

· Port pairs consist of a controller A or C SAS port and a controller B or D SAS port.

A and C SAS ports connect to the logical first shelf in a stack. B and D SAS ports connect to the logical last shelf in a stack.

• Port pairs use all SAS ports on each controller in your system.

You increase system resiliency by incorporating all SAS ports (on an HBA in a physical PCI slot [slot 1-N] and on board the controller [slot 0]) into port pairs. Do not exclude any SAS ports.

- · Port pairs are identified and organized as follows:
  - a. List A ports and then C ports in sequence of slots (0,1, 2, 3, and so on).

For example: 1a, 2a, 3a, 1c, 2c, 3c

b. List B ports and then D ports in sequence of slots (0,1, 2, 3, and so on).

For example: 1b, 2b, 3b, 1d, 2d, 3d

c. Rewrite the D and B port list so that the first port in the list is moved to the end of the list.

Offsetting the order of the slots by one balances port pairs across multiple slots (physical PCI slots and on board slots) when more than one slot of SAS ports is available; therefore, preventing a stack from being cabled to a single SAS HBA.

d. Pair the A and C ports (listed in step 1) to the D and B ports (listed in step 2) in the order that they are listed.

For example: 1a/2b, 2a/3b, 3a/1d,1c/2d, 2c/3d, 3c/1b.



For an HA pair, the list of port pairs you identify for the first controller is also applicable to the second controller.

- When cabling your system, you can use port pairs in the order in which you identified them or you can skip port pairs:
  - Use port pairs in the order in which you identified (listed) them when all port pairs are needed to cable the stacks in your system.

For example, if you identified six port pairs for your system and you have six stacks to cable as multipath, you cable the port pairs in the order in which you listed them:

1a/2b, 2a/3b, 3a/1d,1c/2d, 2c/3d, 3c/1b

 Skip port pairs (use every other port pair) when not all port pairs are needed to cable the stacks in your system.

For example, if you identified six port pairs for your system and you have three stacks to cable as multipath, you cable every other port pair in your list:



When you have more port pairs than you need to cable the stacks in your system, the best practice is to skip port pairs to optimize the SAS ports on your system. By optimizing SAS ports, you optimize your system's performance.

Controller-to-stack cabling worksheets are convenient tools for identifying and organizing port pairs so that you can cable the controller-to-stack connections for your HA pair or single-controller configuration.

Controller-to-stack cabling worksheet template for multipathed connectivity

Controller-to-stack cabling worksheet template for quad-pathed connectivity

### AFF A200, AFF A220, FAS2600 series and FAS2700 controller 0b and 0a port connection rules to external disk shelves

The AFF A200, AFF A220, FAS2600 series and FAS2700 systems have a unique set of connection rules because each controller must maintain same domain connectivity between the internal storage (port 0b) and the stack. This means that when a controller is located in slot A of the chassis (controller 1) it is in domain A (IOM A) and therefore port 0b must connect to IOM A in the stack. When a controller is located in slot B of the chassis (controller 2) it is in domain B (IOM B) and therefore port 0b must connect to IOM B in the stack.



If you do not connect the 0b port to the correct domain (cross-connect domains), you expose your system to resiliency issues that prevent you from performing nondisruptive procedures safely.

- Controller 0b port (internal storage port):
  - Controller 1 0b port always connects to IOM A (domain A).
  - Controller 2 0b port always connects to IOM B (domain B).
  - Port 0b is always the primary path.
  - Port 0b always connects to the logical last disk shelf in a stack.
  - Port 0b always connect to disk shelf IOM port 3.
- Controller 0a port (internal HBA port):
  - Controller 1 0a port always connects to IOM B (domain B).
  - Controller 2 0a port always connects to IOM A (domain A).
  - Port 0a is always the secondary path.
  - Port 0a always connects to the logical first disk shelf in a stack.
  - Port 0a always connect to disk shelf IOM port 1.

The following illustration highlights internal storage port (0b) domain connectivity for a AFF A200, AFF A220, FAS2600 series and FAS2700 multipath HA configuration:

## AFF A200, AFF A220, FAS2600, and FAS2700 series internal storage port (0b) domain connectivity



#### Mini-SAS HD SAS optical cable rules

You can use mini-SAS HD SAS optical cables—multimode active optical cable (AOC) cables with mini-SAS HD-to-mini-SAS HD connectors and multimode (OM4) breakout cables with mini-SAS HD-to-LC connectors—to achieve long distance SAS connectivity for certain configurations that have disk shelves with IOM12 modules.

 Your platform and version of ONTAP must support the use of mini-SAS HD SAS optical cables: multimode active optical cable (AOC) cables with mini-SAS HD-to-mini-SAS HD connectors and multimode (OM4) breakout cables with mini-SAS HD-to-LC connectors.

#### NetApp Hardware Universe

- SAS optical multimode AOC cables with mini-SAS HD-to-mini-SAS HD connectors can be used for controller-to-stack and shelf-to-shelf connections, and are available in lengths up to 50 meters.
- If you are using SAS optical multimode (OM4) breakout cables with mini-SAS HD-to-LC connectors (for patch panels), the following rules apply:
  - You can use these cables for controller-to-stack and shelf-to-shelf connections.

If you use multimode breakout cables for shelf-to-shelf connections, you can only use them once within a stack of disk shelves. You must use multimode AOC cables to connect the remaining shelf-to-shelf connections.

For quad-path HA and quad-path configurations, if you use multimode breakout cables for the shelf-to-shelf double-wide connections between two disk shelves, the best practice is to use identically paired breakout cables.

- You must connect all eight (four pairs) of the LC breakout connectors to the patch panel.
- You need to supply the patch panels and inter-panel cables.

The inter-panel cables must be the same mode as the breakout cable: OM4 multimode.

- Up to one pair of patch panels can be used in a path.
- The point-to-point (mini-SAS HD-to-mini-SAS HD) path of any multimode cable cannot exceed 100 meters.

The path includes the set of breakout cables, patch panels, and inter-panel cables.

• The total end-to-end path (sum of point-to-point paths from the controller to the last shelf) cannot exceed 300 meters.

The total path includes the set of breakout cables, patch panels, and inter-panel cables.

• The SAS cables can be SAS copper, SAS optical, or a mix.

If you are using a mix of SAS copper cables and SAS optical cables, the following rules apply:

- Shelf-to-shelf connections in a stack must be all SAS copper cables or all SAS optical cables.
- If the shelf-to-shelf connections are SAS optical cables, the controller-to-stack connections to that stack must also be SAS optical cables.
- If the shelf-to-shelf connections are SAS copper cables, the controller-to-stack connections to that stack can be SAS optical cables or SAS copper cables.

# Controller-to-stack cabling worksheets and cabling examples for common multipath HA configurations - shelves with IOM12 modules

You can use the controller-to-stack cabling worksheets and cabling examples to cable your HA pair as a multipath HA configuration.

- If needed, you can refer to SAS cabling rules for information about supported configurations, the controller slot numbering convention, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including the use of port pairs).
- If needed, you can refer to How to read a worksheet to cable controller-to-stack connections for multipathed connectivity.
- Cabling examples show controller-to-stack cables as solid or dashed to distinguish controller A and C port connections from controller B and D port connections.

	Controller-to-Stack Cable Type Key
Cable Type	Description
	<ul> <li>Connects controller A and C ports to the logical first disk shelf in a stack</li> <li>The primary path from a controller to a stack</li> </ul>
	<ul> <li>Connects controller B and D ports to the logical last disk shelf in a stack</li> <li>The secondary path from a controller to a stack</li> </ul>

• Cables in the cabling examples and their corresponding port pairs in the worksheets are color-coded to distinguish connectivity to each stack in the HA pair.

	C	Controller-to-Stack (	Cable Color Key
Cable	e Color	Connects to	From
	Dark blue	Stack 1	
	Orange	Stack 2	Each controller by a unique port pair
	Green	Stack 3	Each controller by a unique port pair
	Light blue	Stack 4	

 Worksheets and cabling examples show cabling port pairs in the order in which they are listed in the worksheet.

## Controller-to-stack cabling worksheets and cabling examples for multipath HA configurations with quad-port SAS HBAs

You can use the completed controller-to-stack cabling worksheets and cabling examples to cable common multipath HA configurations that have quad-port SAS HBAs. These controllers do not have onboard SAS ports.

#### Multipath HA with one quad-port SAS HBA and one single-shelf stack

The following worksheet and cabling example uses port pair 1a/1d:

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnectiv	vity		
		Calala	ha al'ala ala al	£1014-			Sta	cks		
Controller SAS ports	Controllers	Cable	to disk shel	TIOMS	1	2	3	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	10	1c				
A and C	2	First	В	1	1a	10				
					1 <sub>b</sub>	<del>1d</del>				
B and D	1	Last	В	3	1d	1b				
	2	Last	А	3		l ib				

#### Multipath HA configuration



#### Multipath HA with one quad-port SAS HBA and two single-shelf stacks

The following worksheet and cabling example uses port pairs 1a/1d and 1c/1b:

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnecti	vity		
		Calala		f IONA-			Sta	cks		
Controller SAS ports	Controllers	Cable	to disk shel	TIOMS	1	2	3	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	1a	1.0				
A and C	2	First	В	1	la l	1c				
					1 <sub>b</sub>	1d				
B and D	1	Last	В	3	1d	1b				
	2	Last	А	3						

#### Multipath HA configuration



#### Multipath HA with two quad-port SAS HBAs and two multi-shelf stacks

Four port pairs are available for this configuration: 1a/2b, 2a/1d, 1c/2d, and 2c/1b. You can cable port pairs in the order in which they are identified (listed in the worksheet) or you can cable every other port pair (skip port pairs).



When you have more port pairs than you need to cable the stacks in your system, the best practice is to skip port pairs to optimize the SAS ports on your system. By optimizing SAS ports, you optimize your system's performance.

The following worksheet and cabling example shows port pairs being used in the order in which they are listed in the worksheet: 1a/2b, 2a/1d, 1c/2d, and 2c/1b.

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnecti	ivity		
		Cabla		f IONA-			Sta	acks		
Controller SAS ports	Controllers	Cable	to disk shel	TIONS	1	2	3	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	10	2a	1c	2c		
A and C	2	First	В	1	1a	Zd	I IC	20		
					1 <sub>b</sub>	<del>2b</del>	1d	<del>2d</del>		
B and D	1	Last	В	3	2b	1d	2d	1b		
	2	Last	Α	3						

#### Controller



The following worksheet and cabling example shows port pairs being skipped to use every other one in the list: 1a/2b and 1c/2d.



If a third stack is added later, you use the port pair that was skipped.

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ned Cor	nnecti	vity		
		Calala		£1014-			Sta	icks		
Controller SAS ports	Controllers	Cable	to disk shel	TIOMS	$\bigcirc$	3 <del>2</del>	23	4	5	6
,		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	1a	2a	1.0	20		
A and C	2	First	В	1	l a	Za	1c	2c		
					1 <sub>b</sub>	<del>2b</del>	<del>1d</del>	<del>2d</del>		
B and D	1	Last	В	3	2b	1d	2d	1b		
	2	Last	А	3		lu	20	l ib		



## Controller-to-stack cabling worksheets and cabling examples for multipath HA configurations with four onboard SAS ports

You can use the completed controller-to-stack cabling worksheets and cabling examples to cable common multipath HA configurations that have four onboard SAS ports.

#### Multipath HA with four onboard SAS ports and one single-shelf stack

The following worksheet and cabling example uses port pair 0a/0d:

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnecti	vity		
		Cabla	ha aliah ah ah	f IONA-			Sta	cks		
Controller SAS ports	Controllers	Cable	to disk shel	TIOMS	1	2	3	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	0a	0c				
A and C	2	First	В	1	Ua	OC.				
					<del>0b</del>	<del>0d</del>				
B and D	1	Last	В	3	0d	0b				
	2	Last	А	3		UD				



#### Multipath HA with four onboard SAS ports and two single-shelf stacks

The following worksheet and cabling example uses port pairs 0a/0d and 0c/0b:

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnecti	vity		
		Calala		f IONA-			Sta	cks		
Controller SAS ports	Controllers	Cable	to disk shel	TIOMS	1	2	3	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	00	0c				
A and C	2	First	В	1	0a	00				
					<del>0b</del>	<del>0d</del>				
B and D	1	Last	В	3	04	0b				
	2	Last	А	3	Od					



#### Multipath HA with four onboard SAS ports, a quad-port SAS HBA, and two multi-shelf stacks

Four port pairs are available for this configuration: 0a/1b, 1a/0d, 0c/1d, and 1c/0b. You can cable port pairs in the order in which they are identified (listed in the worksheet) or you can cable every other port pair (skip port pairs).



When you have more port pairs than you need to cable the stacks in your system, the best practice is to skip port pairs to optimize the SAS ports on your system. By optimizing SAS ports, you optimize your system's performance.

The following worksheet and cabling example shows port pairs being used in the order in which they are listed in the worksheet: 0a/1b, 1a/0d, 0c/1d, and 1c/0b.

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnect	ivity		
		Cabla		f IONA-			Sta	acks		
Controller SAS ports	Controllers	Cable	to disk shel	TIONS	1	2	3	4	5	6
,		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	00	1a	00	1.0		
A and C	2	First	В	1	0a	Ia	0c	1c		
					<del>0b</del>	1b	0d	1d		
B and D	1	Last	В	3	1b	0d	1d	0b		
	2	Last	Α	3						

#### Controller




The following worksheet and cabling example shows port pairs being skipped to use every other one in the list: 0a/1b and 0c/1d.



If a third stack is added later, you use the port pair that was skipped.

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ned Cor	nnecti	vity		
		Calala		£1014-			Sta	icks		
Controller SAS ports	Controllers	Cable	to disk shel	TIOMS	$\bigcirc$	3 <del>2</del>	23	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	00	1a	0c	10		
A and C	2	First	В	1	0a	Id	00	1c		
					<del>0b</del>	<del>1b</del>	<del>0d</del>	<del>1d</del>		
B and D	1	Last	В	3	1b	0d	1d	0b		
	2	Last	А	3		Ju		UD		

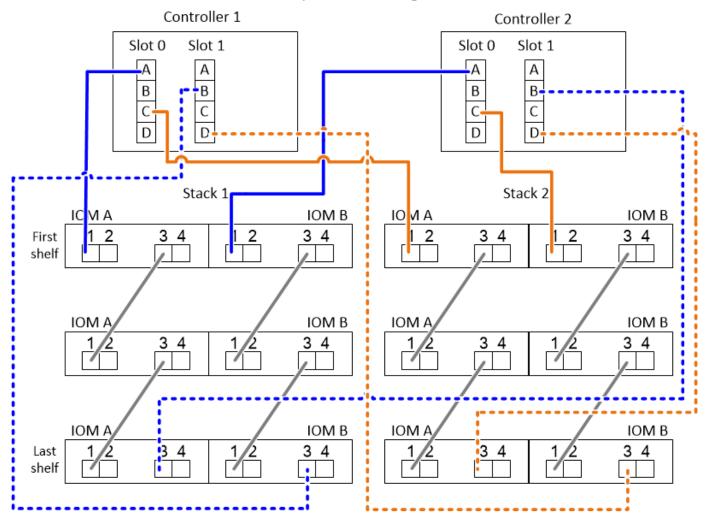

# Controller-to-stack cabling worksheets and cabling examples for common AFF A200, AFF A220, FAS2600 series and FAS2700 configurations - shelves with IOM12 modules

You can use the completed controller-to-stack cabling worksheets and cabling examples to cable common AFF A200, AFF A220, FAS2600 series and FAS2700 configurations.

- If needed, you can refer to SAS cabling rules for information about supported configurations, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including AFF A200, AFF A220, FAS2600 series and FAS2700 port 0b same domain connectivity).
- Cabling examples show controller-to-stack cables as solid or dashed to distinguish controller 0b port connections from controller 0a port connections.

Cable Type	Description
	Connects controller 0b port to the logical last disk shelf in the stack The primary path from a controller to the stack The internal storage connection
	Connects controller 0a port to the logical first disk shelf in the stack     The secondary path from a controller to the stack     The internal HBA connection

• Cabling examples show controller-to-stack connections and shelf-to-shelf connections in two different colors to distinguish connectivity through IOM A (domain A) and IOM B (domain B).


1000	AFF A220, FA O Series Cable	
Cable C	olor	Connects
	Light blue	IOM A (domain A)
	Purple	IOM B (domain B)

## AFF A200, AFF A220, FAS2600 series and FAS2700 multipath HA configuration with one multi-shelf stack

The following worksheet and cabling example uses port pair 0a/0b:

		Cablet	o disk she	If IOMe	0		Sta	icks		
Controller SAS ports	Controllers	Cable	o disk sile	ii iOivis	1	2	3	4	5	6
SAS ports		Shelf	IOM	Port			Port	pairs		
440	1	First	В	1	0-					Г
A and C	2	First	Α	. ai	0a					
D and D	1	Last	Α	3	O.					
B and D	2	Last	В	3	Ob					

## AFF A200, AFF A220, FAS2600, and FAS2700 series multipath HA configuration

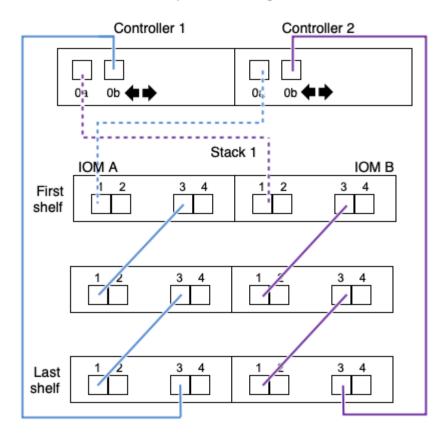

#### FAS2600 series multipath configuration with one multi-shelf stack

The following worksheets and cabling examples use port pair 0a/0b.

In this example, the controller is installed in slot A of the chassis. When a controller is located in slot A of the chassis, its internal storage port (0b) is in domain A (IOM A); therefore, port 0b must connect to domain A (IOM A) in the stack.

	Control	er-to-Stack	Cabling W	orksheet (	FAS26	i00 seri	ies)						
		Cable to disk shelf IOMs				Stacks							
Controller SAS ports	Controllers	Cable	o disk sriei	I IOIVIS	$\bigcirc$ 1	2	3	4	5	6			
		Port			Port	pairs							
A and C	1	First	В	1	0a								
A and C	2	First	A	1	] <sup>Ua</sup>								
B and D	1	Last	Α	3	Ob								
B allu D	2	Last	В	3									

### FAS2600 series multipath configuration



In this example, the controller is installed in slot B of the chassis. When a controller is located in slot B of the chassis, its internal storage port (0b) is in domain B (IOM B); therefore, port 0b must connect to domain B (IOM B) in the stack.

	Controller-to-Stack Cabling Worksheet (FAS2600 series)												
		Cable	f IONAs			Sta	cks						
Controller SAS ports	Controllers	Cable	o disk shel	I IOIVIS	$\bigcirc$ 1	2	3	4	5	6			
		Shelf	Shelf IOM Port						Port pairs				
A and C	1	First	В	1	0a								
A and C	2	First	A	1	Ua								
B and D	1	Last	Α	3	0b								
D and D	2	Last	В	3									

### FAS2600 series multipath configuration



# Controller-to-stack cabling worksheet and cabling example for a quad-path HA configuration with two quad-port SAS HBAs - shelves with IOM12 modules

You can use the completed controller-to-stack cabling worksheet and cabling example to cable a quad-path HA configuration that has two quad-port SAS HBAs.

- If needed, you can refer to SAS cabling rules for information about supported configurations, the controller slot numbering convention, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including the use of port pairs).
- If needed, you can refer to How to read a worksheet to cable controller-to-stack connections for quadpathed connectivity.
- The cabling example shows controller-to-stack cables as solid or dashed to distinguish controller A and C port connections from controller B and D port connections.

	Controller-to-Stack Cable Type Key
Cable Type	Description
	<ul> <li>Connects controller A and C ports to the logical first disk shelf in a stack</li> <li>The primary path from a controller to a stack</li> </ul>
	<ul> <li>Connects controller B and D ports to the logical last disk shelf in a stack</li> <li>The secondary path from a controller to a stack</li> </ul>

• Cables in the cabling examples and their corresponding port pairs in the worksheets are color-coded to distinguish connectivity to each stack in the HA pair.

	C	ontroller-to-Stack (	Cable Color Key
Cable	e Color	Connects to	From
	Dark blue	Stack 1	Each controller by a unique port pair
	Orange	Stack 2	Each controller by a unique port pair

• The cabling example visually distinguishes the two sets of multipathed cabling needed to achieve quadpathed connectivity for each controller to each stack in an HA pair or single-controller configuration.

The first set of multipathed cabling is referred to as "multipathed". The second set of multipathed cabling is referred to as "quad-pathed". The second set of cabling is referred to as "quad-pathed" because completing this set of cabling gives you the quad-pathed connectivity.

		Controller-to-Stack Quad-	Pathed Connectivity Key
connec	ad-pathed ctivity consists sets of cabling	Shown by color-coded ports on controllers and IOMs	Description
Set 1	set 1 Multipathed No color		Ports (on controllers and IOMs) cabled with multipathed connectivity are shown without a color.
Set 2	Quad-pathed	The cable color associated with the applicable stack	Ports (on controllers and IOMs) cabled with quad-pathed connectivity are the same color as the cables connecting the stack, as shown in the "Controller-to-Stack Cable Color Key".

• The worksheet example shows port pairs designated for multipathed cabling or quad-pathed cabling to the applicable stack.

Each port pair designated for multipathed cabling is encircled by an oval that is the color associated with the stack it is cabled to. Each port pair designated for quad-pathed cabling is encircled by a rectangle that is the color associated with the stack it is cabled to.

#### Quad-path HA with two quad-port SAS HBAs and two multi-shelf stacks

The following worksheet and cabling example uses port pairs 1a/2b (multipathed) and 2a/1d (quad-pathed) for stack 1, and port pairs 1c/2d (multipathed) and 2c/1b (quad-pathed) for stack2.

Co	ontroller-to-Stac	k Cabling	Workshe	et for Qua	ad-Pathed	Conn	ectivit	У		
		Ca	ble to dis	sk shelf IO	Ms	Stacks				
Controller SAS ports	As norts   Controllers   Port						1	2	2	
	·   Jileli   IOIVI		Quad-pathed		Port	pairs				
A and C	1	First	Α	1	2	1a	2a	1c	2c	
A and C	2	First	В	1	2	la	Za	IC	20	
						<del>1b</del>	<del>2b</del>	<del>1d</del>	<del>2d</del>	
B and D	1	Last	В	3	4	2b	1d	2d	1b	
	2	Last	Α	3	4	20	Liu	20		

#### Quad-path HA configuration



## Controller-to-stack cabling worksheet template for multipathed connectivity - shelves with IOM12 modules

By completing the worksheet template, you can define the controller SAS port pairs you can use to cable controllers to stacks of disk shelves with IOM12 modules to achieve multipathed connectivity in an HA pair or single-controller configuration. You can also use the completed worksheet to walk yourself through cabling the multipathed connections for your configuration.

#### Before you begin

Your HA pair or single-controller configuration cannot be an AFF A200, AFF A220, FAS2600 series or FAS2700 system. If you have one of these configurations, use the following:

Controller-to-stack cabling worksheets and cabling examples for common AFF A200, AFF A220, FAS2600 series and FAS2700 configurations

#### About this task

• This procedure and worksheet template is applicable to cabling multipathed connectivity for a multipath HA or multipath configuration with one or more stacks.

Examples of completed worksheets are provided for multipath HA and multipath configurations.

A configuration with two quad-port SAS HBAs and two stacks of disk shelves with IOM12 modules is used for the worksheet examples.

- The worksheet template allows for up to six stacks; you need to add more columns if needed.
- If needed, you can refer to the SAS cabling rules for information about supported configurations, the controller slot numbering convention, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including use of port pairs).
- If needed, after you complete the worksheet, you can refer to How to read a worksheet to cable controllerto-stack connections for multipathed connectivity

	Controller-to	o-Stack Cab	oling Works	heet Multi	patheo	d Conr	ectivit	ty		
		Cable to disk shelf IOMs					Sta	cks		
Controller SAS ports	Controllers	Cable	to disk shei	TIOMS	1	2	3	4	5	6
,		Shelf	IOM	Port	Port pairs					
A and C	1	First	А	1						
A and C	2	First	В	1						
B and D	1	Last	В	3						
	2	Last	Α	3						

#### **Steps**

1. In the boxes above the gray boxes, list all SAS A ports on your system, and then all SAS C ports on your system in sequence of slots (0,1, 2, 3, and so on).

For example: 1a, 2a, 1c, 2c

2. In the gray boxes, list all SAS B ports on your system, and then all SAS D ports on your system in sequence of slots (0,1, 2, 3 and so on).

For example: 1b, 2b, 1d, 2d

3. In the boxes below the gray boxes, rewrite the D and B port list so that the first port in the list is moved to the end of the list.

For example: 2b, 1d, 2d, 1b

4. Circle (designate) a port pair for each stack.

When all port pairs are being used to cable the stacks in your system, circle port pairs in the order in which they are defined (listed) in the worksheet.

For example, in a multipath HA configuration with eight SAS ports and four stacks, port pair 1a/2b is cabled to stack 1, port pair 2a/1d is cabled to stack 2, port pair 1c/2d is cabled to stack3, and port pair 2c/1b is cabled to stack 4.

	Controller-to-	Stack Cabli	ng Worksh	eet for Mu	ltipath	ed Co	nnect	ivity		
		Calala	ha aliah ah ah	f IONA-			St	acks		
Controller SAS ports	Controllers	Cable	to disk shel	TIONS	$\bigcap$	2	3	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	Α	1	1.	2a	1c	2c		
A and C	2	First	В	1	1a	Za	I IC	ZC		
					<del>1b</del>	<del>2b</del>	<del>1d</del>	<del>2d</del>		
B and D	1	Last	В	3	2b	1d	2d	1 <sub>b</sub>		
	2	Last	Α	3			20			

When not all port pairs are needed to cable the stacks in your system, skip port pairs (use every other port pair).

For example, in a multipath HA configuration with eight SAS ports and two stacks, port pair 1a/2b is cabled to stack 1 and port pair 1c/2d is cabled to stack 2. If two additional stacks are hot-added later, port pair 2a/1d is cabled to stack 3 and port pair 2c/1b is cabled to stack 4.



When you have more port pairs than you need to cable the stacks in your system, the best practice is to skip port pairs to optimize the SAS ports on your system. By optimizing SAS ports, you optimize your system's performance.

	Controller-to	o-Stack Cab	ling Works	heet Multi	pathe	d Conn	ectivi	ty		
							Sta	icks		
Controller SAS ports	Controllers	Cable t	to disk shel	TIOMS	$\bigcap$	3 <del>2</del>	23	4	5	6
		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	10	2a	1c	20		
A and C	2	First	В	1	1a	Za	IC	2c		
					1 <sub>b</sub>	<del>2b</del>	<del>1d</del>	<del>2d</del>		
B and D	1	Last	В	3	2b	1d	2d	1b		
	2	Last	А	3		lu	24	ID		

You can use your completed worksheet to cable your system.

5. If you have a single-controller (multipath) configuration, cross out the information for controller 2.

	Controller-to	o-Stack Cab	oling Works	heet Multi	pathe	d Conr	nectiv	ity		
		Cabla	ام ما امار مام ما	f IONAs			Sta	acks		
Controller SAS ports	Controllers	Cable	to disk shel	TIONS	$\bigcirc$	2	3	4	5	6
·		Shelf	IOM	Port			Port	pairs		
A and C	1	First	А	1	1a	2a	1c	2c		
A and C	2	First	В	1	l la	Zd	I C	20		
					<del>1b</del>	<del>2b</del>	<del>1d</del>	<del>2d</del>		
B and D	1	Last	В	3	2b	1d	2d	1b		
	2	Last	Α	3			Zu			

You can use your completed worksheet to cable your system.

## Controller-to-stack cabling worksheet template for quadpathed connectivity - shelves with IOM12 modules

By completing the worksheet template, you can define the controller SAS port pairs you can use to cable controllers to stacks of disk shelves with IOM12 modules to achieve quad-pathed connectivity in an HA pair or single-controller configuration. You can also use the completed worksheet to walk yourself through cabling the quad-pathed connections for your configuration.

#### About his task

• This procedure and worksheet template is applicable to cabling quad-pathed connectivity for a quad-path HA or quad-path configuration with one or more stacks.

Examples of completed worksheets are provided for quad-path HA and quad-path configurations.

A configuration with two quad-port SAS HBAs and two stacks of disk shelves with IOM12 modules is used for the worksheet examples.

- The worksheet template allows for up to two stacks; you need to add more columns if needed.
- Quad-pathed connectivity for controller-to-stack connections consists of two sets of multipathed cabling: the first set of cabling is referred to as "multipathed"; the second set of cabling is referred to as "quad-pathed".

The second set of cabling is referred to as "quad-pathed" because completing this set of cabling gives you the quad-pathed connectivity from a controller to a stack in an HA pair or single-controller configuration.

- Disk shelf IOM ports 1 and 3 are always used for multipathed cabling and IOM ports 2 and 4 are always used for quad-pathed cabling, as designated by the worksheet column headings.
- In the worksheet examples, port pairs are designated for multipathed cabling or quad-pathed cabling to the applicable stack.

Each port pair designated for multipathed cabling is encircled by an oval that is the color associated with

the stack it is cabled to. Each port pair designated for quad-pathed cabling is encircled by a rectangle that is the color associated with the stack it is cabled to. Stack 1 is associated with the color blue; stack 2 is associated with the color orange.

- If needed, you can refer to SAS cabling rules for information about the controller slot numbering convention, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including the use of port pairs).
- If needed, after you complete the worksheet, you can refer to How to read a worksheet to cable controllerto-stack connections for quad-pathed connectivity.

Controller-to-Stack Cabling Worksheet for Quad-Pathed Connectivity									
		Cable to disk shelf IOMs					Stacks		
Controller SAS ports	Controllers	Shelf	IOM	Port		1		2	)
				Multipathed	Quad-pathed	Port pairs			
A and C	1	First	Α	1	2				
A and C	2	First	В	1	2				
B and D	1	Last	В	3	4				
	2	Last	Α	3	4				

#### **Steps**

1. In the boxes above the gray boxes, list all SAS A ports on your system, and then all SAS C ports on your system in sequence of slots (0,1, 2, 3, and so on).

For example: 1a, 2a, 1c, 2c

2. In the gray boxes, list all SAS B ports on your system, and then all SAS D ports on your system in sequence of slots (0,1, 2, 3 and so on).

For example: 1b, 2b, 1d, 2d

3. In the boxes below the gray boxes, rewrite the D and B port list so that the first port in the list is moved to the end of the list.

For example: 2b, 1d, 2d, 1b

4. Identify the two sets of port pairs to connect to stack 1 by drawing an oval around the first set of port pairs and a rectangle around the second set of port pairs.

Both sets of cabling are needed to achieve quad-pathed connectivity from each controller to stack 1 in your HA pair or single-controller configuration.

The following example uses port pair 1a/2b for the multipathed cabling and port pair 2a/1d for the quadpathed cabling to stack 1.

Controller-to-Stack Cabling Worksheet for Quad-Pathed Connectivity										
		Cable to disk shelf IOMs					Stacks			
Controller SAS ports	Controllers	Shelf	IOM	Port		1		2		
				Multipathed	Quad-pathed	Port		pairs		
A and C	1	First	Α	1	2	1a	2a	1c	26	
A and C	2	First	В	1	2		Za	10	2c	
							<del>2b</del>	<del>1d</del>	<del>2d</del>	
B and D	1	Last	В	3	4	26	1d	2d	1b	
	2	Last	Α	3	4	2b	Lia	20	ם	

5. Identify the two sets of port pairs to connect to stack 2 by drawing an oval around the first set of port pairs and a rectangle around the second set of port pairs.

Both sets of cabling are needed to achieve quad-pathed connectivity from each controller to stack 1 in your HA pair or single-controller configuration.

The following example uses port pair 1c/2d for the multipathed cabling and port pair 2c/1b for the quadpathed cabling to stack 2.

Controller-to-Stack Cabling Worksheet for Quad-Pathed Connectivity											
		Cable to disk shelf IOMs					Stacks				
Controller SAS ports	Controllers	Shelf	IOM	Port		1		2			
				Multipathed	Quad-pathed		Port	pairs			
A and C	1	First	Α	1	2	(12)	2a	1c	2c		
AandC	2	First	В	1	2	1a	Zd	IC	20		
						<del>1b</del>	<del>2b</del>	<del>1d</del>	<del>2d</del>		
B and D	1	Last	В	3	4	2b	1d	2d	1b		
	2	Last	А	3	4	20	L <sup>iu</sup>	20			

6. If you have a quad-path (single-controller) configuration, cross out the information for controller 2; you only need controller 1 information to cable the controller-to-stack connections.

The following example shows that the information for controller 2 is crossed out.

Controller-to-Stack Cabling Worksheet for Quad-Pathed Connectivity										
		Cable to disk shelf IOMs					Stacks			
Controller SAS ports	Controllers	Shelf	IOM	Port		1		2		
				Multipathed	Quad-pathed	Port		pairs		
A and C	1	First	А	1	2	1a	2a	1c	2c	
A and C	-2	First	В	1	2	ū	Za	IC	20	
						<del>1b</del>	<del>2b</del>	<del>1d</del>	<del>2d</del>	
B and D	1	Last	В	3	4	26	1d	2d	1b	
	-2	Last	A	3	4	2b	Lu	24	2 _	

# How to read a worksheet to cable controller-to-stack connections for multipathed connectivity - shelves with IOM12 modules

You can use this example to guide you through how to read and apply a completed worksheet to cable controller-to-stack connections for disk shelves with IOM12 modules for multipathed connectivity.

#### Before you begin

Your HA pair or single-controller configuration cannot be an AFF A200, AFF A220, FAS2600 series or FAS2700 system. These systems use a unique worksheet:

Controller-to-stack cabling worksheets and cabling examples for common AFF A200, AFF A220, FAS2600 series and FAS2700 configurations

#### About this task

• This procedure references the following worksheet and cabling example to demonstrate how to read a worksheet to cable controller-to-stack connections.

The configuration used in this example is a multipath HA configuration with two quad-port SAS HBAs (eight SAS ports) on each controller and two stacks of disk shelves with IOM12 modules. Port pairs are cabled by skipping every other port pair in the worksheet.



When you have more port pairs than you need to cable the stacks in your system, the best practice is to skip port pairs to optimize the SAS ports on your system. By optimizing SAS ports, you optimize your system's performance.

- If you have a single-controller configuration, skip substeps b and d for cabling to a second controller.
- If needed, you can refer to SAS cabling rules for information about the controller slot numbering convention, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including the use of port pairs).

The port pairs are cabled using every other port pair in the worksheet: 1a/2b and 1c/2d.

Controller-to-Stack Cabling Worksheet Multipathed Connectivity											
					Stacks						
Controller SAS ports	Controllers	Cable to disk shelf IOMs				3 <del>2</del>	23	4	5	6	
		Shelf	IOM	Port			Port	pairs			
A and C	1	First	А	1	10	2a	1c	2c			
	2	First	В	1	1a						
					1 <sub>b</sub>	<del>2b</del>	<del>1d</del>	<del>2d</del>			
B and D	1	Last	В	3	26	1d	24	1b		·	
	2	Last	Α	3	2b	/ <sup>     </sup>	2d				



#### **Steps**

- 1. Cable port pair 1a/2b on each controller to stack 1:
  - a. Cable controller 1 port 1a to stack 1, first shelf IOM A port 1.
  - b. Cable controller 2 port 1a to stack 1, first shelf IOM B port 1.

- c. Cable controller 1 port 2b to stack 1, last shelf IOM B port 3.
- d. Cable controller 2 port 2b to stack 1, last shelf IOM A port 3.
- 2. Cable port pair 1c/2d on each controller to stack 2:
  - a. Cable controller 1 port 1c to stack 2, first shelf IOM A port 1.
  - b. Cable controller 2 port 1c to stack 2, first shelf IOM B port 1.
  - c. Cable controller 1 port 2d to stack 2, last shelf IOM B port 3.
  - d. Cable controller 2 port 2d to stack 2, last shelf IOM A port 3.

# How to read a worksheet to cable controller-to-stack connections for quad-pathed connectivity - shelves with IOM12 modules

You can use this example to guide you through how to read and apply a completed worksheet to cable stacks of disk shelves with IOM12 modules for quad-pathed connectivity.

#### About this task

This procedure references the following worksheet and cabling example to demonstrate how to read a
worksheet to cable controller-to-stack connections.

The configuration used in this example is a quad-path HA configuration with two quad-port SAS HBAs on each controller and two stacks of disk shelves with IOM12 modules.

- If you have a single-controller configuration, skip substeps b and d for cabling to a second controller.
- If needed, you can refer to SAS cabling rules for information about the controller slot numbering convention, shelf-to-shelf connectivity, and controller-to-shelf connectivity (including the use of port pairs).

Controller-to-Stack Cabling Worksheet for Quad-Pathed Connectivity											
		Cable to disk shelf IOMs					Stacks				
Controller SAS ports	Controllers	Shelf	ЮМ	Port		1		2			
				Multipathed	Quad-pathed	Port		pairs			
A and C	1	First	Α	1	2	12	2a	1c	2c		
A and C	2	First	В	1	2	1a	Za	10	20		
						<del>1b</del>	<del>2b</del>	<del>1d</del>	<del>2d</del>		
B and D	1	Last	В	3	4	2h	1.1	2d	1b		
	2	Last	Α	3	4	2b	1d	20	Lib		

#### Quad-path HA configuration



#### **Steps**

1. Cable port pair 1a/2b on each controller to stack 1:

This is the multipathed cabling for stack 1.

- a. Cable controller 1 port 1a to stack 1, first shelf IOM A port 1.
- b. Cable controller 2 port 1a to stack 1, first shelf IOM B port 1.
- c. Cable controller 1 port 2b to stack 1, last shelf IOM B port 3.
- d. Cable controller 2 port 2b to stack 1, last shelf IOM A port 3.
- 2. Cable port pair 2a/1d on each controller to stack 1:

This is the quad-pathed cabling for stack 1. Once completed, stack 1 has quad-pathed connectivity to each controller.

- a. Cable controller 1 port 2a to stack 1, first shelf IOM A port 2.
- b. Cable controller 2 port 2a to stack 1, first shelf IOM B port 2.
- c. Cable controller 1 port 1d to stack 1, last shelf IOM B port 4.
- d. Cable controller 2 port 1d to stack 1, last shelf IOM A port 4.

3. Cable port pair 1c/2d on each controller to stack 2:

This is the multipathed cabling for stack 2.

- a. Cable controller 1 port 1c to stack 2, first shelf IOM A port 1.
- b. Cable controller 2 port 1c to stack 2, first shelf IOM B port 1.
- c. Cable controller 1 port 2d to stack 2, last shelf IOM B port 3.
- d. Cable controller 2 port 2d to stack 2, last shelf IOM A port 3.
- 4. Cable port pair 2c/1b on each controller to stack 2:

This is the quad-pathed cabling for stack 2. Once completed, stack 2 has quad-pathed connectivity to each controller.

- a. Cable controller 1 port 2c to stack 2, first shelf IOM A port 2.
- b. Cable controller 2 port 2c to stack 2, first shelf IOM B port 2.
- c. Cable controller 1 port 1b to stack 2, last shelf IOM B port 4.
- d. Cable controller 2 port 1b to stack 2, last shelf IOM A port 4.

#### **Copyright Information**

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

#### **Trademark Information**

NETAPP, the NETAPP logo, and the marks listed at <a href="http://www.netapp.com/TM">http://www.netapp.com/TM</a> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.