Electronic Devices

Final Term Lecture - 05

Reference book:

Electronic Devices and Circuit Theory (Chapter-6)

Robert L. Boylestad and L. Nashelsky, (11th Edition)



TRANSFER CURVE

• To determine I_D given V_{GS}:

$$I_D = k(V_{GS} - V_T)^2$$

- where V_T = threshold voltage or voltage at which the MOSFET turns on.
- k = constant found in the specification sheet
- k can also be determined by using values at a specific point and the formula:

$$k = \frac{I_{D(on)}}{\left(V_{GS(ON)} - V_{T}\right)^{2}}$$

• V_{DSsat} can also be calculated:

$$V_{Dsat} = V_{GS} - V_T$$

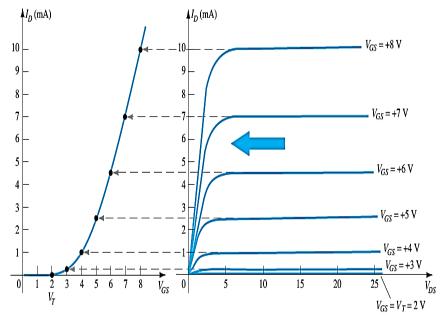


FIG. 6.36

Sketching the transfer characteristics for an n-channel enhancement-type MOSFET from the drain characteristics.

P-CHANNEL ENHANCEMENT-TYPE MOSFETS

• The p-channel Enhancement-type MOSFET is similar to the n-channel except that the voltage polarities and current directions are reversed.

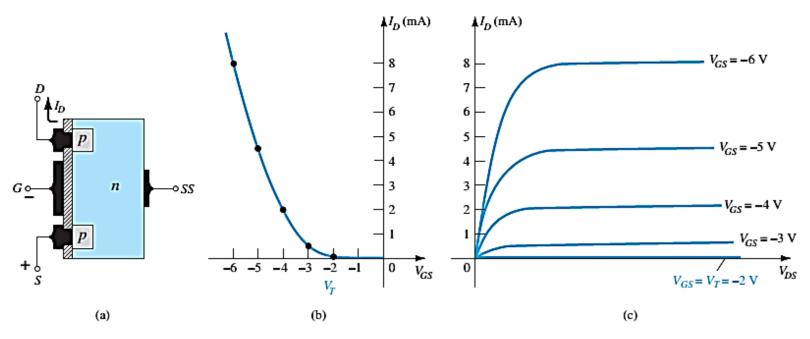


FIG. 6.38

p-Channel enhancement-type MOSFET with $V_T = 2 \text{ V}$ and $k = 0.5 \times 10^{-3} \text{ A/V}^2$.

SYMBOLS

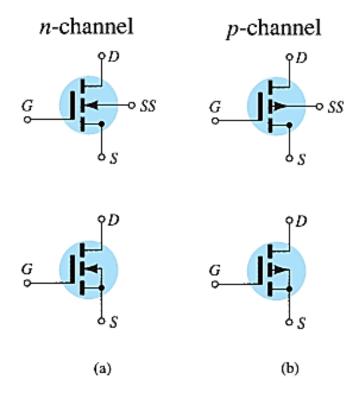


FIG. 6.39

Symbols for: (a) n-channel enhancement-type MOSFETs and (b) p-channel enhancementtype MOSFETs.

DEPLETION-TYPE MOSFET CONSTRUCTION

- The Drain (D) and Source (S) connect to the to n-doped regions.
- These N-doped regions are connected via an nchannel. This n-channel is connected to the Gate (G) via a thin insulating layer of SiO2.
- The n-doped material lies on a p-doped substrate that may have an additional terminal connection called SS.

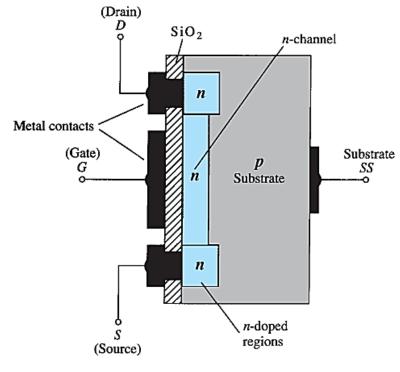


FIG. 6.24 n-Channel depletion-type MOSFET.

BASIC OPERATION

- In Fig. 6.25 the gate-to-source voltage is set to 0 V by the direct connection from one terminal to the other, and a voltage V_{DD} is applied across the drain-to-source terminals.
- The result is an attraction of the free electrons of the n-channel for the positive voltage at the drain.
- The result is a current similar to that flowing in the channel of the JFET. In fact, the resulting current with $V_{GS} = 0 \text{ V}$ continues to be labeled I_{DSS} .

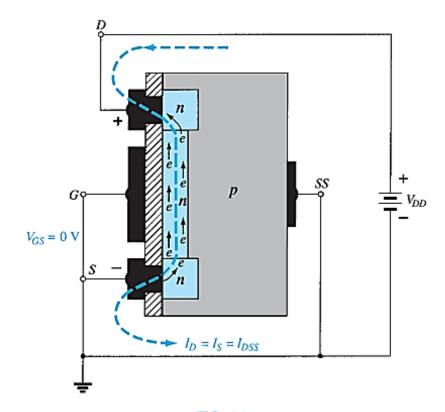


FIG. 6.25 n-Channel depletion-type MOSFET with $V_{GS} = 0$ V and applied voltage V_{DD} .

BASIC OPERATION

• A Depletion MOSFET can operate in two modes: Depletion or Enhancement mode.

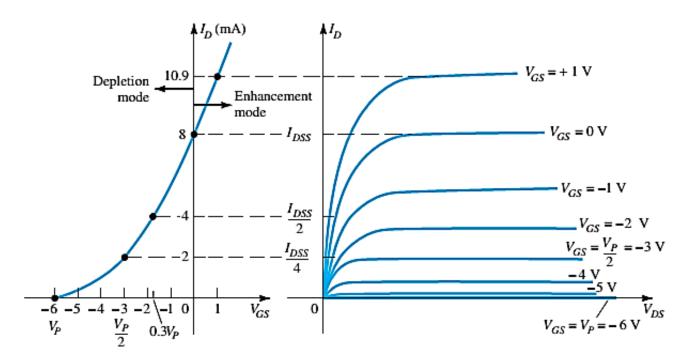


FIG. 6.26

Drain and transfer characteristics for an n-channel depletion-type MOSFET.

BASIC OPERATION CONTD.

- In this figure V_{GS} has been set at a negative voltage such as 1 V. The
 negative potential at the gate will tend to pressure electrons toward
 the p-type substrate (like charges repel) and attract holes from the ptype substrate (opposite charges attract).
- Depending on the magnitude of the negative bias established by V_{GS}, a level of recombination between electrons and holes will occur that will reduce the number of free electrons in the n-channel available for conduction. The more negative the bias, the higher the rate of recombination.
- The resulting level of drain current is therefore reduced with increasing negative bias for V_{GS} for V_{GS} =1 V, 2 V, and so on, to the pinch-off level of 6 V. The resulting levels of drain current and the plotting of the transfer curve proceeds exactly as described for the JFET.

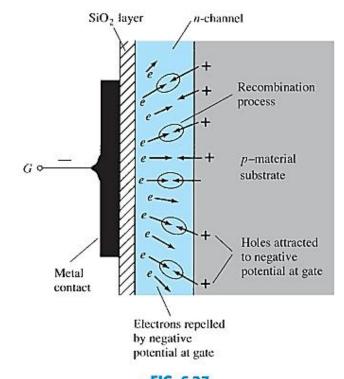


FIG. 6.27

Reduction in free carriers in a channel due to a negative potential at the gate terminal.

DEPLETION-TYPE MOSFET IN DEPLETION MODE

• Depletion mode:

- The characteristics are similar to the JFET.
- When $V_{GS} = 0V$, $I_D = I_{DSS}$
- When $V_{GS} < 0V$, $I_D < I_{DSS}$
- The formula used to plot the Transfer Curve still applies:

$$I_D = I_{DSS} (1 - \frac{V_{GS}}{V_P})^2$$

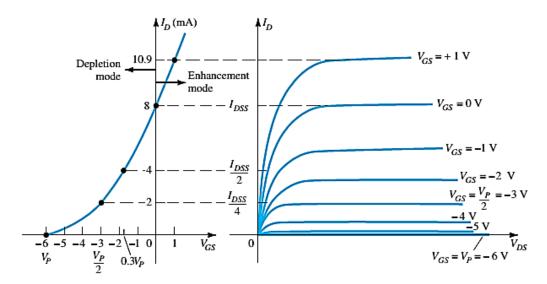


FIG. 6.26

Drain and transfer characteristics for an n-channel depletion-type MOSFET.

ENHANCEMENT MODE

- For positive values of V_{GS}, the positive gate will draw additional electrons (free carriers) from the p-type substrate due to the reverse leakage current and establish new carriers through the collisions resulting between accelerating particles.
- As the gate-to-source voltage continues to increase in the positive direction, the drain current will increase at a rapid rate.
- The application of a positive gate-to-source voltage has "enhanced" the level of free carriers in the channel compared to that encountered with V_{GS} =0 V. For this reason the region of positive gate voltages on the drain or transfer characteristics is often referred to as the enhancement region,
- The region between cutoff and the saturation level of I_{DSS} referred to as the depletion region.

DEPLETION-TYPE MOSFET IN <u>ENHANCEMENT</u> <u>MODE</u>

• Enhancement mode:

- V_{GS} > 0V, I_D increases above I_{DSS}.
- The formula used to plot the Transfer Curve still applies:

(note that V_{GS} is now a positive polarity)

$$I_D = I_{DSS} (1 - \frac{V_{GS}}{V_P})^2$$

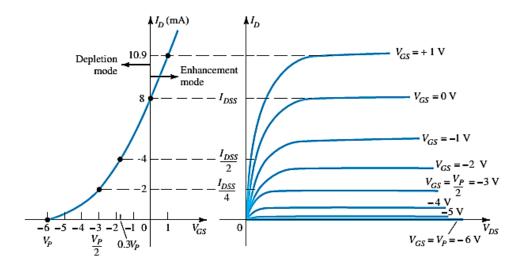


FIG. 6.26

Drain and transfer characteristics for an n-channel depletion-type MOSFET.

P-CHANNEL DEPLETION-TYPE MOSFET

• The p-channel Depletion-type MOSFET is similar to the n-channel except that the voltage polarities and current directions are reversed.

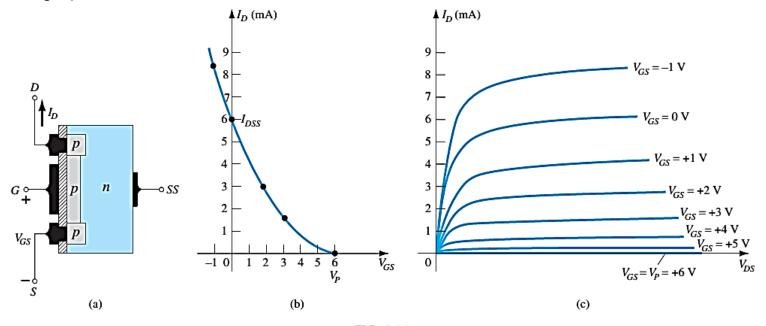


FIG. 6.29 p-Channel depletion-type MOSFET with $I_{DSS} = 6$ mA and $V_P = +6$ V.

SYMBOLS

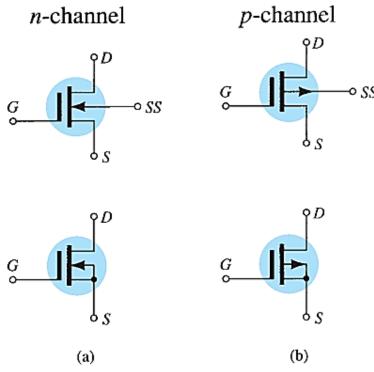


FIG. 6.30

Graphic symbols for: (a) n-channel depletion-type MOSFETs and (b) p-channel depletion-type MOSFETs.

SUMMARY TABLE

JFET (n-channel)	$I_G = 0 \text{ A, } I_D = I_S$ C C V_P $I_D = I_{DSS} \left(1 - \frac{V_{GS}}{V_P}\right)^2$	I_{DX} I_{DXY} I_{DX
MOSFET depletion type (n-channel)	$I_G = 0 \text{ A, } I_D = I_S$ $G \qquad \qquad I_{DSS}$ $I_D = I_{DSS} \left(1 - \frac{V_{GS}}{V_P}\right)^2$	$V_{\rm P}$ 0 $V_{\rm GS}$ $V_{\rm GS}$
MOSFET enhancement type (n-channel)	$I_G = 0 \text{ A, } I_D = I_S$ $G \qquad \qquad \downarrow V_T$ $I_{D(an)}$ $V_{GS(an)}$ $I_D = k \left(V_{GS} - V_{GS(Th)}\right)^2$ $k = \frac{I_{D(an)}}{(V_{GS(an)} - V_{GS(Th)})^2}$	0 V _{GS(th)} V _{GS(on)} V _{GS}

MOSFET HANDLING

 MOSFETs are very static sensitive. Because of the very thin SiO2 layer between the external terminals and the layers of the device, any small electrical discharge can stablish an unwanted conduction.

Protection:

- Always transport in a static sensitive bag.
- Always wear a static strap when handling MOSFETS.
- Apply voltage limiting devices between the Gate and Source, such as back-to-back Zeners to limit any transient voltage.

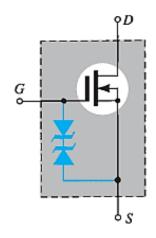


FIG. 6.42
Zener-protected MOSFET.

CMOS

- CMOS Complementary MOSFET pchannel and n-channel MOSFET on the same substrate.
- Advantage:
 - Useful in logic circuit designs
 - Higher input impedance
 - Faster switching speeds
 - Lower operating power levels
- Application:
 - CMOS Inverter

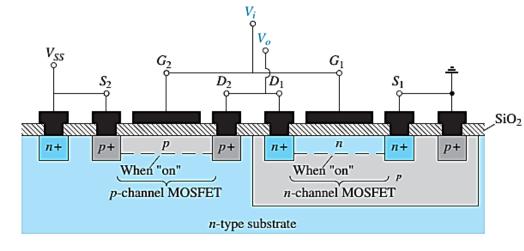


FIG. 6.44

CMOS with the connections indicated in Fig. 6.45.

CMOS INVERTER

- An inverter is a logic element that "inverts" the applied signal. That
 is, if the logic levels of operation are 0V (0-state) and 5V (1-state),
 an input level of 0V will result in an output level of 5V, and vice
 versa.
- Here, both gates are connected to the applied signal and both drain to the output V_o. The source of the p-channel MOSFET (Q₂) is connected directly to the applied voltage V_{SS}, while the source of the n-channel MOSFET (Q₁) is connected to ground.
- Here, the application of 5V at the input should result in approximately 0 V at the output. With 5V at V_i (with respect to ground), $V_{GS1} = V_i$ and Q_1 is "on," resulting in a relatively low resistance between drain and source.
- Since V_i and V_{SS} are at 5 V, $V_{GS2} = 0$ V, which is less than the required V_T for the device, resulting in an "off" state. The resulting resistance level between drain and source is quite high for Q_2 .

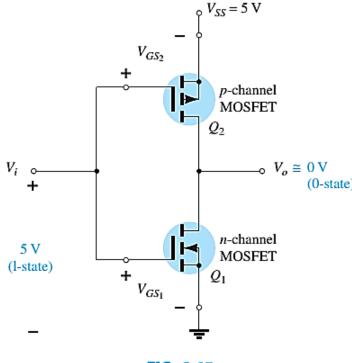


FIG. 6.45
CMOS inverter.

CMOS INVERTER

- A simple application of the voltage-divider rule will reveal that V_o is very close to 0 V or the 0-state, establishing the desired inversion process.
- For an applied voltage V_i of 0V (0-state), $V_{GS1} = 0V$ and Q_1 will be off with $V_{SS2} = -5V$, turning on the p-channel MOSFET. The result is that Q_2 will present a small resistance level, Q_1 a high resistance, and $V_o = V_{SS} = 5 V$ (the 1-state).

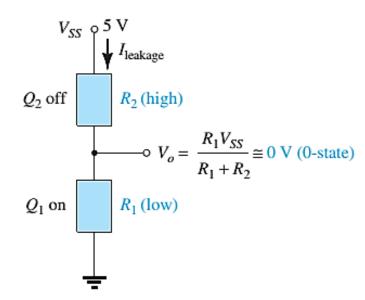


FIG. 6.46

Relative resistance levels for $V_i = 5 V$ (1-state).

End of Lecture-5