IT5002

Computer Systems and Applications

MIPS Instruction Formats

colintan@nus.edu.sg









Q & A

- DO NOT use the Zoom chat for questions. It doesn't appear in the video recordings.
- Please ask questions at https://sets.netlify.app/module/61597486a7805d9fb1b4accd



OR scan this QR code (may be obscured on some slides)

Lecture #6: MIPS Part 3: Instruction Formation of Computing

- 1. Overview and Motivation
- 2. MIPS Encoding: Basics
- 3. MIPS Instruction Classification
- 4. MIPS Registers (Recap)
- 5. R-Format
 - 5.1 R-Format: Example
 - 5.2 Try It Yourself #1



Lecture #9: MIPS Part 3: Instruction Formation of Singapore Computing

6. I-Format

- 6.1 I-Format: Example
- 6.2 Try It Yourself #2
- 6.3 Instruction Address: Overview
- 6.4 Branch: PC-Relative Addressing
- 6.5 Branch: Example
- 6.6 Try It Yourself #3

7. J-Format

- 7.1 J-Format: Example9
- 7.2 Branching Far Away: Challenge



Addressing Modes



1. Overview and Motivation

- Recap: Assembly instructions will be translated to machine code for actual execution
 - This section shows how to translate MIPS assembly code into binary patterns
- Explains some of the "strange facts" from earlier:
 - Why is *immediate* limited to 16 bits?
 - Why is *shift* amount only 5 bits?
 - etc.
- Prepare us to "build" a MIPS processor in later lectures!





2. MIPS Encoding: Basics

Each MIPS instruction has a fixed-length of 32 bits

→ All relevant information for an operation must be encoded with these bits!

• Additional challenge:

- To reduce the complexity of processor design, the instruction encodings should be as regular as possible
 - → Small number of formats, i.e. as few variations as possible





3. MIPS Instruction Classification

- Instructions are classified according to their operands:
 - → Instructions with same operand types have same encoding

R-format (Register format: op \$r1, \$r2, \$r3)

- Instructions which use 2 source registers and 1 destination register
- •e.g. add, sub, and, or, nor, slt, etc
- Special cases: srl, sll, etc.

I-format (Immediate format: op \$r1, \$r2, Immd)

- Instructions which use 1 source register, 1 immediate value and 1 destination register
- •e.g. addi, andi, ori, slti, lw, sw, beq, bne, etc.

J-format (Jump format: op Immd)

• j instruction uses only one immediate value



4. MIPS Registers (Recap)

• For simplicity, register numbers (\$0, \$1, ..., \$31) will be used in examples here instead of register names

Name	Register number	Usage
\$zero	0	Constant value 0
\$v0-\$v1	2-3	Values for results and expression evaluation
\$a0-\$a3	4-7	Arguments
\$t0-\$t7	8-15	Temporaries
\$s0-\$s7	16-23	Program variables

Name	Register number	Usage
\$t8-\$t9	24-25	More temporaries
\$gp	28	Global pointer
\$sp	29	Stack pointer
\$fp	30	Frame pointer
\$ra	31	Return address



\$at (register 1) is reserved for the assembler. \$k0-\$k1 (registers 26-27) are reserved for the operation system.



5. R-Format (1/2)

- Define fields with the following number of bits each:
 - 6+5+5+5+5+6=32 bits

6 5	5	5	5	6
-----	---	---	---	---

Each field has a name:

opcode rs	rt	rd	shamt	funct
-----------	----	----	-------	-------

- Each field is an independent 5- or 6-bit unsigned integer
 - A 5-bit field can represent any number 0 31
 - A 6-bit field can represent any number 0 63



Page: 10



5. R-Format (2/2)

Fields	Meaning
opcode	Partially specifies the instructionEqual to 0 for all R-Format instructions
funct	- Combined with opcode exactly specifies the instruction
rs (Source Register)	- Specify register containing first operand
rt (Target Register)	- Specify register containing second operand
rd (Destination Register)	- Specify register which will receive result of computation
shamt	 Amount a shift instruction will shift by 5 bits (i.e. 0 to 31) Set to 0 in all non-shift instructions





5.1 R-Format: Example (1/3)

MIPS instruction

add \$8, \$9, \$10

R-Format Fields	Value	Remarks	
opcode	0	(textbook pg 94 - 101)	
funct	32	(textbook pg 94 - 101)	
rd	8	(destination register)	
rs	9	(first operand)	
rt	10	(second operand)	
shamt	0	(not a shift instruction)	



Page: 12



5.1 R-Format: Example (2/3)

MIPS instruction

add \$8, \$9, \$10



Note the ordering of the 3 registers

Field representation in decimal:

opcode	rs	rt	rd	shamt	funct
0	9	10	8	0	32

Field representation in binary:

000000	01001	01010	01000	00000	100000
--------	-------	-------	-------	-------	--------

Split into 4-bit groups for hexadecimal conversion:

0₁₆

1₁₆

2₁₆

 \mathbf{A}_{16}

4₁₆

0₁₆

2₁₆

)₁₆

Lecture #9: MIPS Part 3: Instruction Formats

5.1 R-Format: Example (3/3)

MIPS instruction

sll \$8, \$9, 4



Note the placement of the source register


Field representation in decimal:

opcode	rs	rt	rd	shamt	funct
0	0	9	8	4	0

Field representation in binary:

000000	00000	01001	01000	00100	000000
--------	-------	-------	-------	-------	--------

Split into 4-bit groups for hexadecimal conversion:

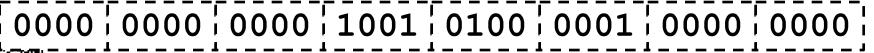

0₁₆

0₁₆

0₁₆

9₁₆

4₁₆

1₁₆

)₁₆

0₁₆

Lecture #9: MIPS Part 3: Instruction Formats

Page: 14



5.2 Try It Yourself #1

MIPS instruction

add \$10, \$7, \$5

Field representation in decimal:

opcode	rs	rt	rd	shamt	funct
0	7	5	10	0	32

Field representation in binary:

000000 00111 00101 01010 00000 10000	000000
--------------------------------------	--------

Hexadecimal representation of instruction:



0 0 E 5 5 0 2 0₁₆

6. I-format (1/4)

- What about instructions with immediate values?
 - 5-bit shamt field can only represent 0 to 31
 - Immediates may be much larger than this
 - e.g. **lw**, **sw** instructions require bigger offset

- **Compromise:** Define a new instruction format partially consistent with R-format:
 - If instruction has immediate, then it uses at most 2 registers



Page: 16



6. I-format (2/4)

- Define fields with the following number of bits each:
 - 6+5+5+16=32 bits

Again, each field has a name:

opcode	rs	rt	immediate
--------	----	----	-----------

- Only one field is inconsistent with R-format.
 - opcode, rs, and rt are still in the same locations.



6. I-format (3/4)

opcode

 Since there is no **funct** field, **opcode** uniquely specifies an instruction

rs

specifies the source register operand (if any)

rt

- specifies register to receive result
- note the difference from R-format instructions

Continue on next slide.....



6. I-format (4/4)



immediate:

- Treated as a signed integer
- 16 bits → can be used to represent a constant up to 2¹⁶ different values
- Large enough to handle:
 - The offset in a typical lw or sw
 - Most of the values used in the addi, subi, slti instructions





6.1 I-format: Example (1/2)

MIPS instruction

addi \$21, \$22, -50

I-Format Fields	Value	Remarks	
opcode 8		(textbook pg 94 - 101)	
rs 22		(the only source register)	
rt 21		(target register)	
immediate	-50	(in base 10)	



Page: 20



6.1 I-format: Example (2/2)

MIPS instruction

addi \$21, \$22, -50

Field representation in decimal:

8 22 **21** -50

Field representation in binary:

001000 10110 10101 1111111111001110

Hexadecimal representation of instruction:



2 2 D 5 F F C E₁₆



6.2 Try It Yourself #2

MIPS instruction

lw \$9, 12(\$8)

Field representation in decimal:

opcode	rs	rt	immediate	
35	8	9	12	

Field representation in binary:

100011 01000 01001 000000000001100

Hexadecimal representation of instruction:



8 D 0 9 0 0 0 C₁₆



6.3 Instruction Address: Overview

- As instructions are stored in memory, they too have addresses
 - Control flow instructions uses these addresses
 - E.g. beq, bne, j
- As instructions are 32-bit long, instruction addresses are word-aligned as well
- Program Counter (PC)
 - A special register that keeps address of instruction being executed in the processor



6.4 Branch: PC-Relative Addressing (1/5h)ol of Computing

Use I-Format

opcode	rs	rt	immediate
--------	----	----	-----------


- opcode specifies beq, bne
- **rs** and **rt** specify registers to compare
- What can immediate specify?
 - Immediate is only 16 bits
 - Memory address is 32 bits
 - immediate is not enough to specify the entire target address!



6.4 Branch: PC-Relative Addressing (2/5h)ol of Computing

- How do we usually use branches?
 - Answer: if-else, while, for
 - Loops are generally small:
 - Typically up to 50 instructions
 - Unconditional jumps are done using jump instructions (j),
 not the branches


Conclusion: A branch often changesPC by a small amount

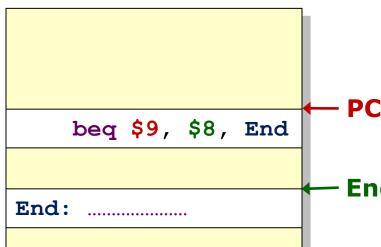



6.4 Branch: PC-Relative Addressing (3/5h) of Computing

- Solution:
 - Specify target address relative to the PC
- Target address is generated as:
 - PC + the 16-bit immediate field
 - The **immediate** field is a signed two's complement integer
- \rightarrow Can branch to $\pm 2^{15}$ bytes from the PC:
 - Should be enough to cover most loops

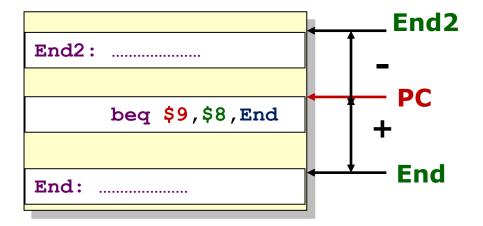



6.4 Branch: PC-Relative Addressing (4/5h) of Computing

- Can the branch target range be enlarged?
- Observation: Instructions are word-aligned
 - Number of bytes to add to the PC will always be a multiple of 4.
 - → Interpret the **immediate** as number of words, i.e. automatically multiplied by $4_{10}(100_2)$
- \rightarrow Can branch to $\pm 2^{15}$ words from the PC
 - i.e. $\pm 2^{17}$ bytes from the **PC**
 - We can now branch 4 times farther!



6.4 Branch: PC-Relative Addressing (5/5h) of Computing

Branch calculation:

If the branch is **not taken**:

$$PC = PC + 4$$

(PC + 4 is address of next instruction)

If the branch is taken:

$$PC = (PC + 4) + (immediate \times 4)$$

- Observations:
 - **immediate** field specifies the number of words to jump, which is the same as the number of instructions to "skip over"
 - **immediate** field can be positive or negative
 - Due to hardware design, add immediate to (PC+4), not to PC (more in later topic)



Page: 28



6.5 Branch: Example (1/3)

```
Loop: beq $9, $0, End # rlt addr: 0
add $8, $8, $10 # rlt addr: 4
addi $9, $9, -1 # rlt addr: 8
j Loop # rlt addr: 12
End: # rlt addr: 16
```

beq is anI-Formatinstruction →

I-Format Fields	Value	Remarks	
opcode	4		
rs	9	(first operand)	
rt	0	(second operand)	
immediate	???	(in base 10)	





6.5 Branch: Example (2/3)

```
Loop: beq $9, $0, End # rlt addr: 0
add $8, $8, $10 # rlt addr: 4
addi $9, $9, -1 # rlt addr: 8
j Loop # rlt addr: 12
End: # rlt addr: 16
```

immediate field:

- Number of instructions to add to (or subtract from) the PC, starting at the instruction following the branch
- In beq case, immediate = 3
- End = $(PC + 4) + (immediate \times 4)$



Page: 30



6.5 Branch: Example (3/3)

```
Loop: beq $9, $0, End # rlt addr: 0
add $8, $8, $10 # rlt addr: 4
addi $9, $9, -1 # rlt addr: 8
j Loop # rlt addr: 12
End: # rlt addr: 16
```

Field representation in decimal:

opcode	rs	rt	immediate	
4	9	0	3	

Field representation in binary:

000100 01001 00000 000000000000011





6.6 Try It Yourself #3

```
Loop: beq $9, $0, End # rlt addr: 0
add $8, $8, $10 # rlt addr: 4
addi $9, $9, -1 # rlt addr: 8
beq $0, $0, Loop # rlt addr: 12
End: # rlt addr: 16
```

What would be the immediate value for the second beq instruction?

Answer: - 4



7. J-Format (1/5)

- For branches, PC-relative addressing was used:
 - Because we do not need to branch too far
- For general jumps (j):
 - We may jump to anywhere in memory!
- The ideal case is to specify a 32-bit memory address to jump to
 - Unfortunately, we can't (② why?)





7. J-Format (2/5)

Define fields of the following number of bits each:

6 bits

26 bits

As usual, each field has a name:

opcode

target address

- Keep opcode field identical to R-format and I-format for consistency
- Combine all other fields to make room for larger
 target address



7. J-Format (3/5)

We can only specify 26 bits of 32-bit address

Optimization:

- Just like with branches, jumps will only jump to wordaligned addresses, so last two bits are always 00
- So, let's assume the address ends with '00' and leave them out
- → Now we can specify **28 bits** of 32-bit address



7. J-Format (4/5)

- Where do we get the other 4 bits?
 - MIPS choose to take the 4 most significant bits from PC+4 (the next instruction after the jump instruction)
 - → This means that we cannot jump to anywhere in memory, but it should be sufficient *most of the time*
- Question:
 - What is the **maximum jump range?** 256MB boundary
- Special instruction if the program straddles 256MB boundary
 - Look up jr instruction if you are interested
 - Target address is specified through a register




7. J-Format (5/5)

Summary: Given a Jump instruction

32bit PC opcode target address

1010...... 000010 00001111000011110000111100

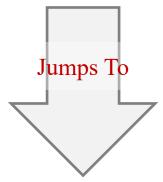

1010 00001111000011110000111100

00


26bits Target address specified in instruction

Default 2bit "00" for word address



7.1 J-Format: Example

```
jump
              $9, $0,
Loop:
                             addr:
                      End
        beq
                                         target
        add $8, $8,
                      $10
                              addr:
        addi $9, $9,
                              addr:
                                    16
                              addr: 20 ← PC
              Loop
                              addr: 24
End:
```

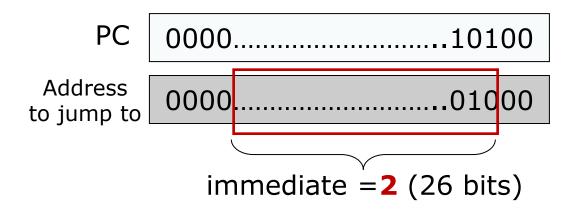

Check your understanding by constructing the new PC value

opcode

target address

00010

7.2 Branching Far Way

Given the instruction

beq \$s0, \$s1, L1

Assume that the address **L1** is farther away from the PC than can be supported by **beq** and **bne** instructions

Challenge:


Construct an equivalent code sequence with the help of unconditional (j) and conditional branch (beq, bne) instructions to accomplish this far away branching





8. Addressing Modes (1/3)

Register addressing: operand is a register

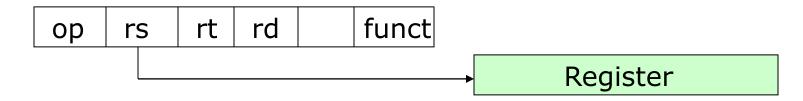

Immediate addressing: operand is a constant within the instruction itself (addi, andi, ori, slti)


ор	rs	rt	immediate
----	----	----	-----------





8. Addressing Modes (2/3)

Base addressing (displacement addressing):
 operand is at the memory location whose address is
 sum of a register and a constant in the instruction
 (lw, sw)

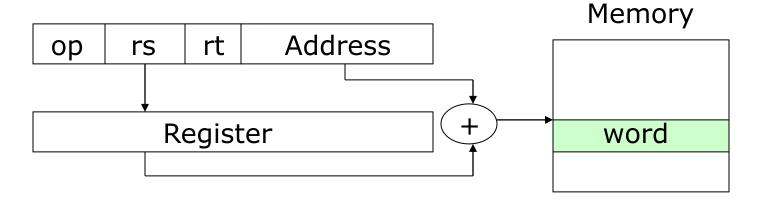







8. Addressing Modes (3/3)

PC-relative addressing: address is sum of PC and constant in the instruction (beg, bne)

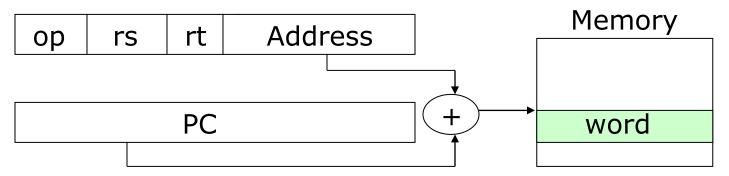

 Pseudo-direct addressing: 26-bit of instruction concatenated with upper 4-bits of PC (j)

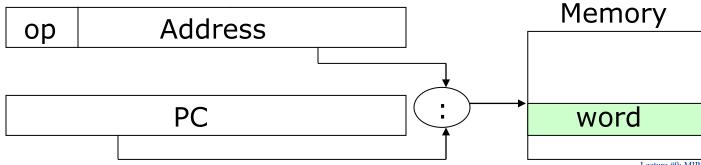



Page: 42

National University of Singapore School of Computing

Summary (1/2)

- MIPS Instruction:
 - 32 bits representing a single instruction

R	opcode	rs	rt	rd	shamt	funct
Т	opcode	rs	rt	immediate		
J	opcode	target address				

- Branches and load/store are both I-format instructions; but branches use PC-relative addressing, whereas load/store use base addressing
- Branches use PC-relative addressing; jumps use pseudo-direct addressing
- Shifts use R-format, but other immediate instructions (addi, andi, ori) use I-format



Summary (2/2)

	MIPS assembly language							
Category	Instruction	Example	Meaning	Comments				
	add	add \$s1, \$s2, \$s3	\$s1 = \$s2 + \$s3	Three operands; data in registers				
Arithmetic	subtract	sub \$s1, \$s2, \$s3	\$s1 = \$s2 - \$s3	Three operands; data in registers				
	add immediate	addi \$s1, \$s2, 100	\$s1 = \$s2 + 100	Used to add constants				
	load w ord	lw \$s1, 100(\$s2)	\$s1 = Memory [\$s2 + 100	Word from memory to register				
	store w ord	sw \$s1, 100(\$s2)	Memory[\$s2 + 100] = \$s1	Word from register to memory				
Data transfer	load byte	lb \$s1, 100(\$s2)	\$s1 = Memory [\$s2 + 100	Byte from memory to register				
	store byte	sb \$s1, 100(\$s2)	Memory[\$s2 + 100] = \$s1	Byte from register to memory				
	load upper immediate	lui \$s1, 100	\$s1 = 100 * 2 ¹⁶	Loads constant in upper 16 bits				
	branch on equal	beq \$s1, \$s2, 25	if (\$s1 == \$s2) go to PC + 4 + 100	Equal test; PC-relative branch				
Conditional	branch on not equal	bne \$s1, \$s2, 25	if (\$s1 != \$s2) go to PC + 4 + 100	Not equal test; PC-relative				
branch	set on less than	slt \$s1, \$s2, \$s3	if (\$s2 < \$s3) \$s1 = 1; else \$s1 = 0	Compare less than; for beq, bne				
	set less than immediate	slti \$s1, \$s2, 100	if (\$s2 < 100) \$s1 = 1; else \$s1 = 0	Compare less than constant				
a =	jump	j 2500	go to 10000	Jump to target address				
encondi-	jump register	jr \$ra	go to \$ra	For sw itch, procedure return				
R onal jump	jump and link	jal 2500	\$ra = PC + 4; go to 10000	For procedure call				