

Integration manual - Power optimization





Contents

1	Legal 1.1 Disclaimer	
2	Introduction	2
3	Wake up methods 3.1 First wake up method: use Secure Element status PIO 3.1.1 Signalling method: open drain or push pull 3.1.1.1 TO136 wiring for the open drain method 3.1.1.2 TO136 wiring for the push pull method 3.1.2 Status PIO settings 3.1.2.1 Example diagrams accoding to settings 3.2 Second wake up method: scheduled time wake up	
4	Implement the choosen wake up method 4.1 Wake up with status PIO	8
5	Appendix A: commands BUSY duration 5.1 Timings with TO136 Secure Element 5.1.1 aes_encrypt() / aes_decrypt() 5.1.2 compute_cmac() / verify_cmac() 5.1.3 compute_hmac() / verify_hmac() 5.1.4 secure_message() 5.1.5 unsecure_message() 5.1.6 sha256() 5.1.7 sign() 5.1.8 verify()	10 10 10 11 12 12
In	ex	1:





1. Legal

Copyright (C) 2016-2023 Trusted Objects. All rights reserved.

1.1 Disclaimer

These softwares, source codes, header files, and documentations (hereinafter referred to as materials) are provided AS IS, without warranty of any kind, express or implied, including but not limited to the warranties of merchantability, fitness for a particular purpose and non-infringement.

In no event shall the authors or Copyright holders be liable for any claim, damages or other liability, whether in an action of contract, tort or otherwise, arising from, out of or in connection with the materials or the use or other dealings in the materials.





2. Introduction

When sending commands to Secure Element, you may want to switch on MCU standby mode while waiting the response availability, in order to optimize power consumption. This guide will help you to optimize your MCU power consumption when working with Trusted Objects Secure Element, and explains how to integrate this in your client application relying on libTO.





3. Wake up methods

Two methods are detailed below, choose the more suitable for your project.

3.1 First wake up method: use Secure Element status PIO

Note: This is the recommended method.

Note: To use this method, Secure Element status PIO feature must be enabled in your Secure Element release.

Note: This feature is unavailable when upgrading TO136 firmware if your TO136 loader version is lower than 3.24.0. From loader 3.24.0, status PIO behaves as in TO136 firmware.

The Secure Element PIO pin can be used to be notified about the following states:

- IDLE: the Secure Element is ready to receive a new command
- BUSY: a command is currently processed by the Secure Element
- READY: a command response is ready to be read

IDLE can be signalled either the same way as ready, else by status PIO high impedance.

We assume below the Secure Element status PIO is connected to a PIO of your MCU on which interrupts can be configured to wake up from standby on state change.

3.1.1 Signalling method: open drain or push pull


The PIO level can be signalled by open drain or by push pull.

3.1.1.1 TO136 wiring for the open drain method

This method is suitable if you have several devices able to wake up your MCU using the same PIO.




Chapter 3. Wake up methods 3.1. First wake up method: use Secure Element status PIO

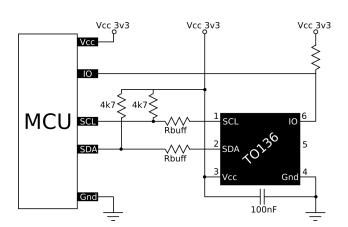

3.1.1.2 TO136 wiring for the push pull method

This method is suitable if TO136 is the only device able to wake up your MCU using this PIO, because it avoids the TO136 open drain internal pull up power consumption.

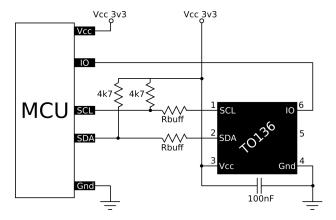

3.1.2 Status PIO settings

Include the libTO header in your code:

#include "TO.h"

and initialize the Secure Element I2C bus with TOSE init().

The status PIO behavior can be customized to fit your needs through the following libTO API:

TO_ret_t TOSE_set_status_PIO_config(TOSE_ctx_t *ctx, int enable, int opendrain, int ready_level, int idle_hz)

Configure Secure Element status PIO notification behavior.

The configuration is stored permanently by the Secure Element, and then persists across reboots.

Note: the status PIO state during this function call is not reliable, then you should ignore it at this step.

Parameters





Chapter 3. Wake up methods 3.1. First wake up method: use Secure Element status

PIO

- ctx [in] Pointer to the SE context
- enable [in] Set to 1 to enable status PIO notifications (default: 1)
- opendrain [in] Set to 1 for open drain, 0 for push pull (default: 1)
- ready_level [in] Set to 1 to signal readyness with high PIO level, 0 to signal it with low PIO level (default: 1).
- idle_hz [in] Set to 1 to have idle state signalled by PIO high impedance, else signal it with the same level as ready (default: 1)

Returns

- TORSP SUCCESS on success
- TO_DEVICE_WRITE_ERROR: error writing data to Secure Element
- TO_DEVICE_READ_ERROR: error reading data from Secure Element
- TO_INVALID_RESPONSE_LENGTH: unexpected response length from device
- TO ERROR: generic error

The open drain signalling method is interesting to be used if you plan to have several devices able to wake up your MCU using the same PIO. In the other hand, push pull method is interesting if the Secure Element is the only device able to wake up the MCU, because the internal pull up resistor is disabled and then consomes no power.

The READY signalling level allows you to choose if you want to wake up on a rising or a falling edge.

Warning: Avoid relying on status PIO when calling this function, because as it changes its settings, status PIO behaviour may be inconsistent.

Warning: TO avoid TO136 NVM lifetime decrease, do not call this function very often as it writes persistent data to TO136 NVM.

Note: This function is unavailable when upgrading TO136 firmware.

You can check the current settings by calling the following function:

TO_ret_t TOSE_get_status_PIO_config(TOSE_ctx_t *ctx, int *enable, int *opendrain, int *ready_level, int *idle_hz)

Return Secure Element status PIO notification configuration.

Note: this function do not have BUSY / READY states, the PIO remains in the IDLE state when called.

Parameters

- ctx [in] Pointer to the SE context
- enable [out] Set to 1 if status PIO notification enabled
- opendrain [out] Method to signal level, see TO_set_status_PIO_config()



- ready_level [out] PIO level to signal ready state, see TO_set_status_PIO_config()
- idle_hz [out] Idle state signalled by PIO high impedance, see TO_set_status_PIO_config()

Returns

- TORSP SUCCESS on success
- TO_DEVICE_WRITE_ERROR: error writing data to Secure Element
- TO_DEVICE_READ_ERROR: error reading data from Secure Element
- TO_INVALID_RESPONSE_LENGTH: unexpected response length from device
- TO ERROR: generic error

3.1.2.1 Example diagrams according to settings

Open drain, ready level high, idle high impedance:



Push pull, ready level low, idle high impedance:



Push pull, ready level low:



3.2 Second wake up method: scheduled time wake up

Note: This method is to be considered only if you have not the possibility to use *First wake up method:* use *Secure Element status PIO*.

This method consists to enable the MCU standby mode, having scheduled a wake up time on an interrupt based timer. The standby duration can be sized according to current Secure Element working command, and to its data size.

See *Appendix A: commands BUSY duration* to have an estimated duration of the BUSY state for some significative commands.





4. Implement the choosen wake up method

The libTO provides hooks to call your client application code automatically at particular library internal steps. The interesting hooks here are PRE COMMAND and POST WRITE, which are called respectively just before sending a command and just after a command has been written to the Secure Element.

You have to define functions having the right hook prototype, and then declare your hooks to libTO. Refer to libTO hook APIs for more details.

You can also see to the hook.c example provided with the library to have an overview of a generic implementation.

So the idea is, in your hook functions implementation, to switch on your MCU standby mode according to one of the *Wake up methods*, and then to wake up according to the expected event, then the Secure Element response will be read from the I2C bus by libTO.

Warning: Do NOT call any libTO function from inside PRE COMMAND or POST WRITE hooks


4.1 Wake up with status PIO

Just before sending a command, use the PRE COMMAND hook to prepare PIO wake up interrupt. The POST WRITE hook will be used just after writing the command and before reading the response, to sleep until it is available to be read.





4.1.1 Sequence diagram for such use case

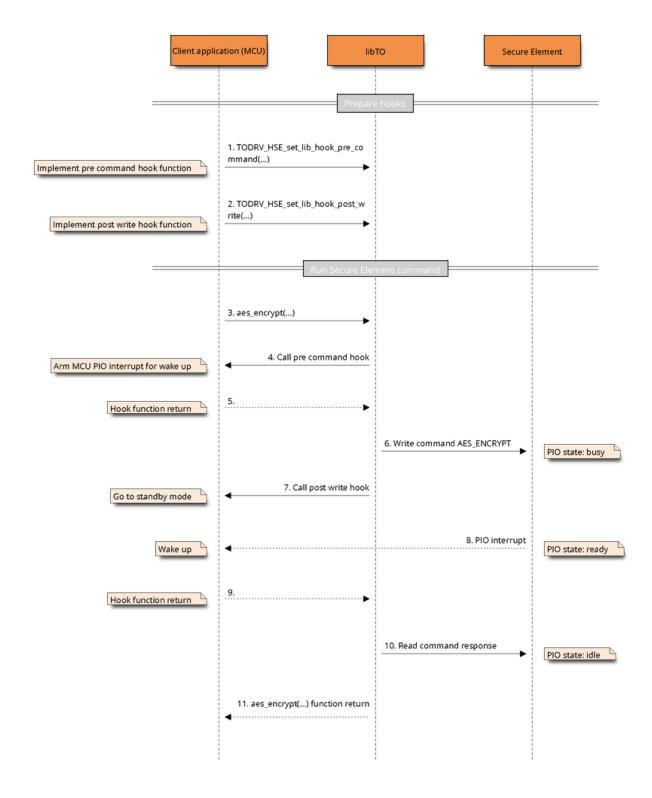





4.2 Wake up with timer

Just after writing the command to the Secure Element, go to standby, and wait a timer interrupt to wake up and let libTO read the response.

See *Appendix A: commands BUSY duration* to have an estimated duration of the BUSY state for some significative commands.





5. Appendix A: commands BUSY duration

Below you can find BUSY time estimations (milliseconds) for some Secure Element commands, with different data sizes.

Note: These value are informative and given with no guarantee, they are subject to change with Secure Element versions.

5.1 Timings with TO136 Secure Element

5.1.1 aes_encrypt() / aes_decrypt()

Data size	16	32	64	128	256	512
BUSY duration (ms)	4	5	7	11	18	34

5.1.2 compute_cmac() / verify_cmac()

Data size	16	32	64	128	256	512
BUSY duration (ms)	8	12	19	35	66	127

5.1.3 compute hmac() / verify hmac()

Data size	16	32	64	128	256	512
BUSY duration (ms)	14	14	14	15	16	19

5.1.4 secure message()

Data size	16	32	64	128	256	512
BUSY duration (ms)	18	19	21	25	35	53



5.1.5 unsecure_message()

Data size	16	32	64	128	256	512
BUSY duration (ms)	20	21	24	28	38	57

5.1.6 sha256()

Data size	16	32	64	128	256	512
BUSY duration (ms)	0.7	0.8	1.5	2	3	6

5.1.7 sign()

Data size	16	32	64	128	256	512
BUSY duration (ms)	1080	1080	1080	1080	1080	1080

5.1.8 verify()

Data size	16	32	64	128	256	512
BUSY duration (ms)	2040	2040	2040	2040	2040	2040





 Index

Index

Т

 $\begin{tabular}{ll} TOSE_get_status_PIO_config (C function)$, 5\\ TOSE_set_status_PIO_config (C function)$, 4\\ \end{tabular}$

