Extended Serial Protocol User's Guide

Revision 3.014, October, 2025 © Copyright 2025, Valentine Research, Inc.

VALENTINE RESEARCH, INC. "ESP" LICENSE AGREEMENT

Thank you for choosing Valentine Research, Inc. ("Valentine", "we," "us," or "our") and our ESP Serial Protocol (the "Software") and hardware related to the ESP Serial Protocol (the "Hardware) for use with Valentine's VALENTINE ONE® radar detectors. Please review this License Agreement (the "License") carefully before using the Software and Hardware as described herein. If you do not agree to the terms of this License, do not use the Software or Hardware.

- 1. General License. Valentine grants you a limited, non-exclusive, non-transferable, royalty-free, worldwide license to download, install, and use the Software or Hardware and any trademarks of Valentine, only as described in this License. The terms of this License will also govern any upgrades to the Software or Hardware, unless such an upgrade is accompanied by a separate license.
- 2. Permitted License Uses and Restrictions. You may use the Software and Hardware to create third party applications or software designed to be used with or including the Software and/or Hardware, or with Valentine's products that use the Software or Hardware as a serial protocol. You may not copy, decompile, reverse engineer, disassemble, modify, or create derivative works of the Software or Hardware. You may not make the Software available over a network where it could be used by multiple computers or available to others for downloading and installation. The Software shall not be downloaded, exported or re-exported in violation of any law, including without limitation, any country subject to any applicable U.S. restrictions. The Hardware shall not be exported, or re-exported in violation of any law, including without limitation, any country subject to any applicable U.S. restrictions.
- 3. Intellectual Property. The Software and any associated proprietary code, inventions, or patents resulting from the Software or Hardware, and all trademarks and trade dress of Valentine remain the property of Valentine. By accessing the Software, you acquire no ownership rights to the Software or Hardware. In the event you use any trademarks of Valentine, you agree to do so only in the manner described in this License. Specifically, you agree only to use the trademarks of Valentine to describe any application or software you create using the Software or Hardware as "Works in connection with Valentine's ESP Serial Protocol" or similar statement attributing ownership of any trademarks or the Software and Hardware to Valentine. You agree not to do anything that would compromise Valentine's rights in and to the Software, Hardware, or Valentine's trademarks.
- 4. Quality Assurance. Upon request, and with no obligation to return, you agree to provide suitable specimens of any application, software, or other protocol you create using the Software or Hardware to Valentine to verify your compliance with this License.
- 5. You agree to allow Valentine to use your name and/or product name in an index of products that work with the Software and Hardware and Valentine's products.
- 6. AS IS Basis. THE SOFTWARE AND HARDWARE ARE PROVIDED TO YOU ON AN "AS IS" BASIS, AND YOU ARE SOLELY RESPONSIBLE FOR THEIR USE. VALENTINE DISCLAIMS ALL WARRANTIES REGARDING THE SOFTWARE AND HARDWARE, INCLUDING WARRANTIES OF NON-INFRINGEMENT. VALENTINE IS NOT LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES ARISING FROM OR RELATING TO YOUR USE OF THE SOFTWARE OR HARDWARE.
- 7. Indemnification. You agree to defend, indemnify, and hold harmless Valentine against any and all loss, liability, claims, causes of action, or suits arising out of or related to your use of the Software or Hardware, or any applications, software, or other protocols you create using the Software or Hardware, whatever their nature.
- 8. Support. Valentine has no obligation to provide any type of support for the Software or Hardware, or for any applications, software, or protocols you create using the Software or Hardware.
- 9. Termination. Valentine may terminate this License immediately, without notice to you. This License shall also terminate automatically upon your breach of any of the terms and conditions of this License. In the event of termination of this License, you will immediately cease all use of Valentine's trademarks, and the Software.
- 10. No Assignment. You may not transfer or assign this License or the Software.
- 11. Miscellaneous. Any dispute arising under this License shall be resolved exclusively by the state and federal courts of the State of Ohio, applying Ohio law without regard to any conflict of law provisions.

Table of Contents

Scope	5
Operating Modes	
Hardware Requirements	
Audio Data	
Display Data	
2 Protocol Description	6
Serial Format	6
Packet Format	6
Packet Naming Convention	6
Time Slicing	
Time Slice Hold Off	
Valentine One® Request Processing	7
Valentine One Discovery	
Accessory Discovery	9
3 Time Slice Specifications	10
Time Slice Assignment	11
Time Slice Priority	11
4 ESP Packet Quick Reference	12
5 Device Information Packets	
reqVersion	
respVersion	
regSerialNumber	
respSerialNumber	
6 User Configuration	
reqUserBytes	
respUserBytes	
reqWriteUserBytes	
reqFactoryDefault	
7 Custom Sweeps/Custom Frequencies Packets	
reqWriteSweepDefinition	.• I/
reqAllSweepDefinitions	
respSweepDefinition	
reqDefaultSweeps	
reaMax SweenIndex	
reqMaxSweepIndex	22
respMaxSweepIndex	22 22
respMaxSweepIndexrespSweepWriteResult	22 22 23
respMaxSweepIndexrespSweepWriteResultreqSweepSections	22 22 23 23
respMaxSweepIndexrespSweepWriteResultreqSweepSectionsrespSweepSections	22 23 23 24
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions	22 23 23 24
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition	22 23 23 24 25
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets	22 23 24 25 25
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display	22 23 24 25 25 26
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets	22 23 24 25 25 26 26
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData	22 23 24 25 25 26 27
respMaxSweepIndex. respSweepWriteResult. reqSweepSections. respSweepSections reqDefaultSweepDefinitions. respDefaultSweepDefinition. 8 Display and Audio Packets. Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay.	22 23 24 25 25 26 26 29
respMaxSweepIndex. respSweepWriteResult. reqSweepSections. respSweepSections. reqDefaultSweepDefinitions. respDefaultSweepDefinition. 8 Display and Audio Packets. Reproducing the Valentine One Display infDisplayData. reqTurnOffMainDisplay. reqTurnOnMainDisplay.	22 23 24 25 25 26 27 29 29
respMaxSweepIndex. respSweepWriteResult. reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqMuteOn.	2223242526262930
respMaxSweepIndex. respSweepWriteResult. reqSweepSections respSweepSections reqDefaultSweepDefinitions. respDefaultSweepDefinition. 8 Display and Audio Packets. Reproducing the Valentine One Display infDisplayData. reqTurnOffMainDisplay reqTurnOnMainDisplay reqMuteOn. reqMuteOff.	222324252626293030
respMaxSweepIndex. respSweepWriteResult. reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition. 8 Display and Audio Packets. Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode.	22 23 24 25 26 26 29 30 30
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume reqWriteVolume	2223242526262930303132
respMaxSweepIndex respSweepSections respSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqWriteVolume reqAbortAudioDelay	22232425262729303031313232
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition. 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqWriteVolume reqAbortAudioDelay reqDisplayCurrentVolume	22232425262629303031313233
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqWriteVolume reqAbortAudioDelay reqDisplayCurrentVolume reqAbortAudioDelay reqDisplayCurrentVolume reqAllVolume	22232425252629303131323333
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition. 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqAbortAudioDelay reqDisplayCurrentVolume reqAbortAudioDelay reqDisplayCurrentVolume reqAllVolume reqAllVolume respAllVolume respAllVolume	2223242525262729303131323333
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqWriteVolume reqAbortAudioDelay reqDisplayCurrentVolume reqAbortAudioDelay reqAllVolume reqAllVolume respAllVolume respAllVolume respAllVolume respAllVolume	222324252526272930313132333333
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqAbortAudioDelay reqAbortAudioDelay reqDisplayCurrentVolume respAllVolume	222324252629303131323333333333
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOrfMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqWriteVolume reqAbortAudioDelay reqDisplayCurrentVolume reqAllVolume respAllVolume	22232425262629303131323333333333
respMaxSweepIndex respSweepWriteResult reqSweepSections respSweepSections reqDefaultSweepDefinitions respDefaultSweepDefinition 8 Display and Audio Packets Reproducing the Valentine One Display infDisplayData reqTurnOffMainDisplay reqTurnOnMainDisplay reqTurnOnMainDisplay reqMuteOn reqMuteOff reqChangeMode reqCurrentVolume respCurrentVolume respCurrentVolume reqAbortAudioDelay reqAbortAudioDelay reqDisplayCurrentVolume respAllVolume	2223242526262930313132333333333333

10 Miscellaneous Packets	39
respDataReceived	
reqBatteryVoltage	
respBatteryVoltage	
respUnsupportedPacket	
respRequestNotProcessed	
infV1Busy	
respDataError	
11 Savvy TM Specific Packets	
reqSavvyStatus	
respSavvyStatus	
reqVehicleSpeed	
respVehicleSpeed	
reqOverrideThumbwheel	
reqSetSavvyUnmuteEnable	42
12 Appendix	
Appendix 12.1 ESP Specification User Feature versus V1 User Byte-bit Summary	
Appendix 12.2 Tech Display User Byte-bit Summary	
Appendix 12.3 Accessory Discovery Flowchart	
14 Revision History	
17 ACVISION 1115101 y	

1 ESP Overview

The Extended Serial Protocol (ESP) is a serial protocol that allows accessories to communicate with either the Valentine One Radar Locator or other accessories. All communication is performed on a single wire. This is accomplished using a method called time slicing, which has strict timing requirements with the Valentine One acting as the bus controller. Using ESP, the Valentine One can provide display data to all accessories as well as respond to requests from accessories to take an action, such as muting the audio or turning off the Valentine One display, or to provide more detailed information about the current threat environment.

Scope

This specification applies to all Valentine Ones with version 3.892 and higher. In this document, ESP capable Valentine Ones and accessories will be referred to as ESP devices. Non-ESP capable Valentine Ones and accessories will be referred to as Legacy devices.

Operating Modes

All ESP devices manufactured by Valentine Research, Inc. will support two modes of communication: Legacy Mode and ESP Mode.

Legacy Mode allows ESP devices to operate on the network with non-ESP devices. In this mode, the Valentine One will output the Concealed Display Output Stream (CDOS) data in the same format used by previous versions. The format is described in *Concealed Display Output Detail.pdf*. While this specification makes one change to the CDOS so that it can be used for device discovery, the operation of Legacy devices remains unchanged. Device discovery is the process that all ESP devices go through to determine what mode the data bus is operating in. Refer to the discovery section for more information.

ESP Mode is the communication protocol discussed in this specification.

Unless noted, all Valentine Research accessories marked with the ESP logo will support both modes and will be able to dynamically switch between modes. Third party accessories may support one or both modes at the manufacturer's discretion.

Hardware Requirements

All devices that support Legacy Mode must be able to provide a pull up resistor on the data line. The line should be pulled up to 1.2V to allow the Valentine One to detect the presence of the accessory. This pull up must be switchable so that it can be turned off when operating in ESP Mode.

All devices that support ESP Mode must have a UART available. The UART's transmit pin (TXD) must be able to switch between TXD output and high impedance. This will allow the UART's receive pin (RXD) to use the same data line (half-duplex mode of operation). The TXD line must be set to high impedance whenever the device is not actively transmitting or when the device is operating in Legacy Mode.

Refer to the <u>ESP Hardware Specification</u> for more detailed information on the hardware requirements for an ESP accessory.

Audio Data

The audio data sent by the Valentine One remains unchanged by this specification. The audio format is outside the scope of this document.

Display Data

In Legacy Mode, the display data will be transferred using the format used by non-ESP capable Valentine Ones, as described in *Concealed Display Output Detail.pdf*. The only change to the data format is for discovery mode.

In ESP Mode, the display data will be transmitted in a packet with the <u>infDisplayData</u> packet identifier. The data will be sent at semi-regular intervals and may be interspersed with other packets depending on the current accessory environment.

2 Protocol Description

Serial Format

All ESP communication will take place at 57600 baud using 8 data bits, no parity, 1 stop bit and no flow control.

Packet Format

All ESP communication is done using data packets. A packet consists of six framing bytes and payload data. The payload data is not required for all packets. There are two ESP packet formats that all accessories must support. The format is established by the Valentine One controlling the bus. A Valentine One with a device identifier of \$9 uses the Non-Checksum Packet Format. A Valentine One with a device id of \$A uses the Checksum Packet Format. Unless specified, all payload lengths discussed in this document assume checksums are being used. All accessories on the bus must use the same packet format used by the Valentine One that is controlling the bus.

Table 2.1 - Non-Checksum Packet Format

Byte No.	Name	Value	Description
0	SOF	\$AA	Start of Frame
1	DI	\$D0 + Dest ID	Destination Identifier
2	OI	\$E0 + Send ID	Originator Identifier
3	PI	\$XX	Packet Identifier
4	PL	\$XX	Payload Length
5 : PL + 5 - 1	PD	\$XX	Payload Data (Not present if PL = 0)
5 + PL	EOF	\$AB	End of Frame

Table 2.2 - Checksum Packet Format

tuble 2.2 Checkson Lucket Lorinat								
Byte No.	Name	Value	Description					
0	SOF	\$AA	Start of Frame					
1	DI	\$D0 + Dest ID	Destination Identifier					
2	OI	\$E0 + Send ID	Originator Identifier					
3	PI	\$XX	Packet Identifier					
4	PL	\$XX	Payload Length (including checksum)					
5 : PL + 5 - 2	PD	\$XX	Payload Data (Not present if PL = 1)					
5 + PL - 1	CS	\$XX	Packet Checksum ¹					
5 + PL	EOF	\$AB	End of Frame					

Note 1: The checksum is calculated as an 8 bit summation with no attention to carries. The formula is $CS = SOF + DI + OI + PI + PL + PD_1 + PD_2 + ... + PD_{PL-1}$

Non-Checksum infDisplayData Packet Example:

AA D8 E9 31 08 5B 1F 38 28 0C 00 00 AB

Checksum infDisplayData Packet Example

AA D8 EA 31 09 5B 1F 38 28 0C 00 00 E7 AB

Packet Naming Convention

- Packets that are used to request data or request that an action be taken are prefixed with 'req". Examples: reqVersion, reqSerialNumber, reqBatteryVoltage.
- Packets that are used to respond to a request are prefixed with 'resp'. Examples: respVersion, respSerialNumber, respBatteryVoltage.
- Packets that provide data without a corresponding request and packets that provide error information are considered informational and are prefixed with 'inf'.
 Examples: infDisplayData, infV1Busy.

Time Slicing

ESP devices use a technique called time slicing to communicate over the ESP bus. Each accessory is assigned a specific time interval, called a time slice, in which they are allowed to transmit. Accessories may only transmit during their assigned time slice and must be listening for packets the rest of the time. The Valentine One will initiate the time slices by sending out an *infDisplayData* packet. After receiving the EOF (End of Frame byte) in the *infDisplayData* packet from the Valentine One, all accessories will immediately start a timer to wait for their allotted time slice. While waiting for the time slice, the accessory should continue to listen for requests or responses from other accessories. Once the accessory's time slice has arrived, the accessory should respond to any pending requests. Failure to send a response in the next allotted time slice may cause another device to resend the request. If the accessory is not responding to a request during its time slice, it may initiate communication with another device. *The packet transmission should start at the beginning of the time slice and must be completed before the end of the time slice*. Refer to the Time Slice Specification section for a more detailed discussion of time slicing.

Time Slice Hold Off

To insure rapid response time in situations where close audio and display synchronization is desired (i.e. during the sign-on sequence), the Valentine One has the ability to deny all accessories a time slice. This process is called holding off the time slices and is accomplished by setting the *TS Holdoff* bit in the *infDisplayData* packet. When the *TS Holdoff* bit is set, all accessories will ignore their time slices until they receive an *infDisplayData* packet with the *TS Holdoff* bit cleared. This means that while the *TS Holdoff* bit is set, the Valentine One retains control of the bus after the *infDisplayData* packet is sent out and can send out display updates without waiting for the accessories.

Valentine One® Request Processing

The Valentine One will attempt to process all incoming requests as quickly as possible. However, alert processing remains the Valentine One's highest priority, so some requests may be rejected or delayed. If a request is going to be delayed, the Valentine One will respond with an *infV1Busy* packet before the next *infDisplayData* packet. The *infV1Busy* packet will contain a list of up to five pending commands that the Valentine One is working on. Accessories that are waiting for a response are responsible for checking the payload of the *infV1Busy* response. If the accessory's request is pending, the accessory should not send the request again until a response is received or the request is not found in the *infV1Busy* response. If a request is rejected by the Valentine One, the Valentine One will respond with a *respRequestNotProcessed* packet. The accessory should wait until an *infDisplayData* packet is received without a preceding *infV1Busy* packet until reiterating the request.

Valentine One Discovery

An ESP capable Valentine One will automatically determine the type of connected accessories and operate in the highest level possible. This process is called discovery. If there are <u>only</u> ESP accessories connected, the Valentine One will operate in ESP mode. If there are <u>any</u> Legacy devices connected, the Valentine One will operate in Legacy mode.

Because Legacy devices are required to have a pull up on the data line, the Valentine One detects the accessory type by reading the voltage on the data line. If the voltage is above 1.2 volts then the Valentine One will operate in Legacy mode. If the voltage is below 1.2 volts, the Valentine One will operate in ESP mode. In both modes, the Valentine One will periodically read the voltage on the data line to look for a change in the accessory environment.

ESP Mode Discovery

The Valentine One will perform discovery in ESP mode after all accessory time slices have elapsed. This can be done without coordinating with the accessories because at that point all accessories should be acting as receivers with the Valentine One in control of the bus.

Legacy Mode Discovery

The Valentine One must coordinate the discovery attempt when in Legacy mode with the accessories. Since ESP capable accessories will have their pull-ups turned on in Legacy mode, they must turn off their pull-ups for the Valentine One to properly discover any true Legacy accessories attached to the bus. To coordinate with the accessories, the Valentine One will embed a special character in the unused bits of the CDOS to inform the accessory that a discovery attempt is about to occur. The special character will be placed in the bits labeled as 'fill' in the Concealed Display Output Detail.pdf according to Table 2.5.

CDOS Bit Number	CDOS Bit Name	Discovery Value
33	Fill bit 1	1
34	Fill bit 2	0
35	Fill bit 3	1
36	Fill bit 4	0

When an ESP capable accessory recognizes the *reqModeCheck* request it must temporarily turn off its pull-up resistor. As shown in Figure 4, the pull up circuit must be turned off no later than 1 mS after the rising edge of the CDOS idle period and must remain off for at least 9.58 mS. If no Legacy devices are on the bus the voltage will fall below the threshold and the Valentine One will switch to ESP mode. Therefore if an ESP accessory receives ESP data while its pull-up is turned off, the accessory should enter ESP mode (its pull-up will not be turned back on). However, if there are Legacy devices on the bus then the voltage will remain elevated and the Valentine One will stay in Legacy mode. Refer to the *reqModeCheck* packet description for more details.

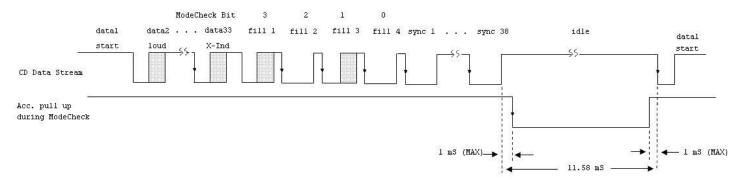


Figure 2.1 - Legacy Mode Check bit locations

Accessory Discovery

Accessories that support both ESP and Legacy modes must be able to change modes dynamically. However, accessories that support only ESP mode do not need to implement the discovery algorithm discussed in this section.

ESP devices should power up in ESP mode. The accessory will then toggle between the two modes until valid data is found or it is determined that the data stream has been lost. Valentine Research recommends waiting for data for 150 mS before changing modes. The flowchart in Appendix 12.3 demonstrates an example implementation that continually monitors for loss of data while still processing the data stream. In that example, the accessory will consider the data stream lost after attempting to find data in both modes twice. When the data is lost, some accessories may require special processing. For example, the Concealed Display must blank its display when the data stream is lost. Once all post-data-loss processing is complete, the accessory should enter a low current sleep mode to prevent battery drain if the device is connected to a non-switched voltage supply. It should be noted that the accessory is in Legacy mode (i.e. pull-ups are turned on) when it enters sleep mode. This is done to allow the accessory to be woken up by a hardware interrupt triggered by either a legacy Valentine One's CDOS or an ESP packet from an ESP capable Valentine One. Refer to the hardware requirements for more information.

Appendix 12.3 also demonstrates the accessory's implementation of the *reqModeCheck* request described above. When a valid CDOS packet is received, the accessory must switch to ESP mode by turning off its pull-ups and enabling the receiver on the UART. This can easily be integrated into the normal data processing and discovery timeout functionality by allowing the timeout interval to be modified. In the example in Appendix 12.3 the timeout starts at 150 mS and will stay that way until a *reqModeCheck* request is received in the CDOS. The accessory will then change the timeout to 9.5 mS and change to ESP mode, just as it would if a 150 mS timeout had occurred. If ESP data is received before the 9.5 mS timeout, the accessory will change the timeout back to 150 mS and stay in ESP mode. If no ESP data is received, the accessory will switch to Legacy mode and change the timeout back to 150 mS and wait for data.

3 Time Slice Specifications

Table 3.1 - Time Slice Parameter Specification

STO CIT TIME SHOOT WINNESSED SPECIFICATION							
Parameter	Symbol	Value	Units				
Number of Time Slices	TS_{Max}	8					
Number of Framing Bytes ¹	Bytes _{Frame}	6	Bytes				
Maximum Payload Length	PL_{Max}	16	Bytes				
Byte Transmission Time ²	t_{Byte}	173.611	μS				
Guard Time	t_{Guard}	173.611	μS				
Pacing Time	tPacing	173.611	μS				
Maximum Pacing Time	tPacingMax	64	mS				
Total Time Slice Time ³	t _{Slice}	7.639	mS				

Notes 1: Framing bytes are SOF, DI, OI, PI, PL and EOF

- 2: $t_{Byte} = (1/baud) * 10 = (1/57600) * 10 = 173.611 \mu S$
- $3: t_{Slice} = (t_{Byte} * Bytes_{Frame}) + (t_{Byte} * PL_{Max}) + (t_{Pacing} * (Bytes_{Frame} + PL_{Max}))$

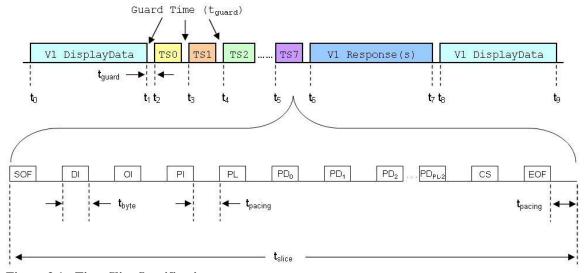


Figure 3.1 - Time Slice Specification

To insure every device has time to process each byte, all devices must use inter-packet pacing, as shown in Figure 3.1. If the time between bytes exceeds $t_{PacingMax}$, the receiving device should abandon the current packet and start looking for the next valid packet, indicated by the SOF byte.

Figure 3.1 shows a typical time slice cycle. The cycle starts at t_0 and continues through t_7 . The next cycle begins at t_8 . Note that the ellipses between TS2 and TS7 represent TS3, TS4, TS5 and TS6, which have been omitted for clarity.

Table 3.2 - A typical ESP cycle.

	i i i j piedi Est e j elet
Time	Event
t0	The Valentine One starts transmitting an <i>infDisplayData</i> packet.
t1	The Valentine One finishes transmitting the <i>infDisplayData</i> packet and relinquishes control of the
l1	bus. All accessories start timers to wait for their assigned time slice.
t2	The device assigned to TS0 has control of the bus and may begin transmitting if necessary.
t3	The device assigned to TS1 has control of the bus and may begin transmitting if necessary.
t4	The device assigned to TS2 has control of the bus and may begin transmitting if necessary.
t5	The device assigned to TS7 has control of the bus and may begin transmitting if necessary.
	The Valentine One takes control of the bus and sends out responses or informational packets as
t6	needed. There may be 0 or more packets sent. The Valentine One responses and informational
	packets will be sent out in the order specified in Table 3.3.
t7	The Valentine One finishes sending responses and informational packets. The Valentine One still
t/	has control of the bus.
t8	The next ESP cycle starts as the Valentine One starts transmitting an infDisplayData packet.

Table 3.3 - Valentine One responses and informational packets transmission order

Output Number	Description
0	All respRequestNotProcessed packets
1	All available responses, including respDataError packets.
2	Alert Table data packets if the Alert Table data is turned on.
3	Custom Sweep Definitions if they have been requested.
4	infV1Busy message if the Valentine One has any pending requests.
5	infDisplayData packet.

Time Slice Assignment

Table 3.4 – Time Slice Assignment

	ime siee rissigiment				
Device ID	Description	Time Slice	Guard Start	Slice Start ¹	Slice End ¹
\$00	Concealed Display / Tech Display ³	0	0.000 μS	173.611 μS	7.813 mS
\$01	Remote Audio	1	7.813 mS	7.986 mS	15.63 mS
\$02	Savvy	2	15.63 mS	15.80 mS	23.44 mS
\$03	Available for 3 rd party use	3	23.44 mS	23.61 mS	31.25 mS
\$04	Available for 3 rd party use	4	31.25 mS	31.42 mS	39.06 mS
\$05	Available for 3 rd party use	5	39.06 mS	39.24 mS	46.88 mS
\$06	Reserved for Valentine Research	6	46.88 mS	47.05 mS	54.69 mS
\$07	Reserved for Valentine Research	7	54.69 mS	54.86 mS	62.50 mS
\$08	General Broadcast ²	NA	NA	NA	NA
\$09	Valentine One without checksums	NA	NA	NA	NA
\$0A	Valentine One with checksums	NA	NA	NA	NA

Notes

Device identifiers three, four and five have been made available for third party devices. All other device identifiers are for use by Valentine Research, Inc. products only. ESP device manufacturers are encouraged to publish the device identifier used by their ESP capable products. This will allow the users to determine which products can be put on the bus at the same time. A useful feature for third party devices would be the ability to allow the user to select the device identifier to be used.

Time Slice Priority

Time slice assignments are in order of increasing priority. If the Valentine One receives requests from two devices during the same time slice cycle, the request from the device with the highest priority will be processed. The request from the device with the lower priority will not be processed and a *respRequestNotProcessed* packet will be sent by the Valentine One.

^{1:} All times are relative to the reception of the EOF byte of an infDisplayData packet whose Originator ID (OI) is the Valentine One.

^{2:} The General Broadcast Device ID (\$08) can only be used as a Destination Identifier (DI) and may only be used in the *infDisplayData*, *infV1Busy* and *respAlertData* packets.

^{3:} The Concealed Display and Tech Display use the same Device ID and therefore should not be connected at the same time.

4 ESP Packet Quick Reference

S =The device may send the packet

P = The device is capable of correctly receiving and processing the packet blank = The device does not support the packet

Packet Group	Packet Name	Packet ID (PI)	Payload Length ¹ (PL)	Concealed Display	Tech Display	Remote Audio	Savvy	Valentine One Gen1 ²	Valentine One Gen2 ²
	<u>reqVersion</u>	\$01	1	P	SP	P	P	P	P
Device	<u>respVersion</u>	\$02	8	S	SP	S	S	S	S
<u>Information</u>	<u>reqSerialNumber</u>	\$03	1				P	P	P
	<u>respSerialNumber</u>	\$04	11				S	S	S
	<u>reqUserBytes</u>	\$11	1		P			P	P
User Setup	respUserBytes	\$12	1		S			S	S
Options	<u>reqWriteUserBytes</u>	\$13	7		P			P	P
	<u>reqFactoryDefault</u>	\$14	1		P			P	P
	<u>reqWriteSweepDefinition</u>	\$15	6					P	P
	reqAllSweepDefinitions	\$16	1					P	P
	respSweepDefinition	\$17	6					S	S
	<u>reqDefaultSweeps</u>	\$18	1					P	P
	reqMaxSweepIndex	\$19	1					P	P
Custom Sweep	respMaxSweepIndex	\$20	2					S	S
	respSweepWriteResult	\$21	2					S	S
	reqSweepSections	\$22	1					P	P
	respSweepSections	\$23	6,11 or 16					S	S
	reqDefaultSweepDefinitions	\$24	1					P	P
	respDefaultSweepDefinition	\$25	6					S	S
	<u>infDisplayData</u>	\$31	9	Р	Р	Р	P	S	S
	reqTurnOffMainDisplay	\$32	1 or 2		Р			P	Р
	reqTurnOnMainDisplay	\$33	1		Р			P	P
	reqMuteOn	\$34	1					P	P
	reqMuteOff	\$35	1				S	P	P
	reqChangeMode	\$36	2					P	P
<u>Display and</u> Audio	reqCurrentVolume	\$37	1		S				Р
114410	respCurrentVolume	\$38	3		Р				S
	reqWriteVolume	\$39	4		S				Р
	reqAbortAudioDelay	\$3A	1						P
	reqDisplayCurrentVolume	\$3B	1		S				Р
	reqAllVolume	\$3C	1						Р
	respAllVolume	\$3D	5						S
	reqStartAlertData	\$41	1		S			P	P
Alert Output	reqStopAlertData	\$42	1					P	P
	respAlertData	\$43	8		P			S	S
	respDataReceived	\$61	1	S	S			P	Р
	<u>reqBatteryVoltage</u>	\$62	1					P	Р
	respBatteryVoltage	\$63	3					S	S
Miscellaneous	respUnsupportedPacket	\$64	1				SP	SP	SP
	respRequestNotProcessed	\$65	2		Р		Р	SP	SP
1	infV1Busy	\$66	2-6	P	P	P	P	S	S
	respDataError	\$67	2					S	S

Table continued on next page.

Packet Group	Packet Name	Packet ID (PI)	Payload Length ¹ (PL)	Concealed Display	Tech Display	Remote Audio	Savvy	Valentine One Gen1 ²	Valentine One Gen2 ²
Savvy Specific	<u>reqSavvyStatus</u>	\$71	1				P		
	reqVehicleSpeed	\$73	1				P		
	respVehicleSpeed	\$74	2				S		
	<u>reqOverrideThumbwheel</u>	\$75	2				P		
	reqSetSavvyUnmuteEnable	\$76	2				P		

Note 1: All payload lengths include a checksum byte. Subtract 1 from the payload length indicated if checksums are not being used Note 2: Refer to individual packet descriptions for firmware version restrictions on packet support. Unsupported packets are ignored.

5 Device Information Packets

reqVersion

The reqVersion packet is used to request the firmware version from any ESP capable device.

Valentine One version		V3.892 and above
Packet ID		\$01
Payload Length		1
Payload Bytes	0	Checksum

respVersion

The respVersion packet is used to respond to a reqVersion packet.

Valentine One version		V3.892 and above
Packet ID		\$02
Payload Length		8
	0	The version identification letter for the responding device 'V' for Valentine One 'C' for Concealed Display 'R' for Remote Audio 'S' for Savvy
	1	ASCII value of the major version number.
Payload bytes	2	Decimal point ('.')
	3	ASCII value of the minor version number.
	4	ASCII value of the first digit of the revision number.
	5	ASCII value of the second digit of the revision number.
	6	ASCII value of the Engineering Control Number.
	7	Checksum

req Serial Number

The *reqSerialNumber* packet is used to request a serial number from any serialized ESP capable accessory. ESP capable accessories without serial numbers are not required to respond to this packet.

Valentine One version		V3.892 and above
Packet ID		\$03
Payload Length		1
Payload Bytes	0	Checksum

resp Serial Number

The *respSerialNumber* packet is used to respond to a *reqSerialNumber* packet. Unused characters will be NULL (\$00).

NULL (\$00).		
Valentine One version		V3.892 and above
Packet ID		\$04
Payload Length		11
	0	The first character of the serial number string, in ASCII.
	1	The second character of the serial number string, in ASCII
	2	The third character of the serial number string, in ASCII
Payload bytes	3	The fourth character of the serial number string, in ASCII
	4	The fifth character of the serial number string, in ASCII
	5	The sixth character of the serial number string, in ASCII
	6	The seventh character of the serial number string, in ASCII
	7	The eighth character of the serial number string, in ASCII
	8	The ninth character of the serial number string, in ASCII
	9	The tenth character of the serial number string, in ASCII
	10	Checksum

6 User Configuration

reqUserBytes

The reqUserBytes packet is used to request the current user modifiable settings in the Valentine One.

Valentine One version		V3.892 and above
Packet ID		\$11
Payload Length		1
Payload Bytes	0	Checksum

respUserBytes

The *respUserBytes* packet is used by the Valentine One to respond to a *reqUserBytes* request. Refer to Appendix 12.1 for a description of the user bytes.

Valentine One version		V3.892 and above
Packet ID		\$12
Payload Length		7
		User Byte 0
Payload bytes	1	User Byte 1
	2	User Byte 2
	3	User Byte 3
	4	User Byte 4
	5	User Byte 5
		Checksum

reqWriteUserBytes

The *reqWriteUserBytes* packet is used by an accessory to update the user configuration settings inside the Valentine One. Refer to <u>Appendix 12.1</u> for a description of the user bytes.

Valentine One version		V3.892 and above
Packet ID		\$13
Payload Length		7
	0	User Byte 0
Payload bytes	1	User Byte 1
	2	User Byte 2
	3	User Byte 3
	4	User Byte 4
	5	User Byte 5
	6	Checksum

req Factory Default

The *reqFactoryDefault* packet is used to reset a device to its factory settings. The effect of the *reqFactoryDefault* packet will vary according to the target device. Refer to the table 6.1 for the packet's effect on each device that complies with this specification.

Valentine One version		V3.892 and above
Packet ID		\$14
Payload Length		1
Payload Bytes	0	Checksum

Table 6.1 – Effects of the reqFactoryDefault packet

1 able 0.1 -	Effects of the regracioryi	Sejuuu packet
Device ID	Description	reqFactoryDefault Effect
\$00	Concealed Display	No effect
\$01	Remote Audio	No effect
\$02	Savvy	Force speed setting to be set by the thumb wheel and re-enable the unmute functionality.
\$03	Third party device	Refer to the device manufacturer's documentation
\$04	Third party device	Refer to the device manufacturer's documentation
\$05	Third party device	Refer to the device manufacturer's documentation
\$06	Reserved for VRI	Not applicable
\$07	Reserved for VRI	Not applicable
\$08	General Broadcast	Not applicable
\$09	Valentine One without checksums	Force all settings back to the factory default. This includes the mode, all user settings (refer to the respUserBytes packet) and custom sweep definitions.
\$0A	Valentine One with checksums	Force all settings back to the factory default. This includes the volume, mode, all user settings (refer to the respUserBytes packet) and custom sweep definitions.

7 Custom Sweeps/Custom Frequencies Packets

Custom Sweeps have been renamed Custom Frequencies in V4.1018. All references to Custom Sweeps in this document also apply to Custom Frequencies unless a difference is specified.

First Generation V1 Only (version < V4.0000)

All ESP capable Valentine Ones allow the user to define custom Ka sweeps in Euro Mode. If any non-default custom sweeps are defined, the mode character on the front panel will indicate that custom sweeps are being used. If K and Ka bands are enabled, the display will change from 'U' to 'C'. When only Ka band is enabled, the display will change from 'u' to 'c'. Modifying the custom sweeps will change the way the detector sweeps through Ka band and may therefore affect sensitivity.

V1 Gen2 Only (version > 4.0000 and higher)

V1 Gen2 supports custom frequencies for both K and Ka band. These custom frequencies can be enabled or disabled in either Euro or USA mode using the *Custom Frequencies Enabled/Disabled* setting in the User Bytes. The decimal point on the Bogey Counter will always be turned on if Custom Frequencies are enabled. Enabling custom frequencies does not change the way the detector sweeps K or Ka band and will have no effect on sensitivity. Instead, custom frequencies merely prevents the detector from reporting alerts found on frequencies that are not within the boundaries of the defined custom frequencies.

For All ESP Capable Valentine Ones

The capabilities of custom sweeps may change with product evolution or software revision, so the user must read the custom sweep parameters from the Valentine One before writing a custom sweep. The first parameter that must be read from the Valentine One is the definition of the sweep sections. The sweep sections are predefined by the Valentine One. When writing a new sweep definition, the user must insure that the custom sweep does not cross a boundary of any sweep section. The second parameter to be read is the number of custom sweeps supported by the Valentine One. Once the Valentine One capabilities are known, the user can write custom sweeps using the *reqWriteSweepDefinition* packet. The number of available sweeps can be used for all supported bands. There must be at least 1 custom sweep defined for each supported band.

All sweeps the user is using must be written back to the Valentine One, even if the sweep is not being changed. Any unwritten sweeps will be turned off. The recommended procedure is

- 1. Read the sweep section definitions
- 2. Read the number of supported custom sweeps
- 3. Read the current custom sweeps
- 4. Add, remove and modify sweep definitions as needed
- 5. Write the sweeps that should be used to the Valentine One. The last packet sent must have the *Commit* bit set in the Aux0 byte.
- 6. Read the sweeps again to determine the actual frequencies selected by the Valentine One and to confirm the intended changes have been applied.

Refer to Example 7.1 for an example of the packet flow when defining custom sweeps. The example shows all operations required for setting up custom sweeps. In this example, the Valentine One starts with the default settings for V3.892, which is two sweep sections, support for six custom sweeps and four custom sweeps defined. The accessory will add a single custom sweep and leave the others unmodified. Note that after this procedure, there will be five custom sweeps defined, so one custom sweep will be turned off. Table 7.1 shows the packets that are transferred in the example.

To insure accuracy in the custom sweeps, the Valentine One does not allow all frequencies in the sweep sections to be used as end points for a custom sweep. Instead, the Valentine One will find the closest calibrated frequency to the requested end point. Therefore it is important for the user to read the custom sweeps back after they are written to determine what frequencies the Valentine One is using for the sweep end points. For example, Table 7.1 shows that the new custom sweep requested at index 4 in Example 7.1 had an upper edge of 36000 MHz and a lower edge of 35500 MHz. However, the new sweep that was created has an upper edge of 36013 MHz and a lower edge of 35541MHz because those are closest calibrated frequencies to the requested sweep end points.

V4.1018 Custom Frequencies - differences from previous generations

V1 Gen2 changes the name of Custom Sweeps to Custom Frequencies and expands their use. While the ESP commands used to control Custom Frequencies are the same, there are some important differences to keep in mind while programming the detector.

- Custom Frequencies now include K band. Use the *reqSweepSections* command to get the new range of available frequencies.
- Custom Frequencies are now available in USA mode.
- V1 Gen2 uses different factory default values for USA and Euro mode. Use the *reqDefaultSweepDefinitions* command to get the factory default values for the current V1 mode.
- The Custom Frequencies will be set to their factory default values when changing between USA and Euro mode.
- Unlike earlier generations, writing a custom frequency will not enable the custom frequency. The *Custom Frequencies Enabled/Disabled* setting in the User Bytes is used to enable/disable the custom frequencies.

V1 responds with sweep () definition using respSweepDefinition V1 responds with sweep 1 definition using respSweepDefinition V1 responds with sweep 2 definition using respSweepDefinition V1 responds with sweep 3 definition using respSweepDefinition Vl responds with sweep 4 definition using respSweepDefinition responds with sweep 5 definition using respSweepDefinition (not in use) **Table 7.1 – Packets for Custom Sweep Writing Example**

Event	Packets
Acc. requests sweep sections using reqSweepSections	AA DA E6 22 01 8D AB
V1 responds with 2 sweep sections using respSweepSections	AA D6 EA 23 OB 12 8C E8 87 D6 22 87 D2 82 67 DF AB
Acc. requests number of sweeps allowed using reqMaxSweepIndex	AA DA E6 19 01 84 AB
V1 responds that 6 sweeps are supported using respMaxSweepIndex	AA D6 EA 20 02 05 91 AB
Acc. requests sweep definitions using reqAllSweepDefinitions	AA DA E6 16 01 81 AB
V1 responds with sweep 0 definition using respSweepDefinition	AA D6 EA 17 06 80 85 3A 84 6C B6 AB
V1 responds with sweep 1 definition using respSweepDefinition	AA D6 EA 17 06 81 86 AB 85 84 42 AB
V1 responds with sweep 2 definition using respSweepDefinition	AA D6 EA 17 06 82 87 5C 87 03 76 AB
V1 responds with sweep 3 definition using respSweepDefinition	AA D6 EA 17 06 83 8A C6 8A 8B 6F AB
V1 responds with sweep 4 definition using respSweepDefinition (not in use)	AA D6 EA 17 06 84 00 00 00 00 0B AB
V1 responds with sweep 5 definition using respSweepDefinition (not in use)	AA D6 EA 17 06 85 00 00 00 00 0C AB
Acc. writes custom sweep 0 using reqWriteSweep (commit = 0)	AA DA E6 15 06 80 85 3A 84 6C B4 AB
Acc. writes custom sweep 1 using reqWriteSweep (commit = 0)	AA DA E6 15 06 81 86 AB 85 84 40 AB
Acc. writes custom sweep 2 using reqWriteSweep (commit = 0)	AA DA E6 15 06 82 87 5C 87 03 74 AB
Acc. writes custom sweep 3 using reqWriteSweep (commit = 0)	AA DA E6 15 06 83 8A C6 8A 8B 6D AB
Acc. writes custom sweep 4 using reqWriteSweep (commit = 1) ¹	AA DA E6 15 06 C4 8C A0 8A DE DD AB
Acc. requests sweep definitions using reqAllSweepDefinitions	AA DA E6 16 01 81 AB
V1 responds with sweep 0 definition using respSweepDefinition	AA D6 EA 17 06 80 85 3A 84 6C B6 AB
V1 responds with sweep 1 definition using respSweepDefinition	AA D6 EA 17 06 81 86 AB 85 84 42 AB
V1 responds with sweep 2 definition using respSweepDefinition	AA D6 EA 17 06 82 87 5C 87 03 76 AB
V1 responds with sweep 3 definition using respSweepDefinition	AA D6 EA 17 06 83 8A C6 8A 8B 6F AB
V1 responds with sweep 4 definition using respSweepDefinition ¹	AA D6 EA 17 06 84 8C AD 8A D5 A3 AB
V1 responds with sweep 5 definition using respSweepDefinition (not in use)	AA D6 EA 17 06 85 00 00 00 00 0C AB

Notes 1: The new sweep that was requested has an upper edge of 36000 MHz and a lower edge of 35500 MHz. However, the new sweep that was returned has an upper edge of 36013 MHz and a lower edge of 35541 MHz.

reqWriteSweepDefinition

Use the <code>reqWriteSweepDefinition</code> packet to define a custom sweep. The custom sweep will be used instead of the factory sweeps when in Euro Mode. All used sweep definitions must be written every time any change is made or the changes will not take effect. The number of supported sweeps is Valentine One version specific and can be obtained using the <code>reqMaxSweepIndex</code> packet. The valid sweep sections can be read using the <code>reqSweepSections</code> packet. If a sweep definition is invalid, such as when a sweep definition crosses a sweep section boundary, the sweep will not be used. Refer to the <code>Custom Sweep</code> section for more details.

Valentine One version		V3.892 and above	
Packet ID		\$15	
Payload Length		6	
Payload bytes	0	Aux0 - Sweep Index (zero based). Sweep Index byte definition 07 06 05 04 03 02 01 00	
_	1	MSB of upper frequency sweep edge in MHz	
	2	LSB of upper frequency sweep edge in MHz	
	3	MSB of lower frequency sweep edge in MHz	
	4	LSB of lower frequency sweep edge in MHz	
	5	Checksum	

Example frequency: If user wishes 34.106 GHz the user would send \$85(MSB) \$3A(LSB)

reqAllSweepDefinitions

Use the *reqAllSweepDefinitions* packet to request the custom sweep definitions. The Valentine One will respond to this packet with all of the available sweep definitions. Each sweep definition will be sent out in its own *respSweepDefinition* packet. The sweep definitions will be interleaved with the *infDisplayData* packets.

Valentine One version		V3.892 and above
Packet ID		\$16
Payload Length		1
Payload Bytes	0	Checksum

respSweepDefinition

The *respSweepDefinition* packet defines a single custom sweep and is sent in response to a *reqAllSweepDefinitions* packet. These packets will be interleaved with the *infDisplayData* packets. One of these packets will be sent for each available sweep definitions. Unused sweeps have the upper and lower edges set to zero.

Valentine One version		V3.892 and above	
Packet ID		\$17	
Payload Length		6	
Payload bytes	0	Aux0 - Sweep Index (zero based). Sweep Index byte definition 07 06 05 04 03 02 01 00	
	1	MSB of upper sweep edge in MHz	
<u> </u>	2	LSB of upper sweep edge in MHz	
	3	MSB of lower sweep edge in MHz	
	4	LSB of lower sweep edge in MHz	
	5	Checksum	

reqDefaultSweeps

Use the *reqDefaultSweeps* packet to reset all custom sweep definitions back to their default. When operating in Euro Mode on Valentine One Gen1, this will change the display from 'C' to 'U' or 'c' to 'u' depending on the user's mode selection.

Valentine One version		V3.892 and above
Packet ID		\$18
Payload Length		1
Payload Bytes	0	Checksum

reqMaxSweepIndex

Use the *reqMaxSweepIndex* packet to determine how many sweeps the current Valentine One version supports.

Valentine One version		V3.892 and above
Packet ID		\$19
Payload Length		1
Payload Bytes	0	Checksum

respMaxSweepIndex

The *respMaxSweepIndex* packet is sent in response to the *reqMaxSweepIndex* packet. This packet will tell the user the maximum number of sweeps supported by the Valentine One. Because the sweep indices are zero-based, the value returned is the number of supported sweeps minus one.

Valentine One version		V3.892 and above
Packet ID		\$20
Payload Length		2
Davids and Davids	0	The maximum sweep index for the current Valentine One version.
Payload Bytes	1	Checksum

respSweepWriteResult

The respSweepWriteResult packet is sent in response to the reqWriteSweepDefinition packet with the Commit in the Aux0 byte set.

Valentine One version		V3.892 and above	
Packet ID		\$21	
Payload Length		2	
Payload Bytes		The sweep write result. $0 = S$ weep Write Successful Any Other Value = The number of the first sweep with invalid parameters. The error number returned will be the sweep index + 1, where sweep index is the index from the $reqWriteSweepDefinition$ packet.	
	1	Checksum	

${\bf reqSweep Sections}$

The *reqSweepSections* packet is used to request the available custom sweep sections. The sweep definitions are returned using the *respSweepSections* packet.

are retarned using the resp	are retained using the response poetrons packet.		
Valentine One version		V3.892 and above	
Packet ID		\$22	
Payload Length		1	
Payload Bytes	0	Checksum	

respSweepSections

One or more *respSweepSections* packets will be sent in response to the *reqSweepSections* request. This response packet will contain the definition for one, two or three custom sweep sections. The payload length will determine how many definitions are in the packet. If more than three custom sweep sections are available, multiple *respSweepSections* packets will be sent and they will be interleaved with *infDisplayData* packets. The lower nibble of the Sweep Definition Index byte will indicate how many custom sweep sections are available while the upper nibble indicates the overall index of the section definition.

Valentine One version		V3.892 and above			
Packet ID		\$23			
Payload Length		6 if one section definition is in the Packet Data (PD) 11 if two section definitions are in the Packet Data (PD) 16 if three section definitions are in the Packet Data (PD)			
# Of section in PD		1	2	3	
	0	Sweep Definition Index	Sweep Definition Index	Sweep Definition Index	
	1	MSB of upper edge ¹	MSB of upper edge ¹	MSB of upper edge ¹	
	2	LSB of upper edge ¹	LSB of upper edge ¹	LSB of upper edge ¹	
	3	MSB of lower edge ¹	MSB of lower edge ¹	MSB of lower edge ¹	
	4	LSB of lower edge ¹	LSB of lower edge ¹	LSB of lower edge ¹	
	5	Checksum	Sweep Definition Index	Sweep Definition Index	
	6		MSB of upper edge ¹	MSB of upper edge ¹	
	7		LSB of upper edge ¹	LSB of upper edge ¹	
	8		MSB of lower edge ¹	MSB of lower edge ¹	
	9		LSB of lower edge ¹	LSB of lower edge ¹	
	10		Checksum	Sweep Definition Index	
	11			MSB of upper edge ¹	
	12			LSB of upper edge ¹	
	13			MSB of lower edge ¹	
	14			LSB of lower edge ¹	
	15			Checksum	

Note 1: All sweep section edges are returned as the frequency in MHz.

reqDefaultSweepDefinitions

Use the *reqDefaultSweepDefinitions* packet to request the default custom sweep definitions. The Valentine One will respond to this packet with the default definitions for all of the available sweeps. Each sweep definition will be sent out in its own *respDefaultSweepDefinition* packet. The default sweep definitions will be interleaved with the *infDisplayData* packets.

Valentine One version		V3.895 and above
Packet ID		\$24
Payload Length		1
Payload Bytes	0	Checksum

respDefaultSweepDefinition

The *respDefaultSweepDefinition* packet defines the default settings for a single custom sweep and is sent in response to a *reqDefaultSweepDefinitions* packet. These packets will be interleaved with the *infDisplayData* packets. One of these packets will be sent for each available sweep definitions. Sweeps that are unused in the default configuration will have the upper and lower edges set to zero.

Valentine One version		V3.895 and above	
Packet ID		\$25	
Payload Length		6	
Payload bytes	0	Aux0 - Sweep Index (zero based). Sweep Index byte definition 07 06 05 04 03 02 01 00	
	1	MSB of upper sweep edge in MHz	
	2	LSB of upper sweep edge in MHz	
	3	MSB of lower sweep edge in MHz	
	4	LSB of lower sweep edge in MHz	
	5	Checksum	

8 Display and Audio Packets

Reproducing the Valentine One Display

The *infDisplayData* packet provides information about the Bogey Count seven segment display, the signal strength bar graph, the band indicators and the arrows. This data can be used to reproduce the Valentine One display on another device. One important feature of reproducing the Valentine One display is the ability to blink the band, arrow and Bogey Count indicators. This is accomplished using the different image bytes in the *infDisplayData* packet. Two image bytes are provided for the Bogey Count seven segment as well as the band and arrow indicators. When there is no blinking, Image 1 and Image 2 bytes are the same. When there is a blinking indicator, Image 2 will have the corresponding 'on' bits turned 'off'. To produce a blinking effect, a display device simply needs to toggle between Image 1 and Image 2 at the desired blink rate. Valentine Research recommends a blink rate of 10.416 Hz, which requires toggling the display every 96 mS.

For example, assume the Valentine One has detected a single X Band signal and a single Ka Band signal to the front and that the Ka Band signal is the priority alert. In this scenario, the Ka Band indicator would be blinking on the Valentine One display. The *infDisplayData Band and Arrow Indicator Image 1* byte would be \$2A to indicate that the front arrow, X Band and Ka Band indicators are on with all other band and arrow indicators off. However, the *infDisplayData Band and Arrow Indicator Image 2* byte would be \$28 to indicate that the front arrow and X Band indicators are on with all other band and arrow indicators off. Therefore the Ka indicator can be blinked by toggling between *Band and Arrow Indicator Image 1* and *Band and Arrow Indicator Image 2*. The same techniques should be used for blinking the Bogey Count seven segment display. The signal strength bar graph does not blink so only one image byte is provided.

infDisplayData

The *infDisplayData* packet will provide accessories with all of the information needed to rebuild the front

panel display. Aux bytes provide additional information about the Valentine One status. Valentine One version V3.892 and above Packet ID \$31 Payload Length 9 Bogey Counter 7 Segment Image 1 07 06 05 04 03 02 01 00 0 Bogey Counter 7 Segment Image 2 – uses the same byte definition as byte 01 Signal Strength Bar Graph Image 07 06 05 04 03 02 01 00 2 ----- b7(right) Band and Arrow Indicator Image 1 07 06 05 04 03 02 01 00 3 | \----- Mute Indicator Note 1 \---- FRONT Payload Bytes ----- REAR Band and Arrow Indicator Image 2 – uses the same byte definition as byte 3 Aux0 – Refer to Table 8.3 for more information 07 06 05 04 03 02 01 00 5 | \---- Euro Mode \----- Custom Sweep ----- ESP/Legacy ----- Display Active V4.1037 and higher 07 06 05 04 03 02 01 00 6 \----- Auto Muted Note 2 | \----- Double Tap Active $^{\text{Note 2}}$ \----- Bluetooth Indicator Image 1 $^{ exttt{Note 1}}$ -----Bluetooth Indicator Image 2 Note 1 Aux2 - Current Volume (V4.1028 and higher) 07:04 03:00 7 $\-$ Mute Volume B3, B2, B1, B0 ---- Main Volume B3, B2, B1, B0 8 Checksum

Table 8.3 – Bit descriptions for infDisplayData packet's Aux0 byte

Bit #	Bit Name	Bit Description	
0	Soft	This bit describes the current mute status: 0 - indicates the audio is not muted. 1 - indicates the audio is muted.	
1	TS Holdoff	This bit tells the accessories if a time slice is allowed. A 0 indicates that all accessories are allowed to have a time slice following this packet. A 1 indicates that none of the accessories are allowed to have a time slice following this packet.	
2	System Status	This bit describes the Valentine One status. A 0 indicates that the Valentine One is not actively searching for alerts. A 1 indicates that the Valentine One has successfully signed on and is actively searching for alerts.	
3	Display On	This bit describes the status of the Valentine One display. A 0 indicates the Valentine One has turned off the main display. A 1 indicates the main display is turned on.	
4	Euro Mode	This bit describes the Valentine One European Mode status. A 0 indicates the Valentine One is not operating in Euro Mode. A 1 indicates the Valentine One is operating in Euro Mode.	
5	Custom Sweep	This bit describes the custom sweep status. A 0 indicates that custom sweeps have not been defined. A 1 indicates that custom sweeps have been defined and custom modes will be used if operating in Euro Mode.	
6	ESP/Legacy	This bit is reserved for the Bluetooth ESP/Legacy setting. Refer to the ESP Bluetooth Addendum for more information.	
7	Display Active	Available in V4.1037 and higher - This bit describes the Valentine One display status. A 0 indicates the Valentine One's display is showing a mode or the resting display indicator. A 1 indicates the Valentine One's display is actively showing an alert, volume or other important information. Accessories that have a Resting Display feature should display the data in infDisplayData when this bit is 1.	

Table 8.4 – Bit descriptions for infDisplayData packet's Aux1 byte

Bit #	Bit Name	Bit Description
0	Reserved	Reserved for internal use
1	Reserved	Reserved for internal use
2	Mode B0 Note 2	Bit 0 of the current V1 mode. See <u>reqChangeMode</u> for the mode definition.
3	Mode B1 Note 2	Bit 1 of the current V1 mode.
4	Auto Muted Note 2	This bit describes the reason the V1 is muted: 0 - indicates the mute is from the user or an app. 1 - indicates the mute is from internal V1 logic.
5	Double Tap Active Note 2	This bit indicates whether or not the V1 double tap feature is active.
6	BT Indicator Image 1 Note 1	The state of the Bluetooth indicator.
7	BT Indicator Image 2 Note 1	The alternate state of the Bluetooth indicator to determine if the indicator is blinking.

Note 1: This feature is only available on V4.1018 and higher Note 2: This feature is only available on V4.1028 and higher

reqTurnOffMainDisplay

The *reqTurnOffMainDisplay* packet is used to force the Valentine One to blank the main display. The results of this request can be verified using the Aux0 byte in the *infDisplayData* packet.

Valentine One version		V3.892 and above
Packet ID		\$32
Payload Length		1 - 2
	0	Aux0 - Optional, Available on V4.1032 and higher ¹ 07 06 05 04 03 02 01 00
Payload Bytes	1	Checksum

Notes: 1: Aux0 was added in V4.1032 as an optional byte. All bits are treated as zero if the byte is not included in the ESP packet.

reqTurnOnMainDisplay

The reqTurnOnMainDisplay packet is used to force the Valentine One to turn on the main display. The results of this request can be verified using the Aux0 byte in the infDisplayData packet.

Valentine One version		V3.892 and above
valentine One version		V3.892 and above
Packet ID		\$33
Payload Length		1
Payload Bytes	0	Checksum

Important information about changing the display state: By default, all Valentine Ones turn off the main display when a Concealed Display is connected and turn it back on when the Concealed Display is disconnected. The reqTurnOffMainDisplay and reqTurnOnMainDisplay packets change the current display state, but do not disable this feature. In other words, these packets are applied at the time they are received and then forgotten by the Valentine One. For example, if a Concealed Display is plugged in and the Valentine One receives a reqTurnOnMainDisplay, the display will be turned on. If the Concealed Display is disconnected and then reconnected, the Valentine One will turn the display off when it senses that the Concealed Display is back on the network. Conversely, if there is no Concealed Display connected and the Valentine One receives a reqTurnOffMainDisplay packet, the main display will be turned off. However, if a Concealed Display is connected and then disconnected, the main display will be turned back on when the Valentine One senses that the Concealed Display has been disconnected.

Changing the Valentine One display state when a Tech Display is connected will have the same result as the Concealed Display behavior discussed above. Sending the reqTurnOffMainDisplay or reqTurnOnMainDisplay packet to the Tech Display will result in a Tech Display state change, but the state change will be forgotten when the Tech Display loses power. Use the reqUserBytes packet to make a persistent change to the Tech Display's display state. See Appendix 12.2 for more details.

reqMuteOn

The *reqMuteOn* packet is used by an accessory to mute all alerts in the Valentine One. The results of this request can be verified using the Aux0 byte in the *infDisplayData* packet. The Valentine One treats this packet as a mute button press. Therefore, this command is only in effect until all alerts are no longer being tracked by the Valentine One.

Valentine One version		V3.892 and above
Packet ID		\$34
Payload Length		1
Payload Bytes	0	Checksum

reqMuteOff

<u>V3.8920 – V4.1030 operation</u>: The *reqMuteOff* packet is used by an accessory to unmute all alerts in the Valentine One that were not muted by the Valentine One's internal logic. For example, alerts muted by a mute button press, the Savvy or a *reqMuteOn* packet can be unmuted using the *reqMuteOff* packet. The results of this request can be verified using the Aux0 byte in the *infDisplayData* packet.

Note: The reqMuteOff packet will not unmute a laser alert.

V4.1031 and higher operation: The *reqMuteOff* packet is used by an accessory to unmute all alerts in the Valentine One, including those that were muted by the Valentine One's internal logic. Unmuting an alert that was muted due to the Valentine One's internal logic will disable the internal muting logic until no more alerts are being tracked by the Valentine One. The results of this request can be verified using the Aux0 byte in the *infDisplayData* packet.

Valentine One version		V3.892 and above
Packet ID		\$35
Payload Length		1
Payload Bytes	0	Checksum

reqChangeMode

The *reqChangeMode* packet is used by an accessory to change the current mode on the Valentine One. The results of this request can be verified by decoding the *infDisplayData* packet.

Valentine One version		V3.892 and above			
Packet ID		\$36			
Payload Length		2			
Payload Bytes	0	New Mode	US Operation (Default)	European Operation	
		1	All Bogeys Mode	'U' Mode – K and Ka(Photo) or 'C' Mode – K and Custom Sweeps	
		2	Logic Mode	'u' Mode – Ka band only or 'c' Mode – Custom Sweeps	
		3	Advanced Logic Mode	Invalid	
		Any others	Invalid	Invalid	
	1	Checksum			

reqCurrentVolume

The *reqCurrentVolume* packet is used to request the current volume settings in the Valentine One.

Valentine One version		V4.1026 and above
Packet ID		\$37
Payload Length		1
Payload Bytes	0	Checksum

respCurrent Volume

The respCurrentVolume packet is used by the Valentine One to respond to a reqCurrentVolume request.

Valentine One version		V4.1026 and above	
Packet ID		\$38	
Payload Length		3	
Payload bytes 0 1 2		Current Main Volume (valid values are 0-9) ¹	
		Current Muted Volume (valid values are 0-9) ¹	
		Checksum	

Note 1: Current volume may not be persistent through a power cycle on V4.1037 and higher. The saved volume in respAllVolume will be used after a Gen2 reboot.

reqWriteVolume

The *reqWriteVolume* packet is used by an accessory to update the volume inside the Valentine One. The V1 will not allow its request queue to fill with *reqWriteVolume* packets. Sending multiple *reqWriteVolume* packets in rapid succession, will cause the V1 to overwrite existing *reqWriteVolume* packets in its queue to insure only the last volume change is used.

Valentine One version		V4.1026 and above		
Packet ID		\$39		
Payload Length		3		
	0	Main Volume (valid values are 0-9)		
	1	Muted Volume (valid values are 0-9)		
Payload bytes	2	Aux 0 07 06 05 04 03 02 01 00		
	3 Checksum			

Note 1: The Save Volume bit is only available in V4.1037 and higher. If the Save Volume bit is zero, the volumes in this packet will be used until the next power cycle; the last saved volume will be used after the next power cycle. If the Save Volume bit is one, the volumes in this packet will be saved and will continue to be used after the next power cycle.

Note 2: The Keep Curent on on BT Disconnect bit is only available on V4.1038 and higher. If this bit is set, the volume will be restored to the saved value when Bluetooth is disconnected. This bit is ignored if the Save Volume bit is set or if there is no Bluetooth connection when reqWriteVolume is received.

User Feedback For regWriteVolume

- When the *Provide User Feedback* bit is set to one, the V1 Gen2 will provide the same audio and visual feedback used when volume is changed via the buttons. If both the Main and Muted volume are changed at the same time, the V1 Gen2 feedback will toggle between the two volumes. No feedback is played if the volume does not change unless the *Skip Feedback If No Volume Change* bit is set to zero.
- When the *Provide User Feedback* bit is set to zero, the V1 Gen2 will save the volume settings without the standard audio and visual feedback. If an alert is present, the alert volume will immediately reflect the change.
- The *Provide User Feedback* bit is always treated as a zero when there is an alert being displayed. I.e., the volume for the displayed alert will reflect the new setting.

reqAbortAudioDelay

The *reqAbortAudioDelay* packet is used to request that the Valentine One stops waiting for the silent period described in Table 9.4, which causes the Valentine One to play the audio for the primary alert sooner than it normally would. There can be up to a 100 millisecond delay before the Valentine One responds to this request. To preserve audio integrity, this request will be ignored if the silence period for the current alert is less than 240 ms or if the request is received within 240 ms of the previous audio beep.

Valentine One version	V4.1035 and above
Packet ID	\$3A
Payload Length	1
Payload Bytes 0	Checksum

reqDisplayCurrentVolume

The reqDisplayCurrentVolume packet is used to request that the Valentine One displays the current volume. This is equivalent to tapping one of the volume buttons on the V1 Gen2. If no alert is present, the main volume will be displayed. If an alert is present, the volume displayed will be either the main or mute volume, depending on the V1 mute status. Tapping the mute on the Gen2 or an accessory or sending the reqMuteOn request while the main volume is displayed will change the display to the muted volume. Sending the reqMuteOff request while the muted volume is displayed will change the display to the main volume.

Valentine One version		V4.1036 and above	
Packet ID		\$3B	
Payload Length		1	
Payload Bytes 0		Checksum	

reqAllVolume

The *reqAllVolume* packet is used to request both the current and saved volume settings in the Valentine One.

Valentine One version		V4.1037 and above
Packet ID		\$3C
Payload Length		1
Payload Bytes	0	Checksum

respAllVolume

The respAllVolume packet is used by the Valentine One to respond to a reqAllVolume request.

Valentine One version		V4.1037 and above	
Packet ID		\$3D	
Payload Length		5	
	0	Current Main Volume (valid values are 0-9)	
	1	Current Muted Volume (valid values are 0-9)	
Payload bytes	2	Saved Main Volume (valid values are 0-9)	
	3	Saved Muted Volume (valid values are 0-9)	
		Checksum	

9 Alert Output Packets

All ESP Valentine Ones allow the user to read detailed information for all alerts being displayed on the Valentine One front panel. The list of alerts being displayed is called the Alert Table. The Alert Table includes the following information:

- 1. Number of alerts present
- 2. Alert frequency in MHz
- 3. Signal strength for front and rear
- 4. Band (X,K,Ka,Ku)
- 5. Direction calculated by the Valentine One logic
- 6. Indication of the highest threat (priority alert). On the Valentine One front panel, the priority alert is indicated by a flashing band indicator and, under some circumstances, a flashing arrow when more than one alert is present.

The Alert Table is sent out in a stream that is interleaved with the *infDisplayData* and other responses from the Valentine One. The stream is started by sending *reqStartAlertData* packet and continues until the Valentine One receives a *reqStopAlertData* packet or is powered off. Each alert in the Alert Table is delivered in a *respAlertData* packet, which indicates how many alerts are in the table and the alert's index in the table. When no alerts are present, an alert index of zero and a count of zero will be sent periodically. The maximum number of alerts supported is fifteen. Due to the interleaved nature of the data, when the table is full there may be up to 1.2 seconds between the receipt of the first alert in the table and the last alert in the table. For devices that wish to display alert data, it is recommended that the display is only updated after a complete Alert Table is received.

The Alert Table contains radar signals only. Laser alerts are not represented in the Alert Table.

The signal strength is reported as a unit-less number that can be used when comparing the relative strength of various signals. The reported strength of each signal can be mapped to a front panel Signal Strength Bar Graph using Table 40.1

Table 9.1 – Alert Table to Bar Graph Map

Number of LEDs	Equivalent infDisplayData Bar Graph Value	X Band	K/Ku Band	Ka Band
8	\$FF	\$D0 - \$FF	\$C2 - \$FF	\$BA - \$FF
7	\$7F	\$C5 - \$CF	\$B8 - \$C1	\$B3 - \$B9
6	\$3F	\$BD - \$C4	\$AE - \$B7	\$AC - \$B2
5	\$1F	\$B4 - \$BC	\$A4 - \$AD	\$A5 - \$AB
4	\$0F	\$AA - \$B3	\$9A - \$A3	\$9E - \$A4
3	\$07	\$A0 - \$A9	\$90 - \$99	\$97 - \$9D
2	\$03	\$96 - \$9F	\$88 - \$8F	\$90 - \$96
1	\$01	\$01 - \$95	\$01 - \$87	\$01 - \$8F
0	\$00	\$00	\$00	\$00

Determining Audio Interval From Signal Strength.

The audio interval can be determined from the signal strength of the priority alert in an Alert Table. The silence between radar alert tones is band specific and can be determined from the tables below. The silence between laser alert tones is zero milliseconds.

Table 9.2–Valentine One Alert Tone Duration

Band	V1 Alert Tone Duration
X	71 ms
K & Ku	70 ms
Ka	144 ms
Laser	1216 ms

Table 9.3-Valentine One Gen 1 Silence Between Alert Tone

X Band		K & Ku Bands		Ka Band	
Alert Level	Silence (ms)	Alert Level	Silence (ms)	Alert Level	Silence (ms)
0x01	4064	0x01	4064	0x01	4064
0x80	3584	0x82	3584	0x82	3584
0x87	3152	0x84	3152	0x84	3152
0x8E	2768	0x86	2768	0x86	2768
0x96	2432	0x88	2432	0x88	2432
0x98	2128	0x8A	2127	0x8A	2127
0x9B	1872	0x8C	1872	0x8C	1872
0x9D	1648	0x8E	1648	0x8E	1648
0xA0	1424	0x90	1424	0x90	1424
0xA2	1136	0x93	1136	0x93	1136
0xA5	880	0x95	880	0x95	880
0xA7	688	0x98	688	0x98	688
0xAA	544	0x9A	544	0x9A	544
0xAC	416	0x9D	416	0x9D	416
0xAF	320	0x9F	320	0x9F	320
0xB1	240	0xA2	240	0xA2	240
0xB4	176	0xA4	176	0xA4	176
0xB6	160	0xA7	160	0xA7	160
0xB8	144	0xA9	144	0xA9	144
0xBA	128	0xAC	128	0xAC	128
0xBD	112	0xAE	112	0xAE	112
0xBF	96	0xB1	96	0xB1	96
0xC1	80	0xB3	80	0xB3	80
0xC3	64	0xB6	64	0xB6	64
0xC5	48	0xB8	48	0xB8	48
0xC7	32	0xBB	32	0xBB	32
0xCA	16	0xBD	16	0xBD	16
0xD0	0	0xC2	0	0xC2	0

Quick Reference

Table 9.4 – Valentine One Gen 2 Silence Between Alert Tone

X Band		K & Ku Bands		Ka Band	
Alert Level	Silence (ms)	Alert Level	Silence (ms)	Alert Level	Silence (ms)
0x01	4064	0x01	4064	0x01	4064
0x80	4048	0x82	4048	0x8A	4048
0x87	3920	0x84	3920	0x8C	3920
0x8E	3600	0x86	3600	0x8E	3600
0x96	3120	0x88	3120	0x90	3120
0x98	2640	0x8A	2640	0x92	2640
0x9B	2080	0x8C	2080	0x93	2080
0x9D	1552	0x8E	1552	0x95	1552
0xA0	1120	0x90	1120	0x97	1120
0xA2	752	0x93	752	0x99	752
0xA5	560	0x95	560	0x9A	560
0xA7	400	0x98	400	0x9C	400
0xAA	272	0x9A	272	0x9E	272
0xAC	192	0x9D	192	0xA0	192
0xAF	128	0x9F	128	0xA1	128
0xB1	112	0xA2	112	0xA3	112
0xB4	80	0xA4	80	0xA5	80
0xB6	48	0xA7	48	0xA7	48
0xB8	32	0xA9	32	0xA8	32
0xBA	16	0xAC	16	0xAA	16
0xBB	0	0xAD	0	0xAB	0

reqStartAlertData

The *reqStartAlertData* packet is used to request information on all alerts being displayed on the Valentine One front panel.

Valentine One version		V3.892 and above
Packet ID		\$41
Payload Length		1
Payload Bytes	0	Checksum

reqStopAlertData

The reqStopAlertData packet is used to stop the Valentine One from sending respAlertData packets that were started using the reqStartAlertData packet

Valentine One version		V3.892 and above
Packet ID		\$42
Payload Length		1
Payload Bytes	0	Checksum

respAlertData

The Valentine One will send the *respAlertData* packet in response to the *reqStartAlertData* packet. The data will be sent interleaved with the *infDisplayData* packets.

Payload Length		ca w	ith the <i>infDisplayData</i> packets. V3.892 and above ²					
Payload Length	Valentine One version							
Alert Index and Count								
Payload Bytes	Payload Length		'					
3 Front Signal Strength 4 Rear Signal Strength Band/Arrow definition 07 06 05 04 03 02 01 00			07 06 05 04 03 02 01 00					
Payload Bytes Band/Arrow definition		2	Frequency LSB in MHz					
Band/Arrow definition		3	Front Signal Strength					
Payload Bytes 07 06 05 04 03 02 01 00	Payload Bytes	4	Rear Signal Strength					
07 06 05 04 03 02 01 00		5	07 06 05 04 03 02 01 00					
7 Checksum		6	07 06 05 04 03 02 01 00					
, , , , , , , , , , , , , , , , , , , ,		7	Checksum					

Notes: 1: A 1 in the priority bit indicates that the alert represented by the packet is the highest priority threat in the Alert Table.

^{2:} The respAlertData packet destination will be General Broadcast on V4.1031 and higher.

^{3:} A 1 in the Junk Alert bit indicates the alert has been determined to be a false alert and will be removed from the Alert Table.

Table 9.5 - respAlertData example with zero alerts present

ESP Packet	Index	Frequency (MHz)	Front SS	Rear SS	Band	Dir.	Priority
AA D6 EA 43 07 00 00 00 00 00 00 00 B4 AB	1	00000	\$00	\$00	n/a	n/a	No

Table 9.6 - respAlertData example with three alerts present

ESP Packet	Index	Frequency (MHz)	Front SS	Rear SS	Band	Dir.	Priority
AA D6 EA 43 07 13 29 1D 21 85 88 00 E8 AB	1	10525	\$21	\$85	X	Rear	No
AA D6 EA 43 07 23 5E 56 92 83 24 00 00 AB	2	24150	\$92	\$83	K	Front	No
AA D6 EA 43 07 33 87 8C B6 81 22 80 30 AB	3	34700	\$B6	\$81	Ka	Front	Yes

Table 9.7 – Photo Radar types in respAlertData Aux0 byte

Photo Radar Type	Value
Not photo radar	0
MRCT	1
DriveSafe Type 1	2
DriveSafe Type 2	3
Redflex Halo	4
Redflex NK7	5
Ekin	6

10 Miscellaneous Packets

respDataReceived

The *respDataReceived* packet is used to acknowledge a data transmission and does not need to be used unless the data received specifically requires an acknowledgement. The Concealed Display will use this packet to respond to the *infDisplayData* packet to inform the Valentine One that a Concealed Display is present and that the main display should be turned off.

Valentine One version		V3.892 and above
Packet ID		\$61
Payload Length		1
Payload Bytes	0	Checksum

reqBatteryVoltage

The regBatteryVoltage packet is used to request the battery voltage at the connection to the Valentine One.

Valentine One version		V3.892 and above
Packet ID		\$62
Payload Length		1
Payload Bytes	0	Checksum

respBatteryVoltage

The *respBatteryVoltage* packet is sent in response to a *reqBatteryVoltage* request. The battery voltage is measured at the Valentine One connector.

Valentine One version		V3.892 and above
Packet ID		\$63
Payload Length		3
	0	Integer portion of the battery voltage
Payload Bytes 1		Decimal portion of the battery voltage
2		Checksum

Example packet for 13.1V: AA D6 EA 63 03 0D 01 DE AB

respUnsupportedPacket

The *respUnsupportedPacket* is used when an unsupported packet identifier is received and the Destination ID is not a General Broadcast.

Valentine One version		V3.892 and above
Packet ID		\$64
Payload Length		2
D. 1. 1D (The identifier of the unsupported packet.
Payload Bytes 1		Checksum

respRequestNotProcessed

The respRequestNotProcessed packet will be sent out when a device is too busy to process an incoming request. This packet should be sent as soon as possible, i.e. before the next infDisplayData packet for the Valentine One and in the next time slice for accessories. The Valentine One will issue this packet for each request that is dropped due to a priority conflict.

Valentine One version		V3.892 and above
Packet ID		\$65
Payload Length		2
Davids of Davids		The identifier of the unprocessed packet.
Payload Bytes	1	Checksum

infV1Busy

The *infV1Busy* packet will be sent out by the Valentine One when there are pending request that will not be processed immediately. The payload will include the packet identifier of all pending requests to the Valentine One. The *infV1Busy* packet will always have a Destination ID of General Broadcast.

Valentine One version		V3.892 and above										
Packet ID		\$66	\$66									
Payload Length		3 if there are two 4 if there are thro 5 if there are fou	2 if there is one pending Packet Identifier (PI) in the queue 3 if there are two pending Packet Identifiers (PI) in the queue 4 if there are three pending Packet Identifiers (PI) in the queue 5 if there are four pending Packet Identifiers (PI) in the queue 6 if there are five pending Packet Identifiers (PI) in the queue									
# of Request In Queue		1	1 2 3 4 5									
	0	Pending PI #1	Pending PI #1	Pending PI #1	Pending PI #1	Pending PI #1						
	1	Checksum	Checksum Pending PI #2 Pending PI #2 Pending PI #2 Pending									
	2		Checksum	Pending PI #3	Pending PI #3	Pending PI #3						
	3		_	Checksum	Pending PI #4	Pending PI #4						
	4		Checksum Pending PI #									
	5		_			Checksum						

respDataError

The *respDataError* packet will be sent if a device receives a packet with invalid data. The data may be invalid because it is not formatted correctly, e.g. the wrong number of bytes, or the device is in a state in which the data request is invalid. For example, the *respDataError* response will be used by the Valentine One if it receives an invalid mode in the *reqChangeMode* packet or if it receives a request to change to Advanced Logic mode while operating in Euro mode. This command may not be sent in response to invalid data that is sent out as a General Broadcast.

Valentine One version		V3.892 and above		
Packet ID		67		
Payload Length		2		
Deviler d Device		The packet ID of the message with the invalid data.		
Payload Bytes	1	Checksum		

11 Savvy™ Specific Packets

The Savvy has two features that can be configured through the ESP interface. The first configurable feature is the mute threshold speed. By default, the Savvy uses the thumbwheel on the device to set the threshold. However, the user can override the thumbwheel and set the threshold to any speed between 1-158 MPH (1–254 KPH) using the *reqOverrideThumbwheel* packet. The second configurable feature is the ability for the Savvy to unmute signals when the vehicle speed rises above the mute threshold speed. The unmute feature is enabled by default, but can be disabled using the *reqSetSavvyUnmuteEnable* packet. Unplugging the Savvy from the OBD-II port will reset all configurable settings back to the factory default.

reqSavvyStatus

The *regSavvyStatus* packet is used to request the current status from the Savvy.

Valentine One version		V3.892 and above
Packet ID		\$71
Payload Length		1
Payload Bytes	0	Checksum

respSavvyStatus

The respSavvyStatus packet is sent in response to a reqSavvyStatus packet and contains the current Savvy status.

status.					
Valentine One version		V3.892 and above			
Packet ID		\$72			
Payload Length		3			
	0	The current speed threshold in KPH.			
Payload Bytes	1	Savvy Status			
	2	Checksum			

reqVehicleSpeed

The reqVehicleSpeed packet is used to request the current vehicle speed measured by the Savvy.

		and a section of the
Valentine One version		V3.892 and above
Packet ID		\$73
Payload Length		1
Payload Bytes	0	Checksum

respVehicleSpeed

The respVehicleSpeed packet is sent by the Savvy in response to a reqVehicleSpeed packet.

Valentine One version		V3.892 and above		
Packet ID		\$74		
Payload Length		2		
Dayland Dytan		The vehicle speed, in KPH, as read by the Savvy		
Payload Bytes	1	Checksum		

reqOverrideThumbwheel

The *reqOverrideThumbwheel* packet is used to override the Savvy mute threshold speed. The new speed setting will be used until the Savvy is unplugged from the vehicle or the thumbwheel is changed.

Valentine One version		V3.892 and above			
Packet ID		\$75			
Payload Length 2					
Payload Bytes	0	The new speed, in KPH, to be used as the mute threshold speed. The speed values are defined as 0x00: "None" - Do not mute at any speed 0x01 - 0xFE: The new speed in KPH 0xFF: "Auto" - Mute at all speeds			
	1	Checksum			

Example:

To set the Savvy mute threshold speed to 45 MPH

Convert MPH to KPH 45 MPH = 45 * 1.6093 = 72.41 KPH

Send the *reqOverrideThumbwheel* packet AA D2 E6 75 02 48 21 AB

req Set Savvy Unmute Enable

The *reqSetSavvyUnmuteEnable* packet is used to enable or disable the unmute functionality in the Savvy. Use the *reqSavvyStatus* to verify the status has been set correctly.

Valentine One version		V3.892 and above		
Packet ID		\$76		
Payload Length		2		
Payload Bytes 0		The enable status for the Savvy unmute functionality. 0 = Disable unmuting 1 = Enable unmuting		
	1	Checksum		

12 Appendix

Appendix 12.1 ESP Specification User Feature versus V1 User Byte-bit Summary

 $See \ \underline{http://www.valentine1.com/Lab/techreport3.asp} \ for full \ feature \ description \ and \ software \ version \ sensitivity.$

V3.8920 - V3.8952

Feature	Description		<u>bit</u>	<u>Factory</u>
1	X band On/Off	User 0	0	On
2	K band On/Off	User 0	1	On
3	Ka band On/Off	User 0		On
4	Laser On/Off	User 0	3	On
5	Bar graph Normal/Responsive	User 0	4	Normal
6	Ka False Guard On/Off	User 0	5	On
7	Feature b-G(K Muting) On/Off	User 0	6	Off
8	Mute Volume Lever/Zero	User 0	7	Lever
A	Post-mute Bogey Lock Volume			
	Lever/Knob	User 1	0	Knob
b	K Mute Timer	User 1	1	10 sec
C	"	User 1	2	
d	"	User 1	3	
E	K Initial Unmute 4 lights	User 1	4	On
F	K Persistent Unmute 6 lights	User 1	5	On
G	K Rear Mute On/Off	User 1	6	Off
H	Ku band On/Off	User 1	7	Off
J	Pop On/Off	User 2	0	On
u	Euro On/Off	User 2	1	Off
u bar	Euro X band On/Off	User 2	2	Off
t	Filter On/Off	User 2	3	Off/On (version specific)
L	Force Legacy CD	User 2	4	Off
(undef)		User 2	5	
(undef)		User 2	6	
(undef)		User 2	7	
(unused)		User 3		
(unused)		User 4		
(unused)		User 5		

V4.1018 - V4.1030

Feature	Description	Byte bit	Factory
1	X band On/Off	User 0 0	On
2	K band On/Off	User 0 1	On
3	Ka band On/Off	User 0 2	On
4	Laser On/Off	User 0 3	On
8	Mute to Muted Volume/Zero	User 0 4	Muted Volume
A	Bogey-Lock Loud after muting On/Off	User 0 5	On
G	X and K Rear Mute in Logic or		
	Advanced Logic Mode On/Off	User 0 6	Off
u	Ku band On/Off	User 0 7	Off
u	Euro On/Off	User 1 0	Off
t	K-Verifier On/Off	User 1 1	On
n	Rear Laser On/Off	User 1 2	On
С	Custom Frequencies Enabled/Disabled	User 1 3	Disabled
(undef)		User 1 4	
(undef)		User 1 5	
(undef)		User 1 6	
(undef)		User 1 7	
(unused)		User 2	
(unused)		User 3	
(unused)		User 4	
(unused)		User 5	

V4.1031

Feature	Description	Byte	bit	Factory
1	X band On/Off	User 0	0	On
2	K band On/Off	User 0	1	On
3	Ka band On/Off	User 0	2	On
4	Laser On/Off	User 0	3	On
8	Mute to Muted Volume/Zero	User 0	4	Muted Volume
A	Bogey-Lock Loud after muting On/Off	User 0	5	On
G	X and K Rear Mute in Logic or			
	Advanced Logic Mode On/Off	User 0	6	Off
u	Ku band On/Off	User 0	7	Off
u	Euro On/Off	User 1	0	Off
t	K-Verifier On/Off	User 1		On
n	Rear Laser On/Off	User 1	2	On
С	Custom Frequencies Enabled/Disabled	User 1	3	Disabled
P	Ka Always Radar Priority Alert On/Off	User 1		Off
F	Fast Laser Detection On/Off	User 1	5	On
(undef)		User 1	6	
(undef)		User 1	7	
(unused) (unused) (unused)		User 2 User 3 User 4		
(unused)		User 5		

V4.1032

0 On
) 1 On
) 2 On
) 3 On
4 Muted Volume
) 5 On
6 Off
7 Off
. 0 Off
. 1 On
. 2 On
. 3 Disabled
4 Off
. 5 On
. 6 On
. 7 On
}
Į.
;)

- 2 Original Ka sensitivity: Same as V1 Gen2 at its 2020 introduction 1 Relaxed Ka sensitivity: Still great range but fewer alerts from fantastic distances
- 0 Invalid value: forces setting to Full Sensitivity

V4.1035

Feature	Description	Byte	bit	Factory
1	X band On/Off	User 0	0	On
2	K band On/Off	User 0	1	On
3	Ka band On/Off	User 0	2	On
4	Laser On/Off	User 0	3	On
8	Mute to Muted Volume/Zero	User 0	4	Muted Volume
A	Bogey-Lock Loud after muting On/Off	User 0	5	On
G	X and K Rear Mute in Logic or			
	Advanced Logic Mode On/Off	User 0	6	Off
u	Ku band On/Off	User 0	7	Off
u	Euro On/Off	User 1	0	Off
t	K-Verifier On/Off	User 1		On
n	Rear Laser On/Off	User 1		On
C	Custom Frequencies Enabled/Disabled	User 1	3	Disabled
P	Ka Always Radar Priority Alert On/Off	User 1		Off
F	Fast Laser Detection On/Off	User 1	5	On
r	Ka sensitivity Bit O ^{Note 1}	User 1		On
r	Ka sensitivity Bit 1 ^{Note 1}	User 1	7	On
	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
S	Startup Sequence On/Off	User 2	0	On
d	Resting Display On/Off	User 2	1	On
b	BSM Plus On/Off	User 2	2	Off
(undef)		User 2	3	
(undef)		User 2		
(undef)		User 2		
(undef)		User 2		
(undef)		User 2	7	
(unused)		User 3		
(unused)		User 4		
(unused)		User 5		
	Sensitivity Values			
	. Ka sensitivity: Maximum range(default)			
2 - 0210	rinal Ka concitivitus Camo ac V1 Con? at	1+0 2020	inta	coduction

- 2 Original Ka sensitivity: Same as V1 Gen2 at its 2020 introduction 1 Relaxed Ka sensitivity: Still great range but fewer alerts from fantastic distances
- 0 Invalid value: forces setting to Full Sensitivity

V4.1036

Feature	Description	Byte	bit	Factory
1	X band On/Off	User	0 0	On
2	K band On/Off	User	0 1	On
3	Ka band On/Off	User	0 2	On
4	Laser On/Off	User	0 3	On
8	Mute to Muted Volume/Zero	User	0 4	Muted Volume
A	Bogey-Lock Loud after muting On/Off	User	0 5	On
G	X and K Rear Mute in Logic or			
	Advanced Logic Mode On/Off	User	0 6	Off
u	Ku band On/Off	User	0 7	Off
u	Euro On/Off	User	1 0	Off
t	K-Verifier On/Off	User	1 1	On
n	Rear Laser On/Off	User	1 2	On
С	Custom Frequencies Enabled/Disabled	User	1 3	Disabled
P	Ka Always Radar Priority Alert On/Off	User	1 4	Off
F	Fast Laser Detection On/Off	User	1 5	On
r	Ka sensitivity Bit O ^{Note 1}	User	1 6	On
r	Ka sensitivity Bit $1^{\text{Note }1}$	User	1 7	On
S	Startup Sequence On/Off	User	2 0	On
d	Resting Display On/Off	User	2 1	On
b	BSM Plus On/Off	User	2 2	Off
7	Auto mute Bit O ^{Note 2}	User	2 3	Off
	Auto mute Bit 1 ^{Note 2}	User	2 4	Off
(undef)		User	2 5	
(undef)		User	2 6	
(undef)		User	2 7	
(unused)		User	3	
(unused)		User	4	
(unused)		User	5	
Mara 1. 77a	Caraitinitu Walua			

Note 1: Ka Sensitivity Values

- 3 Full Ka sensitivity: Maximum range(default)
- 2 Original Ka sensitivity: Same as V1 Gen2 at its 2020 introduction 1 Relaxed Ka sensitivity: Still great range but fewer alerts from fantastic
- ${\tt O}$ Invalid value: forces setting to Full Sensitivity

Note 2: Auto Mute Values

- 3 Off Auto Mute is disabled
- 2 Auto Mute Mute all X, K & Ku signals after 3 seconds. 1 Auto Mute with unmute Mute all X, K & Ku signals after 3 seconds. Unmute auto muted alerts if strength reaches five LEDs on the Signal Strength Meter.
- ${\tt O}$ Invalid value: forces setting to Off

V4.1037 and higher

```
Feature
           Description
                                                    Byte bit Factory
           X band On/Off
                                                    User 0 0
                                                                On
                                                                On
          K band On/Off
                                                    User 0 1
          Ka band On/Off
                                                    User 0 2
  3
                                                                On
           Laser On/Off
                                                    User 0
          Mute to Muted Volume/Zero
                                                   User 0 4
                                                                Muted Volume
                                                   User 0 5
          Bogey-Lock Loud after muting On/Off
         X and K Rear Mute in Logic or
             Advanced Logic Mode On/Off
                                                   User 0 6 Off
          Ku band On/Off
                                                    User 0 7 Off
           Euro On/Off
                                                    User 1 0
  u
           K-Verifier On/Off
                                                    User 1 1
                                                                On
                                                    User 1 2
          Rear Laser On/Off
  n
           Custom Frequencies Enabled/Disabled
                                                   User 1 3
                                                                Disabled
          Ka Always Radar Priority Alert On/Off
                                                  User 1
                                                                Off
          Fast Laser Detection On/Off
                                                   User 1 5
          Ka sensitivity Bit 0^{\text{Note }1}
  r
                                                    User 1 6
                                                                On
           Ka sensitivity Bit 1 Note 1
                                                    User 1 7
  S
          Startup Sequence On/Off
                                                   User 2 0
           Resting Display On/Off
  d
                                                   User 2
                                                           1
                                                                On
                                                   User 2 2
  b
           BSM Plus On/Off
                                                                Off
          Auto mute Bit O<sup>Note 2</sup>
  7
                                                   User 2 3
                                                                Off
          Auto mute Bit 1^{\text{Note 2}}
                                                   User 2 4
                                                                Off
           K sensitivity Bit 0^{\text{Note }3}
  9
        K sensitivity Bit 0<sup>Note 3</sup>
                                                    User 2 5
                                                                On
                                                   User 2 6
  9
                                                                On
                                                User 2 7
          MRCT Photo Radar Off/On Note 4
 N/A
          X sensitivity Bit 0^{\text{Note }3}
  6
                                                   User 3 0
           X sensitivity Bit 0^{\text{Note }3}
                                                   User 3 1
  6
          DriveSafe 3D Photo Radar Off/On Note 4
 N/A
                                                   User 3 2
                                                                Off
           DriveSafe 3DHD Photo Radar Off/On Note 4
 N/A
                                                   User 3
          Redflex Halo Photo Radar Off/On Note 4
                                                   User 3 4
 N/A
                                                                Off
          Redflex NK7 Photo Radar Off/On Note 4
 N/A
                                                   User 3 5
          Ekin Photo Radar Off/On Note 4
                                                   User 3 6 Off
 N/A
           Photo Verifier Off/On Note 4
 N/A
                                                    User 3 7
                                                               Off
(unused)
                                                    User 4
(unused)
                                                    User 5
Note 1: Ka Sensitivity Values
  3 - Full Ka sensitivity (default): Maximum range
  2 - Original Ka sensitivity: Same as V1 Gen2 at its 2020 introduction
   1 - Relaxed Ka sensitivity: Still great range but fewer alerts from fantastic
       distances
   0 - Invalid value: forces setting to Full Sensitivity
Note 2: Auto Mute Values
  3 - Off (default): Auto Mute is disabled
   2 - Auto Mute: Mute all X, K & Ku signals after 3 seconds.
   1 - Auto Mute: with unmute - Mute all X, K & Ku signals after 3 seconds. Unmute
       auto muted alerts if strength reaches five LEDs on the Signal Strength
      Meter.
   0 - Invalid value: forces setting to Off
Note 3: K/X Sensitivity Values
  3 - Original K/X sensitivity (default): Same as V1 Gen2 at its 2020
       introduction
   2 - Full K/X sensitivity: Maximum range
```

- 1 Relaxed K/X sensitivity: Still great range but fewer alerts from fantastic distances
- 0 Invalid value: forces setting to Original Sensitivity

Note 4: Photo Radar can only be turned on/off using the reqWriteUserBytes ESP packet. These features are not available in Programming Mode on the Gen2.

Appendix 12.2 Tech Display User Byte-bit Summary T1.0000

Feature	Description	Byte bit Factory
N/A	V1 Display Off/On ^{Note 1}	User 0 0 Off
N/A	Tech Display On/Off ^{Note 2}	User 0 1 On
N/A	Extended Recall Mode Timeout Off/On	User 0 2 Off
(undef)		User 0
(unused)		User 1
(unused)		User 2
(unused)		User 3
(unused)		User 4
(unused)		User 5

Note 1: V1 Display Off/On - Due to interactions between the Tech Display user bytes and previous reqTurnOnMainDisplay or reqTurnOffMainDisplay packets sent to the V1, changes to this bit may not be reflected on the V1 display until after a power cycle on the V1.

Note 2: Tech Display On/Off - This bit turns off the indicators on the Tech Display. Buttons on the Tech Display will still function when the bit is set to zero (off).


T1.0001 and higher


Feature N/A N/A N/A N/A N/A (undef) (undef) (undef)	Description V1 Display Off/OnNote 1 Tech Display On/OffNote 2 Extended Recall Mode Timeout Off/On Resting Display On/Off Extended Frequency Display Off/On	Byte User (User) 1) 2) 3) 4	Factory Off On Off On Off
(unused) (unused) (unused) (unused) (unused)		User 1 User 2 User 4 User 5	2 3 4	

Note 1: V1 Display Off/On - Due to interactions between the Tech Display user bytes and previous reqTurnOnMainDisplay or reqTurnOffMainDisplay packets sent to the V1, changes to this bit may not be reflected on the V1 display until after a power cycle on the V1.

Note 2: Tech Display On/Off - This bit turns off the indicators on the Tech Display. Buttons on the Tech Display will still function when the bit is set to zero (off).

Appendix 12.3 Accessory Discovery Flowchart

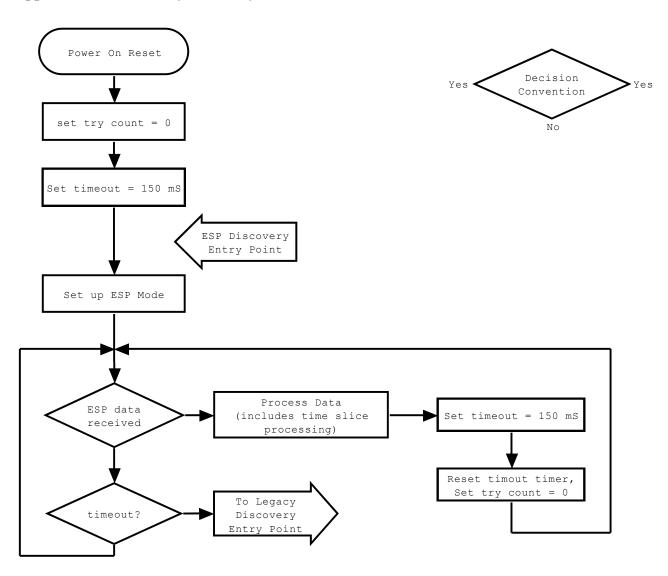

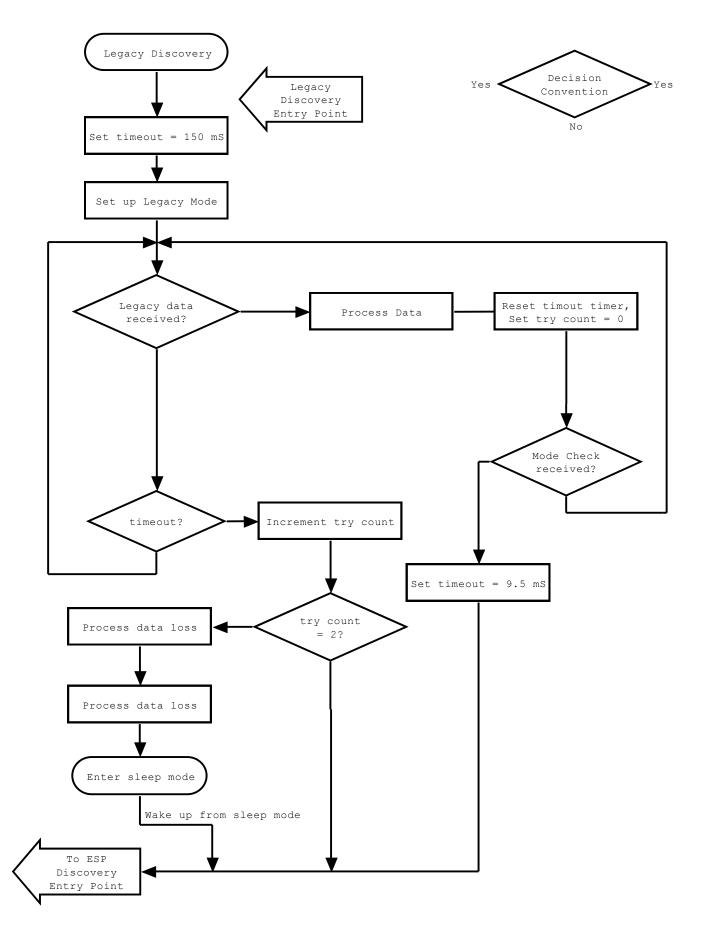

13 Glossary

Baud Rate - the rate at which serial communications takes place defined in Bits-per-second.

Byte Pacing (t_{pacing}) - a slight delay inserted after each byte within an ESP packet, including EOF, that allows the destination device time to process each data byte received.

CDOS (Concealed Display Output Stream) - the traditional communication protocol that provides one-way data flow from the Valentine One Radar Locator to provide display information to the traditional Concealed Display device attached to the Concealed Display output connection.

Checksum - an arithmetic test to determine the validity of a received *ESP Packet* that is included in Valentine One Radar Locators with a *Device ID* of \$A (decimal 10).

Concealed Display - a proprietary device from Valentine Research, Inc that attaches to the Valentine One Radar Locator through the *Concealed Display output* pin on the RJ-11 power connector and allows remote indication of the Valentine One Radar Locator's visual portion of detected alerts.

Custom Sweeps - a group of user defined bands of frequencies that define an area of interest for the Valentine One Radar Locator to repetitively investigate during its normal operation.

DI (**Destination Identifier**) - the Device ID of the target of the ESP Packet.

Discovery - the method by which ESP devices discover the current operational mode (*Legacy mode or ESP mode*) of connected devices attached to the *ESP bus*.

Engineering Control Number - the fourth digit after the decimal point in the version number sent by all Valentine One devices. This digit is for manufacturing use by Valentine Research. This digit is not used to indicate feature or performance changes. Therefore, this digit is not shown when the Valentine One is displaying the software version.

EOF (End-of-Frame) - a fixed value position in an ESP Packet (value of \$AB) that indicates the end of an ESP Packet frame.

ESP (Extended Serial Protocol) - a Valentine Research, Inc. proprietary serial communications protocol which is defined for the purpose of data exchange between devices attached to the Valentine One Radar Locator by means of the Concealed Display output connection.

ESP bus - the RJ-11 power connector pin that was traditionally used by the Valentine One Radar Locator to transmit display information to remote display accessories (i.e. *Concealed Display*) and is now used by the *ESP Protocol* to bi-directionally communicate to other *ESP* enabled devices.

GHz – Gigahertz or 10⁹ Hertz

General Broadcast – a *Device ID* (value of \$08) that can be utilized to send general information (non-*Destination ID*) to all devices attached to the *ESP bus*.

Guard Time (t_{guard}) - a period of time inserted around a *Time Slice* which insures proper synchronization between devices with slightly varying time bases.

Half-Duplex - a bidirectional communication system that allows communication in only one direction at a time.

K Band - a portion of the microwave spectrum (24.050 to 24.250 GHz)

Ka Band - a portion of the microwave spectrum (33.400 to 36.000 GHz)

KPH – Kilometers per Hour (MPH x 1.6093)

Ku Band - a portion of the microwave spectrum used in Europe exclusively (13.400 to 13.500 GHz)

PI (Packet Identifier) - the number associated with a particular packet that identifies its function (see ESP Ouick Reference for a list of Packet ID versus Packet Name)

Legacy Mode - the operating mode where the Valentine One Radar Locator is the sole transmitter of data to peripheral devices attached to the *Concealed Display* output connection. Peripheral devices are detected by means of analog voltages that represent each peripheral device.

Laser - police speed measuring device (950nm wavelength) used for speed enforcement.

LSB - the Least Significant Byte in a 16 bit value (i.e. for '\$3419' '19' would be the LSB)

MSB - the Most Significant Byte in a 16 bit value (i.e. for '\$3419' '34' would be the MSB)

MHz – Megahertz or 10⁶ Hertz

OI (Originator Identifier) - the Device ID of the source of the ESP Packet.

Payload - the portion of an *ESP Packet* that contains informational data to be exchanged between *ESP devices*.

PL (**Payload Length**) - the length of the portion of an *ESP Packet* that contains informational data to be exchanged between *ESP devices*.

Remote Audio - a proprietary device from Valentine Research, Inc that attaches to the Valentine One Radar Locator through the *Remote Audio output* pin on the RJ-11 power connector and allows separate amplification of the audio portion of the Valentine One Radar Locator's detected alerts.

Savvy - a proprietary device from Valentine Research, Inc with the ability to mute the Valentine One Radar Locator below a user adjustable vehicle speed. This device attaches to the ODB-II port of the automobile for the purpose of extracting vehicle speed.

SOF (*Start-of-Frame*) - a fixed value position in an *ESP Packet* (value of \$AA) that indicates the start of an *ESP Packet* frame.

Sweep Section – A frequency range that specifies then allowable custom sweep frequencies. Custom sweeps must be entirely within a sweep section.

Time Slicing - a scheme which allows unique allotted time periods, after an initial synchronization marker transmitted by the Valentine One Radar Locator, for attached ESP devices to transmit to other attached ESP devices. Each attached device has a unique time slice assignment (see *Time Slice Assignment* table).

UART – Universal Asynchronous Receiver Transmitter

X Band - a portion of the microwave spectrum (10.500 to 10.550 GHz)

14 Revision History

Specification Revision History

File Revision	Date	Change Description
3.000	01/11/12	Document Released
3.001	02/28/12	Fixed link in Appendix 12.1
		Changed description of <i>reqMuteOff</i> to address unmuting of laser alerts.
3.002	04/16/12	Fixed User Byte 2 bit definitions
		Eliminated 'I' feature and moved 'J' to User Byte 2, bit 0
3.003	05/18/16	Added the reqDefaultSweepDefinitions and respDefaultSweepDefintions
		packets.
3.004	02/28/2020	* Fixed error in the description of respSweepSections that indicated the wrong
		data for the upper and lower nibbles of the index byte.
		* Added mute and Bluetooth indicator bits to the indDisplayData packet.
		* Added different user byte definitions for V4.1018 and higher
3.005	03/18/2020	Added clarification on Custom Frequencies for V1 Gen2
3.006	02/03/2021	Added audio interval to the specification.
3.007	10/18/2021	Added ESP volume control, specified that the reqDefaultAll command will
3.007	10/10/2021	reset the volume to factory default.
3.008	02/02/2022	* Added the ability to allow user feedback on the V1 if the volume doesn't
5.000	02,02,2022	change in the reqWriteVolume packet
		* Added V1 logic mode to the infDisplayData packet
		* Added mute information to the infDisplayData packet
		* Added current V1 volume to the infDisplayData packet
3.009	09/11/2023	* Added the 'Ka Always Priority Alert On/Off' bit to user bytes for V4.1031
3.00)	05/11/2025	and higher
		* Added the 'Fast Laser Detection On/Off' bit to user bytes for V4.1031
		and higher
		* Specify that, starting with V4.1031, the Destination Identifier for the
		respAlertData packet will be General Broadcast.
3.010	03/01/2024	* Added Junk Alert bit to respAlertData for V4.1032 and higher
		* Added optional Aux0 bit to reqTurnOffMainDisplay for V4.1032 and higher
		* Added Ka sensitivity setting to the user bytes for V4.1032 and higher
3.011	09/09/2024	* Added Startup Sequence to user bytes for V4.1035 and higher
0.011	0370372021	* Added Resting Display to user bytes for V4.1035 and higher
		* Added BSM Plus to user bytes for V4.1035 and higher
		* Added the reqAbortAudioDelay packet for V4.1035 and higher
		* Removed Valentine One version numbers from the ESP Packet Quick
		Reference table
3.012	12/04/2024	* Added the Tech Display user byte definition
2.012	12/01/2021	* Added Auto Mute to user bytes
		* Added support for reqDisplayCurrentVolume packet
3.013	09/02/2025	* Added the Save Volume bit to the reqWriteVolume packet
	37732722	* Added the reqAllVolume and respAllVolume packets to request and read
		both the saved and current volume
		* Added the Display Active bit to the indDisplayData packet
		* Added Resting Display and Extended Frequency Display to the Tech
		Display user bytes
		* Added K sensitivity setting to the user bytes for V4.1037 and higher
		* Added X sensitivity setting to the user bytes for V4.1037 and higher
		* Added Photo Radar settings to the user bytes for V4.1037 and higher
3.014	10/01/2025	* Added the Keep Current on BT Disconnect to Aux0 of reqWriteVolume for
-70-	10,01,2025	V4.1038 and higher
	1	

Valentine One Version ESP Specific Information

Valentine One Version ESP Specific Information			
Software Version	ESP Information		
3.8920	Initial ESP release		
3.8930	Changed Valentine One Identifier from '9' to 'A' and added checksums to all packets.		
3.8952	Added the reqDefaultSweepDefinitions and respDefaultSweepDefintions packets.		
4.1018	Added the mute and Bluetooth indicators to infDisplayData		
	Completely different user byte definitions.		
	Changed Custom Sweeps to Custom Frequencies and added support in Euro and USA for K		
	and Ka band.		
4.1027	Added ESP volume control		
4.1028	* Added the ability to allow user feedback on the V1 if the volume doesn't		
	change in the reqWriteVolume packet		
	* Added V1 logic mode to the infDisplayData packet		
	* Added mute information to the infDisplayData packet		
	* Added current V1 volume to the infDisplayData packet		
V4.1031	* Added the 'Ka Always Priority Alert On/Off' bit to user bytes		
	* Added the 'Fast Laser Detection On/Off' bit to user bytes		
	* Change reqMuteOff to unmute alerts that were muted by Valentine One internal logic		
V4.1032	* Added Junk Alert bit to respAlertData		
	* Added optional Aux0 bit to reqTurnOffMainDisplay		
	* Added Ka sensitivity setting to the user bytes		
V4.1035	* Added Startup Sequence to user bytes		
	* Added Resting Display to user bytes		
	* Added BSM Plus to user bytes		
	* Added support for the reqAbortAudioDelay packet		
V4.1036	* Added Auto Mute to user bytes		
	* Added support for reqDisplayCurrentVolume packet		
V4.1037	* Added support for temporarily changing the volume without saving it. Unsaved volume		
	changes will be persistent until a power cycle or a new volume change.		
	* Add the ability to read both the saved and current volume. They will be different if a		
	volume change is made without saving.		
	* Added the ability to detect when the V1 is displaying data that the accessories should use.		
	* Added K sensitivity setting to the user bytes		
	* Added X sensitivity setting to the user bytes		
	* Added Photo Radar settings to the user bytes		
V4.1038	* Allow restoring the saved volume when Bluetooth disconnects.		