

Computer Architecture Experiment

Jiang Xiaohong





Topics

- 0 Basic Knowledge
- 1、Warm up
- 2 simple 5-stage of pipeline CPU Design
- 3 Pipelined CPU with stall
- 4 Pipelined CPU with forwarding
- 5 Pipelined CPU resolving control hazard and support execution
 - 31 MIPS Instructions







Outline

- Experiment Purpose
- Experiment Task
- Basic Principle
- Operating Procedures
- Precaution



Experiment Purpose 1

- Understand 31 MIPS instructions.
- Extend your design to support all the 31 MIPS instructions in pipelined CPU.





Experiment Purpose 2

- Understand why and when Control Hazards arise
- Master the methods of resolving Control Hazards
 - Freeze or flush
 - Predict-not-taken
 - Predict-taken
 - Delayed-branch
- Implement the predict-not-taken scheme in your final pipelined CPU.
- Write the verification program yourself to test whether it can execute right in both taken and not-taken cases and to test all the 31 instructions.

Pipelined CPU supporting execution of 31 MIPS instructions

	ZheJian	g Univer	sity	1	MIPS I	ions		
Bit #	3126	2521	2016	1511 106 50 Operations				
R-type	op	rs	rt	rd	sa	func		
add		rs	rt	rd	00000	100000	rd = rs + rt; with overflow	PC+=4
addu		rs	rt	rd	00000	100001	rd = rs + rt; without overflow	PC+=4
sub		rs	rt	rd	00000	100010	rd = rs - rt; with overflow	PC+=4
subu		rs	rt	rd	00000	100011	rd = rs - rt; without overflow	PC+=4
and		rs	rt	rd	00000	100100	rd = rs & rt;	PC+=4
or		rs	rt	rd	00000	100101	rd = rs rt;	PC+=4
xor		rs	rt	rd	00000	100110	rd = rs ^ rt;	PC+=4
nor		rs	rt	rd	00000	100111	$rd = \sim (rs \mid rt);$	PC+=4
slt	000000	rs	rt	rd	00000	101010	if(rs < rt)rd = 1; else $rd = 0$; <(signed)	PC+=4
sltu		rs	rt	rd	00000	101011	if(rs < rt)rd = 1; else $rd = 0$; <(unsigned)	PC+=4
sll		00000	rt	rd	sa	000000	$rd = rt \ll sa;$	PC+=4
srl		00000	rt	rd	sa	000010	rd = rt >> sa (logical);	PC+=4
sra		00000	rt	rd	sa	000011	rd = rt >> sa (arithmetic);	PC+=4
sllv		rs	rt	rd	00000	000100	rd = rt << rs;	PC+=4
srlv		rs	rt	rd	00000	000110	rd = rt >> rs (logical);	PC+=4
srav		rs	rt	rd	00000	000111	rd = rt >> rs(arithmetic);	PC+=4
jr	7 . 4	rs	00000	00000	00000	001000	A STATE AND A STAT	PC=rs

Architecture Lab_jxh


神川北学



Pipelined CPU supporting execution of 31 MIPS instructions

	ZheJian	g Univer	sity		MIPS Instructions					
Bit #	3126	2521	2016	1511 106 50			Operations			
I-type	op	rs	rt	immediate						
addi	001000	rs	rt	imm			$rt = rs + (sign_extend)imm;$ with overflow	PC+=4		
addiu	001001	rs	rt		imm		rt = rs + (sign_extend)imm;without overflow	PC+=4		
andi	001100	rs	rt		imm		rt = rs & (zero_extend)imm;	PC+=4		
ori	001101	rs	rt		imm		rt = rs (zero_extend)imm;	PC+=4		
xori	001110	rs	rt		imm		rt = rs ^ (zero_extend)imm;	PC+=4		
lui	001111	00000	rt		imm		rt = imm << 16;	PC+=4		
lw	100011	rs	rt		imm		rt = memory[rs + (sign_extend)imm];	PC+=4		
SW	101011	rs	rt	imm			memory[rs + (sign_extend)imm] < rt;	PC+=4		
beq	000100	rs	rt	imm			if (rs == rt) PC+= $4 + (sign_extend)imm << 2$;	PC+=4		
bne	000101	rs	rt		imm		if (rs != rt) PC+=4 + (sign_extend)imm <<2;	PC+=4		
slti	001010	rs	rt	imm			<pre>if (rs < (sign_extend)imm) rt =1 else rt = 0; less than signed</pre>	PC+=4		
sltiu	001011	rs	rt	imm			if (rs < (zero_extend)imm) rt =1 else rt = 0; less than unsigned	PC+=4		
J-type	op	address								
j	000010	address					PC = (PC+4)[3128],address<<2			
jal	000011	address					PC = (PC+4)[3128],address<<2; \$31 = PC+4			



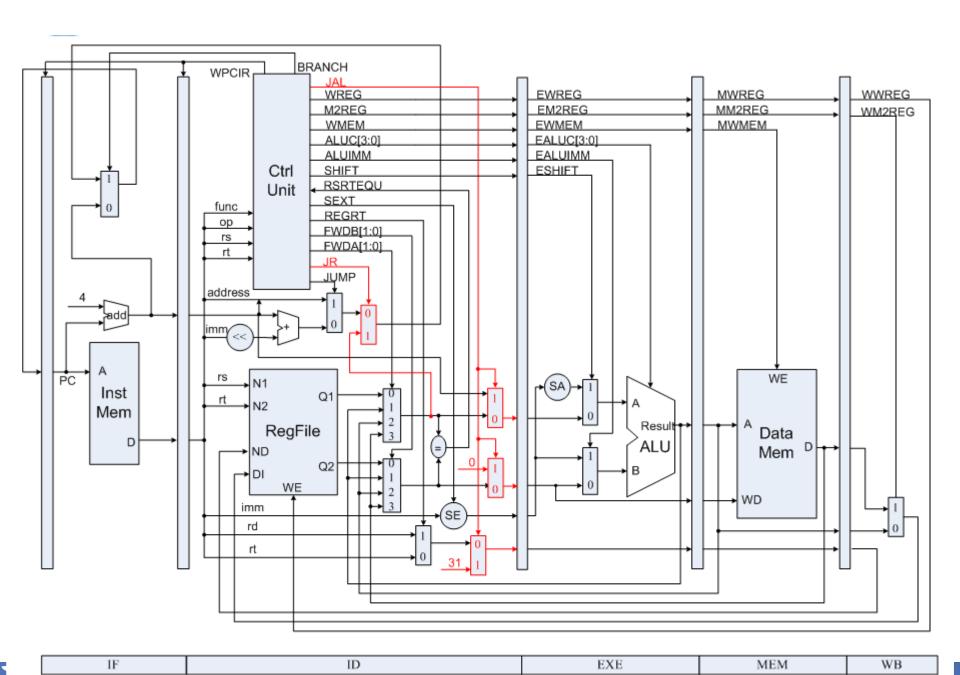



Careful with JAL and LUI

- Need add data path for JAL and LUI
- JAL:
 - How many stall?
 - When write R31? What write to R31?



ZheJiang University

Observation Info

- Input
 - West Button: Step execute
 - South Button: Reset
 - North Button + 4 Slide Button: Register Index
 - East Button: High 16-bit of Reg. Content Sel.

Output

- 0-7 Character of First line: Instruction Code
- 8 of First line : Space
- 9-10 of First line : Clock Count
- 11 of First line : Space
- 12-15 of First line : Register Content
- Second line: "stage name"/ number / type: stage name: 1-"f", 2-"d", 3-"e", 4-"m", 5-"w"(high bits is ignored)



Precautions

- 1. According to datapath to modify the modules of top module, then modify the definitions of the modules, then modify the CPU Controller.
- 2. The signals which transfer from former stage to later stage should be stored to stage registers temporally.
- 3. Design the program for verification by yourself, includes:
 - Stall
 - Forwarding
 - All kinds of instructions



サジス学 Signed and unsigned type

- Reg and wire are unsigned type
- Signed type:
 - reg signed
 - wire signed
- Type conversion
 - \$signed()
 - \$unsiged()



Submission

 Lab report 5 named as StID_name_Lab5.doc (or pdf)

 All your verilog code, coe file, testing file, etc., in your project directory compacted as StID_name_prj.rar (from Lab 6)







• Thanks!