Chapter 5: 68K Instruction Set

Covered Topic

- MC68000 instruction set
 - Chapter 3, 5 by Clements
 - 68K manual

68000 Instruction Set

- Assembler Directives (Pseudo Op Code)
 - ORG, EQU, END, DC, DCB, DS, etc.
- Instructions (Op Code)
 - Data Movement and Arithmetic operations
 - Logical, Shift and Bit operations
 - Program Control
 - System Control

Pseudo Op Codes – Assembler Directives

Data Storage Directives

Tells the assembler to allocate blocks of memory for data storage

DC - Define Constant

- Format: <label> DC.<size> <item>,<item>,<item>.....
- Can store more than one byte
- The <size> specifies the boundary but not the size of each item

Example: date_msg DC.W 'April 8' *stored as 8 but not 7 bytes

DCB - Define Constant Block

- Format: <label> DCB.<size> <length>,<value>
- Initializes a block of memory to the same value
- The length is the number of bytes, words, or long words

Example: Repeat_msg DCB.B 4, \$54

Pseudo Op Codes – Assembler Directives

DS - Define Storage

- Generates an uninitialized block of memory
- Allocate a space for the result, most of cases
- Format: <label> DS.<size> <length>


END - End of Source file

- Everything after END is ignored
- Format: END <address>
- The END pseudo-op also instructs the simulator where to load the program in memory
- The <address> is typically the address of ORG

Note: ORG and END are complementary


- ORG instructs the assembler how to resolve address references
- END instructs the loader where to put the code in memory
- They don't necessarily to be the same!
- But, we always want to make them using the same address in our code in this class

Hardware Organization of the MC68000

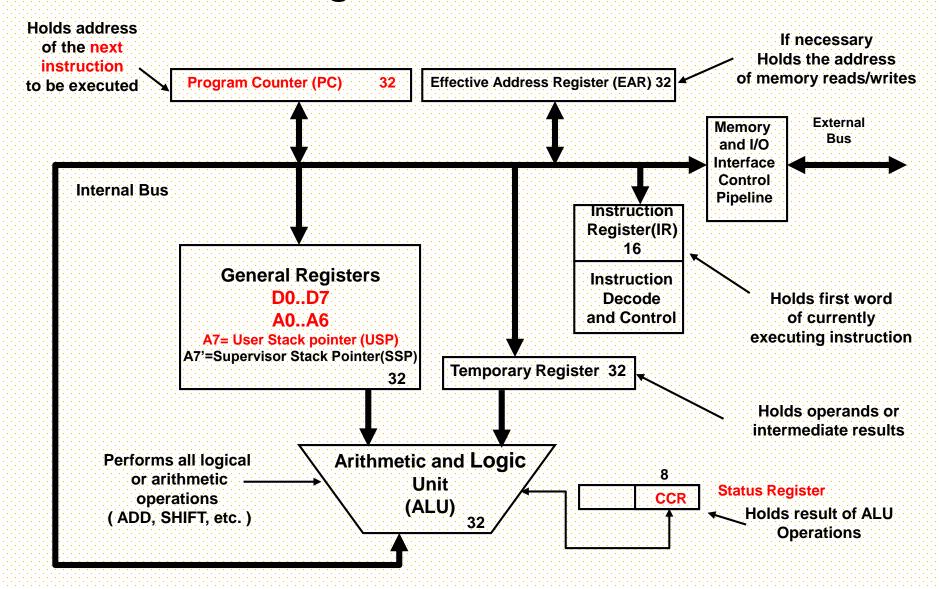

User Programming Model

 For most applications the architectural model of the 68000 is the User Programmer's Model

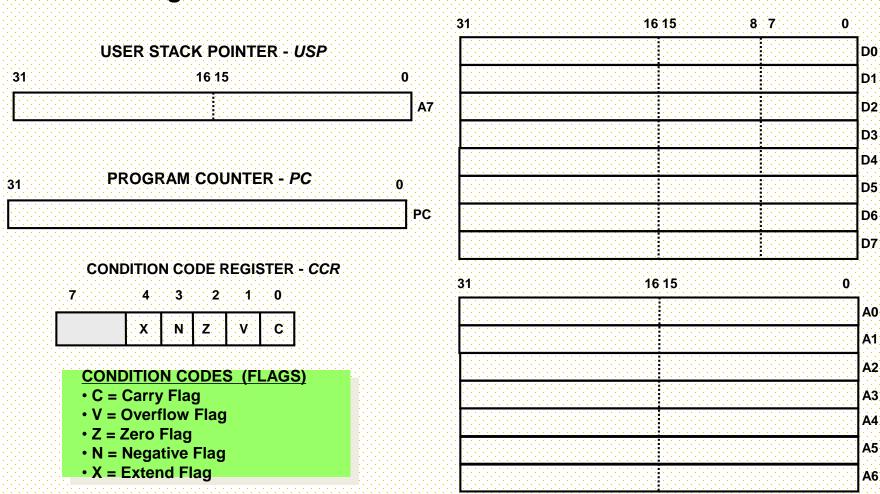

TRAP #15 task

http://www.easy68k.com/QuickStart/TrapTasks.htm

- TRAP #15 is used for Input/Output
- How to use? Practice with Lab1!
 - MOVE.B <u>#number</u>, D0
 - TRAP #15
 - #number 14 Display the NULL terminated string at (A1) without CR,
 I F
 - #number 4 Read a number from the keyboard into D1.L.
- Based on what you put in the D0, you will have different I/O tasks
- For your project, you cannot go beyond #number 14!

Data Movement Instructions

Move operands (data) among memory or registers

INSTR.	DESCRIPTION	EXAMP	LE
MOVE	Copies an 8-, 16- or 32-bit value from one memory location or register to another memory location or register	MOVE.B #\$8C,D0 MOVE.W #\$8C,D0 MOVE.L #\$8C,D0	$[D0] \leftarrow $XXXXXX8C$ $[B0] \leftarrow $XXXXX008C$ $[D0] \leftarrow $0000008C$
MOVEA	Copies a source operand to an address register. MOVEA operates only on words or longwords. MOVEA.W sign-extends the 16-bit operand to 32 bits	MOVEA.W #\$8C00,A0 MOVEA.L #\$8C00,AO	[A0] ←\$FFFF8C00 [A0] ←\$00008C00
MOVEQ	Copies a 8-bit signed value in the range –128 to +127 to one of the eight data registers. The data to be moved is sign-extended before it is copied to its destination	MOVEQ #-3,D0 MOVEQ #4,D0	[D0] ←\$FFFFFFFD [D0] ←\$00000004
MOVEM	Transfers the contents of a group of registers specified by a list. The list of registers is defined as A ₁ -A ₁ /D _p -D _q . MOVEM operates only on words or longwords.	MOVEM.L A0-A3/D0-D7,-(A7)	;copies all working ;registers to stack

MOVE <ea>, <ea>

- Copies a byte, word or long from one location to another
- Source effective address: All the addressing modes
- Destination effective address: All except immediate, address register
 direct and program counter relative addressing
- CCR bit: V and C are cleared, N and Z are updated according to the value
 of the destination operand, X is unaffected. (XNZVC = ?**00)
- For example,

MOVE.B #\$8C, D0 results in XNZVC set to → ?1000 MOVE.B #0, D0 results in XNZVC set to → ?0100

- Bug report for easy68K simulator!
 - MOVE.L #(data<5bits), D0→ assembled to MOVEQ instruction
 - Address register as the destination is considered valid

MOVEA <ea>, An

- Copy an Address value from source to destination
- Source effective address: All the addressing modes
- Destination effective address: only Direct Address Register
- Can only take .W and .L
- Does not affect the state of the CCR
- Words are sign extended when moved into the register

MOVEA.W #\$8C00, A0 [A0] ← \$FFFF8C00

MOVEA.W #\$4F00, A0 [A0] ← \$00004F00

Longwords are just an absolute longword address

MOVEA.L #\$8C00, A0 [A0] ← \$00008C00

MOVEA

What value will you see in A1 after the following operations?

MOVEA.L #\$8000, A1

• Then A1 contains \$00008000

= \$ FFFF8000

More about MOVEA

- Addresses are signed numbers!
 - Why need negative number?
 - For the reverse direction, instead of forwarding
- Why not just use Long-word addresses only?
 - Saves memory space
 - Requires one less extension word fetch
 - ROM code is usually placed in low or high memory
- MOVEA and some other Address Operation instructions can
 - explicitly specify word and long address (MOVEA.W, MOVEA.L)
 - sign extend the address automatically
- What about other instructions?

LEA <ea>, An

- Source → An
- Load effective address
- Does not affect the state of the CCR
- Size = Longword
- Source effective address:
 - (An), An, Absolute addressing (Word, Long)

LEA \$A000, A0 [A0] ← \$0000A000

LEA (A2), A0 $[A0] \leftarrow [(A2)]$

Is "LEA \$A000, A0" the same as "MOVEA.W #\$A000, A0"?

No. LEA does not allow word-address. So, all values are considered longword addresses → no sign extension!

After "MOVEA.W #\$A000, A0", A0 has FFFFA000

MOVEQ #<data>, Dn

- Move Quick instruction copies one byte immediate data as
 8-bit signed value (-128~127) to a data register
- Cannot move the data out of range
- The data to be moved is sign-extended before it is copied to its destination
- CCR bit: V and C are cleared, N and Z are updated according to the value of the destination operand, X is unaffected. (XNZVC = ?**00)
- Data is saved into data register as Longword (smaller values are signextended)

```
MOVEQ #-3, D0 [D0] \leftarrow \$FFFFFFD
(-3 = 11111101 with 8-bits)
MOVEQ #4, D0 [D0] \leftarrow \$000000004
```

MOVEM <register list>, <ea> MOVEM <ea>, <register list>

- Transfers the contents of a group of registers specified by a list. The list of registers is defined as Ai-Aj/Dp-Dq.
- MOVEM operates only on words or longwords.
- Use assembler directive REG to bind a name to the list

MOVEM.L A0-A6/D0-D7, -(SP)

GROUP REG A0-A6/D0-D7
MOVEM.L GROUP, -(SP)

Pseudo Op Codes – Assembler Directives

REG - Register Range

- Allows a list of registers to be defined
- Format: <label> REG <register list>
- Registers may be specified as a single register, An or Dn, separated by slashes, i.e. A1/A5/A7/D1/D3
- Register ranges may also be specified, i.e., A0-A3
- Thus:

```
save_reg REG A0-A3/A5/D0-D7
```

- Refer to the MOVEM instruction in your programmer's manuals
- Will go over again for subroutine


MOVEM <register list>, <ea> MOVEM <ea>, <register list>

- Mostly used with pre-decrementing (registers to memory)
 and post-incrementing (memory to registers)
- Frequently used to save working registers on entering a subroutine and to retrieve them on exiting the subroutine
 MOVEM.L A0-A3/D0-D7, -(A7) *copies all working registers to stack
 MOVEM.L (A7)+, A0-A3/D0-D7 *Restore the registers

WHY do you need to save the registers to the stack when entering a subroutine??

- 68K Always writes to memory in the order of A7 to A0, D7 to D0
- 68K Always reads from memory in the order of D0 to D7, A0 to A7

E.g., D0 has \$30, D1 has \$20, A3 had \$1234

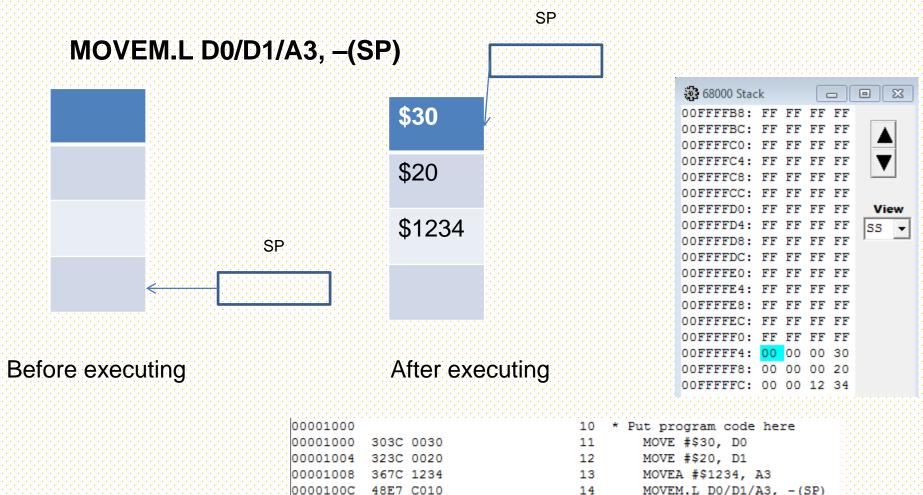

Data Movement Instructions

Move operands (data) among memory or registers

INSTR.	DESCRIPTION	EXAMP	LE
MOVE	Copies an 8-, 16- or 32-bit value from one memory location or register to another memory location or register	MOVE.B #\$8C,D0 MOVE.W #\$8C,D0 MOVE.L #\$8C,D0	$[D0] \leftarrow $XXXXXX8C$ $[B0] \leftarrow $XXXXX008C$ $[D0] \leftarrow $0000008C$
MOVEA	Copies a source operand to an address register. MOVEA operates only on words or longwords. MOVEA.W sign-extends the 16-bit operand to 32 bits	MOVEA.W #\$8C00,A0 MOVEA.L #\$8C00,AO	[A0] ←\$FFFF8C00 [A0] ←\$00008C00
MOVEQ	Copies a 8-bit signed value in the range –128 to +127 to one of the eight data registers. The data to be moved is sign-extended before it is copied to its destination	MOVEQ #-3,D0 MOVEQ #4,D0	[D0] ←\$FFFFFFFD [D0] ←\$00000004
MOVEM	Transfers the contents of a group of registers specified by a list. The list of registers is defined as A ₁ -A ₁ /D _p -D _q . MOVEM operates only on words or longwords.	MOVEM.L A0-A3/D0-D7,-(A7)	;copies all working ;registers to stack

68000 Arithmetic Instructions

- 68K has a conventional set of integer arithmetic operations.
- 68K does not support floating-point operations.

INSTR.	DESCRIPTION	EXAMPLE
ADD× SUB×	ADD×/SUB× add/subtract the contents of a source to/from the contents of a destination and deposits the result in the destination location. Direct memory-to-memory operations are not permitted. Assume [D0] =\$11118000 and [D1] =\$11110123.	ADD.W D0,D1 ; [D1] ←\$11118123 ADD.L D0,D1 ; [D1] ←\$22228123 ADDQ #N,D1 ;N∈[1,8] SUB.L D1,D0 ; [D0] ←\$00007EDD
MULU MULS	MULU (multiply unsigned) forms the product of two 16-bit integers. The 32-bit destination must be a data register. MULS is similar but treats data as signed. Assume [D0]=\$ABCD8000.	[D0] ← 04000000 MULU #\$0800,D0 ;[D0] ←\$00400000
DIVU DIVS	DIVU (divide unsigned) works with a 32-bit dividend and a 16-bit divisor. The dividend must be a data register. The 16-bit result is stored in the low word of the destination, and the 16-bit remainder in the high word. DIVS is similar but treats data as signed. Assume [D0]=\$0000000E, 14 ₁₀ .	DIVS #-3,D0 ;[D0]←\$0002FFFC
CLR NEG	CRL (clear) writes zeros into the destination operand. NEG (negate) performs a 2s complement operation on the destination datasubtracts it from zero. Assume [D0]=\$1234B021.	CLR.B D0 ; [D0] ← \$1234B000 CLR.L D0 ; [D0] ← \$00000000 NEG.W D0 ; [D0] ← \$12344FDF
EXT	Sign-extend increases the bit-size of a signed integer EXT.W converts an 8-bit into a 16-bit, and EXT.L converts a 16-bit into a 32-bit. Assume [D0]=\$1234B021.	EXT.W D0 ; [D0] ←\$12340021 EXT.L D0 ; [D0] ←\$FFFFB021

ADD

- ADD (Add binary)
 - A data register must be the source or destination of an ADD instruction
 - ADD <ea>, Dn or ADD Dn, <ea>
 - Direct memory-to-memory additions are not permitted
 - Example:
 - Before: <D2> = \$12345678, <D3> = \$5F02C332
 - ADD.B D2,D3
 - After: <D2> = \$12345678, <D3> = \$5F02C3AA (XNZVC = 01010)
 - CCR bits are changed based on the result
 - X : EXTEND flag: Used in certain operations, generally affected like CARRY
 - N: NEGATIVE flag: if Bit 7 is 1, then N=1
 - Z : ZERO flag: if zero, Z=1
 - V : OVERFLOW flag
 - C : CARRY flag

ADDA and ADDQ

- ADDA (Add Address): Adds data to an address register
 - Only word and longword operations are allowed
 - ADDA.W #\$8122, A0 ; [A0] ← \$FFFF8122 + A0 (sign-extended)
 - CCR is not affected
- ADDQ (Add Quick): Adds a number in the range 1 to 8
 - 3-bits can represent 1 8, (Note: 8 being 000 here)
 - Word and longword size when the destination is an address register
 - If destination is address register, CCR is not affected
 - Faster as the immediate data is just 3 bits
- ADDQ, SUBQ support operands 1 to 8 only and not sign-extended

ADDI

- ADDI (Add Immediate): Adds number to data register or memory
 - Byte, word or longword operations
 - ADDI.W #\$1234, (A0) is valid
 - ADD.W #\$1234, (A0) is invalid
- Question: If <D2> = \$047128E8 what's the difference between

$$* < D2 > = ??, C = ??$$

\$04712808

$$C=1$$

\$04712**908**

$$C=0$$

MULU and MULS

- MULU (multiply unsigned), MULS (multiply signed)
 - MULU <ea>, Dn
 - MULS <ea>, Dn
 - Product of two 16-bit integers (Only Word is allowed)
 - Only lower order word is used in multiplication: upper word is unused
 - [D0] = \$ABCD8000
 - MULU #\$0800, D0 ; [D0] ← 04000000
 - CCR Bits
 - X: unchanged
 - V = C = 0
 - N and Z depend on the result

DIVU and DIVS

- DIVU (divide with unsigned) , DIVS (divide with signed)
 - DIVU <ea>, Dn
 - DIVS <ea>, Dn
 - Destination ÷ Source → Destination
 - Destination is longword, Source is word
 - The quotient is in the lower-order word
 - The remainder is in the upper-order word
 - CCR bits
 - X: unchanged
 - N, Z: depends on the quotient, but if V=1 or divide by zero then undetermined
 - V: 1 if overflow occurs. If divide zero, then undetermined
 - C: 0

CLR, CMP and EXT

- CLR (Clear an operand)
 - May be used on bytes, words and longwords
 - All condition codes except X are affected
 - Faster than MOVE.L \$0, D0
 - -Z = 1, V=C=N = 0, X is unchanged
- CMP (Compare data with a data register)
 - The second operand must be a data register
 - Sets the condition codes accordingly
 - Subtracts the source operand from the destination operand
 - Only the condition code flags are affected!
 - Source and destination operands are not affected!
- EXT (extend byte to word or word to longword)
 - EXT.W Dn: extend Dn(7) to Dn(8:15) (extend byte to word)
 - EXT.L Dn: extend Dn(15) to Dn(16:31) (extend word to longword)

68000 Arithmetic Instructions

- 68K has a conventional set of integer arithmetic operations.
- 68K does not support floating-point operations.

INSTR.	DESCRIPTION	EXAMF	LE
ADD× SUB×	ADD×/SUB× add/subtract the contents of a source to/from the contents of a destination and deposits the result in the destination location. Direct memory-to-memory operations are not permitted. Assume [D0] =\$11118000 and [D1] =\$11110123.	ADD.L D0,D1 ; ADDQ #N,D1 ;	[D1]←\$11118123 [D1]←\$22228123 N∈[1,8] [D0]←\$00007EDD
MULU MULS	MULU (multiply unsigned) forms the product of two 16-bit integers. The 32-bit destination must be a data register. MULS is similar but treats data as signed. Assume [D0]=\$ABCD8000.	MULU #\$0800,D0 ;	[D0] ← 04000000 [D0] ←\$00400000
DIVU DIVS	DIVU (divide unsigned) works with a 32-bit dividend and a 16-bit divisor. The dividend must be a data register. The 16-bit result is stored in the low word of the destination, and the 16-bit remainder in the high word. DIVS is similar but treats data as signed. Assume [D0]=\$0000000E, 14 ₁₀ .	DIVS #-3,D0 ;	[D0]←\$0002FFFC
CLR NEG	CRL (clear) writes zeros into the destination operand. NEG (negate) performs a 2s complement operation on the destination datasubtracts it from zero. Assume [D0]=\$1234B021.	CLR.L DO ;	[D0] ←\$1234B000 [D0] ←\$00000000 [D0] ←\$12344FDF
EXT	Sign-extend increases the bit-size of a signed integer. EXT.W converts an 8-bit into a 16-bit, and EXT.L converts a 16-bit into a 32-bit. Assume [D0]=\$1234B021.		[D0]←\$12340021 [D0]←\$FFFFB021

68000 Logical Operations

INSTR.	DESCRIPTION		EXAMPLE
AND ANDI	Bit-wise logical AND operation. Normally used to clear, or mask, certain bits in a destination operand.	ANDI.B #%0111111,D0	;clear the 8 th least ;significant bit of D0
OR ORI	Bit-wise logical OR operation. Normally used to set certain bits in a destination operand.	ORI.B #%10101010,D0	;set even bits of D0 ;lowest byte
EOR EORI	Bit-wise logical XOR operation.	EOR.B #%11111111,D0	;XOR of the lowest byte of D0
NOT	Bit-wise NOT operation. Assume [D0] =\$1234F0F0.	NOT.W DO	;[D0]←\$12340F0F
TST	Similar to CMP #0, operand	TST D0	;update N,Z and clear V,C

68000 Logical Operations

- AND (Performs bitwise logical AND)
 - Example
 - AND.W A0,D4
 - "AND.W": only the lower 16-bits of each register is used in a word operation
 - Example

```
Before: <D0> = $3795AC5F and <D1> = $B6D34B9D
```

AND.W D0,D1

```
After: <D0> = $3795AC5F and <D1> = $B6D3081D
```

- Shortcut to remember: Any hex digit AND'ed with F returns the digit
 Any hex digit AND'ed with 0 returns 0
- ANDI (AND immediate data)
 - Example: ANDI.B #\$5A,D7

68000 Logical Operations (2)

- OR (Perform bit-wise logical inclusive OR of the operands)
- ORI (Immediate bit-wise OR with destination operand)
- EOR (Perform bit-wise logical Exclusive OR of the operands)
- EORI (Immediate bit-wise Exclusive OR with destination operand)
- NOT (Bit-wise logical complement)
 - Example
 - Before: <D3> = \$FF4567FF
 - NOT.B D3
 - After: <D3> = \$FF456700

68000 Shift and Rotate Instructions

INSTR.	OPERATION	BIT MOVEMENT
ASL	Arithmetic shift left	C ← Operand ← 0
ASR	Arithmetic shift right	Operand C X
LSL	Logic shift left	C ← Operand ← 0
LSR	Logic shift right	0 → Operand → C → X
ROL	Rotate left	C ← Operand
ROR	Rotate right	→ Operand → C
SWAP	Swap words of a longword	16 bits 16 bits

Arithmetic Shift


- Byte, Word, Longword (careful for the data size)
- V = 1 if MSB changed at any time during the shift operation
- X/C = the last bit shifted out of the operand
- N,Z: based on the result
- ASL
 - Bits shift to left
 - New bits, 0's, are added at the end
 - A bit which is shifted out goes to C-bit and X-bit
 - If there are multiple bits out of the end, then the last bit goes to C and X
 - If the sign bit has changed at the end, then V bit set

ASR

- Bits shift to right
- The most significant bit is preserved (to preserve the sign bit)
- The bit shifted out of the end goes to C-bit and X-bit

ASL and ASR

ASL - Arithmetic Shift Left

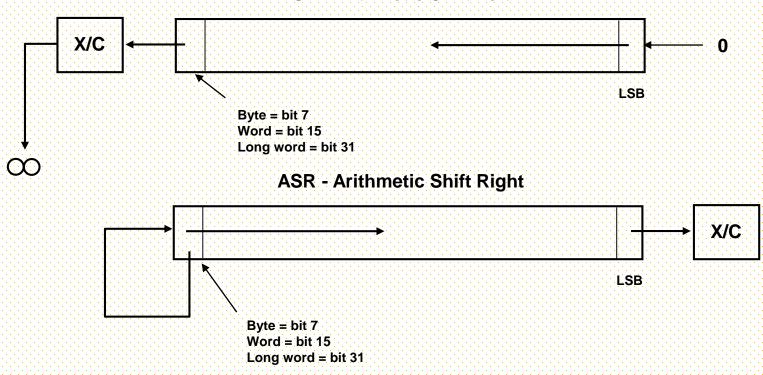


Question:

- Before: <D0> = \$3456ABCF and X=0, C=0
- ASL.W #3,D0
- After: <D0> = ???, X/C = ???

Logical Shift


- Byte, Word, Longword
- V = 0 always
- X/C = the last bit shifted out of the operand
- N,Z: based on the result

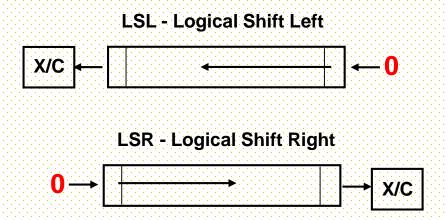

0's will be added, and sign bits cannot be preserved!

Rotate (Circular Shift)

- Byte, Word, Longword
- The bit shifted out of the operand moves to the position of the bit shifted in.
- No bit is lost (all bits are preserved, but in different places)
- V = 0 always
- X: not affected
- C = the last bit shifted out of the operand
- N,Z: based on the result

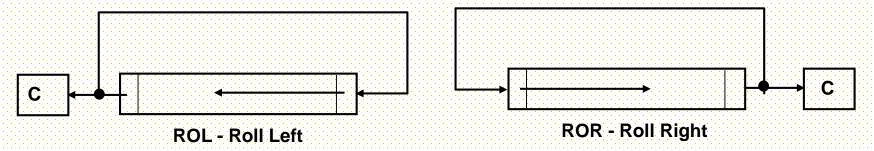

Question:

- Before: <D0> = \$3456CBCF
- ROL.W #3,D0
- After: <D0> = ???, XNZVC = ???

68000 Shift and Rotate Instructions

- Byte, word or long word operands
 - Contents of data registers D0-D7
 - Contents of memory locations
- Shifting data in a data register: ASd #data,Dn or ASd Dx,Dy
 - Instruction must supply the direction, and total number of shifts/rotations
 - If number of shifts ≤ 8, use the immediate form
 - If number of shifts > 8, number must be in another data register
 - Example: < D0> = \$0000000A
 - ASL.B #4,D2 *Arithmetic shift left 4 bits
 - LSR.W #6,D3 *Logical shift right 6 bits
 - ROL.L #7,D4 *Rotate left 7 bits
 - LSR.W D0,D5 *Logical shift right 10 bits
- Shifting data in a memory location: ASd <ea>
 - Only one bit is shift at a time and only word operand

68000 Shift and Rotate Instructions


INSTR.	OPERATION	BIT MOVEMENT
ASL	Arithmetic shift left	C ← Operand ← 0
ASR	Arithmetic shift right	Operand C X
LSL	Logic shift left	C ← Operand ← 0
LSR	Logic shift right	0 → Operand → C → X
ROL	Rotate left	C ← Operand
ROR	Rotate right	→ Operand → C
SWAP	Swap words of a longword	16 bits 16 bits

68000 Bit Manipulation

- Only Z-bit in CCR is affected
- Test one bit of a byte if in memory (source is modulo 8)
- Test one bit of a Longword if in data register

INSTR.	DESCRIPTION			E	XAMPLE (Assume [D0] =\$00000009)
BSET	Bit test and set Causes the Z-bit to be set if the specified bit is zero and then forces the specified bit of the operand to be set to one	BSET	#2,	D0	;[D0]←\$000000D and [Z]←1
BCLR	Bit test and clear works like BSET except that the specified bit is cleared (forced to zero) after it has been tested	BCLR	#0,	D0	;[D0]←\$00000008 and [Z]←0
BCHG	Bit test and change causes the value of the specified bit to be reflected in the Z-bit and then toggles (inverts) the state of the specified bit	BCHG	#4,	D0	;[D0]←\$00000019 and [Z]←1
BTST	Bit test reflects the value of the specified bit in the Z-bit	BTST	#2,	D0	;[Z]←1

Hardware Organization of the MC68000

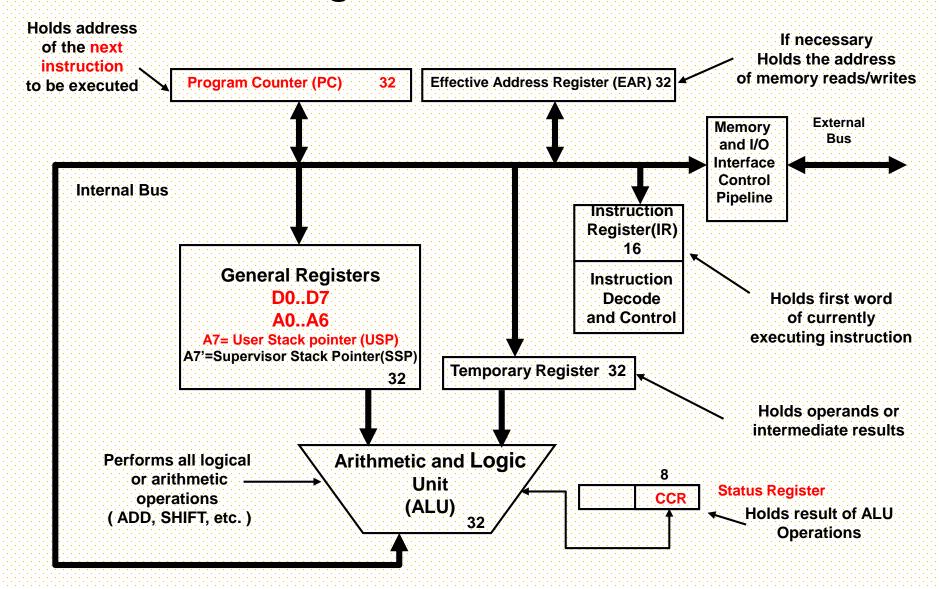

Program Control

INSTR.	DESCRIPTION
BRA	BRA (branch always) implements an unconditional branch, relative to the PC. The offset is expressed as an 8- or 16-bit signed integer. If the destination is outside of a 16-bit signed integer, BRA cannot be used.
Всс	Bcc (branch conditional) is used whenever program execution must follow one of two paths depending on a condition. The condition is specified by the mnemonic cc. The offset is expressed as an 8- or 16-bit signed integer. If the destination is outside of a 16-bit signed integer, Bcc cannot be used.
BSR RTS	BSR branches to a subroutine. The PC is saved on the stack before loading the PC with the new value. RTS is use to return from the subroutine by restoring the PC from the stack.
JMP	JMP (jump) is similar to BRA. The only difference is that BRA uses only relative addressing, whereas JMP has more addressing modes, including absolute address (see reference manual).
JSR RTS	Similar to BSR and RTS. But, JSR has more addressing modes than BSR. See reference manual.

cc	CONDITION	BRANCH TAKEN IF
CC	Carry clear	C=0
cs	Carry set	C=1
NE	Not equal	Z=0
EQ	Equal	Z=1
PL	Plus	N=0
MI	Minus	N=1
HI	Higher than	$\overline{C}\overline{Z} = 1$
LS	Lower than or same as	C+Z=1
GT	Greater than	$NV\overline{Z} + \overline{NVZ} = 1$
LT	Less than	$N\overline{V} + \overline{N}V = 1$
GE	Greater than or equal to	$N\overline{V} + \overline{N}V = 0$
LE	Less than or equal to	Z + (NV + NV) = 1
VC	Overflow clear	V=0
VS	Overflow set	V=1
Т	Always true	Always
F	Always false	Never

Program Control (1)

- Conditional branches are due to tests within the program
 - Logical combinations of the states of the flags
- Branches are examples of PC relative addressing
 - 2's complement displacement value plus <PC> determines the destination of the branch
 - Relative addressing does not require a programmer to specify an absolute memory location
- Unconditional jumps and jumps to subroutines
 - JMP <expression>: value of expression is new PC value (EA→PC)
 - JSR <expression> and RTS provide method of accessing frequently used code and returning to starting point

JSR automatically does the following three things for you! SP-4→SP, PC→(SP), EA→PC

Program Control (2)

- SUB vs. CMP
 - Both instructions subtract the source from the destination
 - SUB places the result in the destination
 - CMP does not change the operands, but change CCR flags
- Programmer's Reference Manual describes which Condition Code Flags are affected by each instruction and how they are modified

```
C++ example:

int a = 3, b = 5;

if (a == b)

{ Execute this code };
```

```
Assembly language example:

move.l #3,D0
move.l #5,D1
cmp.l D0,D1
beq equal
not_equal {This code executes}
equal {This code executes}
```

Condition Codes

- Most machine instructions will cause a change to condition code flags
 - A branch is taken when the logical combination of the appropriate condition code flags evaluates to TRUE
- The class of instructions that change program flow are called branch instructions
 - Bcc means branch if the appropriate condition code flag is set to 1 Examples:
 - BEQ: branch if the ZERO FLAG = 1 (result is zero)
 - BNE: branch if the ZERO FLAG = 0 (non-zero result)
 - BGE: branch if the result is greater or equal: NV + ~N~V
 - CMP.B #10, D0 when <D0> = 20, then 20-10 is not negative and not overflow (~N~V)
 - CMP.B #\$-7F, D0 when <D0> = 6F, then, 6F-(-7F) is overflow and negative. (NV)

Branch Instructions

 The following table summarizes the branch conditions and how they are tested:

Bcc	MEANING	LOGICAL TEST
BCC	Branch if CARRY is clear	C = 0
BCS	Branch if CARRY is set	C = 1
BEQ	Branch if result equals zero	Z = 1
BNE	Branch if result does not equal zero	Z = 0
BGE	Branch if result is greater or equal	$N * V + \overline{N} * \overline{V} = 1$
BGT	Branch if result is greater than	N * V * Z + N * V * Z =
ВНІ	Branch if result is HI	C * Z = 1
BLE	Branch if result is less than or equal	$Z + N * \overline{V} + \overline{N} * V = 1$
BLS	Branch if result is low or the same	C + Z = 1
BLT	Branch if result is less than	N * V + N * V = 1
ВМІ	Branch if result is negative	N = 1
BPL	Branch if result is positive	N = 0
BVS	Branch if the resulted caused an overflow	V = 1
BVC	Branch if no overflow resulted	V = 0

Branch Instructions (2)


- How can you keep track of the sense of branches?
- Let's consider the possible relationships between registers D0 and D1 for
 CMP D0,D1 (D1 D0→ CCR flag)
- The following table shows which branch will be taken:*

Relationship	Signed numbers	Unsigned numbers	Comments
D1 < D0	BLT	BCS	BCS = Branch on carry set
D1 <= D0	BLE	BLS	BLS = Branch on Low or same
D1 = D0	BEQ	BEQ	
D1 <> D0	BNE	BNE	
D1 > D0	BGT	ВНІ	BHI = Branch on High
D1 >= D0	BGE	BCC	BCC = Branch on carry clear

^{*} http://www.easy68k.com/paulrsm/doc/trick68k.htm


Calculating Branches

- How does a processor "take a branch?"
 - Program counter (PC) contains the address of the next instruction
 to be executed as the current instruction is being decoded
- Form of instruction: Bcc displacement
- Operand of a branch instruction is a signed 8-bit or 16-bit offset
 - Called a displacement
 - If the displacement value is more than a word (two bytes), then you cannot use branches
- If the branch test condition evaluates to be true
 - <PC> + displacement --> PC
 - Becomes the address of the next instruction

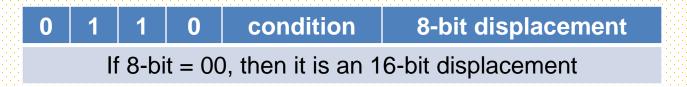

Analyzing the Branch Code

```
34
    00000432 2080
                            TEST LOOP:
                                          MOVE . L
                                                     D0, (A0)
    00000434 B090
                                                     (A0),D0
35
                                          CMP.L
    00000436 6700000E
36
                                          BEO
                                                     ADDR OK
    0000043A 3888
                                          MOVE.W
                                                     A0, (A4)
37
                           NOT OK:
                                                     #1, (A3)
38
    0000043C 5213
                                          ADDQ.B
39
    0000043E 0C130004
                                          CMPI.B
                                                     #MAX CNT, (A3)
40
    00000442 6700000A
                                                     DONE
                                          BEO
    00000446 5888
41
                           ADDR OK:
                                          ADDO.L
                                                     #INC ADDR, AO
    00000448 B2C8
                                          CMPA
                                                     A0,A1
42
43
    0000044A 6CE6
                                                     TEST LOOP
                                          BGE
44
    0000044C 60DA
                                                     NEXT TEST
                                          BRA
    0000044E 4E722700
                                                     #EXIT PGM
45
                           DONE:
                                          STOP
```

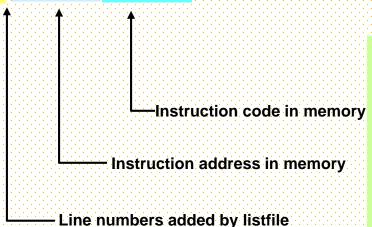

- The instruction, BGE TEST_LOOP has the instruction code: 6CE6
- <PC>=0000044C (not 0000044A!!)
 - The displacement = E6
 - \cdot 044C + E6 = 432
- Why? E6 = 1A's 2's complement
- Therefore, 44C 1A = 432
- If the code is 6C00 and follows 00E6, then it is 16-bit displacement, and it is positive (please check the manual for more info).

Loop Constructs in Assembly

- C++ has built-in constructs for changing the program flow
 - If/Else, While, Do/While, Switch, For, Function calls
- Assembly language requires that we build our own constructs
 - Branch, Jump, Jump to Subroutine (Function call)
- General rule
 - Pair an instruction that either TESTS A CONDITION or CAUSES A VARIABLE TO CHANGE with the proper
 branch on result instruction
- Objective
 - Set the condition code flags and then test their value with the branch instruction

"FOR" Loop Example

C++ example: for (int counter = 1 ; counter < 10 ; counter++) { Execute these statements }

Assembly language example:

```
move.1 #1,D0 *D0 is the counter
move.1 #10,D1 *D1 holds terminal value
for_loop cmp.b D0,D1 *D0 the test
beq next_code *Are we done yet?
{ Execute some other loop instructions}
addq.1 #1,D0 *Increment the counter
bra for_loop *G0 back
next_code { Execute the instructions after the loop }
```

Stack-based Operations – Review

- 68k architecture automatically manages the memory stack as a Lastin/First-out (LIFO) data structure
 - Registers A7 or SP or A7' implement the stack pointer
- Stack pointer should always be initialized as one of the first operations of setting-up the environment, otherwise it crashes
 - Stack is necessary if the program includes subroutines
- Stack is normally initialized to the highest value in RAM
 - "Grows" from higher memory down towards lower memory
- PUSH and POP operations use auto-incrementing or auto-decrementing

- PUSH

- Decrease the stack pointer and place an item on the stack
- Address register indirect with pre-decrement

– POP

- Remove an item from the stack and increase the stack pointer
- Address register indirect with post-increment

Stack-based Operations – Review

During a PUSH operation the stack grows towards lower memory addresses (decrease)

Example:


MOVE.B D0,-(SP) will place a byte of data on the stack.

During a POP operation the stack shrinks towards higher memory addresses

Example:

MOVE.B (SP)+,D0 will move a byte of data from the stack to D0.

Initial value of the stack pointer, SP The TOP of the stack

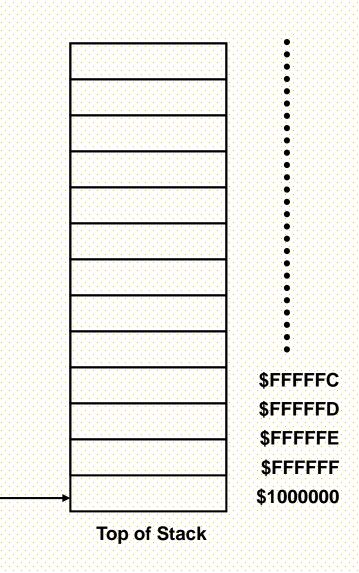

Subroutines


Subroutines in assembly language are procedures or function calls in C

- JSR instruction
 - PUSHES the long word address of the next instruction onto the stack in three steps: SP-4→SP, PC→(SP), EA→PC
 - 2. Current PC value is stored in SP (PC \rightarrow (SP))
 - 3. Jumps to the location specified in the operand $(EA \rightarrow PC)$
- RTS instruction
 - 1. Must be used at the end of the subroutine
 - Causes the stack to **POP** the return address back into the PC (SP)→PC, SP+4→SP

Subroutines (2)

- It is up to the programmer (the assembler will not do this for you) to
 - Make sure that all stack pushes and pops line up
 - All resources used by the subroutine (registers and memory) are properly saved before the subroutine uses them and restored when the subroutine returns
 - 3. Decide on a mechanism for **parameter passing** between the subroutines and the main program
- It is generally unnecessary to save everything, but it won't hurt to save all
 - Can eliminate saving all the registers once you have written the subroutine
 - It is a good idea to devise a consistent method of parameter passing
- To PUSH registers onto the stack on entry to the subroutine:
 - MOVEM <register list>,-(SP)
- To POP registers from the stack on exit from the subroutine:
 - MOVEM (SP)+,<register list>

Subroutines (3)

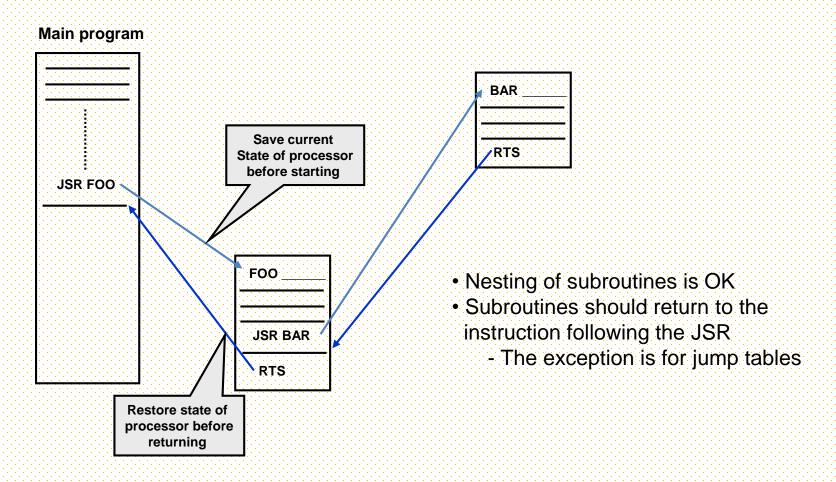

- Subroutines require careful stack management
 - Return address must be at the top of the stack just prior to the RTS

Tips on Subroutine Design

- Why need?
 - Same block of code can be reused many times
 - Alternative is to have all the code in-lined
 - Efficient coding
- Subroutine guidelines
 - Must have the stack established (SP has a default value)
 - 2. Locate the subroutines after the main program
 - 3. Each subroutine should have a comment block header listing
 - Subroutine name
 - What it does
 - Registers used and saved
 - Parameters input and returned
 - 4. First instruction line of the subroutine must have label with name
 - 5. Save registers used on entry
 - 6. Restore registers on exit
 - 7. Return to the point in program where subroutine was called from
 - Don't jump somewhere else. Always RTS
 - Nesting of subroutines is permitted

MOVEM <register list>, <ea> MOVEM <ea>, <register list>

- Transfers the contents of a group of registers specified by a list. The list of registers is defined as Ai-Aj/Dp-Dq.
- MOVEM operates only on words or longwords.
- Use assembler directive REG to bind a name to the list

MOVEM.L A0-A6/D0-D7, -(SP)

GROUP REG A0-A6/D0-D7
MOVEM.L GROUP, -(SP)

Pseudo Op Codes – Assembler Directives

REG - Register Range

- Allows a list of registers to be defined
- Format: <label> REG <register list>
- Registers may be specified as a single register, An or Dn, separated by slashes, i.e. A1/A5/A7/D1/D3
- Register ranges may also be specified, i.e., A0-A3
- Thus:

```
save_reg REG A0-A3/A5/D0-D7
```

- Refer to the MOVEM instruction in your programmer's manuals
- Will go over again for subroutine


MOVEM <register list>, <ea> MOVEM <ea>, <register list>

- Mostly used with pre-decrementing (registers to memory)
 and post-incrementing (memory to registers)
- Frequently used to save working registers on entering a subroutine and to retrieve them on exiting the subroutine
 MOVEM.L A0-A3/D0-D7, -(A7) *copies all working registers to stack
 MOVEM.L (A7)+, A0-A3/D0-D7 *Restore the registers

WHY do you need to save the registers to the stack when entering a subroutine??

- 68K Always writes to memory in the order of A7 to A0, D7 to D0
- 68K Always reads from memory in the order of D0 to D7, A0 to A7

E.g., D0 has \$30, D1 has \$20, A3 had \$1234

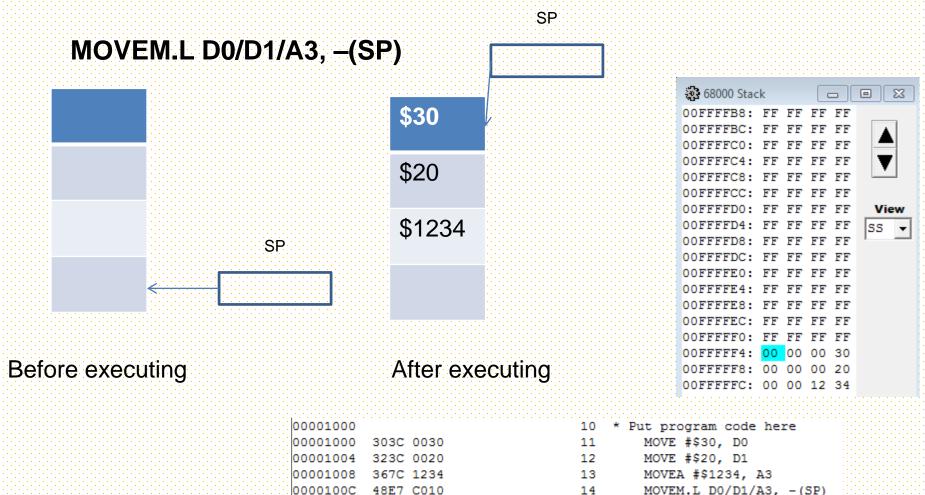

Subroutine Example (1)

Main

stack EQU \$7000 *sp initial

ORG \$400

start LEA stack, SP

•••

\$424 JSR do_test

\$ 426 MOVE.B ...

 $PC = $424 \rightarrow 426

SP= \$7000

A3= \$4500

D1 = \$0012

SP-4→SP PC→(SP) EA→PC

Subroutine


Subroutine do_test (\$480)

Description:

MOVEM.W (SP) + A3/D1

exit RTS

Memory

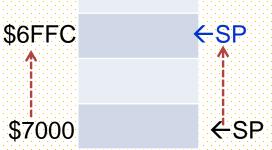

Subroutine Example (1)

0000

0426

←SP

Main stack EQU \$7000 *sp initial ORG \$400 LEA stack, SP start \$424 JSR do test \$ 426 **MOVE.B** ... $PC = $424 \rightarrow 426 SP= \$6FFC Next PC A3 = \$4500D1 = \$0012\$6FFC SP-4→SP

 $PC \rightarrow (SP)$

EA-PC

```
Subroutine
         ***************
  Subroutine do_test ($480)
  Description:
 do test MOVEM.W A3/D1, -(SP)
          MOVE . B . .
          MOVEM.W (SP)+, A3/D1
 exit
          RTS
Memory
```

Subroutine Example (1)

Main

stack EQU \$7000 *sp initial

•••

ORG \$400

start LEA stack, SP

\$424 JSR do_test

\$ 426 **MOVE** . B ...

PC = \$480

SP=\$6FFC

A3= \$4500

D1 = \$0012

SP-4→SP PC→(SP) EA→PC

Subroutine

Subroutine do_test (\$480)

Description:

MOVEM.W (SP)+, A3/D1

exit RTS

Memory

\$6FFC 0000 ←SP

Subroutine Example (2)

Main stack EQU \$7000 *sp initial ORG \$400 LEA stack, SP start \$424 JSR do test \$ 426 MOVE .B ... PC = \$480SP= \$6FFC A3= \$4500 A3 = freeD1= \$0012

Subroutine ************** Subroutine do_test (\$480) Description: do test MOVEM.W A3/D1, -(SP) MOVE.B... MOVEM.W (SP)+, A3/D1 RTS exi **Memory** 4500 0000 0426

Subroutine Example (2)

Main

```
stack EQU $7000 *sp initial
```

ORG \$400

start LEA stack, SP

...

\$424 JSR do_test

\$ 426 **MOVE.B** ...

PC = \$480

SP=\$6FFA

A3= free

D1= \$0012 D1= free

Subroutine

Subroutine do_test (\$480)

Description:

do_test_MOVEM.W A3/D1, -(SP)

MOVE.B...

MOVEM.W (SP)+, A3/D1

RTS

Memory

exi

\$6FF8 0012 **←**\$P

4500

0000 ←SI

Subroutine Example (2)

Main

```
stack
       EQU $7000 *sp initial
```

ORG \$400

LEA stack, SP start

```
$ 424
        JSR do test
$ 426
        MOVE .B ...
```

PC = \$480

SP= \$6FF8

A3= free

D1 = free

Subroutine

******************************* Subroutine do_test (\$480) Description: do test MOVEM.W A3/D1, -(SP) MOVE.B... MOVEM.W (SP)+, A3/D1 RTS exi **Memory**

←SP \$6FF8 0012

4500

0000

Subroutine Example (3)

Main

```
stack EQU $7000 *sp initial
```

ORG \$400

start LEA stack, SP

•••

\$424 JSR do_test

\$ 426 **MOVE.B** ...

SP= \$6FF8

A3= \$4500 A3= ...

D1= \$0012 D1=

Subroutine

Subroutine do_test (\$480)

Description:

do_test MOVEM.W A3/D1, -(SP)

MOVE.B....

MOVEM.W (SP)+, A3/D1
exit RTS

Memory

\$6FF8 0012 **SP**4500
\$6FFC 0000

Subroutine Example (3)

Main

stack EQU \$7000 *sp initial

ORG \$400

start LEA stack, SP

•••

\$424 JSR do_test

\$ 426 **MOVE.B** ...

SP= \$6FFC

A3= \$4500

D1= \$0012

Subroutine

Subroutine do_test (\$480)

Description:

MOVEM.W (SP)+, A3/D1
exit RTS

Memory

\$6FFC 0000

←SP

Subroutine Example (4)

Main

... etack

stack EQU \$7000 *sp initial

ORG \$400

start LEA stack, SP

•••

\$424 JSR do_test

\$ 426 **MOVE.B** ...

PC = \$426

SP=\$6FFC

A3= \$4500

D1= \$0012

Subroutine


Subroutine do_test (\$480)

Description:

MOVEM.W (SP)+, A3/D1

exit RTS

Memory

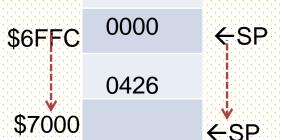

(SP)→PC

Subroutine Example (4)

Main

stack EQU \$7000 *sp initial

ORG \$400

start LEA stack, SP

•••

\$424 JSR do_test

\$ 426 **MOVE.B** ...

PC = \$426

SP= \$7000

A3 = \$4500

D1= \$0012

Subroutine

Subroutine do_test (\$480)

Description:


MOVEM.W (SP)+, A3/D1

exit RTS

Memory

(SP)→PC SP+4→SP

68000 System Control

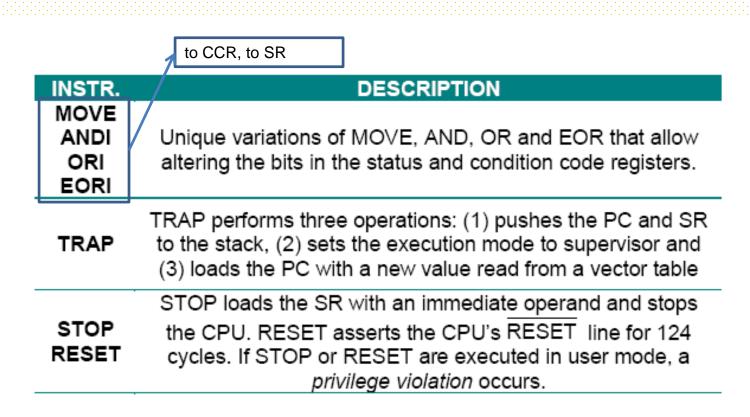

http://easy68k.com/easy68kexamples.htm

Summary of Data Transfer Instructions

LEA Load effective address

MOVE Move data

MOVEA Move address

MOVEM Move multiple registers

MOVEP Move peripheral data

MOVEQ Move quick

SWAP Swap register halves

Summary of Arithmetic Instructions

ADD Add binary

ADDA Add address

ADDI Add immediate

ADDQ Add quick

CLR Clear operand

CMP Compare

CMPI Compare immediate

DIVS Divide signed number

DIVU Divide unsigned

MULS Multiply signed number

NEG Negate

SUB Subtract binary

SUBA Subtract Address

SUBI Subtract immediate

SUBQ Subtract quick

EXT Extend sign

Summary of Logical and Shift Instructions

- AND Logical AND
- ANDI AND immediate
- OR Logical OR
- ORI OR immediate
- EOR Exclusive OR
- EORI Exclusive OR immediate
- NOT Logical complement
- ASL Arithmetic shift left
- ASR Arithmetic shift right
- LSL Logical shift left
- LSR Logical shift right
- ROL Rotate left
- ROR Rotate right

Summary of Bit Manipulation Instructions

BCHG Bit change

BCLR Bit clear

BSET Set bit

BTST Test bit

Summary of Program Control Instructions

Bcc Branch on state of conditional code (cc) flag

BRA Branch always

BSR Branch to subroutine

JMP Unconditional jump

JSR Jump to subroutine

RTR Return and restore

RTS Return from subroutine

Summary of Privileged Instructions

ANDI SR And immediate to Status Register

EORI SR Exclusive OR immediate to Status Register

MOVE SR Move to/from the Status Register

MOVE USP Move to/from USP

RESET Reset the processor

RTE Return from exception

STOP Stop the processor

CHK Check register

ILLEGAL Force an illegal instruction exception

TRAP Trap call

TRAPV Trap on overflow

ANDI CCR AND immediate to condition code register

ORI CCR OR immediate to condition code register

EORI CCR Exclusive OR immediate to CCR

MOVE CCR Move to/from CCR

NOP No operation - Do nothing