Memo: LightWork Memo 35 - Assemble Cone-Horn Radio Telescope

From: Glen Langston (glen.i.langston@gmail.com, glangsto@nsf.gov), Steve White

(swhite@nrao.edu), Sue Ann Heatherly (sheather@nrao.edu), Kait Chen, Micheal Munnelly,

Nana Nyarko, Sophie Robertson, Austin Webb,

DSPIRA collaboration, dispira-lessons@reply.github.com

Date: 2024 December 11

Assembling a Cone-Horn Radio Telescope Construction Guide enables your discovery Summary:

> of the Milky Way! Radio telescopes have a great variety of sizes and shapes. We've been working to devise the simplest (cheapest) telescope that has good performance, Our telescope is tuned to the most common element in the universe, Hydrogen. The cone is made from parts available on line, including aluminum flashing. The support pieces are

made of wood. The supplies needed and measurements are listed.

The 2024 Green Bank Summer students created videos showing how you can build a Radio Telescope. Radio telescopes come in all kinds of shapes and sizes, depending on your research goals. If you're hoping to quickly and easily find the arms of our Milky Way Galaxy, what would telescope be the most sensitive and cheapest? Answer: A cone-horn radio telescope!

Here, we present the construction guide for your radio telescope. With your telescope. vou will be able to see the Milky Way in just a second or two.

The key features of a radio telescope are size of the collecting area of the horn, the opening angle and the precise position of the feed probe, which collects the radio waves

1st, very

sensitive

amplifier.

Because radio

telescopes are usually left

and sends the signals to the

Watch Students build a Radio Telescope on YouTube



Fig 1: 2024 Green Bank Summer Student Kait with the completed telescope (left), Raspberry Pi telescope computer (middle), and display computer (right). With this system you can find the Milky Way spiral arms any time, day or night.

outside, the horn must be durable and water resistant. Most people want an inexpensive telescope they can build themselves. The telescope should be able to see the Milky Way in just a second or two. Summer student Kait showed us the complete telescope, in Fig. 1!

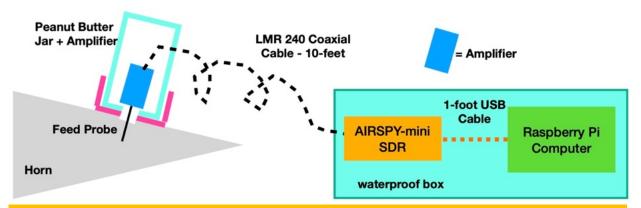


Fig 2: Diagram showing the connections between the radio frequency parts of our horn telescope. The signal flows from left to right, starting with the horn. The signal is maximum at the feed probe. The probe is directly attached to the amplifier. After amplifying, the signal goes through a coaxial cable to the SDR.

This memo describes the construction of the cone horn telescope, and elevation mount. This horn includes the first Low Noise Amplifier (LNA), a high-quality cable taking the signal to the Software Defined Radio (SDR). We prefer the AIRSPY-Mini SDR, which has the capacity to see all the hydrogen from our Milky Way Galaxy in a single observation.

Our telescope is a big funnel that collects the signals from our Milky Way to a location about 10.5 inches from the point of the horn. **Fig 2.** shows the signals flowing in and cause tiny voltages to oscillate on our silver wire, about 2-inches long. Our very sensitive LNA, a NooElec HI amplifier multiples the signal by about a 2000. From there, the signal is strong enough to pass along a high quality (LMR 240) coaxial cable to a Software Defined Radio (SDR). We strongly prefer the AIRSPY-mini SDR, which is easy to work with and can see all the frequencies of our Milky Way where hydrogen is visible. The AIRSPY-mini is connected to a low-cost, but capable, Raspberry Pi 400 computer. The computer powers the AIRSPY and the amplifier. You will need to borrow an HDMI monitor for testing.

Other <u>LightWork memos</u> describe the construction of the telescope base and another guiding the use of software for displaying the plot showing us the arms of the Milky Way.

National Science Foundation's (NSF's) Green Bank Observatory (GBO) and the West Virginia University Radio Astronomy Instrumentation Lab (WVURAIL) are leaders in bringing radio astronomy to the public. Though their guidance, they enable everyone to discover the immense size of our Milky Way Galaxy. The WVURAIL team of teachers and engineers enable everyone to find their place in the galaxy. The appendix of this memo has links to more background info and is a starting point for your research.

This document is based on an earlier design is described in <u>LightWork Memo 32</u>, *Gather a Pail of Milky Way*. In that document, we used pails to avoid cutting metal, but the resulting telescope was less sensitive that the super-sensitive cone-horn we present hear.

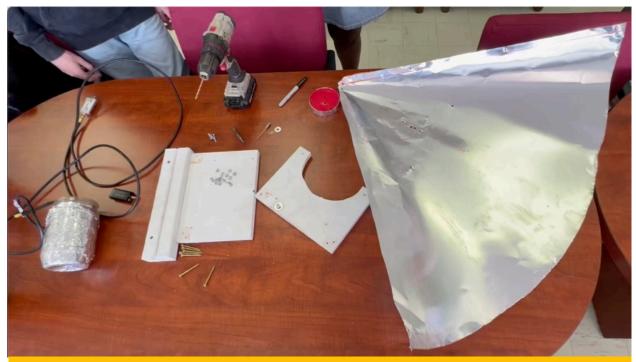


Fig 3: All the parts need to build the cone-horn radio telescope. The biggest piece is the aluminum flashing (right). The wooden parts of the mount are painted white (middle). The mount is held together with wood screws. At left are the LNA, metal tape covered peanut butter jar, high-quality coaxial cable (LMR 240) attached to the AIRSPY-Mini SDR. The feed probe and metal screws are at the top middle.

Tools

Only a few tools are needed to build the cone-horn radio telescope, if the wooden parts are precut. You will need scissors, a permanent marker, a battery powered electric drill and a short multi-purpose screwdriver, with both Philips and flat head ends. You will need a 5/16 wrench and a set of drill bits. We used a set of #6 machine screws for connecting the sides of the cone and attaching the peanut better jar.

You will need a coping hand saw to cut the front of the elevation mount to shape. You will need a 1/2-inch drill bit for a hole to the back of the mount. Use the template in the appendix to make drawing the shapes easier.

Parts

You will need two 14-inch-long balusters (which are 1.25-inches square). You will also need two 8x10-inch boards, ³/₄-inch thick. Paint these with primer, then decorate as you want. You need 12 two-inch-long wood screws and a set of #6 stainless machine screws, with lock-washers and nuts.



Fig 4: Draw ¼ of a circle on your flashing with a ruler (left). Screw reference point through the flashing and board holding the flashing. Draw an arc of circle the width of the flashing. Use a permanent marker. The flashing should be 20-inches or wider. Arc should go one inch further than a quarter-circle, so there will be an overlap when bolting the cone together. Use scissors to cut the flashing, creating a big semi-circle (right).

We've created an Amazon parts list with all the parts needed to build the telescope. The parts list includes some extra parts, so that more telescopes can be built a little cheaper than just one.

See: https://www.amazon.com/hz/wishlist/ls/2ISJ3MOI7V2ZY?ref_=wl_share The AIRSPY-mini is available online from https://www.amazon.com/hz/wishlist/ls/2ISJ3MOI7V2ZY?ref_=wl_share The AIRSPY-mini is available online from https://www.amazon.com/hz/wishlist/ls/2ISJ3MOI7V2ZY?ref_=wl_share The AIRSPY-mini is available online from https://www.amazon.com/hz/wishlist/ls/2ISJ3MOI7V2ZY?ref_=wl_share The AIRSPY.

Since your telescope will be left outside for years of observing, the amplifier must be put in a waterproof container. We've found that a large peanut butter jar is about perfect for this, as it seals nicely, is flexible and can protect the amplifier from interference by covering it with aluminum muffler tape. You need a roll of 2-inch-wide muffler tape. About a 15-foot roll is sufficient.

The horn will be attached to the wooden elevation mount with three stainless 1.25-inch-long wood screws with large pan-heads.



Fig 5: After cutting the semi-circle of flashing, the next step is drilling the holes for the feed probe and the screws holding the lid in place (left). The feed probe hole should be 10.5-inches from the corner of the semi-circle. After drilling the feed probe, drill two holes either side of the probe hole, spaced by 1.25-inches along the line. Then place the screws and washers in the mounting holes. Place the lid on the other side of the flashing and bolt in place (right).

Radio Frequency Parts

The radio parts of the telescope are very simple to assemble. These parts are available due to the fantastic efforts by many experts. The parts connections are shown in **Fig 2**. The AIRSPY-mini is about \$100, and the NooElec amplifier is \$45. The LMR 240 10-foot cable is \$17. The 1-foot USB cable is about \$8. Total is \$170. These parts are included in the <u>Amazon shopping list</u>.

The total cost of your first telescope is about \$500, if you use the shopping list.

Cone-Horn Assembly

Now we list all the steps of assembly. The figures showing these steps are noted:

- 1. Cut the cone from flashing. Use flashing 20-inches wider or larger. Make a large semi-circle, with a 1-inch overlap added. Bigger flashing makes a better telescope. We used 30-inch-wide flashing in the example. See Fig 4.
- 2. Draw a line about 12 inches from the corner of the semi-circle to the middle of the circle arc. See Fig 4.



Fig 6: Bolt inside of peanut butter jar lid to the cone (left). Next, insert the feed probe into the horn, where the signals will be received (right). In this picture we'd moved the feed probe position to 10.5-inchs, from the original placement.

- 3. Measure 10.5-inches from the corner along the line. This is the feed probe position. Use a 3/16 drill bit to drill holes at this point and 1.25-inches on either side along this line. See Fig 5, left.
- 4. Cover the peanut butter jar with aluminum muffler tape and drill a 3/16 inch hole in the middle. Put a temporary screw at this point and bolt in place, attaching to flashing. Now flip flashing and drill two more holes through the flashing, where you'd drilled before, through both flashing and jar lid. **See Fig 5, right.**
- 5. Put short machine screws and washers through these holes. See Fig 6, left.
- 6. Flip flashing again and bolt the peanut butter jar lid to the flashing.
- 7. Use a ¼-inch bit to re-drill the center hole in the lid, where the feed probe will go. See Fig 6, right. Great! You've finished getting ready to add the feed probe and amplifier!
- 8. Insert the feed probe through the center hole and add two washers to the amplifier before inserting it through the ½-inch hole. In the first version of the horn, the feed was separate from the amplifier. Because the feed would come loose, the signal would be weak. Soldering the feed directly into the amplifier made the telescope more reliable. See Fig 7.
- 9. The feed probe will stick through about 1.73-inches. Add a lock washer over the feed probe and bold the probe in place. Use the 5/16 wrench to bolt the probe tightly. Be careful not to fold the feed probe over, while completing the cone.
- 10. On the flashing, drill a 3/16-inch hole halfway between the corner and the edge of the circle. This hole should be on the overlap and be 1/2-inch from the edge.
- 11. Now form the flashing into a cone, taping the cone in place so that the cone overlap is 1-inch at the far edge.



Fig 7: The feed probe can be separate from the amplifier or directly soldered into the input of the amplifier (left). We found the telescope was more sensitive and reliable if the probe was soldered into the amplifier. Cut the feed probe to length, 1.73 inches. Add metal tape to make the transition from the flashing to probe smooth.

- 12. Tape the cone overlap in place and make the cone come to a point. Where you drilled the overlap before, drill through the other side of the cone.
- 13. Add washers on both in and outside of the cone and bolt In place. Remember the lock washer between washer and bolt.
- 14. Now tape along the cone overlap.
- 15. Drill a 3/16-inch hole at the cone edge and bolt in place, like you did for the middle bolt.
- 16. Cover the peanut butter jar with aluminum foil to protect the amplifier from interference.
- 17. Drill a 3/8-inch hole in the peanut jar about one inch down from the mouth of the jar.
- 18. Insert 10-inches of the coaxial cable into the jar, bending it in an arc to attach to the amplifier.
- 19. Tightly attach the cable to the amplifier, using your 5/16 wrench. The end should be tight, but be careful not to break the connection to the amplifier.
- 20. Attach the peanut butter jar to the lid. Add some aluminum tape to hold the jar together and cover the hole for the coaxial cable. See Fig. 8.
- 21. Next assemble the elevation mount, which will hold the horn for observations. The wooden parts are shown in **Fig. 9.**





Fig 8: Michael inserts to coaxial cable into a hole in the side of the peanut butter jar (left). The cable is bent into the bottom of the jar with coaxial cable end pointed toward the output end of the amplifier. After placing the jar on the lid, add aluminum tape to waterproof the connection between lid and jar (right).

- 22. Use the template in the appendix to cut the front and back pieces of the mount with the correct shapes. These pieces start out as 10x8 inches pieces of ¾-inch thick lumber.
- 23. Cut the template along the lines. And mark the pieces.
- 24. Cut the baluster into two 14-inch long pieces.
- 25. Now use eight 2-inch long pan head screws to assemble the elevation mount. First predrill holes. It's helpful for one person to hold the parts while the other person screws the pieces together. **See Fig. 9.**
- 26. Now use aluminum tape to cover up sharp edges on the horn. See Fig 10 left.
- 27. Attach the pointed end of the cone to the rear piece, putting the point of the cone through the ½-inch hole you drilled. See Fig. 10 right.
- 28. Now attach the cone to the front of the elevation mount. Drill from the side through the wooden part and also through the aluminum flashing. Do this on both sides of the front of the elevation mount. See Fig. 11.
- 29. From the inside of the cone use a short screwdriver to screw two short screws through the flashing to hold the front in place. See Fig 12 left.
- 30. The feed probe should be sticking straight out of the flashing. If it got bended over, you should be able to bend it back straight without problem. See Fig. 12 right.
- 31. Your corn-horn receiver is complete! See Fig. 12.
- 32. Other memos describe building the telescope base for attaching the horn. Another memo describes the computer system and its connections.
- 33. Attach the other end of the cable to the AIRSPY-mini. Add the 1-foot USB-extender cable to the AIRSPY.
- 34. One great thing about a radio telescope is that as soon as your done, you can take it right outside and find our Milky Way!





Fig 9: The wooden pieces of the horn elevation mount (left). The front piece is cut in circular shapes of the template in the appendix. The straight pieces are 14-inch long balusters. Nana and Austin assemble the elevation mount, screwing two 2-inch long wood screws through the front and back pieces, The finished mount is 15.5-inches long and 10 inches wide.





Fig 10: Nana, Austin and Glen secure the pointed end of the cone and protect ourselves from sharp edges of the flashing (left). Nana screws the point of the cone to the back of the elevation mount with a 1.25-inch-long wood screw (right).



Fig 11: Nana drills through the sides of the wooden front part of the elevation mount. After drilling, we attach the cone-horn to the elevation mount from the inside, with two 1.25-inch-long wood screws.



Fig 12: The assembled cone-horn opening, showing the feed probe in front of a short red ruler (left). The feed probe is 10.5-inches from the point of the cone. At right, we zoom in on the feed probe, which is the thin silver wire. The heads of the wood screws for attaching the cone to the mount are visible on the sides.

Conclusion

You've constructed your horn radio telescope and are ready to find the Milky Way. There is still lots to learn about science and astronomy. We hope that with this tool, you'll better understand our place in the Milky Way and the Milky Way's place in the universe.

After you've made your first experiments, which we will share with you, we hope you'll invent your own experiments and make your own discoveries!

Fig. 13 hints at the excitement the Green Bank Summer students had when they first discovered the Milky Way for themselves!



Fig 13: Green Bank 2024 Summer Students jump for joy after completing their radio Telescope!. We used our telescope to discover the Milky Way and enjoy a beautiful evening under the stars.

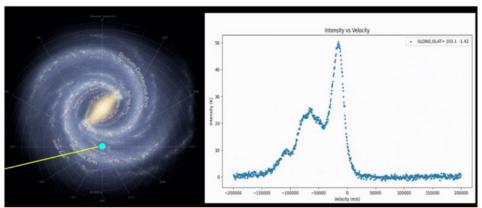


Fig 14: Maine East High School students scanned our Galaxy with their telescope. At left is a line showing where they pointed their telescope in Milky Way. At right is a plot of what they saw, intensity versus the Doppler Shift motion of hydrogen in our galaxy. Each of the peaks of in the plot corresponds to a spiral arm of the Milky Way, each moving at incredibly high speeds.

Note: What will you see with your telescope?

You'll see, with some imagination, the moving spiral arms of our Milky Way.

Fig 14. shows an example image taken with their telescope, at high school students near Chicago.

Appendix: Template for Cutting the Elevation Mount

The template is available online at the bottom of the page of this

link: LightWork Memos

Align with the middle top of the front and rear parts of the elevation mount. 3 7/8 inches 9.8 cm

Template for mount holding the cone horn. Any horn taller than 18-inches, will fit.

The Cone is cut from 1/4 of a large circle.

This template is for an elevation mount 15.5 inches long, including the thickness of the front and back pieces. Each are made from a 8x10 inch board, 3/4 inch thick. The balusters are 14 inches long.

1/2 inch For each arc, with radius R, the resultant cone radius, r = R/4. Since the mount length of 15.5 inches, the radius, r, of this circle is 15.5/4 = 3.7/8 = 3.875 inches.

At the rear of the mount, the cone length is .75 inches so r = (3/4)/4 = 3/16. Round up to 1/2 inch diameter.

Offset from the edge is 1/2in. The 1/2in wide hole will be just inside the edge.

The Feed probe is inserted at R, where the circumference of the cone opening is 2 lambda.

R = 26.9 cm = 10 5/8 inches.